

<b>Document Title</b>	Specification of
	Communication
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
<b>Document Identification No</b>	15
<b>Document Status</b>	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R19-11

	Document Change History			
Date	Release	Changed by	Change Description	
2019-11-28	R19-11	AUTOSAR Release Management	<ul> <li>MetaData handling above RTE         (CONC_650)</li> <li>BSW Multicore Distribution as draft         (CONC_643)</li> <li>minor corrections / clarifications /         editorial changes</li> <li>Changed Document Status from Final to published</li> </ul>	
2018-10-31	4.4.0	AUTOSAR Release Management	minor corrections / clarifications /     editorial changes; For details please     refer to the ChangeDocumentation	
2017-12-08	4.3.1	AUTOSAR Release Management	<ul> <li>reverted I-PDU group control APIs to AUTOSAR Release 3 style</li> <li>minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>	
2016-11-30	4.3.0	AUTOSAR Release Management	<ul> <li>updated TX-confirmation handling</li> <li>revised Signal Based Gateway</li> <li>Com-Stack API harmonization</li> <li>minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>	
2015-07-31	4.2.2	AUTOSAR Release Management	minor corrections / clarifications /     editorial changes; For details please     refer to the ChangeDocumentation	
2014-10-31	4.2.1	AUTOSAR Release Management	<ul> <li>added support for Sender/ Receiver Serialization</li> <li>updated to support CAN FD</li> <li>minor corrections</li> </ul>	



	Document Change History				
Date	Release	Changed by	Change Description		
2014-03-31	4.1.3	AUTOSAR Release Management	<ul> <li>Several correction, clarifications and editional changes</li> <li>No major functional changes or im- provements</li> </ul>		
2013-10-31	4.1.2	AUTOSAR Release Management	<ul> <li>Removed TP-restriction for dynamic length I-PDUs</li> <li>Added parameter to globally enable or disable the cancellation support</li> <li>Many bug fixes, clarifications and harmonization with the other COM-Stack modules</li> <li>Editorial changes</li> <li>Removed chapter(s) on change documentation</li> </ul>		
2013-03-15	4.1.1	AUTOSAR Administration	<ul> <li>Reworked according to the new SWS BSW General</li> <li>added support for postbuild loadable configuration</li> <li>harmonization of COM-Stack APIs (TP-APIs &amp; callouts)</li> <li>many corrections and clarifications</li> </ul>		
2011-12-22	4.0.3	AUTOSAR Administration	<ul> <li>Several minor changes and bug-fixes</li> <li>Clarification and minor extensions of transmission mode usage and activation</li> <li>Clarification and extension of transfer properties</li> <li>Added retry mechanism for failed transmission requests</li> </ul>		
2010-09-30	3.1.5	AUTOSAR Administration	corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation		



	Document Change History				
Date	Release	Changed by	Change Description		
2010-02-02	3.1.4	AUTOSAR Administration	<ul> <li>Added support for large data types</li> <li>Added support for communication protection</li> <li>Revised mode management interface</li> <li>Many clarifications and corrections based on SWS improvement, validation and conformance test activities</li> <li>Legal disclaimer revised</li> </ul>		
2008-08-13	3.1.1	AUTOSAR Administration	Legal disclaimer revised		
2008-02-01	3.0.2	AUTOSAR Administration	Removed Figure 19, which was included twice		
2007-12-21	3.0.1	AUTOSAR Administration	<ul> <li>Removal of Internal Communication feature</li> <li>Revision of AUTOSAR COM MOD-ULE configuration</li> <li>Revision of Signal Gateway configuration</li> <li>Enhanced maximal</li> <li>I-PDU length for FlexRay</li> <li>Harmonization of callback-interface to RTE</li> <li>Clarifications and bug fixes</li> <li>Document meta information extended</li> <li>Small layout adaptations made</li> </ul>		
2007-01-24	2.1.15	AUTOSAR Administration	<ul> <li>Clarifications of requirements throughout the whole document.         Chapter 11 contains a detailed list of the made modifications. No new major features were added since release 2.0.     </li> <li>"Advice for users" revised</li> <li>"Revision Information" added</li> <li>Legal disclaimer revised</li> </ul>		



	Document Change History			
Date	Release	Changed by	Change Description	
2006-05-16	2.0	AUTOSAR Administration	<ul> <li>Document structure adapted to common Release 2.0 SWS Template.</li> <li>Integration of signal gateway</li> <li>Major updates in configuration, error handling, filtering, transmission mode switches, callouts, updatebits, deadline monitoring and initialization</li> </ul>	
2005-05-31	1.0	AUTOSAR Administration	Initial release	



#### **Disclaimer**

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.



# **Table of Contents**

1	Intro	oduction and Functional Overview	10
2	Acro	onyms, Abbreviations and Definitions	11
	2.1 2.2	Acronyms and Abbreviations  Definitions	
3	Rela	ated Documentation	13
	3.1 3.2 3.3	Deliverables of AUTOSAR Related Standards and Norms Related Specification	14
4	Con	straints and Assumptions	15
	4.1 4.2	Limitations	
5	Dep	endencies to Other Modules	16
	5.1 5.2	PDU RouterRuntime Environment (RTE)	
6	Req	uirements Traceability	18
7	Fun	ctional Specification	28
	7.1 7.2	Introduction	
	7.2.	1 AUTOSAR COM basis	28
	7.2.	<b>5</b>	
	7.2. 7.2.		
	7.2.	•	
	7.3	Normal Operation	
	7.3.	- · · · · - <b>I</b> · · · · · ·	
	7.3.		
	7.3.		
	7.3. 7.3.	- <b>3</b>	_
	7.3.	<u> </u>	
	7.3.	3	
	7.4	Signal Groups - Complex Data Types	
	7.4.		59
	7.4.		
	7.4.	· ·	
	7.4.		
	7.4. 7.4.	5 1	
	7.4.	Large Data Types	
	7.5.		64
	7.5.		
	7.6	Dynamic Length Signals	
	7.6.	,	
	7.6.	Reception of Dynamic Length Signals/ I-PDUs	67



	7.7		ata Handling	
	7.8		ce between AUTOSAR COM Module and the PDU Router	
	7.9	Update	-Bits	68
	7.9.		ender Side	
	7.9.2		eceiver Side	
			equence Control	
	7.10		ender Side	
	7.10	_	eceiver Side	
			unication Protection	
	7.11		ender Side	
	7.11		eceiver Side	
	7.11		onstraints	
			Gateway	
	7.12		ealing with Signals	
	7.12	.2 De	ealing with Group Signals	/5
	7.12		outing of Out-Timed Signals and Signal Groups	
	7.12 7.12		andling of Update-Bits	
			ecoupling Signal Gateway	
	7.13			
	7.13	_	evelopment Errors untime Errors	
	7.13		ansient Faults	
	7.13		oduction Errors	
	7.13		tended Production Errors	
	7.14		otification	
	7.15		andling	
	_		SAR COM Module's Interaction Model	
	7.17		re Distribution	
8	API	•	cation	
	8.1	•	ed Types	
		<i>7</i> I	efinitions	
			om_StatusType	
	8.2.2		om_SignalIdType	
	8.2.		om_SignalGroupIdType	
	8.2.4		om_lpduGroupIdType	
	8.2.		om_ConfigType	
			on Definitions	
	8.3.		eturn Codes	
	8.3.		art-Up and Control Services	
	8.3.		ommunication Services	
	8.4		ck Functions and Notifications	
	8.4.		om_TriggerTransmit	
	8.4.2		om_RxIndication	
	8.4.3 8.4.4		om_TpRxIndication om TxConfirmation	
	8.4.		om_TxConfirmation	
	8.4.0 8.4.0		· ·	
	8.4.		om_StartOfReceptionom_CopyRxData	
	8.4.8		om CopyTxData	
	0.4.0	, ()	//// Oupy   ADala	110



	8.5	Sch	eduled Functions	110
	8.5.		Com_MainFunctionRx	
	8.5.2		Com MainFunctionTx	
	8.5.	_	Com_MainFunctionRouteSignals	
			ected Interfaces	
	8.6 8.6.			
	8.6.2		Mandatory Interfaces  Optional Interfaces	
	8.6.		Configurable Interfaces	
9	Seq		ce Diagrams	
	9.1		rface between the AUTOSAR COM Module and the PDU Router	131
	9.2		firmation Handling between the PDU Router, the AUTOSAR COM lule and the RTE	122
	0.2			133
	9.3		cation Handling between the PDU Router, the AUTOSAR COM	121
			lule and the RTE	
1(	) Con	figur	ation Specification	135
	10.1	Con	tainers and Configuration Parameters	135
	10.1		Configuration of the AUTOSAR COM Module	136
	10.1		Com	
	10.1		ComGeneral	
	10.1		ComConfig	
	10.1		ComMainFunctionRx	
	10.1	_	ComMainFunctionTx	
	10.1	_	ComMainFunctionRouteSignals	
	10.1		ComFilter	
	10.1		ComlPdu	
	10.1	-	ComIPduCounter	
	10.1		ComIPduReplication	
	10.1		ComTxIPdu	
	10.1		ComIPduGroup	
	10.1		ComSignal	
	10.1		ComSignalGroup	
	10.1	_	ComGroupSignal	
	10.1		ComTxMode	
	10.1		ComTxModeTrue	
	10.1		ComTxModeFalse	
	10.1	_	ComGwMapping	
	10.1		ComGwSource	
	10.1		ComGwSourceDescription	
	10.1		ComGwDestination	
	10.1		ComGwDestinationDescription	
	10.1		ComGwSignal	
			figuration Rules	
	10.2		General Rules	
	10.2		Signal Configuration	
	10.2		Signal Group Configuration	
	10.2		Transmission Mode Configuration	
	10.2		Signal Gateway Configuration	
	10.2		Filter Configuration	
	10.2		Post Build Configuration	
	10.2		1 Oot Dana Oornigaration	





	10.2.8	Dynamic Length I-PDUs	205
		Replicated I-PDUs	
		İ-PDU group	
11	Not App	licable Requirements	206
12	Appendi	x A	207



## 1 Introduction and Functional Overview

This specification is the AUTOSAR COM module Software Specification. It is based on the AUTOSAR COM SRS [7]. It specifies how the requirements of the AUTOSAR COM SRS shall be realized. That means that the functionality and the API of the AUTOSAR COM module are described in this document.

Within the AUTOSAR Layered Architecture the AUTOSAR COM module is placed between RTE and the PDU Router, see [1].

The AUTOSAR COM module is derived from [17]. For details, see Chapter 7.2.1. The AUTOSAR COM module provides signal gateway functionality. For details, see Chapter 7.2.5.

#### Main Features:

- Provision of signal oriented data interface for the RTE
- Packing of AUTOSAR signals to I-PDUs to be transmitted
- Unpacking of received I-PDUs and provision of received signals to RTE
- Routing of signals from received I-PDUs into I-PDUs to become transmitted
- Routing of signal groups from received I-PDUs into I-PDUs to become transmitted
- Communication transmission control (start/ stop of I-PDU groups)
- Replications of send requests
- Guarantee of minimum distances between transmit I-PDUs
- Monitoring of receive signals (signals timeout)
- Filter mechanisms for incoming signals
- Different notification mechanisms
- Provision of init values and update indications
- Byte order conversion
- Sign extension
- Support of two different transmission modes per I-PDU
- Signal based gateway
- Support of large and dynamic length data types
- Support of I-PDU counters and I-PDU replication



# 2 Acronyms, Abbreviations and Definitions

# 2.1 Acronyms and Abbreviations

Acronym:	Description:
AUTOSAR COM	The AUTOSAR COM module is derived from [17]. For details, see Chapter
	7.2.1.
DM	Deadline Monitoring, for details see Chapter 7.3.6
I-PDU	Interaction Layer Protocol Data Unit
	An I-PDU carries signals. It is defined in [17].
L-PDU	Data Link Layer Protocol Data Unit. In AUTOSAR, the Data Link Layer is
	equivalent to the Communication Hardware Abstraction and Microcontroller
	Abstraction Layer.
MDT	A detailed description of the Minimum Delay Timer (MDT) can be found in
	[17]. See also Chapter 7.3.5.5.
PDU Router	The PDU Router is a module transferring I-PDUs from one module to anoth-
	er module. The PDU Router can be utilized for gateway operations and for
	internal routing purposes.
SDU	Service Data Unit
	For a description see [1] Chapter 4.
TM	Transmission Mode
TMC	Transmission Mode Condition, see Chapter 7.3.3.2
TMS	Transmission Mode Selector, see Chapter 7.3.3.2

# 2.2 Definitions

Term:	Description:
Confirmation	With a Confirmation, the PDU Router reports that a request by the AUTOSAR COM module has been completed successfully. It is a reaction to a request of COM. E.g. when a PDU has been successfully transmitted.
Data Invalid Value	Value sent by the AUTOSAR COM module to indicate that the sender side AUTOSAR Software Component is not able to provide a valid value.
Dynamic Length Sig- nal	A dynamic length signal is a signal which length can vary at run-time.
Dynamic Length I-PDU	A dynamic length I-PDU is an I-PDU containing a dynamic length signal. It length varies depending on the length of the included dynamic length signal.
Group signal	A group signal is a signal that is contained in a signal group.
Indication	An Indication is asynchronous information from PDU Router to COM, e.g. to acknowledge that something has been received.
Init Value	I-PDUs and signals are set to the Init Value by the AUTOSAR COM module after start-up. This value is used until it is overwritten.
I-PDU group	An I-PDU Group is an arbitrary collection of I-PDUs of the same direction (i.e. send or receive) in the COM module.
Inter-ECU – communication	Communication between two or more ECUs for example via a CAN network
Intra-ECU – communication	Communication between Software components that reside on the same ECU
Large Signal	A large signal is a signal that is too large to fit into a single L-PDU of the underlying communication protocol.
Large I-PDU	Large I-PDUs are I-Signal-I-PDUs which do not fit into a single L-PDU of the underlying communication protocol. Large I-PDUs will be handled like other



Term:	Description:
	I-PDUs by COM, but are transmitted/received via the TP API.  Please note that large I-PDUs can also be handled in a more efficient way by LargeDataCOM if they contain just one signal, or if the signals can be (de)serialized by the RTE. But if the signals have to be treated separately or have to be routed, the large I-PDUs have to be handled by COM.
Message	[17] uses always the synonym <i>message</i> . In AUTOSAR, <i>message</i> is replaced by <i>signal</i> but with the same meaning.
Metadata	For some I-PDUs, e.g. J1939 I-PDUs, the payload is extended with additional metadata containing for example the CAN-ID.
Notification	Information by the AUTOSAR COM module to RTE, e.g. when new data is available, an error occurred.
Signal	A signal in the AUTOSAR COM module's context is equal to a message in [17]; see also [7].
Signal group	In AUTOSAR, so called complex data types are used. Inside a complex data type, there are one or more data elements (primitive data types), like in a C struct. The data consistency of such complex data types must be ensured.  The RTE decomposes the complex data type in single signals and sends them to the AUTOSAR COM module. As these signals altogether need to be treated consistently, they are called <i>signal group</i> .  See also [7].
Update-bit	A mechanism supported by the AUTOSAR COM module with that the receiver of a signal/ signal group could identify whether the sender has updated the data in this signal/ signal group before sending. See Chapter 7.9.



### 3 Related Documentation

#### 3.1 Deliverables of AUTOSAR

- [1] AUTOSAR Layered Architecture AUTOSAR\_EXP\_LayeredSoftwareArchitecture.pdf
- [2] Specification of Communication Stack Types AUTOSAR\_SWS\_CommunicationStackTypes.pdf
- [3] General Requirements on Basic Software Modules AUTOSAR\_SRS\_BSWGeneral.pdf
- [4] Basic Software UML Model
  AUTOSAR\_MOD\_BSWUMLModel.eap
- [5] Specification of Standard Types AUTOSAR\_SWS\_StandardTypes.pdf
- [6] Specification of the Virtual Functional Bus AUTOSAR\_EXP\_VFB.pdf
- [7] Requirements on Communication AUTOSAR\_SRS\_COM.pdf
- [8] Software Component Template
  AUTOSAR\_TPS\_SoftwareComponentTemplate.pdf
- [9] Requirements on Gateway AUTOSAR\_SRS\_Gateway.pdf
- [10] Specification of PDU Router AUTOSAR\_SWS\_PDURouter.pdf
- [11] Specification of Operating System AUTOSAR\_SWS\_OS.pdf
- [12] System Template AUTOSAR\_TPS\_SystemTemplate.pdf
- [13] Specification of RTE Software AUTOSAR\_SWS\_RTE.pdf
- [14] Specification of ECU Configuration AUTOSAR\_TPS\_ECUConfiguration.pdf



- [15] Specification of Communication Manager AUTOSAR\_SWS\_COMManager.pdf
- [16] AUTOSAR Basic Software Module Description Template AUTOSAR\_TPS\_BSWModuleDescriptionTemplate.pdf
- [19] Specification of CAN Transport Layer AUTOSAR\_SWS\_CANTransportLayer.pdf
- [20] Specification of FlexRay Transport Layer AUTOSAR\_SWS\_FlexRayTransportLayer.pdf
- [21] List of Basic Software Modules, AUTOSAR\_TR\_BSWModuleList.pdf
- [22] Generic Structure Template
  AUTOSAR\_TPS\_GenericStructureTemplate.pdf
- [23] General Specification of Basic Software Modules AUTOSAR\_SWS\_BSWGeneral.pdf

#### 3.2 Related Standards and Norms

- [17] ISO 17356-4:2005 Road vehicles -- Open interface for embedded automotive applications -- Part 4: OSEK/VDX Communication (COM)
- [18] ISO 17356-6:2006 Road vehicles -- Open interface for embedded automotive applications -- Part 6: OSEK/VDX Implementation Language (OIL)

# 3.3 Related Specification

AUTOSAR provides a General Specification on Basic Software modules [23] (SWS BSW General), which is also valid for COM.

Thus, the specification SWS BSW General shall be considered as additional and required specification for COM.



# 4 Constraints and Assumptions

#### 4.1 Limitations

The AUTOSAR COM module is based on [17]. Nevertheless not all features of [17] are included and some features are different. See SWS\_Com\_00013 for a list of not included features.

# 4.2 Applicability to Car Domains

No restrictions.



# 5 Dependencies to Other Modules

This chapter lists all the features from other modules that are used by the AUTOSAR COM module and functionalities that are provided by the AUTOSAR COM module to other modules. For the placement of the AUTOSAR COM module in the communication stack, see Figure 1.

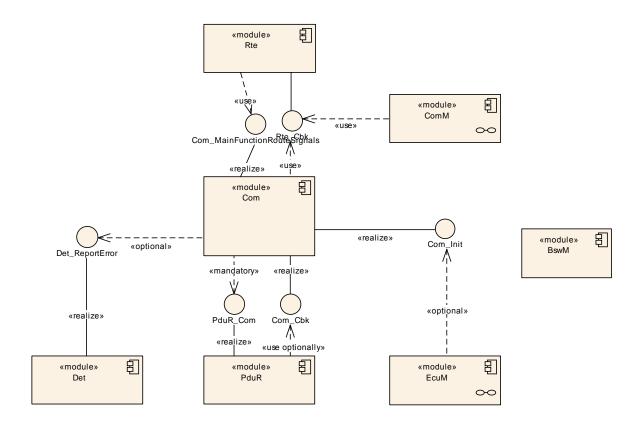


Figure 1: AUTOSAR COM module's context view

#### 5.1 PDU Router

The AUTOSAR COM module uses the union of both sets of PDU Router's upper layer module APIs. That is the APIs for upper layer modules that uses TP and the APIs for upper layer modules that do not use TP. This is necessary since the AUTOSAR COM module transports I-PDUs either unfragmented via simple L-PDUs or fragmented via TP.

The following summarizes the functionality of the AUTOSAR COM module needs from the underlying layer PDU Router:



- Indication of incoming I-PDUs
- Sending interface for outgoing I-PDUs including the confirmation if an I-PDU has been sent by the communication controller
- Trigger interface to enable the PDU router to cause a transmission from the AUTOSAR COM module
- Buffer handling for TP communication

Chapter 7.5 and Chapter 9.1 include a detailed description of the interfaces to the PDU Router. For further information, see [10].

# **5.2 Runtime Environment (RTE)**

The RTE uses the capabilities of the AUTOSAR COM module to send and receive signals. In AUTOSAR, the RTE is the higher layer above the AUTOSAR COM module. For further information, see [13].



# 6 Requirements Traceability

The following table references the requirements specified in [3], [7], [17] and [9] and links to the fulfillment of these. Requirements that are not fulfilled by this document are linked to SWS\_Com\_00999.

Requirement	Description	Satisfied by
SRS_BSW_00003	All software modules shall provide version and identification information	SWS_Com_00426
SRS_BSW_00005	Modules of the μC Abstraction Layer (MCAL) may not have hard coded horizontal interfaces	SWS_Com_00999
SRS_BSW_00006	The source code of software modules above the $\mu$ C Abstraction Layer (MCAL) shall not be processor and compiler dependent.	SWS_Com_00999
SRS_BSW_00009	All Basic SW Modules shall be documented according to a common standard.	SWS_Com_00999
SRS_BSW_00010	The memory consumption of all Basic SW Modules shall be documented for a defined configuration for all supported platforms.	SWS_Com_00999
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_Com_00015, SWS_Com_00059, SWS_Com_00098, SWS_Com_00117, SWS_Com_00128, SWS_Com_00217, SWS_Com_00328, SWS_Com_00432, SWS_Com_00484, SWS_Com_00850
SRS_BSW_00161	The AUTOSAR Basic Software shall provide a microcontroller abstraction layer which provides a standardized interface to higher software layers	SWS_Com_00999
SRS_BSW_00162	The AUTOSAR Basic Soft- ware shall provide a hard- ware abstraction layer	SWS_Com_00999
SRS_BSW_00164	The Implementation of interrupt service routines shall be done by the Operating System, complex drivers or modules	SWS_Com_00999
SRS_BSW_00167	All AUTOSAR Basic Software Modules shall provide configuration rules and constraints to enable plausibility checks	SWS_Com_00497



SRS_BSW_00168	SW components shall be tested by a function defined in a common API in the Basis-SW	SWS_Com_00999
SRS_BSW_00170	The AUTOSAR SW Components shall provide information about their dependency from faults, signal qualities, driver demands	SWS_Com_00999
SRS_BSW_00171	Optional functionality of a Basic-SW component that is not required in the ECU shall be configurable at precompile-time	SWS_Com_00999
SRS_BSW_00301	All AUTOSAR Basic Soft- ware Modules shall only import the necessary infor- mation	SWS_Com_00609
SRS_BSW_00302	All AUTOSAR Basic Software Modules shall only export information needed by other modules	SWS_Com_00999
SRS_BSW_00306	AUTOSAR Basic Software Modules shall be compiler and platform independent	SWS_Com_00999
SRS_BSW_00307	Global variables naming convention	SWS_Com_00999
SRS_BSW_00308	AUTOSAR Basic Software Modules shall not define global data in their header files, but in the C file	SWS_Com_00999
SRS_BSW_00309	All AUTOSAR Basic Soft- ware Modules shall indicate all global data with read-only purposes by explicitly assig- ning the const keyword	SWS_Com_00999
SRS_BSW_00312	Shared code shall be re- entrant	SWS_Com_00321
SRS_BSW_00314	All internal driver modules shall separate the interrupt frame definition from the service routine	SWS_Com_00999
SRS_BSW_00321	The version numbers of AUTOSAR Basic Software Modules shall be enumerated according specific rules	SWS_Com_00999
SRS_BSW_00325	The runtime of interrupt service routines and functions that are running in interrupt context shall be kept short	SWS_Com_00999
SRS_BSW_00327	Error values naming convention	SWS_Com_00442



SRS_BSW_00328	All AUTOSAR Basic Soft- ware Modules shall avoid the duplication of code	SWS_Com_00999
SRS_BSW_00331	All Basic Software Modules shall strictly separate error and status information	SWS_Com_00194
SRS_BSW_00333	For each callback function it shall be specified if it is called from interrupt context or not	SWS_Com_00999
SRS_BSW_00334	All Basic Software Modules shall provide an XML file that contains the meta data	SWS_Com_00999
SRS_BSW_00335	Status values naming convention	SWS_Com_00819
SRS_BSW_00336	Basic SW module shall be able to shutdown	SWS_Com_00129, SWS_Com_00130
SRS_BSW_00337	Classification of develop- ment errors	SWS_Com_00803, SWS_Com_00804
SRS_BSW_00341	Module documentation shall contains all needed informations	SWS_Com_00999
SRS_BSW_00344	BSW Modules shall support link-time configuration	SWS_Com_00432
SRS_BSW_00347	A Naming seperation of different instances of BSW drivers shall be in place	SWS_Com_00999
SRS_BSW_00348	All AUTOSAR standard types and constants shall be placed and organized in a standard type header file	SWS_Com_00865
SRS_BSW_00353	All integer type definitions of target and compiler specific scope shall be placed and organized in a single type header	SWS_Com_00999
SRS_BSW_00358	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	SWS_Com_00432
SRS_BSW_00359	All AUTOSAR Basic Soft- ware Modules callback functions shall avoid return types other than void if pos- sible	SWS_Com_00468, SWS_Com_00491, SWS_Com_00536, SWS_Com_00554, SWS_Com_00555, SWS_Com_00556
SRS_BSW_00360	AUTOSAR Basic Software Modules callback functions are allowed to have parame- ters	SWS_Com_00468, SWS_Com_00491, SWS_Com_00536, SWS_Com_00554, SWS_Com_00555, SWS_Com_00556
SRS_BSW_00361	All mappings of not standar- dized keywords of compiler specific scope shall be	SWS_Com_00999



	placed and organized in a compiler specific type and keyword header	
SRS_BSW_00369	All AUTOSAR Basic Software Modules shall not return specific development error codes via the API	SWS_Com_00442
SRS_BSW_00375	Basic Software Modules shall report wake-up reasons	SWS_Com_00999
SRS_BSW_00377	A Basic Software Module can return a module specific types	SWS_Com_00865
SRS_BSW_00378	AUTOSAR shall provide a boolean type	SWS_Com_00999
SRS_BSW_00383	The Basic Software Module specifications shall specify which other configuration files from other modules they use at least in the description	SWS_Com_00999
SRS_BSW_00384	The Basic Software Module specifications shall specify at least in the description which other modules they require	SWS_Com_00669, SWS_Com_00670
SRS_BSW_00385	List possible error notifications	SWS_Com_00442
SRS_BSW_00386	The BSW shall specify the configuration for detecting an error	SWS_Com_00999
SRS_BSW_00404	BSW Modules shall support post-build configuration	SWS_Com_00432, SWS_Com_00825
SRS_BSW_00405	BSW Modules shall support multiple configuration sets	SWS_Com_00432
SRS_BSW_00407	Each BSW module shall provide a function to read out the version information of a dedicated module implementation	SWS_Com_00426
SRS_BSW_00409	All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration	SWS_Com_00999
SRS_BSW_00410	Compiler switches shall have defined values	SWS_Com_00999
SRS_BSW_00413	An index-based accessing of the instances of BSW mo- dules shall be done	SWS_Com_00999
SRS_BSW_00414	Init functions shall have a pointer to a configuration structure as single parame-	SWS_Com_00432, SWS_Com_00805, SWS_Com_00837



	T	
	ter	
SRS_BSW_00416	The sequence of modules to be initialized shall be configurable	SWS_Com_00999
SRS_BSW_00417	Software which is not part of the SW-C shall report error events only after the DEM is fully operational.	SWS_Com_00999
SRS_BSW_00423	BSW modules with AUTO- SAR interfaces shall be describable with the means of the SW-C Template	SWS_Com_00999
SRS_BSW_00424	BSW module main processing functions shall not be allowed to enter a wait state	SWS_Com_00999
SRS_BSW_00425	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_Com_00359, SWS_Com_00398, SWS_Com_00399, SWS_Com_00400, SWS_Com_00664, SWS_Com_00665, SWS_Com_00666
SRS_BSW_00426	BSW Modules shall ensure data consistency of data which is shared between BSW modules	SWS_Com_00999
SRS_BSW_00427	ISR functions shall be defi- ned and documented in the BSW module description template	SWS_Com_00999
SRS_BSW_00428	A BSW module shall state if its main processing func- tion(s) has to be executed in a specific order or sequence	SWS_Com_00999
SRS_BSW_00429	Access to OS is restricted	SWS_Com_00999
SRS_BSW_00432	Modules should have sepa- rate main processing func- tions for read/receive and write/transmit data path	SWS_Com_00359, SWS_Com_00398, SWS_Com_00399, SWS_Com_00400, SWS_Com_00466
SRS_BSW_00433	Main processing functions are only allowed to be called from task bodies provided by the BSW Scheduler	SWS_Com_00999
SRS_BSW_00437	Memory mapping shall provide the possibility to define RAM segments which are not to be initialized during startup	SWS_Com_00999
SRS_BSW_00441	Naming convention for type, macro and function	SWS_Com_00820, SWS_Com_00821, SWS_Com_00822, SWS_Com_00825, SWS_Com_00865
SRS_BSW_00452	Classification of runtime errors	SWS_Com_00864
SRS_Com_00177	AUTOSAR COM and	SWS_Com_00853, SWS_Com_00856



	LargeDataCOM shall support multiple configuration stages	
SRS_Com_00192	The AUTOSAR COM modu- le shall support enabling and disabling reception deadline monitoring of I-PDU groups	SWS_Com_00224, SWS_Com_00225, SWS_Com_00486, SWS_Com_00534, SWS_Com_00772, SWS_Com_91003, SWS_Com_91004
SRS_Com_00218	The AUTOSAR COM module shall support starting and stopping multiple I-PDU groups during runtime	SWS_Com_00114, SWS_Com_00115, SWS_Com_00222, SWS_Com_00223, SWS_Com_00228, SWS_Com_00229, SWS_Com_00334, SWS_Com_00444, SWS_Com_00479, SWS_Com_00684, SWS_Com_00685, SWS_Com_00713, SWS_Com_00714, SWS_Com_00777, SWS_Com_00771, SWS_Com_00771, SWS_Com_00782, SWS_Com_00783, SWS_Com_00787, SWS_Com_00840, SWS_Com_00822, SWS_Com_00840, SWS_Com_00871, SWS_Com_00877, SWS_Com_91001, SWS_Com_91002
SRS_Com_02030	The AUTOSAR COM module shall support to detect if a received signal or signal group was updated by the sender	SWS_Com_00055, SWS_Com_00059, SWS_Com_00061, SWS_Com_00062, SWS_Com_00067, SWS_Com_00117, SWS_Com_00310, SWS_Com_00324, SWS_Com_00577, SWS_Com_00578, SWS_Com_00702, SWS_Com_00703, SWS_Com_00704, SWS_Com_00705, SWS_Com_00706, SWS_Com_00801, SWS_Com_00802
SRS_Com_02037	AUTOSAR COM module shall be based on the functionality and APIs of DOC_ISO_COM	SWS_Com_00010, SWS_Com_00011, SWS_Com_00012, SWS_Com_00013, SWS_Com_00132, SWS_Com_00138, SWS_Com_00197, SWS_Com_00198, SWS_Com_00231, SWS_Com_00273, SWS_Com_00302, SWS_Com_00303, SWS_Com_00304, SWS_Com_00348, SWS_Com_00346, SWS_Com_00348, SWS_Com_00380, SWS_Com_00381, SWS_Com_00386, SWS_Com_00395, SWS_Com_00396, SWS_Com_00499, SWS_Com_00445, SWS_Com_00441, SWS_Com_00441, SWS_Com_00471, SWS_Com_00469, SWS_Com_00492, SWS_Com_00603, SWS_Com_00604, SWS_Com_00604, SWS_Com_00624, SWS_Com_00696, SWS_Com_00696, SWS_Com_00696, SWS_Com_00696, SWS_Com_00696, SWS_Com_00696, SWS_Com_00719, SWS_Com_00762, SWS_Com_00773, SWS_Com_00774, SWS_Com_00773, SWS_Com_00776, SWS_Com_00778, SWS_Com_00778, SWS_Com_00778, SWS_Com_00778, SWS_Com_00778, SWS_Com_00778, SWS_Com_00778, SWS_Com_00781, SWS_Com_00781, SWS_Com_00812, SWS_Com_00828, SWS_Com_00858, SWS_Com_00861, SWS_Com_00862, SWS_Com_00866,



		SWS_Com_00867, SWS_Com_00868, SWS_Com_00878, SWS_Com_00879, SWS_Com_00880
SRS_Com_02040	AUTOSAR COM and LargeDataCOM shall be configured by using XML as configuration language	SWS_Com_00006
SRS_Com_02041	The AUTOSAR module shall handle complex data types as a consistent set of data	SWS_Com_00050, SWS_Com_00051, SWS_Com_00200, SWS_Com_00201, SWS_Com_00461, SWS_Com_00513, SWS_Com_00635, SWS_Com_00637, SWS_Com_00638, SWS_Com_00639, SWS_Com_00676, SWS_Com_00677, SWS_Com_00678, SWS_Com_00679, SWS_Com_00821, SWS_Com_00851, SWS_Com_00852, SWS_Com_00854, SWS_Com_00855, SWS_Com_00857, SWS_Com_00882
SRS_Com_02042	The AUTOSAR COM module shall fill unused areas/ bits within an I-PDU with a configurable value	SWS_Com_00015
SRS_Com_02043	AUTOSAR COM and LargeDataCOM shall provide a receive indication function	SWS_Com_00123
SRS_Com_02044	AUTOSAR COM and LargeDataCOM shall provide a transmit confirmation function	SWS_Com_00124
SRS_Com_02045	AUTOSAR COM and LargeDataCOM shall provide a function to request the transmit buffer data for lower layer triggered transmission	SWS_Com_00001, SWS_Com_00475, SWS_Com_00647, SWS_Com_00869, SWS_Com_00884
SRS_Com_02046	The AUTOSAR COM modu- le shall support immediate and deferred signal based notification to the RTE	SWS_Com_00300, SWS_Com_00301, SWS_Com_00574, SWS_Com_00575, SWS_Com_00794, SWS_Com_00870, SWS_Com_00883
SRS_Com_02058	The AUTOSAR COM modu- le shall support deadline monitoring for updated sig- nals/signal groups on recei- ver side	SWS_Com_00117, SWS_Com_00290, SWS_Com_00291, SWS_Com_00292, SWS_Com_00715, SWS_Com_00716
SRS_Com_02067	AUTOSAR COM and LargeDataCOM shall define rules for checking the con- sistency of configuration data	SWS_Com_00102, SWS_Com_00105, SWS_Com_00310, SWS_Com_00365, SWS_Com_00373, SWS_Com_00384, SWS_Com_00401, SWS_Com_00402, SWS_Com_00443, SWS_Com_00465, SWS_Com_00535, SWS_Com_00553, SWS_Com_00732, SWS_Com_00785, SWS_Com_00790, SWS_Com_00817
SRS_Com_02077	The AUTOSAR COM modu- le shall support invalidation of signals at sender side	SWS_Com_00099, SWS_Com_00203, SWS_Com_00557, SWS_Com_00642, SWS_Com_00643, SWS_Com_00645



SRS_Com_02078	The AUTOSAR COM modu- le shall support endianness conversion	SWS_Com_00007, SWS_Com_00221, SWS_Com_00352, SWS_Com_00472, SWS_Com_00580, SWS_Com_00674, SWS_Com_00675, SWS_Com_00810
SRS_Com_02079	The AUTOSAR COM modu- le shall support an optional notification when receiving invalidated data	SWS_Com_00536, SWS_Com_00680, SWS_Com_00681, SWS_Com_00682, SWS_Com_00717, SWS_Com_00718, SWS_Com_00859, SWS_Com_00860
SRS_Com_02080	The AUTOSAR COM modu- le shall cancel outstanding repetitions in case of a new send request	SWS_Com_00279
SRS_Com_02082	The AUTOSAR COM module shall support defining two different transmission modes for each I-PDU	SWS_Com_00032, SWS_Com_00238, SWS_Com_00239, SWS_Com_00244, SWS_Com_00495, SWS_Com_00582, SWS_Com_00784, SWS_Com_00799, SWS_Com_00881
SRS_Com_02083	The AUTOSAR COM module shall support multiple transmission modes	SWS_Com_00135, SWS_Com_00305, SWS_Com_00308, SWS_Com_00330, SWS_Com_00392, SWS_Com_00467, SWS_Com_00478, SWS_Com_00494, SWS_Com_00602, SWS_Com_00734, SWS_Com_00739, SWS_Com_00741, SWS_Com_00742, SWS_Com_00743, SWS_Com_00767, SWS_Com_00768, SWS_Com_00769, SWS_Com_00770
SRS_Com_02084	The AUTOSAR COM modu- le shall support a configurab- le signal data based selec- tion mechanism of the two transmission modes	SWS_Com_00032, SWS_Com_00245, SWS_Com_00605, SWS_Com_00677, SWS_Com_00678, SWS_Com_00679, SWS_Com_00763, SWS_Com_00799, SWS_Com_00813
SRS_Com_02086	The AUTOSAR COM module shall support signextension	SWS_Com_00008, SWS_Com_00352, SWS_Com_00579, SWS_Com_00723, SWS_Com_00829
SRS_Com_02087	The AUTOSAR COM module shall support an optional substitution of received invalidated data	SWS_Com_00470, SWS_Com_00500, SWS_Com_00681, SWS_Com_00683, SWS_Com_00859, SWS_Com_00860
SRS_Com_02088	The AUTOSAR COM modu- le shall support substituting the last received value by the init value in case of a signal timeout	SWS_Com_00470, SWS_Com_00875, SWS_Com_00876
SRS_Com_02089	The AUTOSAR COM module shall provide two configurable options to handle signal timeouts	SWS_Com_00290, SWS_Com_00291, SWS_Com_00292, SWS_Com_00333, SWS_Com_00738, SWS_Com_00744
SRS_Com_02091	AUTOSAR COM and LargeDataCOM shall not support splitting of large signals into different I-PDUs	SWS_Com_00754, SWS_Com_00755, SWS_Com_00756
SRS_Com_02092	The AUTOSAR COM module shall support at most one dynamic length signal per I-	SWS_Com_00690, SWS_Com_00711, SWS_Com_00712, SWS_Com_00724, SWS_Com_00754



	I	
	PDU	
SRS_Com_02093	Dynamic length signal must be placed last in I-PDU	SWS_Com_00755, SWS_Com_00757, SWS_Com_00758, SWS_Com_00832
SRS_Com_02094	Dynamic length signals must be of type UINT8n	SWS_Com_00675, SWS_Com_00753
SRS_Com_02095	AUTOSAR COM and LargeDataCOM shall use the TP to fragment and reas- semble large signals	SWS_Com_00627, SWS_Com_00628, SWS_Com_00629, SWS_Com_00630, SWS_Com_00650, SWS_Com_00654, SWS_Com_00655, SWS_Com_00657, SWS_Com_00662, SWS_Com_00690, SWS_Com_00691, SWS_Com_00692, SWS_Com_00693, SWS_Com_00720, SWS_Com_00721, SWS_Com_00725, SWS_Com_00818, SWS_Com_00838, SWS_Com_00839, SWS_Com_00863, SWS_Com_00874
SRS_Com_02096	The AUTOSAR COM modu- le shall not support fragmen- tation towards the RTE	SWS_Com_00759, SWS_Com_00760
SRS_Com_02097	AUTOSAR COM and LargeDataCOM shall sup- port dynamical signals with a static maximum length	SWS_Com_00756
SRS_Com_02098	The AUTOSAR COM modu- le shall distinct normal and large signals via its configu- ration	SWS_Com_00753
SRS_Com_02099	The AUTOSAR COM modu- le shall provide a mechanism to detect out of sequence received I-PDUs	SWS_Com_00587
SRS_Com_02101	The AUTOSAR COM module shall support the incrementing and checking of the I-PDU Counter	SWS_Com_00588, SWS_Com_00687, SWS_Com_00688
SRS_Com_02102	The AUTOSAR COM modu- le shall support the detection of out of sequence I-PDUs	SWS_Com_00590, SWS_Com_00726, SWS_Com_00727, SWS_Com_00834
SRS_Com_02103	The AUTOSAR COM module shall provide a mechanism to detect corrupted received I-PDUs and to recover from this failure mode	SWS_Com_00596, SWS_Com_00597
SRS_Com_02105	The AUTOSAR COM modu- le shall support transmission and reception of replicated I- PDUs	SWS_Com_00596, SWS_Com_00597
SRS_Com_02106	The AUTOSAR COM modu- le shall support the detection of failures when receiving replicated I-PDUs	SWS_Com_00596, SWS_Com_00597
SRS_Com_02107	The AUTOSAR COM module shall cancel transmission	SWS_Com_00708



	requests in case of expired transmissions	
SRS_Com_02112	AUTOSAR COM shall provide a uint8-array based API for signal groups	SWS_Com_00841, SWS_Com_00842, SWS_Com_00843, SWS_Com_00844, SWS_Com_00845, SWS_Com_00846, SWS_Com_00847, SWS_Com_00848, SWS_Com_00849, SWS_Com_00850, SWS_Com_00851, SWS_Com_00852, SWS_Com_00854, SWS_Com_00855
SRS_PduR_06002	The routing configuration shall be updateable at postbuild time	SWS_Com_00357, SWS_Com_00361, SWS_Com_00373
SRS_PduR_06055	The signal gateway shall provide a mechanism to route individual signals between I-PDUs in a 1:n fashion	SWS_Com_00377, SWS_Com_00539, SWS_Com_00598, SWS_Com_00872, SWS_Com_00873
SRS_PduR_06056	Signal Groups shall be routed	SWS_Com_00361, SWS_Com_00383, SWS_Com_00735, SWS_Com_00833
SRS_PduR_06061	Routers shall map only signals	SWS_Com_00360, SWS_Com_00361, SWS_Com_00362
SRS_PduR_06064	The signal gateway shall be scalable to zero size and zero resource usage when signal routing is not required	SWS_Com_00370
SRS_PduR_06089	The timeout of a deadline monitored signal shall be ignored by the SigG	SWS_Com_00377, SWS_Com_00701, SWS_Com_00872, SWS_Com_00873
SRS_PduR_06097	A configuration shall be identified by an unique ID number	SWS_Com_00487
SRS_PduR_06098	Signal Gateway Error shall be handled with signal rou- ting	SWS_Com_00442
SRS_PduR_06099	Signal Gateway Error shall be handled with signal group routing	SWS_Com_00442



# 7 Functional Specification

#### 7.1 Introduction

## 7.2 General Functionality

#### 7.2.1 AUTOSAR COM basis

The ISO 17356-4:2005 Road vehicles -- Open interface for embedded automotive applications -- Part 4: OSEK/VDX Communication (COM) is the functional basis of the AUTOSAR COM module. In this document, it is referenced as [17].

**[SWS\_Com\_00010]** [The AUTOSAR COM module shall implement all the functionality and all the APIs of [17] except the features and APIs mentioned in SWS\_Com\_00013.] (SRS\_Com\_02037)

**[SWS\_Com\_00011]** [If this AUTOSAR COM specification defines functionality in a different way compared to definitions in [17], the AUTOSAR COM module shall implement the functionality defined in this AUTOSAR COM specification.] (SRS\_Com\_02037)

**[SWS\_Com\_00012]** [The AUTOSAR COM module shall in addition implement all those features, that are defined in this AUTOSAR COM specification and that are not part of [17].] (SRS\_Com\_02037)

**[SWS\_Com\_00013]** [The AUTOSAR COM module may implement the following features of [17]. If they are implemented in a specific AUTOSAR COM module, the configuration shall disable them by default. This also applies for all other additional features a specific implementation may provide.] (SRS\_Com\_02037)

feature in [17]	Rationale	related API in [17]
Mapping of a received network message (within an I-PDU) to more than one message data objects (1:n splitting mechanism)	not required, done by the RTE, see [13]	none
Mapping of an internal message to more than one message data objects (1:n splitting mechanism)	not required, done by the RTE, see [13]	none
Mapping an only locally send mes- sage to both an external send mes- sage object and an internal receive message object (1:n splitting mech- anism)	not required, done by the RTE, see [13]	none
M:1 sending; mapping of messages from multiple senders to one and the same message object	not required, ensured by RTE, see [13]	SendMessage
Queued messages	not required, done by the	GetMessageStatus



feature in [17]	Rationale	related API in [17]
	RTE, see [13]	
Zero size messages	it is possible to set up com- munication without them	SendZeroMessage
	functionality is partly covered by Com_TriggerTransmit	
Notification mechanisms TASK, FLAG and EVENT	not required, done by the RTE, see [13]	none
Overlapping messages in an I-PDU	no use case, dangerous concept	none
Usage of OIL	OIL is not used to configure the AUTOSAR COM module.	None
Application modes	not needed	GetComApplicationMode
Start-up behavior	replaced by	StartCOM, StopCOM, StartCOMExtensions, InitMessage
Start and stop of periodic messages	no use case, is realized by I-PDU group mechanism	StartPeriodic, StopPeriodic
Reentrancy	Not all of the AUTOSAR API calls are reentrant. See Chapter 8.3.	See Chapter 8.3.
Interface to indirect NM	not needed	I_MessageTransfer, I_MessageTimeOut
Sender side filtering	no use case, the filter conditions are still used in the selection of the transmission mode but there is no signal filtering	none
Network-order message callout	Only I-PDU callouts with a defined AUTOSAR interface	None
CPU-order message callout	are supported by the AU- TOSAR COM module. This is to avoid proprietary solutions.	
Error hook routine	The AUTOSAR COM module defines an own interface for error reporting instead of using error hooks	COMErrorHook COMError_Name1_Name2 macros COMErrorGetServiceId
Interface for callback routines	The signatures for the used callback function of the AU-TOSAR COM module will be explicitly defined within the AUTOSAR COM module's specification.	COMCallback
Internal communication	not required, ensured by RTE, see [13]	SendMessage, ReceiveMessage

Table 1: Excluded features of [17] in the AUTOSAR COM module

# 7.2.2 Signal Values

The signals sent by the AUTOSAR COM module respectively received by the AUTOSAR COM module could have the values defined in Table 2.



Signal value	Remark
init value	See Chapter 7.3.1.4 for details.
Data invalid value	See Chapter 7.3.4 for details.
<value></value>	This is the normal case: A valid value after initialization phase, which is sent by the AUTOSAR COM module respectively, received by AUTOSAR COM module.

Table 2: Possible signal values

## 7.2.3 Endianness Conversion and Sign Extension

**[SWS\_Com\_00675]** [The AUTOSAR COM module shall support the following data types:

- boolean
- uint8
- uint16
- uint32
- uint64
- sint8
- sint16
- sint32
- sint64
- uint8[n]
- float32
- float64

The type uint8[n] is mapped to either ComSignalType *UINT8\_N* or *UINT8\_DYN*.] (SRS\_Com\_02078, SRS\_Com\_02094)

[SWS\_Com\_00007] [The AUTOSAR COM module shall support endianness conversion for all supported signed and unsigned integer data types (see SWS\_Com\_00675).| (SRS\_Com\_02078)

**[SWS\_Com\_00810]** [The AUTOSAR COM module shall treat non-integer data types (e.g. uint8[n] or float32) either like integer data types of the matching size or leave their contents uninterpreted in case their ComSignalEndianness is configured to *OPAQUE*.| (SRS\_Com\_02078)

[SWS\_Com\_00472] [The AUTOSAR COM module shall interpret opaque data as uint8[n] and shall always map it to an n-bytes sized signal.] (SRS\_Com\_02078)

For opaque data endianness, conversion has to be configured to *OPAQUE* (see ECUC Com 00157).

[SWS\_Com\_00674] [The AUTOSAR COM module shall extend the endianness conversion defined in [17] Chapter 2.4 to signed data types.] (SRS\_Com\_02078)



In [17] Chapter 2.4 defines the endianness conversion for unsigned data types. The associated configurations can be found in Chapter 10. See also ECUC\_Com\_00127 and ECUC\_Com\_00157.

[SWS\_Com\_00829] [The AUTOSAR COM module shall extend the endianness conversion defined in [17] Chapter 2.4 to signals of signal groups.] (SRS\_Com\_02086)

AUTOSAR COM handles signals and group signals equaly with respect to endianness conversion.

**[SWS\_Com\_00008]** [The AUTOSAR COM module shall extend received data to the size of the ComSignalType of the receive signal (sign extension).] (SRS\_Com\_02086)

The platform specific representation of signed data has to be taken into account. Negative values of signed data will be mapped correctly.

**Example:** A 10-Bit signed signal is received and copied by Com\_ReceiveSignal to a 16-Bit signed integer variable. If (-3)<sub>decimal</sub> is received, the received 10-Bit signal has a value of 11111111101b. While copying it to the 16-Bit integer variable the value will be extended to 11111111111111101b.

[SWS\_Com\_00723] [The AUTOSAR COM module shall extend the init value (ComSignalInitValue) of a signal to the size of its ComSignalType.] (SRS\_Com\_02086)

Note that the AUTOSAR COM module will not need to perform sign extensions on sender side as it is guaranteed that the values to be transmitted will always be sign-extended. See also SWS\_Com\_00785.

**[SWS\_Com\_00579]** [The AUTOSAR COM module shall not support sign extension for float32 and float64 data types.] (SRS\_Com\_02086)

[SWS\_Com\_00221] [The AUTOSAR COM module shall perform endianness conversion before the I-PDU callout on sender side. For an overview, see Chapter 7.16.] (SRS\_Com\_02078)

**[SWS\_Com\_00352]** [The AUTOSAR COM module shall perform sign extensions and endianness conversion before performing filtering and notification detection on receiver side.] (SRS\_Com\_02078, SRS\_Com\_02086)

**[SWS\_Com\_00580]** [Beside endianness conversion, the AUTOSAR COM module shall not support further conversions for signals with ComSignalType FLOAT32 or FLOAT64. That is endianness conversion shall be supported but complex conversion or normalizations of fractions, exponents, signs or bias values shall not be supported.] (SRS\_Com\_02078)



#### 7.2.4 Filtering

[SWS\_Com\_00694] [The AUTOSAR COM module shall evaluate each filtering condition to either true or false.] (SRS\_Com\_02037)

**[SWS\_Com\_00695]** [The AUTOSAR COM module shall filter out signals only at receiver side.] (SRS\_Com\_02037)

**[SWS\_Com\_00602]** [The AUTOSAR COM module shall use filtering mechanisms on sender side for Transmission Mode Conditions (TMC) but it shall not filter out signals on sender side.] (SRS\_Com\_02083)

For Transmission Mode Selection (TMS) see Chapters 7.3.3.2 and 7.3.3.3.

The AUTOSAR COM module only provides the following ComFilterAlgorithms of that which are defined in [17], see ECUC\_Com\_00146:

- ALWAYS
- NEVER
- MASKED\_NEW\_EQUALS\_X
- MASKED\_NEW\_DIFFERS\_X
- MASKED\_NEW\_DIFFERS\_MASKED\_OLD
- NEW IS WITHIN
- NEW IS OUTSIDE
- ONE EVERY N

To reduce complexity the AUTOSAR COM module does not support all filters defined in [17]. The not supported filters are either obsolete or special cases of other filters. For example, the filter NEW\_IS\_DIFFERENT is a special case of MASKED\_NEW\_-DIFFERS\_MASKED\_OLD with a fully set mask.

**[SWS\_Com\_00325]** [The AUTOSAR COM module shall support all filter mechanisms listed in ECUC\_Com\_00146, considering the exceptions defined in SWS\_Com\_00380 and SWS\_Com\_00439.] (SRS\_Com\_02037)

**[SWS\_Com\_00380]** [For signals with ComSignalType *FLOAT32*, *FLOAT64*, *UINT8\_N* or *UINT8\_DYN*, the AUTOSAR COM module shall only support ComFilterAlgorithm configured to *ALWAYS*, *NEVER* or ONE\_EVERY\_N.] (SRS\_Com\_02037)

**[SWS\_Com\_00439]** [For signals with ComSignalType configured to *BOOLEAN*, the AUTOSAR COM module shall only support ComFilterAlgorithm configured to:

- ALWAYS
- NEVER
- MASKED NEW EQUALS X
- MASKED NEW DIFFERS X
- MASKED\_NEW\_DIFFERS\_MASKED\_OLD
- ONE\_EVERY\_N

(SRS\_Com\_02037)



**[SWS\_Com\_00764]** [For signals and group signals with ComBitSize configured to 0, the AUTOSAR COM module shall not support the filter algorithm <code>Masked\_New\_-Differs\_Masked\_Old.|</code> (SRS\_Com\_02037)

**[SWS\_Com\_00866]** [In case the configured filter condition is MASKED\_-NEW\_DIFFERS\_X, MASKED\_NEW\_EQUALS\_X, NEW\_IS\_OUTSIDE or NEW\_IS\_-WITHIN, the AUTOSAR COM module shall calculate the reception filter by using only the least significant ComBitSize bits of the filter parameters.] (SRS\_Com\_02037)

[SWS\_Com\_00273] [If the AUTOSAR COM module filters out a signal on receiver side, i.e. filter condition evaluates to false, the AUTOSAR COM module shall discard that signal and shall not process it. See also SWS\_Com\_00303.] (SRS\_Com\_02037)

**[SWS\_Com\_00836]** [If the AUTOSAR COM module filters out a group signal on receiver side, i.e. filter condition evaluates to false, the AUTOSAR COM module shall discard the whole signal group and shall not process it.] (SRS\_Com\_02037)

**[SWS\_Com\_00132]** [The AUTOSAR COM module shall support the filtering mechanisms as defined in ECUC\_Com\_00146 also for signed data types.] (SRS\_Com\_02037)

In the case a filter is evaluated before a send-API has written the corresponding signal, there needs to be a way to determine the filter state of this signal. Some of the filters require a *new\_value* to evaluate the filter. However, this is only available <u>after</u> the signal has been updated using a send-API. Therefore, it is necessary to define the value used by the filter for *new\_value* in the period before the first send takes place.

**[SWS\_Com\_00603]** [The AUTOSAR COM module shall set the *old\_value* of the filtering mechanisms for each signal to the ComSignalInitValue (ECUC\_Com\_00170) during start-up. See also [17].] (SRS\_Com\_02037)

**[SWS\_Com\_00604]** [Until the application has not updated the *new\_value* of the filtering mechanisms for a signal, the AUTOSAR COM module shall use the ComSignalInitValue as the *new\_value* for that signal.] (SRS\_Com\_02037)

The next two requirements clarify the definitions of [17] according to the update of the *old value* of filters.

**[SWS\_Com\_00302]** [If the AUTOSAR COM module evaluates a filter for a signal to true, (value is not filtered out) then the AUTOSAR COM module shall place the value of that signal into *old\_value* (as defined in [17]).| (SRS\_Com\_02037)

**[SWS\_Com\_00303]** [When a value is being filtered, if the filter does not allow the passage of the value (i.e. the filter evaluates to false) then the AUTOSAR COM module shall not place that value into *old\_value* (as defined in [17]).] (SRS\_Com\_02037)

[SWS\_Com\_00231] [In the case of ComFilterAlgorithm is configured to ONE EVERY N, the AUTOSAR COM module shall



- set OCCURRENCE to zero when OCCURRENCE == PERIOD
- set FILTER to true, when OCCURRENCE == OFFSET
- increment OCCURRENCE after filter processing I (SRS\_Com\_02037)

For definition of OCCURRENCE, FILTER, OFFSET and PERIOD see [17].

Configuring ComFilterAlgorithm to *ONE\_EVERY\_N* for a signal has the effect that the signal is passed by the filter (i.e. the filter returns true) once every PERIOD calls of the filter. If the OFFSET parameter is zero then the first time the filter is used the signal is allowed to pass (i.e. filter returns true). If the OFFSET is greater than zero then more than one signal must pass through the filter before it returns true.

In case the I-PDU is started by Com\_IpduGroupStart with parameter initialize set to true, the OCCURRENCE is also set to zero, see SWS\_Com\_00787.

This definition exists to clarify the description of the ONE EVERY N filter in [17].

The associated configuration items can be found in Chapter 10, see ECUC\_Com\_00339.

**[SWS\_Com\_00793]** [For a signal with a configured reception filter MASKED\_NEW\_DIFFERS\_MASKED\_OLD, the AUTOSAR COM module shall treat the first value received for this signal after a reception deadline monitoring timeout occurred for this signal the same way as if the value has passed the filter criteria.] (SRS\_Com\_02037)

Hence, the AUTOSAR COM module will let pass any value for the filter MASKED\_NEW\_DIFFERS\_MASKED\_OLD after an RX deadline timeout for the associated I-PDU.

#### 7.2.5 Signal Gateway

The AUTOSAR COM module provides an integrated Signal Gateway for forwarding signals and group signals in a 1:n manner.

The routing relations are be statically configured via the ComGwMapping configuration container (see ECUC\_Com\_00544).

As shown in Figure 4 and Figure 5, the integrated Signal Gateway acts as a receiver for all signals or group signals which are configured as a source for gatewayed signals.

After the Signal Gateway received signal or group signals for routing, it acts immediately as a sender for these signals or group signals respectively. This is shown in Figure 3 and Figure 5. The signal processing does not differ if the integrated Signal Gateway forwards a signal/ group signal or if a Software Component sends it.



Since the gateway relations are statically configured, an optimized Signal Gateway might skip some processing stages for concrete configurations. For example, the endianness conversion is not necessary in certain cases. Of course, such optimizations should not lead to any different logical behavior or different representations on the target bus. Optimizations may only be introduced to increase the Signal Gateway's performance.

As shown in Figure 4 a received signal or group signal might be received on the local ECU and be a source for a gateway action at the same time.

Figure 3 and Figure 4 show shadow buffers only for group signals that are received by the RTE. The integrated Signal Gateway has of course to ensure to handle group signals consistently but there is no predetermined way in which this must be implemented.

**[SWS\_Com\_00370]** [The Signal Gateway of the AUTOSAR COM module shall scale down to no size if no signal routing functionality is needed.] (SRS\_PduR\_06064)

### 7.3 Normal Operation

#### 7.3.1 Start-Up Behavior

This chapter describes the actions that will be performed during Com\_Init.

[SWS\_Com\_00217] [The AUTOSAR COM module shall initialize each I-PDU during execution of Com\_Init (SWS\_Com\_00432), firstly byte wise with the ComTxIPduUnusedAreasDefault value and then bit wise according to initial values (ComSignalInitValue) of the contained signals and the update-bits (see SWS\_Com\_00117).] (SRS\_BSW\_00101)

#### 7.3.1.1 Preconditions

The C initialization code, also known as *start-up code*, initializes global and static variables with the initial values. It must be executed before any call of an AUTOSAR COM module's service.

#### 7.3.1.2 Initialization

**[SWS\_Com\_00128]** [The AUTOSAR COM module's initialization function Com\_Init (SWS\_Com\_00432) shall initialize all internal data that is not yet initialized by the *start-up code* e.g. C-structs.] (SRS\_BSW\_00101)

[SWS\_Com\_00328] [The AUTOSAR COM module's initialization function Com\_Init (SWS\_Com\_00432) shall not enable Inter-ECU communication.] (SRS\_BSW\_00101)

This initialization chapter is not complete. Details about initialization of some AUTOSAR COM module's features are described within the different feature chapters.



#### 7.3.1.3 Initialization of Not Used Areas of an I-PDU

**[SWS\_Com\_00015]** [The AUTOSAR COM module shall fill not used areas within an I-PDU with a value determined by configuration parameter ComTxIPduUnusedAreasDefault (ECUC\_Com\_00017) e.g. 0xFF.] (SRS\_BSW\_00101, SRS\_Com\_02042)

### 7.3.1.4 Initialization of Signals and Update-Bits

[SWS\_Com\_00098] [The AUTOSAR COM module shall initialize each signal of n-bit sized signal type on sender and receiver side with the lower n-bits of its configuration parameter ComSignalInitValue (ECUC\_Com\_00170).] (SRS\_BSW\_00101)

The configured ComSignalInitValues (ECUC\_Com\_00170) are also used for the initialization of the signal in the related I-PDU; see SWS\_Com\_00217.

The ComSignalInitValue (ECUC\_Com\_00170) of a signal can be identical to its ComSignalDataInvalidValue (ECUC\_Com\_00391). These can be different for each signal.

[SWS\_Com\_00117] [The AUTOSAR COM module shall clear all update-bits during initialization. See also SWS\_Com\_00059.] (SRS\_BSW\_00101, SRS\_Com\_02030, SRS\_Com\_02058)

#### 7.3.1.5 Initialization of I-PDU Groups

**[SWS\_Com\_00444]** [By default, all I-PDU groups shall be in the state stopped and they shall not be started automatically by a call to Com\_Init (SWS\_Com\_00432).] (SRS\_Com\_00218)

#### 7.3.2 De-Initialization

The AUTOSAR COM module provides the API function Com\_Delnit (SWS\_Com\_00130) for de-initialization of the COM layer. This means, after de-initialization of the layer, no communication via the AUTOSAR COM module is possible and all started I-PDU groups are stopped, see also SWS Com 00129.

#### 7.3.3 Communication Modes

This chapter defines the signal flow in the AUTOSAR COM module. It further defines the different transmission modes provided by the AUTOSAR COM module. Chapter 7.3.3.2 defines a mechanism to switch between two transmission modes for one I-PDU. The replication of signals is defined in Chapter 7.3.3.4.

Explemary communication use cases that the AUTOSAR COM module can deal with are shown in Chapter 12.



### 7.3.3.1 Transfer Properties and I-PDU Transmission Mode

# 7.3.3.1.1 **Signals**

The AUTOSAR COM module supports several *transfer properties* for signals and several *transmission modes* for I-PDUs. The definitions in this chapters are based on and are to be completed with the definitions in [17] Chapter 2.3.3.

**[SWS\_Com\_00330]** [At any send request of a signal with ComTransferProperty *TRIGGERED* assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU.] (SRS Com 02083)

**[SWS\_Com\_00767]** [At any send request of a signal with ComTransferProperty *TRIGGERED\_WITHOUT\_REPETITION* assigned to an I-PDU with ComTx-ModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate one transmission of the assigned I-PDU.] (SRS\_Com\_02083)

**[SWS\_Com\_00734]** [At a send request of a signal with ComTransferProperty *TRIGGERED\_ON\_CHANGE* assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU, if the new sent signal differs to the locally stored (last sent or init) in length or value.] (SRS\_Com\_02083)

[SWS\_Com\_00768] [At a send request of a signal with ComTransferProperty TRIG-GERED\_ON\_CHANGE\_WITHOUT\_REPETITION assigned to an I-PDU with ComTxModeMode DIRECT or MIXED, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate one transmission of the assigned I-PDU, if the new sent signal differs to the locally stored (last sent or init) in length or value.] (SRS\_Com\_02083)

**[SWS\_Com\_00762]** [The AUTOSAR COM module shall not support the transfer properties *TRIGGERED\_ON\_CHANGE* and *TRIGGERED\_ON\_CHANGE\_WITH-OUT\_REPETITION* for signals and group signals with ComBitSize configured to 0.] (SRS\_Com\_02037)

The support of the transfer properties TRIGGERED\_ON\_CHANGE and TRIGGERED\_ON\_CHANGE\_WITHOUT\_REPETITION is not restricted to certain signal types. Hence, they are supported for all possible signal types. This includes even the byte array types, e.g. UINT8\_N.

The details of the transmission replication mechanism are specified in Chapter 7.3.3.4.



**[SWS\_Com\_00135]** [The AUTOSAR COM module shall not initiate transmissions for I-PDUs that have the ComTxModeMode (ECUC\_Com\_00137) *NONE*.] (SRS\_Com\_02083)

It is possible to request I-PDUs with ComTxModeMode NONE via Com\_Trigger-Transmit.

A pending signal associated with an I-PDU is transmitted if the I-PDU's transmission is triggered for any reason. For example, if a signal with ComTransferProperty *TRIGGERED* within the same I-PDU is sent or the I-PDU sending is scheduled because of ComTxModeMode *PERIODIC* or *MIXED*.

The bus-timing of I-PDUs can be controlled by send requests of the RTE in combination with the transmission mode and the transfer property as described above. Additionally, the PDU Router, especially in case of FlexRay and LIN, can control it with the service Com\_TriggerTransmit. In the latter case, the PDU Router requests I-PDUs to be sent from the AUTOSAR COM module.

The function Com\_TriggerTransmit can be called for any I-PDU regardless of its transmission mode. This allows LIN and FlexRay to use all the available transmission modes, particularly for sporadic communication. The NM also uses this mechanism to send user data.

# 7.3.3.1.2 **Signal Groups**

In AUTOSAR COM also signal groups and group signals may have a transfer property, defining in combination with the transmission mode, if the I-PDU is sent out in case of an update of a signal group or group signal, respectively.

**[SWS\_Com\_00741]** [At any send request of a signal group with ComTransferProperty *TRIGGERED* assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU.] (SRS\_Com\_02083)

**[SWS\_Com\_00769]** [At any send request of a signal group with ComTransferProperty *TRIGGERED\_WITHOUT\_REPETITION* assigned to an I-PDU with ComTx-ModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall initiate one transmission of the assigned I-PDU within the next main function at the latest.] (SRS\_Com\_02083)

**[SWS\_Com\_00742]** [Regarding signal groups with ComTransferProperty *TRIG-GERED\_ON\_CHANGE* which do not contain any signals that have an own ComTransferProperty configured:

At any send request of such a signal group assigned to an I-PDU with ComTx-ModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU, if at least one new sent group signal differs to the locally stored (last sent or init) in length or value.] (SRS\_Com\_02083)



**[SWS\_Com\_00743]** [Regarding signal groups with ComTransferProperty *TRIGGERED\_ON\_CHANGE* which contain any signals that have an own ComTransferProperty configured:

At any send request of such a signal group assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate ComTxModeNumberOfRepetitions plus one transmissions of the assigned I-PDU, if at least one new sent group signal configured with ComTransferProperty *TRIGGERED\_ON\_CHANGE* differs to the locally stored (last sent or init) in length or value.] (SRS\_Com\_02083)

**[SWS\_Com\_00770]** [At a send request of a signal group with ComTransferProperty *TRIGGERED\_ON\_CHANGE\_WITHOUT\_REPETITION* assigned to an I-PDU with ComTxModeMode *DIRECT* or *MIXED*, the AUTOSAR COM module shall immediately (within the next main function at the latest) initiate one transmission of the assigned I-PDU, if at least one new sent group signal differs to the locally stored (last sent or init) in length or value.] (SRS\_Com\_02083)

### 7.3.3.2 Selection of the Transmission Mode for one specific I-PDU

I-PDUs carry signals. Because an I-PDU can contain more than one signal, in the following, a method is defined to derive the I-PDU's transmission mode from the state of the signals that are contained in one specific I-PDU.

The AUTOSAR COM module allows configuring statically two different transmission modes for each I-PDU (see SWS\_Com\_00032). The transmission mode of an I-PDU that is valid at a specific point in time is selected using only the values of the signals that are mapped to this I-PDU.

The signals of one I-PDU that contribute to the selection of one of the two transmission modes as well as the conditions used for the selection of the transmission mode are configured statically, see SWS Com 00676.

For the selection of the transmission mode, the AUTOSAR COM module treats group signals like normal signals.

**[SWS\_Com\_00676]** [For the evalutation of a TMS, the AUTOSAR COM module shall take all those (group) signals into account which configuration include a configured ComFilter container. See included containers of ComSignal and ComGroupSignal.] (SRS\_Com\_02041)

If a signal of an I-PDU with ComIPduDirection configured to *SEND* has a configuration container ComFilter included, the signal is named to *contribute* to the TMS of this I-PDU. If the configuration container for that signal has no assigned configuration container ComFilter, then it does *not contribute* to a TMS.

[SWS\_Com\_00677] [If no signal within an I-PDU contributes to the calculation of the TMS, then the AUTOSAR COM module shall evaluate the TMS of this I-PDU as true.] (SRS\_Com\_02084, SRS\_Com\_02041)



[SWS\_Com\_00678] [If the AUTOSAR COM module evaluates the TMC of a contributing signal as true, then the AUTOSAR COM module shall evaluate the TMS as true.] (SRS\_Com\_02084, SRS\_Com\_02041)

**[SWS\_Com\_00679]** [If the AUTOSAR COM module evaluates no TMC of a contributing signal as true, then the AUTOSAR COM module shall evaluate the TMS as false.] (SRS\_Com\_02084, SRS\_Com\_02041)

**[SWS\_Com\_00605]** [The AUTOSAR COM module shall define a Transmission Mode Selector, for each I-PDU. See definition of TMS above.] (SRS\_Com\_02084)

[SWS\_Com\_00245] [The AUTOSAR COM module shall re-calculate the TMS for an I-PDU, after a contained signal was updated by a call to Com\_SendSignal or Com\_SendSignalGroup.] (SRS\_Com\_02084)

**[SWS\_Com\_00763]** [For the calculation of the transmission mode with the configured condition *MASKED\_NEW\_DIFFERS\_MASKED\_OLD*, the AUTOSAR COM module shall use the least significant ComBitSize bits only.] (SRS\_Com\_02084)

**[SWS\_Com\_00813]** [For the calculation of the transmission mode with a configured condition *MASKED\_NEW\_DIFFERS\_X*, *MASKED\_NEW\_EQUALS\_X*, *NEW\_IS\_OUTSIDE* or *NEW\_IS\_WITHIN*, the AUTOSAR COM module shall use all bits of the configured ComSignalType.] (SRS\_Com\_02084)

Note that a signal with ComFilterAlgorithm configured to *ALWAYS*, will always set the TMS of the respective I-PDU to true. Therefore, care must be taken when defining the signals that contribute to the TMS.

**[SWS\_Com\_00032]** [If the TMS of an I-PDU evaluates to true, then the AUTOSAR COM module shall use the ComTxModeMode defined in configuration container ComTxModeTrue (ECUC\_Com\_00455) for that I-PDU.] (SRS\_Com\_02082, SRS\_Com\_02084)

[SWS\_Com\_00799] [If the TMS for an I-PDU evaluates to false, then the AUTOSAR COM module shall use the ComTxModeMode defined in configuration container ComTxModeFalse (ECUC\_Com\_00454) for that I-PDU.] (SRS\_Com\_02082, SRS\_Com\_02084)

[SWS\_Com\_00238] [In each of the two TMS states, the rules for combination of transfer properties of signals and transmission modes of I-PDUs shall apply as defined in [17] Section 2.3.| (SRS\_Com\_02082)

**[SWS\_Com\_00239]** [When the TMS state of an I-PDU changes, the AUTOSAR COM module shall use the now valid transmission mode immediately (within the next main function at the latest). That means, first the AUTOSAR COM module shall perform the mode change and after that, the AUTOSAR COM module shall execute any resulting calls to PduR\_ComTransmit caused by mode change.] (SRS\_Com\_02082)



**[SWS\_Com\_00244]** [If a change of the TMS causes a change of the transmission mode for an I-PDU, then the AUTOSAR COM module shall restart the timer for the cycle time of the transmission mode *PERIODIC* and *MIXED*.] (SRS Com 02082)

**[SWS\_Com\_00495]** [When a call to Com\_SendSignal or Com\_SendSignalGroup results into a change of the transmission mode of a started I-PDU to the transmission mode *PERIODIC* or *MIXED*, then the AUTOSAR COM module shall start the new transmission cycle with a call to PduR\_ComTransmit within the next main function at the latest. The transmission shall be initiated regardless of the transfer property of the signal or signal group that caused the transmission mode switch. The minimum delay time shall still be respected. See also Figure 5 *The AUTOSAR COM module's interaction model for reception*. | (SRS\_Com\_02082)

The ComTxModeTimeOffset is not respected. It is only respected by explicit I-PDU transmission mode switches, for example by Com\_IpduGroupStart or Com\_SwitchIpduTxMode.

**[SWS\_Com\_00582]** [If a change of the TMS causes a change to the transmission mode *DIRECT*, an immediate (within the next main function at the latest unless shifted due to the MDT) direct/ n-times transmission to the underlying layer shall be initiated.| (SRS\_Com\_02082)

The above requirement clarifies the behavior in case the TMS-switch to ComTx-ModeMode *DIRECT* was triggered by a signal with ComTransferProperty *PENDING*.

If the ComTxModeMode of an I-PDU is configured to *NONE* no transmission will be initiated by AUTOSAR COM. This can be used to prevent transmitting an I-PDU, for example in case the TMS evaluates to false.

[SWS\_Com\_00478] [The AUTOSAR COM module shall send out an I-PDU at most once within one call of Com\_MainFunctionTx.] (SRS\_Com\_02083)

### 7.3.3.3 Signal Flow and Transmission Mode Selection

After a send request from the RTE for a specific signal, the signal is written to the appropriate I-PDU buffer as defined by configuration, and the selection of the transmission mode of the I-PDUs is done according to Chapter 7.3.3.2.

Figure 2 shows the signal flow:



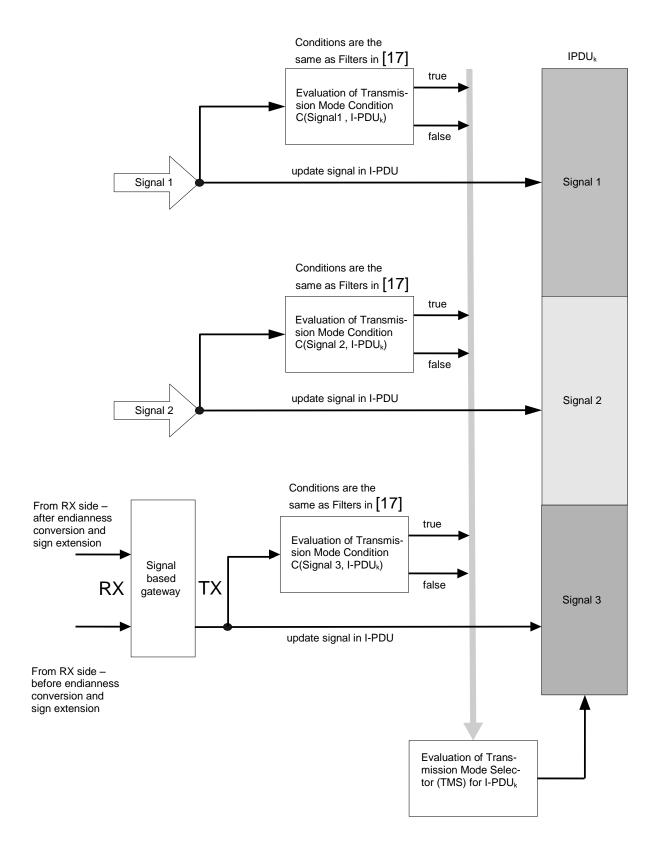


Figure 2: Logical signal flow in the AUTOSAR COM module shown for two signals (Signal1 and Signal2) that are mapped to one I-PDU (IPDU<sub>k</sub>)



### 7.3.3.4 Replication of Signal Transmission Requests

The number of repetitions of transmission requests in the ComTxModeMode *DIRECT* or *MIXED* for a send request by the RTE is defined by configuration parameter ComTxModeNumberOfRepetitions (ECUC\_Com\_00281).

[SWS\_Com\_00467] [If ComRetryFailedTransmitRequests is not set to TRUE and an I-PDU with ComTxModeMode DIRECT or MIXED and ComTxModeNumberOfRepetitions set to 0 is triggered for sending, the AUTOSAR COM module shall invoke PduR\_ComTransmit for this I-PDU just once, independently of the result of the confirmation.] (SRS\_Com\_02083)

Configuring ComTxModeNumberOfRepetitions to 0 imitates the original direct transmission mode of [17].

**[SWS\_Com\_00279]** [If a new send request is received from the RTE while sending n transmissions belonging together (e.g. after the 3<sup>rd</sup> of 5 repetitions, see SWS\_Com\_00305) the AUTOSAR COM module shall cancel the outstanding transmission repetitions and start processing the new request within the next main function at the latest, see Appendix A use-case 4.] (SRS\_Com\_02080)

**[SWS\_Com\_00305]** [In case of sending an I-PDU with ComTxModeMode *DIRECT* or *MIXED* and ComTxModeNumberOfRepetitions greater than 0, the AUTOSAR COM module shall call PduR\_ComTransmit periodically, with period ComTx-ModeRepetitionPeriod until *ComTxModeNumberOfRepetitions plus one* successful confirmations for this send-request are received.] (SRS\_Com\_02083)

SWS\_Com\_00305 assumes that CAN does not have a queue for these I-PDUs. There is a race condition in the interaction between the CAN driver, interface and hardware that may cause an extra transmission to occur in certain unlikely circumstances.

If the underlying layer returns E\_NOT\_OK while an N-Times transmission is in progress, this error notification will be ignored, unless ComRetryFailedTransmitRequests is set to true (see also SWS\_Com\_00773). As SWS\_Com\_00305 specifies, only confirmed transmissions are counted for the N-Times transmission, erroneous send request can safely be ignored.

If the N-Times transmission is requested in transmission mode *MIXED* after a cyclic transmission of the *MIXED* transmission mode with a pending confirmation, the confirmation of the cyclic transmission will be assigned to the N-Times transmission. In this case, only n-1 transmissions of the new value of the N-Times request are observed. The transmission deadline monitoring timer will then be reset earliest after the N-Times request is completed. This must be respected when configuring the transmission deadline monitoring timer in conjunction with the *MIXED* transmission mode and N-Times transmission.

**[SWS\_Com\_00494]** [If within the transmission mode *MIXED* an N-Times transmission request overlaps with the cyclic part of the mixed transmission the cyclic trans-



mission shall be counted as the corresponding transmission of the N-Times transmission request. (SRS\_Com\_02083)

[SWS\_Com\_00392] [If a transmission deadline monitoring timeout occurs before the N-Times transmission is complete, then the AUTOSAR COM module shall not initiate further transmissions for this N-Times transmission.] (SRS\_Com\_02083)

The minimum delay time will always be taken into account as defined in [17] Chapter 2.3.4.

To avoid bursts in start-up a time offset can be configured per I-PDU. See ECUC\_Com\_00180 for details.

The time between two repetitions is configured by configuration parameter ComTx-ModeRepetitionPeriod (ECUC\_Com\_00282).

If the transmission mode change leads to the start of the *MIXED* transmission mode by sending a triggered signal and ComTxModeNumberOfRepetitions is configured greater than or equal to 1, then there will be at least ComTxModeNumberOfRepetitions plus one transmission requests to the PDU Router at the beginning of the *MIXED* transmission mode. See also SWS Com 00305.

### 7.3.3.5 Retry Failed Transmission Requests

[SWS\_Com\_00773] [If ComRetryFailedTransmitRequests is set to TRUE, the return value of PduR\_ComTransmit shall be evaluated. If the return value of PduR\_ComTransmit is not equal to E\_OK, the AUTOSAR COM Module shall invoke PduR\_ComTransmit for the not sent I-PDU again within the next Com\_MainFunctionTx.| (SRS\_Com\_02037)

If the I-PDU is updated in between, the new data will be sent.

SWS\_Com\_00773 may lead to multiple retries for the same failed transmission request.

SWS\_Com\_00773 is not affected by transmission mode changes.

SWS\_Com\_00773 has no influence on a potential repetition period. Any repetitions will occur as if no retry had taken place.

[SWS\_Com\_00774] [The AUTOSAR COM module shall start the transmission deadline monitoring independently of possible retries. Subsequent retries shall not affect transmission deadline monitoring.] (SRS\_Com\_02037)

**[SWS\_Com\_00775]** [If ComRetryFailedTransmitRequests is set to True and a transmission deadline monitoring timeout occurs for an I-PDU, the AUTOSAR COM module shall expire any pending transmission request for this I-PDU.] (SRS\_Com\_02037)



**[SWS\_Com\_00776]** [The cycle timer for a cyclic transmission shall always start with the first transmit attempt.] (SRS\_Com\_02037)

## 7.3.4 Signal Invalidation

The AUTOSAR COM module provides the possibility for the sender to indicate that it is not able to provide a valid value for a corresponding signal, for example in case a sensor is faulty. The AUTOSAR COM module allows defining a ComSignalDataInvalidValue (ECUC\_Com\_00391) during configuration.

### 7.3.4.1 Transmission of an Invalidated Signal

**[SWS\_Com\_00099]** [By a call to Com\_InvalidateSignal, the AUTOSAR COM module shall perform internally a Com\_SendSignal with the configured ComSignalData-InvalidValue (ECUC\_Com\_00391).] (SRS\_Com\_02077)

The ComTransferProperty and the transmission mode determine the transmission of the ComSignalDataInvalidValue on the bus. The internally performed Com\_Send-Signal with the data invalid value leads to data invalid value to be used as current value for filters and TMS.

The data invalid values are configured per group signal see ECUC\_Com\_00520.

The VFB defines only one attribute for a complex data type. Therefore, the best mapping of an invalidated complex data type to an invalidated signal group is to invalidate all group signals of a signal group. Therefore, the RTE can also request to invalidate the complete signal group by a call to Com\_InvalidateSignalGroup (SWS Com 00557).

### 7.3.4.2 Reception of an Invalidated Signal

**[SWS\_Com\_00680]** [If the configured ComSignalDataInvalidValue (ECUC\_Com\_00391) is received for a signal and the ComDataInvalidAction (ECUC\_Com\_00314) is configured to **NOTIFY** for this signal, the AUTOSAR COM module shall notify the RTE via the configured ComInvalidNotification function (ECUC\_Com\_00315). In this case, no other signal processing like filtering or the normal signal indication shall take place.] (SRS\_Com\_02079)

The reception deadline monitoring timer is also restarted in case of receiving an invalid signal or signal group, see SWS\_Com\_00738.

**[SWS\_Com\_00681]** [If the configured ComSignalDataInvalidValue (ECUC\_Com\_00391) is received for a signal and the ComDataInvalidAction (ECUC\_Com\_00314) is configured to **REPLACE** for this signal, the AUTOSAR COM module shall replace the signal's value by its configured ComSignalInitValue (ECUC\_Com\_00170). After the replacement, the normal signal processing like filtering and notification shall take place as if the ComSignalInitValue would have been



received instead of the ComSignalDataInvalidValue.] (SRS\_Com\_02079, SRS\_Com\_02087)

**[SWS\_Com\_00682]** [If the configured ComSignalDataInvalidValue (ECUC\_Com\_00391) is received for at least one group signal of a signal group and the ComDataInvalidAction (ECUC\_Com\_00314) is configured to **NOTIFY** for this signal group, the AUTOSAR COM module shall notify the RTE via the configured ComInvalidNotification function (ECUC\_Com\_00315). In this case, no other signal group/ group signal processing like the normal indication shall take place.] (SRS\_Com\_02079)

[SWS\_Com\_00683] [If the configured ComSignalDataInvalidValue (ECUC\_Com\_00391) is received for at least one group signal of a signal group and the ComDataInvalidAction (ECUC\_Com\_00314), is configured to *REPLACE* for this signal group, the AUTOSAR COM module shall replace all group signals of this signal group by their configured ComSignalInitValue values. After the replacement, the normal signal group/ group signal processing like reception notification shall take place as if the ComSignalInitValue would have been received for all group signals.] (SRS\_Com\_02087)

**[SWS\_Com\_00717]** [If the configured ComSignalDataInvalidValue is received for a signal and its ComDataInvalidAction is configured to **NOTIFY**, the AUTOSAR COM module shall not store the received ComSignalDataInvalidValue into the signal object.] (SRS\_Com\_02079)

The next call to Com\_ReceiveSignal will return the last valid received signal or the ComSignalInitValue in case no signal was received yet respectively.

**[SWS\_Com\_00718]** [If the configured ComSignalDataInvalidValue is received for at least one group signal of a signal group and its ComDataInvalidAction is configured to **NOTIFY**, the AUTOSAR COM module shall not store any of the received group signals into the signal objects.] (SRS\_Com\_02079)

The next call to Com\_ReceiveSignalGroup will copy the last valid received group signals or the ComSignalInitValues in case the signal group was not received yet respectively into the shadow buffer.



## 7.3.5 Handling of I-PDUs

# 7.3.5.1 I-PDU Group Definitions

For an I-PDU group the following rules apply:

- 1. An I-PDU can belong to any I-PDU group.
- An I-PDU is active (started) if it belong to a started I-PDU group (see SWS\_Com\_00771) or it does not belong to any I-PDU group and it was started implicitly (see SWS\_Com\_00840).
- 3. The maximum number of I-PDU groups is pre-compile configurable.
- 4. I-PDU groups may contain only I-PDUs of the same direction (i.e. send or receive), see SWS\_Com\_00871.

Rules 1 and 3 are supported by the COM configuration. The maximum number of supported I-PDU groups can be configured via ComSupportedIpduGroups (ECUC\_Com\_00710).

[SWS\_Com\_00771] [An I-PDU is active (started) if at least one I-PDU group is active (started) it belongs to.| (SRS\_Com\_00218)

For the AUTOSAR COM module, the nesting of I-PDU groups is purely conceptual and must be resolved by an appropriate configuration and/ or usage of the AUTOSAR COM module.

For example, if an I-PDU "BUS1 RX Function1" belongs to I-PDU group "BUS1 RX" and I-PDU group "BUS1 RX" is included in I-PDU group "BUS1" then I-PDU "BUS1 RX Function1" must also be included in I-PDU group "BUS1". Such dependencies need to be resolved at configuration time.

Once again, the COM module does not know or handle any grouping of I-PDUs. Any I-PDU grouping must be handeld either via configuration or by the calling module.

Further, it is expected that the complete state handling of I-PDU groups is done outside of the AUTOSAR COM module, e.g. within the Basic Software Mode Manager. In case of a state change, the module managing the I-PDU group states consistently starts or stops the I-PDU groups via Com\_IpduGroupStart and Com\_IpduGroupStop.

The state of I-PDUs that are not assigned to any I-PDU group cannot be changed, therefore they are started implicitly:

**[SWS\_Com\_00840]** [If an I-PDU is not assigned to any I-PDU group, the AUTOSAR COM shall start this I-PDU within Com\_Init as if it would be started by Com\_IpduGroupStart with parameter Initialize set to true (see Chapter 7.3.5.2).] (SRS\_Com\_00218)

Since the AUTOSAR COM never stops such an I-PDU implicitely and it is not assigned to any I-PDU group, such an I-PDU can never be stopped.



### 7.3.5.2 Starting of I-PDU Groups

By default all I-PDU groups are stopped, see SWS\_Com\_00444. A call to Com\_lpdu-GroupStart starts an I-PDU group if it was previously stopped.

**[SWS\_Com\_00114]** [If an I-PDU is started by Com\_lpduGroupStart, the AUTOSAR COM module shall permit to transmit/ receive its signals and signal groups, see also Table 4.] (SRS\_Com\_00218)

**[SWS\_Com\_00787]** [If an I-PDU is started by Com\_IpduGroupStart, the AUTOSAR COM module shall always initialize the following attributes of this I-PDU:

- 1) ComMinimumDelayTime of I-PDUs in transmission mode *DIRECT* or *MIXED*
- 2) restart all reception deadline monitoring timers for all signals with a non-zero configured ComFirstTimeout
- cancel all transmission deadline monitoring timers and use ComFirstTimeout (if configured) as value when a transmission timer is started the first time after the I-PDU activation
- 4) all included update-bits shall be cleared
- 5) reset OCCURRENCE of filters with ComFilterAlgorithm ONE\_EVERY\_N
- 6) set the I-PDU counter to 0 for I-PDUs with ComIPduDirection configured to SEND
- 7) accept for I-PDUs with ComIPduDirection configured to *RECEIVED* any next incoming I-PDU counter| (SRS\_Com\_00218)

**[SWS\_Com\_00222]** [If an I-PDU is started by Com\_IpduGroupStart with parameter Initialize set to true, the AUTOSAR COM module shall additionally to SWS\_Com\_00787 initialize the following attributes of this I-PDU:

- 1) the data of the I-PDU as defined in SWS\_Com\_00217
- 2) the shadow buffers of included signal groups
- 3) old\_value of the filtering mechanisms for each signal to the ComSignalInit-Value
- ComTxModeTimePeriod and ComTxModeTimeOffset of I-PDUs in Periodic or MIXED transmission model (SRS\_Com\_00218)

**[SWS\_Com\_00223]** [If an I-PDU is started by Com\_IpduGroupStart, the AUTOSAR COM module shall determine its transmission mode according to its current data content.] (SRS\_Com\_00218)

**[SWS\_Com\_00228]** [In some cases, an I-PDU is started by Com\_ IpduGroupStart before all its contained signals have been written. In this case, the AUTOSAR COM module shall use the ComSignalInitValue for the missing signal data.] (SRS\_Com\_00218)

[SWS\_Com\_00229] [When an I-PDU is started and one or more signals in that I-PDU have already been written via one of the send APIs by the upper layer, the AUTOSAR COM module shall use the most recently obtained values to determine the TMS of the I-PDU.] (SRS\_Com\_00218)

[SWS\_Com\_00733] [If an I-PDU is started by Com\_IpduGroupStart and the I-PDU contains signals that have deadline monitoring configured (ECUC\_Com\_00183,



ECUC\_Com\_00263), the AUTOSAR COM module shall start the deadline monitoring for these signals independently of the value of the initialize parameter.] (SRS Com 00218)

Note, in case an I-PDU is started by Com\_IpduGroupStart and the parameter initialize is set to false, the internal buffers are not changed and the I-PDU contains the last the last set or init values. Particulary, if the I-PDU is started for the first time and initilaize is set to false, the COM operates on the init-values set by Com\_Init.

**[SWS\_Com\_00877]** [If an I-PDU is not part of any I-PDU Group, it is started during the initialization of COM. Its starting transmission mode shall be evaluated according to the ComSignalInitValue of the signals contributing to its TMS.] (SRS\_Com\_00218)

For this case, the evaluation can already be done at configuration time, since the signals cannot be written before the initialization of COM.

# 7.3.5.3 Stopping of I-PDU Groups

A call to Com IpduGroupStop stops an I-PDU group, if it was previously started.

In order to disable the transmission of an I-PDU, all I-PDU groups containing this I-PDU needs to be stopped. Hence, to implement *listen-only-mode*, all I-PDU groups containing transmission I-PDUs needs to be stopped. Receiving of I-PDUs may also be stopped.

**[SWS\_Com\_00334]** [By a call to the functions: Com\_SendSignal, Com\_SendSignalGroup, or Com\_InvalidateSignal, the AUTOSAR COM module shall update the values of its internal buffers even for stopped I-PDUs. See also Table 3.] (SRS\_Com\_00218)

If a signal written to a stopped I-PDU would trigger the transmission of this I-PDU if it were not stopped, then this trigger is not stored. After re-starting the corresponding I-PDU group, such an old trigger does not lead to an immediate transmission of the I-PDU.

**[SWS\_Com\_00777]** [If an I-PDU is stopped by Com\_IpduGroupStop, the AUTOSAR COM module shall cancel any outstanding transmission requests for this I-PDU. This includes cancelling any potential retries with respect to ComRetryFailedTransmitRequests.] (SRS\_Com\_00218)

**[SWS\_Com\_00115]** [If an I-PDU is stopped by Com\_IpduGroupStop, the AUTOSAR COM module shall cancel the deadline monitoring for all pending confirmations.] (SRS\_Com\_00218)

**[SWS\_Com\_00800]** [The AUTOSAR COM module shall ignore any transmit confirmations for a stopped I-PDU.] (SRS\_Com\_00218)



The AUTOSAR COM module cannot prohibit the invocation of the Com\_Trigger-Transmit function. However, in case of a stopped I-PDU, the function Com\_Trigger-Transmit returns E NOT OK. See SWS Com 00884.

**[SWS\_Com\_00684]** [If an I-PDU is stopped by Com\_lpduGroupStop, the AUTOSAR COM module shall disable its reception processing.] (SRS\_Com\_00218)

**[SWS\_Com\_00713]** [If a large I-PDU is stopped by Com\_lpduGroupStop, the AUTOSAR COM module shall stop the reception process and ignore the partly received I-PDU. | (SRS\_Com\_00218)

**[SWS\_Com\_00685]** [If an I-PDU is stopped by Com\_lpduGroupStop, the AUTOSAR COM module shall cancel its deadline monitoring.] (SRS\_Com\_00218)

**[SWS\_Com\_00479]** [If an I-PDU is stopped by Com\_IpduGroupStop, the AUTOSAR COM module shall immediately invoke the configured ComErrorNotification (ECUC\_Com\_00499), for outstanding not confirmed transmitted signals/ signal groups of the stopped I-PDU.| (SRS\_Com\_00218)

**[SWS\_Com\_00714]** [If a large I-PDU is stopped while its transmission is already in progress, the AUTOSAR COM module shall stop the transmission process immediately.] (SRS\_Com\_00218)

Table 3 gives an overview of the behavior of stopped I-PDUs:

Behavior of stopped I-PDUs			
Receiver side (RX)	Transmitter side (TX)		
<ul> <li>Disable RX deadline monitoring</li> <li>No action on a Com_RxIndication to RTE, no storing of the I-PDU</li> <li>Return code         COM_SERVICE_NOT_AVAILABLE on         Com_ReceiveSignal and         Com_ReceiveSignalGroup and the last         known value (or init value) is given back as         data</li> </ul>	<ul> <li>Disable sending</li> <li>Disable TX deadline monitoring</li> <li>Ignore Com_TxConfirmation:</li> <li>On a call of Com_SendSignal,         Com_SendSignalGroup, Com_InvalidateSignal         the values in the AUTOSAR COM module's internal buffers are still up-dated but the return         code COM_SERVICE_NOT_AVAILABLE is returned</li> <li>Outstanding transmission request (e.g. N-Times) will be cancelled</li> <li>Return code E_NOT_OK on         Com_TriggerTransmit</li> </ul>		
	For periodic (TX)		
	Do not send any more		

Table 3: Behavior of stopped I-PDUs

Table 4 gives an overview of the behavior of started I-PDUs:



Behavior of started I-PDUs			
Receiver side (RX)	Transmitter side (TX)		
<ul> <li>Reinitialize timeouts if Initialize==true (ComSignalFirstTimeout, ComSignal-Timeout)</li> <li>Normal reaction on Com_RxIndication/Com_TpRxIndication</li> <li>Normal reaction on Com_ReceiveSignal, and Com_ReceiveSignalGroup</li> </ul>	<ul> <li>Normal reaction on Com_InvalidateSignal, Com_SendSignal, and Com_SendSignalGroup</li> <li>No transmission timeout notification until next send</li> <li>Normal reaction on Com_TxConfirmation/ Com_TpTxConfirmation</li> <li>Normal reaction on Com_TriggerTransmit</li> </ul>		
	For periodic (TX)		
	Start at 0		

**Table 4 Behavior of started I-PDUs** 

## 7.3.5.4 Signal Indication (Unpacking of I-PDUs)

In order to support both interrupt-driven and polled systems, it can be configured when the signal indication takes place. There are two configurable signal indication modes *IMMEDIATE* and *DEFERRED* configurable via ComIPduSignalProcessing. See ECUC\_Com\_00119.

**[SWS\_Com\_00300]** [If ComIPduSignalProcessing for an I-PDU is configured to *IM-MEDIATE*, the AUTOSAR COM module shall invoke the configured ComNotifications for the included signals and signal groups within the Com\_RxIndication, or Com\_TpRxIndication function respectively.] (SRS\_Com\_02046)

**[SWS\_Com\_00301]** [If ComIPduSignalProcessing for an I-PDU is configured to *DE-FERRED*, the AUTOSAR COM module shall first copy the I-PDU's data within the Com\_RxIndication function or the related TP reception functions respectively from the PduR into COM. Then the AUTOSAR COM module shall invoke the configured ComNotifications for the included signals and signal groups asynchronously during the next call to Com\_MainFunctionRx.| (SRS\_Com\_02046)

If in *DEFERRED* mode a call to Com\_ReceiveSignal is made before the deferred unpacking takes place, the previous not updated values are returned.

A sequence chart with both indication options can be found in Chapter 9.3. The configuration of these modes is defined in ECUC Com 00119.

[SWS\_Com\_00574] [When unpacking an I-PDU, the AUTOSAR COM module shall check the received data length (PduInfoPtr->SduLength) and unpack and notify only completely received signals via ComNotification.] (SRS\_Com\_02046)

**[SWS\_Com\_00870]** [In case of receiving a smaller I-PDU than the length derived via the parameter ComPduldRef, signals with size 0 shall be received if and only if their configured position is less or equal to the received size of the partially received I-PDU.] (SRS\_Com\_02046)



**[SWS\_Com\_00794]** [In case of receiving of a smaller I-PDU than expected results into receiving a signal without its configured update-bit, the AUTOSAR COM module shall treat this signal as if its update bit was set and interpret such a signal as updated.] (SRS\_Com\_02046)

If the received I-PDU length is smaller than the configured/ expected I-PDU length, it needs to be prevented that signals are updated partially. On the other hand all completely received signals should be received and notified to the upper layer.

**[SWS\_Com\_00575]** [When unpacking an I-PDU, the AUTOSAR COM module shall check the received data length (PduInfoPtr->SduLength) and in case a signal group is received only partially, such a signal group and all included group signals shall not be unpacked or notified via ComNotification.] (SRS\_Com\_02046)

The above requirement prevents inconsistently received signal groups and therefore inconsistently received complex data types.

The AUTOSAR COM module does not copy or handle additional received data for not configured signals in case the received data length is greater than expected.

## 7.3.5.5 Minimum Delay Timer (MDT)

The AUTOSAR COM module inherits the minimum delay timer mechanism as defined [17]. This mechanism is clarified and detailed in this chapter.

When an I-PDU is started, the MDT is re-initialized. Therefore, the MDT can be violated by stopping and starting I-PDUs rapidly.

The behavior of the transmission deadline monitoring timer is not affected by any transmission delay caused by the minimum delay time supervision.

[SWS\_Com\_00471] [No minimum delay time monitoring shall take place, if ComMinimumDelayTime is omitted or configured to 0.] (SRS Com 02037)

**[SWS\_Com\_00789]** [If ComEnableMDTForCyclicTransmission (ECUC\_Com\_00788) is configured to false, the minimum delay timer shall not be (re)started in the following cases:

- I-PDUs with ComTxModeMode PERIODIC
- the cyclic part of I-PDUs with ComTxModeMode MIXED
- repeated transmissions for I-PDUs in case ComTxModeNumberOfRepetitions > 0

(SRS\_Com\_02037)

In case the minimum delay timer is currently not started, there is no way for the minimum delay timer to expire. Thus, optimized implementations might for example omit monitoring the minimum delay time for periodic I-PDUs completely in case ComEnableMDTForCyclicTransmission is configured to false, since the minimum delay timer never gets started.



**[SWS\_Com\_00698]** [If ComMinimumDelayTime of an I-PDU is configured greater than 0 and ComRetryFailedTransmitRequests is set to *FALSE*, the AUTOSAR COM module shall load and start the minimum delay time counter upon transmission of that I-PDU to the PDU Router via PduR\_ComTransmit.] (SRS\_Com\_02037)

**[SWS\_Com\_00828]** [If ComMinimumDelayTime of an I-PDU is configured greater than 0 and ComRetryFailedTransmitRequests is set to *TRUE*, the AUTOSAR COM module shall load and start the minimum delay time counter upon transmission of that I-PDU to the PDU Router via PduR\_ComTransmit only in case PduR\_ComTransmit returns E\_OK.| (SRS\_Com\_02037)

**[SWS\_Com\_00469]** [If ComMinimumDelayTime of an I-PDU is configured greater than 0, the AUTOSAR COM module shall (re-)load an already running and not yet elapsed minimum delay time counter of that I-PDU with ComMinimumDelayTime on a successful transmit confirmation.] (SRS\_Com\_02037)

The running minimum delay timer is reloaded upon the reception of a successful TX-confirmation of that I-PDU, unless the transmission was already delayed longer than ComMinimumDelayTime at the reception of the confirmation. In normal case, there will be no further transmission of that I-PDU by the AUTOSAR COM module unless the loaded and started minimum delay has expired. See also Figures 2-4, 2-5 and 2-7 in [17]. However, some exception exists: According to SWS\_Com\_00475 Com\_TriggerTransmit does not interfere with the minimum delay timer. Further, the minimum delay timer is reset if the transmission deadline monitoring timer expires; see Chapter 2.3.4 in [17]. In addition, starting an I-PDU group resets the minimum delay time timer of the included I-PDUs.

**[SWS\_Com\_00812]** [If the minimum delay timer of an I-PDU is reset because the transmission deadline monitoring timer expires and a postponed request for this I-PDU exists, the AUTOSAR COM module shall immediately transmit this I-PDU.] (SRS\_Com\_02037)

### 7.3.6 Deadline Monitoring

Deadline monitoring for signals is defined in [17].

In the context of deadline monitoring for a signal group, it is handled like a signal. The deadline monitoring parameters ComFirstTimeout and ComTimeout can be defined in the configuration container ComSignal or ComSignalGroup.

The corresponding timeout notification callback functions can be defined in parameter ComTimeoutNotification in the configuration container ComSignal or ComSignal-Group.

**[SWS\_Com\_00333]** [If the configuration parameter ComTimeout for a signal or signal group is omitted or configured to 0, the AUTOSAR COM module shall not monitor this signal or signal group. It also shall ignore the ComFirstTimeout.] (SRS\_Com\_02089)



### 7.3.6.1 Reception Deadline Monitoring

The reception deadline monitoring can be enabled and disabled by the control of I-PDU groups analogous to Chapter 7.3.5.1.

**[SWS\_Com\_00772]** [The reception deadline monitoring of an I-PDU is enabled if and only if it is contained in an I-PDU group that has reception deadline monitoring enabled. Otherwise, the reception deadline monitoring of the I-PDU is *disabled*.] (SRS\_Com\_00192)

[SWS\_Com\_00292] [In the case where reception deadline monitoring is configured for signals with update-bits, the AUTOSAR COM module shall perform a separate reception deadline monitoring for each signal/ signal group with an update-bit. For configuration of ComTimeout, see ECUC\_Com\_00263.] (SRS\_Com\_02089, SRS\_Com\_02058)

**[SWS\_Com\_00290]** [The AUTOSAR COM module shall perform an I-PDU based reception deadline monitoring for signals without an update-bit.] (SRS\_Com\_02089, SRS\_Com\_02058)

[SWS\_Com\_00291] [For all signals and signal groups without update-bits within the same I-PDU, the AUTOSAR COM module shall perform the reception deadline monitoring of the I-PDU using the smallest configured non-zero timeout parameter (Com-FirstTimeout, ComTimeout) of all these signals and signal groups which do not have an update-bit configured.] (SRS\_Com\_02089, SRS\_Com\_02058)

If all signals within an I-PDU with configured reception deadline monitoring have also an update-bit configured, no reception deadline monitoring on I-PDU base needs to be performed.

In case of an Rx-timeout, the ComRxDataTimeoutAction parameter determines whether the AUTOSAR COM module replaces the signal/ signal group value with the initial value or substitute value or maintains the last received value. See ECUC Com 00412.

**[SWS\_Com\_00470]** [If ComRxDataTimeoutAction is set to *REPLACE* (see ECUC\_Com\_00412), the AUTOSAR COM module shall replace the signal's value by its ComSignalInitValue (see ECUC\_Com\_00170) when the reception deadline monitoring timer of a signal expires.] (SRS Com\_02087, SRS Com\_02088)

In case the ComSignalInitValue replaces the last received value, the last received value is overwritten and gets lost. Therefore, the AUTOSAR COM module returns the ComSignalInitValue for this signal until a new value is received.

**[SWS\_Com\_00875]** [If ComRxDataTimeoutAction is set to SUBSTITUTE (see ECUC\_Com\_00412), the AUTOSAR COM module shall replace the signal's value by its ComTimeoutSubstitutionValue (see ECUC\_Com\_10006) when the reception deadline monitoring timer of a signal expires.] (SRS Com\_02088)



**[SWS\_Com\_00500]** [If the reception deadline monitoring timer of a signal or signal group expires and the configuration parameter ComRxDataTimeoutAction for this signal or signal group is either omitted or configured to *NONE*, the AUTOSAR COM module shall not replace the signal or the signals of the signal groups respectively.] (SRS\_Com\_02087)

**[SWS\_Com\_00513]** [If ComRxDataTimeoutAction is set to *REPLACE* (see ECUC\_Com\_00412), the AUTOSAR COM module shall replace the values of all included group signals by their ComSignalInitValues (see ECUC\_Com\_00170), when the reception deadline monitoring timer of a signal group expires.] (SRS\_Com\_02041)

The Rx-timeout-indication can be combined and configured separately from ECUC Com 00412.

**[SWS\_Com\_00876]** [If ComRxDataTimeoutAction is set to SUBSTITUTE (see ECUC\_Com\_00412), the AUTOSAR COM module shall replace the values of all included group signals by their ComTimeoutSubstitutionValue (see ECUC\_Com\_10006), when the reception deadline monitoring timer of a signal group expires.] (SRS\_Com\_02088)

**[SWS\_Com\_00715]** [When a (large) I-PDU with a configured reception deadline monitoring is received successfully, the AUTOSAR COM module shall reset the reception deadline monitoring timer for this (large) I-PDU at invocation of the function Com\_RxIndication or Com\_TpRxIndication respectively.] (SRS\_Com\_02058)

**[SWS\_Com\_00716]** [If the configuration parameter ComFirstTimeout for a signal or signal group is omitted or configured to 0, the AUTOSAR COM module shall not monitor the reception of this signal or signal group respectively from the start of the corresponding I-PDU until the first reception.] (SRS\_Com\_02058)

[SWS\_Com\_00738] [The I-PDU based reception deadline monitoring mechanism shall not take the values of the signals into account.] (SRS\_Com\_02089)

### 7.3.6.1.1 En-/Disable Reception Deadline Monitoring

When reception deadline monitoring of an I-PDU is disabled and the timer expires, no error indication will be given to the RTE.

Disabling reception deadline monitoring does not stop the reception of an I-PDU.

[SWS\_Com\_00224] [If the reception deadline monitoring of an I-PDU is enabled by Com\_EnableReceptionDM, the AUTOSAR COM module shall set the reception deadline monitoring timer for the included signals and signal groups to the configured ComFirstTimeout value.] (SRS\_Com\_00192)

[SWS\_Com\_00486] [The AUTOSAR COM module shall silently ignore setting the reception deadline monitoring of an I-PDU to enabled by Com\_EnableReceptionDM,



in case the reception deadline monitoring is already enabled for this I-PDU.] (SRS\_Com\_00192)

Enabling reception deadline monitoring implies that timeout notifications of deadline monitoring expiry are notified to the RTE for signals or signal groups with a configured ComTimeoutNotification (ECUC\_Com\_00552).

**[SWS\_Com\_00534]** [If Com\_EnableReceptionDM or Com\_DisableReceptionDM is invoked on an I-PDU group containing Tx-I-PDUs, then the AUTOSAR COM module shall silently ignore this request.] (SRS\_Com\_00192)

**[SWS\_Com\_00225]** [The AUTOSAR COM module shall silently ignore setting the reception deadline monitoring of an I-PDU to disabled by Com\_DisableReceptionDM, in case the reception deadline monitoring is already disabled for this I-PDU.] (SRS\_Com\_00192)

### 7.3.6.2 Transmission Deadline Monitoring

The general idea of the AUTOSAR COM transmission deadline monitoring is to supervise the lower layers and the bus but not the COM module itself. Hence, the transmission monitoring timer is generally started, when the COM module sends an I-PDU to the lower layer. This is independent of a transmission mode, a transfer property or update-bits. In generally the transmission monitoring timer is not restarted or reset if it is currently running.

**[SWS\_Com\_00481]** [The AUTOSAR COM module shall perform the transmission deadline monitoring (if configured) for all signals and signal groups independently from the transfer property and independently from the transmission modes of the I-PDU the signal / signal group belongs to.] (SRS Com 02037)

The AUTOSAR COM module makes no distinction between signals with ComTransferProperty *PENDING* or *TRIGGERED* with respect to transmission deadline monitoring.

**[SWS\_Com\_00445]** [If different ComTimeout parameters of the associated signals/ signal groups of an I-PDU are configured, the AUTOSAR COM module shall use the smallest value as timeout parameter for the transmission deadline monitoring of the I-PDU.] (SRS\_Com\_02037)

Transmission deadline monitoring should only be configured in the AUTOSAR COM module for busses that support the generation of transmit confirmations. Otherwise, the transmission deadline monitoring would always notify a transmission error.

[SWS\_Com\_00878] [The AUTOSAR COM shall start a configured transmission deadline monitoring timer of a signal (group) if it is sent (within an I-PDU) to the lower layer, unless the timer is already running.] (SRS\_Com\_02037)

SWS\_Com\_00878 does not consider a potential return code, thus the timer is started even if the sent request fails immediately.



If the timer is already running a new send request does not reset or restart a running timer, but the currently outstanding send request is monitored further on. Unless otherwise specified, the timer is started regardless of the trigger that lead to a potential I-PDU send request. Such triggers are for example a cyclic send request of a signal, a Transmission Mode Switch, or an explicit I-PDU sent request via Com\_TriggerIPduSend.

**[SWS\_Com\_00879]** [The transmission deadline monitoring timer shall be started with the configured ComFirstTimeout value if the timer is started for the first time after a (re-)start of the transmission deadline monitoring service for this I-PDU, otherwise the timer shall be started with ComTimeout value.] (SRS\_Com\_02037)

[SWS\_Com\_00880] [When the AUTOSAR COM receives a transmit confirmation for an I-PDU, it shall cancel all running transmission deadline monitoring timers for all contained signals and signal groups.] (SRS\_Com\_02037)

**[SWS\_Com\_00696]** [In case transmission deadline monitoring is configured for an I-PDU with transmission mode *NONE* only, the AUTOSAR COM module shall start the transmission deadline monitoring timer for this I-PDU upon the start of the I-PDU group to which the I-PDU belongs to.] (SRS\_Com\_02037)

**[SWS\_Com\_00835]** [In case transmission deadline monitoring is configured for an I-PDU with transmission mode *NONE* and another transmission mode, the transmission deadline monitoring shall be disabled whenever the transmission mode *NONE* is active.] (SRS\_Com\_02037)

**[SWS\_Com\_00697]** [In case transmission deadline monitoring is configured for an I-PDU with transmission mode *NONE* only, the AUTOSAR COM module shall reset the transmission deadline monitoring timer for this I-PDU when a successful transmit confirmation is received.] (SRS Com 02037)

In case of a signal group, it is only possible to configure transmission deadline monitoring for the whole signal group and not for group signals, see ECUC\_Com\_00345 and ECUC Com\_00520.

**[SWS\_Com\_00708]** [In case the transmission deadline monitoring timer expires for an I-PDU with ComIPduCancellationSupport configured to *TRUE*, the AUTOSAR COM module shall invoke PduR\_ComCancelTransmit for that I-PDU.] (SRS Com 02107)

The invocation of PduR\_ComCancelTransmit is done in addition to the normal timeout handling of Com, which notifies the SW-C, if configured.

The AUTOSAR COM ignores the return code of PduR ComCancelTransmit.

**[SWS\_Com\_00304]** [When a transmission deadline monitoring timer elapses, that is there was no successful transmit confirmation for an I-PDU in time, the AUTOSAR COM module shall notify the RTE by invoking all configured ComTimeoutNotifications for contained signals or signal groups, see ECUC\_Com\_00552.] (SRS\_Com\_02037)



If the transmission deadline monitoring timer runs out, there will be a timeout notification regardless of the reason. For example, the notification will even take place, if the transmission was filtered out by an I-PDU callout.

# 7.3.6.2.1 Transmission Deadline Monitoring with N-Times Transmission Mode

As defined in [17] the monitoring timer has to be started upon completion of a call to Com\_SendSignal or Com\_SendSignalGroup respectively if transmission deadline monitoring is configured for the corresponding signal or signal group respectively.

For the transmission mode *DIRECT* and *MIXED*, it should be ensured that all ComTxModeNumberOfRepetitions requests could be made within the configured period (see Chapter 7.3.3.4).

As defined in [17], if the monitoring timer expires the RTE is notified with the configured notification mechanism about that failure.

**[SWS\_Com\_00308]** [For an I-PDU with ComTxModeMode *DIRECT* and ComTx-ModeNumberOfRepetitions > 0, the AUTOSAR COM module shall cancel the transmission deadline monitoring timer after *ComTxModeNumberOfRepetitions plus one* successfully received transmit confirmations.] (SRS\_Com\_02083)

If the timer is cancelled after *ComTxModeNumberOfRepetitions plus one* confirmations, the transmission was successful and then the transmission confirmation is sent to the RTE. See also SWS\_Com\_00305.

**[SWS\_Com\_00739]** [For an I-PDU with ComTxModeMode DIRECT and ComTx-ModeNumberOfRepetitions > 0, the AUTOSAR COM module shall reset an already running transmission deadline monitoring timer in case another send request for this I-PDU is initiated.] (SRS Com 02083)

#### 7.3.7 Notification handling

The AUTOSAR COM inherits the notification classes 1,2,3 and 4 of [17]. The notifications are configurable via ComNotification and the definitions of the callbacks are given in Chapter 8.6.3.1.

[SWS\_Com\_00883] [ If a ComNotification is configured for a signal or signal group, the AUTOSAR COM shall indicate each successful transmission via the configured notification.] (SRS\_Com\_02046)

For example, for periodic transmissions each successful periodic transmission is notified. Note that for n-times transmission multiple transmissions on the bus are necessary before it is considered as successful, see also SWS\_Com\_00305.



# 7.4 Signal Groups - Complex Data Types

To support the AUTOSAR concept of complex data types the AUTOSAR COM module provides signal groups. The AUTOSAR COM module transmits and receives signal groups consistently to provide the necessary consistency for complex data types.

Signal groups can be configured statically. For each signal group a symbolic name can be configured. See ECUC\_Com\_00345 for the configuration details.

The AUTOSAR COM module achieves the consistency of a signal group by means of a shadow buffer mechanism, i.e. the RTE accesses the group signals in the shadow buffer. If the shadow buffer needs to be synchronized with the I-PDU, the RTE can trigger this explicitly with Com\_SendSignalGroup or Com\_ReceiveSignalGroup. The synchronization is performed atomically.

An alternative approach to signal group consistency is to enable the signal group array APIs Com\_SendSignalGroupArray (SWS\_Com\_00851) and Com\_ReceiveSignalGroupArray (SWS\_Com\_00854). The deviations of this approach are described in Chapter 7.4.6.

#### 7.4.1 Initialization

**[SWS\_Com\_00484]** [By a call to Com\_Init, the AUTOSAR COM module shall initialize the shadow buffer of a signal group on sender-side.] (SRS\_BSW\_00101)

Since it is not suspected that a well-formed SWC tries to read a group signal before a call to Com\_ReceiveSignalGroup, SWS\_Com\_00484 applies to the sender side only.

#### 7.4.2 Transmission

If Com\_SendSignal or Com\_InvalidateSignal is called for a signal that belongs to a signal group, then the AUTOSAR COM will only update the shadow buffer of this signal group. There is no need for any further I-PDU processing like TMS evaluation, unless the I-PDU contents changed.

**[SWS\_Com\_00050]** [If Com\_SendSignalGroup is called for the signal group, the AUTOSAR COM module shall copy the shadow buffer atomically to the I-PDU buffer.] (SRS\_Com\_02041)



Example with two group signals signal\_a and signal\_b, which belong to group\_x:

```
/* copy a to shadow buffer */
Com_SendSignal (signal_a, &a);

/* copy b to shadow buffer */
Com_SendSignal (signal_b, &b);

/* copy shadow buffer to I-PDU */
Com_SendSignalGroup (group_x);
```

### 7.4.3 Reception

A group signal can be received from the shadow buffer by calling the function Com\_ReceiveSignal after the signal group data has been copied to the shadow buffer by Com\_ReceiveSignalGroup.

**[SWS\_Com\_00051]** [If Com\_ReceiveSignalGroup is called for a signal group, the AUTOSAR COM module shall copy the data atomically from the I-PDU buffer to the shadow buffer.] (SRS Com\_02041)

Example with two group signals signal\_a and signal\_b, which belong to group\_x:

```
/* copy I-PDU to shadow buffer */
Com_ReceiveSignalGroup (group_x);
/* copy a from shadow buffer */
Com_ReceiveSignal (signal_a, &a);
/* copy b from shadow buffer */
Com_ReceiveSignal (signal_b, &b);
```

#### 7.4.4 Notifications

Table 5 shows that all notification functions are only configurable for signal groups but not for individual group signals. Chapter 7.3 defines the functional logic of the notification methods for signals and signal groups. The prototypes for the configurable notification functions are defined in Chapter 8.6.3.1.



## 7.4.5 Attributes of a Signal Group

Table 5 gives an overview of the attributes of a signal group:

Attribute	Per group signal	Per signal group
Update-bit	No	Yes, associated on the whole group (see Chapter 7.9)
Signal Notification (sender side)	No	Yes
Signal Notification (receiver side)	No	Yes
Error Notification (sender side)	No	Yes
Timeout Notification (sender side)	No	Yes
Timeout Notification (receiver side)	No	Yes
Invalid Notification (receiver side)	No	Yes
Data access (receiver side)	Yes	Yes, see SWS_Com_00201
Data access (sender side)	Yes	Yes, see SWS_Com_00200, SWS_Com_00557
Data Filtering (receiver side)	Yes, see Chapter 7.2.4	No
Data Filtering (sender side)	No	No
TMS on sender side	Each signal, according to TMS selection definition. (see Chapter 7.3.3.2)	No

Table 5: Attributes of signal groups

### 7.4.6 UINT8-array based access to signal groups

An alternative approach to signal group consistency is to enable the signal group array APIs Com\_SendSignalGroupArray (SWS\_Com\_00851) and Com\_ReceiveSignalGroupArray (SWS\_Com\_00854) via the COM configuration parameter ComSignalGroupArrayAccess (ECUC\_Com\_10003). The serialization of the composite data is then done outside of the COM module but resulting in the same layout as COM would use to place the group signals in the I-PDU.

In this approach, no shadow buffer is used. The serialized data is directly provided to the COM module as a uint8-array representation of the signal group.

**[SWS\_Com\_00841]** [The UINT8-array based access to signal groups shall only be used if the following preconditions apply:

- uses only fix sized data types for the composite data
- signal groups, which are mapped byte aligned to the I-PDU
- signal groups, where the underlying byte array does not contain any other signals, but may contain gaps.

| (SRS\_Com\_02112)

[SWS\_Com\_00842] [In case a signal group has ComSignalGroupArrayAccess (ECUC\_Com\_10003) defined, no shadow buffer shall be allocated for that signal group.] (SRS\_Com\_02112)



**[SWS\_Com\_00843]** [In case a signal group has ComSignalGroupArrayAccess (ECUC\_Com\_10003) defined, the call to the following APIs is not supported for that signal group:

- Com\_SendSignal and Com\_ReceiveSignal for any of the group signals of that signal group
- Com\_SendSignalGroup and Com\_ReceiveSignalGroup for that signal group I (SRS\_Com\_02112)

The above requirement defines that certain APIs are not supported for signal groups with array access. That is, these APIs must not be called for signal groups with array access. If they are called illegally, the behavior is undefined.

Since the signal group is provided in the uint8-array representation, reception filtering and transmission mode selection needs to cope with this data representation when evaluating the group signals.

In order to ease the filter evaluation only a subset of the filters from SWS\_Com\_00602 is supported.

For signal group array access the following two filters are excluded from reception filtering and Transmission Mode Selection:

- NEW IS WITHIN
- NEW\_IS\_OUTSIDE

**[SWS\_Com\_00848]** [The signal group array processing functions Com\_SendSignal-GroupArray and Com\_ReceiveSignalGroupArray shall support the following filters for reception filtering and Transmission Mode Selection:

- ALWAYS
- NEVER
- MASKED\_NEW\_EQUALS\_X
- MASKED NEW DIFFERS X
- MASKED NEW DIFFERS MASKED OLD
- ONE\_EVERY\_N

| (SRS\_Com\_02112)

# 7.4.6.1 Basic functionality

In case the AUTOSAR Transformer approach is used the serialization and further data processing is already done in the transformer chain. Since the transformer chain already deals with a uint8-array representation of the communication data, the uint8-array based access to signal groups allows to use the already serialized data and to place it into the I-PDU without the need for COM to serialize the data again.

The AUTOSAR System Template [12] defines which signal group shall be handled in the uint8-array based approach. If the System Template enables the uint8-array based approach the Ecu configuration parameter ComSignalGroupArrayAccess (ECUC\_Com\_10003) is set to true.



[SWS\_Com\_00844] [The start position of the uint8-array representation of the communication data shall be the byte offset of the group signal in this signal group with the smallest ComBitPosition.] (SRS\_Com\_02112)

**[SWS\_Com\_00845]** [The end position of the uint8-array representation of the communication data shall be the byte offset of the last byte occupied by the group signal in this signal group with the highest ComBitPosition.] (SRS\_Com\_02112)

#### 7.4.6.2 Initialization

**[SWS\_Com\_00850]** [By a call to Com\_Init, the AUTOSAR COM module shall initialize the respective I-PDU buffer section of a signal group, that has ComSignalGroupArrayAccess (ECUC\_Com\_10003) configured *true*, based on the ComSignalInitValue of all included ComGroupSignals.] (SRS\_Com\_02112, SRS\_BSW\_00101)

#### 7.4.6.3 Transmission

**[SWS\_Com\_00846]** [When Com\_SendSignalGroupArray is called a data pointer to the uint8-array representation of the signal group is provided. The AUTOSAR COM module shall copy the data into the I-PDU based on the start position defined in SWS\_Com\_00844 and the size defined in SWS\_Com\_00845.] (SRS\_Com\_02112)

**[SWS\_Com\_00847]** [The AUTOSAR COM module shall handle a call of Com\_SendSignalGroupArray equally to Com\_SendSignalGroup with respect to

- Chapter 7.3.3.1.2 Signal Groups (Transfer Properties and I-PDU Transmission Mode)
- Chapter 7.3.3.2 Selection of the Transmission Mode for one specific I-PDU
- Chapter 7.3.3.3 Signal Flow and Transmission Mode Selection

I (SRS Com 02112)

#### 7.4.6.4 Reception

[SWS\_Com\_00849] [When Com\_ReceiveSignalGroupArray is called a data pointer to the uint8-array representation of the signal group is provided. The AUTOSAR COM module shall copy the data to the data pointer position of the I-PDU based on the start position defined in SWS\_Com\_00844 and the size defined in SWS\_Com\_00845.] (SRS\_Com\_02112)

# 7.5 Large Data Types

A *large signal* is a signal that is too large to fit into a single L-PDU of the underlying communication protocol. For example, a large signal on CAN would exceed 8 bytes or 64 bytes for CAN FD. For FlexRay the situation is more complex, since one frame can contain several I-PDUs. Hence, a signal may be a large signal for FlexRay even if it does not exceed the size of a FlexRay frame.



Large signals in AUTOSAR require configuring a *large I-PDU* that will be transmitted via the transport protocol of the underlying bus. It is not imperative that a large I-PDU contains one or more large signals.

Using this concept the I-PDU length and hence the signal size will is limited according to the bus-specific transport protocol, see ECUC\_Com\_00437.

UINT8\_N is the only signal type that supports signals of a static size larger than 8 bytes. For dynamic length signals see Chapter 7.6.

Since the AUTOSAR COM module is not aware of the underlying bus properties, it has to be configured if an I-PDU can be transmitted within a single L-PDU, e.g. one CAN frame, or if it needs to be transmitted via TP, see also ECUC\_Com\_00761.

The AUTOSAR COM module is not able to prevent or to detect if too large I-PDUs are sent to a specific bus transport protocol, because the AUTOSAR COM module uses the bus-independent PDU Router interface. However, the AUTOSAR COM module allows that the maximum length of the N-SDU of the underlying TPs can be used and therefore the AUTOSAR COM module does not introduce any additional length restrictions.

# 7.5.1 Transmission of Large Signals/ I-PDUs

The AUTOSAR COM module sends large I-PDUs via the generic PduR APIs for upper layer modules that use transport protocol. For details of the AUTOSAR COM module – PDU Router interface see Chapter 7.8. According to [10] the call-sequence is:

- PduR ComTransmit: for initiating the send request
- one or more callbacks to Com\_CopyTxData: for copying the data
- callback to Com\_TpTxConfirmation: for confirming the transmission

[SWS\_Com\_00662] [After successful initiation of a transmission of a large I-PDU via PduR\_ComTransmit, the AUTOSAR COM module shall not modify the data of its internal transmit buffer of this I-PDU unless the AUTOSAR COM module is notified about either the successful transmission or an error indicating that the transmission was aborted.] (SRS\_Com\_02095)

The I-PDUs within the AUTOSAR COM module are statically configured. Therefore, the complete memory of the I-PDU, even for very large I-PDUs, will be allocated. This approach was taken in order to reduce the complexity of the large data type handling.

If the utilized transportation protocol is also used for diagnosis, or other services, it must support multiple users. This is at least supported by CAN TP and FlexRay TP.

**[SWS\_Com\_00863]** [In case a large I-PDU is currently transmitted and the same I-PDU is triggered for transmission again, the AUTOSAR COM shall skip the additionally send request and report the runtime error COM\_E\_SKIPPED\_TRANSMISSION.] (SRS\_Com\_02095)



This could for example happen in case a large I-PDU is sent out periodically and the transmission is delayed over the next cycle.

### 7.5.2 Reception of Large Signals/ I-PDUs

The AUTOSAR COM module receives large I-PDUs via the generic PDU Router's APIs for upper layer modules that use transport protocol. For details of the AUTOSAR COM module – PDU Router interface see Chapter 7.8. According to [10] the call-sequence is:

- call to Com\_StartOfReception: for initiating the RX request
- one or more callbacks to Com\_CopyRxData: copying the receive data to the AUTOSAR COM module's internal receive buffer
- call to Com\_TpRxIndication: indicating the correct, or incorrect, end of the reception process

**[SWS\_Com\_00838]** [In case Com\_TpRxIndication is called with value E\_NOT\_OK for the parameter result, the AUTOSAR COM module shall treat all signals of the received large I-PDU exactly like invalidated signals. That is, the AUTOSAR COM module shall execute all configured ComDataInvalidActions for all included signals and signal groups.] (SRS\_Com\_02095)

When receiving large I-PDUs the internal I-PDU buffer is overwritten gradually. Thus, unless the old signal is not stored somewhere else (for example in a shadow buffer of a signal group), the COM module runs the risk to lose signal data information that might be needed in certain scenarios, for example:

- receiving a signal with an unset update-bit
- providing the last value in case the RX-filter is not passed
- providing the last value in case there is only an invalid notification (but no replacement) is defined and the invalid value is received

**[SWS\_Com\_00882]**[ If the AUTOSAR COM module receives signals via large I-PDUs and these signals have features configured that need to keep the old value in certain cases, the AUTOSAR COM module shall correctly provide the old value for signals received via a large I-PDU in the same way as for signals received via normal I-PDUs.] (SRS Com 02041)

It is open to the implementation to find efficient means for providing the old values and to derive from the configuration, which signals or I-PDUs need an additional handling (e.g. buffering).

This does not mean it is necessary to implement a queue.

# 7.6 Dynamic Length Signals

A **dynamic length signal** is a signal which length can vary at run-time. The maximal length of a dynamic length signal needs to be specified at configuration time. A dynamic length signal has to be transmitted in a **dynamic length I-PDU**.



**[SWS\_Com\_00753]** [For dynamic length signals, the AUTOSAR COM module shall only support the ComSignalType *UINT8\_DYN*.] (SRS\_Com\_02094, SRS\_Com\_02098)

Restricting the type to a UINT8-array type also restricts the placement of the dynamic length signal to byte boundaries.

All other signals, potentially including large signals, must be packed in front of the dynamic length signal (see SWS\_Com\_00754, SWS\_Com\_00755 and SWS\_Com\_00756). Therefore, it is not required to encode the length of the dynamic length signal within the I-PDU. On receiver side, the length of the dynamic length signal can be calculated from the length of the received I-PDU.

It is allowed to configure an update-bit for a dynamic length signal. In this case, the update-bit must be located in front of the dynamic length signal, see also SWS Com 00755.

There is no restriction in the AUTOSAR COM module preventing the usage of signal groups in combination with large or dynamic length signals.

Dynamic length signals are not restricted to be sent via transport protocol. However, the maximum length of the I-PDU containing the dynamic length signal must respect the bus-specifc restrictions.

In case of I-PDUs with dynamic length signals that shall be sent via CAN FD it is recommended to use the Multi PDU Mapping feature of the IpduM. This avoids misinterpretation of the received length due to the discrete data lengths of CAN FD frames.

### 7.6.1 Transmission of Dynamic Length Signals/ I-PDUs

For sending a dynamic length signal, the RTE needs to specify the actual length at the send call. The corresponding API is Com\_SendDynSignal (SWS\_Com\_00627).

**[SWS\_Com\_00757]** [At a call to Com\_SendDynSignal, the AUTOSAR COM module shall set the length of the corresponding dynamic length I-PDU to the smallest length that includes the dynamic length signal. The length of the dynamic signal shall be equal to the value of input parameter "Length" passed in the API Com\_SendDynSignal.| (SRS\_Com\_02093)

The AUTOSAR COM module is able to send dynamic length I-PDUs via normal or large I-PDUs. In any case, it needs to pass the length of the dynamic I-PDU to the lower layers.

**[SWS\_Com\_00832]** [When the AUTOSAR COM module invokes PduR\_ComTransmit for a dynamic length I-PDU, the SduLength of the PduInfoType shall be set according the last update (or init value if not yet sent) of the included dynamic length signal.] (SRS\_Com\_02093)



## 7.6.2 Reception of Dynamic Length Signals/ I-PDUs

For receiving a dynamic length signal, the RTE needs to be informed about the actual size.

**[SWS\_Com\_00758]** [At reception of a dynamic length I-PDU, the AUTOSAR COM module shall calculate the length of the contained dynamic length signal, by:

<dynamic signal length in bytes> = <received I-PDU length in bytes>

- < ComBitPosition of dynamic length signal > / 8

| (SRS\_Com\_02093)

Com\_ReceiveDynSignal (SWS\_Com\_00690) returns the length of a dynamic length signal, calculated as defined by SWS\_Com\_00758.

Since, the length of a dynamic length signal is derived from the received length of the I-PDU, the AUTOSAR COM module does not support the combination of dynamic length I-PDUs and I-PDUs with metadata, see SWS\_Com\_00817.

# 7.7 MetaData Handling

COM supports MetaData in PDUs received from and transmitted to PduR, and in Signals exchanged with the RTE. One possibility to use MetaData during transmission is to use Com\_TriggerlPduSendWithMetaData() to trigger transmission of an I-PDU with a defined set of MetaData. The other is to use the APIs Com\_SendSignalWithMetaData(), Com\_SendDynSignalWithMetaData(), Com\_SendSignalGroupWithMetaData().

Com\_SendSignalGroupArrayWithMetaData() to provide MetaData for the next transmission of the I-PDU containing the signal. Received MetaData will be stored alongside the I-PDU and can be accessed using Com\_ReceiveDynSignalWithMetaData(), Com\_ReceiveSignalWithMetaData(), Com\_ReceiveSignalGroupWithMetaData(),

Com ReceiveSignalGroupArrayWithMetaData().

**[SWS\_Com\_00887]** [If MetaData is configured for a transmitted I-PDU, the I-PDU shall be transmitted with the MetaData last provided by the RTE, or, if no MetaData has been provided by the RTE, with the configured ComMetaDataDefault. MetaData provided by Com\_TriggerIPduSendWithMetaData() shall just be used for the transmission triggered by this call. | ()

**[SWS\_Com\_00888]** [If MetaData is configured for a received I-PDU, received MetaData shall be stored for access by the RTE.] ()

#### 7.8 Interface between AUTOSAR COM Module and the PDU Router

[17] leaves the interface between COM and the lower layers undefined. In AUTOSAR, the only lower layer that the AUTOSAR COM module interfaces to is the PDU Router.



The AUTOSAR COM module uses the PDU Router in two different modes, depending on the type of the I-PDU it will be transported with the bus-specific transport protocol or without. If an I-PDU is supposed to be sent via TP, is configured per configuration parameter ComIPduType.

**[SWS\_Com\_00138]** [The AUTOSAR COM module shall send out I-PDUs by a calling the PduR\_ComTransmit function.] (SRS\_Com\_02037)

**[SWS\_Com\_00759]** [If the AUTOSAR COM module sends out an I-PDU with ComIPduType configured to *NORMAL*, the AUTOSAR COM module shall expect to be called by the PDU Router using Com's interfaces for modules that do not use TP. See column *normal I-PDUs* in **Table 6**.] (SRS\_Com\_02096)

**[SWS\_Com\_00760]** [If the AUTOSAR COM module sends out an I-PDU with ComIPduType configured to *TP*, the AUTOSAR COM module shall expect to be called by the PDU Router using Com's interfaces for modules that use TP. See column *TP I-*PDUs in **Table 6**.] (SRS\_Com\_02096)

The interaction diagram in Chapter 9.1 shows the interaction between the PDU Router module and the AUTOSAR COM module for normal I-PDUs.

**Table 6** gives an overview, which API between the AUTOSAR COM module and the PDU Router is used for a concrete I-PDU with respect to the configured value of ComIPduType. The API description itself is specified in Chapter 7.17.

API	normal I-PDUs	TP I-PDUs
PduR_ComTransmit	X	Х
Com_TxConfirmation	Х	-
Com_RxIndication	Х	-
Com_TriggerTransmit	X	-
Com_TpTxConfirmation	-	Х
Com_TpRxIndication	-	Х
Com_StartOfReception	-	Х
Com_CopyRxData	-	Х
Com_CopyTxData	-	Х

Table 6: API to PDU Router with respect to ComIPduType

# 7.9 Update-Bits

To enable the receiver of a signal/ signal group to identify whether the sender has updated the data in this signal/ signal group before sending, the AUTOSAR COM module supports *update-bits*.

The update-bits indicate whether the RTE on sender-side has updated a signal value, before the I-PDU, containing that signal, was transmitted to the PDU Router.

Update-bits are not allowed if transmission mode *DIRECT* is used with ComTxMode-NumberOfRepetitions greater or equal 1 (see SWS\_Com\_00310).



By configuration on sender- and on receiver-side, it is possible to add separately for each signal and/or separately for each signal group at most one update-bit.

The position of the update-bit is configurable by configuration parameter Co-mUpdateBitPosition (ECUC\_Com\_00257). ComUpdateBitPosition is included within the configuration container ComSignal. Hence, it is ensured that the signal/ signal group and the corresponding update-bit are always part of the same I-PDU.

[SWS\_Com\_00055] [The AUTOSAR COM module shall handle the update-bit only internally and not as part of the signal or signal group.] (SRS\_Com\_02030)

The update-bits are not directly visible or accessible by AUTOSAR Software Components.

[SWS\_Com\_00059] [The AUTOSAR COM module shall interpret the update-bit as defined in Table 7.] (SRS\_BSW\_00101, SRS\_Com\_02030)

Update-BIT	
0	cleared/ data has not been updated
1	set/ data has been updated

Table 7 update-bit interpretation

#### 7.9.1 Sender Side

The initialization of update-bits is defined by SWS\_Com\_00117.

**[SWS\_Com\_00061]** [If the RTE updates the value of a signal by calling Com\_SendSignal, the AUTOSAR COM module shall set the update-bit of this signal.] (SRS\_Com\_02030)

**[SWS\_Com\_00801]** [If the RTE updates a signal group by calling Com\_Send-SignalGroup, the AUTOSAR COM module shall set the update-bit of this signal group.] (SRS\_Com\_02030)

**[SWS\_Com\_00062]** [If the parameter ComTxIPduClearUpdateBit of an I-PDU is configured to *Transmit*, the AUTOSAR COM module shall clear all update-bits of all contained signals and signal groups after this I-PDU was sent out via PduR ComTransmit and PduR ComTransmit returned E OK.] (SRS Com 02030)

**[SWS\_Com\_00577]** [If the parameter ComTxIPduClearUpdateBit of an I-PDU is configured to Confirmation, the AUTOSAR COM module shall clear all update-bits of all contained signals and signal groups after this I-PDU was sent out via PduR\_ComTransmit, PduR\_ComTransmit returned E\_OK and the I-PDU was successfully confirmed.] (SRS\_Com\_02030)

**[SWS\_Com\_00578]** [If the parameter ComTxIPduClearUpdateBit of an I-PDU is configured to *TriggerTransmit*, the AUTOSAR COM module shall clear all update-bits of all contained signals and signal groups after the contents of this I-PDU was successfully requested by Com\_TriggerTransmit.I (SRS\_Com\_02030)



### 7.9.2 Receiver Side

**[SWS\_Com\_00324]** [If a signal or signal group with an attached update bit is received, the AUTOSAR COM module shall only process this signal, i.e. filter, notification, signal based gateway, byte swapping, if the signal's update bit is set.] (SRS Com 02030)

[SWS\_Com\_00802] [If a signal or signal group with an attached update bit is received and the update-bit is not set, the AUTOSAR COM module shall discard this signal.] (SRS\_Com\_02030)

If the signal has not been updated, the signal will not be routed via the signal gateway. It will only be discarded.

If the RTE reads a signal with an associated cleared update-bit, the init value or the last received value is returned.

**[SWS\_Com\_00067]** [The AUTOSAR COM module shall interpret a signal/ signal group as *updated* if the signal has an update-bit attached, and the value of the update-bit is set.] (SRS\_Com\_02030)

For the behavior of reception deadline monitoring on signals with update-bits, see Chapter 7.3.6.1.

# 7.10 Data Sequence Control

The AUTOSAR COM module provides mechanisms of data sequence control in the form of I-PDU Counters. *Out of sequence* I-PDUs, those are repeated I-PDUs or I-PDUs received after missing I-PDUs, will be detected and discarded.

I-PDU counters are optional and can be configured per I-PDU. For the corresponding configuration container see ECUC Com 00592.

### 7.10.1 Sender Side

**[SWS\_Com\_00687]** [For all I-PDUs with ComIPduDirection configured to *SEND* that have a configured ComIPduCounter, the AUTOSAR COM module shall set the I-PDU counter to 0, after the I-PDU was initialized by Com\_Init or reinitialized by Com\_IpduGroupStart.] (SRS\_Com\_02101)

**[SWS\_Com\_00688]** [The AUTOSAR COM module shall increase the I-PDU counter of an I-PDU by one, with respect to counter wrap around, directly before the I-PDU is sent out by PduR\_ComTransmit. In case the return value of PduR\_ComTransmit is not equal to E\_OK the update of the I-PDU counter shall be revoked (by decrementing the I-PDU counter by one).] (SRS\_Com\_02101)

If Com\_TriggerTransmit fetches an I-PDU containing an I-PDU counter, no incrementation takes place. Hence, care must be taken if I-PDU counters are used on combination with Com\_TriggerTransmit. If Com\_TriggerTransmit is called multiple times



after the corresponding PduR\_ComTransmit all I-PDUs will contain the same counter value. Thus, a deferred TriggerTransmit transmission can work, but a pure lower layer driven TriggerTransmit use-case would not work in combination with an I-PDU counter.

#### 7.10.2 Receiver Side

**[SWS\_Com\_00587]** [For all I-PDUs with ComIPduDirection configured to *RECEIVE* that have a configured ComIPduCounter, the AUTOSAR COM module shall accept any incoming I-PDU, regardless of the value of the I-PDU counter, after the I-PDU was initialized by Com\_Init or reinitialized by Com\_IpduGroupStart.] (SRS\_Com\_02099)

**[SWS\_Com\_00588]** [At reception of an I-PDU containing an I-PDU counter, the AUTOSAR COM module shall set the next expected value to the value following the received value with respect to counter wrap-around.] (SRS\_Com\_02101)

**Example:** If the I-PDU counter has 4 bits its possible values are 0 - 15. If an I-PDU with a 4-bit sized counter is received and the received counter value is 15 the next expected value is 0. The new expected value needs to be updated regardless if the received value matches the actual expected value or not.

**[SWS\_Com\_00590]** [At reception of an I-PDU containing an I-PDU counter, the AU-TOSAR COM module shall discard the I-PDU, after setting the next expected value as defined in SWS\_Com\_00588, if no I-PDU replication for this I-PDU is configured and:

received I-PDU counter < expected I-PDU counter OR received I-PDU counter > expected I-PDU counter + ComIPduCounterThreshold with respect to counter wrap-around. I (SRS Com 02102)

[SWS\_Com\_00727] [In case a mismatch of the expected and the received I-PDU counter is detected, the AUTOSAR COM module shall notify this mismatch by the configured ComIPduCounterErrorNotification (ECUC\_Com\_00003) notification function.] (SRS Com\_02102)

The counter error notification is triggered indepently of the configured ComlPduCounterThreshold.

The signature of this I-PDU counter error notification function is defined in SWS\_Com\_00726.

**Example:** In the example in Table 8, the I-PDU counter is 4-bit wide (values 0-15) and ComIPduCounterThreshold is configured to 1:



Expected I-PDU counter	Received counter value	Action
6	6	normal reception
6	7	normal reception
6	8	discarded
6	1	discarded
15	15	normal reception
15	0	normal reception
15	1	discarded

**Table 8 Example I-PDU counter handling** 

### 7.11 Communication Protection

Safety related I-PDUs might need to be replicated in multiple L-PDUs in order to prevent corruption and loss of data. In AUTOSAR the replication of I-PDUs is realized by the PDU Router. The comparison and voting of replicated I-PDUs is performed in AUTOSAR COM. Since the replicated I-PDUs have no checksum or signature for comparison it is needed to store and compare the complete I-PDUs at the receiver. The AUTOSAR COM allows configuring two additional replicated I-PDUs via ComIPduReplicaRef (ECUC Com 00601).

The number of successfully equally received I-PDUs needed for a qualified reception can be configured via ComIPduReplicationQuorum (ECUC\_Com\_00600) from 1 to 3. The PDU Router module does not support 1:n routing of I-PDUs which are sent or received via a TP module and require multiple frames for transmission. Hence, the AUTOSAR COM stack does currently not support replication of large or dynamic I-PDUs or data types.

#### 7.11.1 Sender Side

Since the replication itself is done by the PduR, there is no special handling on sender side for AUTOSAR COM. However, it must be ensured that replicated I-PDUs have configured an I-PDU counter, see SWS\_Com\_00834. This is required since the voting at the receiver relies on the I-PDU counter.

#### 7.11.2 Receiver Side

At receiver side, the AUTOSAR COM module performs a voting about the multiple replicated I-PDUs. The AUTOSAR COM module passes only signals of successfully confirmed I-PDUs to the RTE. As stated above replicated I-PDUs need to have an I-PDU counter configured. However, the ComIPduCounterThreshold must be configured to 0, see ECUC\_Com\_00595. There is no use-case of mixing these two features and the voting would be more complex.

**[SWS\_Com\_00596]** [Only when the AUTOSAR COM module has received at least *ComlPduReplicationQuorum* identical copies of a replicated I-PDU, it shall provide



the signals and/ or signal groups out of this I-PDU to the RTE.] (SRS\_Com\_02103, SRS\_Com\_02105, SRS\_Com\_02106)

A replicated I-PDU is configured as a normal I-PDU within the AUTOSAR COM module's configuration. The fan-out on sender-side is configured within the PduR configuration. On reception-side, additionally up to two replicas of PDU-R PDUs (see ECUC\_Com\_00601 ComIPduReplicaRef) and the necessary number of identically received I-PDUs for successfully voting (see ECUC\_Com\_00600 ComIPduReplicationQuorum) can be configured within the AUTOSAR COM module's configuration.

**[SWS\_Com\_00597]** [When the AUTOSAR COM module has received at least *ComlPduReplicationQuorum* identical copies of a replicated I-PDU, it shall notify the RTE only once with respect to the signals and/or signal groups out of this I-PDU.] (SRS\_Com\_02103, SRS\_Com\_02105, SRS\_Com\_02106)

The I-PDU counter will be handled for each replicated I-PDU separately as defined in Chapter 7.10.

Since the I-PDUs do not contain a special checksum, it is expected, that the comparison is performed by comparing the complete I-PDU byte by byte.

For I-PDU replication, the ComIPduCounterThreshold needs to be configured to 0, see SWS\_Com\_00834. Hence, *ComIPduReplicaRef* + 1 buffers are sufficient to store the I-PDUs for a successful voting.

#### 7.11.3 Constraints

Due to the approach of reusing already existing functionality, that is using the PduR for the fan out, care must be taken to set up the system correctly. The PduR allows fanning out the replicated I-PDUs on different busses. On the receiver side, these I-PDUs are indicated to COM with the same I-PDU id. However, Com\_RxIndication (SWS\_Com\_00123) may not be called reentrant for the same I-PDU id. An easy way to prevent this is to ensure that all I-PDUs are received by the same Interface module, which results in using the same bus for all replicas. For the current AUTOSAR stack, this is the recommend method. However, the system integrator could also synchronize the reception path by other means.

Furthermore, since there is no mechanism to prevent updates from the upper layer to an I-PDU, this approach of communication protection does not work in combination of decoupled transmission, i.e. I-PDUs requested via Com\_TriggerTransmit.

# 7.12 Signal Gateway

The signal gateway is an integrated part of the AUTOSAR COM module. Any external modules, except the cyclic task call, cannot access the signal gateway.

The AUTOSAR COM module's signal gateway works with signals and signal groups.



The AUTOSAR COM module's signal gateway supports only static routing for the ComGwMapping configuration container (ECUC\_Com\_00544). It is only possible to configure routes independently of the contents of the routed signals and group signals.

The destination of a signal or group signal can be configured either per ComGwDestinationDescription container (ECUC\_Com\_00549), or via ComGwSignal reference (ECUC\_Com\_00551). The transmission mode will be selected based on the TMCs of other associated signals of the I-PDU. In case no signal contributes to the TMS calculation, the transmission mode ComTxModeTrue (SWS\_Com\_00677) will be used.

**[SWS\_Com\_00377]** [The AUTOSAR COM module's signal gateway shall copy the value of routed signals/ group signals to the signals/ group signals for transmission according to configuration, see ECUC\_Com\_00544.] (SRS\_PduR\_06055, SRS\_PduR\_06089)

The ComGwMapping configuration allows to configure routing a signal/ group signal from one source signal/ group signal to zero (no signal gateway functionality) or more destinations (1:n).

The AUTOSAR COM module's signal gateway does not support to process signals or group signals that are contained within a large I-PDU, see SWS\_Com\_00598.

**[SWS\_Com\_00872]** [The Signal Gateway shall support the following I-PDU/ signal-processing stages on the receiver side (see also Figure 5):

- 1) reset reception deadline monitoring timer for I-PDU based monitoring
- 2) I-PDU callout
- 3) check of update-bits
- 4) endianness conversion and sign extension

I (SRS\_PduR\_06055, SRS\_PduR\_06089)

**[SWS\_Com\_00873]** [The Signal Gateway shall support the following I-PDU/ signal-processing stages on the sender side (see also Figure 5):

- 1) set of update-bits
- 2) endianness conversion and sign extension
- 3) I-PDU transmission mode selection
- 4) I-PDU callout

(SRS\_PduR\_06055, SRS\_PduR\_06089)

#### 7.12.1 Dealing with Signals

**[SWS\_Com\_00357]** [The AUTOSAR COM module shall forward signals to be routed from received I-PDUs to transmit I-PDUs. For configuration, see ECUC\_Com\_00544 configuration container ComGwMapping.] (SRS\_PduR\_06002)

Stopping the receive I-PDU after the signals to be routed have been forwarded to the transmit I-PDU will not prevent the transmit I-PDU from being transmitted unless it is stopped as well.



**[SWS\_Com\_00360]** [If the endianness of a received signal to be routed differs from the endianness of a related destination signal, the AUTOSAR COM module shall convert its endianness to the endianness of the destination signal.] (SRS\_PduR\_06061)

## 7.12.2 Dealing with Group Signals

**[SWS\_Com\_00361]** [The AUTOSAR COM module shall forward routed group signals from received I-PDUs to transmit I-PDUs. See also configuration container ComGwMapping (ECUC\_Com\_00544).] (SRS\_PduR\_06002, SRS\_PduR\_06056, SRS\_PduR\_06061)

Stopping the receive I-PDU after the group signals to be routed have been forwarded to the transmit I-PDU will not prevent the transmit I-PDU from being transmitted unless it is stopped as well.

**[SWS\_Com\_00383]** [The AUTOSAR COM module shall route all group signals belonging to the same signal group in a consistent manner. Therefore, the AUTOSAR COM module shall transfer the data of a signal group as one consistent (sub-)set of data during a routing operation.] (SRS\_PduR\_06056)

[SWS\_Com\_00735] [The AUTOSAR COM module shall support routing consistently a subset of group signals of a source signal group into a reduced target signal group.] (SRS\_PduR\_06056)

**[SWS\_Com\_00833]** [The AUTOSAR COM module shall support routing of individual group signals of a source signal group to a individual target signals (which are not part of signal group).] (SRS\_PduR\_06056)

**[SWS\_Com\_00362]** [If the endianness of a received group signal to be routed differs from the endianness of a related destination (group) signal, the AUTOSAR COM module shall convert its endianness to the endianness of the destination (group) signal.] (SRS\_PduR\_06061)

#### 7.12.3 Routing of Out-Timed Signals and Signal Groups

**[SWS\_Com\_00701]** [The AUTOSAR COM module's signal gateway shall route signal and group signals even if any configured reception deadline monitoring timeout expired.] (SRS\_PduR\_06089)

In case of a not in time received signal or group signal the AUTOSAR COM module's signal gateway will route these signal or group signal anyway.

#### 7.12.4 Handling of Update-Bits

The routing relations for signal groups are solely defined on the group signals. However, with respect to the update-bit the integrated signal gateway has to respect the update-bits of the enclosing signal groups. Hence, when update-bits of signal



groups are referenced within this chapter the signal groups that include the configured group signals are meant.

**[SWS\_Com\_00702]** [If both, the received signal/ signal group and the destination signal/ signal group have an update-bit (ComUpdateBitPosition) configured and the update-bit of the received signal/ signal group is set, the AUTOSAR COM module shall route the signal/ signal group with the set update-bit and clear the update-bit of the destination signal/ signal group after it was sent.] (SRS\_Com\_02030)

**[SWS\_Com\_00703]** [If the received signal/ signal group and the destination signal/ signal group have an update-bit (ComUpdateBitPosition) configured, and the update-bit of the received signal/ signal group is not set, the AUTOSAR COM module shall not route this signal/ signal group. | (SRS\_Com\_02030)

**[SWS\_Com\_00704]** [If the received signal/ signal group has an update-bit (ComUpdateBitPosition) configured, but the destination signal has no update-bit configured, and the update-bit is set, the AUTOSAR COM module shall route this signal/ signal group without the update-bit.] (SRS\_Com\_02030)

**[SWS\_Com\_00705]** [If the received signal/ signal group has an update-bit (ComUpdateBitPosition) configured, but the destination signal has no update-bit configured, and the update-bit is not set, the AUTOSAR COM module shall not route this signal/ signal group.] (SRS\_Com\_02030)

**[SWS\_Com\_00706]** [If the received signal/ signal group has no update-bit (ComUpdateBitPosition) configured and the destination signal/ signal group has an update-bit configured, the AUTOSAR COM module shall set the update-bit of the destination signal when a new signal/ signal group was received and clear it after sending of the destination signal/ signal group. ] (SRS\_Com\_02030)

#### 7.12.5 Decoupling Signal Gateway

To protect interrupt routines used for I-PDU reception from incalculable and perhaps expensive time usage, it is necessary to decouple the AUTOSAR COM module's signal gateway from interrupt routines.

**[SWS\_Com\_00359]** [The AUTOSAR COM module shall execute all functions of its signal gateway during the function call Com\_MainFunctionRouteSignals (SWS\_Com\_00400). During this function call, the AUTOSAR COM module's signal gateway shall check received routed signals and group signals and copy them from the related receive I-PDUs to the related transmit I-PDUs.] (SRS\_BSW\_00425, SRS\_BSW\_00432)

**[SWS\_Com\_00466]** [Within Com\_MainFunctionRouteSignals, the AUTOSAR COM module shall evaluate the transfer properties and transmission modes and perform its routing actions in the following sequence, see also Figure 2:

- 1. copy all gated signals from the source to the target I-PDUs
- 2. evaluate the TMC of all gated signals
- 3. evaluate the TMS for the target I-PDUs



(SRS\_BSW\_00432)

In the case, that a target I-PDU contains gated signals with ComTransferProperty TRIGGERED that are newly received, the sending may be performed in either Com\_MainFunctionTx or Com\_MainFunctionRouteSignals.

**[SWS\_Com\_00539]** [The AUTOSAR COM module shall sent out an I-PDU at most once while one call to Com\_MainFunctionRouteSignals.] (SRS\_PduR\_06055)

#### 7.13 Error Classification

## 7.13.1 Development Errors

**[SWS\_Com\_00803]** [API service called with wrong parameter:

error code: COM E PARAM

value [hex]: 0x01

(SRS\_BSW\_00337)

**[SWS\_Com\_00804]** [Error code if any API service (except Com\_GetStatus, Com\_GetVersionInfo, Com\_MainFunctionRx, Com\_MainFunctionTx and Com\_MainFunctionRouteSignals) is called before the AUTOSAR COM module was initialized with Com\_Init or after a call to Com\_DeInit:

error code: COM\_E\_UNINIT

• value [hex]: 0x02

(SRS\_BSW\_00337)

[SWS Com 00805] [NULL pointer checking:

error code: COM\_E\_PARAM\_POINTER

• value [hex]: 0x03

(SRS\_BSW\_00414)

[SWS\_Com\_00837] [Invalid configuration set selection:

error code: COM\_E\_INIT\_FAILED

value [hex]: 0x04

| (SRS\_BSW\_00414)

#### 7.13.2 Runtime Errors

[SWS Com 00864] [Transmission request was skipped:

error code: COM\_E\_SKIPPED\_TRANSMISSION

value [hex]: 0x05

I (SRS\_BSW\_00452)

#### 7.13.3 Transient Faults

There are no transient faults.



### 7.13.4 Production Errors

There are no production errors.

#### 7.13.5 Extended Production Errors

There are no extended production errors.

## 7.14 Error Notification

**[SWS\_Com\_00442]** [When a development error is detected, the function Det\_ReportError of the Default Error Tracer shall be called with:

- 50 as the AUTOSAR COM's ModuleId
- 0 as Instanceld
- the service ID of the AUTOSAR COM module's API in which the error was detected as Apild
- the error ID as defined in Chapter 7.13.1as Errorld

J (SRS\_BSW\_00369, SRS\_BSW\_00385, SRS\_BSW\_00327, SRS\_PduR\_06098, SRS\_PduR\_06099)

# 7.15 Error Handling

AUTOSAR COM supports supervision of the communication with deadline monitoring, see Chapter 7.3.6. Further, the AUTOSAR COM supports data sequence control see Chapter 7.10 and communication protection see Chapter 7.11.

The concrete reaction of the AUTOSAR COM module with respect to error and return values of called APIs is stated within the corresponding functional requirements.

## 7.16 AUTOSAR COM Module's Interaction Model

This chapter corresponds to the chapter *Functional Model of Interaction Layer* of [17]. The following figures illustrate the behavior of the Interaction layer for external reception and external transmission. The complete functionality is shown but it depends on the configuration what parts are present/ used in a concrete implementation.



**[SWS\_Com\_00396]** [A received signal or signal group can be configured for various processing steps. The AUTOSAR COM module shall execute the configured processing steps in the following order:

- 1) reset reception deadline monitoring timer for I-PDU based monitoring
- 2) check update-bits
- 3) endianness conversion and sign extension
- 4) data invalidation
- 5) reception filtering
- 6) reset reception deadline monitoring timer for signal based monitoring
- 7) notification

| (SRS\_Com\_02037)

**[SWS\_Com\_00744]** [In case both a ComRxDataTimeoutAction and a ComTimeout-Notification is configured for a ComSignal or a ComSignalGroup, the AUTOSAR COM module shall first call the configured ComRxDataTimeoutAction and then call the configured ComTimeoutNotification.] (SRS\_Com\_02089)



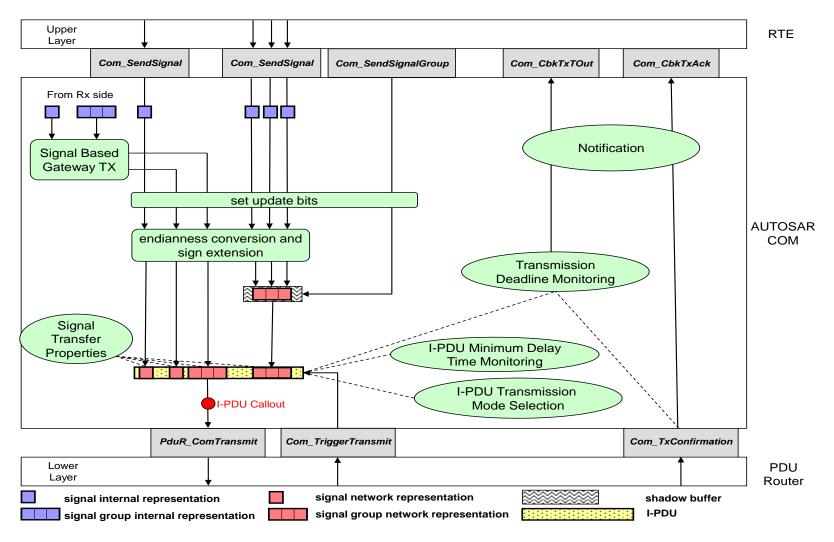


Figure 3 The AUTOSAR COM module's interaction model for transmission



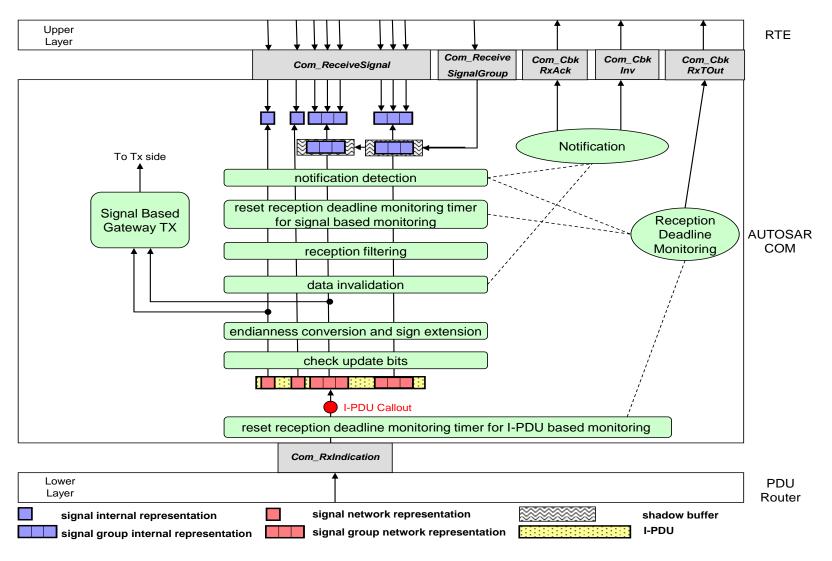


Figure 4 The AUTOSAR COM module's interaction model for reception



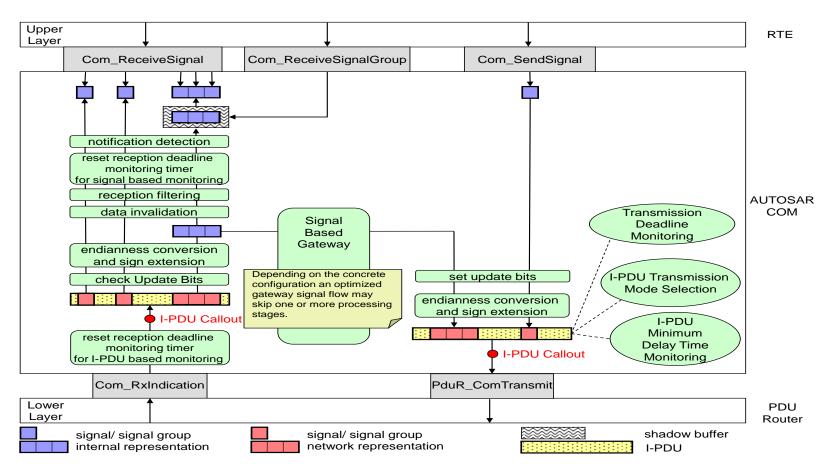


Figure 5: The AUTOSAR COM module's interaction model for integrated Signal Gateway

The endianness conversion and sign extension on receiver side are needed to feed the TMS with a correct data format. This endianness conversion is only necessary if the endianness of the Rx-bus differs from the endianness of the CPU. The endianness conversion on the sender side is only necessary if the endianness of the Rx-bus differs from the endianness of the Tx-bus.



#### 7.17 Multicore Distribution

In order to provide a load distribution amongst different partitions (cores), the different parts of the Com-Stack shall be allocated to the different partitions. Hereby it shall be supported that such a partitioning happens on a per-network-type basis, i.e., the FlexRay, CAN, and Ethernet part of the Com-Stack shall be locatable onto different distinct partitions (cores).

In order to support such a flexible allocation with reducing the amount of cross-partition communication (and thus (potentially blocking) synchronization) the main threads of execution in the Com module (namely the respective MainFunctions) can be split into different MainFunctions (at least one per partition). This way the flow of reception / transmission stays within the scope of a single network (and thus within a single partition) and therefore does not require special multi-partition capable communication and synchronization primitives. The only exception in the Commodule is the signal gateway which needs special consideration.

In order to manage different timing requirements each MainFunction defines its time base individually.

[SWS\_Com\_00885] DRAFT [ComIPdus shall be processed within the MainFunction, which is referenced via ComIPduMainFunctionRef (see ECUC\_Com\_10012).] ()

**[SWS\_Com\_00886] DRAFT** [If ComPreparationNotification is configured, the respective Com\_CbkTxPrep shall be called within MainFunctionTx before I-PDU processing is started.] ()



# 8 API Specification

# 8.1 Imported Types

In this chapter, all types included from the following files are listed:

[SWS Com 00609][

Module	Header File	Imported Type
	ComStack_Types.h	BufReq_ReturnType
	ComStack_Types.h	PduldType
ComStack_Types	ComStack_Types.h	PduInfoType
Comotack_rypes	ComStack_Types.h	PduLengthType
	ComStack_Types.h	RetryInfoType
	ComStack_Types.h	TpDataStateType
Std	Std_Types.h	Std_ReturnType
Siu	Std_Types.h	Std_VersionInfoType

J(SRS\_BSW\_00301)

# 8.2 Type Definitions

# 8.2.1 Com\_StatusType

ISWS Com 008191

[SWS_COIII	_00013]			
Name	Com_Statu	Com_StatusType		
Kind	Enumeratio	n		
	COM_ INIT		The AUTOSAR COM module is initialized and usable.	
Range	COM_ UNINIT	0x00	The AUTOSAR COM module is not initialized or not usable. This shall be the default value after reset. This status shall have the value 0.	
Description	This is a status value returned by the API service Com_GetStatus().			
Available via	Com.h			

J(SRS\_BSW\_00335)



# 8.2.2 Com\_SignalIdType

[SWS\_Com\_00820][

[0110_00III_00021	~11		
Name	Com_SignalIdType		
Kind	Туре		
Derived from	uint16		
Range	0 <signalldmax> Zero-based integer number</signalldmax>		
Description	The AUTOSAR COM module's signal object identifier.		
Available via	Com.h		

(SRS\_Com\_02037, SRS\_BSW\_00441)

# 8.2.3 Com\_SignalGroupIdType

[SWS Com 00821][

<u> </u>	5/10_00/11			
Name	Com_SignalGroupIdType			
Kind	Туре			
Derived from	uint16			
Range	0 <signalgroupidmax> Zero-based integer number</signalgroupidmax>			
Description	The AUTOSAR COM module's signal group object identifier.			
Available via	Com.h			

J(SRS\_Com\_02041, SRS\_BSW\_00441)

# 8.2.4 Com\_lpduGroupIdType

[SWS Com 00822][

<u> </u>	0110_00III_00022]			
Name	Com_lpduGroupIdType			
Kind	Туре			
Derived from	uint16			
Range	0 <lpdugroupid-max> Zero-based integer number; where IpduGroupId-max &lt; Com</lpdugroupid-max>			
Description	The AUTOSAR COM I-PDU module's group object identifier.			
Available via	Com.h			

J(SRS\_Com\_00218, SRS\_BSW\_00441)



## 8.2.5 Com\_ConfigType

[SWS\_Com\_00825][

Name	Com_Config	Com_ConfigType		
Kind	Structure			
	implementa	tion specific		
Elements	Type			
	Comment	<b>Comment</b> The content of the initialization data structure is implementation specific		
Description	This is the type of the data structure containing the initialization data for COM.			
Available via	Com.h			

I(SRS\_BSW\_00404, SRS\_BSW\_00441)

## 8.3 Function Definitions

[SWS\_Com\_00321] [Non-reentrant functions do not have to check if they are called reentrant.| (SRS\_BSW\_00312)

Most of the COM functions are non-reentrant with respect to a concrete object. E.g. Com\_SendSignal is not reentrant for the same signal, but reentrant for different signals. Hence, if there are multiple callers of the AUTOSAR COM module they need to be synchronized on a system level, for example by using disjoint sets of signals and I-PDU groups.

#### 8.3.1 Return Codes

The AUTOSAR COM module does not define a special COM return type. The API services return errors either by using the Std\_ReturnType as defined in [5] or via a uint8 value mapped according to Table 9.

Return codes of the AUTOSAR COM module are defined in Table 9.



[SWS\_Com\_00865][

Name	Description	Туре	Value	Defined in
E_OK	the service has been accepted	#define	0x00	Stan- dardTypes.h
E_NOT_OK	invocation of service failed	#define	0x01	Stan- dardTypes.h
COM_SERVICE_ NOT_AVAILABLE	the service is currently not available e.g. the corresponding I-PDU group is stopped (or a development error has been detected)	#define	0x80	Com.h
COM_BUSY	Successful execution of this function is currently not possible, because a resource is currently in use. For example, the buffer of a large I-PDU is locked.  COM_BUSY might, but must not, be returned whenever a signal of a large I-PDU	#define	0x81	Com.h
	is accessed.			

[(SRS\_BSW\_00348, SRS\_BSW\_00377, SRS\_BSW\_00441)

Table 9: Mapping of AUTOSAR COM module's return codes

# 8.3.2 Start-Up and Control Services

## 8.3.2.1 Com\_Init

[SWS\_Com\_00432][

Service Name	Com_Init	Com_Init		
Syntax	void Com_Init (    const Com_ConfigType* config )			
Service ID [hex]	0x01			
Sync/Async	Synchronous	S		
Reentrancy	Non Reentra	Non Reentrant		
Parameters (in)	config Pointer to the AUTOSAR COM module's configuration data.			
Parameters (inout)	None			
Parameters (out)	None			
Return value	None			
Description	This service initializes internal and external interfaces and variables of the AUTO-SAR COM module layer for the further processing. After calling this function the inter-ECU communication is still disabled.  In configurations, in which Com is assigned to more than one partition (i.e. Com_MainFunctions are mapped to partitions), Com may provide one init function per			



	partition.
Available via	Com.h

J(SRS\_BSW\_00344, SRS\_BSW\_00404, SRS\_BSW\_00405, SRS\_BSW\_00101, SRS\_BSW\_00358, SRS\_BSW\_00414)

The behavior of the AUTOSAR COM module is unspecified until a correct call to Com Init is made.

**Caveats of Com\_Init:** It is not foreseen that Com\_Init pre-empts any other AUTOSAR COM module's function. The AUTOSAR COM module can relies on the rest of the system that Com\_Init is not called in such a way.

## 8.3.2.2 Com\_Delnit

[SWS\_Com\_00130][

[2442_com_	00130]
Service Na- me	Com_DeInit
Syntax	void Com_DeInit ( void )
Service ID [hex]	0x02
Sync/Async	Synchronous
Reentrancy	Non Reentrant
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	This service stops the inter-ECU communication. All started I-PDU groups are stopped and have to be started again, if needed, after Com_Init is called. By a call to Com_DeInit the AUTOSAR COM module is put into an not initialized state.
Available via	Com.h

(SRS\_BSW\_00336)

**[SWS\_Com\_00129]** [The AUTOSAR COM module's function Com\_Delnit shall stop all started I-PDU groups.] (SRS\_BSW\_00336)



Caveats of Com\_Delnit: It is not foreseen that Com\_Delnit pre-empts any AUTOSAR COM module's function. The AUTOSAR COM module can relies on the rest of the system that Com\_Delnit is not called in such a way.

## 8.3.2.3 Com\_lpduGroupStart

[SWS\_Com\_91001][

[2442_com_	_31001]		
Service Name	Com_lpduGroupStart		
Syntax	void Com_lpduGroupStart (     Com_lpduGroupIdType lpduGroupId,     boolean initialize )		
Service ID [hex]	0x03		
Sync/Async	Synchronous		
Reentrancy	Reentrant for differ	rent I-PDU groups. Non reentrant for the same I-PDU group.	
Parameters	IpduGroupId	Id of I-PDU group to be started	
(in)	initialize	flag to request initialization of the data in the I-PDUs of this I-PDU group	
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	Starts a preconfigured I-PDU group. For example, cyclic I-PDUs will be sent out cyclically after the call of Com_IpduGroupStart(). If Initialize is true all I-PDUs of the I-PDU group shall be (re-)initialized before the I-PDU group is started. That is they shall behave like after a start-up of COM, for example the old_value of the filter objects and shadow buffers of signal groups have to be (re-)initialized.		
Available via	Com.h		

J(SRS\_Com\_00218)

## 8.3.2.4 Com\_lpduGroupStop

**ISWS Com 910021**[

,0110_00m_01002J				
Service Name	Com_lpduGroupStop			
Syntax	void Com_lpduGroupStop (     Com_lpduGroupIdType lpduGroupId )			



Service ID [hex]	0x04		
Sync/Async	Synchronous		
Reentrancy	Reentrant for different I-P	PDU groups. Non reentrant for the same I-PDU group.	
Parameters (in)	IpduGroupId Id of I-PDU group to be stopped		
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	Stops a preconfigured I-PDU group. For example, cyclic I-PDUs will be stopped after the call of Com_IpduGroupStop().		
Available via	Com.h	Com.h	

J(SRS\_Com\_00218)

# 8.3.2.5 Com\_EnableReceptionDM

[SWS\_Com\_91004][

[6116_6611]				
Service Name	Com_EnableReceptionDM			
Syntax	void Com_EnableReceptionDM ( Com_IpduGroupIdType IpduGroupId )			
Service ID [hex]	0x06			
Sync/Async	Synchronous			
Reentrancy	Reentrant for different I-PDU groups. Non reentrant for the same I-PDU group.			
Parameters (in)	IpduGroupId	IpduGroupId Id of I-PDU group where reception DM shall be enabled.		
Parameters (in- out)	None			
Parameters (out)	None			
Return value	None			
Description	Enables the reception deadline monitoring for the I-PDUs within the given I-PDU group.			
Available via	Com.h			

J(SRS\_Com\_00192)



# 8.3.2.6 Com\_DisableReceptionDM

[SWS\_Com\_91003][

Service Name	Com_DisableReceptionDM	
Syntax	void Com_DisableReceptionDM (     Com_IpduGroupIdType IpduGroupId )	
Service ID [hex]	0x05	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different I-PDU groups. Non reentrant for the same I-PDU group.	
Parameters (in)	IpduGroupId Id of I-PDU group where reception DM shall be disabled.	
Parameters (in- out)	None	
Parameters (out)	None	
Return value	None	
Description	Disables the reception deadline monitoring for the I-PDUs within the given I-PDU group.	
Available via	Com.h	

J(SRS\_Com\_00192)

# 8.3.2.7 Com\_GetStatus

[SWS\_Com\_00194][

Service Name	Com_GetStatus		
Syntax	Com_StatusType Com_GetStatus ( void )		
Service ID [hex]	0x07		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (in)	None		
Parameters (inout)	None		
Parameters (out)	None		
Return value	Com_Status- Type  COM_UNINIT: the AUTOSAR COM module is not initialized and not usable COM_INIT: the AUTOSAR COM module is initialized and usable		



Description	Returns the status of the AUTOSAR COM module.	
Available via	Com.h	

J(SRS\_BSW\_00331)

## 8.3.2.8 Com\_GetVersionInfo

[SWS\_Com\_00426][

	[0110_0011_00120]		
Service Name	Com_GetVersionInfo		
Syntax	void Com_GetVersionInfo ( Std_VersionInfoType* versioninfo )		
Service ID [hex]	0x09		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (in)	None		
Parameters (inout)	None		
Parameters (out)	versioninfo Pointer to where to store the version information of this module.		
Return value	None		
Description	Returns the version information of this module.		
Available via	Com.h		

I(SRS\_BSW\_00407, SRS\_BSW\_00003)

For configuration of Com\_GetVersionInfo see SWS\_Com\_00026.

## 8.3.3 Communication Services

# 8.3.3.1 Com\_SendSignal

[SWS Com 00197][

<u>[0110_0111_01</u>	
Service Name	Com_SendSignal
Syntax	uint8 Com_SendSignal ( Com_SignalIdType SignalId, const void* SignalDataPtr )
Service ID [hex]	0x0a
Sync/Async	Asynchronous



Reentrancy	Non Reentrant for the same signal. Reentrant for different signals.	
Parameters (in)	Signalld	Id of signal to be sent.
	Signal DataPtr	Reference to the signal data to be transmitted.
Parameters (inout)	None	
Parameters (out)	None	
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling
Description	The service Com_SendSignal updates the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter.	
Available via	Com.h	

(SRS\_Com\_02037)

**[SWS\_Com\_00624]** [The service Com\_SendSignal shall update the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter.] (SRS\_Com\_02037)

**[SWS\_Com\_00625]** [If the updated signal has the ComTransferProperty TRIG-GERED and it is assigned to an I-PDU with ComTxModeMode DIRECT or MIXED, then Com\_SendSignal shall perform an immediate transmission (within the next main function at the latest) of that I-PDU, unless the sending is delayed or prevented by other COM mechanisms.] (SRS Com 02037)

A related mechanism is for example the minimum delay timer (ComMinimum-DelayTime).

## 8.3.3.2 Com\_SendDynSignal

[SWS Com 00627][

Service Name	Com_SendDynSignal
Syntax	uint8 Com_SendDynSignal (     Com_SignalIdType SignalId,     const void* SignalDataPtr,     uint16 Length )
Service ID [hex]	0x21
Sync/Async	Asynchronous



Reentrancy	Non Reentrant for the same signal. Reentrant for different signals.	
	Signalld	Id of signal to be sent.
Parameters (in)	Signal DataPtr	Reference to the signal data to be transmitted.
	Length	Length of the dynamic length signal
Parameters (inout)	None	
Parameters (out)	None	
Return value	uint8	E_OK: service has been accepted E_NOT_OK: in case the Length is greater than the configured Com SignalLength of this sent signal COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked
Description	The service Com_SendDynSignal updates the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter.	
Available via	Com.h	

J(SRS\_Com\_02095)

**[SWS\_Com\_00628]** [The service Com\_SendDynSignal shall update the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter.] (SRS\_Com\_02095)

**[SWS\_Com\_00629]** [If the updated signal (see SWS\_Com\_00628) has the ComTransferProperty *TRIGGERED*, then the function Com\_SendDynSignal shall perform an immediate transmission (within the next main function at the latest) of the I-PDU associated with the signal except when the signal is packed into an I-PDU with Periodic transmission mode.] (SRS\_Com\_02095)

**[SWS\_Com\_00630]** [If the updated signal, see SWS\_Com\_00628, has the ComTransferProperty *PENDING*, then the function Com\_SendDynSignal shall not perform a transmission of the I-PDU associated with the signal.] (SRS\_Com\_02095)

There is no restriction regarding the minimal length of a dynamic length signal. Hence, it is allowed that a dynamic length signal has zero length.

#### 8.3.3.3 Com\_ReceiveSignal

[SWS Com 00198][

<u>[0110_00111_01</u>	>o (oo]		
Service Name	Com_ReceiveSignal		
Syntax	uint8 Com_ReceiveSignal ( Com_SignalIdType SignalId,		



	void* SignalDataPtr )		
Service ID [hex]	0x0b	0x0b	
Sync/Async	Synchrono	us	
Reentrancy	Non Reenti	ant for the same signal. Reentrant for different signals.	
Parameters (in)	Signalld	Id of signal to be received.	
Parameters (inout)	None		
Parameters (out)	Signal Reference to the location where the received signal data shall be stored		
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling	
Description	Com_ReceiveSignal copies the data of the signal identified by SignalId to the location specified by SignalDataPtr.		
Available via	Com.h		

(SRS\_Com\_02037)

**[SWS\_Com\_00631]** [The service Com\_ReceiveSignal shall copy the data of the signal object identified by SignalId to the position referenced by SignalDataPtr.] (SRS\_Com\_02037)

**Caveats of Com\_ReceiveSignal:** The AUTOSAR COM module relies on the fact the SignalDataPtr is properly aligned with respect to the data type of the signal with the given SignalId. The caller of Com ReceiveSignal has to ensure this.

## 8.3.3.4 Com\_ReceiveDynSignal

ISWS Com 006901

[0110_00m_v	
Service Name	Com_ReceiveDynSignal
Syntax	uint8 Com_ReceiveDynSignal (     Com_SignalIdType SignalId,     void* SignalDataPtr,     uint16* Length )
Service ID [hex]	0x22
Sync/Async	Synchronous



Reentrancy	Non Reentra	Non Reentrant for the same signal. Reentrant for different signals.	
Parameters (in)	Signalld	Id of signal to be received.	
Parameters (inout)	Length	in: maximum length that could be received out: length of the dynamic length signal	
Parameters (out)	SignalData Ptr	reference to the location where the received signal data shall be stored	
Return value	uint8	E_OK: service has been accepted E_NOT_OK: in case the Length (as in-parameter) is smaller than the received length of the dynamic length signal COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked	
Description	location spec	eDynSignal copies the data of the signal identified by SignalId to the cified by SignalDataPtr and stores the length of the dynamical length position given by the Length parameter.	
Available via	Com.h		

I(SRS\_Com\_02092, SRS\_Com\_02095)

[SWS\_Com\_00711] [The service Com\_ReceiveDynSignal shall copy the data of the signal object identified by SignalId to the position referenced by SignalDataPtr.] (SRS\_Com\_02092)

[SWS\_Com\_00712] [The service Com\_ReceiveDynSignal shall return the calculated length (see SWS\_Com\_00758) of the dynamic length signal identified by Signalld in parameter Length.] (SRS\_Com\_02092)

**[SWS\_Com\_00724]** [In case, the Length (as in-parameter) is smaller than the received length of the dynamic length signal, Com\_ReceiveDynSignal shall not copy any data to the position referenced by SignalDataPtr.] (SRS Com 02092)

#### 8.3.3.5 Com\_SendSignalGroup

ISWS Com 002001

<u>[0110_0111_01</u>	,			
Service Name	Com_Send	Com_SendSignalGroup		
Syntax		uint8 Com_SendSignalGroup (     Com_SignalGroupIdType SignalGroupId )		
Service ID [hex]	0x0d			
Sync/Async	Asynchronous			
Reentrancy	Non Reentrant for the same group signal. Reentrant for different group signals.			
Parameters	Signal	Id of signal group to be sent.		



(in)	GroupId		
Parameters (inout)	None		
Parameters (out)	None		
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling	
Description		Com_SendSignalGroup copies the content of the associated shadow associated I-PDU.	
Available via	Com.h	Com.h	

(SRS\_Com\_02041)

**[SWS\_Com\_00635]** [The service Com\_SendSignalGroup shall copy the content of the shadow buffer referenced by parameter SignalGroupId to the associated I-PDU.] (SRS\_Com\_02041)

**[SWS\_Com\_00637]** [Configuration of Com\_SendSignalGroup: A signal group must be configured before this call. See ECUC\_Com\_00345 for details.] (SRS\_Com\_02041)

## 8.3.3.6 Com\_ReceiveSignalGroup

[SWS\_Com\_00201][

Service Name	Com_Rece	Com_ReceiveSignalGroup		
Syntax		uint8 Com_ReceiveSignalGroup (     Com_SignalGroupIdType SignalGroupId )		
Service ID [hex]	0x0e	0x0e		
Sync/Async	Synchronous			
Reentrancy	Non Reentrant for the same group signal. Reentrant for different group signals.			
Parameters (in)	Signal GroupId	TIO OF SIONAL OROUN TO DE PECEIVEO		
Parameters (inout)	None	None		
Parameters (out)	None			
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was		



		stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling	
Description		The service Com_ReceiveSignalGroup copies the received signal group from the I-PDU to the shadow buffer.	
Available via	Com.h		

J(SRS\_Com\_02041)

**[SWS\_Com\_00638]** [The service Com\_ReceiveSignalGroup shall copy the received signal group from the I-PDU to the shadow buffer.] (SRS\_Com\_02041)

After this call, the group signals could be copied from the shadow buffer to the RTE by calling Com\_ReceiveSignal.

**[SWS\_Com\_00639]** [Configuration of Com\_ReceiveSignalGroup: A signal group must be configured before this call. See ECUC\_Com\_00345 for details.] (SRS\_Com\_02041)

**[SWS\_Com\_00461]** [The AUTOSAR COM module shall always copy the last known data, or the ComSignalInitValue(s) if not yet written, of the I-PDU to the shadow buffer by a call to Com\_ReceiveSignalGroup even if the I-PDU is stopped and COM\_SERVICE\_NOT\_AVAILABLE is returned.] (SRS\_Com\_02041)

# 8.3.3.7 Com\_SendSignalGroupArray

[SWS\_Com\_00851][

Service Name	Com_SendSigr	Com_SendSignalGroupArray		
Syntax	uint8 Com_SendSignalGroupArray (     Com_SignalGroupIdType SignalGroupId,     const uint8* SignalGroupArrayPtr )			
Service ID [hex]	0x23	0x23		
Sync/Async	Asynchronous			
Reentrancy	Non Reentrant for the same signal group. Reentrant for different signal groups.			
Parameters	SignalGroup Id	Id of signal group to be sent.		
(in)	SignalGroup ArrayPtr	Reference to the signal group array.		
Parameters (inout)	None			
Parameters (out)	None			



Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling
Description	The service Com_SendSignalGroupArray copies the content of the provided Signal GroupArrayPtr to the associated I-PDU. The provided data shall correspond to the array representation of the signal group.	
Available via	Com.h	

J(SRS\_Com\_02112, SRS\_Com\_02041)

**[SWS\_Com\_00852]** [The service Com\_SendSignalGroupArray shall copy the content designated by the SignalGroupArrayPtr to the associated I-PDU.] (SRS\_Com\_02112, SRS\_Com\_02041)

**[SWS\_Com\_00853]** [The Com\_SendSignalGroupArray API shall only be available when the configuration switch ComEnableSignalGroupArrayApi is enabled.] (SRS\_Com\_00177)

## 8.3.3.8 Com\_ReceiveSignalGroupArray

[SWS\_Com\_00854][

[0110_0011]				
Service Name	Com_Receives	Com_ReceiveSignalGroupArray		
Syntax	uint8 Com_ReceiveSignalGroupArray ( Com_SignalGroupIdType SignalGroupId, uint8* SignalGroupArrayPtr )			
Service ID [hex]	0x24	0x24		
Sync/Async	Synchronous			
Reentrancy	Non Reentrant for the same signal group. Reentrant for different signal groups.			
Parameters (in)	SignalGroup Id	Id of signal group to be received.		
Parameters (inout)	None			
Parameters (out)	SignalGroup ArrayPtr			
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling		
Description	The service Com_ReceiveSignalGroupArray copies the received signal group array			



	representation from the PDU to the location designated by SignalGroupAr-rayPtr.
Available via	Com.h

(SRS\_Com\_02112, SRS\_Com\_02041)

**[SWS\_Com\_00855]** [The service Com\_ReceiveSignalGroupArray shall copy the array representation of the received signal group from the I-PDU to the location designated by SignalGroupArrayPtr.] (SRS\_Com\_02112, SRS\_Com\_02041)

**[SWS\_Com\_00856]** [The Com\_ReceiveSignalGroupArray API shall only be available when the configuration switch ComEnableSignalGroupArrayApi is enabled.] (SRS\_Com\_00177)

**[SWS\_Com\_00857]** [The AUTOSAR COM module shall always copy the last known data, or the ComSignalInitValues if not yet written, of the I-PDU to the SignalGroupArrayPtr by a call to Com\_ReceiveSignalGroupArray even if the I-PDU is stopped and COM\_SERVICE\_NOT\_AVAILABLE is returned.] (SRS\_Com\_02041)

## 8.3.3.9 Com\_ReceiveSignalWithMetaData

[SWS\_Com\_91005][

Service Name	Com_ReceiveSig	Com_ReceiveSignalWithMetaData		
Syntax	uint8 Com_ReceiveSignalWithMetaData ( Com_SignalIdType SignalId, void* SignalDataPtr, uint8* MetaDataPtr )			
Service ID [hex]	0x49			
Sync/Async	Synchronous			
Reentrancy	Non Reentrant for the same signal. Reentrant for different signals.			
Parameters (in)	Signalld	Id of signal to be received.		
Parameters (inout)	None			
Parameters	SignalDataPtr	Reference to the location where the received signal data shall be stored		
(out)	MetaDataPtr	Pointer to the meta data of the signal		
Return value	uint8			
Description	Com_ReceiveSignalWithMetaData copies the data of the signal identified by Signal Id to the location specified by SignalDataPtr. The received meta data is stored at the position given by the MetaDataPtr parameter.			



ole via Com.h
---------------

# 8.3.3.10 Com\_ReceiveDynSignalWithMetaData

[SWS Com 91006][

[SWS_Com_			
Service Name	Com_ReceiveDynSignalWithMetaData		
Syntax	uint8 Com_ReceiveDynSignalWithMetaData ( Com_SignalIdType SignalId, void* SignalDataPtr, uint16* Length, uint8* MetaDataPtr )		
Service ID [hex]	0x4a		
Sync/Async	Synchron	ous	
Reentrancy	Non Reer	ntrant for the same signal. Reentrant for different signals	
Parameters (in)	Signalld	Signalld Id of signal to be received.	
Parameters (inout)	None		
	Signal DataPtr	reference to the location where the received signal data shall be stored	
Parameters (out)	Length		
, ,	Meta DataPtr	Pointer to the meta data of the signal	
Return value	E_OK: service has been accepted E_NOT_OK: in case the Length (as in-parameter) is smaller than the received length of the dynamic length signal COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked		
Description	Com_ReceiveDynSignalWithMetaData copies the data of the signal identified by SignalId to the location specified by SignalDataPtr and stores the length of the dynamical length signal at the position given by the Length parameter. The received meta data is stored at the position given by the MetaDataPtr parameter.		
Available via	Com.h		

]()



# 8.3.3.11 Com\_ReceiveSignalGroupWithMetaData

[SWS\_Com\_91007][

[3M3_C0III_91007]				
Service Na- me	Com_ReceiveSignalGroupWithMetaData			
Syntax	uint8 Com_ReceiveSignalGroupWithMetaData ( Com_SignalGroupIdType SignalGroupId, uint8* MetaDataPtr )			
Service ID [hex]	0x4b	0x4b		
Sync/Async	Synchronous			
Reentrancy	Non Reentrant for the same group signal. Reentrant for different group signals.			
Parameters (in)	Signal GroupId	Id of signal group to be received.		
Parameters (inout)	None			
Parameters (out)	Meta DataPtr	Pointer to the meta data of the signal group		
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling		
Description	The service Com_ReceiveSignalGroupWithMetaData copies the received signal group from the I-PDU to the shadow buffer. The received meta data is stored at the position given by the MetaDataPtr parameter.			
Available via	Com.h			

]()

# 8.3.3.12 Com\_ReceiveSignalGroupArrayWithMetaData

[SWS\_Com\_91008][

Service Na- me	Com_ReceiveSignalGroupArrayWithMetaData		
Syntax	void Com_ReceiveSignalGroupArrayWithMetaData ( Com_SignalGroupIdType SignalGroupId, uint8* SignalGroupArrayPtr, uint8* MetaDataPtr )		
Service ID [hex]	0x4c		
Sync/Async	Synchronous		



Reentrancy	Non Reentrant for the same signal group. Reentrant for different signal groups.		
Parameters (in)	SignalGroupId Id of signal group to be received.		
Parameters (inout)	None		
Parameters	SignalGroupArray Ptr	reference to the location where the received signal group array shall be stored	
(out)	MetaDataPtr	Pointer to the meta data of the signal group.	
Return value	None		
Description	The service Com_ReceiveSignalGroupArrayWithMetaData copies the received signal group array representation from the PDU to the location designated by Signal GroupAr-rayPtr. The received meta data is stored at the position given by the Meta DataPtr parameter.		
Available via	Com.h		

# $\bf 8.3.3.13\,Com\_SendSignalWithMetaData$

[SWS\_Com\_91009][

[34/3_60/11_31/093]		
Service Na- me	Com_SendSignalWithMetaData	
Syntax	uint8 Com_SendSignalWithMetaData ( Com_SignalIdType SignalId, void* SignalDataPtr, uint8* MetaDataPtr )	
Service ID [hex]	0x4d	
Sync/Async	Asynchronous	
Reentrancy	Non Reentrant for the same signal. Reentrant for different signals.	
	Signalld	Id of signal to be sent.
Parameters (in)	Signal DataPtr	Reference to the signal data to be transmitted.
,	Meta DataPtr	Pointer to the meta data of the signal
Parameters (inout)	None	
Parameters (out)	None	
Return value	uint8 E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE:	



	corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling	
Description	The service Com_SendSignalWithMetaData updates the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter. The meta data is provided via the MetaDataPtr parameter.	
Available via	Com.h	

# 8.3.3.14 Com\_SendDynSignalWithMetaData

[SWS\_Com\_91010][

[3VV3_COIII_	SWS_Com_91010]		
Service Name	Com_SendDynSignalWithMetaData		
Syntax	uint8 Com_SendDynSignalWithMetaData ( Com_SignalIdType SignalId, void* SignalDataPtr, uint16 Length, uint8* MetaDataPtr )		
Service ID [hex]	0x4e		
Sync/Async	Asynchro	nous	
Reentrancy	Non Reentrant for the same signal. Reentrant for different signals.		
	Signalld	Id of signal to be sent.	
Parameters	Signal DataPtr	Reference to the signal data to be transmitted.	
(in)	Length	Length of the dynamic length signal	
	Meta DataPtr	Pointer to the meta data of the signal	
Parameters (inout)	None		
Parameters (out)	None		
Return value	E_OK: service has been accepted E_NOT_OK: in case the Length is greater than the configured ComSignalLength of this sent signal COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked		
Description	The service Com_SendDynSignalWithMetaData updates the signal object identified by SignalId with the signal referenced by the SignalDataPtr parameter. The meta data is provided via the MetaDataPtr parameter.		



Available via	Com.h
---------------	-------

# $\bf 8.3.3.15\,Com\_Send Signal Group With Meta Data$

[SWS\_Com\_91011][

[2442_Com_	ונוטופ			
Service Na- me	Com_SendSignalGroupWithMetaData			
Syntax	uint8 Com_SendSignalGroupWithMetaData ( Com_SignalGroupIdType SignalGroupId, uint8* MetaDataPtr )			
Service ID [hex]	0x4f	0x4f		
Sync/Async	Asynchronous			
Reentrancy	Non Reentrant for the same group signal. Reentrant for different group signals.			
Parameters	Signal GroupId	Id of signal group to be sent.		
(in)	Meta DataPtr	Pointer to the meta data of the signal group		
Parameters (inout)	None			
Parameters (out)	None			
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling		
Description	The service Com_SendSignalGroupWithMetaData copies the content of the associated shadow buffer to the associated I-PDU. The meta data is provided via the MetaDataPtr parameter.			
Available via	Com.h			

]()

# $8.3.3.16\,Com\_Send Signal Group Array With Meta Data$

[SWS Com 91012][

	· o = o o · · · = o · o · = 1		
Service Name	Com_SendSignalGroupArrayWithMetaData		
Syntax	uint8 Com_SendSignalGroupArrayWithMetaData (		



	Com_SignalGroupIdType SignalGroupId, uint8* SignalGroupArrayPtr, uint8* MetaDataPtr )			
Service ID [hex]	0x50	0x50		
Sync/Async	Asynchronous			
Reentrancy	Non Reentrant			
	SignalGroupId	SignalGroupId Id of signal group to be sent.		
Parameters (in)	SignalGroup ArrayPtr	Reference to the signal group array.		
	MetaDataPtr	Pointer to the meta data of the signal group.		
Parameters (inout)	None			
Parameters (out)	None			
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group was stopped (or service failed due to development error) COM_BUSY: in case the TP-Buffer is locked for large data types handling		
Description	The service Com_SendSignalGroupArrayWithMetaData copies the content of the provided SignalGroupArrayPtr to the associated I-PDU. The provided data shall correspond to the array representation of the signal group. The meta data is provided via the MetaDataPtr parameter.			
Available via	Com.h			

# 8.3.3.17 Com\_InvalidateSignal

[SWS\_Com\_00203][

<u> [0110_00</u>	30=00]
Service Name	Com_InvalidateSignal
Syntax	uint8 Com_InvalidateSignal ( Com_SignalIdType SignalId )
Service ID [hex]	0x10
Sync/Async	Asynchronous
Reentrancy	Non Reentrant for the same signal. Reentrant for different signals.



Parameters (in)	Signal Id of signal to be invalidated.		
Parameters (inout)	None		
Parameters (out)	None		
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group is stopped, no ComSignalDataInvalidValue is configured for the given signalId or service fails due to development error COM_BUSY: in case the TP-Buffer is locked	
Description	The service Com_InvalidateSignal invalidates the signal with the given SignalId by setting its value to its configured ComSignalDataInvalidValue.		
Available via	Com.h		

(SRS\_Com\_02077)

See Chapter 7.4.4 for further information about the signal invalidation mechanism.

**[SWS\_Com\_00642]** [After invaliding the signal data, the function Com\_Invalidate-Signal shall perform a call of Com\_SendSignal internally, for details see SWS\_Com\_00099.] (SRS\_Com\_02077)

**[SWS\_Com\_00643]** [Com\_InvalidateSignal shall return COM\_SERVICE\_NOT\_-AVAILABLE in case no ComSignalDataInvalidValue (ECUC\_Com\_00391) is configured for the signal with the given SignalId.] (SRS\_Com\_02077)

## 8.3.3.18 Com\_InvalidateSignalGroup

[SWS\_Com\_00557][

Service Name	Com_InvalidateSignalGroup		
Syntax	uint8 Com_InvalidateSignalGroup (     Com_SignalGroupIdType SignalGroupId )		
Service ID [hex]	0x1b		
Sync/Async	Asynchronous		
Reentrancy	Non Reentrant for the same signal group. Reentrant for different signal groups.		
Parameters (in)	Signal GroupId	Id of signal group to be invalidated.	
Parameters (inout)	None		
Parameters	None		



(out)			
Return value	uint8	E_OK: service has been accepted COM_SERVICE_NOT_AVAILABLE: corresponding I-PDU group is stopped, no ComSignalDataInvalidValue is configured for any of the group signals or service fails due to development error COM_BUSY: in case the TP-Buffer is locked	
Description	The service Com_InvalidateSignalGroup invalidates all group signals of the signal group with the given SignalGroupId by setting their values to their configured Com SignalDataInvalidValues.		
Available via	Com.h		

J(SRS\_Com\_02077)

For further information about the signal invalidation mechanism, see Chapter 7.4.4.

**[SWS\_Com\_00645]** [After invaliding the signal group data, the function Com\_InvalidateSignalGroup shall perform a call of Com\_SendSignalGroup internally.] (SRS\_Com\_02077)

# 8.3.3.19 Com\_TriggerIPDUSend

[SWS\_Com\_00348][

Service Name	Com_TriggerIPDUSend				
Syntax	Std_ReturnType Com_TriggerIPDUSend ( PduIdType PduId )				
Service ID [hex]	0x17				
Sync/Async	Synchronous				
Reentrancy	Non Reentrant				
Parameters (in)	Pduld	The I-PDU-ID of the I-PDU that shall be triggered for sending			
Parameters (inout)	None				
Parameters (out)	None				
Return value	Std_Return- Type	E_OK: I-PDU was triggered for transmission E_NOT_OK: I-PDU is stopped, the transmission could not be triggered			
Description	By a call to Com_TriggerIPDUSend the I-PDU with the given ID is triggered for transmission.				
Available via	Com.h				

J(SRS\_Com\_02037)



[SWS\_Com\_00861] [By a call to Com\_TriggerIPDUSend, the AUTOSAR COM shall trigger the I-PDU with the given ID for transmission only if the I-PDU is started.] (SRS\_Com\_02037)

In case a stopped I-PDU is triggered for transmission, just E\_NOT\_OK is returned. For stopped I-PDUs no triggers are stored for a later execution after a potential (re-) starting of the I-PDU.

**[SWS\_Com\_00388]** [When an I-PDU is transmitted because of the function Com\_TriggerIPDUSend or Com\_TriggerIPDUSendWithMetaData, the AUTOSAR COM module shall only take the minimum delay time into account. That is the AUTOSAR COM module shall postpone transmissions if necessary and reset the minimum delay timer in case of transmissions. The AUTOSAR COM module shall not take into account all other transmission mode related parameters like ComTxModeNumberOfRepetitions.] (SRS\_Com\_02037)

**[SWS Com 00492]** [If an I-PDU by Com\_TriggerIPDUSend triggered configured I-PDU-callout. Com TriggerIPDUSendWithMetaData has а ECUC\_Com\_00387, then the function Com\_TriggerIPDUSend or Com\_Trigger-IPDUSendWithMetaData repectively shall also call this I-PDU-Callout.I (SRS Com 02037)

If within the Com\_TriggerIPDUSend function, another call to Com\_TriggerIPDUSend is invoked the application programmer must take care to not create infinite recursions. Both, direct recursions by invoking Com\_TriggerIPDUSend with the same ComPduld again and indirect recursions with longer recursion paths are theoretically possible.

The previous paragraph is also true for Com\_TriggerIPDUSendWithMetaData as well as for combinations of these two I-PDU triggering functions.

**[SWS\_Com\_00867]** [In case a large I-PDU is triggered for transmission by Com\_TriggerIPDUSend and the buffer of the large I-PDU is currently locked, the AUTOSAR COM shall store the transmit request and transmit the I-PDU when the buffer is available again.] (SRS\_Com\_02037)

#### 8.3.3.20 Com\_TriggerIPDUSendWithMetaData

[SWS\_Com\_00858][

Service Name	Com_TriggerIPDUSendWithMetaData
Syntax	Std_ReturnType Com_TriggerIPDUSendWithMetaData ( PduIdType PduId, const uint8* MetaData )
Service ID [hex]	0x28
Sync/Async	Synchronous



Reentrancy	Non Reentrant		
Parameters	Pduld	The I-PDU-ID of the I-PDU that shall be triggered for sending	
(in)	MetaData	Pointer to the meta data of the signal	
Parameters (inout)	None		
Parameters (out)	None		
Return value	Std_ReturnType		
Description	By a call to Com_TriggerIPDUSendWithMetaData the AUTOSAR COM module updates its internal metadata for the I-PDU with the given ID by copying the metadata from the given position and with respect to length of the globally configured Meta DataType of this I-PDU. Then the I-PDU is triggered for transmission.		
Available via	Com.h		

(SRS\_Com\_02037)

**[SWS\_Com\_00862]** [By a call to Com\_TriggerIPDUSendWithMetaData, the AUTOSAR COM shall trigger the I-PDU with the given ID for transmission only if the I-PDU is started.] (SRS\_Com\_02037)

In case a stopped I-PDU is triggered for transmission, just E\_NOT\_OK is returned. There is no mechanism in COM to store the triggering and to execute it after a potential (re-)starting of the I-PDU.

**[SWS\_Com\_00868]** [In case a large I-PDU is triggered for transmission by Com\_TriggerIPDUSendWithMetaData and the buffer of the large I-PDU is currently locked, the AUTOSAR COM shall store the transmit request with the given MetaData and transmit the I-PDU when the buffer is available again.] (SRS\_Com\_02037)

#### 8.3.3.21 Com\_SwitchlpduTxMode

[SWS\_Com\_00784][

Service Name	Com_SwitchIpduTxMode
Syntax	void Com_SwitchIpduTxMode ( PduIdType PduId, boolean Mode )
Service ID [hex]	0x27
Sync/Async	Synchronous



Reentrancy	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
Parameters	Pduld	Id of the I-PDU of which the transmission mode shall be changed.	
(in)	Mode	the transmission mode that shall be set.	
Parameters (inout)	None	None	
Parameters (out)	None		
Return value	None		
Description	The service Com_SwitchIpduTxMode sets the transmission mode of the I-PDU referenced by PduId to Mode. In case the transmission mode changes, the new mode shall immediately be effective (see SWS_Com_00239). In case the requested transmission mode was already active for this I-PDU, the call will have no effect.		
Available via	Com.h		

(SRS\_Com\_02082)

**[SWS\_Com\_00881]** [When the transmission mode of an I-PDU is explicitly set by Com\_SwitchIpduTxMode, the AUTOSAR COM shall defer the cyclic transmissions of this I-PDU by ComTxModeTimeOffset.] (SRS\_Com\_02082)

By mixing the signal based TMS and explicit TMS by Com\_SwitchIpduTxMode for the same I-PDU, it must be noted that the signal base TMS might switch back the manual set mode during a call to Com\_SendSignal or Com\_SendSignalGroup for this I-PDU. Therefore, mixing explicit and manual TMS for one I-PDU must be carefully designed, if used at all.

#### 8.4 Callback Functions and Notifications

#### 8.4.1 Com\_TriggerTransmit

[SWS\_Com\_00001][

Service Name	Com_Trigge	Com_TriggerTransmit		
Syntax	PduldType	Std_ReturnType Com_TriggerTransmit ( PduIdType TxPduId, PduInfoType* PduInfoPtr )		
Service ID [hex]	0x41			
Sync/Async	Synchronous			
Reentrancy	Reentrant for different Pdulds. Non reentrant for the same Pduld.			
Parameters	TxPduId ID of the SDU that is requested to be transmitted.			



(in)		
Parameters (inout)	PduInfoPtr	Contains a pointer to a buffer (SduDataPtr) to where the SDU data shall be copied, and the available buffer size in SduLengh. On return, the service will indicate the length of the copied SDU data in SduLength.
Parameters (out)	None	
Return value	Std Return- Type	E_OK: SDU has been copied and SduLength indicates the number of copied bytes. E_NOT_OK: No SDU data has been copied. PduInfoPtr must not be used since it may contain a NULL pointer or point to invalid data.
Description	Within this API, the upper layer module (called module) shall check whether the available data fits into the buffer size reported by PduInfoPtr->SduLength. If it fits, it shall copy its data into the buffer provided by PduInfoPtr->SduDataPtr and update the length of the actual copied data in PduInfoPtr->SduLength. If not, it returns E_NOT_OK without changing PduInfoPtr.	
Available via	Com.h	

(SRS\_Com\_02045)

**[SWS\_Com\_00647]** [Within the function Com\_TriggerTransmit, the AUTOSAR COM module shall copy the contents of its I-PDU transmit buffer to the L-PDU buffer given by PduInfoPtr->SduDataPtr and update PduInfoPtr->SduLength with length of the copied data accordingly.] (SRS\_Com\_02045)

[SWS\_Com\_00869] [In case the given PduInfoPtr->SduLength is smaller than the actual PDU-length, Com\_TriggerTransmit shall not copy any data and return E\_NOT\_OK.| (SRS\_Com\_02045)

**[SWS\_Com\_00884]** [ Com\_TriggerTransmit shall not copy any data and return E\_NOT\_OK if the I-PDU is stopped.] (SRS\_Com\_02045)

**[SWS\_Com\_00475]** [Com\_TriggerTransmit is not interfered by the I-PDU minimum delay time and shall not reset the minimum delay timer, see ECUC\_Com\_00181.] (SRS\_Com\_02045)

The function Com\_TriggerTransmit behaves independent of the configured transmission mode.

**Use case:** This function is used e.g. by the LIN Master for sending out a LIN frame. In this case, the trigger transmit can be initiated by the Master schedule table itself or a received LIN header. The FlexRay Interface for requesting PDUs to be sent in static part (synchronous to the FlexRay global time) also uses this function.

Once the PDU Router has successfully sent the I-PDU, the PDU Router will call Com\_TxConfirmation.

Caveats of Com\_TriggerTransmit: This function might be called in interrupt context.



# 8.4.2 Com\_RxIndication

[SWS\_Com\_00123][

[3442_COIII_0	0.20]		
Service Name	Com_R	Com_RxIndication	
Syntax	void Com_RxIndication ( PduIdType RxPduId, const PduInfoType* PduInfoPtr )		
Service ID [hex]	0x42		
Sync/Async	Synchro	nous	
Reentrancy	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
Parameters	RxPdu Id	ID of the received PDU.	
(in)	Pdu InfoPtr	Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	Indication of a received PDU from a lower layer communication interface module.		
Available via	Com.h		

J(SRS\_Com\_02043)

Caveats of Com\_RxIndication: This function might be called in interrupt context.

# 8.4.3 Com\_TpRxIndication

[SWS\_Com\_00650][

Service Name	Com_TpRxIndication		
Syntax	void Com_TpRxIndication ( PduIdType id, Std_ReturnType result )		
Service ID [hex]	0x45		
Sync/Async	Synchronous		
Reentrancy	Reentrant		



Paramotors (in)	id	Identification of the received I-PDU.	
Parameters (in)	result	Result of the reception.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	Called after an I-PDU has been received via the TP API, the result indicates whether the transmission was successful or not.		
Available via	Com.h		

J(SRS\_Com\_02095)

Caveats of Com\_TpRxIndication: This function might be called in interrupt context.

# 8.4.4 Com\_TxConfirmation

[SWS\_Com\_00124][

Service Name	Com_TxC	Com_TxConfirmation	
Syntax	void Com_TxConfirmation ( PduIdType TxPduId, Std_ReturnType result )		
Service ID [hex]	0x40		
Sync/Async	Synchrono	pus	
Reentrancy	Reentrant for different Pdulds. Non reentrant for the same Pduld.		
	TxPduld	ID of the PDU that has been transmitted.	
Parameters (in)	result	E_OK: The PDU was transmitted. E_NOT_OK: Transmission of the PDU failed.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU.		
Available via	Com.h	Com.h	

J(SRS\_Com\_02044)



**Caveats of Com\_TxConfirmation:** This function might be called in interrupt context, e.g. from transmit interrupt.

# 8.4.5 Com\_TpTxConfirmation

[SWS\_Com\_00725][

_	5011_00723]		
Service Name	Com_TpTxConfirmation		
Syntax	void Com_TpTxConfirmation ( PduIdType id, Std_ReturnType result )		
Service ID [hex]	0x48		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters	id	Identification of the transmitted I-PDU.	
(in)	result	Result of the transmission of the I-PDU.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	This function is called after the I-PDU has been transmitted on its network, the result indicates whether the transmission was successful or not.		
Available via	Com.h		

J(SRS\_Com\_02095)

# 8.4.6 Com\_StartOfReception

[SWS\_Com\_00691][

Service Name	Com_StartOfReception
Syntax	BufReq_ReturnType Com_StartOfReception (    PduIdType id,    const PduInfoType* info,    PduLengthType TpSduLength,    PduLengthType* bufferSizePtr )
Service ID [hex]	0x46



Sync/Async	Synchronous		
Reentrancy	Reentrant		
	id	Identification of the I-PDU.	
Parameters (in)	info	Pointer to a PduInfoType structure containing the payload data (without protocol information) and payload length of the first frame or single frame of a transport protocol I-PDU reception, and the MetaData related to this PDU. If neither first/single frame data nor MetaData are available, this parameter is set to NULL_PTR.	
	TpSdu Length	Total length of the N-SDU to be received.	
Parameters (inout)	None		
Parameters (out)	buffer SizePtr Available receive buffer in the receiving module. This parameter will be used to compute the Block Size (BS) in the transport protocol module.		
Return value	BufReq Return- Type  BUFREQ_E_NOT_OK: Connection has been accepted. bufferSizePtr indicates the available receive buffer; reception is continued. If no buffer of the requested size is available, a receive buffer size of 0 shall be indicated by bufferSizePtr.  BUFREQ_E_NOT_OK: Connection has been rejected; reception is aborted. bufferSizePtr remains unchanged.  BUFREQ_E_OVFL: No buffer of the required length can be provided; reception is aborted. bufferSizePtr remains unchanged.		
Description	This function is called at the start of receiving an N-SDU. The N-SDU might be fragmented into multiple N-PDUs (FF with one or more following CFs) or might consist of a single N-PDU (SF). The service shall provide the currently available maximum buffer size when invoked with TpSduLength equal to 0.		
Available via	Com.h		

I(SRS\_Com\_02095)

**[SWS\_Com\_00654]** [If ComRxPduId corresponds to a large I-PDU and TpSduLength is greater than the configured length of this I-PDU then the function Com StartOfReception shall return BUFREQ E OVFL.] (SRS Com 02095)

**[SWS\_Com\_00655]** [If ComRxPduId corresponds to a dynamic length I-PDU and TpSduLength is greater than the configured maximum length of this I-PDU then the function Com\_StartOfReception shall return BUFREQ\_E\_OVFL.] (SRS\_Com\_02095)

**[SWS\_Com\_00657]** [If the internal AUTOSAR COM module's buffer is currently not locked and the parameter TpSduLength does not exceed the (maximum) expected length, the function Com\_StartOfReception shall write the complete size of the AUTOSAR COM module's internal I-PDU buffer of the I-PDU with handle ComRxPduld to the position given by RxBufferSizePtr.| (SRS\_Com\_02095)

**[SWS\_Com\_00721]** [Com\_StartOfReception shall return BUFREQ\_E\_NOT\_OK, in case ComRxPduId refers to a stopped I-PDU.] (SRS\_Com\_02095)



**[SWS\_Com\_00818]** [In case Com\_StartOfReception returnes BUFREQ\_E\_NOT\_-OK or BUFREQ\_E\_OVFL, the AUTOSAR COM module shall not expect a call to Com\_TpRxIndication and hence shall not lock its internal buffer.] (SRS\_Com\_02095)

**[SWS\_Com\_00874]** [In case Com\_StartOfReception is called with TpSduLength equal to 0, the AUTOSAR COM module shall return the configured (maximum) length of this I-PDU via the bufferSizePtr.] (SRS\_Com\_02095)

A TpSduLength equal to 0 indicates an unknown message length.

### 8.4.7 Com\_CopyRxData

[SWS\_Com\_00692][

[0110_00III_	00002]		
Service Name	Com_CopyRxData		
Syntax	BufReq_ReturnType Com_CopyRxData ( PduIdType id, const PduInfoType* info, PduLengthType* bufferSizePtr )		
Service ID [hex]	0x44		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
	id	Identification of the received I-PDU.	
Parameters (in)	info	Provides the source buffer (SduDataPtr) and the number of bytes to be copied (SduLength). An SduLength of 0 can be used to query the current amount of available buffer in the upper layer module. In this case, the SduDataPtr may be a NULL_PTR.	
Parameters (inout)	None		
Parameters (out)	bufferSize Ptr Available receive buffer after data has been copied.		
Return value	BufReq Return- Type  BUFREQ_OK: Data copied successfully BUFREQ_E_NOT_OK: Data was not copied because an error occurred.		
Description	This function is called to provide the received data of an I-PDU segment (N-PDU) to the upper layer. Each call to this function provides the next part of the I-PDU data. The size of the remaining buffer is written to the position indicated by bufferSizePtr.		
Available via	Com.h		

J(SRS\_Com\_02095)



**Caveats of Com\_CopyRxData:** This function might be called in interrupt context. Therefore, data consistency must be ensured.

**[SWS\_Com\_00782]** [Com\_CopyRxData shall copy no data and return BU-FREQ\_E\_NOT\_OK in case the given Pduld refers to a stopped I-PDU.] (SRS\_Com\_00218)

## 8.4.8 Com\_CopyTxData

[SWS\_Com\_00693][

<u>[0110_00111_</u>	[34/3_C0111_00093]		
Service Name	Com_Copy	Com_CopyTxData	
Syntax	BufReq_ReturnType Com_CopyTxData ( PduIdType id, const PduInfoType* info, const RetryInfoType* retry, PduLengthType* availableDataPtr )		
Service ID [hex]	0x43		
Sync/Async	Synchronou	ıs	
Reentrancy	Reentrant		
	id	Identification of the transmitted I-PDU.	
Parameters (in)	info	Provides the destination buffer (SduDataPtr) and the number of bytes to be copied (SduLength). If not enough transmit data is available, no data is copied by the upper layer module and BUFREQ_E_BUSY is returned. The lower layer module may retry the call. An SduLength of 0 can be used to indicate state changes in the retry parameter or to query the current amount of available data in the upper layer module. In this case, the SduDataPtr may be a NULL_PTR.	
	retry	This parameter is used to acknowledge transmitted data or to retransmit data after transmission problems.  If the retry parameter is a NULL_PTR, it indicates that the transmit data can be removed from the buffer immediately after it has been copied. Otherwise, the retry parameter must point to a valid RetryInfoType element.  If TpDataState indicates TP_CONFPENDING, the previously copied data must remain in the TP buffer to be available for error recovery. TP_DATACONF indicates that all data that has been copied before this call is confirmed and can be removed from the TP buffer. Data copied by this API call is excluded and will be confirmed later. TP_DATARETRY indicates that this API call shall copy previously copied data in order to recover from an error. In this case TxTpDataCnt specifies the offset in bytes from the current data copy position.	
Parameters (inout)	None	,	
Parameters (out)	available DataPtr	Indicates the remaining number of bytes that are available in the upper layer module's Tx buffer. availableDataPtr can be used by TP modules	



		that support dynamic payload lengths (e.g. FrIsoTp) to determine the size of the following CFs.
Return va- lue	BufReq Return- Type	BUFREQ_OK: Data has been copied to the transmit buffer completely as requested. BUFREQ_E_BUSY: Request could not be fulfilled, because the required amount of Tx data is not available. The lower layer module may retry this call later on. No data has been copied. BUFREQ_E_NOT_OK: Data has not been copied. Request failed.
Description	This function is called to acquire the transmit data of an I-PDU segment (N-PDU). Each call to this function provides the next part of the I-PDU data unless retry->Tp DataState is TP_DATARETRY. In this case the function restarts to copy the data beginning at the offset from the current position indicated by retry->TxTpDataCnt. The size of the remaining data is written to the position indicated by availableDataPtr.	
Available via	Com.h	

(SRS\_Com\_02095)

Caveats of Com\_CopyTxData: This function might be called in interrupt context.

**[SWS\_Com\_00783]** [Com\_CopyTxData shall copy no data and return BU-FREQ\_E\_NOT\_OK in case the given PduId refers to a stopped I-PDU.] (SRS\_Com\_00218)

#### 8.5 Scheduled Functions

#### 8.5.1 Com\_MainFunctionRx

[SWS\_Com\_00398][

Service Name	Com_MainFunctionRx
Syntax	void Com_MainFunctionRx ( void )
Service ID [hex]	0x18
Sync/Async	Synchronous
Reentrancy	Reentrant for different instances. Non reentrant for the same instance.
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None



Return value	None
Description	This function performs the processing of the AUTOSAR COM module's receive processing that are not directly handled within the COM's functions invoked by the PDU-R, for example Com_RxIndication.  Per configured ComMainFunctionRx instance one Com_MainFunctionRx_ <short name=""> shall be implemented. Hereby <shortname> is the short name of the Com MainFunctionRx configuration container in the ECU configuration.</shortname></short>
Available via	SchM_Com.h

J(SRS\_BSW\_00425, SRS\_BSW\_00432)

**[SWS\_Com\_00664]** [A call to Com\_MainFunctionRx shall simply return if the AUTOSAR COM module was not previously initialized with a call to Com\_Init.] (SRS\_BSW\_00425)

Configuration of Com\_MainFunctionRx: see ECUC\_Com\_00186.

#### 8.5.2 Com\_MainFunctionTx

[SWS\_Com\_00399][

<u> </u>			
Service Name	Com_MainFunctionTx		
Syntax	void Com_MainFunctionTx ( void )		
Service ID [hex]	0x19		
Sync/Async	Synchronous		
Reentrancy	Reentrant for different instances. Non reentrant for the same instance.		
Parameters (in)	None		
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	This function performs the processing of the AUTOSAR COM module's transmission activities that are not directly handled within the COM's function invoked by the RTE, for example Com_SendSignal.  Per configured ComMainFunctionTx instance one Com_MainFunctionTx_ <short name=""> shall be implemented. Hereby <shortname> is the short name of the Com MainFunctionTx configuration container in the ECU configuration.</shortname></short>		
Available via	SchM_Com.h		



J(SRS\_BSW\_00425, SRS\_BSW\_00432)

**[SWS\_Com\_00665]** [A call to Com\_MainFunctionTx shall simply return if the AUTOSAR COM module was not previously initialized with a call to Com\_Init.] (SRS\_BSW\_00425)

Configuration: see ECUC\_Com\_00186.

#### 8.5.3 Com\_MainFunctionRouteSignals

[SWS\_Com\_00400][

<u> </u>			
Service Na- me	Com_MainFunctionRouteSignals		
Syntax	void Com_MainFunctionRouteSignals ( void )		
Service ID [hex]	0x1a		
Sync/Async	Synchronous		
Reentrancy	Reentrant for different instances. Non reentrant for the same instance.		
Parameters (in)	None		
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	Calls the signal gateway part of the AUTOSAR COM module to forward received signals to be routed.  Per configured ComMainFunctionRouteSignals instance one Com_MainFunction RouteSignals_ <shortname> shall be implemented. Hereby <shortname> is the short name of the ComMainFunctionRouteSignals configuration container in the ECU configuration.</shortname></shortname>		
Available via	SchM_Com.h		

I(SRS BSW 00425, SRS BSW 00432)

**[SWS\_Com\_00666]** [A call to Com\_MainFunctionRouteSignals shall simply return if the AUTOSAR COM module was not previously initialized with a call to Com\_Init.] (SRS\_BSW\_00425)

#### **Caveats of Com\_MainFunctionRouteSignals:**

 The time between two consecutive calls (perhaps the related task/thread cycle) affects directly the signal gateway latency.



- The insertion of this call is necessary for decoupling receive interrupts and signal gateway tasks.
- Normally a cyclic task/ thread to call this function is configured. The cycle of this task/thread directly affects the latency of the signal gateway.

## 8.6 Expected Interfaces

#### 8.6.1 Mandatory Interfaces

This chapter defines all interfaces, which are required to fulfill the core functionality of the module.

[SWS Com 00669][

API Function	Header File	Description
PduR_ComTransmit	PduR_Com.h	Requests transmission of a PDU.

(SRS\_BSW\_00384)

#### 8.6.2 Optional Interfaces

This chapter defines all interfaces that are required to fulfill an optional functionality of the module.

ISWS Com 006701

[o.r.o_oo.r.o]			
API Function	Header File	Description	
Det_ReportError	Det.h	Service to report development errors.	
Det_Report- RuntimeError	Det.h	Service to report runtime errors. If a callout has been configured then this callout shall be called.	
PduR_ComCancel- Transmit	PduR_ Com.h	Requests cancellation of an ongoing transmission of a PDU in a lower layer communication module.	

I(SRS\_BSW\_00384)

The associated configuration parameter for API function Det\_ReportError is ComConfigurationUseDet (ECUC\_Com\_00141).

The API function PduR\_ComCancelTransmit must be included if at least one I-PDU has configured ComIPduCancellationSupport to TRUE, see ECUC\_Com\_00709.



#### 8.6.3 Configurable Interfaces

#### 8.6.3.1 Callback/ Notification Functions

**Caveats of configurable interfaces:** A callback routine runs either on interrupt level or on task level. Thus, the OS restrictions of usage of system functions for interrupt service routines as well as for tasks apply.

[SWS Com 00468][

[3442_COIII_00	y . 501
Service Name	Com_CbkTxAck
Syntax	void Com_CbkTxAck ( void )
Sync/Async	Synchronous
Reentrancy	don't care
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	This callback represents notification class 2 of [17]. It is called immediately after successful transmission of the I-PDU containing the message.
Available via	configurable

(SRS\_BSW\_00359, SRS\_BSW\_00360)

Com\_CbkTxAck is called on sender side only. It can be configured for signals and signal groups.

Com\_CbkTxAck corresponds to Rte\_COMCbkTAck\_<sn> or Rte\_COMCbkTAck\_<sg> respectively.

The callback function name must be configured by ComNotification (ECUC\_Com\_00498).

[SWS Com 00491][

Service Name	Com_CbkTxErr
Syntax	void Com_CbkTxErr ( void )
Sync/Async	Synchronous



Reentrancy	don't care	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This callback corresponds to notification class 4 of [17]. It is called in case the transmission is not possible because the corresponding I-PDU group is stopped.	
Available via	configurable	

J(SRS\_BSW\_00359, SRS\_BSW\_00360)

Com\_CbkTxErr is called on sender side only. This callback function corresponds to Rte\_COMCbkTErr\_<sn> or Rte\_COMCbkTErr\_<sg> respectively.

The callback function name must be configured by ComErrorNotification (ECUC\_Com\_00499).

[SWS\_Com\_00554][

Service Name	Com_CbkTxTOut		
Syntax	void Com_CbkTxTOut ( void )		
Sync/Async	Synchronous		
Reentrancy	don't care		
Parameters (in)	None		
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	This callback corresponds to notification class 4 of [17]. It is called immediately after a message transmission error has been detected by the deadline monitoring mechanism.		
Available via	configurable		

(SRS\_BSW\_00359, SRS\_BSW\_00360)



Com\_CbkTxTOut is called on sender side only. It can be configured for signals and signal groups.

This callback function corresponds to Rte\_COMCbkTxTOut\_<sn> or Rte\_COMCbkTxTOut\_<sg> respectively.

The callback function name must be configured by ComTimeoutNotification (ECUC\_Com\_00552).

[SWS\_Com\_00555][

[3443_Com_00333]			
Service Name	Com_CbkRxAck		
Syntax	void Com_CbkRxAck ( void )		
Sync/Async	Synchronous		
Reentrancy	don't care		
Parameters (in)	one		
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	This callback represents notification class 1 of [17]. It is called immediately after the message has been stored in the receiving message object.		
Available via	configurable		

(SRS\_BSW\_00359, SRS\_BSW\_00360)

Com\_CbkRxAck is called on receiver side only. It can be configured for signals and signal groups.

Com\_CbkRxAck corresponds to Rte\_COMCbk\_<sn> or Rte\_COMCbk\_<sg> respectively.

The callback function name must be configured by ComNotification (ECUC\_Com\_00498).

[SWS Com 00556][

<u></u>		
Service Name	Com_CbkRxTOut	
Syntax	void Com_CbkRxTOut ( void )	
Sync/Async	Synchronous	



Reentrancy	don't care	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This callback corresponds to notification class 3 of [17]. It is called immediately after a message reception error has been detected by the deadline monitoring mechanism.	
Available via	configurable	

J(SRS\_BSW\_00359, SRS\_BSW\_00360)

Com\_CbkRxTOut is called on receiver side only. It can be configured for signals and signal groups.

This callback function corresponds to Rte\_COMCbkRxTOut\_<sn> or Rte\_COMCbkRxTOut\_<sp> respectively.

The callback function name must be configured by ComTimeoutNotification (see ECUC\_Com\_00552).

[SWS\_Com\_00536][

Service Name	Com_CbkInv		
Syntax	void Com_CbkInv ( void )		
Sync/Async	Synchronous		
Reentrancy	don't care		
Parameters (in)	None		
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	This callback function corresponds to SWS_Com_00680. It is called after reception of an invalid signal or signal group respectively.		
Available via	configurable		



J(SRS\_BSW\_00359, SRS\_BSW\_00360, SRS\_Com\_02079)

Com\_CbkInv is called on receiver side only. It can be configured for signals, group signals and signal groups.

This callback function corresponds to Rte\_COMCbkInv\_<sn> (for signals and group signals) and Rte\_COMCbkInv\_<sg> respectively.

The callback function name must be configured by ComInvalidNotification (ECUC\_Com\_00315).

[SWS Com 00726][

<u>[0110_0000</u>	[3W3_COIII_00/20]			
Service Name	Com_CbkCounterErr			
Syntax	void Com_CbkCounterErr ( PduldType ComPduld, uint8 ExpectedCounter, uint8 ReceivedCounter )			
Sync/Async	Synchronous			
Reentrancy	don' t care			
	ComPduld	Id of the I-PDU for that a counter mismatch was detected		
Parameters (in)	ExpectedCounter The expected counter value			
	ReceivedCounter	The received counter value		
Parameters (inout)	None			
Parameters (out)	None			
Return value	None			
Description	This function is called immediately, if the AUTOSAR COM module receives an I-PDU counter that differs from the expected one.			
Available via	configurable			

J(SRS\_Com\_02102)

Com\_CbkCounterErr is called on receiver side only. It can be configured per I-PDU counter. The callback function name must be configured by ComIPduCounterError-Notification (ECUC Com 00003).

**ISWS Com 910131**{DRAFT} [

<u></u>			
Service Name	Com_CbkTxPrep (draft)		
Syntax	void Com_CbkTxPrep ( void		



	)	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This callback function indicates that the signals/signal groups of a dedicated Com_MainFunctionTx instance will now be prepared for transmission.  Tags:atp.Status=draft	
Available via	configurable	

]()

Com\_CbkTxPrep is called on sender side only. It can be configured per Com\_MainFunctionTx instance.

Com\_CbkTxPrep corresponds to Rte\_COMCbkTAck\_<mn>.

#### 8.6.3.2 I-PDU Callout Functions

As stated in SWS\_Com\_00013 Network-order message callout and CPU-order message callout are not supported by the AUTOSAR COM module. The only callout method supported by the AUTOSAR COM module therefore is the I-PDU callout. The AUTOSAR COM module supports I-PDU callouts on sender and on receiver side.

As specified in [17], if the I-PDU callout returns false the I-PDU will not be processed any further.

[SWS\_Com\_00700][

Service Name	Com_RxlpduCallout		
Syntax	boolean Com_RxlpduCallout ( PduIdType PduId, const PduInfoType* PduInfoPtr )		
Service ID [hex]	0x2A		
Sync/Async	Synchronous		
Reentrancy	don't care		
Parameters (in)	Pduld	ID of the received I-PDU.	



	PduInfo Ptr	Contains the length (SduLength) of the received I-PDU and a pointer to the data of the I-PDU (SduDataPtr).
Parameters (inout)	None	
Parameters (out)	None	
Return value	boolean	true: I-PDU will be processed normal false: I-PDU will not be processed any further
Description	The I-PDU callout on receiver side can be configured to implement user-defined receive filtering mechanisms.	
Available via	configurable	

J(SRS\_Com\_02037)

The callout function name must be configured by ComIPduCallout (ECUC\_Com\_00387).

**[SWS\_Com\_00816]** [The AUTOSAR COM module shall forward all data of the received I-PDU (i.e. the complete I-PDU as provided by the PduR) in the Com\_RxlpduCallout.] (SRS\_Com\_02037)

[SWS\_Com\_00346][

Service Name	Com_TxlpduCallout		
Syntax	boolean Com_TxlpduCallout ( PduIdType PduId, PduInfoType* PduInfoPtr )		
Service ID [hex]	0x29	0x29	
Sync/Async	Synchronous	Synchronous	
Reentrancy	don't care		
Parameters (in)	Pduld	ID of the transmitted I-PDU.	
Parameters (inout)	PduInfoPtr	Contains the length (SduLength) of the transmitted I-PDU and a pointer to the data of the I-PDU (SduDataPtr).	
Parameters (out)	None		
Return value	boolean	true: I-PDU will be processed normal false: I-PDU will not be processed any further	
Description	The I-PDU callout on sender side can be configured for example to implement user-defined transmission filtering or user-defined pre-transmission-processing of the outgoing I-PDU.		



Available via configurable

(SRS\_Com\_02037)

The callout function name must be configured either by ComIPduCallout (ECUC\_Com\_00387) or by ComIPduTriggerTransmitCallout (ECUC\_Com\_00765).

The AUTOSAR COM module implements no means to detect or prevent possible recursions that may occur when I-PDUs are triggered by actions within an I-PDU callout. It is solely in the responsibility of the implementer of an I-PDU callout and the system integrator that unwanted or endless chains of I-PDU callouts are avoided.

**[SWS\_Com\_00381]** [The AUTOSAR COM module shall not support that other AUTOSAR COM module's APIs than Com\_TriggerIPDUSend, Com\_TriggerIPDUSend-WithMetaData, Com\_SendSignal and Com\_SendSignalGroup can be called out of an I-PDU callout.] (SRS\_Com\_02037)

**[SWS\_Com\_00766]** [In case a ComIPduTriggerTransmitCallout is configured for an I-PDU and the I-PDU is started, the AUTOSAR COM module shall invoke this I-PDU callout within every execution of Com\_TriggerTransmit for this I-PDU.] (SRS\_Com\_02037)

**[SWS\_Com\_00395]** [When Com\_TriggerTransmit is called, the AUTOSAR COM module shall ignore the return value from the ComIPduTriggerTransmitCallout.] (SRS\_Com\_02037)

**[SWS\_Com\_00719]** [In case a ComlPduCallout is configured for an I-PDU with ComlPduDirection configured to *SEND*, the AUTOSAR COM module shall invoke this I-PDU callout diretly before the I-PDU is transmitted via PduR\_ComTransmit.] (SRS\_Com\_02037)

For TP I-PDUs, the I-PDU callout functions are handled similar to the I-PDU callout functions of normal I-PDUs and are supported both on transmitter and receiver side. Note that for example the requirement SWS\_Com\_00719 does not consider the configured ComIPduType.

**[SWS\_Com\_00720]** [When a large I-PDU is received successfully via the TP interface, the I-PDU callout shall take place within the invocation of Com\_TpRxIndication.] (SRS\_Com\_02095)

**[SWS\_Com\_00839]** [When the I-PDU callout in context of Com\_TpRxIndication returns false, the I-PDU shall be considered as incorrectly received and therefore all included signals shall be treated exactly like invalidated signals. That is, the AUTOSAR COM module shall execute all configured ComDataInvalidActions for all included signals and signal groups.] (SRS\_Com\_02095)



# 9 Sequence Diagrams

A sequence diagram of the underlying communication stack can be found in [17].

# 9.1 Interface between the AUTOSAR COM Module and the PDU Router

The following chart shows the communication between the AUTOSAR COM module and the PDU Router.



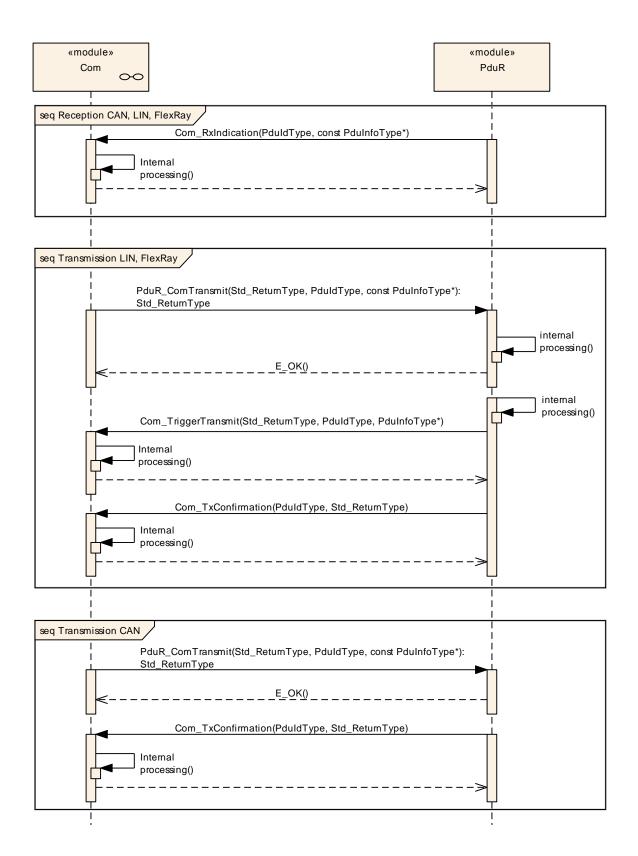


Figure 6: Interactions between the AUTOSAR COM module and the PDU router



# 9.2 Confirmation Handling between the PDU Router, the AUTOSAR COM Module and the RTE

The following chart shows the confirmation handling with respect to the two different IPDU-processing modes. (See also Chapter 7.3.5.4.)

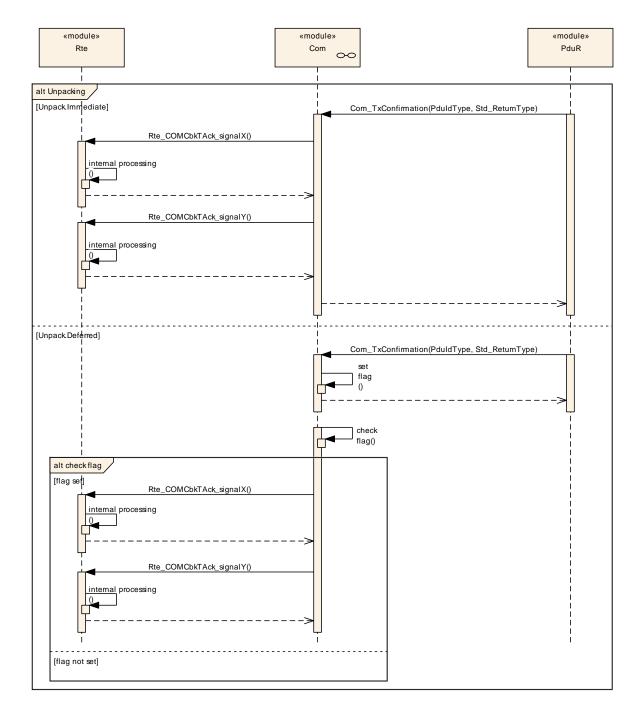


Figure 7: Confirmation handling between the PDU Router, the AUTOSAR COM module and the RTE



# 9.3 Indication Handling between the PDU Router, the AUTOSAR COM Module and the RTE

The following chart shows the indication handling with respect to the two different unpacking modes. (See also Chapter 7.3.5.4.)

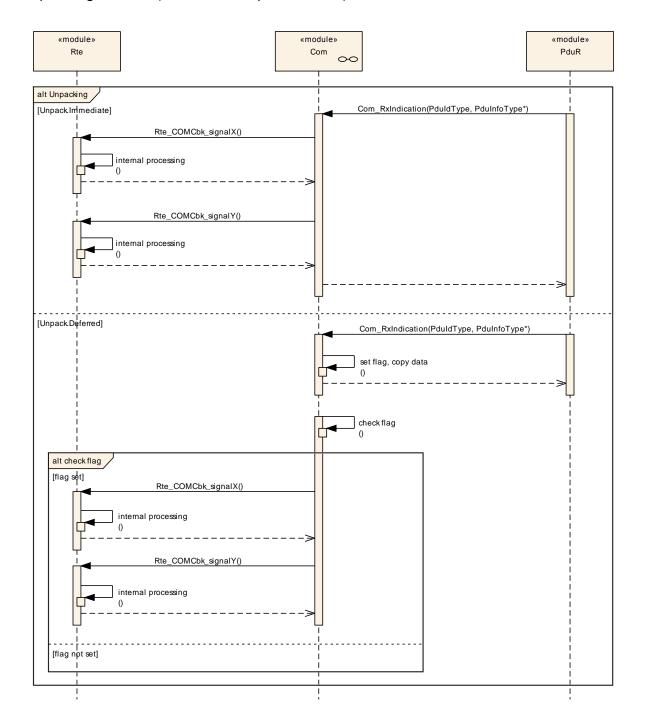


Figure 8: Indication handling between the PDU Router, the AUTOSAR COM module and the RTE



# 10 Configuration Specification

# **10.1 Containers and Configuration Parameters**

The following chapters summarize all configuration parameters. The detailed meanings of the parameters are described in Chapter 7 and Chapter 7.17.

**[SWS\_Com\_00006]** [The configuration parameters are based on [18]. All parameters shall be stored in an XML format.] (SRS\_Com\_02040)



### 10.1.1 Configuration of the AUTOSAR COM Module

For an overview of the AUTOSAR COM module's configuration, see Figure 9.


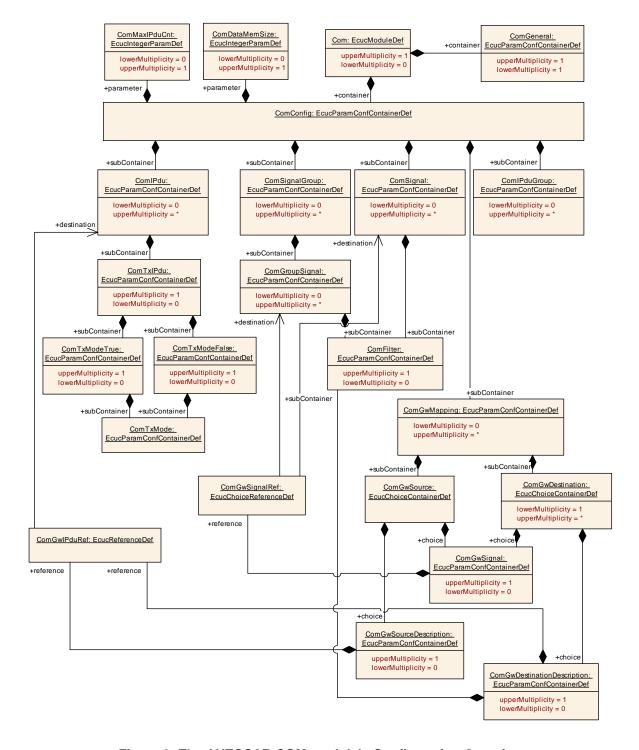


Figure 9: The AUTOSAR COM module's Configuration Overview



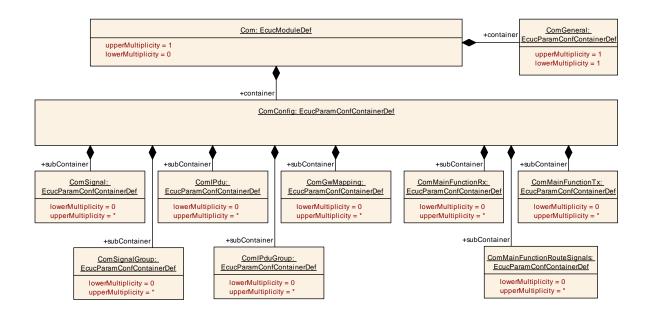


#### 10.1.2 Com

SWS Item	ECUC_Com_00540:
Module Name	Com
Module Description	Configuration of the AUTOSAR COM module.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComConfig		This container contains the configuration parameters and sub containers of the AUTOSAR COM module.
ComGeneral		Contains the general configuration parameters of the AUTOSAR COM module.



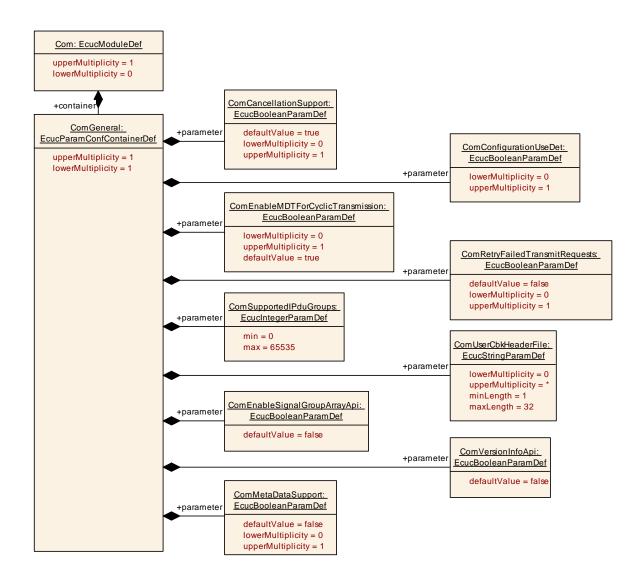

#### 10.1.3 ComGeneral

SWS Item	ECUC_Com_00541:
Container Name	ComGeneral
Parent Container	Com
Description	Contains the general configuration parameters of the module.
Configuration Parameters	

SWS Item	ECUC_Com_10000:		
Name	ComCancellationSupport		
Parent Container	ComGeneral		
	This parameter enables/disables the cancellation feature: true: enabled false: disabled		
Multiplicity	01		
Туре	EcucBooleanParamDef		
Default value	true		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants



Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00141 :			
Name	ComConfigurationUseDet	ComConfigurationUseDet		
Parent Container	ComGeneral			
	The error hook shall contain code to call the Det.  If this parameter is configured COM_DEV_ERROR_DETECT shall be set to ON as output of the configuration tool. (as input for the source code).			
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00788 :			
Name	ComEnableMDTForCyclicTransmission			
Parent Container	ComGeneral			
Description	Enables globally for the whole Com module the minimum delay time monitoring for cyclic and repeated transmissions (ComTxModeMode=PERIODIC or ComTxModeMode=MIXED for the cyclic transmissions, ComTxModeNumberOfRepetitions > 0 for repeated transmissions).			
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default value	true	rue		
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_10002:
Name	ComEnableSignalGroupArrayApi
Parent Container	ComGeneral
•	Activate/Deactivate the signal group array access APIs (Com_SendSignalGroupArray, Com_ReceiveSignalGroupArray). true: signal group array access APIs activated



	alse: signal group array access APIs deactivated			
Multiplicity	1	1		
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_10004:			
Name	ComMetaDataSupport	ComMetaDataSupport ComMetaDataSu		
Parent Container	ComGeneral			
Description	This parameter enables/disables the support of meta-data feature including the API Com_TriggerIPDUSendWithMetaData. true: enabled false: disabled			
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Х	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	X	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00780 :			
Name	ComRetryFailedTransmitRed	ComRetryFailedTransmitRequests		
Parent Container	ComGeneral			
			y of failed transmission requests is	
	enabled. If this Parameter is	not pi	resent, the default value is assumed.	
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00710:
Name	ComSupportedIPduGroups
Parent Container	ComGeneral
Description	Defines the maximum number of supported I-PDU groups.
Multiplicity	1
Туре	EcucIntegerParamDef



Range	0 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_10001:			
Name	ComUserCbkHeaderFile			
Parent Container	ComGeneral			
Description	Defines the header files for callback functions which shall be included by the COM module.			
Multiplicity	0*			
Туре	EcucStringParamDef			
Default value				
maxLength	32			
minLength	1			
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00438:			
Name	ComVersionInfoApi			
Parent Container	ComGeneral			
Description	Activate/Deactivate the version information API (Com_GetVersionInfo).  True: version information API activated  False: version information API deactivated			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

#### No Included Containers

# 10.1.4 ComConfig

SWS Item	ECUC_Com_00337:
Container Name	ComConfig
Parent Container	Com
Description	This container contains the configuration parameters and sub containers of



	the AUTOSAR COM module.
Configuration Parameters	

SWS Item	ECUC_Com_00783 :			
Name	ComDataMemSize			
Parent Container	ComConfig			
Description	Size of internal Com data in units of bytes (static memory allocation) - memory required by post-build configuration must be smaller than this constant. This parameter is needed only in case of post-build loadable implementation using static memory allocation.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 18446744073709551615			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time	ŀ		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00782 :				
Name	ComMaxIPduCnt				
Parent Container	ComConfig				
Description			parameter is needed only in case of post-		
	build loadable implementation using static memory allocation.				
Multiplicity	01				
Туре	EcucIntegerParamDef				
Range	0				
	18446744073709551615				
Default value					
Post-Build Variant Multipli-	Itipli- <sub>folso</sub>				
city					
Post-Build Variant Value	false				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-		
			BUILD		
	Post-build time				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-		
			BUILD		
	Post-build time				
Scope / Dependency	scope: local				

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComGwMapping		Each instance of this container defines one mapping of the integrated Signal Gateway.
ComIPdu		See ECUC_Com_00340, if there is no ComIpdu container included no IPDUs are defined. In this case no



		communication via the AUTOSAR COM module is possible.
ComIPduGroup	0*	See ECUC_Com_00341, if there is no ComIPduGroup container included then no IPDU group is defined. In this case no communication via the AUTOSAR COM module is possible.
ComMainFunctionRouteSignal s	0*	Each element of this container defines one instance of Com_MainFunctionRouteSignals.  Tags: atp.Status=draft
ComMainFunctionRx	0*	Each element of this container defines one instance of Com_MainFunctionRx.  Tags: atp.Status=draft
ComMainFunctionTx	0*	Each element of this container defines one instance of Com_MainFunctionTx.  Tags: atp.Status=draft
ComSignal	0*	See ECUC_Com_00344, if there is no ComSignal container included no single signals are defined.
ComSignalGroup	0*	See ECUC_Com_00345, if there is no ComSignalGroup container included no signal groups are defined.

#### 10.1.5 ComMainFunctionRx

SWS Item	ECUC_Com_10011:			
Container Name	ComMainFunctionRx			
Parent Container	ComConfig			
Description	Each element of this container defines one instance of Com_MainFunctionRx.  Tags: atp.Status=draft			
Post-Build Variant Multipli- city	false			
Multiplicity Configuration	Pre-compile time X All Variants		All Variants	
Class	Link time			
	Post-build time			
Configuration Parameters				

SWS Item	ECUC_Com_10018:
Name	ComMainRxTimeBase
Parent Container	ComMainFunctionRx
Description	The period between successive calls to according instance of Com_MainFunctionRx in seconds. This parameter may be used by the COM generator to transform the values of the reception related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific.  The COM module (generator) may rely on the fact that Com_MainFunctionRx is scheduled according to the value configured here.  Tags: atp.Status=draft
Multiplicity	1
Туре	EcucFloatParamDef



Range	]0 INF[		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_10017:				
Name	ComMainRxPartitionRef				
Parent Container	ComMainFunctionRx				
Description	Reference to EcucPartition, where the according Com_MainFunction				
	instance is assigned to.				
	Tags:				
	atp.Status=draft				
Multiplicity	1				
Туре	Reference to [ EcucPartition ]				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time	Χ	All Variants		
	Link time	-			
	Post-build time	ŀ			
Scope / Dependency	scope: local				

# No Included Containers

#### 10.1.6 ComMainFunctionTx

SWS Item	ECUC_Com_10014:			
Container Name	ComMainFunctionTx			
Parent Container	ComConfig			
Description	Each element of this container defines one instance of Com_MainFunctionTx.  Tags: atp.Status=draft			
Post-Build Variant Multipli- city	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Configuration Parameters				

SWS Item	ECUC_Com_10010:
Name	ComMainTxTimeBase
Parent Container	ComMainFunctionTx
Description	The period between successive calls to according instance of Com_MainFunctionTx in seconds. This parameter may be used by the COM generator to transform the values of the reception related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific.  The COM module (generator) may rely on the fact that Com_MainFunctionTx is scheduled according to the value configured here. Tags:  atp.Status=draft



Multiplicity	1		
Туре	EcucFloatParamDef		
Range	]0 INF[		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_10020 :			
Name	ComPreparationNotification			
Parent Container	ComMainFunctionTx			
	This callback function indicates that the signals/signal groups to be sent via a dedicated Com_MainFunctionTx instance will now be prepared for transmission.  If this parameter is omitted no notification shall take place.  Tags: atp.Status=draft			
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
	Pre-compile time	Х	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_10019:				
Name	ComMainTxPartitionRef	ComMainTxPartitionRef			
Parent Container	ComMainFunctionTx				
Description	Reference to EcucPartition, where the according Com_MainFunction instance is assigned to.				
	Tags: atp.Status=draft				
Multiplicity	1				
Туре	Reference to [ EcucPartition ]				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time X All Variants				
	Link time				
	Post-build time				
Scope / Dependency	scope: local				




# 10.1.7 ComMainFunctionRouteSignals

SWS Item	ECUC_Com_10013:		
Container Name	ComMainFunctionRouteSignals		
Parent Container	ComConfig		
Description	Each element of this container defines one instance of Com_MainFunctionRouteSignals.  Tags: atp.Status=draft		
Post-Build Variant Multipli- city	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Configuration Parameters			

SWS Item	ECUC_Com_10016:					
Name	ComMainRouteSignalsTimeBase					
Parent Container	ComMainFunctionRouteSign	als				
Description	The period between successive calls to according instance of Com_MainFunctionRouteSignals in seconds. This parameter may be used by the COM generator to transform the values of the reception related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific.  The COM module (generator) may rely on the fact that Com_MainFunctionRouteSignals is scheduled according to the value configured here.  Tags:  atp.Status=draft					
Multiplicity	1					
Туре	EcucFloatParamDef					
Range	]0 INF[					
Default value						
Post-Build Variant Value	false					
Value Configuration Class	Pre-compile time X All Variants					
_	Link time					
	Post-build time					
Scope / Dependency	scope: local					

SWS Item	ECUC_Com_10015:				
Name	ComMainRouteSignalsPartit	ComMainRouteSignalsPartitionRef			
Parent Container	ComMainFunctionRouteSigr	ComMainFunctionRouteSignals			
Description	Reference to EcucPartition, where the according Com_MainFunction instance is assigned to.  Tags: atp.Status=draft				
Multiplicity	1				
Туре	Reference to [ EcucPartition ]				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time X All Variants				
	Link time				
	Post-build time				
Scope / Dependency	scope: local				



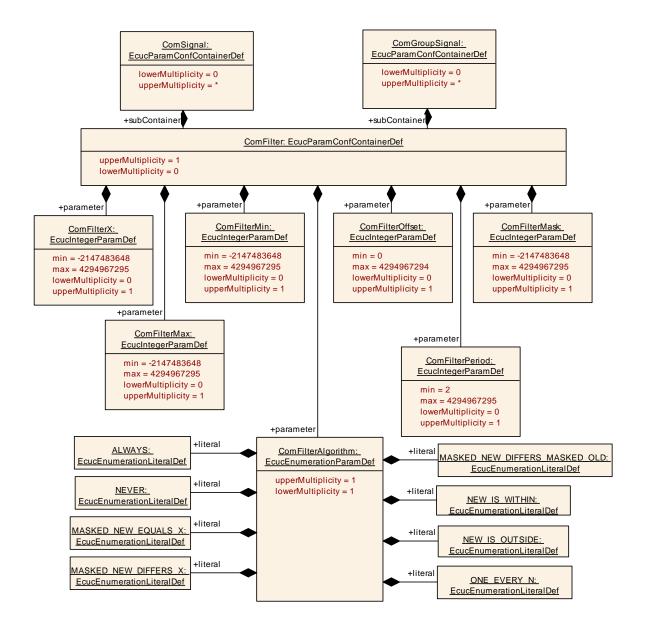

### 10.1.8 ComFilter

SWS Item	ECUC_Com_00339:
Container Name	ComFilter
Parent Container	ComGroupSignal, ComGwDestinationDescription, ComSignal
Description	This container contains the configuration parameters of the AUTOSAR COM module's Filters.
	Note: On sender side the container is used to specify the transmission mode conditions.
Configuration Parameters	

SWS Item	ECUC_Com_00146:
Name	ComFilterAlgorithm
Parent Container	ComFilter
Description	The range of values is specified in the [17] specification, chapter 2.2.2, Reception
	Filtering.
Multiplicity	1



Туре	EcucEnumerationParamDef		
Range	ALWAYS		
	MASKED_NEW_DIFFERS_MASKED_OLD		
	MASKED_NEW_DIFFERS_X		
	MASKED_NEW_EQUALS_X		
	NEVER		
	NEW_IS_OUTSIDE		
	NEW_IS_WITHIN		
	ONE_EVERY_N		
Post-Build Vari- ant Value	false		
Value Configura-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
tion Class	Link time		VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time		
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00235 :				
Name	ComFilterMask				
Parent Container	ComFilter				
Description		The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.			
Multiplicity	01				
Туре	EcucIntegerParamDef				
Range	-2147483648 4294967295				
Default value					
Post-Build Variant Multipli- city	false				
Post-Build Variant Value	false				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_00317:		
Name	ComFilterMax		
Parent Container	ComFilter		
Description	The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	-2147483648 4294967295		
Default value			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	ΧV	VARIANT-PRE-COMPILE
Class	Link time	ΧV	VARIANT-LINK-TIME, VARIANT-POST-



			BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00318 :		
Name	ComFilterMin		
Parent Container	ComFilter		
Description			onds to the parameter name in the [17]
	specification of Reception Filtering.		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	-2147483648		
	4294967295		
Default value			
Post-Build Variant Multipli-	ost-Build Variant Multipli-		
city	aisc		
Post-Build Variant Value	false		
	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00313:		
Name	ComFilterOffset		
Parent Container	ComFilter		
Description	The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.  Range = 0(ComFilterPeriod-1)		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	0 4294967294		
Default value			
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Х	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local dependency: ECUC_Com_(	00312	


SWS Item	ECUC_Com_00312:



Name	ComFilterPeriod		
Parent Container	ComFilter		
Description	This parameter defines the period of the ComFilterAlgorithm ONE EVERY N.		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	2 4294967295		
Default value			
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local	•	

SWS Item	ECUC_Com_00147 :			
Name	ComFilterX			
Parent Container	ComFilter			
Description		The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	-2147483648 4294967295			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			



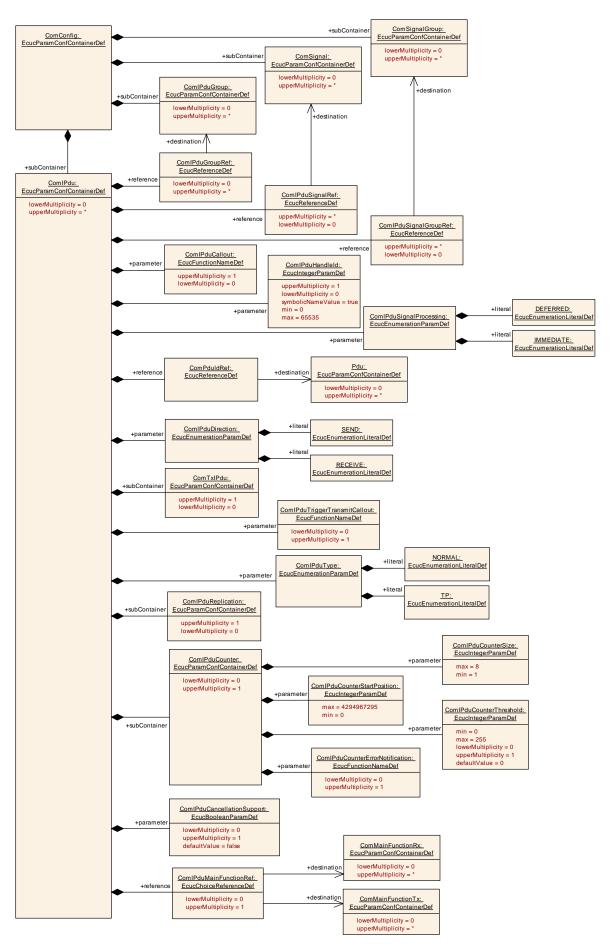



## 10.1.9 ComIPdu

SWS Item	ECUC_Com_00340:		
Container Name	ComIPdu		
Parent Container	ComConfig		
Description	Contains the configuration parameters of the AUTOSAR COM module's I-PDUs.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Configuration Parameters			

SWS Item	ECUC_Com_00387 :		
Name	ComIPduCallout		
Parent Container	ComIPdu		
Description	This parameter defines the existence and the name of a callout function for the corresponding I-PDU. If this parameter is omitted no I-PDU callout shall take place for the corresponding I-PDU.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression	-		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time	-	
	Post-build time	-	
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00709:				
Name	ComIPduCancellationSuppo	ComIPduCancellationSupport			
Parent Container	ComIPdu				
Description	Defines for I-PDUs with ComIPduType NORMAL: If the underlying IF-modul supports cancellation of transmit requests.  Defines for I-PDUs with ComIPduType TP: If the underlying TP-module supports RX and TX cancellation of ongoing requests.				
Multiplicity	01				
Туре	EcucBooleanParamDef				
Default value	false				
Post-Build Variant Multipli- city	true				
Post-Build Variant Value	true				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time				
	Post-build time	Χ	VARIANT-POST-BUILD		



Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	ł	
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		
	dependency: This parameter shall not be set to true if		
	ComCancellationSupport is set to false		

SWS Item	ECUC_Com_00493 :		
Name	ComIPduDirection		
Parent Container	ComIPdu		
•	The direction defines if this I-PDU, and therefore the contributing signals and signal groups, shall be sent or received.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	RECEIVE		
	SEND		
Post-Build Variant Value	false		
Value Configurati-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
on Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD
	Post-build time		
dency	scope: local dependency: If configured to Sent also a see ECUC_Com_00496	Cor	nTxlpdu container shall be included,

SWS Item	ECUC_Com_00175 :		
Name	ComIPduHandleId		
Parent Container	ComIPdu		
Description	The numerical value used as the ID of this I-PDU. The ComIPduHandleId is required by the API calls Com_RxIndication, Com_TpRxIndication, Com_StartOfReception and Com_CopyRxData to receive I-PDUs from the PduR (ComIP-duDirection: Receive), as well as the PduId passed to an Rx-I-PDU-callout. For Tx-I-PDUs (ComIPduDirection: Send), this handle Id is used for the APIs calls Com_TxConfirmation, Com_TriggerTransmit, Com_TriggerIPDUSend or Com_TriggerIPDUSendWithMetaData, Com_CopyTxData and Com_TpTxConfirmation to transmit respectively confirm transmissions of I-PDUs, as well as the PduId passed to the Tx-I-PDU-callout configured with ComIPduCallout and/or ComIPduTriggerTransmitCallout.		
Multiplicity	01		
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 65535		
Default value			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: ECU		

SWS Item	ECUC_Com_00119:
Name	ComIPduSignalProcessing



Parent Container	ComIPdu		
Description	For the definition of the two modes Immediate and Deferred.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range		signal indication / confirmations are deferred for example to a cyclic task	
		the signal indications / confirmations are performed in Com_RxIndication/ Com_TxConfirmation	
Post-Build Variant Value	true		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00765 :		
Name	ComIPduTriggerTransmitCal	llout	
Parent Container	ComIPdu		
Description	If there is a trigger transmit callout defined for this I-PDU this parameter contains the name of the callout function.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		_

SWS Item	ECUC_Com_00761 :	
Name	ComIPduType	
Parent Container	ComIPdu	
Description	Defines if this I-PDU is a normal I-PDU th	nat can be sent unfragmented or if this is a
	large I-PDU that shall be sent via the Tra	nsport Protocol of the underlying bus.
Multiplicity	1	
Туре	EcucEnumerationParamDef	
Range	NORMAL	sent or received via normal L-PDU
		sent or received via TP
Post-Build Variant Value	true	
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE
on Class	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Scope / Depen- dency	scope: local	



SWS Item	ECUC_Com_00206 :		
Name	ComIPduGroupRef		
Parent Container	ComIPdu		
Description	Reference to the I-PDU grou	ps thi	s I-PDU belongs to.
Multiplicity	0*		
Туре	Reference to [ComIPduGrou	ıp]	
Post-Build Variant Multipli-	trus		
city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_10012:		
Name	ComIPduMainFunctionRef		
Parent Container	ComIPdu		
Description	Reference to the Com_MainFunctionRx/Com_MainFunctionTx this I-PDU belongs to. Mandatory, if multiple main functions of the relevant type are defined.  Tags: atp.Status=draft		
Multiplicity	01		
Туре	Choice reference to [ ComMa	ainFu	nctionRx , ComMainFunctionTx ]
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00519:			
Name	ComIPduSignalGroupRef			
Parent Container	ComIPdu			
Description	References to all signal groups contained in this I-Pdu			
Multiplicity	0*			
Туре	Reference to [ComSignalGre	oup]		
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item ECUC_Com_00518 :
---------------------------



Name	ComIPduSignalRef		
Parent Container	ComIPdu		
Description	References to all signals cor	taine	d in this I-PDU.
Multiplicity	0*		
Туре	Reference to [ComSignal]		
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00711 :		
Name	ComPduldRef		
Parent Container	ComIPdu		
Description	Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Multiplicity	1		
Туре	Reference to [ Pdu ]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE		
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComIPduCounter	01	This optional container contains the configuration parameters of PDU Counter.
ComIPduReplication	1 (1 1	This optional container contains the information needed for each I-PDU replicated.
ComTxIPdu	1 () 1	This container must be included if COM_IPDU_DIRECTION is configured to SEND.

**[SWS\_Com\_00497]** [A ComTxIPdu container must be included if ComIPduDirection is configured to SEND.] (SRS\_BSW\_00167)

### 10.1.10 ComlPduCounter

SWS Item	ECUC_Com_00592 :
Container Name	ComIPduCounter
Parent Container	ComIPdu
Description	This optional container contains the configuration parameters of PDU Counter.
Configuration Paramete	ers

SWS Item	ECUC_Com_00003:
Name	ComIPduCounterErrorNotification
Parent Container	ComIPduCounter




,	Name of Com_CbkCounterErr callback function to be called. If this parameter is omitted no I-PDU counter mismatch notification shall take			
	place.			
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	X	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00593:			
Name	ComIPduCounterSize	ComIPduCounterSize		
Parent Container	ComIPduCounter			
Description	Size of PDU Counter expres	ssed ir	bits	
Multiplicity	1	1		
Туре	EcucIntegerParamDef			
Range	1 8	18		
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00594:				
Name	ComIPduCounterStartPosition				
Parent Container	ComIPduCounter				
Description	Position of PDU counter expressed in bits from start position of data content of I-PDU (SDU). Note that PDU counter is not allowed to cross a byte border. The parameter ComIPduCounterStartPosition shall define the bit0 of the first byte like in little endian byte order.				
Multiplicity	1				
Туре	EcucIntegerParamDef				
Range	0 4294967295				
Default value	-				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time X All Variants				
	Link time				
	Post-build time				
Scope / Dependency	scope: local	•			



SWS Item	ECUC_Com_00595 :		
Name	ComIPduCounterThreshold		
Parent Container	ComIPduCounter		
Description	Threshold value of I-PDU co	unter	algorithm, see ECUC_Com_00590.
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	0 255		
Default value	0		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time	ŀ	
	Post-build time	1	
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time	ŀ	
	Post-build time		
Scope / Dependency	scope: local		

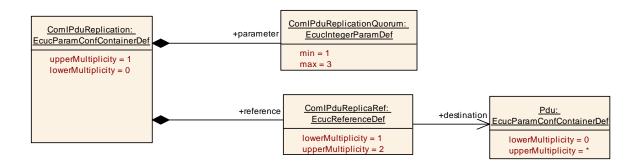

# 10.1.11 ComlPduReplication

SWS Item	ECUC_Com_00599:
Container Name	ComIPduReplication
Parent Container	ComIPdu
II Jescrintion	This optional container contains the information needed for each I-PDU replicated.
Configuration Parameters	

SWS Item	ECUC_Com_00600:			
Name	ComIPduReplicationQuorum			
Parent Container	ComIPduReplication	ComIPduReplication		
Description	The number of identical I-PD	Us ne	eeded for successful voting.	
Multiplicity	1	1		
Туре	EcucIntegerParamDef	EcucIntegerParamDef		
Range	13			
Default value				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time			




# Specification of Communication AUTOSAR CP R19-11

	Post-build time		
Scope / Dependency	scope: local dependency: This value mus ComlPduReplicaRef + 1).	t be le	ess or equal to the multiplicity of (

SWS Item	ECUC_Com_00601:			
Name	ComIPduReplicaRef			
Parent Container	ComIPduReplication			
Description	Reference to replicas PduR	PDUs	of this IPDU.	
Multiplicity	12			
Туре	Reference to [ Pdu ]			
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time	-		
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time	1		
	Post-build time	-		
Scope / Dependency	scope: ECU			



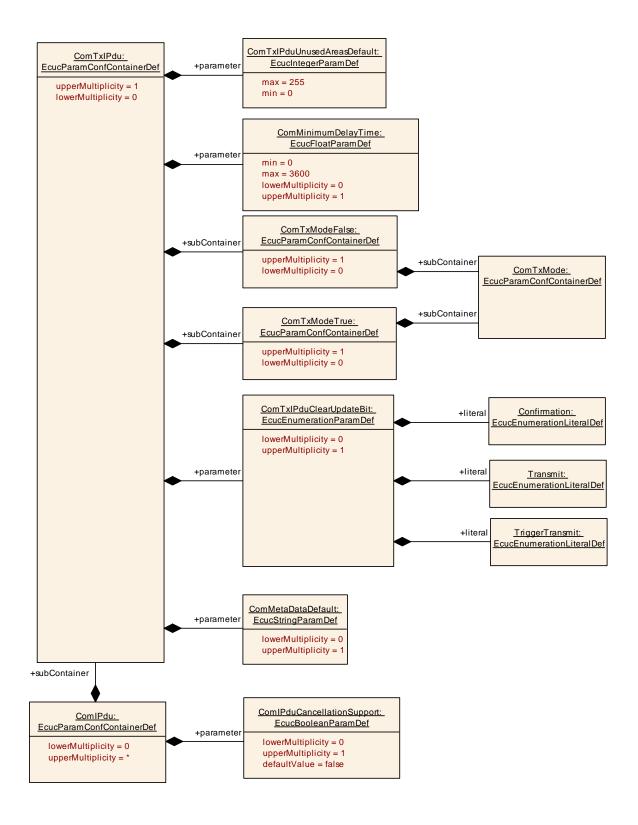

#### 10.1.12 ComTxIPdu

SWS Item	ECUC_Com_00496:
Container Name	ComTxIPdu
Parent Container	ComIPdu
II IASCRINTIAN	This container contains additional transmission related configuration parameters of the AUTOSAR COM module's I-PDUs.



## Configuration Parameters

SWS Item	ECUC_Com_10005:			
Name	ComMetaDataDefault			
Parent Container	ComTxIPdu			
Description	In case an I-PDU refers to a globally configured MetaDataType and no explicit meta data is given for a send request (e.g. by using Com_TriggerIPDUSendWithMetaData), the AUTOSAR COM module uses this configured default meta data for sending.  The configured string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).			
Multiplicity	01			
Туре	EcucStringParamDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
	Pre-compile time	Χ	All Variants	
Class	Link time			
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: ECU dependency: This parameter shall only be used in case ComMetaDataSupport is enabled. The length of the default meta data shall match the globally configured MetaDataLength of this I-PDU.			

SWS Item	ECUC_Com_00181:				
Name	ComMinimumDelayTime				
Parent Container	ComTxIPdu				
	Defines the Minimum Delay Time (MDT) between successive transmissions of this I-PDU in seconds. The MDT is independent of the possible different transmission modes. There is only one minimum delay time parameter for one I-PDU. The minimum delay timer is not reset by changing the transmission mode. Hence, it is not allowed to violate the minimum delay time by transmission mode changes. It is not possible to monitor the minimum delay time for I-PDUs that are requested using the Com_TriggerTransmit API.				
Multiplicity	01				
Туре	EcucFloatParamDef				
Range	0 3600]				
Default value					
Post-Build Variant Multipli- city	true				
Post-Build Variant Value	true				
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE				
Class	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Χ	VARIANT-LINK-TIME		



	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		


SWS Item	ECUC Com 00576:			
Name	ComTxIPduClearUpdateBit			
Parent Container	ComTxIPdu			
_	Defines when the update-bits of signals will be cleared.	s or signal groups, contained in this I-PDU,		
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	Confirmation	The update-bits are cleared when the transmission of the I-PDU was confirmed. In case of Direct/N-Times transmission mode the update bits will be cleared with respect to the confirmation behaviour of SWS_Com_00305.		
	Transmit	The update-bits are cleared directly after the invocation of PduR_ComTransmit.		
	TriggerTransmit	The update-bits are cleared after the I-PDU was fetched via Com_TriggerTransmit.		
Post-Build Variant Multiplicity				
Post-Build Variant Value	true			
Multiplicity Confi-	Pre-compile time	X VARIANT-PRE-COMPILE		
guration Class	Link time	X VARIANT-LINK-TIME		
	Post-build time	X VARIANT-POST-BUILD		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE		
on Class	Link time	X VARIANT-LINK-TIME		
	Post-build time	X VARIANT-POST-BUILD		
Scope / Depen- dency	scope: local			

SWS Item	ECUC_Com_00017:				
Name	ComTxIPduUnusedAreasDe	ComTxIPduUnusedAreasDefault			
Parent Container	ComTxIPdu				
Description	The AUTOSAR COM module fills not used areas of an I-PDU with this byte pattern. This attribute is mandatory to avoid undefined behaviour. This byte-pattern will be repeated throughout the I-PDU before any init-values or update-bits were set.				
Multiplicity	1				
Туре	EcucIntegerParamDef				
Range	0 255				
Default value					
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Scope / Dependency	scope: local				

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComTxModeFalse	01	The referenced transmission mode object that is used when the filtering state for this I-PDU evaluates to false. The default is transmission mode None.
ComTxModeTrue	01	The referenced transmission mode object that is used when



the filtering state for this I-PDU evaluates to true.

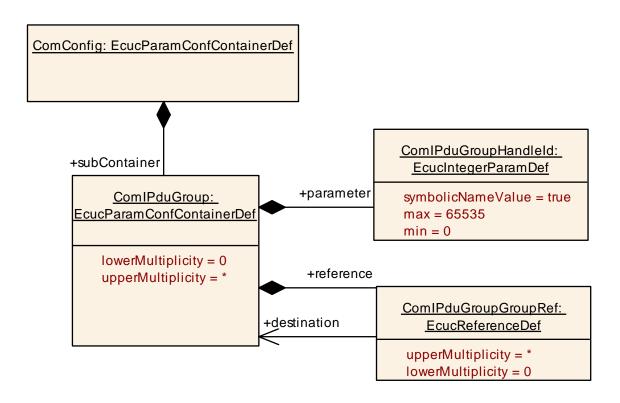

## 10.1.13 ComlPduGroup


SWS Item	ECUC_Com_00341:			
Container Name	ComIPduGroup			
Parent Container	ComConfig			
Description	PDU groups	Contains the configuration parameters of the AUTOSAR COM module's I-PDU groups.		
Post-Build Variant Multipli- city	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Configuration Parameters		•		

SWS Item	ECUC_Com_00184 :		
Name	ComIPduGroupHandleId		
Parent Container	ComIPduGroup		
Description	The numerical value used as the ID of this I-PDU Group. The ComIPduGroupHandleId is required by the API calls to start and stop I-PDU Groups.  Range: 0 (ComSupportedIPduGroups-1)		
Multiplicity	1		
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 65535		
Default value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X All Variants	



	Link time	
	Post-build time	
Scope / Dependency	scope: ECU	

SWS Item	ECUC_Com_00185:			
Name	ComIPduGroupGroupRef			
Parent Container	ComIPduGroup			
Description	References to all I-PDU groups that includes this I-PDU group. If this reference is omitted this I-PDU group does not belong to another I-PDU			
	group.			
Multiplicity	0*	0*		
Туре	Reference to [ ComIPduGroup ]			
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
_	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

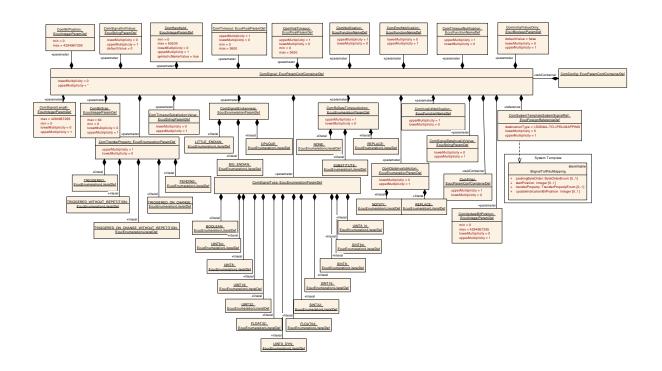

# 10.1.14 ComSignal

SWS Item	ECUC_Com_00344:
Container Name	ComSignal
Parent Container	ComConfig
Description	Contains the configuration parameters of the AUTOSAR COM module's signals.



Post-Build Variant Multipli city	true		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Configuration Parameters			

SWS Item	ECUC_Com_00259:			
Name	ComBitPosition			
Parent Container	ComSignal			
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order			
Multiplicity	1			
Туре	EcucIntegerParamDef	EcucIntegerParamDef		
Range	0 4294967295			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local	•		

SWS Item	ECUC_Com_00158 :	ECUC_Com_00158:		
Name	ComBitSize			
Parent Container	ComSignal			
Description	Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN the size shall be configured by ComSignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 64			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00314:
Name	ComDataInvalidAction
Parent Container	ComSignal
	This parameter defines the action performed upon reception of an invalid signal. Relating to signal groups the action in case if one of the included signals is an invalid signal.  If Replace is used the ComSignalInitValue will be used for the replacement.
Multiplicity	01



Туре	EcucEnumerationParamDef		
Range	NOTIFY		
	REPLACE	Litera	al for DataInvalidAction
Post-Build Variant Multiplicity			
Post-Build Variant Value	false		
Multiplicity Confi-	Pre-compile time	XΝ	/ARIANT-PRE-COMPILE
guration Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD
	Post-build time		
Value Configurati-	Pre-compile time	XΝ	/ARIANT-PRE-COMPILE
on Class	Link time		VARIANT-LINK-TIME, VARIANT-
	Dood build time		POST-BUILD
	Post-build time		
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00499:		
Name	ComErrorNotification		
Parent Container	ComSignal		
Description	Only valid on sender side: Name of Com_CbkTxErr callback function to be called.  If this parameter is omitted no error notification shall take place.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength	-		
minLength	-		
regularExpression			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00183:		
Name	ComFirstTimeout		
Parent Container	ComSignal		
	Defines the length of the first deadline monitoring timeout period in seconds. This timeout is used immediately after start (or restart) of the deadline monitoring service. The timeout period of the successive periods is configured by ECUC_Com_00263.		
Multiplicity	01		
Туре	EcucFloatParamDef		
Range	[0 3600]		
Default value			
Post-Build Variant Multipli- city	true		



Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00165 :		
Name	ComHandleId		
Parent Container	ComSignal		
Description	The numerical value used as the ID. This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.		
Multiplicity	01		
Туре	EcucIntegerParamDef (Sym	oolic 1	Name generated for this parameter)
Range	0 65535		
Default value			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: ECU		

SWS Item	ECUC_Com_00811 :		
Name	ComInitialValueOnly		
Parent Container	ComSignal		
Description	This parameter defines that the respective signal's initial value shall be put into the respective PDU but there will not be any update of the value through the RTE. Thus the Com implementation does not need to expect any API calls for this signal (group).		
Multiplicity	01		
Туре	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00315:
Name	ComInvalidNotification
Parent Container	ComSignal



Description	Only valid on receiver side: Name of Com_CbkInv callback function to be		
	called. Name of the function which notifies the RTE about the reception of		
	an invalidated signal/ signal group. Only applicable if		
	ComDataInvalidAction is con	nfigure	ed to NOTIFY.
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli-	falso		
city	idisc		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Х	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00498 :		
Name	ComNotification		
Parent Container	ComSignal		
Description	On sender side: Name of Co	m_Cl	okTxAck callback function to be called.
	On receiver side: Name of C	om_C	CbkRxAck callback function to be called.
	If this parameter is omitted n	o noti	fication shall take place.
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli-	falso		
city	laise		
Post-Build Variant Value	false		
	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
	BUILD		
	Post-build time		
Scope / Dependency	scope: local	•	

SWS Item	ECUC_Com_00412:
Name	ComRxDataTimeoutAction
Parent Container	ComSignal
	This parameter defines the action performed upon expiration of the reception deadline monitoring timer.
Multiplicity	01
Туре	EcucEnumerationParamDef



Range	NONE	no replacement shall take place
· ·	REPLACE	signals shall be replaced by their
		ComSignalInitValue
	SUBSTITUTE	signals shall be replaced by their
		ComTimeoutSubstitutionValue
Post-Build Variant Multiplicity		
Post-Build Variant Value	false	
Multiplicity Confi-	Pre-compile time	X VARIANT-PRE-COMPILE
guration Class	Link time	X VARIANT-LINK-TIME, VARIANT-POST-
		BUILD
	Post-build time	
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE
on Class	Link time	X VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time	
Scope / Depen-	scope: local	
dency		

SWS Item	ECUC_Com_00391:			
Name	ComSignalDataInvalidValue			
Parent Container	ComSignal			
	SINT16, SINT32, SINT64 the chapter Integer Type in the A In case the ComSignalType interpreted as defined in the specification. In case the ComSignalType defined in the chapter Booled In case the ComSignal is a Linterpreted as a decimal republanks, e.g. "97 98 100" mean O(lowest address), "b" is in baddress).	is UIN e strin AUTO is FLC chapt is BO an Ty JINT8 resent ins a : yte 1, T8_D	IT8, UINT16, UINT32, UINT64, SINT8, g shall be interpreted as defined in the	
Multiplicity	01			
Туре	EcucStringParamDef			
Default value				
maxLength				
minLength	<del></del>			
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
	Pre-compile time		VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			



dependency: In case of UINT8_N the length of
ComSignalDataInvalidValue has to be the same as ComSignalLength.

SWS Item	ECUC_Com_00157:		
Name	ComSignalEndianness		
Parent Container	ComSignal		
Description	Defines the endianness of the signal's netw	ork representation.	
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BIG_ENDIAN		
	LITTLE_ENDIAN		
	OPAQUE		
Post-Build Variant Value	true		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD		
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00170:			
Name	ComSignalInitValue			
Parent Container	ComSignal			
Description	Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0.  In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification.  In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification.  In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.  In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).  For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.			
Multiplicity	01			
Туре	EcucStringParamDef			
Default value	0			
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	



Scope / Dependency	scope: local
	dependency: In case of UINT8_N the length of ComSignalInitValue has to
	be the same as ComSignalLength.

SWS Item	ECUC_Com_00437 :				
Name	ComSignalLength				
Parent Container	ComSignal				
Description	Description: For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.  The supported maximum length is restricted by the used transportation system. For non TP-PDUs the maximum size of a PDU, and therefore also of any included signal, is limited by the concrete bus characteristic. For example, the limit is 8 bytes for CAN and LIN, 64 bytes for CAN FD and				
Multiplicity	254 for FlexRay. 01				
Туре	EcucIntegerParamDef				
Range	0 4294967295				
Default value					
Post-Build Variant Multipli- city	false				
Post-Build Variant Value	false				
	Pre-compile time X VARIANT-PRE-COMPILE				
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Scope / Dependency	scope: local		-		

SWS Item	ECUC_Com_00127:			
Name	ComSignalType			
Parent Container	ComSignal			
Description	The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.			
Multiplicity	1			
Туре	EcucEnumerationParamDef			
Range	BOOLEAN			
	FLOAT32			
	FLOAT64			
	SINT16			
	SINT32 SINT64			
	SINT8			
	UINT16			
	UINT32			
	UINT64	UINT64		
	UINT8			
	UINT8_DYN			
	UINT8_N			
Post-Build Varian Value	<sup>t</sup> false			



Value Configurati-	Pre-compile time	Χ	VARIANT-PRE-COMPILE
on Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00263:				
Name	ComTimeout				
Parent Container	ComSignal				
Description	Defines the length of the deadline monitoring timeout period in seconds. The period for the first timeout period can be configured separately by ECUC_Com_00183.				
Multiplicity	01				
Туре	EcucFloatParamDef				
Range	[0 3600]				
Default value					
Post-Build Variant Multipli- city	true				
Post-Build Variant Value	true				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD				
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_00552:				
Name	ComTimeoutNotification				
Parent Container	ComSignal				
Description			bkTxTOut callback function to be called. CbkRxTOut callback function to be called.		
Multiplicity	01				
Туре	EcucFunctionNameDef				
Default value					
maxLength					
minLength					
regularExpression					
Post-Build Variant Multipli- city	false				
Post-Build Variant Value	false				
	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD		
	Post-build time				
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time X VARIANT-LINK-TIME, VARIAN BUILD  Post-build time				
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_10006:
Name	ComTimeoutSubstitutionValue
Parent Container	ComSignal
Description	The signal substitution value will be used in case of a timeout and



	ComRxDataTimeoutAction is set to SUBSTITUTE. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00.			
Ir	In case ofUINT8_DYN the initial size shall be 0.			
s	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification.			
ir			DAT32, FLOAT64 the string shall be er Float Type in the AUTOSAR EcuC	
			OLEAN the string shall be interpreted as pe in the AUTOSAR EcuC specification.	
ir b 0 a	In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be			
ir	interpreted as 0-sized dynamic signal.			
<b>Multiplicity</b> 0	)1			
<i>Type</i>	EcucStringParamDef			
Default value	-			
maxLength	-			
minLength	-			
regularExpression	-			
Post-Build Variant Multipli-	true			
Post-Build Variant Value tr	true			
Multiplicity Configuration P	n Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
F	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class P	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	ink time	Χ	VARIANT-LINK-TIME	
F	Post-build time	Χ	VARIANT-POST-BUILD	
	scope: local			

SWS Item	ECUC_Com_00232 :		
Name	ComTransferProperty		
Parent Contai- ner	ComSignal		
Description	Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.		
Multiplicity	01		
Туре	EcucEnumerationParamDef		
Range	PENDING	A write access to this signal never triggers the transmission of the corresponding I-PDU.	
	TRIGGERED	Depending on the transmission mode, a write access to this signal can trigger the transmission of	



		the corresponding I-PDU.
	TRIGGERED_ON_CHANGE	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.
	TRIGGERED_ON_CHANGE_WITHOUT_REPETITION	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.
	TRIGGERED_WITHOUT_REPETITION	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition.
Post-Build Vari- ant Multiplicity	true	
Post-Build Vari- ant Value	true	
Multiplicity Configuration	Pre-compile time	X VARIANT-PRE- COMPILE
Class	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Value Configu- ration Class	Pre-compile time	X VARIANT-PRE- COMPILE
	Link time	X VARIANT-LINK-TIME
_	Post-build time	X VARIANT-POST-BUILD
Scope / Depen- dency	scope: local	


SWS Item	ECUC_Com_00257:			
Name	ComUpdateBitPosition			
Parent Container	ComSignal			
Description	Bit position of update-bit inside I-PDU. If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.  Range: 063 for CAN and LIN, 0511 for CAN FD, 02031 for FlexRay, 04294967295 for TP.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			



Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00002:			
Name	ComSystemTemplateSystemSignalRef			
Parent Container	ComSignal			
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template) which this ComSignal (or ComGroupSignal) represents.			
Multiplicity	01			
Туре	Foreign reference to [ I-SIGN	NAL-T	O-I-PDU-MAPPING ]	
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: ECU			

Included Containers					
Container Name	Multiplicity	Scope / Dependency			
ComFilter	01	This container contains the configuration parameters of the AUTOSAR COM module's Filters.  Note: On sender side the container is used to specify the transmission mode conditions.			

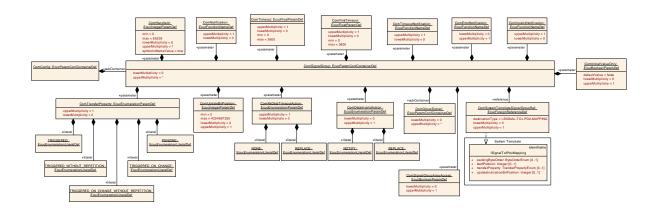

# 10.1.15 ComSignalGroup

SWS Item ECUC_Com_00345 :
---------------------------



Container Name	ComSignalGroup			
Parent Container	ComConfig			
Description	Contains the configuration parameters of the AUTOSAR COM module's signal groups.			
Post-Build Variant Multipli- city	true			
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE			
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Configuration Parameters				

SWS Item	ECUC_Com_00314 :			
Name	ComDataInvalidAction			
Parent Container	ComSignalGroup			
Description	This parameter defines the action performed upon reception of an invalid signal. Relating to signal groups the action in case if one of the included signals is an invalid signal.  If Replace is used the ComSignalInitValue will be used for the replacement.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
	NOTIFY			
	REPLACE	Lite	ral for DataInvalidAction	
Post-Build Variant Multiplicity				
Post-Build Variant Value	false			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
guration Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD	
	Post-build time			
Value Configurati-	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
on Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD	
	Post-build time			
Scope / Depen- dency	scope: local			

SWS Item	ECUC_Com_00499:		
Name	ComErrorNotification		
Parent Container	ComSignalGroup		
•	Only valid on sender side: Name of Com_CbkTxErr callback function to be called.		
	If this parameter is omitted n	o erro	r notification shall take place.
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		



Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time	ŀ	
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00183:			
Name	ComFirstTimeout			
Parent Container	ComSignalGroup			
	Defines the length of the first deadline monitoring timeout period in seconds. This timeout is used immediately after start (or restart) of the deadline monitoring service. The timeout period of the successive periods is configured by ECUC_Com_00263.			
Multiplicity	01			
Туре	EcucFloatParamDef			
Range	[0 3600]			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local	•		

SWS Item	ECUC_Com_00165 :				
Name	ComHandleId	ComHandleId			
Parent Container	ComSignalGroup				
Description	The numerical value used as the ID. This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.				
Multiplicity	01				
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)				
Range	0 65535	0 65535			
Default value					
Post-Build Variant Multipli- city	false				
Post-Build Variant Value	false				
Multiplicity Configuration	Pre-compile time	Χ	All Variants		
Class	Link time				
	Post-build time				
Value Configuration Class	Pre-compile time	Χ	All Variants		
	Link time				
	Post-build time				
Scope / Dependency	scope: ECU				

SWS Item	ECUC_Com_00811:
Name	ComInitialValueOnly
Parent Container	ComSignalGroup
·	This parameter defines that the respective signal's initial value shall be put into the respective PDU but there will not be any update of the value through the RTE. Thus the Com implementation does not need to expect any API calls for this signal (group).



Multiplicity	01		
Туре	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time	1	
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00315 :		
Name	ComInvalidNotification		
Parent Container	ComSignalGroup		
Description			of Com_CbkInv callback function to be
			n notifies the RTE about the reception of
	an invalidated signal/ signal		
88 Lt. 11 Lt.	ComDataInvalidAction is con	ifigure	ed to NOTIFY.
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default value	<del></del>		
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli-	false		
city	idise		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME, VARIANT-POST-
			BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00498:
Name	ComNotification
Parent Container	ComSignalGroup
	On sender side: Name of Com_CbkTxAck callback function to be called. On receiver side: Name of Com_CbkRxAck callback function to be called.  If this parameter is omitted no notification shall take place.
Multiplicity	01
Туре	EcucFunctionNameDef
Default value	
maxLength	
minLength	
regularExpression	
Post-Build Variant Multipli-	false



city			
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

2112					
SWS Item	ECUC_Com_00412:				
Name	ComRxDataTimeoutAction				
Parent Container	ComSignalGroup				
Description	This parameter defines the action pe	rforn	ned upon expiration of the reception		
	deadline monitoring timer.				
Multiplicity	01				
Туре	EcucEnumerationParamDef				
Range	NONE	no r	eplacement shall take place		
	REPLACE		nals shall be replaced by their		
		Con	nSignalInitValue		
	SUBSTITUTE	signals shall be replaced by their			
	ComTimeoutSubstitutionValue				
Post-Build Variant	nt <sub>false</sub>				
IIVIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII					
Post-Build Variant	t <sub>false</sub>				
vaiue					
Multiplicity Confi-	Pre-compile time	Х	VARIANT-PRE-COMPILE		
guration Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-		
			BUILD		
	Post-build time				
Value Configurati-	Pre-compile time	Х	VARIANT-PRE-COMPILE		
on Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-		
			BUILD		
	Post-build time				
Scope / Depen-	scope: local				
dency					

SWS Item	ECUC_Com_10003:		
Name	ComSignalGroupArrayAccess		
Parent Container	ComSignalGroup		
Description	Defines whether the uint8-array based access shall be used for this ComSignalGroup.		
Multiplicity	01		
Туре	EcucBooleanParamDef		
Default value			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	All Variants
Class	Link time		
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		



Scope / Dependency	

SWS Item	ECUC_Com_00263:		
Name	ComTimeout		
Parent Container	ComSignalGroup		
Description	Defines the length of the deadline monitoring timeout period in seconds.  The period for the first timeout period can be configured separately by		
	ECUC_Com_00183.		
Multiplicity	01		
Туре	EcucFloatParamDef		
Range	[0 3600]		
Default value			
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00552 :			
Name	ComTimeoutNotification			
Parent Container	ComSignalGroup			
Description	On sender side: Name of Com_CbkTxTOut callback function to be called. On receiver side: Name of Com_CbkRxTOut callback function to be called.			
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default value				
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00232:
	ComTransferProperty
Parent Contai- ner	ComSignalGroup
,	Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.
Multiplicity	01
Туре	EcucEnumerationParamDef



_		- 1 -	
Range	PENDING		write access to this
			gnal never triggers the
			ansmission of the
	TD1005D5D	_	rresponding I-PDU.
	TRIGGERED		epending on the
			ansmission mode, a write
			cess to this signal can
			gger the transmission of
	TRICOERED ON CHANGE		e corresponding I-PDU.
	TRIGGERED_ON_CHANGE		epending on the
			ansmission mode, a write
			cess to this signal can
			gger the transmission of e corresponding I-PDU,
			it only in case the written
			ilue is different to the
			cally stored (last sent or
			tial value) in length or
			llue.
	TRIGGERED ON CHANGE WITHOUT REPETITION		epending on the
			ansmission mode, a write
			cess to this signal can
			gger the transmission of
			e corresponding I-PDU
		jus	st once without a
			petition, but only in case
			e written value is
			ferent to the locally
			ored (last sent or initial
			lue) in length or value.
	TRIGGERED_WITHOUT_REPETITION		epending on the
			ansmission mode, a write
			cess to this signal can
			gger the transmission of
			e corresponding I-PDU
			st once without a petition.
Post-Build Vari-		μe	pennon.
ant Multiplicity	true		
Post-Build Vari-	truo		
ant value	nue		
Multiplicity	Pre-compile time	X	VARIANT-PRE-
Configuration			COMPILE
Class	Link time	_	VARIANT-LINK-TIME
	Post-build time		VARIANT-POST-BUILD
	Pre-compile time	X	VARIANT-PRE-
ration Class			COMPILE
	Link time	_	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00257:
Name	ComUpdateBitPosition
Parent Container	ComSignalGroup
	Bit position of update-bit inside I-PDU.  If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.




	Range: 063 for CAN and LIN,				
	0511 for CAN FD,				
	02031 for FlexRay,	·			
	04294967295 for TP.				
Multiplicity	01				
Туре	EcucIntegerParamDef				
Range	0 4294967295				
Default value					
Post-Build Variant Multipli-	truo				
city	urue				
Post-Build Variant Value	true				
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time	Χ	VARIANT-LINK-TIME		
	Post-build time	Χ	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_00001:			
Name	ComSystemTemplateSignalGroupRef			
Parent Container	ComSignalGroup			
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignalGroup (SystemTemplate) which this ComSignalGroup represents.			
Multiplicity	01	ato, vi	mion this comeignatoroup represents.	
Туре	Foreign reference to [ I-SIGNAL-TO-I-PDU-MAPPING ]			
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: ECU			

Included Containers					
Container Name	Multiplicity	Scope / Dependency			
ComGroupSignal		This container contains the configuration parameters of group signals. I.e. signals that are included within a signal group.			



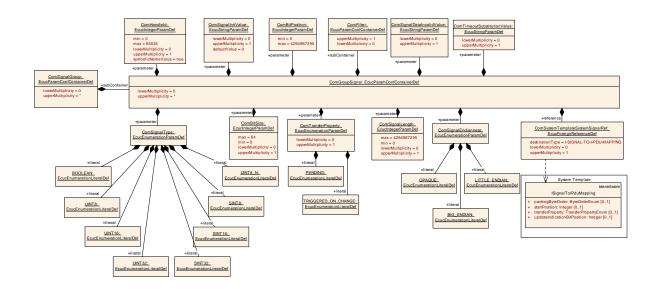

# 10.1.16 ComGroupSignal

SWS Item	ECUC_Com_00520 :		
Container Name	ComGroupSignal		
Parent Container	ComSignalGroup		
Description	This container contains the configuration parameters of group signals. I.e. signals that are included within a signal group.		
Post-Build Variant Multipli- city	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Configuration Parameters			

SWS Item	ECUC_Com_00259:			
Name	ComBitPosition			
Parent Container	ComGroupSignal			
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00158:
Name	ComBitSize
Parent Container	ComGroupSignal
Description	Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN the size shall be configured by ComSignalLength. For ComSignalTypes FLOAT32 and



	FLOAT64 the size is already defined by the signal type and therefore may be omitted.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 64			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time X VARIANT-LINK-TIME			
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00165 :			
Name	ComHandleId			
Parent Container	ComGroupSignal			
Description	The numerical value used as the ID.			
-	This ID identifies signals and	l signa	al groups in the COM APIs using	
	Com_SignalIdType or Com_	Signa	lGroupIdType parameter respectively.	
Multiplicity	01			
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)			
Range	0 65535			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
Multiplicity Configuration	Pre-compile time	Χ	All Variants	
Class	Link time	ł		
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	All Variants	
	Link time	ŀ		
	Post-build time			
Scope / Dependency	scope: ECU			

SWS Item	ECUC_Com_00391:			
Name	ComSignalDataInvalidValue			
Parent Container	ComGroupSignal			
Description	Defines the data invalid value of the signal. In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).  For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as			



	0-sized dynamic signal.		
Multiplicity	01		
Туре	EcucStringParamDef		
Default value			
maxLength			
minLength			
regularExpression			
Post-Build Variant Multipli- city	false		
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local dependency: In case of UINT8_N the length of ComSignalDataInvalidValue has to be the same as ComSignalLength.		

SWS Item	ECUC_Com_00157 :			
Name	ComSignalEndianness			
Parent Container	ComGroupSignal			
Description	Defines the endianness of the signal's netw	vork representation.		
Multiplicity	1			
Туре	EcucEnumerationParamDef	EcucEnumerationParamDef		
Range	BIG_ENDIAN			
	LITTLE_ENDIAN			
	OPAQUE			
Post-Build Variant Value	true			
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE		
on Class	Link time	X VARIANT-LINK-TIME		
	Post-build time	X VARIANT-POST-BUILD		
Scope / Depen- dency	scope: local			

SWS Item	ECUC_Com_00170:			
Name	ComSignalInitValue			
Parent Container	ComGroupSignal			
Description	Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0. In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest			



	address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as			
	0-sized dynamic signal.	iers. i	An empty string shall be interpreted as	
Multiplicity	01			
Туре	EcucStringParamDef			
Default value	0			
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
	scope: local dependency: In case of UINT8_N the length of ComSignalInitValue has to be the same as ComSignalLength.			

SWS Item	ECUC_Com_00437 :			
Name	ComSignalLength			
Parent Container	ComGroupSignal			
	Description: For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.  The supported maximum length is restricted by the used transportation			
	system. For non TP-PDUs the maximum size of a PDU, and therefore also of any included signal, is limited by the concrete bus characteristic. For example, the limit is 8 bytes for CAN and LIN, 64 bytes for CAN FD and 254 for FlexRay.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Multipli- city	false			
Post-Build Variant Value	false			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	X	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST- BUILD	
	Post-build time			
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00127:
Name	ComSignalType
Parent Container	ComGroupSignal
Description	The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned



	can be found by examining the value of th	is a	ttribute.
	This type could also be used to reserved appropriate storage in AUTOSAR COM.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BOOLEAN		
	FLOAT32		
	FLOAT64		
	SINT16		
	SINT32		
	SINT64		
	SINT8	-	
	UINT16		
	UINT32	ŀ	
	UINT64		
	UINT8		
	UINT8_DYN		
	UINT8_N		
Post-Build Variant Value	false		
	Pre-compile time	Χ	VARIANT-PRE-COMPILE
on Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD
	Post-build time		
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_10006:
Name	ComTimeoutSubstitutionValue
Parent Container	ComGroupSignal
Description	The signal substitution value will be used in case of a timeout and ComRxDataTimeoutAction is set to SUBSTITUTE.  In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00.  In case ofUINT8_DYN the initial size shall be 0.  In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification.  In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification.  In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.  In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.  In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall
	be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.
Multiplicity	01
Туре	EcucStringParamDef
Default value	
maxLength	



minLength				
regularExpression				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			


SWS Item	ECUC_Com_00560 :		
Name	ComTransferProperty		
Parent Container	ComGroupSignal		
Description	Optionally defines whether this group signal shall contribute to the TRIGGERED_ON_CHANGE transfer property of the signal group. If at least one group signal of a signal group has the "ComTransferProperty" configured all other group signals of that signal group shall have the attribute configured as well.		
Multiplicity	01		
Туре	EcucEnumerationParamDef		
Range	PENDING	A change of the value of this group signal shall not be considered in the evaluation of the signal groups ComTransferProperty.	
	TRIGGERED_ON_CHANGE	A change of the value of this group signal shall be considered in the evaluation of the signal groups ComTransferProperty.	
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Confi-	Pre-compile time	X VARIANT-PRE-COMPILE	
guration Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
	Pre-compile time	X VARIANT-PRE-COMPILE	
tion Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00002:		
Name	ComSystemTemplateSysten	าSigna	alRef
Parent Container	ComGroupSignal		
•	Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template) which this ComSignal (or ComGroupSignal) represents.		
Multiplicity	01		
Туре	Foreign reference to [ I-SIGNAL-TO-I-PDU-MAPPING ]		
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time X VARIANT-PRE-COMPILE		
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD



Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComFilter	01	This container contains the configuration parameters of the AUTOSAR COM module's filters.  Note: On sender side the container is used to specify the transmission mode conditions.

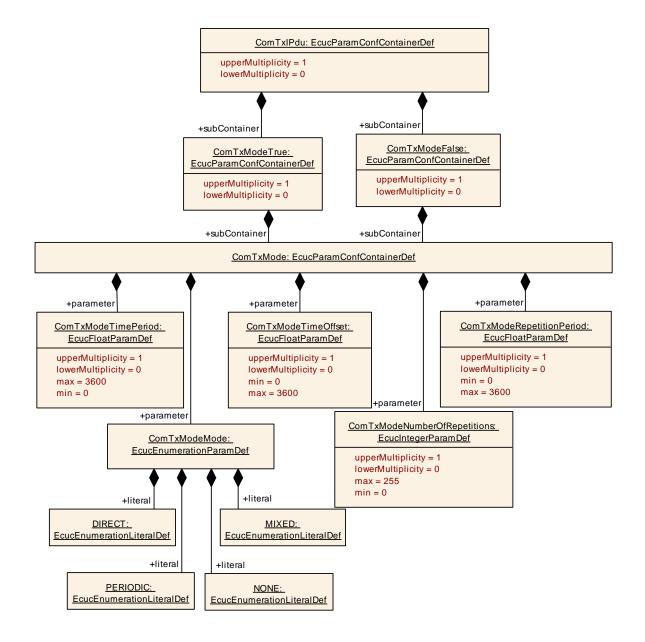

#### 10.1.17 ComTxMode

SWS Item	ECUC_Com_00351:
Container Name	ComTxMode



Parent Container	ComTxModeFalse, ComTxModeTrue
	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes.
Configuration Parameters	

SWS Item	ECUC_Com_00137 :		
Name	ComTxModeMode		
Parent Container	ComTxMode		
·	The available transmission modes described in [18] shall be extended by the additional mode None.  The transmission mode None shall not have any further sub-attributes in the ComTxMode object.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	DIRECT		
	MIXED		
	NONE	Literal for TxMode	
	PERIODIC		
Post-Build Variant Value	true		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00281:			
Name	ComTxModeNumberOfRepetitions			
Parent Container	ComTxMode			
Description			for the transmission mode DIRECT and	
	the event driven part of trans	missi	on mode MIXED.	
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 255	O 255		
Default value				
Post-Build Variant Multipli-	<i>i</i> - <sub>true</sub>			
city	ude			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00282:		
Name	ComTxModeRepetitionPeriod		
Parent Container	ComTxMode		
·	Defines the repetition period in seconds of the multiple transmissions in case ComTxModeNumberOfRepetitions is configured greater than or equal to 1 and ComTxModeMode is configured to DIRECT or MIXED. In case of the mixed transmission mode only the event driven part is affected.		
Multiplicity	01		
Туре	EcucFloatParamDef		
Range	[0 3600]		



Default value			
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00180 :			
Name	ComTxModeTimeOffset			
Parent Container	ComTxMode			
	Defines the period in seconds between the start of the I-PDU by Com_IpduGroupStart and the first transmission request in case ComTxModeMode is configured to PERIODIC or MIXED. In case of the mixed transmission mode only the periodic part is affected. In case ComTxModeTimeOffset is omitted or configured to 0, the first periodic transmission shall be transmitted within the next invocation of Com MainFunctionTx.			
Multiplicity	01			
Туре	EcucFloatParamDef	EcucFloatParamDef		
Range	[0 3600]			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local		·	

SWS Item	ECUC_Com_00178 :		
Name	ComTxModeTimePeriod		
Parent Container	ComTxMode		
Description	Defines the repetition period in seconds of the periodic transmission requests in case ComTxModeMode is configured to PERIODIC or MIXED. In case of the mixed transmission mode only the periodic part is affected.		
Multiplicity	01		
Туре	EcucFloatParamDef		
Range	[0 3600]		
Default value			
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD



Scope / Dependency	scope: local

### No Included Containers

### 10.1.18 ComTxModeTrue

SWS Item	ECUC_Com_00455:
Container Name	ComTxModeTrue
Parent Container	ComTxIPdu
Description	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to true.
Configuration Parameters	


Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComTxMode		This container contains the configuration parameters of the AUTOSAR COM module's transmission modes.

### 10.1.19 ComTxModeFalse

SWS Item	ECUC_Com_00454:
Container Name	ComTxModeFalse
Parent Container	ComTxIPdu
Description	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to false.
Configuration Parameters	

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComTxMode		This container contains the configuration parameters of the AUTOSAR COM module's transmission modes.



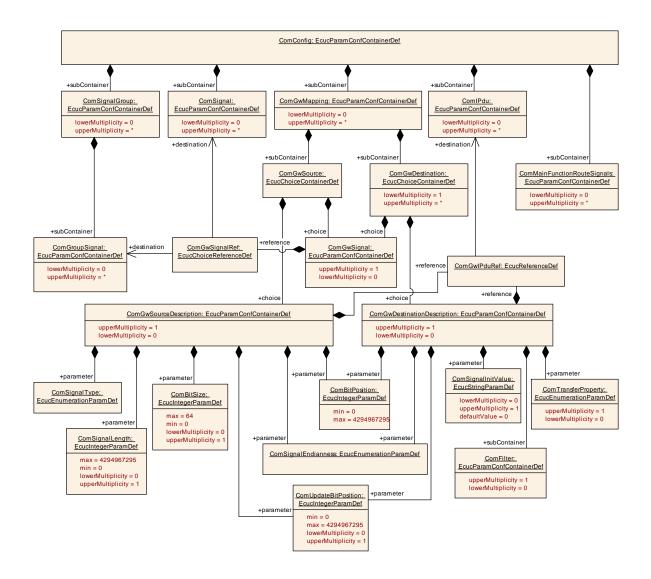

### 10.1.20 ComGwMapping

SWS Item	ECUC_Com_00544:		
Container Name	ComGwMapping		
Parent Container	ComConfig		
Description	Each instance of this container defines one mapping of the integrated Signal Gateway.		
Post-Build Variant Multipli- city	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComGwDestination	1*	Each instance of this choice container allows to define one routing destination either by reference to an already configured COM signal / group signal or by a destination description container.
ComGwSource		This choice container allows the definition of the gateway source signal either by reference to an already configured



COM signal / group signal or by a source description
container.

### 10.1.21 ComGwSource

SWS Item	ECUC_Com_00545:
Choice container Name	ComGwSource
Parent Container	ComGwMapping
Description	This choice container allows the definition of the gateway source signal either by reference to an already configured COM signal / group signal or by a source description container.

Container Choices		
Container Name	Multiplicity	Scope / Dependency
ComGwSignal	01	This container allows specifying a gateway source or destination respectively with a reference to a ComSignal or a ComGroupSignal.
ComGwSourceDescription	01	Description of a gateway source. This container allows defining a gateway source without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.

# 10.1.22 ComGwSourceDescription

SWS Item	ECUC_Com_00548:
Container Name	ComGwSourceDescription
Parent Container	ComGwSource
Description	Description of a gateway source. This container allows defining a gateway source without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.
Configuration Parameters	

SWS Item	ECUC_Com_00259:	ECUC_Com_00259:		
Name	ComBitPosition			
Parent Container	ComGwSourceDescription			
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bitO of the first byte like in little endian byte order			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

SWS Item	ECUC_Com_00158:
Name	ComBitSize



Parent Container	ComGwSourceDescription		
Description	Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN the size shall be configured by ComSignalLength. For ComSignalTypes FLOAT32 and		
		defin	ed by the signal type and therefore may
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	0 64		
Default value			
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00157 :		
Name	ComSignalEndianness		
Parent Container	ComGwSourceDescription		
Description	Defines the endianness of the signal's netw	ork representation.	
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BIG_ENDIAN		
	LITTLE_ENDIAN		
	OPAQUE		
Post-Build Variant Value	true		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00437:		
Name	ComSignalLength		
Parent Container	ComGwSourceDescription		
	Description: For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.  The supported maximum length is restricted by the used transportation system. For non TP-PDUs the maximum size of a PDU, and therefore also of any included signal, is limited by the concrete bus characteristic. For example, the limit is 8 bytes for CAN and LIN, 64 bytes for CAN FD and 254 for FlexRay.		
Multiplicity	01		
Туре	EcucIntegerParamDef		
Range	0 4294967295		
Default value	<b></b>		
Post-Build Variant Multipli-	false		



city			
Post-Build Variant Value	false		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time		VARIANT-LINK-TIME, VARIANT-POST- BUILD
	Post-build time		
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00127 :		
Name	ComSignalType		
Parent Container	ComGwSourceDescription		
	The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
•	BOOLEAN		
	FLOAT32		
	FLOAT64		
	SINT16		
	SINT32		
	SINT64		
	SINT8		
	UINT16		
	UINT32		
	UINT64		
	UINT8		
	UINT8_DYN		
	UINT8_N		
Post-Build Variant Value			
	Pre-compile time		VARIANT-PRE-COMPILE
on Class	Link time		VARIANT-LINK-TIME, VARIANT- POST-BUILD
	Post-build time		
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00257:			
Name	ComUpdateBitPosition			
Parent Container	ComGwSourceDescription			
Description	Bit position of update-bit inside I-PDU.  If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.  Range: 063 for CAN and LIN, 0511 for CAN FD, 02031 for FlexRay, 04294967295 for TP.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			



Default value			
Post-Build Variant Multipli- city	true		
Post-Build Variant Value	true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_Com_00550:			
Name	ComGwlPduRef			
Parent Container	ComGwSourceDescription			
Description	Reference to an I-PDU of a Signal Gateway source or destination description.			
Multiplicity	1			
Type	Reference to [ ComIPdu ]			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency				

### No Included Containers

### 10.1.23 ComGwDestination

SWS Item	ECUC_Com_00546:		
Choice container Name	ComGwDestination		
Parent Container	ComGwMapping		
Description	Each instance of this choice container allows to define one routing destination either by reference to an already configured COM signal / group signal or by a destination description container.  true		
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE
Class	Link time	Χ	VARIANT-LINK-TIME
	Post-build time	Χ	VARIANT-POST-BUILD

Container Choices		
Container Name	Multiplicity	Scope / Dependency
ComGwDestinationDescriptio n	01	Description of a gateway destination. This container allows defining a gateway destination without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.
ComGwSignal		This container allows specifying a gateway source or destination respectively with a reference to a ComSignal or a ComGroupSignal.



# 10.1.24 ComGwDestinationDescription

SWS Item	ECUC_Com_00549:
Container Name	ComGwDestinationDescription
Parent Container	ComGwDestination
Description	Description of a gateway destination. This container allows defining a gateway destination without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.
Configuration Parameters	

SWS Item	ECUC_Com_00259:				
Name	ComBitPosition	ComBitPosition			
Parent Container	ComGwDestinationDescripti	on			
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order				
Multiplicity	1				
Type	EcucIntegerParamDef				
Range	0 4294967295				
Default value					
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: local				

SWS Item	ECUC_Com_00157:		
Name	ComSignalEndianness		
Parent Container	ComGwDestinationDescription		
Description	Defines the endianness of the signal's netw	ork representation.	
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BIG_ENDIAN		
	LITTLE_ENDIAN		
	OPAQUE		
Post-Build Variant Value	true		
Value Configurati-	Pre-compile time	X VARIANT-PRE-COMPILE	
on Class	Link time	X VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD	
Scope / Depen- dency	scope: local		

SWS Item	ECUC_Com_00170:
Name	ComSignalInitValue
Parent Container	ComGwDestinationDescription
Description	Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0. In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification.



	In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).  For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.			
Multiplicity	01			
Туре	EcucStringParamDef			
Default value	0			
maxLength				
minLength				
regularExpression				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local dependency: In case of UINT8_N the length of ComSignalInitValue has to be the same as ComSignalLength.			

SWS Item	ECUC_Com_00232:		
Name	ComTransferProperty		
Parent Contai- ner	ComGwDestinationDescription		
Description	Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.		
Multiplicity	01		
Type	EcucEnumerationParamDef		
Range	PENDING	A write access to this signal never triggers the transmission of the corresponding I-PDU.	
	TRIGGERED	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU.	
	TRIGGERED_ON_CHANGE	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.	
	TRIGGERED_ON_CHANGE_WITHOUT_REPETITION	Depending on the	



		transmission mode, a write
		access to this signal can
		trigger the transmission of
		the corresponding I-PDU
		iust once without a
		repetition, but only in case
		the written value is
		different to the locally
		stored (last sent or initial
		value) in length or value.
	TRIGGERED_WITHOUT_REPETITION	Depending on the
		transmission mode, a write
		access to this signal can
		trigger the transmission of
		the corresponding I-PDU iust once without a
		repetition.
Post-Build Vari-		перешион.
ant Multiplicity	true	
Post-Build Vari-		
ant Value	true	
	Pre-compile time	X VARIANT-PRE-
Configuration		COMPILE
Class	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Value Configu-	Pre-compile time	X VARIANT-PRE-
ration Class		COMPILE
	Link time	X VARIANT-LINK-TIME
	Post-build time	X VARIANT-POST-BUILD
Scope / Depen-	scope: local	
dency		

SWS Item	ECUC_Com_00257:			
Name	ComUpdateBitPosition			
Parent Container	ComGwDestinationDescripti	on		
Description	Bit position of update-bit inside I-PDU.  If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.			
	Range: 063 for CAN and LIN, 0511 for CAN FD, 02031 for FlexRay, 04294967295 for TP.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default value				
Post-Build Variant Multipli- city	true			
Post-Build Variant Value	true			
Multiplicity Configuration	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
Class	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Χ	VARIANT-PRE-COMPILE	
	Link time	Χ	VARIANT-LINK-TIME	
	Post-build time	Χ	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			



SWS Item	ECUC_Com_00550:		
Name	ComGwlPduRef		
Parent Container	ComGwDestinationDescripti	on	
Description	Reference to an I-PDU of a Signal Gateway source or destination description.		
Multiplicity	1		
Туре	Reference to [ ComIPdu ]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE		
	Link time X VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD		
Scope / Dependency			

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
ComFilter	01	This container contains the configuration parameters of the AUTOSAR COM module's Filters.  Note: On sender side the container is used to specify the transmission mode conditions.	

# 10.1.25 ComGwSignal

SWS Item	ECUC_Com_00551:
Container Name	ComGwSignal
Parent Container	ComGwDestination, ComGwSource
	This container allows specifying a gateway source or destination respectively with a reference to a ComSignal or a ComGroupSignal.
Configuration Parameters	

SWS Item	ECUC_Com_00547:		
Name	ComGwSignalRef		
Parent Container	ComGwSignal		
Description	Reference to an object of a gateway relation. Either to a ComSignal or a ComGroupSignal.		
Multiplicity	1		
Туре	Choice reference to [ ComGroupSignal , ComSignal ]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE		
	Link time	Χ	VARIANT-LINK-TIME
	Post-build time X VARIANT-POST-BUILD		
Scope / Dependency			

### No Included Containers



### 10.2 Configuration Rules

#### 10.2.1 General Rules

**[SWS\_Com\_00401]** [It is illegal for any two of the following parameters to have the same value:

- shortName of a ComSignal
- shortName of a ComSignalGroup
- shortName of a ComGroupSignal
- shortName of a ComIPdu
- shortName of a ComIPduGroup

I(SRS Com 02067)

[SWS\_Com\_00732] [It is illegal for any of the following five parameters:

- ComNotification
- ComErrorNotification
- ComTimeoutNotification
- ComInvalidNotification
- ComIPduCallout

to have the same value as any of the following five parameters

- Com\_<shortName of a ComSignal>
- Com\_<shortName of a ComSignalGroup>
- Com\_<shortName of a ComGroupSignal>
- Com\_<shortName of a ComIPdu>
- Com <shortName of a ComIPduGroup>

(SRS\_Com\_02067)

**[SWS\_Com\_00402]** [It is illegal for any of the following parameters not to be formulated according to C's identifier rules:

- shortName of a ComSignal
- shortName of a ComSignalGroup
- shortName of a ComGroupSignal
- shortName of a ComIPdu
- shortName of a ComIPduGroup
- ComNotification
- ComErrorNotification
- ComTimeoutNotification
- ComInvalidNotification
- ComIPduCallout

I (SRS Com 02067)

### 10.2.2 Signal Configuration

More than one signal can be packed into an I-PDU as long as the following packing rules are fulfilled:



**[SWS\_Com\_00102]** [ComSignal/ ComGroupSignal are not allowed to overlap each other.] (SRS\_Com\_02067)

It is explicitly allowed that a ComSignal/ ComGroupSignal may have the size 0, see ECUC\_Com\_00158.

A signal of size 0 never overlaps other signals. Therefore, it can be configured to an arbitrary position within the I-PDU. The position of a zero sized signal is only relevant in case receiving an I-PDU partially.

**[SWS\_Com\_00105]** [ComSignal/ ComGroupSignal of ComSignalType UINT8\_N and UINT8\_DYN shall be byte aligned (ComBitPosition is a multiple of 8).] (SRS\_Com\_02067)

[SWS\_Com\_00443] [A ComSignal/ ComGroupSignal of type uint8[n] shall always be mapped to an n-bytes sized ComSignal/ ComGroupSignal.] (SRS\_Com\_02067)

**[SWS\_Com\_00553]** [A ComSignal/ ComGroupSignal of type uint8[n] shall be configured to have OPAQUE endianness.] (SRS\_Com\_02067)

**[SWS\_Com\_00754]** [A dynamic length I-PDU shall contain at most one dynamic length signal.] (SRS\_Com\_02091, SRS\_Com\_02092)

[SWS\_Com\_00755] [The dynamic length signal shall be placed last in a dynamic length I-PDU.] (SRS\_Com\_02091, SRS\_Com\_02093)

**[SWS\_Com\_00756]** [The ComSignalLength parameter shall be configured to the maximum size/ length for dynamic length signals.] (SRS\_Com\_02091, SRS\_Com\_02097)

**[SWS\_Com\_00310]** [For I-PDUs with transmission mode *DIRECT* or *MIXED* with ComTxModeNumberOfRepetitions greater or equal 1 no update-bit (ComUpdateBit-Position) shall be configured.](SRS Com 02067, SRS Com 02030)

[SWS\_Com\_00785] [The ComBitSize of a (group) signal shall not extend past the size of its configured ComSignalType.] (SRS Com 02067)

For example, the ComBitSize of a signal with ComSignalType UINT8 shall not exceed 8 bits.

**[SWS\_Com\_00790]** [The configured string of ComSignalInitValues/ ComSignalData-InvalidValue shall be interpreted according to the definitions of [22] for the boolean and all numerical types.] (SRS\_Com\_02067)

**[SWS\_Com\_00859]** [In case a ComSignalDataInvalidValue is configured for a ComSignal that is included in a ComIPdu with ComIPduDirection *RECEIVE*, the ComDataInvalidAction shall also be configured for this ComSignal.] (SRS\_Com\_02079, SRS\_Com\_02087)



### **10.2.3 Signal Group Configuration**

**[SWS\_Com\_00365]** [It shall not be allowed to configure signal groups for routing with data type differences between receive and transmit signal group. A sub-setting of signal groups (as defined in SWS\_Com\_00735) shall be supported.] (SRS\_Com\_02067)

How the signals of signal groups are placed within an I-PDU is not restricted. It is allowed to define interlaced signal groups, or to place other signals within the wholes of a signal group.

**[SWS\_Com\_00860]** [In case a ComSignalDataInvalidValue is configured for at least one ComGroupSignal of a ComSignalGroup that is included in a ComIPdu with ComIPduDirection *RECEIVE*, the ComDataInvalidAction shall also be configured for this ComSignalGroup.] (SRS\_Com\_02079, SRS\_Com\_02087)

### 10.2.4 Transmission Mode Configuration

**[SWS\_Com\_00465]** [Every ComTxModeTrue or ComTxModeFalse that is a potential result of the configured/ calculated TMS must be configured. Within the ComTxIPdu, at least one of the containers ComTxModeTrue or ComTxModeFalse has to be included.] (SRS\_Com\_02067)

### 10.2.5 Signal Gateway Configuration

[SWS\_Com\_00384] [The ComBitSize of a received and to be routed ComSignal shall not differ.] (SRS Com\_02067)

**[SWS\_Com\_00598]** [A signal or signal group contained in an I-PDU with ComIPdu-Type configured as TP shall not be configured as source or destination within the ComGwMapping configuration container.] (SRS\_PduR\_06055)

Additionally to reception deadline monitoring of a ComSignal, to be routed by the Signal Gateway, it is possible to configure update-bits via ComUpdateBitPosition, for the transmit signal. In this case, the receiving node can detect if the sender has really updated the signal or it is just repeated by the Signal Gateway. If this is necessary depends on the use-case.

### 10.2.6 Filter Configuration

**[SWS\_Com\_00535]** [For the ComFilterAlgorithm *ONE\_EVERY\_N*, the ComFilterOffset shall be configured to a value lesser than ComFilterPeriod.] (SRS\_Com\_02067)

### 10.2.7 Post Build Configuration

**[SWS\_Com\_00373]** [The post-build time configuration part (post-compile and post-link time) can only be updated when it is not in use.] (SRS\_Com\_02067, SRS\_PduR\_06002)



**[SWS\_Com\_00487]** [The complete post-build time configurable configuration shall be identifiable by a unique identifier.] (SRS\_PduR\_06097)

### 10.2.8 Dynamic Length I-PDUs

**[SWS\_Com\_00817]** [I-PDUs including metadata shall not be configured as dynamic length I-PDUs.] (SRS\_Com\_02067)

The above restriction is necessary, since the length of the dynamic length signal could not be derived correctly, when the I-PDU contains additional metadata.

Since the FlexRay Interface does only support even values for the I-PDU length, it is not recommend to configure dynamic length I-PDU to be send via Frlf. Instead, the FlexRay TP module should be used to transport dynamic length I-PDUs via FlexRay.

### 10.2.9 Replicated I-PDUs

**[SWS\_Com\_00834]** [If an I-PDU is configured for replication (includes a ComIPduReplication), this I-PDU shall also have configured an I-PDU counter (ComIPduCounter) with a counter threshold (ComIPduCounterThreshold) set to 0.] (SRS\_Com\_02102)

For further information on this constraint see 7.11.

### **10.2.10 I-PDU group**

**[SWS\_Com\_00871]** [All I-PDUs that are contained within one I-PDU group shall have the same ComIPduDirection.] (SRS\_Com\_00218)

Since the nesting of I-PDU groups is only conceptual (see Chapter 7.3.5.1), the above requirements restricts also all nested I-PDU groups to have the same ComIPduDirection.



# 11 Not Applicable Requirements

[SWS\_Com\_00999] [These requirements are not applicable to this specification.] (SRS\_BSW\_00171, SRS\_BSW\_00170, SRS\_BSW\_00383, SRS\_BSW\_00375, SRS\_BSW\_00416, SRS\_BSW\_00437, SRS\_BSW\_00168, SRS\_BSW\_00423, SRS\_BSW\_00424, SRS\_BSW\_00426, SRS\_BSW\_00427, SRS\_BSW\_00428, SRS\_BSW\_00429, SRS\_BSW\_00433, SRS\_BSW\_00417, SRS\_BSW\_00409, SRS\_BSW\_00386, SRS\_BSW\_00161, SRS\_BSW\_00162, SRS\_BSW\_00005, SRS\_BSW\_00164, SRS\_BSW\_00325, SRS\_BSW\_00413, SRS\_BSW\_00347, SRS\_BSW\_00307, SRS\_BSW\_00410, SRS\_BSW\_00314, SRS\_BSW\_00353, SRS\_BSW\_00361, SRS\_BSW\_00302, SRS\_BSW\_00328, SRS\_BSW\_00006, SRS\_BSW\_00378, SRS\_BSW\_00306, SRS\_BSW\_00308, SRS\_BSW\_00309, SRS\_BSW\_00009, SRS\_BSW\_00010, SRS\_BSW\_00333, SRS\_BSW\_00321, SRS\_BSW\_00341, SRS\_BSW\_00334)



# 12 Appendix A

This appendix contains use cases with different transmission modes and the necessary configuration for these. Table 10 shows the notation of the use case diagrams.

Notation	Description
$t_c$ , $t_{c1}$ , $t_{c2}$	cycle times
t <sub>d</sub>	cycle time of N-Times sent signals
t <sub>r</sub>	minimum SW reaction time of COM-Layer due to internal main cycle time
V	Value: x stands for an arbitrary value/ value range, aw for specific values / value ranges, defined by the user, with a <> b, range a is disjoint from range b.
$\nabla$	request from RTE to the COM-Layer
Ţ	request from COM-Layer to PDU Router
<b>†</b>	potential but skipped request from COM-Layer to PDU Router (e.g. because of a new send request by the RTE or delayed due to minimum delay time)
dt	minimum delay time: minimum distance between two requests to PDU Router
without TMS switch	without switching of the TMS (see 7.3.3.2) from true to false or vice versa
with TMS switch	with switching of the TMS (see 7.3.3.2) from <i>true</i> to <i>false</i> or vice versa (from TM 1 to TM 2); one TM is named before the "+" and one behind in the description

Table 10: Legend for use case diagrams.

**Use case 1** shows an I-PDU that is sent out cyclically with a cycle time t<sub>c</sub>. This I-PDU consists of signals that all have the ComTransferProperty *PENDING*. It is configured that the transmission takes place when the TMS evaluates to true.

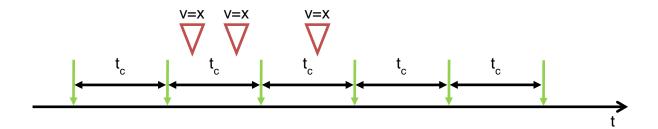


Figure 10: Use case 1, TM periodic (without TMS switch, see Chapter 7.3.3.2)

ComSignal	
ComTransferProperty	PENDING or TRIGGERED (TRIGGERED has no influence)
ComFilter	
ComFilterAlgorithm	ALWAYS



ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeTimePeriod	tc
ComTxModeMode	PERIODIC
ComTxIPdu	
ComMinimumDelayTime	0 or omitted

Table 11: Relevant I-PDU transmission configuration for use case 1

Because of the configuration of the parameter ComFilterAlgorithm *ALWAYS* of the ComFilter, there is no need to configure a transmission mode for the case that the TMS evaluates to false.

It does not make any difference in the behavior whether the ComFilterAlgorithm parameter of the ComFilter is set for all the signals within the I-PDU to *ALWAYS* or if the ComFilter is not defined (does not contribute to the evaluation of the TMS), see SWS\_Com\_00255.



**Use case 2** shows an I-PDU which is sent out three times whenever a value is given by the upper (Com\_SendSignal or Com\_SendSignalGroup). The time between two transmissions is  $t_d$ . This I-PDU consists of signals, which all have the ComTransfer-Property TRIGGERED. It is configured that the transmission takes place when the TMS evaluates to true.

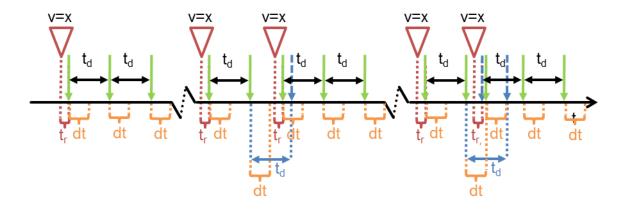


Figure 11: Use case 2, TM DIRECT (N-Times) here n = 2 (without TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	true
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	ALWAYS
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	DIRECT
ComTxModeNumberOfRepetitions	2
ComTxModeRepetitionPeriod	$t_d$
ComTxIPdu	
ComMinimumDelayTime	dt

Table 12: Relevant I-PDU transmission configuration for use case 2

If there is a new send request by the RTE before the ongoing repetition cycle is completed, the new repetition cycle is started and the rest of the last one is discarded.



**Use case 3** shows an I-PDU which is send out cyclically with a cycle time  $t_{c1}$  if value v = a (TMS evaluates to true) and with a cycle time  $t_{c2}$  if value v = b (TMS evaluates to false). The I-PDU consists of signals, which all have the ComTransferProperty *PENDING*.

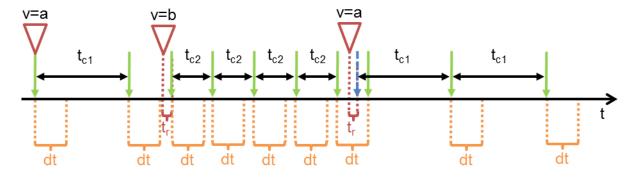


Figure 12: Use case 3, TM periodic + periodic (with TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	true
ComSignal	
ComTransferProperty	PENDING or TRIGGERED (TRIGGERED has no influence)
ComFilter	
ComFilterAlgorithm	any filter mapping value a to true and value b to false
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	PERIODIC
ComTxModeTimePeriod	$t_{c1}$
ComTxModeFalse	
ComTxModeMode	PERIODIC
ComTxModeTimePeriod	t <sub>c2</sub>
ComTxIPdu	
ComMinimumDelayTime	dt

Table 13: Relevant I-PDU transmission configuration for use case 3

The TMS switch caused by the new value v = b, starts a new cycle within the next main function and the new value is sent out. Nevertheless, the minimum delay time dt has to be taken into account, since ComEnableMDTForCyclicTransmission is set to true.

For the parameter ComFilterAlgorithm, the following filters defined in [17] can be used for this use-case:

- MASKED\_NEW\_EQUALS\_X
- MASKED NEW DIFFERS X
- MASKED\_NEW\_DIFFERS\_MASKED\_OLD
- NEW\_IS\_WITHIN
- NEW IS OUTSIDE



**Use case 4** shows an I-PDU which is send out cyclically with a cycle time  $t_c$  if value v = a (TMS evaluates to true) and if value v = b (TMS evaluates to false) it is sent out three times whenever the value is given by the RTE. The time between two transmissions is  $t_d$ . The I-PDU consists of signals that all have the ComTransferProperty *TRIGGERED*.

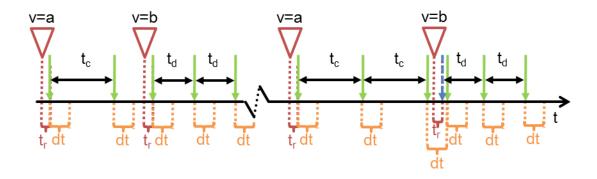


Figure 13: Use case 4 scenario a, TM periodic + DIRECT/N-Times, here n = 2 (with TMS switch)

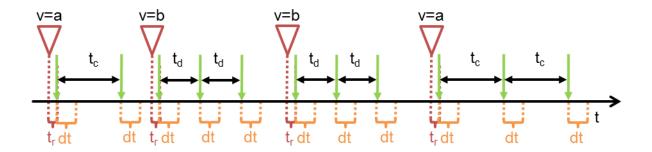


Figure 14: Use case 4 scenario b, TM periodic + DIRECT/N-Times, here n = 2 (with TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	True
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	any filter mapping value a to true and value b
	to false
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	PERIODIC
ComTxModeTimePeriod	t <sub>c</sub>
ComTxModeFalse	
ComTxModeMode	DIRECT
ComTxModeNumberOfRepetitions	2
ComTxModeRepetitionPeriod	$t_d$
ComTxIPdu	
ComMinimumDelayTime	dt

Table 14: Relevant I-PDU transmission configuration for use case 4



After the switch from ComTxModeMode *DIRECT* to *PERIODIC* the cycle is started within the next main function and the new value a is sent out with respect to ComMinimumDelayTime dt.

**Use case 5** shows an I-PDU which is send out cyclically with a cycle time  $t_c$  and if the value (the same or a new one) is given by the RTE it is also sent out directly three times. The time between two of these three transmissions is always  $t_d$ . The I-PDU consists of signals that all have the ComTransferProperty TRIGGERED.

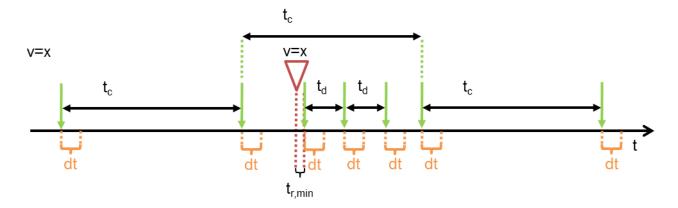


Figure 15: Use case 5 scenario a, TM MIXED, here n = 2 (without TMS switch)

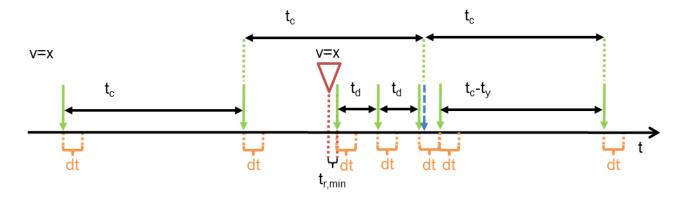


Figure 16: Use case 5 scenario b, TM MIXED, here n = 2 (without TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	true
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	ALWAYS
ComlPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	MIXED
ComTxModeTimePeriod	t <sub>c</sub>



ComTxModeNumberOfRepetitions	2
ComTxModeRepetitionPeriod	$t_d$
ComTxIPdu	
ComMinimumDelayTime	dt

Table 15: Relevant I-PDU transmission configuration for use case 5

If the next transmission caused by the periodic part of the ComTxModeMode *MIXED* should take place within the timeout dt (ComMinimumDelayTime) after a transmission of the *DIRECT* (N-Times) part, this sent out is delayed until the minimum delay time is elapsed. However, after that the next period of the periodic part is shortened so that there is only an intermediate phase shift of the periodic part but no continuous one.

**Use case 6** shows an I-PDU which is send out cyclically with a cycle time  $t_{c2}$  if value v = b (TMS evaluates to false). If value v = a (TMS evaluates to true) it is sent out cyclically with a cycle time  $t_{c1}$  and whenever the value v = a is given by the RTE it is also sent out directly three times. The time between two of these three transmissions is always  $t_{d.}$  The I-PDU consists of signals that all have the ComTransferProperty TRIGGERED.

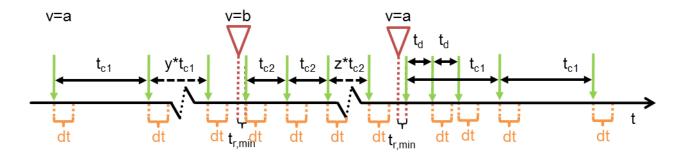


Figure 17: Use Case 6, TM MIXED, here n= 2 + periodic (with TMS switch)

ComGeneral	
	tru o
ComEnableMDTForCyclicTransmission	true
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	any filter mapping value a to true and value b
	to false
ComIPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	MIXED
ComTxModeTimePeriod	t <sub>c1</sub>
ComTxModeNumberOfRepetitions	2
ComTxModeRepetitionPeriod	$t_d$
ComTxModeFalse	
ComTxModeMode	PERIODIC
ComTxModeTimePeriod	$t_{c2}$
ComTxIPdu	
ComMinimumDelayTime	dt



#### Table 16: Relevant I-PDU transmission configuration for use case 6

A usage of this in practice is for example the signal of the button that controls the window-lift motor. If the button is not pressed, there is a long cycle time  $t_{c1}$  with this information. If it is pressed this information is distributed with a short cycle time  $t_{c2}$ . If the button is released again, starting with the next main function this information is distributed three times with  $t_d$  and after that, again the long cycle time is used.

**Use case 7** is similar to use case 5 but with ComEnableMDTForCyclicTransmission disabled and ComTxModeNumberOfRepetitions set to one.

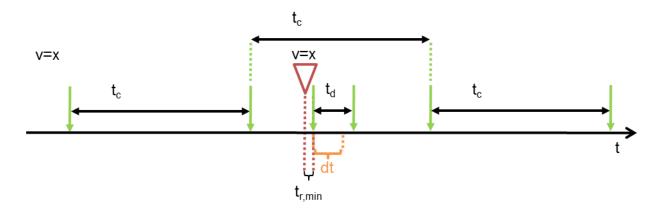


Figure 18: Use case 7 scenario a, TM MIXED, here n = 1 (without TMS switch)

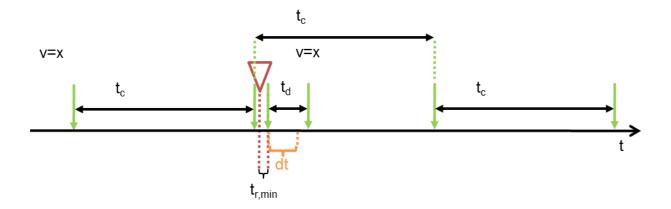


Figure 19: Use case 7 scenario b, TM MIXED, here n = 1 (without TMS switch)



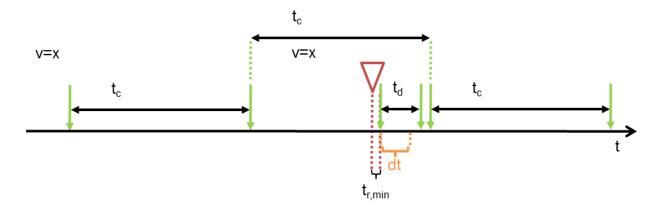


Figure 20: Use case 7 scenario c, TM MIXED, here n = 1 (without TMS switch)

ComGeneral	
ComEnableMDTForCyclicTransmission	False
ComSignal	
ComTransferProperty	TRIGGERED
ComFilter	
ComFilterAlgorithm	ALWAYS
ComIPdu	
ComlPduDirection	SEND
ComTxModeTrue	
ComTxModeMode	MIXED
ComTxModeTimePeriod	t <sub>c</sub>
ComTxModeNumberOfRepetitions	1
ComTxModeRepetitionPeriod	$t_d$
ComTxIPdu	
ComMinimumDelayTime	dt

Table 17: Relevant I-PDU transmission configuration for use case 7

In contrary to use case 5, here the minimum delay timer is neither started for the periodic transmissions of the cyclic part nor for the repeated transmissions of the direct part of the Mixed mode. This can result in two consecutive transmissions within the timespan dt as shown in the scenarios b and c.