

Document Title	Specification of COM Based Transformer
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	662

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R20-11

Document Change History						
Date Release Changed by Description						
2020-11-30	R20-11	AUTOSAR Release Management	No content changes			
2019-11-28	R19-11	AUTOSAR Release Management	editorialChanged Document Status from Final to published			
2018-10-31	4.4.0	AUTOSAR Release Management	Updated buffer handlingRemoved include file structure			
2017-12-08	4.3.1	AUTOSAR Release Management	 Updated handling of gaps in the array representation of a signal group. Clarification on parameter passing. 			
2016-11-30	4.3.0	AUTOSAR Release Management	 Updated include file structure figure. Clarification on postBuild configuration in chapter 10. Added support for unqueued communication when no data is available in [SWS_ComXf_00035]. 			
2015-07-31	4.2.2	AUTOSAR Release Management	Exclude support for external trigger communica- tion [SWS_ComXf_00032]			
2014-10-31	4.2.1	AUTOSAR Release Management	Initial Release			



Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.



Table of Contents

1	Introduction and functional overview	5
2	Acronyms and Abbreviations	6
3	Related documentation	7
	3.1 Input documents	7 8 8
4	Constraints and assumptions	9
	4.1 Limitations	9 9
5	Dependencies to other modules	10
	5.1 File structure 5.1.1 Code file structure	10 10
6	Requirements Tracing	11
7	Functional specification	12
	7.1 Specification of the COM Based Transformer 7.2 Error classification	15 18 18 19 19 19
8	API specification	20
	8.1 Imported types 8.2 Type definitions 8.3 Function definitions 8.3.1 ComXf_ <transformerid> 8.3.2 ComXf_Inv_<transformerid> 8.3.3 ComXf_Init 8.3.4 ComXf_DeInit 8.3.5 ComXf_GetVersionInfo</transformerid></transformerid>	20 20 20 20 22 23 23 24
	8.4 Callback notifications	24 24 24
9	Sequence diagrams	25
10	Configuration specification	26
	Referenced Meta Classes	27



В	Used	d ECU Con	figuration	34			
С	History of Constraints and Specification Items 58						
	C.1	Constrair	nt History of this Document according to AUTOSAR R4.2.1	58			
	C.2	Constrair	nt History of this Document according to AUTOSAR R4.2.2	58			
		C.2.1	Added Traceables in 4.2.2	58			
		C.2.2	Changed Traceables in 4.2.2	58			
		C.2.3	Deleted Traceables in 4.2.2	58			
	C.3	Constrair	nt History of this Document according to AUTOSAR R4.3.0	58			
		C.3.1	Added Traceables in 4.3.0	58			
		C.3.2	Changed Traceables in 4.3.0	58			
		C.3.3	Deleted Traceables in 4.3.0	58			
	C.4	Constrair	nt History of this Document according to AUTOSAR R4.3.1	59			
		C.4.1	Added Traceables in 4.3.1	59			
		C.4.2	Changed Traceables in 4.3.1	59			
		C.4.3	Deleted Traceables in 4.3.1	59			
	C.5	Constrair	nt History of this Document according to AUTOSAR R4.4.0	59			
		C.5.1	Added Traceables in 4.4.0	59			
		C.5.2	Changed Traceables in 4.4.0	59			
		C.5.3	Deleted Traceables in 4.4.0	59			
	C.6	Constrair	nt History of this Document according to AUTOSAR R19-11 .	59			
		C.6.1	Added Traceables in 19-11	59			
		C.6.2	Changed Traceables in 19-11	60			
		C.6.3	Deleted Traceables in 19-11	60			
	C.7	Constrair	nt History of this Document according to AUTOSAR R20-11 .	60			
		C.7.1	Added Traceables in R20-11	60			
		C.7.2	Changed Traceables in R20-11	60			
		C.7.3	Deleted Traceables in R20-11	60			



1 Introduction and functional overview

The transformer feature provides functionality to chain arbitrary transformers when sending and receiving data in the RTE. The COM Based Transformer provides this functionality when the target bus system uses a fixed communication matrix with packed data representations.



2 Acronyms and Abbreviations

No specific terms have been introduced additionally to those already defined in [1].



3 Related documentation

3.1 Input documents

References

- [1] Glossary AUTOSAR_TR_Glossary
- [2] General Specification of Transformers AUTOSAR_ASWS_TransformerGeneral
- [3] Specification of RTE Software AUTOSAR_SWS_RTE
- [4] Specification of Communication AUTOSAR_SWS_COM
- [5] General Requirements on Basic Software Modules AUTOSAR_SRS_BSWGeneral
- [6] Requirements on Transformer AUTOSAR SRS Transformer
- [7] System Template AUTOSAR_TPS_SystemTemplate
- [8] General Specification of Basic Software Modules AUTOSAR_SWS_BSWGeneral



3.2 Related standards and norms

Not applicable.

3.3 Related specification

AUTOSAR provides a General Specification on Transformers [2], which is also valid for COM Based Transformer.

Thus, the specification ASWS Transformer General shall be considered as additional and required specification for COM Based Transformer.



4 Constraints and assumptions

4.1 Limitations

For the COM Based Transformer all general transformer limitations (see [2]) apply.

Additionally the following restrictions apply for the COM Based Transformer:

[SWS_ComXf_00017] [The COM Based Transformer does not support Client-Server communication. | (SRS_Xfrm_00201)

[SWS_ComXf_00032] [The COM Based Transformer does not support external trigger communication. | (SRS_Xfrm_00201)

[SWS_ComXf_00018] [The COM Based Transformer only supports composite data types (i.e. Signal Groups from COM). | (SRS Xfrm 00201)

If the use-case occurs that a single primitive data element shall be handled by the COM Based Transformer (because there shall be a E2E protection performed after the serialization) the data element shall be wrapped in a structure. The structure would then just contain one entry, the signal group on COM level would also have the E2E parts included.

[SWS_ComXf_00019] [The COM Based Transformer only supports fix sized data types.] (SRS Xfrm 00201)

[SWS_ComXf_00022] [The COM Based Transformer only supports signal groups which are byte aligned.] (SRS_Xfrm_00201)

[SWS_ComXf_00023] The COM Based Transformer shall support signal group where all group signals are mapped successively (possibly with gaps where positions in the signal group layout have no corresponding signal defined) to the IPdu. (SRS_-Xfrm_00201)

4.2 Applicability to car domains

The COM Based Transformer can be used for all domain applications when a fixed communication matrix is used.



5 Dependencies to other modules

The AUTOSAR RTE [3] has to exist to execute the COM Based Transformer.

The AUTOSAR COM configuration [4] of the data handled by the COM Based Transformer has to exists in order to allow the configuration of the COM Based Transformer.

5.1 File structure

5.1.1 Code file structure

The source code file structure is defined in the [2].



6 Requirements Tracing

The following table references the features specified in [5] and [6] and links to the fulfillments of these.

Feature	Description	Satisfied by
[SRS_BSW_00159]	All modules of the	[SWS_ComXf_00025]
	AUTOSAR Basic Software	
	shall support a tool based	
	configuration	
[SRS_BSW_00337]	Classification of	[SWS_ComXf_00028]
	development errors	
[SRS_BSW_00404] BSW Modules shall support		[SWS_ComXf_00030]
	post-build configuration	
[SRS_BSW_00407]	Each BSW module shall	[SWS_ComXf_00024] [SWS_ComXf_00026]
	provide a function to read	[SWS_ComXf_00027]
	out the version information	
	of a dedicated module	
	implementation	
[SRS_BSW_00411]	All AUTOSAR Basic	[SWS_ComXf_00024] [SWS_ComXf_00026]
	Software Modules shall	[SWS_ComXf_00027]
	apply a naming rule for	
	enabling/disabling the	
1000 0011 00111	existence of the API	10110
[SRS_BSW_00441]	Naming convention for type,	[SWS_ComXf_00030]
[CDC V4**** 00000]	macro and function A fixed set of transformer	[CMC ComVf 00000]
[SRS_Xfrm_00009]	classes shall exist	[SWS_ComXf_00003]
[SRS Xfrm 00011]	A transformer shall belong	[SWS_ComXf_00003] [SWS_ComXf_00006]
[303_811111_00011]	to a specific transformer	[3W3_C0IIIXI_00003][3W3_C0IIIXI_00000]
	class	
[SRS Xfrm 00201]	The COM Based	[SWS_ComXf_00004] [SWS_ComXf_00005]
[0110_711111_00201]	Transformer shall define the	[SWS_ComXf_00007] [SWS_ComXf_00008]
	serialization of atomic and	[SWS ComXf 00009] [SWS ComXf 00010]
	structured data elements	[SWS ComXf 00011] [SWS ComXf 00012]
	into linear arrays based on	[SWS_ComXf_00013] [SWS_ComXf_00015]
	a fixed data mapping	[SWS ComXf 00016] [SWS ComXf 00017]
		[SWS_ComXf_00018] [SWS_ComXf_00019]
		[SWS_ComXf_00020] [SWS_ComXf_00021]
		[SWS_ComXf_00022] [SWS_ComXf_00023]
		[SWS_ComXf_00032] [SWS_ComXf_00035]
		[SWS_ComXf_00036]
[SRS_Xfrm_00202]	The COM Based	[SWS_ComXf_00005] [SWS_ComXf_00020]
	Transformer shall take its	[SWS_ComXf_00025] [SWS_ComXf_00031]
	configuration from the COM	[SWS_ComXf_00033] [SWS_ComXf_00034]
	module	[SWS_ComXf_00036]



7 Functional specification

When a SWC initiates an inter-ECU communication which is configured to be transformed, the SWC hands the data over to the RTE. The RTE executes the configured transformer chain which contains - if the configuration demands this - the COM Based Transformer

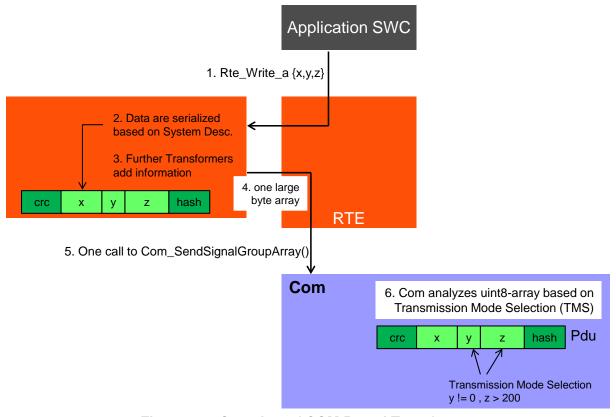


Figure 7.1: Overview of COM Based Transformer

The COM Based Transformer on the sender side serializes the data of the SWC and brings them into a uint8-array representation based on the communication matrix description. The uint8-array representation is forwarded to the COM module to be placed inside the respective IPdu. The COM module may analyze (depending on the configuration of the Transmission Mode Selection – TMS) the provided uint8-array and trigger the respective transmission mode. The IPdu is sent via the communication stack over the bus to the receiver(s).

The RTE of the receiver side executes the transformer chain in the reverse order. The COM Based transformer of the receiver deserializes the linear data back into the original data structure. These are handed over to the receiving SWC.

From the SWC's point of view it is totally transparent whether data are transformed or not.



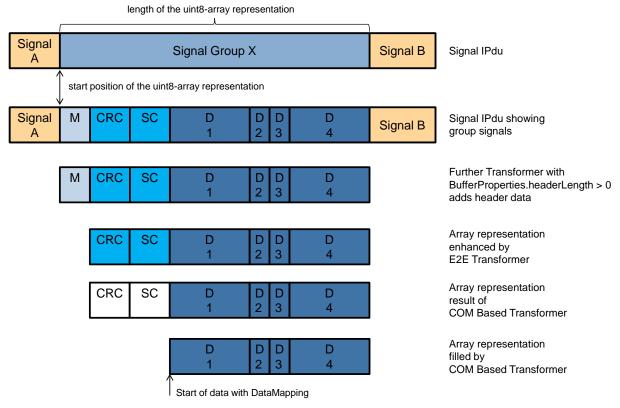


Figure 7.2: IPdu and signal layout

The handling of the data inside COM's IPdu buffer and the transformer buffer is shown in figure 7.2.

The ISignalIPdu is handled by the COM module as ComIPdu and may contain several parts (signals and signal groups). A signal group in COM is represented by the ComSignalGroup container.

In the System Template [7] it is possible to define that a signal group shall be handled by the COM Based Transformer. The usage of the COM Based Transformer for a specific transformer chain is defined by the reference <code>comBasedSignalGroup-Transformation</code> from the <code>ISignalGroup</code> to <code>DataTransformation</code> (see figure 7.3).



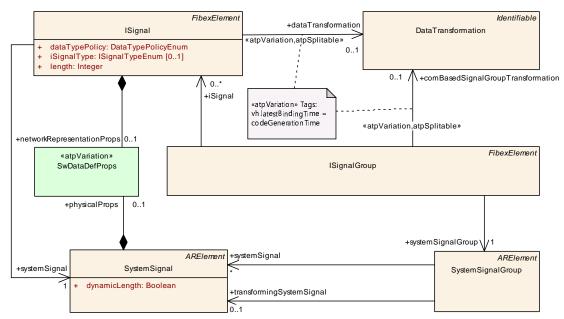


Figure 7.3: System Template Transformed communication

In the Ecu configuration of the COM module such ComSignalGroups have a ComSignalGroupArrayAccess=true parameter defined.

If the ComSignalGroupArrayAccess=true then it implicitly defines the length of the signal group ([SWS_Com_00845] [4]) and the start position inside the ComIPdu where the signal group starts ([SWS_Com_00844] [4]). Thus there can be several signals and signal groups defined inside an ISignalIPdu (e.g. 'Signal A' and 'Signal B' are part of the IPdu but are not considered by the COM Based Transformer for the 'Signal Group X').

The Com APIs <code>Com_SendSignalGroupArray</code> and <code>Com_ReceiveSignalGroupArray</code> handle the signal group as array representation based on length of the signal group and the start position inside the <code>ComIPdu</code>. This array representation contains all signals that belong to the signal group, regardless whether the application software has a data mapping defined or not.

As an example in figure 7.2 the 'Signal Group X' consists of the signals 'M', 'CRC', 'SC', 'D1', 'D2', 'D3', and 'D4'. Thus the RTE will interact with COM based on the whole array representation of this signal group with length of the signal group.

When the RTE interacts with the COM Based Transformer also all the other potential transformers need to be considered in order to determine which part of the array representation of the signal group actually is provided to each transformer since each transformer may add data during sending (or remove data during reception).

E.g. the part of the array representation which holds the 'CRC' and 'SC' signals are handled by the E2E transformer but will not be considered by the COM Based Transformer. The 'M' signal will neither be handled by the E2E transformer nor the COM Based Transformer. For 'M' a further transformer is responsible.



The RTE will provide the data buffer from the 'Start of data with DataMapping defined' location to the COM Based Transformer.

7.1 Specification of the COM Based Transformer

Serialization describes the way data is represented in protocol data units (PDUs) transported over a network. For the COM Based Transformer the serialization is defined by the communication matrix using the System Template [7]. The communication matrix information is taken over to the Ecu configuration of the COM module.

[SWS_ComXf_00005] The serialization is based on the Ecu configuration of the COM module and

- the Software Components PortPrototype,
- the dataElement list defined by the respective SenderReceiverInterface,
- the SenderReceiverToSignalGroupMapping,
- and the ISignalToIPduMapping for the SystemSignalGroup.

(SRS Xfrm 00201, SRS Xfrm 00202)

[SWS_ComXf_00003] [The COM Based transformer shall only be used as the top-most transformer (first) in a transformer chain. | (SRS Xfrm 00009, SRS Xfrm 00011)

The COM Based transformer serializes structured data into a linear form. Therefore it can only be used as the first transformer on the sending side and the last transformer on the receiving side.

[SWS_ComXf_00004] [The COM Based transformer defined in this document shall be used as a transformer if

- the attribute protocol of the TransformationTechnology is set to COM-Based
- and the attribute version of the TransformationTechnology is set to 1.0.0
- and the attribute transformerClass of the TransformationTechnology is set to serializer

(SRS_Xfrm_00201)

[SWS_ComXf_00015] [The COM Based Transformer shall support all basic data types that are supported by the COM module in [SWS_Com_00675] except for UINT8_DYN.](SRS_Xfrm_00201)

[SWS_ComXf_00016] [The COM Based Transformer shall handle each dataElement of the SenderReceiverInterface individually. | (SRS Xfrm 00201)



[SWS_ComXf_00021] [The COM Based Transformer shall handle each dataElement of the SenderReceiverInterface like defined for the COM module [4] when the COM API Com_SendSignal (rep. Com_ReceiveSignal) is called for a shadow signal. | (SRS_Xfrm_00201)

This defines that the COM Based Transformer performs all actions equally to the COM module. This does include functionality like endianess conversion and sign extension.

The COM Configuration implicitly defines the length of the signal group ([SWS_Com_00845] [4]) and the start position inside the ComIPdu where the signal group starts ([SWS_Com_00844] [4]). In order to place the transformed data element into the data buffer provided by the RTE the COM Based Transformer needs to respect the offset introduced by the position of the ComGroupSignal inside the ComIPdu (defined by the start position inside the ComIPdu) and the additional offset introduced by header data which is handled by other transformers called after the COM Based Transformer.

[SWS_ComXf_00036] [If the signal layout of the signal group array representation contains gaps, those gaps shall be set during transmission to the value defined by the ComTxIPduUnusedAreasDefault of the respective ComTxIPdu that this signal group is mapped to.|(SRS Xfrm 00201, SRS Xfrm 00202)

Gaps in the signal group array representation may occur because the layout is not fully packed and there are bits (or even bytes) that have no signal defined for (see 7.4).

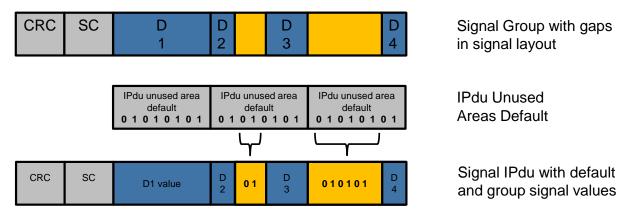


Figure 7.4: Example of an array representation with gaps

[SWS_ComXf_00020] [The COM Based Transformer shall place the serialized data element into the data buffer at the bit position according to the configuration of the <code>ISignalGroup</code> in Com.] (SRS_Xfrm_00201, SRS_Xfrm_00202)

[SWS_ComXf_00013] To allow migration, the deserialization shall be able to accept larger array representations and ignore dataElements appended at the end of a previously known parameter list. (SRS Xfrm 00201)

This means: data elements that were not defined in the interface specification used to generate or parameterize the descrialization code at the end of the serialized data will be ignored by the descrialization.



Class	TransformationTechnology						
Package	M2::AUTOSARTemplates:	:SystemTe	emplate::	Transformer			
Note	A TransformationTechnolo	A TransformationTechnology is a transformer inside a transformer chain.					
	Tags:xml.namePlural=TR	ANSFORI	MATION-	FECHNOLOGIES			
Base	ARObject, Identifiable, Mu	ultilanguag	geReferra	ble, Referrable			
Attribute	Туре	Mult.	Kind	Note			
bufferProperties	BufferProperties	1	aggr	Aggregation of the mandatory BufferProperties.			
hasInternal State	Boolean	01	attr	This attribute defines whether the Transformer has an internal state or not.			
needsOriginal Data	Boolean	01	attr	Specifies whether this transformer gets access to the SWC's original data.			
protocol	String	1	attr	Specifies the protocol that is implemented by this transformer.			
transformation Description	Transformation Description	01	aggr	A transformer can be configured with transformer specific parameters which are represented by the Transformer Description.			
	Stereotypes: atpVariation Tags:vh.latestBindingTime=postBuild						
transformer Class	TransformerClassEnum 1 attr Specifies to which transformer class this transformer belongs.						
version	String	1	attr	Version of the implemented protocol.			

Table 7.1: TransformationTechnology

Enumeration	TransformerClassEnum			
Package	M2::AUTOSARTemplates::SystemTemplate::Transformer			
Note	Specifies the transformer class of a transformer.			
Literal	Description			
custom	The transformer is a custom transformer.			
	Tags:atp.EnumerationLiteralIndex=0			
safety	The transformer is a safety transformer.			
	Tags:atp.EnumerationLiteralIndex=1			
security	The transformer is a security transformer.			
	Tags:atp.EnumerationLiteralIndex=2			
serializer	The transformer is a serializing transformer.			
	Tags:atp.EnumerationLiteralIndex=3			

Table 7.2: TransformerClassEnum

Class	BufferProperties	BufferProperties				
Package	M2::AUTOSARTempla	tes::SystemT	emplate::	Transformer		
Note	Configuration of the bu	Configuration of the buffer properties the transformer needs to work.				
Base	ARObject	ARObject				
Attribute	Туре	Type Mult. Kind Note				
buffer Computation	CompuScale	01	aggr	If the transformer changes the size of the data, the CompuScale can be used to specify a rule to derive the size of the output data based on the size of the input data.		





Class	BufferProperties			
headerLength	Integer	1	attr	Defines the length of the header (in bits) this transformer will add in front of the data.
inPlace	Boolean	1	attr	If set, the transformer uses the input buffer as output buffer.

Table 7.3: BufferProperties

Class	TransformationDescript	TransformationDescription (abstract)				
Package	M2::AUTOSARTemplates:	:SystemT	emplate::	Transformer		
Note	1	The TransformationDescription is the abstract class that can be used by specific transformers to add transformer specific properties.				
Base	ARObject, Describable	ARObject, Describable				
Subclasses	EndToEndTransformationI Description	EndToEndTransformationDescription, SOMEIPTransformationDescription, UserDefinedTransformation Description				
Attribute	Туре	Type Mult. Kind Note				
_	_	_	_	-		

Table 7.4: TransformationDescription

7.2 Error classification

Section 7.2 "Error Handling" of the document "General Specification of Basic Software Modules" [8] describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

7.2.1 Development Errors

[SWS ComXf 00028] [

Type of error	Related error code	Error value
Error code if any other API service, except Get VersionInfo, is called before the transformer module was initialized with Init or after a call to De Init.	<mip>_E_UNINIT</mip>	0x01
Error code if an invalid configuration set was selected	<mip>_E_INIT_FAILED</mip>	0x02
API service called with wrong parameter	<mip>_E_PARAM</mip>	0x03
API service called with invalid pointer	<mip>_E_PARAM_POINTER</mip>	0x04

(SRS BSW 00337)



7.2.2 Runtime Errors

There are no runtime errors.

7.2.3 Transient Faults

There are no transient faults.

7.2.4 Production Errors

There are no production errors.

7.2.5 Extended Production Errors

There are no extended production errors.

19 of 60



8 API specification

8.1 Imported types

There are no imported types from other modules beyond those specified in [2].

In the Module Interlink Headers file which is imported by the COM Based Transformer, all ImplementationDataTypes known to the RTE are included. Using this mechanism, the COM Based Transformer knows all data types of data which shall be transformed.

8.2 Type definitions

[SWS ComXf 00030] [

Name	ComXf_ConfigType				
Kind	Structure				
Elements	implementation specific	implementation specific			
	Туре	-			
	Comment	-			
Description	This is the type of the data structure containing the initialization data for the transformer.				
Available via	ComXf.h				

(SRS BSW 00404, SRS BSW 00441)

8.3 Function definitions

The COM Based transformer provides the specific interfaces generally required by [2].

[SWS_ComXf_00006] [The COM Based Transformer shall only provide functions for transformers where the TransformationTechnology is referenced as the first reference in the list of ordered references transformerChain from a DataTransformation to a TransformationTechnology. | (SRS_Xfrm_00011)

That means, only the first transformer in a transformer chain can be a COM Based Transformer because serializer transformer are in general only allowed to be the first transformer in a chain.

8.3.1 ComXf_<transformerId>

[SWS ComXf 00007] [

20 of 60



Service Name	ComXf_ <transformerid></transformerid>					
Syntax	<pre>uint8 ComXf_<transformerid> (uint8* buffer, uint32* bufferLength, <paramtype> dataElement)</paramtype></transformerid></pre>					
Service ID [hex]	0x03					
Sync/Async	Synchronous					
Reentrancy	Reentrant					
Parameters (in)	dataElement					
Parameters (inout)	None					
Parameters (out)	buffer Buffer allocated by the RTE, where the transformed data has to be stored by the transformer					
	bufferLength	Used length of the buffer				
Return value	uint8 0x00 (E_OK): Serialization successful 0x81 (E_SER_GENERIC_ERROR): A generic error occurred					
Description	This function transforms a Sender/Receiver communication using the serialization of COM Based Transformer. It takes the data element as input and outputs a uint8 array containing the serialized data.					
Available via	ComXf.h					

\(\(\sum_{\text{NRS}_Xfrm_00201}\)\) where

- type is data type of the data element after all data conversion activities of the RTE
- paramtype is derived from type according to the parameter passing rules rules defined by the SRS BSW General [5] (see [SRS_BSW_00484], [SRS_BSW_00485], and [SRS_BSW_00486]) and SWS BSW General [8] (see [SWS_BSW_00186])
- transformerId is the name pattern for the transformer specified be the *General Specification on Transformers* [2] [SWS_Xfrm_00062].

The function specified in [SWS_ComXf_00007] exists for each transformed Sender/Receiver communication which uses the COM Based Transformer.

[SWS_ComXf_00008] [The function specified in [SWS_ComXf_00007] shall exist for the first reference in the list of ordered references transformerChain from a DataTransformation to a TransformationTechnology if the DataTransformation is referenced by an ISignalGroup in the role comBasedSignalGroup-Transformation where the ISignalGroup references a SystemSignalGroup which is referenced by SenderReceiverToSignalGroupMapping.] (SRS_Xfrm_-00201)

[SWS_ComXf_00009] [The function specified in [SWS_ComXf_00007] shall serialize complex data elements of Sender/Receiver communication into a linear byte array representation using the COM Based Transformation. | (SRS_Xfrm_00201)



8.3.2 ComXf_Inv_<transformerId>

[SWS ComXf 00010] [

Service Name	ComXf_Inv_ <transformerid:< th=""><th>></th></transformerid:<>	>				
Syntax	<pre>uint8 ComXf_Inv_<transformerid> (const uint8* buffer, uint32 bufferLength, <type>* dataElement)</type></transformerid></pre>					
Service ID [hex]	0x04					
Sync/Async	Synchronous					
Reentrancy	Reentrant					
Parameters (in)	buffer Buffer allocated by the RTE, where the still serialized data are stored by the Rte					
	bufferLength Used length of the buffer					
Parameters (inout)	None					
Parameters (out)	dataElement Data element which is the result of the transformation and contains the deserialized data element					
Return value	uint8 0x00 (E_OK): Serialization successful 0x01 (E_NO_DATA): No data available which can be deserialized 0x81 (E_SER_GENERIC_ERROR): A generic error occurred					
Description	This function deserializes a Sender/Receiver communication using the deserialization of COM Based Transformer. It takes the uint8 array containing the serialized data as input and outputs the original data element which will be passed to the Rte.					
Available via	ComXf.h					

\(\int (SRS_Xfrm_00201)\)\) where

- type is data type of the data element before all data conversion activities of the RTE
- transformerId is the name pattern for the transformer specified in [SWS_-Xfrm 00062] ([2]).

The function specified in [SWS_ComXf_00010] exists for each transformed Sender/Receiver communication which uses the COM Based Transformation.

[SWS_ComXf_00011] [The function specified in [SWS_ComXf_00010] shall exist for the first reference in the list of ordered references transformerChain from a DataTransformation to a TransformationTechnology if the DataTransformation is referenced by an ISignalGroup in the role comBasedSignalGroup—Transformation where the ISignalGroup references a SystemSignalGroup which is referenced by SenderReceiverToSignalGroupMapping.](SRS_Xfrm_-00201)

[SWS_ComXf_00035] [If <code>ComXf_Inv_<transformerId></code> specified in [SWS_ComXf_00010] is called with buffer equal to <code>NULL_PTR</code> and <code>buffer-Length</code> equal to <code>0</code>, then the output buffer <code>buffer</code> shall not be changed and <code>ComXf_Inv_<transformerId></code> shall return with <code>E_NO_DATA.</code>] (SRS_Xfrm_00201)



[SWS_ComXf_00012] [The function specified in [SWS_ComXf_00010] shall deserialize a linear byte array to primitive or complex data elements of Sender/Receiver communication using the COM Based Transformation. | (SRS_Xfrm_00201)

8.3.3 ComXf_Init

[SWS_ComXf_00026]

Service Name	ComXf_Init				
Syntax	<pre>void ComXf_Init (const ComXf_ConfigType* config)</pre>				
Service ID [hex]	0x01				
Sync/Async	Synchronous				
Reentrancy	Reentrant				
Parameters (in)	config Pointer to the transformer's configuration data.				
Parameters (inout)	None				
Parameters (out)	None				
Return value	None				
Description	This service initializes the transformer for the further processing.				
Available via	ComXf.h				

(SRS_BSW_00407, SRS_BSW_00411)

8.3.4 ComXf_DeInit

[SWS_ComXf_00027] [

Service Name	ComXf_DeInit
Syntax	<pre>void ComXf_DeInit (void)</pre>
Service ID [hex]	0x02
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	This service deinitializes the transformer.
Available via	ComXf.h

(SRS_BSW_00407, SRS_BSW_00411)



8.3.5 ComXf_GetVersionInfo

[SWS_ComXf_00024] [

Service Name	ComXf_GetVersionInfo					
Syntax	void ComXf_GetVersionInfo (Std_VersionInfoType* VersionInfo)					
Service ID [hex]	0x00	0x00				
Sync/Async	Synchronous					
Reentrancy	Reentrant					
Parameters (in)	None					
Parameters (inout)	None					
Parameters (out)	VersionInfo Pointer to where to store the version information of this module.					
Return value	None					
Description	This service returns the version information of the called transformer module.					
Available via	ComXf.h					

(SRS BSW 00407, SRS BSW 00411)

8.4 Callback notifications

COM Based Transformer has no callback notifications.

8.5 Scheduled functions

COM Based Transformer has no scheduled functions.

8.6 Expected interfaces

COM Based Transformer has no expected interfaces.



9 Sequence diagrams

There are no sequence diagrams applicable to COM Based Transformer.



10 Configuration specification

[SWS_ComXf_00031] [The COM Based Transformer is configured based on the COM module configuration [4].] (SRS Xfrm 00202)

Still, there is an EcuC necessary to map the implementation of the transformer. The EcuC defined in [2] shall be used.

[SWS_ComXf_00033] [The vendor specific module definition of the COM Based Transformer - based on the Xfrm configuration [2] - may be extended by the vendor to support the close interaction with the Com module [4].] (SRS_Xfrm_00202)

[SWS_ComXf_00034] [The COM Based Transformer shall be configured to be post-Build when the configuration of the Com module [4] is postBuild for the respective ComSignalGroups.] (SRS_Xfrm_00202)

[SWS_ComXf_00025] [The apiServicePrefix of the COM Based Transformer's EcuC shall be set to ComXf.] (SRS_BSW_00159, SRS_Xfrm_00202)



A Referenced Meta Classes

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.

Class	DataTransformation				
Package	M2::AUTOSARTemplates::SystemTemplate::Transformer				
Note	A DataTransformation rep	A DataTransformation represents a transformer chain. It is an ordered list of transformers.			
Base	ARObject, Identifiable, Mu	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Attribute	Type Mult. Kind Note				
data Transformation Kind	DataTransformationKind Enum	01	attr	This attribute controls the kind of DataTransformation to be applied.	
executeDespite Data Unavailability	Boolean	1	attr	Specifies whether the transformer chain is executed even if no input data are available.	
transformer Chain (ordered)	Transformation Technology	1*	ref	This attribute represents the definition of a chain of transformers that are supposed to be executed according to the order of being referenced from DataTransformation.	

Table A.1: DataTransformation

Class	EcucModuleDef					
Package	M2::AUTOSARTemplates::ECUCParameterDefTemplate					
Note	Used as the top-level element for configuration definition for Software Modules, including BSW and RTE as well as ECU Infrastructure.					
	Tags:atp.recommendedPackage=EcucModuleDefs					
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpDefinition, CollectableElement, Ecuc DefinitionElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Type Mult. Kind Note				
apiServicePrefix	Cldentifier	01	attr	For CDD modules this attribute holds the apiService Prefix.		
				The shortName of the module definition of a Complex Driver is always "Cdd". Therefore for CDD modules the module apiServicePrefix is described with this attribute.		
container	EcucContainerDef	*	aggr	Aggregates the top-level container definitions of this specific module definition.		
				Stereotypes: atpSplitable Tags: atp.Splitkey=container.shortName xml.sequenceOffset=11		
postBuildVariant Support	Boolean	01	attr	Indicates if a module supports different post-build variants (previously known as post-build selectable configuration sets). TRUE means yes, FALSE means no.		



Class	EcucModuleDef			
refinedModule Def	EcucModuleDef	01	ref	Optional reference from the Vendor Specific Module Definition to the Standardized Module Definition it refines. In case this EcucModuleDef has the category STANDARDIZED_MODULE_DEFINITION this reference shall not be provided. In case this EcucModuleDef has the category VENDOR_SPECIFIC_MODULE_DEFINITION this reference is mandatory. Stereotypes: atpUriDef
supported ConfigVariant	EcucConfiguration VariantEnum	*	attr	Specifies which ConfigurationVariants are supported by this software module. This attribute is optional if the Ecuc ModuleDef has the category STANDARDIZED_ MODULE_DEFINITION. If the category attribute of the EcucModuleDef is set to VENDOR_SPECIFIC_ MODULE_DEFINITION then this attribute is mandatory.

Table A.2: EcucModuleDef

Class	ISignalGroup	ISignalGroup					
Package	M2::AUTOSARTemplates	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication					
Note	SignalGroup of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal Group is sent in different SignalIPdus to multiple receivers.						
	An ISignalGroup refers to a set of ISignals that shall always be kept together. A ISignalGroup represa COM Signal Group.						
	Therefore it is recommendatp.recommendedPackag		the ISign	alGroup in the same Package as ISignals (see			
	Tags:atp.recommendedP	ackage=IS	SignalGro	up			
Base	ARObject, CollectableEle Element, Referrable	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, Packageable					
Attribute	Туре	Mult.	Kind	Note			
comBased SignalGroup Transformation	DataTransformation	01	ref	Optional reference to a DataTransformation which represents the transformer chain that is used to transform the data that shall be placed inside this ISignalGroup based on the COMBasedTransformer approach.			
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=comBasedSignalGroupTransformation.data Transformation, comBasedSignalGroup Transformation.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime			
iSignal	ISignal	*	ref	Reference to a set of ISignals that shall always be kept together.			
systemSignal Group	SystemSignalGroup	1	ref	Reference to the SystemSignalGroup that is defined on VFB level and that is supposed to be transmitted in the ISignalGroup.			
transformation ISignalProps	TransformationISignal Props	*	aggr	A transformer chain consists of an ordered list of transformers. The ISignalGroup specific configuration properties for each transformer are defined in the TransformationISignalProps class. The transformer configuration properties that are common for all ISignal Groups are described in the TransformationTechnology class.			

Table A.3: ISignalGroup



Class	ISignallPdu					
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication					
Note	Represents the IPdus handled by Com. The ISignalIPdu assembled and disassembled in AUTOSAR COM consists of one or more signals. In case no multiplexing is performed this IPdu is routed to/from the Interface Layer.					
	A maximum of one dynamic length signal per IPdu is allowed. Tags:atp.recommendedPackage=Pdus					
Base	ARObject, CollectableEle Element, Pdu, Referrable		exElemen	t, IPdu, Identifiable, MultilanguageReferrable, Packageable		
Attribute	Туре	Mult.	Kind	Note		
iPduTiming Specification	IPduTiming	01	aggr	Timing specification for Com IPdus (Transmission Modes). This information is mandatory for the sender in a System Extract. This information may be omitted on receivers in a System Extract.		
				atpVariation: The timing of a Pdu can vary.		
				Stereotypes: atpVariation Tags:vh.latestBindingTime=postBuild		
iSignalToPdu Mapping	ISignalTolPduMapping	*	aggr	Definition of SignalToIPduMappings included in the Signal IPdu.		
				atpVariation: The content of a PDU can be variable.		
				Stereotypes: atpVariation Tags:vh.latestBindingTime=postBuild		
pduCounter	SignallPduCounter	01	aggr	An included Pdu counter is used to ensure that a sequence of Pdus is maintained.		
				Stereotypes: atpVariation Tags:vh.latestBindingTime=preCompileTime		
pduReplication	SignallPduReplication	01	aggr	Pdu Replication is a form of redundancy where the data content of one ISignallPdu (source) is transmitted inside a set of replica ISignallPdus. These ISignallPdus (copies) have different Pdu IDs, identical PduCounters, identical data content and are transmitted with the same frequency.		
				Stereotypes: atpVariation Tags:vh.latestBindingTime=preCompileTime		
unusedBit Pattern	Integer	1	attr	AUTOSAR COM and AUTOSAR IPDUM are filling not used areas of an IPDU with this bit-pattern. This attribute is mandatory to avoid undefined behavior. This byte-pattern will be repeated throughout the IPdu.		

Table A.4: ISignallPdu

Class	ISignalTolPduMapping	ISignalTolPduMapping			
Package	M2::AUTOSARTemplates:	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note		An ISignalToIPduMapping describes the mapping of ISignals to ISignalIPdus and defines the position of the ISignal within an ISignalIPdu.			
Base	ARObject, Identifiable, Mu	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Attribute	Туре	Type Mult. Kind Note			





Class	ISignalToIPduMapping			
iSignal	ISignal	01	ref	Reference to a ISignal that is mapped into the ISignal IPdu. Each ISignal contained in the ISignalGroup shall be
				mapped into an IPdu by an own ISignalToIPduMapping. The references to the ISignal and to the ISignalGroup in an ISignalToIPduMapping are mutually exclusive.
iSignalGroup	ISignalGroup	01	ref	Reference to an ISignalGroup that is mapped into the SignalIPdu. If an ISignalToIPduMapping for an ISignal Group is defined, only the UpdateIndicationBitPosition and the transferProperty is relevant. The startPosition and the packingByteOrder shall be ignored.
				Each ISignal contained in the ISignalGroup shall be mapped into an IPdu by an own ISignalToIPduMapping. The references to the ISignal and to the ISignalGroup in an ISignalToIPduMapping are mutually exclusive.
packingByte Order	ByteOrderEnum	01	attr	This parameter defines the order of the bytes of the signal and the packing into the SignallPdu. The byte ordering "Little Endian" (MostSignificantByteLast), "Big Endian" (MostSignificantByteFirst) and "Opaque" can be selected. For opaque data endianness conversion shall be configured to Opaque. The value of this attribute impacts the absolute position of the signal into the SignallPdu (see the startPosition attribute description).
				For an ISignalGroup the packingByteOrder is irrelevant and shall be ignored.
startPosition	Integer	01	attr	This parameter is necessary to describe the bitposition of a signal within an SignallPdu. It denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.
				Please note that the way the bytes will be actually sent on the bus does not impact this representation: they will always be seen by the software as a byte array.
				If a mapping for the ISignalGroup is defined, this attribute is irrelevant and shall be ignored.
transferProperty	TransferPropertyEnum	01	attr	Defines how the referenced ISignal contributes to the send triggering of the ISignalIPdu.
update IndicationBit Position	Integer	01	attr	The UpdateIndicationBit indicates to the receivers that the signal (or the signal group) was updated by the sender. Length is always one bit. The UpdateIndicationBitPosition attribute describes the position of the update bit within the SignalIPdu. For Signals of a ISignalGroup this attribute is irrelevant and shall be ignored.
				Note that the exact bit position of the updateIndicationBit Position is linked to the value of the attribute packingByte Order because the method of finding the bit position is different for the values mostSignificantByteFirst and most SignificantByteLast. This means that if the value of packingByteOrder is changed while the value of update IndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing ISignalIPdu still undergoes a change.





Class	ISignalTolPduMapping	
		This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.

Table A.5: ISignalTolPduMapping

Class	ImplementationDataType						
Package	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes						
Note	Describes a reusable data type on the implementation level. This will typically correspond to a typedef in C-code.						
	Tags:atp.recommendedPa	ackage=In	nplementa	ationDataTypes			
Base				ionDataType, AtpBlueprint, AtpBlueprintable, AtpClassifier, ent, Identifiable, MultilanguageReferrable, Packageable			
Attribute	Туре	Mult.	Kind	Note			
dynamicArray SizeProfile	String	01	attr	Specifies the profile which the array will follow in case this data type is a variable size array.			
isStructWith Optional	Boolean	01	attr	This attribute is only valid if the attribute category is set to STRUCTURE.			
Element				If set to True, this attribute indicates that the ImplementationDataType has been created with the intention to define at least one element of the structure as optional.			
subElement (ordered)	ImplementationData TypeElement	*	aggr	Specifies an element of an array, struct, or union data type.			
				The aggregation of ImplementionDataTypeElement is subject to variability with the purpose to support the conditional existence of elements inside a Implementation DataType representing a structure.			
				Stereotypes: atpVariation Tags:vh.latestBindingTime=preCompileTime			
symbolProps	SymbolProps	01	aggr	This represents the SymbolProps for the Implementation DataType.			
				Stereotypes: atpSplitable Tags:atp.Splitkey=symbolProps.shortName			
typeEmitter	NameToken	01	attr	This attribute is used to control which part of the AUTOSAR toolchain is supposed to trigger data type definitions.			

Table A.6: ImplementationDataType



Class	PortPrototype (abstract)							
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components							
Note	Base class for the ports o	f an AUTC	SAR soft	ware component.				
	The aggregation of PortPlexistence of ports.	The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.						
Base	ARObject, AtpBlueprintal	ole, AtpFe	ature, Atp	Prototype, Identifiable, MultilanguageReferrable, Referrable				
Subclasses	AbstractProvidedPortProt	otype, Ab	stractReq	uiredPortPrototype				
Attribute	Туре	Mult.	Kind	Note				
clientServer Annotation	ClientServerAnnotation	*	aggr	Annotation of this PortPrototype with respect to client/ server communication.				
delegatedPort Annotation	DelegatedPort Annotation	01	aggr	Annotations on this delegated port.				
ioHwAbstraction Server Annotation	IoHwAbstractionServer Annotation	*	aggr	Annotations on this IO Hardware Abstraction port.				
modePort Annotation	ModePortAnnotation	*	aggr	Annotations on this mode port.				
nvDataPort Annotation	NvDataPortAnnotation	*	aggr	Annotations on this non voilatile data port.				
parameterPort Annotation	ParameterPort Annotation	*	aggr	Annotations on this parameter port.				
senderReceiver Annotation	SenderReceiver Annotation	*	aggr	Collection of annotations of this ports sender/receiver communication.				
triggerPort Annotation	TriggerPortAnnotation	*	aggr	Annotations on this trigger port.				

Table A.7: PortPrototype

Class	SenderReceiverInterfac	SenderReceiverInterface					
Package	M2::AUTOSARTemplates	::SWCom	onentTer	mplate::PortInterface			
Note	A sender/receiver interfac	e declares	s a numbe	er of data elements to be sent and received.			
	Tags:atp.recommendedP	Tags:atp.recommendedPackage=PortInterfaces					
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, DataInterface, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable						
Attribute	Туре	Mult.	Kind	Note			
dataElement	VariableDataPrototype	*	aggr	The data elements of this SenderReceiverInterface.			
invalidation Policy	InvalidationPolicy	*	aggr	InvalidationPolicy for a particular dataElement			
metaDataItem Set	MetaDataItemSet	*	aggr	This aggregation defines fixed sets of meta-data items associated with dataElements of the enclosing Sender ReceiverInterface			

Table A.8: SenderReceiverInterface

Class	SenderReceiverToSigna	SenderReceiverToSignalGroupMapping				
Package	M2::AUTOSARTemplates:	M2::AUTOSARTemplates::SystemTemplate::DataMapping				
Note	Mapping of a sender recei	Mapping of a sender receiver communication data element with a composite datatype to a signal group.				
Base	ARObject, DataMapping	ARObject, DataMapping				
Attribute	Туре	Mult.	Kind	Note		





Class	SenderReceiverToSigna	SenderReceiverToSignalGroupMapping				
dataElement	VariableDataPrototype	1 iref		Reference to a data element with a composite datatype which is mapped to a signal group.		
				InstanceRef implemented by:VariableDataPrototypeIn SystemInstanceRef		
signalGroup	SystemSignalGroup	1	ref	Reference to the signal group, which contain all primitive datatypes of the composite type		
typeMapping	SenderRecComposite TypeMapping	1	aggr	The CompositeTypeMapping maps the ApplicationArray Elements and ApplicationRecordElements to Signals of the SignalGroup.		

Table A.9: SenderReceiverToSignalGroupMapping

Class	SystemSignalGroup						
Package	M2::AUTOSARTemplates:	:SystemT	emplate::l	Fibex::FibexCore::CoreCommunication			
Note		A signal group refers to a set of signals that shall always be kept together. A signal group is used to guarantee the atomic transfer of AUTOSAR composite data types.					
		The SystemSignalGroup defines a signal grouping on VFB level. On cluster level the Signal grouping is described by the ISignalGroup element.					
	Tags:atp.recommendedPackage=SystemSignalGroups						
Base	ARElement, ARObject, C Element, Referrable	ollectable	Element,	ldentifiable, MultilanguageReferrable, Packageable			
Attribute	Туре	Mult.	Kind	Note			
systemSignal	SystemSignal	* ref Reference to a set of SystemSignals that shall always be kept together.					
transforming SystemSignal	SystemSignal	01	ref	Optional reference to the SystemSignal which shall contain the transformed (linear) data.			

Table A.10: SystemSignalGroup



B Used ECU Configuration

To ease the readability the relevant parts of the Com module configuration [4] are duplicated here (for information only).

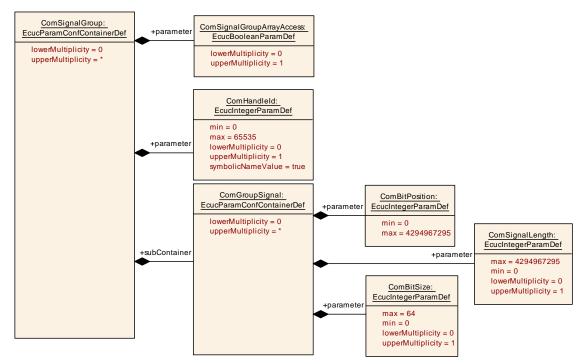


Figure B.1: AR_EcucDef_ComSignalGroupArrayAccess

SWS Item	[ECUC_Com_00345]	[ECUC_Com_00345]					
Container Name	ComSignalGroup						
Parent Container	ComConfig						
Description	Contains the configuration p module's signal groups.	Contains the configuration parameters of the AUTOSAR COM module's signal groups.					
Post-Build Variant Multiplicity	true	true					
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE						
	Link time X VARIANT-LINK-TIME						
	Post-build time X VARIANT-POST-BUILD						
Configuration Paramete	rs						

Name	ComDataInvalidAction [ECUC_Com_00314]					
Parent Container	ComSignalGroup					
Description	This parameter defines the action performed upon reception of an invalid signal. Relating to signal groups the action in case if one of the included signals is an invalid signal. If Replace is used the ComSignalInitValue will be used for the replacement.					
Multiplicity	01					
Туре	EcucEnumerationParamDef					
Range	NOTIFY					



	REPLACE	Litera	al for DataInvalidAction
Post-Build Variant Multiplicity	false	·	
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComErrorNotification [EC	ComErrorNotification [ECUC_Com_00499]					
Parent Container	ComSignalGroup	ComSignalGroup					
Description		Only valid on sender side: Name of Com_CbkTxErr callback function to be called. If this parameter is omitted no error notification shall take place.					
Multiplicity	01						
Туре	EcucFunctionNameDef						
Default Value							
Regular Expression							
Post-Build Variant Multiplicity	false						
Post-Build Variant Value	false						
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE				
	Link time	X	VARIANT-LINK-TIME,				
	Post-build time		VARIANT-POST-BUILD				
Value Configuration	1 GOT Build tillio		VADIANT DDE COMPILE				
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE						
	Link time X VARIANT-LINK-TIME, VARIANT-POST-BUILD						
	Post-build time	_					
Scope / Dependency	scope: local						



Name	ComFirstTimeout [ECUC_Com_00183]				
Parent Container	ComSignalGroup				
Description	Defines the length of the first deadline monitoring timeout period in seconds. This timeout is used immediately after start (or restart) of the deadline monitoring service. The timeout period of the successive periods is configured by ECUC_Com_00263.				
Multiplicity	01				
Туре	EcucFloatParamDef				
Range	[0 3600]				
Default Value					
Post-Build Variant Multiplicity	true				
Post-Build Variant Value	true				
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time	X	VARIANT-LINK-TIME		
	Post-build time	Х	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time	X	VARIANT-LINK-TIME		
	Post-build time	X	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				

Name	ComHandleId [ECUC_Com_00165]				
Parent Container	ComSignalGroup				
Description	The numerical value used as the ID.				
	This ID identifies signals and signal groups in the COM APIs using				
	Com_SignalIdType or Com_SignalGroupIdType parameter				
	respectively.				
Multiplicity	01				
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)				
Range	0 65535				
Default Value					
Post-Build Variant	false				
Multiplicity					
Post-Build Variant	false				
Value					
Multiplicity	Pre-compile time	X	All Variants		
Configuration Class					
	Link time	_			
	Post-build time	_			
Value Configuration	Pre-compile time	X	All Variants		
Class					
	Link time	_			
	Post-build time	_			
Scope / Dependency	scope: ECU				



Name	ComInitialValueOnly [ECUC_Com_00811]			
Parent Container	ComSignalGroup			
Description	This parameter defines that the respective signal's initial value shall be put into the respective PDU but there will not be any update of the value through the RTE. Thus the Com implementation does not need to expect any API calls for this signal (group).			
Multiplicity	01			
Туре	EcucBooleanParamDef	EcucBooleanParamDef		
Default Value	false			
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD	
	Post-build time	_		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD	
	Post-build time –			
Scope / Dependency	scope: local			

Name	ComInvalidNotification [E	CUC_C	om_00315]
Parent Container	ComSignalGroup		
Description	Only valid on receiver side: Name of Com_CbkInv callback function to be called. Name of the function which notifies the RTE about the reception of an invalidated signal/ signal group. Only applicable if ComDataInvalidAction is configured to NOTIFY.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default Value			
Regular Expression			
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

37 of 60



Name	ComNotification [ECUC_Com_00498]		
Parent Container	ComSignalGroup		
Description	On sender side: Name of Com_CbkTxAck callback function to be called. On receiver side: Name of Com_CbkRxAck callback function to be called. If this parameter is omitted no notification shall take place.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default Value			
Regular Expression			
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComRxDataTimeoutAction [ECUC Com 00412]			
Parent Container	ComSignalGroup			
Description	This parameter defines the action performed upon expiration of the reception deadline monitoring timer.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	NONE	no replacement shall take place signals shall be replaced by their ComSignalInitValue signals shall be replaced by their ComTimeoutSubstitutionValue		
	REPLACE			
	SUBSTITUTE			
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD	
	Post-build time	-		



Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComSignalGroupArrayAccess [ECUC_Com_10003]			
Parent Container	ComSignalGroup			
Description	Defines whether the uint8-array based access shall be used for this ComSignalGroup.			
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default Value				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	X	All Variants	
	Link time	-		
	Post-build time	_		
Value Configuration Class	Pre-compile time	X	All Variants	
	Link time	_		
	Post-build time –			
Scope / Dependency				

Name	ComTimeout [ECUC_Com_00263]			
Parent Container	ComSignalGroup			
Description	Defines the length of the deadline monitoring timeout period in seconds. The period for the first timeout period can be configured separately by ECUC_Com_00183.			
Multiplicity	01	01		
Туре	EcucFloatParamDef			
Range	[0 3600]			
Default Value				
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true	true		
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	



Scope / Dependency	scope: local
--------------------	--------------

Name	ComTimeoutNotification [ECUC_Com_00552]			
Parent Container	ComSignalGroup			
Description	On sender side: Name of Com_CbkTxTOut callback function to be called. On receiver side: Name of Com_CbkRxTOut callback function to be called.			
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default Value				
Regular Expression				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME,	
			VARIANT-POST-BUILD	
	Post-build time	_		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME, VARIANT-POST-BUILD			
	Post-build time –			
Scope / Dependency	scope: local			

Name	ComTransferProperty [ECUC_Com_00232]			
Parent Container	ComSignalGroup			
Description	Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	PENDING	A write access to this signal never triggers the transmission of the corresponding I-PDU.		
	TRIGGERED Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU.			
	TRIGGERED_ON_CHAN Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.			



	TRIGGERED_ON_CHAN GE_WITHOUT_REPETITI ON	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.		
	TRIGGERED_WITHOUT_ REPETITION	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition.		
Post-Build Variant Multiplicity	true	•		
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

Name	ComUpdateBitPosition [ECUC_Com_00257]			
Parent Container	ComSignalGroup			
Description	Bit position of update-bit inside I-PDU. If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side. Range: 063 for CAN and LIN, 0511 for CAN FD, 02031 for FlexRay, 04294967295 for TP.			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default Value	·			
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			



Name	ComSystemTemplateSignalGroupRef [ECUC_Com_00001]				
Parent Container	ComSignalGroup				
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignalGroup (SystemTemplate) which this ComSignalGroup represents.				
Multiplicity	01				
Туре	Foreign reference to I-SIGNAL-TO-I-PDU-MAPPING				
Post-Build Variant Multiplicity	true				
Post-Build Variant Value	true				
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time	X	VARIANT-LINK-TIME		
	Post-build time X VARIANT-POST-BUILD				
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE		
	Link time	Link time X VARIANT-LINK-TIME			
	Post-build time	Х	VARIANT-POST-BUILD		
Scope / Dependency	scope: ECU				

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComGroupSignal	0*	This container contains the configuration parameters of group signals. I.e. signals that are included within a signal group.

SWS Item	[ECUC_Com_00520]			
Container Name	ComGroupSignal	ComGroupSignal		
Parent Container	ComSignalGroup	ComSignalGroup		
Description	This container contains the configuration parameters of group signals. I.e. signals that are included within a signal group.			
Post-Build Variant Multiplicity	true			
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Configuration Parameter	's			

Name	ComBitPosition [ECUC_Com_00259]			
Parent Container	ComGroupSignal			
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default Value				



Post-Build Variant	true		
Value			
Value Configuration	Pre-compile time	Х	VARIANT-PRE-COMPILE
Class			
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComBitSize [ECUC_Com_0	0158]	
Parent Container	ComGroupSignal			
Description	Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN the size shall be configured by ComSignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.			
Multiplicity	01			
Туре	EcucIntegerParamDef	EcucIntegerParamDef		
Range	0 64			
Default Value				
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

Name	ComHandleId [ECUC_Com_00165]		
Parent Container	ComGroupSignal		
Description	The numerical value used as the ID.		
	This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.		
Multiplicity	01		
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 65535		
Default Value	·		
Post-Build Variant	false		
Multiplicity			
Post-Build Variant Value	false		



Multiplicity Configuration Class	Pre-compile time	Х	All Variants
	Link time	_	
	Post-build time	_	
Value Configuration Class	Pre-compile time	Х	All Variants
	Link time	_	
	Post-build time	_	
Scope / Dependency	scope: ECU		

Parent Container ComGroupSignal Description Defines the data invalid value of the signal. In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, "97 98 100" means a string "abd", where the char "a" is in byte 0(low	d e.g. vest			
In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks, the string shall be interpreted as a decimal representation of the characters separated by blanks, the string shall be interpreted as a decimal representation of the characters separated by blanks, the string shall be interpreted as a decimal representation of the characters separated by blanks, the string shall be interpreted as defined in the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks.	d e.g. vest			
SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, and the string shall be interpreted as a decimal representation of the characters.	d e.g. vest			
defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, the string shall be interpreted as a decimal representation of the characters.	d e.g. vest			
specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	d e.g. vest			
string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	d e.g. vest			
BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	e.g. /est			
Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	e.g. /est			
ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	e.g. /est			
	est			
address), "b" is in byte 1, and "d" is in byte 2 and (highest address).	t to			
For the ComSignalType UINT8_DYN the dynamic length shall be se				
the number of configured characters. An empty string "" shall be				
interpreted as 0-sized dynamic signal.	, ,			
Multiplicity 01				
Type	EcucStringParamDef			
Regular Expression				
	folso			
Multiplicity	false			
Post-Build Variant false				
Value VARIANTERRE COMPUS				
MultiplicityPre-compile timeXVARIANT-PRE-COMPILEConfiguration Class				
Link time X VARIANT-LINK-TIME,				
VARIANT-POST-BUILD				
Post-build time –				
Value Configuration Pre-compile time X VARIANT-PRE-COMPILE Class				
Link time X VARIANT-LINK-TIME, VARIANT-POST-BUILD				
Post-build time –				
Scope / Dependency scope: local	$\overline{}$			
dependency: In case of UINT8_N the length of				
ComSignalDataInvalidValue has to be the same as ComSignalLeng	th.			



Name	ComSignalEndianness [ECUC_Com_00157]		
Parent Container	ComGroupSignal		
Description	Defines the endianness of the signal's network representation.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BIG_ENDIAN		
	LITTLE_ENDIAN		
	OPAQUE		
Post-Build Variant	true		
Value			
Value Configuration	Pre-compile time	Х	VARIANT-PRE-COMPILE
Class			
	Link time	X	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComSignalInitValue [ECUC_	Com	1_00170]	
Parent Container	ComGroupSignal			
Description	Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0. In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the			
	AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.			
Multiplicity	01			
Туре	EcucStringParamDef			
Default Value	0			
Regular Expression				
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	



Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local dependency: In case of UINT8_N the length of ComSignalInitValue has to be the same as ComSignalLength.			

Name	ComSignalLength [ECUC	Com	00437]	
Parent Container	ComGroupSignal			
Description	Description: For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.			
	The supported maximum length is restricted by the used transportation system. For non TP-PDUs the maximum size of a PDU, and therefore also of any included signal, is limited by the concrete bus characteristic. For example, the limit is 8 bytes for CAN and LIN, 64 bytes for CAN FD and 254 for FlexRay.			
Multiplicity	01	01		
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default Value				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME, VARIANT-POST-BUILD			
	Post-build time –			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD	
	Post-build time	_		
Scope / Dependency	scope: local			

Name	ComSignalType [ECUC_Com_00127]		
Parent Container	ComGroupSignal		
Description	The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BOOLEAN		
	FLOAT32		



	FLOATO4		
	FLOAT64		
	SINT16		
	SINT32		
	SINT64		
	SINT8		
	UINT16		
	UINT32		
	UINT64		
	UINT8		
	UINT8_DYN		
	UINT8_N		
Post-Build Variant	false	·	
Value			
Value Configuration	Pre-compile time	X	VARIANT-PRE-COMPILE
Class			
	Link time	X	VARIANT-LINK-TIME,
			VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComTimeoutSubstitutionValue [ECUC_Com_10006]			
Parent Container	ComGroupSignal			
Description	The signal substitution value will be used in case of a timeout and ComRxDataTimeoutAction is set to SUBSTITUTE. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00.			
	In case of UINT8_DYN the initial size shall be 0.			
	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification.			
	In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification.			
	In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.			
	In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.			
Multiplicity	01			
Туре	EcucStringParamDef			
Default Value				



Regular Expression					
Post-Build Variant Multiplicity	true				
Post-Build Variant Value	true	true			
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time	Link time X VARIANT-LINK-TIME			
	Post-build time	X	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time	X	VARIANT-LINK-TIME		
	Post-build time	X	VARIANT-POST-BUILD		
Scope / Dependency	scope: local	•			

Name	ComTransferProperty [ECUC_Com_00560]			
Parent Container	ComGroupSignal			
Description	Optionally defines whether this group signal shall contribute to the TRIGGERED_ON_CHANGE transfer property of the signal group. If at least one group signal of a signal group has the "ComTransferProperty" configured all other group signals of that signal group shall have the attribute configured as well.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	PENDING	A change of the value of this group signal shall not be considered in the evaluation of the signal groups ComTransferProperty. A change of the value of this group signal shall be considered in the evaluation of the signal groups ComTransferProperty.		
	TRIGGERED_ON_CHAN GE			
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD		
Scope / Dependency	scope: local			



Name	ComSystemTemplateSystemSignalRef [ECUC_Com_00002]			
Parent Container	ComGroupSignal			
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template) which this ComSignal (or ComGroupSignal) represents.			
Multiplicity	01			
Туре	Foreign reference to I-SIGN	AL-T	O-I-PDU-MAPPING	
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true	true		
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	Post-build time X VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time	X	VARIANT-POST-BUILD	
Scope / Dependency	scope: ECU			

Included Containers					
Container Name	Multiplicity	Scope / Dependency			
ComFilter	01	This container contains the configuration parameters of the AUTOSAR COM module's Filters.			
		Note: On sender side the container is used to specify the transmission mode conditions.			

SWS Item	[ECUC_Com_00340]			
Container Name	ComIPdu			
Parent Container	ComConfig			
Description	Contains the configuration p module's I-PDUs.	Contains the configuration parameters of the AUTOSAR COM module's I-PDUs.		
Post-Build Variant Multiplicity	true	true		
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Configuration Parameters				

Name	ComIPduCallout [ECUC_Com_00387]
Parent Container	ComIPdu
Description	This parameter defines the existence and the name of a callout function for the corresponding I-PDU. If this parameter is omitted no I-PDU callout shall take place for the corresponding I-PDU.
Multiplicity	01
Туре	EcucFunctionNameDef
Default Value	



Regular Expression				
Post-Build Variant	false			
Multiplicity				
Post-Build Variant	false			
Value				
Multiplicity	Pre-compile time	X	All Variants	
Configuration Class	·			
	Link time –			
	Post-build time	_		
Value Configuration	Pre-compile time	X	All Variants	
Class				
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: local			

Name	ComIPduCancellationSupport [ECUC_Com_00709]			
Parent Container	ComlPdu			
Description	Defines for I-PDUs with ComIPduType NORMAL: If the underlying IF-modul supports cancellation of transmit requests. Defines for I-PDUs with ComIPduType TP: If the underlying TP-module			
	supports RX and TX cance			
Multiplicity	01		<u> </u>	
Туре	EcucBooleanParamDef			
Default Value	false			
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time –			
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time –			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: ECU dependency: This parameter shall not be set to true if ComCancellationSupport is set to false			

Name	ComIPduDirection [ECUC_Com_00493]		
Parent Container	ComlPdu		
Description	The direction defines if this I-PDU, and therefore the contributing signals and signal groups, shall be sent or received.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	RECEIVE		
	SEND		



Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME,
			VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local dependency: If configured to be included, see ECUC_Cor		t also a ComTxlpdu container shall 496

Name	ComlPduHandleId [ECUC_Com_00175]			
Parent Container	ComIPdu			
Description	The numerical value used as the ID of this I-PDU. The ComIPduHandleld is required by the API calls Com_RxIndication, Com_TpRxIndication, Com_StartOfReception and Com_CopyRxData to receive I-PDUs from the PduR (ComIP-duDirection: Receive), as well as the PduId passed to an Rx-I-PDU-callout. For Tx-I-PDUs (ComIPduDirection: Send), this handle Id is used for the APIs calls Com_TxConfirmation, Com_TriggerTransmit, Com_TriggerIPDUSend or Com_TriggerIPDUSendWithMetaData, Com_CopyTxData and Com_TpTxConfirmation to transmit respectively confirm transmissions of I-PDUs, as well as the PduId passed to the Tx-I-PDU-callout configured with ComIPduCallout and/or ComIPduTriggerTransmitCallout.			
Multiplicity	01			
Туре	EcucIntegerParamDef (Sym	bolic	Name generated for this parameter)	
Range	0 65535			
Default Value				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	Х	All Variants	
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time X All Variants			
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: ECU			

Name	ComIPduSignalProcessing [ECUC_Com_00119]			
Parent Container	ComlPdu			
Description	For the definition of the two modes Immediate and Deferred.			
Multiplicity	1			
Туре	EcucEnumerationParamDef			
Range	DEFERRED	signal indication / confirmations are deferred for example to a cyclic task		



	IMMEDIATE	the signal indications / confirmations are performed in Com_RxIndication/Com_TxConfirmation	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComIPduTriggerTransmitCallout [ECUC_Com_00765]			
Parent Container	ComIPdu			
Description	If there is a trigger transmit callout defined for this I-PDU this parameter contains the name of the callout function.			
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default Value				
Regular Expression				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false	false		
Multiplicity Configuration Class	Pre-compile time	Х	All Variants	
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time	X	All Variants	
	Link time –			
	Post-build time	_		
Scope / Dependency	scope: local			

Name	ComlPduType [ECUC_Com_00761]			
Parent Container	ComlPdu	ComlPdu		
Description	Defines if this I-PDU is a normal I-PDU that can be sent unfragmented or if this is a large I-PDU that shall be sent via the Transport Protocol of the underlying bus.			
Multiplicity	1			
Туре	EcucEnumerationParamDef			
Range	NORMAL sent or received via normal L-PDU			
	TP	ser	nt or received via TP	
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			



Name	ComlPduGroupRef [ECUC]	ComlPduGroupRef [ECUC_Com_00206]		
Parent Container	ComlPdu	ComlPdu		
Description	Reference to the I-PDU gro	ups th	nis I-PDU belongs to.	
Multiplicity	0*			
Туре	Reference to ComlPduGrou	ıp		
Post-Build Variant Multiplicity	true	true		
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE		
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

Name	ComIPduMainFunctionRef [ECUC_Com_10012]			
Parent Container	ComIPdu			
Description	Reference to the Com_MainFunctionRx/Com_MainFunctionTx this I-PDU belongs to. Mandatory, if multiple main functions of the relevant type are defined.			
Multiplicity	01			
Туре	Choice reference to [ComM	ainFu	unctionRx,ComMainFunctionTx]	
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false	false		
Multiplicity Configuration Class	Pre-compile time X All Variants			
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time X All Variants			
	Link time –			
	Post-build time	_		
Scope / Dependency	scope: local			

Name	ComIPduSignalGroupRef [ECUC_Com_00519]
Parent Container	ComIPdu
Description	References to all signal groups contained in this I-Pdu
Multiplicity	0*
Туре	Reference to ComSignalGroup
Post-Build Variant Multiplicity	true
Post-Build Variant Value	true



Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComIPduSignalRef [ECUC_	ComIPduSignalRef [ECUC_Com_00518]		
Parent Container	ComlPdu	ComIPdu		
Description	References to all signals cor	ntaine	ed in this I-PDU.	
Multiplicity	0*			
Туре	Reference to ComSignal			
Post-Build Variant Multiplicity	true	true		
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
_	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local		_	

Name	ComPduldRef [ECUC_Cor	n_007	11]
Parent Container	ComlPdu		
Description	Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Multiplicity	1		
Туре	Reference to Pdu		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComlPduCounter	01	This optional container contains the configuration parameters of PDU Counter.



ComIPduReplication	01	This optional container contains the information needed for each I-PDU replicated.
ComTxlPdu	01	This container contains additional transmission related configuration parameters of the AUTOSAR COM module's I-PDUs.

SWS Item	[ECUC_Com_00496]
Container Name	ComTxIPdu
Parent Container	ComIPdu
Description	This container contains additional transmission related configuration parameters of the AUTOSAR COM module's I-PDUs.
Configuration Parameters	

Name	ComMetaDataDefault [ECU	C_Cc	om_10005]
Parent Container	ComTxIPdu		-
Description	In case an I-PDU refers to a globally configured MetaDataType and no explicit meta data is given for a send request (e.g. by using Com_TriggerIPDUSendWithMetaData), the AUTOSAR COM module uses this configured default meta data for sending. The configured string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).		
Multiplicity	01		
Туре	EcucStringParamDef		
Default Value			
Regular Expression			
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	Х	All Variants
	Link time	_	
	Post-build time	_	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME,
			VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency		abled	Il only be used in case I. The length of the default meta data ad MetaDataLength of this I-PDU.



Name	ComMinimumDelayTime [ECUC	_Com_00181]
Parent Container	ComTxIPdu		
Description	Defines the Minimum Delay Time (MDT) between successive transmissions of this I-PDU in seconds. The MDT is independent of the possible different transmission modes. There is only one minimum delay time parameter for one I-PDU. The minimum delay timer is not reset by changing the transmission mode. Hence, it is not allowed to violate the minimum delay time by transmission mode changes. It is not possible to monitor the minimum delay time for I-PDUs that are requested using the Com_TriggerTransmit API.		
Multiplicity	01		
Туре	EcucFloatParamDef		
Range	[0 3600]		
Default Value			
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComTxIPduClearUpdateBit [ECUC_Com_00576]			
Parent Container	ComTxIPdu			
Description	Defines when the update-b this I-PDU, will be cleared.	Defines when the update-bits of signals or signal groups, contained in this I-PDU, will be cleared.		
Multiplicity	01			
Туре	EcucEnumerationParamDe	f		
Range	Confirmation Transmit	The update-bits are cleared when the transmission of the I-PDU was confirmed. In case of Direct/N-Times transmission mode the update bits will be cleared with respect to the confirmation behaviour of SWS_Com_00305. The update-bits are cleared directly after the invocation of		
	TriggerTransmit	PduR_ComTransmit. The update-bits are cleared after the I-PDU was fetched via Com_TriggerTransmit.		
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			



Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComTxIPduUnusedAreasDefault [ECUC_Com_00017]		
Parent Container	ComTxlPdu		
Description	The AUTOSAR COM module fills not used areas of an I-PDU with this byte pattern. This attribute is mandatory to avoid undefined behaviour. This byte-pattern will be repeated throughout the I-PDU before any init-values or update-bits were set.		
Multiplicity	1		
Туре	EcucIntegerParamDef		
Range	0 255		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME,
			VARIANT-POST-BUILD
	Post-build time	-	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComTxModeFalse	01	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to false.
ComTxModeTrue	01	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to true.



C History of Constraints and Specification Items

C.1 Constraint History of this Document according to AUTOSAR R4.2.1

Initial document release.

- C.2 Constraint History of this Document according to AUTOSAR R4.2.2
- C.2.1 Added Traceables in 4.2.2

[SWS ComXf 00032]

C.2.2 Changed Traceables in 4.2.2

[SWS ComXf 00028]

C.2.3 Deleted Traceables in 4.2.2

none

- C.3 Constraint History of this Document according to AUTOSAR R4.3.0
- C.3.1 Added Traceables in 4.3.0

[SWS_ComXf_00033] [SWS_ComXf_00034] [SWS_ComXf_00035]

C.3.2 Changed Traceables in 4.3.0

[SWS_ComXf_00001] [SWS_ComXf_00004] [SWS_ComXf_00006] [SWS_ComXf_00007] [SWS_ComXf_00008] [SWS_ComXf_00010] [SWS_ComXf_00011]

C.3.3 Deleted Traceables in 4.3.0

none



C.4 Constraint History of this Document according to AUTOSAR R4.3.1

C.4.1 Added Traceables in 4.3.1

[SWS ComXf 00036]

C.4.2 Changed Traceables in 4.3.1

[SWS ComXf 00007] [SWS ComXf 00023]

C.4.3 Deleted Traceables in 4.3.1

none

- C.5 Constraint History of this Document according to AUTOSAR R4.4.0
- C.5.1 Added Traceables in 4.4.0

none

C.5.2 Changed Traceables in 4.4.0

[SWS ComXf 00007] [SWS ComXf 00020]

C.5.3 Deleted Traceables in 4.4.0

[SWS ComXf 00001] [SWS ComXf 00014]

- C.6 Constraint History of this Document according to AUTOSAR R19-11
- C.6.1 Added Traceables in 19-11

none



C.6.2	Changed Traceables in 19-11
none	
C.6.3	Deleted Traceables in 19-11
none	
C.7	Constraint History of this Document according to AUTOSAR R20-11
C.7.1	Added Traceables in R20-11
none	
C.7.2	Changed Traceables in R20-11
none	
C.7.3	Deleted Traceables in R20-11
none	