Document Title	Specification of Network Management
Document Category	Software specification (SWS)
Document UID	898
Document Status	published
Part of AUTOSAR Standard	Adaptive Platform
Part of Standard Release	R26-11

Document Change History			
Date	**Release**	**Changed by**	**Description**
2026-11-26	R26-11	AUTOSAR Release Management	• Added Partial Networking State Machine handling • Functional Cluster Lifecycle improved and standard violations updated and added to ctor • Introduced APMC parameters • Editorial changes
2025-11-25	R25-11	AUTOSAR Release Management	• Added PortInterface to API class binding. NetworkManagementPortInterface mapped to ara::nm::NetworkHandle • The algorithm for Handle Multiple Network Requests for Partial Networking is moved out of the document • Editorial changes
2024-11-27	R24-11	AUTOSAR Release Management	• Added NetworkManagementPortInterface and PortPrototype • Reworked ara::com C++ API decriptions based on header files with generated API Tables • Editorial changes
2023-11-23	R23-11	AUTOSAR Release Management	• Replaced Network Management Service Interface with C++ API • Several quality improvements
2022-11-24	R22-11	AUTOSAR Release Management	• Added clarifications regarding Operational Modes • Several quality improvements

△

2021-11-25	R21-11	AUTOSAR Release Management	• Several quality improvements • Removed chapter 10
2020-11-30	R20-11	AUTOSAR Release Management	• Several quality improvments • Changed NetworkState DataType from bool to NetworkStateType
2019-11-28	R19-11	AUTOSAR Release Management	• Added Functional Cluster Lifecycle Chapter • Several quality improvments • Improved linking to Manifest • Changed Document Status from Final to published
2019-03-29	19-03	AUTOSAR Release Management	• Introduced Service Interface for interaction via SM • Introduced possibility to group PNCs/Channels/VLANs
2018-10-30	18-10	AUTOSAR Release Management	• Updated interaction with State Management • Removed APIs and Services (interaction is done via SM) • Temporary removed user data access to applications
2018-03-29	18-03	AUTOSAR Release Management	• Initial relase

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Table of Contents

1 Introduction and functional overview 7

2 Acronyms and Abbreviations 8

3 Related documentation 10
3.1 Input documents & related standards and norms . . . 10
3.2 Further applicable specification . . . 10

4 Constraints and assumptions 11
4.1 Known Limitations . . . 11
4.2 Applicability to car domains . . . 11

5 Dependencies to other Functional Clusters 12
5.1 Provided Interfaces . . . 12
5.2 Required Interfaces . . . 13
5.3 Protocol layer dependencies . . . 13

6 Requirements Tracing 14

7 Functional specification 15
7.1 Architectural Overview . . . 15
7.2 Network Management Algorithm . . . 17
7.3 NetworkControl . . . 18
7.4 Operational Modes . . . 20
7.4.1 Network Mode . . . 21
7.4.1.1 Repeat Message State . . . 22
7.4.1.2 Normal Operation State . . . 23
7.4.1.3 Ready Sleep State . . . 23
7.4.2 Prepare Bus-Sleep Mode . . . 24
7.4.3 Bus-Sleep Mode . . . 24
7.5 NM Message Format . . . 25
7.5.1 Source Node Identifier . . . 25
7.5.2 Control Bit Vector . . . 25
7.5.3 NM User Data . . . 25
7.6 Nm Transmission . . . 27
7.6.1 Transmission Scheduling . . . 27
7.7 Nm User Data Handling . . . 28
7.8 Partial Networking . . . 28
7.8.1 Partial Network State Machine . . . 28
7.8.2 Rx Handling of NM messages . . . 30
7.8.3 Tx Handling of NM messages . . . 31
7.8.4 NM message Filter Algorithm . . . 31
7.9 Functional Cluster Lifecycle . . . 33
7.9.1 Startup . . . 33

7.9.2 Shutdown . . . 33
7.9.3 Daemon connection lost . . . 33
7.10 Reporting . . . 34
7.10.1 Security Events . . . 34
7.10.2 Log Messages . . . 34
7.10.3 Violation Messages . . . 35
7.10.4 Production Errors . . . 36
8 API specification 37
8.1 PortInterface to API class binding . . . 37
8.2 Header: ara/nm/network_handle.h . . . 38
8.2.1 Class: NetworkHandle . . . 38
8.2.1.1 Public Member Types . . . 38
8.2.1.2 Public Member Functions . . . 39
8.2.1.2.1 Special Member Functions . . . 39
8.2.1.2.2 Constructors . . . 41
8.2.1.2.3 Member Functions . . . 41
8.3 Header: ara/nm/nm_error_domain.h . . . 45
8.3.1 Non-Member Types . . . 45
8.3.2 Non-Member Functions . . . 46
8.3.2.1 Other . . . 46
8.3.3 Class: NmErrorDomain . . . 47
8.3.3.1 Public Member Types . . . 47
8.3.3.2 Public Member Functions . . . 48
8.3.3.2.1 Special Member Functions . . . 48
8.3.3.2.2 Member Functions . . . 48
8.3.4 Class: NmException . . . 49
8.3.4.1 Public Member Functions . . . 50
8.3.4.1.1 Constructors . . . 50
9 Service Interfaces 51
10 Configuration 52
10.1 Configuration Specification . . . 52
10.1.1 Overview . . . 52
10.1.2 Correspondence Table . . . 55
10.2 Default Values . . . 55
10.3 Semantic Constraints . . . 55
A Mentioned Manifest Elements 56
B Demands and constraints on Base Software (normative) 64
C Platform Extension Interfaces (normative) 65
D Not implemented requirements 66

E History of Constraints and Specification Items 67
E.1 Constraint and Specification Item Changes between AUTOSAR Release R25-11 and R26-11 . . . 67
E.1.1 Added Specification Items in R26-11 . . . 67
E.1.2 Changed Specification Items in R26-11 . . . 68
E.1.3 Deleted Specification Items in R26-11 . . . 70
E.1.4 Added Constraints in R26-11 . . . 70
E.1.5 Changed Constraints in R26-11 . . . 70
E.1.6 Deleted Constraints in R26-11 . . . 70
E.2 Constraint and Specification Item Changes between AUTOSAR Release R24-11 and R25-11 . . . 71
E.2.1 Added Specification Items in R25-11 . . . 71
E.2.2 Changed Specification Items in R25-11 . . . 71
E.2.3 Deleted Specification Items in R25-11 . . . 71
E.2.4 Added Constraints in R25-11 . . . 71
E.2.5 Changed Constraints in R25-11 . . . 71
E.2.6 Deleted Constraints in R25-11 . . . 71
E.3 Constraint and Specification Item Changes between AUTOSAR Release R23-11 and R24-11 . . . 72
E.3.1 Added Specification Items in R24-11 . . . 72
E.3.2 Changed Specification Items in R24-11 . . . 72
E.3.3 Deleted Specification Items in R24-11 . . . 72
E.3.4 Added Constraints in R24-11 . . . 73
E.3.5 Changed Constraints in R24-11 . . . 73
E.3.6 Deleted Constraints in R24-11 . . . 73
E.4 Constraint and Specification Item Changes between AUTOSAR Release R22-11 and R23-11 . . . 73
E.4.1 Added Specification Items in R23-11 . . . 73
E.4.2 Changed Specification Items in R23-11 . . . 74
E.4.3 Deleted Specification Items in R23-11 . . . 75
E.5 Constraint and Specification Item Changes between AUTOSAR Release R21-11 and R22-11 . . . 75
E.5.1 Added Specification Items in R22-11 . . . 75
E.5.2 Changed Specification Items in R22-11 . . . 75
E.5.3 Deleted Specification Items in R22-11 . . . 76
E.5.4 Added Constraints in R22-11 . . . 76
E.5.5 Changed Constraints in R22-11 . . . 76
E.5.6 Deleted Constraints in R22-11 . . . 76

1 Introduction and functional overview

This specification describes the functionality, API and the configuration of the Network Management for the AUTOSAR Adaptive Platform.

Adaptive Network Management is intended to work independent of the communication stack used. Its main purpose is to coordinate the transition between normal operation and Bus-Sleep mode of the underlying networks (physical and partial networks).

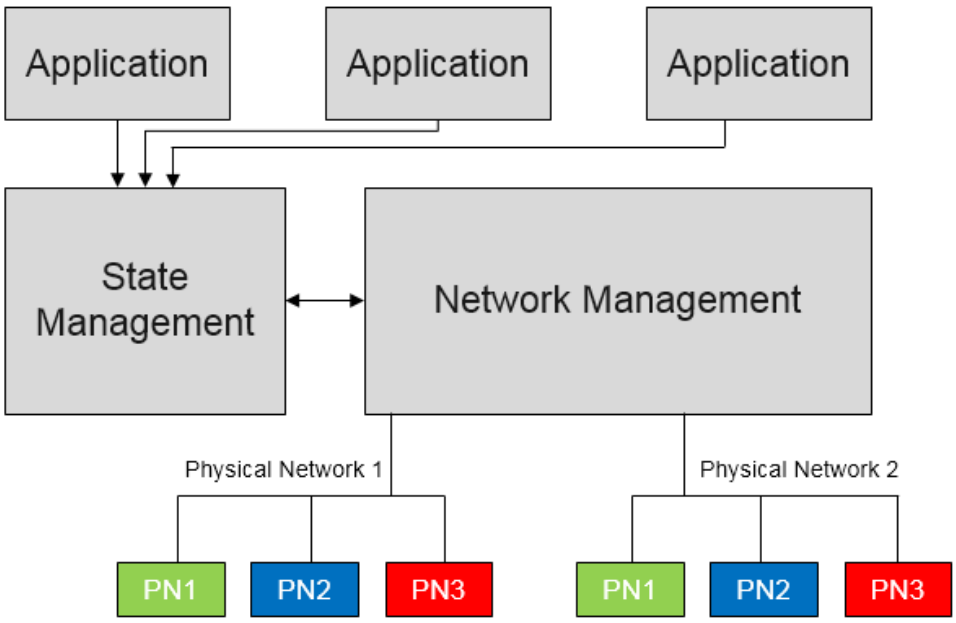


Figure 1.1: Architecture overview with example applications

2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations that are only relevant within this specification. A general list of acronyms and abbreviations is available in [1].

Abbreviation / Acronym:	Description:
API	Application Programming Interface
CBV	Control Bit Vector
CM	Communication Management
CWU	Car Wakeup
EM	Execution Management
IP	Internet Protocol
MTU	Maximum Transmission Unit
NM	Network Management
NM Node	A node that supports network management. Please note that network node, node and NM node are used with the same meaning througout the document.
PN	Partial Network
PNI	Partial Network Information
PNL	Partial Network Learning
UDP	User Datagram Protocol
PNC	Partial Network Cluster
VLAN	Virtual Local Area Network
ECU	Electronic Control Unit

Table 2.1: Acronyms and Abbreviations used in the scope of this Document

Terms:	Description:
Application library	Network Management only has an interface with the state management module. Hence, the application library is actually the state management interface library.
Bus communication	Communication on the physical medium
Logical Network	A network in which devices can be addressed independent from the actual network technology.
NM cluster	Set of NM nodes coordinated with the use of the NM algorithm.
NM message	Refers to the payload transmitted in a packet. It contains the NM User Data, Partial Network Information as well as the Control Bit Vector and the Source Node Identifier.
NM packet	Refers to an Ethernet Frame containing an IP as well as an UDP header in addition to a NM message. Please note that adaptive network management is currently only supported for Ethernet.
Network Request State	State requested by the application for a network via `ara::nm::NetworkHandle::SetNetworkRequestedState`.
PN communication	Communication during partial network operation
Physical channel	A channel enabling communication using physical devices, such as I/O ports and cables.
Repeat Message Request Bit Indication	Repeat Message Bit set in the Control Bit Vector of a received NM message.
Internally Requested	At least one field NetworkRequestedState associated to that channel/network/PNC/VLAN is set to kFullCom.

Terms:	Description:
Exernally Requested	A Network Management Message associated to that channel/network/PNC/VLAN has been received. In case of PNC associated means the bit corresponding to this PNC had the value 1.
FULL_COM	Communication over the network is possible/allowed, the network is up.
NO_COM	Communication over the network is impossible/disabled, the network is down.

Table 2.2: Terms used in the scope of this Document

3 Related documentation

3.1 Input documents & related standards and norms

[1] Glossary
AUTOSAR_FO_TR_Glossary

[2] General Specification of Adaptive Platform
AUTOSAR_AP_SWS_General

[3] Specification of the AUTOSAR Network Management Protocol
AUTOSAR_FO_PRS_NetworkManagementProtocol

[4] Explanation of Adaptive Platform Software Architecture
AUTOSAR_AP_EXP_SWArchitecture

[5] General Requirements specific to Adaptive Platform
AUTOSAR_AP_RS_General

[6] Specification of State Management
AUTOSAR_AP_SWS_StateManagement

[7] Specification of Adaptive Platform Core
AUTOSAR_AP_SWS_Core

[8] Specification of Manifest
AUTOSAR_AP_TPS_ManifestSpecification

3.2 Further applicable specification

AUTOSAR provides a general specification [2] which is also applicable for this functional cluster. It shall be considered an additional and required specification for implementing this functional cluster.

4 Constraints and assumptions

4.1 Known Limitations

The Adaptive Network Management is actually only supporting UdpNM.

The Adaptive Network Management does not allow node detection through asking other nodes to enter Repeat Message State, but handles incoming Repeat Message requests.

The Adaptive Network Management cannot be configured as the NM coordinator.

The Adaptive Network Management does not support coordinated shutdown using the information in CBV.

The Adaptive Network Management does not support passive mode and passive start-up. Passive start-up would mean that a node has started (i.e. goes to Normal Mode), but the network has been woken up by another node.

Update and access of User Data was removed as the service interface to Applications has been removed. State Management will control the network request/release and it must be clarified if user data changes/indications shall be done via State Management or directly by applications.

The Adaptive Network Management does currently not support PNC Gateway. Refer to PRS NetworkManagementProtocol [3].

The Adaptive Network Management does not support CAN Network Management and therefore CAN Partial Networking is not supported.

4.2 Applicability to car domains

AUTOSAR Adaptive NM can be used for all car domains.

5 Dependencies to other Functional Clusters

This chapter defines the dependencies of this functional cluster to other functional clusters. AUTOSAR decided not to standardize interfaces which are exclusively used between functional clusters to allow efficient implementations which might depend e.g., on the used operating system. The goal of this chapter is to provide an informative guideline for the interactions between functional clusters without specifying syntactical details. This ensures compatibility between documents specifying different functional clusters and supports parallel implementation of different functional clusters. Details of internal interfaces are up to the platform provider. Additional internal interfaces, parameters, and return values can be added. A detailed technical architecture documentation of the overall AUTOSAR Adaptive Platform is provided in [4].

Section 5.1 "Provided Interfaces" lists the interfaces provided by `Network Management` to other Functional Clusters. Section 5.2 "Required Interfaces" lists the interfaces required by `Network Management`.

5.1 Provided Interfaces

This section provides an overview of the public interfaces provided by this functional cluster towards other functional clusters.

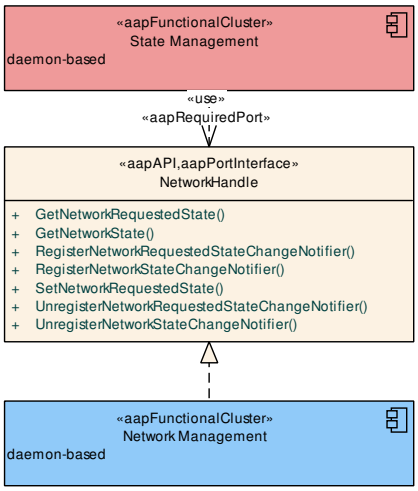


Figure 5.1: Interfaces provided by Network Management to other Functional Clusters

Figure 5.1 shows the interfaces provided by `Network Management` to other functional clusters within the AUTOSAR Adaptive Platform. Table 5.1 lists the interfaces provided to other functional clusters within the AUTOSAR Adaptive Platform and provides a rationale.

Interface	*Functional Cluster*	*Purpose*
`NetworkHandle`	State Management	This interface shall be used to retrieve information about the network status of a `NetworkHandle`.

Table 5.1: Interfaces provided to other Functional Clusters

5.2 Required Interfaces

This section provides an overview of the public interfaces required by this functional cluster from other functional clusters.

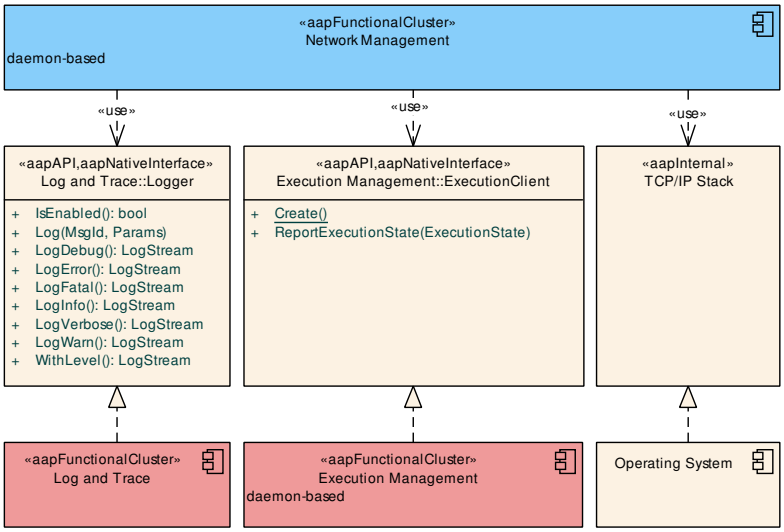


Figure 5.2: Interfaces required by Network Management from other Functional Clusters

Figure 5.2 shows the interfaces required by `Network Management` from other functional clusters within the AUTOSAR Adaptive Platform. Table 5.2 lists the interfaces required from other functional clusters within the AUTOSAR Adaptive Platform and provides a rationale.

Functional Cluster	*Interface*	*Purpose*
Execution Management	ExecutionClient	`Network Management` uses this interface to report the state of its daemon processes.
Log and Trace	Logger	`Network Management` shall use this interface to log standardized messages.

Table 5.2: Interfaces required from other Functional Clusters

5.3 Protocol layer dependencies

The Adaptive Network Management is based on AUTOSAR Network Management Protocol [3].

Adaptive Network Management uses functionality of the underlying communication stack in order to send or receive `NM messages` on the physical networks.

6 Requirements Tracing

The following tables reference the requirements specified in the AUTOSAR RS General [5], and links to the fulfillment of these. Please note that if column “Satisfied by” is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[RS_AP_00119]	Return values / application errors	[SWS_ANM_01105] [SWS_ANM_01106] [SWS_ANM_01107] [SWS_ANM_01109] [SWS_ANM_01110]
[RS_AP_00120]	Method and Function names	[SWS_ANM_01102] [SWS_ANM_01105] [SWS_ANM_01106] [SWS_ANM_01107] [SWS_ANM_01108] [SWS_ANM_01109] [SWS_ANM_01110]
[RS_AP_00121]	Parameter names	[SWS_ANM_01102] [SWS_ANM_01107] [SWS_ANM_01108] [SWS_ANM_01110]
[RS_AP_00122]	Type names	[SWS_ANM_01100] [SWS_ANM_01101] [SWS_ANM_01103] [SWS_ANM_01104] [SWS_ANM_01111]
[RS_AP_00125]	Enumerator and constant names	[SWS_ANM_01111]
[RS_AP_00127]	Usage of ara::core types	[SWS_ANM_01100] [SWS_ANM_01101] [SWS_ANM_01111]
[RS_AP_00135]	Avoidance of shared ownership	[SWS_ANM_01102] [SWS_ANM_01110]
[RS_AP_00140]	Usage of "final specifier"	[SWS_ANM_01101]
[RS_AP_00149]	Error handling for non-initialized Functional Cluster	[SWS_ANM_01111]
[RS_AP_00159]	usage of “noexcept” specifier	[SWS_ANM_01102] [SWS_ANM_01105] [SWS_ANM_01106] [SWS_ANM_01107] [SWS_ANM_01109] [SWS_ANM_01110]
[RS_AP_00173]	InstanceSpecifierAlreadyInUse Violation	[SWS_ANM_01001]
[RS_AP_00177]	AraNotInitializedViolation	[SWS_ANM_01001]
[RS_AP_00180]	UnresolvableInstanceSpecifier Violation	[SWS_ANM_01001]

Table 6.1: Requirements Tracing

7 Functional specification

The Adaptive Network Management offers services that allows to request and query the network states for logical network handles that can be mapped to physical or partial networks.

To do so, the following functionalities are provided:

1. Interfaces for requesting and releasing logical network handles
2. Support for partial networking

7.1 Architectural Overview

Figure 7.1 gives an overview of the Adaptive NM service.

The following figure shows an overview on the interaction between [6] and Network Management as well as an example mapping between logical networks, partial networks and physical networks.

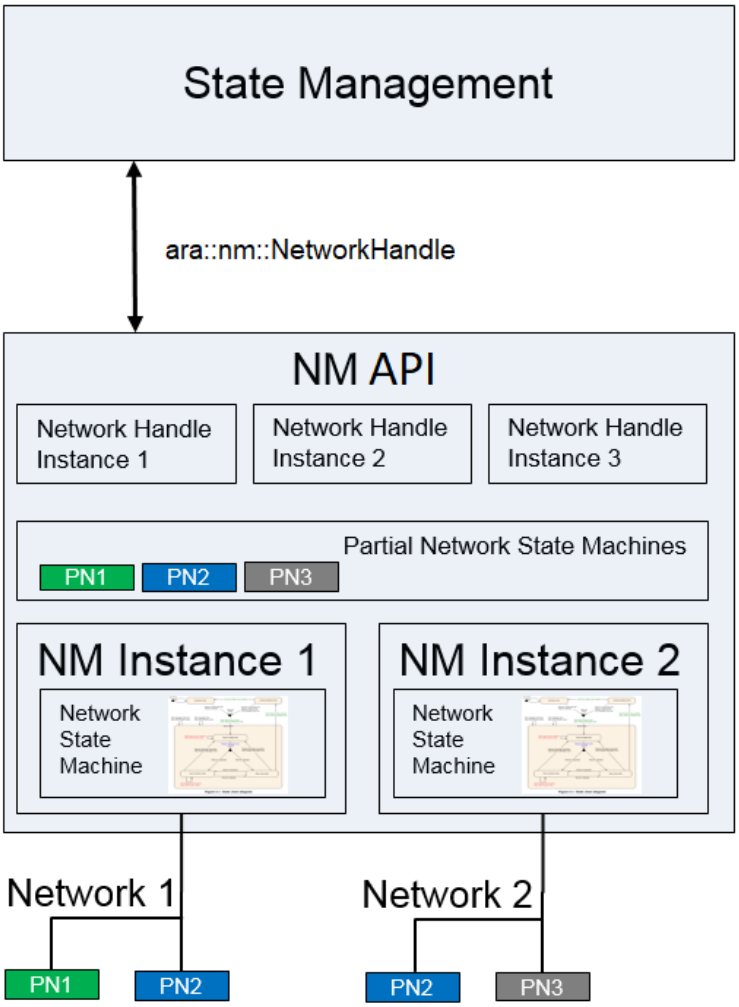


Figure 7.1: Overview Of Network Management

7.2 Network Management Algorithm

The AUTOSAR Adaptive NM is based on decentralized direct network management strategy, which means that every network node performs activities self-sufficient depending only on the NM messages received and/or transmitted within the communication system.

The AUTOSAR Adaptive NM algorithm is based on periodic NM messages, which are received by all nodes in the cluster via multicast. Reception of NM messages indicates that sending nodes want to keep the NM cluster awake. If any node does not have internal network request it stops sending NM messages and transitions to ready sleep state, but as long as NM messages from other nodes are received, it postpones transition to prepare bus sleep mode. Finally, if a dedicated timer elapses because no NM messages are received anymore, the node initiates transition to bus sleep mode.

If any node in the NM cluster requires bus-communication, it can keep the NM cluster awake by transmitting NM messages.

The main concept of the AUTOSAR Adaptive NM coordination algorithm as described in [3] can be summarized by the following key-behavior:

Every network node transmits periodic NM messages as long as it requires bus-communication; otherwise it does not transmit NM messages.

7.3 NetworkControl

Logical network handles are a mapped to one or more partial or physical networks, while a partial network itself can be mapped to one or multiple physical networks. By using the logical network handle all assigned partial networks, VLANs and underlying physical channel(s) are controlled together.

With the introduction of the State Management functional cluster, Network Management no longer receives logical network requests from applications, instead they are controlled by the State Management. State Management can split the one or more applications in multiple functions that might require network communication. Applications (or part of) would then request different functions to be activated/deactivated from State Management and then State Management would in turn, depending on configuration, request/release different logical networks. NM then checks the requested state over all logical networks handles and will activate or deactivate the according physical networks.

[SWS_ANM_00063] ⌈Each port offered by NM shall enable control of one logical NmNetworkHandle which in turn can be mapped to PNC/VLAN/physical channel.⌋

Note: In the Manifest the untagged VLAN represents the physical ethernet channel.

[SWS_ANM_00066] ⌈Each logical NmNetworkHandle shall be mapped to PNC(via PncMappingIdent) and/or VLANs (via EthernetCommunicationConnector), see also [SWS_ANM_CONSTR_00002].⌋

[SWS_ANM_00067] ⌈If partial networking is used a mapping between partial network(s) and EthernetCommunicationConnector shall be configured in PncMapping.⌋

Note: One Partial Network can be mapped to several VLAN(s).

[SWS_ANM_00083] ⌈The return value of the ara::nm::NetworkHandle::GetNetworkState shall be kFullCom, if all PNCs, VLANs and/or physical channels associated to this instance of NmNetworkHandle are in FULL_COM. Otherwise the value shall be kNoCom.⌋

Note: The consequence of [SWS_ANM_00083] is, that a lowest wins strategy is applied.

[SWS_ANM_00084] ⌈If ara::nm::NetworkHandle::SetNetworkRequestedState is called with kFullCom, the Network Management shall consider each PNC, VLAN and/or physical channel associated with the instance of NmNetworkHandle as internally requested.⌋

Note: The consequence of [SWS_ANM_00084] is, that a highest wins strategy is applied, that means that if in any instance of NmNetworkHandle the network requested state is set to FULL_COM (via ara::nm::NetworkHandle::SetNetwork-

RequestedState is called with kFullCom), the target state of the associated PNC(s) is AP_NM_PNC_REQUESTED and the target state of the associated VLAN/channel(s) is Network Mode, substate Normal Operation State.

[SWS_ANM_00085] ⌈Network Management shall bring (or keep) all PNCs/VLAN/physical channels to FULL_COM that are either internally requested or externally requested.⌋

Note: It is expected that a PNC gateway in the overall vehicle network will keep all the mapped channels of PNC FULL_COM even though internal request is released.

[SWS_ANM_00086] ⌈Network state change of ara::nm::NetworkHandle shall result in a call of the registered change notification via ara::nm::NetworkHandle::RegisterNetworkStateChangeNotifier or via ara::nm::NetworkHandle::RegisterNetworkStateChangeNotifier using an execution context executor. If the notification is registerd via ara::nm::NetworkHandle::RegisterNetwork-StateChangeNotifier using an execution context executor, the call shall be done in the context of the passed executor.⌋

[SWS_ANM_02116] Internally requested physical channel ⌈A physical channel/VLAN shall be considered internally requested if at least one of the following conditions is true:

- At least one NmNetworkHandle that directly maps the channel/VLAN has been set to kFullCom via ara::nm::NetworkHandle::SetNetwork-RequestedState.
- At least one PNC mapped to this channel/VLAN (via PncMapping) has its PNC state machine in state AP_NM_PNC_REQUESTED.

A physical channel/VLAN shall be considered released when none of the above conditions hold.⌋

[SWS_ANM_00087] Handling of external wake-up ⌈Upon detection of of an external wake-up, FULL_COM shall be the target state for the corresponding channel(s). If Network Management is configured for that channel, the target state shall be Network Mode, with the default initial sub state Repeat Message.⌋

Note: Its up to the Platfrom Implementation how an external wake-up event is detected.

[SWS_ANM_00088] Default target state after start-up ⌈The default target state after start up for channels for which no external wake-up has been detected shall be NO_COM.⌋

7.4 Operational Modes

This chapter describes the operational modes of the AUTOSAR Adaptive NM.

[SWS_ANM_00062] ⌈NM shall realize the state machine mentioned in [SWS_ANM_91002] for every physical channel (EthernetCommunicationConnector) separately.⌋

The Network Management contains three operational modes:

- Network Mode, see 7.4.1
- Prepare Bus-Sleep Mode, see 7.4.2
- Bus-Sleep Mode, see 7.4.3


These modes will not be visible to the Adaptive Application as it is.

When the NM is in Network mode it implies that the network is requested or active. And the logical network information bit will be set to 1.

When the NM is in Prepare Bus-Sleep or Bus-Sleep Mode, It implies that the network is released or inactive. And the logical network information bit will be set to 0.

The following figure shows the state diagram. Mode change related transitions are denoted in green and error handling related transmissions in red.

[SWS_ANM_91002] State Chart Diagram ⌈

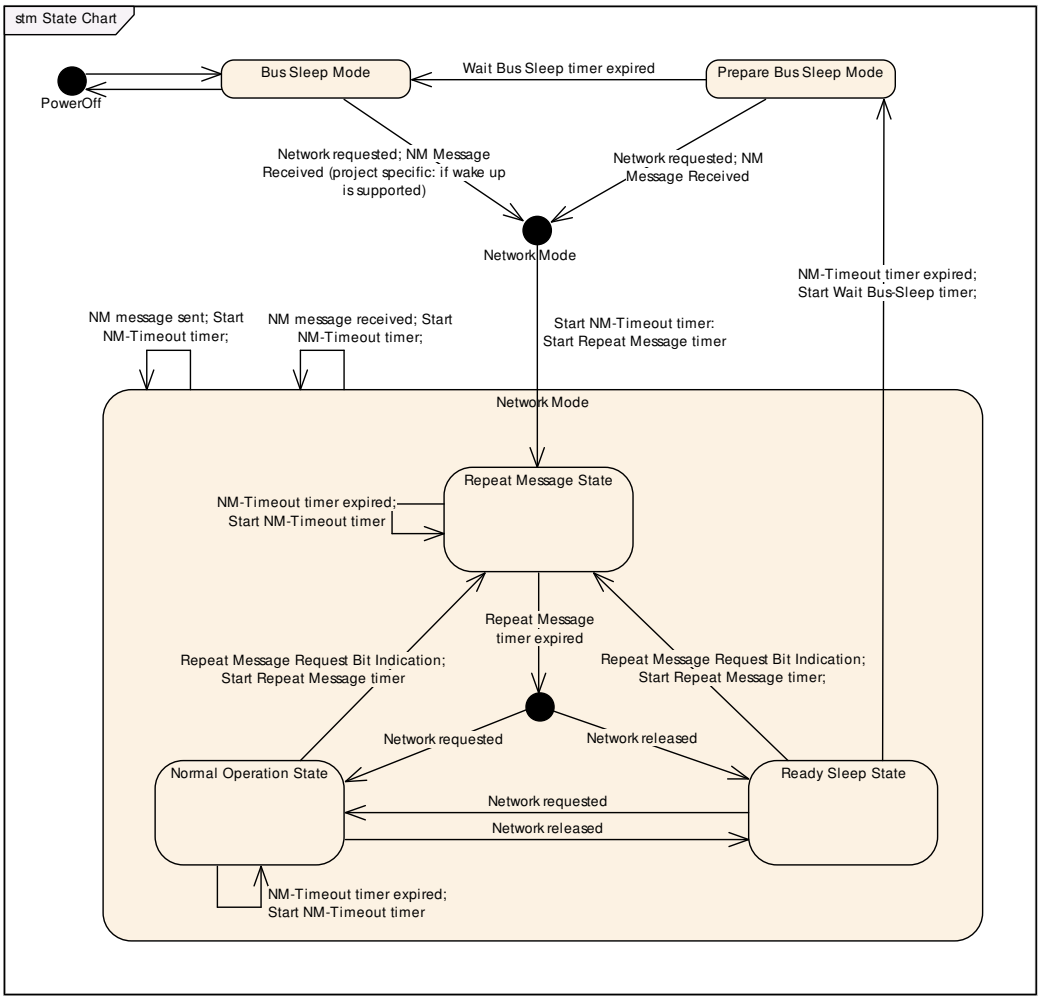

⌋

7.4.1 Network Mode

[SWS_ANM_00005] ⌈The Network Mode shall consist of three internal states:

- Repeat Message State
- Normal Operation State
- Ready Sleep State

⌋

For more information check the following chapters:

- Repeat Message State, see 7.4.1.1
- Normal Operation State, see 7.4.1.2

- Ready Sleep State, see 7.4.1.3

[SWS_ANM_00006] ⌈When the Network Mode is entered from Bus-Sleep Mode or Prepare Bus-Sleep Mode, by default, the Repeat Message State shall be entered.⌋

[SWS_ANM_00007] ⌈When the Network Mode is entered, the NM-Timeout Timer shall be started with the value `nmNetworkTimeout`.⌋

[SWS_ANM_00008] ⌈Upon successful reception of a `NM message` in Network Mode, the NM-Timeout Timer shall be restarted with the value `nmNetworkTimeout`.⌋

[SWS_ANM_00009] ⌈Upon successful transmission of a `NM message` in Network Mode, the NM-Timeout Timer shall be restarted with the value `nmNetworkTimeout`.⌋

7.4.1.1 Repeat Message State

The Repeat Message State ensures, that any transition from Bus-Sleep or Prepare Bus-Sleep to the Network Mode becomes visible for the other nodes on the network. Additionally, it ensures that any node stays active for a minimum amount of time.

[SWS_ANM_00011] ⌈When the Repeat Message State of Network Mode is entered from Bus-Sleep Mode, Prepare-Bus-Sleep Mode or from within Network Mode (Normal Operation State or Ready Sleep State) transmission of `NM message`s shall be (re-) started.⌋

[SWS_ANM_00012] ⌈When the NM-Timeout Timer expires in the Repeat Message State, the NM-Timeout Timer shall be restarted.⌋

[SWS_ANM_00013] ⌈The `NM` shall stay in the Repeat Message State for a configurable amount of time determined by the `nmRepeatMessageTime`; after that time the Repeat Message State shall be left.⌋

[SWS_ANM_00014] ⌈When Repeat Message State is left, the Normal Operation State shall be entered, if the physical channel/`VLAN` is internally requested (see [SWS_ANM_02116]).⌋

[SWS_ANM_00015] ⌈When Repeat Message State is left, the Ready Sleep State shall be entered, if the network physical channel/`VLAN` is not internally requested (see [SWS_ANM_02116]).⌋

[SWS_ANM_00070] ⌈The Repeat Message State of Network Mode is entered from Bus-Sleep Mode or Prepare-Bus-Sleep Mode by default, when the physical channel becomes `internally requested` (see [SWS_ANM_02116]) and the `NM` module shall transmit a `NM message` immediately.⌋

Note: If in Ready Sleep State, Normal Operation State or Repeat Message State and `nmPnHandleMultipleNetworkRequests` is set to true and the requested state

of the channel/VLAN or an associated PNC changes, Repeat Message State is (re-)entered. (see also [PRS_Nm_00507])

7.4.1.2 Normal Operation State

The Normal Operation State ensures that any node can keep the NM cluster awake as long as the network functionality is required.

[SWS_ANM_00016] ⌈When the Normal Operation State is entered from Ready Sleep State, transmission of NM messages shall be started immediately.⌋

[SWS_ANM_00017] ⌈When the NM-Timeout Timer expires in the Normal Operation State, the NM-Timeout Timer shall be restarted.⌋

[SWS_ANM_00018] ⌈When the network is released and the current state is Normal Operation State, the Normal Operation State shall be left and the Ready Sleep state shall be entered.⌋

[SWS_ANM_00019] ⌈If Repeat Message Request Bit (set in the CBV of the received NM message) is received in the Normal Operation State, the Normal Operation State shall be left and the Repeat Message State shall be entered.⌋

7.4.1.3 Ready Sleep State

The Ready Sleep State ensures that any node in the NM cluster waits with the transition to the Prepare Bus-Sleep Mode as long as any other node keeps the NM cluster awake.

[SWS_ANM_00020] ⌈When the Ready Sleep State is entered from Repeat Message State or Normal Operation State, transmission of NM messages shall be stopped.⌋

[SWS_ANM_00021] ⌈When the NM-Timeout Timer expires in the Ready Sleep State, the Ready Sleep State shall be left and the Prepare Bus-Sleep Mode shall be entered.⌋

[SWS_ANM_00022] ⌈When the physical channel becomes internally requested (see [SWS_ANM_02116]) and the current state is the Ready Sleep State, the Ready Sleep State shall be left and the Normal Operation State shall be entered.⌋

[SWS_ANM_00023] ⌈If Repeat Message Request Bit (set in the CBV of the received NM message) is received in the Ready Sleep State, the Ready Sleep State shall be left and the Repeat Message State shall be entered.⌋

Note: Handling of multiple transition conditions which might arise at the same time (e.g. NM-Timeout timer expires vs. network is requested) is considered to be implementation-specific.

7.4.2 Prepare Bus-Sleep Mode

The purpose of the Prepare Bus Sleep state is to ensure that all nodes have time to stop their network activity before the Bus Sleep state is entered. Bus activity is calmed down (i.e. queued messages are transmitted in order to empty all TX-buffers) and finally there is no activity on the bus in the Prepare Bus-Sleep Mode.

[SWS_ANM_00024] ⌈The NM shall stay in the Prepare Bus-Sleep Mode for an amount of time determined by the nmWaitBusSleepTime; after that time, the Prepare Bus-Sleep Mode shall be left and the Bus-Sleep Mode shall be entered.⌋

[SWS_ANM_00025] ⌈Upon successful reception of a NM message in the Prepare Bus-Sleep Mode, the Prepare Bus-Sleep Mode shall be left and the Network Mode shall be entered; by default, the Repeat Message State is entered.⌋

Rationale: Other nodes in the cluster are still in Prepare Bus-Sleep Mode; in the exceptional situation described above, transition into the Bus-Sleep Mode shall be avoided and bus-communication shall be restored as fast as possible.

7.4.3 Bus-Sleep Mode

The purpose of the Bus-Sleep state is to reduce power consumption in the node, when no messages are to be exchanged. Transmission and reception capabilities can be switched off if supported by hardware.

If a configurable amount of time determined by nmNetworkTimeout + nmWaitBus-SleepTime is identically configured for all nodes in the NM cluster, all nodes in the NM cluster that are coordinated with use of the AUTOSAR NM algorithm perform the transition into the Bus-Sleep Mode at approximately the same time.

[SWS_ANM_00029] ⌈In Bus-Sleep Mode the return value of the corresponding ara::nm::NetworkHandle::GetNetworkState are kNoCom (see also [SWS_ANM_00083]).⌋

Note: Reception of a message during bus sleep (if receiving capability is not switched off) is not explicitly handled in this specification as for example wake-up is considered project specific.

Note: In Bus-Sleep Mode, it is assumed that all nodes in a cluster are in this state. Typically, all nodes request the communication approximately at the same time by a common trigger, for instance a wake-up line.

7.5 NM Message Format

Message Layout is shown in [3].

Note: As mentioned in [3], the length of an NM message shall not exceed the MTU of the underlying physical transport layer.

7.5.1 Source Node Identifier

[SWS_ANM_00033] ⌈The location of the source node identifier shall be taken from nmNidPosition. If nmNidPosition is not set, NID shall not be contained in the NM messages (see [PRS_Nm_00074]).⌋

[SWS_ANM_00034] ⌈The source node identifier shall be set with configurable NodeId value nmNodeId unless the location of the source node identifier is set to Off (see [PRS_Nm_00013]).⌋

7.5.2 Control Bit Vector

The format (bit-layout) and definition of the CBV is described in [3].

[SWS_ANM_00035] ⌈The location of the Control Bit Vector shall be configurable using nmCbvPosition. If nmCbvPosition is not set, CBV shall not be contained in the NM messages (see [PRS_Nm_00075]).⌋

[SWS_ANM_00037] ⌈Repeat Message Request Bit shall always be set to 0 in the transmitted NM message.⌋

[SWS_ANM_00038] ⌈Active wake-up Bit shall always be set to 0 in the transmitted NM message.⌋

[SWS_ANM_00071] ⌈NM Coordinator Sleep Ready Bit shall always be set to 0 in the transmitted NM message.⌋

[SWS_ANM_00091] ⌈Partial Network Learning Bit (PNL) shall always be set to 0 in the transmitted NM message.⌋

7.5.3 NM User Data

[SWS_ANM_00040] ⌈If NM user data is configured (i.e. nmUserDataLength is existing with a value greater than 0) it shall be always included in the NM message (see [PRS_Nm_00158]).⌋

Note: the range (in bytes) that contains the user data in the received NM message is defined by nmUserDataLength.

Note: UserData does not include the PNI in case the Partial Networking is active. Received and Transmitted UserData does not overlap with the PNI.

[SWS_ANM_00095] ⌈If nmUserDataLength is existing with a value greater than 0 and no data is provided by the application then the NM shall set the user data to 0 before sending the NM message.⌋

Note: Currently there is no standardized API to get/set user data.

7.6 Nm Transmission

7.6.1 Transmission Scheduling

Note: The periodic transmission mode is used in the "Repeat Message State" and "Normal Operation State". When entering "Repeat Message State" or "Normal Operation State", the periodic transmission of NM messages must be started (see [PRS_Nm_00237]).

Note: If the Repeat Message State is entered ([SWS_ANM_00070]), the transmission of NM message is delayed by nmMsgCycleOffset after entering the Repeat Message State. (see also [PRS_Nm_00005])

Note: If transmission of NM messages has been started and the NM message Cycle Timer expires, a NM message transmission is initiated. (see also [PRS_Nm_00237])

Note: If the NM message Cycle Timer expires, it is restarted with nmMsgCycleTime.(see also [PRS_Nm_00237])

Note: Upon an active network request (by calling ara::nm::NetworkHandle::SetNetworkRequestedState with kFullCom) immediate NM messages are sent according to PRS_Nm_00334 using:

- nmImmediateNmCycleTime as NmImmediateNmCycleTime and
- nmImmediateNmTransmissions as NmImmediateNmTransmissions


7.7 Nm User Data Handling

Note: Although contained in the underlying Protocol Specification [3] currently no use case is seen for user data.

7.8 Partial Networking

7.8.1 Partial Network State Machine

[SWS_ANM_02115] Partial Network State Chart Diagram ⌈

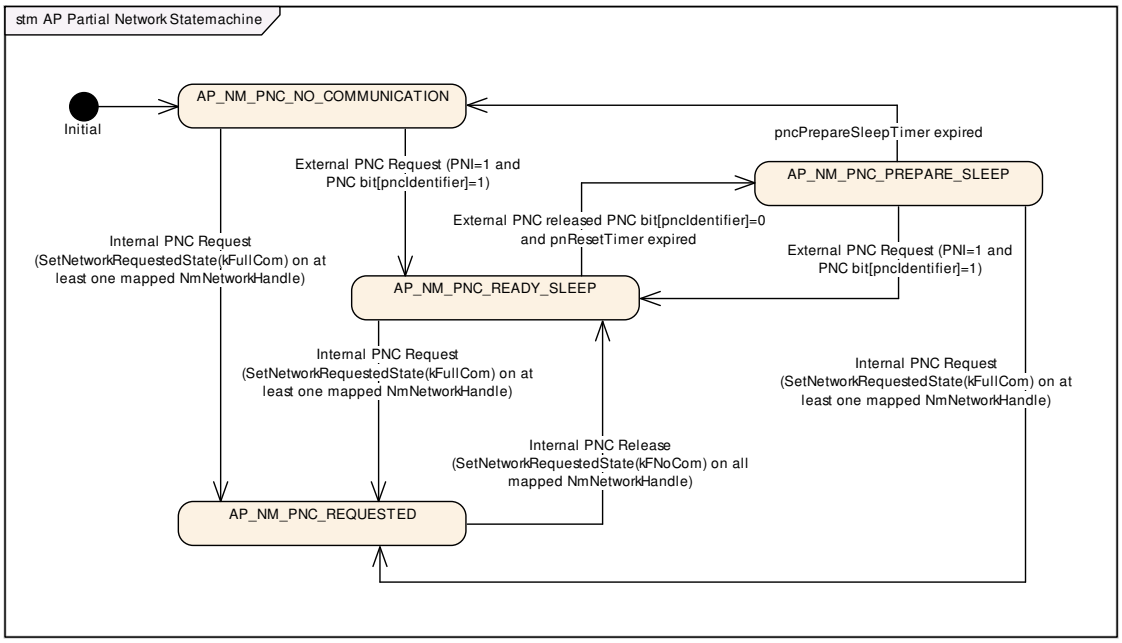

⌋

[SWS_ANM_02101] One state machine per partial network ⌈NM shall instantiate one PNC state machine per partial network configured via PncMappingIdent.⌋

[SWS_ANM_02102] States of the PNC state machine ⌈The PNC state machine shall comprise the following states:

- AP_NM_PNC_NO_COMMUNICATION
- AP_NM_PNC_REQUESTED
- AP_NM_PNC_READY_SLEEP
- AP_NM_PNC_PREPARE_SLEEP

⌋

[SWS_ANM_02103] Initial state after initialization ⌈After initialization, the PNC state machine shall be in state AP_NM_PNC_NO_COMMUNICATION.⌋

[SWS_ANM_02104] Internal request while in no communication ⌈If the PNC state machine is in AP_NM_PNC_NO_COMMUNICATION and ara::nm::NetworkHandle::SetNetworkRequestedState is called with kFullCom on at least one NmNetworkHandle mapped to this PNC, NM shall transition the PNC state machine to AP_NM_PNC_REQUESTED.⌋

[SWS_ANM_02105] External request while in no communication ⌈If the PNC state machine is in state AP_NM_PNC_NO_COMMUNICATION and the bit at the position identified by pncIdentifier in the PNC Request Bit Vector of a received NM message is set to 1 (see [SWS_ANM_02201]), the NM shall transition the PNC state machine to state AP_NM_PNC_READY_SLEEP.⌋

Note: No channel action is required on this transition. The physical channel on which the NM message was received is already in Network Mode due to NM message reception.

[SWS_ANM_02106] Release of all internal requests ⌈If the PNC state machine is in AP_NM_PNC_REQUESTED and ara::nm::NetworkHandle::SetNetworkRequestedState has been called with kNoCom on all NmNetworkHandle instances mapped to this PNC, NM shall transition the PNC state machine to AP_NM_PNC_READY_SLEEP.⌋

[SWS_ANM_02107] Internal request while in ready sleep ⌈If the PNC state machine is in AP_NM_PNC_READY_SLEEP and ara::nm::NetworkHandle::SetNetworkRequestedState is called with kFullCom on at least one NmNetworkHandle mapped to this PNC, NM shall transition the PNC state machine to AP_NM_PNC_REQUESTED.⌋

[SWS_ANM_02108] Expiry of the external request ⌈If the PNC state machine is in AP_NM_PNC_READY_SLEEP and the external PNC request is no longer active, i.e. the bit at the position identified by pncIdentifier is no longer set in any received NM message and pnResetTimer has expired (see [SWS_ANM_02202]), NM shall transition the PNC state machine to AP_NM_PNC_PREPARE_SLEEP.⌋

[SWS_ANM_02109] Start of the prepare sleep timer ⌈Upon entry into AP_NM_PNC_PREPARE_SLEEP, NM shall start pncPrepareSleepTimer.⌋

[SWS_ANM_02110] Expiry of the prepare sleep timer ⌈If the PNC state machine is in AP_NM_PNC_PREPARE_SLEEP and pncPrepareSleepTimer expires, NM shall transition the PNC state machine to AP_NM_PNC_NO_COMMUNICATION.⌋

[SWS_ANM_02111] Internal request while in prepare sleep ⌈If the PNC state machine is in AP_NM_PNC_PREPARE_SLEEP and ara::nm::NetworkHandle::SetNetworkRequestedState is called with kFullCom on at least one

NmNetworkHandle mapped to this PNC, NM shall stop pncPrepareSleepTimer and transition to AP_NM_PNC_REQUESTED.⌋

[SWS_ANM_02112] External request while in prepare sleep ⌈If the PNC state machine is in AP_NM_PNC_PREPARE_SLEEP and the bit at the position identified by pncIdentifier in the PNC Request Bit Vector of a received NM message is set to 1 (see [SWS_ANM_02201]), NM shall stop pncPrepareSleepTimer and transition to AP_NM_PNC_READY_SLEEP.⌋

[SWS_ANM_02113] Channel request upon entry into requested ⌈Upon entry into state AP_NM_PNC_REQUESTED, NM shall place an internal request on each physical channel mapped to this PNC as configured in PncMapping. This request shall be tracked per PNC. The channel shall enter or remain in Network Mode, substate Normal Operation State.⌋

[SWS_ANM_02114] Channel release upon leaving requested ⌈Upon transition from state AP_NM_PNC_REQUESTED to state AP_NM_PNC_READY_SLEEP, NM shall release the internal request that was placed on each mapped physical channel due to this PNC. If, after this release, a physical channel has no remaining internal requests from any source (PNC or direct NmNetworkHandle), the channel shall transition to substate Ready Sleep State.⌋

7.8.2 Rx Handling of NM messages

Note : Reception Handling of PNC Request Bit Vector as described in [3] is switched on/off by NmCluster.nmPncParticipation

[SWS_ANM_00051] ⌈If nmPncParticipation is TRUE and the PNI bit in the received NM message is 1, the NM shall consider this messages as relevant to update the internal states. Otherwise the message is ignored.⌋

[SWS_ANM_00052] ⌈If nmPncParticipation is set to TRUE and the PNI bit in the received NM message is 0, NM shall still process the user data information.⌋

[SWS_ANM_00053] ⌈The reset time value PnResetTime shall be configured by pnResetTimer.⌋

[SWS_ANM_00056] ⌈pnResetTimer shall be configured to a value greater than nmMsgCycleTime.⌋

[SWS_ANM_02201] Restart of the reset timer on external request ⌈If nmPncParticipation is TRUE, the PNI bit in a received NM message is 1, and the bit at the position identified by pncIdentifier within the PNC Request Bit Vector is set to 1, NM shall (re)start pnResetTimer for the corresponding PNC.⌋

[SWS_ANM_02202] Expiry of the reset timer ⌈When pnResetTimer expires for a PNC without having been restarted, NM shall consider the PNC is no longer externally requested.⌋

7.8.3 Tx Handling of NM messages

[SWS_ANM_00054] ⌈nmPncParticipation shall enable/disable the reception and transmission of PNI.⌋

Note: The usage of the CBV is mandatory in case Partial Networking is used. This has to be ensured by configuration in the respective platform.

[SWS_ANM_02301] Transmission of the PNC request bit ⌈If nmPncParticipation is TRUE, NM shall set the bit at the position identified by pncIdentifier in the transmitted PNC Request Bit Vector to 1 when the corresponding PNC state machine is in AP_NM_PNC_REQUESTED, and to 0 otherwise.⌋

Note: In AP_NM_PNC_READY_SLEEP the PNC can remain in FULL_COM due to an external request from other nodes, but this ECU has no internal request and therefore does not set the PNC bit in its transmitted NM message.

7.8.4 NM message Filter Algorithm

[SWS_ANM_00055] ⌈The range (in bytes) that contains the Partial Network request information (PNC Request Bit Vector) in the received NM message shall be defined by PNC Request Bit Vector offset (pncVectorOffset) starting from byte 0 and PNC Request Bit Vector length (pncVectorLength).⌋

Example:

- PNC Request Bit Vector Offset = 3
- PNC Request Bit Vector Length = 2

	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 0	Control Bit Vector (default)							
Byte 1	User data 0							
Byte 2	User data 1							
Byte 3	PNC Request Bit Vector 0							
Byte 4	PNC Request Bit Vector 1							

Table 7.1: NM message layout example

In the above example only Byte 3 and Byte 4 of the NM message contain Partial Network request information.

Note: Every bit of the PNC Request Bit Vector represents one Partial Network. If the bit is set to 1 the Partial Network is requested. If the bit is set to 0 there is no request for this Partial Network.

[SWS_ANM_00081] ⌈The NM shall filter out messages containing Partial Network request information if they do not contain at least one bit set to 1 that corresponds to a Partial Network that is configured in an NmNetworkHandle and UdpNmNode.allNmMessagesKeepAwake is FALSE.⌋

Note: When activated the NM message Filter Algorithm will filter out any NM message not containing at least one relevant Partial Network being requested (its Bit in the PNC Request Bit Vector set to 1).

[SWS_ANM_00089] **UdpNmNode.allNmMessagesKeepAwake** ⌈If no relevant Partial Network is requested in the received NM message and allNmMessagesKeepAwake is TRUE the Message shall not be filtered out from further Rx Indication handling.⌋

Note: This is required to enable the ECU to stay awake on any kind of NM message.

7.9 Functional Cluster Lifecycle

This section defines behavior of this functional cluster during its life-cycle. Please note that there is a general behavior for ara::core::Initialize and ara::core::Deinitialize defined in [7] by [SWS_CORE_15005] and [SWS_CORE_90022].

7.9.1 Startup

No special startup handling needed for Network Management. The environment is expected to take care that Network Management is running and able to serve communication requests as soon as network communication is needed. If and how the NM is actually start up in advance depends on platform constraints like e.g. fast (re-)start etc.

[SWS_ANM_00099] Initial request state after startup ⌈After startup, the Network Request State shall be initialized to kNoCom.⌋

7.9.2 Shutdown

[SWS_ANM_00090] Communication Shutdown ⌈When a SIGTERM is received by NM, any active Network Requests via ara::nm::NetworkHandle::SetNetwork-RequestedState shall be withdrawn and ara::nm::NetworkHandle::Get-NetworkState shall return kNoCom until process termination.⌋

Note: The NetworkHardware might be shutdown afterwards. It is assumed that State-Management takes care that no shutdown is initiated while Network Communication is still needed and that active Network Requests during shutdown are an exceptional situation.

7.9.3 Daemon connection lost

If the application library detects a loss of connection to the NM daemon process, it shall recover automatically and continue operation without requiring dedicated recovery handling in the application.

Note: The requirements in this subsection apply only to implementations that use an NM daemon process.

[SWS_ANM_00096] Automatic reconnect after connection loss ⌈After detecting a loss of connection to the NM daemon process, the application library shall automatically attempt to re-establish the connection.⌋

[SWS_ANM_00097] Re-register notifier callbacks after reconnect ⌈After re-establishing the connection to the NM daemon process following a connection loss, the application library shall re-register in this daemon process all cur-

rently active notifier callbacks, e.g. callbacks registered via `ara::nm::NetworkHandle::RegisterNetworkStateChangeNotifier` and `ara::nm::NetworkHandle::RegisterNetworkRequestedStateChangeNotifier`.⌋

[SWS_ANM_00098] Request state resynchronization after reconnect ⌈After re-establishing the connection to the `NM` daemon process following a connection loss, the `application library` shall automatically re-synchronize the `Network Request State` currently set by `ara::nm::NetworkHandle::SetNetworkRequestedState` with this daemon process. During this automatic re-synchronization, `ara::nm::NetworkHandle::RegisterNetworkRequestedStateChangeNotifier` shall not be invoked, since for the application no requested-state change has happened.⌋

Example: After re-establishing the connection, the daemon process may report state `kNoCom` (as defined by [SWS_ANM_00099]), while the last successfully set `Network Request State` in the application before the connection loss was `kFullCom`. In this case, the library automatically synchronizes the daemon process to the currently requested state so that the application does not need to handle this mismatch explicitly.

[SWS_ANM_00100] Active network request during daemon connection loss ⌈If `ara::nm::NetworkHandle::SetNetworkRequestedState` is called while the connection to the `NM` daemon process is lost, the call shall return `kServiceNotAvailable` and the application shall implement an appropriate error strategy.⌋

Note: Since the `Network Request State` of the application can no longer be considered up-to-date after a connection loss, the application must actively manage the situation. This is particularly relevant in the case of a permanent daemon failure or adverse environmental conditions, where the ECU may need to enter a sleep or low-power mode even if an active network request was previously set. In such cases, relying on the stale requested state would prevent necessary energy-saving shutdowns. The application is therefore responsible for deciding whether to retry the request, release the network, or take other appropriate action based on its knowledge of the system context.

7.10 Reporting

7.10.1 Security Events

This functional cluster does not define any security events.

7.10.2 Log Messages

This functional cluster does not define any non-verbose log messages (i.e., modelled DLT messages).

7.10.3 Violation Messages

This section lists all violation messages (i.e., DLT messages logged for Violations according to [AP_SWS_GENERAL_00021]) defined by this functional cluster.
Please note that concrete implementations might additionally implement Non-Standardized Violations (see also [AP_SWS_GENERAL_00003]).

[AP_SWS_GENERAL_13215] Violation Message UnresolvableInstanceSpecifier Violation

Dlt-Message	UnresolvableInstanceSpecifierViolation		
Description	InstanceSpecifier either cannot be resolved in the model in the context of your executable or process, or it refers to a model element that is neither a PortPrototype of the expected type nor a FunctionalCluster InteractsWithFunctionalClusterMapping of the expected type.		
MessageId	0x80001fe8		
MessageType Info	DLT_LOG_FATAL		
Dlt-Argument	***ArgumentDescription***	***ArgumentType***	***ArgumentUnit***
modeledProcess Id	Meta-model identifier of the process that caused the violation, i.e., its short name path with '/' as a separator	uint8 [encoding UTF-8]	
location	An implementation-defined identifier of the location where the violation was detected, for example {Class Name}:{MethodName}, {filename}:{linenumber}, etc.	uint8 [encoding UTF-8]	
instanceSpecifier	InstanceSpecifier used to try to create the object.	uint8 [encoding UTF-8]	
className	Name of the class that was instantiated.	uint8 [encoding UTF-8]	

[AP_SWS_GENERAL_13006] Violation Message InstanceSpecifierAlreadyInUse Violation

Dlt-Message	InstanceSpecifierAlreadyInUseViolation		
Description	Violation message that is sent in case a constructor in the ara framework was called with an Instance Specifier already in use in this process.		
MessageId	0x80001ff9		
MessageType Info	DLT_LOG_FATAL		
Dlt-Argument	***ArgumentDescription***	***ArgumentType***	***ArgumentUnit***
modeledProcess Id	Meta-model identifier of the process that caused the violation, i.e., its short name path with '/' as a separator.	uint8 [encoding UTF-8]	
location	An implementation-defined identifier of the location where the violation was detected, for example {filename}:{linenumber}.	uint8 [encoding UTF-8]	
instanceSpecifier	InstanceSpecifier used to try to create the object.	uint8 [encoding UTF-8]	
className	Name of the class that was instantiated.	uint8 [encoding UTF-8]	

[AP_SWS_GENERAL_13007] Violation Message AraNotInitializedViolation

Dlt-Message	AraNotInitializedViolation
Description	Violation message that is sent in case a constructor or function checks for an initialized ara and identifies that ara is not initialized.

▽

△

MessageId	0x80001ff8		
MessageType Info	DLT_LOG_FATAL		
Dlt-Argument	***ArgumentDescription***	***ArgumentType***	***ArgumentUnit***
modeledProcessId	Meta-model identifier of the process that caused the violation, i.e., its short name path with '/' as a separator.	uint8 [encoding UTF-8]	
location	An implementation-defined identifier of the location where the violation was detected, for example {filename}:{linenumber}.	uint8 [encoding UTF-8]	
instanceSpecifier	InstanceSpecifier used to try to create the object. (only present in case this violation is created by a function/constructor that has an InstanceSpecifier as an argument)	uint8 [encoding UTF-8]	
functionName	Name of the function/constructor that was called that checks for an initialized ara.	uint8 [encoding UTF-8]	

7.10.4 Production Errors

This functional cluster does not define any production errors (i.e., Diagnostic Events).

8 API specification

This chapter provides a reference of the APIs defined by this functional cluster. The API is described in the following chapters in tables. Table 8.1 explains the content that is described in such an API table.

Kind:	Defines the kind of the declaration that this API table describes. The following values are supported: • class (Declaration of a class) • function (Declaration of a member or non-member function) • struct (Declaration of a structure) • type alias (Declaration of a type alias) • enumeration (Declaration of an enumeration) • variable (Declaration of a variable)	
Port Interfaces:	States that the C++ API `class` is the related C++ API binding for the given modeled sub-class of `PortInterface`	
Header File:	Defines the header file to be included according to [AP_SWS_GENERAL_90001]	
Forwarding Header File:	Defines the forwarding header file to be included according to [AP_SWS_GENERAL_90001]	
Scope:	Defines the scope that may be a C++ `namespace` (in case of a `class` or non-member function) or a `class` declaration (in case of a member)	
Symbol:	C++ symbol name	
Thread Safety:	Defines whether a function is thread-safe, not thread-safe, or conditional according to [AP_SWS_GENERAL_13200] and [AP_SWS_GENERAL_13202]	
Syntax:	Description of C++ syntax	
Template Param:	Template parameter (0..*)	Template parameter(s) used to parameterize the template
Parameters (in):	Parameter declaration (0..*)	Parameter(s) that are passed to the function
Parameters (out):	Parameter declaration (0..*)	Parameter(s) that are returned to the caller
Return Value:	Return type	Type of the value that the function returns
Exception Safety:	Defines whether a function is exception-safe, not exception safe or conditionally exception safe	
Exceptions:	List of C++ `Exception`s that may be thrown by the function	
Violations:	List of violations that may raised by the function	
Errors:	Error type (0..*)	List of defined `ara::core::ErrorCode`s that may be returned by the function with their recoverability class defined in [RS_AP_00160]. APIs can be extended with vendor-specific error codes. These are not standardized by AUTOSAR
Description:	Brief description of the function	

Table 8.1: Explanation of an API table

8.1 PortInterface to API class binding

This table shows the `API class` binding for each `PortInterface` owned by this functional cluster and those functions taking an `ara::core::InstanceSpecifier` argument, designated to “construct” that class. These constructing functions may be any combination of special-member constructors, named constructor members or non-member factory constructors.

Port Interface	API Class / Function
NetworkManagementPortInterface	[SWS_ANM_01000] Definition of API class ara::nm::NetworkHandle
	[SWS_ANM_01001] Definition of API function ara::nm::NetworkHandle::NetworkHandle

Table 8.2: PortInterface (sub-class) to API class / function binding

8.2 Header: ara/nm/network_handle.h

8.2.1 Class: NetworkHandle

[SWS_ANM_01000] Definition of API class ara::nm::NetworkHandle ⌈

Kind:	class
Port Interfaces:	NetworkManagementPortInterface
Header file:	#include "ara/nm/network_handle.h"
Forwarding header file:	#include "ara/nm/nm_fwd.h"
Scope:	namespace ara::nm
Symbol:	NetworkHandle
Syntax:	`class NetworkHandle final {...};`
Description:	Class NetworkHandle is the access to the network handle referenced by the `ara::core::InstanceSpecifier`. Provides information about network state per Network Handle. Intended to be only used by StateManagement

⌋

8.2.1.1 Public Member Types

[SWS_ANM_01020] Definition of API type ara::nm::NetworkHandle::NetworkStateChangeNotifier ⌈

Kind:	type alias
Header file:	#include "ara/nm/network_handle.h"
Scope:	`class ara::nm::NetworkHandle`
Symbol:	NetworkStateChangeNotifier
Syntax:	`using NetworkStateChangeNotifier = std::function<void(const NetworkStateType&)>;`
Thread Safety:	not thread-safe
Description:	A function wrapper for the handler function that gets called by the Communication Management software in case the network state has changed.

⌋

[SWS_ANM_01358] Definition of API enum ara::nm::NetworkHandle::NetworkStateType ⌈

Kind:	enumeration	
Header file:	#include "ara/nm/network_handle.h"	
Forwarding header file:	#include "ara/nm/nm_fwd.h"	
Scope:	`class ara::nm::NetworkHandle`	
Symbol:	NetworkStateType	
Underlying type:	std::uint32_t	
Syntax:	`enum class NetworkStateType : std::uint32_t {...};`	
Values:	kNoCom	= 0
		Not all PNCs, VLANs and/or physical channels associated to this instance of the NetworkState are in kFullCom.
	kFullCom	= 1
		All PNCs, VLANs and/or physical channels associated to this instance of the NetworkState are in kFullCom.
Description:	Enumeration of elementary supervision status.	

⌋

8.2.1.2 Public Member Functions

8.2.1.2.1 Special Member Functions

[SWS_ANM_01005] Definition of API function ara::nm::NetworkHandle::NetworkHandle ⌈

Kind:	function
Header file:	#include "ara/nm/network_handle.h"
Scope:	`class ara::nm::NetworkHandle`
Syntax:	`NetworkHandle (const NetworkHandle &)=delete;`
Description:	The copy constructor for NetworkHandle shall not be used.

⌋

[SWS_ANM_01003] Definition of API function ara::nm::NetworkHandle::NetworkHandle ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`NetworkHandle (NetworkHandle &&stbc) noexcept;`	
Parameters (in):	stbc	The NetworkHandle object to be moved.
Exception Safety:	exception safe	
Thread Safety:	implementation_defined	
Description:	Move constructor for NetworkHandle.	

⌋

[SWS_ANM_01006] Definition of API function ara::nm::NetworkHandle::operator= ⌈

Kind:	function
Header file:	#include "ara/nm/network_handle.h"
Scope:	`class ara::nm::NetworkHandle`
Syntax:	`NetworkHandle & operator= (const NetworkHandle &)=delete;`
Description:	The copy assignment operator for NetworkHandle shall not be used.

⌋

[SWS_ANM_01004] Definition of API function ara::nm::NetworkHandle::operator= ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`NetworkHandle & operator= (NetworkHandle &&stbc) & noexcept;`	
Parameters (in):	stbc	The NetworkHandle object to be moved.
Return value:	NetworkHandle &	The moved NetworkHandle object.
Exception Safety:	exception safe	
Thread Safety:	not thread-safe	
Description:	Move assignment operator for NetworkHandle.	

⌋

[SWS_ANM_01002] Definition of API function ara::nm::NetworkHandle::~NetworkHandle ⌈

Kind:	function
Header file:	#include "ara/nm/network_handle.h"
Scope:	`class ara::nm::NetworkHandle`
Syntax:	`~NetworkHandle () noexcept;`
Exception Safety:	exception safe
Thread Safety:	not thread-safe
Description:	NetworkHandle destructor

⌋

8.2.1.2.2 Constructors

[SWS_ANM_01001] Definition of API function ara::nm::NetworkHandle::NetworkHandle

Upstream requirements: RS_AP_00173, RS_AP_00177, RS_AP_00180

⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`explicit NetworkHandle (const ara::core::InstanceSpecifier &specifier) noexcept;`	
Parameters (in):	specifier	`ara::core::InstanceSpecifier` to a `PortPrototype` of a `NetworkManagementPortInterface`
Exception Safety:	exception safe	
Thread Safety:	thread-safe	
Violations:	`Unresolvable-InstanceSpecifier-Violation`	InstanceSpecifier either cannot be resolved in the model in the context of your executable or process, or it refers to a model element that is neither a PortPrototype of the expected type nor a FunctionalClusterInteractsWithFunctionalClusterMapping of the expected type.
	`InstanceSpecifier-AlreadyInUse-Violation`	Violation message that is sent in case a constructor in the ara framework was called with an InstanceSpecifier already in use in this process.
	`AraNotInitialized-Violation`	Violation message that is sent in case a constructor or function checks for an initialized ara and identifies that ara is not initialized.
Description:	NetworkHandle constructor	

⌋

8.2.1.2.3 Member Functions

[SWS_ANM_01008] Definition of API function ara::nm::NetworkHandle::GetNetworkRequestedState ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`ara::core::Result< NetworkStateType > GetNetworkRequestedState () const noexcept;`	
Return value:	ara::core::Result< NetworkStateType >	As per [SWS_ANM_01007]
Exception Safety:	exception safe	
Thread Safety:	thread-safe	
Errors:	NmErrc::kServiceNotAvailable	rollback_semantics
		The connection to the daemon is currently lost, so the application must implement an appropriate error strategy, such as taking over the previous NetworkState.

▽

△

Description:	Method to obtain the current network requested state i.e. if the PNC / VLAN / Physical Network is currently requested or released

⌋

[SWS_ANM_01007] Definition of API function ara::nm::NetworkHandle::GetNetworkState ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`ara::core::Result< NetworkStateType > GetNetworkState () const noexcept;`	
Return value:	ara::core::Result< NetworkStateType >	• If successful: an `ara::core::Result` containing a `ara::core::Result::value_type` containing a `ara::nm::NetworkHandle::NetworkStateType` indicating the network requested state of the corresponding PNC / VLAN / Physical Network • If unsuccessful: an `ara::core::Result` containing an `ara::core::Result::error_type` i.e. a corresponding `ara::nm::NmErrc`
Exception Safety:	exception safe	
Thread Safety:	thread-safe	
Errors:	NmErrc::kServiceNotAvailable	rollback_semantics The connection to the daemon is currently lost, so the application must implement an appropriate error strategy, such as taking over the previous NetworkState.
Description:	Method to obtain the current network state i.e. PNC / VLAN / Physical Network is currently active or not	

⌋

[SWS_ANM_01012] Definition of API function ara::nm::NetworkHandle::RegisterNetworkRequestedStateChangeNotifier ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`ara::core::Result< void > RegisterNetworkRequestedStateChangeNotifier (NetworkStateChangeNotifier notifier) noexcept;`	
Parameters (in):	notifier	The function to register
Return value:	ara::core::Result< void >	As per [SWS_ANM_01010]
Exception Safety:	exception safe	
Thread Safety:	not thread-safe	
Errors:	NmErrc::kInvalidHandler	rollback_semantics Provided Callable handler does not exist or is null
Description:	Register a notifier function which is called if the current network requested state is changed (i.e. changed into FullCom or into NoCom). A maximum of one notifier can be registered. Every further registration overwrites the current registration.	

⌋

[SWS_ANM_01014] Definition of API function ara::nm::NetworkHandle::RegisterNetworkRequestedStateChangeNotifier ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`template <typename ExecutorT> ara::core::Result< void > RegisterNetworkRequestedStateChangeNotifier (NetworkStateChangeNotifier notifier, ExecutorT &&executor) noexcept;`	
Template param:	ExecutorT	Context object type in which the asynchronous computation spawn shall be invoked.
Parameters (in):	notifier	As per notifier in [SWS_ANM_01012]
	executor	As per executor in [SWS_ANM_01015]
Return value:	ara::core::Result< void >	As per [SWS_ANM_01010]
Exception Safety:	exception safe	
Thread Safety:	not thread-safe	
Errors:	NmErrc::kInvalidHandler	rollback_semantics
		Provided Callable handler does not exist or is null
Description:	As per [SWS_ANM_01012] but the method shall execute in a provided context	

⌋

[SWS_ANM_01010] Definition of API function ara::nm::NetworkHandle::RegisterNetworkStateChangeNotifier ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`ara::core::Result< void > RegisterNetworkStateChangeNotifier (NetworkStateChangeNotifier notifier) noexcept;`	
Parameters (in):	notifier	The function to register. A maximum of one notifier can be registered. Every further registration overwrites the current registration.
Return value:	ara::core::Result< void >	• If successful: an `ara::core::Result` containing a `ara::core::Result::value_type` containing a `void` • If unsuccessful: an `ara::core::Result` containing an `ara::core::Result::error_type` i.e. a corresponding `ara::nm::NmErrc`
Exception Safety:	exception safe	
Thread Safety:	not thread-safe	
Errors:	NmErrc::kInvalidHandler	rollback_semantics
		Provided Callable handler does not exist or is null
Description:	Register a notifier function which is called if the current network state is changed (i.e. changed into FullCom or into NoCom).	

⌋

[SWS_ANM_01015] Definition of API function ara::nm::NetworkHandle::RegisterNetworkStateChangeNotifier ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`template <typename ExecutorT> ara::core::Result< void > RegisterNetworkStateChangeNotifier (NetworkStateChangeNotifier notifier, ExecutorT &&executor) noexcept;`	
Template param:	ExecutorT	Context object type in which the asynchronous computation spawn shall be invoked.
Parameters (in):	notifier	As per [SWS_ANM_01010]
	executor	Executioner object in which any asynchronous computation spawn by RegisterNetworkStateChangeNotifier shall be invoked.
Return value:	ara::core::Result< void >	As per [SWS_ANM_01010]
Exception Safety:	exception safe	
Thread Safety:	not thread-safe	
Errors:	NmErrc::kInvalidHandler	rollback_semantics
		Provided Callable handler does not exist or is null
Description:	As per [SWS_ANM_01010] but the method shall execute in a provided context	

⌋

[SWS_ANM_01009] Definition of API function ara::nm::NetworkHandle::SetNetworkRequestedState ⌈

Kind:	function	
Header file:	#include "ara/nm/network_handle.h"	
Scope:	`class ara::nm::NetworkHandle`	
Syntax:	`ara::core::Result< void > SetNetworkRequestedState (NetworkStateType networkState) noexcept;`	
Parameters (in):	networkState	The request state to be set
Return value:	ara::core::Result< void >	• If successful: an `ara::core::Result` containing a `ara::core::Result::value_type` containing a `void` • If unsuccessful: an `ara::core::Result` containing an `ara::core::Result::error_type` i.e. a corresponding `ara::nm::NmErrc`
Exception Safety:	exception safe	
Thread Safety:	not thread-safe	
Errors:	NmErrc::kServiceNotAvailable	rollback_semantics
		The connection to the daemon is currently lost, so the application must implement an appropriate error strategy, such as taking over the previous NetworkState.
Description:	A method that can be used to set a new network requested state. Setting a new network requested state will request or release the PNC / VLAN / Physical Network.	

⌋

[SWS_ANM_01013] Definition of API function ara::nm::NetworkHandle::UnregisterNetworkRequestedStateChangeNotifier ⌈

Kind:	function
Header file:	#include "ara/nm/network_handle.h"
Scope:	`class ara::nm::NetworkHandle`
Syntax:	`void UnregisterNetworkRequestedStateChangeNotifier () noexcept;`
Return value:	None
Exception Safety:	exception safe
Thread Safety:	not thread-safe
Description:	Unregister a notifier function which is called if a current network requested state is changed.

⌋

[SWS_ANM_01011] Definition of API function ara::nm::NetworkHandle::UnregisterNetworkStateChangeNotifier ⌈

Kind:	function
Header file:	#include "ara/nm/network_handle.h"
Scope:	`class ara::nm::NetworkHandle`
Syntax:	`void UnregisterNetworkStateChangeNotifier () noexcept;`
Return value:	None
Exception Safety:	exception safe
Thread Safety:	not thread-safe
Description:	Unregister a notifier function which is called if a current network state is changed.

⌋

8.3 Header: ara/nm/nm_error_domain.h

8.3.1 Non-Member Types

[SWS_ANM_01111] Definition of API enum ara::nm::NmErrc

Upstream requirements: RS_AP_00122, RS_AP_00125, RS_AP_00127, RS_AP_00149

⌈

Kind:	enumeration	
Header file:	#include "ara/nm/nm_error_domain.h"	
Forwarding header file:	#include "ara/nm/nm_fwd.h"	
Scope:	namespace ara::nm	
Symbol:	NmErrc	
Underlying type:	ara::core::ErrorDomain::CodeType	
Syntax:	`enum class NmErrc : ara::core::ErrorDomain::CodeType {...};`	
Values:	kServiceNotAvailable	= 1

▽

△

		The connection to the daemon is currently lost, so the application must implement an appropriate error strategy, such as taking over the previous NetworkState.
	kInvalidHandler	= 2
		Provided Callable handler does not exist or is null
Description:	Defines the error codes for the `ara::nm::NmErrorDomain`	

⌋

8.3.2 Non-Member Functions

8.3.2.1 Other

[SWS_ANM_01109] Definition of API function ara::nm::GetNmDomain

Upstream requirements: RS_AP_00119, RS_AP_00120, RS_AP_00159

⌈

Kind:	function	
Header file:	#include "ara/nm/nm_error_domain.h"	
Scope:	namespace ara::nm	
Syntax:	`constexpr const ara::core::ErrorDomain & GetNmDomain () noexcept;`	
Return value:	const ara::core::Error Domain &	Reference to the `ara::nm::NmErrorDomain` object
Exception Safety:	exception safe	
Thread Safety:	thread-safe	
Description:	Returns a reference to the `ara::nm::NmErrorDomain` object	

⌋

[SWS_ANM_01110] Definition of API function ara::nm::MakeErrorCode

Upstream requirements: RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00159, RS_AP_00135

⌈

Kind:	function	
Header file:	#include "ara/nm/nm_error_domain.h"	
Scope:	namespace ara::nm	
Syntax:	`constexpr ara::core::ErrorCode MakeErrorCode (NmErrc code, ara::core::ErrorDomain::SupportDataType data) noexcept;`	
Parameters (in):	code	Error code number
	data	Vendor defined data associated with the error
Return value:	ara::core::ErrorCode	An `ara::core::ErrorCode` object.
Exception Safety:	exception safe	
Thread Safety:	thread-safe	
Description:	Creates an instance of `ara::core::ErrorCode`	

⌋

8.3.3 Class: NmErrorDomain

[SWS_ANM_01101] Definition of API class ara::nm::NmErrorDomain

Upstream requirements: RS_AP_00122, RS_AP_00127, RS_AP_00140

⌈

Kind:	class
Header file:	#include "ara/nm/nm_error_domain.h"
Forwarding header file:	#include "ara/nm/nm_fwd.h"
Scope:	namespace ara::nm
Symbol:	NmErrorDomain
Base class:	ara::core::ErrorDomain
Syntax:	`class NmErrorDomain final : public ara::core::ErrorDomain {...};`
Unique ID:	As per `ara::nm::NmErrorDomain` in [AP_SWS_GENERAL_90023]
Description:	A class representing a network management error domain.

⌋

8.3.3.1 Public Member Types

[SWS_ANM_01103] Definition of API type ara::nm::NmErrorDomain::Errc

Upstream requirements: RS_AP_00122

⌈

Kind:	type alias
Header file:	#include "ara/nm/nm_error_domain.h"
Scope:	`class ara::nm::NmErrorDomain`
Symbol:	Errc
Syntax:	`using Errc = NmErrc;`
Description:	Alias for the error code value enumeration

⌋

[SWS_ANM_01104] Definition of API type ara::nm::NmErrorDomain::Exception

Upstream requirements: RS_AP_00122

⌈

Kind:	type alias
Header file:	#include "ara/nm/nm_error_domain.h"
Scope:	`class ara::nm::NmErrorDomain`
Symbol:	Exception
Syntax:	`using Exception = NmException;`
Description:	Alias for the exception base class

⌋

8.3.3.2 Public Member Functions

8.3.3.2.1 Special Member Functions

[SWS_ANM_01105] Definition of API function ara::nm::NmErrorDomain::NmErrorDomain

Upstream requirements: RS_AP_00119, RS_AP_00120, RS_AP_00159

⌈

Kind:	function
Header file:	#include "ara/nm/nm_error_domain.h"
Scope:	`class ara::nm::NmErrorDomain`
Syntax:	`NmErrorDomain () noexcept;`
Exception Safety:	exception safe
Thread Safety:	thread-safe
Description:	Constructs a new `ara::nm::NmErrorDomain` object

⌋

8.3.3.2.2 Member Functions

[SWS_ANM_01107] Definition of API function ara::nm::NmErrorDomain::Message

Upstream requirements: RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00159

⌈

Kind:	function	
Header file:	#include "ara/nm/nm_error_domain.h"	
Scope:	`class ara::nm::NmErrorDomain`	
Syntax:	`const char * Message (CodeType errorCode) const noexcept override;`	
Parameters (in):	errorCode	The error code number.
Return value:	const char *	The message associated with the error code
Exception Safety:	exception safe	
Thread Safety:	thread-safe	
Description:	Returns the message associated with the error code	

⌋

[SWS_ANM_01106] Definition of API function ara::nm::NmErrorDomain::Name

Upstream requirements: RS_AP_00119, RS_AP_00120, RS_AP_00159

⌈

Kind:	function
Header file:	#include "ara/nm/nm_error_domain.h"
Scope:	`class ara::nm::NmErrorDomain`

▽

△

Syntax:	`const char * Name () const noexcept override;`	
Return value:	const char *	As per `ara::nm::NmErrorDomain` in [AP_SWS_GENERAL_90023]
Exception Safety:	exception safe	
Thread Safety:	thread-safe	
Description:	Retrieve the name of the error domain	

⌋

[SWS_ANM_01108] Definition of API function ara::nm::NmErrorDomain::ThrowAsException

Upstream requirements: RS_AP_00120, RS_AP_00121

⌈

Kind:	function	
Header file:	#include "ara/nm/nm_error_domain.h"	
Scope:	`class ara::nm::NmErrorDomain`	
Syntax:	`void ThrowAsException (const ara::core::ErrorCode &errorCode) const noexcept(false) override;`	
Parameters (in):	errorCode	The error to throw.
Return value:	None	
Exception Safety:	not exception safe	
Thread Safety:	thread-safe	
Description:	Throws the exception associated with the error code. As per [SWS_CORE_10304], this function does not participate in overload resolution when C++ exceptions are disabled in the compiler toolchain.	

⌋

8.3.4 Class: NmException

[SWS_ANM_01100] Definition of API class ara::nm::NmException

Upstream requirements: RS_AP_00122, RS_AP_00127

⌈

Kind:	class
Header file:	#include "ara/nm/nm_error_domain.h"
Forwarding header file:	#include "ara/nm/nm_fwd.h"
Scope:	namespace ara::nm
Symbol:	NmException
Base class:	ara::core::Exception
Syntax:	`class NmException : public ara::core::Exception {...};`
Description:	Defines a class for exceptions to be thrown by the API.

⌋

8.3.4.1 Public Member Functions

8.3.4.1.1 Constructors

[SWS_ANM_01102] Definition of API function ara::nm::NmException::NmException

Upstream requirements: RS_AP_00120, RS_AP_00121, RS_AP_00159, RS_AP_00135

⌈

Kind:	function	
Header file:	#include "ara/nm/nm_error_domain.h"	
Scope:	`class ara::nm::NmException`	
Syntax:	`explicit NmException (ara::core::ErrorCode errorCode) noexcept;`	
Parameters (in):	errorCode	The error code
Exception Safety:	exception safe	
Thread Safety:	thread-safe	
Description:	Constructs a new `ara::nm::NmException` containing an `ara::core::ErrorCode`	

⌋

9 Service Interfaces

This functional cluster does not define any provided or required service interfaces.

10 Configuration

The configuration model of this functional cluster is defined in [8]. This chapter defines the default values for attributes and semantic constraints for elements specified in [8] that are part of the configuration model of this functional cluster.

10.1 Configuration Specification

10.1.1 Overview

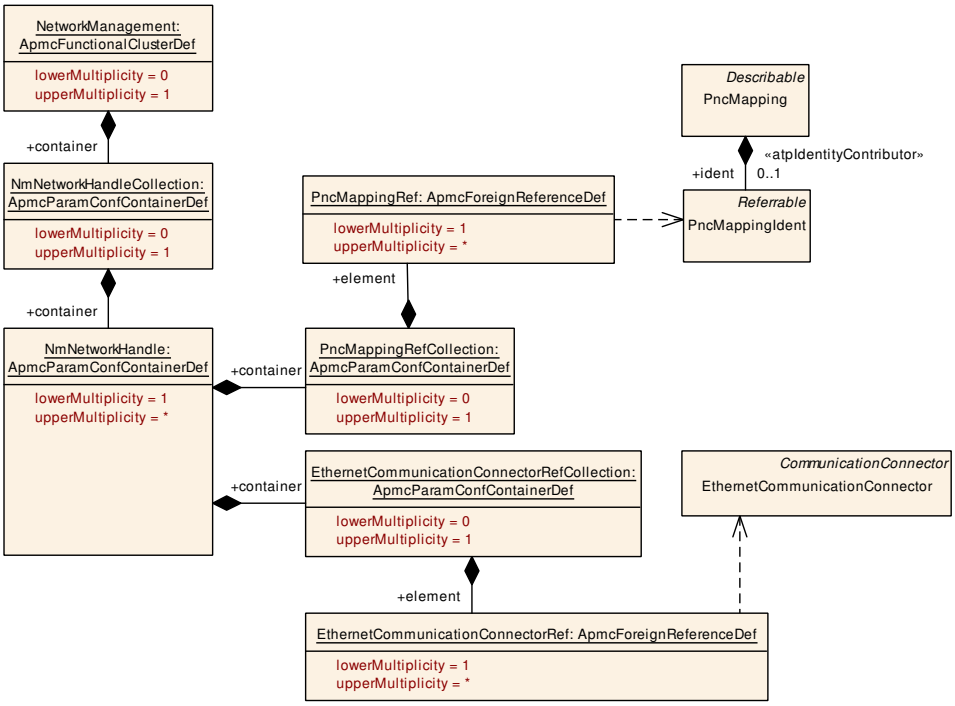


Figure 10.1: Overview of the configuration for network management

[APMC_ANM_00001] Definition of ApmcFunctionalClusterDef NetworkManagement ⌈

Functional Cluster Name	NetworkManagement
Description	This functional cluster defines the configuration for the network management on a specific machine.

Included Containers		
Container Name	**Multiplicity**	**Description**
NmNetworkHandleCollection	0..1	This container provides the collection of NmNetworkHandles in the context of network management.

⌋

[APMC_ANM_00002] Definition of ApmcParamConfContainerDef NmNetwork HandleCollection ⌈

Container Name	NmNetworkHandleCollection
Parent Container	NetworkManagement
Upstream mapping defined	–
Description	This container provides the collection of NmNetworkHandles in the context of network management.
Multiplicity	0..1
Configuration Parameters	

No Included Parameters

Included Containers		
Container Name	Multiplicity	Description
NmNetworkHandle	1..*	Group of partialNetworks and/or VLANs that can be controlled collectively.

⌋

[APMC_ANM_00003] Definition of ApmcParamConfContainerDef NmNetwork Handle ⌈

Container Name	NmNetworkHandle
Parent Container	NmNetworkHandleCollection
Upstream mapping defined	–
Description	Group of partialNetworks and/or VLANs that can be controlled collectively.
Multiplicity	1..*
Configuration Parameters	

No Included Parameters

Included Containers		
Container Name	Multiplicity	Description
EthernetCommunicationConnector RefCollection	0..1	This container provides the collection of references to `EthernetCommunicationConnector`s in the context of network management.
PncMappingRefCollection	0..1	This container provides the collection of references to `PncMaping`s in the context of network management.

⌋

[APMC_ANM_00004] Definition of ApmcParamConfContainerDef PncMapping RefCollection ⌈

Container Name	PncMappingRefCollection
Parent Container	NmNetworkHandle
Upstream mapping defined	–

▽

△

Description	This container provides the collection of references to PncMapings in the context of network management.
Multiplicity	0..1
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	Apmc ID
PncMappingRef	1..*	[APMC_ANM_00006]

No Included Containers

⌋

[APMC_ANM_00006] Definition of ApmcForeignReferenceDef PncMappingRef ⌈

Parameter Name	PncMappingRef
Parent Container	PncMappingRefCollection
Upstream mapping defined	–
Description	Reference to a Partial Network that is included in the NmNetworkHandle
Multiplicity	1..*
Type	Foreign reference to PNC-MAPPING-IDENT

⌋

[APMC_ANM_00005] Definition of ApmcParamConfContainerDef EthernetCommunicationConnectorRefCollection ⌈

Container Name	EthernetCommunicationConnectorRefCollection
Parent Container	NmNetworkHandle
Upstream mapping defined	–
Description	This container provides the collection of references to EthernetCommunicationConnectors in the context of network management.
Multiplicity	0..1
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	Apmc ID
EthernetCommunicationConnectorRef	1..*	[APMC_ANM_00007]

No Included Containers

⌋

[APMC_ANM_00007] Definition of ApmcForeignReferenceDef EthernetCommunicationConnectorRef ⌈

Parameter Name	EthernetCommunicationConnectorRef
Parent Container	EthernetCommunicationConnectorRefCollection
Upstream mapping defined	–
Description	Reference to a VLAN that is included in the NmNetworkHandle.
Multiplicity	1..*
Type	Foreign reference to ETHERNET-COMMUNICATION-CONNECTOR

⌋

10.1.2 Correspondence Table

The following table lists the corresponding model elements for the APMC-based `Target Configuration` and for the legacy M2-based `Target Configuration`. In Chapter 7, only the APMC-based configuration elements are used.

Readers interested to read Chapter 7 may use the table to understand how the M2-based legacy approach corresponds to the APMC-based configuration elements.

M1 Model Element	M2 Model Element
`NmNetworkHandle`	`NmNetworkHandle`
`EthernetCommunicationConnectorRefCollection.EthernetCommunicationConnectorRef`	`NmNetworkHandle.vlan`
`PncMappingRefCollection.PncMappingRef`	`NmNetworkHandle.partialNetwork`

Table 10.1: Correspondence between APMC (M1) elements and MetaModel (M2) elements for FunctionalCluster NetworkManagement

10.2 Default Values

This functional cluster does not define any default values for attributes specified in [8].

10.3 Semantic Constraints

This section defines semantic constraints for elements specified in [8] that are part of the configuration model of this functional cluster.

[SWS_ANM_CONSTR_00001] Configurable Namespace for Network Management ⌈`NetworkManagementPortInterface.namespace` shall never exist.⌋

[SWS_ANM_CONSTR_00002] NmNetworkHandle VLAN Mapping ⌈Configurations where a logical NmNetworkHandle maps the same `VLAN` directly and via partial network(s) shall not be supported.⌋

A Mentioned Manifest Elements

This chapter contains the remaining set of meta-class tables which are not shown directly in the main body of this document.

This chapter is generated.

Class	**EthernetCommunicationConnector**			
Note	Ethernet specific attributes to the CommunicationConnector.			
Base	*ARObject*, *CommunicationConnector*, *Identifiable*, *MultilanguageReferrable*, *Referrable*			
Aggregated by	EcuInstance.connector, MachineDesign.communicationConnector			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
apApplication Endpoint	ApApplicationEndpoint	*	aggr	Collection of Application Addresses that are used on the CommunicationConnector. **Tags:** atp.Splitkey=apApplicationEndpoint, apApplication Endpoint.shortName This Attribute is only used by the AUTOSAR Adaptive Platform.
canXlProps	CanXlProps	*	ref	If the Ethernet frames handled by this Ethernet CommunicationConnector are tunneled through CAN XL, then this reference shall refer the CanXlProps which contains the specific configuration parameters of the CAN XL controller of the physical CAN XL connection to be used for tunneling. **Tags:** atp.Splitkey=canXlProps This Attribute is only used by the AUTOSAR Adaptive Platform.
maximum Transmission Unit	PositiveInteger	0..1	attr	This attribute specifies the maximum transmission unit in bytes.
neighborCache Size	PositiveInteger	0..1	attr	This attribute specifies the size of neighbor cache or ARP table in units of entries.
unicastNetwork Endpoint	NetworkEndpoint	*	ref	Network Endpoint that defines the IPAddress of the machine. **Tags:** atp.Splitkey=unicastNetworkEndpoint This Attribute is only used by the AUTOSAR Adaptive Platform.

Table A.1: EthernetCommunicationConnector

Class	**MachineDesign**			
Note	This meta-class represents the ability to define requirements on a Machine in the context of designing a system. **Tags:** atp.recommendedPackage=MachineDesigns This Class is only used by the AUTOSAR Adaptive Platform.			
Base	*ARElement*, *ARObject*, *AtpClassifier*, *AtpFeature*, *AtpStructureElement*, *CollectableElement*, *Fibex Element*, *Identifiable*, *MultilanguageReferrable*, *PackageableElement*, *Referrable*, *UploadableDesign Element*, *UploadablePackageElement*			
Aggregated by	ARPackage.element, *AtpClassifier*.atpFeature			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
accessControl	AccessControlEnum	0..1	attr	This attribute defines how the access restriction to the Service Instance is defined.

▽

△

Class	**MachineDesign**			
clientIdRange	ClientIdRange	0..1	aggr	Optional restriction of Client Identifiers for this Machine to an allowed range of numerical values. **Tags:** atp.Splitkey=clientIdRange
communication Connector	Communication Connector	*	aggr	This aggregation defines the network connection of the machine. **Tags:** atp.Splitkey=communicationConnector, communicationConnector.shortName
communication Controller	Communication Controller	*	aggr	CommunicationControllers of the Machine that are used for description of 10-Base-T1S topologies **Tags:** atp.Splitkey=communicationController, communicationController.shortName
cryptoKeySlot	CryptoKeySlotDesign	*	aggr	This aggregation represents the key slots for which a key slot design is created in the context of the enclosing machine design. **Tags:** atp.Splitkey=cryptoKeySlot, cryptoKeySlot.short Name
ethIpProps	EthIpProps	*	ref	Machine specific IP attributes. **Tags:** atp.Splitkey=ethIpProps
functional ClusterDesign	AbstractFunctional ClusterDesign	*	aggr	Configuration settings for Functional Clusters on the machine design level. **Tags:** atp.Splitkey=functionalClusterDesign, functional ClusterDesign.shortName
pncPrepare SleepTimer	TimeValue	0..1	attr	Time in seconds the PNC state machine shall wait in PNC_PREPARE_SLEEP.
pnResetTimer	TimeValue	0..1	attr	Specifies the runtime of the reset timer in seconds. This reset time is valid for the reset of PN requests.
processor	Processor	*	aggr	This represents the collection of processors owned by the enclosing MachineDesign. **Tags:** atp.Splitkey=processor, processor.shortName
service Discovery Config	ServiceDiscovery Configuration	*	aggr	Set of service discovery configuration settings that are defined on the machine for individual Communication Connectors. **Tags:** atp.Splitkey=serviceDiscoveryConfig
tcpIpIcmpProps	EthTcpIpIcmpProps	*	ref	Machine specific ICMP (Internet Control Message Protocol) attributes **Tags:** atp.Splitkey=tcpIpIcmpProps
tcpIpProps	EthTcpIpProps	*	ref	Machine specific TcpIp Stack attributes. **Tags:** atp.Splitkey=tcpIpProps

Table A.2: MachineDesign

Class	**NetworkManagementPortInterface**			
Note	This PortInterface shall be used to submit triggers to the state management **Tags:** atp.recommendedPackage=NetworkManagementInterfaces This Class is only used by the AUTOSAR Adaptive Platform.			
Base	*ARElement*, *ARObject*, *AtpBlueprint*, *AtpClassifier*, *AtpType*, *CollectableElement*, *Identifiable*, *MultilanguageReferrable*, *PackageableElement*, *PortInterface*, *Referrable*			
Aggregated by	ARPackage.element			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
–	–	–	–	–

Table A.3: NetworkManagementPortInterface

Class	***NmCluster*** (abstract)			
Note	Set of NM nodes coordinated with use of the NM algorithm.			
Base	*ARObject*, *Identifiable*, *MultilanguageReferrable*, *Referrable*			
Subclasses	CanNmCluster, FlexrayNmCluster, UdpNmCluster			
Aggregated by	NmConfig.nmCluster			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
communication Cluster	CommunicationCluster	0..1	ref	Association to a CommunicationCluster in the topology description. **Tags:** atp.Splitkey=communicationCluster
nmLightTimeout	TimeValue	0..1	attr	Defines the timeout (in seconds) after COMM_FULL_ COMMUNICATION sub-state COMM_FULL_COM_ READY_SLEEP is left.
nmNode	NmNode	*	aggr	Collection of NmNodes of the NmCluster. atpVariation: Derived, because NmNode can be variable. **Stereotypes:** atpVariation **Tags:** atp.Splitkey=nmNode, nmNode.shortName, nm Node.variationPoint.shortLabel vh.latestBindingTime=postBuild
nmPnc Participation	Boolean	0..1	attr	Defines whether this NmCluster contributes to the partial network mechanism.
pncCluster VectorLength	PositiveInteger	0..1	attr	Optionally defines the length of the PNC Request Bit Vector per CommunicationCluster (and VLAN in case of UdpNm). If not defined then System.pncVectorLength applies. Should only make the PNC Request Bit Vector shorter (or same length as defined in System.pncVectorLength).

Table A.4: NmCluster

Class	***NmNode*** (abstract)			
Note	The linking of NmEcus to NmClusters is realized via the NmNodes.			
Base	*ARObject*, *Identifiable*, *MultilanguageReferrable*, *Referrable*			
Subclasses	CanNmNode, FlexrayNmNode, UdpNmNode			
Aggregated by	*NmCluster*.nmNode			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
machine	MachineDesign	0..1	ref	Reference to the machine that contains the NmNode. **Tags:** atp.Splitkey=machine This Attribute is only used by the AUTOSAR Adaptive Platform.
nmNodeId	Integer	0..1	attr	Node identifier of local NmNode. Shall be unique in the NmCluster.
nmVariant	NmVariantEnum	0..1	attr	Defines the functionality of Network Management. **Tags:** atp.Status=obsolete

Table A.5: NmNode

Class	**PncMapping**
Note	Describes a mapping between one or several Virtual Function Clusters onto Partial Network Clusters. A Virtual Function Cluster is realized by a PortGroup. A Partial Network Cluster is realized by one or more ServiceInstances.
Base	*ARObject*, *Describable*



△

Class	**PncMapping**			
Aggregated by	SystemMapping.pncMapping			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
ident	PncMappingIdent	0..1	aggr	This adds the ability to become referrable to PncMapping. **Stereotypes:** atpIdentityContributor
physical Channel	PhysicalChannel	*	ref	This reference maps the partial network to a communication channel. **Tags:** atp.Splitkey=physicalChannel
pncConsumed Provided ServiceInstance Group	ConsumedProvided ServiceInstanceGroup	*	ref	ConsumedProvidedServiceInstanceGroup used in a Partial Network Cluster. This reference is optional, since this could be used for starting and stopping Consumed ProvidedServiceInstanceGroup according the requested partial network, but is not necessarily needed. **Stereotypes:** atpVariation **Tags:** atp.Splitkey=pncConsumedProvidedServiceInstance Group, pncConsumedProvidedServiceInstance Group.consumedProvidedServiceInstanceGroup, pnc ConsumedProvidedServiceInstanceGroup.variation Point.shortLabel vh.latestBindingTime=postBuild
pncIdentifier	PositiveInteger	0..1	attr	Identifer of the Partial Network Cluster. This number represents the absolute bit position of this Partial Network Cluster in the NM Pdu. **Stereotypes:** atpIdentityContributor
pncWakeup Enable	Boolean	0..1	attr	If this parameter is available and set to true then this PNC will be woken up as soon as a channel wakeup occurs on a channel where this PNC is assigned to. This is ensured by adding this PNC to the corresponding channel wakeup sources during upstream mapping. **Tags:** atp.Status=obsolete
serviceInstance	AdaptivePlatform ServiceInstance	*	ref	Reference to ServiceInstances that are participating in a Partial Network Cluster. **Tags:** atp.Splitkey=serviceInstance This Attribute is only used by the AUTOSAR Adaptive Platform.
shortLabel	Identifier	0..1	attr	This attribute specifies an identifying shortName for the PncMapping. It shall be unique in the System scope. **Stereotypes:** atpIdentityContributor
vfc	PortGroup	*	iref	Virtual Function Cluster to be mapped onto a Partial Network Cluster. This reference is optional in case that the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy systems. **Tags:** atp.Splitkey=vfc, vfc.contextComposition, vfc.contextComponent, vfc.target **InstanceRef implemented by:** PortGroupInSystem InstanceRef

Table A.6: PncMapping

Class	**PncMappingIdent**			
Note	This meta-class is created to add the ability to become the target of a reference to the non-Referrable PncMapping.			
Base	*ARObject*, *Referrable*			
Aggregated by	PncMapping.ident			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
–	–	–	–	–

Table A.7: PncMappingIdent

Class	***PortInterface*** (abstract)			
Note	Abstract base class for an interface that is either provided or required by a port of a software component.			
Base	*ARElement*, *ARObject*, *AtpBlueprint*, *AtpClassifier*, *AtpType*, *CollectableElement*, *Identifiable*, *MultilanguageReferrable*, *PackageableElement*, *Referrable*			
Subclasses	*AbstractRawDataStreamInterface*, *AbstractSuspendToRamInterface*, *AbstractSynchronizedTimeBase Interface*, ClientServerInterface, *CryptoInterface*, *DataInterface*, *DiagnosticPortInterface*, FirewallState SwitchInterface, *IdsmAbstractPortInterface*, LogAndTraceInterface, ModeSwitchInterface, Network ManagementPortInterface, *PersistencyInterface*, *PlatformHealthManagementInterface*, ServiceInterface, *StateManagementPortInterface*, TriggerInterface			
Aggregated by	ARPackage.element			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
namespace (ordered)	SymbolProps	*	aggr	This represents the SymbolProps used for the definition of a hierarchical namespace applicable for the generation of code artifacts out of the definition of a ServiceInterface. This Attribute is only used by the AUTOSAR Adaptive Platform.

Table A.8: PortInterface

Class	***PortPrototype*** (abstract)			
Note	Base class for the ports of an AUTOSAR software component. The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.			
Base	*ARObject*, *AtpFeature*, *AtpPrototype*, *Identifiable*, *MultilanguageReferrable*, *Referrable*			
Subclasses	*AbstractProvidedPortPrototype*, *AbstractRequiredPortPrototype*			
Aggregated by	*AtpClassifier*.atpFeature, *SwComponentType*.port			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
clientServer Annotation	ClientServerAnnotation	*	aggr	Annotation of this `PortPrototype` with respect to client/ server communication. **Tags:** atp.Splitkey=clientServerAnnotation
delegatedPort Annotation	DelegatedPort Annotation	0..1	aggr	Annotations on this delegated port. **Tags:** atp.Splitkey=delegatedPortAnnotation
ioHwAbstraction Server Annotation	IoHwAbstractionServer Annotation	*	aggr	Annotations on this IO Hardware Abstraction port. **Tags:** atp.Splitkey=ioHwAbstractionServerAnnotation
modePort Annotation	ModePortAnnotation	*	aggr	Annotations on this mode port. **Tags:** atp.Splitkey=modePortAnnotation
nvDataPort Annotation	NvDataPortAnnotation	*	aggr	Annotations on this non voilatile data port. **Tags:** atp.Splitkey=nvDataPortAnnotation

▽

△

Class	***PortPrototype*** (abstract)			
parameterPort Annotation	ParameterPort Annotation	*	aggr	Annotations on this parameter port. **Tags:** atp.Splitkey=parameterPortAnnotation
portPrototype Props	PortPrototypeProps	0..1	aggr	This attribute allows for the definition of further qualification of the semantics of a PortPrototype. **Tags:** atp.Splitkey=portPrototypeProps This Attribute is only used by the AUTOSAR Adaptive Platform.
senderReceiver Annotation	SenderReceiver Annotation	*	aggr	Collection of annotations of this ports sender/receiver communication. **Tags:** atp.Splitkey=senderReceiverAnnotation
triggerPort Annotation	TriggerPortAnnotation	*	aggr	Annotations on this trigger port. **Tags:** atp.Splitkey=triggerPortAnnotation

Table A.9: PortPrototype

Class	**System**			
Note	The top level element of the System Description. **Tags:** atp.recommendedPackage=Systems			
Base	*ARElement*, *ARObject*, *AtpClassifier*, *AtpFeature*, *AtpStructureElement*, *CollectableElement*, *Identifiable*, *MultilanguageReferrable*, *PackageableElement*, *Referrable*, *UploadableDesignElement*, *UploadablePackageElement*			
Aggregated by	ARPackage.element, *AtpClassifier*.atpFeature			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
fibexElement	FibexElement	*	ref	Reference to ASAM FIBEX elements specifying Communication and Topology. All Fibex Elements used within a System Description shall be referenced from the System Element. atpVariation: In order to describe a product-line, all Fibex Elements can be optional. **Stereotypes:** atpVariation **Tags:** atp.Splitkey=fibexElement, fibexElement.fibexElement, fibexElement.variationPoint.shortLabel vh.latestBindingTime=postBuild
mapping	SystemMapping	*	aggr	Aggregation of all mapping aspects relevant in the System Description. **Stereotypes:** atpVariation **Tags:** atp.Splitkey=mapping, mapping.shortName, mapping.variationPoint.shortLabel vh.latestBindingTime=postBuild
pncVector Length	PositiveInteger	0..1	attr	Length of the partial networking request release information vector (in bytes).
pncVectorOffset	PositiveInteger	0..1	attr	Absolute offset (with respect to the NM-PDU) of the partial networking request release information vector that is defined in bytes as an index starting with 0.
systemCom SpecDefinition	SystemComSpec DefinitionSet	*	ref	Reference to the set of ComSpec definitions that are used for inter-ECU communication in the System. **Tags:** atp.Splitkey=systemComSpecDefinition
systemVersion	RevisionLabelString	0..1	attr	Version number of the System Description.

Table A.10: System

Class	**UdpNmCluster**			
Note	Udp specific NmCluster attributes			
Base	*ARObject*, *Identifiable*, *MultilanguageReferrable*, *NmCluster*, *Referrable*			
Aggregated by	NmConfig.nmCluster			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
network Configuration	UdpNmNetwork Configuration	0..1	aggr	Configuration of a UDP port and UDP multicast IP address of the Nm communication on a VLAN. **Tags:** atp.Splitkey=networkConfiguration This Attribute is only used by the AUTOSAR Adaptive Platform.
nmCbvPosition	Integer	0..1	attr	Defines the position of the control bit vector within the Nm Pdu (Byte position). If this attribute is not configured, the Control Bit Vector is not used.
nmImmediate NmCycleTime	TimeValue	0..1	attr	Defines the immediate NmPdu cycle time in seconds which is used for nmImmediateNmTransmissions NmPdu transmissions. This attribute is only valid if nmImmediate NmTransmissions is greater one.
nmImmediate Nm Transmissions	PositiveInteger	0..1	attr	Defines the number of immediate NmPdus which shall be transmitted. If the value is zero no immediate NmPdus are transmitted. The cycle time of immediate NmPdus is defined by nmImmediateNmCycleTime.
nmMsgCycle Time	TimeValue	0..1	attr	Period of a NmPdu in seconds. It determines the periodic rate in the periodic transmission mode with bus load reduction and is the basis for transmit scheduling in the periodic transmission mode without bus load reduction.
nmNetwork Timeout	TimeValue	0..1	attr	Network Timeout for NmPdus in seconds. It denotes the time how long the UdpNm shall stay in the Network Mode before transition into Prepare Bus-Sleep Mode shall take place.
nmNidPosition	Integer	0..1	attr	Defines the byte position of the source node identifier within the NmPdu. If this attribute is not configured, the Node Identification is not used.
nmPnHandle MultipleNetwork Requests	Boolean	0..1	attr	Defines if Nm performs an additional transition from Network Mode to Repeat Message State (true) or not (false).
nmRepeat MessageTime	TimeValue	0..1	attr	Timeout for Repeat Message State in seconds. Defines the time how long the NM shall stay in the Repeat Message State.
nmUserData Length	Integer	0..1	attr	Defines the length in bytes of the user data contained in the Nm message. User data excludes the PNC Request Bit Vector. This Attribute is only used by the AUTOSAR Adaptive Platform.
nmUserData Offset	PositiveInteger	0..1	attr	Specifies the offset (in bytes) of the user data information in the NM message. User data excludes the PNC Request Bit Vector. This Attribute is only used by the AUTOSAR Adaptive Platform.
nmWaitBus SleepTime	TimeValue	0..1	attr	Timeout for bus calm down phase in seconds. It denotes the time how long the CanNm shall stay in the Prepare Bus-Sleep Mode before transition into Bus-Sleep Mode shall take place.
vlan	EthernetPhysical Channel	0..1	ref	Reference to the vlan (represented by the Ethernet PhysicalChannel) this UdpNmCluster shall apply to. **Tags:** atp.Splitkey=vlan

Table A.11: UdpNmCluster

Class	**UdpNmNode**			
Note	Udp specific NM Node attributes.			
Base	*ARObject*, *Identifiable*, *MultilanguageReferrable*, *NmNode*, *Referrable*			
Aggregated by	*NmCluster*.nmNode			
Attribute	***Type***	***Mult.***	***Kind***	***Note***
allNmMessages KeepAwake	Boolean	0..1	attr	Specifies if Nm drops irrelevant NM PDUs. false: Only NM PDUs with a Partial Network Information Bit (PNI) = true and containing a Partial Network request for this ECU trigger the standard RX indication handling and thus keep the ECU awake true: Every NM PDU triggers the standard RX indication handling and keeps the ECU awake
communication Connector	EthernetCommunication Connector	0..1	ref	Reference to the CommunicationConnector that represents the UdpNmNode in the topology description. **Tags:** atp.Splitkey=communicationConnector This Attribute is only used by the AUTOSAR Adaptive Platform.
nmMsgCycle Offset	TimeValue	0..1	attr	Node specific time offset in the periodic transmission node. It determines the start delay of the transmission. Specified in seconds.
nmPnHandle MultipleNetwork Requests	Boolean	0..1	attr	Specifies if NM performs an additional transition from Network Mode to Repeat Message State (true) or not (false). This Attribute is only used by the AUTOSAR Adaptive Platform.

Table A.12: UdpNmNode

B Demands and constraints on Base Software (normative)

This functional cluster defines no demands or constraints for the Base Software on which the AUTOSAR Adaptive Platform is running on (usually a POSIX-compatible operating system).

C Platform Extension Interfaces (normative)

This functional cluster does not specify any Platform Extension Interfaces.

D Not implemented requirements

This functional cluster implements all functional requirements specified in the corresponding requirement specifications.

E History of Constraints and Specification Items

This chapter provides an overview of the history of constraints and specification items. Please note that the lists in this chapter also include constraints and specification items that have been removed from the specification in a later version. These constraints and specification items do not appear as hyperlinks in the document.

E.1 Constraint and Specification Item Changes between AUTOSAR Release R25-11 and R26-11

E.1.1 Added Specification Items in R26-11

Number	Heading
[APMC_ANM_00001]	Definition of ApmcFunctionalClusterDef NetworkManagement
[APMC_ANM_00002]	Definition of ApmcParamConfContainerDef NmNetworkHandleCollection
[APMC_ANM_00003]	Definition of ApmcParamConfContainerDef NmNetworkHandle
[APMC_ANM_00004]	Definition of ApmcParamConfContainerDef PncMappingRefCollection
[APMC_ANM_00005]	Definition of ApmcParamConfContainerDef EthernetCommunication ConnectorRefCollection
[APMC_ANM_00006]	Definition of ApmcForeignReferenceDef PncMappingRef
[APMC_ANM_00007]	Definition of ApmcForeignReferenceDef EthernetCommunicationConnector Ref
[SWS_ANM_00096]	Automatic reconnect after connection loss
[SWS_ANM_00097]	Re-register notifier callbacks after reconnect
[SWS_ANM_00098]	Request state resynchronization after reconnect
[SWS_ANM_00099]	Initial request state after startup
[SWS_ANM_00100]	Active network request during daemon connection loss
[SWS_ANM_02101]	One state machine per partial network
[SWS_ANM_02102]	States of the PNC state machine
[SWS_ANM_02103]	Initial state after initialization
[SWS_ANM_02104]	Internal request while in no communication
[SWS_ANM_02105]	External request while in no communication
[SWS_ANM_02106]	Release of all internal requests
[SWS_ANM_02107]	Internal request while in ready sleep
[SWS_ANM_02108]	Expiry of the external request
[SWS_ANM_02109]	Start of the prepare sleep timer
[SWS_ANM_02110]	Expiry of the prepare sleep timer
[SWS_ANM_02111]	Internal request while in prepare sleep
[SWS_ANM_02112]	External request while in prepare sleep
[SWS_ANM_02113]	Channel request upon entry into requested

▽

△

Number	Heading
[SWS_ANM_02114]	Channel release upon leaving requested
[SWS_ANM_02115]	Partial Network State Chart Diagram
[SWS_ANM_02116]	Internally requested physical channel
[SWS_ANM_02201]	Restart of the reset timer on external request
[SWS_ANM_02202]	Expiry of the reset timer
[SWS_ANM_02301]	Transmission of the PNC request bit

Table E.1: Added Specification Items in R26-11

E.1.2 Changed Specification Items in R26-11

Number	Heading
[SWS_ANM_00005]	
[SWS_ANM_00006]	
[SWS_ANM_00007]	
[SWS_ANM_00008]	
[SWS_ANM_00009]	
[SWS_ANM_00011]	
[SWS_ANM_00012]	
[SWS_ANM_00013]	
[SWS_ANM_00014]	
[SWS_ANM_00015]	
[SWS_ANM_00016]	
[SWS_ANM_00017]	
[SWS_ANM_00018]	
[SWS_ANM_00019]	
[SWS_ANM_00020]	
[SWS_ANM_00021]	
[SWS_ANM_00022]	
[SWS_ANM_00023]	
[SWS_ANM_00024]	
[SWS_ANM_00025]	
[SWS_ANM_00029]	
[SWS_ANM_00033]	
[SWS_ANM_00034]	
[SWS_ANM_00035]	
[SWS_ANM_00037]	

▽

△

Number	Heading
[SWS_ANM_00038]	
[SWS_ANM_00040]	
[SWS_ANM_00051]	
[SWS_ANM_00052]	
[SWS_ANM_00053]	
[SWS_ANM_00054]	
[SWS_ANM_00055]	
[SWS_ANM_00056]	
[SWS_ANM_00062]	
[SWS_ANM_00063]	
[SWS_ANM_00066]	
[SWS_ANM_00067]	
[SWS_ANM_00070]	
[SWS_ANM_00071]	
[SWS_ANM_00081]	
[SWS_ANM_00083]	
[SWS_ANM_00084]	
[SWS_ANM_00085]	
[SWS_ANM_00086]	
[SWS_ANM_00087]	Handling of external wake-up
[SWS_ANM_00088]	Default target state after start-up
[SWS_ANM_00089]	`UdpNmNode.allNmMessagesKeepAwake`
[SWS_ANM_00090]	Communication Shutdown
[SWS_ANM_00091]	
[SWS_ANM_00095]	
[SWS_ANM_01000]	Definition of API class ara::nm::NetworkHandle
[SWS_ANM_01001]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01002]	Definition of API function ara::nm::NetworkHandle::~NetworkHandle
[SWS_ANM_01003]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01004]	Definition of API function ara::nm::NetworkHandle::operator=
[SWS_ANM_01005]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01006]	Definition of API function ara::nm::NetworkHandle::operator=
[SWS_ANM_01007]	Definition of API function ara::nm::NetworkHandle::GetNetworkState
[SWS_ANM_01008]	Definition of API function ara::nm::NetworkHandle::GetNetworkRequested State
[SWS_ANM_01009]	Definition of API function ara::nm::NetworkHandle::SetNetworkRequested State
[SWS_ANM_01010]	Definition of API function ara::nm::NetworkHandle::RegisterNetworkState ChangeNotifier

▽

△

Number	Heading
[SWS_ANM_01011]	Definition of API function ara::nm::NetworkHandle::UnregisterNetworkStateChangeNotifier
[SWS_ANM_01012]	Definition of API function ara::nm::NetworkHandle::RegisterNetworkRequestedStateChangeNotifier
[SWS_ANM_01013]	Definition of API function ara::nm::NetworkHandle::UnregisterNetworkRequestedStateChangeNotifier
[SWS_ANM_01014]	Definition of API function ara::nm::NetworkHandle::RegisterNetworkRequestedStateChangeNotifier
[SWS_ANM_01015]	Definition of API function ara::nm::NetworkHandle::RegisterNetworkStateChangeNotifier
[SWS_ANM_01020]	Definition of API type ara::nm::NetworkHandle::NetworkStateChangeNotifier
[SWS_ANM_01101]	Definition of API class ara::nm::NmErrorDomain
[SWS_ANM_01106]	Definition of API function ara::nm::NmErrorDomain::Name
[SWS_ANM_01358]	Definition of API enum ara::nm::NetworkHandle::NetworkStateType
[SWS_ANM_91002]	State Chart Diagram

Table E.2: Changed Specification Items in R26-11

E.1.3 Deleted Specification Items in R26-11

none

E.1.4 Added Constraints in R26-11

Number	Heading
[SWS_ANM_CONSTR_00002]	NmNetworkHandle VLAN Mapping

Table E.3: Added Constraints in R26-11

E.1.5 Changed Constraints in R26-11

none

E.1.6 Deleted Constraints in R26-11

none

E.2 Constraint and Specification Item Changes between AUTOSAR Release R24-11 and R25-11

E.2.1 Added Specification Items in R25-11

Number	Heading
[SWS_ANM_91002]	State Chart Diagram

Table E.4: Added Specification Items in R25-11

E.2.2 Changed Specification Items in R25-11

Number	Heading
[SWS_ANM_01000]	Definition of API class ara::nm::NetworkHandle

Table E.5: Changed Specification Items in R25-11

E.2.3 Deleted Specification Items in R25-11

Number	Heading
[SWS_ANM_00044]	
[SWS_ANM_00046]	
[SWS_ANM_00047]	
[SWS_ANM_00092]	nmPnHandleMultipleNetworkRequests
[SWS_ANM_00094]	Immediate Nm Transmissions

Table E.6: Deleted Specification Items in R25-11

E.2.4 Added Constraints in R25-11

none

E.2.5 Changed Constraints in R25-11

none

E.2.6 Deleted Constraints in R25-11

none

E.3 Constraint and Specification Item Changes between AUTOSAR Release R23-11 and R24-11

E.3.1 Added Specification Items in R24-11

none

E.3.2 Changed Specification Items in R24-11

Number	Heading
[SWS_ANM_00029]	
[SWS_ANM_01001]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01002]	Definition of API function ara::nm::NetworkHandle::~NetworkHandle
[SWS_ANM_01003]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01004]	Definition of API function ara::nm::NetworkHandle::operator=
[SWS_ANM_01005]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01006]	Definition of API function ara::nm::NetworkHandle::operator=
[SWS_ANM_01007]	Definition of API function ara::nm::NetworkHandle::GetNetworkState
[SWS_ANM_01008]	Definition of API function ara::nm::NetworkHandle::GetNetworkRequested State
[SWS_ANM_01009]	Definition of API function ara::nm::NetworkHandle::SetNetworkRequested State
[SWS_ANM_01010]	Definition of API function ara::nm::NetworkHandle::RegisterNetworkState ChangeNotifier
[SWS_ANM_01012]	Definition of API function ara::nm::NetworkHandle::RegisterNetwork RequestedStateChangeNotifier
[SWS_ANM_01014]	Definition of API function ara::nm::NetworkHandle::RegisterNetwork RequestedStateChangeNotifier
[SWS_ANM_01015]	Definition of API function ara::nm::NetworkHandle::RegisterNetworkState ChangeNotifier
[SWS_ANM_01020]	Definition of API type ara::nm::NetworkHandle::NetworkStateChangeNotifier
[SWS_ANM_01102]	Definition of API function ara::nm::NmException::NmException
[SWS_ANM_01105]	Definition of API function ara::nm::NmErrorDomain::NmErrorDomain
[SWS_ANM_01107]	Definition of API function ara::nm::NmErrorDomain::Message
[SWS_ANM_01108]	Definition of API function ara::nm::NmErrorDomain::ThrowAsException

Table E.7: Changed Specification Items in R24-11

E.3.3 Deleted Specification Items in R24-11

none

E.3.4 Added Constraints in R24-11

Number	Heading
[SWS_ANM_CONSTR_00001]	Configurable Namespace for Network Management

Table E.8: Added Constraints in R24-11

E.3.5 Changed Constraints in R24-11

none

E.3.6 Deleted Constraints in R24-11

none

E.4 Constraint and Specification Item Changes between AUTOSAR Release R22-11 and R23-11

E.4.1 Added Specification Items in R23-11

Number	Heading
[SWS_ANM_00052]	
[SWS_ANM_00053]	
[SWS_ANM_00054]	
[SWS_ANM_00056]	
[SWS_ANM_00095]	
[SWS_ANM_01000]	Definition of API class ara::nm::NetworkHandle
[SWS_ANM_01001]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01002]	Definition of API function ara::nm::NetworkHandle::~NetworkHandle
[SWS_ANM_01003]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01004]	Definition of API function ara::nm::NetworkHandle::operator=
[SWS_ANM_01005]	Definition of API function ara::nm::NetworkHandle::NetworkHandle
[SWS_ANM_01006]	Definition of API function ara::nm::NetworkHandle::operator=
[SWS_ANM_01007]	Definition of API function ara::nm::NetworkHandle::GetNetworkState
[SWS_ANM_01008]	Definition of API function ara::nm::NetworkHandle::GetNetworkRequested State
[SWS_ANM_01009]	Definition of API function ara::nm::NetworkHandle::SetNetworkRequested State

▽

△

Number	Heading
[SWS_ANM_01010]	Definition of API function ara::nm::NetworkHandle::RegisterNetworkState ChangeNotifier
[SWS_ANM_01011]	Definition of API function ara::nm::NetworkHandle::UnregisterNetworkState ChangeNotifier
[SWS_ANM_01012]	Definition of API function ara::nm::NetworkHandle::RegisterNetwork RequestedStateChangeNotifier
[SWS_ANM_01013]	Definition of API function ara::nm::NetworkHandle::UnregisterNetwork RequestedStateChangeNotifier
[SWS_ANM_01014]	Definition of API function ara::nm::NetworkHandle::RegisterNetwork RequestedStateChangeNotifier
[SWS_ANM_01015]	Definition of API function ara::nm::NetworkHandle::RegisterNetworkState ChangeNotifier
[SWS_ANM_01020]	Definition of API type ara::nm::NetworkHandle::NetworkStateChangeNotifier
[SWS_ANM_01100]	Definition of API class ara::nm::NmException
[SWS_ANM_01101]	Definition of API class ara::nm::NmErrorDomain
[SWS_ANM_01102]	Definition of API function ara::nm::NmException::NmException
[SWS_ANM_01103]	Definition of API type ara::nm::NmErrorDomain::Errc
[SWS_ANM_01104]	Definition of API type ara::nm::NmErrorDomain::Exception
[SWS_ANM_01105]	Definition of API function ara::nm::NmErrorDomain::NmErrorDomain
[SWS_ANM_01106]	Definition of API function ara::nm::NmErrorDomain::Name
[SWS_ANM_01107]	Definition of API function ara::nm::NmErrorDomain::Message
[SWS_ANM_01108]	Definition of API function ara::nm::NmErrorDomain::ThrowAsException
[SWS_ANM_01109]	Definition of API function ara::nm::GetNmDomain
[SWS_ANM_01110]	Definition of API function ara::nm::MakeErrorCode
[SWS_ANM_01111]	Definition of API enum ara::nm::NmErrc
[SWS_ANM_01358]	Definition of API enum ara::nm::NetworkHandle::NetworkStateType

Table E.9: Added Specification Items in R23-11

E.4.2 Changed Specification Items in R23-11

Number	Heading
[SWS_ANM_00022]	
[SWS_ANM_00029]	
[SWS_ANM_00051]	
[SWS_ANM_00062]	
[SWS_ANM_00070]	
[SWS_ANM_00083]	
[SWS_ANM_00084]	

▽

△

Number	Heading
[SWS_ANM_00086]	
[SWS_ANM_00090]	Communication Shutdown
[SWS_ANM_00094]	Immediate Nm Transmissions

Table E.10: Changed Specification Items in R23-11

E.4.3 Deleted Specification Items in R23-11

Number	Heading
[SWS_ANM_00093]	
[SWS_ANM_91000]	
[SWS_ANM_91001]	

Table E.11: Deleted Specification Items in R23-11

E.5 Constraint and Specification Item Changes between AUTOSAR Release R21-11 and R22-11

E.5.1 Added Specification Items in R22-11

none

E.5.2 Changed Specification Items in R22-11

Number	Heading
[SWS_ANM_00055]	
[SWS_ANM_00083]	
[SWS_ANM_00093]	
[SWS_ANM_91000]	
[SWS_ANM_91001]	

Table E.12: Changed Specification Items in R22-11

E.5.3 Deleted Specification Items in R22-11

Number	Heading
[SWS_ANM_00004]	
[SWS_ANM_00028]	

Table E.13: Deleted Specification Items in R22-11

E.5.4 Added Constraints in R22-11

none

E.5.5 Changed Constraints in R22-11

none

E.5.6 Deleted Constraints in R22-11

none