

<b>Document Title</b>	Specification on SOME/IP Transport Protocol
<b>Document Owner</b>	AUTOSAR
<b>Document Responsibility</b>	AUTOSAR
<b>Document Identification No</b>	809

<b>Document Status</b>	published
<b>Part of AUTOSAR Standard</b>	Classic Platform
<b>Part of Standard Release</b>	R22-11

Document Change History			
Date	Release	Changed by	Description
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Updated Sequence for Transmission of SOME/IP segments</li><li>• Editorial changes</li></ul>
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Optional parameters to define a <i>BurstSize</i> to specify the number of segments that shall be transmitted in a burst and a <i>SeparationTime</i> between these bursts were added</li><li>• Several minor bugfixes</li><li>• Editorial changes</li></ul>
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Several minor bugfixes</li><li>• Editorial changes</li></ul>
2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Editorial changes</li><li>• Changed Document Status from Final to published</li></ul>
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Minor corrections</li><li>• Editorial changes</li></ul>
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Clarification of timeout to monitor successful reception</li><li>• Editorial changes</li></ul>
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Initial Release</li></ul>

## Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Contents

1	Introduction and functional overview	5
2	Acronyms and Abbreviations	6
3	Related documentation	7
3.1	Input documents & related standards and norms	7
3.2	Related specification	7
4	Constraints and assumptions	8
4.1	Limitations	8
4.2	Applicability to car domains	8
5	Dependencies to other modules	9
5.1	AUTOSAR PDU Router	9
5.2	AUTOSAR Default Error Tracer	9
6	Requirements Tracing	10
7	Functional specification	12
7.1	Overview of the SOME/IP header	12
7.1.1	Message Type Field	13
7.1.2	Offset Field	13
7.1.3	Reserved Field	14
7.1.4	More Segments Flag	14
7.1.5	Example	14
7.2	Segmentation of SOME/IP messages (TX Path)	16
7.2.1	Size of SOME/IP segments	16
7.2.2	Header of SOME/IP segments	17
7.2.3	Sending of SOME/IP segments	18
7.2.4	Interruption of the disassembly process	20
7.3	Assembly of received SOME/IP messages (RX path)	21
7.3.1	SOME/IP segment received with Offset 0	22
7.3.2	SOME/IP segment received with Offset > 0	24
7.3.3	Interruption of the assembly process	24
7.4	Error Classification	27
7.4.1	Development Errors	28
7.4.2	Runtime Errors	28
7.4.3	Transient Faults	28
7.4.4	Production Errors	28
7.4.5	Extended Production Errors	28
8	API specification	29
8.1	Imported types	29
8.2	Type definitions	29
8.3	Function definitions	30

8.3.1	SomelpTp_GetVersionInfo . . . . .	30
8.3.2	SomelpTp_Init . . . . .	30
8.3.3	SomelpTp_Transmit . . . . .	31
8.4	Callback notifications . . . . .	32
8.4.1	SomelpTp_TriggerTransmit . . . . .	32
8.4.2	SomelpTp_RxIndication . . . . .	33
8.4.3	SomelpTp_TxConfirmation . . . . .	33
8.5	Scheduled functions . . . . .	34
8.5.1	SomelpTp_MainFunctionTx . . . . .	34
8.5.2	SomelpTp_MainFunctionRx . . . . .	34
8.6	Expected interfaces . . . . .	35
8.6.1	Mandatory Interfaces . . . . .	35
8.6.2	Optional Interfaces . . . . .	35
8.6.3	Configurable interfaces . . . . .	36
9	Sequence diagrams . . . . .	37
9.1	Reception . . . . .	37
9.2	Transmission . . . . .	38
10	Configuration specification . . . . .	40
10.1	How to read this chapter . . . . .	40
10.2	Containers and configuration parameters . . . . .	40
10.2.1	SomelpTp . . . . .	40
10.2.2	SomelpTpGeneral . . . . .	41
10.2.3	SomelpTpChannel . . . . .	43
10.2.4	SomelpTpRxNSdu . . . . .	45
10.2.5	SomelpTpRxNPdu . . . . .	45
10.2.6	SomelpTpTxNSdu . . . . .	46
10.2.7	SomelpTpTxNPdu . . . . .	47
10.3	Published Information . . . . .	48

## 1 Introduction and functional overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module SOME/IP TP.

The task of the SOME/IP TP module is to segment SOME/IP packets, which do not fit into one single UDP packet. On the reception side, it re-assembles the received SOME/IP segments.

## 2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations relevant to the SOME/IP Transport Protocol module that are not included in the [1, AUTOSAR glossary].

Abbreviation / Acronym:	Description:
SOME/IP	Scalable service-Oriented MiddlewarE over IP

## 3 Related documentation

### 3.1 Input documents & related standards and norms

- [1] Glossary  
AUTOSAR\_TR\_Glossary
- [2] General Specification of Basic Software Modules  
AUTOSAR\_SWS\_BSWGeneral
- [3] General Requirements on Basic Software Modules  
AUTOSAR\_SRS\_BSWGeneral
- [4] Layered Software Architecture  
AUTOSAR\_EXP\_LayeredSoftwareArchitecture
- [5] Requirements on SOME/IP Protocol  
AUTOSAR\_RS\_SOMEIPProtocol
- [6] SOME/IP Protocol Specification  
AUTOSAR\_PRS\_SOMEIPProtocol
- [7] Specification of PDU Router  
AUTOSAR\_SWS\_PDURouter

### 3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [2, SWS BSW General], which is also valid for SOME/IP Transport Protocol.

Thus, the specification SWS BSW General shall be considered as additional and required specification for SOME/IP Transport Protocol.

[1, AUTOSAR glossary] [2, SWS BSW General] [3, SRS General] [4, EXP Layered Software Architecture] [5, RS SOME/IP Protocol] [6, PRS SOME/IP Protocol] [7, SWS PDU Router]

## 4 Constraints and assumptions

### 4.1 Limitations

The SOME/IP TP is a simple protocol to segment SOME/IP messages. It does not implement retry mechanism nor does it reordering of received SOME/IP segments.

These limitations are intended to spare runtime and memory resources on receiver side. Nonetheless, this is a deviation from the AUTOSAR SOME/IP Protocol Specification (PRS\_SOMEIP\_00747 to PRS\_SOMEIP\_00754).

The rational for these limitations is the typical use-case which is "streaming" of large SOME/IP messages.

### 4.2 Applicability to car domains

This module is applicable for SOME/IP communication.

## 5 Dependencies to other modules

### 5.1 AUTOSAR PDU Router

The SOME/IP TP module uses the PduR for both directions, the transmission path, and the reception path.

### 5.2 AUTOSAR Default Error Tracer

In order to be able to report development errors, the SOME/IP TP module has to have access to the error hook of the Default Error Tracer.

## 6 Requirements Tracing

The following tables reference the requirements specified in [5] and links to the fulfillment of these. Please note that if column “Satisfied by” is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[RS_SOMEIP_00010]	SOME/IP protocol shall support different transport protocols underneath	[SWS_SomeIpTp_00001] [SWS_SomeIpTp_00002] [SWS_SomeIpTp_00004] [SWS_SomeIpTp_00005] [SWS_SomeIpTp_00006] [SWS_SomeIpTp_00008] [SWS_SomeIpTp_00010] [SWS_SomeIpTp_00011] [SWS_SomeIpTp_00012] [SWS_SomeIpTp_00013] [SWS_SomeIpTp_00014] [SWS_SomeIpTp_00015] [SWS_SomeIpTp_00016] [SWS_SomeIpTp_00017] [SWS_SomeIpTp_00018] [SWS_SomeIpTp_00019] [SWS_SomeIpTp_00020] [SWS_SomeIpTp_00021] [SWS_SomeIpTp_00022] [SWS_SomeIpTp_00023] [SWS_SomeIpTp_00024] [SWS_SomeIpTp_00025] [SWS_SomeIpTp_00026] [SWS_SomeIpTp_00027] [SWS_SomeIpTp_00028] [SWS_SomeIpTp_00029] [SWS_SomeIpTp_00032] [SWS_SomeIpTp_00033] [SWS_SomeIpTp_00034] [SWS_SomeIpTp_00035] [SWS_SomeIpTp_00036] [SWS_SomeIpTp_00037] [SWS_SomeIpTp_00038] [SWS_SomeIpTp_00039] [SWS_SomeIpTp_00040] [SWS_SomeIpTp_00041] [SWS_SomeIpTp_00042] [SWS_SomeIpTp_00045] [SWS_SomeIpTp_00048] [SWS_SomeIpTp_00049] [SWS_SomeIpTp_00050] [SWS_SomeIpTp_00051] [SWS_SomeIpTp_00054] [SWS_SomeIpTp_00062] [SWS_SomeIpTp_00063] [SWS_SomeIpTp_00064] [SWS_SomeIpTp_00077] [SWS_SomeIpTp_00078] [SWS_SomeIpTp_00079] [SWS_SomeIpTp_00080]
[RS_SOMEIP_00011]	SOME/IP protocol shall support messages of different lengths	[SWS_SomeIpTp_00001] [SWS_SomeIpTp_00002] [SWS_SomeIpTp_00003] [SWS_SomeIpTp_00004] [SWS_SomeIpTp_00005] [SWS_SomeIpTp_00006]
[RS_SOMEIP_00027]	SOME/IP protocol shall define the header layout of messages	[SWS_SomeIpTp_00006] [SWS_SomeIpTp_00009] [SWS_SomeIpTp_00010] [SWS_SomeIpTp_00011] [SWS_SomeIpTp_00012] [SWS_SomeIpTp_00013] [SWS_SomeIpTp_00014] [SWS_SomeIpTp_00015] [SWS_SomeIpTp_00026] [SWS_SomeIpTp_00077]
[RS_SOMEIP_00051]	SOME/IP protocol shall provide support for segmented transmission of large data	[SWS_SomeIpTp_00002] [SWS_SomeIpTp_00004] [SWS_SomeIpTp_00005] [SWS_SomeIpTp_00009] [SWS_SomeIpTp_00012] [SWS_SomeIpTp_00019] [SWS_SomeIpTp_00023] [SWS_SomeIpTp_00024] [SWS_SomeIpTp_00025] [SWS_SomeIpTp_00035] [SWS_SomeIpTp_00041] [SWS_SomeIpTp_00042] [SWS_SomeIpTp_00048] [SWS_SomeIpTp_00050] [SWS_SomeIpTp_00051] [SWS_SomeIpTp_00063] [SWS_SomeIpTp_00064] [SWS_SomeIpTp_00078]
[SRS_BSW_00301]	All AUTOSAR Basic Software Modules shall only import the necessary information	[SWS_SomeIpTp_00043]
[SRS_BSW_00373]	The main processing function of each AUTOSAR Basic Software Module shall be named according the defined convention	[SWS_SomeIpTp_00058] [SWS_SomeIpTp_00069]
[SRS_BSW_00384]	The Basic Software Module specifications shall specify at least in the description which other modules they require	[SWS_SomeIpTp_00060] [SWS_SomeIpTp_00061]





Requirement	Description	Satisfied by
[SRS_BSW_00407]	Each BSW module shall provide a function to read out the version information of a dedicated module implementation	[SWS_SomelpTp_00044] [SWS_SomelpTp_00046]
[SRS_BSW_00411]	All AUTOSAR Basic Software Modules shall apply a naming rule for enabling/disabling the existence of the API	[SWS_SomelpTp_00044] [SWS_SomelpTp_00046]
[SRS_BSW_00425]	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	[SWS_SomelpTp_00058] [SWS_SomelpTp_00059] [SWS_SomelpTp_00069] [SWS_SomelpTp_00070]

**Table 6.1: Requirements Tracing**

## 7 Functional specification

The task of the SOME/IP TP module is to segment SOME/IP packets, which do not fit into one single UDP packet. On the reception side, it assembles the received SOME/IP segments.

The SOME/IP TP module interacts with the PDU Router for both directions, the transmission and the reception path.

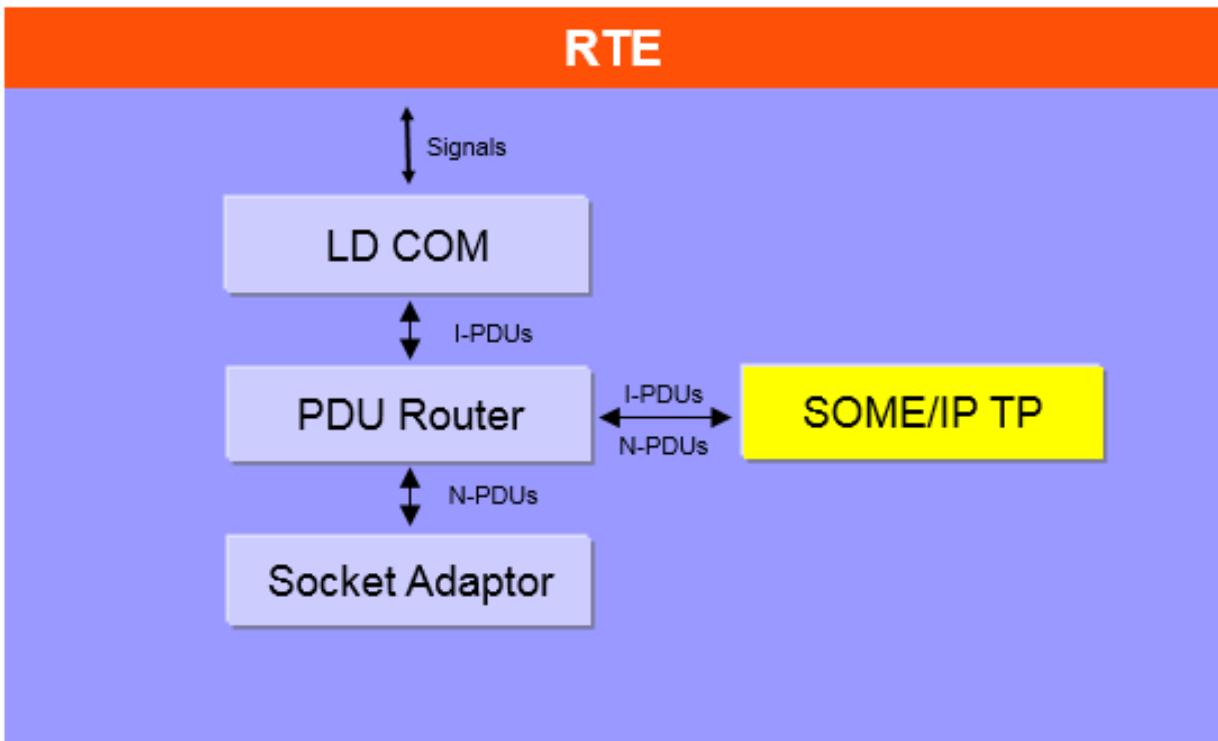


Figure 7.1: Location of the SOME/IP TP module

### 7.1 Overview of the SOME/IP header

This chapter describes the relevant parts of the SOME/IP header for the segmentation of SOME/IP messages.

The Message Type field of the SOME/IP header contains a bit, which marks the SOME/IP PDU as a segment of an original SOME/IP message. Every segmented SOME/IP message adds SOME/IP TP specific fields to the SOME/IP header.

These fields contain control information for the segmentation and the reassembly of original, large SOME/IP messages. How they are used is described in the following chapters.

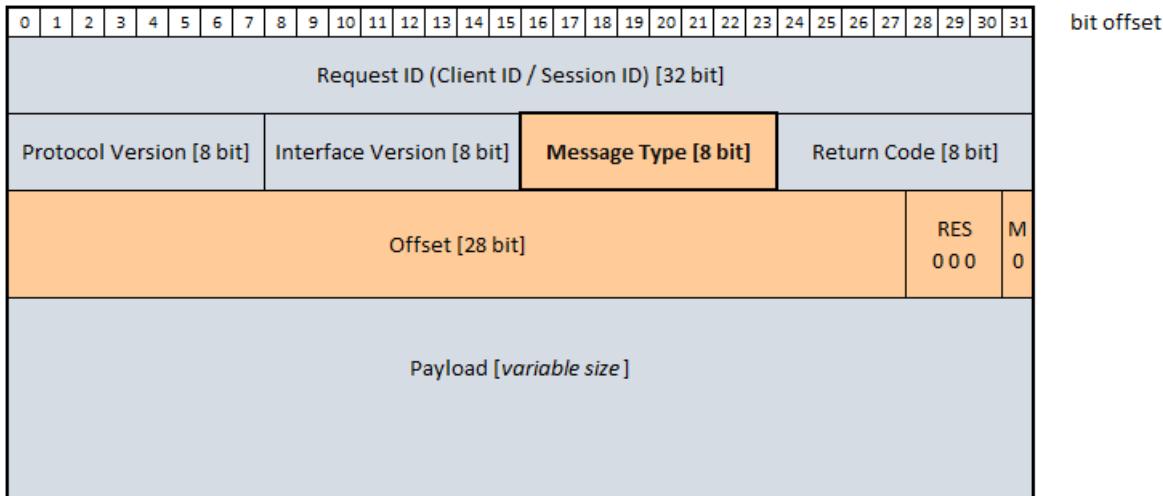


Figure 7.2: SOME/IP TP header

**Note:** The Offset Field, the Reserved bits and the More Segment Flag are only present if the TP-Flag is set to '1'.

### 7.1.1 Message Type Field

The Message Type Field contains the TP-Flag, which marks this SOME/IP message as a SOME/IP segment of an original SOME/IP message.

	Message Type [8 bit]							
bit offset	16	17	18	19	20	21	22	23
Value	x	x	0/1	x	x	x	x	x
Name	ignore	ignore	TP-Flag	ignore	ignore	ignore	ignore	ignore

Table 7.1: Location of the TP-Flag

### 7.1.2 Offset Field

The Offset Field [28 bits] is located right after the Return Code field. It starts at bit offset 0, and ends at bit offset 27. The contained value increases after every transmitted/received segment according to the payload length of the previous transmitted/received SOME/IP segment.

The **Offset Field** contains the **Offset Value** in units of 16 bytes. (E.g.: If the Offset Field is set to 92, 1472 Payload bytes have been transmitted so far.) These two different terms are used in the remainder of this document.

**Note:** The payload length provided in the Offset Field does not include the bytes which are needed for the SOME/IP header.

### 7.1.3 Reserved Field

The Reserved Field [3 bits] follows the Offset Field. It starts at bit offset 28 and ends at bit offset 30. These three bits are reserved and set to 0.

### 7.1.4 More Segments Flag

The More Segments Flag [1 bit] indicates whether another segmented SOME/IP PDU will follow.

### 7.1.5 Example

An original SOME/IP message of 5571 bytes payload has to be transmitted.

The Length field of this original SOME/IP message is set to  $8 + 5571$  bytes.

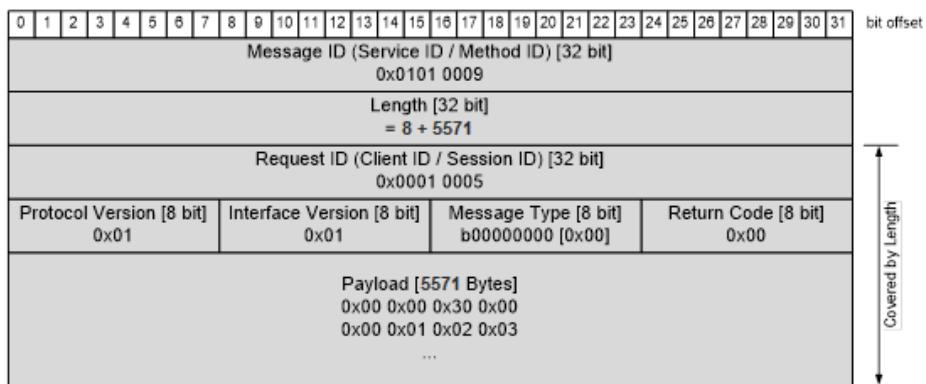


Figure 7.3: Example: Header of Original SOME/IP message

This original SOME/IP message will now be segmented into 5 consecutive SOME/IP segments. Every payload of these segments carries at most 1392 bytes in this example.

For these segments, the SOME/IP TP module adds additional TP fields (marked red). The Length field of the SOME/IP carries the overall length of the SOME/IP segment including 8 bytes for the Request ID, Protocol Version, Interface Version, Message Type and Return Code. Because of the added TP fields (4 bytes), this Length information is extended by 4 additional SOME/IP TP bytes.

The following table provides an overview of the relevant SOME/IP header settings for every SOME/IP segment:

	Length (Bytes)	Message Type [TP-Flag]	Offset Value	More Segment Flag
1st segment	$8 + 4 + 1392 = 1404$	TP-Flag = '1'	0	1



$\triangle$ 

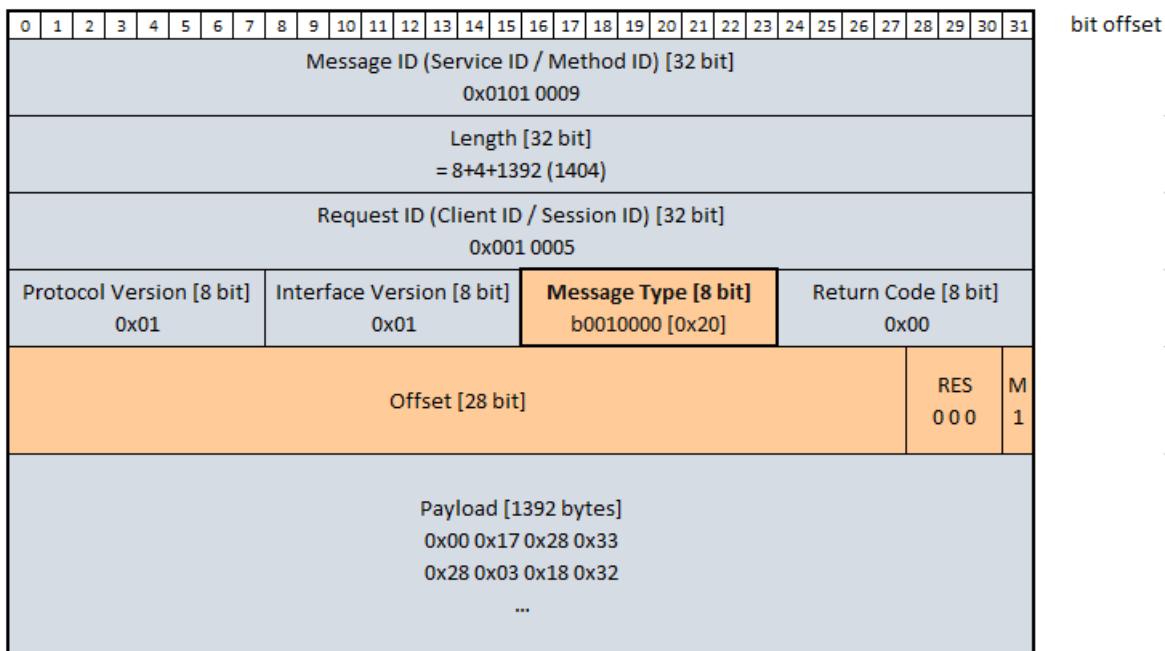
2nd segment	$8 + 4 + 1392 = 1404$	TP-Flag = '1'	87	1
3rd segment	$8 + 4 + 1392 = 1404$	TP-Flag = '1'	174	1
4th segment	$8 + 4 + 1392 = 1404$	TP-Flag = '1'	261	1
5th segment	$8 + 4 + 312 = 324$	TP-Flag = '1'	348	0

**Table 7.2: Example: Overview of relevant SOME/IP TP headers**

**Note:** Please be aware that the value provided within the Offset Field is given in units of 16 bytes, i.e.: The Offset Value of 87 correspond to 1392 bytes Payload.

The complete SOME/IP headers of the SOME/IP segments message will look like this in detail:

- The first 4 segments contain 1392 Payload bytes each with "More Segments Flag" set to '1':


**Figure 7.4: Example: Header of the SOME/IP segments**

- The last segment (i.e. #5) contains the remaining 312 Payload bytes of the original 5771 bytes payload. This last segment is marked with "More Segments flag" set to '0'.

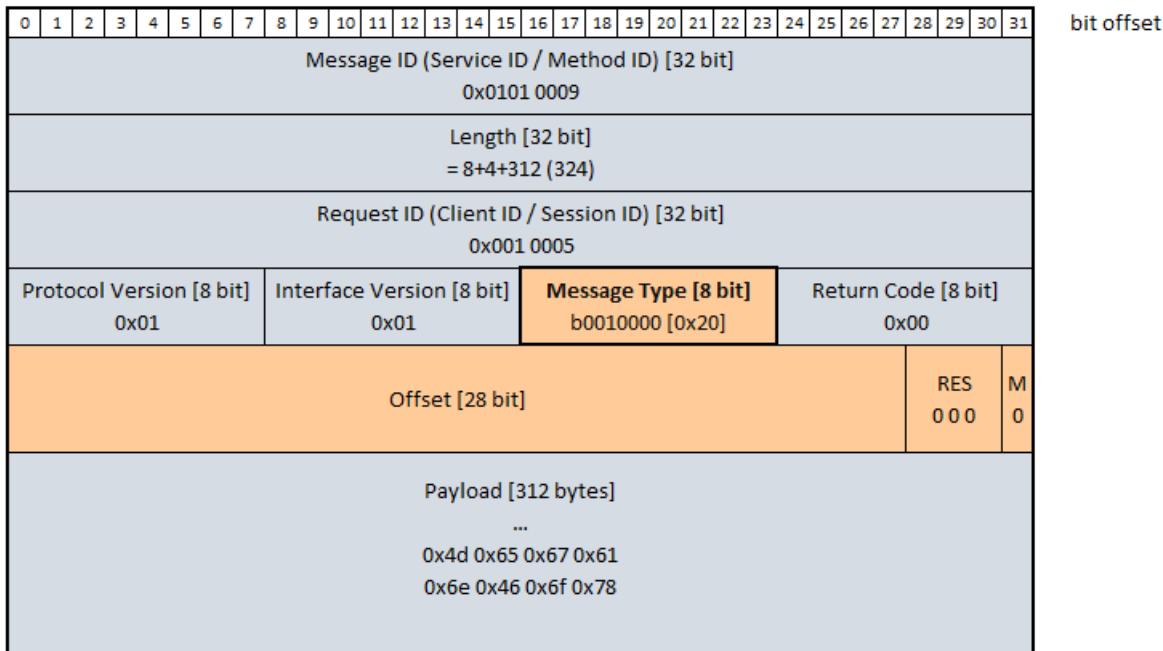


Figure 7.5: Example: Header of the last SOME/IP segment

## 7.2 Segmentation of SOME/IP messages (TX Path)

The following chapter describe the necessary activities of the SOME/IP TP module to segment SOME/IP messages.

### 7.2.1 Size of SOME/IP segments

**[SWS\_SomeipTp\_00001]** [The SOME/IP TP module shall remember the PDU length separately for every PDU ID which is passed by the PduInfoPtr parameter of the SomeIpTp\_Transmit() call.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00011](#))

**Note:**

The SOME/IP TP module needs this information to calculate the payload size, the Offset Value, and the More Segments Flag for the SOME/IP segments which are going to be transmitted.

**[SWS\_SomeipTp\_00002]** [The amount of generated SOME/IP segments shall be as little as possible.] ([RS\\_SOMEIP\\_00011](#), [RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**Note:** This means that the SOME/IP TP module shall try to always use the maximum allowed segmentation size.

**[SWS\_SomeIpTp\_00003]** [The size of every segmented SOME/IP message shall consist of the sum of 12 bytes of SOME/IP header, and the Payload bytes itself.] ([RS\\_SOMEIP\\_00011](#))

**[SWS\_SomeIpTp\_00004]** [The SOME/IP TP module shall derive the maximum possible size of the segmented SOME/IP PDUs using the parameter SomeIpTpTxNPdu Ref.] ([RS\\_SOMEIP\\_00011](#), [RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomeIpTp\_00005]** [The SOME/IP TP module shall generate segmented SOME/IP PDUs not larger than the size derived from the parameter SomeIpTpTxNPdu Ref.] ([RS\\_SOMEIP\\_00011](#), [RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomeIpTp\_00006]** [Every payload of a segmented SOME/IP message except the last one has to be a multiple of 16 bytes.] ([RS\\_SOMEIP\\_00011](#), [RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#))

**Note:**

The last segment may consist of an odd payload or a payload which is not dividable by 16. The amount of the contained payload bytes are written into the Length field of the SOME/IP header.

**[SWS\_SomeIpTp\_00007]** [The SOME/IP TP module shall buffer the pointer to the Meta-data for every PDU ID separately which is passed by the PduInfoPtr parameter of the API SomeIpTp\_Transmit(), and forward this information when PduR\_SomeIpTp Transmit() is called for each segment.] ()

## 7.2.2 Header of SOME/IP segments

Every generated SOME/IP header for each SOME/IP segment is set to the following values:

The following fields are received by the upper layer:

- Request ID [32 bit] -derived value, see SWS\_SomeIpTp\_00007
- Protocol Version [8 bit] - derived value, see SWS\_SomeIpTp\_00007
- Interface Version [8 bit] - derived value, see SWS\_SomeIpTp\_00007
- Message Type [8 bit] - calculated value, see SWS\_SomeIpTp\_00008
- Return Code [8 bit] - derived value, see SWS\_SomeIpTp\_00007

The following fields are added by the SOME/IP TP module:

- Offset [28 bit] - calculated value, see SWS\_SomeIpTp\_00011
- Reserved bits [3 bit] - statically set to '000', see SWS\_SomeIpTp\_00012
- More Segment Flag [1 bit] - calculated value, see SWS\_SomeIpTp\_00013

**[SWS\_SomelpTp\_00008]** [The SOME/IP TP module shall store the Request ID, Protocol Version, Interface Version, Message Type, and the Return Code of the SOME/IP header for every PDU ID separately which is returned by the first call of PduR\_SomeIpTpCopyTxData() triggered by the API call SomelpTp\_Transmit().] ([RS\\_SOMEIP\\_00010](#))

**Note:**

The SOME/IP header is contained in the first 8 bytes of the total length of the original SOME/IP PDU. The total length is provided via the API call SomelpTp\_Transmit().

**[SWS\_SomelpTp\_00009]** [If the provided SDU fits into one single PDU, the provided SOME/IP header shall be used with no modification.

If the provided SDU does not fit into one single SOME/IP PDU, the SOME/IP TP module shall set the TP-Flag of the Message Type to '1' for every SOME/IP segment which is going to be sent on the bus via the PduR.

All the other bits contained in the Message Type field shall stay untouched.] ([RS\\_SOMEIP\\_00027](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomelpTp\_00010]** [The SOME/IP TP module shall create and attach the Offset Field, the Reserved bits, and the More Segment Flag to every SOME/IP segment which is going to be sent on the bus.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#))

**[SWS\_SomelpTp\_00011]** [The Offset Field of the first SOME/IP segment shall be set to '0'.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#))

**[SWS\_SomelpTp\_00012]** [The SOME/IP TP module shall increase the value of the Offset Field for every successfully transmitted SOME/IP segment by the amount of bytes which have been transmitted by the previous SOME/IP segment divided by 16.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomelpTp\_00013]** [The SOME/IP TP module shall set the Reserved bits statically to '000' by the sender and shall be ignored by the receiver.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#))

**[SWS\_SomelpTp\_00014]** [The SOME/IP TP module shall set the More Segment Flag to '1' except for the last SOME/IP segment.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#))

**[SWS\_SomelpTp\_00015]** [The SOME/IP TP module shall set the More Segment Flag to '0' for the last SOME/IP segment.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#))

### 7.2.3 Sending of SOME/IP segments

**[SWS\_SomelpTp\_00016]** [If the API SomelpTp\_Transmit() is called, the SOME/IP TP module shall check for an ongoing segmentation for the provided PDU ID.] ([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomeIpTp\_00017]** [If the API SomeIpTp\_Transmit() is called while no segmentation is ongoing for this PDU ID, the SOME/IP TP module shall perform the following steps in the following order:

- Remember the provided PDU length (provided PduInfoPtr).
- Derive the PDU ID which shall be used for every segmented SOME/IP PDU (see SomeIpTpTxNPduRef).
- Calculate the size of the SOME/IP for the first segment (considering header and payload)
- Call the API PduR\_SomeIpTpTransmit() using the derived PDU ID and the calculated PDU size and set the SduDataPtr to NULL\_PTR.

]([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomeIpTp\_00018]** [When the API SomeIpTp\_TriggerTransmit() is called, create the header for the SOME/IP segment and call the API PduR\_SomeIpTpCopyTxData() using the calculated payload for this segment, and set the parameter retry to NULL\_PTR.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomeIpTp\_00019]** [The size for consecutive SOME/IP TP segments all but not the last, shall be derived by the maximum possible size of the segmented SOME/IP PDUs using the parameter SomeIpTpTxNPduRef.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomeIpTp\_00078]** [The SOME/IP TP module shall verify that the available buffer returned by PduR\_SomeIpTpCopyTxData() via availableDataPtr is larger (for all but the last segment) or equal (for the last segment) size of SOME/IP TP segments.] ([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomeIpTp\_00020]** [

The SOME/IP TP module shall debounce subsequent calls of the API PduR\_SomeIpTpTransmit() for the same PDU ID, using the parameter SomeIpTpNPduSeparationTime.

It defines the time span between the call of SomeIpTp\_TxConfirmation(), and the subsequent call of the API PduR\_SomeIpTpTransmit(). If SomeIpTpTxBurstSize is configured to a value > 1 the SOME/IP TP module shall debounce for the same PDU ID only every SomeIpTpTxBurstSize segments.

]([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomeIpTp\_00021]** [If the last SOME/IP segment of the original SOME/IP PDU has been transmitted successfully (i.e. the call of SomeIpTp\_TxConfirmation() with parameter success equals TRUE occurred for the last call of PduR\_SomeIpTpCopyTxData()), the SOME/IP TP module shall

- Call the API PduR\_SomeIpTpTxConfirmation().

]([RS\\_SOMEIP\\_00010](#))

**Note:**

With the call of PduR\_SomelpTpTxConfirmation(), the segmentation process is finished.

#### 7.2.4 Interruption of the disassembly process

**[SWS\_SomelpTp\_00022]** [If the API SomelpTp\_Transmit() is called with a PDU ID which is currently used for an ongoing segmentation,

- E\_NOT\_OK shall be returned.
- The ongoing disassembly process for this PDU ID shall be canceled.
- The API PduR\_SomelpTpTxConfirmation()with result set to E\_NOT\_OK shall be called.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_DISASSEMBLY\_INTERRUPT.

] (RS\_SOMEIP\_00010)

**[SWS\_SomelpTp\_00023]** [If the API SomelpTp\_TxConfirmation() is called with parameter success set to FALSE,

- The disassembly process for this PDU ID shall be canceled.
- The API PduR\_SomelpTpTxConfirmation()with result set to E\_NOT\_OK shall be called.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_DISASSEMBLY\_INTERRUPT.

] (RS\_SOMEIP\_00010, RS\_SOMEIP\_00051)

**[SWS\_SomelpTp\_00024]** [

In case the available buffer returned by PduR\_SomelpTpCopyTxData() via availableDataPtr does not satisfied the following conditions

- larger or equal to 16 bytes,
- larger (for all but the last segment) or equal (for the last segment) size of SOME/IP TP segments,

the SOME/IP TP module shall:

- Cancel the disassembly process for this PDU ID .
- Call the API PduR\_SomelpTpTxConfirmation() with result set to E\_NOT\_OK.
- Call the API Det\_ReportRuntimeError() with the runtime error code SOMEIPTP\_E\_DISASSEMBLY\_INTERRUPT.

](*RS\_SOMEIP\_00010, RS\_SOMEIP\_00051*)

**[SWS\_SomeIpTp\_00025]** [If an API PduR\_SomeIpTpCopyTxData() returns something else than BUFREQ\_OK,

- The disassembly process for this PDU ID shall be canceled.
- The API PduR\_SomeIpTpTxConfirmation() with result set to E\_NOT\_OK shall be called.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_DISASSEMBLY\_INTERRUPT.

](*RS\_SOMEIP\_00010, RS\_SOMEIP\_00051*)

### 7.3 Assembly of received SOME/IP messages (RX path)

**[SWS\_SomeIpTp\_00031]** [If SomeIpTp\_RxIndication() is called with TP Flag set to '0', SOME/IP TP shall call PduR\_SomeIpTpStartOfReception, PduR\_SomeIpTpCopyRxData(), and PduR\_SomeIpTpRxIndication(), directly after each other providing the received indication.]()

**[SWS\_SomeIpTp\_00071]** [If SomeIpTp\_RxIndication() is called with

- TP Flag set to '1',
- Offset Field set to '0', and
- More Segment Flag set to '0',

SOME/IP TP shall call PduR\_SomeIpTpStartOfReception(), PduR\_SomeIpTpCopyRxData(), and SomeIpTp\_RxIndication(), directly after each other providing the received indication.]()

**[SWS\_SomeIpTp\_00026]** [If the API SomeIpTp\_RxIndication() is called, the SOME/IP TP module shall derive the following SOME/IP header information from the first 12 bytes of the received PDU:

- Request ID [32 bit]
- Protocol Version [8 bit]
- Interface Version [8 bit]
- Message Type [8 bit]
- Return Code [8 bit]
- Offset [28 bit]
- Reserved bits [3 bit]
- More Segment Flag [1 bit]

]([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#))

**[SWS\_SomelpTp\_00077]** [If the TP flag is not set and no assembly session is active, only the following parameters shall be extracted :

- Request ID [32 bit]
- Protocol Version [8 bit]
- Interface Version [8 bit]
- Message Type [8 bit]
- Return Code [8 bit]

]([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00027](#))

**[SWS\_SomelpTp\_00027]** [The SOME/IP TP module shall be able to store the value of the Offset Field for every PDU ID separately.] ([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00028]** [The SOME/IP TP module shall be able to store the number of Payload bytes for every PDU ID separately which has been passed by a call of SomeIpTp\_RxIndication().] ([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00029]** [The SOME/IP TP module shall store the status of the More Segment Flag for every PDU ID separately which is passed by a call of SomelpTP\_RxIndication().] ([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00030]** [The SOME/IP TP module shall buffer the pointer to the Meta-data for every PDU ID separately which is passed by the PduInfoPtr parameter of the API SomelpTp\_RxIndication(), and forward this information when PduR\_SomeIpTpStartOfReception is called.] ()

### 7.3.1 SOME/IP segment received with Offset 0

**[SWS\_SomelpTp\_00032]** [If a SOME/IP segment is successfully received with Offset Field set to 0, the SOME/IP TP module shall store the values of the received SOME/IP header for each PDU ID separately. These values shall be used as reference values for the (expected) following consecutive receiving SOME/IP segments (i.e. with Offset Field set to > 0).] ([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00033]** [If a SOME/IP segment is successfully received with Offset Field set to 0, the SOME/IP TP module shall

- Start the Rx timeout time defined by SomelpTpRxTimeoutTime.
- Call the API PduR\_SomelpTpStartOfReception() with the PDU ID derived from the parameter SomelpTpRxSduRef and the TpSduLength set to '0'.

]([RS\\_SOMEIP\\_00010](#))

**Note:**

TpSduLength set to '0' indicates "unknown message length" to the upper layers.

**[SWS\_SomelTp\_00034]** ↴

If a SOME/IP segment is successfully received with Offset Field set to 0 and after the SOME/IP TP module has called the API PduR\_SomelTpStartOfReception(), the SOME/IP TP module shall check the size returned via bufferSizePtr.

If the returned size is greater or equal to the sum of the received payload and the added SOME/IP header, the SOME/IP TP module shall call the API PduR\_SomelTpCopyRxData() to pass the SOME/IP header (excluding the SOME/IP TP header) of the assembled SOME/IP message to the SOME/IP TP's upper layer. This shall include the following content:

- Request ID [32 bit]
- Protocol Version [8 bit]
- Interface Version [8 bit]
- Message Type [8 bit] - see [[SWS\\_SomelTp\\_00028](#)]
- Return Code [8 bit]

]([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelTp\_00079]** ↴

After calling PduR\_SomelTpCopyRxData() to pass the SOME/IP header (excluding the SOME/IP TP header) of the assembled SOME/IP message to the SOME/IP TP's upper layer (see [[SWS\\_SomelTp\\_00034](#)]), the SOME/IP TP module shall call the API PduR\_SomelTpCopyRxData() again, to provide the payload of the assembled SOME/IP message.

]([RS\\_SOMEIP\\_00010](#))

**Note:** Sequential calls of PduR\_SomelTpCopyRxData() avoid storing of the SOME/IP TP segment in the SOME/IP TP module and support a proper handling to strip off the SOME/IP TP header by skipping 4 bytes that include the Offset field, Reserved Field and the more Segment flag

**[SWS\_SomelTp\_00035]** [The SOME/IP TP module shall set the TP-Flag contained in the Message Type back to '0' before the assembled SOME/IP header is passed to the upper layer.]([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomelTp\_00036]** [The SOME/IP TP module shall store the number of Payload bytes for every PDU ID separately which has been passed to the upper layer.]([RS\\_SOMEIP\\_00010](#))

**Note:**

This information will be used to verify the Offset Value of the consecutive SOME/IP segments.

### 7.3.2 SOME/IP segment received with Offset> 0

**[SWS\_SomelpTp\_00037]** [If a SOME/IP segment is successfully received with Offset Field> 0, the SOME/IP TP module shall compare the received SOME/IP header fields with the values of the stored SOME/IP header fields which has been received with the first segment (i.e. Offset was set to 0):

- Request ID [32 bit]
- Protocol Version [8 bit]
- Interface Version [8 bit]
- Message Type [8 bit]
- Return Code [8 bit]

If these values match restart the SomelpTpRxTimeoutTime and continue with the assembly process.] ([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00038]** [The SOME/IP TP module shall store the number of Payload bytes for every PDU ID separately which has been passed to the upper layer.] ([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00039]** [The SOME/IP TP module shall compare the value of the Offset Field with the sum divided by 16 of copied Payload bytes since the first received SOME/IP segment (i.e. with Offset Field set to '0').

If this sum divided by 16 matches with the current Offset Value and if the bufferSize Ptr provided by the previous call of the API PduR\_SomelpTpCopyRxData()is greater or equal to the received payload, call the API PduR\_SomelpTpCopyRxData()with Sdu Length set to the received Payload bytes.] ([RS\\_SOMEIP\\_00010](#))

**Note:**

In case of Offset Field value > 0, only the Payload bytes are provided to the upper layer (without any SOME/IP header fields)

**[SWS\_SomelpTp\_00040]** [If a SOME/IP segment is successfully received with the More Segment Flag set to '0', the SOME/IP TP module shall

- Cancel the Rx timeout time defined by SomelpTpRxTimeoutTime.
- Call the API PduR\_SomelpTpRxIndication() after it has copied the remaining received Payload bytes to the upper layer(as defined in SWS\_SomelpTp\_00033).

] ([RS\\_SOMEIP\\_00010](#))

### 7.3.3 Interruption of the assembly process

**[SWS\_SomelpTp\_00041]** [If the Rx timeout time defined by SomelpTpRxTimeout Time expires,

- The current assembly process shall be interrupted as defined by SWS\_SomelpTp\_00054.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_ASSEMBLY\_INTERRUPT.

]([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomelpTp\_00042]** [If the API SomelpTp\_RxIndication() is called with the Offset Value is > 0 but no session is currently running,

- The received PDU shall be ignored
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_INCONSISTENT\_SEQUENCE.

]([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**Note:** This check identifies that at least the first segment has not been received.

**[SWS\_SomelpTp\_00054]** [If the SOME/IP TP module interrupts the assembly process because of a detected error, the SOME/IP TP module shall

- Call the API PduR\_SomelpTpRxIndication()for this PDU ID with E\_NOT\_OK.
- The Rx timeout time defined by SomelpTpRxTimeoutTime shall be canceled (if still running) for this PDU ID.

]([RS\\_SOMEIP\\_00010](#))

**Note:** The possible reasons for interruptions are listed below.

**[SWS\_SomelpTp\_00062]** [If the SOME/IP TP module detects an inconsistency of the received SOME/IP TP headers (i.e.: Request ID, Protocol Version, Interface Version, Message Type or Return Code are not equal for all received segments),

- The current assembly process shall be interrupted as defined by SWS\_SomelpTp\_00054.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_INCONSISTENT\_HEADER.

]([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00045]** [If the API SomelpTp\_RxIndication() is called and a session is currently active, the SOME/IP TP module shall check if the TP-Flag of the Message Type is set to '1'. If the TP-Flag is not set to '1',

- The current assembly process shall be interrupted as defined by SWS\_SomelpTp\_00054.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_MESSAGE\_TYPE.

]([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00080] Header Inconsistency check before TP-Flag check** [

Before checking the TP-Flag of the Message, as a condition to interrupt the assembly process, (see [SWS\_SomelpTp\_00045]), the SOME/IP TP module shall check for inconsistencies of the received SOME/IP TP headers according to [SWS\_SomelpTp\_00062].](RS\_SOMEIP\_00010)

**[SWS\_SomelpTp\_00063]** [If the API SomelpTp\_RxIndication() is called, the SOME/IP TP module shall check whether the received payload bytes are dividable by 16 in case the More Segment Flag is set to '1'.

If the received payload bytes are not dividable by 16 in this case,

- The current assembly process shall be interrupted as defined by SWS\_SomelpTp\_00054.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_ASSEMBLY\_INTERRUPT.

] (RS\_SOMEIP\_00010, RS\_SOMEIP\_00051)

**[SWS\_SomelpTp\_00064]** [If the API SomelpTp\_RxIndication() is called, the SOME/IP TP module shall check the value of the Offset Field. If the Offset Value in units of 16 bytes does not match to the sum of the received Payload bytes of the previous SOME/IP segments,

- The current assembly process shall be interrupted as defined by SWS\_SomelpTp\_00054.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_INCONSISTENT\_SEQUENCE.

] (RS\_SOMEIP\_00010, RS\_SOMEIP\_00051)

**[SWS\_SomelpTp\_00048]** [If the API SomelpTp\_RxIndication() is called, the SOME/IP TP module shall check the value of the Offset Field. If the received Offset Value equals '0' while the received Payload bytes of the previous SOME/IP segments is greater than '0', the SOME/IP TP module shall perform the following steps in the following order:

- The current assembly process shall be interrupted as defined by SWS\_SomelpTp\_00054.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_INCONSISTENT\_SEQUENCE.
- Start the assembly process according to chapter 7.3.1 SOME/IP segment received with Offset 0

] (RS\_SOMEIP\_00010, RS\_SOMEIP\_00051)

**[SWS\_SomelpTp\_00049]** [If the bufferSizePtr provided by the API PduR\_SomelpTp\_StartOfReception() or PduR\_SomelpTpCopyRxData() is smaller than the sum of the re-

ceived and the added SOME/IP header (in case of the first segment) or the received payload (in case of any subsequent segment),

- The current assembly process shall be interrupted as defined by SWS\_SomelpTp\_00054.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_ASSEMBLY\_INTERRUPT.

]([RS\\_SOMEIP\\_00010](#))

**[SWS\_SomelpTp\_00050]** [If the API PduR\_SomelpTpCopyRxData() returns something else than BUFREQ\_OK,

- The assembly process for this PDU ID shall be interrupted as defined by SWS\_SomelpTp\_00054.
- .
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_ASSEMBLY\_INTERRUPT.

]([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

**[SWS\_SomelpTp\_00051]** [If the API PduR\_SomelpTpStartOfReception() returns something else than BUFREQ\_OK,

- The assembly process for this PDU ID shall be stopped.
- The API Det\_ReportRuntimeError() shall be called with the runtime error code SOMEIPTP\_E\_ASSEMBLY\_INTERRUPT.

]([RS\\_SOMEIP\\_00010](#), [RS\\_SOMEIP\\_00051](#))

## 7.4 Error Classification

Section 7.2 "Error Handling" of the document "General Specification of Basic Software Modules" [[2](#), SWS BSW General] describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

#### 7.4.1 Development Errors

[SWS\_SomelpTp\_00052] ↴

Type of error	Related error code	Error value
SOME/IP TP module not initialized	SOMEIPTP_E_UNINIT	0x01
Null pointer has been passed as an argument	SOMEIPTP_E_PARAM_POINTER	0x02
Unknown parameter has been passed	SOMEIPTP_E_PARAM	0x03

]()

#### 7.4.2 Runtime Errors

[SWS\_SomelpTp\_00065] ↴

Type of error	Related error code	Error value
The TP-Flag (of Message Type) was set to '0'	SOMEIPTP_E_MESSAGE_TYPE	0x04
Inconsistent subsequent segment received	SOMEIPTP_E_INCONSISTENT_SEQUENCE	0x05
Inconsistent header received	SOMEIPTP_E_INCONSISTENT_HEADER	0x06
Disassembly Interrupt due to the upper layer	SOMEIPTP_E_DISASSEMBLY_INTERRUPT	0x07
Assembly Interrupt due to the upper layer	SOMEIPTP_E_ASSEMBLY_INTERRUPT	0x08

]() Note :- In reference to run-time error "SOMEIPTP\_E\_MESSAGE\_TYPE" no DET will be reported for unsegmented message and is passed to the upper layer without further handling.

#### 7.4.3 Transient Faults

There are no transient faults.

#### 7.4.4 Production Errors

There are no production errors.

#### 7.4.5 Extended Production Errors

There are no extended production errors.

## 8 API specification

### 8.1 Imported types

In this chapter all types included from the following modules are listed:

[SWS\_SomelpTp\_00043] ↗

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
ComStack_Types	ComStack_Types.h	BufReq_ReturnType
	ComStack_Types.h	PduldType
	ComStack_Types.h	PduInfoType
	ComStack_Types.h	PduLengthType
	ComStack_Types.h	RetryInfoType
	ComStack_Types.h	TpDataStateType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

↳(SRS\_BSW\_00301)

### 8.2 Type definitions

[SWS\_SomelpTp\_91002] ↗

<i>Name</i>	SomelpTp_ConfigType	
<i>Kind</i>	Structure	
<i>Elements</i>	implementation specific	
<i>Type</i>	–	–
	<i>Comment</i>	–
<i>Description</i>	This type shall contain at least all parameters that are post-build able according to chapter 10.	
<i>Available via</i>	SomelpTp.h	

↳()

## 8.3 Function definitions

### 8.3.1 SomelpTp\_GetVersionInfo

[SWS\_SomelpTp\_00044] [

<b>Service Name</b>	SomelpTp_GetVersionInfo	
<b>Syntax</b>	<pre>void SomeIpTp_GetVersionInfo (     Std_VersionInfoType* VersionInfo )</pre>	
<b>Service ID [hex]</b>	0x01	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	None	
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	VersionInfo	Pointer to where to store the version information of this module.
<b>Return value</b>	None	
<b>Description</b>	Returns the version information of this module.	
<b>Available via</b>	SomelpTp.h	

] (SRS\_BSW\_00407, SRS\_BSW\_00411)

[SWS\_SomelpTp\_00066] [If the parameter SomelpTp\_VersionInfoPtr of the API SomelpTp\_GetVersionInfo() equals NULL\_PTR and if development error detection is enabled (i.e. SomelpTpDevErrorDetect is set to TRUE), the function SomelpTp\_GetVersionInfo, the API Det\_ReportError() shall be called with the development error code SOMEIPTP\_E\_PARAM\_POINTER.]()

### 8.3.2 SomelpTp\_Init

[SWS\_SomelpTp\_00046] [

<b>Service Name</b>	SomelpTp_Init	
<b>Syntax</b>	<pre>void SomeIpTp_Init (     const SomeIpTp_ConfigType* config )</pre>	
<b>Service ID [hex]</b>	0x02	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non Reentrant	
<b>Parameters (in)</b>	config	Base pointer to the configuration structure of the SOME/IP TP module.
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	Initializes the SOME/IP TP module.	
<b>Available via</b>	SomelpTp.h	

] (SRS\_BSW\_00407, SRS\_BSW\_00411) Note:

The AUTOSAR ECU StateManager calls this SOME/IP TP API service with the address of the static configuration structure of the module in parameter SomelpTp\_Config Ptr.

### 8.3.3 SomelpTp\_Transmit

#### [SWS\_SomelpTp\_00047] [

<b>Service Name</b>	SomelpTp_Transmit	
<b>Syntax</b>	<pre>Std_ReturnType SomeIpTp_Transmit (     PduIdType TxPduId,     const PduInfoType* PduInfoPtr )</pre>	
<b>Service ID [hex]</b>	0x49	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
<b>Parameters (in)</b>	TxPduld	Identifier of the PDU to be transmitted
	PduInfoPtr	Length of and pointer to the PDU data and pointer to MetaData.
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	Std_ReturnType	E_OK: Transmit request has been accepted. E_NOT_OK: Transmit request has not been accepted.
<b>Description</b>	Requests transmission of a PDU.	
<b>Available via</b>	SomelpTp.h	

]()

[SWS\_SomelpTp\_00076] [If SomelpTp\_Transmit() is called before the SOME/IP TP module has been initialized with a call of SomelpTp\_Init(), the AP shall return with E\_NOT\_OK and stop the new session.]()

[SWS\_SomelpTp\_00073] [If development error detection is enabled: SomelpTp\_Transmit() shall check that the service SomelpTp\_Init() was previously called. If the check fails, SomelpTp\_Transmit() shall raise the development error SOMEIPTP\_E\_UNINIT.]()

[SWS\_SomelpTp\_00074] [If parameter TxPduld of SomelpTp\_Transmit() has an invalid value and if development error detection is enabled (i.e. SomelpTpDevErrorDetect is set to TRUE), the API Det\_ReportError() shall be called with the development error code SOMEIPTP\_E\_PARAM.]()

[SWS\_SomelpTp\_00075] [If parameter PduInfoPtr of SomelpTp\_Transmit() equals NULL\_PTR and if development error detection is enabled (i.e. SomelpTpDevError Detect is set to TRUE), the API Det\_ReportError() shall be called with the development error code SOMEIPTP\_E\_PARAM\_POINTER.]()

## 8.4 Callback notifications

### 8.4.1 SomelpTp\_TriggerTransmit

[SWS\_SomelpTp\_00053] [

<b>Service Name</b>	SomelpTp_TriggerTransmit	
<b>Syntax</b>	<pre>Std_ReturnType SomeIpTp_TriggerTransmit (     PdulIdType TxPduId,     PduInfoType* PduInfoPtr )</pre>	
<b>Service ID [hex]</b>	0x41	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different Pdulds. Non reentrant for the same Pdul.	
<b>Parameters (in)</b>	TxPdulId	ID of the SDU that is requested to be transmitted.
<b>Parameters (inout)</b>	PduInfoPtr	Contains a pointer to a buffer (SduDataPtr) to where the SDU data shall be copied, and the available buffer size in SduLength. On return, the service will indicate the length of the copied SDU data in SduLength.
<b>Parameters (out)</b>	None	
<b>Return value</b>	Std_ReturnType	E_OK: SDU has been copied and SduLength indicates the number of copied bytes. E_NOT_OK: No SDU data has been copied. PduInfoPtr must not be used since it may contain a NULL pointer or point to invalid data.
<b>Description</b>	Within this API, the upper layer module (called module) shall check whether the available data fits into the buffer size reported by PduInfoPtr->SduLength. If it fits, it shall copy its data into the buffer provided by PduInfoPtr->SduDataPtr and update the length of the actual copied data in PduInfoPtr->SduLength. If not, it returns E_NOT_OK without changing PduInfoPtr.	
<b>Available via</b>	SomelpTp.h	

]()

[SWS\_SomelpTp\_00072] [If development error detection is enabled: SomelpTp\_TriggerTransmit() shall check that the service SomelpTp\_Init() was previously called. If the check fails,

SomelpTp\_TriggerTransmit() shall raise the development error SOMEIPTP\_E\_UNINIT.]()

[SWS\_SomelpTp\_00055] [In case the given PduInfoPtr->SduLength is smaller than the computed size of the SOME/IP-TP segment (considering header and payload), SomelpTp\_TriggerTransmit() shall not copy any data and return E\_NOT\_OK.]()

#### 8.4.2 SomelpTp\_RxIndication

[SWS\_SomelpTp\_00056] [

<b>Service Name</b>	SomelpTp_RxIndication	
<b>Syntax</b>	<pre>void SomeIpTp_RxIndication (     PduldType RxPduId,     const PduInfoType* PduInfoPtr )</pre>	
<b>Service ID [hex]</b>	0x42	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
<b>Parameters (in)</b>	RxPduld	ID of the received PDU.
	PduInfoPtr	Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	Indication of a received PDU from a lower layer communication interface module.	
<b>Available via</b>	SomelpTp.h	

]()

[SWS\_SomelpTp\_00057] [If development error detection is enabled: SomelpTp\_RxIndication() shall check that the service SomelpTp\_Init() was previously called. If the check fails, SomelpTp\_RxIndication() shall raise the development error SOMEIPTP\_E\_UNINIT.]()

#### 8.4.3 SomelpTp\_TxConfirmation

[SWS\_SomelpTp\_91001] [

<b>Service Name</b>	SomelpTp_TxConfirmation	
<b>Syntax</b>	<pre>void SomeIpTp_TxConfirmation (     PduldType TxPduId,     Std_ReturnType result )</pre>	
<b>Service ID [hex]</b>	0x40	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
<b>Parameters (in)</b>	TxPduld	ID of the PDU that has been transmitted.
	result	E_OK: The PDU was transmitted. E_NOT_OK: Transmission of the PDU failed.
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU.	
<b>Available via</b>	SomelpTp.h	

]()

**[SWS\_SomelpTp\_00067]** [If development error detection is enabled: SomelpTp\_Tx Confirmation() shall check that the service SomelpTp\_Init() was previously called. If the check fails, SomelpTp\_TxConfirmation() shall raise the development error SOMEIPTP\_E\_UNINIT.]()

## 8.5 Scheduled functions

### 8.5.1 SomelpTp\_MainFunctionTx

**[SWS\_SomelpTp\_00058]** [

<b>Service Name</b>	SomelpTp_MainFunctionTx
<b>Syntax</b>	void SomeIpTp_MainFunctionTx ( void )
<b>Service ID [hex]</b>	0x03
<b>Description</b>	This function performs the processing of the AUTOSAR SOME/IP TP module's transmission activities.
<b>Available via</b>	SchM_SomelpTp.h

] ([SRS\\_BSW\\_00373](#), [SRS\\_BSW\\_00425](#))

**[SWS\_SomelpTp\_00059]** [A call to SomelpTp\_MainFunctionTx() shall simply return if the AUTOSAR SOME/IP TP module was not previously initialized with a call to SomeIpTp\_Init().] ([SRS\\_BSW\\_00425](#))

### 8.5.2 SomelpTp\_MainFunctionRx

**[SWS\_SomelpTp\_00069]** [

<b>Service Name</b>	SomelpTp_MainFunctionRx
<b>Syntax</b>	void SomeIpTp_MainFunctionRx ( void )
<b>Service ID [hex]</b>	0x04
<b>Description</b>	This function performs the processing of the AUTOSAR SOME/IP TP module's reception activities.
<b>Available via</b>	SchM_SomelpTp.h

] ([SRS\\_BSW\\_00373](#), [SRS\\_BSW\\_00425](#))

**[SWS\_SomelpTp\_00070]** [A call to SomelpTp\_MainFunctionRx() shall simply return if the AUTOSAR SOME/IP TP module was not previously initialized with a call to SomeIpTp\_Init().] ([SRS\\_BSW\\_00425](#))

## 8.6 Expected interfaces

In this chapter all external interfaces required from other modules are listed.

### 8.6.1 Mandatory Interfaces

This chapter defines all external interfaces which are required to fulfill the core functionality of the module.

[SWS\_SomelpTp\_00060] ↴

<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Det_ReportRuntimeError	Det.h	Service to report runtime errors. If a callout has been configured then this callout shall be called.
PduR_SomelpTpCopyRxData	PduR_SomelpTp.h	This function is called to provide the received data of an I-PDU segment (N-PDU) to the upper layer. Each call to this function provides the next part of the I-PDU data. The size of the remaining buffer is written to the position indicated by bufferSizePtr.
PduR_SomelpTpCopyTxData	PduR_SomelpTp.h	This function is called to acquire the transmit data of an I-PDU segment (N-PDU). Each call to this function provides the next part of the I-PDU data unless retry->TpDataState is TP_DATARETRY. In this case the function restarts to copy the data beginning at the offset from the current position indicated by retry->TxTpDataCnt. The size of the remaining data is written to the position indicated by availableDataPtr.
PduR_SomelpTpRxIndication	PduR_SomelpTp.h	Called after an I-PDU has been received via the TP API, the result indicates whether the transmission was successful or not.
PduR_SomelpTpStartOfReception	PduR_SomelpTp.h	This function is called at the start of receiving an N-SDU. The N-SDU might be fragmented into multiple N-PDUs (FF with one or more following CFs) or might consist of a single N-PDU (SF). The service shall provide the currently available maximum buffer size when invoked with TpSduLength equal to 0.
PduR_SomelpTpTransmit	PduR_SomelpTp.h	Requests transmission of a PDU.
PduR_SomelpTpTxConfirmation	PduR_SomelpTp.h	This function is called after the I-PDU has been transmitted on its network, the result indicates whether the transmission was successful or not.

↳ (SRS\_BSW\_00384)

### 8.6.2 Optional Interfaces

This chapter defines all external interfaces which are required to fulfill an optional functionality of the module.

[SWS\_SomelpTp\_00061] ↴

<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Det_ReportError	Det.h	Service to report development errors.

] (*SRS\_BSW\_00384*)

### 8.6.3 Configurable interfaces

N/A

## 9 Sequence diagrams

### 9.1 Reception

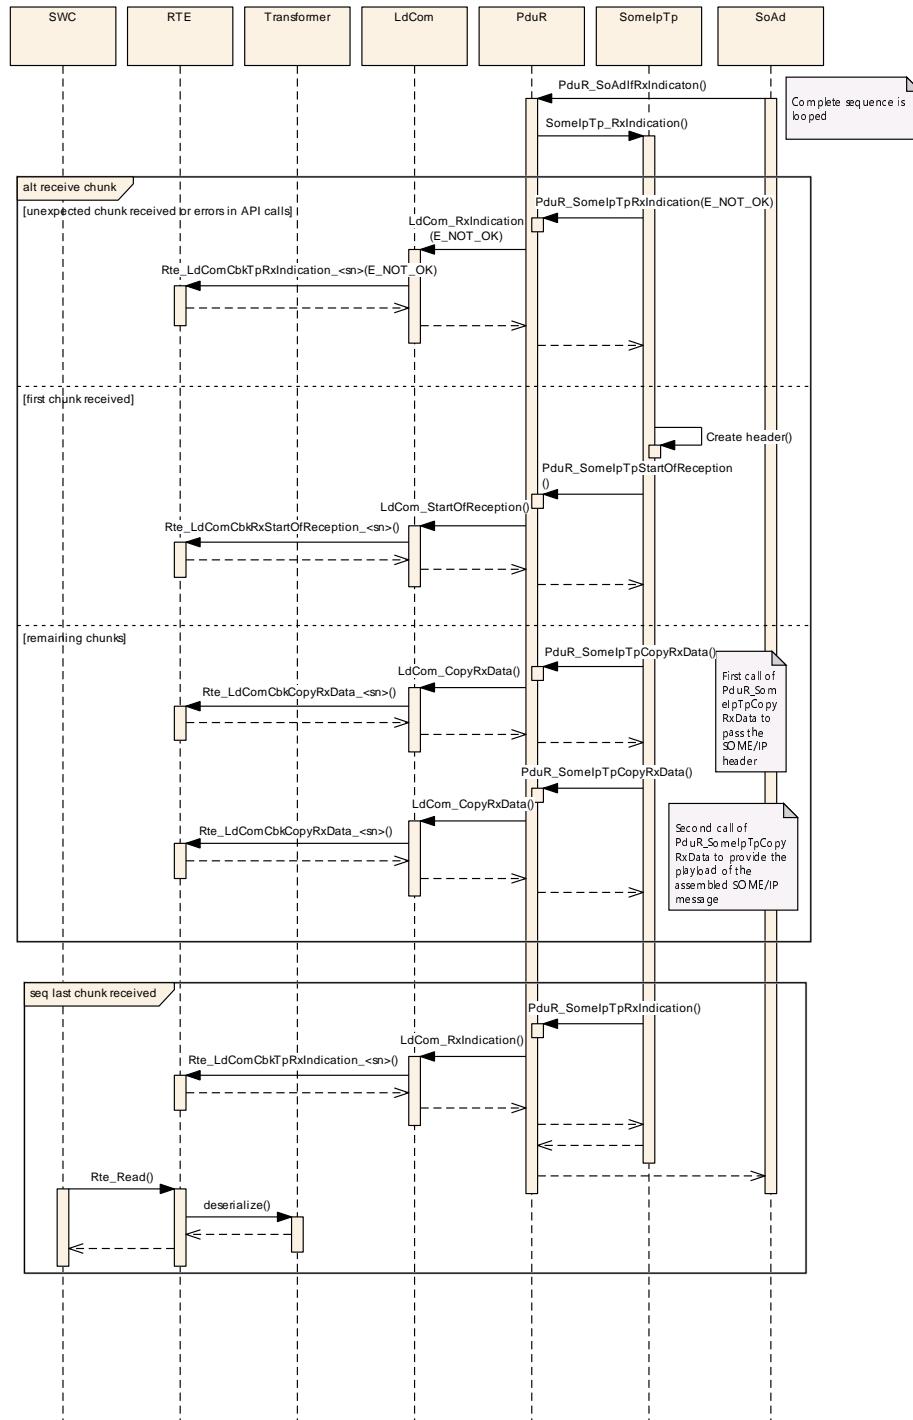
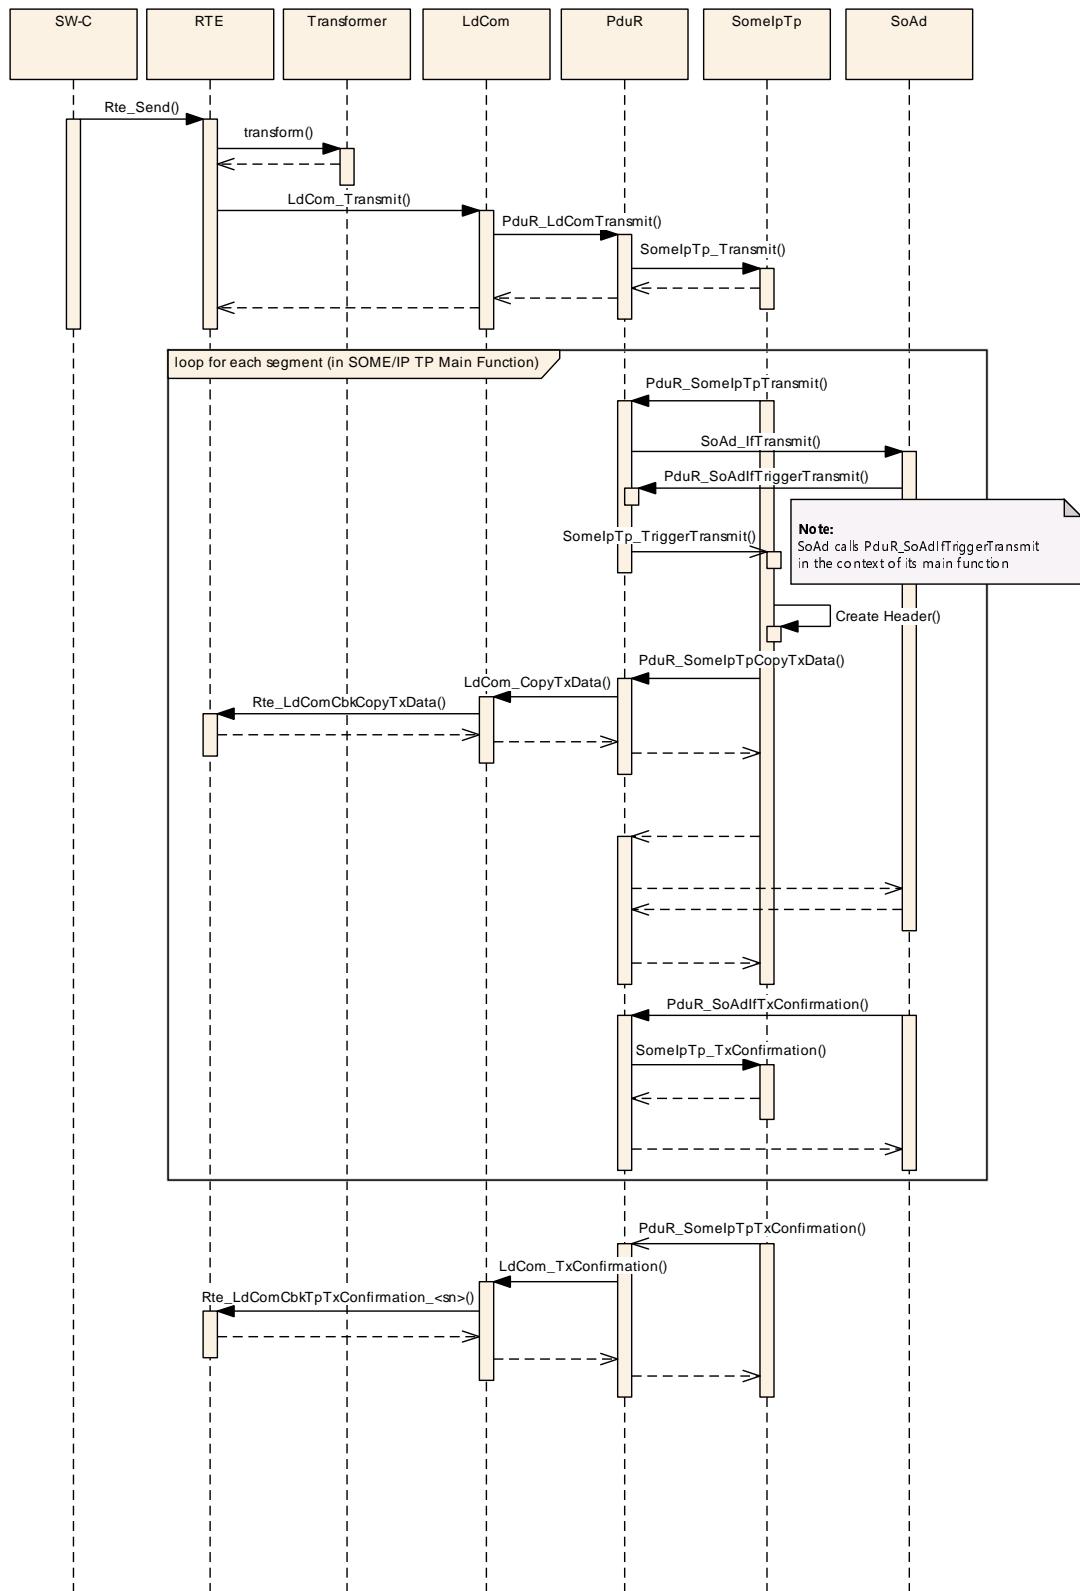


Figure 9.1: Reception of SOME/IP segments

## 9.2 Transmission

Sequence 9.2 depicts a sequence where the call to PduR\_SomelpTpTransmit() for the first segment according to SWS\_SomelpTp\_00017 is deferred to the SomelpTp\_MainFunction().


**Figure 9.2: Transmission of SOME/IP segments**

## 10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module SOME/IP TP.

Chapter 10.3 specifies published information of the module SOME/IP TP.

### 10.1 How to read this chapter

For details refer to the chapter 10.1 “Introduction to configuration specification” in SWS\_BSWGeneral.


### 10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapter 7 and Chapter 8.

#### 10.2.1 SomelpTp

SWS Item	[ECUC_SomelpTp_00001]
Module Name	SomelpTp
Description	Configuration of the SomelpTp module.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPIL

Included Containers		
Container Name	Multiplicity	Scope / Dependency
SomelpTpChannel	1..*	This container contains the configuration parameters of the SomelpTp channel.
SomelpTpGeneral	1	This container contains the general configuration parameters of the SomelpTp module.

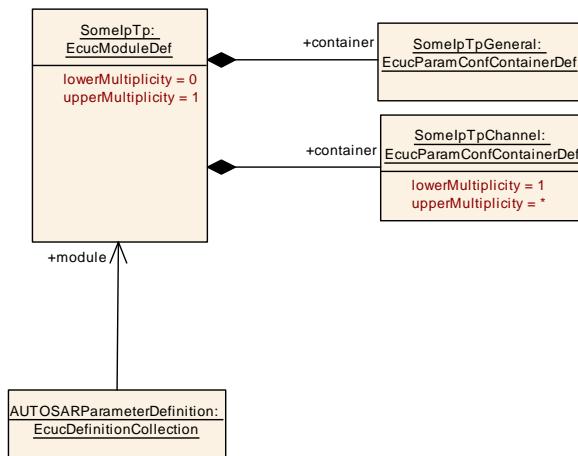
**Figure 10.1**

## 10.2.2 SomeIPGeneral

<b>SWS Item</b>	[ECUC_SomeIP_00002]
<b>Container Name</b>	SomeIPGeneral
<b>Parent Container</b>	SomeIP
<b>Description</b>	This container contains the general configuration parameters of the SomeIP module.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	[ECUC_SomeIP_00004]
<b>Parameter Name</b>	SomeIPDevErrorDetect
<b>Parent Container</b>	SomeIPGeneral
<b>Description</b>	Switches the Development Error Detection and Notification ON or OFF.
<b>Multiplicity</b>	1
<b>Type</b>	EcucBooleanParamDef
<b>Default value</b>	—
<b>Post-Build Variant Value</b>	false
<b>Value Configuration Class</b>	<b>Pre-compile time</b>
	X
	All Variants
<b>Link time</b>	—
	—
<b>Post-build time</b>	—
	—
<b>Scope / Dependency</b>	scope: local

<b>SWS Item</b>	[ECUC_SomeIP_00021]
<b>Parameter Name</b>	SomeIPRxMainFunctionPeriod
<b>Parent Container</b>	SomeIPGeneral
<b>Description</b>	This parameter defines the cycle time in seconds of the periodic call of the SomeIPMainFunctionRx.
<b>Multiplicity</b>	1
<b>Type</b>	EcucFloatParamDef
<b>Range</b>	]0 .. INF[
<b>Default value</b>	—






<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_SomelpTp_00005]		
<b>Parameter Name</b>	SomelpTpTxMainFunctionPeriod		
<b>Parent Container</b>	<a href="#">SomelpTpGeneral</a>		
<b>Description</b>	This parameter defines the cycle time in seconds of the periodic call of the SomelpTp_MainFunctionTx.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	]0 .. INF[		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_SomelpTp_00019]		
<b>Parameter Name</b>	SomelpTpVersionInfoApi		
<b>Parent Container</b>	<a href="#">SomelpTpGeneral</a>		
<b>Description</b>	Activates the SomelpTp_GetVersionInfo() API. TRUE: Enables the SomelpTp_GetVersionInfo() API. FALSE: SomelpTp_GetVersionInfo() API is not included.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

No Included Containers
------------------------

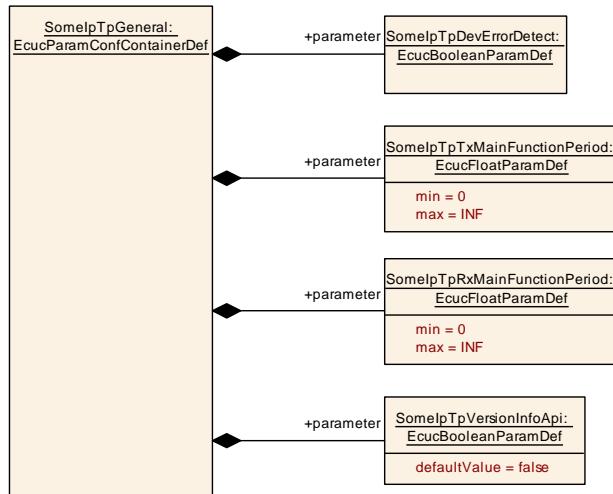
**Figure 10.2**

### 10.2.3 SomelTpChannel

SWS Item	[ECUC_SomeIpTp_00003]		
Container Name	SomelTpChannel		
Parent Container	<a href="#">SomelTp</a>		
Description	This container contains the configuration parameters of the SomelTp channel.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPIL
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

SWS Item	[ECUC_SomeIpTp_00006]		
Parameter Name	SomelTpNPduSeparationTime		
Parent Container	<a href="#">SomelTpChannel</a>		
Description	Sets the duration of the minimum time in seconds the SomelTp module shall wait between the transmissions of N-PDUs.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	]0 .. INF[		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPIL
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

<b>SWS Item</b>	[ECUC_SomelpTp_00023]		
<b>Parameter Name</b>	SomelpTpRxTimeoutTime		
<b>Parent Container</b>	SomelpTpChannel		
<b>Description</b>	Timer to monitor the successful reception. It is started when the first NPdu is received, restarted after reception of intermediate NPdus, and is stopped when the last NPdu has been received. The value shall be calculated as follows: (SomelpTpRxTimeout Time = SomelpTpNPduSeparationTime + budget), where the time budget compensates intermediary hops and jitters within the ECU implementation.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	]-0 .. INF[		
<b>Default value</b>	-		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPIL
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_SomelpTp_00024]		
<b>Parameter Name</b>	SomelpTpTxBurstSize		
<b>Parent Container</b>	SomelpTpChannel		
<b>Description</b>	Specifies the number of segments SomelpTp shall transmit without applying the SomeIpTpNPduSeparationTime.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	1 .. 1844674407309551615		
<b>Default value</b>	1		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPIL
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
SomelpTpRxNSdu	0..*	The following parameters needs to be configured for each N-SDU which has to be passed as one assembled RxPdu to the upper layer.
SomelpTpTxNSdu	0..*	The following parameters needs to be configured for each N-SDU that the SomelpTp module transmits via the SomelpTp Channel.

### 10.2.4 SomelpTpRxNSdu

<b>SWS Item</b>	<b>[ECUC_SomelpTp_00008]</b>		
<b>Container Name</b>	SomelpTpRxNSdu		
<b>Parent Container</b>	<a href="#">SomelpTpChannel</a>		
<b>Description</b>	The following parameters needs to be configured for each N-SDU which has to be passed as one assembled RxPdu to the upper layer.		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPIL
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>[ECUC_SomelpTp_00010]</b>		
<b>Parameter Name</b>	SomelpTpRxSduRef		
<b>Parent Container</b>	<a href="#">SomelpTpRxNSdu</a>		
<b>Description</b>	Reference to a Pdu in the COM-Stack that represents the assembled RxPdu which is passed via the PduR to the upper layer.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to Pdu		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPIL
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>			

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
<a href="#">SomelpTpRxNPdu</a>	1	This container contains the configuration parameters of the NPdu that is received from a lower layer

### 10.2.5 SomelpTpRxNPdu

<b>SWS Item</b>	<b>[ECUC_SomelpTp_00011]</b>		
<b>Container Name</b>	SomelpTpRxNPdu		
<b>Parent Container</b>	<a href="#">SomelpTpRxNSdu</a>		
<b>Description</b>	This container contains the configuration parameters of the NPdu that is received from a lower layer		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>[ECUC_SomelpTp_00013]</b>		
<b>Parameter Name</b>	SomelpTpRxNPduHandleId		
<b>Parent Container</b>	<a href="#">SomelpTpRxNPdu</a>		
<b>Description</b>	This parameter defines the handle ID that is used by the PduR when calling SomelpTp_RxIndication.		





<b>Multiplicity</b>	1		
<b>Type</b>	EcclIntegerParamDef (Symbolic Name generated for this parameter)		
<b>Range</b>	0 .. 65535		
<b>Default value</b>	-		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_SomelTp_00012]		
<b>Parameter Name</b>	SomelTpRxNPduRef		
<b>Parent Container</b>	SomelTpRxNPdu		
<b>Description</b>	Reference to a global Pdu that is used to harmonize HandleIDs in the COM-Stack.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to Pdu		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPIL
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>			

No Included Containers
------------------------

## 10.2.6 SomelTpTxNSdu

<b>SWS Item</b>	[ECUC_SomelTp_00009]		
<b>Container Name</b>	SomelTpTxNSdu		
<b>Parent Container</b>	SomelTpChannel		
<b>Description</b>	The following parameters needs to be configured for each N-SDU that the SomelTp module transmits via the SomelTpChannel.		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPIL
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Configuration Parameters</b>			

<b>SWS Item</b>	[ECUC_SomelTp_00020]		
<b>Parameter Name</b>	SomelTpTxNSduHandleId		
<b>Parent Container</b>	SomelTpTxNSdu		
<b>Description</b>	This parameter defines the handle ID of the NSdu that represents the original TxSdu which is segmented and passed via the PduR to the lower layer. This handle ID is used by PduR when calling SomelTp_Transmit.		
<b>Multiplicity</b>	1		





Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_SomelpTp_00015]		
Parameter Name	SomelpTpTxNSduRef		
Parent Container	SomelpTpTxNSdu		
Description	Reference to a global Pdu in the COM-Stack that represents the original TxSdu which is segmented and passed via the PduR to the lower layer.		
Multiplicity	1		
Type	Reference to Pdu		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
SomelpTpTxNPdu	1	This container contains the configuration parameters of the segmented Tx NPdus that are transmitted to a lower layer.

## 10.2.7 SomelpTpTxNPdu

SWS Item	[ECUC_SomelpTp_00016]		
Container Name	SomelpTpTxNPdu		
Parent Container	SomelpTpTxNSdu		
Description	This container contains the configuration parameters of the segmented Tx NPdus that are transmitted to a lower layer.		
Configuration Parameters			

SWS Item	[ECUC_SomelpTp_00017]		
Parameter Name	SomelpTpTxNPduHandleId		
Parent Container	SomelpTpTxNPdu		
Description	This parameter defines the handle ID that is used by PduR when calling SomelpTp_TriggerTransmit.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		





<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_SomelpTp_00018]		
<b>Parameter Name</b>	SomelpTpTxNPduRef		
<b>Parent Container</b>	SomelpTpTxNPdu		
<b>Description</b>	Reference to a global Pdu that is used to harmonize HandleIDs in the COM-Stack.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to Pdu		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPIL
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>			

No Included Containers
------------------------

## 10.3 Published Information

For details refer to the chapter 10.3 “Published Information” in SWS\_BSWGeneral.