

Document Title	Specification of Time Synchronization over CAN
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	674

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R23-11

Document Change History			
Date	Release	Changed by	Description
2023-11-23	R23-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>Clarification of / refinement of sequence counter validation</li><li>Clarification of / refinement of Timesync message transmission and debouncing behavior</li><li>Incorporation of validation findings for "Secured Time Synchronization"</li></ul>
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>Support for "Secured Time Synchronization" added</li><li>Support for rate corrected Sync reception delay</li><li>Minor content changes, clarifications</li></ul>
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>CAN HW timestamping added</li><li>Hysteresis added for sequence counter validation</li></ul>
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>Time Validation updated for gateways</li><li>Time out handling of Synchronized and Offset Time messages corrected</li><li>Post build variant value corrected for CanTSynGlobalTimeMasterConfirmationHandleId and CanTSynGlobalTimeSlaveHandleId</li></ul>





2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Time Validation (draft)</li><li>• Clarification regarding messages with stuck sequence counter</li><li>• Clarification regarding cyclic operation entry after timebase startup</li><li>• Clarification regarding transmission and reception of User Bytes</li><li>• Changed Document Status from Final to published</li></ul>
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Modifications to enhance the precision of Global Time Synchronization</li><li>• Additional minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li></ul>
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li></ul>
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Offset message formats changed</li><li>• Extended Offset message formats added</li><li>• Immediate Time Synchronization message transmission</li><li>• Various enhancements and corrections</li></ul>
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• CanTSyn_SetTransmissionMode changed to return "void"</li><li>• Minor corrections / clarifications / editorial changes</li></ul>
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"><li>• Initial Release</li></ul>

## Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Contents

1	Introduction and functional overview	7
2	Acronyms and Abbreviations	9
3	Related documentation	10
3.1	Input documents & related standards and norms	10
3.2	Related specification	10
4	Constraints and assumptions	11
4.1	Limitations	11
4.2	Applicability to car domains	11
5	Dependencies to other modules	12
5.1	File structure	13
5.1.1	Code file structure	13
5.1.2	Header file structure	13
6	Requirements Tracing	14
7	Functional specification	18
7.1	Overview	18
7.2	Module Handling	18
7.2.1	Interrupt Handling	18
7.2.2	Initialization	19
7.2.3	Error Handling	19
7.3	Message Format	19
7.3.1	SYNC and FUP Message	21
7.3.2	Offset Messages	24
7.3.2.1	Normal Offset Messages	25
7.3.2.2	Extended Offset messages	26
7.4	Acting as Time Master	29
7.4.1	SYNC and FUP message processing	31
7.4.2	OFS message processing	33
7.4.3	Transmission mode	35
7.4.4	Debouncing of Timesync message transmission	35
7.4.4.1	Debouncing per PDU	35
7.4.4.2	Debouncing across multiple domains and busses	37
7.4.5	Immediate Time Synchronization	38
7.4.6	Calculation and Assembling of Time Synchronization Messages	40
7.4.6.1	Global Time Calculation	40
7.4.6.2	OVS Calculation	43
7.4.6.3	SGW Calculation	44
7.4.6.4	Sequence Counter Calculation	44
7.4.6.5	CRC Calculation	44

7.4.6.6	ICV Generation . . . . .	45
7.4.6.7	Message Assembling . . . . .	47
7.5	Acting as Time Slave . . . . .	48
7.5.1	SYNC and FUP message processing . . . . .	48
7.5.2	OFS and OFNS message processing . . . . .	51
7.5.2.1	CRC Validation of OFS messages . . . . .	51
7.5.2.2	CRC Validation of OFNS messages . . . . .	51
7.5.2.3	ICV Verification of Extended OFS Messages . . . . .	52
7.5.2.4	General . . . . .	53
7.5.3	Validation and Disassembling of Time Synchronization Messages . . . . .	54
7.5.3.1	Global Time Calculation . . . . .	54
7.5.3.2	OVS Consideration . . . . .	58
7.5.3.3	SGW Calculation . . . . .	58
7.5.3.4	Sequence Counter Validation . . . . .	58
7.5.3.5	CRC Validation . . . . .	63
7.5.3.6	ICV Verification . . . . .	63
7.5.3.7	Message Disassembling . . . . .	66
7.6	Time Recording . . . . .	67
7.6.1	Global Time Precision Measurement . . . . .	67
7.6.2	Time Validation . . . . .	67
7.7	Security Events . . . . .	69
7.8	Error Classification . . . . .	70
7.8.1	Development Errors . . . . .	70
7.8.2	Runtime Errors . . . . .	71
7.8.3	Transient Faults . . . . .	71
7.8.4	Production Errors . . . . .	71
7.8.5	Extended Production Errors . . . . .	71
8	API specification . . . . .	72
8.1	Imported types . . . . .	72
8.2	Type definitions . . . . .	72
8.2.1	CanTSyn_ConfigType . . . . .	72
8.2.2	CanTSyn_TransmissionModeType . . . . .	73
8.3	Function definitions . . . . .	73
8.3.1	CanTSyn_Init . . . . .	73
8.3.2	CanTSyn_GetVersionInfo . . . . .	74
8.3.3	CanTSyn_SetTransmissionMode . . . . .	74
8.4	Callback notifications . . . . .	75
8.4.1	CanTSyn_RxIndication . . . . .	75
8.4.2	CanTSyn_TxConfirmation . . . . .	76
8.4.3	CanTSyn_IcvGenerationIndication . . . . .	77
8.4.4	CanTSyn_IcvVerificationIndication . . . . .	78
8.5	Scheduled functions . . . . .	78
8.5.1	CanTSyn_MainFunction . . . . .	79
8.6	Expected interfaces . . . . .	79

8.6.1	Mandatory interfaces . . . . .	79
8.6.2	Optional interfaces . . . . .	79
9	Sequence diagrams	82
9.1	Enable Egress Timestamping . . . . .	82
9.2	CAN Time Synchronization (Time Master) . . . . .	83
9.3	CAN Time Synchronization (Time Slave) . . . . .	85
9.4	CAN Secure Time Synchronization (Time Master, Time Slave) . . . . .	87
10	Configuration specification	88
10.1	How to read this chapter . . . . .	88
10.2	Containers and configuration parameters . . . . .	88
10.2.1	Variants . . . . .	88
10.2.2	CanTSyn . . . . .	88
10.2.3	CanTSynGeneral . . . . .	89
10.2.4	CanTSynSecurityEventRefs . . . . .	93
10.2.5	CanTSynGlobalTimeDomain . . . . .	95
10.2.6	CanTSynGlobalTimeSyncDataIDList . . . . .	98
10.2.7	CanTSynGlobalTimeSyncDataIDListElement . . . . .	100
10.2.8	CanTSynGlobalTimeFupDataIDList . . . . .	101
10.2.9	CanTSynGlobalTimeFupDataIDListElement . . . . .	102
10.2.10	CanTSynGlobalTimeOfsDataIDList . . . . .	103
10.2.11	CanTSynGlobalTimeOfsDataIDListElement . . . . .	104
10.2.12	CanTSynGlobalTimeOfnsDataIDList . . . . .	105
10.2.13	CanTSynGlobalTimeOfnsDataIDListElement . . . . .	106
10.2.14	CanTSynGlobalTimeMaster . . . . .	107
10.2.15	CanTSynGlobalTimeMasterPdu . . . . .	112
10.2.16	CanTSynGlobalTimeTxIcvGeneration . . . . .	113
10.2.17	CanTSynGlobalTimeSlave . . . . .	118
10.2.18	CanTSynGlobalTimeSlavePdu . . . . .	122
10.2.19	CanTSynGlobalTimeRxIcvVerification . . . . .	122
10.3	Constraints . . . . .	127
10.4	Published Information . . . . .	127
A	Not applicable requirements	128
B	Change history of AUTOSAR traceable items	129
B.1	Traceable item history of this document according to AUTOSAR Release R23-11 . . . . .	129
B.1.1	Added Specification Items in R23-11 . . . . .	129
B.1.2	Changed Specification Items in R23-11 . . . . .	129
B.1.3	Deleted Specification Items in R23-11 . . . . .	130
B.1.4	Added Constraints in R23-11 . . . . .	130
B.1.5	Changed Constraints in R23-11 . . . . .	130
B.1.6	Deleted Constraints in R23-11 . . . . .	130

# 1 Introduction and functional overview

The [CanTSyn](#) module handles the distribution of time information over CAN buses.

Just transmitting the time information from the master to the slaves in a broadcast CAN message has the disadvantage that the time value becomes inaccurate due to CAN specific effects like arbitration and BSW specific delays.


The concept proposes a two-step mechanism:

- In a first broadcast message (the so-called SYNC message), the second portion of the time information ( $t_{0r}$ ) is transmitted. The transmitting ECU, i.e. the Time Master, uses CAN low-level mechanisms like the "CAN transmit confirmation" to detect the point in time ( $t_{1r}$ ) when the message was actually transmitted, i.e. it takes a timestamp.

A receiving ECU, i.e. the Time Slave, receives the message and uses CAN low-level mechanisms like the "CAN receive indication" to detect the point in time ( $t_{2r}$ ) when the message was actually received.


- In a second broadcast message (the so-called Follow-Up (FUP) message), the Time Master transmits the offset between the time information transmitted in the previous SYNC message and the actual detected transmission time. No timestamp is taken for the FUP message, neither on the transmitting nor on the receiving side.
- The Time Slave can now combine the information within the SYNC and within the FUP message and with its previously taken timestamp for the received SYNC message and determine the transmitted time information in a more precise way by just receiving one message and omitting timestamps.

[Figure 1.1](#) shows the CAN Time Synchronization mechanism.

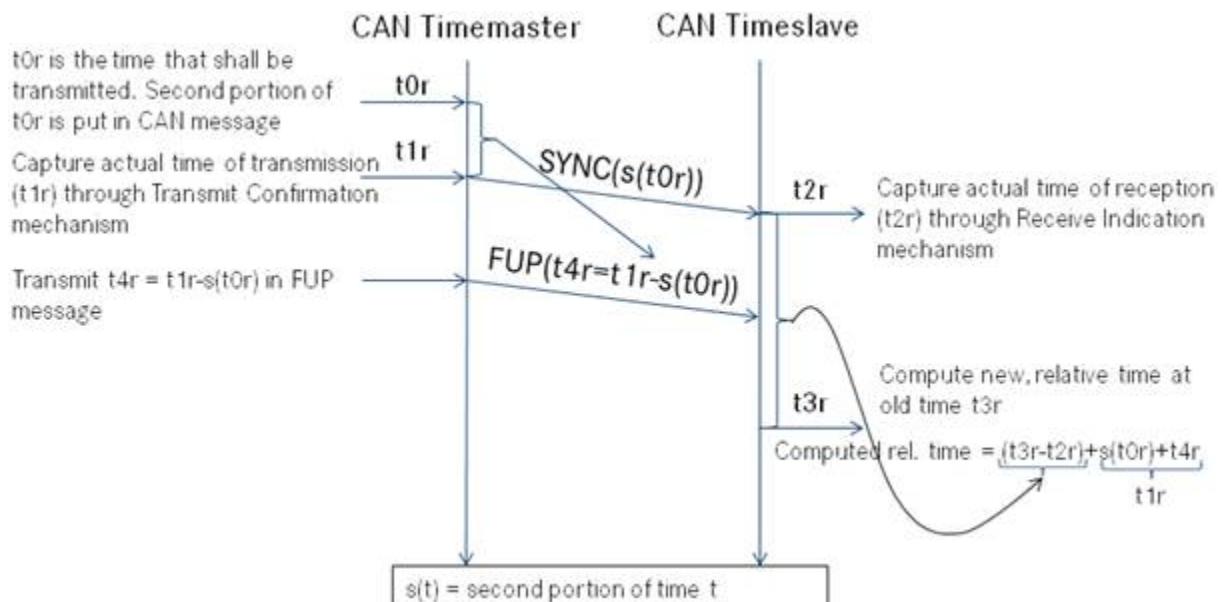

**Figure 1.1: CAN Time Synchronization Mechanism**

In addition, the [CanTSyn](#) module supports the distribution of time information over CAN buses with security. The figure below shows the time provider modules interface with the security modules in the AUTOSAR Layered Architecture.

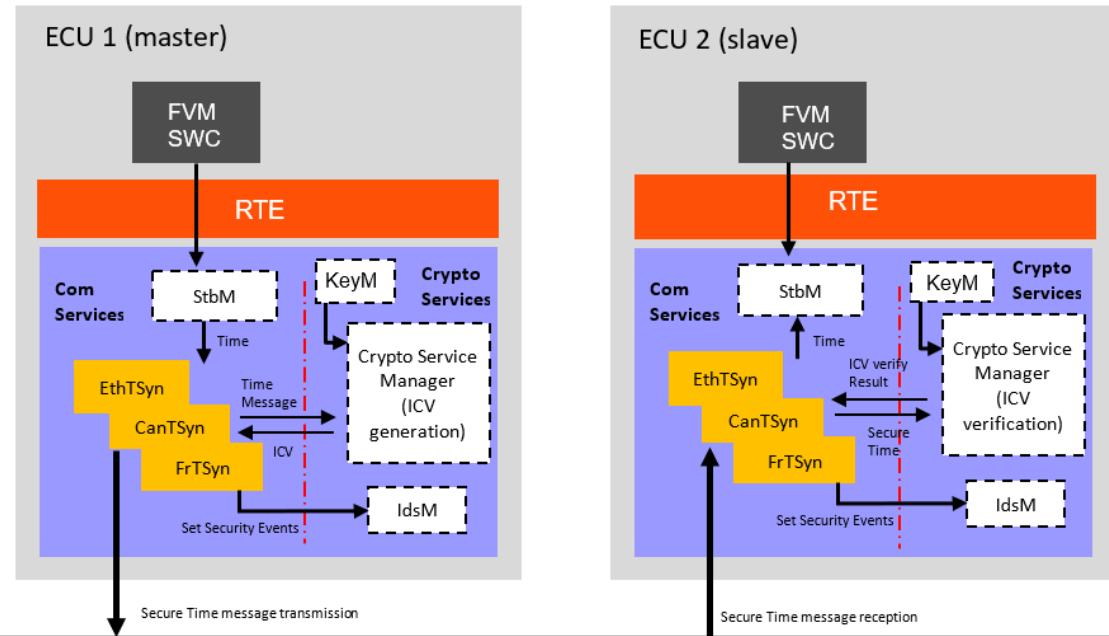

**Figure 1.2: Timesync modules interface with security modules in the AUTOSAR Layered Architecture**

## 2 Acronyms and Abbreviations

This section lists module local abbreviations and definitions. For additional Time Synchronization related abbreviations and definitions refer to chapter 3 in the RS Time Synchronization [1]. For general terms and abbreviations refer to the AUTOSAR Glossary [2].

Abbreviation	Description
GTM	Global Time Master
BswM	BSW Mode Manager module
<Bus>TSyn	Bus specific Time Synchronization module
CAN FD	Controller Area Network (CAN) - Flexible Data Rate
CanTSyn	Time Synchronization over CAN module
CRC	Cyclic Redundancy Checksum
CSM	Crypto Service Manager
Debounce Time	Minimum gap between two TX messages with the same PDU
Det	Default Error Tracer module
DLC	Data Length Code
DoS	Denial of Service
CanIf	CAN interface module
FUP message	Follow-Up message
FV	Freshness Value
FVM	Freshness Value Manager
ICV	Integrity Check Value
MAC	Message Authentication Code
OFNS message	Offset adjustment message
OFS message	Offset Synchronization message
OVS	Overflow Seconds value (field in FUP message)
SC	Sequence Counter in Time Synchronization messages
SGW	"Synchronized to Gateway" state of Time Synchronization
StbM	Synchronized Time-Base Manager
SYNC message	Time Synchronization message
Timesync	Time Synchronization

## 3 Related documentation

### 3.1 Input documents & related standards and norms

- [1] Requirements on Time Synchronization  
AUTOSAR\_FO\_RS\_TimeSync
- [2] Glossary  
AUTOSAR\_FO\_TR\_Glossary
- [3] General Specification of Basic Software Modules  
AUTOSAR\_CP\_SWS\_BSWGeneral
- [4] General Requirements on Basic Software Modules  
AUTOSAR\_CP\_SRS\_BSWGeneral
- [5] Specification of Synchronized Time-Base Manager  
AUTOSAR\_CP\_SWS\_SynchronizedTimeBaseManager
- [6] Specification of CRC Routines  
AUTOSAR\_CP\_SWS\_CRCLibrary
- [7] Specification of Crypto Service Manager  
AUTOSAR\_CP\_SWS\_CryptoServiceManager
- [8] Specification of Intrusion Detection System Manager  
AUTOSAR\_CP\_SWS\_IntrusionDetectionSystemManager

### 3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [3, SWS BSW General], which is also valid for [CanTSyn](#).

Thus, the General Specification on Basic Software (SWS BSW General) shall be considered additionally and as required specification for [CanTSyn](#).

## 4 Constraints and assumptions

### 4.1 Limitations

1. The Time Base in the SYNC and OFS messages is limited to 32 bit, wherefore the maximum supported time value is 4294967295 seconds ( $2^{32}-1$ ).
2. Time Masters, Time Gateways and Time Slaves shall work with a Time Base reference clock with a worst-case accuracy of  $2\mu\text{s}$ .
3. The authentication protection mechanism of the time is not supported on classic CAN busses, due to below reasons.
  - The authentication protection mechanism is complex to achieve on classic CAN busses due to payload limitation and any solution incorporated will leave the security vulnerabilities (e.g., cryptographic attacks, DoS).
  - Today's ECUs in vehicle E/E architecture supports both classic CAN and CanFD channels.

### 4.2 Applicability to car domains

Automotive systems requiring a common Time Base for ECUs regardless of which bus system the ECUs are connected to.

## 5 Dependencies to other modules

The Time Synchronization over CAN ([CanTSyn](#)) has interfaces towards the Synchronized Time-Base Manager ([StbM](#)), the CAN Interface ([CanIf](#)), the BSW Mode Manager ([BswM](#)), the Crypto Service Manager ([Csm](#)) and the Default Error Tracer ([Det](#)).

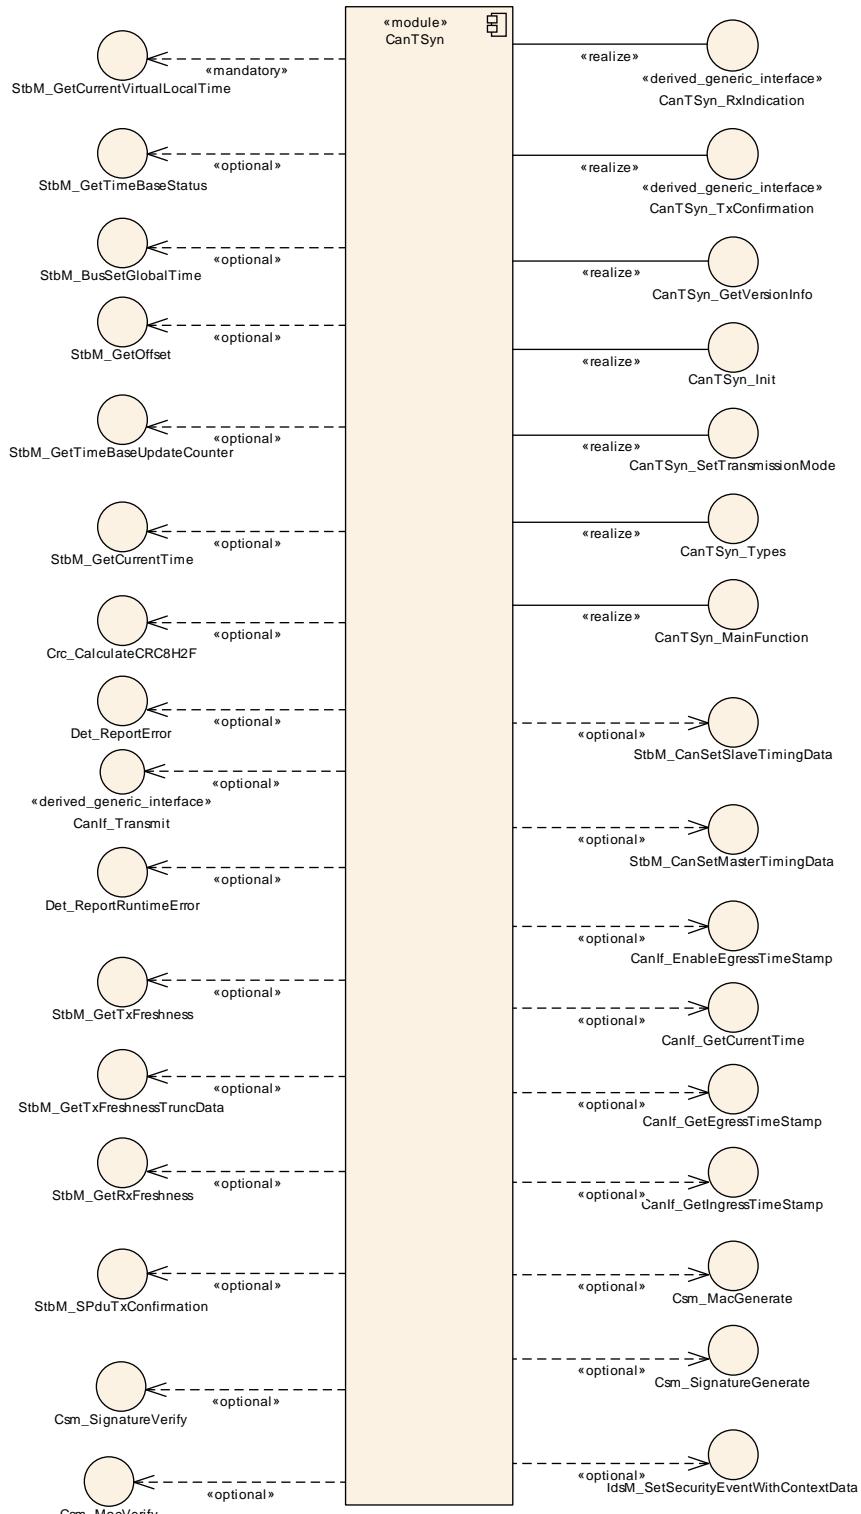


Figure 5.1: Module dependencies of the [CanTSyn](#) module

- StbM -
  - Get and set the current time value
  - Get FV from FVM
- CanIf - Receiving and transmitting messages
- BswM - Coordination of network access (via [CanTSyn\\_SetTransmission-Mode](#))
- DET - Reporting of development errors
- CSM -
  - Generation of ICV for Time Master
  - Verification of ICV for Time Slave
- IdsM - Reporting of security events

## 5.1 File structure

### 5.1.1 Code file structure

For details, refer to the section 5.1.6 "Code file structure" of the SWS BSW General [3].

### 5.1.2 Header file structure

For details, refer to the section 5.1.7 "Header file structure" of the SWS BSW General [3].

## 6 Requirements Tracing

The following tables reference the requirements specified in [1, RS TimeSync] and [4, SRS BSWGeneral] and links to the fulfillment of these. Please note that if column "Satisfied by" is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[RS_Ids_00810]	Basic SW security events	[SWS_CanTSyn_00201] [SWS_CanTSyn_00204] [SWS_CanTSyn_00205]
[RS_TS_00003]	The TS shall initialize the Local Time Base with a configurable startup value	[SWS_CanTSyn_00003]
[RS_TS_00004]	The Implementation of Time Synchronization shall initialize the Global Time Base with a configurable startup value.	[SWS_CanTSyn_00003]
[RS_TS_00034]	The Implementation of Time Synchronization shall provide measurement data to the application	[SWS_CanTSyn_00137] [SWS_CanTSyn_00138] [SWS_CanTSyn_00139] [SWS_CanTSyn_00140] [SWS_CanTSyn_00141] [SWS_CanTSyn_00142]
[RS_TS_20031]	The Timesync over CAN module shall trigger Time Base Synchronization transmission	[SWS_CanTSyn_00025] [SWS_CanTSyn_00026] [SWS_CanTSyn_00028] [SWS_CanTSyn_00032] [SWS_CanTSyn_00035] [SWS_CanTSyn_00036] [SWS_CanTSyn_00038] [SWS_CanTSyn_00043] [SWS_CanTSyn_00044] [SWS_CanTSyn_00117] [SWS_CanTSyn_00118] [SWS_CanTSyn_00119] [SWS_CanTSyn_00120] [SWS_CanTSyn_00121] [SWS_CanTSyn_00122] [SWS_CanTSyn_00123] [SWS_CanTSyn_00124] [SWS_CanTSyn_00125] [SWS_CanTSyn_00136] [SWS_CanTSyn_00220] [SWS_CanTSyn_00228] [SWS_CanTSyn_00229] [SWS_CanTSyn_00230] [SWS_CanTSyn_00231] [SWS_CanTSyn_00232] [SWS_CanTSyn_00233]
[RS_TS_20032]	The Timesync over CAN module shall provide the Time Base after reception of a valid Timesync/TS messages	[SWS_CanTSyn_00064] [SWS_CanTSyn_00072] [SWS_CanTSyn_00133] [SWS_CanTSyn_00135]
[RS_TS_20033]	The Timesync over CAN module shall support means to protect the Time synchronization protocol	[SWS_CanTSyn_00007] [SWS_CanTSyn_00015] [SWS_CanTSyn_00016] [SWS_CanTSyn_00017] [SWS_CanTSyn_00018] [SWS_CanTSyn_00031] [SWS_CanTSyn_00041] [SWS_CanTSyn_00048] [SWS_CanTSyn_00049] [SWS_CanTSyn_00050] [SWS_CanTSyn_00054] [SWS_CanTSyn_00055] [SWS_CanTSyn_00056] [SWS_CanTSyn_00111] [SWS_CanTSyn_00112] [SWS_CanTSyn_00126] [SWS_CanTSyn_00127] [SWS_CanTSyn_00128] [SWS_CanTSyn_00129] [SWS_CanTSyn_00221] [SWS_CanTSyn_00222] [SWS_CanTSyn_00223] [SWS_CanTSyn_00224] [SWS_CanTSyn_00225] [SWS_CanTSyn_00226] [SWS_CanTSyn_00227]





Requirement	Description	Satisfied by
<b>[RS_TS_20034]</b>	The Timesync over CAN module shall detect and handle timeout and integrity errors in the Time Synchronization protocol	<a href="#">[SWS_CanTSyn_00027]</a> <a href="#">[SWS_CanTSyn_00033]</a> <a href="#">[SWS_CanTSyn_00037]</a> <a href="#">[SWS_CanTSyn_00042]</a> <a href="#">[SWS_CanTSyn_00057]</a> <a href="#">[SWS_CanTSyn_00060]</a> <a href="#">[SWS_CanTSyn_00061]</a> <a href="#">[SWS_CanTSyn_00062]</a> <a href="#">[SWS_CanTSyn_00063]</a> <a href="#">[SWS_CanTSyn_00064]</a> <a href="#">[SWS_CanTSyn_00065]</a> <a href="#">[SWS_CanTSyn_00068]</a> <a href="#">[SWS_CanTSyn_00071]</a> <a href="#">[SWS_CanTSyn_00072]</a> <a href="#">[SWS_CanTSyn_00076]</a> <a href="#">[SWS_CanTSyn_00077]</a> <a href="#">[SWS_CanTSyn_00078]</a> <a href="#">[SWS_CanTSyn_00079]</a> <a href="#">[SWS_CanTSyn_00080]</a> <a href="#">[SWS_CanTSyn_00084]</a> <a href="#">[SWS_CanTSyn_00085]</a> <a href="#">[SWS_CanTSyn_00087]</a> <a href="#">[SWS_CanTSyn_00088]</a> <a href="#">[SWS_CanTSyn_00109]</a> <a href="#">[SWS_CanTSyn_00110]</a> <a href="#">[SWS_CanTSyn_00113]</a> <a href="#">[SWS_CanTSyn_00114]</a> <a href="#">[SWS_CanTSyn_00115]</a> <a href="#">[SWS_CanTSyn_00116]</a> <a href="#">[SWS_CanTSyn_00133]</a> <a href="#">[SWS_CanTSyn_00143]</a> <a href="#">[SWS_CanTSyn_00221]</a> <a href="#">[SWS_CanTSyn_00222]</a> <a href="#">[SWS_CanTSyn_00223]</a> <a href="#">[SWS_CanTSyn_00224]</a> <a href="#">[SWS_CanTSyn_00225]</a> <a href="#">[SWS_CanTSyn_00226]</a> <a href="#">[SWS_CanTSyn_00227]</a>
<b>[RS_TS_20035]</b>	The Timesync over CAN module shall support a protocol for precise time measurement and synchronization over CAN	<a href="#">[SWS_CanTSyn_00008]</a> <a href="#">[SWS_CanTSyn_00010]</a> <a href="#">[SWS_CanTSyn_00011]</a> <a href="#">[SWS_CanTSyn_00015]</a> <a href="#">[SWS_CanTSyn_00016]</a> <a href="#">[SWS_CanTSyn_00017]</a> <a href="#">[SWS_CanTSyn_00018]</a> <a href="#">[SWS_CanTSyn_00025]</a> <a href="#">[SWS_CanTSyn_00026]</a> <a href="#">[SWS_CanTSyn_00027]</a> <a href="#">[SWS_CanTSyn_00028]</a> <a href="#">[SWS_CanTSyn_00029]</a> <a href="#">[SWS_CanTSyn_00030]</a> <a href="#">[SWS_CanTSyn_00031]</a> <a href="#">[SWS_CanTSyn_00032]</a> <a href="#">[SWS_CanTSyn_00033]</a> <a href="#">[SWS_CanTSyn_00043]</a> <a href="#">[SWS_CanTSyn_00044]</a> <a href="#">[SWS_CanTSyn_00047]</a> <a href="#">[SWS_CanTSyn_00048]</a> <a href="#">[SWS_CanTSyn_00049]</a> <a href="#">[SWS_CanTSyn_00050]</a> <a href="#">[SWS_CanTSyn_00054]</a> <a href="#">[SWS_CanTSyn_00055]</a> <a href="#">[SWS_CanTSyn_00056]</a> <a href="#">[SWS_CanTSyn_00057]</a> <a href="#">[SWS_CanTSyn_00058]</a> <a href="#">[SWS_CanTSyn_00059]</a> <a href="#">[SWS_CanTSyn_00060]</a> <a href="#">[SWS_CanTSyn_00061]</a> <a href="#">[SWS_CanTSyn_00062]</a> <a href="#">[SWS_CanTSyn_00063]</a> <a href="#">[SWS_CanTSyn_00075]</a> <a href="#">[SWS_CanTSyn_00076]</a> <a href="#">[SWS_CanTSyn_00078]</a> <a href="#">[SWS_CanTSyn_00079]</a> <a href="#">[SWS_CanTSyn_00080]</a> <a href="#">[SWS_CanTSyn_00084]</a> <a href="#">[SWS_CanTSyn_00085]</a> <a href="#">[SWS_CanTSyn_00086]</a> <a href="#">[SWS_CanTSyn_00087]</a> <a href="#">[SWS_CanTSyn_00090]</a> <a href="#">[SWS_CanTSyn_00091]</a> <a href="#">[SWS_CanTSyn_00092]</a> <a href="#">[SWS_CanTSyn_00093]</a> <a href="#">[SWS_CanTSyn_00094]</a> <a href="#">[SWS_CanTSyn_00095]</a> <a href="#">[SWS_CanTSyn_00096]</a> <a href="#">[SWS_CanTSyn_00099]</a> <a href="#">[SWS_CanTSyn_00102]</a> <a href="#">[SWS_CanTSyn_00103]</a> <a href="#">[SWS_CanTSyn_00105]</a> <a href="#">[SWS_CanTSyn_00106]</a> <a href="#">[SWS_CanTSyn_00109]</a> <a href="#">[SWS_CanTSyn_00110]</a> <a href="#">[SWS_CanTSyn_00144]</a> <a href="#">[SWS_CanTSyn_00145]</a> <a href="#">[SWS_CanTSyn_00146]</a> <a href="#">[SWS_CanTSyn_00147]</a> <a href="#">[SWS_CanTSyn_00148]</a> <a href="#">[SWS_CanTSyn_00149]</a> <a href="#">[SWS_CanTSyn_00150]</a> <a href="#">[SWS_CanTSyn_00151]</a> <a href="#">[SWS_CanTSyn_00152]</a> <a href="#">[SWS_CanTSyn_00153]</a> <a href="#">[SWS_CanTSyn_00154]</a> <a href="#">[SWS_CanTSyn_00206]</a>





Requirement	Description	Satisfied by
[RS_TS_20036]	The Timesync over CAN module shall use the time measurement and synchronization protocol to transmit and receive an offset value	<a href="#">[SWS_CanTSyn_00030]</a> <a href="#">[SWS_CanTSyn_00035]</a> <a href="#">[SWS_CanTSyn_00036]</a> <a href="#">[SWS_CanTSyn_00037]</a> <a href="#">[SWS_CanTSyn_00038]</a> <a href="#">[SWS_CanTSyn_00039]</a> <a href="#">[SWS_CanTSyn_00040]</a> <a href="#">[SWS_CanTSyn_00041]</a> <a href="#">[SWS_CanTSyn_00042]</a> <a href="#">[SWS_CanTSyn_00043]</a> <a href="#">[SWS_CanTSyn_00044]</a> <a href="#">[SWS_CanTSyn_00046]</a> <a href="#">[SWS_CanTSyn_00048]</a> <a href="#">[SWS_CanTSyn_00049]</a> <a href="#">[SWS_CanTSyn_00050]</a> <a href="#">[SWS_CanTSyn_00054]</a> <a href="#">[SWS_CanTSyn_00055]</a> <a href="#">[SWS_CanTSyn_00056]</a> <a href="#">[SWS_CanTSyn_00065]</a> <a href="#">[SWS_CanTSyn_00066]</a> <a href="#">[SWS_CanTSyn_00067]</a> <a href="#">[SWS_CanTSyn_00068]</a> <a href="#">[SWS_CanTSyn_00069]</a> <a href="#">[SWS_CanTSyn_00070]</a> <a href="#">[SWS_CanTSyn_00071]</a> <a href="#">[SWS_CanTSyn_00074]</a> <a href="#">[SWS_CanTSyn_00077]</a> <a href="#">[SWS_CanTSyn_00078]</a> <a href="#">[SWS_CanTSyn_00079]</a> <a href="#">[SWS_CanTSyn_00080]</a> <a href="#">[SWS_CanTSyn_00085]</a> <a href="#">[SWS_CanTSyn_00086]</a> <a href="#">[SWS_CanTSyn_00087]</a> <a href="#">[SWS_CanTSyn_00111]</a> <a href="#">[SWS_CanTSyn_00112]</a> <a href="#">[SWS_CanTSyn_00113]</a> <a href="#">[SWS_CanTSyn_00114]</a> <a href="#">[SWS_CanTSyn_00126]</a> <a href="#">[SWS_CanTSyn_00127]</a> <a href="#">[SWS_CanTSyn_00128]</a> <a href="#">[SWS_CanTSyn_00129]</a> <a href="#">[SWS_CanTSyn_00206]</a>
[RS_TS_20037]	The Timesync over CAN module shall support user specific data within the time measurement and synchronization protocol	<a href="#">[SWS_CanTSyn_00011]</a> <a href="#">[SWS_CanTSyn_00012]</a> <a href="#">[SWS_CanTSyn_00013]</a> <a href="#">[SWS_CanTSyn_00014]</a>
[RS_TS_20038]	The Timesync over CAN module configuration shall allow the Implementation of Time Synchronization for CAN to support different roles for a Time Base	<a href="#">[SWS_CanTSyn_00108]</a> <a href="#">[SWS_CanTSyn_00135]</a>
[RS_TS_20068]	The Timesync over CAN module shall support classic CAN and CAN FD	<a href="#">[SWS_CanTSyn_00010]</a> <a href="#">[SWS_CanTSyn_00015]</a> <a href="#">[SWS_CanTSyn_00016]</a> <a href="#">[SWS_CanTSyn_00017]</a> <a href="#">[SWS_CanTSyn_00018]</a> <a href="#">[SWS_CanTSyn_00036]</a> <a href="#">[SWS_CanTSyn_00041]</a> <a href="#">[SWS_CanTSyn_00055]</a> <a href="#">[SWS_CanTSyn_00071]</a> <a href="#">[SWS_CanTSyn_00072]</a> <a href="#">[SWS_CanTSyn_00077]</a> <a href="#">[SWS_CanTSyn_00085]</a> <a href="#">[SWS_CanTSyn_00111]</a> <a href="#">[SWS_CanTSyn_00112]</a> <a href="#">[SWS_CanTSyn_00130]</a> <a href="#">[SWS_CanTSyn_00131]</a> <a href="#">[SWS_CanTSyn_00132]</a>
[RS_TS_20070]	The Timesync over CAN module shall support hardware and software timestamping	<a href="#">[SWS_CanTSyn_00144]</a> <a href="#">[SWS_CanTSyn_00147]</a> <a href="#">[SWS_CanTSyn_00150]</a> <a href="#">[SWS_CanTSyn_00152]</a> <a href="#">[SWS_CanTSyn_00153]</a>
[RS_TS_20073]	The Timesync over CAN module shall support means to secure the Time Synchronization protocol	<a href="#">[SWS_CanTSyn_00010]</a> <a href="#">[SWS_CanTSyn_00056]</a> <a href="#">[SWS_CanTSyn_00086]</a> <a href="#">[SWS_CanTSyn_00087]</a> <a href="#">[SWS_CanTSyn_00155]</a> <a href="#">[SWS_CanTSyn_00156]</a> <a href="#">[SWS_CanTSyn_00157]</a> <a href="#">[SWS_CanTSyn_00158]</a> <a href="#">[SWS_CanTSyn_00159]</a> <a href="#">[SWS_CanTSyn_00160]</a> <a href="#">[SWS_CanTSyn_00161]</a> <a href="#">[SWS_CanTSyn_00162]</a> <a href="#">[SWS_CanTSyn_00163]</a> <a href="#">[SWS_CanTSyn_00164]</a> <a href="#">[SWS_CanTSyn_00165]</a> <a href="#">[SWS_CanTSyn_00166]</a> <a href="#">[SWS_CanTSyn_00167]</a> <a href="#">[SWS_CanTSyn_00168]</a> <a href="#">[SWS_CanTSyn_00169]</a> <a href="#">[SWS_CanTSyn_00170]</a> <a href="#">[SWS_CanTSyn_00171]</a> <a href="#">[SWS_CanTSyn_00172]</a> <a href="#">[SWS_CanTSyn_00173]</a> <a href="#">[SWS_CanTSyn_00174]</a> <a href="#">[SWS_CanTSyn_00175]</a> <a href="#">[SWS_CanTSyn_00176]</a> <a href="#">[SWS_CanTSyn_00177]</a> <a href="#">[SWS_CanTSyn_00178]</a> <a href="#">[SWS_CanTSyn_00179]</a> <a href="#">[SWS_CanTSyn_00180]</a> <a href="#">[SWS_CanTSyn_00181]</a> <a href="#">[SWS_CanTSyn_00182]</a> <a href="#">[SWS_CanTSyn_00183]</a> <a href="#">[SWS_CanTSyn_00184]</a> <a href="#">[SWS_CanTSyn_00185]</a> <a href="#">[SWS_CanTSyn_00186]</a> <a href="#">[SWS_CanTSyn_00187]</a> <a href="#">[SWS_CanTSyn_00188]</a>





Requirement	Description	Satisfied by
		<a href="#">[SWS_CanTSyn_00189]</a> <a href="#">[SWS_CanTSyn_00190]</a> <a href="#">[SWS_CanTSyn_00191]</a> <a href="#">[SWS_CanTSyn_00193]</a> <a href="#">[SWS_CanTSyn_00194]</a> <a href="#">[SWS_CanTSyn_00195]</a> <a href="#">[SWS_CanTSyn_00196]</a> <a href="#">[SWS_CanTSyn_00197]</a> <a href="#">[SWS_CanTSyn_00198]</a> <a href="#">[SWS_CanTSyn_00199]</a> <a href="#">[SWS_CanTSyn_00200]</a> <a href="#">[SWS_CanTSyn_00206]</a> <a href="#">[SWS_CanTSyn_00207]</a> <a href="#">[SWS_CanTSyn_00208]</a> <a href="#">[SWS_CanTSyn_00209]</a> <a href="#">[SWS_CanTSyn_00210]</a> <a href="#">[SWS_CanTSyn_00211]</a> <a href="#">[SWS_CanTSyn_00212]</a> <a href="#">[SWS_CanTSyn_00213]</a> <a href="#">[SWS_CanTSyn_00214]</a> <a href="#">[SWS_CanTSyn_00215]</a> <a href="#">[SWS_CanTSyn_00216]</a> <a href="#">[SWS_CanTSyn_00217]</a> <a href="#">[SWS_CanTSyn_00218]</a> <a href="#">[SWS_CanTSyn_00219]</a> <a href="#">[SWS_CanTSyn_91002]</a> <a href="#">[SWS_CanTSyn_91003]</a> <a href="#">[SWS_CanTSyn_CONSTR_00001]</a> <a href="#">[SWS_CanTSyn_CONSTR_00002]</a>
[SRS_BSW_00323]	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	<a href="#">[SWS_CanTSyn_00088]</a> <a href="#">[SWS_CanTSyn_00097]</a> <a href="#">[SWS_CanTSyn_00100]</a> <a href="#">[SWS_CanTSyn_00134]</a> <a href="#">[SWS_CanTSyn_00202]</a> <a href="#">[SWS_CanTSyn_00203]</a>
[SRS_BSW_00337]	Classification of development errors	<a href="#">[SWS_CanTSyn_00097]</a> <a href="#">[SWS_CanTSyn_00100]</a> <a href="#">[SWS_CanTSyn_00134]</a> <a href="#">[SWS_CanTSyn_00202]</a> <a href="#">[SWS_CanTSyn_00203]</a>
[SRS_BSW_00385]	List possible error notifications	<a href="#">[SWS_CanTSyn_00089]</a> <a href="#">[SWS_CanTSyn_91001]</a>

**Table 6.1: Requirements Tracing**

## 7 Functional specification

This chapter defines the behavior of the Time Synchronization over CAN. The API of the module is defined in chapter [8](#), while the configuration is defined in chapter [10](#).

### 7.1 Overview

The Time Synchronization over CAN is responsible to realize the CAN specific Time Synchronization protocol.

Time Synchronization principles and common wording is described in the SWS Synchronized Time-Base Manager [\[5\]](#) and RS Time Synchronization [\[1\]](#).

### 7.2 Module Handling

This section contains description of auxiliary functionality of the Time Synchronization over CAN.

**[SWS\_CanTSyn\_00135]** [If CanTSyn calls an API of the [StbM](#), it shall use the Time Base ID of the Time Base referenced via the parameter [CanTSynSynchronized-TimeBaseRef](#) of the corresponding Time Domain.] ([RS\\_TS\\_20032](#), [RS\\_TS\\_20038](#))

#### 7.2.1 Interrupt Handling

When transmitting or receiving a SYNC message, the current value of the Virtual Local Time needs to be captured in the RX indication / TX confirmation callbacks

- either in interrupt mode in context of the RX / TX interrupt
- or in polling mode in the main function (Note: it is strongly recommended not to use polling mode for Time Slaves).

Any delay between the occurrence of the interrupt itself and the determination of the current Virtual Local Time worsens the precision of either the transmitted or received Time Base.

Therefore, it is inevitable that these RX indication / TX confirmation callbacks establish a protection against interruptions immediately after being called (if called in context of the RX / TX interrupt with interrupt nesting disabled, this is implicitly ensured by the controller).

Thereafter only the necessary checks shall be made to determine that the message is a SYNC message (and to determine the Time Base ID if necessary). Once the Time Base ID and the SYNC message type are confirmed the current value of the Virtual Local Time is obtained from a function call to the [StbM](#) (still in the context of locked

interrupts). Afterwards the interruption protection can be removed without having a negative impact on the precision.

As a consequence it might be possible that a snapshot of the Virtual Local Time is taken although the subsequent frame checks (e.g., [CRC](#) validation, [SC](#) validation) might fail and thus the snapshot becomes superfluous.

## 7.2.2 Initialization

The Time Synchronization over CAN is initialized via [CanTSyn\\_Init](#). Except for [CanTSyn\\_GetVersionInfo](#) and [CanTSyn\\_Init](#), the API functions of the Time Synchronization over CAN may only be called when the module has been properly initialized.

**[SWS\_CanTSyn\_00003]** [A call to [CanTSyn\\_Init](#) initializes all internal variables and sets the Time Synchronization over CAN to the initialized state.  
]  
[\(RS\\_TS\\_00003, RS\\_TS\\_00004\)](#)

**[SWS\_CanTSyn\_00007]** [The Sequence Counter ([SC](#)) shall be initialized with 0.]  
[\(RS\\_TS\\_20033\)](#)

## 7.2.3 Error Handling

**[SWS\_CanTSyn\_00088]** [On errors and exceptions, the CanTSyn module shall not modify its current module state but shall simply report the error event.]  
[\(RS\\_TS\\_20034, SRS\\_BSW\\_00323\)](#)

## 7.3 Message Format

SYNC, FUP, OFS and OFNS messages are assigned to a dedicated message type "TimeSync".

SYNC, FUP, OFS and OFNS messages of the same Time Domain share the same CAN ID by using a multiplexed signal group. For different Time Domains the same CAN ID may be used if Timesync messages are sent by the same Time Master or Time Gateway. For different Time Domains different CAN IDs shall be used if Timesync messages are sent by different Time Masters or Time Gateways. The multiplexer is located at byte 0, named as [Type](#).

The usage of a [CRC](#) is optional. To ensure a great variability between several time observing units, the configuration decides of how to handle CRC protected Timesync messages if the receiver does not support the CRC calculation. Hence it might be possible, that a receiver is just using the given Time Base value without evaluating the [CRC](#).

SYNC, FUP, OFS and OFNS messages can be secured by [ICV](#), that provides the integrity and authenticity protection of these messages. The authentication of time is supported for extended CAN only.

The usage of a [ICV](#) is optional. To ensure a great variability between several time observing units, the configuration decides on how to handle ICV protected Time Synchronization messages if the receiver does not support the [ICV](#) calculation. Hence it might be possible, that a receiver is just using the given Time Base value without evaluating the [ICV](#).

To ensure the greater performance of the system, the [ICV](#) is included only in FUP message. However, the data used for [ICV](#) calculation includes the payload of SYNC and FUP messages. Similarly for the offset messages, the [ICV](#) is included in extended OFS message.

**[SWS\_CanTSyn\_00008]** [The byte order for time value signals in Time Synchronization messages is "Big Endian".] ([RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00010]** [For classic CAN the [DLC](#) of SYNC, FUP, OFS and OFNS messages shall be 8.

For [CAN FD](#), if

- [CanTSynUseExtendedMsgFormat](#) is TRUE
- and [CanTSynGlobalTimeTxIcvSecured](#) is [ICV\\_NOT\\_SUPPORTED](#)
- and [CanTSynRxIcvVerificationType](#) is [ICV\\_NOT\\_VERIFIED](#),

the [DLC](#) of SYNC, FUP, OFS and OFNS messages shall be 16.

For [CAN FD](#), if

- [CanTSynUseExtendedMsgFormat](#) is TRUE
- and
  - [CanTSynGlobalTimeTxIcvSecured](#) is [ICV\\_SUPPORTED](#)
  - or [CanTSynRxIcvVerificationType](#) is [ICV\\_IGNORED](#)
  - or [CanTSynRxIcvVerificationType](#) is [ICV\\_OPTIONAL](#)
  - or [CanTSynRxIcvVerificationType](#) is [ICV\\_VERIFIED](#),

the [DLC](#) of SYNC, FUP, OFS and OFNS messages shall be variable up to 64.] ([RS\\_TS\\_20035](#), [RS\\_TS\\_20068](#), [RS\\_TS\\_20073](#))

Depending on the message type and whether CRC protection and ICV verification is supported, the CanTSyn defines the message type field values as given in [Table 7.1](#). For details of the message layout refer to the subsequent sections. What is obvious from the table is, that SYNC, normal OFS and OFNS message are never ICV secured.

Message Type Field Value	Message Type	CRC protected	ICV secured	Message Layout
--------------------------	--------------	---------------	-------------	----------------

0x10	SYNC	no	no	[SWS_CanTSyn_00015]
0x20	SYNC	yes	no	[SWS_CanTSyn_00017]
0x18	FUP	no	no	[SWS_CanTSyn_00016]
0x28	FUP	yes	no	[SWS_CanTSyn_00018]
0x78	FUP	no	yes	[SWS_CanTSyn_00155]
0x88	FUP	yes	yes	[SWS_CanTSyn_00156]
0x34	OFS	no	no	[SWS_CanTSyn_00126]
0x44	OFS	yes	no	[SWS_CanTSyn_00127]
0x3C	OFNS	no	no	[SWS_CanTSyn_00128]
0x4C	OFNS	yes	no	[SWS_CanTSyn_00129]
0x54	Extended OFS	no	no	[SWS_CanTSyn_00111]
0x64	Extended OFS	yes	no	[SWS_CanTSyn_00112]
0x94	Extended OFS	no	yes	[SWS_CanTSyn_00157]
0xA4	Extended OFS	yes	yes	[SWS_CanTSyn_00158]

**Table 7.1: Message Types supported by CanTSyn**

**[SWS\_CanTSyn\_00011]** [Depending on its type Time Synchronization messages may contain User Data according to the given message format.

] ([RS\\_TS\\_20035](#), [RS\\_TS\\_20037](#))

**[SWS\_CanTSyn\_00012]** [User Data shall be read consistently from incoming Time Synchronization messages that contain User Data Fields.] ([RS\\_TS\\_20037](#))

**[SWS\_CanTSyn\_00013]** [User Data shall be written consistently to outgoing Time Synchronization messages that contain User Data Fields.

If the number of User Data Fields in a Time Synchronization message is greater than the number of User Data Bytes provided by the [StbM](#), the remaining User Data Fields shall be set to 0 (default value).] ([RS\\_TS\\_20037](#))

**[SWS\_CanTSyn\_00014]** [User Data shall be mapped to the [StbM\\_UserDataType](#), where the byte number given in the message and by the [StbM\\_UserDataType](#) shall match (User Byte 0 mapped to [StbM\\_UserDataType.userByte0](#), etc.).

[StbM\\_UserDataType.userDataLength](#) shall be set to the Time Synchronization message type specific number of User Bytes.] ([RS\\_TS\\_20037](#))

### 7.3.1 SYNC and FUP Message

The message layout of the normal SYNC and FUP messages is defined by the following requirements:

- [[SWS\\_CanTSyn\\_00015](#)]: “SYNC message format - not CRC protected”
- [[SWS\\_CanTSyn\\_00017](#)]: “SYNC message format - CRC protected”
- [[SWS\\_CanTSyn\\_00016](#)]: “FUP message format - not CRC protected, not ICV secured”

- [SWS\_CanTSyn\_00018]: “FUP message format - CRC protected, not ICV secured”
- [SWS\_CanTSyn\_00155]: “FUP message format - not CRC protected, ICV secured”
- [SWS\_CanTSyn\_00156]: “FUP message format - CRC protected, ICV secured”

depending on whether the payload is [CRC](#) protected and/or [ICV](#) secured or not.

**Note:** SYNC messages are not [ICV](#) secured.

#### [SWS\_CanTSyn\_00015] ↗

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x10	
1		User Byte 1	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3		User Byte 0	default: 0	
4-7		SyncTimeSec		32 bit LSB of the 48 bits seconds part of the time
If <a href="#">CanTSynUseExtendedMsgFormat</a> = TRUE:				
8-15		reserved	always 0	

**Table 7.2: SYNC message format - not CRC protected**

」([RS\\_TS\\_20033](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20068](#))

#### [SWS\_CanTSyn\_00017] ↗

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x20	
1		CRC		
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3		User Byte 0	default: 0	
4-7		SyncTimeSec		32 bit LSB of the 48 bits seconds part of the time
If <a href="#">CanTSynUseExtendedMsgFormat</a> = TRUE:				
8-15		reserved	always 0	

**Table 7.3: SYNC message format - CRC protected**

」([RS\\_TS\\_20033](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20068](#))

#### [SWS\_CanTSyn\_00016] ↗

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x18	
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..3	reserved	default: 0	

	2	SGW	SyncToGTM = 0 SyncToSubDomain = 1	
	1..0	OVS		Overflow of seconds
4-7		SyncTimeNSec		32 bit time value in nanoseconds
If <code>CanTSynUseExtendedMsgFormat</code> = TRUE:				
8-15		reserved	always 0	

**Table 7.4: FUP message format - not CRC protected, not ICV secured**

](RS\_TS\_20033, RS\_TS\_20035, RS\_TS\_20068)

[SWS\_CanTSyn\_00018] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x28	
1		CRC		
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..3	reserved	default: 0	
	2	SGW	SyncToGTM = 0 SyncToSubDomain = 1	
	1..0	OVS		Overflow of seconds
4-7		SyncTimeNSec		32 bit time value in nanoseconds
If <code>CanTSynUseExtendedMsgFormat</code> = TRUE:				
8-15		reserved	always 0	

**Table 7.5: FUP message format - CRC protected, not ICV secured**

](RS\_TS\_20033, RS\_TS\_20035, RS\_TS\_20068)

[SWS\_CanTSyn\_00155]{DRAFT} [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x78	
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..3	reserved	default: 0	
	2	SGW	SyncToGTM = 0 SyncToSubDomain = 1	
	1..0	OVS		Overflow of seconds
4-7		SyncTimeNSec		32 bit time value in nanoseconds
8	7	reserved	always 0	
	6..0	FVL	0..64	FV Length in bits
9	7..6	reserved	always 0	
	5..0	ICVL	0..54	ICV Length in bytes
10		FV		FV
10+FVL(in bytes)		ICV		ICV

**Table 7.6: FUP message format - not CRC protected, ICV secured**

]([RS\\_TS\\_20073](#))

[**SWS\_CanTSyn\_00156**]{DRAFT} ]

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x88	
1		CRC		
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..3	reserved	default: 0	
	2	SGW	SyncToGTM = 0 SyncToSubDomain = 1	
	1..0	OVS		Overflow of seconds
4-7		SyncTimeNSec		32 bit time value in nanoseconds
8	7	reserved	always 0	
	6..0	FVL	0..64	FV Length in bits
9	7..6	reserved	always 0	
	5..0	ICVL	0..54	ICV Length in bytes
10		FV		FV
10+FVL(in bytes)		ICV		ICV

**Table 7.7: FUP message format - CRC protected, ICV secured**

]([RS\\_TS\\_20073](#))

### 7.3.2 Offset Messages

Offset messages can be multiplexed with the Time Synchronization messages (using the same PDU, etc.).

For Classic CAN (CAN 2.0) two different Offset messages are used, OFS and OFNS. For both of them there are variants with and without a [CRC](#) field.

For [CAN FD](#), if [CanTSynUseExtendedMsgFormat](#) is TRUE, the content of OFS and OFNS is merged into a single Extended OFS message (variants with and without a [CRC](#) field exist as well). Also, there are variants with and without a [ICV](#) field.

[**SWS\_CanTSyn\_00132**] [[CanTSynUseExtendedMsgFormat](#) shall always be FALSE for CAN 2.0 buses.]([RS\\_TS\\_20068](#))

[**SWS\_CanTSyn\_00130**] [If [CanTSynUseExtendedMsgFormat](#) is FALSE, then the Normal Offset Message Format shall be used, i.e., Offset Messages with message Type 0x34, 0x44, 0x3C and 0x4C.]

]([RS\\_TS\\_20068](#))

**Note:** For Normal Offset Message Format refer to chapter [7.3.2.1](#)

[**SWS\_CanTSyn\_00131**] [If [CanTSynUseExtendedMsgFormat](#) is TRUE, then the Extended Offset Message Format shall be used, i.e., Offset Messages with message

Type 0x54, 0x64, 0x94 and 0xA4.  
 ](RS\_TS\_20068)

**Note:** For Extended Offset Message Format refer to chapter 7.3.2.2

### 7.3.2.1 Normal Offset Messages

The message layout of the normal OFS/OFNS messages is defined by the following requirements:

- [SWS\_CanTSyn\_00126]: “OFS message format - not CRC protected”
- [SWS\_CanTSyn\_00128]: “OFS message format - CRC protected”
- [SWS\_CanTSyn\_00129]: “OFNS message format - CRC protected”
- [SWS\_CanTSyn\_00127]: “OFNS message format - not CRC protected”

depending on whether the payload is CRC protected or not.

**Note:** Normal OFS/OFNS messages are not ICV secured.

[SWS\_CanTSyn\_00126] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x34	
1		User Byte 1	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC		Sequence Counter
3		User Byte 0	default: 0	
4-7		OfsTimeSec		32 bit offset time value in seconds

Table 7.8: OFS message format - not CRC protected

] (RS\_TS\_20033, RS\_TS\_20036)

[SWS\_CanTSyn\_00128] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x44	
1		CRC		
2	7..4	D	0..15	Time Domain Id
	3..0	SC		Sequence Counter
3		User Byte 0	default: 0	
4-7		OfsTimeSec		32 bit offset time value in seconds

Table 7.9: OFS message format - CRC protected

] (RS\_TS\_20033, RS\_TS\_20036)

[SWS\_CanTSyn\_00127] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x3C	
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..1	reserved	default: 0	
	0	SGW	SyncToGTM = 0 SyncToSubDomain = 1	
4-7		OfsTimeNSec		32 bit offset time value in nanoseconds

Table 7.10: OFNS message format - not CRC protected

]([RS\\_TS\\_20033](#), [RS\\_TS\\_20036](#))

[[SWS\\_CanTSyn\\_00129](#)] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x4C	
1		CRC		
2	7..4	D	0..15	Time Domain Id
	3..0	SC		Sequence Counter
3	7..1	reserved	default: 0	
	0	SGW	SyncToGTM = 0 SyncToSubDomain = 1	
4-7		OfsTimeNSec		32 bit offset time value in nanoseconds

Table 7.11: OFNS message format - CRC protected

]([RS\\_TS\\_20033](#), [RS\\_TS\\_20036](#))

### 7.3.2.2 Extended Offset messages

The message layout of Extended OFS messages (i.e., for CAN FD PDUs, if [CanTSynUseExtendedMsgFormat](#) is set to TRUE) is as follows:

- [[SWS\\_CanTSyn\\_00111](#)]: “Extended OFS message format - not CRC protected, not ICV secured”
- [[SWS\\_CanTSyn\\_00112](#)]: “Extended OFS message format - CRC protected, not ICV secured”
- [[SWS\\_CanTSyn\\_00157](#)]: “Extended OFS message format - not CRC protected, ICV secured”
- [[SWS\\_CanTSyn\\_00158](#)]: “Extended OFS message format - CRC protected, ICV secured”

depending on whether the payload is CRC protected and/or ICV secured or not.

A separate OFNS message is not required.

### [SWS\_CanTSyn\_00111] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x54	
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC		Sequence Counter
3	7..1	reserved	default: 0	
	0	SGW	SyncToGTM = 0 SyncToSubDomain = 1	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	default: 0	
7		reserved	default: 0	
8-11		OfsTimeSec		32 bit offset time value in seconds
12-15		OfsTimeNSec		32 bit offset time value in nanoseconds

**Table 7.12: Extended OFS message format - not CRC protected, not ICV secured**

]([RS\\_TS\\_20033](#), [RS\\_TS\\_20036](#), [RS\\_TS\\_20068](#))

### [SWS\_CanTSyn\_00112] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x64	
1		CRC		
2	7..4	D	0..15	Time Domain
	3..0	SC		Sequence Counter
3	7..1	reserved	default: 0	
	0	SGW	SyncToGTM = 0 SyncToSubDomain = 1	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	default: 0	
7		reserved	default: 0	
8-11		OfsTimeSec		32 bit offset time value in seconds
12-15		OfsTimeNSec		32 bit offset time value in nanoseconds

**Table 7.13: Extended OFS message format - CRC protected, not ICV secured**

]([RS\\_TS\\_20033](#), [RS\\_TS\\_20036](#), [RS\\_TS\\_20068](#))

### [SWS\_CanTSyn\_00157]{DRAFT} [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x94	
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id

	3..0	<b>SC</b>		Sequence Counter
3	7..1	reserved	default: 0	
	0	<b>SGW</b>	SyncToGTM = 0 SyncToSubDomain = 1	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	default: 0	
7		reserved	default: 0	
8-11		OfsTimeSec		32 bit offset time value in seconds
12-15		OfsTimeNSec		32 bit offset time value in nanoseconds
16	7	reserved	always 0	
	6..0	FVL	0..64	FV Length in bits
17	7..6	reserved	always 0	
	5..0	ICVL	0..46	ICV Length in bytes
18		FV		FV
18+FVL(in bytes)		ICV		ICV

**Table 7.14: Extended OFS message format - not CRC protected, ICV secured**

](RS\_TS\_20073)

[SWS\_CanTSyn\_00158]{DRAFT} [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0xA4	
1		<b>CRC</b>		
2	7..4	D	0..15	Time Domain
	3..0	<b>SC</b>		Sequence Counter
3	7..1	reserved	default: 0	
	0	<b>SGW</b>	SyncToGTM = 0 SyncToSubDomain = 1	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	default: 0	
7		reserved	default: 0	
8-11		OfsTimeSec		32 bit offset time value in seconds
12-15		OfsTimeNSec		32 bit offset time value in nanoseconds
16	7	reserved	always 0	
	6..0	FVL	0..64	FV Length in bits
17	7..6	reserved	always 0	
	5..0	ICVL	0..46	ICV Length in bytes
18		FV		FV
18+FVL(in bytes)		ICV		ICV

**Table 7.15: Extended OFS message format - CRC protected, ICV secured**

](RS\_TS\_20073)

## 7.4 Acting as Time Master

A Time Master is an entity which is the master for a certain Time Base and which propagates this Time Base to a set of Time Slaves within a certain segment of a communication network, being a source for this Time Base.

If a Time Master is also the owner of the Global Time Base, the Time Base from which all further Time Bases are derived from, then it is the Global Time Master (refer to Figure 7.1). A Time Gateway typically consists of one Time Master port which is connected to one or more Time Slaves. When mapping time entities to real ECUs it has to be noted, that an ECU could be Time Master (or even Global Time Master) for one Time Base and Time Slave for another Time Base.


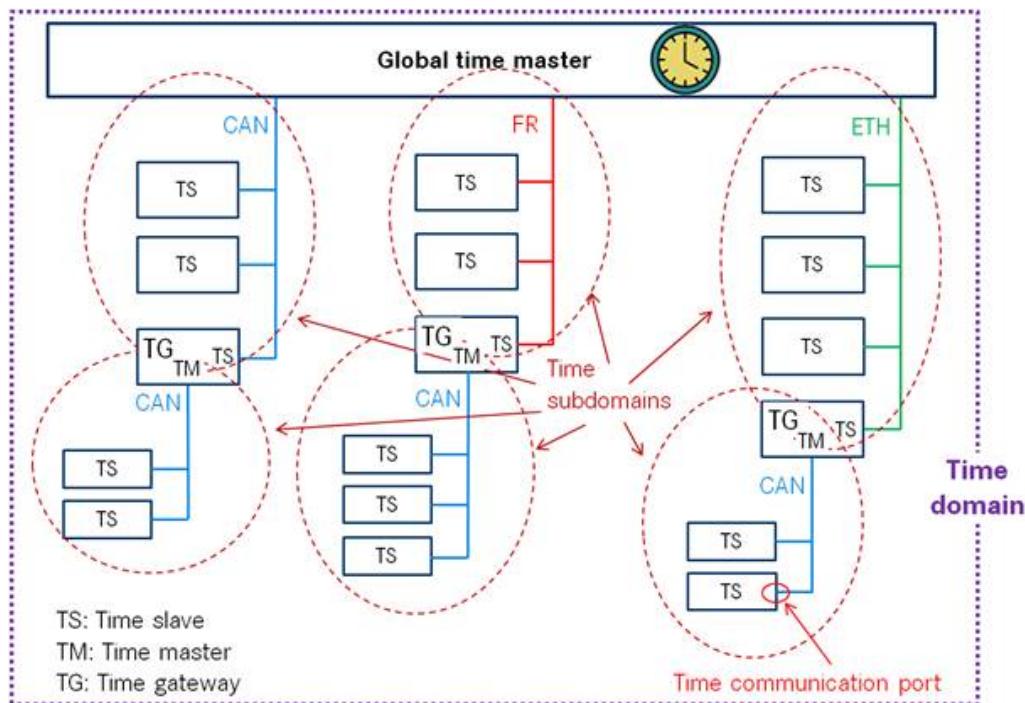


Figure 7.1: Terminology Example

The CanTSyn supports a fan-out of a given Time Base on several CAN busses in parallel. Those busses all belong to the same Time Domain.

**Note:** A separate configuration container `CanTSynGlobalTimeDomain` needs to be configured for each CAN bus on which the CanTSyn transmits the Time Base for a given Time Domain - although those busses all belong to the same Time Domain.

Figure 7.2 illustrates the overall flow how a Time Master triggers the transmission of Timesync messages.

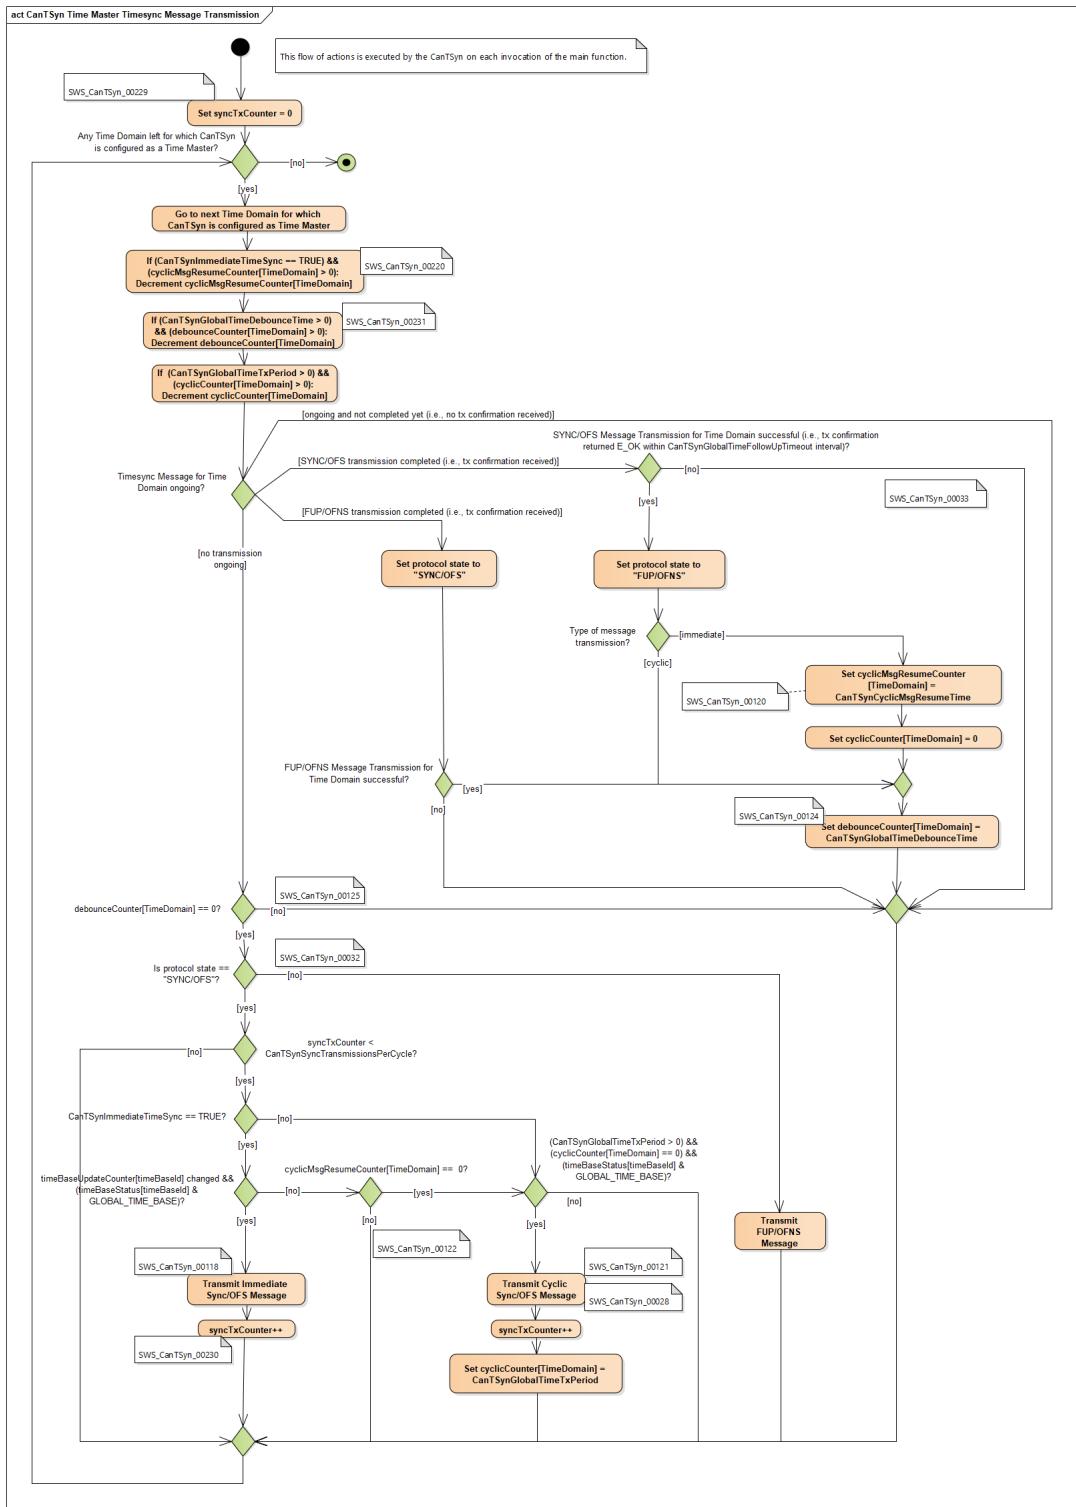

**Figure 7.2: Time Master Timesync Message Transmission**

The details are given in the following subchapters. Also refer to the sequence diagrams [Figure 9.2](#) and [Figure 9.3](#) for the interaction with other BSW modules during transmission of a SYNC/FUP message sequence.

**[SWS\_CanTSyn\_00136]** [A Time Master shall transmit SYNC, FUP, OFS and OFNS messages by calling `CanIf_Transmit` with the Pduld derived via `CanTSynGlobalTimePduRef` of the corresponding Time Domain.] (*RS\_TS\_20031*)

#### 7.4.1 SYNC and FUP message processing

**[SWS\_CanTSyn\_00025]** [A Time Master shall start each Time Synchronization sequence for a Synchronized Time Base with a SYNC message.] (*RS\_TS\_20031, RS\_TS\_20035*)

**[SWS\_CanTSyn\_00026]** [A Time Master shall finish each Time Synchronization sequence for a Synchronized Time Base with a FUP message.] (*RS\_TS\_20031, RS\_TS\_20035*)

**[SWS\_CanTSyn\_00027]** [If a transmission of a SYNC or FUP message fails (`CanTSyn_TxConfirmation` is called with `E_NOT_OK`), CanTSyn shall reset the state machine to start with a new SYNC transmission again once it is due.] (*RS\_TS\_20034, RS\_TS\_20035*)

**Note:** No FUP message will be sent, if the SYNC message transmission fails.

**[SWS\_CanTSyn\_00028]** [For a Synchronized Time Domain (refer to `CanTSynGlobalTimeDomain`) if

- the `GLOBAL_TIME_BASE` bit within the `timeBaseStatus` is set
- and `CanTSynGlobalTimeTxPeriod` is unequal to 0
- and the `debounceCounter` is 0
- and no transmission of the corresponding PDU is pending (`CanTSyn_TxConfirmation` has been called with `E_OK` or `E_NOT_OK`)
- and the associated `cyclicMsgResumeCounter` is equal to or less than 0
- and `syncTxCounter` (if configured) is less than `CanTSynSyncTransmissionsPerCycle`,

then a Time Master shall periodically transmit SYNC messages with the cycle `CanTSynGlobalTimeTxPeriod`

The cyclic transmission shall be started in the earliest possible `CanTSyn_MainFunction` call once the requirements above are fulfilled.] (*RS\_TS\_20031, RS\_TS\_20035*)

**Note:** "earliest possible" means:

- In the next `CanTSyn_MainFunction`, because `GLOBAL_TIME_BASE` is set outside the `CanTSyn_MainFunction`.
- In the current `CanTSyn_MainFunction`, when switching from immediate to cyclic transmission (because this decision is made inside the `CanTSyn_MainFunction`).

**[SWS\_CanTSyn\_00029]** [The SYNC and FUP sequence shall not be interrupted, neither by Time Synchronization messages of the same Time Domain nor by Time Synchronization messages of other Time Domains if the same CAN ID is used for the Time Synchronization messages.] ([RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00031]** [If the `CanTSynGlobalTimeTxIcvSecured` is `ICV_NOT_SUPPORTED`, then depending on `CanTSynGlobalTimeTxCrcSecured` the SYNC / FUP message shall be of type:

<code>CanTSynGlobalTimeTxCrcSecured</code> Value	SYNC Message Type	FUP Message Type
<code>CRC_NOT_SUPPORTED</code>	0x10 SYNC message, not CRC protected	0x18 FUP message, not CRC protected
<code>CRC_SUPPORTED</code>	0x20 SYNC message, CRC protected	0x28 FUP message, CRC protected

**Table 7.16: Settings of `CanTSynGlobalTimeTxCrcSecured` for SYNC / FUP messages without ICV**

] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00159]{DRAFT}** [If the `CanTSynGlobalTimeTxIcvSecured` is `ICV_SUPPORTED` and `CanTSynUseExtendedMsgFormat` is TRUE, then depending on `CanTSynGlobalTimeTxCrcSecured` the SYNC / FUP message shall be of type:

<code>CanTSynGlobalTimeTxCrcSecured</code> Value	SYNC Message Type	FUP Message Type
<code>CRC_NOT_SUPPORTED</code>	0x10 SYNC message, not CRC protected	0x78 FUP message, not CRC protected, ICV secured
<code>CRC_SUPPORTED</code>	0x20 SYNC message, CRC protected	0x88 FUP message, CRC protected, ICV secured

**Table 7.17: Settings of `CanTSynGlobalTimeTxCrcSecured` for SYNC / FUP messages with ICV**

] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00032]** [A transmitter of FUP messages (Time Master) is using as trigger condition for SYNC to FUP that the `debounceCounter` value reaches 0.] ([RS\\_TS\\_20031](#), [RS\\_TS\\_20035](#))

**Note:** Refer to chapter [7.4.4](#) for the use of the `debounceCounter`.

**[SWS\_CanTSyn\_00033]** [Each transmission request of a SYNC message shall be monitored for a transmit confirmation timeout.

If `CanTSyn_TxConfirmation` is not called within 2 sec after transmission request, CanTSyn shall

- wait until `CanTSyn_TxConfirmation` is called (with `E_OK` or `E_NOT_OK`) and

- send no FUP message and
- instead reset the state machine to start with a new SYNC transmission once it is due.

](*RS\_TS\_20034, RS\_TS\_20035*)

**Note:** A timeout of 2 sec is used to avoid an overflow of the `OVS` value in the FUP message (value range: 0 .. 3 sec), if `CanTSyn_TxConfirmation` is called late.

#### 7.4.2 OFS message processing

**[SWS\_CanTSyn\_00035]** [A Time Master shall start each Time Synchronization sequence for an Offset Time Base with an OFS message.

](*RS\_TS\_20031, RS\_TS\_20036*)

**[SWS\_CanTSyn\_00036]** [If `CanTSynUseExtendedMsgFormat` is FALSE, a Time Master shall finish each Time Synchronization sequence for an Offset Time Base with an OFNS message.](*RS\_TS\_20031, RS\_TS\_20036, RS\_TS\_20068*)

**Note:** If `CanTSynUseExtendedMsgFormat` is TRUE, OFNS messages are not required.

**[SWS\_CanTSyn\_00037]** [If the transmission of an OFS or an OFNS message fails (i.e., `CanTSyn_TxConfirmation` for the corresponding PDU is called with parameter result set to `E_NOT_OK`), the state machine shall be reset to start with a new OFS transmission again (once it is due).] (*RS\_TS\_20034, RS\_TS\_20036*)

**Note:** No OFNS message will be sent, if the OFS message transmission fails

**[SWS\_CanTSyn\_00038]** [For an Offset Time Domain (refer to `CanTSynGlobalTimeDomain`) if

- the GLOBAL\_TIME\_BASE bit within the `timeBaseStatus` of the referenced Time Base `CanTSynSynchronizedTimeBaseRef` is set
- and `CanTSynGlobalTimeTxPeriod` is unequal to 0
- and the `debounceCounter` is 0
- and no transmission of the corresponding PDU is pending (`CanTSyn_TxConfirmation` has been called with `E_OK` or `E_NOT_OK`)
- and the associated `cyclicMsgResumeCounter` is equal to or less than 0

then a Time Master shall periodically transmit OFS messages with the cycle `CanTSynGlobalTimeTxPeriod`.

The cyclic transmission shall be started in the earliest possible `CanTSyn_MainFunction` call once the requirements above are fulfilled.] (*RS\_TS\_20031, RS\_TS\_20036*)

**Note:** "earliest possible" means:

- In the next `CanTSyn_MainFunction`, because `GLOBAL_TIME_BASE` is set outside the `CanTSyn_MainFunction`.
- In the current `CanTSyn_MainFunction`, when switching from immediate to cyclic transmission (because this decision is made inside the `CanTSyn_MainFunction`).

**[SWS\_CanTSyn\_00039]** [The OFS and OFNS sequence shall not be interrupted, neither by Time Synchronization messages of the same Time Domain nor by Time Synchronization messages of other Time Domains if the same CAN ID is used for the Time Synchronization messages.] ([RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00040]** [A transmitter of OFNS messages (Time Master) is using as trigger condition for OFS to OFNS that the `debounceCounter` value reaches 0.] ([RS\\_TS\\_20036](#))

**Note:** Refer to chapter [7.4.4](#) for the use of the `debounceCounter`.

**[SWS\_CanTSyn\_00041]** [If the `CanTSynGlobalTimeTxIcvSecured` is `ICV_NOT_SUPPORTED`, then depending on `CanTSynGlobalTimeTxCrcSecured` the OFS / OFNS message shall be of type:

Bus Type	Value of Parameter <code>CanTSynGlobalTimeTxCrcSecured</code>	OFS Message Type	OFNS Message Type
CAN	<code>CRC_NOT_SUPPORTED</code>	0x34 OFS message, not CRC protected	0x3C OFNS message, not CRC protected
	<code>CRC_SUPPORTED</code>	0x44 OFS message, CRC protected	0x4C OFNS message, CRC protected
CAN FD ( <code>CanTSyn-UseExtended-MsgFormat = TRUE</code> )	<code>CRC_NOT_SUPPORTED</code>	0x54 (Ext) OFS message, not CRC protected	Not Applicable
	<code>CRC_SUPPORTED</code>	0x64 (Ext) OFS message, CRC protected	

**Table 7.18: Settings of `CanTSynGlobalTimeTxCrcSecured` for OFS / OFNS messages without ICV**

] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20036](#), [RS\\_TS\\_20068](#))

**[SWS\_CanTSyn\_00160]{DRAFT}** [If

- `CanTSynUseExtendedMsgFormat` is set to TRUE
- and `CanTSynGlobalTimeTxIcvSecured` is set to `ICV_SUPPORTED`
- and `CanTSynGlobalTimeTxCrcSecured` is set to `CRC_NOT_SUPPORTED`,

then the type of the OFS message shall be set to 0x94 (i.e., Ext OFS message - not CRC protected, ICV secured)

If

- `CanTSynUseExtendedMsgFormat` is set to TRUE
- and `CanTSynGlobalTimeTxIcvSecured` is set to ICV\_SUPPORTED
- and `CanTSynGlobalTimeTxCrcSecured` is set to CRC\_SUPPORTED,

then the type of the OFS message shall be set to 0xA4 (i.e., Ext OFS message - CRC protected, ICV secured) ] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00042]** [Each transmission request of an OFS message shall be monitored for a transmit confirmation timeout.

If `CanTSyn_TxConfirmation` is not called within 2 sec after transmission request, CanTSyn shall

- wait until `CanTSyn_TxConfirmation` is called (with E\_OK or E\_NOT\_OK) and
- send no OFNS message and
- instead reset the state machine to start with a new OFS transmission once it is due.

] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20036](#))

**Note:** A reset of the state machine in the event of a timeout avoids, that a possibly outdated Offset Time is sent. Instead the latest Offset Time via `StbM_GetOffset` is retrieved.

### 7.4.3 Transmission mode

**[SWS\_CanTSyn\_00043]** [If `CanTSyn_SetTransmissionMode(Controller, Mode)` is called and parameter Mode equals CANTSYN\_TX\_OFF, all transmit requests from CanTSyn shall be omitted on this CAN channel.] ([RS\\_TS\\_20031](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00044]** [If `CanTSyn_SetTransmissionMode(Controller, Mode)` is called and parameter Mode equals CANTSYN\_TX\_ON, all transmit requests from CanTSyn on this CAN channel shall be able to be transmitted.] ([RS\\_TS\\_20031](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20036](#))

### 7.4.4 Debouncing of Timesync message transmission

#### 7.4.4.1 Debouncing per PDU

The CanTSyn debounces CAN Tx PDUs of a Time Master to avoid bursts of Timesync messages on the bus (e.g. if immediate transmission is enabled). This mechanism also defines the minimum interval between a SYNC and its corresponding FUP message (and between OFS and OFNS messages respectively).

For each Tx PDU the CanTSyn maintains a debounceCounter. On each transmission of a Timesync message the debounce counter is (re-)loaded by the configured debounce time [CanTSynGlobalTimeDebounceTime](#). The counter is decremented in each CanTSyn main cycle. Transmission of the same PDU can only be triggered, if the debounce counter has reached the value 0. Refer also to the overall sequence for the Timesync message transmission in [Figure 7.2](#).

The CanTSyn does not support sharing of PDUs across domains and busses, i.e., the same PDU ID should not be used for different time domains.

However, the CanTSyn supports a separate mechanism to debounce the transmission of SYNC/OFS Messages across CAN busses (refer to chapter [7.4.4.2 “Debouncing across multiple domains and busses”](#)).

**[SWS\_CanTSyn\_00123]{OBSOLETE}** [If [CanTSynGlobalTimeDebounceTime](#) is greater than 0 for a Time Base, CanTSyn shall always do debouncing for the corresponding Timesync PDUs as described below, otherwise CanTSyn shall not do any debouncing.

] ([RS\\_TS\\_20031](#))

**[SWS\_CanTSyn\_00124]** [If for a Time Domain

- [CanTSynGlobalTimeDebounceTime](#) is greater than 0
- and the corresponding Timesync PDU has been successfully sent (i.e., [CanTSyn\\_TxConfirmation](#) for the corresponding PDU is called with parameter [result](#) set to [E\\_OK](#)),

then the CanTSyn shall set the PDU specific debounceCounter to [CanTSynGlobalTimeDebounceTime](#)] ([RS\\_TS\\_20031](#))

**[SWS\_CanTSyn\_00231]** [If for a Time Domain

- [CanTSynGlobalTimeDebounceTime](#) is greater than 0
- and the debounceCounter for the corresponding Timesync PDU is greater than 0,

then the CanTSyn shall decrement the debounceCounter value by [CanTSynMainFunctionPeriod](#) on each invocation of [CanTSyn\\_MainFunction](#)] ([RS\\_TS\\_20031](#))

**Note:** Since the decrement of the debounceCounter takes place in the [CanTSyn\\_MainFunction](#) call but the start of the counter takes place when the Timesync PDU has been sent (either in the subsequent [CanTSyn\\_MainFunction](#) call or in the transmit confirmation callback function) the effective debounce time will be equal or larger than [CanTSynGlobalTimeDebounceTime](#). The extension of the debounce time shall be limited to the value of [CanTSynMainFunctionPeriod](#)

**[SWS\_CanTSyn\_00125]** [If for a Time Domain

- [CanTSynGlobalTimeDebounceTime](#) is greater than 0

- and the debounceCounter for the corresponding Timesync PDU is greater than 0
- and a transmission of a TimeSync message is requested,

then CanTSyn shall defer the actual transmission of the Timesync message until debounceCounter is equal or less than 0.] ([RS\\_TS\\_20031](#))

**Rationale:** While debouncing, a new transmission request should not get lost.

**[SWS\_CanTSyn\_00232]** [If for a Time Domain

- [CanTSynGlobalTimeDebounceTime](#) is greater than 0
- a deferred SYNC or OFS message transmission request is pending
- and a new immediate or cyclic transmission of a SYNC or OFS message is requested,

then the CanTSyn shall discard the pending request for that Time Domain.] ([RS\\_TS\\_20031](#))

**Rationale:** While debouncing, there is no queuing of multiple transmission requests. The latest request is the best one.

**[SWS\_CanTSyn\_00233]** [If for a Time Domain

- [CanTSynGlobalTimeDebounceTime](#) is greater than 0
- a deferred FUP or OFNS message transmission request is pending
- and a new immediate or cyclic transmission of a SYNC or OFS message, respectively, is requested,

CanTSyn shall defer the transmission of the SYNC or OFS message for that Time Domain.] ([RS\\_TS\\_20031](#))

**Rationale:** A SYNC/FUP or OFS/OFNS sequence is not interrupted, i.e., a new SYNC/OFS sequence will not be started until the previous one has been completed.

#### 7.4.4.2 Debouncing across multiple domains and busses

If SW timestamping is used the precision of the Global Time transmitted by the Time Master is affected by the transmission confirmation ISR delay/jitter. The effect increases if the Time Master transmits SYNC messages on various domains/buses, where the transmit confirmation interrupt is handled by the same core. In this case it is likely that several transmit confirmation interrupts are triggered almost simultaneously. As a result any but the first CanTSyn ISR execution gets delayed by the CanTSyn's ISR delay of the 'first' interrupt to be processed and its execution time but also by any other interrupt's ISR which is then processed directly after the first CanTSyn ISR and before the second one (e.g., due to interrupt priority). To avoid such burst transmissions of SYNC messages, the transmissions will be distributed across CanTSyn main

cycles, i.e., the number of simultaneous SYNC message transmissions per CanTSyn main cycle is limited. Refer also to the overall sequence for the Timesync message transmission in [Figure 7.2](#).

**[SWS\_CanTSyn\_00228]** [If

- the CanTSyn module is configured as Time Master for at least one Time Domain
- and `CanTSynSyncTransmissionsPerCycle` is greater than 0

the CanTSyn module shall maintain a counter `syncTxCounter` that counts the SYNC message transmission requests per transmission SYNC message interval [CanTSyn>MainFunctionPeriod.](#)]([RS\\_TS\\_20031](#))

**[SWS\_CanTSyn\_00229]** [The CanTSyn module shall set the `syncTxCounter` to 0 at the start of each `CanTSyn_MainFunction.`]([RS\\_TS\\_20031](#))

**[SWS\_CanTSyn\_00230]** [The CanTSyn module shall increment the `syncTxCounter` by 1 at each call to `CanIf_Transmit` for a SYNC message.]([RS\\_TS\\_20031](#))

#### 7.4.5 Immediate Time Synchronization

In addition to the cyclic Timesync message transmission, an immediate message transmission might be required. [Figure 7.2](#) illustrates how immediate and cyclic message transmission align.

Depending on configuration, the CanTSyn module checks on each `CanTSyn_MainFunction` call the necessity for a Timesync message transmission for each Time Base, where a Master Port belongs to.

**[SWS\_CanTSyn\_00117]** [If `CanTSynImmediateTimeSync` is set to TRUE for a Time Base, CanTSyn shall check on each `CanTSyn_MainFunction` call by calling `StbM_GetTimeBaseUpdateCounter`, if the `timeBaseUpdateCounter` of the corresponding Time Base has changed.]([RS\\_TS\\_20031](#))

**[SWS\_CanTSyn\_00118]** [If

- `CanTSynImmediateTimeSync` is set to TRUE
- and the `timeBaseUpdateCounter` of a Time Base has changed
- and the `GLOBAL_TIME_BASE` bit of the `timeBaseStatus` is set
- and the `debounceCounter` is 0
- and `syncTxCounter` (if configured) is less than `CanTSynSyncTransmissionsPerCycle`
- no transmission of the corresponding PDU is pending (`CanTSyn_TxConfirmation` has been called with `E_OK` or `E_NOT_OK`),

CanTSyn shall trigger an immediate transmission of Time Synchronization messages for the corresponding Time Base.] ([RS\\_TS\\_20031](#))

**Note:** `timeBaseStatus` can be obtained by `StbM_GetTimeBaseStatus` or `StbM_GetCurrentTime`.

In addition, to the actual trigger condition for an immediate transmission (refer to [[SWS\\_CanTSyn\\_00118](#)] above) the parameter `CanTSynCyclicMsgResumeTime` needs to be considered for immediate transmission. Refer also to the trigger condition for cyclic Timesync message transmissions (refer to [[SWS\\_CanTSyn\\_00028](#)] and [[SWS\\_CanTSyn\\_00038](#)], respectively).

Two main scenarios are relevant for configuration of `CanTSynCyclicMsgResumeTime`:

- With `CanTSynCyclicMsgResumeTime` and `CanTSynGlobalTimeTxPeriod` both being configured as zero, a single shot mode is achieved that is solely triggered by the change of the `timeBaseUpdateCounter`.
- With `CanTSynCyclicMsgResumeTime` greater than `CanTSynGlobalTimeTxPeriod` a hold-over scenario in a Time Gateway can be configured:
  - While Timesync messages are received from the Time Master side, the Timesync messages on the sub-busses are only triggered by immediate transmission, as cyclic transmission is suspended while `cyclicMsgResumeCounter` is running.
  - If no Timesync messages from the Time Master side are received anymore and a timeout is detected, cyclic transmission takes over, as cyclic transmission is no longer suspended because `cyclicMsgResumeCounter` has elapsed.
  - If reception of Timesync messages from the Time Master side resumes, the Timesync messages on the sub-busses are again triggered by immediate transmission, as cyclic transmission is again suspended because of the `cyclicMsgResumeCounter`.

[[SWS\\_CanTSyn\\_00119](#)] {OBSOLETE} [If `CanTSynImmediateTimeSync` is set to TRUE, `cyclicMsgResumeCounter` and `CanTSynCyclicMsgResumeTime` shall be considered.] ([RS\\_TS\\_20031](#))

[[SWS\\_CanTSyn\\_00120](#)] [If for a Time Domain

- `CanTSynImmediateTimeSync` is set to TRUE
- and `CanTSynCyclicMsgResumeTime` is greater than 0
- and an immediate transmission of a SYNC or OFS message has completed successfully (i.e., `CanTSyn_TxConfirmation` returns `E_OK` in parameter `result`)

then the CanTSyn shall set the counter `cyclicMsgResumeCounter` to `CanTSynCyclicMsgResumeTime` for the corresponding Time Domain.] ([RS\\_TS\\_20031](#))

**[SWS\_CanTSyn\_00122]** [If for a Time Domain `cyclicMsgResumeCounter` is greater than 0, then the CanTSyn shall discard cyclic Timesync message transmission requests for that Time Domain.] ([RS\\_TS\\_20031](#))

**[SWS\_CanTSyn\_00220]** [If for a Time Domain `cyclicMsgResumeCounter` is greater than 0, then the CanTSyn shall decrement upon each invocation of `CanTSyn_MainFunction` the `cyclicMsgResumeCounter` of the corresponding Time Domain by `CanTSynMainFunctionPeriod`.] ([RS\\_TS\\_20031](#))

**[SWS\_CanTSyn\_00121]** [If the `cyclicMsgResumeCounter` is decremented to 0 or below, then the CanTSyn shall resume cyclic Timesync message transmission within the same `CanTSyn_MainFunction` call by requesting either a SYNC or OFS message transmission.] ([RS\\_TS\\_20031](#))

**Rationale:** [\[SWS\\_CanTSyn\\_00121\]](#) is to ensure, that the first cyclic transmission is requested in the same main function call in which also `cyclicMsgResumeCounter` reaches 0 (refer to term "earliest possible" main function in [\[SWS\\_CanTSyn\\_00028\]](#) and [\[SWS\\_CanTSyn\\_00038\]](#)). If the message is actually really transmitted depends also on the `debounceCounter`.

## 7.4.6 Calculation and Assembling of Time Synchronization Messages

This chapter describes the workflow, how the items of a Time Synchronization message will be calculated (1<sup>st</sup> step) and how the message will be assembled (2<sup>nd</sup> step).

### 7.4.6.1 Global Time Calculation

In addition to the message fields (refer to chapter [7.3](#))

- `SynctimeSec`
- `OVS` and
- `SynctimeNsec`,

which are actually transmitted on the bus by the Time Master, this chapter defines and uses the following internal variables for calculation of the Global Time to be transmitted on the bus for Synchronized Time Domains:

- $T_{0_{SYNC}}$ : Global Time retrieved from [StbM](#)
- $T_{0_{SYNC\_ns}}$ : Nanosecond part of  $T_{0_{SYNC}}$
- $T_{0_{VLT}}$ : Virtual Local Time that corresponds to  $T_{0_{SYNC}}$ . Retrieved together with  $T_{0_{SYNC}}$  from [StbM](#)
- $T_{1_{VLT}}$ : Egress timestamp of SYNC message relative to Virtual Local Time in [StbM](#)

- $T_{1\_CAN}$ : Egress timestamp of SYNC message as captured by CAN controller HW
- $T_4$ : Correction value for  $T_{0\_SYNC}$ , which accounts for the delay between retrieving the time tuple  $[T_{0\_SYNC}; T_{0\_VLT}]$  from [StbM](#) and actually transmitting the SYNC message on the bus.
- $T_{currentTime\_CAN}$ : Current local time as read from CAN controller HW when TX confirmation interrupt for SYNC message is processed in CanTSyn

Refer to [Figure 1.1](#) and to sequence diagram [Figure 9.2](#) for a better understanding of all steps of the Global Time Calculation sequence of the Time Master as specified in the requirements below.

**[SWS\_CanTSyn\_00149]{DRAFT}** [If for a Synchronized Time Domain a cyclic or immediate transmission of a SYNC message is requested, the Time Master shall

1. get current Synchronized Time Base's Time Tuple as  $[T_{0\_SYNC}; T_{0\_VLT}]$  via [StbM\\_GetCurrentTime](#) and
2. call [CanIf\\_Transmit](#) with the seconds portion of  $T_{0\_SYNC}$  written to [SyncTimeSec](#) field of the message data.

]([RS\\_TS\\_20035](#))

After a successful transmission of the SYNC message the CanTSyn captures the egress timestamp of the SYNC message.

**[SWS\_CanTSyn\_00150]{DRAFT}** [Upon successful SYNC message TX confirmation for a Synchronized Time Domain and if no TX confirmation timeout has occurred (refer to [\[SWS\\_CanTSyn\\_00033\]](#)) the Time Master shall within the TX confirmation routine ([CanTSyn\\_TxConfirmation](#))

- if HW timestamping is enabled,
  - Retrieve  $T_{1\_CAN}$  as egress timestamp from CAN controller HW value via [CanIf\\_GetEgressTimeStamp](#)
- else
  - Retrieve  $T_{1\_VLT}$  as egress timestamp by reading current Virtual Local Time value via [StbM\\_GetCurrentVirtualLocalTime](#)

]([RS\\_TS\\_20035](#), [RS\\_TS\\_20070](#))

**Note:** If SW timestamping is used, SW should immediately establish a protection against interruptions in the TX confirmation callback - unless interrupt nesting is disabled (when this is typically done implicitly by the controller). Any delay of [StbM\\_GetCurrentVirtualLocalTime](#) would impair precision.

Based on the egress timestamps  $T_{1\_CAN}$  and  $T_{1\_VLT}$ , respectively, CanTSyn can calculate the delay between reading the tuple  $[T_{0\_SYNC}; T_{0\_VLT}]$  from [StbM](#) via [StbM\\_GetCurrentTime](#) and actual transmission of  $T_{0\_SYNC}$  in the SYNC message on the bus.

$T_4$ , which accounts for that delay, is calculated in 3 different ways depending on

- whether HW timestamping is enabled or not and
- whether the [StbM](#) is using for internal time measurement the same time source as the CanTSyn for Virtual Local Time

This can be done either in the TX confirmation routine ([CanTSyn\\_TxConfirmation](#)) or in the subsequent [CanTSyn\\_MainFunction](#) invocation.

**[SWS\_CanTSyn\_00151]{DRAFT}** [

If

- HW timestamping is disabled,

CanTSyn shall after successful capture of the egress timestamp (refer to [\[SWS\\_CanTSyn\\_00150\]](#)):

- calculate  $T4 = T0_{SYNC\_ns} + (T1_{VLT} - T0_{VLT})$

][\(RS\\_TS\\_20035\)](#)**[SWS\_CanTSyn\_00152]{DRAFT}** [

If

- HW timestamping is enabled and
- CanTSyn is using for internal time measurement the same time source as the [StbM](#) for Virtual Local Time,

CanTSyn shall after successful capture of the egress timestamp (refer to [\[SWS\\_CanTSyn\\_00150\]](#))

- calculate  $T4 = T0_{SYNC\_ns} + T1_{VLT} - T0_{VLT}$ ,  
with  $T1_{VLT} = T1_{CAN}$

][\(RS\\_TS\\_20035, RS\\_TS\\_20070\)](#)

**Note:** In case CanTSyn uses for internal time measurement the same time source as the [StbM](#) for Virtual Local Time  $T1_{CAN}$  equals  $T1_{VLT}$ .

**[SWS\_CanTSyn\_00153]{DRAFT}** [

If

- HW timestamping is enabled and
- CanTSyn is using for internal time measurement a different time source as the [StbM](#) for Virtual Local Time,

CanTSyn shall after successful capture of the egress timestamp (refer to [\[SWS\\_CanTSyn\\_00150\]](#)):

1. establish a protection against interruptions
2. read  $T_{currentTime\_CAN}$  via [CanIf\\_GetCurrentTime](#),
3. read  $T1_{VLT}$  via [StbM\\_GetCurrentVirtualLocalTime](#),

4. release the protection against interruptions and
5. calculate  $T4 = T0_{SYNC\_ns} + (T1_{VLT} - T0_{VLT}) - (T_{currentTime\_CAN} - T1_{CAN})$

]([RS\\_TS\\_20035](#), [RS\\_TS\\_20070](#))

**Note:** In the above sequence protection against interruptions is important, because any interruption of the sequence of step 2 and step 3 would worsen the precision of T4 and hence the Global Time.

**Note:** The term  $T_{currentTime\_CAN} - T1_{CAN}$  compensates the interrupt delay from egress timestamping in HW until  $T1_{VLT}$  can be sampled in [CanTSyn\\_TxConfirmation](#) via `StbM_GetCurrentVirtualLocalTime`.

**[SWS\_CanTSyn\_00154]{DRAFT}** [If for a Synchronized Time Domain a FUP message is due, the Time Master shall

1. call `CanIf_Transmit` and
2. write the following data to the message:
  - (a) seconds portion of T4 ( $T4 \geq 1\text{s}$ ) to the [OVS](#) field and
  - (b) nanoseconds portion of T4 to the `SyncTimeNSec` field

]([RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00046]** [The transmitter of an Offset Time Base (Time Master) shall perform the following steps to distribute the Offset Time Base exactly:

- Retrieve current Offset Time via `StbM_GetOffset`
- Write seconds portion of the Offset Time to the `OfsTimeSec` field
- Write nanoseconds portion of the Offset Time to the `OfsTimeNSec` field

]([RS\\_TS\\_20036](#))

**Note:** OFS and OFNS messages are not time stamped.

#### 7.4.6.2 OVS Calculation

**[SWS\_CanTSyn\_00047]** [[OVS](#) shall be set within FUP messages if the transmitter detects a nanosecond overflow greater than the defined range of `StbM_TimeStampType.nanoseconds` (refer to [\[SWS\\_CanTSyn\\_00154\]](#)). The leftover part of seconds which does not fit into `StbM_TimeStampType.nanoseconds` shall be written to [OVS](#).] ([RS\\_TS\\_20035](#))

#### 7.4.6.3 SGW Calculation

**[SWS\_CanTSyn\_00030]** [The **SGW** value (Time Gateway synchronization status) shall be retrieved from the Time Base synchronization status. If the **SYNC\_TO\_GATEWAY** bit within **timeBaseStatus** is not set the **SGW** value shall be **SyncToGTM**. Otherwise the **SGW** value shall be set to **SyncToSubDomain**.] (*RS\_TS\_20035, RS\_TS\_20036*)

#### 7.4.6.4 Sequence Counter Calculation

**[SWS\_CanTSyn\_00048]** [A Sequence Counter (**SC**) of 4 bit is representing numbers from 0 to 15 per Time Domain. The Sequence Counter shall be independent between SYNC and OFS messages and shall be incremented by 1 continuously on every transmission request of a SYNC or OFS message. It shall wrap around at 15 to 0 again.] (*RS\_TS\_20033, RS\_TS\_20035, RS\_TS\_20036*)

**[SWS\_CanTSyn\_00049]** [The Sequence Counter (**SC**) value for a FUP message shall be set to the **SC** value of the corresponding SYNC message. The **SC** value for an OFNS message shall be set to the **SC** value of the corresponding OFS message.] (*RS\_TS\_20033, RS\_TS\_20035, RS\_TS\_20036*)

#### 7.4.6.5 CRC Calculation

**[SWS\_CanTSyn\_00050]** [The function **Crc\_CalculateCRC8H2F** as defined in [6] shall be used to calculate the **CRC** if configured.] (*RS\_TS\_20033, RS\_TS\_20035, RS\_TS\_20036*)

**[SWS\_CanTSyn\_00054]** [The DataID shall be calculated as **DataID = DataIDList[SC]**, where **DataIDList** is given by configuration for each message type (refer to configuration containers **CanTSynGlobalTimeSyncDataIDList**, **CanTSynGlobalTimeFupDataIDList**, **CanTSynGlobalTimeOfsDataIDList** and **CanTSynGlobalTimeOfnsDataIDList**).] (*RS\_TS\_20033, RS\_TS\_20035, RS\_TS\_20036*)

**Note:** A specific **DataID** out of a predefined **DataIDList** ensures the identification of data elements of Time Synchronization messages.

**[SWS\_CanTSyn\_00055]** [If **CanTSynUseExtendedMsgFormat** is FALSE, the **CRC** shall be calculated over Time Synchronization message byte 2 to byte 7 and **DataID**, where byte 2 is applied first, followed by the other bytes in ascending order, and **DataID** last.]

If **CanTSynUseExtendedMsgFormat** is TRUE, the **CRC** shall be calculated over Time Synchronization message byte 2 to byte 15 and **DataID** for Extended Timesync message formats, where byte 2 is applied first, followed by the other bytes in ascending order, and **DataID** last.] (*RS\_TS\_20033, RS\_TS\_20035, RS\_TS\_20036, RS\_TS\_20068*)

#### 7.4.6.6 ICV Generation

**[SWS\_CanTSyn\_00161]**{DRAFT} [The ICV shall be calculated over `SYNC` payload, `FUP` payload and `FV` (based on configuration `CanTSynIcvGenerationFvIdRef`) and is included in the FUP message.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00162]**{DRAFT} [The ICV shall be calculated over Extended OFS payload and `FV` (based on configuration `CanTSynIcvGenerationFvIdRef`) and is included in the Extended OFS message.] ([RS\\_TS\\_20073](#))

Refer to the chapter 7.3.13 in StbM [5] for the configuration details of `FV` referenced in each Time Domain.

**[SWS\_CanTSyn\_00163]**{DRAFT} [When the `FV` is referenced (refer `CanTSynIcvGenerationFvIdRef`) and the configured truncated `FV` length (`StbMFreshnessValueTruncLength`) == `FV` length (`StbMFreshnessValueLength`) in StbM, the Time Master shall call the `StbM_GetTxFreshness` Api to obtain the `FV` by using the `StbMFreshnessValueId`.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00164]**{DRAFT} [When the `FV` is referenced (refer `CanTSynIcvGenerationFvIdRef`) and the configured truncated `FV` length (`StbMFreshnessValueTruncLength`) < `FV` length (`StbMFreshnessValueLength`), the Time Master shall call the `StbM_GetTxFreshnessTruncData` Api to obtain the `FV` and the truncated `FV` by using the `StbMFreshnessValueId`.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00165]**{DRAFT} [When the `FV` is not referenced (refer `CanTSynIcvGenerationFvIdRef`), the Time Master shall not include the `FV` in the `ICV` generation and fill 0 for `FVL` field in message types `0x78`, `0x88`, `0x94`, `0xA4`.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00166]**{DRAFT} [If `StbM_GetTxFreshness` returns `E_OK`, the Time Master shall construct the message types `0x78`, `0x88`, `0x94`, `0xA4` with the full `FV`, set the `FVL` to `StbMFreshnessValueLength` and use the full `FV` in `ICV` generation.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00167]**{DRAFT} [If `StbM_GetTxFreshnessTruncData` returns `E_OK`, the Time Master shall construct the message types `0x78`, `0x88`, `0x94`, `0xA4` with truncated `FV`, set the `FVL` to `StbMFreshnessValueTruncLength` and use the full `FV` in `ICV` generation.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00168]**{DRAFT} [If `StbM_GetTxFreshness` or `StbM_GetTxFreshnessTruncData` return a non-recoverable error code (i.e, `E_NOT_OK`), the Time Master shall:

- stop the `ICV` generation and accordingly fill 0 for `FVL` and `ICVVL` fields in message types `0x78`, `0x88`, `0x94` and `0xA4`,
- call `Det_ReportRuntimeError` with the parameter `ErrorId` set to `CANTSYN_E_FRESHNESSFAILURE` (refer [[SWS\\_CanTSyn\\_91001](#)]),

- call `IdsM_SetSecurityEventWithContextData` with the parameter `EventId` set to `SEV_TSYN_CAN_FRESHNESS_NOT_AVAILABLE` (refer [SWS\_CanTSyn\_00204])

](RS\_TS\_20073)

Refer to the chapter 10.2.5 in [7] for the configuration details of `CSM` job used for `ICV` generation.

**[SWS\_CanTSyn\_00169]{DRAFT}** [If `CanTSynIcvGenerationBase` for the Time Domain is configured to `ICV_MAC`, the Time Master shall call `Csm_MacGenerate` to generate the `ICV` value.] (RS\_TS\_20073)

**[SWS\_CanTSyn\_00170]{DRAFT}** [If `CanTSynIcvGenerationBase` for the Time Domain is configured to `ICV_SIGNATURE`, the Time Master shall call `Csm_SignatureGenerate` to generate the `ICV` value.] (RS\_TS\_20073)

Note: The `mode` parameter is intentionally left open for the implementer to choose (i.e. `CRYPTO_OPERATIONMODE_SINGLECALL` would possibly be the best option since it does not require further calls to `CSM`).

The `CSM` job used to generate the `ICV` can be configured to synchronous or asynchronous behaviour.

**[SWS\_CanTSyn\_00171]{DRAFT}** [If the `CSM` job used to generate `ICV` is configured in synchronous behaviour, the Time Master shall disable `ICV` generation timeout monitoring.] (RS\_TS\_20073)

**[SWS\_CanTSyn\_00172]{DRAFT}** [If the `CanTSynIcvGenerationTimeout` is set to 0, the Time Master shall not do the `ICV` generation timeout monitoring.] (RS\_TS\_20073)

**[SWS\_CanTSyn\_00173]{DRAFT}** [If `CanTSynIcvGenerationTimeout` is set to any value > 0 and `Csm_MacGenerate` or `Csm_SignatureGenerate` returns `E_OK`, the Time Master shall start the `CanTSynIcvGenerationTimeout`.] (RS\_TS\_20073)

**[SWS\_CanTSyn\_00174]{DRAFT}** [If `CanTSynIcvGenerationTimeout` is set to any value > 0 and the `CanTSyn_IcvGenerationIndication` callback is called, the Time Master shall stop the running `CanTSynIcvGenerationTimeout`.] (RS\_TS\_20073)

**[SWS\_CanTSyn\_00175]{DRAFT}** [If one of the following conditions is true:

- the authentication build counter has reached the configuration value `CanTSynTxAuthenticationBuildAttempts`,
- the verification of the `ICV` has returned a non-recoverable error such as returning `E_NOT_OK` or `KEY_FAILURE`,
- or `CanTSynIcvGenerationTimeout` expires before the notification of the `CanTSyn_IcvGenerationIndication` callback,

then the Time Master shall

- stop the `ICV` generation and accordingly fill 0 for `ICVL` field in message types 0x78, 0x88, 0x94 and 0xA4,
- and call `IdsM_SetSecurityEventWithContextData` with the parameters `EventId` set to `SEV_TSYN_CAN_ICV_GENERATION_FAILED` (refer [SWS\_CanTSyn\_00204])

]([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00176]**{DRAFT} [With the notification of the `CanTSyn_IcvGenerationIndication` callback and successful generation of `ICV`, the Time Master shall add the generated `ICV` to the `ICV` field in message types 0x78, 0x88, 0x94 and 0xA4 and transmit the `FUP`, Extended OFS message.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00177]**{DRAFT} [If the `FV` is referenced (refer `CanTSynIcvGenerationFvIdRef`), then the Time Master shall notify the successful transmission of messages of type 0x78, 0x88, 0x94 and 0xA4 to `FVM` by calling `StbM_SPduTxConfirmation`.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00210]**{DRAFT} [For every transmission of messages of type 0x78, 0x88, 0x94 and 0xA4 the Time Master shall maintain an authentication build counter (refer `CanTSynTxAuthenticationBuildAttempts`).] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00211]**{DRAFT} [Upon the initial processing of messages of type 0x78, 0x88, 0x94 and 0xA4 the Time Master shall set the authentication build counter to 0.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00212]**{DRAFT} [When `StbM_GetTxFreshness` or `StbM_GetTxFreshnessTruncData` return a recoverable error code (e.g., `STBM_E_BUSY`), then the Time Master shall increment the authentication build counter.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00213]**{DRAFT} [When `Csm_MacGenerate` or `Csm_SignatureGenerate` return a recoverable error code (e.g., `E_BUSY`, `QUEUE_FULL`), then the Time Master shall increment the authentication build counter.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00214]**{DRAFT} [If

- building the authenticated message has failed
- and the authentication build counter has not yet reached the configuration value `CanTSynTxAuthenticationBuildAttempts`,

then the Time Master shall retry the freshness attempt and ICV calculation in the next call of `CanTSyn_MainFunction`.] ([RS\\_TS\\_20073](#))

#### 7.4.6.7 Message Assembling

**[SWS\_CanTSyn\_00056]** [For each transmission of a Time Synchronization message the CanTSyn module shall assemble the message as follows:

1. Calculate `OVS` (FUP only)

2. Calculate **SGW** (FUP, OFNS and Extended OFS)
3. Calculate **SC**
4. Copy all data to the appropriate position within the related message
5. Calculate **CRC** (configuration dependent)
6. Fetch **FV** (configuration dependent) and append **FVL**, **ICVL** and **FV** in the appropriate position within the related message
7. Calculate **ICV** (configuration dependent) and append in the appropriate position within the related message

]([RS\\_TS\\_20033](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20036](#), [RS\\_TS\\_20073](#))

## 7.5 Acting as Time Slave

A Time Slave is an entity, which is the recipient for a certain Time Base within a certain segment of a communication network, being a consumer for this Time Base.

### 7.5.1 SYNC and FUP message processing

**[SWS\_CanTSyn\_00057]** [The CanTSyn shall only accept a SYNC message with Type equal to 0x20 and a correct CRC value if **CanTSynRxCrcValidated** is configured to **CRC\_VALIDATED**.]([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00058]** [The CanTSyn shall only accept a SYNC message with Type equal to 0x10 if **CanTSynRxCrcValidated** is configured to **CRC\_NOT\_VALIDATED**.]([RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00059]** [The CanTSyn shall only accept a SYNC message with Type equal to 0x10 or 0x20 if **CanTSynRxCrcValidated** is configured to **CRC\_IGNORED**.]([RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00109]** [The CanTSyn shall only accept a SYNC message with Type equal to 0x10 or a SYNC message with Type equal to 0x20 and a correct CRC value if **CanTSynRxCrcValidated** is configured to **CRC\_OPTIONAL**.]([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00178]{DRAFT}** [If **CanTSynRxIcvVerificationType** is configured to **ICV\_VERIFIED**, the CanTSyn shall perform ICV verification for FUP messages with ICV (Message type: 0x78, 0x88).]

The CanTSyn shall consider ICV verification as failed for FUP messages without ICV (Message type: Type: 0x18, 0x28).]([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00179]**{DRAFT} [If [CanTSynRxIcvVerificationType](#) is configured to [ICV\\_NOT\\_VERIFIED](#), the CanTSyn shall not perform the ICV verification and the FUP messages shall not contain an ICV value (Message type: 0x18, 0x28).]

The CanTSyn shall consider ICV verification as failed for FUP messages with ICV (Message Type: 0x78, 0x88).] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00180]**{DRAFT} [If [CanTSynRxIcvVerificationType](#) is configured to [ICV\\_IGNORED](#), the CanTSyn shall not perform the ICV verification.]

The CanTSyn shall ignore the ICV in FUP messages with ICV (Message type: 0x78, 0x88).] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00181]**{DRAFT} [If [CanTSynRxIcvVerificationType](#) is configured to [ICV\\_OPTIONAL](#), the CanTSyn shall perform ICV verification for FUP messages with ICV (Message type: 0x78, 0x88).]

The CanTSyn shall not perform ICV verification for FUP messages without ICV (Message type: 0x18, 0x28).]

] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00060]** [If [CanTSynRxCrcValidated](#) is configured to [CRC\\_VALIDATED](#), the CanTSyn shall only accept a FUP message]

- with a Sequence Counter identical to the value of the corresponding SYNC message
- and Type equal to 0x28 or 0x88
- and a correct [CRC](#) value.

] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00061]** [If [CanTSynRxCrcValidated](#) is configured to [CRC\\_NOT\\_VALIDATED](#), the CanTSyn shall only accept a FUP message]

- with a Sequence Counter identical to the value of the corresponding SYNC message
- and Type equal to 0x18 or 0x78.

] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00062]** [If [CanTSynRxCrcValidated](#) is configured to [CRC\\_IGNORED](#), the CanTSyn shall only accept a FUP message]

- with a Sequence Counter identical to the value of the corresponding SYNC message
- and Type equal to 0x18, 0x28, 0x78 and 0x88.

] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00110]** [If [CanTSynRxCrcValidated](#) is configured to [CRC\\_OPTIONAL](#), the CanTSyn shall only accept]

- a FUP message with an identical Sequence Counter to the value of the corresponding SYNC message and Type equal to 0x18 or 0x78
- or a FUP message with an identical sequence counter to the value of the corresponding SYNC message and Type equal to 0x28 or 0x88 and a correct CRC value.

](*RS\_TS\_20034, RS\_TS\_20035*)

**[SWS\_CanTSyn\_00063]** [For each configured Time Slave (refer to [CanTSynGlobalTimeSlave](#)) the CanTSyn module shall observe the reception timeout [CanTSynGlobalTimeFollowUpTimeout](#) between the SYNC and its FUP message.

If the reception timeout occurs the sequence shall be reset (i.e., waiting for a new SYNC message).](*RS\_TS\_20034, RS\_TS\_20035*)

**[SWS\_CanTSyn\_00182]{DRAFT}** [If the SYNC message is received while the [CanTSynGlobalTimeFollowUpTimeout](#) is running, the Time Slave shall discard the received SYNC message, reset the sequence (i.e. waiting for a new SYNC) and raise the security event [SEV\\_TSYN\\_CAN\\_MSG\\_SEQUENCE\\_ERROR](#) (refer [[SWS\\_CanTSyn\\_00204](#)]).](*RS\_TS\_20073*)

**Note:** The general timeout monitoring for the Time Base update is located in the [StbM](#) and not in the Timesync modules.

**[SWS\_CanTSyn\_00064]** [For a valid pair of SYNC and FUP messages with successfully validated set of values SyncTimeSec, [OVS](#) and [SyncTimeNSec](#) a new Rx Time Tuple [TG<sub>RX</sub>;T2<sub>VLT</sub>] (refer to [5]), consisting of the Global Time value and the associated value of the Virtual Local Time, shall be calculated (refer to [[SWS\\_CanTSyn\\_00146](#)], [[SWS\\_CanTSyn\\_00147](#)], [[SWS\\_CanTSyn\\_00148](#)]) and forwarded to the [StbM](#) module via [StbM\\_BusSetGlobalTime](#).](*RS\_TS\_20032, RS\_TS\_20034*)

**[SWS\_CanTSyn\_00183]{DRAFT}** [When for a Time Domain any SYNC or FUP message is received within [CanTSynGlobalTimeRxDebounceTime](#) after the previous Timesync message of that Time Domain, then the Time Slave shall discard the received message and reset the sequence (i.e. waiting for a new SYNC).](*RS\_TS\_20073*)

**[SWS\_CanTSyn\_00207]{DRAFT}** [If

- for a Time Domain Security Event reporting is enabled ([CanTSynEnableSecurityEventReporting](#) is true)
- and any SYNC or FUP message is received within [CanTSynGlobalTimeRxDebounceTime](#) after the previous Timesync message of that Time Domain,

then the Time Slave shall raise the security event [SEV\\_TSYN\\_CAN\\_MSG\\_SEQUENCE\\_ERROR](#), i.e., call [IdsM\\_SetSecurityEventWithContextData](#) with parameter securityEventId set to [SEV\\_TSYN\\_CAN\\_MSG\\_SEQUENCE\\_ERROR](#).](*RS\_TS\_20073*)

**Rationale:** Intention of [[SWS\\_CanTSyn\\_00182](#)] and [[SWS\\_CanTSyn\\_00183](#)] is to improve robustness of the CanTSyn module against message sequence errors, specifi-

cally injection of fake SYNC messages by an attacker. Note that this will not allow to filter out all possible fake SYNC scenarios.

## 7.5.2 OFS and OFNS message processing

### 7.5.2.1 CRC Validation of OFS messages

**[SWS\_CanTSyn\_00065]** [If `CanTSynRxCrcValidated` is configured to `CRC_VALIDATED`, the CanTSyn shall only accept an OFS message

- with Type equal to 0x44, 0x64 or 0xA4
- and a correct `CRC` value.

]([RS\\_TS\\_20034](#), [RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00066]** [If `CanTSynRxCrcValidated` is configured to `CRC_NOT_VALIDATED`, the CanTSyn shall only accept an OFS message with Type equal to 0x34, 0x54 or 0x94.]([RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00067]** [If `CanTSynRxCrcValidated` is configured to `CRC_IGNORED`, the CanTSyn shall only accept an OFS message with Type equal to 0x34, 0x44, 0x54, 0x64, 0x94 or 0xA4.]([RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00113]** [If `CanTSynRxCrcValidated` is configured to `CRC_OPTIONAL`, the CanTSyn shall only accept

- an OFS message with Type equal to 0x34, 0x54 or 0x94
- or an OFS message with Type equal to 0x44, 0x64 or 0xA4 and a correct `CRC` value.

]([RS\\_TS\\_20034](#), [RS\\_TS\\_20036](#))

### 7.5.2.2 CRC Validation of OFNS messages

[Table 7.19](#) lists those combinations of the values for

- the parameter `CanTSynRxCrcValidated`,
- the message type byte
- and CRC correctness,

which result in a successful CRC validation of an OFNS messages by the CanTSyn. The CRC validation will fail for other combinations of the listed parameters/variables.

Value of Parameter <code>CanTSynRxCrcValidated</code>	Message Type	Message contains CRC	Message has correct CRC	Related Requirement
<code>CRC_NOT_VALIDATED</code>	0x3C		n/a	[ <a href="#">SWS_CanTSyn_00069</a> ]
<code>CRC_VALIDATED</code>	0x4C	x	yes	[ <a href="#">SWS_CanTSyn_00068</a> ]

CRC_OPTIONAL	0x3C		n/a	[SWS_CanTSyn_00114]
CRC_OPTIONAL	0x4C	x	yes	[SWS_CanTSyn_00114]
CRC_IGNORED	0x3C		n/a	[SWS_CanTSyn_00070]
CRC_IGNORED	0x4C	x	don't care	[SWS_CanTSyn_00070]

Table 7.19: Settings of CanTSynRxCrcValidated for OFNS messages

**[SWS\_CanTSyn\_00068]** [If `CanTSynRxCrcValidated` is configured to `CRC_VALIDATED`, then the CanTSyn shall only accept an OFNS message with an identical Sequence Counter to the value of the corresponding OFS message and `Type` equal to `0x4C` and a correct `CRC` value.] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00069]** [If `CanTSynRxCrcValidated` is configured to `CRC_NOT_VALIDATED`, then the CanTSyn shall only accept an OFNS message with an identical Sequence Counter to the value of the corresponding OFS message and `Type` equal to `0x3C`.] ([RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00070]** [If `CanTSynRxCrcValidated` is configured to `CRC_IGNORED`, then the CanTSyn shall only accept an OFNS message with an identical Sequence Counter to the value of the corresponding OFS message and `Type` equal to `0x3C` or `0x4C`.] ([RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00114]** [If `CanTSynRxCrcValidated` is configured to `CRC_OPTIONAL`, then the CanTSyn shall only accept

- an OFNS message with a Sequence Counter identical to the value of the corresponding OFS message and `Type` equal to `0x3C`
- or an OFNS message with a identical Sequence Counter identical to the value of the corresponding OFS message and `Type` equal to `0x4C` and a correct `CRC` value.

] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20036](#))

### 7.5.2.3 ICV Verification of Extended OFS Messages

**[SWS\_CanTSyn\_00184]{DRAFT}** [If `CanTSynRxIcvVerificationType` is configured to `ICV_VERIFIED`, the CanTSyn shall perform ICV verification for Extended OFS messages with ICV messages (Message type: `0x94`, `0xA4`).]

The CanTSyn shall consider ICV verification as failed for Extended OFS messages without ICV (Message type: `0x54`, `0x64`).] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00185]{DRAFT}** [If `CanTSynRxIcvVerificationType` is configured to `ICV_NOT_VERIFIED`, the CanTSyn shall not perform the ICV verification and the Extended OFS messages shall not contain an ICV value (Message type: `0x54`, `0x64`).]

The CanTSyn shall consider ICV verification as failed for Extended OFS messages with ICV (Type: 0x94, 0xA4).] ([RS\\_TS\\_20073](#))

[**SWS\_CanTSyn\_00186**]{DRAFT} [If `CanTSynRxIcvVerificationType` is configured to `ICV_IGNORED`, the CanTSyn shall not perform the ICV verification.

The CanTSyn shall ignore the ICV in Extended OFS messages with ICV (Message type: 0x94, 0xA4).] ([RS\\_TS\\_20073](#))

[**SWS\_CanTSyn\_00187**]{DRAFT} [If `CanTSynRxIcvVerificationType` is configured to `ICV_OPTIONAL`, the CanTSyn shall perform ICV verification for Extended OFS messages with ICV (Message type: 0x94, 0xA4).

The CanTSyn shall not perform ICV verification for Extended OFS messages without ICV (Message type: 0x54, 0x64).] ([RS\\_TS\\_20073](#))

#### 7.5.2.4 General

[**SWS\_CanTSyn\_00071**] [If `CanTSynUseExtendedMsgFormat` is FALSE, the CanTSyn shall observe for each configured Time Slave (`CanTSynGlobalTimeSlave`) the reception timeout `CanTSynGlobalTimeFollowUpTimeout` between the OFS and its OFNS message.

If the reception timeout occurs the sequence shall be reset (i.e. waiting for a new OFS message).] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20036](#), [RS\\_TS\\_20068](#))

**Note:** The general timeout monitoring for the Time Base update is located in the `StbM` and not in the Timesync modules.

[**SWS\_CanTSyn\_00072**] [For a valid pair of OFS and OFNS messages and if `CanTSynUseExtendedMsgFormat` is FALSE, the CanTSyn shall calculate a new Time Tuple, consisting of the Offset Time value and the associated value of the Virtual Local Time, (according to [[SWS\\_CanTSyn\\_00074](#)]) and forward it to the `StbM` module via `StbM_BusSetGlobalTime`.

If `CanTSynUseExtendedMsgFormat` is TRUE, the CanTSyn shall calculate a new Time Tuple, consisting of the Offset Time value and the associated value of the Virtual Local Time, (according to [[SWS\\_CanTSyn\\_00074](#)]) after receiving a valid Extended OFS message and forward it to the `StbM` module via `StbM_BusSetGlobalTime`.] ([RS\\_TS\\_20032](#), [RS\\_TS\\_20034](#), [RS\\_TS\\_20068](#))

[**SWS\_CanTSyn\_00208**]{DRAFT} [During `CanTSynGlobalTimeRxDebounceTime`, when any OFS or OFNS message is received, then the Time Slave shall discard the received message and reset the sequence (i.e. waiting for a new OFS message).] ([RS\\_TS\\_20073](#))

[**SWS\_CanTSyn\_00209**]{DRAFT} [During `CanTSynGlobalTimeRxDebounceTime`, if

- any OFS or OFNS message is received

- and Security Event reporting is enabled ([CanTSynEnableSecurityEventReporting](#) is true)

then the Time Slave shall raise the security event [SEV\\_TSYN\\_CAN\\_MSG\\_SEQUENCE\\_ERROR.](#)]([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00116]** [On an invocation of StbM\_BusSetGlobalTime the parameter pathDelay of the measureDataPtr structure shall be set to 0.]([RS\\_TS\\_20034](#))

### 7.5.3 Validation and Disassembling of Time Synchronization Messages

This chapter describes the workflow, how the items of a Time Synchronization message will be validated (1<sup>st</sup> step) and how the message will be disassembled (2<sup>nd</sup> step).

#### 7.5.3.1 Global Time Calculation

In addition to the message fields (refer to chapter section 7.3)


- SyncTimeSec
- OVS and
- SyncTimeNSec,

which are actually received by the Time Slave on the bus from the Time Master, this chapter defines and uses the following internal variables for calculation of the Rx Time Tuple for Synchronized Time Domains:

- T0: Global Time (seconds portion) received from Time Master in SYNC message.
- T1<sub>VLT</sub>: Ingress timestamp of SYNC message as captured by HW in the CAN controller or by SW in [CanTSyn\\_RxIndication](#).
- TG<sub>Rx</sub> : Global Time component of the Rx Time Tuple.
- T2<sub>VLT</sub>: Virtual Local Time component of the Rx Time Tuple (equivalent to TV\_Rx in the StbM).
- T3<sub>VLT</sub>: Current time read out from CAN controller hardware - used for correlation of StbM time and CAN HW clock.
- T5<sub>VLT</sub>: Current virtual local time in StbM - used for correlation of StbM local time and CAN HW clock.
- T4: Correction value for T0 as received from the Time Master. It is calculated from values of OVS and SyncTimeNSec field in the FUP message.
- T<sub>SRD</sub>: SYNC reception delay as difference between T3<sub>VLT</sub> and T1<sub>VLT</sub>.

Refer to [Figure 1.1](#) and to the sequence diagram in [Figure 9.4](#) as well as to the flow chart in [Figure 7.3](#) for a better understanding of all steps of the Global Time calculation sequence of the Time Slave as specified in the requirements below.

The figure for evaluating time sync is given below:

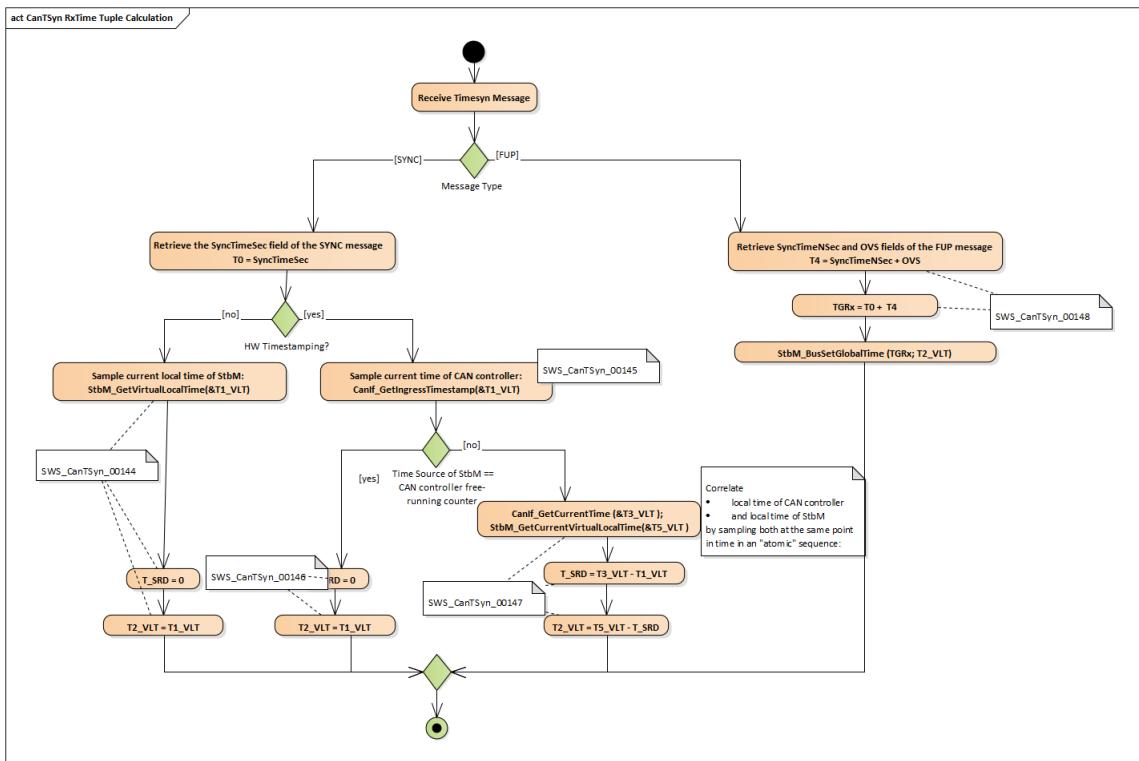

**Figure 7.3: Evaluate Timesync message**

**[SWS\_CanTSyn\_00144]{DRAFT}** [For a Time Slave, on invocation of [CanTSyn\\_RxIndication](#) for a SYNC message, and if [CanTSynHardwareTimestampSupport](#) is set to FALSE, CanTSyn shall

1. immediately establish a protection against interruption
2. and directly afterwards retrieve the reference time  $T_{1\_VLT}$  for the SYNC message via [StbM\\_GetCurrentVirtualLocalTime](#) from the StbM

**Note:** Once  $T_{1\_VLT}$  has been retrieved, protection against interruptions may be released

3. set the  $T_{2\_VLT}$  part of the Rx Time Tuple to the value of  $T_{1\_VLT}$  (i.e.,  $T_{2\_VLT} = T_{1\_VLT}$ )
4. set the SYNC reception delay  $T_{SRD}$  to 0
5. retrieve  $T_0$  from the SyncTimeSec field of the SYNC message

]([RS\\_TS\\_20035](#), [RS\\_TS\\_20070](#))

**Note:** Immediate protection against interruptions means that there shall be no frame checks before (if called in context of the RX interrupt with interrupt nesting disabled, interrupt protection is typically implicitly ensured by the controller). Once the interrupts are locked, it is ok to check whether the received message is a SYNC message for which a snapshot of the Virtual Local Time shall be taken, but no other frame checks (e.g., CRC validation, SC validation, etc.) shall be done before taking  $T_{VLT}$ . Once  $T_{VLT}$  has been sampled it is ok to remove the protection against interruptions and to make the necessary validations. This means that  $T_{VLT}$  will be taken even if the succeeding validations fail and thus making the snapshot superfluous.

**[SWS\_CanTSyn\_00145]{DRAFT}** [For a Time Slave, on invocation of `CanTSyn_RxIndication` for a SYNC message, and if `CanTSynHardwareTimestampSupport` is set to TRUE, CanTSyn shall

- retrieve  $T_{VLT}$  from the ingress timestamp of the SYNC message via `CanIf_GetIngressTimeStamp`
- convert  $T_{VLT}$  to a representation in ns
- retrieve  $T_0$  from the `SyncTimeSec` field of the SYNC message

] ([RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00146]{DRAFT}** [For a Time Slave, on invocation of `CanTSyn_RxIndication` for a SYNC message

- and if `CanTSynHardwareTimestampSupport` is set to TRUE
- and if the StbM uses the CAN controller hardware counter as Virtual Local Time source for the Time Base (refer to `StbMLocalTimeClock`),

CanTSyn shall

- set  $T_{2VLT}$  part of the Rx Time Tuple to the value of  $T_{VLT}$  (i.e.,  $T_{2VLT} = T_{VLT}$ )
- and set the SYNC reception delay  $T_{SRD}$  to 0.

] ([RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00147]{DRAFT}** [For a Time Slave, on invocation of `CanTSyn_RxIndication` for a SYNC message,

- and if `CanTSynHardwareTimestampSupport` is set to TRUE
- and if the StbM does not use the CAN controller hardware counter as Virtual Local Time source for the Time Base (refer to `StbMLocalTimeClock`)

CanTSyn shall correlate the CAN HW time and the Virtual Local Time of the StbM by applying the following sequence:

1. protect the following two steps against interruptions
2. retrieve the current time of the CAN controller hardware counter via `CanIf_GetCurrentTime` and convert it to the Virtual Local Time  $T_{3VLT}$ ,

3. retrieve the current value of the Virtual Local Time of the corresponding Time Base in the StbM via `StbM_GetCurrentVirtualLocalTime` as  $T_{5VLT}$ ,
4. calculate the SYNC reception delay  $T_{SRD}$  as  $(T_{3VLT} - T_{1VLT})$
5.  $T_{2VLT}$  shall be calculated as  $T_{5VLT} - TSRD$

](*RS\_TS\_20035, RS\_TS\_20070*)

**Note:** In the above sequence protection against interruptions is important, because any interruption of the sequence of step 2 and step 3 would worsen the precision of the local instance of the Global Time.

**[SWS\_CanTSyn\_00148]{DRAFT}** [For a Time Slave, on invocation of `CanTSyn_RxIndication` for a FUP message, CanTSyn shall

1. retrieve the following data from the FUP message
  - the OVS field
  - and the SyncTimeSec field
2. and calculate  $T4 = OVS + SyncTimeSec$

Either in the same Rx indication routine (`CanTSyn_RxIndication`) or in the subsequent `CanTSyn_MainFunction` invocation CanTSyn shall

1. calculate  $TG_{Rx}$  as  $(T0 + T4)$ .
2. and forward the new Rx Time Tuple  $[TG_{Rx}; T2_{VLT}]$  to the StbM via `StbM_BusSetGlobalTime`

](*RS\_TS\_20035*)

**Note:** In the above sequence protection against interruptions is important, because any interruption of the sequence of step 2 and step 3 would worsen the precision of local instance of the Global Time, which depends on time tuple  $[TG_{Rx}; T2_{VLT}]$ .

**[SWS\_CanTSyn\_00074]** [The receiver of an Offset Time Base shall perform the following steps to assemble the Offset Time:

1. Get seconds portion of the Offset Time out of `OfsTimeSec`
2. Get nanoseconds portion of the Offset Time out of `OfsTimeNSec`
3. Retrieve current Virtual Local Time value via `StbM_GetCurrentVirtualLocalTime`

](*RS\_TS\_20036*)

**Note:** OFS and OFNS messages are not time stamped.

### 7.5.3.2 OVS Consideration


**[SWS\_CanTSyn\_00075]** [[OVS](#) (FUP only) shall be considered on the receiver side to retrieve the second portion of the received Synchronized Time Base.] ([RS\\_TS\\_20035](#))

### 7.5.3.3 SGW Calculation

**[SWS\_CanTSyn\_00133]** [If the [SGW](#) value (FUP, OFNS and Extended OFS) is set to SyncToSubDomain, the SYNC\_TO\_GATEWAY bit within timeBaseStatus shall be set to TRUE. Otherwise, it shall be set to FALSE.] ([RS\\_TS\\_20032](#), [RS\\_TS\\_20034](#))

### 7.5.3.4 Sequence Counter Validation

[Figure 7.4](#) illustrates the Sequence Counter validation of a Time Slave for SYNC and OFS messages.

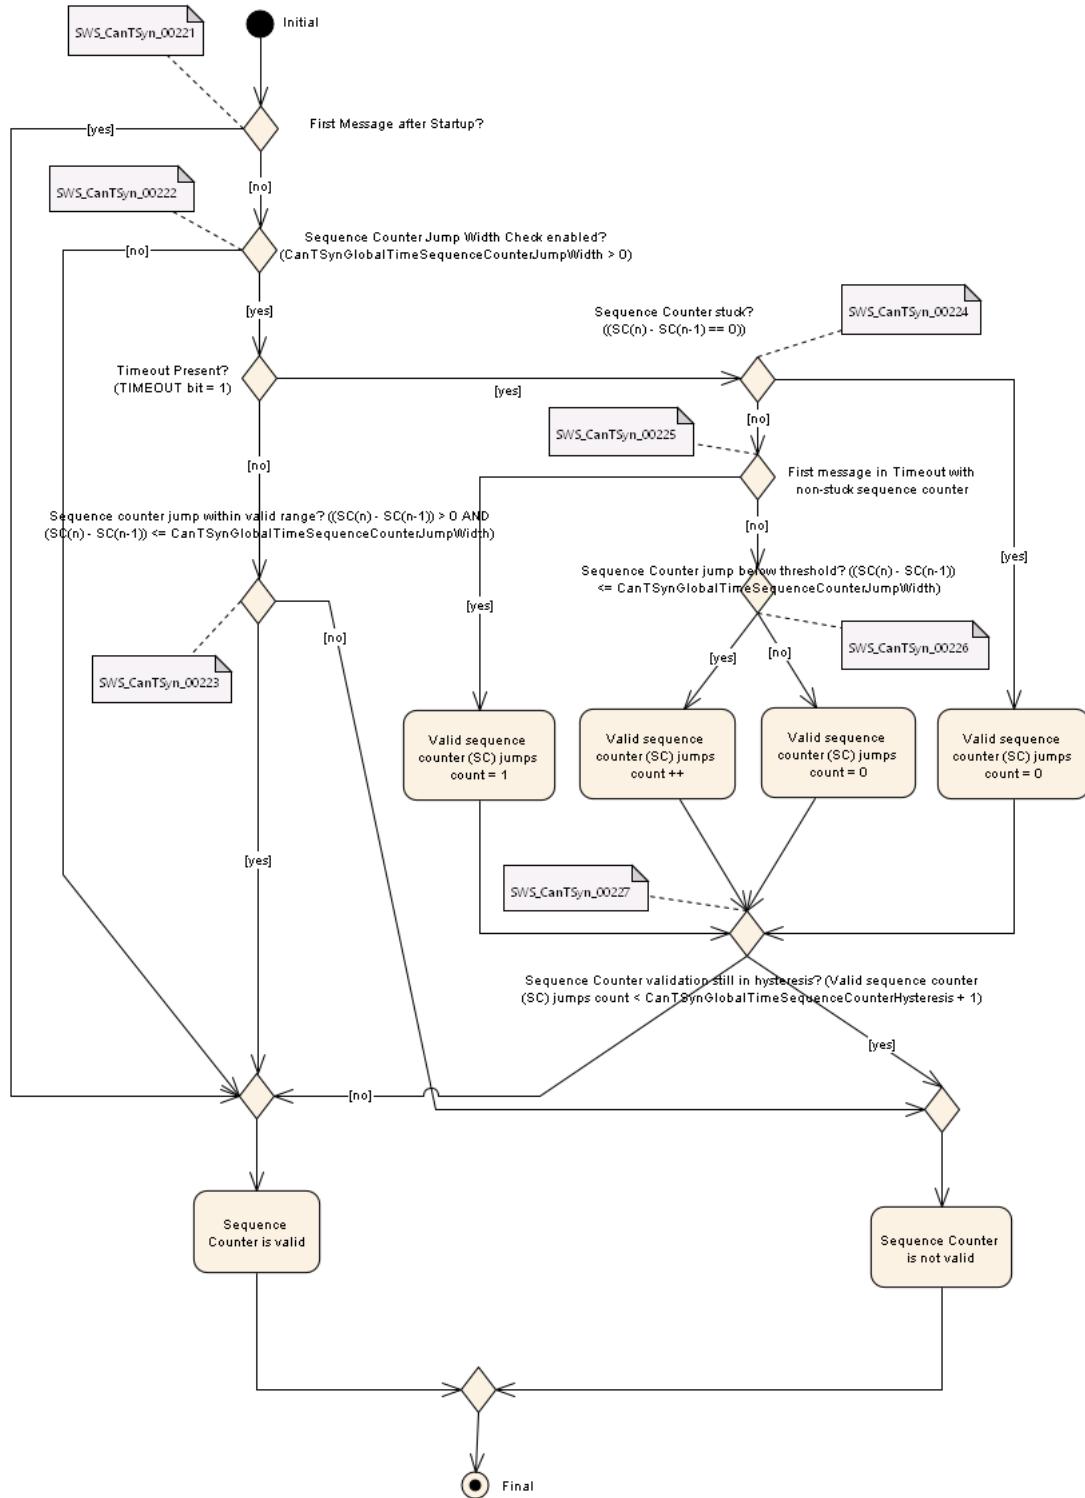
**Figure 7.4: Sequence Counter Validation**

**[SWS\_CanTSyn\_00076]** [The Sequence Counter of each SYNC message must match to the Sequence Counter of the next incoming FUP message of the same Time Domain. Otherwise, the contents of the already received SYNC message shall be

discarded and the received FUP message shall be ignored.] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00077]** [If `CanTSynUseExtendedMsgFormat` is FALSE, the Sequence Counter of each OFS message must match to the Sequence Counter of the next incoming OFNS message of the same Time Domain. If the `SCs` do not match, the received OFNS message shall be ignored and the contents of the already received OFS message shall be discarded.] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20036](#), [RS\\_TS\\_20068](#))

**[SWS\_CanTSyn\_00078]**{OBSOLETE} [The Sequence Counter Jump Width between two consecutive SYNC or two consecutive OFS messages of the same Time Domain shall be greater than 0 and smaller than or equal to `CanTSynGlobalTimeSequenceCounterJumpWidth`. Otherwise, a Time Slave shall ignore the respective SYNC / OFS message.]

If the `CanTSynGlobalTimeSequenceCounterJumpWidth` value is set to 0, the Time Slave shall not do Sequence Counter Jump Width checks.] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00079]**{OBSOLETE} [Upon reception of a SYNC (or OFS) message a Time Slave shall check the Sequence Counter of the received message per Time Domain against the configured value of `CanTSynGlobalTimeSequenceCounterJumpWidth` (according to [\[SWS\\_CanTSyn\\_00078\]](#)), unless it is the first message

- at Startup or
- after a Time Base update timeout has been detected (`TIMOUT` bit set in Time Base synchronization status `timeBaseStatus`).

] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00143]**{OBSOLETE} [While a Time Base Timeout is present (`TIMEOUT` bit is set in Time Base synchronization status `timeBaseStatus`), CanTSyn shall discard SYNC/FUP (or OFS/OFNS) messages until it has successfully validated (refer to [\[SWS\\_CanTSyn\\_00078\]](#))  $n$  consecutive SYNC/FUP (or OFS/OFNS) message pairs ( $n$  is given by the parameter `CanTSynGlobalTimeSequenceCounterHysteresis`).] ([RS\\_TS\\_20034](#))

**[SWS\_CanTSyn\_00221]**{DRAFT} [Upon reception of a SYNC (or OFS) message, if the message is the first SYNC (or OFS) message after startup, then a Time Slave shall consider the Sequence Counter value of the SYNC (or OFS) message as valid.] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20034](#))

**Rationale:** After startup it makes sense to skip the Sequence Counter check and allow the Sequence Counter of the Time Slave to synchronize to the one of the Time Master.

**[SWS\_CanTSyn\_00222]**{DRAFT} [Upon reception of a SYNC (or OFS) message, if the Sequence Counter check is disabled for SYNC (or OFS) messages (i.e., `CanTSynGlobalTimeSequenceCounterJumpWidth == 0`), then a Time Slave shall consider the Sequence Counter value of the SYNC (or OFS) message as valid.] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20034](#))

[[SWS\\_CanTSyn\\_00223](#)]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- the message is not the first SYNC (or OFS) message after startup
- and Sequence Counter check is enabled (i.e., `CanTSynGlobalTimeSequenceCounterJumpWidth > 0`)
- and the Time Domain is not in timeout (i.e., TIMEOUT bit not set in Time Base synchronization status `timeBaseStatus`),

then a Time Slave shall check the difference value between the Sequence Counter of the current message and the Sequence Counter of the previous SYNC (or respectively OFS) message.

If the difference value is greater than 0 and less or equal than `CanTSynGlobalTimeSequenceCounterJumpWidth`, then a Time Slave shall consider the Sequence Counter value as valid, else as invalid.] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20034](#))

#### 7.5.3.4.1 Sequence Counter Hysteresis

This chapter specifies how to apply an optional hysteresis (`CanTSynGlobalTimeSequenceCounterHysteresis`, refer to [[SWS\\_CanTSyn\\_00227](#)]) to check if the Sequence Counter **value** is valid, i.e., if the Sequence Counter check is actually successful.

This requires that a number of consecutive Sequence Counter **jumps** are valid. Requirements [[SWS\\_CanTSyn\\_00224](#)], [[SWS\\_CanTSyn\\_00225](#)] and [[SWS\\_CanTSyn\\_00226](#)] specify when an individual Sequence Counter jump is considered to be valid.

The hysteresis improves robustness against a scenario with a buggy master implementation or injection of invalid master messages, i.e., when the Sequence Counter increments by more than `CanTSynGlobalTimeSequenceCounterJumpWidth`. In such a scenario (without any hysteresis) a message with any (also invalid) Sequence Counter value would cause the Time Slave to leave the Timeout state although the Sequence Counter is not incremented correctly. A hysteresis avoids this.

[[SWS\\_CanTSyn\\_00224](#)]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- Sequence Counter check is enabled (i.e., `CanTSynGlobalTimeSequenceCounterJumpWidth > 0`)
- and the Time Domain is in timeout (i.e., TIMEOUT bit set in Time Base synchronization status `timeBaseStatus`)
- and the Sequence Counter is stuck, i.e., the value of the difference between the Sequence Counter of the current message and the Sequence Counter of the previous SYNC (or respectively OFS) message is 0,

then a Time Slave shall consider Sequence Counter jump as invalid.] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20034](#))

[**SWS\_CanTSyn\_00225**]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- Sequence Counter check is enabled (i.e., `CanTSynGlobalTimeSequenceCounterJumpWidth > 0`)
- and the Time Domain is in timeout (i.e., TIMEOUT bit set in Time Base synchronization status `timeBaseStatus`)
- and the message is the first SYNC (or OFS) message in Timeout for which the Sequence Counter is not stuck,

a Time Slave shall consider the Sequence Counter jump as valid.] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20034](#))

**Rationale:** After a Timeout (e.g., due to a reset or disconnect of the Time Master) it is very likely that the Sequence Counter of the first received Timesync message is out of sync, i.e., the Sequence Counter difference exceeds `CanTSynGlobalTimeSequenceCounterJumpWidth`. To allow for faster re-synchronization of the Sequence Counter to the Time Master, the Sequence Counter of the first Timesync message is not checked for `CanTSynGlobalTimeSequenceCounterJumpWidth`. However, a stuck Sequence Counter will always, i.e., also in this situation, be considered as invalid (refer to [[SWS\\_CanTSyn\\_00224](#)]).

[**SWS\_CanTSyn\_00226**]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- Sequence Counter check is enabled (i.e., `CanTSynGlobalTimeSequenceCounterJumpWidth > 0`)
- and the Time Domain is in timeout (i.e., TIMEOUT bit set in Time Base synchronization status `timeBaseStatus`)
- and the Sequence Counter is not stuck, i.e., the value of the difference between the Sequence Counter of the current message and the Sequence Counter of the previous message is not 0
- and the message is not the first SYNC (or OFS) message in Timeout for which the Sequence Counter is not stuck

then a Time Slave shall check if value of the difference between the Sequence Counter of the current message and the Sequence Counter of the previous SYNC (or respectively OFS) message exceeds the threshold `CanTSynGlobalTimeSequenceCounterJumpWidth`.

If the difference value exceeds the threshold `CanTSynGlobalTimeSequenceCounterJumpWidth`, then a Time Slave shall consider the Sequence Counter jump as invalid, else as valid.] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20034](#))

[**SWS\_CanTSyn\_00227**]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- Sequence Counter check is enabled (i.e., `CanTSynGlobalTimeSequenceCounterJumpWidth > 0`)
- and the Time Domain is in timeout (i.e., `TIMEOUT` bit set in Time Base synchronization status `timeBaseStatus`)

a Time Slave shall check the number of consecutive valid Sequence Counter jumps (refer to requirements [[SWS\\_CanTSyn\\_00224](#)], [[SWS\\_CanTSyn\\_00225](#)] and [[SWS\\_CanTSyn\\_00226](#)])

If the number of consecutive valid Sequence Counter jumps exceeds the value `CanTSynGlobalTimeSequenceCounterHysteresis`, a Time Slave shall consider the Sequence Counter value as valid, else as invalid.] ([RS\\_TS\\_20033](#), [RS\\_TS\\_20034](#))

### 7.5.3.5 CRC Validation

**[SWS\_CanTSyn\_00080]** [The function `Crc_CalculateCRC8H2F` as defined in [\[6\]](#) shall be used to validate the `CRC` if configured.

] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20036](#))

**[SWS\_CanTSyn\_00084]** [The `DataID` shall be calculated as `DataID = DataIDList[SC]`, where `DataIDList` is given by configuration for each message Type.] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#))

**Note:** A specific `DataID` out of a predefined `DataIDList` ensures the identification of data elements of time synchronization messages.

**[SWS\_CanTSyn\_00085]** [If `CanTSynUseExtendedMsgFormat` is FALSE, the `CRC` shall be calculated over Time Synchronization message byte 2 to byte 7 and `DataID`, where byte 2 is applied first, followed by the other bytes in ascending order, and `DataID` last.

If `CanTSynUseExtendedMsgFormat` is TRUE, the `CRC` shall be calculated over Time Synchronization message byte 2 to byte 15 and `DataID` for Extended Timesync message formats, where byte 2 is applied first, followed by the other bytes in ascending order, and `DataID` last.

] ([RS\\_TS\\_20034](#), [RS\\_TS\\_20035](#), [RS\\_TS\\_20036](#), [RS\\_TS\\_20068](#))

### 7.5.3.6 ICV Verification

Refer to the chapter 7.3.13 in StbM [\[5\]](#) for the configuration details of `FV` referenced in each Time Domain.

**[SWS\_CanTSyn\_00188]{DRAFT}** [When the `FV` is referenced (refer `CanTSynIcvVerificationFvIdRef`) and `FVL > 0` in the received FUP or Extended OFS

message, the Time Slave shall call the `StbM_GetRxFreshness` Api to obtain the Freshness Value by using

- the `StbMFreshnessValueId` from the reference [CanTSynIcvVerificationFvIdRef](#)
- the `StbMTruncatedFreshnessValue` as received in the `FV` field of the FUP message
- the `StbMTruncatedFreshnessValueLength` as received in the `FVL` field of the FUP message
- the `StbMAuthVerifyAttempts` as the number of failed verification attempts for the current message (ICV verification attempt counter)
- the `StbMFreshnessValueLength` from the reference [CanTSynIcvVerificationFvIdRef](#)

]([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00189]**{DRAFT} [When the `FVL` is 0 in the received FUP or Extended OFS message, the Time Slave shall not include the `FV` in the ICV verification.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00190]**{DRAFT} [When the `FV` is not referenced (refer [CanTSynIcvVerificationFvIdRef](#)) and `FVL > 0` in the received FUP or Extended OFS message, the Time Slave shall stop the ICV verification and consider ICV verification as failed.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00191]**{DRAFT} [If `StbM_GetRxFreshness` returns `E_OK`, the Time Slave shall use the `FV` in ICV verification.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00193]**{DRAFT} [If `StbM_GetRxFreshness` returned a non-recoverable error code (i.e, `E_NOT_OK`), then the Time Slave shall

- consider the ICV verification of a received FUP or Extended OFS message as failed
- stop the ICV verification,
- drop the received FUP or Extended OFS message,
- call `Det_ReportRuntimeError` with the parameter `ErrorId` set to [CANTSYN\\_E\\_FRESHNESSFAILURE](#) (refer [[SWS\\_CanTSyn\\_91001](#)]),
- and call `IdsM_SetSecurityEventWithContextData` with the parameter `EventId` set to [SEV\\_TSYN\\_CAN\\_FRESHNESS\\_NOT\\_AVAILABLE](#) (refer to [[SWS\\_CanTSyn\\_00204](#)] )

]([RS\\_TS\\_20073](#))

Refer to the chapter 10.2.5 in [7] for the configuration details of `CSM` job used for ICV verification.

**[SWS\_CanTSyn\_00194]**{DRAFT} [If `CanTSynIcvVerificationBase` for the Time Domain is configured to `ICV_MAC`, the Time Slave shall call `Csm_MacVerify` to verify the ICV value.] [\(RS\\_TS\\_20073\)](#)

**[SWS\_CanTSyn\_00195]**{DRAFT} [If `CanTSynIcvVerificationBase` for the Time Domain is configured to `ICV_SIGNATURE`, the Time Slave shall call `Csm_SignatureVerify` to verify the ICV value.] [\(RS\\_TS\\_20073\)](#)

**Note:** The `mode` parameter is intentionally left open for the implementer to choose (i.e. `CRYPTO_OPERATIONMODE_SINGLECALL` would possibly be the best option since it does not require further calls to `CSM`).

The `CSM` job used to generate the ICV can be configured to synchronous or asynchronous behaviour.

**[SWS\_CanTSyn\_00196]**{DRAFT} [The ICV verification timeout observation is disabled, when the `CSM` job to verify `ICV` is configured in synchronous behaviour. In this case, the `CanTSynIcvVerificationTimeout` shall be set to 0.] [\(RS\\_TS\\_20073\)](#)

**[SWS\_CanTSyn\_00197]**{DRAFT} [If `Csm_MacVerify` or `Csm_SignatureVerify` returns `E_OK`, the Time Slave shall start the `CanTSynIcvVerificationTimeout`.] [\(RS\\_TS\\_20073\)](#)

**[SWS\_CanTSyn\_00198]**{DRAFT} [The `CanTSynIcvVerificationTimeout` shall be stopped with the notification of the `CanTSyn_IcvVerificationIndication` callback.] [\(RS\\_TS\\_20073\)](#)

**[SWS\_CanTSyn\_00199]**{DRAFT} [When `Csm_MacVerify` or `Csm_SignatureVerify` return a recoverable error code (e.g., `E_BUSY`, `QUEUE_FULL`), then the Time Slave shall

- consider the verification of received FUP or Extended OFS message as failed
- and increment the authentication build counter for this FUP or Extended OFS message.

] [\(RS\\_TS\\_20073\)](#)

**[SWS\_CanTSyn\_00200]**{DRAFT} [If one of the following conditions is true:

- the authentication build counter has reached the configuration value `CanTSyn_RxAuthenticationBuildAttempts`,
- the ICV verification attempt counter has reached the configuration value `CanTSynIcvVerificationAttempts`
- the verification of the ICV has returned a non-recoverable error such as returning `E_NOT_OK` or `KEY_FAILURE`,
- `CanTSynIcvVerificationTimeout` expires before the notification of the `CanTSyn_IcvVerificationIndication` callback,

then the Time Slave shall

- stop the ICV verification and consider the ICV verification as failed,
- and call `IdsM_SetSecurityEventWithContextData` with the parameters `EventId` set to `SEV_TSYN_CAN_ICV_VERIFICATION_FAILED` (refer to [SWS\_CanTSyn\_00204])

]([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00215]**{DRAFT} [For every reception of messages that require ICV verification, the Time Slave shall maintain an authentication build counter (refer to `CanTSynRxAuthenticationBuildAttempts`).]([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00216]**{DRAFT} [Upon the initial processing of messages that require ICV verification (i.e., upon the first attempt of a freshness and ICV check for each received message), the Time Slave shall set the authentication build counter to 0.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00217]**{DRAFT} [When `StbM_GetRxFreshness` returns a recoverable error code (e.g., `STBM_E_BUSY`), then the Time Slave shall increment the authentication build counter and shall not execute verification of the ICV.] ([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00218]**{DRAFT} [If

- the verification of the authenticated message has failed
- and the authentication build counter has not yet reached the configuration value `CanTSynRxAuthenticationBuildAttempts`,

then the Time Slave shall retry the freshness attempt and ICV verification in the next call of `CanTSyn_MainFunction`.]([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00219]**{DRAFT} [If the verification of the ICV could be successfully executed but the verification failed (e.g. the MAC verification has failed or the key was invalid), then the Time Slave shall

- increment the ICV verification attempt counter
- and set the authentication build counter to 0.

]([RS\\_TS\\_20073](#))

**Note:** Resetting the authentication build counter will prevent dropping the authentication process too early even though ICV verification attempts are still possible.

### 7.5.3.7 Message Disassembling

**[SWS\_CanTSyn\_00086]** [For each received Time Synchronization message the CanTSyn shall validate the message as follows (all conditions must match):

1. Type matches depending on the `CanTSynRxCrcValidated` parameter

2. `sc` value is valid (refer to [SWS\_CanTSyn\_00221], [SWS\_CanTSyn\_00222], [SWS\_CanTSyn\_00223], [SWS\_CanTSyn\_00224], [SWS\_CanTSyn\_00225], [SWS\_CanTSyn\_00226], [SWS\_CanTSyn\_00227])
  3. `D` matches to the defined Time Domain range for each `Type`
  4. `D` matches to one of the configured Time Domains (given by parameter `CanTSynGlobalTimeDomainId`)
  5. `SyncTimeNSec` (FUP / OFNS / Extended OFS only) matches the defined range of `StbM_TimeStampType.nanoseconds`.
  6. `CRC` (including `DataID`) matches depending on the `CanTSynRxCrcValidated` parameter
  7. `ICV` matches depending on the `CanTSynRxIcvVerificationType` parameter
- ](RS\_TS\_20035, RS\_TS\_20036, RS\_TS\_20073)

**[SWS\_CanTSyn\_00087]** [If the validation of received Time Synchronization message is successful (refer to [SWS\_CanTSyn\_00086]), the CanTSyn shall disassemble the message and forward the global time via `StbM_BusSetGlobalTime` to `StbM`.](RS\_TS\_20034, RS\_TS\_20035, RS\_TS\_20036, RS\_TS\_20073)

**[SWS\_CanTSyn\_00206]** [If the validation of the received Time Synchronization message has failed (refer to [SWS\_CanTSyn\_00086]), the CanTSyn shall discard the received Time Synchronization message.](RS\_TS\_20035, RS\_TS\_20036, RS\_TS\_20073)

## 7.6 Time Recording

### 7.6.1 Global Time Precision Measurement

**[SWS\_CanTSyn\_00115]** [On an invocation of `StbM_BusSetGlobalTime` the parameter `pathDelay` of the `measureDataPtr` structure shall be set to 0.  
](RS\_TS\_20034)

### 7.6.2 Time Validation

**[SWS\_CanTSyn\_00137]** [The `CanTSyn` shall support Time Validation, if `CanTSynTimeValidationSupport` set to TRUE.](RS\_TS\_00034)

**[SWS\_CanTSyn\_00138]** [  
If

- `CanTSynTimeValidationSupport` is enabled and
- `CanTSynEnableTimeValidation` for the Time Domain is enabled

`CanTSyn` shall do time recording for Time Validation for that Time Domain  
][\(RS\\_TS\\_00034\)](#)

**[SWS\_CanTSyn\_00139]** [

If

- time recording for Time Validation is enabled for a Time Domain (refer to [\[SWS\\_CanTSyn\\_00137\]](#) and [\[SWS\\_CanTSyn\\_00138\]](#))
- and `CanTSyn` is configured as Time Slave for that Time Domain,

`CanTSyn` shall call `StbM_SetSlaveTimingData` upon successful reception of a FUP message.

`StbM_SetSlaveTimingData` shall be called after `StbM_BusSetGlobalTime`.  
][\(RS\\_TS\\_00034\)](#)

**Note:** `StbM_BusSetGlobalTime` shall be called first, because it updates the Synclocal Time Tuple (refer to [\[5\]](#)), which is required by `StbM_SetSlaveTimingData`.

**[SWS\_CanTSyn\_00140]** [Upon invocation of `StbM_SetSlaveTimingData` `CanTSyn` shall pass following values

- the sequence counter value from the transmitter (Time Master),
- the segment id of the physical channel on which the SYNC message has been received (refer to parameter `CanTSynGlobalTimeNetworkSegmentId`)
- $T_{2_{VLT}}$  as `syncIngressTimestamp` for the SYNC message (refer to step 1 in [\[SWS\\_CanTSyn\\_00144\]](#), [\[SWS\\_CanTSyn\\_00147\]](#) and [\[SWS\\_CanTSyn\\_00148\]](#)),
- $T_0 + T_4$  as `preciseOriginTimestamp` received from the Time Master (refer to [\[SWS\\_CanTSyn\\_00144\]](#) and [\[SWS\\_CanTSyn\\_00145\]](#))

to the function by the parameter `measureDataPtr`.

Struct members

- `measureDataPtr->referenceLocalTimestamp` and
- `measureDataPtr->referenceGlobalTimestamp`

shall be passed as 0.

][\(RS\\_TS\\_00034\)](#)

**Note:** The `CanTSyn` passes 0 to avoid undefined values. The structure members `referenceLocalTimestamp` and `referenceGlobalTimestamp` will be set by the `StbM` via `StbM_SetSlaveTimingData` internally (refer to [\[SWS\\_StbM\\_00471\]](#) in [\[5\]](#)).

**[SWS\_CanTSyn\_00141]** [

If

- time recording for Time Validation is enabled for a Time Domain (refer to [SWS\_CanTSyn\_00137] and [SWS\_CanTSyn\_00138])
- and CanTSyn is configured as Time Master for that Time Domain

CanTSyn shall call StbM\_SetMasterTimingData upon successful transmission of a SYNC message).

](RS\_TS\_00034)

**[SWS\_CanTSyn\_00142]** [Upon invocation of StbM\_SetMasterTimingData CanTSyn shall pass the following data

- the sequence counter as sent in the SYNC message
- the segment id of the physical channel on which the SYNC message has been sent (refer to parameter CanTSynGlobalTimeNetworkSegmentId)
- T<sub>1\_VLT</sub> as the syncEgressTimestamp of SYNC message (refer to [SWS\_CanTSyn\_00149], [SWS\_CanTSyn\_00152] and [SWS\_CanTSyn\_00153]),
- T<sub>0\_SYNC</sub> + (T<sub>1\_VLT</sub> - T<sub>0\_VLT</sub>) as preciseOriginTimestamp (refer to [SWS\_CanTSyn\_00149], [SWS\_CanTSyn\_00151], [SWS\_CanTSyn\_00152] and [SWS\_CanTSyn\_00153]),

to the function by the parameter measureDataPtr.

](RS\_TS\_00034)

## 7.7 Security Events

**[SWS\_CanTSyn\_00201]{DRAFT}** [If security event reporting has been enabled for the CanTSyn module (CanTSynEnableSecurityEventReporting = TRUE) the respective security events shall be reported to the IdsM [8] via the interfaces defined in BSWGeneral [3].](RS\_ids\_00810)

The following table lists the security events which are standardized for the CanTSyn together with their trigger conditions.

**[SWS\_CanTSyn\_00204] Security events for CanTSyn** [

Name	Description	ID
SEV_TSYN_CAN_ICV_GENERATION_FAILED	ICV generation for a FUP or Extended OFS message has failed	66
SEV_TSYN_CAN_ICV_VERIFICATION_FAILED	ICV verification of a FUP or Extended OFS message has failed	67
SEV_TSYN_CAN_FRESHNESS_NOT_AVAILABLE	Failed to get freshness value from FvM	68



△

Name	Description	ID
SEV_TSYN_CAN_MSG_SEQUENCE_ERROR	Failed to receive correct sequence of SYNC and FUP or OFS and OFNS from the TimeMaster within (CanTSyn GlobalTimeFollowUpTimeout).	69

」(RS\_Ids\_00810)

The following table describes the context data which shall be reported for the respective security events:

**[SWS\_CanTSyn\_00205]{DRAFT} Context data of respective Security events of CanTSyn** [

Security Event	Context Data
SEV_TSYN_CAN_ICV_GENERATION_FAILED	Context Data (1 byte) - GlobalTimeDomainId
SEV_TSYN_CAN_ICV_VERIFICATION_FAILED	Context Data (1 byte) - GlobalTimeDomainId
SEV_TSYN_CAN_FRESHNESS_NOT_AVAILABLE	Context Data (1 byte) - GlobalTimeDomainId
SEV_TSYN_CAN_MSG_SEQUENCE_ERROR	Context Data (1 byte) - GlobalTimeDomainId

」(RS\_Ids\_00810)

## 7.8 Error Classification

Section 7.2 "Error Handling" of the document "General Specification of Basic Software Modules" [3] describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

### 7.8.1 Development Errors

**[SWS\_CanTSyn\_00089] Definition of development errors in module CanTSyn** [

Type of error	Related error code	Error value
API service called with wrong PDU or SDU	CANTSYN_E_INVALID_PDUID	0x01
API service used in un-initialized state	CANTSYN_E_UNINIT	0x02
A pointer is NULL	CANTSYN_E_NULL_POINTER	0x03
CanTSyn initialization failed	CANTSYN_E_INIT_FAILED	0x04
API called with invalid parameter	CANTSYN_E_PARAM	0x05
Invalid Controller index	CANTSYN_E_INV_CTRL_IDX	0x06

」(SRS\_BSW\_00385)

### 7.8.2 Runtime Errors

[SWS\_CanTSyn\_91001] Definition of runtime errors in module CanTSyn [

Type of error	Related error code	Error value
No FV available from the FVM	CANTSYN_E_FRESHNESSFAILURE	0x01

] ([SRS\\_BSW\\_00385](#))

### 7.8.3 Transient Faults

There are no transient faults.

### 7.8.4 Production Errors

There are no production errors.

### 7.8.5 Extended Production Errors

There are no extended production errors.

## 8 API specification

### 8.1 Imported types

In this section all types included from the following files are listed:

#### [SWS\_CanTSyn\_00090] Definition of imported datatypes of module CanTSyn [

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
Can	Can_GeneralTypes.h	Can_TimeStampType (draft)
ComStack_Types	ComStack_Types.h	PduldType
	ComStack_Types.h	PduInfoType
	ComStack_Types.h	PduLengthType
Csm	Rte_Csm_Type.h	Crypto_OperationModeType
	Rte_Csm_Type.h	Crypto_ResultType
	Rte_Csm_Type.h	Crypto_VerifyResultType
Eth	Eth.h	Eth_RateDeviationStatusType (draft)
	Eth.h	Eth_RateDeviationType (draft)
IdsM	IdsM_Types.h	IdsM_SecurityEventIdType
StbM	Rte_StbM_Type.h	StbM_CanTimeMasterMeasurementType
	Rte_StbM_Type.h	StbM_CanTimeSlaveMeasurementType
	Rte_StbM_Type.h	StbM_SynchronizedTimeBaseType
	Rte_StbM_Type.h	StbM_TimeBaseStatusType
	Rte_StbM_Type.h	StbM_TimeStampShortType
	Rte_StbM_Type.h	StbM_TimeStampType
	Rte_StbM_Type.h	StbM_TimeTupleType
	Rte_StbM_Type.h	StbM_UserDataType
	StbM.h	StbM_MeasurementType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

] (RS\_TS\_20035)

### 8.2 Type definitions

#### 8.2.1 CanTSyn\_ConfigType

#### [SWS\_CanTSyn\_00091] Definition of datatype CanTSyn\_ConfigType [

<i>Name</i>	CanTSyn_ConfigType
<i>Kind</i>	Structure
<i>Elements</i>	implementation specific



△

	<b>Type</b>	-
	<b>Comment</b>	-
<b>Description</b>	This is the base type for the configuration of the Time Synchronization over CAN. A pointer to an instance of this structure will be used in the initialization of the Time Synchronization over CAN. The content of this structure is defined in chapter 10 Configuration specification.	
<b>Available via</b>	CanTSyn.h	

](RS\_TS\_20035)

## 8.2.2 CanTSyn\_TransmissionModeType

[SWS\_CanTSyn\_00092] Definition of datatype CanTSyn\_TransmissionModeType

<b>Name</b>	CanTSyn_TransmissionModeType		
<b>Kind</b>	Enumeration		
<b>Range</b>	CANTSYN_TX_OFF	-	Transmission Disabled
	CANTSYN_TX_ON	-	Transmission Enabled
<b>Description</b>	Handles the enabling and disabling of the transmission mode		
<b>Available via</b>	CanTSyn.h		

](RS\_TS\_20035)

## 8.3 Function definitions

### 8.3.1 CanTSyn\_Init

[SWS\_CanTSyn\_00093] Definition of API function CanTSyn\_Init

<b>Service Name</b>	CanTSyn_Init	
<b>Syntax</b>	<pre>void CanTSyn_Init (     const CanTSyn_ConfigType* configPtr )</pre>	
<b>Service ID [hex]</b>	0x01	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non Reentrant	
<b>Parameters (in)</b>	configPtr	Pointer to selected configuration structure
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	This function initializes the Time Synchronization over CAN.	
<b>Available via</b>	CanTSyn.h	

](RS\_TS\_20035)

`CANTSYN_E_INIT_FAILED` is reported as specified by [SWS\_BSW\_00050] in [3]. See section 7.2.2 for details.

### 8.3.2 CanTSyn\_GetVersionInfo

#### [SWS\_CanTSyn\_00094] Definition of API function CanTSyn\_GetVersionInfo

<b>Service Name</b>	CanTSyn_GetVersionInfo	
<b>Syntax</b>	<pre>void CanTSyn_GetVersionInfo (     Std_VersionInfoType* versioninfo )</pre>	
<b>Service ID [hex]</b>	0x02	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non Reentrant	
<b>Parameters (in)</b>	None	
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	versioninfo	Pointer to where to store the version information of this module.
<b>Return value</b>	None	
<b>Description</b>	Returns the version information of this module.	
<b>Available via</b>	CanTSyn.h	

」(RS\_TS\_20035)

### 8.3.3 CanTSyn\_SetTransmissionMode

#### [SWS\_CanTSyn\_00095] Definition of API function CanTSyn\_SetTransmissionMode

<b>Service Name</b>	CanTSyn_SetTransmissionMode	
<b>Syntax</b>	<pre>void CanTSyn_SetTransmissionMode (     uint8 CtrlIdx,     CanTSyn_TransmissionModeType Mode )</pre>	
<b>Service ID [hex]</b>	0x03	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non Reentrant	
<b>Parameters (in)</b>	CtrlIdx	Index of the CAN channel
	Mode	CANTSYN_TX_OFF CANTSYN_TX_ON
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	This API is used to turn on and off the TX capabilities of the CanTSyn.	
<b>Available via</b>	CanTSyn.h	

」(RS\_TS\_20035)

**[SWS\_CanTSyn\_00134]** [The function `CanTSyn_SetTransmissionMode` shall inform the `Det`, if development error detection is enabled (i.e., `CanTSynDevErrorDetect` is set to TRUE) and if function call has failed because of the following reasons:

- Invalid CtrlIdx (`CANTSYN_E_INV_CTRL_IDX`)
- Invalid Mode (`CANTSYN_E_PARAM`)

]([SRS\\_BSW\\_00323](#), [SRS\\_BSW\\_00337](#))

## 8.4 Callback notifications

This is a list of functions provided for other modules.

### 8.4.1 CanTSyn\_RxIndication

**[SWS\_CanTSyn\_00096]** Definition of callback function `CanTSyn_RxIndication` [

<b>Service Name</b>	CanTSyn_RxIndication	
<b>Syntax</b>	<pre>void CanTSyn_RxIndication (     PduldType RxPduId,     const PduInfoType* PduInfoPtr )</pre>	
<b>Service ID [hex]</b>	0x42	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
<b>Parameters (in)</b>	RxPduld	ID of the received PDU.
	PduInfoPtr	Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	Indication of a received PDU from a lower layer communication interface module.	
<b>Available via</b>	CanTSyn.h	

]([RS\\_TS\\_20035](#))

**Note:** The callback function `CanTSyn_RxIndication` called by the CAN Interface and implemented by the `CanTSyn` module. It is called in case of a receive indication event of the CAN Driver.

**[SWS\_CanTSyn\_00097]** [The callback function `CanTSyn_RxIndication` shall inform the `Det`, if development error detection is enabled (`CanTSynDevErrorDetect` is set to TRUE) and if function call has failed because of the following reasons:

- Invalid PDU ID (`CANTSYN_E_INVALID_PDUID`)
- `PduInfoPtr` or `SduDataPtr` equals `NULL_PTR` (`CANTSYN_E_NULL_POINTER`)

]([SRS\\_BSW\\_00323](#), [SRS\\_BSW\\_00337](#))

Caveats of [CanTSyn\\_RxIndication](#):

- Until this service returns, the CAN Interface will not access `canSduPtr`. The `canSduPtr` is only valid and can be used by upper layers until the indication returns. The CAN Interface guarantees that the number of configured bytes for this `CanTSynRxPduId` is valid. The call context is either on interrupt level (interrupt mode) or on task level (polling mode). This callback service is re-entrant for multiple CAN controller usage.

**Note:** Using polling mode as call context significantly increases the latency and thus reduces the precision. It is therefore highly recommended to only use interrupt mode.

- The [CanTSyn](#) module is initialized correctly.

#### 8.4.2 CanTSyn\_TxConfirmation

[[SWS\\_CanTSyn\\_00099](#)] Definition of callback function [CanTSyn\\_TxConfirmation](#)

└

<b>Service Name</b>	CanTSyn_TxConfirmation	
<b>Syntax</b>	<pre>void CanTSyn_TxConfirmation (     PdulIdType TxPduId,     Std_ReturnType result )</pre>	
<b>Service ID [hex]</b>	0x40	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
<b>Parameters (in)</b>	TxPduld	ID of the PDU that has been transmitted.
	result	E_OK: The PDU was transmitted. E_NOT_OK: Transmission of the PDU failed.
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU.	
<b>Available via</b>	CanTSyn.h	

]([RS\\_TS\\_20035](#))

**Note:** The callback function [CanTSyn\\_TxConfirmation](#) is called by the CAN Interface and implemented by the [CanTSyn](#) module.

[[SWS\\_CanTSyn\\_00100](#)] [The callback function [CanTSyn\\_TxConfirmation](#) shall inform the [Det](#), if development error detection is enabled ([CanTSynDevErrorDetect](#) is set to TRUE) and if the function call has failed because of the following reason:

- Invalid PDU ID ([CANTSYN\\_E\\_INVALID\\_PDUID](#)), i.e., a PDU ID not configured by parameter [CanTSynGlobalTimeMasterConfirmationHandleId](#)

]([SRS\\_BSW\\_00323](#), [SRS\\_BSW\\_00337](#))

Caveats of [CanTSyn\\_TxConfirmation](#):

- The call context is either on interrupt level (interrupt mode) or on task level (polling mode). This callback service is re-entrant for multiple CAN controller usage.
- Note:** Using polling mode as call context significantly increases the latency and thus reduces the precision. It is therefore highly recommended to only use interrupt mode.
- The [CanTSyn](#) module is initialized correctly.

#### 8.4.3 CanTSyn\_IcvGenerationIndication

**[SWS\_CanTSyn\_91002]{DRAFT} Definition of API function CanTSyn\_IcvGenerationIndication** ↗

<b>Service Name</b>	CanTSyn_IcvGenerationIndication (draft)	
<b>Syntax</b>	<pre>void CanTSyn_IcvGenerationIndication (     uint32 jobId,     Crypto_ResultType result )</pre>	
<b>Service ID [hex]</b>	0x7	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	jobId	JobID of the operation that caused the callback.
	result	Contains the result of the cryptographic operation.
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	By this API service the CanTSyn gets an indication and the result of ICV generation. <b>Tags:</b> atp.Status=draft	
<b>Available via</b>	CanTSyn.h	

]([RS\\_TS\\_20073](#))

**[SWS\_CanTSyn\_00202]{DRAFT}** [The function [CanTSyn\\_IcvGenerationIndication](#) shall inform the DET, if development error detection is enabled ([CanTSynDevErrorDetect](#) is set to TRUE) and if function call has failed because of the following reasons:

- jobId is invalid ([CANTSYN\\_E\\_PARAM](#))

]([SRS\\_BSW\\_00323](#), [SRS\\_BSW\\_00337](#))

#### 8.4.4 CanTSyn\_IcvVerificationIndication

[SWS\_CanTSyn\_91003]{DRAFT} Definition of API function CanTSyn\_IcvVerificationIndication

<b>Service Name</b>	CanTSyn_IcvVerificationIndication (draft)	
<b>Syntax</b>	<pre>void CanTSyn_IcvVerificationIndication (     uint32 jobId,     Crypto_ResultType result )</pre>	
<b>Service ID [hex]</b>	0x8	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	jobId	JobID of the operation that caused the callback.
	result	Contains the result of the cryptographic operation.
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	By this API service the CanTSyn gets an indication and the result of ICV verification. <b>Tags:</b> atp.Status=draft	
<b>Available via</b>	CanTSyn.h	

](RS\_TS\_20073)

[SWS\_CanTSyn\_00203]{DRAFT} [The function CanTSyn\_IcvVerificationIndication() shall inform the DET, if development error detection is enabled ([CanTSynDevErrorDetect](#) is set to TRUE) and if function call has failed because of the following reasons:

- jobId is invalid ([CANTSYN\\_E\\_PARAM](#))

](SRS\_BSW\_00323, SRS\_BSW\_00337)

#### 8.5 Scheduled functions

These functions are directly called by the Basic Software Scheduler. The following functions shall have no return value and no parameters. All functions shall be non-reentrant.

### 8.5.1 CanTSyn\_MainFunction

**[SWS\_CanTSyn\_00102] Definition of scheduled function CanTSyn\_MainFunction** [

<b>Service Name</b>	CanTSyn_MainFunction
<b>Syntax</b>	void CanTSyn_MainFunction ( void )
<b>Service ID [hex]</b>	0x06
<b>Description</b>	Main function for cyclic call / resp. Timesync message transmission
<b>Available via</b>	CanTSyn_SchM.h

] ([RS\\_TS\\_20035](#))

**[SWS\_CanTSyn\_00103]** [The frequency of invocations of [CanTSyn\\_MainFunction](#) is determined by the configuration parameter [CanTSynMainFunctionPeriod](#).] ([RS\\_TS\\_20035](#))

## 8.6 Expected interfaces

In this chapter all interfaces required from other modules are listed.

### 8.6.1 Mandatory interfaces

Note: This section defines all interfaces, which are required to fulfill the core functionality of the module.

**[SWS\_CanTSyn\_00105] Definition of mandatory interfaces in module CanTSyn** [

<b>API Function</b>	<b>Header File</b>	<b>Description</b>
StbM_GetCurrentVirtualLocalTime	StbM.h	Returns the Virtual Local Time of the referenced Time Base.

] ([RS\\_TS\\_20035](#))

### 8.6.2 Optional interfaces

This section defines all interfaces, which are required to fulfill an optional functionality of the module.

## [SWS\_CanTSyn\_00106] Definition of optional interfaces in module CanTSyn [

<b>API Function</b>	<b>Header File</b>	<b>Description</b>
CanIf_EnableEgressTimeStamp (draft)	CanIf.h	This service calls the corresponding CAN Driver service to activate egress time stamping on a dedicated message object.  <b>Tags:</b> atp.Status=draft
CanIf_GetCurrentTime (draft)	CanIf.h	This service calls the corresponding CAN Driver service to retrieve the current time value out of the HW registers.  <b>Tags:</b> atp.Status=draft
CanIf_GetEgressTimeStamp (draft)	CanIf.h	This service calls the corresponding CAN Driver service to read back the egress time stamp on a dedicated message object. It needs to be called within the TxConfirmation() function.  <b>Tags:</b> atp.Status=draft
CanIf_GetIngressTimeStamp (draft)	CanIf.h	This service calls the corresponding CAN Driver service to reads back the ingress time stamp on a dedicated message object. It needs to be called within the RxIndication() function.  <b>Tags:</b> atp.Status=draft
CanIf_Transmit	CanIf.h	Requests transmission of a PDU.
Crc_CalculateCRC8H2F	Crc.h	This service makes a CRC8 calculation with the Polynomial 0x2F on Crc_Length
Csm_MacGenerate	Csm.h	Uses the given data to perform a MAC generation and stores the MAC in the memory location pointed to by the MAC pointer.
Csm_MacVerify	Csm.h	Verifies the given MAC by comparing if the MAC is generated with the given data.
Csm_SignatureGenerate	Csm.h	Uses the given data to perform the signature calculation and stores the signature in the memory location pointed by the result pointer.
Csm_SignatureVerify	Csm.h	Verifies the given MAC by comparing if the signature is generated with the given data.
Det_ReportError	Det.h	Service to report development errors.
Det_ReportRuntimeError	Det.h	Service to report runtime errors. If a callout has been configured then this callout shall be called.
IdsM_SetSecurityEventWithContextData	IdsM.h	This API is the application interface to report security events with context data to the IdsM.
StbM_BusSetGlobalTime	StbM.h	Allows the Time Base Provider Modules to forward the Rx Time Tuple to the StbM.
StbM_CanSetMasterTimingData (draft)	StbM_CanTSyn.h	Provides CAN Timesyn module specific data for a Time Master to the StbM.  <b>Tags:</b> atp.Status=draft
StbM_CanSetSlaveTimingData (draft)	StbM_CanTSyn.h	Allows the CanTSyn Module to forward CAN specific details to the StbM.  <b>Tags:</b> atp.Status=draft
StbM_GetCurrentTime	StbM.h	Returns a time tuple (Local time, Global time and Timebase status) and user data details Note: This API shall be called with locked interrupts / within an Exclusive Area to prevent interruption (i.e., the risk that the time stamp is outdated on return of the function call).
StbM_GetOffset	StbM.h	Allows the Timesync Modules to get the current Offset Time and User Data.






<b>API Function</b>	<b>Header File</b>	<b>Description</b>
StbM_GetRxFreshness (draft)	StbM.h	This interface is used by the StbM to query the current freshness value. <b>Tags:</b> atp.Status=draft
StbM_GetTimeBaseStatus	StbM.h	Returns detailed status information for a Synchronized (or Pure Local) Time Base and, if called for an Offset Time Base, for the Offset Time Base and the underlying Synchronized Time Base.
StbM_GetTimeBaseUpdateCounter	StbM.h	Allows the Timesync Modules to detect, whether a Time Base should be transmitted immediately in the subsequent <Bus>TSyn_MainFunction() cycle.
StbM_GetTxFreshness (draft)	StbM.h	This API returns the freshness value from the Most Significant Bits in the first byte, of the Freshness array, in big endian format. <b>Tags:</b> atp.Status=draft
StbM_GetTxFreshnessTruncData (draft)	StbM.h	This interface is used by the StbM to obtain the current freshness value. The interface function provides also the truncated freshness transmitted in the secured time sync message. <b>Tags:</b> atp.Status=draft
StbM_SPduTxConfirmation (draft)	StbM.h	This interface is used by the StbM to indicate that the Secured Time Synchronization Message has been initiated for transmission. <b>Tags:</b> atp.Status=draft

] ([RS\\_TS\\_20035](#))

## 9 Sequence diagrams

### 9.1 Enable Egress Timestamping

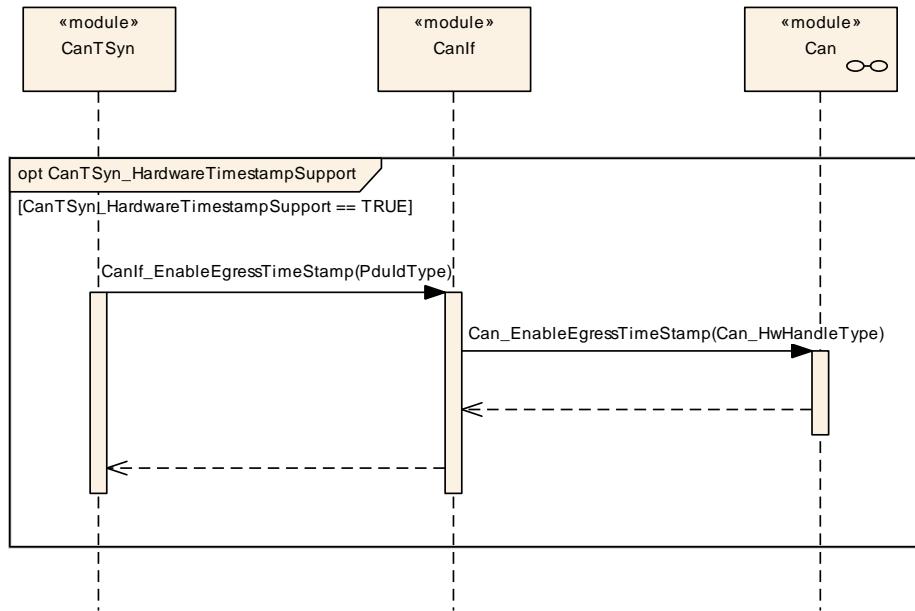

**Figure 9.1: Enable Egress Timestamping**

## 9.2 CAN Time Synchronization (Time Master)

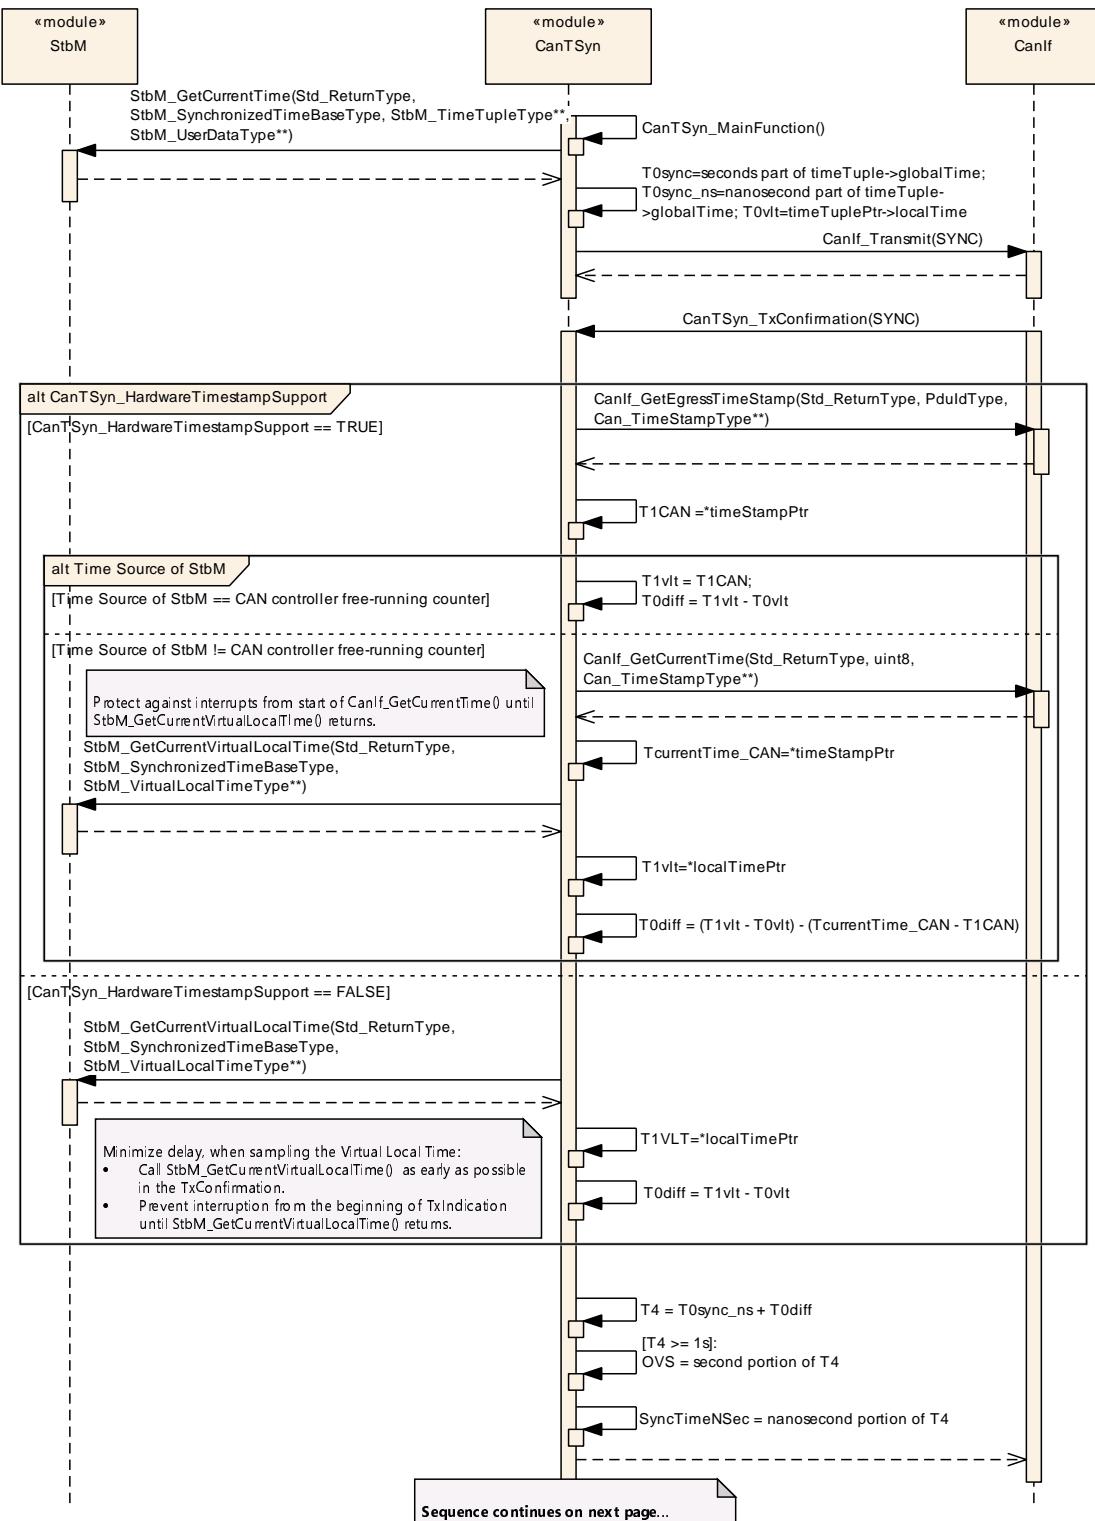
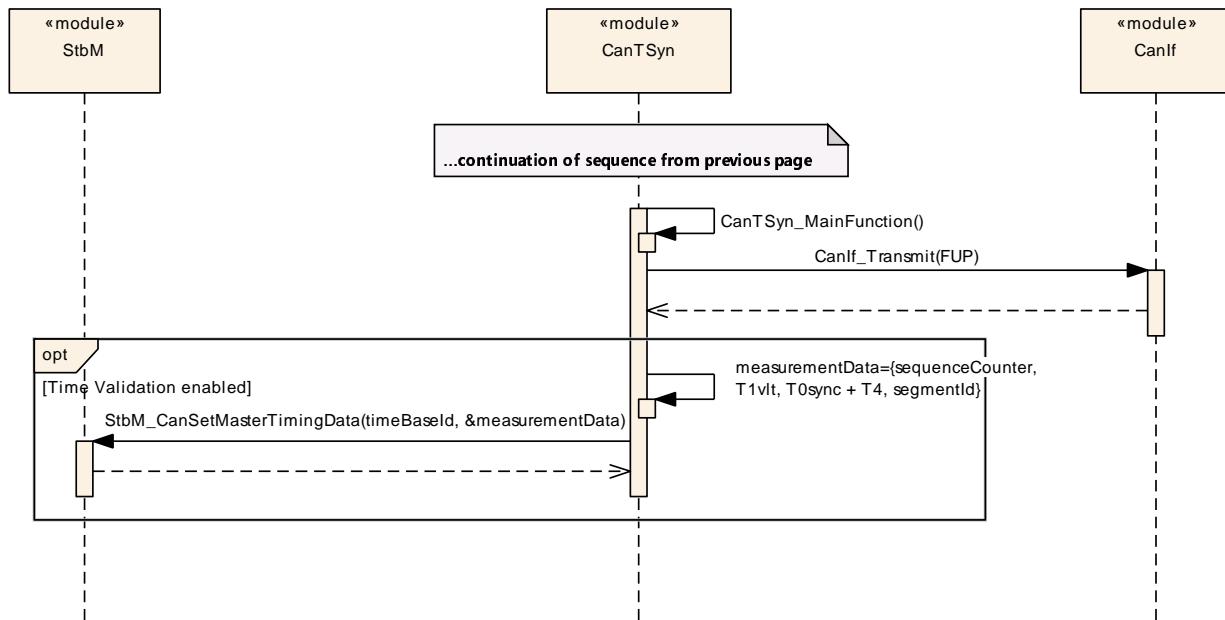


Figure 9.2: CAN Time Synchronization (Time Master), Part 1


**Figure 9.3: CAN Time Synchronization (Time Master), Part 2**

### 9.3 CAN Time Synchronization (Time Slave)



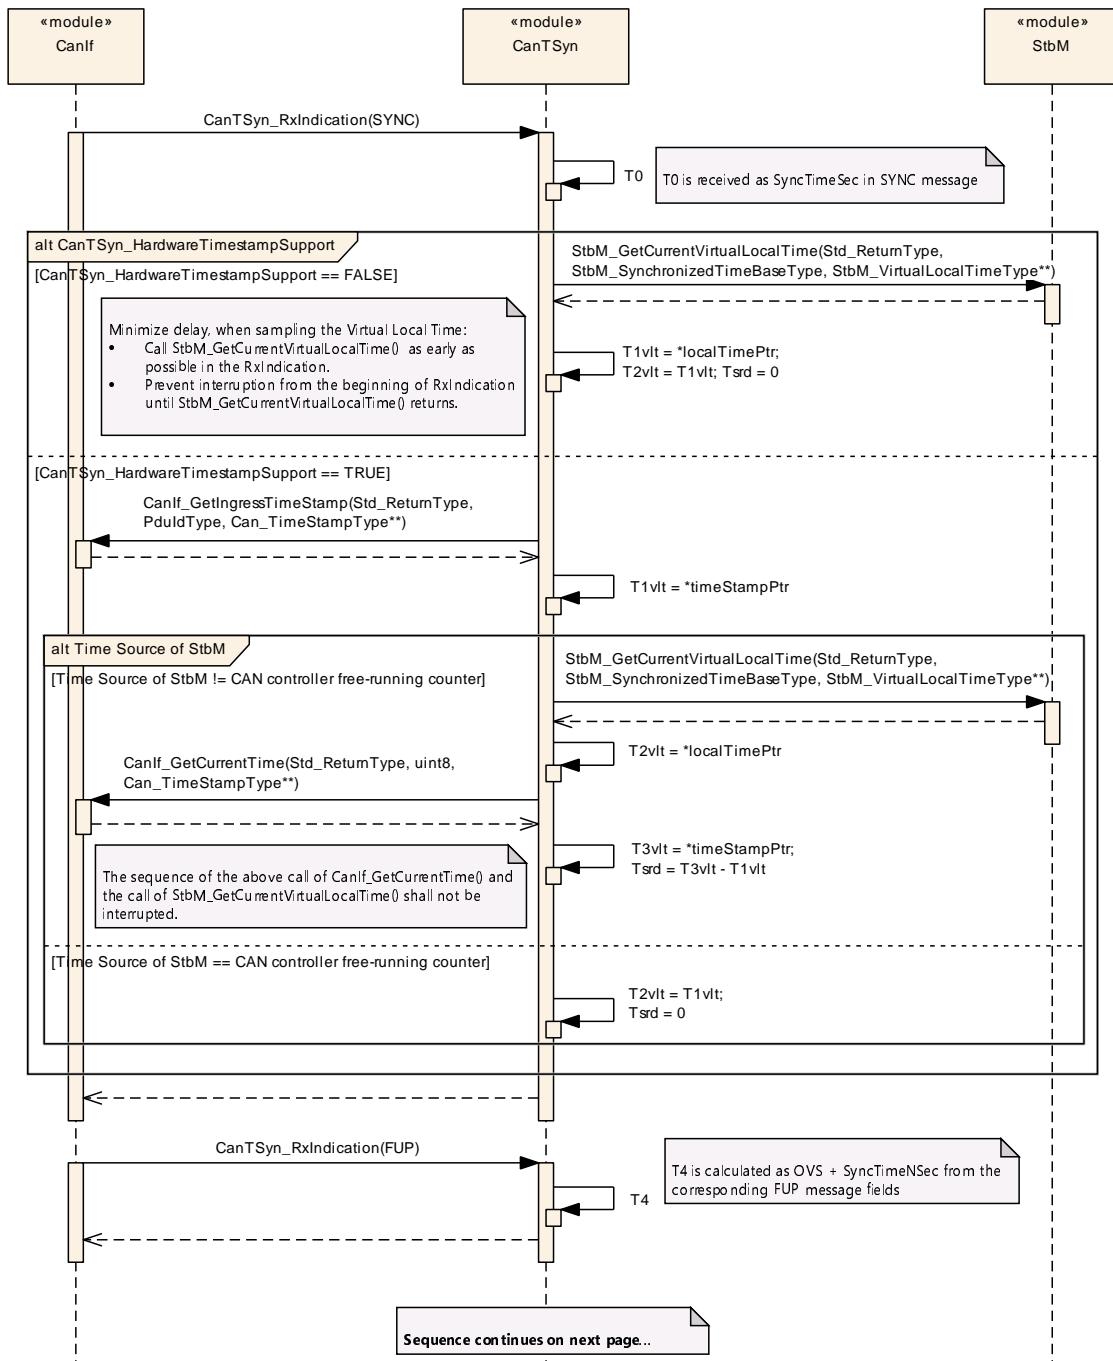


Figure 9.4: CAN Time Synchronization (Time Slave), Part 1

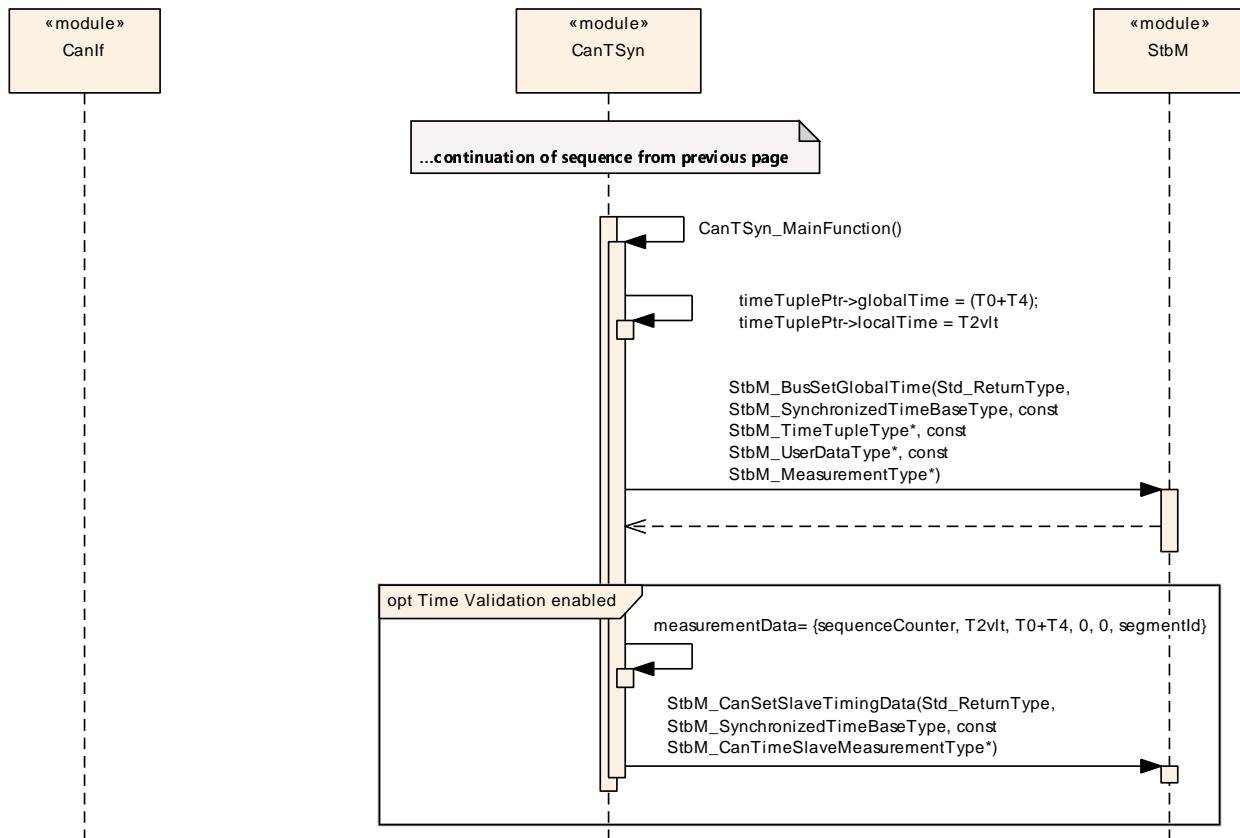

**Figure 9.5: CAN Time Synchronization (Time Slave), Part 2**

## 9.4 CAN Secure Time Synchronization (Time Master, Time Slave)

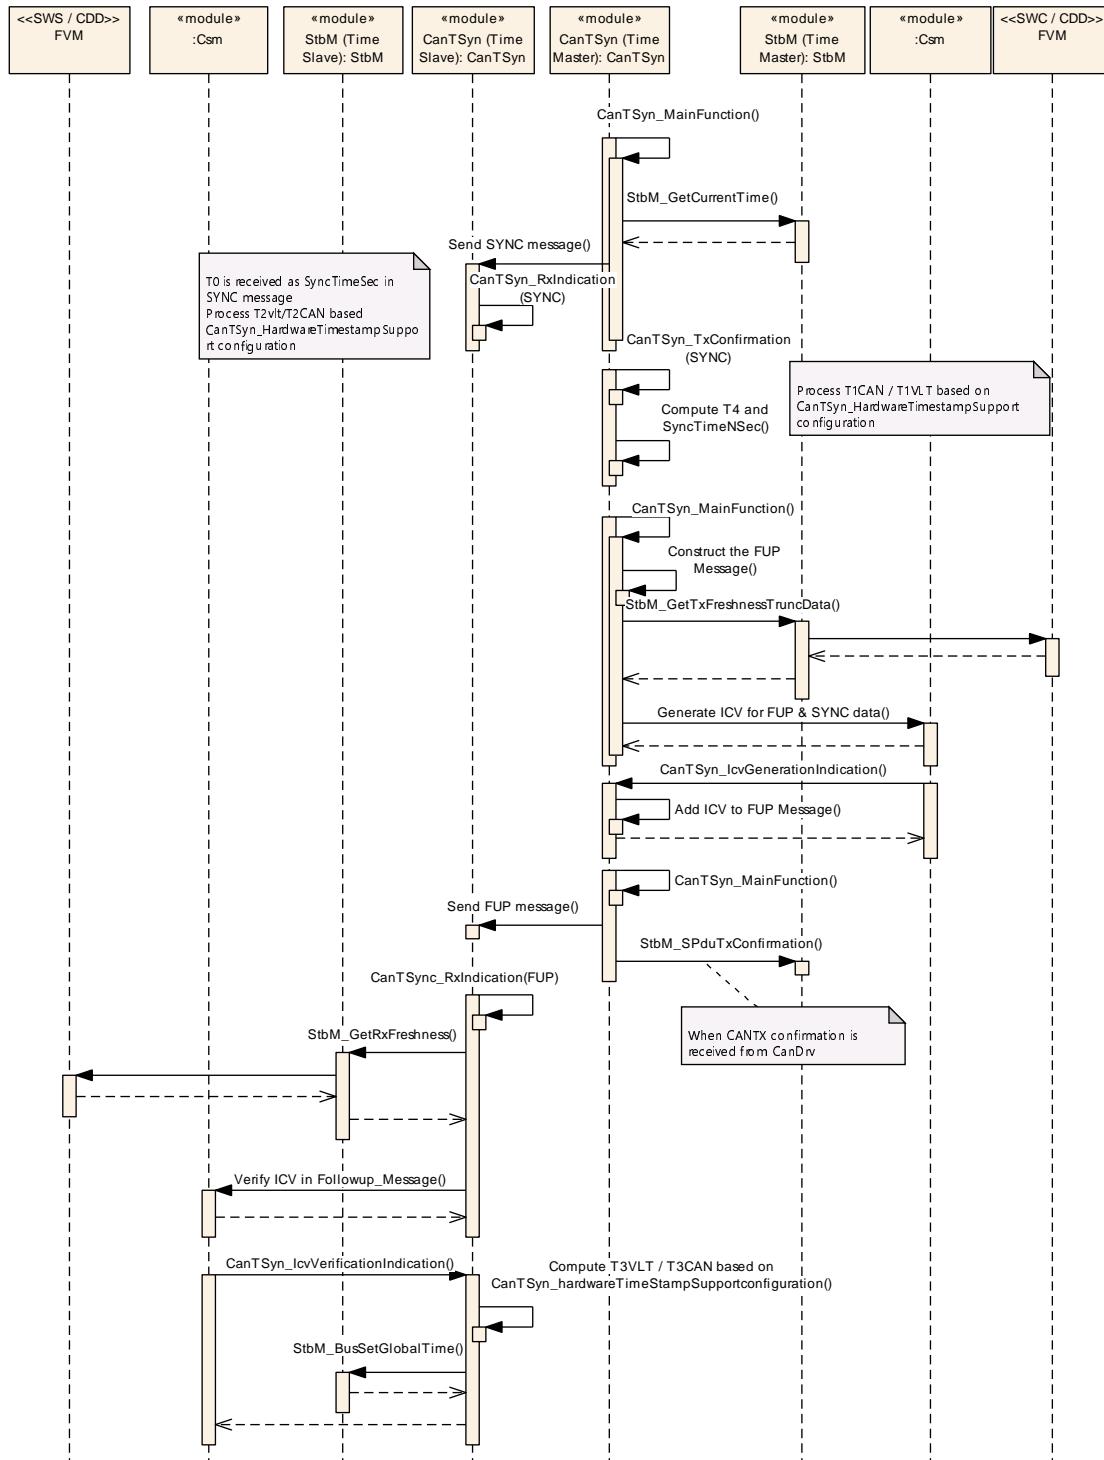

**Figure 9.6: Secure Time Synchronization Sequence**

## 10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module [CanTSyn](#).

Chapter 10.4 specifies published information of the module [CanTSyn](#).

### 10.1 How to read this chapter

For details refer to the chapter 10.1 "Introduction to configuration specification" in [3].

### 10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapter 7 and Chapter 8.

#### 10.2.1 Variants

**[SWS\_CanTSyn\_00108]** [The Time Synchronization over CAN shall support the configuration for Time Master, Time Slave and Time Gateway.] ([RS\\_TS\\_20038](#))

The module supports different post-build variants (previously known as post-build selectable configuration sets), but not post-build loadable configuration.

#### 10.2.2 CanTSyn

SWS Item	[ECUC_CanTSyn_00001]
Module Name	CanTSyn
Description	Configuration of the Synchronized Time-base Manager (StbM) module with respect to global time handling on CAN.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTSynGeneral	1	This container holds the general parameters of the CAN-specific Synchronized Time-base Manager
CanTSynGlobalTimeDomain	1..*	This represents the existence of a global time domain on CAN. The CanTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains.  If the CanTSyn exists it is assumed that at least one global time domain exists.

### 10.2.3 CanTSynGeneral

SWS Item	[ECUC_CanTSyn_00003]
Container Name	CanTSynGeneral
Parent Container	CanTSyn
Description	This container holds the general parameters of the CAN-specific Synchronized Time-base Manager
Configuration Parameters	

SWS Item	[ECUC_CanTSyn_00002]									
Parameter Name	CanTSynDevErrorDetect									
Parent Container	CanTSynGeneral									
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>									
Multiplicity	1									
Type	EcucBooleanParamDef									
Default value	false									
Post-Build Variant Value	false									
Value Configuration Class	<table border="1"> <tr> <td>Pre-compile time</td> <td>X</td> <td>All Variants</td> </tr> <tr> <td>Link time</td> <td>-</td> <td></td> </tr> <tr> <td>Post-build time</td> <td>-</td> <td></td> </tr> </table>	Pre-compile time	X	All Variants	Link time	-		Post-build time	-	
Pre-compile time	X	All Variants								
Link time	-									
Post-build time	-									
Scope / Dependency	scope: local									

SWS Item	[ECUC_CanTSyn_00055]						
Parameter Name	CanTSynEnableSecurityEventReporting						
Parent Container	CanTSynGeneral						
Description	Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled.  <b>Tags:</b> atp.Status=draft						
Multiplicity	1						
Type	EcucBooleanParamDef						
Default value	false						
Post-Build Variant Value	false						
Value Configuration Class	<table border="1"> <tr> <td>Pre-compile time</td> <td>X</td> <td>All Variants</td> </tr> <tr> <td>Link time</td> <td>-</td> <td></td> </tr> </table>	Pre-compile time	X	All Variants	Link time	-	
Pre-compile time	X	All Variants					
Link time	-						





	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00054]</b>		
<b>Parameter Name</b>	CanTSynHardwareTimestampSupport		
<b>Parent Container</b>	<a href="#">CanTSynGeneral</a>		
<b>Description</b>	Activate/Deactivate the hardware time stamping functionality of the CAN hardware. True: Timestamp is retrieved from the CAN hardware False: Timestamp is retrieved from the StbM		
	<b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00019]</b>		
<b>Parameter Name</b>	CanTSynMainFunctionPeriod		
<b>Parent Container</b>	<a href="#">CanTSynGeneral</a>		
<b>Description</b>	Schedule period of the main function CanTSyn_MainFunction. Unit: [s].		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	] $0 .. INF$ [		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00088]</b>		
<b>Parameter Name</b>	CanTSynSyncTransmissionsPerCycle		
<b>Parent Container</b>	<a href="#">CanTSynGeneral</a>		
<b>Description</b>	Maximum number of SYNC message transmissions within one CanTSyn_MainFunction		
	<b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	] $0 .. 255$ [		
<b>Default value</b>	0		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	






<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00050]		
<b>Parameter Name</b>	CanTSynTimeValidationSupport		
<b>Parent Container</b>	CanTSynGeneral		
<b>Description</b>	Switches support for Time Validation on or off. <ul style="list-style-type: none"> <li>• true: Time Validation is enabled.</li> <li>• false: Time Validation is disabled</li> </ul>		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00023]		
<b>Parameter Name</b>	CanTSynVersionInfoApi		
<b>Parent Container</b>	CanTSynGeneral		
<b>Description</b>	Activate/Deactivate the version information API (CanTSyn_GetVersionInfo). True: version information API activated False: version information API deactivated.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
CanTSynSecurityEventRefs	0..1	Container for the references to IdsMEvent elements representing the security events that the CanTSyn module shall report to the IdsM in case the corresponding security related event occurs (and if CanTSynEnableSecurityEventReporting is set to "true"). The standardized security events in this container can be extended by vendor-specific security events.  <b>Tags:</b> atp.Status=draft	

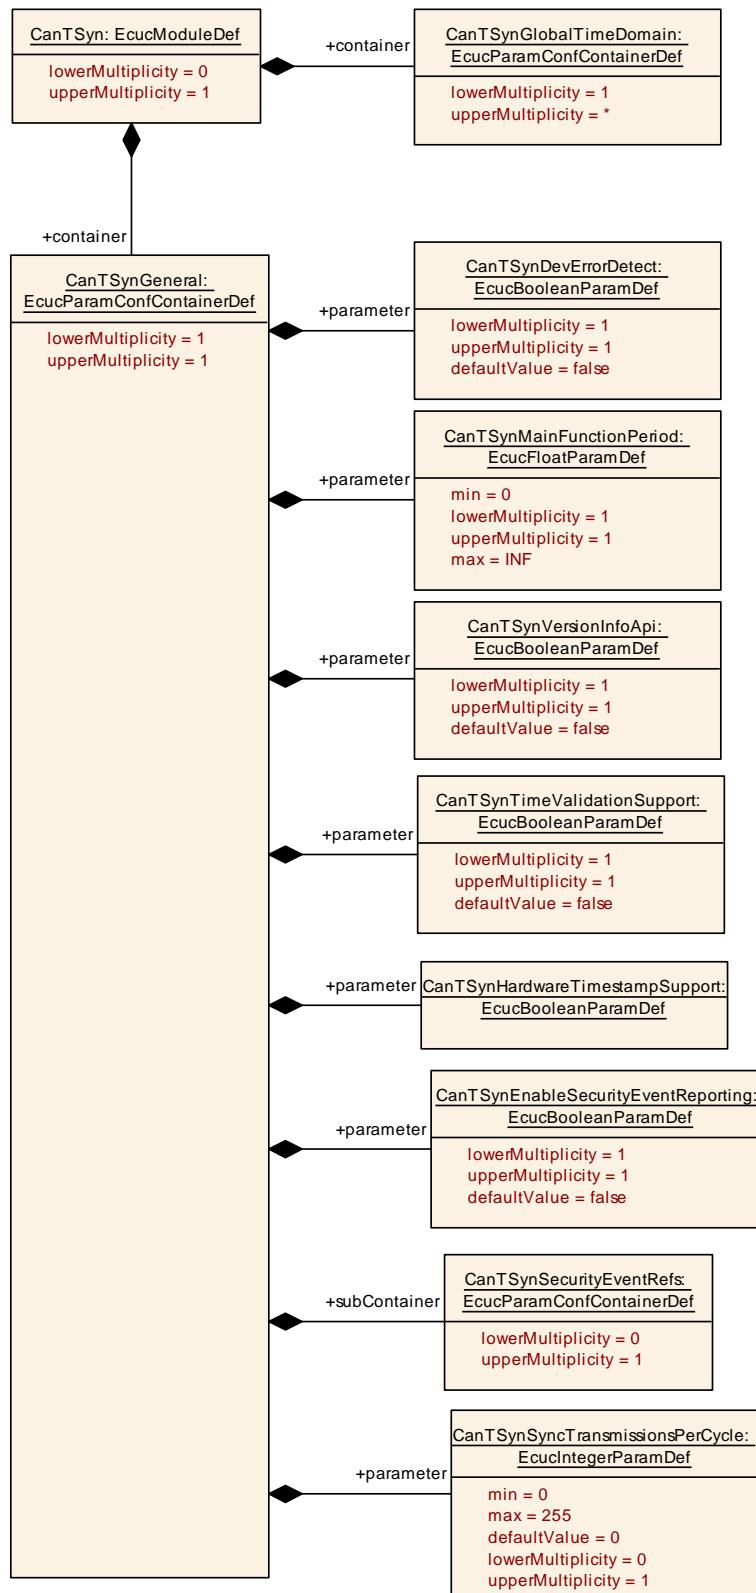
**Figure 10.1: CanTSynGeneral**

### 10.2.4 CanTSynSecurityEventRefs

SWS Item	[ECUC_CanTSyn_00056]		
Container Name	CanTSynSecurityEventRefs		
Parent Container	CanTSynGeneral		
Description	Container for the references to IdsMEvent elements representing the security events that the CanTSyn module shall report to the IdsM in case the corresponding security related event occurs (and if CanTSynEnableSecurityEventReporting is set to "true"). The standardized security events in this container can be extended by vendor-specific security events.		
	<b>Tags:</b> atp.Status=draft		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_CanTSyn_00059]		
Parameter Name	SEV_TSYN_CAN_FRESHNESS_NOT_AVAILABLE		
Parent Container	CanTSynSecurityEventRefs		
Description	FV not available from FVM. Context data provides the respective domain ID.		
	<b>Tags:</b> atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to IdsMEvent		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_CanTSyn_00057]		
Parameter Name	SEV_TSYN_CAN_ICV_GENERATION_FAILED		
Parent Container	CanTSynSecurityEventRefs		
Description	ICV generation for Follow_Up message failed. Context data provides the respective domain ID		
	<b>Tags:</b> atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to IdsMEvent		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants



△

	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00058]</b>		
<b>Parameter Name</b>	SEV_TSYN_CAN_ICV_VERIFICATION_FAILED		
<b>Parent Container</b>	<a href="#">CanTSynSecurityEventRefs</a>		
<b>Description</b>	ICV verification for Follow_Up message failed. Context data provides the respective domain ID.  <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Symbolic name reference to IdsMEvent		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00083]</b>		
<b>Parameter Name</b>	SEV_TSYN_CAN_MSG_SEQUENCE_ERROR		
<b>Parent Container</b>	<a href="#">CanTSynSecurityEventRefs</a>		
<b>Description</b>	Failed to receive correct sequence of SYNC and FUP or OFS and OFNS from the Time Master within (CanTSynGlobalTimeFollowUpTimeout).  <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Symbolic name reference to IdsMEvent		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

No Included Containers
------------------------

### 10.2.5 CanTSynGlobalTimeDomain

<b>SWS Item</b>	[ECUC_CanTSyn_00004]
<b>Container Name</b>	CanTSynGlobalTimeDomain
<b>Parent Container</b>	CanTSyn
<b>Description</b>	<p>This represents the existence of a global time domain on CAN. The CanTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains.</p> <p>If the CanTSyn exists it is assumed that at least one global time domain exists.</p>
<b>Configuration Parameters</b>	

<b>SWS Item</b>	[ECUC_CanTSyn_00051]		
<b>Parameter Name</b>	CanTSynEnableTimeValidation		
<b>Parent Container</b>	CanTSynGlobalTimeDomain		
<b>Description</b>	Enables/disables time recording for Time Validation for a specific Time Domain.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	<p>scope: local</p> <p>dependency: Only valid if CanTSynTimeValidationSupport is TRUE. Value set according to parameter StbMEnableTimeValidation of the referenced Time Base in the StbM.</p>		

<b>SWS Item</b>	[ECUC_CanTSyn_00005]		
<b>Parameter Name</b>	CanTSynGlobalTimeDomainId		
<b>Parent Container</b>	CanTSynGlobalTimeDomain		
<b>Description</b>	The global time domain ID.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 15		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00052]
<b>Parameter Name</b>	CanTSynGlobalTimeNetworkSegmentId
<b>Parent Container</b>	CanTSynGlobalTimeDomain
<b>Description</b>	This represents the numerical identifier of the network on system level scope where this Global Time has been communicated on.
<b>Multiplicity</b>	0..1
<b>Type</b>	EcucIntegerParamDef





<b>Range</b>	0 .. 255		
<b>Default value</b>	—		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00042]		
<b>Parameter Name</b>	CanTSynUseExtendedMsgFormat		
<b>Parent Container</b>	CanTSynGlobalTimeDomain		
<b>Description</b>	Switches support for 16 Byte Timesync messages on or off (for CAN FD only) <ul style="list-style-type: none"> <li>• true: CAN FD support is active: use at least 16 byte for Timesync messages (depending on configuration)</li> <li>• false: Classic CAN support is active: use always 8 byte for Timesync messages</li> </ul>		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		


<b>SWS Item</b>	[ECUC_CanTSyn_00022]		
<b>Parameter Name</b>	CanTSynSynchronizedTimeBaseRef		
<b>Parent Container</b>	CanTSynGlobalTimeDomain		
<b>Description</b>	Mandatory reference to the required synchronized time-base.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to StbMSynchronizedTimeBase		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTSynGlobalTimeFupDataIDList	0..1	The DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.





<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
CanTSynGlobalTimeMaster	0..1	Configuration of a Time Master for a Time Domain (refer to parent container). If CanTSynGlobalTimeMaster container exists, the local ECU acts as a Time Master for the Time Domain.
CanTSynGlobalTimeOfnsDataIDList	0..1	The DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.
CanTSynGlobalTimeOfsDataIDList	0..1	The DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.
CanTSynGlobalTimeSlave	0..1	Configuration of a Time Slave for a Time Domain (refer to parent container). If CanTSynGlobalTimeSlave container exists, the local ECU acts as a Time Slave for the Time Domain.
CanTSynGlobalTimeSyncDataIDList	0..1	The DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.

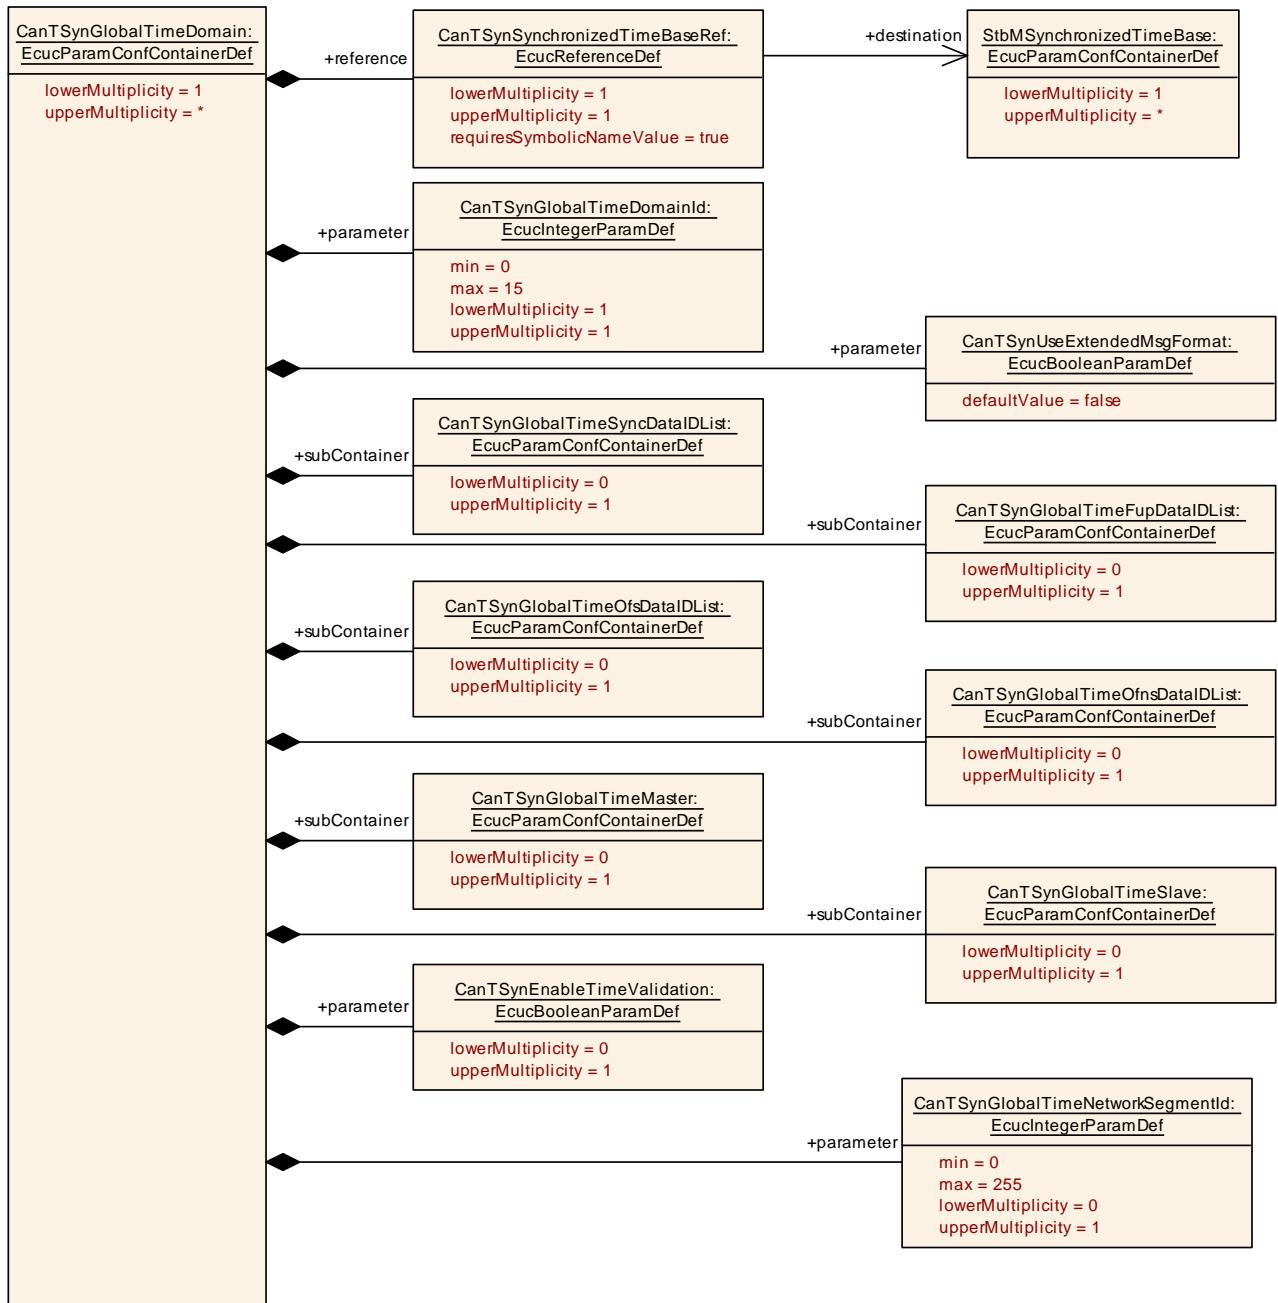
**Figure 10.2: CanTSynGlobalTimeDomain**

### 10.2.6 CanTSynGlobalTimeSyncDataIDList

SWS Item	[ECUC_CanTSyn_00024]
Container Name	CanTSynGlobalTimeSyncDataIDList
Parent Container	CanTSynGlobalTimeDomain



△			
<b>Description</b>			The DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.
<b>Post-Build Variant Multiplicity</b>			true
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Configuration Parameters</b>			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTSynGlobalTimeSyncDataIDListElement	16	Element of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.

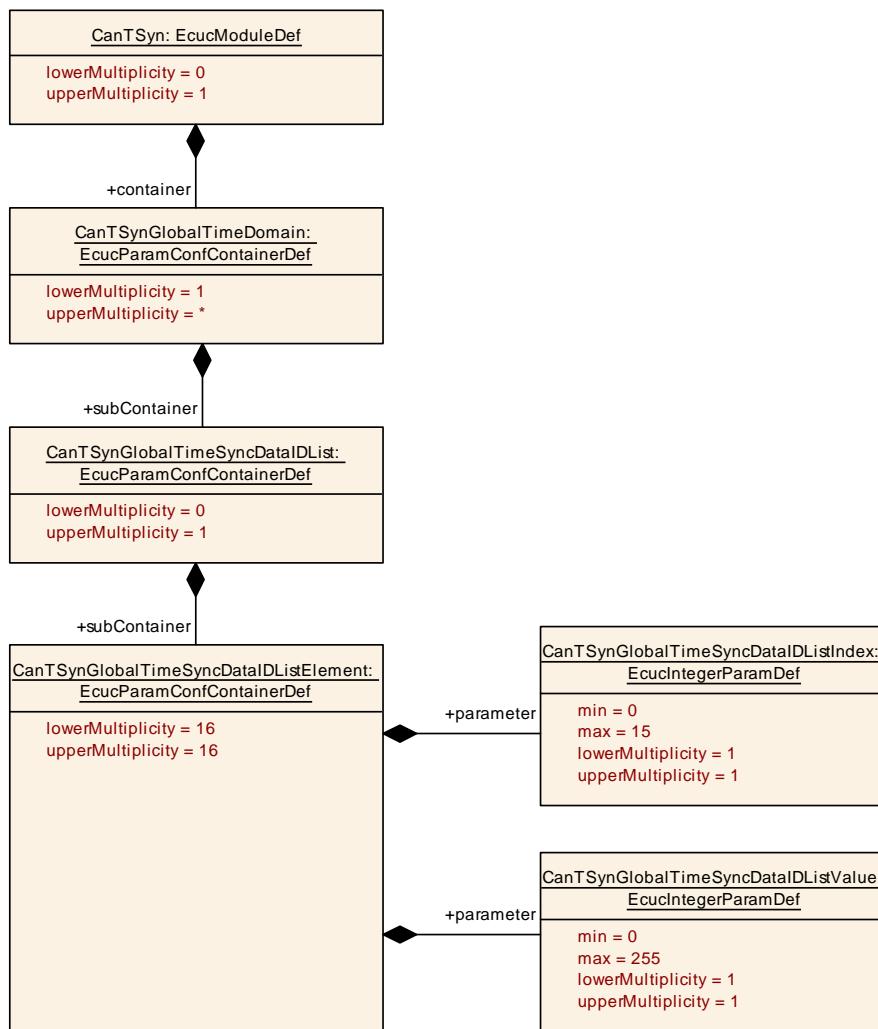


Figure 10.3: `CanTSynGlobalTimeSyncDataIDList`

### 10.2.7 CanTSynGlobalTimeSyncDataIDListElement

<b>SWS Item</b>	[ECUC_CanTSyn_00028]
<b>Container Name</b>	CanTSynGlobalTimeSyncDataIDListElement
<b>Parent Container</b>	CanTSynGlobalTimeSyncDataIDList
<b>Description</b>	Element of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	[ECUC_CanTSyn_00029]		
<b>Parameter Name</b>	CanTSynGlobalTimeSyncDataIDListIndex		
<b>Parent Container</b>	CanTSynGlobalTimeSyncDataIDListElement		
<b>Description</b>	Index for the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 15		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00030]		
<b>Parameter Name</b>	CanTSynGlobalTimeSyncDataIDListValue		
<b>Parent Container</b>	CanTSynGlobalTimeSyncDataIDListElement		
<b>Description</b>	Value of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 255		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

No Included Containers
------------------------

### 10.2.8 CanTSynGlobalTimeFupDataIDList

SWS Item	[ECUC_CanTSyn_00025]		
Container Name	CanTSynGlobalTimeFupDataIDList		
Parent Container	CanTSynGlobalTimeDomain		
Description	The DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTSynGlobalTimeFupDataIDListElement	16	Element of the DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.

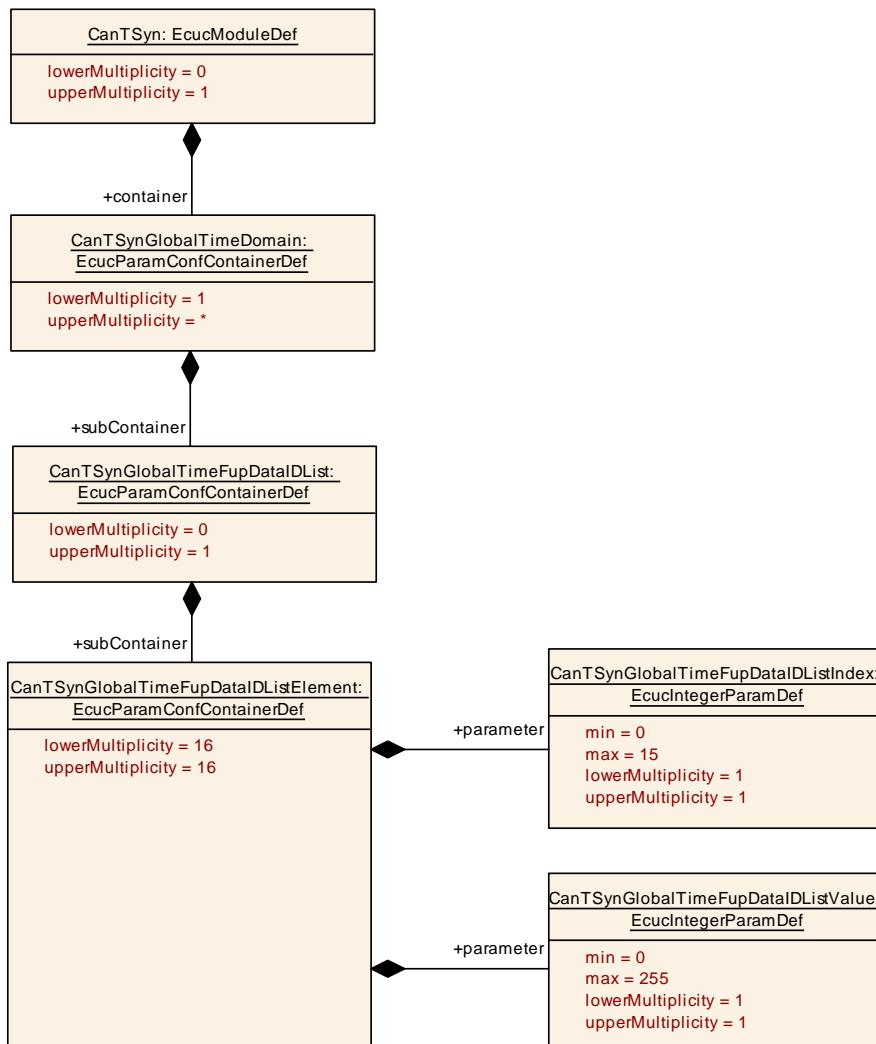


Figure 10.4: CanTSynGlobalTimeFupDataIDList

### 10.2.9 CanTSynGlobalTimeFupDataIDListElement

<b>SWS Item</b>	[ECUC_CanTSyn_00031]
<b>Container Name</b>	CanTSynGlobalTimeFupDataIDListElement
<b>Parent Container</b>	CanTSynGlobalTimeFupDataIDList
<b>Description</b>	Element of the DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	[ECUC_CanTSyn_00032]		
<b>Parameter Name</b>	CanTSynGlobalTimeFupDataIDListIndex		
<b>Parent Container</b>	CanTSynGlobalTimeFupDataIDListElement		
<b>Description</b>	Index of the DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 15		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00033]		
<b>Parameter Name</b>	CanTSynGlobalTimeFupDataIDListValue		
<b>Parent Container</b>	CanTSynGlobalTimeFupDataIDListElement		
<b>Description</b>	Value of the DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 255		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

No Included Containers
------------------------

### 10.2.10 CanTSynGlobalTimeOfsDataIDList

SWS Item	[ECUC_CanTSyn_00026]		
Container Name	CanTSynGlobalTimeOfsDataIDList		
Parent Container	CanTSynGlobalTimeDomain		
Description	The DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTSynGlobalTimeOfsDataIDList Element	16	Element of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.

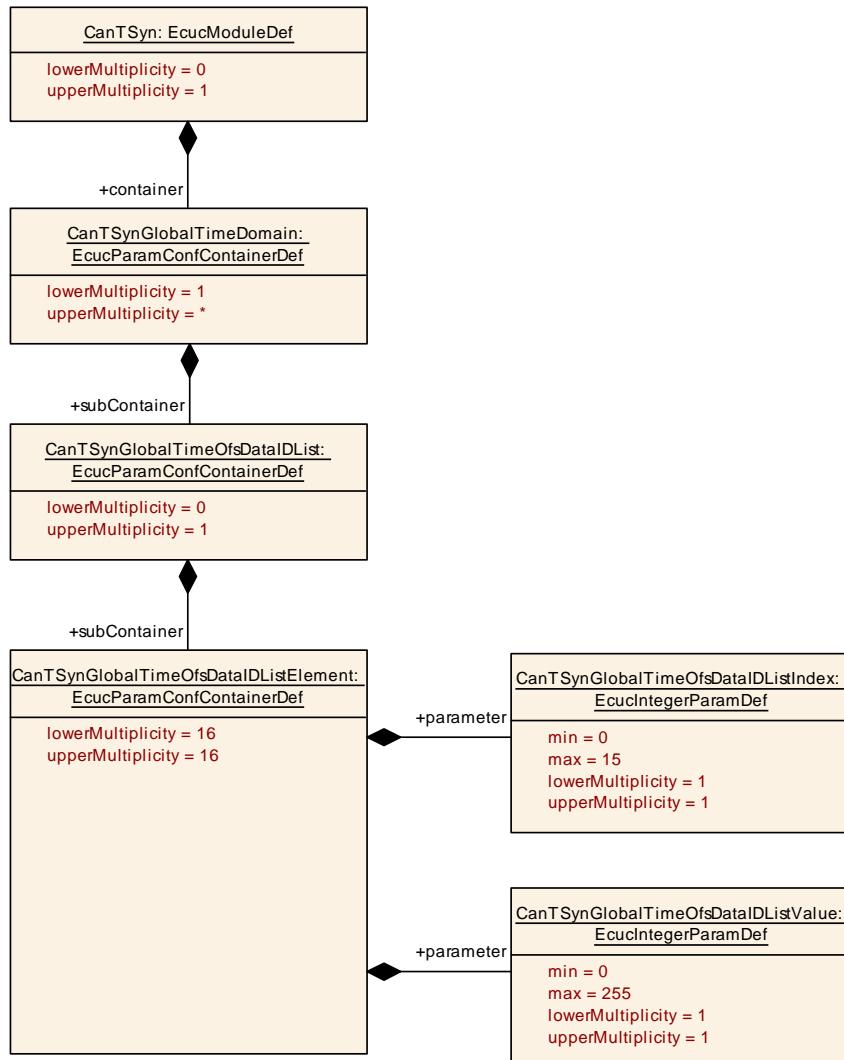


Figure 10.5: CanTSynGlobalTimeOfsDataIDList

### 10.2.11 CanTSynGlobalTimeOfsDataIDListElement

<b>SWS Item</b>	[ECUC_CanTSyn_00034]
<b>Container Name</b>	CanTSynGlobalTimeOfsDataIDListElement
<b>Parent Container</b>	CanTSynGlobalTimeOfsDataIDList
<b>Description</b>	Element of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	[ECUC_CanTSyn_00035]		
<b>Parameter Name</b>	CanTSynGlobalTimeOfsDataIDListIndex		
<b>Parent Container</b>	CanTSynGlobalTimeOfsDataIDListElement		
<b>Description</b>	Index of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcclIntegerParamDef		
<b>Range</b>	0 .. 15		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		


<b>SWS Item</b>	[ECUC_CanTSyn_00036]		
<b>Parameter Name</b>	CanTSynGlobalTimeOfsDataIDListValue		
<b>Parent Container</b>	CanTSynGlobalTimeOfsDataIDListElement		
<b>Description</b>	Value of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcclIntegerParamDef		
<b>Range</b>	0 .. 255		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

No Included Containers
------------------------

### 10.2.12 CanTSynGlobalTimeOfnsDataIDList

SWS Item	[ECUC_CanTSyn_00041]		
Container Name	CanTSynGlobalTimeOfnsDataIDList		
Parent Container	CanTSynGlobalTimeDomain		
Description	The DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTSynGlobalTimeOfnsDataIDListElement	16	Element of the DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.

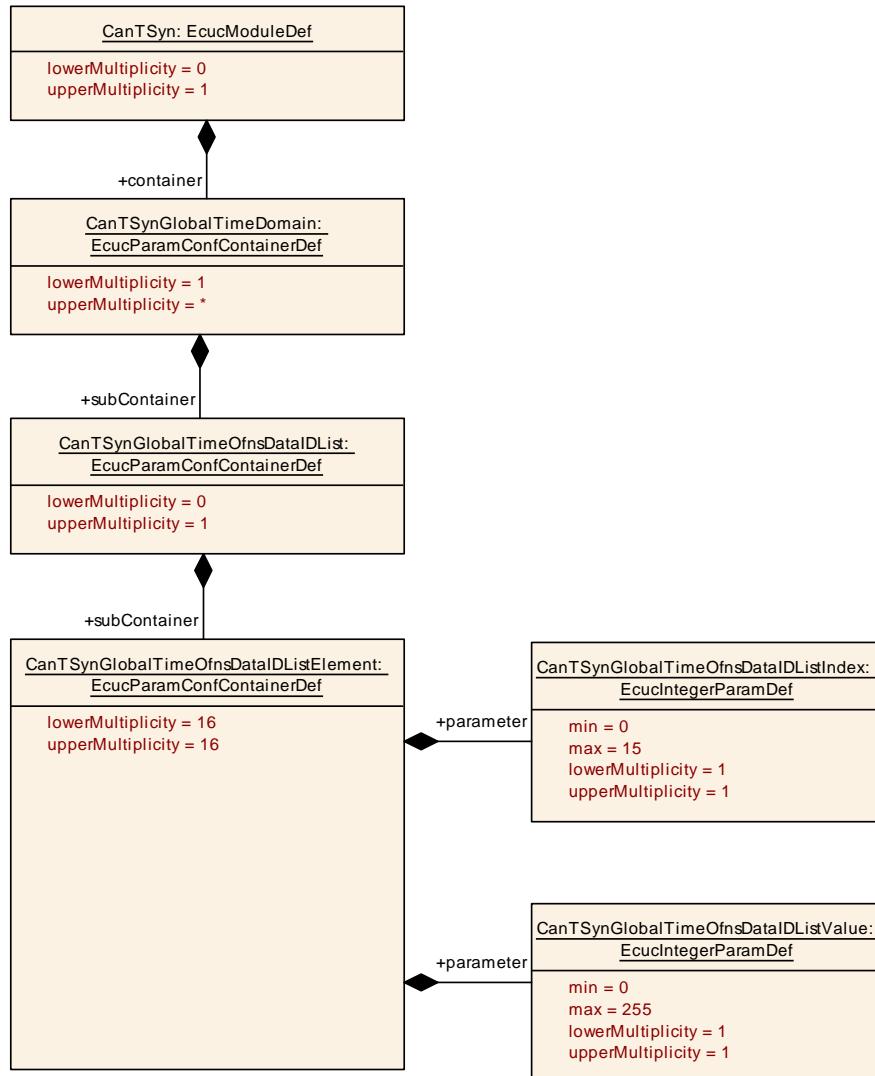

**Figure 10.6: CanTSynGlobalTimeOfnsDataIDList**

### 10.2.13 CanTSynGlobalTimeOfnsDataIDListElement

SWS Item	[ECUC_CanTSyn_00037]
Container Name	CanTSynGlobalTimeOfnsDataIDListElement
Parent Container	CanTSynGlobalTimeOfnsDataIDList
Description	Element of the DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.
<b>Configuration Parameters</b>	

SWS Item	[ECUC_CanTSyn_00038]
Parameter Name	CanTSynGlobalTimeOfnsDataIDListIndex
Parent Container	CanTSynGlobalTimeOfnsDataIDListElement





<b>Description</b>	Index of the DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.				
<b>Multiplicity</b>	1				
<b>Type</b>	EcucIntegerParamDef				
<b>Range</b>	0 .. 15				
<b>Default value</b>	–				
<b>Post-Build Variant Value</b>	true				
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants		
	<b>Link time</b>	–			
	<b>Post-build time</b>	–			
<b>Scope / Dependency</b>	scope: local				

<b>SWS Item</b>	[ECUC_CanTSyn_00039]				
<b>Parameter Name</b>	CanTSynGlobalTimeOfnsDataIDListValue				
<b>Parent Container</b>	CanTSynGlobalTimeOfnsDataIDListElement				
<b>Description</b>	Value of the DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.				
<b>Multiplicity</b>	1				
<b>Type</b>	EcucIntegerParamDef				
<b>Range</b>	0 .. 255				
<b>Default value</b>	–				
<b>Post-Build Variant Value</b>	true				
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants		
	<b>Link time</b>	–			
	<b>Post-build time</b>	–			
<b>Scope / Dependency</b>	scope: local				

No Included Containers

### 10.2.14 CanTSynGlobalTimeMaster

<b>SWS Item</b>	[ECUC_CanTSyn_00007]		
<b>Container Name</b>	CanTSynGlobalTimeMaster		
<b>Parent Container</b>	CanTSynGlobalTimeDomain		
<b>Description</b>	Configuration of a Time Master for a Time Domain (refer to parent container). If CanTSynGlobalTimeMaster container exists, the local ECU acts as a Time Master for the Time Domain.		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00044]</b>		
<b>Parameter Name</b>	CanTSynCyclicMsgResumeTime		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMaster</a>		
<b>Description</b>	Defines the time where the 1st regular cycle time based message transmission takes place, after an immediate transmission before. Unit: seconds		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	[0 .. INF[		
<b>Default value</b>	–		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00045]</b>		
<b>Parameter Name</b>	CanTSynGlobalTimeDebounceTime		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMaster</a>		
<b>Description</b>	This represents the configuration of a TX debounce time for SYNC, FUP, OFS and OFNS messages compared to a message before with the same PDU. Unit: seconds		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	[0 .. 4]		
<b>Default value</b>	–		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local		


<b>SWS Item</b>	<b>[ECUC_CanTSyn_00015]</b>		
<b>Parameter Name</b>	CanTSynGlobalTimeTxCrcSecured		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMaster</a>		
<b>Description</b>	This represents the configuration of whether or not CRC is supported.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	CRC_NOT_SUPPORTED	This represents a configuration where CRC is not supported.	
	CRC_SUPPORTED	This represents a configuration where CRC is supported.	
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00111]				
<b>Parameter Name</b>	CanTSynGlobalTimeTxIcvSecured				
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMaster</a>				
<b>Description</b>	This parameter controls whether or not ICV generation shall be supported. <b>Tags:</b> atp.Status=draft				
<b>Multiplicity</b>	1				
<b>Type</b>	EcucEnumerationParamDef				
<b>Range</b>	ICV_NOT_SUPPORTED	The Timesync module shall not generate the ICV. <b>Tags:</b> atp.Status=draft			
	ICV_SUPPORTED	The Timesync module shall generate the ICV. <b>Tags:</b> atp.Status=draft			
<b>Default value</b>	ICV_NOT_SUPPORTED				
<b>Post-Build Variant Value</b>	false				
<b>Value Configuration Class</b>	Pre-compile time	X	All Variants		
	Link time	—			
	Post-build time	—			
<b>Scope / Dependency</b>	scope: local				

<b>SWS Item</b>	[ECUC_CanTSyn_00017]		
<b>Parameter Name</b>	CanTSynGlobalTimeTxPeriod		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMaster</a>		
<b>Description</b>	This represents configuration of the TX period. Unit: seconds		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	[0 .. INF]		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00043]		
<b>Parameter Name</b>	CanTSynImmediateTimeSync		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMaster</a>		
<b>Description</b>	Enables/Disables the cyclic polling of StbM_GetTimeBaseUpdateCounter() within CanTSyn_MainFunction().		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
<b>Scope / Dependency</b>	scope: local		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
CanTSynGlobalTimeMasterPdu	1	This container encloses the configuration of the PDU that is supposed to contain the global time information.
CanTSynGlobalTimeTxICV Generation	0..1	This container collects configuration that shall be used for ICV generation. <b>Tags:</b> atp.Status=draft

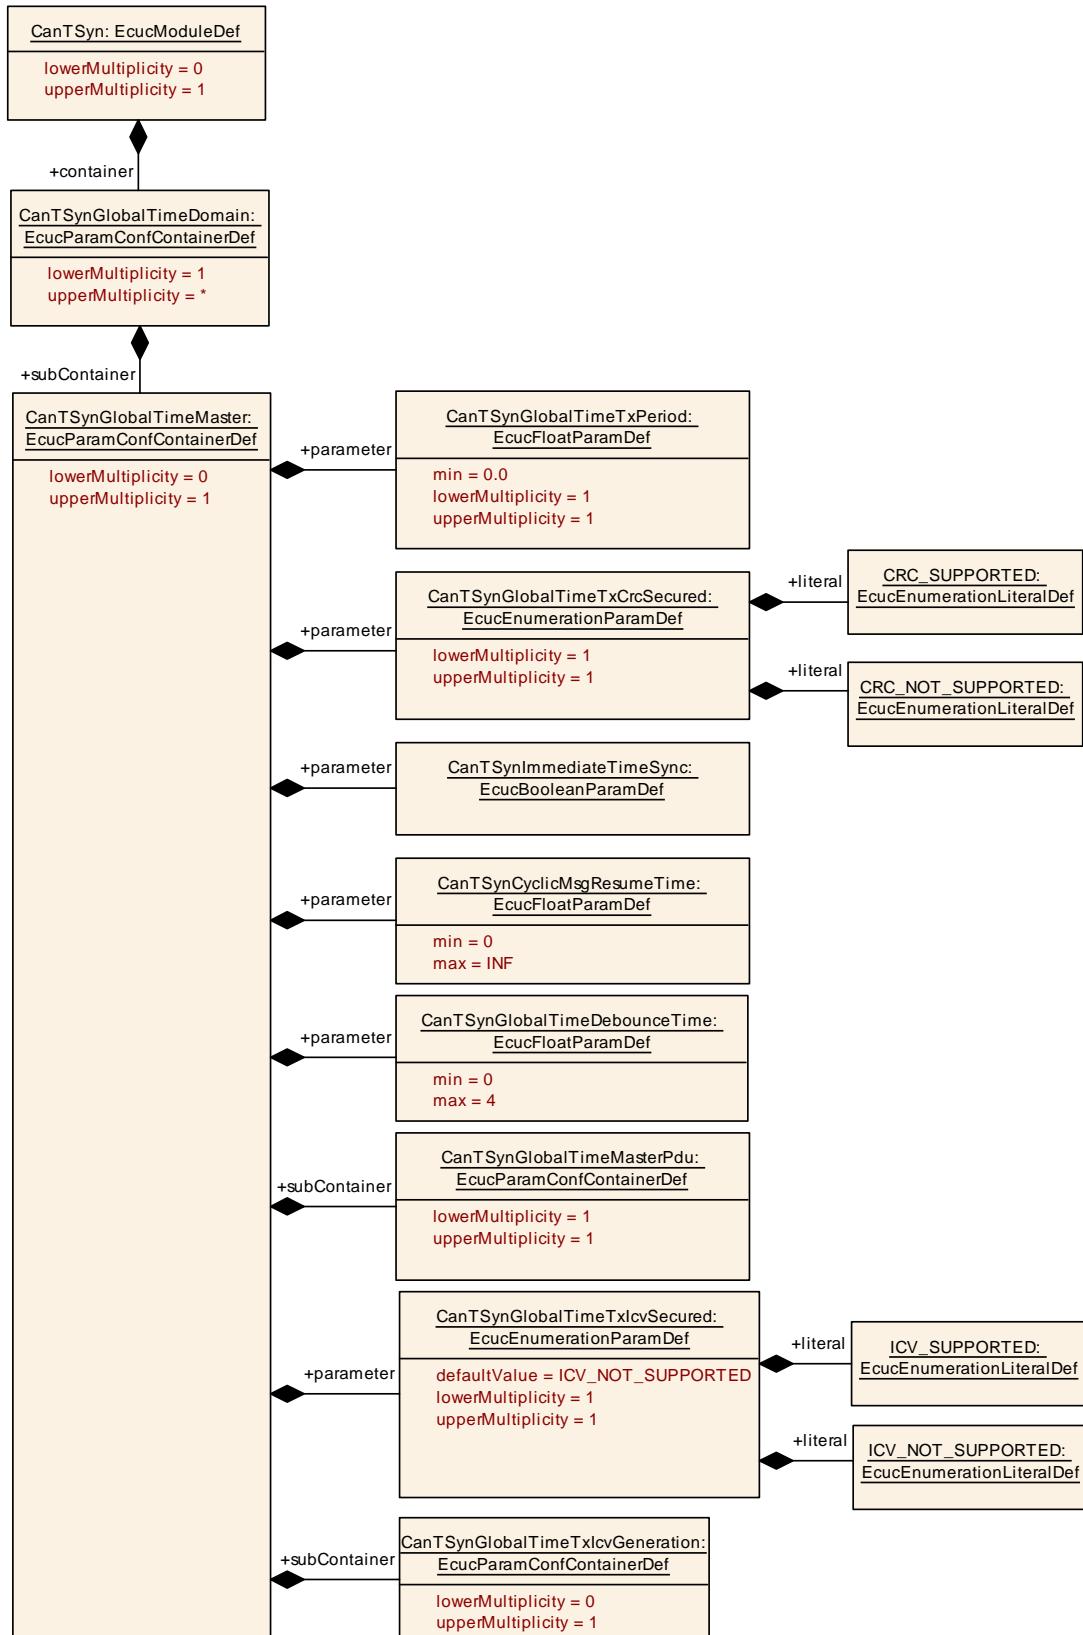
**Figure 10.7: CanTSynGlobalTimeMaster**


### 10.2.15 CanTSynGlobalTimeMasterPdu

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00009]</b>		
<b>Container Name</b>	CanTSynGlobalTimeMasterPdu		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMaster</a>		
<b>Description</b>	This container encloses the configuration of the PDU that is supposed to contain the global time information.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00008]</b>		
<b>Parameter Name</b>	CanTSynGlobalTimeMasterConfirmationHandleId		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMasterPdu</a>		
<b>Description</b>	This represents the handle ID of the PDU that contains the global time information.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
<b>Range</b>	0 .. 65535		
<b>Default value</b>	–		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local withAuto = true		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00027]</b>		
<b>Parameter Name</b>	CanTSynGlobalTimePduRef		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeMasterPdu</a>		
<b>Description</b>	This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to Pdu		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local		

No Included Containers
------------------------

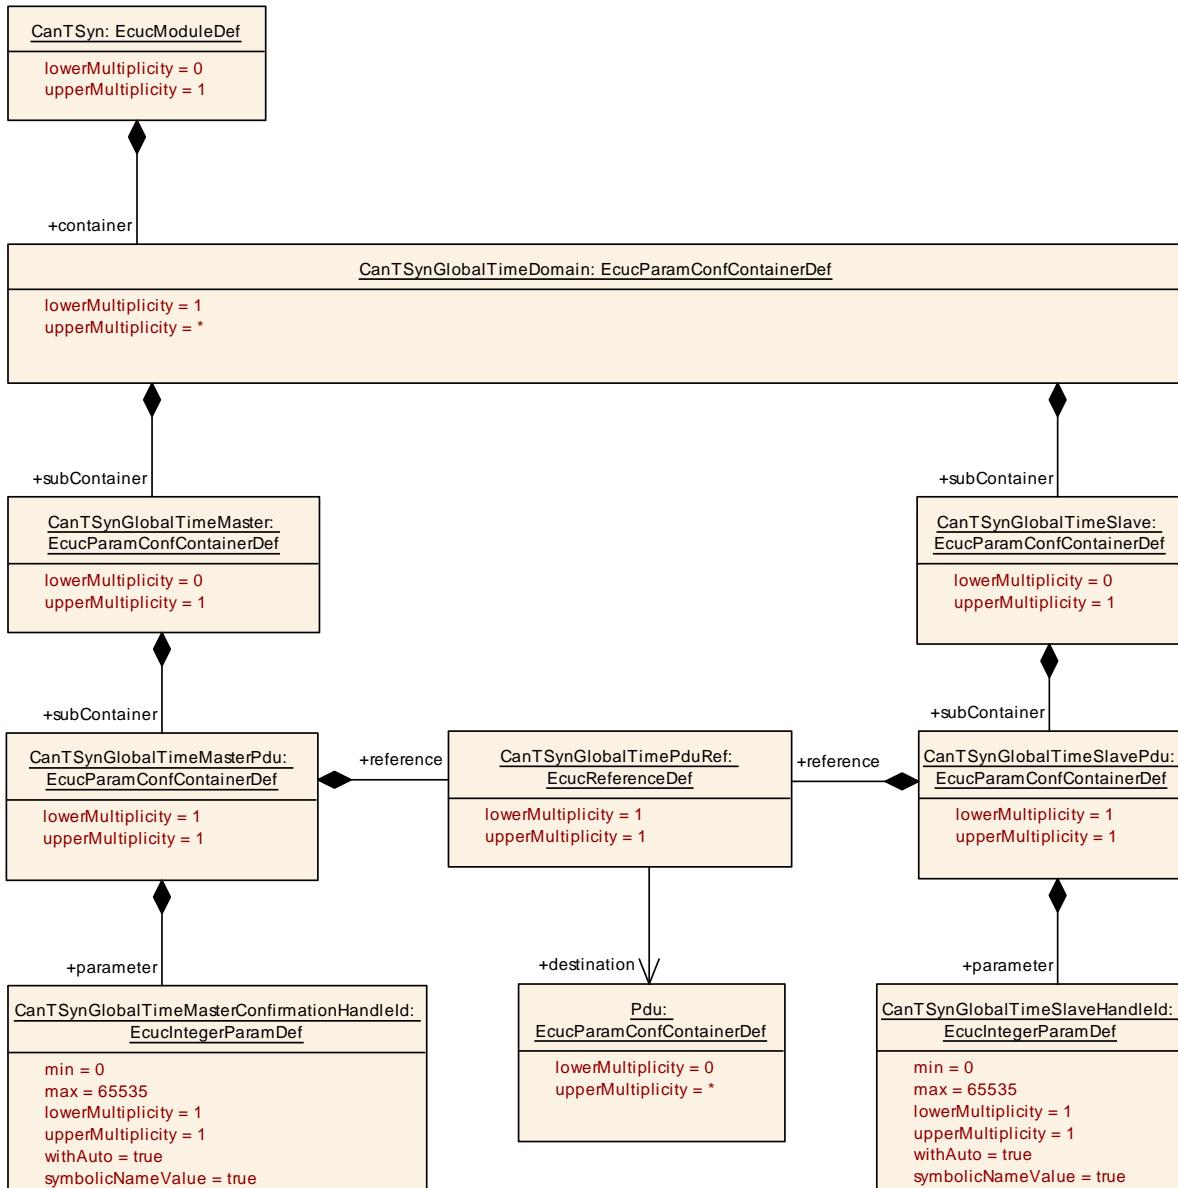
**Figure 10.8: CanTSynGlobalTimePdu**

### 10.2.16 CanTSynGlobalTimeTxICVGeneration

SWS Item	[ECUC_CanTSyn_00060]		
Container Name	CanTSynGlobalTimeTxICVGeneration		
Parent Container	<a href="#">CanTSynGlobalTimeMaster</a>		
Description	This container collects configuration that shall be used for ICV generation. <b>Tags:</b> atp.Status=draft		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants





	<b>Link time</b>	—	
	<b>Post-build time</b>	—	

**Configuration Parameters**

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00062]</b>		
<b>Parameter Name</b>	CanTSynIcvGenerationBase		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeTxIcvGeneration</a>		
<b>Description</b>	Symmetric or asymmetric cryptography selection for the ICV generation <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	ICV_MAC	Symmetric cryptography selection for the ICV generation. <b>Tags:</b> atp.Status=draft	
	ICV_SIGNATURE	Asymmetric cryptography selection for the ICV generation. <b>Tags:</b> atp.Status=draft	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00065]</b>		
<b>Parameter Name</b>	CanTSynIcvGenerationTimeout		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeTxIcvGeneration</a>		
<b>Description</b>	Timeout of ICV generation (respective CSM job completion in asynchronous behavior). A value of 0 disables the ICV timeout monitoring. Unit: Seconds <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	[0 .. INF[		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CanTSyn_00063]</b>		
<b>Parameter Name</b>	CanTSynIcvTxLength		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeTxIcvGeneration</a>		
<b>Description</b>	Length of ICV to be transmitted within Follow_Up Message on the bus (in bytes). <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		





<b>Range</b>	0 .. 54		
<b>Default value</b>	–		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00086]		
<b>Parameter Name</b>	CanTSynTxAuthenticationBuildAttempts		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeTxIcvGeneration</a>		
<b>Description</b>	This parameter specifies the number of authentication build attempts that are to be carried out when the generation of the ICV failed for a given FUP message. If zero is set, then only one ICV build attempt is done.		
	<b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 65535		
<b>Default value</b>	0		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00061]		
<b>Parameter Name</b>	CanTSynIcvGenerationFvIdRef		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeTxIcvGeneration</a>		
<b>Description</b>	This represents the reference to the FV taken to generate the ICV generation.		
	<b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Symbolic name reference to StbMFreshnessValue		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local		


<b>SWS Item</b>	[ECUC_CanTSyn_00064]		
<b>Parameter Name</b>	CanTSynIcvGenerationJobRef		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeTxIcvGeneration</a>		



△

<b>Description</b>	This represents the reference to the CSM job to fetch the CSM job ID. <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to CsmJob		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

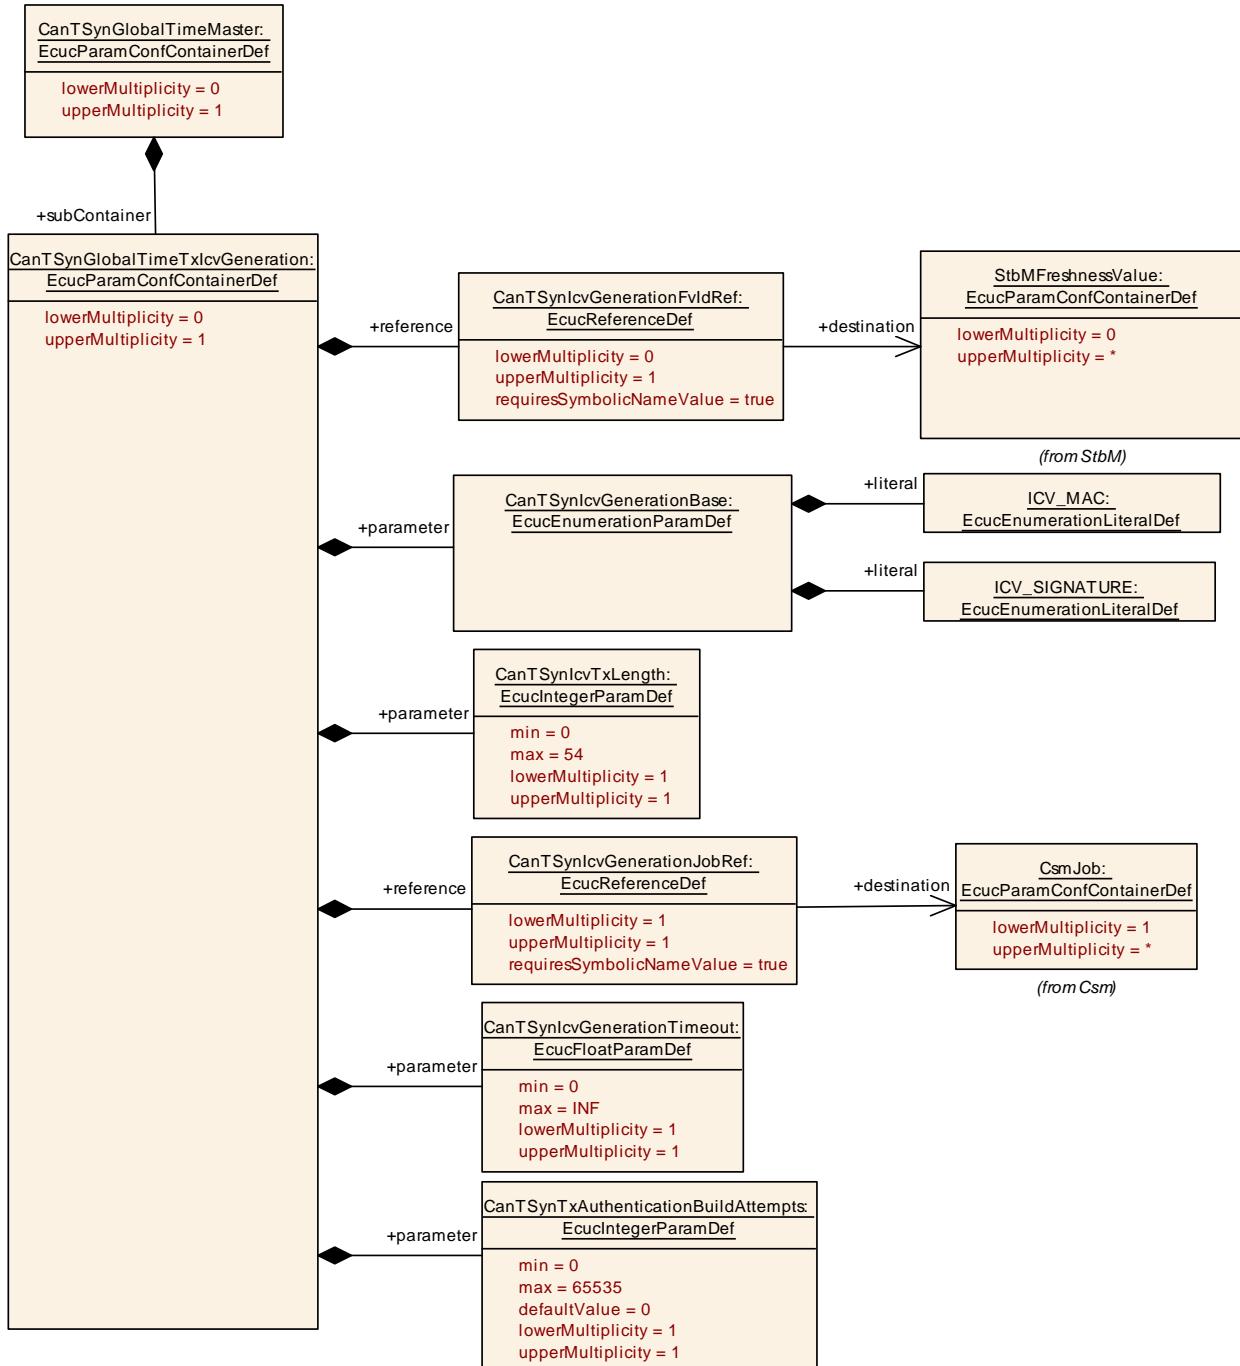
**Figure 10.9: CanTSynGlobalTimeTxIcvGeneration**

### 10.2.17 CanTSynGlobalTimeSlave

<b>SWS Item</b>	[ECUC_CanTSyn_00012]		
<b>Container Name</b>	CanTSynGlobalTimeSlave		
<b>Parent Container</b>	CanTSynGlobalTimeDomain		
<b>Description</b>	Configuration of a Time Slave for a Time Domain (refer to parent container). If CanTSynGlobalTimeSlave container exists, the local ECU acts as a Time Slave for the Time Domain.		
<b>Post-Build Variant Multiplicity</b>	true		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	[ECUC_CanTSyn_00006]		
<b>Parameter Name</b>	CanTSynGlobalTimeFollowUpTimeout		
<b>Parent Container</b>	CanTSynGlobalTimeSlave		
<b>Description</b>	Rx timeout for the follow-up message. This is only relevant for selected bus systems Unit:seconds		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	[0 .. INF]		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00068]		
<b>Parameter Name</b>	CanTSynGlobalTimeRxDebounceTime		
<b>Parent Container</b>	CanTSynGlobalTimeSlave		
<b>Description</b>	This represents the configuration of a RX debounce time for the Sync and FUP, OFS and OFNS. Unit: seconds		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	[0 .. 4]		
<b>Default value</b>	—		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00053]		
<b>Parameter Name</b>	CanTSynGlobalTimeSequenceCounterHysteresis		
<b>Parent Container</b>	CanTSynGlobalTimeSlave		





<b>Description</b>	CanTSynGlobalTimeSequenceCounterHysteresis specifies the number of consecutive valid message pairs that are required by the Time Slave while being in Timeout state until a Time Tuple is forwarded to the StbM.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 15		
<b>Default value</b>	0		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00011]		
<b>Parameter Name</b>	CanTSynGlobalTimeSequenceCounterJumpWidth		
<b>Parent Container</b>	CanTSynGlobalTimeSlave		
<b>Description</b>	The SequenceCounterJumpWidth specifies the maximum allowed gap of the Sequence Counter between two SYNC resp. two OFS messages.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 15		
<b>Default value</b>	0		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00021]		
<b>Parameter Name</b>	CanTSynRxCrcValidated		
<b>Parent Container</b>	CanTSynGlobalTimeSlave		
<b>Description</b>	Definition of whether or not validation of the CRC is supported.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	CRC_IGNORED	The Timesync module accepts Time Synchronization messages, which are CRC secured (without actually validating the CRC) and those, which are not CRC secured. That means, the Timesync module ignores the CRC.	
	CRC_NOT_VALIDATED	The Timesync module accepts only Time Synchronization messages, which are not CRC secured. All other Time Synchronization messages are ignored.	
	CRC_OPTIONAL	The Timesync module accepts only Time Synchronization messages which are not CRC secured and Time Synchronization messages which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.	






	CRC_VALIDATED	The Timesync module accepts only Time Synchronization messages, which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.	
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00075]		
<b>Parameter Name</b>	CanTSynRxIcvVerificationType		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeSlave</a>		
<b>Description</b>	This parameter controls whether or not ICV verification shall be supported. <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucEnumerationParamDef		
<b>Range</b>	ICV_IGNORED	The Timesync module accepts Time Synchronization messages, which are ICV secured (without actually validating the ICV) and those which are not ICV secured. That means, the Timesync module ignores the ICV. <b>Tags:</b> atp.Status=draft	
	ICV_NOT_VERIFIED	The Timesync module accepts only Time Synchronization messages, which are not ICV secured. All other Time Synchronization messages are ignored. <b>Tags:</b> atp.Status=draft	
	ICV_OPTIONAL	The Timesync module accepts only Time Synchronization messages which are not ICV secured and Time Synchronization messages which are ICV secured and have the correct ICV. All other Time Synchronization messages are ignored. <b>Tags:</b> atp.Status=draft	
	ICV_VERIFIED	The Timesync module accepts only Time Synchronization messages, which are ICV secured and have the correct ICV. All other Time Synchronization messages are ignored. <b>Tags:</b> atp.Status=draft	
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
<b>Scope / Dependency</b>	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTSynGlobalTimeRxIcv Verification	0..1	This container collects configuration required for ICV verification. <b>Tags:</b> atp.Status=draft
CanTSynGlobalTimeSlavePdu	1	This container encloses the configuration of the PDU that is supposed to contain the global time information.

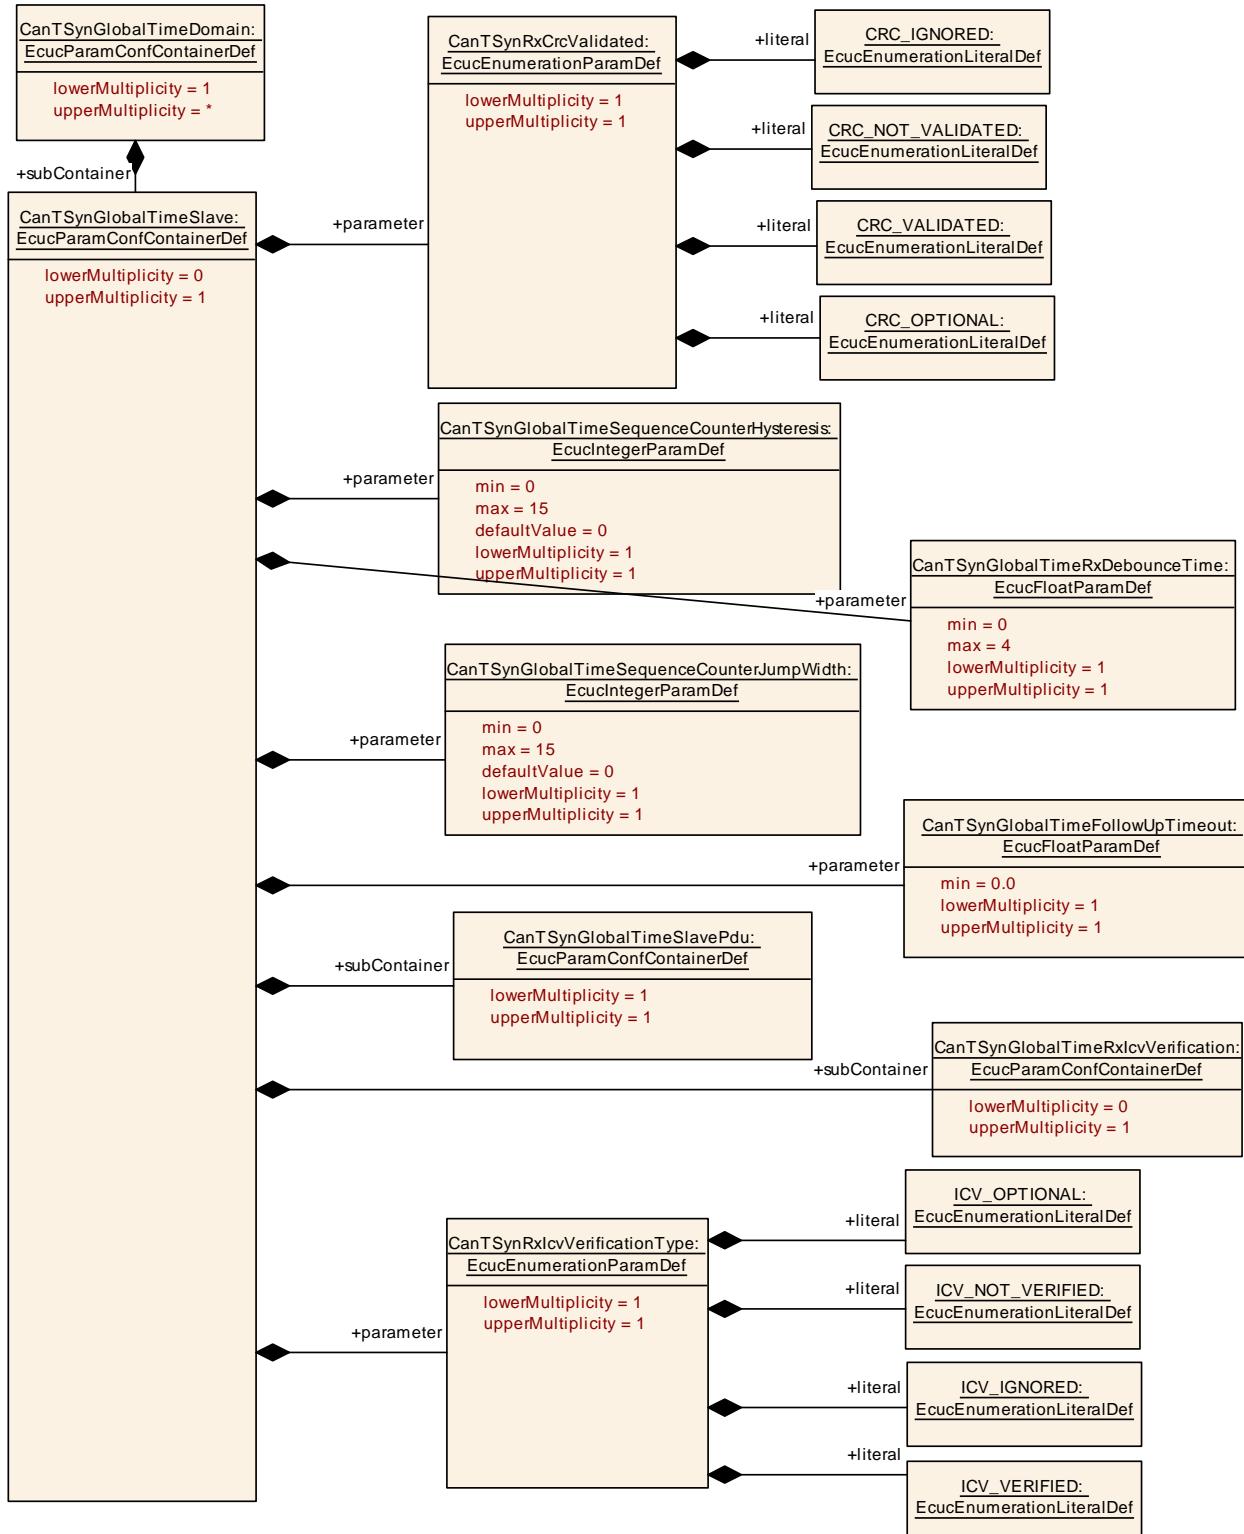
**Figure 10.10: CanTSynGlobalTimeSlave**

### 10.2.18 CanTSynGlobalTimeSlavePdu

<b>SWS Item</b>	[ECUC_CanTSyn_00014]		
<b>Container Name</b>	CanTSynGlobalTimeSlavePdu		
<b>Parent Container</b>	CanTSynGlobalTimeSlave		
<b>Description</b>	This container encloses the configuration of the PDU that is supposed to contain the global time information.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	[ECUC_CanTSyn_00013]		
<b>Parameter Name</b>	CanTSynGlobalTimeSlaveHandleId		
<b>Parent Container</b>	CanTSynGlobalTimeSlavePdu		
<b>Description</b>	This represents the handle ID of the PDU that contains the global time information.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
<b>Range</b>	0 .. 65535		
<b>Default value</b>	–		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local withAuto = true		

<b>SWS Item</b>	[ECUC_CanTSyn_00027]		
<b>Parameter Name</b>	CanTSynGlobalTimePduRef		
<b>Parent Container</b>	CanTSynGlobalTimeSlavePdu		
<b>Description</b>	This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to Pdu		
<b>Post-Build Variant Value</b>	true		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	–	
	<b>Post-build time</b>	–	
<b>Scope / Dependency</b>	scope: local		

No Included Containers

### 10.2.19 CanTSynGlobalTimeRxIcvVerification

<b>SWS Item</b>	[ECUC_CanTSyn_00076]		
<b>Container Name</b>	CanTSynGlobalTimeRxIcvVerification		
<b>Parent Container</b>	CanTSynGlobalTimeSlave		





<b>Description</b>	This container collects configuration required for ICV verification. <b>Tags:</b> atp.Status=draft		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Configuration Parameters</b>			

<b>SWS Item</b>	[ECUC_CanTSyn_00079]		
<b>Parameter Name</b>	CanTSynICvRxLength		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeRxICvVerification</a>		
<b>Description</b>	Length of ICV to be used for verification of received ICV within FUP Message in Bytes. <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 54		
<b>Default value</b>	-		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00082]		
<b>Parameter Name</b>	CanTSynICvVerificationAttempts		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeRxICvVerification</a>		
<b>Description</b>	This parameter specifies the number of ICV verification attempts that are to be carried out when the verification of the ICV failed for a given FUP message. If zero is set, then only one ICV verification attempt is done. <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 65535		
<b>Default value</b>	0		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00078]		
<b>Parameter Name</b>	CanTSynICvVerificationBase		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeRxICvVerification</a>		
<b>Description</b>	Symmetric or asymmetric cryptography selection for the ICV generation <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		





Type	EcucEnumerationParamDef		
Range	ICV_MAC	Symmetric cryptography selection for the ICV verification.  <b>Tags:</b> atp.Status=draft	
	ICV_SIGNATURE	Asymmetric cryptography selection for the ICV verification.  <b>Tags:</b> atp.Status=draft	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		


SWS Item	[ECUC_CanTSyn_00081]		
Parameter Name	CanTSynIcvVerificationTimeout		
Parent Container	<a href="#">CanTSynGlobalTimeRxIcvVerification</a>		
Description	Timeout of ICV generation (respective CSM job completion in asynchronous behavior). A value of 0 disables the ICV timeout monitoring. Unit: Seconds  <b>Tags:</b> atp.Status=draft		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF[		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_CanTSyn_00084]		
Parameter Name	CanTSynRxAuthenticationBuildAttempts		
Parent Container	<a href="#">CanTSynGlobalTimeRxIcvVerification</a>		
Description	This parameter specifies the number of authentication build attempts that are to be carried out when the verification of the ICV failed for a given FUP message. If zero is set, then only one ICV verification attempt is done.  <b>Tags:</b> atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	0		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00077]		
<b>Parameter Name</b>	CanTSynIcvVerificationFvldRef		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeRxIcvVerification</a>		
<b>Description</b>	This represents the reference to the FV taken to generate the ICV generation. <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Symbolic name reference to StbMFreshnessValue		
<b>Post-Build Variant Multiplicity</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Multiplicity Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	[ECUC_CanTSyn_00080]		
<b>Parameter Name</b>	CanTSynIcvVerificationJobRef		
<b>Parent Container</b>	<a href="#">CanTSynGlobalTimeRxIcvVerification</a>		
<b>Description</b>	This represents the reference to the CSM job to fetch the CSM job ID. <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to CsmJob		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	—	
	<b>Post-build time</b>	—	
<b>Scope / Dependency</b>	scope: local		

No Included Containers
------------------------

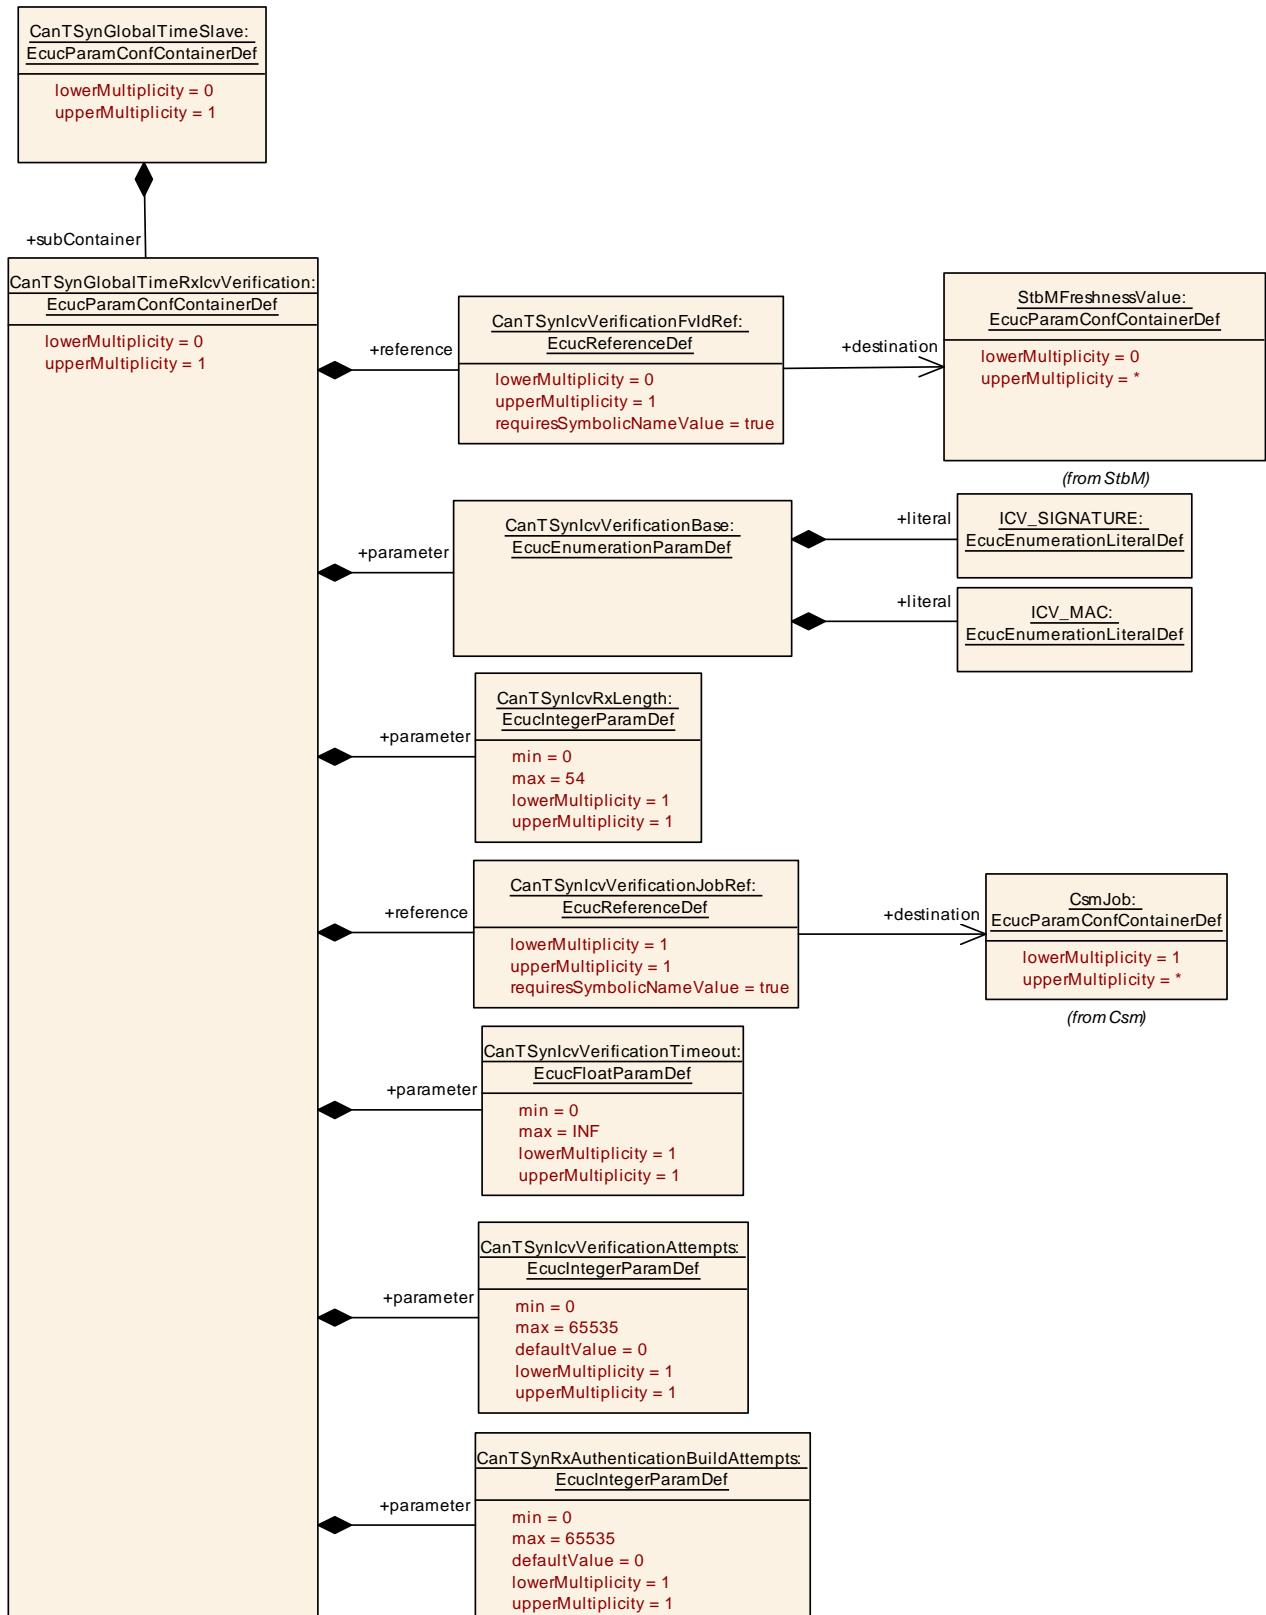
**Figure 10.11: CanTSynGlobalTimeSlave:EcucParamConfContainerDef**

## 10.3 Constraints

**[SWS\_CanTSyn\_CONSTR\_00001]**{DRAFT} [If the CSM job used to generate ICV is configured in synchronous behaviour, the `CanTSynIcvGenerationTimeout` shall be set to 0.] (*RS\_TS\_20073*)

**[SWS\_CanTSyn\_CONSTR\_00002]**{DRAFT} [If the CSM job used to verify ICV is configured in synchronous behavior, the `CanTSynIcvVerificationTimeout` shall be set to 0.] (*RS\_TS\_20073*)

## 10.4 Published Information

For details, refer to the chapter 10.3 "Published Information" in [3].

## A Not applicable requirements

**[SWS\_CanTSyn\_NA\_00999]** [These requirements on Time Synchronization from the RS Time Synchronization [1] are not applicable to [CanTSyn](#), because they refer either to network types other than CAN or to the Time Base Manager module.] (*RS\_TS\_00002, RS\_TS\_00005, RS\_TS\_00006, RS\_TS\_00007, RS\_TS\_00008, RS\_TS\_00009, RS\_TS\_00010, RS\_TS\_00011, RS\_TS\_00012, RS\_TS\_00013, RS\_TS\_00014, RS\_TS\_00015, RS\_TS\_00016, RS\_TS\_00017, RS\_TS\_00018, RS\_TS\_00019, RS\_TS\_00021, RS\_TS\_00024, RS\_TS\_00025, RS\_TS\_00026, RS\_TS\_00027, RS\_TS\_00029, RS\_TS\_00030, RS\_TS\_00031, RS\_TS\_00032, RS\_TS\_00033, RS\_TS\_00035, RS\_TS\_00036, RS\_TS\_00037, RS\_TS\_00038, RS\_TS\_00039, RS\_TS\_00040, RS\_TS\_00041, RS\_TS\_00042, RS\_TS\_00043, RS\_TS\_20039, RS\_TS\_20040, RS\_TS\_20041, RS\_TS\_20042, RS\_TS\_20043, RS\_TS\_20044, RS\_TS\_20045, RS\_TS\_20046, RS\_TS\_20047, RS\_TS\_20048, RS\_TS\_20051, RS\_TS\_20052, RS\_TS\_20053, RS\_TS\_20054, RS\_TS\_20058, RS\_TS\_20059, RS\_TS\_20060, RS\_TS\_20061, RS\_TS\_20062, RS\_TS\_20063, RS\_TS\_20066, RS\_TS\_20069, RS\_TS\_20071, RS\_TS\_20072, RS\_TS\_20074, RS\_TS\_20075*)

## B Change history of AUTOSAR traceable items

Please note that the lists in this chapter also include constraints and specification items that have been removed from the specification in a later version. These constraints and specification items do not appear as hyperlinks in the document.

### B.1 Traceable item history of this document according to AUTOSAR Release R23-11

#### B.1.1 Added Specification Items in R23-11

[SWS\_CanTSyn\_00207] [SWS\_CanTSyn\_00208] [SWS\_CanTSyn\_00209] [SWS\_CanTSyn\_00210] [SWS\_CanTSyn\_00211] [SWS\_CanTSyn\_00212] [SWS\_CanTSyn\_00213] [SWS\_CanTSyn\_00214] [SWS\_CanTSyn\_00215] [SWS\_CanTSyn\_00216] [SWS\_CanTSyn\_00217] [SWS\_CanTSyn\_00218] [SWS\_CanTSyn\_00219] [SWS\_CanTSyn\_00220] [SWS\_CanTSyn\_00221] [SWS\_CanTSyn\_00222] [SWS\_CanTSyn\_00223] [SWS\_CanTSyn\_00224] [SWS\_CanTSyn\_00225] [SWS\_CanTSyn\_00226] [SWS\_CanTSyn\_00227] [SWS\_CanTSyn\_00228] [SWS\_CanTSyn\_00229] [SWS\_CanTSyn\_00230] [SWS\_CanTSyn\_00231] [SWS\_CanTSyn\_00232] [SWS\_CanTSyn\_00233]

#### B.1.2 Changed Specification Items in R23-11

[SWS\_CanTSyn\_00010] [SWS\_CanTSyn\_00015] [SWS\_CanTSyn\_00016] [SWS\_CanTSyn\_00017] [SWS\_CanTSyn\_00018] [SWS\_CanTSyn\_00028] [SWS\_CanTSyn\_00031] [SWS\_CanTSyn\_00033] [SWS\_CanTSyn\_00038] [SWS\_CanTSyn\_00041] [SWS\_CanTSyn\_00042] [SWS\_CanTSyn\_00064] [SWS\_CanTSyn\_00068] [SWS\_CanTSyn\_00069] [SWS\_CanTSyn\_00070] [SWS\_CanTSyn\_00078] [SWS\_CanTSyn\_00079] [SWS\_CanTSyn\_00086] [SWS\_CanTSyn\_00090] [SWS\_CanTSyn\_00111] [SWS\_CanTSyn\_00112] [SWS\_CanTSyn\_00114] [SWS\_CanTSyn\_00118] [SWS\_CanTSyn\_00119] [SWS\_CanTSyn\_00120] [SWS\_CanTSyn\_00121] [SWS\_CanTSyn\_00122] [SWS\_CanTSyn\_00123] [SWS\_CanTSyn\_00124] [SWS\_CanTSyn\_00125] [SWS\_CanTSyn\_00126] [SWS\_CanTSyn\_00127] [SWS\_CanTSyn\_00128] [SWS\_CanTSyn\_00129] [SWS\_CanTSyn\_00139] [SWS\_CanTSyn\_00141] [SWS\_CanTSyn\_00143] [SWS\_CanTSyn\_00147] [SWS\_CanTSyn\_00148] [SWS\_CanTSyn\_00155] [SWS\_CanTSyn\_00156] [SWS\_CanTSyn\_00157] [SWS\_CanTSyn\_00158] [SWS\_CanTSyn\_00159] [SWS\_CanTSyn\_00160] [SWS\_CanTSyn\_00168] [SWS\_CanTSyn\_00175] [SWS\_CanTSyn\_00177] [SWS\_CanTSyn\_00182] [SWS\_CanTSyn\_00183] [SWS\_CanTSyn\_00193] [SWS\_CanTSyn\_00200] [SWS\_CanTSyn\_00204] [SWS\_CanTSyn\_00205] [SWS\_CanTSyn\_NA\_00999]

**B.1.3 Deleted Specification Items in R23-11**

[SWS\_CanTSyn\_00192]

**B.1.4 Added Constraints in R23-11**

[SWS\_CanTSyn\_CONSTR\_00002]

**B.1.5 Changed Constraints in R23-11**

none

**B.1.6 Deleted Constraints in R23-11**

none