

Document Title	Specification of CAN State Manager
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	253
Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R21-11

Document Change History			
Date	Release	Changed by	Change Description
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"> Note added for CanSM_TransceiverModeIndication () Communication mode notification to ComM after initialization clarified Clean-up in CANSMBSM regarding REPEAT_MAX / No Never-Give-Up Strategy
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> Pretended Networking removed Editorial changes
2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> Fixed Change_Baudrate-Statemachine for NoCom Added GetPduMode-Interface to list. Inconsistent behavior due to REPEAT_MAX / No Never-Give-Up Strategy fixed Changed Document Status from Final to published
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> Reclassification of some errors Editorial changes
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"> Moved CANSME_MODE_REQUEST_TIMEOUT to Runtime Error
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> Provide Delnit-API ECU passive mode clarified and fixed Editorial changes

Document Change History			
Date	Release	Changed by	Change Description
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Development Error Tracer replaced with Default Error Tracer • Bus-off recovery time dependencies specified more precisely • Optional interface to check and to change baudrate removed
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • API for ECU passive mode activation • Baudrate change without reinitialisation, if possible • Interface handling to CanIf module improved • Interface handling to ComM module improved
2014-03-31	4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> • Introduction of random delays • Re-Request of ComMode • Add WakeupValidation to avoid race conditions • Adapt Bus Off Recovery and NM state synchronization
2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Dependency to DCM module removed • Mileading timing row removed in CanSM_MainFunction • Editorial changes • Removed chapter(s) on change documentation
2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Support Pretended Networking mode handling • Changed concept to setup baudrate • Initialization Sequence between ComM and CanSM • Do not send WUF as First Message on the Bus after BusOff • CanSm_TxTimeoutExeption in case of BusOff

Document Change History			
Date	Release	Changed by	Change Description
2011-12-22	4.0.3	AUTOSAR Administration	<ul style="list-style-type: none"> • Added new handling to support partial networking • Changed handling for bus deinitialisation according to AR3.x behaviour • New API and handling to change the baudrate of a CAN network • Changed handling for bus-off recovery and related production error report • Comprehensive revision of all state machine diagrams and SWS-ID-items • Changed classification of production errors and development errors • Solve conflicts of SWS-ID items with the conformance test specification
2009-12-18	4.0.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Configurable Bus-Off recovery with CAN TX confirmation instead of time based recovery • Control of PDU channel modes completely shifted from CanIf to CanSM module
2010-02-02	3.1.4	AUTOSAR Administration	<ul style="list-style-type: none"> • VMM/AMM Concept related changes (PDU group control shifted to BswM) • Asynchronous handling of CAN network mode transitions (consideration of CAN Transceiver and CAN controller mode notifications) • Solution of Document Improvement issues reported by TO (e. g. split up of non atomic software requirements, textual requirements instead of only a state diagram) • Legal disclaimer revised
2008-08-13	3.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Legal disclaimer revised

Document Change History			
Date	Release	Changed by	Change Description
2007-12-21	3.0.1	AUTOSAR Administration	<ul style="list-style-type: none">• Initial Release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Table of Contents

1	Introduction and functional overview	9
2	Acronyms and abbreviations.....	10
3	Related documentation	11
3.1	Input documents	11
3.2	Related standards and norms	12
3.3	Related specification.....	12
4	Constraints and assumptions.....	14
4.1	Limitations	14
4.2	Applicability to car domains	14
5	Dependencies to other modules	15
5.1	ECU State Manager (EcuM).....	15
5.2	BSW Scheduler (SchM).....	15
5.3	Communication Manager (ComM)	16
5.4	CAN Interface (CanIf)	16
5.5	Diagnostic Event Manager (DEM).....	16
5.6	Basic Software Mode Manager (BswM)	16
5.7	CAN Network Management (CanNm)	16
5.8	Default Error Tracer (DET)	16
5.9	File structure	16
5.9.1	Code file structure	16
5.9.2	Header file structure	17
5.9.3	Version check	17
6	Requirements traceability	18
7	Functional specification.....	24
7.1	General requirements	25
7.2	State machine for each CAN network	27
7.2.1	Trigger: PowerOn	27
7.2.2	Trigger: CanSM_Init	27
7.2.3	Trigger: CanSM_DeInit.....	27
7.2.4	Trigger: T_START_WAKEUP_SOURCE.....	28
7.2.5	Trigger: T_STOP_WAKEUP_SOURCE.....	28
7.2.6	Trigger: T_FULL_COM_MODE_REQUEST	28
7.2.7	Trigger: T_SILENT_COM_MODE_REQUEST	28
7.2.8	Trigger: T_NO_COM_MODE_REQUEST	29
7.2.9	Trigger: T_BUS_OFF	29
7.2.10	Guarding condition: G_FULL_COM_MODE_REQUESTED	29
7.2.11	Guarding condition: G_SILENT_COM_MODE_REQUESTED	29
7.2.12	Effect: E_PRE_NOCOM.....	30
7.2.13	Effect: E_NOCOM	30
7.2.14	Effect: E_FULL_COM.....	30
7.2.15	Effect: E_FULL_TO_SILENT_COM.....	31
7.2.16	Effect: E_BR_END_FULL_COM.....	31
7.2.17	Effect: E_BR_END_SILENT_COM	32

7.2.18	Effect: E_SILENT_TO_FULL_COM.....	32
7.2.19	Sub state machine CANSM_BSM_WUVALIDATION.....	33
7.2.20	Sub state machine: CANSM_BSM_S_PRE_NOCOM	36
7.2.21	Sub state machine: CANSM_BSM_S_SILENTCOM_BOR.....	48
7.2.22	Sub state machine: CANSM_BSM_S_PRE_FULLCOM	50
7.2.23	Sub state machine CANSM_BSM_S_FULLCOM.....	53
7.2.24	Sub state machine: CANSM_BSM_S_CHANGE_BAUDRATE.....	61
7.3	Error classification	65
7.3.1	Development Errors.....	65
7.3.2	Runtime Errors	65
7.3.3	Transient Faults.....	65
7.3.4	Production Errors.....	66
7.3.5	Extended Production Errors	66
7.4	ECU online active / passive mode.....	66
7.5	Non-functional design rules	67
8	API specification.....	68
8.1	Imported types	68
8.2	Type definitions.....	68
8.2.1	CanSM_ConfigType	68
8.2.2	CanSM_BswMCurrentStateType	69
8.3	Function definitions.....	70
8.3.1	CanSM_Init.....	70
8.3.2	CanSM_DeInit	70
8.3.3	CanSM_RequestComMode	71
8.3.4	CanSM_GetCurrentComMode	72
8.3.5	CanSM_StartWakeupSource	74
8.3.6	CanSM_StopWakeupSource	75
8.3.7	Optional	77
8.3.8	Call-back notifications	81
8.3.9	CanSM_ControllerBusOff.....	81
8.3.10	CanSM_ControllerModeIndication	82
8.3.11	CanSM_TransceiverModeIndication	83
8.3.12	CanSM_TxTimeoutException	84
8.3.13	CanSM_ClearTrcvWufFlagIndication.....	84
8.3.14	CanSM_CheckTransceiverWakeFlagIndication	85
8.3.15	CanSM_ConfirmPnAvailability	86
8.4	Scheduled functions	87
8.4.1	CanSM_MainFunction.....	87
8.5	Expected Interfaces	88
8.5.1	Mandatory Interfaces.....	88
8.5.2	Optional Interfaces	89
8.5.3	Configurable Interfaces	89
9	Sequence diagrams	91
9.1	Sequence diagram CanSm_StartCanController	91
9.2	Sequence diagram CanSm_StopCanController	92
10	Configuration specification	93
10.1	How to read this chapter.....	93
10.2	Containers and configuration parameters	93

10.2.1	CanSM.....	93
10.2.2	CanSMConfiguration	93
10.2.3	CanSMGeneral.....	94
10.2.4	CanSMManagerNetwork	97
10.2.5	CanSMController.....	100
10.2.6	CanSMDemEventParameterRefs	101
10.3	Published Information	102
11	CanSM unspecific / not applicable requirements.....	103

1 Introduction and functional overview

This specification describes the functionality, API and the configuration for the AUTOSAR Basic Software module CAN State Manager.

The AUTOSAR BSW stack specifies for each communication bus a bus specific state manager. This module shall implement the control flow for the respective bus. Like shown in the figure below, the CAN State Manager (CanSM) is a member of the Communication Service Layer. It interacts with the Communication Hardware Abstraction Layer and the System Service Layer.

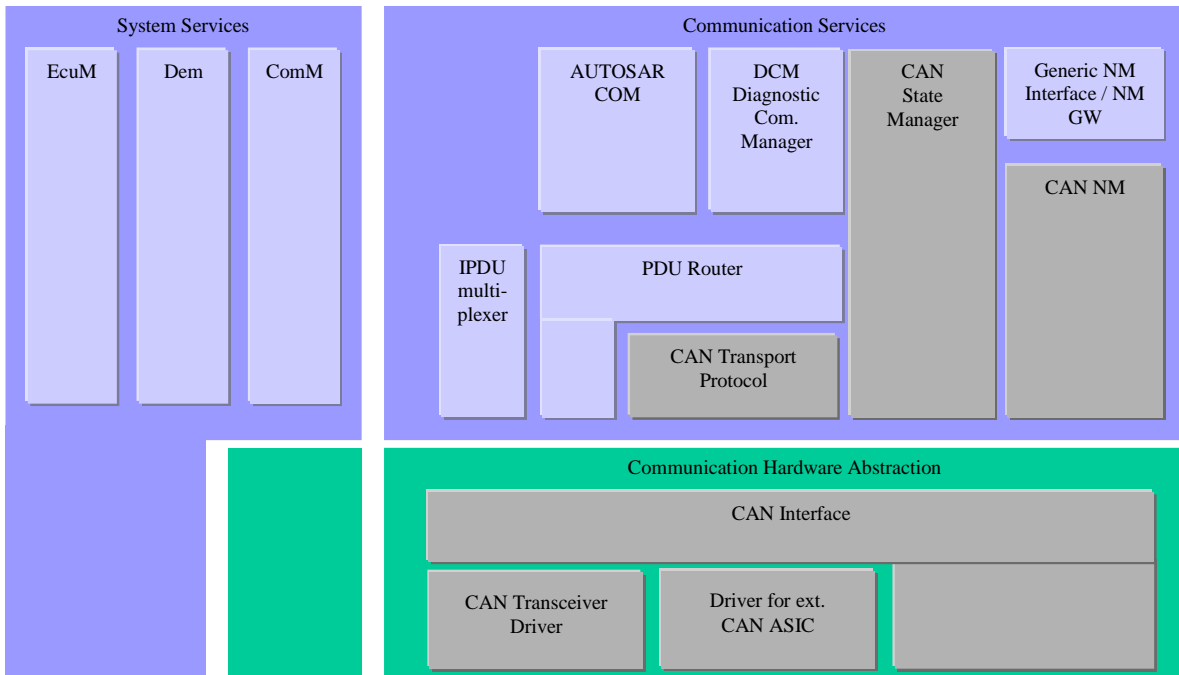


Figure 1-1: Layered Software Architecture from CanSM point of view

2 Acronyms and abbreviations

Abbreviation / Acronym:	Description:
API	Application Program Interface
BSW	Basic Software
CAN	Controller Area Network
CanIf	CAN Interface
CanSM	CAN State Manager
ComM	Communication Manager
DEM	Diagnostic Event Manager
DET	Default Error Tracer
EcuM	ECU State Manager
PDU	Protocol Data Unit
RX	Receive
TX	Transmit
SchM	BSW Scheduler
SWC	Software Component
BswM	Basic Software Mode Manager

3 Related documentation

3.1 Input documents

[1] List of Basic Software Modules

AUTOSAR_TR_BSWModuleList.pdf

[2] Layered Software Architecture

AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf

[3] General Requirements on Basic Software Modules

AUTOSAR_SRS_BSWGeneral.pdf

[4] Specification of ECU Configuration

AUTOSAR_TPS_ECUConfiguration.pdf

[5] Specification of Standard Types

AUTOSAR_SWS_StandardTypes.pdf

[6] Specification of Communication Stack Types

AUTOSAR_SWS_CommunicationStackTypes.pdf

[7] Requirements on CAN

AUTOSAR_SRS_CAN.pdf

[8] Requirements on Mode Management

AUTOSAR_SRS_ModeManagement.pdf

[9] Specification of CAN Transceiver Driver

AUTOSAR_SWS_CANTransceiverDriver.pdf

[10] Specification of Communication Manager

AUTOSAR_SWS_COMMManager.pdf

[11] Specification of ECU State Manager

AUTOSAR_SWS_ECUStateManager.pdf

[12] Specification of Diagnostics Event Manager

AUTOSAR_SWS_DiagnosticEventManager.pdf

[13] Specification of CAN Interface

AUTOSAR_SWS_CANInterface.pdf

[14] Specification of BSW Scheduler

AUTOSAR_SWS_BSW_Scheduler.pdf

[15] Specification of Default Error Tracer

AUTOSAR_SWS_DefaultErrorTracer.pdf

[16] Debugging Concept (internal)

[17] Vehicle and Application Mode Management Concept (internal)

[18] Specification of Basic Software Mode Manager

AUTOSAR_SWS_BSWModeManager.pdf

[19] Specification of CAN Network Management, AUTOSAR_SWS_Can_NM.pdf

[20] Specification of Diagnostic Communication Manager

AUTOSAR_SWS_DiagnosticCommunicationManager.pdf

[21] General Specification of Basic Software Modules

AUTOSAR_SWS_BSWGeneral.pdf

3.2 Related standards and norms

None

3.3 Related specification

AUTOSAR provides a General Specification on Basic Software modules [21] (SWS BSW General), which is also valid for CAN State Manager.

Thus, the specification SWS BSW General shall be considered as additional and required specification for CAN State Manager.

4 Constraints and assumptions

4.1 Limitations

The CanSM module can be used for CAN communication only. Its task is to operate with the CanIf module to control one or multiple underlying CAN Controllers and CAN Transceiver Drivers. Other protocols than CAN (i.e. LIN or FlexRay) are not supported.

4.2 Applicability to car domains

The CAN State Manager module can be used for all domain applications whenever the CAN protocol is used.

5 Dependencies to other modules

The next sections give a brief description of configuration information and services the CanSM module requires from other modules.

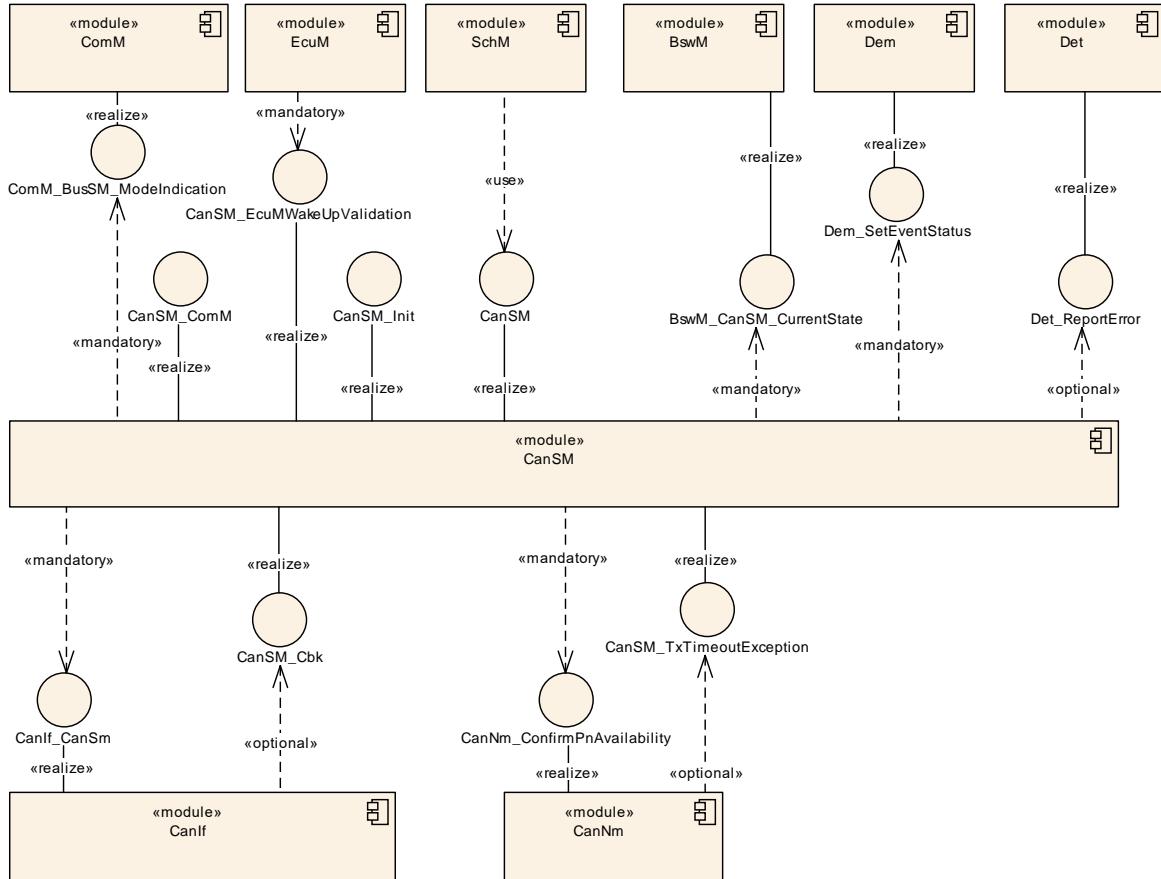


Figure 5-1: Module dependencies of the CanSM module

5.1 ECU State Manager (EcuM)

The EcuM module initializes the CanSM module and interacts with the CanSM module for the CAN wakeup validation (refer to [11] for a detailed specification of this module).

5.2 BSW Scheduler (SchM)

The BSW Scheduler module calls the main function of the CanSM module, which is necessary for the cyclic processes of the CanSM module (refer to [14] for a detailed specification of this module).

5.3 Communication Manager (ComM)

The ComM module uses the API of the CanSM module to request communication modes of CAN networks, which are identified with unique network handles (refer to [10] for a detailed specification of this module).

The CanSM module notifies the current communication mode of its CAN networks to the ComM module.

5.4 CAN Interface (CanIf)

The CanSM module uses the API of the CanIf module to control the operating modes of the CAN controllers and CAN transceivers assigned to the CAN networks (refer to [13] for a detailed specification of this module).

The CanIf module notifies the CanSM module about peripheral events.

5.5 Diagnostic Event Manager (DEM)

The CanSM module reports bus specific production errors to the DEM module (refer to [12] for a detailed specification of this module).

5.6 Basic Software Mode Manager (BswM)

The CanSM need to notify bus specific mode changes to the BswM module (refer to [18] for a detailed specification of this module).

5.7 CAN Network Management (CanNm)

The CanSM module needs to notify the partial network availability to the CanNm module and shall handle notified CanNm timeout exceptions in case of partial networking (ref. to [19] for a detailed specification of this module).

5.8 Default Error Tracer (DET)

The CanSM module reports development and runtime errors to the DET module. Development Errors are only reported if development error handling is switched on by configuration (refer to [15] for a detailed specification of this module).

5.9 File structure

5.9.1 Code file structure

For details refer to the chapter 5.1.6 “Code file structure” in *SWS_BSWGeneral*

5.9.2 Header file structure

[SWS_CanSM_00008] [The header file `CanSM.h` shall export CanSM module specific types and the APIs `CanSM_GetVersionInfo` and `CanSM_Init.`](SRS_BSW_00447)

5.9.3 Version check

For details refer to the chapter 5.1.8 “Version Check” in *SWS_BSWGeneral*.

6 Requirements traceability

Requirement	Description	Satisfied by
SRS_BSW_00003	All software modules shall provide version and identification information	SWS_CanSM_00024, SWS_CanSM_00374
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_CanSM_00023
SRS_BSW_00333	For each callback function it shall be specified if it is called from interrupt context or not	SWS_CanSM_00064, SWS_CanSM_00189, SWS_CanSM_00190, SWS_CanSM_00235
SRS_BSW_00336	Basic SW module shall be able to shutdown	SWS_CanSM_91001
SRS_BSW_00337	Classification of development errors	SWS_CanSM_00654
SRS_BSW_00358	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	SWS_CanSM_00023
SRS_BSW_00359	All AUTOSAR Basic Software Modules callback functions shall avoid return types other than void if possible	SWS_CanSM_00064, SWS_CanSM_00189, SWS_CanSM_00190, SWS_CanSM_00235
SRS_BSW_00369	All AUTOSAR Basic Software Modules shall not return specific development error codes via the API	SWS_CanSM_00660
SRS_BSW_00400	Parameter shall be selected from multiple sets of parameters after code has been loaded and started	SWS_CanSM_00023, SWS_CanSM_00597
SRS_BSW_00404	BSW Modules shall support post-build configuration	SWS_CanSM_00023
SRS_BSW_00405	BSW Modules shall support multiple configuration sets	SWS_CanSM_00023
SRS_BSW_00406	A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the	SWS_CanSM_00023, SWS_CanSM_00184

	BSW module is called	
SRS_BSW_00407	Each BSW module shall provide a function to read out the version information of a dedicated module implementation	SWS_CanSM_00024, SWS_CanSM_00374
SRS_BSW_00414	Init functions shall have a pointer to a configuration structure as single parameter	SWS_CanSM_00023
SRS_BSW_00422	Pre-de-bouncing of error status information is done within the DEM	SWS_CanSM_00498, SWS_CanSM_00522, SWS_CanSM_00605
SRS_BSW_00424	BSW module main processing functions shall not be allowed to enter a wait state	SWS_CanSM_00065, SWS_CanSM_00167
SRS_BSW_00425	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_CanSM_00065, SWS_CanSM_00167
SRS_BSW_00438	Configuration data shall be defined in a structure	SWS_CanSM_00023, SWS_CanSM_00597
SRS_BSW_00447	Standardizing Include file structure of BSW Modules Implementing Autosar Service	SWS_CanSM_00008
SRS_BSW_00466	Classification of extended production errors	SWS_CanSM_00664
SRS_Can_01142	The CAN State Manager shall offer a network abstract API to upper layer	SWS_CanSM_00062, SWS_CanSM_00065, SWS_CanSM_00167, SWS_CanSM_00182, SWS_CanSM_00183, SWS_CanSM_00186, SWS_CanSM_00187, SWS_CanSM_00188, SWS_CanSM_00266, SWS_CanSM_00278, SWS_CanSM_00282, SWS_CanSM_00284, SWS_CanSM_00360, SWS_CanSM_00369, SWS_CanSM_00370, SWS_CanSM_00371, SWS_CanSM_00372, SWS_CanSM_00385, SWS_CanSM_00399, SWS_CanSM_00410, SWS_CanSM_00422, SWS_CanSM_00423, SWS_CanSM_00425, SWS_CanSM_00426, SWS_CanSM_00427, SWS_CanSM_00428, SWS_CanSM_00429, SWS_CanSM_00430, SWS_CanSM_00431, SWS_CanSM_00432, SWS_CanSM_00433, SWS_CanSM_00434, SWS_CanSM_00436, SWS_CanSM_00437, SWS_CanSM_00438, SWS_CanSM_00439, SWS_CanSM_00440, SWS_CanSM_00441, SWS_CanSM_00442, SWS_CanSM_00443, SWS_CanSM_00444, SWS_CanSM_00445, SWS_CanSM_00446, SWS_CanSM_00447, SWS_CanSM_00448, SWS_CanSM_00449,

		SWS_CanSM_00450, SWS_CanSM_00451, SWS_CanSM_00452, SWS_CanSM_00453, SWS_CanSM_00454, SWS_CanSM_00455, SWS_CanSM_00456, SWS_CanSM_00457, SWS_CanSM_00458, SWS_CanSM_00459, SWS_CanSM_00460, SWS_CanSM_00461, SWS_CanSM_00462, SWS_CanSM_00464, SWS_CanSM_00465, SWS_CanSM_00466, SWS_CanSM_00467, SWS_CanSM_00468, SWS_CanSM_00469, SWS_CanSM_00470, SWS_CanSM_00471, SWS_CanSM_00472, SWS_CanSM_00473, SWS_CanSM_00474, SWS_CanSM_00475, SWS_CanSM_00476, SWS_CanSM_00477, SWS_CanSM_00478, SWS_CanSM_00479, SWS_CanSM_00483, SWS_CanSM_00484, SWS_CanSM_00485, SWS_CanSM_00486, SWS_CanSM_00487, SWS_CanSM_00488, SWS_CanSM_00489, SWS_CanSM_00490, SWS_CanSM_00491, SWS_CanSM_00492, SWS_CanSM_00493, SWS_CanSM_00494, SWS_CanSM_00496, SWS_CanSM_00497, SWS_CanSM_00499, SWS_CanSM_00500, SWS_CanSM_00502, SWS_CanSM_00503, SWS_CanSM_00504, SWS_CanSM_00505, SWS_CanSM_00506, SWS_CanSM_00507, SWS_CanSM_00508, SWS_CanSM_00509, SWS_CanSM_00510, SWS_CanSM_00511, SWS_CanSM_00512, SWS_CanSM_00514, SWS_CanSM_00515, SWS_CanSM_00517, SWS_CanSM_00518, SWS_CanSM_00521, SWS_CanSM_00524, SWS_CanSM_00525, SWS_CanSM_00526, SWS_CanSM_00527, SWS_CanSM_00528, SWS_CanSM_00529, SWS_CanSM_00530, SWS_CanSM_00531, SWS_CanSM_00532, SWS_CanSM_00533, SWS_CanSM_00534, SWS_CanSM_00535, SWS_CanSM_00538, SWS_CanSM_00540, SWS_CanSM_00541, SWS_CanSM_00542, SWS_CanSM_00543, SWS_CanSM_00550, SWS_CanSM_00555, SWS_CanSM_00556, SWS_CanSM_00557, SWS_CanSM_00558, SWS_CanSM_00561, SWS_CanSM_00569, SWS_CanSM_00576, SWS_CanSM_00577, SWS_CanSM_00578, SWS_CanSM_00579, SWS_CanSM_00580, SWS_CanSM_00581, SWS_CanSM_00582, SWS_CanSM_00584, SWS_CanSM_00600, SWS_CanSM_00602, SWS_CanSM_00603, SWS_CanSM_00604, SWS_CanSM_00607, SWS_CanSM_00608, SWS_CanSM_00623, SWS_CanSM_00624, SWS_CanSM_00625, SWS_CanSM_00626, SWS_CanSM_00627, SWS_CanSM_00628, SWS_CanSM_00629, SWS_CanSM_00630, SWS_CanSM_00631, SWS_CanSM_00632, SWS_CanSM_00633, SWS_CanSM_00634, SWS_CanSM_00635, SWS_CanSM_00636, SWS_CanSM_00639, SWS_CanSM_00641, SWS_CanSM_00642, SWS_CanSM_00651, SWS_CanSM_00653
--	--	--

SRS_Can_01144	The CAN State Manager shall support a configurable BusOff recovery time	SWS_CanSM_00600, SWS_CanSM_00602, SWS_CanSM_00603, SWS_CanSM_00604, SWS_CanSM_00606, SWS_CanSM_00637
SRS_Can_01145	The CAN State Manager shall control the assigned CAN Devices	SWS_CanSM_00062, SWS_CanSM_00065, SWS_CanSM_00167, SWS_CanSM_00182, SWS_CanSM_00183, SWS_CanSM_00369, SWS_CanSM_00370, SWS_CanSM_00396, SWS_CanSM_00397, SWS_CanSM_00398, SWS_CanSM_00399, SWS_CanSM_00400, SWS_CanSM_00401, SWS_CanSM_00410, SWS_CanSM_00411, SWS_CanSM_00412, SWS_CanSM_00413, SWS_CanSM_00414, SWS_CanSM_00415, SWS_CanSM_00416, SWS_CanSM_00417, SWS_CanSM_00418, SWS_CanSM_00419, SWS_CanSM_00420, SWS_CanSM_00421, SWS_CanSM_00423, SWS_CanSM_00425, SWS_CanSM_00426, SWS_CanSM_00427, SWS_CanSM_00428, SWS_CanSM_00429, SWS_CanSM_00430, SWS_CanSM_00431, SWS_CanSM_00432, SWS_CanSM_00433, SWS_CanSM_00434, SWS_CanSM_00436, SWS_CanSM_00437, SWS_CanSM_00438, SWS_CanSM_00439, SWS_CanSM_00440, SWS_CanSM_00441, SWS_CanSM_00442, SWS_CanSM_00443, SWS_CanSM_00444, SWS_CanSM_00445, SWS_CanSM_00446, SWS_CanSM_00447, SWS_CanSM_00448, SWS_CanSM_00449, SWS_CanSM_00450, SWS_CanSM_00451, SWS_CanSM_00452, SWS_CanSM_00453, SWS_CanSM_00454, SWS_CanSM_00455, SWS_CanSM_00456, SWS_CanSM_00457, SWS_CanSM_00458, SWS_CanSM_00459, SWS_CanSM_00460, SWS_CanSM_00461, SWS_CanSM_00462, SWS_CanSM_00464, SWS_CanSM_00465, SWS_CanSM_00466, SWS_CanSM_00467, SWS_CanSM_00468, SWS_CanSM_00469, SWS_CanSM_00470, SWS_CanSM_00471, SWS_CanSM_00472, SWS_CanSM_00473, SWS_CanSM_00474, SWS_CanSM_00475, SWS_CanSM_00476, SWS_CanSM_00477, SWS_CanSM_00478, SWS_CanSM_00479, SWS_CanSM_00483, SWS_CanSM_00484, SWS_CanSM_00485, SWS_CanSM_00486, SWS_CanSM_00487, SWS_CanSM_00488, SWS_CanSM_00489, SWS_CanSM_00490, SWS_CanSM_00491, SWS_CanSM_00492, SWS_CanSM_00493, SWS_CanSM_00494, SWS_CanSM_00496, SWS_CanSM_00497, SWS_CanSM_00499, SWS_CanSM_00500, SWS_CanSM_00507, SWS_CanSM_00508, SWS_CanSM_00509, SWS_CanSM_00510, SWS_CanSM_00511, SWS_CanSM_00512, SWS_CanSM_00514, SWS_CanSM_00515, SWS_CanSM_00517, SWS_CanSM_00518, SWS_CanSM_00521, SWS_CanSM_00524, SWS_CanSM_00525, SWS_CanSM_00526, SWS_CanSM_00527,

		SWS_CanSM_00528, SWS_CanSM_00529, SWS_CanSM_00531, SWS_CanSM_00532, SWS_CanSM_00533, SWS_CanSM_00534, SWS_CanSM_00535, SWS_CanSM_00538, SWS_CanSM_00540, SWS_CanSM_00541, SWS_CanSM_00542, SWS_CanSM_00543, SWS_CanSM_00546, SWS_CanSM_00550, SWS_CanSM_00555, SWS_CanSM_00556, SWS_CanSM_00557, SWS_CanSM_00558, SWS_CanSM_00560, SWS_CanSM_00576, SWS_CanSM_00577, SWS_CanSM_00578, SWS_CanSM_00579, SWS_CanSM_00580, SWS_CanSM_00581, SWS_CanSM_00582, SWS_CanSM_00584, SWS_CanSM_00600, SWS_CanSM_00602, SWS_CanSM_00603, SWS_CanSM_00604, SWS_CanSM_00607, SWS_CanSM_00608, SWS_CanSM_00609, SWS_CanSM_00610, SWS_CanSM_00611, SWS_CanSM_00612, SWS_CanSM_00613, SWS_CanSM_00616, SWS_CanSM_00617, SWS_CanSM_00618, SWS_CanSM_00619, SWS_CanSM_00620, SWS_CanSM_00621, SWS_CanSM_00622, SWS_CanSM_00623, SWS_CanSM_00624, SWS_CanSM_00625, SWS_CanSM_00626, SWS_CanSM_00627, SWS_CanSM_00628, SWS_CanSM_00629, SWS_CanSM_00630, SWS_CanSM_00631, SWS_CanSM_00632, SWS_CanSM_00633, SWS_CanSM_00634, SWS_CanSM_00636, SWS_CanSM_00638, SWS_CanSM_00639, SWS_CanSM_00641, SWS_CanSM_00642, SWS_CanSM_00651, SWS_CanSM_00653
SRS_Can_01146	The CAN State Manager shall contain a CAN BusOff recovery algorithm for each used CAN Controller	SWS_CanSM_00600, SWS_CanSM_00602, SWS_CanSM_00603, SWS_CanSM_00604, SWS_CanSM_00606, SWS_CanSM_00637
SRS_Can_01158	The CAN stack shall provide a TX offline active mode for ECU passive mode	SWS_CanSM_00435, SWS_CanSM_00516, SWS_CanSM_00539, SWS_CanSM_00644, SWS_CanSM_00645, SWS_CanSM_00646, SWS_CanSM_00647, SWS_CanSM_00649, SWS_CanSM_00650, SWS_CanSM_00656
SRS_Can_01164	The CAN State Manager shall implement an interface for de-initialization.	SWS_CanSM_00658, SWS_CanSM_91001
SRS_ModeMgm_09084	The Communication Manager shall provide an API which allows application to query the current communication mode	SWS_CanSM_00063
SRS_ModeMgm_09251	PNC communication state shall be forwarded to the BswM	SWS_CanSM_00598

7 Functional specification

This chapter specifies the different functions of the CanSM module in the AUTOSAR BSW architecture.

An ECU can have different communication networks. Each network has to be identified with an unique network handle. The ComM module requests communication modes from the networks. It knows by its configuration, which handle is assigned to what kind of network. In case of CAN, it uses the CanSM module.

The CanSM module is responsible for the control flow abstraction of CAN networks:

It changes the communication modes of the configured CAN networks depending on the mode requests from the ComM module.

Therefore the CanSM module uses the API of the CanIf module. The CanIf module is responsible for the control flow abstraction of the configured CAN Controllers and CAN Transceivers (the data flow abstraction of the CanIf module is not relevant for the CanSM module). Any change of the CAN Controller modes and CAN Transceiver modes will be notified by the CanIf module to the CanSM module. Depending on this notifications and state of the CAN network state machine, which the CanSM module shall implement for each configured CAN network, the CanSM module notifies the ComM and the BswM (ref. to chapter 7.2 for details).

Note:

CanSM module will not notify ComM about its communication mode after initialization, unless a communication mode has explicitly been requested by ComM.

7.1 General requirements

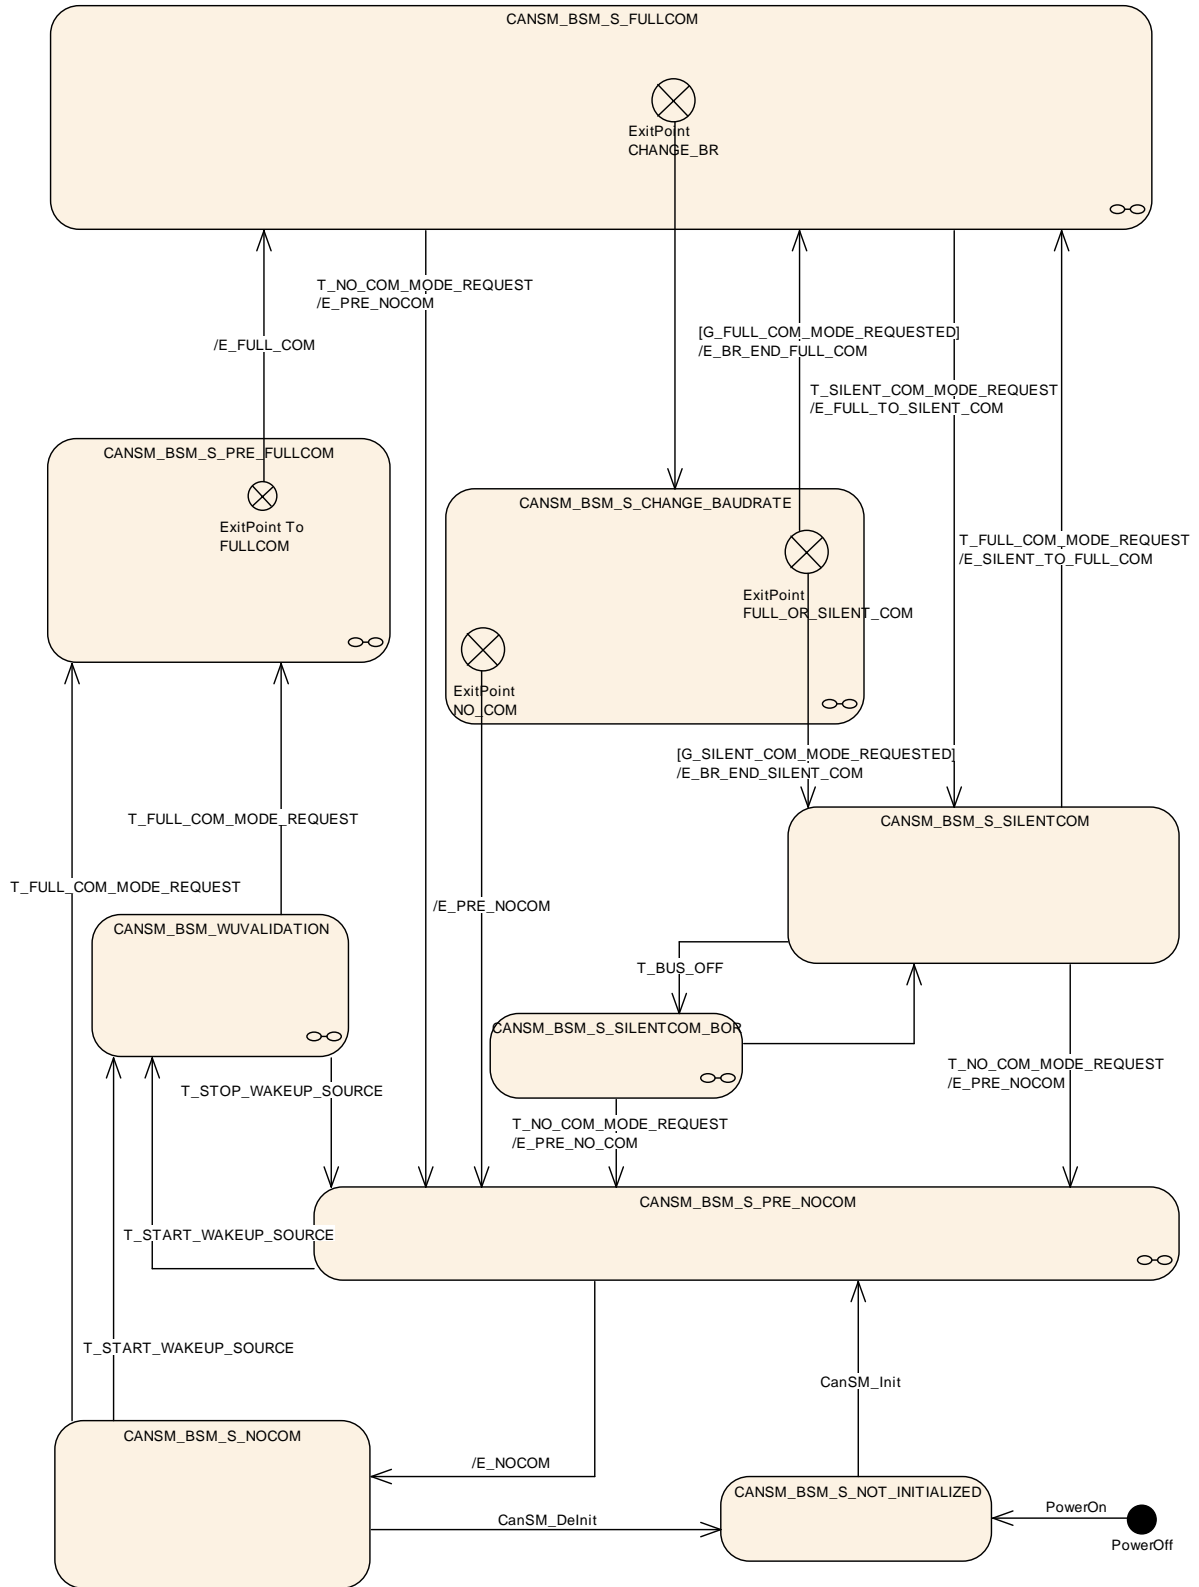


Figure 7-1 : CANSM_BSM, state machine diagram for one CAN network

[SWS_CanSM_00266] 「The CanSM module shall store the current network mode for each configured CAN network internally (ref. to [ECUC_CanSM_00126](#)).」(SRS_Can_01142)

[SWS_CanSM_00284] 「The internally stored network modes of the CanSM module can have the values `COMM_NO_COMMUNICATION`, `COMM_SILENT_COMMUNICATION`, `COMM_FULL_COMMUNICATION`.」(SRS_Can_01142)

[SWS_CanSM_00428] 「All effects of the CanSM state machine `CANSM_BSM` (ref. to Figure 7-1) shall be operated in the context of the CanSM main function (ref. to [SWS_CanSM_00065](#)).」(SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00278] 「If the CanSM state machine `CANSM_BSM` (ref. to Figure 7-1) is in the state `CANSM_BSM_S_NOT_INITIALIZED`, it shall deny network mode requests from the ComM module (ref. to [SWS_CanSM_00062](#)).」(SRS_Can_01142)

[SWS_CanSM_00385] 「If CanSM has repeated one of the CanIf API calls `CanIf_SetControllerMode`, `CanIf_SetTrcvMode`, `CanIf_ClearTrcvWufFlag` or `CanIf_CheckTrcvWakeFlag` more often than `CanSMModeRequestRepetitionMax` (ref. to [ECUC_CanSM_00335](#)) without getting the return value `E_OK` or without getting the corresponding mode indication callbacks `CanSM_ControllerModeIndication`, `CanSM_TransceiverModeIndication`, `CanSM_ClearTrcvWufFlagIndication` or `CanSM_CheckTransceiverWakeFlagIndication`, CanSM shall call the function `Det_ReportRuntimeError` with `ErrorId` parameter `CANSM_E_MODE_REQUEST_TIMEOUT`.」(SRS_Can_01142)

[SWS_CanSM_00422] 「If the CanIf module notifies PN availability for a configured CAN Transceiver to the CanSM module with the callback function `CanSM_ConfirmPnAvailability` (ref. to [SWS_CanSM_00419](#)), then the CanSM module shall call the API `CanNm_ConfirmPnAvailability` (ref. to chapter 8.5.1) with the related CAN network as `channel` to confirm the PN availability to the `CanNm` module.」(SRS_Can_01142)

[SWS_CanSM_00560] 「If no `CanSMTransceiverId` (ref. to [ECUC_CanSM_00137](#)) is configured for a CAN Network, then the CanSM module shall bypass all specified `CanIf_SetTrcvMode` (e. g. [SWS_CanSM_00446](#)) calls for the CAN Network and proceed in the different state transitions as if it has got the supposed `CanSM_TransceiverModeIndication` already (e. g. [SWS_CanSM_00448](#)).」(SRS_Can_01145)

[SWS_CanSM_00635] The CanSM module shall store for each configured CAN network (ref. to [ECUC_CanSM_00126](#)) the latest communication mode request, which has been accepted by returning E_OK in the API request `CanSM_RequestComMode` (ref. to [SWS_CANSM_00062](#), [SWS_CANSM_00182](#)) and use it as trigger for the state machine of the related CAN network (ref. to Figure 7-1), [SWS_CanSM_00427](#), [SWS_CanSM_00429](#), [SWS_CanSM_00499](#), [SWS_CanSM_00542](#), [SWS_CanSM_00543](#), [SWS_CANSM_00425](#), [SWS_CANSM_00426](#), [SWS_CANSM_00554](#)). (SRS_Can_01142)

[SWS_CanSM_00638] The CanSM module shall store after every successful CAN controller mode change (ref. to [SWS_CANSM_00396](#)) or bus-off conditioned change to `CAN_CS_STOPPED` (ref. to [SWS_CANSM_00064](#)), the changed mode internally for each CAN controller. (SRS_Can_01145)

7.2 State machine for each CAN network

The diagram (ref. to Figure 7-1) specifies the behavioral state machine of the CanSM module, which shall be implemented for each configured CAN network (ref. to [ECUC_CanSM_00126](#))

7.2.1 Trigger: PowerOn

[SWS_CanSM_00424] After PowerOn the CanSM state machines (ref. to Figure 7-1) shall be in the state `CANSM_BSM_NOT_INITIALIZED`.

7.2.2 Trigger: CanSM_Init

[SWS_CanSM_00423] If the CanSM module is requested with the function `CanSM_Init` (ref. to chapter 8.3.1), this shall trigger the CanSM state machines (ref. to Figure 7-1) for all configured CAN Networks (ref. to [ECUC_CanSM_00126](#)) with the trigger `CanSM_Init`. (SRS_Can_01142, SRS_Can_01145)

7.2.3 Trigger: CanSM_Delnit

[SWS_CanSM_00658] If the CanSM module is requested with the function `CanSM_Delnit`, this shall trigger the CanSM state machines (ref. to Figure 7-1) for all configured CAN Networks (ref. to [ECUC_CanSM_00126](#)) with the trigger `CanSM_Delnit`. (SRS_Can_01164)

Note: Caller of the CanSM_Delnit function has to ensure all CAN networks are in the state CANSM_NO_COMMUNICATION

7.2.4 Trigger: T_START_WAKEUP_SOURCE

[SWS_CanSM_00607] If the API request `CanSM_StartWakeUpSource` (ref. to [SWS_CanSM_00609](#)) returns `E_OK` (ref. to [SWS_CanSM_00616](#)), it shall trigger the state machine (ref. to Figure 7-1) with `T_START_WAKEUP_SOURCE`.
 (SRS_Can_01142, SRS_Can_01145)

7.2.5 Trigger: T_STOP_WAKEUP_SOURCE

[SWS_CanSM_00608] If the API request `CanSM_StopWakeUpSource` (ref. to [SWS_CanSM_00610](#)) returns `E_OK` (ref. to [SWS_CanSM_00622](#)), it shall trigger the state machine (ref. to Figure 7-1) with `T_STOP_WAKEUP_SOURCE`.
 (SRS_Can_01142, SRS_Can_01145)

7.2.6 Trigger: T_FULL_COM_MODE_REQUEST

[SWS_CanSM_00425] The API request `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) with the parameter `ComM_Mode` equal to `COMM_FULL_COMMUNICATION` shall trigger the state machine with `T_FULL_COM_MODE_REQUEST`, if the function parameter `network` matches the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [ECUC_CanSM_00161](#)).
 (SRS_Can_01142, SRS_Can_01145)

7.2.7 Trigger: T_SILENT_COM_MODE_REQUEST

[SWS_CanSM_00499] The API request `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) with the parameter `ComM_Mode` equal to `COMM_SILENT_COMMUNICATION` shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-1) with `T_SILENT_COM_MODE_REQUEST`, which corresponds to the function parameter `network` and the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [ECUC_CanSM_00161](#)).
 (SRS_Can_01145, SRS_Can_01142)

Rationale: Regular use case for the transition of the CanNm Network mode to the CanNm Prepare Bus-Sleep mode.

7.2.8 Trigger: T_NO_COM_MODE_REQUEST

[SWS_CanSM_00426] The API request `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) with the parameter `ComM_Mode` equal to `COMM_NO_COMMUNICATION` shall trigger the state machine with `T_NO_COM_MODE_REQUEST`, if the function parameter `network` matches the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [ECUC_CanSM_00161](#)). (SRS_Can_01142, SRS_Can_01145)

Remark: Depending on the ComM configuration, the ComM module will request `COMM_SILENT_COMMUNICATION` first and then `COMM_NO_COMMUNICATION` or `COMM_NO_COMMUNICATION` directly (`ComMNmVariant=LIGHT`).

7.2.9 Trigger: T_BUS_OFF

[SWS_CanSM_00606] The callback function `CanSM_ControllerBusOff` (ref. to [SWS_CanSM_00064](#)) shall trigger the state machine `CANSM_BSM` (ref. to Figure 7-1) for the CAN network with `T_BUS_OFF`, if one of its configured CAN controllers matches to the function parameter `ControllerId` of the callback function `CanSM_ControllerBusOff`. (SRS_Can_01144, SRS_Can_01146)

7.2.10 Guarding condition: G_FULL_COM_MODE_REQUESTED

[SWS_CanSM_00427] The guarding condition `G_FULL_COM_MODE_REQUESTED` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall evaluate, if the latest accepted communication mode request with `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) for the respective network handle of the state machine has been with the parameter `ComM_Mode` equal to `COMM_FULL_COMMUNICATION`. (SRS_Can_01142, SRS_Can_01145)

7.2.11 Guarding condition: G_SILENT_COM_MODE_REQUESTED

[SWS_CanSM_00429] The guarding condition `G_SILENT_COM_MODE_REQUESTED` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall evaluate, if the latest accepted communication mode request with `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) for the respective network handle of the state machine has been with the parameter `ComM_Mode` equal to `COMM_SILENT_COMMUNICATION`. (SRS_Can_01142, SRS_Can_01145)

7.2.12 Effect: E_PRE_NOCOM

[SWS_CanSM_00431] The effect E_PRE_NOCOM of the CanSM_BSM state machine (ref. to Figure 7-1) shall call for the corresponding CAN network the API `BswM_CanSM_CurrentState` with the parameters `Network := CanSMComMNetworkHandleRef` and `CurrentState := CANSM_BSWM_NO_COMMUNICATION.` (SRS_Can_01142, SRS_Can_01145)

7.2.13 Effect: E_NOCOM

[SWS_CanSM_00430] The effect E_NOCOM of the CanSM_BSM state machine (ref. to Figure 7-1) shall change the internally stored network mode (ref. to [SWS_CanSM_00266](#)) of the addressed CAN network to `COMM_NO_COMMUNICATION.` (SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00651] If a communication mode request for the network is present already (ref. to [SWS_CanSM_00635](#)) and the stored communication mode request is `COMM_NO_COMMUNICATION`, then the effect E_NOCOM of the CanSM_BSM state machine (ref. to Figure 7-1) shall call the API `ComM_BusSM_ModeIndication` with the parameters `Channel := CanSMComMNetworkHandleRef` (ref. to [ECUC_CanSM_00161](#)) and `ComMode := COMM_NO_COMMUNICATION.` (SRS_Can_01142, SRS_Can_01145)

7.2.14 Effect: E_FULL_COM

[SWS_CanSM_00539] If ECU passive is FALSE (ref. to [SWS_CanSM_00646](#)), then the effect E_FULL_COM of the CanSM_BSM state machine (ref. to Figure 7-1) shall call at 1st place for each configured CAN controller of the CAN network the API `CanIf_SetPduMode` with the parameters `ControllerId := CanSMControllerId` (ref. to [ECUC_CanSM_00141](#)) and `PduModeRequest := CANIF_ONLINE.` (SRS_Can_01158)

[SWS_CanSM_00647] If ECU passive is TRUE (ref. to [SWS_CanSM_00646](#)), then the effect E_FULL_COM of the CanSM_BSM state machine (ref. to Figure 7-1) shall call at 1st place for each configured CAN controller of the CAN network the API `CanIf_SetPduMode` with the parameters `ControllerId := CanSMControllerId` (ref. to [ECUC_CanSM_00141](#)) and `PduModeRequest := CANIF_TX_OFFLINE_ACTIVE.` (SRS_Can_01158)

[SWS_CanSM_00435] 「After considering [SWS_CANSM_00539](#) and [SWS_CanSM_00647](#) in context of the effect `E_FULL_COM` of the `CanSM_BSM` state machine (ref. to Figure 7-1), the `CanSM` module shall call the API `ComM_BusSM_ModeIndication` for the corresponding CAN network with the parameters `Channel := CanSMComMNetworkHandleRef` (ref. to [ECUC_CanSM_00161](#)) and `ComMode := COMM_FULL_COMMUNICATION`.

」(SRS_Can_01158)

[SWS_CanSM_00540] 「After considering [SWS_CANSM_00435](#) in context of the effect `E_FULL_COM` of the `CanSM_BSM` state machine (ref. to Figure 7 1), the `CanSM` module shall call the API `BswM_CanSM_CurrentState` for the corresponding CAN network with the parameters `Network := CanSMComMNetworkHandleRef` and `CurrentState := CANSM_BSWM_FULL_COMMUNICATION`」(SRS_Can_01142, SRS_Can_01145)

7.2.15 Effect: `E_FULL_TO_SILENT_COM`

[SWS_CanSM_00434] 「The effect `E_FULL_TO_SILENT_COM` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall call at 1st place for the corresponding CAN network the API `BswM_CanSM_CurrentState` with the parameters `Network := CanSMComMNetworkHandleRef` and `CurrentState := CANSM_BSWM_SILENT_COMMUNICATION`」(SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00541] 「The effect `E_FULL_TO_SILENT_COM` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall call at 2nd place for each configured CAN controller of the CAN network the API `CanIf_SetPduMode` with the parameters `ControllerId := CanSMControllerId` (ref. to [ECUC_CanSM_00141](#)) and `PduModeRequest := CANIF_TX_OFFLINE`」(SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00538] 「The effect `E_FULL_TO_SILENT_COM` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall call at 3th place for the corresponding CAN network the API `ComM_BusSM_ModeIndication` with the parameters `Channel := CanSMComMNetworkHandleRef` (ref. to [ECUC_CanSM_00161](#)) and `ComMode := COMM_SILENT_COMMUNICATION`」(SRS_Can_01142, SRS_Can_01145)

7.2.16 Effect: `E_BR_END_FULL_COM`

[SWS_CanSM_00432] 「The effect `E_BR_END_FULL_COM` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall be the same as `E_FULL_COM` (ref. to chapter 7.2.14)」(SRS_Can_01142, SRS_Can_01145)

7.2.17 Effect: E_BR_END_SILENT_COM

[SWS_CanSM_00433] 「The effect `E_BR_END_SILENT_COM` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall be the same as `E_FULL_TO_SILENT_COM` (ref. to chapter 7.2.15).」(SRS_Can_01142, SRS_Can_01145)

7.2.18 Effect: E_SILENT_TO_FULL_COM

[SWS_CanSM_00550] 「The effect `E_SILENT_TO_FULL_COM` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall be the same as `E_FULL_COM` (ref. to chapter 7.2.14).」(SRS_Can_01142, SRS_Can_01145)

7.2.19 Sub state machine CANSM_BSM_WUVALIDATION

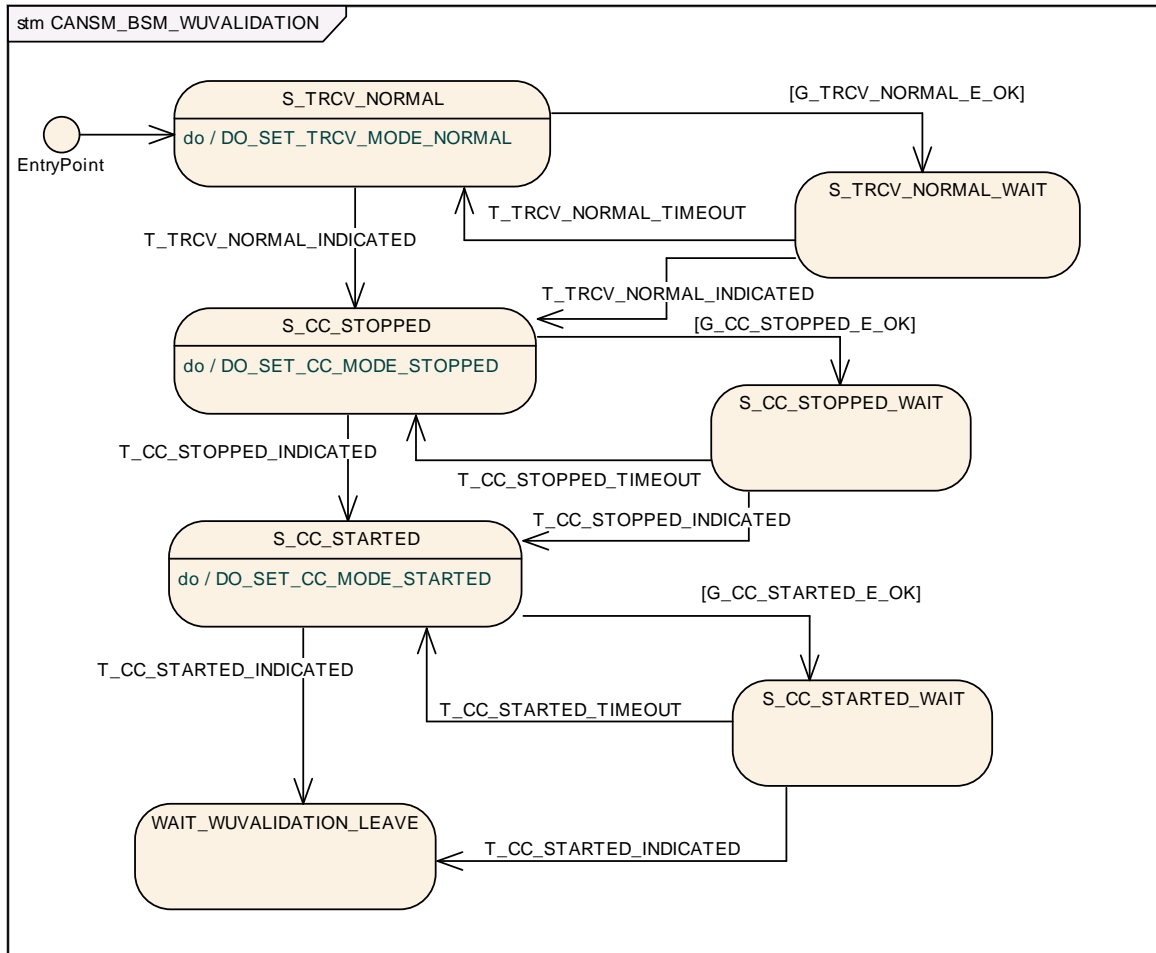


Figure 7-2: CANSM_BSM_WUVALIDATION, sub state machine of CANSM_BSM

7.2.19.1 State operation to do in: S_TRCV_NORMAL

[SWS_CanSM_00623] If for the CAN network a CAN Transceiver is configured (ref. to [ECUC_CanSM_00137](#)), then as long the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) is in the state S_TRCV_NORMAL, the CanSM module shall operate the do action DO_SET_TRCV_MODE_NORMAL and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request CanIf_SetTrcvMode (ref. to chapter 8.5.1) with TransceiverMode equal to CANTRCV_TRCVMODE_NORMAL.) (SRS_Can_01142, SRS_Can_01145)

7.2.19.2 Guarding condition G_TRCV_NORMAL_E_OK

[SWS_CanSM_00624] The guarding condition G_TRCV_NORMAL_E_OK of the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) shall be passed, if

the API call of [SWS_CanSM_00483](#) has returned `E_OK`.`](SRS_Can_01142, SRS_Can_01145)`

7.2.19.3 Trigger: `T_TRCV_NORMAL_INDICATED`

[\[SWS_CanSM_00625\]](#) If CanSM module has got the `CANTRCV_TRCVMODE_NORMAL` mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00623](#)), this shall trigger the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) of the CAN network with `T_TRCV_NORMAL_INDICATED`.`](SRS_Can_01142, SRS_Can_01145)`

7.2.19.4 Trigger: `T_TRCV_NORMAL_TIMEOUT`

[\[SWS_CanSM_00626\]](#) After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver normal indication (ref. to [SWS_CanSM_00625](#)), this condition shall trigger the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) of the respective network with `T_TRCV_NORMAL_TIMEOUT`.`](SRS_Can_01142, SRS_Can_01145)`

7.2.19.5 State operation to do in: `S_CC_STOPPED`

[\[SWS_CanSM_00627\]](#) As long the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) is in the state `S_CC_STOPPED`, the CanSM module shall operate the do action `DO_SET_CC_MODE_STOPPED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STOPPED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.`](SRS_Can_01142, SRS_Can_01145)`

7.2.19.6 Guarding condition: `G_CC_STOPPED_OK`

[\[SWS_CanSM_00628\]](#) The guarding condition `G_CC_STOPPED_OK` of the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) shall be passed, if all API calls of [SWS_CanSM_00627](#) have returned `E_OK`.`](SRS_Can_01142, SRS_Can_01145)`

7.2.19.7 Trigger: `T_CC_STOPPED_INDICATED`

[\[SWS_CanSM_00629\]](#) If the CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00627](#)), this shall trigger the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) of the CAN network with `T_CC_STOPPED_INDICATED`.`](SRS_Can_01142, SRS_Can_01145)`

7.2.19.8 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00630]⌈ After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00629](#)), this condition shall trigger the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) of the respective network with `T_CC_STOPPED_TIMEOUT`.⌋(SRS_Can_01142, SRS_Can_01145)

7.2.19.9 State operation to do in: S_CC_STARTED

[SWS_CanSM_00631]⌈ As long the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) is in the state `S_CC_STARTED`, the CanSM module shall operate the do action `DO_SET_CC_MODE_STARTED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STARTED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.⌋(SRS_Can_01142, SRS_Can_01145)

7.2.19.10 Guarding condition: G_CC_STARTED_E_OK

[SWS_CanSM_00632]⌈ The guarding condition `G_CC_STARTED_OK` of the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) shall be passed, if all API calls of [SWS_CanSM_00631](#) have returned `E_OK`.⌋(SRS_Can_01142, SRS_Can_01145)

7.2.19.11 Trigger: T_CC_STARTED_INDICATED

[SWS_CanSM_00633]⌈ If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00631](#)), this shall trigger the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) of the CAN network with `T_CC_STARTED_INDICATED`.⌋(SRS_Can_01142, SRS_Can_01145)

7.2.19.12 Trigger: T_CC_STARTED_TIMEOUT

[SWS_CanSM_00634]⌈ After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller started mode indications (ref. to [SWS_CanSM_00633](#)), this condition shall trigger the sub state machine `CANSM_BSM_WUVALIDATION` (ref. to Figure 7-2) of the respective network with `T_CC_STARTED_TIMEOUT`.⌋(SRS_Can_01142, SRS_Can_01145)

7.2.20 Sub state machine: CANSMBSM_S_PRE_NOCOM

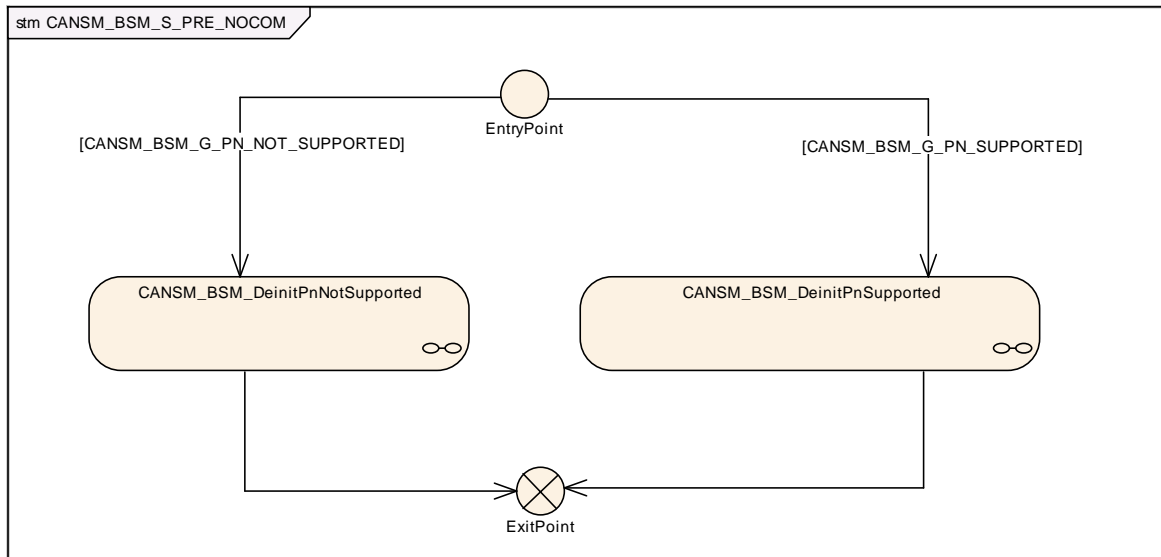


Figure 7-3: CANSMBSM_S_PRE_NOCOM, sub state machine of CANSMBSM

7.2.20.1 Guarding condition: CANSMBSM_G_PN_NOT_SUPPORTED

[SWS_CanSM_00436] The guarding condition `CANSMBSM_G_PN_NOT_SUPPORTED` of the sub state machine `CANSMBSM_S_PRE_NO_COM` (ref. to Figure 7-3) shall evaluate, if the configuration parameter `CanTrcvPnEnabled` (ref. to [9], `ECUC_CanTrcv_00172`) is `FALSE`, which is available via the reference `CanSMTransceiverId` (ref. to [ECUC_CanSM_00137](#)) or if no `CanSMTransceiverId` is configured at all. (SRS_Can_01142, SRS_Can_01145)

7.2.20.2 Guarding condition: CANSMBSM_G_PN_SUPPORTED

[SWS_CanSM_00437] The guarding condition `CANSMBSM_G_PN_SUPPORTED` of the sub state machine `CANSMBSM_S_PRE_NO_COM` (ref. to Figure 7-3) shall evaluate, if a `CanSMTransceiverId` (ref. to [ECUC_CanSM_00137](#)) is configured and if the configuration parameter `CanTrcvPnEnabled` (ref. to [9], `ECUC_CanTrcv_00172`) is `TRUE`, which is available via the reference `CanSMTransceiverId` (ref. to [ECUC_CanSM_00137](#)). (SRS_Can_01142, SRS_Can_01145)

7.2.20.3 Sub state machine: CANSMBSM_DeinitPnSupported

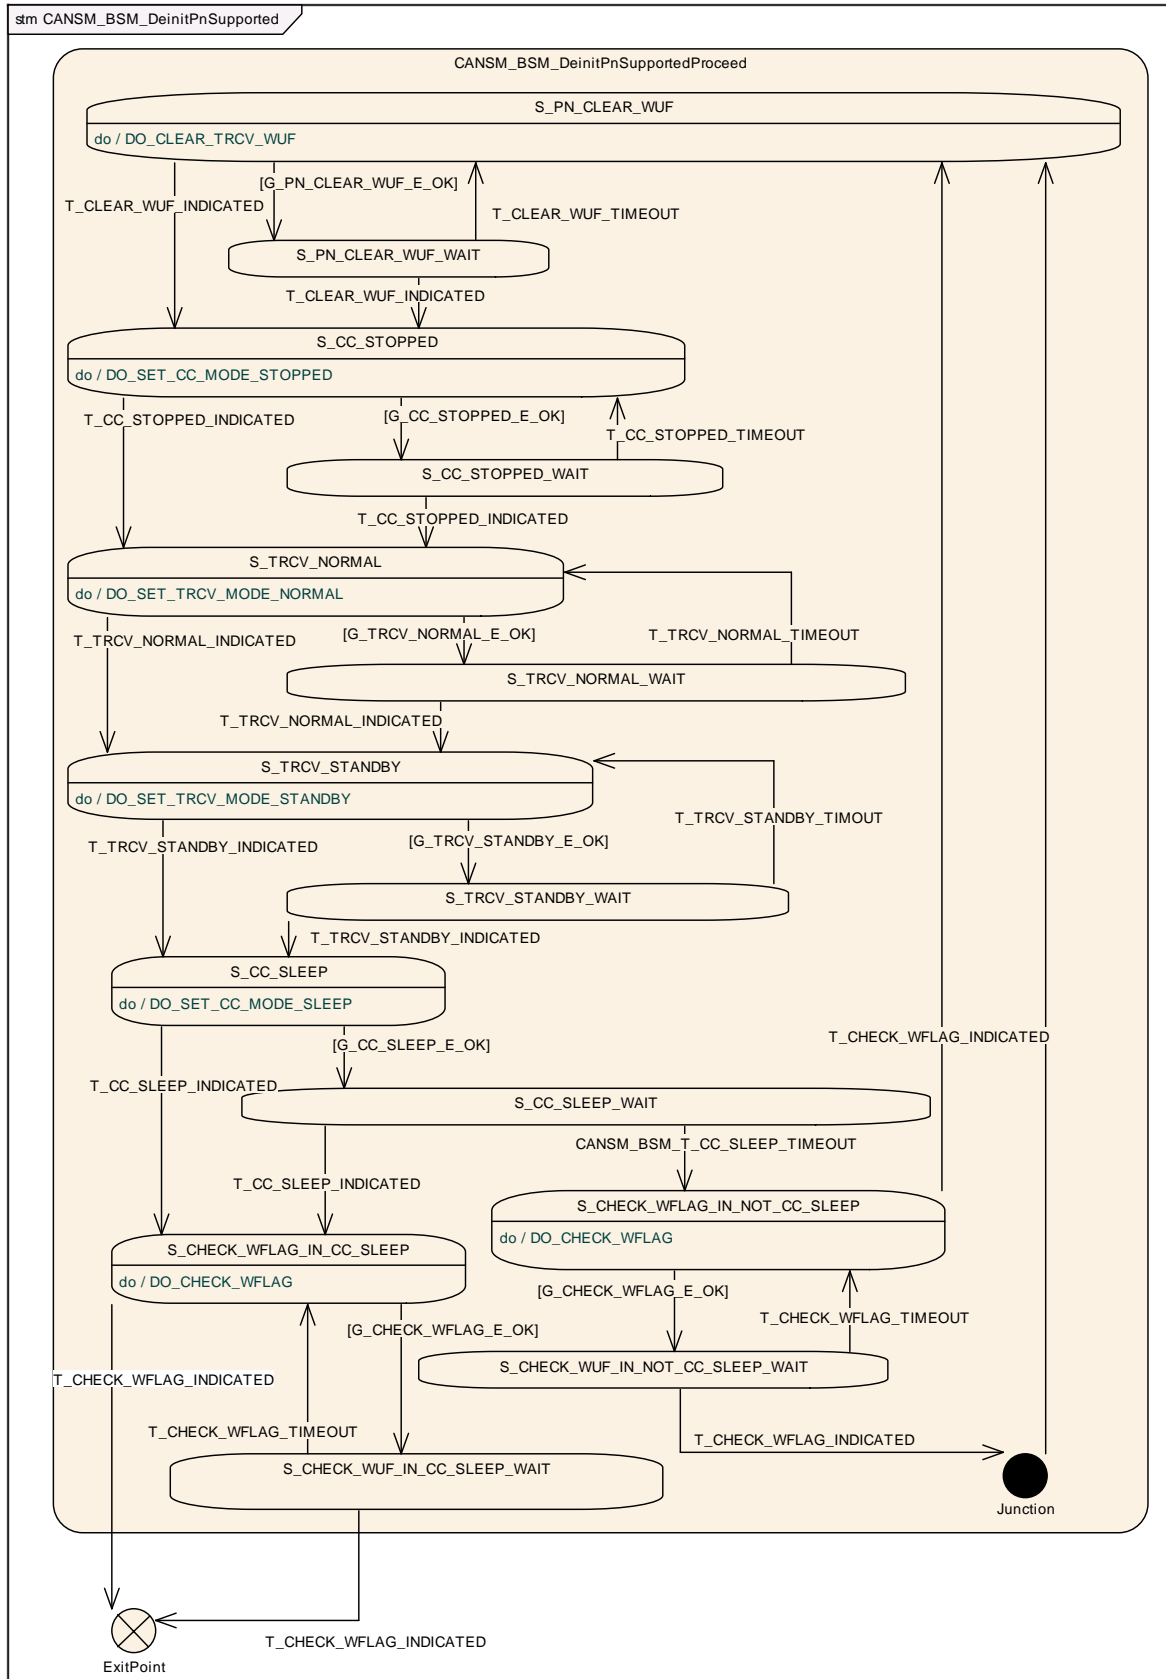


Figure 7-4: CANSM_BSM_DeinitPnSupported, sub state machine of CANSM_BSM_S_PRE_NOCOM

7.2.20.3.1 State operation to do in: S_PN_CLEAR_WUF

[SWS_CanSM_00438] 「As long the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) is in the state S_PN_CLEAR_WUF, the CanSM module operate the do action DO_CLEAR_TRCV_WUF and therefore repeat the API request CanIf_ClrTrcvWufFlag (ref. to chapter 8.5.1) and use the configured Transceiver (ref. to [ECUC_CanSM_00137](#)) as API function parameter.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.2 Guarding condition: G_PN_CLEAR_WUF_E_OK

[SWS_CanSM_00439] 「The guarding condition G_PN_CLEAR_WUF_E_OK of the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) shall be passed, if the API call of [SWS_CanSM_00438](#) has returned E_OK.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.3 Trigger: T_CLEAR_WUF_INDICATED

[SWS_CanSM_00440] 「The callback function CanSM_ClearTrcvWufFlagIndication (ref. to [SWS_CanSM_00413](#)) shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the CAN network with T_CLEAR_WUF_INDICATED, if the function parameter Transceiver of CanSM_ClearTrcvWufFlagIndication matches to the configured CAN Transceiver (ref. to [ECUC_CanSM_00137](#)) of the CAN network.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.4 Trigger: T_CLEAR_WUF_TIMEOUT

[SWS_CanSM_00443] 「After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for the callback function CanSM_ClearTrcvWufFlagIndication (ref. to [SWS_CanSM_00440](#)), this condition shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the respective network with T_CLEAR_WUF_TIMEOUT.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.5 State operation to do in: S_CC_STOPPED

[SWS_CanSM_00441] 「As long the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) is in the state S_CC_STOPPED, the CanSM module shall operate the do action DO_SET_CC_MODE_STOPPED and therefore repeat for all configured CAN controllers

of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STOPPED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.)(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.6 Guarding condition: G_CC_STOPPED_E_OK

[SWS_CanSM_00442] 「The guarding condition `G_CC_STOPPED_E_OK` of the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) shall be passed, if all API calls of [SWS_CanSM_00441](#) have returned `E_OK`.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.7 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00444] 「If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00442](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the CAN network with `T_CC_STOPPED_INDICATED`.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.8 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00445] 「After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00444](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the respective network with `T_CC_STOPPED_TIMEOUT`.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.9 State operation to do in: S_TRCV_NORMAL

[SWS_CanSM_00446] 「As long the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) is in the state `S_TRCV_NORMAL`, the CanSM module shall operate the do action `DO_SET_TRCV_MODE_NORMAL` and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request `CanIf_SetTrcvMode` (ref. to chapter 8.5.1) with `TransceiverMode` equal to `CANTRCV_TRCVMODE_NORMAL`.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.3.10 Guarding condition: G_TRCV_NORMAL_E_OK

[SWS_CanSM_00447] 「The guarding condition `G_TRCV_NORMAL_E_OK` of the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) shall be

passed, if the API call of [SWS_CanSM_00446](#) has returned
 E_OK.](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.11 Trigger: T_TRCV_NORMAL_INDICATED

[SWS_CanSM_00448] If CanSM module has got the
 CANTRCV_TRCVMODE_NORMAL mode indication (ref. to [SWS_CanSM_00399](#)) for the
 configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after
 the respective request (ref. to [SWS_CanSM_00446](#)), this shall trigger the sub state
 machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the CAN network
 with T_TRCV_NORMAL_INDICATED.](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.12 Trigger: T_TRCV_NORMAL_TIMEOUT

[SWS_CanSM_00449] After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to
[ECUC_CanSM_00336](#)) for the supposed transceiver normal indication (ref. to
[SWS_CanSM_00448](#)), this condition shall trigger the sub state machine
 CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the respective network
 with T_TRCV_NORMAL_TIMEOUT.](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.13 State operation to do in: S_TRCV_STANDBY

[SWS_CanSM_00450] As long the sub state machine
 CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) is in the state
 S_TRCV_STANDBY, the CanSM module shall operate the do action
 DO_SET_TRCV_STANDBY and therefore repeat for the configured CAN Transceiver
 of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request
 CanIf_SetTrcvMode (ref. to chapter 8.5.1) with TransceiverMode equal to
 CANTRCV_TRCVMODE_STANDBY.](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.14 Guarding condition: G_TRCV_STANDBY_E_OK

[SWS_CanSM_00451] The guarding condition G_TRCV_STANDBY_E_OK of the
 sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) shall be
 passed, if the API call of [SWS_CanSM_00450](#) has returned
 E_OK.](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.15 Trigger: T_TRCV_STANDBY_INDICATED

[SWS_CanSM_00452] If the CanSM module has got the
 CANTRCV_TRCVMODE_STANDBY mode indication (ref. to [SWS_CanSM_00399](#)) for
 the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#))
 after the respective request (ref. to [SWS_CanSM_00450](#)), this shall trigger the sub

state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the CAN network with `T_TRCV_STANDBY_INDICATED.`](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.16 Trigger: `T_TRCV_STANDBY_TIMEOUT`

[SWS_CanSM_00454] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver standby indication (ref. to [SWS_CanSM_00452](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the respective network with `T_TRCV_STANDBY_TIMEOUT.`](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.17 State operation to do in: `S_CC_SLEEP`

[SWS_CanSM_00453] [As long the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) is in the state `S_CC_SLEEP`, the CanSM module shall operate the do action `DO_SET_CC_MODE_SLEEP` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_SLEEP`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.18 Guarding condition: `G_CC_SLEEP_E_OK`

[SWS_CanSM_00455] [The guarding condition `G_CC_SLEEP_E_OK` of the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) shall be passed, if all API calls of [SWS_CanSM_00453](#) have returned `E_OK.`](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.19 Trigger: `T_CC_SLEEP_INDICATED`

[SWS_CanSM_00456] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to set the CAN controllers of the CAN network to sleep mode (ref. to [SWS_CanSM_00453](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the CAN network with `T_CC_SLEEP_INDICATED.`](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.20 Trigger: `CANSM_BSM_T_CC_SLEEP_TIMEOUT`

[SWS_CanSM_00457] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller sleep mode indications (ref. to [SWS_CanSM_00456](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the respective

network with `CANSM_BSM_T_CC_SLEEP_TIMEOUT.`](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.21 State operation to do in: `S_CHECK_WFLAG_IN_CC_SLEEP`

[SWS_CanSM_00458] 「As long the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) is in the state `S_CHECK_WFLAG_IN_CC_SLEEP`, the CanSM module operate the do action `DO_CHECK_WFLAG` and therefore repeat the API request `CanIf_CheckTrcvWakeFlag` (ref. to chapter 8.5.1) and use the configured CAN Transceiver of the related Network (ref. to [ECUC_CanSM_00137](#)) as Transceiver parameter.](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.22 Guarding condition: `G_CHECK_WFLAG_E_OK`

[SWS_CanSM_00459] 「The guarding condition `G_CHECK_WFLAG_E_OK` of the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) shall be passed, if the API call of [SWS_CanSM_00458](#) or [SWS_CanSM_00462](#) has returned `E_OK.`](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.23 Trigger: `T_CHECK_WFLAG_INDICATED`

[SWS_CanSM_00460] 「The callback function `CanSM_CheckTransceiverWakeFlagIndication` (ref. to [SWS_CanSM_00416](#)) shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the CAN network with `T_CHECK_WFLAG_INDICATED`, if the function parameter `Transceiver` of `CanSM_CheckTransceiverWakeFlagIndication` matches to the configured CAN Transceiver (ref. to [ECUC_CanSM_00137](#)) of the CAN network.](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.24 Trigger: `T_CHECK_WFLAG_TIMEOUT`

[SWS_CanSM_00461] 「After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for the callback function `CanSM_CheckTransceiverWakeFlagIndication` (ref. to [SWS_CanSM_00460](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the respective network with `T_CHECK_WFLAG_TIMEOUT.`](SRS_Can_01142, SRS_Can_01145)

7.2.20.3.25 State operation to do in: `S_CHECK_WFLAG_IN_NOT_CC_SLEEP`

[SWS_CanSM_00462] 「As long the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) is in the state `S_CHECK_WFLAG_IN_NOT_CC_SLEEP`, the CanSM module operate the do action

DO_CHECK_WFLAG and therefore repeat the API request CanIf_CheckTrcvWakeFlag (ref. to chapter 8.5.1) and use the configured CAN Transceiver of the related Network (ref. to [ECUC CanSM 00137](#)) as Transceiver parameter. (SRS_Can_01142, SRS_Can_01145)

7.2.20.4 Sub state machine: CANSM_BSM_DeinitPnNotSupported

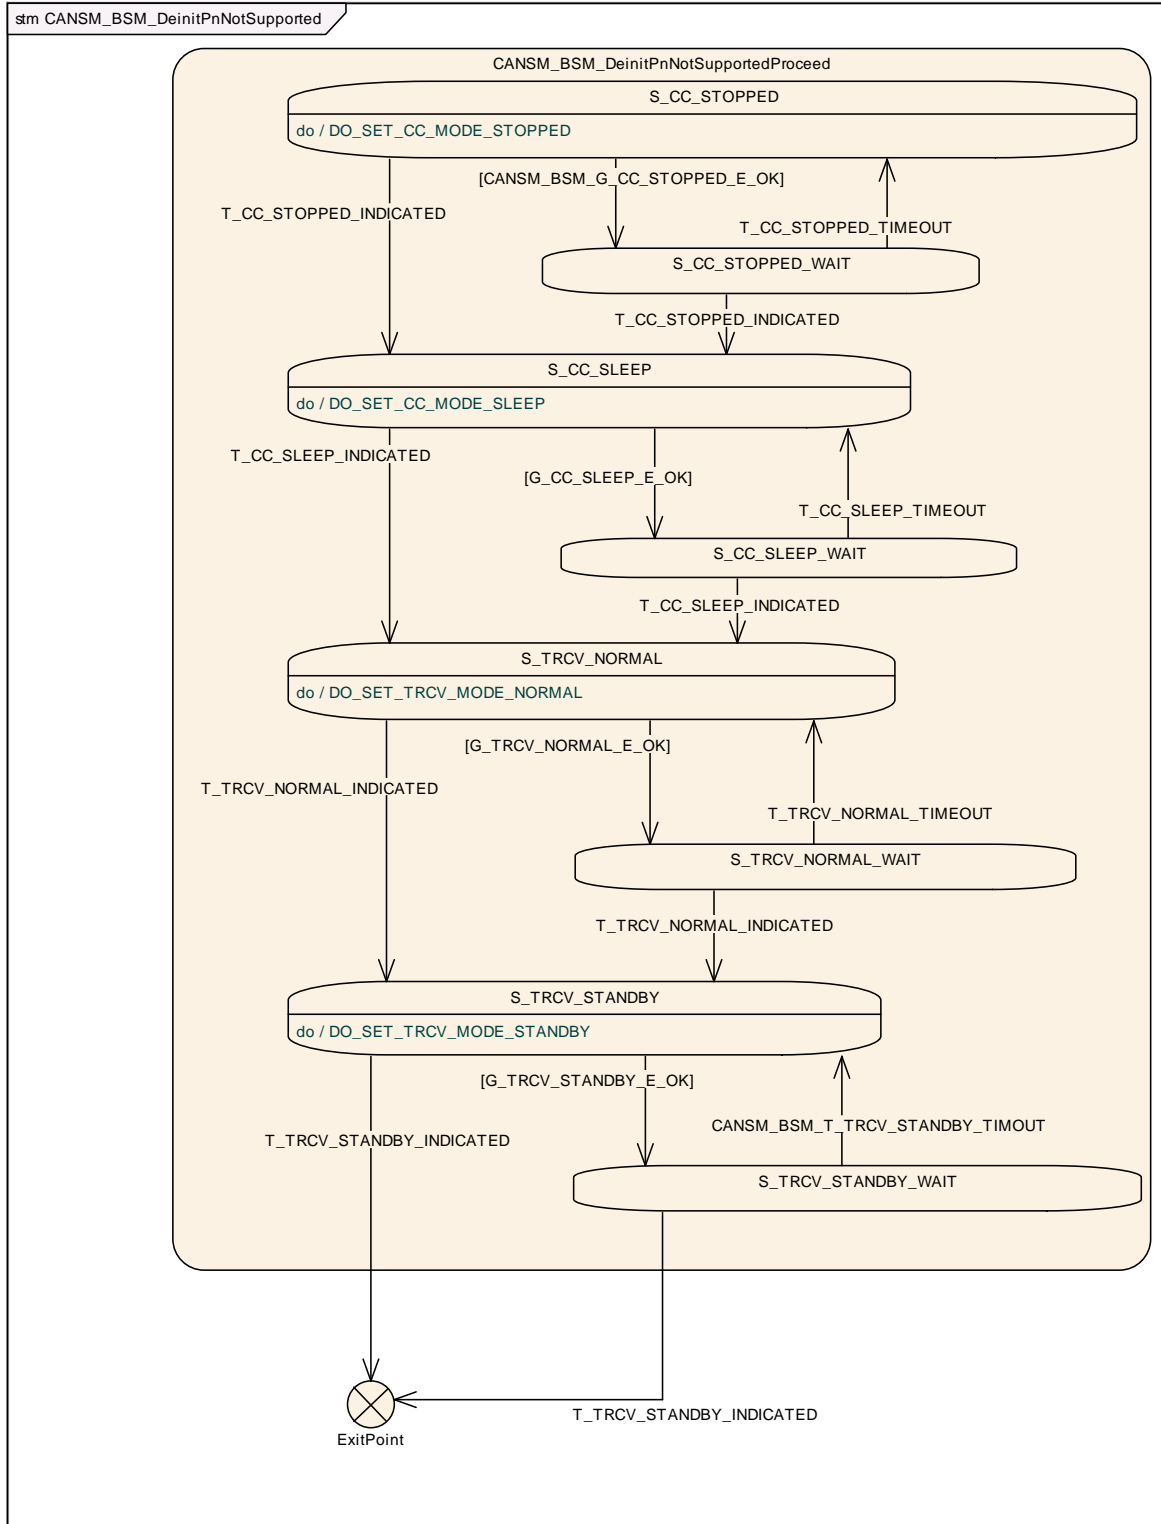


Figure 7-5: CANSM_BSM_DeinitPnNotSupported, sub state machine of CANSM_BSM_S_PRE_NOCOM

7.2.20.4.1 State operation to do in: S_CC_STOPPED

[SWS_CanSM_00464] 「As long the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) is in the state `S_CC_STOPPED`, the CanSM module shall operate the do action `DO_SET_CC_MODE_STOPPED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STOPPED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.2 Guarding condition: CANSM_BSM_G_CC_STOPPED_OK

[SWS_CanSM_00465] 「The guarding condition `CANSM_BSM_G_CC_STOPPED_OK` of the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) shall be passed, if all API calls of [SWS_CanSM_00464](#) have returned `E_OK`.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.3 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00466] 「If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00464](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network with `T_CC_STOPPED_INDICATED`.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.4 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00467] 「After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00466](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the respective network with `T_CC_STOPPED_TIMEOUT`.」(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.5 State operation to do in: S_CC_SLEEP

[SWS_CanSM_00468] 「As long the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) is in the state `S_CC_SLEEP`, the CanSM module shall operate the do action `DO_SET_CC_MODE_SLEEP` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal

to `CAN_CS_SLEEP`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.)(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.6 Guarding condition: `G_CC_SLEEP_E_OK`

[SWS_CanSM_00469] [The guarding condition `G_CC_SLEEP_E_OK` of the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) shall be passed, if all API calls of [SWS_CanSM_00468](#) have returned `E_OK`.)(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.7 Trigger: `T_CC_SLEEP_INDICATED`

[SWS_CanSM_00470] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to set the CAN controllers of the CAN network to sleep mode (ref. to [SWS_CanSM_00468](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network with `T_CC_SLEEP_INDICATED`.)(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.8 Trigger: `T_CC_SLEEP_TIMEOUT`

[SWS_CanSM_00471] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller sleep mode indications (ref. to [SWS_CanSM_00470](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the respective network with `T_CC_SLEEP_TIMEOUT`.)(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.9 State operation to do in: `S_TRCV_NORMAL`

[SWS_CanSM_00472] [If for the CAN network a CAN Transceiver is configured (ref. to [ECUC_CanSM_00137](#)), then as long the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) is in the state `S_TRCV_NORMAL`, the CanSM module shall operate the do action `DO_SET_TRCV_MODE_NORMAL` and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request `CanIf_SetTrcvMode` (ref. to chapter 8.5.1) with `TransceiverMode` equal to `CANTRCV_TRCVMODE_NORMAL`.)(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.10 Guarding condition: `G_TRCV_NORMAL_E_OK`

[SWS_CanSM_00473] [The guarding condition `G_TRCV_NORMAL_E_OK` of the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) shall be passed, if the API call of [SWS_CanSM_00472](#) has returned `E_OK`.)(SRS_Can_01142, SRS_Can_01145)

7.2.20.4.11 Trigger: T_TRCV_NORMAL_INDICATED

[SWS_CanSM_00474] If CanSM module has got the CANTRCV_TRCVMODE_NORMAL mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00472](#)), this shall trigger the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) of the CAN network with T_TRCV_NORMAL_INDICATED. (SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00556] If no CAN Transceiver is configured for the CAN network, then this shall trigger the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) of the CAN network in the state S_TRCV_NORMAL with T_TRCV_NORMAL_INDICATED. (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.12 Trigger: T_TRCV_NORMAL_TIMEOUT

[SWS_CanSM_00475] After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver normal indication (ref. to [SWS_CanSM_00474](#)), this condition shall trigger the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) of the respective network with T_TRCV_NORMAL_TIMEOUT. (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.13 State operation to do in: S_TRCV_STANDBY

[SWS_CanSM_00476] If for the CAN network a CAN Transceiver is configured (ref. to [ECUC_CanSM_00137](#)), then as long the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) is in the state S_TRCV_STANDBY, the CanSM module shall operate the do action DO_SET_TRCV_MODE_STANDBY and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request CanIf_SetTrcvMode (ref. to chapter 8.5.1) with TransceiverMode equal to CANTRCV_TRCVMODE_STANDBY. (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.14 Guarding condition: G_TRCV_STANDBY_E_OK

[SWS_CanSM_00477] The guarding condition G_TRCV_STANDBY_E_OK of the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) shall be passed, if the API call of [SWS_CanSM_00476](#) has returned E_OK. (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.15 Trigger: T_TRCV_STANDBY_INDICATED

[SWS_CanSM_00478] If CanSM module has got the CANTRCV_TRCVMODE_STANDBY mode indication (ref. to [SWS_CanSM_00399](#)) for

the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00476](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network with `T_TRCV_STANDBY_INDICATED.`(`SRS_Can_01142`, `SRS_Can_01145`)

[SWS_CanSM_00557] [If no CAN Transceiver is configured for the CAN network (ref. to [ECUC_CanSM_00137](#)), then this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network in the state `S_TRCV_STANDBY` with `T_TRCV_STANDBY_INDICATED.`(`SRS_Can_01142`, `SRS_Can_01145`)

7.2.20.4.16 Trigger: `CANSM_BSM_T_TRCV_STANDBY_TIMEOUT`

[SWS_CanSM_00479] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver standby indication (ref. to [SWS_CanSM_00478](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the respective network with `CANSM_BSM_T_TRCV_STANDBY_TIMEOUT.`(`SRS_Can_01142`, `SRS_Can_01145`)

7.2.21 Sub state machine: CANSM_BSM_S_SILENTCOM_BOR

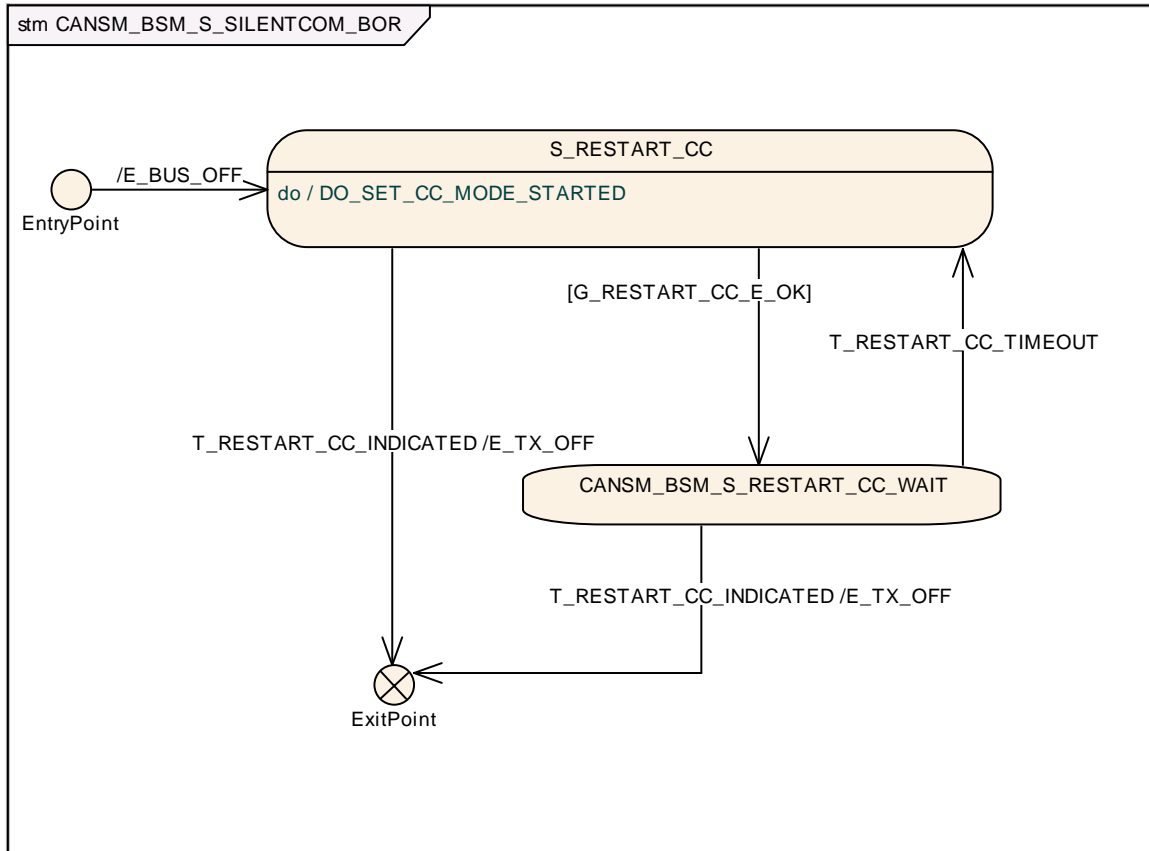


Figure 7-6: CANSM_BSM_S_SILENTCOM_BOR, sub state machine of CANSM_BSM

7.2.21.1 Effect: E_BUS_OFF

[SWS_CanSM_00605] The effect E_BUS_OFF of the sub state machine CANSM_BSM_S_FULLCOM CANSM_BSM_S_SILENTCOM_BOR (ref. to Figure 7-6) shall invoke Dem_SetEventStatus (ref. to chapter 8.5.1) with the parameters EventId := CANSM_E_BUS_OFF (ref. to ECUC_CanSM_00070) and EventStatus := DEM_EVENT_STATUS_PRE_FAILED. (SRS_BSW_00422)

7.2.21.2 State operation: S_RESTART_CC

[SWS_CanSM_00604] As long the sub state machine CANSM_BSM_S_SILENTCOM_BOR (ref. to Figure 7-6) is in the state S_RESTART_CC, the CanSM module shall operate the do action DO_SET_CC_MODE_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to ECUC_CanSM_00141) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STARTED, if the current CAN controller mode (ref. to SWS_CanSM_00638) is different. (SRS_Can_01142, SRS_Can_01145, SRS_Can_01144, SRS_Can_01146)

7.2.21.3 G_RESTART_CC_E_OK

[SWS_CanSM_00603] If the guarding condition `G_RESTART_CC_OK` of the sub state machine `CANSM_BSM_S_SILENTCOM_BOR` (ref. to Figure 7-6) shall be passed, if all API calls of [SWS_CanSM_00604](#) have returned `E_OK`. (SRS_Can_01142, SRS_Can_01145, SRS_Can_01144, SRS_Can_01146)

7.2.21.4 Trigger: T_RESTART_CC_INDICATED

[SWS_CanSM_00600] If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00604](#)), this shall trigger the sub state machine `CANSM_BSM_S_SILENTCOM_BOR` (ref. to Figure 7-6) of the CAN network with `T_RESTART_CC_INDICATED`. (SRS_Can_01142, SRS_Can_01145, SRS_Can_01144, SRS_Can_01146)

7.2.21.5 T_RESTART_CC_TIMEOUT

[SWS_CanSM_00602] After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller started mode indications (ref. to [SWS_CanSM_00600](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_SILENTCOM_BOR` (ref. to Figure 7-6) of the respective network with `T_RESTART_CC_TIMEOUT`. (SRS_Can_01142, SRS_Can_01145, SRS_Can_01144, SRS_Can_01146)

7.2.21.6 Effect: E_TX_OFF

The effect `E_TX_OFF` shall do nothing (default PDU mode after restart of CAN controller is already TX OFF, ref. to CanIf SWS).

7.2.22 Sub state machine: CANSM_BSM_S_PRE_FULLCOM

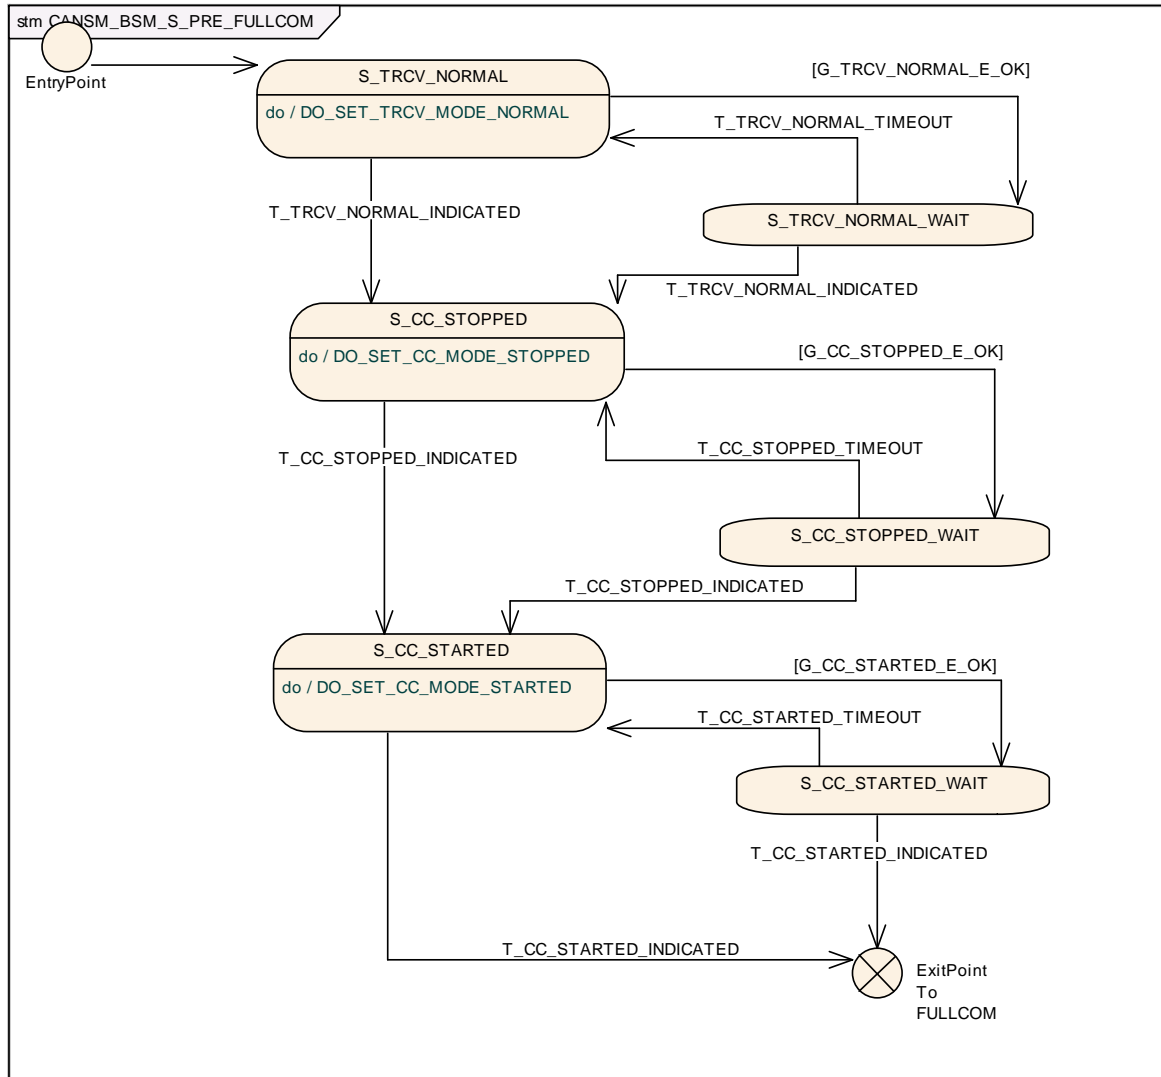


Figure 7-7: CANSM_BSM_S_PRE_FULLCOM, sub state machine of CANSM_BSM

7.2.22.1 State operation to do in: S_TRCV_NORMAL

[SWS_CanSM_00483] If for the CAN network a CAN Transceiver is configured (ref. to [ECUC_CanSM_00137](#)), then as long the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) is in the state S_TRCV_NORMAL, the CanSM module shall operate the do action DO_SET_TRCV_MODE_NORMAL and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request CanIf_SetTrcvMode (ref. to chapter 8.5.1) with TransceiverMode equal to CANTRCV_TRCVMODE_NORMAL. (SRS_Can_01145, SRS_Can_01142)

7.2.22.2 Guarding condition: G_TRCV_NORMAL_E_OK

[SWS_CanSM_00484] 「The guarding condition G_TRCV_NORMAL_E_OK of the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) shall be passed, if the API call of [SWS_CanSM_00483](#) has returned E_OK.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.3 Trigger: T_TRCV_NORMAL_INDICATED

[SWS_CanSM_00485] 「If CanSM module has got the CANTRCV_TRCVMODE_NORMAL mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00483](#)), this shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the CAN network with T_TRCV_NORMAL_INDICATED.」(SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00558] 「If no CAN Transceiver is configured for the CAN network (ref. to [ECUC_CanSM_00137](#)), then this shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the CAN network in the state S_TRCV_NORMAL with T_TRCV_NORMAL_INDICATED.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.4 Trigger: T_TRCV_NORMAL_TIMEOUT

[SWS_CanSM_00486] 「After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver normal indication (ref. to [SWS_CanSM_00485](#)), this condition shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the respective network with T_TRCV_NORMAL_TIMEOUT.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.5 State operation to do in: S_CC_STOPPED

[SWS_CanSM_00487] 「As long the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) is in the state S_CC_STOPPED, the CanSM module shall operate the do action DO_SET_CC_MODE_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STOPPED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.6 Guarding condition: G_CC_STOPPED_OK

[SWS_CanSM_00488] 「The guarding condition G_CC_STOPPED_OK of the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) shall be passed, if all API calls of [SWS_CanSM_00487](#) have returned E_OK.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.7 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00489] 「If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00487](#)), this shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the CAN network with T_CC_STOPPED_INDICATED.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.8 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00490] 「After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00489](#)), this condition shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the respective network with T_CC_STOPPED_TIMEOUT.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.9 State operation to do in: S_CC_STARTED

[SWS_CanSM_00491] 「As long the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) is in the state S_CC_STARTED, the CanSM module shall operate the do action DO_SET_CC_MODE_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STARTED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.10 Guarding condition: G_CC_STARTED_OK

[SWS_CanSM_00492] 「The guarding condition G_CC_STARTED_OK of the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) shall be passed, if all API calls of [SWS_CanSM_00491](#) have returned E_OK.」(SRS_Can_01145, SRS_Can_01142)

7.2.22.11 Trigger: T_CC_STARTED_INDICATED

[SWS_CanSM_00493] If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00491](#)), this shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the CAN network with T_CC_STARTED_INDICATED. (SRS_Can_01145, SRS_Can_01142)

7.2.22.12 Trigger: T_CC_STARTED_TIMEOUT

[SWS_CanSM_00494] After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for all supposed controller started mode indications (ref. to [SWS_CanSM_00493](#)), this condition shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the respective network with T_CC_STARTED_TIMEOUT. (SRS_Can_01145, SRS_Can_01142)

7.2.23 Sub state machine CANSM_BSM_S_FULLCOM

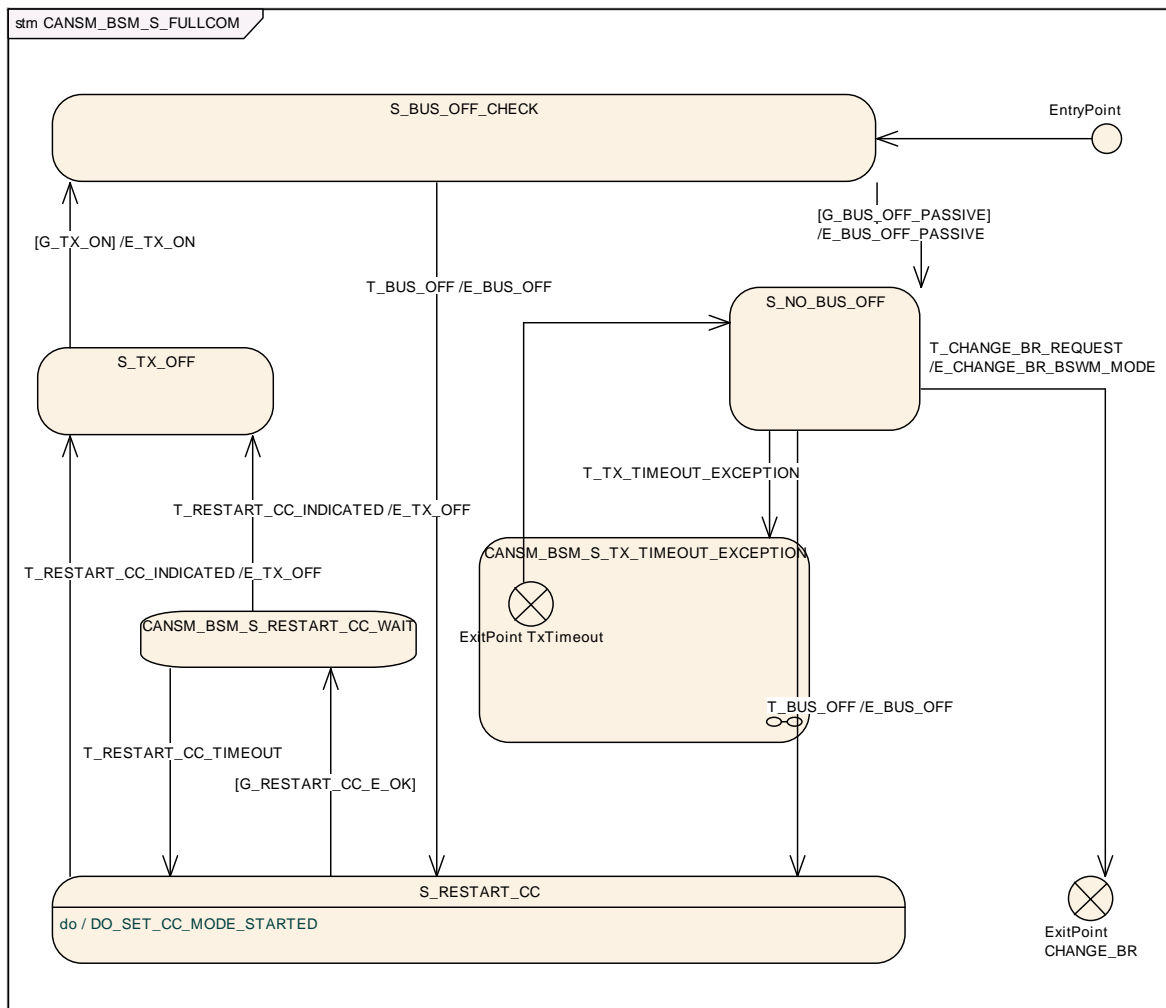


Figure 7-8: CANSM_BSM_S_FULLCOM, sub state machine of CANSM_BSM

7.2.23.1 Guarding condition: G_BUS_OFF_PASSIVE

[SWS_CanSM_00496] The guarding condition `G_BUS_OFF_PASSIVE` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed, if `CANSM_BOR_TX_CONFIRMATION_POLLING` is disabled (ref. to [ECUC_CanSM_00339](#)) and the time duration since the effect `E_TX_ON` is greater or equal the configuration parameter `CANSM_BOR_TIME_TX_ENSURED` (ref. to [ECUC_CanSM_00130](#)). (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00497] The guarding condition `G_BUS_OFF_PASSIVE` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed, if `CANSM_BOR_TX_CONFIRMATION_POLLING` is enabled (ref. to [ECUC_CanSM_00339](#)) and the API `CanIf_GetTxConfirmationState` (ref. to chapter 8.5.1) returns `CANIF_TX_RX_NOTIFICATION` for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)). (SRS_Can_01145, SRS_Can_01142)

7.2.23.2 Effect: E_BUS_OFF_PASSIVE

[SWS_CanSM_00498] The effect `E_BUS_OFF_PASSIVE` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall invoke `Dem_SetEventStatus` (ref. to chapter 8.5.1) with the parameters `EventId := CANSM_E_BUS_OFF` (ref. to [ECUC_CanSM_00070](#)) and `EventStatus := DEM_EVENT_STATUS_PASSED`. (SRS_BSW_00422)

7.2.23.3 Trigger: T_CHANGE_BR_REQUEST

[SWS_CanSM_00507] If no condition is present to deny the `CanSM_SetBaudrate` request (ref. to [SWS_CANSM_00503](#)), this shall trigger the state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) and respectively the parent state machine `CANSM_BSM` (ref. to Figure 7-1) with `T_CHANGE_BR_REQUEST` (causes either a direct baud rate change if possible via `CanIf_SetBaudrate` or the start of the required asynchronous process to do that) (SRS_Can_01145, SRS_Can_01142)

7.2.23.4 Effect: E_CHANGE_BR_BSWM_MODE

[SWS_CanSM_00528] The effect `E_CHANGE_BR_BSWM_MODE` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall call for the corresponding CAN network the API `BswM_CanSM_CurrentState` with the

parameters `Network` := `CanSMComMNetworkHandleRef` and `CurrentState`
:= `CANSM_BSWM_CHANGE_BAUDRATE.`](`SRS_Can_01145`, `SRS_Can_01142`)

7.2.23.5 Trigger: `T_BUS_OFF`

[SWS_CanSM_00500] [The callback function `CanSM_ControllerBusOff` (ref. to [SWS_CanSM_00064](#)) shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) for the CAN network with `T_BUS_OFF`, if one of its configured CAN controllers matches to the function parameter `ControllerId` of the callback function `CanSM_ControllerBusOff.`](`SRS_Can_01145`, `SRS_Can_01142`)

[SWS_CanSM_00653] [If more than one CAN controller belongs to one CAN network and for one of its controllers a bus-off is indicated with `CanSM_ControllerBusOff`, then the CanSM shall stop in context of the effect `E_BUS_OFF` the other CAN controller(s) of the CAN network, too.](`SRS_Can_01145`, `SRS_Can_01142`)

7.2.23.6 Effect: `E_BUS_OFF`

[SWS_CanSM_00508] [The effect `E_BUS_OFF` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall call at 1st place for the corresponding CAN network the API `BswM_CanSM_CurrentState` with the parameters `Network` := `CanSMComMNetworkHandleRef` and `CurrentState` := `CANSM_BSWM_BUS_OFF.`](`SRS_Can_01145`, `SRS_Can_01142`)

[SWS_CanSM_00521] [The effect `E_BUS_OFF` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall call at 2nd place for the corresponding CAN network the API `ComM_BusSM_ModeIndication` with the parameters `Channel` := `CanSMComMNetworkHandleRef` (ref. to [ECUC_CanSM_00161](#)) and `ComMode` := `COMM_SILENT_COMMUNICATION.`](`SRS_Can_01145`, `SRS_Can_01142`)

[SWS_CanSM_00522] [The effect `E_BUS_OFF` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall invoke `Dem_SetEventStatus` (ref. to chapter 8.5.1) with the parameters `EventId` := `CANSM_E_BUS_OFF` (ref. to [ECUC_CanSM_00070](#)) and `EventStatus` := `DEM_EVENT_STATUS_PRE_FAILED.`](`SRS_BSW_00422`)

7.2.23.7 State operation to do in: `S_RESTART_CC`

[SWS_CanSM_00509] [As long the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) is in the state `S_RESTART_CC`, the CanSM module shall operate the do action `DO_SET_CC_MODE_STARTED` and therefore repeat for all configured

CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STARTED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different. (SRS_Can_01145, SRS_Can_01142)

7.2.23.8 Guarding condition: G_RESTART_CC_OK

[SWS_CanSM_00510] The guarding condition `G_RESTART_CC_OK` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed, if all API calls of [SWS_CanSM_00509](#) have returned `E_OK`. (SRS_Can_01145, SRS_Can_01142)

7.2.23.9 Trigger: T_RESTART_CC_INDICATED

[SWS_CanSM_00511] If `CanSM` module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00509](#)), this shall trigger the sub state `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) of the CAN network with `T_RESTART_CC_INDICATED`. (SRS_Can_01145, SRS_Can_01142)

7.2.23.10 Trigger: T_RESTART_CC_TIMEOUT

[SWS_CanSM_00512] After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller started mode indications (ref. to [SWS_CanSM_00511](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) of the respective network with `T_RESTART_CC_TIMEOUT`. (SRS_Can_01145, SRS_Can_01142)

7.2.23.11 Effect: E_TX_OFF

The effect `E_TX_OFF` shall do nothing.

7.2.23.12 Guarding condition: G_TX_ON

[SWS_CanSM_00514] If `CanSMEnableBusOffDelay` is `FALSE`, then guarding condition `G_TX_ON` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed after a time duration of `CanSMBorTimeL1` (ref. to [ECUC_CanSM_00128](#)) related to the last `T_BUS_OFF`, if the count of bus-off recovery retries with `E_BUS_OFF` without passing the guarding condition `G_BUS_OFF_PASSIVE` is lower than `CanSMBorCounterL1ToL2` (ref. to [ECUC_CanSM_00131](#)). (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00515] If `CanSMEnableBusOffDelay` is `FALSE`, then the guarding condition `G_TX_ON` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed after a time duration of `CanSMBorTimeL2` (ref. to [ECUC_CanSM_00129](#)) related to the last `T_BUS_OFF`, if the count of bus-off recovery retries with `E_BUS_OFF` without passing the guarding condition `G_BUS_OFF_PASSIVE` is greater than or equal to `CanSMBorCounterL1ToL2` (ref. to [ECUC_CanSM_00131](#)). (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00636] If `CanSMEnableBusOffDelay` is `TRUE`, then the guarding conditions of [SWS_CANSMS_00514](#) and [SWS_CANSMS_00515](#) shall be passed after the specified time duration in each case plus the additional random delay value, which shall be requested after the bus-off event with the configured call back function `<User_GetBusOffDelay>`. (SRS_Can_01145, SRS_Can_01142)

7.2.23.13 Effect: `E_TX_ON`

[SWS_CanSM_00516] If `ECU passive` is `FALSE` (ref. to [SWS_CanSM_00646](#)), then the effect `E_TX_ON` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall call at 1st place for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API function `CanIf_SetPduMode` (ref. to chapter 8.5.1) with the parameters `ControllerId := CanSMControllerId` (ref. to [ECUC_CanSM_00141](#)) and `PduModeRequest := CANIF_ONLINE`. (SRS_Can_01158)

[SWS_CanSM_00648] If `ECU passive` is `TRUE` (ref. to [SWS_CanSM_00646](#)), then the effect `E_TX_ON` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall call at 1st place for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API function `CanIf_SetPduMode` (ref. to chapter 8.5.1) with the parameters `ControllerId := CanSMControllerId` (ref. to [ECUC_CanSM_00141](#)) and `PduModeRequest := CANIF_TX_OFFLINE_ACTIVE`. (SRS_Can_01158)

[SWS_CanSM_00517] The effect `E_TX_ON` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall call at 2nd place for the corresponding CAN network the API `BswM_CanSM_CurrentState` with the parameters `Network := CanSMComMNetworkHandleRef` and `CurrentState := CANSM_BSWM_FULL_COMMUNICATION`. (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00518] The effect `E_TX_ON` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall call at 3rd place the API `ComM_BusSM_ModeIndication` with the parameters `Channel := CanSMComMNetworkHandleRef` (ref. to [ECUC_CanSM_00161](#)) and `ComMode := COMM_FULL_COMMUNICATION`. (SRS_Can_01145, SRS_Can_01142)

7.2.23.14 Trigger: T_TX_TIMEOUT_EXCEPTION

[SWS_CanSM_00584] 「The callback function `CanSM_TxTimeoutException` (ref. to [SWS_CANSM_00410](#)) shall trigger the sub state machine

`CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) with `T_TX_TIMEOUT_EXCEPTION`.」
(SRS_Can_01145, SRS_Can_01142)

7.2.23.15 Notes

In the state `S_NO_BUS_OFF` no state operation is required for the CanSM module.

7.2.23.16 Sub state machine: CANSM_BSM_S_TX_TIMEOUT_EXCEPTION

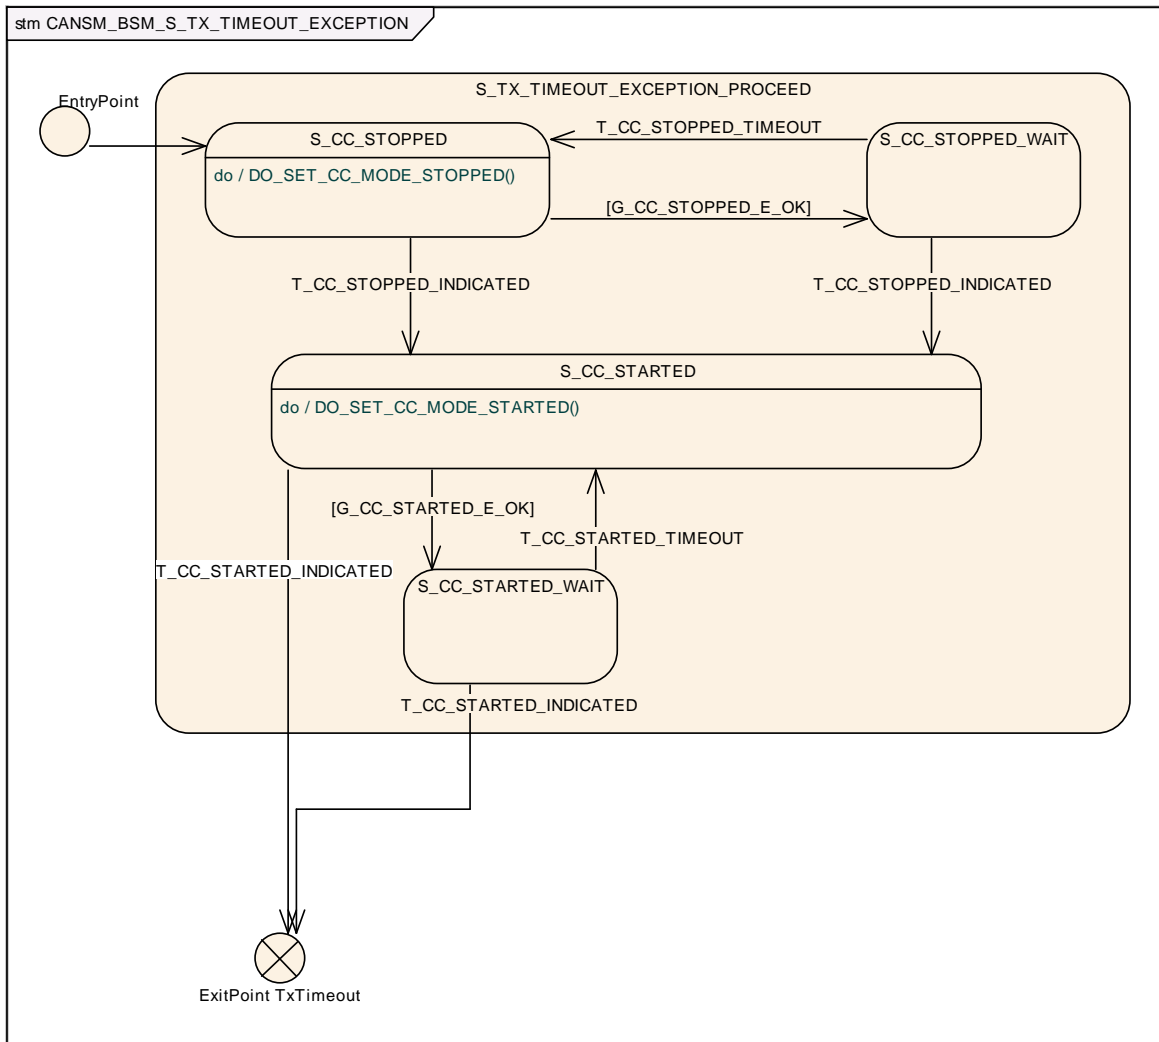


Figure 7-9: CANSM_BSM_S_TX_TIMEOUT_EXCEPTION, sub state machine of CANSM_BSM_S_FULLCOM

7.2.23.16.1 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00576]「After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00579](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_TX_TIMEOUT_EXCEPTION` (ref. to Figure 7-9) of the respective network with `T_CC_STOPPED_TIMEOUT`.」(SRS_Can_01145, SRS_Can_01142)

7.2.23.16.2 Guarding condition: G_CC_STOPPED_E_OK

[SWS_CanSM_00577]「The guarding condition `G_CC_STOPPED_E_OK` of the sub state machine `CANSM_BSM_S_TX_TIMEOUT_EXCEPTION` (ref. to Figure 7-9) shall be passed, if all API calls of [SWS_CanSM_00578](#) have returned `E_OK`.」(SRS_Can_01145, SRS_Can_01142)

7.2.23.16.3 State operation: DO_SET_CC_MODE_STOPPED()

[SWS_CanSM_00578]「As long the sub state machine `CANSM_BSM_S_TX_TIMEOUT_EXCEPTION` (ref. to Figure 7-9) is in the state `S_CC_STOPPED`, the CanSM module shall operate the do action `DO_SET_CC_MODE_STOPPED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STOPPED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.」(SRS_Can_01145, SRS_Can_01142)

7.2.23.16.4 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00579]「If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00524](#)), this shall trigger the sub state machine `CANSM_BSM_S_TX_TIMEOUT_EXCEPTION` (ref. to Figure 7-9) of the CAN network with `T_CC_STOPPED_INDICATED`.」(SRS_Can_01145, SRS_Can_01142)

7.2.23.16.5 Trigger: T_CC_STARTED_INDICATED

[SWS_CanSM_00580]「If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00582](#)), this shall trigger the sub state machine `CANSM_BSM_S_TX_TIMEOUT_EXCEPTION` (ref. to Figure 7-9) of the CAN network with `T_CC_STARTED_INDICATED`.」(SRS_Can_01145, SRS_Can_01142)

7.2.23.16.6 Guarding condition: G_CC_STARTED_E_OK

[SWS_CanSM_00581]「 The guarding condition G_CC_STARTED_E_OK of the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) shall be passed, if all API calls of [SWS_CanSM_00582](#) have returned E_OK.」(SRS_Can_01145, SRS_Can_01142)

7.2.23.16.7 State operation: DO_SET_CC_MODE_STARTED

[SWS_CanSM_00582]「 As long the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) is in the state S_CC_STARTED, the CanSM module shall operate the do action DO_SET_CC_MODE_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STARTED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.」(SRS_Can_01145, SRS_Can_01142)

7.2.23.16.8 ExitPoint: TxTimeout

[SWS_CanSM_00655]「 If the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) is triggered with T_CC_STARTED_INDICATED, the API CanIf_SetPduMode() shall be called with CANIF_ONLINE」()

7.2.24 Sub state machine: CANSM_BSM_S_CHANGE_BAUDRATE

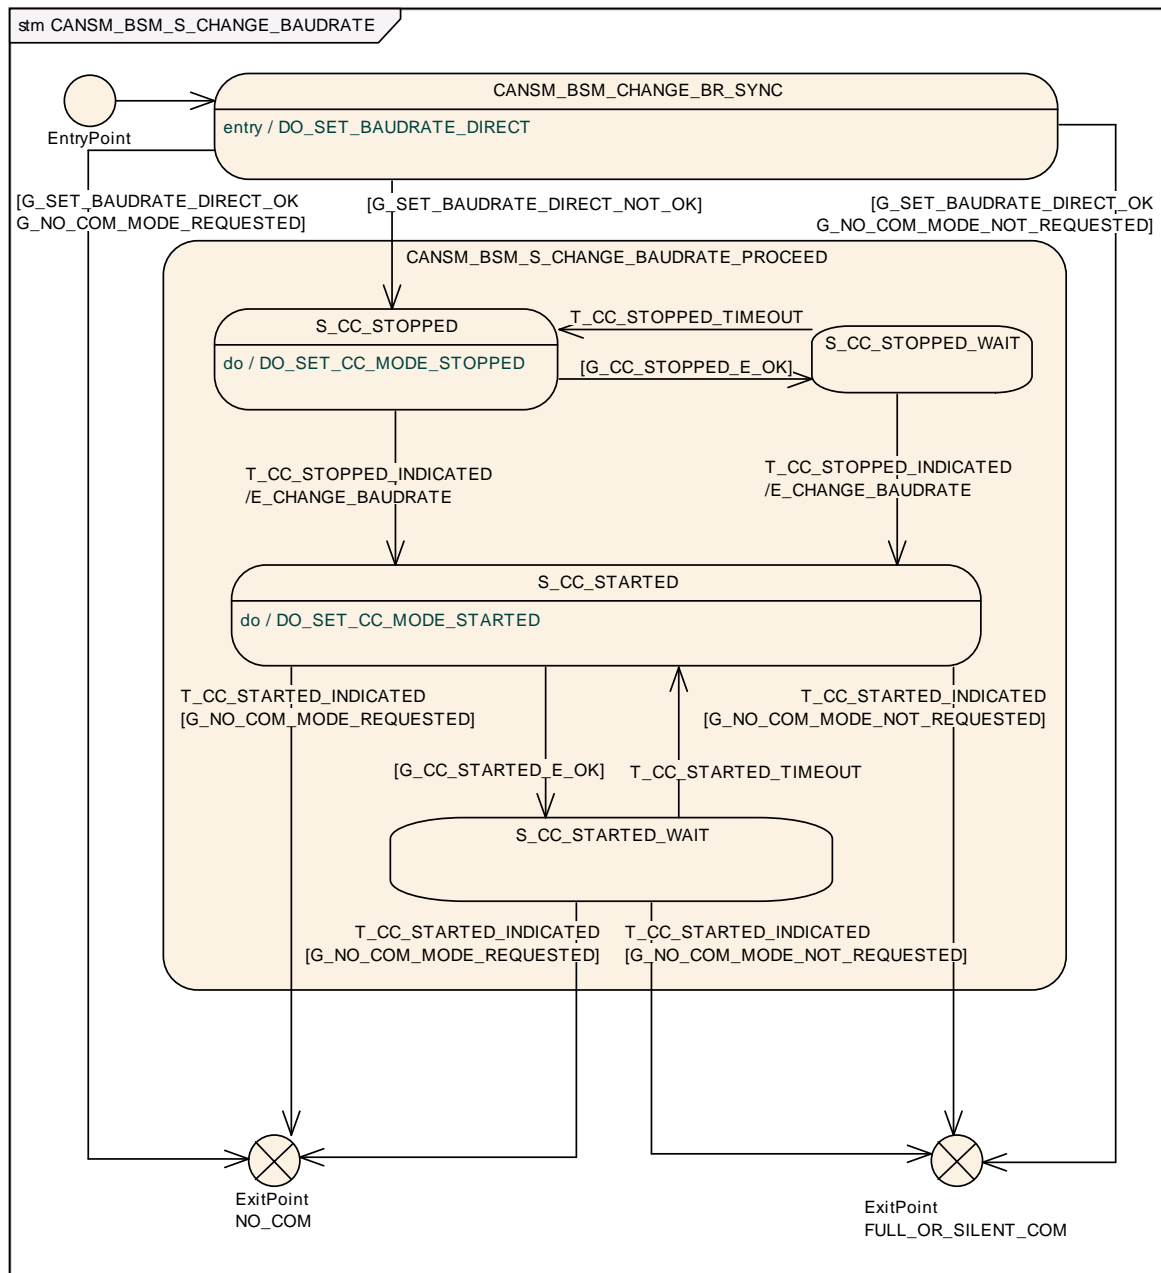


Figure 7-10: CANSM_BSM_S_CHANGE_BAUDRATE, sub state machine of CANSM_BSM

7.2.24.1 State operation to do on entry: DO_SET_BAUDRATE_DIRECT

[SWS_CanSM_00639] The state operation DO_SET_BAUDRATE_DIRECT (ref. to Figure 7-10) shall call the API request CanIf_SetBaudrate (ref. to chapter 8.5.2) for all configured CAN controllers of the CAN network (ref. to ECUC_CanSM_00141 with the respective ControllerId parameter. It shall use as BaudRateConfigID parameter the respective function parameter BaudRateConfigID from the call CanSM_SetBaudrate ().) (SRS_Can_01145, SRS_Can_01142)

7.2.24.2 Guarding condition: G_SET_BAUDRATE_DIRECT_OK

[SWS_CanSM_00641] If all `CanIf_SetBaudrate` (ref. to [SWS_CanSM_00639](#)) requests returned with `E_OK`, the guarding condition `G_SET_BAUDRATE_DIRECT_OK` shall be passed. (SRS_Can_01145, SRS_Can_01142)

7.2.24.3 Guarding conditions: G_SET_BAUDRATE_DIRECT_NOT_OK

[SWS_CanSM_00642] If any of the `CanIf_SetBaudrate` (ref. to [SWS_CanSM_00639](#)) requests did return with `E_NOT_OK`, the guarding condition `G_SET_BAUDRATE_NOT_OK` of the state `CANSM_BSM_CHANGE_BR_SYNC` (ref. to Figure 7-10) shall be passed. (SRS_Can_01145, SRS_Can_01142)

7.2.24.4 State operation to do in: S_CC_STOPPED

[SWS_CanSM_00524] As long the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) is in the state `S_CC_STOPPED`, the `CanSM` module shall operate the do action `DO_SET_CC_MODE_STOPPED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STOPPED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different. (SRS_Can_01145, SRS_Can_01142)

7.2.24.5 Guarding condition: G_CC_STOPPED_OK

[SWS_CanSM_00525] The guarding condition `G_CC_STOPPED_OK` of the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall be passed, if all API calls of [SWS_CanSM_00524](#) have returned `E_OK`. (SRS_Can_01145, SRS_Can_01142)

7.2.24.6 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00526] If `CanSM` module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00524](#)), this shall trigger the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) of the CAN network with `T_CC_STOPPED_INDICATED`. (SRS_Can_01145, SRS_Can_01142)

7.2.24.7 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00527] 「After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00526](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) of the respective network with `T_CC_STOPPED_TIMEOUT`.」(SRS_Can_01145, SRS_Can_01142)

7.2.24.8 Effect: E_CHANGE_BAUDRATE

[SWS_CanSM_00529] 「The effect `E_CHANGE_BAUDRATE` of the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall call at 1st place for the corresponding CAN network the API `ComM_BusSM_ModeIndication` with the parameters `Channel := CanSMComMNetworkHandleRef` (ref. to [ECUC_CanSM_00161](#)) and `ComMode := COMM_NO_COMMUNICATION`.」(SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00531] 「The effect `E_CHANGE_BAUDRATE` of the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall call at 2nd place for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetBaudrate` (ref. to chapter 8.5.2) with the respective `ControllerId` parameter and shall use as `BaudRateConfigID` parameter the remembered `BaudRateConfigID` from the call `CanSM_SetBaudrate()`」(SRS_Can_01145, SRS_Can_01142)

7.2.24.9 State operation to do in: S_CC_STARTED

[SWS_CanSM_00532] 「As long the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) is in the state `S_CC_STARTED`, the `CanSM` module shall operate the do action `DO_SET_CC_MODE_STARTED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STARTED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.」(SRS_Can_01145, SRS_Can_01142)

7.2.24.10 Guarding condition: G_CC_STARTED_OK

[SWS_CanSM_00533] 「The guarding condition `G_CC_STARTED_OK` of the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall be passed, if all API calls of [SWS_CanSM_00532](#) have returned `E_OK`.」(SRS_Can_01145, SRS_Can_01142)

7.2.24.11 Trigger: T_CC_STARTED_INDICATED

[SWS_CanSM_00534] If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00532](#)), this shall trigger the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) of the CAN network with `T_CC_STARTED_INDICATED`. (SRS_Can_01145, SRS_Can_01142)

7.2.24.12 Trigger: T_CC_STARTED_TIMEOUT

[SWS_CanSM_00535] After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller started mode indications (ref. to [SWS_CanSM_00534](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) of the respective network with `T_CC_STARTED_TIMEOUT`. (SRS_Can_01145, SRS_Can_01142)

7.2.24.13 Guarding condition: G_NO_COM_MODE_REQUESTED

[SWS_CanSM_00542] The sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall pass the guarding condition `G_NO_COM_MODE_REQUESTED`, if the latest accepted communication mode request with `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) for the respective network handle of the state machine has been with the parameter `ComM_Mode` equal to `COMM_NO_COMMUNICATION`. (SRS_Can_01145, SRS_Can_01142)

7.2.24.14 Guarding condition: G_NO_COM_MODE_NOT_REQUESTED

[SWS_CanSM_00543] The sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall pass the guarding condition `G_NO_COM_MODE_NOT_REQUESTED`, if the latest accepted communication mode request with `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) for the respective network handle of the state machine has been with the parameter `ComM_Mode` equal to `COMM_SILENT_COMMUNICATION` or `COMM_FULL_COMMUNICATION`. (SRS_Can_01145, SRS_Can_01142)

7.3 Error classification

Section 7.x "Error Handling" of the document "General Specification of Basic Software Modules" describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types, which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

7.3.1 Development Errors

[SWS CanSM_00654]

<i>Type of error</i>	<i>Related error code</i>	<i>Error value</i>
API service used without module initialization	CANSM_E_UNINIT	0x01
API service called with wrong pointer	CANSM_E_PARAM_POINTER	0x02
API service called with wrong parameter	CANSM_E_INVALID_NETWORK_HANDLE	0x03
API service called with wrong parameter	CANSM_E_PARAM_CONTROLLER	0x04
API service called with wrong parameter	CANSM_E_PARAM_TRANSCEIVER	0x05
Delnit API service called when not all CAN networks are in state CANSM_NO_COMMUNICATION	CANSM_E_NOT_IN_NO_COM	0x0B

](SRS_BSW_00337)

7.3.2 Runtime Errors

[SWS CanSM_00664]

<i>Type of error</i>	<i>Related error code</i>	<i>Error value</i>
Mode request for a network failed more often than allowed by configuration	CANSM_E_MODE_REQUEST_TIMEOUT	0x0A

](SRS_BSW_00466)

7.3.3 Transient Faults

There are no transient faults.

7.3.4 Production Errors

There are no production errors.

7.3.5 Extended Production Errors

7.3.5.1 CANSM_E_BUS_OFF

[SWS_CanSM_00666]⌈

Error Name:	CANSM_E_BUS_OFF (ref. to ECUC CanSM 00070)	
Short Description:	Bus-off detection	
Long Description:	The bus-off recovery state machine of a CAN network has detected a certain amount of sequential bus-offs without successful recovery	
Recommended DTC:	Assigned by DEM	
Detection Criteria:	Fail	PRE_FAILED when CanSM_ControllerBusOff is called (T_BUS_OFF/E_BUS_OFF), debouncing to be defined by OEM in DEM
	Pass	After successful transmission of a CAN frame (G_BUS_OFF_PASSIVE/E_BUS_OFF_PASSIVE)
Secondary Parameters:	None	
Time Required:	PRE_FAILED immediately (in error interrupt context), FAILED depending on debounce configuration of DEM	
Monitor Frequency	Continuous	
MIL illumination:	Assigned by DEM	

⌋()

7.4 ECU online active / passive mode

[SWS_CanSM_00646]⌈ The CanSM state manager shall store the state of the requested ECU passive mode (ref. to chapter 8: [SWS_CanSM_00644](#)).⌋
 (SRS_Can_01158)

[SWS_CanSM_00649]⌈ When CanSM_SetEcuPassive is called with CanSM_Passive=true then the CanSM shall change all PDU modes of the configured CAN controllers, which are CANIF_ONLINE at the moment to CANIF_TX_OFFLINE_ACTIVE by calling the API CanIf_SetPduMode (ref. to chapter 8.5.1) with the parameters ControllerId := CanSMControllerId (ref. to [ECUC CanSM 00141](#)) and PduModeRequest := CANIF_TX_OFFLINE_ACTIVE.⌋(SRS_Can_01158)

[SWS_CanSM_00650]⌈ If CanSM_SetEcuPassive called with CanSM_Passive=false; (ref. to chapter 8: [SWS_CanSM_00644](#)), then the CanSM shall change all PDU modes of the configured CAN controllers, which are CANIF_TX_OFFLINE_ACTIVE

at the moment to `CANIF_ONLINE` by calling the API `CanIf_SetPduMode` (ref. to chapter 8.5.1) with the parameters `ControllerId := CanSMControllerId` (ref. to [ECUC CanSM 00141](#)) and `PduModeRequest := CANIF_ONLINE.` (SRS_Can_01158)

[SWS_CanSM_00656] If the CanSM needs informations about the actual PduMode, the CanSM shall call the API `CanIf_GetPduMode` to get the current Pdu Mode of the `CanIf.` (SRS_Can_01158)

7.5 Non-functional design rules

The CanSM shall cover the software module design requirements of the SRS General [3].

8 API specification

8.1 Imported types

In this chapter all types included from the following modules are listed:

[SWS_CanSM_00243]

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
Can	Can_GeneralTypes.h	Can_ControllerStateType
CanIf	CanIf.h	CanIf_NotifStatusType
	CanIf.h	CanIf_PduModeType
CanTrcv	Can_GeneralTypes.h	CanTrcv_TrcvModeType
ComM	Rte_ComM_Type.h	ComM_ModeType
ComStack_Types	ComStack_Types.h	NetworkHandleType
Dem	Rte_Dem_Type.h	Dem_EventIdType
	Rte_Dem_Type.h	Dem_EventStatusType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

()

8.2 Type definitions

The following tables contain the type definitions of the CanSM module.

8.2.1 CanSM_ConfigType

[SWS_CanSM_00597]

Name	CanSM_ConfigType	
Kind	Structure	
Elements	--	
	Type	--
	Comment	--
Description	This type defines a data structure for the post build parameters of the CanSM. At initialization the CanSM gets a pointer to a structure of this type to get access to its configuration data, which is necessary for initialization.	
Available	CanSM.h	

<i>via</i>	
------------	--

](SRS_BSW_00400, SRS_BSW_00438)

8.2.2 CanSM_BswMCurrentStateType

[SWS_CanSM_00598]

Name	CanSM_BswMCurrentStateType		
Kind	Enumeration		
Range	CANSM_BSWM_NO_COMMUNICATION	--	--
	CANSM_BSWM_SILENT_COMMUNICATION	--	--
	CANSM_BSWM_FULL_COMMUNICATION	--	--
	CANSM_BSWM_BUS_OFF	--	--
	CANSM_BSWM_CHANGE_BAUDRATE	--	--
Description	Can specific communication modes / states notified to the BswM module		
Available via	CanSM.h		

](SRS_ModeMgm_09251)

8.3 Function definitions

The following sections specify the provided API functions of the CanSM module.

8.3.1 CanSM_Init

[SWS_CanSM_00023]

Service Name	CanSM_Init	
Syntax	<pre>void CanSM_Init (const CanSM_ConfigType* ConfigPtr)</pre>	
Service ID [hex]	0x00	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	ConfigPtr	Pointer to init structure for the post build parameters of the CanSM
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This service initializes the CanSM module	
Available via	CanSM.h	

|(SRS_BSW_00405, SRS_BSW_00101, SRS_BSW_00406, SRS_BSW_00358, SRS_BSW_00414, SRS_BSW_00404, SRS_BSW_00400, SRS_BSW_00438)

8.3.2 CanSM_DeInit

[SWS_CanSM_91001]

Service Name	CanSM_DeInit	
Syntax	<pre>void CanSM_DeInit (void)</pre>	
Service ID [hex]	0x14	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	None	
Parameters (inout)	None	

Parameters (out)	None
Return value	None
Description	This service de-initializes the CanSM module.
Available via	CanSM.h

](SRS_Can_01164, SRS_BSW_00336)

Note: General behavior and constraints on de-initialization functions are specified by [SWS_BSW_00152], [SWS_BSW_00072], [SWS_BSW_00232], [SWS_BSW_00233].

Caveat: Caller of the CanSM_Delnit function has to ensure all CAN networks are in the state CANSM_NO_COMMUNICATION.

[SWS_CanSM_00660] If development error detection for the CanSM module is enabled: The function CanSM_Delnit shall raise the error CANSM_E_NOT_IN_NO_COM if not all CAN networks are in state CANSM_NO_COMMUNICATION.)(SRS_BSW_00369)

8.3.3 CanSM_RequestComMode

[SWS_CanSM_00062]

Service Name	CanSM_RequestComMode	
Syntax	<pre>Std_ReturnType CanSM_RequestComMode (NetworkHandleType network, ComM_ModeType ComM_Mode)</pre>	
Service ID [hex]	0x02	
Sync/Async	Asynchronous	
Reentrancy	Reentrant (only for different network handles)	
Parameters (in)	network	Handle of destined communication network for request
	ComM_Mode	Requested communication mode
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: Service accepted E_NOT_OK: Service denied
Description	This service shall change the communication mode of a CAN network to the requested one.	

Available via	CanSM.h
----------------------	---------

|(SRS_Can_01145, SRS_Can_01142)

Remark: Please refer to [10] for a detailed description of the communication modes.

[SWS_CanSM_00369] |The function `CanSM_RequestComMode` shall accept its request, if the `NetworkHandle` parameter of the request is a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).|(SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00370] |The function `CanSM_RequestComMode` shall deny its request, if the `NetworkHandle` parameter of the request is not a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).|(SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00555] |The CanSM module shall deny the API request `CanSM_RequestComMode`, if the initial transition for the requested CAN network is not finished yet after the `CanSM_Init` request (ref. to [SWS_CanSM_00423](#), [SWS_CanSM_00430](#)).|(SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00183] |The function `CanSM_RequestComMode` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE`, if it does not accept the network handle of the request. |(SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00182] |If the function `CanSM_RequestComMode` accepts the request, the request shall be considered by the CanSM state machine (ref. to [SWS_CanSM_00635](#)).|(SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00184] |If the CanSM module is not initialized, when the function `CanSM_RequestComMode` is called, then this function shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`.|(SRS_BSW_00406)

8.3.4 CanSM_GetCurrentComMode

[SWS_CanSM_00063] |

Service Name	<code>CanSM_GetCurrentComMode</code>
Syntax	<code>Std_ReturnType CanSM_GetCurrentComMode (</code>

	<pre>NetworkHandleType network, ComM_ModeType* ComM_ModePtr)</pre>	
Service ID [hex]	0x03	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	network	Network handle, whose current communication mode shall be put out
Parameters (inout)	None	
Parameters (out)	ComM_Mode Ptr	Pointer, where to put out the current communication mode
Return value	Std_Return-Type	E_OK: Service accepted E_NOT_OK: Service denied
Description	This service shall put out the current communication mode of a CAN network.	
Available via	CanSM.h	

](SRS_ModeMgm_09084)

[SWS_CanSM_00282] ⌈The CanSM module shall return E_NOT_OK for the API request `CanSM_GetCurrentComMode` until the call of the provided API `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).](SRS_Can_01142)

[SWS_CanSM_00371] ⌈The function `CanSM_GetCurrentComMode` shall accept its request, if the `NetworkHandle` parameter of the request is a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).](SRS_Can_01142)

[SWS_CanSM_00372] ⌈The function `CanSM_GetCurrentComMode` shall deny its request, if the `NetworkHandle` parameter of the request is not a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).](SRS_Can_01142)

[SWS_CanSM_00187] ⌈The function `CanSM_GetCurrentComMode` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE`, if it does not accept the network handle of the request.](SRS_Can_01142)

[SWS_CanSM_00186] ⌈The function `CanSM_GetCurrentComMode` shall put out the current communication mode for the network handle (ref. to

[SWS_CanSM_00266](#)) to the designated pointer of type `ComM_ModeType`, if it accepts the request.](SRS_Can_01142)

[SWS_CanSM_00188] [If the CanSM module is not initialized (ref. to [SWS_CANSM_00282](#)), when the function `CanSM_GetCurrentComMode` is called, then this function shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`.](SRS_Can_01142)

[SWS_CanSM_00360] [The function `CanSM_GetCurrentComMode` shall report the development error `CANSM_E_PARAM_POINTER` to the DET, if the user of this function hands over a NULL-pointer as `ComM_ModePtr`.](SRS_Can_01142)

8.3.5 CanSM_StartWakeupSource

[SWS_CanSM_00609]

Service Name	CanSM_StartWakeupSource	
Syntax	Std_ReturnType CanSM_StartWakeupSource (NetworkHandleType network)	
Service ID [hex]	0x11	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	network	Affected CAN network
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: Request accepted E_NOT_OK: Request denied
Description	This function shall be called by EcuM when a wakeup source shall be started.	
Available via	CanSM.h	

](SRS_Can_01145)

[SWS_CanSM_00611] [The API function `CanSM_StartWakeupSource` shall return `E_NOT_OK`, if the CanSM module is not initialized yet with `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).](SRS_Can_01145)

[SWS_CanSM_00617] The function `CanSM_StartWakeupSource` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`, if the `CanSM` module is not initialized yet with `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).
(SRS_Can_01145)

[SWS_CanSM_00612] The function `CanSM_StartWakeupSource` shall return `E_NOT_OK`, if the `CanSM` module is initialized and the `network` parameter of the request is not a handle contained in the configuration of the `CanSM` module (ref. to [ECUC_CanSM_00161](#)).
(SRS_Can_01145)

[SWS_CanSM_00613] The function `CanSM_StartWakeupSource` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE`, if the `CanSM` module is initialized and the requested handle is invalid concerning the `CanSM` configuration (ref. to [ECUC_CanSM_00161](#)).
(SRS_Can_01145)

[SWS_CanSM_00616] The function `CanSM_StartWakeupSource` shall return `E_OK` and it shall be considered as trigger (ref. to [SWS_CanSM_00607](#)) for the state machine of the related network, if the `CanSM` module is initialized and the requested handle is valid concerning the `CanSM` configuration (ref. to [ECUC_CanSM_00161](#)).
(SRS_Can_01145)

8.3.6 CanSM_StopWakeupSource

[SWS_CanSM_00610]

Service Name	CanSM_StopWakeupSource	
Syntax	Std_ReturnType CanSM_StopWakeupSource (NetworkHandleType network)	
Service ID [hex]	0x12	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	network	Affected CAN network
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: Request accepted

	E_NOT_OK: Request denied
Description	This function shall be called by EcuM when a wakeup source shall be stopped.
Available via	CanSM.h

](SRS_Can_01145)

[SWS_CanSM_00618] The API function `CanSM_StopWakeupSource` shall return `E_NOT_OK`, if the `CanSM` module is not initialized yet with `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).](SRS_Can_01145)

[SWS_CanSM_00619] The function `CanSM_StopWakeupSource` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`, if the `CanSM` module is not initialized yet with `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).](SRS_Can_01145)

[SWS_CanSM_00620] The function `CanSM_StopWakeupSource` shall return `E_NOT_OK`, if the `CanSM` module is initialized and the `network` parameter of the request is not a handle contained in the configuration of the `CanSM` module (ref. to [ECUC_CanSM_00161](#)).](SRS_Can_01145)

[SWS_CanSM_00621] The function `CanSM_StopWakeupSource` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE`, if the `CanSM` module is initialized and the requested handle is invalid concerning the `CanSM` configuration (ref. to [ECUC_CanSM_00161](#)).](SRS_Can_01145)

[SWS_CanSM_00622] The function `CanSM_StopWakeupSource` shall return `E_OK` and it shall be considered as trigger (ref. to [SWS_CanSM_00608](#)) for the state machine of the related network, if the `CanSM` module is initialized and the requested handle is valid concerning the `CanSM` configuration (ref. to [ECUC_CanSM_00161](#)).](SRS_Can_01145)

8.3.7 Optional

8.3.7.1 CanSM_GetVersionInfo

[SWS_CanSM_00024]

Service Name	CanSM_GetVersionInfo	
Syntax	<pre>void CanSM_GetVersionInfo (Std_VersionInfoType* VersionInfo)</pre>	
Service ID [hex]	0x01	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	VersionInfo	Pointer to where to store the version information of this module.
Return value	None	
Description	This service puts out the version information of this module (module ID, vendor ID, vendor specific version numbers related to BSW00407)	
Available via	CanSM.h	

](SRS_BSW_00407, SRS_BSW_00003)

[SWS_CanSM_00374] [The function `CanSM_GetVersionInfo` shall report the development error `CANSM_E_PARAM_POINTER` to the DET, if the user of this function hands over a NULL-pointer as `VersionInfo`.](SRS_BSW_00407, SRS_BSW_00003)

8.3.7.2 CanSM_SetBaudrate

[SWS_CanSM_00561]

Service Name	CanSM_SetBaudrate	
Syntax	<pre>Std_ReturnType CanSM_SetBaudrate (NetworkHandleType Network, uint16 BaudRateConfigID)</pre>	
Service ID [hex]	0x0d	
Sync/Async	Synchronous	

Reentrancy	Reentrant for different Networks. Non reentrant for the same Network.	
Parameters (in)	Network	Handle of the addressed CAN network for the baud rate change
	BaudRateConfigID	references a baud rate configuration by ID (see CanController BaudRateConfigID)
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: Service request accepted, setting of (new) baud rate started E_NOT_OK: Service request not accepted
Description	This service shall start an asynchronous process to change the baud rate for the configured CAN controllers of a certain CAN network. Depending on necessary baud rate modifications the controllers might have to reset.	
Available via	CanSM.h	

](SRS_Can_01142)

[SWS_CanSM_00569] [The CanSM module shall provide the API function CanSM_SetBaudrate, if the CANSM_SET_BAUDRATE_API parameter (ref. to [ECUC_CanSM_00343](#)) is configured with the value TRUE.](SRS_Can_01142)

[SWS_CanSM_00570] The CanSM module shall not provide the API function CanSM_SetBaudrate, if the CANSM_SET_BAUDRATE_API parameter (ref. to [ECUC_CanSM_00343](#)) is configured with the value FALSE.](SRS_Can_01142)

[SWS_CanSM_00502] [The CanSM module shall deny the CanSM_SetBaudrate API request, if the NetworkHandle parameter does not match to the configured Network handles of the CanSM module (ref. to [ECUC_CanSM_00161](#)).](SRS_Can_01142)

[SWS_CanSM_00504] [The function `CanSM_SetBaudrate` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE` (ref. to chapter 7.3), if it does not accept the network handle of the request.](SRS_Can_01142)

[SWS_CanSM_00505] [The function `CanSM_SetBaudrate` shall deny its request, if the requested CAN network is not in the communication mode `COMM_FULL_COMMUNICATION`.](SRS_Can_01142)

[SWS_CanSM_00530] [The CanSM module shall deny the `CanSM_SetBaudrate` API request, if the CanSM module is not initialized.](SRS_Can_01142)

[SWS_CanSM_00506] [If the function `CanSM_SetBaudrate` is called and the CanSM module is not initialized, then this function shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT` (ref. to chapter 7.3).](SRS_Can_01142)

[SWS_CanSM_00503] [If no condition is present to deny the `CanSM_SetBaudrate` request according to [SWS_CANSM_00502](#) and [SWS_CANSM_00505](#), [SWS_CANSM_00530](#), then the CanSM module shall return `E_OK` and operate the process for the requested baud rate change as specified with [SWS_CANSM_00507](#).](SRS_Can_01142)

8.3.7.3 CanSM_SetEcuPassive

[SWS_CanSM_00644]

Service Name	CanSM_SetEcuPassive	
Syntax	Std_ReturnType CanSM_SetEcuPassive (boolean CanSM_Passive)	
Service ID [hex]	0x13	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CanSM_Passive	TRUE: set all CanSM channels to passive, i.e. receive only FALSE: set all CanSM channels back to non-passive
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_Return-	E_OK: Request accepted

	Type	E_NOT_OK: Request not accepted
Description	This function can be used to set all CanSM channels of the ECU to a receive only mode.	
Available via	CanSM.h	

](SRS_Can_01158)

[SWS_CanSM_00645]「The CanSM module shall provide the API function `CanSM_SetEcuPassive`, if the `CanSMTxOfflineActiveSupport` parameter (ref. to [ECUC_CanSM_00349](#)) is configured with the value `TRUE`.」(SRS_Can_01158)

8.3.8 Call-back notifications

This is a list of functions provided for other modules.

8.3.9 CanSM_ControllerBusOff

[SWS_CanSM_00064]

Service Name	CanSM_ControllerBusOff	
Syntax	<pre>void CanSM_ControllerBusOff (uint8 ControllerId)</pre>	
Service ID [hex]	0x04	
Sync/Async	Synchronous	
Reentrancy	Reentrant (only for different CanControllers)	
Parameters (in)	ControllerId	CAN controller, which detected a bus-off event
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This callback function notifies the CanSM about a bus-off event on a certain CAN controller, which needs to be considered with the specified bus-off recovery handling for the impacted CAN network.	
Available via	CanSM_CanIf.h	

](SRS_BSW_00359, SRS_BSW_00333)

[SWS_CanSM_00189] If the function `CanSM_ControllerBusOff` gets a `Controller`, which is not configured as `CanSMControllerId` in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_CONTROLLER.`](SRS_BSW_00359, SRS_BSW_00333)

[SWS_CanSM_00190] If the CanSM module is not initialized, when the function `CanSM_ControllerBusOff` is called, then the function `CanSM_ControllerBusOff` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT.`](SRS_BSW_00359, SRS_BSW_00333)

[SWS_CanSM_00235] If the CanSM module is initialized and the input parameter `Controller` is one of the CAN controllers configured with the parameter `CanSMControllerId`, this bus-off event shall be considered by the CAN Network state machine (ref. to [SWS_CanSM_00500](#)). (SRS_BSW_00359, SRS_BSW_00333)

Additional remarks:

- 1.) The call context is either on interrupt level (interrupt mode) or on task level (polling mode).
- 2.) Reentrancy is necessary for multiple CAN controller usage.

8.3.10 CanSM_ControllerModeIndication

[SWS_CanSM_00396]

Service Name	CanSM_ControllerModeIndication	
Syntax	<pre>void CanSM_ControllerModeIndication (uint8 ControllerId, Can_ControllerStateType ControllerMode)</pre>	
Service ID [hex]	0x07	
Sync/Async	Synchronous	
Reentrancy	Reentrant (only for different CAN controllers)	
Parameters (in)	ControllerId	CAN controller, whose mode has changed
	ControllerMode	Notified CAN controller mode
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This callback shall notify the CanSM module about a CAN controller mode change.	
Available via	CanSM_CanIf.h	

](SRS_Can_01145)

[SWS_CanSM_00397] If the function `CanSM_ControllerModeIndication` gets a `ControllerId`, which is not configured as `CanSMControllerId` in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_CONTROLLER`. (SRS_Can_01145)

[SWS_CanSM_00398] If the CanSM module is not initialized, when the function `CanSM_ControllerModeIndication` is called, then the function

CanSM_ControllerModeIndication shall call the function Det_ReportError with ErrorId parameter CANSM_E_UNINIT.](SRS_Can_01145)

8.3.11 CanSM_TransceiverModeIndication

[SWS_CanSM_00399]

Service Name	CanSM_TransceiverModeIndication	
Syntax	<pre>void CanSM_TransceiverModeIndication (uint8 TransceiverId, CanTrcv_TrcvModeType TransceiverMode)</pre>	
Service ID [hex]	0x09	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different CAN Transceivers	
Parameters (in)	TransceiverId	CAN transceiver, whose mode has changed
	TransceiverMode	Notified CAN transceiver mode
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This callback shall notify the CanSM module about a CAN transceiver mode change.	
Available via	CanSM_CanIf.h	

](SRS_Can_01145, SRS_Can_01142)

Note: CANTRCV_TRCVMODE_SLEEP state can be requested to CanTrcv module only by integration code and not by CanSM module. Hence when CanSM_TransceiverModeIndication() is invoked for CANTRCV_TRCVMODE_SLEEP, CanSM module should ignore this request.

[SWS_CanSM_00400] If the function CanSM_TransceiverModeIndication gets a TransceiverId, which is not configured as CanSMTransceiverId in the configuration of the CanSM module, it shall call the function Det_ReportError with ErrorId parameter CANSM_E_PARAM_TRANSCEIVER.](SRS_Can_01145)

[SWS_CanSM_00401] If the CanSM module is not initialized, when the function CanSM_TransceiverModeIndication is called, then the function CanSM_TransceiverModeIndication shall call the function Det_ReportError with ErrorId parameter CANSM_E_UNINIT.](SRS_Can_01145)

8.3.12 CanSM_TxTimeoutException

[SWS_CanSM_00410]

Service Name	CanSM_TxTimeoutException	
Syntax	<pre>void CanSM_TxTimeoutException (NetworkHandleType Channel)</pre>	
Service ID [hex]	0x0b	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	Channel	Affected CAN network
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This function shall notify the CanSM module, that the CanNm has detected for the affected partial CAN network a tx timeout exception, which shall be recovered within the respective network state machine of the CanSM module.	
Available via	CanSM_CanIf.h	

|(SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00411] |The function `CanSM_TxTimeoutException` shall report `CANSM_E_UNINIT` to the DET, if the CanSM is not initialized yet. |(SRS_Can_01145)

[SWS_CanSM_00412] |If the function `CanSM_TxTimeoutException` is referenced with a `Channel`, which is not configured as `CanSMNetworkHandle` in the CanSM configuration, it shall report `CANSM_E_INVALID_NETWORK_HANDLE` to the DET. |(SRS_Can_01145)

Remarks: Reentrancy is necessary for different Channels.

8.3.13 CanSM_ClearTrcvWufFlagIndication

[SWS_CanSM_00413]

Service Name	CanSM_ClearTrcvWufFlagIndication	
Syntax	<pre>void CanSM_ClearTrcvWufFlagIndication (uint8 Transceiver)</pre>	

)	
Service ID [hex]	0x08	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different CAN Transceivers	
Parameters (in)	Transceiver	Requested Transceiver
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This callback function shall indicate the CanIf_ClearTrcvWufFlag API process end for the notified CAN Transceiver.	
Available via	CanSM_CanIf.h	

](SRS_Can_01145)

[SWS_CanSM_00414] [The function `CanSM_ClearTrcvWufFlagIndication` shall report `CANSM_E_UNINIT` to the DET, if the CanSM is not initialized yet.](SRS_Can_01145)

[SWS_CanSM_00415] [If the function `CanSM_ClearTrcvWufFlagIndication` gets a `TransceiverId`, which is not configured (ref. to [ECUC_CanSM_00137](#)) in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_TRANSCEIVER`.](SRS_Can_01145)

8.3.14 CanSM_CheckTransceiverWakeFlagIndication

[SWS_CanSM_00416]

Service Name	CanSM_CheckTransceiverWakeFlagIndication	
Syntax	<pre>void CanSM_CheckTransceiverWakeFlagIndication (uint8 Transceiver)</pre>	
Service ID [hex]	0x0a	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different CAN Transceivers	
Parameters (in)	Transceiver	Requested Transceiver
Parameters (inout)	None	

Parameters (out)	None
Return value	None
Description	This callback function indicates the CanIf_CheckTrcvWakeFlag API process end for the notified CAN Transceiver.
Available via	CanSM_CanIf.h

](SRS_Can_01145)

[SWS_CanSM_00417] [The function

CanSM_CheckTransceiverWakeFlagIndication shall report CANSM_E_UNINIT to the DET, if the CanSM module is not initialized yet.](SRS_Can_01145)

[SWS_CanSM_00418] [If the function

CanSM_CheckTransceiverWakeFlagIndication gets a TransceiverId, which is not configured (ref. to [ECUC_CanSM_00137](#)) in the configuration of the CanSM module, it shall call the function Det_ReportError with ErrorId parameter CANSM_E_PARAM_TRANSCEIVER.](SRS_Can_01145)

8.3.15 CanSM_ConfirmPnAvailability

[SWS_CanSM_00419]

Service Name	CanSM_ConfirmPnAvailability	
Syntax	<pre>void CanSM_ConfirmPnAvailability (uint8 TransceiverId)</pre>	
Service ID [hex]	0x06	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	TransceiverId	CAN transceiver, which was checked for PN availability
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This callback function indicates that the transceiver is running in PN communication mode.	
Available via	CanSM_CanIf.h	

](SRS_Can_01145)

[SWS_CanSM_00546] ⌈The function `CanSM_ConfirmPnAvailability` shall notify the `CanNm` module (ref. to [SWS_CanSM_00422](#)), if it is called with a configured Transceiver as input parameter (ref. to [ECUC_CanSM_00137](#)).](SRS_Can_01145)

[SWS_CanSM_00420] ⌈

The function `CanSM_ConfirmPnAvailability` shall report `CANSM_E_UNINIT` to the DET, if the `CanSM` module is not initialized yet.](SRS_Can_01145)

[SWS_CanSM_00421] ⌈

If the function `CanSM_ConfirmPnAvailability` gets a `TransceiverId`, which is not configured (ref. to [ECUC_CanSM_00137](#)) in the configuration of the `CanSM` module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_TRANSCEIVER`.](SRS_Can_01145)

8.4 Scheduled functions

For details refer to the chapter 8.5 “Scheduled functions” in *SWS_BSWGeneral*.

8.4.1 CanSM_MainFunction

[SWS_CanSM_00065]⌈

Service Name	CanSM_MainFunction
Syntax	void CanSM_MainFunction (void)
Service ID [hex]	0x05
Description	Scheduled function of the CanSM
Available via	SchM_CanSM.h

](SRS_BSW_00424, SRS_BSW_00425, SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00167] ⌈The main function of the `CanSM` module shall operate the effects of the `CanSM` state machine (ref. to chapter 7.2), which the `CanSM` module shall implement for each configured CAN Network.](SRS_BSW_00424, SRS_BSW_00425, SRS_Can_01145, SRS_Can_01142)

8.5 Expected Interfaces

In this chapter all interfaces required from other modules are listed.

8.5.1 Mandatory Interfaces

This chapter defines all interfaces, which are required to fulfill the core functionality of the module.[]

API Function	Header File	Description
BswM_CanSM_-CurrentState	BswM_CanSM.h	Function called by CanSM to indicate its current state.
CanIf_Check-TrcvWakeFlag	CanIf.h	Requests the CanIf module to check the Wake flag of the designated CAN transceiver.
CanIf_Clear-TrcvWufFlag	CanIf.h	Requests the CanIf module to clear the WUF flag of the designated CAN transceiver.
CanIf_GetPdu-Mode	CanIf.h	This service reports the current mode of a requested PDU channel.
CanIf_GetTx-Confirmation-State	CanIf.h	This service reports, if any TX confirmation has been done for the whole CAN controller since the last CAN controller start.
CanIf_Set-ControllerMode	CanIf.h	This service calls the corresponding CAN Driver service for changing of the CAN controller mode.
CanIf_SetPdu-Mode	CanIf.h	This service sets the requested mode at the L-PDUs of a predefined logical PDU channel.
CanIf_SetTrcv-Mode	CanIf.h	This service changes the operation mode of the transceiver TransceiverId, via calling the corresponding CAN Transceiver Driver service.
CanNm_-ConfirmPn-Availability	CanNm.h	Enables the PN filter functionality on the indicated NM channel. Availability: The API is only available if CanNmGlobalPnSupport is TRUE.
ComM_BusSM_-ModeIndication	ComM.h	Indication of the actual bus mode by the corresponding Bus State Manager. ComM shall propagate the indicated state to the users with means of the RTE and BswM.
Dem_SetEvent-Status	Dem.h	Called by SW-Cs or BSW modules to report monitor status information to the Dem. BSW modules calling Dem_SetEventStatus can safely ignore the return value. This API will be available only if ({Dem/DemConfigSet/DemEventParameter/DemEventReportingType} == STANDARD_REPORTING)
Det_Report-RuntimeError	Det.h	Service to report runtime errors. If a callout has been configured then this callout shall be called.

l()

8.5.1.1 Remark: Usage of CanIf_SetPduMode

Although the CanIf module provides more requestable PDU modes, the CanSM module only uses the parameters `CANIF_ONLINE`, `CANIF_TX_OFFLINE_ACTIVE` and `CANIF_TX_OFFLINE` for the call of the API `CanIf_SetPduMode`.

The `CANIF_OFFLINE` mode is assumed automatically by CanIf and needs not to be set by CanSM.

8.5.2 Optional Interfaces

This chapter defines all interfaces, which are required to fulfill an optional functionality of the module.[]

API Function	Header File	Description
CanIf_Set-Baudrate	CanIf.h	This service shall set the baud rate configuration of the CAN controller. Depending on necessary baud rate modifications the controller might have to reset.
Det_Report-Error	Det.h	Service to report development errors.

]()

8.5.3 Configurable Interfaces

In this chapter all interfaces are listed where the target functions could be configured. The target function is usually a callback function. The names of these kind of interfaces is not fixed because they are configurable.

8.5.3.1 <User_GetBusOffDelay>

[SWS_CanSM_00637]

Service Name	<User_GetBusOffDelay>	
Syntax	<pre>void <User_GetBusOffDelay> (NetworkHandleType network, uint8* delayCyclesPtr)</pre>	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different networks	
Parameters (in)	network	CAN network where a BusOff occurred.
Parameters (inout)	None	
Parameters (out)	delayCyclesPtr	Number of CanSM base cycles to wait additionally to L1/L2 after a BusOff occurred.

Return value	None
Description	This callout function returns the number of CanSM base cycles to wait additionally to L1/L2 after a BusOff occurred.
Available via	configurable

](SRS_Can_01144, SRS_Can_01146)

9 Sequence diagrams

All interactions of the CanSM module with the depending modules CanIf, ComM, BswM, Dem and CanNm are specified in the state machine diagrams (ref. to Figure 7-1- Figure 7-10). Therefore the CanSM SWS provides only some exemplary sequences for the use case to start and to stop the CAN controller(s) of a CAN network.

Remark: For the special use case of CAN network deinitialization with partial network support please refer to chapter 9 of [9] (Specification of CAN Transceiver Driver).

9.1 Sequence diagram CanSm_StartCanController

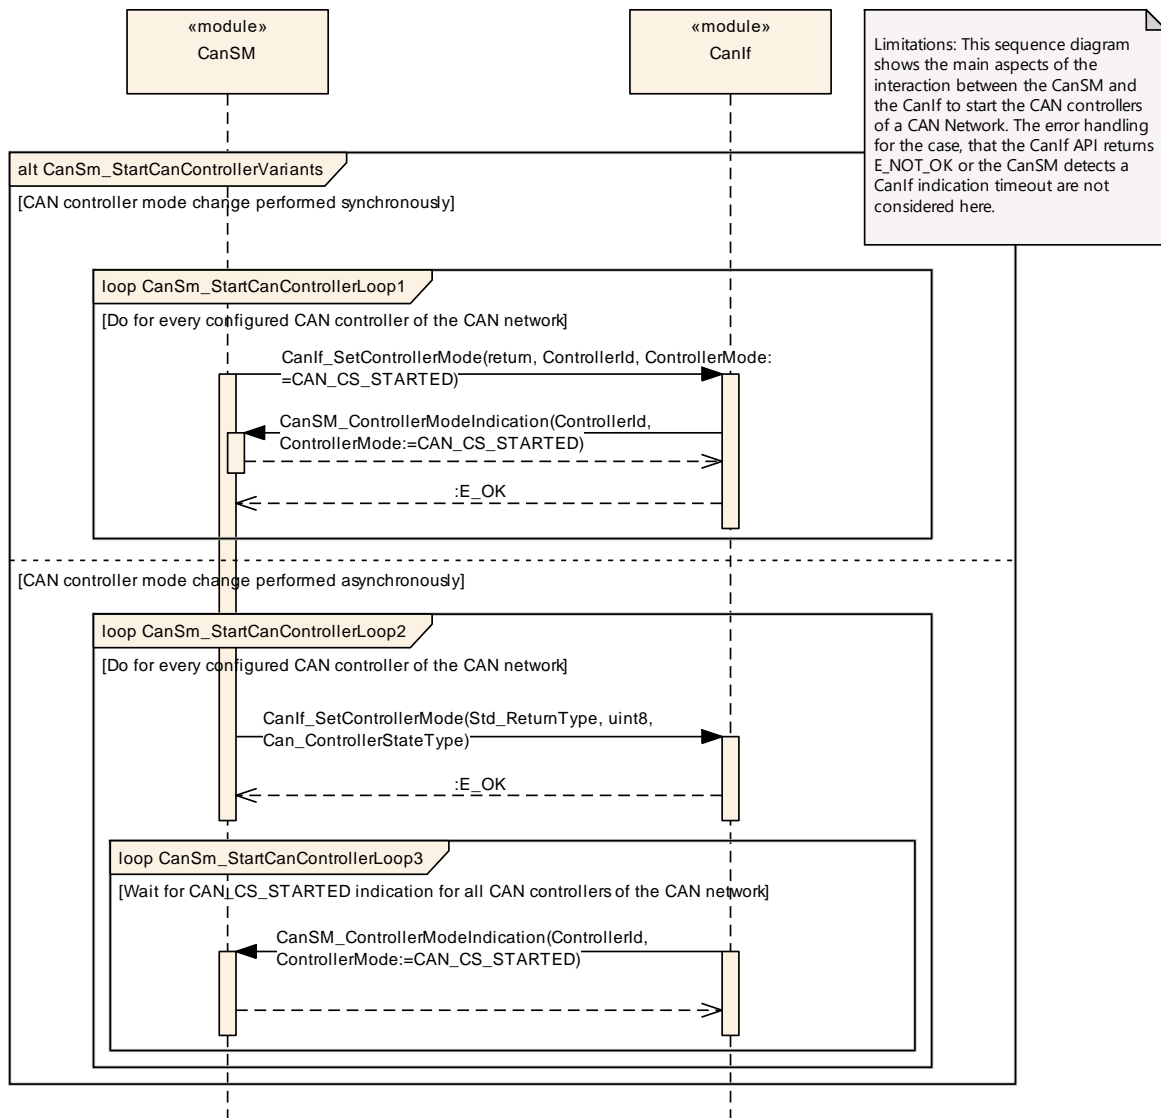


Figure 9-1: Sequence diagram CanSm_StartCanController

9.2 Sequence diagram CanSm_StopCanController

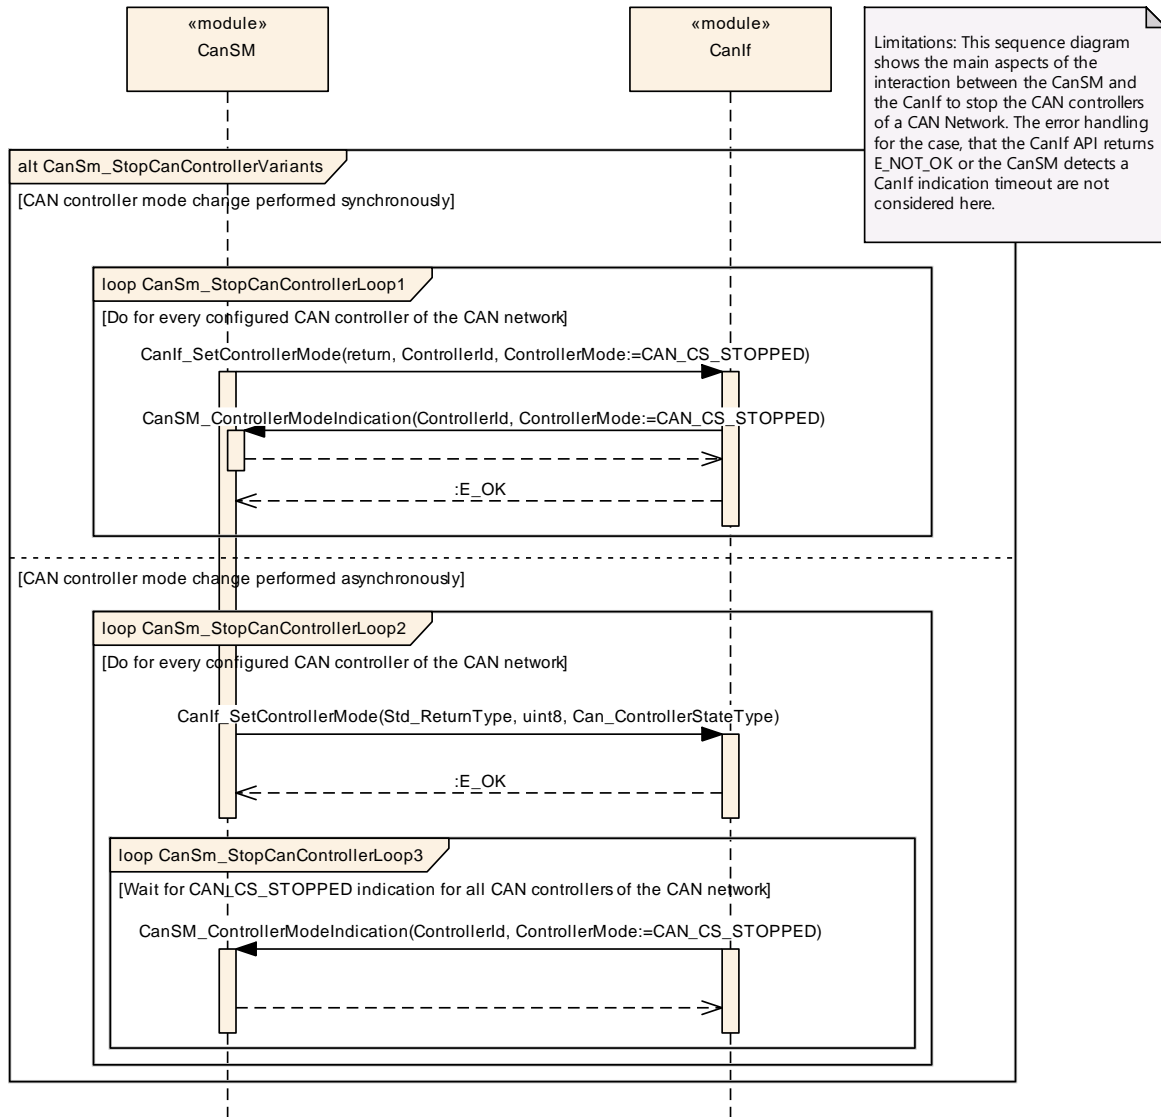


Figure 9-2: Sequence diagram CanSm_StopCanController

10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module CanSM.

Chapter 10.3 specifies published information of the module CanSM.

10.1 How to read this chapter

For details refer to the chapter 10.1 “Introduction to configuration specification” in *SWS_BSWGeneral*.

10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters of the CanSM module. The detailed meanings of the parameters describe chapter 7 and chapter 8.

10.2.1 CanSM

SWS Item	ECUC_CanSM_00351 :
Module Name	<i>CanSM</i>
Module Description	Configuration of the CanSM module
Post-Build Variant Support	true
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanSMConfiguration	1	This container contains the global parameters of the CanSM and sub containers, which are for the CAN network specific configuration.
CanSMGeneral	1	Container for general pre-compile parameters of the CanSM module

10.2.2 CanSMConfiguration

SWS Item	ECUC_CanSM_00123 :
Container Name	CanSMConfiguration
Parent Container	CanSM
Description	This container contains the global parameters of the CanSM and sub containers, which are for the CAN network specific configuration.
Configuration Parameters	

SWS Item	ECUC_CanSM_00335 :		
Name	CanSMModeRequestRepetitionMax		
Parent Container	CanSMConfiguration		
Description	Specifies the maximal amount of mode request repetitions without a respective mode indication from the CanIf module until the CanSM module reports a Development Error to the Det and tries to go back to no communication.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00336 :		
Name	CanSMModeRequestRepetitionTime		
Parent Container	CanSMConfiguration		
Description	Specifies in which time duration the CanSM module shall repeat mode change requests by using the API of the CanIf module.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 65.535]		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanSMManagerNetwork	1..*	This container contains the CAN network specific parameters of each CAN network

10.2.3 CanSMGeneral

SWS Item	ECUC_CanSM_00314 :		
Container Name	CanSMGeneral		
Parent Container	CanSM		
Description	Container for general pre-compile parameters of the CanSM module		
Configuration Parameters			

SWS Item	ECUC_CanSM_00133 :		
Name	CanSMDevErrorDetect		
Parent Container	CanSMGeneral		
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> true: detection and notification is enabled. 		

	<ul style="list-style-type: none"> false: detection and notification is disabled. 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00347 :		
Name	CanSMGetBusOffDelayFunction		
Parent Container	CanSMGeneral		
Description	This parameter configures the name of the <User_GetBusOffDelay> callout function, which is used by CanSM to acquire an additional L1/L2 delay time. This function is only called for channels where CanSMEnableBusOffDelay is enabled.		
Multiplicity	0..1		
Type	EcucFunctionNameDef		
Default value	--		
maxLength	--		
minLength	--		
regularExpression	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00348 :		
Name	CanSMGetBusOffDelayHeader		
Parent Container	CanSMGeneral		
Description	This parameter configures the header file containing the prototype of the <User_GetBusOffDelay> callout function.		
Multiplicity	0..1		
Type	EcucStringParamDef		
Default value	--		
maxLength	--		
minLength	--		
regularExpression	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00312 :		
Name	CanSMMainFunctionTimePeriod		
Parent Container	CanSMGeneral		
Description	This parameter defines the cycle time of the function CanSM_MainFunction in seconds		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00344 :		
Name	CanSMPncSupport		
Parent Container	CanSMGeneral		
Description	Enables or disables support of partial networking. False: Partial Networking is disabled True: Partial Networking is enabled		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local dependency: This parameter shall be available only if ComMPncSupport is enabled in ComM		

SWS Item	ECUC_CanSM_00343 :		
Name	CanSMSetBaudrateApi		
Parent Container	CanSMGeneral		
Description	The support of the Can_SetBaudrate API is optional. If this parameter is set to true the Can_SetBaudrate API shall be supported. Otherwise the API is not supported.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	

Scope / Dependency	scope: ECU		
SWS Item	ECUC_CanSM_00349 :		
Name	CanSMTxOfflineActiveSupport		
Parent Container	CanSMGeneral		
Description	Determines whether the ECU passive feature is supported by CanSM. True: Enabled False: Disabled		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local dependency: CanIfTxOfflineActiveSupport		

SWS Item	ECUC_CanSM_00311 :		
Name	CanSMVersionInfoApi		
Parent Container	CanSMGeneral		
Description	Activate/Deactivate the version information API (CanSM_GetVersionInfo). true: version information API activated false: version information API deactivated		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.2.4 CanSMManagerNetwork

SWS Item	ECUC_CanSM_00126 :		
Container Name	CanSMManagerNetwork		
Parent Container	CanSMConfiguration		
Description	This container contains the CAN network specific parameters of each CAN network		
Configuration Parameters			

SWS Item	ECUC_CanSM_00131 :		
Name	CanSMBorCounterL1ToL2		
Parent Container	CanSMManagerNetwork		
Description	This threshold defines the count of bus-offs until the bus-off recovery		

	switches from level 1 (short recovery time) to level 2 (long recovery time).		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00128 :		
Name	CanSMBorTimeL1		
Parent Container	CanSMMManagerNetwork		
Description	This time parameter defines in seconds the duration of the bus-off recovery time in level 1 (short recovery time).		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 65.535]		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00129 :		
Name	CanSMBorTimeL2		
Parent Container	CanSMMManagerNetwork		
Description	This time parameter defines in seconds the duration of the bus-off recovery time in level 2 (long recovery time).		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 65.535]		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00130 :		
Name	CanSMBorTimeTxEnsured		
Parent Container	CanSMMManagerNetwork		
Description	This parameter defines in seconds the duration of the bus-off event check. This check assesses, if the recovery has been successful after the recovery reenables the transmit path. If a new bus-off occurs during this time period, the CanSM assesses this bus-off as sequential bus-off without successful recovery. Because a bus-off only can be detected, when PDUs are transmitted, the time has to be great enough to ensure that PDUs are transmitted again (e. g. time period of the fastest cyclic transmitted PDU of the COM module / ComTxModeTimePeriodFactor).		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 65.535]		
Default value	--		

Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CANSMBOR_TX_CONFIRMATION_POLLING disabled		

SWS Item	ECUC_CanSM_00339 :		
Name	CanSMBorTxConfirmationPolling		
Parent Container	CanSMManagerNetwork		
Description	This parameter shall configure, if the CanSM polls the CanIf_GetTxConfirmationState API to decide the bus-off state to be recovered instead of using the CanSMBorTimeTxEnsured parameter for this decision.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00346 :		
Name	CanSMEnableBusOffDelay		
Parent Container	CanSMManagerNetwork		
Description	This parameter defines if the <User_GetBusOffDelay> shall be called for this network.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00161 :		
Name	CanSMComMNetworkHandleRef		
Parent Container	CanSMManagerNetwork		
Description	Unique handle to identify one certain CAN network. Reference to one of the network handles configured for the ComM.		
Multiplicity	1		
Type	Symbolic name reference to [ComMChannel]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: ComM		

SWS Item	ECUC_CanSM_00137 :		
Name	CanSMTransceiverId		
Parent Container	CanSMManagerNetwork		
Description	ID of the CAN transceiver assigned to the configured network handle. Reference to one of the transceivers managed by the CanIf module.		
Multiplicity	0..1		
Type	Symbolic name reference to [CanIfTrcvCfg]		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CanIf		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanSMController	1..*	This container contains the controller IDs assigned to a CAN network.
CanSMDemEventParameterRefs	0..1	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.

10.2.5 CanSMController

SWS Item	ECUC_CanSM_00338 :		
Container Name	CanSMController		
Parent Container	CanSMManagerNetwork		
Description	This container contains the controller IDs assigned to a CAN network.		
Configuration Parameters			

SWS Item	ECUC_CanSM_00141 :		
Name	CanSMControllerId		
Parent Container	CanSMController		
Description	Unique handle to identify one certain CAN controller. Reference to one of the CAN controllers managed by the CanIf module.		
Multiplicity	1		
Type	Symbolic name reference to [CanIfCtrlCfg]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CanIf		

No Included Containers

10.2.6 CanSMDemEventParameterRefs

SWS Item	ECUC_CanSM_00127 :
Container Name	CanSMDemEventParameterRefs
Parent Container	CanSMMManagerNetwork
Description	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.
Configuration Parameters	

SWS Item	ECUC_CanSM_00070 :		
Name	CANSM_E_BUS_OFF		
Parent Container	CanSMDemEventParameterRefs		
Description	Reference to configured DEM event to report bus off errors for this CAN network.		
Multiplicity	0..1		
Type	Symbolic name reference to [DemEventParameter]		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: Dem		

SWS Item	ECUC_CanSM_00352 :		
Name	CANSM_E_MODE_REQUEST_TIMEOUT		
Parent Container	CanSMDemEventParameterRefs		
Description	Reference to configured DEM event to report bus off errors for this CAN network.		
Multiplicity	0..1		
Type	Symbolic name reference to [DemEventParameter]		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: Dem		

No Included Containers

10.3 Published Information

For details refer to the chapter 10.3 “Published Information” in *SWS_BSWGeneral*

11 CanSM unspecific / not applicable requirements

[SWS_CanSM_00652] † The following requirements are not applicable to this specification, because they are either general BSW requirements, which apply to all BSW modules and not only especially to the CanSM module or they are not applicable at all. † (SRS_BSW_00170, SRS_BSW_00375, SRS_BSW_00395, SRS_BSW_00416, SRS_BSW_00437, SRS_BSW_00168, SRS_BSW_00423, SRS_BSW_00426, SRS_BSW_00427, SRS_BSW_00428, SRS_BSW_00429, SRS_BSW_00432, SRS_BSW_00433, SRS_BSW_00336, SRS_BSW_00417, SRS_BSW_00161, SRS_BSW_00162, SRS_BSW_00005, SRS_BSW_00347, SRS_BSW_00314, SRS_BSW_00353, SRS_BSW_00361, SRS_BSW_00377, SRS_BSW_00308, SRS_BSW_00309, SRS_BSW_00360, SRS_BSW_00341, SRS_BSW_00439, SRS_BSW_00440, SRS_BSW_00004, SRS_BSW_00006, SRS_BSW_00007, SRS_BSW_00009, SRS_BSW_00010, SRS_BSW_00158, SRS_BSW_00159, SRS_BSW_00160, SRS_BSW_00164, SRS_BSW_00167, SRS_BSW_00172, SRS_BSW_00300, SRS_BSW_00301, SRS_BSW_00302, SRS_BSW_00305, SRS_BSW_00306, SRS_BSW_00307, SRS_BSW_00310, SRS_BSW_00312, SRS_BSW_00318, SRS_BSW_00321, SRS_BSW_00323, SRS_BSW_00325, SRS_BSW_00327, SRS_BSW_00328,, SRS_BSW_00330, SRS_BSW_00331, SRS_BSW_00334, SRS_BSW_00335, SRS_BSW_00339, SRS_BSW_00342, SRS_BSW_00343, SRS_BSW_00346, SRS_BSW_00348, SRS_BSW_00350, SRS_BSW_00357, SRS_BSW_00360, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00373, SRS_BSW_00374, SRS_BSW_00378, SRS_BSW_00379, SRS_BSW_00380, SRS_BSW_00383, SRS_BSW_00384, SRS_BSW_00385, SRS_BSW_00386, SRS_BSW_00388, SRS_BSW_00389, SRS_BSW_00390, SRS_BSW_00392, SRS_BSW_00393, SRS_BSW_00394, SRS_BSW_00396, SRS_BSW_00397, SRS_BSW_00398, SRS_BSW_00399, SRS_BSW_00400, SRS_BSW_00401, SRS_BSW_00402, SRS_BSW_00408, SRS_BSW_00409, SRS_BSW_00410, SRS_BSW_00411, SRS_BSW_00413, SRS_BSW_00415, SRS_BSW_00419, SRS_BSW_00422, SRS_BSW_00438, SRS_BSW_00441, SRS_BSW_00442, SRS_BSW_00448, SRS_BSW_00449, SRS_BSW_00450, SRS_BSW_00451, SRS_BSW_00452, SRS_BSW_00453, , SRS_BSW_00454, SRS_BSW_00456, SRS_BSW_00457, SRS_BSW_00458, SRS_BSW_00459, SRS_BSW_00460, SRS_BSW_00461, SRS_BSW_00462, SRS_BSW_00463, SRS_BSW_00465, SRS_BSW_00466, SRS_BSW_00467, SRS_BSW_00469, SRS_BSW_00470, SRS_BSW_00471, SRS_BSW_00472, SRS_Can_01001, SRS_Can_01002, SRS_Can_01003, SRS_Can_01004, SRS_Can_01005, SRS_Can_01006, SRS_Can_01007, SRS_Can_01008, SRS_Can_01009, SRS_Can_01011, SRS_Can_01013, SRS_Can_01014, SRS_Can_01015, SRS_Can_01016, SRS_Can_01018, SRS_Can_01020, SRS_Can_01021, SRS_Can_01022, SRS_Can_01023, SRS_Can_01027, SRS_Can_01028, SRS_Can_01029, SRS_Can_01032, SRS_Can_01033, SRS_Can_01034, SRS_Can_01035, SRS_Can_01036, SRS_Can_01037, SRS_Can_01038, SRS_Can_01039, SRS_Can_01041, SRS_Can_01042, SRS_Can_01043, SRS_Can_01045, SRS_Can_01049, SRS_Can_01051, SRS_Can_01053, SRS_Can_01054, SRS_Can_01055, SRS_Can_01058, SRS_Can_01059, SRS_Can_01060, SRS_Can_01061, SRS_Can_01062, SRS_Can_01065, SRS_Can_01066, SRS_Can_01068, SRS_Can_01069, SRS_Can_01071, SRS_Can_01073, SRS_Can_01074, SRS_Can_01075,

SRS_Can_01076, SRS_Can_01078, SRS_Can_01079, SRS_Can_01081,
SRS_Can_01082, SRS_Can_01086, SRS_Can_01090, SRS_Can_01091,
SRS_Can_01092, SRS_Can_01095, SRS_Can_01096, SRS_Can_01097,
SRS_Can_01098, SRS_Can_01099, SRS_Can_01100, SRS_Can_01101,
SRS_Can_01103, SRS_Can_01107, SRS_Can_01108, SRS_Can_01109,
SRS_Can_01110, SRS_Can_01111, SRS_Can_01112, SRS_Can_01114,
SRS_Can_01115, SRS_Can_01116, SRS_Can_01117, SRS_Can_01121,
SRS_Can_01122, SRS_Can_01125, SRS_Can_01126, SRS_Can_01129,
SRS_Can_01130, SRS_Can_01131, SRS_Can_01132, SRS_Can_01134,
SRS_Can_01135, SRS_Can_01136, SRS_Can_01138, SRS_Can_01139,
SRS_Can_01140, SRS_Can_01141, SRS_Can_01143, SRS_Can_01147,
SRS_Can_01148, SRS_Can_01149, SRS_Can_01150, SRS_Can_01151,
SRS_Can_01153, SRS_Can_01154, SRS_Can_01155, SRS_Can_01156,
SRS_Can_01157, SRS_Can_01159, SRS_Can_01160, SRS_Can_01161,
SRS_Can_01162, SRS_Can_01163, SRS_ModeMgm_00049,
SRS_ModeMgm_09001, SRS_ModeMgm_09009, SRS_ModeMgm_09017,
SRS_ModeMgm_09028, SRS_ModeMgm_09071, SRS_ModeMgm_09072,
SRS_ModeMgm_09078, SRS_ModeMgm_09080, SRS_ModeMgm_09081,
SRS_ModeMgm_09083, SRS_ModeMgm_09084, SRS_ModeMgm_09085,
SRS_ModeMgm_09087, SRS_ModeMgm_09089, SRS_ModeMgm_09090,
SRS_ModeMgm_09097, SRS_ModeMgm_09098, SRS_ModeMgm_09100,
SRS_ModeMgm_09101, SRS_ModeMgm_09102, SRS_ModeMgm_09104,
SRS_ModeMgm_09106, SRS_ModeMgm_09107, SRS_ModeMgm_09109,
SRS_ModeMgm_09110, SRS_ModeMgm_09112, SRS_ModeMgm_09113,
SRS_ModeMgm_09114, SRS_ModeMgm_09115, SRS_ModeMgm_09116,
SRS_ModeMgm_09118, SRS_ModeMgm_09119, SRS_ModeMgm_09120,
SRS_ModeMgm_09122, SRS_ModeMgm_09125, SRS_ModeMgm_09126,
SRS_ModeMgm_09127, SRS_ModeMgm_09128, SRS_ModeMgm_09132,
SRS_ModeMgm_09133, SRS_ModeMgm_09136, SRS_ModeMgm_09141,
SRS_ModeMgm_09143, SRS_ModeMgm_09145, SRS_ModeMgm_09146,
SRS_ModeMgm_09147, SRS_ModeMgm_09149, SRS_ModeMgm_09155,
SRS_ModeMgm_09156, SRS_ModeMgm_09157, SRS_ModeMgm_09158,
SRS_ModeMgm_09159, SRS_ModeMgm_09160, SRS_ModeMgm_09161,
SRS_ModeMgm_09162, SRS_ModeMgm_09163, SRS_ModeMgm_09164,
SRS_ModeMgm_09165, SRS_ModeMgm_09166, SRS_ModeMgm_09168,
SRS_ModeMgm_09169, SRS_ModeMgm_09172, SRS_ModeMgm_09173,
SRS_ModeMgm_09174, SRS_ModeMgm_09175, SRS_ModeMgm_09176,
SRS_ModeMgm_09177, SRS_ModeMgm_09178, SRS_ModeMgm_09179,
SRS_ModeMgm_09180, SRS_ModeMgm_09182, SRS_ModeMgm_09183,
SRS_ModeMgm_09184, SRS_ModeMgm_09185, SRS_ModeMgm_09186,
SRS_ModeMgm_09187, SRS_ModeMgm_09188, SRS_ModeMgm_09189,
SRS_ModeMgm_09190, SRS_ModeMgm_09194, SRS_ModeMgm_09199,
SRS_ModeMgm_09207, SRS_ModeMgm_09220, SRS_ModeMgm_09221,
SRS_ModeMgm_09222, SRS_ModeMgm_09223, SRS_ModeMgm_09225,
SRS_ModeMgm_09226, SRS_ModeMgm_09228, SRS_ModeMgm_09229,
SRS_ModeMgm_09230, SRS_ModeMgm_09231, SRS_ModeMgm_09232,
SRS_ModeMgm_09233, SRS_ModeMgm_09234, SRS_ModeMgm_09235,
SRS_ModeMgm_09236, SRS_ModeMgm_09237, SRS_ModeMgm_09238,
SRS_ModeMgm_09239, SRS_ModeMgm_09240, SRS_ModeMgm_09241,
SRS_ModeMgm_09242, SRS_ModeMgm_09243, SRS_ModeMgm_09244,

SRS_ModeMgm_09245, SRS_ModeMgm_09246, SRS_ModeMgm_09247,
SRS_ModeMgm_09248, SRS_ModeMgm_09249, SRS_ModeMgm_09250,
SRS_ModeMgm_09251, SRS_ModeMgm_09252, SRS_ModeMgm_09253,
SRS_ModeMgm_09254, SRS_ModeMgm_09255, SRS_ModeMgm_09256,
SRS_ModeMgm_09270, SRS_ModeMgm_09271, SRS_ModeMgm_09272,
SRS_ModeMgm_09274, SRS_ModeMgm_09275, SRS_ModeMgm_09276,
SRS_ModeMgm_09277)