

Document Title	Specification of Ethernet Driver
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	430

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R21-11

Document Change History			
Date	Release	Changed by	Description
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • New runtime error and return code handling modified • Silent communication added • EthGetRxStatsApi added • Support SPI interface for external devices
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Eth_GeneralTypes removed from imported module list • EthGetDropCountApi renamed to EthGetCounterValuesApi • Buffer handling • WakeOnDataLine • Details MII Read/Right for Clause 22
2019-11-29	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • 2500Mbit Ethernet Support • Eth_TimeStampQualType base type defined • Changed Document Status from final to published
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Support of host controllers with multiple cores • Asynchronous frame transmission • Timestamp improvements • Multicast MAC address handling in Switches
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Minor corrections and adaptations

2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Quality of Service (QoS) support • Ethernet statistics counter access
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Eth_ControllerInit functionality merged into Eth_Init API • Development Error Tracer renamed to Default Error Tracer • IRQ handler API removed
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Change from Synchronous to Asynchronous API • gPTP Timestamp Support • Enhanced Production Errors • Changed Access to Statistic Frame Handling Registers
2014-03-31	4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> • Introduction of periodic call to Eth_SetControllerMode • Support of VLANs (Virtual Local Area Networks) • Editorial changes
2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Introduction of Eth_GeneralTypes.h • Support of API deviation for asynchronous implementation • Changes in API of EthIf_ProvideTxBuffer and EthIf_SetPhysAddr • Editorial changes • Removed chapter(s) on change documentation
2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Configurable MAC address based filtering • Detection of lost Ethernet frames • Buffer handling enhancement
2011-12-22	4.0.3	AUTOSAR Administration	<ul style="list-style-type: none"> • Description of buffer behaviour in Eth_SetControllerMode extended

2010-09-30	3.1.5	AUTOSAR Administration	<ul style="list-style-type: none"> • Enhanced development error detection for active controller before controller access • Further post-build configurable parameters • Improved description of 'XxxCtrlIdx' semantics • 'Instance ID' removed from Version Info (concerns Eth_GetVersionInfo API) • Additional development error in Eth_GetVersionInfo API
2010-02-02	3.1.4	AUTOSAR Administration	<ul style="list-style-type: none"> • Initial Release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Table of Contents

1	Introduction and functional overview	9
2	Acronyms and Abbreviations	11
3	Related documentation	12
3.1	Input documents	12
3.2	Related standards and norms	12
3.3	Related specification	13
4	Constraints and assumptions	14
4.1	Limitations	14
4.2	Applicability to car domains	14
5	Dependencies to other modules	15
5.1	Driver Services	15
6	Requirements Tracing	16
7	Functional specification	18
7.1	Ethernet BSW stack	18
7.1.1	Indexing scheme	19
7.1.2	Requirements	20
7.1.3	Buffer handling	22
7.1.4	Configuration description	25
7.2	Error Classification	26
7.2.1	Development Errors	26
7.2.2	Runtime Errors	27
7.2.3	Transient Faults	27
7.2.4	Production Errors	27
7.2.5	Extended Production Errors	27
8	API specification	32
8.1	Imported types	32
8.2	Type definitions	32
8.2.1	Eth_ConfigType	32
8.2.2	Eth_ModeType	32
8.2.3	Eth_StateType	34
8.2.4	Eth_FrameType	34
8.2.5	Eth_DataType	34
8.2.6	Eth_BufIdxType	35
8.2.7	Eth_RxStatusType	35
8.2.8	Eth_FilterActionType	36
8.2.9	Eth_TimeStampQualType	36
8.2.10	Eth_TimeStampType	36
8.2.11	Eth_TimeIntDiffType	37

8.2.12	Eth_RateRatioType	37
8.2.13	Eth_MacVlanType	38
8.2.14	Eth_CounterType	38
8.2.15	Eth_RxStatsType	40
8.2.16	Eth_TxStatsType	42
8.2.17	Eth_TxErrorCounterValuesType	43
8.2.18	Eth_SpiStatusType	44
8.3	Function definitions	45
8.3.1	Eth_Init	45
8.3.2	Eth_SetControllerMode	46
8.3.3	Eth_GetControllerMode	48
8.3.4	Eth_GetPhysAddr	49
8.3.5	Eth_SetPhysAddr	49
8.3.6	Eth_UpdatePhysAddrFilter	50
8.3.7	Eth_WriteMii	52
8.3.8	Eth_ReadMii	53
8.3.9	Eth_GetCounterValues	54
8.3.10	Eth_GetRxStats	55
8.3.11	Eth_GetTxStats	56
8.3.12	Eth_GetTxErrorCounterValues	57
8.3.13	Eth_GetSpiStatus	58
8.3.14	Eth_GetCurrentTime	59
8.3.15	Eth_EnableEgressTimeStamp	60
8.3.16	Eth_GetEgressTimeStamp	61
8.3.17	Eth_GetIngressTimeStamp	61
8.3.18	Eth_ProvideTxBuffer	62
8.3.19	Eth_Transmit	64
8.3.20	Eth_Receive	65
8.3.21	Eth_TxConfirmation	66
8.3.22	Eth_GetVersionInfo	67
8.4	Callback notifications	67
8.5	Scheduled functions	68
8.5.1	Eth_MainFunction	68
8.6	Expected interfaces	68
8.6.1	Mandatory Interfaces	68
8.6.2	Optional Interfaces	69
8.6.3	Configurable interfaces	70
9	Sequence diagrams	71
10	Configuration specification	72
10.1	How to read this chapter	72
10.2	Containers and configuration parameters	72
10.2.1	Eth	72
10.2.2	EthConfigSet	73
10.2.3	EthCtrlConfig	73
10.2.4	EthCtrlConfigEgress	79

10.2.4.1	EthCtrlConfigEgressFifo	81
10.2.4.2	EthCtrlConfigScheduler	83
10.2.4.3	EthCtrlConfigSchedulerPredecessor	83
10.2.4.4	EthCtrlConfigShaper	84
10.2.5	EthCtrlConfigIngress	86
10.2.5.1	EthCtrlConfigIngressFifo	86
10.2.6	EthCtrlConfigSpiConfiguration	88
10.2.7	EthDemEventParameterRefs	96
10.2.8	EthGeneral	100
10.2.8.1	EthCtrlOffloading	105
10.3	Published Information	107
A	Not applicable requirements	108

Known Limitations

Currently, chapter 5 does not describe the versions of dependent modules. Thus, a version check will extend the chapter.

1 Introduction and functional overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module Ethernet Driver.

In the AUTOSAR Layered Software Architecture, the Ethernet Driver belongs to the Microcontroller Abstraction Layer, or more precisely, to the Communication Drivers.

This indicates the main task of the Ethernet Driver:

Provide to the upper layer (Ethernet Interface) a hardware independent interface comprising multiple equal controllers. This interface shall be uniform for all controllers. Thus, the upper layer (Ethernet Interface) may access the underlying bus system in a uniform manner. The interface provides functionality for initialization, configuration and data transmission. The configuration of the Ethernet Driver however is bus specific, since it takes into account the specific features of the communication controller.

A single Ethernet Driver module supports only one type of controller hardware, but several controllers of the same type. Additionally, the Ethernet Driver has to be able to be interoperable with the Switch Driver, if it is in a managed mode. In this case, a special treatment of the Ethernet frame might be necessary to fit a specific interpretation by a Switch device afterwards. The Ethernet Driver's prefix requires a unique namespace. The Ethernet Interface can access different controller types using different Ethernet Drivers using this prefix. The decision which driver to use to access a particular controller is a configuration parameter of the Ethernet Interface.

Figure 1.1 depicts the lower part of the Ethernet stack. One Ethernet Interface accesses several controllers using one or several Ethernet Drivers.

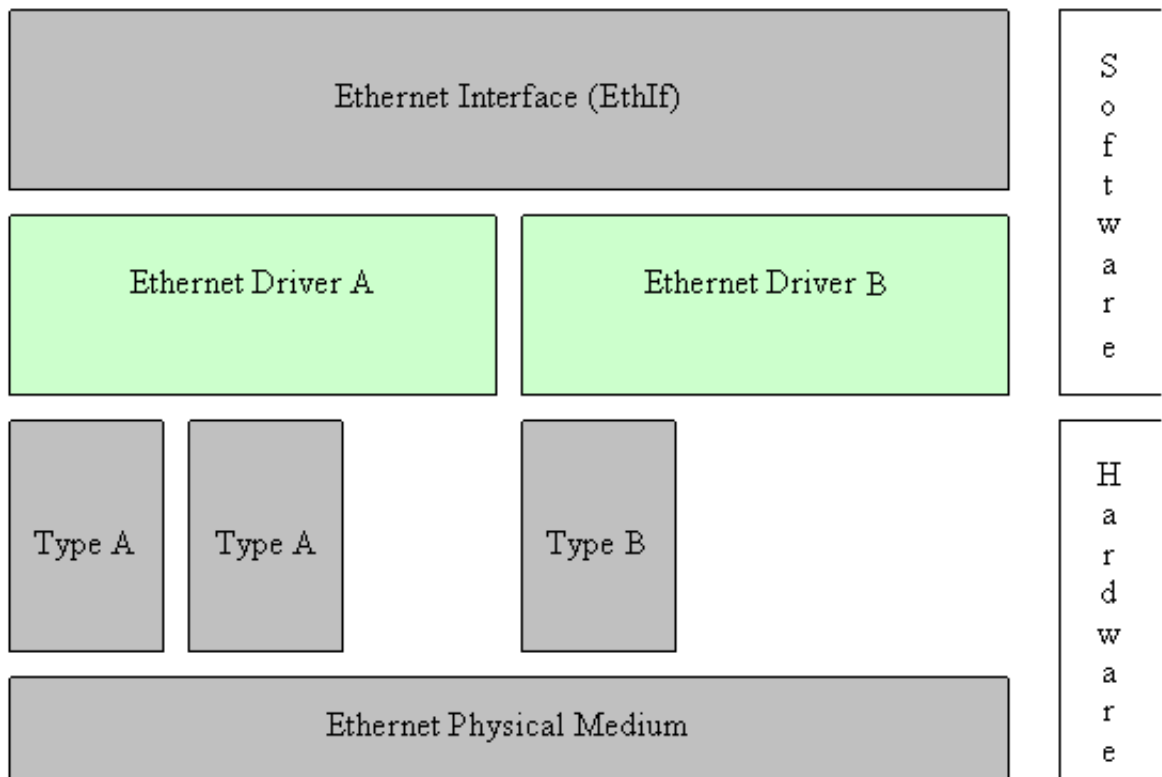


Figure 1.1: Ethernet stack module overview

Note: The Ethernet Driver is specified in a way that allows for object code delivery of the code module, following the "one-fits-all" principle, i.e. the entire configuration of the Ethernet Interface can be carried out without modifying any source code. Thus, the configuration of the Ethernet Driver can be carried out largely without detailed knowledge of the Ethernet Driver software.

2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations relevant to the Ethernet Driver module that are not included in the *AUTOSAR glossary* [1].

Abbreviation / Acronym:	Description:
EC	Ethernet controller
Eth	Ethernet Driver (AUTOSAR BSW module)
EthIf	Ethernet Interface (AUTOSAR BSW module)
EthTrcv	Ethernet Transceiver Driver (AUTOSAR BSW module)
ISR	Interrupt Service Routine
MACPHY	Ethernet controller and PHY integrated in one module
MCG	Module Configuration Generator
MII	Media Independent Interface (standardized Interface provided by Ethernet controllers to access Ethernet transceivers)
OA TC06	OPEN ALLIANCE Technical Committee 6 "10BASE-T1x MACPHY Serial interface"
OA TC10 [2]	OPEN ALLIANCE Technical Committee 10 "Automotive Ethernet Sleep/Wake-Up"
PLCA	Physical Layer Collision Avoidance - Media acces
TCP	Transmission Control Protocol
UDP	User Datagram Protocol

3 Related documentation

3.1 Input documents

- [1] Glossary
AUTOSAR_TR_Glossary
- [2] OPEN Sleep/Wake-up Specification for Automotive Ethernet
<http://www.opensig.org/Automotive-Ethernet-Specifications/>
- [3] General Specification of Basic Software Modules
AUTOSAR_SWS_BSWGeneral
- [4] Specification of Ethernet Interface
AUTOSAR_SWS_EthernetInterface
- [5] Specification of Ethernet Transceiver Driver
AUTOSAR_SWS_EthernetTransceiverDriver
- [6] Specification of Ethernet Switch Driver
AUTOSAR_SWS_EthernetSwitchDriver
- [7] General Requirements on SPAL
AUTOSAR_SRS_SPALGeneral
- [8] Specification of ECU State Manager
AUTOSAR_SWS_ECUSTateManager
- [9] Requirements on Ethernet Support in AUTOSAR
AUTOSAR_SRS_Ethernet
- [10] Specification of Default Error Tracer
AUTOSAR_SWS_DefaultErrorTracer

3.2 Related standards and norms

- [20] IEEE 802.3-2015
- [21] IEC 7498-1 The Basic Model, IEC Norm, 1994
- [22] IETF RFC 2819
- [23] IEEE Standard 802.1AS - 30 of March 2011
<http://standards.ieee.org/getieee802/download/802.1AS-2011.pdf>
- [24] IEEE 802.3cg-2019
- [25] OPEN ALLIANCE 10BASE-T1S MACPHY Serial interface (Sep 2020),
<http://www.opensig.org/Automotive-Ethernet-Specifications/>

3.3 Related specification

AUTOSAR provides a General Specification on Basic Software modules *SWS BSW General*, [3], which is also valid for Ethernet Driver.

Thus, the specification *SWS BSW General* shall be considered as additional and required specification for Ethernet Driver.

4 Constraints and assumptions

4.1 Limitations

The Ethernet Driver module is only able to handle a single thread of execution. The execution must not be pre-empted by itself.

It is not possible to transmit data which exceeds the available buffer size of the used controller. Longer data has to be transmitted using the Internet Protocol (IP) or Transmission Control Protocol (TCP).

Depending on the Ethernet hardware, it may become necessary that implementations deviate from API specifications in respect to the asynchronous/synchronous behaviour.

4.2 Applicability to car domains

The Ethernet BSW stack is intended to be used wherever high data rates are required but no hard real-time is required. Of course, it can also be used for less-demanding use cases, i.e. for low data rates.

5 Dependencies to other modules

This chapter lists the modules interacting with the Ethernet Driver module.

Modules that use Ethernet Driver module:

- Ethernet Interface (EthIf, see [4])
- Ethernet Transceiver Driver (EthTrcv see [5])
- Ethernet Switch Driver (EthSwT, see [6])

Modules used by the Ethernet Driver module:

- BSW Scheduler mechanisms for data consistency and main function handling.

Dependencies to other Modules:

- On certain systems the controller might share resources with other components (e.g. the MCU, Port), and may depend on their configuration. If those resources are within scope of the other modules (e.g. PLL configuration, memory mapping, etc.) the Ethernet Driver module does not take care of configuring those components but requires their preceding initialization.

5.1 Driver Services

[SWS_Eth_00282]{DRAFT} [If the Ethernet controller is on-chip, the Eth module shall not use any service of other drivers.] ([SRS_BSW_00005](#))

[SWS_Eth_00283]{DRAFT} [The function Eth_Init shall initialize all on-chip hardware resources that are used by the Ethernet controller. The only exception to this is the digital I/O pin configuration (of pins used by Ethernet controller), which is done by the port driver.] ([SRS_BSW_00377](#))

[SWS_Eth_00284]{DRAFT} [The Mcu module (SPAL see *SPAL General*[7]) shall configure register settings that are "shared" with other modules.] ([SRS_BSW_00005](#))

Implementation hint: The Mcu module shall be initialized before initializing the Ethernet module.

[SWS_Eth_00285]{DRAFT} [If an off-chip Ethernet controller is used (i.e. MACPHY), the Ethernet controller module shall use services of other MCAL drivers (e.g. SPI).] ([SRS_BSW_00005](#))

Implementation hint: If the Ethernet driver module uses services of other MCAL drivers (e.g. SPI), it must be ensured that these drivers are up and running before initializing the Ethernet module. The sequence of initialization of different drivers is partly specified in *SWS ECUStateManager* [8].

6 Requirements Tracing

The following tables reference the requirements specified in [9] and links to the fulfillment of these. Please note that if column “Satisfied by” is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[SRS_BSW_00005]	Modules of the μ C Abstraction Layer (MCAL) may not have hard coded horizontal interfaces	[SWS_Eth_00282] [SWS_Eth_00284] [SWS_Eth_00285]
[SRS_BSW_00101]	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	[SWS_Eth_00248] [SWS_Eth_00252] [SWS_Eth_00292]
[SRS_BSW_00159]	All modules of the AUTOSAR Basic Software shall support a tool based configuration	[SWS_Eth_00296]
[SRS_BSW_00323]	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	[SWS_Eth_00249] [SWS_Eth_00250] [SWS_Eth_00253] [SWS_Eth_00254] [SWS_Eth_00293] [SWS_Eth_00294]
[SRS_BSW_00369]	All AUTOSAR Basic Software Modules shall not return specific development error codes via the API	[SWS_Eth_00249] [SWS_Eth_00250] [SWS_Eth_00253] [SWS_Eth_00254] [SWS_Eth_00293] [SWS_Eth_00294]
[SRS_BSW_00377]	A Basic Software Module can return a module specific types	[SWS_Eth_00283]
[SRS_BSW_00416]	The sequence of modules to be initialized shall be configurable	[SWS_Eth_00248] [SWS_Eth_00252] [SWS_Eth_00292]
[SRS_Eth_00053]	SWS shall specify configuration	[SWS_Eth_00251] [SWS_Eth_00255]
[SRS_Eth_00072]	The Ethernet Interface shall provide VLAN support	[SWS_Eth_91001]
[SRS_Eth_00120]	Hardware access via MII and/or SPI	[SWS_Eth_91012] [SWS_Eth_91013]
[SRS_Eth_00121]	Configuration of forwarding rules	[SWS_Eth_91001]
[SRS_Eth_00127]	The Ethernet Driver shall provide statistic counter values	[SWS_Eth_00026] [SWS_Eth_00226] [SWS_Eth_00233] [SWS_Eth_91002] [SWS_Eth_91003] [SWS_Eth_91004] [SWS_Eth_91005] [SWS_Eth_91006]
[SRS_Eth_00146]	The Ethernet Driver shall provide 10BASE-T1S support	[SWS_Eth_00263] [SWS_Eth_00264] [SWS_Eth_00265] [SWS_Eth_00266] [SWS_Eth_00267] [SWS_Eth_00268] [SWS_Eth_00269] [SWS_Eth_00270] [SWS_Eth_00271] [SWS_Eth_00272] [SWS_Eth_00279] [SWS_Eth_00287] [SWS_Eth_00288] [SWS_Eth_00289] [SWS_Eth_00290] [SWS_Eth_00291] [SWS_Eth_00295] [SWS_Eth_00297] [SWS_Eth_00298] [SWS_Eth_00299]
[SRS_Eth_00147]	The Ethernet Driver shall support SPI	[SWS_Eth_00287] [SWS_Eth_00288] [SWS_Eth_00290] [SWS_Eth_00291] [SWS_Eth_00295] [SWS_Eth_91012] [SWS_Eth_91013]

Requirement	Description	Satisfied by
[SRS_Eth_00148]	The Ethernet Driver shall support MII	[SWS_Eth_00241] [SWS_Eth_00273] [SWS_Eth_00274] [SWS_Eth_00278] [SWS_Eth_00279] [SWS_Eth_00288] [SWS_Eth_00289] [SWS_Eth_00290] [SWS_Eth_00291]

7 Functional specification

7.1 Ethernet BSW stack

As part of the AUTOSAR Layered Software Architecture according to Figure 7.1, the Ethernet BSW modules also form a layered software stack. Figure 7.1 depicts the basic structure of this Ethernet BSW stack. The Ethernet Interface module accesses several controllers using the Ethernet Driver layer, which can be made up of several Ethernet Drivers modules.

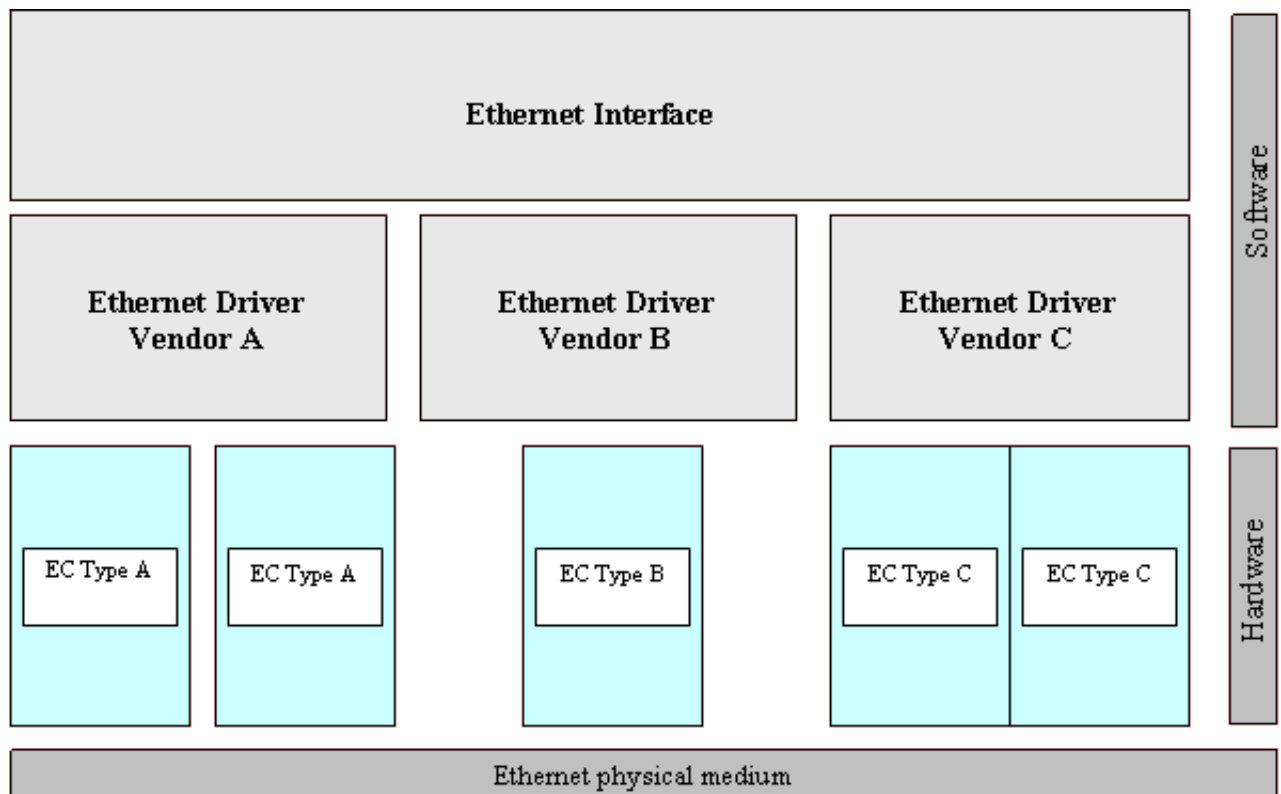


Figure 7.1: Basic Structure of the Ethernet BSW stack

Furthermore a Switch device might be connected to a dedicated controller index of an Ethernet Driver. This scenario leads to additional interaction between the Switch Driver and the Ethernet Driver (Figure 7.2). The Ethernet Driver ask the Switch Driver for a special treatment to ensure that the current Ethernet frame could be managed in the Switch later on.

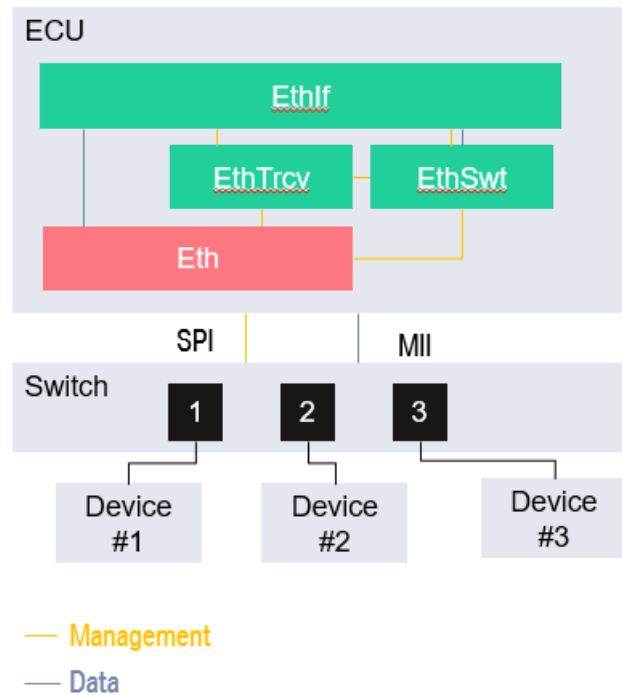


Figure 7.2: HW/SW basic structure including Switch device

7.1.1 Indexing scheme

Users of the Ethernet Driver identify controller resources using an indexing scheme as depicted in Figure 7.3.

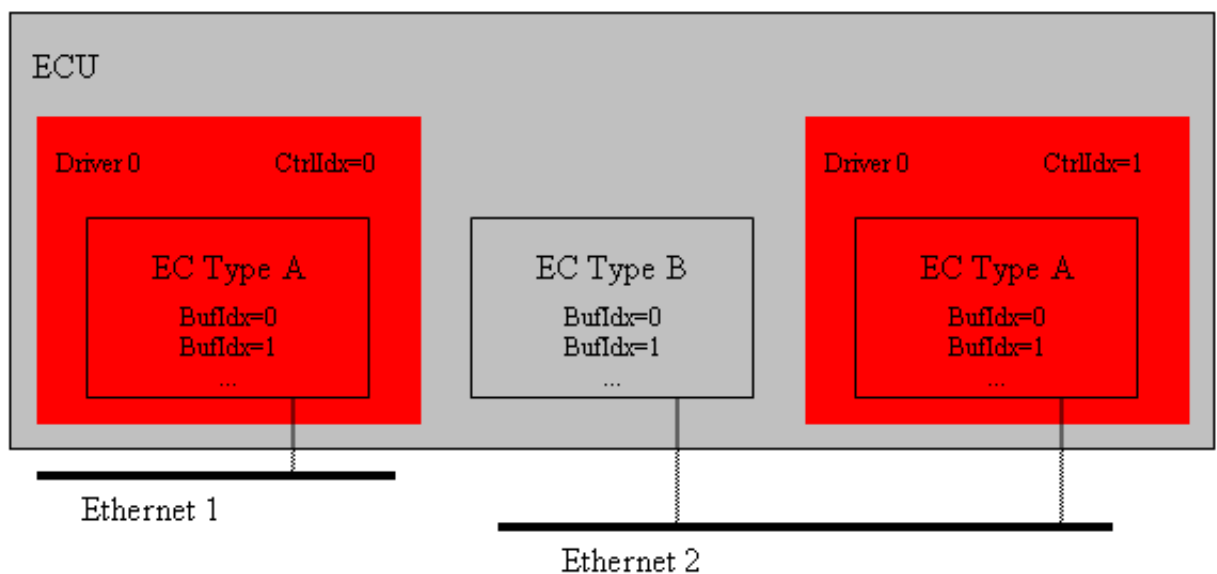


Figure 7.3: Ethernet Driver indexing scheme

[SWS_Eth_00003] [The Ethernet Driver is using a zero-based index to abstract the access for upper software layers. The parameter EthCtrlIdx [ECUC_Eth_00007] within configuration corresponds to parameter CtrlIdx used in the API.]()

[SWS_Eth_00004] [A buffer index (BufIdx) identifies an Ethernet buffer processed by Ethernet Driver API functions. Each controller's buffers are identified by buffer indexes 0 to (n-1) where n is the number of buffers processed by the corresponding controller. Buffer indexes are valid within a tuple <CtrlIdx, BufIdx> only. A BufIdx uniquely identifies the buffer used for an Ethernet Driver.]()

7.1.2 Requirements

This chapter lists requirements that shall be fulfilled by Ethernet Driver module implementations.

The Ethernet Driver module environment comprises all modules which are calling interfaces of the Ethernet Driver module.

[SWS_Eth_00005] [The Ethernet Driver module shall support pre-compile time, link time and post-build time configuration.]()

[SWS_Eth_00006] [The header file Eth.h shall include a software and specification version number.]()

[SWS_Eth_00007] [The Ethernet Driver module shall perform a consistency check between code files and header files based on pre-process-checking the version numbers of related code files and header files.]()

[SWS_Eth_00008] [In case development error detection is enabled for the Ethernet Driver module: The Ethernet Driver module shall check API parameters for validity and report detected errors to the DET.]()

DET API functions are specified in *SWS Default Error Tracer* [10].

[SWS_Eth_00011] [None of the Ethernet Driver module header files shall define global variables.]()

[SWS_Eth_00218] [The Ethernet Driver shall ensure that the base addresses of all reception and transmission buffers fulfill the memory alignment requirements for all AUTOSAR data types of the respective platform.]()

[SWS_Eth_00216] [For transmissions the Ethernet Controller shall enable hardware capabilities for the calculation of protocol checksums (offloading) according to the following list:

- a) for IPv4 frames if EthCtrlEnableOffloadChecksumIPv4 is set to TRUE
- b) for ICMP frames if EthCtrlEnableOffloadChecksumICMP is set to TRUE
- c) for TCP frames if EthCtrlEnableOffloadChecksumTCP is set to TRUE

d) for UDP frames if EthCtrlEnableOffloadChecksumUDP is set to TRUE.

In all other cases, the Ethernet Controller shall not manipulate the checksum fields.]()

[SWS_Eth_00217] [For reception the Ethernet Controller shall enable hardware capabilities to discard frames with mismatching protocol checksums (offloading) according to the following list:

a) for IPv4 frames if EthCtrlEnableOffloadChecksumIPv4 is set to TRUE

b) for ICMP frames if EthCtrlEnableOffloadChecksumICMP is set to TRUE

c) for TCP frames if EthCtrlEnableOffloadChecksumTCP is set to TRUE

d) for UDP frames if EthCtrlEnableOffloadChecksumUDP is set to TRUE.

In all other cases, the Ethernet Controller shall not consider the protocol checksum fields.]()

[SWS_Eth_00176] [The Global Time interfaces shall be used to access the time synchronization functionalities (see document [23]).]()

[SWS_Eth_00243] [Ethernet SW Driver shall call EthIf_TxConfirmation with Result set to E_OK to indicate a successful transmission; either from the Interrupt routine (in interrupt mode) or from the Eth_TxConfirmation routine in polling mode (if the notification has been enabled).]()

[SWS_Eth_00256] [Ethernet SW Driver shall call EthIf_TxConfirmation with Result set to E_NOT_OK if the transmission failed.]()

The call to EthIf_TxConfirmation with Result set to E_NOT_OK shall allow the upper layer to implement a simple locking scheme. It can rely on the fact that every time Eth_Transmit is called, EthIf_TxConfirmation will be called afterwards.

[SWS_Eth_00244] [Ethernet SW Driver shall call EthIf_RxIndication to indicate a successful reception either from the Interrupt routine (in interrupt mode) or from the Eth_Receive routine in polling mode (please refer to [SWS_Eth_00096]).]()

[SWS_Eth_00247] [The Switch Driver management API's:

- EthSwt_EthRxProcessFrame(),
- EthSwt_EthRxFinishedIndication(),
- EthSwt_EthTxPrepareFrame(),
- EthSwt_EthTxAdaptBufferLength(),
- EthSwt_EthTxProcessFrame() and
- EthSwt_EthTxFinishedIndication()

shall be used to to inform the Switch Driver about a required special treatment for Switch management purpose (see document *AUTOSAR_SWS_EthernetInterface* [4]).]()

7.1.3 Buffer handling

It is possible to use an optional software buffer handling mechanism. Buffer handling by Software is needed in case no Hardware feature is available that ensures a fair traffic scheduling and which avoids uncontrolled postponement of messages due to (too) strict priority handling.

The optional SW buffer handling is based on the so-called Credit Based Shaper algorithm (CBS) and which works by distributing messages into dedicated SW FIFOs based on their priority.

The CBS algorithm uses credits given in Bytes in order to ensure a fair distribution of transmission chances among the different SW FIFOs.

The SW buffer (SW Buffer Pools) and physical memory on PHY level (HW FIFO) used normally are expanded with the CBS on basis of so-called SW FIFOs. A transmission procedure consider at least the following points:

- Call of *Eth_ProvideTxBuffer()* will reserve a SW buffer pool of the SW buffer, store the given priority, return a pointer to the particular SW buffer pool and the unique buffer index of this SW buffer pool.
- The upper layer will copy the transmission data to the given SW buffer pool
- After data to transmit has been copied to the given SW buffer pool, the upper layer will call *Eth_Transmit()* with the according buffer index. The Ethernet driver will add the given buffer index to the SW FIFO according to the provided priority, which was previously given within the call of *Eth_ProvideTxBuffer()*
- SW FIFOs are handled according to the CBS algorithm. If an element of the SW FIFO is rated to be transmitted by the CBS, the SW buffer pool which corresponds to the buffer index (given by the element of the SW FIFO) is copied to the HW FIFO. The SW buffer pool is released and available for further transmission requests.

The CBS, its elements and the different API calls involved are depicted in the following

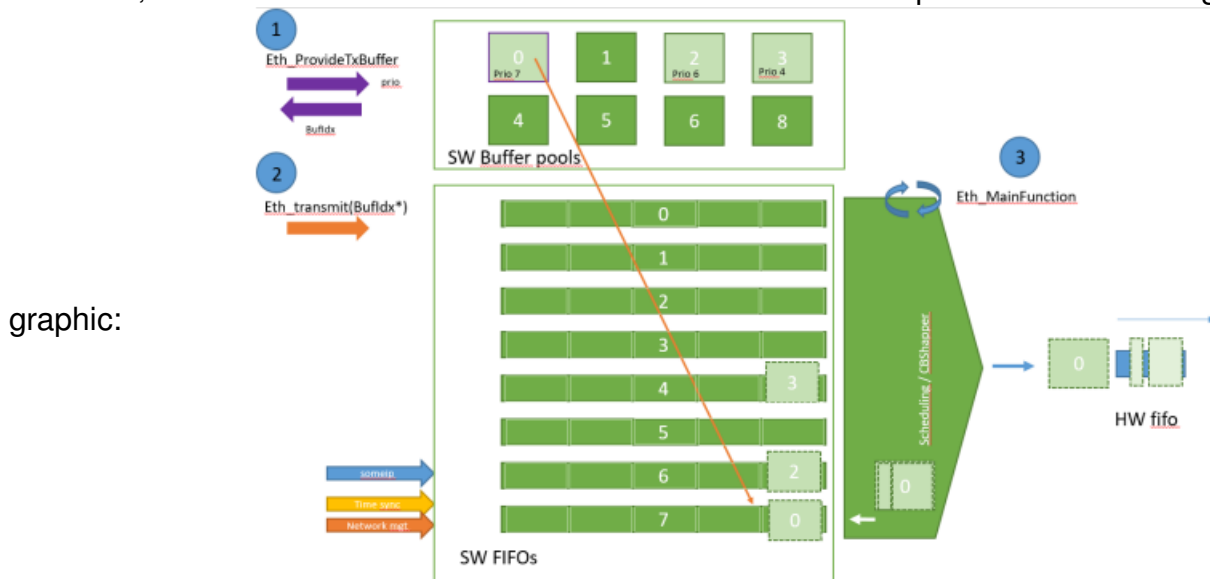


Figure 7.4

[SWS_Eth_00263] [If the configuration parameter EthCtrlConfigSwBufferHandling is set to TRUE, then the optional SW buffer handling shall be enabled.] ([SRS_Eth_00146](#))

Note: If buffer handling is supported by hardware, it is recommended to deactivate the software buffer handling by setting EthCtrlConfigSwBufferHandling to FALSE.

[SWS_Eth_00299]{DRAFT} [If the configuration parameter EthCtrlConfigSwBufferHandling is set to TRUE, then one SW FIFO shall be available per configured EthCtrlConfigEgressFifo.] ([SRS_Eth_00146](#))

Note: Each SW FIFO configuration is derived from exactly one given EthCtrlConfigEgressFifo.

[SWS_Eth_00298]{DRAFT} [If the configuration parameter EthCtrlConfigSwBufferHandling is set to TRUE, then each SW FIFO shall handle frames according to the configured priorities given by EthCtrlConfigEgressFifoPriorityAssignment aggregated by the according EthCtrlConfigEgressFifo. If no EthCtrlConfigEgressFifoPriorityAssignment is configured, then any priority shall be handled by this SW FIFO.] ([SRS_Eth_00146](#))

[SWS_Eth_00264] [If the config parameter EthCtrlConfigSwBufferHandling is set to TRUE, then each SW FIFO shall have the total amount of elements given by EthCtrlConfigEgressFifoBufTotal ([\[ECUC_Eth_00050\]](#)). Each element shall be of type Eth_BuflIdxType.] ([SRS_Eth_00146](#))

Note: SW FIFOs have to store the buffer index which was reserved in a previous call of Eth_ProvideTxBuffer().

[SWS_Eth_00297]{DRAFT} [If the config parameter EthCtrlConfigSwBufferHandling is set to TRUE, then a SW buffer shall be provided with a size according to all configured EthCtrlConfigEgressFifo's. The size of each EthCtrlConfigEgressFifo shall be cal-

culated in bytes by considering the following formula: size of one EthCtrlConfigEgressFifo = EthCtrlConfigEgressFifoBufTotal * EthCtrlConfigEgressFifoBufLenByte.]([SRS_Eth_00146](#))

Note: Along with the SW buffer, the Ethernet driver has to handle the mapping between the given priority (provided by *Eth_ProvideTxBuffer*) and the according buffer index of the reserved SW puffer pool.

[SWS_Eth_00265] [All SW FIFOs shall follow the criteria listed here:

- Each SW FIFO shall be filled and read out according to FIFO principles.
- The SW FIFOs shall support independent configuration regardless of any settings on the rest of SW FIFOs.

]([SRS_Eth_00146](#))

Note: Regarding last bulletin point, it is recommended to use different settings of EthCtrlConfigShaperIdleSlope and EthCtrlConfigShaperSendSlope per SW FIFO. This should support unnecessary transmission delay of frames which reside in the lower priority SW FIFOs. Therefore, a slower recovery of credits for the higher priority SW FIFOs could be configured.

[SWS_Eth_00266] [SW FIFOs shall be iterated and their credits account be updated in the following way and order:

- Credits are only accumulated for SW FIFOs which have at least one message queued inside them. Empty SW FIFOs do not accumulate credits and their credits counter shall be set to 0.
- Iterate through all SW FIFOs, starting at the highest priority SW FIFO and descending, and add the amount of credits accumulated since the last *Eth_MainFunction()* call. The amount of credits accumulated is given by EthCtrlConfigShaperIdleSlope.
- If a SW FIFO reaches EthCtrlConfigShaperMaxCredit then the credit accumulation shall stop at that point and the next SW FIFO in the row is handled.

]([SRS_Eth_00146](#))

[SWS_Eth_00267] [If *Eth_ProvideTxBuffer()* is called and EthCtrlConfigSwBufferHandling is set to TRUE, a tuple of BuffIdx pointer to the SW buffer pool (which is returned) and priority (provided by argument of the current function call) shall be stored.]([SRS_Eth_00146](#))

[SWS_Eth_00268] [When *Eth_Transmit()* is called and EthCtrlConfigSwBufferHandling is set to TRUE, the given BuffIdx pointer shall be assigned to the SW FIFO with the EthCtrlConfigEgressFifoPriorityAssignment which matches the priority given previously by the previous *Eth_ProvideTxBuffer()* call (see [[SWS_Eth_00267](#)]).]([SRS_Eth_00146](#))

[SWS_Eth_00269] [Upon calling Eth_Transmit(), messages from the SW FIFOs shall be moved to the HW FIFO as described in [\[SWS_Eth_00271\]](#).] ([SRS_Eth_00146](#))

[SWS_Eth_00270] [In the context of Eth_MainFunction(), the following actions shall be executed in the given order:

- All SW FIFOs shall be iterated and their credits account updated as specified in [\[SWS_Eth_00266\]](#).
- All SW FIFOs shall be iterated and checked for messages which are ready for transmission.
- For each SW FIFO iterated, transmission shall be attempted as specified in [\[SWS_Eth_00271\]](#).

] ([SRS_Eth_00146](#))

[SWS_Eth_00271] [Messages queued inside SW FIFOs shall be moved to the HW FIFO in the following way and order:

- Loop through each SW FIFO, starting at the highest priority in descending order.
- Move the first message inside a SW FIFO whose credit account is at least Eth_CtrlConfigShaperMinCredit to the HW FIFO.
- If EthTrcvPhysLayerPLCAMaxBurstCount is set to 0 then only one message is moved to the HW FIFO and the iteration to the next SW FIFOs is stopped.
- Reduce the SW FIFOs credits based on its EthCtrlConfigShaperSendSlope configuration.
- If EthTrcvPhysLayerPLCAMaxBurstCount is higher than 0 then proceed on top as specified in [\[SWS_Eth_00272\]](#).

] ([SRS_Eth_00146](#))

[SWS_Eth_00272] [If EthTrcvPhysLayerPLCAMaxBurstCount is higher than 0, as many messages as EthTrcvPhysLayerPLCAMaxBurstCount indicates shall be moved additionally to the HW FIFO. The selection of each message shall be based on the requirements in [\[SWS_Eth_00271\]](#).] ([SRS_Eth_00146](#))

7.1.4 Configuration description

[SWS_Eth_00012] [The Ethernet Driver module shall provide an XML file that contains the data, which is required for the SW identification (it shall contain the vendor identification, module ID and software version information), configuration and integration process. This file should describe vendor specific configuration parameters as well as it should contain recommended configuration parameter values.] ()

[SWS_Eth_00125] [The MCG shall read the ECU configuration description of the Ethernet Driver module(s). Ethernet Driver related configuration data is contained in the Ethernet Driver module configuration description.] ()

[SWS_Eth_00126] [The MCG shall ensure the consistency of the generated configuration data.] ()

[SWS_Eth_00013] [The configuration of the Ethernet Driver module shall be calculated at ECU configuration time. None of the communication parameters shall be calculated at runtime.] ()

[SWS_Eth_00014] [The start address of post-build time configuration data shall be passed during module initialization.] ()

Note: For more details regarding the initialization please refer to section [8.3.1](#).

An assignment of those configuration classes to configuration parameters can be found in chapter [10](#).

A detailed description of all Ethernet Driver related configuration parameters can be found in chapter [10](#) of this document.

7.2 Error Classification

Section 7.2 "Error Handling" of the document "*General Specification of Basic Software Modules*" [[3](#)], describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

7.2.1 Development Errors

[SWS_Eth_00016] [

Type of error	Related error code	Error value
Invalid controller index	ETH_E_INV_CTRL_IDX	0x01
Eth module or controller was not initialized	ETH_E_UNINIT	0x02
Invalid pointer in parameter list	ETH_E_PARAM_POINTER	0x03
Invalid parameter	ETH_E_INV_PARAM	0x04
Invalid mode	ETH_E_INV_MODE	0x05

] ()

7.2.2 Runtime Errors

[SWS_Eth_91014] [

Type of error	Related error code	Error value
Failure or incorrect communication with the Ethernet Controller	ETH_E_COMMUNICATION	0x06

]()

7.2.3 Transient Faults

There are no transient faults.

7.2.4 Production Errors

There are no production errors.

7.2.5 Extended Production Errors

Extended production errors are handled as events of the Diagnostic Event Manager. The event IDs are defined in the following tables, while the actual values are assigned externally by the configuration of the Diagnostic Event Manager, and are included in the module via Dem.h.

[SWS_Eth_00173] [

Error Name:	ETH_E_ACCESS	
Short Description:	Ethernet Controller Access Failure.	
Long Description:	Monitors the access to the Ethernet Controller.	
Detection Criteria:	Fail	When access to the Ethernet Controller fails the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.
	Pass	When access to the Ethernet Controller succeeds the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]()

[SWS_Eth_00174] [

Error Name:	ETH_E_RX_FRAMES_LOST	
Short Description:	Ethernet Frames Lost.	
Long Description:	Monitors the loss of Ethernet frames during reception.	
Detection Criteria:	Fail	When lost frames are detected the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.
	Pass	When Ethernet Controller is successfully initialized the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]()

[SWS_Eth_00219] [

Error Name:	ETH_E_CRC	
Short Description:	CRC Failure	
Long Description:	Monitors invalid Ethernet frames during reception.	
Detection Criteria:	Fail	When invalid frames are detected the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.
	Pass	When Ethernet Controller is successfully initialized the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]()

[SWS_Eth_00220] [

Error Name:	ETH_E_UNDERSIZEFRAME	
Short Description:	Frame Size Underflow	
Long Description:	Monitors undersize Ethernet frames during reception.	
Detection Criteria:	Fail	When invalid frames are detected the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.



△

	Pass	When Ethernet Controller is successfully initialized the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]()

[SWS_Eth_00221] [

Error Name:	ETH_E_OVERSIZEFRAME	
Short Description:	Frame Size Overflow	
Long Description:	Monitors oversize Ethernet frames during reception.	
Detection Criteria:	Fail	When invalid frames are detected the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.
	Pass	When Ethernet Controller is successfully initialized the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]()

[SWS_Eth_00222] [

Error Name:	ETH_E_ALIGNMENT	
Short Description:	Frame Alignment Error	
Long Description:	Monitors alignment errors.	
Detection Criteria:	Fail	When invalid frames are detected the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.
	Pass	When Ethernet Controller is successfully initialized the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]()

[SWS_Eth_00223] [

Error Name:	ETH_E_SINGLECOLLISION	
Short Description:	Single Frame Collision	
Long Description:	Monitors Ethernet single frame collision.	
Detection Criteria:	Fail	When frame collisions are detected the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.
	Pass	When Ethernet Controller is successfully initialized the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]()

[SWS_Eth_00224] [

Error Name:	ETH_E_MULTIPLECOLLISION	
Short Description:	Multiple Frame Collision	
Long Description:	Monitors Ethernet multiple frame collision.	
Detection Criteria:	Fail	When fram collisions are detected the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.
	Pass	When Ethernet Controller is successfully initialized the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]()

[SWS_Eth_00225] [

Error Name:	ETH_E_LATECOLLISION	
Short Description:	Late Frame Collision	
Long Description:	Monitors Ethernet late frame collision.	
Detection Criteria:	Fail	When frame collisions are detected the module shall report the extended production error with event status DEM_EVENT_STATUS_PREFAILED to DEM.



△

	Pass	When Ethernet Controller is successfully initialized the module shall report the extended production error with event status DEM_EVENT_STATUS_PREPASSED to DEM.
Secondary Parameters:	None.	
Time Required:	None.	
Monitor Frequency	None.	

]0

8 API specification

8.1 Imported types

This chapter lists all types included from the following modules:

[SWS_Eth_00026] [

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
ComStack_Types	ComStack_Types.h	BufReq_ReturnType
Dem	Rte_Dem_Type.h	Dem_EventIdType
	Rte_Dem_Type.h	Dem_EventStatusType
Icu	Icu.h	Icu_ChannelType
Spi	Spi.h	Spi_ChannelType
	Spi.h	Spi_DataBufferType
	Spi.h	Spi_NumberOfDataType
	Spi.h	Spi_SequenceType
	Spi.h	Spi_StatusType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

] ([SRS_Eth_00127](#))

8.2 Type definitions

8.2.1 Eth_ConfigType

[SWS_Eth_00156] [

<i>Name</i>	Eth_ConfigType
<i>Kind</i>	Structure
<i>Description</i>	Implementation specific structure of the post build configuration
<i>Available via</i>	Eth.h

]()

8.2.2 Eth_ModeType

[SWS_Eth_91008]{OBSOLETE} [

Name	Eth_ModeType (obsolete)		
Kind	Enumeration		
Range	ETH_MODE_DOWN	0x00	disable the Ethernet Rx/Tx communication and set its corresponding hardware to a lowpower sleep mode and initiate a sleep process, if the Ethernet hardware provide such a feature. E.g. request a sleep on data line for OA TC10 compatible Ethernet hardware
	ETH_MODE_ACTIVE	0x01	enable the Ethernet Rx/Tx communication and set its corresponding hardware to an power on mode
	ETH_MODE_ACTIVE_WITH_WAKEUP_REQUEST	0x02	enable the Ethernet Rx/Tx communication , set its corresponding Ethernet hardware to an power on mode and request an wake-up on the network, if the Ethernet hardware provide a wake-up feature. E.g. wake-up on data line for OA TC10 compatible Ethernet hardware
Description	<p>This is an generic type and used in the layers of the Ethernet communication stack (e.g. EthIf, Eth, EthSwT, EthTrcv) to enable and disable, respectively, the Ethernet communication channel and set the corresponding hardware (e.g. Ethernet controller, Ethernet Switch port, Ethernet transceiver) to an lowpower sleep and power on mode, respectively.</p> <p>Tags: atp.Status=obsolete</p>		
Available via	Eth_GeneralTypes.h		

]()

[SWS_Eth_91011]{DRAFT} [

Name	Eth_ModeType (draft)		
Kind	Enumeration		
Range	ETH_MODE_DOWN	0x00	disable the Ethernet Rx/Tx communication and set its corresponding hardware to a low-power sleep mode and initiate a sleep process, if the Ethernet hardware provides such a feature. E.g. request a sleep on data line for OA TC10 compatible Ethernet hardware
	ETH_MODE_ACTIVE	0x01	enable the Ethernet Rx/Tx communication and set its corresponding hardware to a power-on mode
	ETH_MODE_ACTIVE_WITH_WAKEUP_REQUEST	0x02	enable the Ethernet Rx/Tx communication, set its corresponding Ethernet hardware to a power-on mode and request an wake-up on the network, if the Ethernet hardware provides a wake-up feature. E.g. wake-up on data line for OA TC10 compatible Ethernet hardware
	ETH_MODE_ACTIVE_TX_OFFLINE	0x03	disable the Tx communication path. Please note, this is only used in EthIf to support silent communication (see COMM_SILENT_COMMUNICATION). In silent communication all transmission requests are rejected





Description	This is an generic type and used in the layers of the Ethernet communication stack (e.g. EthIf, Eth, EthSwT, EthTrcv) to enable and disable, respectively, the Ethernet communication channel and set the corresponding hardware (e.g. Ethernet controller, Ethernet Switch port, Ethernet transceiver) to a low-power sleep and power on mode, respectively. The type also supports to transfer a wake-up request from the services layer (ComM) to the communication drivers (EthTrcv). This could be used e.g. for Ethernet hardware that has the capability to wake-up and sleep on data line (see OA TC10) Tags: atp.Status=draft
Available via	Eth_GeneralTypes.h

]()

8.2.3 Eth_StateType

[SWS_Eth_00159] [

Name	Eth_StateType		
Kind	Enumeration		
Range	ETH_STATE_UNINIT	0x00	Driver is not yet configured
	ETH_STATE_INIT	0x01	Driver is configured
Description	Status supervision used for Development Error Detection. The state shall be available for debugging.		
Available via	Eth_GeneralTypes.h		

]()

8.2.4 Eth_FrameType

[SWS_Eth_00160] [

Name	Eth_FrameType		
Kind	Type		
Derived from	uint16		
Description	This type defines the Ethernet frame type used in the Ethernet frame header		
Available via	Eth_GeneralTypes.h		

]()

8.2.5 Eth_DataType

[SWS_Eth_00161] [

Name	Eth_DataType	
Kind	Type	
Derived from	Basetype	Variation
	uint16	8 or 16 bit CPU
	uint32	32 bit CPU
	uint8	8, 16 or 32 bit CPU
Description	This type defines the Ethernet data type used for data transmission. Its definition depends on the used CPU.	
Available via	Eth_GeneralTypes.h	

]()

8.2.6 Eth_BufIdxType

[SWS_Eth_00175] [

Name	Eth_BufIdxType	
Kind	Type	
Derived from	uint32	
Description	Ethernet buffer identifier type.	
Available via	Eth_GeneralTypes.h	

]()

8.2.7 Eth_RxStatusType

[SWS_Eth_00162] [

Name	Eth_RxStatusType		
Kind	Enumeration		
Range	ETH_RECEIVED	0x00	Ethernet frame has been received, no further frames available
	ETH_NOT_RECEIVED	0x01	Ethernet frame has not been received, no further frames available
	ETH_RECEIVED_MORE_DATA_AVAILABLE	0x02	Ethernet frame has been received, more frames are available
Description	Used as out parameter in Eth_Receive() indicates whether a frame has been received and if so, whether more frames are available or frames got lost.		
Available via	Eth_GeneralTypes.h		

]()

8.2.8 Eth_FilterActionType

[SWS_Eth_00163] [

Name	Eth_FilterActionType		
Kind	Enumeration		
Range	ETH_ADD_TO_FILTER	0x00	add the MAC address to the filter, meaning allow reception
	ETH_REMOVE_FROM_FILTER	0x01	remove the MAC address from the filter, meaning reception is blocked in the lower layer
Description	The Enumeration Type Eth_FilterActionType describes the action to be taken for the MAC address given in *PhysAddrPtr.		
Available via	Eth_GeneralTypes.h		

]()

8.2.9 Eth_TimeStampQualType

[SWS_Eth_00177] [

Name	Eth_TimeStampQualType		
Kind	Enumeration		
Range	ETH_VALID	0	–
	ETH_INVALID	1	–
	ETH_UNCERTAIN	2	–
Description	Depending on the HW, quality information regarding the evaluated time stamp might be supported. If not supported, the value shall be always Valid. For Uncertain and Invalid values, the upper layer shall discard the time stamp.		
Available via	Eth_GeneralTypes.h		

]()

8.2.10 Eth_TimeStampType

[SWS_Eth_00178] [

Name	Eth_TimeStampType		
Kind	Structure		
Elements	nanoseconds		
	Type	uint32	
	Comment	Nanoseconds part of the time	
	seconds		
	Type	uint32	





	Comment	32 bit LSB of the 48 bits Seconds part of the time
	secondsHi	
	Type	uint16
	Comment	16 bit MSB of the 48 bits Seconds part of the time
Description	Variables of this type are used for expressing time stamps including relative time and absolute calendar time. The absolute time starts at 1970-01-01. 0 to 281474976710655s == 3257812230d [0xFFFF FFFF FFFF] 0 to 999999999ns [0x3B9A C9FF] invalid value in nanoseconds: [0x3B9A CA00] to [0x3FFF FFFF] Bit 30 and 31 reserved, default: 0	
Available via	Eth_GeneralTypes.h	

]()

8.2.11 Eth_TimeIntDiffType

[SWS_Eth_00179] [

Name	Eth_TimeIntDiffType	
Kind	Structure	
Elements	diff	
	Type	Eth_TimeStampType
	Comment	time difference
	sign	
	Type	boolean
	Comment	Positive (True) / negative (False) time
Description	Variables of this type are used to express time differences.	
Available via	Eth_GeneralTypes.h	

]()

8.2.12 Eth_RateRatioType

[SWS_Eth_00180] [

Name	Eth_RateRatioType	
Kind	Structure	
Elements	IngressTimeStampDelta	
	Type	Eth_TimeIntDiffType
	Comment	IngressTimeStampSync2 - IngressTimeStampSync1
	OriginTimeStampDelta	
	Type	Eth_TimeIntDiffType





	Comment	OriginTimeStampSync2[FUP2] - OriginTimeStampSync1[FUP1]
Description	Variables of this type are used to express frequency ratios.	
Available via	Eth_GeneralTypes.h	

]()

8.2.13 Eth_MacVlanType

[SWS_Eth_91001] [

Name	Eth_MacVlanType	
Kind	Structure	
Elements	MacAddr	
	Type	Array of uint8
	Size	6
	Comment	Specifies the MAC address [0..255,0..255,0..255,0..255,0..255,0..255]
	VlanId	
	Type	uint16
	Comment	Specifies the VLAN address 0..65535
	SwitchPort	
	Type	uint32
Comment	Specifies the ports of the switch as bit mask (0x00000001->Port0, 0x80000001->Port31+Port0)	
Description	<p>This type is used to read out addresses from the address resolution logic (ARL) table of the switch.</p> <pre>typedef struct { uint8 MacAddr[6U]; uint16 VlanId; uint32 SwitchPort; } Eth_MacVlanType;</pre> <p>In case of Macaddr contains a Multicast Address MacVlanType.SwitchPort shall be handled as Bitmask, each bit represents a Switch Port, Bit 0 represents EthSwichtPortIdx = 0 , Bit 1 represents EthSwichtPortIdx = 1 and so on. In case of Macaddr contains not a Multicast Address MacVlanType.SwitchPort shall be handled as a value representing the EthSwitchPortIdx.</p>	
Available via	Eth_GeneralTypes.h	

] ([SRS_Eth_00121](#), [SRS_Eth_00072](#))

8.2.14 Eth_CounterType

[SWS_Eth_91007] [

Name	Eth_CounterType	
Kind	Structure	
Elements	DropPktBufOverrun	
	Type	uint32
	Comment	dropped packets due to buffer overrun





DropPktCrc	
Type	uint32
Comment	dropped packets due to CRC errors
UndersizePkt	
Type	uint32
Comment	number of undersize packets which were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed. (see IETF RFC 1757)
OversizePkt	
Type	uint32
Comment	number of oversize packets which are longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed. (see IETF RFC 1757)
AlgnmtErr	
Type	uint32
Comment	number of alignment errors, i.e. packets which are received and are not an integral number of octets in length and do not pass the CRC.
SqeTestErr	
Type	uint32
Comment	SQE test error according to IETF RFC1643 dot3StatsSQETestErrors
DisclnbdPkt	
Type	uint32
Comment	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space. (see IETF RFC 2233 ifInDiscards)
ErrInbdPkt	
Type	uint32
Comment	total number of erroneous inbound packets
DiscOtbdPkt	
Type	uint32
Comment	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space. (see IETF RFC 2233 ifOutDiscards)
ErrOtbdPkt	
Type	uint32
Comment	total number of erroneous outbound packets
SnglCollPkt	
Type	uint32
Comment	Single collision frames: A count of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision. (see IETF RFC1643 dot3StatsSingleCollisionFrames)
MultCollPkt	
Type	uint32
Comment	Multiple collision frames: A count of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision. (see IETF RFC1643 dot3StatsMultipleCollisionFrames)





	DfrdPkt	
	Type	uint32
	Comment	Number of deferred transmission: A count of frames for which the first transmission attempt on a particular interface is delayed because the medium is busy. (see IETF RFC1643 dot3StatsDeferred Transmissions)
	LatCollPkt	
	Type	uint32
	Comment	Number of late collisions: The number of times that a collision is detected on a particular interface later than 512 bit-times into the transmission of a packet. (see IETF RFC1643 dot3StatsLateCollisions)
	HwDepCtr0	
	Type	uint32
	Comment	hardware dependent counter value
	HwDepCtr1	
	Type	uint32
	Comment	hardware dependent counter value
	HwDepCtr2	
	Type	uint32
Comment	hardware dependent counter value	
HwDepCtr3		
Type	uint32	
Comment	hardware dependent counter value	
Description	Statistic counter for diagnostics.	
Available via	Eth_GeneralTypes.h	

]()

8.2.15 Eth_RxStatsType

[SWS_Eth_91002] [

Name	Eth_RxStatsType	
Kind	Structure	
Elements	RxStatsDropEvents	
	Type	uint32
	Comment	The total number of events in which packets were dropped by the probe due to lack of resources. Also described in IETF RFC 2819 MIB etherStatsDropEvents.
	RxStatsOctets	
	Type	uint32
	Comment	The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets). Also described in IETF RFC 2819 MIB etherStatsOctets.
RxStatsPkts		





Type	uint32
Comment	The total number of packets (including bad packets, broadcast packets, and multicast packets) received. Also described in IETF RFC 2819 MIB etherStatsPkts
RxStatsBroadcastPkts	
Type	uint32
Comment	The total number of good packets received that were directed to the broadcast address. Also described in IETF RFC 2819 MIB etherStats BroadcastPkts
RxStatsMulticastPkts	
Type	uint32
Comment	The total number of good packets received that were directed to a multicast address. Also described in IETF RFC 2819 MIB etherStats MulticastPkts.
RxStatsCrcAlignErrors	
Type	uint32
Comment	The total number of packets received that had a length of between 64 and 1518 octets that had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Also described in IETF RFC 2819 MIB etherStatsCRCAlignErrors
RxStatsUndersizePkts	
Type	uint32
Comment	The total number of packets received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed. Also described in IETF RFC 2819 MIB ether StatsUndersizePkts.
RxStatsOversizePkts	
Type	uint32
Comment	The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed. Also described in IETF RFC 2819 MIB ether StatsOversizePkts
RxStatsFragments	
Type	uint32
Comment	The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Also described in IETF RFC 2819 MIB etherStats Fragments.
RxStatsJabbers	
Type	uint32
Comment	The total number of packets received that were longer than 1518 octets, and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Also described in IETF RFC 2819 MIB etherStatsJabbers.
RxStatsCollisions	
Type	uint32
Comment	The best estimate of the total number of collisions on this Ethernet segment. Also described in IETF RFC 2819 MIB etherStatsCollisions
RxStatsPkts64Octets	





	Type	uint32
	Comment	The total number of packets (including bad packets) received that were 64 octets in length. Also described in IETF RFC 2819 MIB etherStats Pkts64Octets
	RxStatsPkts65to127Octets	
	Type	uint32
	Comment	The total number of packets (including bad packets) received that were between 65 and 127 octets in length. Also described in IETF RFC 2819 MIB etherStatsPkts65to127Octets
	RxStatsPkts128to255Octets	
	Type	uint32
	Comment	The total number of packets (including bad packets) received that were between 128 and 255 octets in length. Also described in IETF RFC 2819 MIB etherStatsPkts128to255Octets
	RxStatsPkts256to511Octets	
	Type	uint32
	Comment	The total number of packets (including bad packets) received that were between 256 and 511 octets in length. Also described in IETF RFC 2819 MIB etherStatsPkts256to511Octets
	RxStatsPkts512to1023Octets	
	Type	uint32
	Comment	The total number of packets (including bad packets) received that were between 512 and 1023 octets in length. Also described in IETF RFC 2819 MIB etherStatsPkts512to1023Octets
	RxStatsPkts1024to1518Octets	
	Type	uint32
	Comment	The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length. Also described in IETF RFC 2819 MIB etherStatsPkts1024to1518Octets
	RxUnicastFrames	
	Type	uint32
	Comment	The number of subnetwork-unicast packets delivered to a higher-layer protocol. Also described in IETF RFC1213 MIB ifInUcastPkts
Description	Statistic counter for diagnostics.	
Available via	Eth_GeneralTypes.h	

](SRS_Eth_00127)

8.2.16 Eth_TxStatsType

[SWS_Eth_91003] [

Name	Eth_TxStatsType	
Kind	Structure	
Elements	TxNumberOfOctets	
	Type	uint32
	Comment	The total number of octets transmitted out of the interface, including framing characters. Also described in IETF RFC1213 MIB ifOutOctets.





	TxNUcastPkts	
	Type	uint32
	Comment	The total number of packets that higher-level protocols requested be transmitted to a non-unicast (i.e., a subnetwork-broadcast or subnetwork-multicast) address, including those that were discarded or not sent. Also described in IETF RFC1213 MIB ifOutNUcastPkts
	TxUniCastPkts	
	Type	uint32
	Comment	The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent. Also described in IETF RFC1213 MIB ifOutUcastPkts.
Description	Statistic counter for diagnostics.	
Available via	Eth_GeneralTypes.h	

](SRS_Eth_00127)

8.2.17 Eth_TxErrorCounterValuesType

[SWS_Eth_91004] [

Name	Eth_TxErrorCounterValuesType	
Kind	Structure	
Elements	TxDroppedNoErrorPkts	
	Type	uint32
	Comment	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space. Also described in IETF RFC1213 MIB ifOutDiscards
	TxDroppedErrorPkts	
	Type	uint32
	Comment	transmitted because of errors. Also described in IETF RFC1213 MIB ifOutErrors
	TxDeferredTrans	
	Type	uint32
	Comment	A count of frames for which the first transmission attempt on a particular interface is delayed because the medium is busy. The count represented by an instance of this object does not include frames involved in collisions. Also described in IETF RFC1643 MIB dot3StatsDeferredTransmissions
	TxSingleCollision	
	Type	uint32
	Comment	A count of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the TxUniCastPkts and TxNUcastPkts and is not counted by the corresponding instance of the TxMultipleCollision object. Also described in IETF RFC1643 MIB dot3StatsSingleCollisionFrames





	TxMultipleCollision	
	Type	uint32
	Comment	A count of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the TxUniCastPkts and TxNUcast Pkts and is not counted by the corresponding instance of the TxSingle Collision object. Also described in IETF RFC1643 MIB dot3Stats MultipleCollisionFrames.
	TxLateCollision	
	Type	uint32
	Comment	The number of times that a collision is detected on a particular interface later than 512 bit-times into the transmission of a packet. Five hundred and twelve bit-times corresponds to 51.2 microseconds on a 10 Mbit/s system. A (late) collision included in a count represented by an instance of this object is also considered as a (generic) collision for purposes of other collision-related statistics. Also described in IETF RFC1643 MIB dot3StatsLateCollisions
	TxExcessiveCollision	
	Type	uint32
	Comment	A count of frames for which transmission on a particular interface fails due to excessive collisions. Also described in IETF RFC1643 MIB dot3StatsExcessiveCollisions
Description	Statistic counters for diagnostics.	
Available via	Eth_GeneralTypes.h	

](SRS_Eth_00127)

8.2.18 Eth_SpiStatusType

[SWS_Eth_91013]{DRAFT} [

Name	Eth_SpiStatusType (draft)	
Kind	Structure	
Elements	SpiStatusRegister	
	Type	uint32
	Comment	Bit mapped status defined by OA TC6 [26] to notify following information: (Pos : description) 0x00: Transmit_Protocol_Error, 0x01: Transmit_Buffer_Overflow_Error, 0x02: Transmit_Buffer_Underflow_Error, 0x03: Receive_Buffer_Overflow_Error, 0x04: Loss_Framing_error, 0x05: Header_Error, 0x06: Reset_Complete, 0x07: PHY_Interrupt,





		<p>△</p> <p>0x08: Transmit_Timestamp_Capture_Available_A, 0x09: Transmit_Timestamp_Capture_Available_B, 0x0A: Transmit_Timestamp_Capture_Available_C, 0x0B: Transmit_Frame_Check_Sequence_Error, 0x0C: Control_Data_Protection_Error, 0x0D - 0xFF: Reserved.</p>
	Sync	
	Type	boolean
	Comment	Synchronization configuration as defined in the OA TC6 [26]. TRUE: MACPHY has been reset and is not configured. FALSE: MACPHY is configured.
	BufferStatusTxCredit	
	Type	uint8
	Comment	Contains the number of consecutive transmitted data chunks of Ethernet frame the SPI host can write without overflowing the MAC.
	BufferStatusRxCredit	
	Type	uint8
	Comment	Contains the number of additional received data chunks of Ethernet frame currently available for the SPI host to read.
Description	Returns the Spi status, errors and configuration state. Tags: atp.Status=draft	
Available via	Eth.h	

]([SRS_Eth_00147](#), [SRS_Eth_00120](#))

8.3 Function definitions

This is a list of functions provided for upper layer modules.

8.3.1 Eth_Init

[SWS_Eth_00027] [

Service Name	Eth_Init	
Syntax	<pre>void Eth_Init (const Eth_ConfigType* CfgPtr)</pre>	
Service ID [hex]	0x01	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CfgPtr	Points to the implementation specific structure
Parameters (inout)	None	





Parameters (out)	None
Return value	None
Description	Initializes the Ethernet Driver
Available via	Eth.h

}]()

[SWS_Eth_00028] [The function shall store the access to the configuration structure for subsequent API calls.}]()

[SWS_Eth_00275] [The function shall for all configured Ethernet controllers in the current EthConfigSet:

- Disable Rx/Tx communication of all Ethernet controllers
- Clear pending Ethernet interrupts
- Configure all controller configuration parameters (e.g. interrupts, frame length, frame filter, ...)
- Configure all transmit / receive resources (e.g. buffer initialization)
- delete all pending transmit and receive requests.

}]()

Note: The implementation has to ensure that the control capabilities (e.g. MDIO) provided by an Ethernet controller which are used by other driver modules (e.g. Ethernet switch driver) are always available independent of the requested mode (ETH_MODE_DOWN or ETH_MODE_ACTIVE). Therefore the Ethernet driver may initialize the control capabilities within Eth_Init.

[SWS_Eth_00300]{DRAFT} [If the config parameter EthCtrlConfigSwBufferHandling is set to TRUE, then all SW FIFOs and SW buffer pools shall be initialized with '0'].()]()

Note:: For more details see [7.1.3 Buffer handling](#).

[SWS_Eth_00029] [The function shall change the state of the component from ETH_STATE_UNINIT to ETH_STATE_INIT.}]()

[SWS_Eth_00039] [The function shall check the access to the Ethernet controller. If the check fails, the function shall raise the production error ETH_E_ACCESS.}]()

[SWS_Eth_00031] [*Eth_Init()* shall be called during initialization.}]()

8.3.2 Eth_SetControllerMode

[SWS_Eth_91009] [

Service Name	Eth_SetControllerMode	
Syntax	<pre>Std_ReturnType Eth_SetControllerMode (uint8 CtrlIdx, Eth_ModeType CtrlMode)</pre>	
Service ID [hex]	0x03	
Sync/Async	Asynchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
	CtrlMode	ETH_MODE_DOWN: Disable Rx/Tx communication of the Ethernet controller ETH_MODE_ACTIVE: Enable Rx/Tx communication of the Ethernet controller
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: success E_NOT_OK: controller mode could not be changed
Description	Enables / Disables Rx/Tx communication of the indexed controller	
Available via	Eth.h	

]()

[SWS_Eth_00276] [The function shall put the controller in the specified mode given in the parameter 'CtrlMode':

- Upon mode ETH_MODE_DOWN the driver shall:
 - Disable Tx/Rx communication of the Ethernet controller
 - Reset all transmit and receive buffers (i.e. ignore all pending transmission and reception requests)
- Upon mode ETH_MODE_ACTIVE:
 - Enable all transmit and receive buffers
 - Activate Rx/Tx communication of the Ethernet controller

]()

[SWS_Eth_00043] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00044] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00301] [If development error detection is enabled: the function shall check the parameter CtrlMode. If the given mode is other than ETH_MODE_ACTIVE or ETH_MODE_DOWN, the function shall raise the development error ETH_E_INV_MODE.]()

[SWS_Eth_00168] [The function shall check the access to the Ethernet controller. If the check fails, the function shall raise the production error ETH_E_ACCESS and return E_NOT_OK.]()

[SWS_Eth_00045] [*Eth_Init()* shall be called before *Eth_SetControllerMode()*.]()

8.3.3 Eth_GetControllerMode

[SWS_Eth_91010] [

Service Name	Eth_GetControllerMode	
Syntax	<pre>Std_ReturnType Eth_GetControllerMode (uint8 CtrlIdx, Eth_ModeType* CtrlModePtr)</pre>	
Service ID [hex]	0x04	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
Parameters (inout)	None	
Parameters (out)	CtrlModePtr	ETH_MODE_DOWN: the Rx/Tx communication of the Ethernet controller is disabled ETH_MODE_ACTIVE: the Rx/Tx communication of the Ethernet controller is enabled
Return value	Std_ReturnType	E_OK: success E_NOT_OK: controller mode could not be obtained
Description	Obtains the communication state of the indexed controller	
Available via	Eth.h	

]()

[SWS_Eth_00277] [The function shall read the current Rx/Tx communication state of the indexed controller.]()

[SWS_Eth_00048] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00049] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00050] [If development error detection is enabled: the function shall check the parameter CtrlModePtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00051] [*Eth_Init()* shall be called before *Eth_GetControllerMode()*.]()

8.3.4 Eth_GetPhysAddr

[SWS_Eth_00052] [

Service Name	Eth_GetPhysAddr	
Syntax	<pre>void Eth_GetPhysAddr (uint8 CtrlIdx, uint8* PhysAddrPtr)</pre>	
Service ID [hex]	0x08	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
Parameters (inout)	None	
Parameters (out)	PhysAddrPtr	Physical source address (MAC address) in network byte order.
Return value	void	None
Description	Obtains the physical source address used by the indexed controller	
Available via	Eth.h	

]()

[SWS_Eth_00053] [The function shall read the source address used by the indexed controller.]()

[SWS_Eth_00054] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00055] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00056] [If development error detection is enabled: the function shall check the parameter PhysAddrPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00057] [Eth_Init() shall be called before Eth_GetPhysAddr().]()

8.3.5 Eth_SetPhysAddr

[SWS_Eth_00151] [

Service Name	Eth_SetPhysAddr	
Syntax	<pre>void Eth_SetPhysAddr (uint8 CtrlIdx, const uint8* PhysAddrPtr)</pre>	





Service ID [hex]	0x13	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant for the same CtrlIdx, reentrant for different	
Parameters (in)	CtrlIdx	Index of the Ethernet controller within the context of the Ethernet Driver.
	PhysAddrPtr	Pointer to memory containing the physical source address (MAC address) in network byte order.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Sets the physical source address used by the indexed controller	
Available via	Eth.h	

]()

[SWS_Eth_00139] [The function shall update the source address used by the indexed controller.]()

[SWS_Eth_00140] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00141] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00142] [If development error detection is enabled: the function shall check the parameter PhysAddrPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00143] [*Eth_Init()* shall be called before *Eth_SetPhysAddr()*.]()

8.3.6 Eth_UpdatePhysAddrFilter

[SWS_Eth_00152] [

Service Name	Eth_UpdatePhysAddrFilter	
Syntax	<pre>Std_ReturnType Eth_UpdatePhysAddrFilter (uint8 CtrlIdx, const uint8* PhysAddrPtr, Eth_FilterActionType Action)</pre>	
Service ID [hex]	0x12	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant for the same CtrlIdx, reentrant for different	
Parameters (in)	CtrlIdx	Index of the Ethernet controller within the context of the Ethernet Driver





	PhysAddrPtr	Pointer to memory containing the physical destination address (MAC address) in network byte order. This is the multicast destination address of the layer 2 Ethernet packet.
	Action	Add or remove the address from the Ethernet controllers filter.
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: filter was successfully changed E_NOT_OK: filter could not be changed
Description	Update the physical source address to/from the indexed controller filter. If the Ethernet Controller is not capable to do the filtering, the software has to do this.	
Available via	Eth.h	

]()

[SWS_Eth_00150] [The function shall update the physical address receive filter of the indexed controller.]()

[SWS_Eth_00245] [The Ethernet driver module will receive a frame when the destination Address match the PhyAddrPtr passed here. (e.g matching can be done via hash table or simple pattern matching)]()

Note: Underlying HW mechanism can be used if available. Otherwise the Ethernet driver needs to do this by software.

[SWS_Eth_00246] [If the matching is positive, the upper layer shall be notified by calling RxIndication() callback.

If the matching is negative, the frame shall be discarded.]()

[SWS_Eth_00164] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00165] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00166] [If development error detection is enabled the function shall check the parameter PhysAddrPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00167] [*Eth_Init()* shall be called before *Eth_UpdatePhysAddrFilter()*.]()

[SWS_Eth_00144] [If the physical source address (MAC address) is set to FF:FF:FF:FF:FF:FF, this shall completely open the filter.]()

[SWS_Eth_00146] [If this API is used and the hardware does not support filtering, promiscuous mode shall be enabled during initialization.]()

[SWS_Eth_00147] [If the physical source address (MAC address) is set to 00:00:00:00:00:00, this shall reduce the filter to the controllers unique unicast MAC address and end promiscuous mode if it was turned on.]()

8.3.7 Eth_WriteMii

[SWS_Eth_00058] [

Service Name	Eth_WriteMii	
Syntax	<pre>Std_ReturnType Eth_WriteMii (uint8 CtrlIdx, uint8 TrcvIdx, uint8 RegIdx, uint16 RegVal)</pre>	
Service ID [hex]	0x05	
Sync/Async	Asynchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
	TrcvIdx	Index of the transceiver on the MII (see [21] for details)
	RegIdx	Index of the transceiver register on the MII (see [21] for details)
	RegVal	Value to be written into the indexed register (see [21] for details)
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: Service accepted E_NOT_OK: Service denied
Description	Configures a transceiver register or triggers a function offered by the receiver	
Available via	Eth.h	

]()

[SWS_Eth_00286]{DRAFT} [The function shall check the communication with the Ethernet Controller. If the check fails, the function shall report the runtime error code ETH_E_COMMUNICATION and return E_NOT_OK.]()

[SWS_Eth_00278]{DRAFT} [The function shall write the specified transceiver register through the MII according to Clause 22 [20] for the indexed controller.]([SRS_Eth_00148](#))

[SWS_Eth_00273] [If Clause 45 registers need to be written via this access mechanism, the API shall use the register 13 and 14 to access them as explicitly specified by the annex 22D [20].]([SRS_Eth_00148](#))

[SWS_Eth_00287]{DRAFT} [If EthCtrlEnableSpiInterface is TRUE, the function shall process the write request as described in the TC6 [25].]([SRS_Eth_00147](#), [SRS_Eth_00146](#))

[SWS_Eth_00241]{OBSOLETE} [The function shall call EthTrcv_WriteMiiIndication when the MII access finished.]([SRS_Eth_00148](#))

[SWS_Eth_00288]{DRAFT} [The function shall call EthTrcv_WriteMiiIndication when the PHY register access finished.]([SRS_Eth_00148](#), [SRS_Eth_00147](#), [SRS_Eth_00146](#))

[SWS_Eth_00060] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00061] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00062] [The function shall be pre compile time configurable On/Off by the configuration parameter: EthCtrlEnableMii [ECUC_Eth_00012].]()

[SWS_Eth_00063] [*Eth_Init()* shall be called before *Eth_WriteMii()*.]()

8.3.8 Eth_ReadMii

[SWS_Eth_00064] [

Service Name	Eth_ReadMii	
Syntax	<pre>Std_ReturnType Eth_ReadMii (uint8 CtrlIdx, uint8 TrcvIdx, uint8 RegIdx, uint16* RegValPtr)</pre>	
Service ID [hex]	0x06	
Sync/Async	Asynchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
	TrcvIdx	Index of the transceiver on the MII (see [21] for details)
	RegIdx	Index of the transceiver register on the MII (see [21] for details)
Parameters (inout)	None	
Parameters (out)	RegValPtr	Filled with the register content of the indexed register (see [21] for details)
Return value	Std_ReturnType	E_OK: Service accepted E_NOT_OK: Service denied
Description	Reads a transceiver register	
Available via	Eth.h	

]()

[SWS_Eth_00289]{DRAFT} [The function shall check the communication with the Ethernet Controller. If the check fails, the function shall report the runtime error code ETH_E_COMMUNICATION and return E_NOT_OK.]([SRS_Eth_00148](#), [SRS_Eth_00146](#))

[SWS_Eth_00279]{DRAFT} [The function shall read the specified transceiver register through the MII according to Clause 22 [20] for the indexed controller.]([SRS_Eth_00148](#), [SRS_Eth_00146](#))

[SWS_Eth_00274] [If Clause 45 registers need to be read via this access mechanism, the API shall use the register 13 and 14 to access them as explicitly specified by the annex 22D [20].] ([SRS_Eth_00148](#))

[SWS_Eth_00290]{DRAFT} [If EthCtrEnableSpiInterface is TRUE, the function shall process the read request as described in the TC6 [25].] ([SRS_Eth_00148](#), [SRS_Eth_00146](#), [SRS_Eth_00147](#))

[SWS_Eth_00242]{OBSOLETE} [The function shall call EthTrcv_ReadMiiIndication when the MII access finished.] ()

[SWS_Eth_00291]{DRAFT} [The function shall call EthTrcv_ReadMiiIndication when the PHY register access finished.] ([SRS_Eth_00148](#), [SRS_Eth_00146](#), [SRS_Eth_00147](#))

[SWS_Eth_00066] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.] ()

[SWS_Eth_00067] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.] ()

[SWS_Eth_00068] [If development error detection is enabled: the function shall check the parameter RegValPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.] ()

[SWS_Eth_00069] [The function shall be pre compile time configurable On/Off by the configuration parameter: EthCtrlEnableMii [ECUC_Eth_00012].] ()

[SWS_Eth_00070] [*Eth_Init()* shall be called before *Eth_ReadMii()*.] ()

8.3.9 Eth_GetCounterValues

[SWS_Eth_00226] [

Service Name	Eth_GetCounterValues	
Syntax	<pre>Std_ReturnType Eth_GetCounterValues (uint8 CtrlIdx, Eth_CounterType* CounterPtr)</pre>	
Service ID [hex]	0x14	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
Parameters (inout)	None	
Parameters (out)	CounterPtr	counter values according to IETF RFC 1757, RFC 1643 and RFC 2233.





Return value	Std_ReturnType	E_OK: success E_NOT_OK: counter values read failure
Description	Reads a list with drop counter values of the corresponding controller. The meaning of these values is described at Eth_CounterType.	
Available via	Eth.h	

](SRS_Eth_00127)

[SWS_Eth_00227] [The function shall read a list of values from the indexed controller.]
()

[SWS_Eth_00228] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.] ()

[SWS_Eth_00229] [If dev development elopment error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.] ()

[SWS_Eth_00230] [If development error detection is enabled: the function shall check the parameter CounterPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.] ()

[SWS_Eth_00231] [The function Eth_GetCounterValues shall be pre compile time configurable On/Off by the configuration parameter: EthGetCounterValuesApi [ECUC_Eth_00035].] ()

[SWS_Eth_00232] [Eth_Init() shall be called before Eth_GetCounterValues().] ()

8.3.10 Eth_GetRxStats

[SWS_Eth_00233] [

Service Name	Eth_GetRxStats	
Syntax	Std_ReturnType Eth_GetRxStats (uint8 CtrlIdx, Eth_RxStatsType* RxStats)	
Service ID [hex]	0x15	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
Parameters (inout)	None	
Parameters (out)	RxStats	List of values according to IETF RFC 2819 (Remote Network Monitoring Management Information Base)
Return value	Std_ReturnType	E_OK: success E_NOT_OK: drop counter could not be obtained





Description	Returns the following list according to IETF RFC2819, where the maximal possible value shall denote an invalid value, e.g. if this counter is not available: 1. etherStatsDropEvents 2. etherStatsOctets 3. etherStatsPkts 4. etherStatsBroadcastPkts 5. etherStatsMulticastPkts 6. etherStatsCrcAlignErrors 7. etherStatsUndersizePkts 8. etherStatsOversizePkts 9. etherStatsFragments 10. etherStatsJabbers 11. etherStatsCollisions 12. etherStatsPkts64Octets 13. etherStatsPkts65to127Octets 14. etherStatsPkts128to255Octets 15. etherStatsPkts256to511Octets 16. etherStatsPkts512to1023Octets 17. etherStatsPkts1024to1518Octets
Available via	Eth.h

](SRS_Eth_00127)

[SWS_Eth_00234] [The function shall read a list of values from the indexed controller according to [22].]()

[SWS_Eth_00235] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00236] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00237] [If development error detection is enabled: the function shall check the parameter RxStats for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00238] [The function Eth_GetRxStats shall be pre compile time configurable On/Off by the configuration parameter: EthGetRxStatsApi.]()

8.3.11 Eth_GetTxStats

[SWS_Eth_91005] [

Service Name	Eth_GetTxStats	
Syntax	Std_ReturnType Eth_GetTxStats (uint8 CtrlIdx, Eth_TxStatsType* TxStats)	
Service ID [hex]	0x1c	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
Parameters (inout)	None	
Parameters (out)	TxStats	List of values to read statistic values for transmission.
Return value	Std_ReturnType	E_OK: success, E_NOTOK: Tx-statistics could not be obtained





Description	Returns the list of Transmission Statistics out of IETF RFC1213 defined with Eth_TxStatsType, where the maximal possible value shall denote an invalid value, e.g. this counter is not available.
Available via	Eth.h

]([SRS_Eth_00127](#))

[SWS_Eth_00248] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]([SRS_BSW_00101](#), [SRS_BSW_00416](#))

[SWS_Eth_00249] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]([SRS_BSW_00323](#), [SRS_BSW_00369](#))

[SWS_Eth_00250] [If development error detection is enabled: the function shall check the parameter TxStats for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]([SRS_BSW_00323](#), [SRS_BSW_00369](#))

[SWS_Eth_00251] [The function Eth_GetTxStats shall be pre compile time configurable On/Off by the configuration parameter: EthGetTxStatsApi [ECUC_Eth_00060].]([SRS_Eth_00053](#))

8.3.12 Eth_GetTxErrorCounterValues

[SWS_Eth_91006] [

Service Name	Eth_GetTxErrorCounterValues	
Syntax	<pre>Std_ReturnType Eth_GetTxErrorCounterValues (uint8 CtrlIdx, Eth_TxErrorCounterValuesType* TxErrorCounterValues)</pre>	
Service ID [hex]	0x1d	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
Parameters (inout)	None	
Parameters (out)	TxErrorCounterValues	List of values to read statistic error counter values for transmission.
Return value	Std_ReturnType	E_OK: success, E_NOTOK: Tx-statistics could not be obtained
Description	Returns the list of Transmission Error Counters out of IETF RFC1213 and RFC1643 defined with Eth_TxErrorCounterValuesType, where the maximal possible value shall denote an invalid value, e.g. this counter is not available.	
Available via	Eth.h	

]([SRS_Eth_00127](#))

[SWS_Eth_00252] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.] ([SRS_BSW_00101](#), [SRS_BSW_00416](#))

[SWS_Eth_00253] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.] ([SRS_BSW_00323](#), [SRS_BSW_00369](#))

[SWS_Eth_00254] [If development error detection is enabled: the function shall check the parameter TxStats for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.] ([SRS_BSW_00323](#), [SRS_BSW_00369](#))

[SWS_Eth_00255] [The function Eth_GetTxErrorCounterValues shall be pre compile time configurable On/Off by the configuration parameter: EthGetTxErrorCounterValues Api [ECUC_Eth_00061].] ([SRS_Eth_00053](#))

8.3.13 Eth_GetSpiStatus

[SWS_Eth_91012]{DRAFT} [

Service Name	Eth_GetSpiStatus (draft)	
Syntax	<pre>Std_ReturnType Eth_GetSpiStatus (uint8 CtrlIdx, Eth_SpiStatusType* SpiStatusType)</pre>	
Service ID [hex]	0x1E	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
Parameters (inout)	None	
Parameters (out)	SpiStatusType	MACPHY status
Return value	Std_ReturnType	E_OK: success, E_NOT_OK: Status could not be obtained
Description	Returns the status defined by OA TC6 [26] to identify if an error can occurred at the SPI interface. Tags: atp.Status=draft	
Available via	Eth.h	

] ([SRS_Eth_00147](#), [SRS_Eth_00120](#))

[SWS_Eth_00292]{DRAFT} [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.] ([SRS_BSW_00101](#), [SRS_BSW_00416](#))

[SWS_Eth_00293]{DRAFT} [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.] ([SRS_BSW_00323](#), [SRS_BSW_00369](#))

[SWS_Eth_00294]{DRAFT} [If development error detection is enabled: the function shall check the parameter TxStats for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.] ([SRS_BSW_00323](#), [SRS_BSW_00369](#))

[SWS_Eth_00295]{DRAFT} [The function Eth_GetSpiStatus shall be pre compile time configurable On/Off by the configuration parameter: EthCtrlEnableSpiInterface[ECUC_Eth_00073].] ([SRS_Eth_00146](#), [SRS_Eth_00147](#))

8.3.14 Eth_GetCurrentTime

[SWS_Eth_00181] [

Service Name	Eth_GetCurrentTime	
Syntax	<pre>Std_ReturnType Eth_GetCurrentTime (uint8 CtrlIdx, Eth_TimeStampQualType* timeQualPtr, Eth_TimeStampType* timeStampPtr)</pre>	
Service ID [hex]	0x16	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the addresses ETH controller.
Parameters (inout)	None	
Parameters (out)	timeQualPtr	quality of HW time stamp, e.g. based on current drift
	timeStampPtr	current time stamp
Return value	Std_ReturnType	E_OK: successful E_NOT_OK: failed
Description	Returns a time value out of the HW registers according to the capability of the HW. Is the HW resolution is lower than the Eth_TimeStampType resolution resp. range, than an the remaining bits will be filled with 0. Important Note: Eth_GetCurrentTime may be called within an exclusive area.	
Available via	Eth.h	

]()

[SWS_Eth_00182] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00183] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00184] [If development error detection is enabled: the function shall check the parameter timeQualPtr and timeStampPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00210] [The function shall be pre compile time configurable On/Off by the configuration parameter: EthGlobalTimeSupport [ECUC_Eth_00037].]()

[SWS_Eth_00185] [*Eth_Init()* shall be called before *Eth_GetCurrentTime()*.] ()

In case the Com-Stack is distributed across several partitions, the Ethernet stack could reside in a different partition than the StbM module calling *Eth_GetCurrentTime* (via *EthIf_GetCurrentTime*) API, means the call of *Eth_GetCurrentTime* could happen in another partition.

[SWS_Eth_00262] [The Eth module shall apply appropriate mechanisms to allow calls of *Eth_GetCurrentTime* API from other partitions than its main function, e.g. by providing an Eth satellite.] ()

8.3.15 Eth_EnableEgressTimeStamp

[SWS_Eth_00186] [

Service Name	Eth_EnableEgressTimeStamp	
Syntax	<pre>void Eth_EnableEgressTimeStamp (uint8 CtrlIdx, Eth_BufIdxType BufIdx)</pre>	
Service ID [hex]	0x17	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the addresses ETH controller.
	BufIdx	Index of the message buffer, where Application expects egress time stamping
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Activates egress time stamping on a dedicated message object. Some HW does store once the egress time stamp marker and some HW needs it always before transmission. There will be no "disable" functionality, due to the fact, that the message type is always "time stamped" by network design.	
Available via	Eth.h	

] ()

[SWS_Eth_00187] [If development error detection is enabled: the function shall check that the service *Eth_Init* was previously called. If the check fails, the function shall raise the development error *ETH_E_UNINIT*.] ()

[SWS_Eth_00188] [If development error detection is enabled: the function shall check the parameter *CtrlIdx* for being valid. If the check fails, the function shall raise the development error *ETH_E_INV_CTRL_IDX*.] ()

[SWS_Eth_00211] [The function shall be pre compile time configurable On/Off by the configuration parameter: *EthGlobalTimeSupport* [*ECUC_Eth_00037*].] ()

[SWS_Eth_00189] [*Eth_Init()* shall be called before *Eth_EnableEgressTimeStamp()*.] ()

8.3.16 Eth_GetEgressTimeStamp

[SWS_Eth_00190] [

Service Name	Eth_GetEgressTimeStamp	
Syntax	<pre>Std_ReturnType Eth_GetEgressTimeStamp (uint8 CtrlIdx, Eth_BufIdxType BufIdx, Eth_TimeStampQualType* timeQualPtr, Eth_TimeStampType* timeStampPtr)</pre>	
Service ID [hex]	0x18	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the addresses ETH controller.
	BufIdx	Index of the message buffer, where Application expects egress time stamping
Parameters (inout)	None	
Parameters (out)	timeQualPtr	quality of HW time stamp, e.g. based on current drift
	timeStampPtr	current time stamp
Return value	Std_ReturnType	E_OK: success E_NOT_OK: failed to read time stamp.
Description	Reads back the egress time stamp on a dedicated message object. It must be called within the TxConfirmation() function.	
Available via	Eth.h	

]()

[SWS_Eth_00191] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00192] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00193] [If development error detection is enabled: the function shall check the parameter timeQualPtr and timeStampPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00212] [The function shall be pre compile time configurable On/Off by the configuration parameter: EthGlobalTimeSupport [ECUC_Eth_00037].]()

[SWS_Eth_00194] [*Eth_Init()* shall be called before *Eth_GetEgressTimeStamp()*.]()

8.3.17 Eth_GetIngressTimeStamp

[SWS_Eth_00195] [

Service Name	Eth_GetIngressTimeStamp	
Syntax	<pre>Std_ReturnType Eth_GetIngressTimeStamp (uint8 CtrlIdx, const Eth_DataType* DataPtr, Eth_TimeStampQualType* timeQualPtr, Eth_TimeStampType* timeStampPtr)</pre>	
Service ID [hex]	0x19	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the addresses ETH controller.
	DataPtr	Pointer to the message buffer, where Application expects ingress time stamping
Parameters (inout)	None	
Parameters (out)	timeQualPtr	quality of HW time stamp, e.g. based on current drift
	timeStampPtr	current time stamp
Return value	Std_ReturnType	E_OK: success E_NOT_OK: failed to read time stamp.
Description	Reads back the ingress time stamp on a dedicated message object. It must be called within the RxIndication() function.	
Available via	Eth.h	

]()

[SWS_Eth_00196] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00197] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00198] [If development error detection is enabled: the function shall check the parameter DataPtr, timeQualPtr and timeStampPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00213] [The function shall be pre compile time configurable On/Off by the configuration parameter: EthGlobalTimeSupport [ECUC_Eth_00037].]()

[SWS_Eth_00199] [Eth_Init() shall be called before Eth_GetIngressTimeStamp().]()

8.3.18 Eth_ProvideTxBuffer

[SWS_Eth_00077] [

Service Name	Eth_ProvideTxBuffer
---------------------	---------------------





Syntax	<pre>BufReq_ReturnType Eth_ProvideTxBuffer (uint8 CtrlIdx, uint8 Priority, Eth_BufIdxType* BufIdxPtr, uint8** BufPtr, uint16* LenBytePtr)</pre>	
Service ID [hex]	0x09	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
	Priority	Frame priority for transmit buffer FIFO selection
Parameters (inout)	LenBytePtr	In: desired length in bytes, out: granted length in bytes
Parameters (out)	BufIdxPtr	Index to the granted buffer resource. To be used for subsequent requests
	BufPtr	Pointer to the granted buffer
Return value	BufReq_ReturnType	BUFREQ_OK: success BUFREQ_E_NOT_OK: request not accepted. BUFREQ_E_BUSY: all buffers in use BUFREQ_E_OVFL: requested buffer too large
Description	Provides access to a transmit buffer of the FIFO related to the specified priority	
Available via	Eth.h	

]()

[SWS_Eth_00078] [The function shall provide a transmit buffer resource. The Ethernet Driver shall lock the buffer until it receives a subsequent call of Eth_Transmit service with the buffer index returned in the BufIdxPtr parameter.]()

[SWS_Eth_00280] [All locked transmit buffers shall be released if the Rx/Tx communication of the indexed controller is disabled via Eth_SetControllerMode.]()

[SWS_Eth_00079] [If a buffer requested with Eth_ProvideTxBuffer that is larger than the available buffer length, the buffer shall not be locked but return the available length and BUFREQ_E_OVFL.]()

[SWS_Eth_00080] [If all available buffers are in use the component shall return BUFREQ_E_BUSY.]()

[SWS_Eth_00081] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00082] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00083] [If development error detection is enabled: the function shall check the parameter BufIdxPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00084] [If development error detection is enabled: the function shall check the parameter BufPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00085] [If development error detection is enabled: the function shall check the parameter LenBytePtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

[SWS_Eth_00086] [*Eth_Init()* shall be called before *Eth_ProvideTxBuffer()*.]()

8.3.19 Eth_Transmit

[SWS_Eth_00087] [

Service Name	Eth_Transmit	
Syntax	<pre>Std_ReturnType Eth_Transmit (uint8 CtrlIdx, Eth_BufIdxType BufIdx, Eth_FrameType FrameType , boolean TxConfirmation, uint16 LenByte, const uint8* PhysAddrPtr)</pre>	
Service ID [hex]	0xA	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different buffer indexes and Ctrl indexes	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
	BufIdx	Index of the buffer resource
	FrameType	Ethernet frame type
	TxConfirmation	Activates transmission confirmation
	LenByte	Data length in byte
	PhysAddrPtr	Physical target address (MAC address) in network byte order
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: success E_NOT_OK: transmission failed
Description	Triggers transmission of a previously filled transmit buffer	
Available via	Eth.h	

]()

[SWS_Eth_00088] [The function shall build the Ethernet header with the given physical target address (MAC address) and trigger the transmission of a previously filled transmit buffer.]()

After transmission, the driver needs to release the allocated buffer. It is up to the implementation when the actual buffer release shall occur, e.g. within the context of the Eth_TxConfirmation, the Eth_MainFunction, or during the next Eth_ProvideTxBuffer.

[SWS_Eth_00281] [All pending transmit buffers shall be released if the Rx/Tx communication of the indexed controller is disabled via `Eth_SetControllerMode`.]()

[SWS_Eth_00090] [If development error detection is enabled: the function shall check that the service `Eth_Init` was previously called. If the check fails, the function shall raise the development error `ETH_E_UNINIT`.]()

[SWS_Eth_00091] [If development error detection is enabled: the function shall check the parameter `CtrlIdx` for being valid. If the check fails, the function shall raise the development error `ETH_E_INV_CTRL_IDX`.]()

[SWS_Eth_00092] [If development error detection is enabled: the function shall check the parameter `BufIdx` for being valid. If the check fails, the function shall raise the development error `ETH_E_INV_PARAM`.]()

[SWS_Eth_00093] [If development error detection is enabled: the function shall check the parameter `PhysAddrPtr` for being valid. If the check fails, the function shall raise the development error `ETH_E_PARAM_POINTER`.]()

[SWS_Eth_00129] [If development error detection is enabled: the function shall check the controller mode for being active (`ETH_MODE_ACTIVE`). If the check fails, the function shall raise the development error `ETH_E_INV_MODE`.]()

[SWS_Eth_00094] [`Eth_ProvideTxBuffer`() shall be called before `Eth_Transmit`.]()

8.3.20 Eth_Receive

[SWS_Eth_00095] [

Service Name	Eth_Receive	
Syntax	<pre>void Eth_Receive (uint8 CtrlIdx, uint8 FifoIdx, Eth_RxStatusType* RxStatusPtr)</pre>	
Service ID [hex]	0xB	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different FIFOs. Non Reentrant for the same FIFO.	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
	FifoIdx	Specifies the related fifo
Parameters (inout)	None	
Parameters (out)	RxStatusPtr	Indicates whether a frame has been received and if so, whether more frames are available for the related fifo.
Return value	None	
Description	Receive a frame from the related fifo.	
Available via	Eth.h	

]()

[SWS_Eth_00096] [The function shall read the next frame from the receive buffers. The function passes the received frame to the Ethernet interface using the callback function `EthIf_RxIndication` and indicates if there are more frames in the receive buffers.]()

[SWS_Eth_00097] [If development error detection is enabled: the function shall check that the service `Eth_Init` was previously called. If the check fails, the function shall raise the development error `ETH_E_UNINIT`.]()

[SWS_Eth_00098] [If development error detection is enabled: the function shall check the parameter `CtrlIdx` for being valid. If the check fails, the function shall raise the development error `ETH_E_INV_CTRL_IDX`.]()

[SWS_Eth_00132] [If development error detection is enabled: the function shall check the controller mode for being active (`ETH_MODE_ACTIVE`). If the check fails, the function shall raise the development error `ETH_E_INV_MODE`.]()

[SWS_Eth_00153] [When calling the callback function `EthIf_RxIndication` broadcast frames shall be indicated to the Ethernet Interface (see [4]).]()

[SWS_Eth_00099] [`Eth_Init()` shall be called before `Eth_Receive()`.]()

8.3.21 Eth_TxConfirmation

[SWS_Eth_00100] [

Service Name	Eth_TxConfirmation	
Syntax	<pre>void Eth_TxConfirmation (uint8 CtrlIdx)</pre>	
Service ID [hex]	0xC	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the controller within the context of the Ethernet Driver
Parameters (inout)	None	
Parameters (out)	None	
Return value	void	None
Description	Triggers frame transmission confirmation	
Available via	Eth.h	

]()

[SWS_Eth_00101] [The function shall check all filled transmit buffers for successful transmission. The function issues transmit confirmation for each transmitted frame using the callback function `EthIf_TxConfirmation` if requested by the previous call of `Eth_Transmit` service.]()

[SWS_Eth_00102] [If transmission confirmation was enabled by a previous call to `Eth_Transmit` function the function shall release the buffer resource.]()

[SWS_Eth_00103] [If development error detection is enabled: the function shall check that the service Eth_Init was previously called. If the check fails, the function shall raise the development error ETH_E_UNINIT.]()

[SWS_Eth_00104] [If development error detection is enabled: the function shall check the parameter CtrlIdx for being valid. If the check fails, the function shall raise the development error ETH_E_INV_CTRL_IDX.]()

[SWS_Eth_00134] [If development error detection is enabled: the function shall check the controller mode for being active (ETH_MODE_ACTIVE). If the check fails, the function shall raise the development error ETH_E_INV_MODE.]()

[SWS_Eth_00105] [*Eth_Init()* shall be called before *Eth_TxConfirmation.*]()

8.3.22 Eth_GetVersionInfo

[SWS_Eth_00106] [

Service Name	Eth_GetVersionInfo	
Syntax	<pre>void Eth_GetVersionInfo (Std_VersionInfoType* VersionInfoPtr)</pre>	
Service ID [hex]	0xD	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	VersionInfoPtr	Version information of this module
Return value	void	None
Description	Returns the version information of this module	
Available via	Eth.h	

]()

[SWS_Eth_00136] [If development error detection is enabled: the function shall check the parameter VersionInfoPtr for being valid. If the check fails, the function shall raise the development error ETH_E_PARAM_POINTER.]()

8.4 Callback notifications

This chapter lists all functions provided by the Ethernet controller module to lower layer modules. The lower layer module of Eth module is the SPI module. The SPI module, which is part of the MCAL, may used to exchange data between the microcontroller and an external Ethernet controller (i.e. MACPHY [25]).

8.5 Scheduled functions

8.5.1 Eth_MainFunction

[SWS_Eth_00171] [

Service Name	Eth_MainFunction
Syntax	<pre>void Eth_MainFunction (void)</pre>
Service ID [hex]	0x20
Description	The function checks for controller errors and lost frames. Used for polling state changes. Calls EthIf_CtrlModeIndication when the controller mode changed.
Available via	SchM_Eth.h

]()

[SWS_Eth_00169] [The function shall check for lost frames. If the check fails, the function shall raise the extended production error event ETH_E_RX_FRAMES_LOST.]

()

[SWS_Eth_00172] [The function shall check for controller errors (e.g. CRC errors). If the check fails, the function shall raise the extended production error event as defined in section Extended Production Errors (e.g. ETH_E_CRC).]()

[SWS_Eth_00240] [Used for polling state changes. Calls EthIf_CtrlModeIndication when the controller mode changed.]()

8.6 Expected interfaces

This chapter lists all interfaces required from other modules.

8.6.1 Mandatory Interfaces

This chapter defines all interfaces required to fulfill the core functionality of the module.

[SWS_Eth_00119] [

API Function	Header File	Description
Dem_SetEventStatus	Dem.h	Called by SW-Cs or BSW modules to report monitor status information to the Dem. BSW modules calling Dem_SetEventStatus can safely ignore the return value. This API will be available only if ((Dem/Dem ConfigSet/DemEventParameter/DemEvent ReportingType) == STANDARD_REPORTING)





API Function	Header File	Description
Ethlf_CtrlModeIndication	Ethlf.h	Called asynchronously when mode has been read out. Triggered by previous Eth_SetControllerMode call. Can directly be called within the trigger functions.
Ethlf_GetVersionInfo	Ethlf.h	Returns the version information of this module
Ethlf_MainFunctionRx	SchM_Ethlf.h	The function checks for new received frames and issues reception indications in polling mode.
Ethlf_MainFunctionTx	SchM_Ethlf.h	The function issues transmission confirmations in polling mode. It checks also for transceiver state changes.
Ethlf_RxIndication	Ethlf.h	Handles a received frame received by the indexed controller
Ethlf_TxConfirmation	Ethlf.h	Confirms frame transmission by the indexed controller
SchM_Enter_Eth	SchM_<Mip>.h	Invokes the SchM_Enter function to enter a module local exclusive area.
SchM_Exit_Eth	SchM_<Mip>.h	Invokes the SchM_Exit function to exit an exclusive area.

]()

8.6.2 Optional Interfaces

This chapter defines all interfaces required to fulfill an optional functionality of the module.

[SWS_Eth_00120] [

API Function	Header File	Description
Det_ReportError	Det.h	Service to report development errors.
EthSwt_EthRxFinishedIndication	EthSwt_Eth.h	Indication for a finished receive process for a specific Ethernet frame, which results in providing the management information retrieved during EthSwt_EthRxProcessFrame().
EthSwt_EthRxProcessFrame	EthSwt_Eth.h	Function inspects the Ethernet frame passed by the data pointer for management information and stores it for later use in EthSwt_EthRxFinishedIndication().
EthSwt_EthTxAdaptBufferLength	EthSwt_Eth.h	Modifies the buffer length to be able to insert management information.
EthSwt_EthTxFinishedIndication	EthSwt_Eth.h	Indication for a finished transmit process for a specific Ethernet frame.
EthSwt_EthTxPrepareFrame	EthSwt_Eth.h	Prepares the Ethernet frame for common Ethernet communication (frame shall be handled by switch according to the common address resolution behavior) and stores the information for processing of EthSwt_EthTxFinishedIndication().
EthSwt_EthTxProcessFrame	EthSwt_Eth.h	Function inserts management information into the Ethernet frame.
Icu_DisableNotification	Icu.h	This function disables the notification of a channel.



△

<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Icu_EnableNotification	Icu.h	This function enables the notification on the given channel.
Spi_GetStatus	Spi.h	Service returns the SPI Handler/Driver software module status.
Spi_ReadIB	Spi.h	Service for reading synchronously one or more data from an IB SPI Handler/Driver Channel specified by parameter.
Spi_SetupEB	Spi.h	Service to setup the buffers and the length of data for the EB SPI Handler/Driver Channel specified.
Spi_SyncTransmit	Spi.h	Service to transmit data on the SPI bus
Spi_WriteIB	Spi.h	Service for writing one or more data to an IB SPI Handler/Driver Channel specified by parameter.

]()

8.6.3 Configurable interfaces

The Ethernet Driver does not use configurable interfaces.

Terms and definitions:

- **Reentrant:** interface is expected to be reentrant
- **Don't care:** reentrancy of interface not relevant for this module (in general it is in this case not reentrant).

9 Sequence diagrams

The usage of the Ethernet Driver is depicted in the sequence diagrams of the Ethernet Interface.

10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module Eth.

Chapter 10.3 specifies published information of the module Eth.

10.1 How to read this chapter

For details refer to the chapter 10.1 "Introduction to configuration specification" in *SWS_BSWGeneral* [3].

10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapter 1 and Chapter 8.

[SWS_Eth_00257] [The Ethernet Driver module shall reject configurations with partition mappings which are not supported by the implementation.]()

[SWS_Eth_00258] [If the driver manages several Ethernet controllers and if a subset of these controllers share peripheral resources or are somehow coupled (E.g. Communication control can only be done globally for all controllers), Ethernet driver shall emulate independent controllers to the upper layers. The coordination (E.g. Communication control) has to be done by the upper layer modules.]()

[SWS_Eth_00296]{DRAFT} [The code configuration of the Eth module is Ethernet controller specific. If the Ethernet controller is sited on-chip, the code generation tool for the Eth module is microcontroller specific. If the Ethernet controller is an external device (i.e. MACPHY), the generation tool must not be microcontroller specific.]([SRS_BSW_00159](#))

10.2.1 Eth

Module SWS Item	ECUC_Eth_00038	
Module Name	Eth	
Module Description	Configuration of the Eth (Ethernet Driver) module.	
Post-Build Variant Support	true	
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE	
Included Containers		
Container Name	Multiplicity	Scope / Dependency
EthConfigSet	1	This container contains the configuration parameters and sub containers of the AUTOSAR Eth module.
EthGeneral	1	General configuration of Ethernet Driver module

10.2.2 EthConfigSet

SWS Item	[ECUC_Eth_00015]
Container Name	EthConfigSet
Parent Container	Eth
Description	This container contains the configuration parameters and sub containers of the AUTOSAR Eth module.
Configuration Parameters	

Included Containers		
Container Name	Multiplicity	Scope / Dependency
EthCtrlConfig	1..*	Configuration of the individual controller

10.2.3 EthCtrlConfig

SWS Item	[ECUC_Eth_00006]
Container Name	EthCtrlConfig
Parent Container	EthConfigSet
Description	Configuration of the individual controller
Configuration Parameters	

Name	EthCtrlConfigSwBufferHandling [ECUC_Eth_00071]		
Parent Container	EthCtrlConfig		
Description	Enables / Disables SW buffer management		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthCtrlEnableMii [ECUC_Eth_00012]		
Parent Container	EthCtrlConfig		
Description	Enables / Disables Media Independent Interface (MII) for transceiver access. Note: In case a MACPHY (external Ethernet controller) is use this parameter has to be enabled to ensure the existence of Eth_WriteMii and Eth_ReadMii. Within the function call of Eth_WriteMii and Eth_ReadMii, the register access is transformed to an SPI command.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local dependency: This parameter shall be set to TRUE, if EthCtrlEnableSpiInterface is set to TRUE		

Name	EthCtrlEnableRxInterrupt [ECUC_Eth_00010]		
Parent Container	EthCtrlConfig		
Description	Enables / Disables receive interrupt		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthCtrlEnableSpiInterface [ECUC_Eth_00073]		
Parent Container	EthCtrlConfig		
Description	This optional parameter enables the processing of control data and Ethernet frames over the SPI interface specific for MACPHY device. The use of this parameter implies the respect of the SPI protocol described in TC6 [26].		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		

Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthCtrlEnableTxInterrupt [ECUC_Eth_00011]		
Parent Container	EthCtrlConfig		
Description	Enables / Disables transmit interrupt		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthCtrlIdx [ECUC_Eth_00007]		
Parent Container	EthCtrlConfig		
Description	Specifies the instance ID of the configured controller.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 255		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

Name	EthCtrlMacLayerSpeed [ECUC_Eth_00063]		
Parent Container	EthCtrlConfig		
Description	Defines the baud rate of the MAC layer.		
Multiplicity	0..1		
Type	EcucEnumerationParamDef		
Range	ETH_MAC_LAYER_SPEED_100M		
	ETH_MAC_LAYER_SPEED_10G		
	ETH_MAC_LAYER_SPEED_10M		
	ETH_MAC_LAYER_SPEED_1G		

Post-Build Variant Multiplicity	ETH_MAC_LAYER_SPEED_2500M true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Scope / Dependency	scope: ECU		

Name	EthCtrlMacLayerSubType [ECUC_Eth_00062]		
Parent Container	EthCtrlConfig		
Description	Defines the MAC layer subtype of a switch port		
Multiplicity	0..1		
Type	EcucEnumerationParamDef		
Range	REDUCED		
	REVERSED		
	SERIAL		
	STANDARD		
	UNIVERSAL_SERIAL		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Scope / Dependency	scope: ECU		

Name	EthCtrlMacLayerType [ECUC_Eth_00039]		
Parent Container	EthCtrlConfig		
Description	Defines the physical MAC/PHY Ethernet Interface type of the ethernet controller.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	ETH_MAC_LAYER_TYPE_XGMII	MAC layer interface (data) bandwidth class 1Gbit/s (e.g. GMII, RGMII, SGMII, RvGMII, USGMII)	
	ETH_MAC_LAYER_TYPE_XMII	MAC layer interface (data) bandwidth class 10-100Mbit/s (e.g. MII, RMII, RvMII, SMII)	
	ETH_MAC_LAYER_TYPE_XXGMII	MAC layer interface (data) bandwidth class 10Gbit/s	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

Name	EthCtrlPhyAddress [ECUC_Eth_00020]		
Parent Container	EthCtrlConfig		
Description	Specifies the unique 48-bit physical address (MAC address) of the controller in network byte order. Regular Expression: [0-9a-fA-F]{2}[:-][0-9a-fA-F]{2}{5}		
Multiplicity	0..1		
Type	EcucStringParamDef		
Default Value			
Length	17-17		
Regular Expression			
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlEcucPartitionRef [ECUC_Eth_00065]		
Parent Container	EthCtrlConfig		
Description	Maps the Ethernet controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the Ethernet driver is mapped to.		
Multiplicity	0..1		
Type	Reference to EcucPartition		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
EthCtrlConfigEgress	1	Configuration of one Ethernet controller egress behavior.
EthCtrlConfigIngress	1	Configuration of one Ethernet controller ingress behavior.
EthCtrlConfigSpi Configuration	0..*	SPI Interface configuration of one Ethernet controller (MACPHY use). Configured only if EthCtrlEnableSpiInterface is set to TRUE. Tags: atp.Status=draft
EthDemEventParameter Refs	0..1	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.

[SWS_Eth_00260] [The ECUC partitions referenced by EthCtrlEcucPartitionRef shall be a subset of the ECUC partitions referenced by EthEcucPartitionRef.] ()

[SWS_Eth_00261] [EthCtrlConfig, EthTrcvConfig and EthSwtConfig (if existent in configuration) of one communication channel shall all reference the same ECUC partition.] ()

[SWS_Eth_CONSTR_00001] [If EthCtrlEcucPartitionRef references one or more ECUC partitions, EthCtrlEcucPartitionRef shall have a multiplicity of one and reference one of these ECUC partitions as well.] ()

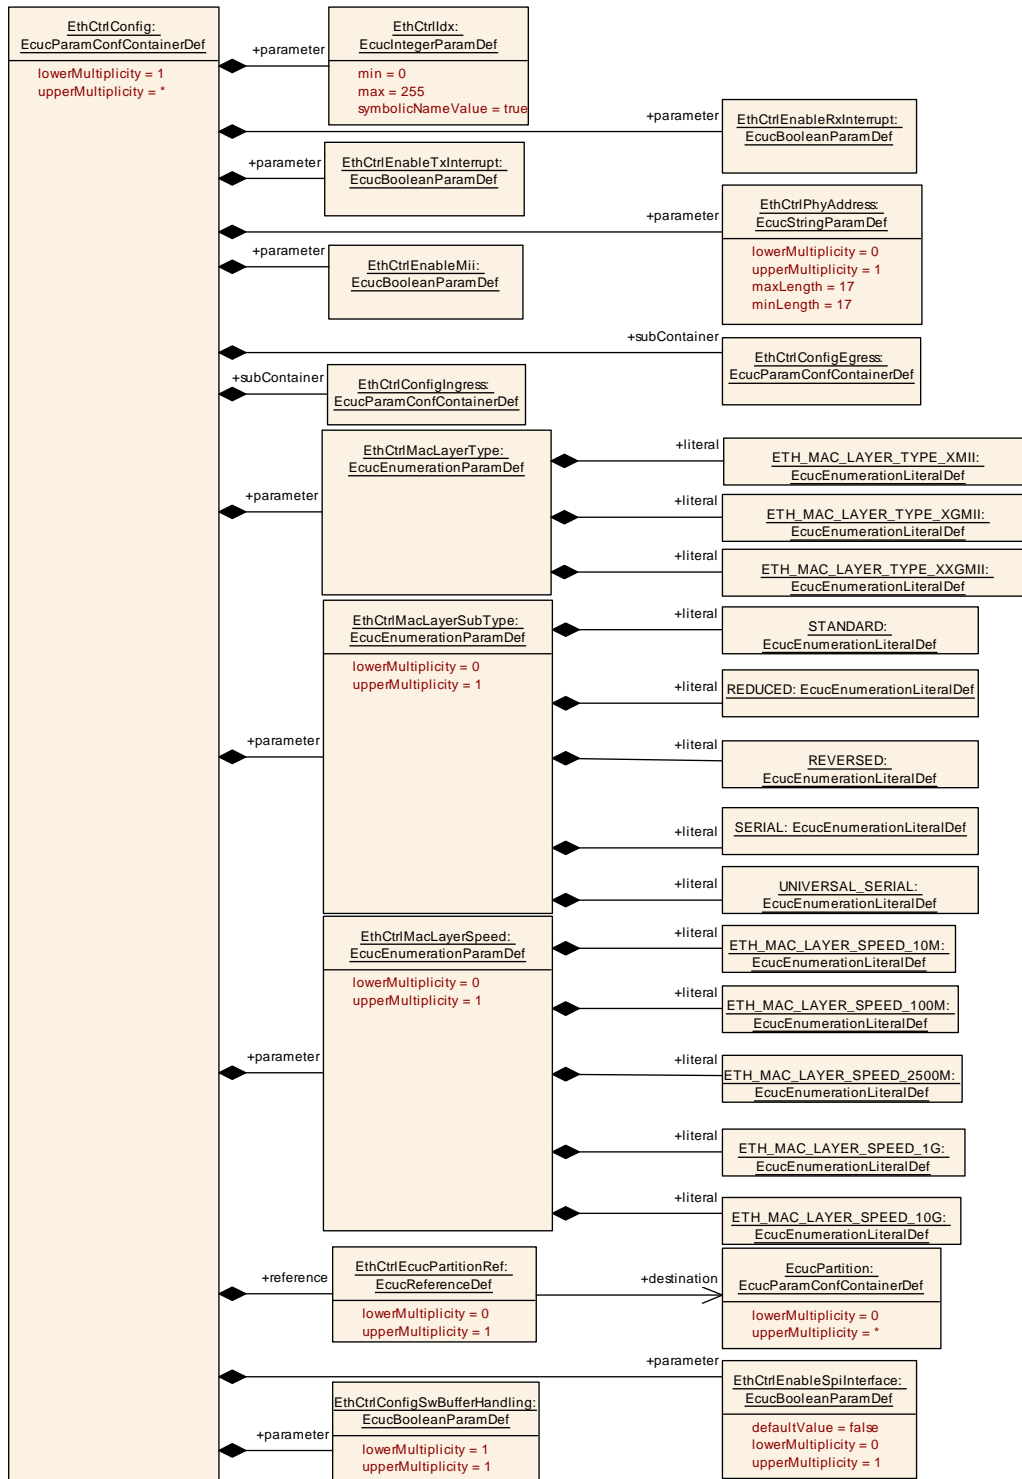


Figure 10.1: Overview EthCtrlConfig configuration

10.2.4 EthCtrlConfigEgress

SWS Item	[ECUC_Eth_00046]
Container Name	EthCtrlConfigEgress

Parent Container	EthCtrlConfig
Description	Configuration of one Ethernet controller egress behavior.
Configuration Parameters	

Name	EthCtrlConfigEgressLastSchedulerRef [ECUC_Eth_00052]		
Parent Container	EthCtrlConfigEgress		
Description	Reference to the scheduler which is the last in the egress structure.		
Multiplicity	1		
Type	Reference to EthCtrlConfigScheduler		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
EthCtrlConfigEgressFifo	0..*	Represents a Fifo at the egress side.
EthCtrlConfigScheduler	1..*	Represents a Scheduler on the egress side.
EthCtrlConfigShaper	0..*	Represents a Shaper on the egress side.

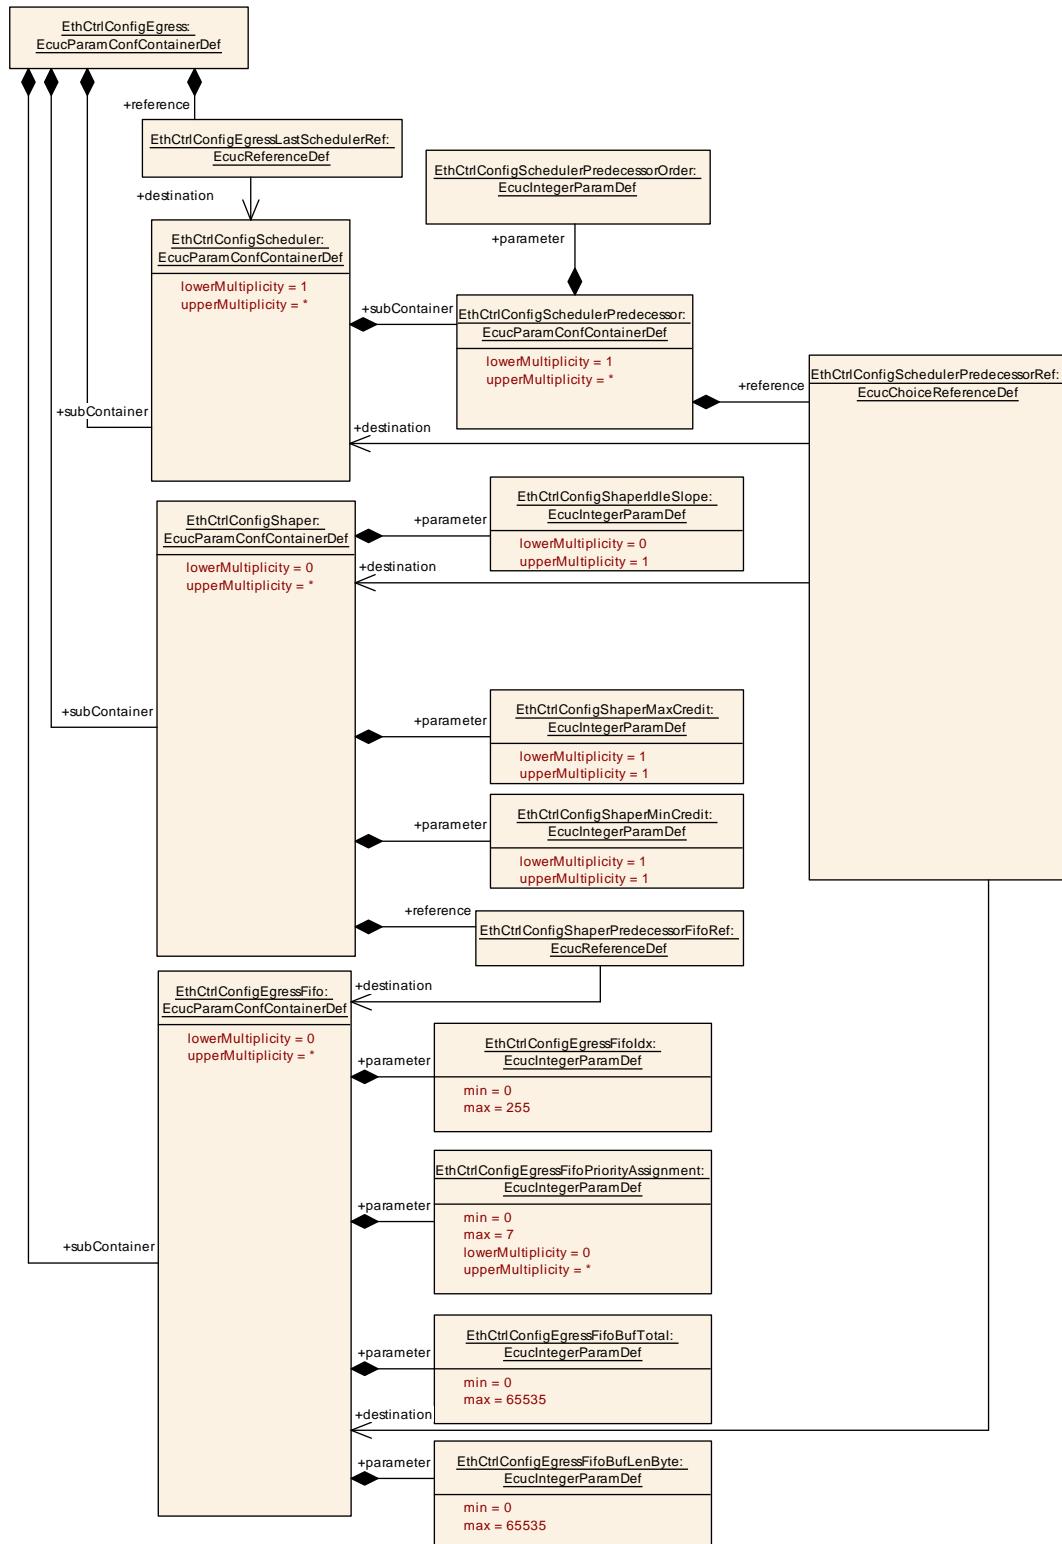


Figure 10.2: Overview EthCtrlConfigEgress configuration

10.2.4.1 EthCtrlConfigEgressFifo

SWS Item	[ECUC_Eth_00047]		
Container Name	EthCtrlConfigEgressFifo		
Parent Container	EthCtrlConfigEgress		
Description	Represents a Fifo at the egress side.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Name	EthCtrlConfigEgressFifoBufLenByte [ECUC_Eth_00051]		
Parent Container	EthCtrlConfigEgressFifo		
Description	Length of Fifo elements in bytes.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigEgressFifoBufTotal [ECUC_Eth_00050]		
Parent Container	EthCtrlConfigEgressFifo		
Description	Fifo buffer count.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigEgressFifIdx [ECUC_Eth_00048]		
Parent Container	EthCtrlConfigEgressFifo		
Description	Egress Fifo index.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		

Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigEgressFifoPriorityAssignment [ECUC_Eth_00049]		
Parent Container	EthCtrlConfigEgressFifo		
Description	Message egress priority assignment.		
Multiplicity	0..*		
Type	EcucIntegerParamDef		
Range	0 .. 7		
Default Value			
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

No Included Containers

10.2.4.2 EthCtrlConfigScheduler

SWS Item	[ECUC_Eth_00053]
Container Name	EthCtrlConfigScheduler
Parent Container	EthCtrlConfigEgress
Description	Represents a Scheduler on the egress side.
Configuration Parameters	

Included Containers		
Container Name	Multiplicity	Scope / Dependency
EthCtrlConfigScheduler Predecessor	1..*	Defines an ordered list of predecessors for this scheduler.

10.2.4.3 EthCtrlConfigSchedulerPredecessor

SWS Item	[ECUC_Eth_00054]
Container Name	EthCtrlConfigSchedulerPredecessor
Parent Container	EthCtrlConfigScheduler
Description	Defines an ordered list of predecessors for this scheduler.
Configuration Parameters	

Name	EthCtrlConfigSchedulerPredecessorOrder [ECUC_Eth_00055]		
Parent Container	EthCtrlConfigSchedulerPredecessor		
Description	Defines the order of the scheduler predecessors.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 ..		
	18446744073709551615		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigSchedulerPredecessorRef [ECUC_Eth_00056]		
Parent Container	EthCtrlConfigSchedulerPredecessor		
Description	Choice reference to the scheduler predecessor.		
Multiplicity	1		
Type	Choice reference to [EthCtrlConfigEgressFifo, EthCtrlConfigScheduler, EthCtrlConfigShaper]		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

No Included Containers

10.2.4.4 EthCtrlConfigShaper

SWS Item	[ECUC_Eth_00057]
Container Name	EthCtrlConfigShaper
Parent Container	EthCtrlConfigEgress
Description	Represents a Shaper an the egress side.
Configuration Parameters	

Name	EthCtrlConfigShaperIdleSlope [ECUC_Eth_00058]		
Parent Container	EthCtrlConfigShaper		
Description	Defines the increase of credit in bits per second for the AVB shaper.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 18446744073709551615		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigShaperMaxCredit [ECUC_Eth_00069]		
Parent Container	EthCtrlConfigShaper		
Description	Maximum amount of credits that can be accumulated for a queue.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 18446744073709551615		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigShaperMinCredit [ECUC_Eth_00070]		
Parent Container	EthCtrlConfigShaper		
Description	Minimum amount of credits in bytes that can be accumulated for a queue.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 18446744073709551615		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigShaperPredecessorFifoRef [ECUC_Eth_00059]		
Parent Container	EthCtrlConfigShaper		
Description	Reference to the fifo which is the predecessor for this shaper.		
Multiplicity	1		
Type	Reference to EthCtrlConfigEgressFifo		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

No Included Containers

10.2.5 EthCtrlConfigIngress

SWS Item	[ECUC_Eth_00040]
Container Name	EthCtrlConfigIngress
Parent Container	EthCtrlConfig
Description	Configuration of one Ethernet controller ingress behavior.
Configuration Parameters	

Included Containers		
Container Name	Multiplicity	Scope / Dependency
EthCtrlConfigIngressFifo	0..*	Represents a Fifo at the ingress side.

10.2.5.1 EthCtrlConfigIngressFifo

SWS Item	[ECUC_Eth_00041]		
Container Name	EthCtrlConfigIngressFifo		
Parent Container	EthCtrlConfigIngress		
Description	Represents a Fifo at the ingress side.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Name	EthCtrlConfigIngressFifoBufLenByte [ECUC_Eth_00045]		
Parent Container	EthCtrlConfigIngressFifo		
Description	Length of Fifo elements in bytes.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		

Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigIngressFifoBufTotal [ECUC_Eth_00044]		
Parent Container	EthCtrlConfigIngressFifo		
Description	Fifo buffer count.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigIngressFifoldx [ECUC_Eth_00043]		
Parent Container	EthCtrlConfigIngressFifo		
Description	Ingress Fifo index.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 255		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	EthCtrlConfigIngressFifoPriorityAssignment [ECUC_Eth_00042]		
Parent Container	EthCtrlConfigIngressFifo		
Description	Message ingress priority assignment.		
Multiplicity	0..*		
Type	EcucIntegerParamDef		
Range	0 .. 7		
Default Value			
Post-Build Variant Multiplicity	true		

Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

No Included Containers

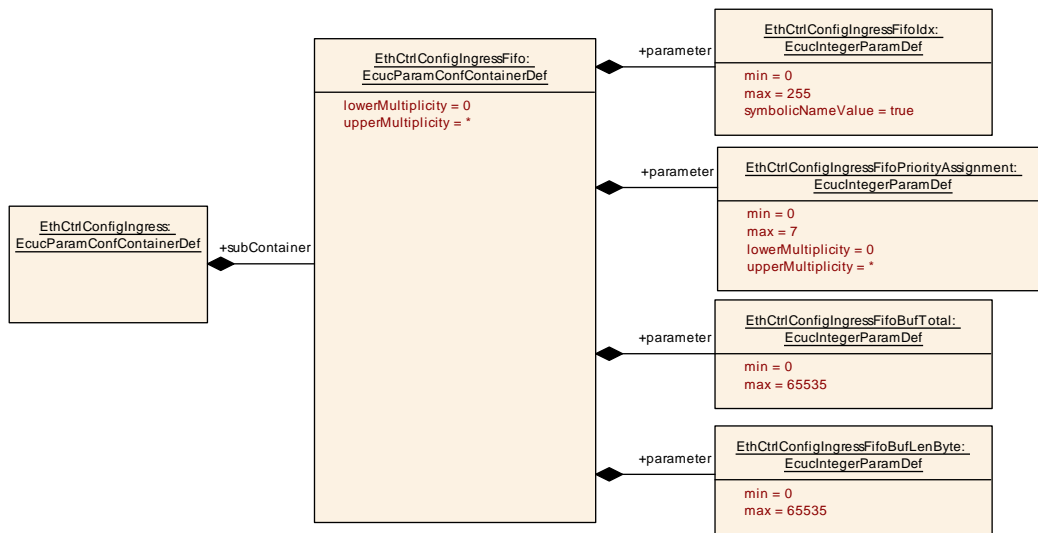


Figure 10.3: Overview EthCtrlConfigIngress configuration

10.2.6 EthCtrlConfigSpiConfiguration

SWS Item	[ECUC_Eth_00074]
Container Name	EthCtrlConfigSpiConfiguration
Parent Container	EthCtrlConfig
Description	SPI Interface configuration of one Ethernet controller (MACPHY use). Configured only if EthCtrlEnableSpiInterface is set to TRUE. Tags: atp.Status=draft
Post-Build Variant Multiplicity	false
Configuration Parameters	

Name	EthCtrlConfigSpiChunkPayloadSize [ECUC_Eth_00079]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	<p>Configures the size of the payload chunks which will be transferred over the SPI interface. Note: The chunk is the basic element for data transaction over the SPI which can be a section of an Ethernet frame or management command. The configured value has to be a multiple of 8.</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	8 .. 64		
Default Value	64		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE.		

Name	EthCtrlConfigSpiCommRetries [ECUC_Eth_00075]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	<p>Indicates the maximum number of communication retries in case of a failed SPI communication (applies both to timed out communication and to errors/NACK in the response data). If configured value is '0', no retry is allowed (communication is expected to succeed at first try).</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default Value			
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE. This parameter exists only if at least one SPI Sequence is referenced.		

Name	EthCtrlConfigSpiCommTimeout [ECUC_Eth_00076]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	<p>Indicates the maximum time allowed to the Ethernet controller for replying (either positively or negatively) to a SPI command. Timeout is configured in seconds. Timeout value of '0' means that no specific timeout is to be used by Ethernet controller and the communication is executed at the best of the SPI HW capacity.</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 0.1]		
Default Value			
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	–	
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	<p>scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE. This parameter exists only if at least one SPI Sequence is referenced.</p>		

Name	EthCtrlConfigSpiEnableControlDataProtection [ECUC_Eth_00081]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	<p>Enables the control data protection. When set, all control data written to and read from the MACPHY will be transferred with its complement for detection of bit errors as defined in OA TC6 [26]. FALSE: Control data read/write protection is disabled (unprotected). TRUE: Control data read/write protection is enabled (protected).</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	<p>scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE</p>		

Name	EthCtrlConfigSpiEnableRxCSAlign [ECUC_Eth_00085]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	<p>Configures the CSn Align Receive frame. TRUE: all received Ethernet frames data shall start at the beginning of the first receive data chunk payload following CSn assertion FALSE: received frames may begin within any receive data chunk of the transaction when this bit is clear.</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE		

Name	EthCtrlConfigSpiEnableRxCutThrough [ECUC_Eth_00082]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	<p>When supported by the HW, enables the cut through mode of frame from the network to the SPI host.</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE		

Name	EthCtrlConfigSpiEnableRxZeroAlign [ECUC_Eth_00084]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	Configures the zero-align receive frame. TRUE: all received Ethernet frames data shall be aligned to start at the beginning of any receive data chunk payload. FALSE: Received frames may begin anywhere within the receive data chunk payload. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE		

Name	EthCtrlConfigSpiEnableTransmitDataHdrSequence [ECUC_Eth_00080]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	When supported by the HW, enables the transmit data sequence monitoring. FALSE: transmit data header sequence bit monitoring disabled. TRUE: transmit data header sequence bit monitoring enabled. Tags: atp.Status=draft		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE		

Name	EthCtrlConfigSpiEnableTxChecksum [ECUC_Eth_00086]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	Configures the CSn Align Receive frame. TRUE: all received Ethernet frames data shall start at the beginning of the first receive data chunk payload following CSn assertion FALSE: received frames may begin within any receive data chunk of the transaction when this bit is clear. Tags: atp.Status=draft		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE		

Name	EthCtrlConfigSpiEnableTxCutThrough [ECUC_Eth_00089]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	When supported by the HW, enables the cut through mode of frame from SPI host to the network. Tags: atp.Status=draft		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	

Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE
---------------------------	---

Name	EthCtrlConfigSpiSelectTimeStamp [ECUC_Eth_00087]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	When timestamp supported by the HW, selects size and format of the timestamps. FALSE: 32-bits timestamps TRUE: 64-bit timestamps Tags: atp.Status=draft		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE		

Name	EthCtrlConfigSpiTransmitCreditThreshold [ECUC_Eth_00083]		
Parent Container	EthCtrlConfigSpiConfiguration		
Description	Configures the minimum of available transmit credit before the writing IRQn is asserted. As per OA TC6, this information is notified by the TXC field. 0 = 1 credit 1 = 4 credits 2 = 8 credits 3 = 16 credits Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 3		
Default Value	0		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD

Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE.
---------------------------	--

Included Containers		
Container Name	Multiplicity	Scope / Dependency
EthCtrlConfigSpiSequence	0..*	Container gives Ethernet controller driver information about one SPI sequence. One SPI sequence used by Ethernet controller driver is in exclusive use for it. No other driver is allowed to access this sequence. Ethernet controller driver may use one sequence to access n Ethernet controller hardware chips of the same type or n sequences are used to access one single Ethernet controller hardware chip. If a Ethernet controller hardware has no SPI interface, there is no instance of this container. Tags: atp.Status=draft

SWS Item	[ECUC_Eth_00077]
Container Name	EthCtrlConfigSpiSequence
Parent Container	EthCtrlConfigSpiConfiguration
Description	Container gives Ethernet controller driver information about one SPI sequence. One SPI sequence used by Ethernet controller driver is in exclusive use for it. No other driver is allowed to access this sequence. Ethernet controller driver may use one sequence to access n Ethernet controller hardware chips of the same type or n sequences are used to access one single Ethernet controller hardware chip. If a Ethernet controller hardware has no SPI interface, there is no instance of this container. Tags: atp.Status=draft

Configuration Parameters

Name	EthCtrlConfigSpiAccessSynchronous [ECUC_Eth_00078]
Parent Container	EthCtrlConfigSpiSequence
Description	This parameter is used to define whether the access to the Spi sequence is synchronous or asynchronous. true: SPI access is synchronous. false: SPI access is asynchronous. Tags: atp.Status=draft
Multiplicity	0..1
Type	EcucBooleanParamDef
Default Value	false
Post-Build Variant Multiplicity	true
Post-Build Variant Value	true

Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter is valid, if EthCtrlEnableSpiInterface is configured and set to TRUE		

Name	EthCtrlConfigSpiSequenceName [ECUC_Eth_00088]		
Parent Container	EthCtrlConfigSpiSequence		
Description	Reference to a Spi sequence configuration container. Tags: atp.Status=draft		
Multiplicity	0..*		
Type	Symbolic name reference to SpiSequence		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local dependency: SpiSequence		

No Included Containers

10.2.7 EthDemEventParameterRefs

SWS Item	[ECUC_Eth_00016]
Container Name	EthDemEventParameterRefs
Parent Container	EthCtrlConfig
Description	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.

Configuration Parameters

Name	ETH_E_ACCESS [ECUC_Eth_00017]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "Controller access failed" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ETH_E_ALIGNMENT [ECUC_Eth_00026]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "Alignment Error" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ETH_E_CRC [ECUC_Eth_00023]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "CRC Failure" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ETH_E_LATECOLLISION [ECUC_Eth_00029]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "Late Collisions" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ETH_E_MULTIPLECOLLISION [ECUC_Eth_00028]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "Multiple Collisions" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		

Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ETH_E_OVERSIZEFRAME [ECUC_Eth_00025]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "Oversized Frame" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ETH_E_RX_FRAMES_LOST [ECUC_Eth_00021]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "receive frames lost" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ETH_E_SINGLECOLLISION [ECUC_Eth_00027]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "Single Collisions" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ETH_E_UNDERSIZEFRAME [ECUC_Eth_00024]		
Parent Container	EthDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the error "Undersized Frame" has occurred.		
Multiplicity	0..1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

No Included Containers

10.2.8 EthGeneral

SWS Item	[ECUC_Eth_00001]
Container Name	EthGeneral
Parent Container	Eth
Description	General configuration of Ethernet Driver module

Configuration Parameters

Name	EthDevErrorDetect [ECUC_Eth_00003]		
Parent Container	EthGeneral		
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> • true: detection and notification is enabled. • false: detection and notification is disabled. 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthGetCounterValuesApi [ECUC_Eth_00035]		
Parent Container	EthGeneral		
Description	Enables / Disables Eth_GetCounterValues API.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthGetRxStatsApi [ECUC_Eth_00072]		
Parent Container	EthGeneral		
Description	Enables/Disables Eth_GetRxStats API.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthGetTxErrorCounterValuesApi [ECUC_Eth_00061]		
Parent Container	EthGeneral		
Description	Enables/Disables Eth_GetTxErrorCounterValues API.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthGetTxStatsApi [ECUC_Eth_00060]		
Parent Container	EthGeneral		
Description	Enables/Disables Eth_GetTxStats API.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthGlobalTimeSupport [ECUC_Eth_00037]		
Parent Container	EthGeneral		
Description	Enables/Disables the GlobalTime APIs used amongst others by Global Time Synchronization over Ethernet.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthIndex [ECUC_Eth_00018]		
Parent Container	EthGeneral		
Description	Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthMainFunctionPeriod [ECUC_Eth_00022]		
Parent Container	EthGeneral		
Description	Specifies the period of main function Eth_MainFunction in seconds. Ethernet driver does not require this information but the BSW scheduler.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthMaxCtrlsSupported [ECUC_Eth_00002]		
Parent Container	EthGeneral		
Description	Limits the total number of supported controllers.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	1 .. 255		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthVersionInfoApi [ECUC_Eth_00004]		
Parent Container	EthGeneral		
Description	Enables / Disables version info API		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthEcucPartitionRef [ECUC_Eth_00064]		
Parent Container	EthGeneral		
Description	Maps the Ethernet driver to zero or multiple ECUC partitions to make the modules API available in this partition. The Ethernet driver will operate as an independent instance in each of the partitions.		
Multiplicity	0..*		
Type	Reference to EcucPartition		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
EthCtrlOffloading	1	Configuration of hardware offloading features.

[SWS_Eth_00259] [The module will operate as an independent instance in each of the partitions, means the called API will only target the partition it is called in.] ()

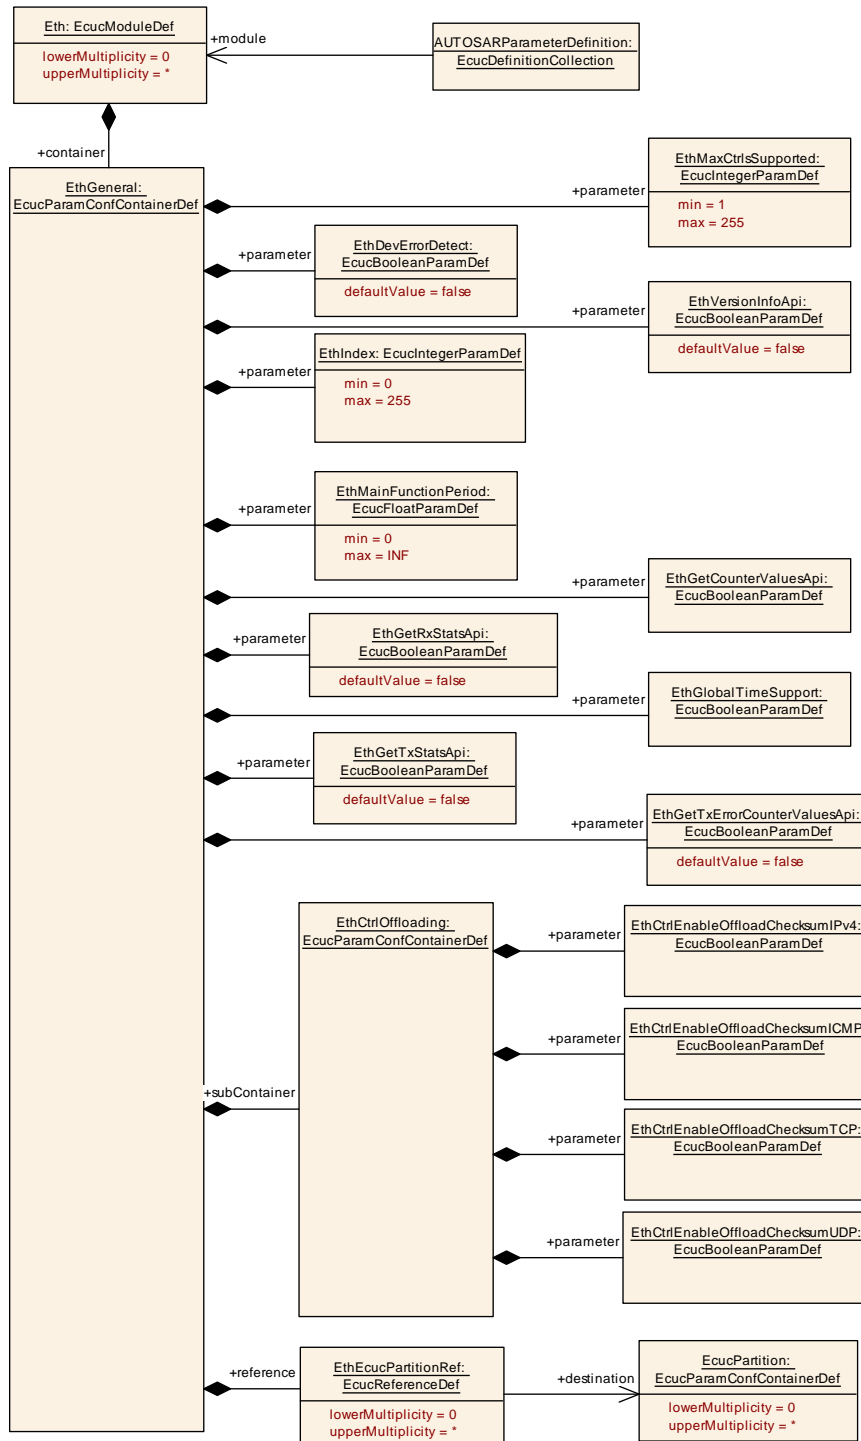


Figure 10.4: Overview Eth general configuration

10.2.8.1 EthCtrlOffloading

SWS Item	[ECUC_Eth_00030]
Container Name	EthCtrlOffloading
Parent Container	EthGeneral

Description	Configuration of hardware offloading features.
Configuration Parameters	

Name	EthCtrlEnableOffloadChecksumICMP [ECUC_Eth_00032]		
Parent Container	EthCtrlOffloading		
Description	Enables / Disables hardware offloading for ICMP checksums.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthCtrlEnableOffloadChecksumIPv4 [ECUC_Eth_00031]		
Parent Container	EthCtrlOffloading		
Description	Enables / Disables hardware offloading for IPv4 checksums.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthCtrlEnableOffloadChecksumTCP [ECUC_Eth_00033]		
Parent Container	EthCtrlOffloading		
Description	Enables / Disables hardware offloading for TCP checksums.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Name	EthCtrlEnableOffloadChecksumUDP [ECUC_Eth_00034]		
Parent Container	EthCtrlOffloading		
Description	Enables / Disables hardware offloading for UDP checksums.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.3 Published Information

For details refer to the chapter 10.3 “Published Information” in SWS_BSWGeneral [3].

A Not applicable requirements