

Document Title	Specification of Flash Test
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	261

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R22-11

Document Change History			
Date	Release	Changed by	Change Description
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none"> Changed SWS_FlsTst_00166 to SWS_FlsTst_NA_00166
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"> SWS_FlsTst_00019 removed
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> Included Development Errors as artifact
2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> “DRAFT” status of ECUC_FlsTst_00175 removed Changed Document Status from Final to published
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> FlsTstBlockBgndConfigSet and FlsTstBlockFgndConfigSet removed; FlsTstEcucPartitionRef configuration parameter added
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"> Numeric value definition minor corrections / clarifications / editorial changes; for details please refer to the ChangeDocumentation
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> ECUC_FlsTst_00172: FlsTstMainFunctionPeriod added; SWS_FlsTst_00081 removed; Unresolved references BSW00431, BSW00434, SRS_BSW_00326, SRS_BSW_00435, SRS_BSW_00436 deleted

Document Change History			
Date	Release	Changed by	Change Description
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Debugging support marked as obsolete • ECUC_FlsTst_00119 set to obsolete; • ECUC_FlsTst_00161 created; • ECUC_FlsTst_00151 modified (pre-compile only); • SWS_FlsTst_00023, SWS_FlsTst_00026, SWS_FlsTst_00133 removed; • SWS_FlsTst_00007: Error code 0x05 modified • SWS_FlsTst_00168 created: Extended production error table with pass/fail criteria; • SWS_FlsTst_00161 modified; • SWS_FlsTst_00167 created; • Renaming from Development Error Tracer to Default Error Tracer; changes in abbreviations, chapter 3.1, SWS_FlsTst_00011; • Template changes; chapters runtime errors and transient faults added
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Formal text modifications in: SWS_FlsTst_00138, SWS_FlsTst_00140, SWS_FlsTst_00142, SWS_FlsTst_00143, SWS_FlsTst_00071, SWS_FlsTst_00115, SWS_FlsTst_00116, SWS_FlsTst_00117, ECUC_FlsTst_00160, Figure 7/8/9/10 • ECUC_FlsTst_00086: configuration FlsTstConfigurationOfOptApiServices added

Document Change History			
Date	Release	Changed by	Change Description
2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • SWS_FlStst_00066: VARIABLE_CYCLIC_OR_ON_PRE CONDITION in table removed • Editorial changes • Removed chapter(s) on change documentation
2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Rework according to the new SWS_BSWGeneral document • Added Subchapter 3.x due to SWS General Rollout • Chapter 10: scope of configuration parameters are changed to “local” • SWS_FlStst_00003: Rename MemMap.h to FlStst_MemMap.h • SWS_FlStst_00007: production errors removed • New chapters Production Errors and Extended Production Errors created
2011-12-22	4.0.3	AUTOSAR Administration	<ul style="list-style-type: none"> • SWS_FlStst_00026: minor text change • Figure1: IRQ files removed • SWS_FlStst_00052: parameter range modified • SWS_FlStst_00053: minor text correction

Document Change History			
Date	Release	Changed by	Change Description
2010-09-30	3.1.5	AUTOSAR Administration	<ul style="list-style-type: none"> • FlsTst_BlockIdFgndType: type change to uint8-32 • Limit range of the following parameters to max. value "0xFFFFFFFF" • FlsTstBlockNumberBgnd: • FlsTstBlockNumberFgnd: • FlsTstBlockIndex: • FlsTstBlockSize: • FlsTstNumberOfTestedCells: • FlsTstNumberOfTestedCellsAtomic: • FlsTstTestIntervallIdEndValue: • FlsTst015 removed • ECUC_FlsTst_00119: configuration for each block • ECUC_FlsTst_00158: multiplicity changed to „1“. • FlsTstDemEventParameterRefs table included
2010-02-02	3.1.4	AUTOSAR Administration	<ul style="list-style-type: none"> • Initial release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work. The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Table of Contents

1	Introduction and functional overview	8
2	Acronyms and abbreviations.....	9
3	Related documentation	10
3.1	Input documents.....	10
3.2	Related specification.....	10
4	Constraints and assumptions.....	11
4.1	Limitations	11
4.2	Applicability to car domains	11
5	Dependencies to other modules	12
5.1	File structure	12
5.1.1	Code file structure	12
6	Requirements traceability	13
7	Functional specification.....	21
7.1	General behavior.....	21
7.1.1	State Diagram	22
7.2	Error Classification.....	23
7.2.1	Development Errors	23
7.2.2	Runtime Errors	23
7.2.3	Transient Faults.....	23
7.2.4	Production Errors	23
7.2.5	Extended Production Errors.....	24
7.3	Initialization Sequence	24
7.4	Version Check.....	24
7.5	Debugging Support	24
8	API specification.....	25
8.1	Imported types	25
8.2	Type definitions	25
8.2.1	FlsTst_ConfigType	25
8.2.2	FlsTst_StateType	25
8.2.3	FlsTst_TestResultFgndType	26
8.2.4	FlsTst_TestResultBgndType.....	26
8.2.5	FlsTst_BlockIdFgndType	27
8.2.6	FlsTst_ErrorDetailsType	28
8.2.7	FlsTst_TestSignatureFgndType.....	28
8.2.8	FlsTst_TestSignatureBgndType	28
8.2.9	FlsTst_TestResultType	29
8.3	Function definitions	29
8.3.1	FlsTst_Init.....	29
8.3.2	FlsTst_DelInit	30
8.3.3	FlsTst_StartFgnd.....	31
8.3.4	FlsTst_Abort	32

8.3.5	FlsTst_Suspend	32
8.3.6	FlsTst_Resume	33
8.3.7	FlsTst_GetCurrentState	34
8.3.8	FlsTst_GetTestResultBgnd	35
8.3.9	FlsTst_GetTestResultFgnd	36
8.3.10	FlsTst_GetVersionInfo	36
8.3.11	FlsTst_GetTestSignatureBgnd	37
8.3.12	FlsTst_GetTestSignatureFgnd	38
8.3.13	FlsTst_GetErrorDetails	39
8.3.14	FlsTst_TestEcc	39
8.4	Callback notifications	40
8.5	Scheduled functions	40
8.5.1	FlsTst_MainFunction	40
8.6	Expected Interfaces	41
8.6.1	Mandatory Interfaces	42
8.6.2	Optional Interfaces	42
8.6.3	Configurable interfaces	42
8.6.3.1	FlsTst_TestCompleted Notification	42
9	Sequence diagrams	44
9.1	Initialization	44
9.2	De-initialization	44
9.3	Background Test	45
9.3.1	Test Result Calculation within Flash test driver	45
9.3.2	Test signature provided to caller	46
9.4	Suspend and Resume Background Testing	47
9.5	Foreground Task interrupts Background Task	48
10	Configuration specification	49
10.1	Specification template for configuration parameters	49
10.2	Containers and configuration parameters	49
10.2.1	Variants	49
10.2.2	FlsTst	49
10.2.3	FlsTstGeneral	50
10.2.4	FlsTstConfigurationOfOptApiServices	54
10.2.5	FlsTstDemEventParameterRefs	59
10.2.6	FlsTstBlockBgnd	60
10.2.7	FlsTstBlockFgnd	63
10.3	Published Information	66
11	Not applicable requirements	67

1 Introduction and functional overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module Flash Test driver.

This Flash test module provides algorithm to test invariable memory. Invariable memory can be data/program flash, program SRAM, locked cache and is either embedded in the microcontroller or memory mapped connected to the microcontroller. For simplification the SW module is called Flash Test driver.

The test service can be executed at any time after MCU initialization and it is up to the user of the Flash Test Driver to choose the suitable test algorithm and the right execution place to fulfill the safety requirements of the system. The test service itself is dependant on the storage concept of the system. Therefore, the availability of different test algorithms is configurable.

The Flash Test driver is intended to be integrated in the overall safety concept and will not provide the required diagnostic coverage on its own.

2 Acronyms and abbreviations

Acronyms and abbreviations that have a local scope are not contained in the AUTOSAR glossary. These appear in a local glossary below.

Acronym:	Description:
BSW	BasicSoftWare
PC	PreCompile
PB	PostBuild

Abbreviation:	Description:
DEM	Diagnostic Event Manager.
DET	Default Error Tracer.
MCU	Micro Controller Unit.
PLL	Phase Locked Loop.
ISR	Interrupt Service Routine.

The following table lists important Term and Definition, which are used within this document.

Term:	Description:
Background test	Background test is called periodically by a scheduler, and is interruptible. The test is split up over many scheduled tasks.
Foreground test	Foreground test is called via users call.
Flash cell	Smallest entity to be addressed, in this case bytes shall be used
Invariable memory	Invariable memory can be program flash, program SRAM, locked cache and ROM
Test block	Defined memory area to be tested in foreground and background mode.
Test interval	Interval of a complete Flash test in background mode
Test time	Time for partial test defined within one scheduled task.
Signature	Unique calculation result of the content of a specific memory block
Memory block	Defined memory area
Partial test	Test to be executed in one scheduler interval
Test Interval Id	Identifier of a test interval, which shall be incremented by each start of a new test interval

3 Related documentation

3.1 Input documents

- [1] Layered Software Architecture
AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf
- [2] General Requirements on SPAL
AUTOSAR_SRS_SPALGeneral.pdf
- [3] General Requirements on Basic Software Modules
AUTOSAR_SRS_BSWGeneral.pdf
- [4] Specification of Default Error Tracer
AUTOSAR_SWS_DefaultErrorTracer.pdf
- [5] Specification of MCU Driver
AUTOSAR_SWS_MCUDriver.pdf
- [6] Specification of ECU Configuration,
AUTOSAR_TPS_ECUConfiguration.pdf
- [7] Basic Software Module Description Template,
AUTOSAR_TPS_BSWModuleDescriptionTemplate.pdf
- [8] List of Basic Software Modules
AUTOSAR_TR_BSWModuleList
- [9] General Specification of Basic Software Modules
AUTOSAR_SWS_BSWGeneral.pdf

3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [9] (SWS BSW General), which is also valid for Flash Test.

Thus, the specification SWS BSW General shall be considered as additional and required specification for Flash Test.

4 Constraints and assumptions

4.1 Limitations

During Flash Test operation, the Flash area under test shall not be modified.

4.2 Applicability to car domains

No restrictions.

5 Dependencies to other modules

The Flash Test module depends on the following modules:

- BSW scheduler is required to trigger main function in background mode

5.1 File structure

5.1.1 Code file structure

Note: Refer to SWS_BSWGeneral document [9].

6 Requirements traceability

Requirement	Description	Satisfied by
SRS_BSW_00003	All software modules shall provide version and identification information	SWS_FlsTst_NA_00166
SRS_BSW_00005	Modules of the \mu C Abstraction Layer (MCAL) may not have hard coded horizontal interfaces	SWS_FlsTst_NA_00166
SRS_BSW_00006	The source code of software modules above the \mu C Abstraction Layer (MCAL) shall not be processor and compiler dependent.	SWS_FlsTst_NA_00166
SRS_BSW_00007	All Basic SW Modules written in C language shall conform to the MISRA C 2012 Standard.	SWS_FlsTst_NA_00166
SRS_BSW_00009	All Basic SW Modules shall be documented according to a common standard.	SWS_FlsTst_NA_00166
SRS_BSW_00010	The memory consumption of all Basic SW Modules shall be documented for a defined configuration for all supported platforms.	SWS_FlsTst_NA_00166
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_FlsTst_00017
SRS_BSW_00159	All modules of the AUTOSAR Basic Software shall support a tool based configuration	SWS_FlsTst_NA_00166
SRS_BSW_00161	The AUTOSAR Basic Software shall provide a microcontroller abstraction layer which provides a standardized interface to higher software layers	SWS_FlsTst_NA_00166
SRS_BSW_00162	The AUTOSAR Basic Software shall provide a hardware abstraction layer	SWS_FlsTst_NA_00166
SRS_BSW_00164	The Implementation of interrupt service routines shall be done by the Operating System, complex drivers or modules	SWS_FlsTst_NA_00166
SRS_BSW_00167	All AUTOSAR Basic Software Modules shall provide configuration rules and constraints to enable plausibility checks	SWS_FlsTst_NA_00166
SRS_BSW_00168	SW components shall be tested	SWS_FlsTst_NA_00166

	by a function defined in a common API in the Basis-SW	
SRS_BSW_00170	The AUTOSAR SW Components shall provide information about their dependency from faults, signal qualities, driver demands	SWS_FlsTst_NA_00166
SRS_BSW_00172	The scheduling strategy that is built inside the Basic Software Modules shall be compatible with the strategy used in the system	SWS_FlsTst_NA_00166
SRS_BSW_00300	All AUTOSAR Basic Software Modules shall be identified by an unambiguous name	SWS_FlsTst_NA_00166
SRS_BSW_00301	All AUTOSAR Basic Software Modules shall only import the necessary information	SWS_FlsTst_NA_00166
SRS_BSW_00302	All AUTOSAR Basic Software Modules shall only export information needed by other modules	SWS_FlsTst_NA_00166
SRS_BSW_00304	All AUTOSAR Basic Software Modules shall use only AUTOSAR data types instead of native C data types	SWS_FlsTst_00016
SRS_BSW_00305	Data types naming convention	SWS_FlsTst_NA_00166
SRS_BSW_00306	AUTOSAR Basic Software Modules shall be compiler and platform independent	SWS_FlsTst_NA_00166
SRS_BSW_00307	Global variables naming convention	SWS_FlsTst_NA_00166
SRS_BSW_00308	AUTOSAR Basic Software Modules shall not define global data in their header files, but in the C file	SWS_FlsTst_NA_00166
SRS_BSW_00309	All AUTOSAR Basic Software Modules shall indicate all global data with read-only purposes by explicitly assigning the const keyword	SWS_FlsTst_NA_00166
SRS_BSW_00310	API naming convention	SWS_FlsTst_NA_00166
SRS_BSW_00312	Shared code shall be reentrant	SWS_FlsTst_NA_00166
SRS_BSW_00323	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	SWS_FlsTst_00033
SRS_BSW_00325	The runtime of interrupt service routines and functions that are running in interrupt context shall be kept short	SWS_FlsTst_NA_00166
SRS_BSW_00327	Error values naming convention	SWS_FlsTst_NA_00166
SRS_BSW_00328	All AUTOSAR Basic Software	SWS_FlsTst_NA_00166

	Modules shall avoid the duplication of code	
SRS_BSW_00330	It shall be allowed to use macros instead of functions where source code is used and runtime is critical	SWS_FlsTst_NA_00166
SRS_BSW_00331	All Basic Software Modules shall strictly separate error and status information	SWS_FlsTst_NA_00166
SRS_BSW_00334	All Basic Software Modules shall provide an XML file that contains the meta data	SWS_FlsTst_NA_00166
SRS_BSW_00335	Status values naming convention	SWS_FlsTst_NA_00166
SRS_BSW_00336	Basic SW module shall be able to shutdown	SWS_FlsTst_00027
SRS_BSW_00337	Classification of development errors	SWS_FlsTst_00007
SRS_BSW_00339	Reporting of production relevant error status	SWS_FlsTst_00042, SWS_FlsTst_00060, SWS_FlsTst_00112
SRS_BSW_00341	Module documentation shall contains all needed informations	SWS_FlsTst_NA_00166
SRS_BSW_00342	It shall be possible to create an AUTOSAR ECU out of modules provided as source code and modules provided as object code, even mixed	SWS_FlsTst_NA_00166
SRS_BSW_00343	The unit of time for specification and configuration of Basic SW modules shall be preferably in physical time unit	SWS_FlsTst_NA_00166
SRS_BSW_00344	BSW Modules shall support link-time configuration	SWS_FlsTst_NA_00166
SRS_BSW_00347	A Naming separation of different instances of BSW drivers shall be in place	SWS_FlsTst_NA_00166
SRS_BSW_00348	All AUTOSAR standard types and constants shall be placed and organized in a standard type header file	SWS_FlsTst_NA_00166
SRS_BSW_00350	All AUTOSAR Basic Software Modules shall allow the enabling/disabling of detection and reporting of development errors.	SWS_FlsTst_NA_00166
SRS_BSW_00353	All integer type definitions of target and compiler specific scope shall be placed and organized in a single type header	SWS_FlsTst_NA_00166
SRS_BSW_00357	For success/failure of an API call a standard return type shall be	SWS_FlsTst_00063

	defined	
SRS_BSW_00358	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	SWS_FlsTst_NA_00166
SRS_BSW_00373	The main processing function of each AUTOSAR Basic Software Module shall be named according the defined convention	SWS_FlsTst_NA_00166
SRS_BSW_00375	Basic Software Modules shall report wake-up reasons	SWS_FlsTst_NA_00166
SRS_BSW_00377	A Basic Software Module can return a module specific types	SWS_FlsTst_00048
SRS_BSW_00378	AUTOSAR shall provide a boolean type	SWS_FlsTst_NA_00166
SRS_BSW_00385	List possible error notifications	SWS_FlsTst_00007
SRS_BSW_00386	The BSW shall specify the configuration and conditions for detecting an error	SWS_FlsTst_00025, SWS_FlsTst_00033, SWS_FlsTst_00056, SWS_FlsTst_00059, SWS_FlsTst_00062, SWS_FlsTst_00065, SWS_FlsTst_00089, SWS_FlsTst_00091, SWS_FlsTst_00093, SWS_FlsTst_00114
SRS_BSW_00398	The link-time configuration is achieved on object code basis in the stage after compiling and before linking	SWS_FlsTst_NA_00166
SRS_BSW_00401	Documentation of multiple instances of configuration parameters shall be available	SWS_FlsTst_NA_00166
SRS_BSW_00405	BSW Modules shall support multiple configuration sets	SWS_FlsTst_00018
SRS_BSW_00406	A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the BSW module is called	SWS_FlsTst_00011
SRS_BSW_00407	Each BSW module shall provide a function to read out the version information of a dedicated module implementation	SWS_FlsTst_00044
SRS_BSW_00408	All AUTOSAR Basic Software Modules configuration parameters shall be named according to a specific naming rule	SWS_FlsTst_NA_00166
SRS_BSW_00409	All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration	SWS_FlsTst_00007
SRS_BSW_00410	Compiler switches shall have defined values	SWS_FlsTst_NA_00166
SRS_BSW_00411	All AUTOSAR Basic Software	SWS_FlsTst_00044

	Modules shall apply a naming rule for enabling/disabling the existence of the API	
SRS_BSW_00413	An index-based accessing of the instances of BSW modules shall be done	SWS_FlsTst_NA_00166
SRS_BSW_00414	Init functions shall have a pointer to a configuration structure as single parameter	SWS_FlsTst_NA_00166
SRS_BSW_00415	Interfaces which are provided exclusively for one module shall be separated into a dedicated header file	SWS_FlsTst_NA_00166
SRS_BSW_00416	The sequence of modules to be initialized shall be configurable	SWS_FlsTst_NA_00166
SRS_BSW_00417	Software which is not part of the SW-C shall report error events only after the Dem is fully operational.	SWS_FlsTst_NA_00166
SRS_BSW_00419	If a pre-compile time configuration parameter is implemented as const it should be placed into a separate c-file	SWS_FlsTst_NA_00166
SRS_BSW_00422	Pre-de-bouncing of error status information is done within the Dem	SWS_FlsTst_NA_00166
SRS_BSW_00423	BSW modules with AUTOSAR interfaces shall be describable with the means of the SW-C Template	SWS_FlsTst_NA_00166
SRS_BSW_00424	BSW module main processing functions shall not be allowed to enter a wait state	SWS_FlsTst_NA_00166
SRS_BSW_00425	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_FlsTst_NA_00166
SRS_BSW_00426	BSW Modules shall ensure data consistency of data which is shared between BSW modules	SWS_FlsTst_NA_00166
SRS_BSW_00427	ISR functions shall be defined and documented in the BSW module description template	SWS_FlsTst_NA_00166
SRS_BSW_00428	A BSW module shall state if its main processing function(s) has to be executed in a specific order or sequence	SWS_FlsTst_NA_00166
SRS_BSW_00429	Access to OS is restricted	SWS_FlsTst_NA_00166
SRS_BSW_00432	Modules should have separate main processing functions for read/receive and write/transmit	SWS_FlsTst_NA_00166

	data path	
SRS_BSW_00433	Main processing functions are only allowed to be called from task bodies provided by the BSW Scheduler	SWS_FlsTst_NA_00166
SRS_BSW_00437	Memory mapping shall provide the possibility to define RAM segments which are not to be initialized during startup	SWS_FlsTst_NA_00166
SRS_BSW_00438	Configuration data shall be defined in a structure	SWS_FlsTst_00018
SRS_BSW_00439	Enable BSW modules to handle interrupts	SWS_FlsTst_NA_00166
SRS_BSW_00440	The callback function invocation by the BSW module shall follow the signature provided by RTE to invoke servers via Rte_Call API	SWS_FlsTst_NA_00166
SRS_FlsTst_14208	Background Flash test shall be interruptible	SWS_FlsTst_00066, SWS_FlsTst_00071
SRS_FlsTst_14209	The memory to be tested shall be split into individual smaller pieces	SWS_FlsTst_00066, SWS_FlsTst_00071, SWS_FlsTst_00139
SRS_FlsTst_14211	Flash test execution status shall be available	SWS_FlsTst_00040, SWS_FlsTst_00041, SWS_FlsTst_00091
SRS_FlsTst_14212	Flash test execution completion shall be provided by a notification mechanism	SWS_FlsTst_00077, SWS_FlsTst_00078
SRS_FlsTst_14213	Calculation signature/checksum of a finalized test shall be provided	SWS_FlsTst_00054, SWS_FlsTst_00055, SWS_FlsTst_00056, SWS_FlsTst_00057, SWS_FlsTst_00058, SWS_FlsTst_00059, SWS_FlsTst_00115, SWS_FlsTst_00116
SRS_FlsTst_14214	Service for Flash test execution result shall be provided.	SWS_FlsTst_00042, SWS_FlsTst_00043, SWS_FlsTst_00093, SWS_FlsTst_00112, SWS_FlsTst_00113, SWS_FlsTst_00114
SRS_FlsTst_14215	Suspend Flash test execution shall be possible	SWS_FlsTst_00034, SWS_FlsTst_00036, SWS_FlsTst_00037, SWS_FlsTst_00088
SRS_FlsTst_14216	Flash test execution shall be resumed when suspended	SWS_FlsTst_00035, SWS_FlsTst_00038, SWS_FlsTst_00039, SWS_FlsTst_00089
SRS_FlsTst_14217	Flash test execution shall be stopped when wanted	SWS_FlsTst_00030, SWS_FlsTst_00031, SWS_FlsTst_00032
SRS_FlsTst_14219	Foreground Flash test shall be available	SWS_FlsTst_00033, SWS_FlsTst_00050, SWS_FlsTst_00051, SWS_FlsTst_00137, SWS_FlsTst_00143, SWS_FlsTst_00149
SRS_FlsTst_14221	Memory Content to Be Tested Should Not be Valid During the Test	SWS_FlsTst_NA_00166
SRS_FlsTst_14223	Flash Test Error details shall be reported	SWS_FlsTst_00060, SWS_FlsTst_00061, SWS_FlsTst_00062
SRS_FlsTst_14224	ECC Circuitry shall be tested	SWS_FlsTst_00063, SWS_FlsTst_00064, SWS_FlsTst_00065

SRS_FlsTst_14225	Each Flash test Interval shall have an Identifier	SWS_FlsTst_00153, SWS_FlsTst_00154, SWS_FlsTst_00155
SRS_SPAL_00157	All drivers and handlers of the AUTOSAR Basic Software shall implement notification mechanisms of drivers and handlers	SWS_FlsTst_00040, SWS_FlsTst_00042, SWS_FlsTst_00054, SWS_FlsTst_00057, SWS_FlsTst_00060, SWS_FlsTst_00072, SWS_FlsTst_00073, SWS_FlsTst_00077, SWS_FlsTst_00112
SRS_SPAL_12057	All driver modules shall implement an interface for initialization	SWS_FlsTst_00017, SWS_FlsTst_00020
SRS_SPAL_12064	All driver modules shall raise an error if the change of the operation mode leads to degradation of running operations	SWS_FlsTst_NA_00166
SRS_SPAL_12067	All driver modules shall set their wake-up conditions depending on the selected operation mode	SWS_FlsTst_NA_00166
SRS_SPAL_12068	The modules of the MCAL shall be initialized in a defined sequence	SWS_FlsTst_NA_00166
SRS_SPAL_12069	All drivers of the SPAL that wake up from a wake-up interrupt shall report the wake-up reason	SWS_FlsTst_NA_00166
SRS_SPAL_12075	All drivers with random streaming capabilities shall use application buffers	SWS_FlsTst_NA_00166
SRS_SPAL_12077	All drivers shall provide a non blocking implementation	SWS_FlsTst_NA_00166
SRS_SPAL_12078	The drivers shall be coded in a way that is most efficient in terms of memory and runtime resources	SWS_FlsTst_NA_00166
SRS_SPAL_12092	The driver's API shall be accessed by its handler or manager	SWS_FlsTst_NA_00166
SRS_SPAL_12125	All driver modules shall only initialize the configured resources	SWS_FlsTst_00022
SRS_SPAL_12129	The ISRs shall be responsible for resetting the interrupt flags and calling the according notification function	SWS_FlsTst_NA_00166
SRS_SPAL_12163	All driver modules shall implement an interface for de-initialization	SWS_FlsTst_00027, SWS_FlsTst_00028
SRS_SPAL_12169	All driver modules that provide different operation modes shall provide a service for mode selection	SWS_FlsTst_NA_00166
SRS_SPAL_12265	Configuration data shall be kept constant	SWS_FlsTst_NA_00166
SRS_SPAL_12267	Wakeup sources shall be	SWS_FlsTst_NA_00166

	initialized by MCAL drivers and/or the MCU driver	
SRS_SPAL_12448	All driver modules shall have a specific behavior after a development error detection	SWS_FlsTst_00025, SWS_FlsTst_00033, SWS_FlsTst_00039
SRS_SPAL_12461	Specific rules regarding initialization of controller registers shall apply to all driver implementations	SWS_FlsTst_NA_00166
SRS_SPAL_12462	The register initialization settings shall be published	SWS_FlsTst_NA_00166
SRS_SPAL_12463	The register initialization settings shall be combined and forwarded	SWS_FlsTst_NA_00166

7 Functional specification

7.1 General behavior

[SWS_FlsTst_00137] [The Flash test module provides test execution services in background and foreground mode (see also chapter 2).] (SRS_FlsTst_14219)

[SWS_FlsTst_00138] [The memory blocks to be tested shall be configurable for background and foreground mode separately.] ()

[SWS_FlsTst_00139] [In background mode the test blocks shall be tested in the same order they are configured in configuration structure. When all blocks are tested, one test interval is completed (see Figure 2). In background testing the partial tests shall be triggered via `FlsTst_MainFunction` (see [SWS_FlsTst_00066](#)).] (SRS_FlsTst_14209)

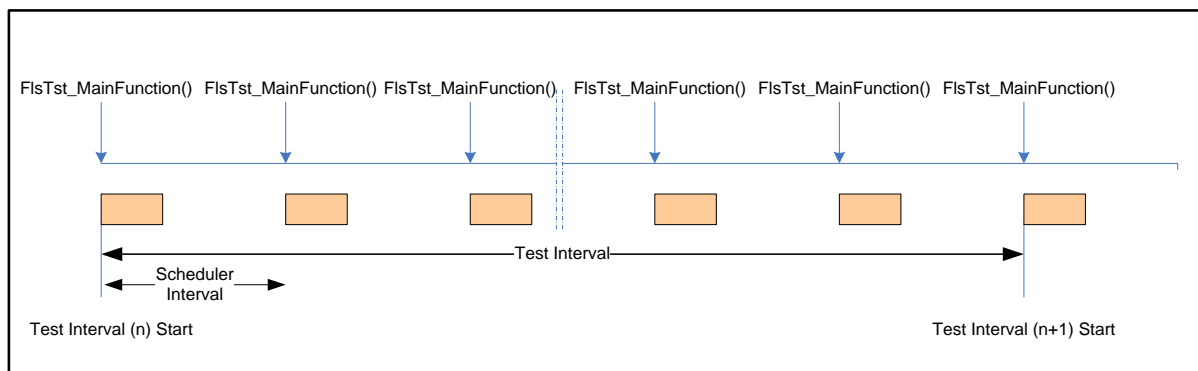


Figure 2: Background Test: Test Interval

[SWS_FlsTst_00140] [The length of a partial test is defined by the number of tested cells, which shall be tested in one scheduled task. (see ECUC_FlsTst_00161). The required time for a partial test without interruption is defined as “Test time”.] ()

Note: The partial test can be interrupted by a higher priority task at any time, because the Flash test does not require atomic sequences. It is the responsibility of the user to ensure that the interruptible partial test is finished before the scheduler interval is started (See Figure 3).

[SWS_FlsTst_00142] [A background test shall be aborted or suspended via the API services `FlsTst_Abort()` or `FlsTst_Suspended()`. The maximum latency time until the API call request is processed, shall be configurable (see ECUC_FlsTst_00120).] ()

[SWS_FlsTst_00156] [Each Flash test Interval shall have an Identifier, which shall be incremented by each start of a new test interval in background mode.] ()

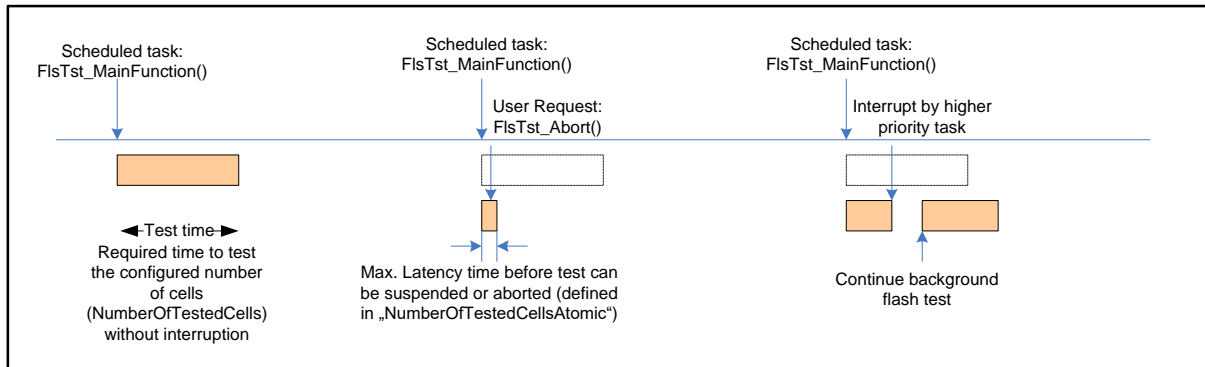


Figure 3: Background Test: Test Process

7.1.1 State Diagram

The Flash test driver states in background mode are described in Figure 4. The described states are driver states in background operation mode.

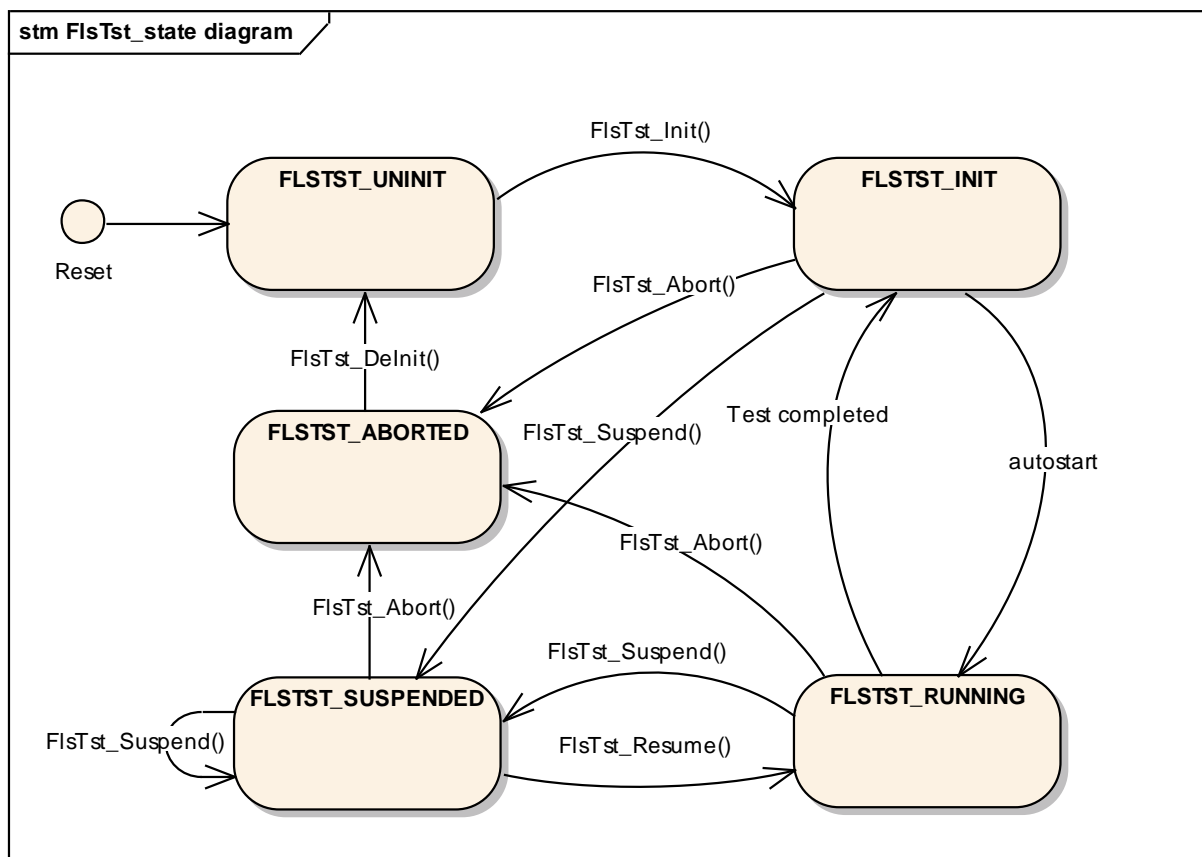


Figure 4: State Diagram – Background mode

[SWS_FlsTst_00143] [Foreground tests are defined as synchronous tests which shall not be interrupted. The execution of Foreground tests is configurable (see ECUC_FlsTst_00086) and can be called after module initialization at any time.]

(SRS_FlsTst_14219)

7.2 Error Classification

The section 7.2 "Error Handling" of the document "General Specification of Basic Software Modules" describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types that may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

7.2.1 Development Errors

[SWS_FlsTst_00007]

<i>Type of error</i>	<i>Related error code</i>	<i>Error value</i>
Failure within Flash Test execution state	FLSTST_E_STATE_FAILURE	0x01
API parameter out of specified range	FLSTST_E_PARAM_INVALID	0x02
API service used without module initialization	FLSTST_E_UNINIT	0x03
Flash Test module is already initialized	FLSTST_E_ALREADY_INITIALIZED	0x04
For Variant PB: Configuration pointer is a NULL pointer. For Variant PC: Configuration pointer is NOT a NULL pointer.	FLSTST_E_INIT_FAILED	0x05
Pointer is a NULL pointer	FLSTST_E_PARAM_POINTER	0x06

](SRS_BSW_00337, SRS_BSW_00409, SRS_BSW_00385)

7.2.2 Runtime Errors

There are no runtime errors.

7.2.3 Transient Faults

There are no transient faults.

7.2.4 Production Errors

There are no production errors.

7.2.5 Extended Production Errors

[SWS_FlsTst_00168]

Error Name:	FLSTST_E_FLSTST_FAILURE	
Short Description:	Failure detection in background mode	
Long Description:	This Extended Production Error shall be issued in case a failure is detected in background mode within a test interval.	
Detection Criteria:	Fail	At least one block within a test interval in background mode is NOT OK (see SWS_FlsTst_00167)
	Pass	All blocks within a test interval in background mode are tested with the result OK.(see SWS_FlsTst_00161)
Secondary Parameters:	N/A	
Time Required:	N/A	
Monitor Frequency	continuous	

]()

7.3 Initialization Sequence

[SWS_FlsTst_00011] [The function `FlsTst_Init` shall be called first before calling any other Flash Test functions except the function `FlsTst_GetCurrentState`. If this sequence is not respected, the error code `FLSTST_E_UNINIT` shall be reported to the Default Error Tracer (if development error detection is enabled).] (SRS_BSW_00406)

7.4 Version Check

Note: Refer to SWS_BSWGeneral document [9].

7.5 Debugging Support

No requirement defined.

8 API specification

8.1 Imported types

This chapter lists data type definitions for the included variables and constants.

[SWS_FlsTst_00016]

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
Dem	Rte_Dem_Type.h	Dem_EventIdType
	Rte_Dem_Type.h	Dem_EventStatusType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

](SRS_BSW_00304)

8.2 Type definitions

8.2.1 FlsTst_ConfigType

[SWS_FlsTst_00018]

Name	FlsTst_ConfigType	
Kind	Structure	
Elements	implementation specific	
	Type	--
	Comment	implementation specific
Description	This type of external data structure shall contain the initialization data for the Flash Test.	
Available via	FlsTst.h	

](SRS_BSW_00405, SRS_BSW_00438)

8.2.2 FlsTst_StateType

[SWS_FlsTst_00048]

Name	FlsTst_StateType
Kind	Enumeration

Range	FLSTST_UNINIT	0x00	The Flash Test is not initialized or not usable.
	FLSTST_INIT	0x01	The Flash Test is initialized and ready to be started.
	FLSTST_RUNNING	0x02	The Flash Test is currently running.
	FLSTST_ABORTED	0x03	The Flash Test is aborted.
	FLSTST_SUSPENDED	0x04	The Flash Test is waiting to be resumed or is waiting to start foreground mode test
Description	This is a state value returned by the API service FlsTst_GetCurrentState().		
Available via	FlsTst.h		

](SRS_BSW_00377)

[SWS_FlsTst_00049] [For the type `FlsTst_StateType`, the enumeration value `FLSTST_UNINIT` shall be the default value after a reset.] ()

8.2.3 FlsTst_TestResultFgndType

[SWS_FlsTst_00052][

Name	FlsTst_TestResultFgndType		
Kind	Enumeration		
Range	FLSTST_NOT_TESTED	0x00	There is no result available.
	FLSTST_OK	0x01	The last Flash Test has been tested with OK result.
	FLSTST_NOT_OK	0x02	The last Flash Test has been tested with NOT_OK result.
Description	Return type of API service FlsTst_GetResultFgnd().		
Available via	FlsTst.h		

]()

[SWS_FlsTst_00053] [For the type `FlsTst_TestResultFgndType`, the enumeration value `FLSTST_NOT_TESTED` shall be the default value after a reset.] ()

8.2.4 FlsTst_TestResultBgndType

[SWS_FlsTst_00153][

Name	FlsTst_TestResultBgndType	
Kind	Structure	
Elements	0..<FlsTstTestIntervalldEndValue>	
	Type	uint8, uint16, uint32
	Comment	current value of FlsTstTestIntervalld, which is incremented by each new start of an test interval.
	result	
	Type	FlsTst_TestResultType
	Comment	--
Description	Return type of API service FlsTst_GetTestResultBgnd().	
Available via	FlsTst.h	

](SRS_FlsTst_14225)

[SWS_FlsTst_00154] [For the type `FlsTst_TestResultBgndType`, the enumeration value `FLSTST_RESULT_NOT_TESTED` shall be the default value after a reset.] (SRS_FlsTst_14225)

8.2.5 FlsTst_BlockIdFgndType

[SWS_FlsTst_00100]

Name	FlsTst_BlockIdFgndType	
Kind	Type	
Derived from	Basetype	Variation
	uint16	--
	uint32	--
	uint8	--
Range	0..<FlsTstBlockNumberFgnd > - 1	-- The range is dependent on the number of Foreground Flash blocks defined in the configuration structure. The type shall be chosen depending on the MCU platform for best performance.
Description	This type specifies the identification (ID) for a Flash block to be tested in foreground mode, which is configured in the configuration structure.	
Available via	FlsTst.h	

]()

8.2.6 FlsTst_ErrorDetailsType

[SWS_FlsTst_00108]

Name	FlsTst_ErrorDetailsType	
Kind	Structure	
Elements	implementation specific	
	Type	--
	Comment	implementation specific
Description	This type shall specify implementation specific error information monitored in the Flash test module.	
Available via	FlsTst.h	

]()

8.2.7 FlsTst_TestSignatureFgndType

[SWS_FlsTst_00109]

Name	FlsTst_TestSignatureFgndType	
Kind	Structure	
Elements	implementation specific	
	Type	--
	Comment	Implementation specific type
Description	Type for test signature in foreground mode	
Available via	FlsTst.h	

]()

8.2.8 FlsTst_TestSignatureBgndType

[SWS_FlsTst_00155]

Name	FlsTst_TestSignatureBgndType	
Kind	Structure	
Elements	0..<FlsTstTestIntervalldEndValue>	
	Type	uint8, uint16, uint32
	Comment	current value of FlsTstTestIntervalld, which is incremented by each new start of an test interval.

	Implementation specific	
	Type	uint8, uint16, uint32
	Comment	It represents the signature value of the last completed test interval. Value might be generated from several block signatures.
Description	Type for test signature in background mode.	
Available via	FlsTst.h	

](SRS_FlsTst_14225)

8.2.9 FlsTst_TestResultType

[SWS_FlsTst_00164]

Name	FlsTst_TestResultType		
Kind	Enumeration		
Range	FLSTST_RESULT_NOT_TESTED	0x00	There is no test result available.
	FLSTST_RESULT_OK	0x01	The last Flash Test interval has been tested with OK result
	FLSTST_RESULT_NOT_OK	0x02	The last Flash Test interval has been tested with NOT-OK result.
Description	--		
Available via	FlsTst.h		

]()

8.3 Function definitions

This is a list of functions provided for upper layer modules.

8.3.1 FlsTst_Init

[SWS_FlsTst_00017]

Service Name	FlsTst_Init
Syntax	<pre>void FlsTst_Init (const FlsTst_ConfigType* ConfigPtr)</pre>
Service ID [hex]	0x00

Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	ConfigPtr	Pointer to configuration set
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Service for Flash Test initialization.	
Available via	FlsTst.h	

](SRS_BSW_00101, SRS_SPAL_12057)

[SWS_FlsTst_00020] [The function `FlsTst_Init` shall initialize all Flash Test relevant registers and global variables and change the execution state to `FLSTST_INIT`.] (SRS_SPAL_12057)

[SWS_FlsTst_00022] [The function `FlsTst_Init` shall only initialize the configured resources and shall not touch resources that are not configured in the configuration file.] (SRS_SPAL_12125)

[SWS_FlsTst_00025] [If development error detection is enabled, calling the routine `FlsTst_Init` while the Flash Test driver is already initialized shall cause development error `FLSTST_E_ALREADY_INITIALIZED`. The function shall be left without any action.] (SRS_BSW_00386, SRS_SPAL_12448)

Note: The `FlsTst_Init` function shall be called only once after a reset, unless an `FlsTst_DeInit` call is made before calling `FlsTst_Init` again.

8.3.2 FlsTst_DeInit

[SWS_FlsTst_00027][

Service Name	FlsTst_DeInit
Syntax	<pre>void FlsTst_DeInit (void)</pre>
Service ID [hex]	0x01
Sync/Async	Synchronous
Reentrancy	Non Reentrant
Parameters (in)	None
Parameters (inout)	None

Parameters (out)	None
Return value	None
Description	Service for Flash Test De-Initialization.
Available via	FlsTst.h

](SRS_BSW_00336, SRS_SPAL_12163)

[SWS_FlsTst_00028] [The function `FlsTst_DeInit` shall de-initialize all Flash Test relevant registers and global variables that were initialized by `FlsTst_Init`.]
(SRS_SPAL_12163)

[SWS_FlsTst_00029] [The function `FlsTst_DeInit` shall set the Flash Test module state to `FLSTST_UNINIT`.] ()

8.3.3 FlsTst_StartFgnd

[SWS_FlsTst_00149]

Service Name	FlsTst_StartFgnd	
Syntax	<pre>Std_ReturnType FlsTst_StartFgnd (FlsTst_BlockIdFgndType FgndBlockId)</pre>	
Service ID [hex]	0x02	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	FgndBlockId	Number of the foreground test to be executed. This is dependent on configuration.
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_Return-Type	E_OK: Foreground test processed E_NOT_OK: Foreground test not accepted
Description	Service for executing foreground Flash Test.	
Available via	FlsTst.h	

](SRS_FlsTst_14219)

[SWS_FlsTst_00050] [The function `FlsTst_StartFgnd` is only applicable for Foreground mode Flash Test operation.] (SRS_FlsTst_14219)

[SWS_FlsTst_00051] [The function `FlsTst_StartFgnd` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_StartFgndApi`.]
(SRS_FlsTst_14219)

[SWS_FlsTst_00033] [If development error detection is enabled and the parameter `FgndBlockId` is out of range, the DET error value `FLSTST_E_PARAM_INVALID` shall be raised and the function shall return without any action with return value `E_NOT_OK`.] (SRS_BSW_00323, SRS_BSW_00386, SRS_SPAL_12448, SRS_FlsTst_14219)

8.3.4 FlsTst_Abort

[SWS_FlsTst_00030][

Service Name	FlsTst_Abort
Syntax	<pre>void FlsTst_Abort (void)</pre>
Service ID [hex]	0x03
Sync/Async	Synchronous
Reentrancy	Non Reentrant
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	Service for aborting the Flash Test.
Available via	FlsTst.h

](SRS_FlsTst_14217)

[SWS_FlsTst_00031] [This function shall abort Flash test background operation and set the state to `FLSTST_ABORTED`. When the `FlsTst_Abort` function is called, `FlsTst_MainFunction` shall finish the current atomic sequence it is running.]
(SRS_FlsTst_14217)

[SWS_FlsTst_00032] [After an `FlsTst_Abort` call, `FlsTst_MainFunction` shall not begin testing again when called by the scheduler until after a complete re-initialization of the Flash test module.] (SRS_FlsTst_14217)

8.3.5 FlsTst_Suspend

[SWS_FlsTst_00034][

Service Name	FlsTst_Suspend
Syntax	<pre>void FlsTst_Suspend (void)</pre>
Service ID [hex]	0x04
Sync/Async	Synchronous
Reentrancy	Non Reentrant
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	Service for suspending current operation of the Flash Test, until FlsTst_Resume is called.
Available via	FlsTst.h

](SRS_FlsTst_14215)

[SWS_FlsTst_00036] [The function FlsTst_Suspend is only applicable for Background mode Flash Test operation.] (SRS_FlsTst_14215)

[SWS_FlsTst_00037] [The function FlsTst_Suspend shall set the Flash Test execution state to FLSTST_SUSPENDED in case the execution state was FLSTST_RUNNING or FLSTST_INIT.] (SRS_FlsTst_14215)

[SWS_FlsTst_00088] [The function FlsTst_Suspend shall be pre compile time configurable On/Off by the configuration parameter: FlsTst_SuspendResumeApi.] (SRS_FlsTst_14215)

8.3.6 FlsTst_Resume

[SWS_FlsTst_00035][

Service Name	FlsTst_Resume
Syntax	<pre>void FlsTst_Resume (void)</pre>
Service ID [hex]	0x05
Sync/Async	Synchronous

Reentrancy	Non Reentrant
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	Service for continuing the Flash Test at the point it was suspended.
Available via	FlsTst.h

](SRS_FlsTst_14216)

[SWS_FlsTst_00038] [The function `FlsTst_Resume` shall change the execution state to `FLSTST_RUNNING` when commanded to continue and the current execution state is `FLSTST_SUSPENDED`.] (SRS_FlsTst_14216)

[SWS_FlsTst_00039] [If development error detection is enabled and the execution state of the Flash Test module is not `FLSTST_SUSPENDED`, the Flash Test module shall report the error value `FLSTST_E_STATE_FAILURE` to the DET, and then immediately return from the function.] (SRS_SPAL_12448, SRS_FlsTst_14216)

[SWS_FlsTst_00162] [The function `FlsTst_Resume` is only applicable for Background mode Flash Test operation.] ()

[SWS_FlsTst_00089] [The function `FlsTst_Resume` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_SuspendResumeApi`.] (SRS_BSW_00386, SRS_FlsTst_14216)

8.3.7 FlsTst_GetCurrentState

[SWS_FlsTst_00040]

Service Name	FlsTst_GetCurrentState
Syntax	<pre>FlsTst_StateType FlsTst_GetCurrentState (void)</pre>
Service ID [hex]	0x06
Sync/Async	Synchronous
Reentrancy	Non Reentrant
Parameters (in)	None

Parameters (inout)	None	
Parameters (out)	None	
Return value	FlsTst_- StateType	FLSTST_UNINIT The Flash Test is not initialized or not usable. FLSTST_INIT The Flash Test is initialized and ready to be started. FLSTST_RUNNING The Flash Test is currently running. FLSTST_ABORTED The Flash Test is aborted. FLSTST_SUSPENDED The Flash Test is waiting to be resumed or is waiting to start foreground mode test
Description	Service returns the current Flash Test execution state.	
Available via	FlsTst.h	

|(SRS_SPAL_00157, SRS_FlsTst_14211)

[SWS_FlsTst_00041] [The function `FlsTst_GetCurrentState` shall return the current Flash Test execution state.] (SRS_FlsTst_14211)

[SWS_FlsTst_00091] [The function `FlsTst_GetCurrentState` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_GetCurrentStateApi`.] (SRS_BSW_00386, SRS_FlsTst_14211)

8.3.8 FlsTst_GetTestResultBgnd

[SWS_FlsTst_00042]

Service Name	FlsTst_GetTestResultBgnd	
Syntax	<pre>FlsTst_TestResultBgndType FlsTst_GetTestResultBgnd (void)</pre>	
Service ID [hex]	0x07	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	FlsTst_TestResultBgndType	See type definition
Description	Service returns the Background Flash Test result.	
Available via	FlsTst.h	

|(SRS_BSW_00339, SRS_SPAL_00157, SRS_FlsTst_14214)

[SWS_FlsTst_00043] [The function `FlsTst_GetTestResultBgnd` shall return the Flash test result and Test Interval Id of the last background test.] (SRS_FlsTst_14214)

[SWS_FlsTst_00093] [The function `FlsTst_GetTestResultBgnd` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_GetTestResultBgndApi`.] (SRS_BSW_00386, SRS_FlsTst_14214)

8.3.9 FlsTst_GetTestResultFgnd

[SWS_FlsTst_00112]

Service Name	FlsTst_GetTestResultFgnd	
Syntax	<pre>FlsTst_TestResultFgndType FlsTst_GetTestResultFgnd (void)</pre>	
Service ID [hex]	0x0f	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	FlsTst_TestResultFgndType	See type definition
Description	Service returns the Foreground Flash Test result.	
Available via	FlsTst.h	

] (SRS_BSW_00339, SRS_SPAL_00157, SRS_FlsTst_14214)

[SWS_FlsTst_00113] [The function `FlsTst_GetTestResultFgnd` shall return the Flash test result of the last foreground test.] (SRS_FlsTst_14214)

[SWS_FlsTst_00114] [The function `FlsTst_GetTestResultFgnd` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_GetTestResultFgndApi`.] (SRS_BSW_00386, SRS_FlsTst_14214)

8.3.10 FlsTst_GetVersionInfo

[SWS_FlsTst_00044]

Service Name	FlsTst_GetVersionInfo
---------------------	-----------------------

Syntax	<pre>void FlsTst_GetVersionInfo (Std_VersionInfoType* versioninfo)</pre>	
Service ID [hex]	0x08	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	versioninfo	Pointer to where to store the version information of this module.
Return value	None	
Description	Service returns the version information of this module.	
Available via	FlsTst.h	

](SRS_BSW_00407, SRS_BSW_00411)

8.3.11 FlsTst_GetTestSignatureBgnd

[SWS_FlsTst_00054][

Service Name	FlsTst_GetTestSignatureBgnd	
Syntax	<pre>FlsTst_TestSignatureBgndType FlsTst_GetTestSignatureBgnd (void)</pre>	
Service ID [hex]	0x09	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	FlsTst_TestSignatureBgndType	See type definition
Description	Service returns the Flash Test result in background mode.	
Available via	FlsTst.h	

](SRS_FlsTst_14213, SRS_SPAL_00157) [SWS_FlsTst_00055] [The function `FlsTst_GetTestSignatureBgnd` shall return the signature and Test Interval Id of the last background test.] (SRS_FlsTst_14213)

[SWS_FlsTst_00056] [The function `FlsTst_GetTestSignatureBgnd` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_GetTestSignatureBgndApi`.] (SRS_BSW_00386, SRS_FlsTst_14213)

[SWS_FlsTst_00115] [If no signature is available, the function `FlsTst_GetTestSignatureBgnd` shall return the default signature value “0x0”.] (SRS_FlsTst_14213)

8.3.12 FlsTst_GetTestSignatureFgnd

[SWS_FlsTst_00057]

Service Name	FlsTst_GetTestSignatureFgnd	
Syntax	FlsTst_TestSignatureFgndType FlsTst_GetTestSignatureFgnd (void)	
Service ID [hex]	0x0a	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	FlsTst_TestSignatureFgndType	See type definition
Description	Service returns the Flash Test result in foreground mode.	
Available via	FlsTst.h	

](SRS_FlsTst_14213, SRS_SPAL_00157)

[SWS_FlsTst_00058] [The function `FlsTst_GetTestSignatureFgnd` shall return the signature of the last foreground test.] (SRS_FlsTst_14213)

[SWS_FlsTst_00059] [The function `FlsTst_GetTestSignatureFgnd` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_GetTestSignatureFgndApi`.] (SRS_BSW_00386, SRS_FlsTst_14213)

[SWS_FlsTst_00116] [If no signature is available, the function `FlsTst_GetTestSignatureFgnd` shall return the default signature value “0x0”.] (SRS_FlsTst_14213)

8.3.13 FlsTst_GetErrorDetails

[SWS_FlsTst_00060]

Service Name	FlsTst_GetErrorDetails	
Syntax	<pre>FlsTst_ErrorDetailsType FlsTst_GetErrorDetails (void)</pre>	
Service ID [hex]	0x0b	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	FlsTst_ErrorDetailsType	See type definition
Description	Service returns error details monitored from the Flash module.	
Available via	FlsTst.h	

|(SRS_BSW_00339, SRS_SPAL_00157, SRS_FlsTst_14223)

[SWS_FlsTst_00061] [The function `FlsTst_GetErrorDetails` shall return the error details monitored from the Flash Test driver.] (SRS_FlsTst_14223)

[SWS_FlsTst_00062] [The function `FlsTst_GetErrorDetails` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_GetErrorDetailsApi`.] (SRS_BSW_00386, SRS_FlsTst_14223)

8.3.14 FlsTst_TestEcc

[SWS_FlsTst_00063]

Service Name	FlsTst_TestEcc	
Syntax	<pre>Std_ReturnType FlsTst_TestEcc (void)</pre>	
Service ID [hex]	0x0c	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	None	

Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	see type definition
Description	Service executes a test of ECC hardware. This is only applicable in case the hardware provides such functionality.	
Available via	FlsTst.h	

[(SRS_BSW_00357, SRS_FlsTst_14224) [SWS_FlsTst_00064] [The function `FlsTst_TestEcc` shall execute a test of the ECC circuitry.] (SRS_FlsTst_14224)

[SWS_FlsTst_00065] [The function `FlsTst_TestEcc` shall be pre compile time configurable On/Off by the configuration parameter: `FlsTst_TestEccApi`.] (SRS_BSW_00386, SRS_FlsTst_14224)

8.4 Callback notifications

Since the Flash Test is a driver module, it does not provide any callback functions for lower layer modules.

8.5 Scheduled functions

8.5.1 FlsTst_MainFunction

[SWS_FlsTst_00066]

Service Name	FlsTst_MainFunction
Syntax	<code>void FlsTst_MainFunction (</code> <code>void</code> <code>)</code>
Service ID [hex]	0x0d
Description	Service for executing the Flash Test in background mode.
Available via	SchM_FlsTst.h

[(SRS_FlsTst_14208, SRS_FlsTst_14209)

[SWS_FlsTst_00067] [The function `FlsTst_MainFunction` shall test the defined flash blocks in background mode, starting with the first flash block in the `FlsTstConfigParams`.] ()

[SWS_FlsTst_00068] [The function `FlsTst_MainFunction` shall set the Flash Test execution state from `FLSTST_INIT` to `FLSTST_RUNNING` when calling the function the first time after initialization or after a complete test interval.] ()

[SWS_FlsTst_00069] [When `FlsTstTestResultSignature` is true, the function `FlsTst_MainFunction` shall provide the test signatures of all blocks within a test interval.] ()

[SWS_FlsTst_00161] [When `FlsTstTestResultSignature` is disabled, the function `FlsTst_MainFunction` shall set the overall result status for a test interval to `FLSTST_RESULT_OK` if all blocks are tested with result status OK. Additionally the DEM `FLSTST_E_FLSTST_FAILURE` shall be triggered with the detection criteria "Pass".] ()

[SWS_FlsTst_00167] [When `FlsTstTestResultSignature` is disabled, the function `FlsTst_MainFunction` shall set the overall result status for a test interval to `FLSTST_RESULT_NOT_OK` if at least one block test result is not ok regardless whether all blocks are already tested or not. Additionally the DEM `FLSTST_E_FLSTST_FAILURE` shall be triggered with the detection criteria "Fail".] ()

[SWS_FlsTst_00070] [After the function `FlsTst_MainFunction` has completed testing all flash blocks, the next call of the function `FlsTst_MainFunction` shall restart the test from the beginning.] ()

[SWS_FlsTst_00071] [The function `FlsTst_MainFunction` shall test a defined number of flash cells within one call. The defined number is specified by configuration (see `ECUC_FlsTst_00161`).] (`SRS_FlsTst_14208`, `SRS_FlsTst_14209`)

[SWS_FlsTst_00117] [The function `FlsTst_MainFunction` shall test a defined number of flash cells without checking user request for Abort or Suspend. The defined number is specified by configuration (see `ECUC_FlsTst_00120`).] ()

[SWS_FlsTst_00121] [The function `FlsTst_MainFunction` shall increment the Test Interval Id by 1 before start of a new test interval. The first test interval shall have the Test Interval Id = "0". If the end value = `FlsTstIntervalIdEndValue` is reached, Test Interval Id shall start with value "0" again. The value shall be provided as part of the return values of `FlsTst_GetTestResultBgnd` and `FlsTst_GetTestSignatureBgnd`.] ()

8.6 Expected Interfaces

In this chapter, all interfaces required from other modules are listed.

8.6.1 Mandatory Interfaces

This chapter defines all interfaces that are required to fulfill the core functionality of the module.

[SWS_FlsTst_00072]

<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Dem_Set-EventStatus	Dem.h	Called by SW-Cs or BSW modules to report monitor status information to the Dem. BSW modules calling Dem_SetEventStatus can safely ignore the return value. This API will be available only if $\{\{\text{Dem/DemConfigSet/DemEventParameter/DemEventReportingType}\} == \text{STANDARD_REPORTING}\}$

](SRS_SPAL_00157)

8.6.2 Optional Interfaces

This chapter defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS_FlsTst_00073]

<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Det_ReportError	Det.h	Service to report development errors.

](SRS_SPAL_00157)

8.6.3 Configurable interfaces

In this chapter, all interfaces are listed where the target function could be configured. The target function is usually a callback function. The names of these kinds of interfaces are not fixed because they are configurable.

[SWS_FlsTst_00074] [The callback notifications shall be configurable as function pointers within the initialization data structure (FlsTst_ConfigType).] ()

[SWS_FlsTst_00075] [The callback notifications shall have no parameters and no return value.] ()

[SWS_FlsTst_00076] [If a callback notification is configured as null pointer, the Flash Test module shall not execute the callback.] ()

8.6.3.1 FlsTst_TestCompleted Notification

[SWS_FlsTst_00077]

Service Name	FlsTst_TestCompletedNotification
Syntax	void FlsTst_TestCompletedNotification (void)
Service ID [hex]	0x0e
Sync/Async	Synchronous
Reentrancy	Don't care
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	The function FlsTst_TestCompleted shall be called every time when a complete test cycle had been tested.
Available via	FlsTst.h

](SRS_SPAL_00157, SRS_FlsTst_14212)

[SWS_FlsTst_00078] [The Flash Test module shall call the callback notification FlsTst_TestCompleted every time when it has tested a complete test cycle of a flash test in background mode.] (SRS_FlsTst_14212)

[SWS_FlsTst_00159] [The call of function FlsTst_TestCompleted shall be pre compile time configurable On/Off by the configuration parameter FlsTstTestCompletedNotificationSupported.]()

9 Sequence diagrams

9.1 Initialization

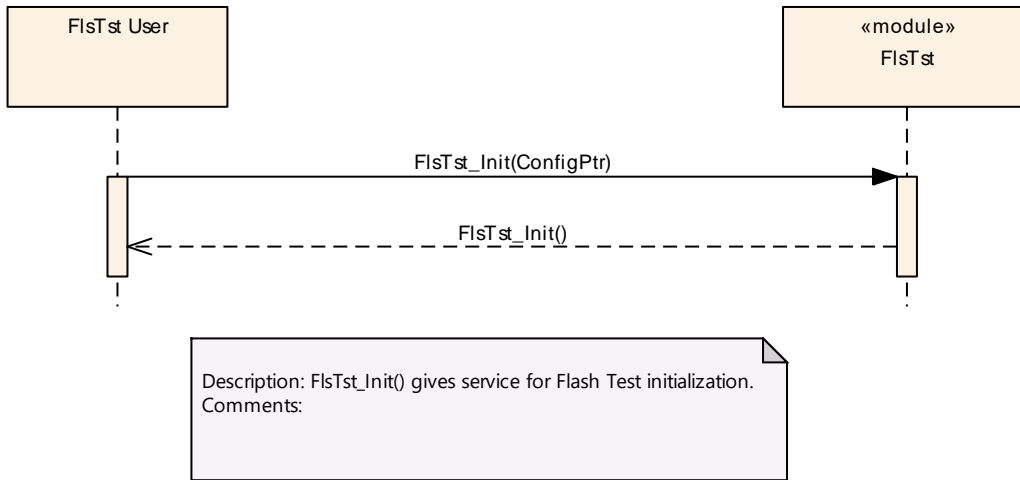


Figure 5: Flash test driver initialization

9.2 De-initialization

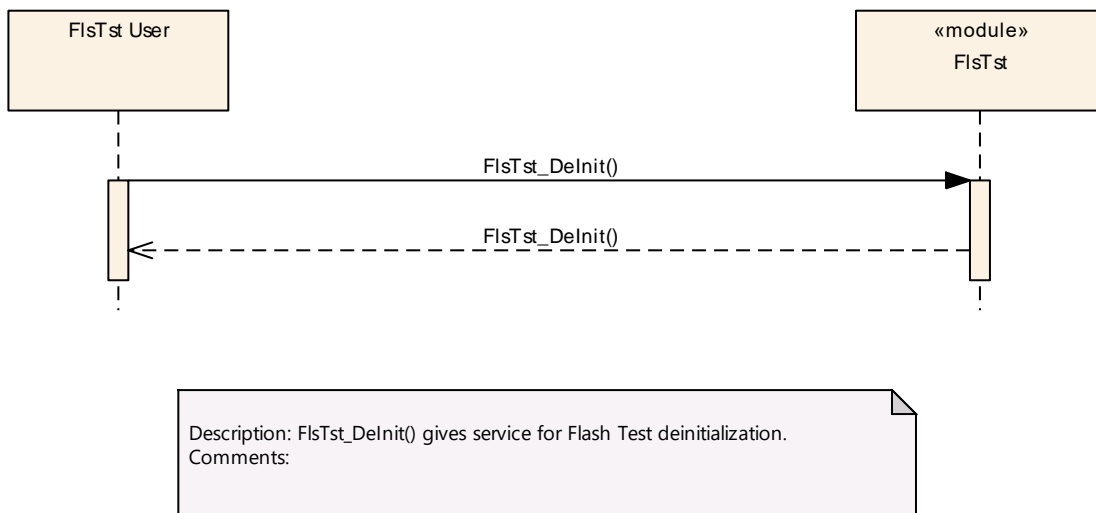


Figure 6: Flash test driver de-initialization

9.3 Background Test

9.3.1 Test Result Calculation within Flash test driver

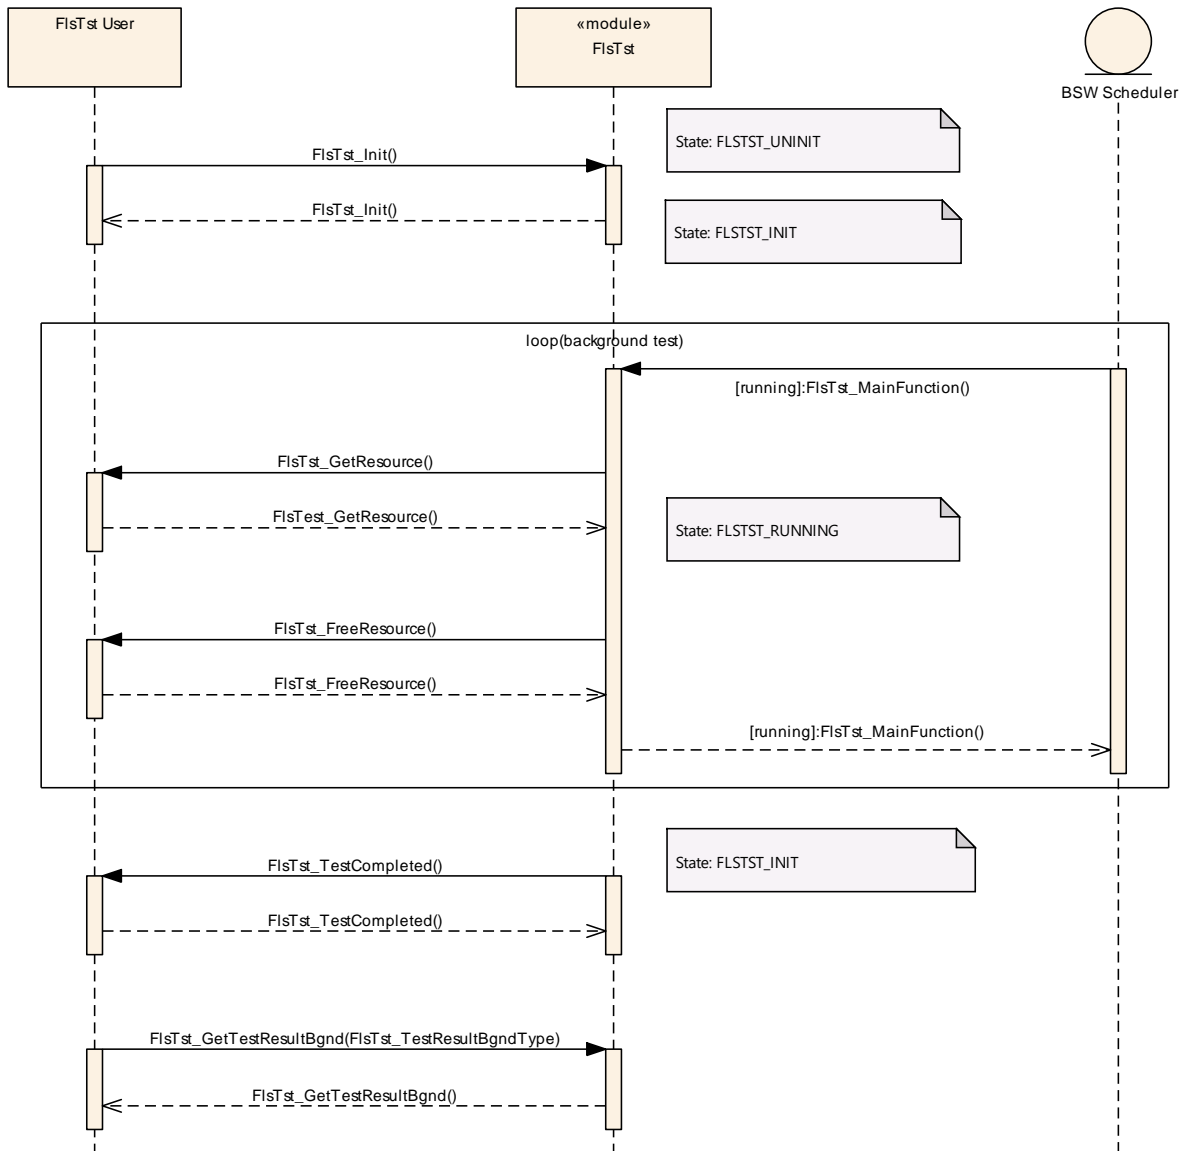


Figure 7: Background Test – Test result calculation in Flash test driver

9.3.2 Test signature provided to caller

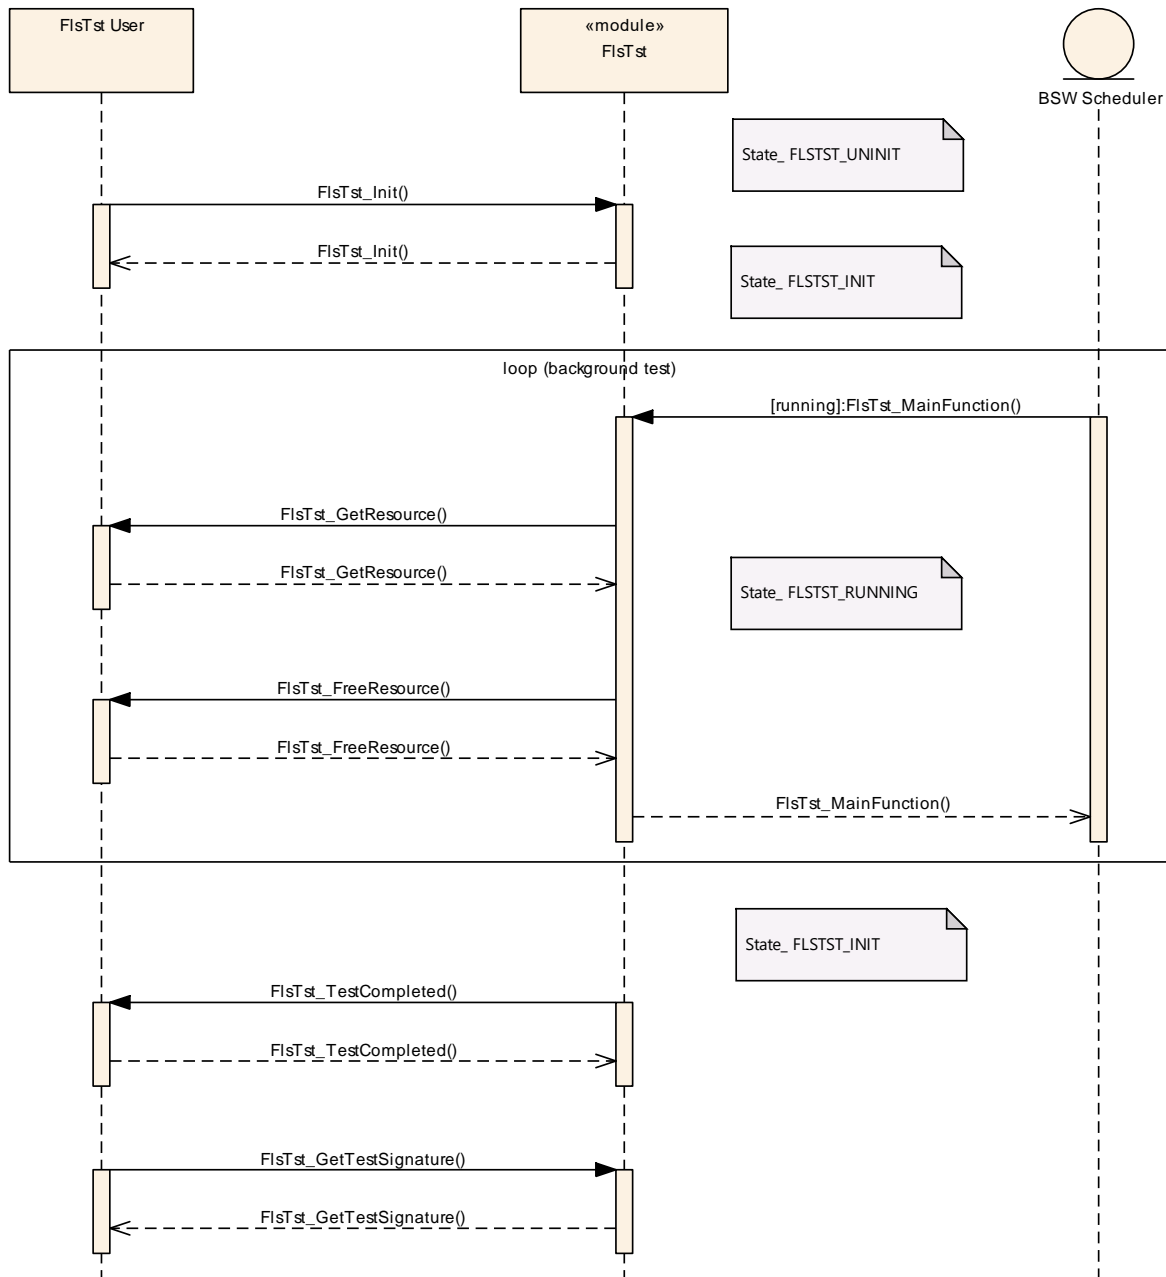


Figure 8: Background Test – Test signature provided to caller

9.4 Suspend and Resume Background Testing

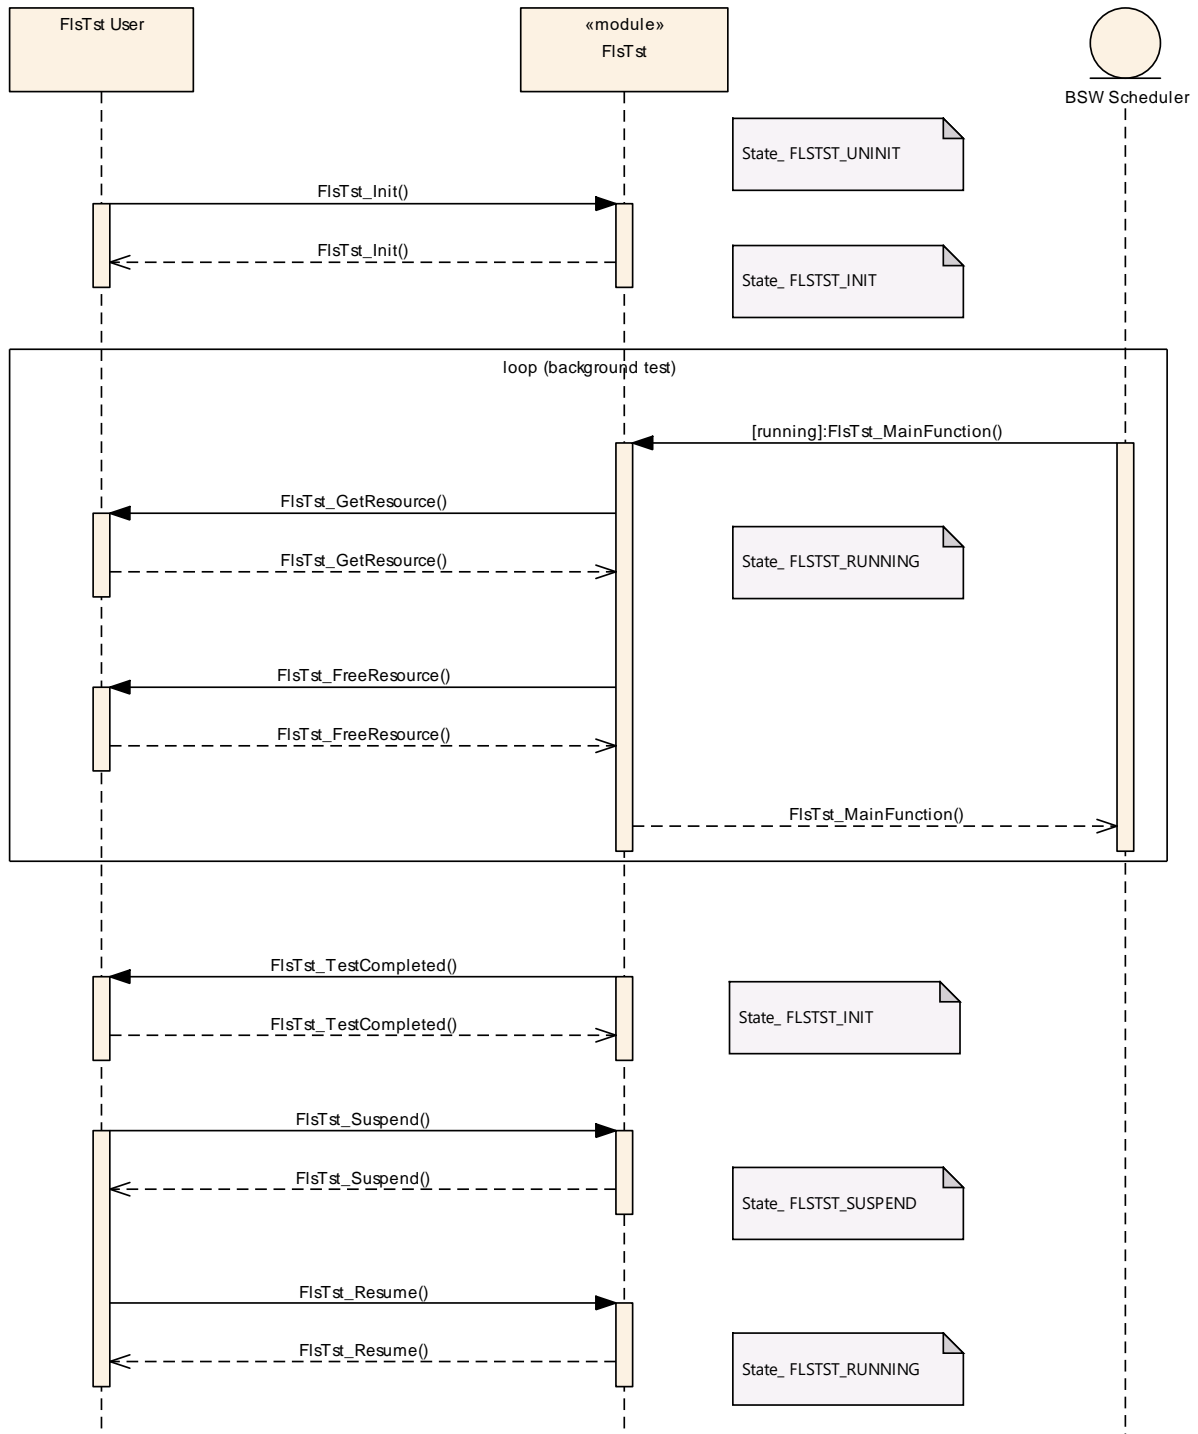


Figure 9: Suspend and Resume Background Testing

9.5 Foreground Task interrupts Background Task

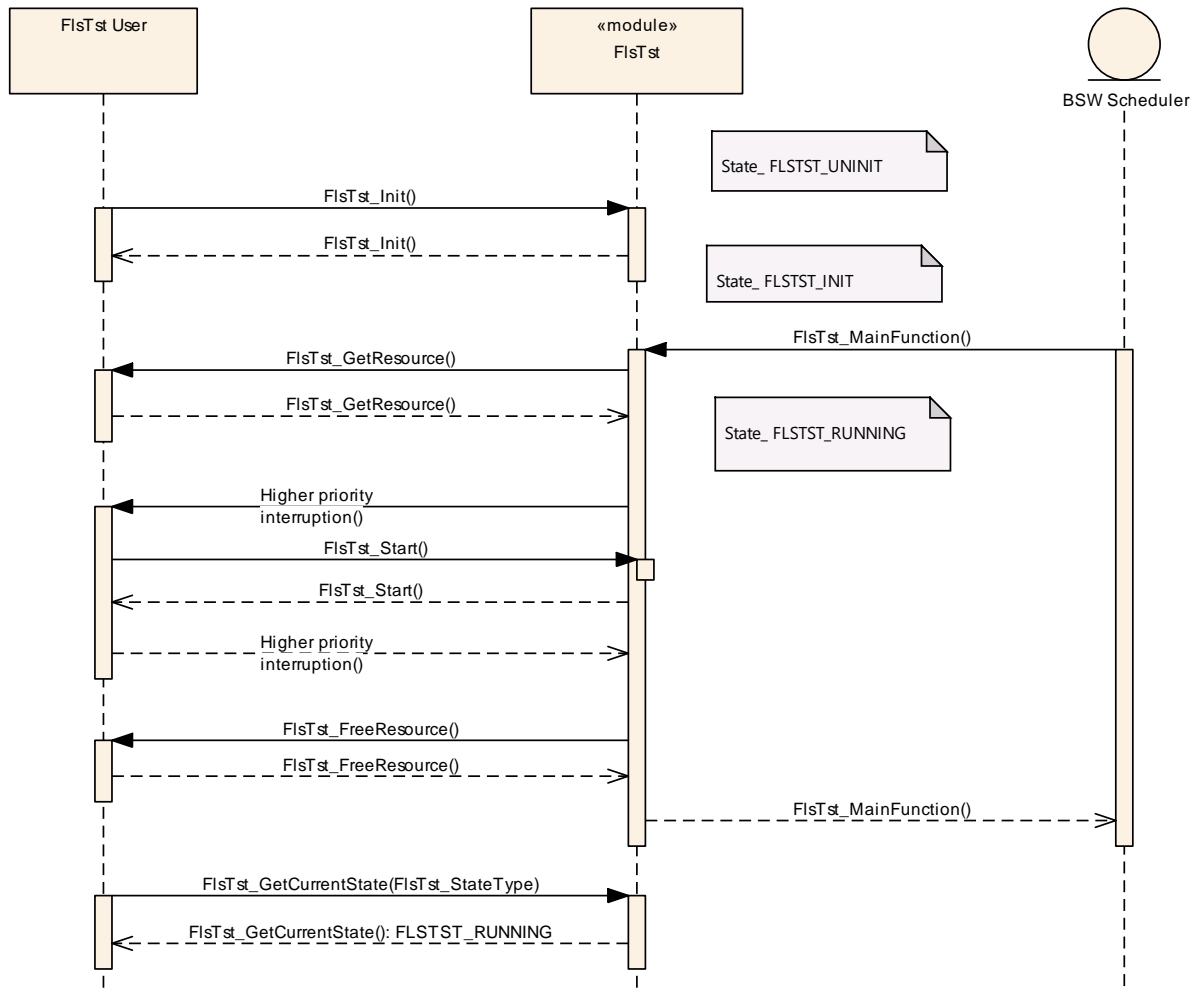


Figure 10: Foreground task interrupts Background Task

10 Configuration specification

10.1 Specification template for configuration parameters

Label	Description
x	The configuration parameter shall be of configuration class <i>Pre-compile time</i> .
--	The configuration parameter shall never be of configuration class <i>Pre-compile time</i> .

Link time - specifies whether the configuration parameter shall be of configuration class *Link time* or not

Label	Description
x	The configuration parameter shall be of configuration class <i>Link time</i> .
--	The configuration parameter shall never be of configuration class <i>Link time</i> .

Post Build - specifies whether the configuration parameter shall be of configuration class *Post Build* or not

Label	Description
x	The configuration parameter shall be of configuration class <i>Post Build</i> and no specific implementation is required.
L	<i>Loadable</i> - the configuration parameter shall be of configuration class <i>Post Build</i> and only one configuration parameter set resides in the ECU.
M	<i>Multiple</i> - the configuration parameter shall be of configuration class <i>Post Build</i> and is selected out of a set of multiple parameters by passing a dedicated pointer to the init function of the module.
--	The configuration parameter shall never be of configuration class <i>Post Build</i> .

10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapters [Functional specification](#) and Chapter [API specification](#).

10.2.1 Variants

See AUTOSAR_SWS_BSWGeneral for definition of variants.

10.2.2 FlsTst

SWS Item	[ECUC_FlsTst_00135]
Module Name	FlsTst
Description	--

Post-Build Variant Support	true
Supported Config Variants	VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FlsTstConfigSet	1	This container contains the configuration parameters and sub containers of the AUTOSAR FlsTst module.
FlsTst-ConfigurationOf-OptApiServices	1	--
FlsTstDemEvent-ParameterRefs	0..1	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.
FlsTstGeneral	1	--

10.2.3 FlsTstGeneral

SWS Item	[ECUC_FlsTst_00082]
Container Name	FlsTstGeneral
Parent Container	FlsTst
Description	--
Configuration Parameters	

SWS Item	[ECUC_FlsTst_00083]
Parameter Name	FlsTstDevErrorDetect
Parent Container	FlsTstGeneral
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> • true: detection and notification is enabled. • false: detection and notification is disabled.
Multiplicity	1
Type	EcucBooleanParamDef

Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00172]		
Parameter Name	FlsTstMainFunctionPeriod		
Parent Container	FlsTstGeneral		
Description	Determines the frequency at which the FlsTstMainFunction is called in [s].		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]	0 .. INF[
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	[ECUC_FlsTst_00161]		
Parameter Name	FlsTstNumberOfTestedCells		
Parent Container	FlsTstGeneral		
Description	Configures the Number of cells to be tested in background mode during one scheduled task (FlsTst_MainFunction() call).		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant	false		

Value			
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00120]		
Parameter Name	FlsTstNumberOfTestedCellsAtomic		
Parent Container	FlsTstGeneral		
Description	Configures the Number of cells to be tested in background mode without checking user requests (Abort, Suspend).		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00084]		
Parameter Name	FlsTstTestCompletedNotificationSupported		
Parent Container	FlsTstGeneral		
Description	Switch to indicate that the notification is supported.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	true		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants

	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00158]		
Parameter Name	FlsTstTestIntervalIdEndValue		
Parent Container	FlsTstGeneral		
Description	Defines the end value of the Test Interval Id.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00160]		
Parameter Name	FlsTstTestResultSignature		
Parent Container	FlsTstGeneral		
Description	Configures the result of the test in background mode: True: Test Result is a signature (see SWS_FlsTst_00155, SWS_FlsTst_00054) False: Test Result is ok/not ok (see SWS_FlsTst_00153, SWS_FlsTst_00042)		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	

Scope / Dependency	scope: local
---------------------------	--------------

SWS Item	[ECUC_FlsTst_00175]		
Parameter Name	FlsTstEcucPartitionRef		
Parent Container	FlsTstGeneral		
Description	Maps the Flash test driver to zero or one ECUC partition to make the driver API available in this partition.		
Multiplicity	0..1		
Type	Reference to EcucPartition		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

No Included Containers

10.2.4 FlsTstConfigurationOfOptApiServices

SWS Item	[ECUC_FlsTst_00085]
Container Name	FlsTstConfigurationOfOptApiServices
Parent Container	FlsTst
Description	--
Configuration Parameters	

SWS Item	[ECUC_FlsTst_00092]
-----------------	---------------------

Parameter Name	FlsTstGetCurrentStateApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_GetCurrentState() from the code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00098]		
Parameter Name	FlsTstGetErrorDetailsApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_GetErrorDetails() from the code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00094]		
Parameter Name	FlsTstGetTestResultBgndApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_GetTestResultBgnd() from the code.		
Multiplicity	1		

Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00150]		
Parameter Name	FlsTstGetTestResultFgndApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_GetTestResultFgnd() from the code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00096]		
Parameter Name	FlsTstGetTestSignatureBgndApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_GetTestSignatureBgnd() from the code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration	Pre-compile time	X	All Variants

Class	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00097]		
Parameter Name	FlsTstGetTestSignatureFgndApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_GetTestSignatureFgnd() from the code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00086]		
Parameter Name	FlsTstStartFgndApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_StartFgnd() from the code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00087]		
-----------------	---------------------	--	--

Parameter Name	FlsTstSuspendResumeApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the services FlsTst_Suspend() and FlsTst_Resume() from the code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00099]		
Parameter Name	FlsTstTestEccApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_TestEcc() from the code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00095]		
Parameter Name	FlsTstVersionInfoApi		
Parent Container	FlsTstConfigurationOfOptApiServices		
Description	Adds / removes the service FlsTst_GetVersionInfo() from the code.		
Multiplicity	1		

Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.2.5 FlsTstDemEventParameterRefs

SWS Item	[ECUC_FlsTst_00170]
Container Name	FlsTstDemEventParameterRefs
Parent Container	FlsTst
Description	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.
Configuration Parameters	

SWS Item	[ECUC_FlsTst_00171]
Parameter Name	FLSTST_E_FLSTST_FAILURE
Parent Container	FlsTstDemEventParameterRefs
Description	Reference to the DemEventParameter which shall be issued when the error "Flash Failure" has occurred.
Multiplicity	0..1
Type	Symbolic name reference to DemEventParameter
Post-Build Variant Multiplicity	false
Post-Build Variant Value	false

Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.2.6 FlsTstBlockBgnd

SWS Item	[ECUC_FlsTst_00173]
Container Name	FlsTstBlockBgnd
Parent Container	FlsTstConfigSet
Description	This container specifies configuration parameters for an individual background test block.
Configuration Parameters	

SWS Item	[ECUC_FlsTst_00174]		
Parameter Name	FlsTstBgndBlockIndex		
Parent Container	FlsTstBlockBgnd		
Description	The scheduling for background test shall follow an order defined by this index. '0' means highest priority.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant Value	false		
Value Configuration	Pre-compile time	X	All Variants

Class	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00106]		
Parameter Name	FlsTstBlockBaseAddress		
Parent Container	FlsTstBlockBgnd		
Description	Start Address of the Flash block.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 18446744073709551615		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00107]		
Parameter Name	FlsTstBlockSize		
Parent Container	FlsTstBlockBgnd		
Description	This parameter shall represent the Flash Test block size.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00123]		
Parameter Name	FlsTstSignatureAddress		
Parent Container	FlsTstBlockBgnd		
Description	Address of the signature reference value of the Flash test block.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 18446744073709551615		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00101]		
Parameter Name	FlsTstTestAlgorithm		
Parent Container	FlsTstBlockBgnd		
Description	This is the configuration of the test algorithm. The availability of algorithm is implementation specific.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	FLSTST_16BIT_CRC	--	
	FLSTST_32BIT_CRC	--	
	FLSTST_8BIT_CRC	--	
	FLSTST_CHECKSUM	--	
	FLSTST_DUPLICATED_MEMORY	--	
	FLSTST_ECC	--	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	

	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

No Included Containers

10.2.7 FlsTstBlockFgnd

SWS Item	[ECUC_FlsTst_00105]
Container Name	FlsTstBlockFgnd
Parent Container	FlsTstConfigSet
Description	This container specifies configuration parameters for an individual foreground test block.
Configuration Parameters	

SWS Item	[ECUC_FlsTst_00106]		
Parameter Name	FlsTstBlockBaseAddress		
Parent Container	FlsTstBlockFgnd		
Description	Start Address of the Flash block.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 18446744073709551615		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00107]
Parameter Name	FlsTstBlockSize
Parent Container	FlsTstBlockFgnd

Description	This parameter shall represent the Flash Test block size.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00151]		
Parameter Name	FlsTstFgndBlockIndex		
Parent Container	FlsTstBlockFgnd		
Description	Index identifies block to be tested by FlsTst_StartFgnd();		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00123]		
Parameter Name	FlsTstSignatureAddress		
Parent Container	FlsTstBlockFgnd		
Description	Address of the signature reference value of the Flash test block.		
Multiplicity	1		
Type	EcucIntegerParamDef		

Range	0 .. 18446744073709551615		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	[ECUC_FlsTst_00101]		
Parameter Name	FlsTstTestAlgorithm		
Parent Container	FlsTstBlockFgnd		
Description	This is the configuration of the test algorithm. The availability of algorithm is implementation specific.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	FLSTST_16BIT_CRC	--	
	FLSTST_32BIT_CRC	--	
	FLSTST_8BIT_CRC	--	
	FLSTST_CHECKSUM	--	
	FLSTST_DUPLICATED_MEMORY	--	
	FLSTST_ECC	--	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

No Included Containers

10.3 Published Information

Note: The content of this chapter is specified in SWS_BSWGeneral document [9].

11 Not applicable requirements

[SWS_FlsTst_NA_00166] [These requirements are not applicable to this

specification.] (SRS_BSW_00344, SRS_BSW_00159, SRS_BSW_00167, SRS_BSW_00170, SRS_BSW_00419, SRS_BSW_00398, SRS_BSW_00375, SRS_BSW_00416, SRS_BSW_00168, SRS_BSW_00423, SRS_BSW_00424, SRS_BSW_00425, SRS_BSW_00426, SRS_BSW_00427, SRS_BSW_00428, SRS_BSW_00429, SRS_BSW_00432, SRS_BSW_00433, SRS_BSW_00422, SRS_BSW_00417, SRS_BSW_00161, SRS_BSW_00162, SRS_BSW_00005, SRS_BSW_00415, SRS_BSW_00164, SRS_BSW_00325, SRS_BSW_00342, SRS_BSW_00343, SRS_BSW_00007, SRS_BSW_00300, SRS_BSW_00413, SRS_BSW_00347, SRS_BSW_00305, SRS_BSW_00307, SRS_BSW_00310, SRS_BSW_00373, SRS_BSW_00327, SRS_BSW_00335, SRS_BSW_00350, SRS_BSW_00408, SRS_BSW_00410, SRS_BSW_00348, SRS_BSW_00353, SRS_BSW_00301, SRS_BSW_00302, SRS_BSW_00328, SRS_BSW_00312, SRS_BSW_00006, SRS_BSW_00378, SRS_BSW_00306, SRS_BSW_00308, SRS_BSW_00309, SRS_BSW_00358, SRS_BSW_00414, SRS_BSW_00330, SRS_BSW_00331, SRS_BSW_00009, SRS_BSW_00401, SRS_BSW_00172, SRS_BSW_00010, SRS_BSW_00003, SRS_BSW_00341, SRS_BSW_00334, SRS_BSW_00437, SRS_BSW_00439, SRS_BSW_00440, SRS_SPAL_12267, SRS_SPAL_12461, SRS_SPAL_12462, SRS_SPAL_12463, SRS_SPAL_12068, SRS_SPAL_12069, SRS_SPAL_12169, SRS_SPAL_12075, SRS_SPAL_12129, SRS_SPAL_12064, SRS_SPAL_12067, SRS_SPAL_12077, SRS_SPAL_12078, SRS_SPAL_12092, SRS_SPAL_12265, SRS_FlsTst_14221)