

Document Title	Specification of a Request Manager for SAE J1939
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	611
Document Status	Final
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	4.4.0

Document Change History			
Date	Release	Changed by	Change Description
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Changed header file structure • Improved name of J1939Rm_ComRxIpduCallout • Harmonized J1939RM_E_UNINIT • Routing of RQST/RQST2/ACKM
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Clarified availability of J1939Rm_ComRxIpduCallout • Added internal feedback of ACKM • Clarification of extIdInfo parameter and underlying standard • Improved parameter checks
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Request2 support • Improved handling of meta data • Reliable TxConfirmation replaces timeout • Separate configuration of different users
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Fixed names and signatures of service ports • Support for explicit broadcast of ACKM • Introduction of further error classes
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Improved interaction with COM • Harmonized with SWS BSW General
2014-03-31	4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> • Clarified availability of callbacks • Standardized callback header names • Fixed UserType Enum

Document Change History			
Date	Release	Changed by	Change Description
2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none">• Additional development error for function parameter checks• Clarification of Request timeout and state handling• Separate configuration of received and transmitted PGNs• Removed change documentation
2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none">• Initial Release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Table of Contents

1	Introduction and functional overview	7
1.1	Request Management according to SAE J1939	7
1.2	J1939 Request Manager BSW Module	7
1.3	J1939 Terminology	7
2	Acronyms and abbreviations	9
3	Related documentation.....	10
3.1	Input documents	10
3.2	Related standards and norms	11
3.3	Related specification	11
4	Constraints and assumptions	12
4.1	Limitations	12
4.2	Applicability to car domains	12
5	Dependencies to other modules.....	13
5.1	File structure.....	13
5.1.1	Code file structure.....	13
5.1.2	Header file structure.....	13
6	Requirements traceability	14
7	Functional specification	15
7.1	Overview	15
7.2	Module Handling	15
7.2.1	Initialization	15
7.2.2	Timing Related Functionality.....	16
7.3	Communication State Handling	16
7.4	Reception of Requests	16
7.4.1	Request Forwarding.....	17
7.4.2	Request Handling via COM.....	17
7.4.3	Request of Unknown PGNs	18
7.5	Transmission of Acknowledgements	18
7.6	Transmission of Requests	19
7.7	Reception of Acknowledgements	20
7.8	Timeout Supervision.....	21
7.9	Routing of Requests and Acknowledgements	21
7.10	Error classification	22
7.10.1	Development Errors.....	22
7.10.2	Runtime Errors	23
7.10.3	Transient Faults.....	23
7.10.4	Production Errors.....	23
7.10.5	Extended Production Errors.....	24
7.11	API Parameter Checking.....	24
8	API specification.....	25
8.1	Imported types.....	25
8.2	Type definitions	25
8.2.1	J1939Rm_ConfigType	25

8.2.2	J1939Rm_StateType	25
8.3	Function definitions.....	25
8.3.1	J1939Rm_Init.....	26
8.3.2	J1939Rm_Delnit	26
8.3.3	J1939Rm_GetVersionInfo.....	26
8.3.4	J1939Rm_SetState.....	27
8.3.5	J1939Rm_SendRequest.....	28
8.3.6	J1939Rm_CancelRequestTimeout	29
8.3.7	J1939Rm_SendAck	30
8.4	Call-back notifications.....	31
8.4.1	J1939Rm_RxIndication.....	31
8.4.2	J1939Rm_TxConfirmation	31
8.4.3	J1939Rm_CheckReceivedComIPdu.....	32
8.5	Scheduled functions	33
8.5.1	J1939Rm_MainFunction	33
8.6	Expected Interfaces.....	33
8.6.1	Mandatory Interfaces	33
8.6.2	Optional Interfaces.....	33
8.6.3	Configurable interfaces	34
8.7	Service Port Descriptions	36
8.7.1	Provided Service Ports	36
8.7.2	Required Service Ports	38
8.7.3	Client-Server Interfaces	39
8.7.4	Implementation Data Types	47
9	Sequence diagrams	49
9.1	Reception of Request PG.....	49
9.2	Transmission of Acknowledgement PG.....	49
9.3	Handling of Request for a COM Pdu	50
9.4	Handling of Request for a Diagnostic Pdu.....	51
9.5	Transmission of Request PG.....	51
9.6	Reception of Acknowledgement PG	52
9.7	Monitoring of Request Timeout	53
10	Configuration specification.....	54
10.1	Containers and configuration parameters	54
10.1.1	J1939Rm	60
10.1.2	J1939RmGeneral	60
10.1.3	J1939RmConfigSet.....	63
10.1.4	J1939RmChannel.....	63
10.1.5	J1939RmAckmRxPdu.....	65
10.1.6	J1939RmAckmTxPdu	66
10.1.7	J1939RmRqstRxPdu	67
10.1.8	J1939RmRqstTxPdu.....	68
10.1.9	J1939RmRqst2RxPdu	68
10.1.10	J1939RmRqst2TxPdu.....	69
10.1.11	J1939RmNode.....	70
10.1.12	J1939RmUser.....	71
10.1.13	J1939RmNmUser	71
10.1.14	J1939RmDcmUser	72
10.1.15	J1939RmCddUser	72

10.1.16	J1939RmRteUser	76
10.1.17	J1939RmComUser	78
10.1.18	J1939RmComIPdu	79
10.2	Published Information.....	81

1 Introduction and functional overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module J1939 Request Manager.

1.1 Request Management according to SAE J1939

J1939 defines a special parameter group (PG) called Request (RQST, PGN = 0x0EA00), which may be used to request transmission of any other parameter group. The Request parameter group just contains the PGN of the requested parameter group.

Depending on the destination address used by the Request PG, the response must be sent directly to the requesting ECU, or to all ECU. For short parameter groups with PDU1 format, the destination address is set accordingly¹, for large parameter groups the suitable transport protocol mode (BAM or CMDT, see [9] and [18]) is used.

Depending on the requested parameter group and the destination address of the Request PG, ECUs answer either with the requested parameter group, with the special Acknowledgement parameter group (ACKM, PGN = 0x0E800), or not at all.

Finally, J1939 defines that the response to a Request will be expected within 1.25s after the Request was sent. The responding node is required to answer within 200ms.

Besides the Request PG, J1939 also defines a Request2 PG (RQST2, PGN=0xC900). The behavior of this PG is identical to that of the Request PG, with the following extensions:

- A transmission with the transfer function can be requested to provide the same PG from multiple ECUs.
- Extended identifier bytes can be specified to request a defined layout of a multiplexed message.

1.2 J1939 Request Manager BSW Module

The J1939 Request Manager (J1939Rm) handles received and transmitted Request, Request2, and Acknowledgement PGs. It natively supports handling of incoming requests for address claim and is configurable to support incoming requests for diagnostic and other J1939 PGNs. Unknown incoming requests are answered with a negative Acknowledgement PG if they address a specific destination address.

The J1939Rm also supports transmission of requests and timeout supervision for the resulting PG or acknowledgement.

1.3 J1939 Terminology

The terminology of J1939 differs noticeably from the usual AUTOSAR terminology. For consistency reasons, this introduction used the terms of the J1939 specification,

¹ Short parameter groups with PDU2 format have no destination address, they are broadcast PGs by nature.

while the remainder of this specification will use terms that are more common within AUTOSAR:

- 'I-PDU' replaces 'parameter group'

2 Acronyms and abbreviations

Abbreviation / Acronym:	Description:
AC	J1939 AddressClaimed PG (PGN = 0x0EE00)
ACK	J1939 Acknowledgement PG (ACKM) with control byte set to 0
ACKM	J1939 Acknowledgement PG (PGN = 0x0E800)
BSW	Basic Software (module)
CA	Controller Application, role of an ECU tied to one address
DET	Default Error Tracer, supports development and runtime error reporting
DP	Data Page, the most significant bit (MSB) of the 18 bit PGN
EDP	Extended Data Page, the second bit (after MSB) of the 18 bit PGN
NACK	J1939 Acknowledgement PG (ACKM) with control byte set to 1
PDUF	PDU Format, the middle byte of the 18 bit PGN
PDUS	PDU Specific, the lower byte of the 18 bit PGN
PG	Parameter Group
PGN	Parameter Group Number (18 bits, contains EDP, DP, PDUF, PDUS)
RQST	J1939 Request PG (PGN = 0x0EA00)
RQST2	J1939 Request2 PG (PGN = 0x0C900)
RTE	AUTOSAR Runtime Environment
SW-C	AUTOSAR Software Component (of the Application)
XFER	J1939 Transfer PG (PGN = 0x0CA00)

3 Related documentation

3.1 Input documents

[1] List of Basic Software Modules
AUTOSAR_TR_BSWModuleList.pdf

[2] Layered Software Architecture
AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf

[3] General Requirements on Basic Software Modules
AUTOSAR_SRS_BSWGeneral.pdf

[4] General Specification of Basic Software Modules
AUTOSAR_SWS_BSWGeneral.pdf

[5] Requirements on BSW Modules for SAE J1939
AUTOSAR_SRS_J1939.pdf

[6] Specification of Communication Stack Types
AUTOSAR_SWS_CommunicationStackTypes.pdf

[7] System Template
AUTOSAR_TPS_SystemTemplate.pdf

[8] Specification of CAN Interface
AUTOSAR_SWS_CANInterface.pdf

[9] Specification of a Transport Layer for SAE J1939
AUTOSAR_SWS_SAEJ1939TransportLayer.pdf

[10] Specification of PDU Router
AUTOSAR_SWS_PDURouter.pdf

[11] Specification of Communication
AUTOSAR_SWS_COM.pdf

[12] Specification of Network Management for SAE J1939
AUTOSAR_SWS_SAEJ1939NetworkManagement.pdf

[13] Specification of a Diagnostic Communication Manager for SAE J1939
AUTOSAR_SWS_SAEJ1939DiagnosticCommunicationManager.pdf

[14] Specification of Default Error Tracer
AUTOSAR_SWS_DefaultErrorTracer.pdf

[15] Specification of BSW Scheduler
AUTOSAR_SWS_BSWScheduler.pdf

[16] Specification of ECU Configuration
AUTOSAR_TPS_ECUConfiguration.pdf

[17] Specification of Memory Mapping
AUTOSAR_SWS_MemoryMapping.pdf

3.2 Related standards and norms

[18] J1939-21 MAR2016, Data Link Layer

3.3 Related specification

AUTOSAR provides a General Specification on Basic Software modules [4] (SWS BSW General), which is also valid for the SAE J1939 Request Manager.

Thus, the specification SWS BSW General shall be considered as additional and required specification for SAE J1939 Transport Layer.

4 Constraints and assumptions

4.1 Limitations

The J1939 Request Manager only implements Request, Request2, and Acknowledgement PGs. It does not provide support for the Transfer PG.

4.2 Applicability to car domains

J1939 is developed by the SAE as a standard for heavy-duty on-highway, farming, and construction vehicles. It is not applicable to passenger cars or light trucks.

5 Dependencies to other modules

The J1939 Request Manager (J1939Rm) has interfaces towards COM, the PDU Router (PduR), the J1939 Network Management module (J1939Nm), the J1939 Diagnostic Communication Management module (J1939Dcm), the Default Error Tracer (DET), and application software components (SW-Cs) via the AUTOSAR Runtime Environment (RTE). It also supports Complex Drivers (CDD).

The J1939 Request Manager includes header files of COM, J1939Nm, J1939Dcm, PduR, DET, CDDs, and the RTE.

5.1 File structure

5.1.1 Code file structure

For details, refer to the section 5.1.6 "Code file structure" of the SWS BSW General [4].

5.1.2 Header file structure

Besides the files defined in section 5.1.7 "Header file structure" of the SWS BSW General [4], the J1939 Request Manager needs to include the files defined below.

[SWS_J1939Rm_00114] [J1939Rm shall include the header file Com.h if at least one J1939RmComUser is configured.] ()

[SWS_J1939Rm_00111] [J1939Rm shall include the header file J1939Nm.h if at least one J1939RmNmUser is configured.] ()

[SWS_J1939Rm_00112] [J1939Rm shall include the header file J1939Dcm.h if at least one J1939RmDcmUser is configured.] ()

[SWS_J1939Rm_00113] [J1939Rm shall include a header file named <apiServicePrefix>_Cbk.h for every configured J1939RmCddUser.] ()

Please note: Complex driver (CDD) APIs use the module prefix configured by the apiServicePrefix of the CDD's module description file.

6 Requirements traceability

Requirement	Description	Satisfied by
SRS_BSW_00407	Each BSW module shall provide a function to read out the version information of a dedicated module implementation	SWS_J1939Rm_00039
SRS_J1939_00012	The J1939 Request Manager shall provide an interface for module initialization	SWS_J1939Rm_00012, SWS_J1939Rm_00037, SWS_J1939Rm_00073
SRS_J1939_00013	The J1939 Request Manager shall provide an interface for module shutdown	SWS_J1939Rm_00013, SWS_J1939Rm_00038
SRS_J1939_00014	The J1939 Request Manager shall forward incoming requests to configured destinations	SWS_J1939Rm_00002, SWS_J1939Rm_00003, SWS_J1939Rm_00007, SWS_J1939Rm_00008, SWS_J1939Rm_00063, SWS_J1939Rm_00100, SWS_J1939Rm_00107, SWS_J1939Rm_00115, SWS_J1939Rm_00116
SRS_J1939_00015	The J1939 Request Manager shall forward incoming acknowledgements to configured destinations	SWS_J1939Rm_00026, SWS_J1939Rm_00027, SWS_J1939Rm_00028, SWS_J1939Rm_00064, SWS_J1939Rm_00066, SWS_J1939Rm_00101, SWS_J1939Rm_00106, SWS_J1939Rm_00126
SRS_J1939_00016	The J1939 Request Manager shall provide an interface for transmission of request messages	SWS_J1939Rm_00016, SWS_J1939Rm_00021, SWS_J1939Rm_00022, SWS_J1939Rm_00023, SWS_J1939Rm_00025, SWS_J1939Rm_00054, SWS_J1939Rm_00097, SWS_J1939Rm_00104, SWS_J1939Rm_00118
SRS_J1939_00017	The J1939 Request Manager shall provide an interface for transmission of acknowledgement messages	SWS_J1939Rm_00008, SWS_J1939Rm_00009, SWS_J1939Rm_00018, SWS_J1939Rm_00019, SWS_J1939Rm_00020, SWS_J1939Rm_00056, SWS_J1939Rm_00098, SWS_J1939Rm_00103
SRS_J1939_00026	The J1939 Request Manager shall support timeout supervision for outgoing requests	SWS_J1939Rm_00017, SWS_J1939Rm_00024, SWS_J1939Rm_00029, SWS_J1939Rm_00030, SWS_J1939Rm_00055, SWS_J1939Rm_00065, SWS_J1939Rm_00099, SWS_J1939Rm_00102, SWS_J1939Rm_00105, SWS_J1939Rm_00108
SRS_J1939_00050	The J1939 Request Manager shall route incoming requests and acknowledgements to connected channels	SWS_J1939Rm_00127, SWS_J1939Rm_00128, SWS_J1939Rm_00129

7 Functional specification

This chapter defines the behavior of the J1939 Request Manager. The API of the module is defined in chapter 8, while the configuration is defined in chapter 10.

7.1 Overview

On one side, the J1939 Request Manager is responsible for routing incoming RQST and RQST2 PGs to the correct destination, and to provide an infrastructure for sending responding ACKM PGs.

On the other side, the J1939 Request Manager also provides an infrastructure to send RQST and RQST2 PGs, and to supervise timeout of the response(s), including but not limited to ACKM PGs.

The J1939 Request Manager uses meta data items of type CAN_ID_32 of the received and transmitted ACKM and RQST PGs to access the source address, the destination address, and the priority which are encoded in the CAN ID.

[SWS_J1939Rm_00119] [Meta data items of type CAN_ID_32 contain the source address in the fourth (least significant) byte.] ()

[SWS_J1939Rm_00120] [Meta data items of type CAN_ID_32 contain the destination address in the third byte.] ()

[SWS_J1939Rm_00121] [Meta data items of type CAN_ID_32 contain the priority in the bits 2-4 of the first (most significant) byte, where bit 0 is the least significant bit of a byte.] ()

7.2 Module Handling

This section contains description of auxiliary functionality of the J1939 Request Manager.

7.2.1 Initialization

The J1939 Request Manager is initialized via J1939Rm_Init, and de-initialized via J1939Rm_Delnit. Except for J1939Rm_GetVersionInfo and J1939Rm_Init, the API functions of the J1939 Request Manager may only be called after the module has been properly initialized.

[SWS_J1939Rm_00012] [A call to J1939Rm_Init initializes all internal variables and sets the J1939 Request Manager to the initialized state.] (SRS_J1939_00012)

[SWS_J1939Rm_00013] [A call to J1939Rm_Delnit sets the J1939 Request Manager back to the uninitialized state.] (SRS_J1939_00013)

[SWS_J1939Rm_00011] [When J1939Rm_Init is called in initialized state, the J1939 Request Manager shall not re-initialize its internal variables. It shall instead call Det_ReportError with the error code J1939RM_E_REINIT if DET reporting is enabled (see J1939RmDevErrorDetect).] ()

7.2.2 Timing Related Functionality

To be able to measure times, the J1939 Request Manager is triggered cyclically via the J1939Rm_MainFunction.

[SWS_J1939Rm_00072] [The J1939 Request Manager shall use the J1939Rm_MainFunction for timing related purposes.] ()

7.3 Communication State Handling

In general, request handling is only active when the ECU is online (see [12] for details). The exceptions to this rule are received and transmitted requests for the AddressClaimed PG, which must be possible in all cases. The J1939 Request Manager provides an API that is used by the BSW Mode Manager (BswM) to notify the J1939 communication state.

[SWS_J1939Rm_00073] [During initialization via J1939Rm_Init, the J1939 Request Manager assumes the offline state for all nodes on all channels.] (SRS_J1939_00012)

[SWS_J1939Rm_00014] [A call to J1939Rm_SetState sets the state of a node's channel to online or offline.] ()

[SWS_J1939Rm_00015] [In the offline state, the J1939 Request Manager only processes requests for the AddressClaimed PG, while timeout supervision and acknowledgement handling are completely disabled.] ()

7.4 Reception of Requests

The J1939 Request Manager receives request PGs (RQST and RQST2) via J1939Rm_RxIndication from the CAN Interface. The J1939 Request Manager shall use the meta data item type CAN_ID_32 to be able to identify the sender, the destination address, and the priority of the request.

[SWS_J1939Rm_00122] [The J1939 Request Manager shall use a meta data item of type CAN_ID_32 to determine the source address, destination address, and priority of received Request PGs.] ()

[SWS_J1939Rm_00007] [The J1939 Request Manager shall only accept requests addressed to the whole network (global DA), or to one of the configured addresses of the ECU (see J1939RmNmNodeRef).] (SRS_J1939_00014)

Requests for the AddressClaimed PG (AC, PGN = 0x0EE00) always go to the J1939 Network Management module. Requests for the DMx PGs (DM01 to DM57) always

go to the J1939 Diagnostic Communication Manager, the destination of these and other PGNs is configured via J1939RmUserRequestPGN.

Besides forwarding to the J1939 Network Management module, the J1939 Diagnostic Communication Manager, and CDDs, the J1939 Request Manager can also forward requests to SW-Cs, and trigger COM to send requested PGs.

7.4.1 Request Forwarding

Forwarding to other BSW modules is done via the generic callout function <User>_RequestIndication (see section 8.6.3.1). Forwarding to SW-C uses a dedicated service port function with the same signature as the <User>_RequestIndication.

[SWS_J1939Rm_00002] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via J1939RmUserRequestPGN to trigger either the J1939 Diagnostic Communication Manager or a CDD, the J1939 Request Manager shall call the corresponding <User>_RequestIndication.] (SRS_J1939_00014)

[SWS_J1939Rm_00116] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is AddressClaimed (AC, 0xEE00), the J1939 Request Manager shall call J1939Nm_RequestIndication.] (SRS_J1939_00014)

[SWS_J1939Rm_00003] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via J1939RmUserRequestPGN to be forwarded to the RTE, the J1939 Request Manager shall call the corresponding service port function.] (SRS_J1939_00014)

7.4.2 Request Handling via COM

If COM is configured as destination for the request of a certain PGN, the J1939 Request Manager will prepare the MetaData, and request COM to send the PDU with the MetaData provided via Com_TriggerIPDUSendWithMetaData. This sequence is shown in Figure 3.

[SWS_J1939Rm_00115] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via J1939RmComIPduPGN to be handled via COM, and when the extended identifier bytes of an RQST2 match the multiplexor values of a multiplexed message, the J1939 Request Manager shall prepare the MetaData from the given information and provide it to COM via Com_TriggerIPDUSendWithMetaData together with the PduId of the transmitted COM I-PDU referenced by J1939RmComIPduRef.] (SRS_J1939_00014)

7.4.3 Request of Unknown PGNs

The J1939 Request Manager shall respond to requests for unknown PGNs with a NACK, but only when the request was sent to a specific destination address.

[SWS_J1939Rm_00008] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN or the requested extended identifier bytes are not configured, and the destination address is not the broadcast address, the J1939 Request Manager shall call PduR_J1939RmTransmit to send a negative acknowledgement (NACK).] (SRS_J1939_00014, SRS_J1939_00017)

7.5 Transmission of Acknowledgements

For unknown PGNs, the J1939 Request Manager transmits a negative acknowledgement by itself (see section 7.4.3 above). Modules that receive requests from the J1939 Request Manager may use the API J1939Rm_SendAck to transmit the acknowledgement variants defined by the J1939 standard (see section 5.4.4 in [18] and description of the API J1939Rm_SendAck in section 8.3.7).

The Acknowledgement PG is supposed to have a fixed destination address (FF₁₆), configured via CanIfTxPduCanId in the CAN Interface. The J1939 Request Manager shall use the meta data item type CAN_ID_32 so that it can modify the priority and source address.

[SWS_J1939Rm_00009] [When a BSW module, a CDD, or an SW-C (via service port and RTE) calls J1939Rm_SendAck, the J1939 Request Manager shall call PduR_J1939RmTransmit to send the required acknowledgement.] (SRS_J1939_00017)

[SWS_J1939Rm_00123] [The J1939 Request Manager shall use a meta data item of type CAN_ID_32 to provide the source address and priority of transmitted Acknowledgement PGs.] ()

There is only one I-PDU available to send Acknowledgement PGs. Still, it must be ensured, that no Acknowledgement PG is lost, even when a new transmission is initiated while this I-PDU is already occupied by another transmission. To achieve this, the J1939 Request Manager needs to queue Acknowledgement PGs.

[SWS_J1939Rm_00018] [Transmission requests for the Acknowledgement PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by J1939RmAckQueueSize.] (SRS_J1939_00017)

[SWS_J1939Rm_00019] [The J1939 Request Manager shall use the J1939Rm_TxConfirmation with result E_OK of the associated I-PDU to trigger transmission of pending Acknowledgement PGs.] (SRS_J1939_00017)

[SWS_J1939Rm_00020] [If the J1939Rm_TxConfirmation is called with result E_NOT_OK, the J1939 Request Manager shall flush the Acknowledgement PG queue.] (SRS_J1939_00017)

The acknowledgement type (Control byte), the extended identifier bytes, and the Address parameter of the Acknowledgement PG are set according to the arguments of the J1939Rm_SendAck function, as described in section 8.3.7. The destination address is always the global address, as defined in [18].

[SWS_J1939Rm_00126] [When an acknowledgement is sent, it shall also be handled internally as if it was received via J1939Rm_RxIndication.] (SRS_J1939_00015)

7.6 Transmission of Requests

As stated in section 7.1, the J1939 Request Manager also supports transmission of requests, reception of responding acknowledgements, and timeout supervision for the responses.

To trigger the transmission of a request, the J1939 Request Manager provides the API J1939Rm_SendRequest.

The J1939 Request Manager shall use the meta data item type CAN_ID_32 to be able to set the priority and the source and destination address freely. The CAN Interface must be configured such that the PDU and data page bits are fixed, while the remaining bits of the CAN ID are variable.

[SWS_J1939Rm_00016] [When a BSW module, a CDD, or an SW-C (via service port and RTE) calls J1939Rm_SendRequest, the J1939 Request Manager shall call PduR_J1939RmTransmit to send the request.] (SRS_J1939_00016)

[SWS_J1939Rm_00117] [When no extended identifier bytes are provided with J1939Rm_SendRequest, J1939Rm shall send an RQST PG. When one or more extended identifier bytes are provided, an RQST2 PG shall be sent.] ()

[SWS_J1939Rm_00124] [The J1939 Request Manager shall use a meta data item of type CAN_ID_32 to provide the source address, destination address, and priority of transmitted Request PGs.] ()

There is only one I-PDU available to send Request PGs, and one for Request2 PGs. Still, it must be ensured that no request PG is lost, even when a new transmission is initiated while this I-PDU is already occupied by another transmission. To achieve this, the J1939 Request Manager needs to queue request PGs.

[SWS_J1939Rm_00021] [Transmission requests for the Request PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by J1939RmRequestQueueSize.] (SRS_J1939_00016)

[SWS_J1939Rm_00118] [Transmission requests for the Request2 PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by J1939RmRequest2QueueSize.] (SRS_J1939_00016)

[SWS_J1939Rm_00022] [The J1939 Request Manager shall use the J1939Rm_TxConfirmation with result E_OK of the associated I-PDU to trigger transmission of pending Request and Request2 PGs.] (SRS_J1939_00016)

[SWS_J1939Rm_00023] [If the J1939Rm_TxConfirmation is called with result E_NOT_OK, the J1939 Request Manager shall flush the corresponding request PG queue.] (SRS_J1939_00016)

To be able to do timeout supervision, the J1939 Request Manager needs to remember the initiator, the destination address, extended identifier bytes, and the PGN of the request.

[SWS_J1939Rm_00024] [When J1939Rm_SendRequest is called with the parameter checkTimeout set to TRUE and a destination address that is not the broadcast address (0xff), and timeout handling is enabled for the caller via J1939RmUserTimeoutSupervision: The J1939 Request Manager shall store (separately for each node) the calling module's user ID, the PGN, extended identifier bytes, the source address, and the destination address of the request.] (SRS_J1939_00026)

Finally, requests to the global address must also be handled internally as described in section 7.4.

[SWS_J1939Rm_00025] [When a request is sent with the global destination address, it shall also be handled internally as if it was received via J1939Rm_RxIndication.] (SRS_J1939_00016)

7.7 Reception of Acknowledgements

The J1939 Request Manager receives Acknowledgement PGs (ACKM) via J1939Rm_RxIndication from the CAN Interface. The J1939 Request Manager shall use the meta data item type CAN_ID_32 to be able to identify the priority and the sender of the acknowledgement.

[SWS_J1939Rm_00125] [The J1939 Request Manager shall use a meta data item of type CAN_ID_32 to determine the source address and priority of received Acknowledgement PGs.] ()

[SWS_J1939Rm_00026] [The J1939 Request Manager shall only accept acknowledgements where the AddressAcknowledged is set to one of the configured addresses of the ECU (see J1939RmNmNodeRef).] (SRS_J1939_00015)

The scheduling of received Acknowledgement PGs is configured similarly to the Request PG, see section 7.4.1, but the destinations are restricted to CDD and Application, because the J1939Nm and the J1939Dcm currently do not need to request any information from other ECUs.

[SWS_J1939Rm_00066] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of an acknowledgement which matches a pending request

(acknowledged PGN, source address, acknowledged address), the J1939 Request Manager shall call the <User>_AckIndication or the service port function corresponding to the stored user ID.] (SRS_J1939_00015)

[SWS_J1939Rm_00027] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of an acknowledgement which does not match a pending request, and the acknowledged PGN is configured via J1939RmUserAckPGN to trigger a CDD, the J1939 Request Manager shall call the corresponding <User>_AckIndication.] (SRS_J1939_00015)

[SWS_J1939Rm_00028] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of an acknowledgement which does not match a pending request, and the acknowledged PGN is configured via J1939RmUserAckPGN to be forwarded to the RTE, the J1939 Request Manager shall call the corresponding service port function.] (SRS_J1939_00015)

7.8 Timeout Supervision

The SAE J1939 specification [18] defines a maximum delay of 200ms for the answer to a request. This delay is not supervised by the J1939 Request Manager. On the other hand, the timeout of 1.25s for the reception of the answer to a request will be supervised by the J1939 Request Manager, if configured accordingly via J1939RmUserTimeoutSupervision. In that case, when the request is transmitted, the timer is started and the request data is stored as described in [SWS_J1939Rm_00024].

[SWS_J1939Rm_00017] [If timeout supervision is enabled for the caller of J1939Rm_SendRequest via J1939RmUserTimeoutSupervision, and the parameter checkTimeout is TRUE, and the destination address is not the broadcast address (0xff): The J1939 Request Manager shall start timeout supervision.] (SRS_J1939_00026)

[SWS_J1939Rm_00029] [When an acknowledgement matching the request is received, when a configured COM RxIPduCallout is triggered which matches the request, or when a CDD or an application SW-C calls J1939Rm_CancelRequestTimeout, the timeout supervision of the request is stopped.] (SRS_J1939_00026)

[SWS_J1939Rm_00030] [If the timeout supervision for a request reaches 1.25s, the J1939 Request Manager shall call the <User>_RequestTimeoutIndication corresponding to the userId parameter of the initial J1939Rm_SendRequest.] (SRS_J1939_00026)

7.9 Routing of Requests and Acknowledgements

Depending on the configuration of J1939NmSharedAddressSpace and J1939NmExternalNodeGatewayedChannelRef referring to J1939NmChannels that reference the same ComMChannels as the J1939RmChannels, the Request,

Request2, and Acknowledgement messages need to be routed from one J1939RmChannel to another.

[SWS_J1939Rm_00127] [If J1939RmGatewaySupport is enabled, and a J1939RmChannel is linked to another J1939RmChannel via a J1939NmSharedAddressSpace: All Request, Request2, and Acknowledgement messages that are received on the first J1939RmChannel shall be forwarded to the second J1939RmChannel.] (SRS_J1939_00050)

Note: The complete path between two J1939RmChannels linked via a J1939NmSharedAddressSpace is:

```
J1939RmChannel -> J1939RmComMNetworkHandleRef -> ComMChannel <-
J1939NmComMNetworkHandleRef <- J1939NmChannel <-
J1939NmSharedChannelRef <- J1939NmSharedAddressSpace ->
J1939NmSharedChannelRef -> J1939NmChannel ->
J1939NmComMNetworkHandleRef -> ComMChannel <-
J1939RmComMNetworkHandleRef <- J1939RmChannel
```

[SWS_J1939Rm_00128] [If J1939RmGatewaySupport is enabled, and a J1939RmChannel is referenced by another J1939RmChannel via a J1939NmExternalNodeGatewayedChannelRef: All Request, Request2, and Acknowledgement messages that are received on the first J1939Rm shall be forwarded to the second J1939RmChannel.] (SRS_J1939_00050)

Note: The complete path between two J1939RmChannels linked via a J1939NmExternalNodeGatewayedChannelRef is:

```
J1939RmChannel -> J1939RmComMNetworkHandleRef -> ComMChannel <-
J1939NmComMNetworkHandleRef <- J1939NmChannel <-
J1939NmExternalNodeGatewayedChannelRef <- J1939NmExternalNode ->
J1939NmExternalNodeChannelRef -> J1939NmChannel ->
J1939NmComMNetworkHandleRef -> ComMChannel <-
J1939RmComMNetworkHandleRef <- J1939RmChannel
```

[SWS_J1939Rm_00129] [Request and Request2 messages shall only be forwarded if the destination address of the message is the global address (0xFF) or a destination address that does not correspond to any J1939NmNodePreferredAddress referenced by a J1939RmNode that references the J1939RmChannel on which the message was received.] (SRS_J1939_00050)

7.10 Error classification

The J1939 Request Manager supports reporting of development and runtime errors.

7.10.1 Development Errors

The supported development errors are defined in the following table.

[SWS_J1939Rm_00031] [

Table of development errors used by the J1939 Request Manager:

<i>Type or error</i>	<i>Related error code</i>	<i>Value [hex]</i>
An API was called while the module was uninitialized	J1939RM_E_UNINIT	0x01
The Init API was called twice	J1939RM_E_REINIT	0x02
J1939Rm_Init was called with an invalid configuration pointer	J1939RM_E_INIT_FAILED	0x03
An API service was called with a NULL pointer	J1939RM_E_PARAM_POINTER	0x10
An API service was called with a wrong ID	J1939RM_E_INVALID_PDU_SDU_ID	0x11
An API service was called with wrong network handle	J1939RM_E_INVALID_NETWORK_ID	0x12
The API J1939Rm_SetState was called with a wrong state	J1939RM_E_INVALID_STATE	0x13
An API was called with an illegal user ID	J1939RM_E_INVALID_USER	0x14
An API was called with an unknown or illegal PGN	J1939RM_E_INVALID_PGN	0x15
An API was called with an illegal priority	J1939RM_E_INVALID_PRIO	0x16
An API was called with an illegal node address	J1939RM_E_INVALID_ADDRESS	0x17
An API was called with an illegal Boolean option	J1939RM_E_INVALID_OPTION	0x18
An API was called with an illegal AckCode	J1939RM_E_INVALID_ACK_CODE	0x19
An API was called with an illegal node ID	J1939RM_E_INVALID_NODE_ID	0x1a
An API was called with invalid extended identifier bytes	J1939RM_E_INVALID_EXTID_INFO	0x1b

Development error values are of type uint8.

⌋()

7.10.2 Runtime Errors

Runtime errors have not yet been classified.

7.10.3 Transient Faults

There are no transient faults.

7.10.4 Production Errors

There are no production errors.

7.10.5 Extended Production Errors

There are no extended production errors.

7.11 API Parameter Checking

The J1939 Request Manager performs parameter checks for all called APIs. It reports the development error J1939RM_E_PARAM_POINTER when a call provides a NULL pointer, J1939RM_E_INVALID_PDU_SDU_ID when a check of a PDU/SDU ID fails, J1939RM_E_INVALID_NETWORK_ID when a check of a network handle fails, and J1939RM_E_INVALID_NODE_ID when a check of a node handle fails.

J1939RM_E_PARAM_POINTER shall be reported as specified in [4] by SWS_BSW_00212.

[SWS_J1939Rm_00033] [If DET reporting is enabled via J1939RmDevErrorDetect, the J1939 Request Manager shall check PduldType parameters (SDU/PDU IDs) of its API functions against the configured IDs, and shall report the development error J1939RM_E_INVALID_PDU_SDU_ID when an unknown ID is provided by the call.] ()

[SWS_J1939Rm_00041] [If DET reporting is enabled via J1939RmDevErrorDetect, the J1939 Request Manager shall check NetworkHandleType parameters (network handles) of its API functions against the referenced network handles of ComM, and shall report the development error J1939RM_E_INVALID_NETWORK_ID when an unknown handle is provided by the call.] ()

[SWS_J1939Rm_00096] [If DET reporting is enabled via J1939RmDevErrorDetect, the J1939 Request Manager shall check node handle parameters of its API functions against the node handles of J1939Nm referenced via J1939RmNmNodeRef, and shall report the development error J1939RM_E_INVALID_NODE_ID when an unknown handle is provided by the call.] ()

8 API specification

8.1 Imported types

In this section, all types used by the J1939 Request Manager are listed together with the defining module:

[SWS_J1939Rm_00035] [

Module	Header File	Imported Type
ComStack_Types	ComStackTypes.h	NetworkHandleType
	ComStackTypes.h	PdulType
	ComStackTypes.h	PdulInfoType
Std_Types	StandardTypes.h	Std_ReturnType
	StandardTypes.h	Std_VersionInfoType

] ()

8.2 Type definitions

8.2.1 J1939Rm_ConfigType

[SWS_J1939Rm_00036] [

Name:	J1939Rm_ConfigType
Type:	Structure
Range:	implementation specific--
Description:	<p>This is the base type for the configuration of the J1939 Request Manager.</p> <p>A pointer to an instance of this structure will be used in the initialization of the J1939 Request Manager.</p> <p>The content of this structure is defined in chapter 10 Configuration specification.</p>
Available via:	J1939Rm.h

] ()

8.2.2 J1939Rm_StateType

[SWS_J1939Rm_00049] [

Name:	J1939Rm_StateType						
Type:	Enumeration						
Range:	<table border="1"> <tbody> <tr> <td>J1939RM_STATE_OFFLINE</td> <td>0x00</td> <td>Only Request for AC</td> </tr> <tr> <td>J1939RM_STATE_ONLINE</td> <td>0x01</td> <td>Normal communication</td> </tr> </tbody> </table>	J1939RM_STATE_OFFLINE	0x00	Only Request for AC	J1939RM_STATE_ONLINE	0x01	Normal communication
J1939RM_STATE_OFFLINE	0x00	Only Request for AC					
J1939RM_STATE_ONLINE	0x01	Normal communication					
Description:	This type represents the communication state of the J1939 Request Manager.						
Available via:	J1939Rm.h						

] ()

8.3 Function definitions

This is a list of functions provided for upper layer modules.

8.3.1 J1939Rm_Init

[SWS_J1939Rm_00037] [

Service name:	J1939Rm_Init
Syntax:	void J1939Rm_Init(const J1939Rm_ConfigType* configPtr)
Service ID[hex]:	0x01
Sync/Async:	Synchronous
Reentrancy:	Non Reentrant
Parameters (in):	configPtr Pointer to selected configuration structure
Parameters (inout):	None
Parameters (out):	None
Return value:	None
Description:	This function initializes the J1939 Request Manager.
Available via:	J1939Rm.h

] (SRS_J1939_00012)

See section 7.2.1 for details.

See section 7.11 for parameter checks.

J1939RM_E_INIT_FAILED shall be reported as specified in [4] by SWS_BSW_00050.

8.3.2 J1939Rm_DeInit

[SWS_J1939Rm_00038] [

Service name:	J1939Rm_DeInit
Syntax:	void J1939Rm_DeInit(void)
Service ID[hex]:	0x02
Sync/Async:	Synchronous
Reentrancy:	Non Reentrant
Parameters (in):	None
Parameters (inout):	None
Parameters (out):	None
Return value:	None
Description:	This function resets the J1939 Request Manager to the uninitialized state.
Available via:	J1939Rm.h

] (SRS_J1939_00013)

See section 7.2.1 for details.

8.3.3 J1939Rm_GetVersionInfo

[SWS_J1939Rm_00039] [

Service name:	J1939Rm_GetVersionInfo
----------------------	------------------------

Syntax:	<code>void J1939Rm_GetVersionInfo(Std_VersionInfoType* versionInfo)</code>
Service ID[hex]:	0x03
Sync/Async:	Synchronous
Reentrancy:	Non Reentrant
Parameters (in):	None
Parameters (inout):	None
Parameters (out):	versionInfo Pointer to where to store the version information of this module.
Return value:	None
Description:	Returns the version information of this module.
Available via:	J1939Rm.h

] (SRS_BSW_00407)

See section 8.3.4 “Get Version Information” of [4] for details.

See section 7.11 for parameter checks.

8.3.4 J1939Rm_SetState

[SWS_J1939Rm_00048] [

Service name:	J1939Rm_SetState
Syntax:	<code>Std_ReturnType J1939Rm_SetState(NetworkHandleType channel, uint8 node, J1939Rm_StateType newState)</code>
Service ID[hex]:	0x05
Sync/Async:	Synchronous
Reentrancy:	Reentrant
Parameters (in):	channel Channel for which the state shall be changed.
	node Node for which the state shall be changed.
	newState New state the J1939Rm shall enter, see definition of J1939Rm_StateType for available states.
Parameters (inout):	None
Parameters (out):	None
Return value:	Std_ReturnType E_OK: New communication state was set E_NOT_OK: Communication state was not changed due to wrong value in NewState or wrong initialization state of the module.
Description:	Changes the communication state of J1939Rm to offline (only Request for AC supported) or online.
Available via:	J1939Rm.h

] ()

[SWS_J1939Rm_00040] [The J1939 Request Manager shall reject the state change by returning E_NOT_OK when the ‘newState’ is not in the valid range. If DET is enabled via J1939RmDevErrorDetect, the development error J1939RM_E_INVALID_STATE (see section 7.10) shall be reported.] ()

See section 7.2.1 for error handling and section 7.11 for parameter checks.

8.3.5 J1939Rm_SendRequest

[SWS_J1939Rm_00054] [

Service name:	J1939Rm_SendRequest	
Syntax:	<pre>Std_ReturnType J1939Rm_SendRequest (uint8 userId, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 destAddress, uint8 priority, boolean checkTimeout)</pre>	
Service ID[hex]:	0x07	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	userId	Identification of the calling module.
	channel	Channel on which the request shall be sent.
	requestedPgn	PGN of the requested PG.
	extIdInfo	Extended identifier bytes. J1939RM_EXTID_NONE is assumed if a NULL pointer is provided.
	destAddress	Address of the destination node or 0xFF for broadcast.
	priority	Priority of the Request PG.
	checkTimeout	TRUE: Timeout supervision will be performed FALSE: No timeout supervision will be started
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Transmission request is accepted E_NOT_OK: Transmission request is not accepted
Description:	Requests transmission of a Request or Request2 PG.	
Available via:	J1939Rm.h	

] (SRS_J1939_00016)

[SWS_J1939Rm_00074] [The J1939Rm_SendRequest API function shall only be available if J1939RmUserSendRequest is set for at least one user.] ()

See section 7.6 for details.

[SWS_J1939Rm_00067] [The J1939 Request Manager shall reject transmission of a request by returning E_NOT_OK when the 'requestedPgn', the 'extIdType' element within the 'extIdInfo', the 'destAddress', or the 'priority' are not in the valid range, or when the 'userId' is not one of the configured user IDs (see J1939RmUserId), or when 'checkTimeout' is true but timeout handling is disabled for the calling module (see J1939RmUserTimeoutSupervision). If DET is enabled via J1939RmDevErrorDetect, the corresponding development error (see section 7.10) shall be reported: J1939RM_E_INVALID_USER for 'userId', J1939RM_E_INVALID_EXTID_INFO for 'extIdInfo', J1939RM_E_INVALID_PGN for 'requestedPgn', J1939RM_E_INVALID_PRIO for 'priority', J1939RM_E_INVALID_ADDRESS for 'destAddress', and J1939RM_E_INVALID_OPTION for 'checkTimeout'.] ()

[SWS_J1939Rm_00068] [The J1939 Request Manager shall reject transmission of a request by returning E_NOT_OK when another request is pending and the request queue is full.] ()

See section 7.2.1 for further error handling and section 7.11 for further parameter checks.

8.3.6 J1939Rm_CancelRequestTimeout

[SWS_J1939Rm_00055] [

Service name:	J1939Rm_CancelRequestTimeout	
Syntax:	<pre>Std_ReturnType J1939Rm_CancelRequestTimeout (uint8 userId, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 destAddress)</pre>	
Service ID[hex]:	0x08	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	userId	Identification of the calling module.
	channel	Channel on which the request was sent.
	requestedPgn	PGN of the requested PG.
	extIdInfo	Extended identifier bytes. J1939RM_EXTID_NONE is assumed if a NULL pointer is provided.
	destAddress	Address of the destination node or 0xFF for broadcast.
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Cancellation of request timeout was successful E_NOT_OK: Cancellation of request timeout was not successful
Description:	Cancels timeout monitoring of a request. If the request is not active, or timeout monitoring was not requested, this call has no effect.	
Available via:	J1939Rm.h	

] (SRS_J1939_00026)

[SWS_J1939Rm_00075] [The J1939Rm_CancelRequestTimeout API function shall only be available if J1939RmUserTimeoutSupervision is set for at least one user.] ()

See section 7.8 for details.

[SWS_J1939Rm_00069] [The J1939 Request Manager shall ignore the timeout cancellation request when the 'requestedPGN', the 'extIdType' element within the 'extIdInfo', or the 'destAddress' are not in the valid range, or when the 'userId' is not one of the configured user IDs (see J1939RmUserId), or if no suitable entry can be found in the list of pending requests. If DET is enabled via J1939RmDevErrorDetect, the corresponding development error (see section 7.10) shall be reported: J1939RM_E_INVALID_USER for 'userId', J1939RM_E_INVALID_PGN for 'requestedPGN', J1939RM_E_INVALID_EXTID_INFO for 'extIdInfo', and J1939RM_E_INVALID_ADDRESS for 'destAddress'.] ()

See section 7.2.1 for further error handling and section 7.11 for further parameter checks.

8.3.7 J1939Rm_SendAck

[SWS_J1939Rm_00056] [

Service name:	J1939Rm_SendAck	
Syntax:	<pre>Std_ReturnType J1939Rm_SendAck(uint8 userId, NetworkHandleType channel, uint32 ackPgn, const J1939Rm_ExtIdInfoType* extIdInfo, J1939Rm_AckCode ackCode, uint8 ackAddress, uint8 priority, boolean broadcast)</pre>	
Service ID[hex]:	0x09	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	userId	Identification of the calling module.
	channel	Channel on which the acknowledgement shall be sent.
	ackPgn	Acknowledged PGN.
	extIdInfo	Extended identifier bytes. J1939RM_EXTID_NONE is assumed if a NULL pointer is provided.
	ackCode	Type of acknowledgement, see definition of J1939Rm_AckCode for available codes.
	ackAddress	Address of the node that sent the request.
	priority	Priority of the Acknowledgement PG.
	broadcast	Indicates whether the ACKM is a response to a broadcast request.
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Transmission request is accepted E_NOT_OK: Transmission request is not accepted
Description:	Requests transmission of an Acknowledgement PG.	
Available via:	J1939Rm.h	

] (SRS_J1939_00017)

[SWS_J1939Rm_00076] [The J1939Rm_SendAck API function shall only be available if J1939RmUserSendAck is set for at least one user.] ()

See section 7.5 for details.

[SWS_J1939Rm_00070] [The J1939 Request Manager shall reject transmission of an acknowledgement by returning E_NOT_OK when the 'ackPgn', the 'extIdType' element within the 'extIdInfo', the 'ackAddress', or the 'priority' are not in the valid range, or when the 'userId' is not one of the configured user IDs (see J1939RmUserId). If DET is enabled via J1939RmDevErrorDetect, the corresponding development error (see section 7.10) shall be reported: J1939RM_E_INVALID_USER for 'userId', J1939RM_E_INVALID_EXTID_INFO for 'extIdInfo', J1939RM_E_INVALID_PGN for 'ackPgn',

J1939RM_E_INVALID_ACK_CODE for 'ackCode',
J1939RM_E_INVALID_ADDRESS for 'ackAddress', and
J1939RM_E_INVALID_PRIO for 'priority'.] ()

[SWS_J1939Rm_00071] [The J1939 Request Manager shall reject transmission of an acknowledgement by returning E_NOT_OK when another acknowledgement is pending and the acknowledgement queue is full.] ()

See section 7.2.1 for further error handling and section 7.11 for further parameter checks.

8.4 Call-back notifications

This is a list of functions provided for other modules.

8.4.1 J1939Rm_RxIndication

[SWS_J1939Rm_00058] [

Service name:	J1939Rm_RxIndication	
Syntax:	<pre>void J1939Rm_RxIndication(PduIdType RxPduId, const PduInfoType* PduInfoPtr)</pre>	
Service ID[hex]:	0x42	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
Parameters (in):	RxPdulId	ID of the received PDU.
	PduInfoPtr	Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	Indication of a received PDU from a lower layer communication interface module.	
Available via:	J1939Rm.h	

] ()

[SWS_J1939Rm_00080] [The J1939Rm_RxIndication call back function shall only be available if J1939RmUserAckIndication or J1939RmUserRequestIndication is set for at least one user.] ()

See sections 7.4 and 7.7 for details.

See section 7.2.1 for error handling and section 7.11 for parameter checks.

8.4.2 J1939Rm_TxConfirmation

[SWS_J1939Rm_00059] [

Service name:	J1939Rm_TxConfirmation
----------------------	------------------------

Syntax:	void J1939Rm_TxConfirmation(PduIdType TxPduId, Std_ReturnType result)	
Service ID[hex]:	0x40	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for different PduIds. Non reentrant for the same PduId.	
Parameters (in):	TxPduId	ID of the PDU that has been transmitted.
	result	E_OK: The PDU was transmitted. E_NOT_OK: Transmission of the PDU failed.
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU.	
Available via:	J1939Rm.h	

] ()

[SWS_J1939Rm_00081] [The J1939Rm_TxConfirmation call back function shall only be available if J1939RmUserSendAck or J1939RmUserSendRequest is set for at least one user.] ()

See sections 7.5 and 7.6 for details.

See section 7.2.1 for error handling and section 7.11 for parameter checks.

8.4.3 J1939Rm_CheckReceivedComIPdu

[SWS_J1939Rm_00062] [

Service name:	J1939Rm_CheckReceivedComIPdu	
Syntax:	boolean J1939Rm_CheckReceivedComIPdu(PduIdType PduId, const PduInfoType* PduInfoPtr)	
Service ID[hex]:	0x28	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for different PduIds. Non reentrant for the same PduId.	
Parameters (in):	PduId	ID of the received ComIPdu.
	PduInfoPtr	Length (SduLength) of the received ComIPdu and a pointer to the data of the ComIPdu (SduDataPtr).
Parameters (inout):	None	
Parameters (out):	None	
Return value:	boolean	Shall be always true to ensure the ComIPdu is received.
Description:	Reports a received ComIPdu. If this ComIPdu was requested via J1939Rm_SendRequest or the SendRequest service operation, a request timeout for this request is stopped.	
Available via:	J1939Rm Com.h	

] ()

[SWS_J1939Rm_00079] [The J1939Rm_CheckReceivedComIPdu call back function shall only be available if J1939RmUserTimeoutSupervision is set for at least one user.] ()

See section 7.8 for details.

See section 7.2.1 for error handling and section 7.11 for parameter checks.

8.5 Scheduled functions

This function is directly called by Basic Software Scheduler (SchM).

8.5.1 J1939Rm_MainFunction

[SWS_J1939Rm_00042] [

Service name:	J1939Rm_MainFunction
Syntax:	void J1939Rm_MainFunction(void)
Service ID[hex]:	0x04
Description:	Main function of the J1939 Request Manager. Used for scheduling purposes and timeout supervision.
Available via:	SchM J1939Rm.h

] ()

[SWS_J1939Rm_00043] [The frequency of invocations of J1939Rm_MainFunction is determined by the configuration parameter J1939RmMainFunctionPeriod.] ()

8.6 Expected Interfaces

In this section, all interfaces required from other modules are listed.

8.6.1 Mandatory Interfaces

This section defines all interfaces that are required to fulfill the core functionality of the module.

[SWS_J1939Rm_00044] [

API function	Header File	Description
PduR_J1939RmTransmit	PduR_J1939Rm.h	Requests transmission of a PDU.

] ()

8.6.2 Optional Interfaces

This section defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS_J1939Rm_00045] [

API function	Header File	Description
Com_TriggerIPDUSeWithMetaData	Com.h	By a call to Com_TriggerIPDUSeWithMetaData the AUTOSAR COM module updates its internal metadata for the I-PDU with the given ID by copying the metadata from the given position and with respect to length of the globally configured MetaDataType of this I-PDU. Then the I-PDU is triggered for transmission.
Det_ReportError	Det.h	Service to report development errors.
J1939Dcm_RequestIndication	J1939Dcm.h	Indicates reception of a Request or Request2 PG.
J1939Nm_RequestIndication	J1939Nm.h	Indicates reception of a Request or Request2 PG.

] ()

[SWS_J1939Rm_00082] [The Com_TriggerIPDUSeWithMetaData function is only required if at least one J1939RmComUser is configured.] ()

[SWS_J1939Rm_00083] [The J1939Dcm_RequestIndication function is only required if at least one J1939RmDcmUser is configured.] ()

[SWS_J1939Rm_00084] [The J1939Nm_RequestIndication function is only required if at least one J1939RmNmUser is configured.] ()

8.6.3 Configurable interfaces

In this section, all interfaces are listed where the target function could be configured. The target function is usually a call-back function. The name of this kind of interfaces is not fixed because they are configurable.

8.6.3.1 <User>_RequestIndication

[SWS_J1939Rm_00063] [

Service name:	< User >_RequestIndication	
Syntax:	<pre>void < User >_RequestIndication(uint8 node, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 sourceAddress, uint8 destAddress, uint8 priority)</pre>	
Service ID[hex]:	0x47	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	node	Node by which the request was received.
	channel	Channel on which the request was received.
	requestedPgn	PGN of the requested PG.
	extIdInfo	Extended identifier bytes.
	sourceAddress	Address of the node that sent the Request PG.
	destAddress	Address of this node or 0xFF for broadcast.
Parameters	priority	Priority of the Request PG.
Parameters	None	

(inout):	
Parameters (out):	None
Return value:	None
Description:	Indicates reception of a Request or Request2 PG.
Available via:	configurable

] (SRS_J1939_00014)

[SWS_J1939Rm_00085] [The configured <User>_RequestIndication function shall be available for each user that has J1939RmUserRequestIndication enabled.] ()

See section 7.4 for details.

8.6.3.2 <User>_AckIndication

[SWS_J1939Rm_00064] [

Service name:	< User >_AckIndication	
Syntax:	<pre>void < User >_AckIndication(uint8 node, NetworkHandleType channel, uint32 ackPgn, const J1939Rm_ExtIdInfoType* extIdInfo, J1939Rm_AckCode ackCode, uint8 ackAddress, uint8 sourceAddress, uint8 priority)</pre>	
Service ID[hex]:	0x4d	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	node	Node by which the acknowledgement was received.
	channel	Channel on which the acknowledgement was received.
	ackPgn	Acknowledged PGN.
	extIdInfo	Extended identifier bytes.
	ackCode	Type of acknowledgement, see definition of J1939Rm_AckCode for available codes.
	ackAddress	Address of this node.
	sourceAddress	Address of the node that sent the Acknowledgement PG.
	priority	Priority of the Acknowledgement PG.
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	Indicates reception of an Acknowledgement PG.	
Available via:	configurable	

] (SRS_J1939_00015)

[SWS_J1939Rm_00086] [The configured <User>_AckIndication function shall be available for each user that has J1939RmUserAckIndication enabled.] ()

See section 7.7 for details.

8.6.3.3 <User>_RequestTimeoutIndication

[SWS_J1939Rm_00065] [

Service name:	< User >_RequestTimeoutIndication	
Syntax:	<pre>void < User >_RequestTimeoutIndication(uint8 node, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 destAddress)</pre>	
Service ID[hex]:	0x4e	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	node	Node by which the request was sent.
	channel	Channel on which the request was sent.
	requestedPgn	PGN of the requested PG.
	extIdInfo	Extended identifier bytes.
	destAddress	Address of the destination node or 0xFF for broadcast.
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	Indicates timeout of a request triggered with the same parameters.	
Available via:	configurable	

] (SRS_J1939_00026)

[SWS_J1939Rm_00087] [The configured <User>_RequestTimeoutIndication function shall be available for each user that has J1939RmUserTimeoutSupervision enabled.] ()

See section 7.8 for details.

8.7 Service Port Descriptions

This section defines the client server interfaces and the derived service ports used by J1939Rm to communicate with application software components (SWCs).

8.7.1 Provided Service Ports

These service ports provide API functions of the J1939Rm to the application SWCs.

Please note: All three ports use a port defined argument value to provide the userId argument of the corresponding BSW interfaces.

8.7.1.1 J1939Rm_SendAck

[SWS_J1939Rm_00098] [

Name	J1939Rm_SendAck_{user}		
Kind	ProvidedPort	Interface	AppSendAck
Description	--		

Port Defined Argument Value(s)	Type	uint8
	Value	{ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)}
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckTransmission)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)}	

] (SRS_J1939_00017)

8.7.1.2 J1939Rm_SendRequest

[SWS_J1939Rm_00097] [

Name	J1939Rm_SendRequest_{user}		
Kind	ProvidedPort	Interface	AppSendRequest
Description	--		
Port Defined Argument Value(s)	Type	uint8	
	Value	{ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)}	
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestTransmission)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)}		

] (SRS_J1939_00016)

8.7.1.3 J1939Rm_CancelRequestTimeout

[SWS_J1939Rm_00099] [

Name	J1939Rm_CancelRequestTimeout_{user}		
Kind	ProvidedPort	Interface	AppCancelRequestTimeout
Description	--		
Port Defined Argument Value(s)	Type	uint8	
	Value	{ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)}	
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)}		

] (SRS_J1939_00026)

8.7.2 Required Service Ports

These service ports provide call back functions of the J1939Rm to the application SWCs.

8.7.2.1 J1939Rm_AckIndication

[SWS_J1939Rm_00101] [

Name	J1939Rm_AckIndication_{user}		
Kind	RequiredPort	Interface	AppAckIndication
Description	--		
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckIndication)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)}		

] (SRS_J1939_00015)

8.7.2.2 J1939Rm_RequestIndication

[SWS_J1939Rm_00100] [

Name	J1939Rm_RequestIndication_{user}		
Kind	RequiredPort	Interface	AppRequestIndication
Description	--		
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestIndication)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)}		

] (SRS_J1939_00014)

8.7.2.3 J1939Rm_RequestTimeoutIndication

[SWS_J1939Rm_00102] [

Name	J1939Rm_RequestTimeoutIndication_{user}		
Kind	RequiredPort	Interface	AppRequestTimeoutIndication
Description	--		
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)}		

] (SRS_J1939_00026)

8.7.3 Client-Server Interfaces

This section lists the client-server interfaces used by the ports provided and required by the J1939 Request Manager.

Please note: The availability of these interfaces depends on the configuration of the J1939 Request Manager. The relevant parameters of the J1939 Request Manager configuration are listed as “Variation” of the operations.

8.7.3.1 AppSendAck

[SWS_J1939Rm_00103] [

Name	AppSendAck	
Comment	--	
IsService	true	
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckTransmission)} == true	
Possible Errors	0	E_OK
	1	E_NOT_OK

Operations

SendAck			
Comments	Requests transmission of an Acknowledgement PG.		
Variation	--		
Parameters	channel	Comment	Channel on which the acknowledgement shall be sent.
		Type	NetworkHandleType
		Variation	--
		Direction	IN
	ackPgn	Comment	Acknowledged PGN.
		Type	uint32
		Variation	--
		Direction	IN
	extIdInfo	Comment	--
		Type	J1939Rm_ExtIdInfoType
		Variation	--
		Direction	IN
ackCode	Comment	Type of acknowledgement, see definition of	

			J1939Rm_AckCode for available codes.	
		Type	J1939Rm_AckCode	
		Variation	--	
		Direction	IN	
	ackAddress	Comment	Address of the node that sent the request.	
		Type	uint8	
		Variation	--	
		Direction	IN	
	priority	Comment	Priority of the Acknowledgement PG.	
		Type	uint8	
		Variation	--	
		Direction	IN	
	broadcast	Comment	Indicates whether the ACKM is a response to a broadcast request.	
		Type	boolean	
		Variation	--	
		Direction	IN	
Possible Errors	E_OK	Operation successful		
	E_NOT_OK	Operation failed		

]

(SRS_J1939_00017)

8.7.3.2 AppSendRequest

[SWS_J1939Rm_00104] [

Name	AppSendRequest	
Comment	--	
IsService	true	
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestTransmission)} == true	
Possible Errors	0	E_OK
	1	E_NOT_OK

Operations

SendRequest

Comments	Requests transmission of a Request or Request2 PG.		
Variation	--		
Parameters	channel	Comment	Channel on which the request shall be sent.
		Type	NetworkHandleType
		Variation	--
		Direction	IN
	requestedPgn	Comment	PGN of the requested PG.
		Type	uint32
		Variation	--
		Direction	IN
	extIdInfo	Comment	--
		Type	J1939Rm_ExtIdInfoType
		Variation	--
		Direction	IN
	destAddress	Comment	Address of the destination node or 0xFF for broadcast.
		Type	uint8
		Variation	--
		Direction	IN
	priority	Comment	Priority of the Request PG.
		Type	uint8
		Variation	--
		Direction	IN
checkTimeout	Comment	TRUE: Timeout supervision will be performed FALSE: No timeout supervision will be started	
	Type	boolean	
	Variation	--	
	Direction	IN	
Possible Errors	E_OK	Operation successful	
	E_NOT_OK	Operation failed	

]

(SRS_J1939_00016)

8.7.3.3 AppCancelRequestTimeout

[SWS_J1939Rm_00105] [

Name	AppCancelRequestTimeout	
Comment	--	
IsService	true	
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true	
Possible Errors	0	E_OK
	1	E_NOT_OK

Operations

CancelRequestTimeout			
Comments	Cancels timeout monitoring of a request. If the request is not active, or timeout monitoring was not requested, this call has no effect.		
Variation	--		
Parameters	channel	Comment	Channel on which the request was sent.
		Type	NetworkHandleType
		Variation	--
		Direction	IN
	requestedPgn	Comment	PGN of the requested PG.
		Type	uint32
		Variation	--
		Direction	IN
	extIdInfo	Comment	--
		Type	J1939Rm_ExtIdInfoType
		Variation	--
		Direction	IN
	destAddress	Comment	Address of the destination node or 0xFF for broadcast.
		Type	uint8
		Variation	--
		Direction	IN
Possible Errors	E_OK	Operation successful	
	E_NOT_OK	Operation failed	

]

(SRS_J1939_00026)

8.7.3.4 AppAckIndication

[SWS_J1939Rm_00106] [

Name	AppAckIndication	
Comment	--	
IsService	true	
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckIndication)} == true	
Possible Errors	0	E_OK
	1	E_NOT_OK

Operations

AckIndication			
Comments	Indicates reception of an Acknowledgement PG.		
Variation	--		
Parameters	node	Comment	Node by which the acknowledgement was received.
		Type	uint8
		Variation	--
		Direction	IN
	channel	Comment	Channel on which the acknowledgement was received.
		Type	NetworkHandleType
		Variation	--
		Direction	IN
	ackPgn	Comment	Acknowledged PGN.
		Type	uint32
		Variation	--
		Direction	IN
	extIdInfo	Comment	Extended identifier bytes.
		Type	J1939Rm_ExtIdInfoType
		Variation	--
		Direction	IN

	ackCode	Comment	Type of acknowledgement, see definition of J1939Rm_AckCode for available codes.
		Type	J1939Rm_AckCode
		Variation	--
		Direction	IN
	ackAddress	Comment	Address of this node.
		Type	uint8
		Variation	--
		Direction	IN
	sourceAddress	Comment	Address of the node that sent the Acknowledgement PG.
		Type	uint8
		Variation	--
		Direction	IN
	priority	Comment	Priority of the Acknowledgement PG.
		Type	uint8
		Variation	--
		Direction	IN
Possible Errors	E_OK	Operation successful	
	E_NOT_OK	Operation failed	

(SRS_J1939_00015)

]

8.7.3.5 AppRequestIndication

[SWS_J1939Rm_00107] [

Name	AppRequestIndication	
Comment	--	
IsService	true	
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestIndication)} == true	
Possible Errors	0	E_OK
	1	E_NOT_OK

Operations

RequestIndication			
Comments	Indicates reception of a Request or Request2 PG.		
Variation	--		
Parameters	node	Comment	Node by which the request was received.
		Type	uint8
		Variation	--
		Direction	IN
	channel	Comment	Channel on which the request was received.
		Type	NetworkHandleType
		Variation	--
		Direction	IN
	requestedPgn	Comment	PGN of the requested PG.
		Type	uint32
		Variation	--
		Direction	IN
	extIdInfo	Comment	Extended identifier bytes.
		Type	J1939Rm_ExtIdInfoType
		Variation	--
		Direction	IN
	sourceAddress	Comment	Address of the node that sent the Request PG.
		Type	uint8
		Variation	--
		Direction	IN
	destAddress	Comment	Address of this node or 0xFF for broadcast.
		Type	uint8
		Variation	--
		Direction	IN
	priority	Comment	Priority of the Request PG.
		Type	uint8
		Variation	--
		Direction	IN

Possible Errors	E_OK	Operation successful
	E_NOT_OK	Operation failed

] (SRS_J1939_00014)

8.7.3.6 AppRequestTimeoutIndication

[SWS_J1939Rm_00108] [

Name	AppRequestTimeoutIndication	
Comment	--	
IsService	true	
Variation	{ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true	
Possible Errors	0	E_OK
	1	E_NOT_OK

Operations

RequestTimeoutIndication			
Comments	Indicates timeout of a request triggered with the same parameters.		
Variation	--		
Parameters	node	Comment	Node by which the request was sent.
		Type	uint8
		Variation	--
		Direction	IN
	channel	Comment	Channel on which the request was sent.
		Type	NetworkHandleType
		Variation	--
		Direction	IN
	requestedPgn	Comment	PGN of the requested PG.
		Type	uint32
		Variation	--
		Direction	IN
extIdInfo	Comment	Extended identifier bytes.	
	Type	J1939Rm_ExtIdInfoType	

		Variation	--	
		Direction	IN	
	destAddress	Comment	Address of the destination node or 0xFF for broadcast.	
		Type	uint8	
		Variation	--	
		Direction	IN	
Possible Errors	E_OK	Operation successful		
	E_NOT_OK	Operation failed		

]

(SRS_J1939_00026)

8.7.4 Implementation Data Types

In this section, the implementation data types used by the client-server interfaces of the J1939 Request Manager are listed.

Please note: It is essential that the implementation of the J1939 Request Manager does not define these data types twice, by including them both from the RTE generated header and the own types header.

8.7.4.1 J1939Rm_AckCode

[SWS_J1939Rm_00057] [

Name	J1939Rm_AckCode		
Kind	Enumeration		
Range	J1939RM_ACK_POSITIVE	0x00	Positive Acknowledgement
	J1939RM_ACK_NEGATIVE	0x01	Negative Acknowledgement
	J1939RM_ACK_ACCESS_DENIED	0x02	Access Denied
	J1939RM_ACK_CANNOT_RESPOND	0x03	Cannot Respond
Description	This type represents the available kinds of acknowledgements.		
Variation	--		
Available via	Rte_J1939Rm_Type.h		

]

()

[SWS_J1939Rm_91000] [

Name	J1939Rm_ExtIdType
Kind	Enumeration

Range	J1939RM_EXTID_NONE	0x00	No extended identifier bytes (0)
	J1939RM_EXTID_ONE	0x01	One extended identifier byte (1)
	J1939RM_EXTID_TWO	0x02	Two extended identifier bytes (2)
	J1939RM_EXTID_THREE	0x03	Three extended identifier bytes (3)
	J1939RM_EXTID_GF	0x04	Group function value, only for ACKM (4)
Description	This type represents the available kinds of extended identifier usage.		
Variation	--		
Available via	Rte_J1939Rm_Type.h		

] ()

[SWS_J1939Rm_91001] [

Name	J1939Rm_ExtIdInfoType		
Kind	Structure		
Elements	extIdType	J1939Rm_ExtIdType	Denotes the number of extended identifier bytes.
	extId1	uint8	First extended identifier byte or group function for ACKM.
	extId2	uint8	Second extended identifier byte.
	extId3	uint8	Third extended identifier byte.
Description	This type represents a set of extended identifiers.		
Variation	--		
Available via	Rte_J1939Rm_Type.h		

] ()

9 Sequence diagrams

The following sequence diagrams shall give an impression of the way the J1939 Request Manager shall behave and interoperate with other BSW modules. They are not complete and not binding for the implementation.

9.1 Reception of Request PG

The following diagram shows the interaction with PduR and a J1939Rm User when a Request PG is received.

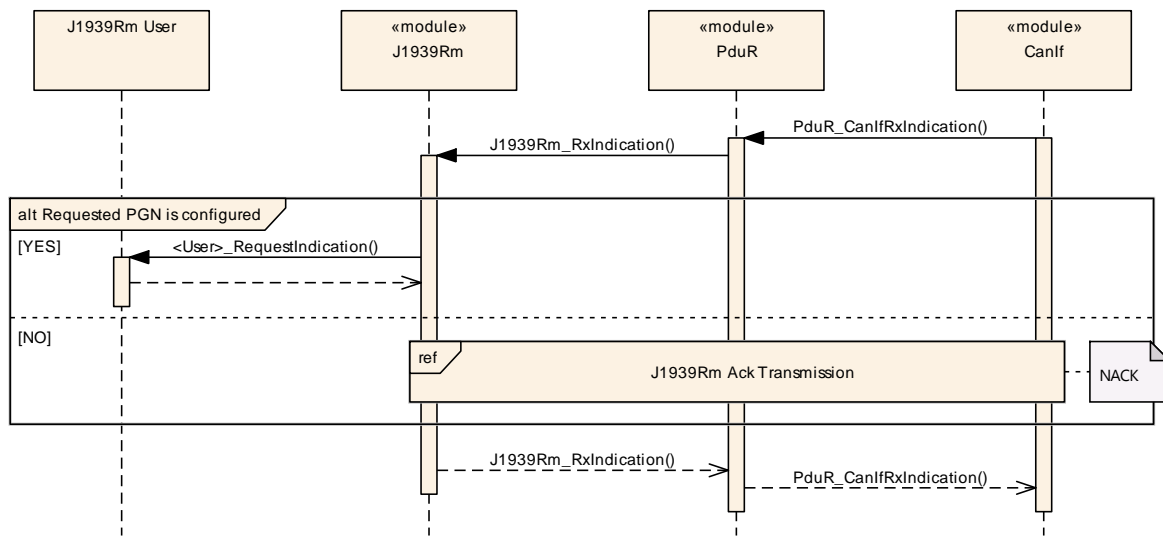


Figure 1: Reception of Request PG

9.2 Transmission of Acknowledgement PG

The following diagram shows the interaction with a J1939Rm User and PduR when an Acknowledgement PG is transmitted.

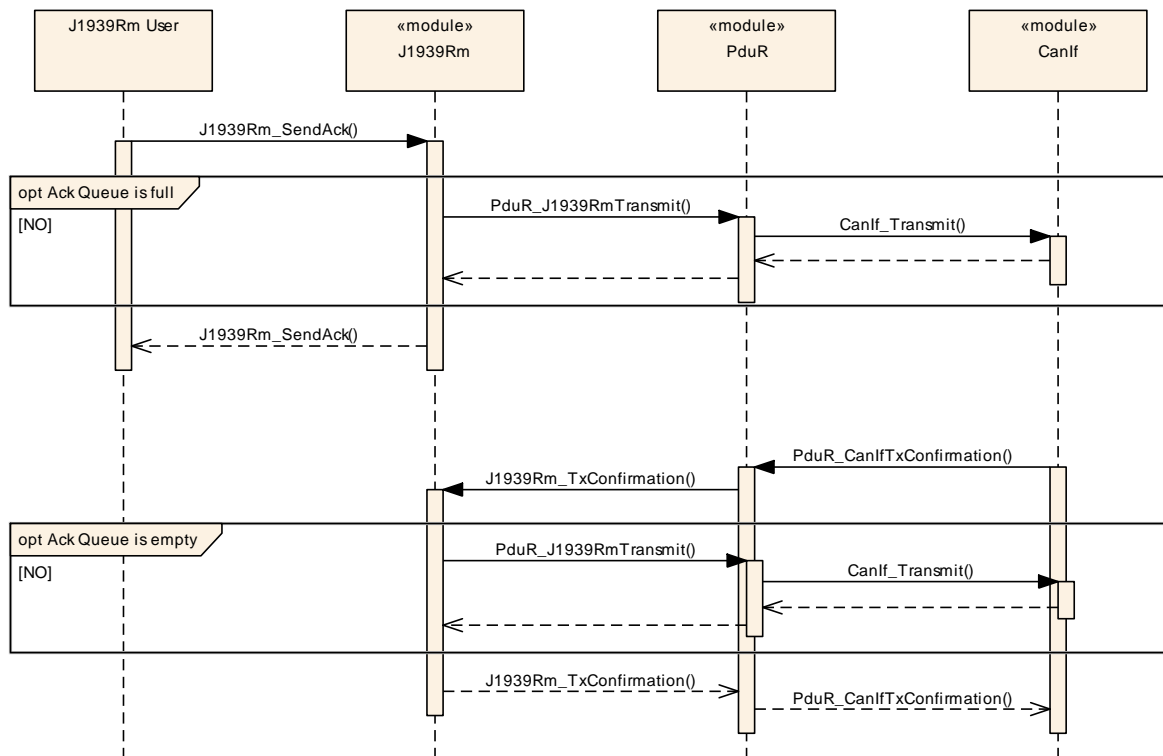


Figure 2: Transmission of Acknowledgement PG

9.3 Handling of Request for a COM Pdu

The following diagram shows the interaction with PduR and COM when the J1939 Request Manager receives a Request for a PG of PDU1 format that is transmitted as COM Pdu.

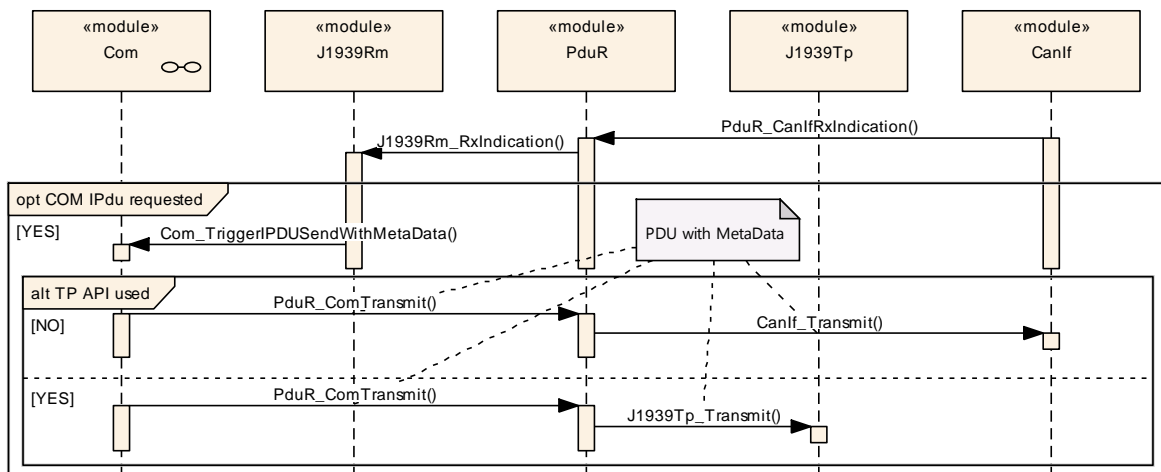


Figure 3: Handling of Request for a COM Pdu with PDU1 format

9.4 Handling of Request for a Diagnostic Pdu

The following diagram shows the interaction with PduR and J1939Dcm when a Request for a diagnostic PG is received.

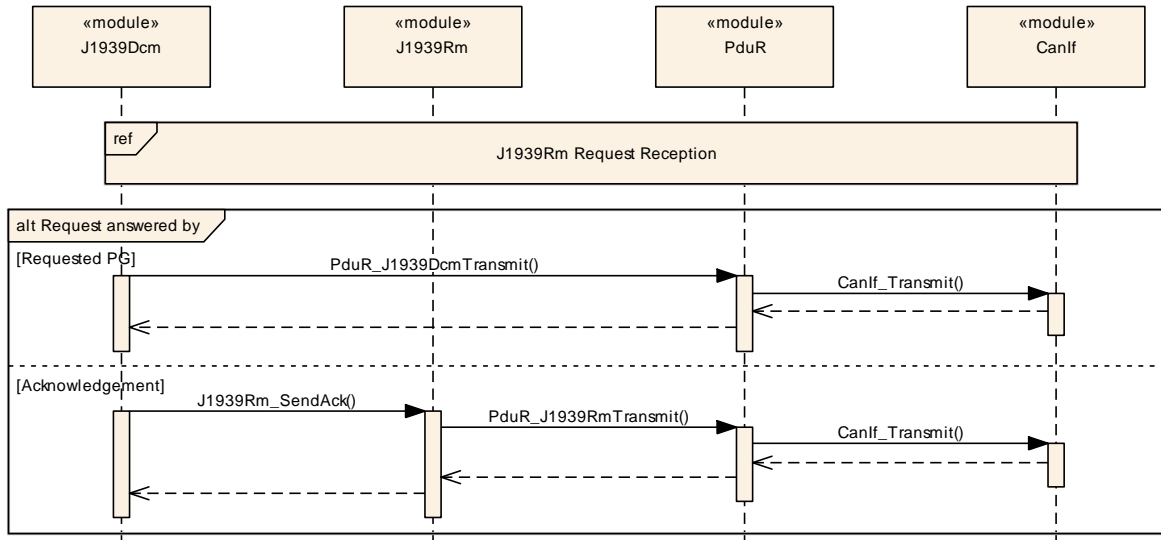


Figure 4: Handling of Request for a Diagnostic Pdu

9.5 Transmission of Request PG

The following diagram shows the interaction with a J1939Rm User and PduR when a Request PG is transmitted.

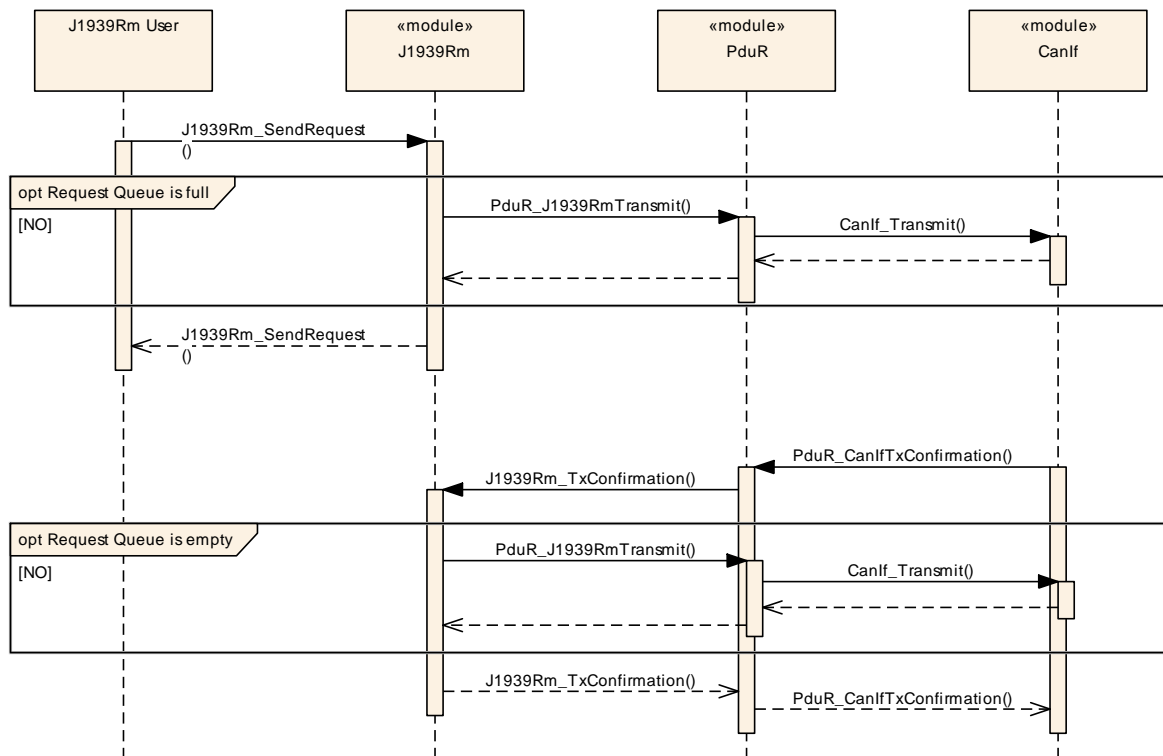


Figure 5: Transmission of Request PG

9.6 Reception of Acknowledgement PG

The following diagram shows the interaction with PduR and a J1939Rm User when an Acknowledgement PG is received.

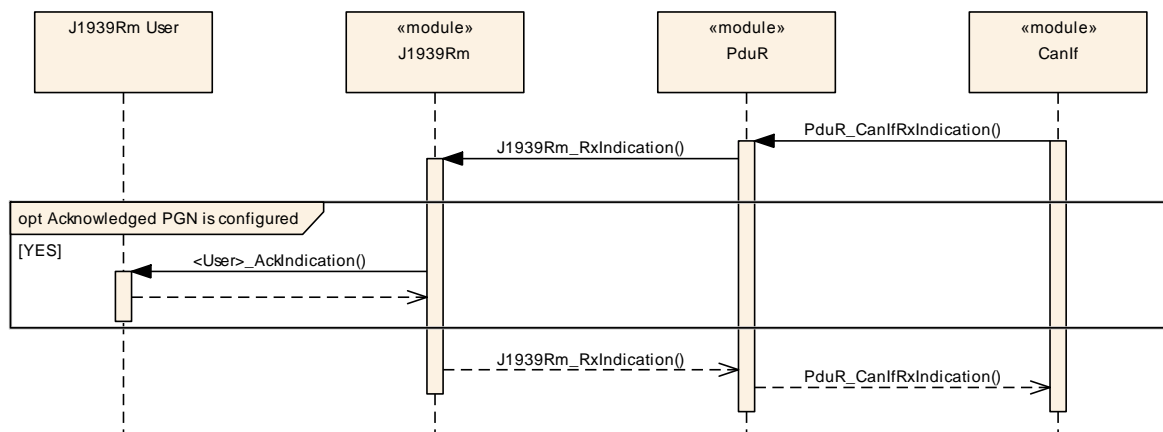


Figure 6: Reception of Acknowledgement PG

9.7 Monitoring of Request Timeout

The following diagram shows the interaction with a J1939Rm User and PduR when the J1939Rm monitors timeout of a transmitted Request PG.

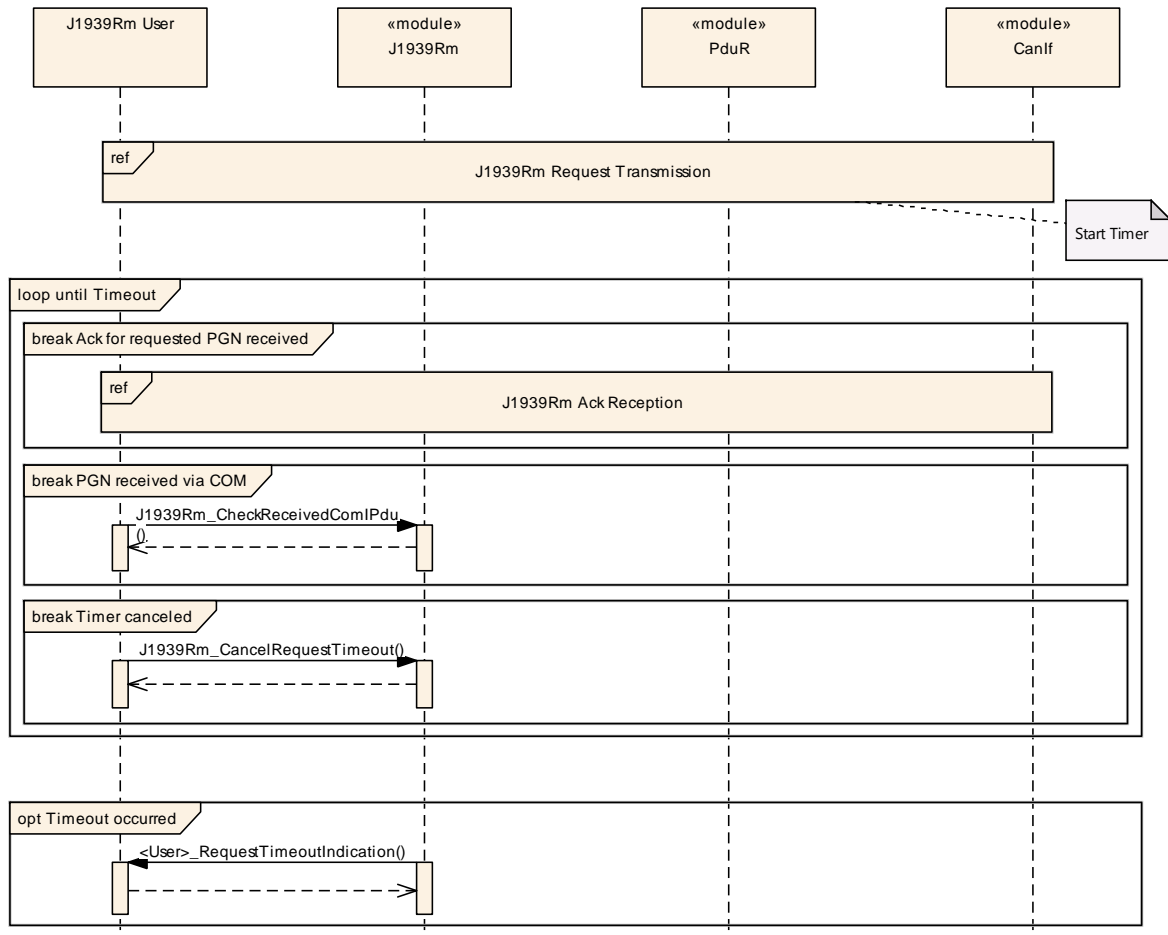


Figure 7: Monitoring of Request Timeout

10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. For general information about the definition of containers and parameters, refer to the chapter 10.1 “Introduction to configuration specification” in the SWS BSW General [4].

Section 10.1 specifies the structure (containers) and the parameters of the J1939 Request Manager.

Section 10.2 specifies published information of the J1939 Request Manager.

10.1 Containers and configuration parameters

The following sections summarize all configuration parameters of the J1939 Request Manager. The detailed meaning of the parameters is described in chapters 7 and 8.

The following pictures show an overview of the configuration parameters available for J1939Rm:

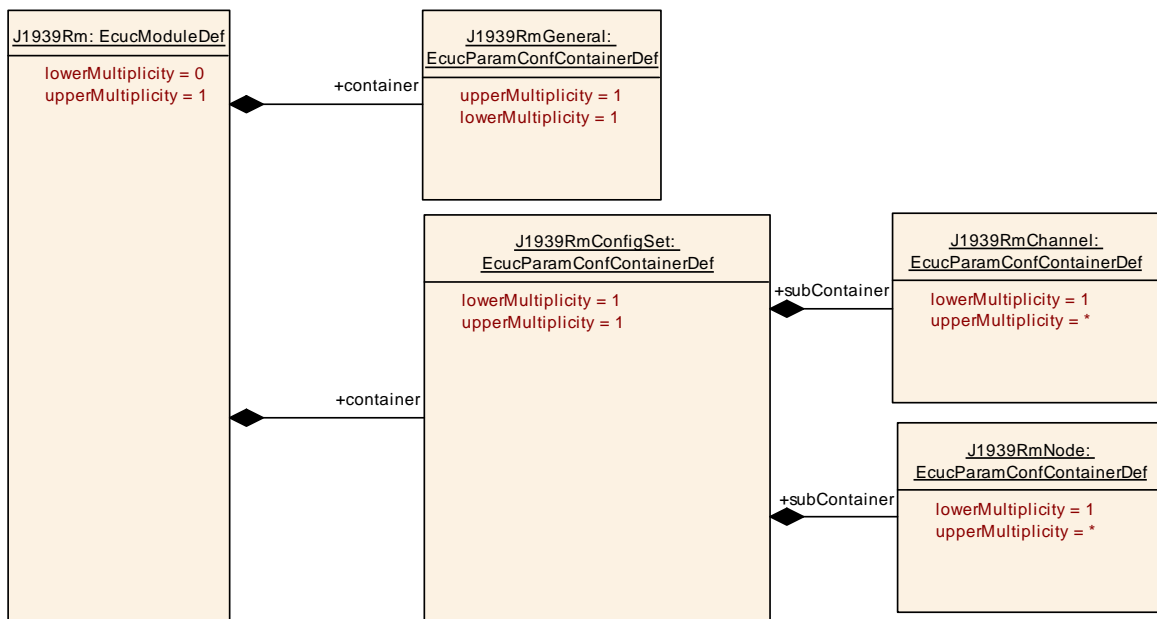


Figure 8: Configuration container J1939Rm with subcontainer J1939RmConfigSet

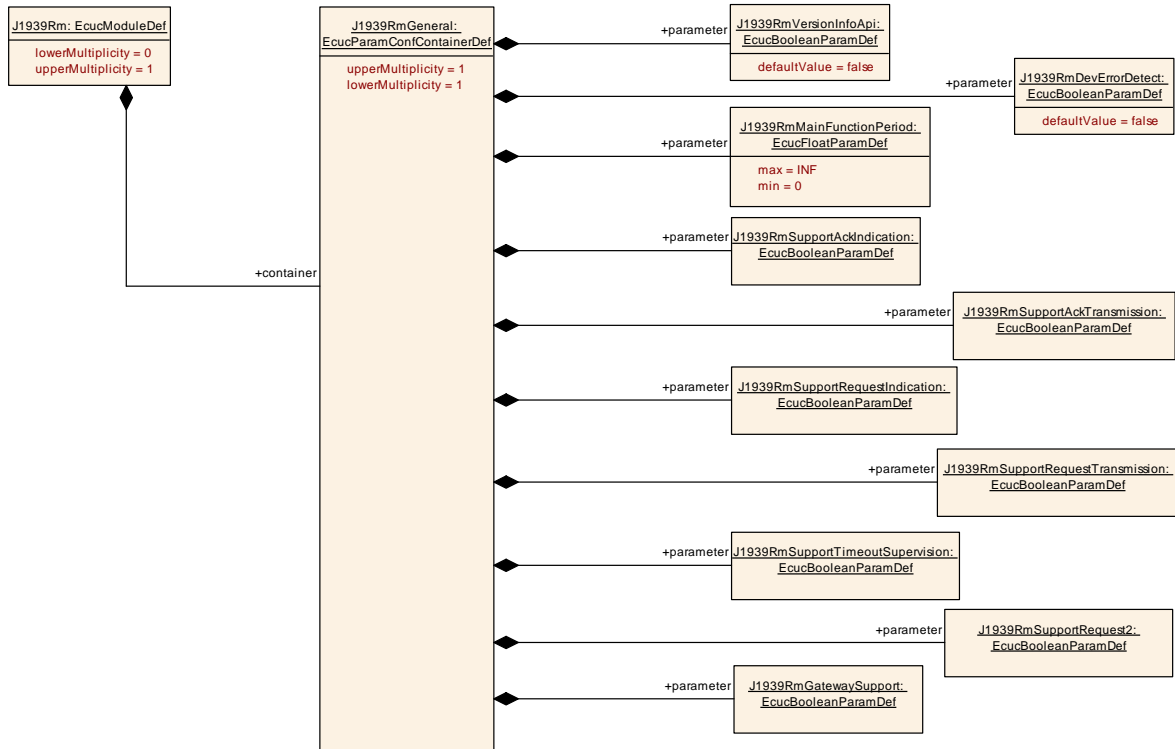


Figure 9: Configuration container J1939RmGeneral

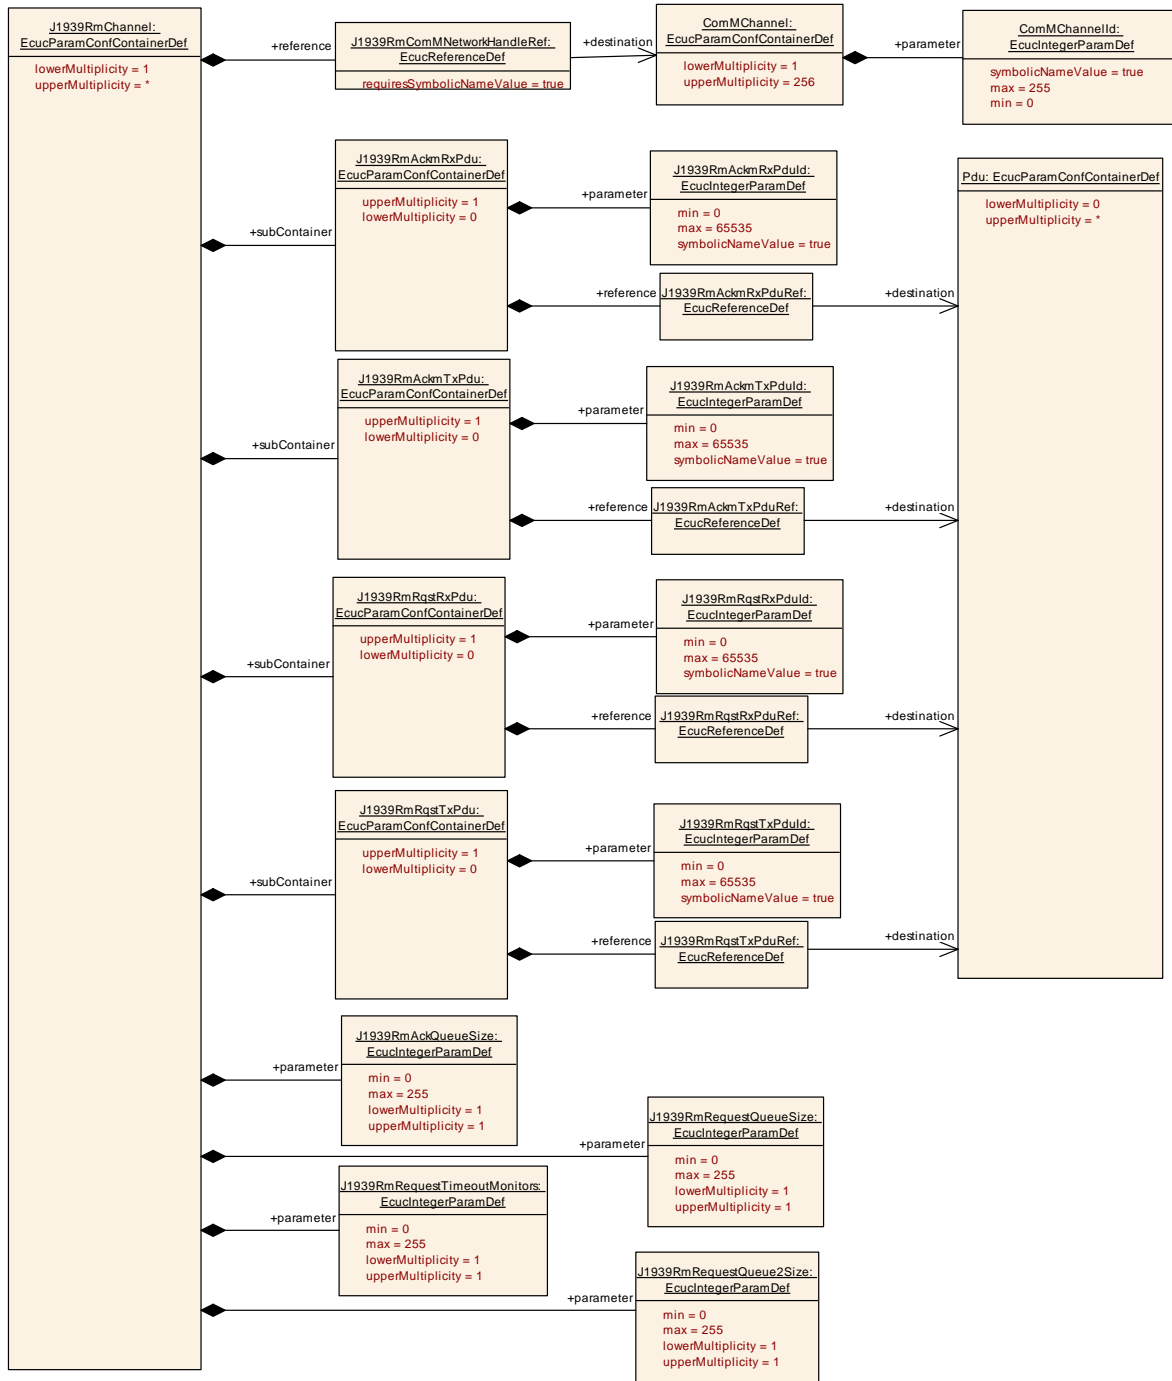


Figure 10: Configuration container J1939RmChannel

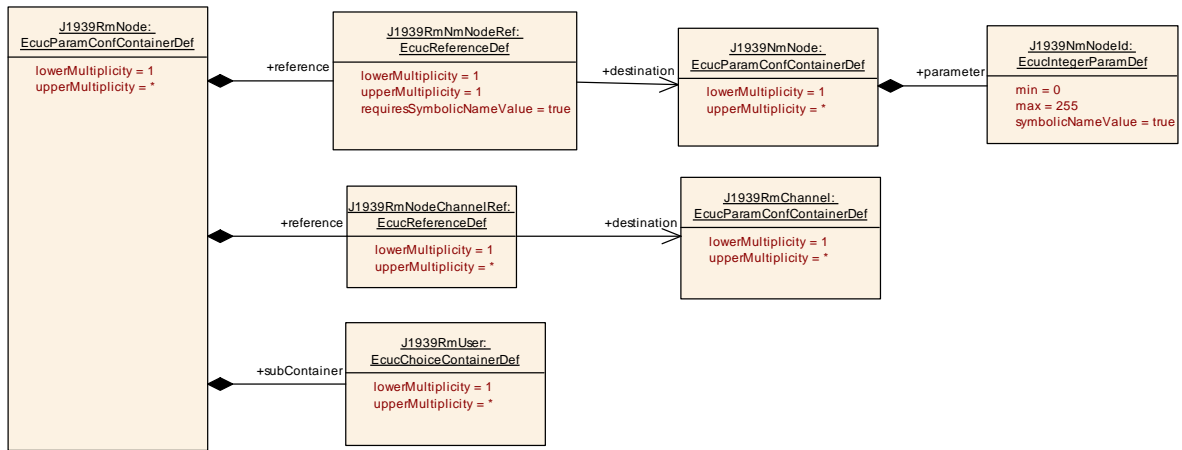


Figure 11: Configuration container J1939RmNode

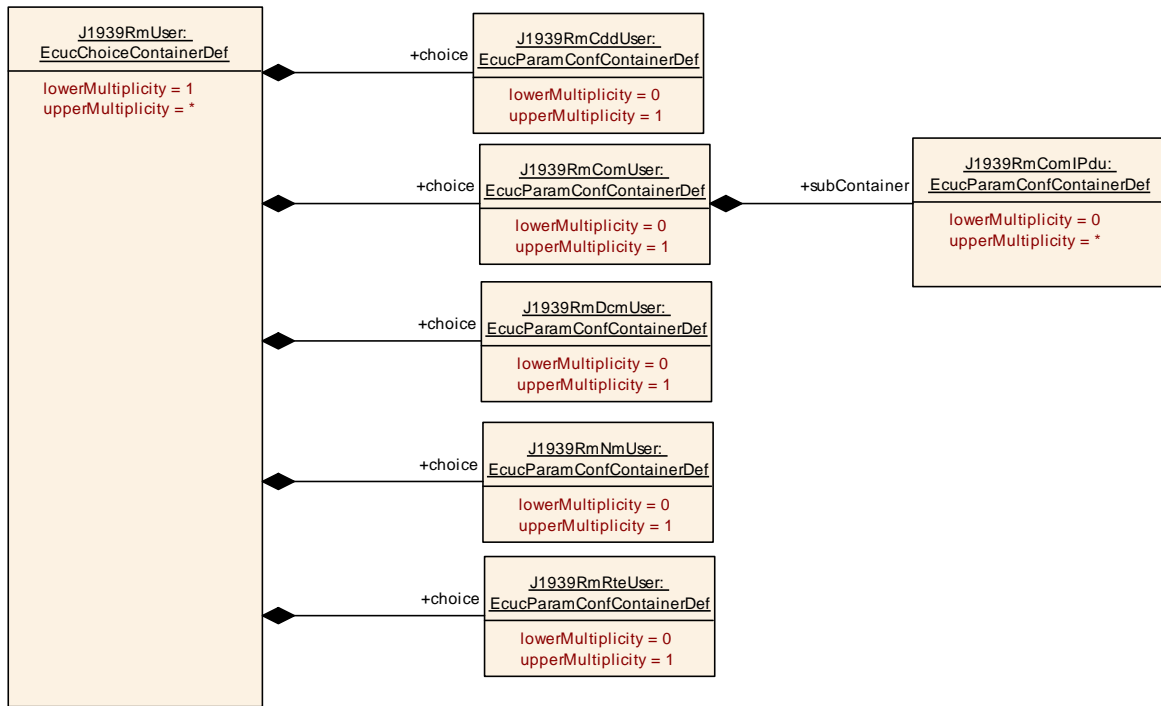


Figure 12: Configuration container J1939RmUser

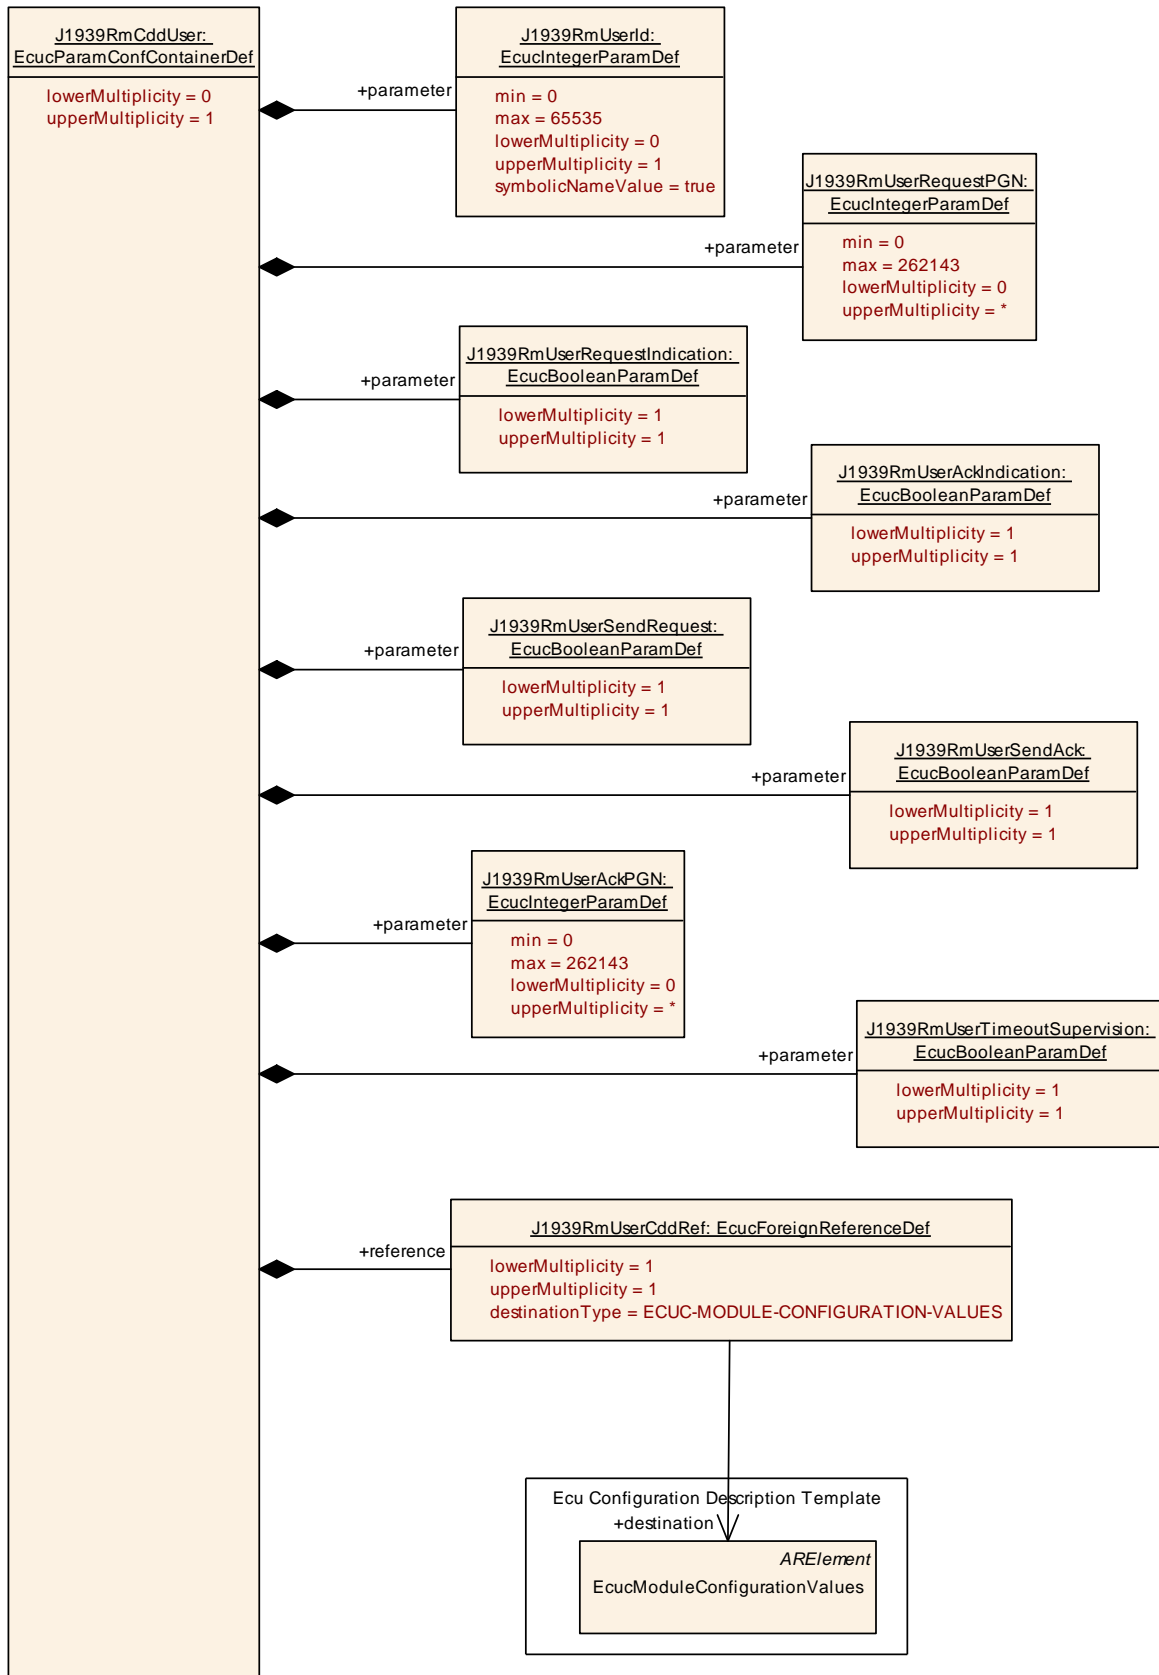


Figure 13: Configuration container J1939RmCddUser

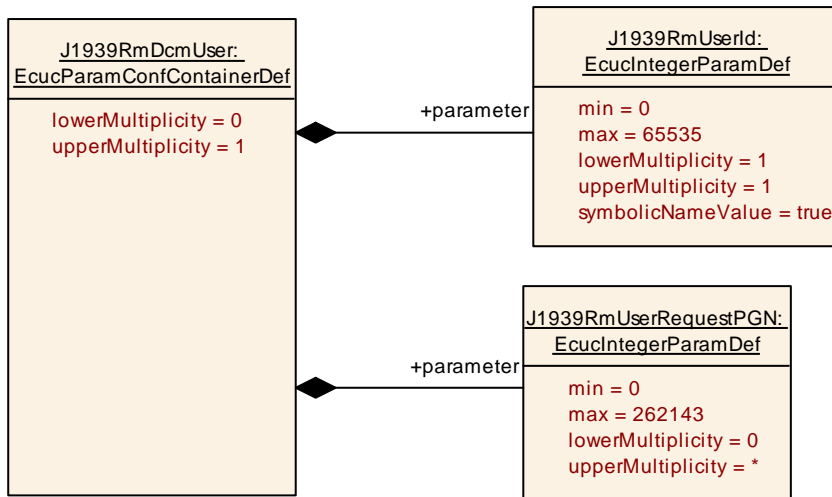


Figure 14: Configuration container J1939RmDcmUser

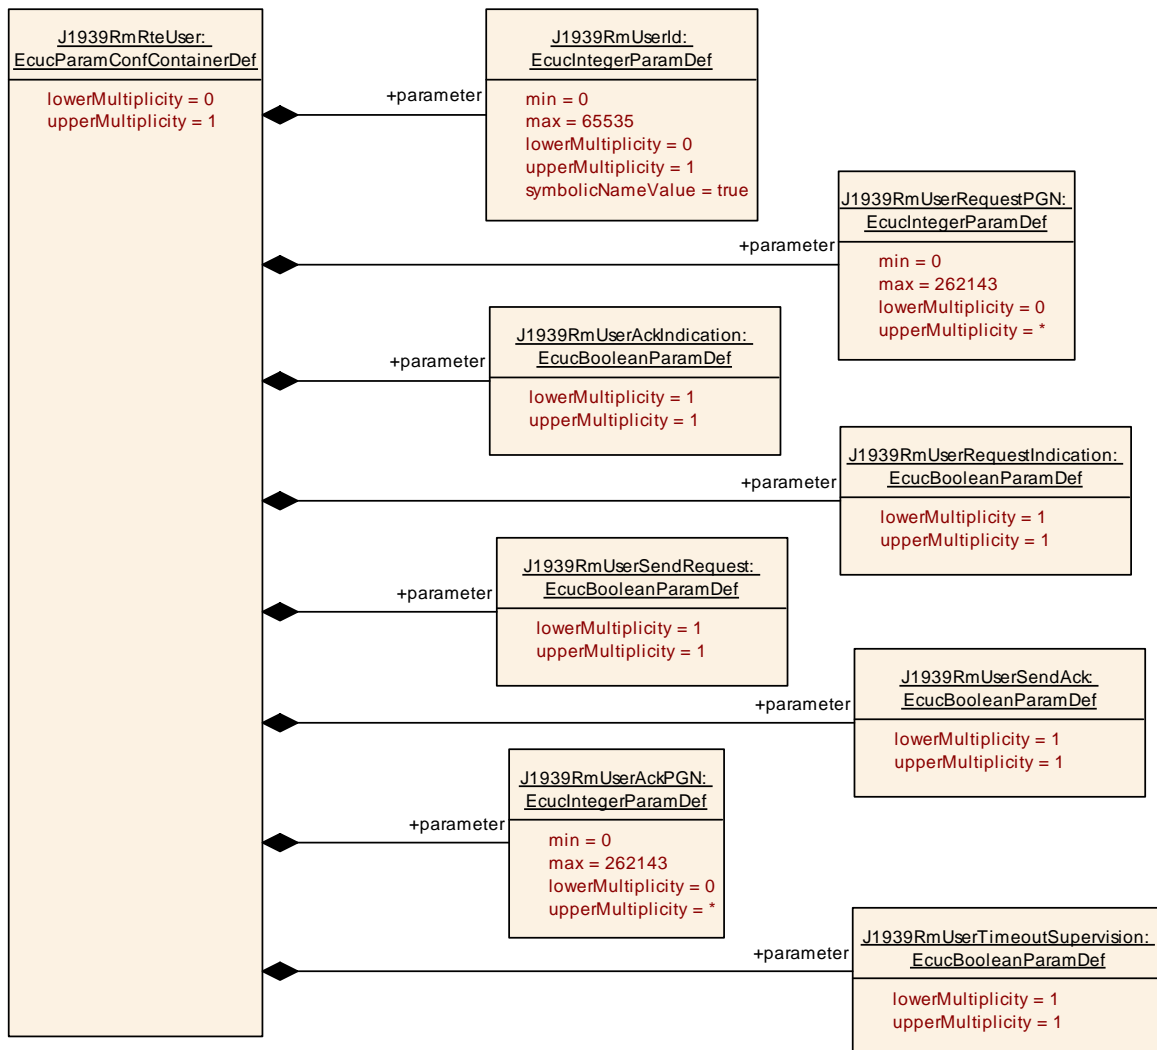


Figure 15: Configuration container J1939RmRteUser

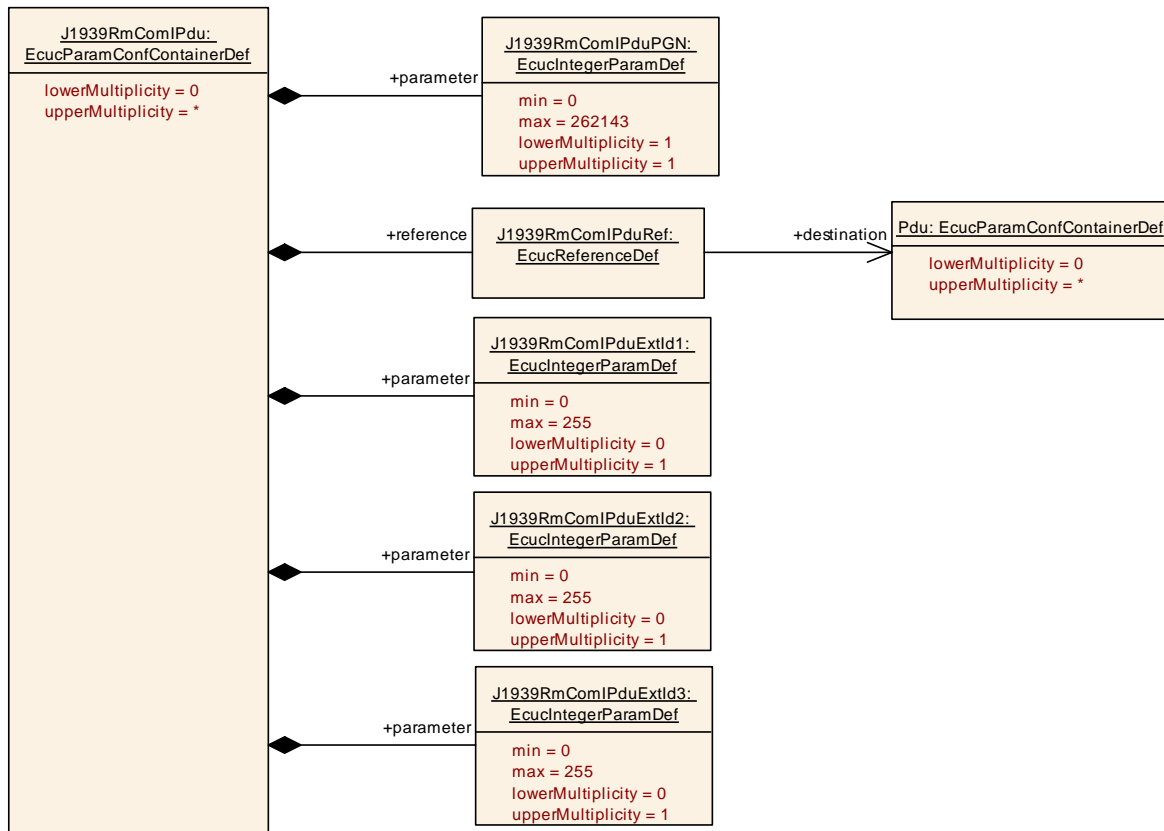


Figure 16: Configuration container J1939RmComIPdu

10.1.1 J1939Rm

SWS Item	ECUC_J1939Rm_00043 :
Module Name	J1939Rm
Module Description	Configuration of the J1939 Request Manager.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
J1939RmConfigSet	1	This container contains the configuration parameters and sub containers of the AUTOSAR J1939Rm module.
J1939RmGeneral	1	Contains the general configuration parameters of the module.

10.1.2 J1939RmGeneral

SWS Item	ECUC_J1939Rm_00001 :
Container Name	J1939RmGeneral
Description	Contains the general configuration parameters of the module.
Configuration Parameters	

SWS Item	ECUC_J1939Rm_00003 :		
Name	J1939RmDevErrorDetect		
Parent Container	J1939RmGeneral		
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> • true: detection and notification is enabled. • false: detection and notification is disabled. 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00084 :		
Name	J1939RmGatewaySupport		
Parent Container	J1939RmGeneral		
Description	Enables/disables support for routing Request and Acknowledgement messages.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00004 :		
Name	J1939RmMainFunctionPeriod		
Parent Container	J1939RmGeneral		
Description	Execution cycle of J1939Rm_MainFunction in seconds.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00054 :		
Name	J1939RmSupportAckIndication		
Parent Container	J1939RmGeneral		
Description	Pre-processor switch for enabling support of acknowledgement indications.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants

	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00055 :		
Name	J1939RmSupportAckTransmission		
Parent Container	J1939RmGeneral		
Description	Pre-processor switch for enabling support of acknowledgement transmission.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00073 :		
Name	J1939RmSupportRequest2		
Parent Container	J1939RmGeneral		
Description	Pre-processor switch for enabling support of the Request2 PG. Please note: Transfer is not supported.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00056 :		
Name	J1939RmSupportRequestIndication		
Parent Container	J1939RmGeneral		
Description	Pre-processor switch for enabling support of request indications.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00057 :		
Name	J1939RmSupportRequestTransmission		
Parent Container	J1939RmGeneral		
Description	Pre-processor switch for enabling support of request transmission.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	

Scope / Dependency	scope: local		
SWS Item	ECUC_J1939Rm_00058 :		
Name	J1939RmSupportTimeoutSupervision		
Parent Container	J1939RmGeneral		
Description	Pre-processor switch for enabling support of request timeout supervision.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00002 :		
Name	J1939RmVersionInfoApi		
Parent Container	J1939RmGeneral		
Description	Pre-processor switch for enabling version info API support.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.3 J1939RmConfigSet

SWS Item	ECUC_J1939Rm_00017 :		
Container Name	J1939RmConfigSet		
Description	This container contains the configuration parameters and sub containers of the AUTOSAR J1939Rm module.		
Configuration Parameters			

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
J1939RmChannel	1..*	Contains the parameters for a CAN channel supported by the J1939 Request Manager.	
J1939RmNode	1..*	Contains the parameters for the support of a logical J1939 node (identified by an ECU address).	

10.1.4 J1939RmChannel

SWS Item	ECUC_J1939Rm_00009 :		
Container Name	J1939RmChannel		
Description	Contains the parameters for a CAN channel supported by the J1939		

	Request Manager.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00007 :		
Name	J1939RmAckQueueSize		
Parent Container	J1939RmChannel		
Description	Number of transmitted Acknowledgement messages that can be stored.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00074 :		
Name	J1939RmRequestQueue2Size		
Parent Container	J1939RmChannel		
Description	Number of transmitted Request2 messages that can be stored.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00006 :		
Name	J1939RmRequestQueueSize		
Parent Container	J1939RmChannel		
Description	Number of transmitted Request messages that can be stored.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00008 :		
Name	J1939RmRequestTimeoutMonitors		
Parent Container	J1939RmChannel		

Description	Number of transmitted requests that can be monitored for timeout.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00051 :		
Name	J1939RmComMNetworkHandleRef		
Parent Container	J1939RmChannel		
Description	Reference to the channel defined by the ComMChannel providing access to the unique channel index ComMChannelId.		
Multiplicity	1		
Type	Symbolic name reference to [ComMChannel]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
J1939RmAckmRxPdu	0..1	Contains the configuration of the I-PDU used to receive the Acknowledgement PG. This PDU consumes a meta data item of type CAN_ID_32.
J1939RmAckmTxPdu	0..1	Contains the configuration of the I-PDU used to transmit the Acknowledgement PG. This PDU produces a meta data item of type CAN_ID_32.
J1939RmRqst2RxPdu	0..1	Contains the configuration of the I-PDU used to receive the Request2 PG. This PDU consumes a meta data item of type CAN_ID_32.
J1939RmRqst2TxPdu	0..1	Contains the configuration of the I-PDU used to transmit the Request2 PG. This PDU produces a meta data item of type CAN_ID_32.
J1939RmRqstRxPdu	0..1	Contains the configuration of the I-PDU used to receive the Request PG. This PDU consumes a meta data item of type CAN_ID_32.
J1939RmRqstTxPdu	0..1	Contains the configuration of the I-PDU used to transmit the Request PG. This PDU produces a meta data item of type CAN_ID_32.

10.1.5 J1939RmAckmRxPdu

SWS Item	ECUC_J1939Rm_00011 :
Container Name	J1939RmAckmRxPdu
Description	Contains the configuration of the I-PDU used to receive the Acknowledgement PG. This PDU consumes a meta data item of type CAN_ID_32.

Configuration Parameters

SWS Item	ECUC_J1939Rm_00015 :		
Name	J1939RmAckmRxPduId		
Parent Container	J1939RmAckmRxPdu		
Description	The I-PDU identifier used for RxIndication from PduR.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00016 :		
Name	J1939RmAckmRxPduRef		
Parent Container	J1939RmAckmRxPdu		
Description	Reference to the Pdu object representing the I-PDU.		
Multiplicity	1		
Type	Reference to [Pdu]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.6 J1939RmAckmTxPdu

SWS Item	ECUC_J1939Rm_00012 :		
Container Name	J1939RmAckmTxPdu		
Description	Contains the configuration of the I-PDU used to transmit the Acknowledgement PG. This PDU produces a meta data item of type CAN_ID_32.		
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00018 :		
Name	J1939RmAckmTxPduId		
Parent Container	J1939RmAckmTxPdu		
Description	The I-PDU identifier used for TxConfirmation from PduR.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00019 :		
Name	J1939RmAckmTxPduRef		
Parent Container	J1939RmAckmTxPdu		
Description	Reference to the Pdu object representing the I-PDU.		
Multiplicity	1		
Type	Reference to [Pdu]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.7 J1939RmRqstRxPdu

SWS Item	ECUC_J1939Rm_00013 :		
Container Name	J1939RmRqstRxPdu		
Description	Contains the configuration of the I-PDU used to receive the Request PG. This PDU consumes a meta data item of type CAN_ID_32.		
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00020 :		
Name	J1939RmRqstRxPduld		
Parent Container	J1939RmRqstRxPdu		
Description	The I-PDU identifier used for RxIndication from PduR.		
Multiplicity	1		
Type	EcuIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00021 :		
Name	J1939RmRqstRxPduRef		
Parent Container	J1939RmRqstRxPdu		
Description	Reference to the Pdu object representing the I-PDU.		
Multiplicity	1		
Type	Reference to [Pdu]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.8 J1939RmRqstTxPdu

SWS Item	ECUC_J1939Rm_00014 :
Container Name	J1939RmRqstTxPdu
Description	Contains the configuration of the I-PDU used to transmit the Request PG. This PDU produces a meta data item of type CAN_ID_32.
Configuration Parameters	

SWS Item	ECUC_J1939Rm_00022 :		
Name	J1939RmRqstTxPduId		
Parent Container	J1939RmRqstTxPdu		
Description	The I-PDU identifier used for TxConfirmation from PduR.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00023 :		
Name	J1939RmRqstTxPduRef		
Parent Container	J1939RmRqstTxPdu		
Description	Reference to the Pdu object representing the I-PDU.		
Multiplicity	1		
Type	Reference to [Pdu]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.9 J1939RmRqst2RxPdu

SWS Item	ECUC_J1939Rm_00075 :
Container Name	J1939RmRqst2RxPdu
Description	Contains the configuration of the I-PDU used to receive the Request2 PG. This PDU consumes a meta data item of type CAN_ID_32.
Configuration Parameters	

SWS Item	ECUC_J1939Rm_00078 :		
Name	J1939RmRqst2RxPduId		
Parent Container	J1939RmRqst2RxPdu		
Description	The I-PDU identifier used for RxIndication from PduR.		
Multiplicity	1		

Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00077 :		
Name	J1939RmRqst2RxPduRef		
Parent Container	J1939RmRqst2RxPdu		
Description	Reference to the Pdu object representing the I-PDU.		
Multiplicity	1		
Type	Reference to [Pdu]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.10 J1939RmRqst2TxPdu

SWS Item	ECUC_J1939Rm_00076 :		
Container Name	J1939RmRqst2TxPdu		
Description	Contains the configuration of the I-PDU used to transmit the Request2 PG. This PDU produces a meta data item of type CAN_ID_32.		
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00080 :		
Name	J1939RmRqst2TxPduId		
Parent Container	J1939RmRqst2TxPdu		
Description	The I-PDU identifier used for TxConfirmation from PduR.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00079 :		
Name	J1939RmRqst2TxPduRef		
Parent Container	J1939RmRqst2TxPdu		
Description	Reference to the Pdu object representing the I-PDU.		
Multiplicity	1		
Type	Reference to [Pdu]		
Post-Build Variant Value	false		

Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.11 J1939RmNode

SWS Item	ECUC_J1939Rm_00049 :		
Container Name	J1939RmNode		
Description	Contains the parameters for the support of a logical J1939 node (identified by an ECU address).		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00005 :		
Name	J1939RmNmNodeRef		
Parent Container	J1939RmNode		
Description	Reference to the corresponding J1939Nm node.		
Multiplicity	1		
Type	Symbolic name reference to [J1939NmNode]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00052 :		
Name	J1939RmNodeChannelRef		
Parent Container	J1939RmNode		
Description	Reference to the channels this node has access to.		
Multiplicity	1..*		
Type	Reference to [J1939RmChannel]		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	--	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
J1939RmUser	1..*	Contains the configuration of a module that uses the request and acknowledgement interfaces of J1939Rm.

10.1.12 J1939RmUser

SWS Item	ECUC_J1939Rm_00010 :		
Choice container Name	J1939RmUser		
Description	Contains the configuration of a module that uses the request and acknowledgement interfaces of J1939Rm.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD

Container Choices		
Container Name	Multiplicity	Scope / Dependency
J1939RmCddUser	0..1	J1939Rm User representing a complex driver (CDD). CDDs may use all services provided by J1939Rm.
J1939RmComUser	0..1	J1939Rm User representing AUTOSAR COM. Supports requests for COM I-PDUs.
J1939RmDcmUser	0..1	J1939Rm User representing the J1939Dcm. Requires request indication and transmission of acknowledgement.
J1939RmNmUser	0..1	J1939Rm User representing the J1939Nm. Requires request indication.
J1939RmRteUser	0..1	J1939Rm User representing an application software component (SW-C). SW-Cs may use all services provided by the J1939Rm via service ports.

10.1.13 J1939RmNmUser

SWS Item	ECUC_J1939Rm_00071 :		
Container Name	J1939RmNmUser		
Description	J1939Rm User representing the J1939Nm. Requires request indication.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

No Included Containers

10.1.14 J1939RmDcmUser

SWS Item	ECUC_J1939Rm_00068 :		
Container Name	J1939RmDcmUser		
Description	J1939Rm User representing the J1939Dcm. Requires request indication and transmission of acknowledgement.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00072 :		
Name	J1939RmUserId		
Parent Container	J1939RmDcmUser		
Description	Identifier used by J1939Dcm when calling J1939Rm_SendAck.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00070 :		
Name	J1939RmUserRequestPGN		
Parent Container	J1939RmDcmUser		
Description	PGN of DMx PG supported by J1939Dcm.		
Multiplicity	0..*		
Type	EcucIntegerParamDef		
Range	0 .. 262143		
Default value	--		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

No Included Containers

10.1.15 J1939RmCddUser

SWS Item	ECUC_J1939Rm_00066 :		
Container Name	J1939RmCddUser		
Description	J1939Rm User representing a complex driver (CDD). CDDs may use all		

	services provided by J1939Rm.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00028 :		
Name	J1939RmUserAckIndication		
Parent Container	J1939RmCddUser		
Description	Enable AckIndication for this module. In case of CDD, the name is <apiServicePrefix>_AckIndication. In case of RTE, the operation AckIndication of the required port J1939Rm_AckIndication_{user} is called.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00061 :		
Name	J1939RmUserAckPGN		
Parent Container	J1939RmCddUser		
Description	PGN supported to be acknowledged to this module. The PGNs supported by different modules should usually be disjunctive.		
Multiplicity	0..*		
Type	EcucIntegerParamDef		
Range	0 .. 262143		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00025 :		
Name	J1939RmUserId		
Parent Container	J1939RmCddUser		
Description	Identifier used by a module using J1939Rm. This parameter is only required when the module uses transmission of requests or acknowledgements.		
Multiplicity	0..1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		

Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00027 :		
Name	J1939RmUserRequestIndication		
Parent Container	J1939RmCddUser		
Description	Enable RequestIndication for this module. In case of J1939Nm or J1939Dcm, the name is fixed. In case of CDD, the name is <apiServicePrefix>_RequestIndication. In case of RTE, J1939Rm will call the operation RequestIndication of the required port J1939Rm_RequestIndication_{user}.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00026 :		
Name	J1939RmUserRequestPGN		
Parent Container	J1939RmCddUser		
Description	PGN supported to be requested from this module. The PGNs supported by different modules should usually be disjunctive.		
Multiplicity	0..*		
Type	EcucIntegerParamDef		
Range	0 .. 262143		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00030 :		
Name	J1939RmUserSendAck		
Parent Container	J1939RmCddUser		
Description	Enable the SendAck API for this module. In case of RTE, the operation SendAck of the provided port J1939Rm_SendAck_{user} is called.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	

	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00029 :		
Name	J1939RmUserSendRequest		
Parent Container	J1939RmCddUser		
Description	Enable the SendRequest API for this module. In case of RTE, the operation SendRequest of the provided port J1939Rm_SendRequest_{user} is called.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00031 :		
Name	J1939RmUserTimeoutSupervision		
Parent Container	J1939RmCddUser		
Description	<p>Enable RequestTimeoutIndication and CancelRequestTimeout for this module.</p> <p>RequestTimeoutIndication: In case of CDD, the name is <apiServicePrefix>_RequestTimeoutIndication. In case of RTE, the operation RequestTimeoutIndication of the required port J1939Rm_RequestTimeoutIndication_{user} is called.</p> <p>CancelRequestTimeout: In case of RTE, the operation CancelRequestTimeout of the provided port J1939Rm_CancelRequestTimeout_{user} is called.</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00042 :		
Name	J1939RmUserCddRef		
Parent Container	J1939RmCddUser		
Description	Reference to the CDD module description.		
Multiplicity	1		
Type	Foreign reference to [ECUC-MODULE-CONFIGURATION-VALUES]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.16 J1939RmRteUser

SWS Item	ECUC_J1939Rm_00069 :		
Container Name	J1939RmRteUser		
Description	J1939Rm User representing an application software component (SW-C). SW-Cs may use all services provided by the J1939Rm via service ports.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00028 :		
Name	J1939RmUserAckIndication		
Parent Container	J1939RmRteUser		
Description	Enable AckIndication for this module. In case of CDD, the name is <apiServicePrefix>_AckIndication. In case of RTE, the operation AckIndication of the required port J1939Rm_AckIndication_{user} is called.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00061 :		
Name	J1939RmUserAckPGN		
Parent Container	J1939RmRteUser		
Description	PGN supported to be acknowledged to this module. The PGNs supported by different modules should usually be disjunctive.		
Multiplicity	0..*		
Type	EcucIntegerParamDef		
Range	0 .. 262143		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00025 :		
Name	J1939RmUserId		
Parent Container	J1939RmRteUser		
Description	Identifier used by a module using J1939Rm. This parameter is only required when the module uses transmission of requests or acknowledgements.		
Multiplicity	0..1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		

Range	0 .. 65535		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_J1939Rm_00027 :		
Name	J1939RmUserRequestIndication		
Parent Container	J1939RmRteUser		
Description	Enable RequestIndication for this module. In case of J1939Nm or J1939Dcm, the name is fixed. In case of CDD, the name is <apiServicePrefix>_RequestIndication. In case of RTE, J1939Rm will call the operation RequestIndication of the required port J1939Rm_RequestIndication_{user}.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00026 :		
Name	J1939RmUserRequestPGN		
Parent Container	J1939RmRteUser		
Description	PGN supported to be requested from this module. The PGNs supported by different modules should usually be disjunctive.		
Multiplicity	0..*		
Type	EcucIntegerParamDef		
Range	0 .. 262143		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00030 :		
Name	J1939RmUserSendAck		
Parent Container	J1939RmRteUser		
Description	Enable the SendAck API for this module. In case of RTE, the operation SendAck of the provided port J1939Rm_SendAck_{user} is called.		
Multiplicity	1		

Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00029 :		
Name	J1939RmUserSendRequest		
Parent Container	J1939RmRteUser		
Description	Enable the SendRequest API for this module. In case of RTE, the operation SendRequest of the provided port J1939Rm_SendRequest_{user} is called.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00031 :		
Name	J1939RmUserTimeoutSupervision		
Parent Container	J1939RmRteUser		
Description	<p>Enable RequestTimeoutIndication and CancelRequestTimeout for this module.</p> <p>RequestTimeoutIndication: In case of CDD, the name is <apiServicePrefix>_RequestTimeoutIndication. In case of RTE, the operation RequestTimeoutIndication of the required port J1939Rm_RequestTimeoutIndication_{user} is called.</p> <p>CancelRequestTimeout: In case of RTE, the operation CancelRequestTimeout of the provided port J1939Rm_CancelRequestTimeout_{user} is called.</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.1.17 J1939RmComUser

SWS Item	ECUC_J1939Rm_00067 :		
Container Name	J1939RmComUser		
Description	J1939Rm User representing AUTOSAR COM. Supports requests for COM I-PDUs.		

Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
J1939RmComIPdu	0..*	Contains the configuration of an I-PDU that is to be transmitted on request by COM.

10.1.18 J1939RmComIPdu

SWS Item	ECUC_J1939Rm_00032 :		
Container Name	J1939RmComIPdu		
Description	Contains the configuration of an I-PDU that is to be transmitted on request by COM.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

SWS Item	ECUC_J1939Rm_00081 :		
Name	J1939RmComIPduExtId1		
Parent Container	J1939RmComIPdu		
Description	First extended identifier byte of the COM I-PDU.		
Multiplicity	0..1		
Type	EcuIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00082 :		
Name	J1939RmComIPduExtId2		
Parent Container	J1939RmComIPdu		
Description	Second extended identifier byte of the COM I-PDU.		
Multiplicity	0..1		
Type	EcuIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant	true		

Multiplicity			
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00083 :		
Name	J1939RmComIPduExtId3		
Parent Container	J1939RmComIPdu		
Description	Third extended identifier byte of the COM I-PDU.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00033 :		
Name	J1939RmComIPduPGN		
Parent Container	J1939RmComIPdu		
Description	PGN of the COM I-PDU.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 262143		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_J1939Rm_00065 :		
Name	J1939RmComIPduRef		
Parent Container	J1939RmComIPdu		
Description	Reference to the Pdu object representing the I-PDU.		
Multiplicity	1		
Type	Reference to [Pdu]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

No Included Containers

10.2 Published Information

For details, refer to the chapter 10.3 “Published Information” in the SWS BSW General [4].