

Document Title	Specification of Persistency
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	858

Document Status	published
Part of AUTOSAR Standard	Adaptive Platform
Part of Standard Release	R20-11

Document Change History			
Date	Release	Changed by	Description
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Replaced POSIX based file access API and improved error handling and symmetry of other APIs • Full support for encryption and redundancy by hashes using Crypto API • Added information to application about safety related problems • Improved installation/update and redundancy
2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Introduced reset and restore of storages • Introduced storage statistics • Improved compliance with general AUTOSAR concepts • Improved naming and consistency of classes / methods / functions / constants • Changed Document Status from Final to published
2019-03-29	19-03	AUTOSAR Release Management	<ul style="list-style-type: none"> • Improved naming of classes / methods / functions • Reworked installation/update • Support for parallel execution in multiple threads • Cleaned up usage of ara::core concepts

2018-10-31	18-10	AUTOSAR Release Management	<ul style="list-style-type: none">• Introduction of ara::core types and switch to exceptionless API• Rework of redundancy approach• Support for resource limitation• Improvements and harmonization of KeyValueStorage and FileProxy API
2018-03-29	18-03	AUTOSAR Release Management	<ul style="list-style-type: none">• Installation / update of persistent data• Data types supported by KeyValueStorage API
2017-10-27	17-10	AUTOSAR Release Management	<ul style="list-style-type: none">• Introduction of AUTOSAR model• Security added• Redundancy added• Rework of FileProxy / Stream API
2017-03-31	17-03	AUTOSAR Release Management	<ul style="list-style-type: none">• Initial release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Table of Contents

1	Introduction and Functional Overview	9
2	Acronyms and Abbreviations	10
3	Related Documentation	11
3.1	Input Documents & Related Standards and Norms	11
3.2	Further Applicable Specifications	11
4	Constraints and Assumptions	12
4.1	Known Limitations	12
4.2	Constraints on Configuration	12
4.3	Direct Access to Storage Hardware	12
5	Dependencies to Other Functional Clusters	13
5.1	Protocol Layer Dependencies	13
6	Requirements Tracing	14
7	Functional Specification	23
7.1	The Architecture of Persistency	23
7.1.1	Persistency in the Manifest	23
7.1.2	Key-Value Storages in the Manifest	24
7.1.3	File Storages in the Manifest	25
7.2	Functional Cluster Lifecycle	26
7.2.1	Initialization and Shutdown of Persistency	26
7.3	Parallel Access to Persistent Data	27
7.4	Security Concepts	29
7.5	Redundancy Concepts	31
7.5.1	Redundancy Types	31
7.6	Installation and Update of Persistent Data	34
7.6.1	Installation of Persistent Data	36
7.6.1.1	Installation of Key-Value Storage	36
7.6.1.2	Installation of File Storage	37
7.6.2	Update of Persistent Data	38
7.6.2.1	Update of Key-Value Storage	39
7.6.2.2	Update of File Storage	40
7.6.3	Finalization of Persistent Data after Successful Update	41
7.6.4	Roll-Back of Persistent Data after Failed Update	41
7.6.5	Removal of Persistent Data	41
7.7	Resource Management Concepts	42
7.8	Supported Data Types in Key-Value Storages	43
7.9	Access to Additional Information about Files	44
8	API Specification	45
8.1	ara::core Types	45

8.2	Key-Value Storage	46
8.2.1	OpenKeyValueStorage	46
8.2.2	RecoverKeyValueStorage	47
8.2.3	ResetKeyValueStorage	48
8.2.4	GetCurrentKeyValueStorageSize	48
8.2.5	KeyValueStorage Class	49
8.2.5.1	KeyValueStorage::KeyValueStorage	50
8.2.5.2	KeyValueStorage::operator=	50
8.2.5.3	KeyValueStorage::~~KeyValueStorage	51
8.2.5.4	KeyValueStorage::GetAllKeys	51
8.2.5.5	KeyValueStorage::KeyExists	52
8.2.5.6	KeyValueStorage::GetValue	53
8.2.5.7	KeyValueStorage::SetValue	54
8.2.5.8	KeyValueStorage::RemoveKey	54
8.2.5.9	KeyValueStorage::RecoverKey	55
8.2.5.10	KeyValueStorage::ResetKey	56
8.2.5.11	KeyValueStorage::RemoveAllKeys	57
8.2.5.12	KeyValueStorage::SyncToStorage	58
8.2.5.13	KeyValueStorage::DiscardPendingChanges	58
8.3	File Storage	60
8.3.1	OpenFileStorage	60
8.3.2	RecoverAllFiles	61
8.3.3	ResetAllFiles	62
8.3.4	GetCurrentFileStorageSize	63
8.3.5	OpenMode	63
8.3.6	operator for FileStorage::OpenMode	64
8.3.7	operator = for FileStorage::OpenMode	64
8.3.8	FileCreationState	65
8.3.9	FileModificationState	65
8.3.10	FileInfo	66
8.3.10.1	FileInfo.creationTime	66
8.3.10.2	FileInfo.modificationTime	67
8.3.10.3	FileInfo.accessTime	67
8.3.10.4	FileInfo.fileCreationState	67
8.3.10.5	FileInfo.fileModificationState	68
8.3.11	FileStorage Class	68
8.3.11.1	FileStorage::FileStorage	68
8.3.11.2	FileStorage::operator=	69
8.3.11.3	FileStorage::~~FileStorage	70
8.3.11.4	FileStorage::GetAllFileNames	70
8.3.11.5	FileStorage::DeleteFile	71
8.3.11.6	FileStorage::FileExists	71
8.3.11.7	FileStorage::RecoverFile	72
8.3.11.8	FileStorage::ResetFile	73
8.3.11.9	FileStorage::GetCurrentFileSize	74
8.3.11.10	FileStorage::GetFileInfo	74

8.3.11.11	FileStorage::OpenFileReadWrite	75
8.3.11.12	FileStorage::OpenFileReadOnly	78
8.3.11.13	FileStorage::OpenFileWriteOnly	81
8.3.12	Origin	84
8.3.13	ReadAccessor Class	84
8.3.13.1	ReadAccessor::ReadAccessor	85
8.3.13.2	ReadAccessor::operator=	85
8.3.13.3	ReadAccessor::~ReadAccessor	86
8.3.13.4	ReadAccessor::PeekChar	86
8.3.13.5	ReadAccessor::PeekByte	87
8.3.13.6	ReadAccessor::GetChar	88
8.3.13.7	ReadAccessor::GetByte	88
8.3.13.8	ReadAccessor::ReadText	89
8.3.13.9	ReadAccessor::ReadBinary	90
8.3.13.10	ReadAccessor::ReadLine	92
8.3.13.11	ReadAccessor::GetSize	93
8.3.13.12	ReadAccessor::GetPosition	93
8.3.13.13	ReadAccessor::SetPosition	93
8.3.13.14	ReadAccessor::MovePosition	94
8.3.13.15	ReadAccessor::IsEof	95
8.3.14	ReadWriteAccessor Class	95
8.3.14.1	ReadWriteAccessor::SyncToFile	96
8.3.14.2	ReadWriteAccessor::SetFileSize	96
8.3.14.3	ReadWriteAccessor::WriteText	97
8.3.14.4	ReadWriteAccessor::WriteBinary	98
8.3.14.5	ReadWriteAccessor::operator<<	99
8.4	Update and Removal of Persistent Data	100
8.4.1	RegisterApplicationDataUpdateCallback	100
8.4.2	UpdatePersistency	100
8.4.3	ResetPersistency	101
8.5	Redundancy Handling	103
8.5.1	RecoveryReportKind	103
8.5.2	RegisterRecoveryReportCallback	104
8.6	Handle Classes	106
8.6.1	SharedHandle Class	106
8.6.1.1	SharedHandle::SharedHandle	106
8.6.1.2	SharedHandle::operator=	107
8.6.1.3	SharedHandle::operator bool	108
8.6.1.4	SharedHandle::Operator->	108
8.6.1.5	SharedHandle::Operator*	109
8.6.2	UniqueHandle Class	110
8.6.2.1	UniqueHandle::UniqueHandle	110
8.6.2.2	UniqueHandle::operator=	111
8.6.2.3	UniqueHandle::operator bool	112
8.6.2.4	UniqueHandle::Operator->	112
8.6.2.5	UniqueHandle::Operator*	113

8.7	Errors	115
8.7.1	PerErrc	115
8.7.2	GetPerDomain	116
8.7.3	MakeErrorCode	116
8.7.4	PerException Class	117
8.7.4.1	PerException::PerException	117
8.7.5	PerErrorDomain Class	117
8.7.5.1	PerErrorDomain::Errc	118
8.7.5.2	PerErrorDomain::Exception	118
8.7.5.3	PerErrorDomain::PerErrorDomain	119
8.7.5.4	PerErrorDomain::Name	119
8.7.5.5	PerErrorDomain::Message	119
8.7.5.6	PerErrorDomain::ThrowAsException	120
9	Service Interfaces	121
A	Mentioned Class Tables	122
B	Platform Extension API (normative)	141
C	Interfaces to Other Functional Clusters (informative)	142
D	History of Constraints and Specification Items	143
D.1	Constraint and Specification Item History of this Document According to AUTOSAR Release 17-03	143
D.1.1	Added Traceables in 17-03	143
D.1.2	Changed Traceables in 17-03	143
D.1.3	Deleted Traceables in 17-03	143
D.2	Constraint and Specification Item History of this Document According to AUTOSAR Release 17-10	144
D.2.1	Added Traceables in 17-10	144
D.2.2	Changed Traceables in 17-10	144
D.2.3	Deleted Traceables in 17-10	144
D.3	Constraint and Specification Item History of this Document According to AUTOSAR Release 18-03	145
D.3.1	Added Traceables in 18-03	145
D.3.2	Changed Traceables in 18-03	145
D.3.3	Deleted Traceables in 18-03	145
D.4	Constraint and Specification Item History of this Document According to AUTOSAR Release 18-10	146
D.4.1	Added Traceables in 18-10	146
D.4.2	Changed Traceables in 18-10	146
D.4.3	Deleted Traceables in 18-10	146
D.5	Constraint and Specification Item History of this Document According to AUTOSAR Release 19-03	147
D.5.1	Added Traceables in 19-03	147
D.5.2	Changed Traceables in 19-03	147

D.5.3	Deleted Traceables in 19-03	147
D.6	Constraint and Specification Item History of this Document According to AUTOSAR Release R19-11	148
D.6.1	Added Traceables in R19-11	148
D.6.2	Changed Traceables in R19-11	148
D.6.3	Deleted Traceables in R19-11	148
D.7	Constraint and Specification Item History of this Document According to AUTOSAR Release R20-11	148
D.7.1	Added Traceables in R20-11	148
D.7.2	Changed Traceables in R20-11	149
D.7.3	Deleted Traceables in R20-11	149
E	Not Applicable Requirements	150

1 Introduction and Functional Overview

This document is the software specification of the [Persistency](#) functional cluster within the Adaptive Platform.

[Persistency](#) offers mechanisms to Adaptive Applications to store information in the non-volatile memory of a machine. The data is available over boot and ignition cycles.

The [Persistency](#) functional cluster will typically be implemented as a library that runs within a [Process](#) of an Adaptive Application, with the rights of that [Process](#).

2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations relevant to the [Persistency](#) that are not included in the [1, AUTOSAR glossary].

Abbreviation / Acronym	Description
KVS	Key-Value Storage

Terms	Description
File Storage	A set of files that are stored persistently.
Key-Value Pair	A key with an associated value, to be stored in a Key-Value Storage together with the type of the value.
Key-Value Storage	A set of key-value pairs that are stored persistently.
Persistency	The functional cluster described in this document, which handles persistent data of AUTOSAR Adaptive Applications and other functional clusters in File Storages and Key-Value Storages .
Persistent Data	Data that is stored in the persistent memory that can be accessed by one Process . Persistency supports different mechanisms to access data in persistent memory. Concurrent access to the data by several Processes is not supported as the data is owned exclusively by one Process .
Integrity	Persistency distinguishes data integrity, which is ensured by the configured redundancy , from structural integrity, i.e. the readability of the structure of a Key-Value Storage or File Storage .
Redundancy	Redundancy is used by Persistency to ensure the integrity of stored data. It can be configured to use replication of stored data, CRCs, or Hashes. Typically, only replication will allow to repair corrupted data.

3 Related Documentation

3.1 Input Documents & Related Standards and Norms

- [1] Glossary
AUTOSAR_TR_Glossary
- [2] Specification of the Adaptive Core
AUTOSAR_SWS_AdaptiveCore
- [3] Specification of Manifest
AUTOSAR_TPS_ManifestSpecification
- [4] Requirements on Persistency
AUTOSAR_RS_Persistency
- [5] General Requirements specific to Adaptive Platform
AUTOSAR_RS_General
- [6] Specification of Update and Configuration Management
AUTOSAR_SWS_UpdateAndConfigManagement
- [7] Explanation of Adaptive Platform Design
AUTOSAR_EXP_PlatformDesign
- [8] Specification of Cryptography for Adaptive Platform
AUTOSAR_SWS_Cryptography
- [9] Specification of Platform Types for Adaptive Platform
AUTOSAR_SWS_AdaptivePlatformTypes

3.2 Further Applicable Specifications

AUTOSAR provides a core specification [2] which is also applicable for the [Persistency](#). The chapter “General requirements for all FunctionalClusters” of this specification shall be considered as an additional and required specification for implementation of the [Persistency](#).

4 Constraints and Assumptions

4.1 Known Limitations

- Although a [Key-Value Storage](#) and [File Storage](#) can be configured as write-only, the current API always allows read access. Read access is even possible when a file has been opened with `ara::per::FileStorage::OpenFileWriteOnly`.

4.2 Constraints on Configuration

There are several constraints on the [Persistency](#) configuration that need to be observed by the tooling which creates/processes this part of the `Execution Manifest`. These constraints are defined in [3].

4.3 Direct Access to Storage Hardware

Modern embedded controllers use flash memory and similar hardware to store data. These devices have the intrinsic problem that the signal that can be read from each memory cell is reduced over time, mainly influenced by the number of write accesses. In the end, the cell will produce arbitrary values on each read access.

Unfortunately, the distribution of write accesses in typical systems is very uneven. Some parameters might be updated a few times a second, while some code may stay untouched for the whole life time of the ECU. To avoid early read errors, wear leveling should be deployed, such that frequent updates of single data elements are distributed over the whole memory area.

On the other hand, most operating systems include a file system or at least a flash driver that takes care of wear leveling, such that a typical implementation of the [Persistency](#) will not have to care about the wear leveling. This use case is therefore not described in any detail in this specification.

5 Dependencies to Other Functional Clusters

5.1 Protocol Layer Dependencies

The `Persistency` is (at least partially) compiled as part of an `Executable` of an `Adaptive Application`, and therefore also executed as part of a `Process`, which creates an implicit dependency on the `Execution Management`.

For the implementation of redundancy and security purposes, the `Persistency` accesses services of the `Adaptive Crypto Interface`.

For the installation, update, and deletion of persisted data, the `Persistency` interacts with the `Update and Configuration Management (UCM)`.

6 Requirements Tracing

The following table references the requirements specified in the AUTOSAR RS Persistency [4] and the AUTOSAR RS General [5], and links to the fulfillments of these. Please note that if column “Satisfied by” is empty for a specific requirement, this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[RS_AP_00111]	The AUTOSAR Adaptive Platform shall support source code portability for AUTOSAR Adaptive applications.	[SWS_PER_NA]
[RS_AP_00114]	C++ interface shall be compatible with C++14.	[SWS_PER_NA]
[RS_AP_00115]	Namespaces.	[SWS_PER_00002]
[RS_AP_00116]	Header file name.	[SWS_PER_NA]
[RS_AP_00119]	Return values / application errors.	[SWS_PER_00042] [SWS_PER_00043] [SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00052] [SWS_PER_00107] [SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119] [SWS_PER_00122] [SWS_PER_00125] [SWS_PER_00144] [SWS_PER_00162] [SWS_PER_00163] [SWS_PER_00164] [SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00167] [SWS_PER_00168] [SWS_PER_00313] [SWS_PER_00314] [SWS_PER_00315] [SWS_PER_00323] [SWS_PER_00325] [SWS_PER_00327] [SWS_PER_00329] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00351] [SWS_PER_00352] [SWS_PER_00357] [SWS_PER_00358] [SWS_PER_00360] [SWS_PER_00361] [SWS_PER_00363] [SWS_PER_00364] [SWS_PER_00365] [SWS_PER_00368] [SWS_PER_00370] [SWS_PER_00372] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00398] [SWS_PER_00399] [SWS_PER_00400] [SWS_PER_00401] [SWS_PER_00402] [SWS_PER_00403] [SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00414] [SWS_PER_00416] [SWS_PER_00418] [SWS_PER_00419] [SWS_PER_00420] [SWS_PER_00421] [SWS_PER_00422] [SWS_PER_00423]

Requirement	Description	Satisfied by
		[SWS_PER_00424] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00434] [SWS_PER_00438]
[RS_AP_00120]	Method and Function names.	[SWS_PER_00042] [SWS_PER_00043] [SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00050] [SWS_PER_00052] [SWS_PER_00107] [SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119] [SWS_PER_00122] [SWS_PER_00125] [SWS_PER_00144] [SWS_PER_00162] [SWS_PER_00163] [SWS_PER_00164] [SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00167] [SWS_PER_00168] [SWS_PER_00313] [SWS_PER_00314] [SWS_PER_00315] [SWS_PER_00322] [SWS_PER_00323] [SWS_PER_00324] [SWS_PER_00325] [SWS_PER_00326] [SWS_PER_00327] [SWS_PER_00328] [SWS_PER_00329] [SWS_PER_00330] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00350] [SWS_PER_00351] [SWS_PER_00352] [SWS_PER_00355] [SWS_PER_00356] [SWS_PER_00357] [SWS_PER_00358] [SWS_PER_00365] [SWS_PER_00367] [SWS_PER_00368] [SWS_PER_00369] [SWS_PER_00370] [SWS_PER_00371] [SWS_PER_00372] [SWS_PER_00373] [SWS_PER_00374] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00413] [SWS_PER_00414] [SWS_PER_00415] [SWS_PER_00416] [SWS_PER_00417] [SWS_PER_00418] [SWS_PER_00419] [SWS_PER_00420] [SWS_PER_00421] [SWS_PER_00422] [SWS_PER_00423] [SWS_PER_00424] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00433] [SWS_PER_00434] [SWS_PER_00438]

Requirement	Description	Satisfied by
[RS_AP_00121]	Parameter names.	[SWS_PER_00043] [SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00052] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119] [SWS_PER_00125] [SWS_PER_00144] [SWS_PER_00163] [SWS_PER_00164] [SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00315] [SWS_PER_00322] [SWS_PER_00323] [SWS_PER_00326] [SWS_PER_00327] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00350] [SWS_PER_00351] [SWS_PER_00355] [SWS_PER_00356] [SWS_PER_00367] [SWS_PER_00368] [SWS_PER_00369] [SWS_PER_00370] [SWS_PER_00371] [SWS_PER_00372] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00413] [SWS_PER_00414] [SWS_PER_00420] [SWS_PER_00421] [SWS_PER_00422] [SWS_PER_00423] [SWS_PER_00424] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00433] [SWS_PER_00434] [SWS_PER_00438]
[RS_AP_00122]	Type names.	[SWS_PER_00146] [SWS_PER_00147] [SWS_PER_00311] [SWS_PER_00312] [SWS_PER_00339] [SWS_PER_00340] [SWS_PER_00342] [SWS_PER_00343] [SWS_PER_00354] [SWS_PER_00359] [SWS_PER_00362] [SWS_PER_00411] [SWS_PER_00412] [SWS_PER_00432] [SWS_PER_00435] [SWS_PER_00436] [SWS_PER_00437]
[RS_AP_00124]	Variable names.	[SWS_PER_NA]
[RS_AP_00127]	Usage of ara::core types.	[SWS_PER_00042] [SWS_PER_00043] [SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00052] [SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119] [SWS_PER_00122] [SWS_PER_00125] [SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00311] [SWS_PER_00312] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334]

Requirement	Description	Satisfied by
		[SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00354] [SWS_PER_00356] [SWS_PER_00357] [SWS_PER_00358] [SWS_PER_00365] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00420] [SWS_PER_00421] [SWS_PER_00422] [SWS_PER_00423] [SWS_PER_00424] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00433] [SWS_PER_00438]
[RS_AP_00128]	Error reporting.	[SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00052] [SWS_PER_00111] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00122] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00357] [SWS_PER_00358] [SWS_PER_00365] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00424] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00438]
[RS_AP_00129]	Public types defined by functional clusters shall be designed to allow implementation without dynamic memory allocation.	[SWS_PER_00042] [SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00050] [SWS_PER_00052] [SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119] [SWS_PER_00122] [SWS_PER_00322] [SWS_PER_00326] [SWS_PER_00330] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337]

Requirement	Description	Satisfied by
		[SWS_PER_00338] [SWS_PER_00360] [SWS_PER_00361] [SWS_PER_00363] [SWS_PER_00364] [SWS_PER_00365] [SWS_PER_00367] [SWS_PER_00369] [SWS_PER_00371] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00398] [SWS_PER_00399] [SWS_PER_00400] [SWS_PER_00401] [SWS_PER_00402] [SWS_PER_00403] [SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00413] [SWS_PER_00417] [SWS_PER_00424] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00438]
[RS_AP_00130]	AUTOSAR Adaptive Platform shall represent a rich and modern programming environment.	[SWS_PER_NA]
[RS_AP_00132]	noexcept behavior of API functions	[SWS_PER_00042] [SWS_PER_00043] [SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00050] [SWS_PER_00052] [SWS_PER_00107] [SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119] [SWS_PER_00122] [SWS_PER_00125] [SWS_PER_00162] [SWS_PER_00163] [SWS_PER_00164] [SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00167] [SWS_PER_00168] [SWS_PER_00313] [SWS_PER_00314] [SWS_PER_00315] [SWS_PER_00322] [SWS_PER_00323] [SWS_PER_00326] [SWS_PER_00327] [SWS_PER_00330] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00351] [SWS_PER_00352] [SWS_PER_00355] [SWS_PER_00356] [SWS_PER_00357] [SWS_PER_00358] [SWS_PER_00360]

Requirement	Description	Satisfied by
		[SWS_PER_00361] [SWS_PER_00363] [SWS_PER_00364] [SWS_PER_00365] [SWS_PER_00367] [SWS_PER_00368] [SWS_PER_00369] [SWS_PER_00370] [SWS_PER_00371] [SWS_PER_00372] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00398] [SWS_PER_00399] [SWS_PER_00400] [SWS_PER_00401] [SWS_PER_00402] [SWS_PER_00403] [SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00413] [SWS_PER_00414] [SWS_PER_00417] [SWS_PER_00418] [SWS_PER_00419] [SWS_PER_00420] [SWS_PER_00421] [SWS_PER_00422] [SWS_PER_00423] [SWS_PER_00424] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00433] [SWS_PER_00438]
[RS_AP_00134]	noexcept behavior of class destructors	[SWS_PER_00050] [SWS_PER_00330] [SWS_PER_00417]
[RS_PER_00001]	Persistency shall support storage of persistent data	[SWS_PER_00107] [SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119] [SWS_PER_00122] [SWS_PER_00125] [SWS_PER_00144] [SWS_PER_00162] [SWS_PER_00163] [SWS_PER_00164] [SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00167] [SWS_PER_00168] [SWS_PER_00302] [SWS_PER_00303] [SWS_PER_00304] [SWS_PER_00309] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00353] [SWS_PER_00360] [SWS_PER_00361] [SWS_PER_00363] [SWS_PER_00364] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00398] [SWS_PER_00399] [SWS_PER_00400] [SWS_PER_00401] [SWS_PER_00402] [SWS_PER_00403] [SWS_PER_00418] [SWS_PER_00419] [SWS_PER_00420] [SWS_PER_00421] [SWS_PER_00422] [SWS_PER_00423] [SWS_PER_00425] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00434]

Requirement	Description	Satisfied by
[RS_PER_00002]	Persistency shall support to retrieve data that has been persistently stored on a platform instance	[SWS_PER_00049] [SWS_PER_00050] [SWS_PER_00322] [SWS_PER_00323] [SWS_PER_00324] [SWS_PER_00325] [SWS_PER_00339] [SWS_PER_00359] [SWS_PER_00360] [SWS_PER_00361] [SWS_PER_00362] [SWS_PER_00363] [SWS_PER_00364] [SWS_PER_00365] [SWS_PER_00371] [SWS_PER_00372] [SWS_PER_00373] [SWS_PER_00374] [SWS_PER_00398] [SWS_PER_00399] [SWS_PER_00400] [SWS_PER_00401] [SWS_PER_00402] [SWS_PER_00403]
[RS_PER_00003]	Persistency shall support identification of data using a unique identifier	[SWS_PER_00042] [SWS_PER_00043] [SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00052] [SWS_PER_00146] [SWS_PER_00147] [SWS_PER_00331] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00360] [SWS_PER_00361] [SWS_PER_00363] [SWS_PER_00364] [SWS_PER_00398] [SWS_PER_00399] [SWS_PER_00400] [SWS_PER_00401] [SWS_PER_00402] [SWS_PER_00403] [SWS_PER_00426] [SWS_PER_00427]
[RS_PER_00004]	Persistency shall support access to file-like structures	[SWS_PER_00107] [SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119] [SWS_PER_00122] [SWS_PER_00125] [SWS_PER_00144] [SWS_PER_00162] [SWS_PER_00163] [SWS_PER_00164] [SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00167] [SWS_PER_00168] [SWS_PER_00326] [SWS_PER_00327] [SWS_PER_00328] [SWS_PER_00329] [SWS_PER_00330] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00340] [SWS_PER_00342] [SWS_PER_00343] [SWS_PER_00367] [SWS_PER_00368] [SWS_PER_00369] [SWS_PER_00370] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00413] [SWS_PER_00414] [SWS_PER_00415] [SWS_PER_00416] [SWS_PER_00417] [SWS_PER_00418] [SWS_PER_00419] [SWS_PER_00420] [SWS_PER_00421] [SWS_PER_00422]

Requirement	Description	Satisfied by
		[SWS_PER_00423] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00434] [SWS_PER_00435] [SWS_PER_00436] [SWS_PER_00437] [SWS_PER_00438] [SWS_PER_00440] [SWS_PER_00441] [SWS_PER_00442] [SWS_PER_00443] [SWS_PER_00444] [SWS_PER_00445]
[RS_PER_00005]	Persistency shall support encryption/decryption of persistent data	[SWS_PER_00210] [SWS_PER_00211] [SWS_PER_00449] [SWS_PER_00450] [SWS_PER_00451]
[RS_PER_00008]	Persistency shall support detection of data corruption in persistent memory	[SWS_PER_00221] [SWS_PER_00317] [SWS_PER_00318] [SWS_PER_00319] [SWS_PER_00432] [SWS_PER_00433] [SWS_PER_00439] [SWS_PER_00447] [SWS_PER_00448]
[RS_PER_00009]	Persistency shall support data recovery mechanisms if persistent data was corrupted	[SWS_PER_00222] [SWS_PER_00317] [SWS_PER_00318] [SWS_PER_00319] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00358] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00439] [SWS_PER_00447] [SWS_PER_00448]
[RS_PER_00010]	The layout of persistent data shall be configurable	[SWS_PER_00046] [SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00052] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00210] [SWS_PER_00211] [SWS_PER_00251] [SWS_PER_00252] [SWS_PER_00253] [SWS_PER_00254] [SWS_PER_00265] [SWS_PER_00266] [SWS_PER_00267] [SWS_PER_00275] [SWS_PER_00277] [SWS_PER_00281] [SWS_PER_00283] [SWS_PER_00304] [SWS_PER_00317] [SWS_PER_00318] [SWS_PER_00319] [SWS_PER_00320] [SWS_PER_00321] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00378] [SWS_PER_00379] [SWS_PER_00380] [SWS_PER_00382] [SWS_PER_00383] [SWS_PER_00384] [SWS_PER_00385] [SWS_PER_00386] [SWS_PER_00387] [SWS_PER_00388] [SWS_PER_00389] [SWS_PER_00390] [SWS_PER_00391]

Requirement	Description	Satisfied by
		[SWS_PER_00392] [SWS_PER_00393] [SWS_PER_00394] [SWS_PER_00395] [SWS_PER_00426] [SWS_PER_00427] [SWS_PER_00429] [SWS_PER_00430] [SWS_PER_00431] [SWS_PER_00439] [SWS_PER_00447] [SWS_PER_00448] [SWS_PER_00449] [SWS_PER_00450] [SWS_PER_00451] [SWS_PER_CONSTR_00003] [SWS_PER_CONSTR_00004]
[RS_PER_00011]	Persistency shall be able to ensure and limit the amount of storage used by persisted data	[SWS_PER_00320] [SWS_PER_00321]
[RS_PER_00012]	Persistency shall support installation of persistent data	[SWS_PER_00251] [SWS_PER_00252] [SWS_PER_00253] [SWS_PER_00254] [SWS_PER_00265] [SWS_PER_00266] [SWS_PER_00267] [SWS_PER_00379] [SWS_PER_00380] [SWS_PER_00382] [SWS_PER_00383] [SWS_PER_00384] [SWS_PER_00385] [SWS_PER_CONSTR_00003] [SWS_PER_CONSTR_00004]
[RS_PER_00013]	Persistency shall support update of persistent data	[SWS_PER_00251] [SWS_PER_00275] [SWS_PER_00277] [SWS_PER_00281] [SWS_PER_00283] [SWS_PER_00356] [SWS_PER_00357] [SWS_PER_00378] [SWS_PER_00379] [SWS_PER_00380] [SWS_PER_00386] [SWS_PER_00387] [SWS_PER_00388] [SWS_PER_00389] [SWS_PER_00390] [SWS_PER_00391] [SWS_PER_00392] [SWS_PER_00393] [SWS_PER_00394] [SWS_PER_00395] [SWS_PER_00446]
[RS_PER_00014]	Persistency shall support roll-back of persistent data	[SWS_PER_00378] [SWS_PER_00396]
[RS_PER_00015]	Persistency shall support removal of persistent data	[SWS_PER_00358] [SWS_PER_00397]
[RS_PER_00017]	Persistency shall be able to report the amount of currently used storage	[SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00424]
[RS_PER_00018]	Persistency shall support central initialization and shutdown	[SWS_PER_00408] [SWS_PER_00409] [SWS_PER_00410]

7 Functional Specification

7.1 The Architecture of Persistency

The functional cluster `Persistency` offers two different mechanisms to access persistent memory: `Key-Value Storages` offer access to a set of keys with associated values (similar to a database), while `File Storages` offer access to a set of files (similar to a directory of a file system).

The typical usage of the `Persistency` within an Adaptive Application is depicted in [Figure 7.1](#). As shown there, an Adaptive Application can use a combination of multiple `Key-Value Storages` and multiple `File Storages`.

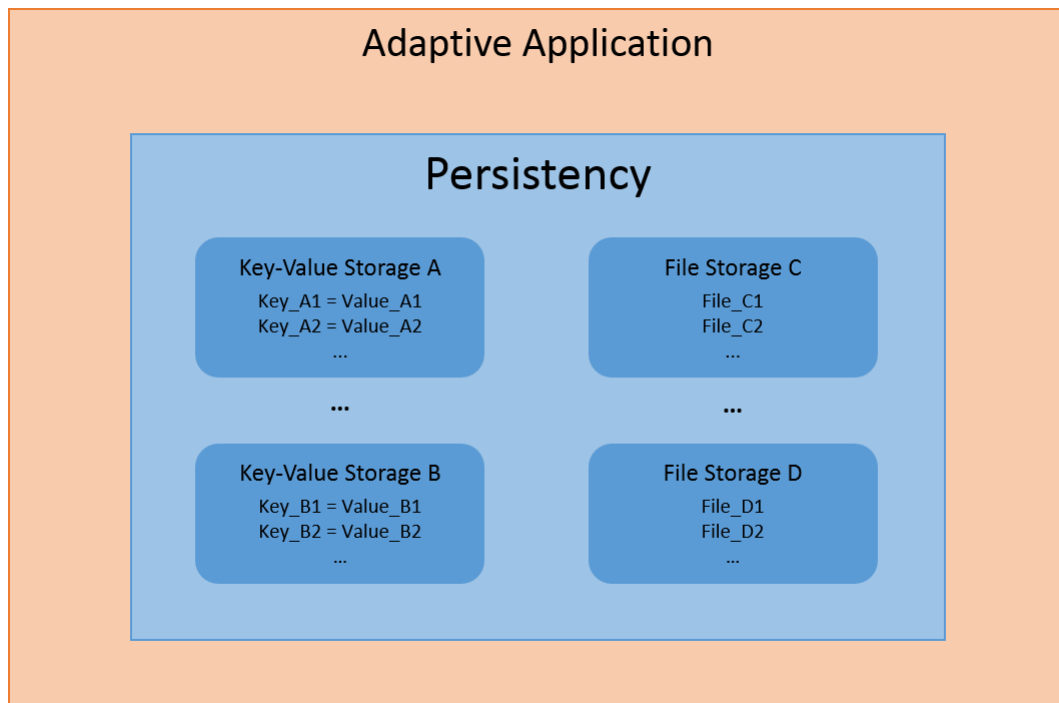


Figure 7.1: Typical usage of `Persistency` within an Adaptive Application

7.1.1 Persistency in the Manifest

The `Persistency` usage of an Adaptive Application is modeled in the Execution Manifest (furtheron simply referred to as the “manifest”) as part of the `AdaptiveApplicationSwComponentTypes` of an Executable. The model has two principal parts: The application design information, aggregated by the `PersistencyKeyValueStorageInterface` and the `PersistencyFileStorageInterface`, and the deployment information, aggregated by the `PersistencyKeyValueStorage` and the `PersistencyFileStorage`.

The API specification holds the classes `ara::per::KeyValueStorage` and `ara::per::FileStorage` for access to a `Key-Value Storage` or a `File Storage`, respectively. The global functions of these classes receive the identifier (the fully qualified `shortName` path) of a `PortPrototype` typed by a `PersistencyInterface` as an `ara::core::InstanceSpecifier` input parameter (see 8.2.1 and 8.3.1). Depending on the nature of the `PortPrototype`, the `Key-Value Storage` or `File Storage` will be accessible as:

Read Only if the `PortPrototype` is instantiated as `RPortPrototype`, or

Read/Write if the `PortPrototype` is instantiated as `PRPortPrototype`, or

Write Only if the `PortPrototype` is instantiated as `PPortPrototype`.

The manifest contains separate deployment data for each `Process` that references the `Executable`. The `Process` is bound to the deployment data by specialization of the class `PersistencyPortPrototypeToDeploymentMapping`, which refers to a `PortPrototype` typed by a `PersistencyInterface`, a `PersistencyDeployment`, and the `Process`.

Usage of base classes in the manifest

For simplification reasons, the information that applies to both the `Key-Value Storages` and the `File Storages` is collected in base classes in the manifest, namely in `PersistencyInterface` for `PersistencyKeyValueStorageInterface` and `PersistencyFileStorageInterface`, and in `PersistencyDeployment` for `PersistencyKeyValueStorage` and `PersistencyFileStorage`.

Likewise, the common information about keys and files is collected in `PersistencyInterfaceElement` for `PersistencyDataElement` and `PersistencyFileElement`, and in `PersistencyDeploymentElement` for `PersistencyKeyValuePair` and `PersistencyFile`.

And the link between application design and deployment information, represented by `PersistencyPortPrototypeToDeploymentMapping`, is specialized as `PersistencyPortPrototypeToKeyValueStorageMapping` and `PersistencyPortPrototypeToFileStorageMapping`.

7.1.2 Key-Value Storages in the Manifest

Every `Key-Value Storage` is represented by a `PortPrototype` typed by a `PersistencyKeyValueStorageInterface` in the application design for the respective `AdaptiveApplicationSwComponentType`, and by a `PersistencyKeyValueStorage` containing deployment information. Every `Key-Value Storage` can hold multiple `Key-Value Pairs`. `Key-Value Pairs` can be added and removed at run-time by the `Adaptive Application` using the `Persistency API` (see 8.2.5.7 and 8.2.5.8).

A [Key-Value Storage](#) with predefined [Key-Value Pairs](#) can be deployed with default data during installation or update of an [Adaptive Application](#). This operation is (indirectly) triggered by the [UCM](#) module (see [6]) during installation or update using the deployment information and data provided by the [software package](#) of the [Adaptive Application](#). See [section 7.6](#).

The link between application design and deployment information of a [Key-Value Storage](#) is represented by [PersistencyPortPrototypeToKeyValueStorageMapping](#), which refers to a [PortPrototype](#) typed by a [PersistencyKeyValueStorageInterface](#), the corresponding [PersistencyKeyValueStorage](#), and a [Process](#).

7.1.3 File Storages in the Manifest

Every [File Storage](#) is represented by a [PortPrototype](#) typed by a [PersistencyFileStorageInterface](#) in the application design for the respective [AdaptiveApplicationSwComponentType](#), and by a [PersistencyFileStorage](#) containing deployment information. Every [File Storage](#) can hold multiple files as described in [3]. Similar to the [Key-Value Pairs](#) mentioned above, files can be created and deleted at run-time by the [Adaptive Application](#) using the [Persistency](#) API (see [8.3.11.11](#), [8.3.11.13](#), and [8.3.11.5](#)).

A [File Storage](#) with predefined files with initial content can be deployed during installation or update. This operation is also (indirectly) triggered by the [UCM](#) module. All needed deployment information and files come with the [software package](#) of the [Adaptive Application](#). See [section 7.6](#).

The link between application design and deployment information of a [File Storage](#) is represented by [PersistencyPortPrototypeToFileStorageMapping](#), which refers to a [PortPrototype](#) typed by a [PersistencyFileStorageInterface](#), the corresponding [PersistencyFileStorage](#), and a [Process](#).

7.2 Functional Cluster Lifecycle

7.2.1 Initialization and Shutdown of Persistency

Using `ara::core::Initialize` and `ara::core::Deinitialize`, the application can start and shut down all functional clusters with direct ARA interfaces (i.e. the Adaptive Platform Foundation).

[SWS_PER_00408] [When `ara::core::Initialize` is called, the `Persistency` shall read in the manifest information and prepare the access structures to all `Key-Value Storages` and `File Storages` that are defined in the manifest.] (*RS_PER_00018*)

[SWS_PER_00409] [When `ara::core::Deinitialize` is called, the `Persistency` shall implicitly ensure that all open files of all `File Storages` are persisted as though `ara::per::ReadWriteAccessor::SyncToFile` was called and closed as though the `ara::per::UniqueHandles` were destructed, and that not persisted values in all `Key-Value Storages` are dropped as though `ara::per::KeyValueStorage::DiscardPendingChanges` was called. Afterwards, all access structures shall be freed.] (*RS_PER_00018*)

The application is expected not to call any API of `Persistency` before `ara::core::Initialize` or after `ara::core::Deinitialize`, but `Persistency` needs to protect itself against such eventualities.

[SWS_PER_00410]{DRAFT} [All functions of `Persistency` and all methods of its classes shall return the error `kNotInitialized` when they are called after static initialization but before `ara::core::Initialize` was called or after `ara::core::Deinitialize` was called.] (*RS_PER_00018*)

7.3 Parallel Access to Persistent Data

According to [7], the persistent data is local to one `Process`. Therefore, `Persistency` will never share `persistent data` between two (or more) `Processes`, even of the same `Executable`. The background of this decision is that `Persistency` should not provide an additional communication path for applications besides the mechanisms provided by the functional cluster Communication Management (e.g. using `ara::com`).

[SWS_PER_00309] [`Persistent data` shall always be local to one `Process`.]
(*RS_PER_00001*)

If `persistent data` needs to be accessed by multiple `Processes` (of the same or different applications), it is the duty of the application designer to provide `Service Interfaces` for communication.

`Persistency` is, on the other hand, prepared to handle concurrent access from multiple threads of the same application, running in the context of the same `Process`. To create shared access to a `Key-Value Storage` or `File Storage`, either the `ara::per::SharedHandle` returned by `ara::per::OpenKeyValueStorage` and `ara::per::OpenFileStorage` can be passed on (i.e. copied) to another thread, or `ara::per::OpenKeyValueStorage` and `ara::per::OpenFileStorage` can be called in independent threads for the same `Key-Value Storage` or `File Storage`, respectively. All operations of the `Key-Value Storage` and `File Storage` support concurrent access from multiple threads, though operations like `ara::per::RecoverKeyValueStorage` and `ara::per::ResetKeyValueStorage` or `ara::per::RecoverAllFiles` and `ara::per::ResetAllFiles` will only succeed when the corresponding `Key-Value Storage` or `File Storage` is not opened.

Access to single keys of a `Key-Value Storage` is possible from multiple threads at the same time, because the operation of `ara::per::KeyValueStorage::GetValue` and `ara::per::KeyValueStorage::SetValue` are atomic, as are those of `ara::per::KeyValueStorage::RemoveKey`, `ara::per::KeyValueStorage::RemoveAllKeys`, `ara::per::KeyValueStorage::SyncToStorage`, and `ara::per::KeyValueStorage::DiscardPendingChanges`.

Access to single files of a `File Storage` cannot be shared between multiple threads, because it would be impossible to synchronize read and write accesses and the corresponding change of the seek position in a file. Accordingly, the `ara::per::UniqueHandle` returned by the `OpenFile*` APIs can only be moved to another thread, and trying to open an already opened file will fail. Likewise, operations like `ara::per::FileStorage::DeleteFile`, `ara::per::FileStorage::RecoverFile`, and `ara::per::FileStorage::ResetFile` will also not possible on open files.

Files are implicitly closed when their `ara::per::UniqueHandle` goes out of scope, or when the `File Storage` to which they belong is closed.

[SWS_PER_00425] [When a `File Storage` is closed, because all related `ara::per::SharedHandles` go out of scope, any files which are still open are also closed.]
(*RS_PER_00001*)

Accessing a `ara::per::UniqueHandle` of a file of a closed `File Storage` will result in undefined behavior.

7.4 Security Concepts

The `Persistency` supports encryption and authentication of data stored in a `Key-Value Storage` or `File Storage`. Whether encryption and/or authentication is applied, is decided at deployment time. The application is not aware of this fact.

In general, a `Key-Value Storage`, a key of a `Key-Value Storage`, a `File Storage`, or a file of a `File Storage` are encrypted after the creation of the storage and when the storage is saved, and are decrypted when a storage is opened. The signed hash used for the authentication of a storage is likewise verified when opening a storage, and calculated during installation or when saving a `Key-Value Storage` or `File Storage`.

In case of a read-only `Key-Value Storage` or `File Storage`, encryption is done only once during installation. A signed hash used for authentication of a read-only `Key-Value Storage` or `File Storage` (or a key or file therein) is either provided as `PersistencyDeploymentToCryptoKeySlotMapping.verificationHash` or `PersistencyDeploymentElementToCryptoKeySlotMapping.verificationHash` in the manifest, or calculated during installation.

[SWS_PER_00210]{DRAFT} [If a `PersistencyDeploymentToCryptoKeySlotMapping` or `PersistencyDeploymentElementToCryptoKeySlotMapping` exists in the manifest, and `PersistencyDeploymentToCryptoKeySlotMapping.keySlotUsage` or `PersistencyDeploymentElementToCryptoKeySlotMapping.keySlotUsage` is set to `encryption`, the `Persistency` cluster shall encrypt the related data before storing it to the persistent memory.]([RS_PER_0005](#), [RS_PER_00010](#))

[SWS_PER_00211]{DRAFT} [If a `PersistencyDeploymentToCryptoKeySlotMapping` or `PersistencyDeploymentElementToCryptoKeySlotMapping` exists in the manifest, and `PersistencyDeploymentToCryptoKeySlotMapping.keySlotUsage` or `PersistencyDeploymentElementToCryptoKeySlotMapping.keySlotUsage` is set to `encryption`, the `Persistency` cluster shall decrypt the related data after reading it from persistent memory.]([RS_PER_0005](#), [RS_PER_00010](#))

[SWS_PER_00449]{DRAFT} [If a `PersistencyDeploymentToCryptoKeySlotMapping` or `PersistencyDeploymentElementToCryptoKeySlotMapping` exists in the manifest, and `PersistencyDeploymentToCryptoKeySlotMapping.keySlotUsage` or `PersistencyDeploymentElementToCryptoKeySlotMapping.keySlotUsage` is set to `verification`, the `Persistency` cluster shall sign the related data before storing it to the persistent memory.]([RS_PER_0005](#), [RS_PER_00010](#))

[SWS_PER_00450]{DRAFT} [If a `PersistencyDeploymentToCryptoKeySlotMapping` or `PersistencyDeploymentElementToCryptoKeySlotMapping` exists in the manifest, and `PersistencyDeploymentToCryptoKeySlotMapping.keySlotUsage` or `PersistencyDeploymentElementToCryptoKeySlotMapping.keySlotUsage` is set to `verification`, the `Persistency` cluster shall

verify the signature of the related data after reading it from persistent memory.] ([RS_PER_00005](#), [RS_PER_00010](#))

[SWS_PER_00451]{DRAFT} [If [PersistencyDeploymentToCryptoKeySlotMapping.verificationHash](#) or [PersistencyDeploymentElementToCryptoKeySlotMapping.verificationHash](#) is available, the [Persistency](#) cluster shall use this hash to verify the related data.] ([RS_PER_00005](#), [RS_PER_00010](#))

The [Persistency](#) functional cluster shall use the services of the [Crypto API](#) for encryption and decryption and for creating and verifying signed hashes. It shall derive the algorithms and keys to be used from the [CryptoKeySlot](#) referenced by [PersistencyDeploymentToCryptoKeySlotMapping](#) or [PersistencyDeploymentElementToCryptoKeySlotMapping](#), and use them for the access to the [Crypto API](#) (refer to [\[8\]](#) for details).

7.5 Redundancy Concepts

The `Persistency` functional cluster shall take care of the integrity of the stored data. This can be achieved by calculating CRCs or hash values of the stored data, and by creating redundant copies. All these measures effectively create some redundancy for the stored data. The concrete measures to be taken are configurable: The application designer can use `PersistencyInterface.redundancy` to request redundancy, or use `PersistencyInterface.redundancyHandling` to preselect the actual measures to be taken. During deployment, the integrator can define the actual measures taken to ensure data integrity using `PersistencyDeployment.redundancyHandling`. If `PersistencyInterface.redundancyHandling` is configured, the integrator shall use it as a guidance, but may also choose other, more appropriate measures based on superior knowledge of the final system.

[SWS_PER_00317] [The `Persistency` cluster shall store redundant information for every `Key-Value Storage` and every `File Storage` represented by a `PortPrototype` typed by a `PersistencyInterface` where `PersistencyInterface.redundancy` is set to `redundant` or `redundantPerElement`, or where `PersistencyInterface.redundancyHandling` is configured (see also [SWS_PER_00318], [SWS_PER_00319], and [SWS_PER_00447]).] (*RS_PER_00008*, *RS_PER_00009*, *RS_PER_00010*)

[SWS_PER_00221] [The `Persistency` cluster shall use the redundant information to detect data corruption in the persistent memory.] (*RS_PER_00008*)

[SWS_PER_00222] [The `Persistency` cluster shall use the redundant information to recover corrupted data if possible.] (*RS_PER_00009*)

If data is corrupted that cannot be restored using the redundant information, `Persistency` will fail with `kValidationFailed`.

The application can then choose to use `ara::per::RecoverKeyValueStorage`, `ara::per::KeyValueStorage::RecoverKey`, `ara::per::RecoverAllFiles`, or `ara::per::FileStorage::RecoverFile` to recover as much as possible and set the corresponding `Key-Value Storage` or `File Storage` again into a consistent state. Of course the application has to validate the restored data in this case. Or it can use `ara::per::ResetKeyValueStorage`, `ara::per::ResetKeyValueStorage::ResetKey`, `ara::per::ResetAllFiles`, or `ara::per::ResetFileStorage::ResetFile` to reset the corrupted item to the initial state according to the current manifest.

7.5.1 Redundancy Types

The type of redundancy that is applied by the `Persistency` functional cluster is defined by the set of `PersistencyRedundancyHandling` classes aggregated as `PersistencyDeployment.redundancyHandling`. The level to which redundancy is applied is defined by the possible values of the `PersistencyRedundancyHan-`

dlingScopeEnum, which are `persistencyRedundancyHandlingScopeStorage` and `persistencyRedundancyHandlingScopeElement` for a `Key-Value Storage` and its keys, or a `File Storage` and its files, respectively.

[SWS_PER_00318] [In case a `PersistencyRedundancyHandling` aggregated as `PersistencyDeployment.redundancyHandling` is derived as `PersistencyRedundancyCrc`, the `Persistency` cluster shall calculate a CRC value when persisting the `Key-Value Storage`, a key in the `Key-Value Storage`, the `File Storage`, or a file in the `File Storage` (depending on `PersistencyDeployment.redundancyHandling.scope`), and shall use this CRC to check the `Key-Value Storage`, the key in the `Key-Value Storage`, the `File Storage`, or the file in the `File Storage` when it is read back.]([RS_PER_00008](#), [RS_PER_00009](#), [RS_PER_00010](#))

[SWS_PER_00439] [`Persistency` shall calculate the CRC value using the algorithm defined by `PersistencyRedundancyCrc.algorithmFamily` with the bit width defined by `PersistencyRedundancyCrc.length`.]([RS_PER_00008](#), [RS_PER_00009](#), [RS_PER_00010](#))

[SWS_PER_00319] [In case a `PersistencyRedundancyHandling` aggregated as `PersistencyDeployment.redundancyHandling` is derived as `PersistencyRedundancyMOutOfN`, the `Persistency` cluster shall store N copies when persisting the `Key-Value Storage`, a key in the `Key-Value Storage`, the `File Storage`, or a file in the `File Storage` (depending on `PersistencyDeployment.redundancyHandling.scope`), and shall check that at least M of the N copies of the `Key-Value Storage`, the key in the `Key-Value Storage`, the `File Storage`, or the file in the `File Storage` are identical when it is read back. N is defined by `n`, and M is defined by `m`.]([RS_PER_00008](#), [RS_PER_00009](#), [RS_PER_00010](#))

[SWS_PER_00447]{DRAFT} [In case a `PersistencyRedundancyHandling` aggregated as `PersistencyDeployment.redundancyHandling` is derived as `PersistencyRedundancyHash`, the `Persistency` cluster shall calculate a hash value when persisting the `Key-Value Storage`, a key in the `Key-Value Storage`, the `File Storage`, or a file in the `File Storage` (depending on `PersistencyDeployment.redundancyHandling.scope`), and shall use this hash value to check the `Key-Value Storage`, the key in the `Key-Value Storage`, the `File Storage`, or the file in the `File Storage` when it is read back.]([RS_PER_00008](#), [RS_PER_00009](#), [RS_PER_00010](#))

[SWS_PER_00448]{DRAFT} [`Persistency` shall calculate the hash value using the algorithm defined by `PersistencyRedundancyHash.algorithmFamily` with the bit width defined by `PersistencyRedundancyHash.length`. If `PersistencyRedundancyHash.initializationVectorLength` is configured, an initialization vector of this length shall be calculated containing random data and passed to the hash algorithm.]([RS_PER_00008](#), [RS_PER_00009](#), [RS_PER_00010](#))

A possible approach to calculate the hash value and the random data would be to use the `Crypto` API (see [8]). The integration will have to take care that the con-

figured `PersistencyRedundancyHash.length` and `PersistencyRedundancyHash.initializationVectorLength` are supported by the configured `PersistencyRedundancyHash.algorithmFamily`.

7.6 Installation and Update of Persistent Data

The Update and Configuration Management handles the life cycle of Adaptive Applications with the following phases:

- Installation of new software
- Update of already installed software
- Finalization of updated software after the update succeeded
- Roll-back of updated software after the update failed
- Removal of installed software

For all these phases, `persistant data` needs to be handled alongside the application. The Adaptive Application may trigger this handling explicitly by calling `ara::per::UpdatePersistency` during the verification phase that follows the installation or update, or rely on the `Persistency` cluster to do this implicitly when `persistant data` is accessed (`ara::per::OpenKeyValueStorage/ara::per::OpenFileStorage`). In both cases, the `Persistency` cluster will compare the stored manifest version against the current manifest version, and perform the required action.

[SWS_PER_00378] [`Persistency` shall extract the `Executable.version` and the `SoftwareCluster.version` of the `SoftwareCluster` that contains the `Persistency` deployment data from the manifest, and store them persistently alongside the `Key-Value Storages` and `File Storages`.] (*RS_PER_00010, RS_PER_00013, RS_PER_00014*)

The `Executable.version` is used by `Persistency` to detect a change of the application (see [SWS_PER_00387]), while the `SoftwareCluster.version` is used to detect a change of the deployed `persistant data` (see [SWS_PER_00386] and [SWS_PER_00396]).

According to [SWS_UCM_CONSTR_00001], the `SoftwareCluster.version` is always increased when the `Executable.version` is increased.

The `SoftwareCluster.version` and `Executable.version` are `StrongRevisionLabelStrings`. These strings consists of a `MajorVersion`, a `MinorVersion`, a `PatchVersion`, and additional labels for pre-release version and build metadata. It is assumed that the first three will be incremented when the version is changed, while the last might be arbitrary.

After installation of the Adaptive Application, the `Persistency` cluster will install pre-defined `persistant data` from the manifest. There are different possibilities how this `persistant data` can be defined in the manifest:

- `Persistant data` can be defined by an application designer within `PersistencyKeyValueStorageInterface` or `PersistencyFileStorageInterface`.

- `Persistent data` that was defined by an application designer can be changed by an integrator within `PersistencyKeyValueStorage` or `PersistencyFileStorage`.
- `Persistent data` can be directly defined by an integrator within `PersistencyKeyValueStorage` or `PersistencyFileStorage`.

[SWS_PER_00379] [Elements defined in the deployment data (`PersistencyKeyValueStorage` and `PersistencyFileStorage` and associated classes) shall always be preferred over elements defined in the application design (`PersistencyKeyValueStorageInterface` and `PersistencyFileStorageInterface` and associated classes). The latter shall only be used if the former does not exist.] (*RS_PER_00010, RS_PER_00012, RS_PER_00013*)

After an update of the Adaptive Application or the manifest, the `Persistency` cluster will create a backup of the `persistent data`, and then update the existing `persistent data` using one of the following strategies:

- Existing `persistent data` is kept unchanged (`keepExisting`).
- Existing `persistent data` is replaced (`overwrite`).
- Existing `persistent data` is removed (`delete`).
- New `persistent data` is added (`keepExisting` and `overwrite`).

The update strategy can be set during application design or deployment, and can be defined for the whole `Key-Value Storage` or `File Storage` (`PersistencyCollectionLevelUpdateStrategyEnum` – `keepExisting` or `delete`) and for a single key or file (`PersistencyElementLevelUpdateStrategyEnum` – `keepExisting`, `overwrite`, or `delete`).

[SWS_PER_00251] [An update strategy defined in the deployment data (`PersistencyDeployment.updateStrategy`, `PersistencyDeploymentElement.updateStrategy`) shall always be preferred over the update strategy defined in the application design (`PersistencyInterface.updateStrategy`, `PersistencyInterfaceElement.updateStrategy`). The latter shall only be used if the former does not exist.] (*RS_PER_00010, RS_PER_00012, RS_PER_00013*)

[SWS_PER_00380] [An update strategy defined for a single key or file (`PersistencyDeploymentElement.updateStrategy`, `PersistencyInterfaceElement.updateStrategy`) shall always be preferred over the update strategy defined for the enclosing `Key-Value Storage` or `File Storage` (`PersistencyDeployment.updateStrategy`, `PersistencyInterface.updateStrategy`). The latter shall only be used if the former does not exist.] (*RS_PER_00010, RS_PER_00012, RS_PER_00013*)

When the update succeeded, the Update and Configuration Management will finalize the new Adaptive Application. The `Persistency` cluster is not required to do anything, though it could free the resources allocated by the last backup.

When the update failed, the Update and Configuration Management will revert to the old Adaptive Application and/or manifest. The Persistency cluster will then replace the currently used `persistent data` by the backup created during the update.

Finally, to remove `persistent data` before the Adaptive Application is removed, the Adaptive Application needs to call `ara::per::ResetPersistency`.

7.6.1 Installation of Persistent Data

[SWS_PER_00382] [When a `Key-Value Storage` or `File Storage` is opened by the application using `ara::per::OpenKeyValueStorage` or `ara::per::OpenFileStorage`, or when `ara::per::UpdatePersistency` is called, the `Persistency` shall check for the existence of stored data. If no `persistent data` is found, the `Persistency` shall initialize the `persistent data`.] (*RS_PER_00010, RS_PER_00012*)

Initialization of `persistent data` is described in sections 7.6.1.1 and 7.6.1.2.

7.6.1.1 Installation of Key-Value Storage

[SWS_PER_00383] [`Persistency` shall create a `Key-Value Storage` for each `PortPrototype` typed by a `PersistencyKeyValueStorageInterface` that is found in the manifest of a newly installed Adaptive Application. The `Key-Value Storage` shall be identified at run-time by the `shortName` path of the `PortPrototype`, passed as `ara::core::InstanceSpecifier` to `ara::per::OpenKeyValueStorage`.] (*RS_PER_00010, RS_PER_00012*)

[SWS_PER_00252] [`Persistency` shall create an entry in the `Key-Value Storage` for each `PersistencyKeyValueStorageInterface.dataElement` and `PersistencyKeyValueStorage.keyValuePair` that is found in the manifest of a newly installed or updated Adaptive Application, and for which the update strategy is `keepExisting` or `overwrite`.] (*RS_PER_00010, RS_PER_00012*)

`Key-Value Storage` entries are identified by the key. An entry with identical key might be defined both in the `PersistencyKeyValueStorageInterface` and the `PersistencyKeyValueStorage`, in which case **[SWS_PER_00379]** applies. The update strategy is determined according to **[SWS_PER_00251]** and **[SWS_PER_00380]**.

[SWS_PER_00253] [Entries in the `Key-Value Storage` shall use the `shortName` of the `PersistencyDataElement` and/or `PersistencyKeyValuePair` as key.] (*RS_PER_00010, RS_PER_00012*)

[SWS_PER_00254] [Entries in the `Key-Value Storage` shall be created with the data type defined by the `CppImplementationDataType` which types the

`PersistencyDataElement` and/or by the `CppImplementationDataType` referenced as `PersistencyKeyValuePair.valueDataType`.] ([RS_PER_00010](#), [RS_PER_00012](#))

[SWS_PER_00384] [Entries in the `Key-Value Storage` shall be created with the value taken from the `PersistencyKeyValuePair.initValue` or, if that does not exist, from the `PersistencyDataRequiredComSpec.initValue`.] ([RS_PER_00010](#), [RS_PER_00012](#))

[SWS_PER_CONSTR_00003] [A manifest is not valid if the value or data type of any `PersistencyKeyValuePair` or `PersistencyDataElement` cannot be determined, or if the determined data types are conflicting.] ([RS_PER_00010](#), [RS_PER_00012](#))

Invalid manifests should be rejected by the tooling.

7.6.1.2 Installation of File Storage

[SWS_PER_00385] [`Persistency` shall create a `File Storage` for each `Port-Prototype` typed by a `PersistencyFileStorageInterface` that is found in the manifest of a newly installed Adaptive Application. The `File Storage` shall be identified at run-time by the `shortName` path of the `PortPrototype`, passed as `ara::core::InstanceSpecifier` to `ara::per::OpenFileStorage`.] ([RS_PER_00010](#), [RS_PER_00012](#))

[SWS_PER_00265] [`Persistency` shall create a file in the `File Storage` for each `PersistencyFileStorageInterface.fileElement` and `PersistencyFileStorage.file` that is found in the manifest of a newly installed or updated Adaptive Application, and for which the update strategy is `keepExisting` or `overwrite`.] ([RS_PER_00010](#), [RS_PER_00012](#))

The files within a `File Storage` are identified by their name. A file with the same name might be defined both in the `PersistencyFileStorageInterface` and the `PersistencyFileStorage`, in which case [\[SWS_PER_00379\]](#) applies. The update strategy is determined according to [\[SWS_PER_00251\]](#) and [\[SWS_PER_00380\]](#).

[SWS_PER_00266] [Files in the `File Storage` shall use the name identified by `PersistencyFileElement.fileName` and/or `PersistencyFile.fileName`.] ([RS_PER_00010](#), [RS_PER_00012](#))

[SWS_PER_00267] [Files in the `File Storage` shall be created with the content taken from the resource (within the installed `SoftwarePackage`) that is addressed by `PersistencyFile.contentUri` or, if that does not exist, by `PersistencyFileElement.contentUri`. If that does not exist either, and empty file shall be created.] ([RS_PER_00010](#), [RS_PER_00012](#))

[SWS_PER_CONSTR_00004] [A manifest is invalid if the `shortNames` of a `PersistencyFileElement` and a `PersistencyFile` with the same file name differs.] (*RS_PER_00010, RS_PER_00012*)

Invalid manifests should be rejected by the tooling.

7.6.2 Update of Persistent Data

[SWS_PER_00386] [When a `Key-Value Storage` or `File Storage` is opened by the application using `ara::per::OpenKeyValueStorage` or `ara::per::OpenFileStorage`, or when `ara::per::UpdatePersistency` is called, the `Persistency` shall compare the `SoftwareCluster.version` in the manifest against the stored version. If the version in the manifest is higher than the stored version, the `Persistency` shall first create a backup of the `persistent data` and then update the data.] (*RS_PER_00010, RS_PER_00013*)

Only one set of backup data needs to be kept at any time. When a new update is performed, old backup data could be overwritten. Update of `persistent data` is described in sections 7.6.2.1 and 7.6.2.2.

[SWS_PER_00387] [When a `Key-Value Storage` or `File Storage` is opened by the application using `ara::per::OpenKeyValueStorage` or `ara::per::OpenFileStorage`, or when `ara::per::UpdatePersistency` is called, the `Persistency` shall compare the `Executable.version` in the manifest against the stored version. If the version in the manifest is higher than the stored version, the `Persistency` shall call the function registered by the application using `ara::per::RegisterApplicationDataUpdateCallback` for each `Key-Value Storage` and `File Storage` that was updated according to [SWS_PER_00386].] (*RS_PER_00010, RS_PER_00013*)

The function registered by the application using `ara::per::RegisterApplicationDataUpdateCallback` can be used by the application to update `Key-Value Pairs` of a `Key-Value Storage` or files of a `File Storage` manually. The `Key-Value Storage` or `File Storage` is identified by the `ara::core::InstanceSpecifier` provided to this function. The application might then, based on the `Executable.version` of the stored data provided as second argument to the function, read in the stored data in the old format or with the old type, convert the data, and store it again with the new format or new type expected by the current version.

Example: Version 1 of the application stored the maximum speed in *mph* as `uint8`, but version 2 expects the maximum speed in *km/h* as `uint16`. The update callback function will then see that a `Key-Value Storage` from version 1 of the `Executable` has been updated to the current version, and can read in the old maximum speed by `ara::per::KeyValueStorage::GetValue` as `uint8`, convert it, and store it as `uint16` with `ara::per::KeyValueStorage::SetValue` after removing the old value with `ara::per::KeyValueStorage::RemoveKey`.

7.6.2.1 Update of Key-Value Storage

[SWS_PER_00388] [When a new `PortPrototype` typed by a `PersistencyKey-ValueStorageInterface` is detected in an updated manifest, the `Persistency` shall create a `Key-Value Storage` as specified in [\[SWS_PER_00383\]](#).] ([RS_PER_00010](#), [RS_PER_00013](#))

[SWS_PER_00389] [When a `PortPrototype` typed by a `PersistencyKey-ValueStorageInterface` is missing in an updated manifest, the `Persistency` shall remove the corresponding `Key-Value Storage`.] ([RS_PER_00010](#), [RS_PER_00013](#))

[SWS_PER_00390] [When a `PersistencyKeyValueStorageInterface.dataElement` and/or a `PersistencyKeyValueStorage.keyValuePair` with a new key is detected in an updated manifest, the `Persistency` shall create a new entry in the `Key-Value Storage` as specified in [\[SWS_PER_00252\]](#), [\[SWS_PER_00253\]](#), [\[SWS_PER_00254\]](#), and [\[SWS_PER_00384\]](#).] ([RS_PER_00010](#), [RS_PER_00013](#))

[SWS_PER_00391] [When an existing key of a `Key-Value Storage` cannot be associated with any `PersistencyKeyValueStorageInterface.dataElement` or `PersistencyKeyValueStorage.keyValuePair` in an updated manifest, and the update strategy of the `PersistencyKeyValueStorage` or `PersistencyKey-ValueStorageInterface` corresponding to the `Key-Value Storage` is `delete`, the `Persistency` shall remove the entry for that key from the `Key-Value Storage`.] ([RS_PER_00010](#), [RS_PER_00013](#))

The update strategy is determined according to [\[SWS_PER_00251\]](#).

[SWS_PER_00275] [When an existing key of a `Key-Value Storage` can be associated with a `PersistencyKeyValueStorageInterface.dataElement` or `PersistencyKeyValueStorage.keyValuePair` in an updated manifest, and the update strategy is `overwrite`, the `Persistency` shall replace the entry in the `Key-Value Storage` with the new type and value as specified in [\[SWS_PER_00254\]](#) and [\[SWS_PER_00384\]](#).] ([RS_PER_00010](#), [RS_PER_00013](#))

An entry with identical key might be defined both in the `PersistencyKey-ValueStorageInterface` and the `PersistencyKeyValueStorage`, in which case [\[SWS_PER_00379\]](#) applies. The update strategy is determined according to [\[SWS_PER_00251\]](#) and [\[SWS_PER_00380\]](#).

[SWS_PER_00277] [When an existing key of a `Key-Value Storage` can be associated with a `PersistencyKeyValueStorageInterface.dataElement` or `PersistencyKeyValueStorage.keyValuePair` in an updated manifest, and the update strategy is `delete`, the `Persistency` shall remove the entry for that key from the `Key-Value Storage`.] ([RS_PER_00010](#), [RS_PER_00013](#))

Updated keys with the update strategy `keepExisting` will not be touched during an update. `Persistency` will neither check the value nor the type of the existing entry.

7.6.2.2 Update of File Storage

[SWS_PER_00392] [When a new `PortPrototype` typed by a `PersistencyFileStorageInterface` is detected in an updated manifest, the `Persistency` shall create a `File Storage` as specified in **[SWS_PER_00385]**.] (*RS_PER_00010, RS_PER_00013*)

[SWS_PER_00393] [When a `PortPrototype` typed by a `PersistencyFileStorageInterface` is missing in an updated manifest, the `Persistency` shall remove the corresponding `File Storage`.] (*RS_PER_00010, RS_PER_00013*)

[SWS_PER_00394] [When a `PersistencyFileStorageInterface.fileElement` and/or `PersistencyFileStorage.file` with a new file name is detected in an updated manifest, the `Persistency` shall create a new file in the `File Storage` as specified in **[SWS_PER_00265]**, **[SWS_PER_00266]**, and **[SWS_PER_00267]**.] (*RS_PER_00010, RS_PER_00013*)

[SWS_PER_00395] [When an existing file of a `File Storage` cannot be associated with any `PersistencyFileStorageInterface.fileElement` or `PersistencyFileStorage.file` in an updated manifest, and the update strategy of the `PersistencyFileStorage` or `PersistencyFileStorageInterface` corresponding to the `File Storage` is `delete`, the `Persistency` shall remove the file from the `File Storage`.] (*RS_PER_00010, RS_PER_00013*)

The update strategy is determined according to **[SWS_PER_00251]**.

[SWS_PER_00281] [When an existing file of a `File Storage` can be associated with a `PersistencyFileStorageInterface.fileElement` or `PersistencyFileStorage.file` in an updated manifest, and the update strategy is `overwrite`, the `Persistency` shall replace the content of the file in the `File Storage` with the new content as specified in **[SWS_PER_00267]**.] (*RS_PER_00010, RS_PER_00013*)

A file with the same name might be defined both in the `PersistencyFileStorageInterface` and the `PersistencyFileStorage`, in which case **[SWS_PER_00379]** applies. The update strategy is determined according to **[SWS_PER_00251]** and **[SWS_PER_00380]**.

[SWS_PER_00283] [When an existing file of a `File Storage` can be associated with a `PersistencyFileStorageInterface.fileElement` or `PersistencyFileStorage.file` in an updated manifest, and the update strategy is `delete`, the `Persistency` shall remove the file from the `File Storage`.] (*RS_PER_00010, RS_PER_00013*)

Updated files with the update strategy `keepExisting` will not be touched during an update. `Persistency` will not check the content of the existing file.

7.6.3 Finalization of Persistent Data after Successful Update

After installation and update, `Persistency` will usually be called with `ara::per::UpdatePersistency` within the verification phase of the application. When this succeeded, the application will be finalized by UCM and then started again in normal execution mode. In this case, `Persistency` should remove any backups that were created during a preceding update.

[SWS_PER_00446]{DRAFT} [When a `Key-Value Storage` or `File Storage` is opened by the application using `ara::per::OpenKeyValueStorage` or `ara::per::OpenFileStorage`, and `ara::per::UpdatePersistency` has not been called since `Persistency` was initialized, the `Persistency` shall compare the `SoftwareCluster.version` in the manifest against the stored version. If the two versions are identical, the `Persistency` shall remove all backup data.]([RS_PER_00013](#))

Update of persistent data is described in section [7.6.2](#).

7.6.4 Roll-Back of Persistent Data after Failed Update

[SWS_PER_00396] [When a `Key-Value Storage` or `File Storage` is opened by the application using `ara::per::OpenKeyValueStorage` or `ara::per::OpenFileStorage`, or when `ara::per::UpdatePersistency` is called, the `Persistency` shall compare the `SoftwareCluster.version` in the manifest against the stored version. If the version in the manifest is lower than the stored version, the `Persistency` shall compare the version in the manifest against the version stored in backup data. If the versions match, the `Persistency` shall restore the backup. Otherwise, it shall remove all `Key-Value Storages` and `File Storages`, and re-install the `persistent data` from the manifest.]([RS_PER_00014](#))

Initialization of `persistent data` is described in section [7.6.1](#).

7.6.5 Removal of Persistent Data

[SWS_PER_00397] [When `ara::per::ResetPersistency` is called, the `Persistency` shall remove all `Key-Value Storages` and `File Storages`.]([RS_PER_00015](#))

7.7 Resource Management Concepts

The `Persistency` cluster supports configuration of both an upper and a lower limit for the resources used by a `Key-Value Storage` or a `File Storage`.

The lower limit may already be defined by the application developer using `PersistencyInterface.minimumSustainedSize`.

During deployment, the integrator may update the lower limit using `PersistencyDeployment.minimumSustainedSize` and add an upper limit using `PersistencyDeployment.maximumAllowedSize`.

[SWS_PER_00320] [The `Persistency` cluster shall ensure that the space configured by `PersistencyDeployment.minimumSustainedSize` is always available for the `Key-Value Storage` or `File Storage`.] (*RS_PER_00010, RS_PER_00011*)

One possibility to achieve this would be to initially allocate the minimum size during deployment, and never reduce the size below this value when `persistent data` is removed. But the implementation of the `Persistency` cluster is free to choose other appropriate measures.

[SWS_PER_00321] [The `Persistency` cluster shall ensure that the space actually allocated by a `Key-Value Storage` or `File Storage` never surpasses the amount configured by `PersistencyDeployment.maximumAllowedSize`.] (*RS_PER_00010, RS_PER_00011*)

This could be ensured by supervising all write accesses to `persistent data`. But again, the implementation of the `Persistency` cluster is free to choose other appropriate measures.

The application can also poll the amount of storage currently occupied by a complete `Key-Value Storage` or `File Storage` by using `ara::per::GetCurrentKeyValueStorageSize` or `ara::per::GetCurrentFileStorageSize`, respectively. Naturally, the returned values will not drop below a configured minimum size (`PersistencyDeployment.minimumSustainedSize`) or rise above a configured maximum size (`PersistencyDeployment.maximumAllowedSize`). In addition, the application can poll the amount of storage currently occupied by a single file using `ara::per::FileStorage::GetCurrentFileSize` of an open `File Storage`.

7.8 Supported Data Types in Key-Value Storages

The `Persistency` cluster supports the following classes of data types in the functions `ara::per::KeyValueStorage::GetValue` (templated via `T`) and `ara::per::KeyValueStorage::SetValue` (templated via `T`) of a `Key-Value Storage`.

[SWS_PER_00302] [The `Persistency` cluster shall be able to store all data types described in [9] in a `Key-Value Storage`.] (*RS_PER_00001*)

[SWS_PER_00303] [The `Persistency` cluster shall be able to store serialized binary data in a `Key-Value Storage`. Serialized binary data has to be presented as `ara::core::Vector` of `ara::core::Byte`.] (*RS_PER_00001*)

This allows the application to store custom data types.

[SWS_PER_00304] [The `Persistency` cluster shall be able to store all `CppImplementationDataTypes` referred via `PersistencyKeyValueStorageInterface.dataTypeForSerialization` or via `PersistencyKeyValueStorageInterface.dataElement` in the application design of a `PersistencyKeyValueStorage` in the corresponding `Key-Value Storage`. See [3].] (*RS_PER_00001*, *RS_PER_00010*)

7.9 Access to Additional Information about Files

To gain information about stored files, the `Persistency` cluster provides the method `ara::per::FileStorage::GetFileInfo`. This method returns information about the time the file was created (`creationTime`), last modified (`modificationTime`), and last accessed (`accessTime`), and how and by whom it was created (`fileCreationState`) and last modified (`fileModificationState`).

[SWS_PER_00440] [The method `ara::per::FileStorage::GetFileInfo` shall gather the required information into a `ara::per::FileInfo` struct and return it to the application.] (*RS_PER_00004*)

In case the `Persistency` cluster uses a file system of the underlying OS, part of that information (like the creation or access time) can be obtained from the file system. This information will then only be accurate if the file is not currently open.

8 API Specification

The APIs for accessing [File Storages](#) and [Key-Value Storage](#) are completely separate, and therefore divided into separate sections. Additional sections describe common functionality.

[SWS_PER_00002] [All specified classes within the [Persistency](#) specification shall reside within the C++ namespace `ara::per.`] ([RS_AP_00115](#))

The API of [Persistency](#) is designed around the `ara::per::SharedHandle` and `ara::per::UniqueHandle`, which are returned by factory functions like `ara::per::OpenKeyValueStorage` or `ara::per::FileStorage::OpenFileReadWrite`. The classes defined in this chapter cannot be constructed directly by the Adaptive Application, and consequently the default constructors are considered to be not publicly accessible (i.e. to be deleted, private, or protected).

8.1 `ara::core` Types

The `ara::per` API is based heavily on the `ara::core` types defined in [\[2\]](#).

`ara::core::Result` is used wherever possible, and because of this, most methods are defined as `noexcept`.

Consequently, in situations where memory cannot be allocated for new objects, the [Persistency](#) shall terminate the process by calling `ara::core::Abort` (see [\[2\]](#)).

8.2 Key-Value Storage

This section lists all functions and classes that are required to operate a [Key-Value Storage](#).

The following functions are used to get access to a [Key-Value Storage](#), to recover as much as possible after it was corrupted, to reset it to the deployed defaults, and to get the amount of storage allocated to the [Key-Value Storage](#).

8.2.1 OpenKeyValueStorage

[SWS_PER_00052] [

Kind:	function	
Symbol:	OpenKeyValueStorage(const ara::core::InstanceSpecifier &kvs)	
Scope:	namespace ara::per	
Syntax:	ara::core::Result<SharedHandle<KeyValueStorage> > OpenKeyValueStorage (const ara::core::InstanceSpecifier &kvs) noexcept;	
Parameters (in):	kvs	The shortName path of a PortPrototype typed by a PersistencyKeyValueStorageInterface.
Return value:	ara::core::Result< SharedHandle< Key ValueStorage > >	A Result containing a SharedHandle for the Key ValueStorage. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kStorageNotFound	Returned if the passed InstanceSpecifier does not match any PersistencyKeyValueStorageInterface configured for this Executable.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if UpdatePersistency or ResetPersistency is currently being executed, or if RecoverKeyValueStorage or ResetKeyValueStorage is currently being executed for the same Key-Value Storage.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the added/updated values.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	<p>Opens a Key-Value Storage.</p> <p>OpenKeyValueStorage will fail with kResourceBusy when the Key-Value Storage is currently being modified by a call from another thread to UpdatePersistency, ResetPersistency, RecoverKeyValueStorage, or ResetKeyValueStorage.</p>	



△

	<p style="text-align: center;">△</p> <p>Because multiple threads can access the same Key-Value Storage concurrently, the Key-Value Storage might not be closed when the SharedHandle returned by this function goes out of scope. It will only be closed when all SharedHandles that refer to the same Key-Value Storage went out of scope.</p>
--	---

](RS_PER_00003, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.2.2 RecoverKeyValueStorage

[SWS_PER_00333] [

Kind:	function	
Symbol:	RecoverKeyValueStorage(const ara::core::InstanceSpecifier &kvs)	
Scope:	namespace ara::per	
Syntax:	<pre>ara::core::Result<void> RecoverKeyValueStorage (const ara::core::InstanceSpecifier &kvs) noexcept;</pre>	
Parameters (in):	kvs	The shortName path of a PortPrototype typed by a PersistencyKeyValueStorageInterface.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kStorageNotFound	Returned if the passed InstanceSpecifier does not match any PersistencyKeyValueStorageInterface configured for this Executable.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption of stored data fails.
	PerErrc::kResourceBusy	Returned if UpdatePersistency or ResetPersistency is currently being executed, or if ResetKeyValueStorage is currently being executed for the same Key-Value Storage, or a SharedHandle of the same Key-Value Storage is currently in use.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the added/updated values.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	<p>Recovers a Key-ValueStorage.</p> <p>RecoverKeyValueStorage allows to recover a key-value storage when the redundancy checks fail.</p> <p>It will fail with kResourceBusy when the Key-Value Storage is currently open, or when it is modified by a call from another thread to UpdatePersistency, ResetPersistency, RecoverKeyValueStorage, or ResetKeyValueStorage.</p> <p>This method does a best-effort recovery of all keys. After recovery, keys might show outdated or initial value, or might be lost.</p>	

](RS_PER_00003, RS_PER_00009, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.2.3 ResetKeyValueStorage

[SWS_PER_00334] [

Kind:	function	
Symbol:	ResetKeyValueStorage(const ara::core::InstanceSpecifier &kvs)	
Scope:	namespace ara::per	
Syntax:	ara::core::Result<void> ResetKeyValueStorage (const ara::core::InstanceSpecifier &kvs) noexcept;	
Parameters (in):	kvs	The shortName path of a PortPrototype typed by a PersistencyKeyValueStorageInterface.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kStorageNotFound	Returned if the passed InstanceSpecifier does not match any PersistencyKeyValueStorageInterface configured for this Executable.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption of stored data fails.
	PerErrc::kResourceBusy	Returned if UpdatePersistency or ResetPersistency is currently being executed, or if RecoverKeyValueStorage is currently being executed for the same Key-Value Storage, or a SharedHandle of the same Key-Value Storage is currently in use.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the added/updated values.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	<p>Resets a Key-Value Storage to the initial state.</p> <p>ResetKeyValueStorage allows to reset a Key-Value Storage to the initial state, containing only keys which were deployed from the manifest, with their initial values.</p> <p>It will fail with kResourceBusy when the Key-Value Storage is currently open, or when it is modified by a call from another thread to UpdatePersistency, ResetPersistency, RecoverKeyValueStorage, or ResetKeyValueStorage.</p>	

](RS_PER_00003, RS_PER_00009, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.2.4 GetCurrentKeyValueStorageSize

[SWS_PER_00405] [

Kind:	function	
Symbol:	GetCurrentKeyValueStorageSize(const ara::core::InstanceSpecifier &kvs)	
Scope:	namespace ara::per	
Syntax:	<pre>ara::core::Result<uint64_t> GetCurrentKeyValueStorageSize (const ara::core::InstanceSpecifier &kvs) const noexcept;</pre>	
Parameters (in):	kvs	The shortName path of a PortPrototype typed by a PersistencyKeyValueStorageInterface.
Return value:	ara::core::Result< uint64_t >	A Result containing the occupied space in bytes. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kStorageNotFound	Returned if the passed InstanceSpecifier does not match any PersistencyKeyValueStorageInterface configured for this Executable.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Returns the space in bytes currently occupied by a Key-Value Storage. The returned size includes all meta data and the space used for redundancy and backups. The returned size is only accurate if no other operation on the Key-Value Storage takes place at the same time.	

]([RS_PER_00017](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00127](#), [RS_AP_00128](#), [RS_AP_00129](#), [RS_AP_00132](#))

8.2.5 KeyValueStorage Class

This section shows the methods available for a `ara::per::KeyValueStorage` object obtained from a call to [8.2.1](#).

[SWS_PER_00331] [Operations that modify a `Key-Value Storage` shall only be executed temporarily, such that following operations are aware of the change. The actual storage shall only be updated when `ara::per::KeyValueStorage::SyncToStorage` is called.] ([RS_PER_00003](#))

Therefore, if the `Key-Value Storage` is just destructed (also implicitly when the `Process` terminates), the `Key-Value Storage` is not updated, and the next time the `Key-Value Storage` is accessed, the application will see the last saved state. The last saved state can also be restored using `ara::per::KeyValueStorage::DiscardPendingChanges`.

Please note: Threads that access a KVS in parallel need to be aware that changes done by other threads will become visible immediately, and that the effect of `ara::per::KeyValueStorage::SyncToStorage` and `ara::per::KeyValueStorage::DiscardPendingChanges` affects all threads.

[SWS_PER_00339] [

Kind:	class
Symbol:	KeyValueStorage
Scope:	namespace ara::per
Syntax:	<code>class KeyValueStorage final {...};</code>
Header file:	<code>#include "ara/per/key_value_storage.h"</code>
Description:	The Key-Value Storage contains a set of keys with associated values.

|(RS_PER_00002, RS_AP_00122)

8.2.5.1 KeyValueStorage::KeyValueStorage

[SWS_PER_00322] [

Kind:	function
Symbol:	KeyValueStorage(KeyValueStorage &&kvs)
Scope:	class ara::per::KeyValueStorage
Syntax:	<code>KeyValueStorage (KeyValueStorage &&kvs) noexcept;</code>
Parameters (in):	kvs The KeyValueStorage object to be moved.
Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	<code>#include "ara/per/key_value_storage.h"</code>
Description:	Move constructor for KeyValueStorage.

|(RS_PER_00002, RS_AP_00120, RS_AP_00121, RS_AP_00129, RS_AP_00132)

[SWS_PER_00324] [

Kind:	function
Symbol:	KeyValueStorage(const KeyValueStorage &)
Scope:	class ara::per::KeyValueStorage
Syntax:	<code>KeyValueStorage (const KeyValueStorage &)=delete;</code>
Header file:	<code>#include "ara/per/key_value_storage.h"</code>
Description:	The copy constructor for KeyValueStorage shall not be used.

|(RS_PER_00002, RS_AP_00120)

8.2.5.2 KeyValueStorage::operator=

[SWS_PER_00323] [

Kind:	function	
Symbol:	operator=(KeyValueStorage &&kvs)	
Scope:	class ara::per::KeyValueStorage	
Syntax:	KeyValueStorage& operator= (KeyValueStorage &&kvs) &noexcept;	
Parameters (in):	kvs	The KeyValueStorage object to be moved.
Return value:	KeyValueStorage &	The moved KeyValueStorage object.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Move assignment operator for KeyValueStorage.	

|(RS_PER_00002, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00132)

[SWS_PER_00325] [

Kind:	function	
Symbol:	operator=(const KeyValueStorage &)	
Scope:	class ara::per::KeyValueStorage	
Syntax:	KeyValueStorage& operator= (const KeyValueStorage &)=delete;	
Header file:	#include "ara/per/key_value_storage.h"	
Description:	The copy assignment operator for KeyValueStorage shall not be used.	

|(RS_PER_00002, RS_AP_00119, RS_AP_00120)

8.2.5.3 KeyValueStorage::~KeyValueStorage

[SWS_PER_00050] [

Kind:	function	
Symbol:	~KeyValueStorage()	
Scope:	class ara::per::KeyValueStorage	
Syntax:	~KeyValueStorage () noexcept;	
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Destructor for KeyValueStorage.	

|(RS_PER_00002, RS_AP_00120, RS_AP_00129, RS_AP_00132, RS_AP_00134)

8.2.5.4 KeyValueStorage::GetAllKeys

[SWS_PER_00042] [

Kind:	function	
Symbol:	GetAllKeys()	
Scope:	class ara::per::KeyValueStorage	
Syntax:	<pre>ara::core::Result<ara::core::Vector<ara::core::String> > GetAllKeys () const noexcept;</pre>	
Return value:	ara::core::Result< ara::core::Vector< ara::core::String > >	A Result containing a list of available keys. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Returns a list of all currently available keys of this Key-Value Storage. The list of keys is only accurate if no key is added or deleted at the same time.	

|(RS_PER_00003, RS_AP_00119, RS_AP_00120, RS_AP_00127, RS_AP_00129, RS_AP_00132)

8.2.5.5 KeyValueStorage::KeyExists

[SWS_PER_00043] [

Kind:	function	
Symbol:	KeyExists(ara::core::StringView key)	
Scope:	class ara::per::KeyValueStorage	
Syntax:	<pre>ara::core::Result<bool> KeyExists (ara::core::StringView key) const noexcept;</pre>	
Parameters (in):	key	The key that shall be checked.
Return value:	ara::core::Result< bool >	A Result containing true if the key could be located or false if it couldn't. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.



△

	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Checks if a key exists in this Key-Value Storage. The result is only accurate if no key is added or deleted at the same time. E.g. when a key is removed in another thread directly after this function returned "true", the result is not valid anymore.	

|(RS_PER_00003, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00132)

8.2.5.6 KeyValueStorage::GetValue

[SWS_PER_00332] [

Kind:	function	
Symbol:	GetValue(ara::core::StringView key)	
Scope:	class ara::per::KeyValueStorage	
Syntax:	<pre>template <class T> ara::core::Result<T> GetValue (ara::core::StringView key) const noexcept;</pre>	
Template param:	T	The type of the value that shall be retrieved.
Parameters (in):	key	The key to look up.
Return value:	ara::core::Result< T >	A Result containing the retrieved value. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kKeyNotFound	Returned if the provided key does not exist in the Key-Value Storage.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kDataTypeMismatch	Returned if the data type of stored value does not match the templated type.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Returns the value assigned to a key of this Key-Value Storage. GetValue may be delayed by an ongoing call from another thread to RemoveAllKeys or Discard PendingChanges, or to SetValue, RemoveKey, RecoverKey, or ResetKey for the same key.	

|(RS_PER_00003, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.2.5.7 KeyValueStorage::SetValue

[SWS_PER_00046] [

Kind:	function	
Symbol:	SetValue(ara::core::StringView key, const T &value)	
Scope:	class ara::per::KeyValueStorage	
Syntax:	<pre>template <class T> ara::core::Result<void> SetValue (ara::core::StringView key, const T &value) noexcept;</pre>	
Template param:	T	The type of the value that shall be set.
Parameters (in):	key	The key to assign the value to.
	value	The value to store.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kIllegalWriteAccess	Returned if the Key-Value Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be written because the structural integrity is corrupted.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kDataTypeMismatch	Returned if the data type of an already stored value does not match the templated type.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the added/updated value.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	<p>Stores a key in this Key-Value Storage.</p> <p>If a value already exists and has the same data type as the new value, it is overwritten. If the new value has a different data type than the stored value, kDataTypeMismatch is returned.</p> <p>SetValue may be delayed by an ongoing call from another thread to RemoveAllKeys, SyncTo Storage, or DiscardPendingChanges, or to SetValue, GetValue, RemoveKey, RecoverKey, or ResetKey for the same key.</p>	

] ([RS_PER_00003](#), [RS_PER_00010](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00127](#), [RS_AP_00128](#), [RS_AP_00129](#), [RS_AP_00132](#))

8.2.5.8 KeyValueStorage::RemoveKey

[SWS_PER_00047] [

Kind:	function	
Symbol:	RemoveKey(ara::core::StringView key)	
Scope:	class ara::per::KeyValueStorage	
Syntax:	ara::core::Result<void> RemoveKey (ara::core::StringView key) noexcept;	
Parameters (in):	key	The key to be removed.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kKeyNotFound	Returned if the provided key does not exist in the Key-Value Storage.
	PerErrc::kIllegalWriteAccess	Returned if the Key-Value Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be written because the structural integrity is corrupted.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Removes a key and the associated value from this Key-Value Storage. RemoveKey may be delayed by an ongoing call from another thread to RemoveAllKeys, SyncTo Storage, or DiscardPendingChanges, or to SetValue, GetValue, RemoveKey, RecoverKey, or ResetKey for the same key.	

]([RS_PER_00003](#), [RS_PER_00010](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00127](#), [RS_AP_00128](#), [RS_AP_00129](#), [RS_AP_00132](#))

8.2.5.9 KeyValueStorage::RecoverKey

[SWS_PER_00427] [

Kind:	function	
Symbol:	RecoverKey(ara::core::StringView key)	
Scope:	class ara::per::KeyValueStorage	
Syntax:	ara::core::Result<void> RecoverKey (ara::core::StringView key) noexcept;	
Parameters (in):	key	The key to be reset.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	





Errors:	PerErrc::kKeyNotFound	Returned if the provided key does not exist in the Key-Value Storage.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be written because the structural integrity is corrupted.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the restored value.
	PerErrc::kNotInitialized	Returned if this method is called after <code>ara::core::Deinitialize</code> .
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Recovers a single key of this Key Value Storage. This method allows to recover a single key when the redundancy checks fail. This method does a best-effort recovery of the key. After recovery, the key might contain outdated or initial content, or might be lost. RecoverKey may be delayed by an ongoing call from another thread to <code>RemoveAllKeys</code> , <code>SyncToStorage</code> , or <code>DiscardPendingChanges</code> , or to <code>SetValue</code> , <code>GetValue</code> , <code>RemoveKey</code> , <code>RecoverKey</code> , or <code>ResetKey</code> for the same key.	

|(RS_PER_00003, RS_PER_00009, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.2.5.10 KeyValueStorage::ResetKey

[SWS_PER_00426] [

Kind:	function	
Symbol:	ResetKey(ara::core::StringView key)	
Scope:	class ara::per::KeyValueStorage	
Syntax:	<code>ara::core::Result<void> ResetKey (ara::core::StringView key) noexcept;</code>	
Parameters (in):	key	The key to be reset.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
	PerErrc::kIllegalWriteAccess	Returned if the Key-Value Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be written because the structural integrity is corrupted.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.





	PerErrc::kInitValueNotAvailable	Returned if no initial value was configured for this key.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the restored value.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	<p>Resets a key of this Key-Value Storage to its initial value.</p> <p>This method allows to reset a single key to its initial value. If the key is currently not available in the Key-Value Storage, it is re-created.</p> <p>ResetKey will fail with kInitValueNotAvailable when design and deployment do not define an initial value for the key.</p> <p>ResetKey may be delayed by an ongoing call from another thread to RemoveAllKeys, SyncToStorage, or DiscardPendingChanges, or to SetValue, GetValue, RemoveKey, RecoverKey, or ResetKey for the same key.</p>	

|(RS_PER_00003, RS_PER_00009, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.2.5.11 KeyValueStorage::RemoveAllKeys

[SWS_PER_00048] [

Kind:	function	
Symbol:	RemoveAllKeys()	
Scope:	class ara::per::KeyValueStorage	
Syntax:	ara::core::Result<void> RemoveAllKeys () noexcept;	
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kIllegalWriteAccess	Returned if the Key-Value Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be written because the structural integrity is corrupted.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	<p>Removes all keys and associated values from this Key-Value Storage.</p> <p>RemoveAllKeys may be delayed by an ongoing call from another thread to RemoveAllKeys, SyncToStorage, DiscardPendingChanges, SetValue, GetValue, RemoveKey, RecoverKey, or ResetKey.</p>	

|(RS_PER_00003, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.2.5.12 KeyValueStorage::SyncToStorage

[SWS_PER_00049] [

Kind:	function	
Symbol:	SyncToStorage()	
Scope:	class ara::per::KeyValueStorage	
Syntax:	ara::core::Result<void> SyncToStorage () noexcept;	
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kIllegalWriteAccess	Returned if the Key-Value Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be written because the structural integrity is corrupted.
	PerErrc::kEncryptionFailed	Returned if the encryption of stored data fails.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the added/updated values.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	Triggers flushing of changed key-value pairs of the Key-Value Storage to the physical storage. SyncToStorage may be delayed by an ongoing call from another thread to RemoveAllKeys, DiscardPendingChanges, SetValue, RemoveKey, RecoverKey, or ResetKey.	

|(RS_PER_00002, RS_AP_00119, RS_AP_00120, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.2.5.13 KeyValueStorage::DiscardPendingChanges

[SWS_PER_00365] [

Kind:	function	
Symbol:	DiscardPendingChanges()	
Scope:	class ara::per::KeyValueStorage	
Syntax:	ara::core::Result<void> DiscardPendingChanges () noexcept;	
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.





Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/key_value_storage.h"	
Description:	<p>Removes all pending changes to this Key-Value Storage since the last call to SyncToStorage() or since this Key-Value Storage was opened using OpenKeyValueStorage().</p> <p>DiscardPendingChanges may be delayed by an ongoing call from another thread to RemoveAllKeys, SyncToStorage, DiscardPendingChanges, SetValue, GetValue, RemoveKey, RecoverKey, or ResetKey.</p>	

|(RS_PER_00002, RS_AP_00119, RS_AP_00120, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3 File Storage

This section lists all functions and classes that are required to operate a [File Storage](#).

The following functions are used to get access to a [File Storage](#), to recover as much as possible after it was corrupted, to reset it to the deployed defaults, and to get the amount of storage allocated to the [File Storage](#). In addition, operators are present to combine the `ara::per::OpenMode` values passed as `mode` to the `OpenFile*` functions.

[Persistency](#) itself does not change or interpret the content of a file when accessing it in text mode. It is assumed, though, that files in the [File Storage](#) are encoded as UTF-8 (see [RS_AP_00136]; this is also in line with the constraint for `StdStringImplementationDataType` of category STRING in [3], see [constr_1674]). It is also assumed that line endings are handled according to UNIX conventions, i.e. just LF ("\n").

8.3.1 OpenFileStorage

[SWS_PER_00116] [

Kind:	function	
Symbol:	OpenFileStorage(const ara::core::InstanceSpecifier &fs)	
Scope:	namespace ara::per	
Syntax:	<pre>ara::core::Result<SharedHandle<FileStorage> > OpenFileStorage (const ara::core::InstanceSpecifier &fs) noexcept;</pre>	
Parameters (in):	fs	The shortName path of a PortPrototype typed by a PersistencyFileStorageInterface.
Return value:	ara::core::Result< SharedHandle< File Storage > >	A Result containing a SharedHandle for the File Storage. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
	PerErrc::kStorageNotFound	Returned if the passed InstanceSpecifier does not match any PersistencyFileStorageInterface configured for this Executable.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if UpdatePersistency or ResetPersistency is currently being executed, or if RecoverAllFiles or ResetAllFiles is currently being executed for the same File Storage.





	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the added/updated files.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	<p>Opens a File Storage.</p> <p>OpenFileStorage will fail with kResourceBusy when the File Storage is currently being modified by a call from another thread to UpdatePersistency, ResetPersistency, RecoverAllFiles, or ResetAllFiles.</p> <p>Because multiple threads can access the same File Storage concurrently, the File Storage might not be closed when the SharedHandle returned by this function goes out of scope. It will only be closed when all SharedHandles that refer to the same File Storage went out of scope.</p>	

|(RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.2 RecoverAllFiles

[SWS_PER_00335] [

Kind:	function	
Symbol:	RecoverAllFiles(const ara::core::InstanceSpecifier &fs)	
Scope:	namespace ara::per	
Syntax:	ara::core::Result<void> RecoverAllFiles (const ara::core::InstanceSpecifier &fs) noexcept;	
Parameters (in):	fs	The shortName path of a PortPrototype typed by a PersistencyFileStorageInterface.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kStorageNotFound	Returned if the passed InstanceSpecifier does not match any PersistencyFileStorageInterface configured for this Executable.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption of stored data fails.
	PerErrc::kResourceBusy	Returned if UpdatePersistency or ResetPersistency is currently being executed, or if ResetAllFiles is currently being executed for the same File Storage, or a SharedHandle of the same File Storage is currently in use.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the restored files.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.





Header file:	#include "ara/per/file_storage.h"
Description:	<p>Recovers a File Storage, including all files.</p> <p>RecoverAllFiles recovers a File Storage when the redundancy checks fail.</p> <p>It will fail with kResourceBusy when the File Storage is currently open, or when it is modified by a call from another thread to UpdatePersistency, ResetPersistency, RecoverAllFiles, or ResetAllFiles.</p> <p>This method does a best-effort recovery of all files. After recovery, files might show outdated or initial content, or might be lost.</p>

|(RS_PER_00001, RS_PER_00004, RS_PER_00009, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.3 ResetAllFiles

[SWS_PER_00336] [

Kind:	function	
Symbol:	ResetAllFiles(const ara::core::InstanceSpecifier &fs)	
Scope:	namespace ara::per	
Syntax:	ara::core::Result<void> ResetAllFiles (const ara::core::InstanceSpecifier &fs) noexcept;	
Parameters (in):	fs	The shortName path of a PortPrototype typed by a PersistencyFileStorageInterface.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kStorageNotFound	Returned if the passed InstanceSpecifier does not match any PersistencyFileStorageInterface configured for this Executable.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption of stored data fails.
	PerErrc::kResourceBusy	Returned if UpdatePersistency or ResetPersistency is currently being executed, or if RecoverAllFiles is currently being executed for the same File Storage, or a SharedHandle of the same File Storage is currently in use.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the restored files.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	





Description:	<p>Resets a File Storage, including all files.</p> <p>ResetAllFiles resets a File Storage to the initial state, containing only the files which were deployed from the manifest, with their initial content.</p> <p>It will fail with kResourceBusy when the File Storage is currently open, or when it is modified by a call from another thread to UpdatePersistency, ResetPersistency, RecoverAllFiles, or ResetAllFiles.</p>
---------------------	--

|(RS_PER_00001, RS_PER_00004, RS_PER_00009, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.4 GetCurrentFileStorageSize

[SWS_PER_00406] [

Kind:	function	
Symbol:	GetCurrentFileStorageSize(const ara::core::InstanceSpecifier &fs)	
Scope:	namespace ara::per	
Syntax:	ara::core::Result<uint64_t> GetCurrentFileStorageSize (const ara::core::InstanceSpecifier &fs) const noexcept;	
Parameters (in):	fs	The shortName path of a PortPrototype typed by a PersistencyFileStorageInterface.
Return value:	ara::core::Result< uint64_t >	A Result containing the occupied space in bytes. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kStorageNotFound	Returned if the passed InstanceSpecifier does not match any PersistencyFileStorageInterface configured for this Executable.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	<p>Returns the space in bytes currently occupied by a File Storage.</p> <p>The returned size includes all meta data and the space used for redundancy and backups.</p> <p>The returned size is only accurate if no other operation on the File Storage takes place at the same time.</p>	

|(RS_PER_00017, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.5 OpenMode

[SWS_PER_00147] [

Kind:	enumeration	
Symbol:	OpenMode	
Scope:	namespace ara::per	
Underlying type:	uint32_t	
Syntax:	enum class OpenMode : uint32_t {...};	
Values:	kAtTheBeginning= 1 << 0	Sets the seek position to the beginning of the file when the file is opened. This mode cannot be combined with kAtTheEnd.
	kAtTheEnd= 1 << 1	Sets the seek position to the end of the file when the file is opened. This mode cannot be combined with kAtTheBeginning or kTruncate.
	kTruncate= 1 << 2	Removes existing content when the file is opened. This mode cannot be combined with kAtTheEnd.
	kAppend= 1 << 3	Append to the end. Always seeks to the end of the file before writing.
Header file:	#include "ara/per/file_storage.h"	
Description:	This enumeration defines how a file shall be opened. The values can be combined (using and =) as long as they do not contradict each other.	

|(RS_PER_00003, RS_AP_00122)

8.3.6 operator| for FileStorage::OpenMode

[SWS_PER_00144] [

Kind:	function	
Symbol:	operator (OpenMode left, OpenMode right)	
Scope:	namespace ara::per	
Syntax:	constexpr OpenMode operator (OpenMode left, OpenMode right);	
Parameters (in):	left	First OpenMode modifiers.
	right	Second OpenMode modifiers.
Return value:	OpenMode	returns Merged OpenMode modifiers.
Thread Safety:	re-entrant	
Header file:	#include "ara/per/file_storage.h"	
Description:	Merges two OpenMode modifiers into one.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121)

8.3.7 operator|= for FileStorage::OpenMode

[SWS_PER_00434] [

Kind:	function	
Symbol:	operator =(OpenMode &left, const OpenMode &right)	
Scope:	namespace ara::per	
Syntax:	OpenMode& operator = (OpenMode &left, const OpenMode &right);	
Parameters (in):	left	Left OpenMode modifiers.
	right	Right OpenMode modifiers.
Return value:	OpenMode &	returns The modified OpenMode.
Thread Safety:	re-entrant	
Header file:	#include "ara/per/file_storage.h"	
Description:	Merges an OpenMode modifier into this OpenMode.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121)

8.3.8 FileCreationState

[SWS_PER_00435] [

Kind:	enumeration	
Symbol:	FileCreationState	
Scope:	namespace ara::per	
Underlying type:	uint32_t	
Syntax:	enum class FileCreationState : uint32_t {...};	
Values:	kCreatedDuringInstallation= 1	The file was created by Persistency after installation of the application or after ResetPersistency.
	kCreatedDuringUpdate= 2	The file was created by Persistency during an update.
	kCreatedDuringReset= 3	The file was re-created due to a call to ResetFile or ResetAllFiles.
	kCreatedDuringRecovery= 4	The file was re-created by Persistency after a corruption was detected.
	kCreatedByApplication= 5	The file was created by the application.
Header file:	#include "ara/per/file_storage.h"	
Description:	This enumeration describes how and when a file was created.	

|(RS_PER_00004, RS_AP_00122)

8.3.9 FileModificationState

[SWS_PER_00436] [

Kind:	enumeration	
Symbol:	FileModificationState	
Scope:	namespace ara::per	
Underlying type:	uint32_t	
Syntax:	enum class FileModificationState : uint32_t {...};	
Values:	kModifiedDuringUpdate= 2	The file was last modified by Persistency during an update.
	kModifiedDuringReset= 3	The file was last modified by Persistency due to a call to ResetFile or ResetAllFiles.
	kModifiedDuringRecovery= 4	The file was last modified by Persistency after a corruption was detected.
	kModifiedByApplication= 5	The file was last modified by the application.
Header file:	#include "ara/per/file_storage.h"	
Description:	This enumeration describes how and when a file was last modified.	

]([RS_PER_00004](#), [RS_AP_00122](#))

8.3.10 FileInfo

[[SWS_PER_00437](#)] [

Kind:	struct
Symbol:	FileInfo
Scope:	namespace ara::per
Syntax:	struct FileInfo {...};
Header file:	#include "ara/per/file_storage.h"
Description:	This structure contains additional information on a file returned by GetFileInfo.

]([RS_PER_00004](#), [RS_AP_00122](#))

8.3.10.1 FileInfo.creationTime

[[SWS_PER_00441](#)] [

Kind:	variable
Symbol:	creationTime
Scope:	struct ara::per::FileInfo
Type:	uint64_t
Syntax:	uint64_t creationTime;
Header file:	#include "ara/per/file_storage.h"
Description:	Time in nanoseconds since midnight 1970-01-01 UTC at which the file was created.

]([RS_PER_00004](#))

8.3.10.2 FileInfo.modificationTime

[SWS_PER_00442] [

Kind:	variable
Symbol:	modificationTime
Scope:	struct ara::per::FileInfo
Type:	uint64_t
Syntax:	uint64_t modificationTime;
Header file:	#include "ara/per/file_storage.h"
Description:	Time in nanoseconds since midnight 1970-01-01 UTC at which the file was last modified.

](RS_PER_00004)

8.3.10.3 FileInfo.accessTime

[SWS_PER_00443] [

Kind:	variable
Symbol:	accessTime
Scope:	struct ara::per::FileInfo
Type:	uint64_t
Syntax:	uint64_t accessTime;
Header file:	#include "ara/per/file_storage.h"
Description:	Time in nanoseconds since midnight 1970-01-01 UTC at which the file was last accessed.

](RS_PER_00004)

8.3.10.4 FileInfo.fileCreationState

[SWS_PER_00444] [

Kind:	variable
Symbol:	fileCreationState
Scope:	struct ara::per::FileInfo
Type:	FileCreationState
Syntax:	FileCreationState fileCreationState;
Header file:	#include "ara/per/file_storage.h"
Description:	Information on how and by whom the file was created.

](RS_PER_00004)

8.3.10.5 FileInfo.fileModificationState

[SWS_PER_00445] [

Kind:	variable
Symbol:	fileModificationState
Scope:	struct ara::per::FileInfo
Type:	FileModificationState
Syntax:	FileModificationState fileModificationState;
Header file:	#include "ara/per/file_storage.h"
Description:	Information on how and by whom the file was last modified.

](RS_PER_00004)

8.3.11 FileStorage Class

This section shows the methods available for a `ara::per::FileStorage` object obtained from a call to 8.3.1.

[SWS_PER_00340] [

Kind:	class
Symbol:	FileStorage
Scope:	namespace ara::per
Syntax:	class FileStorage final {...};
Header file:	#include "ara/per/file_storage.h"
Description:	The File Storage contains a set of files identified by their names.

](RS_PER_00004, RS_AP_00122)

8.3.11.1 FileStorage::FileStorage

[SWS_PER_00326] [

Kind:	function	
Symbol:	FileStorage(FileStorage &&fs)	
Scope:	class ara::per::FileStorage	
Syntax:	FileStorage (FileStorage &&fs) noexcept;	
Parameters (in):	fs	The FileStorage object to be moved.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	



△

Header file:	#include "ara/per/file_storage.h"
Description:	Move constructor for FileStorage.

]([RS_PER_00004](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00129](#), [RS_AP_00132](#))

[SWS_PER_00328] [

Kind:	function
Symbol:	FileStorage(const FileStorage &)
Scope:	class ara::per::FileStorage
Syntax:	FileStorage (const FileStorage &)=delete;
Header file:	#include "ara/per/file_storage.h"
Description:	The copy constructor for FileStorage shall not be used.

]([RS_PER_00004](#), [RS_AP_00120](#))

8.3.11.2 FileStorage::operator=

[SWS_PER_00327] [

Kind:	function	
Symbol:	operator=(FileStorage &&fs)	
Scope:	class ara::per::FileStorage	
Syntax:	FileStorage& operator= (FileStorage &&fs) &noexcept;	
Parameters (in):	fs	The FileStorage object to be moved.
Return value:	FileStorage &	The moved FileStorage object.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/file_storage.h"	
Description:	Move assignment operator for FileStorage.	

]([RS_PER_00004](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00132](#))

[SWS_PER_00329] [

Kind:	function
Symbol:	operator=(const FileStorage &)
Scope:	class ara::per::FileStorage
Syntax:	FileStorage& operator= (const FileStorage &)=delete;
Header file:	#include "ara/per/file_storage.h"
Description:	The copy assignment operator for FileStorage shall not be used.

]([RS_PER_00004](#), [RS_AP_00119](#), [RS_AP_00120](#))

8.3.11.3 FileStorage::~FileStorage

[SWS_PER_00330] [

Kind:	function
Symbol:	~FileStorage()
Scope:	class ara::per::FileStorage
Syntax:	~FileStorage () noexcept;
Exception Safety:	noexcept
Thread Safety:	no
Header file:	#include "ara/per/file_storage.h"
Description:	Destructor for FileStorage.

]([RS_PER_00004](#), [RS_AP_00120](#), [RS_AP_00129](#), [RS_AP_00132](#), [RS_AP_00134](#))

8.3.11.4 FileStorage::GetAllFileNames

[SWS_PER_00110] [

Kind:	function	
Symbol:	GetAllFileNames()	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<ara::core::Vector<ara::core::String> > GetAllFileNames () const noexcept;	
Return value:	ara::core::Result< ara::core::Vector< ara::core::String > >	A Result containing a list of available files. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	Returns a list of all currently available files of this File Storage. The list of files is only accurate if no file is added or deleted at the same time.	

]([RS_PER_00001](#), [RS_PER_00004](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00127](#), [RS_AP_00129](#), [RS_AP_00132](#))

8.3.11.5 FileStorage::DeleteFile

[SWS_PER_00111] [

Kind:	function	
Symbol:	DeleteFile(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<void> DeleteFile (ara::core::StringView fileName) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kIllegalWriteAccess	Returned if the File Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be written because the structural integrity is corrupted.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is open, or if RecoverFile or ResetFile with the same file name is currently being executed.
	PerErrc::kFileNotFound	Returned if the provided file does not exist in the File Storage.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	Deletes a file from this File Storage. This operation will fail with kResourceBusy when the file is currently open.	

] ([RS_PER_00001](#), [RS_PER_00004](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00127](#), [RS_AP_00128](#), [RS_AP_00129](#), [RS_AP_00132](#))

8.3.11.6 FileStorage::FileExists

[SWS_PER_00112] [

Kind:	function	
Symbol:	FileExists(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<bool> FileExists (ara::core::StringView fileName) const noexcept;	





Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< bool >	A Result containing true if the file could be located or false if it couldn't. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	Checks if a file exists in this File Storage. The result is only accurate if no file is added or deleted at the same time. E.g. when a file is removed in another thread directly after this function returned "true", the result is not valid anymore.	

[\]\(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00132\)](#)

8.3.11.7 FileStorage::RecoverFile

[SWS_PER_00337] [

Kind:	function	
Symbol:	RecoverFile(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<void> RecoverFile (ara::core::StringView fileName) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is open, or if DeleteFile or Reset File with the same file name is currently being executed.





	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the restored file.
	PerErrc::kFileNotFound	Returned if the provided file does not exist in the File Storage.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	<p>Recovers a file of this File Storage.</p> <p>This method allows to recover a single file when the redundancy checks fail.</p> <p>It will fail with kResourceBusy when the file is currently open.</p> <p>This method does a best-effort recovery of the file. After recovery, the file might show outdated or initial content, or might be lost.</p>	

|(RS_PER_00001, RS_PER_00004, RS_PER_00009, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.11.8 FileStorage::ResetFile

[SWS_PER_00338] [

Kind:	function	
Symbol:	ResetFile(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<void> ResetFile (ara::core::StringView fileName) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kInitValueNotAvailable	Returned if no initial value was configured for this file.
	PerErrc::kResourceBusy	Returned if the file is open, or if DeleteFile or RecoverFile with the same file name is currently being executed.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient or the number of files would get larger than the configured maxNumberOfFiles when the file is restored.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.





Header file:	#include "ara/per/file_storage.h"
Description:	<p>Resets a file of this File Storage to its initial content.</p> <p>This method allows to reset a single file to its initial content. If the file is currently not available in the File Storage, it is re-created.</p> <p>It will fail with kResourceBusy when the file is currently open, and with kInitValueNotAvailable when deployment does not define an initial content for the file.</p>

](RS_PER_00001, RS_PER_00004, RS_PER_00009, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.11.9 FileStorage::GetCurrentFileSize

[SWS_PER_00407] [

Kind:	function	
Symbol:	GetCurrentFileSize(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<uint64_t> GetCurrentFileSize (ara::core::StringView fileName) const noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< uint64_t >	A Result containing the occupied space in bytes. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be written because the structural integrity is corrupted.
	PerErrc::kFileNotFound	Returned if the provided file does not exist in the File Storage.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	<p>Returns the space in bytes currently occupied by the content of a file of this File Storage.</p> <p>The returned size is only accurate if no other operation on the file takes place at the same time.</p>	

](RS_PER_00017, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.11.10 FileStorage::GetFileInfo

[SWS_PER_00438] [

Kind:	function	
Symbol:	GetFileInfo(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<FileInfo> GetFileInfo (ara::core::StringView file Name) const noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< FileInfo >	A Result containing a FileInfo struct. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kFileNotFound	Returned if the provided file does not exist in the File Storage.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	Returns additional information on a file of this File Storage. The returned FileInfo struct contains information about the times when the file was created, last modified, and last accessed, and about how and by whom the file was created and last modified. The modificationTime, accessTime, and fileModificationState returned in the FileInfo are only accurate if the file is currently not open.	

](RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.11.11 FileStorage::OpenFileReadWrite

[SWS_PER_00375] [

Kind:	function	
Symbol:	OpenFileReadWrite(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<UniqueHandle<ReadWriteAccessor> > OpenFileReadWrite (ara::core::StringView fileName) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< UniqueHandle< ReadWriteAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kIllegalWriteAccess	Returned if the File Storage is configured as read-only.





	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient or the number of files would get larger than the configured maxNumberOfFiles when the file is created.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	<p>Opens a file of this File Storage for reading and writing.</p> <p>The file is opened with the seek position set to the beginning (corresponding to kAtThe Beginning).</p> <p>If the file does not exist, it is created.</p> <p>The file will be closed when the returned UniqueHandle goes out of scope.</p>	

|(RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

[SWS_PER_00113] [

Kind:	function	
Symbol:	OpenFileReadWrite(ara::core::StringView fileName, OpenMode mode)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<UniqueHandle<ReadWriteAccessor> > OpenFileReadWrite(ara::core::StringView fileName, OpenMode mode) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
	mode	Mode with which the file shall be opened.
Return value:	ara::core::Result< UniqueHandle< ReadWriteAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
	PerErrc::kIllegalWriteAccess	Returned if the File Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.





	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient or the number of files would get larger than the configured maxNumberOfFiles when the file is created.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidOpenMode	Returned if the passed mode contains an invalid combination of modes.
Header file:	#include "ara/per/file_storage.h"	
Description:	<p>Opens a file of this File Storage for reading and writing with a defined mode.</p> <p>If not otherwise specified by the provided mode, the file is opened with the seek position set to the beginning (corresponding to kAtTheBeginning).</p> <p>If the file does not exist, it is created.</p> <p>The file will be closed when the returned UniqueHandle goes out of scope.</p>	

](RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

[SWS_PER_00429] [

Kind:	function	
Symbol:	OpenFileReadWrite(ara::core::StringView fileName, OpenMode mode, ara::core::Span< ara::core::Byte > buffer)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<UniqueHandle<ReadWriteAccessor> > OpenFileReadWrite (ara::core::StringView fileName, OpenMode mode, ara::core::Span< ara::core::Byte > buffer) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
	mode	Mode with which the file shall be opened.
	buffer	Memory to be used for block-wise reading/writing.
Return value:	ara::core::Result< UniqueHandle< ReadWriteAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
	PerErrc::kIllegalWriteAccess	Returned if the File Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.





	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient or the number of files would get larger than the configured maxNumberOfFiles when the file is created.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidOpenMode	Returned if the passed mode contains an invalid combination of modes.
Header file:	#include "ara/per/file_storage.h"	
Description:	<p>Opens a file of this File Storage for reading and writing with a user provided buffer.</p> <p>If not otherwise specified by the provided mode, the file is opened with the seek position set to the beginning (corresponding to kAtTheBeginning).</p> <p>The provided buffer will be used by the ReadWriteAccessor to implement block-wise reading and writing to speed up multiple small accesses to the file.</p> <p>If the file does not exist, it is created.</p> <p>The file will be closed when the returned UniqueHandle goes out of scope.</p>	

](RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.11.12 FileStorage::OpenFileReadOnly

[SWS_PER_00376] [

Kind:	function	
Symbol:	OpenFileReadOnly(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<UniqueHandle<ReadAccessor> > OpenFileReadOnly(ara::core::StringView fileName) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< UniqueHandle< ReadAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.





	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kFileNotFound	Returned if the provided file does not exist in the File Storage.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	
Description:	Opens a file of this File Storage for reading. The file is opened with the seek position set to the beginning (corresponding to kAtThe Beginning). The file will be closed when the returned UniqueHandle goes out of scope.	

|(RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

[SWS_PER_00114] [

Kind:	function	
Symbol:	OpenFileReadOnly(ara::core::StringView fileName, OpenMode mode)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<UniqueHandle<ReadAccessor> > OpenFileReadOnly (ara::core::StringView fileName, OpenMode mode) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
	mode	Mode with which the file shall be opened.
Return value:	ara::core::Result< UniqueHandle< ReadAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kFileNotFound	Returned if the provided file does not exist in the File Storage.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidOpenMode	Returned if the passed mode contains an invalid combination of modes.





Header file:	#include "ara/per/file_storage.h"
Description:	<p>Opens a file of this File Storage for reading with a defined mode.</p> <p>If not otherwise specified by the provided mode, the file is opened with the seek position set to the beginning (corresponding to kAtTheBeginning).</p> <p>The file will be closed when the returned UniqueHandle goes out of scope.</p>

|(RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

[SWS_PER_00430] [

Kind:	function	
Symbol:	OpenFileReadOnly(ara::core::StringView fileName, OpenMode mode, ara::core::Span< ara::core::Byte > buffer)	
Scope:	class ara::per::FileStorage	
Syntax:	<pre>ara::core::Result<UniqueHandle<ReadAccessor> > OpenFileReadOnly (ara::core::StringView fileName, OpenMode mode, ara::core::Span< ara::core::Byte > buffer) noexcept;</pre>	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
	mode	Mode with which the file shall be opened.
	buffer	Memory to be used for block-wise reading.
Return value:	ara::core::Result< UniqueHandle< ReadAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kFileNotFound	Returned if the provided file does not exist in the File Storage.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidOpenMode	Returned if the passed mode contains an invalid combination of modes.
Header file:	#include "ara/per/file_storage.h"	





Description:	<p>Opens a file of this File Storage for reading with a user provided buffer.</p> <p>If not otherwise specified by the provided mode, the file is opened with the seek position set to the beginning (corresponding to kAtTheBeginning).</p> <p>The provided buffer will be used by the ReadAccessor to implement block-wise reading to speed up multiple small accesses to the file.</p> <p>The file will be closed when the returned UniqueHandle goes out of scope.</p>
---------------------	--

|(RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.11.13 FileStorage::OpenFileWriteOnly

[SWS_PER_00377] [

Kind:	function	
Symbol:	OpenFileWriteOnly(ara::core::StringView fileName)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<UniqueHandle<ReadWriteAccessor> > OpenFileWriteOnly(ara::core::StringView fileName) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
Return value:	ara::core::Result< UniqueHandle< ReadWriteAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kIllegalWriteAccess	Returned if the File Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient or the number of files would get larger than the configured maxNumberOfFiles when the file is created.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/file_storage.h"	





Description:	<p>Opens a file of this File Storage for writing.</p> <p>The file is truncated (corresponding to kTruncate).</p> <p>If the file does not exist, it is created.</p> <p>The file will be closed when the returned UniqueHandle goes out of scope.</p>
---------------------	---

|(RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

[SWS_PER_00115] [

Kind:	function	
Symbol:	OpenFileWriteOnly(ara::core::StringView fileName, OpenMode mode)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<UniqueHandle<ReadWriteAccessor> > OpenFileWriteOnly(ara::core::StringView fileName, OpenMode mode) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
	mode	Mode with which the file shall be opened.
Return value:	ara::core::Result< UniqueHandle< ReadWriteAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kIllegalWriteAccess	Returned if the File Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient or the number of files would get larger than the configured maxNumberOfFiles when the file is created.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidOpenMode	Returned if the passed mode contains an invalid combination of modes.
Header file:	#include "ara/per/file_storage.h"	





Description:	<p>Opens a file of this File Storage for writing with a defined mode.</p> <p>If not otherwise specified by the provided mode, the file is truncated (corresponding to kTruncate).</p> <p>If the file does not exist, it is created.</p> <p>The file will be closed when the returned UniqueHandle goes out of scope.</p>
---------------------	--

|(RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

[SWS_PER_00431] [

Kind:	function	
Symbol:	OpenFileWriteOnly(ara::core::StringView fileName, OpenMode mode, ara::core::Span<ara::core::Byte > buffer)	
Scope:	class ara::per::FileStorage	
Syntax:	ara::core::Result<UniqueHandle<ReadWriteAccessor> > OpenFileWriteOnly(ara::core::StringView fileName, OpenMode mode, ara::core::Span<ara::core::Byte > buffer) noexcept;	
Parameters (in):	fileName	Name of the file. May correspond to the Persistency File.fileName of a configured file.
	mode	Mode with which the file shall be opened.
	buffer	Memory to be used for block-wise writing.
Return value:	ara::core::Result< UniqueHandle< ReadWriteAccessor > >	A Result containing a UniqueHandle for the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Errors:	PerErrc::kIllegalWriteAccess	Returned if the File Storage is configured as read-only.
	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kResourceBusy	Returned if the file is already open, or if DeleteFile, RecoverFile, or ResetFile with the same file name is currently being executed.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient or the number of files would get larger than the configured maxNumberOfFiles when the file is created.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidOpenMode	Returned if the passed mode contains an invalid combination of modes.
Header file:	#include "ara/per/file_storage.h"	





Description:	<p>Opens a file of this File Storage for writing with a user provided buffer.</p> <p>If not otherwise specified by the provided mode, the file is truncated (corresponding to kTruncate).</p> <p>The provided buffer will be used by the ReadWriteAccessor to implement block-wise writing to speed up multiple small accesses to the file.</p> <p>If the file does not exist, it is created.</p> <p>The file will be closed when the returned UniqueHandle goes out of scope.</p>
---------------------	--

|(RS_PER_00001, RS_PER_00004, RS_PER_00010, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00128, RS_AP_00129, RS_AP_00132)

8.3.12 Origin

[SWS_PER_00146] [

Kind:	enumeration	
Symbol:	Origin	
Scope:	namespace ara::per	
Underlying type:	uint32_t	
Syntax:	enum class Origin : uint32_t {...};	
Values:	kBeginning= 0	Seek from the beginning of the file.
	kCurrent= 1	Seek from the current position.
	kEnd= 2	Seek from the end of the file.
Header file:	#include "ara/per/read_accessor.h"	
Description:	Specification of origin used in MovePosition.	

|(RS_PER_00003, RS_AP_00122)

8.3.13 ReadAccessor Class

This section shows the methods available for a `ara::per::ReadAccessor` object obtained from a call to 8.3.11.12, and for the inheriting `ara::per::ReadWriteAccessor` object obtained from a call to 8.3.11.13 or 8.3.11.11.

[SWS_PER_00342] [

Kind:	class
Symbol:	ReadAccessor
Scope:	namespace ara::per





Syntax:	<code>class ReadAccessor {...};</code>
Header file:	<code>#include "ara/per/read_accessor.h"</code>
Description:	<p>ReadAccessor is used to read file data.</p> <p>It provides binary and text mode methods for checking or getting the current byte/character (PeekByte/PeekChar, GetByte/GetChar) methods for reading a section of a binary/text file (ReadBinary/ReadText), a method to read a line of text (ReadLine), and methods for checking and setting the current position in the file (GetPosition, SetPosition, MovePosition, IsEof) and for checking the current size of the file (GetSize).</p>

]([RS_PER_00004](#), [RS_AP_00122](#))

8.3.13.1 ReadAccessor::ReadAccessor

[SWS_PER_00413] [

Kind:	function	
Symbol:	<code>ReadAccessor(ReadAccessor &&ra)</code>	
Scope:	class ara::per::ReadAccessor	
Syntax:	<code>ReadAccessor (ReadAccessor &&ra) noexcept;</code>	
Parameters (in):	ra	The ReadAccessor object to be moved.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	<code>#include "ara/per/read_accessor.h"</code>	
Description:	Move constructor for ReadAccessor.	

]([RS_PER_00004](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00129](#), [RS_AP_00132](#))

[SWS_PER_00415] [

Kind:	function	
Symbol:	<code>ReadAccessor(const ReadAccessor &)</code>	
Scope:	class ara::per::ReadAccessor	
Syntax:	<code>ReadAccessor (const ReadAccessor &)=delete;</code>	
Header file:	<code>#include "ara/per/read_accessor.h"</code>	
Description:	The copy constructor for ReadAccessor shall not be used.	

]([RS_PER_00004](#), [RS_AP_00120](#))

8.3.13.2 ReadAccessor::operator=

[SWS_PER_00414] [

Kind:	function	
Symbol:	operator=(ReadAccessor &&ra)	
Scope:	class ara::per::ReadAccessor	
Syntax:	ReadAccessor& operator= (ReadAccessor &&ra) &noexcept;	
Parameters (in):	ra	The ReadAccessor object to be moved.
Return value:	ReadAccessor &	The moved ReadAccessor object.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/read_accessor.h"	
Description:	Move assignment operator for ReadAccessor.	

]([RS_PER_00004](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00132](#))

[SWS_PER_00416] [

Kind:	function	
Symbol:	operator=(const ReadAccessor &)	
Scope:	class ara::per::ReadAccessor	
Syntax:	ReadAccessor& operator= (const ReadAccessor &)=delete;	
Header file:	#include "ara/per/read_accessor.h"	
Description:	The copy assignment operator for ReadAccessor shall not be used.	

]([RS_PER_00004](#), [RS_AP_00119](#), [RS_AP_00120](#))

8.3.13.3 ReadAccessor::~ReadAccessor

[SWS_PER_00417] [

Kind:	function	
Symbol:	~ReadAccessor()	
Scope:	class ara::per::ReadAccessor	
Syntax:	~ReadAccessor () noexcept;	
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	#include "ara/per/read_accessor.h"	
Description:	Destructor for ReadAccessor.	

]([RS_PER_00004](#), [RS_AP_00120](#), [RS_AP_00129](#), [RS_AP_00132](#), [RS_AP_00134](#))

8.3.13.4 ReadAccessor::PeekChar

[SWS_PER_00167] [

Kind:	function	
Symbol:	PeekChar()	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<char> PeekChar () const noexcept;	
Return value:	ara::core::Result< char >	A Result containing a character. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.
Header file:	#include "ara/per/read_accessor.h"	
Description:	Returns the character at the current position of the file. The current position is not changed.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00132)

8.3.13.5 ReadAccessor::PeekByte

[SWS_PER_00418] [

Kind:	function	
Symbol:	PeekByte()	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<ara::core::Byte> PeekByte () const noexcept;	
Return value:	ara::core::Result< ara::core::Byte >	A Result containing a byte. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.



△

Header file:	#include "ara/per/read_accessor.h"
Description:	Returns the byte at the current position of the file. The current position is not changed.

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00132)

8.3.13.6 ReadAccessor::GetChar

[SWS_PER_00168] [

Kind:	function	
Symbol:	GetChar()	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<char> GetChar () noexcept;	
Return value:	ara::core::Result< char >	A Result containing a character. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.
Header file:	#include "ara/per/read_accessor.h"	
Description:	Returns the character at the current position of the file, advancing the current position. In case of an error, the current position is not changed.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00132)

8.3.13.7 ReadAccessor::GetByte

[SWS_PER_00419] [

Kind:	function	
Symbol:	GetByte()	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<ara::core::Byte> GetByte () noexcept;	
Return value:	ara::core::Result< ara::core::Byte >	A Result containing a byte. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.
Header file:	#include "ara/per/read_accessor.h"	
Description:	Returns the byte at the current position of the file, advancing the current position. In case of an error, the current position is not changed.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00132)

8.3.13.8 ReadAccessor::ReadText

[SWS_PER_00420] [

Kind:	function	
Symbol:	ReadText()	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<ara::core::String> ReadText () noexcept;	
Return value:	ara::core::Result< ara::core::String >	A Result containing a String. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.





Header file:	#include "ara/per/read_accessor.h"
Description:	<p>Reads all remaining characters into a String, starting from the current position.</p> <p>The current position is set to the end of the file.</p> <p>In case of an error, the current position is not changed.</p>

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00132)

[SWS_PER_00165] [

Kind:	function	
Symbol:	ReadText(uint64_t n)	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<ara::core::String> ReadText (uint64_t n) noexcept;	
Parameters (in):	n	Number of characters to read.
Return value:	ara::core::Result< ara::core::String >	A Result containing a String. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.
Header file:	#include "ara/per/read_accessor.h"	
Description:	<p>Reads a number of characters into a String, starting from the current position.</p> <p>The current position is advanced accordingly.</p> <p>If the end of the file is reached, the number of returned characters can be less than the requested number, and the current position is set to the end of the file.</p> <p>In case of an error, the current position is not changed.</p>	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00132)

8.3.13.9 ReadAccessor::ReadBinary

[SWS_PER_00421] [

Kind:	function	
Symbol:	ReadBinary()	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<ara::core::Vector<ara::core::Byte> > ReadBinary () noexcept;	
Return value:	ara::core::Result< ara::core::Vector< ara::core::Byte > >	A Result containing a Vector of Byte. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.
Header file:	#include "ara/per/read_accessor.h"	
Description:	Reads all remaining bytes into a Vector of Byte, starting from the current position. The current position is set to the end of the file. In case of an error, the current position is not changed.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00132)

[SWS_PER_00422] [

Kind:	function	
Symbol:	ReadBinary(uint64_t n)	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<ara::core::Vector<ara::core::Byte> > ReadBinary (uint64_t n) noexcept;	
Parameters (in):	n	Number of bytes to read.
Return value:	ara::core::Result< ara::core::Vector< ara::core::Byte > >	A Result containing a Vector of Byte. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.





Header file:	#include "ara/per/read_accessor.h"
Description:	<p>Reads a number of bytes into a Vector of Byte, starting from the current position.</p> <p>The current position is advanced accordingly.</p> <p>If the end of the file is reached, the number of returned bytes can be less than the requested number, and the current position is set to the end of the file.</p> <p>In case of an error, the current position is not changed.</p>

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00132)

8.3.13.10 ReadAccessor::ReadLine

[SWS_PER_00119] [

Kind:	function	
Symbol:	ReadLine(char delimiter='\n')	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<ara::core::String> ReadLine (char delimiter='\n') noexcept;	
Parameters (in):	delimiter	The character that is used as delimiter.
Return value:	ara::core::Result< ara::core::String >	A Result containing a String. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kIsEof	Returned if the current position is at the end of the file or if the file is empty.
Header file:	#include "ara/per/read_accessor.h"	
Description:	<p>Reads a complete line of characters into a String, advancing the current position accordingly.</p> <p>The end of the line is demarcated by the delimiter, or by "\n" (ASCII 0x10) if that parameter is omitted. The delimiter itself is not included in the returned String.</p> <p>If the end of the file is reached, the remaining characters are returned and the current position is set to the end of the file.</p> <p>In case of an error, the current position is not changed.</p>	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00129, RS_AP_00132)

8.3.13.11 ReadAccessor::GetSize

[SWS_PER_00424] [

Kind:	function	
Symbol:	GetSize()	
Scope:	class ara::per::ReadAccessor	
Syntax:	uint64_t GetSize () const noexcept;	
Return value:	uint64_t	The current size of the file in bytes.
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	#include "ara/per/read_accessor.h"	
Description:	Returns the current size of a file in bytes.	

]([RS_PER_00017](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00127](#), [RS_AP_00128](#), [RS_AP_00129](#), [RS_AP_00132](#))

8.3.13.12 ReadAccessor::GetPosition

[SWS_PER_00162] [

Kind:	function	
Symbol:	GetPosition()	
Scope:	class ara::per::ReadAccessor	
Syntax:	uint64_t GetPosition () const noexcept;	
Return value:	uint64_t	The current position in the file in bytes from the beginning of the file.
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	#include "ara/per/read_accessor.h"	
Description:	Returns the current position relative to the beginning of the file. The returned position may be at the end of the file.	

]([RS_PER_00001](#), [RS_PER_00004](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00132](#))

8.3.13.13 ReadAccessor::SetPosition

[SWS_PER_00163] [

Kind:	function	
Symbol:	SetPosition(uint64_t position)	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<void> SetPosition (uint64_t position) noexcept;	
Parameters (in):	position	Current position in the file in bytes from the beginning of the file.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidPosition	Returned if the given position is beyond the end of the file.
Header file:	#include "ara/per/read_accessor.h"	
Description:	Sets the current position relative to the beginning of the file. In case of an error, the current position is not changed.	

](RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00132)

8.3.13.14 ReadAccessor::MovePosition

[SWS_PER_00164] [

Kind:	function	
Symbol:	MovePosition(Origin origin, int64_t offset)	
Scope:	class ara::per::ReadAccessor	
Syntax:	ara::core::Result<uint64_t> MovePosition (Origin origin, int64_t offset) noexcept;	
Parameters (in):	origin	Starting point from which to move 'offset' bytes.
	offset	Offset in bytes relative to 'origin'. Can be positive in case of kBeginning and kCurrent and negative in case of kCurrent and kEnd. In case of kCurrent, an offset of zero will not change the current position. In case of kEnd, an offset of zero will set the position to the end of the file.
Return value:	ara::core::Result< uint64_t >	A Result containing the new position in bytes from the beginning of the file. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidPosition	Returned if the resulting position is lower than zero or beyond the end of the file.





Header file:	#include "ara/per/read_accessor.h"
Description:	Moves the current position in the file relative to the Origin. In case of an error, the current position is not changed.

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00132)

8.3.13.15 ReadAccessor::IsEof

[SWS_PER_00107] [

Kind:	function	
Symbol:	IsEof()	
Scope:	class ara::per::ReadAccessor	
Syntax:	bool IsEof () const noexcept;	
Return value:	bool	True if the current position is at the end of the file, false otherwise.
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	#include "ara/per/read_accessor.h"	
Description:	Checks if the current position is at end of file.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00132)

8.3.14 ReadWriteAccessor Class

This section shows the methods available for a `ara::per::ReadWriteAccessor` object obtained from a call to 8.3.11.13 or 8.3.11.11.

[SWS_PER_00343] [

Kind:	class
Symbol:	ReadWriteAccessor
Scope:	namespace ara::per
Base class:	ReadAccessor
Syntax:	class ReadWriteAccessor : public ReadAccessor {...};
Header file:	#include "ara/per/read_write_accessor.h"





Description:	ReadWriteAccessor is used to read and write file data. It provides the WriteBinary and WriteText methods featuring a Result for controlled, unformatted writing, and the operator<< method for simple formatted writing. It also provides SyncToFile() to flush the buffer of the operating system to the storage.
---------------------	---

|(RS_PER_00004, RS_AP_00122)

8.3.14.1 ReadWriteAccessor::SyncToFile

[SWS_PER_00122] [

Kind:	function	
Symbol:	SyncToFile()	
Scope:	class ara::per::ReadWriteAccessor	
Syntax:	ara::core::Result<void> SyncToFile () noexcept;	
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption of stored data fails.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the updated file size.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/read_write_accessor.h"	
Description:	Triggers flushing of the current file content to the physical storage.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00128, RS_AP_00127, RS_AP_00129, RS_AP_00132)

8.3.14.2 ReadWriteAccessor::SetFileSize

[SWS_PER_00428] [

Kind:	function	
Symbol:	SetFileSize(uint64_t size)	
Scope:	class ara::per::ReadWriteAccessor	
Syntax:	ara::core::Result<void> SetFileSize (uint64_t size) noexcept;	
Parameters (in):	size	New size of the file.





Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
	PerErrc::kInvalidSize	Returned if the new size is larger than the current size.
Header file:	#include "ara/per/read_write_accessor.h"	
Description:	Reduces the size of the file to 'size', effectively removing the current content of the file beyond this size. The current file position is unchanged if it is lower than 'size', or set to the last valid position in the file otherwise. If 'size' is 0, the current file position will also be set to 0.	

](RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00128, RS_AP_00127, RS_AP_00129, RS_AP_00132)

8.3.14.3 ReadWriteAccessor::WriteText

[SWS_PER_00166] [

Kind:	function	
Symbol:	WriteText(ara::core::StringView s)	
Scope:	class ara::per::ReadWriteAccessor	
Syntax:	ara::core::Result<void> WriteText (ara::core::StringView s) noexcept;	
Parameters (in):	s	A StringView containing the characters to be written.
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the updated file size.
	PerErrc::kNotInitialized	Returned if this method is called after ara::core::Deinitialize.
Header file:	#include "ara/per/read_write_accessor.h"	





Description:	<p>Writes the content of a <code>StringView</code> to the file.</p> <p>The time when the content is persisted depends on the implementation of Persistency. <code>SyncToFile</code> can be used to force Persistency to persist the file content.</p> <p>In case of an error, the file content might be corrupted, and the current position might or might not have changed.</p> <p>The expected state of the file for each supported error can be expected to be as follows: <code>kPhysicalStorageFailure</code>: The state of the file is unknown. It could have been entirely destroyed. <code>kEncryptionFailed</code>: The content of the file and the current position will have been updated, but could not be persisted. The persisted file will reflect an older version of the file. <code>kOutOfStorageSpace</code>: The content of the file will have been updated, but the part of the operation that exceeded the quota will have been discarded. The current position will be at the end of the file. <code>kNotInitialized</code>: The content of the file and the current position have not been changed.</p>
---------------------	---

]([RS_PER_00001](#), [RS_PER_00004](#), [RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00127](#), [RS_AP_00132](#))

8.3.14.4 ReadWriteAccessor::WriteBinary

[SWS_PER_00423] [

Kind:	function	
Symbol:	<code>WriteBinary(ara::core::Span< const ara::core::Byte > b)</code>	
Scope:	class <code>ara::per::ReadWriteAccessor</code>	
Syntax:	<code>ara::core::Result<void> WriteBinary (ara::core::Span< const ara::core::Byte > b) noexcept;</code>	
Parameters (in):	<code>b</code>	A Span of <code>Byte</code> containing the bytes to be written.
Return value:	<code>ara::core::Result< void ></code>	A Result of <code>void</code> . In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	<code>PerErrc::kPhysicalStorageFailure</code>	Returned if access to the storage fails.
	<code>PerErrc::kEncryptionFailed</code>	Returned if the encryption or decryption of stored data fails.
	<code>PerErrc::kOutOfStorageSpace</code>	Returned if the available storage space is insufficient for the updated file size.
	<code>PerErrc::kNotInitialized</code>	Returned if this method is called after <code>ara::core::Deinitialize</code> .
Header file:	#include "ara/per/read_write_accessor.h"	
Description:	<p>Writes the content of a Span of <code>Byte</code> to the file.</p> <p>The time when the content is persisted depends on the implementation of Persistency. <code>SyncToFile</code> can be used to force Persistency to persist the file content.</p> <p>In case of an error, the file content might be corrupted, and the current position might or might not have changed.</p> <p>The expected state of the file for each supported error can be expected to be as follows: <code>kPhysicalStorageFailure</code>: The state of the file is unknown. It could have been entirely destroyed.</p>	



△

	<p style="text-align: center;">△</p> <p>kEncryptionFailed: The content of the file and the current position will have been updated, but could not be persisted. The persisted file will reflect an older version of the file. kOutOfStorageSpace: The content of the file will have been updated, but the part of the operation that exceeded the quota will have been discarded. The current position will be at the end of the file. kNotInitialized: The content of the file and the current position have not been changed.</p>
--	---

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00132)

8.3.14.5 ReadWriteAccessor::operator<<

[SWS_PER_00125] [

Kind:	function	
Symbol:	operator<<(ara::core::StringView s)	
Scope:	class ara::per::ReadWriteAccessor	
Syntax:	ReadWriteAccessor& operator<< (ara::core::StringView s) noexcept;	
Parameters (in):	s	The StringView containing the characters to be written.
Return value:	ReadWriteAccessor &	The ReadWriteAccessor object.
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	#include "ara/per/read_write_accessor.h"	
Description:	Writes the content of a StringView to the file. This operator is just a comfort feature for non-safety critical applications. If an error occurs during this operation, it is silently ignored.	

|(RS_PER_00001, RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00127, RS_AP_00132)

8.4 Update and Removal of Persistent Data

The [Persistency](#) cluster allows for updating and resetting/removing all installed [Key-Value Storages](#) and [File Storages](#). And the application may also register a callback function that is called after the update of any [Key-Value Storage](#) and [File Storage](#).

8.4.1 RegisterApplicationDataUpdateCallback

[SWS_PER_00356] [

Kind:	function	
Symbol:	RegisterApplicationDataUpdateCallback(std::function< void(const ara::core::InstanceSpecifier &storage, ara::core::String version)> appDataUpdateCallback)	
Scope:	namespace ara::per	
Syntax:	void RegisterApplicationDataUpdateCallback (std::function< void(const ara::core::InstanceSpecifier &storage, ara::core::String version)> appDataUpdateCallback) noexcept;	
Parameters (in):	appDataUpdateCallback	The callback function to be called by Persistency after an update of persistent data took place. The function will be called with the shortName path of an updated Key-Value Storage or File Storage, and with the Executable version with which the Persistency was last accessed.
Return value:	None	
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	#include "ara/per/update.h"	
Description:	<p>Registers an application data update callback with Persistency.</p> <p>The provided callback function will be called by Persistency if an update of stored application data might be necessary. This decision is based on the Executable versions.</p> <p>The version that last accessed Persistency is provided as an argument to the callback, as well as the InstanceSpecifier referring to the updated Key-Value Storage or File Storage. Based on this information, the application can decide which updates are actually necessary, e.g. a migration from any older version could be supported, with different steps required for each of these.</p> <p>The provided function will be called from the context of UpdatePersistency(), OpenKeyValueStorage(), or OpenFileStorage().</p>	

]([RS_PER_00013](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00127](#), [RS_AP_00132](#))

8.4.2 UpdatePersistency

[SWS_PER_00357] [

Kind:	function	
Symbol:	UpdatePersistency()	
Scope:	namespace ara::per	
Syntax:	ara::core::Result<void> UpdatePersistency () noexcept;	
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.
Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails during the update operation.
	PerErrc::kIntegrityCorrupted	Returned if stored data cannot be read because the structural integrity is corrupted.
	PerErrc::kValidationFailed	Returned if the validity of stored data cannot be ensured.
	PerErrc::kEncryptionFailed	Returned if the encryption or decryption of stored data fails during the update operation.
	PerErrc::kResourceBusy	Returned if ResetPersistency is currently being executed, or if RecoverKeyValueStorage or Reset KeyValueStorage is currently being executed for any Key-Value Storage, or if RecoverAllFiles or ResetAll Files is currently being executed for any File Storage, or a SharedHandle of a Key-Value Storage or a File Storage is currently in use.
	PerErrc::kOutOfStorageSpace	Returned if the available storage space is insufficient for the update.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/update.h"	
Description:	Updates all Persistency File Storages and Key-Value Storages after a new manifest was installed. This method can be used to update the persistent data of the application during verification phase.	

[\]\(RS_PER_00013, RS_AP_00119, RS_AP_00120, RS_AP_00127, RS_AP_00128, RS_AP_00132\)](#)

8.4.3 ResetPersistency

[SWS_PER_00358] [

Kind:	function	
Symbol:	ResetPersistency()	
Scope:	namespace ara::per	
Syntax:	ara::core::Result<void> ResetPersistency () noexcept;	
Return value:	ara::core::Result< void >	A Result of void. In case of an error, it contains any of the errors defined below, or a vendor specific error.





Exception Safety:	noexcept	
Thread Safety:	no	
Errors:	PerErrc::kPhysicalStorageFailure	Returned if access to the storage fails during the reset operation.
	PerErrc::kResourceBusy	Returned if UpdatePersistency is currently being executed, or if RecoverKeyValueStorage or ResetKeyValueStorage is currently being executed for any Key-Value Storage, or if RecoverAllFiles or ResetAllFiles is currently being executed for any File Storage, or a SharedHandle of a Key-Value Storage or a File Storage is currently in use.
	PerErrc::kNotInitialized	Returned if this function is called before ara::core::Initialize or after ara::core::Deinitialize.
Header file:	#include "ara/per/update.h"	
Description:	Resets all File Storages and Key-Value Storages by entirely removing their content. The File Storages and Key-Value Storages will be re-created when OpenFileStorage or OpenKeyValueStorage is called next time.	

|(RS_PER_00009, RS_PER_00015, RS_AP_00119, RS_AP_00120, RS_AP_00127, RS_AP_00128, RS_AP_00132)

8.5 Redundancy Handling

The *Persistency* supports redundant storage of *Key-Value Storages*, *File Storages*, and the *Key-Value Pairs* and files contained in these. An error in the stored data that can be fixed using the redundantly stored data will be implicitly fixed when the *Key-Value Storage* or *File Storage* is accessed, an error is only returned by *Persistency* when the redundancy fails. To be able to track whether storage errors have been fixed using the available redundancy, the application can register the following callback function.

8.5.1 RecoveryReportKind

[SWS_PER_00432] [

Kind:	enumeration	
Symbol:	RecoveryReportKind	
Scope:	namespace ara::per	
Underlying type:	uint32_t	
Syntax:	enum class RecoveryReportKind : uint32_t {...};	
	kKeyValueStorageRecoveryFailed= 1	A Key-Value Storage was corrupted, an insufficient number of valid copies existed. storage contains the short-name path of the Key-Value Storage, reportedElements is empty, reportedInstances contains the indices of the affected Key-Value Storage copies.
	kKeyValueStorageRecovered= 2	A Key-Value Storage was corrupted, but a sufficient number of valid copies existed. storage contains the short-name path of the Key-Value Storage, reportedElements is empty, reportedInstances contains the indices of the affected Key-Value Storage copies.
	kKeyRecoveryFailed= 3	A set of Key-Value Pairs was corrupted, an insufficient number of valid copies existed. storage contains the short-name path of the Key-Value Storage, reportedElements contains the list of affected keys, reportedInstances contains the indices of the affected Key-Value Storage or key copies.
	kKeyRecovered= 4	A set of Key-Value Pairs was corrupted, but a sufficient number of valid copies existed. storage contains the short-name path of the Key-Value Storage, reportedElements contains the list of affected keys, reportedInstances contains the indices of the affected Key-Value Storage or key copies.
	kFileStorageRecoveryFailed= 5	A File Storage was corrupted, an insufficient number of valid copies existed. storage contains the short-name path of the File Storage, reportedElements is empty, reportedInstances contains the indices of the affected File Storage copies.





	kFileStorageRecovered= 6	A File Storage was corrupted, but a sufficient number of valid copies existed. storage contains the short-name path of the File Storage, reportedElements is empty, reportedInstances contains the indices of the affected File Storage copies.
	kFileRecoveryFailed= 7	A set of files was corrupted, an insufficient number of valid copies existed. storage contains the short-name path of the File Storage, reportedElements contains the list of affected file names, reportedInstances contains the indices of the affected File Storage or file copies.
	kFileRecovered= 8	A set of files was corrupted, but a sufficient number of valid copies existed. storage contains the short-name path of the File Storage, reportedElements contains the list of affected file names, reportedInstances contains the indices of the affected File Storage or file copies.
Header file:	#include "ara/per/recovery.h"	
Description:	Defines the reported recovery actions.	

](RS_PER_00008, RS_AP_00122)

8.5.2 RegisterRecoveryReportCallback

[SWS_PER_00433] [

Kind:	function	
Symbol:	RegisterRecoveryReportCallback(std::function< void(const ara::core::InstanceSpecifier &storage, ara::per::recoveryReportKind recoveryReportKind, ara::core::Vector< ara::core::String > reportedElements, ara::core::Vector< uint8 > reportedInstances)> recoveryReportCallback)	
Scope:	namespace ara::per	
Syntax:	void RegisterRecoveryReportCallback (std::function< void(const ara::core::InstanceSpecifier &storage, ara::per::recoveryReportKind recoveryReportKind, ara::core::Vector< ara::core::String > reportedElements, ara::core::Vector< uint8 > reportedInstances)> recoveryReportCallback) noexcept;	
Parameters (in):	recoveryReportCallback	The callback function to be called by Persistency to report errors in the stored data that were corrected using the available redundancy. The function will be called with the shortName path of the affected Key-Value Storage or File Storage in storage and information on what has been corrected, placed in the parameters recoveryReportKind, reportedElements, and reportedInstances.
Return value:	None	
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	#include "ara/per/recovery.h"	





Description:	Register a recovery reporting callback with persistency. This callback can be used in safety-aware applications to detect actions of the Persistency that are related to the correctness of the persisted data and the reliability of the storage.
---------------------	---

]([RS_PER_00008](#), [RS_AP_00120](#), [RS_AP_00121](#), [RS_AP_00127](#), [RS_AP_00132](#))

8.6 Handle Classes

This section contains the definition of the handle classes used in the API of the *Persistency* cluster. The `ara::per::SharedHandle` (templated via `typenameT`) is used to provide shared access to either a `ara::per::KeyValueStorage` or a `ara::per::FileStorage`, while the `ara::per::UniqueHandle` (templated via `typenameT`) is used to provide non-shared access to either a `ara::per::ReadAccessor` or a `ara::per::ReadWriteAccessor` to a *File Storage*.

8.6.1 SharedHandle Class

[SWS_PER_00362] [

Kind:	class
Symbol:	SharedHandle
Scope:	namespace ara::per
Syntax:	<pre>template <typename T> class SharedHandle final {...};</pre>
Template param:	typename T -
Header file:	#include "ara/per/shared_handle.h"
Description:	<p>Handle to a File Storage or Key-Value Storage.</p> <p>A SharedHandle is returned by the functions <code>OpenFileStorage()</code> and <code>OpenKeyValueStorage()</code> and can be passed between threads as needed.</p> <p>It provides the abstraction that is necessary to allow thread-safe implementation of <code>OpenFileStorage()</code> and <code>OpenKeyValueStorage()</code>.</p>

]([RS_PER_00002](#), [RS_AP_00122](#))

8.6.1.1 SharedHandle::SharedHandle

[SWS_PER_00367] [

Kind:	function
Symbol:	SharedHandle(SharedHandle &&sh)
Scope:	class ara::per::SharedHandle
Syntax:	<code>SharedHandle (SharedHandle &&sh) noexcept;</code>
Parameters (in):	sh The SharedHandle object to be moved.
Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	#include "ara/per/shared_handle.h"





Description:	Move constructor for SharedHandle. The source handle object is invalidated and cannot be used anymore. The operator bool() shall be used to check the state of a handle object before using any other operators of the handle object.
---------------------	---

|(RS_PER_00004, RS_AP_00120, RS_AP_00121, RS_AP_00129, RS_AP_00132)

[SWS_PER_00369] [

Kind:	function	
Symbol:	SharedHandle(const SharedHandle &sh)	
Scope:	class ara::per::SharedHandle	
Syntax:	SharedHandle (const SharedHandle &sh) noexcept;	
Parameters (in):	sh	The SharedHandle object to be copied.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/shared_handle.h"	
Description:	Copy constructor for SharedHandle.	

|(RS_PER_00004, RS_AP_00120, RS_AP_00121, RS_AP_00129, RS_AP_00132)

8.6.1.2 SharedHandle::operator=

[SWS_PER_00368] [

Kind:	function	
Symbol:	operator=(SharedHandle &&sh)	
Scope:	class ara::per::SharedHandle	
Syntax:	SharedHandle& operator= (SharedHandle &&sh) &noexcept;	
Parameters (in):	sh	The SharedHandle object to be moved.
Return value:	SharedHandle &	The moved SharedHandle object.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/shared_handle.h"	
Description:	Move assignment operator for SharedHandle. The source handle object is invalidated and cannot be used anymore. The operator bool() shall be used to check the state of a handle object before using any other operators of the handle object.	

|(RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00132)

[SWS_PER_00370] [

Kind:	function	
Symbol:	operator=(const SharedHandle &sh)	
Scope:	class ara::per::SharedHandle	
Syntax:	SharedHandle& operator= (const SharedHandle &sh) &noexcept;	
Parameters (in):	sh	The SharedHandle object to be copied.
Return value:	SharedHandle &	The moved SharedHandle object.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/shared_handle.h"	
Description:	Copy assignment operator for SharedHandle.	

|(RS_PER_00004, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00132)

8.6.1.3 SharedHandle::operator bool

[SWS_PER_00398] [

Kind:	function	
Symbol:	operator bool()	
Scope:	class ara::per::SharedHandle	
Syntax:	explicit operator bool () const noexcept;	
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/shared_handle.h"	
Description:	Handle state. True if the handle represents a valid object of the templated class, False if the handle is empty (e.g. after a move operation). Using other operators than bool() of an empty handle will result in undefined behavior.	

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

8.6.1.4 SharedHandle::Operator->

[SWS_PER_00363] [

Kind:	function	
Symbol:	operator->()	
Scope:	class ara::per::SharedHandle	
Syntax:	T* operator-> () noexcept;	



△

Return value:	T *	–
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/shared_handle.h"	
Description:	Non-constant arrow operator.	

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

[SWS_PER_00364] [

Kind:	function	
Symbol:	operator->()	
Scope:	class ara::per::SharedHandle	
Syntax:	const T* operator-> () const noexcept;	
Return value:	const T *	–
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/shared_handle.h"	
Description:	Constant arrow operator.	

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

8.6.1.5 SharedHandle::Operator*

[SWS_PER_00402] [

Kind:	function	
Symbol:	operator*()	
Scope:	class ara::per::SharedHandle	
Syntax:	T& operator* () noexcept;	
Return value:	T &	–
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/shared_handle.h"	
Description:	Non-constant dereference operator.	

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

[SWS_PER_00403] [

Kind:	function
Symbol:	operator*()
Scope:	class ara::per::SharedHandle
Syntax:	const T& operator* () const noexcept;
Return value:	const T & -
Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	#include "ara/per/shared_handle.h"
Description:	Constant dereference operator.

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

8.6.2 UniqueHandle Class

[SWS_PER_00359] [

Kind:	class
Symbol:	UniqueHandle
Scope:	namespace ara::per
Syntax:	template <typename T> class UniqueHandle final {...};
Template param:	typename T -
Header file:	#include "ara/per/unique_handle.h"
Description:	Handle to a ReadAccessor or ReadWriteAccessor. A UniqueHandle is returned by the functions OpenFileReadOnly(), OpenFileWriteOnly(), and OpenFileReadWrite().

|(RS_PER_00002, RS_AP_00122)

8.6.2.1 UniqueHandle::UniqueHandle

[SWS_PER_00371] [

Kind:	function
Symbol:	UniqueHandle(UniqueHandle &&uh)
Scope:	class ara::per::UniqueHandle
Syntax:	UniqueHandle (UniqueHandle &&uh) noexcept;
Parameters (in):	uh The UniqueHandle object to be moved.
Exception Safety:	noexcept
Thread Safety:	re-entrant



△

Header file:	#include "ara/per/unique_handle.h"
Description:	Move constructor for UniqueHandle. The source handle object is invalidated and cannot be used anymore. The operator bool() shall be used to check the state of a handle object before using any other operators of the handle object.

](RS_PER_00002, RS_AP_00120, RS_AP_00121, RS_AP_00129, RS_AP_00132)

[SWS_PER_00373] [

Kind:	function
Symbol:	UniqueHandle(const UniqueHandle &)
Scope:	class ara::per::UniqueHandle
Syntax:	UniqueHandle (const UniqueHandle &)=delete;
Header file:	#include "ara/per/unique_handle.h"
Description:	The copy constructor for UniqueHandle shall not be used.

](RS_PER_00002, RS_AP_00120)

8.6.2.2 UniqueHandle::operator=

[SWS_PER_00372] [

Kind:	function	
Symbol:	operator=(UniqueHandle &&uh)	
Scope:	class ara::per::UniqueHandle	
Syntax:	UniqueHandle& operator= (UniqueHandle &&uh) &noexcept;	
Parameters (in):	uh	The UniqueHandle object to be moved.
Return value:	UniqueHandle &	The moved UniqueHandle object.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/unique_handle.h"	
Description:	Move assignment operator for UniqueHandle. The source handle object is invalidated and cannot be used anymore. The operator bool() shall be used to check the state of a handle object before using any other operators of the handle object.	

](RS_PER_00002, RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00132)

[SWS_PER_00374] [

Kind:	function
Symbol:	operator=(const UniqueHandle &)
Scope:	class ara::per::UniqueHandle
Syntax:	UniqueHandle& operator= (const UniqueHandle &)=delete;
Header file:	#include "ara/per/unique_handle.h"
Description:	The copy assignment operator for UniqueHandle shall not be used.

|(RS_PER_00002, RS_AP_00120)

8.6.2.3 UniqueHandle::operator bool

[SWS_PER_00399] [

Kind:	function
Symbol:	operator bool()
Scope:	class ara::per::UniqueHandle
Syntax:	explicit operator bool () const noexcept;
Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	#include "ara/per/unique_handle.h"
Description:	Handle state. True if the handle represents a valid object of the templated class, False if the handle is empty (e.g. after a move operation). Using other operators than bool() of an empty handle will result in undefined behavior.

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

8.6.2.4 UniqueHandle::Operator->

[SWS_PER_00360] [

Kind:	function
Symbol:	operator->()
Scope:	class ara::per::UniqueHandle
Syntax:	T* operator-> () noexcept;
Return value:	T * -
Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	#include "ara/per/unique_handle.h"



△

Description:	Non-constant arrow operator.
---------------------	------------------------------

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

[SWS_PER_00361] [

Kind:	function
Symbol:	operator->()
Scope:	class ara::per::UniqueHandle
Syntax:	const T* operator-> () const noexcept;
Return value:	const T * -
Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	#include "ara/per/unique_handle.h"
Description:	Constant arrow operator.

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

8.6.2.5 UniqueHandle::Operator*

[SWS_PER_00400] [

Kind:	function
Symbol:	operator*()
Scope:	class ara::per::UniqueHandle
Syntax:	T& operator* () noexcept;
Return value:	T & -
Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	#include "ara/per/unique_handle.h"
Description:	Non-constant dereference operator.

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

[SWS_PER_00401] [

Kind:	function	
Symbol:	operator*()	
Scope:	class ara::per::UniqueHandle	
Syntax:	const T& operator* () const noexcept;	
Return value:	const T &	-
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/unique_handle.h"	
Description:	Constant dereference operator.	

|(RS_PER_00001, RS_PER_00002, RS_PER_00003, RS_AP_00119, RS_AP_00129, RS_AP_00132)

8.7 Errors

The `Persistency` cluster implements an error handling based on `ara::core::-`Result. The errors supported by the `Persistency` cluster are listed in section 8.7.1.

8.7.1 PerErrc

[SWS_PER_00311] [

Kind:	enumeration	
Symbol:	PerErrc	
Scope:	namespace ara::per	
Underlying type:	ara::core::ErrorDomain::CodeType	
Syntax:	enum class PerErrc : ara::core::ErrorDomain::CodeType {...};	
	kStorageNotFound= 1	The requested Key-Value Storage or File Storage is not configured in the AUTOSAR model.
	kKeyNotFound= 2	The provided key cannot be not found in the Key-Value Storage.
	kIllegalWriteAccess= 3	Opening a file for writing or changing, or synchronizing a key failed, because the storage is configured read-only.
	kPhysicalStorageFailure= 4	An error occurred when accessing the physical storage, e.g. because of a corrupted file system or corrupted hardware, or because of insufficient access rights.
	kIntegrityCorrupted= 5	The structural integrity of the storage could not be established. This can happen when the internal structure of a Key-Value Storage or the meta data of a File Storage is corrupted.
	kValidationFailed= 6	The validation of redundancy measures failed for a single key, for the whole Key-Value Storage, for a single file, or for the whole File Storage.
	kEncryptionFailed= 7	The encryption or decryption failed for a single key, for the whole Key-Value Storage, for a single file, or for the whole File Storage.
	kDataTypeMismatch= 8	The provided data type does not match the stored data type.
	kInitValueNotAvailable= 9	The operation could not be performed because no initial value is available.
	kResourceBusy= 10	The operation could not be performed because the resource is currently busy.
	kOutOfStorageSpace= 12	The allocated storage quota was exceeded.
	kFileNotFound= 13	The requested file cannot be not found in the File Storage.
	kNotInitialized= 14	A function of Persistency or a method of one of its classes was called before <code>ara::core::Initialize()</code> or after <code>ara::core::Deinitialize()</code> .
	kInvalidPosition= 15	<code>SetPosition</code> tried to move to a position that is not reachable (i.e. which is smaller than zero or greater than the current size of the file).





	kIsEof= 16	The application tried to read from the end of the file or from an empty file.
	kInvalidOpenMode= 17	Opening a file failed because the requested combination of OpenModes is invalid.
	kInvalidSize= 18	SetFileSize tried to set a new size that is bigger than the current file size.
Header file:	#include "ara/per/per_error_domain.h"	
Description:	Defines the errors for Persistency. The enumeration values 0 - 255 are reserved for AUTOSAR assigned errors, the stack provider is free to define additional errors starting from 256.	

]([RS_AP_00122](#), [RS_AP_00127](#))

8.7.2 GetPerDomain

[SWS_PER_00352] [

Kind:	function	
Symbol:	GetPerDomain()	
Scope:	namespace ara::per	
Syntax:	constexpr const ara::core::ErrorDomain& GetPerDomain () noexcept;	
Return value:	const ara::core::ErrorDomain &	The global PerErrorDomain object.
Exception Safety:	noexcept	
Thread Safety:	re-entrant	
Header file:	#include "ara/per/per_error_domain.h"	
Description:	Returns the global PerErrorDomain object.	

]([RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00132](#))

8.7.3 MakeErrorCode

[SWS_PER_00351] [

Kind:	function	
Symbol:	MakeErrorCode(PerErrc code, ara::core::ErrorDomain::SupportDataType data)	
Scope:	namespace ara::per	
Syntax:	constexpr ara::core::ErrorCode MakeErrorCode (PerErrc code, ara::core::ErrorDomain::SupportDataType data) noexcept;	
Parameters (in):	code	Error code number.
	data	Vendor defined data associated with the error.
Return value:	ara::core::ErrorCode	An ErrorCode object.





Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	#include "ara/per/per_error_domain.h"
Description:	Creates an error code.

|(RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00132)

8.7.4 PerException Class

[SWS_PER_00354] [

Kind:	class
Symbol:	PerException
Scope:	namespace ara::per
Base class:	ara::core::Exception
Syntax:	<code>class PerException : public Exception {...};</code>
Header file:	#include "ara/per/per_error_domain.h"
Description:	Exception type thrown by Persistency classes.

|(RS_AP_00122, RS_AP_00127)

8.7.4.1 PerException::PerException

[SWS_PER_00355] [

Kind:	function
Symbol:	PerException(ara::core::ErrorCode errorCode)
Scope:	class ara::per::PerException
Syntax:	<code>explicit PerException (ara::core::ErrorCode errorCode) noexcept;</code>
Parameters (in):	errorCode The error code.
Exception Safety:	noexcept
Header file:	#include "ara/per/per_error_domain.h"
Description:	Construct a new Persistency exception object containing an error code.

|(RS_AP_00120, RS_AP_00121, RS_AP_00132)

8.7.5 PerErrorDomain Class

The error handling requires an `ara::core::ErrorDomain`, which can be used to check the errors returned via `ara::core::Result`.

[SWS_PER_00312] [

Kind:	class
Symbol:	PerErrorDomain
Scope:	namespace ara::per
Base class:	ara::core::ErrorDomain
Syntax:	<code>class PerErrorDomain final : public ErrorDomain {...};</code>
Unique ID:	0x8000'0000'0000'0101
Header file:	<code>#include "ara/per/per_error_domain.h"</code>
Description:	Defines the error domain for Persistency.

]([RS_AP_00122](#), [RS_AP_00127](#))

8.7.5.1 PerErrorDomain::Errc

[SWS_PER_00411] [

Kind:	type alias
Symbol:	Errc
Scope:	class ara::per::PerErrorDomain
Derived from:	PerErrc
Syntax:	<code>using Errc = PerErrc;</code>
Header file:	<code>#include "ara/per/per_error_domain.h"</code>
Description:	Alias for the error code value enumeration.

]([RS_AP_00122](#))

8.7.5.2 PerErrorDomain::Exception

[SWS_PER_00412] [

Kind:	type alias
Symbol:	Exception
Scope:	class ara::per::PerErrorDomain
Derived from:	PerException
Syntax:	<code>using Exception = PerException;</code>
Header file:	<code>#include "ara/per/per_error_domain.h"</code>
Description:	Alias for the exception base class.

]([RS_AP_00122](#))

8.7.5.3 PerErrorDomain::PerErrorDomain

[SWS_PER_00313] [

Kind:	function
Symbol:	PerErrorDomain()
Scope:	class ara::per::PerErrorDomain
Syntax:	PerErrorDomain () noexcept;
Exception Safety:	noexcept
Thread Safety:	no
Header file:	#include "ara/per/per_error_domain.h"
Description:	Creates a PerErrorDomain instance.

]([RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00132](#))

8.7.5.4 PerErrorDomain::Name

[SWS_PER_00314] [

Kind:	function
Symbol:	Name()
Scope:	class ara::per::PerErrorDomain
Syntax:	const char* Name () const noexcept override;
Return value:	const char * The name of the error domain.
Exception Safety:	noexcept
Thread Safety:	re-entrant
Header file:	#include "ara/per/per_error_domain.h"
Description:	Returns the name of the error domain.

]([RS_AP_00119](#), [RS_AP_00120](#), [RS_AP_00132](#))

[SWS_PER_00353] [PerErrorDomain::Name shall return the NUL-terminated string "Per".]([RS_PER_00001](#))

8.7.5.5 PerErrorDomain::Message

[SWS_PER_00315] [

Kind:	function
Symbol:	Message(CodeType errorCode)
Scope:	class ara::per::PerErrorDomain



△

Syntax:	<code>const char* Message (CodeType errorCode) const noexcept override;</code>	
Parameters (in):	<code>errorCode</code>	The error code number.
Return value:	<code>const char *</code>	The message associated with the error code.
Exception Safety:	noexcept	
Thread Safety:	no	
Header file:	<code>#include "ara/per/per_error_domain.h"</code>	
Description:	Returns the message associated with the error code.	

|(RS_AP_00119, RS_AP_00120, RS_AP_00121, RS_AP_00132)

8.7.5.6 PerErrorDomain::ThrowAsException

[SWS_PER_00350] [

Kind:	function	
Symbol:	<code>ThrowAsException(const ara::core::ErrorCode &errorCode)</code>	
Scope:	class <code>ara::per::PerErrorDomain</code>	
Syntax:	<code>void ThrowAsException (const ara::core::ErrorCode &errorCode) const override;</code>	
Parameters (in):	<code>errorCode</code>	The error to throw.
Return value:	None	
Thread Safety:	no	
Header file:	<code>#include "ara/per/per_error_domain.h"</code>	
Description:	Throws the exception associated with the error code.	

|(RS_AP_00120, RS_AP_00121)

9 Service Interfaces

The [Persistency](#) cluster does not provide any service interfaces via `ara::com`.

A Mentioned Class Tables

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.

Class	AdaptiveApplicationSwComponentType			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::ApplicationStructure			
Note	This meta-class represents the ability to support the formal modeling of application software on the AUTOSAR adaptive platform. Consequently, it shall only be used on the AUTOSAR adaptive platform. Tags: atp.Status=draft atp.recommendedPackage=AdaptiveApplicationSwComponentTypes			
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, SwComponentType			
Attribute	Type	Mult.	Kind	Note
internalBehavior	AdaptiveSwcInternalBehavior	0..1	aggr	This aggregation represents the internal behavior of the AdaptiveApplicationSwComponentType for the AUTOSAR adaptive platform. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=internalBehavior.shortName, internalBehavior.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=preCompileTime

Table A.1: AdaptiveApplicationSwComponentType

Class	CplusplusImplementationDataType (abstract)			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::CplusplusImplementationDataType			
Note	This meta-class represents the way to specify a reusable data type definition taken as a the basis for a C++ language binding Tags: atp.Status=draft			
Base	ARElement, ARObject, AbstractImplementationDataType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, CplusplusImplementationDataTypeContextTarget, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Subclasses	CustomCplusplusImplementationDataType, StdCplusplusImplementationDataType			
Attribute	Type	Mult.	Kind	Note
arraySize	PositiveInteger	0..1	attr	This attribute can be used to specify the array size if the enclosing CplusplusImplementationDataType has array semantics. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
headerFile	String	0..1	attr	Configuration of the Header File with the custom class declaration.
namespace (ordered)	SymbolProps	*	aggr	This aggregation allows for the definition an own namespace for the enclosing CplusplusImplementationDataType. Tags: atp.Status=draft





Class	CppImplementationDataType (abstract)			
subElement (ordered)	CppImplementationDataTypeElement	*	aggr	This represents the collection of sub-elements of the enclosing CppImplementationDataType Tags: atp.Status=draft
template Argument (ordered)	CppTemplateArgument	*	aggr	This aggregation allows for the specification of properties of template arguments Tags: atp.Status=draft
typeEmitter	NameToken	0..1	attr	This attribute can be taken to control how the respective CppImplementationDataType is contributed to the language binding.
typeReference	CppImplementationDataType	0..1	ref	This reference shall be defined to define a type reference (a.k.a. typedef). Tags: atp.Status=draft

Table A.2: CppImplementationDataType

Class	CryptoKeySlot			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::CryptoDeployment			
Note	This meta-class represents the ability to define a concrete key to be used for a crypto operation. Tags: atp.ManifestKind=MachineManifest atp.Status=draft			
Base	<i>ARObject, Identifiable, MultilanguageReferrable, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
allocateShadowCopy	Boolean	0..1	attr	This attribute defines whether a shadow copy of this Key Slot shall be allocated to enable rollback of a failed Key Slot update campaign (see interface BeginTransaction).
cryptoAlgId	String	0..1	attr	This attribute defines a crypto algorithm restriction (kAlgId Any means without restriction). The algorithm can be specified partially: family & length, mode, padding. Future Crypto Providers can support some crypto algorithms that are not well known/ standardized today, therefore AUTOSAR doesn't provide a concrete list of crypto algorithms' identifiers and doesn't suppose usage of numerical identifiers. Instead of this a provider supplier should provide string names of supported algorithms in accompanying documentation. The name of a crypto algorithm shall follow the rules defined in the specification of cryptography for Adaptive Platform.
cryptoObjectType	CryptoObjectTypeEnum	0..1	attr	Object type that can be stored in the slot. If this field contains "Undefined" then mSlotCapacity must be provided and larger then 0.
keySlotAllowedModification	CryptoKeySlotAllowedModification	0..1	aggr	Restricts how this keySlot may be used Tags: atp.Status=draft
keySlotContentAllowedUsage	CryptoKeySlotContentAllowedUsage	*	aggr	Restriction of allowed usage of a key stored to the slot. Tags: atp.Status=draft
slotCapacity	PositiveInteger	0..1	attr	Capacity of the slot in bytes to be reserved by the stack vendor. One use case is to define this value in case that the cryptoObjectType is undefined and the slot size can not be deduced from cryptoObjectType and cryptoAlgId. "0" means slot size can be deduced from cryptoObjectType and cryptoAlgId.





Class		CryptoKeySlot		
slotType	CryptoKeySlotType Enum	0..1	attr	This attribute defines whether the keySlot is exclusively used by the Application; or whether it is used by Stack Services and managed by a Key Manager Application.

Table A.3: CryptoKeySlot

Enumeration		CryptoKeySlotUsageEnum		
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::CryptoDeployment			
Note	This enum defines the possible roles of the keySlotUsage. Tags: atp.Status=draft			
Literal	Description			
encryption	Key slot usage for encryption Tags: atp.EnumerationLiteralIndex=1			
verification	Key slot usage for verification Tags: atp.EnumerationLiteralIndex=0			

Table A.4: CryptoKeySlotUsageEnum

Class		Executable		
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::ApplicationStructure			
Note	This meta-class represents an executable program. Tags: atp.Status=draft atp.recommendedPackage=Executables			
Base	<i>ARElement, ARObject, AtpClassifier, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
buildType	BuildTypeEnum	0..1	attr	This attribute describes the buildType of a module and/or platform implementation.
loggingBehavior	LoggingBehaviorEnum	0..1	attr	This attribute indicates the intended logging behavior of the enclosing Executable.
minimumTimer Granularity	TimeValue	0..1	attr	This attribute describes the minimum timer resolution (TimeValue of one tick) that is required by the Executable. Tags: atp.Status=draft
reporting Behavior	ExecutionState ReportingBehavior Enum	0..1	attr	this attribute controls the execution state reporting behavior of the enclosing Executable.
rootSw Component Prototype	RootSwComponent Prototype	0..1	aggr	This represents the root SwCompositionPrototype of the Executable. This aggregation is required (in contrast to a direct reference of a SwComponentType) in order to support the definition of instanceRefs in Executable context. Tags: atp.Status=draft
version	StrongRevisionLabel String	0..1	attr	Version of the executable. Tags: atp.Status=draft

Table A.5: Executable

Class	PPortPrototype			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	Component port providing a certain port interface.			
Base	ARObject, AbstractProvidedPortPrototype, AtpBlueprintable, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, PortPrototype , Referrable			
Attribute	Type	Mult.	Kind	Note
provided Interface	PortInterface	0..1	tref	The interface that this port provides. Stereotypes: isOfType

Table A.6: PPortPrototype

Class	PRPortPrototype			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	This kind of PortPrototype can take the role of both a required and a provided PortPrototype.			
Base	ARObject, AbstractProvidedPortPrototype, AbstractRequiredPortPrototype, AtpBlueprintable, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, PortPrototype , Referrable			
Attribute	Type	Mult.	Kind	Note
provided Required Interface	PortInterface	0..1	tref	This represents the PortInterface used to type the PRPort Prototype Stereotypes: isOfType

Table A.7: PRPortPrototype

Enumeration	PersistencyCollectionLevelUpdateStrategyEnum			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::PortInterface			
Note	This enumeration provides possible values for the update strategy on interface/storage level. Tags: atp.Status=draft			
Literal	Description			
delete	The update strategy is to delete all values on the level of the respective collection. Tags: atp.EnumerationLiteralIndex=1			
keepExisting	The update strategy is to keep the existing values on the level of the respective collection. Tags: atp.EnumerationLiteralIndex=0			

Table A.8: PersistencyCollectionLevelUpdateStrategyEnum

Class	PersistencyDataElement			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::PortInterface			
Note	This meta-class represents the ability to formally specify a piece of data that is subject to persistency in the context of the enclosing PersistencyKeyValueStorageInterface. PersistencyDataElement represents also a key-value pair of the deployed PersistencyKeyValueStorage and provides an initial value. Tags: atp.Status=draft			
Base	ARObject, AtpFeature, AtpPrototype, AutosarDataPrototype, DataPrototype, Identifiable, MultilanguageReferrable, PersistencyInterfaceElement , Referrable			
Attribute	Type	Mult.	Kind	Note





Class	PersistencyDataElement			
-	-	-	-	-

Table A.9: PersistencyDataElement

Class	PersistencyDataRequiredComSpec			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::ComSpec			
Note	This meta-class represents the ability to define port-specific attributes for supporting use cases of data persistency on the required side. Tags: atp.Status=draft			
Base	ARObject, RPortComSpec			
Attribute	Type	Mult.	Kind	Note
dataElement	PersistencyDataElement	1	ref	This reference represents the PersistencyDataElement for which the PersistencyDataRequiredComSpec applies. Tags: atp.Status=draft
initValue	ValueSpecification	0..1	aggr	This aggregation represents the definition of an initial value for the PersistencyDataElement referenced by the enclosing PersistencyDataRequiredComSpec Tags: atp.Status=draft

Table A.10: PersistencyDataRequiredComSpec

Class	PersistencyDeployment (abstract)			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This abstract meta-class serves as a base class for concrete classes representing different aspects of persistency. Tags: atp.Status=draft			
Base	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable , UploadableExclusivePackageElement, UploadablePackageElement			
Subclasses	PersistencyFileStorage , PersistencyKeyValueStorage			
Attribute	Type	Mult.	Kind	Note
maximumAllowedSize	PositiveUnlimitedInteger	0..1	attr	The value of this attribute represents the maximum size allowed at deployment time for the enclosing PersistencyDeployment.
minimumSustainedSize	PositiveInteger	0..1	attr	The value of this attribute represents the minimum size guaranteed at deployment time for the enclosing PersistencyDeployment.
redundancyHandling	PersistencyRedundancyHandling	*	aggr	This aggregation represents the chosen approaches to handle redundancy. Tags: atp.Status=draft
updateStrategy	PersistencyCollectionLevelUpdateStrategyEnum	1	attr	This attribute shall be used to specify the update strategy of the respective PersistencyDeployment as a whole.

Table A.11: PersistencyDeployment

Class	PersistencyDeploymentElement (abstract)			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This abstract meta-class serves as a base class for concrete classes representing different aspects of elements of a PersistencyDeployment. Tags: atp.Status=draft			
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Subclasses	PersistencyFile, PersistencyKeyValuePair			
Attribute	Type	Mult.	Kind	Note
updateStrategy	PersistencyElement LevelUpdateStrategy Enum	0..1	attr	This attribute can be used to specify the update strategy of the respective PersistencyDeploymentElement.

Table A.12: PersistencyDeploymentElement

Class	PersistencyDeploymentElementToCryptoKeySlotMapping			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::CryptoDeployment			
Note	This meta-class represents the ability to define a mapping between the PersistencyDeploymentElement and a CryptoKeySlot. Tags: atp.Status=draft atp.recommendedPackage=FCInteractions			
Base	ARElement, ARObject, CollectableElement, FunctionalClusterInteractsWithFunctionalClusterMapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, UploadablePackageElement			
Attribute	Type	Mult.	Kind	Note
cryptoKeySlot	CryptoKeySlot	0..1	ref	This reference represents the mapped CryptoKeySlot. Tags: atp.Status=draft
keySlotUsage	CryptoKeySlotUsage Enum	0..1	attr	This attribute defines the role of the keySlot assignment.
persistency Deployment Element	PersistencyDeployment Element	0..1	ref	This reference represents the mapped Persistency Deployment. Tags: atp.Status=draft
verificationHash	String	0..1	attr	This attribute defines the hash of the storage used in case of verification.

Table A.13: PersistencyDeploymentElementToCryptoKeySlotMapping

Class	PersistencyDeploymentToCryptoKeySlotMapping			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::CryptoDeployment			
Note	This meta-class represents the ability to define a mapping between the PersistencyDeployment and a CryptoKeySlot. Tags: atp.Status=draft atp.recommendedPackage=FCInteractions			
Base	ARElement, ARObject, CollectableElement, FunctionalClusterInteractsWithFunctionalClusterMapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, UploadablePackageElement			
Attribute	Type	Mult.	Kind	Note
cryptoKeySlot	CryptoKeySlot	0..1	ref	This reference represents the mapped CryptoKeySlot. Tags: atp.Status=draft





Class		PersistencyDeploymentToCryptoKeySlotMapping		
keySlotUsage	CryptoKeySlotUsage Enum	0..1	attr	This attribute defines the role of the keySlot assignment.
persistency Deployment	PersistencyDeployment	1	ref	This reference represents the mapped Persistency Deployment. Tags: atp.Status=draft
verificationHash	String	0..1	attr	This attribute defines the hash of the storage used in case of verification.

Table A.14: PersistencyDeploymentToCryptoKeySlotMapping

Enumeration	PersistencyElementLevelUpdateStrategyEnum
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::PortInterface
Note	This enumeration provides possible values for the update strategy on element level. Tags: atp.Status=draft
Literal	Description
delete	The update strategy is to delete the value of the respective data item. Tags: atp.EnumerationLiteralIndex=2
keepExisting	The update strategy is to keep the existing value of the respective data item. Tags: atp.EnumerationLiteralIndex=1
overwrite	The update strategy is to overwrite the respective data item. Tags: atp.EnumerationLiteralIndex=0

Table A.15: PersistencyElementLevelUpdateStrategyEnum

Class		PersistencyFile		
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This meta-class represents the model of a file as part of the persistency on deployment level. Tags: atp.Status=draft atp.recommendedPackage=PersistencyFiles			
Base	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , PersistencyDeploymentElement , Referrable			
Attribute	Type	Mult.	Kind	Note
contentUri	UriString	0..1	attr	This attribute represents the URI that identifies the initial content of the PersistencyFile.
fileName	String	1	attr	This attribute holds filename part of the storage location for the PersistencyFile, e.g. file on the file system. Tags: atp.Status=draft

Table A.16: PersistencyFile

Class		PersistencyFileElement		
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::PortInterface			
Note	This meta-class has the ability to represent a file at design time such that it is possible to configure the behavior for accessing the represented file at run-time. Tags: atp.Status=draft			





Class	PersistencyFileElement			
Base	<i>ARObject, Identifiable, MultilanguageReferrable, PersistencyInterfaceElement, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
contentUri	UriString	1	attr	This attribute represents the URI that identifies the initial content of the PersistencyFile.
fileName	String	1	attr	This attribute holds filename part of the storage location for the PersistencyFileProxy, e.g. file on the file system.

Table A.17: PersistencyFileElement

Class	PersistencyFileStorage			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This meta-class comes with the ability to define a collection of single files (directory) that creates the deployment-side counterpart to a PortPrototype typed by a PersistencyFileStorageInterface. Tags: atp.Status=draft atp.recommendedPackage=PersistencyFileStorages			
Base	<i>ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PersistencyDeployment, Referrable, UploadableExclusivePackageElement, UploadablePackageElement</i>			
Attribute	Type	Mult.	Kind	Note
file	PersistencyFile	*	aggr	This aggregation represents the collection of files aggregated by the PersistencyFileStorage. Tags: atp.Status=draft
uri	UriString	1	attr	This attribute holds the storage location for the PersistencyFileStorage, e.g. a directory on the file system.

Table A.18: PersistencyFileStorage

Class	PersistencyFileStorageInterface			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::PortInterface			
Note	This meta-class provides the ability to implement a PortInterface for supporting persistency use cases for files. Tags: atp.Status=draft atp.recommendedPackage=PersistencyFileStorageInterfaces			
Base	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PersistencyInterface, PortInterface, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
fileElement	PersistencyFileElement	*	aggr	This aggregation represents the collection of Persistency FileStorages in the context of the enclosing Persistency FileStorageInterface. Tags: atp.Status=draft
maxNumberOfFiles	PositiveInteger	0..1	attr	This attribute represents the definition of an upper bound for the handling of files at run-time in the context of the enclosing PersistencyFileStorageInterface.

Table A.19: PersistencyFileStorageInterface

Class	PersistencyInterface (abstract)			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::PortInterface			
Note	This meta-class provides the abstract ability to define a PortInterface for the support of persistency use cases. Tags: atp.Status=draft			
Base	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable</i>			
Subclasses	PersistencyFileStorageInterface , PersistencyKeyValueStorageInterface			
Attribute	Type	Mult.	Kind	Note
minimum SustainedSize	PositiveInteger	0..1	attr	The value of this attribute represents the minimum size required at design time for the enclosing Persistency Interface.
redundancy	PersistencyRedundancy Enum	0..1	attr	This attribute represents a requirement towards the redundancy of storage.
redundancy Handling	PersistencyRedundancy Handling	*	aggr	This aggregation represents the chosen approaches to handle redundancy for the various use cases implemented by subclasses Tags: atp.Status=draft
updateStrategy	PersistencyCollection LevelUpdateStrategy Enum	0..1	attr	This attribute can be used to specify the update strategy of the respective PersistencyInterface as a whole.

Table A.20: PersistencyInterface

Class	PersistencyInterfaceElement (abstract)			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::PortInterface			
Note	This meta-class provides the abstract ability to define an element of a PortInterface for the support of persistency use cases. Tags: atp.Status=draft			
Base	<i>ARObject, Identifiable, MultilanguageReferrable, Referrable</i>			
Subclasses	PersistencyDataElement , PersistencyFileElement			
Attribute	Type	Mult.	Kind	Note
updateStrategy	PersistencyElement LevelUpdateStrategy Enum	0..1	attr	This attribute can be used to specify the update strategy of the respective PersistencyInterfaceElement.

Table A.21: PersistencyInterfaceElement

Class	PersistencyKeyValuePair			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This meta-class represents the ability to formally model a key-value pair in the context of the deployment of persistency. Tags: atp.Status=draft			
Base	<i>ARObject, Identifiable, MultilanguageReferrable, PersistencyDeploymentElement, Referrable</i>			
Attribute	Type	Mult.	Kind	Note





Class		PersistencyKeyValuePair		
initValue	ValueSpecification	0..1	aggr	This aggregation represents the ability to define an initial value for the value side of the key-value pair. Please note that it does not make sense to configure an initial value if the PersistencyDeploymentElement.updateStrategy is set to the value delete. Tags: atp.Status=draft
valueDataType	AbstractImplementation DataType	1	ref	This reference represents the data type applicable for the value of the key-value pair. Tags: atp.Status=draft

Table A.22: PersistencyKeyValuePair

Class		PersistencyKeyValueStorage		
Package		M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency		
Note		This meta-class represents the ability to model a key-value storage on deployment level. Tags: atp.Status=draft atp.recommendedPackage=PersistencyKeyValueStorages		
Base		ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PersistencyDeployment, Referrable, UploadableExclusivePackageElement, UploadablePackageElement		
Attribute	Type	Mult.	Kind	Note
keyValuePair	PersistencyKeyValue Pair	*	aggr	This aggregation represents the key-value-pairs owned by the enclosing PersistencyKeyValueStorage. Tags: atp.Status=draft
uri	UriString	0..1	attr	This attribute holds the storage location for the PersistencyKeyValueStorage, e.g. file on the file system.

Table A.23: PersistencyKeyValueStorage

Class		PersistencyKeyValueStorageInterface		
Package		M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::PortInterface		
Note		This meta-class provides the ability to implement a PortInterface for supporting persistency use cases for data. Tags: atp.Status=draft atp.recommendedPackage=PersistencyKeyValueStorageInterfaces		
Base		ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PersistencyInterface, PortInterface, Referrable		
Attribute	Type	Mult.	Kind	Note
dataElement	PersistencyData Element	*	aggr	This aggregation represents the collection of Persistency DataElements in the context of the enclosing Persistency KeyValueStorageInterface. Tags: atp.Status=draft
dataTypeFor Serialization	AbstractImplementation DataType	*	ref	This reference identifies the AbstractImplementationData Types that shall be supported for storing in a key-value storage in addition to the types already determined from the aggregation of PersistencyDataElement. Tags: atp.Status=draft

Table A.24: PersistencyKeyValueStorageInterface

Class	PersistencyPortPrototypeToDeploymentMapping (abstract)			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This abstract bas class implements the shared functionality of all mapping between a PortPrototype, a Process, and a specific subclass of PersistencyDeployment. Tags: atp.Status=draft			
Base	<i>ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable, UploadableExclusivePackageElement, UploadablePackageElement</i>			
Subclasses	PersistencyPortPrototypeToFileStorageMapping , PersistencyPortPrototypeToKeyValueStorageMapping			
Attribute	Type	Mult.	Kind	Note
portPrototype	PortPrototype	0..1	iref	This reference represents the mapped PortPrototype. Tags: atp.Status=draft InstanceRef implemented by: PortPrototypeIn ExecutableInstanceRef
process	Process	1	ref	This reference represents the process required as context for the mapping. Tags: atp.Status=draft

Table A.25: PersistencyPortPrototypeToDeploymentMapping

Class	PersistencyPortPrototypeToFileStorageMapping			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This meta-class represents the ability to define a mapping between a collection of files on deployment level to a given PortPrototype. Tags: atp.Status=draft atp.recommendedPackage=PersistencyPortPrototypeToFileStorageMappings			
Base	<i>ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, PersistencyPortPrototypeToDeploymentMapping, Referrable, UploadableExclusivePackage Element, UploadablePackageElement</i>			
Attribute	Type	Mult.	Kind	Note
fileStorage	PersistencyFileStorage	1	ref	This reference represents the mapped file storage. Tags: atp.Status=draft

Table A.26: PersistencyPortPrototypeToFileStorageMapping

Class	PersistencyPortPrototypeToKeyValueStorageMapping			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This meta-class represents the ability to define a mapping between a PortPrototype and a key-value storage. Tags: atp.Status=draft atp.recommendedPackage=PersistencyPortPrototypeToKeyValueStorageMappings			
Base	<i>ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, PersistencyPortPrototypeToDeploymentMapping, Referrable, UploadableExclusivePackage Element, UploadablePackageElement</i>			
Attribute	Type	Mult.	Kind	Note
keyValue Storage	PersistencyKeyValue Storage	1	ref	This reference represents the mapped key-value storage. Tags: atp.Status=draft

Table A.27: PersistencyPortPrototypeToKeyValueStorageMapping

Class	<i>PersistencyRedundancyChecksum</i> (abstract)			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	Abstract class that defines the common attributes for implementations of redundancy. Tags: atp.Status=draft			
Base	<i>ARObject</i> , PersistencyRedundancyHandling			
Subclasses	PersistencyRedundancyCrc , PersistencyRedundancyHash			
Attribute	Type	Mult.	Kind	Note
algorithmFamily	String	1	attr	This attribute identifies the algorithm family that is used to execute the CRC/Hash.
length	PositiveInteger	1	attr	This attribute describes the length of the CRC/Hash in the unit bits.

Table A.28: PersistencyRedundancyChecksum

Class	<i>PersistencyRedundancyCrc</i>			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This meta-class formally describes the usage of a CRC for the implementation of redundancy. Tags: atp.Status=draft			
Base	<i>ARObject</i> , PersistencyRedundancyChecksum , PersistencyRedundancyHandling			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table A.29: PersistencyRedundancyCrc

Enumeration	<i>PersistencyRedundancyEnum</i>			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::ComSpec			
Note	This meta-class provides a way to specify in which way redundancy shall be applied on collection level. Tags: atp.Status=draft			
Literal	Description			
none	This value represents the requirement that redundancy measures are not applied on persistency storage level. Tags: atp.EnumerationLiteralIndex=1			
redundant	This value represents the requirement that redundancy measures are applied on persistency storage level. The nature of the redundant persistent storage is not further qualified and subject to integrator decisions. Tags: atp.EnumerationLiteralIndex=0			
redundantPer Element	This value represents the requirement that redundancy measures are applied on key-value level of a key-value storage or on file level of a file storage. The nature of the redundancy used on the persistent storage is not further qualified and subject to integrator decisions. Tags: atp.EnumerationLiteralIndex=2			

Table A.30: PersistencyRedundancyEnum

Class	PersistencyRedundancyHandling (abstract)			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This abstract base class represents a formal description of redundancy. Tags: atp.Status=draft			
Base	ARObject			
Subclasses	PersistencyRedundancyChecksum , PersistencyRedundancyMOutOfN			
Attribute	Type	Mult.	Kind	Note
scope	PersistencyRedundancyHandlingScopeEnum	0..1	attr	This attribute controls the scope in which the redundancy handling is applied.

Table A.31: PersistencyRedundancyHandling

Enumeration	PersistencyRedundancyHandlingScopeEnum
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency
Note	This meta-class provides values to control the scope of redundancy measures in the persistency deployment Tags: atp.Status=draft
Literal	Description
persistency Redundancy HandlingScope Element	The redundancy handling shall be applied on element level (key-value pair and file). Tags: atp.EnumerationLiteralIndex=0
persistency Redundancy HandlingScope Storage	The redundancy handling shall be applied on storage (key-value storage and file storage) level. Tags: atp.EnumerationLiteralIndex=1

Table A.32: PersistencyRedundancyHandlingScopeEnum

Class	PersistencyRedundancyHash			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This meta-class formally describes the usage of a Hash for the implementation of redundancy. Tags: atp.Status=draft			
Base	ARObject, PersistencyRedundancyChecksum , PersistencyRedundancyHandling			
Attribute	Type	Mult.	Kind	Note
initialization VectorLength	PositiveInteger	0..1	attr	Length of the initialization vector.

Table A.33: PersistencyRedundancyHash

Class	PersistencyRedundancyMOutOfN			
Package	M2::AUTOSARTemplates::AdaptivePlatform::PlatformModuleDeployment::Persistency			
Note	This meta-class provides the ability to describe redundancy via an "M out of N" approach. In this case N is the number of copies created and M is the minimum number of identical copies to justify a reliable read access to the data. Tags: atp.Status=draft			
Base	ARObject, PersistencyRedundancyHandling			





Class		PersistencyRedundancyMOutOfN		
Attribute	Type	Mult.	Kind	Note
m	PositiveInteger	1	attr	This attribute represents the "M" coordinate in the "M out of N" scheme.
n	PositiveInteger	1	attr	This attribute represents the "N" coordinate in the "M out of N" scheme.

Table A.34: PersistencyRedundancyMOutOfN

Class		PortPrototype (abstract)		
Package		M2::AUTOSARTemplates::SWComponentTemplate::Components		
Note		Base class for the ports of an AUTOSAR software component. The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.		
Base		ARObject, AtpBlueprintable, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, Referrable		
Subclasses		AbstractProvidedPortPrototype, AbstractRequiredPortPrototype		
Attribute	Type	Mult.	Kind	Note
clientServer Annotation	ClientServerAnnotation	*	aggr	Annotation of this PortPrototype with respect to client/server communication.
delegatedPort Annotation	DelegatedPort Annotation	0..1	aggr	Annotations on this delegated port.
ioHwAbstraction Server Annotation	IoHwAbstractionServer Annotation	*	aggr	Annotations on this IO Hardware Abstraction port.
modePort Annotation	ModePortAnnotation	*	aggr	Annotations on this mode port.
nvDataPort Annotation	NvDataPortAnnotation	*	aggr	Annotations on this non volatile data port.
parameterPort Annotation	ParameterPort Annotation	*	aggr	Annotations on this parameter port.
portPrototype Props	PortPrototypeProps	0..1	aggr	This attribute allows for the definition of further qualification of the semantics of a PortPrototype. Tags: atp.Status=draft
senderReceiver Annotation	SenderReceiver Annotation	*	aggr	Collection of annotations of this ports sender/receiver communication.
triggerPort Annotation	TriggerPortAnnotation	*	aggr	Annotations on this trigger port.

Table A.35: PortPrototype

Class		Process		
Package		M2::AUTOSARTemplates::AdaptivePlatform::ExecutionManifest		
Note		This meta-class provides information required to execute the referenced executable. Tags: atp.Status=draft atp.recommendedPackage=Processes		
Base		ARElement, ARObject, AbstractExecutionContext, AtpClassifier, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, UploadablePackageElement		
Attribute	Type	Mult.	Kind	Note





Class	Process			
design	ProcessDesign	0..1	ref	This reference represents the identification of the design-time representation for the Process that owns the reference. Tags: atp.Status=draft
deterministic Client	DeterministicClient	0..1	ref	This reference adds further execution characteristics for deterministic clients. Tags: atp.Status=draft
executable	Executable	0..1	ref	Reference to executable that is executed in the process. Stereotypes: atpUriDef Tags: atp.Status=draft
functionCluster Affiliation	String	0..1	attr	This attribute specifies which functional cluster the process is affiliated with.
numberOf RestartAttempts	PositiveInteger	0..1	attr	This attribute defines how often a process shall be restarted if the start fails. numberOfRestartAttempts = "0" OR Attribute not existing, start once numberOfRestartAttempts = "1", start a second time
preMapping	Boolean	0..1	attr	This attribute describes whether the executable is preloaded into the memory.
processState Machine	ModeDeclarationGroup Prototype	0..1	aggr	Set of Process States that are defined for the process. Tags: atp.Status=draft
securityEvent	SecurityEventDefinition	*	ref	The reference identifies the collection of SecurityEvents that can be reported by the enclosing SoftwareCluster. Stereotypes: atpSplitable; atpUriDef Tags: atp.Splitkey=securityEvent atp.Status=draft
stateDependent StartupConfig	StateDependentStartup Config	*	aggr	Applicable startup configurations. Tags: atp.Status=draft

Table A.36: Process

Class	RPortPrototype			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	Component port requiring a certain port interface.			
Base	<i>ARObject, AbstractRequiredPortPrototype, AtpBlueprintable, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, PortPrototype, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
required Interface	PortInterface	0..1	tref	The interface that this port requires. Stereotypes: isOfType

Table A.37: RPortPrototype

Class	Referrable (abstract)			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable			
Note	Instances of this class can be referred to by their identifier (while adhering to namespace borders).			
Base	ARObject			
Subclasses	AtpDefinition, BswDistinguishedPartition, BswModuleCallPoint, BswModuleClientServerEntry, BswVariableAccess, CouplingPortTrafficClassAssignment, CppImplementationData TypeContextTarget, DiagnosticDebounceAlgorithmProps, DiagnosticEnvModeElement, EthernetPriorityRegeneration, EventHandler, ExclusiveAreaNestingOrder, HwDescriptionEntity, ImplementationProps, LinSlaveConfigIdent, ModeTransition, MultilanguageReferrable, NmNetworkHandle, PduActivationRoutingGroup, PncMappingIdent, SingleLanguageReferrable, SoConIPdulIdentifier, SocketConnectionBundle, SomeipRequiredEventGroup, TimeSyncServerConfiguration, TpConnectionIdent			
Attribute	Type	Mult.	Kind	Note
shortName	Identifier	1	attr	This specifies an identifying shortName for the object. It needs to be unique within its context and is intended for humans but even more for technical reference. Stereotypes: atpIdentityContributor Tags: xml.enforceMinMultiplicity=true xml.sequenceOffset=-100
shortName Fragment	ShortNameFragment	*	aggr	This specifies how the Referrable.shortName is composed of several shortNameFragments. Tags: xml.sequenceOffset=-90

Table A.38: Referrable

Class	SoftwareCluster			
Package	M2::AUTOSARTemplates::AdaptivePlatform::SoftwareDistribution			
Note	This meta-class represents the ability to define an uploadable software-package, i.e. the SoftwareCluster shall contain all software and configuration for a given purpose. Tags: atp.Status=draft atp.recommendedPackage=SoftwareClusters			
Base	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Type	Mult.	Kind	Note
claimed FunctionGroup	ModeDeclarationGroup Prototype	*	ref	Each SoftwareCluster can reserve the usage of a given functionGroup such that no other SoftwareCluster is allowed to use it Tags: atp.Status=draft
conflictsTo	SoftwareCluster DependencyFormula	0..1	aggr	This aggregation handles conflicts. If it yields true then the SoftwareCluster shall not be installed. Stereotypes: atpSplitable Tags: atp.Splitkey=conflictsTo atp.Status=draft
contained ARElement	ARElement	*	ref	This reference represents the collection of model elements that cannot derive from UploadablePackage Element and that contribute to the completeness of the definition of the SoftwareCluster. Stereotypes: atpSplitable Tags: atp.Splitkey=containedARElement atp.Status=draft





Class	SoftwareCluster			
containedFibexElement	FibexElement	*	ref	This allows for referencing FibexElements that need to be considered in the context of a SoftwareCluster. Tags: atp.Status=draft
containedPackageElement	UploadablePackageElement	*	ref	This reference identifies model elements that are required to complete the manifest content. Stereotypes: atpSplitable Tags: atp.Splitkey=containedPackageElement atp.Status=draft
containedProcess	Process	*	ref	This reference represent the processes contained in the enclosing SoftwareCluster. Tags: atp.Status=draft
dependsOn	SoftwareClusterDependencyFormula	0..1	aggr	This aggregation can be taken to identify a dependency for the enclosing SoftwareCluster. Stereotypes: atpSplitable Tags: atp.Splitkey=dependsOn atp.Status=draft
design	SoftwareClusterDesign	*	ref	This reference represents the identification of all SoftwareClusterDesigns applicable for the enclosing SoftwareCluster. Stereotypes: atpUriDef Tags: atp.Status=draft
diagnosticAddress	SoftwareClusterDiagnosticAddress	*	aggr	This aggregation represents the collection of diagnostic addresses that apply for the SoftwareCluster. Stereotypes: atpSplitable Tags: atp.Splitkey=diagnosticAddress atp.Status=draft
diagnosticExtract	DiagnosticContributionSet	0..1	ref	This reference represents the definition of the diagnostic extract applicable to the referencing SoftwareCluster Tags: atp.Status=draft
license	Documentation	*	ref	This attribute allows for the inclusion of the the full text of a license of the enclosing SoftwareCluster. In many cases open source licenses require the inclusion of the full license text to any software that is released under the respective license. Tags: atp.Status=draft
moduleInstantiation	AdaptiveModuleInstantiation	*	ref	This reference identifies AdaptiveModuleInstantiations that need to be included with the SoftwareCluster in order to establish infrastructure required for the installation of the SoftwareCluster. Stereotypes: atpSplitable Tags: atp.Splitkey=moduleInstantiation atp.Status=draft
releaseNotes	Documentation	0..1	ref	This attribute allows for the explanations of changes since the previous version. The list of changes might require the creation of multiple paragraphs of test. Tags: atp.Status=draft
typeApproval	String	0..1	attr	This attribute carries the homologation information that may be specific for a given country.





Class	SoftwareCluster			
vendorId	PositiveInteger	1	attr	Vendor ID of this Implementation according to the AUTOSAR vendor list.
vendor Signature	CryptoService Certificate	1	ref	This reference identifies the certificate that represents the vendor's signature. Tags: atp.Status=draft
version	StrongRevisionLabel String	1	attr	This attribute can be used to describe a version information for the enclosing SoftwareCluster.

Table A.39: SoftwareCluster

Class	SoftwarePackage			
Package	M2::AUTOSARTemplates::AdaptivePlatform::SoftwareDistribution			
Note	This meta-class represents the ability to formalize the content of a software package. Tags: atp.Status=draft atp.recommendedPackage=SoftwarePackages			
Base	<i>ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
actionType	SoftwarePackageAction TypeEnum	1	attr	This attribute defines the action to be taken in the step of processing the enclosing SoftwarePackage.
compressed Software PackageSize	PositiveInteger	1	attr	This size represents the size of the compressed Software Package.
deltaPackage Applicable Version	StrongRevisionLabel String	0..1	attr	This attribute identifies the version of the included SoftwareCluster for which the enclosing SoftwarePackage can be used as a delta update
maximum SupportedUcm Version	RevisionLabelString	1	attr	This attribute identifies the maximum supported version of the UCM for this SoftwarePackage.
minimum SupportedUcm Version	RevisionLabelString	1	attr	This attribute identifies the minimum supported version of the UCM for this SoftwarePackage.
packagerId	PositiveInteger	1	attr	This attribute identifies Id of the organization that provides the packager generating the SoftwarePackage.
packager Signature	CryptoService Certificate	1	ref	This reference identifies the certificate that represents the packager's signature. Tags: atp.Status=draft
postVerification Reboot	Boolean	1	attr	Reboot the platform after the verification of the activated software.
preActivate (ordered)	ModeDeclaration	*	iref	The referenced function group states shall be established for the switch between the already installed and the activated software. Tags: atp.Status=draft InstanceRef implemented by: FunctionGroupStateIn FunctionGroupSetInstanceRef
preActivation Reboot	Boolean	1	attr	Reboot the platform before the switch to the activated software.





Class	SoftwarePackage			
softwareCluster	SoftwareCluster	1	ref	This reference identifies the SoftwareCluster that belongs to the SoftwarePackage. The nature of this relation is actually more like an aggregation than a reference. But the relation is still modelled as a reference because two ARElements cannot aggregate each other. Tags: atp.Status=draft
uncompressed SoftwareCluster Size	PositiveInteger	1	attr	This attribute gives an indication about the storage that has to be available on the target.
verify (ordered)	ModeDeclaration	*	iref	The referenced function group states shall be established for the verification of the activated software. Tags: atp.Status=draft InstanceRef implemented by: FunctionGroupStateInFunctionGroupSetInstanceRef

Table A.40: SoftwarePackage

Class	StdCpplImplementationDataType			
Package	M2::AUTOSARTemplates::AdaptivePlatform::ApplicationDesign::CpplImplementationDataType			
Note	This meta-class represents the way to specify a data type definition that is taken as the basis for a C++ language binding to a C++ Standard Library feature. Tags: atp.Status=draft atp.recommendedPackage=CpplImplementationDataTypes			
Base	<i>ARElement, ARObject, AbstractImplementationDataType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, CpplImplementationDataType, CpplImplementationDataTypeContextTarget, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
-	-	-	-	-

Table A.41: StdCpplImplementationDataType

Primitive	StrongRevisionLabelString			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes			
Note	This primitive represents a revision label which identifies an object under version control. It represents a pattern which requires three integer numbers separated by a dot, representing from left to right Major Version, MinorVersion, PatchVersion and additional labels for pre-release version and build metadata. Legal patterns are for example: 1.0.0-alpha+001 1.0.0+20130313144700 1.0.0-beta+exp.sha.5114f85 Tags: atp.Status=draft xml.xsd.customType=STRONG-REVISION-LABEL-STRING xml.xsd.pattern=(0 [1-9]d*)\.(0 [1-9]d*)\.(0 [1-9]d*)(-((0 [1-9]d*)[a-zA-Z][0-9a-zA-Z-]*)\.(0 [1-9]d*)[a-zA-Z][0-9a-zA-Z-]*)*)?(\+([0-9a-zA-Z-]+\.[0-9a-zA-Z-]+)*)? xml.xsd.type=string			

Table A.42: StrongRevisionLabelString

B Platform Extension API (normative)

The [Persistency](#) cluster does not provide a platform extension API. The latter would be required to defined a plugin interface for platform specific extensions of the [Persistency](#).

C Interfaces to Other Functional Clusters (informative)

The [Persistency](#) cluster does not provide any direct interfaces to other functional clusters. Other functional clusters may use the APIs of [Persistency](#) just like the application.

D History of Constraints and Specification Items

Please note that the lists in this chapter also include constraints and specification items that have been removed from the specification in a later version. These constraints and specification items do not appear as hyperlinks in the document.

D.1 Constraint and Specification Item History of this Document According to AUTOSAR Release 17-03

D.1.1 Added Traceables in 17-03

[SWS_PER_00002]	[SWS_PER_00003]	[SWS_PER_00004]	[SWS_PER_00005]
[SWS_PER_00006]	[SWS_PER_00007]	[SWS_PER_00010]	[SWS_PER_00011]
[SWS_PER_00012]	[SWS_PER_00013]	[SWS_PER_00014]	[SWS_PER_00015]
[SWS_PER_00016]	[SWS_PER_00017]	[SWS_PER_00018]	[SWS_PER_00019]
[SWS_PER_00020]	[SWS_PER_00021]	[SWS_PER_00022]	[SWS_PER_00023]
[SWS_PER_00024]	[SWS_PER_00025]	[SWS_PER_00026]	[SWS_PER_00027]
[SWS_PER_00028]	[SWS_PER_00029]	[SWS_PER_00040]	[SWS_PER_00041]
[SWS_PER_00042]	[SWS_PER_00043]	[SWS_PER_00044]	[SWS_PER_00045]
[SWS_PER_00046]	[SWS_PER_00047]	[SWS_PER_00048]	[SWS_PER_00049]
[SWS_PER_00050]	[SWS_PER_00051]	[SWS_PER_00052]	[SWS_PER_00053]
[SWS_PER_00054]	[SWS_PER_00055]	[SWS_PER_00056]	[SWS_PER_00057]
[SWS_PER_00058]	[SWS_PER_00059]	[SWS_PER_00060]	[SWS_PER_00061]
[SWS_PER_00062]	[SWS_PER_00066]	[SWS_PER_00069]	[SWS_PER_00070]
[SWS_PER_00071]	[SWS_PER_00072]	[SWS_PER_00073]	[SWS_PER_00074]
[SWS_PER_00075]	[SWS_PER_00076]	[SWS_PER_00077]	[SWS_PER_00078]

D.1.2 Changed Traceables in 17-03

none

D.1.3 Deleted Traceables in 17-03

none

D.2 Constraint and Specification Item History of this Document According to AUTOSAR Release 17-10

D.2.1 Added Traceables in 17-10

[SWS_PER_00008] [SWS_PER_00100] [SWS_PER_00101] [SWS_PER_00102]
[SWS_PER_00103] [SWS_PER_00104] [SWS_PER_00105] [SWS_PER_00106]
[\[SWS_PER_00107\]](#) [SWS_PER_00108] [SWS_PER_00109] [[SWS_PER_00110](#)]
[\[SWS_PER_00111\]](#) [[SWS_PER_00112](#)] [[SWS_PER_00113](#)] [[SWS_PER_00114](#)]
[\[SWS_PER_00115\]](#) [[SWS_PER_00116](#)] [SWS_PER_00117] [SWS_PER_00118]
[\[SWS_PER_00119\]](#) [SWS_PER_00120] [SWS_PER_00121] [[SWS_PER_00122](#)]
[SWS_PER_00123] [SWS_PER_00124] [[SWS_PER_00125](#)] [SWS_PER_00126]
[SWS_PER_00127] [SWS_PER_00128] [SWS_PER_00129] [SWS_PER_00130]
[SWS_PER_00131] [SWS_PER_00132] [SWS_PER_00133] [SWS_PER_00134]
[SWS_PER_00140] [SWS_PER_00141] [SWS_PER_00142] [SWS_PER_00143]
[\[SWS_PER_00144\]](#) [SWS_PER_00145] [SWS_PER_00150] [SWS_PER_00151]
[SWS_PER_00152] [SWS_PER_00153] [SWS_PER_00154] [SWS_PER_00155]
[SWS_PER_00156] [SWS_PER_00157] [SWS_PER_00160] [SWS_PER_00161]
[SWS_PER_00200] [SWS_PER_00201] [[SWS_PER_00210](#)] [[SWS_PER_00211](#)]
[SWS_PER_00220] [[SWS_PER_00221](#)] [[SWS_PER_00222](#)] [SWS_PER_00500]

D.2.2 Changed Traceables in 17-10

[SWS_PER_00003] [SWS_PER_00004] [SWS_PER_00010] [SWS_PER_00013]
[SWS_PER_00014] [SWS_PER_00016] [SWS_PER_00017] [SWS_PER_00041]
[\[SWS_PER_00042\]](#) [[SWS_PER_00043\]](#) [SWS_PER_00044] [[SWS_PER_00046](#)]
[\[SWS_PER_00047\]](#) [[SWS_PER_00048\]](#) [[SWS_PER_00049](#)] [[SWS_PER_00050](#)]
[SWS_PER_00051] [SWS_PER_00060] [SWS_PER_00061] [SWS_PER_00076]

D.2.3 Deleted Traceables in 17-10

[SWS_PER_00011] [SWS_PER_00021] [SWS_PER_00022] [SWS_PER_00023]
[SWS_PER_00024] [SWS_PER_00025] [SWS_PER_00026] [SWS_PER_00027]
[SWS_PER_00028] [SWS_PER_00029] [SWS_PER_00040] [SWS_PER_00045]
[SWS_PER_00053] [SWS_PER_00054] [SWS_PER_00055] [SWS_PER_00056]
[SWS_PER_00057] [SWS_PER_00058] [SWS_PER_00059] [SWS_PER_00062]
[SWS_PER_00066] [SWS_PER_00069] [SWS_PER_00070] [SWS_PER_00071]
[SWS_PER_00072] [SWS_PER_00073] [SWS_PER_00074] [SWS_PER_00075]
[SWS_PER_00077] [SWS_PER_00078]

D.3 Constraint and Specification Item History of this Document According to AUTOSAR Release 18-03

D.3.1 Added Traceables in 18-03

[SWS_PER_00080] [[SWS_PER_00146](#)] [[SWS_PER_00147](#)] [SWS_PER_00148]
[[SWS_PER_00162](#)] [[SWS_PER_00163](#)] [[SWS_PER_00164](#)] [[SWS_PER_00165](#)]
[[SWS_PER_00166](#)] [[SWS_PER_00167](#)] [[SWS_PER_00168](#)] [SWS_PER_00169]
[SWS_PER_00170] [SWS_PER_00171] [SWS_PER_00172] [SWS_PER_00173]
[SWS_PER_00174] [SWS_PER_00175] [SWS_PER_00176] [SWS_PER_00180]
[SWS_PER_00181] [SWS_PER_00182] [SWS_PER_00250] [[SWS_PER_00251](#)]
[[SWS_PER_00252](#)] [[SWS_PER_00253](#)] [[SWS_PER_00254](#)] [SWS_PER_00255]
[SWS_PER_00256] [SWS_PER_00257] [SWS_PER_00258] [SWS_PER_00259]
[SWS_PER_00260] [SWS_PER_00261] [SWS_PER_00262] [SWS_PER_00264]
[[SWS_PER_00265](#)] [[SWS_PER_00266](#)] [[SWS_PER_00267](#)] [SWS_PER_00268]
[SWS_PER_00269] [SWS_PER_00270] [SWS_PER_00271] [SWS_PER_00272]
[SWS_PER_00273] [SWS_PER_00274] [[SWS_PER_00275](#)] [SWS_PER_00276]
[[SWS_PER_00277](#)] [SWS_PER_00278] [SWS_PER_00279] [SWS_PER_00280]
[[SWS_PER_00281](#)] [SWS_PER_00282] [[SWS_PER_00283](#)] [SWS_PER_00284]
[SWS_PER_00285] [SWS_PER_00300] [SWS_PER_00301] [[SWS_PER_00302](#)]
[[SWS_PER_00303](#)] [[SWS_PER_00304](#)] [SWS_PER_UNUSED]

D.3.2 Changed Traceables in 18-03

[SWS_PER_00004] [[SWS_PER_00113](#)] [[SWS_PER_00114](#)] [[SWS_PER_00115](#)]
[SWS_PER_00132] [SWS_PER_00133] [SWS_PER_00134] [SWS_PER_00201]
[SWS_PER_00220] [SWS_PER_00500]

D.3.3 Deleted Traceables in 18-03

[SWS_PER_00003] [SWS_PER_00005] [SWS_PER_00006] [SWS_PER_00007]
[SWS_PER_00008] [SWS_PER_00010] [SWS_PER_00012] [SWS_PER_00013]
[SWS_PER_00014] [SWS_PER_00015] [SWS_PER_00016] [SWS_PER_00017]
[SWS_PER_00018] [SWS_PER_00019] [SWS_PER_00020] [SWS_PER_00051]
[SWS_PER_00060] [SWS_PER_00061] [SWS_PER_00076] [SWS_PER_00100]
[SWS_PER_00101] [SWS_PER_00102] [SWS_PER_00103] [SWS_PER_00104]
[SWS_PER_00105] [SWS_PER_00109] [SWS_PER_00117] [SWS_PER_00118]
[SWS_PER_00120] [SWS_PER_00121] [SWS_PER_00123] [SWS_PER_00150]
[SWS_PER_00151] [SWS_PER_00152] [SWS_PER_00153] [SWS_PER_00154]
[SWS_PER_00155] [SWS_PER_00156] [SWS_PER_00157]

D.4 Constraint and Specification Item History of this Document According to AUTOSAR Release 18-10

D.4.1 Added Traceables in 18-10

[SWS_PER_00309] [SWS_PER_00311] [SWS_PER_00312] [SWS_PER_00313]
[SWS_PER_00314] [SWS_PER_00315] [SWS_PER_00316] [SWS_PER_00317]
[SWS_PER_00318] [SWS_PER_00319] [SWS_PER_00320] [SWS_PER_00321]
[SWS_PER_00322] [SWS_PER_00323] [SWS_PER_00324] [SWS_PER_00325]
[SWS_PER_00326] [SWS_PER_00327] [SWS_PER_00328] [SWS_PER_00329]
[SWS_PER_00330] [SWS_PER_00331] [SWS_PER_00332] [SWS_PER_00333]
[SWS_PER_00334] [SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337]
[SWS_PER_00338] [SWS_PER_00339] [SWS_PER_00340] [SWS_PER_00341]
[SWS_PER_00342] [SWS_PER_00343] [SWS_PER_00344] [SWS_PER_00345]
[SWS_PER_00346] [SWS_PER_00347] [SWS_PER_00348] [SWS_PER_NA]

D.4.2 Changed Traceables in 18-10

[SWS_PER_00042] [SWS_PER_00043] [SWS_PER_00044] [SWS_PER_00046]
[SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00050]
[SWS_PER_00052] [SWS_PER_00106] [SWS_PER_00107] [SWS_PER_00108]
[SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113]
[SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119]
[SWS_PER_00122] [SWS_PER_00124] [SWS_PER_00125] [SWS_PER_00126]
[SWS_PER_00127] [SWS_PER_00128] [SWS_PER_00140] [SWS_PER_00141]
[SWS_PER_00142] [SWS_PER_00143] [SWS_PER_00144] [SWS_PER_00145]
[SWS_PER_00147] [SWS_PER_00160] [SWS_PER_00161] [SWS_PER_00163]
[SWS_PER_00164] [SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00180]
[SWS_PER_00181] [SWS_PER_00182] [SWS_PER_00210] [SWS_PER_00211]

D.4.3 Deleted Traceables in 18-10

[SWS_PER_00004] [SWS_PER_00041] [SWS_PER_00080] [SWS_PER_00129]
[SWS_PER_00130] [SWS_PER_00131] [SWS_PER_00132] [SWS_PER_00133]
[SWS_PER_00134] [SWS_PER_00148] [SWS_PER_00169] [SWS_PER_00170]
[SWS_PER_00171] [SWS_PER_00172] [SWS_PER_00173] [SWS_PER_00174]
[SWS_PER_00175] [SWS_PER_00176] [SWS_PER_00200] [SWS_PER_00201]
[SWS_PER_00220] [SWS_PER_00250] [SWS_PER_00500] [SWS_PER_UNUSED]

D.5 Constraint and Specification Item History of this Document According to AUTOSAR Release 19-03

D.5.1 Added Traceables in 19-03

[SWS_PER_00349] [SWS_PER_00350] [SWS_PER_00351] [SWS_PER_00352]
[SWS_PER_00353] [SWS_PER_00354] [SWS_PER_00355] [SWS_PER_00356]
[SWS_PER_00357] [SWS_PER_00358] [SWS_PER_00359] [SWS_PER_00360]
[SWS_PER_00361] [SWS_PER_00362] [SWS_PER_00363] [SWS_PER_00364]
[SWS_PER_00365] [SWS_PER_00366] [SWS_PER_00367] [SWS_PER_00368]
[SWS_PER_00369] [SWS_PER_00370] [SWS_PER_00371] [SWS_PER_00372]
[SWS_PER_00373] [SWS_PER_00374] [SWS_PER_00375] [SWS_PER_00376]
[SWS_PER_00377] [SWS_PER_00378] [SWS_PER_00379] [SWS_PER_00380]
[SWS_PER_00381] [SWS_PER_00382] [SWS_PER_00383] [SWS_PER_00384]
[SWS_PER_00385] [SWS_PER_00386] [SWS_PER_00387] [SWS_PER_00388]
[SWS_PER_00389] [SWS_PER_00390] [SWS_PER_00391] [SWS_PER_00392]
[SWS_PER_00393] [SWS_PER_00394] [SWS_PER_00395] [SWS_PER_00396]
[SWS_PER_00397] [SWS_PER_CONSTR_00001] [SWS_PER_CONSTR_00002]
[SWS_PER_CONSTR_00003] [SWS_PER_CONSTR_00004]

D.5.2 Changed Traceables in 19-03

[SWS_PER_00042] [SWS_PER_00043] [SWS_PER_00044] [SWS_PER_00046]
[SWS_PER_00047] [SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00052]
[SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113]
[SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119]
[SWS_PER_00127] [SWS_PER_00128] [SWS_PER_00144] [SWS_PER_00145]
[SWS_PER_00251] [SWS_PER_00252] [SWS_PER_00253] [SWS_PER_00254]
[SWS_PER_00265] [SWS_PER_00266] [SWS_PER_00267] [SWS_PER_00275]
[SWS_PER_00277] [SWS_PER_00281] [SWS_PER_00283] [SWS_PER_00304]
[SWS_PER_00311] [SWS_PER_00312] [SWS_PER_00313] [SWS_PER_00314]
[SWS_PER_00315] [SWS_PER_00322] [SWS_PER_00323] [SWS_PER_00326]
[SWS_PER_00327] [SWS_PER_00328] [SWS_PER_00329] [SWS_PER_00330]
[SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334] [SWS_PER_00335]
[SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338] [SWS_PER_00340]

D.5.3 Deleted Traceables in 19-03

[SWS_PER_00160] [SWS_PER_00161] [SWS_PER_00255] [SWS_PER_00256]
[SWS_PER_00257] [SWS_PER_00258] [SWS_PER_00259] [SWS_PER_00260]
[SWS_PER_00261] [SWS_PER_00262] [SWS_PER_00264] [SWS_PER_00268]
[SWS_PER_00269] [SWS_PER_00270] [SWS_PER_00271] [SWS_PER_00272]
[SWS_PER_00273] [SWS_PER_00274] [SWS_PER_00276] [SWS_PER_00278]

[SWS_PER_00279] [SWS_PER_00280] [SWS_PER_00282] [SWS_PER_00284]
[SWS_PER_00285] [SWS_PER_00300] [SWS_PER_00301] [SWS_PER_00316]

D.6 Constraint and Specification Item History of this Document According to AUTOSAR Release R19-11

D.6.1 Added Traceables in R19-11

[SWS_PER_00398] [SWS_PER_00399] [SWS_PER_00400] [SWS_PER_00401]
[SWS_PER_00402] [SWS_PER_00403] [SWS_PER_00404] [SWS_PER_00405]
[SWS_PER_00406] [SWS_PER_00407] [SWS_PER_00408] [SWS_PER_00409]
[SWS_PER_00410]

D.6.2 Changed Traceables in R19-11

[SWS_PER_00049] [SWS_PER_00113] [SWS_PER_00114] [SWS_PER_00115]
[SWS_PER_00144] [SWS_PER_00145] [SWS_PER_00146] [SWS_PER_00147]
[SWS_PER_00163] [SWS_PER_00164] [SWS_PER_00303] [SWS_PER_00317]
[SWS_PER_00318] [SWS_PER_00319] [SWS_PER_00323] [SWS_PER_00327]
[SWS_PER_00345] [SWS_PER_00351] [SWS_PER_00365] [SWS_PER_00368]
[SWS_PER_00370] [SWS_PER_00372]

D.6.3 Deleted Traceables in R19-11

[SWS_PER_00044] [SWS_PER_CONSTR_00001]

D.7 Constraint and Specification Item History of this Document According to AUTOSAR Release R20-11

D.7.1 Added Traceables in R20-11

[SWS_PER_00411] [SWS_PER_00412] [SWS_PER_00413] [SWS_PER_00414]
[SWS_PER_00415] [SWS_PER_00416] [SWS_PER_00417] [SWS_PER_00418]
[SWS_PER_00419] [SWS_PER_00420] [SWS_PER_00421] [SWS_PER_00422]
[SWS_PER_00423] [SWS_PER_00424] [SWS_PER_00425] [SWS_PER_00426]
[SWS_PER_00427] [SWS_PER_00428] [SWS_PER_00429] [SWS_PER_00430]
[SWS_PER_00431] [SWS_PER_00432] [SWS_PER_00433] [SWS_PER_00434]
[SWS_PER_00435] [SWS_PER_00436] [SWS_PER_00437] [SWS_PER_00438]
[SWS_PER_00439] [SWS_PER_00440] [SWS_PER_00441] [SWS_PER_00442]
[SWS_PER_00443] [SWS_PER_00444] [SWS_PER_00445] [SWS_PER_00446]

[SWS_PER_00447] [SWS_PER_00448] [SWS_PER_00449] [SWS_PER_00450]
[SWS_PER_00451]

D.7.2 Changed Traceables in R20-11

[SWS_PER_00042] [SWS_PER_00043] [SWS_PER_00046] [SWS_PER_00047]
[SWS_PER_00048] [SWS_PER_00049] [SWS_PER_00052] [SWS_PER_00107]
[SWS_PER_00110] [SWS_PER_00111] [SWS_PER_00112] [SWS_PER_00113]
[SWS_PER_00114] [SWS_PER_00115] [SWS_PER_00116] [SWS_PER_00119]
[SWS_PER_00122] [SWS_PER_00125] [SWS_PER_00144] [SWS_PER_00146]
[SWS_PER_00147] [SWS_PER_00162] [SWS_PER_00163] [SWS_PER_00164]
[SWS_PER_00165] [SWS_PER_00166] [SWS_PER_00167] [SWS_PER_00168]
[SWS_PER_00210] [SWS_PER_00211] [SWS_PER_00251] [SWS_PER_00252]
[SWS_PER_00265] [SWS_PER_00266] [SWS_PER_00267] [SWS_PER_00275]
[SWS_PER_00277] [SWS_PER_00281] [SWS_PER_00283] [SWS_PER_00304]
[SWS_PER_00311] [SWS_PER_00312] [SWS_PER_00317] [SWS_PER_00318]
[SWS_PER_00319] [SWS_PER_00332] [SWS_PER_00333] [SWS_PER_00334]
[SWS_PER_00335] [SWS_PER_00336] [SWS_PER_00337] [SWS_PER_00338]
[SWS_PER_00339] [SWS_PER_00340] [SWS_PER_00342] [SWS_PER_00343]
[SWS_PER_00356] [SWS_PER_00357] [SWS_PER_00358] [SWS_PER_00365]
[SWS_PER_00375] [SWS_PER_00376] [SWS_PER_00377] [SWS_PER_00378]
[SWS_PER_00379] [SWS_PER_00380] [SWS_PER_00383] [SWS_PER_00385]
[SWS_PER_00388] [SWS_PER_00389] [SWS_PER_00390] [SWS_PER_00391]
[SWS_PER_00392] [SWS_PER_00393] [SWS_PER_00394] [SWS_PER_00395]
[SWS_PER_00396] [SWS_PER_00405] [SWS_PER_00406] [SWS_PER_00407]
[SWS_PER_00409] [SWS_PER_CONSTR_00004]

D.7.3 Deleted Traceables in R20-11

[SWS_PER_00106] [SWS_PER_00108] [SWS_PER_00124] [SWS_PER_00126]
[SWS_PER_00127] [SWS_PER_00128] [SWS_PER_00140] [SWS_PER_00141]
[SWS_PER_00142] [SWS_PER_00143] [SWS_PER_00145] [SWS_PER_00180]
[SWS_PER_00181] [SWS_PER_00182] [SWS_PER_00341] [SWS_PER_00344]
[SWS_PER_00345] [SWS_PER_00346] [SWS_PER_00347] [SWS_PER_00348]
[SWS_PER_00349] [SWS_PER_00366] [SWS_PER_00381] [SWS_PER_00404]
[SWS_PER_CONSTR_00002]

E Not Applicable Requirements

[SWS_PER_NA]{DRAFT} [These requirements are not applicable to this specification.] ([RS_AP_00111](#), [RS_AP_00114](#), [RS_AP_00116](#), [RS_AP_00124](#), [RS_AP_00130](#))