

<b>Document Title</b>	Specification of Chinese Vehicle-2-X Management
<b>Document Owner</b>	AUTOSAR
<b>Document Responsibility</b>	AUTOSAR
<b>Document Identification No</b>	1031

<b>Document Status</b>	published
<b>Part of AUTOSAR Standard</b>	Classic Platform
<b>Part of Standard Release</b>	R22-11

<b>Document Change History</b>			
<b>Date</b>	<b>Release</b>	<b>Changed by</b>	<b>Description</b>
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>Initial release</li> </ul>

## Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Contents

1	Introduction and functional overview	5
1.1	Architecture Overview	5
1.2	Functional Overview	5
2	Acronyms and Abbreviations	6
3	Related documentation	7
3.1	Input documents & related standards and norms	7
3.2	Related specification	7
4	Constraints and assumptions	8
4.1	Limitations	8
4.2	Applicability to car domains	8
5	Dependencies to other modules	9
5.1	AUTOSAR Default Error Tracer (DET)	9
5.2	AUTOSAR Ecu State Manager (EcuM)	9
5.3	AUTOSAR Ethernet Interface (EthIf)	9
5.4	AUTOSAR Chinese Vehicle-2-X Message (CnV2xMsg)	9
6	Requirements Tracing	10
7	Functional specification	11
7.1	Startup Behavior	11
7.2	Shutdown Behavior	11
7.3	Common Channel Parameter Acquisition	11
7.4	Error Classification	11
7.4.1	Development Errors	11
7.4.2	Runtime Errors	11
7.4.3	Transient Faults	12
7.4.4	Production Errors	12
7.4.5	Extended Production Errors	12
8	API specification	13
8.1	Imported types	13
8.2	Type definitions	13
8.2.1	CnV2xM_ConfigType	13
8.2.2	CnV2xM_ChanType	13
8.3	Function definitions	14
8.3.1	CnV2xM_Init	14
8.3.2	CnV2xM_GetVersionInfo	15
8.3.3	CnV2xM_GetChanTxParams	15
8.4	Callback notifications	16
8.5	Scheduled functions	17
8.5.1	CnV2xM_MainFunction	17

8.6	Expected interfaces . . . . .	17
8.6.1	Mandatory interfaces . . . . .	17
8.6.2	Optional interfaces . . . . .	17
9	Sequence diagrams . . . . .	19
9.1	CnV2xM Initialization . . . . .	19
9.2	Initialization of Cellular V2X Drivers . . . . .	20
10	Configuration specification . . . . .	21
10.1	Containers and configuration parameters . . . . .	21
10.1.1	Variants . . . . .	21
10.1.2	CnV2xM . . . . .	21
10.1.3	CnV2xMGeneral . . . . .	21
A	Not applicable requirements . . . . .	24

# 1 Introduction and functional overview


This document specifies the functionality, APIs and the configuration of the AUTOSAR Basic Software module Chinese Vehicle-2-X Management (CnV2xM).

The Chinese Vehicle-2-X Management (CnV2xM) together with the Chinese Vehicle-2-X Message (CnV2xMsg), Chinese Vehicle-2-X Network (CnV2xNet), Chinese Vehicle-2-X Security (CnV2xSec) and AUTOSAR BSW module Ethernet Interface (EthIf) forms the Chinese V2X stack within the AUTOSAR architecture.

The bases for this document are the Chinese LTE-V2X based standards [1] [2]. It is assumed that the reader is familiar with these standards.

## 1.1 Architecture Overview

Positioning of the CnV2xM module within the AUTOSAR BSW and the Layered Software architecture is shown in below.

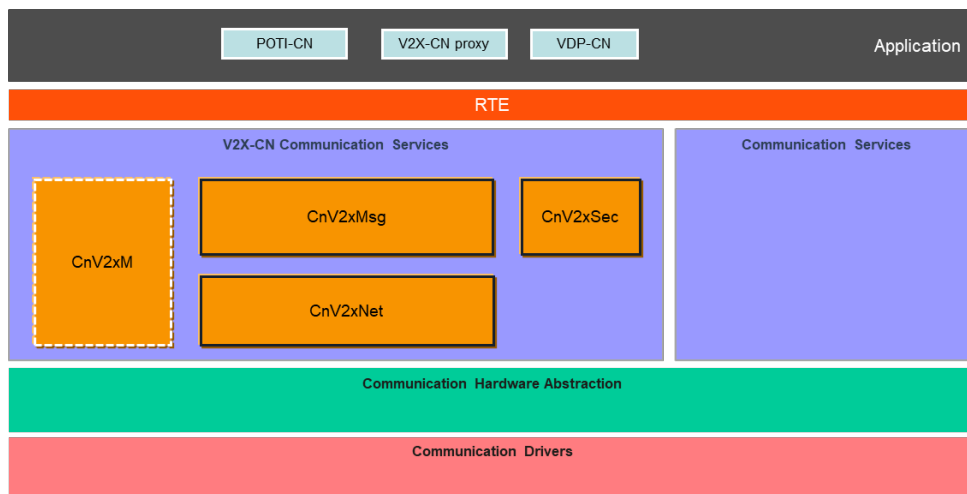

**Figure 1.1: AUTOSAR BSW software architecture - CnV2xM scope**

## 1.2 Functional Overview

The CnV2xM module support the operation of the Chinese V2X protocol stack in common V2X channel parameter acquisition and initialization of cellular V2X driver.

In future,the CnV2xM module will implement some basic services of DME specified in [2], and will support Chinese V2X unicast services based on LTE-V2X on application level.

## 2 Acronyms and Abbreviations

<b>Abbreviation / Acronym:</b>	<b>Description:</b>
BSM	Basic safety Message
C-V2X	Cellular based Vehicle to Everything
CBR	Channel Busy Ratio
CCSA	China Communications Standards Association
CnV2xMsg	Chinese Vehicle-2-X Message
CnV2xM	Chinese Vehicle-2-X Management
CnV2xNet	Chinese Vehicle-2-X Network
CnV2xSec	Chinese Vehicle-2-X Security
DME	Dedicated Management Entity
LTE	Long Term Evolution
LTE-V2X	LTE based Vehicle to Everything
NTCAS	National Technical Committee of Auto Standardization
PC5	The reference point between the UEs (User equipment) used for control and user plane for ProSe (Proximity-based Services) Direct Communication for V2X Service
PPPP	ProSe Per-Packet Priority
TP	Transmit Power

## 3 Related documentation

### 3.1 Input documents & related standards and norms

- [1] GB/T: Technical requirements and test methods of vehicular communication system based on LTE-V2X direct communication (Draft Edition: 2022-04-01)  
<http://www.catarc.org.cn/>
- [2] YD/T 3707-2020: Technical requirements of network layer of LTE-based vehicular communication  
<http://www.ccsa.org.cn/>
- [3] General Specification of Basic Software Modules  
AUTOSAR\_SWS\_BSWGeneral
- [4] Specification of Default Error Tracer  
AUTOSAR\_SWS\_DefaultErrorTracer
- [5] Specification of ECU State Manager  
AUTOSAR\_SWS\_ECUSTateManager
- [6] Specification of Ethernet Interface  
AUTOSAR\_SWS\_EthernetInterface

### 3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [3], which is also valid for CnV2xM.

Thus, the specification SWS BSW General shall be considered as additional and required specification for CnV2xM.

## 4 Constraints and assumptions

### 4.1 Limitations

- The Chinese V2X modules follow the guidance regarding the Day-1 V2X allocations defined in [1] [2], which are by NTCAS and CCSA respectively.
- Wireless communication supports LTE-V2X PC5 only. Other cellular based wireless communication can be extended in future release of AUTOSAR standard.
- DME functions specified in [2] will be implemented to support LTE-V2X based unicast service in future.

### 4.2 Applicability to car domains

This specification is applicable to all car domains.



## 5 Dependencies to other modules

This section describes the relations of CnV2xM module to other modules within the AUTOSAR basic software architecture. It outlines the modules that are required or optional for the realization of CnV2xM module and services.

### 5.1 AUTOSAR Default Error Tracer (DET)

In development mode, CnV2xM module reports errors through the Det\_ReportError function of DET Module [4].

### 5.2 AUTOSAR Ecu State Manager (EcuM)

The EcuM [5] initializes the CnV2xM module by calling CnV2xM\_Init specified in 8.3.1 in this document.

### 5.3 AUTOSAR Ethernet Interface (EthIf)

The Ethernet Interface [6] is the lower layer module of CnV2xNet module.

### 5.4 AUTOSAR Chinese Vehicle-2-X Message (CnV2xMsg)

The CnV2xMsg can get channel parameters by calling CnV2xM\_GetChanTxParams in this document.

## 6 Requirements Tracing

Requirement	Description	Satisfied by
[CP_SRS_CnV2X_-00301]	The Access layer of Chinese V2X Communication shall be compliant to CCSA specification of Air Interface for LTE-based Vehicular Communication	[CP_SWS_CnV2xM_01003]
[CP_SRS_CnV2X_-00401]	The network layer of Chinese V2X communication shall support a CCSA compliant Network layer protocol of LTE-based vehicular communication	[CP_SWS_CnV2xM_00002] [CP_SWS_CnV2xM_00003] [CP_SWS_CnV2xM_00004] [CP_SWS_CnV2xM_02001] [CP_SWS_CnV2xM_02005] [CP_SWS_CnV2xM_02007] [CP_SWS_CnV2xM_02008] [CP_SWS_CnV2xM_02020]
[CP_SRS_CnV2X_-00404]	The network layer of Chinese V2X communication shall provide CBR or Max data rate to message Layer	[CP_SWS_CnV2xM_00005]
[SRS_BSW_00345]	BSW Modules shall support pre-compile configuration	[CP_SWS_CnV2xM_03001]
[SRS_BSW_00414]	Init functions shall have a pointer to a configuration structure as single parameter	[CP_SWS_CnV2xM_02004]

## 7 Functional specification

### 7.1 Startup Behavior

[CP\_SWS\_CnV2xM\_00002]{DRAFT} [The function CnV2xM\_Init of the CnV2xM shall initialize the underlying MCAL/ECUAL module CV2x by Ethlf\_GetControllerMode and Ethlf\_SetControllerMode with the respective configured EthlfController CnV2xMEthlfCtrlRef.] ([CP\\_SRS\\_CnV2X\\_00401](#))

[CP\_SWS\_CnV2xM\_00003]{DRAFT} [The Ethernet State Manager (EthSm) shall not be involved in the startup of the Cellular V2X stack.] ([CP\\_SRS\\_CnV2X\\_00401](#))

### 7.2 Shutdown Behavior

[CP\_SWS\_CnV2xM\_00004]{DRAFT} [The Cellular V2X Communication shall be active unless the ECU hardware is being shut down or reset. There are no means to stop the Cellular Vehicle-2-X communication in advance.] ([CP\\_SRS\\_CnV2X\\_00401](#))

### 7.3 Common Channel Parameter Acquisition

[CP\_SWS\_CnV2xM\_00005]{DRAFT} [The CnV2xM module shall implement cellular V2X Channel parameter acquisition via API CnV2xM\_GetChanTxParams.] ([CP\\_SRS\\_CnV2X\\_00404](#))

### 7.4 Error Classification

#### 7.4.1 Development Errors

[CP\_SWS\_CnV2xM\_00006] [

Type of error	Related error code	Error value
API service called with invalid parameter	CNV2XM_E_PARAM	0x01
API service called with invalid pointer	CNV2XM_E_PARAM_POINTER	0x02
API service used without module initialization	CNV2XM_E_UNINIT	0x03
API service called with invalid configuration pointer	CNV2XM_E_INIT_FAILED	0x04

]()

#### 7.4.2 Runtime Errors

There are no runtime errors

### **7.4.3 Transient Faults**

There are no transient faults.

### **7.4.4 Production Errors**

There are no production errors.

### **7.4.5 Extended Production Errors**

There are no extended production errors.

## 8 API specification

### 8.1 Imported types

In this chapter all types included from the following files are listed.

[CP\_SWS\_CnV2xM\_01001] [

Module	Header File	Imported Type
CV2x	CV2x_GeneralTypes.h	CV2x_GetChanTxParamIdType (draft)
Eth	Eth_GeneralTypes.h	Eth_ModeType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType
V2xM	V2xM.h	V2xM_ConfigType

]()

### 8.2 Type definitions

#### 8.2.1 CnV2xM\_ConfigType

[CP\_SWS\_CnV2xM\_01002]{DRAFT} [

<b>Name</b>	CnV2xM_ConfigType (draft)		
<b>Kind</b>	Structure		
<b>Elements</b>	implementation specific		
	<b>Type</b>	V2xM_ConfigType	
	<b>Comment</b>	The content of the configuration data structure is implementation specific.	
<b>Description</b>	Configuration data structure of the CnV2xM module. <b>Tags:</b> atp.Status=draft		
<b>Available via</b>	CnV2xM.h		

]()

#### 8.2.2 CnV2xM\_ChanType

[CP\_SWS\_CnV2xM\_01003]{DRAFT} [

<b>Name</b>	CnV2xM_ChanType (draft)		
<b>Kind</b>	Enumeration		
<b>Range</b>	CN_V2X_CH1	-	Channel of 5905-5925MHz band





<b>Description</b>	Specifies the channel assigned for LTE based V2X in China. <b>Tags:</b> atp.Status=draft
<b>Available via</b>	CnV2xM.h

](CP\_SRS\_CnV2X\_00301)

## 8.3 Function definitions

This is a list of functions provided for upper layer modules.

### 8.3.1 CnV2xM\_Init

[CP\_SWS\_CnV2xM\_02001]{DRAFT} [

<b>Service Name</b>	CnV2xM_Init (draft)	
<b>Syntax</b>	<pre>void CnV2xM_Init (     const CnV2xM_ConfigType* CfgPtr )</pre>	
<b>Service ID [hex]</b>	0x01	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non Reentrant	
<b>Parameters (in)</b>	CfgPtr	ConfigPtr Pointer to the selected configuration set
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	None	
<b>Return value</b>	None	
<b>Description</b>	Initialize the CnV2xM module <b>Tags:</b> atp.Status=draft	
<b>Available via</b>	CnV2xM.h	

](CP\_SRS\_CnV2X\_00401)

[CP\_SWS\_CnV2xM\_02002]{DRAFT} [The function CnV2xM\_Init shall store the access to the configuration structure for subsequent API calls.]()

[CP\_SWS\_CnV2xM\_02003]{DRAFT} [If development error detection is enabled: The function CnV2xM\_Init shall check the parameter CfgPtr for containing a valid configuration. If the check fails, the function shall raise the development error CNV2XM\_E\_INIT\_FAILED.]()

[CP\_SWS\_CnV2xM\_02004]{DRAFT} [The Configuration pointer configPtr shall always have a NULL\_PTR value.](SRS\_BSW\_00414)

### 8.3.2 CnV2xM\_GetVersionInfo

[CP\_SWS\_CnV2xM\_02005]{DRAFT} [

<b>Service Name</b>	CnV2xM_GetVersionInfo (draft)	
<b>Syntax</b>	<pre>void CnV2xM_GetVersionInfo (     Std_VersionInfoType* VersionInfoPtr )</pre>	
<b>Service ID [hex]</b>	0x02	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	None	
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	VersionInfoPtr	Pointer to where to store the version information of this module.
<b>Return value</b>	None	
<b>Description</b>	Returns the version information of this module. <b>Tags:</b> atp.Status=draft	
<b>Available via</b>	CnV2xM.h	

](CP\_SRS\_CnV2X\_00401)

[CP\_SWS\_CnV2xM\_02006]{DRAFT} [If development error detection is enabled: the function CnV2xM\_GetVersionInfo shall check the parameter VersionInfoPtr for being valid. If the check fails, the function shall raise the development error CNV2XM\_E\_PARAM\_POINTER.]()

### 8.3.3 CnV2xM\_GetChanTxParams

[CP\_SWS\_CnV2xM\_02007]{DRAFT} [

<b>Service Name</b>	CnV2xM_GetChanTxParams (draft)	
<b>Syntax</b>	<pre>Std_ReturnType CnV2xM_GetChanTxParams (     uint8 CtrlId,     const CnV2xM_ChannelType ChannelId,     const CV2x_GetChanTxParamIdType* ParamIds,     uint32* ParamValues,     uint8 NumParams )</pre>	
<b>Service ID [hex]</b>	0x03	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non Reentrant	
<b>Parameters (in)</b>	CtrlId	Index of the controller within the context of the Cellular V2X Driver
	ChannelId	Index of Transceiver's Radio Channel
	ParamIds	IDs of the Parameters to read
	NumParams	Number of parameters to read
<b>Parameters (inout)</b>	None	
<b>Parameters (out)</b>	ParamValues	Value of the requested Parameters
<b>Return value</b>	Std_ReturnType	E_OK: success E_NOT_OK: failed setting parameter





<b>Description</b>	Read values related to the receive direction of the channel. For example, this could be a Channel Busy Ratio(CBR) <b>Tags:</b> atp.Status=draft
<b>Available via</b>	CnV2xM.h

](CP\_SRS\_CnV2X\_00401)

**[CP\_SWS\_CnV2xM\_02008]{DRAFT}** [The function CnV2xM\_GetChanTxParams shall provide Tx Channel parameters.](CP\_SRS\_CnV2X\_00401)

**[CP\_SWS\_CnV2xM\_02009]{DRAFT}** [If development error detection is enabled: the function CnV2xM\_GetChanTxParams shall check that the service CnV2xM\_Init was previously called. If the check fails, the function shall raise the development error CNV2XM\_E\_UNINIT.]( )

**[CP\_SWS\_CnV2xM\_02010]{DRAFT}** [If development error detection is enabled: the function CnV2xM\_GetChanTxParams shall check the parameter CtrlId for being valid. If the check fails, the function shall raise the development error CNV2XM\_E\_PARAM.]( )

**[CP\_SWS\_CnV2xM\_02011]{DRAFT}** [If development error detection is enabled: the function CnV2xM\_GetChanTxParams shall check the parameter ChannelId for being valid. If the check fails, the function shall raise the development error CNV2XM\_E\_PARAM.]( )

**[CP\_SWS\_CnV2xM\_02012]{DRAFT}** [If development error detection is enabled: the function CnV2xM\_GetChanTxParams shall check the parameter ParamIds for being valid. If the check fails, the function shall raise the development error CNV2XM\_E\_PARAM\_POINTER.]( )

**[CP\_SWS\_CnV2xM\_02013]{DRAFT}** [If development error detection is enabled: the function CnV2xM\_GetChanTxParams shall check the parameter ParamValues for being valid. If the check fails, the function shall raise the development error CNV2XM\_E\_PARAM\_POINTER.]( )

## 8.4 Callback notifications

The CnV2xM does not provide any callback functions.



## 8.5 Scheduled functions

### 8.5.1 CnV2xM\_MainFunction

[CP\_SWS\_CnV2xM\_02020]{DRAFT} [

<b>Service Name</b>	CnV2xM_MainFunction (draft)
<b>Syntax</b>	void CnV2xM_MainFunction ( void )
<b>Service ID [hex]</b>	0x04
<b>Description</b>	Main function of the CnV2xM module for periodical execution of protocol operations. <b>Tags:</b> atp.Status=draft
<b>Available via</b>	SchM_CnV2xM.h

](CP\_SRS\_CnV2X\_00401)

[CP\_SWS\_CnV2xM\_02021]{DRAFT} [The function CnV2xM\_MainFunction shall be used for getting Tx channel parameters via Ethlf\_GetChanCV2xPC5TxParams API call from Cellular V2X Driver.]()

## 8.6 Expected interfaces

### 8.6.1 Mandatory interfaces

This chapter defines all external interfaces, which are required to fulfill the core functionality of the module.

[CP\_SWS\_CnV2xM\_02022] [

API Function	Header File	Description
Ethlf_GetChanCV2xPC5TxParams	–	Read values related to the receive direction of the channel. For example, this could be a Channel Busy Ratio(CBR)
Ethlf_GetControllerMode	Ethlf.h	Obtains the state of the indexed controller
Ethlf_SetControllerMode	Ethlf.h	Enables / disables the indexed controller

]()

### 8.6.2 Optional interfaces

This chapter defines all external interfaces, which are required to fulfill an optional functionality of the module.

**[CP\_SWS\_CnV2xM\_02023]** [

<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Det_ReportError	Det.h	Service to report development errors.

]()

## 9 Sequence diagrams

### 9.1 CnV2xM Initialization

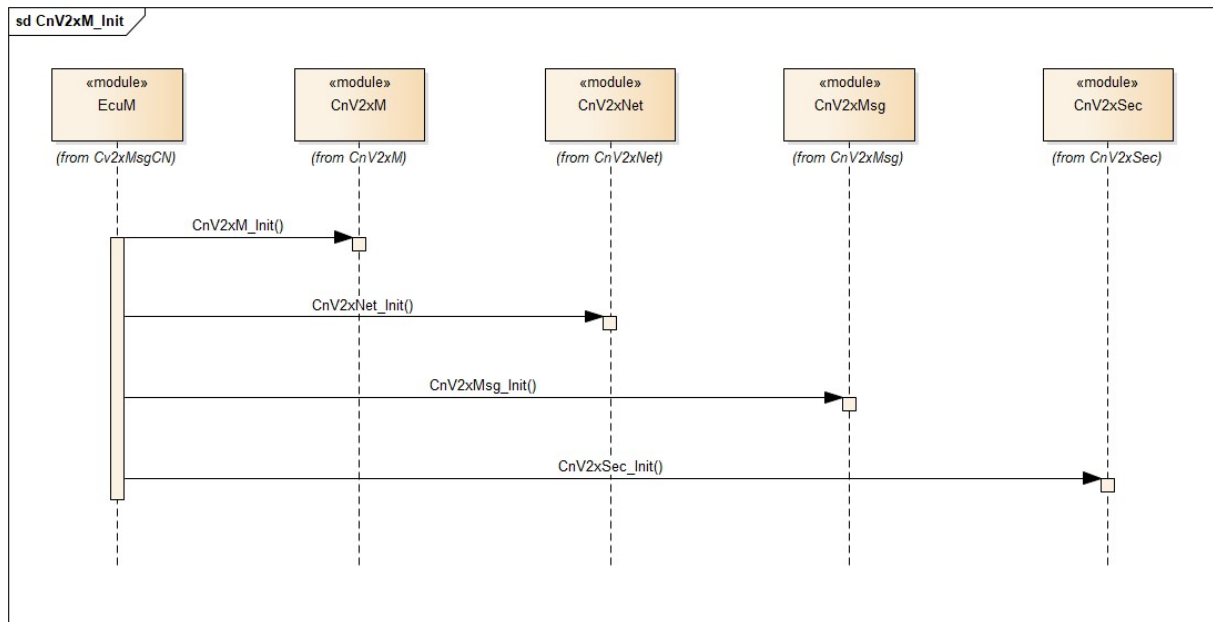


Figure 9.1: CnV2xM Initialization

## 9.2 Initialization of Cellular V2X Drivers

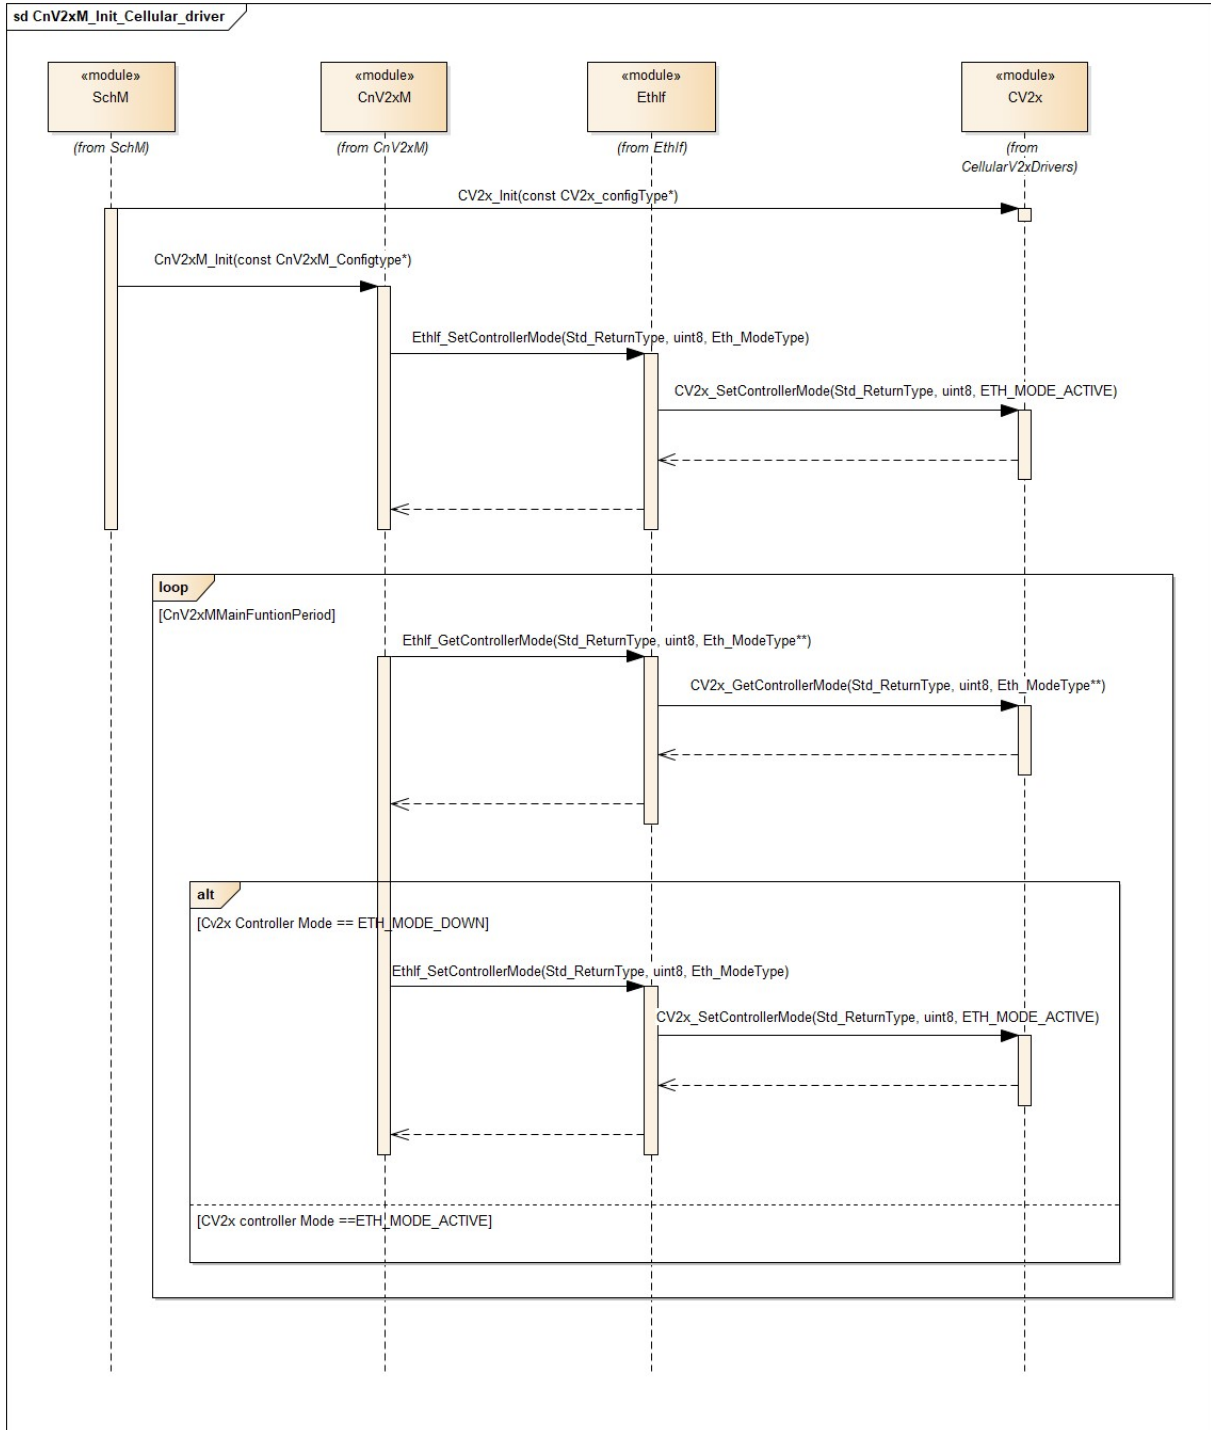


Figure 9.2: Initialization of Cellular V2X Drivers

## 10 Configuration specification

Chapter 10.1 specifies the structure (containers) and the parameters of the module CnV2xM.

### 10.1 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapter 7 and Chapter 8.

#### 10.1.1 Variants

[CP\_SWS\_CnV2xM\_03001]{DRAFT} [The CnV2xM module only supports VARIANT-PRE-COMPILE] ([SRS\\_BSW\\_00345](#))

#### 10.1.2 CnV2xM

<b>SWS Item</b>	[ECUC_CnV2xM_00001]
<b>Module Name</b>	CnV2xM
<b>Description</b>	Configuration of the CnV2xM module.
<b>Post-Build Variant Support</b>	false
<b>Supported Config Variants</b>	VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
<a href="#">CnV2xMGeneral</a>	1	This container contains the general configuration parameters of the BSW module CnV2xM. <b>Tags:</b> atp.Status=draft

#### 10.1.3 CnV2xMGeneral

<b>SWS Item</b>	[ECUC_CnV2xM_00002]
<b>Container Name</b>	CnV2xMGeneral
<b>Parent Container</b>	<a href="#">CnV2xM</a>
<b>Description</b>	This container contains the general configuration parameters of the BSW module CnV2xM. <b>Tags:</b> atp.Status=draft
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>[ECUC_CnV2xM_00004]</b>		
<b>Parameter Name</b>	CnV2xMDevErrorDetect		
<b>Parent Container</b>	<a href="#">CnV2xMGeneral</a>		
<b>Description</b>	Switches the Default Error Tracer (Det) detection and notification ON or OFF. - true: enabled (ON) - false: disabled (OFF) <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CnV2xM_00003]</b>		
<b>Parameter Name</b>	CnV2xMMainFunctionPeriod		
<b>Parent Container</b>	<a href="#">CnV2xMGeneral</a>		
<b>Description</b>	This parameter defines the schedule period of CnV2xM_MainFunction.Unit:[s] <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	]0 .. 1[		
<b>Default value</b>	0.1		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CnV2xM_00005]</b>		
<b>Parameter Name</b>	CnV2xMVersionInfoApi		
<b>Parent Container</b>	<a href="#">CnV2xMGeneral</a>		
<b>Description</b>	Enable/disables the API for reading the version information of the CnV2xM Module. - true: enabled (ON) - false: disabled (OFF) <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>[ECUC_CnV2xM_00006]</b>		
<b>Parameter Name</b>	CnV2xMEthIfCtrlRef		
<b>Parent Container</b>	<a href="#">CnV2xMGeneral</a>		
<b>Description</b>	This is represents the reference to the Ethernet interface taken to transmit the C-V2X packets to. <b>Tags:</b> atp.Status=draft		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to EthIfController		
<b>Post-Build Variant Value</b>	false		
<b>Value Configuration Class</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	-	
	<b>Post-build time</b>	-	
<b>Scope / Dependency</b>	scope: ECU		

**No Included Containers**

## **A Not applicable requirements**

None.