

| | |
|-----------------------------------|--------------------------------------------------|
| Document Title | Specification of a Request Manager for SAE J1939 |
| Document Owner | AUTOSAR |
| Document Responsibility | AUTOSAR |
| Document Identification No | 611 |

| | |
|---------------------------------|------------------|
| Document Status | published |
| Part of AUTOSAR Standard | Classic Platform |
| Part of Standard Release | R22-11 |

| Document Change History | | | |
|--------------------------------|----------------|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Date | Release | Changed by | Description |
| 2022-11-24 | R22-11 | AUTOSAR Release Management | <ul style="list-style-type: none"> • No content changes |
| 2021-11-25 | R21-11 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Converted to \LaTeX • Fixed UserId parameter range • Extended acronym and related documents tables • Improved linking of terms |
| 2020-11-30 | R20-11 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Improved structure of error sections • Replaced error descriptions with generated tables |
| 2019-11-28 | R19-11 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Cleaned up EcuC diagrams • Improved service port tables • Changed Document Status from Final to published |
| 2018-10-31 | 4.4.0 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Changed header file structure • Improved name of J1939Rm_ComRxIpduCallout • Harmonized J1939RM_E_UNINIT • Routing of RQST/RQST2/ACKM |

| | | | |
|------------|-------|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2017-12-08 | 4.3.1 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Clarified availability of J1939Rm_ComRxIpduCallout • Added internal feedback of ACKM • Clarification of extIdInfo parameter and underlying standard • Improved parameter checks |
| 2016-11-30 | 4.3.0 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Request2 support • Improved handling of meta data • Reliable TxConfirmation replaces timeout • Separate configuration of different users |
| 2015-07-31 | 4.2.2 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Fixed names and signatures of service ports • Support for explicit broadcast of ACKM • Introduction of further error classes |
| 2014-10-31 | 4.2.1 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Improved interaction with COM • Harmonized with SWS BSW General |
| 2014-03-31 | 4.1.3 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Clarified availability of callbacks • Standardized callback header names • Fixed UserType Enum |
| 2013-10-31 | 4.1.2 | AUTOSAR Release Management | <ul style="list-style-type: none"> • Additional development error for function parameter checks • Clarification of Request timeout and state handling • Separate configuration of received and transmitted PGNs • Removed change documentation |
| 2013-03-15 | 4.1.1 | AUTOSAR Administration | <ul style="list-style-type: none"> • Initial Release |

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Contents

| | | |
|--------|-----------------------------------------------|----|
| 1 | Introduction and functional overview | 7 |
| 1.1 | Request Management according to SAE J1939 | 7 |
| 1.2 | J1939 Request Manager BSW Module | 7 |
| 1.3 | J1939 Terminology | 8 |
| 2 | Acronyms and Abbreviations | 9 |
| 3 | Related documentation | 10 |
| 3.1 | Input documents & related standards and norms | 10 |
| 3.2 | Related specification | 11 |
| 4 | Constraints and assumptions | 12 |
| 4.1 | Limitations | 12 |
| 4.2 | Applicability to car domains | 12 |
| 5 | Dependencies to other modules | 13 |
| 5.1 | File structure | 13 |
| 5.1.1 | Code file structure | 13 |
| 5.1.2 | Header file structure | 13 |
| 6 | Requirements Tracing | 14 |
| 7 | Functional specification | 19 |
| 7.1 | Overview | 19 |
| 7.2 | Module Handling | 19 |
| 7.2.1 | Initialization | 19 |
| 7.2.2 | Timing Related Functionality | 20 |
| 7.3 | Communication State Handling | 20 |
| 7.4 | Reception of Requests | 20 |
| 7.4.1 | Request Forwarding | 21 |
| 7.4.2 | Request Handling via COM | 21 |
| 7.4.3 | Request of Unknown PGNs | 22 |
| 7.5 | Transmission of Acknowledgements | 22 |
| 7.6 | Transmission of Requests | 23 |
| 7.7 | Reception of Acknowledgements | 24 |
| 7.8 | Timeout Supervision | 25 |
| 7.9 | Routing of Requests and Acknowledgements | 26 |
| 7.10 | Error Classification | 27 |
| 7.10.1 | Development Errors | 27 |
| 7.10.2 | Runtime Errors | 28 |
| 7.10.3 | Transient Faults | 28 |
| 7.10.4 | Production Errors | 28 |
| 7.10.5 | Extended Production Errors | 28 |
| 8 | API specification | 29 |

| | | |
|---------|----------------------------------|----|
| 8.1 | API Parameter Checking | 29 |
| 8.2 | Imported types | 29 |
| 8.3 | Type definitions | 30 |
| 8.3.1 | J1939Rm_ConfigType | 30 |
| 8.3.2 | J1939Rm_StateType | 30 |
| 8.4 | Function definitions | 31 |
| 8.4.1 | J1939Rm_Init | 31 |
| 8.4.2 | J1939Rm_DelInit | 31 |
| 8.4.3 | J1939Rm_GetVersionInfo | 32 |
| 8.4.4 | J1939Rm_SetState | 32 |
| 8.4.5 | J1939Rm_SendRequest | 33 |
| 8.4.6 | J1939Rm_CancelRequestTimeout | 34 |
| 8.4.7 | J1939Rm_SendAck | 36 |
| 8.5 | Callback notifications | 37 |
| 8.5.1 | J1939Rm_RxIndication | 37 |
| 8.5.2 | J1939Rm_TxConfirmation | 38 |
| 8.5.3 | J1939Rm_CheckReceivedComIPdu | 38 |
| 8.6 | Scheduled functions | 39 |
| 8.6.1 | J1939Rm_MainFunction | 39 |
| 8.7 | Expected interfaces | 39 |
| 8.7.1 | Mandatory interfaces | 40 |
| 8.7.2 | Optional interfaces | 40 |
| 8.7.3 | Configurable interfaces | 40 |
| 8.7.3.1 | <User>_RequestIndication | 41 |
| 8.7.3.2 | <User>_AckIndication | 42 |
| 8.7.3.3 | <User>_RequestTimeoutIndication | 43 |
| 8.8 | Service Interfaces | 43 |
| 8.8.1 | Provided Service Ports | 43 |
| 8.8.1.1 | J1939Rm_SendAck | 44 |
| 8.8.1.2 | J1939Rm_SendRequest | 44 |
| 8.8.1.3 | J1939Rm_CancelRequestTimeout | 44 |
| 8.8.2 | Required Service Ports | 45 |
| 8.8.2.1 | J1939Rm_AckIndication | 45 |
| 8.8.2.2 | J1939Rm_RequestIndication | 45 |
| 8.8.2.3 | J1939Rm_RequestTimeoutIndication | 45 |
| 8.8.3 | Client-Server Interfaces | 46 |
| 8.8.3.1 | AppSendAck | 46 |
| 8.8.3.2 | AppSendRequest | 47 |
| 8.8.3.3 | AppCancelRequestTimeout | 48 |
| 8.8.3.4 | AppAckIndication | 49 |
| 8.8.3.5 | AppRequestIndication | 50 |
| 8.8.3.6 | AppRequestTimeoutIndication | 52 |
| 8.8.4 | Implementation Data Types | 53 |
| 8.8.4.1 | J1939Rm_AckCode | 53 |
| 8.8.4.2 | J1939Rm_ExtIdType | 53 |
| 8.8.4.3 | J1939Rm_ExtIdInfoType | 54 |

| | | |
|---------|------------------------------------------------------------------------------------------------|----|
| 9 | Sequence diagrams | 55 |
| 9.1 | Reception of Request PG | 55 |
| 9.2 | Transmission of Acknowledgement PG | 55 |
| 9.3 | Handling of Request for a COM Pdu | 56 |
| 9.4 | Handling of Request for a Diagnostic Pdu | 57 |
| 9.5 | Transmission of Request PG | 57 |
| 9.6 | Reception of Acknowledgement PG | 58 |
| 9.7 | Monitoring of Request Timeout | 58 |
| 10 | Configuration specification | 60 |
| 10.1 | Containers and configuration parameters | 60 |
| 10.1.1 | J1939Rm | 67 |
| 10.1.2 | J1939RmGeneral | 67 |
| 10.1.3 | J1939RmConfigSet | 71 |
| 10.1.4 | J1939RmChannel | 71 |
| 10.1.5 | J1939RmAckmRxPdu | 73 |
| 10.1.6 | J1939RmAckmTxPdu | 74 |
| 10.1.7 | J1939RmRqstRxPdu | 75 |
| 10.1.8 | J1939RmRqstTxPdu | 76 |
| 10.1.9 | J1939RmRqst2RxPdu | 77 |
| 10.1.10 | J1939RmRqst2TxPdu | 77 |
| 10.1.11 | J1939RmNode | 78 |
| 10.1.12 | J1939RmUser | 79 |
| 10.1.13 | J1939RmNmUser | 80 |
| 10.1.14 | J1939RmDcmUser | 80 |
| 10.1.15 | J1939RmCddUser | 81 |
| 10.1.16 | J1939RmRteUser | 85 |
| 10.1.17 | J1939RmComUser | 88 |
| 10.1.18 | J1939RmComIPdu | 88 |
| 10.2 | Published Information | 90 |
| A | History of Constraints and Specification Items | 91 |
| A.1 | Constraint and Specification Item History of this Document According to AUTOSAR Release R21-11 | 91 |
| A.1.1 | Added Traceables in R21-11 | 91 |
| A.1.2 | Changed Traceables in R21-11 | 91 |
| A.1.3 | Deleted Traceables in R21-11 | 91 |
| A.2 | Constraint and Specification Item History of this Document According to AUTOSAR Release R22-11 | 91 |
| A.2.1 | Added Traceables in R22-11 | 91 |
| A.2.2 | Changed Traceables in R22-11 | 91 |
| A.2.3 | Deleted Traceables in R22-11 | 91 |
| B | Not Applicable Requirements | 92 |

1 Introduction and functional overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module [J1939 Request Manager](#).

1.1 Request Management according to SAE J1939

J1939 defines a special [parameter group](#) (PG) called [Request](#) (RQST, PGN = 0x0EA00), which may be used to request transmission of any other [parameter group](#). The [Request](#) parameter group just contains the PGN of the requested [parameter group](#).

Depending on the [destination address](#) used by the [Request](#) PG, the response must be sent directly to the requesting ECU, or to all ECUs. For short parameter groups with PDU1 format, the [destination address](#) is set accordingly¹, for large [parameter groups](#) the suitable transport protocol mode (BAM or CMDT, see [1, SWS SAE J1939 Transport Layer] and [2, SAE J1939-21]) is used.

Depending on the requested [parameter group](#) and the [destination address](#) of the [Request](#) PG, ECUs answer either with the requested [parameter group](#), with the special [Acknowledgement parameter group](#) (ACKM, PGN = 0x0E800), or not at all.

Finally, J1939 defines that the response to a [Request](#) will be expected within 1.25s after the [Request](#) was sent. The responding node is required to answer within 200ms.

Besides the [Request](#) PG, J1939 also defines a [Request2](#) PG (RQST2, PGN = 0x0C900). The behavior of this PG is identical to that of the [Request](#) PG, with the following extensions:

- A transmission with the [Transfer](#) PG can be requested to provide the same PG from multiple ECUs.
- [Extended identifier bytes](#) can be specified to request a defined layout of a multiplexed message.

1.2 J1939 Request Manager BSW Module

The [J1939 Request Manager](#) (J1939Rm) handles received and transmitted [Request](#), [Request2](#), and [Acknowledgement](#) PGs. It natively supports handling of incoming requests for the [AddressClaimed](#) PG and is configurable to support incoming requests for diagnostic and other J1939 PGNs. Unknown incoming requests are

¹Short [parameter groups](#) with PDU2 format have no [destination address](#), they are broadcast PGs by nature.

answered with a negative [Acknowledgement PG](#) if they address a specific [destination address](#).

The [J1939Rm](#) also supports transmission of requests and timeout supervision for the resulting [PG](#) or acknowledgement.

1.3 J1939 Terminology

The terminology of J1939 differs noticeably from the usual AUTOSAR terminology. For consistency reasons, this introduction used the terms of the J1939 specification, while the remainder of this specification will use terms that are more common within AUTOSAR:

- 'I-PDU' replaces 'parameter group'

2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations relevant to the [J1939 Request Manager](#) that are not included in the [3, AUTOSAR Glossary].

| Abbreviation / Acronym | Description |
|---------------------------|--------------------------------------------------------------------------------------------------------|
| AC | J1939 AddressClaimed PG (PGN = 0x0EE00) |
| ACK | J1939 Acknowledgement PG (ACKM) with control byte set to 0 |
| ACKM | J1939 Acknowledgement PG (PGN = 0x0E800) |
| BSW | Basic Software (module) |
| CA | Controller Application, role of an ECU tied to one address |
| CDD | Complex Driver, any software that interfaces directly with AUTOSAR BSW, but is not defined by AUTOSAR |
| DA | Destination address, the address of the receiver of a PG. |
| DET | Default Error Tracer, supports development and runtime error reporting |
| DP | Data Page, the most significant bit (MSB) of the 18 bit PGN |
| EDP | Extended Data Page, the second bit (after MSB) of the 18 bit PGN |
| Extended Identifier Bytes | These bytes represent multiplexor values in a multiplexed message which is requested via RQST2 |
| J1939Rm | SAE J1939 Request Manager |
| MetaData | Meta data transferred alongside a PDU |
| NACK | J1939 Acknowledgement PG (ACKM) with control byte set to 1 |
| PDU | Protocol Data Unit, a message transferred between the layers of the AUTOSAR stack, also known as I-PDU |
| PDU1 | J1939 PDU Type 1, this kind of PDUs can be sent to a specific destination address |
| PDU2 | J1939 PDU Type 2, this kind of PDUs is always sent to the whole network |
| PDUF | PDU Format, the middle byte of the 18 bit PGN |
| PDUS | PDU Specific, the lower byte of the 18 bit PGN |
| PG | Parameter Group |
| PGN | Parameter Group Number (18 bits, contains EDP, DP, PDUF, PDUS) |
| RQST | J1939 Request PG (PGN = 0x0EA00) |
| RQST2 | J1939 Request2 PG (PGN = 0x0C900) |
| RTE | AUTOSAR Runtime Environment |
| SA | Source address, the address of the transmitter of a PG. |
| SW-C | AUTOSAR Software Component (of the Application) |
| XFER | J1939 Transfer PG (PGN = 0x0CA00) |

3 Related documentation

3.1 Input documents & related standards and norms

- [1] Specification of a Transport Layer for SAE J1939
AUTOSAR_SWS_SAEJ1939TransportLayer
- [2] SAE J1939-21 Data Link Layer
- [3] Glossary
AUTOSAR_TR_Glossary
- [4] General Specification of Basic Software Modules
AUTOSAR_SWS_BSWGeneral
- [5] Layered Software Architecture
AUTOSAR_EXP_LayeredSoftwareArchitecture
- [6] Specification of Communication
AUTOSAR_SWS_COM
- [7] Specification of PDU Router
AUTOSAR_SWS_PDURouter
- [8] Specification of Network Management for SAE J1939
AUTOSAR_SWS_SAEJ1939NetworkManagement
- [9] Specification of a Diagnostic Communication Manager for SAE J1939
AUTOSAR_SWS_SAEJ1939DiagnosticCommunicationManager
- [10] Specification of Default Error Tracer
AUTOSAR_SWS_DefaultErrorTracer
- [11] Specification of RTE Software
AUTOSAR_SWS_RTE
- [12] Complex Driver design and integration guideline
AUTOSAR_EXP_CDDDesignAndIntegrationGuideline
- [13] Specification of ECU Configuration
AUTOSAR_TPS_ECUConfiguration
- [14] Specification of CAN Interface
AUTOSAR_SWS_CANInterface
- [15] Specification of Communication Manager
AUTOSAR_SWS_COMManager
- [16] Requirements on BSW Modules for SAE J1939
AUTOSAR_SRS_SAEJ1939
- [17] General Requirements on Basic Software Modules
AUTOSAR_SRS_BSWGeneral

- [18] Specification of Communication Stack Types
AUTOSAR_SWS_CommunicationStackTypes
- [19] Specification of Standard Types
AUTOSAR_SWS_StandardTypes
- [20] List of Basic Software Modules
AUTOSAR_TR_BSWModuleList
- [21] System Template
AUTOSAR_TPS_SystemTemplate

3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [4, SWS BSW General], which is also valid for [SAE J1939 Request Manager](#).

Thus, the specification SWS BSW General shall be considered as additional and required specification for [SAE J1939 Request Manager](#).

4 Constraints and assumptions

4.1 Limitations

The [J1939 Request Manager](#) only implements [Request](#), [Request2](#), and [Acknowledgement](#) PGs. It does not provide support for the [Transfer](#) PG.

4.2 Applicability to car domains

J1939 is developed by the SAE as a standard for heavy-duty on-highway, farming, and construction vehicles. It is not applicable to passenger cars or light trucks.

5 Dependencies to other modules

The [5, EXP Layered Software Architecture] shows an overview of the neighboring modules of the J1939 Request Manager.

The J1939 Request Manager (J1939Rm) has direct interfaces towards COM ([6, SWS Communication]), the PDU Router (PduR, [7, SWS PDU Router]), the J1939 Network Management module (J1939Nm, [8, SWS SAE J1939 Network Management]), the J1939 Diagnostic Communication Management module (J1939Dcm, [9, SWS SAE J1939 Diagnostic Communication Manager]), and the Default Error Tracer (DET, [10, SWS Default Error Tracer]), and also to application software components (SW-Cs) via the AUTOSAR Runtime Environment (RTE, [11, SWS RTE]) and Complex Drivers (CDD, see [12, CDD Design And Integration Guideline] and [13, TPS ECU Configuration]). Besides these, there are also indirect dependencies towards the CAN Interface (CanIf, [14, SWS CAN Interface]) and the Communication Manager (ComM, [15, SWS Communication Manager]).

The J1939 Request Manager includes header files of COM, J1939Nm, J1939Dcm, PduR, DET, CDDs, and the RTE.

5.1 File structure

5.1.1 Code file structure

For details, refer to the section 5.1.6 "Code file structure" of the [4, SWS BSW General].

5.1.2 Header file structure

Besides the files defined in section 5.1.7 "Header file structure" of the [4, SWS BSW General], the J1939 Request Manager needs to include the files defined below.

[SWS_J1939Rm_00114] [J1939Rm shall include the header file `Com.h` if at least one `J1939RmComUser` is configured.] (*SRS_BSW_00301*)

[SWS_J1939Rm_00111] [J1939Rm shall include the header file `J1939Nm.h` if at least one `J1939RmNmUser` is configured.] (*SRS_BSW_00301*)

[SWS_J1939Rm_00112] [J1939Rm shall include the header file `J1939Dcm.h` if at least one `J1939RmDcmUser` is configured.] (*SRS_BSW_00301*)

[SWS_J1939Rm_00113] [J1939Rm shall include a header file named `<apiServicePrefix>_Cbk.h` for every configured `J1939RmCddUser`.] (*SRS_BSW_00301*)

Please note: Complex driver (CDD) APIs use the module prefix configured by the `apiServicePrefix` of the CDD's module description file.

6 Requirements Tracing

The following tables reference the requirements specified in [16, SRS SAE J1939] and [17, SRS BSW General] and links to the fulfillment of these. Please note that if column “Satisfied by” is empty for a specific requirement this means that this requirement is not fulfilled by this document.

| Requirement | Description | Satisfied by |
|--------------------|--------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [SRS_BSW_00171] | Optional functionality of a Basic-SW component that is not required in the ECU shall be configurable at pre-compile-time | [SWS_J1939Rm_00074] [SWS_J1939Rm_00075] [SWS_J1939Rm_00076] [SWS_J1939Rm_00079] [SWS_J1939Rm_00080] [SWS_J1939Rm_00081] [SWS_J1939Rm_00082] [SWS_J1939Rm_00083] [SWS_J1939Rm_00084] [SWS_J1939Rm_00085] [SWS_J1939Rm_00086] [SWS_J1939Rm_00087] |
| [SRS_BSW_00301] | All AUTOSAR Basic Software Modules shall only import the necessary information | [SWS_J1939Rm_00111] [SWS_J1939Rm_00112] [SWS_J1939Rm_00113] [SWS_J1939Rm_00114] |
| [SRS_BSW_00350] | All AUTOSAR Basic Software Modules shall allow the enabling/disabling of detection and reporting of development errors. | [SWS_J1939Rm_00011] |
| [SRS_BSW_00386] | The BSW shall specify the configuration and conditions for detecting an error | [SWS_J1939Rm_00011] [SWS_J1939Rm_00033] [SWS_J1939Rm_00040] [SWS_J1939Rm_00041] [SWS_J1939Rm_00067] [SWS_J1939Rm_00068] [SWS_J1939Rm_00069] [SWS_J1939Rm_00070] [SWS_J1939Rm_00071] [SWS_J1939Rm_00096] |
| [SRS_BSW_00407] | Each BSW module shall provide a function to read out the version information of a dedicated module implementation | [SWS_J1939Rm_00039] |
| [SRS_BSW_00478] | Timing limits of main functions | [SWS_J1939Rm_00043] [SWS_J1939Rm_00072] |
| [SRS_J1939_-00001] | The J1939 Transport Layer module shall be configurable to support only transport protocol variant BAM | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00002] | The J1939 Transport Layer module shall identify each N-SDU with a unique identifier | [SWS_J1939Rm_NA] |

| Requirement | Description | Satisfied by |
|--------------------|----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [SRS_J1939_-00003] | The N-PDUs used to transport a J1939Tp N-SDUs shall be statically configured | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00004] | The J1939 Transport Layer module shall identify each N-PDU with a unique identifier | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00006] | The properties of a J1939Tp N-SDU shall be statically configured | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00010] | The J1939 Transport Layer module shall implement an interface for initialization | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00011] | The J1939 Transport Layer services shall not be operational before initializing the module | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00012] | The J1939 Request Manager shall provide an interface for module initialization | [SWS_J1939Rm_00012] [SWS_J1939Rm_00037] [SWS_J1939Rm_00073] |
| [SRS_J1939_-00013] | The J1939 Request Manager shall provide an interface for module shutdown | [SWS_J1939Rm_00013] [SWS_J1939Rm_00038] |
| [SRS_J1939_-00014] | The J1939 Request Manager shall forward incoming requests to configured destinations | [SWS_J1939Rm_00002] [SWS_J1939Rm_00003] [SWS_J1939Rm_00007] [SWS_J1939Rm_00008] [SWS_J1939Rm_00063] [SWS_J1939Rm_00100] [SWS_J1939Rm_00107] [SWS_J1939Rm_00115] [SWS_J1939Rm_00116] [SWS_J1939Rm_00122] |
| [SRS_J1939_-00015] | The J1939 Request Manager shall forward incoming acknowledgements to configured destinations | [SWS_J1939Rm_00026] [SWS_J1939Rm_00027] [SWS_J1939Rm_00028] [SWS_J1939Rm_00064] [SWS_J1939Rm_00066] [SWS_J1939Rm_00101] [SWS_J1939Rm_00106] [SWS_J1939Rm_00125] [SWS_J1939Rm_00126] |
| [SRS_J1939_-00016] | The J1939 Request Manager shall provide an interface for transmission of request messages | [SWS_J1939Rm_00016] [SWS_J1939Rm_00021] [SWS_J1939Rm_00022] [SWS_J1939Rm_00023] [SWS_J1939Rm_00025] [SWS_J1939Rm_00054] [SWS_J1939Rm_00097] [SWS_J1939Rm_00104] [SWS_J1939Rm_00117] [SWS_J1939Rm_00118] [SWS_J1939Rm_00124] |

| Requirement | Description | Satisfied by |
|--------------------|--------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [SRS_J1939_-00017] | The J1939 Request Manager shall provide an interface for transmission of acknowledgement messages | [SWS_J1939Rm_00008] [SWS_J1939Rm_00009] [SWS_J1939Rm_00018] [SWS_J1939Rm_00019] [SWS_J1939Rm_00020] [SWS_J1939Rm_00056] [SWS_J1939Rm_00098] [SWS_J1939Rm_00103] [SWS_J1939Rm_00123] |
| [SRS_J1939_-00018] | The AUTOSAR J1939 Transport Layer module shall support concurrent connections | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00019] | The J1939 Transport Layer module shall support the transport protocol variant BAM | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00020] | The AUTOSAR J1939 Transport Layer module shall support the transport protocol variant CMDT | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00021] | The J1939 Transport Layer module shall be compliant with the CAN Interface module notifications | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00022] | The timeout values of the J1939 transport protocol variants shall be supervised | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00023] | The J1939 Transport Layer module shall handle unexpected PDUs according to the SAE J1939 specification | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00024] | Unused Bytes in N-PDUs shall be padded | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00025] | The J1939 Transport Layer module shall be able to manage connections via BAM and CMDT in parallel | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00026] | The J1939 Request Manager shall support timeout supervision for outgoing requests | [SWS_J1939Rm_00017] [SWS_J1939Rm_00024] [SWS_J1939Rm_00029] [SWS_J1939Rm_00030] [SWS_J1939Rm_00055] [SWS_J1939Rm_00065] [SWS_J1939Rm_00099] [SWS_J1939Rm_00102] [SWS_J1939Rm_00105] [SWS_J1939Rm_00108] |
| [SRS_J1939_-00027] | The channels on which the J1939 Network Management module is active shall be configurable | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00028] | The local addresses of the ECU shall be configurable | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00029] | The NAMEs used for claiming of each configured address shall be configurable | [SWS_J1939Rm_NA] |

| Requirement | Description | Satisfied by |
|--------------------|--------------------------------------------------------------------------------------------------------------------------|------------------|
| [SRS_J1939_-00030] | The J1939 Network Management module shall provide an interface for module initialization | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00031] | The J1939 Network Management module shall provide an interface for module shutdown | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00032] | The J1939 Network Management module shall report a failed address claim to the Diagnostic Event Manager | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00033] | The J1939 Network Management module shall perform an initial address claim at startup | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00034] | The J1939 Network Management module shall react correctly to contending address claims | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00035] | The J1939 Network Management module shall react to requests for the Address Claimed PG | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00036] | The J1939 Network Management module shall only allow communication after a successful address claim | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00037] | The J1939 Network Management module shall delay communication after initial address claim | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00038] | The J1939 Transport Layer module shall provide an API to shut down operation of the module | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00039] | The J1939 Transport Layer module shall be able to cope with invalid values in received TP frames | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00040] | The AUTOSAR J1939 Transport Layer module shall be based on SAE J1939 specifications | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00041] | The J1939 Transport Layer module shall implement transport protocol functionalities in the layered software architecture | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00042] | The J1939 Transport Layer interface shall be independent of its internal configuration | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00043] | The J1939 Transport Layer module shall support generic channels | [SWS_J1939Rm_NA] |

| Requirement | Description | Satisfied by |
|--------------------|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [SRS_J1939_-00044] | The J1939 Transport Layer module shall support generic N-SDUs | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00045] | The J1939 Transport Layer module shall handle protocol timeout | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00046] | The J1939 Transport Layer module shall support automatic calculation of block sizes | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00047] | The J1939 Transport Layer module shall support retransmission of lost TP.DT frames | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00048] | The J1939 Transport Layer module shall support cancellation of ongoing reception and transmission | [SWS_J1939Rm_NA] |
| [SRS_J1939_-00049] | J1939 Modules shall support MetaData | [SWS_J1939Rm_00119] [SWS_J1939Rm_00120] [SWS_J1939Rm_00121] [SWS_J1939Rm_00122] [SWS_J1939Rm_00123] [SWS_J1939Rm_00124] [SWS_J1939Rm_00125] |
| [SRS_J1939_-00050] | The J1939 Request Manager shall route incoming requests and acknowledgements to connected channels | [SWS_J1939Rm_00127] [SWS_J1939Rm_00128] [SWS_J1939Rm_00129] |
| [SRS_J1939_-00051] | The J1939 Network Management module shall route received address claims to connected channels | [SWS_J1939Rm_NA] |
| [SRS_J1939_NA] | | [SWS_J1939Rm_NA] |

7 Functional specification

This chapter defines the behavior of the [J1939 Request Manager](#). The API of the module is defined in chapter [8](#), while the configuration is defined in chapter [10](#).

7.1 Overview

On one side, the [J1939 Request Manager](#) is responsible for routing incoming [RQST](#) and [RQST2 PGs](#) to the correct destination, and to provide an infrastructure for sending responding [ACKM PGs](#).

On the other side, the [J1939 Request Manager](#) also provides an infrastructure to send [RQST](#) and [RQST2 PGs](#), and to supervise timeout of the response(s), including but not limited to [ACKM PGs](#).

The [J1939 Request Manager](#) uses meta data items of type `CAN_ID_32` of the received and transmitted [ACKM](#) and [RQST PGs](#) to access the [source address](#), the [destination address](#), and the priority which are encoded in the CAN ID.

[SWS_J1939Rm_00119] [Meta data items of type `CAN_ID_32` contain the [source address](#) in the fourth (least significant) byte.]([SRS_J1939_00049](#))

[SWS_J1939Rm_00120] [Meta data items of type `CAN_ID_32` contain the [destination address](#) in the third byte.]([SRS_J1939_00049](#))

[SWS_J1939Rm_00121] [Meta data items of type `CAN_ID_32` contain the priority in the bits 2-4 of the first (most significant) byte, where bit 0 is the least significant bit of a byte.]([SRS_J1939_00049](#))

7.2 Module Handling

This section contains description of auxiliary functionality of the [J1939 Request Manager](#).

7.2.1 Initialization

The [J1939 Request Manager](#) is initialized via [J1939Rm_Init](#), and de-initialized via [J1939Rm_DeInit](#). Except for [J1939Rm_GetVersionInfo](#) and [J1939Rm_Init](#), the API functions of the [J1939 Request Manager](#) may only be called after the module has been properly initialized.

[SWS_J1939Rm_00012] [A call to [J1939Rm_Init](#) initializes all internal variables and sets the [J1939 Request Manager](#) to the initialized state.]([SRS_J1939_00012](#))

[SWS_J1939Rm_00013] [A call to `J1939Rm_DeInit` sets the `J1939 Request Manager` back to the uninitialized state.]([SRS_J1939_00013](#))

[SWS_J1939Rm_00011] [When `J1939Rm_Init` is called in initialized state, the `J1939 Request Manager` shall not re-initialize its internal variables. It shall instead call `Det_ReportError` with the error code `J1939RM_E_REINIT` if development error detection is enabled (see `J1939RmDevErrorDetect`).]([SRS_BSW_00350](#), [SRS_BSW_00386](#))

7.2.2 Timing Related Functionality

To be able to measure times, the `J1939 Request Manager` is triggered cyclically via the `J1939Rm_MainFunction`.

[SWS_J1939Rm_00072] [The `J1939 Request Manager` shall use the `J1939Rm_MainFunction` for timing related purposes.]([SRS_BSW_00478](#))

7.3 Communication State Handling

In general, request handling is only active when the ECU is online (see [8, SWS SAE J1939 Network Management] for details). The exceptions to this rule are received and transmitted requests for the `AddressClaimed PG`, which must be possible in all cases. The `J1939 Request Manager` provides an API that is used by the `BSW Mode Manager (BswM)` to notify the `J1939 communication state`.

[SWS_J1939Rm_00073] [During initialization via `J1939Rm_Init`, the `J1939 Request Manager` assumes the offline state for all nodes on all channels.]([SRS_J1939_00012](#))

[SWS_J1939Rm_00014] [A call to `J1939Rm_SetState` sets the state of a node's channel to online or offline.](`()`)

[SWS_J1939Rm_00015] [In the offline state, the `J1939 Request Manager` only processes requests for the `AddressClaimed PG`, while timeout supervision and acknowledgement handling are completely disabled.](`()`)

7.4 Reception of Requests

The `J1939 Request Manager` receives request PGs (`RQST` and `RQST2`) via `J1939Rm_RxIndication` from the CAN Interface. The `J1939 Request Manager` shall use the meta data item type `CAN_ID_32` to be able to identify the sender, the `destination address`, and the priority of the request.

[SWS_J1939Rm_00122] [The `J1939 Request Manager` shall use a meta data item of type `CAN_ID_32` to determine the `source address`, `destination ad-`

dress, and priority of received request PGNs.](SRS_J1939_00014, SRS_J1939_00049)

[SWS_J1939Rm_00007] [The J1939 Request Manager shall only accept requests addressed to the whole network (global DA), or to one of the configured addresses of the ECU (see J1939RmNmNodeRef).](SRS_J1939_00014)

Requests for the AddressClaimed PG (AC, PGN = 0x0EE00) always go to the J1939 Network Management module. Requests for the DMx PGNs (DM01 to DM57) always go to the J1939 Diagnostic Communication Manager, the destination of these and other PGNs is configured via J1939RmUserRequestPGN.

Besides forwarding to the J1939 Network Management module, the J1939 Diagnostic Communication Manager, and CDDs, the J1939 Request Manager can also forward requests to SW-Cs, and trigger COM to send requested PGNs.

7.4.1 Request Forwarding

Forwarding to other BSW modules is done via the generic callout function User_RequestIndication. Forwarding to SW-C uses a dedicated service port function with the same signature as the User_RequestIndication.

[SWS_J1939Rm_00002] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via J1939RmUserRequestPGN to trigger either the J1939 Diagnostic Communication Manager or a CDD, the J1939 Request Manager shall call the corresponding User_RequestIndication.](SRS_J1939_00014)

[SWS_J1939Rm_00116] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is AddressClaimed (AC, 0x0EE00), the J1939 Request Manager shall call J1939Nm_RequestIndication.](SRS_J1939_00014)

[SWS_J1939Rm_00003] [When J1939Rm_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via J1939RmUserRequestPGN to be forwarded to the RTE, the J1939 Request Manager shall call the corresponding service port function.](SRS_J1939_00014)

7.4.2 Request Handling via COM

If COM is configured as destination for the request of a certain PGN, the J1939 Request Manager will prepare the MetaData, and request COM to send the PDU with the MetaData provided via Com_TriggerIPDUWithMetaData. This sequence is shown in Figure 9.3.

[SWS_J1939Rm_00115] [When `J1939Rm_RxIndication` is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via `J1939RmComIPduPGN` to be handled via COM, and when the `extended identifier bytes` of an RQST2 match the multiplexor values of a multiplexed message, the J1939 Request Manager shall prepare the `MetaData` from the given information and provide it to COM via `Com_TriggerIPDUSendWithMetaData` together with the PduId of the transmitted COM I-PDU referenced by `J1939RmComIPduRef`.] (*SRS_J1939_00014*)

7.4.3 Request of Unknown PGNs

The J1939 Request Manager shall respond to requests for unknown PGNs with a NACK, but only when the request was sent to a specific `destination address`.

[SWS_J1939Rm_00008] [When `J1939Rm_RxIndication` is called by the PDU Router to indicate reception of a request, and the requested PGN or the requested `extended identifier bytes` are not configured, and the `destination address` is not the broadcast address, the J1939 Request Manager shall call `PduR_J1939RmTransmit` to send a negative acknowledgement (NACK).] (*SRS_J1939_00014*, *SRS_J1939_00017*)

7.5 Transmission of Acknowledgements

For unknown PGNs, the J1939 Request Manager transmits a negative acknowledgement by itself (see section 7.4.3 above). Modules that receive requests from the J1939 Request Manager may use the API `J1939Rm_SendAck` to transmit the acknowledgement variants defined by the J1939 standard (see section 5.4.4 in [2, SAE J1939-21]).

The `Acknowledgement PG` is supposed to have a fixed `destination address` (0xFF), configured via `CanIfTxPduCanId` in the CAN Interface. The J1939 Request Manager shall use the meta data item type `CAN_ID_32` so that it can modify the priority and `source address`.

[SWS_J1939Rm_00009] [When a BSW module, a CDD, or an SW-C (via service port and RTE) calls `J1939Rm_SendAck`, the J1939 Request Manager shall call `PduR_J1939RmTransmit` to send the required acknowledgement.] (*SRS_J1939_00017*)

[SWS_J1939Rm_00123] [The J1939 Request Manager shall use a meta data item of type `CAN_ID_32` to provide the `source address` and priority of transmitted `Acknowledgement PGs`.] (*SRS_J1939_00017*, *SRS_J1939_00049*)

There is only one I-PDU available to send `Acknowledgement PGs`. Still, it must be ensured, that no `Acknowledgement PG` is lost, even when a new transmission is

initiated while this I-PDU is already occupied by another transmission. To achieve this, the J1939 Request Manager needs to queue Acknowledgement PGs.

[SWS_J1939Rm_00018] [Transmission requests for the Acknowledgement PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by J1939RmAckQueueSize.](SRS_J1939_00017)

[SWS_J1939Rm_00019] [The J1939 Request Manager shall use the J1939Rm_TxConfirmation with result E_OK of the associated I-PDU to trigger transmission of pending Acknowledgement PGs.](SRS_J1939_00017)

[SWS_J1939Rm_00020] [If the J1939Rm_TxConfirmation is called with result E_NOT_OK, the J1939 Request Manager shall flush the Acknowledgement PG queue.](SRS_J1939_00017)

The acknowledgement type (Control byte), the extended identifier bytes, and the Address parameter of the Acknowledgement PG are set according to the arguments of the J1939Rm_SendAck function. The destination address is always the global address, as defined in [2, SAE J1939-21].

[SWS_J1939Rm_00126] [When an acknowledgement is sent, it shall also be handled internally as if it was received via J1939Rm_RxIndication.](SRS_J1939_00015)

7.6 Transmission of Requests

As stated in section 7.1, the J1939 Request Manager also supports transmission of requests, reception of responding acknowledgements, and timeout supervision for the responses.

To trigger the transmission of a request, the J1939 Request Manager provides the API J1939Rm_SendRequest.

The J1939 Request Manager shall use the meta data item type CAN_ID_32 to be able to set the priority and the source and destination address freely. The CAN Interface must be configured such that the PDU and data page bits are fixed, while the remaining bits of the CAN ID are variable.

[SWS_J1939Rm_00016] [When a BSW module, a CDD, or an SW-C (via service port and RTE) calls J1939Rm_SendRequest, the J1939 Request Manager shall call PduR_J1939RmTransmit to send the request.](SRS_J1939_00016)

[SWS_J1939Rm_00117] [When no extended identifier bytes are provided with J1939Rm_SendRequest, J1939Rm shall send an RQST PG. When one or more extended identifier bytes are provided, an RQST2 PG shall be sent.](SRS_J1939_00016)

[SWS_J1939Rm_00124] [The J1939 Request Manager shall use a meta data item of type CAN_ID_32 to provide the source address, destination address,

and priority of transmitted `Request` and `Request2` PGs.]([SRS_J1939_00016](#), [SRS_J1939_00049](#))

There is only one `I-PDU` available to send `Request` PGs, and one for `Request2` PGs. Still, it must be ensured that no request PG is lost, even when a new transmission is initiated while this `I-PDU` is already occupied by another transmission. To achieve this, the `J1939 Request Manager` needs to queue request PGs.

[SWS_J1939Rm_00021] [Transmission requests for the `Request` PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by `J1939RmRequestQueueSize`.]([SRS_J1939_00016](#))

[SWS_J1939Rm_00118] [Transmission requests for the `Request2` PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by `J1939RmRequestQueue2Size`.]([SRS_J1939_00016](#))

[SWS_J1939Rm_00022] [The `J1939 Request Manager` shall use the `J1939Rm_TxConfirmation` with result `E_OK` of the associated `I-PDU` to trigger transmission of pending `Request` and `Request2` PGs.]([SRS_J1939_00016](#))

[SWS_J1939Rm_00023] [If the `J1939Rm_TxConfirmation` is called with result `E_NOT_OK`, the `J1939 Request Manager` shall flush the corresponding request PG queue.]([SRS_J1939_00016](#))

To be able to do timeout supervision, the `J1939 Request Manager` needs to remember the initiator, the `destination address`, `extended identifier bytes`, and the `PGN` of the request.

[SWS_J1939Rm_00024] [When `J1939Rm_SendRequest` is called with the parameter `checkTimeout` set to `TRUE` and a `destination address` that is not the broadcast address (`0xFF`), and timeout handling is enabled for the caller via `J1939RmUserTimeoutSupervision`: The `J1939 Request Manager` shall store (separately for each node) the calling module's user ID, the `PGN`, `extended identifier bytes`, the `source address`, and the `destination address` of the request.]([SRS_J1939_00026](#))

Finally, requests to the global address must also be handled internally as described in section 7.4.

[SWS_J1939Rm_00025] [When a request is sent with the global `destination address`, it shall also be handled internally as if it was received via `J1939Rm_RxIndication`.]([SRS_J1939_00016](#))

7.7 Reception of Acknowledgements

The `J1939 Request Manager` receives `Acknowledgement` PGs (`ACKM`) via `J1939Rm_RxIndication` from the `CAN Interface`. The `J1939 Request Manager` shall use the meta data item type `CAN_ID_32` to be able to identify the priority and the sender of the acknowledgement.

[SWS_J1939Rm_00125] [The *J1939 Request Manager* shall use a meta data item of type *CAN_ID_32* to determine the *source address* and priority of received *Acknowledgement PGs*.] (*SRS_J1939_00015*, *SRS_J1939_00049*)

[SWS_J1939Rm_00026] [The *J1939 Request Manager* shall only accept acknowledgements where the *AddressAcknowledged* is set to one of the configured addresses of the ECU (see *J1939RmNmNodeRef*).] (*SRS_J1939_00015*)

The scheduling of received *Acknowledgement PGs* is configured similarly to the *Request PG*, see section 7.4.1, but the destinations are restricted to *CDD* and *Application*, because the *J1939Nm* and the *J1939Dcm* currently do not need to request any information from other ECUs.

[SWS_J1939Rm_00066] [When *J1939Rm_RxIndication* is called by the *PDU Router* to indicate reception of an acknowledgement which matches a pending request (acknowledged *PGN*, *source address*, acknowledged address), the *J1939 Request Manager* shall call the *User_AckIndication* or the service port function corresponding to the stored user ID.] (*SRS_J1939_00015*)

[SWS_J1939Rm_00027] [When *J1939Rm_RxIndication* is called by the *PDU Router* to indicate reception of an acknowledgement which does not match a pending request, and the acknowledged *PGN* is configured via *J1939RmUserAckPGN* to trigger a *CDD*, the *J1939 Request Manager* shall call the corresponding *User_AckIndication*.] (*SRS_J1939_00015*)

[SWS_J1939Rm_00028] [When *J1939Rm_RxIndication* is called by the *PDU Router* to indicate reception of an acknowledgement which does not match a pending request, and the acknowledged *PGN* is configured via *J1939RmUserAckPGN* to be forwarded to the *RTE*, the *J1939 Request Manager* shall call the corresponding service port function.] (*SRS_J1939_00015*)

7.8 Timeout Supervision

The SAE J1939 specification [2, SAE J1939-21] defines a maximum delay of 200ms for the answer to a request. This delay is not supervised by the *J1939 Request Manager*. On the other hand, the timeout of 1.25s for the reception of the answer to a request will be supervised by the *J1939 Request Manager*, if configured accordingly via *J1939RmUserTimeoutSupervision*. In that case, when the request is transmitted, the timer is started and the request data is stored as described in **[SWS_J1939Rm_00024]**.

[SWS_J1939Rm_00017] [If timeout supervision is enabled for the caller of *J1939Rm_SendRequest* via *J1939RmUserTimeoutSupervision*, and the parameter *checkTimeout* is *TRUE*, and the *destination address* is not the broadcast address (0xFF): The *J1939 Request Manager* shall start timeout supervision.] (*SRS_J1939_00026*)

[SWS_J1939Rm_00029] [When an acknowledgement matching the request is received, when a configured `COM RxIPduCallout` is triggered which matches the request, or when a `CDD` or an application `SW-C` calls `J1939Rm_CancelRequestTimeout`, the timeout supervision of the request is stopped.]([SRS_J1939_00026](#))

[SWS_J1939Rm_00030] [If the timeout supervision for a request reaches 1.25s, the `J1939 Request Manager` shall call the `User_RequestTimeoutIndication` corresponding to the `userId` parameter of the initial `J1939Rm_SendRequest`.]([SRS_J1939_00026](#))

7.9 Routing of Requests and Acknowledgements

Depending on the configuration of `J1939NmSharedAddressSpace` and `J1939NmExternalNodeGatewayedChannelRef` referring to `J1939NmChannels` that reference the same `ComMChannels` as the `J1939RmChannels`, the `Request`, `Request2`, and `Acknowledgement` PGs need to be routed from one `J1939RmChannel` to another.

[SWS_J1939Rm_00127] [If `J1939RmGatewaySupport` is enabled, and a `J1939RmChannel` is linked to another `J1939RmChannel` via a `J1939NmSharedAddressSpace`: All `Request`, `Request2`, and `Acknowledgement` PGs that are received on the first `J1939RmChannel` shall be forwarded to the second `J1939RmChannel`.]([SRS_J1939_00050](#))

Note: The complete path between two `J1939RmChannels` linked via a `J1939NmSharedAddressSpace` is:

```
J1939RmChannel → J1939RmComMNetworkHandleRef → ComMChannel
Channel ← J1939NmComMNetworkHandleRef ← J1939NmChannel
← J1939NmSharedChannelRef ← J1939NmSharedAddressSpace
→ J1939NmSharedChannelRef → J1939NmChannel →
J1939NmComMNetworkHandleRef → ComMChannel ←
J1939RmComMNetworkHandleRef ← J1939RmChannel
```

[SWS_J1939Rm_00128] [If `J1939RmGatewaySupport` is enabled, and a `J1939RmChannel` is referenced by another `J1939RmChannel` via a `J1939NmExternalNodeGatewayedChannelRef`: All `Request`, `Request2`, and `Acknowledgement` PGs that are received on the first `J1939RmChannel` shall be forwarded to the second `J1939RmChannel`.]([SRS_J1939_00050](#))

Note: The complete path between two `J1939RmChannels` linked via a `J1939NmExternalNodeGatewayedChannelRef` is:

```
J1939RmChannel → J1939RmComMNetworkHandleRef → ComMChannel
nel ← J1939NmComMNetworkHandleRef ← J1939NmChannel ←
J1939NmExternalNodeGatewayedChannelRef ← J1939NmExternalNode
→ J1939NmExternalNodeChannelRef → J1939NmChannel
```

→ J1939NmComMNetworkHandleRef → ComMChannel ←
J1939RmComMNetworkHandleRef ← J1939RmChannel

[SWS_J1939Rm_00129] [Request and Request2 PGs shall only be forwarded if the destination address of the PG is the global address (0xFF) or a destination address that does not correspond to any J1939NmNodePreferredAddress referenced by a J1939RmNode that references the J1939RmChannel on which the PG was received.] (SRS_J1939_00050)

7.10 Error Classification

Section 7.2 "Error Handling" of the document "General Specification of Basic Software Modules" [4, SWS BSW General] describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, this section specifies particular errors arranged in the respective subsections below.

7.10.1 Development Errors

[SWS_J1939Rm_00031] [

| Type of error | Related error code | Error value |
|---------------------------------------------------------------|------------------------------|-------------|
| An API was called while the module was uninitialized | J1939RM_E_UNINIT | 0x01 |
| The Init API was called twice | J1939RM_E_REINIT | 0x02 |
| J1939Rm_Init was called with an invalid configuration pointer | J1939RM_E_INIT_FAILED | 0x03 |
| An API service was called with a NULL pointer | J1939RM_E_PARAM_POINTER | 0x10 |
| An API service was called with a wrong ID | J1939RM_E_INVALID_PDU_SDU_ID | 0x11 |
| An API service was called with wrong network handle | J1939RM_E_INVALID_NETWORK_ID | 0x12 |
| The API J1939Rm_SetState was called with a wrong state | J1939RM_E_INVALID_STATE | 0x13 |
| An API was called with an illegal user ID | J1939RM_E_INVALID_USER | 0x14 |
| An API was called with an unknown or illegal PGN | J1939RM_E_INVALID_PGN | 0x15 |
| An API was called with an illegal priority | J1939RM_E_INVALID_PRIO | 0x16 |
| An API was called with an illegal node address | J1939RM_E_INVALID_ADDRESS | 0x17 |
| An API was called with an illegal Boolean option | J1939RM_E_INVALID_OPTION | 0x18 |
| An API was called with an illegal AckCode | J1939RM_E_INVALID_ACK_CODE | 0x19 |
| An API was called with an illegal node ID | J1939RM_E_INVALID_NODE_ID | 0x1a |
| An API was called with invalid extended identifier bytes | J1939RM_E_INVALID_EXTID_INFO | 0x1b |

]()

7.10.2 Runtime Errors

Runtime errors have not yet been classified.

7.10.3 Transient Faults

There are no transient faults.

7.10.4 Production Errors

There are no production errors.

7.10.5 Extended Production Errors

There are no extended production errors.

8 API specification

8.1 API Parameter Checking

The [J1939 Request Manager](#) performs parameter checks for all called APIs. It reports the development error [J1939RM_E_PARAM_POINTER](#) when a call provides a NULL pointer, [J1939RM_E_INVALID_PDU_SDU_ID](#) when a check of a PDU ID fails, [J1939RM_E_INVALID_NETWORK_ID](#) when a check of a network handle fails, and [J1939RM_E_INVALID_NODE_ID](#) when a check of a node handle fails.

[J1939RM_E_PARAM_POINTER](#) shall be reported as specified in [4, SWS BSW General] by [SWS_BSW_00212].

[SWS_J1939Rm_00033] [If development error detection is enabled via [J1939RmDevErrorDetect](#), the [J1939 Request Manager](#) shall check PduIdType parameters (PDU IDs) of its API functions against the configured IDs, and shall report the development error [J1939RM_E_INVALID_PDU_SDU_ID](#) when an unknown ID is provided by the call.] ([SRS_BSW_00386](#))

[SWS_J1939Rm_00041] [If development error detection is enabled via [J1939RmDevErrorDetect](#), the [J1939 Request Manager](#) shall check NetworkHandleType parameters (network handles) of its API functions against the referenced network handles of ComM, and shall report the development error [J1939RM_E_INVALID_NETWORK_ID](#) when an unknown handle is provided by the call.] ([SRS_BSW_00386](#))

[SWS_J1939Rm_00096] [If development error detection is enabled via [J1939RmDevErrorDetect](#), the [J1939 Request Manager](#) shall check node handle parameters of its API functions against the node handles of [J1939Nm](#) referenced via [J1939RmNmNodeRef](#), and shall report the development error [J1939RM_E_INVALID_NODE_ID](#) when an unknown handle is provided by the call.] ([SRS_BSW_00386](#))

8.2 Imported types

In this section, all types used by the [J1939 Request Manager](#) are listed together with the defining module:

[SWS_J1939Rm_00035] [

| Module | Header File | Imported Type |
|----------------|------------------|-------------------|
| ComStack_Types | ComStack_Types.h | NetworkHandleType |
| | ComStack_Types.h | PduIdType |
| | ComStack_Types.h | PduInfoType |
| | ComStack_Types.h | PduLengthType |





| <i>Module</i> | <i>Header File</i> | <i>Imported Type</i> |
|---------------|--------------------|----------------------|
| Std | Std_Types.h | Std_ReturnType |
| | Std_Types.h | Std_VersionInfoType |

]()

The types that are declared in `ComStack_Types.h` are defined in [18, SWS Communication Stack Types], while the types declared in `Std_Types.h` are defined in [19, SWS Standard Types].

8.3 Type definitions

8.3.1 J1939Rm_ConfigType

[SWS_J1939Rm_00036] [

| | | | |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--|
| Name | J1939Rm_ConfigType | | |
| Kind | Structure | | |
| Elements | implementation specific | | |
| | Type | - | |
| | Comment | - | |
| Description | This is the base type for the configuration of the J1939 Request Manager. A pointer to an instance of this structure will be used in the initialization of the J1939 Request Manager. The content of this structure is defined in chapter 10 Configuration specification. | | |
| Available via | J1939Rm.h | | |

]()

8.3.2 J1939Rm_StateType

[SWS_J1939Rm_00049] [

| | | | |
|----------------------|----------------------------------------------------------------------------|------|----------------------|
| Name | J1939Rm_StateType | | |
| Kind | Enumeration | | |
| Range | J1939RM_STATE_OFFLINE | 0x00 | Only Request for AC |
| | J1939RM_STATE_ONLINE | 0x01 | Normal communication |
| Description | This type represents the communication state of the J1939 Request Manager. | | |
| Available via | J1939Rm.h | | |

]()

8.4 Function definitions

This is a list of functions provided for upper layer modules.

8.4.1 J1939Rm_Init

[SWS_J1939Rm_00037] [

| | | |
|---------------------------|--------------------------------------------------------------------------|---------------------------------------------|
| Service Name | J1939Rm_Init | |
| Syntax | <pre>void J1939Rm_Init (const J1939Rm_ConfigType* configPtr)</pre> | |
| Service ID [hex] | 0x01 | |
| Sync/Async | Synchronous | |
| Reentrancy | Non Reentrant | |
| Parameters (in) | configPtr | Pointer to selected configuration structure |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | None | |
| Description | This function initializes the J1939 Request Manager. | |
| Available via | J1939Rm.h | |

](SRS_J1939_00012)

See section 7.2.1 for details.

See section 8.1 for parameter checks.

J1939RM_E_INIT_FAILED shall be reported as specified in [4, SWS BSW General] by [SWS_BSW_00050].

8.4.2 J1939Rm_DeInit

[SWS_J1939Rm_00038] [

| | | |
|---------------------------|---------------------------------------------|--|
| Service Name | J1939Rm_DeInit | |
| Syntax | <pre>void J1939Rm_DeInit (void)</pre> | |
| Service ID [hex] | 0x02 | |
| Sync/Async | Synchronous | |
| Reentrancy | Non Reentrant | |
| Parameters (in) | None | |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | None | |





| | |
|----------------------|----------------------------------------------------------------------------|
| Description | This function resets the J1939 Request Manager to the uninitialized state. |
| Available via | J1939Rm.h |

]([SRS_J1939_00013](#))

See section 7.2.1 for details.

8.4.3 J1939Rm_GetVersionInfo

[SWS_J1939Rm_00039] [

| | | |
|---------------------------|---------------------------------------------------------------------------------|-------------------------------------------------------------------|
| Service Name | J1939Rm_GetVersionInfo | |
| Syntax | <pre>void J1939Rm_GetVersionInfo (Std_VersionInfoType* versionInfo)</pre> | |
| Service ID [hex] | 0x03 | |
| Sync/Async | Synchronous | |
| Reentrancy | Non Reentrant | |
| Parameters (in) | None | |
| Parameters (inout) | None | |
| Parameters (out) | versionInfo | Pointer to where to store the version information of this module. |
| Return value | None | |
| Description | Returns the version information of this module. | |
| Available via | J1939Rm.h | |

]([SRS_BSW_00407](#))

See section 8.3.4 "Get Version Information" of [4, SWS BSW General] for details. The module ID of the [J1939 Request Manager](#) is defined in [20, TR BSW Module List].

See section 8.1 for parameter checks.

8.4.4 J1939Rm_SetState

[SWS_J1939Rm_00048] [

| | | |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Service Name | J1939Rm_SetState | |
| Syntax | <pre>Std_ReturnType J1939Rm_SetState (NetworkHandleType channel, uint8 node, J1939Rm_StateType newState)</pre> | |
| Service ID [hex] | 0x05 | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant | |
| Parameters (in) | channel | Channel for which the state shall be changed. |





| | | |
|---------------------------|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | node | Node for which the state shall be changed. |
| | newState | New state the J1939Rm shall enter, see definition of J1939Rm_StateType for available states. |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | Std_ReturnType | E_OK: New communication state was set E_NOT_OK: Communication state was not changed due to wrong value in NewState or wrong initialization state of the module. |
| Description | Changes the communication state of J1939Rm to offline (only Request for AC supported) or online. | |
| Available via | J1939Rm.h | |

]()

[SWS_J1939Rm_00040] [The [J1939 Request Manager](#) shall reject the state change by returning E_NOT_OK when the [newState](#) is not in the valid range. If development error detection is enabled via [J1939RmDevErrorDetect](#), the development error [J1939RM_E_INVALID_STATE](#) shall be reported.] ([SRS_BSW_00386](#))

See section [7.2.1](#) for error handling and section [8.1](#) for parameter checks.

8.4.5 J1939Rm_SendRequest

[SWS_J1939Rm_00054] [

| | | |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| Service Name | J1939Rm_SendRequest | |
| Syntax | <pre>Std_ReturnType J1939Rm_SendRequest (uint8 userId, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 destAddress, uint8 priority, boolean checkTimeout)</pre> | |
| Service ID [hex] | 0x07 | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant | |
| Parameters (in) | userId | Identification of the calling module. |
| | channel | Channel on which the request shall be sent. |
| | requestedPgn | PGN of the requested PG. |
| | extIdInfo | Extended identifier bytes. J1939RM_EXTID_NONE is assumed if a NULL pointer is provided. |
| | destAddress | Address of the destination node or 0xFF for broadcast. |
| | priority | Priority of the Request PG. |
| | checkTimeout | TRUE: Timeout supervision will be performed FALSE: No timeout supervision will be started |
| Parameters (inout) | None | |
| Parameters (out) | None | |





| | | |
|----------------------|----------------------------------------------------|------------------------------------------------------------------------------------------|
| Return value | Std_ReturnType | E_OK: Transmission request is accepted E_NOT_OK: Transmission request is not accepted |
| Description | Requests transmission of a Request or Request2 PG. | |
| Available via | J1939Rm.h | |

]([SRS_J1939_00016](#))

[SWS_J1939Rm_00074] [The [J1939Rm_SendRequest](#) API function shall only be available if [J1939RmUserSendRequest](#) is set for at least one user.]([SRS_BSW_00171](#))

See section [7.6](#) for details.

[SWS_J1939Rm_00067] [The [J1939 Request Manager](#) shall reject transmission of a request by returning E_NOT_OK when the [requestedPgn](#), the [extIdType](#) element within the [extIdInfo](#), the [destAddress](#), or the [priority](#) are not in the valid range, or when the [userId](#) is not one of the configured user IDs (see [J1939RmUserId](#)), or when [checkTimeout](#) is true but timeout handling is disabled for the calling module (see [J1939RmUserTimeoutSupervision](#)). If development error detection is enabled via [J1939RmDevErrorDetect](#), the corresponding development error shall be reported: [J1939RM_E_INVALID_USER](#) for [userId](#), [J1939RM_E_INVALID_EXTID_INFO](#) for [extIdInfo](#), [J1939RM_E_INVALID_PGN](#) for [requestedPgn](#), [J1939RM_E_INVALID_PRIO](#) for [priority](#), [J1939RM_E_INVALID_ADDRESS](#) for [destAddress](#), and [J1939RM_E_INVALID_OPTION](#) for [checkTimeout](#).]([SRS_BSW_00386](#))

[SWS_J1939Rm_00068] [The [J1939 Request Manager](#) shall reject transmission of a request by returning E_NOT_OK when another request is pending and the request queue is full.]([SRS_BSW_00386](#))

See section [7.2.1](#) for further error handling and section [8.1](#) for further parameter checks.

8.4.6 J1939Rm_CancelRequestTimeout

[SWS_J1939Rm_00055] [

| | |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Name | J1939Rm_CancelRequestTimeout |
| Syntax | Std_ReturnType J1939Rm_CancelRequestTimeout (uint8 userId, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 destAddress) |
| Service ID [hex] | 0x08 |
| Sync/Async | Synchronous |





| | | |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| Reentrancy | Reentrant | |
| Parameters (in) | userId | Identification of the calling module. |
| | channel | Channel on which the request was sent. |
| | requestedPgn | PGN of the requested PG. |
| | extIdInfo | Extended identifier bytes. J1939RM_EXTID_NONE is assumed if a NULL pointer is provided. |
| | destAddress | Address of the destination node or 0xFF for broadcast. |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | Std_ReturnType | E_OK: Cancellation of request timeout was successful E_NOT_OK: Cancellation of request timeout was not successful |
| Description | Cancels timeout monitoring of a request. If the request is not active, or timeout monitoring was not requested, this call has no effect. | |
| Available via | J1939Rm.h | |

]([SRS_J1939_00026](#))

[SWS_J1939Rm_00075] [The [J1939Rm_CancelRequestTimeout](#) API function shall only be available if [J1939RmUserTimeoutSupervision](#) is set for at least one user.]([SRS_BSW_00171](#))

See section [7.8](#) for details.

[SWS_J1939Rm_00069] [The [J1939 Request Manager](#) shall ignore the timeout cancellation request when the [requestedPgn](#), the [extIdType](#) element within the [extIdInfo](#), or the [destAddress](#) are not in the valid range, or when the [userId](#) is not one of the configured user IDs (see [J1939RmUserId](#)), or if no suitable entry can be found in the list of pending requests. If development error detection is enabled via [J1939RmDevErrorDetect](#), the corresponding development error shall be reported: [J1939RM_E_INVALID_USER](#) for [userId](#), [J1939RM_E_INVALID_PGN](#) for [request-edPgn](#), [J1939RM_E_INVALID_EXTID_INFO](#) for [extIdInfo](#), and [J1939RM_E_INVALID_ADDRESS](#) for [destAddress](#).]([SRS_BSW_00386](#))

See section [7.2.1](#) for further error handling and section [8.1](#) for further parameter checks.

8.4.7 J1939Rm_SendAck

[SWS_J1939Rm_00056] [

| | | |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| Service Name | J1939Rm_SendAck | |
| Syntax | <pre>Std_ReturnType J1939Rm_SendAck (uint8 userId, NetworkHandleType channel, uint32 ackPgn, const J1939Rm_ExtIdInfoType* extIdInfo, J1939Rm_AckCode ackCode, uint8 ackAddress, uint8 priority, boolean broadcast)</pre> | |
| Service ID [hex] | 0x09 | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant | |
| Parameters (in) | userId | Identification of the calling module. |
| | channel | Channel on which the acknowledgement shall be sent. |
| | ackPgn | Acknowledged PGN. |
| | extIdInfo | Extended identifier bytes. J1939RM_EXTID_NONE is assumed if a NULL pointer is provided. |
| | ackCode | Type of acknowledgement, see definition of J1939Rm_AckCode for available codes. |
| | ackAddress | Address of the node that sent the request. |
| | priority | Priority of the Acknowledgement PG. |
| | broadcast | Indicates whether the ACKM is a response to a broadcast request. |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | Std_ReturnType | E_OK: Transmission request is accepted E_NOT_OK: Transmission request is not accepted |
| Description | Requests transmission of an Acknowledgement PG. | |
| Available via | J1939Rm.h | |

](SRS_J1939_00017)

[SWS_J1939Rm_00076] [The J1939Rm_SendAck API function shall only be available if J1939RmUserSendAck is set for at least one user.](SRS_BSW_00171)

See section 7.5 for details.

[SWS_J1939Rm_00070] [The J1939 Request Manager shall reject transmission of an acknowledgement by returning E_NOT_OK when the ackPgn, the extIdType element within the extIdInfo, the ackAddress, or the priority are not in the valid range, or when the userId is not one of the configured user IDs (see J1939RmUserId). If development error detection is enabled via J1939RmDevErrorDetect, the corresponding development error shall be reported: J1939RM_E_INVALID_USER for userId, J1939RM_E_INVALID_EXTID_INFO for extIdInfo, J1939RM_E_INVALID_PGN for ackPgn, J1939RM_E_INVALID_ACK_CODE for ackCode, J1939RM_E_INVALID_ADDRESS for ackAddress, and J1939RM_E_INVALID_Prio for priority.](SRS_BSW_00386)

[SWS_J1939Rm_00071] [The [J1939 Request Manager](#) shall reject transmission of an acknowledgement by returning `E_NOT_OK` when another acknowledgement is pending and the acknowledgement queue is full.] ([SRS_BSW_00386](#))

See section [7.2.1](#) for further error handling and section [8.1](#) for further parameter checks.

8.5 Callback notifications

This is a list of functions provided for other modules.

8.5.1 J1939Rm_RxIndication

[SWS_J1939Rm_00058] [

| | | |
|---------------------------|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Name | J1939Rm_RxIndication | |
| Syntax | <pre>void J1939Rm_RxIndication (PduIdType RxPduId, const PduInfoType* PduInfoPtr)</pre> | |
| Service ID [hex] | 0x42 | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant for different PduIds. Non reentrant for the same PduId. | |
| Parameters (in) | RxPduId | ID of the received PDU. |
| | PduInfoPtr | Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU. |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | None | |
| Description | Indication of a received PDU from a lower layer communication interface module. | |
| Available via | J1939Rm.h | |

]()

[SWS_J1939Rm_00080] [The [J1939Rm_RxIndication](#) call back function shall only be available if [J1939RmUserAckIndication](#) or [J1939RmUserRequestIndication](#) is set for at least one user.] ([SRS_BSW_00171](#))

See sections [7.4](#) and [7.7](#) for details.

See section [7.2.1](#) for error handling and section [8.1](#) for parameter checks.

8.5.2 J1939Rm_TxConfirmation

[SWS_J1939Rm_00059] [

| | | |
|---------------------------|----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| Service Name | J1939Rm_TxConfirmation | |
| Syntax | <pre>void J1939Rm_TxConfirmation (PduIdType TxPduId, Std_ReturnType result)</pre> | |
| Service ID [hex] | 0x40 | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant for different Pdulds. Non reentrant for the same PduId. | |
| Parameters (in) | TxPduId | ID of the PDU that has been transmitted. |
| | result | E_OK: The PDU was transmitted. E_NOT_OK: Transmission of the PDU failed. |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | None | |
| Description | The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU. | |
| Available via | J1939Rm.h | |

]()

[SWS_J1939Rm_00081] [The [J1939Rm_TxConfirmation](#) call back function shall only be available if [J1939RmUserSendAck](#) or [J1939RmUserSendRequest](#) is set for at least one user.]([SRS_BSW_00171](#))

See sections [7.5](#) and [7.6](#) for details.

See section [7.2.1](#) for error handling and section [8.1](#) for parameter checks.

8.5.3 J1939Rm_CheckReceivedComIPdu

[SWS_J1939Rm_00062] [

| | | |
|---------------------------|------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| Service Name | J1939Rm_CheckReceivedComIPdu | |
| Syntax | <pre>boolean J1939Rm_CheckReceivedComIPdu (PduIdType PduId, const PduInfoType* PduInfoPtr)</pre> | |
| Service ID [hex] | 0x28 | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant for different Pdulds. Non reentrant for the same PduId. | |
| Parameters (in) | PduId | ID of the received ComIPdu. |
| | PduInfoPtr | Length (SduLength) of the received ComIPdu and a pointer to the data of the ComIPdu (SduDataPtr). |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | boolean | Shall be always true to ensure the ComIPdu is received. |





| | |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | Reports a received ComIPdu. If this ComIPdu was requested via J1939Rm_SendRequest or the SendRequest service operation, a request timeout for this request is stopped. |
| Available via | J1939Rm_Com.h |

]()

[SWS_J1939Rm_00079] [The [J1939Rm_CheckReceivedComIPdu](#) call back function shall only be available if [J1939RmUserTimeoutSupervision](#) is set for at least one user.] ([SRS_BSW_00171](#))

See section [7.8](#) for details.

See section [7.2.1](#) for error handling and section [8.1](#) for parameter checks.

8.6 Scheduled functions

This function is directly called by Basic Software Scheduler (SchM).

8.6.1 J1939Rm_MainFunction

[SWS_J1939Rm_00042] [

| | |
|-------------------------|---------------------------------------------------------------------------------------------------|
| Service Name | J1939Rm_MainFunction |
| Syntax | void J1939Rm_MainFunction (void) |
| Service ID [hex] | 0x04 |
| Description | Main function of the J1939 Request Manager. Used for scheduling purposes and timeout supervision. |
| Available via | SchM_J1939Rm.h |

]()

[SWS_J1939Rm_00043] [The frequency of invocations of [J1939Rm_MainFunction](#) is determined by the configuration parameter [J1939RmMainFunctionPeriod](#).] ([SRS_BSW_00478](#))

8.7 Expected interfaces

In this section, all interfaces required from other modules are listed.

8.7.1 Mandatory interfaces

This section defines all interfaces that are required to fulfill the core functionality of the module.

[SWS_J1939Rm_00044] [

| API Function | Header File | Description |
|----------------------|----------------|---------------------------------|
| PduR_J1939RmTransmit | PduR_J1939Rm.h | Requests transmission of a PDU. |

]()

8.7.2 Optional interfaces

This section defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS_J1939Rm_00045] [

| API Function | Header File | Description |
|-----------------------------|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Com_TriggerIPDUWithMetaData | Com.h | By a call to Com_TriggerIPDUWithMetaData the AUTOSAR COM module updates its internal metadata for the I-PDU with the given ID by copying the metadata from the given position and with respect to length of the globally configured Meta DataType of this I-PDU. Then the I-PDU is triggered for transmission. |
| Det_ReportError | Det.h | Service to report development errors. |
| J1939Dcm_RequestIndication | J1939Dcm.h | Indicates reception of a Request or Request2 PG. |
| J1939Nm_RequestIndication | J1939Nm.h | Indicates reception of a Request or Request2 PG. |

]()

[SWS_J1939Rm_00082] [The Com_TriggerIPDUWithMetaData function is only required if at least one J1939RmComUser is configured.] ([SRS_BSW_00171](#))

[SWS_J1939Rm_00083] [The J1939Dcm_RequestIndication function is only required if at least one J1939RmDcmUser is configured.] ([SRS_BSW_00171](#))

[SWS_J1939Rm_00084] [The J1939Nm_RequestIndication function is only required if at least one J1939RmNmUser is configured.] ([SRS_BSW_00171](#))

8.7.3 Configurable interfaces

In this section, all interfaces are listed where the target function could be configured. The target function is usually a call-back function. The name of this kind of interfaces is not fixed because they are configurable.

8.7.3.1 <User>_RequestIndication

[SWS_J1939Rm_00063] [

| | | |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Service Name | < User >_RequestIndication | |
| Syntax | <pre>void < User >_RequestIndication (uint8 node, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 sourceAddress, uint8 destAddress, uint8 priority)</pre> | |
| Service ID [hex] | 0x47 | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant | |
| Parameters (in) | node | Node by which the request was received. |
| | channel | Channel on which the request was received. |
| | requestedPgn | PGN of the requested PG. |
| | extIdInfo | Extended identifier bytes. |
| | sourceAddress | Address of the node that sent the Request PG. |
| | destAddress | Address of this node or 0xFF for broadcast. |
| | priority | Priority of the Request PG. |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | None | |
| Description | Indicates reception of a Request or Request2 PG. | |
| Available via | configurable | |

](SRS_J1939_00014)

[SWS_J1939Rm_00085] [The configured `User_RequestIndication` function shall be available for each user that has `J1939RmUserRequestIndication` enabled.]
(SRS_BSW_00171)

See section 7.4 for details.

8.7.3.2 <User>_AckIndication

[SWS_J1939Rm_00064] [

| | | |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| Service Name | < User >_AckIndication | |
| Syntax | <pre>void < User >_AckIndication (uint8 node, NetworkHandleType channel, uint32 ackPgn, const J1939Rm_ExtIdInfoType* extIdInfo, J1939Rm_AckCode ackCode, uint8 ackAddress, uint8 sourceAddress, uint8 priority)</pre> | |
| Service ID [hex] | 0x4d | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant | |
| Parameters (in) | node | Node by which the acknowledgement was received. |
| | channel | Channel on which the acknowledgement was received. |
| | ackPgn | Acknowledged PGN. |
| | extIdInfo | Extended identifier bytes. |
| | ackCode | Type of acknowledgement, see definition of J1939Rm_AckCode for available codes. |
| | ackAddress | Address of this node. |
| | sourceAddress | Address of the node that sent the Acknowledgement PG. |
| | priority | Priority of the Acknowledgement PG. |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | None | |
| Description | Indicates reception of an Acknowledgement PG. | |
| Available via | configurable | |

]([SRS_J1939_00015](#))

[SWS_J1939Rm_00086] [The configured [User_AckIndication](#) function shall be available for each user that has [J1939RmUserAckIndication](#) enabled.]([SRS_-BSW_00171](#))

See section [7.7](#) for details.

8.7.3.3 <User>_RequestTimeoutIndication

[SWS_J1939Rm_00065] [

| | | |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| Service Name | < User >_RequestTimeoutIndication | |
| Syntax | <pre>void < User >_RequestTimeoutIndication (uint8 node, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 destAddress)</pre> | |
| Service ID [hex] | 0x4e | |
| Sync/Async | Synchronous | |
| Reentrancy | Reentrant | |
| Parameters (in) | node | Node by which the request was sent. |
| | channel | Channel on which the request was sent. |
| | requestedPgn | PGN of the requested PG. |
| | extIdInfo | Extended identifier bytes. |
| | destAddress | Address of the destination node or 0xFF for broadcast. |
| Parameters (inout) | None | |
| Parameters (out) | None | |
| Return value | None | |
| Description | Indicates timeout of a request triggered with the same parameters. | |
| Available via | configurable | |

]([SRS_J1939_00026](#))

[SWS_J1939Rm_00087] [The configured `User_RequestTime-outIndication` function shall be available for each user that has `J1939RmUserTimeoutSupervision` enabled.]([SRS_BSW_00171](#))

See section 7.8 for details.

8.8 Service Interfaces

This section defines the client server interfaces and the derived service ports used by `J1939Rm` to communicate with application software components (`SWCs`).

8.8.1 Provided Service Ports

These service ports provide API functions of the `J1939Rm` to the application `SWCs`.

Please note: All three ports use a port defined argument value to provide the `userId` argument of the corresponding `BSW` interfaces.

8.8.1.1 J1939Rm_SendAck

[SWS_J1939Rm_00098] [

| | | | |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|----------------------------|
| Name | J1939Rm_SendAck_{user} | | |
| Kind | ProvidedPort | Interface | AppSendAck |
| Description | – | | |
| Port Defined Argument Value(s) | Type | uint8 | |
| | Value | {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)} | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckTransmission)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} | | |

]([SRS_J1939_00017](#))

8.8.1.2 J1939Rm_SendRequest

[SWS_J1939Rm_00097] [

| | | | |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|--------------------------------|
| Name | J1939Rm_SendRequest_{user} | | |
| Kind | ProvidedPort | Interface | AppSendRequest |
| Description | – | | |
| Port Defined Argument Value(s) | Type | uint8 | |
| | Value | {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)} | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestTransmission)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} | | |

]([SRS_J1939_00016](#))

8.8.1.3 J1939Rm_CancelRequestTimeout

[SWS_J1939Rm_00099] [

| | | | |
|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|-----------------------------------------|
| Name | J1939Rm_CancelRequestTimeout_{user} | | |
| Kind | ProvidedPort | Interface | AppCancelRequestTimeout |
| Description | – | | |
| Port Defined Argument Value(s) | Type | uint8 | |
| | Value | {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)} | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} | | |

]([SRS_J1939_00026](#))

8.8.2 Required Service Ports

These service ports provide call back functions of the J1939Rm to the application [SWCs](#).

8.8.2.1 J1939Rm_AckIndication

[SWS_J1939Rm_00101] [

| | | | |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|------------------|----------------------------------|
| Name | J1939Rm_AckIndication_{user} | | |
| Kind | RequiredPort | Interface | AppAckIndication |
| Description | – | | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckIndication)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} | | |

]([SRS_J1939_00015](#))

8.8.2.2 J1939Rm_RequestIndication

[SWS_J1939Rm_00100] [

| | | | |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|--------------------------------------|
| Name | J1939Rm_RequestIndication_{user} | | |
| Kind | RequiredPort | Interface | AppRequestIndication |
| Description | – | | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestIndication)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} | | |

]([SRS_J1939_00014](#))

8.8.2.3 J1939Rm_RequestTimeoutIndication

[SWS_J1939Rm_00102] [

| | | | |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|---------------------------------------------|
| Name | J1939Rm_RequestTimeoutIndication_{user} | | |
| Kind | RequiredPort | Interface | AppRequestTimeoutIndication |
| Description | – | | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} | | |

]([SRS_J1939_00026](#))

8.8.3 Client-Server Interfaces

This section lists the client-server interfaces used by the ports provided and required by the [J1939 Request Manager](#).

Please note: The availability of these interfaces depends on the configuration of the [J1939 Request Manager](#). The relevant parameters of the [J1939 Request Manager](#) configuration are listed as "Variation" of the operations.

8.8.3.1 AppSendAck

[SWS_J1939Rm_00103] [

| | | | |
|------------------------|----------------------------------------------------------------------|----------|----------------------|
| Name | AppSendAck | | |
| Comment | – | | |
| IsService | true | | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckTransmission)} == true | | |
| Possible Errors | 0 | E_OK | Operation successful |
| | 1 | E_NOT_OK | Operation failed |

| | | | |
|----------------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------|--|
| Operation | SendAck | | |
| Comment | Requests transmission of an Acknowledgement PG. | | |
| Mapped to API | J1939Rm_SendAck | | |
| Variation | – | | |
| Parameters | channel | | |
| | Type | NetworkHandleType | |
| | Direction | IN | |
| | Comment | Channel on which the acknowledgement shall be sent. | |
| | Variation | – | |
| | ackPgn | | |
| | Type | uint32 | |
| | Direction | IN | |
| | Comment | Acknowledged PGN. | |
| | Variation | – | |
| | extIdInfo | | |
| | Type | J1939Rm_ExtIdInfoType | |
| | Direction | IN | |
| | Comment | – | |
| | Variation | – | |
| | ackCode | | |
| Type | J1939Rm_AckCode | | |
| Direction | IN | | |
| Comment | Type of acknowledgement, see definition of J1939Rm_AckCode for available codes. | | |
| Variation | – | | |
| ackAddress | | | |





| | | |
|------------------------|------------------------------------------------------------------|--------------------------------------------|
| | Type | uint8 |
| | Direction | IN |
| | Comment | Address of the node that sent the request. |
| | Variation | – |
| | priority | |
| | Type | uint8 |
| | Direction | IN |
| | Comment | Priority of the Acknowledgement PG. |
| | Variation | – |
| | broadcast | |
| | Type | boolean |
| | Direction | IN |
| Comment | Indicates whether the ACKM is a response to a broadcast request. | |
| Variation | – | |
| Possible Errors | E_OK E_NOT_OK | |

](SRS_J1939_00017)

8.8.3.2 AppSendRequest

[SWS_J1939Rm_00104] [

| | | | |
|------------------------|--------------------------------------------------------------------------|----------|----------------------|
| Name | AppSendRequest | | |
| Comment | – | | |
| IsService | true | | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestTransmission)} == true | | |
| Possible Errors | 0 | E_OK | Operation successful |
| | 1 | E_NOT_OK | Operation failed |

| | | | |
|----------------------|----------------------------------------------------|---------------------------------------------|--|
| Operation | SendRequest | | |
| Comment | Requests transmission of a Request or Request2 PG. | | |
| Mapped to API | J1939Rm_SendRequest | | |
| Variation | – | | |
| Parameters | channel | | |
| | Type | NetworkHandleType | |
| | Direction | IN | |
| | Comment | Channel on which the request shall be sent. | |
| | Variation | – | |
| | requestedPgn | | |
| | Type | uint32 | |
| | Direction | IN | |
| | Comment | PGN of the requested PG. | |
| | Variation | – | |





| | | |
|------------------------|----------------------------------------------------------------------------------------------|--------------------------------------------------------|
| | extIdInfo | |
| | Type | J1939Rm_ExtIdInfoType |
| | Direction | IN |
| | Comment | – |
| | Variation | – |
| | destAddress | |
| | Type | uint8 |
| | Direction | IN |
| | Comment | Address of the destination node or 0xFF for broadcast. |
| | Variation | – |
| | priority | |
| | Type | uint8 |
| | Direction | IN |
| | Comment | Priority of the Request PG. |
| | Variation | – |
| | checkTimeout | |
| Type | boolean | |
| Direction | IN | |
| Comment | TRUE: Timeout supervision will be performed FALSE: No timeout supervision will be started | |
| Variation | – | |
| Possible Errors | E_OK E_NOT_OK | |

]([SRS_J1939_00016](#))

8.8.3.3 AppCancelRequestTimeout

[[SWS_J1939Rm_00105](#)] [

| | | | |
|------------------------|-------------------------------------------------------------------------|--------------------------|----------------------|
| Name | AppCancelRequestTimeout | | |
| Comment | – | | |
| IsService | true | | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true | | |
| Possible Errors | 0 | E_OK | Operation successful |
| | 1 | E_NOT_OK | Operation failed |

| | | | |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------|-------------------|--|
| Operation | CancelRequestTimeout | | |
| Comment | Cancels timeout monitoring of a request. If the request is not active, or timeout monitoring was not requested, this call has no effect. | | |
| Mapped to API | J1939Rm_CancelRequestTimeout | | |
| Variation | – | | |
| Parameters | channel | | |
| | Type | NetworkHandleType | |
| | Direction | IN | |





| | | |
|------------------------|--------------------------------------------------------|----------------------------------------|
| | Comment | Channel on which the request was sent. |
| | Variation | – |
| | requestedPgn | |
| | Type | uint32 |
| | Direction | IN |
| | Comment | PGN of the requested PG. |
| | Variation | – |
| | extIdInfo | |
| | Type | J1939Rm_ExtIdInfoType |
| | Direction | IN |
| | Comment | – |
| | Variation | – |
| | destAddress | |
| | Type | uint8 |
| | Direction | IN |
| Comment | Address of the destination node or 0xFF for broadcast. | |
| Variation | – | |
| Possible Errors | E_OK E_NOT_OK | |

]([SRS_J1939_00026](#))

8.8.3.4 AppAckIndication

[SWS_J1939Rm_00106] [

| | | | |
|------------------------|--------------------------------------------------------------------|--------------------------|----------------------|
| Name | AppAckIndication | | |
| Comment | – | | |
| IsService | true | | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckIndication)} == true | | |
| Possible Errors | 0 | E_OK | Operation successful |
| | 1 | E_NOT_OK | Operation failed |

| | | | |
|----------------------|-----------------------------------------------|-------------------------------------------------|--|
| Operation | AckIndication | | |
| Comment | Indicates reception of an Acknowledgement PG. | | |
| Mapped to API | <User >_AckIndication | | |
| Variation | – | | |
| Parameters | node | | |
| | Type | uint8 | |
| | Direction | IN | |
| | Comment | Node by which the acknowledgement was received. | |
| | Variation | – | |
| | channel | | |
| Type | NetworkHandleType | | |
| Direction | IN | | |





| | | |
|------------------------|--------------------------------------------------|---------------------------------------------------------------------------------|
| | Comment | Channel on which the acknowledgement was received. |
| | Variation | – |
| | ackPgn | |
| | Type | uint32 |
| | Direction | IN |
| | Comment | Acknowledged PGN. |
| | Variation | – |
| | extIdInfo | |
| | Type | J1939Rm_ExtIdInfoType |
| | Direction | IN |
| | Comment | Extended identifier bytes. |
| | Variation | – |
| | ackCode | |
| | Type | J1939Rm_AckCode |
| | Direction | IN |
| | Comment | Type of acknowledgement, see definition of J1939Rm_AckCode for available codes. |
| | Variation | – |
| | ackAddress | |
| | Type | uint8 |
| | Direction | IN |
| | Comment | Address of this node. |
| | Variation | – |
| | sourceAddress | |
| | Type | uint8 |
| | Direction | IN |
| | Comment | Address of the node that sent the Acknowledgement PG. |
| | Variation | – |
| | priority | |
| | Type | uint8 |
| | Direction | IN |
| | Comment | Priority of the Acknowledgement PG. |
| | Variation | – |
| Possible Errors | E_OK E_NOT_OK | |

]([SRS_J1939_00015](#))

8.8.3.5 AppRequestIndication

[[SWS_J1939Rm_00107](#)] [

| | |
|------------------|----------------------|
| Name | AppRequestIndication |
| Comment | – |
| IsService | true |





| | | | |
|------------------------|------------------------------------------------------------------------|----------|----------------------|
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestIndication)} == true | | |
| Possible Errors | 0 | E_OK | Operation successful |
| | 1 | E_NOT_OK | Operation failed |

| | | | |
|------------------------|--------------------------------------------------|-----------------------------------------------|--|
| Operation | RequestIndication | | |
| Comment | Indicates reception of a Request or Request2 PG. | | |
| Mapped to API | <User >_RequestIndication | | |
| Variation | – | | |
| Parameters | node | | |
| | Type | uint8 | |
| | Direction | IN | |
| | Comment | Node by which the request was received. | |
| | Variation | – | |
| | channel | | |
| | Type | NetworkHandleType | |
| | Direction | IN | |
| | Comment | Channel on which the request was received. | |
| | Variation | – | |
| | requestedPgn | | |
| | Type | uint32 | |
| | Direction | IN | |
| | Comment | PGN of the requested PG. | |
| | Variation | – | |
| | extIdInfo | | |
| | Type | J1939Rm_ExtIdInfoType | |
| | Direction | IN | |
| | Comment | Extended identifier bytes. | |
| | Variation | – | |
| | sourceAddress | | |
| | Type | uint8 | |
| | Direction | IN | |
| | Comment | Address of the node that sent the Request PG. | |
| | Variation | – | |
| | destAddress | | |
| | Type | uint8 | |
| | Direction | IN | |
| Comment | Address of this node or 0xFF for broadcast. | | |
| Variation | – | | |
| priority | | | |
| Type | uint8 | | |
| Direction | IN | | |
| Comment | Priority of the Request PG. | | |
| Variation | – | | |
| Possible Errors | E_OK E_NOT_OK | | |

|(SRS_J1939_00014)

8.8.3.6 AppRequestTimeoutIndication

[SWS_J1939Rm_00108] [

| | | | |
|------------------------|-------------------------------------------------------------------------|----------|----------------------|
| Name | AppRequestTimeoutIndication | | |
| Comment | – | | |
| IsService | true | | |
| Variation | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true | | |
| Possible Errors | 0 | E_OK | Operation successful |
| | 1 | E_NOT_OK | Operation failed |

| | | | |
|------------------------|--------------------------------------------------------------------|----------------------------------------|--|
| Operation | RequestTimeoutIndication | | |
| Comment | Indicates timeout of a request triggered with the same parameters. | | |
| Mapped to API | <User >_RequestTimeoutIndication | | |
| Variation | – | | |
| Parameters | node | | |
| | Type | uint8 | |
| | Direction | IN | |
| | Comment | Node by which the request was sent. | |
| | Variation | – | |
| | channel | | |
| | Type | NetworkHandleType | |
| | Direction | IN | |
| | Comment | Channel on which the request was sent. | |
| | Variation | – | |
| | requestedPgn | | |
| | Type | uint32 | |
| | Direction | IN | |
| | Comment | PGN of the requested PG. | |
| | Variation | – | |
| | extIdInfo | | |
| | Type | J1939Rm_ExtIdInfoType | |
| | Direction | IN | |
| | Comment | Extended identifier bytes. | |
| | Variation | – | |
| destAddress | | | |
| Type | uint8 | | |
| Direction | IN | | |
| Comment | Address of the destination node or 0xFF for broadcast. | | |
| Variation | – | | |
| Possible Errors | E_OK E_NOT_OK | | |

]([SRS_J1939_00026](#))

8.8.4 Implementation Data Types

In this section, the implementation data types used by the client-server interfaces of the [J1939 Request Manager](#) are listed.

Please note: It is essential that the implementation of the [J1939 Request Manager](#) does not define these data types twice, by including them both from the RTE generated header and the own types header.

8.8.4.1 J1939Rm_AckCode

[SWS_J1939Rm_00057] [

| | | | |
|----------------------|---------------------------------------------------------------|------|--------------------------|
| Name | J1939Rm_AckCode | | |
| Kind | Enumeration | | |
| Range | J1939RM_ACK_POSITIVE | 0x00 | Positive Acknowledgement |
| | J1939RM_ACK_NEGATIVE | 0x01 | Negative Acknowledgement |
| | J1939RM_ACK_ACCESS_DENIED | 0x02 | Access Denied |
| | J1939RM_ACK_CANNOT_RESPOND | 0x03 | Cannot Respond |
| Description | This type represents the available kinds of acknowledgements. | | |
| Variation | – | | |
| Available via | Rte_J1939Rm_Type.h | | |

]()

8.8.4.2 J1939Rm_ExtIdType

[SWS_J1939Rm_91000] [

| | | | |
|----------------------|------------------------------------------------------------------------|------|-----------------------------------------|
| Name | J1939Rm_ExtIdType | | |
| Kind | Enumeration | | |
| Range | J1939RM_EXTID_NONE | 0x00 | No extended identifier bytes (0) |
| | J1939RM_EXTID_ONE | 0x01 | One extended identifier byte (1) |
| | J1939RM_EXTID_TWO | 0x02 | Two extended identifier bytes (2) |
| | J1939RM_EXTID_THREE | 0x03 | Three extended identifier bytes (3) |
| | J1939RM_EXTID_GF | 0x04 | Group function value, only for ACKM (4) |
| Description | This type represents the available kinds of extended identifier usage. | | |
| Variation | – | | |
| Available via | Rte_J1939Rm_Type.h | | |

]()

8.8.4.3 J1939Rm_ExtIdInfoType

[SWS_J1939Rm_91001] [

| | | |
|----------------------|-----------------------------------------------------|------------------------------------------------------------|
| Name | J1939Rm_ExtIdInfoType | |
| Kind | Structure | |
| Elements | extIdType | |
| | Type | J1939Rm_ExtIdType |
| | Comment | Denotes the number of extended identifier bytes. |
| | extId1 | |
| | Type | uint8 |
| | Comment | First extended identifier byte or group function for ACKM. |
| | extId2 | |
| | Type | uint8 |
| | Comment | Second extended identifier byte. |
| | extId3 | |
| | Type | uint8 |
| | Comment | Third extended identifier byte. |
| Description | This type represents a set of extended identifiers. | |
| Variation | – | |
| Available via | Rte_J1939Rm_Type.h | |

]()

9 Sequence diagrams

The following sequence diagrams shall give an impression of the way the [J1939 Request Manager](#) shall behave and interoperate with other [BSW](#) modules. They are not complete and not binding for the implementation.

9.1 Reception of Request PG

The following diagram shows the interaction with [PduR](#) and a [J1939Rm User](#) when a [Request PG](#) is received.

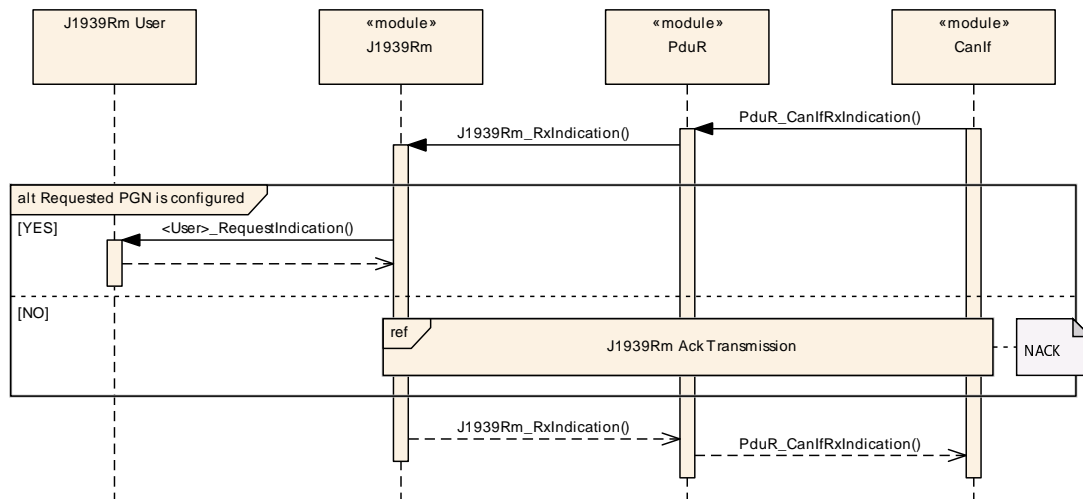


Figure 9.1: Reception of Request PG

9.2 Transmission of Acknowledgement PG

The following diagram shows the interaction with a [J1939Rm User](#) and [PduR](#) when an [Acknowledgement PG](#) is transmitted.

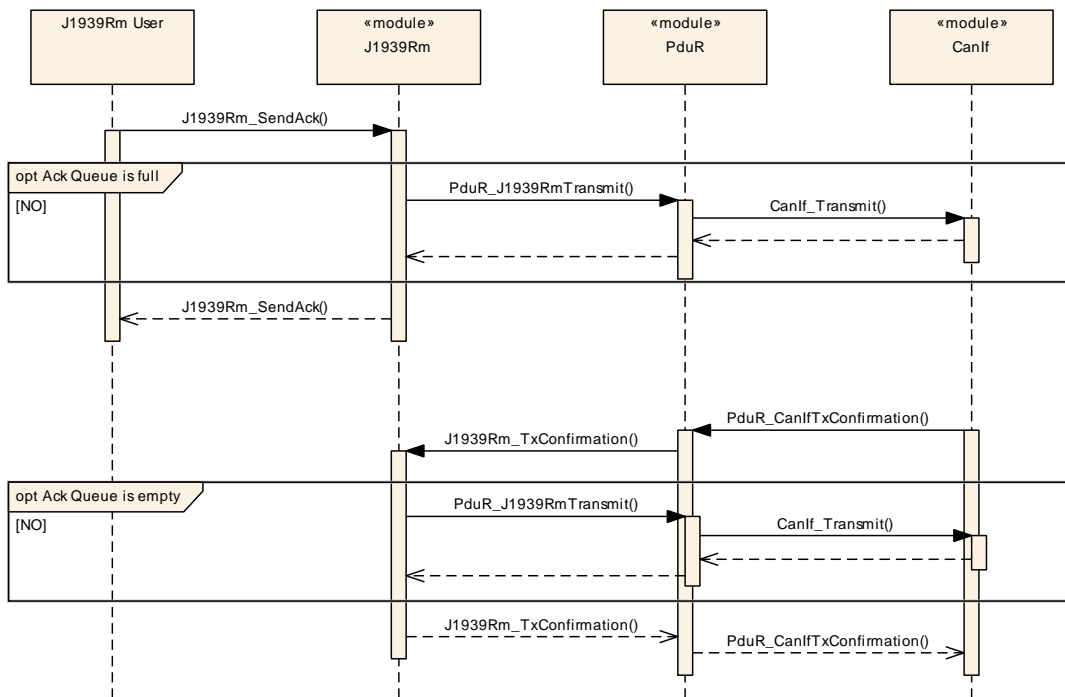


Figure 9.2: Transmission of Acknowledgement PG

9.3 Handling of Request for a COM Pdu

The following diagram shows the interaction with PduR and COM when the J1939 Request Manager receives a Request for a PG of PDU1 format that is transmitted as COM PDU.

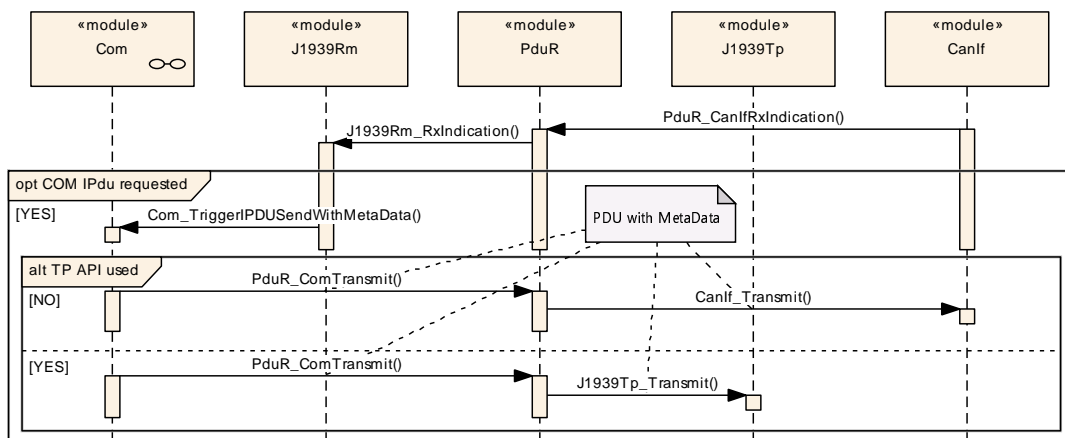


Figure 9.3: Handling of Request for a COM PDU with PDU1 format

9.4 Handling of Request for a Diagnostic Pdu

The following diagram shows the interaction with PduR and J1939Dcm when a request for a diagnostic PG is received.

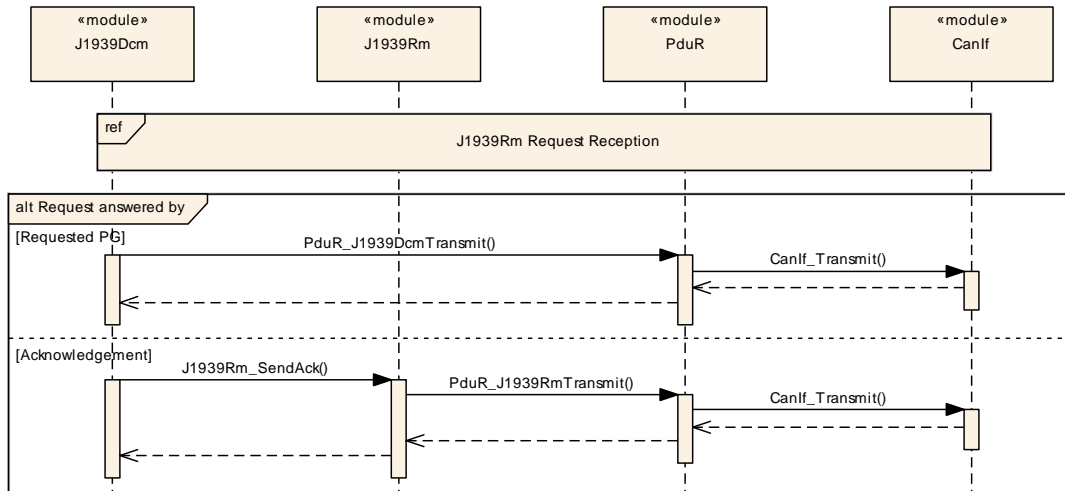


Figure 9.4: Handling of Request for a Diagnostic Pdu

9.5 Transmission of Request PG

The following diagram shows the interaction with a J1939Rm User and PduR when a Request PG is transmitted.

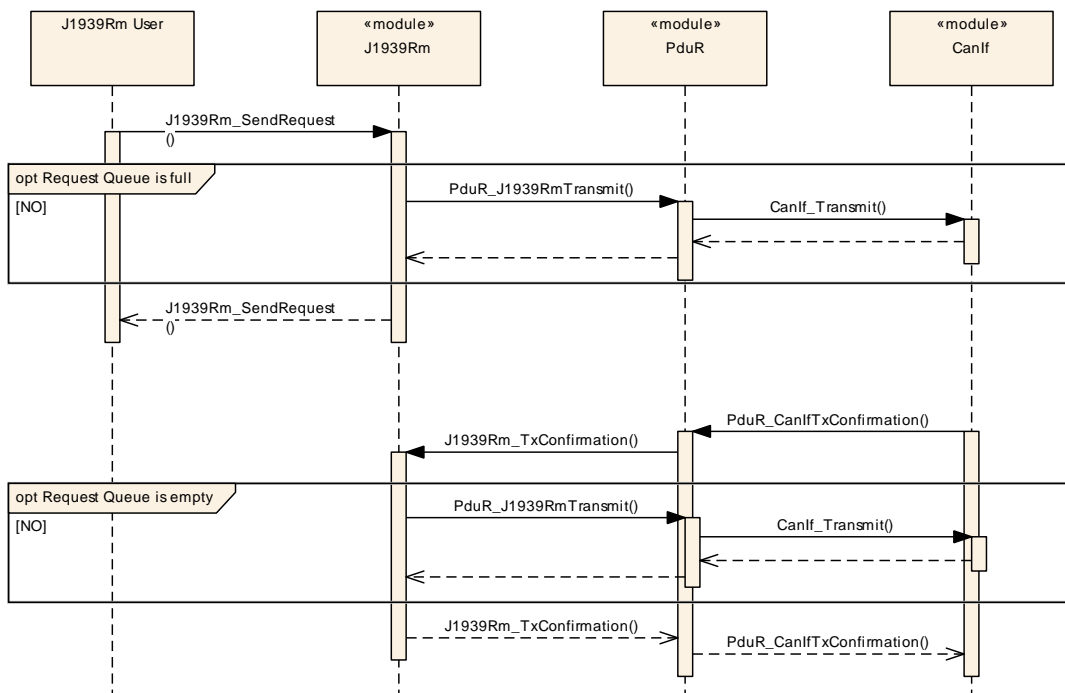


Figure 9.5: Transmission of Request PG

9.6 Reception of Acknowledgement PG

The following diagram shows the interaction with PduR and a J1939Rm User when an Acknowledgement PG is received.

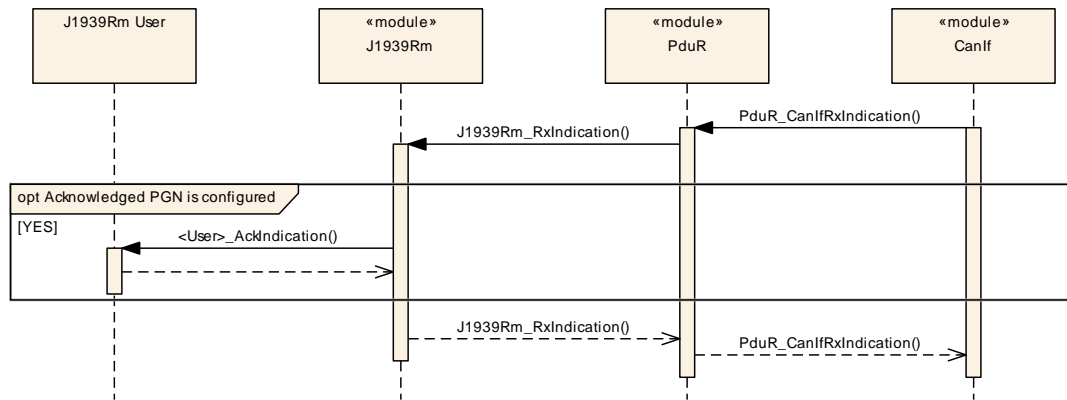


Figure 9.6: Reception of Acknowledgement PG

9.7 Monitoring of Request Timeout

The following diagram shows the interaction with a J1939Rm User and PduR when the J1939Rm monitors timeout of a transmitted Request PG.

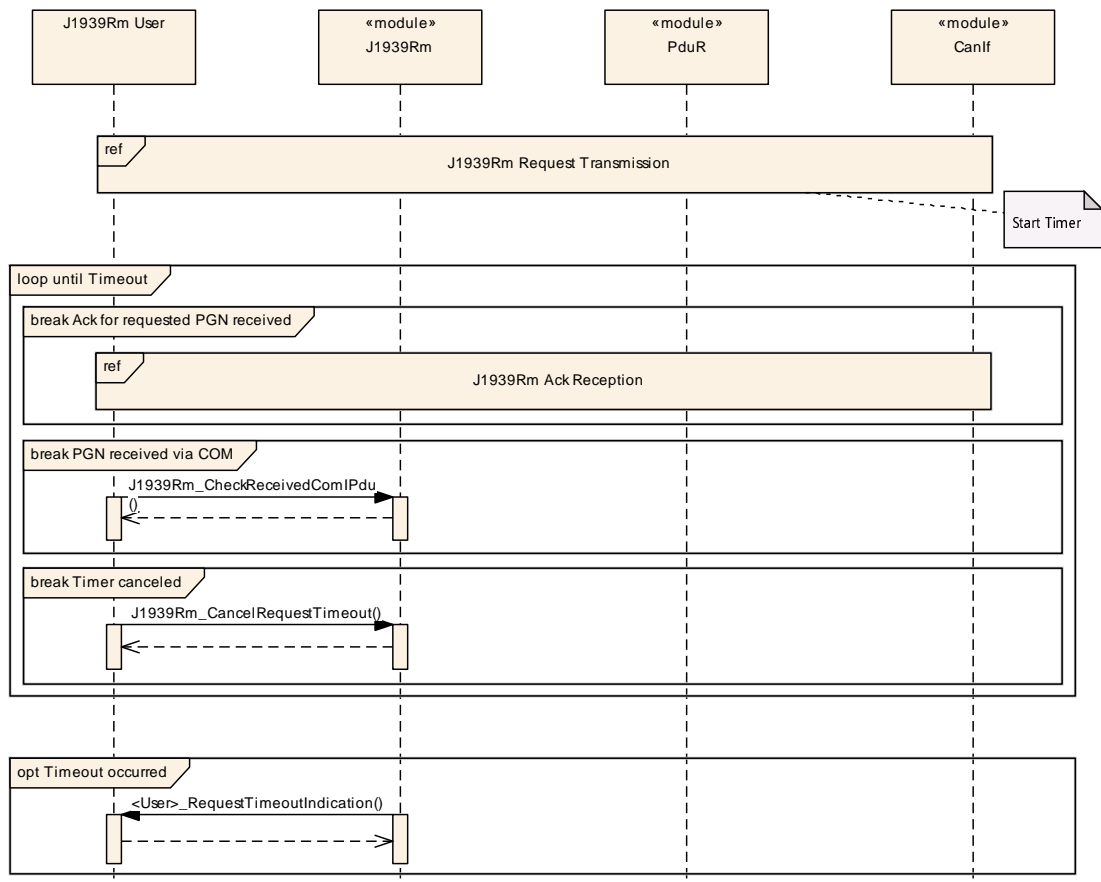


Figure 9.7: Monitoring of Request Timeout

10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. For general information about the definition of containers and parameters, refer to the section 10.1 “Introduction to configuration specification” in [4, SWS BSW General].

Section 10.1 specifies the structure (containers) and the parameters of the module [SAE J1939 Request Manager](#).

Section 10.2 specifies published information of the module [SAE J1939 Request Manager](#).

10.1 Containers and configuration parameters

The following sections summarize all configuration parameters of the [J1939 Request Manager](#). The detailed meaning of the parameters is described in chapters 7 and 8.

Some of these containers and parameters are derived from classes and attributes of the [21, TPS System Template], which also contains the rules for these derivations.

The following pictures show an overview of the configuration parameters available for J1939Rm:

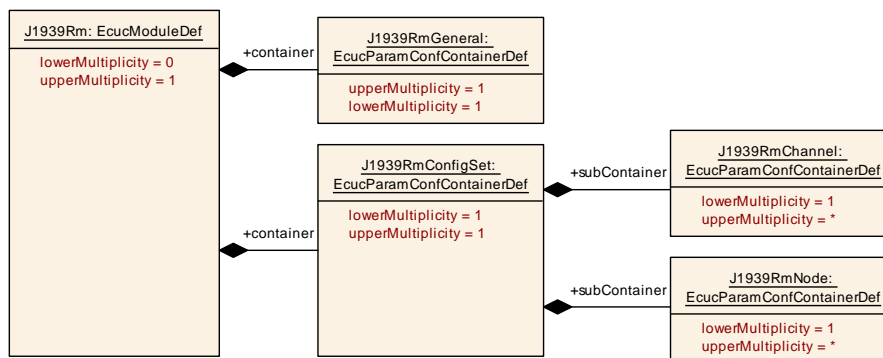


Figure 10.1: Configuration container J1939Rm with subcontainer J1939RmConfigSet

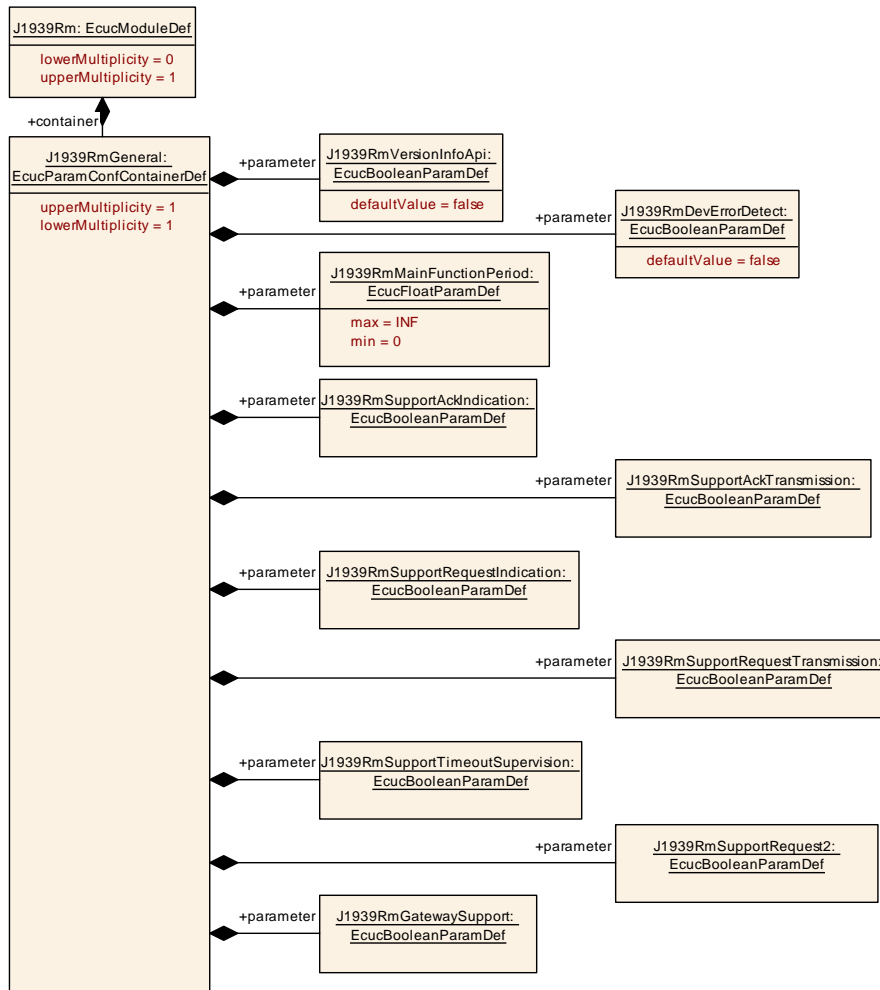


Figure 10.2: Configuration container J1939RmGeneral

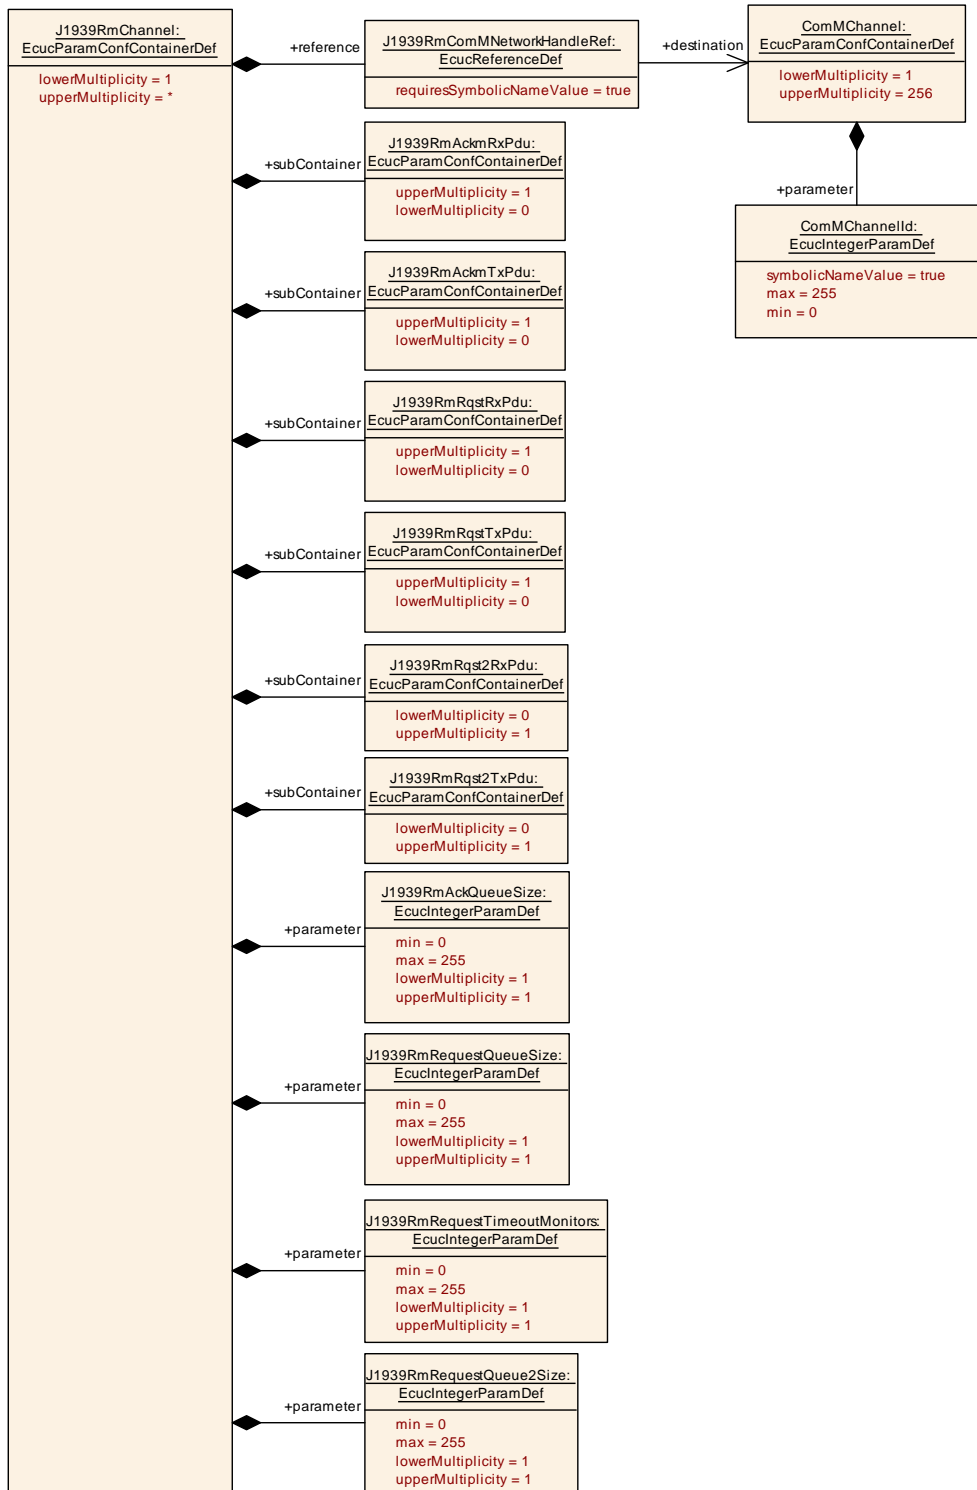


Figure 10.3: Configuration container J1939RmChannel

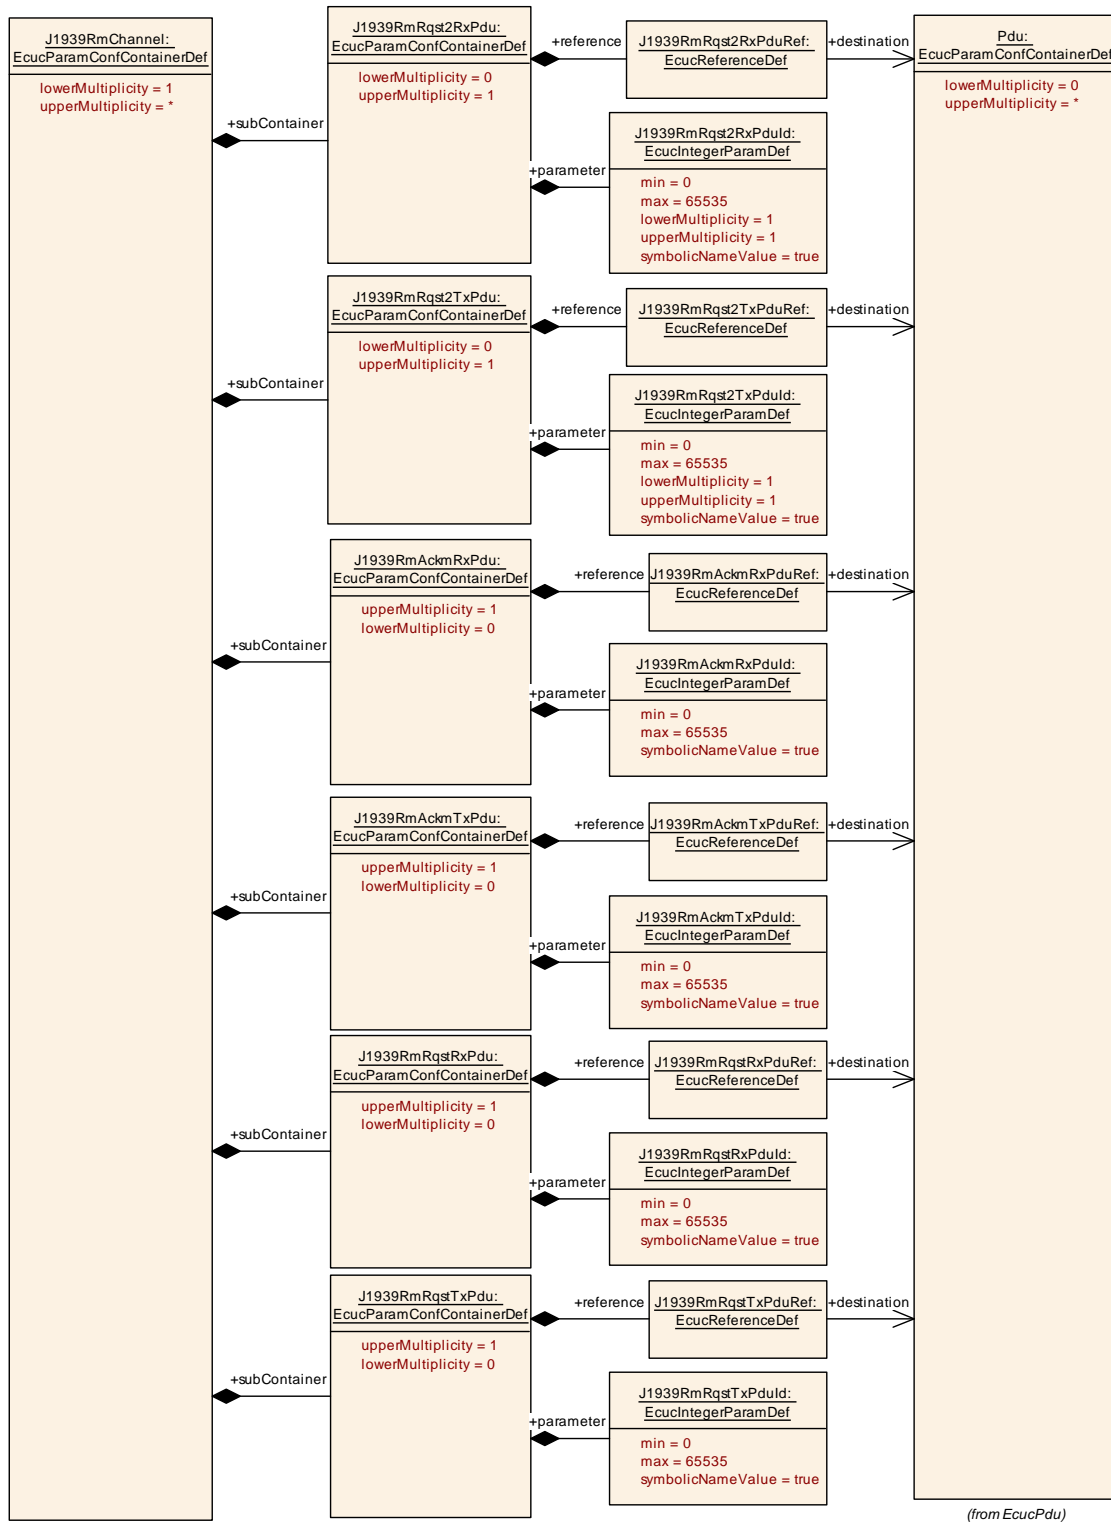


Figure 10.4: Configuration container J1939RmChannel with PDUs

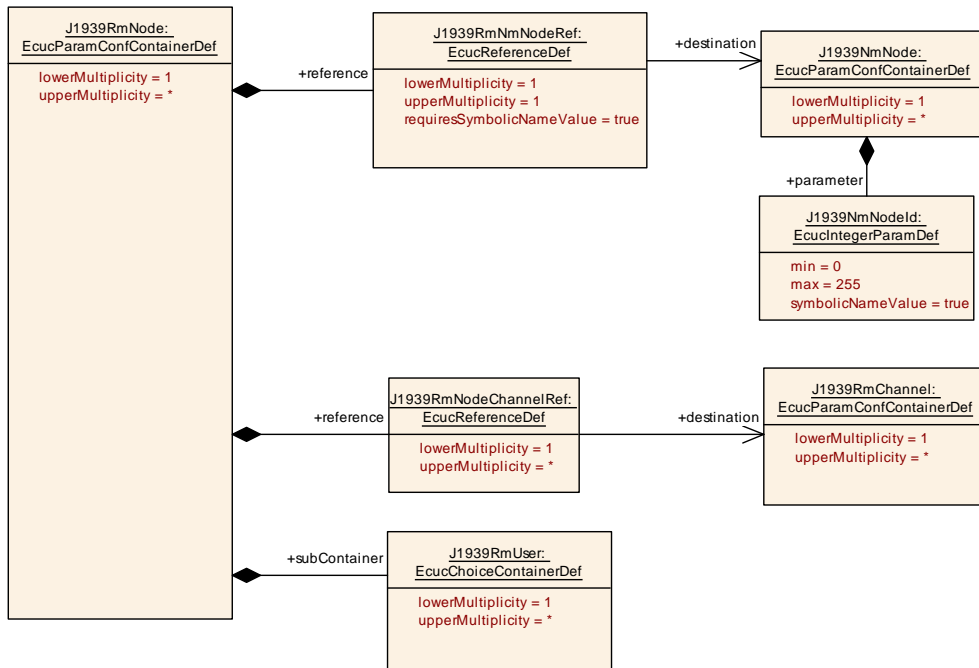


Figure 10.5: Configuration container J1939RmNode

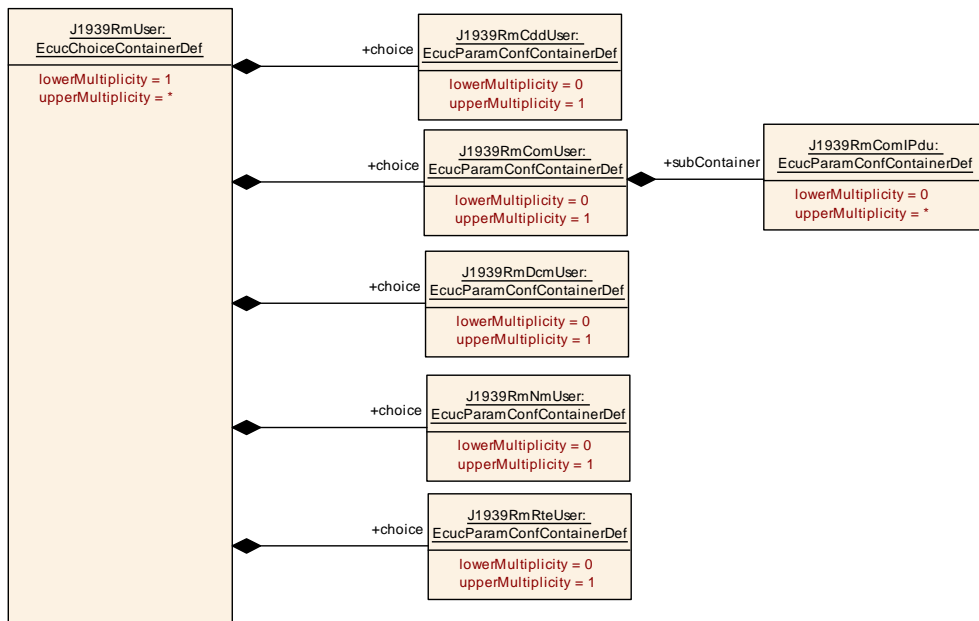


Figure 10.6: Configuration container J1939RmUser

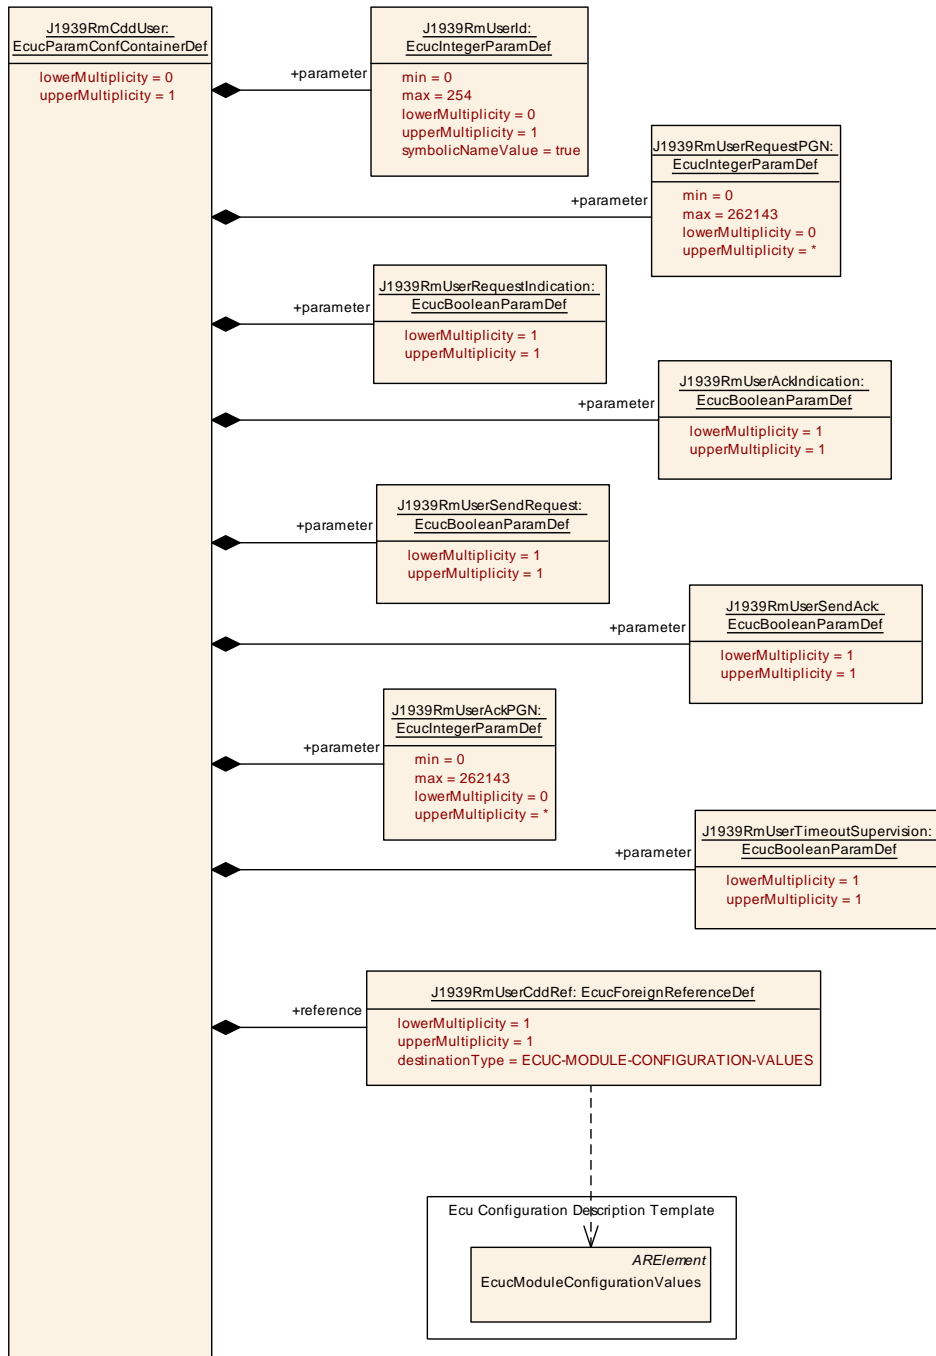


Figure 10.7: Configuration container J1939RmCddUser

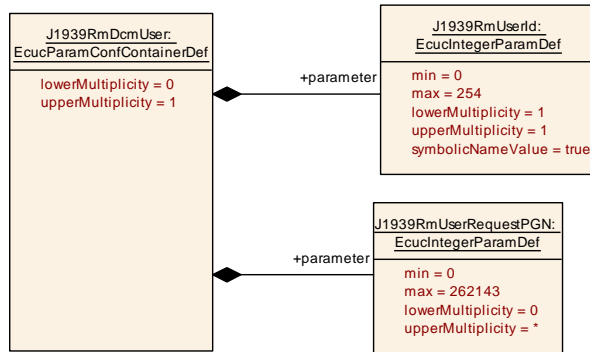


Figure 10.8: Configuration container J1939RmDcmUser

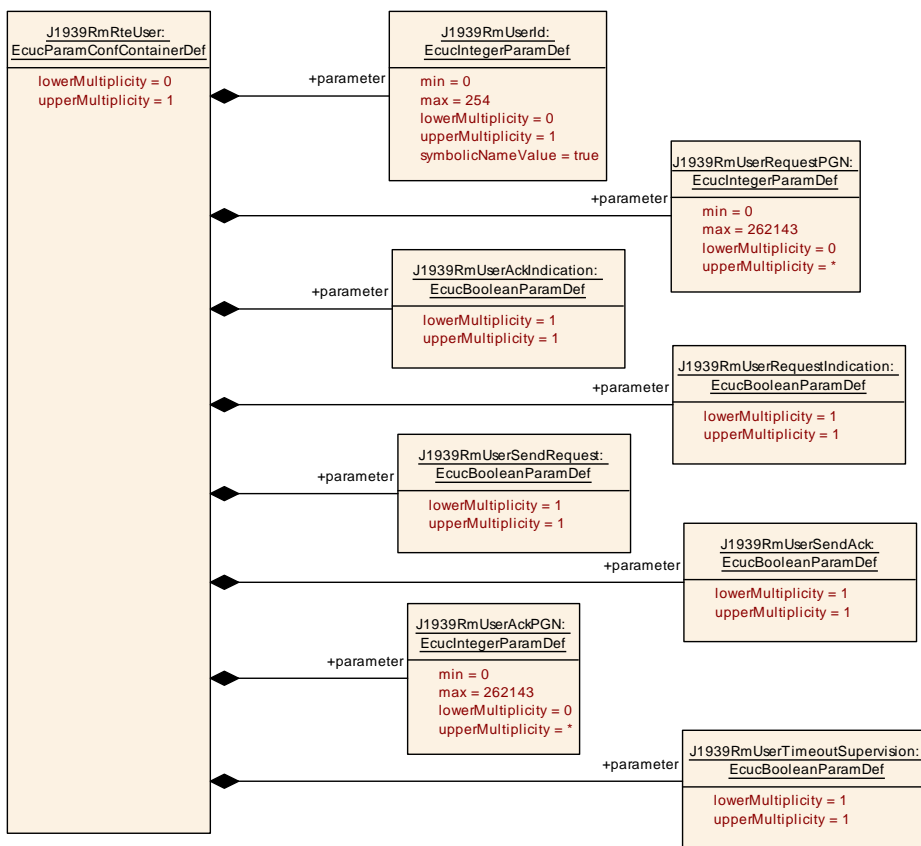


Figure 10.9: Configuration container J1939RmRteUser

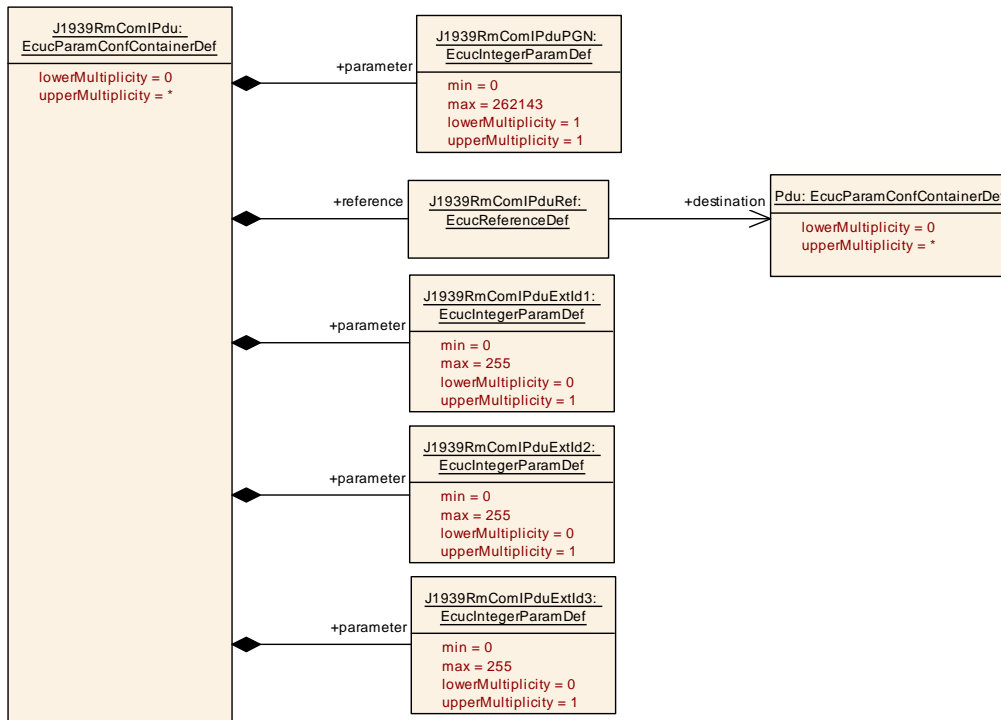


Figure 10.10: Configuration container J1939RmComIPdu

10.1.1 J1939Rm

| | |
|----------------------------|------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00043] |
| Module Name | J1939Rm |
| Description | Configuration of the J1939 Request Manager. |
| Post-Build Variant Support | true |
| Supported Config Variants | VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE |

| Included Containers | | |
|----------------------------------|--------------|--------------------------------------------------------------------------------------------------------|
| Container Name | Multiplicity | Scope / Dependency |
| J1939RmConfigSet | 1 | This container contains the configuration parameters and sub containers of the AUTOSAR J1939Rm module. |
| J1939RmGeneral | 1 | Contains the general configuration parameters of the module. |

10.1.2 J1939RmGeneral

| | |
|--------------------------|--------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00001] |
| Container Name | J1939RmGeneral |
| Parent Container | J1939Rm |
| Description | Contains the general configuration parameters of the module. |
| Configuration Parameters | |

| | | | |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00003] | | |
| Parameter Name | J1939RmDevErrorDetect | | |
| Parent Container | J1939RmGeneral | | |
| Description | Switches the development error detection and notification on or off. <ul style="list-style-type: none"> • true: detection and notification is enabled. • false: detection and notification is disabled. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | false | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|----------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00084] | | |
| Parameter Name | J1939RmGatewaySupport | | |
| Parent Container | J1939RmGeneral | | |
| Description | Enables/disables support for routing Request and Acknowledgement messages. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|-----------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00004] | | |
| Parameter Name | J1939RmMainFunctionPeriod | | |
| Parent Container | J1939RmGeneral | | |
| Description | Execution cycle of J1939Rm_MainFunction in seconds. | | |
| Multiplicity | 1 | | |
| Type | EcucFloatParamDef | | |
| Range |]0 .. INF[| | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|-------------------------|---------------------------------------------------------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00054] | | |
| Parameter Name | J1939RmSupportAckIndication | | |
| Parent Container | J1939RmGeneral | | |
| Description | Pre-processor switch for enabling support of acknowledgement indications. | | |





| | | | |
|----------------------------------|-------------------------|---|--------------|
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|----------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00055] | | |
| Parameter Name | J1939RmSupportAckTransmission | | |
| Parent Container | J1939RmGeneral | | |
| Description | Pre-processor switch for enabling support of acknowledgement transmission. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|-------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00073] | | |
| Parameter Name | J1939RmSupportRequest2 | | |
| Parent Container | J1939RmGeneral | | |
| Description | Pre-processor switch for enabling support of the Request2 PG. Please note: Transfer is not supported. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|-------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00056] | | |
| Parameter Name | J1939RmSupportRequestIndication | | |
| Parent Container | J1939RmGeneral | | |
| Description | Pre-processor switch for enabling support of request indications. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |





| | |
|---------------------------|--------------|
| Scope / Dependency | scope: local |
|---------------------------|--------------|

| | | | |
|----------------------------------|--------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00057] | | |
| Parameter Name | J1939RmSupportRequestTransmission | | |
| Parent Container | J1939RmGeneral | | |
| Description | Pre-processor switch for enabling support of request transmission. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | - | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|---------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00058] | | |
| Parameter Name | J1939RmSupportTimeoutSupervision | | |
| Parent Container | J1939RmGeneral | | |
| Description | Pre-processor switch for enabling support of request timeout supervision. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | - | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|-------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00002] | | |
| Parameter Name | J1939RmVersionInfoApi | | |
| Parent Container | J1939RmGeneral | | |
| Description | Pre-processor switch for enabling version info API support. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | false | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

| |
|-------------------------------|
| No Included Containers |
|-------------------------------|

10.1.3 J1939RmConfigSet

| | |
|---------------------------------|--------------------------------------------------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00017] |
| Container Name | J1939RmConfigSet |
| Parent Container | J1939Rm |
| Description | This container contains the configuration parameters and sub containers of the AUTOSAR J1939Rm module. |
| Configuration Parameters | |

| Included Containers | | |
|--------------------------------|--------------|-------------------------------------------------------------------------------------------------|
| Container Name | Multiplicity | Scope / Dependency |
| J1939RmChannel | 1..* | Contains the parameters for a CAN channel supported by the J1939 Request Manager. |
| J1939RmNode | 1..* | Contains the parameters for the support of a logical J1939 node (identified by an ECU address). |

10.1.4 J1939RmChannel

| | | | |
|-----------------------------------------|-----------------------------------------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00009] | | |
| Container Name | J1939RmChannel | | |
| Parent Container | J1939RmConfigSet | | |
| Description | Contains the parameters for a CAN channel supported by the J1939 Request Manager. | | |
| Post-Build Variant Multiplicity | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Configuration Parameters | | | |

| | | | |
|----------------------------------|--------------------------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00007] | | |
| Parameter Name | J1939RmAckQueueSize | | |
| Parent Container | J1939RmChannel | | |
| Description | Number of transmitted Acknowledgement messages that can be stored. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 255 | | |
| Default value | - | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

| | | | |
|-------------------------|--------------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00074] | | |
| Parameter Name | J1939RmRequestQueue2Size | | |
| Parent Container | J1939RmChannel | | |





| | | | |
|----------------------------------|-------------------------------------------------------------|---|------------------------------------------|
| Description | Number of transmitted Request2 messages that can be stored. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 255 | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|------------------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00006] | | |
| Parameter Name | J1939RmRequestQueueSize | | |
| Parent Container | J1939RmChannel | | |
| Description | Number of transmitted Request messages that can be stored. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 255 | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|-------------------------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00008] | | |
| Parameter Name | J1939RmRequestTimeoutMonitors | | |
| Parent Container | J1939RmChannel | | |
| Description | Number of transmitted requests that can be monitored for timeout. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 255 | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|-------------------------|-----------------------------------------------------------------------------------------------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00051] | | |
| Parameter Name | J1939RmComMNetworkHandleRef | | |
| Parent Container | J1939RmChannel | | |
| Description | Reference to the channel defined by the ComMChannel providing access to the unique channel index ComMChannelId. | | |
| Multiplicity | 1 | | |





| | | | |
|----------------------------------|----------------------------------------|---|------------------------------------------|
| Type | Symbolic name reference to ComMChannel | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| Included Containers | | |
|-----------------------------------|--------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Container Name | Multiplicity | Scope / Dependency |
| J1939RmAckmRxPdu | 0..1 | Contains the configuration of the I-PDU used to receive the Acknowledgement PG. This PDU consumes a meta data item of type CAN_ID_32. |
| J1939RmAckmTxPdu | 0..1 | Contains the configuration of the I-PDU used to transmit the Acknowledgement PG. This PDU produces a meta data item of type CAN_ID_32. |
| J1939RmRqst2RxPdu | 0..1 | Contains the configuration of the I-PDU used to receive the Request2 PG. This PDU consumes a meta data item of type CAN_ID_32. |
| J1939RmRqst2TxPdu | 0..1 | Contains the configuration of the I-PDU used to transmit the Request2 PG. This PDU produces a meta data item of type CAN_ID_32. |
| J1939RmRqstRxPdu | 0..1 | Contains the configuration of the I-PDU used to receive the Request PG. This PDU consumes a meta data item of type CAN_ID_32. |
| J1939RmRqstTxPdu | 0..1 | Contains the configuration of the I-PDU used to transmit the Request PG. This PDU produces a meta data item of type CAN_ID_32. |

10.1.5 J1939RmAckmRxPdu

| | |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00011] |
| Container Name | J1939RmAckmRxPdu |
| Parent Container | J1939RmChannel |
| Description | Contains the configuration of the I-PDU used to receive the Acknowledgement PG. This PDU consumes a meta data item of type CAN_ID_32. |
| Configuration Parameters | |

| | |
|----------------------------------|------------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00015] |
| Parameter Name | J1939RmAckmRxPduld |
| Parent Container | J1939RmAckmRxPdu |
| Description | The I-PDU identifier used for RxIndication from PduR. |
| Multiplicity | 1 |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) |
| Range | 0 .. 65535 |
| Default value | – |
| Post-Build Variant Value | false |
| Value Configuration Class | Pre-compile time X All Variants |





| | | | |
|---------------------------|------------------------|---|--|
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|----------------------------------|-----------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00016] | | |
| Parameter Name | J1939RmAckmRxPduRef | | |
| Parent Container | J1939RmAckmRxPdu | | |
| Description | Reference to the Pdu object representing the I-PDU. | | |
| Multiplicity | 1 | | |
| Type | Reference to Pdu | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

No Included Containers

10.1.6 J1939RmAckmTxPdu

| | | | |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00012] | | |
| Container Name | J1939RmAckmTxPdu | | |
| Parent Container | J1939RmChannel | | |
| Description | Contains the configuration of the I-PDU used to transmit the Acknowledgement PG. This PDU produces a meta data item of type CAN_ID_32. | | |
| Configuration Parameters | | | |

| | | | |
|----------------------------------|------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00018] | | |
| Parameter Name | J1939RmAckmTxPduId | | |
| Parent Container | J1939RmAckmTxPdu | | |
| Description | The I-PDU identifier used for TxConfirmation from PduR. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) | | |
| Range | 0 .. 65535 | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|-------------------------|----------------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00019] | | |
| Parameter Name | J1939RmAckmTxPduRef | | |
| Parent Container | J1939RmAckmTxPdu | | |





| | | | |
|----------------------------------|-----------------------------------------------------|---|------------------------------------------|
| Description | Reference to the Pdu object representing the I-PDU. | | |
| Multiplicity | 1 | | |
| Type | Reference to Pdu | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

No Included Containers

10.1.7 J1939RmRqstRxPdu

| | |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00013] |
| Container Name | J1939RmRqstRxPdu |
| Parent Container | J1939RmChannel |
| Description | Contains the configuration of the I-PDU used to receive the Request PG. This PDU consumes a meta data item of type CAN_ID_32. |
| Configuration Parameters | |

| | | | |
|----------------------------------|------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00020] | | |
| Parameter Name | J1939RmRqstRxPduId | | |
| Parent Container | J1939RmRqstRxPdu | | |
| Description | The I-PDU identifier used for RxIndication from PduR. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) | | |
| Range | 0 .. 65535 | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|----------------------------------|-----------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00021] | | |
| Parameter Name | J1939RmRqstRxPduRef | | |
| Parent Container | J1939RmRqstRxPdu | | |
| Description | Reference to the Pdu object representing the I-PDU. | | |
| Multiplicity | 1 | | |
| Type | Reference to Pdu | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |





| | | | |
|---------------------------|------------------------|---|--|
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

No Included Containers

10.1.8 J1939RmRqstTxPdu

| | |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00014] |
| Container Name | J1939RmRqstTxPdu |
| Parent Container | J1939RmChannel |
| Description | Contains the configuration of the I-PDU used to transmit the Request PG. This PDU produces a meta data item of type CAN_ID_32. |
| Configuration Parameters | |

| | | | |
|----------------------------------|------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00022] | | |
| Parameter Name | J1939RmRqstTxPduId | | |
| Parent Container | J1939RmRqstTxPdu | | |
| Description | The I-PDU identifier used for TxConfirmation from PduR. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) | | |
| Range | 0 .. 65535 | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|----------------------------------|-----------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00023] | | |
| Parameter Name | J1939RmRqstTxPduRef | | |
| Parent Container | J1939RmRqstTxPdu | | |
| Description | Reference to the Pdu object representing the I-PDU. | | |
| Multiplicity | 1 | | |
| Type | Reference to Pdu | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

No Included Containers

10.1.9 J1939RmRqst2RxPdu

| | |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00075] |
| Container Name | J1939RmRqst2RxPdu |
| Parent Container | J1939RmChannel |
| Description | Contains the configuration of the I-PDU used to receive the Request2 PG. This PDU consumes a meta data item of type CAN_ID_32. |
| Configuration Parameters | |

| | | | |
|----------------------------------|------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00078] | | |
| Parameter Name | J1939RmRqst2RxPduId | | |
| Parent Container | J1939RmRqst2RxPdu | | |
| Description | The I-PDU identifier used for RxIndication from PduR. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) | | |
| Range | 0 .. 65535 | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|----------------------------------|-----------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00077] | | |
| Parameter Name | J1939RmRqst2RxPduRef | | |
| Parent Container | J1939RmRqst2RxPdu | | |
| Description | Reference to the Pdu object representing the I-PDU. | | |
| Multiplicity | 1 | | |
| Type | Reference to Pdu | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

No Included Containers

10.1.10 J1939RmRqst2TxPdu

| | |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00076] |
| Container Name | J1939RmRqst2TxPdu |
| Parent Container | J1939RmChannel |
| Description | Contains the configuration of the I-PDU used to transmit the Request2 PG. This PDU produces a meta data item of type CAN_ID_32. |
| Configuration Parameters | |

| | | | |
|----------------------------------|------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00080] | | |
| Parameter Name | J1939RmRqst2TxPduId | | |
| Parent Container | J1939RmRqst2TxPdu | | |
| Description | The I-PDU identifier used for TxConfirmation from PduR. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) | | |
| Range | 0 .. 65535 | | |
| Default value | - | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|----------------------------------|-----------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00079] | | |
| Parameter Name | J1939RmRqst2TxPduRef | | |
| Parent Container | J1939RmRqst2TxPdu | | |
| Description | Reference to the Pdu object representing the I-PDU. | | |
| Multiplicity | 1 | | |
| Type | Reference to Pdu | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

No Included Containers

10.1.11 J1939RmNode

| | | | |
|-----------------------------------------|-------------------------------------------------------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00049] | | |
| Container Name | J1939RmNode | | |
| Parent Container | J1939RmConfigSet | | |
| Description | Contains the parameters for the support of a logical J1939 node (identified by an ECU address). | | |
| Post-Build Variant Multiplicity | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Configuration Parameters | | | |

| | | | |
|-------------------------|-----------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00005] | | |
| Parameter Name | J1939RmNmNodeRef | | |
| Parent Container | J1939RmNode | | |





| | | | |
|----------------------------------|----------------------------------------------|---|------------------------------------------|
| Description | Reference to the corresponding J1939Nm node. | | |
| Multiplicity | 1 | | |
| Type | Symbolic name reference to J1939NmNode | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|----------------------------------------------------|---|------------------------------------------|
| SWS Item | [ECUC_J1939Rm_00052] | | |
| Parameter Name | J1939RmNodeChannelRef | | |
| Parent Container | J1939RmNode | | |
| Description | Reference to the channels this node has access to. | | |
| Multiplicity | 1..* | | |
| Type | Reference to J1939RmChannel | | |
| Post-Build Variant Multiplicity | false | | |
| Post-Build Variant Value | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| Included Containers | | |
|-----------------------------|---------------------|---------------------------------------------------------------------------------------------------------|
| Container Name | Multiplicity | Scope / Dependency |
| J1939RmUser | 1..* | Contains the configuration of a module that uses the request and acknowledgement interfaces of J1939Rm. |

10.1.12 J1939RmUser

| | | | |
|-----------------------------------------|---------------------------------------------------------------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00010] | | |
| Choice Container Name | J1939RmUser | | |
| Parent Container | J1939RmNode | | |
| Description | Contains the configuration of a module that uses the request and acknowledgement interfaces of J1939Rm. | | |
| Post-Build Variant Multiplicity | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |

| Container Choices | | |
|--------------------------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Container Name | Multiplicity | Scope / Dependency |
| J1939RmCddUser | 0..1 | J1939Rm User representing a complex driver (CDD). CDDs may use all services provided by J1939Rm. |
| J1939RmComUser | 0..1 | J1939Rm User representing AUTOSAR COM. Supports requests for COM I-PDUs. |
| J1939RmDcmUser | 0..1 | J1939Rm User representing the J1939Dcm. Requires request indication and transmission of acknowledgement. |
| J1939RmNmUser | 0..1 | J1939Rm User representing the J1939Nm. Requires request indication. |
| J1939RmRteUser | 0..1 | J1939Rm User representing an application software component (SW-C). SW-Cs may use all services provided by the J1939Rm via service ports. |

10.1.13 J1939RmNmUser

| | | | |
|-----------------------------------------|---------------------------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00071] | | |
| Container Name | J1939RmNmUser | | |
| Parent Container | J1939RmUser | | |
| Description | J1939Rm User representing the J1939Nm. Requires request indication. | | |
| Post-Build Variant Multiplicity | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Configuration Parameters | | | |

| |
|------------------------|
| No Included Containers |
|------------------------|

10.1.14 J1939RmDcmUser

| | | | |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00068] | | |
| Container Name | J1939RmDcmUser | | |
| Parent Container | J1939RmUser | | |
| Description | J1939Rm User representing the J1939Dcm. Requires request indication and transmission of acknowledgement. | | |
| Post-Build Variant Multiplicity | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Configuration Parameters | | | |

| | | | |
|-------------------------|-----------------------------------------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00072] | | |
| Parameter Name | J1939RmUserId | | |
| Parent Container | J1939RmDcmUser | | |
| Description | Identifier used by J1939Dcm when calling J1939Rm_SendAck. | | |





| | | | |
|----------------------------------|------------------------------------------------------------------|---|--------------|
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) | | |
| Range | 0 .. 254 | | |
| Default value | - | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|-----------------------------------------|--------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00070] | | |
| Parameter Name | J1939RmUserRequestPGN | | |
| Parent Container | J1939RmDcmUser | | |
| Description | PGN of DMx PG supported by J1939Dcm. | | |
| Multiplicity | 0..* | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 262143 | | |
| Default value | - | | |
| Post-Build Variant Multiplicity | true | | |
| Post-Build Variant Value | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Scope / Dependency | scope: local | | |

| |
|-------------------------------|
| No Included Containers |
|-------------------------------|

10.1.15 J1939RmCddUser

| | | | |
|-----------------------------------------|--------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00066] | | |
| Container Name | J1939RmCddUser | | |
| Parent Container | J1939RmUser | | |
| Description | J1939Rm User representing a complex driver (CDD). CDDs may use all services provided by J1939Rm. | | |
| Post-Build Variant Multiplicity | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Configuration Parameters | | | |

| | | | |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00028] | | |
| Parameter Name | J1939RmUserAckIndication | | |
| Parent Container | J1939RmCddUser | | |
| Description | Enable AckIndication for this module. In case of CDD, the name is <apiServicePrefix>_AckIndication. In case of RTE, the operation AckIndication of the required port J1939Rm_AckIndication_{user} is called. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | - | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00061] | | |
| Parameter Name | J1939RmUserAckPGN | | |
| Parent Container | J1939RmCddUser | | |
| Description | PGN supported to be acknowledged to this module. The PGNs supported by different modules should usually be disjunctive. | | |
| Multiplicity | 0..* | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 262143 | | |
| Default value | - | | |
| Post-Build Variant Multiplicity | false | | |
| Post-Build Variant Value | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00025] | | |
| Parameter Name | J1939RmUserId | | |
| Parent Container | J1939RmCddUser | | |
| Description | Identifier used by a module using J1939Rm. This parameter is only required when the module uses transmission of requests or acknowledgements. | | |
| Multiplicity | 0..1 | | |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) | | |
| Range | 0 .. 254 | | |
| Default value | - | | |
| Post-Build Variant Multiplicity | false | | |
| Post-Build Variant Value | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Value Configuration Class | Pre-compile time | X | All Variants |





| | | | |
|---------------------------|------------------------|---|--|
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00027] | | |
| Parameter Name | J1939RmUserRequestIndication | | |
| Parent Container | J1939RmCddUser | | |
| Description | Enable RequestIndication for this module. In case of J1939Nm or J1939Dcm, the name is fixed. In case of CDD, the name is <apiServicePrefix>_RequestIndication. In case of RTE, J1939Rm will call the operation RequestIndication of the required port J1939Rm_RequestIndication_{user}. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00026] | | |
| Parameter Name | J1939RmUserRequestPGN | | |
| Parent Container | J1939RmCddUser | | |
| Description | PGN supported to be requested from this module. The PGNs supported by different modules should usually be disjunctive. | | |
| Multiplicity | 0..* | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 262143 | | |
| Default value | – | | |
| Post-Build Variant Multiplicity | false | | |
| Post-Build Variant Value | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00030] | | |
| Parameter Name | J1939RmUserSendAck | | |
| Parent Container | J1939RmCddUser | | |
| Description | Enable the SendAck API for this module. In case of RTE, the operation SendAck of the provided port J1939Rm_SendAck_{user} is called. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |





| | | | |
|----------------------------------|-------------------------|---|--------------|
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00029] | | |
| Parameter Name | J1939RmUserSendRequest | | |
| Parent Container | J1939RmCddUser | | |
| Description | Enable the SendRequest API for this module. In case of RTE, the operation Send Request of the provided port J1939Rm_SendRequest_{user} is called. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00031] | | |
| Parameter Name | J1939RmUserTimeoutSupervision | | |
| Parent Container | J1939RmCddUser | | |
| Description | <p>Enable RequestTimeoutIndication and CancelRequestTimeout for this module.</p> <p>RequestTimeoutIndication: In case of CDD, the name is <apiServicePrefix>_RequestTimeoutIndication. In case of RTE, the operation RequestTimeoutIndication of the required port J1939Rm_RequestTimeoutIndication_{user} is called.</p> <p>CancelRequestTimeout: In case of RTE, the operation CancelRequestTimeout of the provided port J1939Rm_CancelRequestTimeout_{user} is called.</p> | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|-------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00042] | | |
| Parameter Name | J1939RmUserCddRef | | |
| Parent Container | J1939RmCddUser | | |
| Description | Reference to the CDD module description. | | |
| Multiplicity | 1 | | |
| Type | Foreign reference to ECUC-MODULE-CONFIGURATION-VALUES | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| |
|-------------------------------|
| No Included Containers |
|-------------------------------|

10.1.16 J1939RmRteUser

| | | | |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00069] | | |
| Container Name | J1939RmRteUser | | |
| Parent Container | J1939RmUser | | |
| Description | J1939Rm User representing an application software component (SW-C). SW-Cs may use all services provided by the J1939Rm via service ports. | | |
| Post-Build Variant Multiplicity | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Configuration Parameters | | | |

| | | | |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00028] | | |
| Parameter Name | J1939RmUserAckIndication | | |
| Parent Container | J1939RmRteUser | | |
| Description | Enable AckIndication for this module. In case of CDD, the name is <apiServicePrefix>_AckIndication. In case of RTE, the operation AckIndication of the required port J1939Rm_AckIndication_{user} is called. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00061] | | |
| Parameter Name | J1939RmUserAckPGN | | |
| Parent Container | J1939RmRteUser | | |
| Description | PGN supported to be acknowledged to this module. The PGNs supported by different modules should usually be disjunctive. | | |
| Multiplicity | 0..* | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 262143 | | |
| Default value | – | | |
| Post-Build Variant Multiplicity | false | | |
| Post-Build Variant Value | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00025] | | |
| Parameter Name | J1939RmUserId | | |
| Parent Container | J1939RmRteUser | | |
| Description | Identifier used by a module using J1939Rm. This parameter is only required when the module uses transmission of requests or acknowledgements. | | |
| Multiplicity | 0..1 | | |
| Type | EcucIntegerParamDef (Symbolic Name generated for this parameter) | | |
| Range | 0 .. 254 | | |
| Default value | - | | |
| Post-Build Variant Multiplicity | false | | |
| Post-Build Variant Value | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: ECU | | |

| | | | |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00027] | | |
| Parameter Name | J1939RmUserRequestIndication | | |
| Parent Container | J1939RmRteUser | | |
| Description | Enable RequestIndication for this module. In case of J1939Nm or J1939Dcm, the name is fixed. In case of CDD, the name is <apiServicePrefix>_RequestIndication. In case of RTE, J1939Rm will call the operation RequestIndication of the required port J1939Rm_RequestIndication_{user}. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | - | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00026] | | |
| Parameter Name | J1939RmUserRequestPGN | | |
| Parent Container | J1939RmRteUser | | |
| Description | PGN supported to be requested from this module. The PGNs supported by different modules should usually be disjunctive. | | |
| Multiplicity | 0..* | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 262143 | | |
| Default value | - | | |
| Post-Build Variant Multiplicity | false | | |
| Post-Build Variant Value | false | | |
| Multiplicity Configuration Class | Pre-compile time | X | All Variants |
| | Link time | - | |
| | Post-build time | - | |





| | | | |
|----------------------------------|-------------------------|---|--------------|
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00030] | | |
| Parameter Name | J1939RmUserSendAck | | |
| Parent Container | J1939RmRteUser | | |
| Description | Enable the SendAck API for this module. In case of RTE, the operation SendAck of the provided port J1939Rm_SendAck_{user} is called. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00029] | | |
| Parameter Name | J1939RmUserSendRequest | | |
| Parent Container | J1939RmRteUser | | |
| Description | Enable the SendRequest API for this module. In case of RTE, the operation Send Request of the provided port J1939Rm_SendRequest_{user} is called. | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |
| | Post-build time | – | |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------|
| SWS Item | [ECUC_J1939Rm_00031] | | |
| Parameter Name | J1939RmUserTimeoutSupervision | | |
| Parent Container | J1939RmRteUser | | |
| Description | <p>Enable RequestTimeoutIndication and CancelRequestTimeout for this module.</p> <p>RequestTimeoutIndication: In case of CDD, the name is <apiServicePrefix>_Request TimeoutIndication. In case of RTE, the operation RequestTimeoutIndication of the required port J1939Rm_RequestTimeoutIndication_{user} is called.</p> <p>CancelRequestTimeout: In case of RTE, the operation CancelRequestTimeout of the provided port J1939Rm_CancelRequestTimeout_{user} is called.</p> | | |
| Multiplicity | 1 | | |
| Type | EcucBooleanParamDef | | |
| Default value | – | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | All Variants |
| | Link time | – | |





| | | | |
|---------------------------|------------------------|---|--|
| | Post-build time | - | |
| Scope / Dependency | scope: local | | |

| |
|-------------------------------|
| No Included Containers |
|-------------------------------|

10.1.17 J1939RmComUser

| | | | |
|-----------------------------------------|--------------------------------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00067] | | |
| Container Name | J1939RmComUser | | |
| Parent Container | J1939RmUser | | |
| Description | J1939Rm User representing AUTOSAR COM. Supports requests for COM I-PDUs. | | |
| Post-Build Variant Multiplicity | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Configuration Parameters | | | |

| | | |
|--------------------------------|---------------------|-------------------------------------------------------------------------------------|
| Included Containers | | |
| Container Name | Multiplicity | Scope / Dependency |
| J1939RmComIPdu | 0..* | Contains the configuration of an I-PDU that is to be transmitted on request by COM. |

10.1.18 J1939RmComIPdu

| | | | |
|-----------------------------------------|-------------------------------------------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00032] | | |
| Container Name | J1939RmComIPdu | | |
| Parent Container | J1939RmComUser | | |
| Description | Contains the configuration of an I-PDU that is to be transmitted on request by COM. | | |
| Post-Build Variant Multiplicity | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Configuration Parameters | | | |

| | | | |
|-------------------------|--------------------------------------------------|--|--|
| SWS Item | [ECUC_J1939Rm_00081] | | |
| Parameter Name | J1939RmComIPduExtId1 | | |
| Parent Container | J1939RmComIPdu | | |
| Description | First extended identifier byte of the COM I-PDU. | | |
| Multiplicity | 0..1 | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 255 | | |
| Default value | - | | |





| | | | |
|-----------------------------------------|-------------------------|---|---------------------|
| Post-Build Variant Multiplicity | true | | |
| Post-Build Variant Value | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|---------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00082] | | |
| Parameter Name | J1939RmComIPduExtId2 | | |
| Parent Container | J1939RmComIPdu | | |
| Description | Second extended identifier byte of the COM I-PDU. | | |
| Multiplicity | 0..1 | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 255 | | |
| Default value | - | | |
| Post-Build Variant Multiplicity | true | | |
| Post-Build Variant Value | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Scope / Dependency | scope: local | | |

| | | | |
|-----------------------------------------|--------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00083] | | |
| Parameter Name | J1939RmComIPduExtId3 | | |
| Parent Container | J1939RmComIPdu | | |
| Description | Third extended identifier byte of the COM I-PDU. | | |
| Multiplicity | 0..1 | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 255 | | |
| Default value | - | | |
| Post-Build Variant Multiplicity | true | | |
| Post-Build Variant Value | true | | |
| Multiplicity Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|--------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00033] | | |
| Parameter Name | J1939RmComIPduPGN | | |
| Parent Container | J1939RmComIPdu | | |
| Description | PGN of the COM I-PDU. | | |
| Multiplicity | 1 | | |
| Type | EcucIntegerParamDef | | |
| Range | 0 .. 262143 | | |
| Default value | - | | |
| Post-Build Variant Value | true | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Scope / Dependency | scope: local | | |

| | | | |
|----------------------------------|-----------------------------------------------------|---|---------------------|
| SWS Item | [ECUC_J1939Rm_00065] | | |
| Parameter Name | J1939RmComIPduRef | | |
| Parent Container | J1939RmComIPdu | | |
| Description | Reference to the Pdu object representing the I-PDU. | | |
| Multiplicity | 1 | | |
| Type | Reference to Pdu | | |
| Post-Build Variant Value | false | | |
| Value Configuration Class | Pre-compile time | X | VARIANT-PRE-COMPILE |
| | Link time | X | VARIANT-LINK-TIME |
| | Post-build time | X | VARIANT-POST-BUILD |
| Scope / Dependency | scope: local | | |

| |
|-------------------------------|
| No Included Containers |
|-------------------------------|

10.2 Published Information

For details refer to the chapter 10.3 “Published Information” [4, SWS BSW General].

A History of Constraints and Specification Items

Please note that the lists in this chapter also include constraints and specification items that have been removed from the specification in a later version. These constraints and specification items do not appear as hyperlinks in the document.

A.1 Constraint and Specification Item History of this Document According to AUTOSAR Release R21-11

A.1.1 Added Traceables in R21-11

none

A.1.2 Changed Traceables in R21-11

[\[SWS_J1939Rm_00033\]](#) [\[SWS_J1939Rm_00118\]](#) [\[SWS_J1939Rm_00124\]](#) [\[SWS_J1939Rm_00127\]](#) [\[SWS_J1939Rm_00128\]](#) [\[SWS_J1939Rm_00129\]](#)

A.1.3 Deleted Traceables in R21-11

none

A.2 Constraint and Specification Item History of this Document According to AUTOSAR Release R22-11

A.2.1 Added Traceables in R22-11

[\[SWS_J1939Rm_NA\]](#)

A.2.2 Changed Traceables in R22-11

none

A.2.3 Deleted Traceables in R22-11

none

B Not Applicable Requirements

[SWS_J1939Rm_NA] [These requirements are not applicable to this specification.]
([SRS_J1939_00001](#), [SRS_J1939_00002](#), [SRS_J1939_00003](#), [SRS_J1939_00004](#),
[SRS_J1939_00006](#), [SRS_J1939_00010](#), [SRS_J1939_00011](#), [SRS_J1939_00018](#),
[SRS_J1939_00019](#), [SRS_J1939_00020](#), [SRS_J1939_00021](#), [SRS_J1939_00022](#),
[SRS_J1939_00023](#), [SRS_J1939_00024](#), [SRS_J1939_00025](#), [SRS_J1939_00027](#),
[SRS_J1939_00028](#), [SRS_J1939_00029](#), [SRS_J1939_00030](#), [SRS_J1939_00031](#),
[SRS_J1939_00032](#), [SRS_J1939_00033](#), [SRS_J1939_00034](#), [SRS_J1939_00035](#),
[SRS_J1939_00036](#), [SRS_J1939_00037](#), [SRS_J1939_00038](#), [SRS_J1939_00039](#),
[SRS_J1939_00040](#), [SRS_J1939_00041](#), [SRS_J1939_00042](#), [SRS_J1939_00043](#),
[SRS_J1939_00044](#), [SRS_J1939_00045](#), [SRS_J1939_00046](#), [SRS_J1939_00047](#),
[SRS_J1939_00048](#), [SRS_J1939_00051](#), [SRS_J1939_NA](#))