

Document Title	Specification of Time Synchronization over FlexRay
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	675

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R22-11

Document Change History Change History			
Date	Release	Changed by	Description
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Support for "Secured Time Synchronization" added • Minor content changes, clarifications
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Hysteresis added for sequence counter validation • Small enhancement to improve precision of Global Time • Bugfix for Time Validation
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Time Validation updated for Time Gateways • Post build variant value corrected for FrTSynGlobalTimeMasterHandleId and FrTSynGlobalTimeSlaveHandleId
2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Time Validation (draft) • Clarification regarding messages with stuck sequence counter • Clarification regarding cyclic operation entry after timebase startup • Clarification regarding transmission and reception of User Bytes • Changed Document Status from Final to published

2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Modifications to enhance the precision of Global Time Synchronization • Additional minor corrections / clarifications / editorial changes; For details please refer to the Change Documentation
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Offset message formats changed • Immediate Time Synchronization message transmission • Various enhancements and corrections
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Error code FRTSYN_E_INVALID_PDU_SDU_ID replaced by FRTSYN_E_INVALID_PDUID • FlexRay communication state handling simplified (Frlf_GetPOCStatus replaced by Frlf_GetState)
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Initial Release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Contents

1	Introduction and functional overview	7
2	Acronyms, Abbreviations, and Definitions	9
3	Related documentation	10
3.1	Input documents & related standards and norms	10
3.2	Related specification	10
4	Constraints and assumptions	11
4.1	Limitations	11
4.2	Applicability to car domains	11
5	Dependencies to other modules	12
5.1	File structure	14
5.1.1	Code file structure	14
5.1.2	Header file structure	14
6	Requirements Tracing	15
7	Functional specification	25
7.1	Overview	25
7.2	Module Handling	25
7.2.1	Initialization	25
7.2.2	FlexRay Interface	25
7.2.3	Error Handling	26
7.3	Message Format	26
7.3.1	SYNC message	27
7.3.2	OFS message	29
7.4	Acting as Time Master	31
7.4.1	SYNC message processing	32
7.4.2	OFS message processing	33
7.4.3	Transmission mode	34
7.4.4	Debounce Time	35
7.4.5	Immediate Time Synchronization	35
7.4.6	Calculation and Assembling of Time Synchronization Messages	36
7.4.6.1	Global Time Calculation	36
7.4.6.2	SGW Calculation	37
7.4.6.3	Sequence Counter Calculation	37
7.4.6.4	CRC Calculation	37
7.4.6.5	ICV Calculation	38
7.4.6.6	Message Assembling	40
7.5	Acting as Time Slave	40
7.5.1	SYNC message processing	41
7.5.2	OFS message processing	42

7.5.3	Validation and Disassembling of Time Synchronization Messages	43
7.5.3.1	Global Time Calculation	43
7.5.3.2	SGW Calculation	44
7.5.3.3	Sequence Counter Validation	44
7.5.3.4	CRC Validation	45
7.5.3.5	ICV Verification	45
7.5.3.6	Message Disassembling	48
7.6	Time Recording	48
7.6.1	Global Time Measurement Support	48
7.6.2	Time Validation	48
7.7	Security Events	50
7.8	Error Classification	51
7.8.1	Development Errors	51
7.8.2	Runtime Errors	52
7.8.3	Transient Faults	52
7.8.4	Production Errors	52
7.8.5	Extended Production Errors	52
8	API specification	53
8.1	API	53
8.1.1	Imported types	53
8.1.2	Type definitions	53
8.1.2.1	FrTSyn_ConfigType	53
8.1.2.2	FrTSyn_TransmissionModeType	54
8.1.3	Function definitions	54
8.1.3.1	FrTSyn_Init	54
8.1.3.2	FrTSyn_GetVersionInfo	55
8.1.3.3	FrTSyn_SetTransmissionMode	55
8.1.4	Call-back notifications	56
8.1.4.1	FrTSyn_RxIndication	56
8.1.4.2	FrTSyn_TriggerTransmit	57
8.1.4.3	FrTSyn_IcvGenerationIndication	58
8.1.4.4	FrTSyn_IcvVerificationIndication	58
8.1.5	Scheduled functions	59
8.1.5.1	FrTSyn_MainFunction	59
8.1.6	Expected Interfaces	59
8.1.6.1	Mandatory Interfaces	60
8.1.6.2	Optional Interfaces	60
9	Sequence diagrams	62
9.1	FlexRay Time Synchronization (Time Master)	62
9.2	FlexRay Time Synchronization (Time Slave)	63
9.3	FlexRay Secure Time Synchronization Sequence	64
10	Configuration specification	65
10.1	How to read this chapter	65

10.2	Containers and configuration parameters	65
10.2.1	Variants	65
10.2.2	FrTSyn	65
10.2.3	FrTSynGeneral	66
10.2.4	FrTSynSecurityEventRefs	70
10.2.5	FrTSynGlobalTimeDomain	71
10.2.6	FrTSynGlobalTimeSyncDataIDList	74
10.2.7	FrTSynGlobalTimeSyncDataIDListElement	76
10.2.8	FrTSynGlobalTimeOfsDataIDList	77
10.2.9	FrTSynGlobalTimeOfsDataIDListElement	78
10.2.10	FrTSynGlobalTimeMaster	79
10.2.11	FrTSynGlobalTimeMasterPdu	83
10.2.12	FrTSynGlobalTimeTxIcvGeneration	84
10.2.13	FrTSynGlobalTimeSlave	87
10.2.14	FrTSynGlobalTimeSlavePdu	92
10.2.15	FrTSynGlobalTimeRxIcvVerification	92
10.3	Constraints	96
10.4	Published Information	96
A	Not applicable requirements	97
B	History of Constraints and Specification Items	98
B.1	Constraint and Specification Item History of this document according to AUTOSAR Release 22-11	98
B.1.1	Added Traceables in R22-11	98
B.1.2	Changed Traceables in R22-11	98
B.1.3	Deleted Traceables in R22-11	99

1 Introduction and functional overview

The `FrTSyn` module handles the distribution of time information over FlexRay buses.

The FlexRay mechanism is much simpler than the mechanism for CAN since it is based on the fact, that FlexRay nodes are synchronized to each other, otherwise no messages can be transmitted on FlexRay.

Both, Time Master and Time Slaves have the same view on the FlexRay global time. It is therefore just necessary to define the same point in (FlexRay) time and to transmit the time information, which will be valid at that point in (FlexRay) time.

Although this same point in (FlexRay) time could be in theory any FlexRay macrotick within a FlexRay cycle, the start of a FlexRay cycle simplifies this mechanism. In addition, the mechanism does not just use any cycle start but uses the cycle start of the subsequent cycle with cycle counter value 0, i.e. the Time Master transmits time information located in the future.

On FlexRay only one Time Synchronization message is needed.

The Time Master uses its current FlexRay time, i.e. macrotick counter and cycle counter, and the current time, which shall be distributed and calculates the resulting time at the start of the next cycle 0. Once this resulting time has been calculated, it is neither very time critical, when exactly the FlexRay frame is transmitted, nor when it is received and processed.

Every Time Slave receiving the transmitted time information will use it in combination with the current FlexRay macrotick counter and cycle counter to determine the actual master time and set its slave time.

Figure 1.1 illustrates the Time Synchronization mechanism on FlexRay.

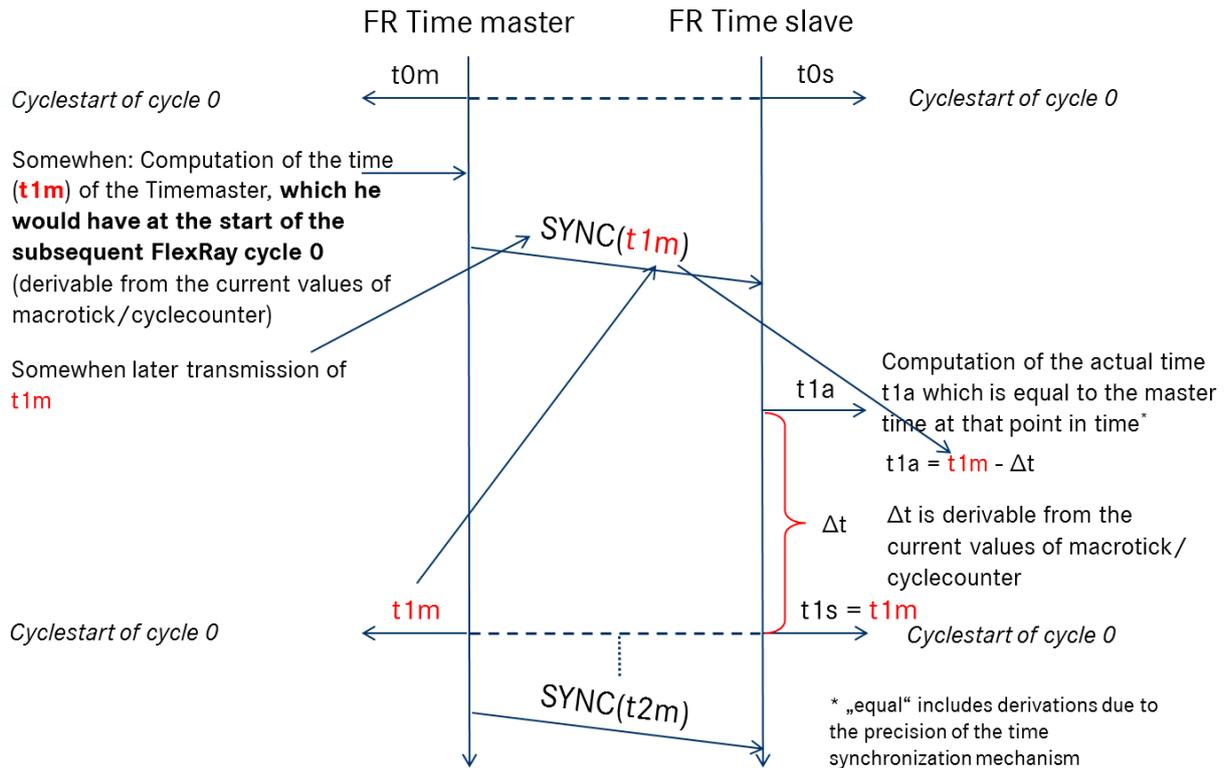


Figure 1.1: FlexRay Time Synchronization Mechanism

The `FrTSyn` also supports securing the global time messages on the FlexRay communication bus. The figure below shows the time provider modules interface with the security modules in the AUTOSAR Layered Architecture.

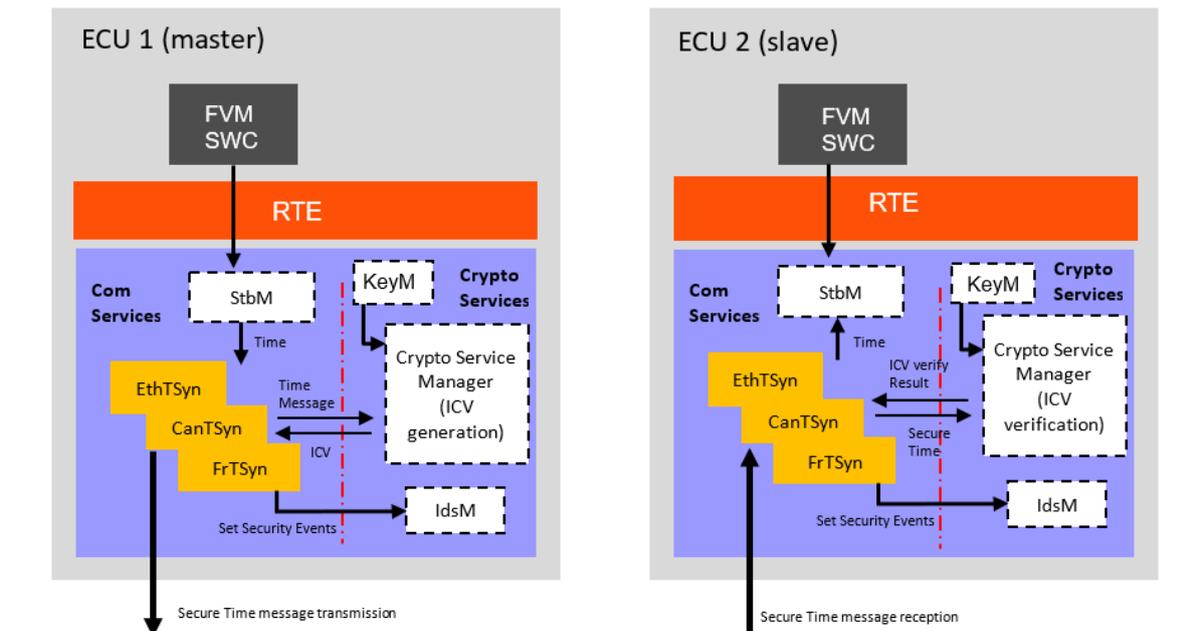


Figure 1.2: Timesync modules interface with security modules in the AUTOSAR Layered Architecture

2 Acronyms, Abbreviations, and Definitions

This section lists module local abbreviations and definitions. For additional Time Synchronization related abbreviations and definitions refer to chapter 3 in the RS Time Synchronization [1]. For general terms and abbreviations refer to the AUTOSAR Glossary [2].

Abbreviation	Description
GTM	Global Time Master
BswM	BSW Mode Manager module
<Bus>TSyn	Bus specific Time Synchronization module
CRC	Cyclic Redundancy Checksum
CSM	Crypto Service Manager
Debounce Time	Minimum gap between two Tx messages with the same PDU
Det	Default Error Tracer module
FCNT	FlexRay Cycle Counter
FR	FlexRay
FrIf	FlexRay interface module
FrTSyn	Time Synchronization over FlexRay module
FV	Freshness Value
FVL	Freshness Value Length
FVM	Freshness Value Manager
ICV	Integrity Check Value
ICVL	Integrity Check Value Length
IdsM	Intrusion Detection System Manager module
MAC	Message Authentication Code
OFS message	Offset Synchronization message
SC	Sequence Counter in Time Synchronization messages
SGW	"Synchronized to Gateway" state of Time Synchronization
StbM	Synchronized Time-Base Manager
SYNC message	Time Synchronization message
Timesync	Time Synchronization

3 Related documentation

3.1 Input documents & related standards and norms

- [1] Requirements on Time Synchronization
AUTOSAR_RS_TimeSync
- [2] Glossary
AUTOSAR_TR_Glossary
- [3] General Specification of Basic Software Modules
AUTOSAR_SWS_BSWGeneral
- [4] General Requirements on Basic Software Modules
AUTOSAR_SRS_BSWGeneral
- [5] Specification of Synchronized Time-Base Manager
AUTOSAR_SWS_SynchronizedTimeBaseManager
- [6] Specification of CRC Routines
AUTOSAR_SWS_CRCLibrary
- [7] Specification of Crypto Service Manager
AUTOSAR_SWS_CryptoServiceManager
- [8] Specification of Intrusion Detection System Manager
AUTOSAR_SWS_IntrusionDetectionSystemManager

3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [3, SWS BSW General], which is also valid for [FrTSyn](#).

Thus, the specification SWS BSW General shall be considered as additional and required specification for [FrTSyn](#).

4 Constraints and assumptions

4.1 Limitations

1. Time Masters, Time Gateways and Time Slaves shall work with a Time Base reference clock with a worst-case accuracy of $2\mu\text{s}$.
2. The Time Base in the OFS messages is limited to 32 bit, wherefore the maximum supported time value is 4294967295 seconds ($2^{32}-1$).
3. "CRC secured" in the context of this document refers to [CRC](#) integrity protection mechanism and does not imply that [CRC](#) is used as a cybersecurity solution.

4.2 Applicability to car domains

Automotive systems requiring a common Time Base for ECUs regardless of which bus system the ECUs are connected to.

5 Dependencies to other modules

The Time Synchronization over FlexRay ([FrTSyn](#)) has interfaces towards the Synchronized Time-Base Manager ([StbM](#)), the FlexRay Interface ([FrIf](#)), the BSW Mode Manager ([BswM](#)), the Default Error Tracer ([Det](#)), the Crypto Service Manager ([CSM](#)), and the Intrusion Detection System Manager ([IdsM](#)).

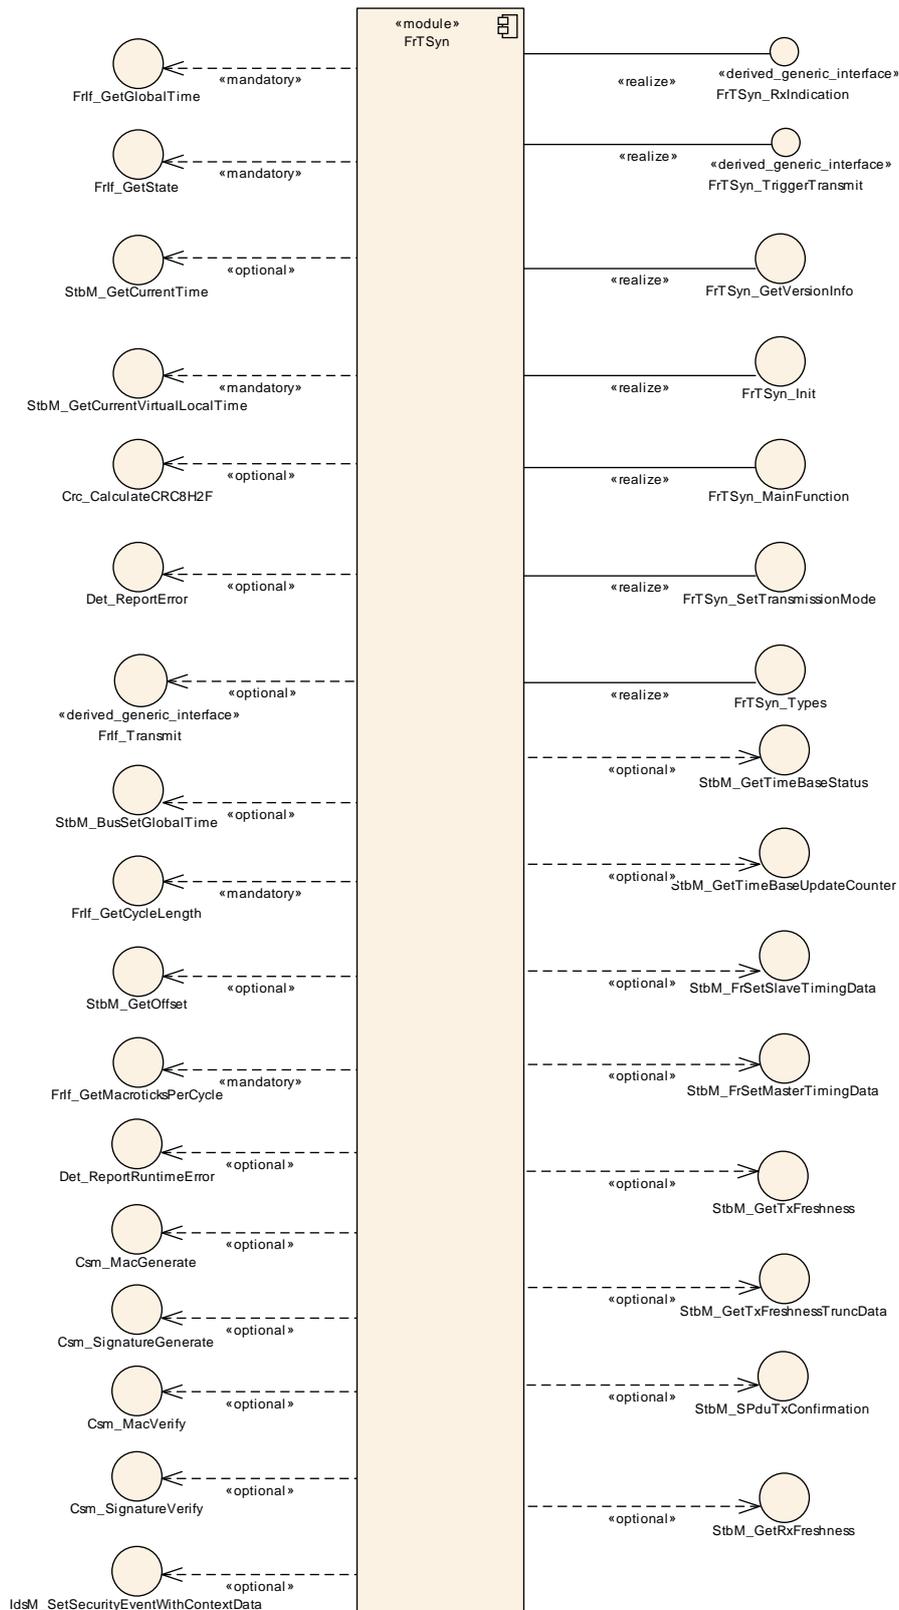


Figure 5.1: Module dependencies of the FrTSyn module

- [StbM](#) -

- Get and set the current time value
- Get **FV** from **FVM**
- **FrIf** - Receiving and transmitting messages
- **BswM** - Coordination of network access (via **FrTSyn_SetTransmissionMode**)
- **Det** - Reporting of development errors
- **IdsM** - Reporting of Security Events
- **CSM** -
 - Generation of **ICV** for Time Master
 - Verification of **ICV** for Time Slave

5.1 File structure

5.1.1 Code file structure

For details, refer to the section 5.1.6 "Code file structure" of the SWS BSW General [3].

5.1.2 Header file structure

For details, refer to the section 5.1.7 "Header file structure" of the SWS BSW General [3].

6 Requirements Tracing

The following tables reference the requirements specified in [1, RS TimeSync] and [4, SRS BSWGeneral] and links to the fulfillment of these. Please note that if column “Satisfied by” is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[RS_Ids_00810]	Basic SW security events	[SWS_FrTSyn_00103] [SWS_FrTSyn_00104] [SWS_FrTSyn_00105]
[RS_TS_00002]	The Implementation of Time Synchronization shall maintain its own Time Base independently of the acting role.	[SWS_FrTSyn_NA_00999]
[RS_TS_00003]	The TS shall initialize the Local Time Base with a configurable startup value	[SWS_FrTSyn_00003]
[RS_TS_00004]	The Implementation of Time Synchronization shall initialize the Global Time Base with a configurable startup value.	[SWS_FrTSyn_00003]
[RS_TS_00005]	The Implementation of Time Synchronization shall allow customers to have access to the Synchronized Time Base	[SWS_FrTSyn_NA_00999]
[RS_TS_00006]	The Implementation of Time Synchronization shall provide time information to TSP modules	[SWS_FrTSyn_NA_00999]
[RS_TS_00007]	The Implementation of Time Synchronization shall synchronize the Time Base of a Time Slave, on reception of a Time Master value	[SWS_FrTSyn_NA_00999]
[RS_TS_00008]	The Implementation of Time Synchronization shall continuously maintain its Time Bases based on a Time Base reference clock	[SWS_FrTSyn_NA_00999]
[RS_TS_00009]	The Implementation of Time Synchronization shall maintain the synchronization status of a Time Base	[SWS_FrTSyn_NA_00999]
[RS_TS_00010]	The Implementation of Time Synchronization shall allow customer on master side to set the Global Time	[SWS_FrTSyn_NA_00999]
[RS_TS_00011]	The Implementation of Time Synchronization shall allow customers on master side to trigger time transmission by the TSP module	[SWS_FrTSyn_NA_00999]

Requirement	Description	Satisfied by
[RS_TS_00012]	The Implementation of Time Synchronization shall allow customers and TSP modules to read the offset value of an Offset Time Base	[SWS_FrTSyn_NA_00999]
[RS_TS_00013]	The Implementation of Time Synchronization shall allow the customers and TSP modules to set the offset value of an Offset Master Time Base	[SWS_FrTSyn_NA_00999]
[RS_TS_00014]	The Implementation of Time Synchronization shall allow customers to read User Data propagated via the TSP modules.	[SWS_FrTSyn_NA_00999]
[RS_TS_00015]	The Implementation of Time Synchronization shall allow customers to set User Data propagated via the TSP modules.	[SWS_FrTSyn_NA_00999]
[RS_TS_00016]	The Implementation of Time Synchronization shall notify customers about status events	[SWS_FrTSyn_NA_00999]
[RS_TS_00017]	The Implementation of Time Synchronization shall notify customers about elapsed pre-defined time span.	[SWS_FrTSyn_NA_00999]
[RS_TS_00018]	The Implementation of Time Synchronization shall support rate correction	[SWS_FrTSyn_NA_00999]
[RS_TS_00019]	The Implementation of Time Synchronization shall support damping offset correction	[SWS_FrTSyn_NA_00999]
[RS_TS_00021]	The Implementation of Time Synchronization shall provide interfaces to query the synchronization status	[SWS_FrTSyn_NA_00999]
[RS_TS_00024]	The Implementation of Time Synchronization shall support storage of the Time Base value at shutdown if configured as Time Master	[SWS_FrTSyn_NA_00999]
[RS_TS_00025]	The Implementation of Time Synchronization shall provide fault detection mechanisms	[SWS_FrTSyn_NA_00999]
[RS_TS_00026]	The Implementation of Time Synchronization shall provide to the customers a specific API per type of Time Base Resource	[SWS_FrTSyn_NA_00999]
[RS_TS_00027]	The TS shall provide a bus independent customer interface	[SWS_FrTSyn_NA_00999]

Requirement	Description	Satisfied by
[RS_TS_00029]	The configuration of the Time Synchronization implementation shall allow the implementation to behave as a (vehicle wide) Time Master	[SWS_FrTSyn_NA_00999]
[RS_TS_00030]	The configuration of the Time Synchronization implementation shall allow the implementation to behave as a Time Slave	[SWS_FrTSyn_NA_00999]
[RS_TS_00031]	The configuration of the Time Synchronization implementation shall allow the implementation to behave as a Time Gateway	[SWS_FrTSyn_NA_00999]
[RS_TS_00032]	The Implementation of Time Synchronization shall trigger registered customers	[SWS_FrTSyn_NA_00999]
[RS_TS_00033]	The Implementation of Time Synchronization shall use a time format with a resolution of 1 ns	[SWS_FrTSyn_NA_00999]
[RS_TS_00034]	The Implementation of Time Synchronization shall provide measurement data to the application	[SWS_FrTSyn_00092] [SWS_FrTSyn_00096] [SWS_FrTSyn_00097] [SWS_FrTSyn_00098] [SWS_FrTSyn_00099] [SWS_FrTSyn_00100] [SWS_FrTSyn_00101]
[RS_TS_00035]	The Implementation of Time Synchronization shall provide a system service interface to applications	[SWS_FrTSyn_NA_00999]
[RS_TS_00036]	The Implementation of Time Synchronization shall provide a bus independent customer interface	[SWS_FrTSyn_NA_00999]
[RS_TS_00037]	The configuration of the Time Synchronization implementation shall allow the interaction with different types of customers	[SWS_FrTSyn_NA_00999]
[RS_TS_00038]	The Implementation of Time Synchronization shall copy Time Base information upon user request	[SWS_FrTSyn_NA_00999]
[RS_TS_00039]	The implementation of Time Synchronization shall provide Freshness Value (FV) to TSP modules required to secure the time information	[SWS_FrTSyn_NA_00999]
[RS_TS_20031]	The Timesync over CAN module shall trigger Time Base Synchronization transmission	[SWS_FrTSyn_NA_00999]
[RS_TS_20032]	The Timesync over CAN module shall provide the Time Base after reception of a valid Timesync/TS messages	[SWS_FrTSyn_NA_00999]

Requirement	Description	Satisfied by
[RS_TS_20033]	The Timesync over CAN module shall support means to protect the Time synchronization protocol	[SWS_FrTSyn_NA_00999]
[RS_TS_20034]	The Timesync over CAN module shall detect and handle timeout and integrity errors in the Time Synchronization protocol	[SWS_FrTSyn_NA_00999]
[RS_TS_20035]	The Timesync over CAN module shall support a protocol for precise time measurement and synchronization over CAN	[SWS_FrTSyn_NA_00999]
[RS_TS_20036]	The Timesync over CAN module shall use the time measurement and synchronization protocol to transmit and receive an offset value	[SWS_FrTSyn_NA_00999]
[RS_TS_20037]	The Timesync over CAN module shall support user specific data within the time measurement and synchronization protocol	[SWS_FrTSyn_NA_00999]
[RS_TS_20038]	The Timesync over CAN module configuration shall allow the Implementation of Time Synchronization for CAN to support different roles for a Time Base	[SWS_FrTSyn_NA_00999]
[RS_TS_20039]	The Timesync over FlexRay module shall trigger Time Base Synchronization transmission	[SWS_FrTSyn_00019] [SWS_FrTSyn_00023] [SWS_FrTSyn_00026] [SWS_FrTSyn_00027] [SWS_FrTSyn_00084] [SWS_FrTSyn_00085] [SWS_FrTSyn_00086] [SWS_FrTSyn_00087] [SWS_FrTSyn_00088] [SWS_FrTSyn_00089] [SWS_FrTSyn_00090] [SWS_FrTSyn_00091] [SWS_FrTSyn_00093]
[RS_TS_20040]	The Timesync over FlexRay module shall provide a Time Base after reception of a valid protocol information	[SWS_FrTSyn_00041] [SWS_FrTSyn_00045] [SWS_FrTSyn_00078] [SWS_FrTSyn_00094]

Requirement	Description	Satisfied by
[RS_TS_20041]	The Timesync over FlexRay module shall support means to protect the Time Synchronization protocol	[SWS_FrTSyn_00006] [SWS_FrTSyn_00014] [SWS_FrTSyn_00015] [SWS_FrTSyn_00021] [SWS_FrTSyn_00025] [SWS_FrTSyn_00030] [SWS_FrTSyn_00031] [SWS_FrTSyn_00035] [SWS_FrTSyn_00036] [SWS_FrTSyn_00078] [SWS_FrTSyn_00079] [SWS_FrTSyn_00080] [SWS_FrTSyn_00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00108] [SWS_FrTSyn_00109] [SWS_FrTSyn_00112] [SWS_FrTSyn_00113]
[RS_TS_20042]	The Timesync over FlexRay module shall detect and handle timeout and integrity errors in the Time Synchronization protocol	[SWS_FrTSyn_00015] [SWS_FrTSyn_00038] [SWS_FrTSyn_00041] [SWS_FrTSyn_00042] [SWS_FrTSyn_00045] [SWS_FrTSyn_00048] [SWS_FrTSyn_00049] [SWS_FrTSyn_00050] [SWS_FrTSyn_00054] [SWS_FrTSyn_00055] [SWS_FrTSyn_00057] [SWS_FrTSyn_00058] [SWS_FrTSyn_00080] [SWS_FrTSyn_00081] [SWS_FrTSyn_00082] [SWS_FrTSyn_00094] [SWS_FrTSyn_00102] [SWS_FrTSyn_00107] [SWS_FrTSyn_00109] [SWS_FrTSyn_00150]

Requirement	Description	Satisfied by
[RS_TS_20043]	The Timesync over FlexRay module shall support a protocol for precise time measurement and synchronization over Flex Ray	[SWS_FrTSyn_00007] [SWS_FrTSyn_00009] [SWS_FrTSyn_00010] [SWS_FrTSyn_00014] [SWS_FrTSyn_00015] [SWS_FrTSyn_00018] [SWS_FrTSyn_00019] [SWS_FrTSyn_00020] [SWS_FrTSyn_00021] [SWS_FrTSyn_00026] [SWS_FrTSyn_00027] [SWS_FrTSyn_00028] [SWS_FrTSyn_00030] [SWS_FrTSyn_00031] [SWS_FrTSyn_00035] [SWS_FrTSyn_00036] [SWS_FrTSyn_00037] [SWS_FrTSyn_00038] [SWS_FrTSyn_00039] [SWS_FrTSyn_00040] [SWS_FrTSyn_00041] [SWS_FrTSyn_00046] [SWS_FrTSyn_00048] [SWS_FrTSyn_00049] [SWS_FrTSyn_00050] [SWS_FrTSyn_00054] [SWS_FrTSyn_00055] [SWS_FrTSyn_00056] [SWS_FrTSyn_00057] [SWS_FrTSyn_00060] [SWS_FrTSyn_00061] [SWS_FrTSyn_00062] [SWS_FrTSyn_00063] [SWS_FrTSyn_00064] [SWS_FrTSyn_00065] [SWS_FrTSyn_00066] [SWS_FrTSyn_00069] [SWS_FrTSyn_00071] [SWS_FrTSyn_00072] [SWS_FrTSyn_00074] [SWS_FrTSyn_00075] [SWS_FrTSyn_00081] [SWS_FrTSyn_00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00112] [SWS_FrTSyn_00136] [SWS_FrTSyn_00150]

Requirement	Description	Satisfied by
[RS_TS_20044]	The Timesync over FlexRay module shall use the time measurement and synchronization protocol to transmit and receive an offset value	[SWS_FrTSyn_00007] [SWS_FrTSyn_00009] [SWS_FrTSyn_00010] [SWS_FrTSyn_00020] [SWS_FrTSyn_00022] [SWS_FrTSyn_00023] [SWS_FrTSyn_00025] [SWS_FrTSyn_00026] [SWS_FrTSyn_00027] [SWS_FrTSyn_00029] [SWS_FrTSyn_00030] [SWS_FrTSyn_00031] [SWS_FrTSyn_00035] [SWS_FrTSyn_00036] [SWS_FrTSyn_00037] [SWS_FrTSyn_00042] [SWS_FrTSyn_00043] [SWS_FrTSyn_00044] [SWS_FrTSyn_00045] [SWS_FrTSyn_00047] [SWS_FrTSyn_00048] [SWS_FrTSyn_00049] [SWS_FrTSyn_00050] [SWS_FrTSyn_00054] [SWS_FrTSyn_00055] [SWS_FrTSyn_00056] [SWS_FrTSyn_00057] [SWS_FrTSyn_00079] [SWS_FrTSyn_00080] [SWS_FrTSyn_00082] [SWS_FrTSyn_00108] [SWS_FrTSyn_00109] [SWS_FrTSyn_00113] [SWS_FrTSyn_00136] [SWS_FrTSyn_00150]
[RS_TS_20045]	The Timesync over FlexRay module shall support user specific data within the time measurement and synchronization protocol	[SWS_FrTSyn_00010] [SWS_FrTSyn_00011] [SWS_FrTSyn_00012] [SWS_FrTSyn_00013]
[RS_TS_20046]	The configuration for Time synchronization over FlexRay shall allow the FlexRay Time Synchronization module to support different roles for a Time Base	[SWS_FrTSyn_00077]
[RS_TS_20047]	The Timesync over Ethernet module shall trigger Time Base Synchronization transmission	[SWS_FrTSyn_NA_00999]
[RS_TS_20048]	The Timesync over Ethernet module shall support IEEE 802.1AS as well as AUTOSAR extensions	[SWS_FrTSyn_NA_00999]

Requirement	Description	Satisfied by
[RS_TS_20051]	The Timesync over Ethernet module shall detect and handle errors in synchronization protocol / communication	[SWS_FrTSyn_NA_00999]
[RS_TS_20052]	The configuration of the Time Synchronization over Ethernet module shall allow the module to work as a Time Master	[SWS_FrTSyn_NA_00999]
[RS_TS_20053]	The configuration of the Time Synchronization over Ethernet module shall allow the module to work as a Time Slave	[SWS_FrTSyn_NA_00999]
[RS_TS_20054]	The Implementation of the Time Synchronization shall evaluate and propagate Time Gateway relevant information	[SWS_FrTSyn_NA_00999]
[RS_TS_20058]	The Timesync over Ethernet module shall provide the precision of Synchronized Time Bases	[SWS_FrTSyn_NA_00999]
[RS_TS_20059]	The Timesync over Ethernet module shall access all communication ports belonging to Time Synchronization	[SWS_FrTSyn_NA_00999]
[RS_TS_20060]	The Timesync over Ethernet module shall provide a Time Base after reception of a valid protocol information	[SWS_FrTSyn_NA_00999]
[RS_TS_20061]	The Timesync over Ethernet module shall support means to protect the Time Synchronization protocol	[SWS_FrTSyn_NA_00999]
[RS_TS_20062]	The Timesync over Ethernet module shall support user specific data within the time measurement and synchronization protocol	[SWS_FrTSyn_NA_00999]
[RS_TS_20063]	The Timesync over Ethernet module shall use the Time Synchronization protocol for Synchronized Time Bases to transmit and receive Offset Time Bases	[SWS_FrTSyn_NA_00999]
[RS_TS_20066]	The Timesync over Ethernet module shall support a static (pre)configuration of IEEE 802.1AS Pdelay	[SWS_FrTSyn_NA_00999]
[RS_TS_20068]	The Timesync over CAN module shall support classic CAN and CAN FD	[SWS_FrTSyn_NA_00999]
[RS_TS_20069]	The TimeSync over Ethernet module shall provide read / write access to bus protocol specific parameters	[SWS_FrTSyn_NA_00999]

Requirement	Description	Satisfied by
[RS_TS_20070]	The Timesync over CAN module shall support hardware and software timestamping	[SWS_FrTSyn_NA_00999]
[RS_TS_20074]	The Timesync over FlexRay module shall support means to secure the Time Synchronization protocol	[SWS_FrTSyn_00009] [SWS_FrTSyn_00037] [SWS_FrTSyn_00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00108] [SWS_FrTSyn_00109] [SWS_FrTSyn_00110] [SWS_FrTSyn_00111] [SWS_FrTSyn_00112] [SWS_FrTSyn_00113] [SWS_FrTSyn_00114] [SWS_FrTSyn_00115] [SWS_FrTSyn_00116] [SWS_FrTSyn_00117] [SWS_FrTSyn_00118] [SWS_FrTSyn_00119] [SWS_FrTSyn_00120] [SWS_FrTSyn_00121] [SWS_FrTSyn_00122] [SWS_FrTSyn_00123] [SWS_FrTSyn_00124] [SWS_FrTSyn_00125] [SWS_FrTSyn_00126] [SWS_FrTSyn_00127] [SWS_FrTSyn_00128] [SWS_FrTSyn_00129] [SWS_FrTSyn_00130] [SWS_FrTSyn_00131] [SWS_FrTSyn_00132] [SWS_FrTSyn_00133] [SWS_FrTSyn_00134] [SWS_FrTSyn_00135] [SWS_FrTSyn_00136] [SWS_FrTSyn_00137] [SWS_FrTSyn_00138] [SWS_FrTSyn_00139] [SWS_FrTSyn_00140] [SWS_FrTSyn_00141] [SWS_FrTSyn_00142] [SWS_FrTSyn_00143] [SWS_FrTSyn_00144] [SWS_FrTSyn_00145] [SWS_FrTSyn_00146] [SWS_FrTSyn_00147] [SWS_FrTSyn_00148] [SWS_FrTSyn_00149] [SWS_FrTSyn_91001] [SWS_FrTSyn_91002] [SWS_FrTSyn_CONSTR_00001]

Requirement	Description	Satisfied by
[SRS_BSW_00323]	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	[SWS_FrTSyn_00058] [SWS_FrTSyn_00067] [SWS_FrTSyn_00070] [SWS_FrTSyn_00095] [SWS_FrTSyn_00151] [SWS_FrTSyn_00152]
[SRS_BSW_00337]	Classification of development errors	[SWS_FrTSyn_00067] [SWS_FrTSyn_00070] [SWS_FrTSyn_00095] [SWS_FrTSyn_00151] [SWS_FrTSyn_00152]
[SRS_BSW_00385]	List possible error notifications	[SWS_FrTSyn_00059] [SWS_FrTSyn_91000]

7 Functional specification

This chapter defines the behavior of the Time Synchronization over FlexRay. The API of the module is defined in chapter 8, while the configuration is defined in chapter 10.

7.1 Overview

The Time Synchronization over FlexRay is responsible to ensure the collection and distribution of Synchronized Time information across the FlexRay network. It interacts with the `StbM` and provides all FlexRay specific functions to the `StbM`.

Time Synchronization principles and common wording is described in [5] and [1].

7.2 Module Handling

This section contains description of auxiliary functionality of the Time Synchronization over FlexRay.

7.2.1 Initialization

The Time Synchronization over FlexRay is initialized via `FrTSyn_Init`. Except for `FrTSyn_GetVersionInfo` and `FrTSyn_Init`, the API functions of the Time Synchronization over FlexRay may only be called when the module has been properly initialized.

[SWS_FrTSyn_00003] [A call to `FrTSyn_Init` initializes all internal variables and sets the Time Synchronization over FlexRay to the initialized state.]([RS_TS_00003](#), [RS_TS_00004](#))

[SWS_FrTSyn_00006] [The Sequence Counter (`sc`) shall be initialized with 0.]([RS_TS_20041](#))

7.2.2 FlexRay Interface

[SWS_FrTSyn_00078] [The `FrTSyn` module shall call `FrIf_GetGlobalTime` only if `FrIf_GetState` returns `FRIF_STATE_ONLINE`. This is to ensure that `FrIf_GetGlobalTime` returns valid time information, i.e. that the FlexRay communication controller is synchronous to the FlexRay global time.]([RS_TS_20040](#), [RS_TS_20041](#))

7.2.3 Error Handling

[SWS_FrTSyn_00058] [On errors and exceptions, the `FrTSyn` module shall not modify its current module state but shall simply report the error event.] ([RS_TS_20042](#), [SRS_BSW_00323](#))

7.3 Message Format

SYNC and OFS messages may share the same `FR` PDU by using a multiplexed signal group. The multiplexer is located in byte 0, named `Type`.

For different Time Domains the same `FR` PDU may be used if Time Synchronization messages are sent by the same Time Master or Time Gateway.

For different Time Domains different `FR` PDUs shall be used if Time Synchronization messages are sent by different Time Masters or Time Gateways.

The usage of `CRC` is optional. To ensure a great variability between several time observing units, the configuration decides of how to handle `CRC` secured time synchronization messages if the receiver does not support the `CRC` calculation. Hence it might be possible, that a receiver is just using the given Time Base value, without evaluating the `CRC`.

SYNC and OFS messages can be `ICV` secured. This provides the integrity and authenticity protection of these messages.

The usage of a `ICV` is optional. To ensure a great variability between several time observing units, the configuration decides on how to handle `ICV` secured Time Synchronization messages if the receiver does not support the `ICV` calculation. Hence it might be possible, that a receiver is just using the given Time Base value without evaluating the `ICV`.

[SWS_FrTSyn_00007] [The byte order for time values inside Time Synchronization messages is "Big Endian".] ([RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00009] [If the message type is 0x10, 0x20, 0x34 or 0x44 (not `ICV` secured `SYNC` and `OFS` messages), the `PayloadLength` shall be 16.] ([RS_TS_20043](#), [RS_TS_20044](#), [RS_TS_20074](#))

The length of `ICV` secured messages depends on the length of the variable `FV` and `ICV` fields.

[SWS_FrTSyn_00136]{DRAFT} [If the message type is 0x50, 0x60, 0x74 or 0x84 (`ICV` secured `SYNC` and `OFS` messages), the `PayloadLength` shall be 18 .. 254, depending on the configured `FV` length (`StbMFreshnessValueLength`) and the `ICV` length (`FrTSynIcvTxLength`).] ([RS_TS_20043](#), [RS_TS_20044](#), [RS_TS_20074](#))

[SWS_FrTSyn_00110]{DRAFT} [For [SYNC](#) or [OFS](#) messages, if the [FVL](#) field is 0, there shall be no [FV](#) field, i.e., the [ICV](#) field shall follow immediately, starting with byte 18.]([RS_TS_20074](#))

[SWS_FrTSyn_00111]{DRAFT} [For [SYNC](#) or [OFS](#) messages, if the [ICVL](#) field is 0, there shall be no [ICV](#) field, i.e., the [SYNC](#) message shall end with byte 17.]([RS_TS_20074](#))

[SWS_FrTSyn_00010] [Time Synchronization messages contain User Data according to the given message format.]([RS_TS_20043](#), [RS_TS_20044](#), [RS_TS_20045](#))

[SWS_FrTSyn_00011] [User Data shall be read consistently from the incoming Time Synchronization messages.]([RS_TS_20045](#))

[SWS_FrTSyn_00012] [User Data shall be written consistently to outgoing Time Synchronization messages.

If the number of User Data Fields in a Time Synchronization message is greater than the number of User Data Bytes provided by the StbM, the remaining User Data Fields shall be set to 0 (default value).]([RS_TS_20045](#))

[SWS_FrTSyn_00013] [User Data shall be mapped to the `StbM_UserDataType`, where the byte number given in the message and by the `StbM_UserDataType` shall match (User Byte 0 mapped to `StbM_UserDataType.userByte0` etc.). `StbM_UserDataType.userDataLength` shall be set to the Time Synchronization message type specific number of User Bytes.]([RS_TS_20045](#))

7.3.1 SYNC message

The message layout of the SYNC messages is defined by the following requirements:

- **[SWS_FrTSyn_00014]**: SYNC message - not CRC secured, not ICV secured
- **[SWS_FrTSyn_00015]**: SYNC message - CRC secured, not ICV secured
- **[SWS_FrTSyn_00106]**: SYNC message - not CRC secured, ICV secured
- **[SWS_FrTSyn_00107]**: SYNC message - CRC secured, ICV secured

depending on whether the payload is [CRC](#) secured and/or [ICV](#) secured or not.

[SWS_FrTSyn_00014] SYNC message format - not CRC secured, not ICV secured

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x10	Message Type
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	FCNT	0..63	FlexRay Cycle Counter
	1	SGW	0 = SyncToGTM	

	0	reserved	1 = SyncToSubDomain 0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6..11		SyncTimeSec		48 bit time value in seconds
12..15		SyncTimeNSec		32 bit time value in nanoseconds

](RS_TS_20041, RS_TS_20043)

[SWS_FrTSyn_00015] SYNC message format - CRC secured, not ICV secured [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x20	Message Type
1		CRC	0..255	Checksum
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	FCNT	0..63	FlexRay Cycle Counter
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6..11		SyncTimeSec		48 bit time value in seconds
12..15		SyncTimeNSec		32 bit time value in nanoseconds

](RS_TS_20041, RS_TS_20042, RS_TS_20043)

[SWS_FrTSyn_00106]{DRAFT} SYNC message format - not CRC secured, ICV secured [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x50	Message Type
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	FCNT	0..63	FlexRay Cycle Counter
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6..11		SyncTimeSec		48 bit time value in seconds
12..15		SyncTimeNSec		32 bit time value in nanoseconds
16	7	reserved	0	
	6..0	FVL	0..64	FV Length in bits
17		ICVL	0..236	ICV Length in bytes
		FV		FV
18		ICV		ICV
18+FVL in bytes				

|(RS_TS_20041, RS_TS_20043, RS_TS_20074)

[SWS_FrTSyn_00107]{DRAFT} SYNC message format - CRC secured, ICV secured

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x60	Message Type
1		CRC	0..255	Checksum
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	FCNT	0..63	FlexRay Cycle Counter
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6..11		SyncTimeSec		48 bit time value in seconds
12..15		SyncTimeNSec		32 bit time value in nanoseconds
16	7	reserved	0	
	6..0	FVL	0..64	FV Length in bits
17		ICV L	0..236	ICV Length in bytes
18		FV		FV
18+FVL in bytes		ICV		ICV

|(RS_TS_20041, RS_TS_20042, RS_TS_20043, RS_TS_20074)

7.3.2 OFS message

The message layout of the OFS messages is defined by the following requirements:

- [SWS_FrTSyn_00079]: OFS message - not CRC secured, not ICV secured
- [SWS_FrTSyn_00080]: OFS message - CRC secured, not ICV secured
- [SWS_FrTSyn_00108]: OFS message - not CRC secured, ICV secured
- [SWS_FrTSyn_00109]: OFS message - CRC secured, ICV secured

depending on whether the payload is CRC secured and/or ICV secured or not

[SWS_FrTSyn_00079] OFS message format - not CRC secured, not ICV secured

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x34	Message Type
1		User Byte 2	default: 0	
2	7..4	D	16..31	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	reserved	0	
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	

	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	0	
7		reserved	0	
8..11		OfsTimeSec		32 bit offset time value in seconds
12..15		OfsTimeNSec		32 bit offset time value in nanoseconds

]([RS_TS_20041](#), [RS_TS_20044](#))

[SWS_FrTSyn_00080] OFS message format - CRC secured, not ICV secured [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x44	Message Type
1		CRC	0..255	Checksum
2	7..4	D	16..31	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	reserved	0	
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	0	
7		reserved	0	
8..11		OfsTimeSec		32 bit offset time value in seconds
12..15		OfsTimeNSec		32 bit offset time value in nanoseconds

]([RS_TS_20041](#), [RS_TS_20042](#), [RS_TS_20044](#))

[SWS_FrTSyn_00108]{DRAFT} OFS message format - not CRC secured, ICV secured [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x74	Message Type
1		User Byte 2	default: 0	
2	7..4	D	16..31	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	reserved	0	
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	0	
7		reserved	0	
8..11		OfsTimeSec		32 bit offset time value in seconds
12..15		OfsTimeNSec		32 bit offset time value in nanoseconds
16	7	reserved	0	
	6..0	FVL	0..64	FV Length in bits
17		ICVL	0..236	ICV Length in bytes

18		FV		FV
18+FVL in bytes		ICV		ICV

|(RS_TS_20041, RS_TS_20044, RS_TS_20074)

[SWS_FrTSyn_00109]{DRAFT} OFS message format - CRC secured, ICV secured

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x84	Message Type
1		CRC	0..255	Checksum
2	7..4	D	16..31	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	reserved	0	
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	0	
7		reserved	0	
8..11		OfsTimeSec		32 bit offset time value in seconds
12..15		OfsTimeNSec		32 bit offset time value in nanoseconds
16	7	reserved	0	
	6..0	FVL	0..64	FV Length in bits
17		ICVL	0..236	ICV Length in bytes
18		FV		FV
18+FVL in bytes		ICV		ICV

|(RS_TS_20041, RS_TS_20042, RS_TS_20044, RS_TS_20074)

7.4 Acting as Time Master

A Time Master is an entity which is the master for a certain Time Base and which propagates this Time Base to a set of Time Slaves within a certain segment of a communication network, being a source for this Time Base.

If a Time Master is also the owner of the Global Time Base, the Time Base from which all further Time Bases are derived from, then it is the Global Time Master. A Time Gateway typically consists of one Time Master port which is connected to one or more Time Slaves. When mapping time entities to real ECUs it has to be noted, that an ECU could be Time Master (or even Global Time Master) for one Time Base and Time Slave for another Time Base.

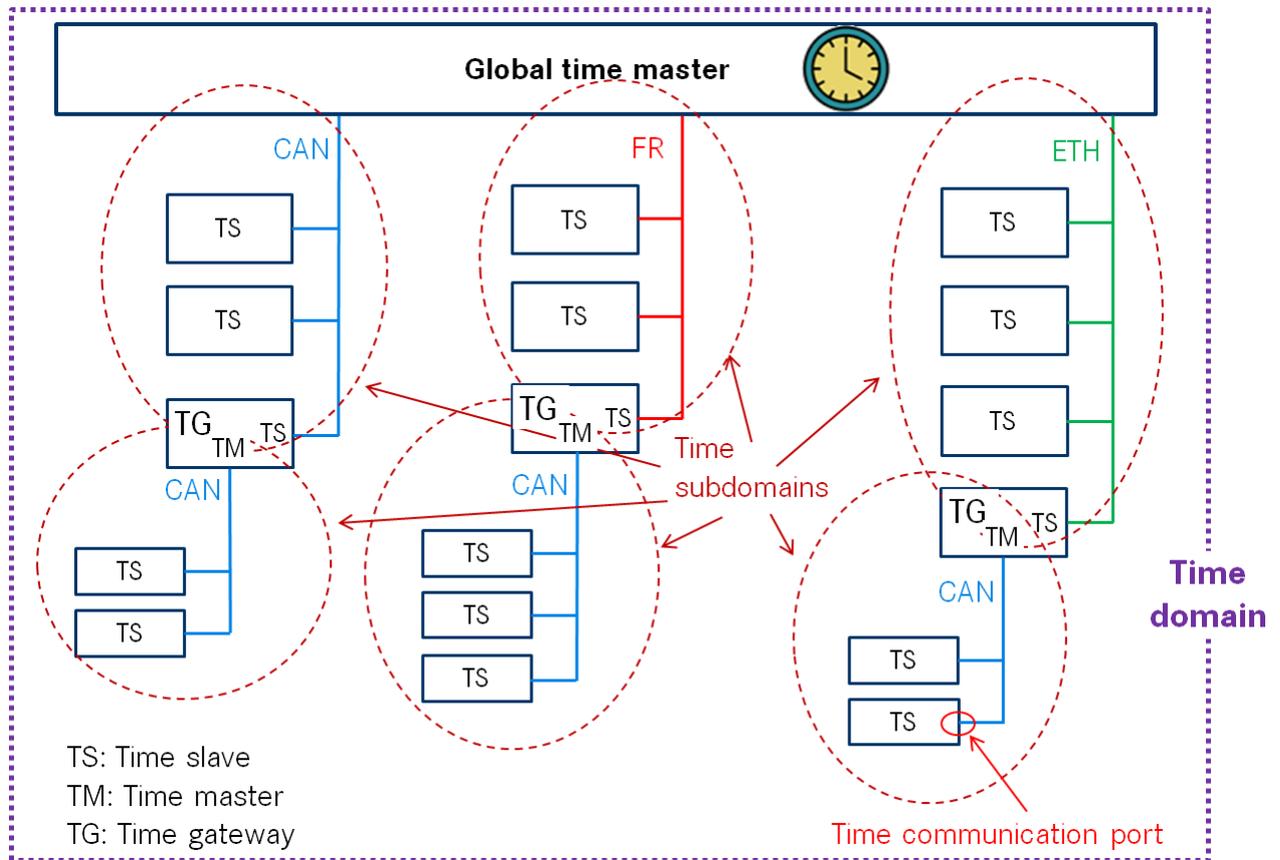


Figure 7.1: Terminology Example

7.4.1 SYNC message processing

[SWS_FrTSyn_00018] [A Time Synchronization message sequence consists of a SYNC message per Time Domain.] (*RS_TS_20043*)

Note: Refer to figure 9.1 for the sequence diagram of a Time Master.

[SWS_FrTSyn_00019] [For each configured Time Master (refer to *FrTSynGlobalTimeMaster*) the *FrTSyn* module shall periodically transmit SYNC messages with the cycle *FrTSynGlobalTimeTxPeriod* including the time value, which will be valid at the start of the next FlexRay cycle 0 and User Data, if the *GLOBAL_TIME_BASE* bit within the *timeBaseStatus* is set and *FrTSynGlobalTimeTxPeriod* is unequal to 0 and if the associated *cyclicMsgResumeCounter* is not running.

The cyclic transmission shall be started in the earliest possible *FrTSyn_MainFunction* call once the requirements above are fulfilled.] (*RS_TS_20039, RS_TS_20043*)

Note: "earliest possible" means:

- In the next *FrTSyn_MainFunction*, because *GLOBAL_TIME_BASE* is set outside the *FrTSyn_MainFunction*.

- In the current `FrTSyn_MainFunction`, when switching from immediate to cyclic transmission (because this decision is made inside the `FrTSyn_MainFunction`). For details on immediate transmission refer to chapter 7.4.5.

[SWS_FrTSyn_00021] [If the `FrTSynGlobalTimeTxIcvSecured` is configured to `ICV_NOT_SUPPORTED` the message type of the `SYNC` message shall depend on `FrTSynGlobalTimeTxCrcSecured` as follows:

<code>FrTSynGlobalTimeTxCrcSecured</code> Value	SYNC Message Type
<code>CRC_NOT_SUPPORTED</code>	0x10 SYNC not CRC secured message
<code>CRC_SUPPORTED</code>	0x20 SYNC CRC secured message

Table 7.1: Settings of `FrTSynGlobalTimeTxCrcSecured` for SYNC messages without ICV

]([RS_TS_20041](#), [RS_TS_20043](#))

[SWS_FrTSyn_00112]{DRAFT} [If the `FrTSynGlobalTimeTxIcvSecured` is configured to `ICV_SUPPORTED` the message type of the `SYNC` message shall depend on `FrTSynGlobalTimeTxCrcSecured` as follows:

<code>FrTSynGlobalTimeTxCrcSecured</code> Value	SYNC Message Type
<code>CRC_NOT_SUPPORTED</code>	0x50 SYNC not CRC, ICV authenticated message
<code>CRC_SUPPORTED</code>	0x60 SYNC CRC, ICV authenticated message

Table 7.2: Settings of `FrTSynGlobalTimeTxCrcSecured` for SYNC messages with ICV

]([RS_TS_20041](#), [RS_TS_20043](#), [RS_TS_20074](#))

7.4.2 OFS message processing

[SWS_FrTSyn_00022] [An offset message sequence consists of an OFS message per Time Domain.]([RS_TS_20044](#))

[SWS_FrTSyn_00023] [For each configured Time Master (`FrTSynGlobalTimeMaster`) the `FrTSyn` module shall periodically transmit OFS messages with the cycle `FrTSynGlobalTimeTxPeriod` including the Offset Time value and User Data, if the `GLOBAL_TIME_BASE` bit within the `timeBaseStatus` is set and `FrTSynGlobalTimeTxPeriod` is unequal to 0 and if the associated `cyclicMsgResumeCounter` is not running.

The cyclic transmission shall be started in the earliest possible `FrTSyn_MainFunction` call once the requirements above are fulfilled.]([RS_TS_20039](#), [RS_TS_20044](#))

Note: "earliest possible" means:

- In the next `FrTSyn_MainFunction`, because `GLOBAL_TIME_BASE` is set outside the `FrTSyn_MainFunction`.
- In the current `FrTSyn_MainFunction`, when switching from immediate to cyclic transmission (because this decision is made inside the `FrTSyn_MainFunction`). For details on immediate transmission refer to chapter 7.4.5).

[SWS_FrTSyn_00025] [If the `FrTSynGlobalTimeTxIcvSecured` is configured to `ICV_NOT_SUPPORTED` the message type of the OFS message depend on `FrTSynGlobalTimeTxCrcSecured` as follows:

<code>FrTSynGlobalTimeTxCrcSecured</code> Value	OFS Message Type
<code>CRC_NOT_SUPPORTED</code>	0x34 OFS not CRC secured message
<code>CRC_SUPPORTED</code>	0x44 OFS CRC secured message

Table 7.3: Settings of `FrTSynGlobalTimeTxCrcSecured` for OFS messages without ICV

]([RS_TS_20041](#), [RS_TS_20044](#))

[SWS_FrTSyn_00113]{DRAFT} [If the `FrTSynGlobalTimeTxIcvSecured` is configured to `ICV_SUPPORTED` the message type of the OFS message depend on `FrTSynGlobalTimeTxCrcSecured` as follows:

<code>FrTSynGlobalTimeTxCrcSecured</code> Value	OFS Message Type
<code>CRC_NOT_SUPPORTED</code>	0x74 OFS not CRC, ICV authenticated message,
<code>CRC_SUPPORTED</code>	0x84 OFS CRC, ICV authenticated message

Table 7.4: Settings of `FrTSynGlobalTimeTxCrcSecured` for OFS messages with ICV

]([RS_TS_20041](#), [RS_TS_20044](#), [RS_TS_20074](#))

7.4.3 Transmission mode

[SWS_FrTSyn_00026] [If `FrTSyn_SetTransmissionMode(Controller, Mode)` is called and parameter `Mode` equals `FRTSYN_TX_OFF`, all transmit requests from `FrTSyn` shall be omitted on this FlexRay channel.
]([RS_TS_20039](#), [RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00027] [If `FrTSyn_SetTransmissionMode(Controller, Mode)` is called and parameter `Mode` equals `FRTSYN_TX_ON`, all transmit requests from `FrTSyn` on this FlexRay channel shall be able to be transmitted.
]([RS_TS_20039](#), [RS_TS_20043](#), [RS_TS_20044](#))

7.4.4 Debounce Time

[SWS_FrTSyn_00084] [If `FrTSynGlobalTimeDebounceTime`) is greater than 0 for a Time Base, `FrTSyn` shall always do debouncing for the corresponding `Timesync` PDUs as described below, otherwise `FrTSyn` shall not do any debouncing.]([RS_TS_20039](#))

[SWS_FrTSyn_00085] [`FrTSynGlobalTimeDebounceTime` represents the debounce value of a `debounceCounter` of a Time Base. `FrTSyn` shall reload the `debounceCounter` after a `Timesync` PDU for the corresponding Time Base (SYNC and OFS) has been sent. `FrTSyn` shall decrement the `debounceCounter` value on each invocation of `FrTSyn_MainFunction`, if no `Timesync` PDU is transmitted.]([RS_TS_20039](#))

[SWS_FrTSyn_00086] [A new `Timesync` PDU shall only be sent if the corresponding `debounceCounter` has a value equal or less than zero.]([RS_TS_20039](#))

7.4.5 Immediate Time Synchronization

In addition to the cyclic `Timesync` message transmission, an immediate message transmission might be required.

Depending on configuration, the `FrTSyn` module checks on each `FrTSyn_MainFunction` call the necessity for a `Timesync` message transmission for each Time Base, where a Master Port belongs to.

[SWS_FrTSyn_00087] [If `FrTSynImmediateTimeSync` is set to TRUE for a Time Base, `FrTSyn` shall check on each `FrTSyn_MainFunction` call by calling `StbM_GetTimeBaseUpdateCounter`, if the `timeBaseUpdateCounter` of the corresponding Time Base has changed.]([RS_TS_20039](#))

[SWS_FrTSyn_00088] [If `FrTSynImmediateTimeSync` is set to TRUE and the `timeBaseUpdateCounter` of a Time Base has changed and the `GLOBAL_TIME_BASE` bit of the `timeBaseStatus` is set, `FrTSyn` shall trigger an immediate transmission of Time Synchronization messages for the corresponding Time Base.]([RS_TS_20039](#))

Note: `timeBaseStatus` can be obtained by `StbM_GetTimeBaseStatus` or `StbM_GetCurrentTime`.

Note: The `debounceCounter` as described in 7.4.4 shall always be considered.

[SWS_FrTSyn_00089] [If `FrTSynImmediateTimeSync` is set to TRUE, `cyclicMsgResumeCounter` and `FrTSynCyclicMsgResumeTime` shall be considered.]([RS_TS_20039](#))

[SWS_FrTSyn_00090] [`FrTSynCyclicMsgResumeTime` represents the timeout value of a `cyclicMsgResumeCounter` that shall be started when either a SYNC or OFS message has been sent immediately, asynchronous to the cyclic `Timesync`

message transmission. `cyclicMsgResumeCounter` shall be decremented on each invocation of `FrTSyn_MainFunction`, if no `Timesync` PDU is transmitted asynchronously. [\(RS_TS_20039\)](#)

[SWS_FrTSyn_00091] [If the `cyclicMsgResumeCounter` has reached a value equal or less than zero, `FrTSyn` shall resume cyclic `Timesync` message transmission by sending either a SYNC or OFS message.] [\(RS_TS_20039\)](#)

[SWS_FrTSyn_00093] [If the `cyclicMsgResumeCounter` is started, `FrTSyn` shall stop cyclic `Timesync` message transmission.] [\(RS_TS_20039\)](#)

7.4.6 Calculation and Assembling of Time Synchronization Messages

This chapter describes the workflow, how the items of a Time Synchronization message will be calculated (1st step) and how the message will be assembled (2nd step).

7.4.6.1 Global Time Calculation

[SWS_FrTSyn_00028] [The transmitter of a Synchronized Time Base (Time Master) shall perform the following steps to distribute the Synchronized Time Base:

1. Retrieve current Synchronized Time Base's Time Tuple as $[T_{\text{SYNC}}; T_{0\text{VLT}}]$ via `StbM_GetCurrentTime`
2. Protect the following two steps against interruptions:
 - (a) Get `currentCycle` and `currentMacroticks` via `FrIf_GetGlobalTime`
 - (b) Retrieve current Virtual Local Time value as $T_{1\text{VLT}}$ via `StbM_GetCurrentVirtualLocalTime`
3. Calculate the (future) time value of the Time Base at the start of the next FlexRay cycle by $T_0 = T_{\text{SYNC}} + (T_{1\text{VLT}} - T_{0\text{VLT}}) + (64 - \text{currentCycle}) * \text{CycleLength} - (\text{CycleLength} / \text{MacroticksPerCycle}) * \text{currentMacroticks}$
4. Calculate `SyncTimeSec` (second portion of T_0) and `SyncTimeNSec` (nanosecond portion of T_0)

[\(RS_TS_20043\)](#)

Note: Refer to figure 9.1 for the Time Master sequence of actions.

Note: It is inevitable to retrieve `currentCycle` and `currentMacroticks` of the FlexRay time and $T_{1\text{VLT}}$ of the Virtual Local Time in an atomic way, otherwise any delay between them will worsen the precision by the amount of the delay.

Note: If the calculation is done on an integer basis the rounding error of the term $(\text{CycleLength} / \text{MacroticksPerCycle})$ needs to be minimized. This can be done in multiple ways, e.g., by calculating

- $((\text{CycleLength} * \text{currentMacroticks}) / \text{MacroticksPerCycle})$ on 64 bit architectures or
- $((((\text{CycleLength} * 256) / \text{MacroticksPerCycle}) * \text{currentMacroticks}) / 256)$ on 32 bit architectures (multiplication by 256 is acceptable for any possible FlexRay parameter configuration)

`CycleLength` and `MacroticksPerCycle` are retrieved via `FrIf_GetCycleLength` and `FrIf_GetMacroticksPerCycle`.

[SWS_FrTSyn_00029] [The transmitter of an Offset Time Base (Time Master) shall perform the following steps to distribute the Offset Time Base:

1. Retrieve current Offset Time via `StbM_GetOffset`
2. Write second portion of the Offset Time to `OfsTimeSec`
3. Write nanosecond portion of the Offset Time to `OfsTimeNSec`

]([RS_TS_20044](#))

7.4.6.2 SGW Calculation

[SWS_FrTSyn_00020] [The `SGW` value (Time Gateway synchronization status) shall be retrieved from the Time Base synchronization status. If the `SYNC_TO_GATEWAY` bit within `timeBaseStatus` is not set the `SGW` value shall be `SyncToGTM`. Otherwise the `SGW` value shall be set to `SyncToSubDomain`.]([RS_TS_20043](#), [RS_TS_20044](#))

7.4.6.3 Sequence Counter Calculation

[SWS_FrTSyn_00030] [A Sequence Counter (`SC`) of 4 bit is representing numbers from 0 to 15 per Time Domain. The Sequence Counter shall be independent between SYNC and OFS messages and shall be incremented by 1 on every transmission request of a SYNC or OFS message. It shall wrap around at 15 to 0 again.]([RS_TS_20041](#), [RS_TS_20043](#), [RS_TS_20044](#))

7.4.6.4 CRC Calculation

[SWS_FrTSyn_00031] [The function `Crc_CalculateCRC8H2F` as defined in [6] shall be used to calculate the CRC, if configured.]([RS_TS_20041](#), [RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00035] [The `DataID` shall be calculated as `DataID = DataIDList[SC]`, where `DataIDList` is given by configuration for each message type (refer to `FrTSynGlobalTimeSyncDataIDList` and `FrTSynGlobalTimeOfsDataIDList`).] (*RS_TS_20041, RS_TS_20043, RS_TS_20044*)

Note: A specific `DataID` out of a predefined `DataIDList` ensures the identification of data elements of Time Synchronization messages.

[SWS_FrTSyn_00036] [The `CRC` shall be calculated over Time Synchronization message byte 2 to byte 15 and `DataID`, where byte 2 is applied first, followed by the other bytes in ascending order, and `DataID` last.] (*RS_TS_20041, RS_TS_20043, RS_TS_20044*)

7.4.6.5 ICV Calculation

Refer to the chapter 7.3.13 in `StbM` [5] for the configuration details of `FV` referenced in each Time Domain.

[SWS_FrTSyn_00114]{DRAFT} [When:

- the `FV` is referenced (refer `FrTSynIcvGenerationFvIdRef`),
- and the configured truncated `FV` length (`StbMFreshnessValueTruncLength`) is equal to the `FV` length (`StbMFreshnessValueLength`),

the Time Master shall call `StbM_GetTxFreshness` to obtain the `FV` by using the `StbMFreshnessValueId` (referenced via the `FrTSynIcvGenerationFvIdRef` parameter).] (*RS_TS_20074*)

[SWS_FrTSyn_00115]{DRAFT} [When:

- the `FV` is referenced (refer `FrTSynIcvGenerationFvIdRef`),
- and the configured truncated `FV` length (`StbMFreshnessValueTruncLength`) < `FV` length (`StbMFreshnessValueLength`),

the Time Master shall call `StbM_GetTxFreshnessTruncData` to obtain the `FV` and the truncated `FV` by using the `StbMFreshnessValueId` (referenced via the `FrTSynIcvGenerationFvIdRef` parameter).] (*RS_TS_20074*)

Note: Having the configured truncated `FV` length (`StbMFreshnessValueTruncLength`) > `FV` length (`StbMFreshnessValueLength`) in `StbM` is not a valid configuration.

[SWS_FrTSyn_00116]{DRAFT} [When the `FV` is not referenced (refer `FrTSynIcvGenerationFvIdRef`), the Time Master shall not include the `FV` in the `ICV` generation and neither in the `SYNC/OFS` message.] (*RS_TS_20074*)

[SWS_FrTSyn_00117]{DRAFT} [If `StbM_GetTxFreshness` returns `E_OK`, the Time Master shall construct the `SYNC/OFS` message with `FV` and use the full `FV` in the `ICV` generation.] (*RS_TS_20074*)

[SWS_FrTSyn_00118]{DRAFT} [If `StbM_GetTxFreshnessTruncData` returns `E_OK`, the Time Master shall construct the `SYNC/OFS` message with truncated `FV` and use the full `FV` in the `ICV` generation.] ([RS_TS_20074](#))

[SWS_FrTSyn_00119]{DRAFT} [If `StbM_GetTxFreshness` or `StbM_GetTxFreshnessTruncData` returns `E_NOT_OK`, the Time Master shall:

- stop the `ICV` generation and set the `FVL` and the `ICVL` to 0 in the `SYNC/OFS` message,
- call `Det_ReportRuntimeError` with parameter `ErrorId` set to `FRTSYN_E_FRESHNESSFAILURE` (refer [\[SWS_FrTSyn_91000\]](#)),
- call `IdsM_SetSecurityEventWithContextData` with parameter `EventId` set to `FRTSYN_SEV_FRESHNESS_NOT_AVAILABLE` (refer [\[SWS_FrTSyn_00103\]](#))

] ([RS_TS_20074](#))

Refer to the chapter 10.2.5 in [\[7\]](#) for the configuration details of `CSM` job used for `ICV` generation.

[SWS_FrTSyn_00120]{DRAFT} [If `FrTSynIcvGenerationBase` for the Time Domain is configured to `ICV_MAC`, the Time Master shall call `Csm_MacGenerate` to generate the `ICV` value.] ([RS_TS_20074](#))

[SWS_FrTSyn_00121]{DRAFT} [If `FrTSynIcvGenerationBase` for the Time Domain is configured to `ICV_SIGNATURE`, the Time Master shall call `Csm_SignatureGenerate` to generate the `ICV` value.] ([RS_TS_20074](#))

Note: The `mode` parameter is intentionally left open for the implementer to choose (i.e. `CRYPTO_OPERATIONMODE_SINGLECALL` would possibly be the best option since it does not require further calls to `CSM`).

The `CSM` job used to generate the `ICV` can be configured to synchronous or asynchronous behavior. The `ICV` generation timeout observation should be disabled, when the `CSM` job used to generate the `ICV`, is configured in synchronous behavior.

[SWS_FrTSyn_00122]{DRAFT} [If `FrTSynIcvGenerationTimeout` is set to 0, the Time Master shall not do `ICV` generation timeout monitoring.] ([RS_TS_20074](#))

[SWS_FrTSyn_00123]{DRAFT} [If:

- `FrTSynIcvGenerationTimeout` is set to any value greater than 0,
- and `Csm_MacGenerate` or `Csm_SignatureGenerate` returns `E_OK`,

the Time Master shall start the `FrTSynIcvGenerationTimeout`.] ([RS_TS_20074](#))

[SWS_FrTSyn_00124]{DRAFT} [If:

- `FrTSynIcvGenerationTimeout` is set to any value greater than 0,
- the callback `FrTSyn_IcvGenerationIndication` is called,

the Time Master shall stop the `FrTSynIcvGenerationTimeout`.] ([RS_TS_20074](#))

[SWS_FrTSyn_00125]{DRAFT} [If `Csm_MacGenerate/Csm_SignatureGenerate` returns `E_NOT_OK` or `FrTSynIcvGenerationTimeout` expires before the notification of the `FrTSyn_IcvGenerationIndication` callback, the Time Master shall:

- stop the `ICV` generation and set the `FVL` and the `ICVL` to 0 in the `SYNC/OFS` message,
- call `IdsM_SetSecurityEventWithContextData` with parameter `EventId` set to `FRTSYN_SEV_ICV_GENERATION_FAILED` (refer [\[SWS_FrTSyn_00103\]](#)).

] ([RS_TS_20074](#))

[SWS_FrTSyn_00126]{DRAFT} [With the notification of the `FrTSyn_IcvGenerationIndication` callback, the Time Master shall add the generated `ICV` to the `SYNC/OFS` message and transmit it.] ([RS_TS_20074](#))

[SWS_FrTSyn_00127]{DRAFT} [The Time Master shall notify the successful transmission of the `SYNC/OFS` message to `FVM` by calling `StbM_SPduTxConfirmation`.] ([RS_TS_20074](#))

7.4.6.6 Message Assembling

[SWS_FrTSyn_00037] [For each transmission of a Time Synchronization message the `FrTSyn` module shall assemble the message as follows:

- Calculate `SC`
- Copy `currentCycle` (refer to [\[SWS_FrTSyn_00028\]](#)) to `FCNT` (for `SYNC` message)
- Calculate `SGW`
- Copy all data to the appropriate position within the related message
- Calculate `CRC` (configuration dependent)
- Fetch the `FV` (configuration dependent) and append the `FVL`, `ICVL` and `FV` in the appropriate position within the related message
- Calculate the `ICV` (configuration dependent) and append it in the appropriate position within the related message

] ([RS_TS_20043](#), [RS_TS_20044](#), [RS_TS_20074](#))

7.5 Acting as Time Slave

A Time Slave is an entity, which is the recipient for a certain Time Base within a certain segment of a communication network, being a consumer for this Time Base.

7.5.1 SYNC message processing

[SWS_FrTSyn_00038] [The `FrTSyn` shall only accept a SYNC message with `Type` equal to `0x20` / `0x60` and a correct CRC value if `FrTSynRxCrcValidated` is configured to `CRC_VALIDATED`.]
([RS_TS_20042](#), [RS_TS_20043](#))

[SWS_FrTSyn_00039] [The `FrTSyn` shall only accept a SYNC message with `Type` equal to `0x10` / `0x50` if `FrTSynRxCrcValidated` is configured to `CRC_NOT_VALIDATED`.]
([RS_TS_20043](#))

[SWS_FrTSyn_00040] [The `FrTSyn` shall only accept a SYNC message with `Type` equal to `0x10` / `0x50` or `0x20` / `0x60` if `FrTSynRxCrcValidated` is configured to `CRC_IGNORED`.]
([RS_TS_20043](#))

[SWS_FrTSyn_00081] [The `FrTSyn` shall only accept a SYNC message with `Type` equal to `0x10` / `0x50` or a SYNC message with `Type` equal to `0x20` / `0x60` and a correct CRC value if `FrTSynRxCrcValidated` is configured to `CRC_OPTIONAL`.]
([RS_TS_20042](#), [RS_TS_20043](#))

[SWS_FrTSyn_00128]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_VERIFIED`, `FrTSyn` shall perform `ICV` verification for `SYNC` messages with `ICV` value (Message type: `0x50`, `0x60`).

The `FrTSyn` shall consider `ICV` verification as failed for `SYNC` messages without `ICV` (Message type: `0x10`, `0x20`).]
([RS_TS_20074](#))

[SWS_FrTSyn_00129]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_NOT_VERIFIED`, the `FrTSyn` shall not perform the `ICV` verification and the `SYNC` messages shall not contain an `ICV` value (Message type: `0x10`, `0x20`).

The `FrTSyn` shall consider `ICV` verification as failed for `SYNC` messages with `ICV` (Message type: `0x50`, `0x60`).]
([RS_TS_20074](#))

[SWS_FrTSyn_00130]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_IGNORED`, `FrTSyn` shall not perform the `ICV` verification.

The `FrTSyn` shall ignore the `ICV` in `SYNC` messages with `ICV` (Message type: `0x50`, `0x60`).]
([RS_TS_20074](#))

[SWS_FrTSyn_00131]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_OPTIONAL`, the `FrTSyn` shall perform `ICV` verification for `SYNC` messages with `ICV` (Message type: `0x50`, `0x60`).

The `FrTSyn` shall not perform `ICV` verification for `SYNC` messages without `ICV` (Message type: `0x10`, `0x20`).]
([RS_TS_20074](#))

[SWS_FrTSyn_00041] [For valid `SYNC` messages a new Time Tuple, consisting of the Global Time value and the associated value of the Virtual Local Time, shall be calculated and forwarded to the `StbM` module via `StbM_BusSetGlobalTime`.]
([RS_TS_20040](#), [RS_TS_20042](#), [RS_TS_20043](#))

7.5.2 OFS message processing

[SWS_FrTSyn_00042] [The `FrTSyn` shall only accept an OFS message with `Type` equal to `0x44/0x84` and a correct CRC value if `FrTSynRxCrcValidated` is configured to `CRC_VALIDATED`.]
([RS_TS_20042](#), [RS_TS_20044](#))

[SWS_FrTSyn_00043] [The `FrTSyn` shall only accept an OFS message with `Type` equal to `0x34/0x74` if `FrTSynRxCrcValidated` is configured to `CRC_NOT_VALIDATED`.]
([RS_TS_20044](#))

[SWS_FrTSyn_00044] [The `FrTSyn` shall only accept an OFS message with `Type` equal to `0x34/0x74` or `0x44/0x84` if `FrTSynRxCrcValidated` is configured to `CRC_IGNORED`.]
([RS_TS_20044](#))

[SWS_FrTSyn_00082] [The `FrTSyn` shall only accept an OFS message with `Type` equal to `0x34/0x74` or an OFS message with `Type` equal to `0x44/0x84` and a correct CRC value if `FrTSynRxCrcValidated` is configured to `CRC_OPTIONAL`.]
([RS_TS_20042](#), [RS_TS_20044](#))

[SWS_FrTSyn_00132]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_VERIFIED`, `FrTSyn` shall perform ICV verification for OFS messages with ICV value (Message type: `0x74`, `0x84`).

The `FrTSyn` shall consider ICV verification as failed for OFS messages without ICV (Message type: `0x34`, `0x44`).]
([RS_TS_20074](#))

[SWS_FrTSyn_00133]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_NOT_VERIFIED`, the `FrTSyn` shall not perform the ICV verification and the OFS messages shall not contain an ICV value (Message type: `0x34`, `0x44`).

The `FrTSyn` shall consider ICV verification as failed for OFS messages with ICV (Message type: `0x74`, `0x84`).]
([RS_TS_20074](#))

[SWS_FrTSyn_00134]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_IGNORED`, `FrTSyn` shall not perform the ICV verification.

The `FrTSyn` shall ignore the ICV in OFS messages with ICV (Message type: `0x74`, `0x84`).]
([RS_TS_20074](#))

[SWS_FrTSyn_00135]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_OPTIONAL`, the `FrTSyn` shall perform ICV verification for OFS messages with ICV (Message type: `0x74`, `0x84`).

The `FrTSyn` shall not perform ICV verification for OFS messages without ICV (Message type: `0x34`, `0x44`).]
([RS_TS_20074](#))

[SWS_FrTSyn_00045] [For valid OFS messages a new Time Tuple, consisting of the Offset Time value and the associated value of the Virtual Local Time, shall be calculated (according [\[SWS_FrTSyn_00047\]](#)) and forwarded to the `StbM` module via `StbM_BusSetGlobalTime`.]
([RS_TS_20040](#), [RS_TS_20042](#), [RS_TS_20044](#))

7.5.3 Validation and Disassembling of Time Synchronization Messages

This chapter describes the workflow how the items of a Time Synchronization message will be validated (1st step) and how the message will be disassembled (2nd step).

7.5.3.1 Global Time Calculation

[SWS_FrTSyn_00046] [The receiver of a Synchronized Time Base shall perform the following steps to assemble the Synchronized Time Base:

1. On SYNC message RX indication (or in the subsequent MainFunction call) store received time value T0 (SyncTimeSec, SyncTimeNSec)
2. Protect the following two steps against interruptions:
 - (a) Get `currentCycle` and `currentMacroticks` via `FrIf_GetGlobalTime`
 - (b) Retrieve current Virtual Local Time value as $T1_{\text{VLT}}$ via `StbM_GetCurrentVirtualLocalTime`
3. Calculate Time Tuple [T1; $T1_{\text{VLT}}$] to update the Time Slave's local instance of the Time Base:
 - (a) $T1 = T0 + (\text{CycleLength} * \text{currentCycle}) + ((\text{CycleLength} / \text{MacrotickPerCycle}) * \text{currentMacroticks})$
 - (b) If `currentCycle` is greater or equal than the retrieved `FCNT` value from the transmitter (Time Master), then the calculated value T1 shall be subtracted by 64 times the FlexRay cycle duration: $T1 = T1 - (\text{CycleLength} * 64)$

]([RS_TS_20043](#))

Note: Refer to figure 9.2 for the Time Slave sequence of actions.

Note: It is inevitable to retrieve `currentCycle` and `currentMacroticks` of the FlexRay time and $T1_{\text{VLT}}$ of the Virtual Local Time atomic, otherwise any delay between them will worsen the precision by the amount of the delay.

Note: In order to minimize rounding errors for the term $(\text{CycleLength} / \text{MacrotickPerCycle})$ in case of integer calculation refer to note below [\[SWS_FrTSyn_00028\]](#).

[SWS_FrTSyn_00047] [The receiver of an Offset Time Base shall perform the following steps to assemble the Offset Time:

1. Get second portion of the Offset Time out of `OfsTimeSec`
2. Get nanosecond portion of the Offset Time out of `OfsTimeNSec`
3. Retrieve current Virtual Local Time value via `StbM_GetCurrentVirtualLocalTime`

](RS_TS_20044)

7.5.3.2 SGW Calculation

[SWS_FrTSyn_00094] [If the `SGW` value (SYNC and OFS) is set to `SyncToSubDomain`, the `SYNC_TO_GATEWAY` bit within `timeBaseStatus` shall be set to `TRUE`. Otherwise, it shall be set to `FALSE`.](RS_TS_20040, RS_TS_20042)

7.5.3.3 Sequence Counter Validation

[SWS_FrTSyn_00048] [The Sequence Counter Jump Width between two consecutive SYNC or two consecutive OFS messages of the same Time Domain shall be greater than 0 and smaller than or equal to `FrTSynGlobalTimeSequenceCounterJumpWidth`. Otherwise a Time Slave shall discard the respective SYNC / OFS message.

If the `FrTSynGlobalTimeSequenceCounterJumpWidth` value is set to 0, the Time Slave shall not do Sequence Counter Jump Width checks.](RS_TS_20042, RS_TS_20043, RS_TS_20044)

[SWS_FrTSyn_00049] [Upon reception of a SYNC (or OFS) message a Time Slave shall check the Sequence Counter of the received message per Time Domain against the configured value of `FrTSynGlobalTimeSequenceCounterJumpWidth` (according to [SWS_FrTSyn_00048]), unless it is the first message

- at Startup or
- after a Time Base update timeout has been detected (`TIMEOUT` bit set in Time Base synchronization status `timeBaseStatus`).

](RS_TS_20042, RS_TS_20043, RS_TS_20044)

Note: There are scenarios where it makes sense to skip the check of the Sequence Counter Jump Width, e.g. at startup (Time Slaves start asynchronously to the Time Master) or after a message timeout to allow for Sequence Counter (re-)synchronization. In case of a timeout the error has been detected already by the timeout monitoring, there is no benefit in generating a subsequent error by the jump width check.

Note: According to [SWS_FrTSyn_00048] the Sequence Counter validation will still discard messages with a Sequence Counter Jump Width being zero (i.e., stuck Sequence Counter) during Time Base update timeout.

[SWS_FrTSyn_00102] [While a Time Base Timeout is present (`TIMEOUT` bit is set in Time Base synchronization status `timeBaseStatus`), `FrTSyn` shall discard SYNC (or OFS) messages until it has successfully validated (refer to [SWS_FrTSyn_00048]) 'n' consecutive SYNC (or OFS) messages ('n' is given by the parameter `FrTSynGlobalTimeSequenceCounterHysteresis`).](RS_TS_20042)

Note: [SWS_FrTSyn_00102] improves robustness against a scenario with a buggy master implementation or injection of invalid master messages (sequence counter increments greater than `FrTSynGlobalTimeSequenceCounterJumpWidth`). In such a scenario any valid SYNC (or OFS) message would cause the Time Slave to leave the Timeout state (refer to [SWS_FrTSyn_00049]) although the sequence counter is not incremented correctly. An additional hysteresis avoids this.

7.5.3.4 CRC Validation

[SWS_FrTSyn_00050] [The function `Crc_CalculateCRC8H2F` as defined in [6] shall be used to validate the CRC, if configured.]([RS_TS_20042](#), [RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00054] [The `DataID` shall be calculated as `DataID = DataIDList [SC]`, where `DataIDList` is given by configuration for each message Type.]([RS_TS_20042](#), [RS_TS_20043](#), [RS_TS_20044](#))

Note: A specific `DataID` out of a predefined `DataIDList` ensures the identification of data elements of Time Synchronization messages.

[SWS_FrTSyn_00055] [The CRC shall be calculated over Time Synchronization message byte 2 to byte 15 and `DataID`, where byte 2 is applied first, followed by the other bytes in ascending order, and `DataID` last.]([RS_TS_20042](#), [RS_TS_20043](#), [RS_TS_20044](#))

7.5.3.5 ICV Verification

Refer to the chapter 7.3.13 in StbM [5] for the configuration details of `FV` referenced in each Time Domain.

[SWS_FrTSyn_00137]{DRAFT} [When the `FV` is referenced (refer `FrTSynIcvVerificationFvIdRef`) and the `FVL` of the received SYNC/OFS message is greater than 0, the Time Slave shall call the `StbM_GetRxFreshness` Api to obtain the `FV` by using:

- the `StbMFreshnessValueId` from the reference `FrTSynIcvVerificationFvIdRef`,
- the `StbMTruncatedFreshnessValue` as received in the `FV` field of the SYNC/OFS message,
- the `StbMTruncatedFreshnessValueLength` as received in the `FVL` field of the SYNC/OFS message,
- the `StbMFreshnessValueLength` from the reference `FrTSynIcvVerificationFvIdRef`,
- the `StbMAuthVerifyAttempts` as the number of failed verification attempts for the current message (ICV verification attempt counter).

](RS_TS_20074)

[SWS_FrTSyn_00138]{DRAFT} [When the `FVL` of the received `SYNC/OFS` message is equal to 0, the Time Slave shall not include the `FV` in the `ICV` verification.](RS_TS_20074)

[SWS_FrTSyn_00139]{DRAFT} [When the `FV` is not referenced (refer `FrTSyn-IcvVerificationFvIdRef`) and the `FVL` of the received `SYNC/OFS` message is greater than 0, the Time Slave shall stop the `ICV` verification and consider the `ICV` verification as failed.](RS_TS_20074)

[SWS_FrTSyn_00140]{DRAFT} [If `StbM_GetRxFreshness` returns `E_OK`, the Time Slave shall use the `FV` in `ICV` verification.](RS_TS_20074)

[SWS_FrTSyn_00141]{DRAFT} [If `StbM_GetRxFreshness` returns `E_NOT_OK`, the current verification of the received `SYNC/OFS` message is considered to be failed, and `FrTSyn` shall:

- retry calling `StbM_GetRxFreshness` next Main Function,
- increment the `ICV` verification attempt counter for this `SYNC/OFS` message.

](RS_TS_20074)

[SWS_FrTSyn_00142]{DRAFT} [If the `ICV` verification attempt counter has reached `FrTSynIcvVerificationAttempts`, the Time Slave shall :

- stop the `ICV` verification and consider the `ICV` verification as failed,
- call `Det_ReportRuntimeError` with parameter `ErrorId` set to `FRTSYN_E_FRESHNESSFAILURE` (refer to [\[SWS_FrTSyn_91000\]](#)),
- call `IdsM_SetSecurityEventWithContextData` with parameter `EventId` set to `FRTSYN_SEV_ICV_VERIFICATION_FAILED` (refer to [\[SWS_FrTSyn_00103\]](#))

](RS_TS_20074)

Refer to the chapter 10.2.5 in [\[7\]](#) for the configuration details of CSM job used for `ICV` verification.

[SWS_FrTSyn_00143]{DRAFT} [If `FrTSynIcvVerificationBase` for the Time Domain is configured to `ICV_MAC`, the Time Slave shall call `Csm_MacVerify` to verify the `ICV` value, using as many bytes as specified in the `ICVL`.](RS_TS_20074)

[SWS_FrTSyn_00144]{DRAFT} [If `FrTSynIcvVerificationBase` for the Time Domain is configured to `ICV_SIGNATURE`, the Time Slave shall call `Csm_SignatureVerify` to verify the `ICV` value, using as many bytes as specified in the `ICVL`.](RS_TS_20074)

Note: The `mode` parameter is intentionally left open for the implementer to choose (i.e. `CRYPTO_OPERATIONMODE_SINGLECALL` would possibly be the best option since it does not require further calls to `CSM`).

The `CSM` job used to generate the `ICV` can be configured to synchronous or asynchronous behavior.

[SWS_FrTSyn_00145]{DRAFT} [If `FrTSynIcvVerificationTimeout` is set to 0, the Time Slave shall not do `ICV` verification timeout monitoring.] ([RS_TS_20074](#))

[SWS_FrTSyn_00146]{DRAFT} [If `Csm_MacVerify` or `Csm_SignatureVerify` returns recoverable error code (e.g., `CRYPTO_E_BUSY`), the verification of the received `SYNC/OFS` message is considered to be failed and the `ICV` verification attempt counter for this PDU shall be incremented.] ([RS_TS_20074](#))

[SWS_FrTSyn_00147]{DRAFT} [If:

- `FrTSynIcvVerificationTimeout` is set to any value greater than 0,
- and `Csm_MacVerify` or `Csm_SignatureVerify` returns `E_OK`,

the Time Slave shall start the `FrTSynIcvVerificationTimeout`.] ([RS_TS_20074](#))

[SWS_FrTSyn_00148]{DRAFT} [If:

- `FrTSynIcvVerificationTimeout` is set to any value greater than 0,
- and the `FrTSyn_IcvVerificationIndication` callback is called,

the Time Slave shall stop the `FrTSynIcvVerificationTimeout`.] ([RS_TS_20074](#))

[SWS_FrTSyn_00149]{DRAFT} [If one of the following conditions is true:

- the `ICV` verification attempt counter has reached the configuration value `FrTSynIcvVerificationAttempts`,
- the verification of the `ICV` (`FrTSyn_IcvVerificationIndication` or `Csm_MacVerify/Csm_SignatureVerify` when synchronous behavior is used) has returned a non-recoverable error such as returning `E_NOT_OK`, or `KEY_FAILURE`,
- the `ICVL` is 0 in the received `SYNC/OFS` message,
- `FrTSynIcvVerificationTimeout` expires before the notification of the `FrTSyn_IcvVerificationIndication` callback

the Time Slave shall :

- stop the `ICV` verification and consider the `ICV` verification as failed,
- call `IdsM_SetSecurityEventWithContextData` with parameter `EventId` set to `FRTSYN_SEV_ICV_VERIFICATION_FAILED` (refer to [\[SWS_FrTSyn_00103\]](#))

] ([RS_TS_20074](#))

7.5.3.6 Message Disassembling

[SWS_FrTSyn_00056] [For each received Time Synchronization message the `FrTSyn` shall validate the message as follows (all conditions must match):

1. `Type` matches depending on the `FrTSynRxCrcValidated` parameter
2. `sc` value is within the accepted range (refer to [\[SWS_FrTSyn_00048\]](#) and [\[SWS_FrTSyn_00049\]](#))
3. `D` matches to the defined Time Domain range for each `Type`
4. `D` matches to one of the configured Time Domains
5. `SyncTimeNSec` (SYNC message) or `OfsTimeNSec` (OFS message) matches the defined range of `StbM_TimeStampType.nanoseconds`.
6. `CRC` (including `DataID`) matches depending on the `FrTSynRxCrcValidated` parameter.
7. `ICV` verification is successful, depending on the `FrTSynRxIcvVerificationType` parameter.

]([RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00057] [If the validation of received Time Synchronization message is successful (refer to [\[SWS_FrTSyn_00056\]](#)), the `FrTSyn` shall disassemble the message and forward the global time via `StbM_BusSetGlobalTime` to `StbM`.]([RS_TS_20042](#), [RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00150]{DRAFT} [If the validation of the received Time Synchronization message has failed (refer to [\[SWS_FrTSyn_00056\]](#)), the `FrTSyn` shall discard the message.]([RS_TS_20042](#), [RS_TS_20043](#), [RS_TS_20044](#))

7.6 Time Recording

7.6.1 Global Time Measurement Support

[SWS_FrTSyn_00092] [On an invocation of `StbM_BusSetGlobalTime` the member `pathDelay` of the `measureDataPtr` structure shall be set to 0.]([RS_TS_00034](#))

7.6.2 Time Validation

[SWS_FrTSyn_00096] [The `FrTSyn` shall support Time Validation, if `FrTSyn-TimeValidationSupport` set to `TRUE`.]([RS_TS_00034](#))

[SWS_FrTSyn_00097] [
If

- `FrTSynTimeValidationSupport` is enabled and
- `FrTSynEnableTimeValidation` for the Time Domain is enabled

`FrTSyn` shall do time recording for Time Validation for that Time Domain.
] ([RS_TS_00034](#))

[SWS_FrTSyn_00098] [
If

- time recording for Time Validation is enabled for a Time Domain (refer to [\[SWS_FrTSyn_00096\]](#) and [\[SWS_FrTSyn_00097\]](#)) and
- `FrTSyn` is configured as Time Slave for that Time Domain,

`FrTSyn` shall call `StbM_FrSetSlaveTimingData` upon successful reception of a SYNC message.

`StbM_FrSetSlaveTimingData` shall be called after `StbM_BusSetGlobalTime`.]
([RS_TS_00034](#))

Note: `StbM_BusSetGlobalTime` shall be called first, because it updates the Sync-local Time Tuple (refer to [\[5\]](#)), which is required by `StbM_FrSetSlaveTimingData`. Refer to figure [9.2](#) for the overall sequence of API calls for a Time Slave.

[SWS_FrTSyn_00099] [Upon invocation of `StbM_FrSetSlaveTimingData` `FrTSyn` shall pass following values

- the Sequence Counter as received in the SYNC message,
- the segment id of the physical channel on which the SYNC message has been received (refer to parameter `FrTSynGlobalTimeNetworkSegmentId`)
- `currentCycle` and `currentMacroticks` and `FCNT` as read upon reception of the SYNC message (refer to step 2 in [\[SWS_FrTSyn_00046\]](#)),
- `CycleLength` and `MacrotickDuration`
- the Sync ingress timestamp $T1_{VLT}$ as retrieved in step 1 in [\[SWS_FrTSyn_00046\]](#))
- $T0$ as received in the SYNC message (refer to step 1 in [\[SWS_FrTSyn_00046\]](#)),

by the parameter `measureDataPtr`.

Struct members

- `measureDataPtr→referenceLocalTimestamp` and
- `measureDataPtr→referenceGlobalTimestamp`

shall be passed as 0.] ([RS_TS_00034](#))

Note: `MacrotickDuration` is calculated as $CycleLength / MacroticksPerCycle$

Note: The `FrTSyn` passes 0 to avoid undefined values. The structure members `referenceLocalTimestamp` and `referenceGlobalTimestamp` will be set by the `StbM StbM_FrSetSlaveTimingData` internally (refer to [SWS_StbM_00471] in [5]).

[SWS_FrTSyn_00100] [
If

- time recording for Time Validation is enabled for a Time Domain (refer to [SWS_FrTSyn_00096] and [SWS_FrTSyn_00097]) and
- `FrTSyn` is configured as Time Master for that Time Domain,

`FrTSyn` shall call `StbM_FrSetMasterTimingData` upon successful transmission of a SYNC message. (RS_TS_00034)

Note: Refer to figure 9.1 for the overall sequence of API calls for a Time Master.

[SWS_FrTSyn_00101] [Upon invocation of `StbM_FrSetMasterTimingData` `FrTSyn` shall pass the following data

- the Sequence Counter as sent in the SYNC message
- the segment id of the physical channel on which the SYNC message has been sent (refer to parameter `FrTSynGlobalTimeNetworkSegmentId`)
- `currentCycle` and `currentMacroticks` read upon construction of the Sync message (refer to step 2 in [SWS_FrTSyn_00028]),
- `cycleLength` and `macrotickDuration`
- the reference timestamp $T1_{VLT}$ (refer to step 2 In [SWS_FrTSyn_00028]),
- $T0$ as sent in the SYNC message (refer to step 3 In [SWS_FrTSyn_00028]),

by the parameter `measureDataPtr`. (RS_TS_00034)

7.7 Security Events

[SWS_FrTSyn_00105]{DRAFT} [If security event reporting has been enabled for the `FrTSyn` module (`FrTSynEnableSecurityEventReporting` = `true`) the respective security events shall be reported to the `IdsM` [8] via the interfaces defined in `BSWGeneral` [3].] (RS_Ids_00810)

The following table lists the security events which are standardized for the `FrTSyn` together with their trigger conditions.

[SWS_FrTSyn_00103] Security events for FrTSyn [

<i>Name</i>	<i>Description</i>	<i>ID</i>
FRTSYN_SEV_ICV_GENERATION_FAILED	ICV generation for a Sync message failed	70
FRTSYN_SEV_ICV_VERIFICATION_FAILED	ICV verification of a received Sync message failed	71
FRTSYN_SEV_FRESHNESS_NOT_AVAILABLE	Failed to get freshness value from FvM	72

]([RS_Ids_00810](#))

The following table describes the context data which shall be reported for the respective security events:

[SWS_FrTSyn_00104]{DRAFT} Context data of respective Security events of FrTSyn [

<i>Security Event</i>	<i>Context Data</i>
FRTSYN_SEV_ICV_GENERATION_FAILED	Context Data (1 byte) - GlobalTimeDomainId
FRTSYN_SEV_ICV_VERIFICATION_FAILED	Context Data (1 byte) - GlobalTimeDomainId
FRTSYN_SEV_FRESHNESS_NOT_AVAILABLE	Context Data (1 byte) - GlobalTimeDomainId

]([RS_Ids_00810](#))

7.8 Error Classification

Section 7.2 "Error Handling" of the document "General Specification of Basic Software Modules" [3] describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

7.8.1 Development Errors

[SWS_FrTSyn_00059] [

<i>Type of error</i>	<i>Related error code</i>	<i>Error value</i>
API service called with wrong PDU or SDU.	FRTSYN_E_INVALID_PDUID	0x01
API service used in un-initialized state	FRTSYN_E_UNINIT	0x20
A pointer is invalid	FRTSYN_E_NULL_POINTER	0x21
FrTSyn initialization failed	FRTSYN_E_INIT_FAILED	0x22
API called with invalid parameter	FRTSYN_E_PARAM	0x23
Invalid Controller index	FRTSYN_E_INV_CTRL_IDX	0x24

]([SRS_BSW_00385](#))

7.8.2 Runtime Errors

[SWS_FrTSyn_91000] [

<i>Type of error</i>	<i>Related error code</i>	<i>Error value</i>
No FV available from the FVM	FRTSYN_E_FRESHNESSFAILURE	0x01

]([SRS_BSW_00385](#))

7.8.3 Transient Faults

There are no transient faults.

7.8.4 Production Errors

There are no production errors.

7.8.5 Extended Production Errors

There are no extended production errors.

8 API specification

8.1 API

8.1.1 Imported types

In this section all types included from the following modules are listed:

[SWS_FrTSyn_00060] [

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
ComStack_Types	ComStack_Types.h	PdulType
	ComStack_Types.h	PdulInfoType
	ComStack_Types.h	PduLengthType
Csm	Rte_Csm_Type.h	Crypto_OperationModeType
	Rte_Csm_Type.h	Crypto_ResultType
	Rte_Csm_Type.h	Crypto_VerifyResultType
FrIf	FrIf.h	FrIf_StateType
IdsM	IdsM_Types.h	IdsM_SecurityEventIdType
StbM	Rte_StbM_Type.h	StbM_FrTimeMasterMeasurementType
	Rte_StbM_Type.h	StbM_FrTimeSlaveMeasurementType
	Rte_StbM_Type.h	StbM_SynchronizedTimeBaseType
	Rte_StbM_Type.h	StbM_TimeBaseStatusType
	Rte_StbM_Type.h	StbM_TimeStampShortType
	Rte_StbM_Type.h	StbM_TimeStampType
	Rte_StbM_Type.h	StbM_TimeTupleType
	Rte_StbM_Type.h	StbM_UserDataType
	StbM.h	StbM_MeasurementType
	StbM.h	StbM_VirtualLocalTimeType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

] ([RS_TS_20043](#))

8.1.2 Type definitions

8.1.2.1 FrTSyn_ConfigType

[SWS_FrTSyn_00061] [

Name	FrTSyn_ConfigType	
Kind	Structure	
Elements	implementation specific	
	Type	–





	Comment	–	
Description	<p>This is the base type for the configuration of the Time Synchronization over FlexRay.</p> <p>A pointer to an instance of this structure will be used in the initialization of the Time Synchronization over FlexRay.</p> <p>The content of this structure is defined in chapter 10 Configuration specification.</p>		
Available via	FrTSyn.h		

]([RS_TS_20043](#))

8.1.2.2 FrTSyn_TransmissionModeType

[SWS_FrTSyn_00062] [

Name	FrTSyn_TransmissionModeType		
Kind	Enumeration		
Range	FRTSYN_TX_OFF	–	Transmission Disabled
	FRTSYN_TX_ON	–	Transmission Enabled
Description	Handles the enabling and disabling of the transmission mode		
Available via	FrTSyn.h		

]([RS_TS_20043](#))

8.1.3 Function definitions

8.1.3.1 FrTSyn_Init

[SWS_FrTSyn_00063] [

Service Name	FrTSyn_Init	
Syntax	<pre>void FrTSyn_Init (const FrTSyn_ConfigType* configPtr)</pre>	
Service ID [hex]	0x01	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	configPtr	Pointer to selected configuration structure
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This function initializes the Time Synchronization over FlexRay.	
Available via	FrTSyn.h	

]([RS_TS_20043](#))

See section [7.2.1](#) for details.

8.1.3.2 FrTSyn_GetVersionInfo

[SWS_FrTSyn_00064] [

Service Name	FrTSyn_GetVersionInfo	
Syntax	<pre>void FrTSyn_GetVersionInfo (Std_VersionInfoType* versioninfo)</pre>	
Service ID [hex]	0x02	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	versioninfo	Pointer to where to store the version information of this module.
Return value	None	
Description	Returns the version information of this module.	
Available via	FrTSyn.h	

](RS_TS_20043)

8.1.3.3 FrTSyn_SetTransmissionMode

[SWS_FrTSyn_00065] [

Service Name	FrTSyn_SetTransmissionMode	
Syntax	<pre>void FrTSyn_SetTransmissionMode (uint8 CtrlIdx, FrTSyn_TransmissionModeType Mode)</pre>	
Service ID [hex]	0x03	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the FlexRay channel
	Mode	FRTSYN_TX_OFF FRTSYN_TX_ON
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This API is used to turn on and off the TX capabilities of the FrTSyn.	
Available via	FrTSyn.h	

](RS_TS_20043)

[SWS_FrTSyn_00095] [The function [FrTSyn_SetTransmissionMode](#) shall inform the [Det](#), if development error detection is enabled ([FrTSynDevErrorDetect](#) is set to TRUE) and if function call has failed because of the following reasons:

- Invalid CtrlIdx ([FRTSYN_E_INV_CTRL_IDX](#))
- Invalid Mode ([FRTSYN_E_PARAM](#))

](SRS_BSW_00323, SRS_BSW_00337)

8.1.4 Call-back notifications

This is a list of functions provided for other modules.

8.1.4.1 FrTSyn_RxIndication

[SWS_FrTSyn_00066] [

Service Name	FrTSyn_RxIndication	
Syntax	<pre>void FrTSyn_RxIndication (PduIdType RxPduId, const PduInfoType* PduInfoPtr)</pre>	
Service ID [hex]	0x42	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different PduIds. Non reentrant for the same PduId.	
Parameters (in)	RxPduId	ID of the received PDU.
	PduInfoPtr	Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Indication of a received PDU from a lower layer communication interface module.	
Available via	FrTSyn.h	

]([RS_TS_20043](#))

Note: The callback function [FrTSyn_RxIndication](#) called by the [FrIf](#) module and implemented by the [FrTSyn](#) module. It is called in case of a receive indication event of the [FR](#) Driver.

[SWS_FrTSyn_00067] [The callback function [FrTSyn_RxIndication](#) shall inform the [Det](#), if development error detection is enabled [FrTSynDevErrorDetect](#) is set to TRUE) and if function call has failed because of the following reasons:

- Invalid [RxPduId](#) ([FRTSYN_E_INVALID_PDUID](#))
- [PduInfoPtr](#) or [SduDataPtr](#) equals `NULL_PTR` ([FRTSYN_E_NULL_POINTER](#))

]([SRS_BSW_00323](#), [SRS_BSW_00337](#))

Caveats of [FrTSyn_RxIndication](#)

- The [FrTSyn](#) module is initialized correctly.

8.1.4.2 FrTSyn_TriggerTransmit

[SWS_FrTSyn_00069] [

Service Name	FrTSyn_TriggerTransmit	
Syntax	Std_ReturnType FrTSyn_TriggerTransmit (PduIdType TxPduId, PduInfoType* PduInfoPtr)	
Service ID [hex]	0x41	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different PduIds. Non reentrant for the same PduId.	
Parameters (in)	TxPduId	ID of the SDU that is requested to be transmitted.
Parameters (inout)	PduInfoPtr	Contains a pointer to a buffer (SduDataPtr) to where the SDU data shall be copied, and the available buffer size in SduLength. On return, the service will indicate the length of the copied SDU data in SduLength.
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: SDU has been copied and SduLength indicates the number of copied bytes. E_NOT_OK: No SDU data has been copied. PduInfoPtr must not be used since it may contain a NULL pointer or point to invalid data.
Description	Within this API, the upper layer module (called module) shall check whether the available data fits into the buffer size reported by PduInfoPtr->SduLength. If it fits, it shall copy its data into the buffer provided by PduInfoPtr->SduDataPtr and update the length of the actual copied data in PduInfoPtr->SduLength. If not, it returns E_NOT_OK without changing PduInfoPtr.	
Available via	FrTSyn.h	

](RS_TS_20043)

Note: The function `FrTSyn_TriggerTransmit` might be called by the `FrTSyn` module's environment in an interrupt context.

[SWS_FrTSyn_00070] [The callback function `FrTSyn_TriggerTransmit` shall inform the `Det`, if development error detection is enabled `FrTSynDevErrorDetect` is set to `TRUE`) and if function call has failed because of the following reasons:

- Invalid `TxPduId` (`FRTSYN_E_INVALID_PDUID`)
- `PduInfoPtr` or `SduDataPtr` equals `NULL_PTR` (`FRTSYN_E_NULL_POINTER`)

](SRS_BSW_00323, SRS_BSW_00337)

8.1.4.3 FrTSyn_IcvGenerationIndication

[SWS_FrTSyn_91001]{DRAFT} [

Service Name	FrTSyn_IcvGenerationIndication (draft)	
Syntax	<pre>void FrTSyn_IcvGenerationIndication (uint32 jobId, Crypto_ResultType result)</pre>	
Service ID [hex]	0x5	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	jobId	JobID of the operation that caused the callback.
	result	Contains the result of the cryptographic operation.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	By this API service the FrTSyn gets an indication and the result of ICV generation. Tags: atp.Status=draft	
Available via	FrTSyn.h	

]([RS_TS_20074](#))

[SWS_FrTSyn_00151]{DRAFT} [The function [FrTSyn_IcvGenerationIndication](#) shall inform the [Det](#), if development error detection is enabled ([FrTSynDevErrorDetect](#) is set to TRUE) and if the function call has failed because of the following reasons:

- jobId is invalid ([FRTSYN_E_PARAM](#))

]([SRS_BSW_00323](#), [SRS_BSW_00337](#))

8.1.4.4 FrTSyn_IcvVerificationIndication

[SWS_FrTSyn_91002]{DRAFT} [

Service Name	FrTSyn_IcvVerificationIndication (draft)	
Syntax	<pre>void FrTSyn_IcvVerificationIndication (uint32 jobId, Crypto_ResultType result)</pre>	
Service ID [hex]	0x6	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	jobId	JobID of the operation that caused the callback.
	result	Contains the result of the cryptographic operation.
Parameters (inout)	None	
Parameters (out)	None	





Return value	None
Description	By this API service the FrTSyn gets an indication and the result of ICV verification. Tags: atp.Status=draft
Available via	FrTSyn.h

](RS_TS_20074)

[SWS_FrTSyn_00152]{DRAFT} [The function `FrTSyn_IcvVerificationIndication` shall inform the `Det`, if development error detection is enabled (`FrTSyn-DevErrorDetect` is set to `TRUE`) and if the function call has failed because of the following reasons:

- `jobId` is invalid (`FRTSYN_E_PARAM`)

](SRS_BSW_00323, SRS_BSW_00337)

8.1.5 Scheduled functions

These functions are directly called by the Basic Software Scheduler. The following functions shall have no return value and no parameters. All functions shall be non-reentrant.

8.1.5.1 FrTSyn_MainFunction

[SWS_FrTSyn_00071] [

Service Name	FrTSyn_MainFunction
Syntax	<code>void FrTSyn_MainFunction (</code> <code>void</code> <code>)</code>
Service ID [hex]	0x04
Description	Main function for cyclic call / resp. Timesync message transmission
Available via	FrTSyn_SchM.h

](RS_TS_20043)

[SWS_FrTSyn_00072] [The frequency of invocations of `FrTSyn_MainFunction` is determined by the configuration parameter `FrTSynMainFunctionPeriod`.
](RS_TS_20043)

8.1.6 Expected Interfaces

In this section, all interfaces required by other modules are listed.

8.1.6.1 Mandatory Interfaces

This section defines all interfaces that are required to fulfill a mandatory functionality of the module.

[SWS_FrTSyn_00074] [

API Function	Header File	Description
Frlf_GetCycleLength	Frlf.h	This API returns the configured time of the configuration parameter "GdCycle" in nanoseconds for the FlexRay controller with index Frlf_CtrlIdx.
Frlf_GetGlobalTime	Frlf.h	Wraps the FlexRay Driver API function Fr_GetGlobalTime(). Important Note: Frlf_GetGlobalTime may be called within an exclusive area.
Frlf_GetMacroticksPerCycle	Frlf.h	Retrieves the amount of Macroticks per Cycle
Frlf_GetState	Frlf.h	Get current Frlf state.
StbM_GetCurrentVirtualLocalTime	StbM.h	Returns the Virtual Local Time of the referenced Time Base.

](RS_TS_20043)

8.1.6.2 Optional Interfaces

This section defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS_FrTSyn_00075] [

API Function	Header File	Description
Crc_CalculateCRC8H2F	Crc.h	This service makes a CRC8 calculation with the Polynomial 0x2F on Crc_Length
Csm_MacGenerate	Csm.h	Uses the given data to perform a MAC generation and stores the MAC in the memory location pointed to by the MAC pointer.
Csm_MacVerify	Csm.h	Verifies the given MAC by comparing if the MAC is generated with the given data.
Csm_SignatureGenerate	Csm.h	Uses the given data to perform the signature calculation and stores the signature in the memory location pointed by the result pointer.
Csm_SignatureVerify	Csm.h	Verifies the given MAC by comparing if the signature is generated with the given data.
Det_ReportError	Det.h	Service to report development errors.
Det_ReportRuntimeError	Det.h	Service to report runtime errors. If a callout has been configured then this callout shall be called.
Frlf_Transmit	Frlf.h	Requests transmission of a PDU.
IdsM_SetSecurityEventWithContextData	IdsM.h	This API is the application interface to report security events with context data to the IdsM.
StbM_BusSetGlobalTime	StbM.h	Allows the Time Base Provider Modules to forward the Rx Time Tuple to the StbM.





API Function	Header File	Description
StbM_FrSetMasterTimingData (draft)	StbM_FrTSyn.h	Provides Flexray Timesyn module specific data for a Time Master to the StbM. Tags: atp.Status=draft
StbM_FrSetSlaveTimingData (draft)	StbM_FrTSyn.h	Allows the FrTSyn Module to forward Flexray specific details to the StbM. Tags: atp.Status=draft
StbM_GetCurrentTime	StbM.h	Returns a time value (Local Time Base derived from Global Time Base) in standard format. Note: This API shall be called with locked interrupts / within an Exclusive Area to prevent interruption (i.e., the risk that the time stamp is outdated on return of the function call).
StbM_GetOffset	StbM.h	Allows the Timesync Modules to get the current Offset Time and User Data.
StbM_GetRxFreshness (draft)	StbM.h	This interface is used by the StbM to query the current freshness value. Tags: atp.Status=draft
StbM_GetTimeBaseStatus	StbM.h	Returns detailed status information for a Synchronized (or Pure Local) Time Base and, if called for an Offset Time Base, for the Offset Time Base and the underlying Synchronized Time Base.
StbM_GetTimeBaseUpdateCounter	StbM.h	Allows the Timesync Modules to detect, whether a Time Base should be transmitted immediately in the subsequent <Bus>TSyn_MainFunction() cycle.
StbM_GetTxFreshness (draft)	StbM.h	This API returns the freshness value from the Most Significant Bits in the first byte, of the Freshness array, in big endian format. Tags: atp.Status=draft
StbM_GetTxFreshnessTruncData (draft)	StbM.h	This interface is used by the StbM to obtain the current freshness value. The interface function provides also the truncated freshness transmitted in the secured PDU. Tags: atp.Status=draft
StbM_SPduTxConfirmation (draft)	StbM.h	This interface is used by the StbM to indicate that the Secured Time Synchronization Message has been initiated for transmission. Tags: atp.Status=draft

|(RS_TS_20043)

9 Sequence diagrams

9.1 FlexRay Time Synchronization (Time Master)

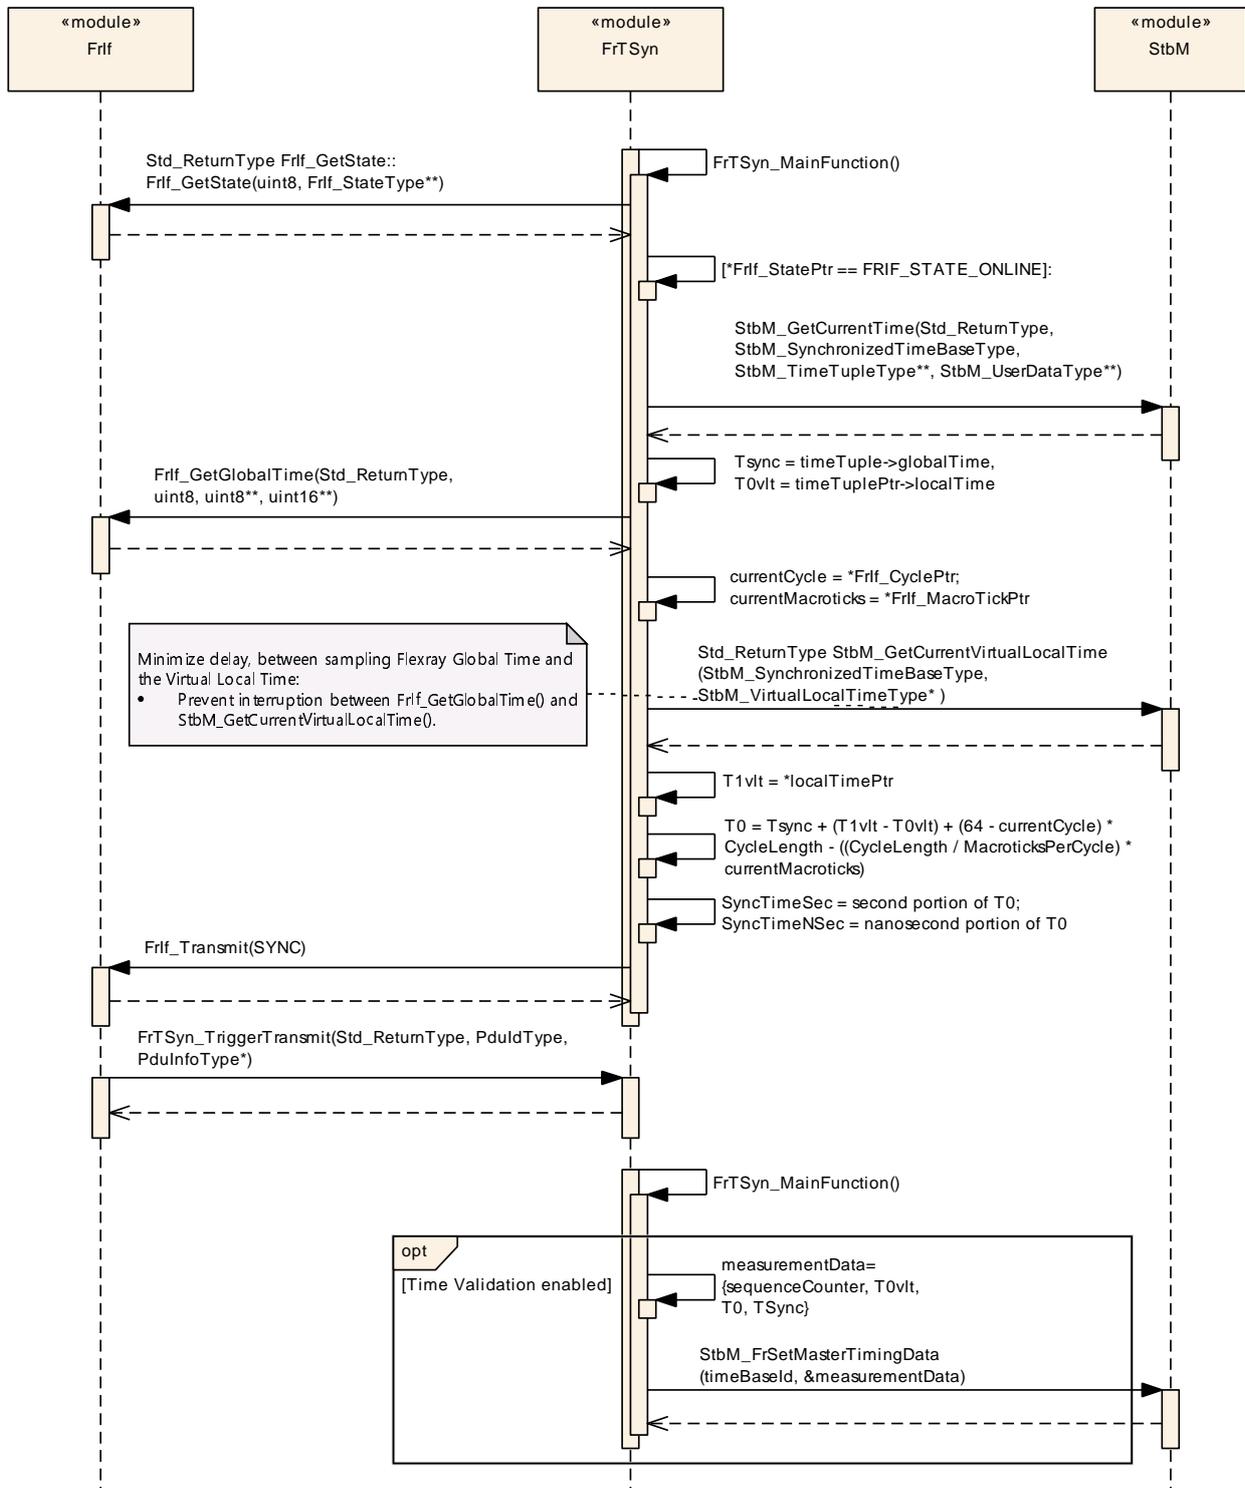


Figure 9.1: FlexRay Time Synchronization (Time Master)

9.2 FlexRay Time Synchronization (Time Slave)

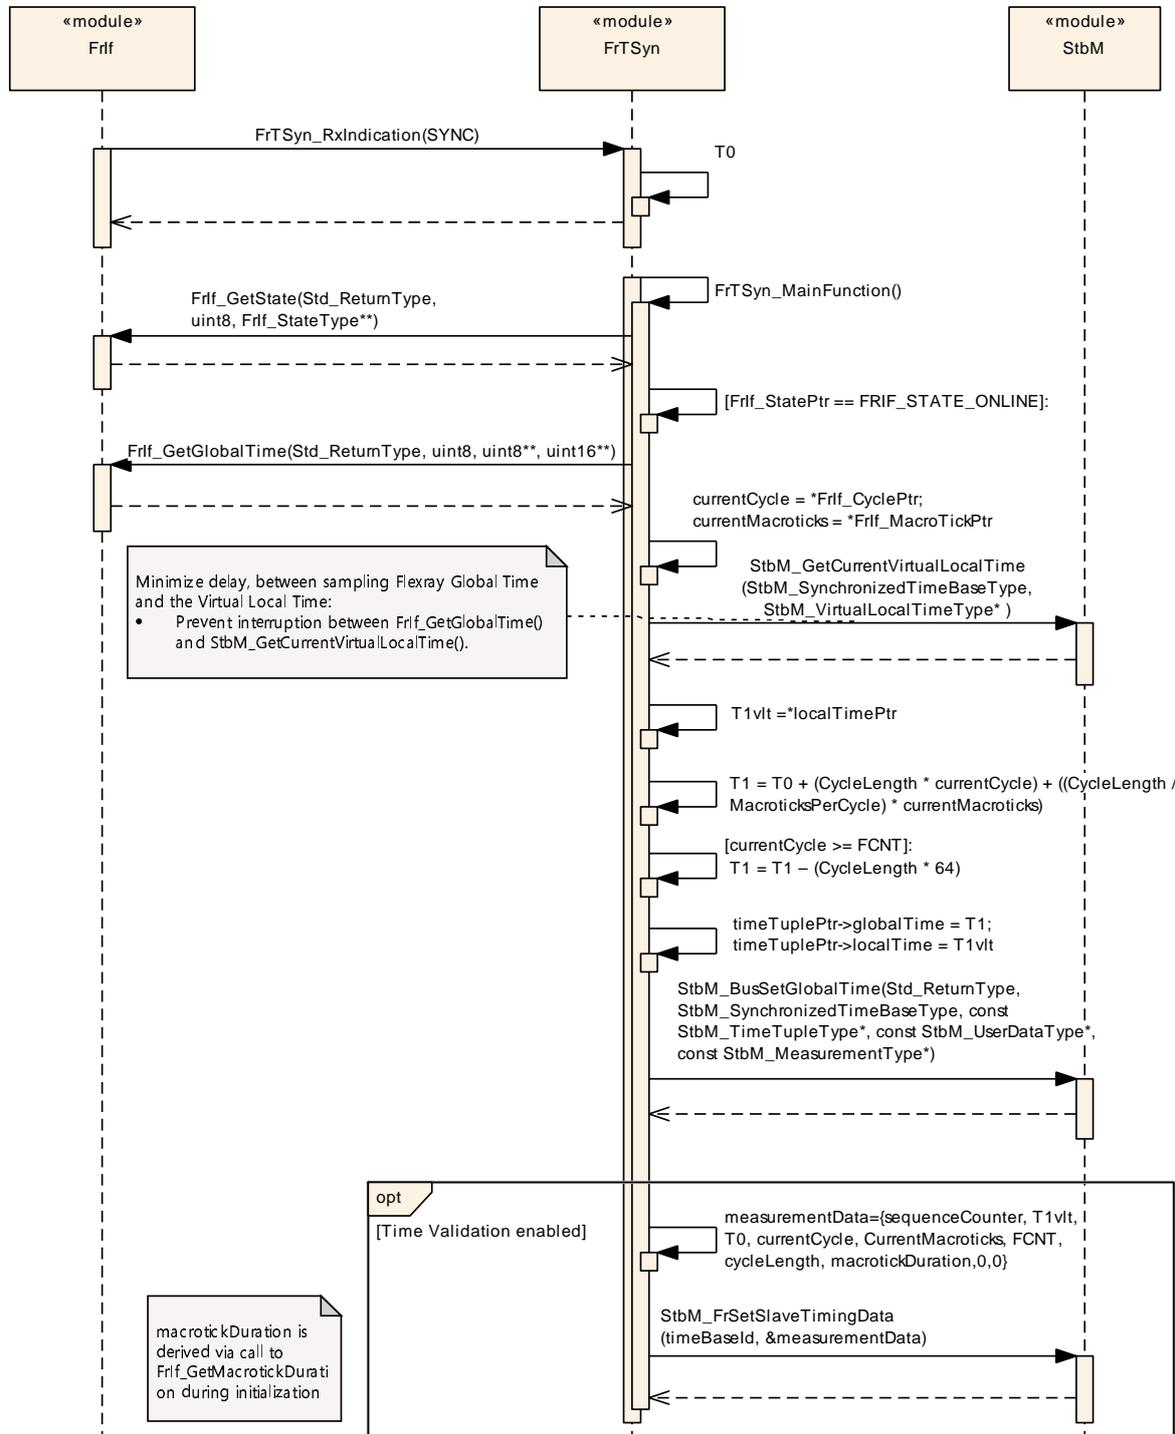


Figure 9.2: FlexRay Time Synchronization (Time Slave)

9.3 FlexRay Secure Time Synchronization Sequence

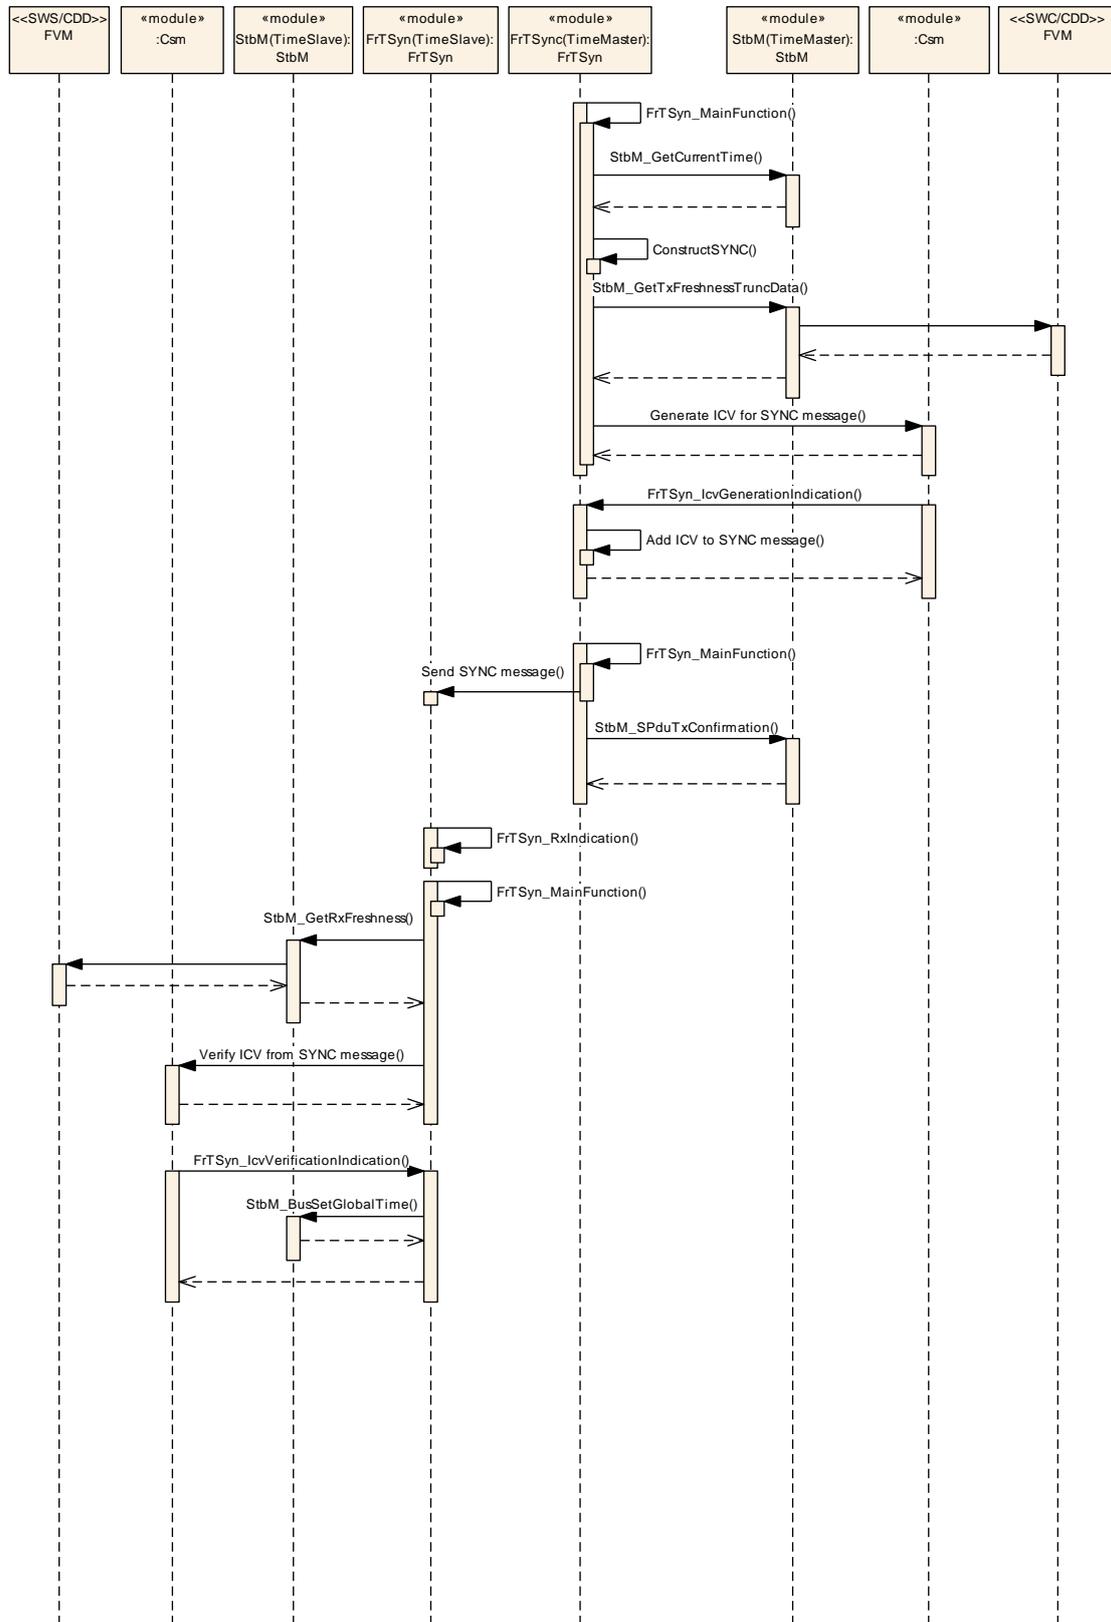


Figure 9.3: FlexRay Secure Time Synchronization Sequence

10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification section 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave section 10.1 in the specification to guarantee comprehension.

Section 10.2 specifies the structure (containers) and the parameters of the Time Synchronization over FlexRay.

Section 10.4 specifies published information of the Time Synchronization over FlexRay.

10.1 How to read this chapter

For details, refer to the chapter 10.1 "Introduction to configuration specification" in SWS BSW General [3].

10.2 Containers and configuration parameters

The following sections summarize all configuration parameters of the Time Synchronization over FlexRay. The detailed meaning of the parameters is described in chapters 7 and 8.

10.2.1 Variants

[SWS_FrTSyn_00077] [The Time Synchronization over FlexRay shall support the configuration for Time Master, Time Slave and Time Gateway.] ([RS_TS_20046](#))

The module supports different post-build variants (previously known as post-build selectable configuration sets), but not post-build loadable configuration.

10.2.2 FrTSyn

SWS Item	[ECUC_FrTSyn_00001]
Module Name	FrTSyn
Description	This represents the specific configuration variant for the TSyn on Flexray.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGeneral	1	This container holds the general parameters of the Flexray-specific Synchronized Time-base Manager
FrTSynGlobalTimeDomain	1..*	This represents the existence of a global time domain on Flexray. The FrTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains. If the FrTSyn exists it is assumed that at least one global time domain exists.

10.2.3 FrTSynGeneral

SWS Item	[ECUC_FrTSyn_00003]
Container Name	FrTSynGeneral
Parent Container	FrTSyn
Description	This container holds the general parameters of the Flexray-specific Synchronized Time-base Manager
Configuration Parameters	

SWS Item	[ECUC_FrTSyn_00002]		
Parameter Name	FrTSynDevErrorDetect		
Parent Container	FrTSynGeneral		
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> true: detection and notification is enabled. false: detection and notification is disabled. 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00044]		
Parameter Name	FrTSynEnableSecurityEventReporting		
Parent Container	FrTSynGeneral		
Description	Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	





	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00016]		
Parameter Name	FrTSynMainFunctionPeriod		
Parent Container	FrTSynGeneral		
Description	Schedule period of the main function FrTSyn_MainFunction. Unit: [s].		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00040]		
Parameter Name	FrTSynTimeValidationSupport		
Parent Container	FrTSynGeneral		
Description	Switches support for Time Validation on or off. <ul style="list-style-type: none"> • true: Time Validation is enabled. • false: Time Validation is disabled. 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00019]		
Parameter Name	FrTSynVersionInfoApi		
Parent Container	FrTSynGeneral		
Description	Activate/Deactivate the version information API (FrTSyn_GetVersionInfo). True: version information API activated False: version information API deactivated.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynSecurityEventRefs	0..1	<p>Container for the references to IdsMEvent elements representing the security events that the FrTSyn module shall report to the Ids M in case the corresponding security related event occurs (and if FrTSynEnableSecurityEventReporting is set to true). The standardized security events in this container can be extended by vendor-specific security events.</p> <p>Tags: atp.Status=draft</p>

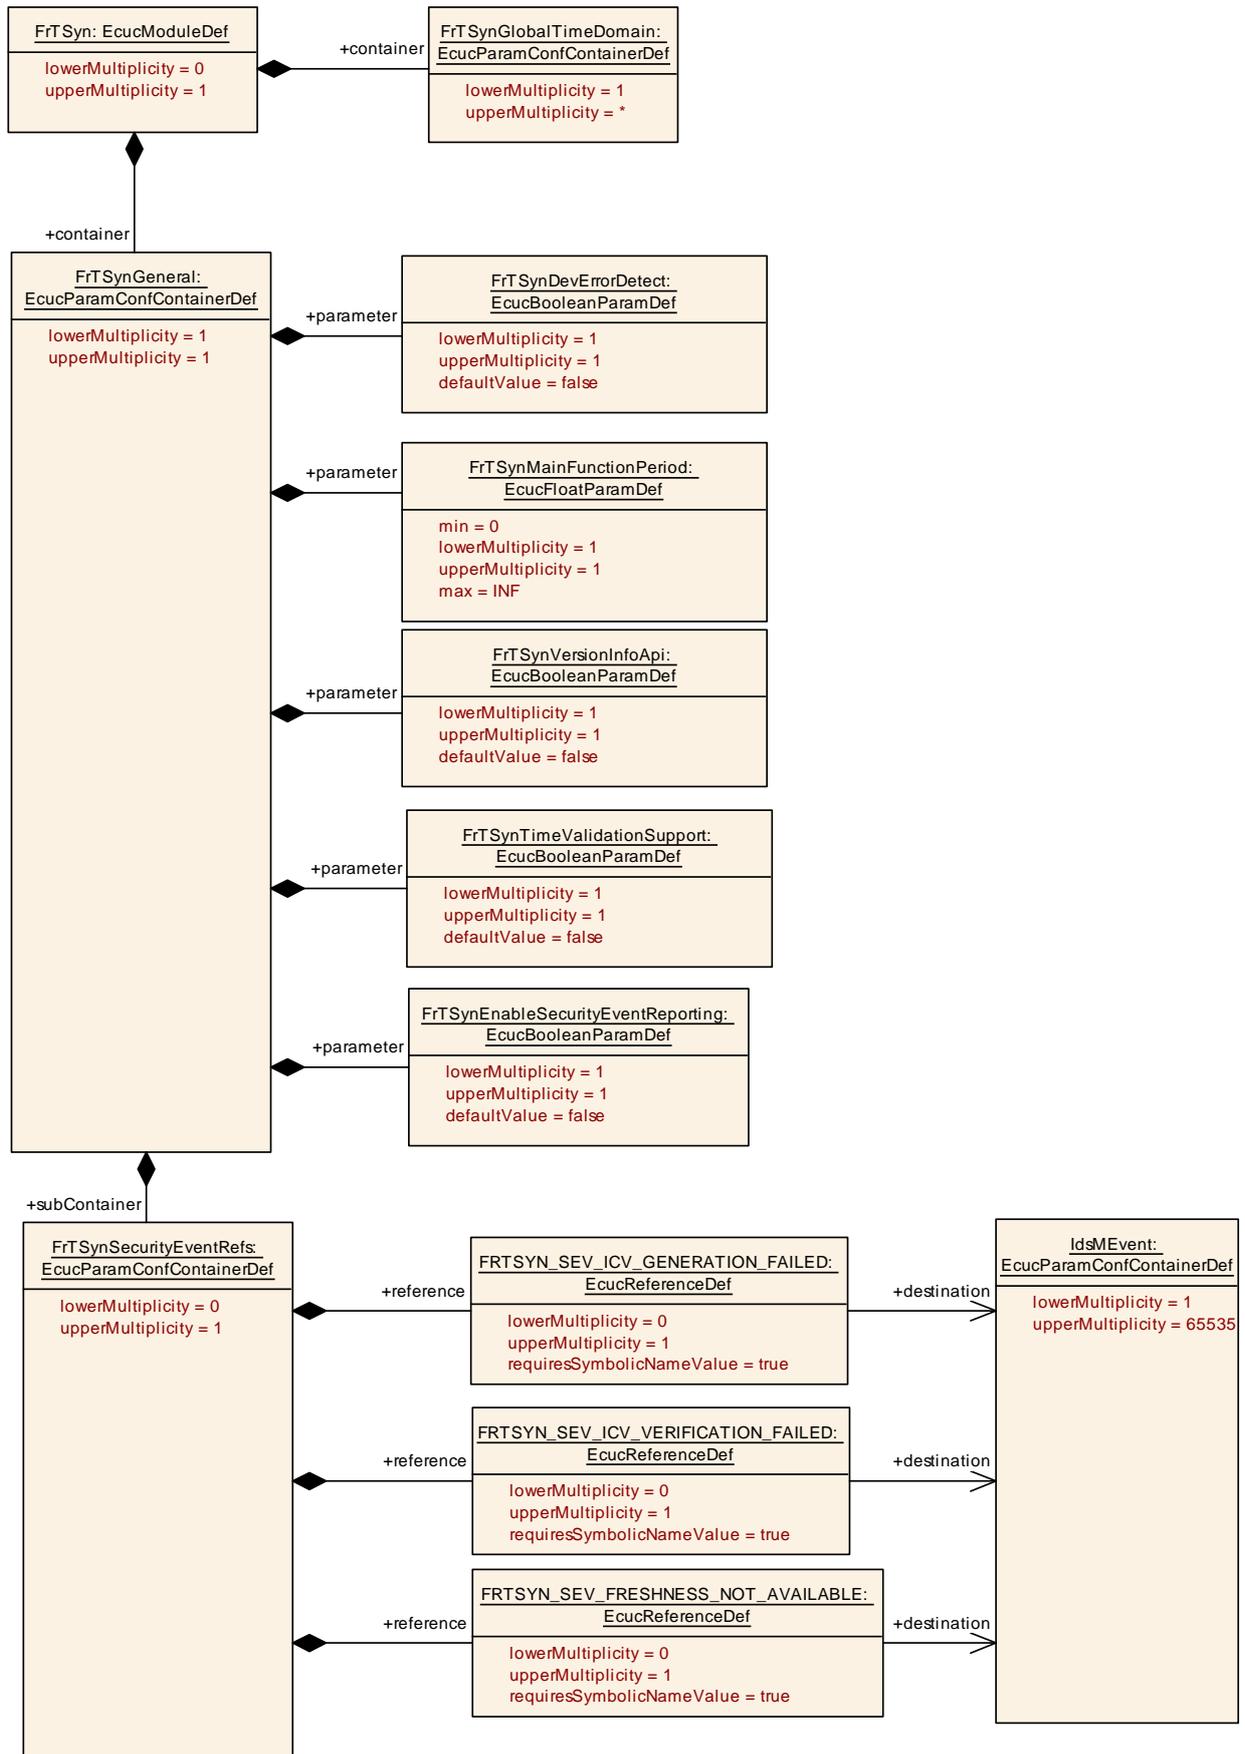


Figure 10.1: FrTSynGeneral

10.2.4 FrTSynSecurityEventRefs

SWS Item	[ECUC_FrTSyn_00063]		
Container Name	FrTSynSecurityEventRefs		
Parent Container	FrTSynGeneral		
Description	<p>Container for the references to IdsMEvent elements representing the security events that the FrTSyn module shall report to the IdsM in case the corresponding security related event occurs (and if FrTSynEnableSecurityEventReporting is set to true). The standardized security events in this container can be extended by vendor-specific security events.</p> <p>Tags: atp.Status=draft</p>		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00047]		
Parameter Name	FRTSYN_SEV_FRESHNESS_NOT_AVAILABLE		
Parent Container	FrTSynSecurityEventRefs		
Description	<p>FV not available from FVM. Context data provides the respective domain ID.</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	0..1		
Type	Symbolic name reference to IdsMEvent		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00045]		
Parameter Name	FRTSYN_SEV_ICV_GENERATION_FAILED		
Parent Container	FrTSynSecurityEventRefs		
Description	<p>ICV generation for SYNC message failed. Context data provides the respective domain ID</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	0..1		
Type	Symbolic name reference to IdsMEvent		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants





	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00046]		
Parameter Name	FRTSYN_SEV_ICV_VERIFICATION_FAILED		
Parent Container	FrTSynSecurityEventRefs		
Description	ICV verification for SYNC message failed. Context data provides the respective domain ID. Tags: atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to IdsMEvent		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.2.5 FrTSynGlobalTimeDomain

SWS Item	[ECUC_FrTSyn_00004]		
Container Name	FrTSynGlobalTimeDomain		
Parent Container	FrTSyn		
Description	This represents the existence of a global time domain on Flexray. The FrTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains. If the FrTSyn exists it is assumed that at least one global time domain exists.		
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00041]		
Parameter Name	FrTSynEnableTimeValidation		
Parent Container	FrTSynGlobalTimeDomain		
Description	Enables/disables time recording for Time Validation for a specific Time Domain.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	





	Post-build time	–	
Scope / Dependency	scope: local dependency: Only valid if FrTSynTimeValidationSupport is TRUE. Value set according to parameter StbMEnableTimeValidation of the referenced Time Base in the StbM.		

SWS Item	[ECUC_FrTSyn_00005]		
Parameter Name	FrTSynGlobalTimeDomainId		
Parent Container	FrTSynGlobalTimeDomain		
Description	The global time domain ID.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 31		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00042]		
Parameter Name	FrTSynGlobalTimeNetworkSegmentId		
Parent Container	FrTSynGlobalTimeDomain		
Description	This represents the numerical identifier of the network on system level scope where this Global Time has been communicated on.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00018]		
Parameter Name	FrTSynSynchronizedTimeBaseRef		
Parent Container	FrTSynGlobalTimeDomain		
Description	Mandatory reference to the required synchronized time-base.		
Multiplicity	1		
Type	Symbolic name reference to StbMSynchronizedTimeBase		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	



△

	Post-build time	-	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeMaster	0..1	Configuration of the global time master. Each global time domain is required to have exactly one global time master. This master may or may not exist on the configured ECU.
FrTSynGlobalTimeOfsDataIDList	0..1	The DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.
FrTSynGlobalTimeSlave	0..1	This represents the time slave for the enclosing global time domain.
FrTSynGlobalTimeSyncDataIDList	0..1	The DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.

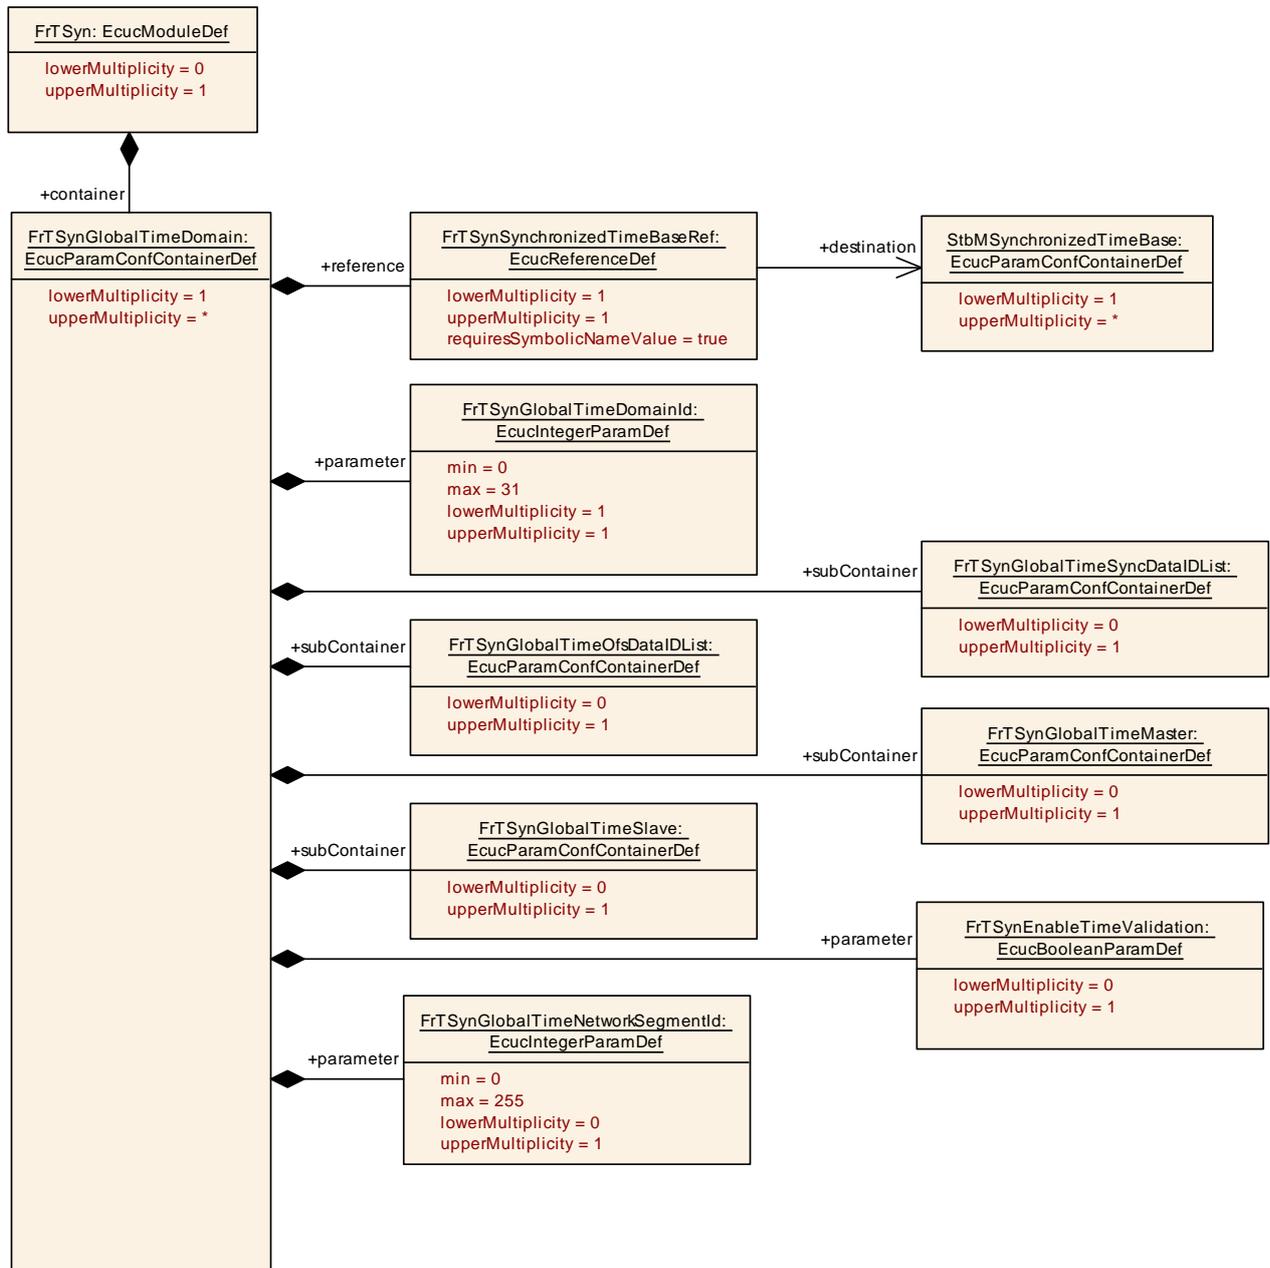


Figure 10.2: FrTSynGlobalTimeDomain

10.2.6 FrTSynGlobalTimeSyncDataIDList

SWS Item	[ECUC_FrTSyn_00023]
Container Name	FrTSynGlobalTimeSyncDataIDList
Parent Container	FrTSynGlobalTimeDomain





Description	The DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeSyncDataIDList Element	16	Element of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.

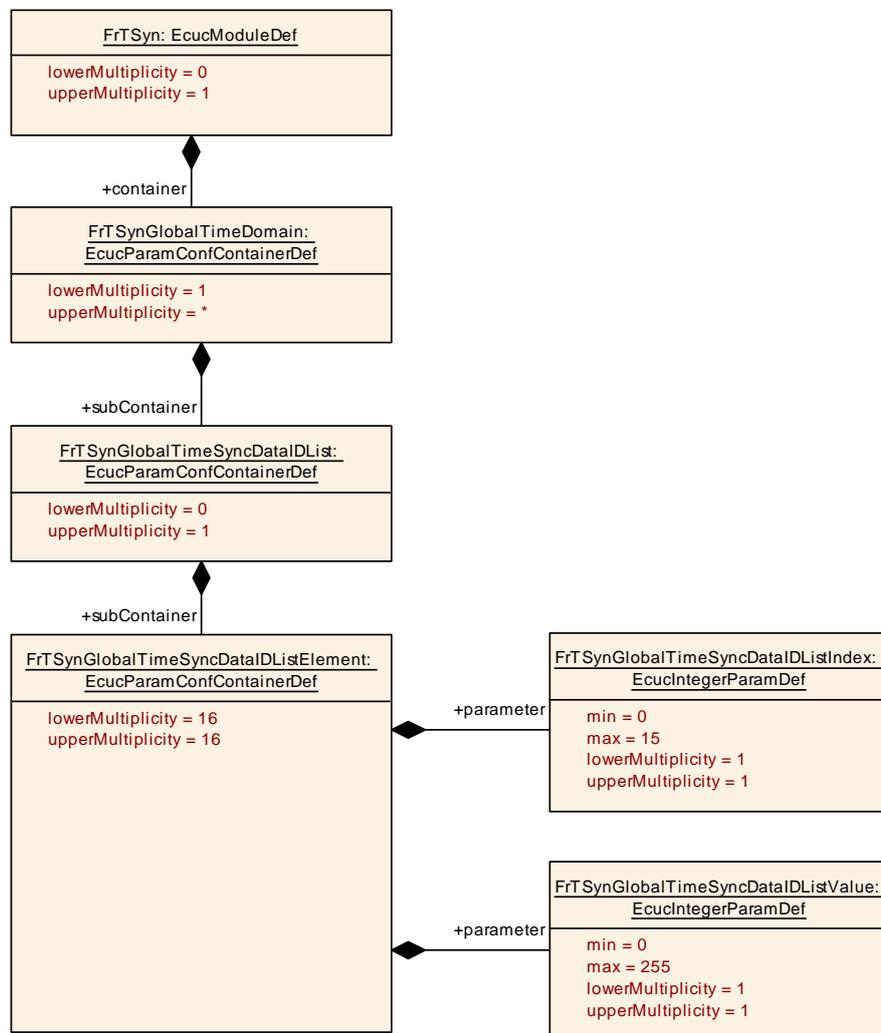


Figure 10.3: FrTSynGlobalTimeSyncDataIDList

10.2.7 FrTSynGlobalTimeSyncDataIDListElement

SWS Item	[ECUC_FrTSyn_00025]
Container Name	FrTSynGlobalTimeSyncDataIDListElement
Parent Container	FrTSynGlobalTimeSyncDataIDList
Description	Element of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.
Configuration Parameters	

SWS Item	[ECUC_FrTSyn_00026]		
Parameter Name	FrTSynGlobalTimeSyncDataIDListIndex		
Parent Container	FrTSynGlobalTimeSyncDataIDListElement		
Description	Index of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00027]		
Parameter Name	FrTSynGlobalTimeSyncDataIDListValue		
Parent Container	FrTSynGlobalTimeSyncDataIDListElement		
Description	Value of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

No Included Containers

10.2.8 FrTSynGlobalTimeOfsDataIDList

SWS Item	[ECUC_FrTSyn_00024]		
Container Name	FrTSynGlobalTimeOfsDataIDList		
Parent Container	FrTSynGlobalTimeDomain		
Description	The DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeOfsDataIDList Element	16	Element of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.

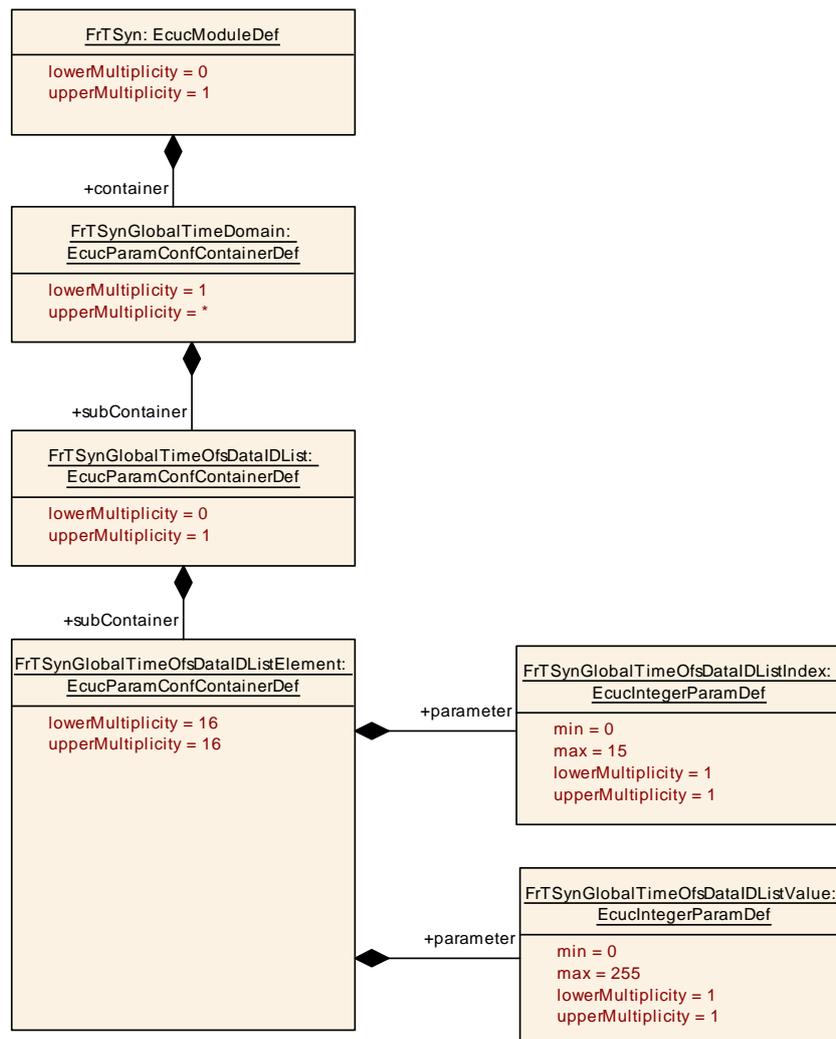


Figure 10.4: FrTSynGlobalTimeOfsDataIDList

10.2.9 FrTSynGlobalTimeOfsDataIDListElement

SWS Item	[ECUC_FrTSyn_00028]
Container Name	FrTSynGlobalTimeOfsDataIDListElement
Parent Container	FrTSynGlobalTimeOfsDataIDList
Description	Element of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.
Configuration Parameters	

SWS Item	[ECUC_FrTSyn_00029]		
Parameter Name	FrTSynGlobalTimeOfsDataIDListIndex		
Parent Container	FrTSynGlobalTimeOfsDataIDListElement		
Description	Index of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00030]		
Parameter Name	FrTSynGlobalTimeOfsDataIDListValue		
Parent Container	FrTSynGlobalTimeOfsDataIDListElement		
Description	Value of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

No Included Containers

10.2.10 FrTSynGlobalTimeMaster

SWS Item	[ECUC_FrTSyn_00006]		
Container Name	FrTSynGlobalTimeMaster		
Parent Container	FrTSynGlobalTimeDomain		
Description	Configuration of the global time master. Each global time domain is required to have exactly one global time master. This master may or may not exist on the configured ECU.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00032]		
Parameter Name	FrTSynCyclicMsgResumeTime		
Parent Container	FrTSynGlobalTimeMaster		
Description	Defines the time where the 1st regular cycle time based message transmission takes place, after an immediate transmission before. Unit: seconds		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF]		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00033]		
Parameter Name	FrTSynGlobalTimeDebounceTime		
Parent Container	FrTSynGlobalTimeMaster		
Description	This represents the configuration of a TX debounce time for SYNC and OFS messages compared to a message before with the same PDU. Unit: seconds		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF[
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00013]		
Parameter Name	FrTSynGlobalTimeTx_crcSecured		
Parent Container	FrTSynGlobalTimeMaster		
Description	This represents the configuration of whether or not CRC is supported.		





Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	CRC_NOT_SUPPORTED	This represents a configuration where CRC is not supported.	
	CRC_SUPPORTED	This represents a configuration where CRC is supported.	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00048]		
Parameter Name	FrTSynGlobalTimeTxIcvSecured		
Parent Container	FrTSynGlobalTimeMaster		
Description	This parameter controls whether or not ICV generation shall be supported. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	ICV_NOT_SUPPORTED	The Timesync module shall not generate the ICV. Tags: atp.Status=draft	
	ICV_SUPPORTED	The Timesync module shall generate the ICV. Tags: atp.Status=draft	
Default value	ICV_NOT_SUPPORTED		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00014]		
Parameter Name	FrTSynGlobalTimeTxPeriod		
Parent Container	FrTSynGlobalTimeMaster		
Description	This represents the TX period. Unit: seconds		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF]		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00031]		
Parameter Name	FrTSynImmediateTimeSync		
Parent Container	FrTSynGlobalTimeMaster		
Description	Enables/Disables the cyclic polling of StbM_GetTimeBaseUpdateCounter() within FrTSyn_MainFunction().		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeMasterPdu	1	This container carries all properties required to configure the PDU sent by the global time master for the given global time domain.
FrTSynGlobalTimeTxlc Generation	0..1	This container collects configuration that shall be used for ICV generation. Tags: atp.Status=draft

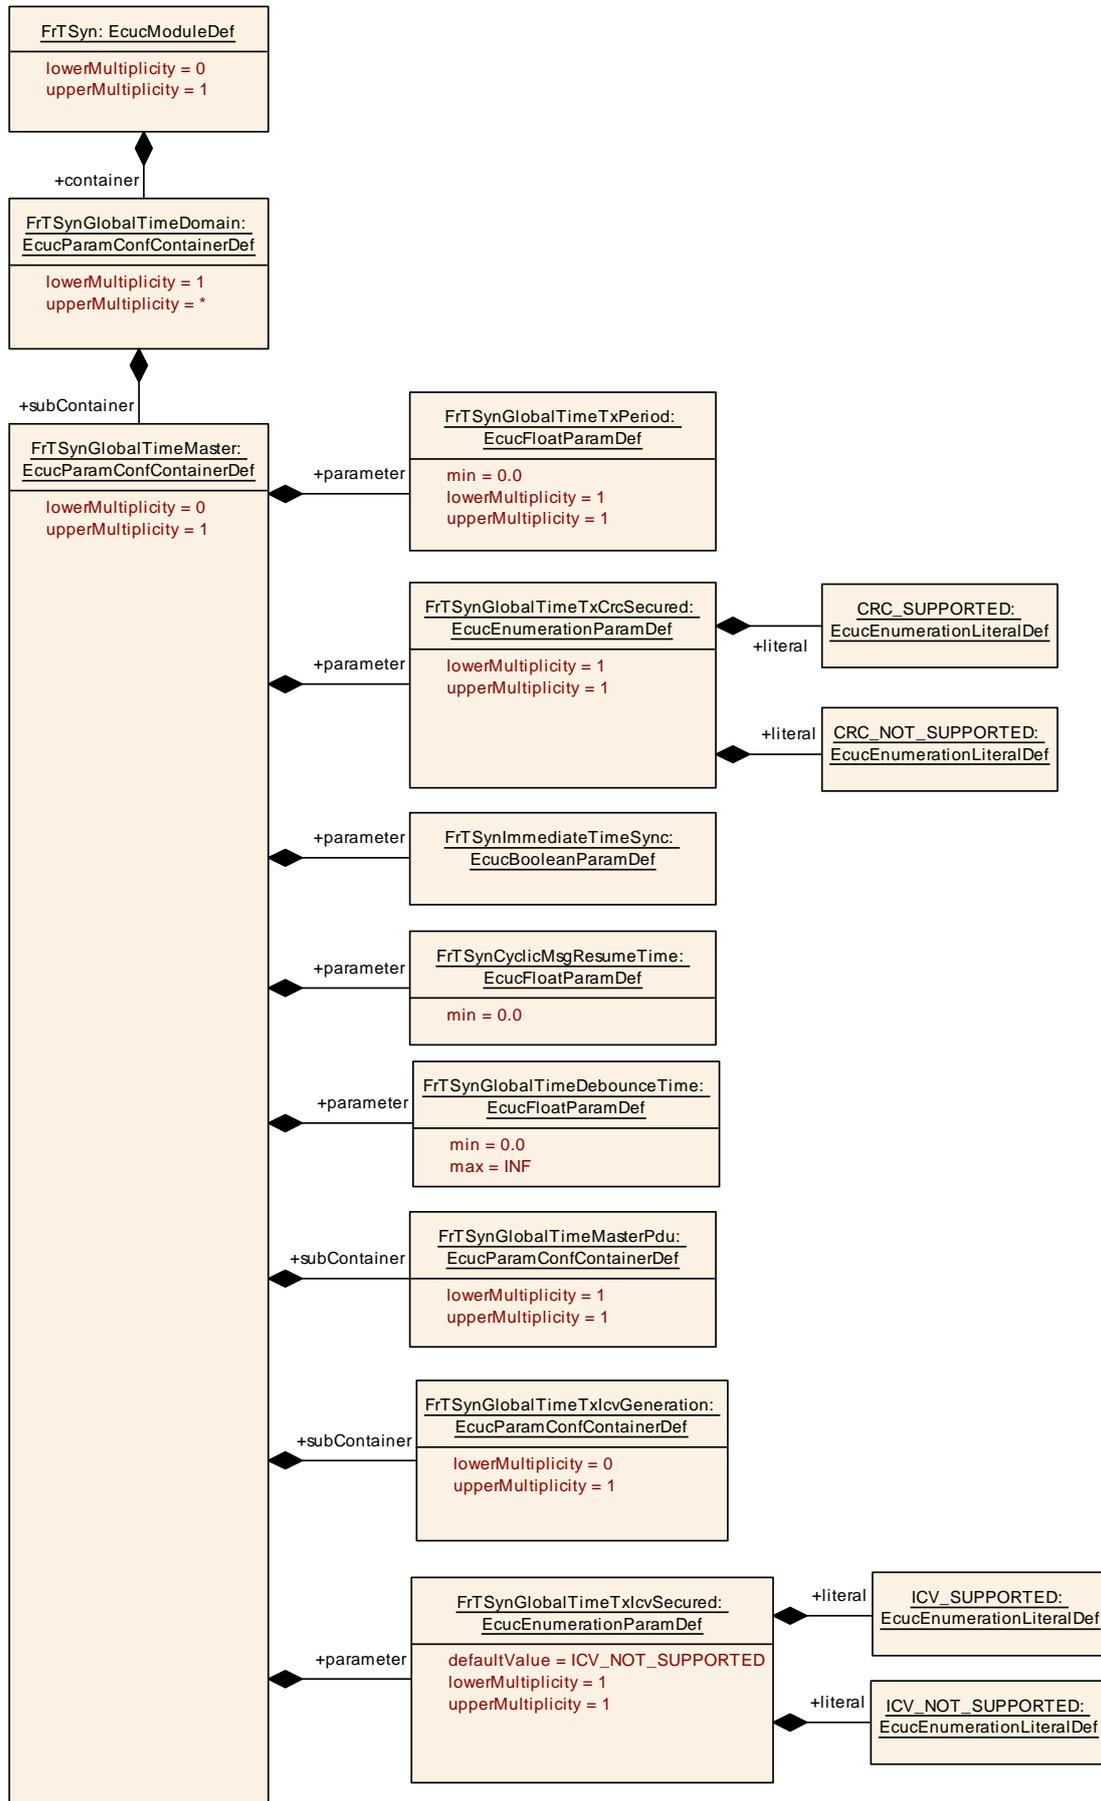


Figure 10.5: FrTsynGlobalTimeMaster

10.2.11 FrTSynGlobalTimeMasterPdu

SWS Item	[ECUC_FrTSyn_00008]
Container Name	FrTSynGlobalTimeMasterPdu
Parent Container	FrTSynGlobalTimeMaster
Description	This container carries all properties required to configure the PDU sent by the global time master for the given global time domain.
Configuration Parameters	

SWS Item	[ECUC_FrTSyn_00007]		
Parameter Name	FrTSynGlobalTimeMasterHandleId		
Parent Container	FrTSynGlobalTimeMasterPdu		
Description	This represents the handle ID of the PDU that contains the global time information.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00020]		
Parameter Name	FrTSynGlobalTimePduRef		
Parent Container	FrTSynGlobalTimeMasterPdu		
Description	This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
Multiplicity	1		
Type	Reference to Pdu		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

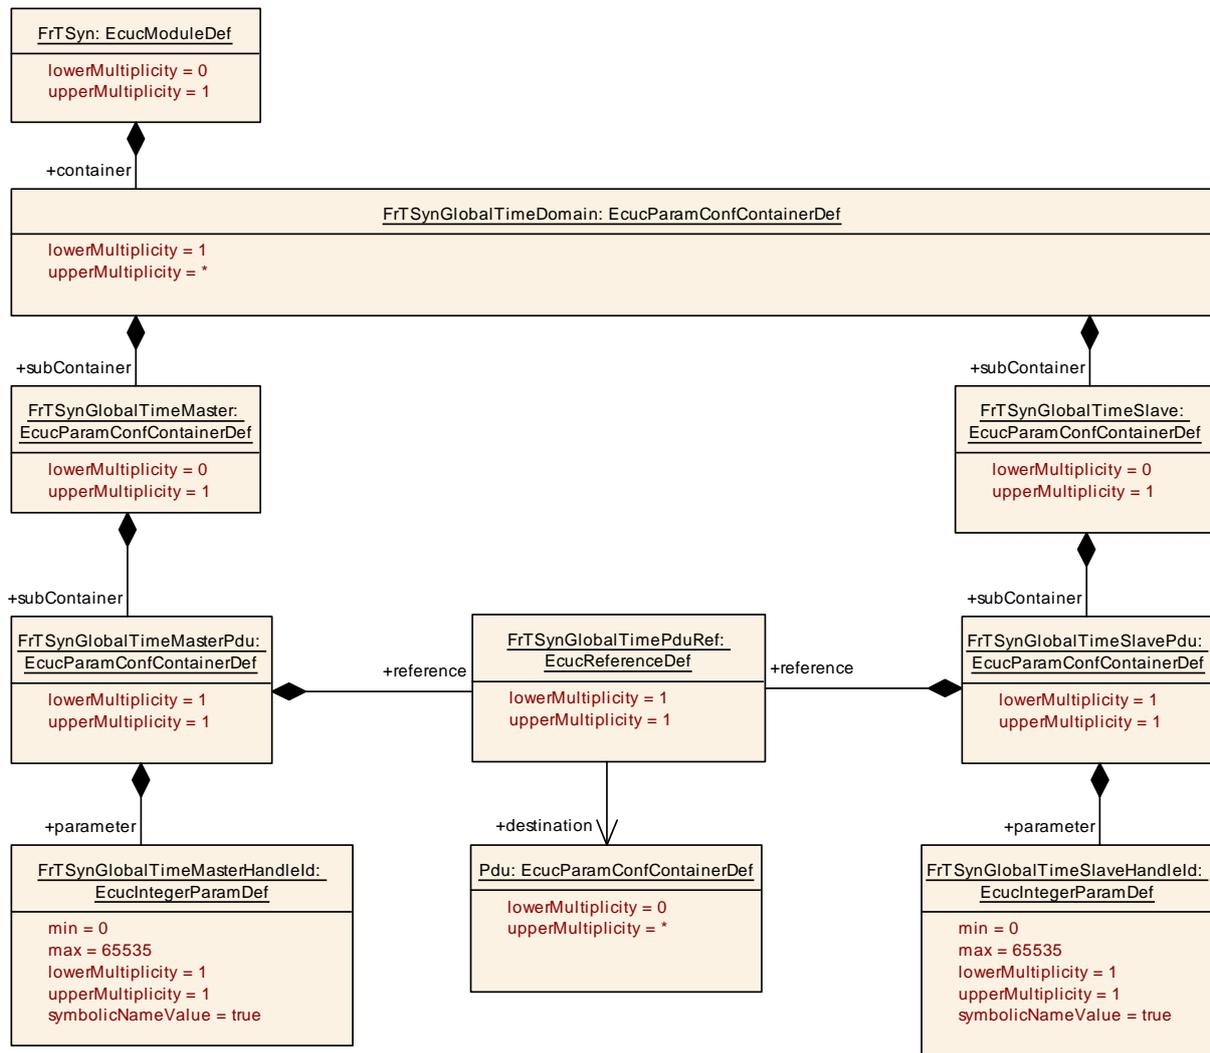


Figure 10.6: FrTSynGlobalTimePdu

10.2.12 FrTSynGlobalTimeTxlcVGeneration

SWS Item	[ECUC_FrTSyn_00049]		
Container Name	FrTSynGlobalTimeTxlcVGeneration		
Parent Container	FrTSynGlobalTimeMaster		
Description	This container collects configuration that shall be used for ICV generation. Tags: atp.Status=draft		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00051]		
Parameter Name	FrTSynIcvGenerationBase		
Parent Container	FrTSynGlobalTimeTxIcvGeneration		
Description	Symmetric or asymmetric cryptography selection for the ICV generation Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	ICV_MAC	Symmetric cryptography selection for the ICV generation. Tags: atp.Status=draft	
	ICV_SIGNATURE	Asymmetric cryptography selection for the ICV generation. Tags: atp.Status=draft	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00054]		
Parameter Name	FrTSynIcvGenerationTimeout		
Parent Container	FrTSynGlobalTimeTxIcvGeneration		
Description	Timeout of ICV generation (respective CSM job completion in asynchronous behaviour). Unit: Seconds Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF[
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00052]		
Parameter Name	FrTSynIcvTxLength		
Parent Container	FrTSynGlobalTimeTxIcvGeneration		
Description	Length of ICV to be transmitted within Sync Message on the bus. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 236		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	





	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00050]		
Parameter Name	FrTSynIcvGenerationFvIdRef		
Parent Container	FrTSynGlobalTimeTxIcvGeneration		
Description	This represents the reference to the FV taken to generate the ICV generation. Tags: atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to StbMFreshnessValue		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00053]		
Parameter Name	FrTSynIcvGenerationJobRef		
Parent Container	FrTSynGlobalTimeTxIcvGeneration		
Description	This represents the reference to the CSM job to fetch the CSM job ID. Tags: atp.Status=draft		
Multiplicity	1		
Type	Symbolic name reference to CsmJob		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

No Included Containers

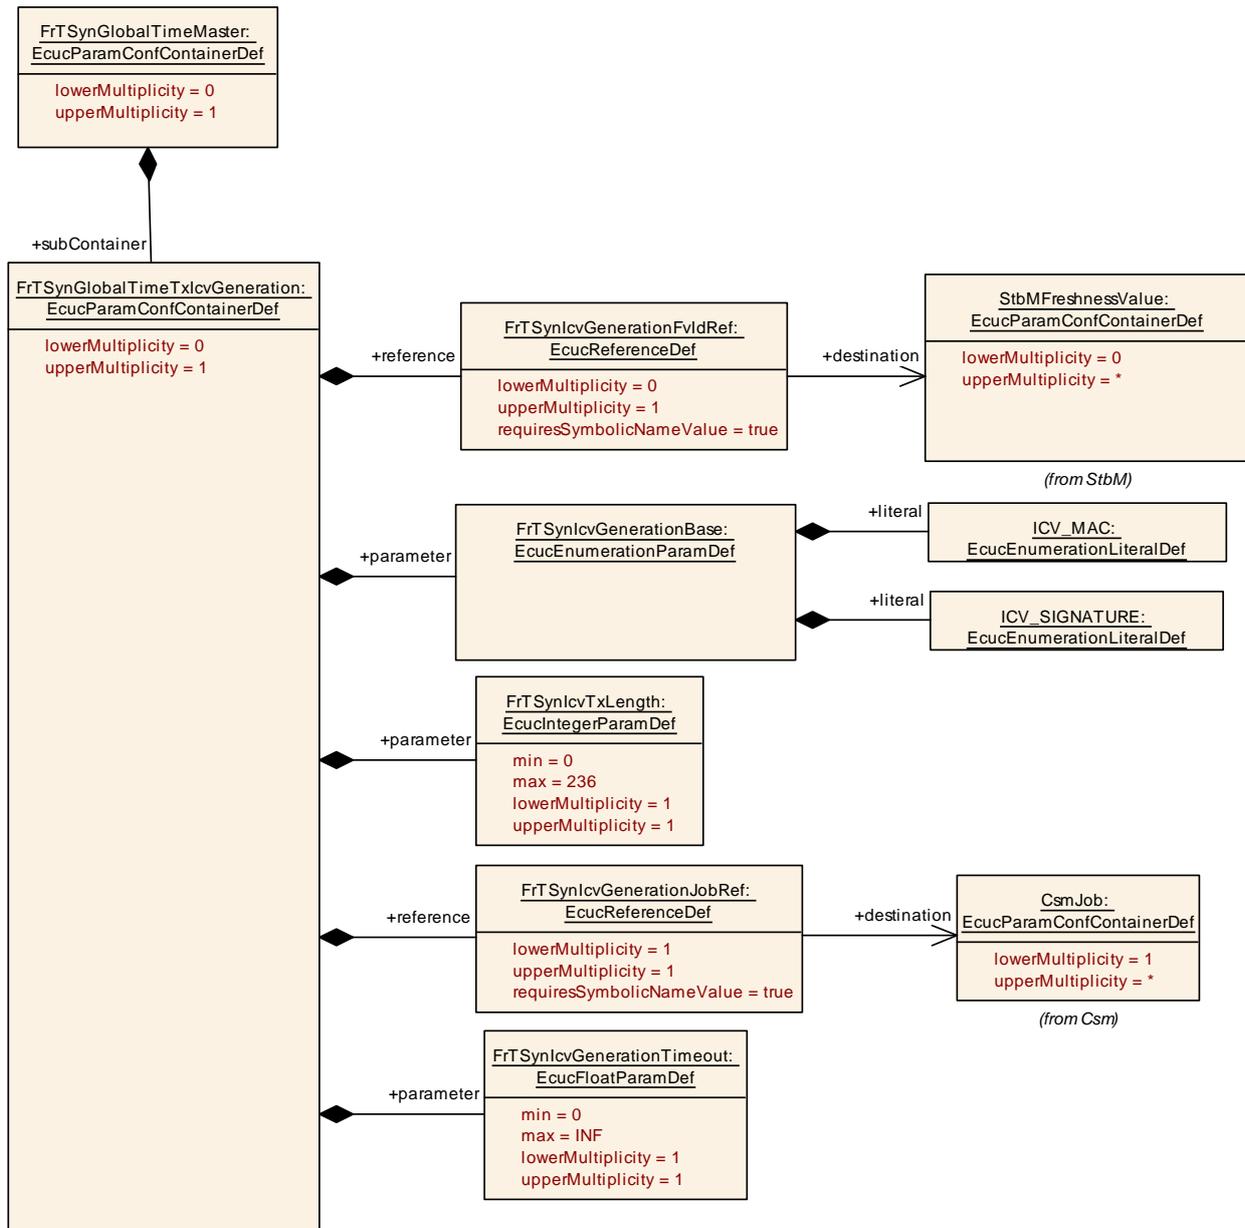


Figure 10.7: FrTsynGlobalTimeTxLcvGeneration

10.2.13 FrTsynGlobalTimeSlave

SWS Item	[ECUC_FrTsyn_00010]		
Container Name	FrTsynGlobalTimeSlave		
Parent Container	FrTsynGlobalTimeDomain		
Description	This represents the time slave for the enclosing global time domain.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants





	Link time	–	
	Post-build time	–	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00038]		
Parameter Name	FrTSynGlobalTimeMinMsgGap		
Parent Container	FrTSynGlobalTimeSlave		
Description	<p>This parameter represents the configuration of a minimum message gap time for received SYNC and OFS messages compared to a message before with the same PDU. If PDUs are received more often in between than this parameter allows, they shall be ignored.</p> <p>Unit: seconds</p> <p>Tags: atp.Status=draft</p>		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF]		
Default value	0		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00043]		
Parameter Name	FrTSynGlobalTimeSequenceCounterHysteresis		
Parent Container	FrTSynGlobalTimeSlave		
Description	<p>FrTSynGlobalTimeSequenceCounterHysteresis specifies the number of consecutive valid SYNC (or OFS) messages that are required by the Time Slave while being in Timeout state until a Time Tuple is forwarded to the StbM.</p>		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	0		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00022]		
Parameter Name	FrTSynGlobalTimeSequenceCounterJumpWidth		
Parent Container	FrTSynGlobalTimeSlave		
Description	<p>The SequenceCounterJumpWidth specifies the maximum allowed gap of the Sequence Counter between two SYNC resp. two OFS messages.</p>		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	0		





Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00017]		
Parameter Name	FrTSynRxCrcValidated		
Parent Container	FrTSynGlobalTimeSlave		
Description	This parameter controls whether or not CRC validation shall be supported.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	CRC_IGNORED	The Timesync module accepts Time Synchronization messages, which are CRC secured (without actually validating the CRC) and those, which are not CRC secured. That means, the Timesync module ignores the CRC.	
	CRC_NOT_VALIDATED	The Timesync module accepts only Time Synchronization messages, which are not CRC secured. All other Time Synchronization messages are ignored.	
	CRC_OPTIONAL	The Timesync module accepts only Time Synchronization messages which are not CRC secured and Time Synchronization messages which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.	
	CRC_VALIDATED	The Timesync module accepts only Time Synchronization messages, which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00055]		
Parameter Name	FrTSynRxlcvVerificationType		
Parent Container	FrTSynGlobalTimeSlave		
Description	This parameter controls whether or not ICV verification shall be supported. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	ICV_IGNORED	The Timesync module accepts Time Synchronization messages, which are ICV secured (without actually validating the ICV) and those which are not ICV secured. That means, the Timesync module ignores the ICV. Tags: atp.Status=draft	





	ICV_NOT_VERIFIED	The Timesync module accepts only Time Synchronization messages, which are not ICV secured. All other Time Synchronization messages are ignored. Tags: atp.Status=draft	
	ICV_OPTIONAL	The Timesync module accepts only Time Synchronization messages which are not ICV secured and Time Synchronization messages which are ICV secured and have the correct ICV. All other Time Synchronization messages are ignored. Tags: atp.Status=draft	
	ICV_VERIFIED	The Timesync module accepts only Time Synchronization messages, which are ICV secured and have the correct ICV. All other Time Synchronization messages are ignored. Tags: atp.Status=draft	
Default value	ICV_IGNORED		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeRxIcvVerification	0..1	This container collects configuration required for ICV verification. Tags: atp.Status=draft
FrTSynGlobalTimeSlavePdu	1	This container carries all properties required to configure the PDU received by the time slave for the given global time domain.

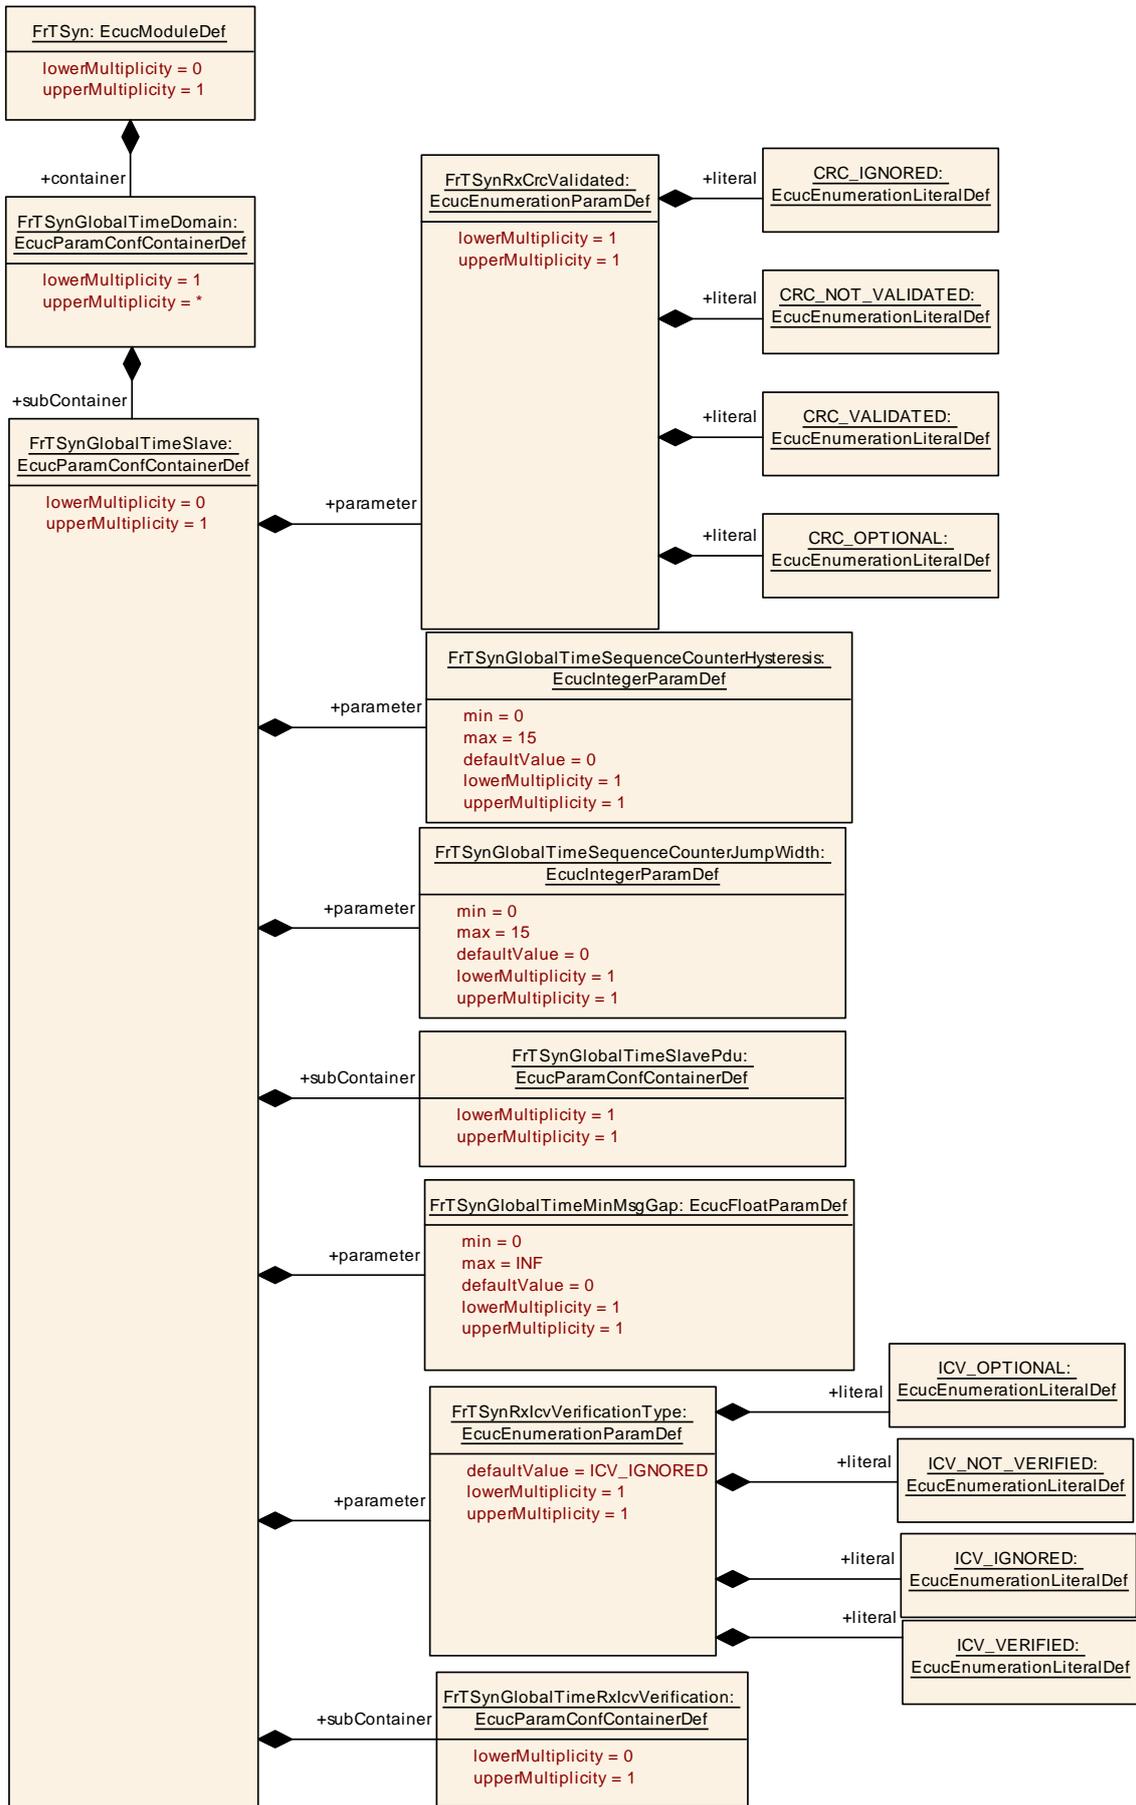


Figure 10.8: FrTsynGlobalTimeSlave

10.2.14 FrTSynGlobalTimeSlavePdu

SWS Item	[ECUC_FrTSyn_00012]
Container Name	FrTSynGlobalTimeSlavePdu
Parent Container	FrTSynGlobalTimeSlave
Description	This container carries all properties required to configure the PDU received by the time slave for the given global time domain.
Configuration Parameters	

SWS Item	[ECUC_FrTSyn_00011]		
Parameter Name	FrTSynGlobalTimeSlaveHandleId		
Parent Container	FrTSynGlobalTimeSlavePdu		
Description	This represents the handle ID of the PDU that contains the global time information.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00021]		
Parameter Name	FrTSynGlobalTimePduRef		
Parent Container	FrTSynGlobalTimeSlavePdu		
Description	This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
Multiplicity	1		
Type	Reference to Pdu		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.2.15 FrTSynGlobalTimeRxIcvVerification

SWS Item	[ECUC_FrTSyn_00056]
Container Name	FrTSynGlobalTimeRxIcvVerification
Parent Container	FrTSynGlobalTimeSlave





Description	This container collects configuration required for ICV verification. Tags: atp.Status=draft		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00059]		
Parameter Name	FrTSynIcvRxLength		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	Length of ICV to be used for verification of received ICV within Sync Message. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 236		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00062]		
Parameter Name	FrTSynIcvVerificationAttempts		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	This parameter specifies the number of ICV verification attempts that are to be carried out when the verification of the ICV failed for a given secured SYNC message. If zero is set, then only one ICV verification attempt is done. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	0		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00058]		
Parameter Name	FrTSynIcvVerificationBase		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	Symmetric or asymmetric cryptography selection for the ICV verification. Tags: atp.Status=draft		
Multiplicity	1		





Type	EcucEnumerationParamDef		
Range	ICV_MAC	Symmetric cryptography selection for the ICV verification. Tags: atp.Status=draft	
	ICV_SIGNATURE	Asymmetric cryptography selection for the ICV verification. Tags: atp.Status=draft	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00061]		
Parameter Name	FrTSynIcvVerificationTimeout		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	Timeout of ICV verification (respective CSM job completion in asynchronous behaviour). Unit: Seconds Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF[
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00057]		
Parameter Name	FrTSynIcvVerificationFvIdRef		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	This represents the reference to the FV taken to generate the ICV generation. Tags: atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to StbMFreshnessValue		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00060]		
Parameter Name	FrTSynIcvVerificationJobRef		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	This represents the reference to the CSM job to fetch the CSM job ID. Tags: atp.Status=draft		
Multiplicity	1		
Type	Symbolic name reference to CsmJob		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

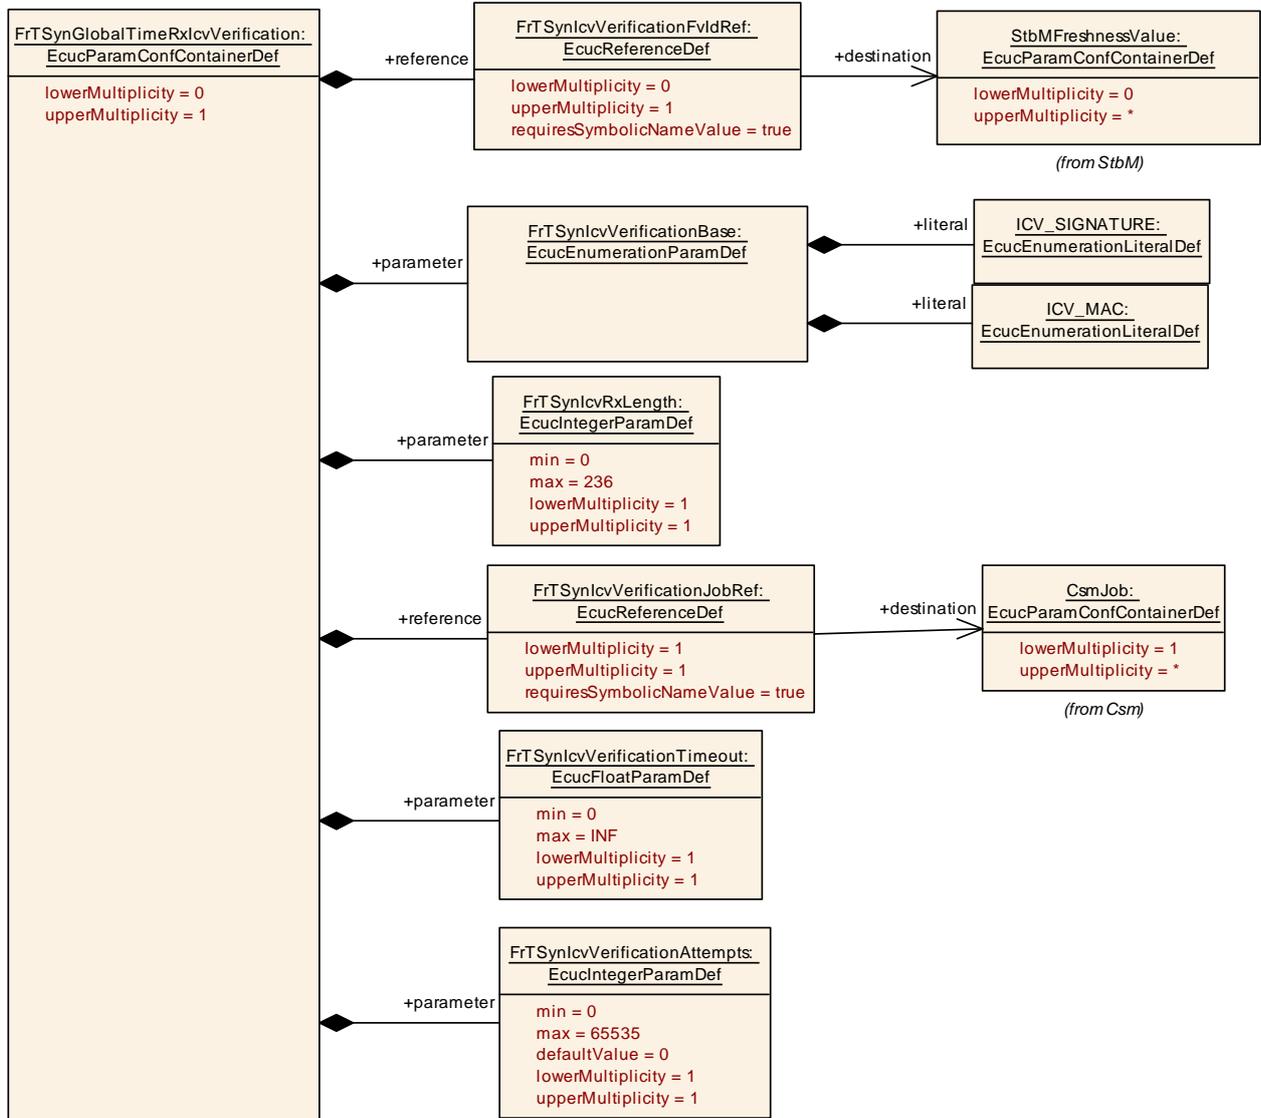


Figure 10.9: FrTSynGlobalTimeRxIcvVerification

10.3 Constraints

[SWS_FrTSyn_CONSTR_00001]{DRAFT} [If the [CSM](#) job used to generate the [ICV](#) is configured in synchronous behaviour, the [FrTSynIcvVerificationTimeout](#) shall be set to 0.] ([RS_TS_20074](#))

10.4 Published Information

For details refer to the chapter 10.3 “Published Information” in the SWS BSW General [\[3\]](#).

A Not applicable requirements

[SWS_FrTSyn_NA_00999] [These requirements on Time Synchronization from the RS Time Synchronization [1] are not applicable to FrTSyn, because they refer either to network types other than FlexRay or to the Time Base Manager module] ([RS_TS_00002](#), [RS_TS_00005](#), [RS_TS_00006](#), [RS_TS_00007](#), [RS_TS_00008](#), [RS_TS_00009](#), [RS_TS_00010](#), [RS_TS_00011](#), [RS_TS_00012](#), [RS_TS_00013](#), [RS_TS_00014](#), [RS_TS_00015](#), [RS_TS_00016](#), [RS_TS_00017](#), [RS_TS_00018](#), [RS_TS_00019](#), [RS_TS_00021](#), [RS_TS_00024](#), [RS_TS_00025](#), [RS_TS_00026](#), [RS_TS_00027](#), [RS_TS_00029](#), [RS_TS_00030](#), [RS_TS_00031](#), [RS_TS_00032](#), [RS_TS_00033](#), [RS_TS_00035](#), [RS_TS_00036](#), [RS_TS_00037](#), [RS_TS_00038](#), [RS_TS_00039](#), [RS_TS_20031](#), [RS_TS_20032](#), [RS_TS_20033](#), [RS_TS_20034](#), [RS_TS_20035](#), [RS_TS_20036](#), [RS_TS_20037](#), [RS_TS_20038](#), [RS_TS_20047](#), [RS_TS_20048](#), [RS_TS_20051](#), [RS_TS_20052](#), [RS_TS_20053](#), [RS_TS_20054](#), [RS_TS_20058](#), [RS_TS_20059](#), [RS_TS_20060](#), [RS_TS_20061](#), [RS_TS_20062](#), [RS_TS_20063](#), [RS_TS_20066](#), [RS_TS_20068](#), [RS_TS_20069](#), [RS_TS_20070](#))

B History of Constraints and Specification Items

Please note that the lists in this chapter also include constraints and specification items that have been removed from the specification in a later version. These constraints and specification items do not appear as hyperlinks in the document.

B.1 Constraint and Specification Item History of this document according to AUTOSAR Release 22-11

B.1.1 Added Traceables in R22-11

[SWS_FrTSyn_00103] [SWS_FrTSyn_00104] [SWS_FrTSyn_00105] [SWS_FrTSyn_00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00108] [SWS_FrTSyn_00109] [SWS_FrTSyn_00110] [SWS_FrTSyn_00111] [SWS_FrTSyn_00112] [SWS_FrTSyn_00113] [SWS_FrTSyn_00114] [SWS_FrTSyn_00115] [SWS_FrTSyn_00116] [SWS_FrTSyn_00117] [SWS_FrTSyn_00118] [SWS_FrTSyn_00119] [SWS_FrTSyn_00120] [SWS_FrTSyn_00121] [SWS_FrTSyn_00122] [SWS_FrTSyn_00123] [SWS_FrTSyn_00124] [SWS_FrTSyn_00125] [SWS_FrTSyn_00126] [SWS_FrTSyn_00127] [SWS_FrTSyn_00128] [SWS_FrTSyn_00129] [SWS_FrTSyn_00130] [SWS_FrTSyn_00131] [SWS_FrTSyn_00132] [SWS_FrTSyn_00133] [SWS_FrTSyn_00134] [SWS_FrTSyn_00135] [SWS_FrTSyn_00136] [SWS_FrTSyn_00137] [SWS_FrTSyn_00138] [SWS_FrTSyn_00139] [SWS_FrTSyn_00140] [SWS_FrTSyn_00141] [SWS_FrTSyn_00142] [SWS_FrTSyn_00143] [SWS_FrTSyn_00144] [SWS_FrTSyn_00145] [SWS_FrTSyn_00146] [SWS_FrTSyn_00147] [SWS_FrTSyn_00148] [SWS_FrTSyn_00149] [SWS_FrTSyn_00150] [SWS_FrTSyn_00151] [SWS_FrTSyn_00152] [SWS_FrTSyn_91000] [SWS_FrTSyn_91001] [SWS_FrTSyn_91002] [SWS_FrTSyn_CONSTR_00001] [SWS_FrTSyn_NA_00999]

B.1.2 Changed Traceables in R22-11

[SWS_FrTSyn_00009] [SWS_FrTSyn_00014] [SWS_FrTSyn_00015] [SWS_FrTSyn_00018] [SWS_FrTSyn_00019] [SWS_FrTSyn_00021] [SWS_FrTSyn_00022] [SWS_FrTSyn_00023] [SWS_FrTSyn_00025] [SWS_FrTSyn_00028] [SWS_FrTSyn_00036] [SWS_FrTSyn_00037] [SWS_FrTSyn_00038] [SWS_FrTSyn_00039] [SWS_FrTSyn_00040] [SWS_FrTSyn_00042] [SWS_FrTSyn_00043] [SWS_FrTSyn_00044] [SWS_FrTSyn_00055] [SWS_FrTSyn_00056] [SWS_FrTSyn_00057] [SWS_FrTSyn_00059] [SWS_FrTSyn_00060] [SWS_FrTSyn_00061] [SWS_FrTSyn_00062] [SWS_FrTSyn_00063] [SWS_FrTSyn_00064] [SWS_FrTSyn_00065] [SWS_FrTSyn_00066] [SWS_FrTSyn_00067] [SWS_FrTSyn_00069] [SWS_FrTSyn_00070] [SWS_FrTSyn_00071] [SWS_FrTSyn_00074] [SWS_FrTSyn_00075] [SWS_FrTSyn_00079] [SWS_FrTSyn_00080] [SWS_FrTSyn_00081] [SWS_FrTSyn_00082] [SWS_FrTSyn_00095]

B.1.3 Deleted Traceables in R22-11

[SWS_FrTSyn_00999]