

Document Title	Specification of Vehicle-2-X Data Manager
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	1023

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R22-11

Document Change History			
Date	Release	Changed by	Description
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none">Initial release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Contents

1	Introduction and functional overview	6
1.1	Architectural overview	6
2	Acronyms and Abbreviations	7
3	Related documentation	9
3.1	Input documents & related standards and norms	9
3.2	Related specification	9
4	Constraints and assumptions	10
4.1	Limitations	10
4.2	Applicability to car domains	10
5	Dependencies to other modules	11
5.1	AUTOSAR DET (Default Error Tracer)	11
5.2	AUTOSAR V2xFac (V2xFacilities)	11
5.3	AUTOSAR V2xM (V2xManagement)	11
5.4	AUTOSAR CnV2xMsg (ChineseV2xMessage)	11
5.5	AUTOSAR CnV2xMgt (ChineseV2xManagement)	11
5.6	AUTOSAR RTE (Run Time Environment)	11
5.7	AUTOSAR PDU Router (PduR)	11
6	Requirements Tracing	12
7	Functional specification	15
7.1	Overview	15
7.2	Modelling approach	19
7.3	Module Handling	20
7.3.1	Initialization	20
7.3.2	Scheduling	21
7.4	Data Transmission and Reception	21
7.4.1	Data Transmission	21
7.4.2	Data Reception	21
7.5	Data Modelling	22
7.5.1	V2x message representation	22
7.5.2	V2x data catalog	23
7.5.3	V2x data mapping	24
7.6	Message Decoding and Forwarding	25
7.7	Error Classification	26
7.7.1	Development Errors	26
7.7.2	Runtime Errors	26
7.7.3	Transient Faults	27
7.7.4	Production Errors	27
7.7.5	Extended Production Errors	27

8 API specification	28
8.1 API parameter checking	28
8.2 Imported types	28
8.3 Type definitions	28
8.3.1 V2xDM_ConfigType	28
8.4 Function definitions	29
8.4.1 V2xDM_Init	29
8.4.2 V2xDM_GetVersionInfo	29
8.5 Callback notifications	30
8.5.1 V2xDM_RxIndication	30
8.5.2 V2xDM_V2xStackRxIndication	30
8.6 Scheduled functions	31
8.6.1 V2xDM_MainFunction	31
8.7 Expected interfaces	31
8.7.1 Mandatory interfaces	31
8.7.2 Optional interfaces	32
8.7.3 Configurable interfaces	32
8.7.4 V2xDm_Callback_<Stack>_<Msg>_<Type>	32
8.7.5 <V2xDM_ItemConversionFunc>	33
8.8 Service Interfaces	33
9 Sequence diagrams	35
9.1 V2x message reception	35
10 Configuration specification	36
10.1 Containers and configuration parameters	36
10.1.1 V2xDM	36
10.1.2 V2xDMGeneral	37
10.1.3 V2xDMConfigSet	39
10.1.4 V2xDMLink	39
10.1.5 V2xDMCatalogItem	41
10.1.6 V2xDMConnection	42
10.1.7 V2xDMConnectionSource	42
10.1.8 V2xDMConnectionSourceContext	44
10.1.9 V2xDMConversion	45
10.1.10 V2xDMConversionFunction	46
10.1.11 V2xDMConversionFunctionLinear	46
10.1.12 V2xDMStack	47
10.1.13 V2xDMMessage	47
10.1.14 V2xDMPdu	50
10.1.15 V2xDMMsgQueue	51
10.1.16 V2xDMStructuredType	53
10.1.17 V2xDMStructuredTypeSequence	54
10.1.18 V2xDMStructuredTypeSequenceChild	56
10.1.19 V2xDMStructuredTypeSequenceOf	58
10.1.20 V2xDMStructuredTypeSequenceOfConstr	60

10.1.21	V2xDMStructuredTypeChoice	61
10.1.22	V2xDMStructuredTypeChoiceOption	62
10.1.23	V2xDMSimpleType	63
10.1.24	V2xDMSimpleTypeBitString	65
10.1.25	V2xDMSimpleTypeBitStringConstr	65
10.1.26	V2xDMSimpleTypeBitStringItem	66
10.1.27	V2xDMSimpleTypeCharString	67
10.1.28	V2xDMSimpleTypeCharStringConstr	69
10.1.29	V2xDMSimpleTypeBoolean	71
10.1.30	V2xDMSimpleTypeEnum	72
10.1.31	V2xDMSimpleTypeEnumerationItem	73
10.1.32	V2xDMSimpleTypeInteger	74
10.1.33	V2xDMSimpleTypeIntegerConstr	74
10.1.34	V2xDMSimpleTypeIntegerItem	75
10.1.35	V2xDMSimpleTypeOctetString	76
10.1.36	V2xDMSimpleTypeOctetStringConstr	77
10.2	Published Information	78

1 Introduction and functional overview

This specification describes the functionality, API and the configuration for the AUTOSAR Basic Software module V2X Data Manager (**V2xDM**). The V2X Data Manager has the task to take over the **V2x message** that was received and pre-processed by the regional **V2x stack** and to perform the operation according to the configuration. Thus, the **V2xDM** is **only relevant on reception of a V2x message** and not to generate a **V2x message** for transmission. This is still in the responsibility of the **V2x stack**. The V2X Data Manager is independent from the underlying **V2x stack** and does not contain any V2X regional stack implementation. This means, it can be used in combination of any **V2x stack** regardless if that is specific to China, US or Europe. In fact, it is one of the key features of the V2x Data Manager to distribute parts of the **V2x message** to the **RTE** and adapt to it so that the resulting information can be independent from the underlying regional specific **V2x stack**.

1.1 Architectural overview

Positioning of the **V2xDM** module within the AUTOSAR BSW and the Layered Software architecture is shown in below.



Figure 1.1: AUTOSAR BSW software architecture - V2xDM scope

2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations relevant to the V2X Data Manager module that are not included in the [1, AUTOSAR glossary].

Abbreviation / Acronym:	Description:
BS	Basic Service
3GPP	The 3rd Generation Partnership Project provides environment to produce the Reports and Specifications that define 3GPP technologies.
5GAA	The 5G Automotive Association is a global, cross-industry organisation to develop future mobility and transportation services.
ASN.1	Abstract Syntax Notation (see [2]). Description language to define data structures.
BSW	Basic Software Module
BswM	BSW Mode Manager
BSM	Basic Safety Message
CAM	Cooperative Awareness Message
CCSA	China Communications Standards Association
DCC	Decentralized Congestion Control
DENM	Decentralized Environment Notification Message
DET	Default Error Tracer
ECU	Electronic Control Unit
EcuM	Electronic Control Unit Manager
ETSI	European Telecommunications Standards Institute
ITS	Intelligent Transport System
ITS-S	ITS-Station
ITS-G5	Wireless communication as specified by ETSI.
POTI	Position and Time Management
PduR	PDU Router
RSU	Road Side Unit
RTE	Run Time Environment
SW-C	Software Component
UPER	Unaligned Packed Encoding Rule. Most efficient encoding rule for ASN.1
V2X	Either vehicle to vehicle (V2V), or vehicle to infrastructure (V2I) and/or infrastructure to vehicle (I2V).
V2xBtp	Vehicle-2-X Basic Transport Protocol
V2xDM	Vehicle-2-X Data Manager
V2xFac	Vehicle-2-X Facilities
V2xGn	Vehicle-2-X Geo Networking
V2xM	Vehicle-2-X Management
V2xML	Vehicle-2-X Message Layer
CnV2xMsg	Chinese Vehicle-2-X Message Layer
CnV2xMgt	Chinese Vehicle-2-X Management
V2xNL	Vehicle-2-X Network Layer
VDP	Vehicle Data Provider

Terms:	Description:
Structured type	A structured type denotes a structure within ASN.1 that contains one or more types. ASN.1 defines a Sequence (like a struct), SequenceOf (like an array) or a "Choice of Sequences" (like a union).

Terms:	Description:
Simple type	A simple type denotes an element within ASN.1 that describes data, such as an integer, an enumeration or a string. In this context it specifies a V2x message element of a V2x message.
V2x catalog item	A data item derived from one or more simple type(s) of a V2x message. It is either a direct representation of this simple type or is a result from a conversion routine attached to this item that provides the required result.
V2x message	A collection of data information provided in ASN.1 UPER encoded form, according to the definition of the V2X regional specification.
V2x message element	This term is used for an element that is contained in a V2x message. This element must be of type "Simple Type".
V2x object	Defines a set of data elements that is provided through a Sender-Receiver port to the RTE.
V2x stack	Software module(s) that processes V2x information according to a standardization organisation (e.g. ETSI, SAE) that defines V2X communication standards for their regions.

3 Related documentation

3.1 Input documents & related standards and norms

- [1] Glossary
AUTOSAR_TR_Glossary
- [2] X.690 : Information technology - ASN.1 encoding rules: Specification of Basic Encoding Rules (BER), Canonical Encoding Rules (CER) and Distinguished Encoding Rules (DER)
<https://www.itu.int/rec/T-REC-X.690>
- [3] General Specification of Basic Software Modules
AUTOSAR_SWS_BSWGeneral
- [4] Specification of Default Error Tracer
AUTOSAR_SWS_DefaultErrorTracer
- [5] Specification of Vehicle-2-X Facilities
AUTOSAR_SWS_V2XFacilities
- [6] Specification of RTE Software
AUTOSAR_SWS_RTE
- [7] Specification of PDU Router
AUTOSAR_SWS_PDURouter
- [8] Requirements on Vehicle-2-X Communication
AUTOSAR_SRS_V2XCommunication
- [9] Software Component Template
AUTOSAR_TPS_SoftwareComponentTemplate

3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [3, SWS BSW General], which is also valid for V2xDM.

Thus, the specification SWS BSW General shall be considered as additional and required specification for V2xDM.

4 Constraints and assumptions

4.1 Limitations

- The V2X modules follow the guidance regarding the Day-1 scenarios defined by China Communications Standards Association (CCSA), Car-2-Car-Consortium and C-Roads platform.
- Service discovery is not managed by [V2xDM](#). Either, the discovery for event types is auto initialized or an SW-C is needed to manage service discovery.

4.2 Applicability to car domains

This specification is applicable to all car domains.

5 Dependencies to other modules

This section describes the relations of the [V2xDM](#) module to other modules within the AUTOSAR basic software architecture. It outlines the modules that are required or optional for the realization of the [V2xDM](#) module and services that this module uses.

5.1 AUTOSAR DET (Default Error Tracer)

In development mode, the [V2xDM](#) module reports errors through the `Det_ReportError` function of the [4, SWS DET Module].

5.2 AUTOSAR V2xFac (V2xFacilities)

The [V2xFac](#) specified in [5] provides V2x messages to the [V2xDM](#).

5.3 AUTOSAR V2xM (V2xManagement)

The [V2xM](#) module manages the operation of the V2X protocol stack.

5.4 AUTOSAR CnV2xMsg (ChineseV2xMessage)

The [CnV2xMsg](#) provides Chinese V2X messages (e.g. BSM) to the V2xDataManager.

5.5 AUTOSAR CnV2xMgt (ChineseV2xManagement)

The [CnV2xMgt](#) module manages the operation of the Chinese V2X protocol stack.

5.6 AUTOSAR RTE (Run Time Environment)

The V2xDataManager forwards V2x Signals to the upper layer through the [RTE](#) (see [6]).

5.7 AUTOSAR PDU Router (PduR)

The V2xDataManager forwards V2x messages to the PduR (see [7]) or optionally can receive V2x messages from PduR (as an alternative to the [V2x stack](#)).

6 Requirements Tracing

The following tables reference the requirements specified in [8, SRS V2X Communication] and links to the fulfillment of these. Please note that if column “Satisfied by” is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[SRS_BSW_00003]	All software modules shall provide version and identification information	[CP_SWS_V2xDM_01004]
[SRS_BSW_00101]	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	[CP_SWS_V2xDM_01005]
[SRS_BSW_00350]	All AUTOSAR Basic Software Modules shall allow the enabling/disabling of detection and reporting of development errors.	[CP_SWS_V2xDM_00010] [CP_SWS_V2xDM_00011]
[SRS_BSW_00358]	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	[CP_SWS_V2xDM_01005]
[SRS_BSW_00359]	All AUTOSAR Basic Software Modules callback functions shall avoid return types other than void if possible	[CP_SWS_V2xDM_01007]
[SRS_BSW_00360]	AUTOSAR Basic Software Modules callback functions are allowed to have parameters	[CP_SWS_V2xDM_01007]
[SRS_BSW_00373]	The main processing function of each AUTOSAR Basic Software Module shall be named according the defined convention	[CP_SWS_V2xDM_01006]
[SRS_BSW_00385]	List possible error notifications	[CP_SWS_V2xDM_00101] [CP_SWS_V2xDM_00102]
[SRS_BSW_00386]	The BSW shall specify the configuration and conditions for detecting an error	[CP_SWS_V2xDM_00018]
[SRS_BSW_00406]	A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the BSW module is called	[CP_SWS_V2xDM_00009]
[SRS_BSW_00407]	Each BSW module shall provide a function to read out the version information of a dedicated module implementation	[CP_SWS_V2xDM_01004]
[SRS_BSW_00414]	Init functions shall have a pointer to a configuration structure as single parameter	[CP_SWS_V2xDM_01005]

Requirement	Description	Satisfied by
[SRS_BSW_00424]	BSW module main processing functions shall not be allowed to enter a wait state	[CP_SWS_V2xDM_01006]
[SRS_BSW_00432]	Modules should have separate main processing functions for read/receive and write/transmit data path	[CP_SWS_V2xDM_00017] [CP_SWS_V2xDM_01006]
[SRS_BSW_00450]	A Main function of a un-initialized module shall return immediately	[CP_SWS_V2xDM_00010]
[SRS_BSW_00459]	It shall be possible to concurrently execute a service offered by a BSW module in different partitions	[CP_SWS_V2xDM_00036]
[SRS_BSW_00478]	Timing limits of main functions	[CP_SWS_V2xDM_00012]
[SRS_BSW_00482]	Get version information function shall follow a naming rule	[CP_SWS_V2xDM_01004]
[SRS_V2X_26001]	The V2X system shall provide selected information from a V2X message to the application layer and/or to the vehicle network.	[CP_SWS_V2xDM_00002] [CP_SWS_V2xDM_00004] [CP_SWS_V2xDM_00005] [CP_SWS_V2xDM_00006] [CP_SWS_V2xDM_00008] [CP_SWS_V2xDM_00016] [CP_SWS_V2xDM_00032] [CP_SWS_V2xDM_00034] [CP_SWS_V2xDM_00037] [CP_SWS_V2xDM_00038] [CP_SWS_V2xDM_CONSTR_00026] [CP_SWS_V2xDM_CONSTR_00027] [CP_SWS_V2xDM_CONSTR_00028]
[SRS_V2X_26002]	Transformation of V2X message elements shall be possible	[CP_SWS_V2xDM_00007] [CP_SWS_V2xDM_00033] [CP_SWS_V2xDM_00039] [CP_SWS_V2xDM_01010]
[SRS_V2X_26003]	It shall be possible to forward V2X messages to the vehicle network as a whole	[CP_SWS_V2xDM_00003] [CP_SWS_V2xDM_00013] [CP_SWS_V2xDM_00035] [CP_SWS_V2xDM_01012] [CP_SWS_V2xDM_CONSTR_00014]
[SRS_V2X_26004]	All elements of a V2X object shall have the same V2X message as source	[CP_SWS_V2xDM_00032] [CP_SWS_V2xDM_CONSTR_00024] [CP_SWS_V2xDM_CONSTR_00025] [CP_SWS_V2xDM_CONSTR_00031]
[SRS_V2X_26005]	Modules in the V2X stack shall provide interfaces for module initialization	[CP_SWS_V2xDM_00009] [CP_SWS_V2xDM_01005]
[SRS_V2X_26006]	The V2X Data Manager shall provide mathematical operations to re-scale V2X message elements	[CP_SWS_V2xDM_01010] [CP_SWS_V2xDM_CONSTR_00029] [CP_SWS_V2xDM_CONSTR_00030]

Requirement	Description	Satisfied by
[SRS_V2X_26010]	Regional V2X stack implementation shall support selective distribution of V2X message data through V2X Data Manager	[CP_SWS_V2xDM_00001]

7 Functional specification

This chapter defines the behavior of the [V2xDM](#) module.

The API of the module is defined in chapter [8](#), while the configuration is defined in chapter [10](#).

7.1 Overview

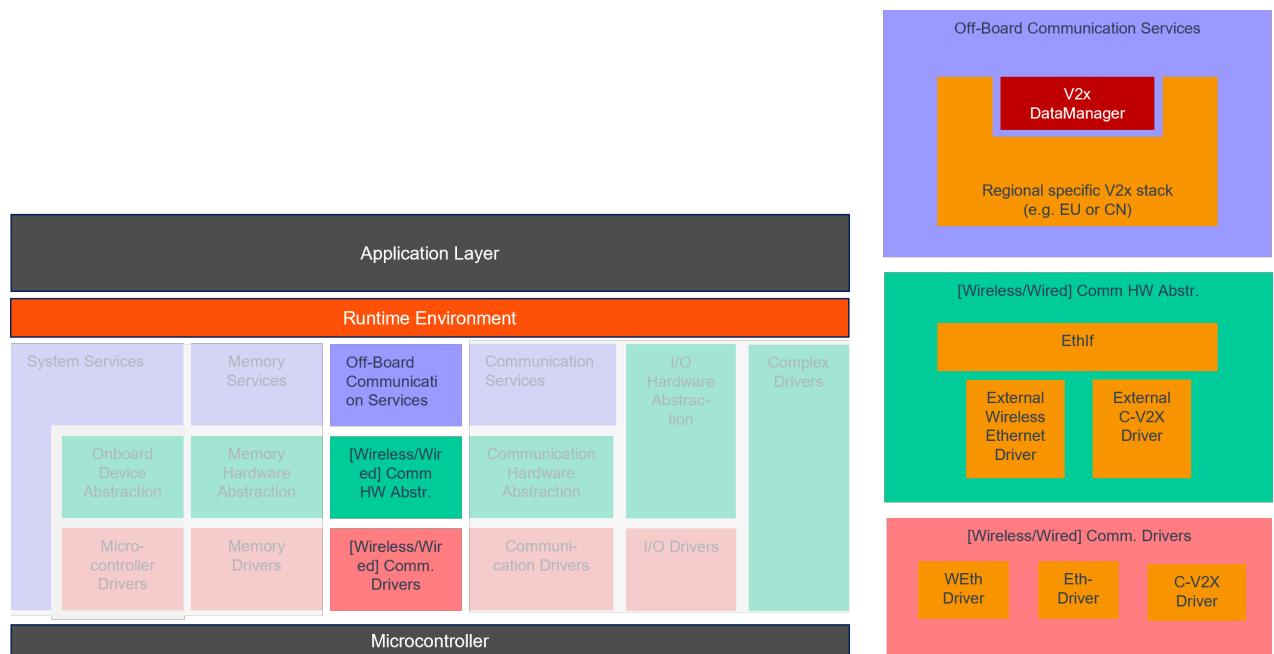


Figure 7.1: AUTOSAR layered view with V2xDM

The V2x Data Manager ([V2xDM](#)) is located on top of the regional [V2x stack](#). It is a service layer and has the task to provide individual information from [V2x messages](#), that was served from the regional [V2x stack](#) below or through a PDU from the [PduR](#), to the [RTE](#) through Sender-Receiver Ports. Pre-defined means, that the VariableDataPrototypes are not created by the [V2xDM](#). Which of the information from the [V2x messages](#) shall be provided through Sender-Receiver ports can be configured within the [V2xDM](#) in its EcuC configuration (see chapter [10](#)). A Sender-Receiver port in this context is called a "[V2x object](#)".

The main task of the [V2xDM](#) is to take over a [V2x message](#) from the lower layer [V2x stack](#), decode it according to the defined [ASN.1](#) codec definition of this message, extract the necessary [V2x message element](#), set the data types of one or more S/R ports that was mapped in its EcuC configuration to this message and triggers the [RTE](#) to indicate the data reception.

It is also possible that a [V2x message](#) doesn't need to be decoded within the [V2xDM](#). Instead, the whole message can be forwarded to another ECU on the vehicle network

for further operation. In this case, the [V2xDM](#) will forward the data to the [PduR](#) to send the whole V2x message to the vehicle network as depicted in [Figure 7.2](#). If the above case is desired and additionally no element of this message is needed in an object, the [V2xDM](#) does not decode this message.

Info: In fact, this could be considered as a statically configured complex event processing (CEP) system, with the structured data transformation and conversion, in the context of the [V2x stack](#) and RTE.

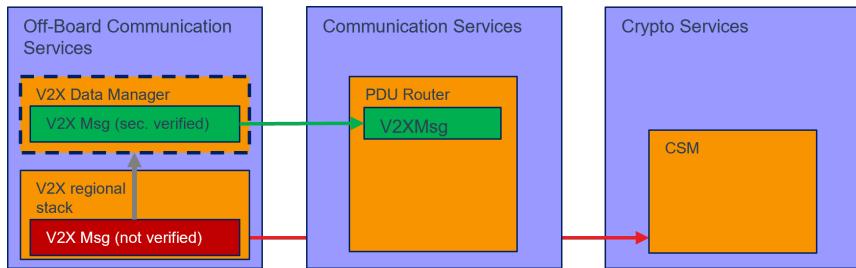


Figure 7.2: Routing of V2x messages to [PduR](#) through the [V2xDM](#)

As a summary, the [V2xDM](#) provides the following features:

- Get a [V2x message](#), either by the [V2x stack](#) *OR* through [PduR](#).
- Pass on the [V2x message](#) to the [PduR](#) to transmit the entire message to the vehicle network via bus communication. This is an optional step and can only be used if the [V2x message](#) was provided by a [V2x stack](#), not by the [PduR](#) itself!
- Forward contents of the [V2x messages](#) to the [RTE](#) by:
 - decoding the ASN.1 coded [V2x message](#),
 - (optionally) transform [simple types](#) into [V2x catalog items](#) (one or more simple types can be transformed into one [V2x catalog item](#). Several [V2x catalog items](#) can be generated from one V2x message),
 - write the [V2x catalog item](#) into a variable data prototype of a S/R interface,
 - call the [RTE](#) to provide the results to a software component (SW-C) or to a SOME/IP transformer (depending on the configuration of the pre-configured S/R port).

This is illustrated in [Figure 7.3](#).

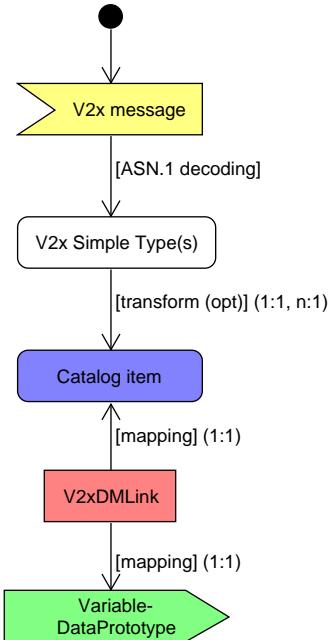


Figure 7.3: Data flow diagram of an incoming V2x message

[CP_SWS_V2xDM_00001] Regional V2x stack provides the V2x message to the V2xDM [The regional V2x stack shall forward any V2x message that is processed by the V2xDM module. Any security checks that is required by the regional V2x stack (e.g. signature verification) shall successfully be done before the message is passed on to the V2xDM.] ([SRS_V2X_26010](#))

[CP_SWS_V2xDM_00002] Configuration of V2x messages in V2xDM [The V2xDM shall provide a configuration per V2x message type in the EcuC configuration through V2xDMMessageto indicate that this message is handled within the V2xDM. This configuration also contains information how to process this message within the V2xDM.] ([SRS_V2X_26001](#))

[CP_SWS_V2xDM_00003] V2xDM shall optionally forward V2x messages to the PDU-Router [The configuration of the V2x message within the V2xDM shall allow to indicate if that V2x message shall be forwarded to the PDU-Router (see V2xDMPdu). If this configuration is active for a V2x message, the V2xDM shall forward the received data to the PDU-Router any time the message has been indicated by the V2x stack and trigger the transmission of a PDU.] ([SRS_V2X_26003](#))

Rationale: This allows to forward the whole secured V2x message to the vehicle network to delegate the processing of the whole information in the receiving ECU (see Figure 7.2). This forwarding option ensures that only the V2xDM needs an interface with the PDU router. A regional V2x stack doesn't need to implement that. At the same time it allows to distribute any V2x message to a node on the network if decoding is too complex within this ECU or the V2x message information is only needed in one ECU as a whole. It should be noted that ASN.1 decoding is then needed in the receiving ECU.

Note: The **V2xDM** will forward any **V2x message** that is provided by the underlying regional **V2x stack**. It will not check if it is a duplicate from a previously provided message, and will not guarantee ordering relations between the messages. Thus, if the **V2x stack** provides a duplicated message, this will also appear as a duplicate on the vehicle network or **SWC**.

[CP_SWS_V2xDM_00004] V2xDM configures references to S/R-port and associated VariableDataPrototypes in its EcuC configuration [The **V2xDM** shall provide an EcuC configuration that references pre-defined and existing VariableDataPrototypes (see [9]).] ([SRS_V2X_26001](#)) This allows the definition of S/R ports and to reference the VariableDataPrototypes by the **V2xDM** through configuration and the mapping of **V2x message elements**.

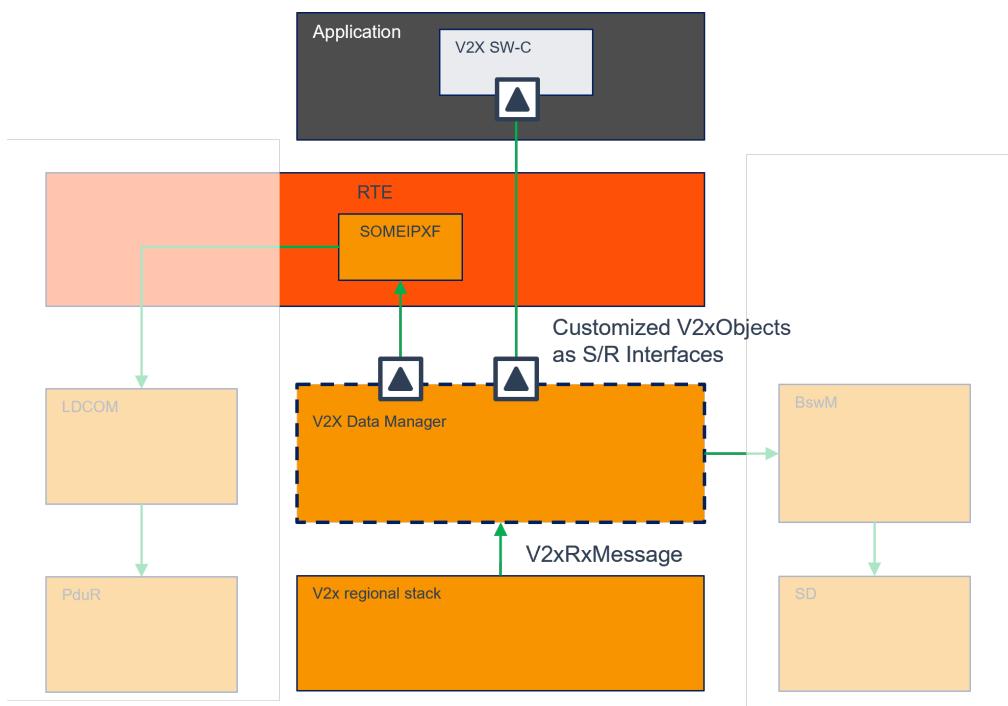


Figure 7.4: V2x objects provided by the V2xDM as S/R ports

One major goal of the **V2xDM** is to provide a selective view to the **V2x message elements** contained in the **V2x message**. Ideally, these **V2x message elements** are independent from the underlying regional **V2x stack** and can be provided like a data catalog that contains unified **V2x catalog items**. For example, a view to the position, speed and heading of a car can be derived from a **V2x message**. This information can be provided as a unified set of **V2x catalog items**, independent from the underlying regional **V2x stack**. But one **V2x stack** may define the speed with resolution of 1 m/s, the other defines a resolution of 2 m/s. The vehicle database engineer of an OEM decides to provide a unified **V2x catalog item** "speed" within the vehicle network from the **V2x stack** with a unit of 1 m/s. This requires a conversion function to be applied in the **V2xDM** for one specific **V2x stack**, whereas the speed value of the other can be provided "as is". It depends on the variant which **V2x stack** and its set of **V2x messages** are currently used and, depending on this, which sources are used to derive the **V2x catalog items**.

These items are then mapped to the corresponding VariableDataPrototypes of the V2x object.

7.2 Modelling approach

To allow greater flexibility, the relations of V2x messages, V2x stack and V2x catalog item are modelled in the EcuC configuration of the V2xDM. The basic blocks and their relations are shown in Figure 7.5.

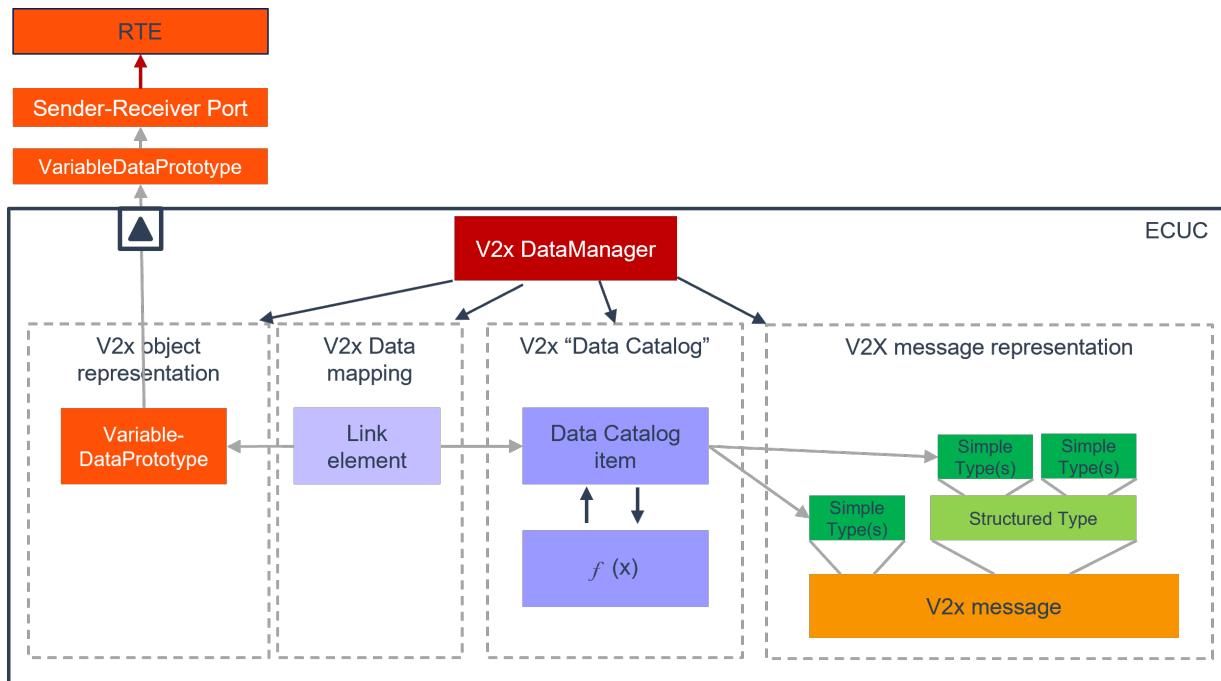


Figure 7.5: EcuC modelling overview of the V2xDM

The EcuC model of the V2xDM can roughly be divided into the following sections:

1. **V2x message representation:** Defines the V2x message according to the ASN.1 (UPER) format description in the specification. It defines all simple type and structured type elements in their order and representation.
2. **V2x Data Catalog:** This section models the V2x catalog item and references the V2x message element(s) from a V2x message. A conversion routine can be referenced to adapt the V2x message element to a unified format and data type.
3. **V2x Data Mapping:** This section models the link between the VariableDataPrototype of the V2x object and the V2x catalog item and builds the connection.
4. **V2x object representation:** This section models the references to the VariableDataPrototypes of the pre-defined V2x object so that it can be addressed by the V2xDM.

[CP_SWS_V2xDM_00005] V2xDM provides references to V2x message elements [The **V2xDM** shall provide references to **simple types** of a **V2x message**. This allows to define a representation of the contents of a **V2x message** through the EcuC configuration. It allows to identify the position of a **V2x message element** in the **V2x message**.] (*SRS_V2X_26001*)

[CP_SWS_V2xDM_00006] V2x catalog item shall be defined [The **V2xDM** shall define **V2x data catalog** that represents information from a **V2x message**. The **V2x catalog item** is a one-to-one representation of a **simple type** from a **V2x message** or can even be a result of a calculation where one or more **simple types** are involved.] (*SRS_V2X_26001*)

[CP_SWS_V2xDM_00007] V2xDM shall optionally transform V2x message elements into V2x catalog items [Optionally it shall be possible to define a transformation or conversion of at least one **simple type** of a **V2x message** into a **V2x data link element** (as the **V2x Data Mapping**) that can be mapped to a **VariableDataPrototype**. The transformation or conversion routine can either be provided by the **V2xDM** or can be provided as an operation that can be configured.]

In addition, the **V2xDM** shall offer an interface for such a transformation or conversion routine through a defined API (as a kind of a plug-in interface).] (*SRS_V2X_26002*)

[CP_SWS_V2xDM_00008] V2xDM links V2x catalog items to VariableDataPrototypes of a S/R-port [The **V2xDM** shall map **V2x catalog item** to a **VariableDataPrototype** of a **S/R port**. The mapping shall be configured within its EcuC configuration.] (*SRS_V2X_26001*)

The main operation within the **V2xDM** is the decoding of the **V2x message**, the transformation of its **V2x message elements** and to place the results into **VariableDataPrototypes** of the **V2x object**. This all depends on the EcuC configuration. Thus, the main part of the **V2xDM** will consist of generated code as a result of the EcuC configuration. The static code part is mainly glue code to embed the **V2xDM** into the AUTOSAR environment.

7.3 Module Handling

[CP_SWS_V2xDM_00036] [The **V2xDM** shall reside in the same partition as the underlying **V2XStack**.] (*SRS_BSW_00459*)

7.3.1 Initialization

[CP_SWS_V2xDM_00009] [A call to **V2xDM_Init** initializes all internal variables and set the **V2xDM** module to the initialization state.] (*SRS_BSW_00406, SRS_V2X_26005*)

[CP_SWS_V2xDM_00010] [If development error reporting is enabled via `V2xDMDevErrorDetect`, `V2xDM` shall call `Det_ReportError` with the error code `V2xDM_E_UNINIT` when any API other than `V2xDM_Init` or `V2xDM_GetVersionInfo` is called in uninitialized state.] ([SRS_BSW_00350](#), [SRS_BSW_00450](#))

[CP_SWS_V2xDM_00011] [When `V2xDM_Init` is called in initialized state, the `V2xDM` module shall not re-initialize its internal variables. It shall instead call `Det_ReportError` with the error code `V2xDM_E_REINIT` if development error reporting is enabled (see `V2xDMDevErrorDetect`).] ([SRS_BSW_00350](#))

7.3.2 Scheduling

Message receive indication is triggered asynchronously to the `V2xDM` by the function call `V2xDM_V2xStackRxIndication` from the regional `V2x stack` or by the function call `V2xDM_RxIndication` from the PDU-Router. To decouple actions taken inside the `V2xDM` from the asynchronous calls, the main function `V2xDM_MainFunction` shall be called cyclically. The `V2xDM` will typically call other modules (e.g. `RTE`) in the context of this main function.

[CP_SWS_V2xDM_00012] [The main function `V2xDM_MainFunction` shall be called with the period configured in `V2xDMMainFunctionPeriod`. This function is used to perform operations within the `V2xDM` and to call other modules if a trigger operation is required.] ([SRS_BSW_00478](#))

7.4 Data Transmission and Reception

7.4.1 Data Transmission

[CP_SWS_V2xDM_00013] [If `V2xDMpduDirection` is set to `V2xDM_PDU_SEND`, then `V2xDMpduRef` references a global PDU. The regional `V2x stack` has to call `V2xDM_V2xStackRxIndication` with a reference to the message (symbolic name reference) to provide the message payload to the `V2xDM`. Every time this message is indicated, the `V2xDM` shall call `PduR_V2xDMTransmit` with `PduInfoPtr->MetaDataTable` set to the `NULL_PTR` and `PduInfoPtr->SduLength` to the length of the V2x message payload, and `PduInfoPtr->SduDataPtr` shall be set to the payload of the V2x message.] ([SRS_V2X_26003](#))

7.4.2 Data Reception

The `V2xDM` gets the raw `V2x message` (typically including the ITS-header) in `ASN.1 UPER` format as input. These messages can either be provided directly by an integrated `V2x stack` or can be provided as a PDU from the network by the `PduR`.

[CP_SWS_V2xDM_00035] [The V2x message shall either be received through the PDU-Router or through an underlying V2x stack.] (*SRS_V2X_26003*)

[CP_SWS_V2xDM_CONSTR_00014] [In a configuration where `V2xDMPduDirection` is set to `V2XDM_PDU_RECEIVE`, the parameter `V2xDMPduRef` shall reference a global PDU that provides the V2x message.] (*SRS_V2X_26003*)

Info: It is rather assumed that no regional V2x stack is present in such a configuration.

Note: When configuring the V2xDM make sure to configure a source for every `V2xDMMessage`. This source can either be an input from the `PduR` as described in [CP_SWS_V2xDM_CONSTR_00014] or the call of `V2xDM_V2xStackRxIndication` from a regional V2x stack.

[CP_SWS_V2xDM_00016] [If `V2xDMPduDirection` is set to `V2XDM_PDU_SEND`, the V2xDM forwards this message to the PDU-Router as specified in [CP_SWS_V2xDM_00013]. If V2x objects are also assigned to this message, the V2xDM shall also decode the message, prepare the V2x objects and pass it on to the RTE.] (*SRS_V2X_26001*)

[CP_SWS_V2xDM_00017] [If `V2xDMMsgQueue` is present then any incoming `V2XMessage` through a call of `V2xDM_V2xStackRxIndication` or `V2xDM_RxIndication` shall be placed into the queue and further processing of the message shall be postponed to the scheduled function `V2xDM_MainFunction`.] (*SRS_BSW_00432*)

[CP_SWS_V2xDM_00018] [If `V2xDMMsgQueue` is present and an incoming `V2XMessage` through a call of `V2xDM_V2xStackRxIndication` or `V2xDM_RxIndication` is received but the queue is full, the a RuntimeError `V2xDM_E_QUEUE_OVERRUN` shall be reported through `Det_ReportRuntimeError` and the message shall be dropped.] (*SRS_BSW_00386*)

The queue configuration parameters `V2xDMMsgQueueElementSize` and `V2xDMMsgQueueNumberOfEntries` can be used to configure the message queue for incoming V2x messages. If a queue is configured (by the presence of the container `V2xDMMsgQueue`) the queue depth is specified by `V2xDMMsgQueueNumberOfEntries`. Each entry of the queue has the same size. The size of each queue entry is specified by `V2xDMMsgQueueElementSize` and specifies the number of bytes of a message. This element size shall be able to store the largest `V2XMessage`.

7.5 Data Modelling

7.5.1 V2x message representation

To support multiple regional V2x stacks, the data model of the V2xDM supports a hierarchical system. Every regional specific V2x stack and its corresponding V2x messages are configured in the `V2xDMStack` and subsequent containers of `V2xDMMessage`s

that belongs to this stack. The configuration of various [V2x stacks](#) and its [V2x messages](#) is optional. Due to the support of the AUTOSAR Variant concept, the [V2x stack](#) and its messages can be assigned to such variants to enable or disable them. The configuration of at least one container of [V2xDMStack](#) is mandatory, even if just one regional [V2x stack](#) is required. But the definition of variants is only useful if more than one [V2x stack](#) is used.

[CP_SWS_V2xDM_CONSTR_00019] [For a regional [V2x stack](#) a container [V2xDMStack](#) shall be defined. All [V2x message](#) that the [V2xDM](#) supports shall be configured in subsequent containers of [V2xDMMessages](#).]()

[CP_SWS_V2xDM_CONSTR_00020] [Exactly one regional [V2x stack](#) shall be present per AUTOSAR variation.]()

[CP_SWS_V2xDM_CONSTR_00021] [Each message shall be addressable by external module configurations. Therefore, the [V2xDMMessages](#) container contains an AUTOSAR SymbolicName.]()

[CP_SWS_V2xDM_CONSTR_00022] [Each ASN.1 type, whether it is a structured type or a simple type, must be explicitly modeled and may only be used exactly once. It follows that each ASN.1 element representation may have only one parent node in the [V2xDMMessages](#) container.]()

Rationale: For example, the configuration represents each instance of an [ASN.1](#) type individually. It follows that the [V2xDMMessages](#) container contains exactly one reference to each represented ASN.1 element.

Info: This is necessary because the elements are used as source for the CatalogItems. If there are, for example, two elements of the same type in a sequence and model this type only once and then reference it from both elements, it would no longer be clear which element should be used as source for the CatalogItem.

[CP_SWS_V2xDM_CONSTR_00023] [The shortnames assigned to the [V2xDMMessages](#) containers shall be globally unique. There shall be no two [V2xDMMessages](#) containers (within the same or) within different [V2xDMStack](#) containers sharing the same shortname.]()

7.5.2 V2x data catalog

As second essential part of the model, the data catalog offers the possibility to define a custom data set. This data set can then be used to fill the [V2x objects](#). Each item within this catalog is derived from one or many [V2x message elements](#). Each [V2xCatalogItem](#) is an abstraction to the different regional V2X specifications. To enable compatibility between possibly deviating data representations in different regional stacks, conversions can be applied.

[CP_SWS_V2xDM_CONSTR_00024] [For each AUTOSAR variation, the [V2xCatalogItem](#) needs to be connected to the corresponding [V2x message](#). Each connection is configured as [V2xDMConnection](#) container.]([SRS_V2X_26004](#))

[CP_SWS_V2xDM_CONSTR_00025] [The sources of each `V2xDMConnection` need to be elements of one message. Each source is a necessary piece of information for deriving the `V2x catalog item` value.] ([SRS_V2X_26004](#))

[CP_SWS_V2xDM_CONSTR_00026] [Only `SimpleType`s can be used as sources of the catalog items.] ([SRS_V2X_26001](#))

[CP_SWS_V2xDM_CONSTR_00027] [Each source is configured using the container `V2xDMConnectionSource`. The `SimpleType` shall be identified using the `V2xDMConnectionSourceTargetRef` reference. If one or multiple of its parents in the `ASN.1` hierarchy is of type `SequenceOf`, for each of these parents the `V2xDMConnectionSourceContext` container needs to be defined. The `V2xDMConnectionSourceContext` container specifies a reference to the corresponding `SequenceOf` root type and the accessed index of the `SequenceOf` to uniquely address the message element.] ([SRS_V2X_26001](#))

[CP_SWS_V2xDM_CONSTR_00028] [If the data type of the source message element does not correspond to the `V2x catalog item` type, or if multiple sources are used to derive the item value, a conversion routine needs to be configured using the `V2xDMConversion` container.] ([SRS_V2X_26001](#))

7.5.3 V2x data mapping

The final part of the model is used to connect the `V2x object` elements with `V2x catalog items`. The connection is achieved by defining a `V2xDMLink` container which contains a reference to the `V2xCatalogItem` and one or more references of `V2XObject` elements.

[CP_SWS_V2xDM_CONSTR_00029] [The references of `V2x object` elements are configured as `V2xDMLink`. Each instance of the container shall have one reference to a `V2xCatalogItem` and a reference to the `V2x object` element as `V2xDMLinkV2xObjectElementInstanceRef`.] ([SRS_V2X_26006](#))

[CP_SWS_V2xDM_CONSTR_00030] [Only `V2x object` elements with a type capable of representing all possible values of the `V2x catalog item` type can be connected.] ([SRS_V2X_26006](#))

[CP_SWS_V2xDM_CONSTR_00031] [All elements inside one `V2x object` shall share only one source message.] ([SRS_V2X_26004](#))

Rationale: It is not allowed that data from different messages are combined in the same `V2x object`. The `V2xDM` does not assemble such messages. All elements inside one `V2XObject` need to be filled for the `V2x object` to be dispatched. It follows that a `V2x object` can only ever be dispatched if all its elements are derived from the same message. If multiple messages provide all the sources for a `V2x object`, it is dispatched whenever one of the messages is received.

7.6 Message Decoding and Forwarding

The V2x-messages received by the [V2xDM](#) are encoded in [ASN.1](#) format ([UPER](#) format). Before the data from such a message can be accessed, they are decoded into data structures that are accessible by a microcontroller (highly densed coding format). The exact encoding rule of an [ASN.1](#) message is available through the individual standards and can vary.

[CP_SWS_V2xDM_00032] [If a message is provided to the [V2xDM](#), either through PduR or the regional [V2x stack](#), and [V2x catalog items](#) are assigned to a V2x object for this message, then the [V2xDM](#) will start decoding the message according to the configuration of the [V2xDMMessage](#) and will fill in the VariableDataPrototypes of a [V2x object](#) that are mapped to the respective [V2xCatalogItems](#).] ([SRS_V2X_26001](#), [SRS_V2X_26004](#))

[CP_SWS_V2xDM_00033] [During the decoding of the [ASN.1](#) coded V2x message, the decoder shall call a generated callback function for every StructuredType where the CallbackEnabled flag is set (see [V2xDMStructuredTypeSequenceOfCallbackEnabled](#), [V2xDMStructuredTypeChoiceCallbackEnabled](#) or [V2xDMStructuredTypeSequenceCallbackEnabled](#)). The implementation of this callback function shall be user specific (see [V2xDm_Callback_<Stack>_<Msg>_<Type>](#)). If this function returns E_OK, the decoder proceeds its operation with decoding the next sequence of the V2x message. Any other return value will abort the decoding process and no [V2x object](#) assigned to the V2x message will be indicated to the RTE.] ([SRS_V2X_26002](#))

[CP_SWS_V2xDM_00039] [If an error occurs during decoding of a [V2x message](#) then [V2xDM](#) shall generate a [RuntimeError](#) and call [Det_ReportRuntimeError](#) with the error code [V2xDM_E_DECODING_FAILURE](#).] ([SRS_V2X_26002](#))

[CP_SWS_V2xDM_00038] [If the value of a [V2x catalog item](#) is not an immediate copy of the [V2x message element](#), the conversion function [<V2xDM_ItemConversionFunc>](#) shall be applied to derive the value. The name of the conversion function shall be configured in [V2xDMConversionFunc](#) as a parameter of the container [V2xDMConversion](#) which is a sub container of [V2xDMConnection](#) inside the corresponding catalog item connection. The assigned conversion function name shall be unique and must not collide with an unrelated function's name.] ([SRS_V2X_26001](#))

A conversion function is needed if a [V2x catalog item](#) is derived from one [V2x message element](#) and the source of this message element needs to be converted into another unit (e.g. through linear trasformation). Or a [V2x catalog item](#) is derived from several [V2x message elements](#). In the latter case the conversion function generates the resulting [V2x catalog item](#) out of the input values of the [V2x message elements](#).

An alternative to a user defined conversion function is the usage of standard conversion functions offered by the [V2xDM](#), e.g. the [V2xDMConversionFunctionLinear](#).

Note: The conversion function will only be generated if a [V2x catalog item](#) is referenced by a V2x object. Without a reference, no conversion function will be generated.

[CP_SWS_V2xDM_00034] [The V2xDM shall indicate any [V2x objects](#) that are associated to the [V2x catalog item](#) of a [V2x message](#) to the RTE only after the complete V2x message was successfully decoded and all [V2x objects](#) have been filled completely.] ([SRS_V2X_26001](#))

[CP_SWS_V2xDM_00037] [If an error occurs during conversion of a [V2x message](#) then [V2xDM](#) shall generate a `RuntimeError` and call `Det_ReportRuntimeError` with the error code `V2xDM_E_CONVERSION_FAILURE`.] ([SRS_V2X_26001](#))

Details of the conversion flow can be found in [Figure 9.1](#).

Note: A [V2x object](#) may be configured for transmission via SOME/IP. Values for the transformer and event type are configured accordingly. The V2x Data Manager does not manage service discovery. Either, event types are auto initialized on startup or are managed by SW-C.

7.7 Error Classification

7.7.1 Development Errors

[CP_SWS_V2xDM_00101] [

Type of error	Related error code	Error value
API service called with wrong parameter	<code>V2XDM_E_PARAM</code>	0x01
API service call before the module has been initialized	<code>V2XDM_E_UNINIT</code>	0x02
Call to <code>V2xDM_Init()</code> after the module has already been initialized by a previous call to <code>V2xDM_Init()</code> .	<code>V2XDM_E_REINIT</code>	0x03
An API service was called with a NULL pointer	<code>V2XDM_E_PARAM_POINTER</code>	0x04

] ([SRS_BSW_00385](#))

7.7.2 Runtime Errors

[CP_SWS_V2xDM_00102] [

Type of error	Related error code	Error value
Indicates that the V2xDM queue is full while a new message was received.	<code>V2XDM_E_QUEUE_OVERRUN</code>	0x10
Indicates that the ASN.1 decoding has failed.	<code>V2XDM_E_DECODING_FAILURE</code>	0x11
Indicates that the conversion of the V2x message element into the catalog item has failed.	<code>V2XDM_E_CONVERSION_FAILURE</code>	0x12

] ([SRS_BSW_00385](#))

7.7.3 Transient Faults

The [V2xDM](#) module does not define transient errors.

7.7.4 Production Errors

The [V2xDM](#) module does not define production errors.

7.7.5 Extended Production Errors

The [V2xDM](#) module does not define extended production errors.

8 API specification

8.1 API parameter checking

The V2x Data Manager module reports the development error V2xDM_E_PARAM_POINTER when a NULL_PTR is not accepted as an argument to a service or callback function. The exact behavior is specified in [SWS_BSW_00050] and [SWS_BSW_00212].

8.2 Imported types

In this chapter all types included from the following files are listed.

[CP_SWS_V2xDM_01003] ↗

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
ComStack_Types	ComStack_Types.h	PduldType
Rte	Rte_<SWC>.h	Rte_Instance
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

↳()

8.3 Type definitions

8.3.1 V2xDM_ConfigType

[CP_SWS_V2xDM_01009] ↗

Name	V2xDm_Rep_<Stack>_<Msg>_<Type>	
Kind	Structure	
Elements	implementation specific	
	Type	-
	Comment	-
Description	This is a generated data structure used in the generated callback (see [CP_SWS_V2xDM_01008]). The generated structure name will be derived from various container names defined in the EcuC configuration: <Stack>: Container name of V2xDMStack <Msg>: Container name of V2xDMMessage <Type>: Container name of the V2xDMStructuredType where the callback references to.	
Available via	V2xDM.h	

↳()

8.4 Function definitions

This is a list of functions provided for upper layer modules and other [V2x stack](#) modules.

8.4.1 V2xDM_Init

[CP_SWS_V2xDM_01005] ↗

Service Name	V2xDM_Init	
Syntax	<pre>void V2xDM_Init (void CfgPtr)</pre>	
Service ID [hex]	0x01	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CfgPtr	Component configuration structure
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Service to initialize the module V2xDM. It initializes all variables and sets the module state to initialized.	
Available via	V2xDM.h	

]([SRS_BSW_00101](#), [SRS_BSW_00358](#), [SRS_BSW_00414](#), [SRS_V2X_26005](#))

8.4.2 V2xDM_GetVersionInfo

[CP_SWS_V2xDM_01004] ↗

Service Name	V2xDM_GetVersionInfo	
Syntax	<pre>void V2xDM_GetVersionInfo (Std_VersionInfoType VersionInfoPtr)</pre>	
Service ID [hex]	0x02	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	VersionInfoPtr	Pointer to where to store the version information. Parameter shall not be NULL.
Return value	None	
Description	Returns version information, vendor ID and AUTOSAR module ID of the component.	
Available via	V2xDM.h	

]([SRS_BSW_00407](#), [SRS_BSW_00482](#), [SRS_BSW_00003](#))

8.5 Callback notifications

This is a list of functions provided for other modules.

8.5.1 V2xDM_RxIndication

[CP_SWS_V2xDM_01012] ↗

Service Name	V2xDM_RxIndication	
Syntax	<pre>void V2xDM_RxIndication (PduIdType RxPduId, const PduIdType PduInfoPtr)</pre>	
Service ID [hex]	0x07	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	RxPduId	ID of the received PDU
	PduInfoPtr	Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Indication of a received PDU from a lower layer communication interface module (PduR).	
Available via	V2xDM.h	

↳ (SRS_V2X_26003)

8.5.2 V2xDM_V2xStackRxIndication

[CP_SWS_V2xDM_01007] ↗

Service Name	V2xDM_V2xStackRxIndication	
Syntax	<pre>void V2xDM_V2xStackRxIndication (uint32 MsgId, uint8* V2xMsgDataPtr, uint32 V2xMsgDataLength)</pre>	
Service ID [hex]	0x04	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	MsgId	Holds the identifier to the message
	V2xMsgDataPtr	Pointer to the V2x message data in ASN.1 UPER representation
	V2xMsgDataLength	Indicates the number of bytes provided to the function.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	





Description	Function is called by the underlying V2x stack to provide a V2x message to the V2x Data Manager
Available via	V2xDM.h

」(SRS_BSW_00359, SRS_BSW_00360)

8.6 Scheduled functions

These functions are directly called by Basic Software Scheduler. The following functions shall have no return value and no parameter. All functions shall be non reentrant.

8.6.1 V2xDM_MainFunction

[CP_SWS_V2xDM_01006] 「

Service Name	V2xDM_MainFunction
Syntax	void V2xDM_MainFunction (void)
Service ID [hex]	0x03
Description	Function is called periodically according the specified time interval.
Available via	V2xDM.h

」(SRS_BSW_00432, SRS_BSW_00373, SRS_BSW_00424)

8.7 Expected interfaces

In this chapter all interfaces required from other modules are listed.

8.7.1 Mandatory interfaces

Note: This section defines all interfaces, which are required to fulfill the core functionality of the module.

[CP_SWS_V2xDM_01001] 「

API Function	Header File	Description
Det_ReportRuntimeError	Det.h	Service to report runtime errors. If a callout has been configured then this callout shall be called.

」()

8.7.2 Optional interfaces

This section defines all interfaces, which are required to fulfill an optional functionality of the module.

[CP_SWS_V2xDM_01002] ↗

<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Det_ReportError	Det.h	Service to report development errors.
Rte_Write_<p>_<o>	<application.h> or Rte_<Mip>.h	–

↳

8.7.3 Configurable interfaces

In this section, all interfaces are listed where the target function could be configured. The target function is usually a callback function. The names of this kind of interfaces are not fixed because they are configurable.

There are currently no configurable interfaces available in V2xDM.

8.7.4 V2xDm_Callback_<Stack>_<Msg>_<Type>

[CP_SWS_V2xDM_01008] ↗

Service Name	V2xDm_Callback_<Stack>_<Msg>_<Type>	
Syntax	Std_ReturnType V2xDm_Callback_<Stack>_<Msg>_<Type> (const V2xDm_Rep_<Stack>_<Msg>_<Type> StructData)	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	StructData	Pointer to the structure that has been decoded.
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: Data are accepted, continue operation. E_NOT_OK: Data are not accepted abort operation, do not send V2xObject(s) associated to this message.
Description	This is a generated callback that is called after decoding a sequence, sequenceOf or union of the V2x message. Individual functions are generated when the "...CallbackEnabled" flag is set in the configuration. The function name will be derived from various containernames in the Ecu C configuration: <Stack>: V2xDMStack <Msg>: Container name of V2xDMMessage <Type>: Name of the V2xDMStructuredType where this callback references to.	
Available via	V2xDm.h	

↳

8.7.5 <V2xDM_ItemConversionFunc>

[CP_SWS_V2xDM_01010] ↴

Service Name	<V2xDM_ItemConversionFunc>	
Syntax	Std_ReturnType <V2xDM_ItemConversionFunc> (<GeneratedType> ItemResult, <GeneratedType> ItemInput1, <GeneratedType> ...)	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	ItemInput1	This value contains the SimpleType of the V2x message mapped to the catalog item. The data type depends on the SimpleType and is vendor specific.
	...	This value contains the SimpleType of the V2x message mapped to the catalog item. The data type depends on the SimpleType and is vendor specific.
Parameters (inout)	None	
Parameters (out)	ItemResult	This value provides the result of the calculation. The data type depends on the data type where V2xDMCatalogItemTypeRef refers to.
Return value	Std_ReturnType	E_OK: Conversion successfully performed. E_NOT_OK: Conversion failed. ItemResult is not valid.
Description	This is a generated callback that is called before a catalog item is written to a VariableData Prototype of a V2x object. It allows to transform the V2x message element into the platform type of the VariableDataPrototype and/or to re-scale the value. If more than one V2x message element is assigned to the catalog item, further input elements will be added to the parameter list of the function. The function name will be derived from the configuration item V2x DMConversionFunc of the container V2xDMConversion in the EcuC configuration.	
Available via	V2xDM.h	

↳(SRS_V2X_26002, SRS_V2X_26006)

8.8 Service Interfaces

The [V2xDM](#) provides Sender-Receiver ports as service interfaces to the [RTE](#). However, in contradiction to other service modules, the [V2xDM](#) is not mandating specific ports and service interfaces to interconnect to the pre-defined S/R ports. The [V2xDM](#) takes the information, which P-Port prototypes need to be generated from the EcuC configuration of [V2xDMLinkV2xObjectElementInstanceRef\(s\)](#). This parameter references to the pre-defined RPortPrototype of a SenderReceiverInterface and its VariableDataPrototype, so that the [V2xDM](#) can generate the necessary PPortPrototype(s).

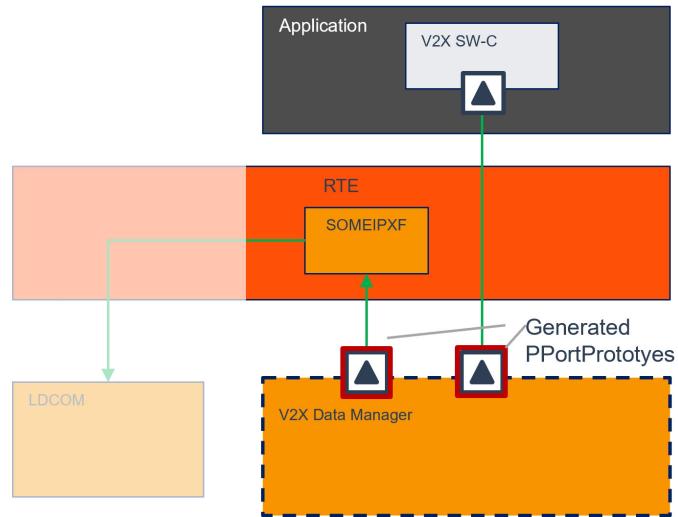


Figure 8.1: Generated PPortPrototype(s) by the [V2xDM](#)

9 Sequence diagrams

9.1 V2x message reception

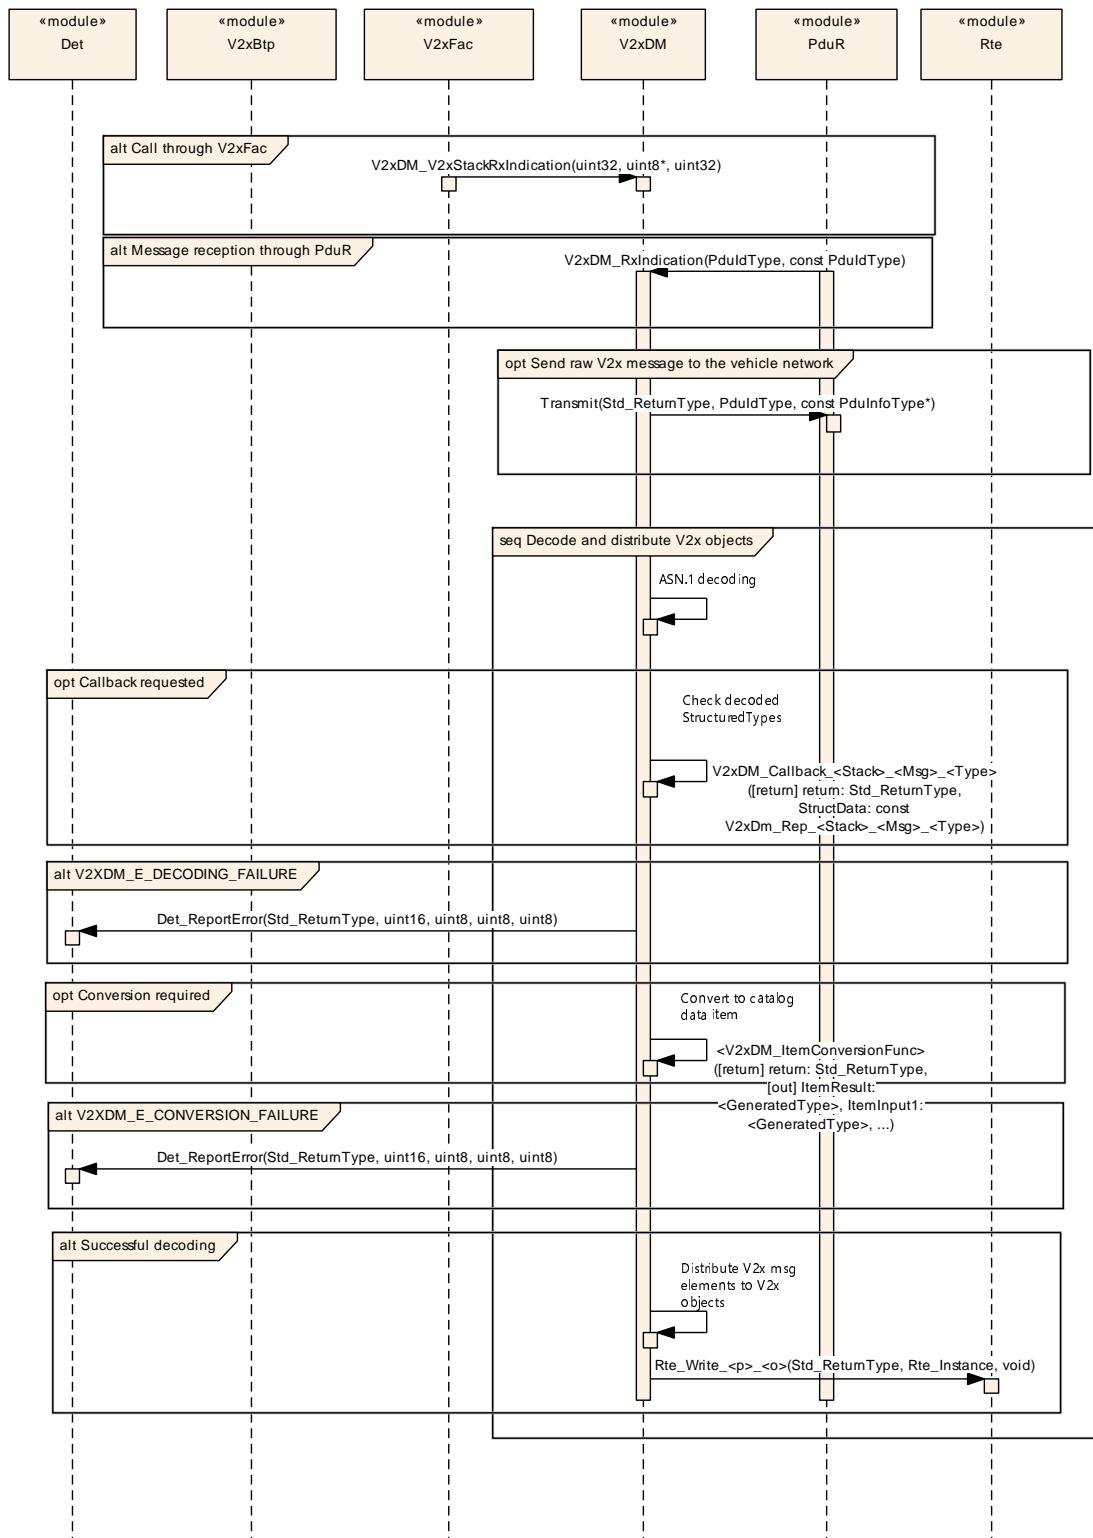


Figure 9.1: V2x message reception and processing

10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. For general information about the definition of containers and parameters, refer to the section 10.1 “Introduction to configuration specification” in [3, SWS BSW General].

Chapter 10.1 specifies the structure (containers) and the parameters of the module V2x_DataManager.

Chapter 10.2 specifies published information of the module V2x_DataManager.

10.1 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapter 7 and Chapter 8.

10.1.1 V2xDM

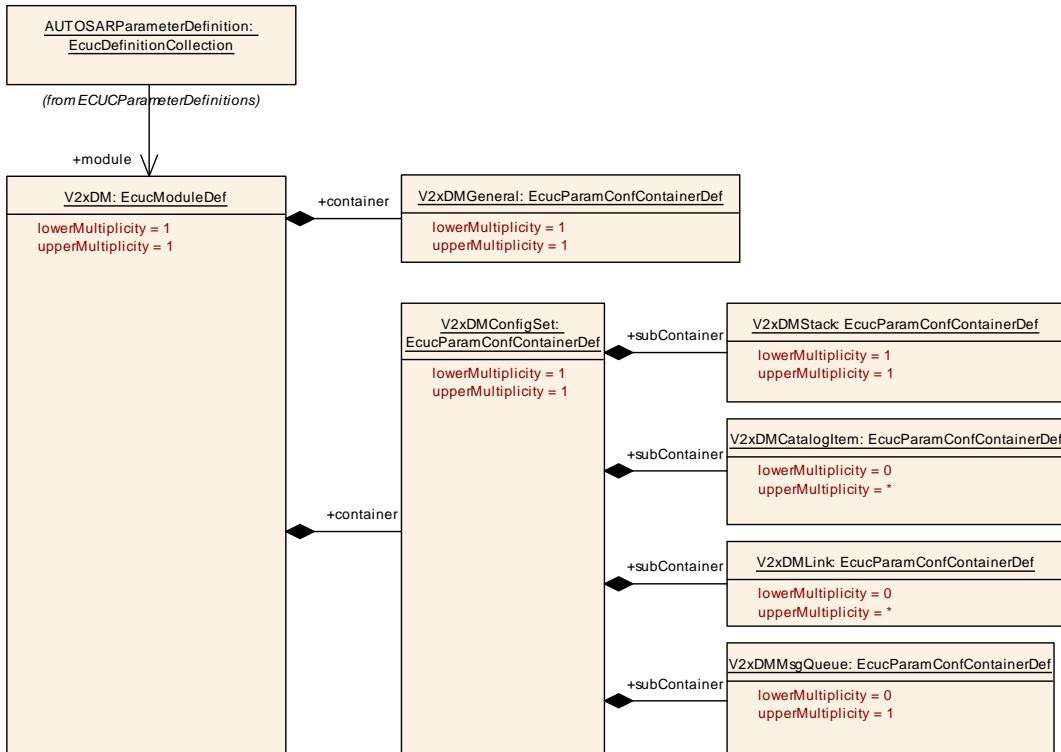


Figure 10.1: V2XDataManager

SWS Item	[ECUC_V2xDM_00001]
Module Name	V2xDM
Description	Configuration of the V2XDM module
Post-Build Variant Support	false
Supported Config Variants	VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMConfigSet	1	Container contains all configuration items for the V2xDM
V2xDMGeneral	1	This container contains the general configuration parameters of the Vehicle-2-X Data Manager.

10.1.2 V2xDMGeneral

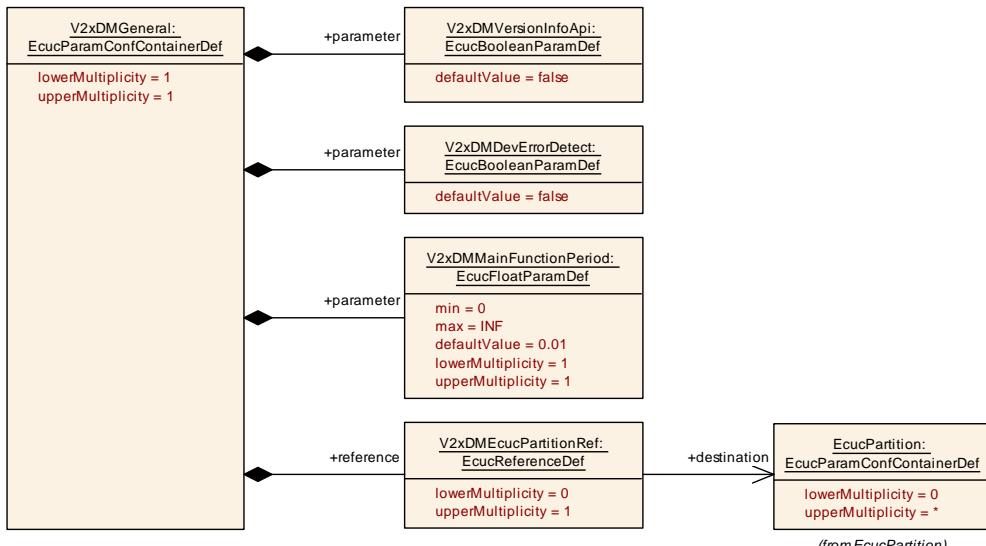


Figure 10.2: V2XDMGeneral

SWS Item	[ECUC_V2xDM_00002]
Container Name	V2xDMGeneral
Parent Container	V2xDM
Description	This container contains the general configuration parameters of the Vehicle-2-X Data Manager.
Configuration Parameters	

SWS Item	[ECUC_V2xDM_00003]
Parameter Name	V2xMDMDevErrorDetect
Parent Container	V2xDMGeneral





Description	Switches the Default Error Tracer (Det) detection and notification ON or OFF. <ul style="list-style-type: none"> • true: enabled (ON) • false: disabled (OFF) 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00020]		
Parameter Name	V2xDMMainFunctionPeriod		
Parent Container	V2xDMGeneral		
Description	Specifies the period of main function V2xDM_MainFunction in seconds.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	0.01		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: ECU		

SWS Item	[ECUC_V2xDM_00004]		
Parameter Name	V2xDMVersionInfoApi		
Parent Container	V2xDMGeneral		
Description	Enable/disables the API for reading the version information of the V2xDM Module. <ul style="list-style-type: none"> • true: enabled (ON) • false: disabled (OFF) 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00098]		
Parameter Name	V2xDMEcucPartitionRef		
Parent Container	V2xDMGeneral		
Description	Reference to EcucPartition, where V2x Data Manager module is assigned to.		
Multiplicity	0..1		





Type	Reference to EcucPartition		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

No Included Containers

10.1.3 V2xDMConfigSet

SWS Item	[ECUC_V2xDM_00086]		
Container Name	V2xDMConfigSet		
Parent Container	V2xDM		
Description	Container contains all configuration items for the V2xDM		
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMCatalogItem	0..*	Contains all catalog items of the V2x DataManager
V2xDMLink	0..*	Defines the links between the VariableDataPrototypes of the V2x object to the V2x catalog items.
V2xDMMsgQueue	0..1	Specifies a message queue for incoming V2x messages of the data manager. If this container is not present, no queue is used for incoming V2x messages. If it is present, the elements of the container specifies the queue depth and its elements.
V2xDMStack	1	Holds the V2x stack specific container and parameter.

10.1.4 V2xDMLink

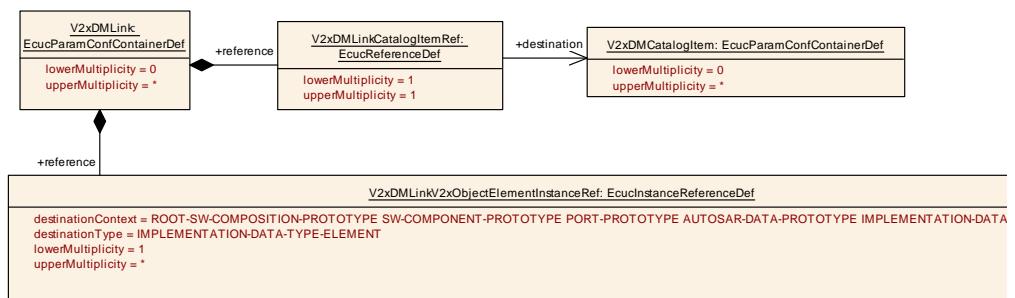


Figure 10.3: V2XDMLink

SWS Item	[ECUC_V2xDM_00079]		
Container Name	V2xDMLink		
Parent Container	V2xDMConfigSet		
Description	Defines the links between the VariableDataPrototypes of the V2x object to the V2x catalog items.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00080]		
Parameter Name	V2xDMLinkCatalogItemRef		
Parent Container	V2xDMLink		
Description	References to the catalog item that is used for this link.		
Multiplicity	1		
Type	Reference to V2xDMCatalogItem		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00081]		
Parameter Name	V2xDMLinkV2xObjectElementInstanceRef		
Parent Container	V2xDMLink		
Description	This container references to the port prototype and VariableDataPrototype as a V2x object.		
Multiplicity	1..*		
Type	Instance reference to IMPLEMENTATION-DATA-TYPE-ELEMENT context: ROOT-SW-COMPOSITION-PROTOTYPE SW-COMPONENT-PROTOTYPE PORT-PROTOTYPE AUTOSAR-DATA-PROTOTYPE IMPLEMENTATION-DATA-TYPE-ELEMENT*		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency			

No Included Containers

10.1.5 V2xDMCatalogItem

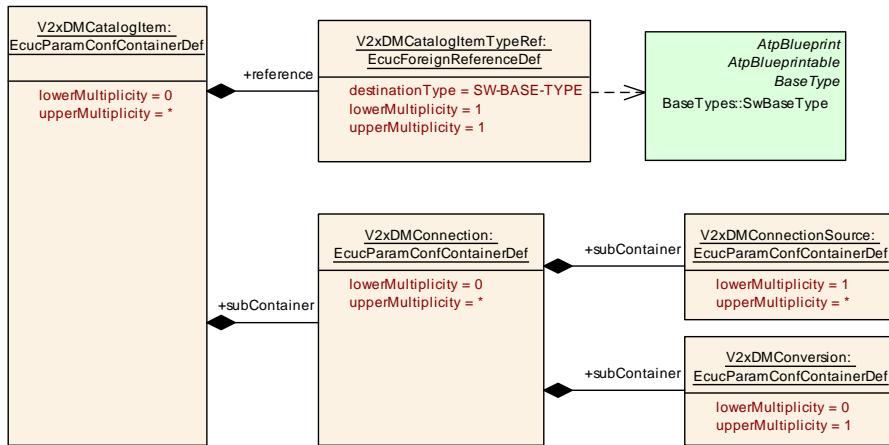


Figure 10.4: V2XDMCatalog

SWS Item	[ECUC_V2xDM_00065]		
Container Name	V2xDMCatalogItem		
Parent Container	V2xDMConfigSet		
Description	Contains all catalog items of the V2x DataManager		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00064]		
Parameter Name	V2xDMCatalogItemTypeRef		
Parent Container	V2xDMCatalogItem		
Description	Reference to the base type of this catalog item.		
Multiplicity	1		
Type	Foreign reference to SW-BASE-TYPE		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMConnection	0..*	Collects all connection information for this catalog item.

10.1.6 V2xDMConnection

SWS Item	[ECUC_V2xDM_00066]		
Container Name	V2xDMConnection		
Parent Container	V2xDMCatalogItem		
Description	Collects all connection information for this catalog item.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMConnectionSource	1..*	Contains definition for the connected sources of V2x message items.
V2xDMConversion	0..1	Allows to define a conversion routine to adapt V2x simple item(s) to the data catalog element.

10.1.7 V2xDMConnectionSource

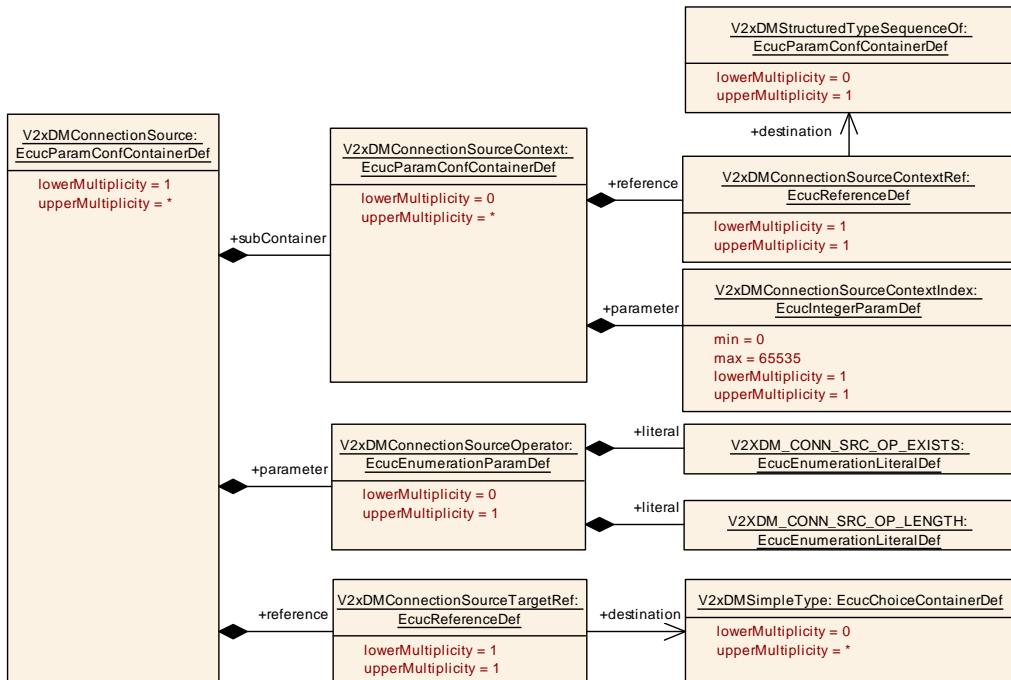


Figure 10.5: V2XDMConnectionSource

SWS Item	[ECUC_V2xDM_00067]		
Container Name	V2xDMConnectionSource		
Parent Container	V2xDMConnection		
Description	Contains definition for the connected sources of V2x message items.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00072]		
Parameter Name	V2xDMConnectionSourceOperator		
Parent Container	V2xDMConnectionSource		
Description	Selects the source type of the operator.		
Multiplicity	0..1		
Type	EcucEnumerationParamDef		
Range	V2XDM_CONN_SRC_OP_EXISTS	—	
	V2XDM_CONN_SRC_OP_LENGTH	—	
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00073]		
Parameter Name	V2xDMConnectionSourceTargetRef		
Parent Container	V2xDMConnectionSource		
Description	Links to the simple type of a V2x message.		
Multiplicity	1		
Type	Reference to V2xDMSimpleType		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
V2xDMConnectionSourceContext	0..*	Contains information to uniquely address a V2X message element. I.e. the V2x message element can be contained in a SequenceOf. In that case the index inside the SequenceOf must be provided to avoid an ambiguous reference.	

10.1.8 V2xDMConnectionSourceContext

SWS Item	[ECUC_V2xDM_00069]		
Container Name	V2xDMConnectionSourceContext		
Parent Container	V2xDMConnectionSource		
Description	Contains information to uniquely address a V2X message element. I.e. the V2x message element can be contained in a SequenceOf. In that case the index inside the SequenceOf must be provided to avoid an ambiguous reference.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00070]		
Parameter Name	V2xDMConnectionSourceContextIndex		
Parent Container	V2xDMConnectionSourceContext		
Description	Index to the SequenceOf element that the SourceContextRef references to.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00071]		
Parameter Name	V2xDMConnectionSourceContextRef		
Parent Container	V2xDMConnectionSourceContext		
Description	Reference to the SequenceOf element of a V2x message.		
Multiplicity	1		
Type	Reference to V2xDMStructuredTypeSequenceOf		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

No Included Containers

10.1.9 V2xDMConversion

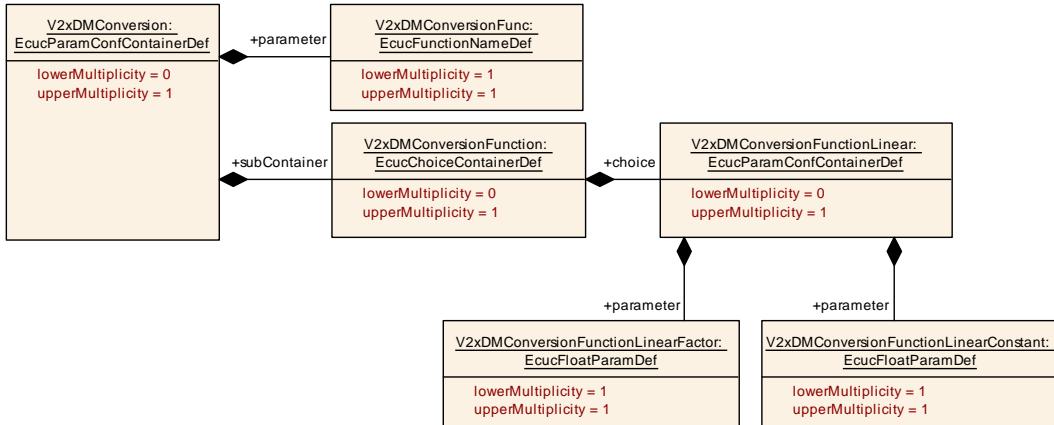


Figure 10.6: V2XDMConversion

SWS Item	[ECUC_V2xDM_00068]		
Container Name	V2xDMConversion		
Parent Container	V2xDMConnection		
Description	Allows to define a conversion routine to adapt V2x simple item(s) to the data catalog element.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00075]		
Parameter Name	V2xDMConversionFunc		
Parent Container	V2xDMConversion		
Description	This parameter provides the function name for the callback <V2xDM_ItemConversion Func>. It is used to convert the simple type information into the data catalog item value and its base type.		
Multiplicity	1		
Type	EcufunctionNameDef		
Default value	-		
Regular Expression	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMConversionFunction	0..1	Defines the conversion function container that shall be applied to convert the V2x message element into the unified data catalog item.

10.1.10 V2xDMConversionFunction

SWS Item	[ECUC_V2xDM_00074]		
Choice Container Name	V2xDMConversionFunction		
Parent Container	V2xDMConversion		
Description	Defines the conversion function container that shall be applied to convert the V2x message element into the unified data catalog item.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	

Container Choices		
Container Name	Multiplicity	Scope / Dependency
V2xDMConversionFunctionLinear	0..1	This container defines th parameter for the linear conversion routine.

10.1.11 V2xDMConversionFunctionLinear

SWS Item	[ECUC_V2xDM_00076]		
Container Name	V2xDMConversionFunctionLinear		
Parent Container	V2xDMConversionFunction		
Description	This container defines th parameter for the linear conversion routine.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	

Configuration Parameters

SWS Item	[ECUC_V2xDM_00077]		
Parameter Name	V2xDMConversionFunctionLinearConstant		
Parent Container	V2xDMConversionFunctionLinear		
Description	This parameter defines the offset to the linear conversion function		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[-INF .. INF]		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00078]		
Parameter Name	V2xDMConversionFunctionLinearFactor		
Parent Container	V2xDMConversionFunctionLinear		
Description	This defines the scale factor for the linear conversion function.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[-INF .. INF]		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.1.12 V2xDMStack

SWS Item	[ECUC_V2xDM_00005]		
Container Name	V2xDMStack		
Parent Container	V2xDMConfigSet		
Description	Holds the V2x stack specific container and parameter.		
Configuration Parameters			

Included Containers

Container Name	Multiplicity	Scope / Dependency
V2xDMMessages	1..*	Definition of a V2x message and its layout

10.1.13 V2xDMMessages

SWS Item	[ECUC_V2xDM_00006]		
Container Name	V2xDMMessages		
Parent Container	V2xDMStack		
Description	Definition of a V2x message and its layout		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00088]		
Parameter Name	V2xDMMsgId		
Parent Container	V2xDMMessage		
Description	Identifier of the message. The set of V2x message identifiers shall be consecutive and gapless.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 4294967295		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00012]		
Parameter Name	V2xDMMsgRootRef		
Parent Container	V2xDMMessage		
Description	This element links to the first structured element within the V2x message.		
Multiplicity	1		
Type	Choice reference to [V2xDMSimpleType , V2xDMStructuredType]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMPdu	0..1	Container for parameters that are necessary for the configuration of the V2xDM to serve as the UpperLayer of the PDU-Router module.
V2xDMSimpleType	0..*	Definition of simple types within a V2x message as a choice of simple types.
V2xDMStructuredType	0..*	Definition of structured types in a V2x message

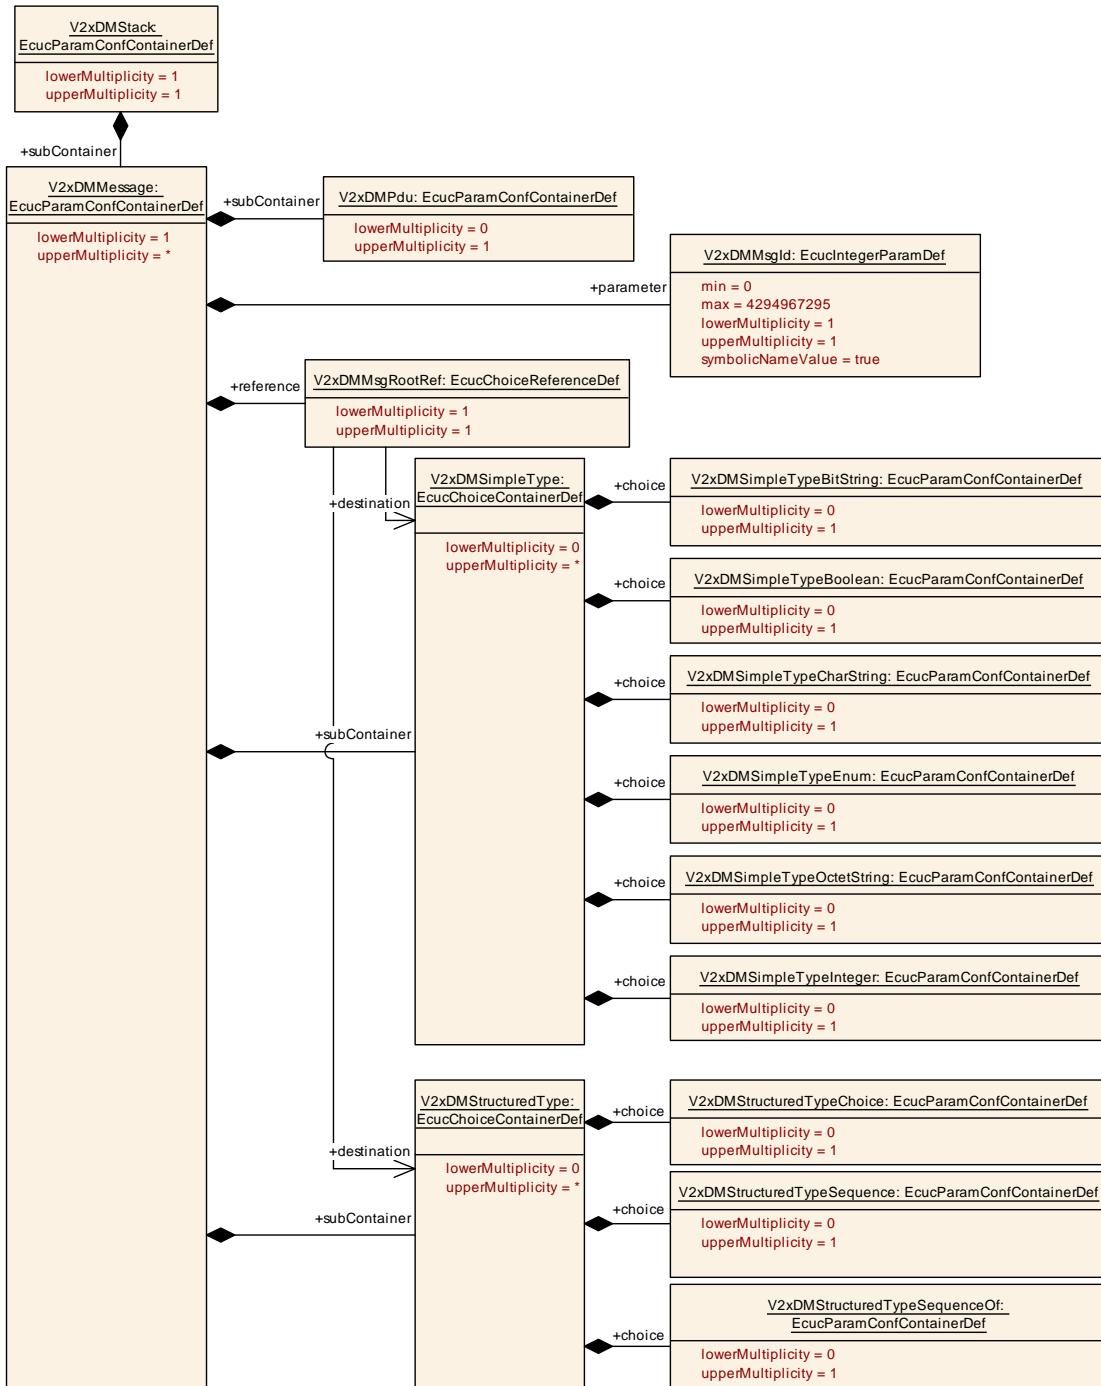


Figure 10.7: V2XDMMessage

10.1.14 V2xDMPdu

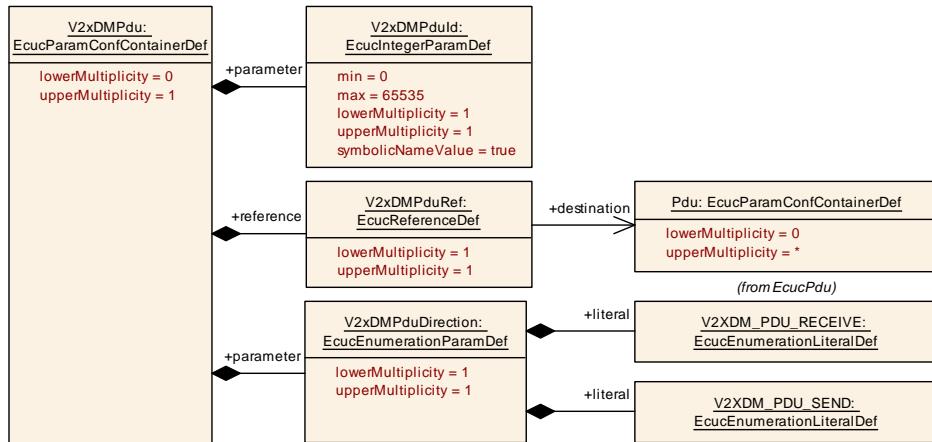


Figure 10.8: V2XDMpdu

SWS Item	[ECUC_V2xDM_00087]		
Container Name	V2xDMPdu		
Parent Container	V2xDMMessage		
Description	Container for parameters that are necessary for the configuration of the V2xDM to serve as the UpperLayer of the PDU-Router module.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00091]		
Parameter Name	V2xDMPduDirection		
Parent Container	V2xDMPdu		
Description	Defines the direction of the PDU: V2XDM_PDU_SEND - V2xDM passes on the V2x message as raw data to the PduR. V2XDM_PDU_RECEIVE - V2xDM receives the V2x message through the PduR (no V2x stack present in the ECU).		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	V2XDM_PDU_RECEIVE	-	
	V2XDM_PDU_SEND	-	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00089]		
Parameter Name	V2xDMPduld		
Parent Container	V2xDMPdu		



△

Description	The numerical value used as the ID of this I-PDU. The ComIPduHandleId is required by the API calls PduR_V2xDMRxIndication to receive I-PDUs from the PduR (ComIPduDirection: Receive) For Tx-I-PDUs (ComIPduDirection: Send), this handle Id is used for the APIs call PduR_V2xDMTransmit to transmit I-PDUs.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency			

SWS Item	[ECUC_V2xDM_00090]		
Parameter Name	V2xDMPduRef		
Parent Container	V2xDMPdu		
Description	Reference to the global Pdu structure.		
Multiplicity	1		
Type	Reference to Pdu		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.1.15 V2xDMMsgQueue

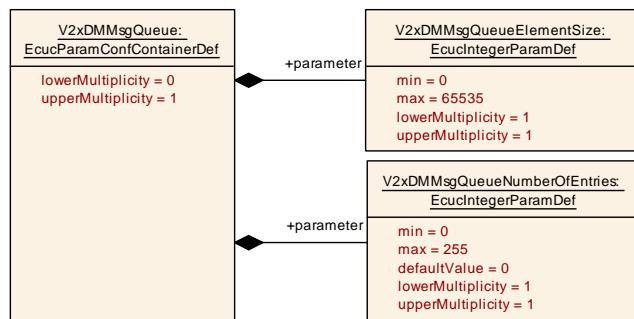


Figure 10.9: V2xDMMsgQueue

SWS Item	[ECUC_V2xDM_00102]		
Container Name	V2xDMMMsgQueue		
Parent Container	V2xDMConfigSet		
Description	Specifies a message queue for incoming V2x messages of the data manager. If this container is not present, no queue is used for incoming V2x messages. If it is present, the elements of the container specifies the queue depth and its elements.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00097]		
Parameter Name	V2xDMMMsgQueueElementSize		
Parent Container	V2xDMMsgQueue		
Description	Size of a queue entry in bytes. All queue entries have the same size. The value shall be large enough to store the largest V2x message.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local dependency: This value shall be set if V2xDMQueueNumberOfEntries > 0.		


SWS Item	[ECUC_V2xDM_00096]		
Parameter Name	V2xDMMMsgQueueNumberOfEntries		
Parent Container	V2xDMMsgQueue		
Description	Specifies the number of Queue entries for incoming V2x messages. One entry per V2x message. A number of 0 in this field disables the queue and actions are performed only in the V2xDM_RxIndication.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	0		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

No Included Containers

10.1.16 V2xDMStructuredType

SWS Item	[ECUC_V2xDM_00007]		
Choice Container Name	V2xDMStructuredType		
Parent Container	V2xDMMessage		
Description	Definition of structured types in a V2x message		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	

Container Choices		
Container Name	Multiplicity	Scope / Dependency
V2xDMStructuredTypeChoice	0..1	Defines a choice of elements within a V2x message.
V2xDMStructuredTypeSequence	0..1	Defines a sequence of elements within a V2x message.
V2xDMStructuredTypeSequenceOf	0..1	Defines a list of elements within a V2x message. Comparable to an array.

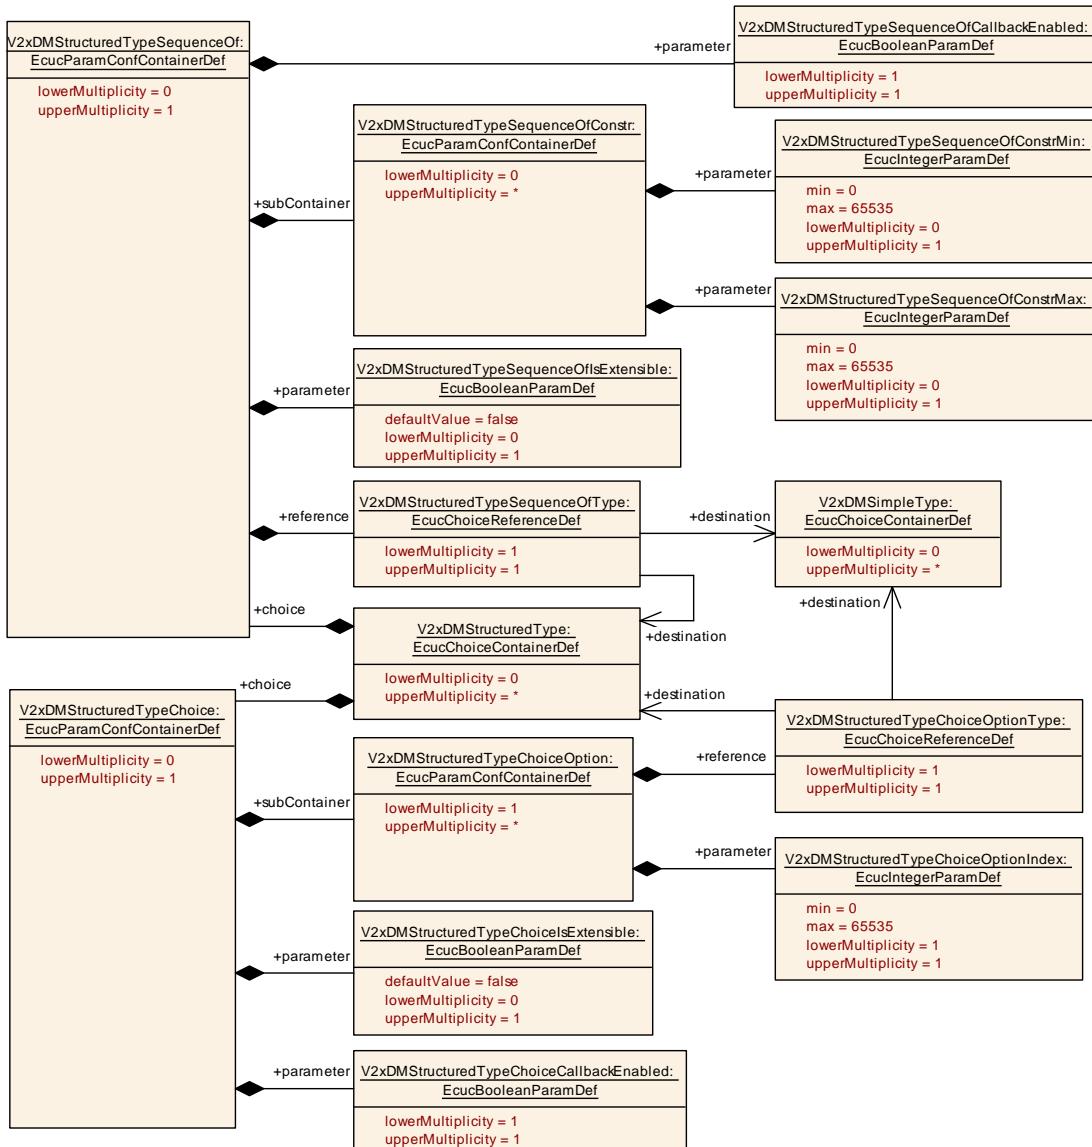
Figure 10.10: V2XDMMessageStructuredTypes

10.1.17 V2xDMStructuredTypeSequence

SWS Item	[ECUC_V2xDM_00010]		
Container Name	V2xDMStructuredTypeSequence		
Parent Container	V2xDMStructuredType		
Description	Defines a sequence of elements within a V2x message.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	





Configuration Parameters

SWS Item	[ECUC_V2xDM_00094]		
Parameter Name	V2xDMStructuredTypeSequenceCallbackEnabled		
Parent Container	V2xDMStructuredTypeSequence		
Description	Enables a callback when the structure has been decoded.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00025]		
Parameter Name	V2xDMStructuredTypeSequencesExtensible		
Parent Container	V2xDMStructuredTypeSequence		
Description	Defines if this sequence can be extended in the future (typically declared in ASN.1 with '...').		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMStructuredTypeSequence Child	1..*	Declares all attributes for a child element in the ASN.1 structured type sequence element.

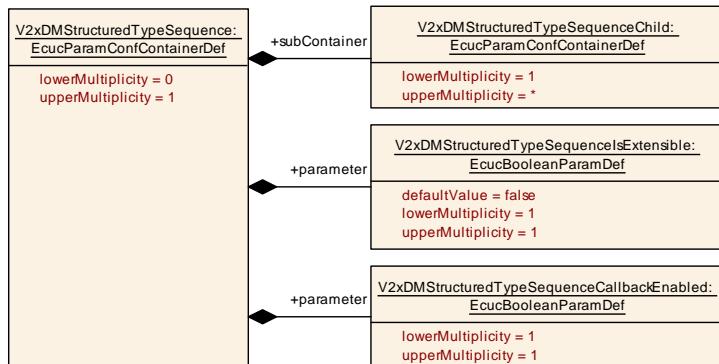
Figure 10.11: V2XDMMessageStructuredOf- and Choice Types

10.1.18 V2xDMStructuredTypeSequenceChild

SWS Item	[ECUC_V2xDM_00021]		
Container Name	V2xDMStructuredTypeSequenceChild		
Parent Container	V2xDMStructuredTypeSequence		
Description	Declares all attributes for a child element in the ASN.1 structured type sequence element.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00022]		
Parameter Name	V2xDMStructuredTypeSequenceChildAttribute		
Parent Container	V2xDMStructuredTypeSequenceChild		
Description	Select the attribute of a sequence element.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	V2XDM_STRUCTURED_TYPE_SEQUENCE_CHILD_ATTRIBUTE_DEFAULT	—	
	V2XDM_STRUCTURED_TYPE_SEQUENCE_CHILD_ATTRIBUTE_NONE	—	
	V2XDM_STRUCTURED_TYPE_SEQUENCE_CHILD_ATTRIBUTE_OPTIONAL	—	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00092]		
Parameter Name	V2xDMStructuredTypeSequenceChildDefault		
Parent Container	V2xDMStructuredTypeSequenceChild		
Description	Default values of the structure.		
Multiplicity	0..1		
Type	EcucStringParamDef		
Default value	—		
Regular Expression	—		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	




△

	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00023]		
Parameter Name	V2xDMStructuredTypeSequenceChildIndex		
Parent Container	V2xDMStructuredTypeSequenceChild		
Description	Define the index of the element within the structure.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

SWS Item	[ECUC_V2xDM_00024]		
Parameter Name	V2xDMStructuredTypeSequenceChildType		
Parent Container	V2xDMStructuredTypeSequenceChild		
Description	Reference to the child element in the structure as a simple or structured type.		
Multiplicity	1		
Type	Choice reference to [V2xDMSimpleType , V2xDMStructuredType]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

No Included Containers

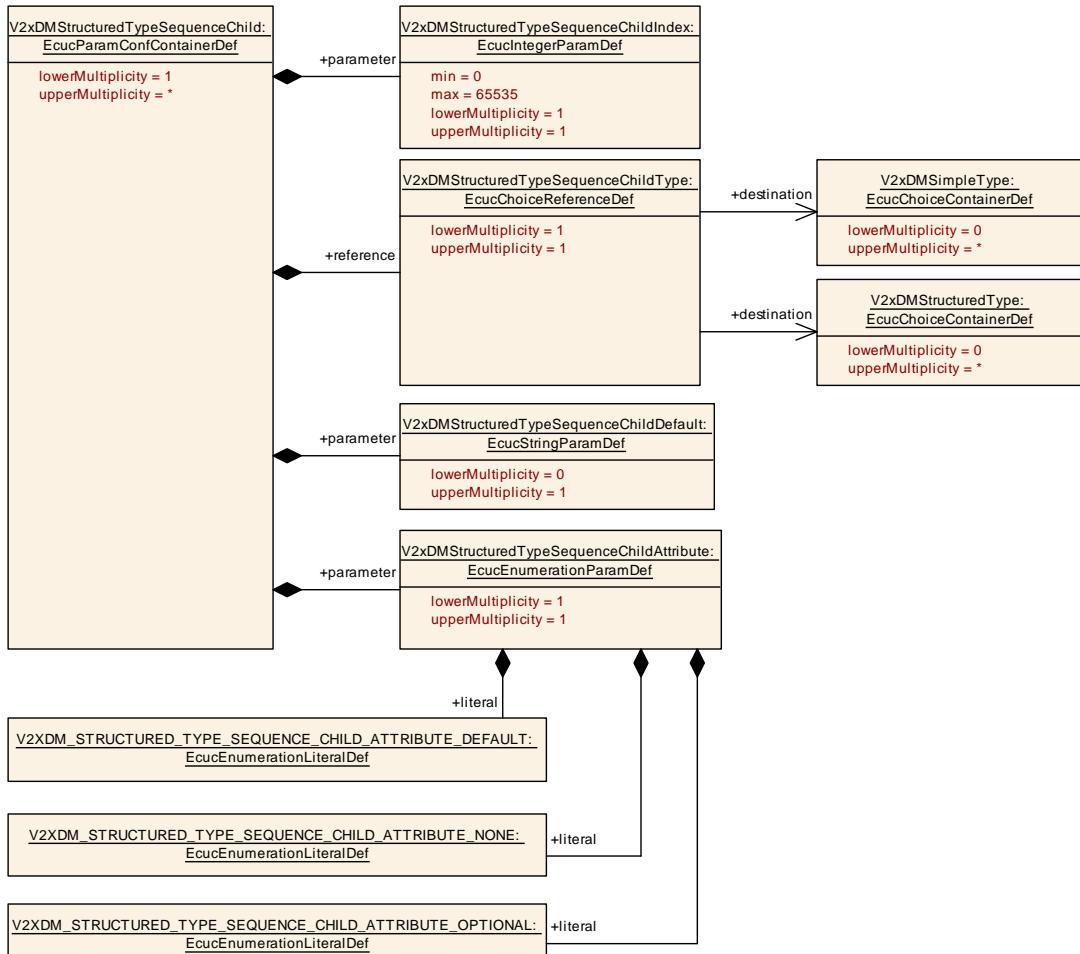
Figure 10.12: V2XDMStructuredTypeSequenceChild

10.1.19 V2xDMStructuredTypeSequenceOf

SWS Item	[ECUC_V2xDM_00009]		
Container Name	V2xDMStructuredTypeSequenceOf		
Parent Container	V2xDMStructuredType		
Description	Defines a list of elements within a V2x message. Comparable to an array.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00093]		
Parameter Name	V2xDMStructuredTypeSequenceOfCallbackEnabled		
Parent Container	V2xDMStructuredTypeSequenceOf		



△

Description	Enables a generated callback when the structure is decoded.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00027]		
Parameter Name	V2xDMStructuredTypeSequenceOfIsExtensible		
Parent Container	V2xDMStructuredTypeSequenceOf		
Description	Defines if the SequenceOf is extensible in the future (marked as '...' in ASN.1)		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

SWS Item	[ECUC_V2xDM_00026]		
Parameter Name	V2xDMStructuredTypeSequenceOfType		
Parent Container	V2xDMStructuredTypeSequenceOf		
Description	Reference to the next structured or simple type.		
Multiplicity	1		
Type	Choice reference to [V2xDSimpleType, V2xDMStructuredType]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
V2xDMStructuredTypeSequenceOfConstr	0..*	This container defines the constraints of the SequenceOf parent container.	

10.1.20 V2xDMStructuredTypeSequenceOfConstr

SWS Item	[ECUC_V2xDM_00028]		
Container Name	V2xDMStructuredTypeSequenceOfConstr		
Parent Container	V2xDMStructuredTypeSequenceOf		
Description	This container defines the constraints of the SequenceOf parent container.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00030]		
Parameter Name	V2xDMStructuredTypeSequenceOfConstrMax		
Parent Container	V2xDMStructuredTypeSequenceOfConstr		
Description	Defines the max. number of SequenceOf values.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	—		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

SWS Item	[ECUC_V2xDM_00029]		
Parameter Name	V2xDMStructuredTypeSequenceOfConstrMin		
Parent Container	V2xDMStructuredTypeSequenceOfConstr		
Description	Defines the minimum number of the SequenceOf container.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	—		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

No Included Containers

10.1.21 V2xDMStructuredTypeChoice

SWS Item	[ECUC_V2xDM_00011]		
Container Name	V2xDMStructuredTypeChoice		
Parent Container	V2xDMStructuredType		
Description	Defines a choice of elements within a V2x message.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00095]		
Parameter Name	V2xDMStructuredTypeChoiceCallbackEnabled		
Parent Container	V2xDMStructuredTypeChoice		
Description	Enables a callback when the structure has been decoded.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00031]		
Parameter Name	V2xDMStructuredTypeChoicelsExtensible		
Parent Container	V2xDMStructuredTypeChoice		
Description	Indicates if the choice container can be extended in future releases (marked with '...' in ASN.1)		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMStructuredTypeChoice Option	1..*	Defines the reference and order of types in this choice element.

10.1.22 V2xDMStructuredTypeChoiceOption

SWS Item	[ECUC_V2xDM_00032]		
Container Name	V2xDMStructuredTypeChoiceOption		
Parent Container	V2xDMStructuredTypeChoice		
Description	Defines the reference and order of types in this choice element.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00033]		
Parameter Name	V2xDMStructuredTypeChoiceOptionIndex		
Parent Container	V2xDMStructuredTypeChoiceOption		
Description	Defines the order of elements inside the choice container.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency			


SWS Item	[ECUC_V2xDM_00034]		
Parameter Name	V2xDMStructuredTypeChoiceOptionType		
Parent Container	V2xDMStructuredTypeChoiceOption		
Description	Define a link to a simple or structured type that is present in this choice container.		
Multiplicity	1		
Type	Choice reference to [V2xDMSimpleType , V2xDMStructuredType]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency			

No Included Containers

10.1.23 V2xDMSimpleType

SWS Item	[ECUC_V2xDM_00008]		
Choice Container Name	V2xDMSimpleType		
Parent Container	V2xDMMessage		
Description	Definition of simple types within a V2x message as a choice of simple types.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	

Container Choices		
Container Name	Multiplicity	Scope / Dependency
V2xDMSimpleTypeBitString	0..1	Definition of the ASN.1 Bit String
V2xDMSimpleTypeBoolean	0..1	Definition of the ASN.1 boolean type
V2xDMSimpleTypeCharString	0..1	Definition of the ASN.1 type character string
V2xDMSimpleTypeEnum	0..1	Definition of the ASN.1 enumeration type
V2xDMSimpleTypeInteger	0..1	Definition of the ASN.1 integer type
V2xDMSimpleTypeOctetString	0..1	Definition of the ASN.1 Octet String.

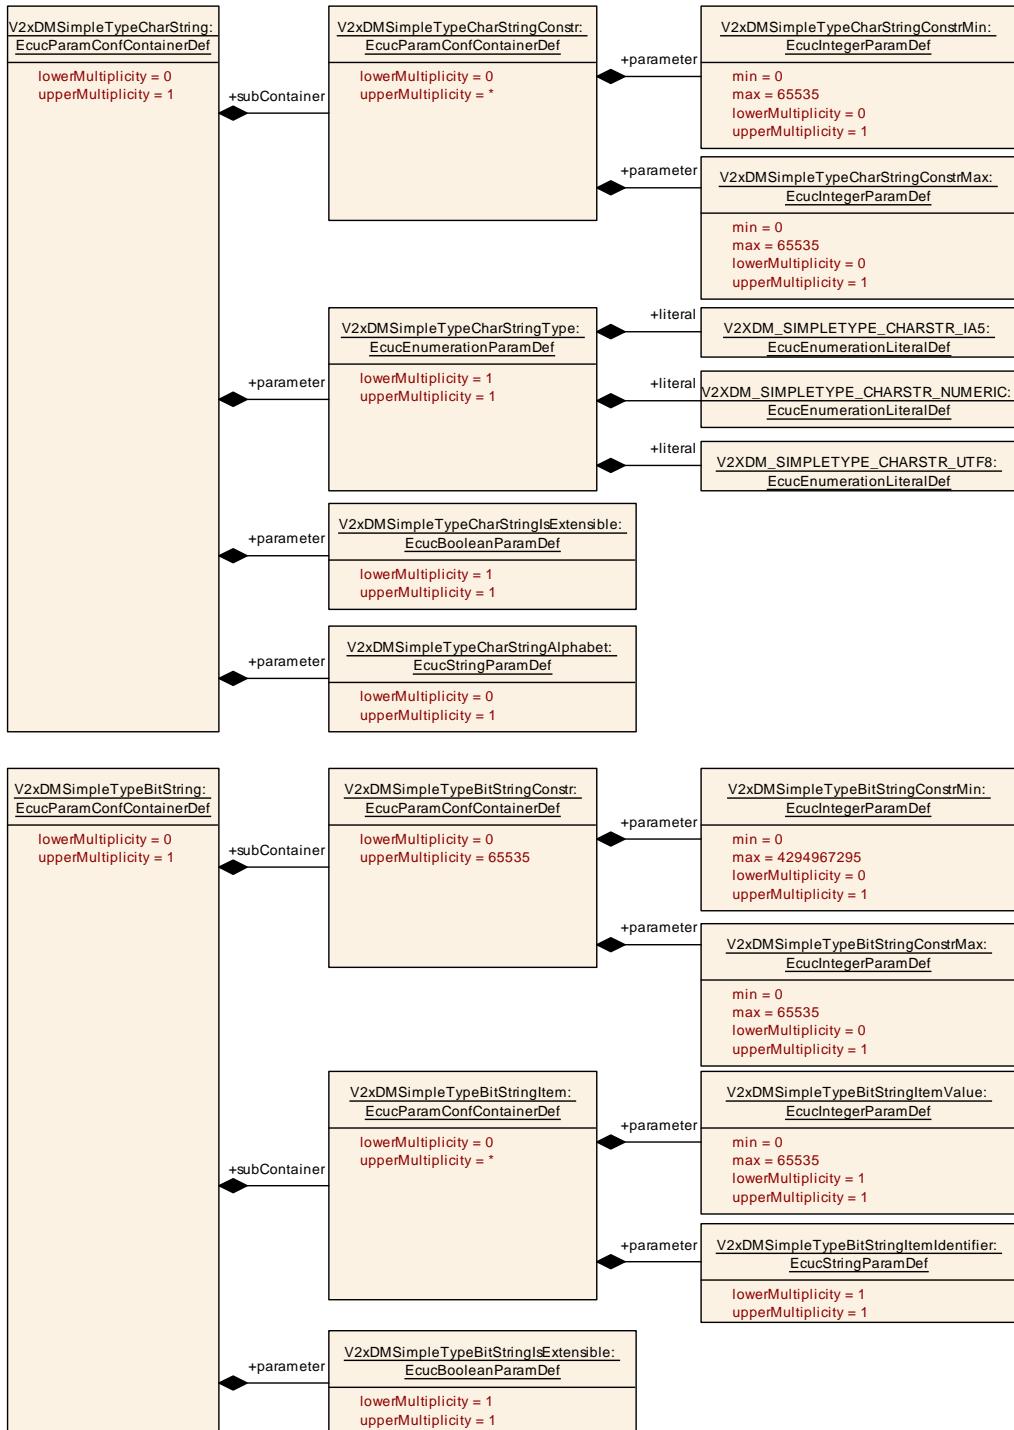
Figure 10.13: V2XDMMessageSimpleTypes

10.1.24 V2xDMSimpleTypeBitString

SWS Item	[ECUC_V2xDM_00013]		
Container Name	V2xDMSimpleTypeBitString		
Parent Container	V2xDMSimpleType		
Description	Definition of the ASN.1 Bit String		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00062]		
Parameter Name	V2xDMSimpleTypeBitStringIsExtensible		
Parent Container	V2xDMSimpleTypeBitString		
Description	Defines if the item is extensible in future releases.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMSimpleTypeBitStringConstr	0..65535	Container defines the constraints for the length of the bit string (Min/Max).
V2xDMSimpleTypeBitStringItem	0..*	Defines item values as Key-Pair-Values for the BitString.

10.1.25 V2xDMSimpleTypeBitStringConstr

SWS Item	[ECUC_V2xDM_00056]		
Container Name	V2xDMSimpleTypeBitStringConstr		
Parent Container	V2xDMSimpleTypeBitString		
Description	Container defines the constraints for the length of the bit string (Min/Max).		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00058]		
Parameter Name	V2xDMSimpleTypeBitStringConstrMax		
Parent Container	V2xDMSimpleTypeBitStringConstr		
Description	Max length of the BitString parameter.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00057]		
Parameter Name	V2xDMSimpleTypeBitStringConstrMin		
Parent Container	V2xDMSimpleTypeBitStringConstr		
Description	Min length of the BitString parameter.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	–		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.1.26 V2xDMSimpleTypeBitStringItem

SWS Item	[ECUC_V2xDM_00059]		
Container Name	V2xDMSimpleTypeBitStringItem		
Parent Container	V2xDMSimpleTypeBitString		
Description	Defines item values as Key-Pair-Values for the BitString.		





Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00061]		
Parameter Name	V2xDMSimpleTypeBitStringItemIdentifier		
Parent Container	V2xDMSimpleTypeBitStringItem		
Description	Defines the name for the Key-Pair-Values for the BitString.		
Multiplicity	1		
Type	EcucStringParamDef		
Default value	—		
Regular Expression	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

SWS Item	[ECUC_V2xDM_00060]				
Parameter Name	V2xDMSimpleTypeBitStringValue				
Parent Container	V2xDMSimpleTypeBitStringItem				
Description	Defines the value representation for the Key-Pair-Values for the BitString.				
Multiplicity	1				
Type	EcucIntegerParamDef				
Range	0 .. 65535				
Default value	—				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time	X	All Variants		
	Link time	—			
	Post-build time	—			
Scope / Dependency	scope: local				

No Included Containers

10.1.27 V2xDMSimpleTypeCharString

SWS Item	[ECUC_V2xDM_00015]		
Container Name	V2xDMSimpleTypeCharString		
Parent Container	V2xDMSimpleType		
Description	Definition of the ASN.1 type character string		
Post-Build Variant Multiplicity	false		





Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00055]		
Parameter Name	V2xDMSimpleTypeCharStringAlphabet		
Parent Container	V2xDMSimpleTypeCharString		
Description	Defines the character set that is used and allowed for this CharString.		
Multiplicity	0..1		
Type	EcucStringParamDef		
Default value	—		
Regular Expression	—		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

SWS Item	[ECUC_V2xDM_00054]		
Parameter Name	V2xDMSimpleTypeCharStringIsExtensible		
Parent Container	V2xDMSimpleTypeCharString		
Description	Defines if future extensions of this parameter shall be considered.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

SWS Item	[ECUC_V2xDM_00053]		
Parameter Name	V2xDMSimpleTypeCharStringType		
Parent Container	V2xDMSimpleTypeCharString		
Description	Defines the type of CharString SimpleType.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	V2XDM_SIMPLETYPE_CHARSTR_IA5	Defines all catalog items.	
	V2XDM_SIMPLETYPE_CHARSTR_NUMERIC	—	





	V2XDM_SIMPLETYPE_CHARSTR_UTF8	–	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMSimpleTypeCharStringConstr	0..*	Container defines the constraints for the character string (Min/Max).

10.1.28 V2xDMSimpleTypeCharStringConstr

SWS Item	[ECUC_V2xDM_00050]		
Container Name	V2xDMSimpleTypeCharStringConstr		
Parent Container	V2xDMSimpleTypeCharString		
Description	Container defines the constraints for the character string (Min/Max).		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00052]				
Parameter Name	V2xDMSimpleTypeCharStringConstrMax				
Parent Container	V2xDMSimpleTypeCharStringConstr				
Description	Max number of values for the char string parameter.				
Multiplicity	0..1				
Type	EcucIntegerParamDef				
Range	0 .. 65535				
Default value	–				
Post-Build Variant Multiplicity	false				
Post-Build Variant Value	false				
Multiplicity Configuration Class	Pre-compile time	X	All Variants		
	Link time	–			
	Post-build time	–			
Value Configuration Class	Pre-compile time	X	All Variants		
	Link time	–			
	Post-build time	–			
Scope / Dependency					

SWS Item	[ECUC_V2xDM_00051]		
Parameter Name	V2xDMSimpleTypeCharStringConstrMin		
Parent Container	V2xDMSimpleTypeCharStringConstr		
Description	Min number of values for the char string parameter.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency			

No Included Containers

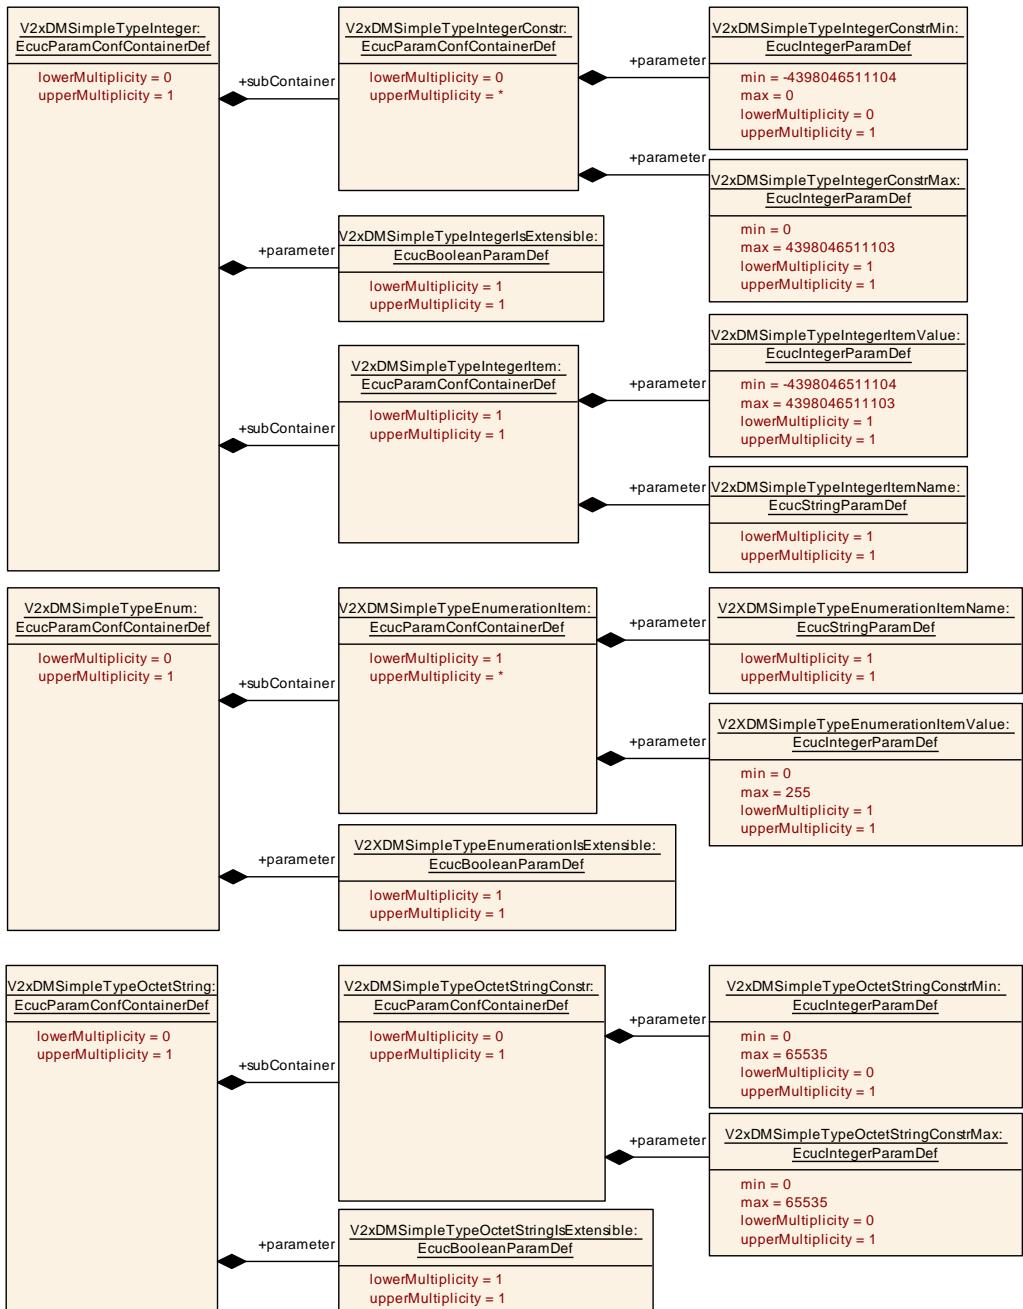


Figure 10.14: V2XDMMessageSimpleTypes2

10.1.29 V2xDSimpleTypeBoolean

SWS Item	[ECUC_V2xDM_00014]
Container Name	V2xDSimpleTypeBoolean
Parent Container	V2xDSimpleType
Description	Definition of the ASN.1 boolean type





Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			
No Included Containers			

10.1.30 V2xDMSimpleTypeEnum

SWS Item	[ECUC_V2xDM_00016]		
Container Name	V2xDMSimpleTypeEnum		
Parent Container	V2xDMSimpleType		
Description	Definition of the ASN.1 enumeration type		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00045]		
Parameter Name	V2XDMSimpleTypeEnumerationIsExtensible		
Parent Container	V2xDMSimpleTypeEnum		
Description	Defines if the enumeration can be extended in future releases (...).		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2XDMSimpleTypeEnumerationItem	1..*	Parameter description for the enumeration simple type.

10.1.31 V2xDMSimpleTypeEnumerationItem

SWS Item	[ECUC_V2xDM_00042]		
Container Name	V2xDMSimpleTypeEnumerationItem		
Parent Container	V2xDMSimpleTypeEnum		
Description	Parameter description for the enumeration simple type.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00043]		
Parameter Name	V2xDMSimpleTypeEnumerationItemName		
Parent Container	V2xDMSimpleTypeEnumerationItem		
Description	Defines the name of the enumeration item.		
Multiplicity	1		
Type	EcucStringParamDef		
Default value	—		
Regular Expression	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00044]		
Parameter Name	V2xDMSimpleTypeEnumerationItemValue		
Parent Container	V2xDMSimpleTypeEnumerationItem		
Description	Definition of the item value of the enumeration.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

No Included Containers

10.1.32 V2xDMSimpleTypeInteger

SWS Item	[ECUC_V2xDM_00017]		
Container Name	V2xDMSimpleTypeInteger		
Parent Container	V2xDMSimpleType		
Description	Definition of the ASN.1 integer type		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00037]		
Parameter Name	V2xDMSimpleTypeIntegerIsExtensible		
Parent Container	V2xDMSimpleTypeInteger		
Description	Indicates if data for the integer simple types can be extended in the future (...).		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMSimpleTypeIntegerConstr	0..*	Defines the constraints for the integer simple type
V2xDMSimpleTypeIntegerItem	1	Descriptor parameters of the simple type integer item.

10.1.33 V2xDMSimpleTypeIntegerConstr

SWS Item	[ECUC_V2xDM_00035]		
Container Name	V2xDMSimpleTypeIntegerConstr		
Parent Container	V2xDMSimpleTypeInteger		
Description	Defines the constraints for the integer simple type		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00039]		
Parameter Name	V2xDMSimpleTypeIntegerConstrMax		
Parent Container	V2xDMSimpleTypeIntegerConstr		
Description	Defines the max value for this integer simple type.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 439804651103		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00038]		
Parameter Name	V2xDMSimpleTypeIntegerConstrMin		
Parent Container	V2xDMSimpleTypeIntegerConstr		
Description	Defines the min value for this integer simple type.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	-439804651104 .. 0		
Default value	–		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.1.34 V2xDMSimpleTypeIntegerItem

SWS Item	[ECUC_V2xDM_00036]		
Container Name	V2xDMSimpleTypeIntegerItem		
Parent Container	V2xDMSimpleTypeInteger		
Description	Descriptor parameters of the simple type integer item.		
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00041]		
Parameter Name	V2xDMSimpleTypeIntegerItemName		
Parent Container	V2xDMSimpleTypeIntegerItem		
Description	Provide a name for this integer item.		
Multiplicity	1		
Type	EcucStringParamDef		
Default value	–		
Regular Expression	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00040]		
Parameter Name	V2xDMSimpleTypeIntegerItemValue		
Parent Container	V2xDMSimpleTypeIntegerItem		
Description	The default value for this integer		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	-4398046511104 .. 4398046511103		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.1.35 V2xDMSimpleTypeOctetString

SWS Item	[ECUC_V2xDM_00018]		
Container Name	V2xDMSimpleTypeOctetString		
Parent Container	V2xDMSimpleType		
Description	Definition of the ASN.1 Octet String.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00049]		
Parameter Name	V2xDMSimpleTypeOctetStringIsExtensible		
Parent Container	V2xDMSimpleTypeOctetString		
Description	Defines if the octet string can be extended in future releases (...).		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
V2xDMSimpleTypeOctetString Constr	0..1	Defines the constraint for the octet string as simple type according to ASN.1.

10.1.36 V2xDMSimpleTypeOctetStringConstr

SWS Item	[ECUC_V2xDM_00046]		
Container Name	V2xDMSimpleTypeOctetStringConstr		
Parent Container	V2xDMSimpleTypeOctetString		
Description	Defines the constraint for the octet string as simple type according to ASN.1.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

SWS Item	[ECUC_V2xDM_00048]		
Parameter Name	V2xDMSimpleTypeOctetStringConstrMax		
Parent Container	V2xDMSimpleTypeOctetStringConstr		
Description	Defines the max length for the octet string.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants





	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_V2xDM_00047]		
Parameter Name	V2xDMSimpleTypeOctetStringConstrMin		
Parent Container	V2xDMSimpleTypeOctetStringConstr		
Description	Defines the min length for the octet string.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	—		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

No Included Containers

10.2 Published Information

For details refer to the chapter 10.3 “Published Information” in [3, SWS BSW General].