

<b>Document Title</b>	System Template
<b>Document Owner</b>	AUTOSAR
<b>Document Responsibility</b>	AUTOSAR
<b>Document Identification No</b>	63

<b>Document Status</b>	published
<b>Part of AUTOSAR Standard</b>	Classic Platform
<b>Part of Standard Release</b>	R22-11

<b>Document Change History</b>			
<b>Date</b>	<b>Release</b>	<b>Changed by</b>	<b>Description</b>
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Added support for MACsec</li> <li>• Added support for Can XL</li> <li>• Clarification of usage of transfer property for signal groups and group signals</li> <li>• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Rework of Log and Trace model</li> <li>• Rework of TLS modeling using IANA Parameters</li> <li>• Introduction of Affinity Constraints</li> <li>• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Added support for 10-BASE-T1S</li> <li>• Added support for Software Clusters</li> <li>• Improved RTE Fan-in and RTE Fan-out description</li> <li>• Introduced modeling approach for Service Discovery Service Interfaces on VFB level</li> </ul>

2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Rework of Ethernet communication model</li> <li>• Added support for Signal-To-Service Translation</li> <li>• Added support for IPsec configuration</li> <li>• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> <li>• Changed Document Status from Final to published</li> </ul>
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Added support for BusMirroring</li> <li>• Reworked the modeling of LinSlaves</li> <li>• Introduced Crypto Infrastructure for SecuredIPdu</li> <li>• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Added support for new E2E Profiles 7, 11 and 22</li> <li>• Improved configuration of Ethernet Switch Ports</li> <li>• Introduced Security Profiles</li> <li>• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Introduction of data transformation</li> <li>• Introduction of SecuredIPdu</li> <li>• Introduction of Switch Configuration</li> <li>• Introduction of Global Time Synchronization</li> <li>• Improved support for CanFD</li> <li>• Minor corrections / clarifications / editorial changes; For details please refer to the BWCStatement</li> </ul>
2014-03-31	4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Various fixes and clarifications</li> </ul>

2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Set CanNmCluster.nmChannelActive, FlexrayArTpChannel.timeFrlf and FlexrayArTpChannel.maxFrlf to deprecated</li> <li>• Added SoAd Pdu Collection attributes to SocketConnection</li> <li>• Added SoAdRouting-Group.eventGroupControlType</li> <li>• Introduced SocketAddress.multicastConnector</li> <li>• Clarified usage of ISignal.dataTypePolicy</li> <li>• Described the handling of ComSpecs during flattening</li> <li>• Introduced new Pdu types: GeneralPurposePdu and GeneralPurposeIPdu</li> </ul>
			<ul style="list-style-type: none"> <li>• Made RootSwCompositionPrototype.calibrationParameterValueSet "atpSplitable"</li> <li>• Made RootSwCompositionPrototype.flatMap "atpSplitable"</li> <li>• Added new Ethernet addressing attributes to SocketConnection to help to derive the Ecu Configurations for the Server and the Clients</li> </ul>

2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Added support for remote activation of RunnableEntitys</li> <li>• Added support VLANs and Service Discovery</li> <li>• Reworked the SoAd configuration</li> <li>• Introduced SenderReceiverCompositeElementToSignalMapping and ClientServerToSignalMapping</li> <li>• Added support for CAN FD</li> <li>• Reworked the J1939 TP configuration</li> <li>• Clarification of the usage of swDataDefProps on ISignals and SystemSignals</li> <li>• Added support for Complex Drivers in the Topology</li> <li>• Updated IPduM to allow only static part reception</li> <li>• Added LinSlaveConfig class to the LinMaster</li> <li>• Clarified meaning of PduToFrameMapping.startPosition</li> </ul>
2011-12-22	4.0.3	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Added support for Partial Networking</li> <li>• Added support for Complex Drivers</li> <li>• Added support for new COM transfer properties</li> <li>• Added support for transmission mode switch via Com_SwitchIpduTxMode COM API</li> <li>• Added support for treating byte arrays with primitive type mapping</li> <li>• Added support for partial routing in signal gateways</li> <li>• Added support for FlexRay AUTOSAR TP</li> <li>• Added rules for creation of Pdu Triggerings and Pdu Ports</li> <li>• Explained the general approach of bit counting</li> </ul>



2009-12-18	4.0.1	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• updated System class category names</li> <li>• Changed specification of PduLength parameter from bits to bytes</li> <li>• Made Flexray channel specific attributes optional</li> <li>• Clarified the usage of EcuPorts in System Extract/Ecu Extract</li> <li>• Allowed to define sending and receiving connections to EcuPorts for NmPdus, XcpPdus</li> <li>• Aligned FrTP model to AUTOSAR FrTp SWS</li> <li>• Replaced ComProcessingPeriod by three timebase parameters</li> <li>• Reworked E2E protection of selected I-PDUs</li> <li>• Corrected AssignFrameIdRange configuration in LIN model</li> <li>• Clarified the routing of ISignalGroups in the Signal Gateway</li> <li>• Extended the enumeration "TransferPropertyEnum" with the element "triggeredOnChange"</li> <li>• Added a subchapter to the appendix about special use cases that are supported by the System Template</li> <li>• Reworked SenderReceiverToSignalGroupMapping and ClientServerToSignalGroupMapping</li> <li>• Changed multiplicity between System and SystemMapping from 1 to 0..1.</li> </ul>
------------	-------	------------------------	--

2009-12-04	3.1.4	AUTOSAR Administration	<ul style="list-style-type: none"> <li>● Implemented support for LIN 2.1</li> <li>● Implemented support for Network Management (FlexRayNm, CanNm, LinNm, UdpNm)</li> <li>● adapted IPdu Multiplexer model to ASAM Fibex 3.1</li> <li>● Reworked "ECU Extract" chapter</li> <li>● Introduced "System Extract"</li> <li>● Introduced EndToEndProtection for ISignalPdu's</li> <li>● Reworked "Transport Layer" chapter</li> <li>● Implemented Variant Handling concept</li> <li>● Implemented Documentation support concept</li> <li>● Implemented support for J1939 communication</li> <li>● Implemented support for TTCan</li> <li>● Implemented support for for TCP/IP and DoIP.</li> <li>● Introduced Pdu Counter and Pdu Replication</li> <li>● Implemented VMM/AMM concept</li> <li>● Introduced low-level routing of NPdu's</li> <li>● Implemented support for dynamic signals</li> <li>● Introduced PdurIPduGroups</li> </ul>
2009-02-04	3.1.2	AUTOSAR Administration	<ul style="list-style-type: none"> <li>● Clarified semantics of Data Mappings</li> <li>● Added inheritance from Identifiable to PduToFrameMapping</li> <li>● Added "FlexRayChannelName" attribute to FlexRayPhysicalChannel element.</li> </ul>

2008-08-13	3.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Added the boolean attribute "payloadPreambleIndicator" to the "FlexrayFrameTriggering".</li> <li>• Added extension that allows the assignment of IPduGroups to ECUs.</li> <li>• Added missing reference from "ClientServerComposite-TypeMapping" to "ArgumentPrototype"</li> <li>• Alignment with AUTOSAR IPduM SWS</li> </ul>
2008-02-01	3.0.2	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Moved "canAddressingMode" attribute from "CanCluster" to the "CanFrameTriggering" element</li> <li>• Clarified the descriptions of several elements and attributes.</li> </ul>
2007-12-21	3.0.1	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Communication part reworked from scratch</li> <li>• Alignment with ECU Configuration</li> <li>• Added support for Transport Protocols</li> <li>• Major changes in Topology chapter after harmonisation with Fibex (removed complex Topologies)</li> <li>• Document meta information extended</li> <li>• Small layout adaptations made</li> </ul>

2006-11-28	2.1	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Support for Signal Groups added.</li> <li>• Rework of the Topology Description</li> <li>• Introduction of PDUs. Description of the PDU Multiplexer, PDU Gateway.</li> <li>• FlexRay: multiple transmission of a frame within one communication cycle is supported now.</li> <li>• Removed the concept of Variant Descriptions (Properties) and CompToECUMappingConstraints relying on the property concept.</li> <li>• Split SwCompToEcuMapping in two classes in order to allow separation of SWC-to-ECU mapping and Implementation-to-SWC mapping.</li> <li>• Removed preliminary chapter on MOST as it is not part of the standard.</li> <li>• For all Instance References in the System Template added diagrams to the meta-model containing detailed representations of these references.</li> </ul>
2005-05-31	1.0	AUTOSAR Administration	Initial Release



## Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

# Contents

1	Introduction	26
1.1	Abbreviations	26
1.2	Requirements Tracing	28
1.3	Requirements not fulfilled by TPS requirements	31
1.4	Methodology for Defining Formal Template	33
1.5	Scope	34
1.6	UML Meta-Model	37
1.7	Document Conventions	39
1.7.1	Detailed Representation of InstanceRef Associations	42
1.7.2	Variant Handling	42
1.7.3	Timing Extensions	42
1.7.4	Documentation Support	42
1.7.5	Stereotype atpSplittable in the System Template	44
1.8	AUTOSAR System Template and ASAM FIBEX	44
2	System	46
2.1	Data interpretation of bus content in different contexts	50
2.1.1	Nm NID/CBV	50
2.2	ClientIdDefinitionSet	50
2.3	InterpolationRoutingMappingSet	52
3	Topology	54
3.1	ECUs and their communication capabilities	55
3.1.1	ECU Instance	55
3.1.2	Communication Controller	58
3.1.3	Communication Connector	59
3.2	Communication Clustering	61
3.2.1	Communication Cluster	61
3.2.2	Physical Channel	62
3.3	Specialized Attributes of the Topology Entities	64
3.3.1	CAN	66
3.3.1.1	CAN Cluster	67
3.3.1.2	CAN Communication Controller	68
3.3.1.3	CAN Physical Channel	78
3.3.1.4	CAN Communication Connector	78
3.3.2	TTCAN	79
3.3.2.1	TTCAN Cluster	80
3.3.2.2	TTCAN Communication Controller	81
3.3.2.3	TTCAN Physical Channel	82
3.3.2.4	TTCAN Communication Connector	82
3.3.3	SAE J1939	83
3.3.4	FlexRay	84
3.3.4.1	FlexRay Cluster	84
3.3.4.2	FlexRay Communication Controller	87

3.3.4.3	FlexRay Communication Connector . . . . .	91
3.3.4.4	FlexRay Physical Channel . . . . .	91
3.3.5	LIN . . . . .	93
3.3.5.1	LIN Cluster . . . . .	95
3.3.5.2	LIN Communication Controller . . . . .	95
3.3.5.3	LIN Master . . . . .	96
3.3.5.4	LIN Slave . . . . .	98
3.3.5.5	LIN Communication Connector . . . . .	100
3.3.5.6	LIN Physical Channel . . . . .	101
3.3.6	Ethernet . . . . .	102
3.3.6.1	Ethernet Cluster . . . . .	104
3.3.6.2	Ethernet Physical Channel . . . . .	105
3.3.6.3	Ethernet Coupling Elements and Coupling Ports . . . . .	107
3.3.6.4	Ethernet Communication Controller . . . . .	115
3.3.6.5	Ethernet Communication Connector . . . . .	116
3.3.6.6	Ethernet Switch Driver . . . . .	117
3.3.6.7	TcpIp stack configuration properties . . . . .	130
3.3.6.8	Ethernet wake-up and sleep on dataline . . . . .	143
3.3.7	10BASE-T1S Ethernet . . . . .	153
3.3.8	MACsec . . . . .	157
3.3.9	CDD . . . . .	164
3.4	Mapping of Topology Entities onto Hardware Elements . . . . .	165
3.4.1	ECU Mapping . . . . .	167
3.4.2	Communication Controller Mapping . . . . .	167
3.4.3	HW-Port Mapping . . . . .	168
4	Top-level Software Composition . . . . .	169
5	Mapping . . . . .	171
5.1	Software Component Mapping . . . . .	177
5.1.1	SW Component to ECU Mapping . . . . .	178
5.1.2	Software Component to Implementation Mapping . . . . .	182
5.1.3	SW Component to Partition Mapping . . . . .	183
5.1.4	Software Component Mapping Constraints . . . . .	186
5.1.4.1	ComponentClustering . . . . .	187
5.1.4.2	ComponentSeparation . . . . .	188
5.1.5	J1939 Controller Application Mapping . . . . .	190
5.1.6	Affinity Constraints . . . . .	191
5.1.6.1	RteEvent to OsTaskProxy mapping constraints in the context of a Software Composition . . . . .	194
5.1.6.2	RteEvent to OsTaskProxy mapping constraints in the context of the System . . . . .	196
5.2	Data Mapping . . . . .	198
5.2.1	Mapping of Variable Data Prototypes on System Signals . . . . .	205
5.2.1.1	Mapping of Variable Data Prototypes with primitive datatypes on System Signals (Sender-Receiver Communication) . . . . .	208



5.2.1.2	Mapping of Variable Data Prototypes with composite datatypes (Sender-Receiver Communication) . . . . .	214
5.2.1.3	Mapping of Client Server Operations to System Signals	225
5.2.1.4	Mapping of a ApplicationCompositeElementDataPrototype within a composite application data type on a System Signal (Sender-Receiver Communication)	229
5.2.1.5	Mapping of Trigger to SystemSignal . . . . .	231
5.2.2	Signal Path Constraint . . . . .	234
5.2.2.1	CommonSignalPath . . . . .	235
5.2.2.2	ForbiddenSignalPath . . . . .	238
5.2.2.3	PermissibleSignalPath . . . . .	239
5.2.2.4	SeparateSignalPath . . . . .	240
5.3	RTE and basic software resource estimations . . . . .	241
5.4	Communication Management Mapping . . . . .	244
5.4.1	Partial Networking . . . . .	245
5.4.1.1	Partial Networking and managed Ethernet switch . . . . .	251
5.4.1.2	Partial Network Gateway . . . . .	255
5.4.1.3	Checking the consistency of partial network clusters (PNC) . . . . .	255
5.4.1.4	Dynamic Partial Network Cluster Mapping . . . . .	260
5.4.2	Com Management Mapping . . . . .	263
5.5	Software Cluster Mapping . . . . .	264
6	Communication . . . . .	269
6.1	Triggerings and Ports . . . . .	271
6.2	ISignals . . . . .	283
6.2.1	Efficient COM for large data . . . . .	304
6.2.2	Big Endian and Little Endian memory layout of PduS and FrameS . . . . .	308
6.3	PDU's . . . . .	311
6.3.1	ContainerIPdu . . . . .	324
6.3.2	SecuredIPdu . . . . .	335
6.3.2.1	Crypto Infrastructure for SecuredIPdu . . . . .	346
6.3.3	EndToEndProtection for ISignalGroups . . . . .	353
6.3.4	GeneralPurposeConnection . . . . .	360
6.4	IPdu Timing . . . . .	361
6.4.1	Data Filter configuration . . . . .	366
6.4.2	Cyclic Timing . . . . .	368
6.4.3	EventControlled Timing . . . . .	369
6.4.4	Configuration of a trigger for COM_TriggerIPduSend API call . . . . .	371
6.5	I-Pdu Multiplexer . . . . .	373
6.5.1	I-Pdu Multiplexer in System Extract/ECU Extract . . . . .	387
6.6	Frames . . . . .	389
6.7	Specialized Attributes of the Communication Entities . . . . .	391
6.7.1	FlexRay specific description . . . . .	391
6.7.2	LIN specific description . . . . .	397

6.7.2.1	LIN Frames	398
6.7.2.2	LIN Schedule Table	402
6.7.2.3	Configuration Services	405
6.7.3	CAN specific description	411
6.7.3.1	SAE J1939 Protocol specific description	415
6.7.3.2	CAN XL specific description	416
6.7.4	TTCAN specific description	418
6.7.5	Ethernet specific description	420
6.7.5.1	ApplicationEndpoint	426
6.7.5.2	NetworkEndpoint	430
6.7.5.3	SOME/IP Service Instances	439
6.7.5.4	Multicast Subscription	444
6.7.5.5	ProvidedServiceInstance	447
6.7.5.6	ConsumedServiceInstance	461
6.7.5.7	Service Discovery Server Configuration	474
6.7.5.8	Service Discovery Client Configuration	479
6.7.5.9	Group of ConsumedServiceInstances and ProvidedServiceInstances	483
6.7.5.10	StaticSocketConnection	485
6.7.5.11	Service Discovery Message Configuration	489
6.7.5.12	NmPdu data exchange over StaticSocketConnection	492
6.7.5.13	Diagnostics over IP	493
6.7.5.14	Transport Layer Security	499
6.7.5.15	IPsec	510
6.7.5.16	EthernetFrameType based communication	518
6.7.5.17	Restriction in usage of ProvidedServiceInstance.majorVersion	520
6.8	Transport Layer	523
6.8.1	Transport Layer Routing	525
6.8.2	FlexRay ISO Transport Layer	525
6.8.3	FlexRay AUTOSAR Transport Layer	533
6.8.4	CAN Transport Layer	540
6.8.5	LIN Transport Layer	546
6.8.6	Ethernet Transport Layer	551
6.8.7	SOME/IP segmenter	552
6.8.8	SAE J1939 Transport Layer	555
6.8.9	Unicast TP Example	561
6.8.10	Multicast TP Example	562
6.8.11	Diagnostic Connection	564
6.9	Network Management	568
6.9.1	FlexRay Network Management	578
6.9.2	CAN Network Management	581
6.9.3	UDP Network Management	585
6.9.4	J1939 Network Management	590
6.9.4.1	J1939SharedAddressCluster	592
6.9.5	Managed Channels	594

6.9.5.1	Ethernet VLANs	594
6.9.5.2	Ethernet tunneling through CAN XL	594
6.10	Bus Mirroring	595
6.10.1	CAN Destination Channel	597
6.10.2	FlexRay Destination Channel	600
6.10.3	Ethernet Destination Channel	602
6.10.4	User Defined Destination Channel	603
6.11	Fan-out	604
6.11.1	Signal fan-out	604
6.11.1.1	RTE signal fan-out	604
6.11.1.2	COM Signal Gateway fan-out	608
6.11.2	Pdu fan-out	610
6.11.2.1	Pdu Router fan-out	610
6.11.2.2	Flexray Interface fan-out	610
6.11.3	Frame fan-out	611
6.12	Fan-in	611
6.12.1	RTE fan-in	612
6.12.2	Pdu fan-in	614
6.12.3	IPdu Container fan-in	615
6.13	Log and Trace	616
6.14	Support of Complex Drivers	621
6.15	MetaData in SenderReceiverInterface	622
6.16	Signal Service Translation	623
6.16.1	Architectural setup	624
6.16.1.1	Method handling	625
6.16.2	Mapping description	625
6.16.2.1	Filters and Transmission Triggers	630
6.16.2.2	Mapping description from several sources	635
6.16.2.3	Mapping description and data conversion	637
6.16.2.4	Implementation of <code>PassThroughSwConnectors</code>	638
6.16.3	Service discovery control	639
6.16.3.1	Service control at ECU start	641
6.16.3.2	Service control due to availability of partial networks	641
6.16.3.3	Service control due to availability of related service instance	644
6.16.4	Translation behavior	646
6.16.4.1	COM-Stack translation behavior	646
6.16.4.2	Translation Application Software Component translation behavior	647
6.16.5	End-to-End considerations	648
6.16.5.1	Safety	648
6.16.5.2	Security	651
7	Data Transformation	652
7.1	Outline	652
7.1.1	Configuration of the Communication Layout	652

7.1.2	Data Transformation by Software . . . . .	653
7.2	Use Cases . . . . .	654
7.2.1	Transmission of large composite data types over networks with large PDUs (e.g Ethernet) . . . . .	654
7.2.2	Support of transmission from one sender to multiple re- ceivers with Signal Fan-out . . . . .	655
7.2.3	Support of transmission from one sender to multiple re- ceivers with PDU Fan-out . . . . .	655
7.2.4	Transformer Chaining . . . . .	656
7.2.5	Signal Group Based interaction of the transformer with the Com module . . . . .	657
7.3	Transformer configuration . . . . .	657
7.3.1	Generic Transformer . . . . .	671
7.3.2	SOME/IP Transformer . . . . .	672
7.3.2.1	SOME/IP Transformation Properties on the level of DataPrototypes . . . . .	678
7.3.2.2	Network Representation . . . . .	688
7.3.3	COM Based Transformer . . . . .	698
7.3.4	E2E Transformer . . . . .	702
7.3.4.1	E2E state machine settings . . . . .	715
7.3.4.2	E2E recommended configuration settings . . . . .	715
7.3.5	UserDefined Transformer . . . . .	725
7.3.6	Support for TLV Encoding . . . . .	726
7.3.6.1	Assignment of TLV Data Ids . . . . .	726
7.3.6.2	Assignment of TLV Wire Type . . . . .	731
8	Gateways . . . . .	733
8.1	Frame Mapping . . . . .	735
8.2	IPdu Mapping . . . . .	736
8.2.1	Usage of IPduMapping.pduMaxLength . . . . .	738
8.2.2	Routing and processing of Diagnostics Pdus . . . . .	741
8.3	Signal Mapping . . . . .	742
8.3.1	Partial Signal Group Mapping . . . . .	743
9	Global Time Synchronization . . . . .	745
9.1	Introduction . . . . .	745
9.2	The big Picture . . . . .	746
9.3	Detailed Description of Global Time Synchronization . . . . .	758
9.3.1	Time Synchronization over CAN . . . . .	758
9.3.2	Time Synchronization over Ethernet . . . . .	760
9.3.2.1	Time Synchronization and Ethernet propagation delay . . . . .	765
9.3.2.2	Time Synchronization and Ethernet connection . . . . .	765
9.3.2.3	Time Synchronization and managed Ethernet switch . . . . .	767
9.3.3	Time Synchronization over FlexRay . . . . .	770
9.3.4	Time Synchronization by user defined Timebase Provider . . . . .	772
9.3.5	Time Synchronization Common Properties . . . . .	773

10	Description of Service Discovery Services in Classic Platform	776
10.1	Representation of Service Interfaces on VFB level	776
10.1.1	Representation of <code>Events</code>	777
10.1.2	Representation of <code>Methods</code>	777
10.1.3	Representation of <code>Fire and Forget Methods</code>	777
10.1.4	Representation of <code>Fields</code>	778
10.2	Representation of Service Interfaces on network level	780
11	Software Cluster	785
11.1	Big Picture	785
11.2	Software Cluster Resources	793
11.3	Software Cluster Binary Manifest	804
11.4	Software Cluster Extraction	820
11.4.1	Software Cluster Extraction and <code>DataMappings</code>	823
12	Usage of the System Template	825
12.1	System Constraint Description	826
12.2	Abstract System Description	827
13	System Extract of the System Configuration Description	829
13.1	OEM/Supplier Collaboration Scenario	830
13.2	Data Mapping in the System Extract	832
13.3	SW component inclusion and top level data mapping	835
13.4	Port-Interface Mapping in the System Extract	837
14	ECU Extract of the System Configuration Description	839
14.1	Topology	840
14.2	Top-level Software Composition	841
14.2.1	ECU Flat view	843
14.2.2	Internal Communication	844
14.2.3	External Communication	846
14.2.4	Port Groups	851
14.2.5	Service Needs	852
14.3	Extending the ECU Software Composition	852
14.4	Communication	853
14.4.1	Frame	854
14.4.2	PDU	854
14.4.3	<code>ISignals</code> and <code>ISignalGroups</code>	855
14.4.4	<code>SystemSignal</code> and <code>SystemSignalGroup</code>	855
14.4.5	Gateways	856
14.4.6	TP configuration	856
14.4.7	NM configuration	856
14.5	Naming Issues	857
14.5.1	Package Structure	857
14.5.2	Naming of Measurement and Calibration Data	858
14.5.3	Naming of Derived Elements	858

14.5.4	Re-use of short names assigned in previous iterations . . . . .	859
14.6	ECU Extract in subsequent Cycles of Iterative Development . . . . .	860
14.6.1	Traceability of model elements created in ECU Extract . . . . .	860
14.6.2	Mapping of AUTOSAR attributes to ASAM ASAP2 . . . . .	865
14.6.3	Assigning communication graphs to RTE Implementation Plug-Ins . . . . .	866
14.7	Variant Handling in ECU Extract . . . . .	869
14.7.1	System Constants . . . . .	869
14.7.2	Nested Whole/Part class variants . . . . .	870
14.7.3	Multiple instances of calibration parameters in system scope	870
15	Supported special use-cases	872
15.1	Support of sending / receiving same Can/Flexray Frame on same chan- nel (Pdu Gateway Use-Case) . . . . .	872
15.2	Support of sending / receiving same Can/Flexray Frame on same chan- nel (bidirectional routing in COM) . . . . .	873
15.3	Support of dynamic CAN IDs . . . . .	876
15.4	N:1 Sender Receiver communication description in a System Extract over one <code>PhysicalChannel</code> . . . . .	876
15.5	Description of MOST Functions . . . . .	879
A	Glossary	881
B	Detailed Representation of InstanceRef Associations in the System Template	885
B.1	Usage of InstanceRefs in Data Mapping diagrams . . . . .	885
B.2	Usage of InstanceRefs in SW Mapping diagrams . . . . .	887
B.3	Usage of InstanceRefs in Signal Path Constraint diagrams . . . . .	888
B.4	Usage of InstanceRefs in PncMapping . . . . .	888
B.5	Usage of InstanceRefs in ComManagementMapping . . . . .	889
B.6	"SWC in System" InstanceRef . . . . .	890
B.7	"Operation in System" InstanceRef . . . . .	892
B.8	"VariableDataPrototype" InstanceRef . . . . .	894
B.9	"PortGroup in System" InstanceRef . . . . .	898
B.10	"DataPrototype in PortInterface" InstanceRef . . . . .	900
C	Harmonization between Upstream Templates and ECU Configuration	902
C.1	ComStack . . . . .	903
C.1.1	Com Mapping . . . . .	903
C.1.2	LdCom Mapping . . . . .	965
C.1.3	IPduM Mapping . . . . .	969
C.1.4	SecOc Mapping . . . . .	1014
C.1.5	PduR . . . . .	1054
C.1.6	Nm Interface . . . . .	1073
C.1.7	EcuC . . . . .	1091
C.1.8	ComM . . . . .	1108
C.1.9	Xcp . . . . .	1127
C.1.10	Bus Mirroring . . . . .	1150

C.2	Can	1192
C.2.1	Can Driver Mapping	1192
C.2.2	Can Interface Mapping	1237
C.2.3	Can Transceiver Mapping	1287
C.2.4	CanNm Mapping	1305
C.2.5	CanTp Mapping	1326
C.2.6	CanSm Mapping	1349
C.3	J1939	1358
C.3.1	J1939Tp Mapping	1358
C.3.2	J1939Nm Mapping	1380
C.3.3	J1939Dcm Mapping	1389
C.3.4	J1939Rm Mapping	1391
C.4	FlexRay	1396
C.4.1	FlexRay Driver Mapping	1396
C.4.2	FlexRay Interface Mapping	1419
C.4.3	FrNm Mapping	1465
C.4.4	FrTp Mapping	1486
C.4.5	FrArTp Mapping	1503
C.4.6	FrSM Mapping	1520
C.5	Lin	1528
C.5.1	Lin Driver Mapping	1528
C.5.2	Lin Interface Mapping	1534
C.5.3	LinTp Mapping	1566
C.6	Ethernet	1575
C.6.1	Ethernet Driver Mapping	1575
C.6.2	Ethernet Interface Mapping	1607
C.6.3	Ethernet Switch Driver Mapping	1635
C.6.4	Service Discovery	1705
C.6.5	SoAd	1745
C.6.6	EthSM	1783
C.6.7	EthTrcv	1787
C.6.8	Tcplp	1814
C.6.9	DoIP	1933
C.6.10	UdpNm	1965
C.6.11	SomelpTp	1985
C.6.12	Wireless Ethernet Driver Mapping	1993
C.7	Diagnostic	1999
C.7.1	Dcm Mapping	1999
C.8	Time management	2000
C.8.1	StbM Time Management	2000
C.8.2	CAN Time Management	2020
C.8.3	Ethernet Time Management	2046
C.8.4	Flexray Time Management	2080
C.9	Crypto Stack	2101
C.9.1	CryptoDriver	2101
C.9.2	Crypto Service Manager	2128



C.10	Services	2258
C.10.1	Transformer General	2258
C.11	Miscellaneous	2261
C.11.1	Log and Trace	2261
C.11.2	ECU State Manager	2268
C.11.3	Software Cluster Connection	2269
D	History of Constraints and Specification Items	2271
D.1	Constraint and Specification Item History of this document according to AUTOSAR R4.0.1	2271
D.1.1	Changed Constraints in R4.0.1	2271
D.1.2	Added Constraints in R4.0.1	2271
D.1.3	Deleted Constraints in R4.0.1	2271
D.2	Constraint and Specification Item History of this document according to AUTOSAR R4.0.2	2271
D.2.1	Changed Constraints in R4.0.2	2271
D.2.2	Added Constraints in R4.0.2	2272
D.2.3	Deleted Constraints in R4.0.2	2272
D.3	Constraint and Specification Item History of this document according to AUTOSAR R4.0.3	2272
D.3.1	Changed Constraints in R4.0.3	2272
D.3.2	Changed Traceables in R4.0.3	2272
D.3.3	Added Constraints in R4.0.3	2272
D.3.4	Added Traceables in R4.0.3	2272
D.3.5	Deleted Constraints in R4.0.3	2273
D.3.6	Deleted Traceables in R4.0.3	2273
D.4	Constraint and Specification Item History of this document according to AUTOSAR R4.1.1	2273
D.4.1	Changed Constraints in R4.1.1	2273
D.4.2	Changed Traceables in R4.1.1	2273
D.4.3	Added Constraints in R4.1.1	2273
D.4.4	Added Traceables in R4.1.1	2275
D.4.5	Deleted Constraints in R4.1.1	2278
D.4.6	Deleted Traceables in R4.1.1	2278
D.5	Constraint and Specification Item History of this document according to AUTOSAR R4.1.2	2278
D.5.1	Changed Traceables in R4.1.2	2278
D.5.2	Added Traceables in R4.1.2	2278
D.5.3	Added Constraints in R4.1.2	2279
D.5.4	Changed Constraints in R4.1.2	2279
D.5.5	Deleted Constraints in R4.1.2	2279
D.6	Constraint and Specification Item History of this document according to AUTOSAR R4.1.3	2280
D.6.1	Changed Traceables in R4.1.3	2280
D.6.2	Added Traceables in R4.1.3	2280
D.6.3	Deleted Traceables in R4.1.3	2280



D.6.4	Added Constraints in R4.1.3	2280
D.6.5	Changed Constraints in R4.1.3	2281
D.6.6	Deleted Constraints in R4.1.3	2281
D.7	Constraint and Specification Item History of this document according to AUTOSAR R4.2.1	2281
D.7.1	Added Traceables in R4.2.1	2281
D.7.2	Changed Traceables in R4.2.1	2283
D.7.3	Deleted Traceables in R4.2.1	2283
D.7.4	Added Constraints in R4.2.1	2284
D.7.5	Changed Constraints in R4.2.1	2287
D.7.6	Deleted Constraints in R4.2.1	2287
D.8	Constraint and Specification Item History of this document according to AUTOSAR R4.2.2	2287
D.8.1	Added Traceables in R4.2.2	2287
D.8.2	Changed Traceables in R4.2.2	2288
D.8.3	Deleted Traceables in R4.2.2	2289
D.8.4	Added Constraints in R4.2.2	2289
D.8.5	Changed Constraints in R4.2.2	2290
D.8.6	Deleted Constraints in R4.2.2	2291
D.9	Constraint and Specification Item History of this document according to AUTOSAR R4.3.0	2291
D.9.1	Added Traceables in R4.3.0	2291
D.9.2	Changed Traceables in R4.3.0	2293
D.9.3	Deleted Traceables in R4.3.0	2293
D.9.4	Added Constraints in R4.3.0	2294
D.9.5	Changed Constraints in R4.3.0	2296
D.9.6	Deleted Constraints in R4.3.0	2298
D.10	Constraint and Specification Item History of this document according to AUTOSAR R4.3.1	2298
D.10.1	Added Traceables in R4.3.1	2298
D.10.2	Changed Traceables in R4.3.1	2299
D.10.3	Deleted Traceables in R4.3.1	2299
D.10.4	Added Constraints in R4.3.1	2300
D.10.5	Changed Constraints in R4.3.1	2300
D.10.6	Deleted Constraints in R4.3.1	2301
D.11	Constraint and Specification Item History of this document according to AUTOSAR R4.4.0	2301
D.11.1	Added Traceables in R4.4.0	2301
D.11.2	Changed Traceables in R4.4.0	2302
D.11.3	Deleted Traceables in R4.4.0	2303
D.11.4	Added Constraints in R4.4.0	2303
D.11.5	Changed Constraints in R4.4.0	2305
D.11.6	Deleted Constraints in R4.4.0	2306
D.12	Constraint and Specification Item History of this document according to AUTOSAR R19-11	2306
D.12.1	Added Traceables in R19-11	2306

D.12.2	Changed Traceables in R19-11 . . . . .	2309
D.12.3	Deleted Traceables in R19-11 . . . . .	2310
D.12.4	Added Constraints in R19-11 . . . . .	2311
D.12.5	Changed Constraints in R19-11 . . . . .	2313
D.12.6	Deleted Constraints in R19-11 . . . . .	2315
D.13	Constraint and Specification Item History of this document according to AUTOSAR R20-11 . . . . .	2316
D.13.1	Added Traceables in R20-11 . . . . .	2316
D.13.2	Changed Traceables in R20-11 . . . . .	2319
D.13.3	Deleted Traceables in R20-11 . . . . .	2320
D.13.4	Added Constraints in R20-11 . . . . .	2320
D.13.5	Changed Constraints in R20-11 . . . . .	2324
D.13.6	Deleted Constraints in R20-11 . . . . .	2326
D.14	Constraint and Specification Item History of this document according to AUTOSAR R21-11 . . . . .	2326
D.14.1	Added Traceables in R21-11 . . . . .	2326
D.14.2	Changed Traceables in R21-11 . . . . .	2328
D.14.3	Deleted Traceables in R21-11 . . . . .	2329
D.14.4	Added Constraints in R21-11 . . . . .	2330
D.14.5	Changed Constraints in R21-11 . . . . .	2332
D.14.6	Deleted Constraints in R21-11 . . . . .	2333
D.15	Constraint and Specification Item History of this document according to AUTOSAR R22-11 . . . . .	2334
D.15.1	Added Traceables in R22-11 . . . . .	2334
D.15.2	Changed Traceables in R22-11 . . . . .	2335
D.15.3	Deleted Traceables in R22-11 . . . . .	2336
D.15.4	Added Constraints in R22-11 . . . . .	2336
D.15.5	Changed Constraints in R22-11 . . . . .	2337
D.15.6	Deleted Constraints in R22-11 . . . . .	2338
D.15.7	Added Advisories in R22-11 . . . . .	2338
D.15.8	Changed Advisories in R22-11 . . . . .	2338
D.15.9	Deleted Advisories in R22-11 . . . . .	2338
E	Mentioned Class Tables . . . . .	2339
F	Splitable Elements in the Scope of this Document . . . . .	2425
G	Variation Points in the Scope of this Document . . . . .	2431

## References

- [1] Requirements on System Template  
AUTOSAR\_RS\_SystemTemplate
- [2] Generic Structure Template  
AUTOSAR\_TPS\_GenericStructureTemplate
- [3] AUTOSAR XML Schema Production Rules  
AUTOSAR\_TPS\_XMLSchemaProductionRules
- [4] Methodology for Classic Platform  
AUTOSAR\_TR\_Methodology
- [5] Software Component Template  
AUTOSAR\_TPS\_SoftwareComponentTemplate
- [6] Specification of ECU Resource Template  
AUTOSAR\_TPS\_ECUResourceTemplate
- [7] Standardization Template  
AUTOSAR\_TPS\_StandardizationTemplate
- [8] Specification of Timing Extensions  
AUTOSAR\_TPS\_TimingExtensions
- [9] ASAM Fibex – Field Bus Exchange Format, Version 3.1  
<http://www.asam.net>
- [10] ISO 17987:2016 (all parts), Road vehicles – Local Interconnect Network (LIN)  
<http://www.iso.org>
- [11] CAN specifications  
<http://www.can-cia.org>
- [12] MOST Specification, Version 2.5  
<http://www.mostnet.de>
- [13] FlexRay Protocol Specification  
<http://www.flexray.com>
- [14] Serial Data Communications between Microcomputer Systems in heavy-duty Vehicle Applications
- [15] Layered Software Architecture  
AUTOSAR\_EXP\_LayeredSoftwareArchitecture
- [16] Specification of LIN Interface  
AUTOSAR\_SWS\_LINInterface
- [17] OPEN Sleep/Wake-up Specification for Automotive Ethernet  
<http://www.opensig.org/Automotive-Ethernet-Specifications/>

- [18] Specification of COM Based Transformer  
AUTOSAR\_SWS\_COMBasedTransformer
- [19] SOME/IP Protocol Specification  
AUTOSAR\_PRS\_SOMEIPProtocol
- [20] Basic Software Module Description Template  
AUTOSAR\_TPS\_BSWModuleDescriptionTemplate
- [21] ASAM MCD-2 MC (ASAP2 / A2L)  
<http://www.asam.net>  
ASAM\_AE\_MCD-2\_MC\_BS\_V1-7-1.pdf
- [22] Specification of Communication  
AUTOSAR\_SWS\_COM
- [23] Specification of SW-C End-to-End Communication Protection Library  
AUTOSAR\_SWS\_E2ELibrary
- [24] Specification of I-PDU Multiplexer  
AUTOSAR\_SWS\_IPDUMultiplexer
- [25] SAE J1939-21 Data Link Layer
- [26] SOME/IP Service Discovery Protocol Specification  
AUTOSAR\_PRS\_SOMEIPServiceDiscoveryProtocol
- [27] Specification of Service Discovery  
AUTOSAR\_SWS\_ServiceDiscovery
- [28] Specification of Diagnostic over IP  
AUTOSAR\_SWS\_DiagnosticOverIP
- [29] Transport Layer Security (TLS) Parameters  
<https://www.iana.org/assignments/tls-parameters/tls-parameters.xhtml>
- [30] Record Size Limit Extension for TLS  
<https://tools.ietf.org/html/rfc8449>
- [31] Specification of Cryptography  
AUTOSAR\_SWS\_Cryptography
- [32] Road vehicles – Diagnostics on Controller Area Networks (CAN) – Part2: Network layer services
- [33] Specification of Manifest  
AUTOSAR\_TPS\_ManifestSpecification
- [34] Specification of Communication Manager  
AUTOSAR\_SWS\_COMManager
- [35] Specification of Secure Onboard Communication  
AUTOSAR\_SWS\_SecureOnboardCommunication

- [36] Specification of TCP/IP Stack  
AUTOSAR\_SWS\_Tcplp
- [37] Specification of RTE Software  
AUTOSAR\_SWS\_RTE
- [38] Specification of Module E2E Transformer  
AUTOSAR\_SWS\_E2ETransformer
- [39] Specification of CRC Routines  
AUTOSAR\_SWS\_CRCLibrary
- [40] E2E Protocol Specification  
AUTOSAR\_PRS\_E2EProtocol
- [41] Specification of Synchronized Time-Base Manager  
AUTOSAR\_SWS\_SynchronizedTimeBaseManager
- [42] Specification of Time Synchronization over Ethernet  
AUTOSAR\_SWS\_TimeSyncOverEthernet
- [43] Software Process Engineering Meta-Model Specification  
<http://www.omg.org/spec/SPEM/2.0/>

# 1 Introduction

## 1.1 Abbreviations

CAN	Controller Area Network
CAS	Collision Avoidance Symbol
CBV	Control Bit Vector
CC	Communication Controller
CMAC	Cipher-based message authentication code
CSMA/CD	Carrier Sense Multiple Access/Collision Detection
DLC	Data Length Code
Dolp	Diagnostics over IP
DTD	Document Type Definition
ECU	Electrical Control Unit
FIBEX	Field Bus Exchange Format
I <sup>2</sup> C	Inter-Integrated Circuit
ICMP	Internet Control Message Protocol
ICV	MACsec Integrity Check Value
ID	Identifier
IP	Internet Protocol
IPDU	Interaction Layer Protocol Data Unit
ISG	Inter-slot Gap
KaY	MACsec Key Agreement Entity
LIN	Local Interconnect Network
LPDU	Data Link Layer Protocol Data Unit
MAC	Message Authentication Code
MAC Address	media access control address
MACsec	Media Access Control security
MOST	Media Oriented Systems Transport
NAD	Node Address for Diagnostic
NID	NOde Identification
NIT	Network Idle Time
NM	Network Management
NPDU	Network Layer Protocol Data Unit
OBD	Onboard Diagnostic
PAE	MACsec Port Access Entity
PDU	Protocol Data Unit
PLCA	Physical Layer Collision Avoidance
POC	Protocol Operation Control
PSK	Pre-shared Key
RSA	Rivest-Shamir-Adleman. A method using public and private key for data encryption and decryption.
RTE	Runtime Environment
SAK	MACsec Secure Association key
SDU	Service Data Unit
SecY	MACsec Security Entity
SID	Service Identifier
SPI	Serial Peripheral Interface
SWC	Software Component
SWC-T	Software Component Template
SYS-T	System Template
TLS	Transport Layer Security

TP	Transport Protocol
TTCAN	Time Triggered Controller Area Network
UML	Unified Modeling Language
VFB	Virtual Functional Bus
XML	Extensible Markup Language
XSD	XML Schema Definition

**Table 1.1: Abbreviations used in the scope of this Document**

## 1.2 Requirements Tracing

The following table references the requirements specified in [1] and links to the fulfillment of these.

Requirement	Description	Satisfied by
[RS_SYST_00001]	Mixed Systems (AUTOSAR/ NON-AUTOSAR)	[TPS_SYST_01063] [TPS_SYST_05000]
[RS_SYST_00002]	Basic Software Resources and RTE Resources	[TPS_SYST_01126]
[RS_SYST_00003]	Iterative Development	[TPS_SYST_01000] [TPS_SYST_01002] [TPS_SYST_01003]
[RS_SYST_00006]	Compatibility between the AUTOSAR Templates	[TPS_SYST_01017] [TPS_SYST_01019]
[RS_SYST_00007]	Mapping of Software Components to ECUs	[TPS_SYST_01001] [TPS_SYST_01020] [TPS_SYST_01021] [TPS_SYST_01022] [TPS_SYST_02114]
[RS_SYST_00008]	SWC Cluster	[TPS_SYST_01024] [TPS_SYST_01025]
[RS_SYST_00009]	SWC Separation	[TPS_SYST_01026] [TPS_SYST_01045]
[RS_SYST_00013]	Topology	[TPS_SYST_01005] [TPS_SYST_01006] [TPS_SYST_01007] [TPS_SYST_01008] [TPS_SYST_01009] [TPS_SYST_01010] [TPS_SYST_01011] [TPS_SYST_01013] [TPS_SYST_01014] [TPS_SYST_01015]
[RS_SYST_00014]	Data Segmentation	[TPS_SYST_01099] [TPS_SYST_01100] [TPS_SYST_01101] [TPS_SYST_01102] [TPS_SYST_01103] [TPS_SYST_01104] [TPS_SYST_01105] [TPS_SYST_01106] [TPS_SYST_02156] [TPS_SYST_02190] [TPS_SYST_02191] [TPS_SYST_02192] [TPS_SYST_02193]
[RS_SYST_00016]	Dedicated physical connections	[TPS_SYST_01043]
[RS_SYST_00017]	Mapping of signals to the same physical line	[TPS_SYST_01041]
[RS_SYST_00018]	Mapping of signals to different physical lines	[TPS_SYST_01044]
[RS_SYST_00019]	Mapping of signals to a specific physical line	[TPS_SYST_01043]
[RS_SYST_00020]	Exclusion of signals from a specific physical line	[TPS_SYST_01042]
[RS_SYST_00021]	ECU Communication via CAN	[TPS_SYST_01130]
[RS_SYST_00022]	ECU Communication via LIN	[TPS_SYST_01012] [TPS_SYST_01129] [TPS_SYST_02101] [TPS_SYST_02257] [TPS_SYST_05018] [TPS_SYST_05019]
[RS_SYST_00024]	ECU Communication via FlexRay	[TPS_SYST_01085] [TPS_SYST_01128]
[RS_SYST_00025]	Derivation of COM Stack Configuration Parameters from the System Template	[TPS_SYST_01030]
[RS_SYST_00027]	ECU Extract generation rules	[TPS_SYST_01000] [TPS_SYST_01002] [TPS_SYST_01003] [TPS_SYST_01016]
[RS_SYST_00028]	IPdu End-to-End Communication Protection support	[TPS_SYST_01070] [TPS_SYST_01071] [TPS_SYST_01072] [TPS_SYST_01073] [TPS_SYST_01074]
[RS_SYST_00029]	Dynamic length signals	[TPS_SYST_01065]







Requirement	Description	Satisfied by
[RS_SYST_00031]	Distribution of Application and Vehicle Mode Requests	[TPS_SYST_01023]
[RS_SYST_00033]	Software-to-ECU mapping variants	[TPS_SYST_01001]
[RS_SYST_00037]	Timing properties	[TPS_SYST_01075] [TPS_SYST_01076] [TPS_SYST_01077]
[RS_SYST_00038]	Support of SAE J1939 Protocol Features	[TPS_SYST_01106] [TPS_SYST_01132] [TPS_SYST_02107] [TPS_SYST_02108] [TPS_SYST_02109] [TPS_SYST_02190] [TPS_SYST_02191] [TPS_SYST_02192] [TPS_SYST_02193]
[RS_SYST_00039]	ECU Communication via Ethernet	[TPS_SYST_01086] [TPS_SYST_01088] [TPS_SYST_01089] [TPS_SYST_01090] [TPS_SYST_01091] [TPS_SYST_01094] [TPS_SYST_01095] [TPS_SYST_01096] [TPS_SYST_01097] [TPS_SYST_01098] [TPS_SYST_01108] [TPS_SYST_01131] [TPS_SYST_02156] [TPS_SYST_02217] [TPS_SYST_02218] [TPS_SYST_02219] [TPS_SYST_02220] [TPS_SYST_02221] [TPS_SYST_02222] [TPS_SYST_02223] [TPS_SYST_02224] [TPS_SYST_02225] [TPS_SYST_02226] [TPS_SYST_02227] [TPS_SYST_02228] [TPS_SYST_02229] [TPS_SYST_02232] [TPS_SYST_02233] [TPS_SYST_02234] [TPS_SYST_02235] [TPS_SYST_02236] [TPS_SYST_02237] [TPS_SYST_02238] [TPS_SYST_02239] [TPS_SYST_02240] [TPS_SYST_02241] [TPS_SYST_02242] [TPS_SYST_02243] [TPS_SYST_02244] [TPS_SYST_02245] [TPS_SYST_02247] [TPS_SYST_02248] [TPS_SYST_02302]
[RS_SYST_00042]	Support for Partial Networking	[TPS_SYST_01133] [TPS_SYST_03073] [TPS_SYST_03080] [TPS_SYST_03081] [TPS_SYST_03082] [TPS_SYST_03083]
[RS_SYST_00043]	Communication via Complex Drivers	[TPS_SYST_01115]
[RS_SYST_00044]	Description of custom bus systems	[TPS_SYST_01127]
[RS_SYST_00045]	Co-existing System artifacts in the same model	[TPS_SYST_03000]
[RS_SYST_00047]	Network and physical representation on signal level	[TPS_SYST_01062] [TPS_SYST_01063]
[RS_SYST_00048]	CAN with Flexible Data-Rate	[TPS_SYST_01154]
[RS_SYST_00049]	Support of Efficient COM for large data configuration	[TPS_SYST_02015] [TPS_SYST_02016] [TPS_SYST_02017] [TPS_SYST_02018] [TPS_SYST_02019] [TPS_SYST_02020] [TPS_SYST_02021] [TPS_SYST_02022] [TPS_SYST_02023] [TPS_SYST_02024] [TPS_SYST_02025] [TPS_SYST_02026] [TPS_SYST_02027] [TPS_SYST_02028] [TPS_SYST_02164] [TPS_SYST_03001]





Requirement	Description	Satisfied by
[RS_SYST_00050]	Data transformation of inter-ECU communication	[TPS_SYST_02030] [TPS_SYST_02031] [TPS_SYST_02032] [TPS_SYST_02033] [TPS_SYST_02034] [TPS_SYST_02035] [TPS_SYST_02036] [TPS_SYST_02037] [TPS_SYST_02038] [TPS_SYST_02039] [TPS_SYST_02040] [TPS_SYST_02041] [TPS_SYST_02042] [TPS_SYST_02044] [TPS_SYST_02045] [TPS_SYST_02046] [TPS_SYST_02047] [TPS_SYST_02048] [TPS_SYST_02049] [TPS_SYST_02050] [TPS_SYST_02051] [TPS_SYST_02052] [TPS_SYST_02053] [TPS_SYST_02054] [TPS_SYST_02055] [TPS_SYST_02056] [TPS_SYST_02057] [TPS_SYST_02074] [TPS_SYST_02075] [TPS_SYST_02080] [TPS_SYST_02092] [TPS_SYST_02093] [TPS_SYST_02094] [TPS_SYST_02121] [TPS_SYST_02123] [TPS_SYST_02124] [TPS_SYST_02125] [TPS_SYST_02126] [TPS_SYST_02127] [TPS_SYST_02128] [TPS_SYST_02129] [TPS_SYST_02130] [TPS_SYST_02131] [TPS_SYST_02132] [TPS_SYST_02156] [TPS_SYST_02195] [TPS_SYST_02212] [TPS_SYST_02213] [TPS_SYST_02214] [TPS_SYST_02359] [TPS_SYST_02360]
[RS_SYST_00051]	Support of COM Based Data Transformation	[TPS_SYST_02058]
[RS_SYST_00052]	Ethernet Switch Configuration	[TPS_SYST_03002] [TPS_SYST_03003] [TPS_SYST_03004] [TPS_SYST_03005] [TPS_SYST_03006] [TPS_SYST_03007] [TPS_SYST_03008] [TPS_SYST_03009] [TPS_SYST_03010] [TPS_SYST_03011] [TPS_SYST_03013]
[RS_SYST_00053]	The System Template shall provide the ability to define naming conventions for public symbols	[TPS_SYST_05015]
[RS_SYST_00054]	Support of Secured Pdus	[TPS_SYST_02059] [TPS_SYST_02060] [TPS_SYST_02148] [TPS_SYST_02149] [TPS_SYST_02152] [TPS_SYST_02153] [TPS_SYST_02154] [TPS_SYST_02171] [TPS_SYST_02172] [TPS_SYST_02173] [TPS_SYST_02189] [TPS_SYST_05020] [TPS_SYST_05021] [TPS_SYST_05022] [TPS_SYST_05023] [TPS_SYST_05024] [TPS_SYST_05025] [TPS_SYST_05026] [TPS_SYST_05027] [TPS_SYST_05028]
[RS_SYST_00055]	Support of Container Pdus	[TPS_SYST_01056] [TPS_SYST_02061] [TPS_SYST_02062] [TPS_SYST_02063] [TPS_SYST_02064] [TPS_SYST_02065] [TPS_SYST_02066] [TPS_SYST_02097] [TPS_SYST_02098] [TPS_SYST_02099] [TPS_SYST_02100] [TPS_SYST_02196] [TPS_SYST_03014]
[RS_SYST_00056]	E2E-protected communication	[TPS_SYST_02067] [TPS_SYST_02068] [TPS_SYST_02069] [TPS_SYST_02070] [TPS_SYST_02071] [TPS_SYST_02072] [TPS_SYST_02073] [TPS_SYST_02134] [TPS_SYST_02135] [TPS_SYST_02155] [TPS_SYST_02275] [TPS_SYST_02349] [TPS_SYST_02350] [TPS_SYST_02379]





Requirement	Description	Satisfied by
[RS_SYST_00057]	Assigning communication graphs to particular RTE Implementation Plug-Ins	[TPS_SYST_02197]
[RS_SYST_00058]	The System Template shall support the usage of the TLV encoding in SOME/IP messages	[TPS_SYST_02211] [TPS_SYST_05016] [TPS_SYST_05017]
[RS_SYST_00059]	The System Template shall support the translation between signal-based and service-oriented communication.	[TPS_SYST_02380] [TPS_SYST_02381] [TPS_SYST_02382] [TPS_SYST_02383] [TPS_SYST_03022] [TPS_SYST_03023] [TPS_SYST_03024] [TPS_SYST_03025] [TPS_SYST_03026] [TPS_SYST_03027] [TPS_SYST_03028] [TPS_SYST_03029] [TPS_SYST_03030] [TPS_SYST_03031] [TPS_SYST_03032] [TPS_SYST_03033] [TPS_SYST_03034] [TPS_SYST_03036] [TPS_SYST_03037] [TPS_SYST_03038] [TPS_SYST_03039] [TPS_SYST_03040] [TPS_SYST_03041] [TPS_SYST_03042] [TPS_SYST_03043] [TPS_SYST_03044] [TPS_SYST_03045] [TPS_SYST_03046] [TPS_SYST_03047] [TPS_SYST_03048] [TPS_SYST_03049] [TPS_SYST_03051] [TPS_SYST_03056] [TPS_SYST_03057] [TPS_SYST_03058] [TPS_SYST_03059] [TPS_SYST_03060] [TPS_SYST_03061] [TPS_SYST_03062] [TPS_SYST_03063]
[RS_SYST_00060]	The System Template shall support the modeling of Software Clusters	[TPS_SYST_02315] [TPS_SYST_02316] [TPS_SYST_02317] [TPS_SYST_02318] [TPS_SYST_02319] [TPS_SYST_02320] [TPS_SYST_02321] [TPS_SYST_02322] [TPS_SYST_02323] [TPS_SYST_02324] [TPS_SYST_02325] [TPS_SYST_02326] [TPS_SYST_02343] [TPS_SYST_02344] [TPS_SYST_02345] [TPS_SYST_02346]
[RS_SYST_00061]	The System Template shall provide means to describe the interface of the Software Clusters binary object	[TPS_SYST_02327] [TPS_SYST_02328] [TPS_SYST_02329] [TPS_SYST_02330] [TPS_SYST_02331] [TPS_SYST_02332] [TPS_SYST_02333] [TPS_SYST_02334] [TPS_SYST_02335] [TPS_SYST_02336] [TPS_SYST_02337] [TPS_SYST_02338] [TPS_SYST_02339] [TPS_SYST_02340] [TPS_SYST_02341] [TPS_SYST_02342]
[RS_SYST_00062]	The System Template shall support the modeling of Software Cluster Resources	[TPS_SYST_02320] [TPS_SYST_02321] [TPS_SYST_02322] [TPS_SYST_02323] [TPS_SYST_02324] [TPS_SYST_02325] [TPS_SYST_02326] [TPS_SYST_02345] [TPS_SYST_02346]

**Table 1.2: RequirementsTracing**

### 1.3 Requirements not fulfilled by TPS requirements


This section contains a list of requirements that are not yet fulfilled by TPS requirements.

Requirement	Description	Satisfied by
-------------	-------------	--------------

[RS_SYST_00015] Bus bandwidth	The System Template shall support bandwidth calculation as a constraint for the definition of the Communication Matrix.	chapter Topology ( <a href="#">3</a> ); Communication (chapter <a href="#">6</a> )
[RS_SYST_00023] ECU Communication via MOST	The System Template has to cover the system communication via MOST.	not covered
[RS_SYST_00025] Derivation of ECU Configuration Parameters from the System Template	The System Template shall enable the configuration of the Com Stack of the ECU. It handles those parameters that are necessary to describe the inter-ECU communication. Configuration parameters local to an ECU are not in the scope of the System Template.	Harmonization between Upstream Templates and ECU Configuration (chapter <a href="#">C</a> )
[RS_SYST_00026] Fibex compatibility	Whenever there is a considerable overlap between the System Template and the ASAM FIBEX Standard, the System Template shall adopt the structures of the ASAM FIBEX Standard.	AUTOSAR System Template and ASAM FIBEX (chapter <a href="#">1.8</a> )
[RS_SYST_00032] Topology Variants	The System Template shall provide the means to describe topology variants with optional/alternative ECUs and communication clusters.	chapter Variant Handling <a href="#">1.7.2</a> and chapter Topology <a href="#">3</a> .
[RS_SYST_00033] Software-to-ECU mapping variants	The System Template shall provide the means to describe alternative mappings of software components to ECUs.	chapter <a href="#">1.7.2</a> Variant Handling and chapter <a href="#">5.1</a> Software Component Mapping.
[RS_SYST_00034] Timing variants	The System Template shall provide the means to describe alternative timing properties (e.g. trigger type, period, priority) and timing constraints (e.g. latency, age).	chapter <a href="#">1.7.2</a> Variant Handling and chapter <a href="#">6</a> Communication.
[RS_SYST_00035] Data mapping variants	The System Template shall provide the means to describe data mapping Variants.	chapter <a href="#">1.7.2</a> Variant Handling and chapter <a href="#">5.2</a> Data Mapping.
[RS_SYST_00036] Communication variants	The System Template shall provide the means to describe communication variants, such as alternative signal-to-PDU mappings, alternative communication paths, and alternative signal and PDU properties (e.g. data type, data length).	chapter <a href="#">1.7.2</a> Variant Handling and chapter <a href="#">6</a> Communication.
[RS_SYST_00040] Timing constraints	The System Template shall provide the means to describe the timing constraints of a system's dynamics, which are determined by the consumption of computation, communication, and other hardware resources.	Timing Extensions (chapter <a href="#">1.7.3</a> )
[RS_SYST_00041] Variants in ECU Extract	The ECU Extract shall support variability of elements taken over or derived during the transformation from the System Description.	Variant Handling in ECU Extract (chapter <a href="#">14.7</a> )

## 1.4 Methodology for Defining Formal Template

Figure 1.1 illustrates the overall methodology used to define formal templates. As is explained in the "Generic Structure Template" [2], it is important to separate a precise and concise model of the information that needs to be captured from the concrete XML-DTDs, XML-Schemas or other technology that is used to define the actual templates.

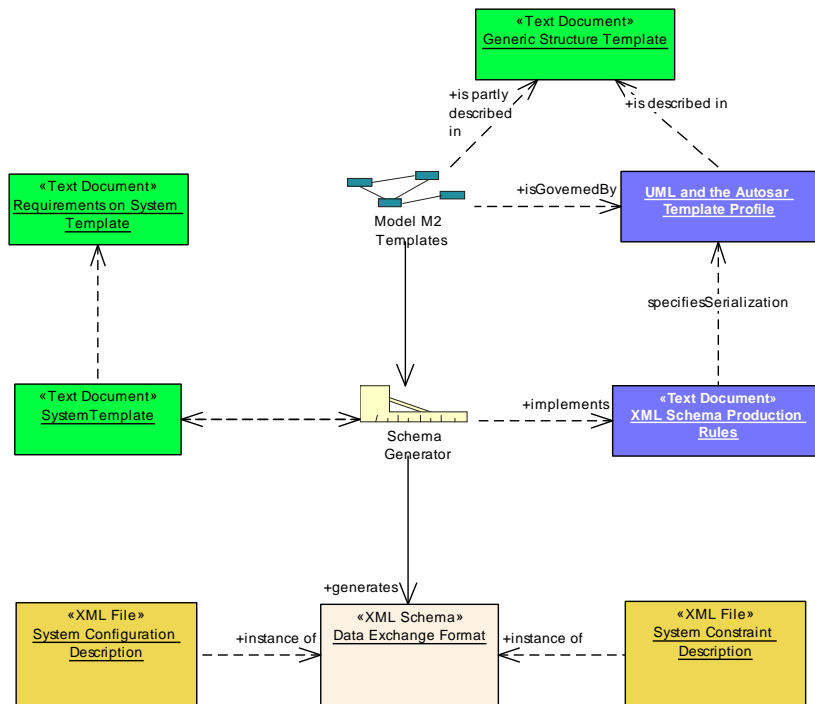

**Figure 1.1: Methodology to define templates in AUTOSAR**

The following documents describe the various aspects of the methodology:


1. The document called *System Template* (this document) describes the information that can be captured in the "system constraint" and "system configuration" description, independently from the mapping of this model on XML-technology. This document is based upon the AUTOSAR meta-model and contains an elaborate description of the semantics (the precise meaning) of all the information that can be captured within the relevant parts of this meta-model.
2. The *UML and the AUTOSAR Template Profile* [2] describes the basic concepts that should be used when creating content of the meta-model.
3. The document called "XML Schema Production Rules" [3] describes how XML is used and how the meta-model designed in the "System Template" should be translated by the "Schema Generator" (MMT) into XML-Schema (XSD) "Data Exchange Format". This "formalization strategy" is to be used for all data that is formally described in the meta-model. In particular this document is worth to read in order to understand the mapping of the meta-model and the XML based System template.

4. The "Generic Structure Template" [2] describes the top level structure which is common to all AUTOSAR templates and provides AUTOSAR standard mechanisms of modeling elements and patterns.
5. The concrete "Template", the "Data Exchange Format" is an XML schema which is generated out of the meta-model described in the "System Template" using the approach and the patterns defined in the "XML Schema Production Rules". This schema is typically used as input to tools. The M1-level system descriptions are XML files which can be validated against the schema. In that sense they are instances of the schema defining the XML representation of the template.

## 1.5 Scope


This document describes the system template and its use for the System Constraint Description and the System Configuration Description. In general a filled system template defines the relationship between the pure Software View on the System (represented by a top level SW Component Composition) and a Physical System Architecture with networked ECU instances. The system template is used in two stages of the "AUTOSAR Methodology" [4] (see Figure 1.2).

- As System Constraint Description it serves as input to the AUTOSAR system generator
- As System Configuration Description it defines the output of the AUTOSAR System Configuration Generator and serves as input to the AUTOSAR ECU Configuration Generator for the different ECUs defined in the description.
- As ECU Extract of the System Configuration Description it describes the ECU specific view on the System Description. It is individually generated for each of the System's ECU as the output of the AUTOSAR ECU Configuration Generator.

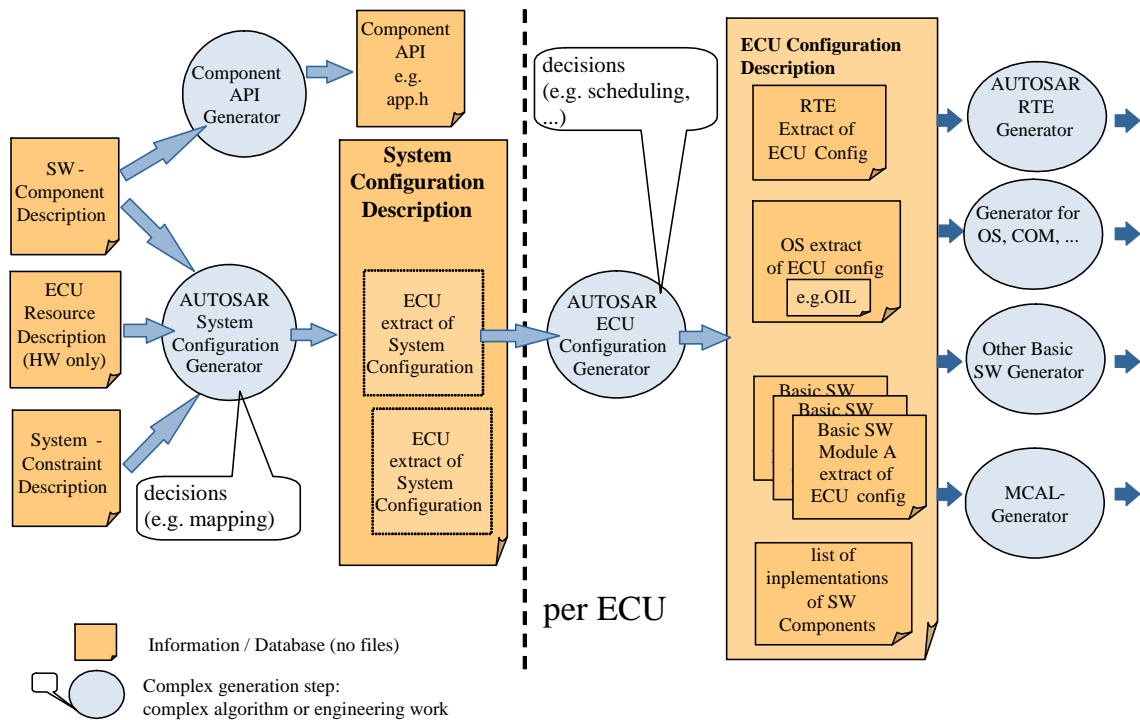

**Figure 1.2: AUTOSAR Methodology**

The System Template defines five major elements: Topology, Software, Communication, Mapping and Mapping Constraints, which will be defined in detail in the following chapters. Figure 1.3 gives an overview how these are used in the two different descriptions.

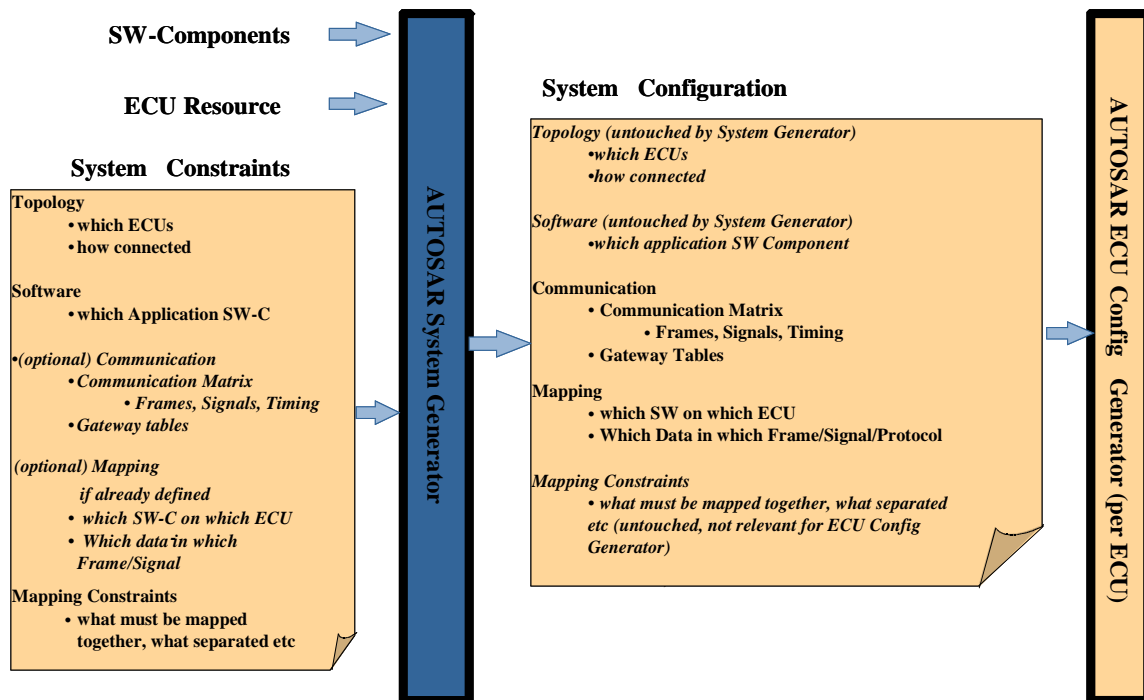

**Figure 1.3: Scope of System Constraint Description and System Configuration Description**

On Figure 1.3 some of the elements are marked *optional* for the System Constraint Description. If one starts with a new AUTOSAR project, these elements may not be present in the System Constraint Description. No (at least partial) functionality has been mapped yet, thus the communication matrix is not populated. But in most cases, many functional mappings are already predefined and contribute to the population of the communication matrix with their associated signals, thus being present in the System Constraint Description.

Reasons for such a predefinition are manifold. In some cases, hardware setup dictates where certain functionality resides, in some cases, a partial or complete communication matrix and/or completely configured ECUs (HW and SW) of another system (vehicle) has to be taken over. This approach is eased by the fact that System Configuration and System Constraint Description use the same format. That way it is possible to reuse parts of a System Configuration Description of the other system/vehicle in the actual System Constraint Description.

Furthermore, in the figure some of the elements are marked *untouched* for the System Configuration Description. This can have two reasons:

- The System Generator does not modify neither the Topology (networked ECUs) nor the Software, so these parts are just moved from System Constraint Description to System Configuration Description during the generation step.
- In a completed System Configuration Description, all SW components and all ECU-to-ECU communication have been mapped. Thus mapping constraints that limit the flexibility in the mapping phase of the system generator are obsolete



and will not be used in subsequent generator steps. They may however still be present for documentation and validation reasons.

Even if the communication matrix is determined as the result of the system configuration, the ECUs still have to be configured. This is done by the ECU configuration generator, which takes the System Configuration description as input and generates the ECU configuration description. The following guiding principles have been used to determine which information shall be part of the System Configuration Description and which goes into the ECU Configuration Description:


- Information that is common for several ECUs and has to be agreed, shall be part of the System Configuration Description and is thus covered by the System Template.
- Information, that only has ECU-local relevance is part of the ECU Configuration Description.

Thus the ECU Configuration Description will include the OS-schedule, the RTE-configuration and last but not least the configuration of the ECU basic software including the concrete communication drivers on that ECU.

## 1.6 UML Meta-Model

This chapter gives an overview of the AUTOSAR Unified Modeling Language (UML) meta-model. All AUTOSAR templates use a common meta-model. The templates describe software components, ECU resources, the Basic Software Modules, the ECU Configuration Parameters (ECU Configuration Description and ECU Configuration Parameter Definition) and the System.

The System Template defines all elements, their parameters and their relations, which are necessary for the System Constraint Description and the System Configuration Description.

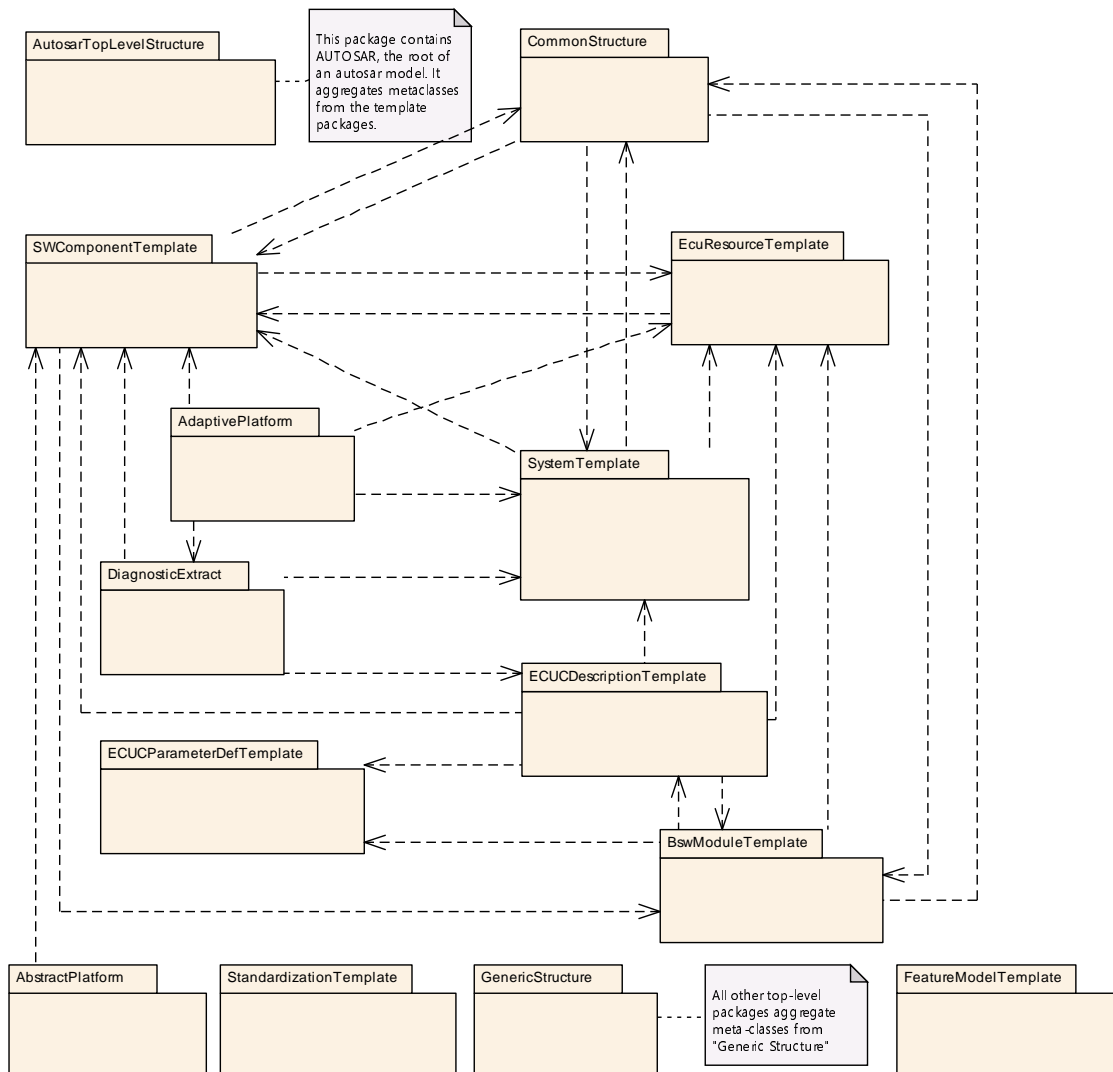

**Figure 1.4: AUTOSAR Package Overview**

Figure 1.4 shows the overall structure of the meta-model.

The dashed arrows in the diagram describe dependencies in terms of import-relationships between the packages within the meta-model. For example, the package `SystemTemplate` imports meta-classes defined in the packages `GenericStructure` [2], `SWComponentTemplate` [5] and `ECUResourceTemplate` [6].

For clarification, please note that the package `GenericStructure` contains some fundamental infrastructure meta-classes and common patterns that are described in [2]. As these are used by all other template specification the dependency associations are not depicted in the diagram for the sake of clarity.

Generic Structure provides details about

- AUTOSAR Top level structure,
- Commonly used meta-classes and primitives
- Variant Handling

- Documentation

The ECU Resource Template deals with the description of the hardware resources of an ECU. The collection of all ECUs, which are integrated in the car, are described in the topology part of the System Configuration Description/System Constraint Description. Each of these ECUInstances uses the ECU Resource Template to describe the hardware resources. That's the reason, why the topology part has references to the ECU Resource Description.

The SW component description describes the SW components as well as their communication by data elements. The top-level software composition ([RootSwCompositionPrototype](#)) is part of the System Template (Software). This top-level software composition contains the functionality of the full system and describes the complete application software architecture of this system. The definition of the top level software composition uses the elements defined in the SW Component Template, like e.g. [SwComponentType](#), [PortInterface](#), [AssemblySwConnector](#) and [DelegationSwConnector](#). That's why the System Description has references to the Software Component Description. The top level software composition is described in more detail in chapter 4.

Every template starts with an element `AUTOSAR`. While the models created in accordance to this guide are independent of the used formalization, it may still help the reader's understanding to note that `AUTOSAR` would also typically be the root element of a XML Schema generated from such a model. `AUTOSAR` can then contain one or more nested packages, simply allowing to further structure the contents of the M1 model.

## 1.7 Document Conventions

Technical terms are typeset in mono spaced font, e.g. `PortPrototype`. As a general rule, plural forms of technical terms are created by adding "s" to the singular form, e.g. `PortPrototypes`. By this means the document resembles terminology used in the AUTOSAR XML Schema.

This document contains constraints in textual form that are distinguished from the rest of the text by a unique numerical constraint ID, a headline, and the actual constraint text starting after the `[` character and terminated by the `]` character.

The purpose of these constraints is to literally constrain the interpretation of the AUTOSAR meta-model such that it is possible to detect violations of the standardized behavior implemented in an instance of the meta-model (i.e. on M1 level).

Makers of AUTOSAR tools are encouraged to add the numerical ID of a constraint that corresponds to an M1 modeling issue as part of the diagnostic message issued by the tool.

The attributes of the classes introduced in this document are listed in form of class tables. They have the form shown in the example of the top-level element `AUTOSAR`:

Please note that constraints are not supposed to be enforceable at any given time in an AUTOSAR workflow. During the development of a model, constraints may legitimately be violated because an incomplete model will obviously show inconsistencies.

However, at specific points in the workflow, constraints shall be enforced as a safeguard against misconfiguration.

The points in the workflow where constraints shall be enforced, sometimes also known as the "binding time" of the constraint, are different for each model category, e.g. on the classic platform, the constraints defined for software-components are typically enforced prior to the generation of the RTE while the constraints against the definition of an Ecu extract shall be applied when the Ecu configuration for the Com stack is created.

For each document, possible binding times of constraints are defined and the binding times are typically mentioned in the constraint themselves to give a proper orientation for implementers of AUTOSAR authoring tools.

Let [AUTOSAR](#) be an example of a typical class table. The first rows in the table have the following meaning:

**Class:** The name of the class as defined in the UML model.

**Package:** The UML package the class is defined in. This is only listed to help locating the class in the overall meta model.

**Note:** The comment the modeler gave for the class (class note). Stereotypes and UML tags of the class are also denoted here.

**Base Classes:** If applicable, the list of direct base classes.

The headers in the table have the following meaning:

**Attribute:** The name of an attribute of the class. Note that AUTOSAR does not distinguish between class attributes and owned association ends.

**Type:** The type of an attribute of the class.

**Mul.:** The assigned multiplicity of the attribute, i.e. how many instances of the given data type are associated with the attribute.

**Kind:** Specifies, whether the attribute is aggregated in the class (`aggr` aggregation), an UML attribute in the class (`attr` primitive attribute), or just referenced by it (`ref` reference). Instance references are also indicated (`iref` instance reference) in this field.

**Note:** The comment the modeler gave for the class attribute (role note). Stereotypes and UML tags of the class are also denoted here.

Please note that the chapters that start with a letter instead of a numerical value represent the appendix of the document. The purpose of the appendix is to support the explanation of certain aspects of the document and does not represent binding conventions of the standard.

The verbal forms for the expression of obligation specified in [TPS\_STDT\_00053] shall be used to indicate requirements, see Standardization Template, chapter Support for Traceability ([7]).

The representation of requirements in AUTOSAR documents follows the table specified in [TPS\_STDT\_00078], see Standardization Template, chapter Support for Traceability ([7]).

### 1.7.1 Detailed Representation of InstanceRef Associations

As a special type of association "instanceRef" refers to an exact instance of the referenced class, requiring additional information of the target and the context. This is explained in detail in the AUTOSAR Generic Structure Template [2]. Each "instanceRef" association can both be represented by the short form and by an detailed representation. For readability the diagrams in the main body of the specification use the short form. The detailed descriptions can be found in the Appendix B.

### 1.7.2 Variant Handling

The System Template supports the creation of Variants in many of its model elements. In the Metamodel all locations that may exhibit variability are marked with the stereotype `atpVariation`. This allows the definition of possible variation points. Tagged Values are used to specify additional informations.

There are four types of locations in the metamodel which may exhibit variability:

- Aggregations
- Associations
- Attribute Values
- Classes providing property sets

The reasons for the attachment of the stereotype `atpVariation` to certain model elements and the consequences for other model elements are explained in class tables in the following chapters. More details about the AUTOSAR Variant Handling Concept can be found in the AUTOSAR Generic Structure Template [2].

### 1.7.3 Timing Extensions

With AUTOSAR Release 4.0 a new set of concepts for the description and analysis of end-to-end timing constraints is introduced by the Specification of Timing Extensions. A subset of these extensions aims for the system level and can be used to enhance the descriptions that are already available in the System Template.

A dedicated description of the timing extensions that can be used at system level is given in chapter 3 (System timing) in the Specification of Timing Extensions [8].

### 1.7.4 Documentation Support

With AUTOSAR Release 4.0 the AUTOSAR XML schema provides support for integrated and well structured documentation. More details about the AUTOSAR Documentation Support concept can be found in the AUTOSAR Generic Structure Tem-

plate [2]. An optional documentation block can be applied to any identifiable element. Furthermore, as shown in figure 1.5, the System Template provides the possibility of adding additional documentation to several non-identifiable elements. The documentation of a `System` is composed of several chapters.

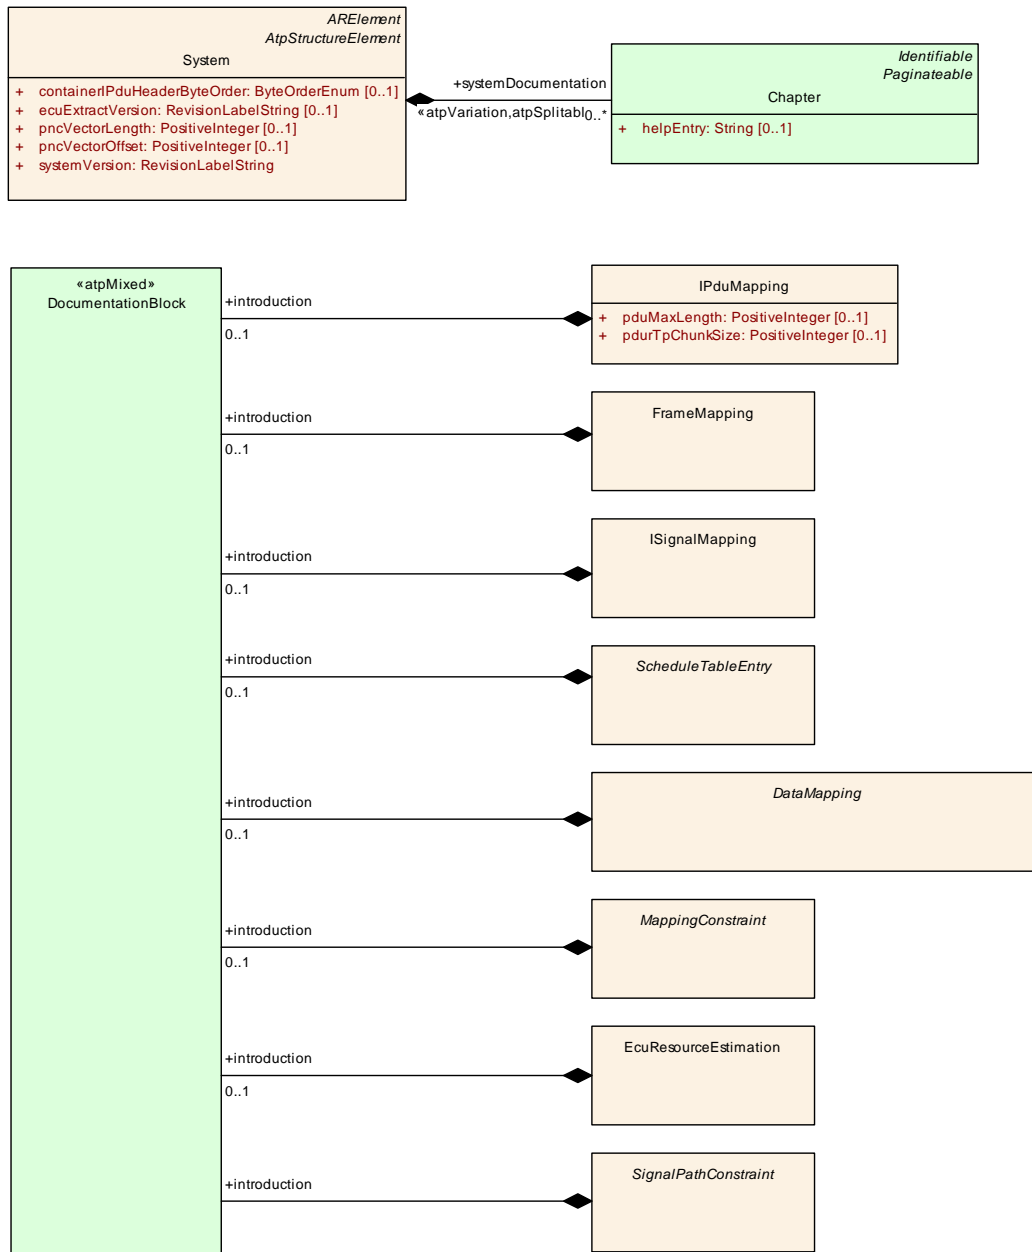


Figure 1.5: System Template Documentation Support

### 1.7.5 Stereotype `atpSplitable` in the System Template

The stereotype `<<atpSplitable>>` is used in the System Template to support step-wise processes, where the System Configuration Description is completed incrementally over a development process. Example:

1) Description of Communication only consists of interaction signals (ISignal). This is enough information to create an individual ECU's RTE, and even contains enough information to configure an ECU where the actual Frame/Pdu communication is being handled post-build.

2) In a second step, the communication matrix is being completed for a concrete vehicle. Pdus and Frames, along with their Triggerings are being added to the previous System Description. This model then contains the full information about an ECU's communication, especially containing the additional information to generate the post build information.

So, in this 2-step approach, an OEM could deliver the incomplete ECU extract from step (1) to the ECU integrator, who can then build a complete software image for the ECU. In the 2nd step, the ECU extract will be completed by the previously missing information, but as the first extract will still be valid due to the `<<atpSplitable>>` construct, the ECU including the flashed image from step (1) can be (re)used as it is, and just will be completed with the post build information, e.g. Frames and Pdus.

Further details about the `<<atpSplitable>>` stereotype can be found in the Generic Structure Template [2].


## 1.8 AUTOSAR System Template and ASAM FIBEX

FIBEX (Field Bus Exchange Format) [9] is an XML exchange format proposed for data exchange between tools that deal with bus communication Systems. The format supports the most common automotive data buses: LIN [10], CAN [11], MOST [12], FlexRay [13]. The covered areas of the exchange format are the functional network, system topology and the communication level. The functional network describes the software architecture of the system. In the system topology the logical layout of the system is described. This means it is documented which ECU is connected to which bus. The central purpose of a communication system is the exchange of frames with certain properties. The format is able to describe frames and their timing properties.

In future versions of the System Template a common subset between ASAM FIBEX and AUTOSAR will be harmonized. The current version of the System Template contains already the ASAM FIBEX description for communication and topology. Due to requirements of AUTOSAR some extensions were made to those descriptions. For instance the communication part is extended by a concept for PDUs (I-Pdus and N-Pdus). The harmonization between ASAM FIBEX and AUTOSAR System Template is not finalized at this time.



In the UML Meta-Model the FIBEX contents are located in an own FIBEX UML Package. The top level `FibexElement` is referenced by the top level element `System` of the System Template. Similar to the usage of the `ARElement`, specializations of the `FibexElement` represent elementary building blocks within the FIBEX package. Each of this elements will be described in more detail in the following chapters.

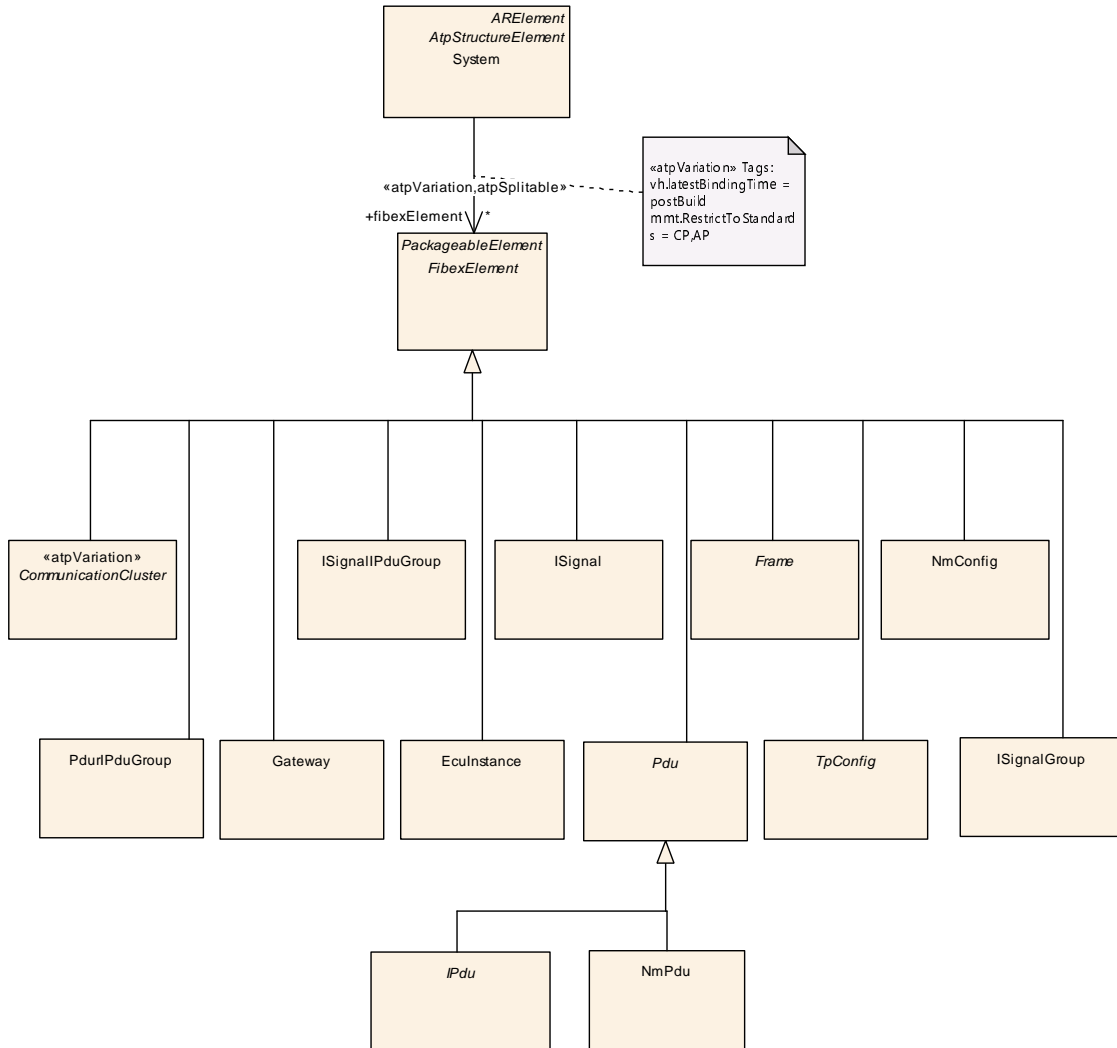

**Figure 1.6: Fibex Elements**

## 2 System

The top level element of the System Template is the class *System*, as shown in figure 2.1.

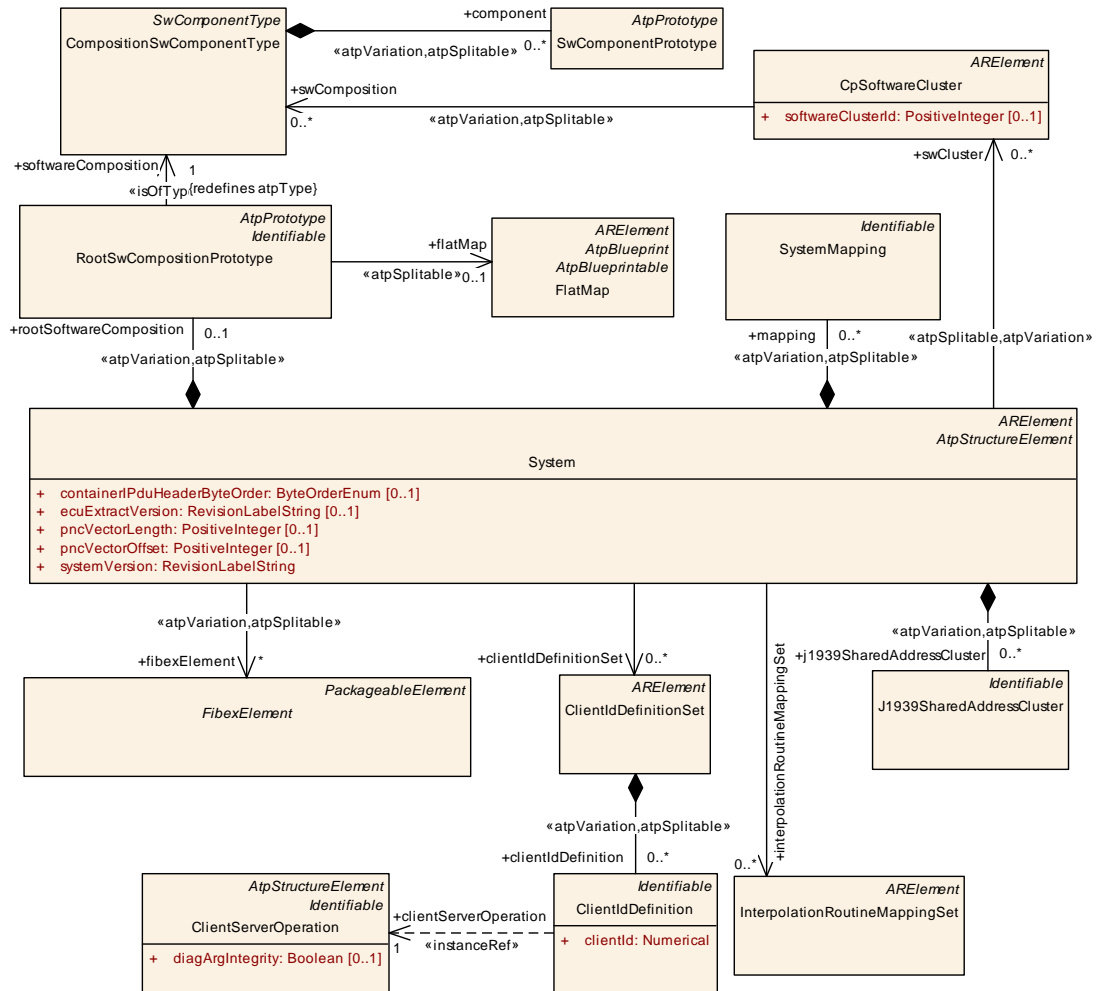


Figure 2.1: System Template Overview

<b>Class</b>	<b>System</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate			
<b>Note</b>	<p>The top level element of the System Description. The System description defines five major elements: Topology, Software, Communication, Mapping and Mapping Constraints.</p> <p>The System element directly aggregates the elements describing the Software, Mapping and Mapping Constraints; it contains a reference to an ASAM FIBEX description specifying Communication and Topology.</p> <p><b>Tags:</b>atp.recommendedPackage=Systems</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpFeature</a> , <a href="#">AtpStructureElement</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a> , <a href="#">AtpClassifier.atpFeature</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	System			
clientId DefinitionSet	<a href="#">ClientIdDefinitionSet</a>	*	ref	Set of Client Identifiers that are used for inter-ECU client-server communication in the System.
containerIPdu HeaderByte Order	<a href="#">ByteOrderEnum</a>	0..1	attr	Defines the byteOrder of the header in ContainerIPdus.
ecuExtract Version	RevisionLabelString	0..1	attr	Version number of the Ecu Extract.
fibexElement	<a href="#">FibexElement</a>	*	ref	Reference to ASAM FIBEX elements specifying Communication and Topology.  All Fibex Elements used within a System Description shall be referenced from the System Element.  atpVariation: In order to describe a product-line, all Fibex Elements can be optional.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=fibexElement.fibexElement, fibexElement.variationPoint.shortLabel vh.latestBindingTime=postBuild
interpolation Routine MappingSet	<a href="#">InterpolationRoutineMappingSet</a>	*	ref	This reference identifies the InterpolationRoutineMapping Sets that are relevant in the context of the enclosing System.
j1939Shared AddressCluster	<a href="#">J1939SharedAddressCluster</a>	*	aggr	Collection of J1939Clusters that share a common address space for the routing of messages.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=j1939SharedAddressCluster.shortName, j1939SharedAddressCluster.variationPoint.shortLabel vh.latestBindingTime=postBuild
mapping	<a href="#">SystemMapping</a>	*	aggr	Aggregation of all mapping aspects (mapping of SW components to ECUs, mapping of data elements to signals, and mapping constraints).  In order to support OEM / Tier 1 interaction and shared development for one common System this aggregation is atpSplitable and atpVariation. The content of System Mapping can be provided by several parties using different names for the SystemMapping.  This element is not required when the System description is used for a network-only use-case.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=mapping.shortName, mapping.variationPoint.shortLabel vh.latestBindingTime=postBuild
pncVector Length	PositiveInteger	0..1	attr	Length of the partial networking request release information vector (in bytes).
pncVectorOffset	PositiveInteger	0..1	attr	Absolute offset (with respect to the NM-PDU) of the partial networking request release information vector that is defined in bytes as an index starting with 0.





Class	System			
rootSoftware Composition	<a href="#">RootSwComposition Prototype</a>	0..1	aggr	Aggregation of the root software composition, containing all software components in the System in a hierarchical structure. This element is not required when the System description is used for a network-only use-case.  atpVariation: The RootSwCompositionPrototype can vary.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=rootSoftwareComposition.shortName, rootSoftwareComposition.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
swCluster	<a href="#">CpSoftwareCluster</a>	*	ref	CP Software Clusters of this System  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=swCluster.cpSoftwareCluster, swCluster.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=systemDesignTime
system Documentation	Chapter	*	aggr	Possibility to provide additional documentation while defining the System. The System documentation can be composed of several chapters.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=systemDocumentation.shortName, systemDocumentation.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=-10
systemVersion	RevisionLabelString	1	attr	Version number of the System Description.

**Table 2.1: System**

[System](#) has relationships to all elements that define a system constraint description or system configuration description. It aggregates the [SystemMapping](#) and [RootSwCompositionPrototype](#) elements. [SystemMapping](#) deals with mapping of software components to ECUs as well as with the mapping of data elements that are to be exchanged between software components onto signals and frames. The [RootSwCompositionPrototype](#) element contains a reference to the top level software composition.

**[TPS\_SYST\_02364] Scope of the [System](#)** [The [System](#) defines a vehicle representation and describes the software related parts of the vehicle. This includes the Software Components that are deployed to ECUs of the vehicle but also the means for the Software to communicate with each other, such as network topology and communication matrix.]()

**[constr\_3028] FibexElements** [Each [FibexElement](#) that is used in the System Description shall be referenced by the [System](#) element in the role [FibexElement](#).]()

[FibexElements](#) can be defined in a stand alone and reusable way (hence they can simply be created in any package like ARElements), but on the other hand it shall be clear that a certain [FibexElement](#) actually belongs to a certain System Description. Thus, all [FibexElements](#) used within a System Description (i.e. contributing to the specification of the System communication and topology) shall be referenced from the

[System](#) element. More details about the integration of FIBEX into the System Template will be given in chapter [1.8](#).

**[TPS\_SYST\_01002] System Category** [The [System](#) shall have a [category](#) element defined which indicates the role of this work product.] ([RS\\_SYST\\_00003](#), [RS\\_SYST\\_00027](#))

**[TPS\_SYST\_01003] Standardized System Category Definitions** [The standardized System category definitions are defined in [Table 2.2](#).] ([RS\\_SYST\\_00003](#), [RS\\_SYST\\_00027](#))

<i>category</i>	<i>Meaning</i>
SYSTEM_CONSTRAINTS	The <a href="#">System</a> class is used to describe System Constraints. In this usage, it forms the core element of a System Constraints Description, serving as an input to the AUTOSAR System Generator.
SYSTEM_DESCRIPTION	The <a href="#">System</a> class is used to describe the System Configuration of a complete AUTOSAR System. In this usage, it forms the core element of a System Description, the output of the AUTOSAR System Generator.
SYSTEM_EXTRACT	The <a href="#">System</a> class is used to describe a subsystem specific view on the complete System Description. The System Extract is not fully decomposed and still contains compositions. The SYSTEM_EXTRACT is the basis for designing subsystems.
ECU_EXTRACT	The <a href="#">System</a> class is used to describe the ECU specific view on the complete System Description. In this usage, it forms the core element of ECU Extract, the output of the AUTOSAR ECU Configuration Extractor. The ECU Extract is fully decomposed and contains only atomic software components. The ECU Extract is the basis for setting up the ECU Configuration.
ABSTRACT_SYSTEM_DESCRIPTION	This <a href="#">System</a> is used to describe a functional (solution-independent/abstract) system design. It can be taken as basis for the development of the SYSTEM_DESCRIPTION. No structural constraints are applied on the transformation of the ABSTRACT_SYSTEM_DESCRIPTION to the SYSTEM_DESCRIPTION.
ECU_SYSTEM_DESCRIPTION	This System is used to describe the closed view on one ECU (note that an AUTOSAR ECU is defined being one microprocessor running one AUTOSAR Stack). It can be derived from a SYSTEM_EXTRACT or it can be designed independently and mapped to a SYSTEM_EXTRACT. The ECU_SYSTEM_DESCRIPTION is not fully decomposed and still may contain compositions.
SW_CLUSTER_SYSTEM_DESCRIPTION	<a href="#">System</a> that describes the content of a single <a href="#">CpSoftwareCluster</a> .
RPT_SYSTEM	System which describes the rapid prototyping algorithm in the format of AUTOSAR Software Components. For more details see the Software Component Template <a href="#">[5]</a> and TR_Methodology <a href="#">[4]</a> .

**Table 2.2: System class categories**

Note: SYSTEM\_EXTRACT does not prescribe the number of micro controllers / cores for one ECU from the OEM perspective.

- Supplier decides to design one AUTOSAR ECU with multicore support leads to one ECU\_EXTRACT supporting one AUTOSAR stack

- Supplier decides to design two AUTOSAR ECUs (i.e., two micro-controllers) in one box leads to two ECU\_EXTRACTs supporting two AUTOSAR stacks

**[constr\_3027] Existence of `ecuExtractVersion`** [In case the category of the System is SYSTEM\_EXTRACT or ECU\_EXTRACT the `ecuExtractVersion` attribute shall be defined.]()

## 2.1 Data interpretation of bus content in different contexts

A System Description can be used for different purposes:

- as input for the creation of the Base Ecu Configuration
- as input for bus monitoring and network analysis tools

In some cases the System Description is interpreted in a different way between Ecuc tools and network analysis tools. This chapter collects such use cases and describes the differences in the interpretation of the configuration data.

### 2.1.1 Nm NID/CBV

**[TPS\_SYST\_02366] NID/CBV signals shall be ignored by Ecuc tools** [If NID/CBV are enabled (`nmCbvPosition` and `nmNidPosition` are configured), the Signals that are defined at the position of the respective NID/CBV bytes shall be ignored by Base Ecuc generators since these signals are not processed by COM.]()

Please note that there may be the use case to define the Signals that represent the NID and CBV in the `NmPdu` for bus monitoring or network analysis purposes.

## 2.2 ClientIdDefinitionSet

In the `ClientIdDefinitionSet` all Client Identifiers of the transaction handle used for a inter-ECU client server communication can be defined that belong to the `System` that refers the `ClientIdDefinitionSet`.

<b>Class</b>	<b>ClientIdDefinitionSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate			
<b>Note</b>	Set of Client Identifiers that are used for inter-ECU client-server communication in the System. <b>Tags:</b> atp.recommendedPackage=ClientIdDefinitionSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	ClientIdDefinitionSet			
clientId Definition	<a href="#">ClientIdDefinition</a>	*	aggr	Definition of a Client Identifier that will be used by the RTE in a inter-ECU client-server communication.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=clientIdDefinition.shortName, clientId Definition.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 2.3: ClientIdDefinitionSet**

Class	ClientIdDefinition			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate			
<b>Note</b>	Several clients in one client-ECU can communicate via inter-ECU client-server communication with a server on a different ECU, if a client identifier is used to distinguish the different clients. The Client Identifier of the transaction handle that is used by the RTE can be defined by this element.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">ClientIdDefinitionSet.clientIdDefinition</a>			
Attribute	Type	Mult.	Kind	Note
clientId	Numerical	1	attr	The Client Identifier of the transaction handle used for an inter-ECU client server communication is defined by this attribute. If defined the RTE generator shall use this client Id.
clientServer Operation	<a href="#">ClientServerOperation</a>	1	iref	Reference to the ClientServerOperation that is called by the client.  <b>InstanceRef implemented by:</b> <a href="#">OperationInSystem InstanceRef</a>

**Table 2.4: ClientIdDefinition**

**[constr\_3117] Allowed value of attribute [clientId](#)** [Within the context of one [ClientIdDefinition](#), the value of attribute [clientId](#) shall be in the range of [ClientIdRange.lowerLimit](#) and [ClientIdRange.upperLimit](#) for the [ClientIdRange](#) that is aggregated by the [EcuInstance](#) onto which the [SwComponentPrototypes](#) included in the [ClientIdDefinition.clientServerOperation](#) are mapped.]()

Please note that the [clientId](#) is bound to the ClientServer relationship and does not represent a globally unique identifier of the Client call. ClientIds can be reused in the context of a different ClientServer relationship.

**[constr\_3118] Valid reference target for [ClientIdDefinition.clientServerOperation.contextPort](#)** [In the context of the definition of a [ClientIdDefinition](#), the reference [clientServerOperation.contextPort](#) shall only refer to an [RPortPrototype](#).]()

Rationale: the definition of a client ID does only make sense in the context of a client of a [ClientServerOperation](#).

## 2.3 InterpolationRoutineMappingSet

The `System` defines with the `interpolationRoutineMappingSet` reference all `InterpolationRoutineMappingSets` that are relevant in the context of the `System`. More details about the `InterpolationRoutineMappingSets`, `InterpolationRoutineMappings` and `InterpolationRoutines` can be found in the Software Component Template [5].

<b>Class</b>	<b>InterpolationRoutineMappingSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::MeasurementAndCalibration::InterpolationRoutineMappingSet			
<b>Note</b>	This meta-class specifies a set of interpolation routine mappings. <b>Tags:</b> atp.recommendedPackage=InterpolationRoutineMappingSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
interpolation Routine Mapping	<a href="#">InterpolationRoutineMapping</a>	*	aggr	This specifies one particular mapping of recordlayout and its matching interpolationRoutines.

**Table 2.5: InterpolationRoutineMappingSet**

<b>Class</b>	<b>InterpolationRoutineMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::MeasurementAndCalibration::InterpolationRoutineMappingSet			
<b>Note</b>	This meta-class provides a mapping between one record layout and its matching interpolation routines. This allows to formally specify the semantics of the interpolation routines.  The use case is such that the curves/Maps define an interpolation method. This mapping table specifies which interpolation routine implements methods for a particular record layout. Using this information, the implementer of a software-component can select the appropriate interpolation routine.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">InterpolationRoutineMappingSet.interpolationRoutineMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
interpolation Routine	<a href="#">InterpolationRoutine</a>	*	aggr	This is one particular interpolation routine which is mapped to the record layout.
swRecord Layout	<a href="#">SwRecordLayout</a>	0..1	ref	This refers to the record layout which is mapped to interpolation routines.

**Table 2.6: InterpolationRoutineMapping**

<b>Class</b>	<b>InterpolationRoutine</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::MeasurementAndCalibration::InterpolationRoutineMappingSet			
<b>Note</b>	This represents an interpolation routine taken to evaluate the contents of a curve or map against a specific input value.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">InterpolationRoutineMapping.interpolationRoutine</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>







Class	InterpolationRoutine			
interpolation Routine	BswModuleEntry	0..1	ref	This specifies a BswModuleEntry which implements the current interpolation method for the given record layout. <b>Tags:</b> xml.sequenceOffset=30
isDefault	Boolean	0..1	attr	This attribute specifies whether the enclosing InterpolationRoutine is considered the default in the context (defined by the System Template) of a given collection InterpolationRoutineMapping that owns the enclosing InterpolationRoutine. <b>Tags:</b> xml.sequenceOffset=20
shortLabel	Identifier	0..1	attr	This is the name of the interpolation method which is implemented by the referenced bswModuleEntry. It corresponds to swInterpolationMethod in SwDataDef Props. <b>Tags:</b> xml.sequenceOffset=10


**Table 2.7: InterpolationRoutine**

**[constr\_5114] Semantics of [InterpolationRoutine.isDefault](#)** [For each [SwRecordLayout](#) that is referenced by one or more [InterpolationRoutineMappings](#) that are aggregated by [InterpolationRoutineMappingSets](#) that are referenced from a [System](#) in the role [interpolationRoutineMappingSet](#), only one of the collection of aggregated [InterpolationRoutines](#) shall have attribute [isDefault](#) set to True.]()

### 3 Topology

This chapter explains how a vehicle's physical System Topology is being modeled in AUTOSAR (Example: Figure 3.1). A topology is formed by a number of `EcuInstances` that are interconnected to each other in order to form ensembles of ECUs and `CommunicationClusters`, which are further detailed by providing information on bus-specific properties.

**CAN CommunicationCluster:**  
1 PhysicalChannel

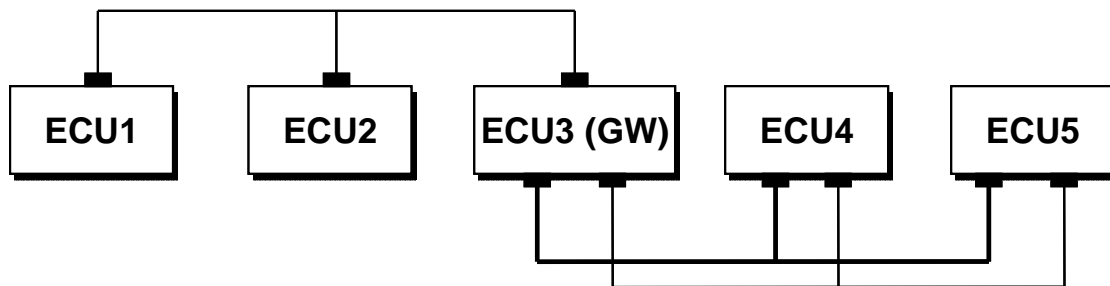

**Redundant FlexRay CommunicationCluster:**  
2 PhysicalChannels (bold line, thin line)

**Figure 3.1: Example for a Communication Cluster within a physical network topology**

In the AUTOSAR methodology [4] the topology description is one of the inputs for the System Generator. It serves as constraints for mapping the Software Components (see chapter 5.1) contained in the `RootSwCompositionPrototype` as well as for defining the System Communication matrix (see chapter 6). Gateways which allow the exchange of Signals between `CommunicationClusters` are covered in chapter 8.

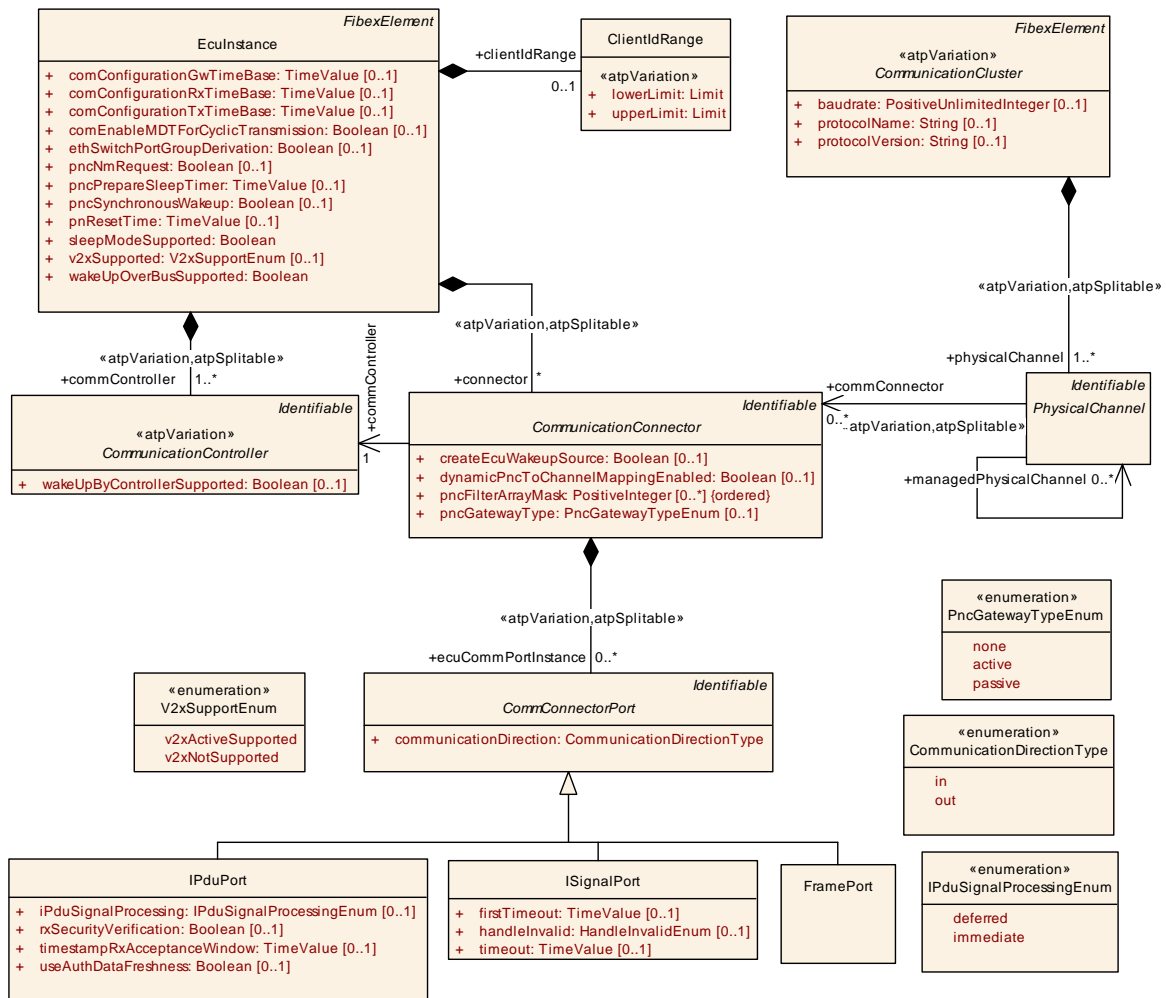


Figure 3.2: Topology elements (Topology)

### 3.1 ECUs and their communication capabilities

Within a System Topology, the ECUs actually being connected with each other are described in the form of *EcuInstances*. An *EcuInstance* needs to have one or more *CommunicationController*, the actual hardware device by means of which devices send and receive frames from the communication medium. Furthermore, the *EcuInstance* has one or more *CommunicationConnectors* which describe the bus interfaces of the ECUs and to specify the sending/receiving behavior.

#### 3.1.1 ECU Instance

[TPS\_SYST\_01005] Definition of *EcuInstance* [The *EcuInstance* defines one instance of the AUTOSAR stack.] (*RS\_SYST\_00013*)

The actual description of the ECU hardware resources is done by the means of the ECU Resource Template [6]: It uses the `HwElement` class and its aggregated hardware elements for defining a specific ECU type. In other words the Ecu Resource Template “Ecu” is used to describe the physical box (`HwElement` of category Ecu) containing the electronics which may contain several microcontrollers with several AUTOSAR Stack instances running.

**[TPS\_SYST\_01006] Assign ECU type to EcuInstance** [The process of assigning an ECU type to `EcuInstance` is a mapping step (see [TPS\_SYST\_01019]) and performed latest in the System Generation step.] (*RS\_SYST\_00013*)

An `EcuInstance` can serve as a gateway if it is connected to two or more different clusters by two or more of its `CommunicationControllers`.

<b>Class</b>	<b>EcuInstance</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	ECUInstances are used to define the ECUs used in the topology. The type of the ECU is defined by a reference to an ECU specified with the ECU resource description. <b>Tags:</b> atp.recommendedPackage=EcuInstances			
<b>Base</b>	<i>ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Aggregated by</b>	<i>ARPackage.element</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
associatedCommunicationPduGroup	<a href="#">ISignalPduGroup</a>	*	ref	With this reference it is possible to identify which ISignalIPduGroups are applicable for which Communication Connector/ ECU.  Only top level ISignalIPduGroups shall be referenced by an EcuInstance. If an ISignalIPduGroup contains other ISignalIPduGroups than these contained ISignalIPduGroups shall not be referenced by the EcuInstance. Contained ISignalIPduGroups are associated to an Ecu Instance via the top level ISignalIPduGroup.
associatedConsumedProvidedServiceInstanceGroup	<a href="#">ConsumedProvidedServiceInstanceGroup</a>	*	ref	With this reference it is possible to identify which ConsumedProvidedServiceInstanceGroups are applicable for which EcuInstance. <b>Stereotypes:</b> atp.Splittable; atp.Variation <b>Tags:</b> atp.Splitkey=associatedConsumedProvidedServiceInstanceGroup.consumedProvidedServiceInstanceGroup.associatedConsumedProvidedServiceInstanceGroup.variationPoint.shortLabel vh.latestBindingTime=postBuild
associatedPduRIPduGroup	<a href="#">PduRIPduGroup</a>	*	ref	With this reference it is possible to identify which PduRIPdu Groups are applicable for which Communication Connector/ ECU.
clientIdRange	<a href="#">ClientIdRange</a>	0..1	aggr	Restriction of the Client Identifier for this Ecu to an allowed range of numerical values. The Client Identifier of the transaction handle is generated by the client RTE for inter-Ecu Client/Server communication.
comConfigurationGwTimeBase	TimeValue	0..1	attr	The period between successive calls to Com_MainFunctionRouteSignals of the AUTOSAR COM module in seconds.
comConfigurationRxTimeBase	TimeValue	0..1	attr	The period between successive calls to Com_MainFunctionRx of the AUTOSAR COM module in seconds.





Class	EcuInstance			
com ConfigurationTx TimeBase	TimeValue	0..1	attr	The period between successive calls to Com_Main FunctionTx of the AUTOSAR COM module in seconds.
comEnable MDTForCyclic Transmission	Boolean	0..1	attr	Enables for the Com module of this EcuInstance the minimum delay time monitoring for cyclic and repeated transmissions (TransmissionModeTiming has cyclic Timing assigned or eventControlledTiming with numberOfRepetitions > 0).
commController	<a href="#">Communication Controller</a>	1..*	aggr	CommunicationControllers of the ECU. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=commController.shortName, commController.variationPoint.shortLabel vh.latestBindingTime=postBuild
connector	<a href="#">Communication Connector</a>	*	aggr	All channels controlled by a single controller. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=connector.shortName, connector.variationPoint.shortLabel vh.latestBindingTime=postBuild
dltConfig	<a href="#">DltConfig</a>	0..1	aggr	Describes the Dlt configuration on this EcuInstance.
dolpConfig	<a href="#">DolpConfig</a>	0..1	aggr	Dolp configuration on this EcuInstance. <b>Tags:</b> atp.Status=draft
ecuTaskProxy	<a href="#">OsTaskProxy</a>	*	ref	Reference to OsTaskProxies assigned to the Ecu Instance. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=ecuTaskProxy
ethSwitchPort Group Derivation	Boolean	0..1	attr	Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EcuInstance. If not defined the derivation shall not be done.
partition	<a href="#">EcuPartition</a>	*	aggr	Optional definition of Partitions within an Ecu.
pncNmRequest	Boolean	0..1	attr	Defines if this EcuInstance shall request Nm on all its PhysicalChannels which have Nm variant set to FULL each time a PNC is requested.
pncPrepare SleepTimer	TimeValue	0..1	attr	Time in seconds the PNC state machine shall wait in PNC_PREPARE_SLEEP.
pnc Synchronous Wakeup	Boolean	0..1	attr	If this parameter is available and set to true then all available PNCs will be woken up as soon as a channel wakeup occurs. This is ensured by adding all PNCs to all channel wakeup sources during upstream mapping.
pnResetTime	TimeValue	0..1	attr	Specifies the runtime of the reset timer in seconds. This reset time is valid for the reset of PN requests in the EIRA and in the ERA.
sleepMode Supported	Boolean	1	attr	Specifies whether the ECU instance may be put to a "low power mode" <ul style="list-style-type: none"> <li>• true: sleep mode is supported</li> <li>• false: sleep mode is not supported</li> </ul> Note: This flag may only be set to "true" if the feature is supported by both hardware and basic software.
tcplplcmpProps	<a href="#">EthTcplplcmpProps</a>	0..1	ref	EcuInstance specific ICMP (Internet Control Message Protocol) attributes
tcplpProps	<a href="#">EthTcplpProps</a>	0..1	ref	EcuInstance specific Tcplp Stack attributes.





Class	EcuInstance			
v2xSupported	V2xSupportEnum	0..1	attr	This attribute is used to control the existence of the V2X stack on the given EcuInstance.
wakeUpOver BusSupported	Boolean	1	attr	Driver support for wakeup over Bus.

**Table 3.1: EcuInstance**

**[constr\_3008] EcuInstance subelements** [The [CommunicationConnector](#) and the [CommunicationController](#) that is referenced by the [CommunicationConnector](#) shall be owned by the same [EcuInstance](#).] ()

Class	ClientIdRange			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
Note	With this element it is possible to restrict the Client Identifier of the transaction handle that is generated by the client RTE for inter-Ecu Client/Server communication to an allowed range of numerical values.			
Base	AObject			
Aggregated by	<a href="#">EcuInstance.clientIdRange</a>			
Attribute	Type	Mult.	Kind	Note
lowerLimit	Limit	1	attr	This specifies the lower limit of the ClientIdRange. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime
upperLimit	Limit	1	attr	This specifies the upper limit of the ClientIdRange. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime

**Table 3.2: ClientIdRange**

**[constr\_3116] Overlap of ClientIdRanges in the context of the enclosing System** [The [ClientIdRange](#) defined for an [EcuInstance](#) shall not overlap with the [ClientIdRange](#) of any other [EcuInstance](#) in the context of the enclosing System.] ()

### 3.1.2 Communication Controller

**[TPS\_SYST\_01007] Definition of CommunicationController** [A [CommunicationController](#) is a dedicated hardware device by means of which hosts are sending frames to and receiving frames from the communication medium.] ([RS\\_SYST\\_00013](#))

**[TPS\_SYST\_01008] Assign CommunicationController to the AUTOSAR Communication Peripheral** [In order to illustrate the relationship of an [CommunicationController](#) to the [HwElement](#) with [category](#) [CommunicationController](#) defined in the ECU Resource Description, a mapping between these two classes may be specified using the [CommunicationControllerMapping](#) (see [\[TPS\\_SYST\\_01014\]](#)).] ([RS\\_SYST\\_00013](#))

<b>Class</b>	<<atpVariation>> <b>CommunicationController</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	The communication controller is a dedicated hardware device by means of which hosts are sending frames to and receiving frames from the communication medium. <b>Tags:</b> vh.latestBindingTime=postBuild			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">AbstractCanCommunicationController</a> , <a href="#">EthernetCommunicationController</a> , <a href="#">FlexrayCommunicationController</a> , <a href="#">LinCommunicationController</a> , <a href="#">UserDefinedCommunicationController</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.commController</a> , <a href="#">MachineDesign.communicationController</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
wakeUpByControllerSupported	Boolean	0..1	attr	Defines whether the ECU shall be woken up by this CommunicationController. TRUE: wake up is possible FALSE: wake up is not supported Note: If wakeUpByControllerSupported is set to TRUE the feature shall be supported by both hardware and basic software.

**Table 3.3: CommunicationController**

An [EcuInstance](#) may be connected to the same [PhysicalChannel](#) via two or more [CommunicationControllers](#). In most cases each of these [CommunicationControllers](#) will have a dedicated [CommunicationConnector](#).

There may be rare use cases where an [EcuInstance](#) is connected to a [PhysicalChannel](#) by one [CommunicationController](#) that in turn uses more than one [CommunicationConnector](#).

### 3.1.3 Communication Connector

[TPS\_SYST\_01009] Definition of [CommunicationConnector](#) [An [EcuInstance](#) uses [CommunicationConnector](#) elements in order to describe its bus interfaces and to specify the sending/receiving behavior.] ([RS\\_SYST\\_00013](#))

The relationship between an [EcuInstance](#), a [CommunicationController](#), and a [PhysicalChannel](#) is expressed by letting a [PhysicalChannel](#) reference a [CommunicationConnector](#) (which in turn is aggregated by [EcuInstance](#)) and which also has the ability to reference a [CommunicationController](#).

<b>Class</b>	<b>CommunicationConnector</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	The connection between the referencing ECU and the referenced channel via the referenced controller. Connectors are used to describe the bus interfaces of the ECUs and to specify the sending/receiving behavior. Each CommunicationConnector has a reference to exactly one communicationController. Note: Several CommunicationConnectors can be assigned to one PhysicalChannel in the scope of one ECU Instance.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			





<b>Class</b>	<b>CommunicationConnector</b> (abstract)			
<b>Subclasses</b>	<a href="#">AbstractCanCommunicationConnector</a> , <a href="#">EthernetCommunicationConnector</a> , <a href="#">FlexrayCommunicationConnector</a> , <a href="#">LinCommunicationConnector</a> , <a href="#">UserDefinedCommunicationConnector</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.connector</a> , <a href="#">MachineDesign.communicationConnector</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
commController	<a href="#">CommunicationController</a>	1	ref	Reference to the communication controller. The CommunicationConnector and referenced CommunicationController shall be aggregated by the same ECUInstance.  The communicationController can be referenced by several CommunicationConnector elements. This is important for the FlexRay Bus. FlexRay communicates via two physical channels. But only one controller in an ECU is responsible for both channels. Thus, two connectors (for channel A and for channel B) shall reference to the same controller.
createEcuWakeupSource	Boolean	0..1	attr	If this parameter is available and set to true then a channel wakeup source shall be created for the Physical Channel referencing this CommunicationConnector.
dynamicPncToChannelMappingEnabled	Boolean	0..1	attr	Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this CommunicationConnector and its respective Physical Channel.  <b>Tags:</b> atp.Status=draft
ecuCommPortInstance	<a href="#">CommConnectorPort</a>	*	aggr	An ECUs reception or send ports.  atpVariation: If signals/PDUs/frames are variable, the corresponding ports shall be variable, too.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=ecuCommPortInstance.shortName, ecuCommPortInstance.variationPoint.shortLabel vh.latestBindingTime=postBuild
pncFilterArrayMask (ordered)	PositiveInteger	*	attr	Bit mask for NM-Pdu Payload used to configure the NM filter mask for the Network Management.  <b>Tags:</b> atp.Status=draft
pncGatewayType	<a href="#">PncGatewayTypeEnum</a>	0..1	attr	Defines if this EcuInstance shall implement the Pnc Gateway functionality on this CommunicationConnector and its respective PhysicalChannel. Several Ecu Instances on the same PhysicalChannel can have the PncGateway functionality enabled, but only one of them shall have the pncGatewayType "active".

**Table 3.4: CommunicationConnector**

<b>Enumeration</b>	<b>PncGatewayTypeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology
<b>Note</b>	Defines the PncGateway roles.
<b>Aggregated by</b>	<a href="#">CommunicationConnector.pncGatewayType</a>
<b>Literal</b>	<b>Description</b>
active	The active PncGateway functionality shall be performed  <b>Tags:</b> atp.EnumerationLiteralIndex=0







Enumeration	PncGatewayTypeEnum
none	No PncGateway functionality shall be performed <b>Tags:</b> atp.EnumerationLiteralIndex=1
passive	The passive PncGateway functionality shall be performed <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 3.5: PncGatewayTypeEnum**

Note: Use-case for the relation of several `CommunicationConnectors` assigned to one `PhysicalChannel` in the scope of one `EcuInstance`: One safety measure for a safety relevant ECU can be to have two transceivers (and two controllers) connected to the same network (Bus). In case a safety violation is detected one transceiver can be disabled and the respective Frames are blocked. The other transceiver stays active and keeps the ECU alive for diagnostics.

The `CommunicationConnector.pncFilterArrayMask` is configured per communication connector. This data mask is calculated over the whole payload of the `NmPdu` ignoring the leading bytes which do not contain `pncVector` information. The number of leading bytes which shall be ignored is equivalent to the value of `System.pncVectorOffset`.

The `CommunicationConnector.pncFilterArrayMask` is an ordered list of byte (uint8) values which represent the PNC Vector layout.

The number of list elements corresponds to `NmCluster.pncClusterVectorLength`, if defined, or `System.pncVectorLength`

**[constr\_3685] Allowed values for each element of `pncFilterArrayMask`** [The value for each element of `CommunicationConnector.pncFilterArrayMask` shall be in the range between 0 and 255.]()

**[constr\_3686] Allowed number of entries for `pncFilterArrayMask`** [The number of `CommunicationConnector.pncFilterArrayMask` elements shall be:

- `NmCluster.pncClusterVectorLength`, if defined
- `System.pncVectorLength`, otherwise.

]()

## 3.2 Communication Clustering

### 3.2.1 Communication Cluster

**[TPS\_SYST\_01010] Definition of `CommunicationCluster`** [`CommunicationCluster` represents a formal way to express that a number of `EcuInstances` are linked by an arbitrary topology (bus, star, ring, tree). Depending on the communication

standard, a `CommunicationCluster` may either have exactly one or more (redundant) `PhysicalChannels`.] ([RS\\_SYST\\_00013](#))

Note that all ECUs within a `CommunicationCluster` communicate within the same address range.

Note that the same ECU can participate in more than one `CommunicationCluster` if it has more than one `CommunicationConnector` being referenced by `PhysicalChannels` owned by different `CommunicationClusters`.

<b>Class</b>	<<atpVariation>> <b>CommunicationCluster</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	<p>The <code>CommunicationCluster</code> is the main element to describe the topological connection of communicating ECUs.</p> <p>A cluster describes the ensemble of ECUs, which are linked by a communication medium of arbitrary topology (bus, star, ring, ...). The nodes within the cluster share the same communication protocol, which may be event-triggered, time-triggered or a combination of both.</p> <p>A <code>CommunicationCluster</code> aggregates one or more physical channels.</p> <p><b>Tags:</b>vh.latestBindingTime=postBuild</p>			
<b>Base</b>	<i>ARObject</i> , <i>CollectableElement</i> , <i>FibexElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Subclasses</b>	<i>AbstractCanCluster</i> , <i>EthernetCluster</i> , <i>FlexrayCluster</i> , <i>LinCluster</i> , <i>UserDefinedCluster</i>			
<b>Aggregated by</b>	<i>ARPackage.element</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
baudrate	PositiveUnlimitedInteger	0..1	attr	Channels speed in bits/s.
physical Channel	<code>PhysicalChannel</code>	1..*	aggr	<p>This relationship defines which channel element belongs to which cluster. A channel shall be assigned to exactly one cluster, whereas a cluster may have one or more channels.</p> <p>Note: This <code>atpSplittable</code> property has no <code>atp.Splitkey</code> due to <code>atpVariation</code> (<code>PropertySetPattern</code>).</p> <p><b>Stereotypes:</b> <code>atpSplittable</code>; <code>atpVariation</code></p> <p><b>Tags:</b>vh.latestBindingTime=systemDesignTime</p>
protocolName	<code>String</code>	0..1	attr	The name of the protocol used.
protocolVersion	<code>String</code>	0..1	attr	The version of the protocol used.

**Table 3.6: CommunicationCluster**

Some communication clusters need, additional to the general attributes which are valid for all communication clusters, specialized attributes to describe the individual communication cluster properties. The bustype-specific specializations of `CommunicationCluster` (Figure 3.3) are further detailed in chapter 3.3.

### 3.2.2 Physical Channel

[[TPS\\_SYST\\_01011](#)] **Definition of `PhysicalChannel`** [`PhysicalChannel` represents the communication medium that is used to send and receive information between communicating ECUs. Each `CommunicationCluster` has at least one `PhysicalChannel`.] ([RS\\_SYST\\_00013](#))

[constr\_3373] Limitation on the number of **PhysicalChannels** that are referencing a **CommunicationConnector** [A **CommunicationConnector** shall only be referenced by at most one **PhysicalChannel**.] ()

<b>Class</b>	<b>PhysicalChannel</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	<p>A physical channel is the transmission medium that is used to send and receive information between communicating ECUs. Each CommunicationCluster has at least one physical channel. Bus systems like CAN and LIN only have exactly one PhysicalChannel. A FlexRay cluster may have more than one PhysicalChannels that may be used in parallel for redundant communication.</p> <p>An ECU is part of a cluster if it contains at least one controller that is connected to at least one channel of the cluster.#</p>			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Subclasses</b>	AbstractCanPhysicalChannel, EthernetPhysicalChannel, FlexrayPhysicalChannel, LinPhysicalChannel, UserDefinedPhysicalChannel			
<b>Aggregated by</b>	CommunicationCluster.physicalChannel			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
comm Connector	Communication Connector	*	ref	<p>Reference to the ECUInstance via a Communication Connector to which the channel is connected.</p> <p>atpVariation: Variable assignment of Physical Channels to different CommunicationConnectors is expressed with this variation.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=commConnector.communicationConnector, commConnector.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>
frameTriggering	FrameTriggering	*	aggr	<p>One frame triggering is defined for exactly one channel. Channels may have assigned an arbitrary number of frame triggerings.</p> <p>atpVariation: If signals/PDUs/frames are variable, the corresponding triggerings shall be variable, too.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=frameTriggering.shortName, frameTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>
iSignal Triggering	ISignalTriggering	*	aggr	<p>One ISignalTriggering is defined for exactly one channel. Channels may have assigned an arbitrary number of ISignaltriggerings.</p> <p>atpVariation: If signals/PDUs/frames are variable, the corresponding triggerings shall be variable, too.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=iSignalTriggering.shortName, iSignalTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>
managed Physical Channel	PhysicalChannel	*	ref	Reference between a channel with role managing channel and a channel with role managed channel.





<i>Class</i>	<i>PhysicalChannel</i> (abstract)			
pduTriggering	<a href="#">PduTriggering</a>	*	aggr	<p>One PduTriggering is defined for exactly one channel. Channels may have assigned an arbitrary number of I-Pdu triggerings.</p> <p>atpVariation: If signals/PDUs/frames are variable, the corresponding triggerings shall be variable, too.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation</p> <p><b>Tags:</b>  atp.Splitkey=pduTriggering.shortName, pduTriggering.variationPoint.shortLabel  vh.latestBindingTime=postBuild</p>

**Table 3.7: PhysicalChannel**

### 3.3 Specialized Attributes of the Topology Entities

According to their characteristic features, different communication standards like FlexRay, CAN, TTCAN, LIN, J1939 and Ethernet have individual attributes that need to be described additionally to the common topology classes. Figure 3.3 shows the specialization of the [CommunicationCluster](#) into the more specific [FlexrayCluster](#), [CanCluster](#), [TtcanCluster](#), [J1939Cluster](#), [LinCluster](#) and [EthernetCluster](#).

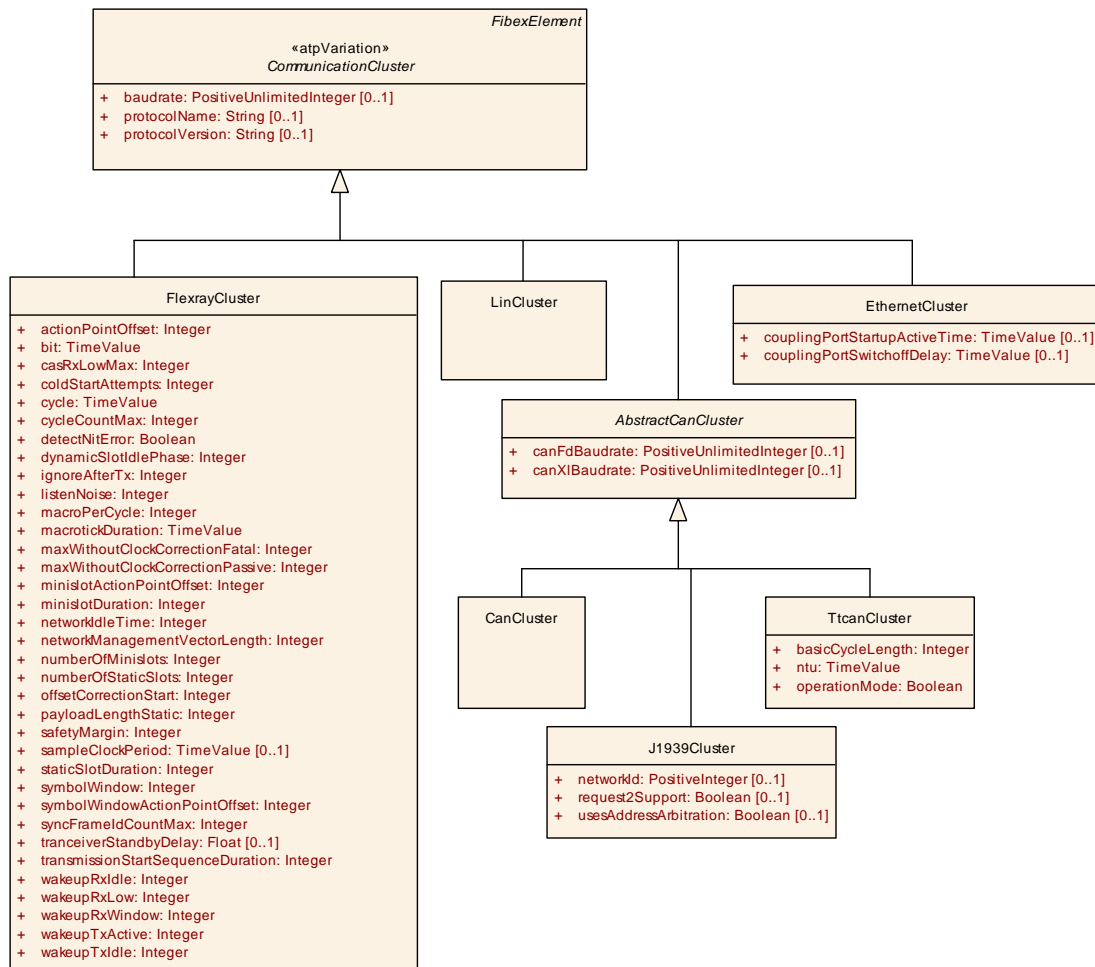


Figure 3.3: Specialized **CommunicationCluster** attributes (TopologyAttributeRefinement)

### 3.3.1 CAN

Modeling of the CAN bus is supported in the System Template by the means of four specialized meta-model classes: `CanCluster`, `CanCommunicationController`, `CanPhysicalChannel`, `CanCommunicationConnector` (Figure 3.4).

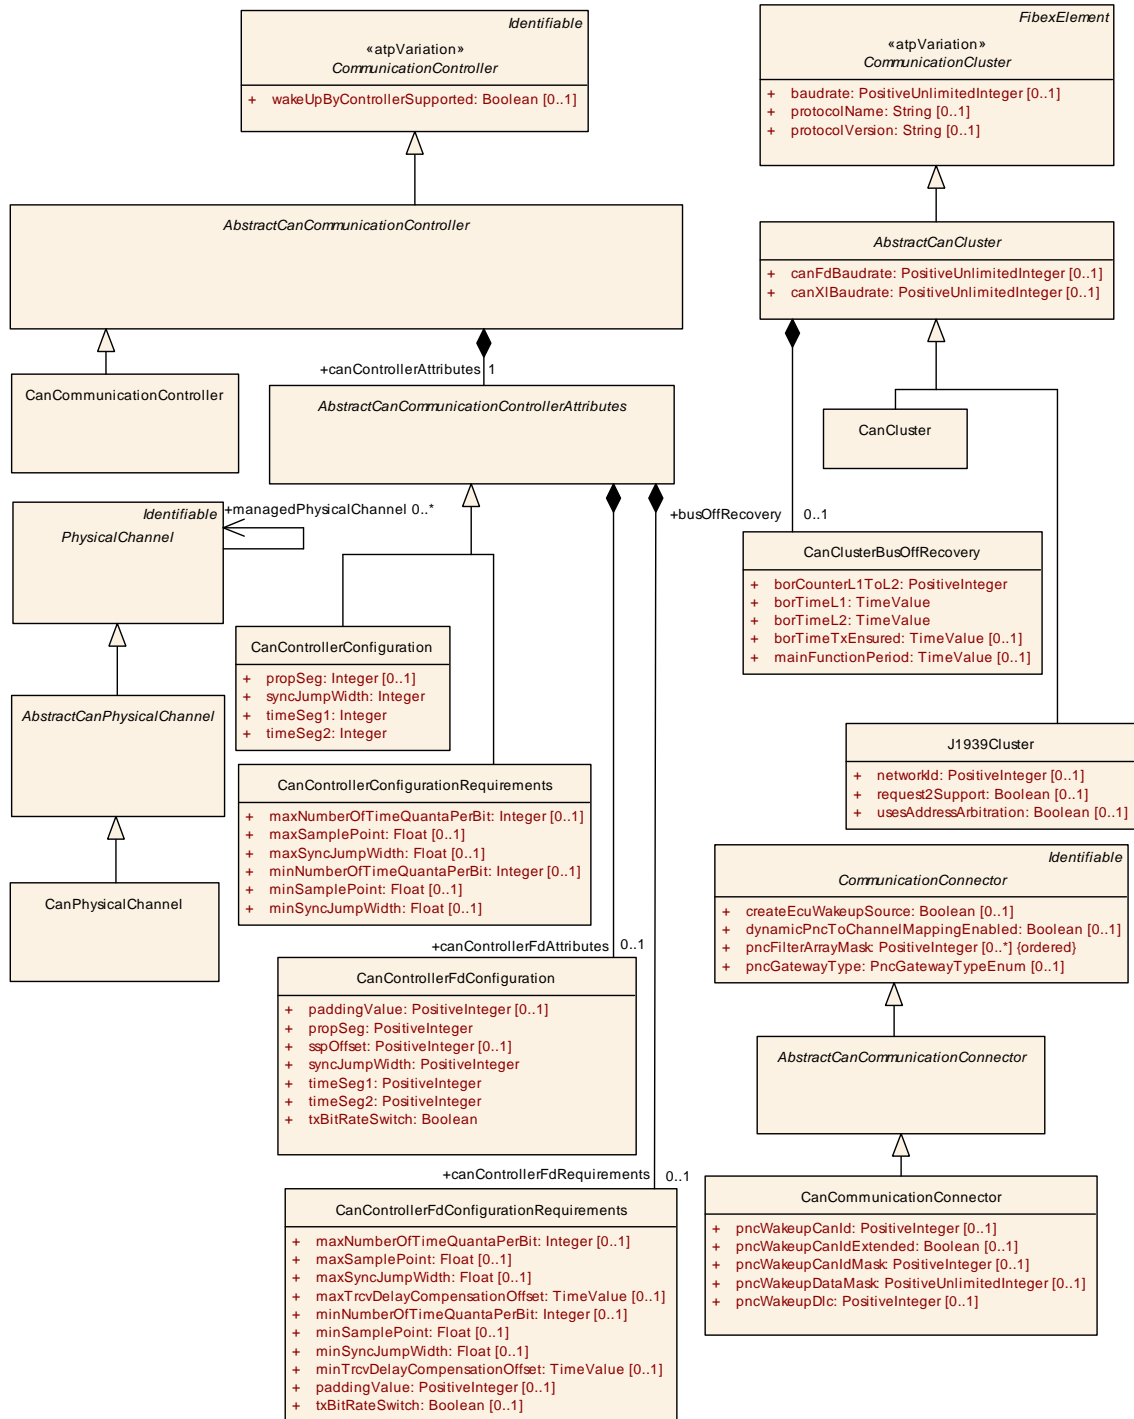


Figure 3.4: CAN bus elements (Fibex4Can\_Topology)

### 3.3.1.1 CAN Cluster

`CanCluster` specifies the existence of a CAN cluster in the system's physical topology. It contains additional CAN-specific cluster-wide attributes. The common CAN and TTCAN attributes are collected in the `AbstractCanCluster` class.

<b>Class</b>	<<atpVariation>> <b>AbstractCanCluster</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	Abstract class that is used to collect the common TTCAN, J1939 and CAN Cluster attributes.			
<b>Base</b>	<i>ARObject</i> , <i>CollectableElement</i> , <i>CommunicationCluster</i> , <i>FibexElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Subclasses</b>	<a href="#">CanCluster</a> , <a href="#">J1939Cluster</a> , <a href="#">TcanCluster</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
busOffRecovery	<a href="#">CanClusterBusOffRecovery</a>	0..1	aggr	CAN bus off monitoring / recovery at system level.
canFdBaudrate	PositiveUnlimitedInteger	0..1	attr	Specifies the data segment baud rate of the controller in bits/s.
canXIBaudrate	PositiveUnlimitedInteger	0..1	attr	Specifies the data segment baud rate of the CAN XL controller in bits/s.

**Table 3.8: AbstractCanCluster**

<b>Class</b>	<<atpVariation>> <b>CanCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	CAN bus specific cluster attributes. <b>Tags:</b> atp.recommendedPackage=CommunicationClusters			
<b>Base</b>	<i>ARObject</i> , <a href="#">AbstractCanCluster</a> , <i>CollectableElement</i> , <i>CommunicationCluster</i> , <i>FibexElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.9: CanCluster**

<b>Class</b>	<b>CanClusterBusOffRecovery</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	This element contains the attributes that are used to configure the CAN bus off monitoring / recovery at system level.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">AbstractCanCluster.busOffRecovery</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
borCounterL1ToL2	PositiveInteger	1	attr	This threshold defines the count of bus-offs until the bus-off recovery switches from level 1 (short recovery time) to level 2 (long recovery time).
borTimeL1	TimeValue	1	attr	This attribute defines the duration of the bus-off recovery time in level 1 (short recovery time) in seconds.
borTimeL2	TimeValue	1	attr	This attribute defines the duration of the bus-off recovery time in level 2 (long recovery time) in seconds.





Class	CanClusterBusOffRecovery			
borTimeTx Ensured	TimeValue	0..1	attr	This attribute defines the duration of the bus-off event check in seconds.
mainFunction Period	TimeValue	0..1	attr	This attribute defines the cycle time of the function CanSM_MainFunction in seconds.

**Table 3.10: CanClusterBusOffRecovery**

### 3.3.1.2 CAN Communication Controller

[CanCommunicationController](#) is a specialization of the abstract [CommunicationController](#) class. It contains the specific CAN controller attributes needed for configuring the CAN stack in an ECU connected to a certain CAN cluster. The common CAN and TTCAN attributes are collected in the [AbstractCanCommunicationController](#) class. It is possible to specify the CAN Controller configuration parameters as exact values or as requirements that have to be respected by the ECU developer. Therefore the two elements [CanControllerConfiguration](#) and [CanControllerConfigurationRequirements](#) were created.

Class	<<atpVariation>> CanCommunicationController			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
Note	CAN bus specific communication port attributes.			
Base	ARObject, <a href="#">AbstractCanCommunicationController</a> , <a href="#">CommunicationController</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
Aggregated by	<a href="#">EcuInstance.commController</a> , <a href="#">MachineDesign.communicationController</a>			
Attribute	Type	Mult.	Kind	Note
-	-	-	-	-

**Table 3.11: CanCommunicationController**

Class	<<atpVariation>> AbstractCanCommunicationController (abstract)			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
Note	Abstract class that is used to collect the common TTCAN and CAN Controller attributes.			
Base	ARObject, <a href="#">CommunicationController</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
Subclasses	<a href="#">CanCommunicationController</a> , <a href="#">TtcanCommunicationController</a>			
Aggregated by	<a href="#">EcuInstance.commController</a> , <a href="#">MachineDesign.communicationController</a>			
Attribute	Type	Mult.	Kind	Note
canController Attributes	<a href="#">AbstractCanCommunicationControllerAttributes</a>	1	aggr	CAN Bit Timing configuration

**Table 3.12: AbstractCanCommunicationController**



<b>Class</b>	<b>AbstractCanCommunicationControllerAttributes</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	For the configuration of the CanController parameters two different approaches can be used: <ul style="list-style-type: none"> <li>1. Providing exact values which are taken by the ECU developer (CanControllerConfiguration).</li> <li>2. Providing ranges of values which are taken as requirements and have to be respected by the ECU developer (CanControllerConfigurationRequirements).</li> </ul>			
<b>Base</b>	ARObject			
<b>Subclasses</b>	CanControllerConfiguration, CanControllerConfigurationRequirements			
<b>Aggregated by</b>	AbstractCanCommunicationController.canControllerAttributes			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
canControllerFdAttributes	CanControllerFdConfiguration	0..1	aggr	Bit timing related configuration of a CAN controller for payload and CRC of a CanFD frame. If this element exists the controller supports CanFD frames and the ECU developer shall take these values for the configuration of the CanFD controller.
canControllerFdRequirements	CanControllerFdConfigurationRequirements	0..1	aggr	Additional CanFD ranges of the bit timing related configuration of a CanFD controller. If this element exists the controller supports CanFD frames and the ECU developer shall take these ranges as requirements for the configuration of the CanFD controller.
canControllerXlAttributes	CanControllerXlConfiguration	0..1	aggr	Bit timing related configuration of a CAN controller for payload and CRC of a CanXL frame. If this element exists the controller supports CanXL frames and the ECU developer shall take these values for the configuration of the CanXL controller.
canControllerXlRequirements	CanControllerXlConfigurationRequirements	0..1	aggr	Additional CanXL ranges of the bit timing related configuration of a CanXL controller. If this element exists the controller supports CanXL frames and the ECU developer shall take these ranges as requirements for the configuration of the CanXL controller.

**Table 3.13: AbstractCanCommunicationControllerAttributes**

<b>Class</b>	<b>CanControllerConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	This element is used for the specification of the exact CAN Bit Timing configuration parameter values.			
<b>Base</b>	ARObject, AbstractCanCommunicationControllerAttributes			
<b>Aggregated by</b>	AbstractCanCommunicationController.canControllerAttributes, CanXIProps.canConfig			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
propSeg	Integer	0..1	attr	Specifies propagation delay in time quantas.
syncJumpWidth	Integer	1	attr	The number of quanta in the Synchronization Jump Width, SJW. The (Re-)Synchronization Jump Width (SJW) defines how far a resynchronization may move the Sample Point inside the limits defined by the Phase Buffer Segments to compensate for edge phase errors.
timeSeg1	Integer	1	attr	Specifies phase segment 1 in time quantas. timeSeg1 = Phase_Seg1
timeSeg2	Integer	1	attr	Specifies phase segment 2 in time quantas. timeSeg2 = Phase_Seg2

**Table 3.14: CanControllerConfiguration**

<b>Class</b>	<b>CanControllerConfigurationRequirements</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	This element allows the specification of ranges for the CAN Bit Timing configuration parameters. These ranges are taken as requirements and have to be respected by the ECU developer.			
<b>Base</b>	ARObject, <a href="#">AbstractCanCommunicationControllerAttributes</a>			
<b>Aggregated by</b>	<a href="#">AbstractCanCommunicationController.canControllerAttributes</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
maxNumberOfTimeQuantaPerBit	Integer	0..1	attr	Maximum number of time quanta in the bit time.
maxSamplePoint	Float	0..1	attr	The max. value of the sample point as a percentage of the total bit time.
maxSyncJumpWidth	Float	0..1	attr	The max. Synchronization Jump Width value as a percentage of the total bit time. The (Re-)Synchronization Jump Width (SJW) defines how far a resynchronization may move the Sample Point inside the limits defined by the Phase Buffer Segments to compensate for edge phase errors.
minNumberOfTimeQuantaPerBit	Integer	0..1	attr	Minimum number of time quanta in the bit time.
minSamplePoint	Float	0..1	attr	The min. value of the sample point as a percentage of the total bit time.
minSyncJumpWidth	Float	0..1	attr	The min. Synchronization Jump Width value as a percentage of the total bit time. The (Re-)Synchronization Jump Width (SJW) defines how far a resynchronization may move the Sample Point inside the limits defined by the Phase Buffer Segments to compensate for edge phase errors.

**Table 3.15: CanControllerConfigurationRequirements**

### 3.3.1.2.1 CAN FD

**[TPS\_SYST\_01154] CAN Controller support of CAN FD frames** [The bit timing configuration of CAN controllers for CAN FD frames is supported by the [CanControllerFdConfiguration](#) element that is aggregated by [AbstractCanCommunicationControllerAttributes](#).] ([RS\\_SYST\\_00048](#))

**[constr\_3095] canControllerFdAttributes and canControllerFdRequirements are mutually exclusive** [The existence of [canControllerFdAttributes](#) and [canControllerFdRequirements](#) is mutually exclusive.] ()

**[constr\_3518] Range of CanControllerFdConfiguration.paddingValue and CanControllerFdConfigurationRequirements.paddingValue** [The value given for [CanControllerFdConfiguration.paddingValue](#) and [CanControllerFdConfigurationRequirements.paddingValue](#) shall be in the range from 0 to 255.] ()

<b>Class</b>	<b>CanControllerFdConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	Bit timing related configuration of a CAN controller for payload and CRC of a CAN FD frame.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">AbstractCanCommunicationControllerAttributes.canControllerFdAttributes</a> , CanXIProps.canFdConfig			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
paddingValue	PositiveInteger	0..1	attr	Specifies the value which is used to pad unused data in CAN FD frames which are bigger than 8 byte if the length of a Pdu which was requested to be sent does not match the allowed DLC values of CAN FD.
propSeg	PositiveInteger	1	attr	Specifies propagation delay in time quantas.
sspOffset	PositiveInteger	0..1	attr	Specifies the Transmitter Delay Compensation Offset in minimum time quanta. Transmitter Delay Compensation Offset is used to adjust the position of the Secondary Sample Point (SSP), relative to the beginning of the received bit. If this parameter is configured, the Transmitter Delay Compensation is done by measurement of the CAN controller. If not specified Transmitter Delay Compensation is disabled.
syncJumpWidth	PositiveInteger	1	attr	Specifies the synchronization jump width for the controller in time quantas.
timeSeg1	PositiveInteger	1	attr	Specifies phase segment 1 in time quantas.
timeSeg2	PositiveInteger	1	attr	Specifies phase segment 2 in time quantas.
txBitRateSwitch	Boolean	1	attr	Specifies if the bit rate switching shall be used for transmissions.  TRUE: CAN FD frames shall be sent with bit rate switching.  FALSE: CAN FD frames shall be sent without bit rate switching.

**Table 3.16: CanControllerFdConfiguration**

<b>Class</b>	<b>CanControllerFdConfigurationRequirements</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	This element allows the specification of ranges for the CanFD bit timing configuration parameters. These ranges are taken as requirements and shall be respected by the ECU developer.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">AbstractCanCommunicationControllerAttributes.canControllerFdRequirements</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
maxNumberOfTimeQuantaPerBit	Integer	0..1	attr	Maximum number of time quanta in the bit time.
maxSamplePoint	Float	0..1	attr	The max. value of the sample point as a percentage of the total bit time.
maxSyncJumpWidth	Float	0..1	attr	The max. Synchronization Jump Width value as a percentage of the total bit time. The (Re-)Synchronization Jump Width (SJW) defines how far a resynchronization may move the Sample Point inside the limits defined by the Phase Buffer Segments to compensate for edge phase errors.
maxTrcvDelayCompensationOffset	TimeValue	0..1	attr	Specifies the maximum Transceiver Delay Compensation Offset in seconds. If not specified Transceiver Delay Compensation is disabled.





Class	CanControllerFdConfigurationRequirements			
minNumberOfTimeQuantaPerBit	Integer	0..1	attr	Minimum number of time quanta in the bit time.
minSamplePoint	Float	0..1	attr	The min. value of the sample point as a percentage of the total bit time.
minSyncJumpWidth	Float	0..1	attr	The min. Synchronization Jump Width value as a percentage of the total bit time. The (Re-)Synchronization Jump Width (SJW) defines how far a resynchronization may move the Sample Point inside the limits defined by the Phase Buffer Segments to compensate for edge phase errors.
minTrcvDelayCompensationOffset	TimeValue	0..1	attr	Specifies the minimum Transceiver Delay Compensation Offset in seconds. If not specified Transceiver Delay Compensation is disabled.
paddingValue	PositiveInteger	0..1	attr	Specifies the value which is used to pad unused data in CAN FD frames which are bigger than 8 byte if the length of a Pdu which was requested to be sent does not match the allowed DLC values of CAN FD.
txBitRateSwitch	Boolean	0..1	attr	Specifies if the bit rate switching shall be used for transmissions.  TRUE: CAN FD frames shall be sent with bit rate switching.  FALSE: CAN FD frames shall be sent without bit rate switching.

**Table 3.17: CanControllerFdConfigurationRequirements**

### 3.3.1.2.2 CAN XL

CAN XL - as continued development of CAN FD - is able to carry large data per frame (up to 2048 bytes payload). The type of payload contained in a CAN XL frame is specified by the “SDU Type” field within the CAN XL frame header.

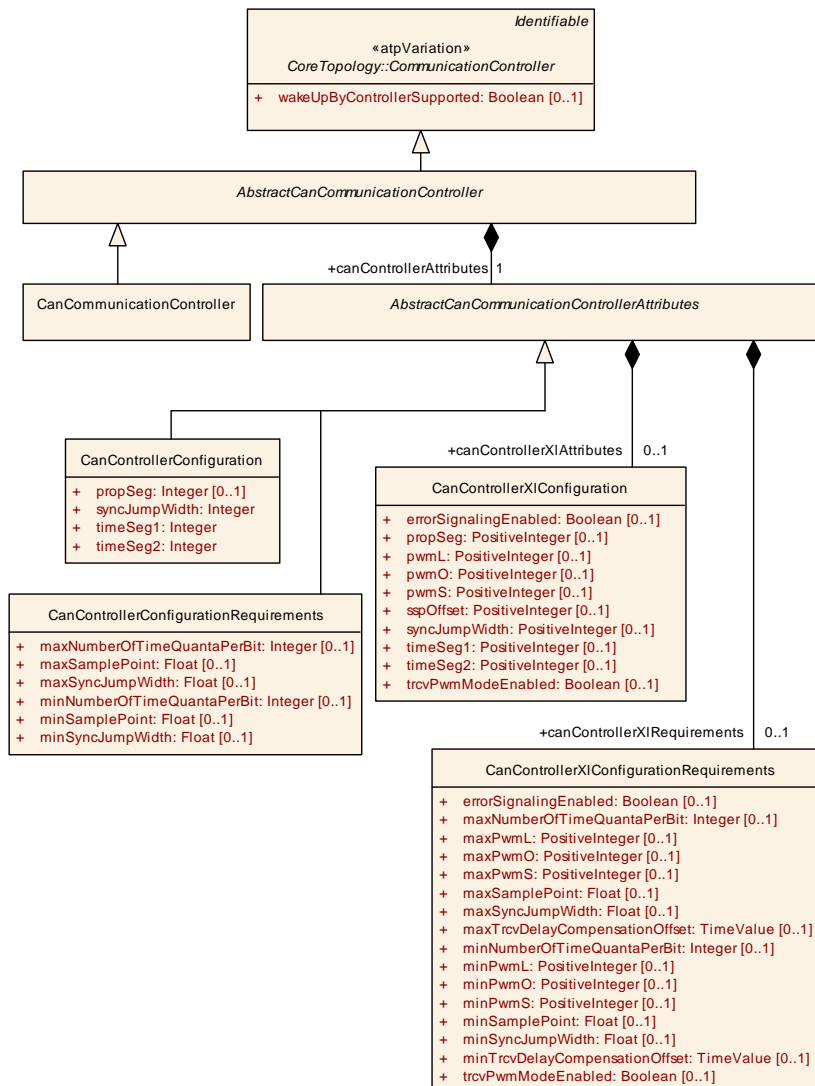


Figure 3.5: CAN XL bus elements

AUTOSAR CP supports the following SDU Type values (as specified by the *CiA* standardization - see Ch. 6.7.3.2) relating to the use cases of CAN XL communication:

1. **SDU Type 0x01h - Content based addressing:** This is equivalent to Classical CAN communication using the CAN XL specific PDU<sub>N</sub> Identifier to denote the content of the CAN frame. For CAN XL, native payload data with up to 2048 bytes is transported in CAN XL frames.
2. **SDU Type 0x02h - Node addressing:** Using the “destination node address” field within the CAN XL frame header, a specific destination node that shall receive the CAN XL frame carrying native payload data is defined.
3. **SDU Type 0x03h - Classical CAN / CAN FD mapped tunneling:** A Classical CAN or CAN FD frame is tunneled inside a CAN XL frame.

4. **SDU Type 0x04h - IEEE 802.3 (Ethernet) tunneling:** An Ethernet frame is tunneled by a CAN XL frame without mapping of addressing information onto the CAN XL frame header.
5. **SDU Type 0x05h - IEEE 802.3 (Ethernet) mapped tunneling:** An Ethernet frame is tunneled by a CAN XL frame with partial mapping of the MAC destination address (4 specific bytes out of 6) and - if defined - the VLAN ID (lower 8 bits out of 12) onto fields of the CAN XL frame header.
6. **SDU Types 0xE0h..0xFEh - Manufacturer specific:** Manufacturer specific CAN XL frames for proprietary use cases.

Please note that for SDU Type 0x05h (Ethernet mapped tunneling), the mapping allows for hardware filtering of a subset of CAN XL frames carrying Ethernet frames which are not relevant for the receiving node. Since the full addressing information (i.e. full MAC address and full VLAN ID) is inside the Ethernet frame, the final reception filtering must be done by software processing of the tunneled Ethernet frame at the receiving node.

For all SDU Types described above, CAN XL requires the definition of `CanControllerXlConfiguration` or `CanControllerXlConfigurationRequirements` which contain physical layer related configuration parameters or requirements, respectively, as well as the definition of `CanXlFrameTriggeringProps` (aggregated by `CanFrameTriggering`) which contains, amongst others, the `sduType` attribute.

For the use cases involving Ethernet tunneling (i.e. SDU Types 0x04h and 0x05h), the `EthernetCommunicationController` is the connecting model element as it establishes - via the reference `EthernetCommunicationController.canXlConfig` - the link between the `CanCommunicationController` (which is CAN XL by aggregating a `CanControllerXlConfiguration`) and the `EthernetCommunicationController` which represents the lower end of the Ethernet and TCP/IP stack to be connected to the “CAN XL tunnel”. Further details on this tunneling configuration are given in Ch. 3.3.6.4.

Please note that the Ethernet and TCP/IP stack “on top” of `EthernetCommunicationController` need to be defined in the usual Ethernet and TCP/IP way (including `EthernetPhysicalChannel` but with the exception of network management - see Ch. 6.9.5.2). By the above mentioned linking to the associated CAN XL based `CanCommunicationController`, the tunneling is realized and the respective Ethernet frames are sent and received through the associated CAN XL physical channel.

**[TPS\_SYST\_03074] CAN Controller support of CAN XL frames** [The specific configuration of CAN controllers for CAN XL frames is supported by the `CanControllerXlConfiguration` and `CanControllerXlConfigurationRequirements` elements that are aggregated by `AbstractCanCommunicationControllerAttributes`.]()

Please note that the CAN XL specific baudrate is configured by the attribute `canXlBaudrate` of the abstract element `AbstractCanCluster`.

**[constr\_3695] canControllerXlAttributes and canControllerXlRequirements are mutually exclusive** [The existence of `canControllerXlAttributes` and `canControllerXlRequirements` is mutually exclusive.]()

**[constr\_3696] Mandatory attributes of CanControllerXlConfiguration** [A `CanControllerConfiguration` configuring a CAN XL controller shall aggregate `CanControllerXlConfiguration` with the following attributes defined at the time when the COM Stack is generated:

- `errorSignalingEnabled`
- `propSeg`
- `syncJumpWidth`
- `timeSeg1`
- `timeSeg2`
- `trcvPwmModeEnabled`

]()

**[constr\_3697] Latest existence time of CanControllerXlConfiguration and CanControllerXlConfigurationRequirements** [At completion time of the System Description, either `CanControllerXlConfiguration` or `CanControllerXlConfigurationRequirements` shall exist within their aggregating class `CanControllerConfiguration` or `CanControllerConfigurationRequirements`, respectively.]()

**[constr\_3698] Value of errorSignalingEnabled** [The attribute `errorSignalingEnabled` shall be set to FALSE if `trcvPwmModeEnabled` is set to TRUE.]()

**[constr\_3699] Existence of pwmL** [The attribute `pwmL` shall be defined if `trcvPwmModeEnabled` is set to TRUE.]()

**[constr\_3700] Existence of pwmO** [The attribute `pwmO` shall be defined if `trcvPwmModeEnabled` is set to TRUE.]()

**[constr\_3701] Existence of pwmS** [The attribute `pwmS` shall be defined if `trcvPwmModeEnabled` is set to TRUE.]()

<b>Class</b>	<b>CanControllerXlConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	This meta-class represents the CAN XL-specific controller attributes.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	AbstractCanCommunicationControllerAttributes.canControllerXlAttributes, CanXIProps.canXIConfig			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>







<b>Class</b>	<b>CanControllerXIConfiguration</b>			
errorSignaling Enabled	Boolean	0..1	attr	Specifies if error signaling shall be enabled. This is not possible when the transceiver is switched to PWM mode (trcvPwmModeEnabled set to TRUE).  TRUE: Error signaling shall be enabled. FALSE: Error signaling shall be disabled.
propSeg	PositiveInteger	0..1	attr	Specifies propagation delay in time quantas.
pwmL	PositiveInteger	0..1	attr	Specifies the PWM long phase length.
pwmO	PositiveInteger	0..1	attr	Specifies the PWM time offset.
pwmS	PositiveInteger	0..1	attr	Specifies the PWM short phase length.
sspOffset	PositiveInteger	0..1	attr	Specifies the Transmitter Delay Compensation Offset in minimum time quanta. Transmitter Delay Compensation Offset is used to adjust the position of the Secondary Sample Point (SSP), relative to the beginning of the received bit. If this parameter is configured, the Transmitter Delay Compensation is done by measurement of the CAN controller. If not specified Transmitter Delay Compensation is disabled.
syncJumpWidth	PositiveInteger	0..1	attr	Specifies the synchronization jump width for the controller in time quantas.
timeSeg1	PositiveInteger	0..1	attr	Specifies phase segment 1 in time quantas.
timeSeg2	PositiveInteger	0..1	attr	Specifies phase segment 2 in time quantas.
trcvPwmMode Enabled	Boolean	0..1	attr	Specifies if the transceiver shall be set to the PWM mode.  TRUE: The transceiver shall be switched to PWM mode. FALSE: The transceiver shall work in classic CAN mode.

**Table 3.18: CanControllerXIConfiguration**

<b>Class</b>	<b>CanControllerXIConfigurationRequirements</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	This element allows the specification of ranges for the CAN XL configuration parameters. These ranges are taken as requirements and have to be respected by the ECU developer.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">AbstractCanCommunicationControllerAttributes.canControllerXIRequirements</a> , CanXIProps.canXIConfig Reqs			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
errorSignaling Enabled	Boolean	0..1	attr	Specifies if error signaling shall be enabled. This is not possible when the transceiver is switched to PWM mode (trcvPwmModeEnabled set to TRUE).  TRUE: Error signaling shall be enabled. FALSE: Error signaling shall be disabled.
maxNumberOf TimeQuantaPer Bit	Integer	0..1	attr	Maximum number of time quanta in the bit time.
maxPwmL	PositiveInteger	0..1	attr	Specifies the maximum PWM long phase length.
maxPwmO	PositiveInteger	0..1	attr	Specifies the minimum PWM time offset.
maxPwmS	PositiveInteger	0..1	attr	Specifies the maximum PWM short phase length.
maxSample Point	Float	0..1	attr	The max. value of the sample point as a percentage of the total bit time.







<b>Class</b>	<b>CanControllerXIConfigurationRequirements</b>			
maxSyncJumpWidth	Float	0..1	attr	The max. Synchronization Jump Width value as a percentage of the total bit time. The (Re-)Synchronization Jump Width (SJW) defines how far a resynchronization may move the Sample Point inside the limits defined by the Phase Buffer Segments to compensate for edge phase errors.
maxTrcvDelayCompensationOffset	TimeValue	0..1	attr	Specifies the maximum Transceiver Delay Compensation Offset in seconds. If not specified Transceiver Delay Compensation is disabled.
minNumberOfTimeQuantaPerBit	Integer	0..1	attr	Minimum number of time quanta in the bit time.
minPwmL	PositiveInteger	0..1	attr	Specifies the minimum PWM long phase length.
minPwmO	PositiveInteger	0..1	attr	Specifies the maximum PWM time offset.
minPwmS	PositiveInteger	0..1	attr	Specifies the minimum PWM short phase length.
minSamplePoint	Float	0..1	attr	The min. value of the sample point as a percentage of the total bit time.
minSyncJumpWidth	Float	0..1	attr	The min. Synchronization Jump Width value as a percentage of the total bit time. The (Re-)Synchronization Jump Width (SJW) defines how far a resynchronization may move the Sample Point inside the limits defined by the Phase Buffer Segments to compensate for edge phase errors.
minTrcvDelayCompensationOffset	TimeValue	0..1	attr	Specifies the minimum Transceiver Delay Compensation Offset in seconds. If not specified Transceiver Delay Compensation is disabled.
trcvPwmModeEnabled	Boolean	0..1	attr	Specifies if the transceiver shall be set to the PWM mode. TRUE: The transceiver shall be switched to PWM mode. FALSE: The transceiver shall work in classic CAN mode.

**Table 3.19: CanControllerXIConfigurationRequirements**

For the use cases of tunneling Ethernet frames through CAN XL, specific CAN XL related configurations need to be defined for [EthernetCommunicationController](#) and [EthernetCommunicationConnector](#). Please refer to Ch. [3.3.6.4](#) and Ch. [3.3.6.5](#) for the respective configuration details.

### 3.3.1.3 CAN Physical Channel

`CanPhysicalChannel` is a specialization of the abstract `PhysicalChannel` class. It contains the specific CAN `PhysicalChannel` attributes. The common CAN and TTCAN attributes are collected in the `AbstractCanPhysicalChannel` class.

<b>Class</b>	<i>AbstractCanPhysicalChannel</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	Abstract class that is used to collect the common TTCAN and CAN PhysicalChannel attributes.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PhysicalChannel</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">CanPhysicalChannel</a> , <a href="#">TtcanPhysicalChannel</a>			
<b>Aggregated by</b>	<a href="#">CommunicationCluster.physicalChannel</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.20: AbstractCanPhysicalChannel**

<b>Class</b>	<b>CanPhysicalChannel</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	CAN bus specific physical channel attributes.			
<b>Base</b>	ARObject, <a href="#">AbstractCanPhysicalChannel</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PhysicalChannel</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CommunicationCluster.physicalChannel</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.21: CanPhysicalChannel**

**[constr\_3003] Number of CAN channels** [CAN clusters shall aggregate exactly one [PhysicalChannel](#).]()

### 3.3.1.4 CAN Communication Connector

`CanCommunicationConnector` is a specialization of the abstract `CommunicationConnector` class. It contains the specific CAN `CommunicationConnector` attributes. The common CAN and TTCAN attributes are collected in the `AbstractCanCommunicationConnector` class.

<b>Class</b>	<i>AbstractCanCommunicationConnector</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	Abstract class that is used to collect the common TTCAN and CAN CommunicationConnector attributes.			
<b>Base</b>	ARObject, <a href="#">CommunicationConnector</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">CanCommunicationConnector</a> , <a href="#">TtcanCommunicationConnector</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.connector</a> , <a href="#">MachineDesign.communicationConnector</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.22: AbstractCanCommunicationConnector**

<b>Class</b>	<b>CanCommunicationConnector</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	CAN bus specific communication connector attributes.			
<b>Base</b>	ARObject, <a href="#">AbstractCanCommunicationConnector</a> , <a href="#">CommunicationConnector</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.connector</a> , MachineDesign.communicationConnector			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
pncWakeupCanId	PositiveInteger	0..1	attr	CAN Identifier used to configure the CAN Transceiver for partial network wakeup.
pncWakeupCanIdExtended	Boolean	0..1	attr	Defines whether pncWakeupCanId and pncWakeupCanIdMask shall be interpreted as extended or standard CAN ID.
pncWakeupCanIdMask	PositiveInteger	0..1	attr	Bit mask for CAN Identifier used to configure the CAN Transceiver for partial network wakeup.
pncWakeupDataMask	PositiveUnlimitedInteger	0..1	attr	Bit mask for CAN Payload used to configure the CAN Transceiver for partial network wakeup.
pncWakeupDlc	PositiveInteger	0..1	attr	Data Length of the remote data frame used to configure the CAN Transceiver for partial network wakeup in Bytes.

**Table 3.23: CanCommunicationConnector**

### 3.3.2 TTCAN

Modeling of TTCAN clusters is supported in the System Template by the means of four specialized meta-model classes: [TtcanCluster](#), [TtcanCommunicationController](#), [TtcanCommunicationConnector](#), [TtcanPhysicalChannel](#) (figure 3.6).

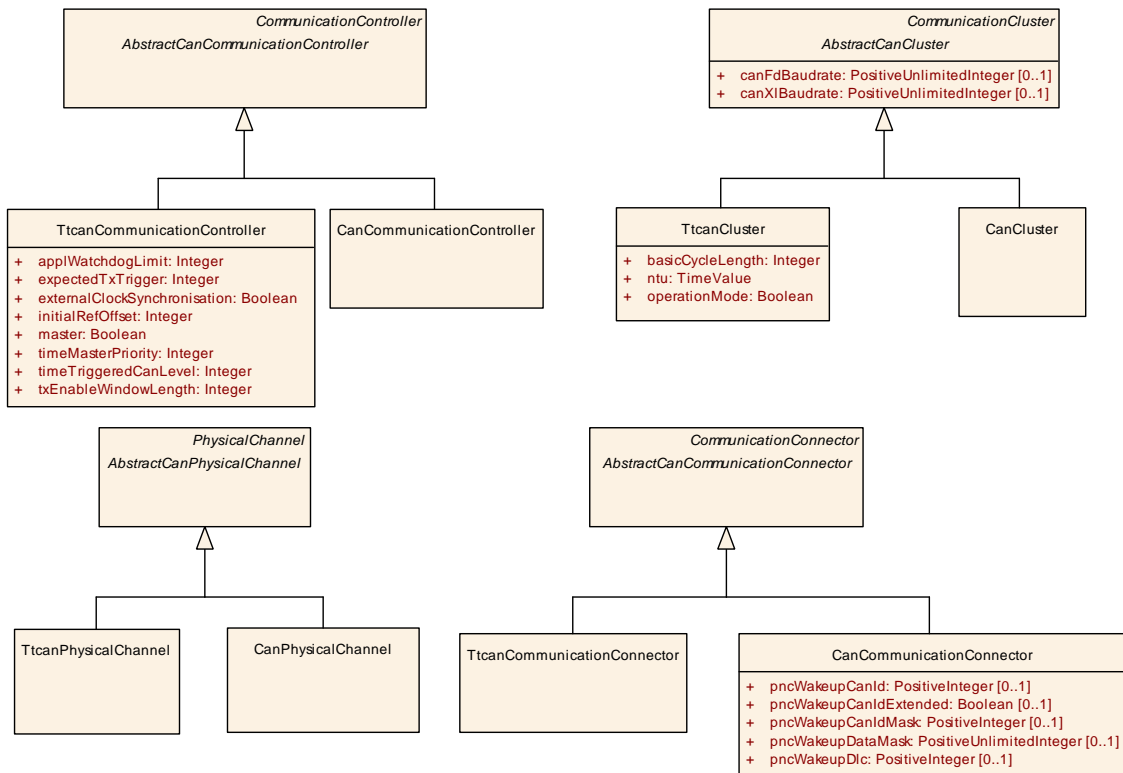


Figure 3.6: TTCAN bus elements (Fibex4Ttcan\_Topology)

### 3.3.2.1 TTCAN Cluster

`TtcanCluster` specifies the existence of a TTCAN cluster in the system's physical topology. Additionally to the common CAN and TTCAN attributes it contains TTCAN-specific cluster-wide attributes.

<b>Class</b>	<<atpVariation>> <b>TtcanCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ttcan::TtcanTopology			
<b>Note</b>	TTCAN bus specific cluster attributes. <b>Tags:</b> atp.recommendedPackage=CommunicationClusters			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AbstractCanCluster</a> , <a href="#">CollectableElement</a> , <a href="#">CommunicationCluster</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
basicCycleLength	Integer	1	attr	Length of a basic-cycle. Unit: NTUs
ntu	TimeValue	1	attr	Unit measuring all times and providing a constant of the whole network. For level 1, this is always the CAN bit time. Unit: seconds.
operationMode	Boolean	1	attr	Possible operation modes True: Time-Triggered False: Event-Synchronised-Time-Triggered

**Table 3.24: TtcanCluster**

### 3.3.2.2 TTCAN Communication Controller

[TtcanCommunicationController](#) is a specialization of the [AbstractCanCommunicationController](#) class. Additionally to the common CAN and TTCAN attributes it contains the specific TTCAN Controller attributes.

<b>Class</b>	<<atpVariation>> <b>TtcanCommunicationController</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ttcan::TtcanTopology			
<b>Note</b>	TTCAN bus specific communication port attributes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AbstractCanCommunicationController</a> , <a href="#">CommunicationController</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.commController</a> , <a href="#">MachineDesign.communicationController</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
applWatchdogLimit	Integer	1	attr	The Appl_Watchdog_Limit shall be an 8-bit value specifying the period for the application watchdog in Appl_Watchdog_Limit times 256 NTUs.
expectedTxTrigger	Integer	1	attr	The Expected_Tx_Trigger shall be an eight (8) bit value which limits the number of messages the FSE may try to transmit in one matrix cycle.
externalClockSynchronisation	Boolean	1	attr	One bit shall be used to configure whether or not external clock synchronisation will be allowed during runtime (only Level 2).
initialRefOffset	Integer	1	attr	The Initial_Ref_Offset shall be an eight (8) bit value for the initialisation of Ref_Trigger_Offset.
master	Boolean	1	attr	One bit shall be used to distinguish between (potential) time masters and time slaves. This can be derived from the frame-triggering's triggers.





<b>Class</b>	<<atpVariation>> TtcanCommunicationController			
timeMasterPriority	Integer	1	attr	The time master priority shall contain a three bit value for the priority of the current time master (the last three bits of the identifier of the reference message). This can be derived from the frame-triggering's triggers.
timeTriggeredCanLevel	Integer	1	attr	One bit shall be used to distinguish between Level 1 and Level 2.
txEnableWindowLength	Integer	1	attr	The length of the Tx_Enable window shall be a four (4) bit value specifying the length of the time period (1-16 nominal CAN bit times) in which a transmission may be started.

**Table 3.25: TtcanCommunicationController**

### 3.3.2.3 TTCAN Physical Channel

[TtcanPhysicalChannel](#) is a specialization of the [AbstractCanPhysicalChannel](#) class. Additionally to the common CAN and TTCAN attributes it contains the specific TTCAN Physical Channel attributes.

<b>Class</b>	TtcanPhysicalChannel			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ttcan::TtcanTopology			
<b>Note</b>	TTCAN bus specific physical channel attributes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AbstractCanPhysicalChannel</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PhysicalChannel</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CommunicationCluster.physicalChannel</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.26: TtcanPhysicalChannel**

### 3.3.2.4 TTCAN Communication Connector

[TtcanCommunicationConnector](#) is a specialization of the [AbstractCanCommunicationConnector](#) class. Additionally to the common CAN and TTCAN attributes it contains the specific TTCAN [CommunicationConnector](#) attributes.

<b>Class</b>	TtcanCommunicationConnector			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ttcan::TtcanTopology			
<b>Note</b>	TTCAN bus specific communication connector attributes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AbstractCanCommunicationConnector</a> , <a href="#">CommunicationConnector</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.connector</a> , <a href="#">MachineDesign.communicationConnector</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.27: TtcanCommunicationConnector**

### 3.3.3 SAE J1939

Modeling of J1939 Communication Clusters is supported in the System Template with the `J1939Cluster` element that is derived from `AbstractCanCluster` (see figure 3.4).

<b>Class</b>	<<atpVariation>> <b>J1939Cluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
<b>Note</b>	J1939 specific cluster attributes. <b>Tags:</b> atp.recommendedPackage=CommunicationClusters			
<b>Base</b>	<i>ARObject</i> , <i>AbstractCanCluster</i> , <i>CollectableElement</i> , <i>CommunicationCluster</i> , <i>FibexElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<i>ARPackageElement</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
networkId	PositiveInteger	0..1	attr	This represents the network ID for the J1939 cluster.
re-request2Support	Boolean	0..1	attr	Enables support for the Request2 PGN (RQST2).
usesAddress Arbitration	Boolean	0..1	attr	Defines whether the nodes attached to this channel use an initial address claim, and whether they react to contending address claims of other nodes.  True: The initial address claim is sent, and the node reacts to address claims of other nodes.  False: The node only sends an address claim upon request, and does not care for contending address claims.

**Table 3.28: J1939Cluster**

To describe the communication on a `J1939Cluster` `CanFrameTriggerings` are used that are aggregated by a `CanPhysicalChannel`.

**[constr\_3050] `J1939Cluster` uses exactly one `CanPhysicalChannel`** [A `J1939Cluster` shall aggregate exactly one `CanPhysicalChannel`.]()

**[constr\_1463] Applicable values for `J1939Cluster.networkId`** [The values of the attribute `J1939Cluster.networkId` shall always be within the interval 1..4.]()

Please note that AUTOSAR supports only the four mentioned bus types. Still, an implementation could e.g. support J1708 [14] by means of a complex driver and would then need to assign the corresponding bus type.

### 3.3.4 FlexRay

Modeling of FlexRay clusters is supported in the System Template by the means of four specialized meta-model classes: `FlexrayCluster`, `FlexrayCommunicationConnector`, `FlexrayPhysicalChannel`, `FlexrayCommunicationController` (Figure 3.7).

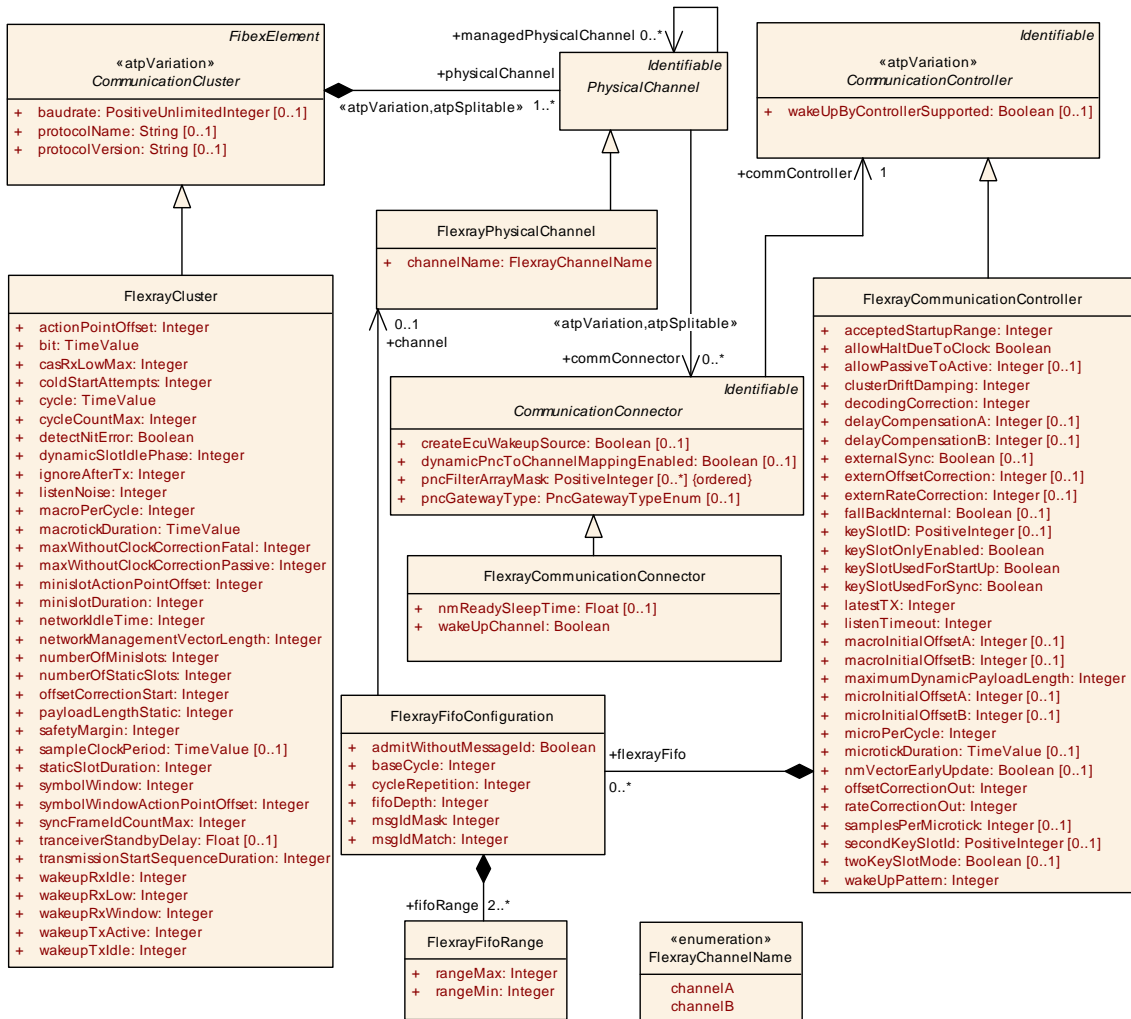


Figure 3.7: FlexRay cluster elements (Fibex4FlexRay\_Topology)

#### 3.3.4.1 FlexRay Cluster

`FlexrayCluster` specifies the existence of a FlexRay cluster in the system’s physical topology. It contains additional FlexRay-specific cluster-wide attributes.



<b>Class</b>	<<atpVariation>> <b>FlexrayCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology			
<b>Note</b>	FlexRay specific attributes to the physicalCluster <b>Tags:</b> atp.recommendedPackage=CommunicationClusters			
<b>Base</b>	ARObject, CollectableElement, CommunicationCluster, FibexElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
actionPoint Offset	Integer	1	attr	The offset of the action point in networks
bit	TimeValue	1	attr	Nominal bit time (= 1 / fx:SPEED). gdBit = cSamplesPer Bit * gdSampleClockPeriod. Unit: seconds (gdBit)
casRxLowMax	Integer	1	attr	Upper limit of the Collision Avoidance Symbol (CAS) acceptance window. Unit:bitDuration
coldStart Attempts	Integer	1	attr	The maximum number of times that a node in this cluster is permitted to attempt to start the cluster by initiating schedule synchronization
cycle	TimeValue	1	attr	Length of the cycle. Unit: seconds
cycleCountMax	Integer	1	attr	Maximum cycle counter value in a given cluster. Remark: Set to 63 for FlexRay Protocol 2.1 Rev. A compliance.
detectNitError	Boolean	1	attr	Indicates whether NIT error status of each cluster shall be detected or not.
dynamicSlotIdle Phase	Integer	1	attr	The duration of the dynamic slot idle phase in minislots.
ignoreAfterTx	Integer	1	attr	Duration for which the bitstrobing is paused after transmission [gdBit].
listenNoise	Integer	1	attr	Upper limit for the start up and wake up listen timeout in the presence of noise. Expressed as a multiple of the cluster constant pdListenTimeout. Unit microticks
macroPerCycle	Integer	1	attr	The number of macroticks in a communication cycle
macrotick Duration	TimeValue	1	attr	Duration of the cluster wide nominal macrotick, expressed in s.
maxWithout ClockCorrection Fatal	Integer	1	attr	Threshold concerning vClockCorrectionFailedCounter. Defines the number of consecutive even/odd Cycle pairs with missing clock correction terms that will cause the protocol to transition from the POC:normal active or POC:normal passive state into the POC:halt state.
maxWithout ClockCorrection Passive	Integer	1	attr	Threshold concerning vClockCorrectionFailedCounter. Defines the number of consecutive even/odd Cycle pairs with missing clock correction terms that will cause the protocol to transition from the POC:normal active state to the POC:normal passive state.
minislotAction PointOffset	Integer	1	attr	The Offset of the action point within a minislot. Unit: macroticks
minislotDuration	Integer	1	attr	The duration of a minislot (dynamic segment). Unit: macroticks.
networkIdle Time	Integer	1	attr	The duration of the network idle time in macroticks
network Management VectorLength	Integer	1	attr	Length of the Network Management vector in a cluster [bytes]
numberOf Minislots	Integer	1	attr	Number of Minislots in the dynamic segment.
numberOfStatic Slots	Integer	1	attr	The number of static slots in the static segment.





<b>Class</b>	<b>&lt;&lt;atpVariation&gt;&gt; FlexrayCluster</b>			
offsetCorrectionStart	Integer	1	attr	Start of the offset correction phase within the Network Idle Time (NIT), expressed as the number of macroticks from the start of cycle. Unit: macroticks
payloadLengthStatic	Integer	1	attr	Globally configured payload length of a static frame. Unit: 16-bit WORDS.
safetyMargin	Integer	1	attr	Additional timespan in macroticks which takes jitter into account to be able to set the JobListPointer to the next possible job which can be executed in case the FlexRay Job List Execution Function has to be resynchronized.
sampleClockPeriod	TimeValue	0..1	attr	Sample clock period. Unit: seconds
staticSlotDuration	Integer	1	attr	The duration of a slot in the static segment. Unit: macroticks
symbolWindow	Integer	1	attr	The duration of the symbol window. Unit: macroticks
symbolWindowActionPointOffset	Integer	1	attr	Number of macroticks the action point offset is from the beginning of the symbol window [Macroticks].
syncFrameIdCountMax	Integer	1	attr	Maximum number of distinct syncframe identifiers present in a given cluster. This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gSyncNodeMax.
tranceiverStandbyDelay	Float	0..1	attr	The duration of timer t_TrcvStdbDelay in seconds. The granularity of this parameter shall be restricted to full Flex Ray cycles (cycle). The tranceiver status setting to STANDBY shall be delayed by this value.  Not specifying a value or a value of 0 shall imply that the timer is not used.
transmissionStartSequenceDuration	Integer	1	attr	Number of bits in the Transmission Start Sequence [gd Bits].
wakeupRxIdle	Integer	1	attr	Number of bits used by the node to test the duration of the 'idle' or HIGH phase of a received wakeup. Unit: bitDuration  Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxIdle.
wakeupRxLow	Integer	1	attr	Number of bits used by the node to test the duration of the LOW phase of a received wakeup. Unit: bitDuration  Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxLow.
wakeupRxWindow	Integer	1	attr	The size of the window used to detect wakeups [gdBit].  Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxWindow.
wakeupTxActive	Integer	1	attr	Number of bits used by the node to transmit the LOW phase of a wakeup symbol and the HIGH and LOW phases of a WUDOP. Unit: bitDuration
wakeupTxIdle	Integer	1	attr	Number of bits used by the node to transmit the 'idle' part of a wakeup symbol. Unit: gDbit

**Table 3.29: FlexrayCluster**

### 3.3.4.2 FlexRay Communication Controller

`FlexrayCommunicationController` is a specialization of the `CommunicationController` class. It contains the specific FlexRay controller attributes needed for configuring the FlexRay stack in an ECU connected to a certain FlexRay cluster.

<b>Class</b>	<<atpVariation>> <b>FlexrayCommunicationController</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology			
<b>Note</b>	FlexRay bus specific communication port attributes.			
<b>Base</b>	<code>ARObject</code> , <code>CommunicationController</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
<b>Aggregated by</b>	<code>EcuInstance.commController</code> , <code>MachineDesign.communicationController</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
acceptedStartupRange	Integer	1	attr	Expanded range of measured clock deviation allowed for startup frames during integration. Unit: microtick
allowHaltDueToClock	Boolean	1	attr	Boolean flag that controls the transition to the POC:halt state due to a clock synchronization errors. If set to true, the Communication Controller is allowed to transition to POC:halt. If set to false, the Communication Controller will not transition to the POC:halt state but will enter or remain in the normal POC (passive State).
allowPassiveToActive	Integer	0..1	attr	Number of consecutive even/odd cycle pairs that shall have valid clock correction terms before the Communication Controller will be allowed to transition from the POC:normal passive state to POC:normal active state. If set to 0, the Communication Controller is not allowed to transition from POC:norm
clusterDriftDamping	Integer	1	attr	The cluster drift damping factor used in clock synchronization rate correction in microticks
decodingCorrection	Integer	1	attr	Value used by the receiver to calculate the difference between primary time reference point and secondary time reference point. Unit: Microticks (pDecodingCorrection)
delayCompensationA	Integer	0..1	attr	Value used to compensate for reception delays on channel A Unit: Microticks. This optional parameter shall only be filled out if channel A is used.
delayCompensationB	Integer	0..1	attr	Value used to compensate for reception delays on channel B. Unit: Microticks. This optional parameter shall only be filled out if channel B is used.
externalSync	Boolean	0..1	attr	Flag indicating whether the node is externally synchronized (operating as Time Gateway Sink in an TT-E Time Triggered External Sync cluster) or locally synchronized.
externOffsetCorrection	Integer	0..1	attr	Fixed amount added or subtracted to the calculated offset correction term to facilitate external offset correction, expressed in node-local microticks.
externRateCorrection	Integer	0..1	attr	Fixed amount added or subtracted to the calculated rate correction term to facilitate external rate correction, expressed in node-local microticks.
fallBackInternal	Boolean	0..1	attr	Flag indicating whether a Time Gateway Sink node will switch to local clock operation when synchronization with the Time Gateway Source node is lost (pFallBackInternal = true) or will instead go to POC:ready (pFallBackInternal = false).
flexrayFifo	<a href="#">FlexrayFifo Configuration</a>	*	aggr	One First In First Out (FIFO) queued receive structure, defining the admittance criteria to the FIFO.





Class	<<atpVariation>> FlexrayCommunicationController			
keySlotID	PositiveInteger	0..1	attr	ID of the slot used to transmit the startup frame, sync frame, or designated single slot frame. If the attributes keySlotUsedForStartUp, keySlotUsedForSync, or keySlotOnlyEnabled are set to true the key slot value is mandatory.
keySlotOnlyEnabled	Boolean	1	attr	Flag indicating whether or not the node shall enter key slot only mode following startup.
keySlotUsedForStartUp	Boolean	1	attr	Flag indicating whether the Key Slot is used to transmit a startup frame.
keySlotUsedForSync	Boolean	1	attr	Flag indicating whether the Key Slot is used to transmit a sync frame.
latestTX	Integer	1	attr	The number of the last minislot in which a transmission can start in the dynamic segment for the respective node
listenTimeout	Integer	1	attr	Value for the startup listen timeout and wakeup listen timeout. Although this is a node local parameter, the real time equivalent of this value should be the same for all nodes in the cluster. Unit: Microticks
macroInitialOffsetA	Integer	0..1	attr	Integer number of macroticks between the static slot boundary and the closest macrotick boundary of the secondary time reference point based on the nominal macrotick duration. (pMacroInitialOffset). This optional parameter shall only be filled out if channel A is used.
macroInitialOffsetB	Integer	0..1	attr	Integer number of macroticks between the static slot boundary and the closest macrotick boundary of the secondary time reference point based on the nominal macrotick duration. (pMacroInitialOffset). This optional parameter shall only be filled out if channel B is used.
maximumDynamicPayloadLength	Integer	1	attr	Maximum payload length for the dynamic channel of a frame in 16 bit WORDS.
microInitialOffsetA	Integer	0..1	attr	Number of microticks between the closest macrotick boundary described by gMacroInitialOffset and the secondary time reference point. The parameter depends on pDelayCompensationA and therefore it has to be set independently for each channel. This optional parameter shall only be filled out if channel A is used.
microInitialOffsetB	Integer	0..1	attr	Number of microticks between the closest macrotick boundary described by gMacroInitialOffset and the secondary time reference point. The parameter depends on pDelayCompensationB and therefore it has to be set independently for each channel. This optional parameter shall only be filled out if channel B is used.
microPerCycle	Integer	1	attr	The nominal number of microticks in a communication cycle
microtickDuration	TimeValue	0..1	attr	Duration of a microtick. This attribute can be derived from samplePerMicrotick and gdSampleClockPeriod. Unit: seconds
nmVectorEarlyUpdate	Boolean	0..1	attr	Flag indicating when the update of the Network Management Vector in the CHI shall take place. If set to false, the update shall take place after the NIT. If set to true, the update shall take place after the end of the static segment.
offsetCorrectionOut	Integer	1	attr	Magnitude of the maximum permissible offset correction value. Unit:microtick (pOffsetCorrectionOut)





<b>Class</b>		<<atpVariation>> <b>FlexrayCommunicationController</b>			
rateCorrectionOut	Integer	1	attr	Magnitude of the maximum permissible rate correction value and the maximum drift offset between two nodes operating with unsynchronized clocks for one communication cycle. Unit:Microticks (pRateCorrectionOut)  Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter pdMaxDrift.	
samplesPerMicrotick	Integer	0..1	attr	Number of samples per microtick	
secondKeySlotId	PositiveInteger	0..1	attr	ID of the second Key slot, in which a second startup frame shall be sent in TT-L Time Triggered Local Master Sync or TT-E Time Triggered External Sync mode. If this parameter is set to zero the node does not have a second key slot.	
twoKeySlotMode	Boolean	0..1	attr	Flag indicating whether node operates as a startup node in a TT-E Time Triggered External Sync or TT-L Time Triggered Local Master Sync cluster.	
wakeUpPattern	Integer	1	attr	Number of repetitions of the Tx-wakeup symbol to be sent during the CC_WakeupSend state of this Node in the cluster	

**Table 3.30: FlexrayCommunicationController**

<b>Class</b>	<b>FlexrayFifoConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology			
<b>Note</b>	One First In First Out (FIFO) queued receive structure, defining the admittance criteria to the FIFO, and mandating the ability to admit messages into the FIFO based on Message Id filtering criteria.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">FlexrayCommunicationController.flexrayFifo</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
admitWithoutMessageld	Boolean	1	attr	Boolean configuration which determines whether or not frames received in the dynamic segment that don't contain a message ID will be admitted into the FIFO.
baseCycle	Integer	1	attr	FIFO cycle counter acceptance criteria.
channel	<a href="#">FlexrayPhysicalChannel</a>	0..1	ref	Fifo channel admittance criteria.
cycleRepetition	Integer	1	attr	FIFO cycle counter acceptance criteria.
fifoDepth	Integer	1	attr	FrFifoDepth configures the maximum number of rx-frames which can be contained in the FIFO.
fifoRange	<a href="#">FlexrayFifoRange</a>	2..*	aggr	FIFO Frame Id range acceptance criteria.
msgIdMask	Integer	1	attr	FIFO message identifier acceptance criteria (Mask filter).
msgIdMatch	Integer	1	attr	FIFO message identifier acceptance criteria (Match filter).

**Table 3.31: FlexrayFifoConfiguration**

<b>Class</b>	<b>FlexrayFifoRange</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology			
<b>Note</b>	FIFO Frame Id range acceptance criteria.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">FlexrayFifoConfiguration.fifoRange</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
rangeMax	Integer	1	attr	Max Range.
rangeMin	Integer	1	attr	Min Range.

**Table 3.32: FlexrayFifoRange**

### 3.3.4.3 FlexRay Communication Connector

`FlexrayCommunicationConnector` adds the FlexRay specific attributes to the `CommunicationConnector`.

<b>Class</b>	<b>FlexrayCommunicationConnector</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology			
<b>Note</b>	FlexRay specific attributes to the CommunicationConnector			
<b>Base</b>	<i>ARObject</i> , <i>CommunicationConnector</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<i>EcuInstance.connector</i> , <i>MachineDesign.communicationConnector</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nmReadySleepTime	Float	0..1	attr	The value of this attribute influences the shutdown behavior of the FlexRay NM. FrNm switches to bus sleep mode nmReadySleepTime seconds after the completion of the last repetition cycle containing a NM vote.
wakeUpChannel	Boolean	1	attr	Referenced channel used by the node to send a wakeup pattern. (pWakeupChannel)

**Table 3.33: FlexrayCommunicationConnector**

[constr\_3508] Value of `nmReadySleepTime` [The `nmReadySleepTime` value shall be a multiple of `cycle * nmRepetitionCycle`.]()

### 3.3.4.4 FlexRay Physical Channel

`FlexrayPhysicalChannel` adds the FlexRay specific attributes to the `PhysicalChannel`.

<b>Class</b>	<b>FlexrayPhysicalChannel</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology			
<b>Note</b>	FlexRay specific attributes to the physicalChannel			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PhysicalChannel</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<i>CommunicationCluster.physicalChannel</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
channelName	<code>FlexrayChannelName</code>	1	attr	Name of the channel (Channel A or Channel B).

**Table 3.34: FlexrayPhysicalChannel**

<b>Enumeration</b>	<b>FlexrayChannelName</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology			
<b>Note</b>	Name of the channel.			
<b>Aggregated by</b>	<code>FlexrayPhysicalChannel.channelName</code>			
<b>Literal</b>	<b>Description</b>			
channelA	Channel A <b>Tags:</b> atp.EnumerationLiteralIndex=0			
channelB	Channel B <b>Tags:</b> atp.EnumerationLiteralIndex=1			

**Table 3.35: FlexrayChannelName**

**[constr\_3018] Number of FlexRay channels** [A `FlexrayCluster` shall use either one `FlexrayPhysicalChannel` with `channelName` set to either `channelA` or `channelB` or else two `FlexrayPhysicalChannels` with one `channelName` `channelA` and one `channelName` `channelB`.]()




### 3.3.5 LIN

A [LinCluster](#) consists of exactly one master node connected to several slave nodes. The master is responsible for providing the frame headers on the bus according to a predefined schedule, whereas the slaves send or receive the actual frame information ([10]).

**[TPS\_SYST\_01012] Different Properties of [LinMaster](#) and [LinSlave](#)** [In the System Template the different properties of master and slave nodes are handled by deriving the LIN-specific subclasses [LinMaster](#) and [LinSlave](#) as specializations of [LinCommunicationController](#).] ([RS\\_SYST\\_00022](#))

AUTOSAR supports the stand-alone definition of both LIN masters and LIN slaves.

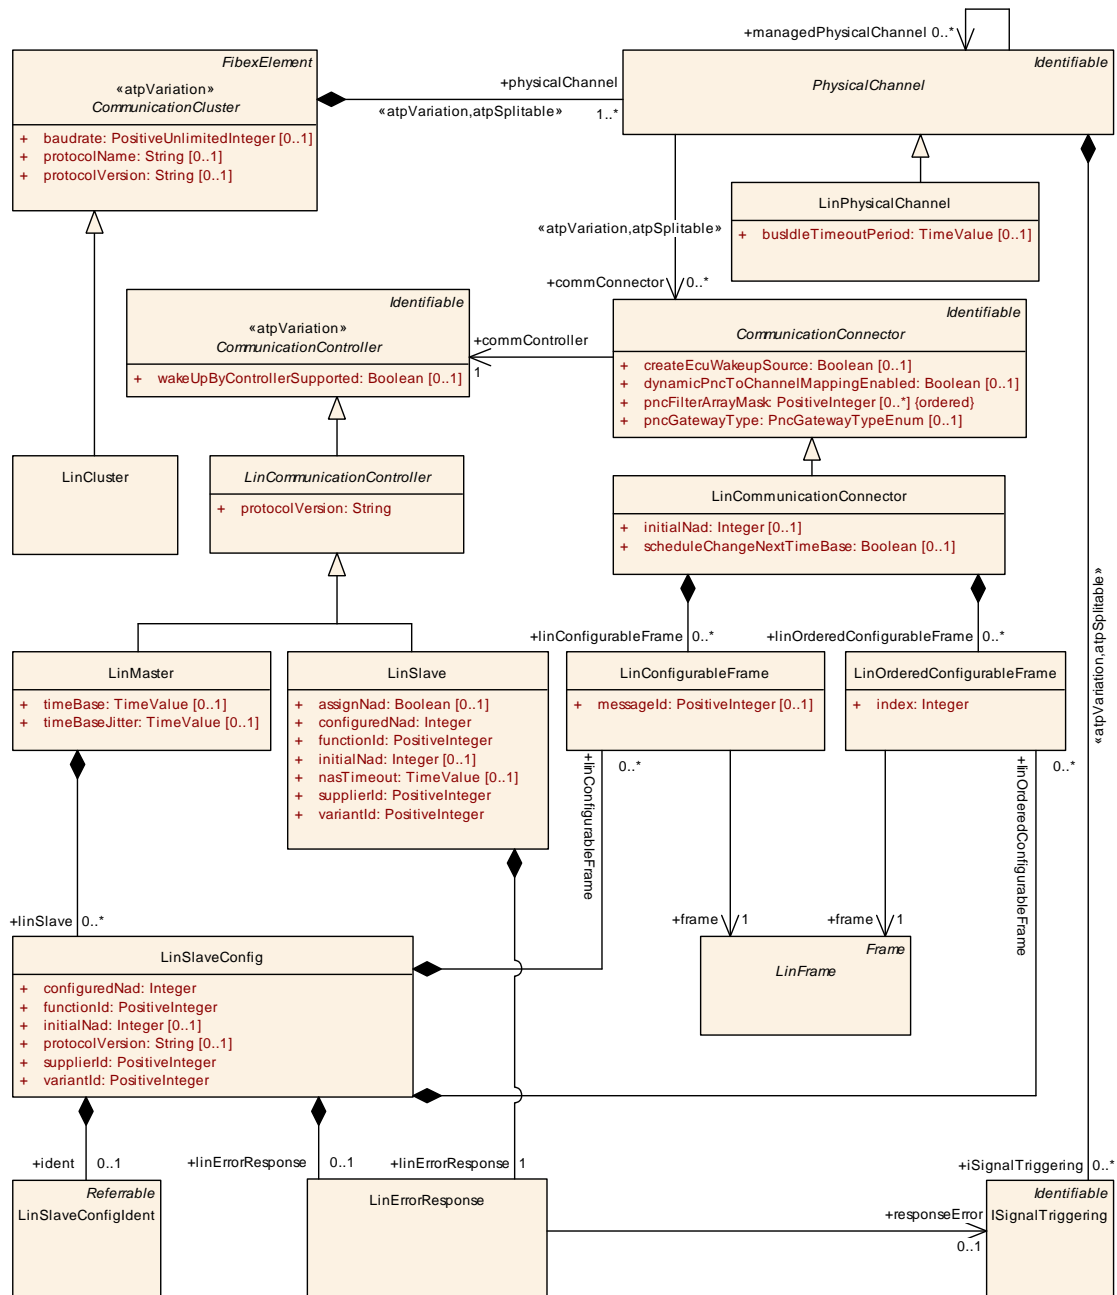

**Figure 3.8: Specialized LinCommunicationController attributes (Fibex4Lin\_Topology)**

**[constr\_5252] LinSlaveConfig.protocolVersion shall exist** [The attribute `LinSlaveConfig.protocolVersion` shall be defined at the time the Base EcuC is created.] ()

Note that the AUTOSAR BSW only supports LIN masters. LIN slaves are seen as non AUTOSAR ECUs. They can be described in the System Template in order to configure the LIN Interface for the master correctly, but AUTOSAR does not support the development of LIN slaves as of AUTOSAR release 4.0 ([15], [16]).

### 3.3.5.1 LIN Cluster

`LinCluster` specifies the existence of a LIN cluster in the system's physical topology.

<b>Class</b>	<<atpVariation>> <b>LinCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	LIN specific attributes <b>Tags:</b> atp.recommendedPackage=CommunicationClusters			
<b>Base</b>	<i>ARObject</i> , <i>CollectableElement</i> , <i>CommunicationCluster</i> , <i>FibexElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 3.36: LinCluster**

### 3.3.5.2 LIN Communication Controller

`LinCommunicationController` is a specialization of the `CommunicationController` class. It is an abstract class, to be further specialized by `LinMaster` and `LinSlave`.

<b>Class</b>	<<atpVariation>> <b>LinCommunicationController</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	LIN bus specific communication controller attributes.			
<b>Base</b>	<i>ARObject</i> , <i>CommunicationController</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Subclasses</b>	<i>LinMaster</i> , <i>LinSlave</i>			
<b>Aggregated by</b>	<i>EcuInstance.commController</i> , <i>MachineDesign.communicationController</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
protocolVersion	String	1	attr	Version specifier for a communication protocol.

**Table 3.37: LinCommunicationController**

[TPS\_SYST\_02257] **Standardized values of `LinCommunicationController.protocolVersion` and `LinSlaveConfig.protocolVersion`** [The following values of attributes `LinCommunicationController.protocolVersion` and `LinSlaveConfig.protocolVersion` are standardized by AUTOSAR:

- LIN13
- LIN20
- LIN21
- LIN22
- ISO17987

] ([RS\\_SYST\\_00022](#))

### 3.3.5.3 LIN Master

[LinMaster](#) describes the existence of a LIN master task in a LIN topology node. As such it contains the attributes specific to a LIN master task.

<b>Class</b>	<<atpVariation>> <b>LinMaster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	Describing the properties of the referring ecu as a LIN master.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CommunicationController</a> , <a href="#">Identifiable</a> , <a href="#">LinCommunicationController</a> , <a href="#">Multilanguage</a> , <a href="#">Referrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.commController</a> , <a href="#">MachineDesign.communicationController</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
linSlave	<a href="#">LinSlaveConfig</a>	*	aggr	LinSlaves that are handled by the LinMaster.
timeBase	TimeValue	0..1	attr	Time base is mandatory for the master. It is not used for slaves.  LIN 2.0 Spec states: "The time_base value specifies the used time base in the master node to generate the maximum allowed frame transfer time."  The time base shall be specified AUTOSAR conform in seconds.
timeBaseJitter	TimeValue	0..1	attr	The attribute timeBaseJitter is a mandatory attribute for the master and not used for slaves.  LIN 2.0 Spec states: "The jitter value specifies the differences between the maximum and minimum delay from time base start point to the frame header sending start point (falling edge of BREAK signal)."  The jitter shall be specified AUTOSAR conform in seconds.

**Table 3.38: LinMaster**

<b>Class</b>	<b>LinSlaveConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	Node attributes of LIN slaves that are handled by the LinMaster.  In the System Description LIN slaves may be described in the context of the Lin Master.  In an ECU Extract of the LinMaster the LinSlave Ecus shall not be available.  The information that is described here is necessary in the ECU Extract for the configuration of the Lin Master.  The values of attributes of LinSlaveConfig and the corresponding LinSlave shall be identical (if both are defined in a System Description).			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">LinMaster.linSlave</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
configuredNad	Integer	1	attr	To distinguish LIN slaves that are used twice or more within the same cluster.
functionId	PositiveInteger	1	attr	LIN function ID.
ident	<a href="#">LinSlaveConfigIdent</a>	0..1	aggr	This adds the ability to become referrable to LinSlave Config.
initialNad	Integer	0..1	attr	Initial NAD of the LIN slave.
linConfigurable Frame	<a href="#">LinConfigurableFrame</a>	*	aggr	List of all frames that are processed by the slave node





Class	LinSlaveConfig			
linErrorResponse	<a href="#">LinErrorResponse</a>	0..1	aggr	Each slave node shall publish one response error in one of its transmitted unconditional frames.
linOrderedConfigurableFrame	<a href="#">LinOrderedConfigurableFrame</a>	*	aggr	List of all frames (unconditional frames, event-triggered frames and sporadic frames) processed by the slave node. This element is necessary for the LIN 2.1 Assign-Frame-PID-Range command.
protocolVersion	<a href="#">String</a>	0..1	attr	Version specifier for a communication protocol. Protocol version of the LinMaster and the LinSlaves may be different.
supplierId	PositiveInteger	1	attr	LIN Supplier ID.
variantId	PositiveInteger	1	attr	Specifies the Variant ID.

**Table 3.39: LinSlaveConfig**

Class	LinSlaveConfigIdent			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
Note	This meta-class is created to add the ability to become the target of a reference to the non-Referrable LinSlaveConfig.			
Base	<a href="#">ARObject</a> , <a href="#">Referrable</a>			
Aggregated by	<a href="#">LinSlaveConfig.ident</a>			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

**Table 3.40: LinSlaveConfigIdent**

**[constr\_3219] The mutual existence of LinSlaves in the LinMaster EcuExtract** [[LinSlaves](#) shall not be part of the EcuExtract of the corresponding [LinMaster](#).]()

**[constr\_1655] The mutual existence of LinMasters in the LinSlave EcuExtract** [A [LinMaster](#) shall not be part of the EcuExtract of a corresponding [LinSlave](#).]()

**[TPS\_SYST\_02101] Usage of LinSlaveConfig in Ecu Extract** [In order to configure [LinMaster](#) in a [System](#) with category ECU\_EXTRACT the [LinSlaveConfig](#) aggregated by the [LinMaster](#) shall be used.] ([RS\\_SYST\\_00022](#))

Please note that, in concordance with [\[TPS\\_SYST\\_02101\]](#), even if the [LinSlave](#) can be modeled independently of the [LinMaster](#) it still makes sense that the configuration of the [LinMaster](#) **positively contains the aggregation of the LinSlave-Config** in the role [linSlave](#).

In other words, the configuration of a [LinMaster](#) is **not affected** by the question of whether or not the [LinSlave](#) is explicitly modeled.

This statement is valid for both the existence of the [LinMaster](#) in a [System](#) of category SYSTEM\_DESCRIPTION or in a [System](#) of category ECU\_EXTRACT.

The actual correspondence between a Lin slave described by means of the [LinSlaveConfig](#) and the actual model of the [LinSlave](#) shall be determined by

identifying pairs of `LinSlaveConfig` and `LinSlave` with an identical set of the attributes that are equally named in both meta-classes. This rule does not apply for the `shortName`.

Another relevant condition for finding pairs of corresponding `LinSlaveConfig` and `LinSlave` is obviously that the `LinMaster` that aggregates the `LinSlaveConfig` shall be connected to the same `LinCluster` to which the corresponding `LinSlave` is connected.

Of course, this condition can only be checked in the context of a `System` of category `SYSTEM_DESCRIPTION` or perhaps `SYSTEM_EXTRACT`.

### 3.3.5.4 LIN Slave

AUTOSAR supports the definition of a stand-alone LIN slave<sup>1</sup>. In other words, it is possible to define an ECU Extract that contains the modeling of a LIN slave independently of the modeling of the LIN master.

That said, the ability to define properties of the LIN slave in the context of the LIN master in the form of `LinMaster.linSlave` still exists and can be used where applicable.

**[TPS\_SYST\_05018] Semantics of meta-class `LinSlave`** [Meta-class `LinSlave` describes the existence of a LIN slave task in a LIN topology node. It describes the attributes of a single LIN slave node.] (*RS\_SYST\_00022*)

**[TPS\_SYST\_05019] Semantics of `LinErrorResponse.responseError`** [Each Lin slave has the ability to set an error bit in the response part of one specific `LinUnconditionalFrame` in the event of errors occurring on frame level. The error bit is modeled by means of a reference to an `ISignalTriggering` in the role `LinErrorResponse.responseError`.] (*RS\_SYST\_00022*)

Please note that because the response error bit applies for frame errors the responsibility for setting the response error bit lies exclusively at the `LinIf`.

In the event of such an error, the `LinIf` on the Lin slave Ecu calls `Com_SendSignal()` to set the value of the response error bit if applicable<sup>2</sup> and thus the system model needs to foresee the existence of an `ISignalTriggering` for this purpose.

*Aside:* on the Lin master, typically a piece of application software picks up the received error bit and uses it to e.g. increment a counter for debouncing purposes. If the counter exceeds a certain value in e.g. a given time interval the Lin master has to assume that a serious problem exists in the communication with this specific slave and react accordingly.

<sup>1</sup>In former versions of this specification document the properties of a LIN slave could only be defined in the context of the corresponding LIN master

<sup>2</sup>In principle, the `LinIf` on the Lin slave Ecu could directly patch the value of the response error bit into a Tx Pdu before sending but in this case the `LinIf` would have to pick the correct Pdu and patch it accordingly. In other words, the `LinIf` would replicate a certain amount of Com functionality. the usage of an `ISignalTriggering` significantly simplifies the implementation of the `LinIf`.

In terms of modeling, this means that if formally modeled application software on the Lin master exists that processes the error response bit (the receiving side of the error response bit) then a [DataMapping](#) to a [SystemSignal](#) that carries the response error bit needs to be defined.

It is important to understand that application software on a Lin slave positively has no business of setting the value of the response error bit. In other words: on the sending side (i.e. the Lin slave), the application software is not affected and therefore there shall not be a [DataMapping](#) on the sending side. This relation motivates the existence of [\[constr\\_1656\]](#).

**[constr\_1656] No application-level write access to [LinErrorResponse.responseError](#) on Lin slave** [The [SystemSignal](#) referenced in the role [systemSignal](#) by the [ISignal](#) referenced by the [ISignalTriggering](#) that in turn is referenced in the role [LinErrorResponse.responseError](#) shall not be referenced by a [DataMapping](#) that allows for writing to the [SystemSignal](#).]()

<b>Class</b>	<<atpVariation>> <b>LinSlave</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	Describing the properties of the referring ecu as a LIN slave.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CommunicationController</a> , <a href="#">Identifiable</a> , <a href="#">LinCommunicationController</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.commController</a> , <a href="#">MachineDesign.communicationController</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
assignNad	Boolean	0..1	attr	This attribute has the ability to control whether the node configuration command 'Assign NAD' is supported.
configuredNad	Integer	1	attr	To distinguish LIN slaves that are used twice or more within the same cluster.
functionId	PositiveInteger	1	attr	LIN function ID
initialNad	Integer	0..1	attr	This attribute represents the initial NAD.
linError Response	<a href="#">LinErrorResponse</a>	1	aggr	Each slave node shall publish one response error in one of its transmitted unconditional frames.
nasTimeout	TimeValue	0..1	attr	Value of the N_AS timeout. Unit: seconds.
supplierId	PositiveInteger	1	attr	LIN Supplier ID
variantId	PositiveInteger	1	attr	Specifies the Variant ID

**Table 3.41: LinSlave**

<b>Class</b>	<b>LinErrorResponse</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Each slave node shall publish a one bit signal, named <code>response_error</code> , to the master node in one of its transmitted unconditional frames. The <code>response_error</code> signal shall be set whenever a frame (except for event triggered frame responses) that is transmitted or received by the slave node contains an error in the frame response. The <code>response_error</code> signal shall be cleared when the unconditional frame containing the <code>response_error</code> signal is successfully transmitted.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">LinSlave.linErrorResponse</a> , <a href="#">LinSlaveConfig.linErrorResponse</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
responseError	<a href="#">ISignalTriggering</a>	0..1	ref	This ISignal shall be taken to transport the responseError bit.

**Table 3.42: LinErrorResponse**

### 3.3.5.5 LIN Communication Connector

[LinCommunicationConnector](#) is a specialization of the [CommunicationConnector](#) class. The [LinCommunicationConnector](#) element contains lists of frames processed by the slave node.

**[constr\_3029] Assign-Frame command usage** [For the LIN 2.0 Assign-Frame command the [LinConfigurableFrame](#) list shall be used. For the LIN 2.1 Assign-Frame-PID-Range command the [LinOrderedConfigurableFrame](#) list shall be used.]()

**[constr\_5030] Uniqueness of [LinOrderedConfigurableFrame.index](#)** [[LinOrderedConfigurableFrame.index](#) shall always be set and be unique in the context of the aggregating [LinCommunicationConnector](#).]()

<b>Class</b>	<b>LinCommunicationConnector</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	LIN bus specific communication connector attributes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CommunicationConnector</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.connector</a> , <a href="#">MachineDesign.communicationConnector</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
initialNad	Integer	0..1	attr	Initial NAD of the LIN slave.
linConfigurableFrame	<a href="#">LinConfigurableFrame</a>	*	aggr	LinConfigurableFrames shall list all frames (unconditional frames, event-triggered frames and sporadic frames) processed by the slave node. This element is necessary for the LIN 2.0 Assign-Frame command.
linOrderedConfigurableFrame	<a href="#">LinOrderedConfigurableFrame</a>	*	aggr	LinOrderedConfigurableFrames shall list all frames (unconditional frames, event-triggered frames and sporadic frames) processed by the slave node. This element is necessary for the LIN 2.1 Assign-Frame-PID-Range command.
scheduleChangeNextTimeBase	Boolean	0..1	attr	This attribute defines the point in time where a schedule table switch is performed. If this attribute is set to false or not present, the schedule table shall be switched after the current entry of the active schedule table is ended. If this attribute is enabled, the schedule table shall be switched when message transmission or reception within an entry has been completed, ensured by status checks for transmission and reception.

**Table 3.43: LinCommunicationConnector**

<b>Class</b>	<b>LinConfigurableFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	Assignment of messageIds to Frames. This element shall be used for the LIN 2.0 Assign-Frame command.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">LinCommunicationConnector.linConfigurableFrame</a> , <a href="#">LinSlaveConfig.linConfigurableFrame</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
frame	<a href="#">LinFrame</a>	1	ref	Reference to a Frame that is processed by the slave node.
messageId	PositiveInteger	0..1	attr	MessageId for the referenced frame

**Table 3.44: LinConfigurableFrame**



<b>Class</b>	<b>LinOrderedConfigurableFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	With the assignment of the index to a frame a mapping of Pids to Frames is possible. This element shall be used for the LIN 2.1 Assign-Frame-PID-Range command.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	LinCommunicationConnector.linOrderedConfigurableFrame, LinSlaveConfig.linOrderedConfigurableFrame			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
frame	LinFrame	1	ref	Reference to a Frame that is processed by the slave node.
index	Integer	1	attr	This attribute is used to order the elements and allows an assignment of Pids to ConfigurableFrames that are defined in the slave.

**Table 3.45: LinOrderedConfigurableFrame**

### 3.3.5.6 LIN Physical Channel

[LinPhysicalChannel](#) is a specialization of the [PhysicalChannel](#) class. It contains additional Lin-specific [PhysicalChannel](#) attributes.

<b>Class</b>	<b>LinPhysicalChannel</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinTopology			
<b>Note</b>	LIN specific attributes to the physicalChannel			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PhysicalChannel</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CommunicationCluster</a> .physicalChannel			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
busIdleTimeoutPeriod	TimeValue	0..1	attr	This attribute shall be used to set an idle timeout period for the enclosing LinPhysicalChannel.
scheduleTable	LinScheduleTable	*	aggr	Schedule tables organize the timings of the frames for LIN.  atpVariation: If the transmitted frames are variable, the corresponding ScheduleTables shall be variable, too.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=scheduleTable.shortName, scheduleTable.variationPoint.shortLabel vh.latestBindingTime=postBuild


**Table 3.46: LinPhysicalChannel**

**[constr\_3015] Number of LIN channels** [LIN clusters shall aggregate exactly one [LinPhysicalChannel](#).]()

### 3.3.6 Ethernet

The `EthernetCluster` represents an Ethernet network which may consist of several ECUs connected.

An essential aspect of modern Ethernet is the possibility to introduce Ethernet switches in order to partition the `EthernetCluster` into segments which are used for point-to-point communication between the respective partners. It is possible to define the behavior of such Ethernet switches, this is described in chapter 3.3.6.6.

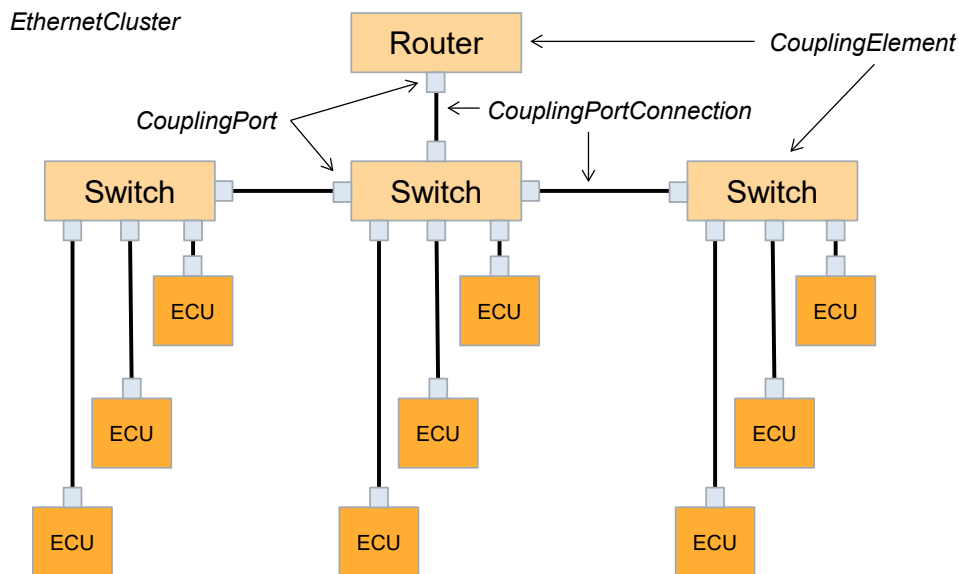

**Figure 3.9: Example of an EthernetCluster**

Figure 3.9 illustrates an example of an `EthernetCluster`. In this figure the focus is on the *Link Layer* and represents the wiring of ECUs, their communication connectors, switches, hubs, routers, and how these elements are connected electrically.

To describe the Ethernet at the data link- and physical layer the following System Template meta-model classes are used: `EthernetCluster`, `EthernetCommunicationController`, `EthernetCommunicationConnector`, `EthernetPhysicalChannel`, `CouplingElement`, `CouplingPort` and `CouplingPortConnection` (see Figure 3.10).

AUTOSAR supports the wake-up and sleep mechanism complying with the Open Alliance TC10 specification (OA TC10, see [17]), which is used for a switched Ethernet network. The details are described in chapter 3.3.6.8.

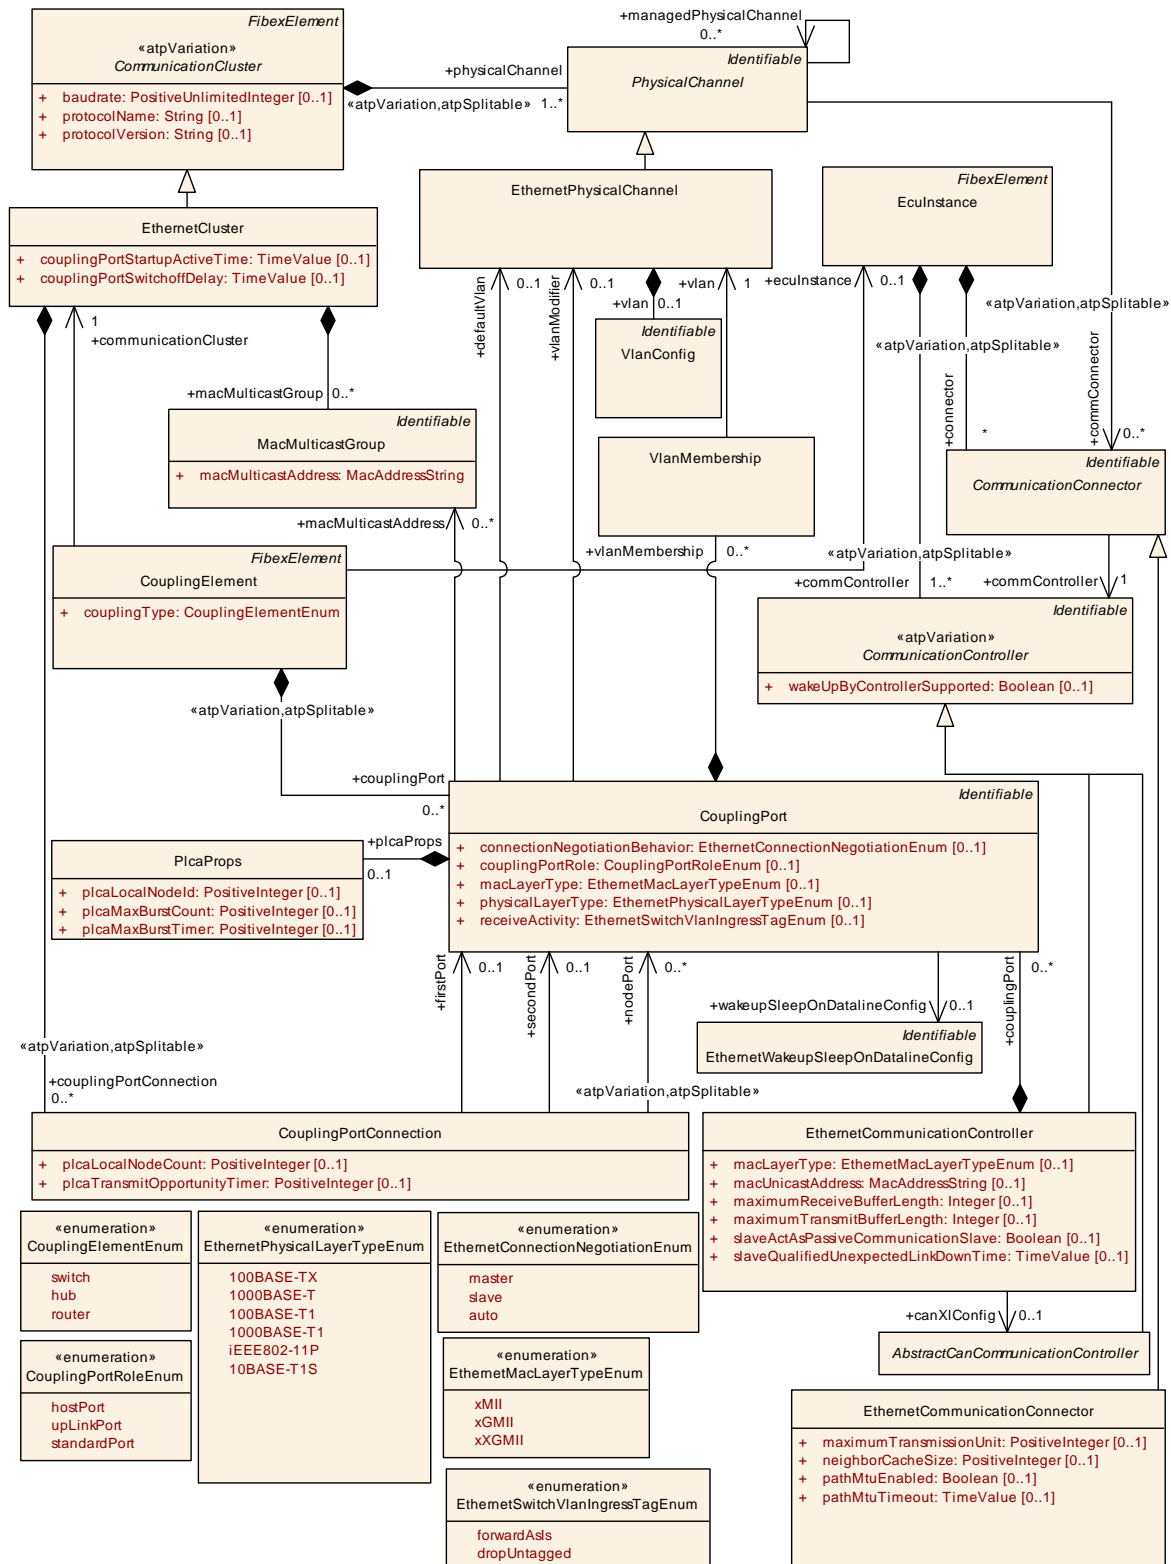


Figure 3.10: Ethernet topology elements (Fibex4Ethernet\_Topology)

[constr\_5251] **CouplingPort.connectionNegotiationBehavior** shall exist  
 [The attribute `CouplingPort.connectionNegotiationBehavior` shall be defined at the time the Base EcuC is created.]()

### 3.3.6.1 Ethernet Cluster

Each `EthernetCluster` may have globally defined `MacMulticastGroups`. `MacMulticastGroups` have a `macMulticastAddress` (for example 01:00:5E:7F:FF:FF). One sender can handle many receivers simultaneously, if the receivers have all the same `macMulticastAddress`.

**[constr\_3047] Uniqueness of `macMulticastAddresses`** [A `macMulticastAddress` shall be unique in a particular `EthernetCluster`.]()

For details on `CouplingPort` specific attributes of `EthernetCluster` in relation with Partial Networks please refer to chapter 5.4.1.1.

<b>Class</b>	<<atpVariation>> <b>EthernetCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Ethernet-specific cluster attributes. <b>Tags:</b> atp.recommendedPackage=CommunicationClusters			
<b>Base</b>	<i>ARObject, CollectableElement, CommunicationCluster, FibexElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable</i>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
couplingPort Connection	<a href="#">CouplingPort Connection</a>	*	aggr	Specification of connections between CouplingElements and EcuInstances.  Note: This atpSplittable property has no atp.Splitkey due to atpVariation (PropertySetPattern).  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> vh.latestBindingTime=postBuild
couplingPort StartupActive Time	TimeValue	0..1	attr	The attribute specifies the time in second a coupling port is switched on to enable the host ECU (ECU that maintains an Ethernet switch) to listen to the network for potential network management requests.
couplingPort SwitchoffDelay	TimeValue	0..1	attr	Switch off delay for CouplingPorts in seconds. It denotes the delay of switching off couplingPorts after the request to switch off a couplingPort was issued. (e.g. switch off of Ethernet switch ports).
macMulticast Group	<a href="#">MacMulticastGroup</a>	*	aggr	MacMulticastGroup that is defined for the Subnet (EthernetCluster).

**Table 3.47: EthernetCluster**

<b>Class</b>	<b>MacMulticastGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Per EthernetCluster globally defined MacMulticastGroup. One sender can handle many receivers simultaneously if the receivers have all the same macMulticastAddress. The addresses need to be unique for the particular EthernetCluster.			
<b>Base</b>	<i>ARObject, Identifiable, MultilanguageReferrable, Referrable</i>			
<b>Aggregated by</b>	<a href="#">EthernetCluster.macMulticastGroup</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
macMulticast Address	MacAddressString	1	attr	A multicast MAC address (Media Access Control address) is a identifier for a group of hosts in a network.

**Table 3.48: MacMulticastGroup**

[TPS\_SYST\_02362] **Relevance of attribute `EthernetCluster.baudrate`** [The value of the attribute `baudrate` in the context of an `EthernetCluster` has no meaning and shall be ignored.](/)

The communication speed is defined by the attribute `CouplingPort.physicalLayerType` of the involved `CouplingPorts`.

### 3.3.6.2 Ethernet Physical Channel

The `EthernetPhysicalChannel` represents a VLAN. VLANs (IEEE 802.1q) divide physical Ethernet networks in logical subnets. Their realization requires switches with VLAN support. VLANs are defined on a switch on a port-by-port basis.

The term `EthernetPhysicalChannel` may be misleading because it actually does *not* defined the physical (electrical) attributes of the communication but the `EthernetPhysicalChannel` defines the VLANs as *logical* broadcast domains in which the communication partners can interact.

Regardless whether the Ethernet communication uses tagged [TPS\_SYST\_01095] or untagged [TPS\_SYST\_01096] VLANs all communication needs to be defined within respective `EthernetPhysicalChannels` as defined in chapter 6.1.

[TPS\_SYST\_01095] **tagged VLANs** [In the System Description a VLAN is represented by an `EthernetPhysicalChannel` and is identified by its `vlanIdentifier`.](RS\_SYST\_00039)

[TPS\_SYST\_01096] **untagged VLANs** [If the `VlanConfig` and the `vlanIdentifier` are not defined for an `EthernetPhysicalChannel` than the channel is called “untagged”.](RS\_SYST\_00039)

Every `Frame` that is sent over a “tagged” VLAN is tagged with a VLAN Tag. With this tag every receiving switch has the information about the VLAN that the `Frame` belongs to. The VLAN Tag that is attached to a `Frame` contains the user priority for the `Frame` that is described with the `defaultPriority` and the `vlanIdentifier`.

<b>Class</b>	<code>EthernetPhysicalChannel</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	The <code>EthernetPhysicalChannel</code> represents a VLAN or an untagged channel. An untagged channel is modeled as an <code>EthernetPhysicalChannel</code> without an aggregated VLAN.			
<b>Base</b>	<code>ARObject</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>PhysicalChannel</code> , <code>Referrable</code>			
<b>Aggregated by</b>	<code>CommunicationCluster.physicalChannel</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
network Endpoint	<code>NetworkEndpoint</code>	*	aggr	Collection of <code>NetworkEndpoints</code> that are used in the VLAN. <b>Stereotypes:</b> <code>atpSplittable</code> <b>Tags:</b> <code>atp.Splitkey=networkEndpoint.shortName</code>
soAdConfig	<code>SoAdConfig</code>	0..1	aggr	SoAd Configuration for one specific Physical Channel.
vlan	<code>VlanConfig</code>	0..1	aggr	VLAN Configuration.

**Table 3.49: EthernetPhysicalChannel**

**[constr\_3333] Standardized values for the attribute `category` of meta-class `EthernetPhysicalChannel`** [The following values of the attribute `category` of meta-class `EthernetPhysicalChannel` are reserved by the AUTOSAR standard:

- WIRED: This represents the usage of the `EthernetPhysicalChannel` in case of a wired ethernet connection
- WIRELESS: This represents the usage of the `EthernetPhysicalChannel` in case of a wireless ethernet connection

]()

**[TPS\_SYST\_02159] Default value for the attribute `category` of meta-class `EthernetPhysicalChannel`** [The default value for the `category` of an `EthernetPhysicalChannel` shall be *WIRED*.]()

**[constr\_3334] Allowed references between `EthernetPhysicalChannel` and `EthernetCommunicationConnector`** [An `EthernetPhysicalChannel` is only allowed to reference `EthernetCommunicationConnectors` in the role `commConnector` that have the same `category` value as the referencing `EthernetPhysicalChannel`.]()

**[constr\_3365] `EthernetPhysicalChannels` with different `category` values are not allowed within an `EthernetCluster`** [A mix of `EthernetPhysicalChannels` with different `category` values within an `EthernetCluster` is currently not supported by AUTOSAR.]()

**[constr\_3336] `EthernetPhysicalChannel.soAdConfig` in case of WIRELESS `EthernetPhysicalChannel`** [If `EthernetPhysicalChannel` has the `category` *WIRELESS* then the `EthernetPhysicalChannel` shall not aggregate the `SoAdConfig`.]()

**[TPS\_SYST\_01086] Number of Ethernet channels** [Each `EthernetCluster` may aggregate up to 4096 `EthernetPhysicalChannels`.] (*RS\_SYST\_00039*)

<b>Class</b>	VlanConfig			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	VLAN Configuration attributes			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<code>EthernetPhysicalChannel.vlan</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
<code>vlanIdentifier</code>	PositiveInteger	1	attr	A VLAN is identified by this attribute according to IEEE 802.1Q. The allowed values range is from 0..4095.

**Table 3.50: VlanConfig**

**[constr\_3048] Range of `vlanIdentifier`** [The allowed values of `vlanIdentifier` range from 0 to 4095.]()

### 3.3.6.2.1 VLAN Priority

The Priority is a 3-bit field which refers to the IEEE 802.1Q priority. It indicates the frame priority level. Values are from 0 (best effort) to 7 (highest); 1 represents the lowest priority. These values can be used to prioritize different classes of traffic (voice, video, data, etc.). The priority is contained in the Ethernet Header together with the `vlanIdentifier`.

The `defaultPriority` can be overwritten on different levels:

1. `NetworkEndpoint`
2. `ApplicationEndpoint`
3. `ProvidedServiceInstance` or `ConsumedEventGroup`

If a priority on an `ApplicationEndpoint` is defined the priorities in the `NetworkEndpoint` and the `defaultPriority` in the `VlanMembership` would be ignored.

The following table shows two `CouplingPorts`. Both have two `NetworkEndpoints` and for each `NetworkEndpoint` two `ApplicationEndpoints` are defined. This means that per Port two IP Addresses and four Tcp-Ports are used. On each level a priority may be defined.

For NEP1.1 no priority is defined. This means that the Default-Priority from Coupling-Port1 is valid. On CouplingPort1 all messages have the Priority 0 ("best effort") except for messages that are going over `ApplicationEndpoint` AEP1.1.2 and AEP 1.2.2. These messages have the priority 1 (higher priority). On CouplingPort2 the priority is overwritten on several levels. Please note that AEP 2.2.1 and AEP 2.2.2 are reducing the priority that is defined on the NEP2.2.

Port (Default-Prio)	NetworkEndpoint (e.g. IpAddress)	ApplicationEndpoint (e.g. Tcp Port)
CouplingPort1: Prio.0	NEP1.1: Prio. —	AEP 1.1.1: Prio. —
		AEP 1.1.2: Prio. 1
	NEP1.2: Prio. 0	AEP 1.2.1: Prio. —
		AEP 1.2.2: Prio. 1
CouplingPort2: Prio.0	NEP2.1: Prio. 1	AEP 2.1.1: Prio. 2
		AEP 2.1.2: Prio. 3
	NEP2.2: Prio. 2	AEP 2.2.1: Prio. 1
		AEP 2.2.2: Prio. 0

**Table 3.51: VLAN Priority Example**

### 3.3.6.3 Ethernet Coupling Elements and Coupling Ports

A `CouplingElement` is used to connect `EcuInstances` via `CouplingPorts` to `EthernetPhysicalChannels` (VLANs) that are defined within an `EthernetCluster`.

[CouplingElements](#) can reach from a simple hub to a complex managed switch or even devices with functionalities in higher layers. A [CouplingElement](#) references the [EthernetCluster](#) and contains a collection of available [CouplingPorts](#). The [couplingType](#) identifies the [CouplingElement](#) as a switch, hub or router.

<b>Class</b>	<b>CouplingElement</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	A CouplingElement is used to connect EcuInstances to the VLAN of an EthernetCluster. Coupling Elements can reach from a simple hub to a complex managed switch or even devices with functionalities in higher layers. A CouplingElement that is not related to an EcuInstance occurs as a dedicated single device. <b>Tags:</b> atp.recommendedPackage=CouplingElements			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communicationCluster	<a href="#">EthernetCluster</a>	1	ref	This relationship defines to which cluster the Coupling Element belongs.
couplingPort	<a href="#">CouplingPort</a>	*	aggr	Hardware Port of the CouplingElement that is used to connect this CouplingPort to EcuInstances or other CouplingElements. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=couplingPort.shortName, couplingPort.variationPoint.shortLabel vh.latestBindingTime=postBuild
couplingType	<a href="#">CouplingElementEnum</a>	1	attr	Describes the coupling type of this CouplingElement.
ecuInstance	<a href="#">EcuInstance</a>	0..1	ref	Optional reference to the ECU where the Coupling Element is located.

**Table 3.52: CouplingElement**

<b>Enumeration</b>	<b>CouplingElementEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Identifies the Coupling type.
<b>Aggregated by</b>	<a href="#">CouplingElement.couplingType</a>
<b>Literal</b>	<b>Description</b>
hub	A device that is used to connect segments of a LAN. In Hubs frames are "broadcasted" to every one of its ports. <b>Tags:</b> atp.EnumerationLiteralIndex=0
router	A device that routes frames between different networks. <b>Tags:</b> atp.EnumerationLiteralIndex=1
switch	A device that filters and forwards frames between different LAN segments. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 3.53: CouplingElementEnum**

**[constr\_3062]** The [EcuInstance](#) that is referenced from a specific [CouplingElement](#) shall be connected to the same [EthernetCluster](#) as the specific



**CouplingElement** [The `EcuInstance` referenced from a specific `CouplingElement` in the role `ecuInstance` shall be connected via the `CommunicationConnector` and a `EthernetPhysicalChannel` that refers the `CommunicationConnector` to the `EthernetCluster` referenced by the specific `CouplingElement` in the role `communicationCluster`.]()

Class	CouplingPort			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	A CouplingPort is used to connect a CouplingElement with an EcuInstance or two CouplingElements with each other via a CouplingPortConnection. Optionally, the CouplingPort may also have a reference to a macMulticastGroup and a defaultVLAN.			
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Aggregated by	CouplingElement.couplingPort, EthernetCommunicationController.couplingPort			
Attribute	Type	Mult.	Kind	Note
connectionNegotiationBehavior	EthernetConnectionNegotiationEnum	0..1	attr	Specifies the connection negotiation of the CouplingPort.
couplingPortDetails	CouplingPortDetails	0..1	aggr	Defines more details of a CouplingPort in case a more specific configuration is required.
couplingPortRole	CouplingPortRoleEnum	0..1	attr	Defines the role this CouplingPort takes in the context of the CouplingElement.
defaultVlan	EthernetPhysicalChannel	0..1	ref	The vLanIdentifier of the referenced VLAN is the Default-PVID (port VLAN ID). A Port VLAN ID is a default VLAN ID that is assigned to an access CouplingPort to designate the VLAN segment to which this port is connected. Also, if a CouplingPort has not been configured with any VLAN memberships, the virtual switch's Port VLAN ID (pvid) becomes the default VLAN ID for the ports connection.  This identifier/tag is added for incoming untagged messages at the port (ingress tagging). For outgoing messages with this identifier, the tag is removed at the port (egress untagging, depending on the Vlan Membership.sendActivity).
macLayerType	EthernetMacLayerTypeEnum	0..1	attr	Specifies the mac layer type of the CouplingPort.
macMulticastAddress	MacMulticastGroup	*	ref	Assigns a set of MAC-Multicast-Addresses which are addressable via this CouplingPort. This is a static pre-configuration and further addresses may be learned during runtime.
macSecProps	MacSecProps	*	aggr	Properties to configure MACsec (Media access control security) and the MKA (MACsec Key Agreement) for the CouplingPort (PHY). <b>Tags:</b> atp.Status=candidate
physicalLayerType	EthernetPhysicalLayerTypeEnum	0..1	attr	Specifies the physical layer type of the CouplingPort.
plcaProps	PlcaProps	0..1	aggr	Optional properties for configuration of PLCA (Physical Layer Collision Avoidance) in case 10-BASE-T1S Ethernet is used and PLCA is enabled on the Coupling Port (PHY).
pncMapping	PncMappingIdent	*	ref	Reference to the partial networks this CouplingPort participates in.
receiveActivity	EthernetSwitchVlanIngressTagEnum	0..1	attr	Defines the handling of frames at the ingress port.





Class	CouplingPort			
vlanMembership	<a href="#">VlanMembership</a>	*	aggr	Messages of VLANs that are defined here can be communicated via the CouplingPort.
vlanModifier	<a href="#">EthernetPhysicalChannel</a>	0..1	ref	All incoming messages at this CouplingPort shall be tagged with this VLAN Id. This tagging is performed regardless whether the message already has a VLAN tag or is untagged, an existing VLAN tag will be overwritten. This feature is XOR with CouplingPort.defaultVlan.
wakeupSleepOnDataLineConfig	<a href="#">EthernetWakeupSleepOnDataLineConfig</a>	0..1	ref	Optional reference to EthernetWakeupSleepOnDataLineConfig.

**Table 3.54: CouplingPort**

**[constr\_3726]{DRAFT} Upper multiplicity of aggregation in the role [CouplingPort.macSecProps](#)** [In the context of [CouplingPort](#), the aggregation in the role [macSecProps](#) shall exist at most once.]()

Enumeration	EthernetConnectionNegotiationEnum
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
Note	Specifies connection negotiation types of Ethernet transceiver links.
Aggregated by	<a href="#">CouplingPort.connectionNegotiationBehavior</a>
Literal	Description
auto	Automatic Negotiation <b>Tags:</b> atp.EnumerationLiteralIndex=0
master	Master <b>Tags:</b> atp.EnumerationLiteralIndex=1
slave	Slave <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 3.55: EthernetConnectionNegotiationEnum**

Enumeration	EthernetMacLayerTypeEnum
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
Note	Specifies MAC (Media Access Control) Layer types.
Aggregated by	<a href="#">CouplingPort.macLayerType</a> , <a href="#">EthernetCommunicationController.macLayerType</a>
Literal	Description
xGMII	Mac layer interface (data) bandwidth class 1Gbit/s (e.g. GMII, RGMII, SGMII, RvGMII, USGMII) <b>Tags:</b> atp.EnumerationLiteralIndex=1 xml.name=XG-MII
xMII	Mac layer interface (data) bandwidth class 100Mbit/s and 10Mbit/s (e.g. RMII, RvMII, SMII, RvMII) <b>Tags:</b> atp.EnumerationLiteralIndex=0 xml.name=X-MII





<b>Enumeration</b>	<b>EthernetMacLayerTypeEnum</b>
xXGMII	Mac layer interface (data) bandwidth class 10Gbit/s  <b>Tags:</b> atp.EnumerationLiteralIndex=2 xml.name=XXG-MII

**Table 3.56: EthernetMacLayerTypeEnum**

<b>Enumeration</b>	<b>EthernetPhysicalLayerTypeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Specifies physical layer types of Ethernet transceiver links.
<b>Aggregated by</b>	<a href="#">CouplingPort.physicalLayerType</a>
<b>Literal</b>	<b>Description</b>
_1000BASE_T	Ethernet Standard (IEEE 802.3ab) to support 1Gbit/s over 4 twisted pairs.  <b>Tags:</b> atp.EnumerationLiteralIndex=6 xml.name=1000BASE-T
_1000BASE_T1	Ethernet Standard (IEEE 802.3bp) to support 1Gbit/s over a single twisted pair cable.  <b>Tags:</b> atp.EnumerationLiteralIndex=8 xml.name=1000BASE-T1
_100BASE_T1	Ethernet Standard (IEEE 802.3bw) to support 100Mbit/s over a single twisted pair cable. 100BASE-T1 is the IEEE Standardized version of BroadRReach.  <b>Tags:</b> atp.EnumerationLiteralIndex=7 xml.name=100BASE-T1
_100BASE_TX	Ethernet Standard (IEEE 802.3u) to support 100Mbit/s over two twisted pairs.  <b>Tags:</b> atp.EnumerationLiteralIndex=5 xml.name=100BASE-TX
_10BASE_T1S	Physical layer interface 10BASE-T1S (10Mbit/s, 2 pairs). Used for automotive.  <b>Tags:</b> atp.EnumerationLiteralIndex=10 atp.Status=draft xml.name=10BASE-T1S
IEEE802_11P	Ethernet Standard (IEEE 802.11p) to support wireless communication in vehicular environments.  <b>Tags:</b> atp.EnumerationLiteralIndex=9 xml.name=IEEE802-11P

**Table 3.57: EthernetPhysicalLayerTypeEnum**

<b>Enumeration</b>	<b>EthernetSwitchVlanIngressTagEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Defines the possible tagging behavior at an ingress port.
<b>Aggregated by</b>	<a href="#">CouplingPort.receiveActivity</a>
<b>Literal</b>	<b>Description</b>
dropUntagged	Drop if untagged.  <b>Tags:</b> atp.EnumerationLiteralIndex=1
forwardAsIs	Forward with the same VLAN as received. Also untagged frames will be forwarded as untagged.  <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 3.58: EthernetSwitchVlanIngressTagEnum**

<b>Class</b>	<b>VlanMembership</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Static logical channel or VLAN binding to a switch-port. The reference to an EthernetPhysicalChannel without a VLAN defined represents the handling of untagged frames.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	CouplingPort.vlanMembership			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
defaultPriority	PositiveInteger	1	attr	Standard output-priority outgoing Frames will be tagged with. Defines the priority that received frames are assigned together with the VLAN Id (defaultVlan). The values from 0 (best effort) to 7 (highest) are allowed. In case modifyVlan and an already tagged received frame, the actual priority of the received frame is not modified.
dhcpAddress Assignment	DhcpServer Configuration	0..1	aggr	Specifies the IP Address which will be assigned to a DHCP Client at this SwitchPort. If no dhcpAddress Assignment is provided all DHCP-Discover messages received at this Port will be discarded by the DHCP Server.
sendActivity	EthernetSwitchVlan EgressTaggingEnum	0..1	attr	Attribute denotes whether a VLAN tagged ethernet frame will be <ol style="list-style-type: none"> <li>1. sent with its VLAN tag (sentTagged)</li> <li>2. sent without a VLAN tag (sentUntagged)</li> <li>3. will be dropped at this port (notSent or VLAN not member of this list)</li> </ol>
vlan	EthernetPhysical Channel	1	ref	References a channel that represents a VLAN or an untagged channel.

**Table 3.59: VlanMembership**

<b>Class</b>	<b>CouplingPortConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Connection between two CouplingPorts (firstPort and secondPort) or between a collection of Ports that are all referenced by the portCollection reference.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	EthernetCluster.couplingPortConnection			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
firstPort	CouplingPort	0..1	ref	Reference to the first CouplingPort that is connected via the CouplingPortConnection.
nodePort	CouplingPort	*	ref	Reference to a number of CouplingPorts that are connected via the CouplingPortConnection. This reference shall be used to describe a 10BASE-T1S topology architecture where several CouplingPorts of EthernetCommunicationControllers are connected via one CouplingPortConnection. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=nodePort.couplingPort, nodePort.variationPoint.shortLabel vh.latestBindingTime=postBuild
plcaLocalNode Count	PositiveInteger	0..1	attr	Defines the number of communication participants in case 10BASE-T1S and the nodePort reference is used.





Class	CouplingPortConnection			
plcaTransmitOpportunityTimer	PositiveInteger	0..1	attr	Timer for the transmission in bit time to evaluate if a Transmission Opportunity is yield or not.
secondPort	<a href="#">CouplingPort</a>	0..1	ref	Reference to the second CouplingPort that is connected via the CouplingPortConnection.

**Table 3.60: CouplingPortConnection**

[CouplingPorts](#) are hardware ports of [CouplingElements](#) and [EcuInstances](#). Connections between [CouplingPorts](#) are realized through [CouplingPortConnections](#).

Optionally the [CouplingPort](#) of a [CouplingElement](#) may also have one or several [VlanMemberships](#), a [defaultVlan](#) reference and a reference to a [MacMulticastGroup](#).

**[constr\_3521] defaultVlan and vlanMembership** [If a [CouplingPort](#) refers to an [EthernetPhysicalChannel](#) in the role [defaultVlan](#) the [CouplingPort](#) shall also have a [vlanMembership](#) defined. This [VlanMembership](#) shall point to the same [EthernetPhysicalChannel](#) in the role [vlan](#) as the [defaultVlan](#).]()

**[constr\_3522] vlanModifier and vlanMembership** [If a [CouplingPort](#) refers to an [EthernetPhysicalChannel](#) in the role [vlanModifier](#) the [CouplingPort](#) shall also have a [vlanMembership](#) defined. This [VlanMembership](#) shall point to the same [EthernetPhysicalChannel](#) in the role [vlan](#) as the [vlanModifier](#).]()

**[constr\_3435] Applicability of CouplingPort.macMulticastAddress** [The reference [CouplingPort.macMulticastAddress](#) is only applicable if the [CouplingPort](#) is aggregated by a [CouplingElement](#) with [couplingType](#) = [switch](#).]()

**[constr\_3133] physicalLayerType of connected CouplingPorts** [The [physicalLayerType](#) of two [CouplingPorts](#) which are connected via a [CouplingPortConnection](#) shall be equal.]()

**[constr\_3134] The connection of two CouplingPorts with connectionNegotiationBehavior set to master is forbidden** [The [connectionNegotiationBehavior](#) of two [CouplingPorts](#) which are connected via a [CouplingPortConnection](#) shall not be both set to [master](#).]()

**[constr\_3135] The connection of two CouplingPorts with connectionNegotiationBehavior set to slave is forbidden** [The [connectionNegotiationBehavior](#) of two [CouplingPorts](#) which are connected via a [CouplingPortConnection](#) shall not be both set to [slave](#).]()

**[TPS\_SYST\_01097] Assignment of CouplingPorts to a VLAN** [[CouplingPorts](#) of [CouplingElements](#) can be assigned to VLANs ([EthernetPhysicalChannels](#)) with the [vlanMembership](#) aggregation.]([RS\\_SYST\\_00039](#))

[TPS\_SYST\_01098] Assignment of **CouplingPorts** to an “untagged” VLAN [A **CouplingPort** may be assigned to several VLANs, but only one of those assignments can be “untagged”.] (RS\_SYST\_00039)


[constr\_3534] **EthernetPhysicalChannel** shall only be referenced by one **VlanMembership** [An **EthernetPhysicalChannel** shall only be referenced by one **VlanMembership** in the role **VlanMembership.vlan** in the scope of one **CouplingPort**.]()

Figure 3.11 shows a **CouplingElement** with two **CouplingPorts**.

In this example Port 0 is assigned to three VLANs and one “untagged” **EthernetPhysicalChannel**. VLAN3 is marked as the **defaultVlan**. With the combination of the **defaultVlan** and the **VlanMembership** to the “untagged” **EthernetPhysicalChannel** the **Frames** that are transmitted over Port 0 on VLAN3 are “untagged” on the wire in both directions (Tx and Rx). The switch adds the tag for incoming untagged messages at the port (ingress tagging) and for outgoing messages the tag is removed at the port (egress untagging).

Port 1 is assigned to three VLANs. But the **VlanMembership** to the “untagged” **EthernetPhysicalChannel** is not defined here. For this reason, **Frames** that are transmitted over Port 1 on VLAN3 are “tagged”.

If a **defaultVlan** is defined for a **CouplingPort** but the **defaultVlan** is not referenced by the **VlanMembership** then “untagged” **Frames** can be received via the **CouplingPort**. But a response can not be send back.

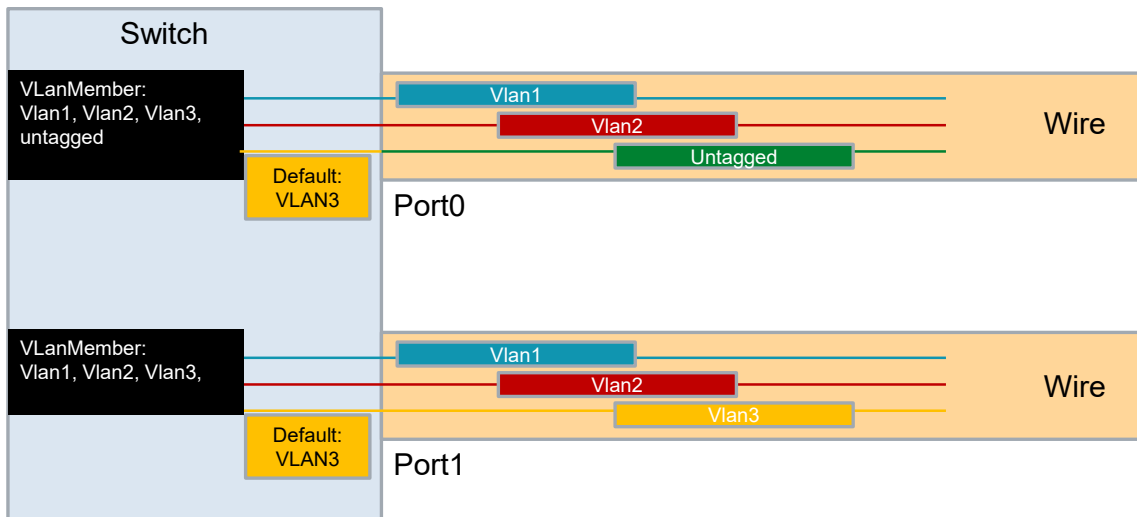

**Figure 3.11: Default Vlan Example**

### 3.3.6.4 Ethernet Communication Controller

`EthernetCommunicationController` is a specialization of the `CommunicationController` class. It contains the specific Ethernet controller attributes needed for configuring an `EcuInstance` connected to a certain Ethernet cluster.

<b>Class</b>	<<atpVariation>> <code>EthernetCommunicationController</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Ethernet specific communication port attributes.			
<b>Base</b>	<code>ARObject</code> , <code>CommunicationController</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
<b>Aggregated by</b>	<code>EcuInstance.commController</code> , <code>MachineDesign.communicationController</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
canXConfig	<code>AbstractCanCommunicationController</code>	0..1	ref	If the Ethernet frames handled by this Ethernet CommunicationController are to be tunneled through CAN XL, then this reference shall refer to the Abstract CanCommunicationController that aggregates the CanControllerXConfiguration of the physical CAN XL channel to be used for tunneling.
couplingPort	<code>CouplingPort</code>	*	aggr	Optional CouplingPort that can be used to connect the ECU to a CouplingElement (e.g. a switch).
macLayerType	<code>EthernetMacLayerTypeEnum</code>	0..1	attr	Specifies the mac layer type of the ethernet controller.
macUnicast Address	MacAddressString	0..1	attr	Media Access Control address (MAC address) that uniquely identifies each EthernetCommunication Controller in the network.
maximum ReceiveBuffer Length	Integer	0..1	attr	Determines the maximum receive buffer length (frame length) in bytes.
maximum TransmitBuffer Length	Integer	0..1	attr	Determines the maximum transmit buffer length (frame length) in bytes.
slaveActAs Passive Communication Slave	Boolean	0..1	attr	This attribute specifies if the EcuInstance is acting as a passive communication slave on the connected Physical Channel. This is used for EthernetCommunication Controllers that use Ethernet hardware which supports wake-up and sleep on the network (e.g. Open Alliance TC10 compliant Ethernet hardware). <b>Tags:</b> atp.Status=draft
slaveQualified UnexpectedLink DownTime	TimeValue	0..1	attr	This attribute specifies time when an unexpected link down is evaluated as link down and indicated to the AUTOSAR communication stack. <b>Tags:</b> atp.Status=draft

**Table 3.61: EthernetCommunicationController**

**[constr\_3535]** `EthernetCommunicationController` shall aggregate at most one `CouplingPort` [An `EthernetCommunicationController` is allowed to aggregate at most one `CouplingPort`.]()

**[constr\_3332]** Standardized values for the attribute `category` of meta-class `EthernetCommunicationController` [The following values of the attribute `category` of meta-class `EthernetCommunicationController` are reserved by the AUTOSAR standard:

- WIRED: This represents the usage of the `EthernetCommunicationController` in case of a wired ethernet connection
- WIRELESS: This represents the usage of the `EthernetCommunicationController` in case of a wireless ethernet connection
- CAN\_XL: This represents the tunneling of Ethernet frames handled by the `EthernetCommunicationController` through CAN XL.

]()

**[TPS\_SYST\_02158] Default value for the attribute `category` of meta-class `EthernetCommunicationController`** [The default value for the `category` of an `EthernetCommunicationController` shall be *WIRED*.]()

The `EthernetCommunicationController` has the additional information of a `macUnicastAddress`. This is a globally unique MAC-address for the `CommunicationController`.

**[constr\_3702] Relevant attributes of `EthernetCommunicationController` for CAN XL** [If the category of `EthernetCommunicationController` is equal to `CAN_XL`, then only the following attributes of this meta-class are relevant:

- `macLayerType`
- `macUnicastAddress`

]()

**[constr\_3703] Reference to `CanControllerXlConfiguration` in case of category `CAN_XL`** [If the category of `EthernetCommunicationController` is equal to `CAN_XL`, then the reference `canXlConfig` of `EthernetCommunicationController` shall refer to the `CanCommunicationController` aggregating the `CanControllerConfiguration` which in turn aggregates the `CanControllerXlConfiguration` that is used for tunneling of the Ethernet frames associated with the aforementioned `EthernetCommunicationController`.]()

### 3.3.6.5 Ethernet Communication Connector

`EthernetCommunicationConnector` adds the Ethernet specific attributes to the `CommunicationConnector`.

<b>Class</b>	<code>EthernetCommunicationConnector</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Ethernet specific attributes to the <code>CommunicationConnector</code> .			
<b>Base</b>	<code>ARObject</code> , <code>CommunicationConnector</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
<b>Aggregated by</b>	<code>EcuInstance.connector</code> , <code>MachineDesign.communicationConnector</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>







Class	EthernetCommunicationConnector			
ethIpProps	<a href="#">EthIpProps</a>	0..1	ref	EcUInstance specific IP attributes.
maximumTransmissionUnit	PositiveInteger	0..1	attr	This attribute specifies the maximum transmission unit in bytes.
neighborCacheSize	PositiveInteger	0..1	attr	This attribute specifies the size of neighbor cache or ARP table in units of entries.
pathMtuEnabled	Boolean	0..1	attr	If enabled the IPv4/IPv6 processes incoming ICMP "Packet Too Big" messages and stores a MTU value for each destination address.
pathMtuTimeout	TimeValue	0..1	attr	If this value is >0 the IPv4/IPv6 will reset the MTU value stored for each destination after n seconds.

**Table 3.62: EthernetCommunicationConnector**

**[constr\_3331] Standardized values for the attribute [category](#) of meta-class [EthernetCommunicationConnector](#)** [The following values of the attribute [category](#) of meta-class [EthernetCommunicationConnector](#) are reserved by the AUTOSAR standard:

- WIRED: This represents the usage of the [EthernetCommunicationConnector](#) in case of a wired ethernet connection
- WIRELESS: This represents the usage of the [EthernetCommunicationConnector](#) in case of a wireless ethernet connection
- CAN\_XL: This represents the tunneling of Ethernet frames handled by the [EthernetCommunicationConnector](#) through CAN XL.

]()

**[TPS\_SYST\_02157] Default value for the attribute [category](#) of meta-class [EthernetCommunicationConnector](#)** [The default value for the [category](#) of an [EthernetCommunicationConnector](#) shall be *WIRED*.]()

**[constr\_3335] Allowed references between [EthernetCommunicationConnector](#) and [EthernetCommunicationController](#)** [An [EthernetCommunicationConnector](#) is only allowed to reference an [EthernetCommunicationController](#) in the role [commController](#) that has the same [category](#) value as the referencing [EthernetCommunicationConnector](#).]()

### 3.3.6.6 Ethernet Switch Driver


Ethernet networks in an automotive environment consist basically of ECUs with a single port PHY and switch ECUs with several ports. Different to consumer networks, where switches are typically stand-alone devices, switches in automotive networks may be integrated and connected to a CPU via MII and other interfaces. The configuration of these switches does influence the communication behavior within the network.

### 3.3.6.6.1 Ethernet switch port structure


In order to describe switched Ethernet networks it is essential to describe some parts of an Ethernet switch. Examples are scheduling and forwarding mechanisms within a switch as well as the switch structure within its ports.

As shown in figure 3.12, the switch consists of a certain number of ports. Each port has its own set of egress FIFOs in which the incoming packets are buffered. How the messages in the FIFOs will be forwarded depends mainly on the shaping and port scheduling mechanisms. Thus, the parametrization of the egress port influences the latency of messages within the network.

Please note that the egress port structures in figure 3.12 are meant as an example. Other structures with different FIFO numbers are possible as well.

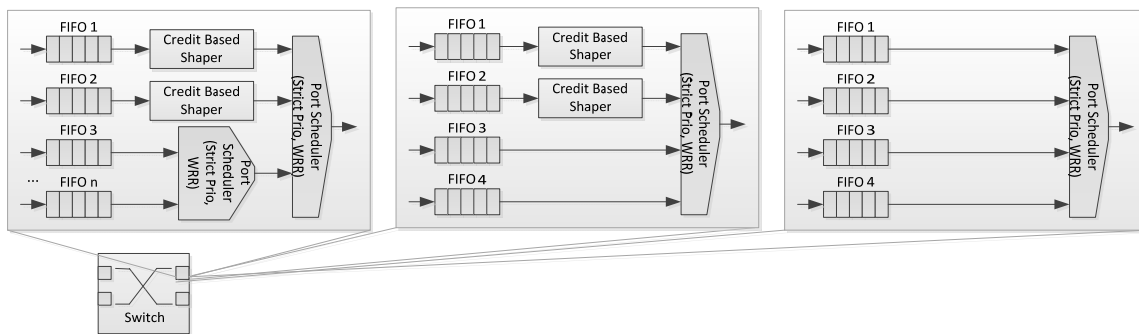

**Figure 3.12: Example egress switch port configurations**

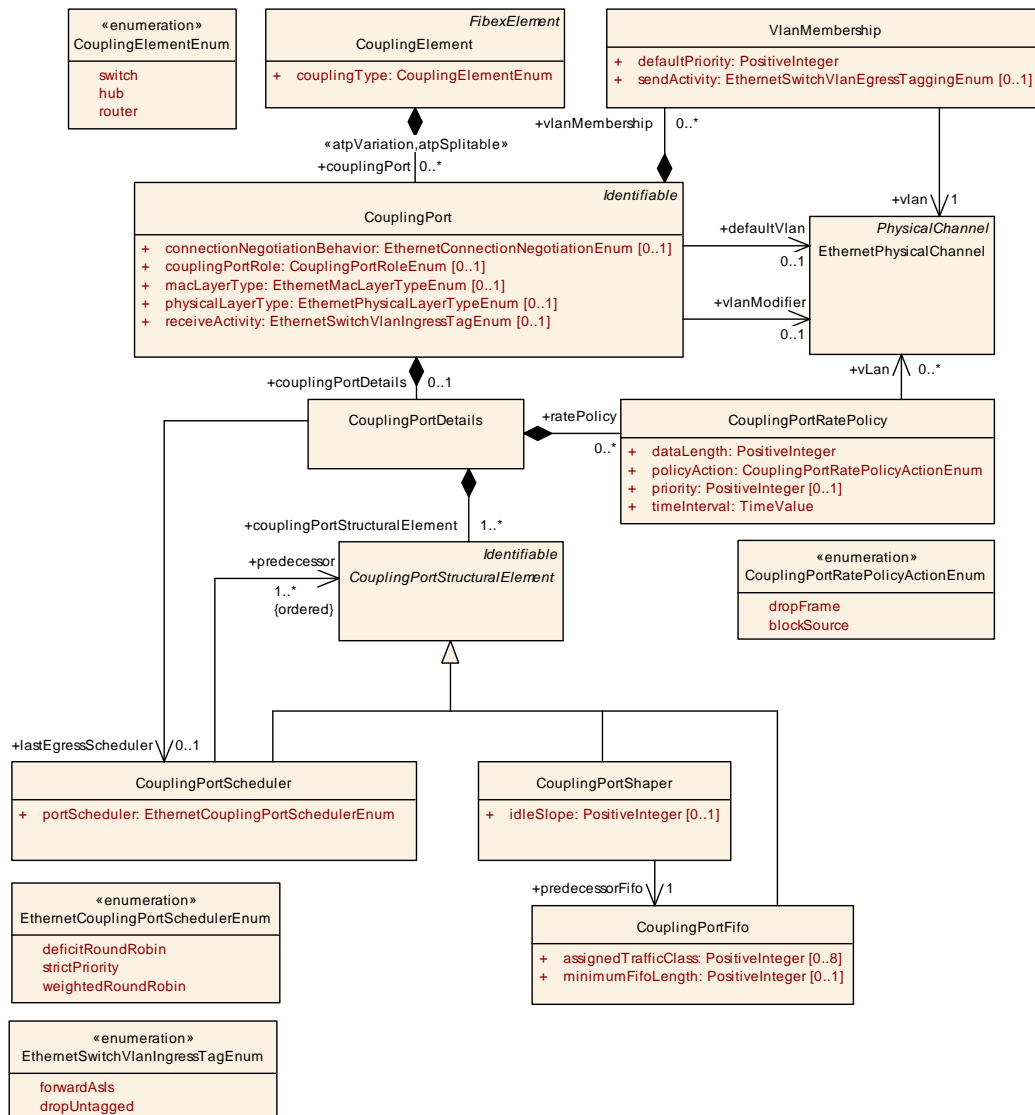

**Figure 3.13: Egress switch port structure**

The structural description of an Ethernet switch is based on the already existing `CouplingElement` in the System Template. Each `CouplingElement` can already have a set of `CouplingPorts`.

In case a detailed Switch configuration is required, there is the configuration option to add to the `CouplingPort` a `CouplingPortDetails` element which encapsulates the structural description of one switch port.

The elements which one switch port consists of are (egress side):

- `CouplingPortFifo`
- `CouplingPortShaper`
- `CouplingPortScheduler`

The model allows to collect the egress parts of one switch port in the `CouplingPortDetails.couplingPortStructuralElements`.

**[TPS\_SYST\_03006] Ethernet switch egress port setup** [Two setups can be defined at an egress port of a switch:

- The switch port has only one Fifo:
  - the `CouplingPortFifo` element is aggregated at the `CouplingPortDetails.couplingPortStructuralElements`
  - no `CouplingPortDetails.lastEgressScheduler` is defined.
- The switch port has at least one scheduler
  - the various switch port elements are all aggregated at the `CouplingPortDetails.couplingPortStructuralElements`
  - the `CouplingPortScheduler` which is the last scheduler in a chain of structural elements is additionally referenced in the role `CouplingPortDetails.lastEgressScheduler`

]([RS\\_SYST\\_00052](#))

The modeling approach is based on a predecessor chain model where the chain is started by the last scheduler in the switch port and defines where the input to this scheduler comes from. The input to a scheduler can come from several predecessor elements which might be

- another `CouplingPortScheduler`
- a `CouplingPortShaper`
- a `CouplingPortFifo`.

**[TPS\_SYST\_03007] Ethernet port scheduler algorithm** [The scheduler performs a prioritization of the incoming frames based on the algorithm defined in the `CouplingPortScheduler.portScheduler`.]([RS\\_SYST\\_00052](#))

**[TPS\_SYST\_03008] Ethernet port scheduler priority** [The first element in `CouplingPortScheduler.predecessor` has the highest priority. Therefore, it is important to have the predecessor definition of the scheduler ordered.]([RS\\_SYST\\_00052](#))

Another restriction is that a `CouplingPortShaper` can only have a `CouplingPortFifo` as `predecessorFifo`, which is given by the model.

**[TPS\_SYST\_03009] Ethernet port shaper `idleSlope`** [The `idleSlope` is defined in the IEEE802.1Qav standard as a parameter for an increase of credit in bits per second. The `idleSlope` can never exceed the maximal transmit rate of a port, e.g. 100Mbits for BroadR-Reach and 1Gbits for RTPGE. The `idleSlope` determines the maximum fraction of the port transmit rate that is available for the queue associated with the shaper:  $\text{bandwidthFraction} = \text{idleSlope} / \text{portTransmitRate}$ .]([RS\\_SYST\\_00052](#))

<b>Class</b>	<b>CouplingPortDetails</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines details of a CouplingPort. May be used to configure the structures of a switch.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	CouplingPort.couplingPortDetails			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
couplingPort Structural Element	<a href="#">CouplingPortStructuralElement</a>	1..*	aggr	Collects all the structural parts at which a CouplingPort may be configurable.
ethernetPriority Regeneration	<a href="#">EthernetPriorityRegeneration</a>	0..8	aggr	Defines a priority regeneration where the ingress priority is replaced by regenerated priority.
ethernetTraffic Class Assignment	<a href="#">CouplingPortTrafficClassAssignment</a>	0..8	aggr	Defines the ingress port to EthernetTrafficClass assignment.
globalTime Props	<a href="#">GlobalTimeCouplingPortProps</a>	0..1	aggr	Specifies properties for the usage of the CouplingPort in the scope of Global Time Sync.
lastEgress Scheduler	<a href="#">CouplingPortScheduler</a>	0..1	ref	Defines which CouplingPortScheduler is the last in the egress port structure.
ratePolicy	<a href="#">CouplingPortRatePolicy</a>	*	aggr	Rate policies to be applied for this CouplingPort.

**Table 3.63: CouplingPortDetails**

<b>Class</b>	<b>CouplingPortStructuralElement</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	General class to define structural elements a CouplingPort may consist of.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">CouplingPortFifo</a> , <a href="#">CouplingPortScheduler</a> , <a href="#">CouplingPortShaper</a>			
<b>Aggregated by</b>	CouplingPortDetails.couplingPortStructuralElement			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.64: CouplingPortStructuralElement**

<b>Class</b>	<b>CouplingPortScheduler</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines a scheduler for the CouplingPort egress structure.			
<b>Base</b>	ARObject, <a href="#">CouplingPortStructuralElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CouplingPortDetails.couplingPortStructuralElement</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
portScheduler	<a href="#">EthernetCouplingPortSchedulerEnum</a>	1	attr	Defines the schedule algorithm to be used.
predecessor (ordered)	<a href="#">CouplingPortStructuralElement</a>	1..*	ref	Ordered List of predecessor inputs. The first element has the highest priority. The following elements have decreasing priorities.

**Table 3.65: CouplingPortScheduler**

<b>Enumeration</b>	<b>EthernetCouplingPortSchedulerEnum</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the schedule algorithm to be used.			
<b>Aggregated by</b>	<a href="#">CouplingPortScheduler.portScheduler</a>			
<b>Literal</b>	<b>Description</b>			
deficitRoundRobin	Schedule algorithm "deficit round robin" <b>Tags:</b> atp.EnumerationLiteralIndex=0			
strictPriority	Schedule algorithm "strict priority" <b>Tags:</b> atp.EnumerationLiteralIndex=1			
weightedRoundRobin	Schedule algorithm "weighted round robin" <b>Tags:</b> atp.EnumerationLiteralIndex=2			

**Table 3.66: EthernetCouplingPortSchedulerEnum**

<b>Class</b>	<b>CouplingPortShaper</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines a shaper for the CouplingPort egress structure.			
<b>Base</b>	ARObject, <a href="#">CouplingPortStructuralElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CouplingPortDetails.couplingPortStructuralElement</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
idleSlope	PositiveInteger	0..1	attr	Defines the increase of credit in bits per second for the AVB shaper.
predecessorFifo	<a href="#">CouplingPortFifo</a>	1	ref	Defines the CouplingPortFifo which provides the input to this shaper.

**Table 3.67: CouplingPortShaper**

<b>Class</b>	<b>CouplingPortFifo</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines a Fifo for the CouplingPort egress structure.			
<b>Base</b>	ARObject, <a href="#">CouplingPortStructuralElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CouplingPortDetails.couplingPortStructuralElement</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





<b>Class</b>	<b>CouplingPortFifo</b>			
assignedTrafficClass	PositiveInteger	0..8	attr	Defines a set of Traffic Classes which shall be handled by this Fifo. range: 0-7
minimumFifoLength	PositiveInteger	0..1	attr	FIFO minimum length in Byte. An actual configuration/hardware may use a bigger value.

**Table 3.68: CouplingPortFifo**

### 3.3.6.6.2 Ethernet switch rate policy

A [CouplingPort](#) may define a [CouplingPortRatePolicy](#) via the [CouplingPortDetails.ratePolicy](#).

<b>Class</b>	<b>CouplingPortRatePolicy</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines a rate policy on a CouplingPort.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">CouplingPortDetails.ratePolicy</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataLength	PositiveInteger	1	attr	Amount of data in bytes (excluding header information) that can be received to define the rate policy.
policyAction	<a href="#">CouplingPortRatePolicyActionEnum</a>	1	attr	Defines the action to be performed when this rate policy is violated.
priority	PositiveInteger	0..1	attr	Defines the priority which this rate policy shall be limited on. If no priority is given this rate policy is not considering priority.
timeInterval	TimeValue	1	attr	Time interval used to define the base of the rate policy.
vLan	<a href="#">EthernetPhysicalChannel</a>	*	ref	Defines the VLANs this rate policy shall be limited on. If no VLAN is given this rate policy is not considering VLAN tags.

**Table 3.69: CouplingPortRatePolicy**

<b>Enumeration</b>	<b>CouplingPortRatePolicyActionEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Defines the action to be performed when a rate policy is violated.
<b>Aggregated by</b>	<a href="#">CouplingPortRatePolicy.policyAction</a>
<b>Literal</b>	<b>Description</b>
blockSource	If the rate policy is violated the CouplingPort this CouplingPortRatePolicy is defined on shall block all frames from the MAC-Address the violation was caused by. <b>Tags:</b> atp.EnumerationLiteralIndex=1
dropFrame	If the rate policy is violated the frame shall be dropped. <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 3.70: CouplingPortRatePolicyActionEnum**

### 3.3.6.6.3 Ethernet packet forwarding

Besides the modeling of egress ports, it is necessary to specify how incoming packets are forwarded to the egress ports. For this purpose, different assignment policies of packets to egress port FIFOs are implemented in switches.

As an example, the Ethernet priority field can be evaluated and remapped into a regenerated priority: Within the VLAN-tag, the PCP-field (priority code point) is a parameter which can be modified at an ingress port of an Ethernet switch. For this purpose a priority regeneration table can be defined.

The `CouplingPortDetails.ethernetPriorityRegeneration` is optional in case the feature of priority regeneration is not be used.

**[TPS\_SYST\_03003] Ethernet priority regeneration** [The `CouplingPortDetails.ethernetPriorityRegeneration` specifies which `ingressPriority` is mapped to which `regeneratedPriority`.] (*RS\_SYST\_00052*)

**[constr\_3515] Fully filled EthernetPriorityRegeneration table** [In case the `CouplingPortDetails.ethernetPriorityRegeneration` is defined it shall contain exactly 8 elements of `EthernetPriorityRegeneration`, one for each value of `ingressPriority` (0-7).] ()

The (potentially remapped) Ethernet priority field can be evaluated and mapped to a traffic class. Such a traffic class is again mapped to an egress FIFO. Other header information of the Ethernet frame can be also used for the assignment of Ethernet frames to egress FIFOs. For the mapping to a certain traffic class, the following tables are necessary.

PORT-based Mapping	Traffic Class
Port2, Port3, Port4	7
Port1	6
–	5
–	4
–	3
–	2
–	1
–	0

**Table 3.71: Port to Traffic Class mapping**

PCP-based Mapping	Traffic Class
Prio 0	7
Prio 1	6
Prio 2-7	5
–	4
–	3
–	2
–	1
–	0

**Table 3.72: PCP-field to Traffic Class mapping**



While the first table shows the mapping of ingress-ports to traffic classes, the second table shows the priority-based mapping which can be defined per ingress port. Both tables are in conflict with each other, i.e. it has to be decided which mapping is applied.

Also the mapping of a traffic class to a FIFO shall be done on a per port basis. An example is shown in the following table.

Traffic Class	FIFO (if 4 FIFOs available)
7	3
6	2
0-5	1
–	0

**Table 3.73: Traffic Class to FIFO mapping**

In order to model the relationship between the ingress port and the egress port, the `CouplingPortTrafficClassAssignment` elements are used.

**[TPS\_SYST\_03010] Ethernet switch packet to traffic class assignment** [First the ingress packets are assigned to traffic classes. The two use-cases from above are both supported by this model:

- Port to traffic class mapping (only one traffic class per port possible) from table 3.71
  - `CouplingPortDetails` has exactly one `ethernetTrafficClassAssignment` defined
  - the `CouplingPortTrafficClassAssignment` has no `priority` defined
- PCP-field to Traffic Class Mapping from table 3.72
  - for each traffic class the `CouplingPortDetails` aggregate one `ethernetTrafficClassAssignment`
  - each `CouplingPortTrafficClassAssignment` element has a set of `priority`s defined which shall be mapped to the given `trafficClass`

](`RS_SYST_00052`)


**[constr\_5049] Ethernet switch packet to traffic class assignment restriction** [For one `CouplingPortDetails` there exists either

- one `ethernetTrafficClassAssignment` with no `priority` attribute or
- up to 8 `ethernetTrafficClassAssignment` elements with a set of `priority` attributes

]()

**[TPS\_SYST\_03011] Ethernet switch traffic class to FIFO assignment** [Second, the traffic classes are assigned to the switch egress FIFOs. The `CouplingPortFifo` has

a set of `assignedTrafficClass` elements. These defined traffic classes shall be forwarded to this FIFO. ] (*RS\_SYST\_00052*)

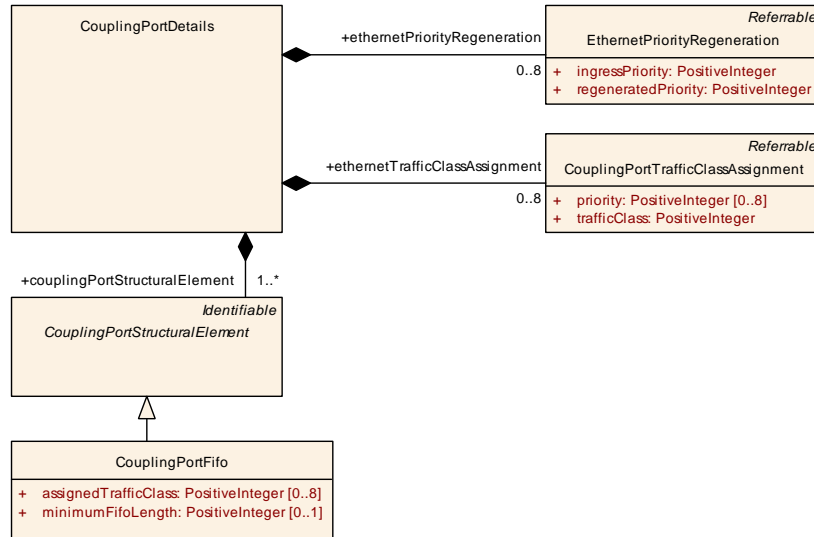

**Figure 3.14: Ethernet Priority Regeneration and Ethernet Traffic Class Assignment**

<b>Class</b>	<b>EthernetPriorityRegeneration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines a priority regeneration where the ingressPriority is replaced by regeneratedPriority. The ethernetPriorityRegeneration is optional in case no priority regeneration shall be performed. In case a ethernetPriorityRegeneration is defined it shall have 8 mappings, one for each priority.			
<b>Base</b>	ARObject, Referrable			
<b>Aggregated by</b>	CouplingPortDetails.ethernetPriorityRegeneration			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ingressPriority	PositiveInteger	1	attr	Message priority of the incoming message. range: 0-7
regenerated Priority	PositiveInteger	1	attr	Regenerated message priority. range: 0-7

**Table 3.74: EthernetPriorityRegeneration**

<b>Class</b>	<b>CouplingPortTrafficClassAssignment</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the assignment of Traffic Class to a frame.			
<b>Base</b>	ARObject, Referrable			
<b>Aggregated by</b>	CouplingPortDetails.ethernetTrafficClassAssignment			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
priority	PositiveInteger	0..8	attr	Defines a priority which is mapped onto a Traffic Class.
trafficClass	PositiveInteger	1	attr	Defines the Traffic Class which is assigned. range: 0-7

**Table 3.75: CouplingPortTrafficClassAssignment**

### 3.3.6.6.4 Ethernet VLAN Configuration

For each VLAN identifier a table is necessary which stores at which egress port the corresponding VLAN is tagged or untagged. For an 8-port switch, this table could look like the following example where T stands for tagging and U for untagging:

VLAN-Id	Port number							
	1	2	3	4	5	6	7	8
1	T	T	-	U	-	-	-	T
2	T	U	-	T	-	-	-	T
...								
4094								

**Table 3.76: VLAN Forwarding table**

Incoming packets which contain a VLAN-ID of e.g. 1 can be forwarded to the ports 1, 2, 4, and 8. At ports 1, 2, and 8 these packets will be transmitted with the VLAN tag and at port 4 the tag will be removed. If a broadcast message with e.g. VLAN-ID 2 will be received at port 2 it will be forwarded to port 1, 4, and 8. The other ports 3, 5, 6, and 7 are not in the same VLAN. Thus, the packet will not be forwarded to these egress ports. The table considers only messages which contain a VLAN-ID within the switch.

`CouplingPort.vlanMembership` defines specific attributes to the behavior a packet with a specific VLAN-ID shall have on this `CouplingPort`.

**[TPS\_SYST\_03004] VLAN specific sending behavior** [The `VlanMembership.sendActivity` defines for a `CouplingPort` and VLAN the sending behavior:

- `sentTagged`: packet is sent at this `CouplingPort` with the defined VLAN-ID
- `sentUntagged`: packet is sent at this `CouplingPort` but the VLAN-ID is removed before sending
- `notSent`: packet is not sent at this `CouplingPort`

](*RS\_SYST\_00052*)


Another table specifies a port-based modification of the VLAN-ID or an insertion of the VLAN-ID into the Ethernet message:

Port number	1	2	3	4	5	6	7	8
VLAN-Id	2	-	-	6	-	-	-	-

**Table 3.77: Ingress VLAN Modification/Insertion Table**

In this example, all incoming messages at port one will get the VLAN-Id 2 no matter whether they already had one before. At port 4, all incoming messages will get a 6 as their VLAN-Id. At the remaining ports, no VLAN-Ids will be inserted and an existing VLAN-Id in the Ethernet-message will remain without modification.

**[TPS\_SYST\_03005] VLAN re-tagging** [All incoming messages at a `CouplingPort` where the `CouplingPort.vlanModifier` is defined shall be tagged with the VLAN-Id defined in `CouplingPort.vlanModifier`. This tagging is performed regardless whether the message already has a VLAN tag or is untagged, an existing VLAN tag shall be overwritten.] (*RS\_SYST\_00052*)

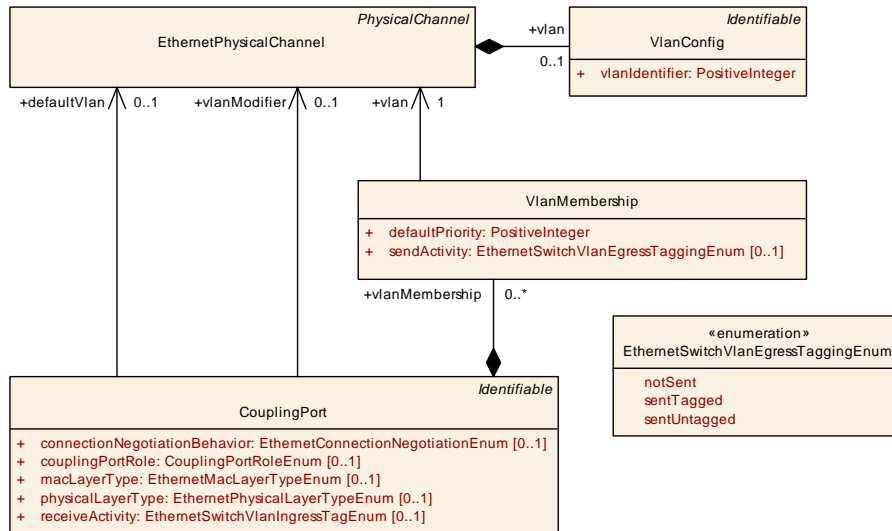

**Figure 3.15: VLAN Modification**

<b>Enumeration</b>	<b>EthernetSwitchVlanEgressTaggingEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Defines the VLAN tag sending behavior.
<b>Aggregated by</b>	<a href="#">VlanMembership.sendActivity</a>
<b>Literal</b>	<b>Description</b>
notSent	will not be sent <b>Tags:</b> atp.EnumerationLiteralIndex=0
sentTagged	sent with its VLAN tag <b>Tags:</b> atp.EnumerationLiteralIndex=1
sentUntagged	sent without a VLAN tag <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 3.78: EthernetSwitchVlanEgressTaggingEnum**

### 3.3.6.6.5 Semi-static DHCP server configuration

The ECU which manages the Ethernet switch may run a semi-static DHCP server.

**[TPS\_SYST\_03013] Semi-static DHCP server configuration** [In order to be able to assign always the same IP-address to a dedicated DHCP client, the DHCP server needs the information at which switch port the DHCP request with the specific MAC address has been received. With this switch port information the DHCP server will assign the IP-address according to the `VlanMembership.dhcpAddressAssignment`.

This allows the assignment of MAC addresses by the Tier 1 and assignment of IP addresses by the OEM. With this mechanism it is also possible to assign different IP addresses to several VLANs at the same port. | (RS\_SYST\_00052)

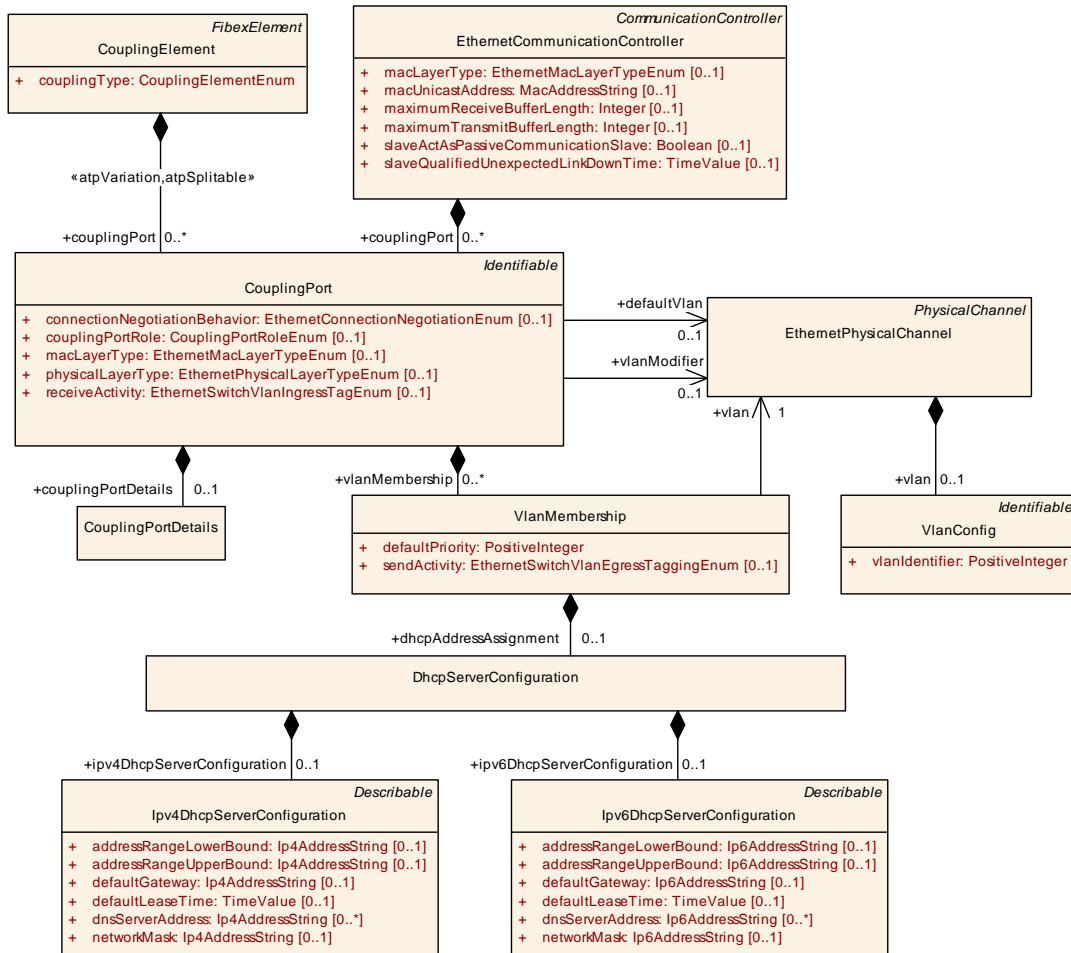


Figure 3.16: Semi-static DHCP configuration

<b>Class</b>	<b>DhcpServerConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the configuration of DHCP servers that are running on the network endpoint. It is possible that an Ipv4DhcpServer and an Ipv6DhcpServer run on the same Ecu.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	VlanMembership.dhcpAddressAssignment			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ipv4DhcpServer Configuration	Ipv4DhcpServer Configuration	0..1	aggr	Configuration of a IPv4 DHCP server that runs on the network endpoint.
ipv6DhcpServer Configuration	Ipv6DhcpServer Configuration	0..1	aggr	Configuration of a IPv6 DHCP server that runs on the network endpoint.

Table 3.79: DhcpServerConfiguration

<b>Class</b>	<b>Ipv4DhcpServerConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the configuration of a IPv4 DHCP server that runs on the network endpoint.			
<b>Base</b>	<i>ARObject</i> , <i>Describable</i>			
<b>Aggregated by</b>	<a href="#">DhcpServerConfiguration.ipv4DhcpServerConfiguration</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
addressRange LowerBound	<a href="#">Ip4AddressString</a>	0..1	attr	Lower range of IP addresses to be issued to DHCP clients. IPv4 Address. Notation: 255.255.255.255.
addressRange UpperBound	<a href="#">Ip4AddressString</a>	0..1	attr	Upper range of IP addresses to be issued to DHCP clients. Pv4 Address. Notation: 255.255.255.255.
defaultGateway	<a href="#">Ip4AddressString</a>	0..1	attr	IP address of the default gateway. Notation 255.255.255.255
defaultLease Time	TimeValue	0..1	attr	Amount of time in seconds that a client may keep the IP address.
dnsServer Address	<a href="#">Ip4AddressString</a>	*	attr	IP addresses of preconfigured DNS servers. Notation 255.255.255.255 <b>Tags:</b> xml.namePlural=DNS-SERVER-ADDRESSES
networkMask	<a href="#">Ip4AddressString</a>	0..1	attr	Default network mask to be used by DHCP clients. Notation 255.255.255.255

**Table 3.80: Ipv4DhcpServerConfiguration**

<b>Class</b>	<b>Ipv6DhcpServerConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the configuration of a IPv6 DHCP server that runs on the network endpoint.			
<b>Base</b>	<i>ARObject</i> , <i>Describable</i>			
<b>Aggregated by</b>	<a href="#">DhcpServerConfiguration.ipv6DhcpServerConfiguration</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
addressRange LowerBound	<a href="#">Ip6AddressString</a>	0..1	attr	Lower range of IP addresses to be issued to DHCP clients. IPv6 Address. Notation: FFFF:...:FFFF.
addressRange UpperBound	<a href="#">Ip6AddressString</a>	0..1	attr	Upper range of IP addresses to be issued to DHCP clients. IPv6 Address. Notation: FFFF:...:FFFF.
defaultGateway	<a href="#">Ip6AddressString</a>	0..1	attr	IP address of the default gateway. Notation 255.255.255.255
defaultLease Time	TimeValue	0..1	attr	Amount of time in seconds that a client may keep the IP address.
dnsServer Address	<a href="#">Ip6AddressString</a>	*	attr	IP addresses of preconfigured DNS servers. Notation: FFFF:...:FFFF. <b>Tags:</b> xml.namePlural=DNS-SERVER-ADDRESSES
networkMask	<a href="#">Ip6AddressString</a>	0..1	attr	Default network mask to be used by DHCP clients. Notation 255.255.255.255

**Table 3.81: Ipv6DhcpServerConfiguration**

### 3.3.6.7 Tcplp stack configuration properties

The [EcuInstance](#) references the following elements and allows to set Ecu specific Tcplp stack configuration options in the System Description:

- [EthIpProps](#) - used to configure IPv4 and IPv6
- [EthTcpIpProps](#) - used to configure TCP and UDP

- [EthTcpIpIcmpProps](#) - used to configure ICMP

### 3.3.6.7.1 IP configuration properties

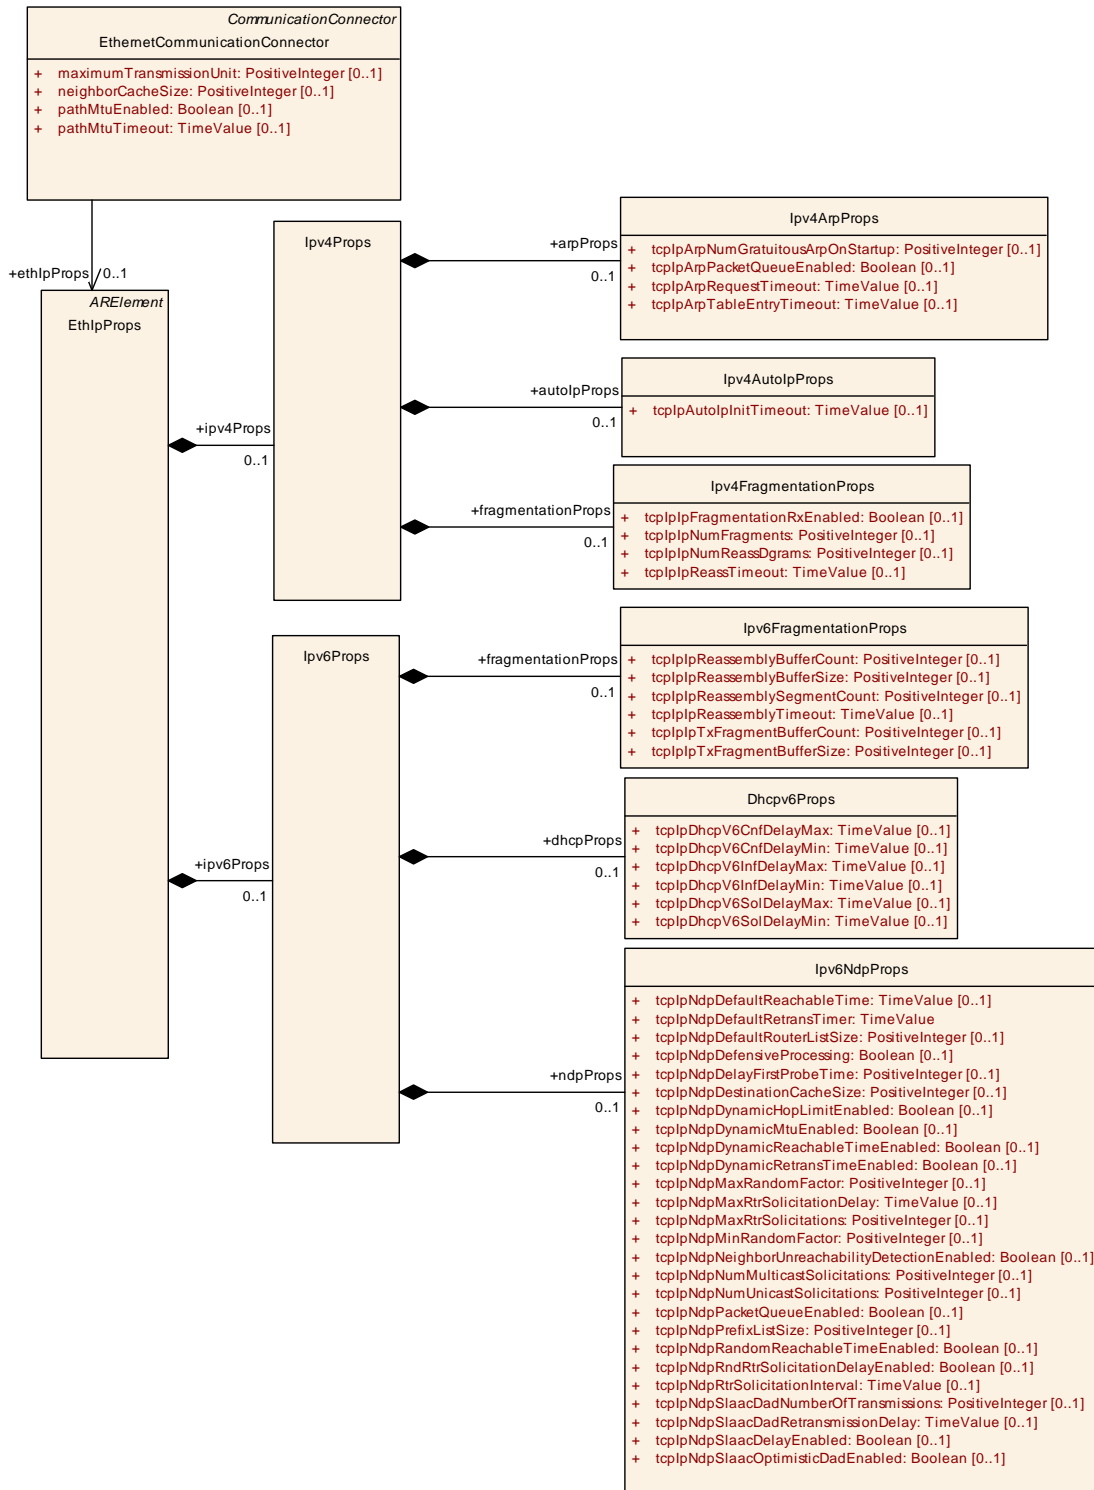


Figure 3.17: Ecu specific IP configuration options

<b>Class</b>	<b>EthIpProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class is used to configure the EcuInstance specific IP attributes. <b>Tags:</b> atp.recommendedPackage=EthIpProps			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ipv4Props	<a href="#">Ipv4Props</a>	0..1	aggr	Configuration options for IPv4.
ipv6Props	<a href="#">Ipv6Props</a>	0..1	aggr	Configuration options for IPv6.

**Table 3.82: EthIpProps**

<b>Class</b>	<b>Ipv4Props</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class specifies the configuration options for IPv4.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">EthIpProps.ipv4Props</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
arpProps	<a href="#">Ipv4ArpProps</a>	0..1	aggr	Configuration properties for the ARP (Address Resolution Protocol).
autolpProps	<a href="#">Ipv4AutolpProps</a>	0..1	aggr	Configuration options for Auto-IP (automatic private IP addressing).
fragmentation Props	<a href="#">Ipv4Fragmentation Props</a>	0..1	aggr	Configuration options for IPv4 packet fragmentation/reassembly.

**Table 3.83: Ipv4Props**

<b>Class</b>	<b>Ipv4ArpProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Specifies the configuration options for the ARP (Address Resolution Protocol).			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">Ipv4Props.arpProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcplpArpNum GratuitousArp OnStartup	PositiveInteger	0..1	attr	This attribute specifies the number of gratuitous ARP replies which shall be sent on assignment of a new IP address.
tcplpArpPacket QueueEnabled	Boolean	0..1	attr	This attribute enables (TRUE) or disables (FALSE) support of the ARP Packet Queue according to IETF RFC 1122, section 2.3.2.2.
tcplpArp Request Timeout	TimeValue	0..1	attr	This attribute specifies a timeout in seconds for the validity of ARP requests. After the transmission of an ARP request the Tcplp shall skip the transmission of any further ARP requests to the same destination within a duration of tcplpArpRequestTimeout seconds. (IETF RFC 1122, section 2.3.2.1).
tcplpArpTable EntryTimeout	TimeValue	0..1	attr	This attribute specifies the timeout in seconds after which an unused ARP entry is removed.

**Table 3.84: Ipv4ArpProps**



**[constr\_5126]** Value range of [Ipv4ArpProps.tcpIpArpNumGratuitousArpOnStartup](#) [If defined, the value of [Ipv4ArpProps.tcpIpArpNumGratuitousArpOnStartup](#) shall be in the range of 0..255.]()

<b>Class</b>	<b>Ipv4AutolpProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Specifies the configuration options for Auto-IP (automatic private IP addressing).			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">Ipv4Props.autolpProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcpIpAutolpInitTimeout	TimeValue	0..1	attr	This attribute specifies the time in seconds Auto-IP waits at startup, before beginning with ARP probing. This delay is used to give DHCP time to acquire a lease in case a DHCP server is present.

**Table 3.85: Ipv4AutolpProps**

<b>Class</b>	<b>Ipv4FragmentationProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Specifies the configuration options for IPv4 packet fragmentation/reassembly.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">Ipv4Props.fragmentationProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcpIpFragmentationRxEnabled	Boolean	0..1	attr	Enables (TRUE) or disables (FALSE) support for reassembling of incoming datagrams that are fragmented according to IETF RFC 815 (IP Datagram Reassembly Algorithms).
tcpIpNumFragments	PositiveInteger	0..1	attr	Specifies the maximum number of IP fragments per datagram.
tcpIpNumReassDgrams	PositiveInteger	0..1	attr	Specifies the maximum number of fragmented IP datagrams that can be reassembled in parallel.
tcpIpReassTimeout	TimeValue	0..1	attr	Specifies the timeout in [s] after which an incomplete datagram gets discarded.

**Table 3.86: Ipv4FragmentationProps**

**[constr\_5127]** Value range of [Ipv4FragmentationProps.tcpIpIpNumFragments](#) [If defined, the value of [Ipv4FragmentationProps.tcpIpIpNumFragments](#) shall be in the range of 0..255.]()

**[constr\_5128]** Value range of [Ipv4FragmentationProps.tcpIpIpNumReassDgrams](#) [If defined, the value of [Ipv4FragmentationProps.tcpIpIpNumReassDgrams](#) shall be in the range of 0..65535.]()

<b>Class</b>	<b>Ipv6Props</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class specifies the configuration options for IPv6.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">EthIpProps.ipv6Props</a>			





Class		Ipv6Props		
Attribute	Type	Mult.	Kind	Note
dhcpProps	Dhcpv6Props	0..1	aggr	Configuration properties for DHCPv6.
fragmentation Props	Ipv6Fragmentation Props	0..1	aggr	Configuration properties for IPv6 packet fragmentation/reassembly.
ndpProps	Ipv6NdpProps	0..1	aggr	Configuration properties for the Neighbor Discovery Protocol for IPv6.

**Table 3.87: Ipv6Props**

Class		Ipv6FragmentationProps		
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	This meta-class specifies the configuration options for IPv6 packet fragmentation/reassembly.			
Base	ARObject			
Aggregated by	Ipv6Props.fragmentationProps			
Attribute	Type	Mult.	Kind	Note
tcpIplp Reassembly BufferCount	PositiveInteger	0..1	attr	Number of buffers that can be used for fragment reassembly. In case of a reassembly error or if not all fragments are received in time this buffer will be blocked until the specified "Fragment Reassembly Timeout" has been exceeded.  A value of 0 disables fragment reassembly.
tcpIplp Reassembly BufferSize	PositiveInteger	0..1	attr	Size of each fragment tx buffer in bytes.
tcpIplp Reassembly SegmentCount	PositiveInteger	0..1	attr	Specifies the maximum number of consecutive data segments that can be managed in each reassembly buffer. If all fragments are received in order, only one segment will be needed.  To deal with fragments received out of order this value should be configured bigger than 1.
tcpIplp Reassembly Timeout	TimeValue	0..1	attr	Specifies the timeout in seconds after which an incomplete datagram gets discarded.
tcpIplpTx FragmentBuffer Count	PositiveInteger	0..1	attr	These buffers will be used if the IPv6 receives packets from the upper layer that do not fit into the MTU and thus must be fragmented.  A value of 0 disables tx fragmentation.
tcpIplpTx FragmentBuffer Size	PositiveInteger	0..1	attr	Size of each fragment tx buffer in bytes.

**Table 3.88: Ipv6FragmentationProps**

**[constr\_5129]** Value range of [Ipv6FragmentationProps.tcpIpIpReassemblyBufferCount](#) [If defined, the value of [Ipv6FragmentationProps.tcpIpIpReassemblyBufferCount](#) shall be in the range of 0..255.]()

**[constr\_5130]** Value range of [Ipv6FragmentationProps.tcpIpIpReassemblyBufferSize](#) [If defined, the value of [Ipv6FragmentationProps.tcpIpIpReassemblyBufferSize](#) shall be in the range of 1500..65535.]()

**[constr\_5131] Value range of `Ipv6FragmentationProps.tcpIpIpReassemblyTimeout`** [If defined, the value of `Ipv6FragmentationProps.tcpIpIpReassemblyTimeout` shall be in the range of 0.001..100.]()

**[constr\_5132] Value range of `Ipv6FragmentationProps.tcpIpIpReassemblySegmentCount`** [If defined, the value of `Ipv6FragmentationProps.tcpIpIpReassemblySegmentCount` shall be in the range of 1..255.]()

**[constr\_5133] Value range of `Ipv6FragmentationProps.tcpIpIpTxFragmentBufferCount`** [If defined, the value of `Ipv6FragmentationProps.tcpIpIpTxFragmentBufferCount` shall be in the range of 1..1000.]()

**[constr\_5134] Value range of `Ipv6FragmentationProps.tcpIpIpTxFragmentBufferSize`** [If defined, the value of `Ipv6FragmentationProps.tcpIpIpTxFragmentBufferSize` shall be in the range of 1500..65535.]()

<b>Class</b>	<b>Dhcpv6Props</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class specifies the configuration options for DHCPv6.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">Ipv6Props.dhcpProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
<code>tcpIpDhcpV6CnfDelayMax</code>	TimeValue	0..1	attr	Maximum delay in seconds before sending the first Confirm message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.
<code>tcpIpDhcpV6CnfDelayMin</code>	TimeValue	0..1	attr	Minimum delay in seconds before the first Confirm message will be sent.
<code>tcpIpDhcpV6InfDelayMax</code>	TimeValue	0..1	attr	Maximum delay in seconds before sending the first Information Request message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.
<code>tcpIpDhcpV6InfDelayMin</code>	TimeValue	0..1	attr	Minimum delay (s) before the first Information Request message will be sent.
<code>tcpIpDhcpV6SolDelayMax</code>	TimeValue	0..1	attr	Maximum delay in seconds before sending the first Solicit message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.
<code>tcpIpDhcpV6SolDelayMin</code>	TimeValue	0..1	attr	Minimum delay (s) before the first Solicit message will be sent.

**Table 3.89: Dhcpv6Props**

**[constr\_5135] Value range of `Dhcpv6Props.tcpIpDhcpV6CnfDelayMin` and `Dhcpv6Props.tcpIpDhcpV6CnfDelayMax`** [If defined, the value of `Dhcpv6Props.tcpIpDhcpV6CnfDelayMin` and the value of `Dhcpv6Props.tcpIpDhcpV6CnfDelayMax` shall be in the range of 0..100 and the value of `Dhcpv6Props.tcpIpDhcpV6CnfDelayMax` shall be greater than the value of `Dhcpv6Props.tcpIpDhcpV6CnfDelayMin`.]()

**[constr\_5136] Value range of `Dhcpv6Props.tcpIpDhcpV6InfDelayMin` and `Dhcpv6Props.tcpIpDhcpV6InfDelayMax`** [If defined, the value of `Dhcpv6Props.tcpIpDhcpV6InfDelayMin` and the value of `Dhcpv6Props`.

`tcpIpDhcpV6InfDelayMax` shall be in the range of 0..100 and the value of `Dhcpv6Props.tcpIpDhcpV6InfDelayMax` shall be greater than the value of `Dhcpv6Props.tcpIpDhcpV6InfDelayMin`.|()

**[constr\_5137] Value range of `Dhcpv6Props.tcpIpDhcpV6SolDelayMin` and `Dhcpv6Props.tcpIpDhcpV6SolDelayMax`** [If defined, the value of `Dhcpv6Props.tcpIpDhcpV6SolDelayMin` and the value of `Dhcpv6Props.tcpIpDhcpV6SolDelayMax` shall be in the range of 0..100 and the value of `Dhcpv6Props.tcpIpDhcpV6SolDelayMax` shall be greater than the value of `Dhcpv6Props.tcpIpDhcpV6SolDelayMin`.|()

<b>Class</b>	<b>Ipv6NdpProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class specifies the configuration options for the Neighbor Discovery Protocol for IPv6.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	Ipv6Props.ndpProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcpIpNdpDefaultReachableTime	TimeValue	0..1	attr	Configuration of the ReachableTime (s) specified in [RFC4861 6.3.2. Host Variables].
tcpIpNdpDefaultRetransTimer	TimeValue	1	attr	Configures the default value (s) for the RetransTimer variable specified in [RFC4861 6.3.2. Host Variables].
tcpIpNdpDefaultRouterListSize	PositiveInteger	0..1	attr	Maximum number of default router entries.
tcpIpNdpDefensiveProcessing	Boolean	0..1	attr	If enabled the NDP shall only process Neighbor Advertisements which are received in reaction to a previously transmitted Neighbor Solicitation as well as skipping updates to the Neighbor Cache based on received Neighbor Solicitations. If disabled all Neighbor Advertisements and Solicitations shall be processed as specified in RFC4861.
tcpIpNdpDelayFirstProbeTime	PositiveInteger	0..1	attr	Delay before sending the first NUD probe in (s).
tcpIpNdpDestinationCacheSize	PositiveInteger	0..1	attr	Maximum number of entries in the destination cache.
tcpIpNdpDynamicHopLimitEnabled	Boolean	0..1	attr	If enabled the default hop limit may be reconfigured based on received Router Advertisements.
tcpIpNdpDynamicMtuEnabled	Boolean	0..1	attr	Allow dynamic reconfiguration of link MTU via Router Advertisements.
tcpIpNdpDynamicReachableTimeEnabled	Boolean	0..1	attr	If enabled the default Reachable Time value may be reconfigured based on received Router Advertisements.
tcpIpNdpDynamicRetransTimeEnabled	Boolean	0..1	attr	If enabled the default Retransmit Timer value may be reconfigured based on received Router Advertisements.
tcpIpNdpMaxRandomFactor	PositiveInteger	0..1	attr	Maximum random factor used for randomization
tcpIpNdpMaxRtrSolicitationDelay	TimeValue	0..1	attr	Maximum delay before the first Router Solicitation will be sent after interface initialization in (s).





Class	Ipv6NdpProps			
tcpIpNdpMaxRtrSolicitations	PositiveInteger	0..1	attr	Maximum number of Router Solicitations that will be sent before the first Router Advertisement has been received.
tcpIpNdpMinRandomFactor	PositiveInteger	0..1	attr	Minimum random factor used for randomization
tcpIpNdpNeighborUnreachabilityDetectionEnabled	Boolean	0..1	attr	Neighbor Unreachability Detection is used to remove unused entries from the neighbor cache. This feature is a basic feature of NDP and should be turned on.
tcpIpNdpNumMulticastSolicitations	PositiveInteger	0..1	attr	Maximum number of multicast solicitations that will be sent when performing address resolution.
tcpIpNdpNumUnicastSolicitations	PositiveInteger	0..1	attr	Maximum number of unicast solicitations that will be sent when performing Neighbor Unreachability Detection.
tcpIpNdpPacketQueueEnabled	Boolean	0..1	attr	Enables (TRUE) or disables (FALSE) support of a NDP Packet Queue according to IETF RFC 4861, section 7.2.2.
tcpIpNdpPrefixListSize	PositiveInteger	0..1	attr	Maximum number of entries in the on-link prefix list.
tcpIpNdpRandomReachableTimeEnabled	Boolean	0..1	attr	If enabled the value of ReachableTime will be multiplied with a random value between MIN_RANDOM_FACTOR and MAX_RANDOM_FACTOR in order to prevent multiple nodes from transmitting at exactly the same time.
tcpIpNdpRndRtrSolicitationDelayEnabled	Boolean	0..1	attr	If enabled the first router solicitation will be delayed randomly from [0..MAX_RTR_SOLICITATION_DELAY]. Otherwise the first router solicitation will be sent after exactly MAX_RTR_SOLICITATION_DELAY milliseconds.
tcpIpNdpRtrSolicitationInterval	TimeValue	0..1	attr	Interval between consecutive Router Solicitations in (s).
tcpIpNdpSlaacDadNumberOfTransmissions	PositiveInteger	0..1	attr	Number of Neighbor Solicitations that have to be unanswered in order to set an autoconfigured address to PREFERRED (usable) state.
tcpIpNdpSlaacDadRetransmissionDelay	TimeValue	0..1	attr	Sets the maximum value for the address configuration delay (s).
tcpIpNdpSlaacDelayEnabled	Boolean	0..1	attr	If enabled transmission of the first DAD Neighbor Solicitation will be delayed by a random value from [0..MAX_DAD_DELAY].
tcpIpNdpSlaacOptimisticDadEnabled	Boolean	0..1	attr	Enable Optimistic Duplicate Address Detection (DAD) according to RFC4429.

**Table 3.90: Ipv6NdpProps**

**[constr\_5138] Value range of Ipv6NdpProps.tcpIpNdpSlaacDadNumberOfTransmissions** [If defined, the value of Ipv6NdpProps.tcpIpNdpSlaacDadNumberOfTransmissions shall be in the range of 0..254.]()

**[constr\_5139] Value range of Ipv6NdpProps.tcpIpNdpSlaacDadRetransmissionDelay** [If defined, the value of Ipv6NdpProps.tcpIpNdpSlaacDadRetransmissionDelay shall be in the range of 0..10.]()

**[constr\_5140] Value range of `Ipv6NdpProps.tcpIpNdpDefaultReachableTime`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpDefaultReachableTime` shall be in the range of 0..120.]()

**[constr\_5141] Value range of `Ipv6NdpProps.tcpIpNdpDefaultRetransTimer`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpDefaultRetransTimer` shall be in the range of 0..60.]()

**[constr\_5142] Value range of `Ipv6NdpProps.tcpIpNdpNumUnicastSolicitations`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpNumUnicastSolicitations` shall be in the range of 0..255.]()

**[constr\_5143] Value range of `Ipv6NdpProps.tcpIpNdpNumMulticastSolicitations`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpNumMulticastSolicitations` shall be in the range of 0..255.]()

**[constr\_5144] Value range of `Ipv6NdpProps.tcpIpNdpDelayFirstProbeTime`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpDelayFirstProbeTime` shall be in the range of 0..60.]()

**[constr\_5145] Value range of `Ipv6NdpProps.tcpIpNdpMinRandomFactor`** [If defined, the value of `Ipv6NdpProps.tcpIpNdpMinRandomFactor` shall be in the range of 0..100.]()

**[constr\_5146] Value range of `Ipv6NdpProps.tcpIpNdpMaxRandomFactor`** [If defined, the value of `Ipv6NdpProps.tcpIpNdpMaxRandomFactor` shall be in the range of 0..100.]()

**[constr\_5147] Value range of `Ipv6NdpProps.tcpIpNdpDestinationCacheSize`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpDestinationCacheSize` shall be in the range of 1..254.]()

**[constr\_5148] Value range of `Ipv6NdpProps.tcpIpNdpPrefixListSize`** [If defined, the value of `Ipv6NdpProps.tcpIpNdpPrefixListSize` shall be in the range of 1..254.]()

**[constr\_5149] Value range of `Ipv6NdpProps.tcpIpNdpDefaultRouterListSize`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpDefaultRouterListSize` shall be in the range of 2..254.]()

**[constr\_5151] Value range of `Ipv6NdpProps.tcpIpNdpMaxRtrSolicitations`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpMaxRtrSolicitations` shall be in the range of 0..255.]()

**[constr\_5152] Value range of `Ipv6NdpProps.tcpIpNdpMaxRtrSolicitationDelay`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpMaxRtrSolicitationDelay` shall be in the range of 0.001..60.]()

**[constr\_5153] Value range of `Ipv6NdpProps.tcpIpNdpRtrSolicitationInterval`**  
[If defined, the value of `Ipv6NdpProps.tcpIpNdpRtrSolicitationInterval` shall be in the range of 0.001..60.]()

### 3.3.6.7.2 TCP and UDP configuration properties

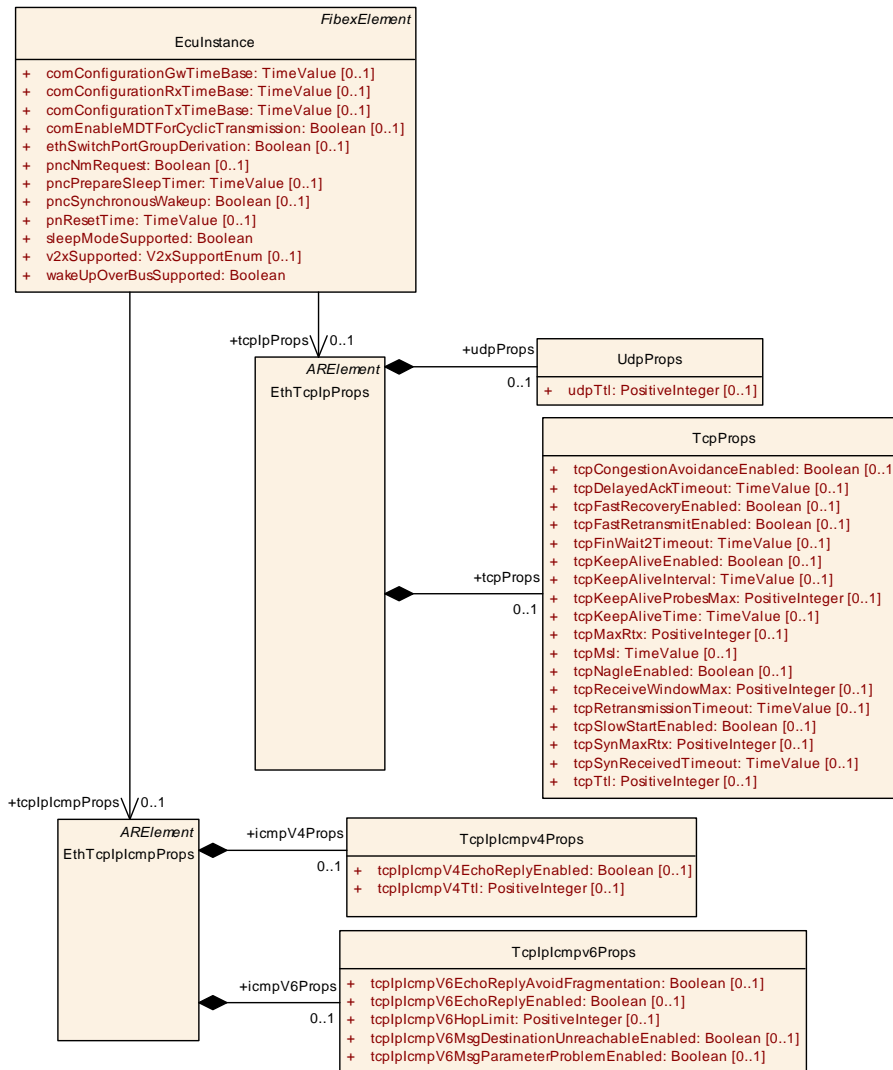


Figure 3.18: Ecu specific TCP/UDP and ICMP configuration options

<b>Class</b>	<b>EthTcplpProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class is used to configure the EcuInstance specific Tcplp Stack attributes. <b>Tags:</b> atp.recommendedPackage=EthTcplpProps			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcpProps	<a href="#">TcpProps</a>	0..1	aggr	TCP configuration properties
udpProps	<a href="#">UdpProps</a>	0..1	aggr	UDP configuration properties

Table 3.91: EthTcplpProps



<b>Class</b>	<b>UdpProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class specifies the configuration options for UDP (User Datagram Protocol).			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">EthTcplpProps.udpProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
udpTtl	PositiveInteger	0..1	attr	Default Time-to-live value of outgoing UDP packets.

**Table 3.92: UdpProps**

**[constr\_5118] Value range of [UdpProps.udpTtl](#)** [If defined, the value of [UdpProps.udpTtl](#) shall be in the range of 1..255.]()

<b>Class</b>	<b>TcpProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class specifies the configuration options for TCP (Transmission Control Protocol).			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">EthTcplpProps.tcpProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcpCongestion Avoidance Enabled	Boolean	0..1	attr	Enables (TRUE) or disables (FALSE) support of TCP congestion avoidance algorithm according to IETF RFC 5681.
tcpDelayedAck Timeout	TimeValue	0..1	attr	The maximal time an acknowledgement is delayed for transmission in seconds.
tcpFast Recovery Enabled	Boolean	0..1	attr	Enables (TRUE) or disables (FALSE) support of TCP Fast Recovery according to IETF RFC 5681.
tcpFast Retransmit Enabled	Boolean	0..1	attr	Enables (TRUE) or disables (FALSE) support of TCP Fast Retransmission according to IETF RFC 5681.
tcpFin Wait2Timeout	TimeValue	0..1	attr	Timeout in [s] to receive a FIN from the remote node (after this node has initiated connection termination), i.e. maximum time waiting in FINWAIT-2 for a connection termination request from the remote TCP.
tcpKeepAlive Enabled	Boolean	0..1	attr	Enables (TRUE) or disables (FALSE) TCP Keep Alive Probes according to IETF RFC 1122 chapter 4.2.3.6.
tcpKeepAlive Interval	TimeValue	0..1	attr	Specifies the interval in seconds between subsequent keepalive probes.
tcpKeepAlive ProbesMax	PositiveInteger	0..1	attr	Maximum number of times that a TCP Keep Alive is retransmitted before the connection is closed.
tcpKeepAlive Time	TimeValue	0..1	attr	Specifies the time in [s] between the last data packet sent (simple ACKs are not considered data) and the first keepalive probe.
tcpMaxRtx	PositiveInteger	0..1	attr	Maximum number of times that a TCP segment is retransmitted before the TCP connection is closed. This parameter is only valid if tcpRetransmissionTimeout is configured. Note: This parameter also applies for FIN retransmissions.
tcpMsl	TimeValue	0..1	attr	Maximum segment lifetime in [s].







Class	TcpProps			
tcpNagle Enabled	Boolean	0..1	attr	Enables (TRUE) or disables (FALSE) support of Nagle's algorithm according to IETF RFC 1122 (chapter 4.2.3.4 When to Send Data). If enabled the Nagle's algorithm is activated per default for all TCP sockets, but can be deactivated per Socket (with the attribute TcpTp.nagle Algorithm).
tcpReceive WindowMax	PositiveInteger	0..1	attr	Default value of maximum receive window in bytes.
tcp Retransmission Timeout	TimeValue	0..1	attr	Timeout in [s] before an unacknowledged TCP segment is sent again. If the timeout is disabled, no TCP segments shall be retransmitted.
tcpSlowStart Enabled	Boolean	0..1	attr	Enables (TRUE) or disables (FALSE) support of TCP slow start algorithm according to IETF RFC 5681.
tcpSynMaxRtx	PositiveInteger	0..1	attr	Maximum number of times that a TCP SYN is retransmitted.
tcpSynReceived Timeout	TimeValue	0..1	attr	Timeout in [s] to complete a remotely initiated TCP connection establishment, i.e. maximum time waiting in SYN-RECEIVED for a confirming connection request acknowledgement after having both received and sent a connection request.
tcpTtl	PositiveInteger	0..1	attr	Default Time-to-live value of outgoing TCP packets.

**Table 3.93: TcpProps**

**[constr\_5119] Value range of `TcpProps.tcpTtl`** [If defined, the value of `TcpProps.tcpTtl` shall be in the range of 1..255.]()

**[constr\_5120] Value range of `TcpProps.tcpDelayedAckTimeout`** [If defined, the value of `TcpProps.tcpDelayedAckTimeout` shall be in the range of 0..0.5.]()

**[constr\_5121] Value range of `TcpProps.tcpSynMaxRtx`** [If defined, the value of `TcpProps.tcpSynMaxRtx` shall be in the range of 0..255.]()

**[constr\_5122] Value range of `TcpProps.tcpMaxRtx`** [If defined, the value of `TcpProps.tcpMaxRtx` shall be in the range of 0..255.]()

**[constr\_5123] Value range of `TcpProps.tcpKeepAliveProbesMax`** [If defined, the value of `TcpProps.tcpKeepAliveProbesMax` shall be in the range of 0..65535.]()

**[constr\_5124] Value range of `TcpProps.tcpReceiveWindowMax`** [If defined, the value of `TcpProps.tcpReceiveWindowMax` shall be in the range of 0..65535.]()

### 3.3.6.7.3 ICMP configuration properties

<b>Class</b>	<b>EthTcplpcmpProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class is used to configure the EcuInstance specific ICMP (Internet Control Message Protocol) attributes <b>Tags:</b> atp.recommendedPackage=EthTcplpcmpProps			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
icmpV4Props	<a href="#">Tcplpcmpv4Props</a>	0..1	aggr	ICMPv4 configuration properties
icmpV6Props	<a href="#">Tcplpcmpv6Props</a>	0..1	aggr	ICMPv6 configuration properties

**Table 3.94: EthTcplpcmpProps**

<b>Class</b>	<b>Tcplpcmpv4Props</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class specifies the configuration options for ICMPv4 (Internet Control Message Protocol).			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">EthTcplpcmpProps.icmpV4Props</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcplpcmpV4EchoReplyEnabled	Boolean	0..1	attr	This attribute enables or disables transmission of ICMP echo reply message in case of a ICMP echo reception.
tcplpcmpV4Ttl	PositiveInteger	0..1	attr	This attribute is only relevant in case that ICMP (Internet Control Message Protocol) is used. It specifies the default Time-to-live value of outgoing ICMP packets.

**Table 3.95: Tcplpcmpv4Props**

<b>Class</b>	<b>Tcplpcmpv6Props</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class specifies the configuration options for ICMPv6 (Internet Control Message Protocol).			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">EthTcplpcmpProps.icmpV6Props</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcplpcmpV6EchoReplyAvoidFragmentation	Boolean	0..1	attr	This attribute defines whether the echo reply is only transmitted in case that the incoming ICMPv6 Echo Request (Pings) fits the MTU of the respective interface, i.e. can be transmitted without IPv6 fragmentation.
tcplpcmpV6EchoReplyEnabled	Boolean	0..1	attr	This attribute enables or disables transmission of ICMP echo reply message in case of a ICMP echo reception.
tcplpcmpV6HopLimit	PositiveInteger	0..1	attr	Default Hop-Limit value of outgoing ICMPv6 packets.
tcplpcmpV6MsgDestinationUnreachableEnabled	Boolean	0..1	attr	This attribute Enables/Disables the transmission of Destination Unreachable Messages.





Class	TcpIplcmpv6Props			
tcpIplcmpV6MsgParameterProblemEnabled	Boolean	0..1	attr	If enabled an ICMPv6 parameter problem message will be sent if a received packet has been dropped due to unknown options or headers that are found in the packet.

**Table 3.96: TcpIplcmpv6Props**


**[constr\_5125]** Value range of [TcpIpIcmpv4Props.tcpIpIcmpV4Ttl](#) [If defined, the value of [TcpIpIcmpv4Props.tcpIpIcmpV4Ttl](#) shall be in the range of 1..255.]  
( )

**[constr\_5154]** Value range of [TcpIpIcmpv6Props.tcpIpIcmpV6HopLimit](#) [If defined, the value of [TcpIpIcmpv6Props.tcpIpIcmpV6HopLimit](#) shall be in the range of 1..255.]  
( )

### 3.3.6.8 Ethernet wake-up and sleep on dataline

AUTOSAR supports the wake-up and sleep mechanism that complies with the Open Alliance TC10 specification (OA TC10, see [17]).

**[TPS\_SYST\_03052]** Enabling of wake-up and sleep mechanism [The wake-up and sleep mechanism that complies with the Open Alliance TC10 specification (OA TC10) is enabled by defining the reference from [CouplingPort](#) to [EthernetWakeUpSleepOnDatalineConfig](#) in the role [wakeUpSleepOnDatalineConfig](#).]  
( )

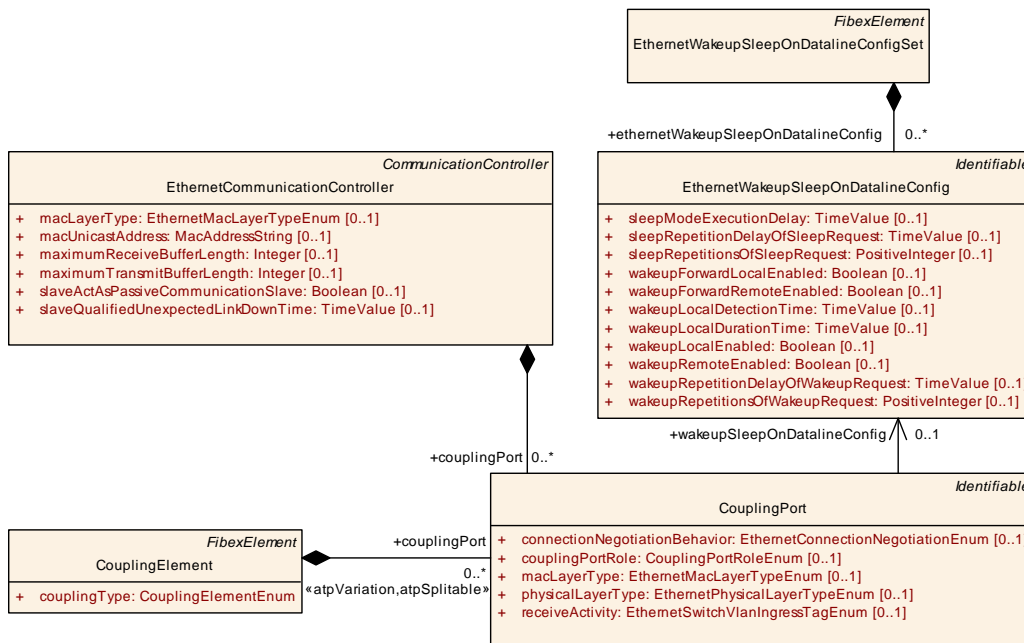

**Figure 3.19: Wake on dataline model elements**

The OA TC10 specifies service primitives to abstract the Ethernet hardware for ECUs connected via Automotive Ethernet (<bandwidth>Base-T1). Drivers use the service primitives to trigger a wake-up and sleep on dataline and react on appropriate indications: *Sleep.request*, *Sleep.indication*, *Wakeup.indication*, *Wakeup.request*, *Sleep-Fail.indication*, and *SleepAbort.request*.

Note:

- *SleepAbort.request* is not considered by AUTOSAR, as the AUTOSAR Network Management ensures a synchronized shutdown on the network. Thus, there is no need for an ECU to reject a *Sleep.request* upon the Network Management.
- *Inhibit.Indication* is not a service primitive, but an optional interface. This optional interface is not considered in AUTOSAR.

<b>Class</b>	<b>EthernetWakeupSleepOnDatalineConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	EthernetWakeupSleepOnDatalineConfigSet is the main element that aggregates different config set regarding the wakeup and sleep on data line.  An EthernetWakeupSleepOnDatalineConfigSet could aggregate multiple different configurations regarding the wakeup and sleep on dataline (EthernetWakeupSleepOnDatalineConfig).			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">EthernetWakeupSleepOnDatalineConfigSet.ethernetWakeupSleepOnDatalineConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
sleepMode ExecutionDelay	TimeValue	0..1	attr	Delay in seconds to perform a sleep request if the Ethernet hardware (PHY) detect a pending wake-up. This is used to avoid the race condition, if a sleep was requested while a wake-up of a neighboring PHY was received via a local wake-up connection (e.g. I/O pin).
sleepRepetition DelayOfSleep Request	TimeValue	0..1	attr	Delay in seconds for a repetition of a sleep request. This is used to retry a synchronized shutdown of the connected Ethernet hardware (PHY) of the link partner.
sleep RepetitionsOf SleepRequest	PositiveInteger	0..1	attr	Count of repetitions for a sleep on dataline. If a sleep is rejected by the linked communication partner, the sleep is repeated until the count of repetitions exceed. If count of repetitions exceed, the Ethernet hardware (PHY) transit to sleep without acknowledgement of the connected link partner.
wakeupForward LocalEnabled	Boolean	0..1	attr	If enabled, then a remote wake-up received on the physical dataline (e.g. 100BASE-T1) is forwarded as local wake-up (e.g. via an I/O pin). If disabled, then a remote wake-up is not forwarded as local wake-up.
wakeupForward RemoteEnabled	Boolean	0..1	attr	If enabled, then a local wake-up is forwarded to the physical dataline (e.g. 100BASE-T1). If disabled, then a local wake-up is not forwarded to the physical dataline.
wakeupLocal DetectionTime	TimeValue	0..1	attr	Specify the detection time if a local wake-up in seconds is present on the local wake-up connection (e.g. I/O pin). A local wake-up has to be present at least for wakeupLocal DetectionTime to be detected a valid local wake-up.
wakeupLocal DurationTime	TimeValue	0..1	attr	Specify the duration of a local wake-up in seconds to be present on the local wake-up connection (e.g. I/O pin).
wakeupLocal Enabled	Boolean	0..1	attr	If enabled, then a local wake-up received via a local connection (e.g. I/O pin) shall be detected by the Ethernet hardware (PHY). If disabled, Ethernet hardware is not reacting on a local wake-up.





Class	EthernetWakeupSleepOnDatalineConfig			
wakeupRemoteEnabled	Boolean	0..1	attr	If enabled, then a remote wake-up received via the physical dataline (e.g. 100BASE-T1) shall be detected by the Ethernet hardware (PHY). If disabled, Ethernet hardware is not reaction on a remote wake-up.
wakeupRepetitionDelayOfWakeupRequest	TimeValue	0..1	attr	Delay in seconds for a repetition of a wake-up. This is used to increase the reliability in the network, such that an ECU which initiates the wake-up does repeat the wake-up and increase the probability that affected ECUs receive the wake-up.
wakeupRepetitionsOfWakeupRequest	PositiveInteger	0..1	attr	Count of repetitions for a wake-up. This is used to increase the reliability in the network, such that an ECU which initiates the wake-up does repeat the wake-up and increase the probability that affected ECUs receive the wake-up.

**Table 3.97: EthernetWakeupSleepOnDatalineConfig**

Class	EthernetWakeupSleepOnDatalineConfigSet			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	This meta-class is the main element that aggregates different config set regarding the ethernet wakeup and sleep on data line. <b>Tags:</b> atp.recommendedPackage=EthernetWakeupSleepOnDatalineConfigSets			
Base	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
Aggregated by	<a href="#">ARPackage.element</a>			
Attribute	Type	Mult.	Kind	Note
ethernetWakeupSleepOnDatalineConfig	<a href="#">EthernetWakeupSleepOnDatalineConfig</a>	*	aggr	The relationship defines a collection of EthernetWakeupSleepOnDatalineConfig configurations which are available.

**Table 3.98: EthernetWakeupSleepOnDatalineConfigSet**

**[constr\_3601] Mandatory attributes of [EthernetWakeupSleepOnDatalineConfig](#)** [The following attributes of [EthernetWakeupSleepOnDatalineConfig](#) shall be defined at the time when the COM Stack is generated:

- [wakeupLocalEnabled](#)
- [wakeupRemoteEnabled](#)

]()

**[constr\_3602] Existence of [wakeupForwardLocalEnabled](#)** [The attribute [wakeupForwardLocalEnabled](#) shall be defined if [wakeupRemoteEnabled](#) is set to TRUE.]()

**[constr\_3603] Existence of [wakeupLocalDurationTime](#)** [The attribute [wakeupLocalDurationTime](#) shall be defined if [wakeupForwardLocalEnabled](#) is set to TRUE.]()

**[constr\_3604] Existence of `wakeupForwardRemoteEnabled`** [The attribute `wakeupForwardRemoteEnabled` shall be defined if `wakeupLocalEnabled` is set to TRUE.]()

**[constr\_3605] Existence of `wakeupLocalDetectionTime`** [The attribute `wakeupLocalDetectionTime` shall be defined if `wakeupForwardRemoteEnabled` is set to TRUE.]()

**[constr\_3606] Values of `wakeupLocalDurationTime` and `wakeupLocalDetectionTime`** [If defined, then the value of `wakeupLocalDurationTime` shall be greater than the value of `wakeupLocalDetectionTime`.]()

**[constr\_3609] Values of `wakeupLocalDurationTime` in the context of a `CouplingElement`** [All `CouplingPorts` which have the reference `wakeupSleepOnDatalineConfig` defined and

- where the `CouplingPorts` are aggregated by the same `CouplingElement` and
- where the referenced `EthernetWakeupSleepOnDatalineConfig` has the attribute `wakeupLocalDurationTime` defined

shall refer to `EthernetWakeupSleepOnDatalineConfigs` where the value of `wakeupLocalDurationTime` is identical for all referencing `CouplingPorts`.]()

**[constr\_3610] Values of `wakeupLocalDetectionTime` in the context of a `CouplingElement`** [All `CouplingPorts` which have the reference `wakeupSleepOnDatalineConfig` defined and

- where the `CouplingPorts` are aggregated by the same `CouplingElement` and
- where the referenced `EthernetWakeupSleepOnDatalineConfig` has the attribute `wakeupLocalDetectionTime` defined

shall refer to `EthernetWakeupSleepOnDatalineConfigs` where the value of `wakeupLocalDetectionTime` is identical for all referencing `CouplingPorts`.]()

Note: **[constr\_3609]** and **[constr\_3610]** ensure the same timing behavior within the used Ethernet hardware (e.g. Ethernet switch), if those `CouplingPorts` reference different `EthernetWakeupSleepOnDatalineConfigs`.

**[constr\_3607] Existence of `sleepRepetitionDelayOfSleepRequest`** [The attribute `sleepRepetitionDelayOfSleepRequest` shall be defined if `sleepRepetitionsOfSleepRequest` is defined and has a value greater than 0.]()

**[constr\_3608] Existence of `wakeupRepetitionDelayOfWakeupRequest`** [The attribute `wakeupRepetitionDelayOfWakeupRequest` shall only be defined if `wakeupRepetitionsOfWakeupRequest` is defined and has a value greater than 0.]()

Note: The OA TC10 [17] wake-up on dataline feature can be used instead of a wake-up line. The different timing behavior has to be considered. If using a wake-up line, the wake-up pulse is present for all connected ECUs at the same point in time. If using wake-up on dataline, the wake-up (WUP / WUR) has to be forwarded by the receiving Ethernet hardware (PHY). The wake-up is propagated over the network and therefore it is sequentially present for the receiving ECUs.

The following chapters describe the behavior in detail with respect to the OA TC10 service primitives and their modelling in the System Template.

### 3.3.6.8.1 Ethernet Communication Controller

**[constr\_3600] Setting of `EthernetCommunicationController.slaveActAsPassiveCommunicationSlave`** [The attribute `EthernetCommunicationController.slaveActAsPassiveCommunicationSlave` may only be set to TRUE, if the following conditions apply:

- the `EthernetCommunicationController` is not referenced by any `NmNode` in the role `controller`
- the `EthernetCommunicationController` aggregates at least one `CouplingPort`
- the `couplingPortRole` of that `CouplingPort` is set to `standardPort`
- the `physicalLayerType` of that `CouplingPort` is set to either `_100BASE_T1` or `_1000BASE_T1`

In all other cases the attribute `slaveActAsPassiveCommunicationSlave` shall be set to FALSE or shall not be defined. ]()

Note: An Ethernet ECU which aggregates an `EthernetCommunicationController` that is acting as a passive slave is not using Nm frames for a synchronized shutdown. A synchronized shutdown has to be provided by the used Ethernet hardware. E.g. Ethernet hardware compliant with Open Alliance TC10.

Note further: It is only allowed for Ethernet ECUs which are NOT maintaining an Ethernet switch on the corresponding communication channel to act as a passive slave. A passive slave follows the communication request of the corresponding communication master.

**[constr\_3611] Existence of `EthernetCommunicationController.slaveQualifiedUnexpectedLinkDownTime`** [The attribute `slaveQualifiedUnexpectedLinkDownTime` shall be defined if `slaveActAsPassiveCommunicationSlave` is set to TRUE. ]()

**[TPS\_SYST\_03053] Semantics of `EthernetCommunicationController.slaveQualifiedUnexpectedLinkDownTime`** [`EthernetCommunicationController.slaveQualifiedUnexpectedLinkDownTime` specifies the time when an




unexpected link down is evaluated as link down and indicated to the AUTOSAR communication stack.

If `slaveActAsPassiveCommunicationSlave` is set to FALSE or not defined, then the communication channel is not acting as a passive communication slave.]()

The link down time qualification is used for an `EthernetCommunicationController` where `slaveActAsPassiveCommunicationSlave` is set to TRUE. The time should cover an error scenario where the corresponding communication master was not able to release the communication by triggering an `Sleep.Request` (e.g. communication master was unexpectedly reset).

### 3.3.6.8.2 Service primitives for wake-up

An Ethernet ECU which wants to communicate with other ECUs within the Ethernet switched network topology has to trigger a wake-up on the network to propagate the communication request to the communication partners. The ECU which triggers the wake-up is the requesting ECU. The requesting ECU calls the service primitive `Wakeup.request` to trigger a wake-up. The wake-up is transmitted via the physical dataline (e.g. 100BASE-T1) to the connected link partner. The wake-up could be a wake-up pulse (WUP), if the link to the connected link partner is down, or a wake-up request (WUR), if the link is up (link is already established).

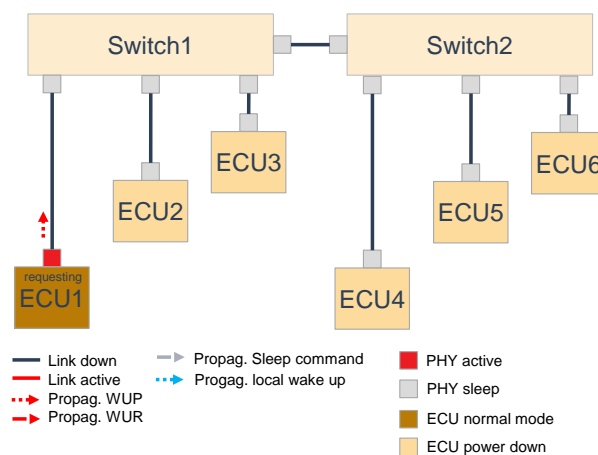


**Figure 3.20: While the link is down on the connected dataline, the PHY of ECU1 transmit a wake-up on the network**

If a WUP is transmitted by ECU1 and received by the Ethernet hardware (PHY) of Switch1, the receiving Ethernet hardware of Switch1 is woken up. After the receiving Ethernet hardware is initialized, the Switch1 is powered up (INHIBIT pin of power supply is set by the PHY (see OA TC10)) and a `Wakeup.indication` is generated.

(Note: If a WUR is transmitted, the receiving Ethernet hardware (PHY) generates immediately a `Wakeup.indication`, because the receiving Ethernet hardware is already




initialized and in normal mode). Simultaneously the received wake-up could be forwarded as local wake-up to the neighboring PHYs of Switch1, if the PHYs are configured accordingly.

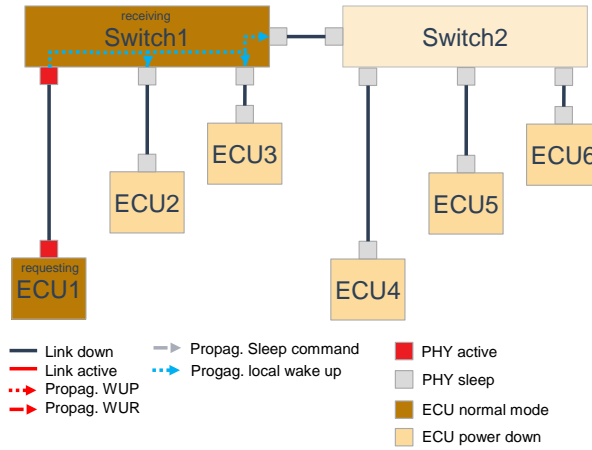

**Figure 3.21: Switch1 is woken up by the PHY that received the wake-up. The received wake-up on the network is forwarded as local wake-up to the neighboring PHYs**

In multi-PHY and Ethernet switch scenarios, a received wake-up is most likely forwarded to all connected link partners (other datalines) without host ECU (ECU that maintain a Ethernet switch) involvement to fulfill wake-up propagation time requirements.

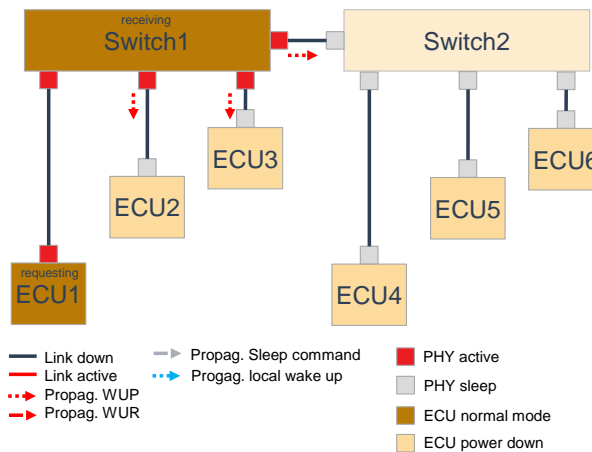


**Figure 3.22: The propagated local wake-up is forwarded by the neighboring PHYs as WUP to the connected ECUs (ECU2, ECU3 and Switch2)**

The forwarding behavior of each PHY can be modelled in the SystemTemplate. Each PHY is modelled as `CouplingPort`. Each `CouplingPort` could enable the OA TC10 compliant wake-up and sleep on dataline by defining a `wakeupSleepOn-DatalineConfig` reference.


### 3.3.6.8.3 Service primitives for sleep

An ECU which is ready to go to sleep calls the service primitive *Sleep.request* (ECU1). The sleep request is transmitted via the physical dataline (e.g. 100BASE-T1) to the connected communication partner as LPS (low power sleep signal), here Switch1. Please note: LPS are send as continues burst with respect to the specified timing in OA TC10.

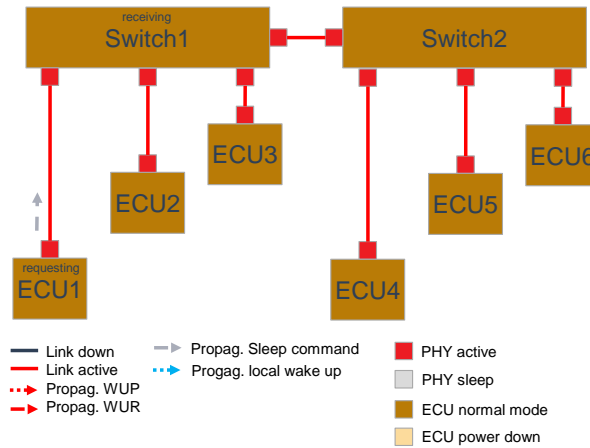

**Figure 3.23: ECU1 triggers a *Sleep.request* and the Ethernet hardware of ECU1 sends LPS on the dataline**


The receiving Ethernet hardware (PHY) generates a *Sleep.indication* to notify the receiving ECU (here Switch1) that the Ethernet hardware (PHY) of the requesting ECU1 is requesting to go to sleep. The receiving Ethernet hardware (PHY) of the connected communication partner follow the defined PHY power mode sequence described in OA TC10 and acknowledge the received *Sleep.request* with a *Sleep.request* back to requesting ECU (ECU1) with respect to the specified timings in OA TC10.

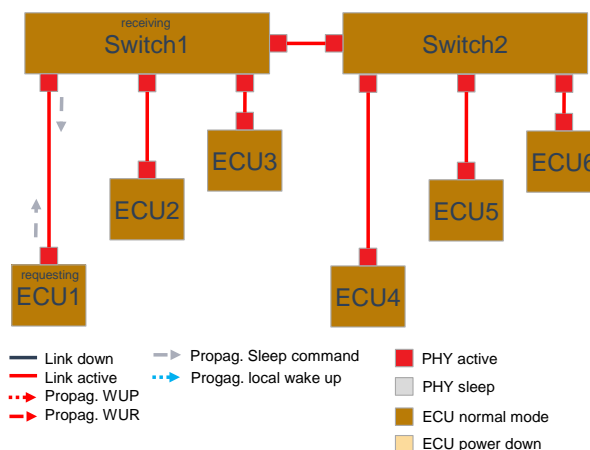

**Figure 3.24: Ethernet hardware (PHY) of Switch1 receives LPS and acknowledges the indicated *Sleep.request* of ECU1 by sending back LPS to ECU1**

If the requesting ECU (ECU1) received a *Sleep.request* from the receiving ECU (Switch1) within the specified time of OA TC10 the Ethernet hardware of both ECUs


(requesting and receiving ECU) transit to sleep state, i.e. the Ethernet hardware of both, ECU1 and Switch1 transit to a low power down mode and the link connection is down.

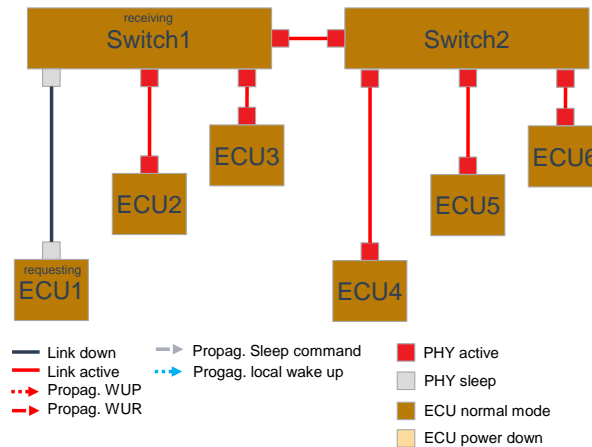

**Figure 3.25: ECU1 send and receive LPS with respect to the specified timings in OA TC10 and therefore the Ethernet hardware (PHY) of ECU1 and Switch1 transit to a low power sleep mode and the link of the dataline is down**

ECUs which participate in an AUTOSAR network management (NM), switch off their communication hardware according to already defined NM shutdown process. Thus, an additional handling in the AUTOSAR stack for an Ethernet communication channel to react on a *Sleep.indication* upon the network management shutdown process is superfluous. The *Sleep.indication* is only evaluated by ECUs which have `Ethernet-CommunicationController.slaveActAsPassiveCommunicationSlave` set to TRUE (see details in chapter 3.3.6.8.4).

If the NM decides to go to sleep, then the linked ECUs may switch off their connected hardware at slightly different points in time (e.g. Ethernet switches switch off their Ethernet switch ports with a configured time delay (see `couplingPortSwitchoffDelay`)). The ECU which earlier switches off the communication hardware will trigger a *Sleep.request*. The connected Ethernet hardware (PHY) of the communication partner will go to sleep according to the defined PHY power mode sequence described in OA TC10. Afterwards the ECU which later switches off its Ethernet hardware has to check the power mode of its Ethernet hardware (PHY). If the Ethernet hardware is already in sleep mode, then the ECU will leave the hardware state as it is and do not trigger a *Sleep.request*. Otherwise the ECU will trigger a *Sleep.request*.

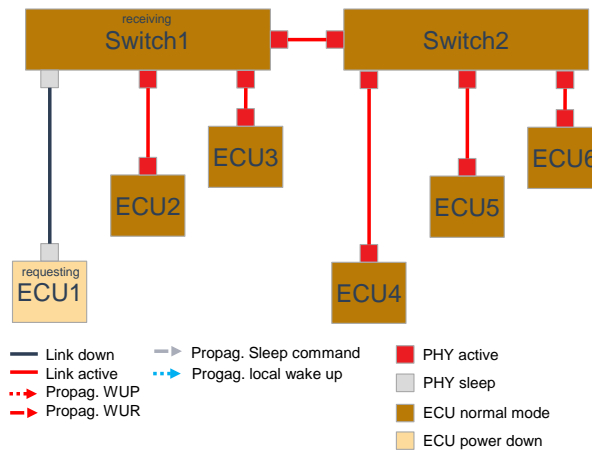

**Figure 3.26: ECU1 (requesting ECU) is already in power down mode, while Switch1 is waiting until `couplingPortSwitchoffDelay` has expired. If `couplingPortSwitchoffDelay` has expired, Switch1 will detect that the Ethernet hardware is already in sleep state and therefore will NOT trigger a *Sleep.request***

According to the specified service primitive *Sleep.AbortRequest*, the receiving ECU could decide to reject a *Sleep.request* via *Sleep.AbortRequest*. AUTOSAR does NOT support the service primitive *Sleep.AbortRequest*, since the AUTOSAR network management (NM) provide a synchronized shut down of the ECUs. Thus, there is no need to enable an explicit reject of a received *Sleep.request*.

Even though the explicit rejection of a *Sleep.request* is NOT supported, the ECU which requested the *Sleep.request* could be indicated that the *Sleep.request* was NOT accepted by the Ethernet hardware (PHY) of the receiving ECU. If the *Sleep.request* was not acknowledge by Ethernet hardware (PHY) of the receiving ECU, the requesting ECU is signalled via the service primitive *SleepFail.indication*. Reason is an error scenario, where the *Sleep.request* was not received by Ethernet hardware of the receiving ECU or the acknowledgement of the *Sleep.request* back to the requesting ECU was lost on the network (e.g. disturbance of the LPS by a EMC pulse, loose contact of the dataline ... a.s.o.). The ECUs are always evaluating if a *SleepFail.indication* was indicated.

The handling of a detected *SleepFail.indication* is modelled by defining the repetition of a *Sleep.request* (`sleepRepetitionsOfSleepRequest`) and the delay to re-trigger a *Sleep.request* (`sleepRepetitionDelayOfSleepRequest`). If the count of repetitions is exceed and *SleepFail.indication* is still signalled, the Ethernet hardware (PHY) is forced to transit to a sleep state and indicate the upper layer of the AUTOSAR communication stack a *Sleep.indication*. This should prevent the requesting ECU to be kept awake if no *Sleep.request* was acknowledged by the receiving ECU.

#### 3.3.6.8.4 Ethernet communication channel that act as passive communication slave

ECUs which are connected to communication channels that do not participate in the AUTOSAR network management can be controlled by a master / slave relationship. The connected Ethernet communication channel is controlled by using the following service primitives: *Wakeup.request*, *Wakeup.indication*, *Sleep.request*, and *Sleep.indication*.

A host ECU (Ethernet ECU which maintains an Ethernet switch) requests to wake-up an Ethernet communication channel of a connected ECU where the corresponding `EthernetCommunicationController` has set `slaveActAsPassiveCommunicationSlave` to TRUE (passive communication slave) by triggering a *Wakeup.request*. The wake-up brings the Ethernet hardware (PHY) of the receiving ECU from a sleep mode to a normal mode. The receiving ECU is powered on and its application may provide data which is consumed by the requesting ECU (communication master).

If the requesting ECU (communication master) decides to shutdown the communication channel, the host ECU request the communication channel to go to sleep by triggering a *Sleep.request*. The requested *Sleep.request* is received by the connected ECU on the communication channel with acts as a communication slave. The received *Sleep.request* will be acknowledged by the Ethernet hardware (PHY) of the receiving ECU (passive communication slave) and simultaneously a *Sleep.indication* is signalled. The receiving ECU evaluates the *Sleep.indication*.

If a *Sleep.indication* is detected, this indication is forwarded to the communication stack and the affected communication channel is released. Additionally the application could be indicated about the communication release to execute some shut down actions. Thus, an Ethernet communication channel which acts as passive communication slave, always follows the *Wakeup.indication/Sleep.indication* of the corresponding communication master. To cover an error scenario where the communication master could not trigger a *Sleep.request*, due to unexpected reset, the receiving ECU, where an Ethernet channel is acting as passive communication slave, has to detect a link down. If an unexpected link down last longer than `slaveQualifiedUnexpectedLinkDownTime`, the Ethernet channel, which is acting as passive communication slave, is released autonomously by the receiving ECU.

### 3.3.7 10BASE-T1S Ethernet

10BASE-T1S is a 10Mbps Single pair Ethernet physical layer technology that is specified by IEEE 802.3cg. The multi-drop feature of 10BASE-T1S allows the usage of a single bus-line to connect ECUs. The PLCA (Physical Layer Collision Avoidance) mechanism avoids collision on PHY level and offers a fair medium access to every participant.

All nodes are identified on the bus via nodeIDs (`plcaLocalNodeId`) starting from 0 (standardized as the referenced head-node). The Head-Node on the PLCA based network controls the traffic on the bus.

**[TPS\_SYST\_02299] Modeling of 10Base-T1S networks** [The modeling of a 10BASE-T1S bus in a System Description is done with a `CouplingPortConnection` that points with the `nodePort` reference to `CouplingPorts` that represent the 10Base-T1S PHYs connected to the network.]()

**[constr\_5157] Mixing of Point-To-Point and Multi-Drop is not allowed in a `CouplingPortConnection`** [The `CouplingPortConnection` is allowed to reference a `CouplingPort` either:

- in the role `firstPort` and/or `secondPort` or
- in the role `nodePort`

]()

In other words a `CouplingPortConnection` shall not use the `firstPort` and/or `secondPort` reference (Point-to-Point) and the `nodePort` reference (Multi-Drop) at the same time.

The PLCA runs cycles on the network. Within each cycle each node with a unique `plcaLocalNodeId` is assigned with a transmit opportunity. The `plcaTransmitOpportunityTimer` is identical for all nodes and is therefore configured in the `CouplingPortConnection`.

The cycle starts with a BEACON that is sent by the head node. During the transmit opportunity the node is able to transmit data or to skip its transmit opportunity. If a node does not need to transmit data the next node is allowed to start its transmit opportunity earlier.

At each BEACON reception client nodes restart their `currentNodeID` counter and increment it every time a Transmit Opportunity is used or yield. If the `currentNodeID` matches the `plcaLocalNodeId`, the corresponding node is allowed to transmit an Ethernet frame for this Transmit Opportunity. The `plcaTransmitOpportunityTimer` is reset for every Transmit Opportunity once the transceiver detects activity on the bus and recognizes the transmission of data. At each Transmit Opportunity no more than one single Ethernet frame will be sent. On the other hand, if a node has the necessity to send more packets in one Transmit Opportunity, a burst mode can be used. The burst mode is configured by `plcaMaxBurstTimer` and `plcaMaxBurstCount`.

**[TPS\_SYST\_02300] Enabling of PLCA on a `CouplingPort`** [The PLCA (Physical Layer Collision Avoidance) mechanism is enabled on a `CouplingPort` if the `plcaProps` are aggregated by the same `CouplingPort`.]()

<b>Class</b>	<b>PlcaProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	This meta-class allows to configure the PLCA (Physical Layer Collision Avoidance) in case 10-BASE-T1S Ethernet is used and PLCA is enabled on the CouplingPort (PHY).			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	CouplingPort.plcaProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
plcaLocalNode Id	PositiveInteger	0..1	attr	This attribute defines the node ID when the PLCA mode for 10BASE-T1S is used.
plcaMaxBurst Count	PositiveInteger	0..1	attr	Defines maximum packets allowed to be transmitted within a TO. This configuration can be different from one ECU to another within the PLCA mixed segment.
plcaMaxBurst Timer	PositiveInteger	0..1	attr	Limits the burst frames in bit time. This configuration can be different from one ECU to another within the PLCA mixed segment. For PLCA burst mode to work properly this timer should be set greater than one IPG.

**Table 3.99: PlcaProps**

**[constr\_5158] Usage of `plcaProps` only allowed on 10BASE-T1S networks** [A `CouplingPort` is allowed to aggregate `plcaProps` only if:


- the `CouplingPort.physicalLayerType` is set to 10BASE-T1S
- the `CouplingPort.macLayerType` is set to xMII
- the `CouplingPort` is referenced by a `CouplingPortConnection` with the `nodePort` reference.

]()

Please note that it is possible to have a mix network with PLCA and CSMA/CD configured nodes.

**[TPS\_SYST\_02301] CSMA/CD configured nodes on a 10BASE-T1S network** [If a `CouplingPort` is referenced by a `CouplingPortConnection` with the `nodePort` reference and the `CouplingPort.physicalLayerType` is set to 10BASE-T1S and this `CouplingPort` does not aggregate `plcaProps` then this `CouplingPort` represents a CSMA/CD configured node in a 10BASE-T1S network.]()

The following example shows a configured 10BASE-T1S network with four nodes in a System Description.

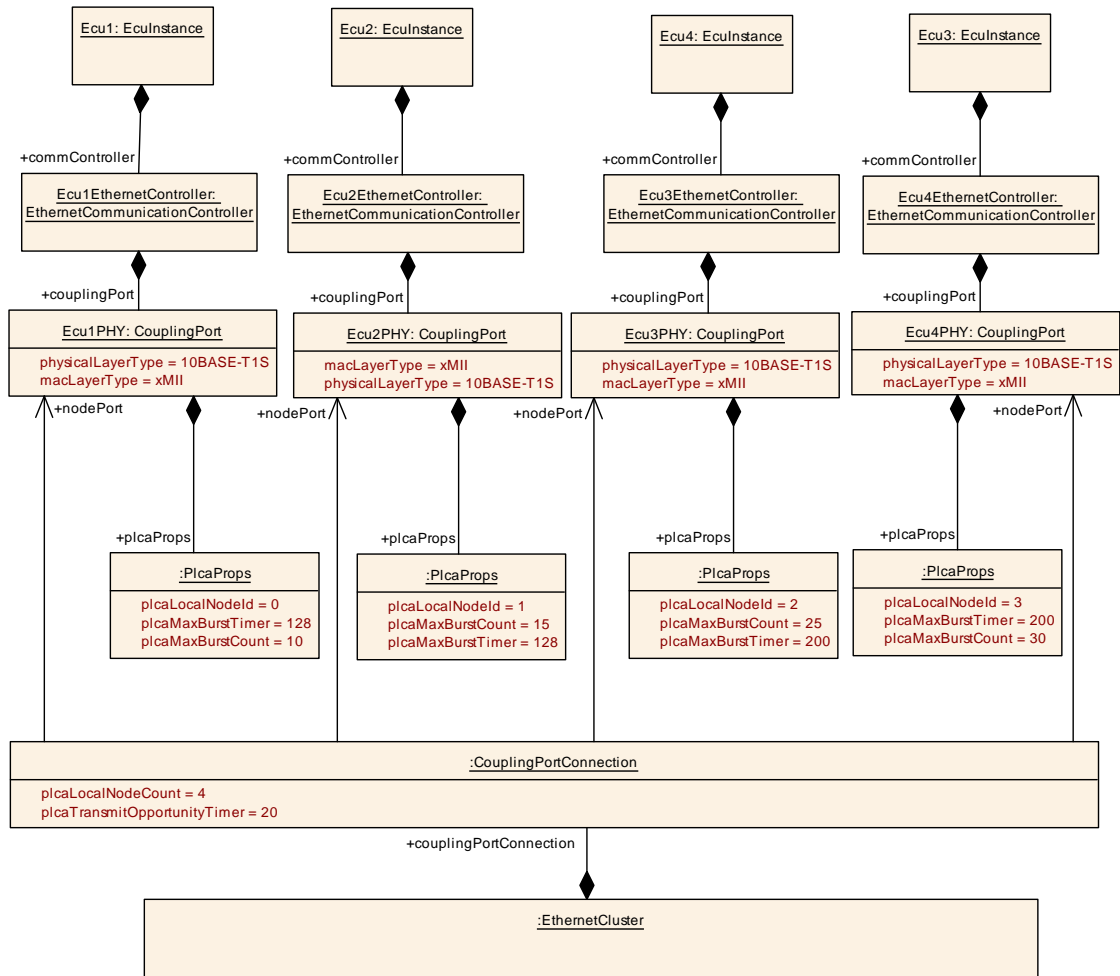

**Figure 3.27: Example for a 10BASE-T1S network description**

**[constr\_5159] Mandatory CouplingPortConnection settings if multi-drop feature is used** [If a CouplingPortConnection uses the nodePort reference then the attribute CouplingPortConnection.plcaLocalNodeCount and the attribute CouplingPortConnection.plcaTransmitOpportunityTimer shall be set to a value.]()

**[constr\_5160] Mandatory PlcaProps settings if multi-drop feature is used** [If a CouplingPort is referenced by a CouplingPortConnection in the role nodePort then the CouplingPort shall aggregate the PlcaProps and the following attributes shall be set to a value:

- plcaMaxBurstCount
- plcaMaxBurstTimer
- plcaLocalNodeId

]()



### 3.3.8 MACsec

MACsec (Media Access Control security) is defined by IEEE standard 802.1AE and operates at the medium access control layer and defines connectionless data confidentiality and integrity for media access independent protocols. The MACsec standard specifies a set of protocols to meet the security requirements for protecting data traversing Ethernet LANs. MACsec allows unauthorized LAN connections to be identified and excluded from communication within the network. In common with IPsec and TLS, MACsec defines a security infrastructure to provide data confidentiality, data integrity and data origin authentication. With security on the MAC layer, protocols not based on IP as well as protocols using multicast can be protected by MACsec.

The MACsec standard relies on the usage of authentic partners, which are called MAC Security Entities (SecYs). The standard organizes this by MACsec Protocol Data Units (MPDU), which resides in the MAC layer (ISO/OSI layer 2). The MAC Security Key Agreement Entity (KaY) will take care of properly configuring and managing of the MAC Security Entities to enable the secure communication channel.

In the System Description the configuration of MACsec is supported on `CouplingPorts` that in turn are aggregated either by a `CouplingElement` or by an `EthernetCommunicationController`. This allows the configuration of MACsec on a switch port or on an `EthernetCommunicationController` of an `EcuInstance`. Please note that the same modeling approach is used in the Adaptive Platform Manifest as well.

**[TPS\_SYST\_02386] MACsec configuration** [A `CouplingPort` that aggregates the `MacSecProps` in the role `macSecProps` defines a MAC Security Entity.]()

**[constr\_5361] MACsec configuration is allowed only on switch ports** [Only a `CouplingElement` with `couplingType` set to `switch` is allowed to aggregate a `CouplingPort` that in turn aggregates the `MacSecProps` in the role `macSecProps`.]()

**[TPS\_SYST\_02387] MAC Security Key Agreement Entity configuration** [The `MacSecLocalKayProps` element that is referenced by the `MacSecProps` in the role `macSecKayConfig` in combination with `MacSecGlobalKayProps` that is referenced by `MacSecLocalKayProps` in the role `globalKayProps` defines the configuration settings for the MACsec Key Agreement that is responsible for the peer discovery and key negotiation to secure the Ethernet link.]()

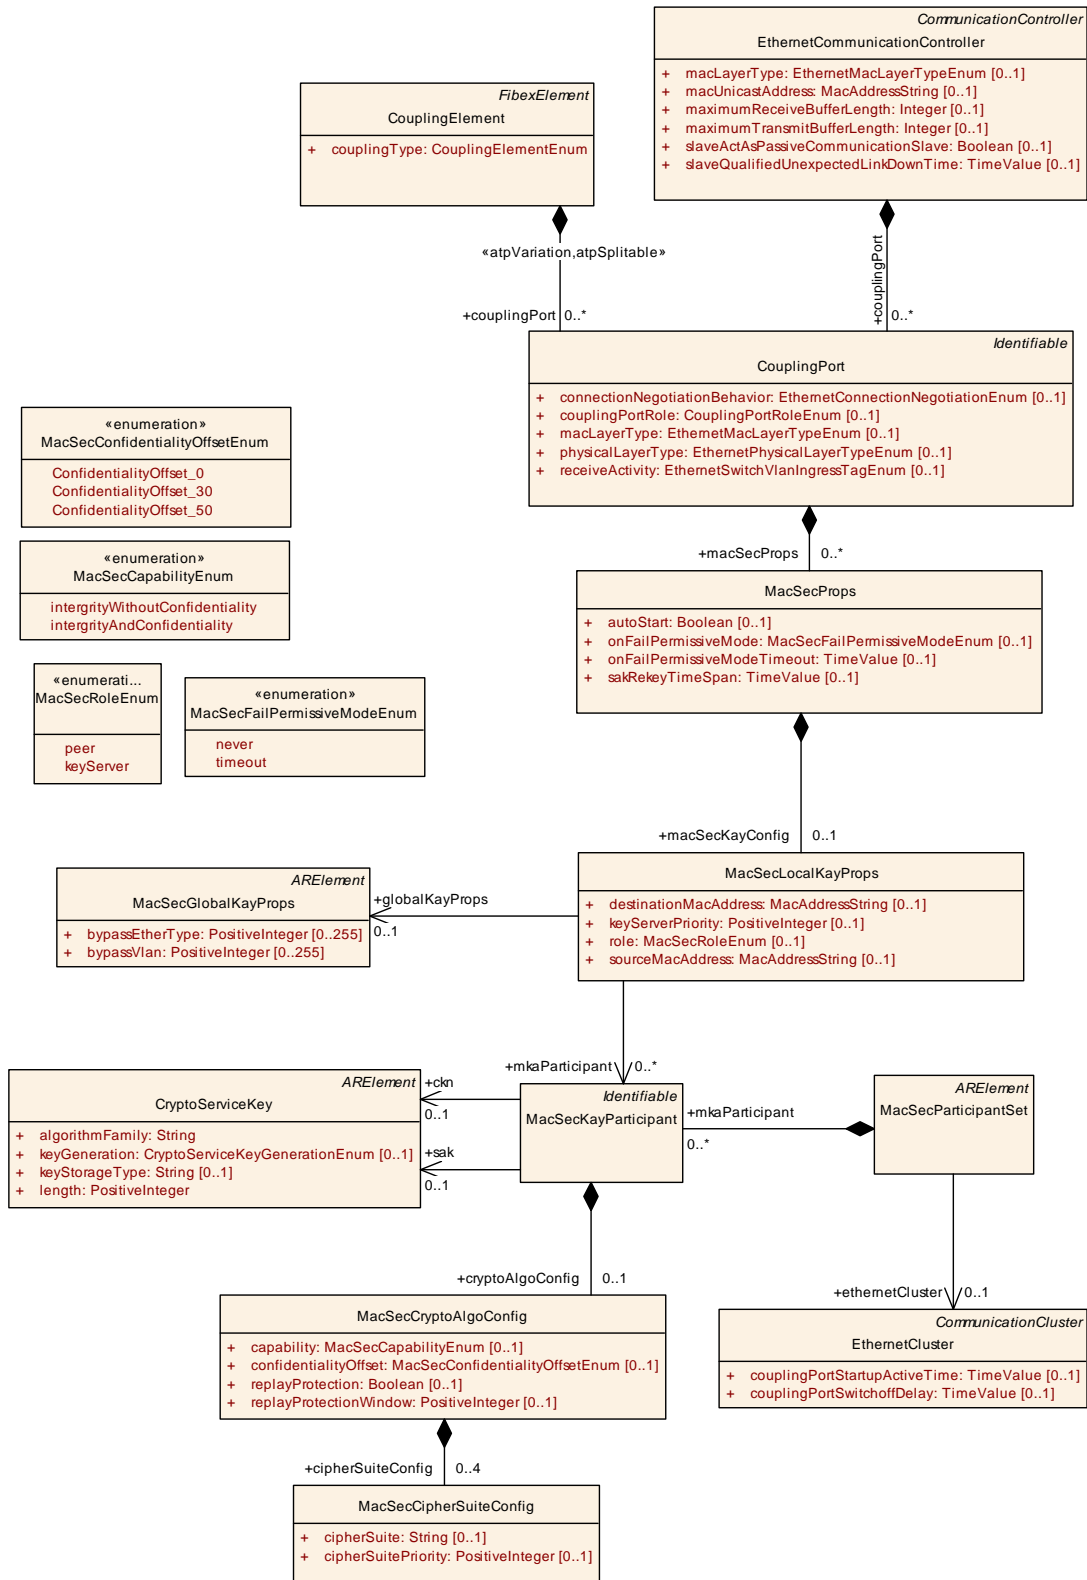


Figure 3.28: MACsec configuration

<b>Class</b>	<b>MacSecProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class allows to configure MACsec (Media access control security) and the MKA (MACsec Key Agreement) for the CouplingPort (PHY). <b>Tags:</b> atp.Status=candidate			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	CouplingPort.macSecProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
autoStart	Boolean	0..1	attr	This attribute defines how the Port Access Entity (PAE) is started: True := Autostart False := Manual Start <b>Tags:</b> atp.Status=candidate
macSecKey Config	<a href="#">MacSecLocalKayProps</a>	0..1	aggr	Properties to configure the MKA instance (KaY) for a controlled CouplingPort (PaE). <b>Tags:</b> atp.Status=candidate
onFail Permissive Mode	<a href="#">MacSecFailPermissive ModeEnum</a>	0..1	attr	This attribute sets the behavior of the Port Access Entity in case MACsec does not succeed. <b>Tags:</b> atp.Status=candidate
onFail Permissive ModeTimeout	TimeValue	0..1	attr	Timeout in seconds to enable the controlled port in case onFailPermissiveMode is set to Timeout. <b>Tags:</b> atp.Status=candidate
sakRekeyTime Span	TimeValue	0..1	attr	Time in seconds to trigger the rekey of an in use SAK (Static Secure Association key). If set to 0, the rekey will not be triggered after a time span. <b>Tags:</b> atp.Status=candidate

**Table 3.100: MacSecProps**

<b>Class</b>	<b>MacSecLocalKayProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	Configuration of the MAC Security Key Agreement Entity (KaY). <b>Tags:</b> atp.Status=candidate			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">MacSecProps.macSecKeyConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
destinationMac Address	MacAddressString	0..1	attr	This attribute defines the destination MAC Address that is used to calculate the ICV (Integrity Check Value). <b>Tags:</b> atp.Status=candidate
globalKayProps	<a href="#">MacSecGlobalKay Props</a>	0..1	ref	Reference to properties that are shared between MAC Security Key Agreement Entities. <b>Tags:</b> atp.Status=candidate
keyServer Priority	PositiveInteger	0..1	attr	This attribute defines the key-server priority. <b>Tags:</b> atp.Status=candidate
mkaParticipant	<a href="#">MacSecKayParticipant</a>	*	ref	Reference to MKA participant settings supported on the CouplingPort. <b>Tags:</b> atp.Status=candidate





Class		MacSecLocalKayProps		
role	<a href="#">MacSecRoleEnum</a>	0..1	attr	Role of the MAC Security Key Agreement Entity <b>Tags:</b> atp.Status=candidate
sourceMac Address	MacAddressString	0..1	attr	This attribute defines the source MAC Address that is used to calculate the ICV (Integrity Check Value). <b>Tags:</b> atp.Status=candidate

**Table 3.101: MacSecLocalKayProps**

Class		MacSecGlobalKayProps		
Package	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
Note	Configuration of the MAC Security Key Agreement Entity properties that are shared by different KaY configurations. <b>Tags:</b> atp.Status=candidate atp.recommendedPackage=MacSecGlobalKayProps			
Base	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
Aggregated by	<a href="#">ARPackage.element</a>			
Attribute	Type	Mult.	Kind	Note
bypassEther Type	PositiveInteger	0..255	attr	This attribute is used to define EtherTypes that are bypassed by MACsec. The providedEtherType will not be MACsec protected. <b>Tags:</b> atp.Status=candidate
bypassVlan	PositiveInteger	0..255	attr	This attribute is used to define VLAN-IDs that are bypassed by MACsec. The provided VLAN-IDs will not be MACsec protected. (VLAN-ID 0 is interpreted as no-VLAN → Bypass untagged traffic) <b>Tags:</b> atp.Status=candidate

**Table 3.102: MacSecGlobalKayProps**

Class		MacSecParticipantSet		
Package	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
Note	Collection of MACsec Kay Participants on an Ethernet Link. <b>Tags:</b> atp.Status=candidate atp.recommendedPackage=MacSecKayParticipantSets			
Base	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
Aggregated by	<a href="#">ARPackage.element</a>			
Attribute	Type	Mult.	Kind	Note
ethernetCluster	<a href="#">EthernetCluster</a>	0..1	ref	Reference to the EthernetCluster (Link) on which the KaY participants are located <b>Tags:</b> atp.Status=candidate
mkaParticipant	<a href="#">MacSecKayParticipant</a>	*	aggr	Configuration of a MKA Participant. <b>Tags:</b> atp.Status=candidate

**Table 3.103: MacSecParticipantSet**

<b>Class</b>	<b>MacSecKayParticipant</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class configures a MKA participant. <b>Tags:</b> atp.Status=candidate atp.recommendedPackage=MacSecKayParticipants			
<b>Base</b>	ARObject, <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	MacSecParticipantSet.mkaParticipant			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ckn	CryptoServiceKey	0..1	ref	Reference to the key where the ckn (Connectivity Association key) is stored. <b>Tags:</b> atp.Status=candidate
cryptoAlgo Config	MacSecCryptoAlgo Config	0..1	aggr	Cryptography that is used by the MKA Participant. <b>Tags:</b> atp.Status=candidate
sak	CryptoServiceKey	0..1	ref	Reference to the key where SAK shall be stored. <b>Tags:</b> atp.Status=candidate

**Table 3.104: MacSecKayParticipant**

<b>Class</b>	<b>MacSecCryptoAlgoConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class defines the cryptography configuration for MACsec. <b>Tags:</b> atp.Status=candidate			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	MacSecKayParticipant.cryptoAlgoConfig			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
capability	MacSecCapabilityEnum	0..1	attr	This attribute defines the MACsec capability. <b>Tags:</b> atp.Status=candidate
cipherSuite Config	MacSecCipherSuite Config	0..4	aggr	Cipher suite configuration to use with MACsec. <b>Tags:</b> atp.Status=candidate
confidentiality Offset	MacSecConfidentiality OffsetEnum	0..1	attr	The MACsec confidentiality offset specifies the number of bytes starting from the frame header. MACsec encrypts only the bytes after the offset in a frame. <b>Tags:</b> atp.Status=candidate
replayProtection	Boolean	0..1	attr	This attribute is used to configure the MACsec replay protection. <b>Tags:</b> atp.Status=candidate
replayProtection Window	PositiveInteger	0..1	attr	In case replay protection is active, this attribute defines the replay protection window. <b>Tags:</b> atp.Status=candidate

**Table 3.105: MacSecCryptoAlgoConfig**

<b>Class</b>	<b>MacSecCipherSuiteConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class defines the cipher suite configuration to use with MACsec. cipherSuitePriority is present in case the MKA instance acts as a Key Server to select the cipher suite to use for MACsec. <b>Tags:</b> atp.Status=candidate			





<b>Class</b>	<b>MacSecCipherSuiteConfig</b>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">MacSecCryptoAlgoConfig.cipherSuiteConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
cipherSuite	String	0..1	attr	Cipher Suite to use for MACsec. <b>Tags:</b> atp.Status=candidate
cipherSuite Priority	PositiveInteger	0..1	attr	In case the MKA instance acts as a Key Server, the priority is used to select the Cipher Suite to use with MACsec from the supported Ciphers. <b>Tags:</b> atp.Status=candidate

**Table 3.106: MacSecCipherSuiteConfig**

[TPS\_SYST\_02388] Standardized values for the attribute [cipherSuite](#) of meta-class [MacSecCipherSuiteConfig](#) [The following values for [MacSecCipherSuiteConfig.cipherSuite](#) are reserved by the AUTOSAR standard:

- GCM-AES-128
- GCM-AES-256
- GCM-AES-XPN-128
- GCM-AES-XPN-256

]()

[TPS\_SYST\_02389] Semantics of [MacSecCipherSuiteConfig.cipherSuitePriority](#) [The [MacSecCryptoAlgoConfig](#) can define up to four [MacSecCipherSuiteConfigs](#). If more then one [MacSecCipherSuiteConfig](#) is defined then the [cipherSuitePriority](#) decides about the chosen cipher. The [cipherSuitePriority](#) of value 1 means the highest priority and 4 means the lowest priority.]

()

<b>Enumeration</b>	<b>MacSecConfidentialityOffsetEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	This enum defines the MACsec capability options. <b>Tags:</b> atp.Status=candidate
<b>Aggregated by</b>	<a href="#">MacSecCryptoAlgoConfig.confidentialityOffset</a>
<b>Literal</b>	<b>Description</b>
Confidentiality Offset_0	confidentiality offset of 0. <b>Tags:</b> atp.EnumerationLiteralIndex=0
Confidentiality Offset_30	confidentiality offset of 30. <b>Tags:</b> atp.EnumerationLiteralIndex=1
Confidentiality Offset_50	confidentiality offset of 50. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 3.107: MacSecConfidentialityOffsetEnum**

<b>Enumeration</b>	<b>MacSecCapabilityEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	This enum defines the MACsec capability options. <b>Tags:</b> atp.Status=candidate
<b>Aggregated by</b>	<a href="#">MacSecCryptoAlgoConfig.capability</a>
<b>Literal</b>	<b>Description</b>
intergrityAndConfidentiality	Option that ensures confidentiality and integrity <b>Tags:</b> atp.EnumerationLiteralIndex=1
intergrityWithoutConfidentiality	Option that ensures integrity without confidentiality <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 3.108: MacSecCapabilityEnum**

<b>Enumeration</b>	<b>MacSecRoleEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	This enum defines the MACsec Role options. <b>Tags:</b> atp.Status=candidate
<b>Aggregated by</b>	<a href="#">MacSecLocalKayProps.role</a>
<b>Literal</b>	<b>Description</b>
keyServer	Port acts in the KeyServer role <b>Tags:</b> atp.EnumerationLiteralIndex=1
peer	Port acts in the peer role <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 3.109: MacSecRoleEnum**

<b>Enumeration</b>	<b>MacSecFailPermissiveModeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	Behavior options of the Port Access Entity in case MACsec does not succeed. <b>Tags:</b> atp.Status=candidate
<b>Aggregated by</b>	<a href="#">MacSecProps.onFailPermissiveMode</a>
<b>Literal</b>	<b>Description</b>
never	The controlled port will never be set to enabled if the participants cannot establish and successfully use a MACsec Secure Channel. <b>Tags:</b> atp.EnumerationLiteralIndex=0
timeout	The controlled port will be set to enabled and MACsec will not be used in the port if the timeout value (onFailPermissiveModeTimeout) is reached and the following conditions apply: <ul style="list-style-type: none"> <li>- A participant belonging to the same CA was recognized and authenticated.</li> <li>- A secure channel could be established.</li> <li>- Both participants can transmit and receive MACsec protected traffic through the SC.</li> </ul> <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 3.110: MacSecFailPermissiveModeEnum**

For MACsec to start up, a key distribution based on MAC Security Key Agreement runs first. The pre-shared key is identified by the [ckn](#). While one might choose only to communicate encrypted, the key distribution itself needs to be unencrypted but integrity protected. In addition, user may choose to allow additional Ethernet frames unprotected, e.g., for installing keys into ECUs. These frames can be selected via

so-called bypass rules based on e.g., EtherType or VLAN-ID defined in [MacSecGlobalKeyProps](#).

Each [MacSecKeyParticipant](#) that is referenced by [MacSecLocalKeyProps](#) in the role [mkaParticipant](#) defines the Connectivity Association Key and the [MacSecCryptoAlgoConfig](#). The [MacSecKeyParticipant](#) settings in the connectivity association need to match on both [CouplingPorts](#) of the link to enable MACsec.


For better control and predictability, the MAC Security Key Agreement participant that will get the KeyServer role (the node generating the MACsec Key for this link) can be configured by [role](#).

### 3.3.9 CDD

The System Template allows the integration of custom bus systems on the topology level.

**[TPS\_SYST\_01127] CDD Topology support** [The elements [UserDefinedCluster](#), [UserDefinedPhysicalChannel](#), [UserDefinedCommunicationConnector](#) and [UserDefinedCommunicationController](#) can be used to describe alternative communication technologies (e.g. I2C, USB, serial line) that are integrated in AUTOSAR as Complex Drivers.] ([RS\\_SYST\\_00044](#))

The Pdu-based communication via Complex Drivers is described in chapter [6.14](#).

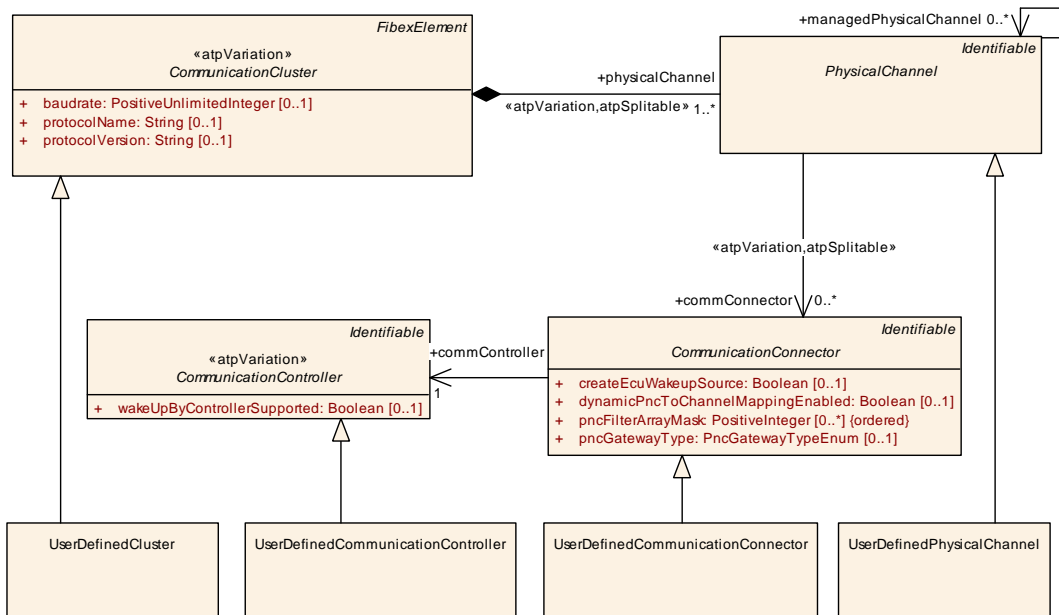

**Figure 3.29: User defined topology elements**



<b>Class</b>	<<atpVariation>> <b>UserDefinedCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::CddSupport			
<b>Note</b>	This element allows the modeling of arbitrary Communication Clusters (e.g. bus systems that are not supported by AUTOSAR). <b>Tags:</b> atp.recommendedPackage=CommunicationClusters			
<b>Base</b>	ARObject, CollectableElement, CommunicationCluster, FibexElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.111: UserDefinedCluster**

<b>Class</b>	<b>UserDefinedPhysicalChannel</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::CddSupport			
<b>Note</b>	This element allows the modeling of arbitrary Physical Channels.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, PhysicalChannel, Referrable			
<b>Aggregated by</b>	CommunicationCluster.physicalChannel			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.112: UserDefinedPhysicalChannel**

<b>Class</b>	<b>UserDefinedCommunicationConnector</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::CddSupport			
<b>Note</b>	This element allows the modeling of arbitrary Communication Connectors.			
<b>Base</b>	ARObject, CommunicationConnector, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	EcuInstance.connector, MachineDesign.communicationConnector			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.113: UserDefinedCommunicationConnector**

<b>Class</b>	<<atpVariation>> <b>UserDefinedCommunicationController</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::CddSupport			
<b>Note</b>	This element allows the modeling of arbitrary Communication Controllers.			
<b>Base</b>	ARObject, CommunicationController, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	EcuInstance.commController, MachineDesign.communicationController			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 3.114: UserDefinedCommunicationController**


### 3.4 Mapping of Topology Entities onto Hardware Elements

As explained in the previous sections, the System Template contains all classes necessary to describe the physical topology in an AUTOSAR system. Based on this description, the communication matrix can be realized as explained in chapter 6.

**[TPS\_SYST\_01019] Mapping of topology elements to elements of the ECU Resource Template** [It is possible to map the hardware related topology elements onto their counterpart definitions in the ECU Resource Template.] (*RS\_SYST\_00006*)

It can be specified which `HwElement` is realizing each given `EcuInstance`, providing the means for algorithms to map software components onto the systems `EcuInstance`. By specifying which `hwCommunicationPort`<sup>3</sup> on a `hwCommunicationController`<sup>4</sup> implements the topology's `CommunicationConnector` on a `CommunicationController`, the hardware-oriented parameters in the Communication-drivers may be derived in ECU configuration phase.

Please note that this is a rather specific type of mapping, optionally binding ECU-local topology elements to specific hardware resources. It should not be confused with the System Mapping part of the System Description, where system-wide mapping decisions are described, like e.g. the the mapping of Software Components onto ECUs or the mapping of Data Element Prototypes onto System Signals (for the System Mapping, see chapter 5).

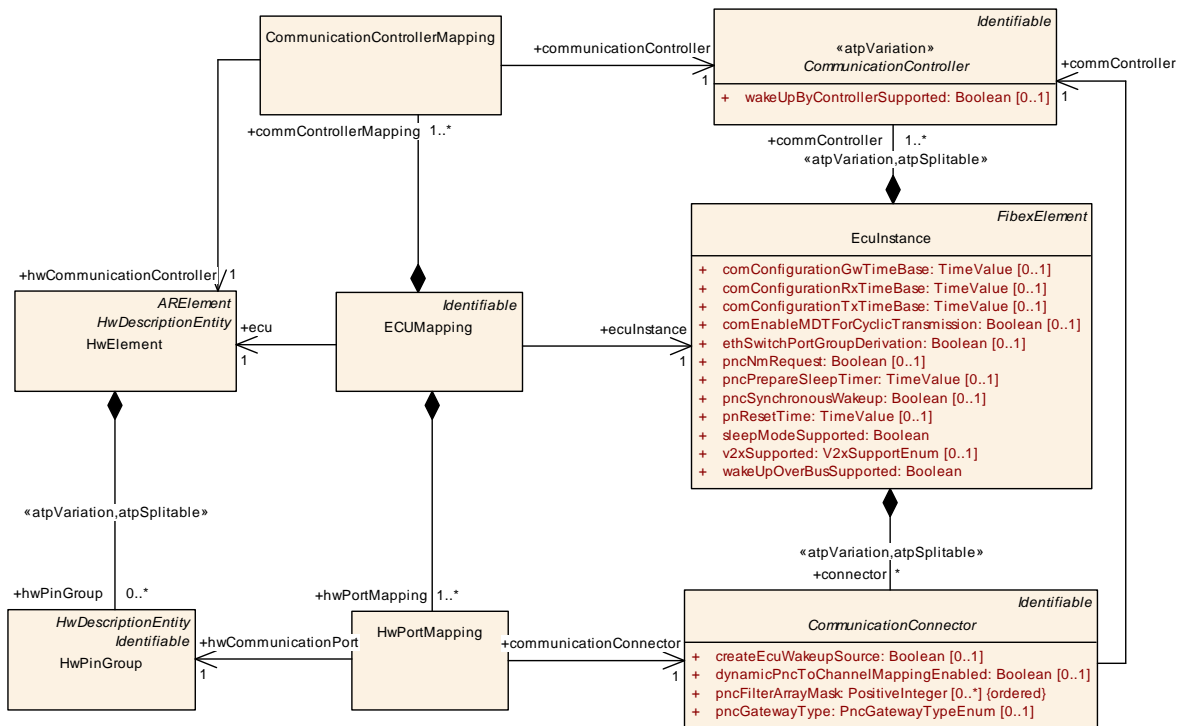

**Figure 3.30: Mapping of topology description elements in the System Template onto hardware elements defined in the ECU Resource Template (ECUResourceMapping)**

**[constr\_3006] valid EcuMapping** [The referenced `hwCommunicationController` and `hwCommunicationPort` shall be part of the referenced `ecu`.

`ECUMapping.ecu.nestedElement` contains `ECUMapping.commControllerMapping.hwCommunicationController`

<sup>3</sup>`HwPinGroup` which is of category Communication Port

<sup>4</sup>`HwElement` which is of category Communication Controller

`ECUMapping.ecu.nestedElement` contains `ECUMapping.hwPortMapping.hwCommunicationPort]()`

### 3.4.1 ECU Mapping

`ECUMapping` allows to assign a `HwElement` to an `EcuInstance` used in a physical topology.

**[TPS\_SYST\_01013] EcuInstance stands for its own** [An `EcuInstance` can be defined in a stand alone and reusable way without a need to have an `ECUMapping`.] (*RS\_SYST\_00013*)

**[constr\_3030] valid relationship between ECUMapping and EcuInstance** [If an `EcuInstance` is assigned to a `HwElement` the `EcuInstance` shall belong to the same `System` as the `ECUMapping`.]()

**[constr\_3248] Category of HwElement for ECUMapping** [The `HwElement` which is referenced from `ECUMapping` in the role `ecu` shall be of category `MicroController`.]()

There exists an inconsistency between the System Template and the ECU Resource Template concerning the usage of the term "Ecu". In the System Template "Ecu" is used to determine one instance of an AUTOSAR Stack (e.g. like in `EcuInstance`). In the Ecu Resource Template "Ecu" is used to describe the physical box (`HwElement` of category `Ecu`) containing the electronics which may contain several processing units with several AUTOSAR Stack instances running.

<b>Class</b>	<b>ECUMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::ECUResourceMapping			
<b>Note</b>	ECUMapping allows to assign an ECU hardware type (defined in the ECU Resource Template) to an ECUInstance used in a physical topology.			
<b>Base</b>	<i>ARObject, Identifiable, MultilanguageReferrable, Referrable</i>			
<b>Aggregated by</b>	<a href="#">SystemMapping.ecuResourceMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
commController Mapping	<a href="#">CommunicationControllerMapping</a>	1..*	aggr	The ECUMapping contains the mapping of all CommunicationControllers of the ECU.
ecu	<a href="#">HwElement</a>	1	ref	Reference to a HwElement of category ECU in the ECU Resource Template.
ecuInstance	<a href="#">EcuInstance</a>	1	ref	Reference to the EcuInstance in the System Template
hwPortMapping	<a href="#">HwPortMapping</a>	1..*	aggr	The ECUMapping contains the mapping of all HW Communication Ports of the ECU.

**Table 3.115: ECUMapping**

### 3.4.2 Communication Controller Mapping

**[TPS\_SYST\_01014] Semantics of CommunicationControllerMapping** [`CommunicationControllerMapping` specifies the `HwElement` to realize the specified

[CommunicationController](#) in a physical topology. The information may e.g. be used during ECU configuration for configuring the hardware related parameters in the communication drivers.] ([RS\\_SYST\\_00013](#))

<b>Class</b>	<b>CommunicationControllerMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::ECUResourceMapping			
<b>Note</b>	CommunicationControllerMapping specifies the CommunicationPeripheral hardware (defined in the ECU Resource Template) to realize the specified CommunicationController in a physical topology.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">ECUMapping.commControllerMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Controller	<a href="#">CommunicationController</a>	1	ref	Reference to the CommunicationController in the System Template
hw Communication Controller	<a href="#">HwElement</a>	1	ref	Reference to a HwElement of category Communication Controller in the ECU Resource Template.

**Table 3.116: CommunicationControllerMapping**

### 3.4.3 HW-Port Mapping

[[TPS\\_SYST\\_01015](#)] **Semantics of [HwPortMapping](#)** [[HwPortMapping](#) specifies the hardware to realize the specified [CommunicationConnector](#) in a physical topology. The information may e.g. be used during ECU configuration for configuring the hardware related parameters in the communication drivers.] ([RS\\_SYST\\_00013](#))

<b>Class</b>	<b>HwPortMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::ECUResourceMapping			
<b>Note</b>	HwPortMapping specifies the hwCommunicationPort (defined in the ECU Resource Template) to realize the specified CommunicationConnector in a physical topology.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">ECUMapping.hwPortMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Connector	<a href="#">CommunicationConnector</a>	1	ref	Reference to the CommunicationConnector in the System Template
hw Communication Port	<a href="#">HwPinGroup</a>	1	ref	Reference to the HwPinPortGroup of category CommunicationPort. The connection to the Hw CommunicationController is described in the Ecu Resource Description.

**Table 3.117: HwPortMapping**

## 4 Top-level Software Composition

One of the most important inputs for the System Generator is the knowledge about the Application Software Components, their communication capabilities and the connections between them: Each `SystemSignal` (chapter 6.2) that is going to be exchanged between mapped Software Components onto different ECUs is a consequence of a connection between such application Software Components.

In AUTOSAR, Software Components can either be atomic (`AtomicSwComponentType`) or may consist of a composition of other Software Components `CompositionSwComponentType` [5]. In order to assemble non-trivial applications from AUTOSAR components, such compositions can be built up hierarchically, until the outermost `CompositionSwComponentType` forms a kind of top-level composition.

**[constr\_3031] Complete System Description does not have ports on the outermost composition** [In a complete `System` with `category` `ABSTRACT_SYSTEM_DESCRIPTION` or `System` with `category` `SYSTEM_DESCRIPTION` this outermost `CompositionSwComponentType` has the unique feature that it doesn't have any outside ports, but all the SWC contained in it are connected to each other and fully specified by their `SwComponentTypes`, `PortPrototypes`, `PortInterfaces`, `VariableDataPrototypes`, `InternalBehavior` etc.]()

**[TPS\_SYST\_01016] System Extract, Ecu System Description and Ecu Extract may have ports** [In a `System` with `category` `SYSTEM_EXTRACT` and a `System` with `category` `ECU_SYSTEM_DESCRIPTION` and a `System` with `category` `ECU_EXTRACT` outside ports for the outermost composition are allowed.](*RS\_SYST\_00027*)

**[TPS\_SYST\_02312]{DRAFT} Ports for outermost composition of a SW\_CLUSTER\_SYSTEM\_DESCRIPTION** [In a `System` with `category` `SW_CLUSTER_SYSTEM_DESCRIPTION` outside ports for the outermost composition are allowed.]()

Since the System/Ecu Extract represents the view on one Ecu, there may be the need to define the communication of this extract with the outside world.

Two approaches are available how the external communication of an ECU in the System Extract is described. In section 13.2 the communication mapping is performed in the hierarchical structure of software components. In section 13.3 external communication delegation ports are added to the System extract outermost composition. Each delegated port is connected via a `DelegationSwConnector` with ports of the included components that are used for the external communication.

A `System` considers such a top-level `CompositionSwComponentType` as its application software system input by owning exactly one `RootSwCompositionPrototype` class, which points to the `CompositionSwComponentType` forming the input via its `<<isOfType>>` relationship as shown in Figure 2.1.


[TPS\_SYST\_01017] The role of the top-level software composition [An AUTOSAR System uses the specialized prototype class [RootSwCompositionPrototype](#) in order to designate the referenced [CompositionSwComponentType](#) as the top-level software composition.] ([RS\\_SYST\\_00006](#))

<b>Class</b>	<b>RootSwCompositionPrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate			
<b>Note</b>	<p>The RootSwCompositionPrototype represents the top-level-composition of software components within a given System.</p> <p>According to the use case of the System, this may for example be a more or less complete VFB description, the software of a System Extract or the software of a flat ECU Extract with only atomic SWCs.</p> <p>Therefore the RootSwComposition will only occasionally contain all atomic software components that are used in a complete VFB System. The OEM is primarily interested in the required functionality and the interfaces defining the integration of the Software Component into the System. The internal structure of such a component contains often substantial intellectual property of a supplier. Therefore a top-level software composition will often contain empty compositions which represent subsystems.</p> <p>The contained SwComponentPrototypes are fully specified by their SwComponentTypes (including Port Prototypes, PortInterfaces, VariableDataPrototypes, SwcInternalBehavior etc.), and their ports are interconnected using SwConnectorPrototypes.</p>			
<b>Base</b>	<i>ARObject</i> , <i>AtpFeature</i> , <i>AtpPrototype</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<i>AtpClassifier.atpFeature</i> , <a href="#">System.rootSoftwareComposition</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
calibration ParameterValue Set	CalibrationParameter ValueSet	*	ref	Used CalibrationParameterValueSet for instance specific initialization of calibration parameters.  <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=calibrationParameterValueSet
flatMap	<a href="#">FlatMap</a>	0..1	ref	The FlatMap used in the scope of this RootSw CompositionPrototype.  <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=flatMap
software Composition	<a href="#">CompositionSw ComponentType</a>	1	tref	We assume that there is exactly one top-level composition that includes all Component instances of the system.  <b>Stereotypes:</b> isOfType

**Table 4.1: RootSwCompositionPrototype**

## 5 Mapping

A central part of the system generation process is the mapping of software components ([SwComponentPrototypes](#)) to ECUs, and the subsequent mapping of the communication between these software components to bus frames. Input to the software component mapping is the [RootSwCompositionPrototype](#), which describes which software components have to be mapped, and the System Topology, which defines the ECU instances that are available as mapping targets. Once this mapping is done, also the communication matrix has to be taken into account for the next mapping step, the mapping of data elements exchanged between software components to bus frames. This communication matrix may either be predefined, or may be generated as part of this second mapping step. In the metamodel, different aspects of these mapping are aggregated by the meta class [SystemMapping](#), as shown in [Figure 5.1](#).

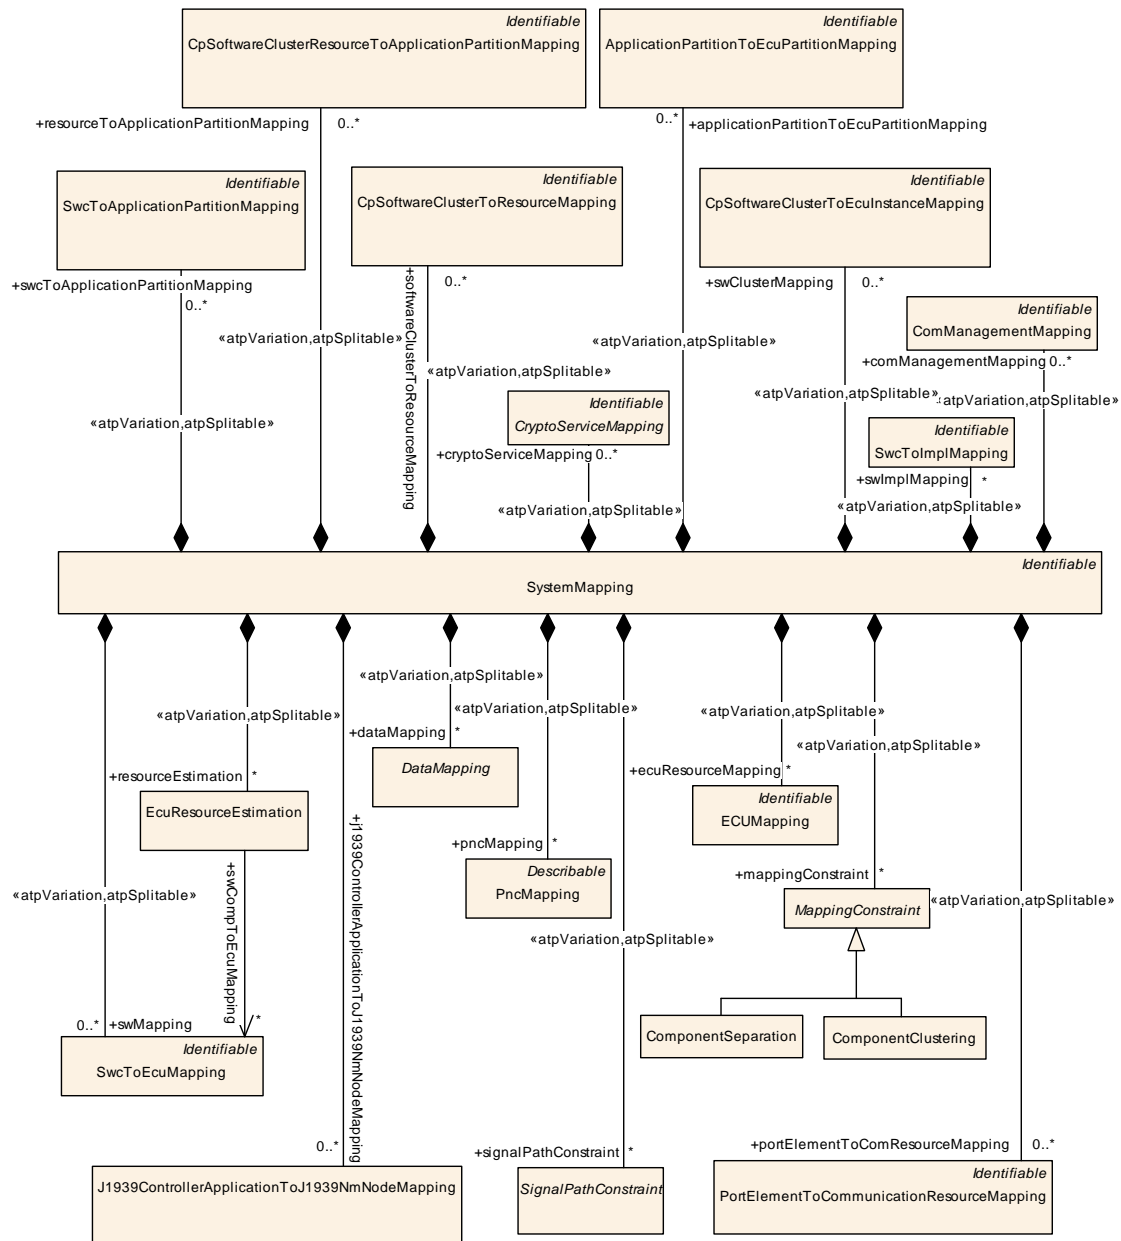

**Figure 5.1: Mapping Overview (Mapping)**



The following mappings are defined:

- The [SwcToEcuMapping](#) meta-class maps one or several [SwComponentPrototypes](#) to ECUs. In the System Constraint Description it is possible to predefine the mapping of [SwComponentPrototypes](#) to ECUs. The predefinition limits the system architect's freedom to map software components to arbitrary ECUs. After the system generation in the System Configuration Description, all atomic software components that are directly or indirectly part of the top level composition shall be mapped with this mapping rule. Software component mapping is described in detail in chapter [5.1](#).
- The meta-class [EcuResourceEstimation](#) specifies the resource estimation for RTE and basic software (see chapter [5.3](#)).
- The [ECUMapping](#) meta-class is used to map the hardware related topology elements onto their counterpart definitions in the ECU Resource Template (see chapter [3.4](#)).
- The [DataMapping](#) meta-class is used to map [VariableDataPrototypes](#) and [ClientServerOperations](#) in software component ports (i.e. the data exchanges between software components) to signals. The data mapping is described in detail in chapter [5.2](#).
- The [ComManagementMapping](#) defines the mapping of one or several Mode Management [PortGroups](#) and communication channels (see chapter [5.4.2](#)).
- The [PncMapping](#) defines the Partial Network behavior (see chapter [5.4.1](#)).
- The [SignalPathConstraint](#) meta-class is used to define which specific way a signal (data element or client server operation arguments) between two Software Components should take in the network without defining in which frame and with which timing it is transmitted. This Signal Path Constraint is introduced in chapter [5.2.2](#).
- The [MappingConstraint](#) meta-class is used to define constraints that constrain the mapping of software components. It's sub-classes allow to constraint which [SwComponentPrototypes](#) shall be mapped together on the same ECU ([ComponentClustering](#)) and which shall not be mapped to the same ECU ([ComponentSeparation](#)). The mapping constraints are described in detail in chapter [5.1.4](#).
- The [J1939ControllerApplicationToJ1939NmNodeMapping](#) maps a Software Component to which a standardized function id is assigned to a [J1939NmNode](#) (see chapter [5.1.5](#))
- The [CpSoftwareClusterToEcuInstanceMapping](#) meta-class maps a [CpSoftwareCluster](#) to an [EcuInstance](#) (see chapter [5.5](#))
- The [CpSoftwareClusterToResourceMapping](#) meta-class maps a [CpSoftwareClusterServiceResource](#) to [CpSoftwareClusters](#) (see chapter [11.2](#))

- The [CpSoftwareClusterResourceToApplicationPartitionMapping](#) meta-class maps a Software Cluster resource to an Application Partition (see chapter [5.5](#))
- Finally, the [SwcToImplMapping](#) meta-class is used to assign one [Implementation](#) to one or more [SwComponentPrototypes](#) (see chapter [5.1.2](#)).

<b>Class</b>	<b>SystemMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate			
<b>Note</b>	The system mapping aggregates all mapping aspects (mapping of SW components to ECUs, mapping of data elements to signals, and mapping constraints).			
<b>Base</b>	ARObject, <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	System.mapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
applicationPartitionToEcuPartitionMapping	<a href="#">ApplicationPartitionToEcuPartitionMapping</a>	*	aggr	Mapping of ApplicationPartitions to EcuPartitions <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=applicationPartitionToEcuPartitionMapping.shortName, applicationPartitionToEcuPartitionMapping.variationPoint.shortLabel vh.latestBindingTime=postBuild
appOsTaskProxyToEcuTaskProxyMapping	<a href="#">AppOsTaskProxyToEcuTaskProxyMapping</a>	*	aggr	Mapping of an OsTaskProxy that was created in the context of a SwComponent to an OsTaskProxy that was created in the context of an Ecu.
comManagementMapping	<a href="#">ComManagementMapping</a>	*	aggr	Mappings between Mode Management PortGroups and communication channels. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=comManagementMapping.shortName, comManagementMapping.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
cryptoServiceMapping	<a href="#">CryptoServiceMapping</a>	*	aggr	This aggregation represents the collection of crypto service mappings in the context of the enclosing System Mapping. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=cryptoServiceMapping.shortName, cryptoServiceMapping.variationPoint.shortLabel vh.latestBindingTime=postBuild
dataMapping	<a href="#">DataMapping</a>	*	aggr	The data mappings defined. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=dataMapping, dataMapping.variationPoint.shortLabel vh.latestBindingTime=postBuild
ecuResourceMapping	<a href="#">ECUMapping</a>	*	aggr	Mapping of hardware related topology elements onto their counterpart definitions in the ECU Resource Template. atpVariation: The ECU Resource type might be variable. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=ecuResourceMapping.shortName, ecuResourceMapping.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
j1939ControllerApplicationToJ1939NmNodeMapping	<a href="#">J1939ControllerApplicationToJ1939NmNodeMapping</a>	*	aggr	Mapping of a J1939ControllerApplication to a J1939NmNode.





Class	SystemMapping			
mapping Constraint	<a href="#">MappingConstraint</a>	*	aggr	Constraints that limit the mapping freedom for the mapping of SW components to ECUs. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=mappingConstraint, mappingConstraint.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
pncMapping	<a href="#">PncMapping</a>	*	aggr	Mappings between Virtual Function Clusters and Partial Network Clusters. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=pncMapping, pncMapping.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
portElementTo ComResource Mapping	<a href="#">PortElementTo Communication ResourceMapping</a>	*	aggr	maps a communication resource to CP Software Clusters <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=portElementToComResourceMapping.shortName, portElementToComResourceMapping.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=postBuild
resource Estimation	<a href="#">EcuResourceEstimation</a>	*	aggr	Resource estimations for this set of mappings, zero or one per ECU instance.  atpVariation: Used ECUs are variable. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=resourceEstimation, resourceEstimation.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
resourceTo Application Partition Mapping	<a href="#">CpSoftwareCluster ResourceToApplication PartitionMapping</a>	*	aggr	Maps a Software Cluster resource to an Application Partition to restrict the usage. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=resourceToApplicationPartitionMapping.shortName, resourceToApplicationPartitionMapping.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=systemDesignTime
rteEvent Separation	<a href="#">RteEventInSystem Separation</a>	*	aggr	Separation constraint that limits the mapping freedom for the mapping of RteEvents to OsTasks in the System context.
rteEventToOs TaskProxy Mapping	<a href="#">RteEventInSystemToOs TaskProxyMapping</a>	*	aggr	Constraint that enforces a mapping of RteEvent to a particular OsTask in the System context.
signalPath Constraint	<a href="#">SignalPathConstraint</a>	*	aggr	Constraints that limit the mapping freedom for the mapping of data elements to signals. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=signalPathConstraint, signalPathConstraint.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime





Class	SystemMapping			
softwareClusterToResourceMapping	<a href="#">CpSoftwareClusterToResourceMapping</a>	*	aggr	maps a service resource to CP Software Clusters <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=softwareClusterToResourceMapping.shortName, softwareClusterToResourceMapping.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=preCompileTime
swClusterMapping	<a href="#">CpSoftwareClusterToEcuInstanceMapping</a>	*	aggr	The mappings of SW cluster to ECUs. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=swClusterMapping.shortName, swClusterMapping.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=systemDesignTime
swcToApplicationPartitionMapping	<a href="#">SwcToApplicationPartitionMapping</a>	*	aggr	Allows to map a given SwComponentPrototype to a formally defined partition at a point in time when the corresponding EcuInstance is not yet known or defined. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=swcToApplicationPartitionMapping.shortName, swcToApplicationPartitionMapping.variationPoint.shortLabel vh.latestBindingTime=postBuild
swImplMapping	<a href="#">SwcToImplMapping</a>	*	aggr	The mappings of AtomicSoftwareComponent Instances to Implementations.  atpVariation: Derived, because SwcToEcuMapping is variable. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=swImplMapping.shortName, swImplMapping.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
swMapping	<a href="#">SwcToEcuMapping</a>	*	aggr	The mappings of SW components to ECUs.  atpVariation: SWC shall be mapped to other ECUs. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=swMapping.shortName, swMapping.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table 5.1: SystemMapping**

## 5.1 Software Component Mapping

A fundamental concept of AUTOSAR is that SW components may be developed independently of a specific ECU hardware, and can be mapped to an ECU in the AUTOSAR System Generation Process. The System Constraint Description acts as an input to this System Generation Phase. Nevertheless, there may be some SW components which are already mapped due to previous iterations of the system generation step, and there may be system constraints that limit the system architect's freedom to map SW components to arbitrary ECUs. In the following, the individual elements are described in more detail.

Please note that the purpose of [constr\_5116] is to support the unambiguous mapping of symbols in memory sections. In the AUTOSAR Basic Software, the namespace of a Bsw Module is allocated case insensitive in order to support the definition of symbols in solely upper case notation.

**[constr\_5116] Uniqueness of the symbols of software-components and BSW modules** [For all `SwComponentPrototypes` typed by an `ApplicationSwComponentType`, `NvBlockSwComponentType` or `SensorActuatorSwComponentType` mapped to a given `EcuInstance` by means of `SwcToEcuMapping` respectively `SwcToApplicationPartitionMapping` and `ApplicationPartitionToEcuPartitionMapping` the following restriction applies:

The symbolic name of an `AtomicSwComponentType` referenced by a respective `SwComponentPrototype` in the role `type` shall not overlap with the module implementation prefix (MIP) of any of the basic software-modules existing on the `EcuInstance`.

The symbolic name of an `AtomicSwComponentType` is derived from the value of

- `AtomicSwComponentType.symbol`, or if this attribute does not exist
- `AtomicSwComponentType.shortName`.

]()

More information about the nature and usage of the symbolic name of a software-component can be found in [TPS\_SWCT\_01110], [TPS\_SWCT\_01000], and [TPS\_SWCT\_01635].

The restriction in [constr\_5116] does not apply for `ServiceSwComponentTypes`, `ComplexDeviceDriverSwComponentTypes`, and `EcuAbstractionSwComponentTypes`. The reason is that for the Basic Software that utilizes standardized Interfaces and AUTOSAR Interfaces needs a `SwComponentType` and a Basic Software Description to describe both kinds of Interfaces but only one header file for memory allocation is expected. So for example the definition of a “Dem” Service SWC and a “Dem” Basic Module Description defines a legal naming in AUTOSAR.

### 5.1.1 SW Component to ECU Mapping

**[TPS\_SYST\_01001] Definition of `SwcToEcuMapping`** [With the `SwcToEcuMapping` element it is possible to express the mapping of `SwComponentPrototypes` to one `EcuInstance` or optional to individual `HwElements` with `category` `ProcessingUnit` residing in this ECU. An optional assignment of Sensor/Actuator `SwComponentPrototypes` to Sensor/Actuator `HwElements` is also possible.]([RS\\_SYST\\_00007](#), [RS\\_SYST\\_00033](#))

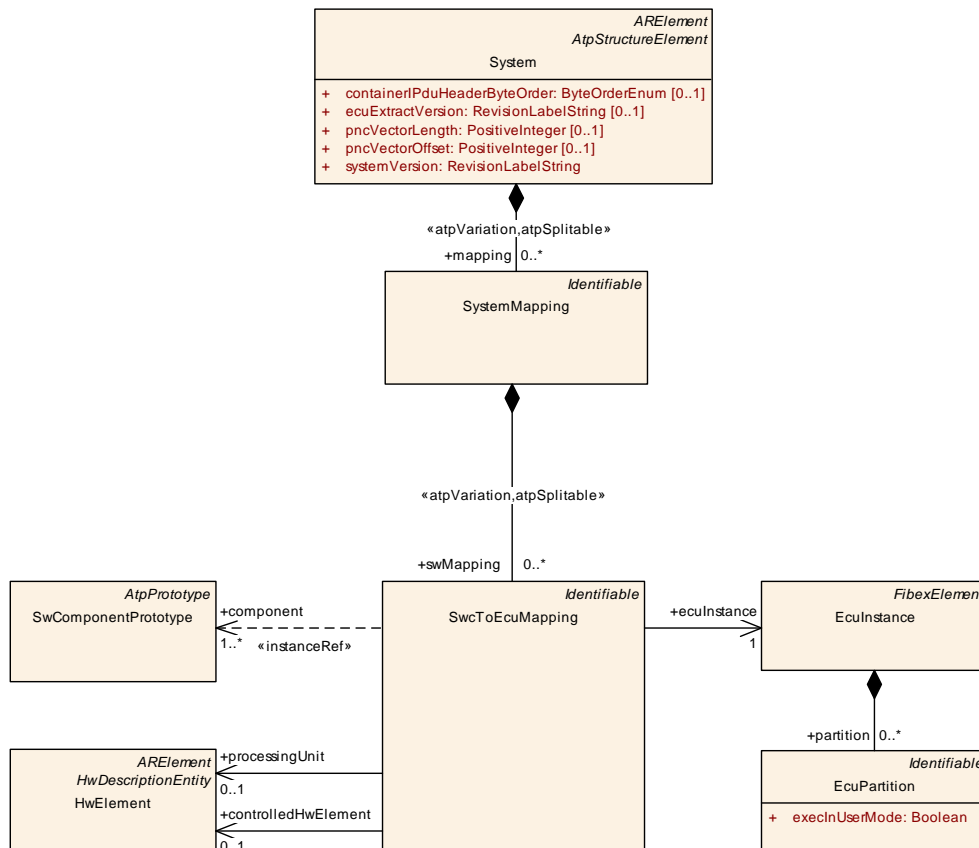


Figure 5.2: SW component to ECU mapping (SwcToEcuMapping)

The `SwcToEcuMapping` collects a list of all `SwComponentPrototypes` that shall be deployed onto the associated `SwcToEcuMapping` targets.

**[TPS\_SYST\_02114] Mapping of `SwComponentPrototypes` onto `SwcToEcuMapping` targets** [The `SwcToEcuMapping` of `SwComponentPrototypes` to

- `EcuInstance`
- `processingUnit`
- `controlledHwElement`

is arbitrary.

It is equivalent to either

- have several `SwcToEcuMappings` which map a set of `SwcToEcuMapping.components` to a `SwcToEcuMapping.ecuInstance`, `SwcToEcuMapping.processingUnit`, `SwcToEcuMapping.controlledHwElement`,
- or one `SwcToEcuMapping` which maps the set of `SwcToEcuMapping.components` at once.

](`RS_SYST_00007`)

**[constr\_3263] Restriction of usage of `SwToEcuMapping` in a `System`** [For all `SwToEcuMappings` in a `System` the following restriction applies: No two `SwToEcuMappings` shall have the exact same reference to

- `SwComponentPrototype`
- `EcuInstance`
- `processingUnit`
- `controlledHwElement`

]()

`SwToEcuMapping` may map either prototypes of `AtomicSwComponentType` or those of `CompositionSwComponentType`.

**[TPS\_SYST\_01020] Unconditional mapping of atomic Software Components** [In case a prototype of an atomic Software Components is mapped, the mapping is unconditional.](*RS\_SYST\_00007*)

**[TPS\_SYST\_01021] Mapping of `CompositionSwComponentType`** [In case a mapped `SwComponentPrototype` refers to a `CompositionSwComponentType`, the mapping is applied to any inner `SwComponentPrototype` recursively; however, it may be overwritten by additional `SwToEcuMapping` mapping inner `SwComponentPrototype` to different `EcuInstances`.](*RS\_SYST\_00007*)

Usually a particular component prototype can be mapped explicitly to at most one ECU in a given system (leaving aside variant handling and the implicit mapping of "inner" prototypes mentioned above) but there are two exceptions:

- **[TPS\_SYST\_01022] Prototype of a `ParameterSwComponentType` can be mapped to more than one ECU** [A prototype of a `ParameterSwComponentType` can be mapped to more than one ECU. This is required, because this special component does not communicate over the network, so that a copy of the prototype has to be created on each ECU were it is required.](*RS\_SYST\_00007*)
- **[TPS\_SYST\_01023] Prototype of an `ServiceProxySwComponentType` can be mapped to more than one ECU** [A prototype of an `ServiceProxySwComponentType` can be mapped to more than one ECU even if it appears only once in the VFB system, because a prototype of this special component is required on each ECU, for which local Services are addressed via the proxy.](*RS\_SYST\_00031*)

**[constr\_3021] Mapping of `SensorActuatorSwComponents` to `SensorActuatorHwElements`** [Only `SwComponentPrototypes` that are typed by `SensorActuatorSwComponentType` shall be mapped to a `HwElement` with `category` `SensorActuator` via the `controlledHwElement` relation.]()

**[constr\_3249] Category of `HwElement` for `SwToEcuMapping`** [The `HwElement` which is referenced from `SwToEcuMapping` in the role `processingUnit` shall be of category "ProcessingUnit".]()



The following table describes the [SwcToEcuMapping](#) in detail.

<b>Class</b>	<b>SwcToEcuMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	Map software components to a specific ECU Instance and optionally to a processing unit and to an Ecu Partition. For each combination of ECUInstance and the optional ProcessingUnit and the optional Ecu Partition and the optional SensorActuator only one SwcToEcuMapping shall be used.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">SystemMapping.swMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
component	<a href="#">SwComponentPrototype</a>	1..*	iref	References to the software component instances that are mapped to the referenced ECUInstance. If the component prototype referenced is a composition, this indicates that all atomic software components within the composition are mapped to the ECU.  If there is additionally a mapping of some SwComponent Prototype INSIDE the Composition to another ECU Instance the inner mapping overrides the outer mapping.  <b>InstanceRef implemented by:</b> <a href="#">ComponentInSystemInstanceRef</a>
controlledHwElement	<a href="#">HwElement</a>	0..1	ref	Optional mapping of SwComponentPrototypes that are typed by SensorActuatorSwComponentType to a HwElement with category SensorActuator.
ecuInstance	<a href="#">EcuInstance</a>	1	ref	Reference to a specific ECU Instance description.
processingUnit	<a href="#">HwElement</a>	0..1	ref	Optional mapping of software components to individual microcontroller cores residing in one ECU. A microcontroller core is described in the ECU Resource Template by the HwElement of HwCategory Processing Unit.

**Table 5.2: SwcToEcuMapping**

### 5.1.2 Software Component to Implementation Mapping

As several implementations may exist for the same `AtomicSwComponentType`, it needs to be decided on and specified which instances of a given `AtomicSwComponentType` are mapped to which `Implementation`. According to the AUTOSAR Methodology this information can either be added within the `Configure System` activity, or later when the RTE part is configured during `Configure ECU` phase. If the mapping is done in System Configuration, a `SwcToImplMapping` is being used for assigning one `Implementation` to one or more instances of `SwComponentPrototype` relating to the same `AtomicSwComponentType`. This is illustrated in Figure 5.3.

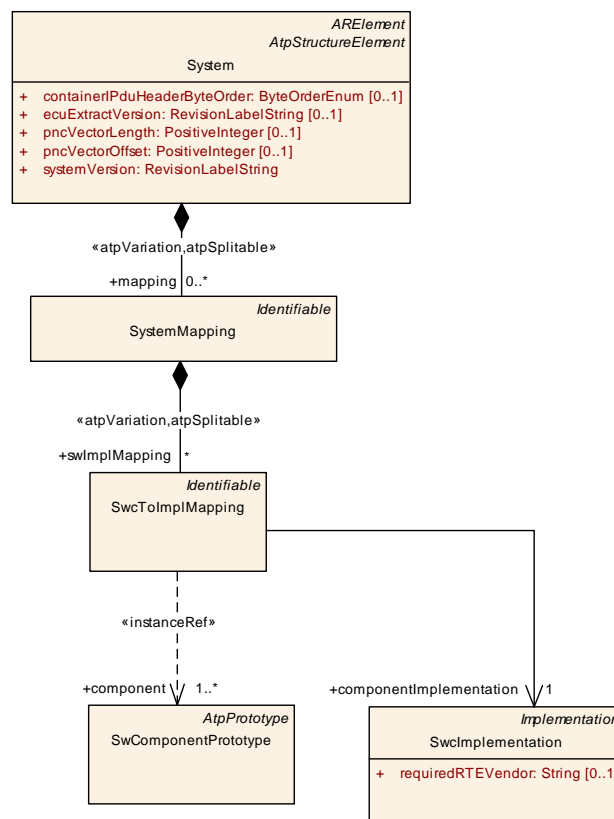


Figure 5.3: SW Component to Implementation mapping (SwcToImplMapping)

**[constr\_3002] valid swcToImplMapping** [The referenced `SwcImplementation` refers to a `SwcInternalBehavior` that is part of a `AtomicSwComponentType`. The same `AtomicSwComponentType` shall be the type of the referenced `SwComponentPrototype`.

```
SwcToImplMapping.componentImplementation.behavior.component == SwcToImplMapping.component.type] ()
```


The following table contains the detailed description of [SwcToImplMapping](#):

<b>Class</b>	<b>SwcToImplMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	Map instances of an AtomicSwComponentType to a specific Implementation.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">SystemMapping.swImplMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
component	<a href="#">SwComponentPrototype</a>	1..*	iref	Reference to the software component instances that are being mapped to the specified Implementation. The targeted SwComponentPrototype needs be of the Atomic SwComponentType being implemented by the referenced Implementation.  <b>InstanceRef implemented by:</b> <a href="#">ComponentInSystemInstanceRef</a>
component Implementation	<a href="#">SwcImplementation</a>	1	ref	Reference to a specific Implementation description. Implementation to be used by the specified SW component instance. This allows to achieve more precise estimates for the resource consumption that results from mapping the instance of an atomic SW component onto an ECU.

**Table 5.3: SwcToImplMapping**

### 5.1.3 SW Component to Partition Mapping

With the [SwcToApplicationPartitionMapping](#) and the [ApplicationPartitionToEcuPartitionMapping](#) an OEM has the option to predefine an allocation to memory partitions in the System Design phase. The final and complete assignment is described in the OS Configuration. The [SwcToApplicationPartitionMapping](#) defines a mapping to [ApplicationPartitions](#) that allows an allocation to a formally defined partition at a point in time when the [EcuInstance](#) is not yet known or defined. In a later methodology step this assignment can be refined with the [ApplicationPartitionToEcuPartitionMapping](#) to an [EcuPartition](#) defined in the context of an [EcuInstance](#).

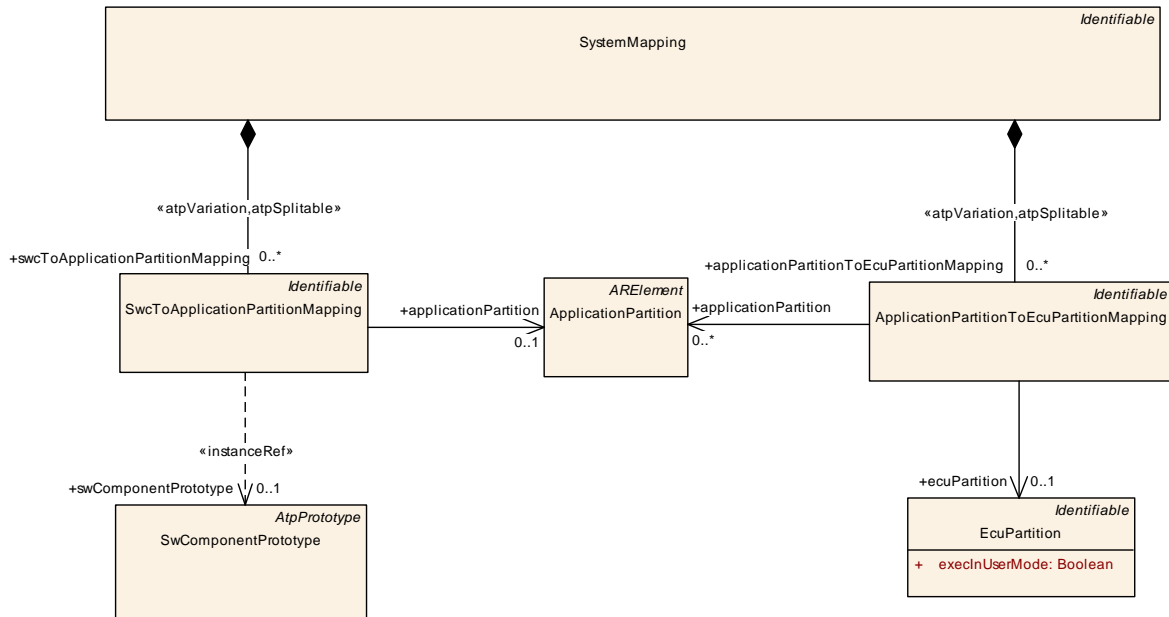

**Figure 5.4: SW Component to Application Partition mapping**

<b>Class</b>	<b>SwcToApplicationPartitionMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	Allows to map a given SwComponentPrototype to a formally defined partition at a point in time when the corresponding EcuInstance is not yet known or defined.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	CpSoftwareClusterMappingSet.swcToApplicationPartitionMapping, SwComponentMappingConstraints.swcToApplicationPartitionMapping, SystemMapping.swcToApplicationPartitionMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
application Partition	ApplicationPartition	0..1	ref	Reference to an ApplicationPartition to which a Sw ComponentPrototype is mapped.
swComponent Prototype	SwComponent Prototype	0..1	iref	References to the software component instances that are mapped to the referenced ApplicationPartition. If the component prototype referenced is a composition, this indicates that all atomic software components within the composition are mapped to the ApplicationPartition.  If there is additionally a mapping of some SwComponent Prototype INSIDE the Composition to another Application Partition the inner mapping overrides the outer mapping.  <b>InstanceRef implemented by:</b> ComponentInSystem InstanceRef

**Table 5.4: SwcToApplicationPartitionMapping**

<b>Class</b>	<b>ApplicationPartition</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping
<b>Note</b>	ApplicationPartition to which SwComponentPrototypes are mapped at a point in time when the corresponding EcuInstance is not yet known or defined. In a later methodology step the Application Partition can be assigned to an EcuPartition.  <b>Tags:</b> atp.recommendedPackage=ApplicationPartitions
<b>Base</b>	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable





<b>Class</b>	<b>ApplicationPartition</b>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 5.5: ApplicationPartition**

<b>Class</b>	<b>ApplicationPartitionToEcuPartitionMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	Maps ApplicationPartitions to EcuPartitions. With this mapping an OEM has the option to predefine an allocation of Software Components to EcuPartitions in the System Design phase. The final and complete assignment is described in the OS Configuration.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">SystemMapping.applicationPartitionToEcuPartitionMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
application Partition	<a href="#">ApplicationPartition</a>	*	ref	Reference to ApplicationPartitions that are mapped to an EcuPartition.
ecuPartition	<a href="#">EcuPartition</a>	0..1	ref	Reference to EcuPartition to which the Application Partitions are assigned.

**Table 5.6: ApplicationPartitionToEcuPartitionMapping**

<b>Class</b>	<b>EcuPartition</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	Partitions are used as error containment regions. They permit the grouping of SWCs and resources and allow to describe recovery policies individually for each partition. Partitions can be terminated or restarted during run-time as a result of a detected error.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">EcuInstance.partition</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
execInUser Mode	Boolean	1	attr	A partition can execute either in CPU user mode (execInUserMode = TRUE) or supervisor mode (execInUserMode = FALSE). In user mode, the partition has a limited access to memory, to memory mapped hardware and to CPU. In user mode, the partition is mapped to a non-trusted OS-Application.

**Table 5.7: EcuPartition**

**[constr\_3232]** [ApplicationPartition](#) is allowed to be mapped to only one [EcuPartition](#) [Each [ApplicationPartition](#) shall be mapped at most once to an [EcuPartition](#) via the [ApplicationPartitionToEcuPartitionMapping](#).]()

**[constr\_3229]** [SwComponentPrototype](#) mapped to an [ApplicationPartition](#) and [EcuInstance](#) [If the [SwcToEcuMapping.ecuInstance](#) exists then a [SwComponentPrototype](#) that is mapped to an [ApplicationPartition](#) via the [SwcToApplicationPartitionMapping](#) shall only be mapped by an [ApplicationPartitionToEcuPartitionMapping](#) to an [EcuPartition](#) that is aggregated by the [EcuInstance](#) referenced by means of [SwcToEcuMapping.ecuInstance](#).]()


### 5.1.4 Software Component Mapping Constraints

In contrast to the mapping description described in the previous chapters, mapping constraints allow to define invariants that have to be fulfilled by a valid mapping. They are aggregated in the `MappingConstraint` element as introduced in chapter 5 and depicted Figure 5.1. This chapter describes which mapping constraints can be described in the System Constraint Description. The description of this meta-class can be found in the following table:

<b>Class</b>	<i>MappingConstraint</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	Different constraints that may be used to limit the mapping of SW components to applicable ECUs, Partitions or Cores depending on the mappingScope attribute.			
<b>Base</b>	ARObject			
<b>Subclasses</b>	ComponentClustering, ComponentSeparation			
<b>Aggregated by</b>	SystemMapping.mappingConstraint			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
introduction	DocumentationBlock	0..1	aggr	This represents introductory documentation about the mapping constraint.

**Table 5.8: MappingConstraint**

The two constraints (`ComponentClustering` and `ComponentSeparation`) shown in Figure 5.5 express the restrictions that Software Components impose on each other when performing the mapping onto the ECUs, Cores or Partitions. In fact, before the mapping process begins, it can be useful to impose the allocation of a predefined set of SW components onto the same ECU, especially if such a set is tightly linked from a functional point of view. In the same way, two critical SW components, performing some kind of redundancy, may be not suitable to run both on the same ECU. Thus, we call these two kinds of mapping constraints, respectively, `ComponentClustering` and `ComponentSeparation`.

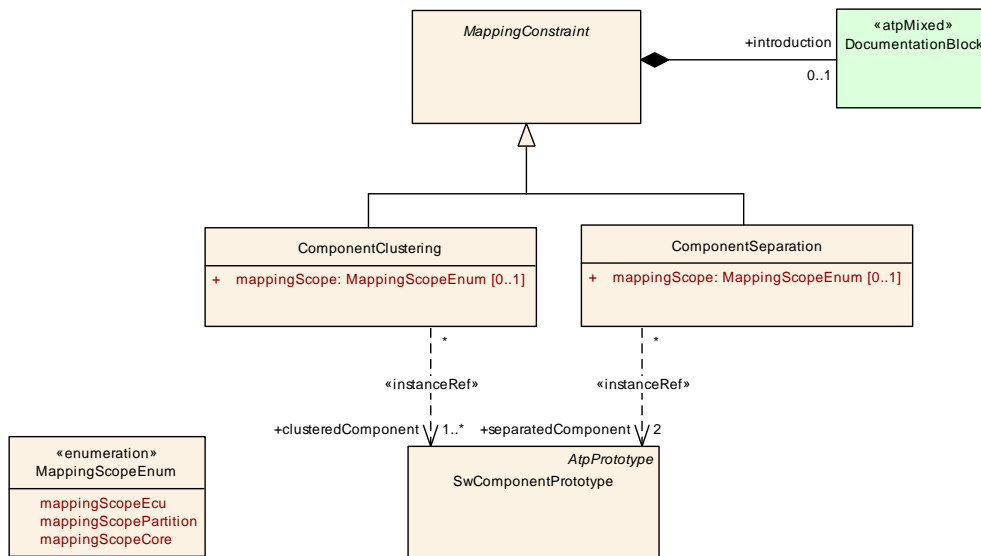

**Figure 5.5: Details on ComponentClustering and ComponentSeparation (SwClustering)**

### 5.1.4.1 ComponentClustering

**[TPS\_SYST\_01024] Component Clustering** [The [ComponentClustering](#) constraint (also, *clustering*) is to be used for expressing that a certain set of SW components (atomic or not) shall be mapped (allocated) onto the same ECU, Core, Partition depending on the defined [mappingScope](#) attribute.] ([RS\\_SYST\\_00008](#))

This is some kind of "execute together on same ECU" constraint.

The semantic of the clustering constraint is straightforward if all referenced SW components are atomic. Otherwise, it shall be interpreted as follows:

**[TPS\_SYST\_01025] Clustering of Compositions** [All of the atomic SW components making up the composition shall be mapped onto the same ECU, Core, Partition depending on the defined [mappingScope](#) attribute together with all other SW components (atomic or not) referenced by the constraint.] ([RS\\_SYST\\_00008](#))

This also means that a *clustering* constraint can also refer to only a single composition.

A *clustering* constraint is part of a [MappingConstraint](#) element and it shall refer to one or more [SwComponentPrototype](#) elements, representing the instances of the SW component(s) that shall be mapped together.

<b>Class</b>	<b>ComponentClustering</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	Constraint that forces the mapping of all referenced SW component instances to the same ECU, Core, Partition depending on the defined <a href="#">mappingScope</a> attribute. If <a href="#">mappingScope</a> is not specified then <a href="#">mappingScopeEcu</a> shall be assumed.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">MappingConstraint</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.mappingConstraint</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
clustered Component	<a href="#">SwComponentPrototype</a>	1..*	iref	Reference to the components that have to be mapped together.  <b>InstanceRef implemented by:</b> <a href="#">ComponentInSystemInstanceRef</a>
mappingScope	<a href="#">MappingScopeEnum</a>	0..1	attr	This attribute indicates whether the <a href="#">ComponentClustering</a> mapping constraint applies to different ECUs, partitions or cores. If this attribute is not specified then <a href="#">mappingScopeEcu</a> shall be assumed.

**Table 5.9: ComponentClustering**

<b>Enumeration</b>	<b>MappingScopeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping
<b>Note</b>	Defines the scope for the mapping constraints.
<b>Aggregated by</b>	<a href="#">ComponentClustering.mappingScope</a> , <a href="#">ComponentSeparation.mappingScope</a>
<b>Literal</b>	<b>Description</b>
mappingScopeCore	The mapping constraint applies to different Cores. <b>Tags:</b> atp.EnumerationLiteralIndex=0





Enumeration	MappingScopeEnum
mappingScopeEcu	The mapping constraint applies to different Ecus. <b>Tags:</b> atp.EnumerationLiteralIndex=1
mappingScopePartition	The mapping constraint applies to different Partitions. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 5.10: MappingScopeEnum**

### 5.1.4.2 ComponentSeparation

**[TPS\_SYST\_01045] Component Separation** [The [ComponentSeparation](#) constraint (also, *separation*) is to be used for expressing that two SW components (atomic or not) shall not be mapped (allocated) onto the same ECU, Core, Partition depending on the defined [mappingScope](#) attribute.]([RS\\_SYST\\_00009](#))

This is some kind of “do not execute together on same ECU” constraint.

The semantic of the separation constraint is straightforward if one or both SW components are atomic. Otherwise, it shall be interpreted as follows:

**[TPS\_SYST\_01026] Separation of Compositions** [Any of the atomic SW components making up the first composition, shall not be mapped onto the same ECU, Core, Partition depending on the defined [mappingScope](#) attribute with any atomic SW component from the second composition.]([RS\\_SYST\\_00009](#))

As a consequence, and to preserve consistency, an atomic SW component instance cannot be part of two compositions concerned by the same separation constraint, i.e. the two compositions have to be disjoint with regards to component instances<sup>1</sup>.

A *separation* constraint is part of a [MappingConstraint](#) element and it shall refer to two [SwComponentPrototype](#) elements, representing the two SW component instances that shall not be allocated together.

<sup>1</sup>The only case where a component instance could be in both sets is if the [ComponentSeparation](#) refers to two elements where one of them is a substructure of the other. Consider the case that Atomic SW Component A is aggregated by composition B, which in turn is aggregated by composition C. Then instance A is both in B and C. It is not a good idea to formulate a separation constraint stating that B and C should not be on the same ECU.



<b>Class</b>	<b>ComponentSeparation</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	<p>Constraint that forces the two referenced SW components (called A and B in the following) not to be mapped to the same ECU, Core, Partition depending on the defined mappingScope attribute. If mapping Scope is not specified then mappingScopeEcu shall be assumed.</p> <p>If a SW component (e.g. A) is a composition, none of the atomic SW components making up the A composition shall be mapped together with any of the atomic SW components making up the B composition. Furthermore, A and B shall be disjoint.</p>			
<b>Base</b>	ARObject, <a href="#">MappingConstraint</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.mappingConstraint</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
mappingScope	<a href="#">MappingScopeEnum</a>	0..1	attr	This attribute indicates whether the Component Separation mapping constraint applies to different ECUs, partitions or cores. If this attribute is not specified then mappingScopeEcu shall be assumed.
separated Component	<a href="#">SwComponentPrototype</a>	2	iref	The two components that have to be mapped to different ECUs <b>InstanceRef implemented by:</b> <a href="#">ComponentInSystemInstanceRef</a>

**Table 5.11: ComponentSeparation**

**[constr\_3004] Clustering and separation shall be exclusive** [Clustering and separation shall be exclusive, i.e. it SHALL NOT be possible that two [SwComponentPrototypes](#) A and B are associated both by a [ComponentClustering](#) and by a [ComponentSeparation](#) at the same time.]()

Please note that it is possible that one [SwComponentPrototype](#) is referenced by both the [ComponentClustering](#) and [ComponentSeparation](#), so the **[constr\_3004]** is about the pair of [SwComponentPrototypes](#) and not about a single one.

For example it shall be possible to associate [ComponentClustering](#) and [ComponentSeparation](#) at the same time, e.g.

- A and B have a [ComponentClustering\\_1](#) association
- B and C have a [ComponentSeparation\\_2](#) association
- A and D have a [ComponentSeparation\\_3](#) association

In this setup A and B are associated by a [ComponentClustering](#) and by a [ComponentSeparation](#) without violating **[constr\_3004]**.


### 5.1.5 J1939 Controller Application Mapping

J1939 is not restricted to mere communication protocols. It also specifies the communication of software functions (a.k.a. J1939 Controller Applications) and thus has a very dedicated view on the software of an automotive ECU. The approach taken by J1939 with respect to software is very similar to the way AUTOSAR specifies software-components.

However, J1939 uses a different terminology and associates such a software-component with a predefined function. In addition, every function in J1939 has a standardized id. This function id is distributed by the Controller Application to the network as part of the so-called "name" which is a unique identifier representing a Controller Application within the J1939 network management.

Controller Applications, to some extent, fulfill the role of a "virtual ECU" since they are visible as independent entities on a J1939 network. In terms of AUTOSAR modeling, the role of a "virtual ECU" for J1939 Controller Applications is fulfilled by the meta-class [J1939NmNode](#).

In order to make use of the AUTOSAR modeling approach for J1939 it is very helpful to associate a standardized function id with a software-component during an early phase of a development project. This function id shall later be mapped to a [J1939NmNode](#) with the identical [J1939NmNode.nodeName.function](#).

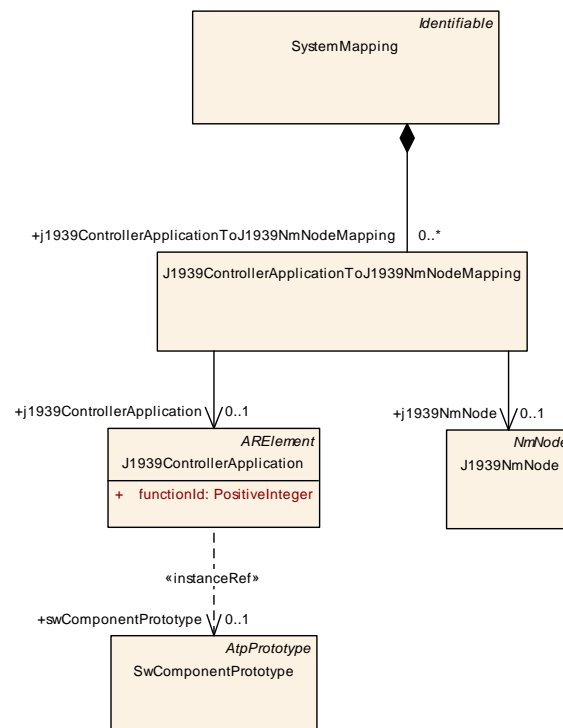

**Figure 5.6: J1939 Controller Application to J1939NmNode Mapping**

<b>Class</b>	<b>J1939ControllerApplicationToJ1939NmNodeMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	This meta-class represents the ability to map a J1939ControllerApplication to a J1939NmNode. Note that this is similar but not identical to the mapping of SwComponentPrototypes to EcuInstances; for J1939 the semantics of an EcuInstance itself is basically replaced by a J1939NmNode.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	SystemMapping.j1939ControllerApplicationToJ1939NmNodeMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
j1939ControllerApplication	J1939ControllerApplication	0..1	ref	Reference to the J1939 Controller Application that is mapped to the referenced J1939NmNode.
j1939NmNode	J1939NmNode	0..1	ref	J1939NmNode that is the target of the J1939ControllerApplicationToJ1939NmNodeMapping.

**Table 5.12: J1939ControllerApplicationToJ1939NmNodeMapping**

<b>Class</b>	<b>J1939ControllerApplication</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	This element represents a J1939 controller application. <b>Tags:</b> atp.recommendedPackage=J1939ControllerApplications			
<b>Base</b>	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
functionId	PositiveInteger	1	attr	This attribute represents the numerical function id of the J1939 controller application.
swComponentPrototype	SwComponentPrototype	0..1	iref	This represents the SwComponentPrototype (which is typically typed by a CompositionSwComponentType) that corresponds to the J1939ControllerApplication. <b>InstanceRef implemented by:</b> ComponentInSystemInstanceRef

**Table 5.13: J1939ControllerApplication**

**[constr\_3239] Consistent mapping of software-component to J1939NmNode**  
 [The value of attribute J1939NmNode.nodeName.function of a J1939NmNode referenced by J1939ControllerApplicationToJ1939NmNodeMapping in the role j1939NmNode shall be identical to the value of J1939ControllerApplication.functionId.]()

**[constr\_3240] Consistent mapping of J1939ControllerApplication to EcuInstance**  
 [A SwComponentPrototype that is referenced by a J1939ControllerApplication mapped to a specific J1939NmNode shall only be mapped to an EcuInstance that in turn owns the same J1939NmNode.]()

### 5.1.6 Affinity Constraints

This chapter defines the possibility to describe constraints for the mapping of RTEEvents to OsTasks. The meta-class OsTaskProxy is used in the System Description to represent an OsTask that is defined in the Ecu Configuration of the OS.

The mapping of an [RTEEvent](#) to an [OsTaskProxy](#) can be defined in the context of the System (see chapter 5.1.6.2) or in the context of a Software Composition (see chapter 5.1.6.1).

<b>Class</b>	<i>RTEEvent</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::RTEEvents			
<b>Note</b>	Abstract base class for all RTE-related events			
<b>Base</b>	<i>ARObject</i> , <i>AbstractEvent</i> , <i>AtpClassifier</i> , <i>AtpFeature</i> , <i>AtpStructureElement</i> , <a href="#">Identifiable</a> , <i>MultilanguageReferrable</i> , <a href="#">Referrable</a>			
<b>Subclasses</b>	AsynchronousServerCallReturnsEvent, BackgroundEvent, DataReceiveErrorEvent, DataReceivedEvent, DataSendCompletedEvent, DataWriteCompletedEvent, ExternalTriggerOccurredEvent, InitEvent, InternalTriggerOccurredEvent, ModeSwitchedAckEvent, OperationInvokedEvent, OsTaskExecutionEvent, SwcModeManagerErrorEvent, SwcModeSwitchEvent, TimingEvent, TransformerHardErrorEvent			
<b>Aggregated by</b>	<i>AtpClassifier</i> .atpFeature, <a href="#">SwcInternalBehavior.event</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
disabledMode	<a href="#">ModeDeclaration</a>	*	iref	Reference to the Modes that disable the Event. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=disabledMode.contextPort, disabledMode.contextModeDeclarationGroupPrototype, disabledMode.targetModeDeclaration <b>InstanceRef implemented by:</b> RModelInAtomicSwc InstanceRef
startOnEvent	<a href="#">RunnableEntity</a>	0..1	ref	The referenced RunnableEntity starts when the corresponding RTEEvent is raised.

**Table 5.14: RTEEvent**

<b>Class</b>	<i>OsTaskProxy</i>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::RteEventToOsTaskMapping			
<b>Note</b>	This meta-class represents a proxy for an OsTask in the System Description. <b>Tags:</b> atp.recommendedPackage=OsTaskProxies			
<b>Base</b>	<a href="#">ARElement</a> , <i>ARObject</i> , <i>CollectableElement</i> , <a href="#">Identifiable</a> , <i>MultilanguageReferrable</i> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
period	TimeValue	0..1	attr	This attribute specifies the period in seconds of this task in case of a cyclically activated task. Please note that this attribute is informative and not directly relevant for the AUTOSAR OS. But the attribute value can be mapped into the OS configuration to support configuration work flows using a fixed set of OsTasks.
preemptability	<a href="#">OsTaskPreemptabilityEnum</a>	0..1	attr	This attribute defines the preemptability of the task.
priority	PositiveInteger	0..1	attr	This attribute defines the priority of a task as a relative value, i.e. the values show only the relative ordering of the tasks.

**Table 5.15: OsTaskProxy**

<b>Enumeration</b>	<b>OsTaskPreemptabilityEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::RteEventToOsTaskMapping
<b>Note</b>	Enumeration that defines the possible preemptability values for OsTask.
<b>Aggregated by</b>	<a href="#">OsTaskProxy.preemptability</a>
<b>Literal</b>	<b>Description</b>
full	Task is preemptable. <b>Tags:</b> atp.EnumerationLiteralIndex=1
none	Task is not preemptable. <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 5.16: OsTaskPreemptabilityEnum**

The software component specific [OsTaskProxy](#) definitions can be mapped to [OsTaskProxy](#) definitions that are defined for a specific [EcuInstance](#) with the [AppOsTaskProxyToEcuTaskProxyMapping](#). [OsTaskProxy](#) elements that are related to an [EcuInstance](#) are referenced by the [EcuInstance](#) in the role [ecuTaskProxy](#).

**[TPS\_SYST\_02367] Execution Order of RTEEvents on a EcuInstance** [Software component specific [OsTaskProxy](#) elements ([appTaskProxy](#)) that are mapped by [AppOsTaskProxyToEcuTaskProxyMappings](#) to the same [ecuTaskProxy](#) shall be mapped together to the same [OsTask](#). Optionally the execution order of software component related [OsTaskProxy](#) elements in the [ecuTaskProxy](#) can be defined with the [offset](#) attribute.] ()


<b>Class</b>	<b>AppOsTaskProxyToEcuTaskProxyMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::RteEventToOsTaskMapping			
<b>Note</b>	This meta-class is used to map an <a href="#">OsTaskProxy</a> that was created in the context of a <a href="#">SwComponent</a> to an <a href="#">OsTaskProxy</a> that was created in the context of an <a href="#">Ecu</a> .			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.appOsTaskProxyToEcuTaskProxyMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
appTaskProxy	<a href="#">OsTaskProxy</a>	0..1	ref	Reference to an <a href="#">OsTaskProxy</a> that is created in the context of a <a href="#">SwComponent</a> .
ecuTaskProxy	<a href="#">OsTaskProxy</a>	0..1	ref	Reference to an <a href="#">OsTaskProxy</a> that is created in the context of an <a href="#">EcuInstance</a> .
offset	Integer	0..1	attr	This attribute is used to describe the position of the <a href="#">appTaskProxy</a> in an <a href="#">ecuTaskProxy</a> as a relative value, i.e. the values show only the relative position of the <a href="#">appTaskProxy</a> in the <a href="#">ecuTaskProxy</a> .

**Table 5.17: AppOsTaskProxyToEcuTaskProxyMapping**

The following figure shows the mapping approach where [RTEEvents](#) of Software Component A are mapped to [TaskProxy1](#) with offset 1 and 4 and [RTEEvents](#) of Software Component B are mapped to [TaskProxy2](#) with offset 2 and 3.

Both Software Components are mapped to the same [EcuInstance](#) and [AppOsTaskProxyToEcuTaskProxyMappings](#) that are referencing the [ecuTaskProxy](#) are defining the execution order on the [EcuInstance](#) with the [offset](#) attribute. According to the definition the [RTEEvents](#) of Software Component A (with

offset 1 and 4) are executed first. And the **RTEEvents** of Software Component B (with offset 2 and 3) are executed afterwards.

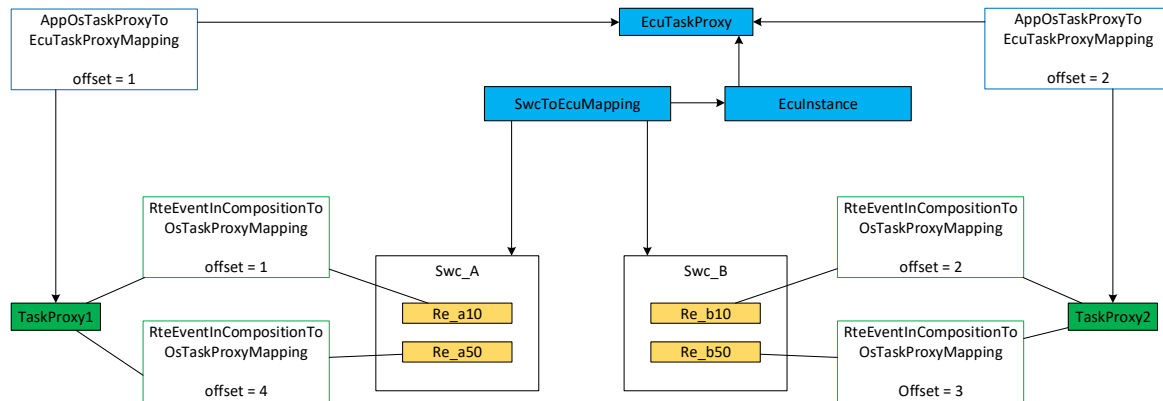


**Figure 5.7: AppOsTaskProxyToEcuTaskProxyMapping example**

### 5.1.6.1 RteEvent to OsTaskProxy mapping constraints in the context of a Software Composition

This section describes constraints for the mapping of **RTEEvents** to **OsTasks** in the context of a Software Composition.

**[TPS\_SYST\_02368] RTEEvent pairing constraint in Software Composition context** [RTEEvents defined in the context of a **CompositionSwComponentType** that are mapped by **RteEventInCompositionToOsTaskProxyMappings** to the same **OsTaskProxy** shall be mapped together to the same **OsTask**. Optionally an order of the **RTEEvents** in the **OsTaskProxy** can be defined with the **offset** attribute.]()

**[TPS\_SYST\_02369] RTEEvent separation constraint in Software Composition context** [RTEEvents defined in the context of a **CompositionSwComponentType** that are referenced by **RteEventInCompositionSeparation** are not allowed to be mapped to the same **OsTask**.]()

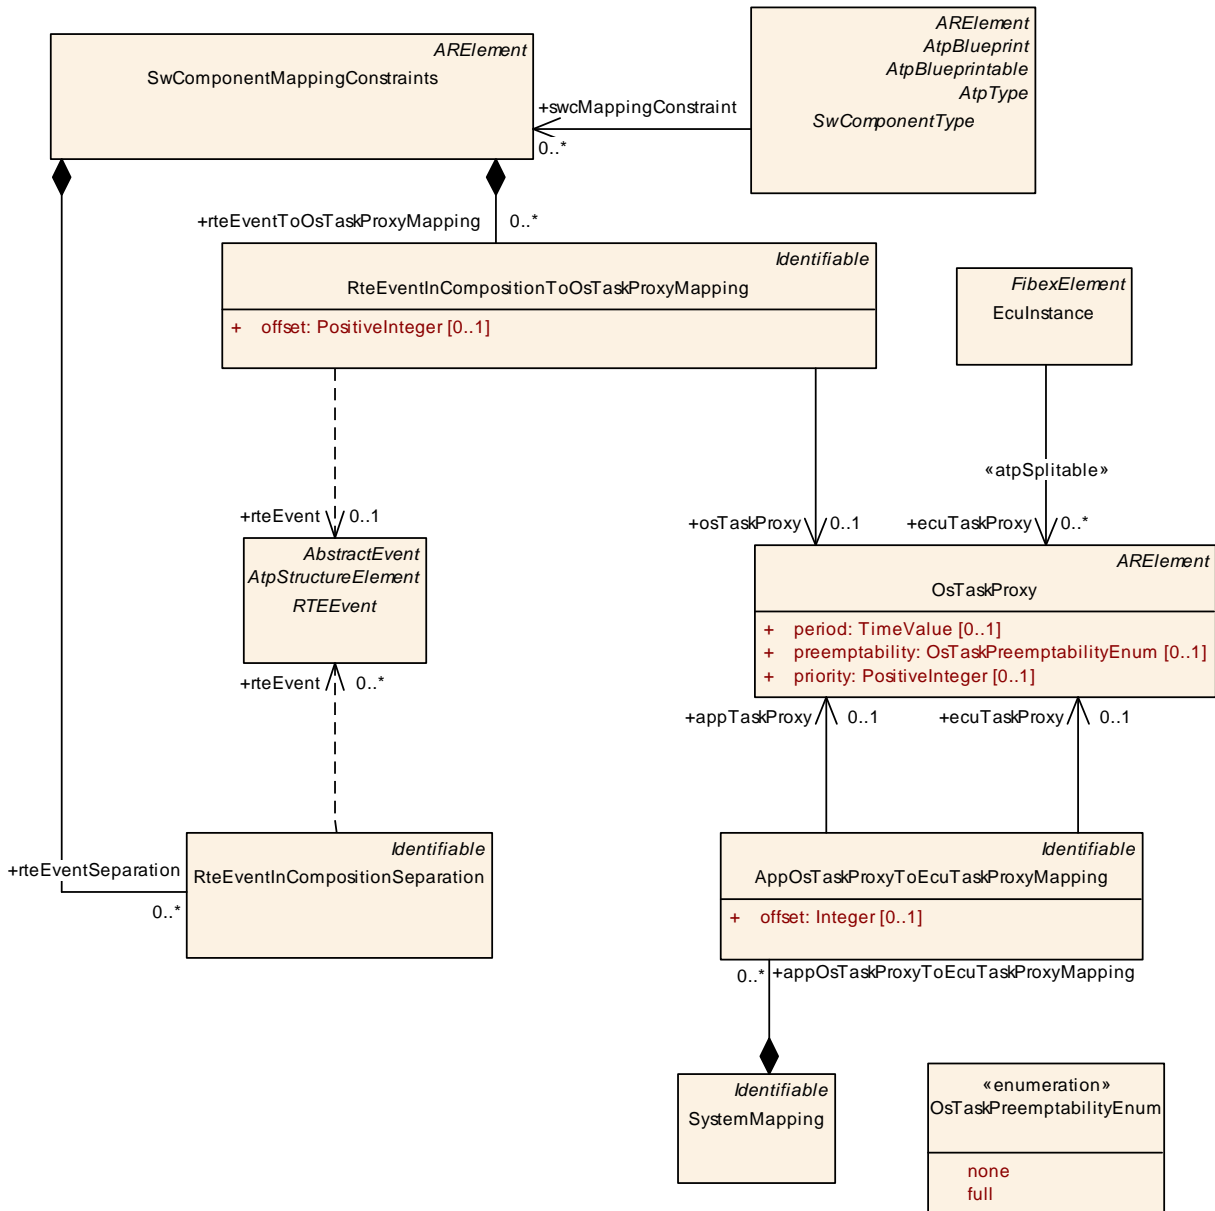

**Figure 5.8: Mapping of Rte Events to Os Tasks in Software Composition context**

<b>Class</b>	<b>RteEventInCompositionToOsTaskProxyMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::RteEventToOsTaskMapping			
<b>Note</b>	This meta-class is used to map an RteEvent to an OsTaskProxy in the context of a SwComposition. Several RteEventInCompositionToOsTaskProxyMappings can be used to define a pairing constraint that describes which RteEvents shall be mapped together into an OsTask. Optionally the relative position of the RteEvents in the OsTask can be defined in the mapping.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	SwComponentMappingConstraints.rteEventToOsTaskProxyMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class		RteEventInCompositionToOsTaskProxyMapping		
offset	PositiveInteger	0..1	attr	This attribute is used to describe the position of the RteEvent in the OsTask as a relative value, i.e. the values show only the relative position of the RteEvent in the OsTask.
osTaskProxy	<a href="#">OsTaskProxy</a>	0..1	ref	Reference to OsTaskProxy to which the RteEvent is mapped.
rteEvent	<a href="#">RTEEvent</a>	0..1	iref	Reference to RteEvent that is mapped to the OsTask Proxy. <b>InstanceRef implemented by:</b> RteEventInComposition InstanceRef

**Table 5.18: RteEventInCompositionToOsTaskProxyMapping**

Class		RteEventInCompositionSeparation		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::RteEventToOsTaskMapping			
<b>Note</b>	This meta-class is used to define a separation constraint in the context of a SwComposition. The referenced RteEvents are not allowed to be mapped into the same OsTask.			
<b>Base</b>	<i>ARObject</i> , <a href="#">Identifiable</a> , <i>MultilanguageReferrable</i> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	SwComponentMappingConstraints.rteEventSeparation			
Attribute	Type	Mult.	Kind	Note
rteEvent	<a href="#">RTEEvent</a>	*	iref	Reference to RteEvents that are not allowed to be mapped into the same OsTask. <b>InstanceRef implemented by:</b> RteEventInComposition InstanceRef


**Table 5.19: RteEventInCompositionSeparation**

### 5.1.6.2 RteEvent to OsTaskProxy mapping constraints in the context of the System

[TPS\_SYST\_02370] **RTEEvent** pairing constraint in **System** context [RTEEvents defined in the context of a **System** that are mapped by **RteEventInSystemToOsTaskProxyMappings** to the same **OsTaskProxy** shall be mapped together to the same **OsTask**. Optionally an order of the **RTEEvents** in the **OsTaskProxy** can be defined with the **offset** attribute.]()

[TPS\_SYST\_02371] **RTEEvent** separation constraint in **System** context [RTEEvents defined in the context of a **System** that are referenced by **RteEventInSystemSeparation** are not allowed to be mapped to the same **OsTask**.]()



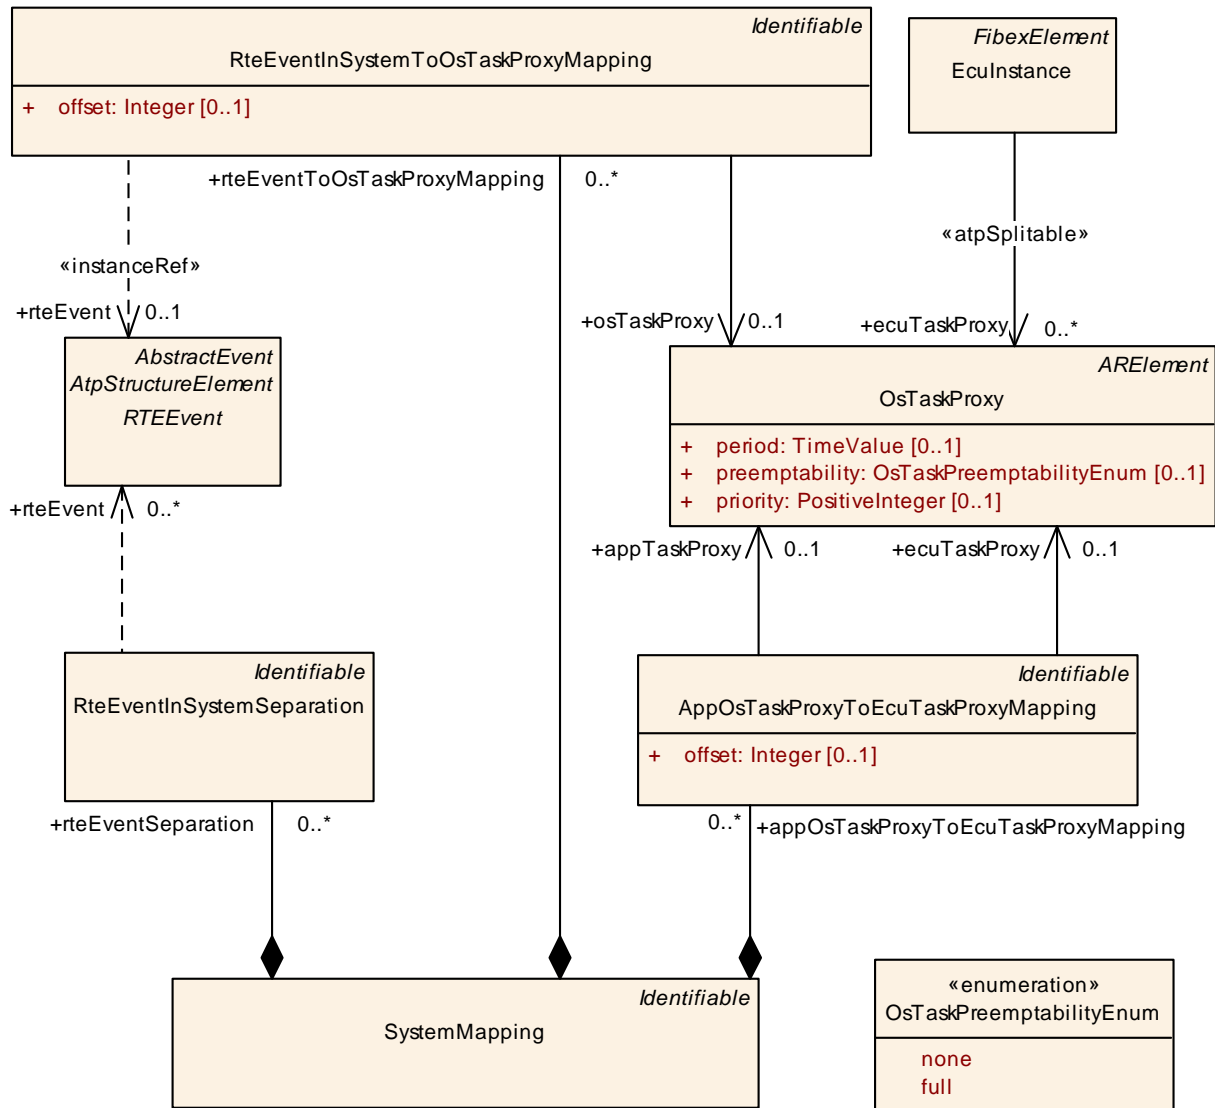

**Figure 5.9: Mapping of Rte Events to Os Tasks in System context**

<b>Class</b>	<b>RteEventInSystemToOsTaskProxyMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::RteEventToOsTaskMapping			
<b>Note</b>	This meta-class is used to map an RteEvent to an OsTaskProxy in the context of the System. Several RteEventToOsTaskProxyMappings can be used to define a pairing constraint that describes which Rte Events shall be mapped together into an OsTask. Optionally the position of the RteEvents in the OsTask can be defined.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	SystemMapping.rteEventToOsTaskProxyMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
offset	Integer	0..1	attr	This attribute is used to describe the position of the Rte Event in the OsTask as a relative value, i.e. the values show only the relative position of the RteEvent in the Os Task.
osTaskProxy	OsTaskProxy	0..1	ref	Reference to OsTaskProxy to which the RteEvent is mapped.





Class		RteEventInSystemToOsTaskProxyMapping		
rteEvent	<a href="#">RTEEvent</a>	0..1	iref	Reference to RteEvent that is mapped to the OsTask Proxy. <b>InstanceRef implemented by:</b> RteEventInSystem InstanceRef

**Table 5.20: RteEventInSystemToOsTaskProxyMapping**

Class		RteEventInSystemSeparation		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::RteEventToOsTaskMapping			
<b>Note</b>	This meta-class is used to define a separation constraint in the context of the System. The referenced RteEvents are not allowed to be mapped into the same OsTask.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">SystemMapping.rteEventSeparation</a>			
Attribute	Type	Mult.	Kind	Note
rteEvent	<a href="#">RTEEvent</a>	*	iref	Reference to RteEvents that are not allowed to be mapped into the same OsTask. <b>InstanceRef implemented by:</b> RteEventInSystem InstanceRef

**Table 5.21: RteEventInSystemSeparation**

## 5.2 Data Mapping

The data mapping description may either be mapping of client server communication or sender receiver communication (see Figure 5.10). It is used to map [VariableDataPrototypes](#) or [ClientServerOperations](#) of SW Component Ports to [SystemSignals](#).

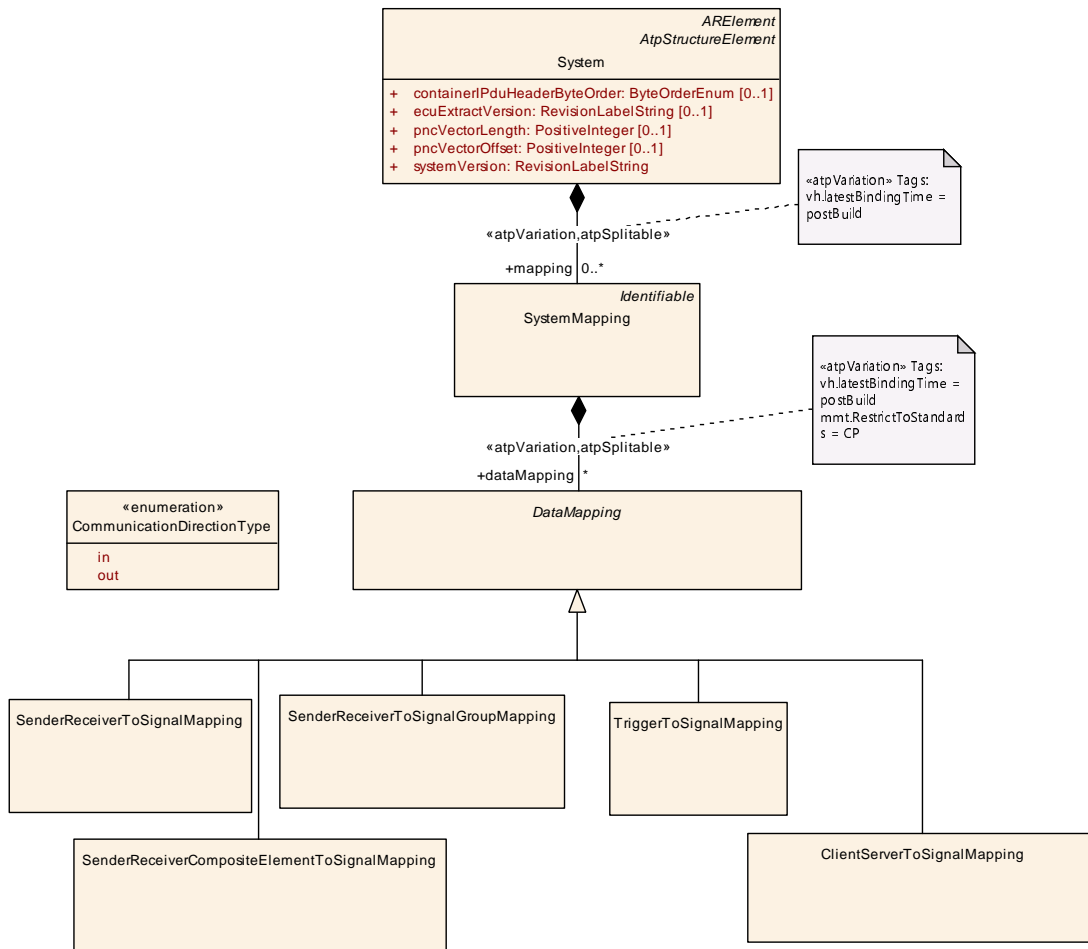


Figure 5.10: Overview: Data Mapping Description (DataMappingOverview)

[TPS\_SYST\_01030] Representation of **VariableDataPrototypes** and **ClientServerOperations** in System Description [SystemSignals represent VariableDataPrototypes and ClientServerOperations in the communication description.] (RS\_SYST\_00025)

[constr\_5055] **DataMapping** of elements of **PRPortPrototypes** is not supported [A DataMapping shall not map elements of PRPortPrototypes to SystemSignals]()

In other words the usage of PRPortPrototypes for inter-Ecu communication is not supported by AUTOSAR.

[constr\_5266] **VariableDataPrototype** of **NvDataInterface** shall not be mapped to a **SystemSignal** [A VariableDataPrototype that is aggregated by a NvDataInterface shall not be referenced by

- SenderReceiverToSignalGroupMapping in the role dataElement and
- SenderReceiverToSignalMapping in the role dataElement.

]()


[constr\_5267] **VariableDataPrototype** of **NvDataInterface** shall not be mapped to a **SystemSignal** via a delegation to a **PortPrototype** with a **SenderReceiverInterface** [If a **VariableDataPrototype** that is aggregated by a

- **SenderReceiverInterface** and that **SenderReceiverInterface** is referenced by a **PortPrototype** of a Composition and
- that **PortPrototype** is connected by a delegation connector with an inner **PortPrototype** of a **NvBlockSwComponentType** and
- that **PortPrototype** is typed by a **NvDataInterface**

then this **PortPrototype** shall not be referenced by:

- **SenderReceiverToSignalGroupMapping** in the role **dataElement** and
- **SenderReceiverToSignalMapping** in the role **dataElement**.


]()

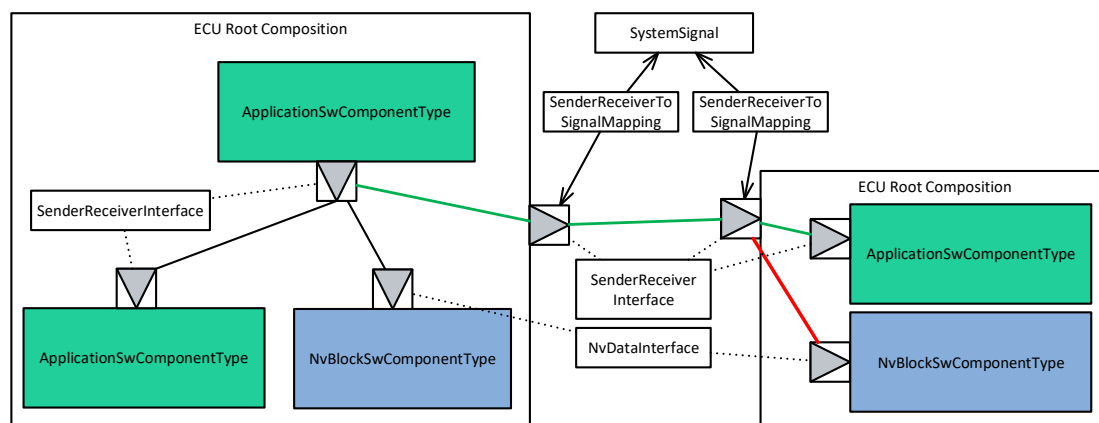

**Figure 5.11: Mapping scenario that is forbidden by constr\_5267**

The figure 5.11 shows the scenario that is forbidden by [constr\_5267]. The Port of the **NvBlockSwComponentType** is delegated to the Ecu Root Composition by the red connector. The **VariableDataPrototype** of the outer Port that is typed by a **SenderReceiverInterface** is mapped to a **SystemSignal** for communication over the network.

A scenario that would be allowed is shown in figure 5.12. Here the **NvBlockSwComponentType** is connected to an **ApplicationSwComponentType** in the same Ecu Root Composition. Data that is communicated over the network is contained in an additional Port of the **ApplicationSwComponentType** that is delegated to the outer Port of the Composition for the definition of the **DataMapping**. In this scenario [constr\_5266] and [constr\_5267] are not violated.

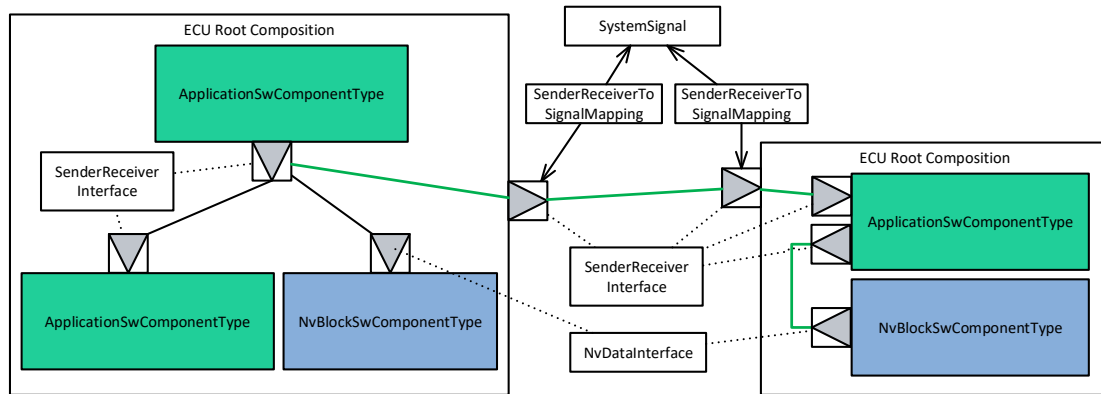

**Figure 5.12: Supported mapping scenario**

**[constr\_4000] Local communication of mode switches** [Ports with `ModeSwitch-Interfaces` cannot be connected across ECU boundaries.] ()

In other words a `DataMapping` for `ModeDeclarationGroupPrototypes` is not supported.

**[TPS\_SYST\_01032] Independence of SystemSignals from Communication-Clusters** [The `SystemSignals` can be defined independently of `Communication-Clusters`.] ()

This chapter describes how the `VariableDataPrototypes` and `ClientServer-Operations` are mapped onto `SystemSignals`. The Communication chapter ( 6 ) describes how the `SystemSignals` are mapped into Pdus and Frames, implementing the actual inter-ECU communication.

<b>Class</b>	<i>DataMapping</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	Mapping of port elements (data elements and parameters) to frames and signals.			
<b>Base</b>	<i>ARObject</i>			
<b>Subclasses</b>	<code>ClientServerToSignalMapping</code> , <code>SenderReceiverCompositeElementToSignalMapping</code> , <code>SenderReceiverToSignalGroupMapping</code> , <code>SenderReceiverToSignalMapping</code> , <code>TriggerToSignalMapping</code>			
<b>Aggregated by</b>	<code>SystemMapping.dataMapping</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
introduction	DocumentationBlock	0..1	aggr	This represents introductory documentation about the data mapping.

**Table 5.22: DataMapping**

<b>Class</b>	<b>SystemSignal</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	<p>The system signal represents the communication system's view of data exchanged between SW components which reside on different ECUs. The system signals allow to represent this communication in a flattened structure, with exactly one system signal defined for each data element prototype sent and received by connected SW component instances.</p> <p><b>Tags:</b>atp.recommendedPackage=SystemSignals</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dynamicLength	Boolean	1	attr	The length of dynamic length signals is variable in run-time. Only a maximum length of such a signal is specified in the configuration (attribute length in ISignal element).
physicalProps	<a href="#">SwDataDefProps</a>	0..1	aggr	<p>Specification of the physical representation.</p> <p><b>Stereotypes:</b> atpSplittable <b>Tags:</b>atp.Splitkey=physicalProps</p>

**Table 5.23: SystemSignal**

A [SystemSignal](#) is used to represent [VariableDataPrototypes](#) for network transport.

The motivation for [SystemSignals](#) is to represent (physical) data which is exchanged between ECUs as a design element. The [SystemSignal](#) gives data an identity and allows to refer to that information from different context.

[SystemSignals](#) are part of the communication matrix and are used as the binding blocks between the Software Component data access and the communication stack infrastructure.

The [SystemSignals](#) are mapped to the [PortPrototypes](#) of Software Components, and the [SystemSignals](#) are referenced by [ISignals](#) of the communication stack (see [section 6.2](#)). [ISignals](#) are placed in [ISignalIPdus](#) and [Pdus](#) are transported on networks.

The creation of the relation between elements of a [PortPrototype](#) and corresponding [SystemSignals](#) has valuable on its own as the bus-independent communication matrix and a milestone in the workflow towards further downstream processing where the focus changes to bus-specific descriptions. In other words, if you throw away the bus specific description, you don't have to start from scratch thanks to the existence of a stable bus-independent baseline from which the bus-specific part could be derived again.

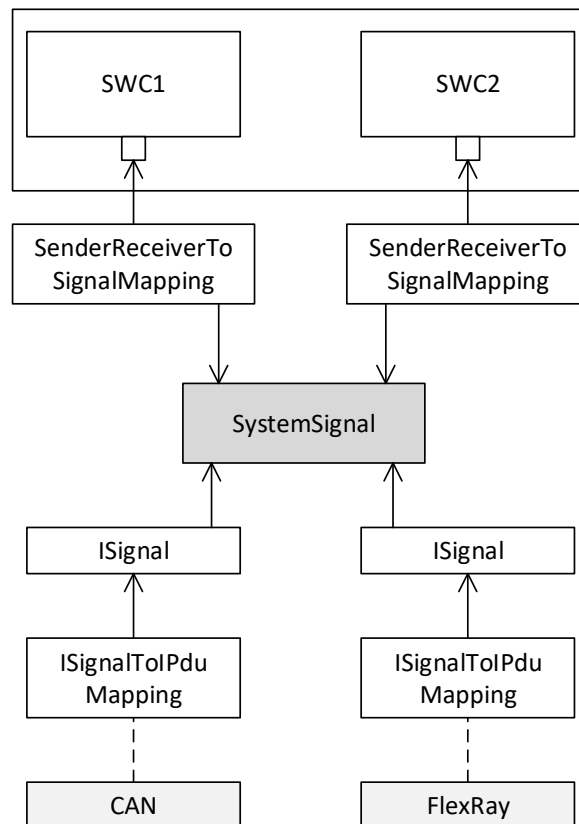


Figure 5.13: Example for a SystemSignal and a DataMapping

[TPS\_SYST\_01144] **Physical properties of a SystemSignal** [With the aggregation of `SwDataDefProps` in the role `physicalProps` the physical properties of the `SystemSignal` can be specified.]()

[TPS\_SYST\_05000] **System Description doesn't use a complete Software Component Description** [If the System Description doesn't use a complete Software Component Description (VFB View) the data mapping of `VariableDataPrototypes` or `ArgumentDataPrototypes` owned by `ClientServerOperations` on `SystemSignals` does not need to be defined. This supports the inclusion of legacy signals.] (*RS\_SYST\_00001*)

[constr\_3501] **Role of SystemSignal in 1:n communication** [In case of 1:n communication the `VariableDataPrototype` in the `PPortPrototype` of the `SwComponentPrototype` shall be mapped to only one `SystemSignal`.]()

[constr\_3086] **Role of SystemSignal in n:1 sender-receiver communication** [In case of n:1 communications

- if `DataTransformation` is used each sender shall be mapped to the same `SystemSignal`
- if `DataTransformation` is not used each sender shall be mapped

- to the same `SystemSignal` in case of a primitive `DataType` on the sender side,
- to the same `SystemSignalGroup` in case of a composite `DataType` on the sender side.

]()

**[constr\_5117] Client-Server communication over Ethernet** [A `SystemSignal` that is referenced by a `ClientServerToSignalMapping` in the role `callSignal` or `returnSignal` shall only be referenced by an `ISignal` that in turn is referenced by an `ISignalTriggering` aggregated by an `EthernetPhysicalChannel`.]()

In other words, the client-server communication is only supported by AUTOSAR on the Ethernet communication channel.

**[TPS\_SYST\_02150] Role of `SystemSignal` in inter-ECU client server communication over Ethernet with clients located on different ECUs** [In case of a n:1 inter-ECU client server communication over Ethernet with clients located on different ECUs exactly one `SystemSignal` per communication direction shall be used to define the client server interaction between the server and all clients since the relationship between the call and return is achieved by means of meta data items attached to the `Pdus` by the Socket Adapter.]()

**[TPS\_SYST\_02151] MetaData support required for inter-ECU client server communication over Ethernet with clients located on different ECUs** [The modeling of client server interaction over Ethernet with clients located on different ECUs requires the support of COM Stack MetaData. The relationship between the call and return is achieved by means of meta data items attached to the `Pdus` by the Socket Adapter.]()

**[TPS\_SYST\_01087] Role of `SystemSignal` in inter-ECU client server communication with clients located on the same ECU** [In case of n:1 inter-ECU client server communication it is allowed to use the same `SystemSignal` for several clients on the same Ecu, if the client identifier is used to distinguish the different clients.]()


**[TPS\_SYST\_02011] `initValues` of receivers that are mapped to the same Ecu** [All receivers of a given `SystemSignal` on the same `EcuInstance` shall have identical `initValues`.]()

**[constr\_3112] Invalidation support for partial mapping of a data element typed by composite data type** [If a `VariableDataPrototype` with a composite data type in a `PPortPrototype` is mapped to a `SystemSignalGroup` and only a subset of elements of the composite data type that are primitives is mapped to separate `SystemSignals` of the `SystemSignalGroup` then at least one mapped primitive shall have an `invalidValue` defined.]()

**[constr\_3074] No `TransmissionAcknowledgementRequest` for multiple senders** [If more than one `SenderComSpec` exist (in different `PortPrototypes` on atomic level) that refer to data elements effectively mapped to the same `SystemSignal` it is not allowed that any `SenderComSpec` aggregates `transmissionAcknowledge`.]()



Please note that the term “effectively mapped” refers to the fact that the `DataMapping` can refer to a `dataElement` in a "delegation" `PortPrototype` on the surface of a `rootSoftwareComposition` of an Ecu Extract OR to `PortPrototypes` inside the `rootSoftwareComposition`. Both ways shall be considered.

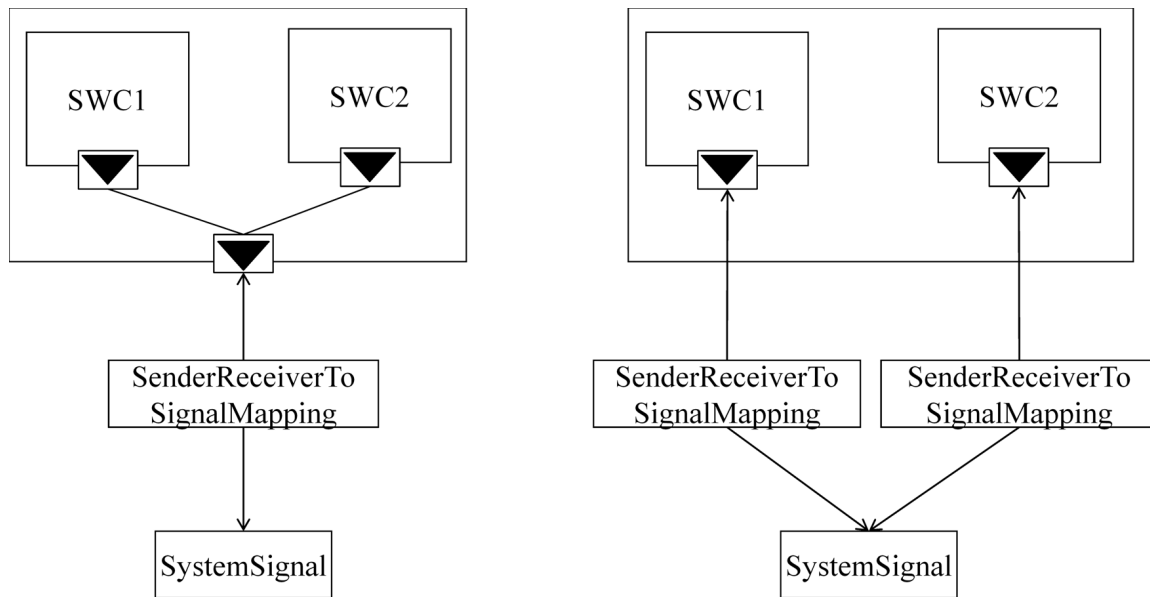

**Figure 5.14: Example for data elements that are effectively mapped to the same System-Signal**

The different kinds of data mapping are described in the following sections in detail.

Please note that the usage of `ImplementationDataTypes` within an `AnyInstanceRef` is described in detail in [2].

### 5.2.1 Mapping of Variable Data Prototypes on System Signals

This section describes how `VariableDataPrototypes` are mapped onto `System-Signals`. For a detailed description of the interconnection of software components refer to [5].

It is the task of system configuration to map `VariableDataPrototype`, `ClientServerOperation`, or `Trigger` contained in `PortPrototypes` referenced by the `SwConnector` onto a `SystemSignal`.

**[TPS\_SYST\_01033] DataMapping and SwConnector** [For the purpose of creating `DataMappings` `PortPrototypes` may or may not be connected by `SwConnectors`.]  
( )

The same `SystemSignal` may satisfy more than one `SwConnector` (1:n communication), and one `SwConnector` may be implemented by several `SystemSignals` (e.g. one per `VariableDataPrototype` in the `PortInterface` being connected), so there is no 1:1 mapping between `SwConnectors` and `SystemSignals`.

In the following sections, each reference to a `VariableDataPrototype`, `ArgumentDataPrototype`, or `Trigger` is of type `AtpInstanceRef` [2]. This means it not only references the actual `VariableDataPrototype`, but additionally contains contextual references to the `PortPrototype` and the hierarchy of `SwComponentPrototypes` forming the individual instance context of the `VariableDataPrototype`.

In a complete `System` with `category` `SYSTEM_DESCRIPTION`, it is sufficient to refer to the `VariableDataPrototype` in the `PPortPrototype` or the `RPortPrototype` to define the mapping of the communication between a provider and its receivers.

This is possible since the connectors implicitly define which `RPortPrototype` are connected to which `PPortPrototype`. In case the `System` with `category` `SYSTEM_DESCRIPTION` does not use a complete Software Component Description (VFB View) the data mapping needs not to be defined. This supports the inclusion of legacy signals.

**[TPS\_SYST\_01137] Several DataMappings may be defined for the same SystemSignal** [For a `SystemSignal` which is

- part in several `SystemSignalGroups`
- part in at least one `SystemSignalGroup` and at the same time is transmitted additionally as standalone `SystemSignal`
- used in N:1 sender-receiver communication where the same `SystemSignal` is used in `DataMappings` on the different senders
- used in a ClientServer communication where the same `SystemSignal` is used for a compatible `ClientServerOperation` in `DataMappings` on the different clients

several `DataMappings` may be defined.] ( )

As the `SystemSignal` represents a specific information this information may appear in different delivery units, but it is still the same information.

One example could be the tire pressure sensor value. At first each wheel's tire pressure value exists alone, as they are captured at each wheel individually. So there are 4 `SystemSignals` defined for a 4 wheel vehicle. If now some Software Component receives all 4 tire pressure values and puts them inside a `SystemSignalGroup` for consistent handling, then those 4 tire pressure values are still represented by the same

4 `SystemSignals`. Thus each individual tire pressure `SystemSignal` may appear as stand-alone as well as part of a `SystemSignalGroup`.

**[TPS\_SYST\_01050] `SystemSignal` in the System Extract and ECU Extract** [In the `System` with `category` `SYSTEM_EXTRACT` or `ECU_EXTRACT` the missing `DataMappings` on the complementary Sender/Receiver side needs to be supplemented.]()

In the `System` with `category` `SYSTEM_EXTRACT` or `ECU_EXTRACT`, where only the relevant parts of the `rootSoftwareComposition` are defined, it is necessary to utilize the information from the complementary `PortPrototype` if the corresponding `PortPrototype` is located on another ECU and thus is not part of the extract. This is described in more detail in chapter 13.2 and chapter 14.2.3.

Therefore in a `System` with `category` `ECU_EXTRACT` the `DataMappings` are provided on both, `PPortPrototypes` and `RPortPrototypes`.

**[TPS\_SYST\_01034] Data Mappings can be applied to compositions and atomic software components** [`DataMappings` can be applied to `CompositionSwComponentTypes` and on `AtomicSwComponentTypes`.]()

**[TPS\_SYST\_01035] Transformation of Data Mappings during flattening** [During the creation of the `System` with `category` `ECU_EXTRACT` (flattening) the existing `DataMappings` that refer to `CompositionSwComponentTypes` shall be transformed to refer to `AtomicSwComponentTypes` instead.]()

**[TPS\_SYST\_01036] No additional Data Mappings in composition substructure** [When a `CompositionSwComponentType` is refined by a supplier the already existing `DataMappings` that refer to the `CompositionSwComponentType` shall not be copied to the internal substructure.]()

Suppliers who add substructure to a `CompositionSwComponentType` by adding `SwComponentPrototypes` and `SwConnectors` shall respect the predefined `DataMappings` on the `CompositionSwComponentType`.

The OEM/Supplier Collaboration Scenario is described in chapter 13.1.

**[TPS\_SYST\_05034] `DataMapping` of `ImplementationDataType` of category UNION, DATA\_REFERENCE, or FUNCTION\_REFERENCE** [`SenderReceiverInterface.dataElement` that is typed by an `ImplementationDataType` of category UNION, DATA\_REFERENCE, or FUNCTION\_REFERENCE is not allowed to be mapped by a `DataMapping`.]()

Please note that for unions there is [constr\_1441] and [constr\_1607] that are restricting such a modeling.

### 5.2.1.1 Mapping of Variable Data Prototypes with primitive datatypes on System Signals (Sender-Receiver Communication)

This section describes the relation between the `VariableDataPrototype` with primitive datatypes and the `SystemSignal` (see Figure 5.15).

**[TPS\_SYST\_02082]** `SenderReceiverInterface.dataElement` is typed by an `ApplicationPrimitiveDataType` of category `VALUE` or `BOOLEAN` and a `DataTypeMap` exists [If a `SenderReceiverInterface.dataElement` is typed by an `ApplicationPrimitiveDataType` of category `VALUE` or `BOOLEAN` and a `DataTypeMap` exists that points to the `ApplicationPrimitiveDataType` and an `ImplementationDataType` of category `VALUE` or `TYPE_REFERENCE` that eventually references (via the `SwDataDefProps.implementationDataType`) an `ImplementationDataType` of category `VALUE`, then this `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

**[TPS\_SYST\_02083]** `SenderReceiverInterface.dataElement` is typed by an `ApplicationPrimitiveDataType` of category `STRING` and a `DataTypeMap` exists [If a `SenderReceiverInterface.dataElement` is typed by an `ApplicationPrimitiveDataType` of category `STRING` and a `DataTypeMap` exists that points to the `ApplicationPrimitiveDataType` and an `ImplementationDataType` of category `ARRAY` or `TYPE_REFERENCE` that eventually references (via the `SwDataDefProps.implementationDataType`) an `ImplementationDataType` of category `ARRAY` with a `subElement` that either

- represents the platform type `uint8` or
- references a `SwBaseType` with a `SwBaseType.baseTypeDefinition.baseTypeSize` set to the value 8 and the `SwBaseType.baseTypeDefinition.baseTypeEncoding` set to `NONE`,

then this `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

**[TPS\_SYST\_02084]** `SenderReceiverInterface.dataElement` is typed by an `ApplicationArrayDataType` and a `DataTypeMap` exists [If a `SenderReceiverInterface.dataElement` is typed by an `ApplicationArrayDataType` and a `DataTypeMap` exists that points to the `ApplicationArrayDataType` and an `ImplementationDataType` of category `ARRAY` or `TYPE_REFERENCE` that eventually references (via the `SwDataDefProps.implementationDataType`) an `ImplementationDataType` of category `ARRAY` with a `subElement` that either

- represents the platform type `uint8` or
- references a `SwBaseType` with a `SwBaseType.baseTypeDefinition.baseTypeSize` set to the value 8 and the `SwBaseType.baseTypeDefinition.baseTypeEncoding` set to `NONE`,

then this `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

[TPS\_SYST\_02085] **SenderReceiverInterface.dataElement** is typed by an **ImplementationDataType** of category **ARRAY** [If a `SenderReceiverInterface.dataElement` is typed by an `ImplementationDataType` of category `ARRAY` with a `subElement` that either

- represents the platform type `uint8` or
- references a `SwBaseType` with a `SwBaseType.baseTypeDefinition.baseTypeSize` set to the value 8 and the `SwBaseType.baseTypeDefinition.baseTypeEncoding` set to `NONE`,

then this `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

[TPS\_SYST\_02086] **SenderReceiverInterface.dataElement** is typed by an **ImplementationDataType** of category **VALUE** or **TYPE\_REFERENCE** [If a `SenderReceiverInterface.dataElement` is typed by an `ImplementationDataType` of category `VALUE` or `TYPE_REFERENCE` that eventually references (via the `SwDataDefProps.implementationDataType`) an `ImplementationDataType` of category `VALUE` then this `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

[TPS\_SYST\_02087] **SenderReceiverInterface.dataElement** is typed by an **ApplicationPrimitiveDataType** of category **BOOLEAN** and no **DataTypeMap** exists [The `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

[TPS\_SYST\_02088] **SenderReceiverInterface.dataElement** is typed by an **ApplicationArrayDataType** and no **DataTypeMap** exists [If a `SenderReceiverInterface.dataElement` is typed by an `ApplicationArrayDataType` and no `DataTypeMap` exists and the `ApplicationArrayDataType` fulfills the following conditions:

- `ApplicationPrimitiveDataType.swDataDefProps.dataConstr` exists and refers to a `PhysConstrs`.
- `ApplicationPrimitiveDataType.swDataDefProps.compuMethod` exists and refers to a `CompuMethod` of category `TEXTTABLE` and `CompuMethod.compuPhysToInternal` exists.
- Application of `ApplicationPrimitiveDataType.swDataDefProps.compuMethod` to `ApplicationPrimitiveDataType.swDataDefProps.dataConstr` yields a numerical range in [0 .. 255]

then the `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

[TPS\_SYST\_02089] **SenderReceiverInterface.dataElement** is typed by an **ApplicationPrimitiveDataType** of category **STRING** and no **DataTypeMap**

**exists** [If a `SenderReceiverInterface.dataElement` is typed by an `ApplicationPrimitiveDataType` of category `STRING` and no `DataTypeMap` exists and the `ApplicationPrimitiveDataType` fulfills the following conditions:

- `ApplicationPrimitiveDataType.swDataDefProps.swRecordLayout` exists and values of `SwRecordLayout.swRecordLayoutGroup.swRecordLayoutGroupFrom` and `SwRecordLayout.swRecordLayoutGroup.swRecordLayoutGroupTo` are both set to 1.
- `ApplicationPrimitiveDataType.swDataDefProps.swTextProps` exists and refers to an `SwBaseType` where the `SwBaseType.baseTypeDefinition.baseTypeEncoding` is set to `NONE` and the value of `SwBaseType.baseTypeDefinition.baseTypeSize` is set to 8.

then the `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

**[TPS\_SYST\_02090] `SenderReceiverInterface.dataElement` is typed by an `ApplicationPrimitiveDataType` of category `VALUE` and no `DataTypeMap` exists** [There is no clear indication that the `SenderReceiverInterface.dataElement` is a candidate for a primitive Data Mapping.]()

**[TPS\_SYST\_01037] primitive Data Mapping of UINT8-Arrays** [The primitive Data Mapping may also be used for the Data Mapping of UINT8-Arrays. This supports an optimized definition of the Data Mapping.]()

In other words it is allowed to map an array `VariableDataPrototype` consisting of UINT8 elements to exactly one `SystemSignal` in the context of one `SenderReceiverToSignalMapping`. A UINT8 element may be a String or an array that contains array elements of Integer type with range 0..255.

Background: In the ECU Configuration of the AUTOSAR COM module such a `SystemSignal` will be mapped to a COM Signal with the `ComSignalType` `UINT8_N`.

**[TPS\_SYST\_02279] `SenderReceiverInterface.dataElement` is typed by a “new-world” variable-size `ApplicationArrayDataType` and a `DataTypeMap` exists** [A `SenderReceiverInterface.dataElement` is a candidate for a primitive `SenderReceiverToSignalMapping` to a single `SystemSignal` if all following conditions are fulfilled:

- a `SenderReceiverInterface.dataElement` is typed by an `ApplicationArrayDataType` that fulfills the conditions of a “new-world” dynamic-size array data type according to [TPS\_SWCT\_01644] (see definition in Software Component Template [5])
- the `ApplicationArrayDataType` has the `dynamicArraySizeProfile = VSA_LINEAR`
- a `DataTypeMap` exists that points to both the `ApplicationArrayDataType` and an `ImplementationDataType` that fulfills the conditions of a “new-world”



dynamic size array data type according to [TPS\_SWCT\_01645] (see definition in Software Component Template [5]) and is of category STRUCTURE

- the referenced `ImplementationDataType` has the `dynamicArraySizeProfile` = VSA\_LINEAR
- the referenced `ImplementationDataType` has two `subElements` where
  - one is a numerical value that represents the size indicator and
  - the other is an `ImplementationDataTypeElement` of category ARRAY that in turn contains a `subElement` that represents the platform type uint8.

]()

**[constr\_5112] `ImplementationDataType` needs to be defined if a “new-world” variable-size `ApplicationArrayDataType` is mapped to a single `SystemSignal`** [A `SenderReceiverInterface.dataElement` that is typed by a “new-world” variable-size `ApplicationArrayDataType` according to [TPS\_SWCT\_01644] (see definition in Software Component Template [5]) is only allowed to be mapped to a single `SystemSignal` by the `SenderReceiverToSignalMapping` if a `DataTypeMap` exists that points to both the `ApplicationArrayDataType` and an `ImplementationDataType` that fulfills the conditions of a “new-world” dynamic size array data type according to [TPS\_SWCT\_01645] (see definition in Software Component Template [5]).]()

**[TPS\_SYST\_02280] `SenderReceiverInterface.dataElement` is typed by a “new-world” variable-size `ImplementationDataType`** [A `SenderReceiverInterface.dataElement` is a candidate for a primitive `SenderReceiverToSignalMapping` to a single `SystemSignal` if all following conditions are fulfilled:


- the `SenderReceiverInterface.dataElement` is typed by an `ImplementationDataType` that fulfills the conditions of a “new-world” dynamic-size array data type according to [TPS\_SWCT\_01645] (see definition in Software Component Template [5]).
- the referenced `ImplementationDataType` has the `dynamicArraySizeProfile` = VSA\_LINEAR
- the `ImplementationDataType` is of category STRUCTURE with two `subElements` where
  - one is a numerical value that represents the size indicator and
  - the other is an `ImplementationDataTypeElement` of category ARRAY that in turn contains a `subElement` that represents the platform type uint8.

]()

With [TPS\_SYST\_02279] and [TPS\_SYST\_02280] it is possible to map a `dataElement` that represents a “new-world” variable-size array to a single `SystemSignal` without the usage of a data transformer.

Please note that the mapping of an “old-world” variable-size array (see definition in Software Component Template [5]) to a single `SystemSignal` is not supported by AUTOSAR since the `Rte_Send` call does not include the IN parameter [length] and the `Rte_Receive` API does not include the OUT parameter [length] any longer that was used in former releases to pass the number of elements in the data element.

**[constr\_5113] Mapping of “old-world” variable size arrays to a single `SystemSignal` is not supported.** [The `SenderReceiverToSignalMapping` is not allowed to map a `dataElement` that is typed by an “old-world” variable size array defined by [TPS\_SWCT\_01641] and [TPS\_SWCT\_01642] (see definition in Software Component Template [5]) to a single `SystemSignal`.]()

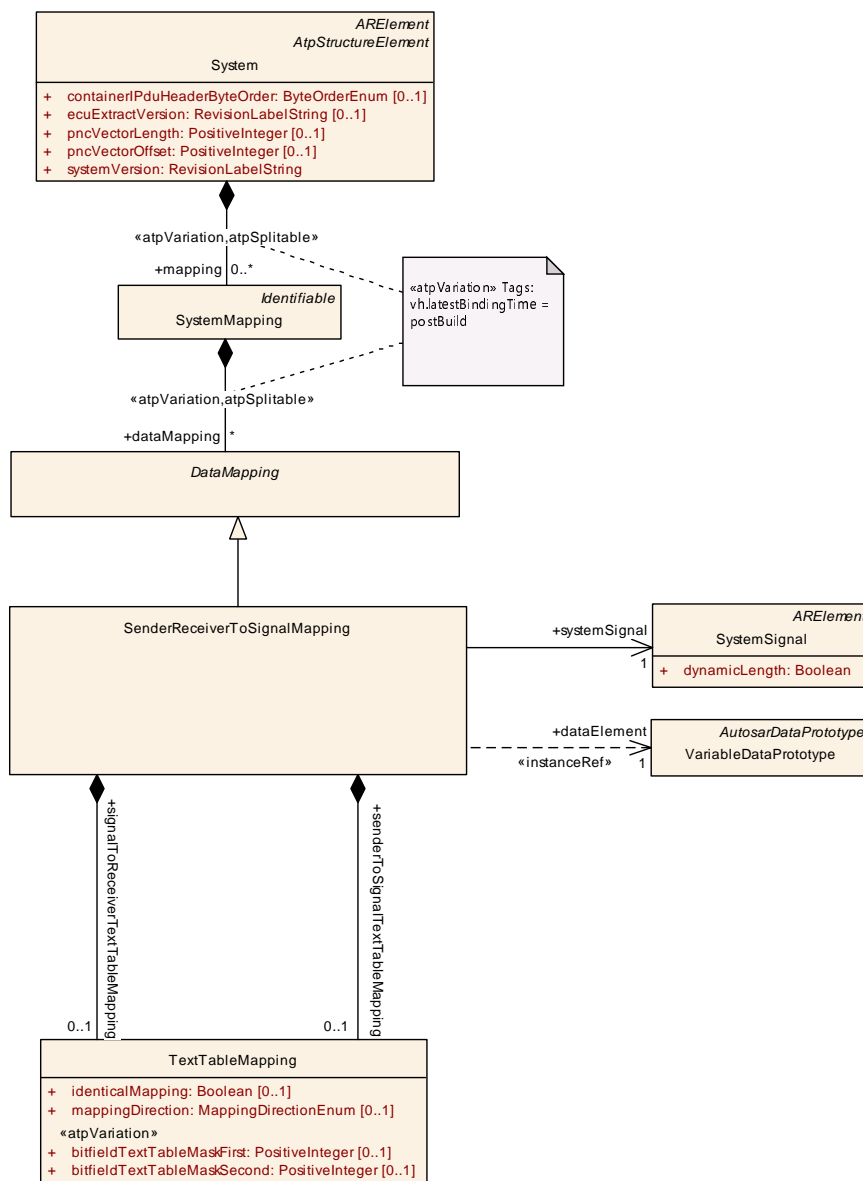

**Figure 5.15: Mapping of data elements with primitive datatypes (SenderReceiverPrimitiveTypeMapping)**



<b>Class</b>	<b>SenderReceiverToSignalMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	Mapping of a sender receiver communication data element to a signal.			
<b>Base</b>	<i>ARObject</i> , <a href="#">DataMapping</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.dataMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataElement	<a href="#">VariableDataPrototype</a>	1	iref	Reference to the data element. <b>InstanceRef implemented by:</b> <a href="#">VariableDataPrototype</a> <a href="#">SystemInstanceRef</a>
senderToSignal TextTable Mapping	<a href="#">TextTableMapping</a>	0..1	aggr	This mapping allows for the text-table translation between the sending <a href="#">DataPrototype</a> that is defined in the Port Prototype and the physicalProps defined for the System Signal.
signalTo ReceiverText TableMapping	<a href="#">TextTableMapping</a>	0..1	aggr	This mapping allows for the text-table translation between the physicalProps defined for the SystemSignal and a receiving <a href="#">DataPrototype</a> that is defined in the Port Prototype.
systemSignal	<a href="#">SystemSignal</a>	1	ref	Reference to the system signal used to carry the data element.

**Table 5.24: SenderReceiverToSignalMapping**

**[TPS\_SYST\_02304] Conversion of discrete parts of a CompuMethod on signal level in [SenderReceiverToSignalMapping](#)** [If a [SystemSignal](#) defines a [CompuMethod](#) of category TEXTTABLE, SCALE\_LINEAR\_AND\_TEXTTABLE, and BITFIELD\_TEXTTABLE, a conversion of the texttable part of the [CompuMethod](#) of the [AutosarDataType](#) of the sending [DataPrototype](#) to the [SystemSignal](#) as well as from the [SystemSignal](#) to the [CompuMethod](#) associated with the [AutosarDataType](#) of the receiving [DataPrototype](#) may be necessary.

For this purpose, meta-class [SenderReceiverToSignalMapping](#) aggregates the meta-class [TextTableMapping](#) in the roles [senderToSignalTextTableMapping](#) and [signalToReceiverTextTableMapping](#).]()

As explained in specification of the the AUTOSAR Software Component Template [5], the [TextTableMapping](#) allows enumerated types to be connected when they have the same or similar semantics but different numerical and/or symbolic representations of those semantics.

**[TPS\_SYST\_02305] Relevance of attribute [TextTableMapping.mappingDirection](#) in an aggregation by [SenderReceiverToSignalMapping](#)** [The value of attributes

- [SenderReceiverToSignalMapping.senderToSignalTextTableMapping.mappingDirection](#)
- [SenderReceiverToSignalMapping.signalToReceiverTextTableMapping.mappingDirection](#)

has no meaning and shall be ignored.]()

<b>Class</b>	<b>TextTableMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	Defines the mapping of two DataPrototypes typed by AutosarDataTypes that refer to CompuMethods of category TEXTTABLE, SCALE_LINEAR_AND_TEXTTABLE or BITFIELD_TEXTTABLE.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	DataPrototypeMapping.textTableMapping, SenderRecArrayTypeMapping.senderToSignalTextTableMapping, SenderRecArrayTypeMapping.signalToReceiverTextTableMapping, SenderReceiverToSignalMapping.senderToSignalTextTableMapping, SenderReceiverToSignalMapping.signalToReceiverTextTableMapping, SenderRecRecordElementMapping.senderToSignalTextTableMapping, SenderRecRecordElementMapping.signalToReceiverTextTableMapping, SubElementMapping.textTableMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
bitfieldTextTableMaskFirst	PositiveInteger	0..1	attr	This attribute can be used to support the mapping of bit field to bit field, boolean values to bit fields, and vice versa. The attribute defines the bit mask for the first element of the TextTableMapping.  <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime
bitfieldTextTableMaskSecond	PositiveInteger	0..1	attr	This attribute can be used to support the mapping of bit field to bit field, boolean values to bit fields, and vice versa. The attribute defines the bit mask for the second element of the TextTableMapping.  <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime
identicalMapping	Boolean	0..1	attr	If identicalMapping is set == true the values of the two referenced DataPrototypes do not need any conversion of the values.
mappingDirection	MappingDirectionEnum	0..1	attr	Specifies the conversion direction for which the TextTableMapping is applicable.
valuePair	TextTableValuePair	*	aggr	Defines a pair of values which are translated into each other.

**Table 5.25: TextTableMapping**

### 5.2.1.2 Mapping of Variable Data Prototypes with composite datatypes (Sender-Receiver Communication)

This section describes the mapping of [VariableDataPrototypes](#) typed by composite data types to [SystemSignals](#).

It is not possible to map a [VariableDataPrototype](#) typed by composite data type directly (without any additional mechanisms) to one [SystemSignal](#) because The RTE is required to treat AUTOSAR signals transmitted using sender-receiver communication consistently. For this purpose, data transformation or [SystemSignalGroups](#) is used.

There are two ways to map a [VariableDataPrototype](#) typed by composite data type to [SystemSignals/SystemSignalGroups](#):

1. Use data transformation and map it directly to a [SystemSignal](#).
2. Map it to a [SystemSignalGroup](#) with [SenderReceiverToSignalGroupMapping](#)

**[constr\_3506] Mapping of composite data type to `SystemSignals` in `SystemSignalGroup`** [Either all or a subset of elements of a composite data type shall be mapped to `SystemSignals` which shall be members of one `SystemSignalGroup` if no data transformation (except COM Based Transformer) is used.

There are two exceptions to this rule:

- it is allowed to map an array `VariableDataPrototype` consisting of `UINT8` elements to exactly one `SystemSignal` in the context of one `SenderReceiverToSignalMapping` (see [TPS\_SYST\_01037]).
- in case the COM Based Transformer [18] is used it is the integral part of the approach to have a fixed mapping of the individual elements of composite data types to `SystemSignals` in a `SystemSignalGroup` ([TPS\_SYST\_02058]).

]()

#### 5.2.1.2.1 Data Transformation

If data transformation is used, the consistency of the composite data is assured by the transformation.

A `VariableDataPrototype` typed by composite data type can be mapped to one `SystemSignal` without any `SystemSignalGroup` if data transformation is used.

In that case any required mapping between the `ApplicationCompositeElementDataPrototypes` of the `VariableDataPrototype` of the connected `PortPrototypes` needs to be expressed by means of a `PortInterfaceMapping` attached to the `SwConnector` connecting the two `PortPrototypes` and not by means of two separated `DataMappings` (one referencing the `VariableDataPrototype` at the `PPortPrototype` and the other one referencing the `VariableDataPrototype` at the `RPortPrototype`).

During creation of a System Extract of the System Configuration Description or the creation of an ECU Extract of the System Configuration Description, this `PortInterfaceMapping` needs to be preserved in order to support proper deserializing transformation at the receiver side (see chapter 13.4 and 14.2).

See chapter 7 for details how to enable data transformation.

In case the COM Based Transformer [18] is used the mapping from section 7.3.3 is required.


#### 5.2.1.2.2 Mapping via SystemSignalGroups

The `VariableDataPrototype` that is referenced by `dataElement` can be typed by an `ApplicationDataType` or by an `ImplementationDataType`. This type decides which reference is used within the `SenderRecRecordElementMapping` and `SenderRecArrayElementMapping`.

Composite `DataPrototypes` may nest within composite `VariableDataPrototypes`. Each element typed by a primitive data type of such nested composite `VariableDataPrototype` can be mapped to one `SystemSignal` of a `SystemSignalGroup`.

Please note that not every single element typed by a primitive data type needs to be mapped to a `SystemSignal` since a partial mapping is also supported that maps a subset of elements of the composite data type to separate `SystemSignals` of a `SystemSignalGroup`.

The mapping between the `SystemSignal` and the `VariableDataPrototype` is provided in the `SenderReceiverToSignalGroupMapping` (see Figure 5.16).

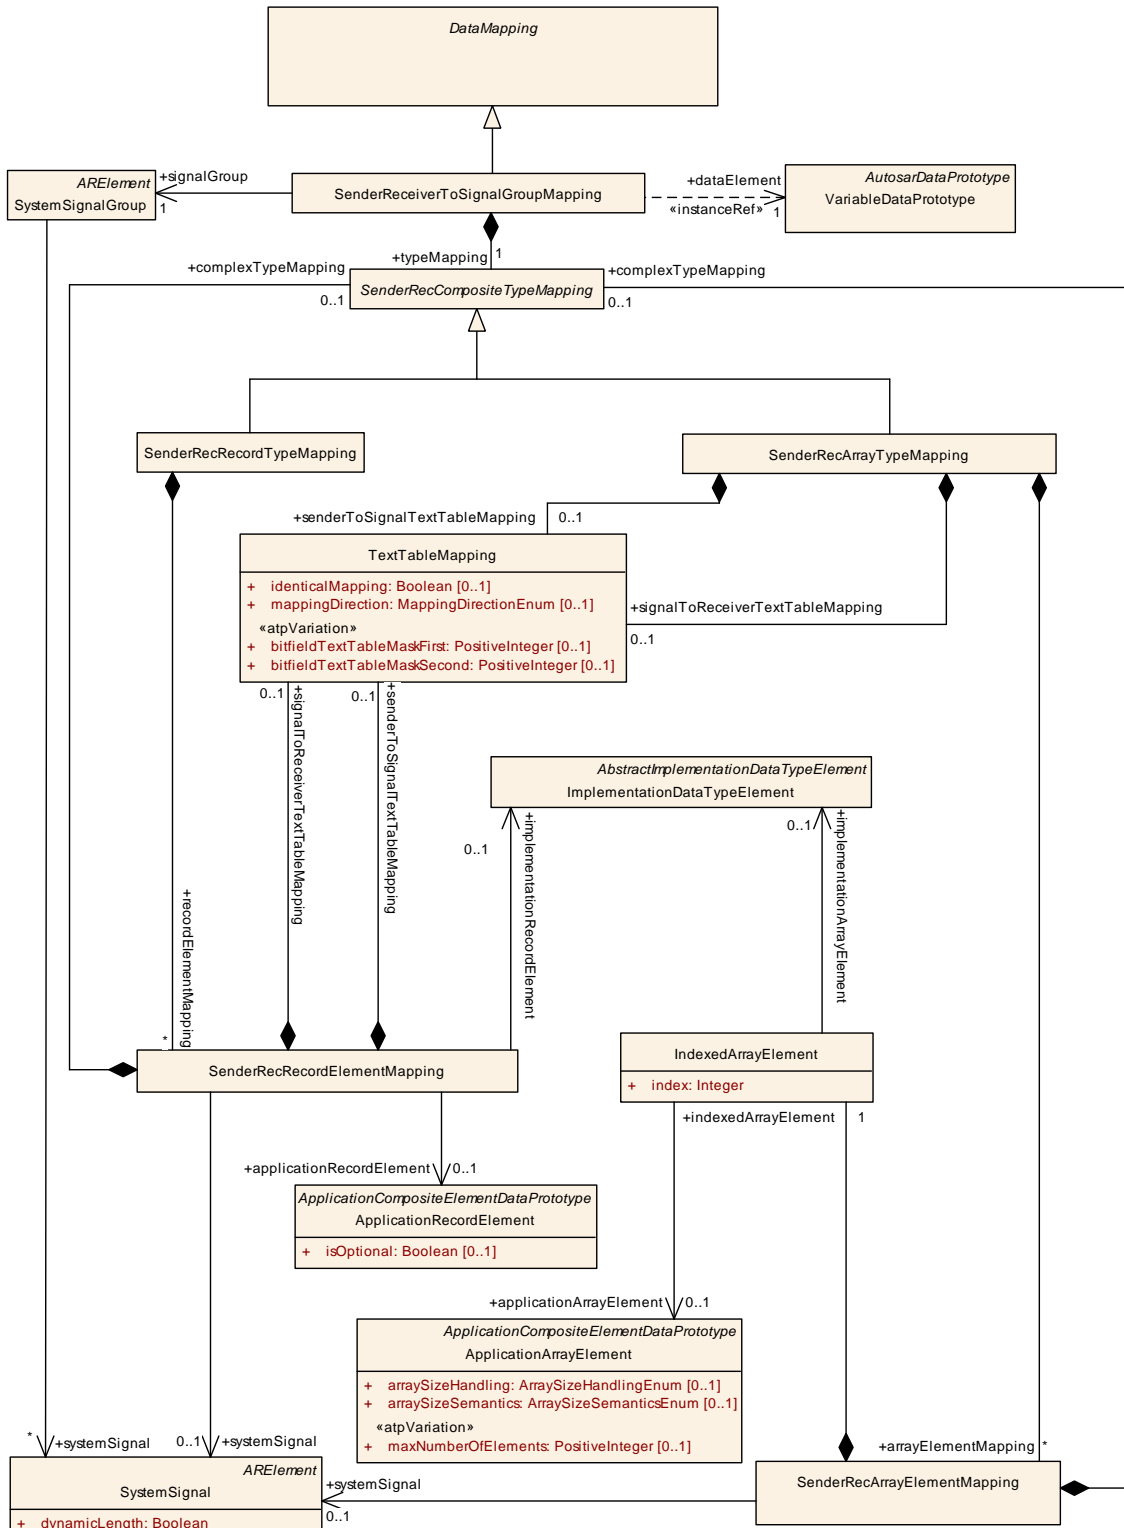

**Figure 5.16: Mapping of data elements with composite data types (SenderRecCompositeTypeMapping)**

**[constr\_3000] valid SenderRecCompositeTypeMappings** [All SenderRecRecordElementMappings or SenderRecArrayElementMappings aggregated in the context of a given SenderReceiverToSignalGroupMapping shall

reference a `SystemSignal` that is also referenced in the role `systemSignal` by the `SystemSignalGroup` that is referenced by the enclosing `SenderReceiverToSignalGroupMapping` in the role `signalGroup`.]()

In other words: within the context of an `SenderReceiverToSignalGroupMapping`, it shall only be possible to refer to a `SystemSignal` that is a member of the `SystemSignalGroup` referenced by the `SenderReceiverToSignalGroupMapping`.

Please note that [constr\_3000] does not demand that all leaf elements of the composite data type are actually mapped to a `SystemSignal`.

**[TPS\_SYST\_02278] Existence of `SystemSignals` in a `SystemSignalGroup` that are not referenced by a `SenderRecCompositeTypeMapping`** [There are use cases where not all `SystemSignals` of a `SystemSignalGroup` are referenced by a `SenderRecRecordElementMapping` or a `SenderRecArrayElementMapping`. One example is the ComBased Transformer use case where the `SystemSignalGroup` contains `SystemSignals` that are added by additional Transformers like the E2E Transformer (e.g. CRC and Alive Counter), but only the application data element signals are mapped by the `SenderReceiverToSignalGroupMapping`. One additional use case is the partial mapping of composite data types where only a subset of elements of the composite data type are mapped to `SystemSignals` of the `SystemSignalGroup`.]()

<b>Class</b>	<code>SenderReceiverToSignalGroupMapping</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	Mapping of a sender receiver communication data element with a composite datatype to a signal group.			
<b>Base</b>	<code>ARObject</code> , <code>DataMapping</code>			
<b>Aggregated by</b>	<code>SystemMapping.dataMapping</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataElement	<code>VariableDataPrototype</code>	1	iref	Reference to a data element with a composite datatype which is mapped to a signal group. <b>InstanceRef implemented by:</b> <code>VariableDataPrototypeInSystemInstanceRef</code>
signalGroup	<code>SystemSignalGroup</code>	1	ref	Reference to the signal group, which contain all primitive datatypes of the composite type
typeMapping	<code>SenderRecCompositeTypeMapping</code>	1	aggr	The <code>CompositeTypeMapping</code> maps the <code>ApplicationArrayElements</code> and <code>ApplicationRecordElements</code> to <code>Signals</code> of the <code>SignalGroup</code> .

**Table 5.26: SenderReceiverToSignalGroupMapping**

<b>Class</b>	<b>SenderRecCompositeTypeMapping</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	<p>Two mappings exist for the composite data types: "ArrayTypeMapping" and "RecordTypeMapping". In both, a primitive datatype will be mapped to a system signal.</p> <p>But it is also possible to combine the arrays and the records, so that an "array" could be an element of a "record" and in the same manner a "record" could be an element of an "array". Nesting these data types is also possible.</p> <p>If an element of a composite data type is again a composite one, the "CompositeTypeMapping" element will be used one more time (aggregation between the ArrayElementMapping and CompositeTypeMapping or aggregation between the RecordElementMapping and CompositeTypeMapping).</p>			
<b>Base</b>	<i>ARObject</i>			
<b>Subclasses</b>	<a href="#">SenderRecArrayTypeMapping</a> , <a href="#">SenderRecRecordTypeMapping</a>			
<b>Aggregated by</b>	<a href="#">SenderRecArrayElementMapping.complexTypeMapping</a> , <a href="#">SenderReceiverCompositeElementToSignalMapping.typeMapping</a> , <a href="#">SenderReceiverToSignalGroupMapping.typeMapping</a> , <a href="#">SenderRecRecordElementMapping.complexTypeMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 5.27: SenderRecCompositeTypeMapping**

<b>Class</b>	<b>SenderRecArrayTypeMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	If the ApplicationCompositeDataType is an Array, the "ArrayTypeMapping" will be used.			
<b>Base</b>	ARObject, <a href="#">SenderRecCompositeTypeMapping</a>			
<b>Aggregated by</b>	<a href="#">SenderRecArrayElementMapping.complexTypeMapping</a> , <a href="#">SenderReceiverCompositeElementToSignalMapping.typeMapping</a> , <a href="#">SenderReceiverToSignalGroupMapping.typeMapping</a> , <a href="#">SenderRecRecordElementMapping.complexTypeMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
arrayElementMapping	<a href="#">SenderRecArrayElementMapping</a>	*	aggr	Each ApplicationArrayElement shall be mapped on a SystemSignal.
senderToSignalTextTableMapping	<a href="#">TextTableMapping</a>	0..1	aggr	This mapping allows for the text-table translation between the sending DataPrototype that is defined in the Port Prototype and the physicalProps defined for the System Signal.
signalToReceiverTextTableMapping	<a href="#">TextTableMapping</a>	0..1	aggr	This mapping allows for the text-table translation between the physicalProps defined for the SystemSignal and a receiving DataPrototype that is defined in the Port Prototype.

**Table 5.28: SenderRecArrayTypeMapping**

<b>Class</b>	<b>SenderRecRecordTypeMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	If the ApplicationCompositeDataType is a Record, the "RecordTypeMapping" will be used.			
<b>Base</b>	ARObject, <a href="#">SenderRecCompositeTypeMapping</a>			
<b>Aggregated by</b>	<a href="#">SenderRecArrayElementMapping.complexTypeMapping</a> , <a href="#">SenderReceiverCompositeElementToSignalMapping.typeMapping</a> , <a href="#">SenderReceiverToSignalGroupMapping.typeMapping</a> , <a href="#">SenderRecRecordElementMapping.complexTypeMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
recordElementMapping	<a href="#">SenderRecRecordElementMapping</a>	*	aggr	Each ApplicationRecordElement shall be mapped on a SystemSignal.

**Table 5.29: SenderRecRecordTypeMapping**

<b>Class</b>	<b>SenderRecRecordElementMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	<p>Mapping of a primitive record element to a SystemSignal. If the VariableDataPrototype that is referenced by SenderReceiverToSignalGroupMapping is typed by an ApplicationDataType the reference applicationRecordElement shall be used. If the VariableDataPrototype is typed by the ImplementationDataType the reference implementationRecordElement shall be used. Either the implementationRecordElement or applicationRecordElement reference shall be used.</p> <p>If the element is composite, there will be no mapping to the SystemSignal (multiplicity 0). In this case the RecordElementMapping element will aggregate the complexTypeMapping element. In that way also the composite datatypes can be mapped to SystemSignals.</p>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">SenderRecRecordTypeMapping.recordElementMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
applicationRecordElement	<a href="#">ApplicationRecordElement</a>	0..1	ref	Reference to an ApplicationRecordElement in the context of the dataElement or in the context of a composite element.
complexTypeMapping	<a href="#">SenderRecCompositeTypeMapping</a>	0..1	aggr	This aggregation will be used if the element is composite.







Class	SenderRecRecordElementMapping			
implementationRecordElement	<a href="#">ImplementationDataTypeElement</a>	0..1	ref	Reference to an ImplementationRecordElement in the context of the dataElement or in the context of a composite element.
senderToSignalTextTableMapping	<a href="#">TextTableMapping</a>	0..1	aggr	This mapping allows for the text-table translation between the sending DataPrototype that is defined in the Port Prototype and the physicalProps defined for the System Signal.
signalToReceiverTextTableMapping	<a href="#">TextTableMapping</a>	0..1	aggr	This mapping allows for the text-table translation between the physicalProps defined for the SystemSignal and a receiving DataPrototype that is defined in the Port Prototype.
systemSignal	<a href="#">SystemSignal</a>	0..1	ref	Reference to the system signal used to carry the primitive ApplicationRecordElement.

**Table 5.30: SenderRecRecordElementMapping**

**[constr\_3230] Usage of [SenderRecRecordElementMapping.applicationRecordElement](#)** [[SenderRecRecordElementMapping.applicationRecordElement](#) shall only be used if the referenced context element ([VariableDataPrototype](#) that is referenced by the [SenderReceiverToSignalGroupMapping.dataElement](#)) is typed by an [ApplicationDataType](#).]()

**[constr\_3244] Usage of [SenderRecRecordElementMapping.implementationRecordElement](#)** [[SenderRecRecordElementMapping.implementationRecordElement](#) shall only be used if the referenced context element ([VariableDataPrototype](#) that is referenced by the [SenderReceiverToSignalGroupMapping.dataElement](#)) is typed by an [ImplementationDataType](#).]()

Class	SenderRecArrayElementMapping			
Package	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
Note	<p>The SenderRecArrayElement may be a primitive one or a composite one. If the element is primitive, it will be mapped to the SystemSignal (multiplicity 1). If the VariableDataPrototype that is referenced by SenderReceiverToSignalGroupMapping is typed by an ApplicationDataType the reference to the ApplicationArrayElement shall be used. If the VariableDataPrototype is typed by the ImplementationDataType the reference to the ImplementationArrayElement shall be used.</p> <p>If the element is composite, there will be no mapping to the SystemSignal (multiplicity 0). In this case the ArrayElementMapping element will aggregate the TypeMapping element. In that way also the composite datatypes can be mapped to SystemSignals.</p> <p>Regardless whether composite or primitive array element is mapped the indexed element always needs to be specified.</p>			
Base	<a href="#">ARObject</a>			
Aggregated by	<a href="#">SenderRecArrayTypeMapping.arrayElementMapping</a>			
Attribute	Type	Mult.	Kind	Note
complexTypeMapping	<a href="#">SenderRecCompositeTypeMapping</a>	0..1	aggr	This aggregation will be used if the element is composite.
indexedArrayElement	<a href="#">IndexedArrayElement</a>	1	aggr	Reference to an indexed array element in the context of the dataElement or in the context of a composite element.
systemSignal	<a href="#">SystemSignal</a>	0..1	ref	Reference to the system signal used to carry the primitive ApplicationArrayElement.

**Table 5.31: SenderRecArrayElementMapping**


<b>Class</b>	<b>IndexedArrayElement</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	This element represents exactly one indexed element in the array. Either the applicationArrayElement or implementationArrayElement reference shall be used.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">SenderRecArrayElementMapping.indexedArrayElement</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
applicationArrayElement	ApplicationArrayElement	0..1	ref	Reference to an ApplicationArrayElement in an array.
implementationArrayElement	<a href="#">ImplementationDataTypeElement</a>	0..1	ref	Reference to an ImplementationDataTypeElement in an array.
index	Integer	1	attr	Position of an element in an array. Starting position is 0.

**Table 5.32: IndexedArrayElement**

**[constr\_3231] Usage of [IndexedArrayElement.applicationArrayElement](#)**  
 [[IndexedArrayElement.applicationArrayElement](#) shall only be used if the referenced context element ([VariableDataPrototype](#) that is referenced by the [SenderReceiverToSignalGroupMapping.dataElement](#)) is typed by an [ApplicationDataType](#).]()

**[constr\_3245] Usage of [IndexedArrayElement.implementationArrayElement](#)**  
 [[IndexedArrayElement.implementationArrayElement](#) shall only be used if the referenced context element ([VariableDataPrototype](#) that is referenced by the [SenderReceiverToSignalGroupMapping.dataElement](#)) is typed by an [ImplementationDataType](#).]()

Figure 5.17 shows a mapping example for nested composite data types.

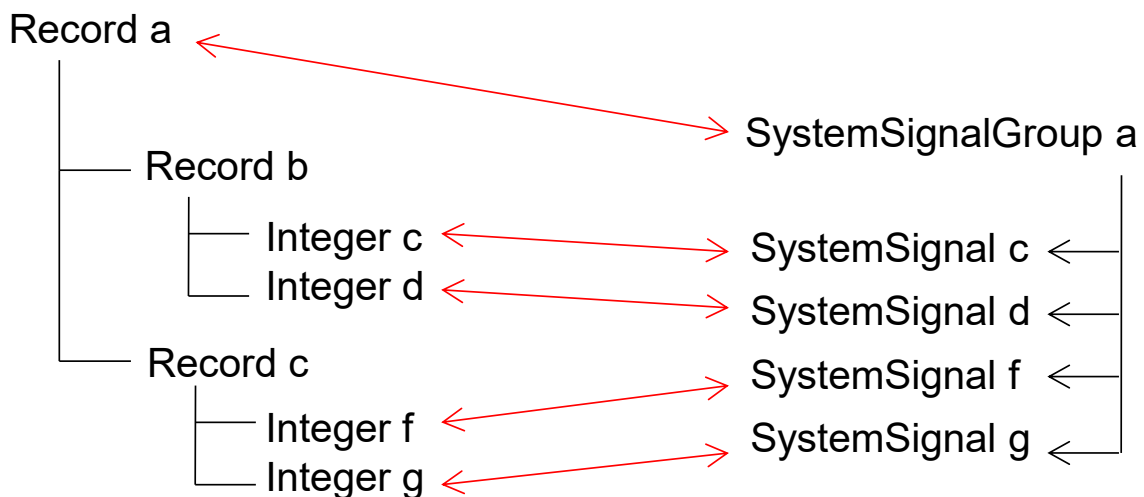

**Figure 5.17: Mapping example for nested composite data types**

*Record a* is mapped with [SenderReceiverToSignalGroupMapping](#) to a [SystemSignalGroup](#). The content of *Record a* is mapped with the [SenderRecRecordTypeMapping](#). Since the first element of *Record a* is *Record b* the [SenderRecRecordElementMapping](#) does not contain a reference to a [SystemSignal](#)

because signals apply only to atomic data items. Instead it contains a `complexTypeMapping` with two `SenderRecRecordElementMappings` for `Integer c` and `Integer d`. These two elements are mapped to `SystemSignals`.

Please note that a partial mapping of a data element typed by composite data type in a `PPortPrototype` is also supported. If a `VariableDataPrototype` with a composite data type in a `PPortPrototype` is mapped to a `SystemSignalGroup` then it is allowed to map only a subset of elements of the composite data type that are primitives to separate `SystemSignals` of the `SystemSignalGroup`. This means that it is possible to transmit a subset of a composite data element in a `ISignalGroup` over the network. Figure 5.18 shows a partial mapping example for nested composite data types.

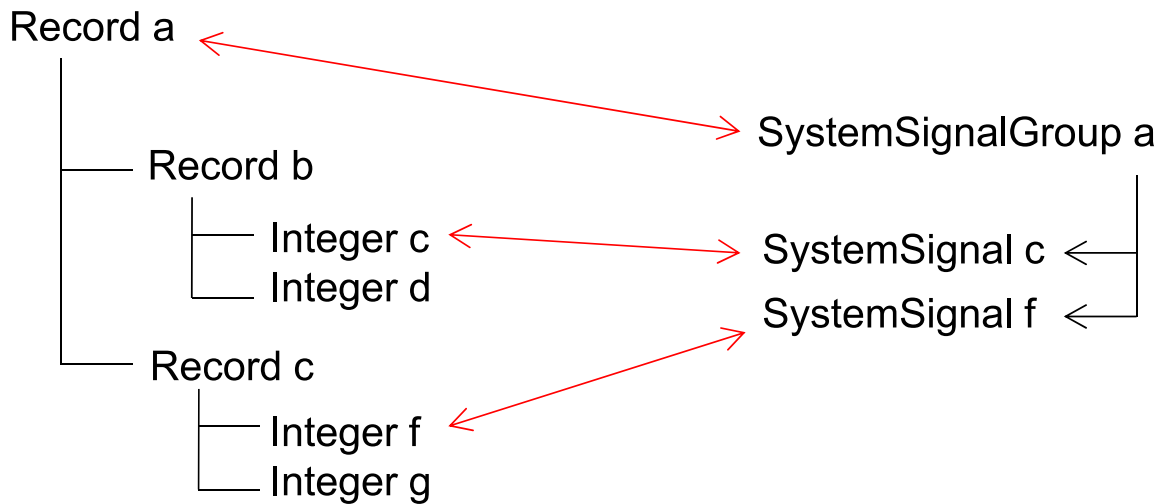


Figure 5.18: Partial mapping example for nested composite data types

**[TPS\_SYST\_02306] Conversion of discrete parts of a CompuMethod on signal level in `SenderRecRecordElementMapping` and `SenderRecArrayTypeMapping`** [If a `SystemSignal` defines a `CompuMethod` of category `TEXTTABLE`, `SCALE_LINEAR_AND_TEXTTABLE`, and `BITFIELD_TEXTTABLE`, a conversion of the `texttable` part of the `CompuMethod` of the `AutosarDataType` of the sending `DataPrototype` to the `SystemSignal` as well as from the `SystemSignal` to the `CompuMethod` associated with the `AutosarDataType` of the receiving `DataPrototype` may be necessary.

For this purpose,

- meta-class `SenderRecRecordElementMapping` aggregates the meta-class `TextTableMapping` in the roles `SenderRecRecordElementMapping.senderToSignalTextTableMapping` and `SenderRecRecordElementMapping.signalToReceiverTextTableMapping`.

- meta-class `SenderRecArrayTypeMapping` aggregates the meta-class `TextTableMapping` in the roles `SenderRecArrayTypeMapping.senderToSignalTextTableMapping` and `SenderRecArrayTypeMapping.signalToReceiverTextTableMapping`.

]()

As explained in specification of the the AUTOSAR Software Component Template [5], the `TextTableMapping` allows enumerated types to be connected when they have the same or similar semantics but different numerical and/or symbolic representations of those semantics.

**[TPS\_SYST\_02307] Relevance of attribute `TextTableMapping.mappingDirection` in an aggregation by `SenderRecRecordElementMapping` or `SenderRecArrayTypeMapping`** [The value of attributes

- `SenderRecRecordElementMapping.senderToSignalTextTableMapping.mappingDirection`
- `SenderRecRecordElementMapping.signalToReceiverTextTableMapping.mappingDirection`
- `SenderRecArrayTypeMapping.senderToSignalTextTableMapping.mappingDirection`
- `SenderRecArrayTypeMapping.signalToReceiverTextTableMapping.mappingDirection`

has no meaning and shall be ignored.]()

**[constr\_5162] Valid `TextTableMapping` in the context of `SenderRecRecordElementMapping`** [The aggregation of a `TextTableMapping` at `SenderRecRecordElementMapping` is only valid if the `SenderRecRecordElementMapping` also references a `SystemSignal` in the role `systemSignal`.]  
()

Rationale: `SenderRecRecordElementMapping` could also be used on record elements that itself need to be broken down further. In other words if the `SenderRecRecordElementMapping` aggregates a `complexTypeMapping` it shall not aggregate a `TextTableMapping`.

**[TPS\_SYST\_02308] `TextTableMapping` defined in the context of `SenderRecArrayTypeMapping`** [The aggregation of a `TextTableMapping` at `SenderRecArrayTypeMapping` allows for the text-table translation between all array elements of an array data type that is used in a `PortPrototype` of the application software and the `physicalProps` defined for the mapped `SystemSignals`.]()

Please note that the `TextTableMapping` is aggregated by the `SenderRecArrayTypeMapping` because the same mapping rule is valid for all array elements.

The following example shows a case where an `ApplicationRecordDataType` is defined that contains two `ApplicationRecordElements`. Each `ApplicationRecordElement` defines a `TEXTTABLE CompuMethod`. One of the `SystemSignals` to which one of the `ApplicationRecordElements` is mapped has a different `CompuMethod` defined and therefore a `TextTableMapping` is created that defines the conversion of the `texttable` part of the `CompuMethod` of the `AutosarDataType` of the sending `DataPrototype` and the `CompuMethod` of the `SystemSignal`.

```
<SENDER-REC-RECORD-TYPE-MAPPING>
  <RECORD-ELEMENT-MAPPINGS>
    <SENDER-REC-RECORD-ELEMENT-MAPPING>
      <APPLICATION-RECORD-ELEMENT-REF DEST="APPLICATION-RECORD-ELEMENT">/
        types/R1/enum1</APPLICATION-RECORD-ELEMENT-REF>
      <SENDER-TO-SIGNAL-TEXT-TABLE-MAPPING>
        <VALUE-PAIRS>
          <TEXT-TABLE-VALUE-PAIR>
            <FIRST-VALUE>0</FIRST-VALUE>
            <SECOND-VALUE>0</SECOND-VALUE>
          </TEXT-TABLE-VALUE-PAIR>
          <TEXT-TABLE-VALUE-PAIR>
            <FIRST-VALUE>1</FIRST-VALUE>
            <SECOND-VALUE>1</SECOND-VALUE>
          </TEXT-TABLE-VALUE-PAIR>
          <TEXT-TABLE-VALUE-PAIR>
            <FIRST-VALUE>2</FIRST-VALUE>
            <SECOND-VALUE>1</SECOND-VALUE>
          </TEXT-TABLE-VALUE-PAIR>
        </VALUE-PAIRS>
      </SENDER-TO-SIGNAL-TEXT-TABLE-MAPPING>
      <SYSTEM-SIGNAL-REF DEST="SYSTEM-SIGNAL">/sig_a</SYSTEM-SIGNAL-REF>
    </SENDER-REC-RECORD-ELEMENT-MAPPING>
    <SENDER-REC-RECORD-ELEMENT-MAPPING>
      <APPLICATION-RECORD-ELEMENT-REF DEST="APPLICATION-RECORD-ELEMENT">/
        types/R1/enum2</APPLICATION-RECORD-ELEMENT-REF>
      <SENDER-TO-SIGNAL-TEXT-TABLE-MAPPING>
        <IDENTICAL-MAPPING>true</IDENTICAL-MAPPING>
      </SENDER-TO-SIGNAL-TEXT-TABLE-MAPPING>
      <SYSTEM-SIGNAL-REF DEST="SYSTEM-SIGNAL">/sig_b</SYSTEM-SIGNAL-REF>
    </SENDER-REC-RECORD-ELEMENT-MAPPING>
  </RECORD-ELEMENT-MAPPINGS>
</SENDER-REC-RECORD-TYPE-MAPPING>
```

Listing 5.1: Example for the definition of a `TextTableMapping` aggregated by the `SenderRecRecordElementMapping`

### 5.2.1.3 Mapping of Client Server Operations to System Signals

This section describes the mapping of `ClientServerOperations` to `SystemSignals` (see Figure 5.19).

**[TPS\_SYST\_01148] Mapping of IN and INOUT `ArgumentDataPrototypes` to `callSignals`** [The `ArgumentDataPrototypes` that are passed to the operation


(i.e. the `direction` is “in”) and the `ArgumentDataPrototypes` that are passed to and returned from the operation (i.e. the `direction` is “inout”) are expected to be mapped to the `callSignal` by the serializer.>()

**[TPS\_SYST\_01149] Mapping of OUT and INOUT `ArgumentDataPrototypes` to `returnSignals`** [The `ArgumentDataPrototypes` that are returned from the operation (i.e. the `direction` is “out”) and the `ArgumentDataPrototypes` that are passed to and returned from the operation (i.e. the `direction` is “inout”) are expected to be mapped to the `returnSignal` by the serializer.]()

Please note that due to `DataMapping` restrictions the client-server communication is only supported in AUTOSAR if the SOME/IP Transformer is used as serializer. In SOME/IP the `ApplicationErrors` are part of the SOME/IP Header as Return Code as described by [PRS\_SOMEIP\_00030] in [19]. This is the reason why the `ApplicationErrors` are not considered in the `ClientServerToSignalMapping`.

**[TPS\_SYST\_01150] Mapping of `returnSignal` and `callSignal` to COM Signal** [In the ECU Configuration of the AUTOSAR COM module the `returnSignal` and the `callSignal` are expected to be mapped to COM Signals with the `ComSignalType` `UINT8_N` or `UINT8_DYN`.]()

The `ClientServerToSignalMapping` can only map transformed data to `System-Signals` because it contains no information how data shall be serialized, it only references the primitive `SystemSignal` which shall contain the serialized data. How to define the necessary information which serialization algorithm shall be applied can be found in chapter 7. The implementation of this algorithm is provided via a BSW module.

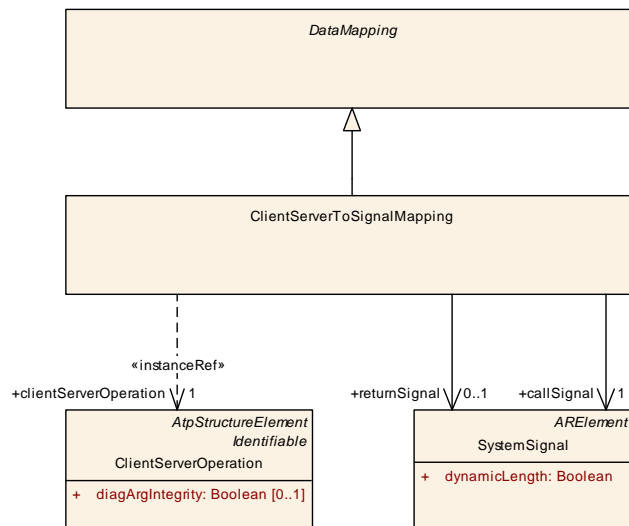

**Figure 5.19: Mapping of a ClientServerOperation to a callSignal and a returnSignal**

<b>Class</b>	<b>ClientServerToSignalMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	This element maps the ClientServerOperation to call- and return-SystemSignals.			
<b>Base</b>	ARObject, <a href="#">DataMapping</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.dataMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
callSignal	<a href="#">SystemSignal</a>	1	ref	Reference to the callSignal to which the IN and INOUT ArgumentDataPrototypes are mapped.
clientServerOperation	<a href="#">ClientServerOperation</a>	1	iref	Reference to a ClientServerOperation, which is mapped to a call SystemSignal and a return SystemSignal. <b>InstanceRef implemented by:</b> <a href="#">OperationInSystemInstanceRef</a>
returnSignal	<a href="#">SystemSignal</a>	0..1	ref	Reference to the returnSignal to which the OUT and INOUT ArgumentDataPrototypes are mapped.


**Table 5.33: ClientServerToSignalMapping**

**[constr\_3111] returnSignal in ClientServerToSignalMapping is mandatory**  
[A ClientServerToSignalMapping shall always have a returnSignal defined.]  
()

**[constr\_3215] TransformationTechnology.version and TransformationTechnology.protocol settings for request and response of a client/server communication**  
[TransformationTechnology.version and TransformationTechnology.protocol shall be identical for ISignals that are derived from the same ClientServerOperation. This means that all ISignals that refer to ClientServerToSignalMapping.callSignal or to ClientServerToSignalMapping.returnSignal of the same ClientServerToSignalMapping shall have the same TransformationTechnology.protocol and TransformationTechnology.version defined.]()

The ClientServerToSignalMapping (as any other DataMapping) defines the mapping on the level of SystemSignals (see also section 5.2). For the communication on actual PhysicalChannels (could be actual VLAN or dedicated EthernetCluster) an ISignal and a corresponding ISignalTriggering needs to be defined (see section 6.1).



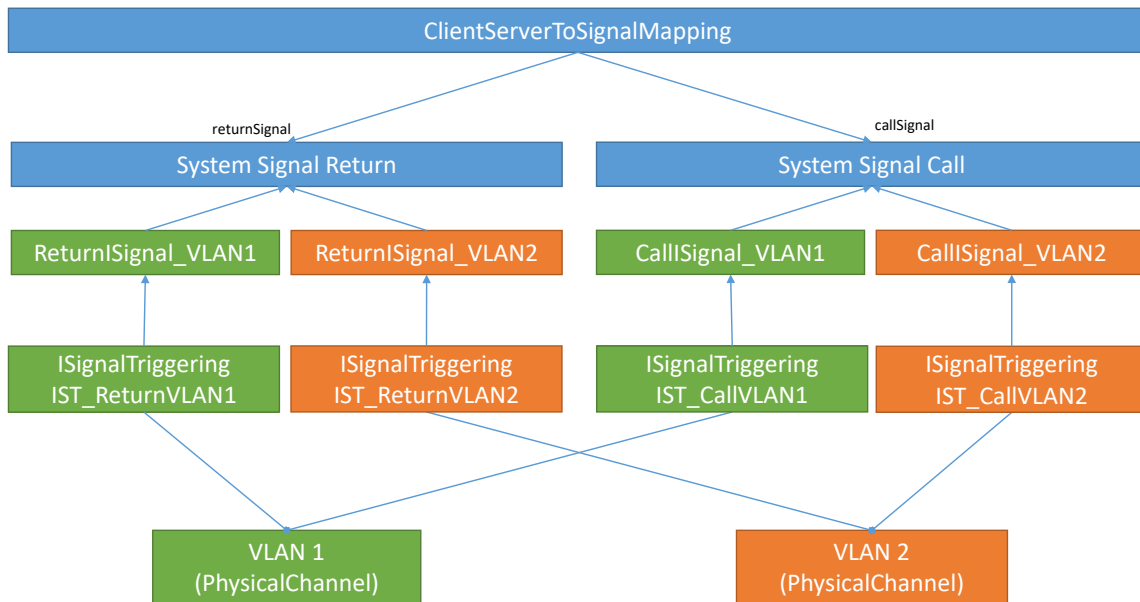

**Figure 5.20: Scenario in which a SOME/IP Service with a ClientServerOperation is offered on several VLANs**

In the example in figure 5.20 a server offers his service on two VLANs (could be actual VLAN or dedicated EthernetCluster). When a call arrives at the server from VLAN1 it will be propagated in the “CallISignal\_VLAN1” to the RTE. The RTE takes the call message and de-serializes the payload and calls the Server. The result of the server is serialized and needs to be put into a return ISignal. But from just looking at the available ISignals for the return it is not possible to determine whether the result message has to be put into the result ISignal “ReturnISignal\_VLAN1” or “ReturnISignal\_VLAN2”.

Thus the RTE needs to determine to which PhysicalChannel the call ISignal belongs and choose the return ISignal which is defined on the same PhysicalChannel. The ISignalTriggering defines on which PhysicalChannel an ISignal is transported, thus by determining which ISignalTriggering refers to the ISignal (in the call example ISignal: “CallISignal\_VLAN1”, ISignalTriggering: “IST\_CallVLAN1” ) it is clear that the PhysicalChannel “VLAN 1” is the source of the call and thus the return message needs to go to an ISignal which is transported on that PhysicalChannel.

If a Server offers a service on several PhysicalChannels then there are some constraints to be respected in order for the RTE, Com, and LdCom to work together properly:

- Define an own ISignal-Pair (call and return) for each PhysicalChannel the service shall be offered on. These ISignals refer to the respective call and return SystemSignals.
- Only one ISignalTriggering per ISignal: each ISignal shall only be referenced by up to one ISignalTriggering.



- Whether an `ISignalTriggering` is relevant for a specific RTE, Com, or LdCom is determined by the `ISignalTriggering` referring to an `ISignalPort`, and that `ISignalPort` is member of a `CommunicationConnector` which belongs to the respective `EcuInstance`.

**[constr\_5273] One `ISignalTriggering` pair allowed per `EthernetPhysicalChannel` for a `ClientServerOperation`** [In the context of a `System` of category `ECU_SYSTEM_DESCRIPTION` or `ECU_EXTRACT`, for each `EthernetPhysicalChannel` at most one pair of

- `ISignalTriggering` that refers to an `ISignal` that in turn refers to a `SystemSignal` that is referenced by a specific `ClientServerToSignalMapping` in the role `callSignal`
- `ISignalTriggering` that refers to an `ISignal` that in turn refers to a `SystemSignal` that is referenced by the same `ClientServerToSignalMapping` in the role `returnSignal`

shall exist.]()

Also it is required that a Client/Server interaction is fully provided on each `PhysicalChannel`, i.e. both `callSignal` and `returnSignal` shall be put onto the `PhysicalChannel`.

**[constr\_5274] `ISignalTriggerings` that represent the `callSignal` and `returnSignal` of the same `ClientServerOperation` on a `PhysicalChannel` shall be referenced by the same `ClientServerToSignalMapping`** [If on an `EthernetPhysicalChannel` an `ISignalTriggering` that refers to an `ISignal` that in turn refers to a `SystemSignal` that is referenced by a specific `ClientServerToSignalMapping` in the role `callSignal` is defined, then another `ISignalTriggering` shall be aggregated by the same `EthernetPhysicalChannel` and that `ISignalTriggering` shall refer to an `ISignal` that in turn refers to a `SystemSignal` that is referenced by the same `ClientServerToSignalMapping` in the role `returnSignal`, and vice versa.]()

#### 5.2.1.4 Mapping of a `ApplicationCompositeElementDataPrototype` within a composite application data type on a System Signal (Sender-Receiver Communication)

`SenderReceiverCompositeElementToSignalMapping` is used to map a `ApplicationCompositeElementDataPrototype` that is aggregated within a composite data type (record element or an array element) to a `SystemSignal`.

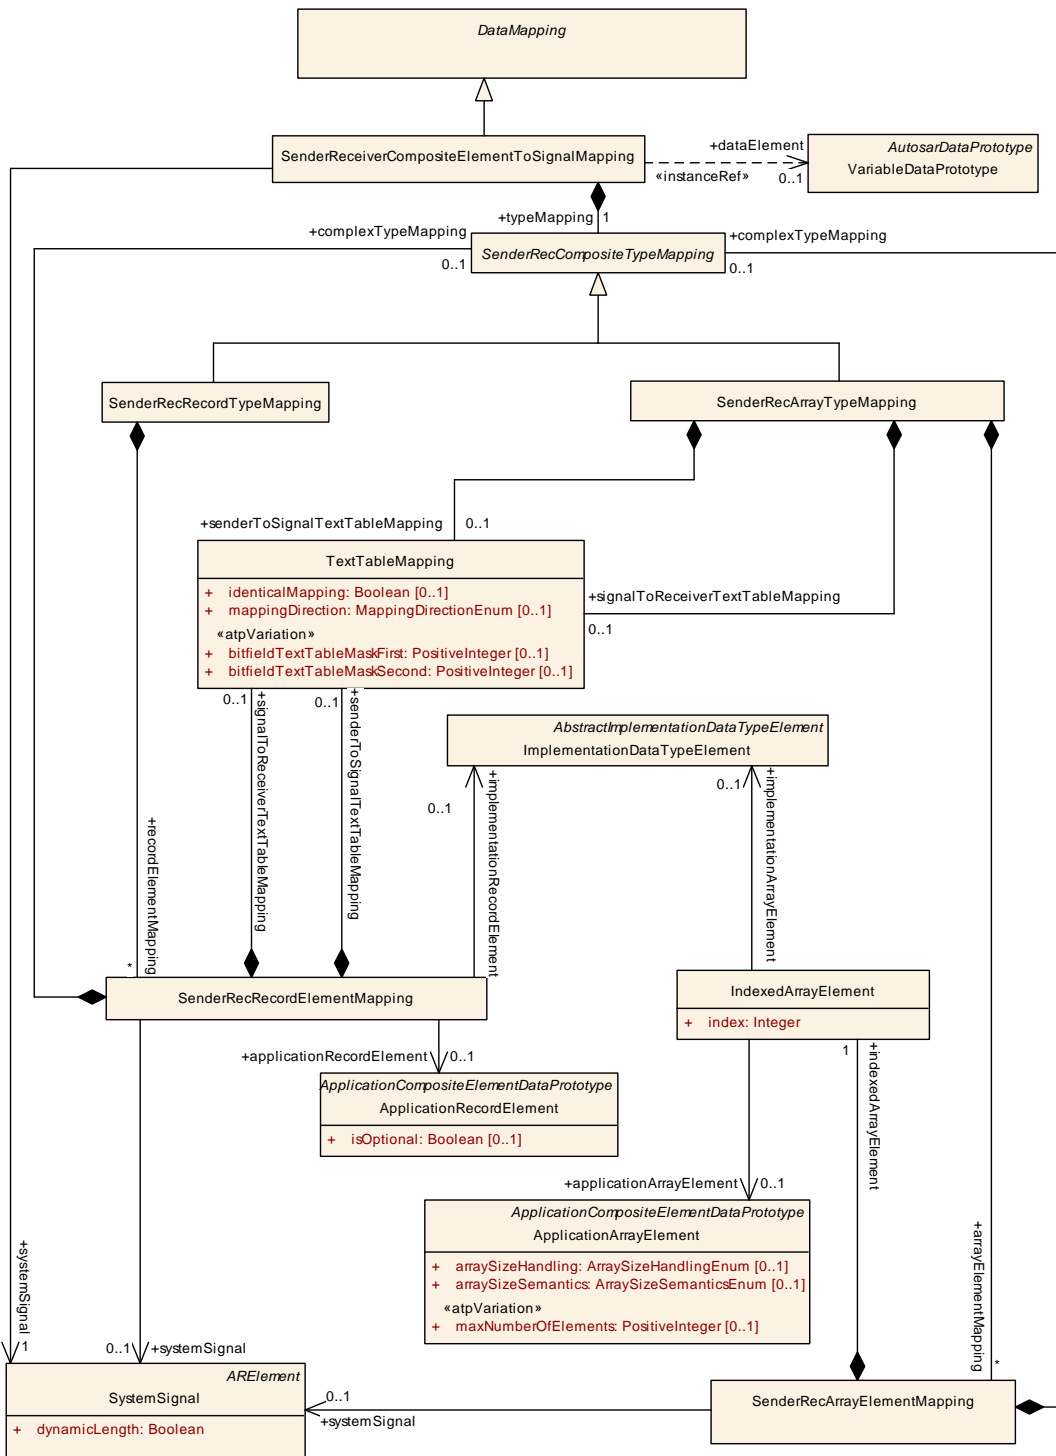


Figure 5.21: Mapping of a Variable Data Prototype which is aggregated within a composite data type on a System Signal

[constr\_3058] References from **SenderRecArrayElementMapping** and from **SenderRecRecordElementMapping** to **SystemSignals** are not allowed within a **SenderReceiverCompositeElementToSignalMapping** [The reference from **SenderRecArrayElementMapping** to **SystemSignal** and from **SenderRecRecordElementMapping** to **SystemSignal** shall not exist if the enclosing

`SenderRecCompositeTypeMapping` is owned by a `SenderReceiverCompositeElementToSignalMapping`.]()

**[TPS\_SYST\_01143] DataMapping on the sender side for elements of a composite data type** [On the sender side, it is possible that only a subset of elements of an `ApplicationCompositeElementDataPrototype` of a `dataElement` in a `PPortPrototype` in its sender role is referenced by a `DataMapping`.]()

<b>Class</b>	<code>SenderReceiverCompositeElementToSignalMapping</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	Mapping of an Variable Data Prototype which is aggregated within a composite datatype to a System Signal (only one element of the composite data type is mapped).			
<b>Base</b>	<code>ARObject</code> , <code>DataMapping</code>			
<b>Aggregated by</b>	<code>SystemMapping.dataMapping</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
<code>dataElement</code>	<code>VariableDataPrototype</code>	0..1	iref	Reference to a data element with a composite datatype from which one element is mapped to a SystemSignal. <b>InstanceRef implemented by:</b> <code>VariableDataPrototypeln SystemInstanceRef</code>
<code>systemSignal</code>	<code>SystemSignal</code>	1	ref	Reference to the SystemSignal to which one primitive of the composite type is mapped.
<code>typeMapping</code>	<code>SenderRecCompositeTypeMapping</code>	1	aggr	The CompositeTypeMapping maps one VariableData Prototype of the composite data type to a SystemSignal.

**Table 5.34: SenderReceiverCompositeElementToSignalMapping**

`SenderRecCompositeTypeMapping` and all subclasses are described in section 5.2.1.2

### 5.2.1.5 Mapping of Trigger to SystemSignal

**[TPS\_SYST\_05001] Send a Trigger across a network** [In order to be able to send a `Trigger` across a network to trigger a `RunnableEntity` deployed to a different `EcuInstance` it is possible to define a `TriggerToSignalMapping` that maps a `Trigger` to a `SystemSignal` in the role `systemSignal`.]()

**[constr\_1198] TriggerToSignalMapping.systemSignals eligible for a TriggerToSignalMapping in case no DataTransformation is used** [The `ISignal` that is referenced by a `SystemSignal` that in turn is referenced by a `TriggerToSignalMapping` in the role `systemSignal` shall have the length attribute set to 0 if the `ISignal` does not reference a `DataTransformation` in the role `dataTransformation`.]()

**[constr\_1199] ISignals relating to systemSignals eligible for a TriggerToSignalMapping shall use update bit in case no DataTransformation is used** [An `ISignal`

- that is used to reference a `systemSignal` that in turn is referenced by a `TriggerToSignalMapping` and

- does not reference a `DataTransformation` in the role `dataTransformation`

shall be referenced by an `ISignalToIPduMapping` where the attribute `updateIndicationBitPosition` is defined. ]()

Please note that according to [TPS\_SYST\_02021] the `updateIndicationBitPosition` shall not be defined if LdCOM is used.

**[constr\_5258] TriggerToSignalMapping.systemSignals eligible for a TriggerToSignalMapping in case DataTransformation is used** [The `ISignal` that is referenced by a `SystemSignal` that in turn is referenced by a `TriggerToSignalMapping` in the role `systemSignal` shall have its `length` attribute set to the value of `BufferProperties.headerLength` attribute of the respective `TransformationTechnology` if the `ISignal` references a `DataTransformation` in the role `dataTransformation` that in turn references the `TransformationTechnology`. ]()


For example, in case of the SOME/IP Transformer the 64 bit length covers the SOME/IP header defined by the SOME/IP Transformer (i.e. Request ID, Protocol Version, InterfaceVersion, Message Type, and Return Code) (as defined by [constr\_5258] and [constr\_3128]). The actual payload of the `ISignal` representing a trigger is 0.

**[constr\_5262] SystemSignal used for Trigger communication shall not be part of any SystemSignalGroup** [A `SystemSignal` that is target of a `TriggerToSignalMapping` in the role `systemSignal` shall not be referenced by a `SystemSignalGroup` in the role `systemSignal`. ]()

**[TPS\_SYST\_02365] No support of Com Based Transformer for Trigger communication** [Due to [constr\_5262] it is not possible to define a `SystemSignal` which is representing a `Trigger` to be part of a `SystemSignalGroup`, thus it is not possible to define a `Trigger` to be processed by a Com Based Transformer (as Com Based Transformer is enabled with the `ISignalGroup.comBasedSignalGroupTransformation`). ]()

**[TPS\_SYST\_05002] The value of startPosition is irrelevant** [The value of `startPosition` shall not be considered inside an `ISignalToIPduMapping` that references an `ISignal` used to reference a `TriggerToSignalMapping.systemSignal` that in turn is referenced by a `TriggerToSignalMapping`. ]()

Please note that in case of a `TriggerToSignalMapping` for transmission of a `Trigger` over the network that has the `swImplPolicy` set to `queued` the sender will not get any indication that the receiver queue is full.

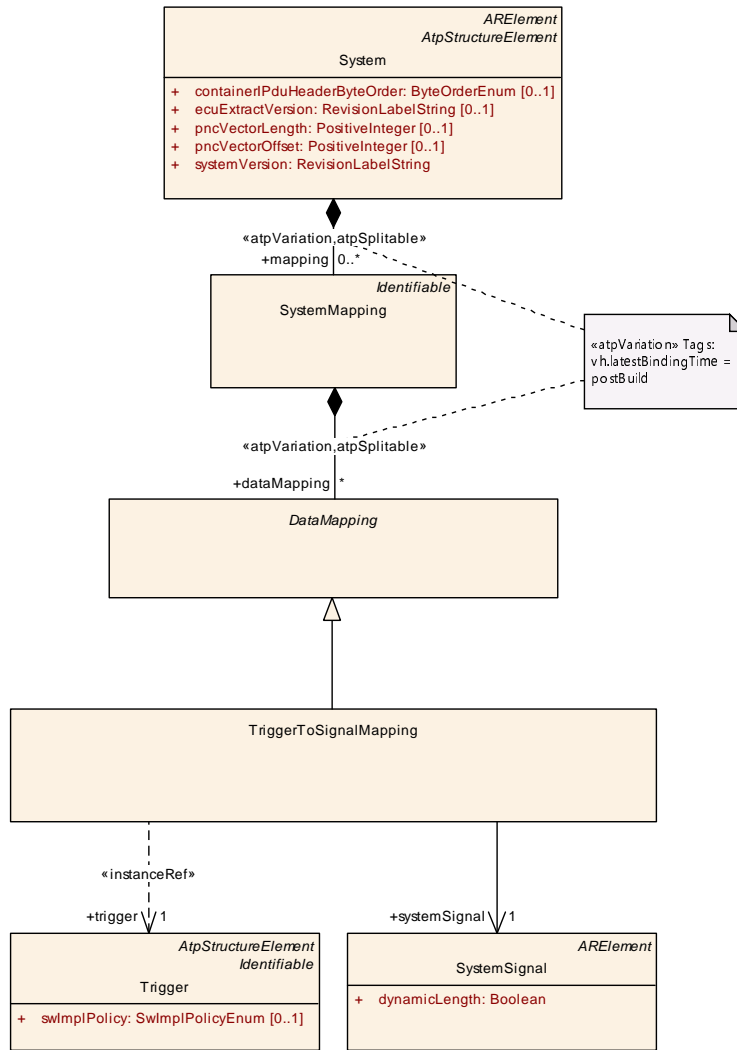


**Figure 5.22: Structure of a TriggerToSignalMapping**

<b>Class</b>	<b>TriggerToSignalMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping			
<b>Note</b>	This meta-class represents the ability to map a trigger to a SystemSignal of size 0. The Trigger does not transport any other information than its existence, therefore the limitation in terms of signal length.			
<b>Base</b>	ARObject, <a href="#">DataMapping</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.dataMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
systemSignal	<a href="#">SystemSignal</a>	1	ref	This is the SystemSignal taken to transport the Trigger over the network. <b>Tags:</b> xml.sequenceOffset=20
trigger	<a href="#">Trigger</a>	1	iref	This represents the Trigger that shall be used to trigger RunnableEntities deployed to a remote ECU. <b>Tags:</b> xml.sequenceOffset=10 <b>InstanceRef implemented by:</b> <a href="#">TriggerInSystemInstanceRef</a>

**Table 5.35: TriggerToSignalMapping**

## 5.2.2 Signal Path Constraint

One task of the System Generator is to define the needed communication infrastructure (e.g. `ISignals`, `Pdus`, `Frames`) between ECUs. The System Generator often has the choice between alternative paths through the topology. In the example shown in Figure 5.23 the System Generator would have the choice between two paths (Path1: CAN3 or Path2: CAN1-GW-CAN2) for a signal that is send by ECU2 and is received by ECU4. If no further information is given the decision will be made e.g. by means of boundary conditions like busload, transmissions speed, etc.

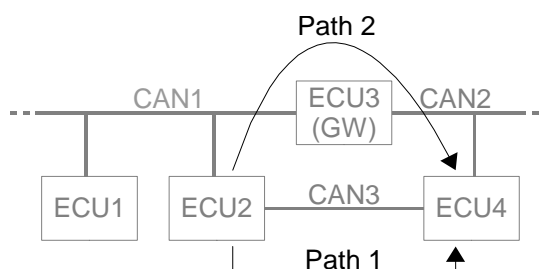

**Figure 5.23: Example for a Communication Path**

Signal Mapping Constraints allow to further restrict or specify the path(s) a signal is allowed to be transmitted over. A path is specified by an list of `PhysicalChannels`.

There exist four different constraints for signals regarding the signal path (see Figure 5.24):

**[TPS\_SYST\_01041] CommonSignalPath definition** [The `CommonSignalPath` describes that two or more signals shall take the same path in the topology.] ([RS\\_SYST\\_00017](#))


**[TPS\_SYST\_01042] ForbiddenSignalPath definition** [The `ForbiddenSignalPath` describes the path that one or more signals shall not take in the topology, e.g. in case of safety critical transmission.] ([RS\\_SYST\\_00020](#))

**[TPS\_SYST\_01043] PermissibleSignalPath definition** [The `PermissibleSignalPath` describes the path one or more signals may take in the topology. If more than one `PermissibleSignalPath` is defined for the same signal/operation attributes, any of them may be chosen.] ([RS\\_SYST\\_00019](#), [RS\\_SYST\\_00016](#))

**[TPS\_SYST\_01044] SeparateSignalPath definition** [The `SeparateSignalPath` describes that two or more signals shall take separate paths in the topology e.g. in case of redundant transmission.] ([RS\\_SYST\\_00018](#))


It is also possible that the same signal is aggregated two times by the `SeparateSignalPath` element to indicate that this signal should be transmitted redundantly over two different paths.

The meta-model part, which describes the Communication Path constraints, will be explained in the following sections.

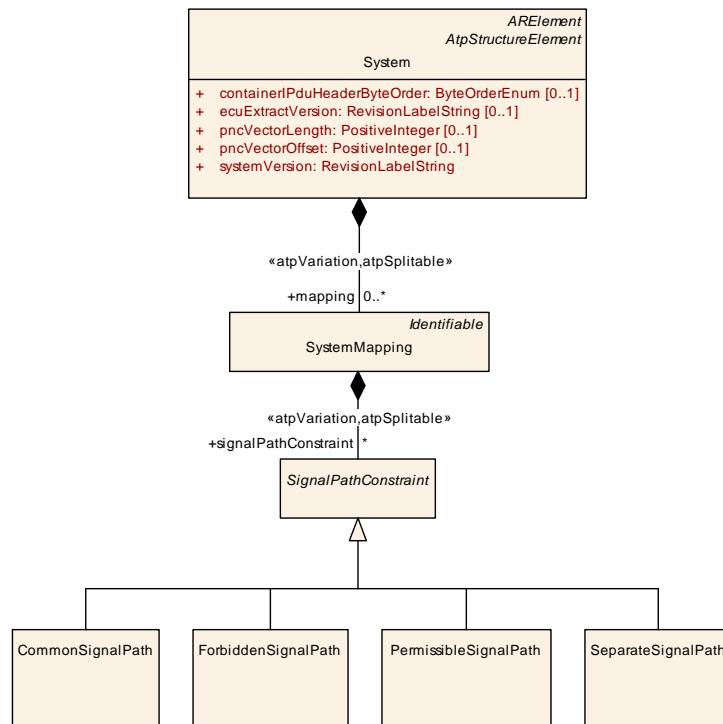

**Figure 5.24: Communication Path Description (SignalPathConstraints)**

### 5.2.2.1 CommonSignalPath

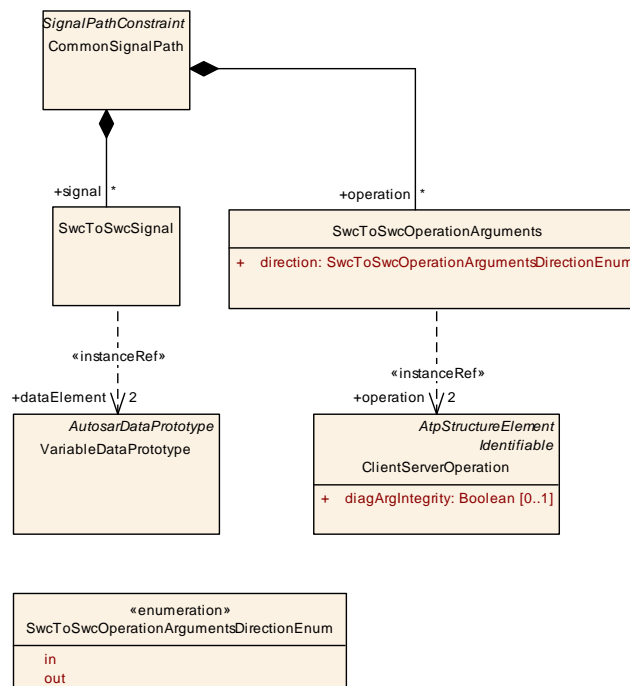

**Figure 5.25: Description of signals that shall take the same way in the topology (CommonSignalPath)**

<b>Class</b>	<b>CommonSignalPath</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SignalPaths			
<b>Note</b>	The CommonSignalPath describes that two or more SwcToSwcSignals and/or SwcToSwcOperation Arguments shall take the same way (Signal Path) in the topology.			
<b>Base</b>	<i>ARObject</i> , <a href="#">SignalPathConstraint</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.signalPathConstraint</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
operation	<a href="#">SwcToSwcOperation Arguments</a>	*	aggr	The arguments sent in one direction (either from client to server or server to client) of the operations that shall take the same signal path.
signal	<a href="#">SwcToSwcSignal</a>	*	aggr	The SwcToSwcSignals that shall take the same way (Signal Path) in the topology.

**Table 5.36: CommonSignalPath**

<b>Class</b>	<b>SwcToSwcSignal</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SignalPaths			
<b>Note</b>	The SwcToSwcSignal describes the information (data element) that is exchanged between two SW Components. On the SWC Level it is possible that a SW Component sends one data element from one P-Port to two different SW Components (1:n Communication). The SwcToSwcSignal describes exactly the information which is exchanged between one P-Port of a SW Component and one R-Port of another SW Component.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">CommonSignalPath.signal</a> , <a href="#">ForbiddenSignalPath.signal</a> , <a href="#">PermissibleSignalPath.signal</a> , <a href="#">SeparateSignalPath.signal</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataElement	<a href="#">VariableDataPrototype</a>	2	iref	Reference to a data element on the PPortPrototype and to the same data element on the RPortPrototype. <b>InstanceRef implemented by:</b> <a href="#">VariableDataPrototypeInSystemInstanceRef</a>

**Table 5.37: SwcToSwcSignal**




<b>Class</b>	<b>SwcToSwcOperationArguments</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SignalPaths			
<b>Note</b>	The SwcToSwcOperationArguments describes the information (client server operation arguments, plus the operation identification, if required) that are exchanged between two SW Components from exactly one client to one server, or from one server back to one client. The direction attribute defines which direction is described. If direction == IN, all arguments sent from the client to the server are described by the SwcToSwcOperationArguments, in direction == OUT, it's the arguments sent back from server to client.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">CommonSignalPath.operation</a> , <a href="#">ForbiddenSignalPath.operation</a> , <a href="#">PermissibleSignalPath.operation</a> , <a href="#">SeparateSignalPath.operation</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
direction	<a href="#">SwcToSwcOperationArgumentsDirectionEnum</a>	1	attr	Direction addressed by this SwcToSwcClientServer Operation element.
operation	<a href="#">ClientServerOperation</a>	2	iref	Reference to the operation at the client and at the server side whose arguments are described by SwcToSwcOperationArguments. The two ports referenced shall be connected by a connector in the software component description.  <b>InstanceRef implemented by:</b> <a href="#">OperationInSystemInstanceRef</a>

**Table 5.38: SwcToSwcOperationArguments**

<b>Enumeration</b>	<b>SwcToSwcOperationArgumentsDirectionEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SignalPaths
<b>Note</b>	Direction addressed by this element.
<b>Aggregated by</b>	<a href="#">SwcToSwcOperationArguments.direction</a>
<b>Literal</b>	<b>Description</b>
in	IN (all IN and INOUT arguments) <b>Tags:</b> atp.EnumerationLiteralIndex=0
out	OUT (all OUT and INOUT arguments) . <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 5.39: SwcToSwcOperationArgumentsDirectionEnum**

### 5.2.2.2 ForbiddenSignalPath

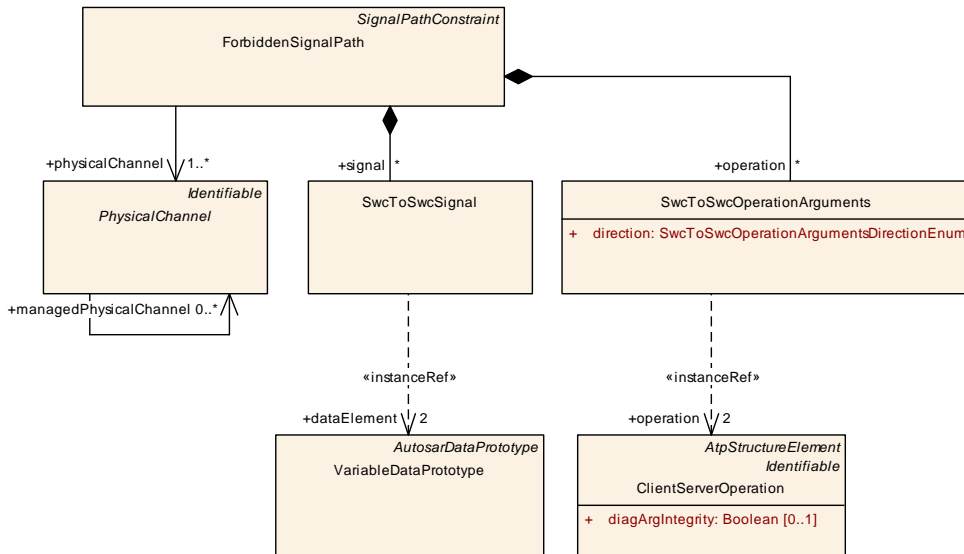


**Figure 5.26: Description of the signal path that a signal shall not take in the topology (ForbiddenSignalPath)**

<b>Class</b>	<b>ForbiddenSignalPath</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SignalPaths			
<b>Note</b>	The ForbiddenSignalPath describes the physical channels which an element shall not take in the topology. Such a signal path can be a constraint for the communication matrix, because such a path has an effect on the frame generation and the frame path.			
<b>Base</b>	ARObject, <a href="#">SignalPathConstraint</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.signalPathConstraint</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
operation	<a href="#">SwcToSwcOperationArguments</a>	*	aggr	Reference to the operation arguments of one operation which shall not take the predefined way in the topology.
physical Channel	<a href="#">PhysicalChannel</a>	1..*	ref	The SwcToSwcSignal shall not be transmitted on one of these physical channels.
signal	<a href="#">SwcToSwcSignal</a>	*	aggr	The data element which shall not take the predefined way in the topology.

**Table 5.40: ForbiddenSignalPath**

**5.2.2.3 PermissibleSignalPath**

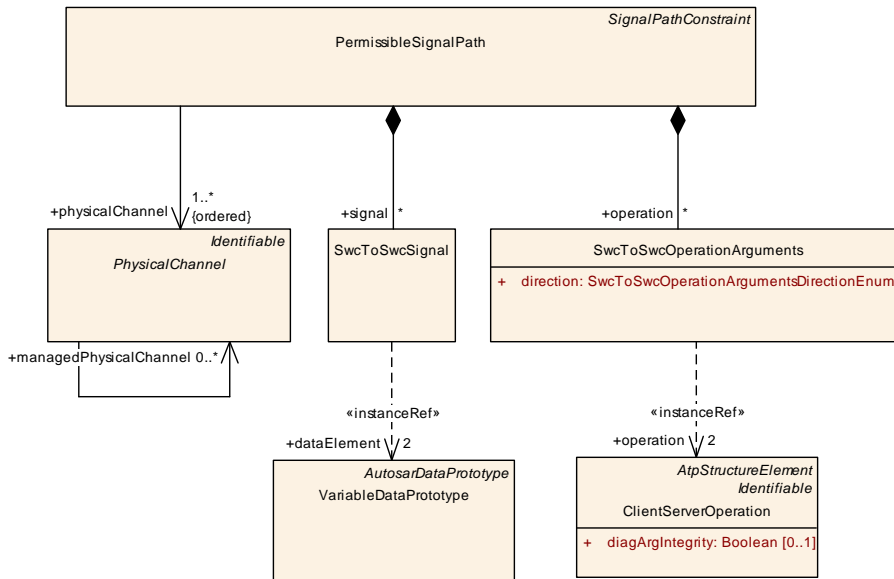


**Figure 5.27: Description of the signal path that a signal shall take in the topology (PermissibleSignalPath)**

<b>Class</b>	<b>PermissibleSignalPath</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SignalPaths			
<b>Note</b>	<p>The PermissibleSignalPath describes the way a data element shall take in the topology. The path is described by ordered references to PhysicalChannels.</p> <p>If more than one PermissibleSignalPath is defined for the same signal/operation attributes, any of them can be chosen. Such a signal path can be a constraint for the communication matrix . This path describes that one data element should take path A (e.g. 1. CAN channel, 2. LIN channel) and not path B (1. CAN channel, FlexRay channel A).</p> <p>This has an effect on the frame generation and the frame path.</p>			
<b>Base</b>	ARObject, <a href="#">SignalPathConstraint</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.signalPathConstraint</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
operation	<a href="#">SwcToSwcOperationArguments</a>	*	aggr	The arguments of an operation that can take the predefined way in the topology.
physical Channel (ordered)	<a href="#">PhysicalChannel</a>	1..*	ref	The SwcToSwcSignal can be transmitted on one of these physical channels.
signal	<a href="#">SwcToSwcSignal</a>	*	aggr	The data element which can take the predefined way in the topology.

**Table 5.41: PermissibleSignalPath**

### 5.2.2.4 SeparateSignalPath

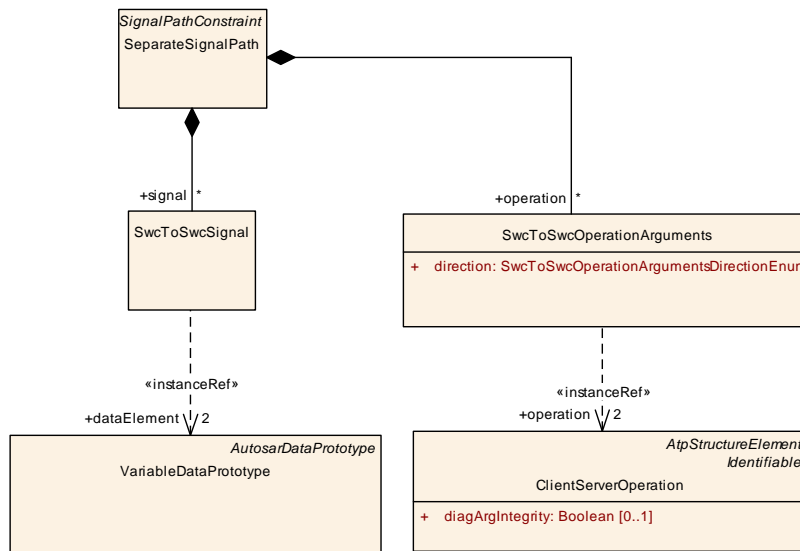

**Figure 5.28: Description of signals that shall not take the same way in the topology (SeparateSignalPath)**

<b>Class</b>	<b>SeparateSignalPath</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SignalPaths			
<b>Note</b>	The SeparateSignalPath describes that two SwcToSwcSignals and/or SwcToSwcOperationArguments shall not take the same way (Signal Path) in the topology (e.g. Redundancy). This means that the signals are not allowed to share even a single physical channel in their path.			
<b>Base</b>	ARObject, <a href="#">SignalPathConstraint</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.signalPathConstraint</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
operation	<a href="#">SwcToSwcOperationArguments</a>	*	aggr	The SwcToSwcOperationArguments that shall not take the same way (Signal Path) in the topology.
signal	<a href="#">SwcToSwcSignal</a>	*	aggr	The SwcToSwcSignals that shall not take the same way (Signal Path) in the topology.

**Table 5.42: SeparateSignalPath**

### 5.3 RTE and basic software resource estimations

Important constraints for system partitioning are the available resources on the ECUs in the system. For SW components, the resource estimations can be stated in SW component descriptions. It is however not only SW components that require resources. AUTOSAR RTE and basic software running on the ECU have resource needs as well.

The realization of the RTE and the kind of basic software to be run on a certain ECU depend on the implicit and explicit usage of all basic software by the software components. The software components need to communicate internally and with software components on other ECUs. Furthermore, they have different needs with respect to scheduling. This results in implicit use of e.g. communication and operating system software. In addition, the software components make explicit use of basic software when they e.g. utilize system services (e.g. diagnostics) and access sensors/actuators via the I/O abstraction layer or the Complex Driver abstraction layer. Thus, the resource consumption of the RTE and the basic software depend on the SW Components mapped to the ECU, since this determines the exact configuration of the RTE and the basic software.

**[TPS\_SYST\_01126] Resource Consumption for RTE and basic software** [The resource consumption for RTE and basic software may be specified using class `EcuResourceEstimation`. Each estimation is performed for a specific ECU and for a specific set of SW mapped to that ECU (reference from `EcuResourceEstimation` to `EcuInstance` and `SwcToEcuMapping`).] (*RS\_SYST\_00002*)

Different resource estimations for a specific ECU, but with different mappings may exist, e.g. for different variants of the system, or to show the difference of resource needs for different mappings. The `EcuResourceEstimation` aggregates the meta-class `ResourceConsumption` from the `GenericStructure` package each for RTE and basic software, which specifies stack and heap usage and execution time.

`ExecutionTime` and `StackUsage` are used to provide information on the implementation specific resource usage of the `ExecutableEntity` defined in the `InternalBehavior` of SW-Component respectively in the `BswInternalBehavior` of BSW Module. `MemorySection` documents the resources needed to load the object file containing the implementation on the ECU. `HeapUsage` describes the dynamic memory usage of the software.

Figure 5.29 shows the meta-model for resource estimations for RTE and basic SW.

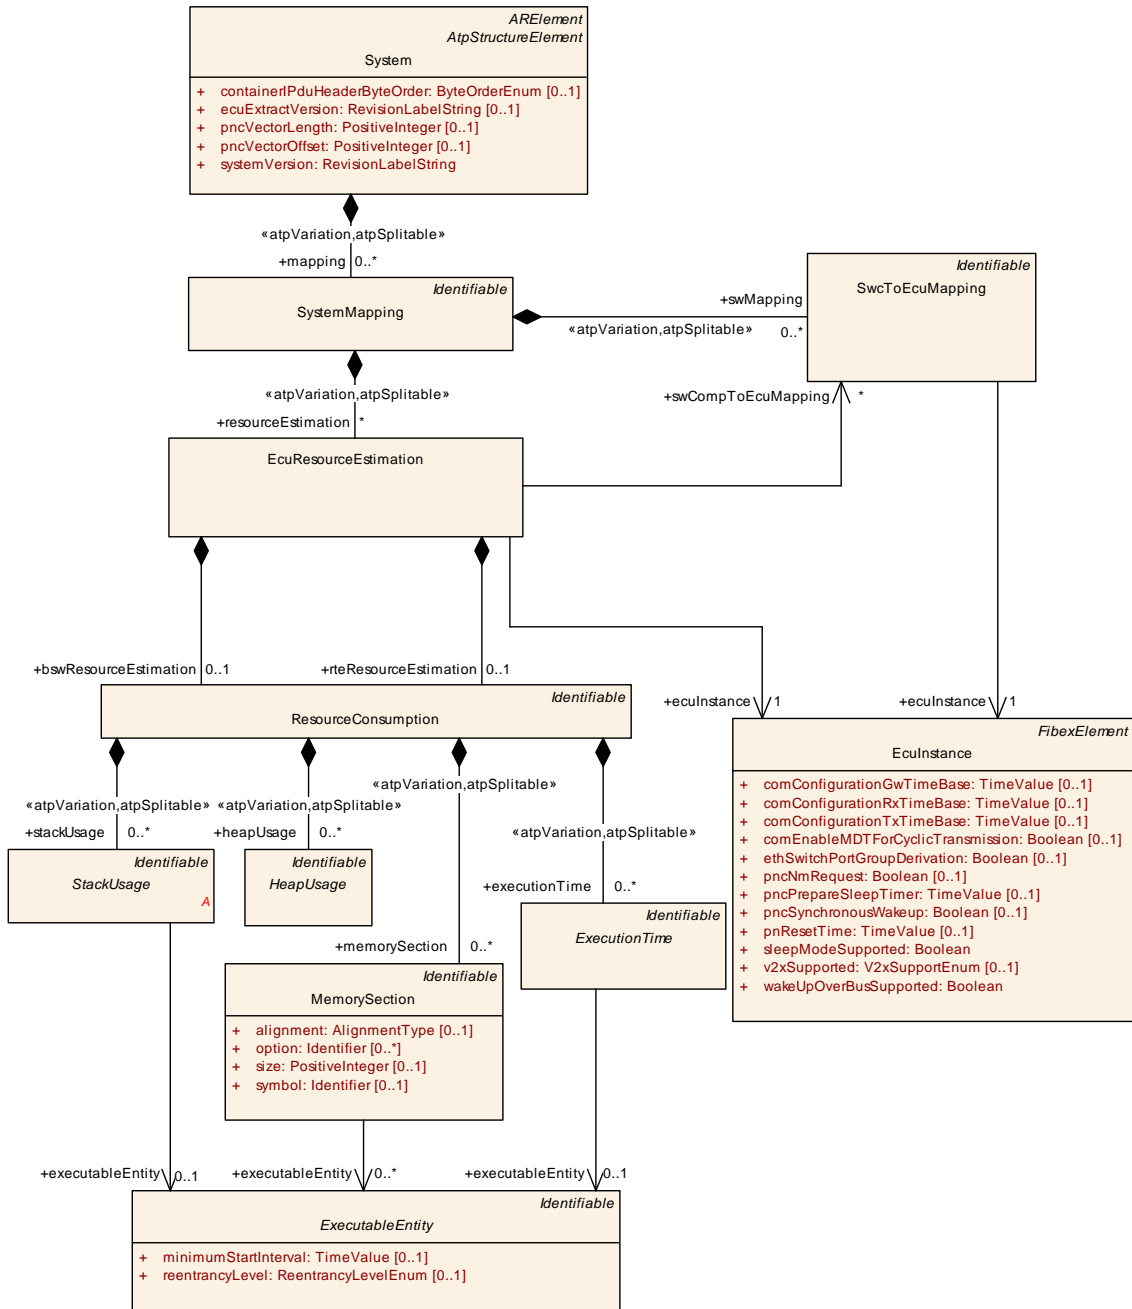


Figure 5.29: ECU resource estimations (ResourceEstimation)

[constr\_3005] valid **EcuResourceEstimation** [The same **EcuInstance** shall be referenced directly from the **EcuResourceEstimation** and from the **SwcToEcuMapping**:

`EcuResourceEstimation.swCompToEcuMapping.eculInstance == EcuResourceEstimation.eculInstance]`

<b>Class</b>	<b>EcuResourceEstimation</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SWmapping			
<b>Note</b>	Resource estimations for RTE and BSW of a single ECU instance.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">SystemMapping.resourceEstimation</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
bswResourceEstimation	<a href="#">ResourceConsumption</a>	0..1	aggr	Estimation for the resource consumption of the basic software.
ecuInstance	<a href="#">EcuInstance</a>	1	ref	Reference to the ECU this estimation is done for.
introduction	DocumentationBlock	0..1	aggr	This represents introductory documentation about the ecu resource estimation <b>Tags:</b> xml.sequenceOffset=-10
rteResourceEstimation	<a href="#">ResourceConsumption</a>	0..1	aggr	Estimation for the resource consumption of the run time environment.
swCompToEcuMapping	<a href="#">SwcToEcuMapping</a>	*	ref	References to SwcToEcuMappings that have been taken into account for the resource estimations. This way it is possible to define different EcuResourceEstimations with different mappings, e.g. before and after mapping an additional SW component.

**Table 5.43: EcuResourceEstimation**

<b>Class</b>	<b>ResourceConsumption</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ResourceConsumption			
<b>Note</b>	Description of consumed resources by one implementation of a software.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">EcuResourceEstimation.bswResourceEstimation</a> , <a href="#">EcuResourceEstimation.rteResourceEstimation</a> , <a href="#">Implementation.resourceConsumption</a> , <a href="#">StateDependentStartupConfig.resourceConsumption</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
accessCountSet	AccessCountSet	*	aggr	Set of access count values <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=accessCountSet, accessCountSet.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
executionTime	<a href="#">ExecutionTime</a>	*	aggr	Collection of the execution time descriptions for this implementation. The aggregation of executionTime is subject to variability with the purpose to support the conditional existence of runnable entities. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=executionTime.shortName, executionTime.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
heapUsage	<a href="#">HeapUsage</a>	*	aggr	Collection of the heap memory allocated by this implementation. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=heapUsage.shortName, heapUsage.variationPoint.shortLabel vh.latestBindingTime=preCompileTime





Class	ResourceConsumption			
memorySection	<a href="#">MemorySection</a>	*	aggr	An abstract memory section required by this Implementation. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=memorySection.shortName, memorySection.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
sectionName Prefix	SectionNamePrefix	*	aggr	A prefix to be used for the memory section symbol in the code. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=sectionNamePrefix.shortName, sectionNamePrefix.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
stackUsage	<a href="#">StackUsage</a>	*	aggr	Collection of the stack memory usage for each runnable entity of this implementation. The aggregation of Stack Usage is subject to variability with the purpose to support the conditional existence of runnable entities. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=stackUsage.shortName, stackUsage.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table 5.44: ResourceConsumption**

The element [ResourceConsumption](#) and the sub-elements [HeapUsage](#), [MemorySection](#), [StackUsage](#) and [ExecutionTime](#) are described in more detail in the BSW Module Description [20].

## 5.4 Communication Management Mapping

The Communication Management Mapping is used to define the link between the application's communication request and the actual network topology.

Some applications may have the need to control the communication infrastructure during their run-time. So they can control at which point in time certain communication shall be enabled (requested) and when the communication can be disabled (release request). How the control interaction is to be setup is specified in the Software Component Template[5].

Which parts of the communication relies on such control is expressed using [PortGroups](#). The [PortGroup](#) collect the set of [PortPrototypes](#) which shall be available when the application requests communication.

The handling of communication management comes in two flavors, defined by the category of the [PortGroup](#):

- PARTIAL\_NETWORKING
- MODE\_MANAGEMENT



`PortGroups` of category `PARTIAL_NETWORKING` determine to control the communication via Partial Network Clusters (see [subsection 5.4.1](#)).

`PortGroups` of category `MODE_MANAGEMENT` determine to control the communication directly via ComManager (see [subsection 5.4.2](#)). This is specifically required in cases where no partial networking is used or on network which do not support partial networking (like Lin).

### 5.4.1 Partial Networking

The AUTOSAR BSW stack supports power saving during vehicle operation time with the partial networking mechanism. This mechanism allows to shut down and startup the bus communication interfaces of groups of ECUs (Partial Network Cluster) during normal bus communication.

On the VFB Level Partial Networks are represented by Virtual Function Clusters and are described with `PortGroups`. The Virtual Function Cluster groups the communication necessary to realize one or more vehicle functions that can become activated/deactivated during normal vehicle operation. Virtual Function Clusters are described in more detail in [\[5\]](#). The Virtual Function Clusters are mapped onto Partial Network Clusters.

There are two variants of the partial networking mechanism:

- The *static* partial networking mechanism where the mapping of Partial Network Clusters (PNCs) to Virtual Function Clusters (and thus ECUs) is defined statically during vehicle development and does not change afterwards.
- The *dynamic* partial networking mechanism that enables changes of the mapping between PNCs and ECUs during life time of a vehicle by introducing a learning algorithm (for details, see chapter [5.4.1.4](#)).

The use of partial networking in general is defined based on the element `PncMapping`. If partial networking is used, the *dynamic* partial networking is then further defined by the attribute `dynamicPncToChannelMappingEnabled` of the element `CommunicationConnector`.

**[TPS\_SYST\_01133] Partial Network Clusters** [Partial Network Clusters are realized with `ISignalIPduGroups` using `PncMapping`.] ([RS\\_SYST\\_00042](#))

Each `PncMapping` has the ability to define relations to `ISignalIPduGroups`, `PdurIPduGroups`, and `PhysicalChannels`. These relations are used to describe the impact of a PNC on the respective networking artifacts. The realization of those relationships is typically to be implemented in the Basic Software Mode Manager (BswM).

- `PncMapping.pncGroup` (referring to `ISignalIPduGroup`) is used to define which Com `ISignalIPduGroups` shall be enabled when this PNC is active. The use-case is to enable/disable Com `ISignalIPdus`, especially periodic behavior like cyclic sending and time-out monitoring.

- `PncMapping.pncPdurGroup` (referring to `PdurIPduGroup`) is used to define which `PdurIPduGroups` shall be enabled when this PNC is active. The use-case is to enable/disable Pdus which typically are not passing the Com module (e.g. Pdus going through LdCom, Diagnostic IPdus, Gatewayed IPdus).
- `PncMapping.physicalChannel` (referring to `PhysicalChannel`) is used to define which `PhysicalChannels` shall be enabled when this PNC is active. The use-case is to enable/disable the whole `PhysicalChannel` and allows to also cover Pdus which neither pass the Com module nor the Pdu Router module (e.g. NM).

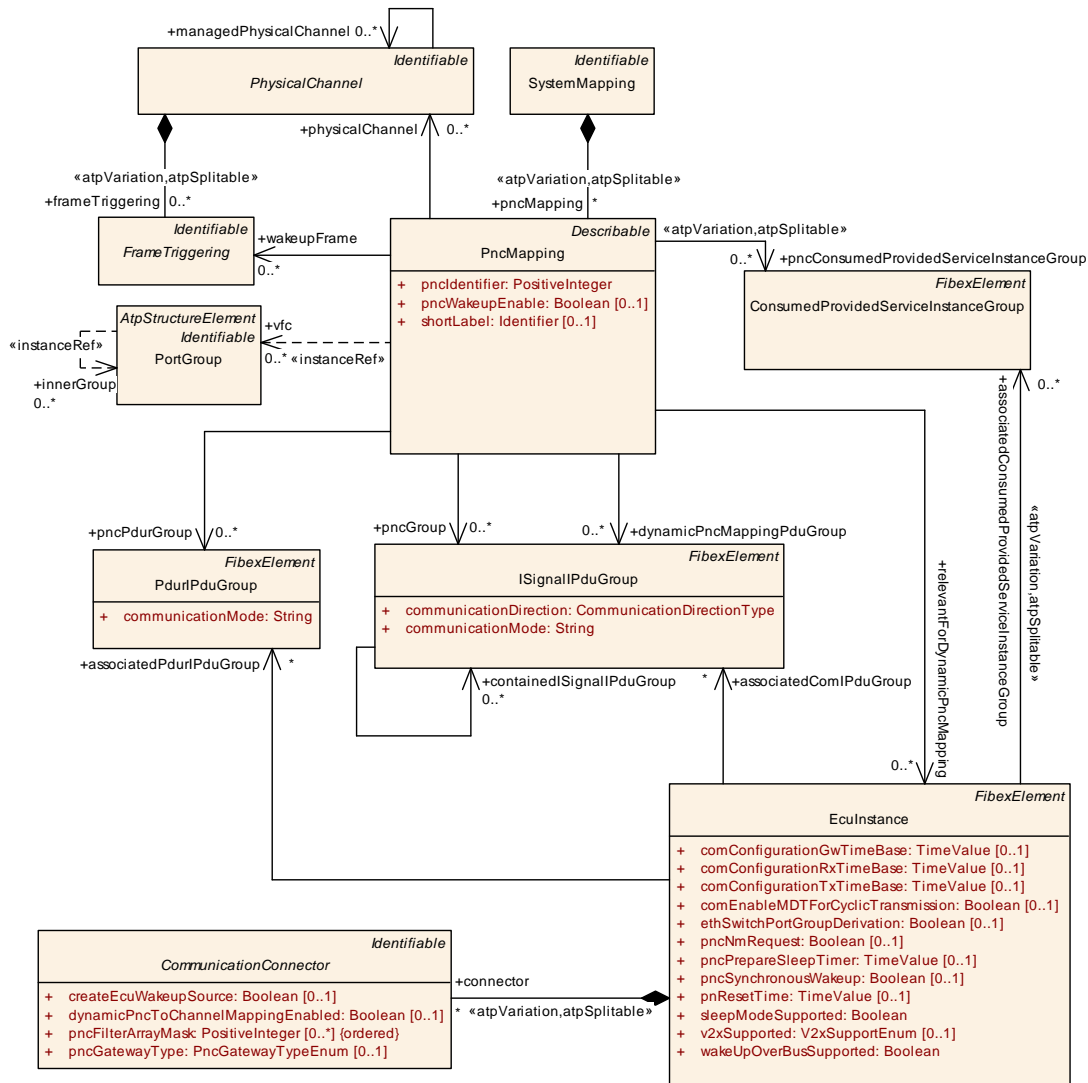


Figure 5.30: Mapping of Virtual Function Clusters onto Partial Network Clusters

<b>Class</b>	<b>PncMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::PncMapping			
<b>Note</b>	Describes a mapping between one or several Virtual Function Clusters onto Partial Network Clusters. A Virtual Function Cluster is realized by a PortGroup. A Partial Network Cluster is realized by one or more IPduGroups.			
<b>Base</b>	ARObject, Describable			
<b>Aggregated by</b>	SystemMapping.pncMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dynamicPncMappingPduGroup	ISignalIPduGroup	*	ref	Reference to an ISignalIPduGroup that allows mapping of this PNC without statically mapping this PNC directly to a channel. This is needed to describe dynamic PNCs that can be learned only at run-time and which have also a relation to an ISignalIPduGroup. <b>Tags:</b> atp.Status=draft
ident	PncMappingIdent	0..1	aggr	This adds the ability to become referable to PncMapping.
physicalChannel	PhysicalChannel	*	ref	This reference maps the partial network to a communication channel.
pncConsumedProvidedServiceInstanceGroup	ConsumedProvidedServiceInstanceGroup	*	ref	ConsumedProvidedServiceInstanceGroup used in a Partial Network Cluster. This reference is optional, since this could be used for starting and stopping ConsumedProvidedServiceInstanceGroup according to the requested partial network, but is not necessarily needed. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=pncConsumedProvidedServiceInstanceGroup.consumedProvidedServiceInstanceGroup, pncConsumedProvidedServiceInstanceGroup.variationPoint.shortLabel vh.latestBindingTime=postBuild
pncGroup	ISignalIPduGroup	*	ref	IPduGroup participating in a Partial Network Cluster. This reference is optional in case an ecu extract has only indirect pnc access, i.e. ecu is not directly connected to a network which supports partial network.
pncIdentifier	PositiveInteger	1	attr	Identifier of the Partial Network Cluster. This number represents the absolute bit position of this Partial Network Cluster in the NM Pdu.
pncPdurGroup	PdurIPduGroup	*	ref	This reference maps the Partial Network Cluster to a set of PdurIpduGroups.
pncWakeupEnable	Boolean	0..1	attr	If this parameter is available and set to true then this PNC will be woken up as soon as a channel wakeup occurs on a channel where this PNC is assigned to. This is ensured by adding this PNC to the corresponding channel wakeup sources during upstream mapping.
relevantForDynamicPncMapping	EcuInstance	*	ref	Reference to a PNC Gateway ECU for PNCs which do not have a static channel mapping. This is needed to describe dynamic PNCs that can be learned only at run-time and which have no relation to an ISignalIPduGroup. <b>Tags:</b> atp.Status=draft
shortLabel	Identifier	0..1	attr	This attribute specifies an identifying shortName for the PncMapping. It shall be unique in the System scope.
vfc	PortGroup	*	iref	Virtual Function Cluster to be mapped onto a Partial Network Cluster. This reference is optional in case that the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy systems. <b>InstanceRef implemented by:</b> PortGroupInSystemInstanceRef





Class	PncMapping			
wakeupFrame	<a href="#">FrameTriggering</a>	*	ref	Reference to collection of <a href="#">FrameTriggerings</a> that are used for the wakeup of this PNC (Application Frames or Nm Frames can be used). This reference is only valid if this <a href="#">EcuExtract</a> represents an ECU which has direct PNC access, i.e. ECU is directly connected to a network which supports partial network.

**Table 5.45: PncMapping**

**[constr\_3039] [pncIdentifier](#) range** [The [pncIdentifier](#) value shall be in the range of 8..63 for normal CAN and in the range of 8..511 for CAN FD, FlexRay and Ethernet.]()

Note: Older ECUs with a smaller PNC range can be used together with new ECUs with a larger PNC range (e.g. when NM PDU length and PNC Range increased in the next model year and some ECUs are overtaken). But take care that in that case the older ECUs cannot react on PNC identifiers that are beyond their smaller range as they will be ignored by those older ECUs.

**[TPS\_SYST\_03067] Definition of [pncVectorOffset](#)** [The attribute [System.pncVectorOffset](#) shall define the common start byte position of the PNC vector for all NM messages in the [System](#).]()

**[TPS\_SYST\_03068] Definition of [pncVectorLength](#)** [The attribute [System.pncVectorLength](#) shall define the maximum PNC vector length from all NM messages of the [System](#).]()

Partial Networks are considered [System](#) wide. If a specific [PhysicalChannel](#) has a limited payload size and thus is not able to transport the entire PNC Vector information in the payload of the NM messages it is possible to define a shortened PNC Vector on that specific [NmCluster](#) (where that [NmCluster](#) configures the NM behavior on that [CommunicationCluster](#) or in case of Ethernet the [PhysicalChannel](#) representing a VLAN).

**[constr\_3687] Limited value range for [NmCluster.pncClusterVectorLength](#)** [The value of [NmCluster.pncClusterVectorLength](#) shall be equal or smaller than [System.pncVectorLength](#).]()

**[constr\_3198] Uniqueness of [PncMapping.shortLabel](#)** [If the optional [shortLabel](#) attribute is used it shall be unique in the [System](#) scope.]()

The runtime information that is used to coordinate the request/release information of all partial networks is called [pncVector](#). The size and position of the [pncVector](#) inside the [NmPdu](#) is globally defined in the [System](#) class in chapter 1.6. The size might be reduced using the optional [NmCluster.pncClusterVectorLength](#) attribute.

In the system description the [NmPdus](#) are described based on the actual network interaction (i.e. an ECU sends one [NmPdu](#) per network and receives a set of [NmPdus](#)).

`NmPdus` that define the existence of NM user data via the existence of the attribute `iSignalToIPduMapping` shall be referenced by corresponding `PduTriggerings` where the attribute `iPduPort` exists accordingly. This is also reflected by [TPS\_SYST\_01057].

`NmPdus` that define the existence of NM user data via the definition of `NmPdu.nm-DataInformation` shall not be referenced by `PduTriggerings` because neither `Com` nor `PduR` are involved in the transmission (which lets the `Nm` module talk to the bus interface directly).

Please note that a `pncVector` is transmitted as byte array, where each bit of the byte array represents one particular partial network cluster. The AUTOSAR stack handles a PNC bit vector as byte array data type.

**[constr\_3040] Restriction of `pncIdentifier` values** [The `pncIdentifier` value shall be within the range described by `pncVectorOffset` and `pncVectorLength`.]  
( )

**[constr\_3146] Partial Networking timing constraint** [For Partial Networking the following timing constraints shall be ensured:

- CAN / Ethernet:  $(pnResetTime + pncPrepareSleepTimer) < nmNetworkTimeout$
- FlexRay:  $(pnResetTime + pncPrepareSleepTimer) < nmReadySleepTime$

]()

**[TPS\_SYST\_02145] Default behavior for not defined `nmPncParticipation`** [When `NmCluster.nmPncParticipation` is set to `true` or is not defined this `NmCluster` shall contribute to the partial network mechanism.]( )

**[constr\_3323] Relation between `NmCluster.nmPncParticipation` and `PncMapping.pncGroup`** [If a `PncMapping` references an `ISignalIPduGroup` in role `pncGroup` which in turn

- contains (either directly or via one of its subordinate `ISignalIPduGroups` referenced in role `containedISignalIPduGroup`) `ISignalIPdus` that are referenced by a `PduTriggering` in role `iPdu` which in turn
- is composed by a `PhysicalChannel` in role `pduTriggering` which in turn
- is composed by `CommunicationCluster` in role `physicalChannel` which in turn
- is referenced by an `NmCluster` in role `communicationCluster`,

then this `NmCluster` shall have its `nmPncParticipation` attribute set to `TRUE` unless the `PhysicalChannel` is referenced in the role `managedPhysicalChannel`.]  
( )

[constr\_3484] **PncMapping** that refers a **managedPhysicalChannel** shall also refer the managing **PhysicalChannel** [If a **PncMapping** refers to a **PhysicalChannel** (either directly in the role **physicalChannel** or indirectly by referencing an **ISignalIPduGroup** in the role **pncGroup**) and this **PhysicalChannel** is referenced in the role **managedPhysicalChannel**, then the according managing **PhysicalChannel** (the source of the **managedPhysicalChannel** reference) shall also be referenced by the **PncMapping** (either directly in the role **physicalChannel** or indirectly by referencing an **ISignalIPduGroup** in the role **pncGroup**).]()

Note that [constr\_3484] ensures that the managing **PhysicalChannel** is part of the same PNC as the **managedPhysicalChannels**.

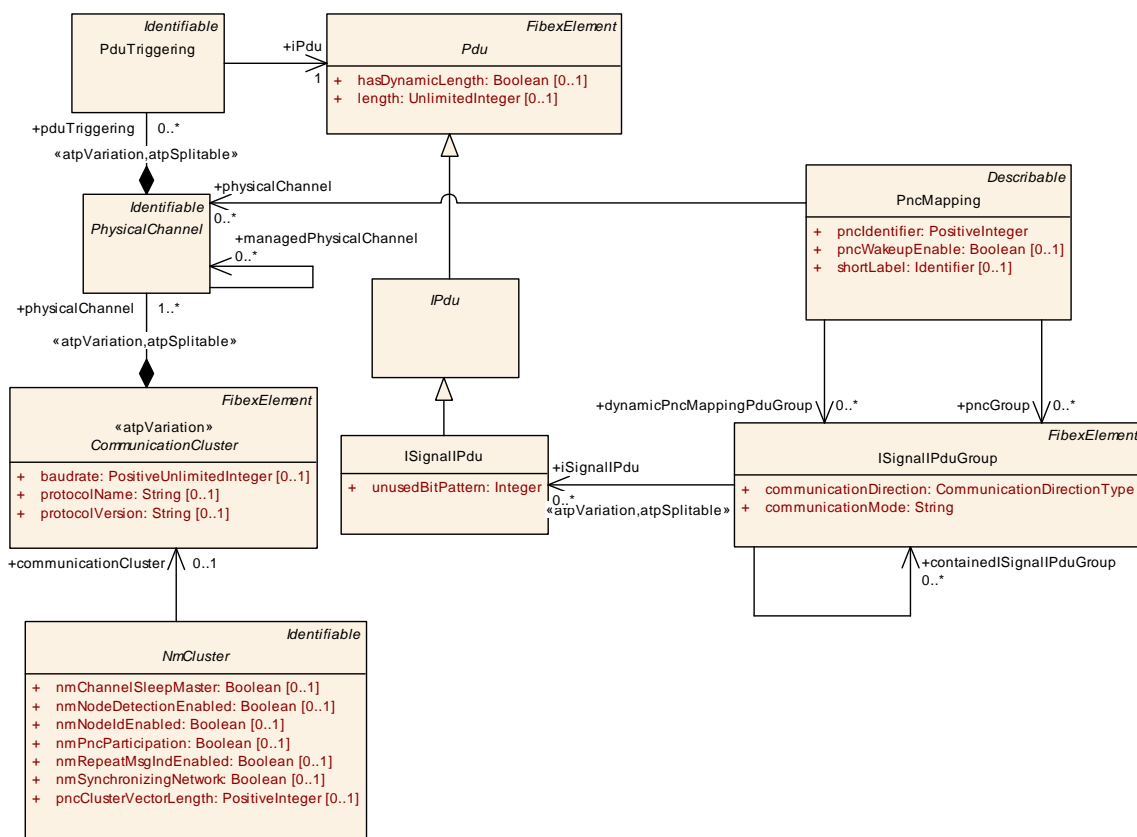


Figure 5.31: Relation between **NmCluster.nmPncParticipation** and **PncMapping.pncGroup**

[TPS\_SYST\_02146] **Explicit definition of pncVector at NmPdu** [If there is an **ISignalToIPduMapping** aggregated by **NmPdu** that fully matches the interval defined by **pncVectorOffset** and **pncVectorLength** then the corresponding **ISignal** represents the **pncVector**.]()

Attributes used to configure the Partial Network Wakeup of one specific Ecu are described in chapter 3.3.1.4.



**[TPS\_SYST\_03073]{DRAFT} Derivation of NmPnFilterMaskByte** [The `CommunicationConnector.pncFilterArrayMask` is configured per `CommunicationConnector`. This data mask is calculated over the whole payload of the `NmPdu` ignoring the leading bytes which do not contain `pncVector` information. The number of leading bytes which shall be ignored is equivalent to the value of `System.pncVectorOffset`.] (*RS\_SYST\_00042*)

Example: For `pncFilterArrayMask = 263` and `pncVectorOffset = 2`, `pncIdentifier` with number 63 in a `NmPdu` will be masked (see Figure 5.32).

NmPdu	Byte 0								Byte 1								Byte 2								Byte 3							
Absolute bit position	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8	23	22	21	20	19	18	17	16	31	30	29	28	27	26	25	24
PNC identifiers				N	O	T					U	S	E	D																		

NmPdu	Byte 4								Byte 5								Byte 6								Byte 7							
Absolute bit position	39	38	37	36	35	34	33	32	47	46	45	44	43	42	41	40	55	54	53	52	51	50	49	48	63	62	61	60	59	58	57	56
PNC identifiers	39	38	37	36	35	34	33	32	47	46	45	44	43	42	41	40	55	54	53	52	51	50	49	48	63	62	61	60	59	58	57	56

**Figure 5.32: Example of masked pncidentifiers in a NmPdu**

Note that only `pncIdentifier`  $\leq 63$  can be used for the Filter mask, even if NM PDUs are configured to be larger than 8 Byte and the `PncVector` defined in NM user data exceeds the first 8 Byte.

### 5.4.1.1 Partial Networking and managed Ethernet switch

On switched Ethernet networks it is possible to let the Ethernet switch be managed by an AUTOSAR ECU. In this case the configuration and the behavior of the `CouplingElement` with `couplingType=switch` are controlled by the host ECU.

For the usage of Partial Networking on switched Ethernet networks with managed `CouplingElements` the following use-case applies:

Depending on the requested Partial Networks it is possible to switch off Ethernet switch ports (`CouplingPorts`) which are not involved in any currently active communication ([TPS\_SYST\_03055]). The time delay to switch off the `CouplingPorts` shall be in line with the used Network Management timing to avoid switching off the `CouplingPorts` before the Network Management has decided to go to sleep ([constr\_3616]).

**[TPS\_SYST\_03055] Semantics of `EthernetCluster.couplingPortSwitchoffDelay`** [`EthernetCluster.couplingPortSwitchoffDelay`, if defined, is used to configure a host ECU to delay a switch off of a `CouplingPort`.]()

If using Partial Networks and the possibility to switch off Ethernet switch ports (`CouplingPorts`), it is possible to switch on `CouplingPorts` for a certain amount of time, as defined in `EthernetCluster.couplingPortStartupActiveTime` ([TPS\_SYST\_03054]). This is used to enable the host ECU (ECU that maintains an Ethernet switch) to listen to the network and wait for `couplingPortStartupActiveTime` to receive Partial Network information. If Partial Network information is received within `couplingPortStartupActiveTime`, then the according PNCs and

the Ethernet switch will be requested. With this Partial Network related request the controlling of the Ethernet switch ports will be done as described in [TPS\_SYST\_03055]). The remaining Ethernet switch ports will be switched off after `couplingPortStartupActiveTime` expires ([TPS\_SYST\_03054])).

**[TPS\_SYST\_03054] Semantics of `EthernetCluster.couplingPortStartupActiveTime`** [`EthernetCluster.couplingPortStartupActiveTime`, if defined, is used to configure a host ECU to detect a wake-up and wait to receive a Partial Network information. This also applies if a host ECU detects a reset as wake-up reason and listens to the network if Partial Network information is available on that network.]()

In order to describe the relationships between Partial Networks and Ethernet switch ports an optional reference from `CouplingPort` to a `PncMappingIdent` in the role `pncMapping` is defined.


**[constr\_3615] Existence of `EthernetCluster.couplingPortSwitchoffDelay`** [The attribute `EthernetCluster.couplingPortSwitchoffDelay` shall be defined if at least one `EcuInstance` connected to that `EthernetCluster` has the attribute `ethSwitchPortGroupDerivation` set to TRUE.]()

**[constr\_3616] Value of `EthernetCluster.couplingPortSwitchoffDelay`** [If defined, the value of `EthernetCluster.couplingPortSwitchoffDelay` shall be greater than `UdpNmCluster.nmNetworkTimeout` + `UdpNmCluster.nmWaitBusSleepTime` of the respective `EthernetCluster`.]()

**[constr\_3617] Existence of `EthernetCluster.couplingPortStartupActiveTime`** [The attribute `EthernetCluster.couplingPortStartupActiveTime` shall be defined if at least one `EcuInstance` connected to that `EthernetCluster` has the attribute `ethSwitchPortGroupDerivation` set to TRUE.]()

**[constr\_3618] Value of `EthernetCluster.couplingPortStartupActiveTime`** [If defined, the value of `EthernetCluster.couplingPortStartupActiveTime` shall be greater than `UdpNmCluster.nmNetworkTimeout` + `UdpNmCluster.nmWaitBusSleepTime` of the respective `EthernetCluster`.]()



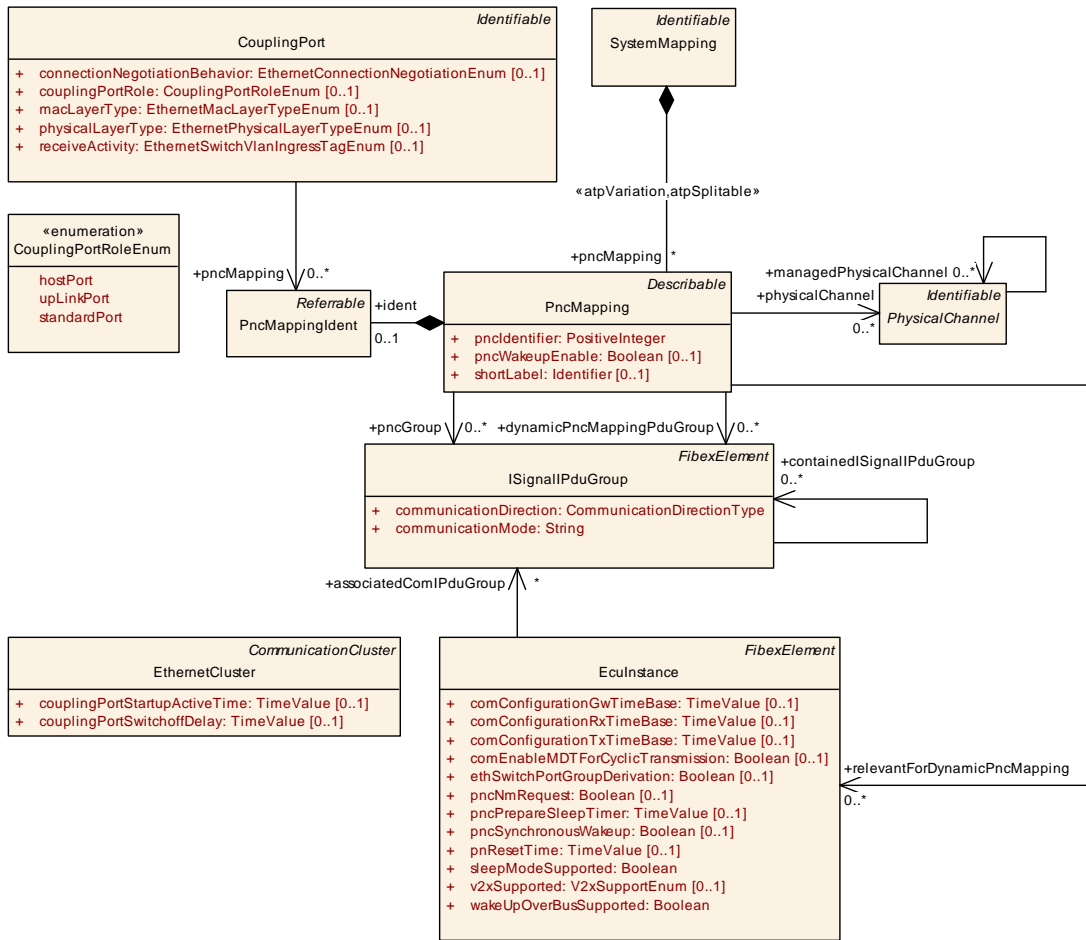


**Figure 5.33: Partial Networking and managed Ethernet switch**

The example in figure 5.34 illustrates the setup of an host ECU which manages 2 Ethernet switches.

The port 1 of Switch 1 is a `hostPort`.

The port 5 of Switch 1 and port 1 of Switch 2 are `upLinkPorts`.

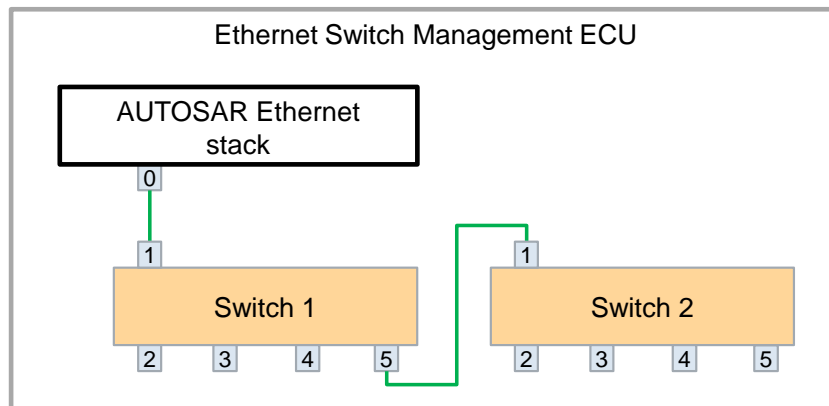

**Figure 5.34: Example of managed Ethernet switches**

**[constr\_3523] CouplingPort and PncMapping in the scope of an EthernetPhysicalChannel** [If

- a `CouplingPort` referring to an `EthernetPhysicalChannel` – via a `VlanMembership` – references at least one `PncMapping`
- and that `PncMapping` contains PDUs – via the assignment of `PncMapping.pncGroup` – that are transported on this `EthernetPhysicalChannel`

then every `CouplingPort` referring to that `EthernetPhysicalChannel` shall reference at least one `PncMapping` as well. ]()

If a `CouplingPort` referring to an `EthernetPhysicalChannel` – via a `VlanMembership` – references no `PncMapping` then any other `CouplingPort` referring to that `EthernetPhysicalChannel` is allowed to either reference `PncMappings` or not.

**[TPS\_SYST\_03018] Aggregation of PNCs at the hostPort** [A `CouplingPort` with `couplingPortRole` set to `hostPort` shall reference all `PncMappings` that are referenced by any `CouplingPorts` of the same `CouplingElement` and all `CouplingElements` connected to this `CouplingElement`. ]()

**[constr\_3524] Definition of couplingPortRole on CouplingPort for managed CouplingElement** [A managed `CouplingElement` shall have either

- at most one `CouplingPort` with `couplingPortRole` set to `hostPort` or
- at least one `CouplingPort` with `couplingPortRole` set to `upLinkPort`.

]()

**[constr\_3525] Connection of CouplingPort with couplingPortRole set to upLinkPort** [A `CouplingPort` with `couplingPortRole` set to `upLinkPort` shall be connected to exactly one other `CouplingPort` with `couplingPortRole` set to `upLinkPort`. ]()

**[TPS\_SYST\_03020] Default value for CouplingPort.couplingPortRole if not defined** [If no value for the attribute `CouplingPort.couplingPortRole` is defined then `standardPort` shall be assumed. ]()

**[TPS\_SYST\_03019] Modeling of CouplingPorts for managed CouplingElement** [Only `CouplingPorts` that participate in the communication of a managed `CouplingElement` shall be modeled in the System Description. ]()

All other ports of an Ethernet switch are not modeled. The expected behavior of unmodeled Ethernet switch ports on runtime:

1. the Ethernet switch driver switches off this Ethernet switch ports during its initialization
2. unmodeled Ethernet switch ports shall never be switched on.

### 5.4.1.2 Partial Network Gateway

As Partial Networks are spread over multiple networks their state has to be synchronized by gateway ECUs connected to a Partial Network on more than one network. Therefore a gateway mechanism is available where per network it can be configured if the network takes part in Partial network gateway algorithm or not. When more than one gateway is connected to one network then only one gateway shall be configured as main gateway.

**[constr\_5093] pncGatewayType and PhysicalChannel** [When multiple `CommunicationConnectors` with `pncGatewayType` set to a value other than `none` are referenced by the same `PhysicalChannel` then only up to one `CommunicationConnector` shall have the `pncGatewayType` set to `active`.]()

An ECU having a Partial Network connected to more than one network may not necessarily coordinate this Partial Network. There can be uses-cases where such an ECU is connected to multiple networks where this Partial Network is relevant but all of these networks are handled by the same gateway or by various gateways connected on another network. In this case the ECU does not coordinate the Partial Network.

**[constr\_5094] pncGatewayType and ECU** [When an ECU is connected to more than one `PhysicalChannel` and has a relation to a Partial Network then all `CommunicationConnectors` of this ECU where this Partial Network is related to shall have the `pncGatewayType` value either set to `none` or to a value different than `none` (i.e. `active` or `passive`).]()

Hint: This constraint ensures that an ECU either coordinates a Partial Network on all of its connected channels or on none.

### 5.4.1.3 Checking the consistency of partial network clusters (PNC)

The gateway ECUs participating in the synchronization of partial network requests are called PNC-Coordinators. Considering the system nature of PNC-Coordinators an example setup might look like sketched in figure 5.35.

It is essential to define to relation of particular PNCs and `PhysicalChannels` as well as the relation of PNCs and `EcuInstances`.

**[TPS\_SYST\_03080] PhysicalChannel involved in a particular PNC** [The involvement of a `PhysicalChannel` in a particular PNC can be defined in several ways:

- direct reference from `PncMapping` to `PhysicalChannel` in the role `physicalChannel`
- `PncMapping` refers to a `PdurIPduGroup` in the role `pncPdurGroup` where that `PdurIPduGroup` refers to at least one `PduTriggering` owned by the `PhysicalChannel`

- `PncMapping` refers to a `ISignalIPduGroup` in the role `pncGroup` where that `ISignalIPduGroup` (or any `ISignalIPduGroup.containedISignalIPduGroup` of that `ISignalIPduGroup`) refers to an `ISignalIPdu` and that `ISignalIPdu` is referenced by a `PduTriggering` owned by the `PhysicalChannel`
- `PncMapping` refers to a `ConsumedProvidedServiceInstanceGroup` in the role `pncConsumedProvidedServiceInstanceGroup` where that `ConsumedProvidedServiceInstanceGroup` in turn refers to a `ProvidedServiceInstance` or `ConsumedServiceInstance` and these refer to a `SoConIPduIdentifier` that refers to a `PduTriggering` owned by the `PhysicalChannel`


]([RS\\_SYST\\_00042](#))

Any of the above listed cases can overlap, thus a `PhysicalChannel` may be directly referenced and additionally there may exist a reference to a qualified `ISignalIPduGroup`.

**[TPS\_SYST\_03081] EcuInstance involved in a particular PNC** [An `EcuInstance` is involved in a PNC if at least one `PhysicalChannel` is involved in that PNC according to [\[TPS\\_SYST\\_03080\]](#) and that `PhysicalChannel` refers to a `CommunicationConnector` in the role `commConnector` and that `CommunicationConnector` is aggregated at the `EcuInstance` in the role `connector`.]([RS\\_SYST\\_00042](#))

Some observations and assumptions on the example given in figure 5.35: Each ECU connected to more than one `PhysicalChannel` may be configured as a PNC-Coordinator. In the sketched example the PNC-Coordinators are *PNC-Coor1*, *PNC-Coor2*, and *PNC-Coor3*. *PNC-Coor1* and *PNC-Coor3* coordinate *PNC1* and *PNC3*. *PNC-Coor2* coordinates only *PNC1*. *PNC-Coor3* coordinates *PNC1* on channels *Ch1*, *Ch2*, and *Ch3*. *PNC-Coor3* additionally coordinates *PNC3* on channels *Ch1* and *Ch2*.

A node which participates in a particular PNC can request this PNC and this node is most likely able to receive a PNC request when this PNC has been requested remotely by another node. In exceptional cases a node may be configured to request a particular PNC, but not receive a PNC request of the same PNC initiated remotely by another node. This is depicted in figure 5.35. *Node4* has the possibility to request *PNC3*. But a request of *PNC3* received by *PNC-Coor3* is not forward to *PNC-Coor3* on *Ch3*. And since *PNC-Coord2* does not handle *PNC3*, *Node4* will never receive a NM message where *PNC3* is requested. This could be used by a node to remotely request a PNC, but do not contribute to this PNC (see also section 5.4.1.3.3).

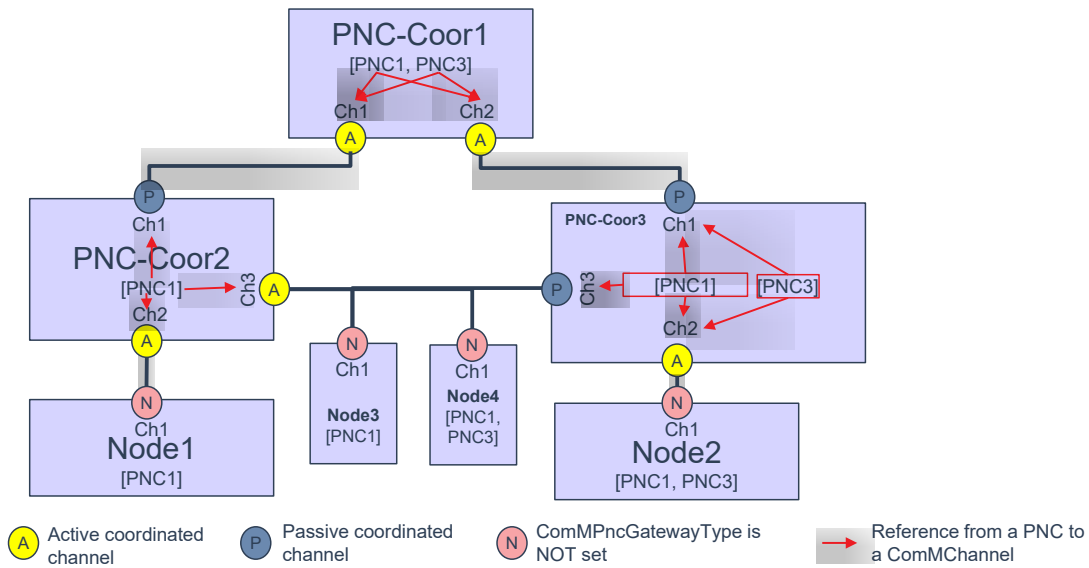

**Figure 5.35: PNC topology example**

#### 5.4.1.3.1 Check for top level PNC-Coordinator

The definition of a top level PNC-Coordinator is essential for the check on cyclic PNC topologies. The cycle check and the top level PNC-Coordinator are considered per PNC:

For all nodes which have a specific PNC *X* configured, identify the nodes which have PNC coordination configured, with the PNC *X* only referencing channels with `CommunicationConnector.pncGatewayType` set to `active`.

Approach to check:

Create a list of which `EcuInstances` a PNC *X* is assigned to, called "PNC to ECU mapping" by checking which PNCs are configured for each `EcuInstance` in the `System`.

Example of "PNC to ECU mapping" for figure 5.35:

- PNC1: {PNC-Coor1, PNC-Coor2, Node1, Node3, Node4, PNC-Coor3, Node2}
- PNC3: {PNC-Coor1, Node4, PNC-Coor3, Node2}

Identify the `EcuInstances` which have PNC coordination enabled and PNC *X* only references channels with `CommunicationConnector.pncGatewayType` set to `active`.

In the example given in figure 5.35 the ECU `PNC-Coor1` is the top level PNC-Coordinator for both, `PNC1` and `PNC3`. But there may exist configurations where different ECUs are top level PNC-Coordinators for different PNCs.

**[TPS\_SYST\_03082] Definition of top level PNC-Coordinator** [An `EcuInstance` is defined as top level PNC-Coordinator for a specific PNC if all involved `PhysicalChannels` (according to [TPS\_SYST\_03080]) only refer to `CommunicationConnectors` aggregated at that `EcuInstance`, where `CommunicationConnector.pncGatewayType` is set to `active`.] (*RS\_SYST\_00042*)

**[constr\_3714] Only one top level PNC-Coordinator per PNC** [In a `System` there shall be only up to one top level PNC-Coordinator defined per PNC according to [TPS\_SYST\_03082].] ()

#### 5.4.1.3.2 Check for cyclic PNC-Coordinator topology

The topology of a partial network cluster (PNC) needs to be cycle-free, that is, the tree spanning the PNC-Coordination needs to be an acyclic directed graph (ADG). Cycles in the graph could make releasing PNC requests impossible (deadlock). Having opposing directions of edges in the graph could cause a split in the PNC network.

The forwarding of PNC requests within an ECU is performed as follows:


- PNC requests received on a `CommunicationConnector` (channel) with `CommunicationConnector.pncGatewayType` set to `active` are forwarded to all `CommunicationConnectors` where this PNC is assigned to (according to [TPS\_SYST\_03080]) (this also includes the `CommunicationConnector` where the PNC request was received)
- PNC requests received on a `CommunicationConnector` (channel) with `CommunicationConnector.pncGatewayType` set to `passive` are forwarded to all `CommunicationConnectors` where this PNC is assigned to (according to [TPS\_SYST\_03080]) and the `CommunicationConnector.pncGatewayType` is set to `active`
- in all other cases the PNC requests are NOT forwarded

Approach to check for cycles in PNC topology, needs to be checked for each PNC individually:

**[TPS\_SYST\_03083] Creation of a PNC paths tree** [Beginning with the top level PNC-Coordinator of a specific PNC X ([TPS\_SYST\_03082]), iterate "depth first" over all channels where PNC X is assigned to (at each node reached only follow network links which have `CommunicationConnector.pncGatewayType` set to `active`), and build a tree of nodes reachable by the channels (PNC paths tree).] (*RS\_SYST\_00042*)

By this, a tree of paths in the system is built. In case a node can reach itself again in a network subtree of its own channels, a cycle is detected and the topology is invalid.

Example PNC paths tree for figure 5.35:

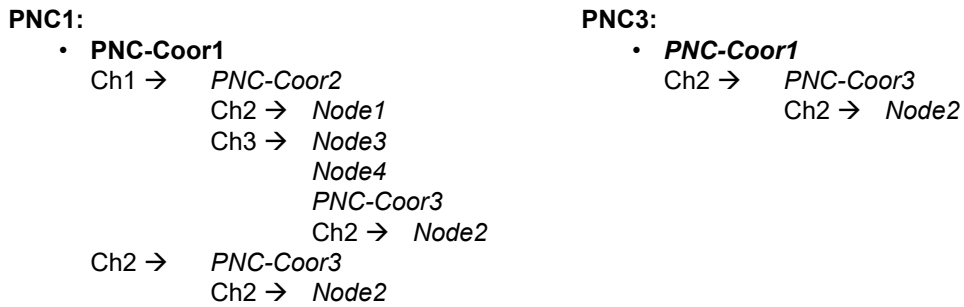


**Figure 5.36: PNC Coordination tree example**

In the example topology of figure 5.35 *PNC-Coor3* can be reached from top level PNC-Coordinator *PNC-Coor1* directly and via *PNC-Coor2* on different paths, but it cannot reach itself, so this is no issue (cycle).

**[TPS\_SYST\_03084] Acyclic PNC graph definition** [For each PNC, the communication relations to aggregate and distribute the system’s PNC state between all nodes, including PNC-Coordinators, shall form a topology reflecting a directed, acyclic graph (according to [TPS\_SYST\_03083]).] ()

The PNC topology depicted in figure 5.37 is an example where a cyclic dependency is defined.

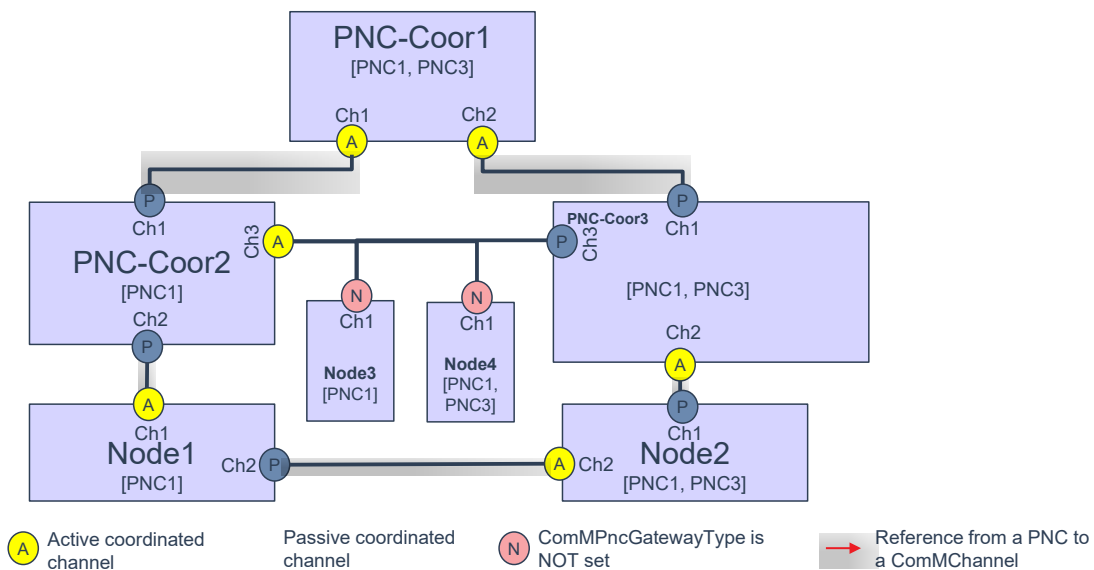

**Figure 5.37: PNC topology example with cyclic graph error**

Some constraints are fulfilled by this example, e.g. there is only one top level PNC-Coordinator defined (*PNC-Coor1*) according to [constr\_3714], also [constr\_5093] is fulfilled.

An issue arises with the cyclic definition of *PNC1* coordination between *PNC-Coor2*, *PNC-Coor3*, *Node2*, and *Node1*. This topology is invalid according to [TPS\_SYST\_03084].







PNC-to-channel-mapping is not used or before this dynamic handling was introduced.

- configurable to be changed during runtime, stored in NVRAM. The Entries can be read and set (never unset) by a learning algorithm and via APIs. The table can also be reset by API, but it contains at least the entries out of the statically configured table.

	PN-Cluster 1	PN-Cluster 2	PN-Cluster 3	PN-Cluster 4	PN-Cluster 5	...	PN-Cluster N
Bus X	<b>S</b>	<b>S</b>					
Bus Y				<b>S</b>			
Bus Z							
Bus to other GwECU		<b>S</b>			<b>S</b>		
...							

	PN-Cluster 1	PN-Cluster 2	PN-Cluster 3	PN-Cluster 4	PN-Cluster 5	...	PN-Cluster N
Bus X	<b>S</b>	<b>S</b>	<b>S</b>				
Bus Y		<b>L</b>		<b>S</b>			
Bus Z			<b>L</b>				
Bus to other GwECU	<b>L</b>	<b>S</b>			<b>S</b>		
...							

**Figure 5.39: Example for static and configurable PNC-to-channel-mapping**

There are two different kinds of mapping table entries as shown in [Figure 5.39](#).

- **Static PNC Mapping (S)**: Entries in PNC-to-channel-mapping are defined in ARXML and stored in nonvolatile memory of the ECU.
- **Configurable PNC Mapping (L)**: Entries in PNC-to-channel-mapping can be added dynamically via PNC learning mechanism but can also be reset.

Mappings can only be added to already existing PNCs. New PNCs cannot be introduced dynamically, but it shall be possible to have PNCs available even without existing

mapping/actual usage. Note that even if a PNC has at least one static relation it is still learnable to additional channel relations.

“Static” entries of the PNC-to-channel-mapping (black “S” in [Figure 5.39](#)) can be defined via the `PncMapping` attributes `pncGroup`, `wakeupFrame` or `physicalChannel`.

If a PNC has no “static” mapping and therefore no entries within the PNC-to-channel-mapping, but entries shall be learnable (blue “L” in [Figure 5.39](#)), even if there is no Tx-/Rx-Relation to the Gateway running the PNC Gateway, then the PNC could be defined in System Description via the `PncMapping` attributes `relevantForDynamicPncMapping` or `dynamicPncMappingPduGroup`.

Note: Defining such dynamic PNC-to-channel-mapping entries makes only sense if the PNC is assigned to a `CommunicationConnector` where `dynamicPncToChannelMappingEnabled` is set to TRUE. Otherwise those dynamic mappings will not be handled by the ECU on this channel. Learning of dynamic PNC-to-channel-mapping is started by an explicit trigger. The node that starts this algorithm sends a Partial Network Learning request, which is then responded by all nodes with their current PNC Membership. PNC Gateways will forward this request to other channels. During this learning phase the PNC Gateway observes all responses and updates the PNC-to-channel-mapping accordingly, depending on which channels a PNC member was observed/received.

Note: While the PNC-to-channel-mapping could be dynamically re-configured, all routing paths (including source and target I-PDUs) within a Gateway are still configured statically. Therefore it is expected that the design of the SystemDescription ensure that all routing paths of all potentially expected PNC-to-channel-mappings are provided statically. For this dynamic PNC-to-channel-mapping some configurations restrictions and design limitations are needed to ensure proper functionality. These are provided in the following either as constraints or as text if a constraint is not feasible.

**[constr\_5167] `pncGatewayType` and ECU over the whole system** [Only one PNC Gateway ECU in the whole System shall exist that sets on all its `CommunicationConnectors` the `pncGatewayType` to `active`.]()

This constraint ensures that only one top level PNC coordinator exists. This is crucial as otherwise PNC system is either completely split in several parts over the system or connected in a way that would lead to cycles.

**[constr\_5168] `pncGatewayType` passive and connected ECUs** [For all `CommunicationConnectors` with `pncGatewayType` set to `passive` belonging to one PNC Gateway ECU, all connected counterpart `CommunicationConnectors` where `pncGatewayType` is set to `active` shall belong to one ECU.]()

This constraint ensures that one ECU cannot be passively connected to two different coordinators. This avoids coordination problems in normal systems as there is no coordination from passive to passive. For dynamic PNC-to-channel mapping it is essential to avoid cycles in the forwarding of the learning request.

**[constr\_5169] pncGatewayType and (routing) paths** [No path over all networks shall exist that connects a `CommunicationConnector` with `pncGatewayType` active to a `CommunicationConnector` with `pncGatewayType` passive where both `CommunicationConnectors` belong to the same ECU.]()

This constraint ensures that PNC Gateways have no cyclic connections which would lead to a blocking request keeping the whole system awake.

**[constr\_5170] nmPassiveModeEnabled and dynamicPncToChannelMappingEnabled** [If `nmPassiveModeEnabled` is set to TRUE on a `NmNode` then `dynamicPncToChannelMappingEnabled` shall be set to FALSE on the according `CommunicationConnector` referring to the same `CommunicationController`.]()


Note: A passive NM node cannot transmit its cluster membership to the Gateway. Therefore, it cannot take part at the dynamic PNC learning and all assigned PNCs have to be statically configured, i.e. no dynamic mapping is allowed.

Additionally this constraint also leads to the fact that defining dynamic mappings for such a `NmNode` makes no sense as they will be ignored. The `CanCommunicationConnector.pncWakeupDataMask` of the Gateways have to consider learnable PNCs.

In a system with multiple (cascaded) Gateways, the `RepeatMessage` time has to be sufficient to fulfill its purpose and provide enough time for PNC Learning mechanism to receive at least one NM PDU of all `NmNodes`.

## 5.4.2 Com Management Mapping

The AUTOSAR BSW stack supports the configuration of the ComM module which encapsulates the control of the underlying communication services. The ComM module collects the bus communication access requests from communication requestors and coordinates the bus communication access requests. In order to utilize the communication requests from application software the Software Component Template supports the definition of `PortGroups` with the category `MODE_MANAGEMENT`. In this section it is described how `PortGroups` with the category `MODE_MANAGEMENT` are mapped to communication channels.

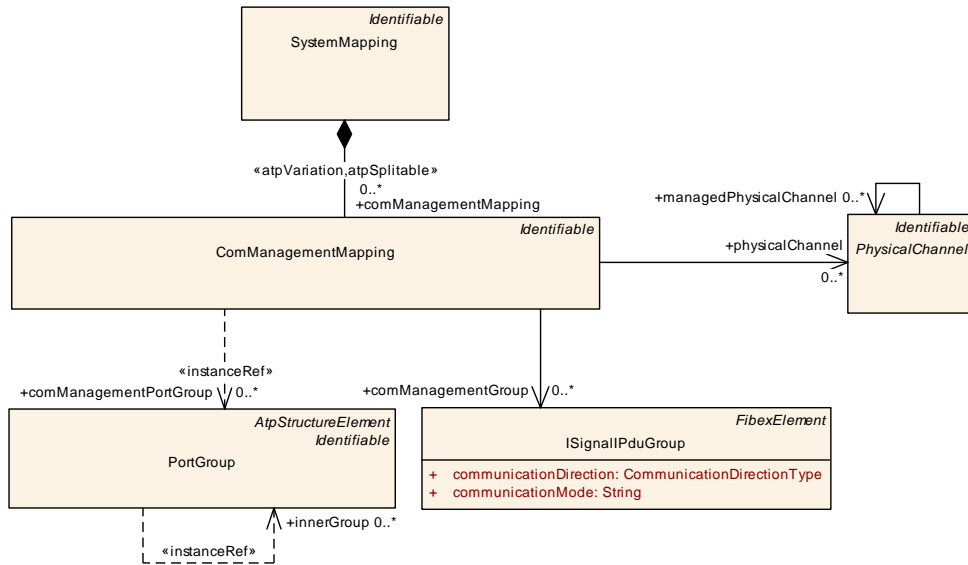

**Figure 5.40: Mapping between PortGroups and communication channels**

<b>Class</b>	<b>ComManagementMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate			
<b>Note</b>	Describes a mapping between one or several Mode Management PortGroups and communication channels.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	SystemMapping.comManagementMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
com Management Group	ISignalPduGroup	*	ref	IPduGroup participating in a Mode Management Port Group.
com Management PortGroup	PortGroup	*	iref	Mode Management PortGroup to be mapped onto a communication channel. This reference is optional in case that the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy systems. <b>InstanceRef implemented by:</b> PortGroupInSystem InstanceRef
physical Channel	PhysicalChannel	*	ref	This reference maps the Mode Management PortGroup partial network to communication channels.

**Table 5.46: ComManagementMapping**

## 5.5 Software Cluster Mapping

[TPS\_SYST\_02348]{DRAFT} Mapping of CpSoftwareCluster to EcuInstance  
 [The assignment of a concrete CpSoftwareCluster to an EcuInstance is done by means of the meta-class CpSoftwareClusterToEcuInstanceMapping.]()

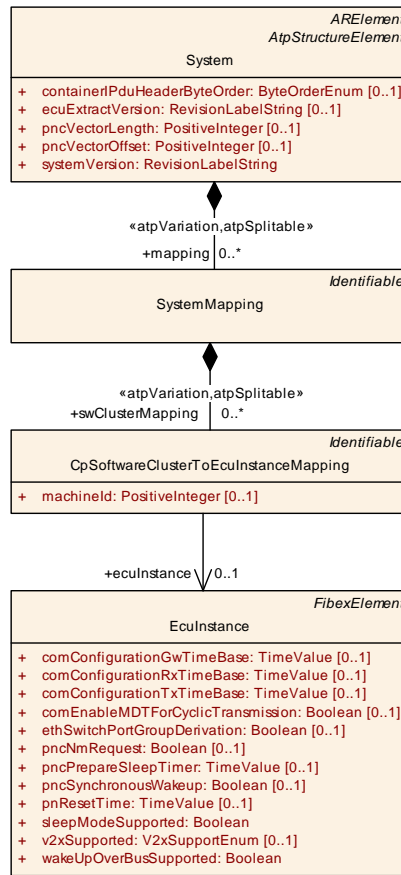



Figure 5.41: Modeling of the **CpSoftwareClusterToEcuInstanceMapping**

<b>Class</b>	<b>CpSoftwareClusterToEcuInstanceMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	This meta class maps a CpSoftwareCluster to a EcuInstance. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	ARObject, <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	SystemMapping.swClusterMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ecuInstance	<a href="#">EcuInstance</a>	0..1	ref	Reference to a specific ECU Instance description. <b>Tags:</b> atp.Status=draft
machineId	PositiveInteger	0..1	attr	Unique number of the (virtual or physical) machine to which the Software Cluster is mapped.
swCluster	<a href="#">CpSoftwareCluster</a>	*	ref	The mapped CP Software Cluster <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=swCluster.cpSoftwareCluster, swCluster.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=systemDesignTime

Table 5.47: **CpSoftwareClusterToEcuInstanceMapping**

[constr\_5337] All **CpSoftwareClusterToEcuInstanceMappings** that are referencing the same **EcuInstance** shall define the same **machineId** [All **CpSoftwareClusterToEcuInstanceMappings** that define a **machineId** and are referencing the same **EcuInstance** in the role **ecuInstance** shall have the same **CpSoftwareClusterToEcuInstanceMapping.machineId** value set at the time when the System Description is finished.]()

[TPS\_SYST\_02347]{DRAFT} **Mapping of CpSoftwareClusterResource to ApplicationPartition** [The assignment of a concrete **CpSoftwareClusterResource** to an **ApplicationPartition** is done by means of the meta-class **CpSoftwareClusterResourceToApplicationPartitionMapping**.]()

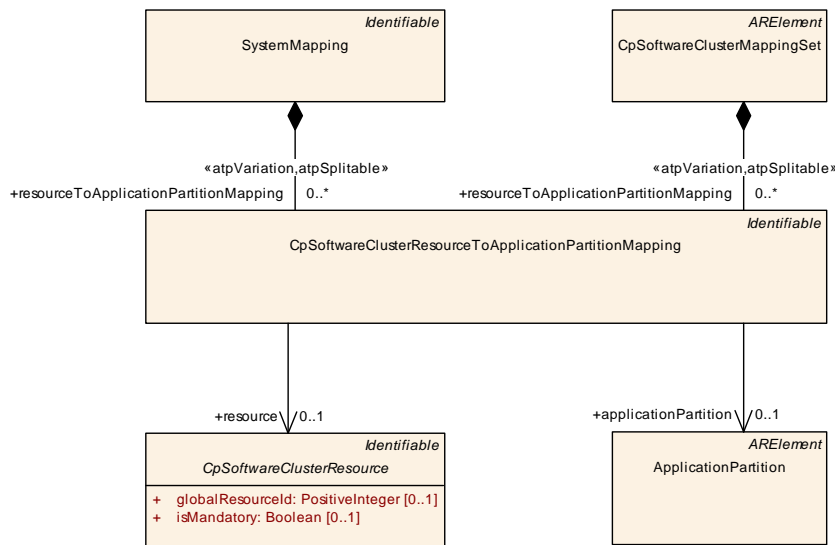

**Figure 5.42: Modeling of the CpSoftwareClusterResourceToApplicationPartitionMapping**

<b>Class</b>	<b>CpSoftwareClusterResourceToApplicationPartitionMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	This meta class maps a Software Cluster resource to an Application Partition to restrict the usage. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	CpSoftwareClusterMappingSet.resourceToApplicationPartitionMapping, SystemMapping.resourceToApplicationPartitionMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
application Partition	ApplicationPartition	0..1	ref	ApplicationPartition for which the mapping applies. <b>Tags:</b> atp.Status=draft
resource	CpSoftwareCluster Resource	0..1	ref	Software Cluster Resource for which the mapping applies. <b>Tags:</b> atp.Status=draft

**Table 5.48: CpSoftwareClusterResourceToApplicationPartitionMapping**

<b>Class</b>	<b>CpSoftwareClusterMappingSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	<p>This meta-class represents the ability to aggregate a collection of CP Software Cluster relevant mappings. This is applicable if a CP Software Cluster is described besides a concrete System, e.g. a reusable CP Software Cluster.</p> <p><b>Tags:</b> atp.Status=draft atp.recommendedPackage=CpSoftwareClusterMappingSets</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
portElementToComResourceMapping	<a href="#">PortElementToCommunicationResourceMapping</a>	*	aggr	<p>maps a communication resource to CP Software Clusters</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=portElementToComResourceMapping.shortName, portElementToComResourceMapping.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=postBuild</p>
resourceToApplicationPartitionMapping	<a href="#">CpSoftwareClusterResourceToApplicationPartitionMapping</a>	*	aggr	<p>Maps a Software Cluster resource to an Application Partition to restrict the usage.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=resourceToApplicationPartitionMapping.shortName, resourceToApplicationPartitionMapping.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=systemDesignTime</p>
softwareClusterToResourceMapping	<a href="#">CpSoftwareClusterToResourceMapping</a>	*	aggr	<p>maps a service resource to CP Software Clusters</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=softwareClusterToResourceMapping.shortName, softwareClusterToResourceMapping.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=preCompileTime</p>
swcToApplicationPartitionMapping	<a href="#">SwcToApplicationPartitionMapping</a>	*	aggr	<p>maps SwComponentPrototypes in a CP Software Cluster to ApplicationPartitions</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=swcToApplicationPartitionMapping.shortName, swcToApplicationPartitionMapping.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>

**Table 5.49: CpSoftwareClusterMappingSet**

[constr\_5219]{DRAFT} **CpSoftwareCluster** shall only be mapped to one **EcuInstance** [Within the context of one **CpSoftwareCluster**, for all **CpSoftwareCluster.swComponentAssignment.swComponent** (and nested instances of **SwComponentPrototypes**) that are referenced by a **SwcToEcuMapping** in the role **component** the following condition shall be fulfilled: all referencing **SwcToEcuMappings** shall refer to the same **EcuInstance** in the role **ecuInstance** and this **EcuInstance** shall also be referenced in the role **ecuInstance** by all **CpSoftwareClusterToEcuInstanceMappings** that also refer to said **CpSoftwareCluster** in the role **swCluster**.]()

The statement made by [constr\_5219] is visualized by Figure 5.43.

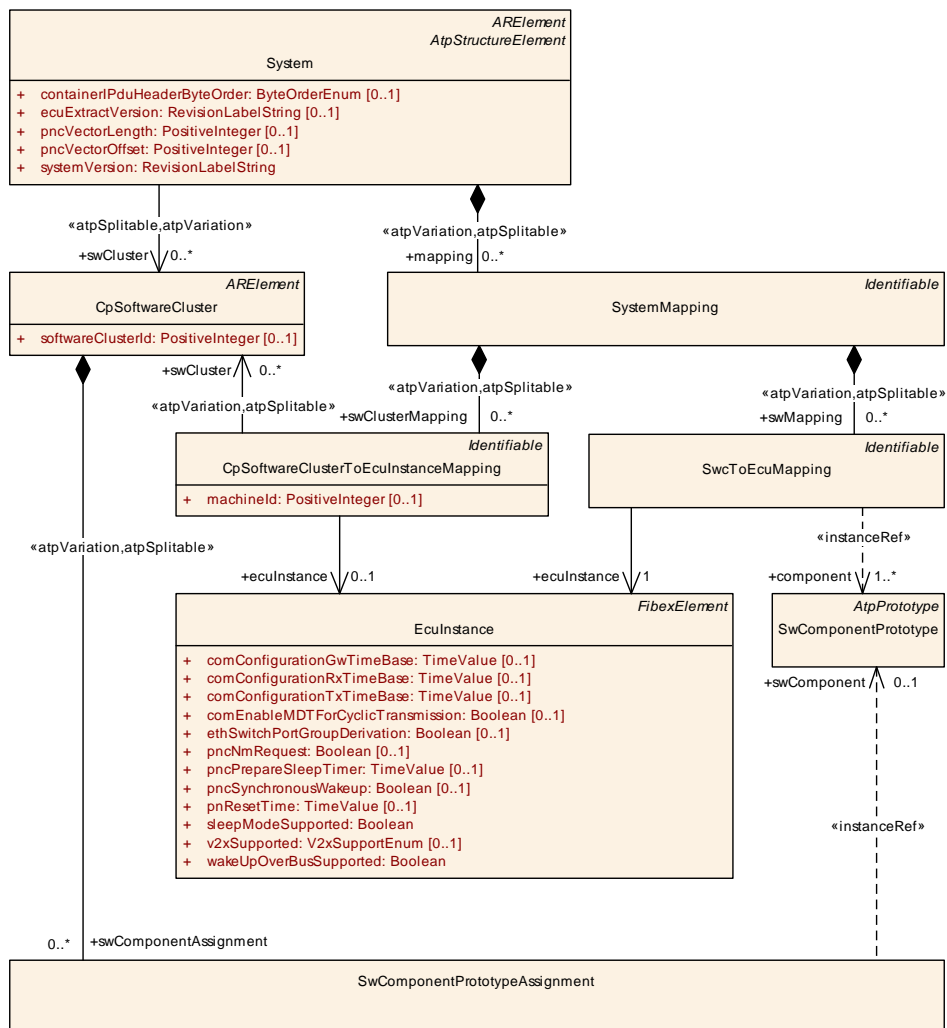


Figure 5.43: Visualization of constr\_5219



## 6 Communication

This chapter describes all topics that deal with constraints or configurations that describe the information exchange between the ECUs. The description of communication matrices in the System Template is based on the description in ASAM FIBEX [9]. Because of the requirements of AUTOSAR some extensions were made to the original FIBEX model.

The main elements to describe communication in the System Template are [System-Signals](#), [ISignals](#), [Pdus](#) and [Frames](#), as it can be seen on Figure 6.1.

[Frames](#) can be defined independently of communication clusters. On the communication channel the [Frame](#) is represented by the referencing [FrameTriggering](#).


A [Frame](#) has a payload section of a certain length in bytes, which contains an arbitrary number of non-overlapping [Pdus](#). In AUTOSAR only FlexRay supports the packing and unpacking of multiple [Pdus](#) into/out of one FlexRay [Frame](#). The AUTOSAR CanIf and LinIf are not capable of packing multiple [Pdus](#) into one [Frame](#).

**[constr\_3036] Pdus in CAN and LIN Frames** [CAN Frames and LIN Frames shall only contain one [Pdu](#).]()

Note that via the [ContainerIPdu](#) it is possible to transport several [IPdus](#) in one [ContainerIPdu](#) in order to support CAN FD.

A [Pdu](#) (Protocol Data Unit) is the information delivered through a network layer. For the network to understand which layer is being discussed, a single-letter prefix is added to the PDU.

- [IPdu](#) - Interaction Layer Protocol Data Unit (assembled and disassembled in Com). In the case of external communication the Interaction Layer packs one or more signals into assigned [IPdus](#) and passes them to the underlying layer for transfer between nodes in a network.
- [NPdu](#) - Network Layer Protocol Data Unit (assembled and disassembled in a Transport Protocol module). The TP module's main purpose is the segmentation and reassembly of [IPdus](#) that do not fit in one of the assigned [NPdus](#).
- [LPdu](#) - Data Link Layer Protocol Data Unit (assembled and disassembled in AUTOSAR Hardware Abstraction layer). The element [Frame](#) in the System Template represents the AUTOSAR Layered Architectures [LSdu](#). [Sdu](#) is the abbreviation of "Service Data Unit". The Data Link Layers [LPdu](#) contains the [LSdu](#) and [PCI](#) (Protocol Control Information). The [LPdu](#) is not described in the System Template.

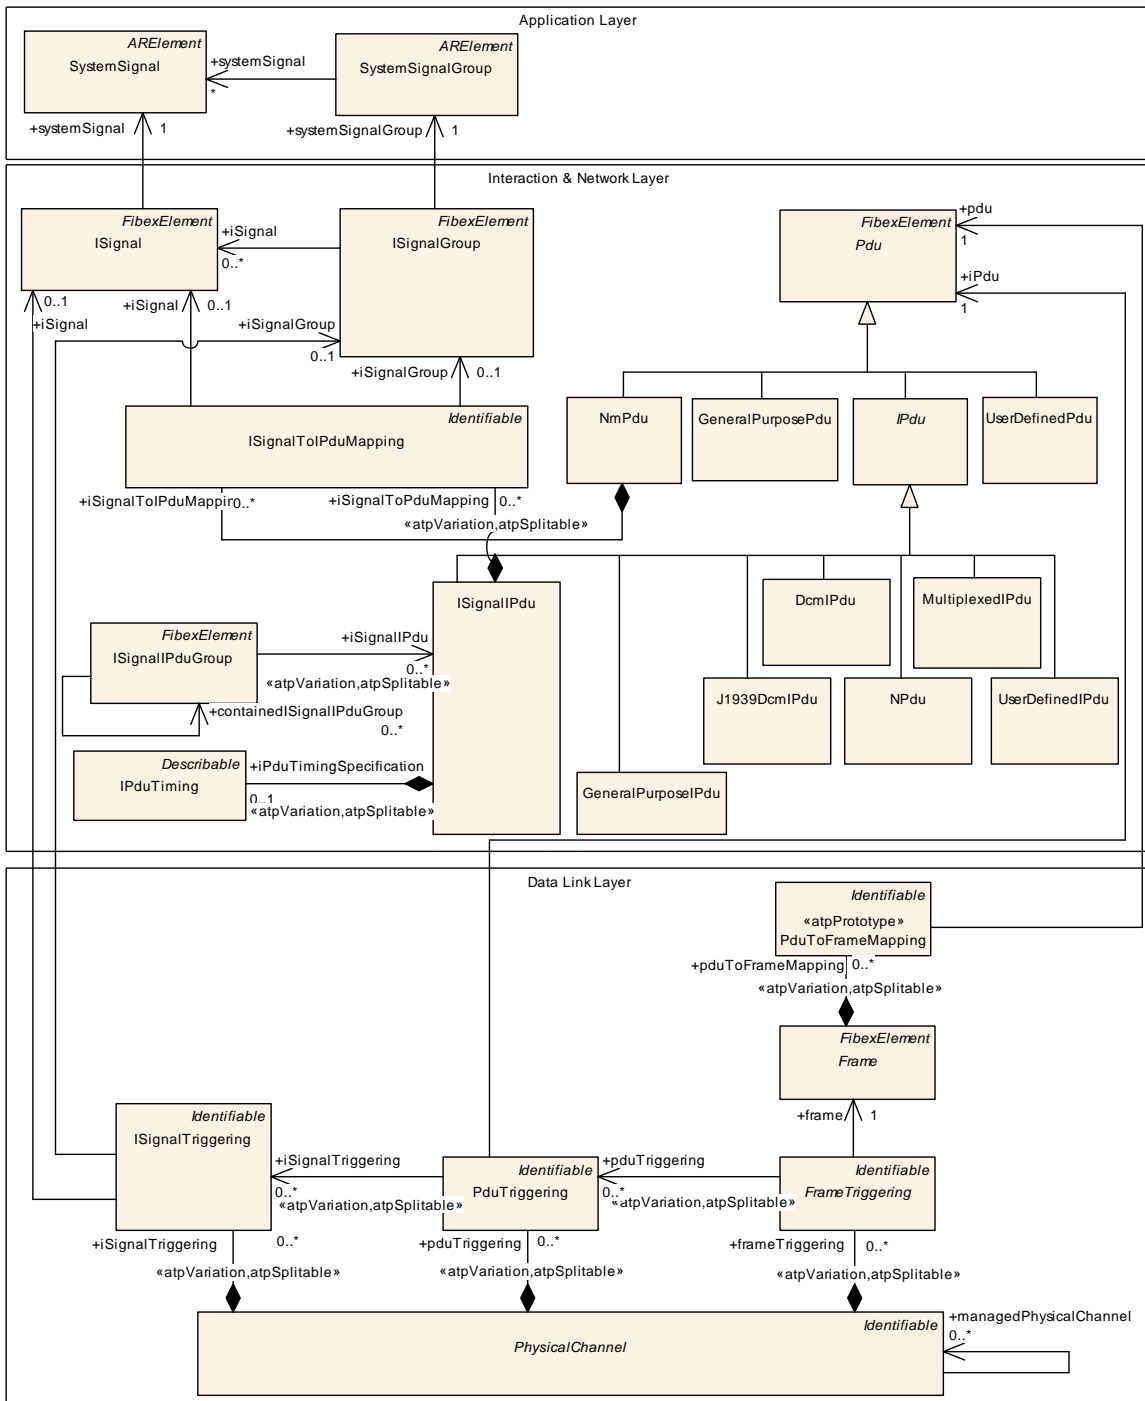

**Figure 6.1: Communication Overview (FibexCore: Communication)**

In case no multiplexing is performed the `IPdus` of Com that fit into one frame can be passed directly via the PDU Router to the communication interfaces.

**[constr\_3037] maximum Frame frameLength for CAN and LIN** [For CAN and LIN the maximum `frameLength` is 8 bytes and 64 bytes in case of CAN FD.]()

**[constr\_3038] maximum Frame frameLength for FlexRay** [For FlexRay the maximum `frameLength` is 254 bytes.]()

[TPS\_SYST\_01048] Handling of large IPdus [Large IPdus that are too long to fit into one Frame of the respective subclass of CommunicationCluster shall be routed via a Transport Protocol to the communication interfaces.]()

For example an IPdu with the length of 10 bytes needs to be routed via a Transport Protocol on CAN but on FlexRay this is not required.

The Transport Protocols are described in more detail in chapter 6.8.

If multiplexing is performed an IPdu is routed between the IPdu Multiplexer and the Interface Layer or Transport Layer. To distinguish these two different cases two specializations ISignalIPdu and MultiplexedIPdu are introduced. A ISignalIPdu represents an IPdu handled by AUTOSAR Com. The AUTOSAR IPduM is responsible to combine Com ISignalIPdus to MultiplexedIPdus. On receiver-side the IPduM is responsible to interpret the content of MultiplexedIPdus and provide Com separated ISignalIPdus by taking into account the value of the selector field. The IPdu Multiplexer is described in more detail in chapter 6.5.

AUTOSAR Com provides the possibility to define Transmission Modes for each Com ISignalIPdu. For this reason the ISignalIPdu aggregates the IPduTiming. The Transmission Modes are described in more detail in chapter 6.4.

## 6.1 Triggerings and Ports


The elements FrameTriggering, PduTriggering and ISignalTriggering are describing the usage of Frames, IPdus and ISignals on a PhysicalChannel.

A FrameTriggering need to fulfill requirements for contained Pdus that are defined by the corresponding PduTriggerings. And the PduTriggering need to fulfill requirements for contained ISignals that are defined by the corresponding ISignalTriggerings. The references between the Triggering elements can be used to describe these relationships. More details can be found in class tables of FrameTriggering, PduTriggering and ISignalTriggering.

In AUTOSAR the timing of bus messages can be controlled by send requests of the Application layer in combination with the Com Transmission Modes and Transfer Properties (esp. CAN). On the other hand it can be controlled by the FlexRay or LIN Interface. In this case the Bus Interface only requests IPdus that have to be provided by Com.

In the System Template the Com controlled timing is described with the aggregation between the ISignalIPdu and the IPduTiming. The LIN and FlexRay Scheduling Tables are described in the FrameTriggering.

Timing requirements for FlexRay, TTCAN and LIN Pdus can be specified with the Timing Extension model. More details are described in chapter 1.7.3.

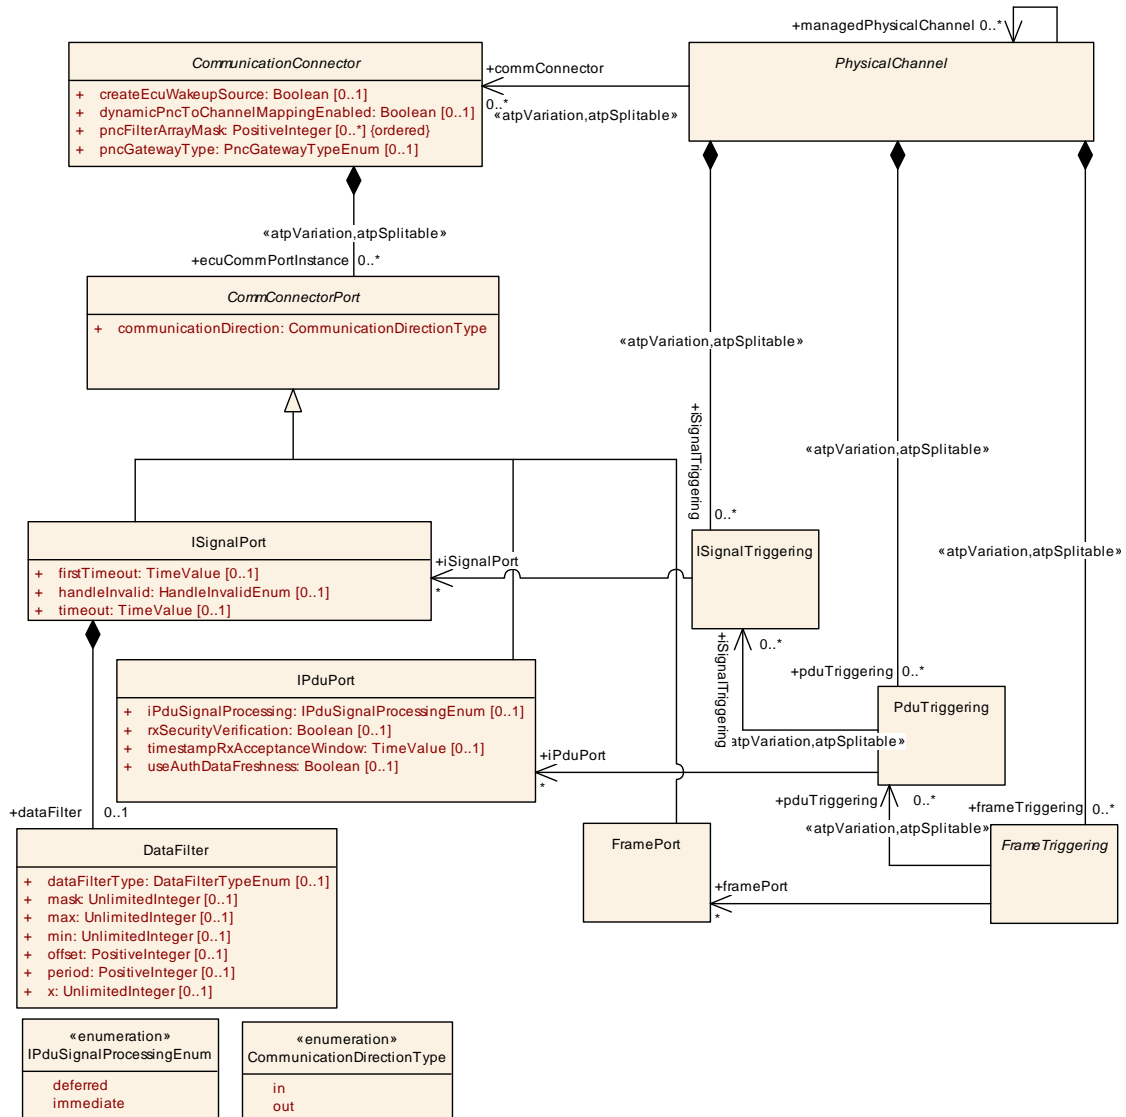

**Figure 6.2: Communication Matrix (FibexCore: CommunicationMatrix)**

Figure 6.2 shows the relationship between the `CommConnectorPort` and the `FrameTriggering`, `PduTriggering` and `ISignalTriggering`. This relationship allows to specify explicitly which `Frames`, `Pdus`, `ISignals` are received/sent by the connected ECU on the connected channel.

**[constr\_3243] FrameTriggering.pduTriggering condition** [A `FrameTriggering` shall reference a `PduTriggering` if the `PduTriggering` references a `Pdu` that is referenced by a `PduToFrameMapping` which in turn is aggregated by the `Frame` that is referenced by that `FrameTriggering`.]()

**[constr\_3250] PduTriggering.iSignalTriggering condition** [A `PduTriggering` shall reference an `ISignalTriggering` if the `ISignalTriggering` references an `ISignal` or an `ISignalGroup` that is referenced by an `ISignalToIPduMapping` which in turn is aggregated by the `Pdu` that is referenced by that `PduTriggering`.]()

**[TPS\_SYST\_02102] FrameTriggering.pduTriggering references that shall be ignored** [References from `FrameTriggering` to `PduTriggering` which are not covered by `[constr_3243]` shall be ignored.]()

As a consequence of `[constr_3243]` the following implications can be derived:

- The `PduTriggering` of the `ContainerIPdu` is referenced from the `FrameTriggering` but the `PduTriggerings` of the contained `IPdus` are not referenced from the `FrameTriggering`.
- The `PduTriggering` of the `MultiplexedIPdu` is referenced from the `FrameTriggering` but the `PduTriggerings` of the multiplexed Part `Pdus` are not referenced from the `FrameTriggering`.

**[TPS\_SYST\_02104] Triggerings on PhysicalChannel** [The following modeling creates a "membership" of `ISignals`, `ISignalGroups`, `Pdus`, and `Frames` in a given `PhysicalChannel`:

- `PhysicalChannel` aggregates
  - `ISignalTriggering` that in turn references `ISignal` in the role `iSignal`
  - `ISignalTriggering` that in turn references an `ISignalGroup` in the role `iSignalGroup` (`[constr_5106]` applies).
- `PhysicalChannel` aggregates `PduTriggering` that in turn references a `Pdu` in the role `iPdu`.
- `PhysicalChannel` aggregates `FrameTriggering` that in turn references a `Frame` in the role `frame`.

]()

**[constr\_5106] ISignalGroup and ISignal referenced from ISignalTriggering** [Either an `ISignalGroup` and all `ISignals` referenced from the `ISignalGroup` are also referenced from `ISignalTriggerings` aggregated at the same `PhysicalChannel` or neither the `ISignalGroup` nor any of the `ISignals` referenced by the `ISignalGroup` shall be referenced from `ISignalTriggerings`.]()

**[TPS\_SYST\_01142] Rules for the creation of references to Ports (ecuCommPortInstance) with communicationDirection out on sending Ecu** [

- Application sends `ISignal` or `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for an `ISignal` that is not part of an `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for the `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for the `ISignalGroup` members that are sent by the Application.
  - `PduTriggering` reference to `IPduPort` shall be created

- `FrameTriggering` reference to `FramePort` shall be created
- COM Signal Gateway
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for an `ISignal` that is not part of an `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for the `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` for a subset of `ISignals` inside the `ISignalGroup` shall be created (in case not all members of the `ISignalGroup` participate in the target Signal Gateway relation).
  - `PduTriggering` reference to `IPduPort` shall be created
  - `FrameTriggering` reference to `FramePort` shall be created
- `ISignal` or `ISignalGroup` is mapped to `ISignalIPdu` but NOT sent by Application or Signal Gateway
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for an `ISignal` that is not part of an `ISignalGroup`
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for an `ISignalGroup`
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for any `ISignal` that is part of an `ISignalGroup`
  - `PduTriggering` reference to `IPduPort` shall be created
  - `FrameTriggering` reference to `FramePort` shall be created
- Neither `ISignal`, `ISignalGroup`, `Pdu`, nor `Frame` sent by the ECU
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for an `ISignal` that is not part of an `ISignalGroup`
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for an `ISignalGroup`
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for any `ISignal` that is part of an `ISignalGroup`
  - No `PduTriggering` reference to `IPduPort` shall be created
  - No `FrameTriggering` reference to `FramePort` shall be created

]()

Please note that it is possible to configure a signal that is transmitted by an application and also routed by a SignalGateway. At runtime it has to be ensured that only one path is active at a particular point in time (to avoid race conditions in COM Stack).

**[TPS\_SYST\_02106] Rules for the creation of references to Ports (`ecuComm-PortInstance`) with `communicationDirection` in on receiving Ecu [**

- Application receives `ISignal` or `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for an `ISignal` that is not part of an `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for the `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for the `ISignalGroup` members that are received by the Application.
  - `PduTriggering` reference to `IPduPort` shall be created
  - `FrameTriggering` reference to `FramePort` shall be created
- COM Signal Gateway
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for an `ISignal` that is not part of an `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` shall be created for the `ISignalGroup`
  - Reference from `ISignalTriggering` to `ISignalPort` for a subset of `ISignals` inside the `ISignalGroup` shall be created (in case not all members of the `ISignalGroup` participate in the source Signal Gateway relation).
  - `PduTriggering` reference to `IPduPort` shall be created
  - `FrameTriggering` reference to `FramePort` shall be created
- `ISignal` or `ISignalGroup` is mapped to `ISignalIPdu` but NOT received by Application or Signal Gateway
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for an `ISignal` that is not part of an `ISignalGroup`
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for an `ISignalGroup`
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for any `ISignal` that is part of an `ISignalGroup`
  - `PduTriggering` reference to `IPduPort` shall be created
  - `FrameTriggering` reference to `FramePort` shall be created
- Neither `ISignal`, `ISignalGroup`, `Pdu`, nor `Frame` received by the ECU
  - No `ISignalTriggering` reference to `ISignalPort` shall be created for an `ISignal` that is not part of an `ISignalGroup`



- No `ISignalTriggering` reference to `ISignalPort` shall be created for an `ISignalGroup`
- No `ISignalTriggering` reference to `ISignalPort` shall be created for any `ISignal` that is part of an `ISignalGroup`
- No `PduTriggering` reference to `IPduPort` shall be created
- No `FrameTriggering` reference to `FramePort` shall be created

]()

**[constr\_3252] `ISignalTriggering.iSignalPort` reference condition** [An `ISignalTriggering` shall only reference an `ISignalPort` if the `CommunicationConnector` aggregating that `ISignalPort` is referenced by the `PhysicalChannel` which in turn aggregates that `ISignalTriggering`.]()

**[constr\_3253] `PduTriggering.iPduPort` reference condition** [A `PduTriggering` shall only reference an `IPduPort` if the `CommunicationConnector` aggregating that `IPduPort` is referenced by the `PhysicalChannel` which in turn aggregates that `PduTriggering`.]()

**[constr\_3254] `FrameTriggering.framePort` reference condition** [A `FrameTriggering` shall only reference a `FramePort` if the `CommunicationConnector` aggregating that `FramePort` is referenced by the `PhysicalChannel` which in turn aggregates that `FrameTriggering`.]()

**[constr\_3255] `FrameTriggering.pduTriggering` reference condition with regard to the `PhysicalChannel`** [A `FrameTriggering` shall only reference a `PduTriggering` in the role `pduTriggering` if both the `FrameTriggering` and `PduTriggering` are aggregated by the same `PhysicalChannel`.]()

**[constr\_3256] `PduTriggering.iSignalTriggering` reference condition with regard to the `PhysicalChannel`** [A `PduTriggering` shall only reference an `ISignalTriggering` in the role `iSignalTriggering` if both the `PduTriggering` and `ISignalTriggering` are aggregated by the same `PhysicalChannel`.]()

The following rules apply for the creation of `PduTriggerings` and `IPduPorts`:


- **[TPS\_SYST\_01052] Routing of `UserDefinedPdus`, `NmPdus`, `NPdus`** [ `UserDefinedPdus`, `NmPdus`, `NPdus` which are not going through the `PduRouter` get their triggering information via the containing `FrameTriggering` and `FramePort` (no `PduTriggering` is defined for these `Pdus`).]()
- **[TPS\_SYST\_03021] Routing of `GeneralPurposePdus` with category `GLOBAL_TIME`** [`GeneralPurposePdus` with category `GLOBAL_TIME` shall have `PduTriggering` and `IPduPorts` defined.]()



- [TPS\_SYST\_02091] **Routing of GeneralPurposePdus with category SD and GeneralPurposePdus with category DoIP** [GeneralPurposePdus with category SD and GeneralPurposePdus with category DoIP shall have PduTriggering and IPduPorts defined since no Frames and FrameTriggerings are defined for Pdus that are handled by the SoAd.]()
- [TPS\_SYST\_01053] **Low-level routing of NPdus** [In case of a low-level routing of NPdus the Pdus are handled like IPdus and the PduTriggering and IPduPort shall be defined.]()
- [TPS\_SYST\_01138] **Low-level routing of XcpPdus** [Low-level routing of GeneralPurposeIPdus with category XCP: In case of a low-level routing of GeneralPurposeIPdus with category XCP the Pdus are handled like IPdus and the PduTriggering and IPduPort shall be defined.]()
- [TPS\_SYST\_01054] **Routing of DcmIPdus** [DcmIPdus shall have PduTriggering and IPduPorts since they are handled by the PduR (connection to the Dcm and/or DcmIPdu-routing).]()
- [TPS\_SYST\_01055] **Routing of ISignalIPdus that are part of a MultiplexedIPdu** [ISignalIPdus that are part of a MultiplexedIPdu (static or dynamic) and are also handled by the Com module shall have a PduTriggering and IPduPorts since they are handled by the PduR (and Com). Especially it is allowed to ignore certain received parts of a MultiplexedIPdu in a specific ECU.]()
- [TPS\_SYST\_01056] **Routing of ISignalIPdus, UserDefinedIPdus, MultiplexedIPdus, GeneralPurposeIPdus, ContainerIPdus** [ISignalIPdus (not part of MultiplexedIPdus), UserDefinedIPdus, MultiplexedIPdus, GeneralPurposeIPdus and ContainerIPdus shall have a PduTriggering and IPduPort if they are handled by the PduR. Especially it is allowed to ignore a certain IPdu out of a Flexray frame if it is not considered in a specific ECU.](RS\_SYST\_00055)
- [TPS\_SYST\_01057] **Routing of NmPdus** [If an NmPdu contains user data defined via the existence of NmPdu.iSignalToIPduMapping and is consequently handled via the PduR and Com the NmPdu shall also be referenced by a corresponding PduTriggering where attribute ipduPort exists accordingly.]()
- [TPS\_SYST\_02059] **Routing of SecuredIPdus** [SecuredIPdus shall have a PduTriggering and IPduPort defined since they are handled by the PduR. Pdus that are part of a SecuredIPdu and are also handled by the Com module shall have a PduTriggering and IPduPorts since they are handled by the PduR (and Com).](RS\_SYST\_00054)
- [TPS\_SYST\_02061] **Routing of IPdus that are part of a ContainerIPdu** [IPdus that are part of a ContainerIPdu shall have a PduTriggering and IPduPorts since they are handled by the PduR.](RS\_SYST\_00055)

The following rule applies to the creation of ISignalTriggering and ISignalPort:

[TPS\_SYST\_01058] Pdu Gateway where an Ecu only routes a **PduTriggering** without being interested in the content [In case of a Pdu Gateway where an Ecu only routes a **PduTriggering** without being interested in the content, the reference between the **ISignalTriggerings** (that are referred to by the **PduTriggering** in the role **iSignalTriggering**) and the respective **ISignalPorts** shall not be created.]()

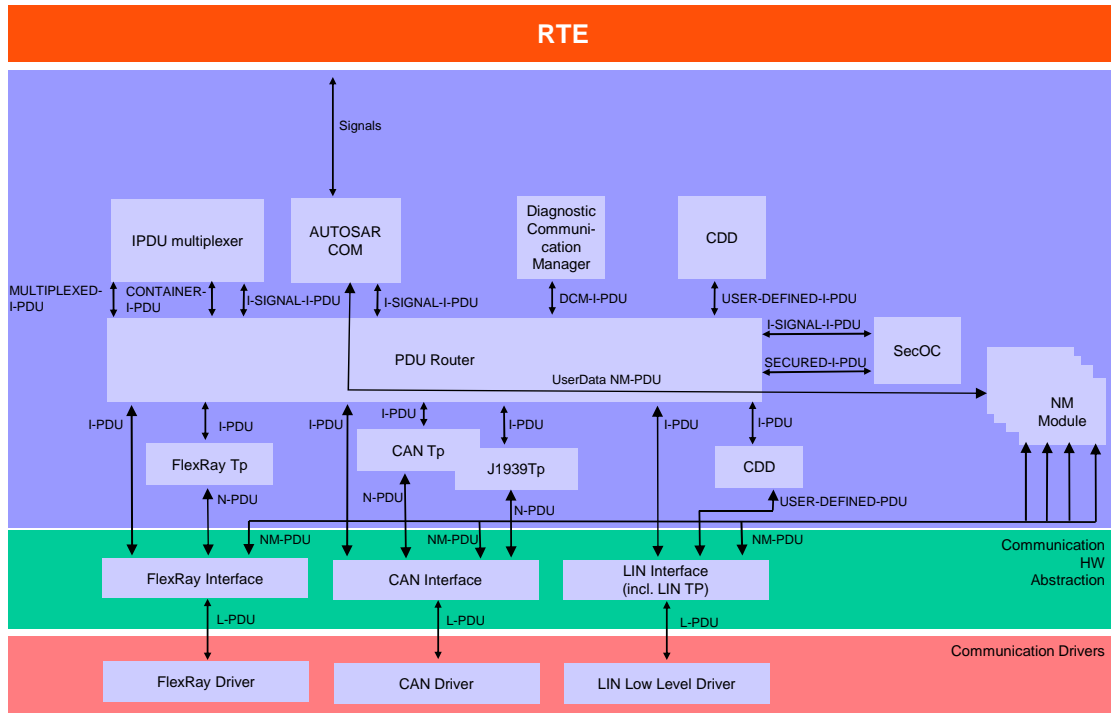

**Figure 6.3: AUTOSAR Layered Architecture**

<b>Class</b>	<b>CommConnectorPort</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	<p>The Ecu communication relationship defines which signals, Pdus and frames are actually received and transmitted by this ECU.</p> <p>For each signal, Pdu or Frame that is transmitted or received and used by the Ecu an association between an ISignalPort, IPduPort or FramePort with the corresponding Triggering shall be created. An ISignalPort shall be created only if the corresponding signal is handled by COM (RTE or Signal Gateway). If a Pdu Gateway ECU only routes the Pdu without being interested in the content only a FramePort and an IPduPort needs to be created.</p>			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Subclasses</b>	FramePort, IPduPort, ISignalPort			
<b>Aggregated by</b>	CommunicationConnector.ecuCommPortInstance			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Direction	Communication DirectionType	1	attr	Communication Direction of the Connector Port (input or output Port).

**Table 6.1: CommConnectorPort**

<b>Class</b>	<b>FramePort</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Connectors reception or send port on the referenced channel referenced by a FrameTriggering.			
<b>Base</b>	ARObject, <a href="#">CommConnectorPort</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CommunicationConnector.ecuCommPortInstance</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.2: FramePort**

<b>Class</b>	<b>IPduPort</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Connectors reception or send port on the referenced channel referenced by a PduTriggering.			
<b>Base</b>	ARObject, <a href="#">CommConnectorPort</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CommunicationConnector.ecuCommPortInstance</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
iPduSignal Processing	<a href="#">IPduSignalProcessingEnum</a>	0..1	attr	Definition of the two signal processing modes Immediate and Deferred for both Tx and Rx IPdus.
rxSecurity Verification	Boolean	0..1	attr	This attribute defines the bypassing of signature authentication or MAC verification in the receiving ECU. If not defined or set to true the signature authentication or MAC verification shall be performed for the SecuredIPdu. If set to false the signature authentication or MAC verification shall not be performed for the SecuredIPdu.
timestampRx Acceptance Window	TimeValue	0..1	attr	This attribute is used to define the maximum allowed deviation in seconds from the expected timestamp for which a SecuredIPdu is still deemed authentic. Please note that this attribute is for documentation only to allow the configuration of required freshness value manager and no upstream mapping is defined for it.
useAuthData Freshness	Boolean	0..1	attr	This attribute describes whether a part of AuthenticPdu contained in a SecuredIPdu shall be passed on to the SWC that verifies and generates the Freshness. The part of the Authentic-PDU is defined by the authData FreshnessStartPosition and authDataFreshnessLength.

**Table 6.3: IPduPort**

**[constr\_3137] IPduPort.rxSecurityVerification is configurable on the receiver side** [The [IPduPort.rxSecurityVerification](#) attribute shall only be used in [IPduPorts](#) with the [communicationDirection = in.](#)]()

**[constr\_3138] IPduPort.rxSecurityVerification validness** [The [IPduPort.rxSecurityVerification](#) information is only valid for [SecuredIPdus.](#)]()

**[constr\_3337] IPduPort.useAuthDataFreshness is configurable on the receiver side** [The [IPduPort.useAuthDataFreshness](#) attribute shall only be used in [IPduPorts](#) with the [communicationDirection = in.](#)]()

**[constr\_3338] IPduPort.useAuthDataFreshness validness** [The [IPduPort.useAuthDataFreshness](#) information is only valid for [SecuredIPdus.](#)]()

<b>Enumeration</b>	<b>IPduSignalProcessingEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	Definition of signal processing modes.
<b>Aggregated by</b>	<a href="#">IPduPort.iPduSignalProcessing</a>
<b>Literal</b>	<b>Description</b>
deferred	The signal indications / confirmations are deferred. <b>Tags:</b> atp.EnumerationLiteralIndex=0
immediate	The signal indications / confirmations are performed. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.4: IPduSignalProcessingEnum**

<b>Class</b>	<b>ISignalPort</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Connectors reception or send port on the referenced channel referenced by an ISignalTriggering. If different timeouts or DataFilters for ISignals need to be specified several ISignalPorts may be created.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CommConnectorPort</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CommunicationConnector.ecuCommPortInstance</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataFilter	<a href="#">DataFilter</a>	0..1	aggr	Optional specification of a signal COM filter at the receiver side in case that the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy system signals. If a full DataMapping exist for the SystemSignal this information may be available from a configured ReceiverComSpec. In this case the ReceiverComSpec overrides this optional specification.
firstTimeout	TimeValue	0..1	attr	<ul style="list-style-type: none"> <li>ISignalPort with communicationDirection = in: Optional first timeout value in seconds for the reception of the ISignal.</li> <li>ISignalPort with communicationDirection = out: Optional first timeout value in seconds for transmission deadline monitoring.</li> </ul>
handleInvalid	<a href="#">HandleInvalidEnum</a>	0..1	attr	This attribute defines how invalidation is applied to the ISignals received in the context of this ISignalPort.
timeout	TimeValue	0..1	attr	<ul style="list-style-type: none"> <li>ISignalPort with communicationDirection = in: Optional timeout value in seconds for the reception of the ISignal. The attribute value is used to configure the Com Timeout in the COM module. The RTE ignores this attribute. The timeout can also be specified with the NonqueuedReceiverComSpec.aliveTimeout attribute. If a full DataMapping exists for the SystemSignal and the value is available in the configured ReceiverComSpec, then the timeout value in the ReceiverComSpec overrides this optional timeout specification during the creation of the Base Ecu Configuration of the COM module.</li> <li>ISignalPort with communicationDirection = out: Optional timeout value in seconds for the transmission of the ISignal. The attribute value is used to configure the ComTimeout in the COM module. The RTE ignores this attribute. The timeout can also be specified with the ender ComSpec.transmissionAcknowledge.timeout attribute. If a full DataMapping exists for the SystemSignal and the</li> </ul>



△

Class	ISignalPort		
			<p>△</p> <p>value is available in the configured SenderComSpec, then the timeout value in the SenderComSpec overrides this optional timeout specification during the creation of the Base Ecu Configuration of the COM module.</p> <p>This attribute can be used in the following cases:</p> <ul style="list-style-type: none"> <li>• legacy signal where the System Description doesn't use a complete Software Component Description (VFB View) and where the Data Mapping is missing.</li> <li>• bus monitoring use cases in which the Data Mapping is ignored.</li> </ul>

**Table 6.5: ISignalPort**

Enumeration	HandleInvalidEnum
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Communication
<b>Note</b>	Strategies of handling the reception of invalidValue.
<b>Aggregated by</b>	InvalidationPolicy.handleInvalid, <a href="#">ISignalPort.handleInvalid</a>
<b>Literal</b>	<b>Description</b>
dontInvalidate	Invalidation is switched off. <b>Tags:</b> atp.EnumerationLiteralIndex=0
external Replacement	Replace a received invalidValue. The replacement value is sourced from the aggregation in the role replaceWith. <b>Tags:</b> atp.EnumerationLiteralIndex=1
keep	The application software is supposed to handle signal invalidation on RTE API level either by Data ReceiveErrorEvent or check of error code on read access. <b>Tags:</b> atp.EnumerationLiteralIndex=2
replace	Replace a received invalidValue. The replacement value is specified by the initValue. <b>Tags:</b> atp.EnumerationLiteralIndex=3

**Table 6.6: HandleInvalidEnum**

**[TPS\_SYST\_01059] Relationship between [FrameTriggering](#) and [CommConnectorPort](#)** [For the reference between [FrameTriggering](#) and [FramePort](#) two approaches are supported:

- One to One relationship between [FrameTriggering](#) and [FramePort](#) per [EcuInstance](#)
- One [FramePort](#) per [communicationDirection](#) per [EcuInstance](#) exists and is referenced by all applicable [FrameTriggerings](#) (n to 1).

]()

**[TPS\_SYST\_01060] Relationship between [PduTriggering](#) and [CommConnectorPort](#)** [For the reference between [PduTriggering](#) and [IPduPort](#) two approaches are supported:

- One to One relationship between [PduTriggering](#) and [IPduPort](#) per [EcuInstance](#)

- One `IPduPort` per `communicationDirection` per `EcuInstance` exists and is referenced by all applicable `PduTriggerings` (n to 1).

]()

**[TPS\_SYST\_01061] Relationship between `ISignalTriggering` and `CommConnectorPort`** [For the reference between `ISignalTriggering` and `ISignalPort` two approaches are supported:

- One to One relationship between `ISignalTriggering` and `ISignalPort` per `EcuInstance`
- One `ISignalPort` per `communicationDirection` per `timeout` per `EcuInstance` exists and is referenced by all applicable `PduTriggerings` (n to 1).

]()

**[TPS\_SYST\_02208] `ISignalPort.handleInvalid` defines the reception invalidation behavior** [The attribute `ISignalPort.handleInvalid` defines the behavior during signal reception if the respective `ISignal`'s `invalidValue` is received. The `ISignal` is assigned to this `ISignalPort` via the `ISignalTriggering`.]()

**[TPS\_SYST\_02209] Not defined `ISignalPort.handleInvalid` behavior** [If the attribute `ISignalPort.handleInvalid` is not defined then the value `dontInvalidate` shall be assumed.]()

**[constr\_5053] Existence of `ISignalPort.handleInvalid`** [If the `ISignalPort` has a `networkRepresentationProps.invalidValue` defined then the `ISignalPort.communicationDirection` shall equal `in`.]()

**[constr\_5054] `externalReplacement` not applicable for `ISignalPort.handleInvalid`** [In the context of `ISignalPort.handleInvalid` the value `externalReplacement` shall not be used.]()

The action `externalReplacement` can only be implemented by the RTE. Thus it is required to have a ComSpec definition.

**[TPS\_SYST\_02210] Data invalidation in case the `dataTypePolicy` is set to `override` or `legacy`** [If the `dataTypePolicy` of an `ISignal` is set to `override` or `legacy`, the `ISignalPort.handleInvalid` attribute defines the data invalidation.]()

## 6.2 ISignals

`SystemSignals` can be defined independently of `CommunicationClusters` and are representing the `VariableDataPrototypes`, `ArgumentDataPrototypes`, `Triggers` and `ModeDeclarationGroupPrototypes` in the communication description.

The RTE supports a "signal fan-out" where the same signal (System Signal) is sent in different `IPdus` to multiple receivers. The Pdu Router supports the "PDU fan-out" where the same `IPdu` is sent to multiple destinations.

To support the "signal fan-out" `ISignals` and `ISignalGroups` are introduced. An `ISignal(ISignalGroup)` represents the `SystemSignal(SystemSignalGroup)` of the Interaction Layer.

In case of "signal fan-out", several `ISignals` in different `IPdus` refer to the same `SystemSignal`. The "Signal fan-out" will be executed by the RTE. `ISignals` describe the Interface between the precompile configured RTE and the potentially postbuild configured Com Stack.

The `ISignalToIPduMapping` element describes the mapping of `ISignals` to `ISignalIPdus` and defines the position of an `ISignal` within an `ISignalIPdu`.

**[constr\_3009] Overlapping of `ISignals` is prohibited** [`ISignals` mapped to an `ISignalIPdu` shall not overlap.]()

**[constr\_5253] Value range of `ISignal.length`** [The value of `ISignal.length` shall be in the range of 0..34359738360 Bits.]()

**[constr\_3010] `ISignalIPdu` length shall not be exceeded** [The combined length of all `ISignals` and `updateIndicationBitPositions` that are mapped into an `ISignalIPdu` shall not exceed the defined `Pdu length`.]()

**[constr\_3011] Overlapping of `updateIndicationBits` of `ISignals` is prohibited** [The `updateIndicationBitPosition` for an `ISignal` in an `ISignalIPdu` shall not overlap with other `updateIndicationBitPositions` or `ISignal` locations.]()

**[TPS\_SYST\_01062] Network representation of an `ISignal`** [With the aggregation of `SwDataDefProps` in the role `networkRepresentationProps` the actual representation of the `ISignal` on the network can be specified.](*RS\_SYST\_00047*)

**[TPS\_SYST\_01063] Context of network representation of an `ISignal`** [The `dataTypePolicy` defines from which context the network representation specification shall be taken.](*RS\_SYST\_00001, RS\_SYST\_00047*)

For an alternative network representation it is important to define an alternative `SwDataDefProps` especially `SwBaseType` defining alternative encoding (e.g. from float in PortInterface to integer on bus).



[constr\_3060] Allowed Attributes for `networkRepresentationProps` and `physicalProps` [

Attributes of SwDataDefProps	SystemSignal.physicalProps	ISignal.networkProps
<code>additionalNativeTypeQualifier</code>	NA	NA
<code>annotation</code>	NA	NA
<code>baseType</code>	NA	D
<code>baseType.category</code>	NA	M
<code>BaseTypeDirectDefinition.baseTypeEncoding</code>	NA	D
<code>BaseTypeDirectDefinition.byteOrder</code>	NA	NA
<code>BaseTypeDirectDefinition.baseTypeSize</code>	NA	0..1
<code>BaseTypeDirectDefinition.memAlignment</code>	NA	NA
<code>BaseTypeDirectDefinition.nativeDeclaration</code>	NA	NA
<code>compuMethod</code>	D	I
<code>dataConstr</code>	D	M
<code>displayFormat</code>	D	M
<code>implementationDataType</code>	NA	NA
<code>invalidValue</code>	NA	D
<code>stepSize</code>	NA	NA
<code>swAddrMethod</code>	NA	NA
<code>swAlignment</code>	NA	NA
<code>swBitRepresentation</code>	NA	NA
<code>swCalibrationAccess</code>	NA	NA
<code>swCalprmAxisSet</code>	NA	NA
<code>swComparisonVariable</code>	NA	NA
<code>swDataDependency</code>	NA	NA
<code>swHostVariable</code>	NA	NA
<code>swImplPolicy</code>	NA	NA
<code>swIntendedResolution</code>	NA	NA
<code>swInterpolationMethod</code>	NA	NA
<code>swIsVirtual</code>	NA	NA
<code>swPointerTargetProps</code>	NA	NA
<code>swRecordLayout</code>	NA	NA
<code>swRefreshTiming</code>	NA	NA
<code>swTextProps</code>	NA	NA
<code>swValueBlockSize</code>	NA	NA
<code>unit</code>	D	M
<code>valueAxisDataType</code>	NA	NA

]()

The following settings apply in [constr\_3060]:

**D Define** the attribute independent from settings to the left.

**I Inherit** the definition from the left for usage in the scope of this element. This means that the information is taken over in the respective context without further ARXML configuration. The attribute of the SwDataDefProps shall not exist on the right side.

**NA** Attribute is **not applicable** for usage in the scope of this element.



**M** Attribute is **meaningless** in the scope of this element. As it was allowed in previous versions, declaring it as Not Applicable (NA) would break compatibility. Tools shall ignore such an attribute without a warning.

In case that the System Description doesn't use a complete Software Component Description (VFB View) the `physicalProps` and `networkRepresentationProps` are used to configure the Data Semantics.

The `networkRepresentationProps` contains a reference to the `SwBaseType`. This reference can be used for the derivation of the `ComSignalType` in the AUTOSAR Com Configuration.

Please note that a `DataTransformation` that is based on the network representation is explained in more detail in chapter 7.3.2.2.1. This chapter also contains an explanation that describes a data conversion based on `CompuMethods` (see section 7.3.2.2.1.1 for more details).

**[TPS\_SYST\_02001] `networkRepresentationProps` are mandatory in case the `dataTypePolicy` is set to `override` or `legacy`** [If the `dataTypePolicy` of an `ISignal` is set to `override` or `legacy`, the `networkRepresentationProps` for the respective `ISignal` have to be specified.]()

**[TPS\_SYST\_02006] Usage of `networkRepresentationFromComSpec`** [If the `networkRepresentationFromComSpec` is used either the `SwDataDefProps` in the role `networkRepresentation` aggregated by the `SenderComSpec` or `ReceiverComSpec` shall exist or the `ImplementationDataType` shall exist.]()

Please note that some `categorys` of `CompuMethod` cannot be successfully converted to A2L [21] because A2L does not provide an equivalent semantics that comes close to the respective AUTOSAR semantics.

A prominent example for such a case is a `CompuMethod` of category `SCALE_LINEAR_AND_TEXTTABLE` that actually has more than one linear interval and a `texttable` part.

**[TPS\_SYST\_02079] Identification of `ImplementationDataType` for a given `ISignal` in an Ecu Extract** [

1. From the `ISignal` go to the referenced `SystemSignal`
2. Find all `DataMappings` that refer to the `SystemSignal`
3. For all `VariableDataPrototypes` referenced by the applicable `DataMappings`
  - (a) If the `VariableDataPrototype` is typed by an `ApplicationDataType` and belongs to a `CompositionSwComponentType` then for all `DataTypeMappingSets` referenced by the `CompositionSwComponentType` find the `DataTypeMap` that refers to this `ApplicationDataType`. The `DataTypeMap` also refers to the wanted `ImplementationDataType`.

- (b) If the `VariableDataPrototype` is typed by an `ApplicationDataType` and belongs to an `AtomicSwComponentType` then for all `DataTypeMappingSets` referenced by the `InternalBehavior` of the `AtomicSwComponentType` find the `DataTypeMap` that refers to this `ApplicationDataType`. The `DataTypeMap` also refers to the wanted `ImplementationDataType`.
- (c) If the `VariableDataPrototype` is typed by an `ImplementationDataType` then the `ImplementationDataType` is the wanted one.

]()

**[TPS\_SYST\_02076] `networkRepresentationProps` in case the `dataTypePolicy` is set to `transformingISignal`** [If the value of `ISignal.dataTypePolicy` is set to `transformingISignal` then `ISignal.networkRepresentationProps` shall be ignored.]()

**[constr\_3199] `ISignal` that has `dataTypePolicy` set to `transformingISignal` shall reference a `DataTransformation`** [In a complete model every `ISignal` that has `dataTypePolicy` set to `transformingISignal` shall reference a `DataTransformation`.]()

**[TPS\_SYST\_01065] Mapping onto the `ComSignalType` enumeration** [The mapping of `baseTypeSize`, `baseTypeEncoding`, `ISignal.iSignalType` and `SystemSignal.dynamicLength` onto the `ComSignalType` enumeration is described in [Table 6.7.](#)] ([RS\\_SYST\\_00029](#))

In other words [Table 6.7](#) focuses only on the derivation of the `ComSignalType`. This table shall not be taken as a source to derive requirements on the modeling of `SwBaseTypes` used on the level of the RTE.

<i>BaseTypeEncoding</i>	<i>BaseTypeSize</i>	<i>ISignal.iSignalType</i>	<i>SystemSignal.dynamicLength</i>	<i>ComSignalType</i>
2C	8 Bits	primitive	not applicable	SINT8, ComBitSize derived from <code>ISignal.length</code>
2C	not available	primitive	not applicable	SINT8 if <code>ISignal.length &lt;= 8</code> . ComBitSize derived from <code>ISignal.length</code>
2C	16 Bits	primitive	not applicable	SINT16, ComBitSize derived from <code>ISignal.length</code>
2C	not available	primitive	not applicable	SINT16 if <code>ISignal.length &gt; 8</code> and <code>&lt;= 16</code> . ComBitSize derived from <code>ISignal.length</code>
2C	32 Bits	primitive	not applicable	SINT32, ComBitSize derived from <code>ISignal.length</code>





<i>BaseTypeEncoding</i>	<i>BaseTypeSize</i>	<i>ISignal.iSignalType</i>	<i>SystemSignal.dynamicLength</i>	<i>ComSignalType</i>
2C	not available	primitive	not applicable	SINT32 if <i>ISignal.length</i> > 16 and <= 32. ComBitSize derived from <i>ISignal.length</i>
2C	64 Bits	primitive	not applicable	SINT64, ComBitSize derived from <i>ISignal.length</i>
2C	not available	primitive	not applicable	SINT64 if <i>ISignal.length</i> > 32 and <= 64. ComBitSize derived from <i>ISignal.length</i>
NONE	8 Bits	primitive	not applicable	UINT8, ComBitSize derived from <i>ISignal.length</i>
NONE	not available	primitive	not applicable	UINT8 if <i>ISignal.length</i> <= 8. ComBitSize derived from <i>ISignal.length</i>
NONE	16 Bits	primitive	not applicable	UINT16, ComBitSize derived from <i>ISignal.length</i>
NONE	not available	primitive	not applicable	UINT16 if <i>ISignal.length</i> > 8 and <= 16. ComBitSize derived from <i>ISignal.length</i>
NONE	32 Bits	primitive	not applicable	UINT32, ComBitSize derived from <i>ISignal.length</i>
NONE	not available	primitive	not applicable	UINT32 if <i>ISignal.length</i> > 16 and <= 32. ComBitSize derived from <i>ISignal.length</i>
NONE	64 Bits	primitive	not applicable	UINT64, ComBitSize derived from <i>ISignal.length</i>
NONE	not available	primitive	not applicable	UINT64 if <i>ISignal.length</i> > 32 and <= 64. ComBitSize derived from <i>ISignal.length</i>
IEEE754	32 Bits	primitive	not applicable	FLOAT32, ComBitSize derived from <i>ISignal.length</i>
IEEE754	not available	primitive	not applicable	FLOAT32, <i>ISignal.length</i> = 32. ComBitSize derived from <i>ISignal.length</i>
IEEE754	64 Bits	primitive	not applicable	FLOAT64, ComBitSize derived from <i>ISignal.length</i>
IEEE754	not available	primitive	not applicable	FLOAT64, <i>ISignal.length</i> = 64. ComBitSize derived from <i>ISignal.length</i>





<i>BaseTypeEncoding</i>	<i>BaseTypeSize</i>	<i>ISignal.iSignalType</i>	<i>SystemSignal.dynamicLength</i>	<i>ComSignalType</i>
NONE, ISO-8859-1, ISO-8859-2, WINDOWS-1252, UTF-8, UTF-16, UCS-2	8 Bits	array	false	UINT8_N, ComSignal-Length derived from <a href="#">ISignal.length</a>
NONE, ISO-8859-1, ISO-8859-2, WINDOWS-1252, UTF-8, UTF-16, UCS-2	not available	array	false	UINT8_N, ComSignal-Length derived from <a href="#">ISignal.length</a>
NONE, ISO-8859-1, ISO-8859-2, WINDOWS-1252, UTF-8, UTF-16, UCS-2	8 Bits	array	true	UINT8_DYN, ComSignal-Length derived from <a href="#">ISignal.length</a>
NONE, ISO-8859-1, ISO-8859-2, WINDOWS-1252, UTF-8, UTF-16, UCS-2	not available	array	true	UINT8_DYN, ComSignal-Length derived from <a href="#">ISignal.length</a>
BOOLEAN	ignored	primitive	not applicable	BOOLEAN

**Table 6.7: SwBaseType to ComSignalType Mapping**

The setting "not applicable" for an Attribute in [Table 6.7](#) means that no value shall be set for this Attribute. The setting "ignored" for an Attribute in [Table 6.7](#) means than any value is accepted for this Attribute, but the value will be ignored in creation of the ECU configuration value file.

**[constr\_3258] Restriction on [ISignal.length](#) in case [iSignalType](#) is set to [array](#)** [If [ISignal.iSignalType](#) is set to [array](#) then [ISignal.length](#) shall be a multiple of 8.]()

**[TPS\_SYST\_02111] [VariableDataPrototype](#) in case [ISignal.iSignalType](#) is set to [array](#)** [If [ISignal.iSignalType](#) is set to [array](#) the corresponding [VariableDataPrototype](#) shall boil down to an Array according to [\[TPS\\_SYST\\_02083\]](#), [\[TPS\\_SYST\\_02084\]](#), [\[TPS\\_SYST\\_02085\]](#) and [\[TPS\\_SYST\\_02089\]](#).]()

The [invalidValue](#) is aggregated by the [SwDataDefProps](#) element. The [SwDataDefProps](#) and the [SwBaseType](#) classes are described in more detail in the Software Component Template [\[5\]](#).

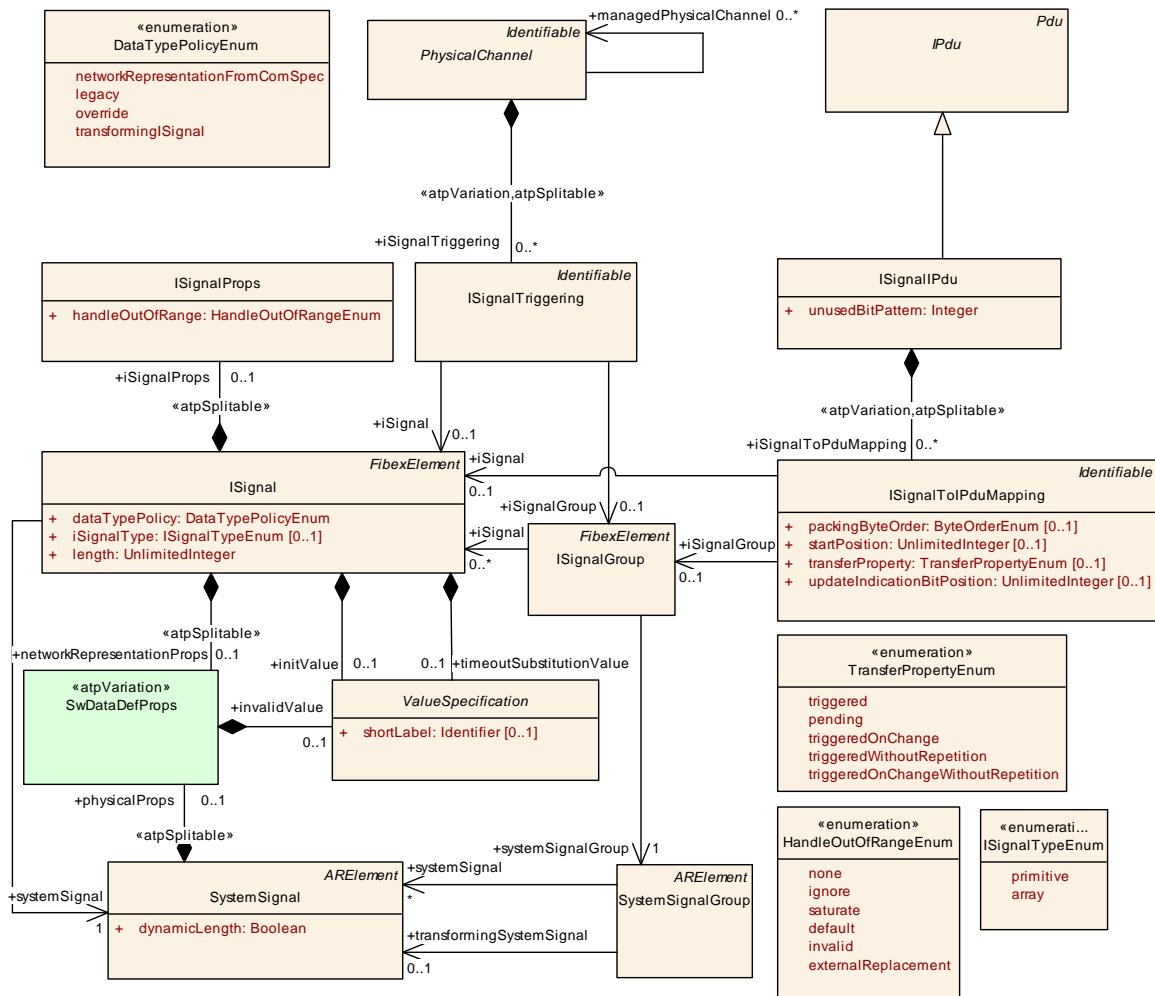


Figure 6.4: ISignals and the mapping into IPdus (FibexCore: SignalOverview)

The configuration of the COM Module for atomic signals can largely be derived from the System Template.

**[TPS\_SYST\_01066] Derivation of Tx COM Signals** [A ComSignal shall be defined in the COM module configuration for each **ISignalToIPduMapping** that is aggregated by **ISignalIPdu** that in turn is referenced by a **PduTriggering** that in turn references an **IPduPort** where the **communicationDirection** is set to **out** of the regarded ECU.

Exception: If the **ISignal** is part of a Signal Gateway relation (**ISignalMapping.targetSignal** pointing to an **ISignalTriggering** referencing this **ISignal**) the creation of a ComSignal is not mandated if

- the **ISignal** does not point to a **SystemSignal** that is referenced by a **DataMapping** (application does not send the gatewayed signal content) or
- the **ISignal** points to a **SystemSignal** that is referenced by a **DataMapping** in which the **RPortPrototype** is used as the context element and the destination **ISignalTriggering.iSignalPort.communicationDirection** equals **out** (application sends the gatewayed signal content) or

- the `ISignalToIPduMapping.iSignal.dataTypePolicy` is set to legacy.

In these cases the configuration of `ComGwMapping` can be done by means of `ComGwSourceDescription` and `ComGwDestinationDescription`. However it is possible to create `ComSignals` for the `ComGwSignal` approach as well (i.e., even if the application does not require access to the respective `SystemSignal`).]()

**[TPS\_SYST\_01067] Derivation of Rx COM Signals** [A `ComSignal` shall be defined in the COM module configuration for each `ISignalToIPduMapping` that is aggregated by `ISignalIPdu` that in turn is referenced by a `PduTriggering` that in turn references an `IPduPort` where the `communicationDirection` is set to `in` in the regarded ECU.

Exception: If the `ISignal` is part of a Signal Gateway relation (`ISignalMapping.sourceSignal` pointing to an `ISignalTriggering` referencing this `ISignal`) the creation of a `ComSignal` is not mandated if


- the `ISignal` does not point to a `SystemSignal` that is referenced by a `DataMapping` (application is not interested in the gatewayed signal content) or
- the `ISignal` points to a `SystemSignal` that is referenced by a `DataMapping` in which the `PPortPrototype` is used as the context element and source `ISignalTriggering.iSignalPort.communicationDirection` equals `in` (application is not interested in the gatewayed signal content) or
- the `ISignalToIPduMapping.iSignal.dataTypePolicy` is set to legacy.

In these cases the configuration of `ComGwMapping` can be done by means of `ComGwSourceDescription` and `ComGwDestinationDescription`. However it is possible to create `ComSignals` for the `ComGwSignal` approach as well (i.e., even if the application does not require access to the respective `SystemSignal`).]()

To support the AUTOSAR concept of composite data types the AUTOSAR COM layer provides signal groups. Every record or array element of a composite data type requires a `SystemSignal` for the transmission. But the RTE has to guarantee the consistent transmission of data.

**[TPS\_SYST\_01153] Atomic transport of `SystemSignalGroups`** [A `SystemSignalGroup` shall be transmitted and received consistently; therefore it provides data consistency for composite data types.]()

A `SystemSignalGroup` refers to a set of `SystemSignals` that shall always be kept together in a common `IPdu`. An `ISignalGroup` represents a `SystemSignalGroup` of the Interaction Layer. In the case of "signal fan-out", several `ISignalGroups` refer to the same `SystemSignalGroup`.

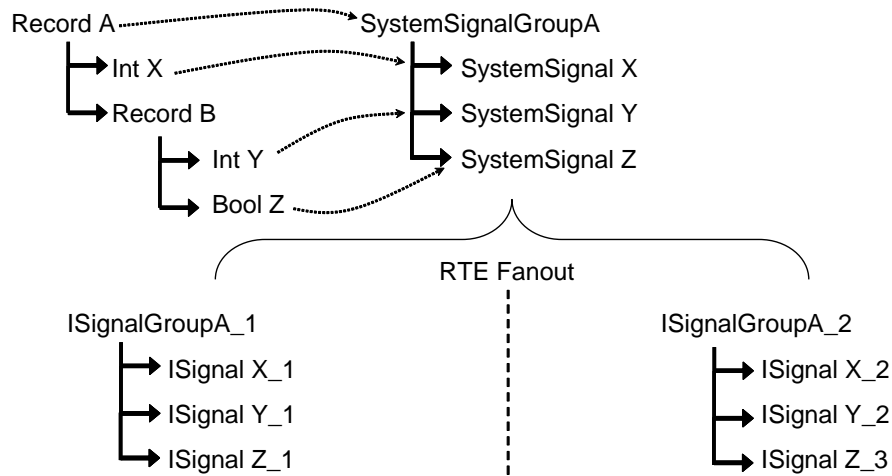

**Figure 6.5: ISignal example**

The example in Figure 6.5 shows the usage of `ISignalGroups` and `ISignals`. In this example a record is mapped to a `SystemSignalGroup`. All `ApplicationRecordElements` with `ApplicationPrimitiveDataType` are mapped to individual `SystemSignals`. If the same `SystemSignalGroup` is sent to different receivers (RTE Fanout) then two different `ISignalGroups` are created. For each `SystemSignal` within the `SystemSignalGroup` an `ISignal` is created. The different `ISignals` of the same `SystemSignal` can have different network representations.

**[constr\_3094] Consistent `ISignalPort.communicationDirection` for `ISignalTriggerings` of `ISignalGroups` and contained `ISignals`** [In case the `ISignals` contained in an `ISignalGroup` are referenced by an `ISignalTriggering`, the `communicationDirection` of the `ISignalPort` referenced by the `ISignal`'s `ISignalTriggering` shall be identical to the `communicationDirection` of the `ISignalPort` referenced by the containing `ISignalGroup`'s `ISignalTriggering`.]()

Please note that not all `ISignals` that are part of the `ISignalGroup` need to have a reference to an `ISignalPort` via an `ISignalTriggering` as described by [TPS\_SYST\_02106].

**[TPS\_SYST\_01157] Allowed usage of attributes for `ISignals`, `ISignalGroups` and `GroupSignals`** [Table 6.8 shows attributes that may be used to configure `ISignals` in different roles (`ISignals` that are not part of an `ISignalGroup` and `ISignals` that are part of an `ISignalGroup`) and `ISignalGroups`.]()

Attributes	ISignal	ISignalGroup	GroupSignal
<code>startPosition</code>	1	NA	1
<code>updateIndicationBitPosition</code>	0..1	0..1	NA
<code>transferProperty</code>	0..1	0..1	0..1
<code>packingByteOrder</code>	1	NA	1
<code>dataFilter</code>	0..1	NA	0..1

**Table 6.8: Allowed usage of attributes for `ISignals`, `ISignalGroups` and `GroupSignals`**



**[constr\_3067] `initValue` defined in the context of `ISignal`** [The definition of an `initValue` in the context of an `ISignal` shall only be a `NumericalValueSpecification`, `TextValueSpecification` or `ArrayValueSpecification` that aggregates elements of type `NumericalValueSpecification` or `TextValueSpecification`.]()

Please note that for `ISignals` that are referencing a `SystemSignal` with a `CompuMethod` of category `TEXTTABLE` or `BITFIELD_TEXTTABLE` the **[constr\_3067]** is further restricted by **[advisory\_03000]** for the definition of the `initValue`. **[advisory\_03000]** corresponds to the **[constr\_1225]** that is defined in the Software Component Template **[5]**.

**[advisory\_03000] `initValue` defined in the context of `ISignal` that references a `SystemSignal` with a `CompuMethod` of category `TEXTTABLE` or `BITFIELD_TEXTTABLE`** [If an `ISignal` references a `SystemSignal` that in turn aggregates `physicalProps` with a `CompuMethod` of category `TEXTTABLE` or `BITFIELD_TEXTTABLE` then the definition of an `initValue` of the `ISignal` should be a `TextValueSpecification`. In this case the value provided should match to the applicable text values (`vt`, `shortLabel`, `symbol`, where the preference rule defined in **[TPS\_SWCT\_01696]** is applied) defined by the applicable `CompuScales`. This rule shall be imposed at the time when the System Description is complete.]()

**[constr\_3437] `invalidValue` defined in the context of `ISignal`** [The definition of `SwDataDefProps.invalidValue` aggregated by an `ISignal` in the role `networkRepresentationProps` shall only be a `NumericalValueSpecification`, `TextValueSpecification` or `ArrayValueSpecification` that aggregates elements of type `NumericalValueSpecification` or `TextValueSpecification`.]()

Please note that for `ISignals` that are referencing a `SystemSignal` with a `CompuMethod` of category `category` `TEXTTABLE` or `BITFIELD_TEXTTABLE` the **[constr\_3067]** is further restricted by **[advisory\_03001]** for the definition of the `invalidValue`. **[advisory\_03001]** corresponds to the **[constr\_10196]** that is defined in the Software Component Template **[5]**.

**[advisory\_03001] `invalidValue` defined in the context of `ISignal` that references a `SystemSignal` with a `CompuMethod` of category `TEXTTABLE` or `BITFIELD_TEXTTABLE`** [If an `ISignal` references a `SystemSignal` that in turn aggregates `physicalProps` with a `CompuMethod` of category `TEXTTABLE` or `BITFIELD_TEXTTABLE` then the definition of an `invalidValue` of the `ISignal` should be a `TextValueSpecification` if the value fits into the intervals defined by the `CompuMethod`. In this case the value provided should match to one of the applicable text values (`vt`, `shortLabel`, `symbol`, where the preference rule defined in **[TPS\_SWCT\_01696]** is applied) defined by the applicable `CompuScales`. This rule shall be imposed at the time when the System Description is complete.]()

**[constr\_3438] `timeoutSubstitutionValue` defined in the context of `ISignal`** [The definition of an `timeoutSubstitutionValue` in the context of an `ISignal` shall only be a `NumericalValueSpecification`, `TextValueSpecification` or



`ArrayValueSpecification` that aggregates elements of type `NumericalValueSpecification` or `TextValueSpecification`.]()

Please note that for `ISignals` that are referencing a `SystemSignal` with a `CompuMethod` of category `category` `TEXTTABLE` or `BITFIELD_TEXTTABLE` the [`constr_3438`] is further restricted by [`advisory_03002`] for the definition of the `timeoutSubstitutionValue`. [`advisory_03002`] corresponds to the [`constr_1225`] that is defined in the Software Component Template [5].

**[`advisory_03002`] `timeoutSubstitutionValue` defined in the context of `ISignal` that references a `SystemSignal` with a `CompuMethod` of category `TEXTTABLE` or `BITFIELD_TEXTTABLE`** [If an `ISignal` references a `SystemSignal` that in turn aggregates `physicalProps` with a `CompuMethod` of category `TEXTTABLE` or `BITFIELD_TEXTTABLE` then the definition of an `timeoutSubstitutionValue` of the `ISignal` should be a `TextValueSpecification`. In this case the value provided should match to one of the applicable text values (`vt`, `shortLabel`, `symbol`, where the preference rule defined in [`TPS_SWCT_01696`] is applied) defined by the applicable `CompuScales`. This rule shall be imposed at the time when the System Description is complete.]()

**[`TPS_SYST_02012`] `initValue` and `invalidValue` represent internal values** [The `initValue` and `invalidValue` aggregated by the `networkRepresentationProps` shall represent the internal values.]()

**[`TPS_SYST_02110`] Default behavior for `ISignal.iSignalType`** [In case `ISignal.iSignalType` is not defined the value "primitive" shall be assumed.]()

**[`TPS_SYST_02144`] `ComTimeoutSubstitution` does not apply for signal gateway operation** [The specification of `ComTimeoutSubstitution` by defining the `ISignal.timeoutSubstitutionValue` does not apply for signal gateway operation. Only when the `ISignal` is processed for an upper layer the `ComTimeoutSubstitution` is actually performed.]()

Note: Since an `ISignal` may be candidate for both - local reception and gateway operation - a definition of `ISignal.timeoutSubstitutionValue` is valid on `ISignals` which are defined for gateway operation.

<b>Class</b>	<b>ISignal</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	<p>Signal of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal is sent in different <code>SignalIPdus</code> to multiple receivers.</p> <p>To support the RTE "signal fan-out" each <code>SignalIPdu</code> contains <code>ISignals</code>. If the same System Signal is to be mapped into several <code>SignalIPdus</code> there is one <code>ISignal</code> needed for each <code>ISignalToIPduMapping</code>.</p> <p><code>ISignals</code> describe the Interface between the Precompile configured RTE and the potentially Postbuild configured Com Stack (see ECUC Parameter Mapping).</p> <p>In case of the <code>SystemSignalGroup</code> an <code>ISignal</code> shall be created for each <code>SystemSignal</code> contained in the <code>SystemSignalGroup</code>.</p> <p><b>Tags:</b><code>atp.recommendedPackage=ISignals</code></p>





<b>Class</b>	<b>ISignal</b>			
<b>Base</b>	<i>ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Aggregated by</b>	<i>ARPackage.element</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
data Transformation	<a href="#">DataTransformation</a>	0..1	ref	Optional reference to a DataTransformation which represents the transformer chain that is used to transform the data that shall be placed inside this ISignal.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=dataTransformation.dataTransformation, dataTransformation.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime
dataTypePolicy	<a href="#">DataTypePolicyEnum</a>	1	attr	With the aggregation of SwDataDefProps an ISignal specifies how it is represented on the network. This representation follows a particular policy. Note that this causes some redundancy which is intended and can be used to support flexible development methodology as well as subsequent integrity checks.  If the policy "networkRepresentationFromComSpec" is chosen the network representation from the ComSpec that is aggregated by the PortPrototype shall be used. If the "override" policy is chosen the requirements specified in the PortInterface and in the ComSpec are not fulfilled by the networkRepresentationProps. In case the System Description doesn't use a complete Software Component Description (VFB View) the "legacy" policy can be chosen.
initValue	<a href="#">ValueSpecification</a>	0..1	aggr	Optional definition of a ISignal's initValue in case the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy system signals.  This value can be used to configure the Signal's "Init Value".  If a full DataMapping exist for the SystemSignal this information may be available from a configured Sender ComSpec and ReceiverComSpec. In this case the initvalues in SenderComSpec and/or ReceiverComSpec override this optional value specification. Further restrictions apply from the RTE specification.
iSignalProps	<a href="#">ISignalProps</a>	0..1	aggr	Additional optional ISignal properties that may be stored in different files.  <b>Stereotypes:</b> atpSplittable <b>Tags:</b> atp.Splitkey=iSignalProps
iSignalType	<a href="#">ISignalTypeEnum</a>	0..1	attr	This attribute defines whether this iSignal is an array that results in a UINT8_N / UINT8_DYN ComSignalType in the COM configuration or a primitive type.
length	UnlimitedInteger	1	attr	Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseType as used in the RTE. Indicates maximum size for dynamic length signals.  The ISignal length of zero bits is allowed.





Class	ISignal			
network Representation Props	<a href="#">SwDataDefProps</a>	0..1	aggr	<p>Specification of the actual network representation. The usage of SwDataDefProps for this purpose is restricted to the attributes compuMethod and baseType. The optional baseType attributes "memAllignment" and "byteOrder" shall not be used.</p> <p>The attribute "dataTypePolicy" in the SystemTemplate element defines whether this network representation shall be ignored and the information shall be taken over from the network representation of the ComSpec.</p> <p>If "override" is chosen by the system integrator the network representation can violate against the requirements defined in the PortInterface and in the network representation of the ComSpec.</p> <p>In case that the System Description doesn't use a complete Software Component Description (VFB View) this element is used to configure "ComSignalDataInvalid Value" and the Data Semantics.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b>atp.Splitkey=networkRepresentationProps</p>
systemSignal	<a href="#">SystemSignal</a>	1	ref	Reference to the System Signal that is supposed to be transmitted in the ISignal.
timeout Substitution Value	<a href="#">ValueSpecification</a>	0..1	aggr	Defines and enables the ComTimeoutSubstitution for this ISignal.
transformation ISignalProps	<a href="#">TransformationISignal Props</a>	*	aggr	<p>A transformer chain consists of an ordered list of transformers. The ISignal specific configuration properties for each transformer are defined in the TransformationISignalProps class. The transformer configuration properties that are common for all ISignals are described in the TransformationTechnology class.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b>atp.Splitkey=transformationISignalProps</p>

**Table 6.9: ISignal**

Enumeration	DataTypePolicyEnum
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DataMapping
<b>Note</b>	This class lists the supported DataTypePolicies.
<b>Aggregated by</b>	<a href="#">ISignal.dataTypePolicy</a>
<b>Literal</b>	<b>Description</b>
legacy	<p>In case the System Description doesn't use a complete Software Component Description (VFB View) this value can be chosen. This supports the inclusion of legacy signals.</p> <p>The aggregation of SwDataDefProps shall be used to configure the "ComSignalDataInvalidValue" and the Data Semantics.</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=0</p>
network Representation FromComSpec	<p>Ignore any networkRepresentationProps of this ISignal and use the networkRepresentation from the ComSpec.</p> <p>Please note that the usage does not imply the existence of the SwDataDefProps in the role network Representation aggregated by the SenderComSpec or ReceiverComSpec if an ImplementationData Type is defined.</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=1</p>





Enumeration	DataPolicyEnum
override	If this value is chosen the requirements specified in the ComSpec (networkRepresentationFromComSpec) are not fulfilled by the aggregated SwDataDefProps. In this case the networkRepresentation is specified by the aggregated swDataDefProps. <b>Tags:</b> atp.EnumerationLiteralIndex=2
transformingISignal	This literal indicates that a transformer chain shall be used to communicate the ISignal as UINT8_N over the bus. <b>Tags:</b> atp.EnumerationLiteralIndex=4

**Table 6.10: DataPolicyEnum**

Enumeration	ISignalTypeEnum
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	This enumeration defines ISignal types that are used for derivation of the ComSignalType in the COM configuration.
<b>Aggregated by</b>	<a href="#">ISignal.ISignalType</a>
<b>Literal</b>	<b>Description</b>
array	ISignal shall be interpreted as an array (UINT8_N, UINT8_DYN) <b>Tags:</b> atp.EnumerationLiteralIndex=0
primitive	ISignal shall be interpreted as a primitive type (e.g. UINT_8, SINT_32) <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.11: ISignalTypeEnum**

Class	ISignalProps			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Additional ISignal properties that may be stored in different files.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">ISignal.ISignalProps</a>			
Attribute	Type	Mult.	Kind	Note
handleOutOfRange	<a href="#">HandleOutOfRangeEnum</a>	1	attr	This attribute defines the outOfRangeHandling for received and sent signals.

**Table 6.12: ISignalProps**

Enumeration	HandleOutOfRangeEnum
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Communication
<b>Note</b>	A value of this type is taken for controlling the range checking behavior of the AUTOSAR RTE.
<b>Aggregated by</b>	<a href="#">ISignalProps.handleOutOfRange</a> , <a href="#">ReceiverComSpec.handleOutOfRange</a> , <a href="#">SenderComSpec.handleOutOfRange</a>
<b>Literal</b>	<b>Description</b>
default	The RTE will use the initValue if the actual value is out of the specified bounds. <b>Tags:</b> atp.EnumerationLiteralIndex=0
externalReplacement	This indicates that the value replacement is sourced from the attribute replaceWith. <b>Tags:</b> atp.EnumerationLiteralIndex=1





Enumeration	HandleOutOfRangeEnum
ignore	The RTE will ignore any attempt to send or receive the corresponding dataElement if the value is out of the specified range. <b>Tags:</b> atp.EnumerationLiteralIndex=2
invalid	The RTE will use the invalidValue if the value is out of the specified bounds. <b>Tags:</b> atp.EnumerationLiteralIndex=3
none	A range check is not required. <b>Tags:</b> atp.EnumerationLiteralIndex=4
saturate	The RTE will saturate the value of the dataElement such that it is limited to the applicable upper bound if it is greater than the upper bound. Consequently, it is limited to the applicable lower bound if the value is less than the lower bound. <b>Tags:</b> atp.EnumerationLiteralIndex=5

**Table 6.13: HandleOutOfRangeEnum**

Class	ISignalGroup			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	<p>SignalGroup of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal Group is sent in different SignalPdu's to multiple receivers.</p> <p>An ISignalGroup refers to a set of ISignals that shall always be kept together. A ISignalGroup represents a COM Signal Group.</p> <p>Therefore it is recommended to put the ISignalGroup in the same Package as ISignals (see atp.recommendedPackage)</p> <p><b>Tags:</b>atp.recommendedPackage=ISignalGroup</p>			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
comBasedSignalGroupTransformation	DataTransformation	0..1	ref	<p>Optional reference to a DataTransformation which represents the transformer chain that is used to transform the data that shall be placed inside this ISignalGroup based on the COMBasedTransformer approach.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=comBasedSignalGroupTransformation.dataTransformation.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime</p>
iSignal	ISignal	*	ref	Reference to a set of ISignals that shall always be kept together.
systemSignalGroup	SystemSignalGroup	1	ref	Reference to the SystemSignalGroup that is defined on VFB level and that is supposed to be transmitted in the ISignalGroup.
transformationISignalProps	TransformationSignalProps	*	aggr	<p>A transformer chain consists of an ordered list of transformers. The ISignalGroup specific configuration properties for each transformer are defined in the TransformationISignalProps class. The transformer configuration properties that are common for all ISignal Groups are described in the TransformationTechnology class.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b>atp.Splitkey=transformationISignalProps</p>

**Table 6.14: ISignalGroup**

<b>Class</b>	<b>SystemSignalGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	<p>A signal group refers to a set of signals that shall always be kept together. A signal group is used to guarantee the atomic transfer of AUTOSAR composite data types.</p> <p>The SystemSignalGroup defines a signal grouping on VFB level. On cluster level the Signal grouping is described by the ISignalGroup element.</p> <p><b>Tags:</b>atp.recommendedPackage=SystemSignalGroups</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
systemSignal	<a href="#">SystemSignal</a>	*	ref	Reference to a set of SystemSignals that shall always be kept together.
transforming SystemSignal	<a href="#">SystemSignal</a>	0..1	ref	Optional reference to the SystemSignal which shall contain the transformed (linear) data.

**Table 6.15: SystemSignalGroup**

<b>Class</b>	<b>ISignalToIPduMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	An ISignalToIPduMapping describes the mapping of ISignals to ISignalIPdus and defines the position of the ISignal within an ISignalIPdu.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ISignalIPdu.iSignalToPduMapping</a> , <a href="#">NmPdu.iSignalToIPduMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
iSignal	<a href="#">ISignal</a>	0..1	ref	<p>Reference to a ISignal that is mapped into the ISignal IPdu.</p> <p>Each ISignal contained in the ISignalGroup shall be mapped into an IPdu by an own ISignalToIPduMapping. The references to the ISignal and to the ISignalGroup in an ISignalToIPduMapping are mutually exclusive.</p>
iSignalGroup	<a href="#">ISignalGroup</a>	0..1	ref	<p>Reference to an ISignalGroup that is mapped into the SignalIPdu. If an ISignalToIPduMapping for an ISignal Group is defined, only the UpdateIndicationBitPosition and the transferProperty is relevant. The startPosition and the packingByteOrder shall be ignored.</p> <p>Each ISignal contained in the ISignalGroup shall be mapped into an IPdu by an own ISignalToIPduMapping. The references to the ISignal and to the ISignalGroup in an ISignalToIPduMapping are mutually exclusive.</p>
packingByte Order	<a href="#">ByteOrderEnum</a>	0..1	attr	<p>This parameter defines the order of the bytes of the signal and the packing into the SignalIPdu. The byte ordering "Little Endian" (MostSignificantByteLast), "Big Endian" (MostSignificantByteFirst) and "Opaque" can be selected. For opaque data endianness conversion shall be configured to Opaque. The value of this attribute impacts the absolute position of the signal into the SignalIPdu (see the startPosition attribute description).</p> <p>For an ISignalGroup the packingByteOrder is irrelevant and shall be ignored.</p>





Class	ISignalToIPduMapping			
startPosition	UnlimitedInteger	0..1	attr	<p>This parameter is necessary to describe the bitposition of a signal within an SignalIPdu. It denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p> <p>Please note that the way the bytes will be actually sent on the bus does not impact this representation: they will always be seen by the software as a byte array.</p> <p>If a mapping for the ISignalGroup is defined, this attribute is irrelevant and shall be ignored.</p>
transferProperty	<a href="#">TransferPropertyEnum</a>	0..1	attr	<p>Defines how the referenced ISignal contributes to the send triggering of the ISignalIPdu.</p>
updateIndicationBitPosition	UnlimitedInteger	0..1	attr	<p>The UpdateIndicationBit indicates to the receivers that the signal (or the signal group) was updated by the sender. Length is always one bit. The UpdateIndicationBitPosition attribute describes the position of the update bit within the SignalIPdu. For Signals of a ISignalGroup this attribute is irrelevant and shall be ignored.</p> <p>Note that the exact bit position of the updateIndicationBitPosition is linked to the value of the attribute packingByteOrder because the method of finding the bit position is different for the values mostSignificantByteFirst and mostSignificantByteLast. This means that if the value of packingByteOrder is changed while the value of updateIndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing ISignalIPdu still undergoes a change.</p> <p>This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p>

**Table 6.16: ISignalToIPduMapping**

**[constr\_5322] Value range of [ISignalToIPduMapping.startPosition](#)** [The value of [ISignalToIPduMapping.startPosition](#) shall be in the range of 0..4294967295 Bits.]()

Please note that the range of [ISignalToIPduMapping.startPosition](#) is restricted by [\[constr\\_5322\]](#) to the max value of 4294967295 Bits because of the defined range of the ComBitPosition parameter that is defined in the COM Configuration [\[22\]](#).

**[constr\_5323] Value range of [ISignalToIPduMapping.updateIndicationBitPosition](#)** [The value of [ISignalToIPduMapping.updateIndicationBitPosition](#) shall be in the range of 0..4294967295 Bits.]()



Please note that the range of `ISignalToIPduMapping.updateIndicationBitPosition` is restricted by `[constr_5323]` to the max value of 4294967295 Bits because of the defined range of the `ComUpdateBitPosition` parameter that is defined in the COM Configuration `[22]`.

**[constr\_3514] No two `ISignalToIPduMappings` shall reference the identical `ISignal`** `[No two ISignalToIPduMappings shall reference the identical ISignal in the role iSignal in the scope of one System.]()`

Enumeration	TransferPropertyEnum
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
Note	Transfer Properties of a Signal.
Aggregated by	<code>ISignalToIPduMapping.transferProperty</code>
Literal	Description
pending	If the signal has the <code>TransferProperty</code> pending, then the function <code>Com_SendSignal</code> shall not perform a transmission of the IPdu associated with the signal. <b>Tags:</b> <code>atp.EnumerationLiteralIndex=0</code>
triggered	The signal in the assigned IPdu is updated and a request for the IPdu's transmission is made. <b>Tags:</b> <code>atp.EnumerationLiteralIndex=1</code>
triggeredOnChange	The signal in the assigned IPdu is updated and a request for the IPdus transmission is made only if the signal value is different from the already stored signal value. <b>Tags:</b> <code>atp.EnumerationLiteralIndex=2</code>
triggeredOnChangeWithoutRepetition	The signal in the assigned IPdu is updated and a request for the IPdus transmission is made only if the signal value is different from the already stored signal value. In the <code>DIRECT/N-TIMES</code> or <code>MIXED</code> transmission mode ( <code>EventControlledTiming</code> ) the IPdu will be transmitted just once without a repetition, independent of the defined <code>NumberOfRepeats</code> . <b>Tags:</b> <code>atp.EnumerationLiteralIndex=3</code>
triggeredWithoutRepetition	The signal in the assigned IPdu is updated and a request for the IPdu's transmission is made. In the <code>DIRECT/N-TIMES</code> or <code>MIXED</code> transmission mode ( <code>EventControlledTiming</code> ) the IPdu will be transmitted just once without a repetition, independent of the defined <code>NumberOfRepeats</code> . <b>Tags:</b> <code>atp.EnumerationLiteralIndex=4</code>

**Table 6.17: TransferPropertyEnum**

**[TPS\_SYST\_02198] Applicable `transferProperty` for `ISignal`** `[If the ISignalToIPduMapping refers to an ISignal in the role iSignal then`

- the `pending transferProperty` does not cause transmission of the `ISignalIPdu` if the `ISignal` is updated.
- if the `ISignalIPdu` has an `EventControlledTiming` aggregated at the `TransmissionModeTiming` then the `transferProperty` values
  - `triggered` and `triggeredWithoutRepetition` do cause immediate transmission of the `ISignalIPdu` if the `ISignal` is updated.
  - `triggeredOnChange` and `triggeredOnChangeWithoutRepetition` do cause immediate transmission of the `ISignalIPdu` if the `ISignal` is updated and has changed.

}]()



**[constr\_3460] Full definition of `transferProperty` for group signal** [If at least one of the `ISignals` belonging to an `ISignalGroup` has a `transferProperty` defined (via their respective `ISignalToIPduMapping`) then all other `ISignals` belonging to the same `ISignalGroup` shall have a `transferProperty` defined as well.]()

Note: [constr\_3460] ensures that either

- no group signal has a `transferProperty` defined, then [TPS\_SYST\_02199] applies, or
- every group signal has a `transferProperty` defined, then [TPS\_SYST\_02199] (in case that all group signals have the `transferProperty` set to `pending`) or [TPS\_SYST\_02200] (in all other cases) applies.

[constr\_5344] Applicable **transferProperty** for GroupSignal and ISignal-Group

transferProperty on ISignalGroup	transferProperty on GroupSignals	Semantic
<ul style="list-style-type: none"> <li>not set</li> </ul>	Not set or <b>pending</b> for all Group Signals	Update of the Signal Group and update of Group Signals will not trigger transmission of the ISignalIPdu.
	Subset of Group Signals has <b>transferProperty</b> set to either <b>triggered</b> or <b>triggeredWithoutRepetition</b> and the other Group Signals have <b>transferProperty</b> either not set or set to <b>pending</b> .	Update of Signal Group marks the ISignalIPdu for transmission.
	Subset of Group Signals has <b>transferProperty</b> set to either <b>triggeredOnChange</b> or <b>triggeredOnChangeWithoutRepetition</b> and the other Group Signals have <b>transferProperty</b> either not set or set to <b>pending</b> .	Update of Signal Group and change of a Group Signal that has <b>transferProperty</b> set to <b>triggeredOnChange</b> or <b>triggeredOnChangeWithoutRepetition</b> causes immediate transmission of the ISignalIPdu.
<ul style="list-style-type: none"> <li><b>pending</b></li> </ul>	Not set or <b>pending</b> for all Group Signals	Update of the Signal Group and update of Group Signals will not trigger transmission of the ISignalIPdu. See [TPS_SYST_02199].
<ul style="list-style-type: none"> <li><b>triggered</b></li> <li><b>triggeredWithoutRepetition</b></li> </ul>	Not set or <b>pending</b> for all Group Signals	Update of the Signal Group marks the ISignalIPdu for transmission. See [TPS_SYST_02199]
	Subset of Group Signals has <b>transferProperty</b> set to either <b>triggered</b> or <b>triggeredWithoutRepetition</b> and the other Group Signals have <b>transferProperty</b> either not set or set to <b>pending</b> .	Update of Signal Group marks the ISignalIPdu for transmission. See [TPS_SYST_02200].
<ul style="list-style-type: none"> <li><b>triggeredOnChange</b></li> <li><b>triggeredOnChangeWithoutRepetition</b></li> </ul>	Not set or <b>pending</b> for all Group Signals	Update of Signal Group causes immediate transmission of the ISignalIPdu. See [TPS_SYST_02199]
	Subset of Group Signals has <b>transferProperty</b> set to either <b>triggeredOnChange</b> or <b>triggeredOnChangeWithoutRepetition</b> and the other Group Signals have <b>transferProperty</b> either not set or set to <b>pending</b> .	Update of Signal Group and change of a Group Signal that has <b>transferProperty</b> set to <b>triggeredOnChange</b> or <b>triggeredOnChangeWithoutRepetition</b> causes immediate transmission of the ISignalIPdu. See [TPS_SYST_02200].

If the ISignalToIPduMapping refers to an ISignalGroup in the role iSignalGroup and the ISignalIPdu has an EventControlledTiming aggregated at the Transmission-ModeTiming then combinations of transferProperty attribute settings for the ISignal-Group and the included ISignals are supported as defined in this table.

]()

[TPS\_SYST\_02199] Applicable **transferProperty** for ISignalGroup and all group signals have **transferProperty** not defined or **pending** defined [If the ISignalToIPduMapping refers to an ISignalGroup in the role iSignalGroup and

the `ISignalIPdu` has an `EventControlledTiming` aggregated at the `TransmissionModeTiming` and  
all `ISignals` belonging to the `ISignalGroup` have a `transferProperty` not defined or `pending` defined (via their respective `ISignalToIPduMapping`) then  
if the `ISignalToIPduMapping` of the `ISignalGroup` has the `transferProperty`

- `pending` defined then an update of this `ISignalGroup` does not cause the transmission of the `ISignalIPdu`.
- `triggered` or `triggeredWithoutRepetition` defined then an update of this `ISignalGroup` marks the `ISignalIPdu` for transmission
- `triggeredOnChange` or `triggeredOnChangeWithoutRepetition` defined then an update of this `ISignalGroup` in combination with the change of any of the contained group signals does cause immediate transmission of the `ISignalIPdu`.

]()

**[TPS\_SYST\_02200] Applicable `transferProperty` for `ISignalGroup` and group signals have `transferProperty` defined** [If the `ISignalToIPduMapping` refers to an `ISignalGroup` in the role `iSignalGroup` and  
the `ISignalIPdu` has an `EventControlledTiming` aggregated at the `TransmissionModeTiming` and  
at least one of the `ISignals` belonging to the `ISignalGroup` has a `transferProperty` defined (via their respective `ISignalToIPduMapping`) then  
if the `ISignalToIPduMapping` of the `ISignalGroup` has the `transferProperty`

- `pending` defined then an update of this `ISignalGroup` does not cause the transmission of the `ISignalIPdu`.
- `triggered` or `triggeredWithoutRepetition` defined then an update of this `ISignalGroup` marks the `ISignalIPdu` for transmission
- `triggeredOnChange` or `triggeredOnChangeWithoutRepetition` defined then an update of this `ISignalGroup` in combination with the change of any of the contained group signals which have `transferProperty=triggeredOnChange` defined does cause immediate transmission of the `ISignalIPdu`.

]()

**[constr\_3461] `TransferProperty` for group signals if `ISignalGroup` has `transferProperty=pending`** [If the `ISignalToIPduMapping` refers to an `ISignalGroup` in the role `iSignalGroup` and  
the `transferProperty` is set to `pending` then  
the group signals of this `ISignalGroup` shall either

- have no `transferProperty` defined (via their respective `ISignalToIPduMapping`) or
- every `ISignal` belonging to the `ISignalGroup` shall have the `transferProperty=pending` defined.

]()

<b>Class</b>	<b>ISignalTriggering</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	A ISignalTriggering allows an assignment of ISignals to physical channels.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">PhysicalChannel.ISignalTriggering</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
iSignal	<a href="#">ISignal</a>	0..1	ref	This reference shall be used if an ISignal is transported on the PhysicalChannel. This reference forms an XOR relationship with the ISignalTriggering-ISignalGroup reference.
iSignalGroup	<a href="#">ISignalGroup</a>	0..1	ref	This reference shall be used if an ISignalGroup is transported on the PhysicalChannel. This reference forms an XOR relationship with the ISignalTriggering-ISignal reference.
iSignalPort	<a href="#">ISignalPort</a>	*	ref	References to the ISignalPort on every ECU of the system which sends and/or receives the ISignal. References for both the sender and the receiver side shall be included when the system is completely defined.

**Table 6.18: ISignalTriggering**

### 6.2.1 Efficient COM for large data

AUTOSAR defines an alternative communication path between the RTE and the Communication Stack called Efficient COM for large data module (LdCom). The System Template does not define specific attributes which would distinguish whether the traditional Com or the LdCom shall be used. The idea behind this feature is rather that

- IF the LdCom module is integrated in an Ecu
- AND the specific interaction fulfills certain properties
- THEN LdCom shall be used.

Thus the usage of LdCom inside an ECU is project specific and is not derived from system description properties.

Note: even when all requirements for usage of LdCom are fulfilled it is not necessarily required to actually have an LdCom module inside the respective Ecu. It is rather a project specific decision whether LdCom module is integrated.

All of the following requirements need to be fulfilled in order to allow the usage of LdCom for the specific [ISignal](#) / [ISignalIPdu](#) combination.

**[TPS\_SYST\_02015] LdCom: only one [ISignal](#) mapped to the [ISignalIPdu](#)**  
[Only if exactly one [ISignal](#) is mapped into an [ISignalIPdu](#) and the LdCom module is present, this [ISignal](#) shall be handled by LdCom.] ([RS\\_SYST\\_00049](#))

**[TPS\_SYST\_02016] LdCom: only Transformer output and UINT8\_N or UINT8\_DYN supported** [Only if

- the data type of the `ISignal` is either `UINT8_N` or `UINT8_DYN`
- or the `ISignal` has a reference to the `DataTransformation` in the role `dataTransformation`

and the `LdCom` module is present, this `ISignal` shall be handled by `LdCom`.] (*RS\_SYST\_00049*)

**[TPS\_SYST\_02017] LdCom: Opaque `ISignalToIPduMapping.packingByteOrder`** [Only if `packingByteOrder` has the value "Opaque" and the `LdCom` module is present, this `ISignal` shall be handled by `LdCom`.] (*RS\_SYST\_00049*)

**[TPS\_SYST\_02018] LdCom: `ISignalToIPduMapping.startPosition` shall be 0** [Only if `ISignalToIPduMapping.startPosition` equals 0 (zero) and the `LdCom` module is present, this `ISignal` shall be handled by `LdCom`.] (*RS\_SYST\_00049*)

**[TPS\_SYST\_02019] LdCom: `ISignalToIPduMapping.transferProperty` shall be triggered or triggeredWithoutRepetition for sent `ISignals`** [Only if `ISignalToIPduMapping.transferProperty` equals `triggered` or `triggeredWithoutRepetition` for a `Signal` that is sent by the `EcuInstance` and the `LdCom` module is present, this `ISignal` shall be handled by `LdCom`.] (*RS\_SYST\_00049*)

**[TPS\_SYST\_02020] LdCom: No `IPduTiming.minimumDelay` defined** [The `ISignal` is mapped into an `ISignalIPdu`. Only if this `ISignalIPdu` does not contain an `IPduTiming` in `ipduTimingSpecification` which has `IPduTiming.minimumDelay` defined, the `ISignalIPdu` is sent by the `EcuInstance` and the `LdCom` module is present, this `ISignal` shall be handled by `LdCom`.] (*RS\_SYST\_00049*)

**[TPS\_SYST\_02021] LdCom: `ISignalToIPduMapping.updateIndicationBitPosition` shall not be defined** [Only if `ISignalToIPduMapping.updateIndicationBitPosition` is not defined and the `LdCom` module is present, this `ISignal` shall be handled by `LdCom`.] (*RS\_SYST\_00049*)

**[TPS\_SYST\_02022] LdCom: Only the `transmissionModeTrueTiming` defined** [The `ISignal` is mapped into an `ISignalIPdu`. Only if this `ISignalIPdu` has exactly the `TransmissionModeDeclaration.transmissionModeTrueTiming` defined (via `ISignalIPdu.ipduTimingSpecification`), the `ISignalIPdu` is sent by the `EcuInstance` and the `LdCom` module is present, this `ISignal` shall be handled by `LdCom`.] (*RS\_SYST\_00049*)

**[TPS\_SYST\_02023] LdCom: `DataFilter` "always" if `TransmissionModeCondition` defined** [The `ISignal` is mapped into an `ISignalIPdu`. If this `ISignalIPdu` has either

- no `TransmissionModeDeclaration.transmissionModeCondition` defined (via `ISignalIPdu.ipduTimingSpecification`) or
- `DataFilter.dataFilterType` is set to "always" for the `TransmissionModeCondition` of this `ISignalIPdu`.

and this `ISignalIPdu` is sent by the `EcuInstance` and the `LdCom` module is present, this `ISignal` shall be handled by `LdCom`.] (*RS\_SYST\_00049*)

[TPS\_SYST\_02024] LdCom: No **ModeDrivenTransmissionModeCondition** defined [The *ISignal* is mapped into an *ISignalIPdu*. Only if this *ISignalIPdu* has no *TransmissionModeDeclaration.modeDrivenTrueCondition* and *modeDrivenFalseCondition*, the *ISignalIPdu* is sent by the *EcuInstance* and the LdCom module is present, this *ISignal* shall be handled by LdCom.] (*RS\_SYST\_00049*)

[TPS\_SYST\_02025] LdCom: Only **EventControlledTiming** defined [The *ISignal* is mapped into an *ISignalIPdu*. Only if this *ISignalIPdu* has an *EventControlledTiming* (via *TransmissionModeTiming.eventControlledTiming*) and the LdCom module is present, this *ISignal* shall be handled by LdCom.] (*RS\_SYST\_00049*)

[TPS\_SYST\_02026] LdCom: Only **EventControlledTiming** with no repetition defined [The *ISignal* is mapped into an *ISignalIPdu*. Only if this *ISignalIPdu* has an *EventControlledTiming* (via *TransmissionModeTiming.eventControlledTiming*) with *EventControlledTiming.numberOfRepetitions* = 0 defined and the LdCom module is present, this *ISignal* shall be handled by LdCom.] (*RS\_SYST\_00049*)

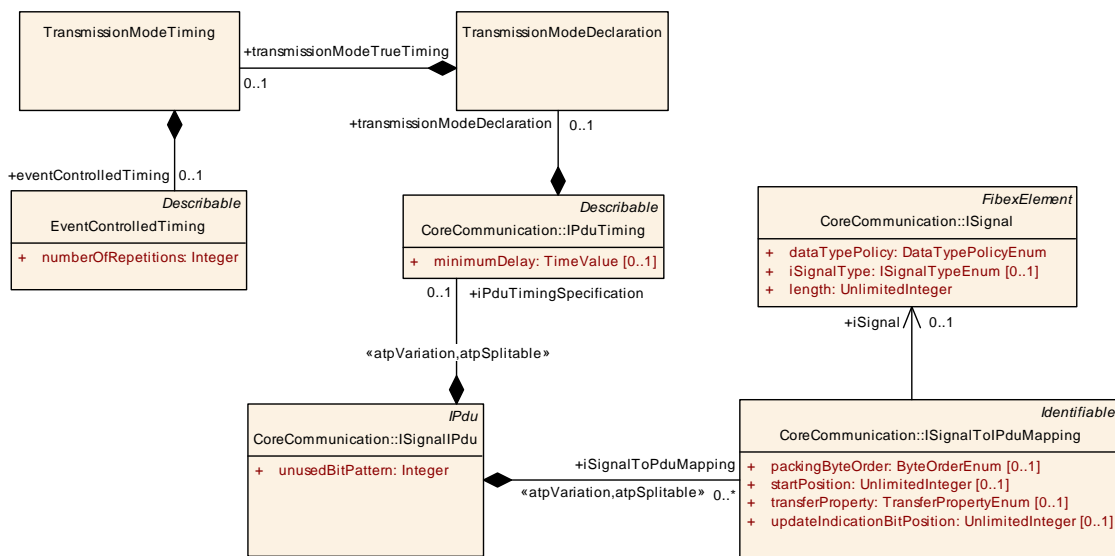


Figure 6.6: Pdu Timing excerpt that may be used to configure LdCom

[TPS\_SYST\_02027] LdCom: No **ISignalPort.timeout** reception timeout defined [Only if the *ISignalPort* which the *ISignalTriggering* is referring to has no *ISignalPort.timeout* defined and the LdCom module is present, this *ISignal* shall be handled by LdCom.] (*RS\_SYST\_00049*)

[TPS\_SYST\_02164] LdCom: No **ISignalPort.firstTimeout** reception timeout defined [Only if the *ISignalPort* which the *ISignalTriggering* is referring to has no *ISignalPort.firstTimeout* defined and the LdCom module is present, this *ISignal* shall be handled by LdCom.] (*RS\_SYST\_00049*)

[TPS\_SYST\_02028] LdCom: No **ISignalPort.dataFilter** defined [Only if the *ISignalPort* which the *ISignalTriggering* is referring to has either

- no `ISignalPort.dataFilter` defined
- or the `DataFilter.dataFilterType = always`

and the LdCom module is present, this `ISignal` shall be handled by LdCom.]([RS\\_SYST\\_00049](#))

**[TPS\_SYST\_03001] LdCom: `ISignalIPdu` not part of any `ISignalIPduGroup`**  
[Only if the `ISignalIPdu` is not referenced by any `ISignalIPduGroup` in the role `iSignalIPdu` and the LdCom module is present, this `ISignalIPdu` shall be handled by LdCom.]([RS\\_SYST\\_00049](#))

The following table gives an overview about the specification item relevance for the sender and for the receiver side.

Spec Item Number	Spec Item Headline	Motivation	Applies to	Model element
[TPS_SYST_02015]	LdCom: only one <code>ISignal</code> mapped to the <code>ISignalIPdu</code> .	LdCom only supports one <code>ISignal</code> per PDU.	Rx + Tx	<code>ISignalToIPduMapping</code>
[TPS_SYST_02016]	LdCom: only Transformer output and <code>UINT8_N</code> or <code>UINT8_DYN</code> supported.	LdCom only supports Byte Array Signals.	Rx + Tx	<code>ISignal</code>
[TPS_SYST_02017]	LdCom: Opaque <code>ISignalToIPduMapping.packingByteOrder</code> .	LdCom only supports Byte Array Signals.	Rx + Tx	<code>ISignalToIPduMapping</code>
[TPS_SYST_02018]	LdCom: <code>ISignalToIPduMapping.startPosition</code> shall be 0.	LdCom only supports Signals starting in the first byte of the PDU.	Rx + Tx	<code>ISignalToIPduMapping</code>
[TPS_SYST_02019]	LdCom: <code>ISignalToIPduMapping.transferProperty</code> shall be triggered or triggeredWithoutRepetition.	LdCom only supports one <code>ISignal</code> per PDU. That signal has to trigger the transmission.	Tx	<code>ISignalToIPduMapping</code>
[TPS_SYST_02020]	LdCom: No <code>IPduTiming.minimumDelay</code> defined.	LdCom does not support event triggered transmission with repetitions.	Tx	<code>ISignalIPdu</code>
[TPS_SYST_02021]	LdCom: <code>ISignalToIPduMapping.updateIndicationBitPosition</code> shall not be defined.	LdCom does not support update bits.	Rx + Tx	<code>ISignalToIPduMapping</code>
[TPS_SYST_02022]	LdCom: Only the <code>transmissionModeTrueTiming</code> defined.	LdCom does not support transmission modes.	Tx	<code>ISignalIPdu</code>
[TPS_SYST_02023]	LdCom: <code>DataFilter</code> "always" if <code>TransmissionModeCondition</code> defined.	LdCom does not support transmission modes.	Tx	<code>ISignalIPdu</code>
[TPS_SYST_02024]	LdCom: No <code>ModeDrivenTransmissionModeCondition</code> defined.	LdCom does not support transmission modes.	Tx	<code>ISignalIPdu</code>
[TPS_SYST_02025]	LdCom: Only <code>EventControlledTiming</code> defined.	LdCom does not support cyclic transmission.	Tx	<code>ISignalIPdu</code>
[TPS_SYST_02026]	LdCom: Only <code>EventControlledTiming</code> with no repetition defined.	LdCom does not support cyclic transmission nor repeated transmission.	Tx	<code>ISignalIPdu</code>
[TPS_SYST_02027]	LdCom: No <code>ISignalPort.timeout</code> reception timeout defined.	LdCom does not support timeout handling.	Rx	<code>ISignalPort</code>
[TPS_SYST_02164]	LdCom: No <code>ISignalPort.firstTimeout</code> reception timeout defined.	LdCom does not support timeout handling.	Rx	<code>ISignalPort</code>
[TPS_SYST_02028]	LdCom: No <code>ISignalPort.dataFilter</code> defined.	LdCom does not support timeout handling.	Rx	<code>ISignalPort</code>
[TPS_SYST_03001]	LdCom: <code>ISignalIPdu</code> not part of any <code>ISignalIPduGroup</code> .	LdCom does not support <code>ISignalIPduGroups</code> .	Rx + Tx	<code>ISignalIPdu</code>

**Table 6.19: Relevance of LdCom spec items for TX and RX**



### 6.2.2 Big Endian and Little Endian memory layout of Pdus and Frames

The AUTOSAR system description provide means to specify how the memory layout looks like when signals are packed into Pdus and Pdus are packed into Frames. The layout of Pdus and Frames on different communication systems is out of scope of AUTOSAR. The specification of attributes Bit counting (monotone or sawtooth) and Bit order (decreasing or increasing)<sup>1</sup> is not supported by AUTOSAR. In AUTOSAR these attributes are fixed.

**[TPS\_SYST\_01068] Bit Counting in AUTOSAR** [The Bit counting shall always be considered as "sawtooth".]()

**[TPS\_SYST\_01069] Bit Order in AUTOSAR** [The bit order shall always be considered as "Decreasing".]()

When a signal is mapped into a Pdu only the `packingByteOrder` affects the memory layout of the signal inside the Pdu beginning with it's start bit position.

Little endian stores the least significant byte first and begins with the least significant bit, i.e. loworder bit in the sequence (the least significant bit serves as start bit).

Big endian stores the most significant byte first and begins with the most significant bit, i.e. the bit with the greatest numerical value (the most significant bit serves as start bit).

In both cases the bit positions in the mapped signals increase with the bit positions in the `ISignalIPdu` such that the bit  $2^0$  is mapped to position n in the `ISignalIPdu` and bit  $2^1$  is mapped to position n+1 and so on.

Example 6.7 shows the memory layout for Little Endian and Big Endian if an `ISignal` with a length of 10 bits is mapped into a Pdu. The start bit position is 5.

Little Endian byte order:

Byte	0								1							
Bit	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8
Signal	$2^2$	$2^1$	$2^0$	-	-	-	-	-	$2^9$	$2^8$	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	

Big Endian byte order:

Byte	0								1							
Bit	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8
Signal	-	-	$2^9$	$2^8$	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$	-	-	-	-

**Figure 6.7: PackingByteOrder Example**

The following examples are showing the mapping of Pdus into Frames.

<sup>1</sup>More details about Bit counting and Bit order can be found in ASAM FIBEX [9].



The first example in [Figure 6.8](#) for little endian shows a `Frame` with four bytes that contains a single `Pdu` that is two bytes long. The `PduToFrameMapping.startPosition` is defined with 8 and since the `packingByteOrder` is set to `mostSignificantByteLast` the `startPosition` denotes the least significant bit of the `Pdu` in the `Frame`. The bit position of the mapped `Pdu` increases with the bit positions in the `Frame` such that the bit  $2^0$  is mapped to position  $n$  in the `ISignalIPdu` and bit  $2^1$  is mapped to position  $n+1$  and so on.

Please note that the `Pdus` are byte aligned in a `Frame` and only the values 0, 8, 16, 24,... (for little endian) and 7, 15, 23, ... (for big endian) for `PduToFrameMapping.startPosition` are allowed.

[Figure 6.8](#) also shows that the `Pdu` contains three `ISignals`. The first `ISignal` has the `ISignalToIPduMapping.startPosition` defined as 0 and is 5 bits long. The bitposition of the second signal is 5 and the length is 10 bits. And the third signal has the bitposition 15 and is only 1 bit long. Since the `ISignalToIPduMapping.packingByteOrder` is defined with `mostSignificantByteLast` as well the `startPosition` of the `ISignals` denotes the least significant bit of the `ISignal` in the `Pdu`.

Little Endian byte order:

Signal layout in Pdu:

Byte	1								2							
Bit	15	14	13	12	11	10	9	8	23	22	21	20	19	18	17	16
Signal	$2^2$	$2^1$	$2^0$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$	$2^0$	$2^9$	$2^8$	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$
Pdu bit	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8

Pdu layout in Frame:

Byte	0								1								2								3							
Bit	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8	23	22	21	20	19	18	17	16	31	30	29	28	27	26	25	24
Pdu	-	-	-	-	-	-	-	-	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$	$2^{15}$	$2^{14}$	$2^{13}$	$2^{12}$	$2^{11}$	$2^{10}$	$2^9$	$2^8$	-	-	-	-	-	-	-	-

**Figure 6.8: PackingByteOrder Example**

The second example in [Figure 6.9](#) for big endian shows again a `Frame` with four bytes that contains a single `Pdu` that is two bytes long. The `PduToFrameMapping.startPosition` is defined with 15 and since the `packingByteOrder` is set to `mostSignificantByteFirst` the `startPosition` denotes the most significant bit of the `Pdu` in the `Frame`.

[Figure 6.9](#) also shows that the `Pdu` contains three `ISignals`. The first `ISignal` has the `ISignalToIPduMapping.startPosition` defined as 7 and is 5 bits long. The bitposition of the second signal is 2 and the length is 10 bits. And the third signal has the bitposition 8 and is only 1 bit long. Since the `ISignalToIPduMapping.packingByteOrder` is defined with `mostSignificantByteFirst` as well the `startPosition` of the `ISignals` denotes the most significant bit of the `ISignal` in the `Pdu`.

Big Endian byte order:

Signal layout in Pdu:

Byte	1								2							
Frame bit	15	14	13	12	11	10	9	8	23	22	21	20	19	18	17	16
Signal	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	2 <sup>9</sup>	2 <sup>8</sup>	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	2 <sup>0</sup>
Pdu bit	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8

Pdu layout in Frame:

Byte	0								1								2								3							
Bit	7	6	5	4	3	2	1	0	15	14	13	12	11	10	9	8	23	22	21	20	19	18	17	16	31	30	29	28	27	26	25	24
Pdu	-	-	-	-	-	-	-	-	2 <sup>15</sup>	2 <sup>14</sup>	2 <sup>13</sup>	2 <sup>12</sup>	2 <sup>11</sup>	2 <sup>10</sup>	2 <sup>9</sup>	2 <sup>8</sup>	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	-	-	-	-	-	-	-	-

**Figure 6.9: PackingByteOrder Example**

Please note that the positioning of `SegmentPositions` in a `MultiplexedIPdu` works in the exact same way. The examples in [Figure 6.8](#) and [Figure 6.9](#) can be taken as well as an example for a `MultiplexedIPdu` where the 1 bit signal defines the selectorField and the other two signals represent segments defined for the `DynamicPart`.

## 6.3 PDUs

The chapter introduces the different [Pdu](#) types that are supported in the AUTOSAR Architecture and by the AUTOSAR Meta-Model.

The PDU Router is responsible only for the routing of [IPdus](#). Other [Pdus](#) that are direct specializations of the [Pdu](#) meta-class are not routed by the PDU Router.

[UserDefinedPdus](#) and [UserDefinedIPdus](#) are used to describe PDU-based communication over Complex Drivers. Chapter [6.14](#) provides a more detailed description of CDDs.

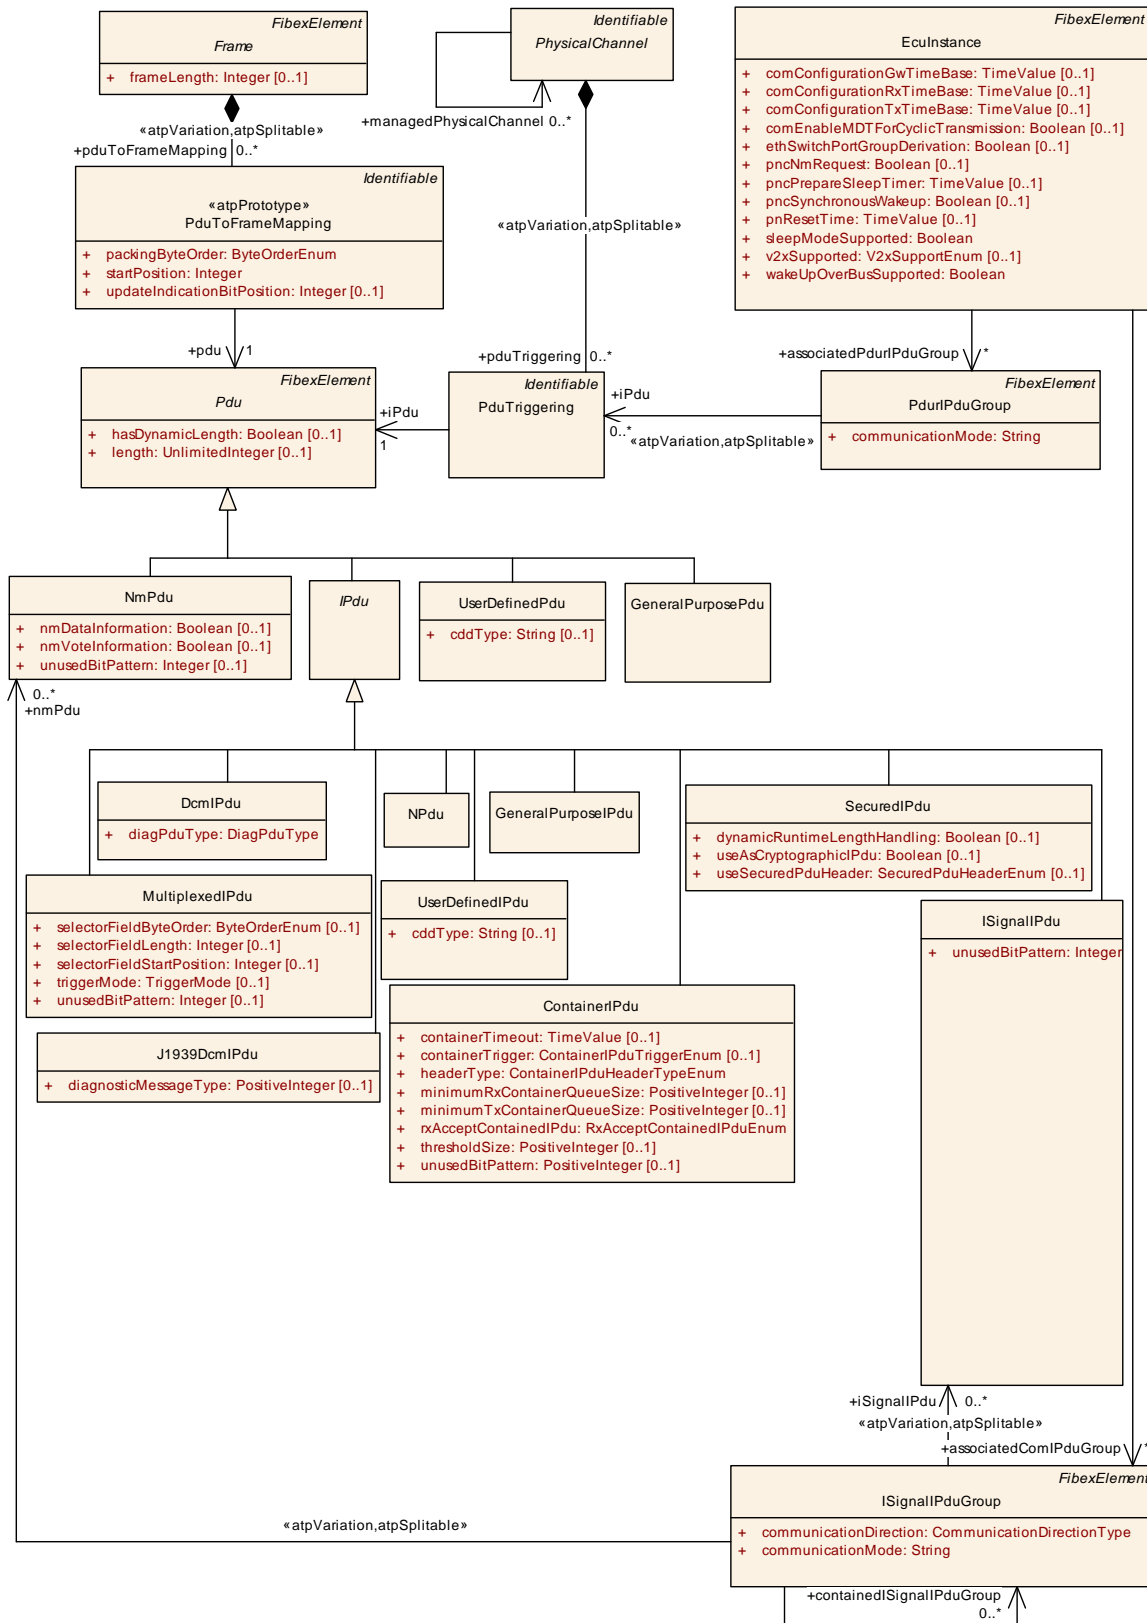


Figure 6.10: Pdus and the mapping into Frames (FibexCore: PDUOverview)

The `PduToFrameMapping` element describes the mapping of `Pdus` to `Frames` and defines the position of a `Pdu` within a `Frame`. By using different `PduToFrameMappings` it is possible to use the same `Pdu` in different `Frames`.

**[constr\_3516] limitation of `Frame.frameLength` for CAN L-PDUs** [The `Frame.frameLength` of CAN PDUs shall be restricted to

- 0..8 for classic CAN L-PDUs;
- 0..8, 12, 16, 20, 24, 32, 48, 64 for CAN FD L-PDUs and
- 1..2048 for CAN XL L-PDUs.

]()

Please note that only a single `Pdu` is allowed to be mapped into a `CanFrame`. The `Pdu.length` of the `Pdu` that is mapped into the `CanFrame` cannot be smaller than the `CanFrame.frameLength`, but is allowed to be larger (see [TPS\_SYST\_02255]). If the `CanFrame` is a CAN XL frame (SDU Type other than 0x03h, see Ch. 3.3.1.2.2), the `Pdu.length` cannot be 0.

A timing description `IPduTiming` can be aggregated directly by the `ISignalIPdu`. This timing description can be used for the Configuration of COM Transmission Modes. The `PduTriggering` describes on which channel the `Pdu` is transmitted. Timing requirements may be specified with the Timing Extension model. More details are described in chapter 1.7.3. Such `Pdu` timing requirements needs to be fulfilled by the timing specification on the `Frame`.

<b>Class</b>	<code>Pdu</code> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Collection of all <code>Pdus</code> that can be routed through a bus interface.			
<b>Base</b>	<code>ARObject</code> , <code>CollectableElement</code> , <code>FibexElement</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>PackageableElement</code> , <code>Referrable</code>			
<b>Subclasses</b>	<code>GeneralPurposePdu</code> , <code>IPdu</code> , <code>NmPdu</code> , <code>UserDefinedPdu</code>			
<b>Aggregated by</b>	<code>ARPackage.element</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
hasDynamicLength	Boolean	0..1	attr	This attribute defines whether the <code>Pdu</code> has dynamic length (true) or not (false). Please note that the usage of this attribute is restricted by [constr_3448].
length	UnlimitedInteger	0..1	attr	<code>Pdu</code> length in bytes. In case of dynamic length <code>IPdus</code> (containing a dynamical length signal), this value indicates the maximum data length. It should be noted that in former AUTOSAR releases (Rel 2.1, Rel 3.0, Rel 3.1, Rel 4.0 Rev. 1) this parameter was defined in bits. The <code>Pdu</code> length of zero bytes is allowed.

Table 6.20: `Pdu`

**[constr\_5249] Existence of `Pdu.length`** [For each `Pdu`, attribute `length` shall exist at the time when the Ecu configuration of the COM stack is created.]()

Reason: Bsw modules might buffer the payload of the `Pdu` and for this purpose the `Pdu.length` needs to be provided. A second reason is that future extensions of the `Pdu` can be prepared by setting the `length` to an appropriate value.

**[constr\_5321] Value range of `Pdu.length`** [The value of `Pdu.length` shall be in the range of 0..4294967295 Bytes.]()

**[constr\_3448] Restriction for usage of `Pdu.hasDynamicLength`** [The `Pdu.hasDynamicLength` attribute is only relevant for `UserDefinedPdu`s, `UserDefinedIPdu`s, `J1939DcmIPdu`s.]()

**[TPS\_SYST\_03085] `Pdu` qualifies as dynamic length** [If a `Pdu` meets one of the following criteria this `Pdu` is considered dynamic length:

- `ISignalIPdu`: At least one dynamic signal mapped to the `ISignalIPdu`.
- `SecuredIPdu` and `MultiplexedIPdu`: At least one of the associated upper layer `Pdu`s has dynamic length.
- `ContainerIPdu`: Is dynamic if:
  - the `headerType` is `shortHeader` or `longHeader` or
  - the `headerType` is `noHeader` and the last contained `Pdu` has dynamic length.
- `NPdu`: TP layer takes care of length handling, not visible to application.
- `DcmIPdu`: always dynamic length.
- `NmPdu`: always static length.
- `GeneralPurposePdu` and `GeneralPurposeIPdu`: Depending on upper layer, which could be: SD, TSync, DoIP, XCP, SomeIpTp, Dlt, IDS.

]()

<b>Class</b>	<code>IPdu</code> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	The <code>IPdu</code> (Interaction Layer Protocol Data Unit) element is used to sum up all <code>Pdu</code> s that are routed by the <code>PduR</code> .			
<b>Base</b>	<code>ARObject</code> , <code>CollectableElement</code> , <code>FibexElement</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>PackageableElement</code> , <code>Pdu</code> , <code>Referrable</code>			
<b>Subclasses</b>	<code>ContainerIPdu</code> , <code>DcmIPdu</code> , <code>GeneralPurposeIPdu</code> , <code>ISignalIPdu</code> , <code>J1939DcmIPdu</code> , <code>MultiplexedIPdu</code> , <code>NPdu</code> , <code>SecuredIPdu</code> , <code>UserDefinedIPdu</code>			
<b>Aggregated by</b>	<code>ARPackage.element</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
containedIPdu Props	<code>ContainedIPduProps</code>	0..1	aggr	Defines whether this <code>IPdu</code> may be collected inside a <code>ContainerIPdu</code> .

**Table 6.21: IPdu**

<b>Class</b>	<b>ISignalIPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Represents the IPdu handled by Com. The ISignalIPdu assembled and disassembled in AUTOSAR COM consists of one or more signals. In case no multiplexing is performed this IPdu is routed to/from the Interface Layer.  A maximum of one dynamic length signal per IPdu is allowed.  <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	ARObject, CollectableElement, FibexElement, IPdu, Identifiable, MultilanguageReferrable, PackageableElement, Pdu, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
iPduTiming Specification	IPduTiming	0..1	aggr	Timing specification for Com IPdus (Transmission Modes). This information is mandatory for the sender in a System Extract. This information may be omitted on receivers in a System Extract.  atpVariation: The timing of a Pdu can vary.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=iPduTimingSpecification, iPduTimingSpecification.variationPoint.shortLabel vh.latestBindingTime=postBuild
iSignalToPdu Mapping	ISignalToPduMapping	*	aggr	Definition of SignalToIPduMappings included in the Signal IPdu.  atpVariation: The content of a PDU can be variable.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=iSignalToPduMapping.shortName, iSignalToPduMapping.variationPoint.shortLabel vh.latestBindingTime=postBuild
unusedBit Pattern	Integer	1	attr	AUTOSAR COM and AUTOSAR IPDUM are filling not used areas of an IPDU with this bit-pattern. This attribute is mandatory to avoid undefined behavior. This byte-pattern will be repeated throughout the IPdu.

**Table 6.22: ISignalIPdu**

<b>Class</b>	<b>NmPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Network Management Pdu  <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Pdu, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
iSignalToIPdu Mapping	ISignalToIPduMapping	*	aggr	This optional aggregation is used to describe NmUserData that is transmitted in the NmPdu. The counting of the startPosition starts at the beginning of the NmPdu regardless whether Cbv or Nid are used.
nmData Information	Boolean	0..1	attr	Defines if the Pdu contains NM Data. If the NmPdu does not aggregate any ISignalToIPduMappings it still may contain UserData that is set via Nm_SetUserData(). If the ISignalToIPduMapping exists then the nmDataInformation attribute shall be ignored.
nmVote Information	Boolean	0..1	attr	Defines if the Pdu contains NM Vote information.





<b>Class</b>	<b>NmPdu</b>			
unusedBitPattern	Integer	0..1	attr	AUTOSAR COM is filling not used areas of an Pdu with this bit-pattern. This attribute can only be used if the nmDataInformation attribute is set to true.

**Table 6.23: NmPdu**

Please note that in AUTOSAR only FrNm is able to send out NmPdus with and without voting information:

**[constr\_3073] nmVoteInformation only valid for FrNm** [The [nmVoteInformation](#) attribute is only valid for FrNm.]()

<b>Class</b>	<b>NPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	This is a Pdu of the Transport Layer. The main purpose of the TP Layer is to segment and reassemble IPdus. <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">IPdu</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Pdu</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.24: NPdu**

<b>Class</b>	<b>DcmIPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Represents the IPdus handled by Dcm. <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">IPdu</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Pdu</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
diagPduType	<a href="#">DiagPduType</a>	1	attr	Attribute is used to distinguish a request from a response.

**Table 6.25: DcmIPdu**



<b>Enumeration</b>	<b>DiagPduType</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	Used to distinguish a diagnostic request from a response.
<b>Aggregated by</b>	<a href="#">DcmIPdu.diagPduType</a>
<b>Literal</b>	<b>Description</b>
diagRequest	Diagnostic Request <b>Tags:</b> atp.EnumerationLiteralIndex=0
diagResponse	Diagnostic Response <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.26: DiagPduType**

<b>Class</b>	<b>J1939DcmIPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Represents the IPdus handled by J1939Dcm. <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">IPdu</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Pdu</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
diagnosticMessageType	PositiveInteger	0..1	attr	This attribute is used to identify the actual DMx message, e.g 1 means DM01, etc.

**Table 6.27: J1939DcmIPdu**

**[constr\_3096] Allowed values for [diagnosticMessageType](#)** [The allowed values of [diagnosticMessageType](#) range from 1..57.] ()

<b>Class</b>	<b>GeneralPurposePdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	This element is used for AUTOSAR Pdus without additional attributes that are routed by a bus interface. Please note that the category name of such Pdus is standardized in the AUTOSAR System Template. <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Pdu</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.28: GeneralPurposePdu**

[constr\_3081] Value of category in **GeneralPurposePdu** [The attribute `category` of **GeneralPurposePdu** can have the following values:

- SD (Service Discovery)
- GLOBAL\_TIME
- DoIP

]()

<b>Class</b>	<b>GeneralPurposePdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	This element is used for AUTOSAR Pdus without attributes that are routed by the PduR. Please note that the category name of such Pdus is standardized in the AUTOSAR System Template. <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">IPdu</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Pdu</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.29: GeneralPurposePdu**

[constr\_3082] Value of category in **GeneralPurposeIPdu** [The attribute `category` of **GeneralPurposeIPdu** can have the following values:

- XCP
- SOMEIP\_SEGMENTED\_IPDU
- DLT

]()

<b>Class</b>	<b>UserDefinedPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	UserDefinedPdu allows to describe PDU-based communication over Complex Drivers. If a new BSW module is added above the BusIf (e.g. a new Nm module) then this Pdu element shall be used to describe the communication. <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Pdu</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
cddType	<a href="#">String</a>	0..1	attr	This attribute defines the CDD that transmits or receives the UserDefinedIPdu. If several CDDs are defined this attribute is used to distinguish between them.

**Table 6.30: UserDefinedPdu**

<b>Class</b>	<b>UserDefinedIPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	UserDefinedIPdu allows to describe PDU-based communication over Complex Drivers. If a new BSW module is added above the PduR (e.g. a Diagnostic Service ) then this IPdu element shall be used to describe the communication. <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	ARObject, CollectableElement, FibexElement, IPdu, Identifiable, MultilanguageReferrable, PackageableElement, Pdu, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
cddType	String	0..1	attr	This attribute defines the CDD that transmits or receives the UserDefinedPdu. If several CDDs are defined this attribute is used to distinguish between them.

**Table 6.31: UserDefinedIPdu**

<b>Class</b>	<<atpPrototype>> <b>PduToFrameMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	A PduToFrameMapping defines the composition of Pdus in each frame.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	Frame.pduToFrameMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
packingByteOrder	ByteOrderEnum	1	attr	This attribute defines the order of the bytes of the Pdu and the packing into the Frame. Please consider that [constr_3246] and [constr_3222] are restricting the usage of this attribute.
pdu	Pdu	1	ref	Reference to a I-Pdu, N-Pdu or NmPdu that is transmitted in the Frame.
startPosition	Integer	1	attr	This attribute describes the bitposition of a Pdu within a Frame.  Please note that the absolute position of the Pdu in the Frame is determined by the definition of the packingByteOrder attribute. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the Frame. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the Frame. The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.  The Pdus are byte aligned in a Frame and only the values 0, 8, 16, 24,... (for little endian) and 7, 15, 23, ... (for big endian) are allowed.
updateIndicationBitPosition	Integer	0..1	attr	Indication to the receivers that the corresponding Pdu was updated by the sender. This attribute describes the position of the update bit in the frame that aggregates this PDUToFrameMapping. Length is always one bit.  Note that the exact bit position of the updateIndicationBitPosition is linked to the value of the attribute packingByteOrder because the method of finding the bit position is different for the values mostSignificantByteFirst and mostSignificantByteLast. This means that if the value of packingByteOrder is changed while the value of updateIndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing Frame still undergoes a change.  This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian"





Class	<<atpPrototype>> PduToFrameMapping			
				<p data-bbox="1098 376 1123 405">△</p> <p data-bbox="836 398 1377 542">packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p>

**Table 6.32: PduToFrameMapping**

**[constr\_3246] Frame.packingByteOrder mix within a Frame is not allowed** [All PduToFrameMappings within a Frame shall have the same packingByteOrder value.]()

Please note that the absolute position (bit-position) of the Pdu in the Frame is determined by the definition of the packingByteOrder attribute. The Pdus are byte aligned in a Frame and the values 0, 8, 16, 24,... (for little endian) and 7, 15, 23, ... (for big endian) are allowed. For reasons of simplicity a mix of the packingByteOrder is not allowed.

**[constr\_3222] No ByteOrderEnum.opaque allowed for PduToFrameMapping.packingByteOrder** [The values of PduToFrameMapping.packingByteOrder are restricted to ByteOrderEnum.mostSignificantByteFirst and ByteOrderEnum.mostSignificantByteLast. I.e. the value ByteOrderEnum.opaque is not allowed.]()

<b>Class</b>	<b>IPduTiming</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	<p>AUTOSAR COM provides the possibility to define two different TRANSMISSION MODES for each IPdu. The Transmission Mode of an IPdu that is valid at a specific point in time is selected using the values of the signals that are mapped to this IPdu. For each IPdu a Transmission Mode Selector is defined. The Transmission Mode Selector is calculated by evaluating the conditions for a subset of signals (class TransmissionModeCondition in the System Template).</p> <p>The Transmission Mode Selector is defined to be true, if at least one Condition evaluates to true and is defined to be false, if all Conditions evaluate to false.</p>			
<b>Base</b>	ARObject, <a href="#">Describable</a>			
<b>Aggregated by</b>	<a href="#">ISignalIPdu.iPduTimingSpecification</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
minimumDelay	TimeValue	0..1	attr	Minimum Delay in seconds between successive transmissions of this I-PDU, independent of the Transmission Mode.
transmission Mode Declaration	<a href="#">TransmissionMode Declaration</a>	0..1	aggr	AUTOSAR COM allows configuring statically two different transmission modes for each I-PDU (True and False). The Transmission Mode Selector evaluates the conditions for a subset of signals and decides the transmission mode. It is possible to switch between the transmission modes during runtime.

**Table 6.33: IPduTiming**

<b>Class</b>	<b>PduTriggering</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	<p>The PduTriggering describes on which channel the IPdu is transmitted. The Pdu routing by the PduR is only allowed for subclasses of IPdu.</p> <p>Depending on its relation to entities such channels and clusters it can be unambiguously deduced whether a fan-out is handled by the Pdu router or the Bus Interface.</p> <p>If the fan-out is specified between different clusters it shall be handled by the Pdu Router. If the fan-out is specified between different channels of the same cluster it shall be handled by the Bus Interface.</p>			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">PhysicalChannel.pduTriggering</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
iPdu	<a href="#">Pdu</a>	1	ref	<p>Reference to the Pdu for which the PduTriggering is defined. One I-Pdu can be triggered on different channels (PduR fan-out). The Pdu routing by the PduR is only allowed for subclasses of IPdu.</p> <p>Nevertheless is the reference to the Pdu element necessary since the PduTriggering element is also used to specify the sending and receiving connections to Ecu Ports.</p>
iPduPort	<a href="#">IPduPort</a>	*	ref	<p>References to the IPduPort on every ECU of the system which sends and/or receives the I-PDU.</p> <p>References for both the sender and the receiver side shall be included when the system is completely defined.</p>






Class	PduTriggering			
iSignalTriggering	<a href="#">ISignalTriggering</a>	*	ref	This reference provides the relationship to the ISignalTriggerings that are implemented by the PduTriggering. The reference is optional since no ISignalTriggering can be defined for DCM and Multiplexed Pdus. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=iSignalTriggering.iSignalTriggering, iSignalTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild
secOcCryptoMapping	<a href="#">SecOcCryptoServiceMapping</a>	0..1	ref	This reference identifies the crypto profile applicable to the usage (send, receive) of the also referenced SecuredIPdu.  Obviously, this reference is only applicable if the PduTriggering also references a SecuredIPdu in the role iPdu.
triggerIPduSendCondition	<a href="#">TriggerIPduSendCondition</a>	*	aggr	Defines the trigger for the Com_TriggerIPDUSend API call. Only if all defined TriggerIPduSendConditions evaluate to true (AND associated) the Com_TriggerIPDUSend API shall be called.

**Table 6.34: PduTriggering**

AUTOSAR COM provides a mechanism of starting/stopping COM PDU groups ([ISignalIPduGroup](#)). Please note that in a System Model an [ISignalIPdu](#) can belong to several [ISignalIPduGroups](#) of different [EcuInstances](#). So it is not possible to deduce the assignment of an [ISignalIPduGroup](#) to an [EcuInstance](#) via the [iSignalIPdus](#) that are included in the [ISignalIPduGroup](#). The assignment of an [ISignalIPduGroup](#) to an [EcuInstance](#) is therefore realized with the [EcuInstance.associatedComIPduGroup](#) reference.

Please note that the [EcuInstance.associatedComIPduGroup](#) reference is only used to assign the top-level [ISignalIPduGroups](#) to an [EcuInstance](#). The assignment of the [containedISignalIPduGroups](#) to an [EcuInstance](#) is done via the aggregating [ISignalIPduGroup](#) that in turn is referenced by an [EcuInstance](#).

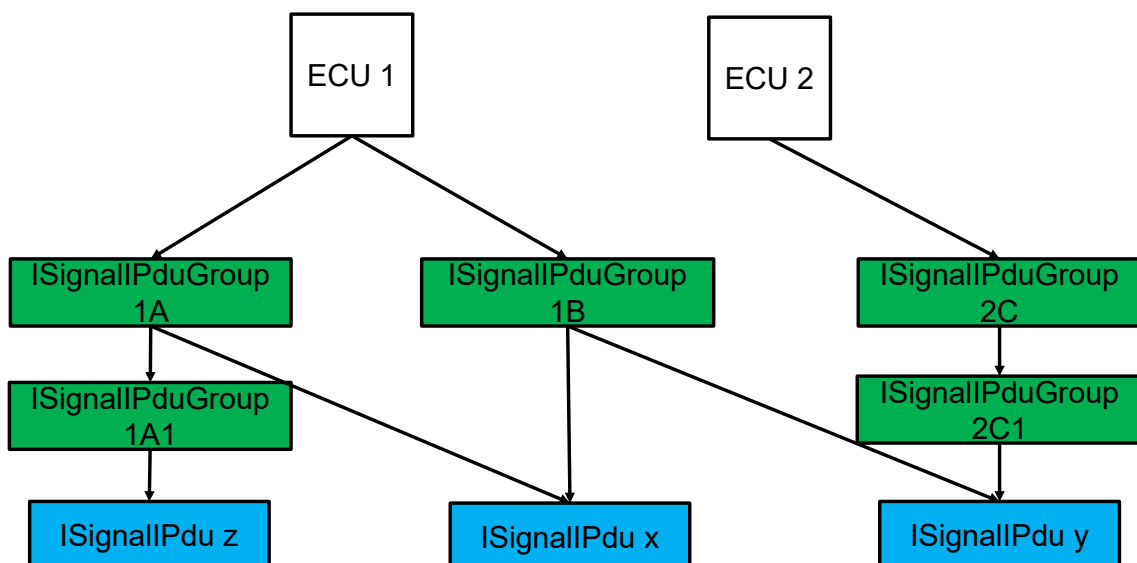

**Figure 6.11: Example for ISignalIPduGroups and their assignment to EcuInstances**

<b>Class</b>	<b>ISignalPduGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	The AUTOSAR COM Layer is able to start and to stop sending and receiving configurable groups of I-Pdus during runtime. An ISignalPduGroup contains either ISignalPdus or ISignalPduGroups. <b>Tags:</b> atp.recommendedPackage=ISignalPduGroup			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Direction	<a href="#">CommunicationDirectionType</a>	1	attr	This attribute determines in which direction IPdus that are contained in this IPduGroup will be transmitted (communication direction can be either In or Out).
communication Mode	<a href="#">String</a>	1	attr	This attribute defines the use-case for this ISignalPdu Group (e.g. diagnostic, debugging etc.). For example, in a diagnostic mode all IPdus - which are not involved in diagnostic - are disabled. The use cases are not limited to a fixed enumeration and can be specified as a string.
contained ISignalPdu Group	<a href="#">ISignalPduGroup</a>	*	ref	An I-Pdu group can be included in other I-Pdu groups. Contained I-Pdu groups shall not be referenced by the EcuInstance.
iSignalPdu	<a href="#">ISignalPdu</a>	*	ref	Reference to a set of Signal I-Pdus, which are contained in the ISignal I-Pdu Group.  <b>atpVariation:</b> The content of a ISignal I-Pdu group can vary (->vehicle modes).  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=iSignalPdu.iSignalPdu, iSignalIPdu.variationPoint.shortLabel vh.latestBindingTime=postBuild
nmPdu	<a href="#">NmPdu</a>	*	ref	Reference to a set of NmPdus with NmUserData, which are contained in the ISignalPduGroup.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=nmPdu.nmPdu, nmPdu.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.35: ISignalPduGroup**

<b>Enumeration</b>	<b>CommunicationDirectionType</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	Describes the communication direction.
<b>Aggregated by</b>	<a href="#">CommConnectorPort.communicationDirection</a> , <a href="#">IPSecRule.direction</a> , <a href="#">ISignalPduGroup.communicationDirection</a>
<b>Literal</b>	<b>Description</b>
in	Reception (Input) <b>Tags:</b> atp.EnumerationLiteralIndex=0
out	Transmission (Output) <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.36: CommunicationDirectionType**

**[constr\_3020] communicationDirection of containedISignalIPduGroups**

[The value of the attribute `communicationDirection` of `containedISignalIPduGroup` shall be identical to the value of the attribute `communicationDirection` of the enclosing `ISignalIPduGroup`.]()

The AUTOSAR Pdu Router provides a mechanism of enabling/disabling of routing path groups (`PdurIPduGroup`).

Please note that in a System Model a `PduTriggering` can belong to several `PdurIPduGroups` of different `EcuInstances`. So it is not possible to deduce the assignment of an `PdurIPduGroup` to an `EcuInstance` via the `PduTriggerings` that are included in the `ISignalIPduGroup`. The assignment of an `PdurIPduGroup` to an `EcuInstance` is therefore realized with the `EcuInstance.associatedPdurIPduGroup` reference.


<b>Class</b>	<b>PdurIPduGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	The AUTOSAR PduR will enable and disable the sending of configurable groups of IPdus during runtime according to the AUTOSAR PduR specification. <b>Tags:</b> atp.recommendedPackage=PdurIPduGroups			
<b>Base</b>	<i>ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Aggregated by</b>	<i>ARPackage.element</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Mode	String	1	attr	This attribute defines the use-case for this PdurIPdu Group. For example, in a diagnostic mode all IPdus - which are not involved in diagnostic - are disabled. The use cases are not limited to a fixed enumeration and can be specified as a string.
iPdu	PduTriggering	*	ref	Reference to a set of IPdus, which are contained in the Pdur I-Pdu Group. If an IPdu is routed by the Pdur to different destinations (Pdur fan-out) than an Pdu Triggering for each destination is created in the System Template. To enable/disable a specific destination the PdurIPduGroup refers to the PduTriggering.  atpVariation: The content of a Pdur I-Pdu group can vary (->vehicle modes). <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=iPdu.pduTriggering, iPdu.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.37: PdurIPduGroup**

### 6.3.1 ContainerIPdu


`IPdu` collection is used to transport several (smaller) `IPdus` in one (large) `ContainerIPdu`. A possible use case for example is the extended payload size for Ethernet and CanFd in combination with the limited payload of Can and Lin, where `Pdus` from a Can network shall be routed onto an Ethernet network and then back to a Can again.



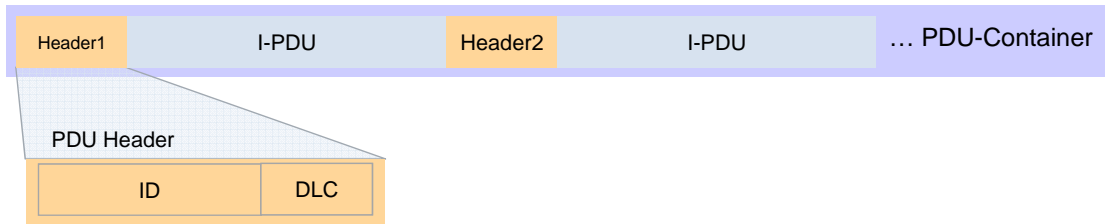

**Figure 6.12: Layout of a ContainerIPdu if HeaderMode is used**

For each IPdu which is put inside a ContainerIPdu, a header may be provided which determines which IPdu is contained (ContainedIPduProps.headerIdLongHeader or headerIdShortHeader) and what the size of that IPdu is (DLC during runtime). With this header mode the receivers are able to extract the individual contained IPdus again. As an alternative option to the usage of headers a statically configured layout of IPdus in the ContainerIPdu is supported.

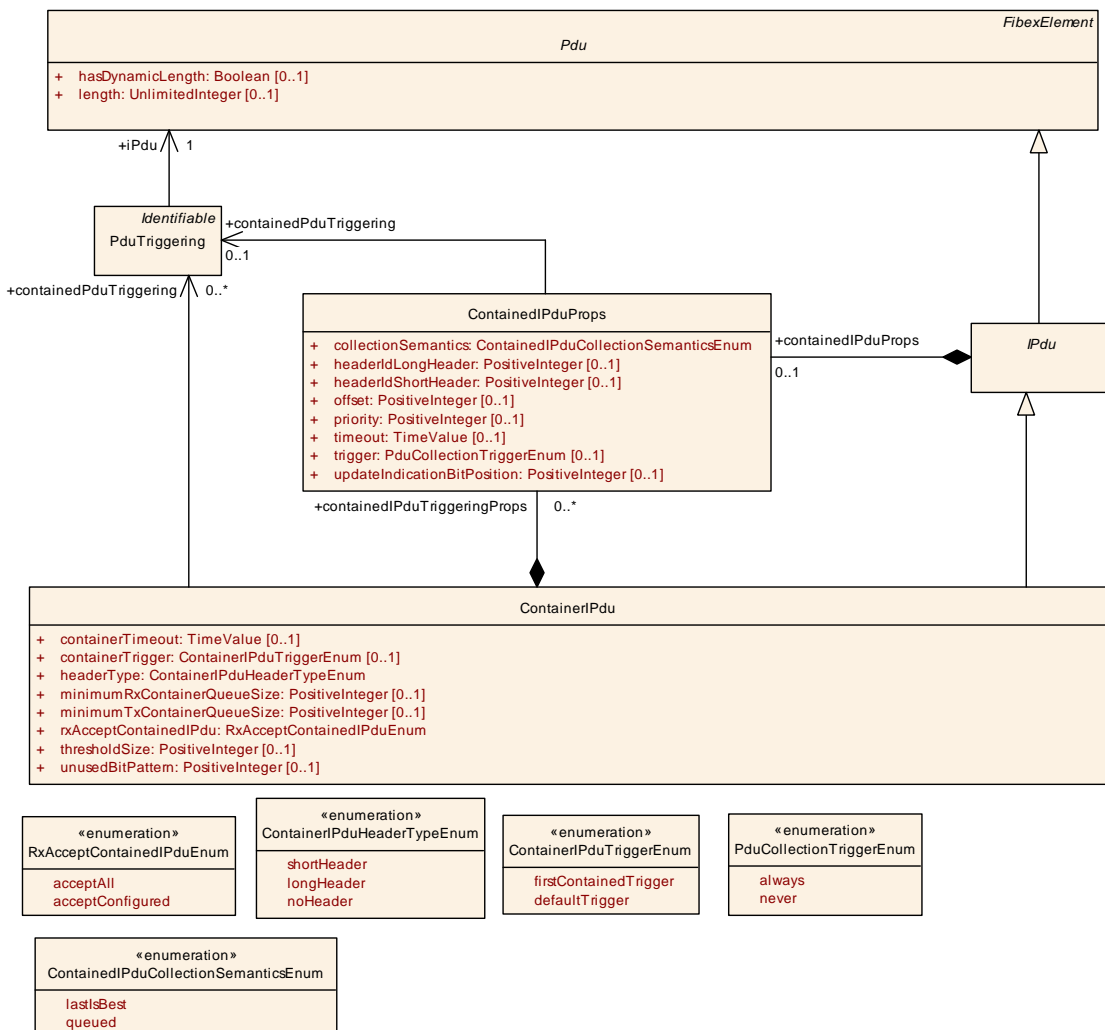

**Figure 6.13: ContainerIPdu with ContainedIPduProps**

<b>Class</b>	<b>ContainerIPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Allows to collect several IPdus in one ContainerIPdu based on the headerType. <b>Tags:</b> atp.recommendedPackage=Pdus			
<b>Base</b>	ARObject, CollectableElement, FibexElement, IPdu, Identifiable, MultilanguageReferrable, PackageableElement, Pdu, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
containedIPdu TriggeringProps	ContainedIPduProps	*	aggr	Defines properties for an IPdu that is part of the ContainerIPdu.
containedPdu Triggering	PduTriggering	*	ref	This PduTriggering shall be collected inside the Container IPdu.
container Timeout	TimeValue	0..1	attr	When this timeout expires the ContainerIPdu is sent out. The respective timer is started when the first Ipdu is put into the ContainerIPdu. This attribute is ignored on receiver side.
containerTrigger	ContainerIPduTriggerEnum	0..1	attr	Defines if the transmission of the ContainerIPdu shall be requested right after the first ContainedIPdu was put into it. This attribute shall be ignored on receiver side.
headerType	ContainerIPduHeaderTypeEnum	1	attr	Defines whether and which header type is used (header id and length).
minimumRx Container QueueSize	PositiveInteger	0..1	attr	This attribute defines the minimum queue size for received containers.
minimumTx Container QueueSize	PositiveInteger	0..1	attr	This attribute defines the minimum queue size for transmitted containers.
rxAccept ContainedIPdu	RxAcceptContainedIPduEnum	1	attr	Defines whether this ContainerIPdu has a fixed set of containedIPdus assigned for reception.
thresholdSize	PositiveInteger	0..1	attr	Defines the size threshold which, when exceeded, triggers the sending of the ContainerIPdu although the maximum Pdu size has not been reached yet. Unit: byte.
unusedBit Pattern	PositiveInteger	0..1	attr	IPduM fills not updated areas of the ContainerPdu with this byte-pattern.

**Table 6.38: ContainerIPdu**

**[constr\_3436] Value range of `minimumTxContainerQueueSize` and `minimumRxContainerQueueSize`** [If defined, the value of `minimumTxContainerQueueSize` and `minimumRxContainerQueueSize` shall be in the range of 0..255.]()

<b>Enumeration</b>	<b>ContainerIPduTriggerEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	Defines when the transmission of the ContainerIPdu shall be requested.
<b>Aggregated by</b>	ContainerIPdu.containerTrigger
<b>Literal</b>	<b>Description</b>
defaultTrigger	Defines that the transmission of the ContainerIPdu shall be requested when the default trigger conditions apply (e.g. timeout of threshold). <b>Tags:</b> atp.EnumerationLiteralIndex=0
firstContained Trigger	Defines that the transmission of the ContainerIPdu shall be requested right after the first Contained IPdu was put into the ContainerIPdu. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.39: ContainerIPduTriggerEnum**

<b>Enumeration</b>	<b>ContainerIPduHeaderTypeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	Is used to define the header type and size of ContainerIPdus. The header size includes the header id and the length information.
<b>Aggregated by</b>	<a href="#">ContainerIPdu.headerType</a>
<b>Literal</b>	<b>Description</b>
longHeader	Header size is 64 bit: <ul style="list-style-type: none"> <li>Header Id 32 bit</li> <li>Dlc 32 bit</li> </ul> <b>Tags:</b> atp.EnumerationLiteralIndex=0
noHeader	No Header is used and the location of each containedPdu in the ContainerPdu is statically configured. <b>Tags:</b> atp.EnumerationLiteralIndex=2
shortHeader	Header size is 32 bit: <ul style="list-style-type: none"> <li>Header Id 24 bit</li> <li>Dlc 8 bit.</li> </ul> <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.40: ContainerIPduHeaderTypeEnum**

<b>Enumeration</b>	<b>RxAcceptContainedIPduEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	Defines whether this ContainerIPdu has a fixed set of containedIPdus assigned for reception.
<b>Aggregated by</b>	<a href="#">ContainerIPdu.rxAcceptContainedIPdu</a>
<b>Literal</b>	<b>Description</b>
acceptAll	No fixed set of containedIPdus is defined for reception, any known containedIPdu (based on header Id) shall be expected within this ContainerIPdu. <b>Tags:</b> atp.EnumerationLiteralIndex=0
acceptConfigured	A fixed set of containedIPdus is defined for reception. Only these assigned containedIPdus (based on headerId) are expected in this ContainerIPdu. If a not assigned containedIPdu is received within this ContainerIPdu this containedIPdu is discarded. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.41: RxAcceptContainedIPduEnum**

<b>Class</b>	<b>ContainedIPduProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Defines the aspects of an IPdu which can be collected inside a ContainerIPdu.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">ContainerIPdu.containedIPduTriggeringProps</a> , <a href="#">IPdu.containedIPduProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
collection Semantics	<a href="#">ContainedIPduCollectionSemanticsEnum</a>	1	attr	Defines whether this ContainedIPdu shall be collected using a last-is-best or queued semantics.
containedPdu Triggering	<a href="#">PduTriggering</a>	0..1	ref	Reference to Pdu for which the ContainedIPduProps are valid.
headerIdLong Header	PositiveInteger	0..1	attr	Defines the header id this IPdu shall have in case this IPdu is put inside a ContainerIPdu with headerType = longHeader.





Class	ContainedIPduProps			
headerIdShortHeader	PositiveInteger	0..1	attr	Defines the header id this IPdu shall have in case this IPdu is put inside a ContainerIPdu with headerType = shortHeader.
offset	PositiveInteger	0..1	attr	Byte offset that describes the location of the Contained Pdu in the ContainerPdu if no header is used.
priority	PositiveInteger	0..1	attr	Defines a priority of a ContainedTxPdu. 255 represents the lowest priority and 0 represent the highest priority.
timeout	TimeValue	0..1	attr	Defines a IPdu specific sender timeout which can reduce the ContainerIPdu timer when this containedIPdu is put inside the ContainerIPdu. This attribute is ignored on receiver side.
trigger	PduCollectionTrigger Enum	0..1	attr	Defines whether this IPdu does trigger the sending of the ContainerIPdu. This attribute is ignored on receiver side.
updateIndicationBitPosition	PositiveInteger	0..1	attr	The updateIndicationBit specifies the bit location of ContainedIPdu Update-Bit in the Container PDU. It indicates to the receivers that the ContainedIPdu in the ContainerIPdu was updated.

**Table 6.42: ContainedIPduProps**

**[constr\_5268] Existence of ContainedIPduProps.containedPduTriggering reference** [If a ContainedIPduProps is aggregated at the ContainerIPdu in the role ContainerIPdu.containedIPduTriggeringProps then the reference ContainedIPduProps.containedPduTriggering shall exist.]()

**[constr\_5269] Exclusion of ContainedIPduProps.containedPduTriggering reference** [If a ContainedIPduProps is aggregated at the IPdu in the role IPdu.containedIPduProps then the reference ContainedIPduProps.containedPduTriggering shall NOT exist.]()

**[constr\_5270] Exclusive usage of ContainerIPdu.containedPduTriggering and ContainerIPdu.containedIPduTriggeringProps** [A ContainerIPdu shall only have either ContainerIPdu.containedPduTriggering OR ContainerIPdu.containedIPduTriggeringProps defined.]()

Note: [constr\_5270] implies that a ContainerIPdu can define its contained PduTriggerings either directly via ContainerIPdu.containedPduTriggering or indirectly via ContainerIPdu.containedIPduTriggeringProps.

**[TPS\_SYST\_02372] Precedence of ContainedIPduProps settings** [If a ContainerIPdu aggregates ContainedIPduProps in the role containedIPduTriggeringProps then any IPdu.containedIPduProps defined at the IPdu which is referenced by the PduTriggering in the role ipdu shall be ignored.]()

Note: [TPS\_SYST\_02372] applies to the ContainedIPduProps as a whole. This means that it is NOT supported to just define a sub-set of attributes in the ContainerIPdu.containedIPduTriggeringProps and take missing attributes from the IPdu.containedIPduProps.

<b>Enumeration</b>	<b>ContainedIPduCollectionSemanticsEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	Defines the collection semantics for ContainedIPdus.
<b>Aggregated by</b>	<a href="#">ContainedIPduProps.collectionSemantics</a>
<b>Literal</b>	<b>Description</b>
lastIsBest	The ContainedIPdu data will be fetched via TriggerTransmit just before the transmission executes. <b>Tags:</b> atp.EnumerationLiteralIndex=0
queued	The ContainedIPdu data will instantly be stored to the ContainerIPdu in the context of the Transmit API. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.43: ContainedIPduCollectionSemanticsEnum**

<b>Enumeration</b>	<b>PduCollectionTriggerEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances
<b>Note</b>	Defines whether a Pdu contributes to the triggering of the data transmission if Pdu collection is enabled.
<b>Aggregated by</b>	<a href="#">ContainedIPduProps.trigger</a> , <a href="#">SocketConnectionIpduIdentifier.pduCollectionTrigger</a> , <a href="#">SoConIPduIdentifier.pduCollectionTrigger</a>
<b>Literal</b>	<b>Description</b>
always	Pdu will trigger the transmission of the data. <b>Tags:</b> atp.EnumerationLiteralIndex=0
never	Pdu will be buffered and will not trigger the transmission of the data. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.44: PduCollectionTriggerEnum**

**[TPS\_SYST\_02062] Allowed [ContainedIPduProps.headerIdLongHeader](#) and [ContainedIPduProps.headerIdShortHeader](#) values** [[ContainedIPduProps.headerIdLongHeader](#) and [ContainedIPduProps.headerIdShortHeader](#) shall be restricted to values different from 0 (all bits of the value set to 0).] ([RS\\_SYST\\_00055](#))

Since the header information is larger than 8 bit the byte ordering of the header inside the [ContainerIPdu](#) needs to be defined. This is done at System level. Thus all [ContainerIPdus](#) have the header information in the same byte order within one System.

**[TPS\_SYST\_02063] Byte order of [ContainerIPdu](#) header information** [The [System.containerIPduHeaderByteOrder](#) defines in which byte order the header information shall be put into the [ContainerIPdu](#).] ([RS\\_SYST\\_00055](#))

**[constr\_3140] No [ByteOrderEnum.opaque](#) allowed for [System.containerIPduHeaderByteOrder](#)** [The values of [System.containerIPduHeaderByteOrder](#) are restricted to [ByteOrderEnum.mostSignificantByteFirst](#) and [ByteOrderEnum.mostSignificantByteLast](#). I.e. the value [ByteOrderEnum.opaque](#) is not allowed.] ()

The following assumptions lead to the modeling of the [ContainerIPdu](#) structure:

- **[TPS\_SYST\_02097] Basic definition of contained IPdus** [Every [IPdu](#) for which:

- `IPdu.containedIPduProps` are defined or
- the `PduTriggering` is referenced in the role `containedIPduTriggeringProps`

can be collected inside a `ContainerIPdu`.] (*RS\_SYST\_00055*)

- **[TPS\_SYST\_02098] Header id and header type of a contained IPdu** [A contained `IPdu` shall always have the same headerId per header type (long or short header), regardless in which `ContainerIPdu` it is collected. If `noHeader` is set then the contained `IPdu` does not need to have a headerId.] (*RS\_SYST\_00055*)
- **[TPS\_SYST\_02099] Relation between ContainerIPdu and contained PduTriggerings on sender side** [In the scope of one `EcuInstance` a `PduTriggering` that has a reference to an `IPduPort` with direction OUT shall be referenced either
  - by a `ContainerIPdu` in the role `containedPduTriggering` or
  - `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering`

at most once.] (*RS\_SYST\_00055*)

- **[TPS\_SYST\_02100] Relation between ContainerIPdu and contained IPdus on receiver side** [On receiver side, it is not necessarily required to statically define which `IPdus` may be contained inside a `ContainerIPdu` if the header mode is used. Thus it would be possible to update the senders of `ContainerIPdus` and put different or additional `IPdus` inside.] (*RS\_SYST\_00055*)

The `ContainerIPdu` defines which `IPdus` may be collected inside that `ContainerIPdu` (`ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering`). Dynamic assignment of a contained `IPdu` to different `ContainerIPdus` during run-time is not supported by the `IPdu` multiplexer. Nevertheless it is allowed to collect an `IPdu` in several `ContainerIPdus` since each of those `ContainerIPdus` can be transmitted individually (on the same or on a different `PhysicalChannel`).

If a `ContainerIPdu` is transmitted on different `PhysicalChannels` this can be described in a System Description by a single `Pdu` element that is referenced by `PduTriggerings` of the different `PhysicalChannels`.

The content of the `ContainerIPdu` is described by `PduTriggerings` that are referenced in the role `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering`. Please note that although the contained `PduTriggerings` will also be transmitted on the same `PhysicalChannels` as the `ContainerIPdu` it is completely sufficient that the contained `PduTriggerings` that are contained in the `ContainerIPdu` are aggregated by one of the `PhysicalChannels` on which the `ContainerIPdu` will be transmitted. It is irrelevant which `PduTriggerings` of which `PhysicalChannels` are chosen to describe the content of the `ContainerIPdu` since the assignment of

the `ContainerIPdu` to `PhysicalChannels` is done only by the `PduTriggerings` that are pointing to the `ContainerIPdu`.

The reason for this modeling is the configuration of the PduR. One use case in the PduR is the enabling and disabling of Pdus by `PdurIPduGroups`. The `PdurIPduGroup` works on `PduTriggerings` and there is also the use case to enable/disable the `ContainedIPdus` in the PduR.

**[constr\_3141] Only IPdus shall be part of a ContainerIPdu** [The `PduTriggering` which is referenced in the role `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` shall refer to a subclass of an `IPdu` in the role `PduTriggering.iPdu`.]()

Only subclasses of `IPdus` are handled by the PduR and therefore are available for the `ContainerIPdu`.

For the sender side this assignment defines which `IPdus` may be collected inside this `ContainerIPdu`. For the receiver side this assignment may be omitted if `ContainerIPdu.rxAcceptContainedIPdu` is set to `RxAcceptContainedIPduEnum.acceptAll`.

**[TPS\_SYST\_02064] Reception acceptance of contained IPdus** [`ContainerIPdu.rxAcceptContainedIPdu` defines for the receiver side whether the list of `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` is a closed set.

If `ContainerIPdu.rxAcceptContainedIPdu = RxAcceptContainedIPduEnum.acceptConfigured`, only those `IPdus` (based on `headerId`) which are referenced by this `ContainerIPdu` in the role `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` are extracted from this `ContainerIPdu`.

If `ContainerIPdu.rxAcceptContainedIPdu = RxAcceptContainedIPduEnum.acceptAll`, the `IPdus` (based on `headerId`) which are referenced by this `ContainerIPdu` in the role `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` are expected inside this `ContainerIPdu` but also any other `IPdu` is extracted which is referenced by any other `ContainerIPdu.rxAcceptContainedIPdu` with `RxAcceptContainedIPduEnum.acceptAll` set.](*RS\_SYST\_00055*)

Thus all referenced `IPdus` which are referenced from `ContainerIPdu.rxAcceptContainedIPdu` with `RxAcceptContainedIPduEnum.acceptAll` form the set of `IPdus` which are considered for the reception of ANY `ContainerIPdu` with `ContainerIPdu.rxAcceptContainedIPdu = RxAcceptContainedIPduEnum.acceptAll`.

For the receiver side `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` may be



omitted if `ContainerIPdu.rxAcceptContainedIPdu` is set to `RxAcceptContainedIPduEnum.acceptAll`. Such a `ContainerIPdu` will accept any of the contained `IPdus` from the `acceptAll` `IPdu` set if they have the headerId (`headerIdShortHeader` or `headerIdLongHeader`) defined by the `ContainerIPdu.headerType` configured.

There are use-cases where several `IPdus` with identical content are transported on the vehicle networks. One motivation to design the communication structure like this is that the communication timing attributes may be different and thus need to be represented by different `ISignalIPdus` (i.e. different `ISignalIPdu.ipduTimingSpecification`, e.g. to support the transmission on Can and Fr networks with different transmission modes). When the content of the `IPdus` is identical they can be transported using the same header Id. Thus it is transparent for the receiver via which channel a specific `IPdu` arrived in case of `ContainerIPdu` with `acceptAll` setting.

In such a setup it may occur that several `PduTriggerings` for `IPdus` with identical header IDs are defined as candidates for the set of `IPdus` which are considered for the reception of `acceptAll` `ContainerIPdus`. This is considered a valid setup and shall be resolved during derivation to ECU Configuration.

The Ecu Configuration for `ContainerIPdu.rxAcceptContainedIPdu = acceptAll` uses a set of Contained Rx Pdus without a relation to Container Pdus. This set is defined during derivation of the Ecu Configuration from the System Description. If duplicates occur they are only included once in the set of Contained Rx Pdus.

In such a case there is additional information required to select which of these `PduTriggerings` shall be taken for the configuration and which shall be omitted.

**[TPS\_SYST\_02196] `PduTriggering` is referenced by several `ContainerIPdus`** [In case a `PduTriggering` is referenced in the role `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` by several `ContainerIPdus` with `ContainerIPdu.rxAcceptContainedIPdu = RxAcceptContainedIPduEnum.acceptAll` and has a reference to an `IPduPort` with direction IN then this `PduTriggering` shall only be considered once for the set of `IPdus` which are considered for the reception of `acceptAll` `ContainerIPdus`.] (*RS\_SYST\_00055*)

**[constr\_3403] Usage of `ContainerIPdu.rxAcceptContainedIPdu` if `noHeader` is used** [If the `ContainerIPdu.headerType` is set to `noHeader` then the `ContainerIPdu.rxAcceptContainedIPdu` attribute value shall be set to `acceptConfigured`.] ()

**[TPS\_SYST\_03014] Transmission triggering by the first contained `IPdu` put into a `ContainerIPdu`** [The attribute `ContainerIPdu.containerTrigger` determines whether the transmission of a `ContainerIPdu` shall be requested when the first contained `IPdu` was put into the `ContainerIPdu`.

In case `containerTrigger` equals `firstContainedTrigger` the transmission of the `ContainerIPdu` shall be requested when the first contained `IPdu` is put into the `ContainerIPdu`.



In case `containerTrigger` equals `defaultTrigger` the transmission of the `ContainerIPdu` shall be requested when the other trigger conditions defined by the `ContainerIPdu` are fulfilled (e.g. `containerTimeout`, `thresholdSize`).] (*RS\_SYST\_00055*)

Note: This trigger condition is independent from `PduCollectionTriggerEnum.always` which is defined for specific `IPdus`. With the attribute `ContainerIPdu.containerTrigger = firstContainedTrigger` on the other hand, any contained `IPdu` will trigger the `ContainerIPdu` transmission.

Rationale for this trigger condition is the efficient usage (allow the `ContainerIPdus` to reach a certain fill level) of triggered transmission on time- (`containerTrigger` typically set to `firstContainedTrigger`) and event-driven (`containerTrigger` typically set to `defaultTrigger`) buses.

The `ContainedIPduProps` defines a header `Id` per `ContainerIPdu.headerType` which shall be used in the Pdu header of the `ContainerIPdu` in case that the `headerType` is set to `shortHeader` or `longHeader`. In case that the `headerType` is set to `noHeader` the layout of `IPdus` in the `ContainerIPdu` is statically configured and no header `Id` is required.

**[constr\_3454] Unique `headerIdLongHeader` for `acceptConfigured`** [For a `ContainerIPdu` with `ContainerIPdu.rxAcceptContainedIPdu = RxAcceptContainedIPduEnum.acceptConfigured` and `ContainerIPdu.headerType = longHeader` the following shall apply: All referenced `IPdus` (via `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering`) shall have a unique `ContainedIPduProps.headerIdLongHeader` within the scope of this `ContainerIPdu`.] ()

**[constr\_3455] Unique `headerIdShortHeader` for `acceptConfigured`** [For a `ContainerIPdu` with `ContainerIPdu.rxAcceptContainedIPdu = RxAcceptContainedIPduEnum.acceptConfigured` and `ContainerIPdu.headerType = shortHeader` the following shall apply: All referenced `IPdus` (via `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering`) shall have a unique `ContainedIPduProps.headerIdShortHeader` within the scope of this `ContainerIPdu`.] ()

Note: With **[constr\_3454]** and **[constr\_3455]** it is possible to have the same header `Id` value received in different `ContainerIPdus`. It just has to be guaranteed that in the scope of one `ContainerIPdu` the reception of header `Id` is unambiguous.

**[constr\_3142] Mandatory `headerIdLongHeader` for `longHeader`** [For each `IPdu` which is assigned to a `ContainerIPdu` in the role `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` with `ContainerIPdu.headerType = longHeader` the `ContainedIPduProps.headerIdLongHeader` shall be defined.] ()

**[constr\_3143] Mandatory `headerIdShortHeader` for `shortHeader`** [For each `IPdu` which is assigned to a `ContainerIPdu` in the role `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps`.

`containedPduTriggering` with `ContainerIPdu.headerType = shortHeader` the `ContainedIPduProps.headerIdShortHeader` shall be defined.>()

**[constr\_3402] Mandatory `offset` if `noHeader` is used** [For each `IPdu` which is assigned to a `ContainerIPdu` in the role `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` with `ContainerIPdu.headerType = noHeader` the `ContainedIPduProps.offset` shall be defined.]()

**[constr\_3404] Usage of `ContainedIPduProps.updateIndicationBitPosition`** [`ContainedIPduProps.updateIndicationBitPosition` is only allowed to be set to a value if the `headerType` of the `ContainerIPdu` that contains the `IPdu` with `ContainerIPdu.containedPduTriggering` or `ContainerIPdu.containedIPduTriggeringProps.containedPduTriggering` is set to `noHeader`.]()

**[constr\_3405] Dynamic Length `IPdu` inside of a static configured `ContainerIPdu`** [Only the last contained `IPdu` (according to the `ContainedIPduProps.offset`) of a `ContainerIPdu` with static container layout (i.e., a `ContainerIPdu` with `headerType` set to `noHeader`) is allowed to be a dynamic length `IPdu` (i.e., a contained `IPdu` that at runtime may exhibit a length different from the one statically configured via `Pdu.length` of the respective `Pdu`). All other contained `IPdus` of a `ContainerIPdu` with static container layout have to be static length `IPdus`.]()

**[TPS\_SYST\_02065] Contained `IPdu` specific transmission timeout** [The `IPdu` specific transmission timeout can be specified at `ContainedIPduProps.timeout`. If no `ContainedIPduProps.timeout` is provided the timeout from the `ContainerIPdu` shall be used (`ContainerIPdu.containerTimeout`).](*RS\_SYST\_00055*)

The case where neither the `ContainerIPdu.containerTimeout` nor the `ContainedIPduProps.timeout` is provided, will result in no time-based triggering of `ContainerIPdus` which might lead to long delays or no transmission at all if no other sending condition for this `ContainerIPdu` does occur (e.g. no further `IPdu` is collected inside this `ContainerIPdu`).

**[TPS\_SYST\_02066] `ContainerIPdu.thresholdSize`** [The attribute `ContainerIPdu.thresholdSize` defines the threshold when a `ContainerIPdu` shall be triggered for transmission. If the payload size of the `ContainerIPdu` exceeds the value of `thresholdSize` this `ContainerIPdu` shall be transmitted.](*RS\_SYST\_00055*)

Note: The `ContainerIPdu.thresholdSize` supports the definition of a transmission threshold which takes the data transmission model of the communication into account. Especially when operating with variable length `IPdus`, only the maximum length of these `IPdus` is defined in the System Description. Only having the `maxLength` information it is not possible to derive a sensible threshold for the `ContainerIPdu` this variable length `IPdu` is collected in. Thus a `ContainerIPdu` would wait for further contained `IPdus`. Using a transmission model it can be calculated that the average

size contained `IPdu` will not fit into that `ContainerIPdu` anymore and provide this as a requirement in `ContainerIPdu.thresholdSize`.

Another use case for the `ContainedIPduProps` is to support the usage of optimized trigger transmit collection of `IPdus` in `ContainerIPdu`. Therefore it is necessary to distinguish between contained `IPdus` with `lastIsBest` (will be fetched via trigger transmit just before the transmission executes) and those with `queued` semantics (will instantly be stored in the context of the transmit API). This distinction is possible on the level of single contained `IPdus` with the attribute `collectionSemantics`.

For all intents and purposes, the different handling of contained `IPdus` depending on the semantics is supported by the attribute `ContainedIPduProps.collectionSemantics` that allows the individual setting of the intended semantics per contained `IPdu`.

**[constr\_3517] Consistent setting of `ContainedIPduProps.collectionSemantics` in the context of one `ContainerIPdu`** [The value of the attribute `ContainedIPduProps.collectionSemantics` shall be identical for all contained `IPdus` within the context of a given `ContainerIPdu`.]()

**[constr\_3144] Mandatory `IPdu.containedIPduProps` for contained `IPdus`** [For each `IPdu` which is assigned to a `ContainerIPdu` in the role `ContainerIPdu.containedPduTriggering` the `IPdu.containedIPduProps` shall be defined.]()

`ContainedIPduProps` is optional and may be ignored in case the `IPdu` is not mapped into a `ContainerIPdu`. A use-case is that an `IPdu` is fan-out in the `PduR` and one `PduTriggering` is part of a `ContainerIPdu` while the other `PduTriggering` is directly transported via a bus interface.

Another case where `ContainedIPduProps` aggregated at the `IPdu` are ignored is described in [TPS\_SYST\_02372].

**[constr\_3488] Value range of `ContainedIPduProps.priority`** [If defined, the value of `ContainedIPduProps.priority` shall be in the range of 0..255.]()

**[constr\_3489] `ContainedIPduProps.priority` is only applicable if a `ContainerIPdu` header is used** [`ContainedIPduProps.priority` is only applicable if the `headerType` of the `ContainerIPdu` is set to `shortHeader` or `longHeader`.]()

**[constr\_3490] `ContainedIPduProps.priority` is only applicable if `collectionSemantics` is set to `lastIsBest`** [`ContainedIPduProps.priority` is only applicable if `ContainedIPduProps.collectionSemantics` is set to `lastIsBest`.]()

### 6.3.2 SecuredIPdu

AUTOSAR supports an authentication mechanism for critical data on the level of `Pdus`.

[TPS\_SYST\_02060] **SecuredIPdus** [SecuredIPdu shall be used to describe an IPdu that is protected against unauthorized manipulation and replay attacks.] (RS\_SYST\_00054)

Please note that several SecuredIPdus may exist with the same dataId value since the same data may be transported on different channels.

[TPS\_SYST\_02148] **Meaning of useAsCryptographicIPdu that is not set or set to false** [If useAsCryptographicIPdu is not set or set to false the SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information (Freshness Counter and an Authenticator).] (RS\_SYST\_00054)

[TPS\_SYST\_02149] **Meaning of useAsCryptographicIPdu that is set to true** [If useAsCryptographicIPdu is set to true the SecuredIPdu contains the Authenticator for a payload that is transported in a separate message. The separate Authentic IPdu is described by the PduTriggering that is referenced with the payload reference.] (RS\_SYST\_00054)

The attribute useAsCryptographicIPdu decides whether one single Pdu or two Pdus are transferred on the communication bus. In either case always two IPdus shall be modeled:

- SecuredIPdu with a PduTriggering
- payload IPdu with a PduTriggering

[TPS\_SYST\_02172] **Modeling of SecuredIPdu in case useAsCryptographicIPdu is set to false** [If the useAsCryptographicIPdu is set to false only the SecuredIPdu shall be either

- mapped into a Frame by the PduToFrameMapping or
- mapped into a StaticSocketConnection or
- assigned to an AbstractServiceInstance via PduActivationRoutingGroup that references the SoConIPduIdentifier that represents the SecuredIPdu or
- assigned to a ContainerIPdu.

] (RS\_SYST\_00054)

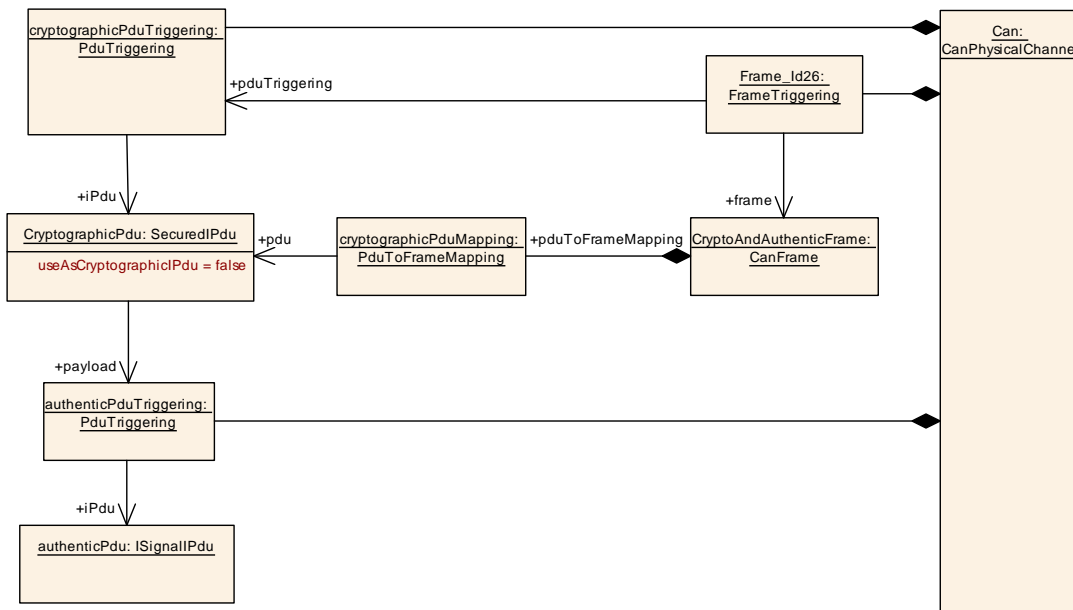


Figure 6.14: Example for the modeling of **SecuredIPdu** with **useAsCryptographicIPdu** set to false

If a **SecuredIPdu** is transmitted on different **PhysicalChannels** this can be described in a System Description by a single **SecuredIPdu** element that is referenced by **PduTriggerings** of the different **PhysicalChannels**.

The payload of the **SecuredIPdu** is described by exactly one **PduTriggering** that is referenced in the role **payload**. Please note that although the payload **PduTriggering** will also be transmitted on the same **PhysicalChannels** as the **SecuredIPdu** it is completely sufficient that the payload **PduTriggering** that is referenced by the **SecuredIPdu** is aggregated by one of the **PhysicalChannels** on which the **SecuredIPdu** is transmitted. It is irrelevant which **PduTriggering** of which **PhysicalChannel** is chosen to describe the payload of the **SecuredIPdu** since the assignment of the **SecuredIPdu** to **PhysicalChannels** is done only by the **PduTriggerings** that are pointing to the **SecuredIPdu**.

The reason for this modeling is the configuration of the PduR. One use case in the PduR is the enabling and disabling of Pdus by **PdurIPduGroups**. The **PdurIPduGroup** works on **PduTriggerings** and there is also the use case to enable/disable the **SecuredIPdus** in the PduR.

**[TPS\_SYST\_02173] Modeling of SecuredIPdu in case useAsCryptographicIPdu is set to true** [If the **useAsCryptographicIPdu** is set to true then the **SecuredIPdu** and the **payload IPdu** shall be either

- mapped into **Frames** by the **PduToFrameMapping** or
- assigned to **StaticSocketConnection** or
- assigned to **AbstractServiceInstances** via **PduActivationRoutingGroup** that references the **SoConIPduIdentifiers** that represent the **SecuredIPdu** and the **payload IPdu** or

- assigned to `ContainerIPdu`.

](RS\_SYST\_00054)


**[constr\_5259] PduTriggerings and FrameTriggerings of SecuredIPdu with useAsCryptographicIPdu = true** [In case that a `SecuredIPdu` is defined with `useAsCryptographicIPdu = true` as described by [TPS\_SYST\_02173] then:

- the `PduTriggering` of the `AuthenticPdu`
- the `PduTriggering` of the `CryptographicPdu`
- the `FrameTriggering` that references the `Frame` to which the `AuthenticPdu` is mapped
- the `FrameTriggering` that references the `Frame` to which the `CryptographicPdu` is mapped

shall be aggregated by the same `PhysicalChannel`.]()

**[TPS\_SYST\_02361] PduR Fan-out of SecuredIPdu with useAsCryptographicIPdu = true** [If a `PduR` fan-out of a `SecuredIPdu` with `useAsCryptographicIPdu = true` is defined then [constr\_5259] shall be considered on all `PhysicalChannels` on which the `SecuredIPdu` is transmitted.]()

In other words the `PduTriggerings` of the `AuthenticPdu` and the `CryptographicPdu` and the `FrameTriggerings` that reference the `Frames` to which the `AuthenticPdu` and `CryptographicPdu` are mapped need to be defined on all `PhysicalChannels` on which the `SecuredIPdu` is transmitted.

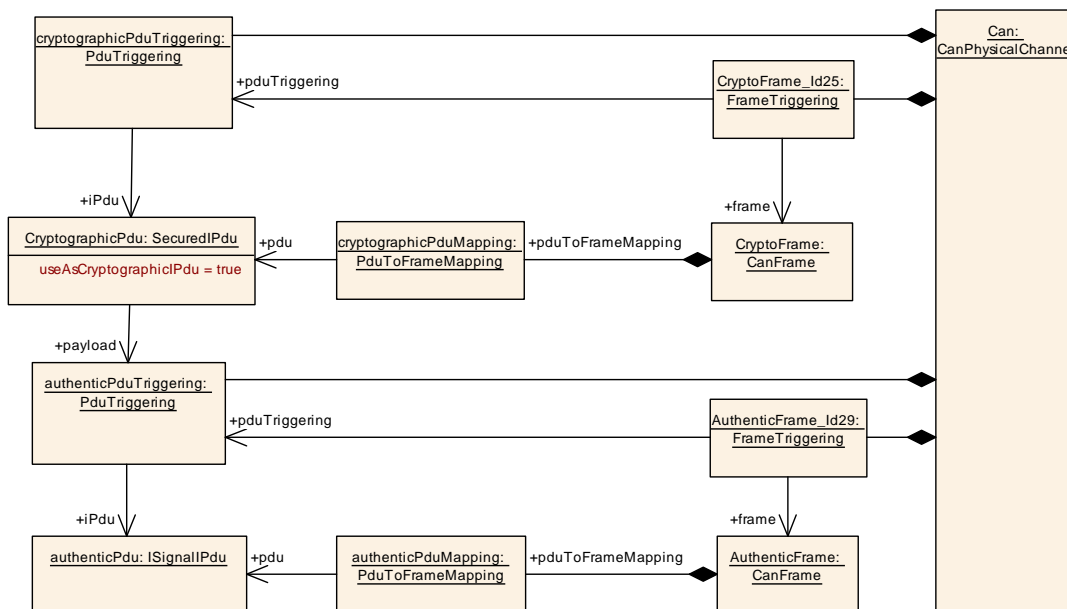


**Figure 6.15: Example for the modeling of `SecuredIPdu` with `useAsCryptographicIPdu` set to true**

Please note that [TPS\_SYST\_02059] defines that the `PduTriggerings` of the `SecuredIPdu` and `PduTriggerings` of the payload `IPdu` shall both reference `IPduPorts`.

A `SecuredIPdu` defines freshness properties by referencing the reusable `SecureCommunicationFreshnessProps` in the role `freshnessProps`. The authentication properties are defined by reusable `SecureCommunicationAuthenticationProps` that are referenced in the role `authenticationProps`. Configuration settings that are specific to the `SecuredIPdu` are defined in `SecureCommunicationProps`.

Please note that if the `SecuredIPdu` does not reference the `SecureCommunicationFreshnessProps` in the role `freshnessProps` the freshness value will not be included in the `SecuredIPdu`.

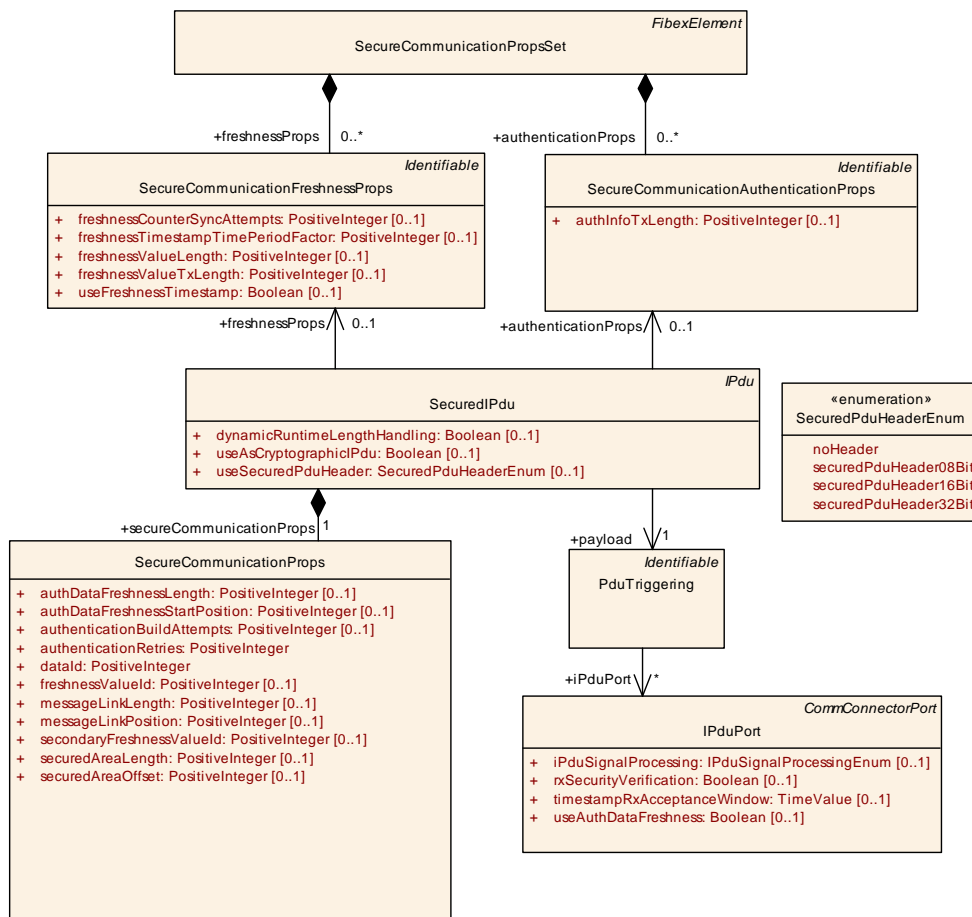

**Figure 6.16: SecuredIPdu with SecureCommunicationProps**



<b>Class</b>	<b>SecuredIPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	<p>If useAsCryptographicPdu is not set or set to false this IPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information (Freshness Counter and an Authenticator).</p> <p>If useAsCryptographicPdu is set to true this IPdu contains the Authenticator for a payload that is transported in a separate message. The separate Authentic IPdu is described by the Pdu that is referenced with the payload reference from this SecuredIPdu.</p> <p><b>Tags:</b>atp.recommendedPackage=Pdus</p>			
<b>Base</b>	ARObject, CollectableElement, FibexElement, IPdu, Identifiable, MultilanguageReferrable, PackageableElement, Pdu, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
authentication Props	<a href="#">SecureCommunication AuthenticationProps</a>	0..1	ref	Reference to authentication properties that are valid for this SecuredIPdu.
dynamic RuntimeLength Handling	Boolean	0..1	attr	<p>Defines whether the length information for handling this SecuredIPdu with SecuredIPdu.useSecuredPdu Header=noHeader is taken from the configuration or from the actually provided length information during runtime.</p> <p>true: SecuredIPdu length information is taken from the actually provided length information during runtime.</p> <p>false: SecuredIPdu length information is taken from the configuration.</p>
freshnessProps	<a href="#">SecureCommunication FreshnessProps</a>	0..1	ref	Reference to freshness properties that are valid for this SecuredIPdu.
payload	<a href="#">PduTriggering</a>	1	ref	Reference to a Pdu that will be protected against unauthorized manipulation and replay attacks.
secure Communication Props	<a href="#">SecureCommunication Props</a>	1	aggr	Specific configuration properties for this SecuredIPdu.
useAs Cryptographic IPdu	Boolean	0..1	attr	<p>If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data.</p> <p>If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.</p>
useSecuredPdu Header	<a href="#">SecuredPduHeader Enum</a>	0..1	attr	This attribute defines the size of the header which is inserted into the SecuredIPdu. If this attribute is set to anything but noHeader, the SecuredIPdu contains the Secured I-PDU Header to indicate the length of the AuthenticIPdu. The AuthenticIPdu contains the original payload, i.e. the secured data.

**Table 6.45: SecuredIPdu**

<b>Enumeration</b>	<b>SecuredPduHeaderEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	Defines the header which will be inserted into the SecuredIPdu.
<b>Aggregated by</b>	<a href="#">SecuredIPdu.useSecuredPduHeader</a>
<b>Literal</b>	<b>Description</b>
noHeader	No header included in the SecuredPdu.
	<b>Tags:</b> atp.EnumerationLiteralIndex=0







Enumeration	SecuredPduHeaderEnum
securedPduHeader08Bit	8 Bit Secured I-PDU Header included in the Secured I-PDU. <b>Tags:</b> atp.EnumerationLiteralIndex=1
securedPduHeader16Bit	16 Bit Secured I-PDU Header included in the Secured I-PDU. <b>Tags:</b> atp.EnumerationLiteralIndex=2
securedPduHeader32Bit	32 Bit Secured I-PDU Header included in the Secured I-PDU. <b>Tags:</b> atp.EnumerationLiteralIndex=3

**Table 6.46: SecuredPduHeaderEnum**

Class	SecureCommunicationProps			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	This meta-class contains configuration settings that are specific for an individual SecuredIPdu.			
Base	ARObject			
Aggregated by	<a href="#">SecuredIPdu.secureCommunicationProps</a>			
Attribute	Type	Mult.	Kind	Note
authDataFreshnessLength	PositiveInteger	0..1	attr	This attribute defines the length in bits of the authentic PDU data that is passed to the SWC that verifies and generates the Freshness.
authDataFreshnessStartPosition	PositiveInteger	0..1	attr	This value determines the start position in bits of the Authentic PDU that shall be passed on to the SWC that verifies and generates the Freshness. The bit counting is done according to TPS_SYST_01068.
authenticationBuildAttempts	PositiveInteger	0..1	attr	This attribute specifies the number of authentication build attempts.
authenticationRetries	PositiveInteger	1	attr	This attribute defines the additional number of authentication attempts that are to be carried out when the generation of the authentication information failed for a given SecuredIPdu. If zero is set than only one authentication attempt is done.
dataId	PositiveInteger	1	attr	This attribute defines a numerical identifier for the Secured I-PDU.
freshnessValueId	PositiveInteger	0..1	attr	This attribute defines the Id of the Freshness Value. The Freshness Value might be a normal counter or a time value.
messageLinkLength	PositiveInteger	0..1	attr	SecOC links an AuthenticIPdu and CryptographicIPdu together by repeating a specific part (Message Linker) of the AuthenticIPdu in the CryptographicIPdu. This attribute defines the length in bits of the messageLinker.
messageLinkPosition	PositiveInteger	0..1	attr	SecOC links an AuthenticIPdu and CryptographicIPdu together by repeating a specific part (Message Linker) of the AuthenticIPdu in the CryptographicIPdu. This attribute defines the startPosition in bits of the messageLinker.
secondaryFreshnessValueId	PositiveInteger	0..1	attr	This attribute defines the Id of the Secondary Freshness Value. The Secondary Freshness Value might be a normal counter or a time value. Please note that this attribute is for documentation only to allow the configuration of required freshness value manager and no upstream mapping is defined for it.
securedAreaLength	PositiveInteger	0..1	attr	This attribute defines the length in bytes of the area within the payload Pdu which will be secured.
securedAreaOffset	PositiveInteger	0..1	attr	This attribute defines the start position (offset in byte) of the area within the payload Pdu which will be secured.

**Table 6.47: SecureCommunicationProps**

`SecureCommunicationProps.freshnessValueId` does not need to be defined in case of a time-based Freshness Value. In case of a counter-based Freshness Value the `freshnessValueId` may be defined locally in the Ecuc or may be provided by the OEM in a System Description (this may be useful if several ECUs need to sync the freshness for a certain `freshnessValueId`).

<b>Class</b>	<b>SecureCommunicationPropsSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Collection of properties used to configure SecuredIPdus. <b>Tags:</b> atp.recommendedPackage=SecureCommunicationPropsSet			
<b>Base</b>	<i>ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
authentication Props	<a href="#">SecureCommunicationAuthenticationProps</a>	*	aggr	Authentication properties used to configure Secured IPdus.
freshnessProps	<a href="#">SecureCommunicationFreshnessProps</a>	*	aggr	Freshness properties used to configure SecuredIPdus.

**Table 6.48: SecureCommunicationPropsSet**

<b>Class</b>	<b>SecureCommunicationFreshnessProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Freshness properties used to configure SecuredIPdus.			
<b>Base</b>	<i>ARObject, Identifiable, MultilanguageReferrable, Referrable</i>			
<b>Aggregated by</b>	<a href="#">SecureCommunicationPropsSet.freshnessProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
freshness CounterSync Attempts	PositiveInteger	0..1	attr	This attribute defines the number of Freshness Counter re-synchronization attempts when a verification failed for a Secured I-PDU. If the value is zero, there will be no additional verification attempt to synchronize with a potentially better fitting Freshness Counter value. This attribute is only applicable if useFreshnessTimestamp is FALSE.
freshness TimestampTime PeriodFactor	PositiveInteger	0..1	attr	This attribute defines a factor that specifies the time period for the Freshness Timestamp. It holds a multiplication factor that specifies the concrete meaning of a Freshness Timestamp increment by one on basis of microseconds.
freshnessValue Length	PositiveInteger	0..1	attr	This attribute defines the complete length in bits of the Freshness Value. As long as the key doesn't change the counter shall not overflow. The length of the counter shall be determined based on the expected life time of the corresponding key and frequency of usage of the counter.
freshnessValue TxLength	PositiveInteger	0..1	attr	This attribute defines the length in bits of the Freshness Value to be included in the payload of the Secured I-PDU. This length is specific to the least significant bits of the complete Freshness Counter. If the attribute is 0 no Freshness Value is included in the Secured I-PDU.
useFreshness Timestamp	Boolean	0..1	attr	This attribute specifies whether the Freshness Value is generated through individual Freshness Counters or by a Timestamps. The value is set to TRUE when Timestamps are used.

**Table 6.49: SecureCommunicationFreshnessProps**

<b>Class</b>	<b>SecureCommunicationAuthenticationProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Authentication properties used to configure SecuredIPdus.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">SecureCommunicationPropsSet.authenticationProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
authInfoTx Length	PositiveInteger	0..1	attr	This attribute defines the length in bits of the authentication code to be included in the payload of the authenticated Pdu.

**Table 6.50: SecureCommunicationAuthenticationProps**

**[TPS\_SYST\_02281] Definition of [SecuredIPdu.authDataFreshnessStartPosition](#)** [[SecuredIPdu.authDataFreshnessStartPosition](#) defines the position of the most significant bit of the Freshness Value in the Pdu.]()

**[TPS\_SYST\_02282] Definition of [SecuredIPdu.messageLinkPosition](#)** [[SecuredIPdu.messageLinkPosition](#) defines the position of the most significant bit of the Message Link in the Pdu.]()

Please note that the bit counting and bit order is defined by [\[TPS\\_SYST\\_01068\]](#) and [\[TPS\\_SYST\\_01069\]](#) and is also valid to determine the position of the `authDataFreshness` and `messageLink`.

**[constr\_3136] Allowed payload of [SecuredIPdus](#)** [[SecuredIPdus](#) are allowed to reference [PduTriggerings](#) of [ISignalIPdus](#), [ContainerIPdus](#), [DcmIPdus](#), [MultiplexedIPdus](#), [GeneralPurposeIPdus](#) with category `SOMEIP_SEGMENTED_IPDU` and [UserDefinedIPdus](#).]()

Please note that it is currently not possible to refer to a [SecuredIPdu](#) in the roles [MultiplexedIPdu.staticPart](#) and [MultiplexedIPdu.dynamicPart](#) and therefore it is not possible to include [SecuredIPdus](#) in either the static part or dynamic part of a [MultiplexedIPdu](#). In other words, a [MultiplexedIPdu](#) can be the payload of a [SecuredIPdu](#), but conversely a [SecuredIPdu](#) cannot become a part of a [MultiplexedIPdu](#).

**[TPS\_SYST\_02171] Secured Area in payload Pdu** [The area within the payload Pdu that is secured is specified by the [securedAreaOffset](#) and [securedAreaLength](#). In case that these two attributes are not configured the complete payload Pdu is secured.]([RS\\_SYST\\_00054](#))

**[constr\_3399] Existence of [securedAreaOffset](#) and [securedAreaLength](#)** [If the [securedAreaOffset](#) is defined then the [securedAreaLength](#) shall be defined as well and vice versa.]()

**[constr\_3716] [SecuredIPdu.dynamicRuntimeLengthHandling](#) for dynamic length Pdus** [If a [PduTriggering](#) is referenced from a [SecuredIPdu](#) in the role `payload` and the Pdu referenced by the [PduTriggering](#) in the role `iPdu` has the attribute [Pdu.hasDynamicLength](#) set to true OR qualifies according to [\[TPS\\_SYST\\_03085\]](#) to be of dynamic length, then the [SecuredIPdu](#) shall have the attribute [SecuredIPdu.dynamicRuntimeLengthHandling](#) set to true.]()

**[constr\_3717] SecuredIPdu.dynamicRuntimeLengthHandling for gateway operation with IPduMapping.pduMaxLength defined** [If a `PduTriggering` refers to a `SecuredIPdu` in the role `iPdu` and that `PduTriggering` is used in an `IPduMapping` where a `pduMaxLength` value is defined (either in the role `IPduMapping.sourceIPdu` or `TargetIPduRef.targetIPdu`), then the `SecuredIPdu` shall have the attribute `SecuredIPdu.dynamicRuntimeLengthHandling` set to `true`.]()

**[constr\_3718] Minimum length of SecuredIPdus** [If a `SecuredIPdu` has the attribute `useAsCryptographicIPdu` set to `false`, then the `length` attribute of that `SecuredIPdu` shall be at least the sum of the `payload Pdu.length` and `SecuredIPdu.authenticationProps.authInfoTxLength`.]()

**[TPS\_SYST\_02152] Security profile** [The Security profile is defined by `SecureCommunicationFreshnessProps.category` and by `SecureCommunicationAuthenticationProps.category`.](*RS\_SYST\_00054*)

**[constr\_3324] Category of SecureCommunicationFreshnessProps and SecureCommunicationAuthenticationProps** [`SecureCommunicationFreshnessProps` that is referenced by a `SecuredIPdu` in the role `freshnessProps` shall have the same `category` value as the `SecureCommunicationAuthenticationProps` that is referenced by the same `SecuredIPdu` in the role `authenticationProps`.]()

**[TPS\_SYST\_02153] Standardized values for the attribute category of meta-class SecureCommunicationFreshnessProps** [The following values of the attribute `category` of meta-class `SecureCommunicationFreshnessProps` are reserved by the AUTOSAR standard: `PROFILE_01`, `PROFILE_02`, `PROFILE_03`.](*RS\_SYST\_00054*)

**[TPS\_SYST\_02154] Standardized values for the attribute category of meta-class SecureCommunicationAuthenticationProps** [The following values of the attribute `category` of meta-class `SecureCommunicationAuthenticationProps` are reserved by the AUTOSAR standard: `PROFILE_01`, `PROFILE_02`, `PROFILE_03`.](*RS\_SYST\_00054*)

**[constr\_3325] SecureCommunicationFreshnessProps, SecureCommunicationAuthenticationProps and CryptoServicePrimitive attribute value settings for standardized AUTOSAR security profiles** [

Attributes	PROFILE_01	PROFILE_02	PROFILE_03
<code>algorithmFamily</code>	CRYPTO_ALGOFAM_AES	CRYPTO_ALGOFAM_AES	CRYPTO_ALGOFAM_AES
<code>algorithmMode</code>	CRYPTO_ALGOMODE_CMAC	CRYPTO_ALGOMODE_CMAC	CRYPTO_ALGOMODE_CMAC
<code>length</code>	128 bits	128 bits	128 bits
<code>authInfoTxLength</code>	24 bits	24 bits	28 bits
<code>freshnessValueLength</code>	Not specified	0 bits	64 bits
<code>freshnessValueTxLength</code>	8 bits	0 bits	4 bits

]()

In other words if you want to define a `SecuredIPdu` in a particular Profile you have to reference the `SecureCommunicationFreshnessProps` and `SecureCommunicationAuthenticationProps` and the `PduTriggering` of this `SecuredIPdu` that shall reference a `SecOcCryptoServiceMapping` that points to `CryptoServicePrimitive` that contributes the authentication Algorithm and the `CryptoServiceKey` that contributes the `length`.

**[constr\_3339] Relation between `authDataFreshnessStartPosition`, `authDataFreshnessLength` and `useAuthDataFreshness`** [If `authDataFreshnessStartPosition` and `authDataFreshnessLength` are set to a value for a `SecuredIPdu` then the `useAuthDataFreshness` shall be set as well to a value on all `IPduPorts` with `communicationDirection` = in that are referenced by a `PduTriggering` of the `SecuredIPdu`.]()

**[TPS\_SYST\_02189] Setting of `useSecuredPduHeader` attribute** [The `useSecuredPduHeader` shall be set to a value other than `noHeader` if the length of the payload `Pdu` is dynamic and is transmitted directly over a network which may insert padding bytes depending on the length (e.g. CANFD, Flexray).] (*RS\_SYST\_00054*)

In case the `SecuredIPdu` is contained in a `ContainerIPdu` or is a TP-N-SDU, its length is correctly passed by the lower layer. In these cases the `SecuredIPduHeader` is not needed.

Please note that the dynamic-length `Pdu` can be an `ISignalIPdu` that contains a `SystemSignal` with `dynamicLength` set to true. In general it is not possible to run diagnostics on fixed-length `Pdus`. Therefore, there is a probability that at least a subset of `DcmIPdus` and `UserDefinedIPdus` can have dynamic length.

**[constr\_3406] All signals before `authDataFreshnessStartPosition` shall have a static length** [In case that

- an `ISignalIPdu` is referenced by the `SecuredIPdu` with the `payload` reference via the `PduTriggering` and
- the `authDataFreshnessStartPosition` and `authDataFreshnessLength` define the area in the `ISignalIPdu` that is taken to verify and generate the Freshness then

all `ISignals` that are mapped into the `ISignalIPdu` in front of the configured `authDataFreshnessStartPosition` shall have a static length.]()

Please note that parts of the Authentic `IPdu` can be used as freshness when `authDataFreshnessStartPosition` and `authDataFreshnessLength` are defined. But therefore the part of the Authentic `IPdu` to be used as the freshness has to be always available at same position in the Authentic `IPdu`.

**[constr\_3407] Freshness Value in Authentic `IPdu` is not allowed to be used in case of `ContainerIPdu` with a dynamic layout** [If a `ContainerIPdu` that is referenced by the `SecuredIPdu` with the `payload` reference via the `PduTriggering` contains a dynamic layout (i.e. `ContainerIPdu.headerType` is set to `longHeader`

or `shortHeader`) and multiple contained `IPdus` then each `IPduPort` that is referenced by the `PduTriggering` of the `SecuredIPdu` shall have the attribute `useAuthDataFreshness` set to `false`.`]()`

Please note that for `ContainerIPdus` with a dynamic layout it cannot be ensured which contained `IPdu` will be put in which position (depends on various timing and trigger conditions). Therefore `[constr_3407]` applies.

**[constr\_5060] Mapping of a `SecuredIPdu` into a `LinFrame` is not allowed** [The mapping of a `SecuredIPdu` into a `LinFrame` with a `PduToFrameMapping` is not allowed.`]()`

In other words the usage of `Pdus` that are secured by SecOC is not allowed on a LIN Network.

### 6.3.2.1 Crypto Infrastructure for SecuredIPdu

From the cryptographic point of view, the usage of `SecuredIPdu` is connected to the application of two cryptographic operations, `MacGenerate` (for sending the `SecuredIPdu`) and `MacVerify` (for receiving the `SecuredIPdu`).

There are use cases for OEMs to already provide a pre-configuration of the crypto stack specifically for the handling of `SecuredIPdu`.

In order to support these use cases model elements in the meta-model are defined that allow for modeling a “crypto infrastructure” that facilitates the derivation of the configuration of operations `MacGenerate` and `MacVerify` in the crypto stack.

The formalization of a `Pdu` that is sent or received is based on the `PduTriggering` and its reference to an `IPduPort`, specifically by interpreting the attribute `IPduPort.communicationDirection`. The details of the approach are summarized in Figure 6.17.

**[TPS\_SYST\_05020] Semantics of `CryptoServiceMapping`** [Meta-class `CryptoServiceMapping` represents an abstract base class for the creation of mappings in the context of cryptographic operations. Concrete sub-classes define the mapping with respect to specific cryptographic use cases, e.g. SecOC, TLS.]`(RS_SYST_00054)`

<b>Class</b>	<code>CryptoServiceMapping</code> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class represents an abstract base class for specializations of crypto service mappings.			
<b>Base</b>	<code>ARObject</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
<b>Subclasses</b>	<code>SecOcCryptoServiceMapping</code> , <code>TlsCryptoServiceMapping</code>			
<b>Aggregated by</b>	<code>SystemMapping.cryptoServiceMapping</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.51: `CryptoServiceMapping`**



[TPS\_SYST\_05021] **Semantics of [SecOcCryptoServiceMapping](#)** [Meta-class [SecOcCryptoServiceMapping](#) represents the mapping functionality required for the configuration of PDU-based secure communication by means of the [SecOc](#).

In particular, the [SecOcCryptoServiceMapping](#) associates a [CryptoServicePrimitive](#) with the applicable [CryptoServiceKey](#).] ([RS\\_SYST\\_00054](#))

<b>Class</b>	<b>SecOcCryptoServiceMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class has the ability to represent a crypto service mapping for the Pdu-based communication via SecOC.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CryptoServiceMapping</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">SystemMapping.cryptoServiceMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
authentication	<a href="#">CryptoServicePrimitive</a>	0..1	ref	This reference identifies the applicable crypto primitive for the authentication.
cryptoServiceKey	<a href="#">CryptoServiceKey</a>	0..1	ref	This reference identifies the applicable crypto key.
cryptoServiceQueue	<a href="#">CryptoServiceQueue</a>	0..1	ref	This reference identifies the <a href="#">CryptoServiceQueue</a> the processing of this <a href="#">SecOcCryptoServiceMapping</a> shall be performed in.

**Table 6.52: SecOcCryptoServiceMapping**

[TPS\_SYST\_05022] **Semantics of [PduTriggering.secOcCryptoMapping](#)** [The reference [PduTriggering.secOcCryptoMapping](#) allows for modeling the relation of the usages (send, receive) of a [SecuredIPdu](#) to a given [CryptoServiceMapping](#) and thereby distinguish between the configuration of cryptographic operations [MacGenerate](#) and [MacVerify](#).] ([RS\\_SYST\\_00054](#))

In other words, the cryptographic use case is connected to the value of attribute [communicationDirection](#) of the [IPduPort](#) that is referenced by an [PduTriggering](#) that also references a [SecOcCryptoServiceMapping](#):

- If the value of [communicationDirection](#) is set to [in](#) then the cryptographic use case [MacVerify](#) applies.
- If the value of [communicationDirection](#) is set to [out](#) then the cryptographic use case [MacGenerate](#) applies.

[constr\_1669] **Existence of [PduTriggering.secOcCryptoMapping](#)** [The reference [PduTriggering.secOcCryptoMapping](#) shall only exist if the [PduTriggering](#) also references a [SecuredIPdu](#) in the role [iPdu](#).] ()

As the [SecOcCryptoServiceMapping](#) is referenced by a [PduTriggering](#) the [SecOcCryptoServiceMapping](#) needs to work for both the sender and the receivers of the corresponding Pdu in the context of a [System](#) of category [SYSTEM\\_DESCRIPTION/SYSTEM\\_EXTRACT](#) as well as in the context of a [System](#) of category [ECU\\_EXTRACT](#).

[TPS\_SYST\_05023] Semantics of **CryptoServicePrimitive** [Meta-class **CryptoServicePrimitive** allows for the description of the applicable cryptographic algorithm.] (*RS\_SYST\_00054*)

<b>Class</b>	<b>CryptoServicePrimitive</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class has the ability to represent a crypto primitive. <b>Tags:</b> atp.recommendedPackage=CryptoPrimitives			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
algorithmFamily	<a href="#">String</a>	0..1	attr	This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.
algorithmMode	<a href="#">String</a>	0..1	attr	This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.
algorithmSecondaryFamily	<a href="#">String</a>	0..1	attr	This attribute represents a further description of the secondary family of crypto algorithm implemented by the crypto primitive.  The secondary family is needed for the specification of the hash algorithm for a signature check, e.g. using RSA.

**Table 6.53: CryptoServicePrimitive**

[TPS\_SYST\_05024] Semantics of **CryptoServiceKey** [Meta-class **CryptoServiceKey** allows for the description of the applicable cryptographic key. The ability to aggregate a [ValueSpecification](#) in the role [developmentValue](#) shall be used to distribute development keys to suppliers such that crypto functionality can be adequately verified during development.] (*RS\_SYST\_00054*)

[constr\_5334] Supported values for **CryptoServiceKey.length** [The values defined for [CryptoServiceKey.length](#) shall be multiple of 8.] ()



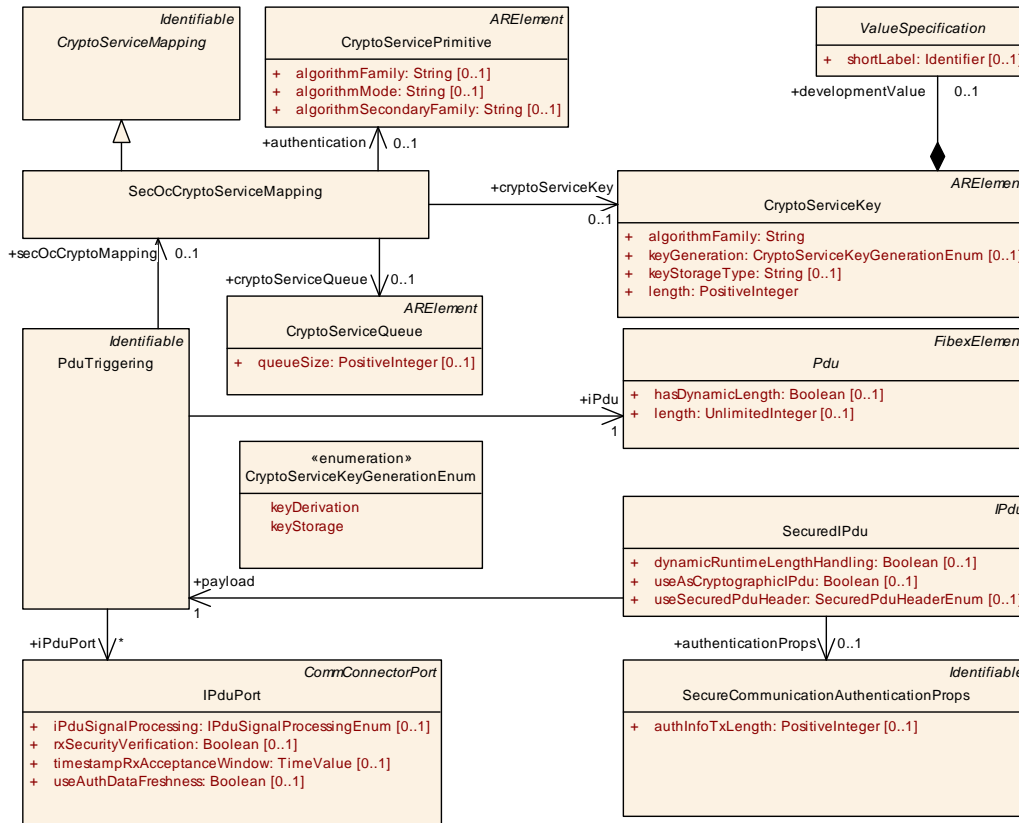


Figure 6.17: Modeling of crypto infrastructure for SecuredIPdu

Please note that the `developmentValue` most likely will be used in the form of a `TextValueSpecification`. However, the aggregation has still be modeled by means of using the abstract base class `ValueSpecification` to gain some headroom for future extension.

<b>Class</b>	<b>CryptoServiceKey</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class has the ability to represent a crypto key. <b>Tags:</b> atp.recommendedPackage=CryptoDevelopmentKeys			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
algorithmFamily	String	1	attr	This attribute represent the description of the family of the applicable crypto algorithm.
development Value	ValueSpecification	0..1	aggr	This aggregation represents the ability to assign a specific value to the crypto key as part of the system description. This value can then be taken for the development of the respective ECU.
keyGeneration	CryptoServiceKey GenerationEnum	0..1	attr	This attribute describes how a the specific cryptographic key is created.





Class	CryptoServiceKey			
keyStorageType	String	0..1	attr	This attribute describes where the enclosing cryptographic key shall be stored. AUTOSAR reserves specific values for this attributes but it is possible to insert custom values as well.
length	PositiveInteger	1	attr	This attribute describes the length of the cryptographic key in bits.

**Table 6.54: CryptoServiceKey**

Enumeration	CryptoServiceKeyGenerationEnum
Package	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
Note	This enumeration shall be taken to express the handling of a crypto key in terms of whether it is obtained from e.g. a diagnostic tester or whether it is created by derivation from a master key.
Aggregated by	<a href="#">CryptoServiceKey.keyGeneration</a>
Literal	<b>Description</b>
keyDerivation	This means that the crypto key is created by derivation from a master key. <b>Tags:</b> atp.EnumerationLiteralIndex=0
keyStorage	This means that the crypto key is obtained from an external entity, e.g. a diagnostic tester. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.55: CryptoServiceKeyGenerationEnum**

[TPS\_SYST\_05025] Standardized values of [CryptoServicePrimitive.algorithmFamily](#) and [CryptoServiceKey.algorithmFamily](#) [The following values of attributes [CryptoServicePrimitive.algorithmFamily](#) and [CryptoServiceKey.algorithmFamily](#) are standardized by AUTOSAR:

- CRYPTO\_ALGOFAM\_SHA1: SHA1 hash
- CRYPTO\_ALGOFAM\_SHA2\_224: SHA2-224 hash
- CRYPTO\_ALGOFAM\_SHA2\_256: SHA2-256 hash
- CRYPTO\_ALGOFAM\_SHA2\_384: SHA2-384 hash
- CRYPTO\_ALGOFAM\_SHA2\_512: SHA2-512 hash
- CRYPTO\_ALGOFAM\_SHA2\_512\_224: SHA2-512/224 hash
- CRYPTO\_ALGOFAM\_SHA2\_512\_256: SHA2-512/256 hash
- CRYPTO\_ALGOFAM\_SHA3\_224: SHA3-224 hash
- CRYPTO\_ALGOFAM\_SHA3\_256: SHA3-256 hash
- CRYPTO\_ALGOFAM\_SHA3\_384: SHA3-384 hash
- CRYPTO\_ALGOFAM\_SHA3\_512: SHA3-512 hash
- CRYPTO\_ALGOFAM\_SHAKE128: SHAKE128 hash
- CRYPTO\_ALGOFAM\_SHAKE256: SHAKE256 hash

- **CRYPTO\_ALGOFAM\_RIPEMD160**: RIPEMD hash
- **CRYPTO\_ALGOFAM\_BLAKE\_1\_256**: BLAKE-1-256 hash
- **CRYPTO\_ALGOFAM\_BLAKE\_1\_512**: BLAKE-1-512 hash
- **CRYPTO\_ALGOFAM\_BLAKE\_2s\_256**: BLAKE-2s-256 hash
- **CRYPTO\_ALGOFAM\_BLAKE\_2s\_512**: BLAKE-2s-512 hash
- **CRYPTO\_ALGOFAM\_3DES**: 3DES cipher
- **CRYPTO\_ALGOFAM\_AES**: AES cipher
- **CRYPTO\_ALGOFAM\_CHACHA**: ChaCha cipher
- **CRYPTO\_ALGOFAM\_RSA**: RSA cipher
- **CRYPTO\_ALGOFAM\_ED25519**: ED22518 elliptic curve
- **CRYPTO\_ALGOFAM\_BRAINPOOL**: Brainpool elliptic curve
- **CRYPTO\_ALGOFAM\_ECCNIST**: NIST ECC elliptic curves
- **CRYPTO\_ALGOFAM\_RNG**: Random Number Generator
- **CRYPTO\_ALGOFAM\_SIPHASH**: SipHash
- **CRYPTO\_ALGOFAM\_ECIES**: ECIES Cipher
- **CRYPTO\_ALGOFAM\_SM2**: SM2 elliptic curve algorithm
- **CRYPTO\_ALGOFAM\_EEA3**: Stream cipher based on ZUC
- **CRYPTO\_ALGOFAM\_SM3**: Hash algorithm based on ISO/IEC 10118-3:2018 Part 3: Dedicated hash-functions (SM3)
- **CRYPTO\_ALGOFAM\_EIA3**: Authentication based on ZUC

]([RS\\_SYST\\_00054](#))

**[TPS\_SYST\_05026] Relation of [CryptoServicePrimitive.algorithmFamily](#) to [CryptoServiceKey.algorithmFamily](#)** [The attribute [CryptoServiceKey.algorithmFamily](#) shall be taken to check with the value of [CryptoServicePrimitive.algorithmFamily](#) in order to make sure that the crypto key fits to the intended usage.]([RS\\_SYST\\_00054](#))

**[TPS\_SYST\_05027] Standardized values of [CryptoServicePrimitive.algorithmMode](#)** [The following values of attributes [CryptoServicePrimitive.algorithmMode](#) are standardized by AUTOSAR:

- **CRYPTO\_ALGOMODE\_ECB**: Blockmode - Electronic Code Book
- **CRYPTO\_ALGOMODE\_CBC**: Blockmode - Cipher Block Chaining
- **CRYPTO\_ALGOMODE\_CFB**: Blockmode - Cipher Feedback Mode

- **CRYPTO\_ALGOMODE\_OFB**: Blockmode - Output Feedback Mode
- **CRYPTO\_ALGOMODE\_CTR**: Blockmode - Counter Modex
- **CRYPTO\_ALGOMODE\_GCM**: Blockmode - Galois/Counter Mode
- **CRYPTO\_ALGOMODE\_XTS**: XOR-encryption-based tweaked-codebook mode with ciphertext stealing
- **CRYPTO\_ALGOMODE\_RSAES\_OAEP**: RSA Optimal Asymmetric Encryption Padding
- **CRYPTO\_ALGOMODE\_RSAES\_PKCS1\_v1\_5**: RSA encryption/decryption with PKCS#1 v1.5 padding
- **CRYPTO\_ALGOMODE\_RSASSA\_PSS**: RSA Probabilistic Signature
- **CRYPTO\_ALGOMODE\_RSASSA\_PKCS1\_v1\_5**: RSA signature with PKCS#1 v1.5
- **CRYPTO\_ALGOMODE\_8ROUNDS**: 8 rounds (e.g. ChaCha8)
- **CRYPTO\_ALGOMODE\_12ROUNDS**: 12 rounds (e.g. ChaCha12)
- **CRYPTO\_ALGOMODE\_20ROUNDS**: 20 rounds (e.g. ChaCha20)
- **CRYPTO\_ALGOMODE\_HMAC**: Hashed-based MAC
- **CRYPTO\_ALGOMODE\_CMAC**: Cipher-based MAC
- **CRYPTO\_ALGOMODE\_GMAC**: Galois MAC
- **CRYPTO\_ALGOMODE\_CTRDRBG**: Counter-based Deterministic Random Bit Generator
- **CRYPTO\_ALGOMODE\_SIPHASH\_2\_4**: Siphash-2-4
- **CRYPTO\_ALGOMODE\_SIPHASH\_4\_8**: Siphash-4-8

]([RS\\_SYST\\_00054](#))

Please note that it is positively supported to define custom values for attributes `CryptoServicePrimitive.algorithmFamily` and `CryptoServicePrimitive.algorithmMode` provided that the custom values are guaranteed to not clash with future extension of the AUTOSAR standard. For example, this could be achieved by using a prefix or suffix that is specific to the organization that defines the custom value.

**[TPS\_SYST\_05028] Semantics of `CryptoServiceKey.keyStorageType`**  
[Attribute `CryptoServiceKey.keyStorageType` describes where the actual key shall be stored on the ECU. This attribute has been deliberately modeled as a `String` to allow future (and custom) extensions of the range of possible values.

AUTOSAR reserves the following values for this attribute:

- **SHE**
- **RAM**

- HSM
- NVM

|(RS\_SYST\_00054)

Please note that custom values for attribute `CryptoServiceKey.keyStorageType` are supported as long as the actual values are defined in a way such that a possible clash with a later standardization by AUTOSAR becomes impossible.

The best way to achieve this is to use the company name (e.g. as a prefix) within the custom value of `CryptoServiceKey.keyStorageType`.

<b>Class</b>	<b>CryptoServiceQueue</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class has the ability to represent a crypto queue. <b>Tags:</b> atp.recommendedPackage=CryptoServiceQueues			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
queueSize	PositiveInteger	0..1	attr	Defines the queue size of the CryptoServiceQueue.

**Table 6.56: CryptoServiceQueue**

[constr\_5058] Value range for `CryptoServiceQueue.queueSize` [If the `CryptoServiceQueue.queueSize` is defined it shall have a value which is equal or greater than 1.]()

### 6.3.3 EndToEndProtection for ISignalGroups

**Caveat:** The E2E wrapper approach involves technologies that are not subjected to the AUTOSAR standard and is superseded by the superior E2E transformer approach (which is fully standardized by AUTOSAR). Hence, new projects (without legacy constraints due to carry-over parts) shall use the fully standardized E2E transformer approach.

[TPS\_SYST\_01070] **E2E Protection of ISignalGroups** [It is possible to protect the inter-ECU data exchange of safety-related `ISignalGroups` which are mapped into `ISignalIPdu` using protection mechanisms provided by E2E Library.](RS\_SYST\_00028)

[TPS\_SYST\_01071] **E2E Protection of several ISignalGroups in one ISignalIPdu** [It is possible to protect several `ISignalGroups` in one `ISignalIPdu` using several `EndToEndProtectionISignalIPdu` elements.](RS\_SYST\_00028)

The `EndToEndProtectionISignalIPdu` element refers to the `ISignalGroup` that is to be protected and to the `ISignalIPdu` that transmits the protected `ISignalGroup`. The `dataOffset` in the `EndToEndProtectionISignalIPdu` element defines the starting position of the Array representation of the `ISignalGroup`.

The information how the referenced `ISignalGroup` shall be protected (through which E2E Profile and with which E2E settings) is defined in the `EndToEndDescription` element.

**[TPS\_SYST\_01072] Offset attributes of `EndToEndDescription`** [All offset attributes of `EndToEndDescription` are relative to the `dataOffset` with respect to the `ISignalIPdu` (absolute position of the CRC = `dataOffset` + `crcOffset`).] ([RS\\_SYST\\_00028](#))

For more details, see End to End Library [23].


**[TPS\_SYST\_01073] E2E Protection via COM Callouts** [If the E2E Protection is done via COM Callouts then the `EndToEndProtectionISignalIPdu` shall be defined.] ([RS\\_SYST\\_00028](#))

**[TPS\_SYST\_01074] E2E Protection in the E2E Wrapper** [If the E2E Protection is done in the E2E Wrapper then both `EndToEndProtectionISignalIPdu` and `EndToEndProtectionVariablePrototype` shall be defined.

**Caveat:** The E2E transformer approach is the standardized AUTOSAR way.] ([RS\\_SYST\\_00028](#))

For more details, see Software Component Template specification [5].

**[constr\_1002] End-to-end protection does not support n:1 communication** [As the n:1 communication scenario implies that probably not all senders use the same `dataId` this scenario is explicitly not supported.] ()

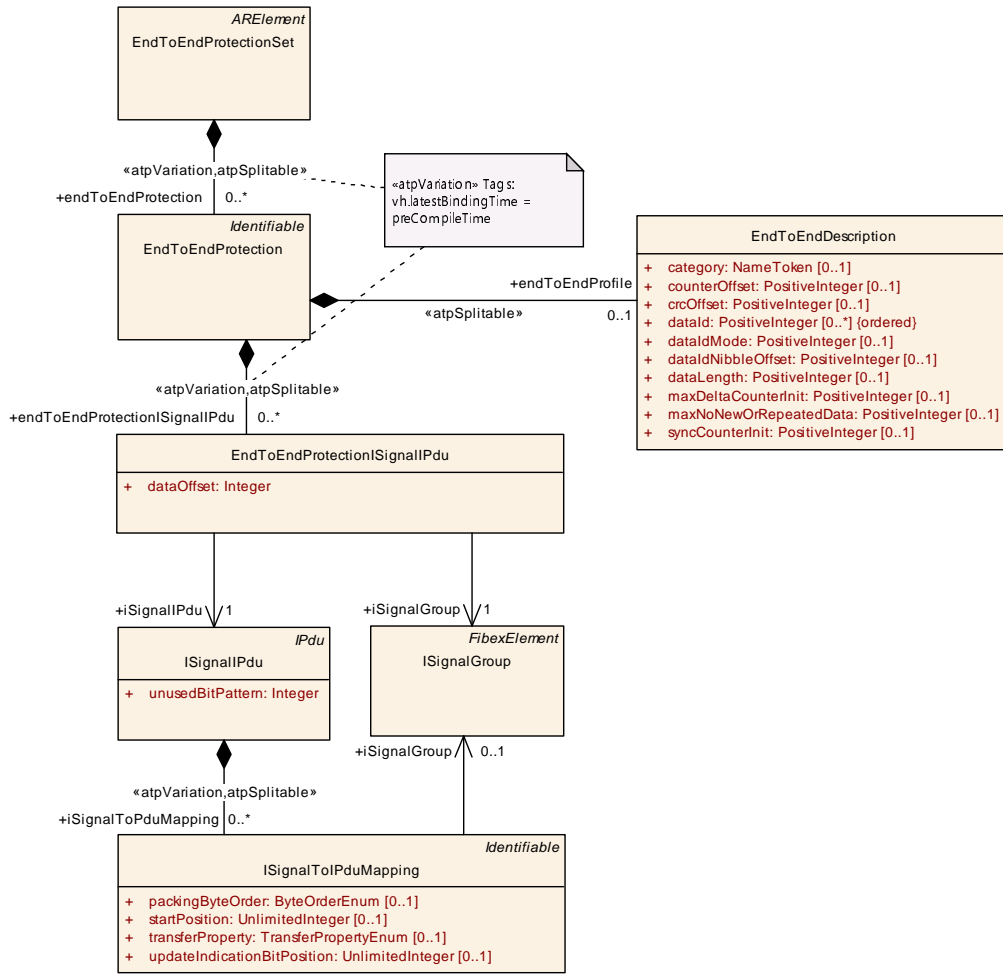

**Figure 6.18: EndToEndProtection for COM IPdus**

<b>Class</b>	<b>EndToEndProtectionSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::EndToEndProtection			
<b>Note</b>	This represents a container for collection EndToEndProtectionInformation. <b>Tags:</b> atp.recommendedPackage=EndToEndProtectionSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
endToEndProtection	<a href="#">EndToEndProtection</a>	*	aggr	This is one particular EndToEndProtection. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=endToEndProtection.shortName, endToEndProtection.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table 6.57: EndToEndProtectionSet**

<b>Class</b>	<b>EndToEndProtection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::EndToEndProtection			
<b>Note</b>	This meta-class represents the ability to describe a particular end to end protection.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">EndToEndProtectionSet.endToEndProtection</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
endToEndProfile	<a href="#">EndToEndDescription</a>	0..1	aggr	This represents the particular EndToEndDescription. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=endToEndProfile
endToEndProtectionISignalPdu	<a href="#">EndToEndProtectionISignalPdu</a>	*	aggr	Defines to which ISignalPdu - ISignalGroup pair this EndToEndProtection shall apply.  In case several ISignalGroups are used to transport the data (e.g. fan-out in the RTE) there may exist several EndToEndProtectionISignalPdu definitions. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=endToEndProtectionISignalPdu, endToEndProtectionISignalPdu.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
endToEndProtectionVariablePrototype	<a href="#">EndToEndProtectionVariablePrototype</a>	*	aggr	Defines to which VariableDataPrototypes in the roles of one sender and one or more receivers this EndToEndProtection applies.  It shall be possible to aggregate several EndToEndProtectionVariablePrototype in case additional hierarchical decompositions are introduced subsequently. In this case one particular PortPrototype is split into multiple PortPrototypes and connectors, all representing the same data entity.  Caveat: The E2E wrapper approach involves technologies that are not subjected to the AUTOSAR standard and is superseded by the superior E2E transformer approach (which is fully standardized by AUTOSAR). Hence, new projects (without legacy constraints due to carry-over parts) shall use the fully standardized E2E transformer approach. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=endToEndProtectionVariablePrototype.shortLabel, endToEndProtectionVariablePrototype.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table 6.58: EndToEndProtection**

<b>Class</b>	<b>EndToEndProtectionISignalPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::EndToEndProtection			
<b>Note</b>	It is possible to protect the inter-ECU data exchange of safety-related ISignalGroups at the level of COM IPdus using protection mechanisms provided by E2E Library. For each ISignalGroup to be protected, a separate EndToEndProtectionISignalPdu element shall be created within the EndToEndProtectionSet.  The EndToEndProtectionISignalPdu element refers to the ISignalGroup that is to be protected and to the ISignalPdu that transmits the protected ISignalGroup. The information how the referenced ISignalGroup shall be protected (through which E2E Profile and with which E2E settings) is defined in the EndToEndDescription element.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">EndToEndProtection.endToEndProtectionISignalPdu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>







Class	EndToEndProtectionISignalPdu			
dataOffset	Integer	1	attr	This attribute defines the beginning offset (in bits) of the Array representation of the Signal Group (including CRC, counter and application signal group) in the IPdu. This attribute is mandatory and the dataOffset shall always be defined.
iSignalGroup	<a href="#">ISignalGroup</a>	1	ref	Reference to the ISignalGroup that is to be protected.
iSignalIPdu	<a href="#">ISignalIPdu</a>	1	ref	Reference to the ISignalIPdu that transmits the protected ISignalGroup.

**Table 6.59: EndToEndProtectionISignalPdu**

Class	EndToEndDescription			
Package	M2::AUTOSARTemplates::SWComponentTemplate::EndToEndProtection			
Note	This meta-class contains information about end-to-end protection. The set of applicable attributes depends on the actual value of the category attribute of EndToEndProtection.			
Base	<i>ARObject</i>			
Aggregated by	<a href="#">EndToEndProtection.endToEndProfile</a>			
Attribute	Type	Mult.	Kind	Note
category	NameToken	0..1	attr	The category represents the identification of the concrete E2E profile. The applicable values are specified in a semantic constraint and determine the applicable attributes of EndToEndDescription. <b>Tags:</b> xml.sequenceOffset=-100
counterOffset	PositiveInteger	0..1	attr	Bit offset of Counter from the beginning of the Array representation of the Signal Group/VariableDataPrototype (MSB order, bit numbering: bit 0 is the least important). The offset shall be a multiplicity of 4 and it should be 8 whenever possible. For example, offset 8 means that the counter will take the low nibble of the byte 1, i.e. bits 8 .. 11. If counterOffset is not present the value is defined by the selected profile. <b>Tags:</b> xml.sequenceOffset=-50
crcOffset	PositiveInteger	0..1	attr	Bit offset of CRC from the beginning of the Array representation of the Signal Group/VariableDataPrototype (MSB order, bit numbering: bit 0 is the least important). The offset shall be a multiplicity of 8 and it should be 0 whenever possible. For example, offset 8 means that the CRC will take the byte 1, i.e. bits 8..15. If crcOffset is not present the value is defined by the selected profile. <b>Tags:</b> xml.sequenceOffset=-60
dataId (ordered)	PositiveInteger	*	attr	This represents a unique numerical identifier. Note: ID is used for protection against masquerading. The details concerning the maximum number of values (this information is specific for each E2E profile) applicable for this attribute are controlled by a semantic constraint that depends on the category of the EndToEnd Protection. <b>Tags:</b> xml.sequenceOffset=-90





Class	EndToEndDescription			
dataIdMode	PositiveInteger	0..1	attr	<p>There are three inclusion modes how the implicit two-byte Data ID is included in the one-byte CRC:</p> <ul style="list-style-type: none"> <li>• dataIdMode = 0: Two bytes are included in the CRC (double ID configuration) This is used in variant 1A.</li> <li>• dataIdMode = 1: One of the two bytes byte is included, alternating high and low byte, depending on parity of the counter (alternating ID configuration). For even counter low byte is included; For odd counters the high byte is included. This is used in variant 1B.</li> <li>• dataIdMode = 2: Only low byte is included, high byte is never used. This is applicable if the IDs in a particular system are 8 bits.</li> <li>• dataIdMode = 3: The low byte is included in the implicit CRC calculation, the low nibble of the high byte is transmitted along with the data (i.e. it is explicitly included), the high nibble of the high byte is not used. This is applicable for the IDs up to 12 bits.</li> </ul> <p><b>Tags:</b>xml.sequenceOffset=-85</p>
dataIdNibbleOffset	PositiveInteger	0..1	attr	<p>Bit offset of the low nibble of the high byte of Data ID. The applicability of this attribute is controlled by [constr_1261].</p> <p><b>Tags:</b>xml.sequenceOffset=-25</p>
dataLength	PositiveInteger	0..1	attr	<p>This attribute represents the length of the Array representation of the Signal Group/VariableDataPrototype including CRC and Counter in bits.</p> <p><b>Tags:</b>xml.sequenceOffset=-80</p>
maxDeltaCounterInit	PositiveInteger	0..1	attr	<p>Initial maximum allowed gap between two counter values of two consecutively received valid Data, i.e. how many subsequent lost data is accepted. For example, if the receiver gets Data with counter 1 and MaxDeltaCounter Init is 1, then at the next reception the receiver can accept Counters with values 2 and 3, but not 4.</p> <p>Note that if the receiver does not receive new Data at a consecutive read, then the receiver increments the tolerance by 1.</p> <p><b>Tags:</b>xml.sequenceOffset=-70</p>
maxNoNewOrRepeatedData	PositiveInteger	0..1	attr	<p>The maximum amount of missing or repeated Data which the receiver does not expect to exceed under normal communication conditions.</p> <p><b>Tags:</b>xml.sequenceOffset=-40</p>
syncCounterInit	PositiveInteger	0..1	attr	<p>Number of Data required for validating the consistency of the counter that shall be received with a valid counter (i.e. counter within the allowed lock-in range) after the detection of an unexpected behavior of a received counter.</p> <p><b>Tags:</b>xml.sequenceOffset=-30</p>

**Table 6.60: EndToEndDescription**

**[constr\_1001] Value of dataId shall be unique** [The value of the dataId shall be unique within the scope of the System.]()

The maxDeltaCounterInit, maxNoNewOrRepeatedData and syncCounterInit values can also be specified in the ReceiverComSpec. This allows

the definition of receiver specific values. Values for `maxDeltaCounterInit`, `maxNoNewOrRepeatedData` and `syncCounterInit` that are defined in the `ReceiverComSpec` override the possible values in the `EndToEndDescription` class.

**Caveat:** Since the definition of those values is intended for the E2E wrapper approach, those definitions will eventually be discontinued by AUTOSAR.

More details about those values can be found in the Software Component Template specification [5].

The supported E2E profiles (possible values of category in `EndToEndDescription`) are described in the Software Component Template [5] and the End to End Library [23].

### 6.3.4 GeneralPurposeConnection

In some cases it is important to describe a relation between different `PduTriggerings` that are defined on the same `PhysicalChannel`, e.g. to create a link between a Rx-Pdu and a Tx-Pdu. The `GeneralPurposeConnection` meta-class is able to reference a number of `PduTriggerings` and thereby to set the referenced `PduTriggerings` into a relationship that is defined by the `GeneralPurposeConnection`.

[TPS\_SYST\_02170] **category of the GeneralPurposeConnection** [The `category` of the `GeneralPurposeConnection` is used to define the purpose of the relationship between the referenced `PduTriggerings`.]()

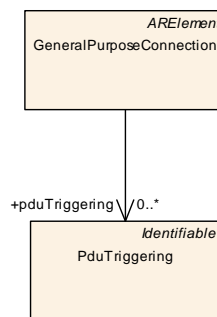


Figure 6.19: GeneralPurposeConnection

<b>Class</b>	<b>GeneralPurposeConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GeneralPurposeConnection			
<b>Note</b>	This meta-class allows to describe the relationship between several <code>PduTriggerings</code> that are defined on the same <code>PhysicalChannel</code> , e.g. to create a link between Rx and Tx Pdu that are used for request/response. <b>Tags:</b> atp.recommendedPackage=GeneralPurposeConnections			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
pduTriggering	<a href="#">PduTriggering</a>	*	ref	Reference to <code>PduTriggerings</code> that are connected to each other by a <code>GeneralPurposeConnection</code> .

Table 6.61: GeneralPurposeConnection

[constr\_3384] **PduTriggerings** referenced by `GeneralPurposeConnection` shall be defined on the same `PhysicalChannel` [The `PduTriggerings` that are referenced by the `GeneralPurposeConnection` in the role `pduTriggering` shall be defined on the same `PhysicalChannel`.]()

[constr\_3383] **Standardized values for the attribute category of meta-class GeneralPurposeConnection** [The following values of the attribute `category` of meta-class `GeneralPurposeConnection` are reserved by the AUTOSAR standard:

- XcpChannel

]()

The XcpChannel creates a link between one Tx-Pdu and one Rx-Pdu that are used for request/response from one master.

**[constr\_3385] XcpChannel is allowed to reference exactly two PduTriggerings** [In case that the `category` of meta-class `GeneralPurposeConnection` is set to the value `XcpChannel` the `GeneralPurposeConnection` is allowed to reference exactly two `PduTriggerings` in the role `pduTriggering`.]()

**[constr\_3386] XcpChannel is only allowed to reference PduTriggerings of GeneralPurposeIPdus with category XCP** [In case that the `category` of meta-class `GeneralPurposeConnection` is set to the value `XcpChannel` the `GeneralPurposeConnection` is allowed to reference `PduTriggerings` of `GeneralPurposeIPdus` with category `XCP`.]()

## 6.4 IPdu Timing

AUTOSAR COM allows configuring statically two different transmission modes for each IPdu (True and False). `TransmissionModeDeclaration` uses a transmission mode selector, calculated from a number of individual `TransmissionModeConditions` or `ModeDrivenTransmissionModeConditions` to decide which of the two modes is selected. It is possible to switch between the transmission modes during runtime.

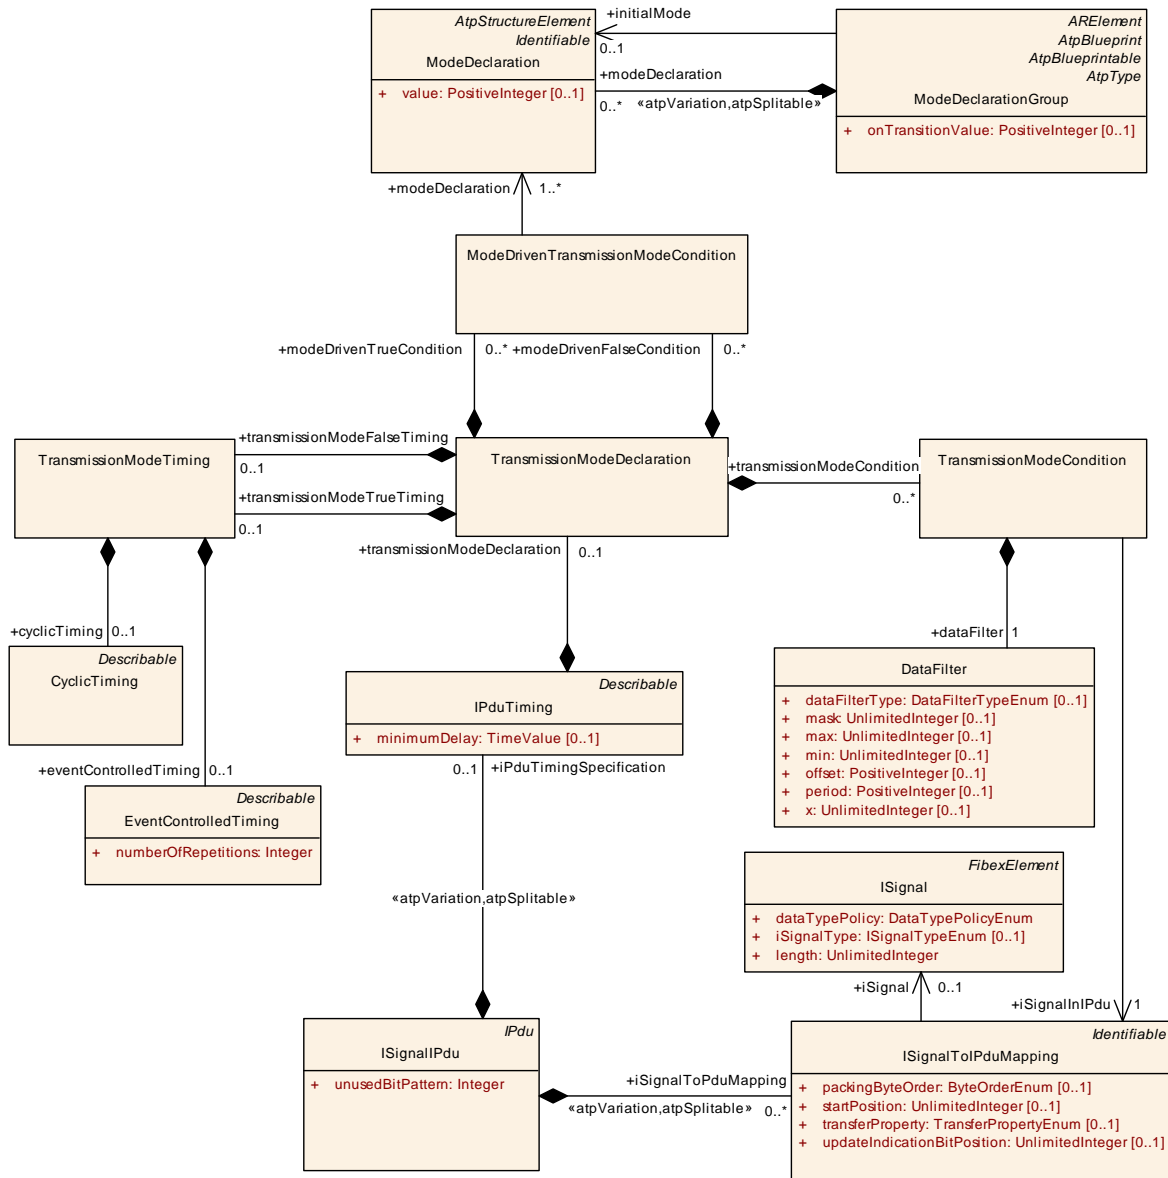


Figure 6.20: IPdu Timing

**[TPS\_SYST\_01075] Signal content evaluation via [TransmissionModeCondition](#)** [The signal content can be evaluated as the transmission mode selector via the [TransmissionModeConditions](#).] ([RS\\_SYST\\_00037](#))

**[TPS\_SYST\_01076] Mode evaluation via [modeDrivenTrueCondition](#) or [modeDrivenFalseCondition](#)** [Mode conditions can be evaluated as the transmission mode selector via the [modeDrivenTrueConditions](#) or [modeDrivenFalseConditions](#).] ([RS\\_SYST\\_00037](#))

**[constr\_3045] Signal content evaluation vs. Mode evaluation** [The mode evaluation and the signal content evaluation shall not be used in the same [IPdu](#). A mix of these two types is not allowed.] ()

To use the signal content evaluation a `TransmissionModeCondition` can be attached to each signal within an `IPdu`. Each `TransmissionModeCondition` contains a reference to a signal and to an assigned filter. The filter condition is used for the selection of the transmission mode. If at least one condition in the signal content evaluation is true, Transmission Mode "TRUE" shall be used for this `IPdu`. In all other cases, the Transmission Mode "FALSE" shall be used. More details can be found in the COM Specification [22].

**[constr\_3046] Consistency of `TransmissionModeCondition.iSignalInIPdu`**  
 [The `ISignalToIPduMapping` referenced by the `TransmissionModeCondition` in the role `iSignalInIPdu` shall belong to the same `ISignalIPdu` as the `TransmissionModeCondition`.]()

In the mode driven evaluation `ModeDeclarations` are evaluated. The `transmissionModeFalseTiming` is activated if all defined `modeDrivenFalseConditions` evaluate to true and the `transmissionModeTrueTiming` is activated if all defined `modeDrivenTrueConditions` evaluate to true. Each condition that is defined by `ModeDrivenTransmissionModeCondition` evaluates to true if one of the referenced `ModeDeclarations` is active.

The `TransmissionModeDeclaration` element aggregates the `TransmissionModeTiming` in two different roles: `transmissionModeTrueTiming` and `transmissionModeFalseTiming`. The available COM Transmission Mode Timings can be described by the `CyclicTiming` and `EventControlledTiming` elements (see Table 6.62) that are aggregated by the `TransmissionModeTiming` class.

**[TPS\_SYST\_01077] Mapping of Com Transmission Modes to System Template elements** [The mapping of COM Transmission Modes to System Template elements is described in Table 6.62.](*RS\_SYST\_00037*)

<i>COM Modes</i>	<i>Transmission</i>	<i>Description</i>	<i>realization in System Template</i>
Periodic		Transmissions occur indefinitely with a fixed period between them	<code>CyclicTiming</code>
Direct/n-times		Event driven transmission with n-1 repetitions	<code>EventControlledTiming</code>
Mixed		Periodic transmission with direct/n-times transmissions in between	<code>EventControlledTiming</code> and <code>CyclicTiming</code>
None		No transmission	no timing assigned

**Table 6.62: COM Transmission Modes**

<b>Class</b>	<b>TransmissionModeDeclaration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	<p>AUTOSAR COM provides the possibility to define two different TRANSMISSION MODES (True and False) for each I-PDU.</p> <p>As TransmissionMode selector the signal content can be evaluated via transmissionModeCondition (implemented directly in the COM module) or mode conditions can be defined with the modeDrivenTrueCondition or modeDrivenFalseCondition (evaluated by BswM and invoking Com_SwitchIpdUTxMode COM API). If modeDrivenTrueCondition and modeDrivenFalseCondition are defined they shall never evaluate to true both at the same time.</p> <p>The mixing of Transmission Mode Switch via API and signal value is not allowed.</p>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	IPduTiming.transmissionModeDeclaration			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
modeDrivenFalseCondition	ModeDrivenTransmissionModeCondition	*	aggr	Defines the trigger for the Com_SwitchIpdUTxMode Transmission Mode switch. Only if all defined modeDrivenFalseConditions evaluate to true (AND associated) the transmissionModeFalseTiming shall be activated. modeDrivenTrueCondition and modeDrivenFalseCondition shall never evaluate to true both at the same time.
modeDrivenTrueCondition	ModeDrivenTransmissionModeCondition	*	aggr	Defines the trigger for the Com_SwitchIpdUTxMode Transmission Mode switch. Only if all defined modeDrivenTrueConditions evaluate to true (AND associated) the transmissionModeTrueTiming shall be activated. modeDrivenTrueCondition and modeDrivenFalseCondition shall never evaluate to true both at the same time.
transmissionModeCondition	TransmissionModeCondition	*	aggr	The Transmission Mode Selector evaluates the conditions for a subset of signals and decides which transmission mode should be used. In case only one transmission mode is used there is no need for the "TransmissionModeCondition" and its sub-structure. In case the transmission mode shall be switched using the COM-API "Com_SwitchIpdUTxMode" there is no need for the "TransmissionModeCondition" and its sub-structure.
transmissionModeFalseTiming	TransmissionModeTiming	0..1	aggr	Timing Specification if the COM Transmission Mode is false. The Transmission Mode Selector is defined to be false, if all Conditions evaluate to false.
transmissionModeTrueTiming	TransmissionModeTiming	0..1	aggr	Timing Specification if the COM Transmission Mode is true. The Transmission Mode Selector is defined to be true, if at least one Condition evaluates to true.

**Table 6.63: TransmissionModeDeclaration**

<b>Class</b>	<b>TransmissionModeCondition</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	<p>Possibility to attach a condition to each signal within an I-PDU.</p> <p>If at least one condition evaluates to true, TRANSMISSION MODE True shall be used for this I-Pdu. In all other cases, the TRANSMISSION MODE FALSE shall be used.</p>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	TransmissionModeDeclaration.transmissionModeCondition			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataFilter	DataFilter	1	aggr	Possibilities to define conditions
iSignalInIPdu	ISignalToIPduMapping	1	ref	Reference to a signal to which a condition is attached.

**Table 6.64: TransmissionModeCondition**



<b>Class</b>	<b>ModeDrivenTransmissionModeCondition</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	The condition defined by this class evaluates to true if one of the referenced modeDeclarations (OR associated) is active. All referenced modeDeclarations shall be from the same ModeDeclarationGroup. The condition is used to define which TransmissionMode shall be activated using Com_SwitchIpduTx Mode.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">TransmissionModeDeclaration.modeDrivenFalseCondition</a> , <a href="#">TransmissionModeDeclaration.modeDrivenTrueCondition</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
mode Declaration	<a href="#">ModeDeclaration</a>	1..*	ref	Reference to one modeDeclaration which is OR associated in the context of the ModeDrivenTransmission ModeCondition.

**Table 6.65: ModeDrivenTransmissionModeCondition**

The [ModeDeclaration](#) and the [ModeDeclarationGroup](#) is described in more detail in the Software Component Template Specification [5].

<b>Class</b>	<b>TransmissionModeTiming</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	If the COM Transmission Mode is false the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeFalseTiming. If the COM Transmission Mode is true the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeTrueTiming. COM supports the following Transmission Modes: <ul style="list-style-type: none"> <li>• Periodic (Cyclic Timing)</li> <li>• Direct /n-times (EventControlledTiming)</li> <li>• Mixed (Cyclic and EventControlledTiming are assigned)</li> <li>• None (no timing is assigned)</li> </ul>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">TransmissionModeDeclaration.transmissionModeFalseTiming</a> , <a href="#">TransmissionModeDeclaration.transmissionModeTrueTiming</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
cyclicTiming	<a href="#">CyclicTiming</a>	0..1	aggr	Periodic Transmission Mode.
eventControlled Timing	<a href="#">EventControlledTiming</a>	0..1	aggr	Direct Transmission Mode.

**Table 6.66: TransmissionModeTiming**

### 6.4.1 Data Filter configuration

Data Filters are used on sender side to configure Transmission Mode Conditions (TMC). On receiver side Data Filters can be used as filtering mechanisms for signals (see [ISignalPort](#) element). More details about the usage of [DataFilters](#) can be found in the Software Component Template Specification [5].

**[TPS\_SYST\_02013] Usage of [dataFilters](#) on GroupSignals on receiver side** [If the [dataFilter](#) of one [GroupSignal](#) evaluates to false the whole [ISignalGroup](#) in which the [GroupSignal](#) is contained shall be discarded.] ()

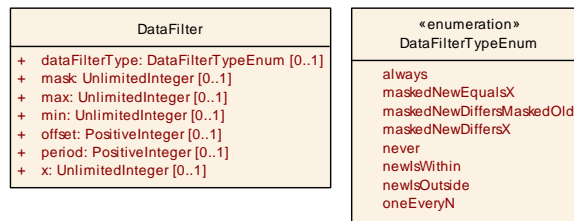


Figure 6.21: Data Filter

<b>Class</b>	<b>DataFilter</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::Filter			
<b>Note</b>	Base class for data filters. The type of the filter is specified in attribute <code>dataFilterType</code> . Some of the filter types require additional arguments which are specified as attributes of this class.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">ISignalPort.dataFilter</a> , <a href="#">NonqueuedReceiverComSpec.filter</a> , <a href="#">NonqueuedSenderComSpec.dataFilter</a> , <a href="#">SignalBasedEventElementToSignalTriggeringMapping.filter</a> , <a href="#">SignalBasedFieldToSignalTriggeringMapping.filter</a> , <a href="#">SignalServiceTranslationElementProps.filter</a> , <a href="#">TransmissionModeCondition.dataFilter</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
<code>dataFilterType</code>	<a href="#">DataFilterTypeEnum</a>	0..1	attr	This attribute specifies the type of the filter.
<code>mask</code>	UnlimitedInteger	0..1	attr	Mask for old and new value.
<code>max</code>	UnlimitedInteger	0..1	attr	Value to specify the upper boundary
<code>min</code>	UnlimitedInteger	0..1	attr	Value to specify the lower boundary
<code>offset</code>	PositiveInteger	0..1	attr	Specifies the initial number of messages to occur before the first message is passed
<code>period</code>	PositiveInteger	0..1	attr	Specifies number of messages to occur before the message is passed again
<code>x</code>	UnlimitedInteger	0..1	attr	Value to compare with

Table 6.67: DataFilter

<b>Enumeration</b>	<b>DataFilterTypeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::Filter
<b>Note</b>	This enum specifies the supported <a href="#">DataFilterTypes</a> .
<b>Aggregated by</b>	<a href="#">DataFilter.dataFilterType</a>
<b>Literal</b>	<b>Description</b>
always	No filtering is performed so that the message always passes. <b>Tags:</b> atp.EnumerationLiteralIndex=0






<b>Enumeration</b>	<b>DataFilterTypeEnum</b>
maskedNewDiffers MaskedOld	<p>Pass messages where the masked value has changed.</p> $(new\_value \& mask) \neq (old\_value \& mask)$ new_value: current value of the message old_value: last value of the message (initialized with the initial value of the message, updated with new_value if the new message value is not filtered out) <b>Tags:</b> atp.EnumerationLiteralIndex=1
maskedNewDiffers X	<p>Pass messages whose masked value is not equal to a specific value x</p> $(new\_value \& mask) \neq x$ new_value: current value of the message <b>Tags:</b> atp.EnumerationLiteralIndex=2
maskedNewEquals X	<p>Pass messages whose masked value is equal to a specific value x</p> $(new\_value \& mask) == x$ new_value: current value of the message <b>Tags:</b> atp.EnumerationLiteralIndex=3
never	<p>The filter removes all messages.</p> <b>Tags:</b> atp.EnumerationLiteralIndex=4
newIsOutside	<p>Pass a message if its value is outside a predefined boundary.</p> $(min > new\_value) \text{ OR } (new\_value > max)$ <b>Tags:</b> atp.EnumerationLiteralIndex=5
newIsWithin	<p>Pass a message if its value is within a predefined boundary.</p> $min \leq new\_value \leq max$ <b>Tags:</b> atp.EnumerationLiteralIndex=6
oneEveryN	<p>Pass a message once every N message occurrences.</p> <p>Algorithm: <math>occurrence \% period == offset</math>            Start: <math>occurrence = 0</math>.</p> <p>Each time the message is received or transmitted, occurrence is incremented by 1 after filtering.            Length of occurrence is 8 bit (minimum).  <b>Tags:</b>atp.EnumerationLiteralIndex=7         </p>

**Table 6.68: DataFilterTypeEnum**

### 6.4.2 Cyclic Timing

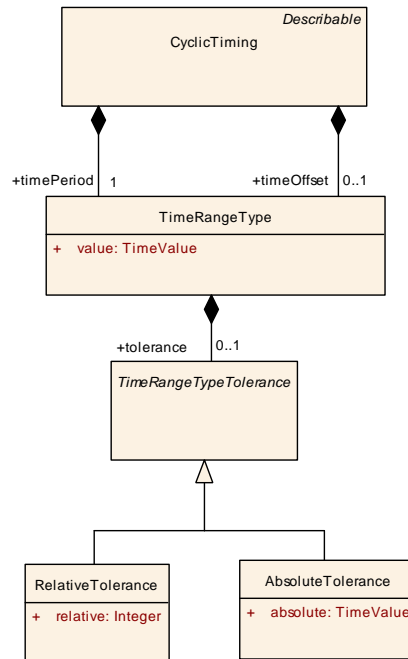

**Figure 6.22: Cyclic Timing**

<b>Class</b>	<b>CyclicTiming</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	Specification of a cyclic sending behavior.			
<b>Base</b>	ARObject, <i>Describable</i>			
<b>Aggregated by</b>	TransmissionModeTiming.cyclicTiming			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
timeOffset	TimeRangeType	0..1	aggr	This attribute specifies the time until first transmission of this I-PDU. This attribute defines the time between Com_lpduGroupStart and the first transmission of the cyclic part of this transmission request for this I-PDU.
timePeriod	TimeRangeType	1	aggr	Period of the repetition of cyclic transmissions.

**Table 6.69: CyclicTiming**

### 6.4.3 EventControlled Timing

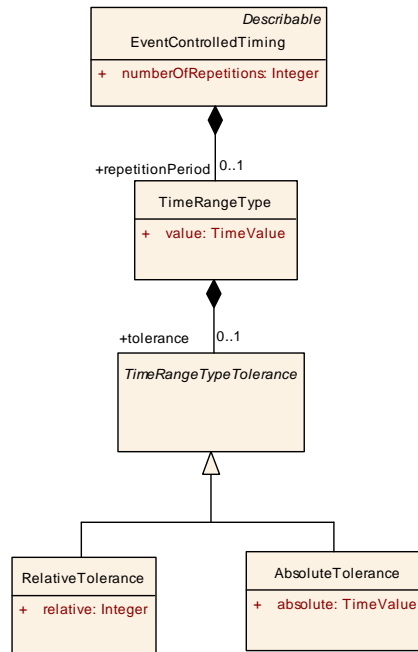


Figure 6.23: EventControlled Timing

<b>Class</b>	<b>EventControlledTiming</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	Specification of a event driven sending behavior. The PDU is sent n (numberOfRepeat + 1) times separated by the repetitionPeriod. If numberOfRepeats = 0, then the Pdu is sent just once.			
<b>Base</b>	ARObject, Describable			
<b>Aggregated by</b>	TransmissionModeTiming.eventControlledTiming			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
numberOfRepetitions	Integer	1	attr	Defines the number of repetitions for the Direct/N-Times transmission mode and the event driven part of Mixed transmission mode.
repetitionPeriod	TimeRangeType	0..1	aggr	The repetitionPeriod specifies the time in seconds that elapses before the pdu can be sent the next time (Minimum repeat gap between two pdus). The repetition Period is optional in case that no repetitions are configured.

Table 6.70: EventControlledTiming

<b>Class</b>	<b>TimeRangeType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	The timeRange can be specified with the value attribute. Optionally a tolerance can be defined.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	CyclicTiming.timeOffset, CyclicTiming.timePeriod, EventControlledTiming.repetitionPeriod			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





<b>Class</b>	<b>TimeRangeType</b>			
tolerance	TimeRangeType Tolerance	0..1	aggr	Optional specification of a tolerance.
value	TimeValue	1	attr	Average value of a date (in seconds)

**Table 6.71: TimeRangeType**

<b>Class</b>	<b>RelativeTolerance</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	Maximum allowable deviation			
<b>Base</b>	ARObject, TimeRangeTypeTolerance			
<b>Aggregated by</b>	TimeRangeType.tolerance			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
relative	Integer	1	attr	Maximum allowable deviation in percent (percent of the corresponding TimeValue).

**Table 6.72: RelativeTolerance**

<b>Class</b>	<b>AbsoluteTolerance</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	Maximum allowable deviation			
<b>Base</b>	ARObject, TimeRangeTypeTolerance			
<b>Aggregated by</b>	TimeRangeType.tolerance			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
absolute	TimeValue	1	attr	Maximum allowable deviation in duration (in seconds)


**Table 6.73: AbsoluteTolerance**

### 6.4.4 Configuration of a trigger for COM\_TriggerIPduSend API call

In the AUTOSAR BswM module a BswMAction with BswMTriggerIPduSend may be defined. The COM API Com\_TriggerIPDUSend is called when this action is configured. By the call of Com\_TriggerIPDUSend an IPdu with a given ID is triggered for transmission.

With such a configuration a single transmission of an IPdu can be configured that is independent of the configured COM transmission modes, e.g. in case of a vehicle mode change.

In a System Description the usage of the Com\_TriggerIPDUSend API is defined with the TriggerIPduSendCondition that is aggregated by the PduTriggering in the role triggerIPduSendCondition. The TriggerIPduSendCondition defines the trigger for the Com\_TriggerIPDUSend API call.

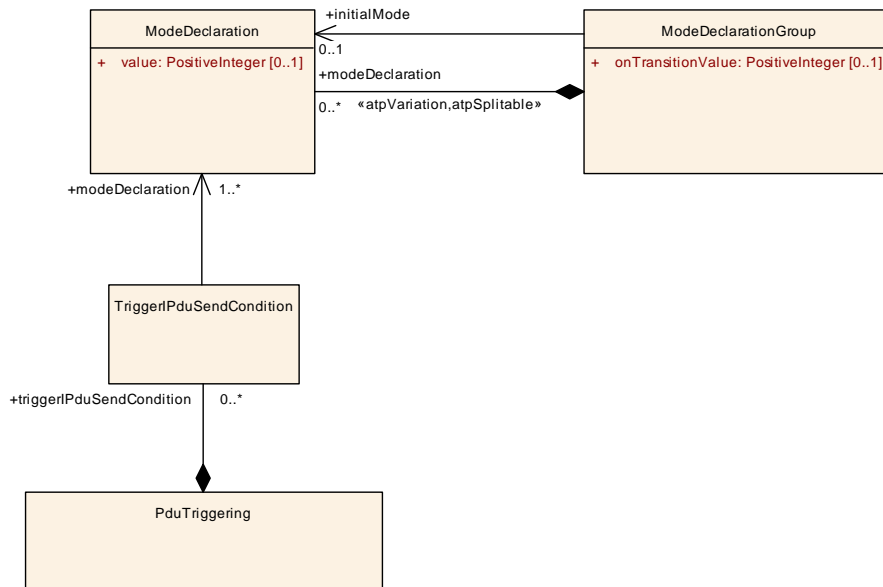

**Figure 6.24: TriggerIPduSendCondition**

<b>Class</b>	<b>TriggerIPduSendCondition</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing			
<b>Note</b>	The condition defined by this class evaluates to true if one of the referenced modeDeclarations (OR associated) is active. The condition is used to define when the Pdu is triggered with the Com_TriggerIPDUSend API call.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	PduTriggering.triggerIPduSendCondition			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
mode Declaration	ModeDeclaration	1..*	ref	Reference to one modeDeclaration which is OR associated in the context of the TriggerIPduSend Condition.

**Table 6.74: TriggerIPduSendCondition**

Only if all defined TriggerIPduSendConditions evaluate to true (AND associated) the Com\_TriggerIPDUSend API shall be called.

**[constr\_3211] PduTriggerings with triggerIPduSendCondition** [Only PduTriggerings with references to ISignalIPdus are allowed to contain a triggerIPduSendCondition.]()

Please note that OR Conditions defined by the `TriggerIPduSendCondition.moduleDeclaration` are evaluated first. The AND Conditions defined by `PduTriggering.triggerIPduSendConditions` are evaluated after the OR Conditions.



## 6.5 I-Pdu Multiplexer

Multiplexing is used to transport varying Com IPdus at the same position in a single multiplexed IPdu. A multiplexed IPdu consists of a dynamic part, a selector field and an optional static part. According to the value of the selector field the dynamic part can have a different layout.

**[TPS\_SYST\_01078] Dynamic Part of a MultiplexedIPdu** [For each alternative of a MultiplexedIPdu there is exactly one Com IPdu that is transmitted in the dynamic part.]()

**[TPS\_SYST\_01079] Static Part of a MultiplexedIPdu** [The static part of a MultiplexedIPdu is the same regardless of the selector field and consists of exactly one Com IPdu.]()

The MultiplexedIPdu element contains attributes that describe the position and the length of a selector within an IPdu. A selector is a bitfield of certain length, by the value of which the corresponding data region of the dynamic part shall be interpreted dynamically, i.e. at run-time.

**[constr\_3007] selectorFieldCodes for dynamic part alternatives** [The selectorFieldCodes for the dynamic part alternatives within one MultiplexedIPdu shall differ from each other.]()

**[constr\_3097] Overlapping of segments of one MultiplexedIPdu is not allowed** [The segments defined by the SegmentPosition elements of one and the same MultiplexedIPdu - aggregated via StaticPart and DynamicPart - shall not overlap.]()

**[constr\_3098] Defined segments of one MultiplexedIPdu shall not exceed the length of the MultiplexedIPdu** [The segments defined by the SegmentPosition elements of one and the same MultiplexedIPdu - aggregated via StaticPart and DynamicPart - shall not exceed the length of the MultiplexedIPdu.]()

**[constr\_3099] Defined segments in a DynamicPart shall not exceed the length of any DynamicPartAlternative.iPdu** [The segments defined by the SegmentPosition elements aggregated in the DynamicPart of a MultiplexedIPdu shall not exceed the length of any DynamicPartAlternative.iPdu.]()

**[constr\_3100] Defined segments in a StaticPart shall not exceed the length of the StaticPart.iPdu** [The segments defined by the SegmentPosition elements aggregated in the StaticPart of a MultiplexedIPdu shall not exceed the length of the StaticPart.iPdu.]()

**[constr\_3101] Signal representation of selector field for DynamicPartAlternative** [Every ISignalIPdu that is referenced by the DynamicPartAlternative shall contain an ISignal that represents the selector field. The selector field signal shall be located at the position that is described by the selectorFieldLength and selectorFieldStartPosition.]()

**[constr\_5254] Value range of `MultiplexedIPdu.selectorFieldLength`** [The value of `MultiplexedIPdu.selectorFieldLength` shall be in the range of 1..16 Bits.]()

It is assumed by the IPduM that the value of the `ISignal` representing the selector field value matches the value defined in `DynamicPartAlternative.selectorFieldCode`. The IPduM does not set or modify the selector field value. Therefore it is essential that the System Description is defined in a consistent way in order to get valid selector field value configurations.

There are two approaches how the selector field value is configured:

- static initialization of the `ISignal` representing the selector field value.
- giving applications the possibility to write the selector field value.

If the selector field value is initialized using the `ISignal` representing the selector field value then the consistency is defined in [TPS\_SYST\_02351]. In this case there is no change to the value of the `ISignal` representing the selector field value during runtime. Each `DynamicPartAlternative` has a corresponding `IPdu` with a correctly defined selector field value. Regardless which `DynamicPartAlternative` is triggered by COM, it always has the correct selector field value.

**[TPS\_SYST\_02351] Selector field signal initial values in case no application writing the selector field signal** [If

- the `ISignal` representing the selector field is referenced by an `ISignalTriggering` and that `ISignalTriggering` refers to an `ISignalPort` where the `communicationDirection` is set to `out` and
- the `ISignal` representing the selector field is referring to a `SystemSignal` and that `SystemSignal` is neither
  - referenced by a `SenderReceiverToSignalMapping` in the role `system-Signal` nor
  - part of a `SystemSignalGroup` that in turn is referenced by a `SenderReceiverToSignalGroupMapping`,

then this `ISignal` representing the selector field shall have an `initValue` defined which corresponds to the `DynamicPartAlternative.selectorFieldCode` of the respective dynamic part alternative `ISignalIPdu`.]()

If the application shall be able to write the selector field value then the following specification items apply: [TPS\_SYST\_02352], [constr\_5232], [TPS\_SYST\_02353], [TPS\_SYST\_02355], [TPS\_SYST\_02356], [constr\_5233].

One possible use-case for the application to be able to write the selector field value is to use the applications write access as the trigger to send out one specific `DynamicPartAlternative`, exactly that `DynamicPartAlternative` which matches the written selector field value. In order to achieve this functionality the COM module needs to be configured according to the rules defined below.

The IPduM on sender side gets transmission requests from COM (for the case of application writing the selector field value: the case of trigger transmit is excluded in [TPS\_SYST\_02353]).

[TPS\_SYST\_02355] defines that only the valid `DynamicPartAlternative` is actually triggered for transmission by the COM module, and thus is made available to the IPduM.

From the perspective of the IPduM there is not difference whether the selector field value has been defined by initializing the COM-Signal or whether the application has written the selector field value and the COM module has filtered the proper `DynamicPartAlternative` to be sent to the IPduM.

#### [TPS\_SYST\_02352] Triggering in case of application writing the selector field signal [If

- the `ISignal` representing the selector field is referenced by an `ISignalTriggering` and that `ISignalTriggering` refers to an `ISignalPort` where the `communicationDirection` is set to `out` and
- the `ISignal` representing the selector field is referring to a `SystemSignal` and that `SystemSignal` is either
  - referenced by a `SenderReceiverToSignalMapping` in the role `system-Signal` or
  - part of a `SystemSignalGroup` that in turn is referenced by a `Sender-ReceiverToSignalGroupMapping`,

then this `ISignal` representing the selector field shall be the only `ISignal` that is mapped into the dynamic part alternative `ISignalIPdu` with a `transferProperty` set to an arbitrary value. ]()

#### [constr\_5232] Triggering in case of application writing the selector field signal [If

- the `ISignal` representing the selector field is referenced by an `ISignalTriggering` and that `ISignalTriggering` refers to an `ISignalPort` where the `communicationDirection` is set to `out` and
- the `ISignal` representing the selector field is referring to a `SystemSignal` and that `SystemSignal` is either
  - referenced by a `SenderReceiverToSignalMapping` in the role `system-Signal` or
  - part of a `SystemSignalGroup` that in turn is referenced by a `Sender-ReceiverToSignalGroupMapping`

then any `ISignal` other than the `ISignal` representing the selector field shall be mapped into that dynamic part alternative `ISignalIPdu` using the `transferProperty` set to `pending`. ]()

In other words, if the selector field signal is written by the application software, then the selector field `ISignal` may be the only `ISignal` which triggers the dynamic part alternative `ISignalIPdu`. No triggering of a dynamic part alternative `ISignalIPdu` may be a use case as well, in such cases a cyclic transmission would still be possible.

**[TPS\_SYST\_02353] No support for trigger transmit in case of application writing the selector field signal** [If

- the `ISignal` representing the selector field is referenced by an `ISignalTriggering` and that `ISignalTriggering` refers to an `ISignalPort` where the `communicationDirection` is set to `out` and
- the `ISignal` representing the selector field is referring to a `SystemSignal` and that `SystemSignal` is either
  - referenced by a `SenderReceiverToSignalMapping` in the role `system-Signal` or
  - part of a `SystemSignalGroup` that in turn is referenced by a `Sender-ReceiverToSignalGroupMapping`

then the dynamic part alternative `ISignalIPdu`, where the `ISignal` representing the selector field is mapped to, shall not be used in a trigger transmit COM stack configuration.]()

**[TPS\_SYST\_02354] No support for Just-In-Time update of dynamic parts in case of application writing the selector field signal** [If

- the `ISignal` representing the selector field is referenced by an `ISignalTriggering` and that `ISignalTriggering` refers to an `ISignalPort` where the `communicationDirection` is set to `out` and
- the `ISignal` representing the selector field is referring to a `SystemSignal` and that `SystemSignal` is either
  - referenced by a `SenderReceiverToSignalMapping` in the role `system-Signal` or
  - part of a `SystemSignalGroup` that in turn is referenced by a `Sender-ReceiverToSignalGroupMapping`

then the `IpduMJitUpdate` configuration parameter of the `IpduMTxDynamicPart` corresponding to the `ISignalIPdu` shall be configured to false during ECU Configuration.]()

In other words, if the selector field signal is written by the application software, then the dynamic part alternative `ISignalIPdu` shall only be triggered by the application layer, no trigger transmit support allowed.

**[TPS\_SYST\_02355] `TransmissionModeDeclaration` in case of application writing the selector field signal** [If

- the `ISignal` representing the selector field is referenced by an `ISignalTriggering` and that `ISignalTriggering` refers to an `ISignalPort` where the `communicationDirection` is set to `out` and
- the `ISignal` representing the selector field is referring to a `SystemSignal` and that `SystemSignal` is either
  - referenced by a `SenderReceiverToSignalMapping` in the role `system-Signal` or
  - part of a `SystemSignalGroup` that in turn is referenced by a `Sender-ReceiverToSignalGroupMapping`

then the dynamic part alternative `ISignalIPdu`, where the `ISignal` representing the selector field is mapped to, shall have an `ISignalIPdu.ipduTimingSpecification` with a `TransmissionModeDeclaration` where the `TransmissionModeDeclaration.transmissionModeCondition` defines a `TransmissionModeCondition` with

- `TransmissionModeCondition.iSignalInIPdu` refers to the `ISignalToIPduMapping` which maps the `ISignal` representing the selector field
- `DataFilter.dataFilterType` = `maskedNewEqualsX`,
- `DataFilter.mask` is set to  $(2^{\langle selector\_field\_bitsize \rangle} - 1)$ , where  $\langle selector\_field\_bitsize \rangle$  is the size of the selector field signal in bits, i.e. `ISignal.length` of the `ISignal` representing the selector field,
- `DataFilter.x` corresponds to the `DynamicPartAlternative.selectorFieldCode` of the respective dynamic part alternative `ISignalIPdu`,
- `TransmissionModeDeclaration.transmissionModeFalseTiming` shall not be defined.

]()

**[TPS\_SYST\_02356] Only one `TransmissionModeCondition` in case of application writing the selector field signal** [If

- the `ISignal` representing the selector field is referenced by an `ISignalTriggering` and that `ISignalTriggering` refers to an `ISignalPort` where the `communicationDirection` is set to `out` and
- the `ISignal` representing the selector field is referring to a `SystemSignal` and that `SystemSignal` is either
  - referenced by a `SenderReceiverToSignalMapping` in the role `system-Signal` or
  - part of a `SystemSignalGroup` that in turn is referenced by a `Sender-ReceiverToSignalGroupMapping`

then the dynamic part alternative `ISignalIPdu`, where the `ISignal` representing the selector field is mapped to, shall have an `ISignalIPdu.ipduTimingSpecification` with a `TransmissionModeDeclaration` where there is only one `TransmissionModeCondition` defined, as specified in [TPS\_SYST\_02355].]()

In other words, when the application software writes the selector field signal only that dynamic part alternative `ISignalIPdu` with the matching `selectorFieldCode` is actually available for sending.

**[constr\_5233] Usage of `invalidValue` in case of application writing the selector field signal** [If

- the `ISignal` representing the selector field is referenced by an `ISignalTriggering` and that `ISignalTriggering` refers to an `ISignalPort` where the `communicationDirection` is set to `out` and
- the `ISignal` representing the selector field is referring to a `SystemSignal` and that `SystemSignal` is either
  - referenced by a `SenderReceiverToSignalMapping` in the role `system-Signal` or
  - part of a `SystemSignalGroup` that in turn is referenced by a `Sender-ReceiverToSignalGroupMapping`

then

- the `ISignal` representing the selector field shall either
  - define no invalid value (`ISignal.networkRepresentationProps.invalidValue`) or
  - the `invalidValue` defined shall be different than any of the defined selector field values for that `MultiplexedIPdu`.

]()

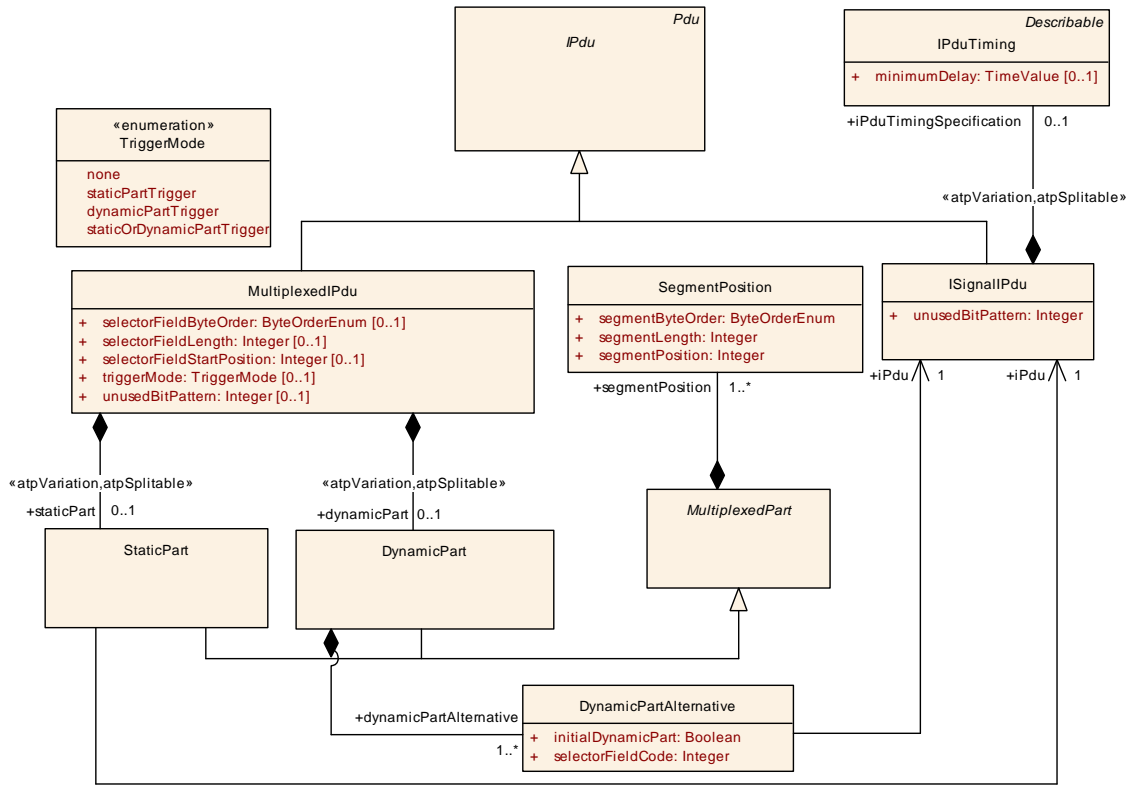


Figure 6.25: I-Pdu Multiplexer (FibexCore: IPDUMultiplexerOverview)

<b>Enumeration</b>	<b>TriggerMode</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
<b>Note</b>	IPduM can be configured to send a transmission request for the new multiplexed I-PDU to the PDU-Router because of conditions/ modes.
<b>Aggregated by</b>	<a href="#">MultiplexedIPdu.triggerMode</a>
<b>Literal</b>	<b>Description</b>
dynamicPartTrigger	IPduM sends a transmission request to the PduR if a dynamic part is received. <b>Tags:</b> atp.EnumerationLiteralIndex=0
none	IPduM does not trigger transmission because of receiving anything of this IPdu in case of Trigger Transmit. <b>Tags:</b> atp.EnumerationLiteralIndex=1
staticOrDynamicPartTrigger	IPduM sends a transmission request to the PduR if a static or dynamic part is received. <b>Tags:</b> atp.EnumerationLiteralIndex=2
staticPartTrigger	IPduM sends a transmission request to the PduR if a static part is received. <b>Tags:</b> atp.EnumerationLiteralIndex=3

**Table 6.75: TriggerMode**

<b>Class</b>	<b>MultiplexedIPdu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	<p>A MultiplexedPdu (i.e. NOT a COM I-PDU) contains a DynamicPart, an optional StaticPart and a selector Field. In case of multiplexing this IPdu is routed between the Pdu Multiplexer and the Interface Layer.</p> <p>A multiplexer is used to define variable parts within an IPdu that may carry different signals. The receivers of such a IPdu can determine which signalPdus are transmitted by evaluating the selector field, which carries a unique selector code for each sub-part.</p> <p><b>Tags:</b>atp.recommendedPackage=Pdus</p>			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">IPdu</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Pdu</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dynamicPart	<a href="#">DynamicPart</a>	0..1	aggr	<p>According to the value of the selector field some parts of the IPdu have a different layout. In a complete System Description a MultiplexedIPdu shall contain a Dynamic Part. The following use cases support the multiplicity to be 0..1:</p> <ul style="list-style-type: none"> <li>• If a MultiplexedIPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedIPdu doesn't need to be described in the System Extract/Ecu Extract.</li> <li>• If a MultiplexedIPdu is received by an ECU which is only interested in the static part of the MultiplexedIPdu then the dynamicPart does not need to be described in the System Extract/Ecu Extract.</li> </ul> <p>atpVariation: Content of a multiplexed PDU can vary.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation</p> <p><b>Tags:</b> atp.Splitkey=dynamicPart, dynamicPart.variation Point.shortLabel vh.latestBindingTime=postBuild</p>







Class	MultiplexedIPdu			
selectorField ByteOrder	ByteOrderEnum	0..1	attr	<p>This attribute defines the order of the bytes of the selector Field and the packing into the MultiplexedIPdu. Please consider that [constr_3247] and [constr_3223] are restricting the usage of this attribute.</p> <p>In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p>
selectorField Length	Integer	0..1	attr	<p>The size in bits of the selector field shall be configurable in a range of 1-16 bits. In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p>
selectorField StartPosition	Integer	0..1	attr	<p>This parameter is necessary to describe the position of the selector field within the IPdu.</p> <p>Note that the absolute position of the selectorField in the MultiplexedIPdu is determined by the definition of the selectorFieldByteOrder attribute of the Multiplexed Pdu. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the IPdu. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the IPdu. In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p> <p>In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p>
staticPart	StaticPart	0..1	aggr	<p>The static part of the multiplexed IPdu is the same regardless of the selector field. The static part is optional.</p> <p>atpVariation: Content of a multiplexed PDU can vary.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=staticPart, staticPart.variationPoint.short Label vh.latestBindingTime=postBuild</p>
triggerMode	TriggerMode	0..1	attr	<p>IPduM can be configured to send a transmission request for the new multiplexed IPdu to the PDU-Router because of the trigger conditions/ modes that are described in the TriggerMode enumeration.</p> <p>In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p>





Class	MultiplexedIPdu			
unusedBit Pattern	Integer	0..1	attr	<p>AUTOSAR COM and AUTOSAR IPDUM are filling not used areas of an IPdu with this bit-pattern. This attribute is mandatory to avoid undefined behavior. This byte-pattern will be repeated throughout the IPdu.</p> <p>In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p>

**Table 6.76: MultiplexedIPdu**

Class	StaticPart			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	Some parts/signals of the I-PDU may be the same regardless of the selector field. Such a part is called static part. The static part is optional.			
Base	ARObject, MultiplexedPart			
Aggregated by	MultiplexedIPdu.staticPart			
Attribute	Type	Mult.	Kind	Note
iPdu	ISignalIPdu	1	ref	Reference to a Com IPdu which is routed to the IPduM module and is combined to a multiplexedPdu.

**Table 6.77: StaticPart**

Class	DynamicPart			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	Dynamic part of a multiplexed I-Pdu. Reserved space which is used to transport varying SignalIPdus at the same position, controlled by the corresponding selectorFieldCode.			
Base	ARObject, MultiplexedPart			
Aggregated by	MultiplexedIPdu.dynamicPart			
Attribute	Type	Mult.	Kind	Note
dynamicPart Alternative	DynamicPartAlternative	1..*	aggr	Com IPdu alternatives that are transmitted in the Dynamic Part of the MultiplexedIPdu.

**Table 6.78: DynamicPart**

Class	DynamicPartAlternative			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	One of the Com IPdu alternatives that are transmitted in the Dynamic Part of the MultiplexedIPdu. The selectorFieldCode specifies which Com IPdu is contained in the DynamicPart within a certain transmission of a multiplexed PDU.			
Base	ARObject			
Aggregated by	DynamicPart.dynamicPartAlternative			
Attribute	Type	Mult.	Kind	Note





Class	DynamicPartAlternative			
initialDynamicPart	Boolean	1	attr	Dynamic part that shall be used to initialize this multiplexed IPdu. Constraint: Only one "DynamicPartAlternative" in a "DynamicPart" shall be the initialDynamicPart.
iPdu	<a href="#">ISignalIPdu</a>	1	ref	Reference to a Com IPdu which is routed to the IPduM module and is combined to a multiplexedPdu.
selectorFieldCode	Integer	1	attr	The selector field is part of a multiplexed IPdu. It consists of contiguous bits. The value of the selector field selects the layout of the multiplexed part of the IPdu.

**Table 6.79: DynamicPartAlternative**

Class	MultiplexedPart (abstract)			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	The StaticPart and the DynamicPart have common properties. Both can be separated in multiple segments within the multiplexed PDU.			
Base	ARObject			
Subclasses	<a href="#">DynamicPart</a> , <a href="#">StaticPart</a>			
Attribute	Type	Mult.	Kind	Note
segmentPosition	<a href="#">SegmentPosition</a>	1..*	aggr	The StaticPart and the DynamicPart can be separated in multiple segments within the multiplexed PDU. Therefore the StaticPart and the DynamicPart can contain multiple SegmentPositions.

**Table 6.80: MultiplexedPart**

Class	SegmentPosition			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	The StaticPart and the DynamicPart can be separated in multiple segments within the multiplexed PDU. The ISignalPdus are copied bit by bit into the MultiplexedIPdu. If the space of the first segment is 5 bits large than the first 5 bits of the ISignalIPdu are copied into this first segment and so on.			
Base	ARObject			
Aggregated by	<a href="#">MultiplexedPart.segmentPosition</a>			
Attribute	Type	Mult.	Kind	Note
segmentByteOrder	<a href="#">ByteOrderEnum</a>	1	attr	This attribute defines the order of the bytes of the segment and the packing into the MultiplexedIPdu. Please consider that <a href="#">[constr_3247]</a> and <a href="#">[constr_3224]</a> are restricting the usage of this attribute.
segmentLength	Integer	1	attr	Data Length of the segment in bits.





Class	SegmentPosition			
segment Position	Integer	1	attr	<p>Segments bit position relatively to the beginning of a multiplexed IPdu.</p> <p>Note that the absolute position of the segment in the MultiplexedIPdu is determined by the definition of the segmentByteOrder attribute of the SegmentPosition. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the IPdu. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the IPdu. In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p>

**Table 6.81: SegmentPosition**


**[constr\_3247] Byte order mix within a MultiplexedIPdu is not allowed** [The segmentByteOrder of all SegmentPositions and the selectorFieldByteOrder shall have the same value in the MultiplexedIPdu.]()

**[constr\_3223] No ByteOrderEnum.opaque allowed for MultiplexedIPdu.selectorFieldByteOrder** [The values of MultiplexedIPdu.selectorFieldByteOrder are restricted to ByteOrderEnum.mostSignificantByteFirst and ByteOrderEnum.mostSignificantByteLast. I.e. the value ByteOrderEnum.opaque is not allowed.]()

**[constr\_3224] No ByteOrderEnum.opaque allowed for SegmentPosition.segmentByteOrder.** [The values of SegmentPosition.segmentByteOrder are restricted to ByteOrderEnum.mostSignificantByteFirst and ByteOrderEnum.mostSignificantByteLast. I.e. the value ByteOrderEnum.opaque is not allowed.]()


Figure 6.26 shows an example of an IPdu Multiplexer. The static part of the multiplexed IPdu contains ComIPduA. The value of the selector field in the dynamic part decides which content is transmitted. ComIPduB is transmitted if the selector field value is "0". ComIPduC is transmitted if the selector field value is "1".

The static and the dynamic part can consist of more than one element. These sub parts of the static or dynamic parts are called segments. In Figure 6.26 the dynamic Part is segmented into two parts. More details can be found in [24].

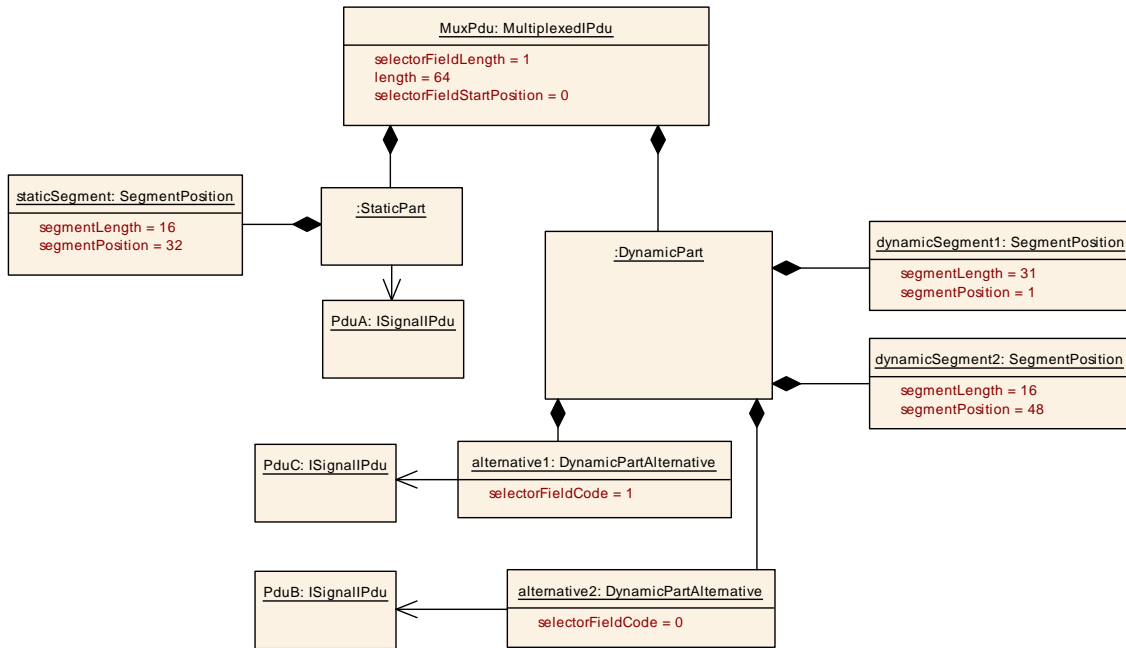


**Figure 6.26: I-Pdu Multiplexer Example**

Each of the following figures shows an example with an allowed IPduM configuration. Please note that the AUTOSAR IPduM module does not shift any part (static or dynamic) IPdu and just merges the payload. *ISignalIPdus* that are referenced by the different *DynamicPartAlternatives* in one *MultiplexedIPdu* shall always have the same length. A configuration may be optimized with respect to unused data at end of a *StaticPart ISignalIPdu*. This is shown in figure 6.27 where the *ISignalIPdu* that is referenced by the *StaticPart* is shorter than the *MultiplexedIPdu*. An optimization with respect to unused data at end of *DynamicPartAlternative ISignalIPdus* is shown in figure 6.28.

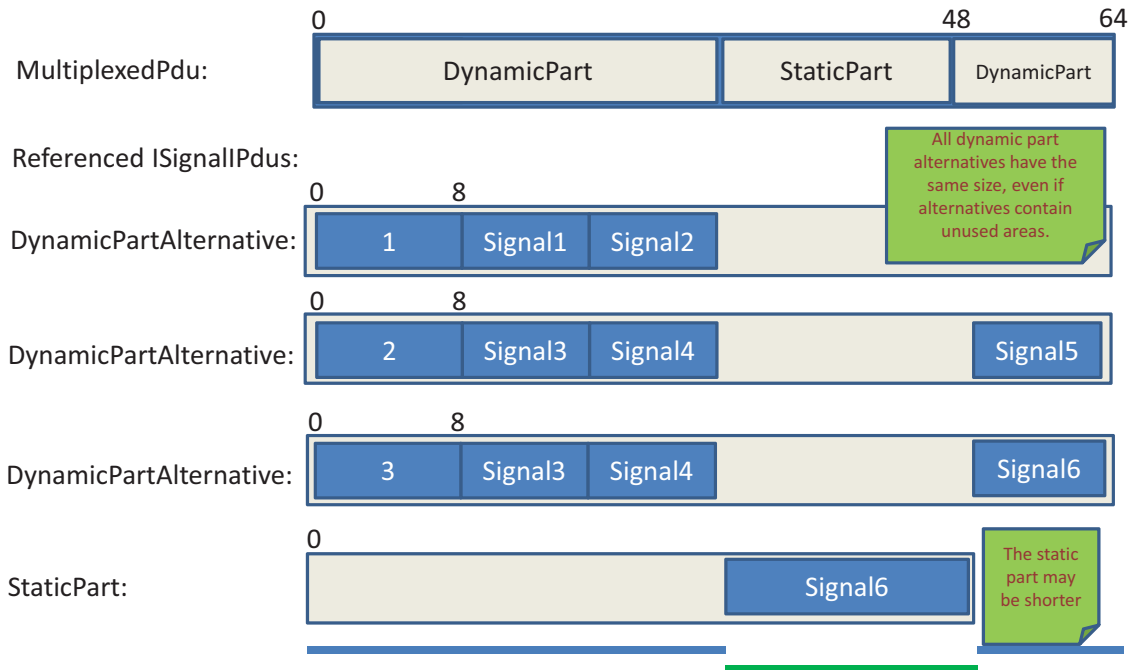

**Figure 6.27: Multiplexer configuration example optimized with respect to unused data at end of static part Pdu**

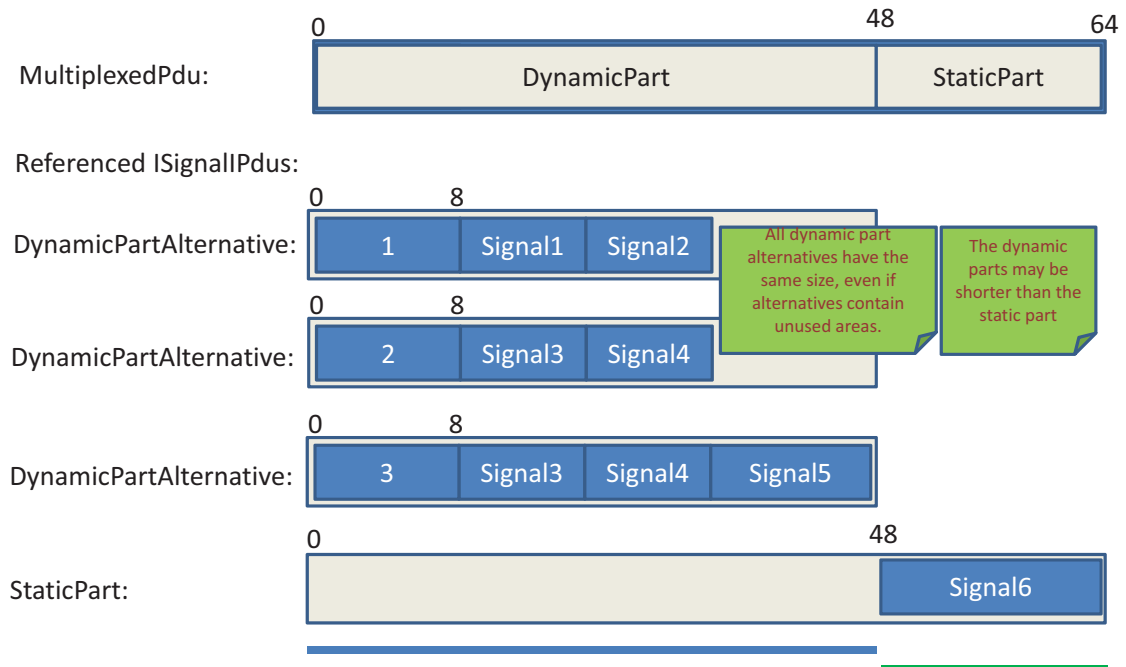

**Figure 6.28: Multiplexer configuration example optimized with respect to unused data at end of dynamic part Pdu**

### 6.5.1 I-Pdu Multiplexer in System Extract/ECU Extract

The processing in the ECU determines the description of `MultiplexedIPdu` in the System Extract/Ecu Extract. In case that a Gateway ECU only routes a `MultiplexedIPdu` without being interested in the content leads to a reduced description in the System Extract/ECU Extract. The following items describe the different scenarios and the consequences for the System Extract/ECU Extract description. A complete System Description contains all information.

#### [TPS\_SYST\_01080] Sending or receiving of a `MultiplexedIPdu` in System Extract/ECU Extract [

- all attributes of the `MultiplexedIPdu` are mandatory
- aggregated `DynamicPart` with associated `ISignalIPdu`s is mandatory in case
  - of sending
  - of receiving if at least one `DynamicPartAlternative` is received by one Ecu of the Extract.
- a `PduTriggering` shall be defined for the `MultiplexedIPdu`
- a `PduTriggering` shall be defined for all included `ISignalIPdu`s in the `DynamicPart` and `StaticPart`

]()

The initial ECU Configuration Generator configures COM, PduR, IpduM and lower layers with the information from the System Extract/ECU Extract.

#### [TPS\_SYST\_01081] Gatewaying of a `MultiplexedIPdu` in System Extract/ECU Extract [

- `StaticPart` and `DynamicPart` definitions shall be omitted, thus no `ISignalIPdu` description shall be included
- all attributes of the `MultiplexedIPdu` shall be omitted.
- a `PduTriggering` shall be defined only for the gatewayed `MultiplexedIPdu`
- an `IPduMapping` between the source and the target `PduTriggerings` shall be defined

]()

The initial ECU Configuration Generator configures PduR and lower layers with the information from the System Extract/ECU Extract.

#### [TPS\_SYST\_01082] Receiving and gatewaying of a `MultiplexedIPdu` in System Extract/ECU Extract [

- all attributes of the `MultiplexedIPdu` are mandatory

- aggregated `DynamicPart` with associated `ISignalIPdus` is mandatory in case at least one `DynamicPartAlternative` is received by one Ecu of the Extract.
- a `PduTriggering` shall be defined for the `MultiplexedIPdu`
- an `IPduMapping` between the source and the target `PduTriggerings` shall be defined
- a `PduTriggering` shall be defined for all included `ISignalIPdus` in the `DynamicPart` and `StaticPart`

]()

The initial ECU Configuration Generator configures Com, PduR, IpduM and lower layers with the information from the System Extract/ECU Extract.



## 6.6 Frames

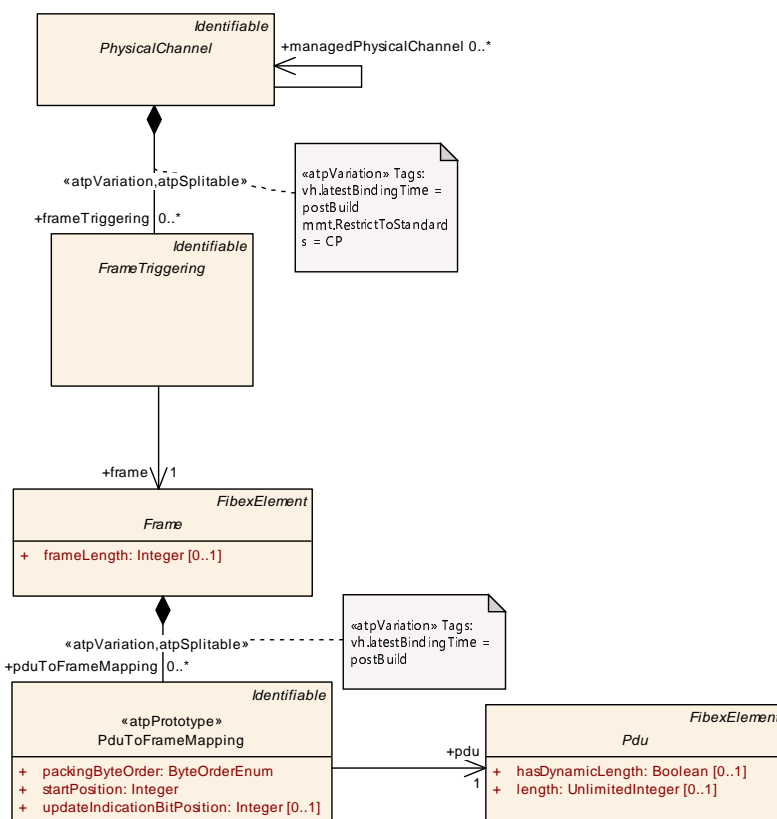


Figure 6.29: Frame Overview (FibexCore: FrameOverview)

[TPS\_SYST\_01083] **Frame** [A **Frame** represents a general design object that is used to describe the layout of the included **Pdus** as a reusable asset.] ()

[TPS\_SYST\_01084] **FrameTriggering** [The **FrameTriggering** implements the reusable definition of a **Frame** within a concrete context and thus defines a **Frame**'s send behavior and identification on a certain **PhysicalChannel**.] ()

[TPS\_SYST\_02255] **Frame.frameLength** usage for **FlexrayFrames** and **CanFrames** [The **frameLength** for a **FlexrayFrame** shall be equal or larger than the combined length of all **Pdus** that are mapped to the frame.

The **frameLength** for a **CanFrame** is used to describe the minimum length of a received L-PDU to be accepted by a data length check. Therefore, it is possible to configure a **frameLength** which is smaller than the mapped **Pdu** to this frame. If data length check is not needed the **frameLength** of a **CanFrame** may be left undefined. The reason for that is that if the **CanFrame.frameLength** is larger than the **Pdu.length** of the mapped **Pdu** and data length check is used, a received **Pdu** will always be discarded due to a failing minimum length check.] ()

<b>Class</b>	<b>Frame</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	Data frame which is sent over a communication medium. This element describes the pure Layout of a frame sent on a channel.			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Subclasses</b>	AbstractEthernetFrame, CanFrame, FlexrayFrame, LinFrame			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
frameLength	Integer	0..1	attr	The used length (in bytes) of the referencing frame. Should not be confused with a static byte length reserved for each frame by some platforms (e.g. FlexRay).  The frameLength of zero bytes is allowed.  Please consider also TPS_SYST_02255.
pduToFrame Mapping	PduToFrameMapping	*	aggr	A frames layout as a sequence of Pdus. atpVariation: The content of a frame can be variable. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=pduToFrameMapping.shortName, pduToFrameMapping.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.82: Frame**

<b>Class</b>	<b>FrameTriggering</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
<b>Note</b>	The FrameTriggering describes the instance of a frame sent on a channel and defines the manner of triggering (timing information) and identification of a frame on the channel, on which it is sent.  For the same frame, if FrameTriggerings exist on more than one channel of the same cluster the fan-out/in is handled by the Bus interface.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Subclasses</b>	CanFrameTriggering, EthernetFrameTriggering, FlexrayFrameTriggering, LinFrameTriggering			
<b>Aggregated by</b>	PhysicalChannel.frameTriggering			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
frame	Frame	1	ref	One frame can be triggered several times, e.g. on different channels. If a frame has no frame triggering, it won't be sent at all. A frame triggering has assigned exactly one frame, which it triggers.
framePort	FramePort	*	ref	References to the FramePort on every ECU of the system which sends and/or receives the frame.  References for both the sender and the receiver side shall be included when the system is completely defined.
pduTriggering	PduTriggering	*	ref	This reference provides the relationship to the Pdu Triggerings that are implemented by the FrameTriggering. The reference is optional since no PduTriggering can be defined for NmPdus and XCP Pdus. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=pduTriggering.pduTriggering, pduTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.83: FrameTriggering**

## 6.7 Specialized Attributes of the Communication Entities

In the Basic Software the timing of bus frames can be controlled by send requests of the RTE in combination with the Transmission Mode and Transfer Property parameters in COM. On the other hand the timing can be controlled by the FlexRay Interface and LIN Interface.

This chapter describes the protocol specific extensions to the communication elements.

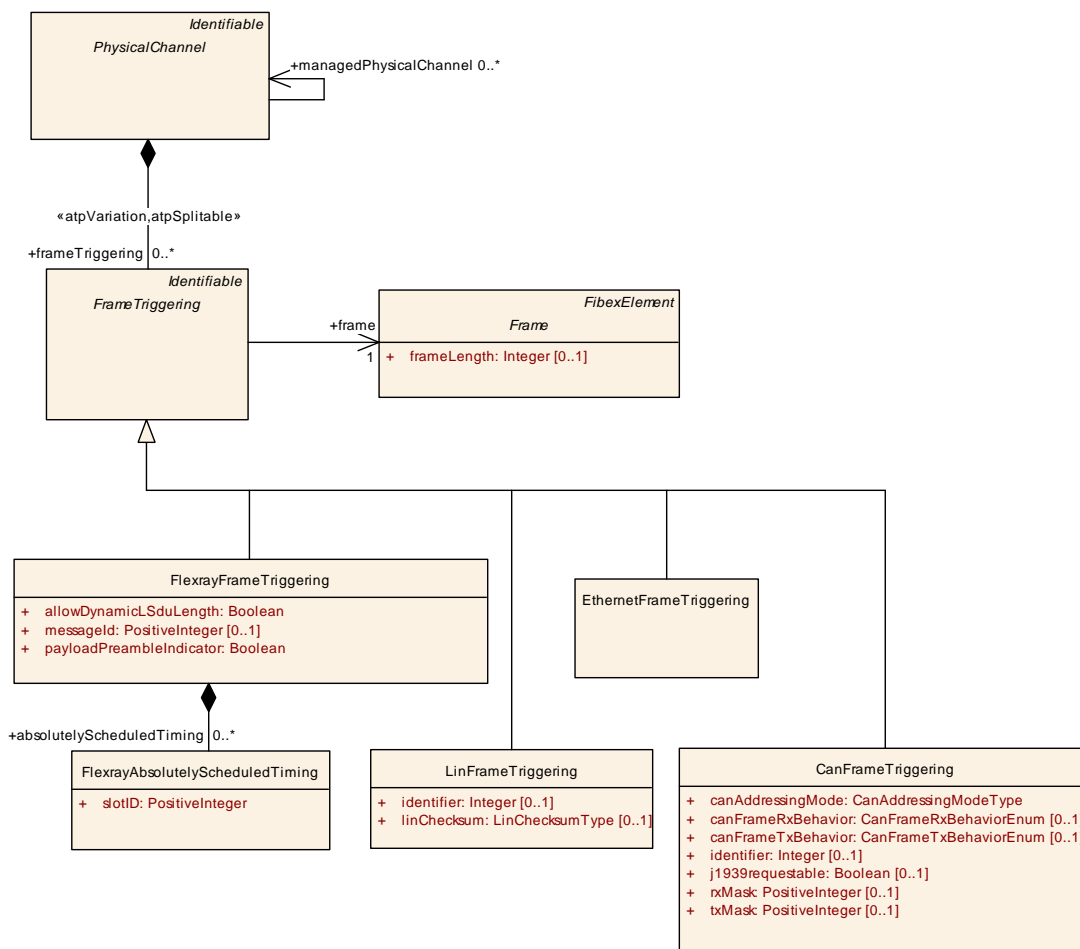


Figure 6.30: Frame Triggering

### 6.7.1 FlexRay specific description

**[TPS\_SYST\_01128] Communication over FlexRay** [The System Template supports the description of communication over FlexRay.] ([RS\\_SYST\\_00024](#))

In the following, the elements necessary to describe the FlexRay communication are specified.

FlexRay static segment parameters: Each `FlexrayFrameTriggering` is identified by its `slotID` and `communicationCycle`. In the static segment all communication

slots are of identical, statically configured duration and all `FrameTriggerings` are of identical, statically configured length.


The sending behavior where the exact time for the `FlexrayFrameTriggerings` transmission is guaranteed is provided in the System Template by the usage of `FlexrayAbsolutelyScheduledTiming`.

In the cycle counter field of every frame, the current value of the cycle counter is transmitted (see FlexRay frame format). This value is incremented at the beginning of each new cycle, ranging from 0 to 63, and is reset to 0 after a sequence of 64 cycles.

**[TPS\_SYST\_01085] Transmission of a `FrameTriggering` multiple times within one communication cycle** [In the static segment `FlexrayFrameTriggerings` can be sent multiple times within one communication cycle. For describing this case multiple `FlexrayAbsolutelyScheduledTimings` shall be used.] (*RS\_SYST\_00024*)

FlexRay dynamic segment parameters: In the dynamic segment the duration of communication slots may vary in order to accommodate frames of varying length. Furthermore, in the dynamic part, the `slotID` is equivalent to a priority. The higher the number the lower is the priority.

The frames in the static and in the dynamic segment are described in the same way. Each `FlexrayFrameTriggering` is identified by its `slotID` and `communicationCycle`. A description is provided by the usage of `FlexrayAbsolutelyScheduledTiming`.

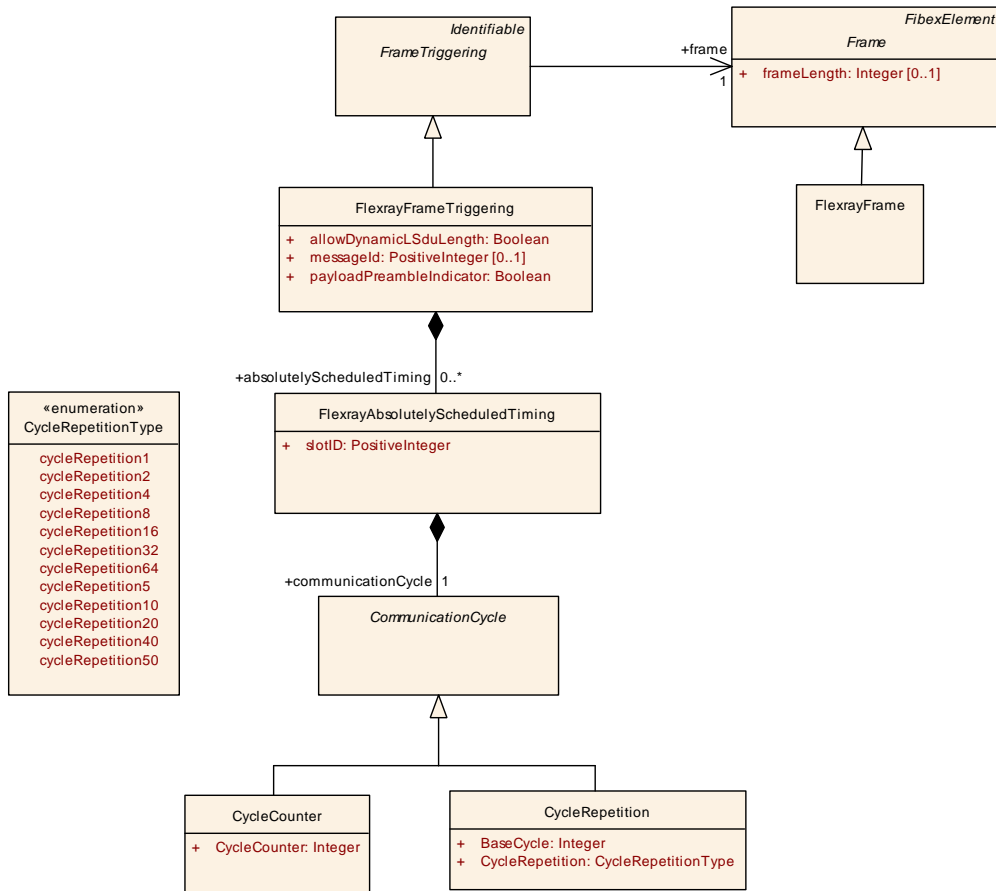

**Figure 6.31: FlexRay Absolutely Scheduled Timing (Fibex4FlexRay:FlexrayAbsolutelyScheduledTiming)**

<b>Class</b>	<b>FlexrayFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayCommunication			
<b>Note</b>	FlexRay specific Frame element. <b>Tags:</b> atp.recommendedPackage=Frames			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Frame, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.84: FlexrayFrame**

<b>Class</b>	<b>FlexrayFrameTriggering</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayCommunication			
<b>Note</b>	FlexRay specific attributes to the FrameTriggering			
<b>Base</b>	ARObject, FrameTriggering, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	PhysicalChannel.frameTriggering			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-





Class	FlexrayFrameTriggering			
absolutely Scheduled Timing	<a href="#">FlexrayAbsolutelyScheduledTiming</a>	*	aggr	Specification of a sending behaviour where the exact time for the frames transmission is guaranteed.
allowDynamic LSduLength	Boolean	1	attr	Allows L-PDU length reduction and indicates that the related CC buffer has to be reconfigured for the actual length and Header-CRC before transmission of the L-PDU.  If this attribute is set to true than the referenced Frame length attribute defines the max. length.
messageld	PositiveInteger	0..1	attr	The first two bytes of the payload segment of the FlexRay frame format for frames transmitted in the dynamic segment can be used as receiver filterable data called the message ID.
payload Preamble Indicator	Boolean	1	attr	Switching the Payload Preamble bit.

**Table 6.85: FlexrayFrameTriggering**

Class	FlexrayAbsolutelyScheduledTiming			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Flexray::FlexrayCommunication			
<b>Note</b>	Each frame in FlexRay is identified by its slot id and communication cycle. A description is provided by the usage of AbsolutelyScheduledTiming.  In the static segment a frame can be sent multiple times within one communication cycle. For describing this case multiple AbsolutelyScheduledTimings have to be used. The main use case would be that a frame is sent twice within one communication cycle.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">FlexrayFrameTriggering.absolutelyScheduledTiming</a>			
Attribute	Type	Mult.	Kind	Note
communication Cycle	<a href="#">CommunicationCycle</a>	1	aggr	The communication cycle where the frame is sent.
slotID	PositiveInteger	1	attr	In the static part the SlotID defines the slot in which the frame is transmitted. The SlotID also determines, in combination with FlexrayCluster::numberOfStaticSlots, whether the frame is sent in static or dynamic segment. In the dynamic part, the slot id is equivalent to a priority. Lower dynamic slot ids are all sent until the end of the dynamic segment. Higher numbers, which were ignored that time, have to wait one cycle and then shall try again.  minValue: 1 maxValue: 2047

**Table 6.86: FlexrayAbsolutelyScheduledTiming**

<b>Class</b>	<b>CommunicationCycle</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	The communication cycle where the frame is sent.			
<b>Base</b>	ARObject			
<b>Subclasses</b>	CycleCounter, CycleRepetition			
<b>Aggregated by</b>	FlexrayAbsolutelyScheduledTiming.communicationCycle, TcanAbsolutelyScheduledTiming.communicationCycle			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.87: CommunicationCycle**

The communication cycle can be described by the [CycleCounter](#) or by the [CycleRepetition](#):

<b>Class</b>	<b>CycleCounter</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	The communication cycle where the frame is send is described by the attribute "cycleCounter".			
<b>Base</b>	ARObject, <a href="#">CommunicationCycle</a>			
<b>Aggregated by</b>	FlexrayAbsolutelyScheduledTiming.communicationCycle, TcanAbsolutelyScheduledTiming.communicationCycle			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
CycleCounter	Integer	1	attr	The communication cycle where the frame described by this timing is sent. If a timing is given in this way the referencing FlexrayCluster shall specify the cycleCount Max as upper bound and point of total repetition. This value is incremented at the beginning of each new cycle, ranging from 0 to cycleCountMax, and is reset to 0 after a sequence of cycleCountMax+1 cycles.

**Table 6.88: CycleCounter**

<b>Class</b>	<b>CycleRepetition</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
<b>Note</b>	The communication cycle where the frame is send is described by the attributes baseCycle and cycle Repetition.			
<b>Base</b>	ARObject, <a href="#">CommunicationCycle</a>			
<b>Aggregated by</b>	FlexrayAbsolutelyScheduledTiming.communicationCycle, TcanAbsolutelyScheduledTiming.communicationCycle			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
BaseCycle	Integer	1	attr	The first communication cycle where the frame is sent. This value is incremented at the beginning of each new cycle, ranging from 0 to 63, and is reset to 0 after a sequence of 64 cycles.
CycleRepetition	<a href="#">CycleRepetitionType</a>	1	attr	The number of communication cycles (after the first cycle) whenever the frame described by this timing is sent again.

**Table 6.89: CycleRepetition**

<b>Enumeration</b>	<b>CycleRepetitionType</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology
<b>Note</b>	The number of communication cycles (after the first cycle) whenever the frame is sent again. The FlexRay communication controller allows only determined values.
<b>Aggregated by</b>	<a href="#">CycleRepetition.CycleRepetition</a>
<b>Literal</b>	<b>Description</b>
cycleRepetition1	Attribute cycleRepetition value="1" valid only for FlexRay Protocol 2.1 Rev A <b>Tags:</b> atp.EnumerationLiteralIndex=0
cycleRepetition10	Attribute cycleRepetition value="10" to support FlexRay 3.0 <b>Tags:</b> atp.EnumerationLiteralIndex=1
cycleRepetition16	Attribute cycleRepetition value="16" valid only for FlexRay Protocol 2.1 Rev A <b>Tags:</b> atp.EnumerationLiteralIndex=2
cycleRepetition2	Attribute cycleRepetition value="2" valid only for FlexRay Protocol 2.1 Rev A <b>Tags:</b> atp.EnumerationLiteralIndex=3
cycleRepetition20	Attribute cycleRepetition value="20" to support FlexRay 3.0 <b>Tags:</b> atp.EnumerationLiteralIndex=4
cycleRepetition32	Attribute cycleRepetition value="32" valid only for FlexRay Protocol 2.1 Rev A <b>Tags:</b> atp.EnumerationLiteralIndex=5
cycleRepetition4	Attribute cycleRepetition value="4" valid only for FlexRay Protocol 2.1 Rev A <b>Tags:</b> atp.EnumerationLiteralIndex=6
cycleRepetition40	Attribute cycleRepetition value="40" to support FlexRay 3.0 <b>Tags:</b> atp.EnumerationLiteralIndex=7
cycleRepetition5	Attribute cycleRepetition value="5" to support FlexRay 3.0 <b>Tags:</b> atp.EnumerationLiteralIndex=8
cycleRepetition50	Attribute cycleRepetition value="50" to support FlexRay 3.0 <b>Tags:</b> atp.EnumerationLiteralIndex=9
cycleRepetition64	Attribute cycleRepetition value="64" valid only for FlexRay Protocol 2.1 Rev A <b>Tags:</b> atp.EnumerationLiteralIndex=10
cycleRepetition8	Attribute cycleRepetition value="8" valid only for FlexRay Protocol 2.1 Rev A <b>Tags:</b> atp.EnumerationLiteralIndex=11

**Table 6.90: CycleRepetitionType**



**[constr\_3012] Overlapping of Pdus is prohibited** [Pdus mapped to a FlexrayFrame shall NOT overlap.]()

**[constr\_3013] FlexrayFrame length shall not be exceeded** [The combined length of all Pdus that are mapped into a FlexrayFrame shall not exceed the defined FlexrayFrame length.]()

**[constr\_3014] Overlapping of updateIndicationBits for Pdus is prohibited** [The updateIndicationBitPosition for a Pdu in a FlexrayFrame shall NOT overlap with other updateIndicationBitPositions and Pdu locations.]()

**[constr\_5104] Assignment of a FlexrayFrame where allowDynamicLSduLength is set to true** [FlexrayFrames which are referenced by a FlexrayFrameTriggering where allowDynamicLSduLength is set to true shall always be assigned to the dynamic segment.]()

**[constr\_5105] Mapping of Pdu with dynamic length in a FlexrayFrame** [Only the last Pdu in a FlexrayFrame is allowed to be a Pdu with hasDynamicLength = true.]()

Note: Please be aware that the dynamic Pdu at the end of the FlexRay Frame may need to provide some mechanism to determine its actual length (e.g. length field, termination). Otherwise the receiver is not able to determine the actual sent length.

## 6.7.2 LIN specific description

LIN is a protocol that is based on a single master - multiple slave principle. In the following, the parameters will be specified, which are necessary to describe the LIN Schedule Tables and the LIN Frames.

**[TPS\_SYST\_01129] Communication over LIN** [The System Template supports the description of communication over LIN.](*RS\_SYST\_00022*)



<b>Class</b>	<b>LinFrame</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Lin specific Frame element.			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Frame, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Subclasses</b>	LinEventTriggeredFrame, LinSporadicFrame, LinUnconditionalFrame			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.91: LinFrame**

<b>Class</b>	<b>LinFrameTriggering</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	LIN specific attributes to the FrameTriggering			
<b>Base</b>	ARObject, FrameTriggering, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	PhysicalChannel.frameTriggering			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
identifier	Integer	0..1	attr	To describe a frames identifier on the communication system, usually with a fixed identifierValue. For Lin SporadicFrames the attribute shall be ignored.
linChecksum	LinChecksumType	0..1	attr	Type of checksum that the frame is using. This attribute is optional because in case of sporadic frames it should not be set.

**Table 6.92: LinFrameTriggering**

<b>Enumeration</b>	<b>LinChecksumType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Use of classic or enhanced checksum is managed by the master node and it is determined per frame identifier;			
<b>Aggregated by</b>	LinFrameTriggering.linChecksum			
<b>Literal</b>	<b>Description</b>			
classic	Classic in communication with LIN 1.3 slave nodes <b>Tags:</b> atp.EnumerationLiteralIndex=0			
enhanced	Enhanced in communication with LIN 2.0 slave nodes. <b>Tags:</b> atp.EnumerationLiteralIndex=1			

**Table 6.93: LinChecksumType**

[TPS\_SYST\_02095] **LinFrameTriggering.linChecksum** for **LinUnconditionalFrames** [The `linChecksum` attribute of a `LinFrameTriggering` that references a `LinUnconditionalFrame` shall be set.] ()

<b>Class</b>	<b>LinUnconditionalFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Unconditional frames carry signals. The master sends a frame header in a scheduled frame slot and the designated slave node fills the frame with data. <b>Tags:</b> atp.recommendedPackage=Frames			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Frame</a> , <a href="#">Identifiable</a> , <a href="#">LinFrame</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.94: LinUnconditionalFrame**

**[constr\_3225] LinFrameTriggering.linChecksum not allowed for LinSporadicFrames** [The `linChecksum` attribute of a `LinFrameTriggering` that references a `LinSporadicFrame` shall not be set.]()

**[constr\_3226] LinFrameTriggering.linChecksum for LinEventTriggeredFrames** [Within a `PhysicalChannel` the `linChecksum` attribute of a `LinFrameTriggering` that references a `LinEventTriggeredFrame` shall have the same value as the `linChecksum` attribute of each `LinFrameTriggering` that references a `LinUnconditionalFrame` that in turn is referenced by that `LinEventTriggeredFrame`.]()

**[constr\_3203] LinFrameTriggering to LinSporadicFrame reference restriction in LinSporadicFrame context** [Within a `PhysicalChannel` a `LinUnconditionalFrame` shall be referenced by only one `LinFrameTriggering` to allow a derivation of the identifier of a substituted Frame if the `LinUnconditionalFrame` is referenced by a `LinSporadicFrame` in the role `substitutedFrame`.]()

<b>Class</b>	<b>LinSporadicFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	A sporadic frame is a group of unconditional frames that share the same frame slot. The sporadic frame shall not contain any Pdus. <b>Tags:</b> atp.recommendedPackage=Frames			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Frame</a> , <a href="#">Identifiable</a> , <a href="#">LinFrame</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
substituted Frame (ordered)	<a href="#">LinUnconditionalFrame</a>	1..*	ref	Reference to a group of unconditional frames that share the same frame slot. In case that more than one of the declared frames needs to be transferred, the one first listed shall be chosen.  Within a channel a LIN Frame shall be referenced by only one <code>FrameTriggering</code> . This allows a derivation of the identifier of a substituted Frame. The identifier is specified in <code>FrameTriggering</code> element.  A <code>LinUnconditionalFrame</code> associated with a <code>LinSporadicFrame</code> may not be allocated in the same <code>LinScheduleTable</code> as the sporadic frame.

**Table 6.95: LinSporadicFrame**

[constr\_3204] **LinUnconditionalFrames** associated with a **LinSporadicFrame** [A **LinUnconditionalFrame** associated with a **LinSporadicFrame** shall not be allocated in the same **LinScheduleTable** as the **LinSporadicFrame**.]  
( )

[constr\_3205] Existence of **FramePort** for a **FrameTriggering** that references a **LinSporadicFrame** [A **FrameTriggering** that references a **LinSporadicFrame** shall not have a reference to a **FramePort**.]  
( )

Instead of the **LinSporadicFrame** a **LinUnconditionalFrame** is sent in the timeslot on the bus and therefore the **FrameTriggering** that references a **LinSporadicFrame** does not need to have a reference to a **FramePort**.

<b>Class</b>	<b>LinEventTriggeredFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	<p>An event triggered frame is used as a placeholder to allow multiple slave nodes to provide its response. The header of an event triggered frame is transmitted when a frame slot allocated to the event triggered frame is processed. The publisher of an associated unconditional frame shall only transmit the response if at least one of the signals carried in its unconditional frame is updated. The LIN Master discovers and purges collisions with the collisionResolvingScheduleTable.</p> <p>The event controlled frame shall not contain any Pdus.</p> <p><b>Tags:</b>atp.recommendedPackage=Frames</p>			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Frame</a> , <a href="#">Identifiable</a> , <a href="#">LinFrame</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
collisionResolvingSchedule	<a href="#">LinScheduleTable</a>	0..1	ref	Reference to the schedule table, which resolves a collision.
linUnconditionalFrame	<a href="#">LinUnconditionalFrame</a>	1..*	ref	<p>A list of slaves can respond to the master request if at least one of the signals carried in its unconditional frame is updated. For each response a <b>LinFrameTriggering</b> and a <b>LinUnconditionalFrame</b> shall be defined. Within a channel a LIN Frame shall be referenced by only one <b>FrameTriggering</b>. This allows a derivation of the identifier of a substituted Frame. The identifier is specified in <b>FrameTriggering</b> element. The Unconditional frames associated with an event triggered frame shall:</p> <ul style="list-style-type: none"> <li>• have equal length.</li> <li>• use the same checksum model (i.e. mixing LIN 1.x and LIN 2.x frames is not allowed).</li> <li>• reserve the first data field to its protected identifier (even if the associated unconditional frame is scheduled as a unconditional frame in the same or another schedule table).</li> <li>• be published by different slave nodes.</li> <li>• shall not be included directly in the same schedule table as the event triggered frame is scheduled.</li> </ul>

**Table 6.96: LinEventTriggeredFrame**

**[TPS\_SYST\_02077] Subscribers of a `LinEventTriggeredFrame`** [For each subscriber of a `LinEventTriggeredFrame` a `LinUnconditionalFrame` and a `LinFrameTriggering` that points to this `LinUnconditionalFrame` shall be defined.]  
()

**[constr\_3202] `LinFrameTriggering` to `LinUnconditionalFrame` reference restriction in `LinEventTriggeredFrame` context** [Within a `PhysicalChannel` a `LinUnconditionalFrame` shall be referenced by only one `LinFrameTriggering` to allow a derivation of the identifier of a substituted Frame if the `LinUnconditionalFrame` is referenced by a `LinEventTriggeredFrame` in the role `linUnconditionalFrame`.]  
()

**[constr\_3206] Existence of `FramePort` for a `FrameTriggering` that references a `LinEventTriggeredFrame`** [A `FrameTriggering` that references a `LinEventTriggeredFrame` shall not have a reference to a `FramePort`.]  
()

A `LinUnconditionalFrame` is sent as the response of a `LinEventTriggeredFrame` on the bus instead and therefore the `FrameTriggering` that references a `LinEventTriggeredFrame` does not need to have a reference to a `FramePort`.

**[TPS\_SYST\_02078] `LinUnconditionalFrames` associated with a `LinEventTriggeredFrame`** [The `LinUnconditionalFrames` associated with a `LinEventTriggeredFrame` shall:

- have equal length
- use the same checksum model (i.e. mixing LIN 1.x and LIN 2.x frames is not allowed)
- reserve the first data field to its protected identifier (even if the associated `LinUnconditionalFrame` is scheduled as a `LinUnconditionalFrame` in the same or another schedule table)
- be published by different slave nodes
- not be included directly in the same `LinScheduleTable` as the associated `LinEventTriggeredFrame`.

]()

### 6.7.2.2 LIN Schedule Table

The `LinMaster` uses one or more predefined scheduling tables to start the sending and receiving to the LIN bus. These scheduling tables contain at least the relative timing that defines the message sending.

**[constr\_1657] Existence of `LinPhysicalChannel.scheduleTable`** [In any given Ecu Extract that contains a `LinSlave`, the `LinPhysicalChannel` that relates to the respective `LinSlave` via `commConnector.commController` shall not aggregate a `LinScheduleTable`.]  
()

<b>Class</b>	<b>LinScheduleTable</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	The master task (in the master node) transmits frame headers based on a schedule table. The schedule table specifies the identifiers for each header and the interval between the start of a frame and the start of the following frame.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">LinPhysicalChannel.scheduleTable</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
resumePosition	<a href="#">ResumePosition</a>	0..1	attr	Defines, where a schedule table shall be proceeded in case if it has been interrupted by a run-once table or MRF/SRF.
runMode	<a href="#">RunMode</a>	0..1	attr	The schedule table can be executed in two different modes.
tableEntry	<a href="#">ScheduleTableEntry</a>	1..*	aggr	The scheduling table consists of table entries, which contain Frame slots.

**Table 6.97: LinScheduleTable**

<b>Enumeration</b>	<b>RunMode</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication
<b>Note</b>	The schedule table can be executed in two different modes.
<b>Aggregated by</b>	<a href="#">LinScheduleTable.runMode</a>
<b>Literal</b>	<b>Description</b>
RunContinuous	RUN_CONTINUOUS run mode <b>Tags:</b> atp.EnumerationLiteralIndex=0
runOnce	RUN_ONCE run mode <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.98: RunMode**

<b>Enumeration</b>	<b>ResumePosition</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication
<b>Note</b>	Defines, where a schedule table shall be proceeded in case if it has been interrupted by a run-once table or MRF/SRF.
<b>Aggregated by</b>	<a href="#">LinScheduleTable.resumePosition</a>
<b>Literal</b>	<b>Description</b>
continueAtItPosition	Continue at IT Point. <b>Tags:</b> atp.EnumerationLiteralIndex=0
startFromBeginning	Start from the beginning <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.99: ResumePosition**

<b>Class</b>	<b>ScheduleTableEntry</b> (abstract)
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication
<b>Note</b>	Table entry in a LinScheduleTable. Specifies what will be done in the frame slot.
<b>Base</b>	ARObject
<b>Subclasses</b>	<a href="#">ApplicationEntry</a> , <a href="#">FreeFormatEntry</a> , <a href="#">LinConfigurationEntry</a>
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>





<b>Class</b>		<b>ScheduleTableEntry</b> (abstract)		
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
delay	TimeValue	1	attr	Relative delay between this tableEntry and the start of the successor in the schedule table in seconds.
introduction	DocumentationBlock	0..1	aggr	This represents introductory documentation about the schedule table entry. <b>Tags:</b> xml.sequenceOffset=-10
positionInTable	Integer	1	attr	Relative position in the schedule table. The first entry index in the schedule table is 0.

**Table 6.100: ScheduleTableEntry**

<b>Class</b>		<b>ApplicationEntry</b>		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Schedule table entry for application messages.			
<b>Base</b>	ARObject, <a href="#">ScheduleTableEntry</a>			
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
frameTriggering	<a href="#">LinFrameTriggering</a>	1	ref	Specifies the LinFrame that will be transmitted in this frame slot.

**Table 6.101: ApplicationEntry**

<b>Class</b>		<b>FreeFormatEntry</b> (abstract)		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	FreeFormat transmits a fixed master request frame with the eight data bytes provided. This may for instance be used to issue user specific fixed frames.			
<b>Base</b>	ARObject, <a href="#">ScheduleTableEntry</a>			
<b>Subclasses</b>	<a href="#">FreeFormat</a>			
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.102: FreeFormatEntry**

<b>Class</b>		<b>LinConfigurationEntry</b> (abstract)		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	A ScheduleTableEntry which contains LIN specific assignments.			
<b>Base</b>	ARObject, <a href="#">ScheduleTableEntry</a>			
<b>Subclasses</b>	<a href="#">AssignFrameId</a> , <a href="#">AssignFrameIdRange</a> , <a href="#">AssignNad</a> , <a href="#">ConditionalChangeNad</a> , <a href="#">DataDumpEntry</a> , <a href="#">SaveConfigurationEntry</a> , <a href="#">UnassignFrameId</a>			
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
assigned Controller	<a href="#">LinSlave</a>	0..1	ref	The LIN slaves controller who is target of this assignment. Optional in case LinConfigurationEntry.assignedLinSlave Config exists.








Class	<i>LinConfigurationEntry</i> (abstract)			
assignedLinSlaveConfig	<a href="#">LinSlaveConfigIdent</a>	0..1	ref	<p>The LIN slave that is target of this assignment.</p> <p>Please note that this reference is redundant to the assignedController reference.</p> <p>In an Ecu Extract of the LinMaster the LinSlave Ecus shall not be available.</p> <p>The information that is described here is necessary in the ECU Extract for the configuration of the LinMaster.</p>

**Table 6.103: LinConfigurationEntry**

### 6.7.2.3 Configuration Services

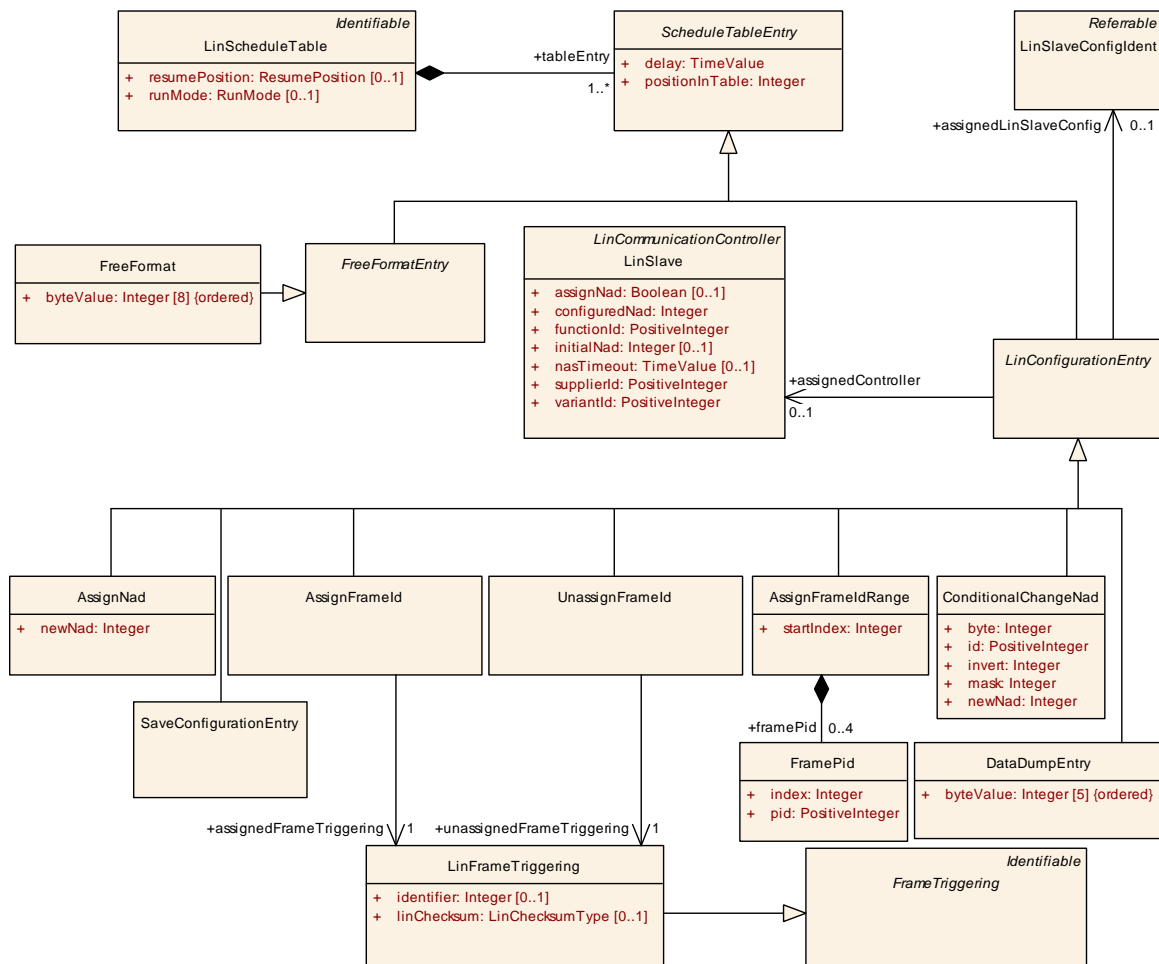

**Figure 6.33: LIN Configuration Entries (Fibex4Lin:LinConfigurationEntries)**

LIN only supports 64 identifiers. That creates the need for extending the address space. Hence the frames are identified by message ids from a much larger address space that is additionally separated by supplier ids. During runtime the master assigns a LinId to the frame. In case of identical parts within a cluster the initial node ID (oldNad) is used to differentiate such nodes.

To support that in System Template the [AssignFrameId](#) is introduced as a LIN specific extension. For the assignment a relation to the [LinSlave](#) is used. The [LinSlave](#) element is referenced by a [LinCommunicationConnector](#) element that contains a list of frames processed by the slave node. More details can be found in chapter [6.7.2.3](#).

<b>Class</b>	<b>AssignFrameId</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Schedule entry for an Assign Frame Id master request.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">LinConfigurationEntry</a> , <a href="#">ScheduleTableEntry</a>			
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
assignedFrameTriggering	<a href="#">LinFrameTriggering</a>	1	ref	The frame whose identifier is set by this assignment.

**Table 6.104: AssignFrameId**

<b>Class</b>	<b>UnassignFrameId</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Schedule entry for an Unassign Frame Id master request where the protected identifier is assigned the value 0x40. This will disable reception/transmission of a previously dynamically assigned frame identifier.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">LinConfigurationEntry</a> , <a href="#">ScheduleTableEntry</a>			
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
unassignedFrameTriggering	<a href="#">LinFrameTriggering</a>	1	ref	The frame whose identifier is reset by this assignment.

**Table 6.105: UnassignFrameId**

[TPS\_SYST\_02363] **messageId of [AssignFrameId](#) and [UnassignFrameId](#)** [In case that the [AssignFrameId](#) or [UnassignFrameId](#) refers to a [LinSlave](#) in the role [assignedController](#) the [messageId](#) of the [AssignFrameId/UnassignFrameId](#) can be derived from the [messageId](#) of the [LinConfigurableFrame](#) that references the same [LinFrame](#) as the [LinFrameTriggering](#) that is referenced by the [AssignFrameId/UnassignFrameId](#) and that is aggregated by the [LinCommunicationConnector](#) in role [linConfigurableFrame](#) that points to this [LinSlave](#) in the role [commController](#).

In case that the [AssignFrameId/UnassignFrameId](#) refers to a [LinSlaveConfigIdent](#) in the role [assignedLinSlaveConfig](#) the [messageId](#) of the [AssignFrameId/UnassignFrameId](#) can also be derived from the [messageId](#) of the [LinConfigurableFrame](#) that references the same [LinFrame](#) as the [LinFrameTriggering](#) that is referenced by the [AssignFrameId/UnassignFrameId](#) and that is aggregated by the referenced [LinSlaveConfig](#).]()

The Assign frame ID configuration service is replaced in LIN 2.1 by the Assign frame ID range configuration service. [AssignFrameIdRange](#) is used to set or disable Protected Identifiers up to four frames. For the assignment a relation to the [LinSlave](#) is used. The [LinSlave](#) element is referenced by a [LinCommunicationConnector](#)

element that contains a list of frames processed by the slave node. More details can be found in chapter 6.7.2.3.

<b>Class</b>	<b>AssignFrameIdRange</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	AssignFrameIdRange generates an assign frame PID range request.			
<b>Base</b>	ARObject, LinConfigurationEntry, ScheduleTableEntry			
<b>Aggregated by</b>	LinScheduleTable.tableEntry			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
framePid	FramePid	0..4	aggr	Optional assignment of frame_PID values that are included in the request. The frame_PIDs are ordered.
startIndex	Integer	1	attr	The startIndex sets the index to the first frame to assign a PID.

**Table 6.106: AssignFrameIdRange**

<b>Class</b>	<b>FramePid</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Frame_PIDs that are included in the request. The "pid" attribute describes the value and the "index" attribute the position of the frame_PID in the request.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	AssignFrameIdRange.framePid			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
index	Integer	1	attr	This attribute is used to order the frame_PIDs. The values of index shall be unique within one AssignFrameIdRange.
pid	PositiveInteger	1	attr	Frame_PID value.

**Table 6.107: FramePid**

**[constr\_5031] Uniqueness of FramePid.index** [FramePid.index shall always be set and be unique in the context of the aggregating AssignFrameIdRange.] ()

Assign NAD is used to resolve conflicting NADs in LIN clusters built using off-the-shelves slave nodes or reused slave nodes. This request uses the initial NAD. The NAD used for the response shall be the same as in the request, i.e. the initial NAD.

<b>Class</b>	<b>AssignNad</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Schedule entry for an Assign NAD master request.			
<b>Base</b>	ARObject, LinConfigurationEntry, ScheduleTableEntry			
<b>Aggregated by</b>	LinScheduleTable.tableEntry			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
newNad	Integer	1	attr	The newly assigned NAD value.

**Table 6.108: AssignNad**

The conditional change NAD is used to detect unknown slave nodes in a cluster and to separate their NADs.

<b>Class</b>	<b>ConditionalChangeNad</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Generates an conditional change NAD request. See ISO 17987 protocol specification for more information.			
<b>Base</b>	ARObject, <a href="#">LinConfigurationEntry</a> , <a href="#">ScheduleTableEntry</a>			
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
byte	Integer	1	attr	Byte Position of Data Byte that should be used for the bitwise XOR with Invert and the bitwise AND with Mask.
id	PositiveInteger	1	attr	Byte Position of Id.
invert	Integer	1	attr	Byte Position of Invert.
mask	Integer	1	attr	Byte Position of Mask.
newNad	Integer	1	attr	The newly assigned NAD value (Byte Position).

**Table 6.109: ConditionalChangeNad**

The Save Configuration service tells the slave node that the slave application shall save the current configuration.

<b>Class</b>	<b>SaveConfigurationEntry</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	This service is used to notify a slave node to store its configuration.			
<b>Base</b>	ARObject, <a href="#">LinConfigurationEntry</a> , <a href="#">ScheduleTableEntry</a>			
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.110: SaveConfigurationEntry**

The Data Dump service is reserved for initial configuration of a slave node by the slave node supplier and the format of this message is supplier specific.

<b>Class</b>	<b>DataDumpEntry</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	This service is reserved for initial configuration of a slave node by the slave node supplier and the format of this message is supplier specific.			
<b>Base</b>	ARObject, <a href="#">LinConfigurationEntry</a> , <a href="#">ScheduleTableEntry</a>			
<b>Aggregated by</b>	<a href="#">LinScheduleTable.tableEntry</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
byteValue (ordered)	Integer	5	attr	Supplier specific format.

**Table 6.111: DataDumpEntry**

With the FreeFormat a scheduling of fixed data content within a diagnostic frame is defined. For that specification [FreeFormat](#) is introduced.

<b>Class</b>	<b>FreeFormat</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Lin::LinCommunication			
<b>Note</b>	Representing freely defined data.			
<b>Base</b>	ARObject, FreeFormatEntry, ScheduleTableEntry			
<b>Aggregated by</b>	LinScheduleTable.tableEntry			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
byteValue (ordered)	Integer	8	attr	The integer Value of a freely defined data byte.

**Table 6.112: FreeFormat**

In order to be consistent with the rest of the communication configuration, it is required that the diagnostic LIN Frames (Master Request Frame, Slave Response Frame) are explicitly modeled as `Frame` elements. `LinFrameTriggerings` dealing with diagnostic Frames thus reference this diagnostic frames.

**[TPS\_SYST\_02276] Modeling of LIN master request frames** [A LIN master request frame shall be modeled per `LinPhysicalChannel` in terms of a `LinFrameTriggering` referencing a `LinUnconditionalFrame` while the following rules apply:

- The `LinFrameTriggering` has identifier set to 60 (0x3C) and `linChecksum` set to `classic`.
- The `LinFrameTriggering` has a reference to an “out” `FramePort` of the `LinMaster` and “in” `FramePorts` of the respective `LinSlaves` in the scope of the same `LinPhysicalChannel`.
- The `LinFrameTriggering` references a `LinUnconditionalFrame` with `frameLength` set to 8.
- The `LinFrameTriggering` references a `PduTriggering` that in turn references a `NPdu` that is mapped to the `LinUnconditionalFrame` and that has its length set to 8. The `NPdu` is referenced by a `LinTpConnection` in the role `dataPdu`.
- The `PduTriggering` has a reference to an “out” `IPduPort` of the `LinMaster` and “in” `IPduPorts` of the respective `LinSlaves` in the scope of the same `LinPhysicalChannel`.

]()

**[TPS\_SYST\_02277] Modeling of LIN slave response frames** [A LIN slave response frame shall be modeled per `LinPhysicalChannel` in terms of a `LinFrameTriggering` referencing a `LinUnconditionalFrame` while the following rules apply:

- The `LinFrameTriggering` has identifier set to 61 (0x3D) and `linChecksum` set to `classic`.
- The `LinFrameTriggering` has a reference to an “in” `FramePort` of the `LinMaster` and “out” `FramePorts` of the respective `LinSlaves` in the scope of the same `LinPhysicalChannel`.


- The `LinFrameTriggering` references a `LinUnconditionalFrame` with `frameLength` set to 8.
- The `LinFrameTriggering` references a `PduTriggering` that in turn references a `NPdu` that is mapped to the `LinUnconditionalFrame` and that has its length set to 8. The `NPdu` is referenced by a `LinTpConnection` in the role `dataPdu`.
- The `PduTriggering` has a reference to an “in” `IPduPort` of the `LinMaster` and “out” `IPduPorts` of the respective `LinSlaves` in the scope of the same `LinPhysicalChannel`.

]0

### 6.7.3 CAN specific description

This chapter describes additions to the CAN definition of [FrameTriggerings](#).

**[TPS\_SYST\_01130] Communication over CAN** [The System Template supports the description of communication over CAN.] ([RS\\_SYST\\_00021](#))

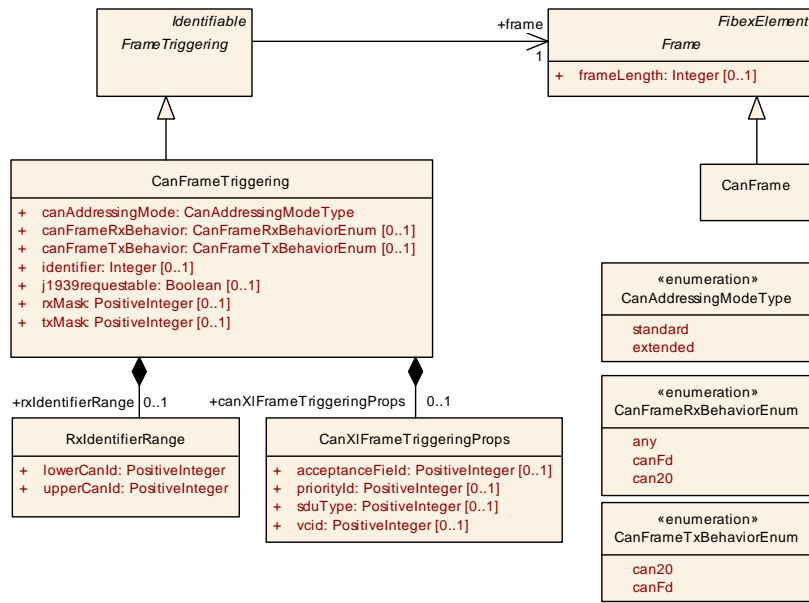

**Figure 6.34: CanFrameTriggering (Fibex4Can:CanCommunication)**

<b>Class</b>	<b>CanFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanCommunication			
<b>Note</b>	CAN specific Frame element. This element shall also be used for TTCan. <b>Tags:</b> atp.recommendedPackage=Frames			
<b>Base</b>	<i>ARObject</i> , <i>CollectableElement</i> , <i>FibexElement</i> , <i>Frame</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.113: CanFrame**

<b>Class</b>	<b>CanFrameTriggering</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanCommunication			
<b>Note</b>	CAN specific attributes to the FrameTriggering			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">FrameTriggering</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">PhysicalChannel.frameTriggering</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
absolutely Scheduled Timing	<a href="#">TtcanAbsolutelyScheduledTiming</a>	*	aggr	Each frame in TTCAN is identified by its slot id and communication cycle. A description is provided by the usage of AbsolutelyScheduledTiming.
canAddressing Mode	<a href="#">CanAddressingModeType</a>	1	attr	The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.
canFrameRx Behavior	<a href="#">CanFrameRxBehaviorEnum</a>	0..1	attr	Defines which CAN protocol shall be expected for frame reception.
canFrameTx Behavior	<a href="#">CanFrameTxBehaviorEnum</a>	0..1	attr	Defines which CAN protocol shall be used for frame transmission.
canXIframe TriggeringProps	<a href="#">CanXIframeTriggeringProps</a>	0..1	aggr	Definition of CAN XL specific attributes in case the frame is a CAN XL frame.
identifier	Integer	0..1	attr	This attribute is used to define the identifier this frame shall use on the CAN network.
j1939requestable	Boolean	0..1	attr	Frame can be triggered by the J1939 request message.
rxIdentifier Range	<a href="#">RxIdentifierRange</a>	0..1	aggr	Optional definition of a CanId range.
rxMask	PositiveInteger	0..1	attr	Identifier mask which denotes the relevant bits in the CAN Identifier. Together with the identifier, this parameter defines a CAN identifier range.
txMask	PositiveInteger	0..1	attr	Identifier mask which denotes static bits in the CAN identifier. The other bits can be set dynamically.

**Table 6.114: CanFrameTriggering**

<b>Enumeration</b>	<b>CanAddressingModeType</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanCommunication
<b>Note</b>	Indicates whether standard or extended CAN identifiers are used
<b>Aggregated by</b>	<a href="#">CanFrameTriggering.canAddressingMode</a>
<b>Literal</b>	<b>Description</b>
extended	Extended 29-bit-identifiers are used (CAN 2.0B) <b>Tags:</b> atp.EnumerationLiteralIndex=0
standard	Standard 11-bit-identifiers are used (CAN 2.0A) <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.115: CanAddressingModeType**

<b>Class</b>	<b>RxIdentifierRange</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanCommunication
<b>Note</b>	Optional definition of a CanId range to reduce the effort of specifying every possible FrameTriggering within the defined Id range during reception. All frames received within a range are mapped to the same Pdu that is passed to a upper layer module (e.g. Nm, CDD, PduR).
<b>Base</b>	<a href="#">ARObject</a>







Class	RxIdentifierRange			
Aggregated by	CanFrameTriggering.rxIdentifierRange, CanXINmNodeProps.rxIdentifierRange			
Attribute	Type	Mult.	Kind	Note
lowerCanId	PositiveInteger	1	attr	This attribute can be used together with the upperCanId attribute to define a range of CanIds.
upperCanId	PositiveInteger	1	attr	This attribute can be used together with the lowerCanId attribute to define a range of CanIds.

**Table 6.116: RxIdentifierRange**

Enumeration	CanFrameRxBehaviorEnum
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanCommunication
Note	Defines different CAN protocols for frame reception behavior.
Aggregated by	CanFrameTriggering.canFrameRxBehavior
Literal	Description
any	This CAN frame may be received as both, CAN 2.0 and CAN FD. <b>Tags:</b> atp.EnumerationLiteralIndex=0
can20	This CAN frame shall be received as CAN 2.0 only. In case the CAN frame is received as CAN FD it is discarded during reception. <b>Tags:</b> atp.EnumerationLiteralIndex=1
canFd	This CAN frame shall be received as CAN FD only. In case the CAN frame is received as CAN 2.0 it is discarded during reception. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 6.117: CanFrameRxBehaviorEnum**

There exist use-cases where the [CanFrameTriggering](#) is used as a placeholder for a variant number of actual Can frames and therefore no dedicated CAN identifier can be defined (e.g. MetaData handling, Bus Mirroring).

**[TPS\_SYST\_02201] Existence of [CanFrameTriggering.identifier](#)** [In a [System](#) with [category](#) SYSTEM\_DESCRIPTION the identifier may be omitted if the value is computed during runtime. In a [System](#) with [category](#) ECU\_EXTRACT, ECU\_SYSTEM\_DESCRIPTION or SYSTEM\_EXTRACT for the transmitter the [identifier](#) may be omitted if the value is computed during runtime. In an [System](#) with [category](#) ECU\_EXTRACT, ECU\_SYSTEM\_DESCRIPTION or SYSTEM\_EXTRACT for the receiver the [identifier](#) may be omitted if [rxIdentifierRange](#) is defined.]()

**[TPS\_SYST\_02256] Allowed [CanFrame.frameLength](#) settings** [For a [CanFrame](#) it is allowed to configure a smaller [frameLength](#) than the [length](#) of the [Pdu](#) which is mapped to this [CanFrame](#). This is used to model the minimum length of the received L-PDU of a [CanFrame](#) to be accepted, if the data length check is enabled.]()

The [CanFrameTriggering.canFrameRxBehavior](#) allows to define a tolerant CAN FD reception strategy. With the setting [any](#) the respective CAN frame is accepted for reception, regardless whether it is received with CAN FD or CAN 2.0 protocol.

<b>Enumeration</b>	<b>CanFrameTxBehaviorEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanCommunication
<b>Note</b>	Defines different CAN protocols for frame transmission behavior.
<b>Aggregated by</b>	<a href="#">CanFrameTriggering.canFrameTxBehavior</a>
<b>Literal</b>	<b>Description</b>
can20	This CAN frame shall be sent as CAN 2.0 only. <b>Tags:</b> atp.EnumerationLiteralIndex=0
canFd	This CAN frame shall be sent as CAN FD. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.118: CanFrameTxBehaviorEnum**

Note that the transmission behavior of [CanFrameTriggering.canFrameTxBehavior](#) may still be redefined in the communication stack on driver level.

**[TPS\_SYST\_02168] MetaData support required if [CanFrameTriggering.txMask](#) is used** [The usage of [CanFrameTriggering.txMask](#) requires the support of COM Stack MetaData.]()

Please note that the MetaData support in [TPS\_SYST\_02168] is required to calculate CAN-Ids at run-time.

**[TPS\_SYST\_02169] MetaData support may be required if [CanFrameTriggering.rxMask](#) is used** [The usage of [CanFrameTriggering.rxMask](#) may require the support of COM Stack MetaData.]()

Please note that the MetaData support in [TPS\_SYST\_02169] is required if the upper layer is interested in the masked part of CAN-Id, e.g. J1939. In some cases the upper layer is not interested in the masked part of CAN-Id, e.g. for CanNm the MetaData is not required.

### 6.7.3.1 SAE J1939 Protocol specific description

J1939 is a protocol and application layer standard of the SAE (Society of Automotive Engineers) based on the CAN technology. It defines parameters uniquely identified by the SPN (Suspect Parameter Number). These are mapped to parameter groups that are uniquely identified by a PGN (Parameter Group Number). Parameters are simply handled as `SystemSignals` which have a name derived from the name of the SPNs. A Parameter Group (PG) corresponds to an `IPdu`.

J1939 uses extended 29 bit CAN identifiers to encode a priority, the source address of the frame, and a frame ID which is based on the PGN (Parameter Group Number) and may contain the destination address.

J1939 supports `IPdus` with more than 8 bytes, and `IPdus` with variable length that may exceed 8 bytes. As soon as an `IPdu` has more than 8 bytes, it does not fit in a single CAN frame and a transport protocol shall be used. Variable length `IPdus` will always be handled by the J1939 TP, regardless of the actual length. The J1939 Transport Protocol is described in chapter 6.8.8.

**[TPS\_SYST\_01132] Communication over SAE J1939** [The System Template supports the description of communication over SAE J1939.] ([RS\\_SYST\\_00038](#))

**[constr\_3209] CanFrameTriggerings with identical PGN** [For all `CanFrameTriggerings` where the attribute `identifier` contains the identical PGN (as defined in section 5.2 Protocol Data Unit in [25]) the attribute `j1939requestable` shall also have an identical value.]()

### 6.7.3.2 CAN XL specific description

CAN XL is a continued development of CAN FD and standardized by the *Special Interest Group (SIG) CAN XL* of the *CAN in Automation (CiA)* association. It features a transmission speed of up to 20 MBit/s and large payloads (up to 2048 bytes) to offer a cost-effective alternative to Ethernet 10BASE network technology.

To ease the migration of an Ethernet based communication design to CAN XL, the feature of tunneling Ethernet frames through CAN XL based physical connections has also been standardized by the CiA association. The required system-level configuration for this use case is described in Ch. 3.3.1.2.2.

**[TPS\_SYST\_03075] Communication over CAN XL** [The System Template supports the description of communication over CAN XL.]()

Since CAN XL requires definition of additional specific configuration parameters on the physical layer which are relevant on system level, a few extensions to some elements of the System Template have been defined. They are described in the following.

**[TPS\_SYST\_03076] Definition of CAN XL frame triggering attributes** [If a `CanFrameTriggering` relates to a CAN XL frame, then `canXlFrameTriggeringProps` as well as the relevant attributes contained in the aggregated class `CanXlFrameTriggeringProps` shall be defined accordingly. The absence of `CanXlFrameTriggeringProps` indicates a `CanFrameTriggering` for a non-CAN-XL frame.]()

Please note that the relevance of the attributes of `CanXlFrameTriggeringProps` depends on the SDU Type and is specified by the CiA standardization of CAN XL. Additionally, a `CanXlFrameTriggeringProps` defined without any attributes is also valid meaning that the associated CAN Controller is capable of CAN XL and gets these attribute values by meta-data and/or is operating in backward compatibility mode (i.e. sending/receiving only Classical CAN or CAN FD frames).

**[constr\_3704] Existence of `CanXlFrameTriggeringProps`** [If the class `CanXlFrameTriggeringProps` is aggregated by a `CanFrameTriggering`, then the `CanCommunicationController` – which is referenced through `commController` by a `CanCommunicationConnector` which in turn is referenced through `commConnector` by a `CanPhysicalChannel` that aggregates the aforementioned `CanFrameTriggering` – shall aggregate at least one of

- `CanControllerConfiguration` with `CanControllerXlConfiguration` aggregated or
- `CanControllerConfigurationRequirements` with `CanControllerXlConfigurationRequirements` aggregated.

]()

**[constr\_3713] Allowed values for `acceptanceField`** [The value for `acceptanceField` shall be in the range between 0 and 4294967295.]()

**[constr\_3705] Allowed values for `priorityId`** [The value for `priorityId` shall be in the range between 0 and 2047.]()

**[constr\_3706] Allowed values for `sduType`** [The value for `sduType` shall be in the range between 0 and 255.]()

**[constr\_3707] Allowed values for `vcid`** [The value for `vcid` shall be in the range between 0 and 255.]()

Please note: Since it is possible to concurrently operate CAN FD and CAN XL nodes in the same network, the attributes of `CanFrameTriggering` related to CAN FD are also relevant in case this mixed network use case is to be realized.

Please note that figure 6.34 shows the modeling of `CanXlFrameTriggeringProps`.

### 6.7.4 TTCAN specific description

This chapter describes additions to the TTCAN definition of `FrameTriggerings`.

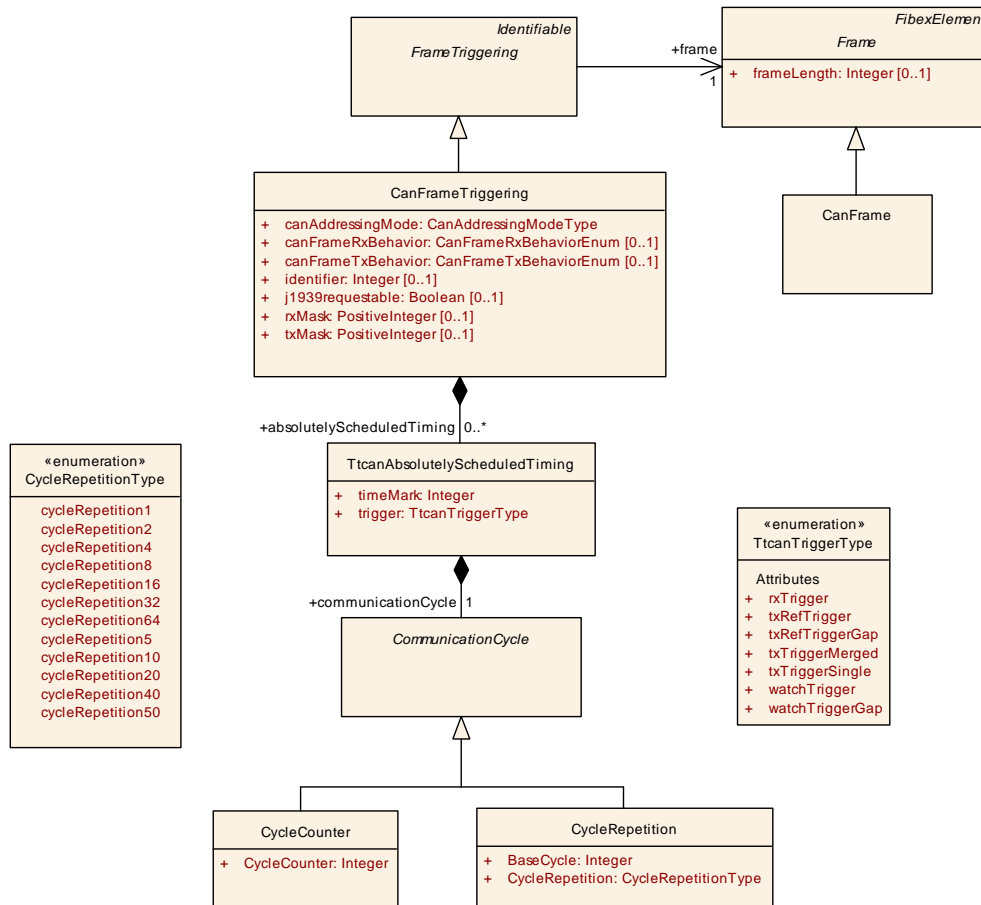


Figure 6.35: TtcanAbsolutelyScheduledTiming (Fibex4Ttcan:TtcanCommunication)

<b>Class</b>	<b>TtcanAbsolutelyScheduledTiming</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ttcan::TtcanCommunication			
<b>Note</b>	<p>Each frame in TTCAN is identified by its slot id and communication cycle. A description is provided by the usage of AbsolutelyScheduledTiming.</p> <p>A frame can be sent multiple times within one communication cycle. For describing this case multiple AbsolutelyScheduledTimings have to be used. The main use case would be that a frame is sent twice within one communication cycle.</p>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	CanFrameTriggering.absolutelyScheduledTiming			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Cycle	CommunicationCycle	1	aggr	The communication cycle where the frame is sent.
timeMark	Integer	1	attr	Where FlexRay counts the slots in the static segment, TTCAN requires explicit Tx and Rx time marks.
trigger	TtcanTriggerType	1	attr	Trigger type for this time window.

**Table 6.119: TtcanAbsolutelyScheduledTiming**

<b>Enumeration</b>	<b>TtcanTriggerType</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ttcan::TtcanCommunication
<b>Note</b>	This type lists all trigger types for a time window.
<b>Aggregated by</b>	TtcanAbsolutelyScheduledTiming.trigger
<b>Literal</b>	<b>Description</b>
rxTrigger	<p>Check for message reception</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=0</p>
txRefTrigger	<p>Send reference message in periodic case</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=1</p>
txRefTriggerGap	<p>Send reference message in event-synchronised case</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=2</p>
txTriggerMerged	<p>Send message in a merged arbitration window</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=3</p>
txTriggerSingle	<p>Send message in an exclusive time window</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=4</p>
watchTrigger	<p>Check for missing reference message in periodic case</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=5</p>
watchTriggerGap	<p>Check for missing reference message in event-synchronised case</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=6</p>

**Table 6.120: TtcanTriggerType**

### 6.7.5 Ethernet specific description

**Important note: Please note that the model of Release 4.4.0 to describe the Ethernet communication can still be used in the current release. Elements like `SocketConnectionBundle` and `SocketConnection` are set to obsolete and will be removed in a future release. The documentation of the old model is available in the Rel. 4.4.0 System Template specification. For the usage of the Rel. 4.4.0 model only the attributes that are described in Release 4.4.0 are valid. A mixture of the current release and Rel. 4.4.0 models is not allowed.**

This chapter specifies how the data communication between nodes in an IP network over TCP and UDP protocols is described with an AUTOSAR model.

[TPS\_SYST\_01091] Definition of `SoAdConfig` [The `SoAdConfig` in the System Template is defined per `EthernetPhysicalChannel` which represents a VLAN.] ([RS\\_SYST\\_00039](#))

The `SoAdConfig` element is the entry point for the description of the IP communication on a VLAN since it contains a collection of `SocketAddresses` of nodes that are able to receive and transmit information over the VLAN. Each node is represented by an `EcuInstance`. The `SocketAddress` defines a communication endpoint (IP Unicast or IP Multicast) and assigns it to one `EthernetCommunicationConnector` of an `EcuInstance` in case of IP Unicast communication and to one or several `EthernetCommunicationConnectors` in case of IP Multicast.

<b>Class</b>	<b>SoAdConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	SoAd Configuration for one specific Physical Channel.			
<b>Base</b>	<code>ARObject</code>			
<b>Aggregated by</b>	<a href="#">EthernetPhysicalChannel.soAdConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
connection	<a href="#">SocketConnection</a>	*	aggr	This aggregation is obsolete and will be removed in the future. The <code>connectionGroup</code> aggregation with bundled Connections shall be used instead. Old description: Collection of socket connections. <b>Stereotypes:</b> <code>atpSplittable</code> ; <code>atpVariation</code> <b>Tags:</b> <code>atp.Splitkey=connection</code> , <code>connection.variationPoint.shortLabel</code> <code>atp.Status=obsolete</code> <code>vh.latestBindingTime=postBuild</code>
connection Bundle	<code>SocketConnectionBundle</code>	*	aggr	Collection of <code>SocketConnectionBundles</code> . <b>Stereotypes:</b> <code>atpSplittable</code> ; <code>atpVariation</code> <b>Tags:</b> <code>atp.Splitkey=connectionBundle.shortName</code> , <code>connectionBundle.variationPoint.shortLabel</code> <code>atp.Status=obsolete</code> <code>vh.latestBindingTime=postBuild</code>







Class	SoAdConfig			
socketAddress	<a href="#">SocketAddress</a>	1..*	aggr	Collection of SoAdAddresses. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=socketAddress.shortName, socket Address.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.121: SoAdConfig**

The [SocketAddress](#) is the element that is used to establish the link between the [EcuInstance](#) and the [NetworkEndpoint](#). The [SocketAddress](#) has a [connector](#) reference to the [EthernetCommunicationConnector](#). The [SocketAddress](#) also aggregates the [ApplicationEndpoint](#) that in turn references the [NetworkEndpoint](#).

Class	SocketAddress			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	This meta-class represents a socket address towards the rest of the meta-model. The actual semantics of the represented socket address, however, is contributed by aggregation of an <a href="#">ApplicationEndpoint</a> .			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">SoAdConfig.socketAddress</a>			
Attribute	Type	Mult.	Kind	Note
allowedIPv6Ext Headers	<a href="#">IPv6ExtHeaderFilterList</a>	0..1	ref	Reference to a list of IPv6 Extension Headers allowed for this SocketConnection. If no list is referenced all IPv6 Extension Headers are allowed and processed.
allowedTcp Options	<a href="#">TcpOptionFilterList</a>	0..1	ref	Reference to a list of TCP options allowed for this Socket Connection.
application Endpoint	<a href="#">ApplicationEndpoint</a>	0..1	aggr	Application addressing
connector	<a href="#">EthernetCommunicationConnector</a>	0..1	ref	Association to a CommunicationConnector in the topology description. This reference shall be used if the SocketAddress describes an IP unicast address for an ECU that is part of the model.
differentiated ServiceField	PositiveInteger	0..1	attr	The 6-bit Differentiated Service Field in the IP headers may be used for classifying network traffic. If not set a value of zero is used to indicate packets that have not been classified.
flowLabel	PositiveInteger	0..1	attr	The 20-bit Flow Label field in the IPv6 header may be used by a source to label sequences of packets for which it requests special handling by the IPv6 routers, such as non-default quality of service. If not set a Flow Label of zero is used to indicate packets that have not been labeled.
multicast Connector	<a href="#">EthernetCommunicationConnector</a>	*	ref	Association to a CommunicationConnector in the topology description. This reference shall be used if the Socket Address describes an IP multicast address. This multicast SocketAddress contains references to those ECUs in the model that want to receive the multicast messages.
pathMtu Discovery Enabled	Boolean	0..1	attr	Defines whether the Path MTU Discovery shall be performed for the related socket.





Class	SocketAddress			
pduCollection MaxBufferSize	PositiveInteger	0..1	attr	Defines the maximum buffer size in Byte which shall be filled before a socket with Pdu collection enabled shall be transmitted to the lower layer.
pduCollection Timeout	TimeValue	0..1	attr	Defines the time in seconds which shall pass before a socket with Pdu collection enabled shall be transmitted to the lower layer after the first Pdu has been put into the socket buffer.
staticSocket Connection	<a href="#">StaticSocketConnection</a>	*	aggr	Definition of a static SocketConnection. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=staticSocketConnection.shortName, static SocketConnection.variationPoint.shortLabel vh.latestBindingTime=postBuild
udpChecksum Handling	<a href="#">UdpChecksum CalculationEnum</a>	0..1	attr	Specifies if UDP checksum handling shall be enabled (udpChecksumEnabled) or skipped (udpChecksumDisabled) on the related socket connection.

**Table 6.122: SocketAddress**

The communication endpoint itself is defined by the [ApplicationEndpoint](#) that is aggregated by the [SocketAddress](#) and by the [NetworkEndpoint](#) that in turn is referenced by the [ApplicationEndpoint](#) and is defined on the VLAN. The [ApplicationEndpoint](#) is the endpoint in terms of application addressing and defines the transport layer configuration. The IP-address that is connected to the transport layer is defined by the referenced [NetworkEndpoint](#).

**[constr\_5061] EthernetCommunicationConnectors and referencing SocketAddresses shall be in the same VLAN** [Each [EthernetCommunicationConnector](#) that is referenced by a [SocketAddress](#) in the role `connector` or `multicastConnector` shall be referenced by the same [EthernetPhysicalChannel](#) that aggregates the [SoAdConfig](#) that in turn aggregates the [SocketAddress](#).]()

**[constr\_5326] Each local SocketAddress of an EcuInstance shall reference an EthernetCommunicationConnector in the role connector or multicastConnector** [If an [EcuInstance](#) uses a [SocketAddress](#) as local address, the [SocketAddress](#) shall refer to an [EthernetCommunicationConnector](#) of the [EcuInstance](#), either via [SocketAddress.connector](#) if the [SocketAddress](#) represents a unicast address, or via [SocketAddress.multicastConnector](#) if the [SocketAddress](#) represents a multicast address.]()

**[constr\_3299] SocketAddress.pathMtuDiscoveryEnabled setting dependency** [[SocketAddress.pathMtuDiscoveryEnabled](#) shall only be set to TRUE if [EthernetCommunicationConnector.pathMtuEnabled](#) == TRUE.]()

**[constr\_3311] Usage of SocketAddress.flowLabel** [[SocketAddress.flowLabel](#) shall only be used if the aggregated [ApplicationEndpoint](#) refers to a [NetworkEndpoint](#) with an [Ipv6Configuration](#).]()

**[TPS\_SYST\_02140] SocketAddress.udpChecksumHandling default value** [If [SocketAddress.udpChecksumHandling](#) is not used the value [udpChecksumEnabled](#) shall be assumed.]()

<b>Enumeration</b>	<b>UdpChecksumCalculationEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances
<b>Note</b>	This enumeration defines the UDP checksum calculation.
<b>Aggregated by</b>	<a href="#">SocketAddress.udpChecksumHandling</a> , <a href="#">SocketConnectionBundle.udpChecksumHandling</a>
<b>Literal</b>	<b>Description</b>
udpChecksumDisabled	Udp checksum handling shall be disabled <b>Tags:</b> atp.EnumerationLiteralIndex=1
udpChecksumEnabled	Udp checksum handling shall be enabled <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 6.123: UdpChecksumCalculationEnum**

[TPS\_SYST\_02141] **Semantics of [udpChecksumHandling](#)** [The semantics of [udpChecksumHandling](#) is different for the sending and the receiving side:

**TX - calculation of UDP checksum:**

- [udpChecksumEnabled](#) means that the UDP checksum is calculated on the transmission side.
- [udpChecksumDisabled](#) means that the UDP checksum is not calculated but set to zero on the transmission side.


**RX - handling of UDP checksum of zero:**

- [udpChecksumEnabled](#) means that the UDP checksum of zero is treated as invalid checksum on receiver side (causing the UDP datagram to be dropped by the receiver). A valid non-zero checksum is accepted and the UDP datagram is forwarded to the upper layer.
- [udpChecksumDisabled](#) means the the UDP checksum of zero is treated as valid checksum on the receiver side (causing the UDP datagram to be forwarded to the upper layer). A valid non-zero checksum is accepted and the UDP datagram is forwarded to the upper layer as well.

]()

[TPS\_SYST\_02142] **Reception of invalid checksum** [On Rx side an invalid checksum should always cause the related UDP datagram to be discarded independent of the [udpChecksumHandling](#) value.]()

To enable the IPv6 packet filtering the attribute [allowedIPv6ExtHeaders](#) allows to define a permitted list of IPv6 Extension Headers that are allowed for a [SocketAddress](#). Lists of IPv6 Extension Headers can be defined with the [IPv6ExtHeaderFilterList](#) element and can be collected in [IPv6ExtHeaderFilterSets](#).

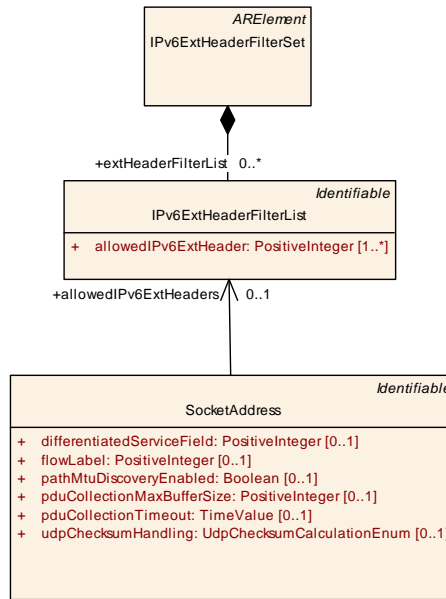

**Figure 6.36: IPv6 Extension Header Filter Set**

<b>Class</b>	<b>IPv6ExtHeaderFilterSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::IPv6HeaderFilterList			
<b>Note</b>	Set of IPv6 Extension Header Filters. <b>Tags:</b> atp.recommendedPackage=IPv6ExtHeaderFilterSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
extHeaderFilterList	<a href="#">IPv6ExtHeaderFilterList</a>	*	aggr	In order to permit or deny certain types of IPv6 extension headers a permitted list of IPv6 extension headers can be configured.

**Table 6.124: IPv6ExtHeaderFilterSet**


<b>Class</b>	<b>IPv6ExtHeaderFilterList</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::IPv6HeaderFilterList			
<b>Note</b>	Permitted list for the filtering of IPv6 extension headers.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">IPv6ExtHeaderFilterSet.extHeaderFilterList</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
allowedIPv6ExtHeader	PositiveInteger	1..*	attr	IPv6 Extension Header type allowed by this filter.

**Table 6.125: IPv6ExtHeaderFilterList**

**[constr\_3276] Prohibition of usage of [allowedIPv6ExtHeaders](#) in IPv4 [SocketAddress](#)** [IPv4 [SocketAddress](#) shall not define [allowedIPv6ExtHeaders](#). An IPv4 [SocketAddress](#) aggregates an [ApplicationEndpoint](#) that refers to a [NetworkEndpoint](#) that has an [Ipv4Configuration](#) as [networkEndpointAddress](#).]()

[constr\_3277] Restriction of usage of **IPv6ExtHeaderFilterLists** in **IPv6SocketAddress** [All **SocketAddresses** related to the same **IPv6NetworkEndpoint** shall all reference either no or exactly the same **IPv6ExtHeaderFilterList** with the **allowedIPv6ExtHeaders** attribute.] ()

To enable the filtering of **Tcp** options the attribute **allowedTcpOptions** defines a permitted list of **Tcp** options that are allowed for a **SocketAddress**. Lists of **Tcp** Option filters can be defined with the **TcpOptionFilterList** element and can be collected in **TcpOptionFilterSets**.

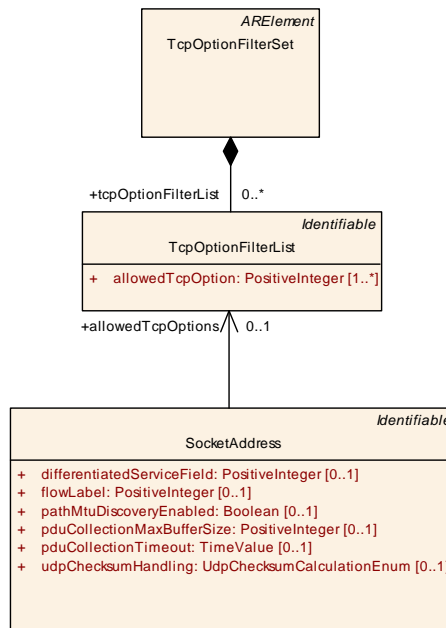

**Figure 6.37: Tcp Option Filter Set**

<b>Class</b>	<b>TcpOptionFilterSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::TcpOptionFilterSet			
<b>Note</b>	Set of <b>TcpOptionFilterLists</b> . <b>Tags:</b> atp.recommendedPackage=TcpOptionFilterSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tcpOptionFilterList	<a href="#">TcpOptionFilterList</a>	*	aggr	Collection of permitted lists for the filtering of TCP options.

**Table 6.126: TcpOptionFilterSet**

<b>Class</b>	<b>TcpOptionFilterList</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::TcpOptionFilterSet			
<b>Note</b>	Permitted list for the filtering of TCP options.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			





<b>Class</b>	TcpOptionFilterList			
<b>Aggregated by</b>	TcpOptionFilterSet.tcpOptionFilterList			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
allowedTcpOption	PositiveInteger	1..*	attr	TCP option kind allowed by this filter.


**Table 6.127: TcpOptionFilterList**

[constr\_3297] Prohibition of usage of **allowedTcpOptions** in **Udp SocketAddress** [Udp SocketAddress shall not define **allowedTcpOptions**. A Udp SocketAddress aggregates an **ApplicationEndpoint** that has a **UdpTp** defined as **tpConfiguration**.]()

### 6.7.5.1 ApplicationEndpoint

<b>Class</b>	ApplicationEndpoint			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	An application endpoint is the endpoint on an Ecu in terms of application addressing (e.g. socket). The application endpoint represents e.g. the listen socket in client-server-based communication.			
<b>Base</b>	ARObject, <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	SocketAddress.applicationEndpoint			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
consumedServiceInstance	ConsumedServiceInstance	*	aggr	Consumed service instances. <b>Tags:</b> atp.Status=obsolete
maxNumberOfConnections	PositiveInteger	0..1	attr	This attribute defines the maximal number of clients the Server is able to deal with in case of Service Discovery.
networkEndpoint	NetworkEndpoint	1	ref	Reference to the network address.
priority	PositiveInteger	0..1	attr	Defines the frame priority where values from 0 (best effort) to 7 (highest) are allowed.
providedServiceInstance	ProvidedServiceInstance	*	aggr	Provided service instances. <b>Tags:</b> atp.Status=obsolete
tlsCryptoMapping	TlsCryptoServiceMapping	0..1	ref	This reference identifies the applicable TlsCryptoServiceMapping that adds the ability for TLS-based encryption on the enclosing ApplicationEndpoint.
tpConfiguration	TransportProtocolConfiguration	0..1	aggr	Configuration of the used transport protocol.

**Table 6.128: ApplicationEndpoint**

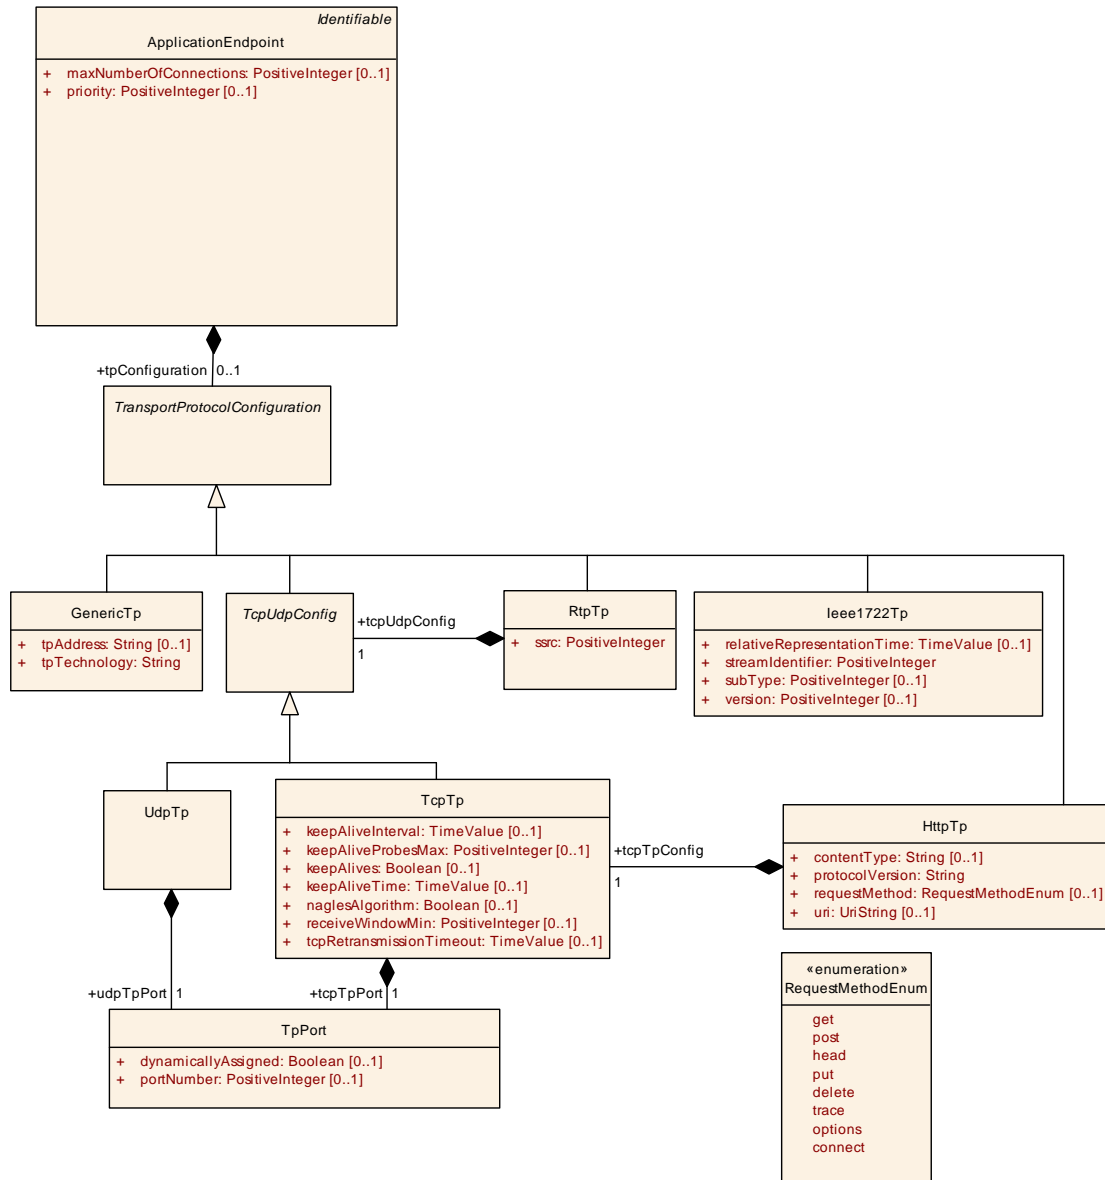

**Figure 6.38: Application Endpoint**

<b>Class</b>	<i>TransportProtocolConfiguration</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Transport Protocol configuration.			
<b>Base</b>	ARObject			
<b>Subclasses</b>	GenericTp, HttpTp, Ieee1722Tp, RtpTp, TcpUdpConfig			
<b>Aggregated by</b>	ApplicationEndpoint.tpConfiguration			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
—	—	—	—	—

**Table 6.129: TransportProtocolConfiguration**

The following Transport Protocols are supported by the System Template:

<b>Class</b>	<b>GenericTp</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Content Model for a generic transport protocol.			
<b>Base</b>	<i>ARObject</i> , <a href="#">TransportProtocolConfiguration</a>			
<b>Aggregated by</b>	<a href="#">ApplicationEndpoint.tpConfiguration</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpAddress	<a href="#">String</a>	0..1	attr	Transport Protocol dependent Address.
tpTechnology	<a href="#">String</a>	1	attr	Name of the used Transport Protocol.

**Table 6.130: GenericTp**

<b>Class</b>	<b>TcpUdpConfig</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Tcp or Udp Transport Protocol Configuration.			
<b>Base</b>	<i>ARObject</i> , <a href="#">TransportProtocolConfiguration</a>			
<b>Subclasses</b>	<a href="#">TcpTp</a> , <a href="#">UdpTp</a>			
<b>Aggregated by</b>	ApApplicationEndpoint.tpConfiguration, <a href="#">ApplicationEndpoint.tpConfiguration</a> , <a href="#">RtpTp.tcpUdpConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.131: TcpUdpConfig**

<b>Class</b>	<b>UdpTp</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Content Model for UDP configuration.			
<b>Base</b>	<i>ARObject</i> , <a href="#">TcpUdpConfig</a> , <a href="#">TransportProtocolConfiguration</a>			
<b>Aggregated by</b>	ApApplicationEndpoint.tpConfiguration, <a href="#">ApplicationEndpoint.tpConfiguration</a> , <a href="#">RtpTp.tcpUdpConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
udpTpPort	<a href="#">TpPort</a>	1	aggr	Udp Port configuration.

**Table 6.132: UdpTp**

<b>Class</b>	<b>TcpTp</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Content Model for TCP configuration.			
<b>Base</b>	<i>ARObject</i> , <a href="#">TcpUdpConfig</a> , <a href="#">TransportProtocolConfiguration</a>			
<b>Aggregated by</b>	ApApplicationEndpoint.tpConfiguration, <a href="#">ApplicationEndpoint.tpConfiguration</a> , <a href="#">HttpTp.tcpTpConfig</a> , <a href="#">RtpTp.tcpUdpConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
keepAliveInterval	TimeValue	0..1	attr	Specifies the interval in seconds between subsequent keepalive probes.
keepAliveProbesMax	PositiveInteger	0..1	attr	Maximum number of times that TCP retransmits an individual data segment before aborting the connection.
keepAlives	Boolean	0..1	attr	Indicates if Keep-Alive messages are sent.
keepAliveTime	TimeValue	0..1	attr	Specifies the time in seconds between the last data packet sent and the first keepalive probe.
naglesAlgorithm	Boolean	0..1	attr	Indicates if Nagle's Algorithm is used.







Class	TcpTp			
receiveWindowMin	PositiveInteger	0..1	attr	Minimum size of the TCP receive window in bytes.
tcpRetransmissionTimeout	TimeValue	0..1	attr	Defines the timeout in seconds before an unacknowledged TCP segment is sent again. If the tcpRetransmissionTimeout is not defined or set to "INF", no TCP segments shall be re-transmitted.
tcpTpPort	<a href="#">TpPort</a>	1	aggr	TCP Port configuration.

**Table 6.133: TcpTp**

Class	RtpTp			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	RTP over UDP or over TCP as transport protocol.			
Base	<i>ARObject</i> , <a href="#">TransportProtocolConfiguration</a>			
Aggregated by	<a href="#">ApplicationEndpoint.tpConfiguration</a>			
Attribute	Type	Mult.	Kind	Note
ssrc	PositiveInteger	1	attr	Synchronization source identifier uniquely identifies the source of a stream. The synchronization sources within the same RTP session will be unique.
tcpUdpConfig	<a href="#">TcpUdpConfig</a>	1	aggr	Tcp or Udp Configuration.

**Table 6.134: RtpTp**

Class	Ieee1722Tp			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	Content Model for IEEE 1722 configuration.			
Base	<i>ARObject</i> , <a href="#">TransportProtocolConfiguration</a>			
Aggregated by	<a href="#">ApplicationEndpoint.tpConfiguration</a>			
Attribute	Type	Mult.	Kind	Note
relativeRepresentationTime	TimeValue	0..1	attr	Defines the time when content shall be presented (in seconds). The actual absolute time is creation time plus relative presentation time.
streamIdentifier	PositiveInteger	1	attr	IEEE 1722 stream identifier
subType	PositiveInteger	0..1	attr	Protocol type.
version	PositiveInteger	0..1	attr	Revision of Ieee1722 standard

**Table 6.135: Ieee1722Tp**

Class	HttpTp			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	Http over TCP as transport protocol.			
Base	<i>ARObject</i> , <a href="#">TransportProtocolConfiguration</a>			
Aggregated by	<a href="#">ApplicationEndpoint.tpConfiguration</a>			
Attribute	Type	Mult.	Kind	Note
contentType	<a href="#">String</a>	0..1	attr	Descriptor for the transported content.
protocolVersion	<a href="#">String</a>	1	attr	HTTP Protocol version (e.g. 1.1)





Class	HttpTp			
requestMethod	RequestMethodEnum	0..1	attr	HTTP request method to be used.
tcpTpConfig	<a href="#">TcpTp</a>	1	aggr	TcpTp Configuration.
uri	UriString	0..1	attr	URI to be called.

**Table 6.136: HttpTp**

Class	TpPort			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	Dynamic or direct assignment of a PortNumber.			
Base	<i>ARObject</i>			
Aggregated by	<a href="#">TcpTp.tcpTpPort</a> , <a href="#">UdpTp.udpTpPort</a>			
Attribute	Type	Mult.	Kind	Note
dynamically Assigned	Boolean	0..1	attr	Indicates whether the source port is dynamically assigned. <b>Tags:</b> atp.Status=obsolete
portNumber	PositiveInteger	0..1	attr	Port Number.

**Table 6.137: TpPort**

**[TPS\_SYST\_02215] Usage of [portNumber](#) with value 0** [The setting of the [portNumber](#) to 0 means that the [portNumber](#) is assigned dynamically at runtime.] ()

There are different use cases for the usage of [portNumber](#) value 0. This setting can be used to describe that the remotePort is dynamically assigned and will be set by the Service Discovery. The localPort can also be set to the value 0 to define that TcpIp need to select an ephemeral port for communication.

**[TPS\_SYST\_01131] TCP/IP and UDP/IP communication over Ethernet** [The System Template supports the description of TCP/IP and UDP/IP communication over Ethernet.] ([RS\\_SYST\\_00039](#))

**[TPS\_SYST\_01089] [ApplicationEndpoint](#) priority** [The [priority](#) at the [ApplicationEndpoint](#) shall be used as Ethernet Header information together with the [vlanIdentifier](#). If defined the [priority](#) overwrites the [defaultPriority](#) that is defined in the [VlanMembership](#) and the [priority](#) that is defined at the [NetworkEndpoint](#).] ([RS\\_SYST\\_00039](#))

### 6.7.5.2 NetworkEndpoint

Class	NetworkEndpoint			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	The network endpoint defines the network addressing (e.g. IP-Address or MAC multicast address).			
Base	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			





Class	NetworkEndpoint			
Aggregated by	<a href="#">EthernetPhysicalChannel.networkEndpoint</a>			
Attribute	Type	Mult.	Kind	Note
fullyQualifiedDomainName	<a href="#">String</a>	0..1	attr	Defines the fully qualified domain name (FQDN) e.g. some.example.host.
infrastructureServices	<a href="#">InfrastructureServices</a>	0..1	aggr	Defines the network infrastructure services provided or consumed.
ipSecConfig	<a href="#">IPSecConfig</a>	0..1	aggr	Optional IPSec configuration that provides security services for IP packets.
networkEndpointAddress	<a href="#">NetworkEndpointAddress</a>	1..*	aggr	Definition of a Network Address. <b>Tags:</b> xml.name Plural=NETWORK-ENDPOINT-ADDRESSES
priority	PositiveInteger	0..1	attr	Defines the frame priority where values from 0 (best effort) to 7 (highest) are allowed.


**Table 6.138: NetworkEndpoint**

The [NetworkEndpoint](#) defines the network addressing. The network endpoint may have a priority and a FQDN (Fully Qualified Domain Name) that is used for the Service Discovery (e.g. some.example.host.).

**[TPS\_SYST\_01090] valid [NetworkEndpoint](#)** [To build a valid [NetworkEndpoint](#) at least one of the following options shall be defined in the role [NetworkEndpoint.networkEndpointAddress](#):

- a [MacMulticastConfiguration](#) with a reference to a [MacMulticastGroup](#)
- [Ipv4Configuration](#)
- [Ipv6Configuration](#)

]([RS\\_SYST\\_00039](#))

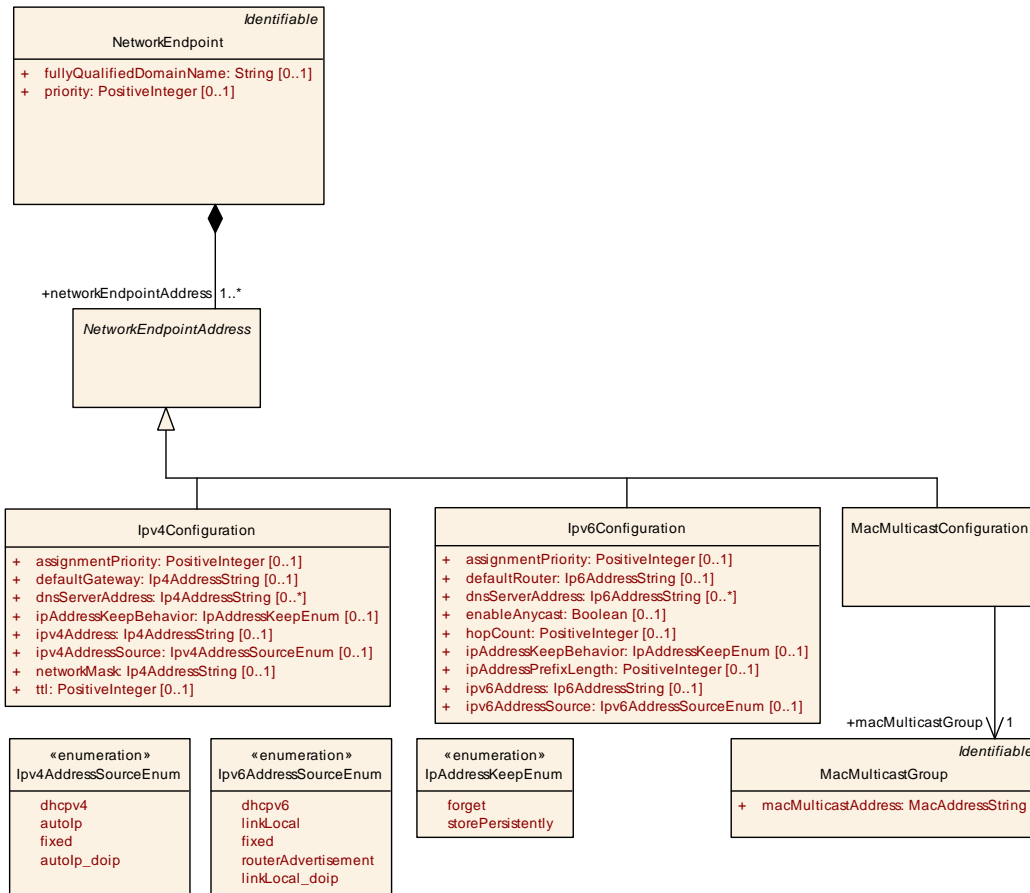

**Figure 6.39: Network Endpoint**

The attribute `NetworkEndpoint.networkEndpointAddress` defines whether an **IPv4**, **IPv6** or **MAC multicast** address is assigned to the `NetworkEndpoint`.

The reference of the `MacMulticastConfiguration.macMulticastGroup` defines the mapping of IP multicast to MAC multicast.

**[TPS\_SYST\_01088] NetworkEndpoint priority** [The `priority` at the `NetworkEndpoint` shall be used as Ethernet Header information together with the `vlanIdentifier`. If defined the `priority` overwrites the `defaultPriority` that is defined in the `VlanMembership`.] (*RS\_SYST\_00039*)

<b>Class</b>	<code>NetworkEndpointAddress</code> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	To build a valid network endpoint address there has to be either one MAC multicast group reference or an ipv4 configuration or an ipv6 configuration.			
<b>Base</b>	<code>ARObject</code>			
<b>Subclasses</b>	<code>Ipv4Configuration</code> , <code>Ipv6Configuration</code> , <code>MacMulticastConfiguration</code>			
<b>Aggregated by</b>	<code>NetworkEndpoint.networkEndpointAddress</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.139: NetworkEndpointAddress**

<b>Class</b>	<b>Ipv4Configuration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Internet Protocol version 4 (IPv4) configuration.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">NetworkEndpointAddress</a>			
<b>Aggregated by</b>	<a href="#">NetworkEndpoint.networkEndpointAddress</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
assignment Priority	PositiveInteger	0..1	attr	Priority of assignment (1 is highest). If a new address from an assignment method with a higher priority is available, it overwrites the IP address previously assigned by an assignment method with a lower priority.
defaultGateway	<a href="#">Ip4AddressString</a>	0..1	attr	IP address of the default gateway.
dnsServer Address	<a href="#">Ip4AddressString</a>	*	attr	IP addresses of preconfigured DNS servers. <b>Tags:</b> xml.namePlural=DNS-SERVER-ADDRESSES
ipAddressKeep Behavior	<a href="#">IpAddressKeepEnum</a>	0..1	attr	Defines the lifetime of a dynamically fetched IP address.
ipv4Address	<a href="#">Ip4AddressString</a>	0..1	attr	IPv4 Address. Notation: 255.255.255.255. The IP Address shall be declared in case the ipv4AddressSource is FIXED and thus no auto-configuration mechanism is used.
ipv4Address Source	<a href="#">Ip4AddressSourceEnum</a>	0..1	attr	Defines how the node obtains its IP address.
networkMask	<a href="#">Ip4AddressString</a>	0..1	attr	Network mask. Notation 255.255.255.255
tTl	PositiveInteger	0..1	attr	Lifespan of data (0..255). The purpose of the TimeToLive field is to avoid a situation in which an undeliverable datagram keeps circulating on a system.

**Table 6.140: Ipv4Configuration**

<b>Enumeration</b>	<b>Ip4AddressSourceEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Defines how the node obtains its IPv4-Address.
<b>Aggregated by</b>	<a href="#">Ipv4Configuration.ipv4AddressSource</a>
<b>Literal</b>	<b>Description</b>
autolp	AutoIP is used to dynamically assign IP addresses at device startup. <b>Tags:</b> atp.EnumerationLiteralIndex=0
autolp_doip	Linklocal IPv4 Address Assignment using DoIP Parameters <b>Tags:</b> atp.EnumerationLiteralIndex=2
dhcPv4	DHCP is a service for the automatic IP configuration of a client. <b>Tags:</b> atp.EnumerationLiteralIndex=3
fixed	The IP Address shall be declared manually. <b>Tags:</b> atp.EnumerationLiteralIndex=4

**Table 6.141: Ip4AddressSourceEnum**

<b>Enumeration</b>	<b>IpAddressKeepEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Defines the behavior after a dynamic IP address has been assigned.
<b>Aggregated by</b>	<a href="#">Ipv4Configuration.ipAddressKeepBehavior</a> , <a href="#">Ipv6Configuration.ipAddressKeepBehavior</a>
<b>Literal</b>	<b>Description</b>





Enumeration	IpAddressKeepEnum
forget	After a dynamic IP address has been assigned just use it for this session. <b>Tags:</b> atp.EnumerationLiteralIndex=0
storePersistently	After a dynamic IP address has been assigned store the address persistently. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.142: IpAddressKeepEnum**

Class	Ipv6Configuration			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	Internet Protocol version 6 (IPv6) configuration.			
Base	ARObject, NetworkEndpointAddress			
Aggregated by	NetworkEndpoint.networkEndpointAddress			
Attribute	Type	Mult.	Kind	Note
assignment Priority	PositiveInteger	0..1	attr	Priority of assignment (1 is highest). If a new address from an assignment method with a higher priority is available, it overwrites the IP address previously assigned by an assignment method with a lower priority.
defaultRouter	Ip6AddressString	0..1	attr	IP address of the default router.
dnsServer Address	Ip6AddressString	*	attr	IP addresses of pre configured DNS servers. <b>Tags:</b> xml.namePlural=DNS-SERVER-ADDRESSES
enableAnycast	Boolean	0..1	attr	This attribute is used to enable anycast addressing (i.e. to one of multiple receivers).
hopCount	PositiveInteger	0..1	attr	The distance between two hosts. The hop count n means that n gateways separate the source host from the destination host (Range 0..255)
ipAddressKeep Behavior	IpAddressKeepEnum	0..1	attr	Defines the lifetime of a dynamically fetched IP address.
ipAddressPrefix Length	PositiveInteger	0..1	attr	IPv6 prefix length defines the part of the IPv6 address that is the network prefix.
ipv6Address	Ip6AddressString	0..1	attr	IPv6 Address. Notation: FFFF::...:FFFF. The IP Address shall be declared in case the ipv6AddressSource is FIXED and thus no auto-configuration mechanism is used.
ipv6Address Source	Ipv6AddressSource Enum	0..1	attr	Defines how the node obtains its IP address.

**Table 6.143: Ipv6Configuration**

**[constr\_5263]** [NetworkEndpoint.networkEndpointAddress](#) restriction for **IPv4** [A [NetworkEndpoint](#) shall not aggregate several [Ipv4Configurations](#) that have their [ipv4AddressSource](#) set to fixed.]()

**[constr\_5264]** [NetworkEndpoint.networkEndpointAddress](#) restriction for **IPv6** [A [NetworkEndpoint](#) shall not aggregate several [Ipv6Configurations](#) that have their [ipv6AddressSource](#) set to fixed.]()

**[constr\_5265]** [NetworkEndpoint.networkEndpointAddress](#) restriction [A [NetworkEndpoint](#) shall not aggregate an [Ipv4Configuration](#) and an [Ipv6Configuration](#) as [networkEndpointAddress](#) at the same time.]()

[TPS\_SYST\_03002] **Keep behavior of DHCP clients** [The attribute `IpAddress-KeepEnum` defines for the DHCP client to either

- persistently store an assigned IP address (`storePersistently`) after it has been fetched, or
- learn it after each start-up (`forget`).

]([RS\\_SYST\\_00052](#))

[constr\_3298] **Ipv6Configuration.ipv6Address range in case of enableAnycast** [If `Ipv6Configuration.enableAnycast` is set to true then the `Ipv6Configuration.ipv6Address` needs to be in the unicast addressing range.]()

<b>Enumeration</b>	<b>Ipv6AddressSourceEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Defines how the node obtains its IPv6-Address.
<b>Aggregated by</b>	<a href="#">Ipv6Configuration.ipv6AddressSource</a>
<b>Literal</b>	<b>Description</b>
dhcpv6	DHCP is a service for the automatic IP configuration of a client. <b>Tags:</b> atp.EnumerationLiteralIndex=0
fixed	The IP Address shall be declared manually. <b>Tags:</b> atp.EnumerationLiteralIndex=1
linkLocal	LinkLocal is intended only for communications within the segment of a local network (a link) or a point-to-point connection that a host is connected to. <b>Tags:</b> atp.EnumerationLiteralIndex=2
linkLocal_doip	Linklocal IPv6 Address Assignment using DoIP Parameters <b>Tags:</b> atp.EnumerationLiteralIndex=3
router Advertisement	IPv6 Stateless Autoconfiguration. <b>Tags:</b> atp.EnumerationLiteralIndex=4

**Table 6.144: Ipv6AddressSourceEnum**

<b>Class</b>	<b>MacMulticastConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	References a per cluster globally defined MAC-Multicast-Group.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">NetworkEndpointAddress</a>			
<b>Aggregated by</b>	<a href="#">NetworkEndpoint.networkEndpointAddress</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
macMulticast Group	<a href="#">MacMulticastGroup</a>	1	ref	Reference to a macMulticastGroup.

**Table 6.145: MacMulticastConfiguration**


<b>Primitive</b>	<b>Ip4AddressString</b>
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes
<b>Note</b>	This is used to specify an IP4 address. Notation: 255.255.255.255  <b>Tags:</b> xml.xsd.customType=IP4-ADDRESS-STRING xml.xsd.pattern=(25[0-5] 2[0-4][0-9] [01]?[0-9][0-9]?)\.(25[0-5] 2[0-4][0-9] [01]?[0-9][0-9]?)\.(25[0-5] 2[0-4][0-9] [01]?[0-9][0-9]?)\.(25[0-5] 2[0-4][0-9] [01]?[0-9][0-9]?) ANY xml.xsd.type=string

**Table 6.146: Ip4AddressString**

<b>Primitive</b>	<b>Ip6AddressString</b>
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes
<b>Note</b>	This is used to specify an IP6 address. Notation: FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF  Alternative notations, short-cuts with duplicate colons like ::, etc. or mixtures using colons and dots, are not allowed.  <b>Tags:</b> xml.xsd.customType=IP6-ADDRESS-STRING xml.xsd.pattern=[0-9A-Fa-f]{1,4}(:[0-9A-Fa-f]{1,4}){7,7} ANY xml.xsd.type=string

**Table 6.147: Ip6AddressString**

In addition, infrastructure services may be provided or consumed by the [Network-Endpoints](#).

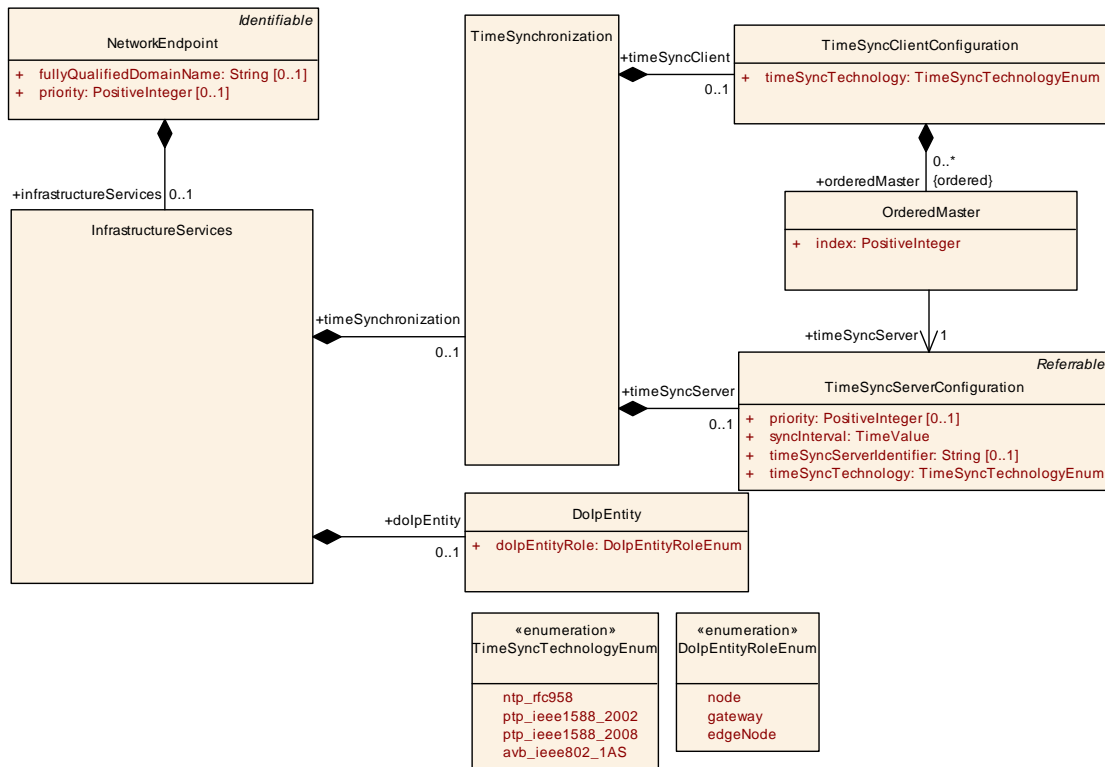

**Figure 6.40: Network Endpoint Infrastructure Services**



<b>Class</b>	<b>InfrastructureServices</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the network infrastructure services provided or consumed.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	NetworkEndpoint.infrastructureServices			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dolpEntity	DolpEntity	0..1	aggr	Defines whether a infrastructure service that runs on the network endpoint is a DoIP-Entity.
time Synchronization	TimeSynchronization	0..1	aggr	Defines the servers / clients in a time synchronised network.

**Table 6.148: InfrastructureServices**

The [TimeSyncServerConfiguration](#) provides a time synchronization service.

**[constr\_3257] TimeSyncTechnology of servers and clients in a time synchronized network.** [[TimeSyncClientConfiguration.timeSyncTechnology](#) shall have the same value as the [TimeSyncServerConfiguration.timeSyncTechnology](#) that is referenced in the [TimeSyncClientConfiguration.orderedMaster](#) list.]()

Please note that there may be several [timeSyncServers](#) defined in the [TimeSyncClientConfiguration.orderedMaster](#) list, but only one is accepted at runtime. In case that a master is not available anymore, a master transition will be processed according to the defined [TimeSyncClientConfiguration.orderedMaster](#) list. The next defined [timeSyncServer](#) in the [OrderedMaster](#) list will take over the master functionality.

<b>Class</b>	<b>TimeSynchronization</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the servers / clients in a time synchronised network.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	InfrastructureServices.timeSynchronization			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
timeSyncClient	TimeSyncClient Configuration	0..1	aggr	Configuration of the time synchronisation client.
timeSyncServer	TimeSyncServer Configuration	0..1	aggr	Configuration of the time synchronisation server.

**Table 6.149: TimeSynchronization**

<b>Class</b>	<b>TimeSyncClientConfiguration</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the configuration of the time synchronisation client.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	TimeSynchronization.timeSyncClient			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	TimeSyncClientConfiguration			
orderedMaster (ordered)	<a href="#">OrderedMaster</a>	*	aggr	Defines a list of ordered NetworkEndpoints. <b>Tags:</b> xml.namePlural=ORDERED-MASTER-LIST
timeSync Technology	<a href="#">TimeSyncTechnology Enum</a>	1	attr	Defines the time synchronisation technology used.

**Table 6.150: TimeSyncClientConfiguration**

Class	TimeSyncServerConfiguration			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Defines the configuration of the time synchronisation server.			
<b>Base</b>	<i>ARObject</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">TimeSynchronization.timeSyncServer</a>			
Attribute	Type	Mult.	Kind	Note
priority	PositiveInteger	0..1	attr	Server Priority.
syncInterval	TimeValue	1	attr	Synchronisation interval used by the time synchronisation server (in seconds).
timeSyncServer Identifier	<a href="#">String</a>	0..1	attr	Identifier of the TimeSyncServer.
timeSync Technology	<a href="#">TimeSyncTechnology Enum</a>	1	attr	Defines the time synchronisation technology used. Possible values are: NTP_RFC958, PTP_IEEE1588_2002, PTP_IEEE1588_2008, AVB_IEEE802_1AS and others.

**Table 6.151: TimeSyncServerConfiguration**

Class	OrderedMaster			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Element in the network endpoint list.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">TimeSyncClientConfiguration.orderedMaster</a>			
Attribute	Type	Mult.	Kind	Note
index	PositiveInteger	1	attr	Defines the order of the network endpoint list (e.g. 0, 1, 2, ...).
timeSyncServer	<a href="#">TimeSyncServer Configuration</a>	1	ref	Reference to a master (Time Sync Server).

**Table 6.152: OrderedMaster**

Enumeration	TimeSyncTechnologyEnum			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	Timesynchronization. Server/Client configuration.			
<b>Aggregated by</b>	<a href="#">TimeSyncClientConfiguration.timeSyncTechnology</a> , <a href="#">TimeSyncServerConfiguration.timeSyncTechnology</a>			
Literal	Description			
avb_ieee802_1AS	Ethernet AVB compliant IEEE802.1AS Precision Time Protocol <b>Tags:</b> atp.EnumerationLiteralIndex=0			





Enumeration	TimeSyncTechnologyEnum
ntp_rfc958	Network Time Protocol (NTP) <b>Tags:</b> atp.EnumerationLiteralIndex=1
ptp_ieee1588_2002	Precision Time Protocol (PTP) IEEE 1588-2002 <b>Tags:</b> atp.EnumerationLiteralIndex=2
ptp_ieee1588_2008	Precision Time Protocol (PTP) IEEE 1588-2008 <b>Tags:</b> atp.EnumerationLiteralIndex=3

**Table 6.153: TimeSyncTechnologyEnum**

The [DoIpEntity](#) (Diagnostics over Internet Protocol, ISO 13400) defines the DoIp role this [NetworkEndpoint](#) has.

<b>Class</b>	<b>DoIpEntity</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
<b>Note</b>	ECU providing this infrastructure service is a DoIP-Entity.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">InfrastructureServices.dolpEntity</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dolpEntityRole	<a href="#">DoIpEntityRoleEnum</a>	1	attr	Identifies the role in terms of DoIP this network-node has.

**Table 6.154: DoIpEntity**

Enumeration	DoIpEntityRoleEnum
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	DoIP role a network-node has.
<b>Aggregated by</b>	<a href="#">DoIpEntity.dolpEntityRole</a>
<b>Literal</b>	<b>Description</b>
edgeNode	Network node is a DoIP gateway that accepts external connections. <b>Tags:</b> atp.EnumerationLiteralIndex=0
gateway	Network node is a Gateway between the DoIP network and other networks. <b>Tags:</b> atp.EnumerationLiteralIndex=1
node	Network node is a Dolp node. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 6.155: DoIpEntityRoleEnum**

### 6.7.5.3 SOME/IP Service Instances

The AUTOSAR protocol SOME/IP-SD is a Service Discovery protocol that is used to communicate the availability of functional entities called services in the in-vehicle communication and to control the send behavior of event messages to receivers that subscribed to receive these events (Publish/Subscribe). A Service may also provide methods that a client is able to call (Request/Response).

Please note that the AUTOSAR Classic Platform does not support Service Interfaces. To mimic a Service Interface in the classic platform any combination of [ClientServerInterfaces](#), [SenderReceiverInterfaces](#) or [TriggerInterfaces](#) may be used to describe a service to which later a SOME/IP Service Id is assigned.

The assignment of SOME/IP Service Ids is done on the Service Instance level in the System Description. An [AbstractServiceInstance](#) collected in the [ServiceInstanceCollectionSet](#) is describing such a Service Instance.

A SOME/IP serialized message is represented by an [ISignal](#) that aggregates the [SOMEIPTransformationISignalProps](#) that in turn references the [TransformationTechnology](#) with the `protocol` set to SOMEIP. The [ISignal](#) is mapped into an [ISignalIPdu](#) and the [PduTriggering](#) that instantiates the [ISignalIPdu](#) on the VLAN is related to a [ProvidedServiceInstance](#) or [ConsumedServiceInstance](#) via a [PduActivationRoutingGroup](#). The [ProvidedServiceInstance.majorVersion](#) or [ConsumedServiceInstance.majorVersion](#) describes the Service Interface Version that is transported in the Header of the SOME/IP message to identify the source of the message.

**[TPS\_SYST\_02377] Consistent setting of Service Interface Version** [The Service Interface Version represented by the SOMEIPTransformation (either via [SOMEIPTransformationISignalProps.interfaceVersion](#) of the [ISignal](#) or via [SOMEIPTransformationDescription.interfaceVersion](#) of the [TransformationTechnology](#) that is referenced by the [SOMEIPTransformationISignalProps](#) of the [ISignal](#)) shall be equal to the corresponding [ProvidedServiceInstance.majorVersion](#) or [ConsumedServiceInstance.majorVersion](#).]()

<b>Class</b>	<a href="#">ServiceInstanceCollectionSet</a>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Collection of ServiceInstances <b>Tags:</b> atp.recommendedPackage=ServiceInstanceCollectionSets			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
serviceInstance	<a href="#">AbstractServiceInstance</a>	*	aggr	ServiceInstances that are part of the collection. <b>Stereotypes:</b> atp.Splitable; atp.Variation <b>Tags:</b> atp.Splitkey=serviceInstance.shortName, serviceInstance.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.156: ServiceInstanceCollectionSet**

<b>Class</b>	<b>AbstractServiceInstance</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Provided and Consumed Ethernet Service Instances that are available at the ApplicationEndpoint.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">ConsumedServiceInstance</a> , <a href="#">ProvidedServiceInstance</a>			
<b>Aggregated by</b>	<a href="#">ServiceInstanceCollectionSet.serviceInstance</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
capability Record	<a href="#">TagWithOptionalValue</a>	*	aggr	A sequence of records to store arbitrary name/value pairs conveying additional information about the named service.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=capabilityRecord, capabilityRecord.variationPoint.shortLabel vh.latestBindingTime=postBuild
majorVersion	PositiveInteger	0..1	attr	Major Version of the ServiceInterface. Value can be set to a number that represents the Major Version of the service.
method Activation RoutingGroup	<a href="#">PduActivationRoutingGroup</a>	0..1	aggr	The ServiceDiscovery module is able to activate and deactivate the PDU routing for ClientServerOperations (SOME/IP methods).  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=methodActivationRoutingGroup.shortName, methodActivationRoutingGroup.variationPoint.shortLabel vh.latestBindingTime=postBuild
routingGroup	<a href="#">SoAdRoutingGroup</a>	*	ref	The ServiceDiscovery module is able to activate and deactivate the PDU routing from and to TCP/IP-sockets.  <b>Tags:</b> atp.Status=obsolete

**Table 6.157: AbstractServiceInstance**

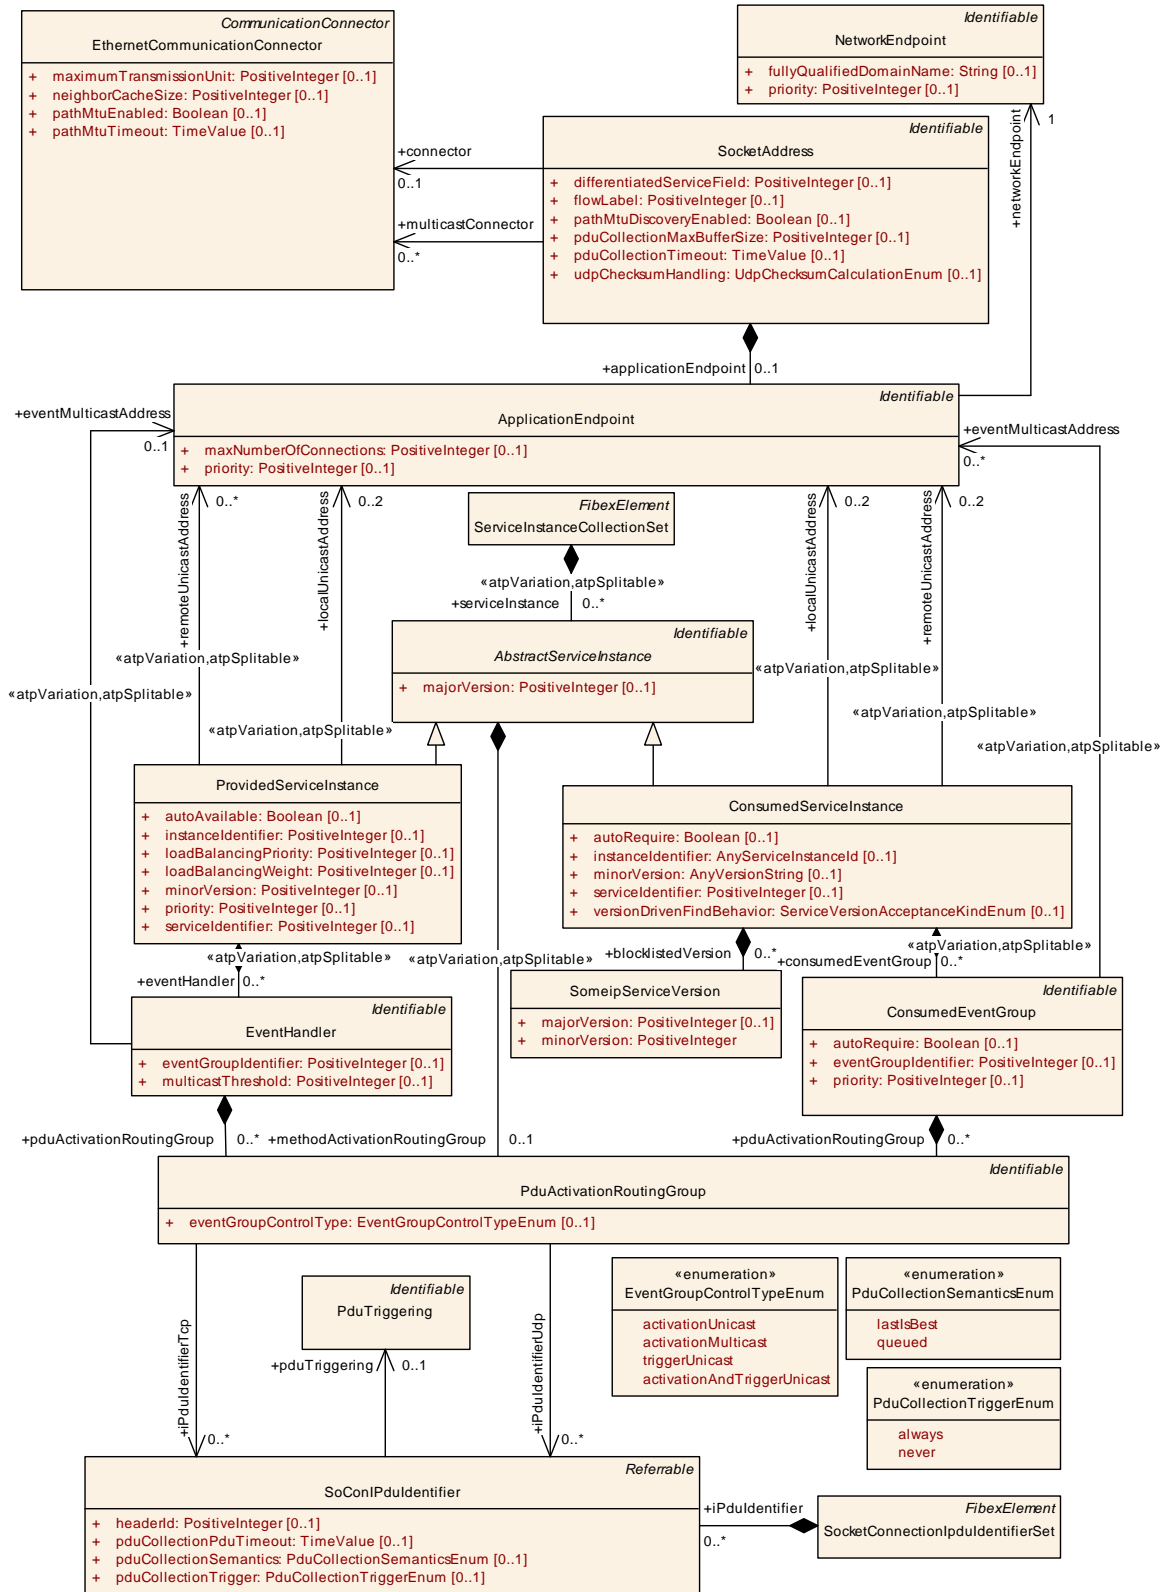


Figure 6.41: Provided and Consumed Service Instances

SOME/IP allows for the specification of additional information about the [AbstractServiceInstance](#) with the Capability Record that allows to transport arbitrary configuration strings (key/value pairs). This allows to encode additional information like the name of a service or its configuration.

**[TPS\_SYST\_02216] Configuration of [capabilityRecords](#)** [A Capability Record (key/value pair) is configurable with the [AbstractServiceInstance.capabilityRecord](#) and the two attributes [key](#) and [value](#).]()

<b>Class</b>	<b>TagWithOptionalValue</b>			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::TagWithOptionalValue			
<b>Note</b>	A tagged value is a combination of a tag (key) and a value that gives supplementary information that is attached to a model element. Please note that keys without a value are allowed.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">AbstractServiceInstance.capabilityRecord</a> , <a href="#">Machine.environmentVariable</a> , <a href="#">ProvidedSomeipServiceInstance.capabilityRecord</a> , <a href="#">RequiredSomeipServiceInstance.capabilityRecord</a> , <a href="#">SdClientConfig.capabilityRecord</a> , <a href="#">SdServerConfig.capabilityRecord</a> , <a href="#">StartupConfig.environmentVariable</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
key	<a href="#">String</a>	1	attr	Defines a key.
sequenceOffset	Integer	0..1	attr	The sequenceOffset attribute supports the use case where TagWithOptionalValue is aggregated as splittable. If multiple aggregations define the same value of attribute key then the order in which the value collection is merged might be significant. As an example consider the modeling of the \$PATH environment variable by means of a meta class TagWithOptionalValue. The sequenceOffset describes the relative position of each contribution in the concatenated value. The contributions are sorted in increasing integer order.
value	<a href="#">String</a>	0..1	attr	Defines the corresponding value.

**Table 6.158: TagWithOptionalValue**

**[TPS\_SYST\_01094] allowed [key/value](#) TagWithOptionalValue combinations**  
[The following [key/value](#) combinations are supported:

- [key](#) present, with no [value](#) (e.g. "passreq" -> password required for this service)
- [key](#) present, with empty [value](#) (e.g. "Plugins=" -> server supports plugins, but none are presently installed)
- [key](#) present, with non-empty [value](#) (e.g. "Plugins=JPEG,MPEG2,MPEG4")

] ([RS\\_SYST\\_00039](#))

The following chapters are describing the configuration of SOME/IP [ProvidedServiceInstances](#) and [ConsumedServiceInstances](#) in more detail. Please note that currently the communication between a [ProvidedServiceInstance](#) and a [ConsumedServiceInstance](#) is restricted to a VLAN (see also [[constr\\_5079](#)]).

#### 6.7.5.4 Multicast Subscription

The established approach for service subscription is that a client uses an *unicast* endpoint to subscribe to a server and the server acknowledges the subscription providing a *multicast* endpoint. The client has a *unicast* socket where the events are received in case the server distributes its events in *unicast* mode and the client has a *multicast* socket where the events are received in case the server switches to *multicast* sending (based on the `multicastThreshold`).

An extended approach is to allow a client to subscribe using a *multicast* endpoint (combination of multicast IP-Address and port). Thus, in the event group subscription a *multicast* endpoint is sent from the client to the server. The server handles this *multicast* endpoint as it would be an *unicast* endpoint. But the server collects identical *multicast* endpoints and handles them as ONE client.

The goal of this approach is to be able to have a group of clients subscribing to a common *multicast* endpoint, while other clients still are able to subscribe using a *unicast* endpoint.

This feature is called **multicast subscription**.

If, for example, THREE clients subscribe to an event group with the same *multicast* endpoint and ONE client subscribes with an *unicast* endpoint to the same event group, then the server would consider this as having TWO clients. The events of this event group will be sent every time once to the *multicast* endpoint (where it actually would be received by THREE clients) and once to the *unicast* endpoint for the *unicast* client.

Note that, in case `PduActivationRoutingGroup.eventGroupControlType` is defined as `triggerUnicast` or `activationAndTriggerUnicast` there will be an initial event sent every time another client subscribes using the same *multicast* endpoint. Thus, already subscribed clients on that *multicast* endpoint will get that initial event as well.

Even if further clients subscribe to the already used *multicast* endpoint the number of clients counted for the calculation of the `multicastThreshold` is not increased. In the sketched example there would still be TWO clients registered for subscription.

Of course, if further clients subscribe to the very same event group with different *multicast* or *unicast* endpoints, these additional clients are considered in the `multicastThreshold` count. Thus, at exceeding the `multicastThreshold`, count the server will switch to the one *multicast* endpoint which the server distributed to all of its clients in the subscribe acknowledge message. At this point ALL subscribed clients (regardless whether they subscribed using an *unicast* or *multicast* endpoint) will receive the events on the subscribe acknowledge *multicast* endpoint provided by the server.

The server keeps track of how many clients subscribed to a dedicated *multicast* endpoint.

In case of unsubscribe or expiration of a subscription which was subscribed using a *multicast* endpoint the server needs to decrement the count of subscriptions for that



specific *multicast* endpoint. If the last subscriber unsubscribes the subscription to that *multicast* endpoint is removed.

Note that each *multicast* endpoint has an own subscription count to be kept by the server.

For details on the `multicast subscription` feature refer to the protocol specification [26] and functional specification [27].

Enabling the `multicast subscription`:

**[TPS\_SYST\_03064] Enabling of `multicast subscription`** [The `multicast subscription` is enabled when a `ConsumedServiceInstance` defines a `eventMulticastSubscriptionAddress` reference to an `ApplicationEndpoint`.]()

**[constr\_3669] `eventMulticastSubscriptionAddress` shall refer to a multicast address** [The reference `ConsumedServiceInstance.eventMulticastSubscriptionAddress` shall refer to an `ApplicationEndpoint` which in turn refers to a `NetworkEndpoint` that represents a multicast address.]()

If the `multicast subscription` is enabled for a client then it is not allowed to have also a unicast subscription defined.

**[constr\_3670] No support for parallel `localUnicastAddress` and `eventMulticastSubscriptionAddress`** [If a `eventMulticastSubscriptionAddress` is defined for a `ConsumedServiceInstance` then there shall not be a `localUnicastAddress` defined at the same `ConsumedServiceInstance`.]()

In case of a static configuration it is also possible to define a set of predefined *multicast* client endpoints at the server. This is supported also in a mixed configuration, where one part of the statically defined clients is defined using `ProvidedServiceInstance.remoteUnicastAddress` and the other part of the statically defined clients is defined using `ProvidedServiceInstance.remoteMulticastSubscriptionAddress`. The server takes the union of both sets as the set of statically defined clients.

**[TPS\_SYST\_03065] Static definition of `multicast subscription` at the server** [The `ProvidedServiceInstance.remoteMulticastSubscriptionAddress` defines a set of remote multicast addresses which are handled by the server as predefined subscribed clients.]()

**[TPS\_SYST\_03066] Mix of static definition consisting of `multicast subscription` clients and unicast subscription clients at the server** [It is well supported to define both, a set of `ProvidedServiceInstance.remoteUnicastAddress` and a set of `ProvidedServiceInstance.remoteMulticastSubscriptionAddress` references. The server is then configured to handle the union of both sets as the predefined clients.]()

**[constr\_3671] `remoteMulticastSubscriptionAddress` shall refer to a multicast address** [The reference `ProvidedServiceInstance.remoteMulticastSubscriptionAddress` shall refer to an `ApplicationEndpoint` which in turn refers to a `NetworkEndpoint` that represents a multicast address.]()

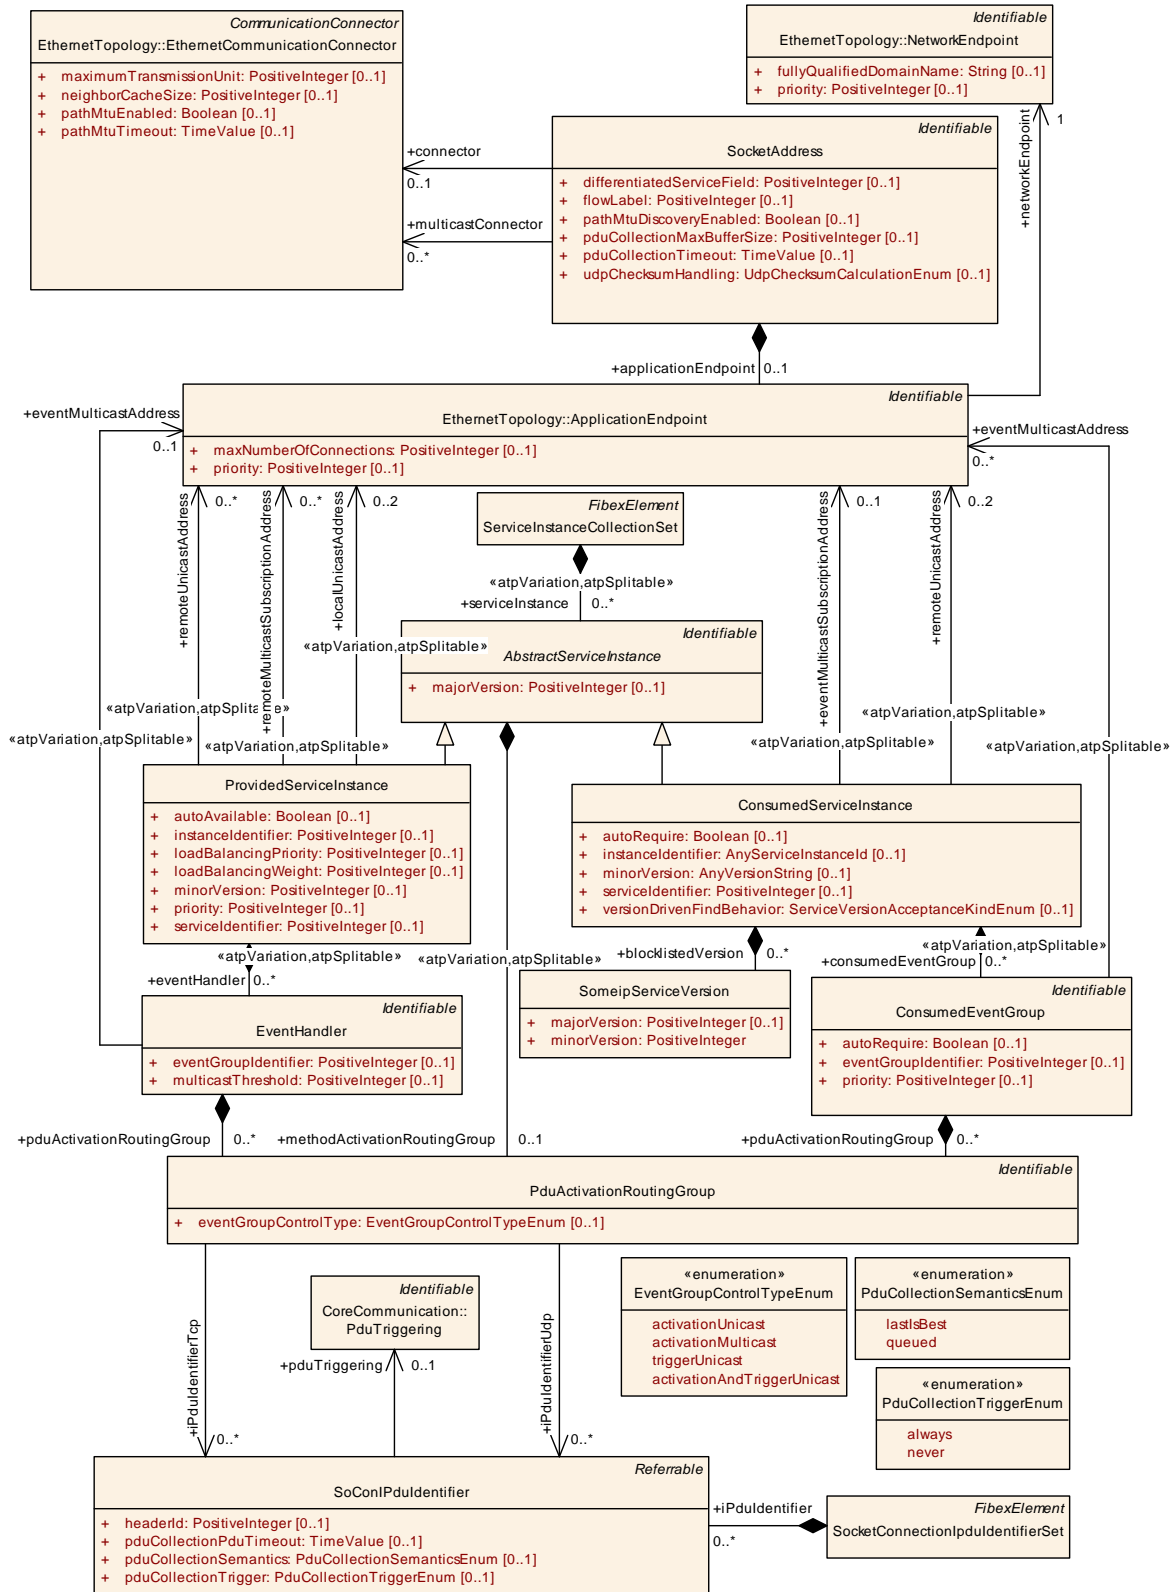


Figure 6.42: Multicast Subscribe

There are several constrains to be considered when using the `multicast subscription` feature:

If a `ConsumedServiceInstance` has methods defined, then the `multicast subscription` is not possible.

**[constr\_3672] No support for methods in multicast subscription at the client** [If a `ConsumedServiceInstance` aggregates a `PduActivationRoutingGroup` in the role `methodActivationRoutingGroup`, then the `ConsumedServiceInstance` shall not define a `eventMulticastSubscriptionAddress`.]()

A server is able to define a set of statically configured client addresses using the `ProvidedServiceInstance.remoteMulticastSubscriptionAddress` reference. But if the server also provides methods it is not possible to define static *multicast* receivers for that server.

**[constr\_3673] No support for methods in multicast subscription at the server static configuration** [If a `ProvidedServiceInstance` aggregates a `PduActivationRoutingGroup` in the role `methodActivationRoutingGroup`, then the `ProvidedServiceInstance.remoteMulticastSubscriptionAddress` shall not be defined.]()

There are some features of AUTOSAR which need to be carefully considered when used in combination with `multicast subscription`:

- communication which relies on sequence counting might not operate properly (e.g. E2E or SecOC) if initial events are sent on every subscription to an *multicast* endpoint
- communication which requires point-to-point interaction may not operate properly (e.g. IPSec or TLS)

#### 6.7.5.5 ProvidedServiceInstance

The `ProvidedServiceInstance` is used to define a Service provider.

**[TPS\_SYST\_02217] SOME/IP Service offer** [The `EcuInstance` on which the `ProvidedServiceInstance` is deployed offers the Service Instance over SOME/IP with the `serviceIdentifier` and `instanceIdentifier`. The version of the Service that is offered is described by the attributes `majorVersion` and `minorVersion`.] (*RS\_SYST\_00039*)

**[constr\_5062] SOME/IP ProvidedServiceInstances of the same serviceInterface on one EcuInstance** [Different `ProvidedServiceInstances` with the same `serviceIdentifier` and the same `majorVersion` and different `instanceIdentifiers` shall not be mapped to the same UDP/TCP port number and IP address combination that is represented by referenced `ApplicationEndpoint` and its referenced `NetworkEndpoint`.]()

The reason for this restriction is that the Instance IDs are only used for Service Discovery but are not contained in the SOME/IP header. So if for example two `ProvidedServiceInstances` of the same ServiceInterface are provided on the same `EcuInstance` and a client wants to call a method of one of these `ProvidedServiceInstances` the only possibility for the client to distinguish the `ProvidedServiceInstances` is the port number over which the individual `ProvidedServiceInstances` are provided.

**[constr\_5063] `ProvidedServiceInstance.serviceIdentifier` is mandatory** [The `ProvidedServiceInstance.serviceIdentifier` is mandatory.]()

**[constr\_5064] `ProvidedServiceInstance.majorVersion` is mandatory** [The `ProvidedServiceInstance.majorVersion` is mandatory.]()

**[constr\_5065] `ProvidedServiceInstance.minorVersion` is mandatory** [The `ProvidedServiceInstance.minorVersion` is mandatory.]()

**[constr\_5066] `ProvidedServiceInstance.instanceIdentifier` is mandatory** [The `ProvidedServiceInstance.instanceIdentifier` is mandatory.]()

**[constr\_5067] `ProvidedServiceInstance` shall be unique in respect of `serviceIdentifier`, `instanceIdentifier`, `majorVersion`** [On a VLAN each `ProvidedServiceInstance` shall have a different `serviceIdentifier`, `instanceIdentifier` and `majorVersion` value combination.]()

The reason for this constraint is that the Service Discovery messages have to be unambiguous on the VLAN.

In other words no two `ProvidedServiceInstances` in a variant bound model shall have the same `serviceIdentifier`, `instanceIdentifier` and `majorVersion` value combination.

<b>Class</b>	<b>ProvidedServiceInstance</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Service instances that are provided by the ECU that is connected via the ApplicationEndpoint to a CommunicationConnector.			
<b>Base</b>	<i>ARObject</i> , <i>AbstractServiceInstance</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<code>ApplicationEndpoint.providedServiceInstance</code> , <code>ServiceInstanceCollectionSet.serviceInstance</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
autoAvailable	Boolean	0..1	attr	Defines that this <code>ProvidedServiceInstance</code> shall be offered by the service discovery at ECU start.
eventHandler	<code>EventHandler</code>	*	aggr	Collection of event groups provided by the <code>ProvidedServiceInstance</code>  <b>Stereotypes:</b> <code>atpSplitable</code> ; <code>atpVariation</code> <b>Tags:</b> <code>atp.Splitkey=eventHandler.shortName</code> , <code>eventHandler.variationPoint.shortLabel</code> <code>vh.latestBindingTime=postBuild</code>
instanceIdentifier	PositiveInteger	0..1	attr	Instance identifier. Can be used for e.g. service discovery to identify the instance of the service.





Class	ProvidedServiceInstance			
loadBalancingPriority	PositiveInteger	0..1	attr	Defines the value to be used for load balancing priority in the service offer. Lower value means higher priority.
loadBalancingWeight	PositiveInteger	0..1	attr	Defines the value to be used for load balancing weight in the service offer. Higher value means higher probability to be chosen.
localUnicastAddress	<a href="#">ApplicationEndpoint</a>	0..2	ref	The local address over which the PSI is provided (udp, tcp or both). <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=localUnicastAddress.applicationEndpoint, localUnicastAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
minorVersion	PositiveInteger	0..1	attr	Minor Version of the Service that is provided by this ProvidedServiceInstance.
priority	PositiveInteger	0..1	attr	Defines the frame priority where values from 0 (best effort) to 7 (highest) are allowed.
remoteMulticastSubscriptionAddress	<a href="#">ApplicationEndpoint</a>	*	ref	This reference defines the remote multicast subscribed addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=remoteMulticastSubscriptionAddress.applicationEndpoint, remoteMulticastSubscriptionAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
remoteUnicastAddress	<a href="#">ApplicationEndpoint</a>	*	ref	This reference defines the remote addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=remoteUnicastAddress.applicationEndpoint, remoteUnicastAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
sdServerConfig	SdServerConfig	0..1	aggr	Service Discovery Server configuration. <b>Tags:</b> atp.Status=obsolete
sdServerTimerConfig	<a href="#">SomeipSdServerServiceInstanceConfig</a>	0..1	ref	Server specific configuration settings relevant for the SOME/IP service discovery. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=sdServerTimerConfig.someipSdServerServiceInstanceConfig, sdServerTimerConfig.variationPoint.shortLabel vh.latestBindingTime=postBuild
serviceIdentifier	PositiveInteger	0..1	attr	This attribute represents the ability to describe the SOME/IP service ID that is offered.

**Table 6.159: ProvidedServiceInstance**

**[TPS\_SYST\_02218] ProvidedServiceInstance deployment** [The deployment of a [ProvidedServiceInstance](#) to an [EcuInstance](#) is realized with the [localUnicastAddress](#) reference. The referenced [ApplicationEndpoint](#) defines the TCP/UDP Port and the [NetworkEndpoint](#) that is referenced by the [ApplicationEndpoint](#) defines the IP Address on which the Service can be reached. This Endpoint information is transported in the SOME/IP Service Offer message to the clients.

With the `SocketAddress.connector` reference the deployment to an `EcuInstance` is achieved. *(RS\_SYST\_00039)*

The AUTOSAR BswM is used to aggregate the availability of all entities which make up a service instance. When all entities are available, the service instance as such is available. When a service instance becomes available the SD Module will usually send an announcement message so other ECUs can learn about the availability and the location (IP address and UDP or TCP Port) of that service instance.

Please note that the Service provider and the Service consumer do not need to find each other if the `ProvidedServiceInstance` contains a `remoteUnicastAddress` reference to an `ApplicationEndpoint`. If this reference is set, the Server will not get the client's address from the connection request.

The server knows the address of the Client from the configuration and all necessary socket connections can be set up from this configuration information. The client still needs to subscribe to event groups that are of interest for it in this setup.

**[TPS\_SYST\_02219] Static configuration between `ProvidedServiceInstance` and `ConsumedServiceInstance`** [If the `ProvidedServiceInstance` contains a `remoteUnicastAddress` reference to an `ApplicationEndpoint` the SoAd will setup one single `SocketConnection` between the `localUnicastAddress` and the `remoteUnicastAddress`.] *(RS\_SYST\_00039)*

**[TPS\_SYST\_02220] Maximal number of clients that may connect to the local server address** [If the `ProvidedServiceInstance` references an `ApplicationEndpoint` in the role `localUnicastAddress` then the attribute `ApplicationEndpoint.maxNumberOfConnections` defines the maximal number of clients (with a dynamic address) that will be able to connect to this local server address. The SoAd will setup a `SocketConnection` for each potential client with `localUnicastAddress` and ANY remote Address (ANY Port and ANY IP-Address).] *(RS\_SYST\_00039)*

**[constr\_5068] `ProvidedServiceInstance.localUnicastAddress` shall be IP Unicast** [If defined, the `ProvidedServiceInstance.localUnicastAddress` shall point to an IP Unicast address.] *()*

**[constr\_5069] `ProvidedServiceInstance.remoteUnicastAddress` shall be IP Unicast** [The `ProvidedServiceInstance.remoteUnicastAddress` shall point to an IP Unicast address.] *()*

In other words the `localUnicastAddress` and `remoteUnicastAddress` are not allowed to point to an IP Multicast address. Please note that an IP Unicast address can be defined as a fixed address or be retrieved via dynamic mechanisms, e.g. DHCP.

Please note that a Service may provide some portions (Events, Methods) over TCP and other portions over UDP. This is the reason why the `ProvidedServiceInstance` is able to reference up to two `localUnicastAddresses`.

**[TPS\_SYST\_02221] `ProvidedServiceInstance.localUnicastAddress` reference target** [The `ProvidedServiceInstance` is allowed to have:



- a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a UDP Port,
- a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a TCP Port,
- a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a UDP Port and a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a TCP Port.

](`RS_SYST_00039`)

**[constr\_3379] Multiple `SocketAddress` entries with the same IP Address, Protocol and Port in the context of a given `EcuInstance`** [If there are two or more `SocketAddress` entities within the scope of one `SoAdConfig` in the scope of one `EcuInstance` that have the same static (fixed at configuration time) IP Address, Protocol and Port in the aggregated `ApplicationEndpoint` and `NetworkEndpoint`, (e.g., 192.168.1.1, Tcp and 10000, respectively) then only one of these `SocketAddress` elements shall be referenced by `ProvidedServiceInstances/ConsumedServiceInstances` in the role `localUnicastAddress`.]()

Rationale for [constr\_3379]: There can be only one representation of the `ProvidedServiceInstance/ConsumedServiceInstance` using the given IP Address, Protocol and Port in the Sd module configuration in the context of a given `EcuInstance`. Therefore, defining `ProvidedServiceInstance/ConsumedServiceInstance` and assign it to several `ApplicationEndpoints` would in this case require a merge of potentially different attribute values of the `ProvidedServiceInstances` and/or `ConsumedServiceInstances` in the System Description and such situation is avoided by this constraint.

<b>Class</b>	<code>PduActivationRoutingGroup</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Group of Pdus that can be activated or deactivated for transmission over a socket connection.			
<b>Base</b>	<code>ARObject</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
<b>Aggregated by</b>	<code>AbstractServiceInstance.methodActivationRoutingGroup</code> , <code>ConsumedEventGroup.pduActivationRoutingGroup</code> , <code>EventHandler.pduActivationRoutingGroup</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
eventGroupControlType	<code>EventGroupControlTypeEnum</code>	0..1	attr	This attribute defines the type of a RoutingGroup. There are RoutingGroups that activate the data path for unicast or multicast events of an event group. And there are RoutingGroups that activate the data path for initial events that are triggered, namely events that are sent out on the server side after a client got subscribed. Please note that this attribute is only valid for event communication (Sender Receiver communication) and shall be omitted in MethodActivationRoutingGroups.
iPdulIdentifierTcp	<code>SoConIPdulIdentifier</code>	*	ref	PdulIdentifiers assigned for transmission over Tcp in case that the referencing PduActivationRoutingGroup is activated.





Class	PduActivationRoutingGroup			
iPduIdentifier Udp	<a href="#">SoConIPduIdentifier</a>	*	ref	PduIdentifiers assigned for transmission over Udp in case that the referencing PduActivationRoutingGroup is activated.

**Table 6.160: PduActivationRoutingGroup**

Enumeration	EventGroupControlTypeEnum
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances
Note	Types of a RoutingGroups for the event communication.
Aggregated by	<a href="#">PduActivationRoutingGroup.eventGroupControlType</a> , <a href="#">SoAdRoutingGroup.eventGroupControlType</a>
Literal	Description
activationAnd TriggerUnicast	Activate the data path for unicast events and triggered unicast events that are sent out after a client got subscribed. <b>Tags:</b> atp.EnumerationLiteralIndex=0
activationMulticast	Activate the data path for multicast events of an EventGroup. <b>Tags:</b> atp.EnumerationLiteralIndex=1
activationUnicast	Activate the data path for unicast events of an EventGroup. <b>Tags:</b> atp.EnumerationLiteralIndex=2
triggerUnicast	Activate the data path for triggered unicast events that are sent out after a client got subscribed. <b>Tags:</b> atp.EnumerationLiteralIndex=3

**Table 6.161: EventGroupControlTypeEnum**

Class	SoConIPduIdentifier			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
Note	Identification of Pdu content on a socket connection. This Identifier is required in case that multiple Pdus are transmitted over the same socket connection.			
Base	<i>ARObject</i> , <i>Referrable</i>			
Aggregated by	<a href="#">SocketConnectionIpduIdentifierSet.iPduIdentifier</a>			
Attribute	Type	Mult.	Kind	Note
headerId	PositiveInteger	0..1	attr	If multiple Pdus are transmitted over the same connection this headerId can be used to distinguish between the different Pdus.  For the constraints on constructing the headerId for SOME/IP also see PRS_SOMEIP_00245.
pduCollection PduTimeout	TimeValue	0..1	attr	Defines the timeout in seconds the PDU collection shall be transmitted at the latest after this PDU has been put into the buffer.
pduCollection Semantics	<a href="#">PduCollectionSemanticsEnum</a>	0..1	attr	Specifies if the referenced PduTriggering shall be collected using a queued (i.e. all PDU instances) or last-is-best (i.e. only the last PDU instance) semantics. If this attribute is not present the behavior of "queued" is assumed.
pduCollection Trigger	<a href="#">PduCollectionTriggerEnum</a>	0..1	attr	Defines whether the referenced Pdu contributes to the triggering of the socket transmission if Pdu collection is enabled for this socket.
pduTriggering	<a href="#">PduTriggering</a>	0..1	ref	Reference to a Pdu that is transmitted over a socket connection.

**Table 6.162: SoConIPduIdentifier**



<b>Class</b>	<b>SocketConnectionIpduIdentifierSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Collection of PduIdentifiers used for transmission over a Socket Connection with the header option. <b>Tags:</b> atp.recommendedPackage=SocketConnectionIpduIdentifierSets			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
iPduIdentifier	<a href="#">SoConIPduIdentifier</a>	*	aggr	Collection of IPduIdentifiers that are transmitted over Socket Connections.

**Table 6.163: SocketConnectionIpduIdentifierSet**

<b>Enumeration</b>	<b>PduCollectionSemanticsEnum</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Defines the collection semantics for the PDU collection feature.			
<b>Aggregated by</b>	<a href="#">SocketConnectionIpduIdentifier.pduCollectionSemantics</a> , <a href="#">SoConIPduIdentifier.pduCollectionSemantics</a>			
<b>Literal</b>	<b>Description</b>			
lastIsBest	Only the latest PDU instances are transmitted. <b>Tags:</b> atp.EnumerationLiteralIndex=0			
queued	All instances of PDUs are transmitted. <b>Tags:</b> atp.EnumerationLiteralIndex=1			

**Table 6.164: PduCollectionSemanticsEnum**

**[TPS\_SYST\_02222] Usage of [headerId](#)** [If multiple [SoConIPduIdentifiers](#) are referenced by [PduActivationRoutingGroup](#) in the role [iPduIdentifierTcp](#) or in the role [iPduIdentifierUdp](#) then the [headerId](#) information shall be used to distinguish between the different [Pdus](#).] ([RS\\_SYST\\_00039](#))

Please note that a Method Call and a Method Return may use the same [headerId](#) for identification since the communication direction is different in this case.

**[constr\_3322] Consistent setting of [SoConIPduIdentifier.pduCollectionSemantics](#) in the context of one [SocketAddress](#)** [The value of the attribute [SoConIPduIdentifier.pduCollectionSemantics](#) shall be identical for all referenced [SoConIPduIdentifiers](#) within the context of a given [SocketAddress](#).]  
( )

**[TPS\_SYST\_02223] Activation/Deactivation of [PduActivationRoutingGroups](#)** [The routing of [Pdus](#) to and from a socket may be activated or deactivated with a [PduActivationRoutingGroup](#) depending on the availability of [AbstractServiceInstances](#), [EventHandlers](#) or [ConsumedEventGroups](#) that send or receive the data.] ([RS\\_SYST\\_00039](#))

The Routing Group Activation Table is controlled in AUTOSAR by the Service Discovery module.

**[TPS\_SYST\_02224] Methods provided by a [ProvidedServiceInstance](#)** [If the [ProvidedServiceInstance](#) is offered by the Service Discovery protocol then the

`PduActivationRoutingGroup` that is aggregated in the role `methodActivationRoutingGroup` is activated. All Methods that are provided by the `ProvidedServiceInstance` can be called by the interested clients and the server will respond to these calls. If the `ProvidedServiceInstance` offer is stopped then the `PduActivationRoutingGroup` is deactivated. [\(RS\\_SYST\\_00039\)](#)

Please note that according to [\[TPS\\_SYST\\_02151\]](#) the relationship between the call and return is achieved by means of meta data items attached to the `Pdus` by the Socket Adapter.

**[TPS\_SYST\_02081] PduTriggering that is used for ClientServer Communication** [A `PduTriggering` that points to an `ISignalIPdu` that aggregates an `ISignalToIPduMapping` that in turn references an `ISignal` that refers to a `ClientServerToSignalMapping.callSignal` or to `ClientServerToSignalMapping.returnSignal` is designated as `PduTriggering` that is used for ClientServer Communication.]()

**[TPS\_SYST\_02225] Service methods provided over UDP** [Method `Pdus` (Call and Return `ISignalIPdus`) of a `ProvidedServiceInstance` that are offered for access over UDP are described by `SoConIPduIdentifiers` referenced by the `IPduIdentifierUdp` reference from the `PduActivationRoutingGroup` that is aggregated in the role `methodActivationRoutingGroup` by the `ProvidedServiceInstance`.] [\(RS\\_SYST\\_00039\)](#)

**[TPS\_SYST\_02226] Service methods provided over TCP** [Method `Pdus` (Call and Return `ISignalIPdus`) of a `ProvidedServiceInstance` that are offered for access over TCP are described by `SoConIPduIdentifiers` referenced by the `IPduIdentifierTcp` reference from the `PduActivationRoutingGroup` that is aggregated in the role `methodActivationRoutingGroup` by the `ProvidedServiceInstance`.] [\(RS\\_SYST\\_00039\)](#)

**[TPS\_SYST\_02227] Publishing of a SOME/IP Event group** [A `ProvidedServiceInstance` publishes an event group for each `EventHandler` that is aggregated in the role `eventHandler`. The `eventGroupIdentifier` identifies the SOME/IP Event Group in the context of the `ProvidedServiceInstance`. With the publishing of an event group the server offers to push notifications about updates to all clients that are subscribed to the event group.] [\(RS\\_SYST\\_00039\)](#)

<b>Class</b>	<code>EventHandler</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	This element represents an event group as part of the Provided Service Instance.			
<b>Base</b>	<code>ARObject</code> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<code>ProvidedServiceInstance.eventHandler</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
consumedEventGroup	<a href="#">ConsumedEventGroup</a>	*	ref	All consumers of the event are referenced here. <b>Tags:</b> atp.Status=obsolete





Class	EventHandler			
eventGroup Identifier	PositiveInteger	0..1	attr	Unique Identifier that identifies the EventGroup in SOME/IP. This Identifier is sent as Eventgroup ID in SOME/IP Service Discovery messages.
eventMulticast Address	<a href="#">ApplicationEndpoint</a>	0..1	ref	<p>Multicast Address that is used for event communication in the IP-Multicast case. It is the destination address to which the server sends the multicast event messages if the multicastThreshold is exceeded.</p> <p>This address is transmitted in the SD-SubscribeEvent GroupAck Message to client (answer to SD-Subscribe EventGroup).</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=eventMulticastAddress.applicationEndpoint, eventMulticastAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>
multicast Threshold	PositiveInteger	0..1	attr	<p>Specifies the number of subscribed clients that trigger the server to change the transmission of events to multicast.</p> <p>If configured to 0 only unicast will be used. If configured to 1 the first client will be already served by multicast. If configured to 2 the first client will be server with unicast and as soon as the second client arrives both will be served by multicast.</p> <p>This does not influence the handling of initial events, which are served using unicast only.</p>
pduActivation RoutingGroup	<a href="#">PduActivationRouting Group</a>	*	aggr	The ServiceDiscovery module is able to activate and deactivate the PDU routing for events.
routingGroup	<a href="#">SoAdRoutingGroup</a>	*	ref	<p>The ServiceDiscovery module is able to activate and deactivate the PDU routing for events.</p> <p><b>Tags:</b>atp.Status=obsolete</p>
sdServerConfig	SdServerConfig	0..1	aggr	Server configuration parameter for Service-Discovery. <b>Tags:</b> atp.Status=obsolete
sdServerEg TimingConfig	<a href="#">SomeipSdServerEvent GroupTimingConfig</a>	0..1	ref	<p>Server Timing configuration settings that are EventGroup specific.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=sdServerEgTimingConfig.someipSdServer EventGroupTimingConfig, sdServerEgTiming Config.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>

**Table 6.165: EventHandler**

[TPS\_SYST\_02228] **Transmission of events over UDP/TCP Port** [The events of an event group that are described by an [EventHandler](#) are transmitted either:

- via IP Unicast on the UDP/TCP Port that is defined by the [ApplicationEndpoint](#) that is referenced by the [ProvidedServiceInstance](#) in the role [localUnicastAddress](#) if the [eventMulticastAddress](#) is not set or the [multicastThreshold](#) is not reached, or
- via IP Multicast on the local UDP Port that is defined by the [ApplicationEndpoint](#) that is referenced by the [ProvidedServiceInstance](#) in the role [localUnicastAddress](#) to the IP Multicast remote Address that is defined by the [ApplicationEndpoint](#) that is referenced by the [EventHandler](#) in the role [eventMulticastAddress](#) if the [multicastThreshold](#) is reached.

](RS\_SYST\_00039)

**[constr\_5331] No IP multicast in case of TCP** [The `ApplicationEndpoint` that is referenced in the role `eventMulticastAddress` from an `EventHandler` is only allowed to aggregate `UdpTp` in the role `tpConfiguration`.]()

**[TPS\_SYST\_02180] Usage of `EventHandler.multicastThreshold`** [The switching between IP-Unicast and IP-Multicast is guided by the server with the `EventHandler.multicastThreshold` attribute and by the number of subscribed clients to the `EventHandler`.

The Server will change the transmission of events to Multicast if the `multicastThreshold` of the corresponding `EventHandler` is reached by the number of subscribed clients. If the number of subscribed clients is smaller than the configured `multicastThreshold`, the transmission of events takes place via unicast communication.]()

**[constr\_5071] `EventHandler.eventMulticastAddress` reference target** [The `ApplicationEndpoint` that is referenced by an `EventHandler` in the role `eventMulticastAddress` shall reference a `NetworkEndpoint` that defines an IP Multicast Address.]()

**[constr\_5072] `EventHandler` without defined `eventMulticastAddress`** [If an `EventHandler` that is aggregated by a `ProvidedServiceInstance` does not have a defined `eventMulticastAddress` then the `multicastThreshold` shall be set to the value 0 (IP Unicast only).]()

**[TPS\_SYST\_02229] Event groups provided by a `ProvidedServiceInstance`** [If the `ProvidedServiceInstance` publishes an event group then the `PduActivationRoutingGroup` that is aggregated in the role `pduActivationRoutingGroup` by an `EventHandler` is activated. The interested clients can subscribe to the published event groups until the offer is stopped.](RS\_SYST\_00039)

**[TPS\_SYST\_02230] `PduActivationRoutingGroups` for event groups** [The `PduActivationRoutingGroup` that is aggregated by the `EventHandler` in the role `pduActivationRoutingGroup` enables the routing of a group of `Pdus` that are related with the `PduActivationRoutingGroup` via the referenced `SoConIPduIdentifiers`.

- The `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationUnicast` enables the routing over IP Unicast.
- The `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationMulticast` enables the routing over IP Multicast.
- The `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `triggerUnicast` enables the routing of initial events that are sent out by the server immediately after a client got

subscribed. This `PduActivationRoutingGroup` can be used for SOME/IP Field notifiers.

- The `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationAndTriggerUnicast` enables the routing over IP Unicast and makes sure that initial events are sent out by the server immediately after a client got subscribed. This `PduActivationRoutingGroup` can be used for SOME/IP Field notifiers.

]()

**[TPS\_SYST\_02231] PduActivationRoutingGroups for methods** [The `PduActivationRoutingGroup` enables the routing of a group of `Pdus` that are related with the `PduActivationRoutingGroup` via the referenced `SoConIPduIdentifiers`. The `eventGroupControlType` attribute is irrelevant for the `PduActivationRoutingGroup` that is aggregated by the `AbstractServiceInstance` in the role `methodActivationRoutingGroup`.]()

**[constr\_5073] PduActivationRoutingGroup with eventGroupControlType set to activationUnicast or triggerUnicast or activationAndTriggerUnicast that is aggregated by an EventHandler** [An `EventHandler` that aggregates a `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationUnicast` or `triggerUnicast` or `activationAndTriggerUnicast` shall be aggregated by a `ProvidedServiceInstance` that has a `localUnicastAddress` reference that points to an IP Unicast Address.]()

**[constr\_5074] PduActivationRoutingGroup with eventGroupControlType set to activationMulticast that is aggregated by an EventHandler** [An `EventHandler` that aggregates a `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationMulticast` shall have an `eventMulticastAddress` reference that points to a “remote” IP Multicast Address. The `ProvidedServiceInstance` that aggregates the `EventHandler` shall have a `localUnicastAddress` reference to a “local” UDP `ApplicationEndpoint`.]()

**[constr\_5075] Allowed references of SoConIPduIdentifiers by PduActivationRoutingGroup with eventGroupControlType set to activationMulticast and allowed SoConIPduIdentifier references** [A `PduActivationRoutingGroup` with `eventGroupControlType` set to `activationMulticast` is allowed to reference `SoConIPduIdentifiers` only in the `ipduIdentifierUdp` role.]()  
()

**[TPS\_SYST\_02232] Events provided over UDP** [Pdus of an `EventHandler` that are provided over UDP are described by `SoConIPduIdentifiers` referenced by the `ipduIdentifierUdp` reference from the `PduActivationRoutingGroup` that is aggregated in the role `pduActivationRoutingGroup` by the `EventHandler`.] (*RS\_SYST\_00039*)

**[TPS\_SYST\_02233] Events provided over TCP** [Pdus of an `EventHandler` that are provided over TCP are described by `SoConIPduIdentifiers` referenced by the `iPduIdentifierTcp` reference from the `PduActivationRoutingGroup` that is aggregated in the role `pduActivationRoutingGroup` by the `EventHandler`.] (*RS\_SYST\_00039*)

**[constr\_5076] PduActivationRoutingGroup with iPduIdentifierTcp reference that is aggregated by a ProvidedServiceInstance** [If the `PduActivationRoutingGroup` contains the `iPduIdentifierTcp` reference then the aggregating `ProvidedServiceInstance` shall contain a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a TCP address.] ()

**[constr\_5077] PduActivationRoutingGroup with iPduIdentifierUdp reference that is aggregated by a ProvidedServiceInstance** [If the `PduActivationRoutingGroup` contains the `iPduIdentifierUdp` reference then the aggregating `ProvidedServiceInstance` shall contain a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a UDP address.] ()

**[constr\_5078] PduTriggerings referenced by a PduActivationRoutingGroup shall be on the same VLAN as the referencing PduActivationRoutingGroup** [Each `PduTriggering` referenced by a `PduActivationRoutingGroup` via `SoConIPduIdentifier` shall be aggregated by the same VLAN (`EthernetPhysicalChannel`) to which the `AbstractServiceInstance` that aggregates the `PduActivationRoutingGroup` belongs via the `localUnicastAddress`.] ()


**[constr\_5079] Service communication is restricted to one VLAN** [All `SocketAddress` elements that are referenced by a `AbstractServiceInstance` with the `localUnicastAddress` and `remoteUnicastAddress` shall belong to the same VLAN (`EthernetPhysicalChannel`).] ()

**[constr\_5080] ApplicationEndpoints referenced by EventHandlers and by the aggregating ProvidedServiceInstance shall be in the same VLAN** [The `ApplicationEndpoint` that is referenced by an `EventHandler` in the role `eventMulticastAddress` shall belong to the same VLAN (`EthernetPhysicalChannel`) as the `ApplicationEndpoint` that is referenced by the `localUnicastAddress` reference from the `ProvidedServiceInstance` that aggregates the `EventHandler`.] ()

**[constr\_3456] Existence of ProvidedServiceInstance.loadBalancingPriority and ProvidedServiceInstance.loadBalancingWeight** [The attributes `ProvidedServiceInstance.loadBalancingPriority` and `ProvidedServiceInstance.loadBalancingWeight` shall either not exist or be defined both.] ()

**[TPS\_SYST\_01108] ProvidedServiceInstance priority** [The `priority` in the `ProvidedServiceInstance` shall be used as Ethernet Header information together with the `vlanIdentifier`. If defined the `priority` overwrites the `defaultPriority` that is defined in the `VlanMembership`, the `priority` that is defined at the `NetworkEndpoint` and the `priority` that is defined at the `ApplicationEndpoint`.] (*RS\_SYST\_00039*)



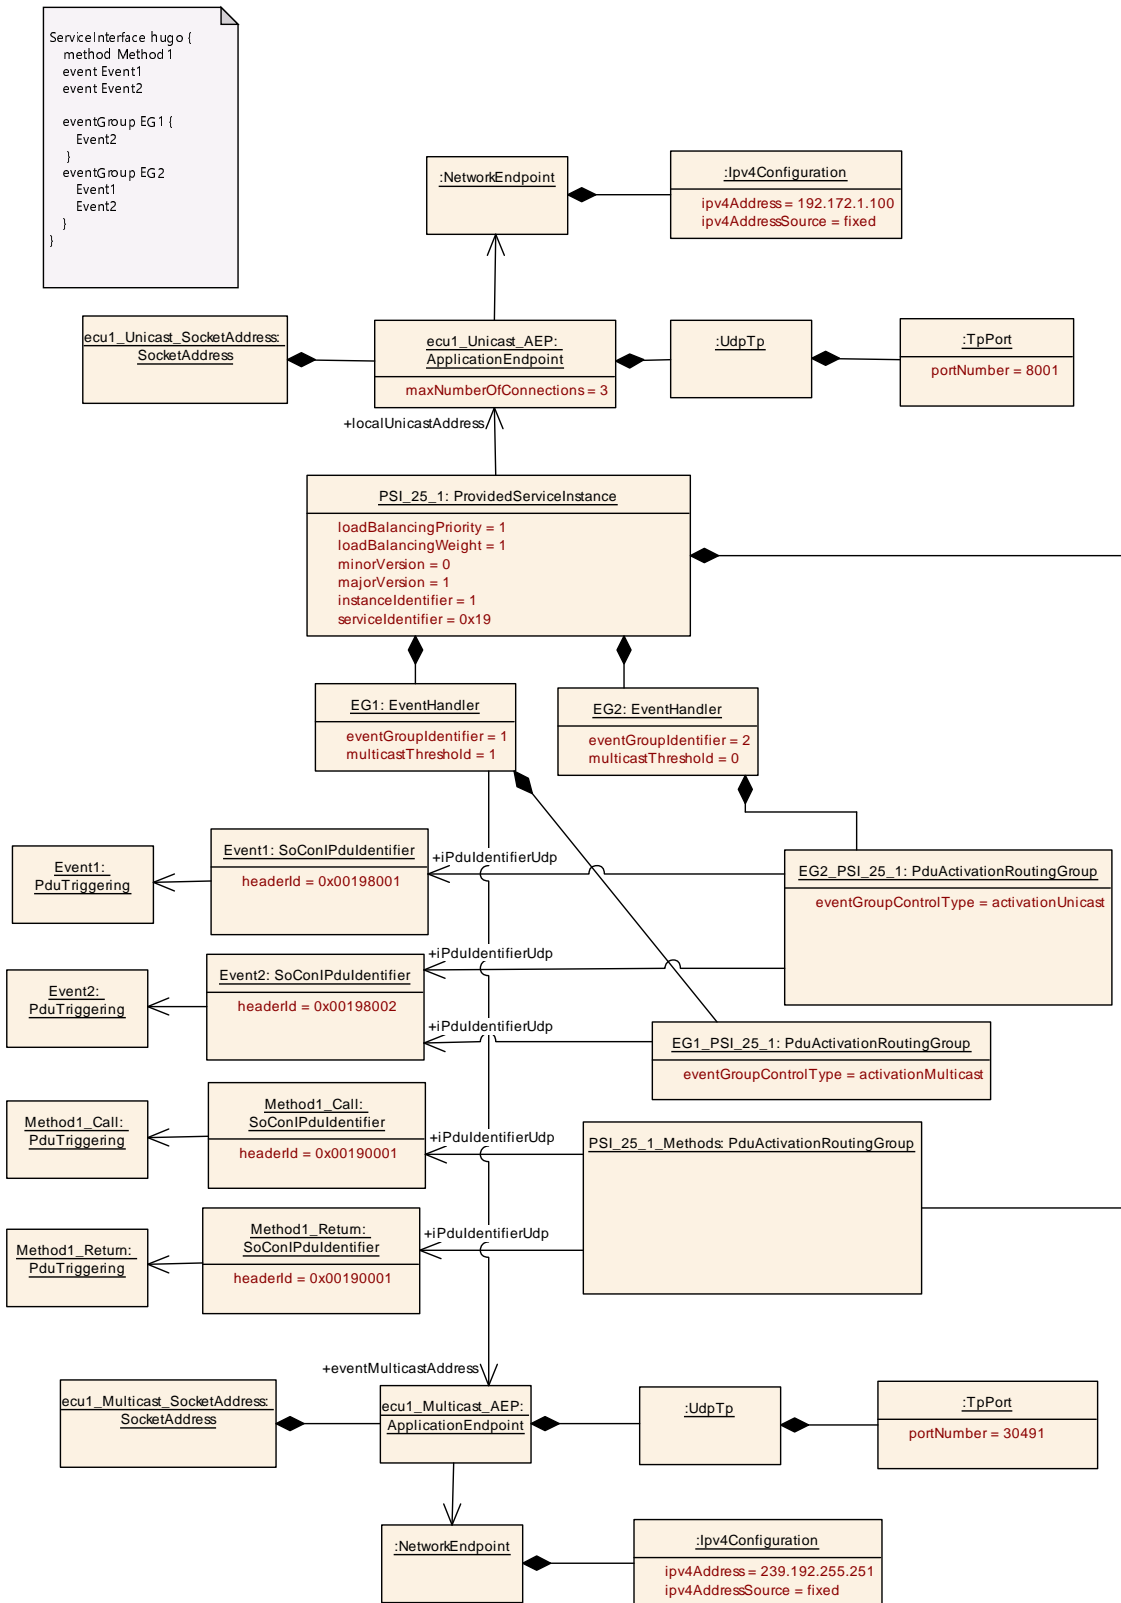

**Figure 6.43: Example for the modeling of a **ProvidedServiceInstance** that is deployed on a local Unicast Endpoint**

The example in [Figure 6.43](#) shows a [ProvidedServiceInstance](#) named `PSI_25_1` that is provided on Udp Port 8001 and IPv4 address 192.172.1.100. The Service that is represented by the [ProvidedServiceInstance](#) contains one method (named `Method1`) and two events (named `Event1` and `Event2`). In addition the service contains two different event groups that are represented by two [EventHandler](#)s `EG1` and `EG2`.

On VFB level the method is represented by a [ClientServerOperation](#) and each event by a [VariableDataPrototype](#) in a [SenderReceiverInterface](#).

The [ClientServerOperation](#) is mapped by a [ClientServerToSignalMapping](#) to a [callSignal](#) and to a [returnSignal](#) that in turn are mapped via [ISignals](#) into an [ISignalIPdu](#). Each [VariableDataPrototype](#) is mapped by the [SenderReceiverToSignalMapping](#) or by the [SenderReceiverToSignalGroupMapping](#) to one or several [SystemSignals](#) that in turn are mapped via [ISignals](#) into an [ISignalIPdu](#).

The [PduTriggerings](#) of these [ISignalIPdus](#) are referenced by the [SoConIPduIdentifier](#) that assigns a [headerId](#) to each [ISignalIPdu](#).

The event group `EG2` contains `Event1` and `Event2` and the [PduActivationRoutingGroup](#) named `EG2_PSI_25_1` activates the [SoConIPduIdentifiers](#) that are representing these two events for transmission over IP Unicast since the [eventGroupControlType](#) is set to `activationUnicast`.

The event group `EG1` contains `Event1` and the [PduActivationRoutingGroup](#) named `EG1_PSI_25_1` activates the [SoConIPduIdentifier](#) for transmission over IP Multicast since the [eventGroupControlType](#) is set to `activationMulticast`. [EventHandler](#) `EG1` has the [multicastThreshold](#) attribute set to 1. This means that the first client that will subscribe to this event group will be served via IP Multicast. This is the reason why the [EventHandler](#) `EG1` points with the [eventMulticastAddress](#) to an IP Multicast address to which the event will be transmitted.

In the SoAd configuration such a System Description will result in a [SoAdSocketConnectionGroup](#) with a [SoAdSocketLocalPort](#) and [SoAdSocketLocalAddressRef](#) that are derived from the [ApplicationEndpoint](#) referenced in the [localUnicastAddress](#) role by the [ProvidedServiceInstance](#).

The [SoAdSocketConnectionGroup](#) will contain three [SoAdSocketConnections](#) since the [maxNumberOfConnections](#) is set to 3 in this example. The [ProvidedServiceInstance](#) does not contain a [remoteUnicastAddress](#) reference. This means that Service Discovery is used and that the [SoAdSocketRemoteIpAddress](#) needs to be configured to ANY and the [SoAdSocketRemotePort](#) to 0 in all three [SoAdSocketConnections](#).

In addition one multicast [SoAdSocketConnection](#) will be added to the [SoAdSocketConnectionGroup](#) since the [EventHandler](#) `EG1` points with the [eventMulticastAddress](#) to a multicast address.



### 6.7.5.6 ConsumedServiceInstance

The `ConsumedServiceInstance` is used to define a SOME/IP Service consumer. Please note that in the AUTOSAR model all necessary information about the searched service is configurable on the client side. A model that contains only the `ConsumedServiceInstance` description is sufficient for the configuration of the `EcuInstance` to which the `ConsumedServiceInstance` is deployed. This is different to former versions of the System Template. The design criterion for the model was to disentangle the `ProvidedServiceInstance` and the `ConsumedServiceInstance` from each other.

**[TPS\_SYST\_02234] SOME/IP Service search** [A defined `ConsumedServiceInstance` is searching for a SOME/IP Service Instance that fulfills all of the following conditions:

- Service Identifier that matches the value set in `serviceIdentifier`,
- Service Instance Identifier that matches the value set in `instanceIdentifier`
- Service major version that matches the value set in `majorVersion`,
- Service minor version:
  - in case `versionDrivenFindBehavior = exactOrAnyMinorVersion`: Service minor version that matches the value set in `minorVersion` or ANY minor version of the Service Instance in case the `minorVersion` is set to ANY
  - in case `versionDrivenFindBehavior = minimumMinorVersion`: Service minor version that matches at least the value set in `minorVersion` or is higher

](*RS\_SYST\_00039*)

**[constr\_5110] Search for a collection of ServiceInstances is not supported** [The `ConsumedServiceInstance.instanceIdentifier` is not allowed to be set to the value ANY or ALL.]()

The reason for `[constr_5110]` is that the AUTOSAR SD module is only able to send wildcard finds for a Minor Version. The search for a collection of ServiceInstances is not supported by the Classic Platform Basic Software.

**[constr\_5081] ConsumedServiceInstance.serviceIdentifier is mandatory** [The `ConsumedServiceInstance.serviceIdentifier` is mandatory.]()

**[constr\_5082] ConsumedServiceInstance.majorVersion is mandatory** [The `ConsumedServiceInstance.majorVersion` is mandatory.]()

**[constr\_5083] ConsumedServiceInstance.minorVersion is mandatory** [The `ConsumedServiceInstance.minorVersion` is mandatory.]()

[constr\_3560]{DRAFT} **minimumMinorVersion and ConsumedServiceInstance.minorVersion value** [The ConsumedServiceInstance.minorVersion shall not have the value ANY if versionDrivenFindBehavior = minimumMinorVersion.]()

[constr\_5084] **ConsumedServiceInstance.instanceIdentifier is mandatory** [The ConsumedServiceInstance.instanceIdentifier is mandatory.]()

<b>Class</b>	<b>ConsumedServiceInstance</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Service instances that are consumed by the ECU that is connected via the ApplicationEndpoint to a CommunicationConnector.			
<b>Base</b>	ARObject, AbstractServiceInstance, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	ApplicationEndpoint.consumedServiceInstance, ServiceInstanceCollectionSet.serviceInstance			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
autoRequire	Boolean	0..1	attr	Defines that this ConsumedServiceInstance shall be required (searched for) by the service discovery at ECU start.
blocklistedVersion	SomeipServiceVersion	*	aggr	Collection of blocklisted versions <b>Tags:</b> atp.Status=draft
consumedEventGroup	ConsumedEventGroup	*	aggr	Selection of event-groups the consumer wants to subscribe for. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=consumedEventGroup.shortName, consumedEventGroup.variationPoint.shortLabel vh.latestBindingTime=postBuild
eventMulticastSubscriptionAddress	ApplicationEndpoint	0..1	ref	Multicast Address that is used by the client to subscribe to the server: This enables the multicast subscription feature. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=eventMulticastSubscriptionAddress.applicationEndpoint, eventMulticastSubscriptionAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
instanceIdentifier	AnyServiceInstanceId	0..1	attr	This attribute represents the ability to describe the required service instance ID.
localUnicastAddress	ApplicationEndpoint	0..2	ref	The local address over which the CSI is consumed (udp, tcp or both). <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=localUnicastAddress.applicationEndpoint, localUnicastAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
minorVersion	AnyVersionString	0..1	attr	Minor Version of the ServiceInterface. Value can be set to a number that represents the Minor Version of the searched service or to ANY.
providedServiceInstance	ProvidedServiceInstance	0..1	ref	Reference to a providedServiceInstance to get the instanceIdentifier information from the ProvidedServiceInstance. <b>Tags:</b> atp.Status=obsolete





Class	ConsumedServiceInstance			
remoteUnicastAddress	<a href="#">ApplicationEndpoint</a>	0..2	ref	This reference defines the remote address where the service provider is located. This reference shall ONLY be used if the remote address is determined from the configuration and not at runtime from the Service Discovery.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=remoteUnicastAddress.applicationEndpoint, remoteUnicastAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
sdClientConfig	SdClientConfig	0..1	aggr	Service Discovery Client configuration.  <b>Tags:</b> atp.Status=obsolete
sdClientTimerConfig	<a href="#">SomeipSdClientServiceInstanceConfig</a>	0..1	ref	Client specific configuration settings relevant for the SOME/IP service discovery.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=sdClientTimerConfig.someipSdClientServiceInstanceConfig, sdClientTimerConfig.variationPoint.shortLabel vh.latestBindingTime=postBuild
serviceIdentifier	PositiveInteger	0..1	attr	This attribute represents the ability to describe the SOME/IP service ID that is searched.
versionDrivenFindBehavior	<a href="#">ServiceVersionAcceptanceKindEnum</a>	0..1	attr	Defines the service discovery find behavior.  <b>Tags:</b> atp.Status=draft

**Table 6.166: ConsumedServiceInstance**

**[TPS\_SYST\_03050]{DRAFT} Usage of [ConsumedServiceInstance.blocklistedVersion](#)** [A service connection of a [ConsumedServiceInstance](#) to a [ProvidedServiceInstance](#) is not considered for service discovery if the [SomeipServiceVersion.minorVersion](#) exists in the collection of [SomeipServiceVersions](#) aggregated at the [ConsumedServiceInstance](#) in the role [blocklistedVersion](#).]  
( )

A typical scenario for using a blocklist may be: For a certain [ConsumedServiceInstance](#) a certain compatible provider service version inside a system may not work which may have been identified after the design phase. In order to keep the system running this certain provider version won't be considered in the service search if it has been blocklisted. Therefore, the [ConsumedServiceInstance](#) may connect only to [ProvidedServiceInstances](#) that fulfill the search criteria and are not blocklisted.

**[constr\_3559]{DRAFT} [ConsumedServiceInstance.blocklistedVersion](#) is restricted to the usage of [minorVersion](#)** [The [majorVersion](#) attribute shall not be used in the [SomeipServiceVersion](#) that is aggregated by the [ConsumedServiceInstance](#) in the role [blocklistedVersion](#).]  
( )

**[TPS\_SYST\_02235] [ConsumedServiceInstance](#) deployment** [The deployment of a [ConsumedServiceInstance](#) to an [EcuInstance](#) is realized in two ways:

- if the [localUnicastAddress](#) reference is available then the referenced [ApplicationEndpoint](#) defines the TCP/UDP Port and the [NetworkEndpoint](#) that is referenced by the [ApplicationEndpoint](#) defines the IP Address on

which the service consumer is located. Over the defined TCP/UDP port the service consumer sends out the method calls to a service provider that was found by the Service Discovery search. The endpoint information is also transported in the SOME/IP `SubscribeEventGroup` message to the server to indicate on which address the incoming events are expected. With the `SocketAddress.connector` reference the deployment to an `EcuInstance` is achieved.

- if the `localUnicastAddress` reference is not available (in case Events are received via IP Multicast only as described by [TPS\_SYST\_02302] and the aggregating `ConsumedServiceInstance` does not define any methods) then the `ApplicationEndpoint` that is referenced by the `eventMulticastAddress` reference from the `ConsumedEventGroup` shall be `EcuInstance` specific and the `SocketAddress` that contains the referenced `ApplicationEndpoint` is allowed to reference only a single `EthernetCommunicationConnector` in the `multicastConnector` role. With this `SocketAddress.multicastConnector` reference the deployment to an `EcuInstance` is achieved.

](RS\_SYST\_00039)

Please note that the Service provider and the Service consumer do not need to find each other if the `ConsumedServiceInstance` contains a `remoteUnicastAddress` reference to an `ApplicationEndpoint`. If this reference is set, the client will not get the server's address from the Service Offer message.

The client already knows the address of the service provider from the configuration and all necessary socket connections can be set up from this configuration information. The client still needs to subscribe to event groups that are of interest for it in this setup.

**[TPS\_SYST\_02236] Static configuration between `ConsumedServiceInstance` and `ProvidedServiceInstance`** [If the `ConsumedServiceInstance` contains a `remoteUnicastAddress` reference to an `ApplicationEndpoint` the SoAd will setup one single `SocketConnection` between the `localUnicastAddress` and the `remoteUnicastAddress`.](RS\_SYST\_00039)

**[TPS\_SYST\_02237] Maximal number of servers that may connect to the local client address** [If the `ConsumedServiceInstance` references an `ApplicationEndpoint` in the role `localUnicastAddress` and the `remoteUnicastAddress` is not defined then the attribute `ApplicationEndpoint.maxNumberOfConnections` defines the maximal number of remote endpoints that will be able to connect to this local client address. The SoAd will setup a `SocketConnection` for each potential remote endpoint. The local Address of the `SocketConnection` is derived from `ConsumedServiceInstance.localUnicastAddress`. The remote Address is set to ANY address in case that the `remoteUnicastAddress` is not used.](RS\_SYST\_00039)

**[constr\_5085] `ConsumedServiceInstance.localUnicastAddress` shall be IP Unicast** [If defined, the `ConsumedServiceInstance.localUnicastAddress` shall point to an IP Unicast address.]( )

In other words the `localUnicastAddress` is not allowed to point to a IP Multicast address. Please note that the `ConsumedServiceInstance.localUnicastAddress` does not need to be set in all cases as specified in [TPS\_SYST\_02238].

**[constr\_5086] ConsumedServiceInstance.remoteUnicastAddress shall be IP Unicast** [The `ConsumedServiceInstance.remoteUnicastAddress` shall point to an IP Unicast address.]()

Please note that a Service may provide some portions (Events, Methods) over TCP and and other portions over UDP. This is the reason why the `ConsumedServiceInstance` is able to reference up to two `localUnicastAddresses`.

**[TPS\_SYST\_02238] ConsumedServiceInstance.localUnicastAddress reference target** [The `ConsumedServiceInstance` is allowed to have:

- a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a UDP Port,
- a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a TCP Port,
- a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a UDP Port and a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a TCP Port.
- no configured `localUnicastAddress`.

](RS\_SYST\_00039)

The Routing Group Activation is controlled in AUTOSAR by the Service Discovery module.

**[TPS\_SYST\_02239] Methods consumed by a ConsumedServiceInstance** [If the `ConsumedServiceInstance` finds the searched service then the `PduActivationRoutingGroup` that is aggregated in the role `methodActivationRoutingGroup` is activated. All Methods that are provided by the found `ProvidedServiceInstance` can be called by `ConsumedServiceInstance`.](RS\_SYST\_00039)

Please note that according to [TPS\_SYST\_02151] the relationship between the call and return is achieved by means of meta data items attached to the `Pdus` by the Socket Adapter.

**[TPS\_SYST\_02240] Service methods consumed over UDP** [Method `Pdus` (Call and Return `ISignalIPdus`) of a `ConsumedServiceInstance` that are accessed over UDP are described by `SoConIPduIdentifiers` referenced by the `iPduIdentifierUdp` reference from the `PduActivationRoutingGroup` that is aggregated in the role `methodActivationRoutingGroup` by the `ConsumedServiceInstance`.](RS\_SYST\_00039)

**[TPS\_SYST\_02241] Service methods consumed over TCP** [Method `Pdus` (Call and Return `ISignalIPdus`) of a `ConsumedServiceInstance` that are accessed over

TCP are described by `SoConIPduIdentifiers` referenced by the `iPduIdentifierTcp` reference from the `PduActivationRoutingGroup` that is aggregated in the role `methodActivationRoutingGroup` by the `ConsumedServiceInstance`.] ([RS\\_SYST\\_00039](#))

[**TPS\_SYST\_02242** Subscription to a SOME/IP Event group [A `ConsumedServiceInstance` subscribes to a published event group via a `ConsumedEventGroup` that is aggregated in the role `consumedEventGroup`. The `eventGroupIdentifier` identifies the SOME/IP Event Group in the context of the `ConsumedServiceInstance` to which the consumer subscribes.] ([RS\\_SYST\\_00039](#))

<b>Class</b>	<b>ConsumedEventGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	This element represents an event-group to which the service consumer wants to subscribe.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<code>ConsumedServiceInstance.consumedEventGroup</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
application Endpoint	<a href="#">ApplicationEndpoint</a>	0..1	ref	Defines the application endpoint where the events of the event group are received in case of multicast reception. <b>Tags:</b> atp.Status=obsolete
autoRequire	Boolean	0..1	attr	Defines that this <code>ConsumedEventGroup</code> shall be requested (subscribed) as soon as the corresponding <code>ConsumedServiceInstance</code> is requested. This could be at ECU start, if <code>ConsumedServiceInstance.autoRequire</code> is set to TRUE or as soon as the <code>ConsumedServiceInstance</code> is requested by the application, if <code>ConsumedServiceInstance.autoRequire</code> is set to FALSE.
eventGroup Identifier	PositiveInteger	0..1	attr	EventGroup ID. Shall be unique within one system to allow service discovery.
eventMulticast Address	<a href="#">ApplicationEndpoint</a>	*	ref	This reference defines the multicast address or a multicast address resource where the events of the event group are received.  If the multicast address is determined via configuration and not at runtime via service discovery this reference points to the multicast address over which the events will be received.  If the multicast address is determined at runtime via service discovery this reference shall be used to define the necessary local multicast address resources, i.e. RAM space in the <code>Tcplp</code> module in which the multicast address is stored at runtime. Please note that in this case the referenced address may be defined as ANY UDP port and ANY IP address since the multicast address will be received at runtime. If several multicast addresses are considered to be used the <code>ConsumedEventGroup</code> shall point to different <code>ApplicationEndpoint</code> objects to reserve the necessary resources in the configuration.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=eventMulticastAddress.applicationEndpoint, eventMulticastAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
pduActivation RoutingGroup	<a href="#">PduActivationRoutingGroup</a>	*	aggr	The <code>ServiceDiscovery</code> module is able to activate and deactivate the PDU routing for receiving events.
priority	PositiveInteger	0..1	attr	Defines the frame priority where values from 0 (best effort) to 7 (highest) are allowed.







Class	ConsumedEventGroup			
routingGroup	<a href="#">SoAdRoutingGroup</a>	*	ref	The ServiceDiscovery module is able to activate and deactivate the PDU routing for receiving events. <b>Tags:</b> atp.Status=obsolete
sdClientConfig	SdClientConfig	0..1	aggr	The readiness to receive events is defined by the Service Discovery of the ConsumedEventGroup. The Event Handler shall know about this announcement to decide about the submission of events. Therefore the Event Handler may be configured with Service-Discovery Client attributes. <b>Tags:</b> atp.Status=obsolete
sdClientTimer Config	<a href="#">SomeipSdClientEventGroupTimingConfig</a>	0..1	ref	Client Timing configuration settings that are EventGroup specific. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=sdClientTimerConfig.someipSdClientEventGroupTimingConfig, sdClientTimerConfig.variation Point.shortLabel vh.latestBindingTime=postBuild

**Table 6.167: ConsumedEventGroup**

**[TPS\_SYST\_02243] Reception of events over UDP/TCP Port in case of Service Discovery** [The events of an event group that are described by an [ConsumedEventGroup](#) are received either:

- via IP Unicast on the UDP/TCP Port that is defined by the [ApplicationEndpoint](#) that is referenced by the [ConsumedServiceInstance](#) in the role [localUnicastAddress](#) or
- via IP Multicast:
  - in case of dynamic SD configuration the Multicast IP Address and UDP Port to which the events are transmitted will be provided by the server at runtime in the SOME/IP SubscribeEventGroupAck message,
  - in case of static configuration the Multicast IP Address and UDP Port to which the events are transmitted shall be configured by [ConsumedEventGroup.eventMulticastAddress](#).

]([RS\\_SYST\\_00039](#))

Please note that the [ConsumedEventGroup.eventMulticastAddress](#) shall also be used in case of a dynamic SD Configuration where the client learns the multicast address at runtime. In this case the [ApplicationEndpoint](#) and the corresponding [NetworkEndpoint](#) that are referenced by [eventMulticastAddress](#) define a resource in the Tcplp module where the multicast address that will be determined at runtime will be stored. Since the referenced [ApplicationEndpoint](#) and the corresponding [NetworkEndpoint](#) are placeholders the configured TP Port and IP address shall be set to ANY.

There are different scenarios that are considered:

- The same multicast address is used by all potential servers. On the client a resource for this single multicast address needs to be reserved. All `ConsumedEventGroups` need to reference the same placeholder `ApplicationEndpoint` with `eventMulticastAddress`. In the Ecu Configuration one `TcpIpLocalAddr` container is created from the placeholder `ApplicationEndpoint`. In addition one `SoAdSocketConnectionGroup` is created that points with the `SoAdSocketLocalAddressRef` to the `TcpIpLocalAddr` container. All Pdus received over multicast are assigned to this `SoAdSocketConnectionGroup`.
- The server is using different multicast addresses, e.g. Multicast Address A for `EventHandler` A and Multicast Address B for `EventHandler` B. On the client side resources for all used multicast addresses need to be reserved. In the example the `ConsumedEventGroup` A needs to reference one placeholder `ApplicationEndpoint` with `eventMulticastAddress`. The `ConsumedEventGroup` B needs to reference a second placeholder `ApplicationEndpoint` with `eventMulticastAddress`. In the Ecu Configuration a `TcpIpLocalAddr` container is created for each used placeholder. In addition one `SoAdSocketConnectionGroup` per placeholder is created. In the example the Pdus of `ConsumedEventGroup` A are assigned to one `SoAdSocketConnectionGroup` and Pdus of `ConsumedEventGroup` B are assigned to the second `SoAdSocketConnectionGroup`. With this approach it is possible to define at configuration time which Pdus share the same multicast address, and which ones are going over different multicast addresses.

If more than one multicast address is used it is not known at configuration time which server will publish which address at which point in time. The configuration needs to be prepared for all possible scenarios. Please be aware that this comes with a high resource consumption.

**[constr\_3262] `ConsumedEventGroup.eventGroupIdentifier` is mandatory**  
[The `ConsumedEventGroup.eventGroupIdentifier` is mandatory.]()

**[constr\_3457] Uniqueness of `ConsumedEventGroup.eventGroupIdentifier` in the scope of a `ConsumedServiceInstance`** [Each `ConsumedEventGroup` that is aggregated by a `ConsumedServiceInstance` shall have a unique `eventGroupIdentifier` value in the scope of the aggregating `ConsumedServiceInstance`.]  
()

**[TPS\_SYST\_02245] Event groups consumed by a `ConsumedServiceInstance`**  
[If the `ConsumedServiceInstance` subscribes to an event group then the `PduActivationRoutingGroup` that is aggregated in the role `pduActivationRoutingGroup` by an `ConsumedEventGroup` is activated.](*RS\_SYST\_00039*)

**[TPS\_SYST\_02246] `PduActivationRoutingGroups` for `ConsumedEventGroups`**  
[The `PduActivationRoutingGroup` that is aggregated by the `ConsumedEventGroup` in the role `pduActivationRoutingGroup` enables the routing of a group of Pdus that are related to the `PduActivationRoutingGroup` via the referenced `SoConIPduIdentifiers`.



- The `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationUnicast` enables the receiving of events over IP Unicast.
- The `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationMulticast` enables the receiving of events over IP Multicast.
- The `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `triggerUnicast` enables the receiving of initial events that are sent out by the server immediately after the client got subscribed. This `PduActivationRoutingGroup` can be used for SOME/IP Field notifiers.
- The `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationAndTriggerUnicast` enables the routing over IP Unicast and makes sure that initial events are sent out by the server immediately after the client got subscribed. This `PduActivationRoutingGroup` can be used for SOME/IP Field notifiers.

]()

**[constr\_5087] `PduActivationRoutingGroup` with `eventGroupControlType` set to `activationUnicast` or `triggerUnicast` or `activationAndTriggerUnicast` that is referenced by a `ConsumedEventGroup`** [A `ConsumedEventGroup` that aggregates a `PduActivationRoutingGroup` with the `PduActivationRoutingGroup.eventGroupControlType` set to `activationUnicast` or `triggerUnicast` or `activationAndTriggerUnicast` shall be aggregated by a `ConsumedServiceInstance` that has a `localUnicastAddress` reference that points to an IP Unicast Address.]()

**[TPS\_SYST\_02247] Events consumed over UDP** [Pdus of an `ConsumedEventGroup` that are consumed over UDP are described by `SoConIPduIdentifiers` referenced by the `iPduIdentifierUdp` reference from the `PduActivationRoutingGroup` that is aggregated in the role `pduActivationRoutingGroup` by the `ConsumedEventGroup`.] (*RS\_SYST\_00039*)


**[TPS\_SYST\_02248] Events consumed over TCP** [Pdus of an `ConsumedEventGroup` that are consumed over TCP are described by `SoConIPduIdentifiers` referenced by the `iPduIdentifierTcp` reference from the `PduActivationRoutingGroup` that is aggregated in the role `pduActivationRoutingGroup` by the `ConsumedEventGroup`.] (*RS\_SYST\_00039*)

**[constr\_5088] `PduActivationRoutingGroup` with `iPduIdentifierTcp` reference that is aggregated by a `ConsumedServiceInstance`** [If the `PduActivationRoutingGroup` contains the `iPduIdentifierTcp` reference then the aggregating `ConsumedServiceInstance` shall contain a `localUnicastAddress` reference to an `ApplicationEndpoint` that defines a TCP address.]()

**[constr\_5089] PduActivationRoutingGroup with iPduIdentifierUdp reference that is aggregated by a ConsumedServiceInstance** [If the PduActivationRoutingGroup contains the iPduIdentifierUdp reference then the aggregating ConsumedServiceInstance shall contain a localUnicastAddress reference to an ApplicationEndpoint that defines a UDP address.]()

**[TPS\_SYST\_02014] ConsumedEventGroup priority** [The priority in the ConsumedEventGroup shall be used as Ethernet Header information together with the vlanIdentifier. If defined the priority overwrites the defaultPriority that is defined in the VlanMembership, the priority that is defined at the NetworkEndpoint and the priority that is defined at the ApplicationEndpoint.]()

**[constr\_5090] ApplicationEndpoints referenced by ConsumedEventGroups and by the aggregating ConsumedServiceInstance shall be in the same VLAN** [The ApplicationEndpoint that is referenced by an ConsumedEventGroup in the role eventMulticastAddress shall belong to the same VLAN (EthernetPhysicalChannel) as the ApplicationEndpoint that is referenced by the localUnicastAddress reference from the ConsumedServiceInstance that aggregates the ConsumedEventGroup.]()

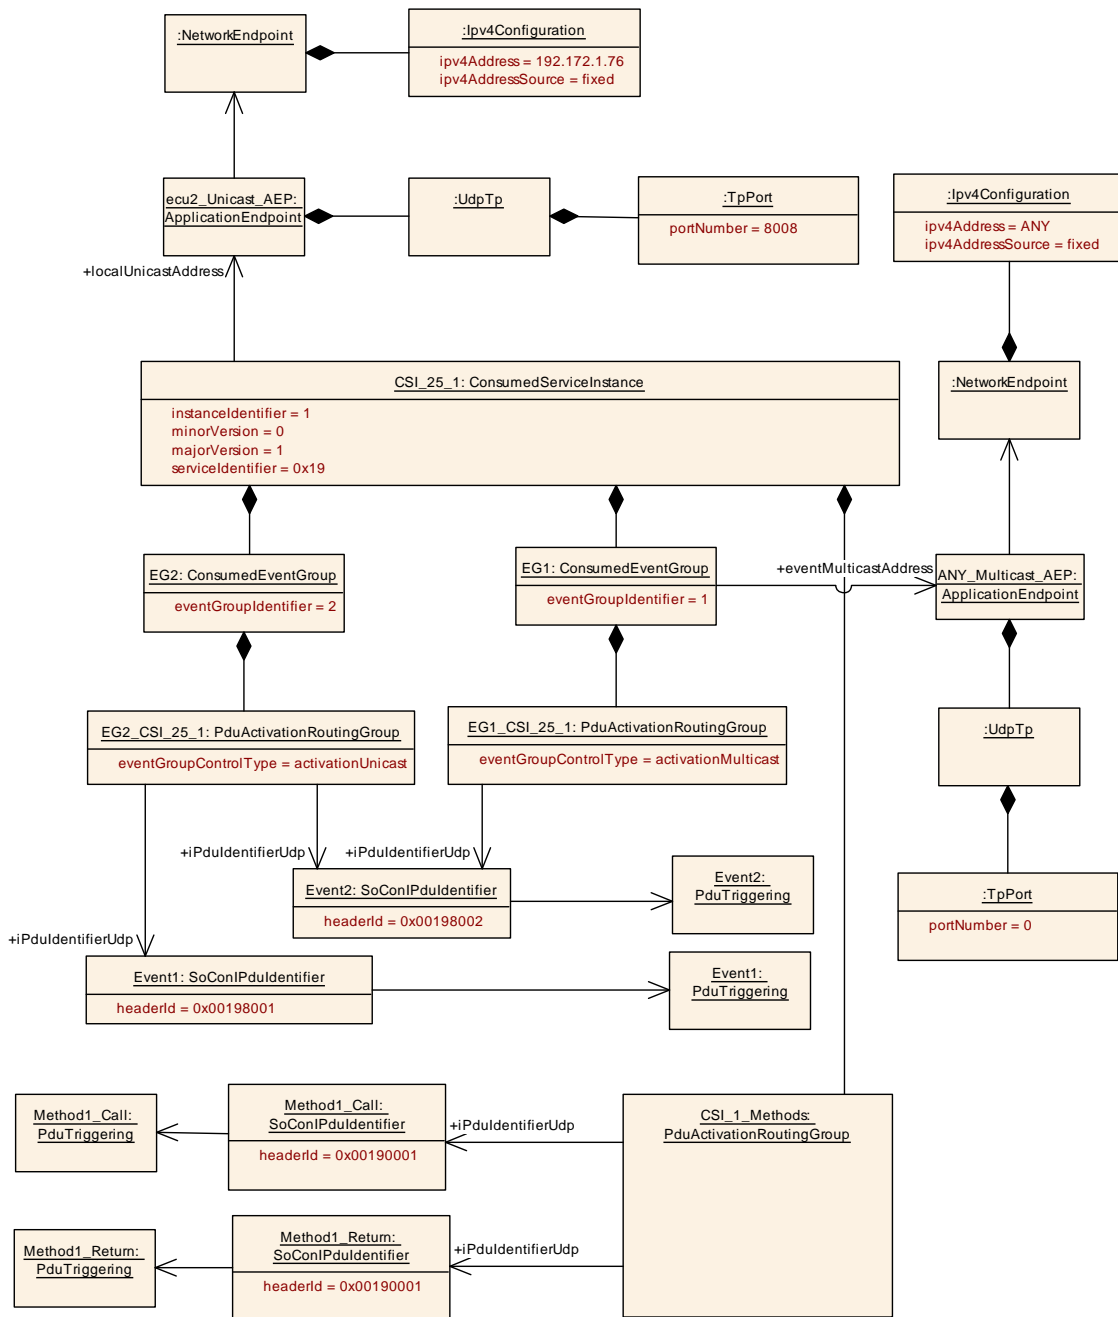

**Figure 6.44: Example for the modeling of a ConsumedServiceInstance that is deployed on a local Unicast Endpoint**

The example in Figure 6.44 shows a ConsumedServiceInstance named CSI\_25\_1 that is deployed on Udp Port 8008 and IPv4 address 192.172.1.76. The Service that is represented by the ConsumedServiceInstance contains one method (named Method1) and two events (named Event1 and Event2). In addition the service contains two different event groups that are represented by two ConsumedEventGroups EG1 and EG2.

The `PduTriggerings` for the `ISignalIPdus` that transport the events, the method call and the method response are referenced by the `SoConIPduIdentifier` that assigns a `headerId` to each `ISignalIPdu`.

The event group `EG2` contains `Event1` and `Event2` and the `PduActivationRoutingGroup` named `EG2_CSI_25_1` activates the `SoConIPduIdentifiers` that are representing these two events for transmission over IP Unicast since the `eventGroupControlType` is set to `activationUnicast`.

The event group `EG1` contains `Event1` and the `PduActivationRoutingGroup` named `EG1_CSI_25_1` activates the `SoConIPduIdentifier` for transmission over IP Multicast since the `eventGroupControlType` is set to `activationMulticast`.

In the `SoAd` configuration such a System Description will result in a `SoAdSocketConnectionGroup` with a `SoAdSocketLocalPort` and `SoAdSocketLocalAddressRef` that are derived from the `ApplicationEndpoint` referenced in the `localUnicastAddress` role by the `ConsumedServiceInstance`.

The `SoAdSocketConnectionGroup` will contain one single `SoAdSocketConnection` since the `maxNumberOfConnections` is not set in this example. The `ProvidedServiceInstance` does not contain a `remoteUnicastAddress` reference. This means that Service Discovery is used and that the `SoAdSocketRemoteIpAddress` needs to be configured to `ANY` and the `SoAdSocketRemotePort` to `0` in the `SoAdSocketConnection`.

Since only a single multicast placeholder `ApplicationEndpoint` is referenced with the `eventMulticastAddress` by all existing `ConsumedEventGroups` one multicast `SoAdSocketConnectionGroup` needs to be created with two `SoAdSocketConnections`.

#### 6.7.5.6.1 ConsumedServiceInstance with multicast only reception

A `ProvidedServiceInstance` may be configured to directly use multicast for the transport of the Events of an `EventGroup` (`EventHandler.multicastThreshold = 1`). In this case it is not required for a Client to have a unicast socket prepared if the server will always use the multicast transport.

In order to take benefit of a “multicast only event transport” on Client side, the Client needs the system knowledge that a specific `EventGroup` will be transported by the Server using multicast only. Such an approach weakens the service discovery paradigm / disentangle approach, where Client and Server do not need to know the transport details. However, if there is the knowledge available, the Clients can be configured for “multicast only event transport”.

Note that a Server that is not configured to provide “only multicast event transport” for an `EventGroup` will reject a subscription with no unicast option configured, during runtime.


While the configuration of “multicast only event transport” on the `ProvidedServiceInstance` / `EventHandler` is obvious, the setup on the `ConsumedServiceInstance` has several implications.

The indication that a `ConsumedEventGroup` shall be received using multicast only transport is given by having only `ConsumedEventGroup.pduActivationRoutingGroup` aggregated where `PduActivationRoutingGroup.eventGroupControlType` is only set to `activationMulticast`.

**[TPS\_SYST\_02302] Definition of multicast only reception of an `EventGroup`** [If a `ConsumedEventGroup` has aggregated one or several `PduActivationRoutingGroups` in the role `pduActivationRoutingGroup` and all of these `PduActivationRoutingGroups` have `PduActivationRoutingGroup.eventGroupControlType` set to `activationMulticast` then this `ConsumedEventGroup` is defined to only receive Events via multicast.] (*RS\_SYST\_00039*)

**[TPS\_SYST\_02244] `ConsumedServiceInstance` without a defined `localUnicastAddress`** [If a `ConsumedServiceInstance` does not have a defined `localUnicastAddress` then the events will be received over IP Multicast only.] (*RS\_SYST\_00039*)

If the `ConsumedServiceInstance` receives events over IP Multicast only and does not define any methods (i.e. the `ConsumedServiceInstance` does not aggregate any `PduActivationRoutingGroups` in the role `methodActivationRoutingGroup`) that request the unicast configuration then the `ConsumedServiceInstance.localUnicastAddress` reference can be skipped as described by [TPS\_SYST\_02244]. In this case the SOME/IP message `SubscribeEventGroup` will not contain any endpoint options. But since the `ConsumedServiceInstance` is created for a specific `EcuInstance` and the `localUnicastAddress` is missing the connection of the `ConsumedServiceInstance` to a specific `EcuInstance` needs to be established in a different way. In this case the `ApplicationEndpoint` that is referenced by the `eventMulticastAddress` reference from the `ConsumedEventGroup` shall be `EcuInstance` specific. In other words the `SocketAddress` that contains the referenced `ApplicationEndpoint` shall reference only a single `EthernetCommunicationConnector` in the `multicastConnector` role.

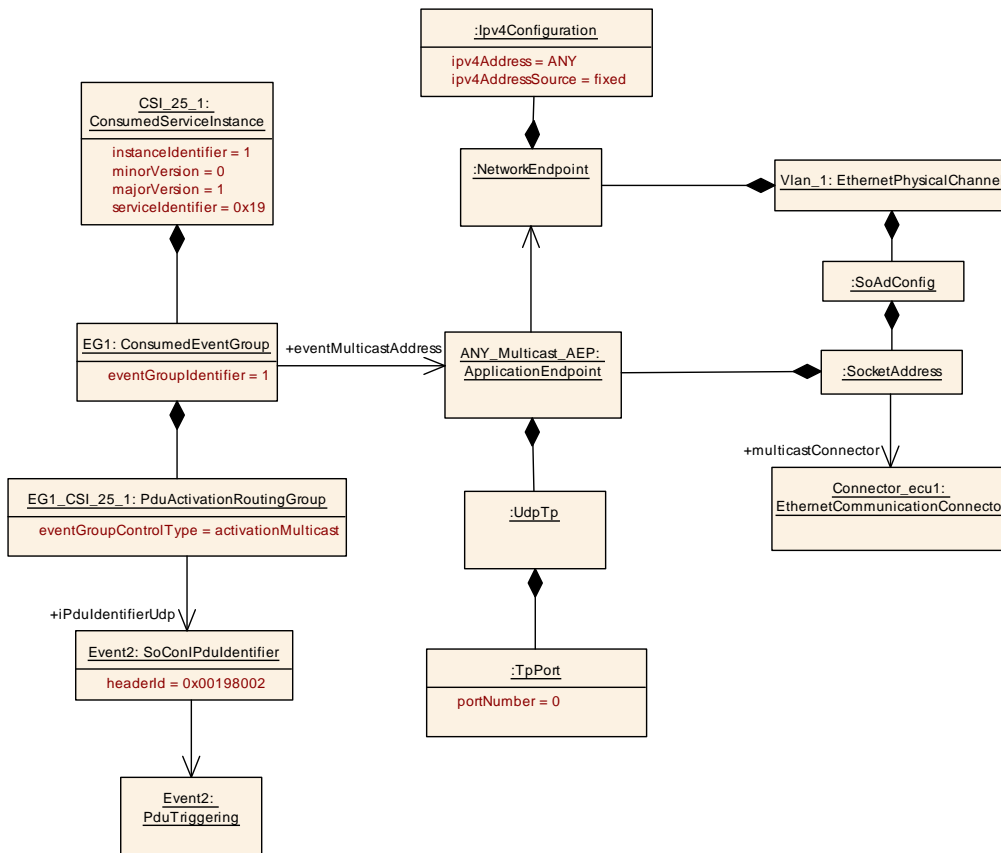

**Figure 6.45: Example for the modeling of a `ConsumedServiceInstance` that is receiving Events over multicast only**

### 6.7.5.7 Service Discovery Server Configuration

For every `ProvidedServiceInstance` on a Server different phases are existing where a suitable Service Discovery Message sending behavior is configurable:

- Down
- Available
  - Initial Wait Phase
  - Repetition Phase
  - Main Phase

**[TPS\_SYST\_02249] Service Discovery Message sending behavior on `ProvidedServiceInstance`** [The Service Discovery Message sending behavior on a `ProvidedServiceInstance` is configurable with the `SomeipSdServerServiceInstanceConfig` that is referenced in the role `sdServerTimerConfig`.]()

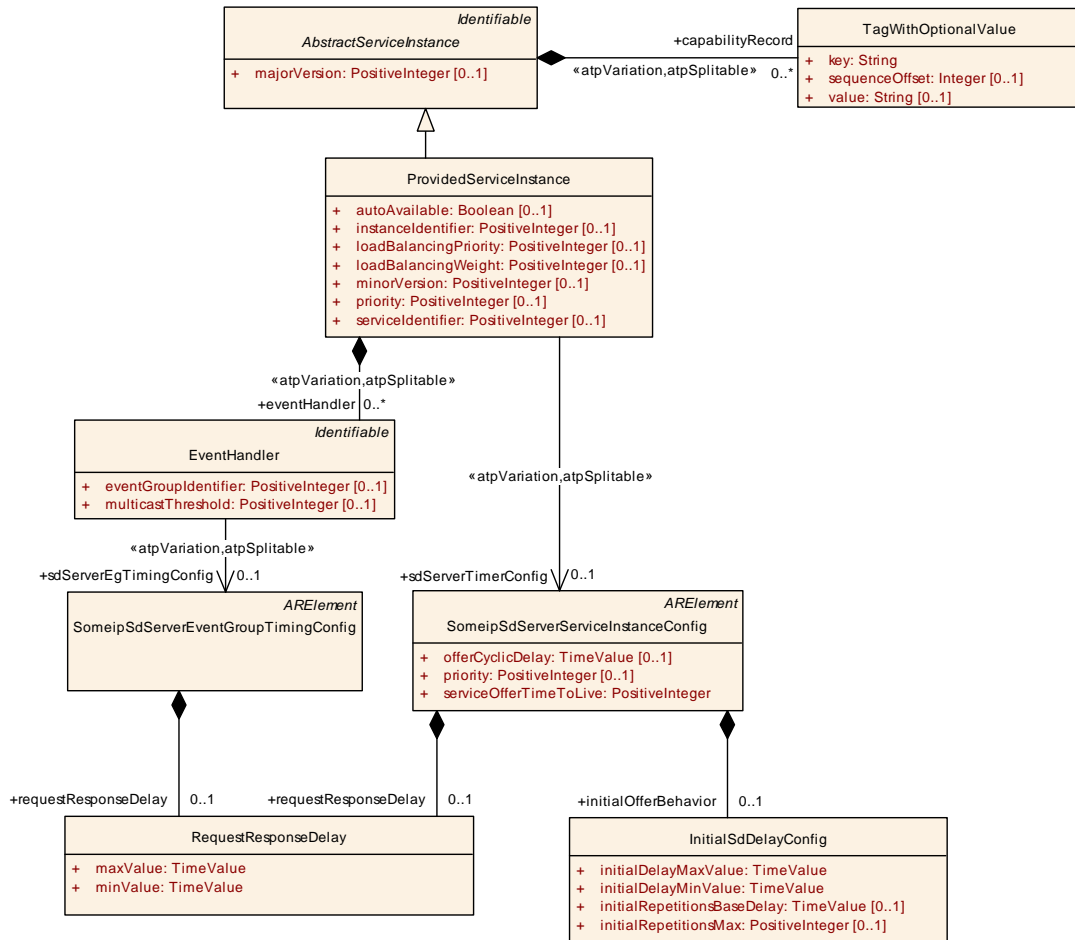


Figure 6.46: Model of SD Server Timing

<b>Class</b>	<b>SomeipSdServerServiceInstanceConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Server specific settings that are relevant for the configuration of SOME/IP Service-Discovery. <b>Tags:</b> atp.recommendedPackage=SomeipSdTimingConfigs			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
initialOfferBehavior	<a href="#">InitialSdDelayConfig</a>	0..1	aggr	Controls offer behavior of the server.
offerCyclicDelay	TimeValue	0..1	attr	Optional attribute to define cyclic offers. Cyclic offer is active, if the delay is set (in seconds) and greater then 0.
priority	PositiveInteger	0..1	attr	This attribute defines the VLAN frame priority for Service Discovery messages that result from ProvidedSomeipServiceInstances that are referencing the SomeipSdServerServiceInstanceConfig (OfferService, StopOfferService, SubscribeEventGroupAck). Values from 0 (best effort) to 7 (highest) are allowed.





Class	SomeipSdServerServiceInstanceConfig			
requestResponseDelay	<a href="#">RequestResponseDelay</a>	0..1	aggr	Maximum/Minimum allowable response delay to entries received by multicast in seconds. The Service Discovery shall delay answers to entries that were transported in a multicast SOME/IP-SD message (e.g. FindService).
serviceOfferTimeToLive	PositiveInteger	1	attr	Defines the time in seconds the service offer is valid.

**Table 6.168: SomeipSdServerServiceInstanceConfig**

Class	InitialSdDelayConfig			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
Note	This element is used to configure the offer behavior of the server and the find behavior on the client.			
Base	ARObject			
Aggregated by	SdClientConfig.initialFindBehavior, SdServerConfig.initialOfferBehavior, <a href="#">SomeipSdClientServiceInstanceConfig.initialFindBehavior</a> , <a href="#">SomeipSdServerServiceInstanceConfig.initialOfferBehavior</a>			
Attribute	Type	Mult.	Kind	Note
initialDelayMaxValue	TimeValue	1	attr	Max Value in seconds to delay randomly the first offer (if aggregated by SdServerConfig) or the transmission of a find message (if aggregated by SdClientConfig).
initialDelayMinValue	TimeValue	1	attr	Min Value in seconds to delay randomly the first offer or the transmission of a find message (if aggregated by SdClientConfig).
initialRepetitionsBaseDelay	TimeValue	0..1	attr	The base delay for offer repetitions (if aggregated by SdServerConfig) or find repetitions (if aggregated by SdClientConfig). Successive find messages have an exponential back off delay.
initialRepetitionsMax	PositiveInteger	0..1	attr	Describes the maximum amount of offer repetitions (if aggregated by SdServerConfig) or the maximum amount of find repetitions (if aggregated by SdClientConfig).

**Table 6.169: InitialSdDelayConfig**

Class	RequestResponseDelay			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
Note	Time to wait before answering the query.			
Base	ARObject			
Aggregated by	SdClientConfig.requestResponseDelay, SdServerConfig.requestResponseDelay, <a href="#">SomeipSdClientEventGroupTimingConfig.requestResponseDelay</a> , <a href="#">SomeipSdServerEventGroupTimingConfig.requestResponseDelay</a> , <a href="#">SomeipSdServerServiceInstanceConfig.requestResponseDelay</a>			
Attribute	Type	Mult.	Kind	Note
maxValue	TimeValue	1	attr	Maximum allowable response delay to entries received by multicast in seconds.
minValue	TimeValue	1	attr	Minimum allowable response delay to entries received by multicast in seconds.

**Table 6.170: RequestResponseDelay**

[TPS\_SYST\_02174] Initial Wait Phase configuration for a [ProvidedServiceInstance](#) [The Initial Wait Phase for a [ProvidedServiceInstance](#) is configured with the [initialOfferBehavior](#) and the two attributes [initialDelayMinValue](#) and [initialDelayMaxValue](#).]()



When a calculated random timer based on these min and max values expires, the first `OfferService` message will be sent out.

**[TPS\_SYST\_02258] Shared random timer for `ProvidedServiceInstance` service discovery** [If several `ProvidedServiceInstances` reference the same `SomeipSdServerServiceInstanceConfig` in the role of `sdServerTimerConfig` and if it is ensured that all `ProvidedServiceInstances` are requested / released in the same point in time (e.g. assigned to the same `ConsumedProvidedServiceInstanceGroup` and referenced only by one `ConsumedProvidedServiceInstanceGroup`, or all referencing `ProvidedServiceInstances` has set `autoAvailable` to TRUE and no runtime changes to the availability is performed), then the timing behavior is shared between the referencing `ProvidedServiceInstances`. Thus, if the calculated random timer based on the min and max values of the `InitialSdDelayConfig` expires, then `OfferService` entries of all referencing `ProvidedServiceInstances` shall be sent out.]()

**[TPS\_SYST\_02259] Shared random timer for `ProvidedServiceInstance` service discovery** [If several `ProvidedServiceInstances` reference the same `SomeipSdServerServiceInstanceConfig` in the role of `sdServerTimerConfig` and if it cannot be ensured that all `ProvidedServiceInstances` are requested / released in the same point in time, then the timing behavior is handled per `ProvidedServiceInstance`. The timing behavior shall be derived from the referenced `SomeipSdServerServiceInstanceConfig` for each referencing `ProvidedServiceInstance`.]()

Note: [TPS\_SYST\_02259] supports an efficient modeling if timing behaviors are equal for the referencing `ProvidedServiceInstances`.

**[TPS\_SYST\_02260] Individual random timer for `ProvidedServiceInstance` service discovery** [If `ProvidedServiceInstances` reference their own `SomeipSdServerServiceInstanceConfig` in the role of `sdServerTimerConfig`, then the timing behavior is handled per `ProvidedServiceInstance`. Thus, every `ProvidedServiceInstance` has its own calculated random timer based on the min and max value of the `InitialSdDelayConfig`. If the calculated random timer expires, then a `OfferService` entry of the referencing `ProvidedServiceInstance` shall be sent out.]()

Note: [TPS\_SYST\_02260] enables a scattering of `OfferService` within the configured min and max value of the `InitialSdDelayConfig` of different `ProvidedServiceInstances`.

**[TPS\_SYST\_02175] Repetition Wait Phase configuration for a `ProvidedServiceInstance`** [The Repetition Wait Phase for a `ProvidedServiceInstance` is configured with the `initialOfferBehavior` and the two attributes `initialRepetitionsMax` and `initialRepetitionsBaseDelay`.]()

If the Repetition Phase is entered the Service Discovery waits for the `initialRepetitionsBaseDelay` and transmits an `OfferService` entry. If the amount of sent

OfferService entries reaches `initialRepetitionsMax` the Main Phase will be entered.

If `initialRepetitionsMax` is configured to 0 the Repetition Phase will be skipped and the Main Phase will be entered.

**[TPS\_SYST\_02176] Main Phase configuration for a `ProvidedServiceInstance`**

[The Main Phase for a `ProvidedServiceInstance` is configured with the `offerCyclicDelay` attribute of `SomeipSdServerServiceInstanceConfig`.]()

The `OfferService` entry will be sent cyclically with an interval that is defined by the value of attribute `offerCyclicDelay`.

**[TPS\_SYST\_02177] TTL for Offer Service Entries**

[The lifetime of a `ProvidedServiceInstance` is configurable with the `serviceOfferTimeToLive` attribute of `SomeipSdServerServiceInstanceConfig`.]()

If the time that is configured by `serviceOfferTimeToLive` expires the `ProvidedServiceInstance` will no longer be offered.

**[TPS\_SYST\_02178] Servers `RequestResponseDelay` for received `FindService` entries**

[The Server will delay the `OfferService` answer to a received multicast `FindService` entry by the configured `SomeipSdServerServiceInstanceConfig.requestResponseDelay`.

The actual delay will be randomly chosen between the `maxValue` and `minValue`.]()

The `ProvidedServiceInstance` aggregates an `EventHandler` in the role `eventHandler` that allows to define service instance specific configuration settings for a SOME/IP EventGroup. The EventGroup specific timing settings are configured in the `SomeipSdServerEventGroupTimingConfig` that is referenced by the `EventHandler` in the role `sdServerEgTimingConfig`.

<b>Class</b>	<code>SomeipSdServerEventGroupTimingConfig</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	EventGroup specific timing configuration settings. <b>Tags:</b> atp.recommendedPackage=SomeipSdTimingConfigs			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
requestResponseDelay	<a href="#">RequestResponseDelay</a>	0..1	aggr	The Service Discovery shall delay answers to unicast messages triggered by multicast messages (e.g. Subscribe Eventgroup after Offer Service).

**Table 6.171: `SomeipSdServerEventGroupTimingConfig`**

**[TPS\_SYST\_02182] Servers `RequestResponseDelay` for received `SubscribeEventGroup` entries**

[The Server will delay the `SubscribeEventGroupAck`

answer to a received `SubscribeEventGroup` message that was triggered by a multi-cast `ServiceOffer` by the configured `SomeipSdServerEventGroupTimingConfig.requestResponseDelay` that is referenced by the `EventHandler` in the role `sdServerEgTimingConfig`.


The actual delay will be randomly chosen between the `maxValue` and `minValue`.]()

#### 6.7.5.8 Service Discovery Client Configuration

For every `ConsumedServiceInstance` on a Client different phases are existing:

- Down
- Requested
  - Initial Wait Phase
  - Repetition Phase
  - Main Phase

**[TPS\_SYST\_02250] Service Discovery Message sending behavior on `ConsumedServiceInstance`** [The Service Discovery Message sending behavior on a `ConsumedServiceInstance` is configurable with the `SomeipSdClientServiceInstanceConfig` that is referenced in the role `sdClientTimerConfig`.]()

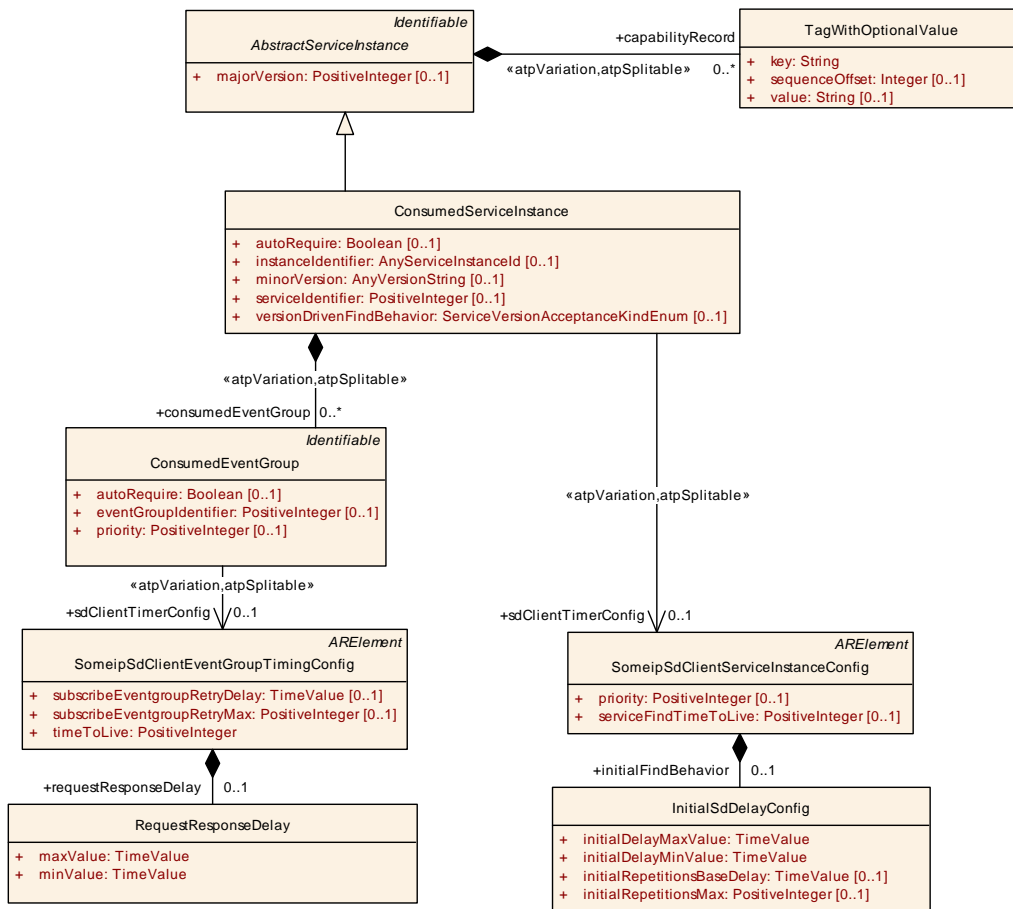

**Figure 6.47: Model of SD Client Timing**

**[TPS\_SYST\_02183] Initial Wait Phase configuration for a ConsumedServiceInstance** [The Initial Wait Phase for a ConsumedServiceInstance is configured with the initialFindBehavior and the two attributes initialDelayMinValue and initialDelayMaxValue.]()

If a calculated random timer based on these min and max values expires the first FindService entry will be sent out. When the calculated random timer expires and no OfferService is received the Repetition Phase will be entered.

**[TPS\_SYST\_02261] Shared random timer for ConsumedServiceInstance service discovery** [If several ConsumedServiceInstances reference the same SomeipSdClientServiceInstanceConfig in the role of sdClientTimerConfig and if it is ensured that all ConsumedServiceInstances are requested / released in the same point in time (e.g. assigned to the same ConsumedProvidedServiceInstanceGroup and referenced only by one ConsumedProvidedServiceInstanceGroup, or all referencing ConsumedServiceInstance has set autoRequire to TRUE and no runtime changes to the require state is performed), then the timing behavior is shared between the referencing ConsumedServiceInstances. Thus, if the calculated random timer based on the min and max values of the InitialSdDelayConfig expires, then FindService entries of all referencing ConsumedServiceInstances shall be sent out.]()

**[TPS\_SYST\_02262] Shared random timer for ConsumedServiceInstance service discovery** [If several `ConsumedServiceInstances` reference the same `SomeipSdClientServiceInstanceConfig` in the role of `sdClientTimerConfig` and if it cannot be ensured that all `ConsumedServiceInstances` are requested / released in the same point in time, then the timing behavior is handled per `ConsumedServiceInstance`. The timing behavior shall be derived from the referenced `SomeipSdClientServiceInstanceConfig` for each referencing `ConsumedServiceInstance`.]()

Note: [TPS\_SYST\_02262] support an efficient modeling if timing behaviors are equal for the referencing `ConsumedServiceInstances`.

**[TPS\_SYST\_02263] Individual random timer for ConsumedServiceInstance service discovery** [If `ConsumedServiceInstances` reference their own `SomeipSdClientServiceInstanceConfig` in the role of `sdClientTimerConfig`, then the timing behavior is handled per `ConsumedServiceInstance`. Thus, every `ConsumedServiceInstance` has its own calculated random timer based on the min and max value of the `InitialSdDelayConfig`. Thus, if the calculated random timer expires, then a `FindService` entry of the referencing `ConsumedServiceInstance` shall be sent out.]()

Note: [TPS\_SYST\_02263] enables a scattering of `FindServices` within the configured min and max value of the `InitialSdDelayConfig`, respectively of different `ConsumedServiceInstances`.

**[TPS\_SYST\_02184] Repetition Wait Phase configuration for a ConsumedServiceInstance** [The Repetition Wait Phase for a `ConsumedServiceInstance` is configured with the `initialFindBehavior` and the two attributes `initialRepetitionsMax` and `initialRepetitionsBaseDelay`.]()

If the Repetition Phase is entered, the Service Discovery waits the `initialRepetitionsBaseDelay` and sends a `FindService` entry.

If the amount of sent `FindService` entries reaches `initialRepetitionsMax` and no `OfferService` is received the Main Phase will be entered. In the Main Phase no further `FindService` entries are sent by the client.

**[TPS\_SYST\_02185] TTL for Find Service Entries** [The lifetime of a `ConsumedServiceInstance` is configurable with the `serviceFindTimeToLive` attribute of `SomeipSdClientServiceInstanceConfig`. Note! The TTL value for `FindService` entries shall be ignored by the server service, and the configuration is only kept for backward compatibility.]()

The `ConsumedServiceInstance` aggregates a `ConsumedEventGroup` in the role `consumedEventGroup` that allows to define service instance specific configuration settings for a SOME/IP `EventGroup`. The `EventGroup` specific timing settings are configured in the `SomeipSdClientEventGroupTimingConfig` that is referenced by the `ConsumedEventGroup` in the role `sdClientTimerConfig`.

<b>Class</b>	<b>SomeipSdClientEventGroupTimingConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	This meta-class is used to specify configuration related to service discovery in the context of an event group on SOME/IP. <b>Tags:</b> atp.recommendedPackage=SomeipSdTimingConfigs			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
request ResponseDelay	<a href="#">RequestResponseDelay</a>	0..1	aggr	The Service Discovery shall delay answers to unicast messages triggered by multicast messages (e.g. Subscribe Eventgroup after Offer Service).
subscribe Eventgroup RetryDelay	TimeValue	0..1	attr	This attribute defines the interval in seconds to re-trigger a subscription to a Eventgroup, if a retry to subscribe to a Eventgroup is configured (subscribeEventgroupRetryMax > 0).
subscribe Eventgroup RetryMax	PositiveInteger	0..1	attr	This attribute define the maximum counts of retries to subscribe to an Eventgroup. If the value is set to 0 no retry shall be done. If the value is set to 255 the retry shall be done as long as the Eventgroup is requested and no SubscribeEventGroupAck was received.
timeToLive	PositiveInteger	1	attr	Defines the time in seconds the subscription of this event is expected by the client. this value is sent from the client to the server in the SD-subscribeEvent message.

**Table 6.172: SomeipSdClientEventGroupTimingConfig**

**[TPS\_SYST\_02187] [SomeipSdClientEventGroupTimingConfig.timeToLive](#) for [SubscribeEventGroup](#) Entries** [The lifetime of an event subscription is configurable with the [timeToLive](#) attribute of [SomeipSdClientEventGroupTimingConfig](#) that is aggregated by an [ConsumedEventGroup](#) in the role [sdClient-TimerConfig](#).

If the time that is configured by [timeToLive](#) expires the event subscription is canceled.]()

It is possible to define a retry for subscription to a [ConsumedEventGroup](#). The retry is optional and used by a [ConsumedServiceInstance](#). It could be used to speed up the recovery if a SOME/IP-SD message is lost (e.g. [SubscribeEventGroupAck](#)) and the interval between cyclic offers ([SomeipSdServerServiceInstanceConfig.offerCyclicDelay](#)) of the corresponding [ProvidedServiceInstance](#) are too large to get a fast recovery, or to speed up the subscription to a [ConsumedEventGroup](#) if an [ConsumedEventGroup](#) is requested somewhere between two cyclic offers.

The retry is configurable within [SomeipSdServerServiceInstanceConfig](#) by setting the [subscribeEventgroupRetryMax](#) value greater than 0 to define how often a retry shall be triggered and [subscribeEventgroupRetryDelay](#) to define the timing interval the retries shall be triggered. If [subscribeEventgroupRetryMax](#) is set to 255, the retry to subscribe to a [ConsumedEventGroup](#) shall be done as long as the [ConsumedEventGroup](#) is requested and no acknowledgment ([SubscribeEventGroupAck](#)) from the [ProvidedServiceInstance](#) was received.



**[constr\_5095] Relationship between the timing behavior of the ConsumedEventGroup retry and the timing behavior of an Offer message** [The timing behavior for a retry to a ConsumedEventGroup (subscribeEventgroupRetryMax, subscribeEventgroupRetryDelay) shall not overlap to the timing behavior (SomeipSdServerServiceInstanceConfig.offerCyclicDelay) of the corresponding ProvidedServiceInstance.]()

**[constr\_5096] ConsumedEventGroup with value subscribeEventgroupRetryMax set to 255** [Retry to a ConsumedEventGroup with value subscribeEventgroupRetryMax set to 255 is only allowed if the SomeipSdServerServiceInstanceConfig.offerCyclicDelay is set 0 and serviceOfferTimeToLive is set to 0xffffffff of the corresponding ProvidedServiceInstance.]()

**[TPS\_SYST\_02188] Clients RequestResponseDelay for received ServiceOffer entries** [The Client will delay the SubscribeEventGroup answer to a received ServiceOffer message by the configured SomeipSdClientEventGroupTimingConfig.requestResponseDelay that is aggregated by the ConsumedEventGroup in the role sdClientTimerConfig.

The actual delay will be randomly chosen between the maxValue and minValue.]()

### 6.7.5.9 Group of ConsumedServiceInstances and ProvidedServiceInstances

The AUTOSAR ServiceDiscovery provide a mechanism of starting/stopping ConsumedProvidedServiceInstanceGroups. Therefore, several ConsumedServiceInstances and ProvidedServiceInstances, respectively, could be enclosed to a ConsumedProvidedServiceInstanceGroup.

<b>Class</b>	<b>ConsumedProvidedServiceInstanceGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	The AUTOSAR ServiceDiscovery is able to start and to stop ClientServices and Server Services, respectively, at runtime. A SdServiceGroup contains several ClientServices and Server Services, respectively. <b>Tags:</b> atp.recommendedPackage=ConsumedProvidedServiceInstanceGroups			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
consumedServiceInstance	ConsumedServiceInstance	*	ref	This reference assigns a set of ProvidedServiceInstances to the ConsumedProvidedServiceInstanceGroup. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=consumedServiceInstance.consumedServiceInstance, consumedServiceInstance.variationPoint.shortLabel vh.latestBindingTime=postBuild






Class	ConsumedProvidedServiceInstanceGroup			
providedService Instance	<a href="#">ProvidedService Instance</a>	*	ref	This reference assigns a set of ConsumedService Instances to the ConsumedProvidedServiceInstance Group.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=providedServiceInstance.providedService Instance, providedServiceInstance.variationPoint.short Label vh.latestBindingTime=postBuild

**Table 6.173: ConsumedProvidedServiceInstanceGroup**

The [ConsumedProvidedServiceInstanceGroup](#) is mapped to a SdServiceGroup within the ECUC configuration. The SdServiceGroups could be accessed via dedicated APIs within the AUTOSAR ServiceDiscovery (Sd) module to start and stop the requested SdServiceGroup. For example, the SdServiceGroups could be switched according the requested partial network similar to ComISignalIPduGroup and therefore the [PncMapping](#) refers the [ConsumedProvidedServiceInstanceGroup](#) in the role [pncConsumedProvidedServiceInstanceGroup](#).

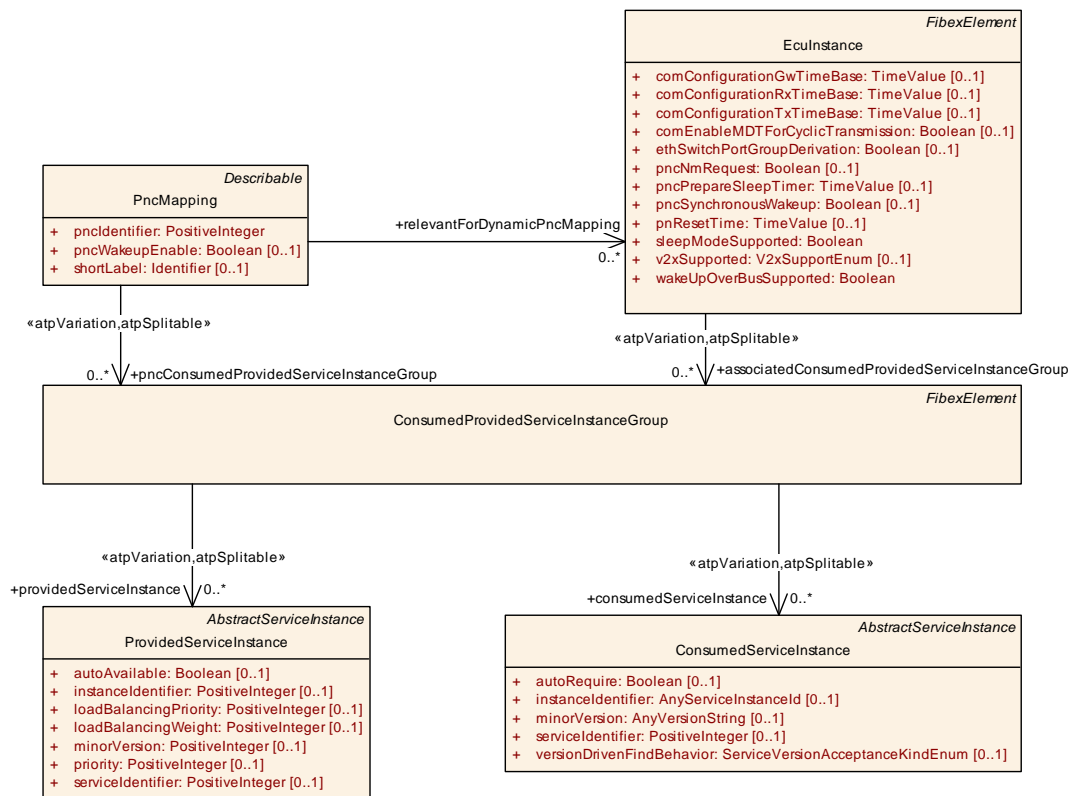

**Figure 6.48: ConsumedProvidedServiceInstanceGroup**

Starting a [ConsumedProvidedServiceInstanceGroup](#) would trigger the referencing [ConsumedServiceInstances](#) to sent out *FindService* entries on the network



and stopping a [ConsumedProvidedServiceInstanceGroup](#) would trigger the referencing [ConsumedServiceInstances](#) to unsubscribe from the subscribed Event Groups and sent out an unsubscribe entry on the network.

Starting a [ConsumedProvidedServiceInstanceGroup](#) would trigger the referencing [ProvidedServiceInstances](#) to sent out *OfferService* entries on the network and stopping a [ConsumedProvidedServiceInstanceGroup](#) would trigger the referencing [ProvidedServiceInstances](#) to sent out a *StopOffer* entries on the network.

### 6.7.5.10 StaticSocketConnection

Only the SOME/IP data communication that is subject to Service Discovery is described with [ProvidedServiceInstances](#) and [ConsumedServiceInstances](#) as mentioned in chapter [6.7.5.3](#).

But there is also the need to describe data exchange between two [SocketAddresses](#) where the SOME/IP Service Discovery protocol is not used. This may include for example the exchange of NM Data (see [6.7.5.12](#)), DoIP data (see [6.7.5.13](#)), SOME/IP Service Discovery messages (see [6.7.5.11](#)). But also the data exchange that is not serialized according to the SOME/IP rules may be exchanged via the so called [StaticSocketConnections](#). And even the exchange of SOME/IP serialized data which transmission is not subject to Service Discovery may be described with [StaticSocketConnections](#). In this case the `ServiceId` and `MessageId` can be derived from the `headerId` of the [SoConIPduIdentifier](#).

**[TPS\_SYST\_02251] Data exchange not regulated by the Service Discovery protocol between two communication endpoints** [Data exchange that is NOT subject to Service Discovery between two [SocketAddresses](#) is described with the [StaticSocketConnection](#) element that is aggregated by a [SocketAddress](#) in the role [staticSocketConnection](#). The aggregating [SocketAddress](#) describes one communication endpoint. The referenced [StaticSocketConnection.remoteAddress](#) defines the second communication endpoint.]()


<b>Class</b>	<b>StaticSocketConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Definition of static SocketConnection between the Socket that is defined by the aggregating Socket Address and the remoteAddress.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">SocketAddress.staticSocketConnection</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	StaticSocketConnection			
iPduIdentifier	SoConIPduIdentifier	*	ref	Assignment of IPduIdentifiers that are transmitted over the static SocketConnection. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=iPduIdentifier.soConIPduIdentifier, iPduIdentifier.variationPoint.shortLabel vh.latestBindingTime=postBuild
remoteAddress	SocketAddress	0..1	ref	RemoteAddress of the static SocketConnection. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=remoteAddress.socketAddress, remoteAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
tcpConnect Timeout	TimeValue	0..1	attr	Specifies the time in seconds how long TCP connect attempts are repeated to reach SOAD_SOCON_ONLINE. This attribute is restricted to socket connection groups which are initiating a TCP connection and are under control of SoAd.
tcpRole	TcpRoleEnum	0..1	attr	Defines whether the local Address (that is aggregating the StaticSocketConnection) does a listen or a connect.

**Table 6.174: StaticSocketConnection**

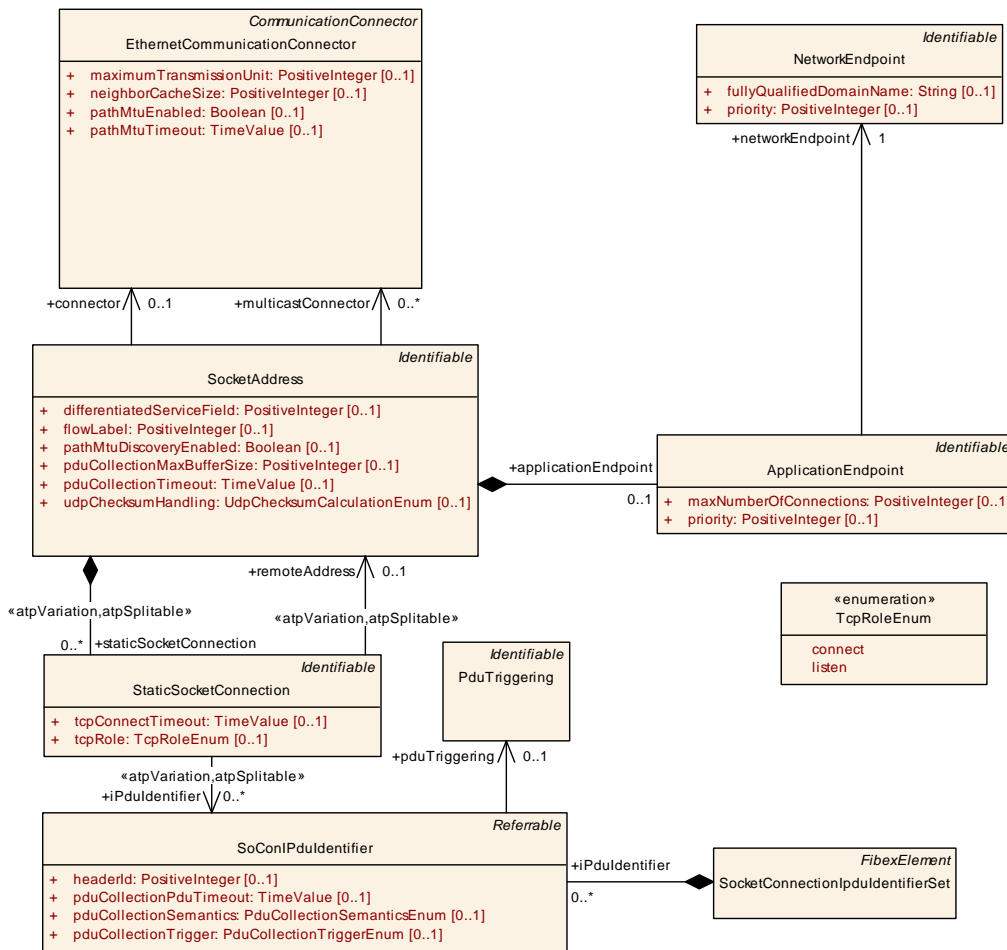

**Figure 6.49: Model of StaticSocketConnection**

UDP doesn't establish a connection before sending data, it is Connectionless. TCP on the other hand establishes a TCP connection. The client initiates the TCP communication and therefore it needs to be configured which endpoint acts as client and which acts as server.

**[TPS\_SYST\_02252] Description of a TCP Client** [The `SocketAddress` that aggregates the `StaticSocketConnection` with `tcpRole` set to `connect` defines the TCP client.]()


**[TPS\_SYST\_02253] Description of a TCP Server** [The `SocketAddress` that aggregates the `StaticSocketConnection` with `tcpRole` set to `listen` defines the TCP server.]()

**[constr\_5091] Relevance of `tcpRole` attribute** [The attribute `tcpRole` is only relevant if the `StaticSocketConnection` is aggregated by a `SocketAddress` that defines a TCP Port in the aggregated `ApplicationEndpoint`.]()

**[constr\_5092] Local and remoteAddress of a `StaticSocketConnection` shall define the same transport protocol** [The transport protocol that is defined by the `SocketAddress` that aggregates the `StaticSocketConnection` shall be the same in the `SocketAddress` that is referenced by the same `StaticSocketConnection` in the role `remoteAddress`.]()

**[TPS\_SYST\_02254] Pdus transported over the `StaticSocketConnection`** [A Pdu that is transported over the `StaticSocketConnection` is described by `SoConIPduIdentifier` that is referenced in the role `ipduIdentifier`.]()

Please note that the `remoteAddress` is allowed to be defined as ANY (`TpPort = 0` and `ipv4address/ipv6address = ANY`). In other words the remote port and/or remote IP address is configured at runtime and the ECU is able to receive all packets that are addressed to its local address no matter what the remote address is.

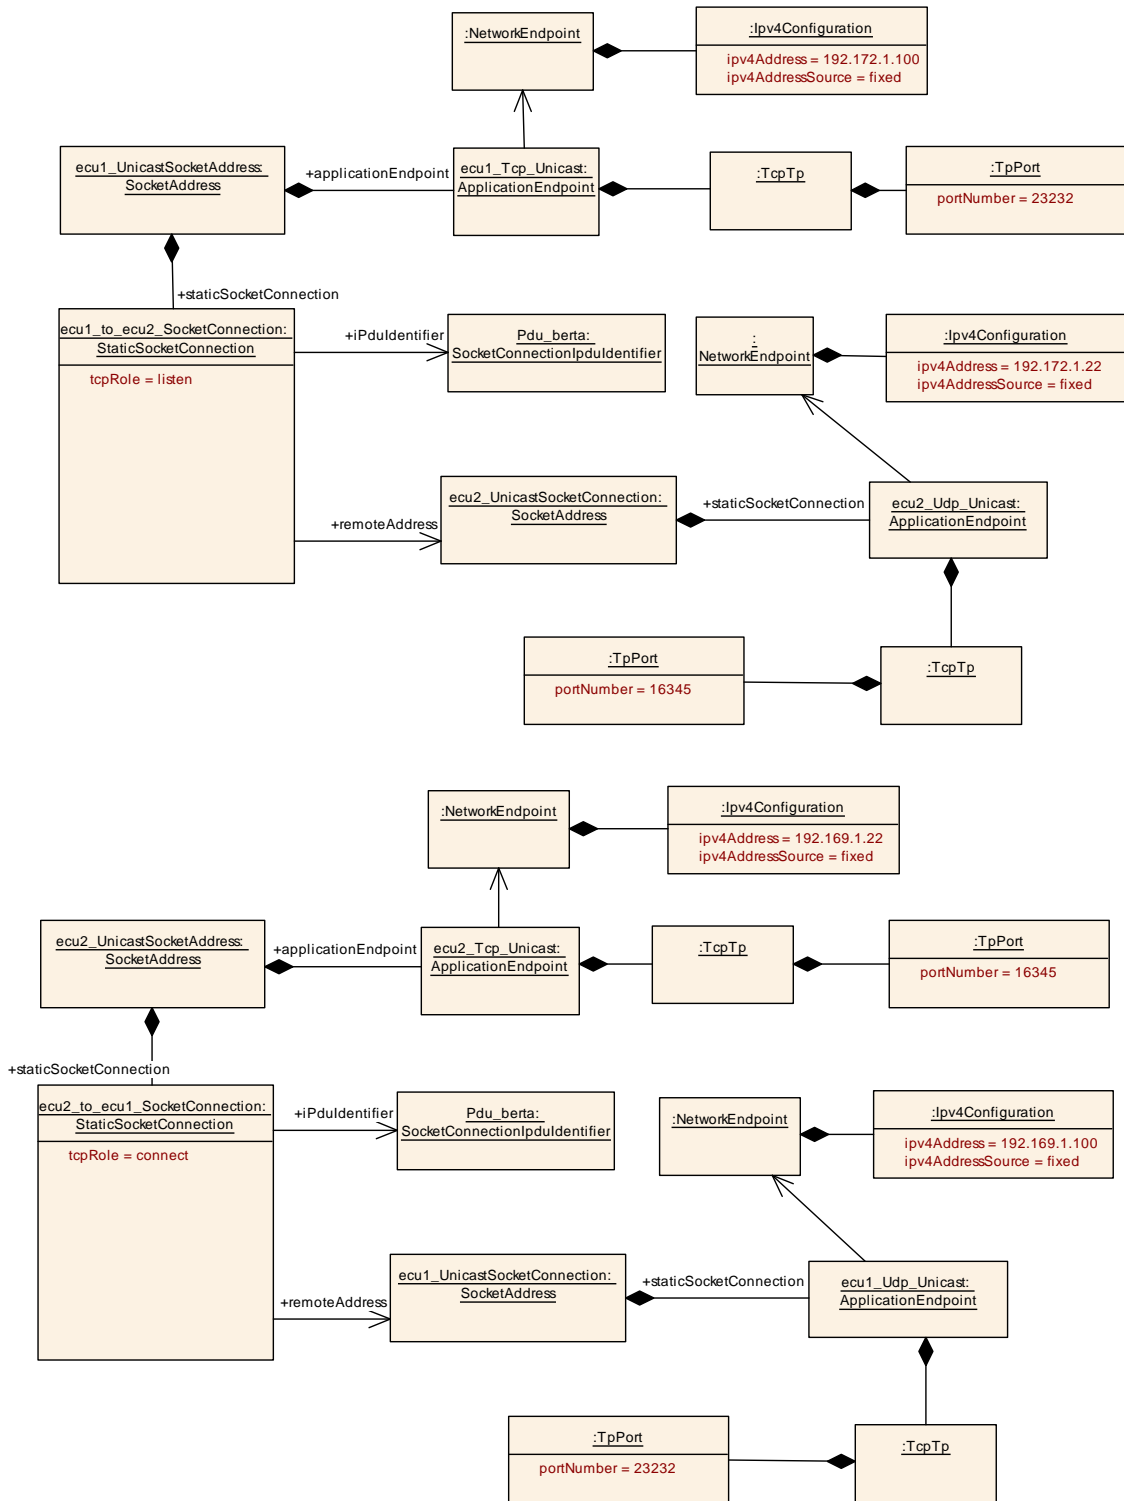

**Figure 6.50: Example for the modeling of TCP StaticSocketConnections in TCP server role and TCP client role**

The example in [Figure 6.50](#) shows a `StaticSocketConnection` with the name `ecu2_to_ecu1_SocketConnection` on `ecu1_UnicastSocketAddress` that defines the TCP server. The socket connection is established to to `ecu2_UnicastSocketAddress` `remoteAddress`.

It also shows the `StaticSocketConnection` with the name `ecu1_to_ecu2_SocketConnection` on `ecu2_UnicastSocketAddress` that defines the TCP client. The socket connection is established to the `ecu1_UnicastSocketAddress` `remoteAddress`.

#### 6.7.5.11 Service Discovery Message Configuration

If Service Discovery is used a Service Discovery Instance is configurable on an `EcuInstance` for a certain VLAN using the respective `ApplicationEndpoint`. The Service Discovery Instance refers to the configuration of a Service Discovery for a VLAN.

**[TPS\_SYST\_02116] Modeling of Service Discovery Pdus** [A Service Discovery Instance configuration requires:

- one Tx `Pdu` that is modeled as `GeneralPurposePdu` with category = SD
- one Rx `Pdu` (unicast reception) that is modeled as `GeneralPurposePdu` with category = SD
- one Rx `Pdu` (multicast reception) that is modeled as `GeneralPurposePdu` with category = SD

]()

**[TPS\_SYST\_02117] Length of `GeneralPurposePdu` with category SD** [The `length` attribute for `GeneralPurposePdus` with category = SD shall be set to at most `EthernetCommunicationConnector.maximumTransmissionUnit` minus the sum of the length of the following headers:

- IP Header (for IpV4: 20 bytes, for IpV6: 40 bytes)
- IpV4 and IpV6 : any optional additional headers, e.g. for IPsec
- Udp Header (8 bytes)
- Socket Adaptor PDU Header (8 bytes)

]()

**[TPS\_SYST\_02118] Rules for the creation of references to `IPduPorts` from `PduTriggerings` related to `GeneralPurposePdus` with category SD** [For each `GeneralPurposePdu` with category SD a `PduTriggering` needs to be defined on the `EthernetPhysicalChannel` (VLAN) that is referenced from the `CommunicationConnector` of the `EcuInstance` on which the Service Discovery Instance is configured:

- the `PduTriggering` for the Tx `GeneralPurposePdu` references the OUT `IPduPort` of the `EcuInstance`

- the `PduTriggering` for the Rx `GeneralPurposePdu` (unicast reception) references the IN `IPduPort` of the `EcuInstance`
- the `PduTriggering` for the Rx `GeneralPurposePdu` (multicast reception) references the IN `IPduPort` of the `EcuInstance`

]()

**[TPS\_SYST\_02119] StaticSocketConnections for GeneralPurposePdus with category SD** [UDP Sockets are used for the transmission of SD messages and the following `StaticSocketConnections` shall be created:

- `StaticSocketConnection` A for all Tx and unicast Rx `GeneralPurposePdus`
- `StaticSocketConnection` B for multicast Rx `GeneralPurposePdu`

The `PduTriggering` for the Tx `GeneralPurposePdu` and the `PduTriggering` for the Rx `GeneralPurposePdu` (unicast reception) are assigned to the `StaticSocketConnection` A via `SoConIPduIdentifier`. The `PduTriggering` for Rx Multicast `GeneralPurposePdu` is assigned to the `StaticSocketConnection` B via `SoConIPduIdentifier`.]()

**[constr\_3267] PduTriggerings in Service Discovery StaticSocketConnections** [SD `StaticSocketConnections` defined in [TPS\_SYST\_02119] shall only refer to `PduTriggerings` which point to `GeneralPurposePdus` of category SD.]()

**[constr\_3268] Service Discovery StaticSocketConnection aggregation by a SocketAddress** [Each SD `StaticSocketConnection` defined in [TPS\_SYST\_02119] shall be aggregated by a `SocketAddress` that in turn aggregates an `ApplicationEndpoint` that defines a `Udp` Port.]()

**[constr\_3269] Service Discovery StaticSocketConnection remoteAddress reference to a TpPort** [Each SD `StaticSocketConnection` defined in [TPS\_SYST\_02119] shall refer with the `remoteAddress` reference to an `ApplicationEndpoint` with `Udp` Port `portNumber` set to 0. This means that the port number is dynamically assigned at runtime.]()


**[constr\_3270] Service Discovery SocketConnection remoteAddress reference to an IP Address** [Each SD `StaticSocketConnection` defined in [TPS\_SYST\_02119] shall refer with the `remoteAddress` reference to an `ApplicationEndpoint` that points to a `NetworkEndpoint` that defines an IP Address ANY (IPv4 or IPv6).]()

**[constr\_3272] SoConIPduIdentifier.headerId setting for SD StaticSocketConnections** [The `SoConIPduIdentifier.headerId` of SD `StaticSocketConnections` defined in [TPS\_SYST\_02119] shall always be set to 0xFFFF8100 for SD messages.]()

**[constr\_3273] Service Discovery multicast StaticSocketConnection's aggregation by an ApplicationEndpoint** [The SD `StaticSocketConnection` for

multicast defined in [TPS\_SYST\_02119] shall be aggregated by an `ApplicationEndpoint` that points to a `NetworkEndpoint` that defines an IP Multicast Address.]  
( )


**[constr\_3274] Service Discovery unicast `StaticSocketConnection`'s aggregation by an `ApplicationEndpoint`** [The SD `StaticSocketConnection` for unicast defined in [TPS\_SYST\_02119] shall be aggregated by an `ApplicationEndpoint` that points to a `NetworkEndpoint` that defines an IP Unicast Address.] ( )

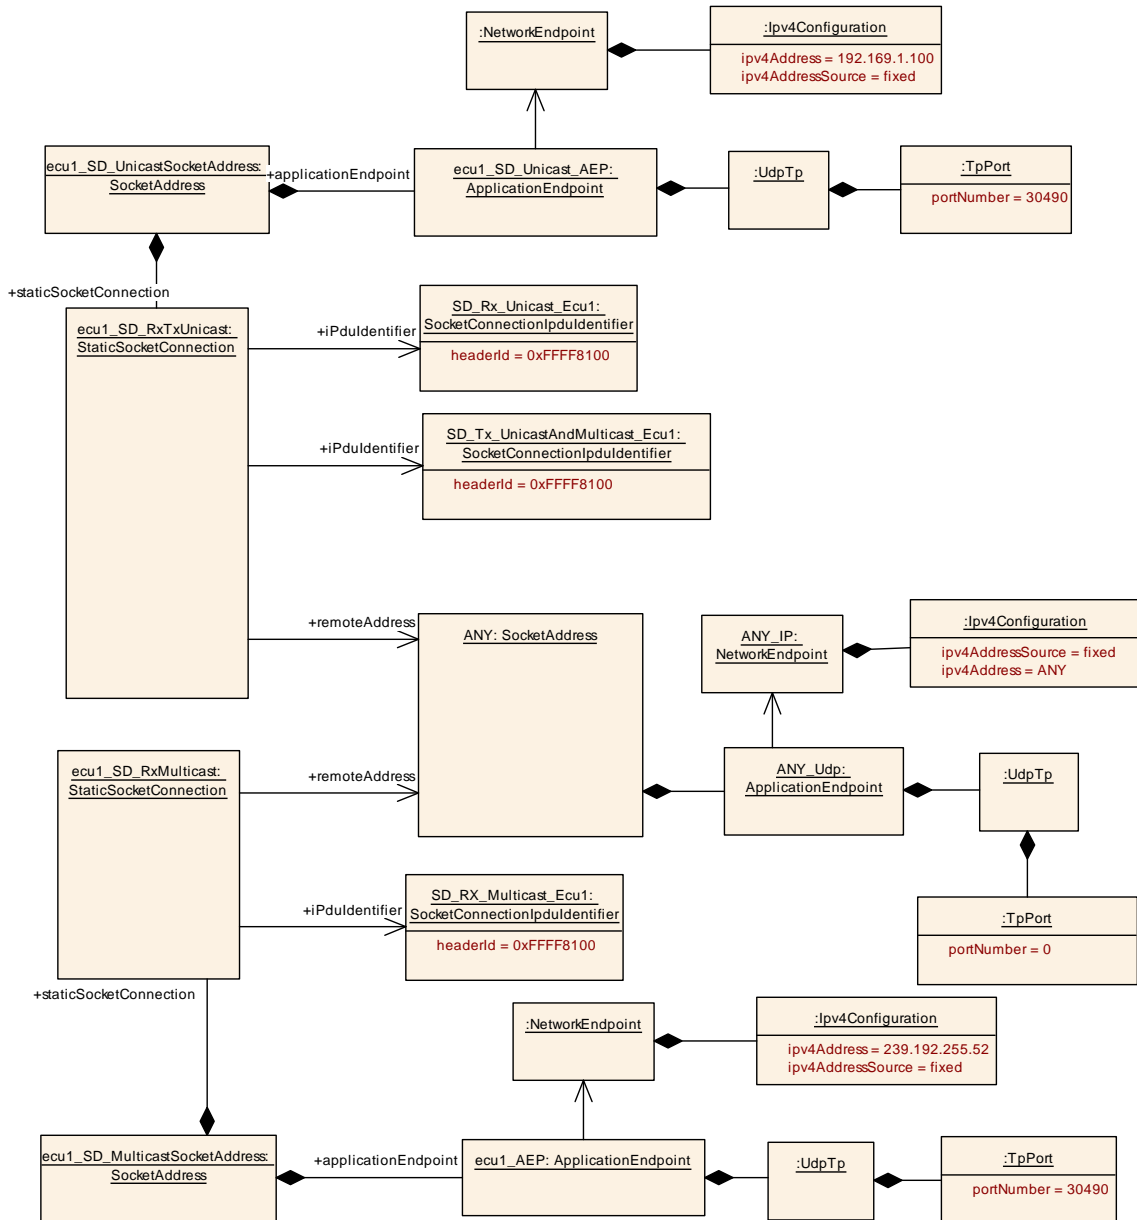

**Figure 6.51: Example for the modeling of SD StaticSocketConnections**

### 6.7.5.12 NmPdu data exchange over StaticSocketConnection

The data exchange of NmPdu on an Ethernet channel is described with the `StaticSocketConnection` as defined in chapter 6.7.5.10.

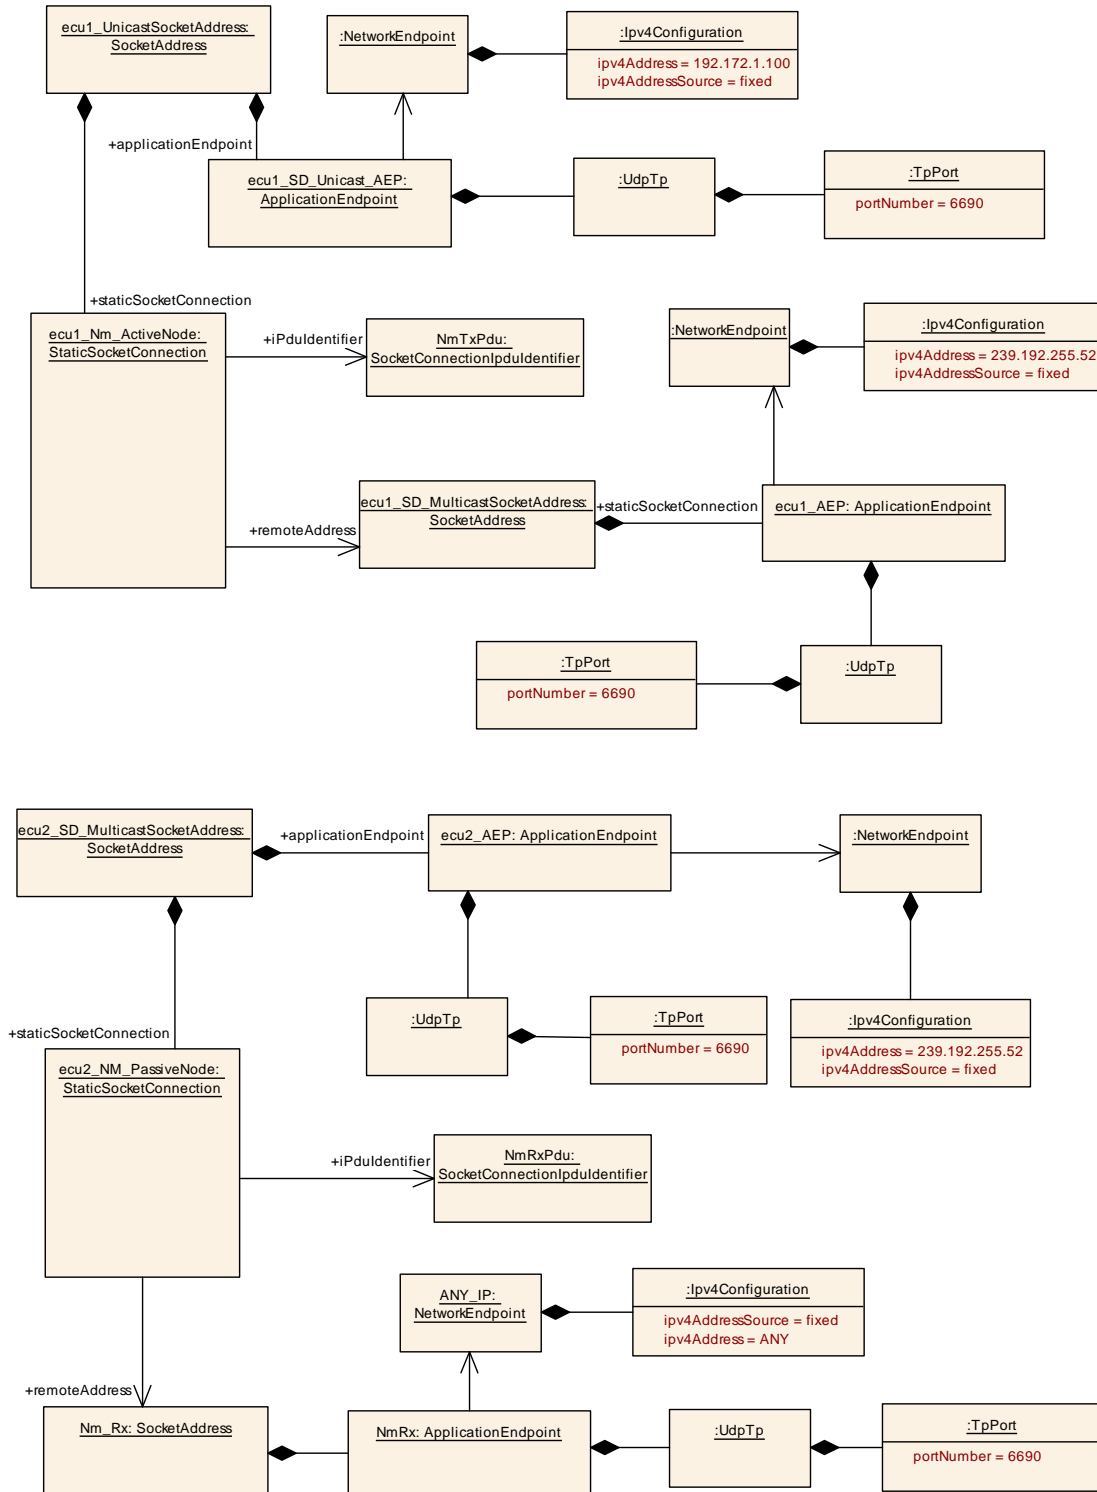

**Figure 6.52: Example for the modeling of NM StaticSocketConnections**



The example in [Figure 6.52](#) shows a possible configuration where the active [NmNode](#) sends the [NmPdu](#) to a remote multicast address. Each passive and active [NmNode](#) receives the [NmPdu](#) over a local multicast address from all other nodes (remote Address = ANY).

### 6.7.5.13 Diagnostics over IP

[DoIpConfig](#) defines a DoIP module configuration for a specific [EcuInstance](#). DoIP supports the communication of internal testers and external testers with an ECU/DoIP Node. Each DoIP node might define several logical [DoIpInterfaces](#) that may share the same physical Ethernet interface/MAC Address. The DoIP node is able to communicate on each of its [DoIpInterfaces](#) independently. I.e. the DoIP functionalities on each [DoIpInterface](#) are isolated from each other.

More details about [DoIpInterfaces](#) can be found in [AUTOSAR\\_SWS\\_DiagnosticOverIP \[28\]](#).

<b>Class</b>	<b>DoIpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DoIP			
<b>Note</b>	This element defines the DoIp configuration for a specific Ecu.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">EcuInstance.doIpConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
doIpInterface	<a href="#">DoIpInterface</a>	*	aggr	DoIP node consists of one or several DoIpInterfaces over which the ECU is able to communicate via DoIP independently. I.e. DoIP functionalities on each IP interface are isolated from each other.
logicAddress	<a href="#">DoIpLogicAddress</a>	0..1	aggr	Describes the logical address of the DoIP entity, i.e. the Local Address that will route diagnostic requests to the Dcm of the DoIP entity.

**Table 6.175: DoIpConfig**

<b>Class</b>	<b>DoIpInterface</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DoIP			
<b>Note</b>	A logical interface over which the DoIP Node is able to communicate via DoIP independently from other existing DoIpInterfaces.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">DoIpConfig.doIpInterface</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
aliveCheckResponseTimeout	TimeValue	0..1	attr	This attribute defines the timeout in seconds for waiting for response to an Alive Check request before the connection is considered to be disconnected. Represents parameter T_TCP_AliveCheck of ISO 13400-2:2012.





Class	DoIpInterface			
doipChannel Collection	<a href="#">DoIpTpConfig</a>	0..1	ref	Configuration of DoIPChannels available in an DoIp Interface. Each DoIPChannel describes a connection between a doIpSourceAddress and a doIpTargetAddress and the exchange of DcmIPdus between the PduR and DoIP. A DoIP channel is constituted by the set of all DoIp TpConnection elements via which the configured Ecu Instance sends or receives SDUs that are sharing the same local diagnosis address and tester address.
doipConnection	SocketConnection Bundle	*	ref	DoIP Connections in the DoIpInterface that define the Do IP Pdus that are sent and received via SoAd over TCP or UDP. <b>Tags:</b> atp.Status=obsolete
doIpRouting Activation	<a href="#">DoIpRoutingActivation</a>	*	aggr	Collection of DoIpRoutingActivation possibilities defined in the DoIpInterface.
generalInactivity Time	TimeValue	0..1	attr	This attribute defines the timeout in seconds for maximum inactivity of a TCP socket connection before the DoIP module will close the according socket connection. Represents parameter T_TCP_General_Inactivity of ISO 13400-2:2012
initialInactivity Time	TimeValue	0..1	attr	This attribute defines the timeout in seconds used for initial inactivity of a connected TCP socket connection directly after socket connection. Represents parameter T_TCP_Initial_Inactivity of ISO 13400-2:2012
initialVehicle Announcement Time	TimeValue	0..1	attr	This attribute defines the waiting time in seconds for sending first vehicle announcement message after IP address assignment. Represents parameter A_DoIP_Announce_Wait of ISO 13400-2:2012
isActivationLine Dependent	Boolean	1	attr	This attribute defines whether the network interface <ul style="list-style-type: none"> <li>is started "on-demand" when an activation line is sensed or</li> <li>is always available.</li> </ul>
maxTester Connections	PositiveInteger	0..1	attr	Maximum amount of tester connections that shall be maintained at one time before alive check is performed.
socket Connection	<a href="#">StaticSocketConnection</a>	*	ref	DoIP Connections in the DoIpInterface that define the Do IP Pdus that are sent and received via SoAd over TCP or UDP.
useMacAddress ForIdentification	Boolean	0..1	attr	This attribute defines whether a configured EID at vehicle identification response/vehicle announcement is used or the MAC address. TRUE: Use MAC Address instead of EID for Vehicle identification/announcement. FALSE: Use configured EID for vehicle identification/announcement.
useVehicle Identification SyncStatus	Boolean	0..1	attr	This attribute defines if the optional VIN/GID synchronization status is used additionally in the vehicle identification/announcement.
vehicle Announcement Count	PositiveInteger	0..1	attr	This attribute defines the number of vehicle announcement messages on IP address assignment. Represents parameter A_DoIP_Announce_Num of ISO 13400-2:2012.
vehicle Announcement Interval	TimeValue	0..1	attr	This attribute defines the waiting time in seconds for sending subsequent vehicle announcement messages. Represents parameter A_DoIP_Announce_Interval of ISO 13400-2:2012

**Table 6.176: DoIpInterface**


<b>Class</b>	<b>DolpRoutingActivation</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DoIP			
<b>Note</b>	This meta-class defines a DoIP routing activation possibility that activates the routing to the referenced doIPTargetAddress. This means that the diagnostic request messages related to the specified doIPTargetAddress received by socketConnections that are referenced by the same DolpInterface that aggregates this DolpRoutingActivation are activated.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">DolpInterface.dolpRoutingActivation</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
doIpTargetAddress	<a href="#">DolpLogicTargetAddressProps</a>	*	ref	Reference to DoIPTargetAddress which is activated on this DolpRoutingActivation.

**Table 6.177: DolpRoutingActivation**

The [DoIpInterface](#) defines [DoIpChannels](#) with the [doipChannelCollection](#) reference that points to a [DoIpTpConfig](#) element that collects a number of [DoIpTpConnections](#).

[DoIpTpConnection](#) describes a unidirectional connection between a [doIpSourceAddress](#) and a [doIpTargetAddress](#) and the exchange of a [DcmIPdu](#) that is defined with the [tpSdu](#) between the PduR and DoIP. The [DiagnosticConnection](#) with references to the [DoIpTpConnection](#) defines the related request and response messages.

A [DoIpChannel](#) in the Ecu configuration is constituted by the set of all [DoIpTpConnection](#) elements via which the [EcuInstance](#) that aggregates the [DoIpConfig](#) that references the [DoIpTpConnection](#) via the [DoIpInterface](#) sends or receives [tpSdus](#) that share the same local diagnosis address and tester address.

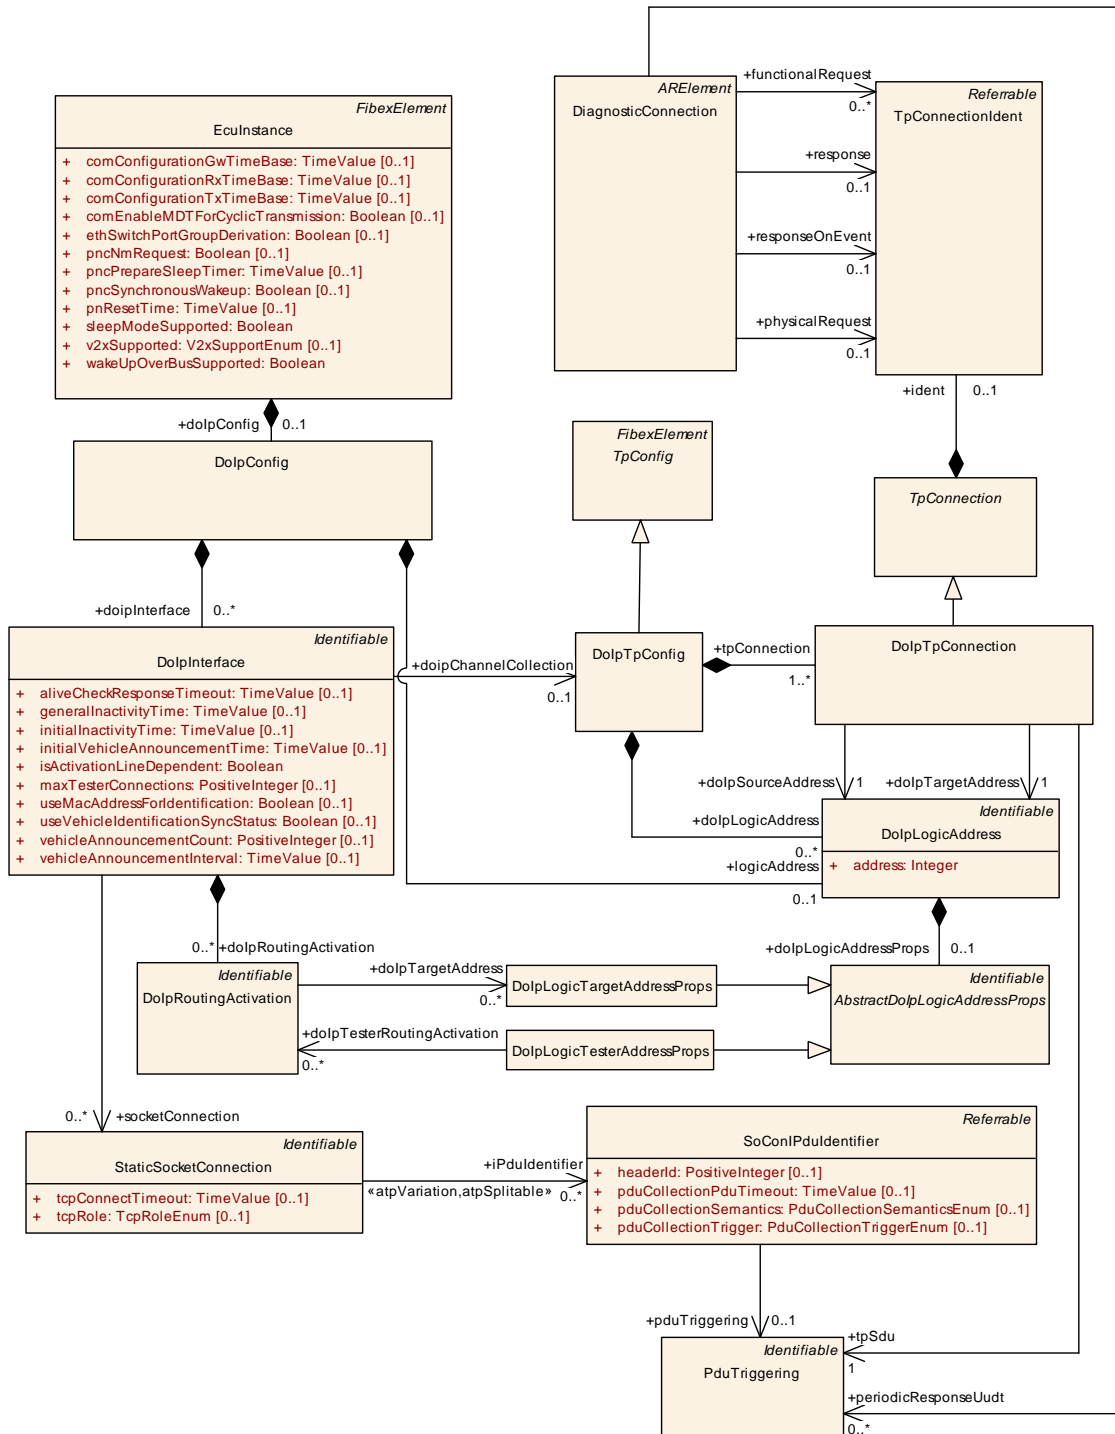

**Figure 6.53: DoIP**

Diagnostic messages are passed from a tester, through a DoIP gateway to the internal vehicle network. Before this happens the routing on a socket in the DoIP gateway needs to be activated. The tester sends a routing activation request and the DoIP entity responds to it. After the routing is activated the diagnostic communication starts.

[TPS\_SYST\_02303] **Modeling of DoIpRoutingActivations** [The DoIP routing activation possibilities in a DoIpInterface are described by the DoIpRoutingActivation that is aggregated in the role doIpRoutingActivation in the DoIpInterface.]()

<b>Class</b>	<b>DolpTpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	This element defines exactly one DolpTp Configuration that is used to configure all DolpChannels available in a DolpInterface. Each DolpChannel describes a connection between a dolpSourceAddress and a dolpTargetAddress and the exchange of DcmIPdus between the PduR and DoIP. <b>Tags:</b> atp.recommendedPackage=TpConfigs			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, TpConfig			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dolpLogicAddress	DolpLogicAddress	*	aggr	Collection of logical DoIP Addresses.
tpConnection	DolpTpConnection	1..*	aggr	Collection of unidirectional connections between a source address and a target address.

**Table 6.178: DolpTpConfig**

<b>Class</b>	<b>DolpTpConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DiagnosticConnection			
<b>Note</b>	A connection identifies the sender and the receiver of this particular communication. The Dolp module routes a tpSdu through this connection.			
<b>Base</b>	ARObject, TpConnection			
<b>Aggregated by</b>	DolpTpConfig.tpConnection			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dolpSourceAddress	DolpLogicAddress	1	ref	Reference to the address of the sender of the tpSdu.
dolpTargetAddress	DolpLogicAddress	1	ref	Reference to the address of the receiver of the tpSdu.
tpSdu	PduTriggering	1	ref	This reference is used to describe the data exchange between Dolp and the PduR.

**Table 6.179: DolpTpConnection**

<b>Class</b>	<b>DolpLogicAddress</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	The logical DoIP address.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	DolpConfig.logicAddress, DolpTpConfig.dolpLogicAddress			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
address	Integer	1	attr	The logical DoIP address.
dolpLogicAddressProps	AbstractDolpLogicAddressProps	0..1	aggr	Collection of additional LogicAddress properties.

**Table 6.180: DolpLogicAddress**

<b>Class</b>	<b>AbstractDolpLogicAddressProps</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DoIP			
<b>Note</b>	Abstract meta-class that collects common properties for all specialized DolpLogicAddressProps.			
<b>Base</b>	<i>ARObject</i> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">DolpLogicTargetAddressProps</a> , <a href="#">DolpLogicTesterAddressProps</a>			
<b>Aggregated by</b>	<a href="#">DolpLogicAddress.dolpLogicAddressProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.181: AbstractDolpLogicAddressProps**

<b>Class</b>	<b>DolpLogicTargetAddressProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DoIP			
<b>Note</b>	This meta-class acts as a target for references to the DolpLogicTargetAddress and collects DolpLogicTargetAddress specific settings.			
<b>Base</b>	<i>ARObject</i> , <a href="#">AbstractDolpLogicAddressProps</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">DolpLogicAddress.dolpLogicAddressProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.182: DolpLogicTargetAddressProps**


<b>Class</b>	<b>DolpLogicTesterAddressProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DoIP			
<b>Note</b>	This meta-class acts as a target for references to the DolpLogicTesterAddress and collects DolpLogicTesterAddress specific settings.			
<b>Base</b>	<i>ARObject</i> , <a href="#">AbstractDolpLogicAddressProps</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">DolpLogicAddress.dolpLogicAddressProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dolpTesterRoutingActivation	<a href="#">DolpRoutingActivation</a>	*	ref	Reference to a DolpRoutingActivation describing the possible routing activations of the DolpTester.

**Table 6.183: DolpLogicTesterAddressProps**

**[constr\_3212] Limitation of DolpTpConnection.tpSdu** [[DoIpTpConnection](#) shall only reference [PduTriggerings](#) of [DcmIPdus](#) or [UserDefinedIPdus](#) in the role [tpSdu](#).]()

The diagnostic data is routed from the DoIP module to SoAd and back. The communication of diagnostic data over IP is described with [StaticSocketConnections](#) that contain [SoConIPduIdentifiers](#) with references to [PduTriggerings](#) of [GeneralPurposePdus](#) of category DoIP.

Please note that there is no connection between [GeneralPurposePdus](#) of category DoIP and the [DoIpTpConnection](#) in the System Description. The DoIP module evaluates the header of an incoming [GeneralPurposePdu](#) and knows from the included information the further processing.

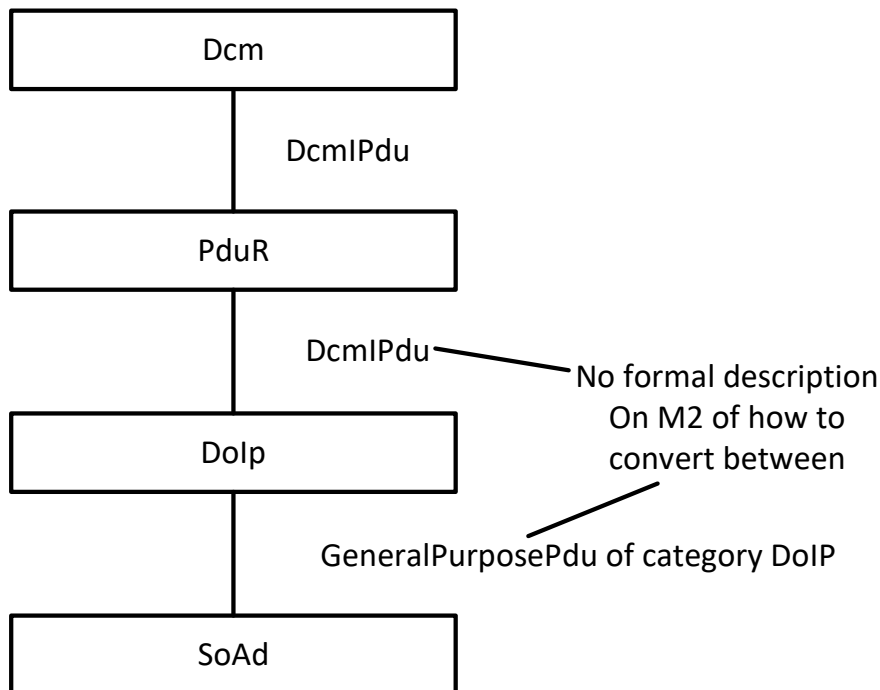

**Figure 6.54: Routing of Dcm PduS in AUTOSAR Stack for communication over IP**

The `DoIpInterface.socketConnection` defines which `StaticSocketConnection` belongs to which `DoIpInterface`.

#### 6.7.5.14 Transport Layer Security

AUTOSAR supports the configuration of *Transport Layer Security* for the information exchange between two *sockets*<sup>2</sup> that are modeled as `ApplicationEndpoints`.

Please note that currently the DTLS (**Datagram Transport Layer Security**) variant is not supported on the *AUTOSAR classic platform*.

It is a common use case that only one end of a TLS-based connection is actually modeled in an AUTOSAR model. The other end may exist off-board, e.g. as a diagnostic tester.

It is therefore important that the modeling does not rely on or imply knowledge about both ends of such a TLS-based connection.

An AUTOSAR model that only describes one end of the communication is positively required to work, independently of the availability of a formal modeling of the other end.

AUTOSAR provides two alternatives for modeling TLS in System Models:

<sup>2</sup>TLS connections are - by design - limited to a 1:1 pattern. A 1:n or n:1 communication pattern is not supported by TLS

- Modeling using [CryptoServicePrimitives](#) (see section 6.7.5.14.1)
- Modeling using IANA [29] Parameters (see section 6.7.5.14.2).

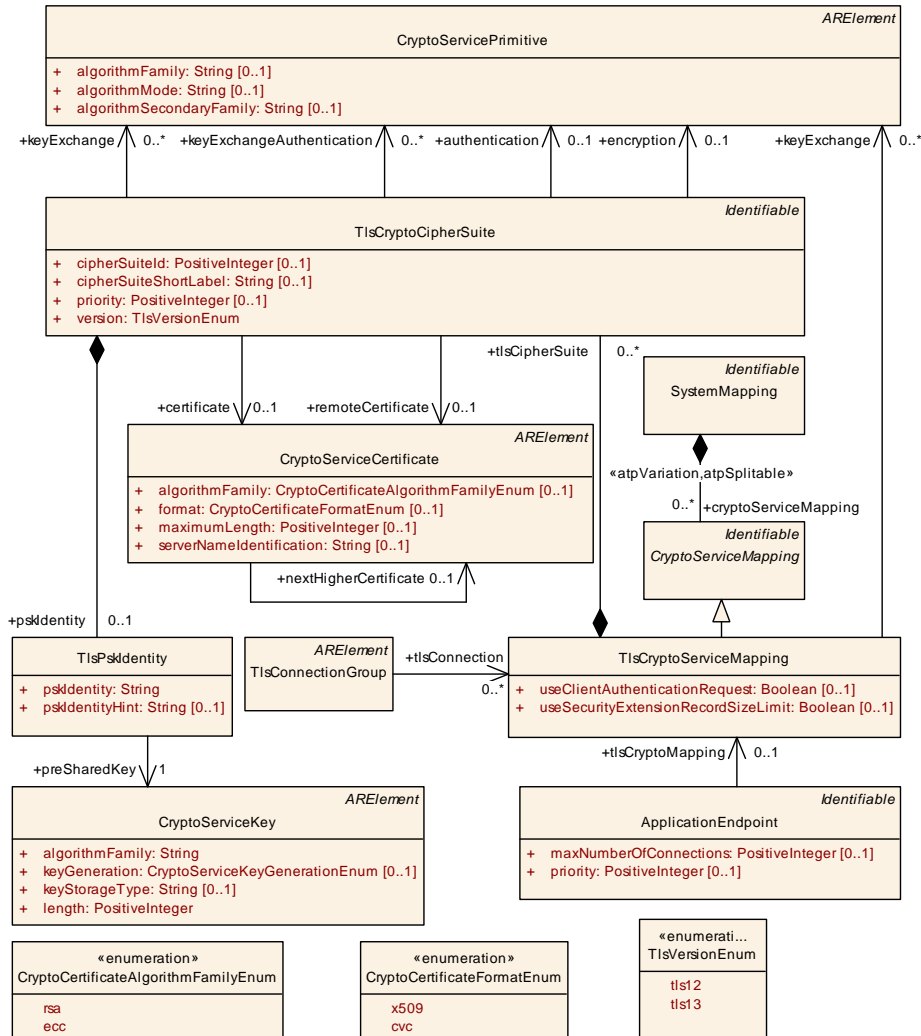


Figure 6.55: Modeling of crypto infrastructure for Transport Layer Security

<b>Class</b>	<b>TlsCryptoServiceMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class has the ability to represent a crypto service mapping for the socket-based configuration of Transport Layer Security (TLS).			
<b>Base</b>	ARObject, CryptoServiceMapping, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	SystemMapping.cryptoServiceMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
keyExchange	CryptoServicePrimitive	*	ref	This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.
tlsCipherSuite	TlsCryptoCipherSuite	*	aggr	This aggregation represents the collection of supported cipher suites.







Class	TlsCryptoServiceMapping			
useClientAuthenticationRequest	Boolean	0..1	attr	Defines if client authentication shall be applied for this TLS connection.
useSecurityExtensionRecordSizeLimit	Boolean	0..1	attr	Defines if the security extension for max_fragment_length shall be supported as defined in IETF RFC 8449, chapter 4.1.

**Table 6.184: TlsCryptoServiceMapping**

The attribute `TlsCryptoServiceMapping.useSecurityExtensionRecordSizeLimit` is defining the behavior for IETF RFC 8449 [30].

A TLS connection is established between two communication endpoints that assume the dedicated roles of *server* and *client*.

These roles cannot be swapped while the connection exists, i.e. a *server* remains the *server* for the full amount of time the connection exists.

**[TPS\_SYST\_05029] Semantics of meta-class `TlsCryptoServiceMapping`** [As a sub-class of `CryptoServiceMapping`, meta-class `TlsCryptoServiceMapping` has the ability to collect the TLS-related configuration aspects from either the perspective of the *client* or the *server*.

In the case of TLS, the collection boils down to the aggregation of meta-class `TlsCryptoCipherSuite` in the role `tlsCipherSuite` plus the ability (by means of the role `keyExchange`) to define handshake properties that are shared for each of the aggregated `tlsCipherSuites`.]()

**[constr\_1670] Prohibition of usage of `tlsCryptoMapping` in case of UDP socket connections** [A `TlsCryptoServiceMapping` may only be referenced by an `ApplicationEndpoint` in the role `tlsCryptoMapping` if that `ApplicationEndpoint` aggregates a `TcpTp` in the role `tpConfiguration`.]()

**[constr\_1671] Supported values of `TlsCryptoServiceMapping.category`** [The only supported values of attribute `TlsCryptoServiceMapping.category` are:

- **TLS\_SERVER**: the `TlsCryptoServiceMapping` assumes the role of the *server* in the TLS connection.
- **TLS\_CLIENT**: the `TlsCryptoServiceMapping` assumes the role of the *client* in the TLS connection.

]()

**[constr\_5319] TCP endpoint using `TLS_SERVER` role can only serve provided service instances** [An `ApplicationEndpoint` that refers to `TlsCryptoServiceMapping` with `category TLS_SERVER` in the role `tlsCryptoMapping` is only allowed to be referenced by `ProvidedServiceInstances` in the role `localUnicastAddress` in case that the `ProvidedServiceInstance` does not have a `remoteUnicastAddress` defined.]()

**[constr\_5320] TCP endpoint using `TLS_CLIENT` role can only serve consumed service instances** [An `ApplicationEndpoint` that refers to `TlsCryptoServiceMapping` with `category` `TLS_CLIENT` in the role `tlsCryptoMapping` is only allowed to be referenced by `ConsumedServiceInstances` in the role `localUnicastAddress` in case that the `ConsumedServiceInstance` does not have a `remoteUnicastAddress` defined.]()

The reason for [constr\_5319] and [constr\_5320] is that in the Service Discovery case the TLS *client* needs to establish the TLS connection and a TCP endpoint can only take one role: `TLS_CLIENT` or `TLS_SERVER`. If a `TlsCryptoServiceMapping` would act as `TLS_CLIENT` and would refer to a `ProvidedServiceInstance` then this `TLS_CLIENT` would need to establish the TLS connection. But in this case the `TLS_CLIENT` would not know to which remote service *client* a connection needs to be established since different `ConsumedServiceInstances` may directly call methods of the `ProvidedServiceInstance` without any registration.

The usage of a cipher suite in the context of setting up a TLS connection is formalized by means of meta-class `TlsCryptoCipherSuite`.

**[TPS\_SYST\_05030] Semantics of `TlsCryptoCipherSuite`** [The creation of a TLS connection requires the usage of a suite of cryptographic operations in specific roles, also known as a *cipher suite*.

Meta-class `TlsCryptoCipherSuite` represents a given cipher suite for a TLS connection. `TlsCryptoCipherSuite` references meta-class `CryptoServicePrimitive` in three dedicated roles that represent the steps of the creation of a TLS connection.

More specifically, the cryptographic operations for setting up a TLS connection involve the following steps:

- **Key exchange:** these `CryptoServicePrimitives` may be used for the handshake phase of the TLS connection. Different alternatives exist for executing this phase and therefore the multiplicity of this reference is 0..\*.
- **Authentication** of communication partners during the operational phase of the TLS connection. This part is similar to freshness calculation for SecOC-based communication. For this purpose a single `CryptoServicePrimitive` is used on each end of the communication.
- **Encryption** of content exchanged between the communication partners that have established the TLS connection. For this purpose a single `CryptoServicePrimitive` is used on each end of the communication.

]()

Please note that according to TLS each `TlsCryptoCipherSuite` may support multiple PSKs or certificates. The model restricts the multiplicity of references from `TlsCryptoCipherSuite` to `CryptoServiceCertificate` and `TlsPskIdentity` to 0..1. A TLS configuration with multiple PSKs or Certificates per CipherSuite can be achieved by having multiple `TlsCryptoCipherSuite`'s that share the

same set of properties but reference different [CryptoServiceCertificate](#)'s or [TlsPskIdentity](#)'s, respectively.

<b>Class</b>	<b>TlsCryptoCipherSuite</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class represents a cipher suite for describing cryptographic operations in the context of establishing a connection of ApplicationEndpoints that is protected by TLS.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">TlsCryptoServiceMapping.tlsCipherSuite</a> , <a href="#">TlsSecureComProps.tlsCipherSuite</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
authentication	<a href="#">CryptoServicePrimitive</a>	0..1	ref	This reference identifies the crypto service primitive for the generation and verification of MACs.
certificate	<a href="#">CryptoServiceCertificate</a>	0..1	ref	This reference identifies the applicable local certificate.
cipherSuiteId	PositiveInteger	0..1	attr	Identification of the CipherSuite according to the IANA assignments list.
cipherSuiteShortLabel	String	0..1	attr	Name of the CipherSuite according to the IANA assignments list.
ellipticCurve	<a href="#">CryptoEllipticCurveProps</a>	*	ref	This references point to the properties of elliptic curves.
encryption	<a href="#">CryptoServicePrimitive</a>	0..1	ref	This reference identifies the crypto service primitive for the execution of encryption.
keyExchange	<a href="#">CryptoServicePrimitive</a>	*	ref	This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.
keyExchangeAuthentication	<a href="#">CryptoServicePrimitive</a>	*	ref	This reference identifies the crypto service primitives for the generation and verification of signatures during the key exchange algorithm.
priority	PositiveInteger	0..1	attr	This attribute identifies the priority of the cipher suite. Range: 1..65535. Lower values represent higher priorities.
props	<a href="#">TlsCryptoCipherSuiteProps</a>	0..1	aggr	The aggregated TlsCryptoCipherSuiteProps provide details for the TLS Cipher Suite.
pskIdentity	<a href="#">TlsPskIdentity</a>	0..1	aggr	Pre-shared key identity shared during the handshake among the communication parties, to establish a TLS connection if the handshake is based on the existence of a pre-shared key.
remoteCertificate	<a href="#">CryptoServiceCertificate</a>	0..1	ref	This reference identifies the applicable remote certificate.
signatureScheme	<a href="#">CryptoSignatureScheme</a>	*	ref	This reference points to the properties of a TLS Signature Scheme.
version	<a href="#">TlsVersionEnum</a>	1	attr	This attribute supports the definition of the applicable version of TLS.

**Table 6.185: TlsCryptoCipherSuite**

<b>Enumeration</b>	<b>TlsVersionEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	This meta-class has the ability to identify a specific version of the transport-layer security (TLS) protocol.
<b>Aggregated by</b>	<a href="#">TlsCryptoCipherSuite.version</a>
<b>Literal</b>	<b>Description</b>





Enumeration	TlsVersionEnum
tls12	TLS version 1.2 <b>Tags:</b> atp.EnumerationLiteralIndex=0
tls13	TLS version 1.3 <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 6.186: TlsVersionEnum**

Class	TlsPskIdentity			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This element is used to describe the pre-shared key shared during the handshake among the communication parties, to establish a TLS connection if the handshake is based on the existence of a pre-shared key.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	TlsCryptoCipherSuite.pskIdentity			
Attribute	Type	Mult.	Kind	Note
preSharedKey	CryptoServiceKey	1	ref	This reference identifies the applicable cryptographic key.
pskIdentity	String	1	attr	This attribute provides the key identification.
pskIdentityHint	String	0..1	attr	This attribute provides the identity hint for a pre-shared key.

**Table 6.187: TlsPskIdentity**

Class	TlsCryptoCipherSuiteProps			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class provides attributes to specify details of TLS Cipher Suites.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	TlsCryptoCipherSuite.props			
Attribute	Type	Mult.	Kind	Note
tcpIpTlsUse Security ExtensionForce EncryptThen Mac	Boolean	0..1	attr	Defines if the security extension according to IETF RFC 7366 shall be supported. This is useful for cipher suites using CBC mode.

**Table 6.188: TlsCryptoCipherSuiteProps**

Class	CryptoEllipticCurveProps			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class provides attributes to specify the properties of elliptic curves. <b>Tags:</b> atp.recommendedPackage=CryptoEllipticCurveProps			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
namedCurveId	PositiveInteger	0..1	attr	Defines the value of one specific NamedCurve Id.

**Table 6.189: CryptoEllipticCurveProps**

<b>Class</b>	<b>CryptoSignatureScheme</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class provides attributes to specify the TLS Signature Scheme. <b>Tags:</b> atp.recommendedPackage=CryptoSignatureSchemas			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
signature Schemeld	PositiveInteger	0..1	attr	Defines the value of one specific TLS Signature Scheme.

**Table 6.190: CryptoSignatureScheme**

[TPS\_SYST\_05031] Existence of [TlsCryptoCipherSuite.keyExchange](#) vs. [TlsCryptoServiceMapping.keyExchange](#) [The role [TlsCryptoServiceMapping.keyExchange](#) has been introduced as an optimization.

It is assumed that the references for key exchange look pretty similar if not identical for many concrete [TlsCryptoCipherSuites](#).

Adding these references in an identical form to a bunch of [TlsCryptoCipherSuites](#) does not really make sense. Therefore, [TlsCryptoServiceMapping](#) allows to define these references as well with the intention to make them valid for all [TlsCryptoServiceMapping.tlsCipherSuite](#).

A mixture of references in the role [TlsCryptoCipherSuite.keyExchange](#) and [TlsCryptoServiceMapping.keyExchange](#) is supported for the case of a given collection of [TlsCryptoCipherSuites](#)]()

[TPS\_SYST\_05032] Semantics of [CryptoServiceCertificate](#) [Meta-class [CryptoServiceCertificate](#) represents a cryptographic certificate needed for the creation of a TLS connection between *server* and *client*.]()

<b>Class</b>	<b>CryptoServiceCertificate</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This meta-class represents the ability to model a cryptographic certificate. <b>Tags:</b> atp.recommendedPackage=CryptoServiceCertificates			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
algorithmFamily	<a href="#">CryptoCertificateAlgorithmFamilyEnum</a>	0..1	attr	This attribute represents a description of the family of crypto algorithm used to generate public key and signature of the cryptographic certificate.
format	<a href="#">CryptoCertificateFormatEnum</a>	0..1	attr	This attribute can be used to provide information about the format used to create the certificate
maximum Length	PositiveInteger	0..1	attr	This attribute represents the ability to define the maximum length of the certificate in bytes.
nextHigher Certificate	<a href="#">CryptoServiceCertificate</a>	0..1	ref	The reference identifies the next higher certificate in the certificate chain.





Class	CryptoServiceCertificate			
serverName Identification	String	0..1	attr	<p>Server Name Indication (SNI) is needed if the IP address hosts multiple servers (on the same port), each of them using a different certificate.</p> <p>If the client sends the SNI to the Server in the client hello, the server looks the SNI up in its certificate list and uses the certificate identified by the SNI.</p>

**Table 6.191: CryptoServiceCertificate**

Enumeration	CryptoCertificateAlgorithmFamilyEnum
Package	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
Note	This meta-class defines possible cryptographic algorithm families used to create public keys and signatures within the certificate.
Aggregated by	<a href="#">CryptoServiceCertificate.algorithmFamily</a>
Literal	<b>Description</b>
ecc	<p>The cryptographic operations in the certificate are executed using elliptic curves (ecc)</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=2</p>
rsa	<p>The cryptographic operations in the certificate are executed using the RSA approach.</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=1</p>

**Table 6.192: CryptoCertificateAlgorithmFamilyEnum**

Enumeration	CryptoCertificateFormatEnum
Package	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
Note	This meta-class defines possible formats of cryptographic certificates.
Aggregated by	<a href="#">CryptoServiceCertificate.format</a>
Literal	<b>Description</b>
cvc	<p>The certificate has been created in Card Verifiable Certificate (CVC) format</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=2</p>
x509	<p>The certificate is created in X.509 format.</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=1</p>

**Table 6.193: CryptoCertificateFormatEnum**

[constr\_1672] Existence of [TlsCryptoCipherSuite.certificate](#) and [TlsCryptoCipherSuite.pskIdentity](#) in the server role [Either

- the reference to [CryptoServiceCertificate](#) in the role [TlsCryptoCipherSuite.certificate](#)
- the aggregation of [TlsPskIdentity](#) in the role [TlsCryptoCipherSuite.pskIdentity](#)

shall exist if the [TlsCryptoCipherSuite](#) is aggregated by a [TlsCryptoServiceMapping](#) that has attribute `category` set to the value `TLS_SERVER`.]()

In other words two different approaches are supported by TLS for the handling of key exchange: Pre-shared secret and certificate.

The *server* may optionally request a certificate from the *client*. If this option is not used then other documented approaches for completing the handshake phase are foreseen for the specific case.

**[TPS\_SYST\_05033] Existence of `TlsCryptoCipherSuite.certificate` and `TlsCryptoCipherSuite.pskIdentity` in the *client* role** [The *client* (`TlsCryptoServiceMapping` has the attribute `category` set to the value `TLS_CLIENT`) has the following authentication options:

- the reference to `CryptoServiceCertificate` in the role `TlsCryptoCipherSuite.certificate` exists,
- the aggregation of `TlsPskIdentity` in the role `TlsCryptoCipherSuite.pskIdentity` exists,
- neither `TlsCryptoCipherSuite.certificate` nor `TlsCryptoCipherSuite.pskIdentity` exists and `TlsCryptoServiceMapping.useClientAuthenticationRequest` is set to *false*. In this case the handshake is provided on the basis of the *server* certificate only.

]()

In the pre-shared Key approach the *client* indicates which key to use by including a `pskIdentity` in the `ClientKeyExchange` message. To help the *client* in selecting which identity to use, the *server* can provide a `pskIdentityHint` in the `ServerKeyExchange` message. Please note that the usage of `pskIdentityHints` is restricted for usage with TLS 1.2.



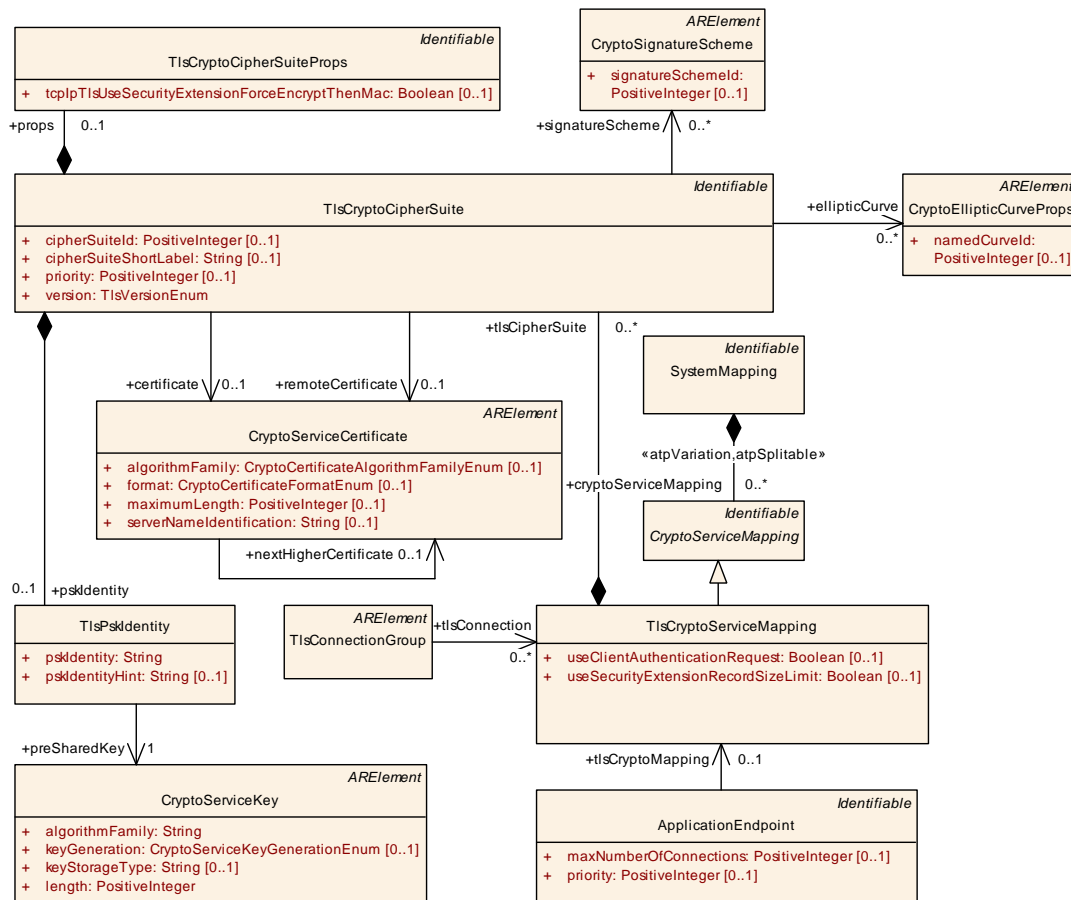


Figure 6.56: Modeling of crypto infrastructure for *Transport Layer Security*

AUTOSAR provides two alternatives for modeling TLS in System Models:

### 6.7.5.14.1 Modeling TLS using [CryptoServicePrimitives](#)

Instances of [TlsCryptoServiceMapping](#) and [TlsCryptoCipherSuite](#) allow to refer to [CryptoServicePrimitives](#) via

- [TlsCryptoServiceMapping.keyExchange](#)
- [TlsCryptoCipherSuite.keyExchange](#)
- [TlsCryptoCipherSuite.keyExchangeAuthentication](#)
- [TlsCryptoCipherSuite.authentication](#)
- [TlsCryptoCipherSuite.encryption](#).

Setting up these references to [CryptoServicePrimitives](#) with specific properties allows to define *how* a TLS Connection and its associated TLS cipher suites are working by defining the [CryptoServicePrimitive](#) they employ. Instances of the [CryptoServicePrimitive](#) class directly map to `CsmPrimitive` containers in the `Csm` configuration, which makes the translation into `Csm` configurations straightforward.



Using `CryptoServicePrimitive` elements for modeling TLS, however, makes it hard to infer *what* a TLS Connection and its associated TLS cipher suites are from the information *how* they work. It is, for instance, difficult to determine the IANA id [29] of a TLS cipher suite by examining the properties of the `CryptoServicePrimitive` elements the associated `TlsCryptoCipherSuite` is referencing.

Defining `CryptoServicePrimitive` elements couples the TLS configuration of the System Model tightly to the `Csm` module configuration which demands deep knowledge of the `Csm` for setting up the TLS part of the system model. Moreover, software suppliers might deviate from the `Csm` standard when it comes to the configuration of `CsmPrimitive` containers. As a consequence, two stack vendors might require differently configured `CryptoServicePrimitive` elements for modeling the same cipher suite.

For all these shortcomings, it is recommended to define TLS connections that use standard cipher suites by defining IANA parameters [29] instead of referencing to `CryptoServicePrimitives`. Defining `CryptoServicePrimitives` can be the solution to model non-standard cipher suites, however they still require custom support from vendors.

#### 6.7.5.14.2 Modeling TLS using IANA Parameters

IANA provides a set of TLS Parameters [29] to specify the properties of standardized cipher suites, which are partly also available in the TLS part of AUTOSAR System Models:

- `TlsCryptoCipherSuite.cipherSuiteId`
- `TlsCryptoCipherSuite.cipherSuiteShortLabel`

and, if the cipher suite requires key exchange:

- `CryptoEllipticCurveProps.namedCurveId`
- `CryptoSignatureScheme.signatureSchemeId`.

The specification of these parameters defines *what* a TLS Connection and their cipher suites are in contrast to the first approach which defines *how* they operate. The specification of a standardized cipher suite allows to derive the `CsmPrimitives` required for its operation without tight coupling to the specifics of the `Csm` configuration.

**[constr\_3668] Existence of `TlsCryptoCipherSuite.cipherSuiteShortLabel`**  
[If a `TlsCryptoCipherSuite.cipherSuiteShortLabel` is defined then:

- the attribute `TlsCryptoCipherSuite.cipherSuiteId` shall be defined as well

- the value of `TlsCryptoCipherSuite.cipherSuiteShortLabel` shall match the *Description* value corresponding to the *Value* field defined in `TlsCryptoCipherSuite.cipherSuiteId` according to `TlsCryptoCipherSuite` Parameter set defined in [29].

]()

Common parameters:

The TLS part of the system model specifies a set of entities and parameters that can be configured in both alternatives. They allow the definition of certificates or pre-shared Keys which the cipher suites are using and the definition of extensions e.g. for increasing the security of a TLS connection:

- `TlsCryptoCipherSuite.priority`
- `TlsCryptoCipherSuite.version`
- `TlsCryptoCipherSuite.pskIdentity`
- `TlsCryptoCipherSuite.certificate`
- `TlsCryptoCipherSuite.remoteCertificate`
- `TlsCryptoServiceMapping.useClientAuthenticationRequest`
- `TlsCryptoServiceMapping.useSecurityExtensionRecordSizeLimit`
- All parameters specified in `TlsCryptoCipherSuiteProps`.

For Details on `TlsCryptoCipherSuite.cipherSuiteId` and `TlsCryptoCipherSuite.cipherSuiteShortLabel` see [29] section "TLS Cipher Suites".

For Details on `CryptoEllipticCurveProps` and `namedCurveId` see [29] section "TLS Supported Groups".

For Details on `CryptoSignatureScheme` and `signatureSchemeId` see [29] section "TLS SignatureScheme".

#### 6.7.5.15 IPsec


IPsec is a protocol suite that provides cryptographic protection for IP datagrams in IPv4 and IPv6 network packets.

IPsec uses a security association to specify security properties that are shared between the communicating parties. The security association defines a relationship between two or more parties and determines which security services will be used to communicate securely. In other words the security association serves as a "contract" between the different devices.

A single security association protects data in one communication direction. Two security associations shall be present to secure traffic in both directions. Each security association can provide encryption, data integrity and data authentication.

In addition the senders and receivers of IP datagrams can determine the required protection for an IP packet according to IPsec security policies.

These are rules that define how datagrams are processed that are received by a device. For example, security policies are used to decide if a particular packet needs to be dropped or needs to be processed by IPsec.

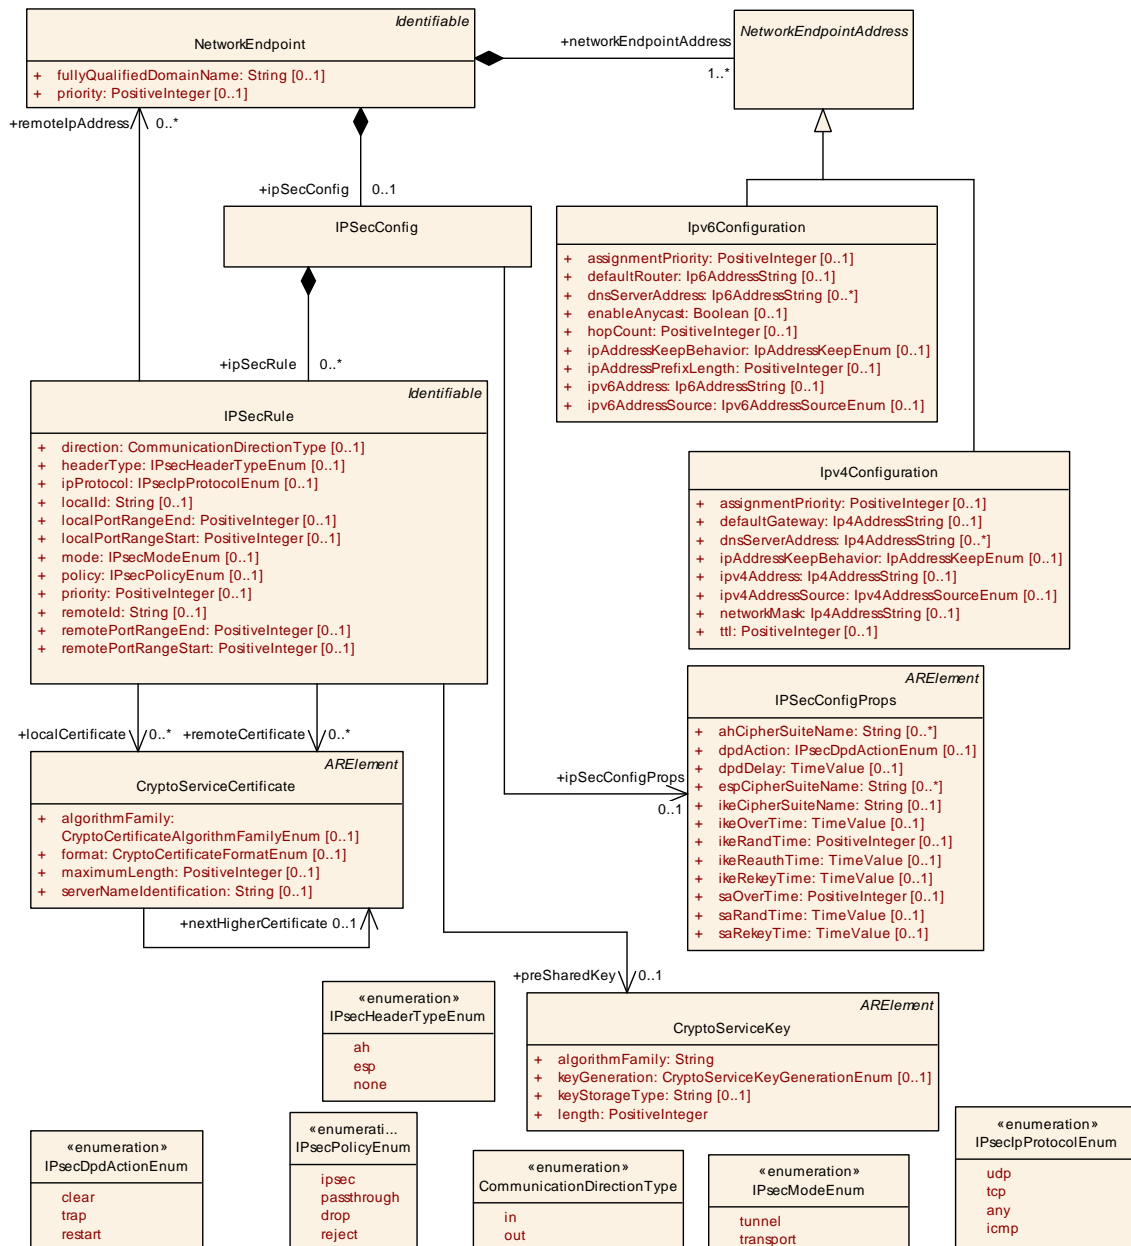

**Figure 6.57: IPsec configuration model**

[TPS\_SYST\_02265] Configuration of IPsec [The `IPSecConfig` meta-class that is aggregated by a `NetworkEndpoint` in the role `ipSecConfig` provides the ability to

define IPsec settings that are necessary to configure IPsec security associations and IPsec security policies. ] ( )

[TPS\_SYST\_02266] **Definition of IPsecRules** [The `IPSecConfig` meta-class may contain one or several `IPSecRules`. Each `IPSecRule` defines the network connection that is monitored by IPsec by defining the local endpoint and the remote endpoint. Each endpoint is defined by the IP Address and the Tcp/Udp Port. The communication direction for which the `IPSecRule` is valid is defined by the `direction` attribute. ] ( )

<b>Class</b>	<b>IPSecConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	IPsec is a protocol that is designed to provide "end-to-end" cryptographically-based security for IP network connections.			
<b>Base</b>	<code>ARObject</code>			
<b>Aggregated by</b>	<code>NetworkEndpoint.ipSecConfig</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ipSecConfig Props	<code>IPSecConfigProps</code>	0..1	ref	Global IPsec configuration settings that are valid for all <code>IPSecRules</code> that are defined on the <code>NetworkEndpoint</code> .
ipSecRule	<code>IPSecRule</code>	*	aggr	IPsec rules and filters that are defined in the <code>IPSecConfig</code> for a specific <code>NetworkEndpoint</code> .

**Table 6.194: IPSecConfig**

<b>Class</b>	<b>IPSecRule</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This element defines an IPsec rule that describes communication traffic that is monitored, protected and filtered.			
<b>Base</b>	<code>ARObject</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
<b>Aggregated by</b>	<code>IPSecConfig.ipSecRule</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
direction	<code>CommunicationDirectionType</code>	0..1	attr	This attribute defines the direction in which the traffic is monitored. If this attribute is not set a bidirectional traffic monitoring is assumed.
headerType	<code>IPsecHeaderTypeEnum</code>	0..1	attr	Header type specifying the IPsec security mechanism.
ipProtocol	<code>IPsecIpProtocolEnum</code>	0..1	attr	This attribute defines the relevant IP protocol used in the Security Policy Database (SPD) entry.
localCertificate	<code>CryptoServiceCertificate</code>	*	ref	This reference identifies the applicable certificate used for a local authentication.
localId	<code>String</code>	0..1	attr	This attribute defines how the local participant should be identified for authentication.
localPortRange End	<code>PositiveInteger</code>	0..1	attr	This attribute restricts the traffic monitoring and defines an end value for the local port range.  If this attribute is not set then this rule shall be effective for all local ports.  Please note that port ranges are currently not supported in the AUTOSAR AP's operating system backend. If AP systems are involved, each IPsec rule may only contain a single port.





Class	IPSecRule			
localPortRangeStart	PositiveInteger	0..1	attr	This attribute restricts the traffic monitoring and defines a start value for the local port range.  If this attribute is not set then this rule shall be effective for all local ports.  Please note that port ranges are currently not supported in the AUTOSAR AP's operating system backend. If AP systems are involved, each IPsec rule may only contain a single port.
mode	<a href="#">IPsecModeEnum</a>	0..1	attr	This attribute defines the type of the connection.
policy	<a href="#">IPsecPolicyEnum</a>	0..1	attr	An IPsec policy defines the rules that determine which type of IP traffic needs to be secured using IPsec and how that traffic is secured.
preSharedKey	<a href="#">CryptoServiceKey</a>	0..1	ref	This reference identifies the applicable cryptographic key used for authentication.
priority	PositiveInteger	0..1	attr	This attribute defines the priority of the IPSecRule (SPD entry). The processing of entries is based on priority, starting with the highest priority "0".
remoteCertificate	<a href="#">CryptoServiceCertificate</a>	*	ref	This reference identifies the applicable certificate used for a remote authentication.
remoteld	<a href="#">String</a>	0..1	attr	This attribute defines how the remote participant should be identified for authentication.
remotelpAddress	<a href="#">NetworkEndpoint</a>	*	ref	Definition of the remote NetworkEndpoint. With this reference the connection between the local NetworkEndpoint and the remote NetworkEndpoint is described on which the traffic is monitored.
remotePortRangeEnd	PositiveInteger	0..1	attr	This attribute restricts the traffic monitoring and defines an end value for the remote port range.  If this attribute is not set then this rule shall be effective for all local ports.  Please note that port ranges are currently not supported in the AUTOSAR AP's operating system backend. If AP systems are involved, each IPsec rule may only contain a single port.
remotePortRangeStart	PositiveInteger	0..1	attr	This attribute restricts the traffic monitoring and defines a start value for the remote port range.  If this attribute is not set then this rule shall be effective for all local ports.  Please note that port ranges are currently not supported in the AUTOSAR AP's operating system backend. If AP systems are involved, each IPsec rule may only contain a single port.

**Table 6.195: IPSecRule**

<b>Class</b>	<b>IPSecConfigProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
<b>Note</b>	This element holds all the attributes for configuration of IPsec that are independent of specific IPsec rules. <b>Tags:</b> atp.recommendedPackage=IPSecConfigProps			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





<b>Class</b>	<b>IPSecConfigProps</b>			
ahCipherSuite Name	<a href="#">String</a>	*	attr	AH (Authentication Header) algorithm to be used for the connection, e.g. HMAC/SHA2-256
dpdAction	<a href="#">IPsecDpdActionEnum</a>	0..1	attr	This attribute defines what to do if the peer is considered dead. If not configured "restart" shall be assumed.
dpdDelay	TimeValue	0..1	attr	This attribute describes the interval to check the liveness of a peer actively using IKEv2 INFORMATIONAL exchanges. Active DPD checking is only enforced if no IKE or ESP/AH packet has been received for the configured DPD delay. In not configured the value "5 minutes" shall be assumed.
espCipherSuite Name	<a href="#">String</a>	*	attr	ESP (Encapsulating Security Payload) algorithm that provides encryption and optional authentication for the connection, e.g. AES-128+SHA2-256.
ikeCipherSuite Name	<a href="#">String</a>	0..1	attr	IKE encryption/authentication algorithms to be used for the connection.
ikeOverTime	TimeValue	0..1	attr	This attribute describes the hard deadline when an SA becomes invalid in percentage. Example: ikeOverTime of max(ikeReauthTime, ikeRekey Time). Default: 10 %
ikeRandTime	PositiveInteger	0..1	attr	This attribute defines in percentage by how long before the expiration of ikeReauthTime and ikeRekeyTime will be rekeyed/reauthenticated. Default: 10%
ikeReauthTime	TimeValue	0..1	attr	This attribute defines the absolute time after which an IKE SA will be reauthenticated. 0 means reauthentication is disabled.
ikeRekeyTime	TimeValue	0..1	attr	This attribute defines the absolute time after which an IKE SA will be rekeyed. 0 means rekey is disabled.
saOverTime	PositiveInteger	0..1	attr	This attribute describes the hard deadline when an IPsec SA becomes invalid in percentage. Example: saOverTime * saRekeyTime. Default: 110%
saRandTime	TimeValue	0..1	attr	This attribute defines by how long before the expiration of saRekeyTime will be rekeyed.
saRekeyTime	TimeValue	0..1	attr	This attribute defines the absolute time after which an IPsec SA will be rekeyed. 0 means rekey is disabled.

**Table 6.196: IPSecConfigProps**

<b>Enumeration</b>	<b>IPsecIpProtocolEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	Definition of supported TcpIp protocols that are supported in Security Policy Database (SPD) entries in IPsec configurations.
<b>Aggregated by</b>	<a href="#">IPSecRule.ipProtocol</a>
<b>Literal</b>	<b>Description</b>





Enumeration	IPsecIpProtocolEnum
any	ANY protocol <b>Tags:</b> atp.EnumerationLiteralIndex=3
icmp	Internet Control Message Protocol (ICMP) <b>Tags:</b> atp.EnumerationLiteralIndex=2
tcp	TCP Protocol <b>Tags:</b> atp.EnumerationLiteralIndex=1
udp	UDP Protocol <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 6.197: IPsecIpProtocolEnum**

**[TPS\_SYST\_02270] Definition of general IPsec configuration settings** [General configuration properties that are independent of particular `IPSecRules` are collected in the `IPSecConfigProps` element that is referenced from the `IPSecConfig` in the role `ipSecConfigProps`.]()

**[TPS\_SYST\_02267] IPsec policy** [The `IPSecRule.policy` attribute defines how IP packets are handled that are going over the network connection defined by the `IPSecRule`. In detail it defines whether the IP packet is processed by IPsec or not.]()

Enumeration	IPsecPolicyEnum
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	Defines the filter actions that are supported by IPsec.
<b>Aggregated by</b>	<code>IPSecRule.policy</code>
<b>Literal</b>	<b>Description</b>
drop	Signifying that packets should be discarded <b>Tags:</b> atp.EnumerationLiteralIndex=3
ipsec	Signifying that packets should be protected. <b>Tags:</b> atp.EnumerationLiteralIndex=1
passthrough	Signifying that no IPsec processing should be done at all. <b>Tags:</b> atp.EnumerationLiteralIndex=2
reject	Signifying that packets should be discarded and a diagnostic ICMP returned. <b>Tags:</b> atp.EnumerationLiteralIndex=4

**Table 6.198: IPsecPolicyEnum**

IPsec can be configured to operate in two different modes, Tunnel and Transport mode. With tunnel mode, the entire IP packet is protected by IPsec. IPsec wraps the original packet, encrypts it and adds a new IP header to it. The tunnel mode is most commonly used between VPN gateways and the IP addresses of the newly added outer IP header are that of the VPN Gateways. In other words the traffic between the two VPN Gateways is protected and each gateway acts as a proxy for the hosts behind it.

The transport mode provides the protection of the Data Payload of the IP datagram with an AH or ESP header. The IP Header remains the same and IPsec inserts its header between the IP header and the upper level headers. The IPsec transport mode

can be used when securing traffic between two hosts or between a host and a VPN gateway.

**[TPS\_SYST\_02268] IPsec mode** [The `IPSecRule.mode` attribute defines whether the IP packet is processed in the `transport` or `tunnel` mode.]()

Please note that AUTOSAR currently supports only the `transport mode` as configuration option.

<i>Enumeration</i>	<b>IPsecModeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	This enumeration describes the supported IPsec modes.
<b>Aggregated by</b>	<code>IPSecRule.mode</code>
<b>Literal</b>	<b>Description</b>
transport	Signifying that the IPsec transport mode is used. With the transport mode the original IP header is retained and only the IP payload and ESP trailer is encrypted. <b>Tags:</b> atp.EnumerationLiteralIndex=1
tunnel	Signifying that the IPsec tunnel mode is used. With tunnel mode, the entire original IP packet is protected by IPsec. This means IPsec wraps the original packet, encrypts it, adds a new IP header and sends it to the other side. <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 6.199: IPsecModeEnum**

IPsec uses two protocols:

- AH - Authentication Header
- ESP - Encapsulating Security Payload

The AH protocol provides a mechanism for authentication only and authenticates the entire IP packet, including the outer IP header.

The ESP protocol provides data confidentiality (encryption) and/or authentication (data integrity, data origin authentication, and replay protection).

When ESP is used in transport mode, the IP payload is encrypted and the original IP header is moved to the front of the message. The ESP header is inserted after the IP header and is signed together with the IP payload. The original IP header remains unprotected.

When ESP is used in tunnel mode a new IP Header is created and the ESP header is added in front of the original IP Packet. The entire original IP packet is encrypted and signed in this mode.

**[TPS\_SYST\_02269] IPsec AH and ESP protocol configuration** [In the `IPSecRule` it is possible to define the IPsec protocol that shall be used to protect IP packets that are going over the defined network connection. The attribute `headerType` defines whether AH, ESP or neither one is used.]()



<b>Enumeration</b>	<b>IPsecHeaderTypeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
<b>Note</b>	IPsec Header Type options
<b>Aggregated by</b>	<a href="#">IPSecRule.headerType</a>
<b>Literal</b>	<b>Description</b>
ah	Authentication Header (AH) <b>Tags:</b> atp.EnumerationLiteralIndex=0
esp	Encapsulating Security Payloads (ESP) <b>Tags:</b> atp.EnumerationLiteralIndex=1
none	No header <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 6.200: IPsecHeaderTypeEnum**

**[TPS\_SYST\_02271] IPsec AH and ESP CipherSuites** [The attributes [ahCipherSuiteName](#) and [espCipherSuiteName](#) define the supported AH and ESP algorithms.]()

The naming convention for [ahCipherSuiteName](#), [espCipherSuiteName](#) and [IPSecConfigProps.ikeCipherSuiteName](#) shall follow the naming convention for cryptographic primitives that is defined in [31].

**[TPS\_SYST\_02272] IPsec Internet Key Exchange protocol configuration** [In the [IPSecRule](#) it is possible to define how IKE protocol authenticates the remote party and how the local party authenticates itself to the remote party. In other words both sides use the same method. The usage of the [IPSecRule.preSharedKey](#) reference defines that the pre-shared key is used. The usage of the [IPSecRule.localCertificate](#) and [IPSecRule.remoteCertificate](#) defines that Digital Signature Authentication is used.]()

**[constr\_5163] Existence of attribute [IPSecRule.headerType](#)** [For each [IPSecRule](#), the attribute [headerType](#) shall exist at the time when the COM Stack is generated.]()

**[constr\_5164] Existence of attribute [IPSecRule.ipProtocol](#)** [For each [IPSecRule](#), the attribute [ipProtocol](#) shall exist at the time when the COM Stack is generated.]()

**[constr\_5165] Existence of attribute [IPSecRule.policy](#)** [For each [IPSecRule](#), the attribute [policy](#) shall exist at the time when the COM Stack is generated.]()

Please note that the supported IKE CipherSuites are configured with the [IPSecConfigProps.ikeCipherSuiteName](#). The [IPSecConfigProps](#) contains additional IKE specific configuration settings.

Enumeration	IPsecDpdActionEnum
Package	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication
Note	Potential Dead Peer Detection (Dpd) Actions
Aggregated by	<a href="#">IPSecConfigProps.dpdAction</a>
Literal	Description
clear	Deletes the SA. <b>Tags:</b> atp.EnumerationLiteralIndex=0
restart	Immediately tries to establish the connection. <b>Tags:</b> atp.EnumerationLiteralIndex=2
trap	tries to establish the connection after traffic is sent to the peer. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 6.201: IPsecDpdActionEnum**

**[TPS\_SYST\_02273] Protection of [ProvidedServiceInstance](#) by IPsec** [To describe the protection of an [ProvidedServiceInstance](#) by IPsec the [ProvidedServiceInstance](#) needs to point to an [ApplicationEndpoint](#) in the [localUnicastAddress](#) role and this [ApplicationEndpoint](#) shall point to a [NetworkEndpoint](#) that aggregates the [IPSecConfig](#) and describes the IPsec Security Associations.]()

**[TPS\_SYST\_02274] Protection of [ConsumedServiceInstance](#) by IPsec** [To describe the protection of an [ConsumedServiceInstance](#) by IPsec the [ConsumedServiceInstance](#) needs to point to an [ApplicationEndpoint](#) in the [localUnicastAddress](#) role and this [ApplicationEndpoint](#) shall point to a [NetworkEndpoint](#) that aggregates the [IPSecConfig](#) and describes the IPsec Security Associations.]()


Please note that IP Multicast protection by IPsec is not supported.

#### 6.7.5.16 EthernetFrameType based communication

Please note that with the introduction of the Tcplp Bsw module the description of [AbstractEthernetFrames](#) is no longer necessary for configuration of the AUTOSAR Tcplp Stack.

Nevertheless it may be useful to describe the Ethernet FrameType based communication in some cases, e.g. if a new basic software module like [lee1722Tp](#) is used that is located above the [EthDrv](#) and parallel to the Tcplp Stack. The Ethernet FrameType based communication shall be described without [Pdus](#).

**[constr\_3113] [AbstractEthernetFrame](#) shall not have a [PduToFrameMapping](#)** [It is not allowed to map [Pdus](#) into [AbstractEthernetFrames](#).]()

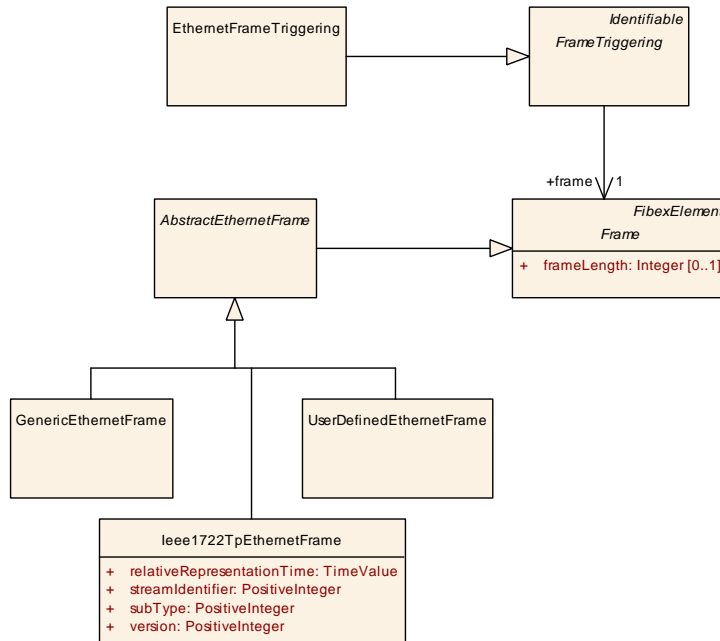

**Figure 6.58: EthernetFrameType based communication**

<b>Class</b>	<b>AbstractEthernetFrame</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetFrame			
<b>Note</b>	Ethernet specific attributes to the Frame.			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Frame, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Subclasses</b>	GenericEthernetFrame, Ieee1722TpEthernetFrame, UserDefinedEthernetFrame			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.202: AbstractEthernetFrame**

<b>Class</b>	<b>EthernetFrameTriggering</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetFrame			
<b>Note</b>	Ethernet specific Frame element.			
<b>Base</b>	ARObject, FrameTriggering, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	PhysicalChannel.frameTriggering			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.203: EthernetFrameTriggering**

<b>Class</b>	<b>GenericEthernetFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetFrame			
<b>Note</b>	This element is used for EthernetFrames without additional attributes that are routed by the Ethlf. <b>Tags:</b> atp.recommendedPackage=Frames			





<b>Class</b>	<b>GenericEthernetFrame</b>			
<b>Base</b>	ARObject, <a href="#">AbstractEthernetFrame</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Frame</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.204: GenericEthernetFrame**

<b>Class</b>	<b>UserDefinedEthernetFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetFrame			
<b>Note</b>	UserDefinedEthernetFrame allows the description of a frame-based communication to Complex Drivers that are located above the EthDrv. <b>Tags:</b> atp.recommendedPackage=Frames			
<b>Base</b>	ARObject, <a href="#">AbstractEthernetFrame</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Frame</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.205: UserDefinedEthernetFrame**

<b>Class</b>	<b>Ieee1722TpEthernetFrame</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetFrame			
<b>Note</b>	Ieee1722Tp Ethernet Frame <b>Tags:</b> atp.recommendedPackage=Frames			
<b>Base</b>	ARObject, <a href="#">AbstractEthernetFrame</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Frame</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
relativeRepresentationTime	TimeValue	1	attr	Defines the time when content shall be presented (in seconds). The actual absolute time is creation time plus relative presentation time
streamIdentifier	PositiveInteger	1	attr	IEEE 1722 stream identifier.
subType	PositiveInteger	1	attr	Protocol type.
version	PositiveInteger	1	attr	Revision of Ieee1722 standard.

**Table 6.206: Ieee1722TpEthernetFrame**

### 6.7.5.17 Restriction in usage of [ProvidedServiceInstance.majorVersion](#)

If several [ProvidedServiceInstances](#) are defined with the same [serviceIdentifier](#) and different [majorVersions](#) and these [ProvidedServiceInstances](#) are referencing the same [ApplicationEndpoint](#) with the [localUnicastAddress](#) ([ProvidedServiceInstances](#) are located on the same Socket) then particular restrictions apply for the system configuration.

In such a scenario the same `MessageId` (`headerId`) may be used for `ServiceInterface` elements like an `Event` in the different `ProvidedServiceInstances` that have different `majorVersions`. It may happen that the same `headerId` is used for `Pdus` that represent the same `ServiceInterface` element even if the `Pdu` layout differs in the different `MajorVersion` `ProvidedServiceInstances` because for example the `dataType` of the `Service Interface` element was changed from one `MajorVersion` to the other.

The reason for these restrictions is the AUTOSAR Architecture in the Classic Platform where one part of the SOME/IP Header is evaluated in the SOME/IP Transformer (`RequestId`, `Protocol Version`, `Interface Version`, `Message Type`, `Return Code`) and the other part in the `SocketAdaptor` (`MessageId`, `Length`). This means that the `Socket Adaptor` is not able to evaluate the `MajorVersion` in the `Pdu`.

The following restrictions apply in case of **ClientServer communication** (`Service Interface Methods`, `Field Getter`, `Field Setter`): If two or more `ProvidedServiceInstances` are defined using the same `serviceIdentifier` and different `majorVersions` and these `ProvidedServiceInstances` are referencing the same `ApplicationEndpoint` via `localUnicastAddress` then the destination IP address, the destination port number, and the Level 4 protocol (`Udp/Tcp`) fields of header of IP packets containing call PDUs that are sent to the `ProvidedServiceInstances` are identical. In such a scenario, the `ProvidedServiceInstances` may still use identical method Ids (thus identical Header Ids) if the following condition applies:

At any point in time only one of the `ProvidedServiceInstances` is active, and only clients of that `ProvidedServiceInstance` send request PDUs to the `ProvidedServiceInstance`.

In all other cases, the method ids of the two `ProvidedServiceInstances` should not overlap.

The following restrictions apply in case of **SenderReceiver communication** (`Service Interface Events` and `Notifier`): If two or more `ProvidedServiceInstances` are defined using the same `serviceIdentifier` and different `majorVersions`, and these `ProvidedServiceInstances` are referencing the same `ApplicationEndpoint` via `localUnicastAddress` then the source IP address, the source port number, and the Level 4 protocol (`Udp`) fields of header of IP packets containing event PDUs that are sent to the clients of the `ProvidedServiceInstances` are identical. In such a scenario, the `ProvidedServiceInstances` may use identical method Ids (i.e. identical Header Ids) if at least one of the following conditions holds for any pair of the `ProvidedServiceInstances`:

- a) At any point in time only one of the `ProvidedServiceInstances` is active
- b) If two or more `ProvidedServiceInstances` can send Events at the same time, the `ProvidedServiceInstances` may still use identical method Ids if at least one of the following IP header fields of the IP packet containing the event is different for any pair of Event PDUs identified by the same Method Id:
  - b1) Destination IP address (== IP address of client)

**b2) Destination port number (== client port number)**

In all other cases, the method ids of the two PSIs should not overlap.

In other words if several `ProvidedServiceInstances` with the same `serviceIdentifier` and different `majorVersions` are located on the same Socket for transmission of particular Events, then the different `ProvidedServiceInstances` need to use a different client Addresses (different Port or IP Address) or the Events of all those `ProvidedServiceInstances` need to have unique MethodIds.


## 6.8 Transport Layer

In AUTOSAR, the Transport Layer has two main purposes: The segmentation and re-assembly of messages that are too long to fit into one frame on the underlying communication cluster, and the re-use of fixed frame identifiers for different message content.

According to the AUTOSAR Layered Software Architecture [15], each type of communication cluster has its own definition of the Transport Layer. Consequently, the peculiarities of the cluster types are addressed in the System Template by having different detailed models for FlexRay, CAN, LIN and J1939. However, all models are embedded into the communication model: They use specialized classes of `TpConfig` as a root element into the TP configuration.

**[TPS\_SYST\_01099] Context of `TpConfig`** [A `TpConfig` element is existing always in the context of exactly one `CommunicationCluster`.] (*RS\_SYST\_00014*)

All Transport Layers will take `IPdus` as input elements, which will be transferred in the form of one or more `NPdus`. A `TpConnection` (`FlexrayTpConnection`, `CanTpConnection`, `LinTpConnection`, `J1939TpConnection`) identifies a connection link between different communication nodes and routes the `Pdus` between them.

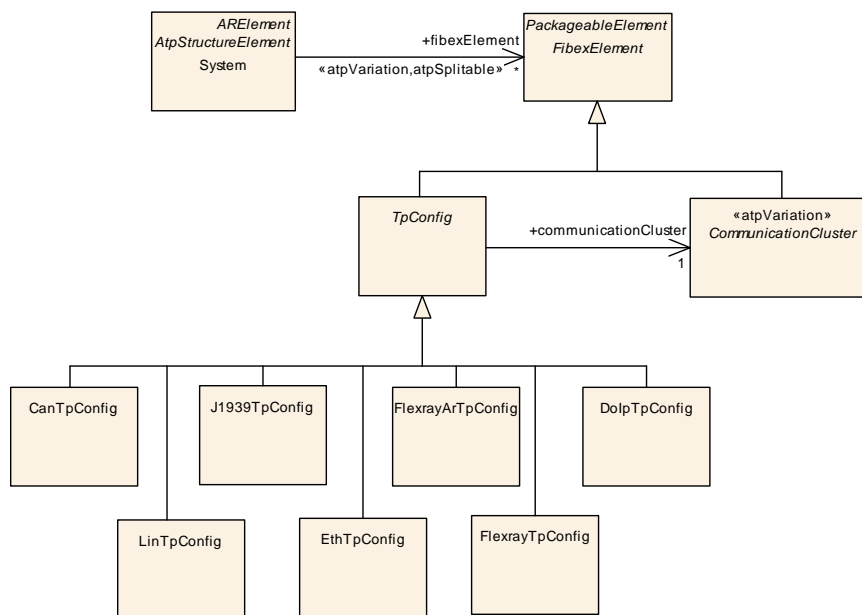

**Figure 6.59: Transport Layer Overview**

Examples in chapter 6.8.9 and chapter 6.8.10 illustrate the usage of the TP model.

<b>Class</b>	<code>TpConfig</code> (abstract)
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols
<b>Note</b>	Contains all configuration elements for AUTOSAR TP.
<b>Base</b>	<code>ARObject</code> , <code>CollectableElement</code> , <code>FibexElement</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>PackageableElement</code> , <code>Referrable</code>





<b>Class</b>	<i>TpConfig</i> (abstract)			
<b>Subclasses</b>	CanTpConfig, DolpTpConfig, EthTpConfig, FlexrayArTpConfig, FlexrayTpConfig, J1939TpConfig, LinTpConfig, SomeipTpConfig			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Cluster	CommunicationCluster	1	ref	A TpConfig is existing always in the context of exactly one CommunicationCluster.

**Table 6.207: TpConfig**

<b>Class</b>	<b>TpAddress</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	An ECUs TP address on the referenced channel. This represents the diagnostic Address.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	FlexrayArTpConfig.tpAddress, FlexrayTpConfig.tpAddress, J1939TpConfig.tpAddress, LinTpConfig.tpAddress			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpAddress	Integer	1	attr	An ECUs TP address on the referenced channel. This represents the diagnostic Address.

**Table 6.208: TpAddress**

**[constr\_3025] Usage of NPdus in TpConnections** [In case several TpConnections use the same Frame ID for their communication needs only one NPdu element per Frame Id shall exist. This constraint applies for all supported AUTOSAR transport protocols (CanTp, LinTp, FrTp, FrArTp and J1939Tp).]()

Note: Depending on the capabilities of the Basic Software implementations of Tp and Interface the ECU Configuration of the respective BSW Modules may utilize more communication elements (NPdus).

Example for an allowed System Template description where the same Frameld is used by two different TpConnections:

```
TpConnection1 --(dataPdu)--> NPdu1 ----> FrameId1
TpConnection1 --(flowControl)--> NPdu2 ----> FrameId2
TpConnection2 --(dataPdu)--> NPdu2 ----> FrameId2
TpConnection2 --(flowControl)--> NPdu1 ----> FrameId1
```

The following Ecu configuration with additional NPdus can still be derived from the above system description:

```
TpConnection1 --(dataPdu)--> NPdu1 ----> FrameId1
TpConnection1 --(flowControl)--> NPdu2 ----> FrameId2
TpConnection2 --(dataPdu)--> NPdu3 ----> FrameId2
TpConnection2 --(flowControl)--> NPdu4 ----> FrameId1
```

**[constr\_3090] Tpsdu transmission on a PhysicalChannel** [The IPdu that is referenced by a TpConnection in the role tpsdu shall be referenced by exactly one PduTriggering aggregated on the PhysicalChannel of the TpConnection.]()



The corresponding `PduTriggering` for the `IPdu` referenced from the `TpConnection` in the role `tpSdu` is aggregated by the `PhysicalChannel` which points to the same `CommunicationConnector` which is referenced by `TpNode` that this `TpConnection` points to.

Please note that with [constr\_3090] the multiple transmission of the same `TpSdu` over a specific channel using TP is only possible if several `IPdus` and `TpConnections` are created.

### 6.8.1 Transport Layer Routing

The transformations in the TP modules take a significant amount of time and resources and therefore two different Transport Layer routing approaches are supported by AUTOSAR.

**[TPS\_SYST\_01100] TP routing without using transport protocol modules (low-level routing)** [The behavior can be optimized if source and target use the same transport protocol (e.g. CanTp-to-CanTp routing). In this case the inbound `NPDUs` can be directly forwarded to the `PduR` and then sent on the outbound bus without any (resource consuming) TP module involvement.] ([RS\\_SYST\\_00014](#))

**[TPS\_SYST\_01101] TP routing using transport protocol modules** [In case that transport protocol modules are involved in the routing operation the incoming `NPDUs` need to be:

- forwarded to corresponding inbound TP module and reassembled into an `SDU` (represented as `IPdu`)
- the `SDU` needs to be forwarded to the `PduR`
- the `PduR` routes the `SDU` to the outgoing TP module
- the outbound TP module segments the `SDU` into `NPDUs` which are then sent on the target bus.

] ([RS\\_SYST\\_00014](#))

### 6.8.2 FlexRay ISO Transport Layer


The FlexRay ISO 10681-2 Transport Layer supports multiple sessions, i.e. multiple segmented transfers can be handled at the same time. Thus, multiple `FlexrayTpConnections` can be defined on the same ECU. Each `FlexrayTpConnection` is controlled by configuration parameters defined in `FlexrayTpConnectionControl`.

**[TPS\_SYST\_01102] FlexrayTpConnectionControl reuse** [The same `FlexrayTpConnectionControl` may be reused for an arbitrary number of `FlexrayTpConnections`.] ([RS\\_SYST\\_00014](#))

A `FlexrayTpConnection` defines the way of communication between a sender and a receiver and uses a `FlexrayTpPduPool` of `NPdu`s to transmit data to the FlexRay Interface.

**[TPS\_SYST\_01103] `FlexrayTpConnection` shall specify one `txPduPool`** [Each `FlexrayTpConnection` shall specify one `txPduPool` with at least one `nPdu`.] (*RS\_SYST\_00014*)

In order to achieve a higher bandwidth a `txPduPool` may contain more than one transmit `NPdu`, e.g. if all referenced `NPdu`s are transmitted in different `FlexrayFrames` in the same cycle.

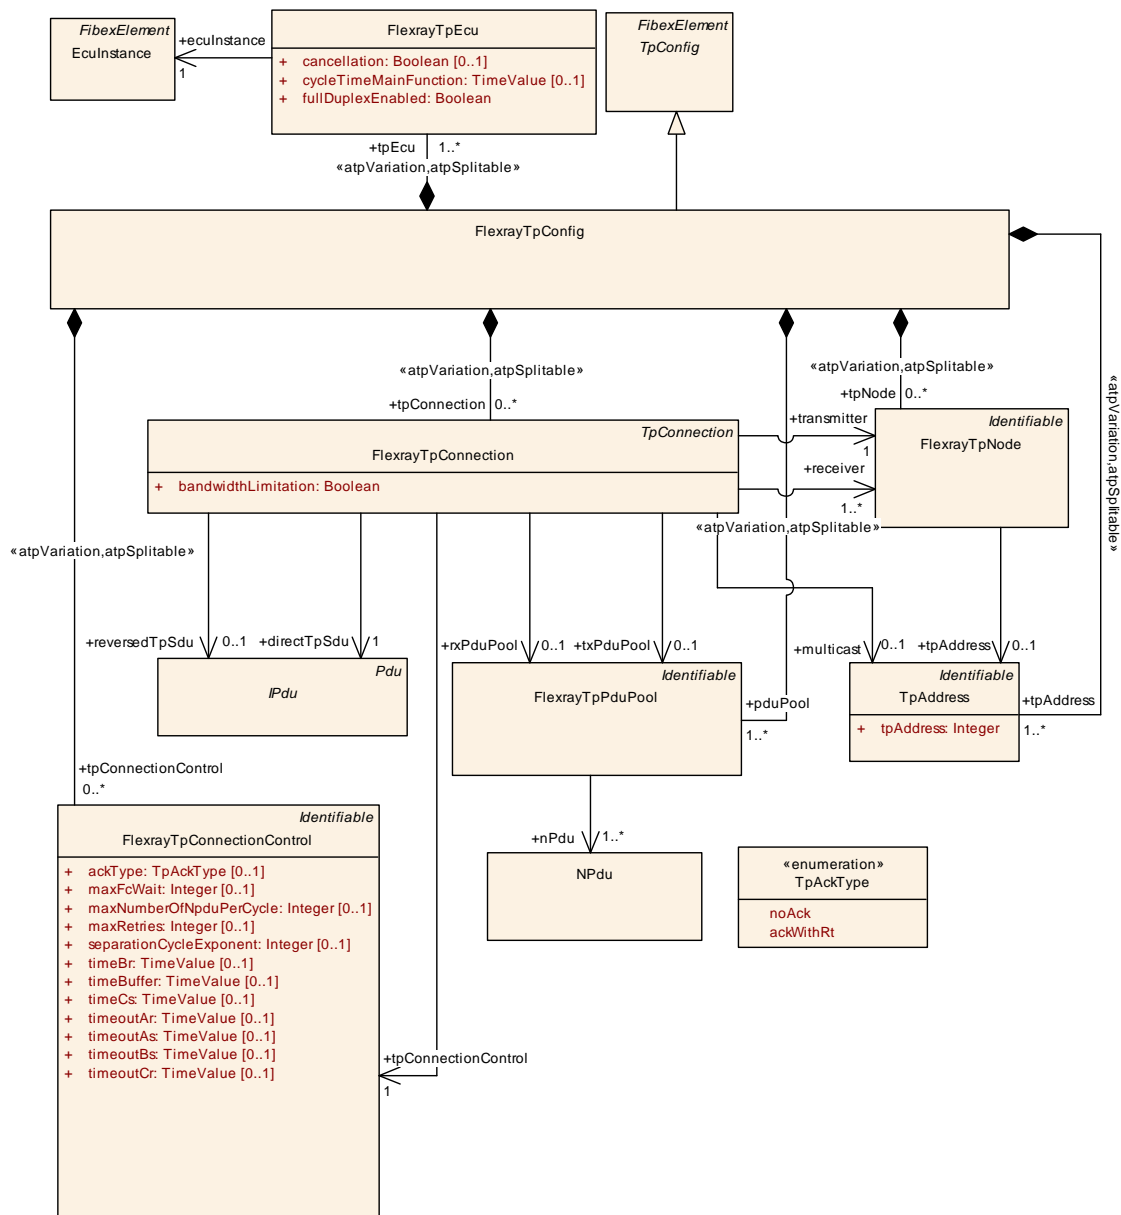

**Figure 6.60: FlexRay ISO Transport Layer Configuration (TransportProtocols: FlexRay-IsoTransportProtocol)**

[FlexrayTpConnections](#) are specifically used for communication between one source and one or several target devices. These communication partners are specified using the [transmitter](#) and [receiver](#) associations to [FlexrayTpNodes](#), providing the diagnostic [tpAddress](#) and the connection to the topology.

**[TPS\_SYST\_01104] FlexrayTpConnection with several receivers** [In case of several receivers a multicast [tpAddress](#) shall be used.] ([RS\\_SYST\\_00014](#))

The actual payload to be transported by the [FlexrayTpConnection](#) is specified by using either one or two references to [IPdu](#)s, depending on whether the connection shall be used unidirectional (one reference) or bidirectional (two references).

<b>Class</b>	<b>FlexrayTpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	<p>This element defines exactly one FlexRay ISO TP Configuration.</p> <p>One FlexRayTpConfig element shall be created for each FlexRay Network in the System that uses Flex Ray Iso Tp.</p> <p><b>Tags:</b>atp.recommendedPackage=TpConfigs</p>			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">TpConfig</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
pduPool	<a href="#">FlexrayTpPduPool</a>	1..*	aggr	<p>Configuration of FlexRay TP Pdu Pools.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation</p> <p><b>Tags:</b> atp.Splitkey=pduPool.shortName, pduPool.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>
tpAddress	<a href="#">TpAddress</a>	1..*	aggr	<p>Collection of TpAddresses.</p> <p>atpVariation: Derived, because EcuInstance can vary.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation</p> <p><b>Tags:</b> atp.Splitkey=tpAddress.shortName, tpAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>
tpConnection	<a href="#">FlexrayTpConnection</a>	*	aggr	<p>Configuration of FlexRay TP Connections.</p> <p>atpVariation: Derived, because TpNode can vary.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation</p> <p><b>Tags:</b> atp.Splitkey=tpConnection, tpConnection.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>
tpConnection Control	<a href="#">FlexrayTpConnection Control</a>	*	aggr	<p>Configuration of FlexRay TP Connection Controls.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation</p> <p><b>Tags:</b> atp.Splitkey=tpConnectionControl.shortName, tpConnectionControl.variationPoint.shortLabel vh.latestBindingTime=postBuild</p>





Class	FlexrayTpConfig			
tpEcu	<a href="#">FlexrayTpEcu</a>	1..*	aggr	Collection of TP Ecus atpVariation: Derived, because EcuInstance can vary. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=tpEcu, tpEcu.variationPoint.shortLabel vh.latestBindingTime=postBuild
tpNode	<a href="#">FlexrayTpNode</a>	*	aggr	Senders and receivers of FlexRay TP messages. atpVariation: Derived, because EcuInstance can vary. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=tpNode.shortName, tpNode.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.209: FlexrayTpConfig**

Class	FlexrayTpConnectionControl			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	Configuration parameters to control a FlexRay TP connection.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">FlexrayTpConfig.tpConnectionControl</a>			
Attribute	Type	Mult.	Kind	Note
ackType	TpAckType	0..1	attr	This parameter defines the type of acknowledgement which is used for the specific channel.
maxFcWait	Integer	0..1	attr	This attribute defines the maximum number of Flow Control N-PDUs with FlowState "WAIT".
maxNumberOfNpduPerCycle	Integer	0..1	attr	This parameter limits the number of N-Pdus the sender is allowed to transmit within a FlexRay cycle.
maxRetries	Integer	0..1	attr	This parameter defines the maximum number of retries (if retry is configured for the particular channel).
separationCycleExponent	Integer	0..1	attr	Exponent to calculate the minimum number of "Separation Cycles" the sender has to wait for the next transmission of an FrTp N-Pdu.
timeBr	TimeValue	0..1	attr	Time (in seconds) until transmission of the next Flow Control N-PDU.
timeBuffer	TimeValue	0..1	attr	This parameter defines the time of waiting for the next try to get a Tx or Rx buffer.  This parameter is equivalent to the temporal distance between two FC.WT N-Pdus in case the buffer request returns busy.  Specified in seconds.
timeCs	TimeValue	0..1	attr	Time (in seconds) until transmission of the next ConsecutiveFrame NPdu / LastFrame NPdu.
timeoutAr	TimeValue	0..1	attr	This parameter states the timeout between the PDU transmit request of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the Flex Ray Interface on the receiver side (for FC or AF).  Specified in seconds.





Class		FlexrayTpConnectionControl		
timeoutAs	TimeValue	0..1	attr	This attribute states the timeout between the PDU transmit request for the first PDU of the group used in the current connection of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the Flex Ray Interface (when having sent the last PDU of the group used in this connection) on the sender side (SF-x, FF-x, CF or FC (in case of Transmit Cancellation)). Specified in seconds.
timeoutBs	TimeValue	0..1	attr	This parameter defines the timeout in seconds for waiting for an FC or AF on the sender side in a 1:1 connection.
timeoutCr	TimeValue	0..1	attr	This parameter defines the timeout value in seconds for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side. Specified in seconds.

**Table 6.210: FlexrayTpConnectionControl**

Class		FlexrayTpConnection		
Package	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
Note	<p>A connection identifies the sender and the receiver of this particular communication. The FlexRayTp module routes a Pdu through this connection.</p> <p>In a System Description the references to the PduPools are mandatory. In an ECU Extract these references can be optional: On unicast connections these references are always mandatory. On multicast the txPduPool is mandatory on the sender side. The rxPduPool is mandatory on the receiver side. On Gateway ECUs both references are mandatory.</p>			
Base	ARObject, TpConnection			
Aggregated by	FlexrayTpConfig.tpConnection			
Attribute	Type	Mult.	Kind	Note
bandwidthLimitation	Boolean	1	attr	Specifies whether the connection requires a bandwidth limitation or not.
directTpSdu	IPdu	1	ref	Reference to the IPdu that is segmented by the Transport Protocol.
multicast	TpAddress	0..1	ref	TP address for 1:n connections.
receiver	FlexrayTpNode	1..*	ref	The target of the TP connection.
reversedTpSdu	IPdu	0..1	ref	Reference to the IPdu that is segmented by the Transport Protocol. If support of both sending and receiving is used, this association references the IPdu used for the additional second direction.
rxPduPool	FlexrayTpPduPool	0..1	ref	<p>A connection has a reference to a set of NPdus (FrTpRx PduPool) which are defined for receiving data via this particular connection.</p> <p>The following constraint is valid only for the System Extract/ECU Extract: In case this connection is applied to the transmitter the rxPduPool holds the actually received NPdus. In case this connection is applied to the receiver the rxPduPool holds the actually sent NPdus.</p>
tpConnectionControl	FlexrayTpConnectionControl	1	ref	Reference to the connection control.
transmitter	FlexrayTpNode	1	ref	The source of the TP connection.





Class	FlexrayTpConnection			
txPduPool	<a href="#">FlexrayTpPduPool</a>	0..1	ref	<p>A connection has a reference to a set of NPdus (FrTpTx PduPool) which are defined for sending data via this particular connection.</p> <p>The following constraint is valid only for the System Extract/ECU Extract: In case this connection is applied to the transmitter the txPduPool holds the actually sent NPdus. In case this connection is applied to the receiver the txPduPool holds the actually received NPdus.</p>

**Table 6.211: FlexrayTpConnection**

The [FlexrayTpConnection](#) refers to the [FlexrayTpPduPool](#) in two roles: [rxPduPool](#) and [txPduPool](#).

**[TPS\_SYST\_01064] Transmit/Receive Semantics of Pdu Pools** [The transmit/receive semantics of Pdu Pools depends on the role of the regarded ECU:

- If the ECU is the transmitter then the [txPduPool](#) holds the sent NPdus and the [rxPduPool](#) holds the received NPdus.
- If the ECU is the receiver then the the [txPduPool](#) holds the received NPdus and the [rxPduPool](#) holds the sent NPdus.

]()

The following example shows how this differentiation may be used:

System Description:

SENDER = A

RECEIVER = B

TxPool = PDU\_1

RxPool = PDU\_2

ECU Extract of A:

SENDER = A

TxPool = PDU\_1 -> sent Pdus

RxPool = PDU\_2 -> received Pdus


Since on receiver side the PDU\_1 is received and PDU\_2 is sent (from a local point of view) the export shall look like this:

ECU Extract of B:

RECEIVER = B

TxPool = PDU\_1 -> received Pdus

RxPool = PDU\_2 -> sent Pdus

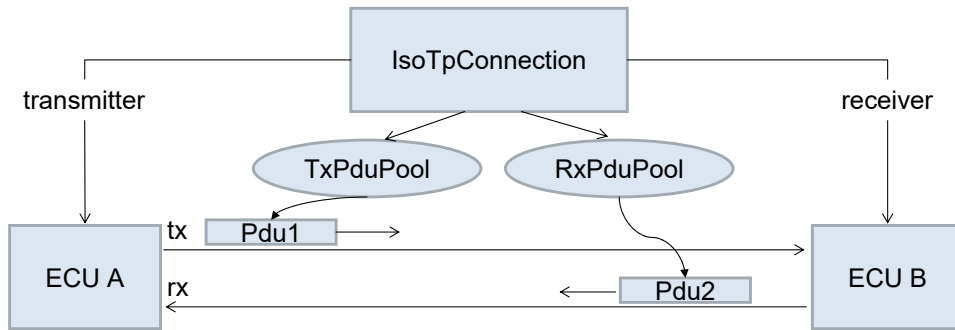

**Figure 6.61: IsoTp Example**

<b>Class</b>	<b>FlexrayTpPduPool</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	FlexrayTpPduPool is a set of N-PDUs which are defined for FrTp sending or receiving purpose.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">FlexrayTpConfig.pduPool</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nPdu	<a href="#">NPdu</a>	1..*	ref	Reference to NPdus that are part of the PduPool.

**Table 6.212: FlexrayTpPduPool**

<b>Class</b>	<b>FlexrayTpNode</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	TP Node (Sender or Receiver) provides the TP Address and the connection to the Topology description.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">FlexrayTpConfig.tpNode</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
connector	<a href="#">Communication Connector</a>	*	ref	Association to one or more physical connectors (max number of connectors for FlexRay: 2).  In a System Description this reference is mandatory. In an ECU Extract this reference is optional (references to ECUs that are not part of the ECU Extract shall be avoided).
tpAddress	<a href="#">TpAddress</a>	0..1	ref	Reference to the TP Address that is used by the TpNode. This reference is optional in case that the multicast TP Address is used (reference from TpConnection).

**Table 6.213: FlexrayTpNode**

<b>Class</b>	<b>FlexrayTpEcu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	ECU specific TP configuration parameters. Each TpEcu element has a reference to exactly one ECUInstance in the topology.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">FlexrayTpConfig.tpEcu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
cancellation	Boolean	0..1	attr	With this switch Tx and Rx Cancellation can be turned on or off.





<b>Class</b>	<b>FlexrayTpEcu</b>			
cycleTimeMain Function	TimeValue	0..1	attr	The period between successive calls to the Main Function of the AUTOSAR TP. Specified in seconds.
ecuInstance	<a href="#">EcuInstance</a>	1	ref	Connection to the ECUInstance in the Topology
fullDuplex Enabled	Boolean	1	attr	The full duplex mechanisms is enabled if this attribute is set to true. Otherwise half duplex is enabled.

**Table 6.214: FlexrayTpEcu**




### 6.8.3 FlexRay AUTOSAR Transport Layer

This section describes a Non-ISO FlexRay TP protocol that is supported by AUTOSAR in addition to the FlexRay ISO 10681-2 TP (see section 6.8.2). The Non-ISO FlexRay Transport Layer supports multiple sessions, i.e. multiple segmented transfers can be handled at the same time.

A `FlexrayArTpChannel` provides a Tx and an Rx pool of `NPdus` which are used by the associated `FlexrayArTpConnections`.

`FlexrayArTpConnections` are used for communication between one `source` and one or more `target` device(s). These communication partners are specified by the `source` and `target` associations to `FlexrayArTpNodes`, providing the diagnostic `TpAddresses` and the connection to the topology description. The actual payload to be transported by the `FlexrayArTpConnection` is identified by the references `directTpSdu` and `reversedTpSdu` to `IPdus`. When one of the two SDUs is omitted, the connection shall be used unidirectional.

**[constr\_5315] FlexrayArTpConnections within the same FlexrayArTpChannel not allowed to have the same address information** [`FlexrayArTpConnections` that are aggregated by the same or reverse `FlexrayArTpChannel` are not allowed to reference the same pair of `FlexrayArTpNodes` at the time when the Ecu configuration of the COM stack is created.] ()

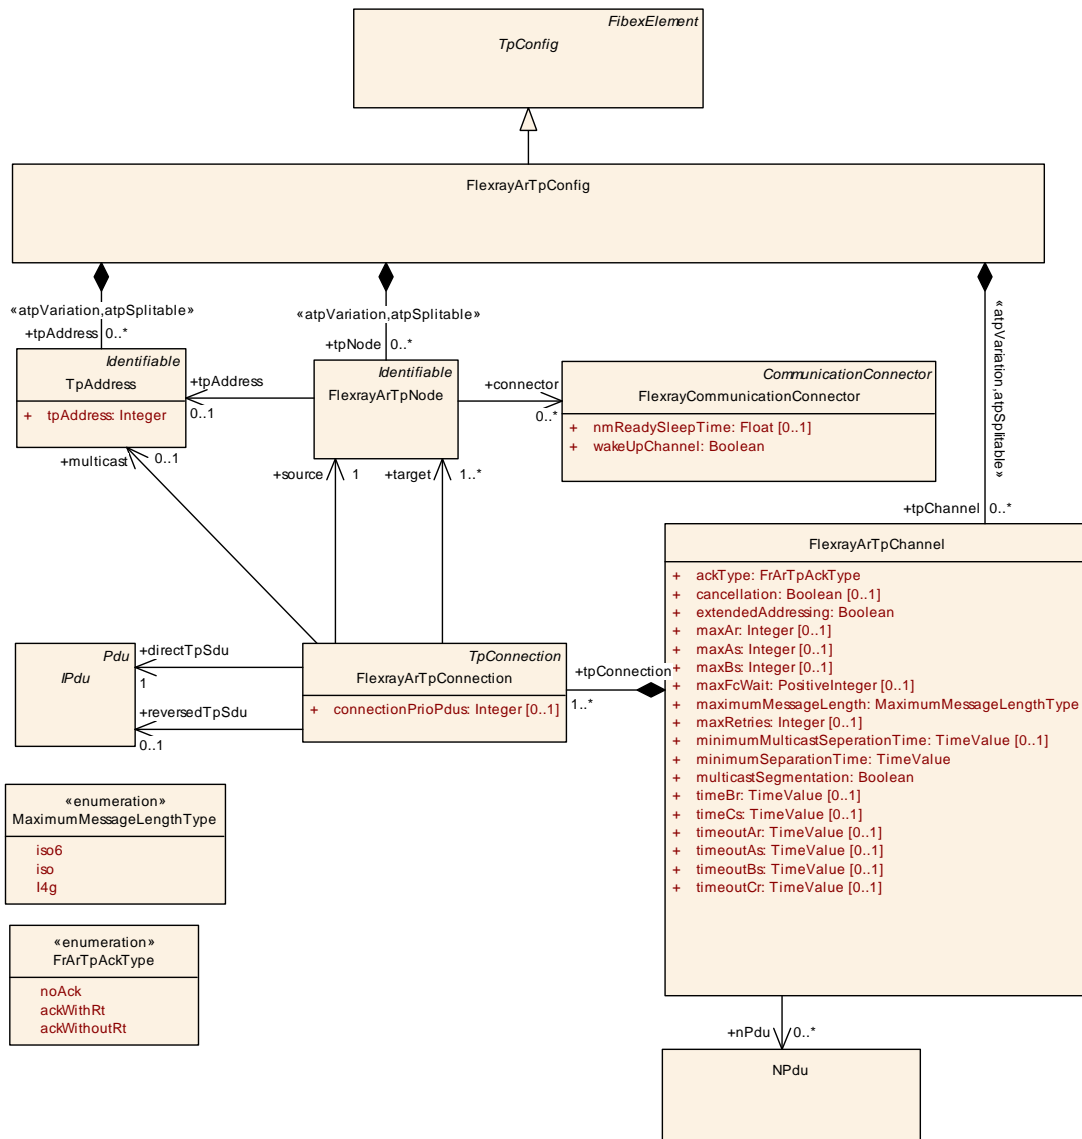

**Figure 6.62: FlexRay Autosar Transport Layer Configuration (TransportProtocols: FlexRayAutosarTransportProtocol)**

<b>Class</b>	<b>FlexrayArTpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	This element defines exactly one FlexRay Autosar TP Configuration. One FlexrayArTpConfig element shall be created for each FlexRay Network in the System that uses Flex Ray Autosar TP. <b>Tags:</b> atp.recommendedPackage=TpConfigs			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable, TpConfig			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	FlexrayArTpConfig			
tpAddress	<a href="#">TpAddress</a>	*	aggr	Collection of TpAddresses. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpAddress.shortName, tpAddress.variation Point.shortLabel vh.latestBindingTime=postBuild
tpChannel	<a href="#">FlexrayArTpChannel</a>	*	aggr	Configuration of FlexRay Autosar Transport Protocol channels. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpChannel, tpChannel.variationPoint.short Label vh.latestBindingTime=postBuild
tpNode	<a href="#">FlexrayArTpNode</a>	*	aggr	Senders and receivers of TP messages. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpNode.shortName, tpNode.variation Point.shortLabel vh.latestBindingTime=postBuild

**Table 6.215: FlexrayArTpConfig**

Class	FlexrayArTpChannel			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	A channel is a group of connections sharing several properties.  The FlexRay AutosarTransport Layer supports several channels. These channels can work concurrently, thus each of them requires its own state machine and management data structures and its own PDU-IDs.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">FlexrayArTpConfig.tpChannel</a>			
Attribute	Type	Mult.	Kind	Note
ackType	<a href="#">FrArTpAckType</a>	1	attr	Type of Acknowledgement.
cancellation	Boolean	0..1	attr	With this switch Tx and Rx Cancellation can be turned on or off.
extended Addressing	Boolean	1	attr	Addressing Type of this connection: true: Two Bytes false: One Byte
maxAr	Integer	0..1	attr	This attribute defines the maximum number of trying to send a frame when a TIMEOUT AR occurs (depending on whether retry is configured).
maxAs	Integer	0..1	attr	This attribute defines the maximum number of trying to send a frame when a TIMEOUT AS occurs (depending on whether retry is configured).
maxBs	Integer	0..1	attr	This attribute defines the number of consecutive CFs between two FCs (block size). Valid values are 1 .. 16 when retry is activated, and 0 .. 255 otherwise.
maxFcWait	PositiveInteger	0..1	attr	This attribute defines the maximal number of wait frames to be sent for a pending connection. Range is 0..255.
maximum MessageLength	<a href="#">MaximumMessageLengthType</a>	1	attr	This specifies the maximum message length for the particular channel.
maxRetries	Integer	0..1	attr	This attribute defines the maximum number of retries (if retry is configured for the particular channel).





Class	FlexrayArTpChannel			
minimum Multicast SeparationTime	TimeValue	0..1	attr	<p>This attribute defines the minimum amount of time between two succeeding CFs of a 1:n segmented transmission in seconds. Valid values are 0, 100<math>\mu</math>s, 200<math>\mu</math>s ... 900<math>\mu</math>s, 1ms, 2ms .. 127ms. The value can be changed at runtime using the FrArTp_ChangeParameter interface.</p> <p>minimumMulticastSeparationTime shall be an integer multiple of the cycle length multiplied with the multiplexing factor, i.e. <math>\text{minimumMulticastSeparationTime} = n * \text{cycle} * m</math>, where n is an integer <math>\geq 0</math>, cycle is Flexray Cluster.cycle, and m is the cycle multiplexor of those cycles where PDUs of the PDU pool are scheduled. Please note: Due to the scheduling strategies of FrTp, minimumMulticastSeparationTime can only be kept to a degree defined by the maximum temporal distance of the PDUs of a PDU pool within one FlexRay cycle.</p> <p>Range: 0 .. 0.127</p>
minimum SeparationTime	TimeValue	1	attr	<p>This attribute defines the minimum amount of time between two succeeding CFs of a 1:1 segmented transmission in seconds. Valid values are 0, 100<math>\mu</math>s, 200<math>\mu</math>s .. 900<math>\mu</math>s, 1ms, 2ms .. 127ms. The value can be changed at runtime using the FrArTp_ChangeParameter interface.</p> <p>The minimumSeparationTime shall be an integer multiple of the cycle length multiplied with the multiplexing factor, i.e. <math>\text{minimumSeparationTime} = n * \text{cycle} * m</math>, where n is an integer <math>\geq 0</math>, cycle is FlexrayCluster.cycle, and m is the cycle multiplexor of those cycles where PDUs of the PDU pool are scheduled.</p> <p>Please note: Due to the scheduling strategies of FrTp, minimumSeparationTime can only be kept to a degree defined by the maximum temporal distance of the PDUs of a PDU pool within one FlexRay cycle.</p> <p>Range: 0 .. 0.127</p>
multicast Segmentation	Boolean	1	attr	<p>This attribute defines whether segmentation within a 1:n connection is allowed or not.</p>
nPdu	NPdu	*	ref	<p>A FlexRayTpChannel references a set of NPdus. These NPdus are logically assembled into a pool of Rx NPdus and another pool of Tx NPdus. It shall be ensured that a second channel either references all NPdus of such a pool, or none.</p>
timeBr	TimeValue	0..1	attr	<p>This attribute defines the time in seconds between receiving the last CF of a block or an FF-x (or SF-x) and sending out an FC or AF.</p>
timeCs	TimeValue	0..1	attr	<p>This attribute defines the time in seconds between the sending of two consecutive frames or between a consecutive frame and a flow control (for Transmit Cancellation) or between reception of a flow control or Acknowledgement Frame and sending of the next consecutive frame or a flow control (for Transmit Cancellation).</p>
timeoutAr	TimeValue	0..1	attr	<p>This attribute states the timeout in seconds between the PDU transmit request of the Transport Layer to the Flex Ray Interface and the corresponding confirmation of the FlexRay Interface on the receiver side (for FC or AF).</p>





Class		FlexrayArTpChannel		
timeoutAs	TimeValue	0..1	attr	This attribute states the timeout in seconds between the PDU transmit request for the first PDU of the group used in the current connection of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the FlexRay Interface (when having sent the last PDU of the group used in this connection) on the sender side (SF-x, FF-x, CF).
timeoutBs	TimeValue	0..1	attr	This attribute defines the timeout in seconds for waiting for an FC or AF on the sender side in a 1:1 connection.
timeoutCr	TimeValue	0..1	attr	This attribute defines the timeout value in seconds for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side.
tpConnection	<a href="#">FlexrayArTpConnection</a>	1..*	aggr	Group of connections that can be used in this channel.

**Table 6.216: FlexrayArTpChannel**

Class		FlexrayArTpNode		
Package		M2::AUTOSARTemplates::SystemTemplate::TransportProtocols		
Note		TP Node (Sender or Receiver) provides the TP Address and the connection to the Topology description.		
Base		<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>		
Aggregated by		<a href="#">FlexrayArTpConfig.tpNode</a>		
Attribute	Type	Mult.	Kind	Note
connector	<a href="#">FlexrayCommunicationConnector</a>	*	ref	Association to one or more physical connectors (max number of connectors for FlexRay: 2).  In a System Description this reference is mandatory. In an ECU Extract this reference is optional (references to ECUs that are not part of the ECU Extract shall be avoided).
tpAddress	<a href="#">TpAddress</a>	0..1	ref	Reference to the TP Address that is used by the TpNode. This reference is optional in case that the multicast TP Address is used (reference from TpConnection).

**Table 6.217: FlexrayArTpNode**

Class		FlexrayArTpConnection		
Package		M2::AUTOSARTemplates::SystemTemplate::TransportProtocols		
Note		A connection within a channel identifies the sender and the receiver of this particular communication. The FlexRay Autosar Tp module routes a Pdu through this connection.		
Base		<i>ARObject</i> , <i>TpConnection</i>		
Aggregated by		<a href="#">FlexrayArTpChannel.tpConnection</a>		
Attribute	Type	Mult.	Kind	Note
connectionPrioPdus	Integer	0..1	attr	This parameter defines the number of PDUs that shall be reserved for this connection when it is active. The range is 1-255.





Class	FlexrayArTpConnection			
directTpSdu	<a href="#">IPdu</a>	1	ref	Reference to the IPdu that is segmented by the Transport Protocol. The source address of the transmitted NPdu is determined by the configured source Communication Connector. The target address of the transmitted NPdu is determined by the configured target Communication Connector.
multicast	<a href="#">TpAddress</a>	0..1	ref	TP address for 1:n connections.
reversedTpSdu	<a href="#">IPdu</a>	0..1	ref	Reference to the IPdu that is segmented by the Transport Protocol. If support of both sending and receiving is used, this association references the IPdu used for the additional second direction. The source address of the transmitted NPdu is determined by the configured target Communication Connector. The target address of the transmitted NPdu is determined by the configured source Communication Connector.
source	<a href="#">FlexrayArTpNode</a>	1	ref	The source of the TP connection.
target	<a href="#">FlexrayArTpNode</a>	1..*	ref	The target of the TP connection.

**Table 6.218: FlexrayArTpConnection**

Enumeration	FrArTpAckType
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols
<b>Note</b>	Type of Acknowledgement.
<b>Aggregated by</b>	<a href="#">FlexrayArTpChannel.ackType</a>
<b>Literal</b>	<b>Description</b>
ackWithoutRt	Acknowledgement without retry. <b>Tags:</b> atp.EnumerationLiteralIndex=0
ackWithRt	Acknowledgement with retry. <b>Tags:</b> atp.EnumerationLiteralIndex=1
noAck	No acknowledgement. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 6.219: FrArTpAckType**

Enumeration	MaximumMessageLengthType
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols
<b>Note</b>	Type of Acknowledgement.
<b>Aggregated by</b>	<a href="#">FlexrayArTpChannel.maximumMessageLength</a>
<b>Literal</b>	<b>Description</b>
l4g	SF-E allowed (SF of arbitrary length depending on FrTpPduLength), up to (2**32)-1 byte message length (all FF-x allowed). <b>Tags:</b> atp.EnumerationLiteralIndex=0
iso	Up to (2**12)-1 Byte message length (No FF-Ex or SF-E or AF shall be used and recognized). <b>Tags:</b> atp.EnumerationLiteralIndex=1





<i>Enumeration</i>	<b>MaximumMessageLengthType</b>
iso6	As ISO, but the maximum payload length is limited to 6 byte (SF-I, FF-I, CF). This is necessary to route TP on CAN when using Extended Addressing or Mixed Addressing on CAN. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 6.220: MaximumMessageLengthType**

#### 6.8.4 CAN Transport Layer

The CAN Transport Layer supports multiple sessions by means of `CanTpChannels`: Each `CanTpChannel` uses its own resources, such as internal buffer, timer, state machine and thus can operate independently and simultaneously to other `CanTpChannels`. The same session can be reused for an arbitrary number of `CanTpConnections`.


Each `CanTpConnection` uses its own pair of `NPdu`s: One `NPdu`, the `dataPdu` is mandatory for each `CanTpConnection`, the `flowControlPdu` is optional depending whether only Single Frames are transferred over the connection.

A `CanTpConnection` is specifically used for communication between source and target devices. These communication partners are specified using the `transmitter` and `receiver` associations to `CanTpNode`, providing the diagnostic `tpAddress` and the connection to the topology.

**[TPS\_SYST\_01146] Generic `CanTpConnections`** [If the `transmitter` or the `receiver` of a `CanTpConnection` is not specified then the `CanTpConnection` is a generic one (address information is not determined).]()

**[TPS\_SYST\_01105] `CanTpConnection` with several receivers** [In case of several receivers a multicast `tpAddress` shall be used.] (*RS\_SYST\_00014*)



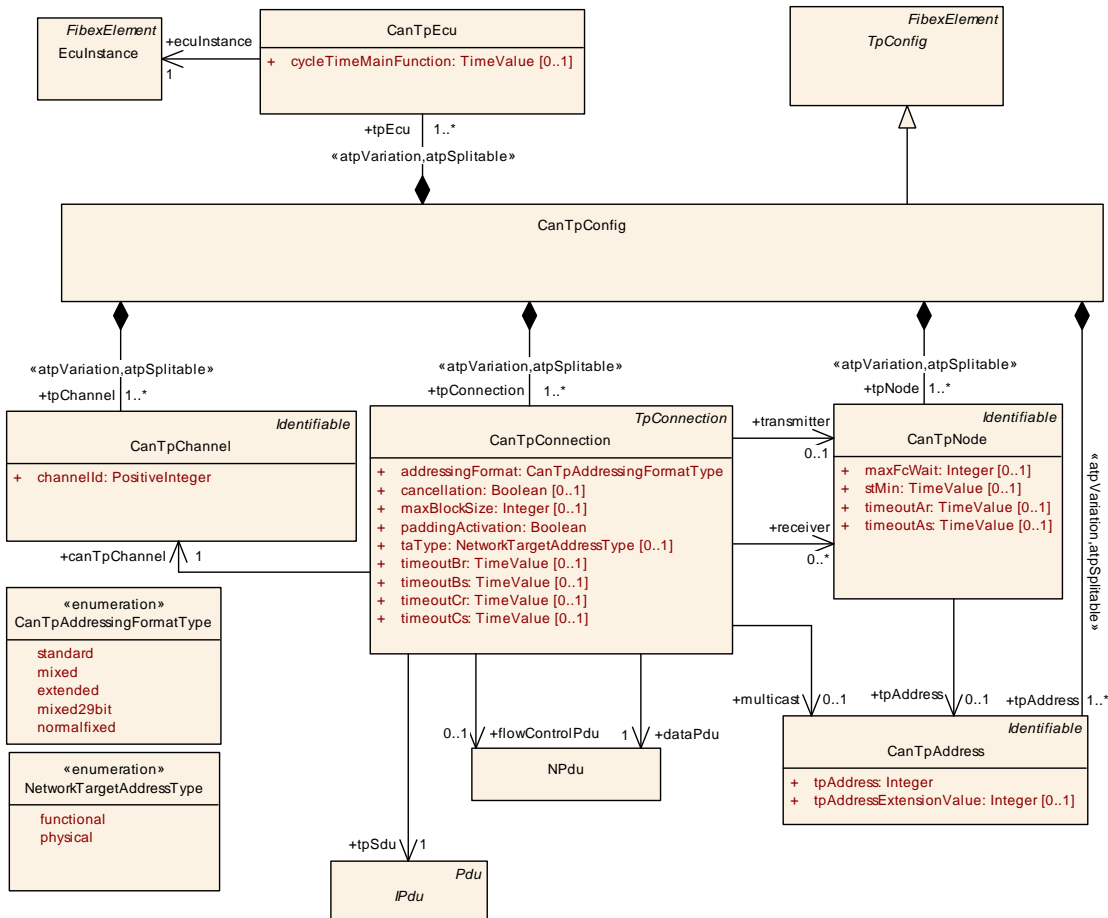

**Figure 6.63: CAN Transport Layer Configuration (TransportProtocols: CanTransportProtocol)**

The actual payload to be transported by the `CanTpConnection` is specified by the reference `tpSdu` to `IPdu`.

The `N_TAtype` communication models as defined in ISO 15765-2 [32] can be expressed using a combination of the attributes `addressingFormat` (`CanTpAddressingFormatType`) and `taType` (`NetworkTargetAddressType`).

<b>Class</b>	<b>CanTpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	This element defines exactly one CAN TP Configuration. One CanTpConfig element shall be created for each CAN Network in the System. <b>Tags:</b> atp.recommendedPackage=TpConfigs			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, TpConfig			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	CanTpConfig			
tpAddress	<a href="#">CanTpAddress</a>	1..*	aggr	Collection of TP Addresses. atpVariation: Derived, because EcuInstance can vary. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpAddress.shortName, tpAddress.variationPoint.shortLabel vh.latestBindingTime=postBuild
tpChannel	<a href="#">CanTpChannel</a>	1..*	aggr	Configuration of CAN TP channels. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpChannel.shortName, tpChannel.variationPoint.shortLabel vh.latestBindingTime=postBuild
tpConnection	<a href="#">CanTpConnection</a>	1..*	aggr	Senders and receivers of CAN TP messages. atpVariation: Derived, because TpNode can vary. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpConnection, tpConnection.variationPoint.shortLabel vh.latestBindingTime=postBuild
tpEcu	<a href="#">CanTpEcu</a>	1..*	aggr	Collection of TP Ecus atpVariation: Derived, because EcuInstance can vary. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpEcu, tpEcu.variationPoint.shortLabel vh.latestBindingTime=postBuild
tpNode	<a href="#">CanTpNode</a>	1..*	aggr	Senders and receivers of Can TP messages. atpVariation: Derived, because EcuInstance can vary. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpNode.shortName, tpNode.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.221: CanTpConfig**

Class	CanTpChannel			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	Configuration parameters of the CanTp channel.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CanTpConfig.tpChannel</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
channelId	PositiveInteger	1	attr	The id of the channel. The value shall be unique for each channel.

**Table 6.222: CanTpChannel**

<b>Class</b>	<b>CanTpConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	A connection identifies the sender and the receiver of this particular communication. The CanTp module routes a Pdu through this connection. atpVariation: Derived, because TpNode can vary.			
<b>Base</b>	ARObject, TpConnection			
<b>Aggregated by</b>	CanTpConfig.tpConnection			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
addressing Format	CanTpAddressingFormatType	1	attr	Declares which communication addressing mode is supported.
cancellation	Boolean	0..1	attr	With this switch Tx Cancellation can be turned on or off. Please note that the Rx Cancellation is always enabled.
canTpChannel	CanTpChannel	1	ref	Reference to the CanTpChannel on which this CanTp Connection is realized.
dataPdu	NPdu	1	ref	Reference to an Data NPdu.
flowControlPdu	NPdu	0..1	ref	Reference to the Flow Control NPdu.
maxBlockSize	Integer	0..1	attr	The maximum number of N-PDUs the CanTp receiver allows the sender to send, before waiting for an authorization to continue transmission of the following N-PDUs. For further details on this parameter value see ISO 15765-2 specification. Note: For reasons of buffer length, the CAN Transport Layer can adapt the BS value within the limit of this maximum BS
multicast	CanTpAddress	0..1	ref	TP address for 1:n connections.
padding Activation	Boolean	1	attr	This specifies whether or not Sfs, FCs and the last CF shall be padded to 8 bytes length in case it contains less payload. true: The N-PDU received uses padding for SF, FC and the last CF. (N-PDU length is always 8 bytes) false: The N-PDU received does not use padding for SF, CF and the last CF. (N-PDU length is dynamic)
receiver	CanTpNode	*	ref	The target of the TP connection.
taType	NetworkTargetAddressType	0..1	attr	Network Target Address type.
timeoutBr	TimeValue	0..1	attr	Value in seconds of the performance requirement for (N_Br + N_Ar). N_Br is the elapsed time between the receiving indication of a FF or CF or the transmit confirmation of a FC, until the transmit request of the next FC.
timeoutBs	TimeValue	0..1	attr	This parameter defines the timeout for waiting for an FC or AF on the sender side in an 1:1 connection. Specified in seconds.
timeoutCr	TimeValue	0..1	attr	This parameter defines the timeout value for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side. Specified in seconds.
timeoutCs	TimeValue	0..1	attr	The attribute timeoutCs represents the time (in seconds) which elapses between the transmit request of a CF N-PDU until the transmit request of the next CF N-PDU.
tpSdu	IPdu	1	ref	Reference to an IPdu that is segmented by the Transport Protocol.
transmitter	CanTpNode	0..1	ref	The source of the TP connection.

**Table 6.223: CanTpConnection**

<b>Enumeration</b>	<b>CanTpAddressingFormatType</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols
<b>Note</b>	Declares which communication addressing mode is supported.
<b>Aggregated by</b>	<a href="#">CanTpConnection.addressingFormat</a>
<b>Literal</b>	<b>Description</b>
extended	To use extended addressing format. <b>Tags:</b> atp.EnumerationLiteralIndex=0
mixed	To use mixed 11bit addressing format. <b>Tags:</b> atp.EnumerationLiteralIndex=1
mixed29bit	To use mixed 29bit addressing format <b>Tags:</b> atp.EnumerationLiteralIndex=2
normalfixed	To use normal fixed addressing format <b>Tags:</b> atp.EnumerationLiteralIndex=3
standard	To use normal addressing format. <b>Tags:</b> atp.EnumerationLiteralIndex=4

**Table 6.224: CanTpAddressingFormatType**

<b>Class</b>	<b>CanTpAddress</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	An ECUs TP address on the referenced channel. This represents the diagnostic Address.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">CanTpConfig.tpAddress</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpAddress	Integer	1	attr	An ECUs TP address on the referenced channel. This represents the diagnostic Address.
tpAddress ExtensionValue	Integer	0..1	attr	If the mixed addressing format is used, this parameter contains the transport protocol address extension value.

**Table 6.225: CanTpAddress**

<b>Class</b>	<b>CanTpEcu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	ECU specific TP configuration parameters. Each TpEcu element has a reference to exactly one ECUInstance in the topology.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">CanTpConfig.tpEcu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
cycleTimeMain Function	TimeValue	0..1	attr	The period between successive calls to the Main Function of the AUTOSAR TP. Specified in seconds.
ecuInstance	<a href="#">EcuInstance</a>	1	ref	Connection to the ECUInstance in the Topology

**Table 6.226: CanTpEcu**

<b>Class</b>	<b>CanTpNode</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	TP Node (Sender or Receiver) provides the TP Address and the connection to the Topology description.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CanTpConfig.tpNode</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
connector	<a href="#">CommunicationConnector</a>	0..1	ref	Association to a CommunicationConnector in the topology description. In a System Description this reference is mandatory. In an ECU Extract this reference is optional (references to ECUs that are not part of the ECU Extract shall be avoided).
maxFcWait	Integer	0..1	attr	This attribute defines the maximum number of flow control PDUs that can be consecutively be transmitted by a receiver.
stMin	TimeValue	0..1	attr	Sets the duration of the minimum time the CanTp sender shall wait between the transmissions of two CF N-PDUs.
timeoutAr	TimeValue	0..1	attr	This attribute states the timeout between the PDU transmit request of the Transport Layer to the Can Interface and the corresponding confirmation of the Can Interface on the receiver side (for FC or AF). Specified in seconds.
timeoutAs	TimeValue	0..1	attr	This attribute states the timeout between the PDU transmit request for the first PDU of the group used in the current connection of the Transport Layer to the Can Interface and the corresponding confirmation of the Can Interface (when having sent the last PDU of the group used in this connection) on the sender side (SF-x, FF-x, CF or FC (in case of Transmit Cancellation)). Specified in seconds.
tpAddress	<a href="#">CanTpAddress</a>	0..1	ref	Reference to the TP Address that is used by the TpNode. This reference is optional in case that the multicast TP Address is used (reference from TpConnection).

**Table 6.227: CanTpNode**

<b>Enumeration</b>	<b>NetworkTargetAddressType</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols
<b>Note</b>	Network Target Address type (see ISO 15765-2).
<b>Aggregated by</b>	<a href="#">CanTpConnection.taType</a>
<b>Literal</b>	<b>Description</b>
functional	Functional request type <b>Tags:</b> atp.EnumerationLiteralIndex=0
physical	Physical request type <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 6.228: NetworkTargetAddressType**

### 6.8.5 LIN Transport Layer


`LinTpConnection` is used for modeling communication resources required for using the LIN Transport Layer. Contrary to the FlexRay and CAN Transport Layers, LIN TP only supports one session per `PhysicalChannel`.

An arbitrary number of `LinTpConnections` per `LinTpConfig` can be defined since the transmission of data from master to slave, using the `MasterRequest` frame, and the transmission of data from slave to master, using the `SlaveResponse` frame, needs to be described per NAD the `LinMaster` uses to address one or more of its `LinSlaves`.

`LinTpConnection` uses the `dataPdu` reference for specifying exactly one `NPdu` which is to be used for transmitting the data, and it optionally references a `flow-Control NPdu` in order to handle Flow Control Frames if required.

One `LinTpConnection` is specifically used for communication between one source and one or several target devices. These communication partners are specified using the `transmitter` and `receiver` associations to `LinTpNode`, providing the diagnostic `tpAddress` and the connection to the topology. In case of several receivers a `multicast tpAddress` shall be used.

The actual payload to be transported by the `LinTpConnection` is specified by the reference `linTpNSdu` to `IPdu`.

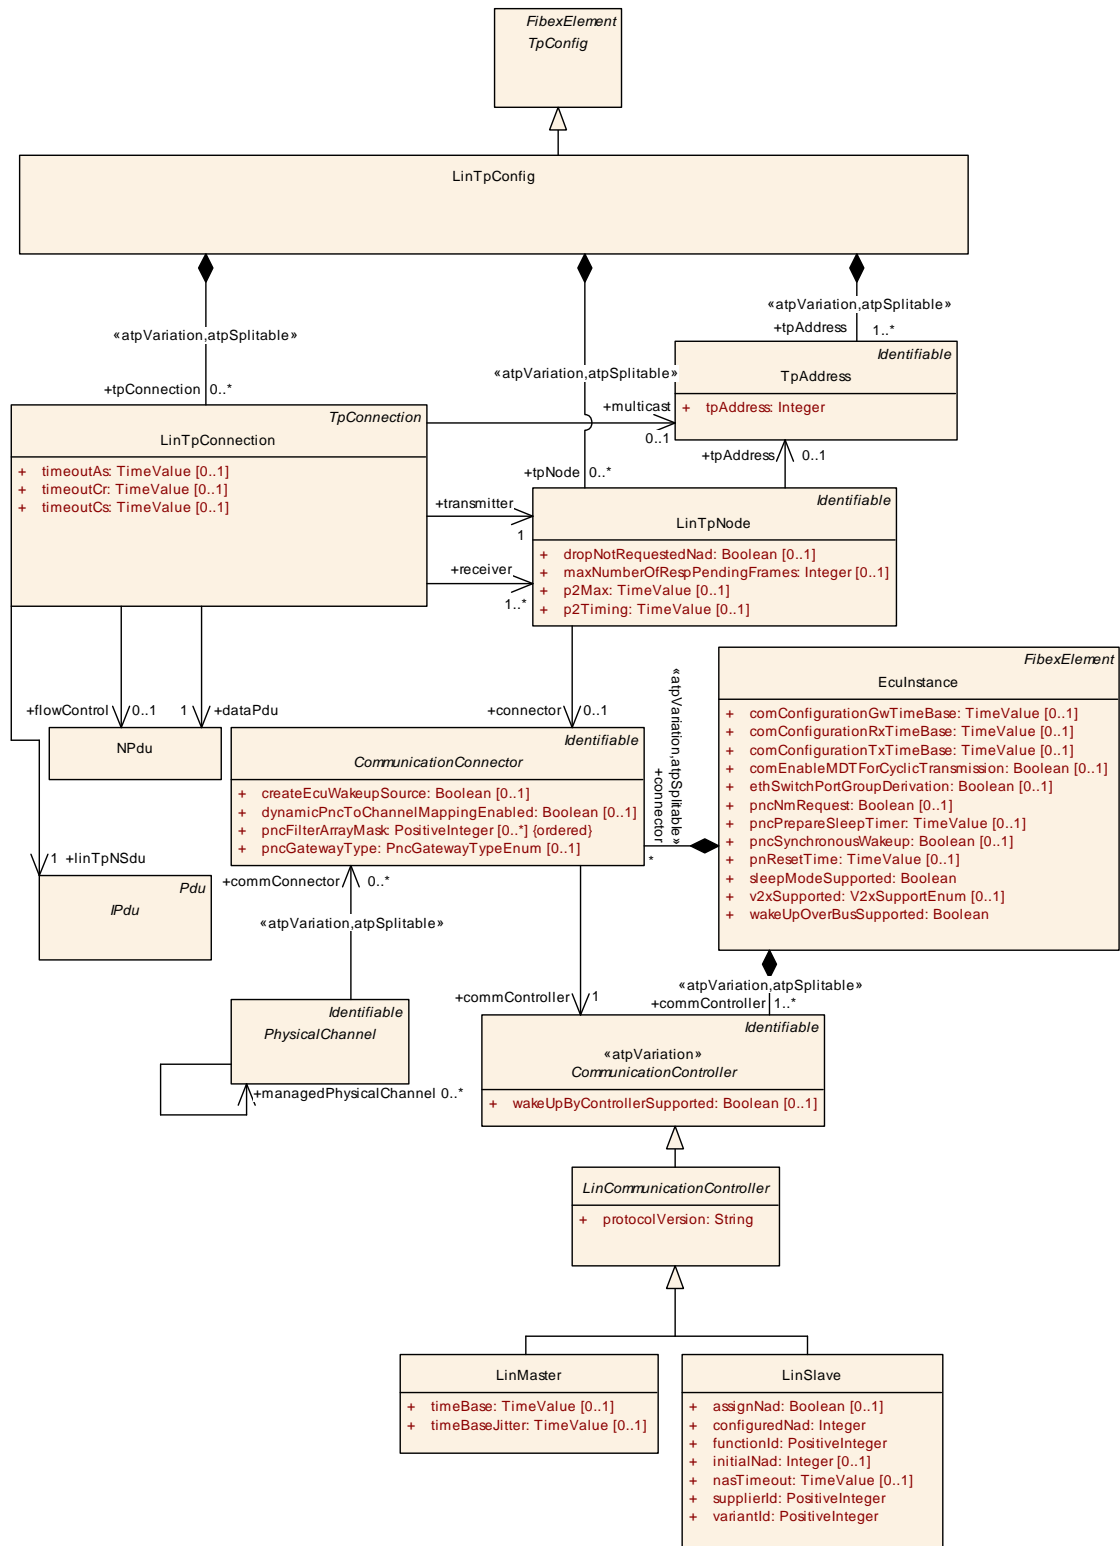

**Figure 6.64: LIN Transport Layer Configuration**

<b>Class</b>	<b>LinTpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	This element defines exactly one Lin TP Configuration. One LinTpConfig element shall be created for each Lin Network in the System. <b>Tags:</b> atp.recommendedPackage=TpConfigs			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable, TpConfig			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpAddress	TpAddress	1..*	aggr	Collection of TpAddresses. atpVariation: Derived, because EcuInstance can vary. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=tpAddress.shortName, tpAddress.variation Point.shortLabel vh.latestBindingTime=postBuild
tpConnection	LinTpConnection	*	aggr	Configuration of LIN TP channels. atpVariation: Derived, because TpNode can vary. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=tpConnection, tpConnection.variation Point.shortLabel vh.latestBindingTime=postBuild
tpNode	LinTpNode	*	aggr	Senders and receivers of LIN TP messages. atpVariation: Derived, because EcuInstance can vary. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=tpNode.shortName, tpNode.variation Point.shortLabel vh.latestBindingTime=postBuild

**Table 6.229: LinTpConfig**

<b>Class</b>	<b>LinTpNode</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	TP Node (Sender or Receiver) provides the TP Address and the connection to the Topology description.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	LinTpConfig.tpNode			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
connector	Communication Connector	0..1	ref	Association to a CommunicationConnector in the topology description. In a System Description this reference is mandatory. In an ECU Extract this reference is optional (references to ECUs that are not part of the ECU Extract shall be avoided).
dropNot RequestedNad	Boolean	0..1	attr	Configures if TP Frames of not requested LIN-Slaves are dropped or not.
maxNumberOf RespPending Frames	Integer	0..1	attr	Configures the maximum number of allowed response pending frames.
p2Max	TimeValue	0..1	attr	After reception of a response pending frame the P2 timeout counter is reloaded with the timeout time P2max.
p2Timing	TimeValue	0..1	attr	P2 timeout observation parameter.







Class		LinTpNode		
tpAddress	<a href="#">TpAddress</a>	0..1	ref	Reference to the TP Address that is used by the TpNode. This reference is optional in case that the multicast TP Address is used (reference from TpConnection).

**Table 6.230: LinTpNode**

Class		LinTpConnection		
<b>Package</b>		M2::AUTOSARTemplates::SystemTemplate::TransportProtocols		
<b>Note</b>		<p>A LinTP channel represents an internal path for the transmission or reception of a Pdu via LinTp and describes the sender and the receiver of this particular communication.</p> <p>LinTp supports (per Lin Cluster) the configuration of one Rx Tp-SDU and one Tx Tp-SDU per NAD the LinMaster uses to address one or more of its Lin Slaves. To support this an arbitrary number of LinTp Connections shall be described.</p>		
<b>Base</b>		<i>ARObject</i> , <a href="#">TpConnection</a>		
<b>Aggregated by</b>		<a href="#">LinTpConfig.tpConnection</a>		
Attribute	Type	Mult.	Kind	Note
dataPdu	<a href="#">NPdu</a>	1	ref	<p>Reference to an NPdu (Single Frame, First Frame or Consecutive Frame).</p> <p>The Single Frame network protocol data unit (SF N_PDU) shall be sent out by the sending network entity and can be received by one or multiple receiving network entities. The Single Frame (SF N_PDU) shall be sent out to transfer a service data unit that can be transferred via a single service request to the data link layer. This network protocol data unit shall be sent to transfer unsegmented messages.</p> <p>The First Frame network protocol data unit (FF N_PDU) identifies the first network protocol data unit (N_PDU) of a segmented message transmitted by a network sending entity and received by a receiving network entity.</p> <p>The Consecutive Frame network protocol data unit (CF N_PDU) transfers segments (N_Data) of the service data unit message data (&lt;MessageData&gt;). All network protocol data units (N_PDUs) transmitted by the sending entity after the First Frame network protocol data unit (FF N_PDU) shall be encoded as Consecutive Frames network protocol data units (CF N_PDUs).</p>
flowControl	<a href="#">NPdu</a>	0..1	ref	<p>Reference to the Flow Control NPdu.</p> <p>The Flow Control network protocol data unit (FC N_PDU) is identified by the Flow Control protocol control information (FC N_PCI). The Flow Control network protocol data unit (FC N_PDU) instructs a sending network entity to start, stop or resume transmission of CF N_PDUs. The Flow Control network protocol data unit shall be sent by the receiving network layer entity to the sending network layer entity, when ready to receive more data, after correct reception of:</p> <ul style="list-style-type: none"> <li>a) First Frame network protocol data unit (FF N_PDU)</li> <li>b) the last Consecutive Frame network protocol data unit (CF N_PDU) of a block of Consecutive Frames (CF N_PDU) if further Consecutive Frame network protocol data unit (CF N_PDU) need(s) to be sent.</li> </ul>
linTpNSdu	<a href="#">IPdu</a>	1	ref	Reference to the IPdu that is segmented by the Transport Protocol.
multicast	<a href="#">TpAddress</a>	0..1	ref	TP address for 1:n connections.






<b>Class</b>	<b>LinTpConnection</b>			
receiver	<a href="#">LinTpNode</a>	1..*	ref	The target of the TP connection.
timeoutAs	TimeValue	0..1	attr	Time for transmission of the LIN frame (any N-PDU) on the sender side. Specified in seconds.
timeoutCr	TimeValue	0..1	attr	This attribute defines the timeout value for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side. Specified in seconds.
timeoutCs	TimeValue	0..1	attr	The attribute timeoutCs represents the time (in seconds) which elapses between the transmit request of a CF N-PDU until the transmit request of the next CF N-PDU.
transmitter	<a href="#">LinTpNode</a>	1	ref	The source of the TP connection.

**Table 6.231: LinTpConnection**

### 6.8.6 Ethernet Transport Layer

The Transport Layer in the AUTOSAR Ethernet protocol stack is defined by the Tcplp module. For the transmission of an upper layer module Pdu via an UDP or TCP socket, the AUTOSAR Socket Adaptor specifies a Pdu route which is linked to a socket connection. The upper layer module of the SoAd may use the Interface (IF) API or the Transport Protocol (TP) API for the transmit request and data provision respectively.

With the `EthTpConnection` it is possible to describe in a System Description that the TP API shall be used for a specific Pdu route. If a `PduTriggering` is not referenced by a `EthTpConnection` the IF API will be used.

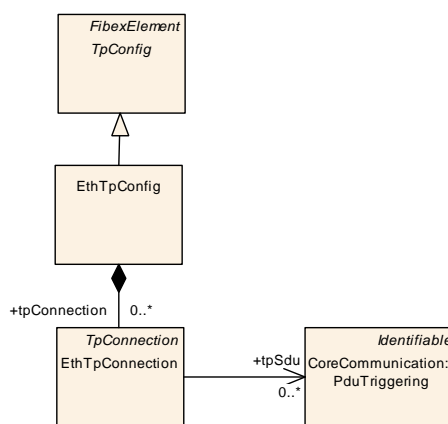

**Figure 6.65: Modeling of EthTpConnection**

<b>Class</b>	<b>EthTpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	This element defines which PduTriggerings shall be handled using "TP" semantics. <b>Tags:</b> atp.recommendedPackage=TpConfigs			
<b>Base</b>	<i>ARObject</i> , <i>CollectableElement</i> , <i>FibexElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i> , <i>TpConfig</i>			
<b>Aggregated by</b>	<i>ARPackage.element</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpConnection	<a href="#">EthTpConnection</a>	*	aggr	Senders and receivers of SOME/IP TP messages.


**Table 6.232: EthTpConfig**

<b>Class</b>	<b>EthTpConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	A connection identifies which PduTriggerings shall be handled using the "TP" semantics.			
<b>Base</b>	<i>ARObject</i> , <i>TpConnection</i>			
<b>Aggregated by</b>	<i>EthTpConfig.tpConnection</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpSdu	<a href="#">PduTriggering</a>	*	ref	Reference to a PduTriggering that shall be transported using the "TP" semantics.

**Table 6.233: EthTpConnection**

### 6.8.7 SOME/IP segmenter

On the transmission side SOME/IP TP segments an incoming SOME/IP IPdu that does not fit into a single UDP Package into smaller *GeneralPurposeIPdus* with category *SOMEIP\_SEGMENTED\_IPDU* and allows to transport SOME/IP messages over UDP that are greater than 128KB. On the reception side the large IPdu is reassembled again. The Message Type field of the SOME/IP header contains a bit, which marks the SOME/IP message as a segment of an original SOME/IP message. Every segmented SOME/IP message adds SOME/IP TP specific fields to the SOME/IP header. These fields contain control information for the segmentation and the reassembly of original, large SOME/IP messages.

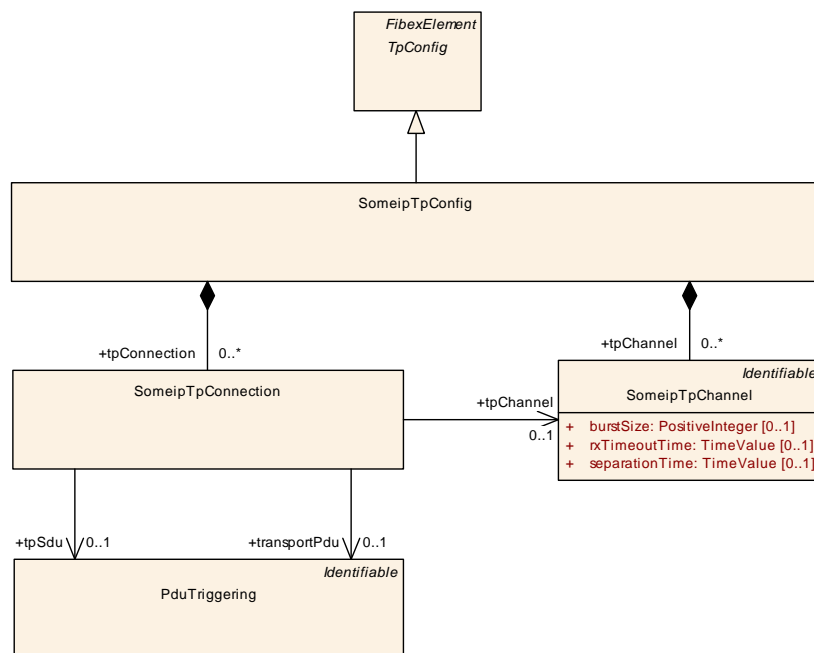

**Figure 6.66: SOME/IP Segmenter**

<b>Class</b>	<b>SomeipTpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	This element defines exactly one SOME/IP TP Configuration. <b>Tags:</b> atp.recommendedPackage=TpConfigs			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, TpConfig			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpChannel	SomeipTpChannel	*	aggr	Definition of SomeipTpChannels that are collecting configuration properties that are valid for a collection of SomeipTpConnections.
tpConnection	SomeipTpConnection	*	aggr	Senders and receivers of SOME/IP TP messages.

**Table 6.234: SomeipTpConfig**

<b>Class</b>	<b>SomeipTpConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	A connection identifies the sender and the receiver of this particular communication. The SOME/IP TP module routes a Pdu through this connection.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	SomeipTpConfig.tpConnection			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpChannel	SomeipTpChannel	0..1	ref	Assignment of configuration properties valid for this SomeipTpConnection.
tpSdu	PduTriggering	0..1	ref	Reference to an IPdu that is segmented by the Transport Protocol.
transportPdu	PduTriggering	0..1	ref	Reference to the segmented IPdu.

**Table 6.235: SomeipTpConnection**

<b>Class</b>	<b>SomeipTpChannel</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	This element is used to assign properties to SomeipTpConnections that are referencing this SomeipTpChannel.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	SomeipTpConfig.tpChannel			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
burstSize	PositiveInteger	0..1	attr	Specifies the number of segments that shall be transmitted in a burst ignoring separationTime. SeparationTime will then only be applied between bursts. If not configured, SeparationTime will be applied between all frames.
rxTimeoutTime	TimeValue	0..1	attr	Timer to monitor the successful reception. It is started when the first NPdu is received, restarted after reception of intermediate NPdus, and is stopped when the last NPdu has been received.
separationTime	TimeValue	0..1	attr	Sets the duration of the minimum time in seconds the SOME/IP TP module shall wait between the transmissions of NPdus.

**Table 6.236: SomeipTpChannel**

**[constr\_3328] SomeipTpConnection.transportPdu reference restriction** [A PduTriggering that is referenced by a SomeipTpConnection in the role transportPdu shall reference a GeneralPurposeIPdu with category SOMEIP\_SEGMENTED\_IPDU in the role iPdu.]()

**[constr\_3329] SomeipTpConnection.tpSdu reference restriction** [A PduTriggering that is referenced by a SomeipTpConnection in the role tpSdu shall reference an IPdu in the role iPdu.]()

**[TPS\_SYST\_02156] Length of GeneralPurposeIPdu with category SOMEIP\_SEGMENTED\_IPDU** [The length of GeneralPurposeIPdu with category SOMEIP\_SEGMENTED\_IPDU that is referenced by a PduTriggering in the role iPdu that in turn is referenced by a SomeipTpConnection in the role transportPdu defines the maximum size in bytes of a segment.](RS\_SYST\_00050, RS\_SYST\_00039, RS\_SYST\_00014)

Please note that the `length` of a `GeneralPurposeIPdu` with category `SOMEIP_SEGMENTED_IPDU` covers 8 bytes of the SOME/IP header, 4 bytes of the TP header, and the segment itself.

**[constr\_3330] Same `transportPdu` shall not be used in different `SomeipTpConnections`** [A `PduTriggering` that is referencing a `GeneralPurposeIPdu` with category `SOMEIP_SEGMENTED_IPDU` in the role `iPdu` shall be referenced at most once by a `SomeipTpConnection` in the role `transportPdu`.]()

### 6.8.8 SAE J1939 Transport Layer


There are two transport protocol variants defined by J1939: BAM (Broadcast Announce Message), which is a broadcast protocol that does not use any flow control, and CMDT (Connection Mode Data Transfer), which is a point-to-point protocol with flow control and acknowledgment.

BAM uses two NPdus for transport, TP.CM (Transport Protocol Command, `flowControlPdu`) and TP.DT (Transport Protocol Data, `dataPdu`). CMDT uses three NPdus, because an additional TP.CM (`flowControlPdu`) in reverse direction is needed for flow control. The length of TP.CM and TP.DT NPdus is fixed to 8 bytes.

**[TPS\_SYST\_01106] Usage of additional `directPdu` in case of variable length `sdu`**  
[In case of variable length `sdu` (with system signals of variable length) an additional `directPdu` is required:

- it is used if the current length of this `sdu` is up to 8 bytes.
- if the current length of this `sdu` is higher than 8 bytes the `sdu` will be transported via the `dataPdu`.

](*RS\_SYST\_00014, RS\_SYST\_00038*)

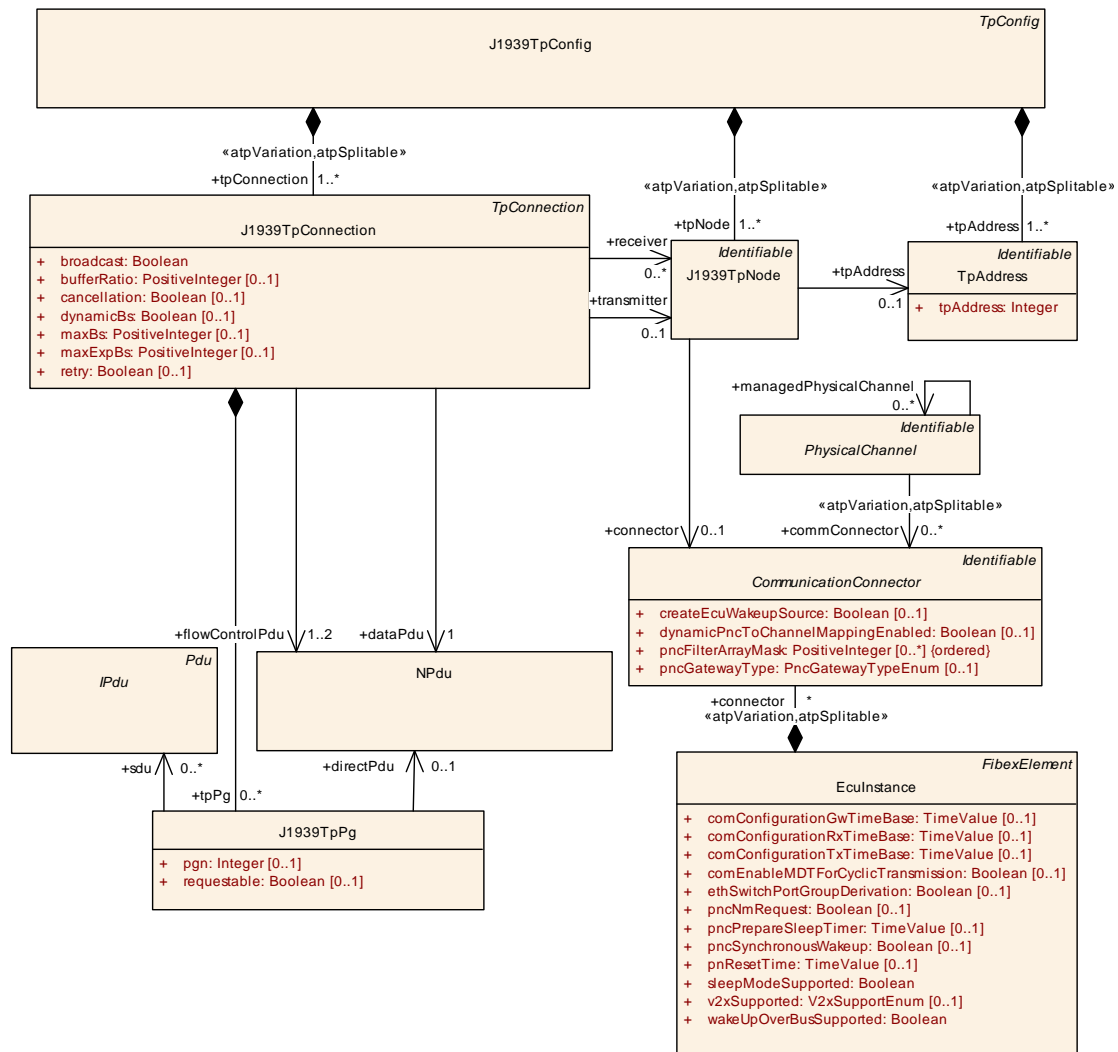

**Figure 6.67: J1939 Transport Layer Configuration**

A `J1939TpConnection` is specifically used for communication between source and target devices. These communication partners are specified using the `transmitter` and `receiver` associations to `J1939TpNode`, providing the diagnostic `tpAddress` and the connection to the topology.

**[TPS\_SYST\_02190] `J1939TpConnection.transmitter` reference in case of broadcast connection** [In case of a broadcast connection the `J1939TpConnection` shall only reference the `J1939TpNode` in the role `transmitter`. The reason is that BAM (Broadcast Announce Message) is always directed at the target address 0xff and therefore no `receiver` reference is necessary.]([RS\\_SYST\\_00014](#), [RS\\_SYST\\_00038](#))

**[TPS\_SYST\_02191] `J1939TpConnection.transmitter` reference in case that the source is an unknown node** [In case that the source is an unknown node, e.g. an arbitrary tester, the `J1939TpConnection` is allowed to omit the `transmitter` reference to `J1939TpNode`.]([RS\\_SYST\\_00014](#), [RS\\_SYST\\_00038](#))



[TPS\_SYST\_02192] **J1939TpConnection.receiver** reference in case that the destination is an unknown node [In case that the destination is an unknown node, e.g. an arbitrary tester, the `J1939TpConnection` is allowed to omit the `receiver` reference to `J1939TpNode`.] (*RS\_SYST\_00014, RS\_SYST\_00038*)

[TPS\_SYST\_02193] **J1939TpConnection.receiver** reference in case that the destination is connected to a configured **J1939NmNode** [In case that the destination is connected to a configured `J1939NmNode`, the `J1939TpConnection` shall reference the `J1939TpNode` in the role `receiver`. It means that the receiving `J1939TpNode` is associated with an `EcuInstance` via the `CommunicationConnector` and this `EcuInstance` is associated with a `J1939NmNode` via the `NmEcu`. In this case the `nmNodeId` of the `J1939NmNode` corresponds to the `TpAddress` defined by `J1939TpNode`.] (*RS\_SYST\_00014, RS\_SYST\_00038*)

The Parameter Group (PG) to be transported by the `J1939TpConnection` is specified by the `tpPg` aggregation.

[TPS\_SYST\_01147] **Generic J1939TpConnections** [If the `transmitter` or the `receiver` of a `J1939TpConnection` is not specified then the `J1939TpConnection` is a generic one (address information is not determined).] ()

<b>Class</b>	<b>J1939TpConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	This element defines exactly one J1939 TP Configuration. One J1939TpConfig element shall be created for each J1939 Network in the System. <b>Tags:</b> atp.recommendedPackage=TpConfigs			
<b>Base</b>	<i>ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, TpConfig</i>			
<b>Aggregated by</b>	<i>ARPackage.element</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tpAddress	<a href="#">TpAddress</a>	1..*	aggr	Collection of TP Adresses. atpVariation: Derived, because EcuInstance can vary. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpAddress.shortName, tpAddress.variation Point.shortLabel vh.latestBindingTime=postBuild
tpConnection	<a href="#">J1939TpConnection</a>	1..*	aggr	Configuration of J1939 TP connections. atpVariation: Derived, because TpNode can vary. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=tpConnection, tpConnection.variation Point.shortLabel vh.latestBindingTime=postBuild





Class	J1939TpConfig			
tpNode	J1939TpNode	1..*	aggr	<p data-bbox="836 376 1286 405">Senders and receivers of J1939 TP messages.</p> <p data-bbox="836 414 1347 443">atpVariation: Derived, because EcuInstance can vary.</p> <p data-bbox="836 452 1214 481"><b>Stereotypes:</b> atpSplitable; atpVariation</p> <p data-bbox="836 481 895 510"><b>Tags:</b></p> <p data-bbox="836 510 1310 539">atp.Splitkey=tpNode.shortName, tpNode.variation</p> <p data-bbox="836 539 995 568">Point.shortLabel</p> <p data-bbox="836 568 1139 598">vh.latestBindingTime=postBuild</p>

**Table 6.237: J1939TpConfig**

<b>Class</b>	<b>J1939TpConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	A J1939TpConnection represents an internal path for the transmission or reception of a Pdu via J1939Tp and describes the sender and the receiver of this particular communication. The J1939Tp module routes a Pdu (J1939 PGN) through the connection.			
<b>Base</b>	<i>ARObject</i> , <i>TpConnection</i>			
<b>Aggregated by</b>	J1939TpConfig.tpConnection			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
broadcast	Boolean	1	attr	BAM (Broadcast Announce Message) is a broadcast protocol. If this attribute is set to true broadcast is used. Since address FF is the only broadcast address, there's no reason to configure it.
bufferRatio	PositiveInteger	0..1	attr	Defines usage of available data for dynamic block size calculation when protocol retry is enabled. This attribute describes in percent of available buffer that shall be used for retry.
cancellation	Boolean	0..1	attr	Enable support for Tx/Rx cancellation.
dataPdu	NPdu	1	ref	Data Message (TP.DT) used by CMDT and BAM. The DataNPdu has a fixed length of 8 bytes.
dynamicBs	Boolean	0..1	attr	Enable support for dynamic block size calculation.
flowControlPdu	NPdu	1..2	ref	Reference to the Command NPdus (TP.CM) that are used in the CMDT (Connection Mode Data Transfer) in both directions. BAM uses one TP.CM (Transport Protocol Command). The flowControlNPdu has a fixed length of 8 bytes. Please note that the role name "flowControlIPdu" is misleading and is kept for backward compatibility reasons.
maxBs	PositiveInteger	0..1	attr	Set maximum block size (number of packets in TP.CM_CTS).
maxExpBs	PositiveInteger	0..1	attr	Set maximum for expected block size (maximum number of packets in TP.CM_RTS).
receiver	J1939TpNode	*	ref	The target of the TP connection.
retry	Boolean	0..1	attr	Enable support for protocol retry.
tpPg	J1939TpPg	*	aggr	J1939 messages (parameter groups, PGs) that can be transferred via this connection.
transmitter	J1939TpNode	0..1	ref	The source of the TP connection.

**Table 6.238: J1939TpConnection**

<b>Class</b>	<b>J1939TpPg</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
<b>Note</b>	A J1939TpPg represents one J1939 message (parameter group, PG) identified by the PGN (parameter group number) that can be received or transmitted via J1939Tp.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	J1939TpConnection.tpPg			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
directPdu	NPdu	0..1	ref	In case of variable length IPdus (with system signals of variable length), an additional NPdu (with the PGN in the CAN ID) is used for messages with up to 8 bytes.





Class		J1939TpPg		
pgn	Integer	0..1	attr	Parameter group number (PGN) of a J1939 message (parameter group, PG) that can be received or transmitted via J1939Tp. The PGN may be omitted when the a directPdu is referenced and is mapped into a Can FrameTriggering with an identifier.
requestable	Boolean	0..1	attr	Parameter Group can be triggered by the J1939 request message.
sdu	IPdu	*	ref	Reference to IPdus that are segmented by the Transport Protocol. If more than one IPdu is referenced, the IPdus are used when the same PGN is received in parallel via different transport protocols (BAM, CMDT, direct) on the same J1939TpConnection.

**Table 6.239: J1939TpPg**


Class		J1939TpNode		
Package	M2::AUTOSARTemplates::SystemTemplate::TransportProtocols			
Note	TP Node (Sender or Receiver) provides the TP Address and the connection to the Topology description.			
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Aggregated by	J1939TpConfig.tpNode			
Attribute	Type	Mult.	Kind	Note
connector	Communication Connector	0..1	ref	Association to a CommunicationConnector in the topology description. In a System Description this reference is mandatory. In an ECU Extract this reference is optional (references to ECUs that are not part of the ECU Extract shall be avoided).
tpAddress	TpAddress	0..1	ref	Reference to the TP Address that is used by the TpNode. This reference is optional only when no TP is sent and only BAM is received.

**Table 6.240: J1939TpNode**

**[constr\_3210] J1939TpPgs with identical pgn value** [For all J1939TpPgs where the attribute pgn has an identical value the attribute requestable shall also have an identical value.]()

### 6.8.9 Unicast TP Example

The example in Figure 6.68 illustrates the usage of the System Template TP model. In this System Description example the Sender ECU (Tester) communicates with the Receiver ECU (Diagnostic Server) via two Gateways (GW1 and GW2).

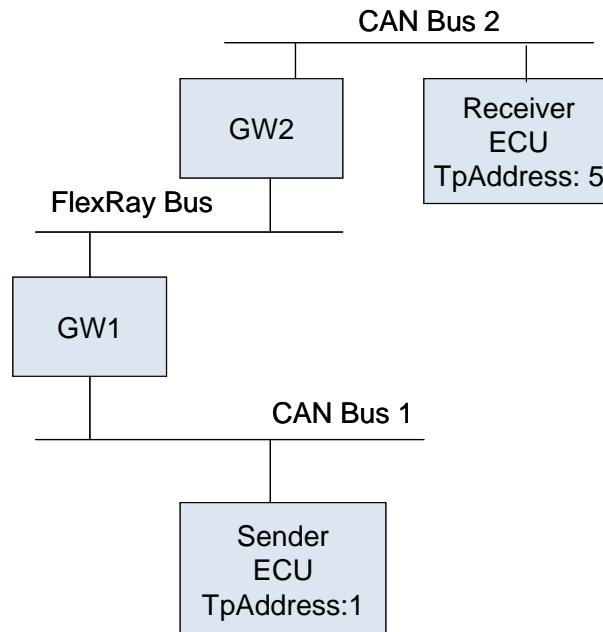

**Figure 6.68: TP unicast Example**

CAN Bus 1 (CanTpConfig 1):

- CanTpConnection (CanTpConnection1):
  - transmitter TpNode: Sender ECU, TpAddress: 1
  - receiver TpNode: GW1, TpAddress: 5
- CanTpConnection (CanTpConnection2):
  - transmitter TpNode: GW1, TpAddress: 5
  - receiver TpNode: Sender ECU, TpAddress: 1

FlexRay Bus (FlexRayTpConfig):

- FlexRayTpConnection (FlexrayTpConnection1):
  - transmitter TpNode: GW1, TpAddress: 1
  - receiver TpNode: GW2, TpAddress: 5

CAN Bus 2 (CanTpConfig 2):

- CanTpConnection (CanTpConnection3):
  - transmitter TpNode: GW2, TpAddress: 1
  - receiver TpNode: Receiver ECU, TpAddress: 5
- CanTpConnection (CanTpConnection4):
  - transmitter TpNode: Receiver ECU, TpAddress: 5
  - receiver TpNode: GW2, TpAddress: 1

DiagnosticConnection:


- physicalRequest TpConnection: CanTpConnection3
- response TpConnection: CanTpConnection4

Please note that two different `CanTpConfig` elements are created for the two CAN networks. The `TpAddress` of the transmitter `TpNode` is always 1 and the `TpAddress` of the receiver `TpNode` is always 5, even in the `FlexrayTpConfig` where Gateway ECU1 communicates with Gateway ECU2. The original transmitter and the final receiver are addressed in each connection. Please note that for CanTp for each direction an own `CanTpConnection` is used.

The `DiagnosticConnection` is modeled only for the the last segment to which the Receiver ECU that represents the diagnostic server is connected.

### 6.8.10 Multicast TP Example

A second example illustrates the usage of the multicast reference.

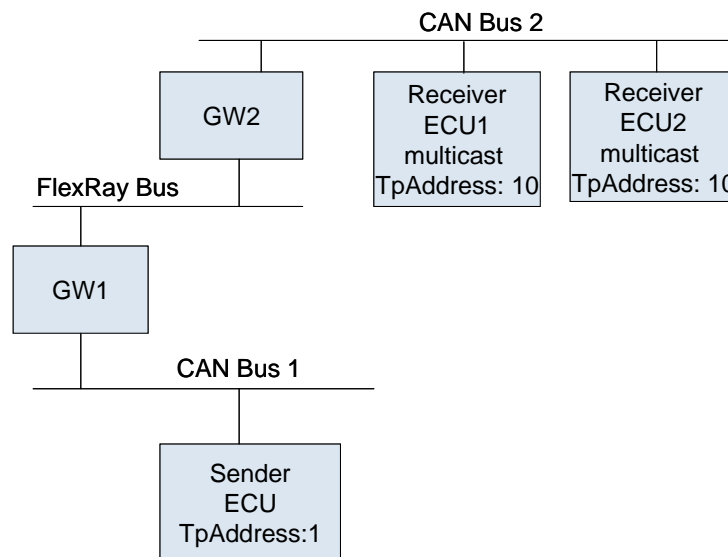

**Figure 6.69: TP multicast Example**

```

Can Bus 1 (CanTpConfig1):
CanTpConnection
  source TpNode: Sender ECU, TpAddress: 1
  target TpNode: GW1
  multicast TpAddress: 10
  
```

```

FlexRay Bus (FlexRayTpConfig):
FlexRayTpConnection
  source TpNode: GW1, TpAddress: 1
  target TpNode: GW2
  multicast TpAddress: 10
  
```

```

CAN Bus 2 (CanTpConfig 2):
CanTpConnectionChannel
  source TpNode: GW2, TpAddress: 1
  target TpNode: Receiver ECU1
  target TpNode: Receiver ECU2
  
```

multicast TpAddress: 10

Please note that the target `TpNode` does not contain a reference to the `TpAddress`. The multicast `TpAddress` is described by a direct reference from the connection.

### 6.8.11 Diagnostic Connection


A prominent use of the TP in automotive systems is the implementation of diagnostic communication. Data sent from and to the tester frequently exceeds the native size of a communication package on typical bus systems used for this purpose.

However, the mere usage of TP channels for diagnostic purposes is missing one important aspect: TP channels, as defined by the AUTOSAR standard, are unidirectional by nature.

For diagnostic communication, it is very important to be able to define pairs of TP connections that can be taken to send related *request* and *response* messages.

In order to support this use case the meta-class [DiagnosticConnection](#) has been introduced.



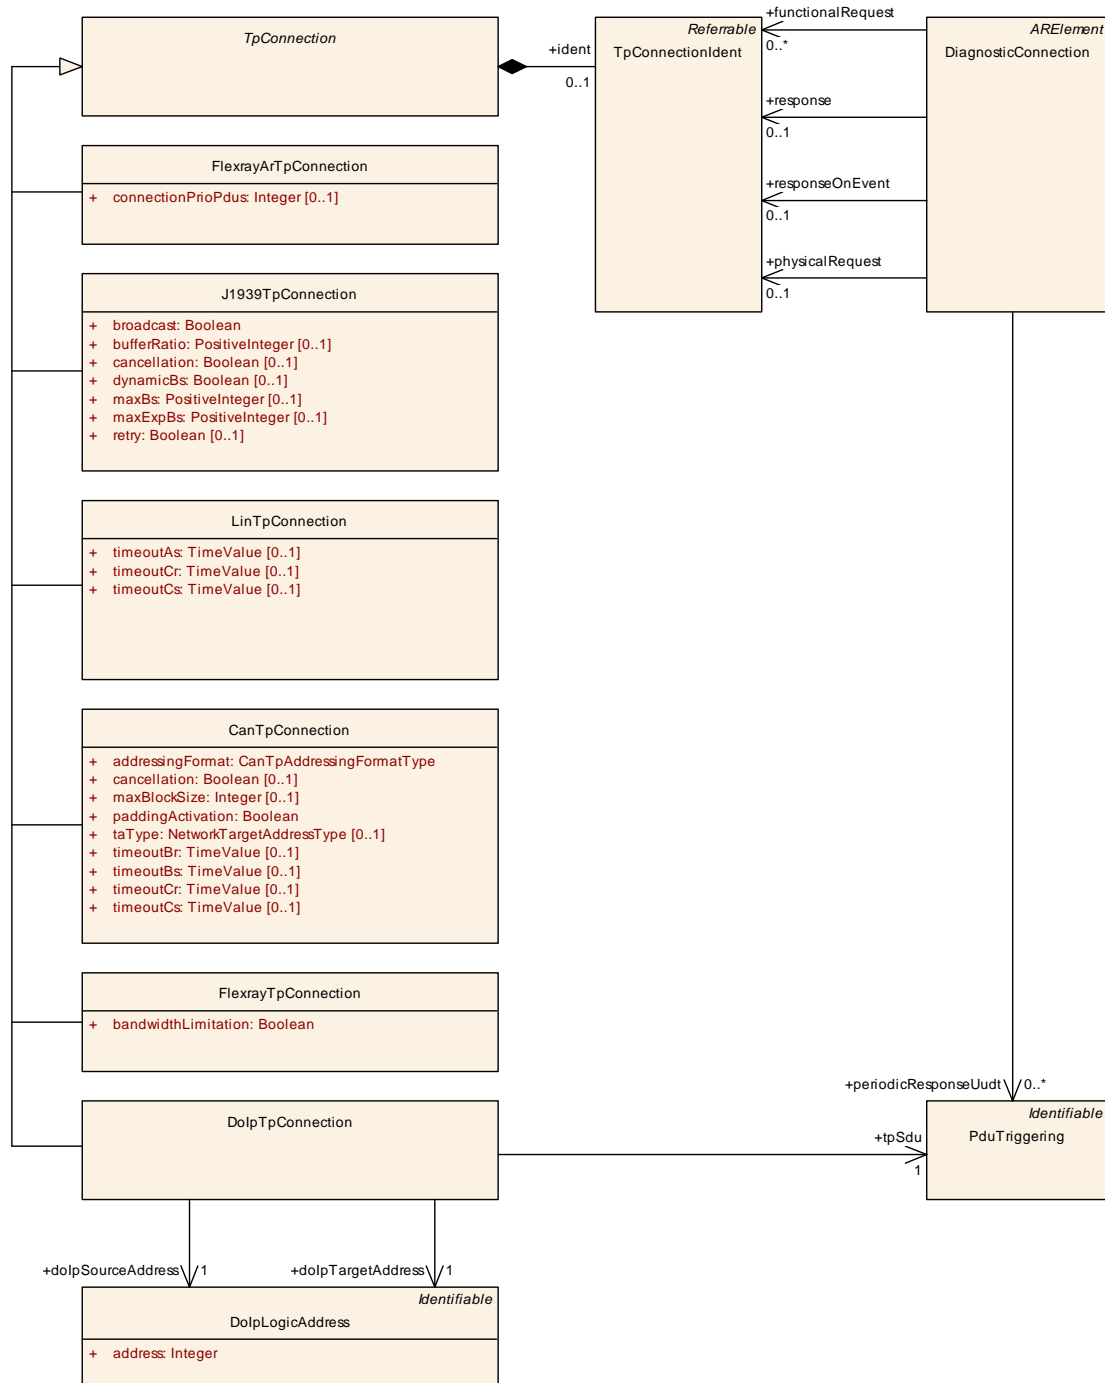

**Figure 6.70: Modeling of DiagnosticConnection**

[TPS\_SYST\_05003] Usage of **DiagnosticConnection** in combination with a TP  
[DiagnosticConnection] allows for the dedicated identification of TP connections used for the various diagnostic message sending use cases:

- functionalRequest
- physicalRequest
- responseOnEvent

- [response](#)

]()

**[TPS\_SYST\_05004] Usage of [DiagnosticConnection](#) in combination with UUDT** [In addition to the usage of TP connections, the [DiagnosticConnection](#) foresees the transmission of UUDT message for **periodic response**. For this purpose, the role [periodicResponseUdt](#) is supported.]()

**[constr\_1367] [periodicResponseUdt.periodicResponseUdt](#) shall only refer to a [DcmIPdu](#)** [If the role [periodicResponseUdt](#) exists then every [PduTriggering](#) referenced in the role [periodicResponseUdt](#) shall only refer to a [DcmIPdu](#).]()

Please note that the meta-class [TpConnectionIdent](#) (derived from [Referrable](#)) has been introduced for the purpose of allowing sub-classes of [TpConnection](#) to become the target of a reference while preserving full backwards-compatibility to the previous modeling.

This means in particular that the existence of a [shortName](#) is only required if the sub-class of [TpConnection](#) shall actually represent the target of a reference in the context of the definition of a [DiagnosticConnection](#).

This, however, is kind of self-evident (because the reference would not work without the existence of a [shortName](#) at the reference target) and therefore it is not necessary to formulate an explicit constraint that clarifies this issue.

**[constr\_1368] Limitation of the target of references from [DiagnosticConnection](#)** [[DiagnosticConnection](#) shall only reference (via the indirection created by [TpConnectionIdent](#)) the following sub-classes of the meta-class [TpConnection](#):

- [CanTpConnection](#)
- [FlexrayTpConnection](#)
- [FlexrayArTpConnection](#)
- [DoIpTpConnection](#)

]()

<b>Class</b>	<b>DiagnosticConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DiagnosticConnection			
<b>Note</b>	DiagnosticConnction that is used to describe the relationship between several TP connections. <b>Tags:</b> atp.recommendedPackage=DiagnosticConnections			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	DiagnosticConnection			
functional Request	<a href="#">TpConnectionIdent</a>	*	ref	Reference to functional request messages.
periodic ResponseUudt	<a href="#">PduTriggering</a>	*	ref	Reference to UUDT responses.
physical Request	<a href="#">TpConnectionIdent</a>	0..1	ref	Reference to a physical request message.
response	<a href="#">TpConnectionIdent</a>	0..1	ref	In the vast majority of cases a response is required. However, there are also cases where providing the response is not possible and/or not allowed.
responseOn Event	<a href="#">TpConnectionIdent</a>	0..1	ref	Reference to a ROE message. <b>Tags:</b> atp.Status=obsolete

**Table 6.241: DiagnosticConnection**

<b>Class</b>	<i>TpConnection</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DiagnosticConnection			
<b>Note</b>	TpConnection Base Class.			
<b>Base</b>	<i>ARObject</i>			
<b>Subclasses</b>	<a href="#">CanTpConnection</a> , <a href="#">DolpTpConnection</a> , <a href="#">EthTpConnection</a> , <a href="#">FlexrayArTpConnection</a> , <a href="#">FlexrayTpConnection</a> , <a href="#">J1939TpConnection</a> , <a href="#">LinTpConnection</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ident	<a href="#">TpConnectionIdent</a>	0..1	aggr	This adds the ability to become referable to Tp Connection.

**Table 6.242: TpConnection**

<b>Class</b>	<b>TpConnectionIdent</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::DiagnosticConnection			
<b>Note</b>	This meta-class is created to add the ability to become the target of a reference to the non-Referable Tp Connection.			
<b>Base</b>	<i>ARObject</i> , <i>Referable</i>			
<b>Aggregated by</b>	<a href="#">TpConnection.ident</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.243: TpConnectionIdent**

## 6.9 Network Management

The NM specification of AUTOSAR consist of a Generic Network Management Interface Module and of bus specific Network management adaptation layers (CanNm, FrNm, UdpNm, J1939Nm). The AUTOSAR Generic NM Interface module acts as a bus-independent adaptation layer between the bus-specific Network Management modules and the AUTOSAR basic software module Communication Manager. The AUTOSAR Generic NM Interface module is represented by `NmCluster`, `NmEcu`, `NmCoordinator` and `NmNode`. The bus-specific Network Management attributes are represented by `BusspecificNmEcu`. See also figure 6.71.

**[constr\_5032] Maximal one `NmConfig` per `System` is allowed to be defined** [Each `System` element is allowed to reference at most one `NmConfig` element with the `fibexElement` reference.]()

**[constr\_3057] Maximal one `BusspecificNmEcu` per `NmEcu` and bus system is allowed to be defined** [For each `NmEcu` at most one `BusspecificNmEcu` per bus system (FlexRay/Can/Udp/J1939) is allowed to be defined.]()


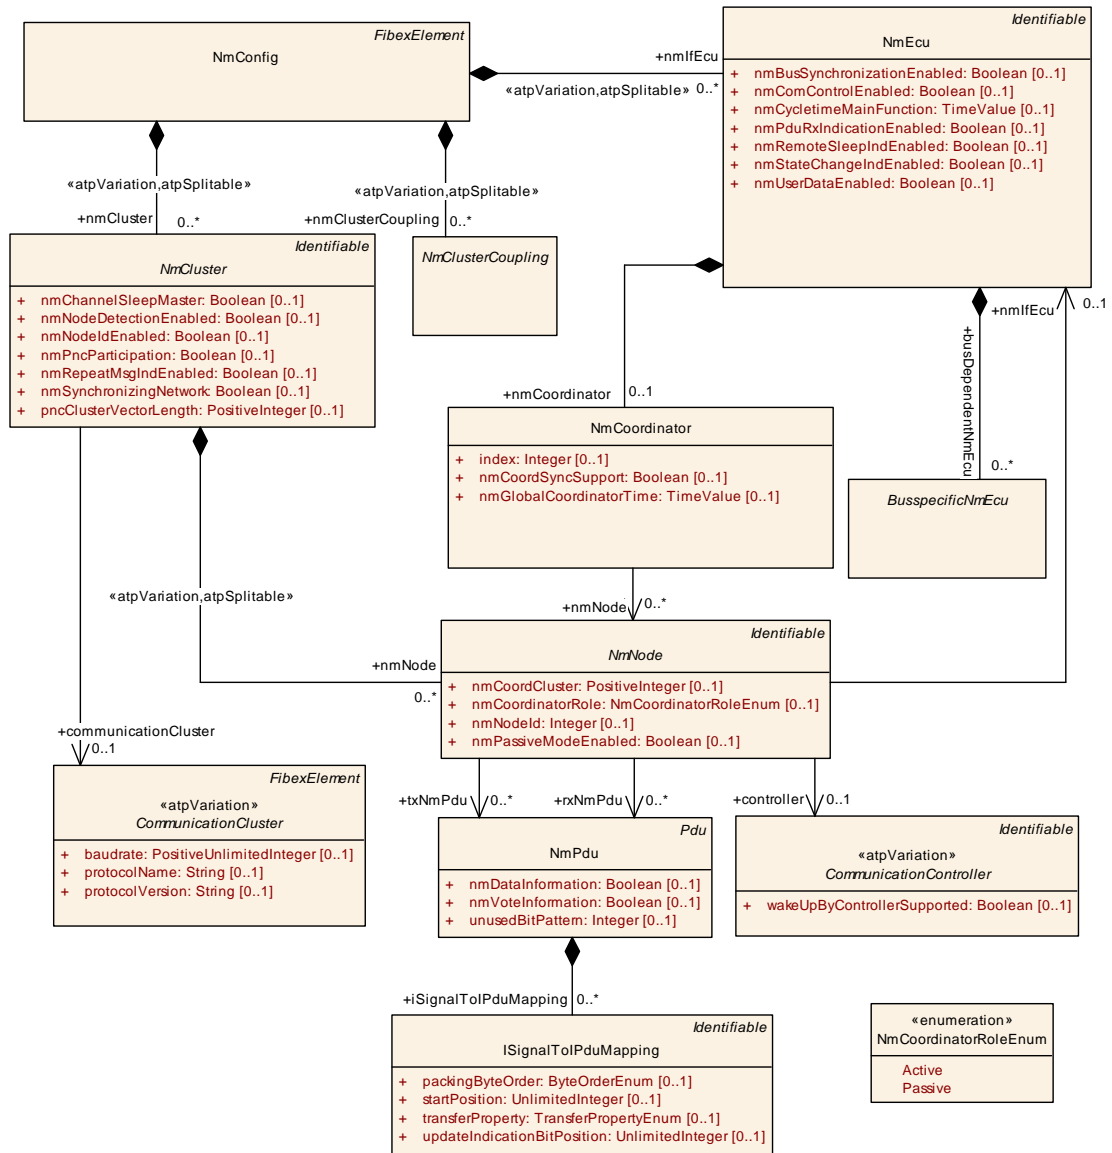


Figure 6.71: Generic Nm elements

The `NmCluster` contains a set of `NmNodes`.

The `NmNodes` are associated with the `CommunicationController` in the topology and belong to exactly one `NmEcu`. The reception and transmission of `NmPdus` is specified with the `rxNmPdu` and `txNmPdu` associations to `NmPdus`.

[TPS\_SYST\_01107] **Definition of `NmCoordinator`** [An `nmCoordinator` is connected to two or more `CommunicationClusters` (via `NmNodes`) out of which at least two contain the requirement to shutdown synchronously.] (/)

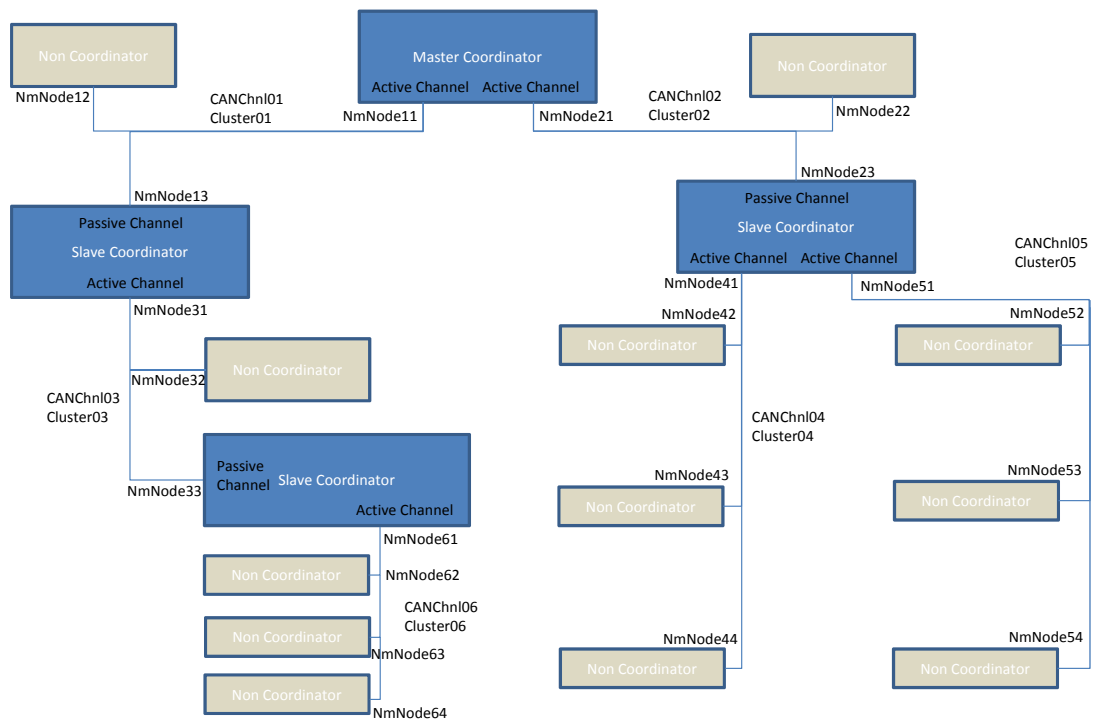

**Figure 6.72: Nm Example**

Figure 6.72 shows an example and the following section shows how the model shall be used:

**NmCluster: Cluster01**

- NmNodes:
  - NmNode11 (NmEcu1)
  - NmNode12 (NmEcu2)
  - NmNode13 (NmEcu3)

**NmCluster: Cluster02**

- NmNodes:
  - NmNode21 (NmEcu1)
  - NmNode22 (NmEcu4)
  - NmNode23 (NmEcu5)

**NmCluster: Cluster03**

- NmNodes:
  - NmNode31 (NmEcu3)
  - NmNode32 (NmEcu6)

– NmNode33 (NmEcu7)

...

**NmEcu1: NmCoordinator (MasterCoordinator)**

- NmNode11 (nmCoordinatorRole: Active)
- NmNode21 (nmCoordinatorRole: Active)

**NmEcu3: NmCoordinator (SlaveCoordinator)**

- NmNode13 (nmCoordinatorRole: Passive)
- NmNode31 (nmCoordinatorRole: Active)

...

<b>Class</b>	<b>NmConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Contains the all configuration elements for AUTOSAR Nm. <b>Tags:</b> atp.recommendedPackage=NmConfigs			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nmCluster	NmCluster	*	aggr	Collection of NM Clusters atpVariation: Derived, because cluster can be variable. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=nmCluster.shortName, nmCluster.variationPoint.shortLabel vh.latestBindingTime=postBuild
nmCluster Coupling	NmClusterCoupling	*	aggr	Collection of NmClusterCouplings atpVariation: Derived, because NmCluster can vary. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=nmClusterCoupling, nmClusterCoupling.variationPoint.shortLabel vh.latestBindingTime=postBuild
nmIfEcu	NmEcu	*	aggr	Collection of NM ECUs atpVariation: Derived, because EcuInstance can be variable. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=nmIfEcu.shortName, nmIfEcu.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table 6.244: NmConfig**

<b>Class</b>	<b>NmCluster</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Set of NM nodes coordinated with use of the NM algorithm.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Subclasses</b>	CanNmCluster, FlexrayNmCluster, J1939NmCluster, UdpNmCluster			
<b>Aggregated by</b>	NmConfig.nmCluster			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Cluster	CommunicationCluster	0..1	ref	Association to a CommunicationCluster in the topology description.
nmChannel SleepMaster	Boolean	0..1	attr	This parameter shall be set to indicate if the sleep of this network can be absolutely decided by the local node only and that no other nodes can oppose that decision.
nmNode	NmNode	*	aggr	Collection of NmNodes of the NmCluster. atpVariation: Derived, because NmNode can be variable. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=nmNode.shortName, nmNode.variationPoint.shortLabel vh.latestBindingTime=postBuild







Class	NmCluster (abstract)			
nmNode Detection Enabled	Boolean	0..1	attr	Enables the Request Repeat Message Request support. Only valid if nmNodeEnabled is set to true.
nmNodeEnabled	Boolean	0..1	attr	Enables the source node identifier.
nmPnc Participation	Boolean	0..1	attr	Defines whether this NmCluster contributes to the partial network mechanism.
nmRepeatMsg IndEnabled	Boolean	0..1	attr	Switch for enabling the Repeat Message Bit Indication.
nm Synchronizing Network	Boolean	0..1	attr	If this parameter is true, then this network is a synchronizing network for the NM coordination cluster which it belongs to. The network is expected to call Nm_SynchronizationPoint() at regular intervals.
pncCluster VectorLength	PositiveInteger	0..1	attr	Optionally defines the length of the PNC Vector per CommunicationCluster (and VLAN in case of UdpNm). If not defined then System.pncVectorLength applies. Should only make the PNC Vector shorter (or same length as defined in System.pncVectorLength). <b>Tags:</b> atp.Status=draft

**Table 6.245: NmCluster**

For the placement of user data in an NmPdu several boundaries and constraints have to be respected.

**[TPS\_SYST\_03069] User data shall be defined within empty space of the NmPdu** [If user data is defined it shall be located within the not already used bounds of the NmPdu, specifically user data shall:

- not exceed NmPdu.length
- not be defined in the location where CBV and/or Nid are defined (nmCbvPosition and nmNidPosition are configured
- not be defined where the PncBitVector is located.

]()

**[TPS\_SYST\_03070] User data shall be before the PncBitVector or after the PncBitVector** [If NmCluster.nmPncParticipation is set to true then user data shall be placed either:

- between CBV (control bit vector) and PncBitVector or
- after the PncBitVector.

There shall not be two sections with user data in one NmPdu if PncBitVector (one before the PncBitVector and one after the PncBitVector).]()

**[TPS\_SYST\_03071] Available space of user data with PncBitVector** [If NmCluster.nmPncParticipation is set to true (i.e. partial network is enabled on that NmCluster) then user data may be defined in the range:

- if the user data is mapped between the NM system bytes (CBV, Nid) and the PncBitVector, then the size of user data range is determined by the difference between `System.pncVectorOffset` and the length of the system bytes (Nid, CBV).
- if the user data is mapped after the PncBitVector, then the size of user data range is determined by the difference between `NmPdu.length` and the last byte position of the PncBitVector.

]()

**[TPS\_SYST\_03072] Available space of user data without PncBitVector** [If `NmCluster.nmPncParticipation` is set to false (i.e. no partial network is enabled on that `NmCluster`) then user data may be defined in the range between the NM system bytes (CBV, Nid) and the end of the `NmPdu`. The size of user data range is determined by the difference between `NmPdu.length` and the length of the system bytes (Nid, CBV).]()

**[constr\_3044] CBV configuration in case partial network is used** [In case a partial network is used the control bit vector (CBV) shall be defined in Byte 0 of the `NmPdu` (`nmCbvPosition = 0`).]()

**[constr\_3227] NmNode.nmPassiveModeEnabled setting** [`NmNode.nmPassiveModeEnabled` shall be set to the same value in all `NmClusters` with the same bus protocol in the scope of one `NmEcu`.]()

<b>Class</b>	<b>NmEcu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	ECU on which NM is running.			
<b>Base</b>	<i>ARObject</i> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">NmConfig.nmlfEcu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
busDependentNmEcu	<a href="#">BusspecificNmEcu</a>	*	aggr	Cluster specific NmEcu attributes
ecuInstance	<a href="#">EcuInstance</a>	1	ref	Association to an ECUInstance in the topology description.
nmBusSynchronizationEnabled	Boolean	0..1	attr	Enables bus synchronization support.
nmComControlEnabled	Boolean	0..1	attr	Enables the Communication Control support.
nmCoordinator	<a href="#">NmCoordinator</a>	0..1	aggr	Nm ECU may coordinate different clusters.
nmCycleTimeMainFunction	TimeValue	0..1	attr	The period between successive calls to the Main Function of the NM Interface in seconds.
nmPduRxIndicationEnabled	Boolean	0..1	attr	Switch for enabling the PDU Rx Indication.
nmRemoteSleepIndEnabled	Boolean	0..1	attr	Switch for enabling remote sleep indication support.
nmStateChangeIndEnabled	Boolean	0..1	attr	Enables the CAN Network Management state change notification.
nmUserDataEnabled	Boolean	0..1	attr	Switch for enabling user data support.

**Table 6.246: NmEcu**

<b>Class</b>	<b><i>BusspecificNmEcu</i></b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Busspecific NmEcu attributes.			
<b>Base</b>	<i>ARObject</i>			
<b>Subclasses</b>	<a href="#">CanNmEcu</a> , <a href="#">FlexrayNmEcu</a> , <a href="#">J1939NmEcu</a> , <a href="#">UdpNmEcu</a>			
<b>Aggregated by</b>	<a href="#">NmEcu.busDependentNmEcu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.247: BusspecificNmEcu**

<b>Class</b>	<b>NmCoordinator</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	A NM coordinator is an ECU, which is connected to at least two busses, and where the requirement exists that shutdown of NM of at least two of these busses (also referred to as coordinated busses) has to be performed synchronously.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">NmEcu.nmCoordinator</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
index	Integer	0..1	attr	Identification of the NmCoordinator.





Class	NmCoordinator			
nmCoordSyncSupport	Boolean	0..1	attr	Switch for enabling NmCoordinatorSync (coordination of nested busses) support.
nmGlobalCoordinatorTime	TimeValue	0..1	attr	This attribute defines the maximum shutdown time (in seconds) of a connected and coordinated NM-Cluster.
nmNode	<a href="#">NmNode</a>	*	ref	reference to busses (via NmNodes) that are coordinated by the NmCoordinator.

**Table 6.248: NmCoordinator**

Class	NmNode (abstract)			
Package	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
Note	The linking of NmEcus to NmClusters is realized via the NmNodes.			
Base	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
Subclasses	<a href="#">CanNmNode</a> , <a href="#">FlexrayNmNode</a> , <a href="#">J1939NmNode</a> , <a href="#">UdpNmNode</a>			
Aggregated by	<a href="#">NmCluster.nmNode</a>			
Attribute	Type	Mult.	Kind	Note
controller	<a href="#">CommunicationController</a>	0..1	ref	Association to an CommunicationController in the topology description.
nmCoordCluster	PositiveInteger	0..1	attr	NmCoordinationCluster identification number.
nmCoordinatorRole	<a href="#">NmCoordinatorRoleEnum</a>	0..1	attr	This attribute indicates the role the NM Coordinator will have on this channel.
nmIfEcu	<a href="#">NmEcu</a>	0..1	ref	Reference to the NmEcu that contains this NmNode. (CommunicationController that is referenced by the NmNode shall be contained in the EcuInstance that is referenced by the NmEcu).
nmNodeId	Integer	0..1	attr	Node identifier of local NmNode. Shall be unique in the NmCluster.
nmPassiveModeEnabled	Boolean	0..1	attr	Enables support of the Passive Mode. The passive mode is configurable per channel.
rxNmPdu	<a href="#">NmPdu</a>	*	ref	receive NM Pdu.
txNmPdu	<a href="#">NmPdu</a>	*	ref	transmit NM Pdu

**Table 6.249: NmNode**

Enumeration	NmCoordinatorRoleEnum
Package	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement
Note	Supported NmCoordinator roles.
Aggregated by	<a href="#">NmNode.nmCoordinatorRole</a>
Literal	Description
Active	Coordinator which "actively" performs NmCoordinator functionality at this channel <b>Tags:</b> atp.EnumerationLiteralIndex=0
Passive	Coordinator which "passively" performs NmCoordinator functionality at this channel - used at NmCoordinatorSync use case. <b>Tags:</b> atp.EnumerationLiteralIndex=1


**Table 6.250: NmCoordinatorRoleEnum**

<b>Class</b>	<b>NmClusterCoupling</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Attributes that are valid for each of the referenced (coupled) clusters.			
<b>Base</b>	<i>ARObject</i>			
<b>Subclasses</b>	<a href="#">CanNmClusterCoupling</a> , <a href="#">FlexrayNmClusterCoupling</a> , <a href="#">UdpNmClusterCoupling</a>			
<b>Aggregated by</b>	<a href="#">NmConfig.nmClusterCoupling</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.251: NmClusterCoupling**

### 6.9.1 FlexRay Network Management

The following class tables specify the configuration parameters of FlexRay Nm.

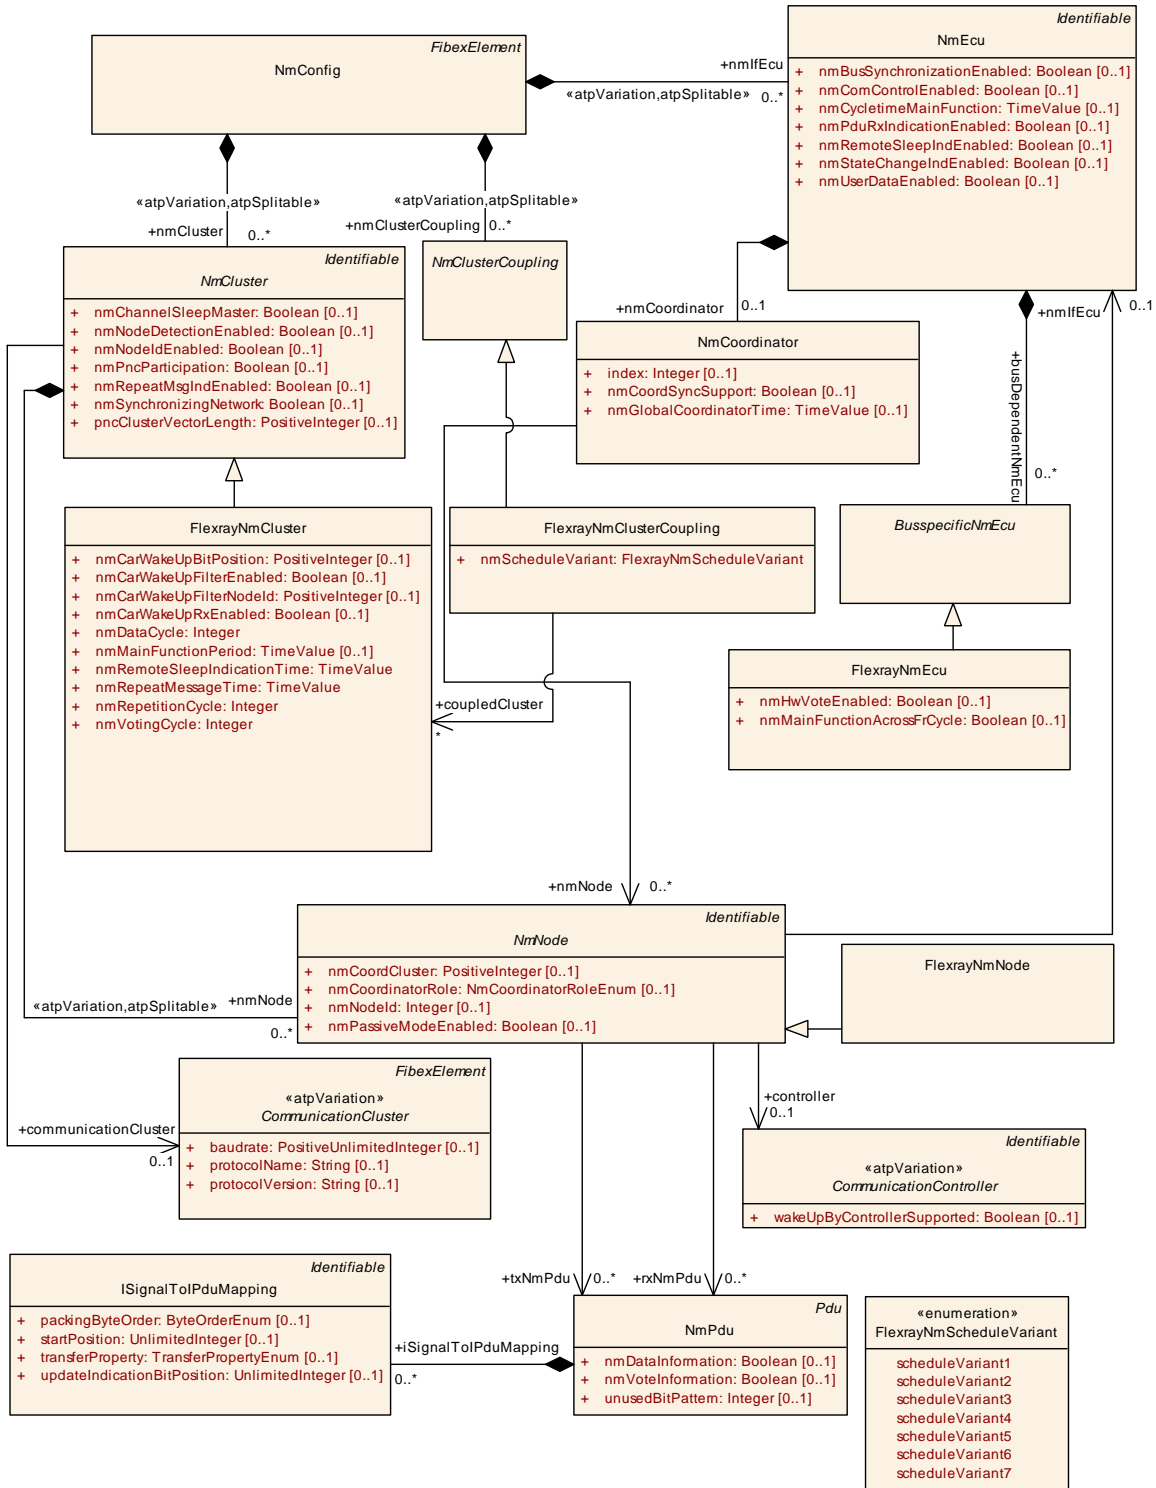

**Figure 6.73: FlexRay Network Management Configuration (TransportProtocols: Nm-FlexRayConfiguration)**

<b>Class</b>	<b>FlexrayNmCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	FlexRay specific NM cluster attributes.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">NmCluster</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">NmConfig.nmCluster</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nmCarWakeUpBitPosition	PositiveInteger	0..1	attr	Specifies the bit position of the CarWakeUp within the Nm Pdu.
nmCarWakeUpFilterEnabled	Boolean	0..1	attr	If this attribute is set to true the CareWakeUp filtering is supported. In this case only the CarWakeUp bit within the NmPdu with source node identifier nmCarWakeUpFilterNodeId is considered as CarWakeUp request.
nmCarWakeUpFilterNodeId	PositiveInteger	0..1	attr	Source node identifier for CarWakeUp filtering. If Car WakeUp filtering is supported (nmCarWakeUpFilterEnabled), only the CarWakeUp bit within the NmPdu with source node identifier nmCarWakeUpFilterNodeId is considered as CarWakeUp request.
nmCarWakeUpRxEnabled	Boolean	0..1	attr	If set to true this attribute enables the support of CarWakeUp bit evaluation in received NmPdus.
nmDataCycle	Integer	1	attr	Number of FlexRay Communication Cycles needed to transmit the Nm Data PDUs of all FlexRay Nm Ecus of this FlexRayNmCluster.
nmMainFunctionPeriod	TimeValue	0..1	attr	Defines the processing cycle of the main function of FrNm module.
nmRemoteSleepIndicationTime	TimeValue	1	attr	Timeout for Remote Sleep Indication in seconds. It defines the time how long it shall take to recognize that all other nodes are ready to sleep.
nmRepeatMessageTime	TimeValue	1	attr	Timeout for Repeat Message State in seconds. Defines the time how long the NM shall stay in the Repeat Message State.
nmRepetitionCycle	Integer	1	attr	Number of FlexRay Communication Cycles used to repeat the transmission of the Nm vote Pdus of all Flex Ray NmEcus of this FlexRayNmCluster. This value shall be an integral multiple of nmVotingCycle.
nmVotingCycle	Integer	1	attr	Number of FlexRay CommunicationCycles needed to transmit the Nm vote of Pdus of all FlexRay NmEcus of this FlexRayNmCluster.

**Table 6.252: FlexrayNmCluster**

<b>Class</b>	<b>FlexrayNmEcu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	FlexRay specific attributes.			
<b>Base</b>	ARObject, <a href="#">BusspecificNmEcu</a>			
<b>Aggregated by</b>	<a href="#">NmEcu.busDependentNmEcu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nmHwVoteEnabled	Boolean	0..1	attr	Switch for enabling the processing of FlexRay Hardware aggregated NM-Votes.
nmMainFunctionAcrossFrCycle	Boolean	0..1	attr	Parameter describing if the execution of the FrNm_Main function crosses theFlexRay cycle boundary or not.

**Table 6.253: FlexrayNmEcu**

<b>Class</b>	<b>FlexrayNmClusterCoupling</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	FlexRay attributes that are valid for each of the referenced (coupled) FlexRay clusters.			
<b>Base</b>	ARObject, NmClusterCoupling			
<b>Aggregated by</b>	NmConfig.nmClusterCoupling			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
coupledCluster	FlexrayNmCluster	*	ref	Reference to coupled FlexRay Clusters.
nmSchedule Variant	FlexrayNmSchedule Variant	1	attr	FrNm schedule variant according to FrNm SWS.

**Table 6.254: FlexrayNmClusterCoupling**

<b>Class</b>	<b>FlexrayNmNode</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	FlexRay specific NM Node attributes.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, NmNode, Referrable			
<b>Aggregated by</b>	NmCluster.nmNode			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.255: FlexrayNmNode**

<b>Enumeration</b>	<b>FlexrayNmScheduleVariant</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement
<b>Note</b>	FrNm schedule variant according to FrNm SWS.
<b>Aggregated by</b>	FlexrayNmClusterCoupling.nmScheduleVariant
<b>Literal</b>	<b>Description</b>
scheduleVariant1	NM-Vote and NM Data transmitted within one PDU in static segment. The NM-Vote has to be realized as separate bit within the PDU. <b>Tags:</b> atp.EnumerationLiteralIndex=0
scheduleVariant2	NM-Vote and NM-Data transmitted within one PDU in dynamic segment. The presence (or non-presence) of the PDU corresponds to the NM-Vote <b>Tags:</b> atp.EnumerationLiteralIndex=1
scheduleVariant3	NM-Vote and NM-Data are transmitted in the static segment in separate PDUs. This alternative is not recommended => Alternative 1 should be used instead. <b>Tags:</b> atp.EnumerationLiteralIndex=2
scheduleVariant4	NM-Vote transmitted in static and NM-Data transmitted in dynamic segment. <b>Tags:</b> atp.EnumerationLiteralIndex=3
scheduleVariant5	NM-Vote is transmitted in dynamic and NM-Data is transmitted in static segment. This alternative is not recommended => Variants 2 or 6 should be used instead. <b>Tags:</b> atp.EnumerationLiteralIndex=4
scheduleVariant6	NM-Vote and NM-Data are transmitted in dynamic segment in separate PDUs. <b>Tags:</b> atp.EnumerationLiteralIndex=5
scheduleVariant7	NM-Vote and a copy of the CBV are transmitted in the static segment (using the FlexRay NM Vector support) and NM-Data is transmitted in the dynamic segment <b>Tags:</b> atp.EnumerationLiteralIndex=6

**Table 6.256: FlexrayNmScheduleVariant**



### 6.9.2 CAN Network Management

The following class tables specify the configuration parameters of CAN Nm.

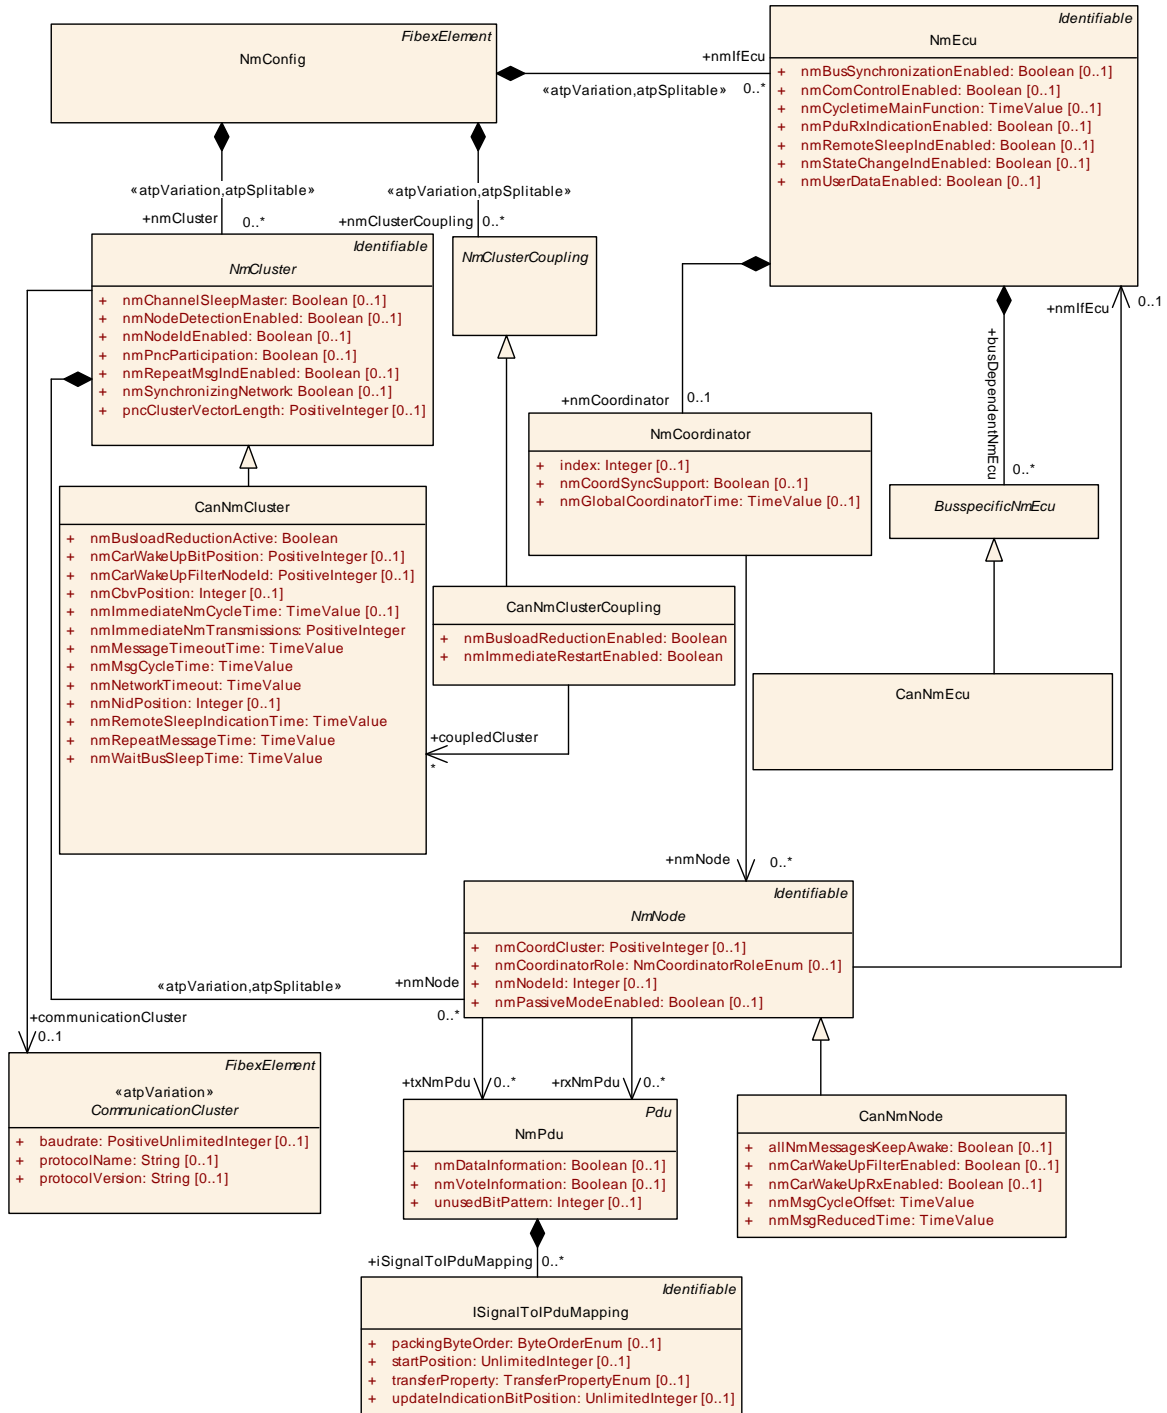


Figure 6.74: CAN Network Management Configuration (TransportProtocols: NmCanConfiguration)

<b>Class</b>	<b>CanNmCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Can specific NmCluster attributes			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">NmCluster</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">NmConfig.nmCluster</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nmBusloadReductionActive	Boolean	1	attr	It determines if bus load reduction for the respective Can Nm channel is active or not.
nmCarWakeUpBitPosition	PositiveInteger	0..1	attr	Specifies the bit position of the CarWakeUp within the Nm Pdu.
nmCarWakeUpFilterNodeId	PositiveInteger	0..1	attr	Source node identifier for CarWakeUp filtering.
nmCbvPosition	Integer	0..1	attr	Defines the position of the control bit vector within the Nm Pdu (Byte position). If this attribute is not configured, the Control Bit Vector is not used.
nmImmediateNmCycleTime	TimeValue	0..1	attr	Defines the immediate NmPdu cycle time in seconds which is used for nmImmediateNmTransmissions NmPdu transmissions. This parameter is only valid if CanNm ImmediateNmTransmissions is greater one.
nmImmediateNmTransmissions	PositiveInteger	1	attr	Defines the number of immediate NmPdus which shall be transmitted. If the value is zero no immediate NmPdus are transmitted. The cycle time of immediate NmPdus is defined by nmImmediateNmCycleTime.
nmMessageTimeoutTime	TimeValue	1	attr	Timeout of an NmPdu in seconds. It determines how long the NM shall wait with notification of transmission failure while communication errors occur on the bus.
nmMsgCycleTime	TimeValue	1	attr	Period of a NmPdu in seconds. It determines the periodic rate in the periodic transmission mode with bus load reduction and is the basis for transmit scheduling in the periodic transmission mode without bus load reduction.
nmNetworkTimeout	TimeValue	1	attr	Network Timeout for NmPdus in seconds It denotes the time how long the CanNm shall stay in the Network Mode before transition into Prepare Bus-Sleep Mode shall take place.
nmNidPosition	Integer	0..1	attr	Defines the byte position of the source node identifier within the NmPdu. If this attribute is not configured, the Node Identification is not used.
nmRemoteSleepIndicationTime	TimeValue	1	attr	Timeout for Remote Sleep Indication in seconds. It defines the time how long it shall take to recognize that all other nodes are ready to sleep.
nmRepeatMessageTime	TimeValue	1	attr	Timeout for Repeat Message State in seconds. Defines the time how long the NM shall stay in the Repeat Message State.
nmWaitBusSleepTime	TimeValue	1	attr	Timeout for bus calm down phase in seconds. It denotes the time how long the CanNm shall stay in the Prepare Bus-Sleep Mode before transition into Bus-Sleep Mode shall take place.

**Table 6.257: CanNmCluster**

**[constr\_3069] Allowed [CanNmCluster.nmNidPosition](#) values** [If defined, the value of [CanNmCluster.nmNidPosition](#) shall only be set to either 0 or 1.] ()

**[constr\_3070] Allowed [CanNmCluster.nmCbvPosition](#) values** [If defined, the value of [CanNmCluster.nmCbvPosition](#) shall only be set to either 0 or 1.] ()

**[constr\_3071] CanNmCluster.nmCbvPosition and CanNmCluster.nmNidPosition shall never have the same value** [CanNmCluster.nmCbvPosition and CanNmCluster.nmNidPosition shall never have the same value.]()

<b>Class</b>	<b>CanNmEcu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	CAN specific attributes.			
<b>Base</b>	ARObject, <a href="#">BusspecificNmEcu</a>			
<b>Aggregated by</b>	<a href="#">NmEcu.busDependentNmEcu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.258: CanNmEcu**

<b>Class</b>	<b>CanNmClusterCoupling</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	CAN attributes that are valid for each of the referenced (coupled) CAN clusters.			
<b>Base</b>	ARObject, <a href="#">NmClusterCoupling</a>			
<b>Aggregated by</b>	<a href="#">NmConfig.nmClusterCoupling</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
coupledCluster	<a href="#">CanNmCluster</a>	*	ref	Reference to coupled CAN Clusters.
nmBusloadReductionEnabled	Boolean	1	attr	Enables busload reduction support
nmImmediateRestartEnabled	Boolean	1	attr	Enables the asynchronous transmission of a CanNm PDU upon bus-communication request in Prepare-Bus-Sleep mode.

**Table 6.259: CanNmClusterCoupling**

<b>Class</b>	<b>CanNmNode</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	CAN specific NM Node attributes.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">NmNode</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">NmCluster.nmNode</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
allNmMessagesKeepAwake	Boolean	0..1	attr	Specifies if Nm drops irrelevant NM PDUs.  false: Only NM PDUs with a Partial Network Information Bit (PNI) = true and containing a Partial Network request for this ECU trigger the standard RX indication handling and thus keep the ECU awake  true: Every NM PDU triggers the standard RX indication handling and keeps the ECU awake
nmCarWakeUpFilterEnabled	Boolean	0..1	attr	If this attribute is set to true the CareWakeUp filtering is supported.
nmCarWakeUpRxEnabled	Boolean	0..1	attr	If set to true this attribute enables the support of CarWakeUp bit evaluation in received NmPdus.
nmMsgCycleOffset	TimeValue	1	attr	Node specific time offset in the periodic transmission mode. It determines the start delay of the transmission. Specified in seconds.
nmMsgReducedTime	TimeValue	1	attr	Node specific bus cycle time in the periodic transmission mode with bus load reduction. Specified in seconds.


**Table 6.260: CanNmNode**

### 6.9.3 UDP Network Management

The UPD Nm model is similar to the Nm models of the other communication buses but there are some specific characteristics due to the modeling of `EthernetCluster` and `EthernetPhysicalChannel` (see also chapter 3.3.6).


The `UdpNmCluster` corresponds to one `EthernetPhysicalChannel` (VLAN). Therefore it is required that for each `EthernetPhysicalChannel` on one `EthernetCluster` a respective `UdpNmCluster` with a reference to the `EthernetPhysicalChannel` is created. All of these `UdpNmClusters` point to the same `EthernetCluster` which the `EthernetPhysicalChannels` are contained in.

Thus, additionally to the reference from `NmCluster` to the `CommunicationCluster` (which applies to all Nm models), there is need for an Ethernet specific reference from the `UdpNmCluster` to the `EthernetPhysicalChannel`. This allows to specify for which VLAN this `UdpNmCluster` applies.

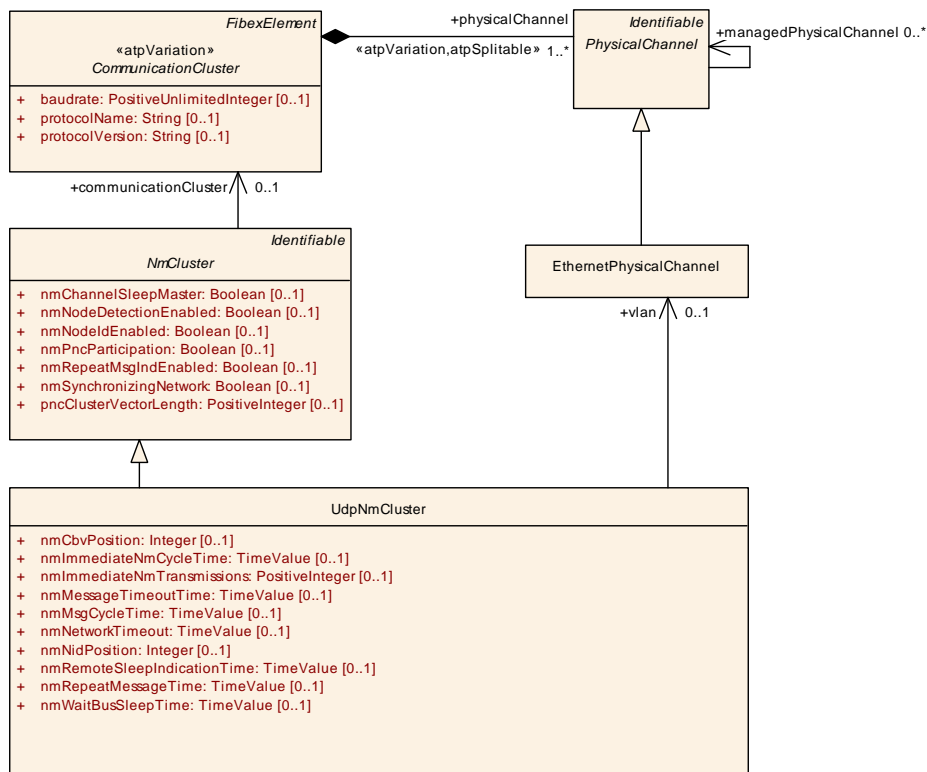

**Figure 6.75: UdpNmCluster structure**

The following class tables specify the configuration parameters of UDP Nm.

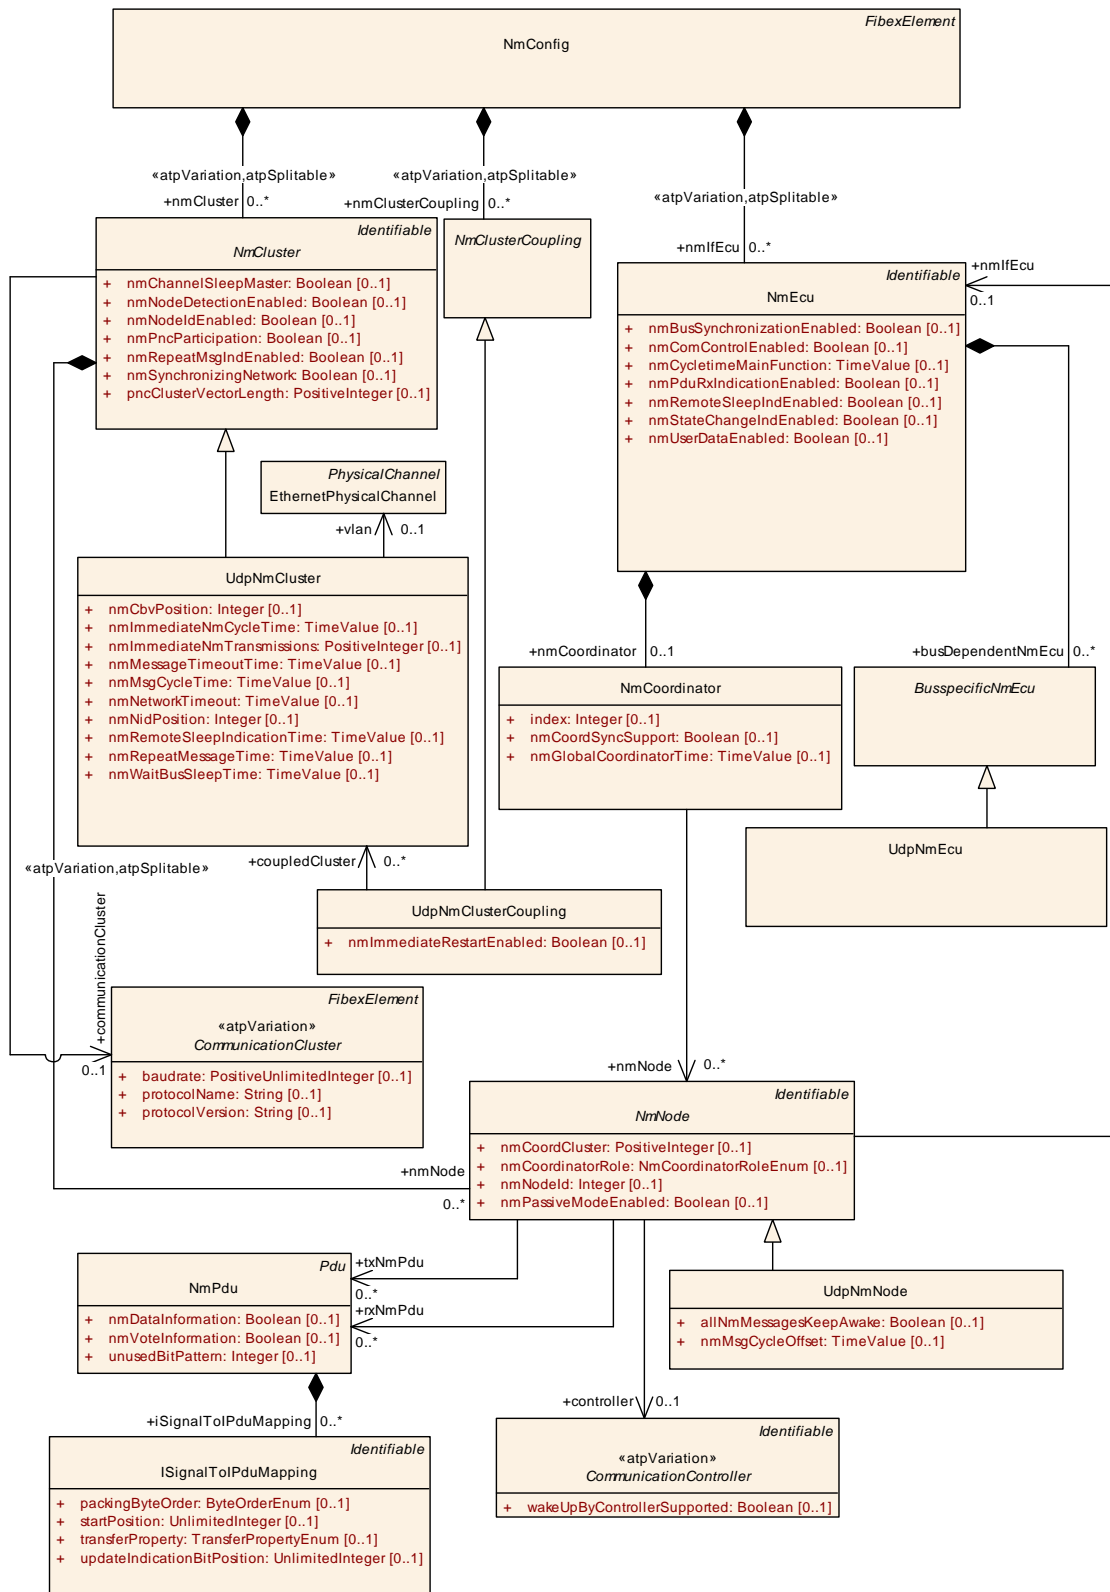

**Figure 6.76: UDP Network Management Configuration (TransportProtocols: NmUdpConfiguration)**

<b>Class</b>	<b>UdpNmCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Udp specific NmCluster attributes			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">NmCluster</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">NmConfig.nmCluster</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nmCbvPosition	Integer	0..1	attr	Defines the position of the control bit vector within the Nm Pdu (Byte position). If this attribute is not configured, the Control Bit Vector is not used.
nmImmediateNmCycleTime	TimeValue	0..1	attr	Defines the immediate NmPdu cycle time in seconds which is used for nmImmediateNmTransmissions NmPdu transmissions. This attribute is only valid if nmImmediateNmTransmissions is greater one.
nmImmediateNmTransmissions	PositiveInteger	0..1	attr	Defines the number of immediate NmPdus which shall be transmitted. If the value is zero no immediate NmPdus are transmitted. The cycle time of immediate NmPdus is defined by nmImmediateNmCycleTime.
nmMessageTimeoutTime	TimeValue	0..1	attr	Timeout of a NmPdu in seconds. It determines how long the NM shall wait with notification of transmission failure while communication errors occur on the bus.
nmMsgCycleTime	TimeValue	0..1	attr	Period of a NmPdu in seconds. It determines the periodic rate in the periodic transmission mode with bus load reduction and is the basis for transmit scheduling in the periodic transmission mode without bus load reduction.
nmNetworkTimeout	TimeValue	0..1	attr	Network Timeout for NmPdus in seconds. It denotes the time how long the UdpNm shall stay in the Network Mode before transition into Prepare Bus-Sleep Mode shall take place.
nmNidPosition	Integer	0..1	attr	Defines the byte position of the source node identifier within the NmPdu. If this attribute is not configured, the Node Identification is not used.
nmRemoteSleepIndicationTime	TimeValue	0..1	attr	Timeout for Remote Sleep Indication in seconds. It defines the time how long it shall take to recognize that all other nodes are ready to sleep.
nmRepeatMessageTime	TimeValue	0..1	attr	Timeout for Repeat Message State in seconds. Defines the time how long the NM shall stay in the Repeat Message State.
nmWaitBusSleepTime	TimeValue	0..1	attr	Timeout for bus calm down phase in seconds. It denotes the time how long the CanNm shall stay in the Prepare Bus-Sleep Mode before transition into Bus-Sleep Mode shall take place.
vlan	<a href="#">EthernetPhysicalChannel</a>	0..1	ref	Reference to the vlan (represented by the Ethernet PhysicalChannel) this UdpNmCluster shall apply to.

**Table 6.261: UdpNmCluster**

**[constr\_3078] Allowed [UdpNmCluster.nmNidPosition](#) values** [If defined, the value of [UdpNmCluster.nmNidPosition](#) shall only be set to either 0 or 1.]()

**[constr\_3079] Allowed [UdpNmCluster.nmCbvPosition](#) values** [If defined, the value of [UdpNmCluster.nmCbvPosition](#) shall only be set to either 0 or 1.]()

**[constr\_3080] [UdpNmCluster.nmCbvPosition](#) and [UdpNmCluster.nmNidPosition](#) shall never have the same value** [[UdpNmCluster.nmCbvPosition](#) and [UdpNmCluster.nmNidPosition](#) shall never have the same value.]()

**[constr\_5222] Mandatory elements of [UdpNmCluster](#)** [The following attributes shall always be defined for the [UdpNmCluster](#):

- [nmMsgCycleTime](#)
- [nmMessageTimeoutTime](#)
- [nmNetworkTimeout](#)
- [nmRemoteSleepIndicationTime](#)
- [nmRepeatMessageTime](#)
- [nmWaitBusSleepTime](#)
- [communicationCluster](#)

]()

<b>Class</b>	<b>UdpNmEcu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Udp NM specific ECU attributes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">BusspecificNmEcu</a>			
<b>Aggregated by</b>	<a href="#">NmEcu.busDependentNmEcu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 6.262: UdpNmEcu**

<b>Class</b>	<b>UdpNmClusterCoupling</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Udp attributes that are valid for each of the referenced (coupled) UdpNm clusters.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">NmClusterCoupling</a>			
<b>Aggregated by</b>	<a href="#">NmConfig.nmClusterCoupling</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
coupledCluster	<a href="#">UdpNmCluster</a>	*	ref	Reference to coupled UdpNm Clusters.
nmImmediateRestartEnabled	Boolean	0..1	attr	Enables the asynchronous transmission of a CanNm PDU upon bus-communication request in Prepare-Bus-Sleep mode.

**Table 6.263: UdpNmClusterCoupling**

<b>Class</b>	<b>UdpNmNode</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	Udp specific NM Node attributes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">NmNode</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">NmCluster.nmNode</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>







Class	UdpNmNode			
allNmMessages KeepAwake	Boolean	0..1	attr	Specifies if Nm drops irrelevant NM PDUs.  false: Only NM PDUs with a Partial Network Information Bit (PNI) = true and containing a Partial Network request for this ECU trigger the standard RX indication handling and thus keep the ECU awake  true: Every NM PDU triggers the standard RX indication handling and keeps the ECU awake
nmMsgCycle Offset	TimeValue	0..1	attr	Node specific time offset in the periodic transmission node. It determines the start delay of the transmission. Specified in seconds.

**Table 6.264: UdpNmNode**

**[constr\_5223] Mandatory elements of UdpNmNode** [The following attributes shall always be defined for the UdpNmNode:

- nmMsgCycleOffset

]()


**[constr\_5224] UdpNmNode.nmMsgCycleOffset < UdpNmCluster.nmMsgCycleTime** [The value of UdpNmNode.nmMsgCycleOffset shall be smaller than the value of UdpNmCluster.nmMsgCycleTime.]()

**[constr\_5225] UdpNmCluster.nmNetworkTimeout multiple of UdpNmCluster.nmMsgCycleTime** [The value of UdpNmCluster.nmNetworkTimeout shall be  $n * \text{UdpNmCluster.nmMsgCycleTime}$  with  $n > 1$ .]()

**[constr\_5226] UdpNmCluster.nmRepeatMessageTime multiple of UdpNmCluster.nmMsgCycleTime** [The value of UdpNmCluster.nmRepeatMessageTime shall be  $n * \text{UdpNmCluster.nmMsgCycleTime}$ .]()

### 6.9.4 J1939 Network Management

The following class tables specify the configuration parameters of J1939 Nm.

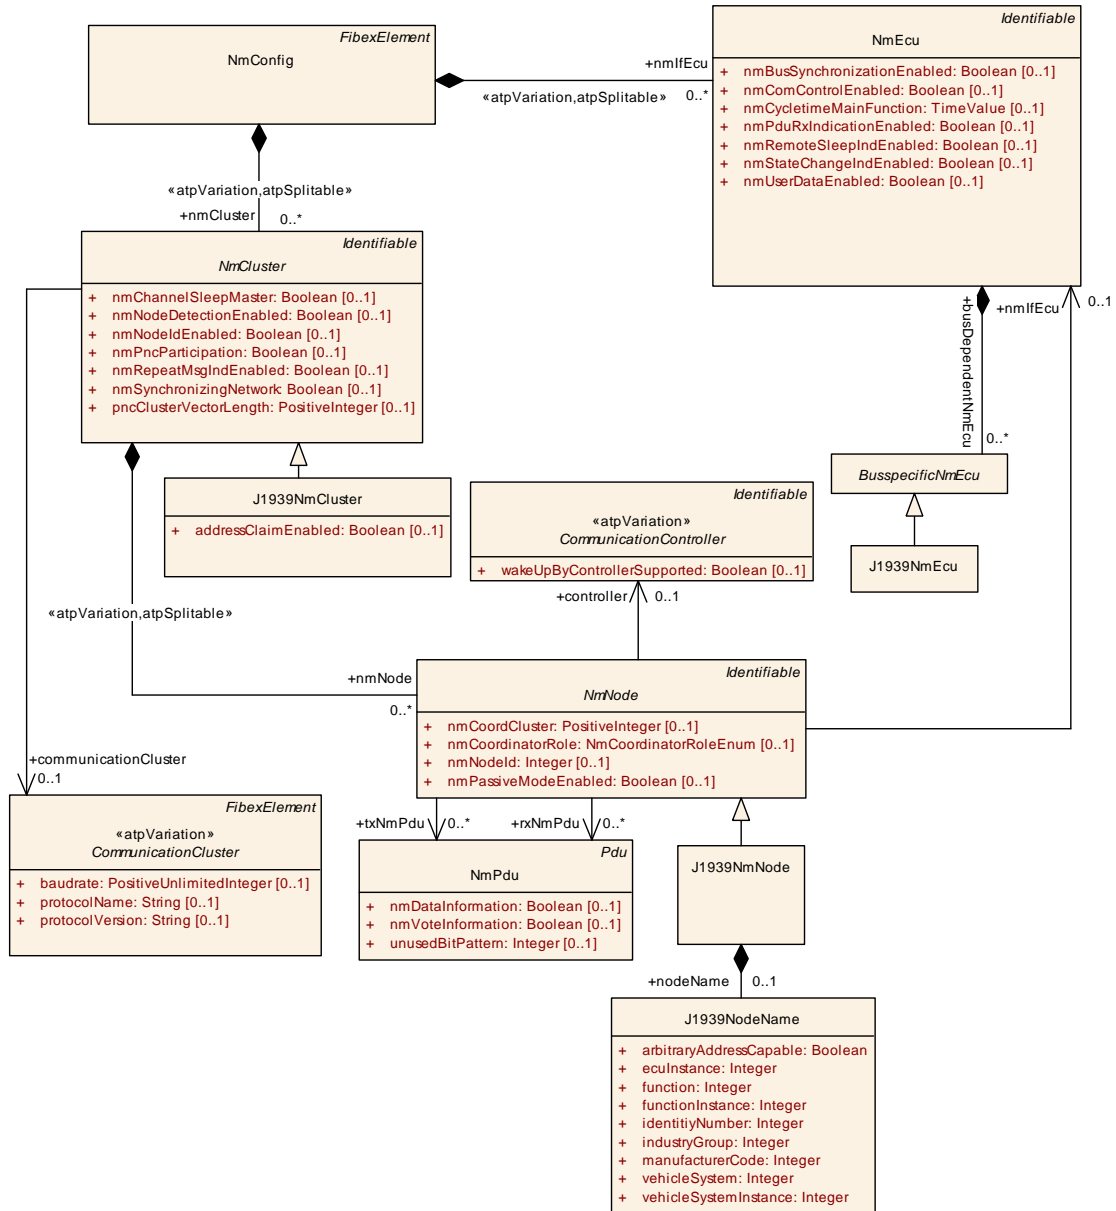

**Figure 6.77: J1939 Network Management Configuration (TransportProtocols: NmJ1939Configuration)**

<b>Class</b>	<b>J1939NmCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	J1939 specific NmCluster attributes			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">NmCluster</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">NmConfig.nmCluster</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
addressClaim Enabled	Boolean	0..1	attr	This attribute specifies whether the J1939Nm Bsw module is used or not. If this attribute is set to false then the J1939Nm configuration shall not be derived from the system description. But even in this case the nmNodeId might still be necessary for the J1939Rm and J1939Tp.

**Table 6.265: J1939NmCluster**

<b>Class</b>	<b>J1939NmNode</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	J1939 specific NM Node attributes.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">NmNode</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">NmCluster.nmNode</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nodeName	<a href="#">J1939NodeName</a>	0..1	aggr	nodeName configuration

**Table 6.266: J1939NmNode**

<b>Class</b>	<b>J1939NodeName</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	This element contains attributes to configure the J1939NmNode NAME.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">J1939NmNode.nodeName</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
arbitrary Address Capable	Boolean	1	attr	Arbitrary Address Capable field of the NAME of this node.
ecuInstance	Integer	1	attr	ECU Instance field of the NAME of this node.
function	Integer	1	attr	Function field of the NAME of this node.
function Instance	Integer	1	attr	Function Instance field of the NAME of this node.
identityNumber	Integer	1	attr	Identity Number field of the NAME of this node.
industryGroup	Integer	1	attr	Industry Group field of the NAME of this node.
manufacturer Code	Integer	1	attr	Manufacturer Code field of the NAME of this node.
vehicleSystem	Integer	1	attr	Vehicle System field of the NAME of this node.
vehicleSystem Instance	Integer	1	attr	Vehicle System Instance field of the NAME of this node.

**Table 6.267: J1939NodeName**

**[constr\_3102] Restriction on usage of [J1939NodeName](#) attributes** [A [J1939NmCluster](#) shall not aggregate two [J1939NmNodes](#) with identical [J1939NodeName](#) attributes.]()

**[constr\_5029] J1939NmCluster is not allowed to reference a TtcanCluster** [A [J1939NmCluster](#) is not allowed to reference a [TtcanCluster](#) in the role [communicationCluster](#).]()

**[constr\_3103] Range of ecuInstance** [The allowed values of [ecuInstance](#) range from 0 to 7.]()

**[constr\_3104] Range of function** [The allowed values of [function](#) range from 0 to 255.]()

**[constr\_3105] Range of functionInstance** [The allowed values of [functionInstance](#) range from 0 to 31.]()

**[constr\_3106] Range of identityNumber** [The allowed values of [identityNumber](#) range from 0 to 2097151.]()

**[constr\_3107] Range of industryGroup** [The allowed values of [industryGroup](#) range from 0 to 7.]()

**[constr\_3108] Range of manufacturerCode** [The allowed values of [manufacturerCode](#) range from 0 to 2047.]()

**[constr\_3109] Range of vehicleSystem** [The allowed values of [vehicleSystem](#) range from 0 to 127.]()

**[constr\_3110] Range of vehicleSystemInstance** [The allowed values of [vehicleSystemInstance](#) range from 0 to 15.]()

<b>Class</b>	<b>J1939NmEcu</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
<b>Note</b>	J1939 NmEcu specific attributes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">BusspecificNmEcu</a>			
<b>Aggregated by</b>	<a href="#">NmEcu.busDependentNmEcu</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 6.268: J1939NmEcu**

#### 6.9.4.1 J1939SharedAddressCluster

There are two ways of identifying source and target nodes in routing relations in J1939 networks (see [[TPS\\_SYST\\_02107](#)] and [[TPS\\_SYST\\_02108](#)]).

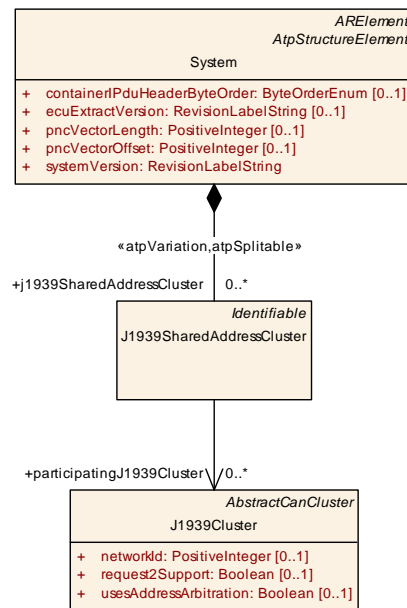


Figure 6.78: J1939SharedAddressCluster

<b>Class</b>	<b>J1939SharedAddressCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate			
<b>Note</b>	This meta-class represents the ability to identify several J1939Clusters that share a common address space for the routing of messages			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	System.j1939SharedAddressCluster			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
participating J1939Cluster	J1939Cluster	*	ref	This identifies the J1939Clusters that share a common address space

Table 6.269: J1939SharedAddressCluster

**[TPS\_SYST\_02107] Shared address space for J1939 routing relations** [Address claims are routed between several [CommunicationClusters](#) independent of whether there are actual routings between individual nodes on respective [CommunicationClusters](#). This means that the overall number of nodes in the shared [CommunicationCluster](#) cannot exceed 254, independently of the routing relations.] ([RS\\_SYST\\_00038](#))

**[TPS\_SYST\_02108] Address proxying for J1939 routing relations** [The gateway claims all addresses used in routed messages on those [CommunicationClusters](#) to which the actual nodes are not connected. Thereby the address spaces are separate and only the nodes participating in a routing appear on more than one [CommunicationCluster](#). The total number of nodes in the participating [CommunicationClusters](#) can be higher than 254, and the address arbitration is faster with less conflicts.] ([RS\\_SYST\\_00038](#))

**[TPS\_SYST\_02109] Absence of participatingJ1939Cluster to a J1939Cluster** [If [J1939Clusters](#) exist that participate in a routing relation but

are not referenced in the role `J1939SharedAddressCluster.participatingJ1939Cluster` by the same `J1939SharedAddressCluster` then gateway shall apply the address proxying according to `[TPS_SYST_02108].|(RS_SYST_00038)`

## 6.9.5 Managed Channels

### 6.9.5.1 Ethernet VLANs

There is the use case to transmit NM frames on one VLAN (`EthernetPhysicalChannel`) and the application data on different VLANs. At the same time it shall be possible to indicate that a VLAN uses Network Management although no `NmPdus` are defined on this channel.

A reference between `PhysicalChannels` is used to express such a setting: The managing `PhysicalChannel` that contains configured `NmPdus` references `PhysicalChannels` in the role `managedPhysicalChannel`.

Since the reference `managedPhysicalChannel` is available on the abstract `PhysicalChannel` element it is not only usable in case of `UdpNm` and VLANs but also for similar cases on other bus networks.

**[constr\_3479] `PhysicalChannel` is not allowed to be a `managedPhysicalChannel` and a managing `PhysicalChannel`** [If a `PhysicalChannel` is referenced in role `managedPhysicalChannel`, then it shall not be the source of another `managedPhysicalChannel` relation.]()

**[constr\_3480] `PhysicalChannel` shall be referenced in the role `managedPhysicalChannel` only once** [A `PhysicalChannel` shall be referenced in the role `managedPhysicalChannel` only up to once.]()

**[constr\_3481] `UdpNmCluster` is not allowed to reference a `managedPhysicalChannel` in the role `vlan`** [If an `EthernetPhysicalChannel` is target of a `managedPhysicalChannel` reference, then no `UdpNmCluster` shall reference this `managedPhysicalChannel` in the role `vlan`.]()

**[constr\_3482] `NmCluster` is not allowed to reference a `CommunicationCluster` that aggregates a `managedPhysicalChannel`** [If a `PhysicalChannel`, except `EthernetPhysicalChannel`, is target of a `managedPhysicalChannel`, then the aggregating `CommunicationCluster` shall not be referenced by any `NmCluster` in the role `communicationCluster`.]()

### 6.9.5.2 Ethernet tunneling through CAN XL

For the use case of tunneling Ethernet frames through CAN XL (see Ch. 3.3.1.2.2), the following specifics regarding network management configuration need to be observed:

**[constr\_3708] No UDP network management in case of Ethernet tunneling through CAN XL** [For an [EthernetPhysicalChannel](#) that is connected to an [EthernetCommunicationController](#) of category `CAN_XL` (i.e. an [EthernetPhysicalChannel](#) tunneled through CAN XL), no UDP network management shall be configured.]()

Instead, the tunneled [EthernetPhysicalChannel](#) is managed by the CAN network management of the tunneling CAN XL network. This needs to be defined in the managed channel relationship:

**[TPS\_SYST\_03077] Managed channel in case of Ethernet tunneling through CAN XL** [If a [CanPhysicalChannel](#) belonging to a CAN XL network is configured to tunnel Ethernet frames, then `managedPhysicalChannel.CanPhysicalChannel` shall refer to the [EthernetPhysicalChannel](#) that represents the tunneled Ethernet network.]()

## 6.10 Bus Mirroring

Many communication buses in a vehicle are not directly accessible by a tester. To allow a tester to listen to the traffic on such internal communication buses the bus mirroring is introduced. The bus mirroring collects traffic from such an internal communication bus and forwards it to an intermediate destination bus or to a destination bus that is accessible by the tester.

Testers connected via CAN will receive unmodified CAN frames and LIN frames with special CAN IDs. Testers connected via Ethernet will receive a stream containing current time, identification, and content of CAN, LIN, and FlexRay frames.

On intermediate FlexRay buses, a set of PDUs is used to transport streams of mirrored frames with the same layout as on Ethernet.

**[TPS\_SYST\_02202] Modeling of bus mirroring** [The [BusMirrorChannelMapping](#) defines the bus mirroring in which the communication traffic of the `sourceChannel` is forwarded to the `targetChannel`.]()

<b>Class</b>	<a href="#">BusMirrorChannelMapping</a> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element defines a bus mirroring in which the traffic from one communication bus ( <code>sourceChannel</code> ) is forwarded to another one ( <code>targetChannel</code> ).			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">FibexElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">BusMirrorChannelMappingCan</a> , <a href="#">BusMirrorChannelMappingFlexray</a> , <a href="#">BusMirrorChannelMappingIp</a> , <a href="#">BusMirrorChannelMappingUserDefined</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
<code>sourceChannel</code>	<a href="#">BusMirrorChannel</a>	0..1	aggr	Defines the <code>sourceChannel</code> from which frames are received.





<b>Class</b>		<b>BusMirrorChannelMapping</b> (abstract)		
targetChannel	<a href="#">BusMirrorChannel</a>	0..1	aggr	Defines the targetChannel to which frames are forwarded.
targetPduTriggering	<a href="#">PduTriggering</a>	*	ref	Reference to the PduTriggering that is used for transmission of the mirrored frames on the targetChannel. Please note that on FlexRay several targetPduTriggerings may be used. For all other communication channels only a single targetPduTriggering is supported.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=targetPduTriggering.pduTriggering, targetPduTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table 6.270: BusMirrorChannelMapping**

[constr\_3464] Allowed Pdu type on [BusMirrorChannelMapping.targetChannel](#) [Each [PduTriggering](#) that is referenced by [BusMirrorChannelMapping](#) in the role [targetPduTriggering](#) is only allowed to reference a [GeneralPurposeIPdu](#) of category BUS\_MIRRORING.]()

<b>Class</b>		<b>BusMirrorChannel</b>		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element assigns a busMirrorNetworkId to the referenced channel.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">BusMirrorChannelMapping.sourceChannel</a> , <a href="#">BusMirrorChannelMapping.targetChannel</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
busMirrorNetworkId	PositiveInteger	1	attr	This attribute defines the networkId of the communication channel.
channel	<a href="#">PhysicalChannel</a>	0..1	ref	Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=channel.physicalChannel, channel.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime

**Table 6.271: BusMirrorChannel**



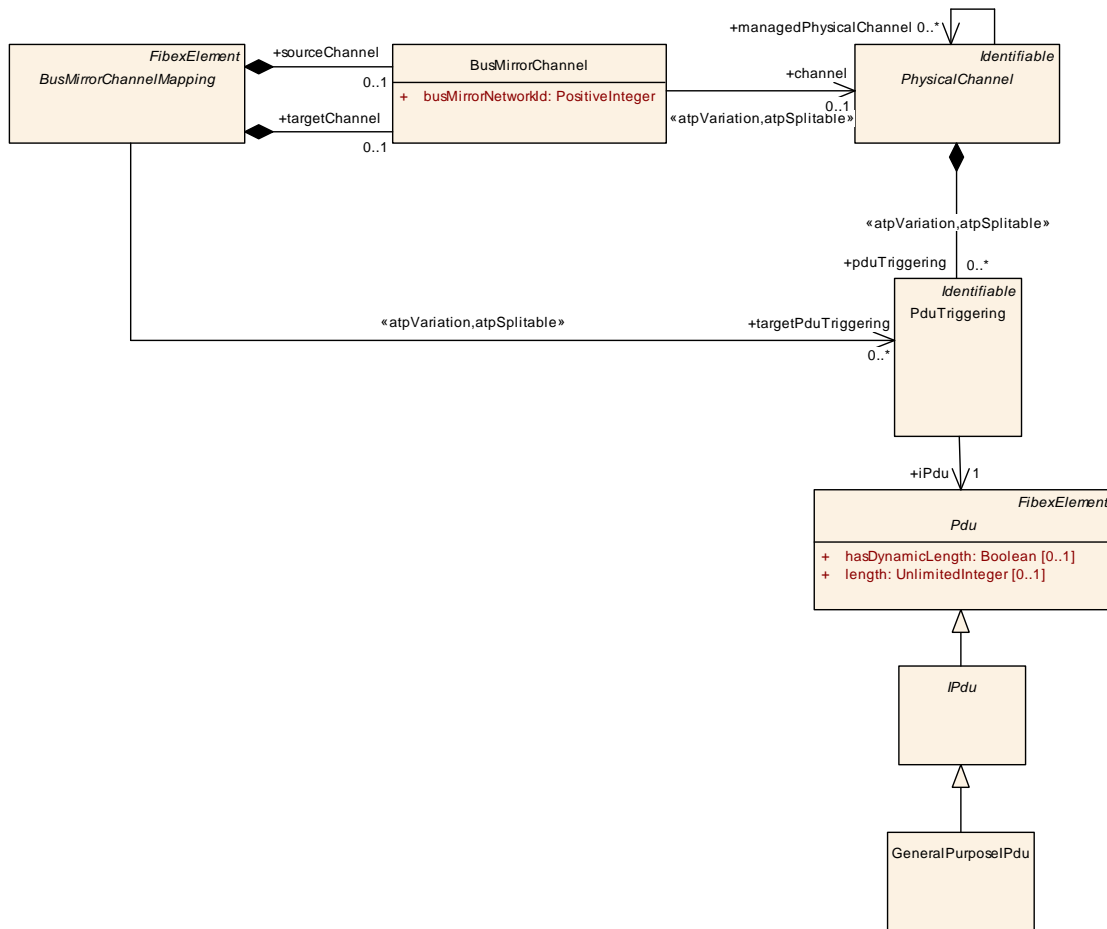


Figure 6.79: Bus mirroring

**[constr\_3465] Identical `BusMirrorChannel.busMirrorNetworkId` for `BusMirrorChannels` referencing the same `PhysicalChannel`** [The attribute `BusMirrorChannel.busMirrorNetworkId` shall be identical in all `BusMirrorChannels` that are referencing the same `PhysicalChannel` in the scope of the `System`.] ()

**[constr\_3466] Unique `BusMirrorChannel.busMirrorNetworkIds` for each specialization of `PhysicalChannel`** [The attribute `BusMirrorChannel.busMirrorNetworkId` associated with `PhysicalChannels` that have the same specialization (e.g. all `CanPhysicalChannels`) shall have unique `BusMirrorChannel.busMirrorNetworkIds` within the scope of the `System`.] ()

### 6.10.1 CAN Destination Channel

**[TPS\_SYST\_02203] BusMirroring to CAN destination channel** [In case of CAN to CAN and LIN to CAN the `BusMirrorChannelMappingCan` meta-class shall be used for the modeling of the bus mirroring.] ()

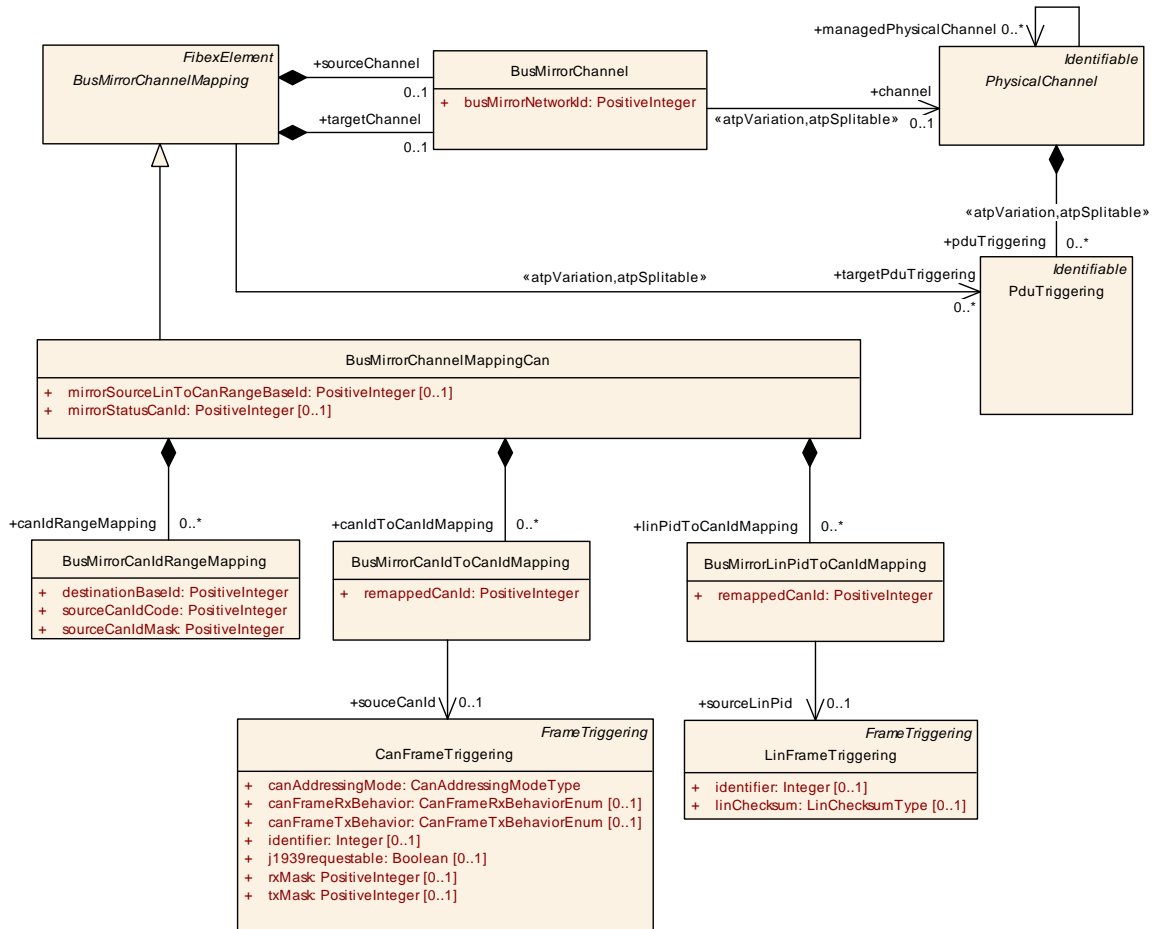


Figure 6.80: Bus mirroring between a CAN or LIN sourceChannel and a CAN targetChannel

<b>Class</b>	<b>BusMirrorChannelMappingCan</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element defines the bus mirroring between a CAN or LIN sourceChannel and a CAN targetChannel. <b>Tags:</b> atp.recommendedPackage=BusMirrorChannelMappings			
<b>Base</b>	ARObject, BusMirrorChannelMapping, CollectableElement, FibexElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
canIdRangeMapping	BusMirrorCanIdRangeMapping	*	aggr	Rules for remapping of a set of CAN IDs.
canIdToCanIdMapping	BusMirrorCanIdToCanIdMapping	*	aggr	Rules for remapping of single CanIds.
linPidToCanIdMapping	BusMirrorLinPidToCanIdMapping	*	aggr	Rules for remapping of single LIN Frames.
mirrorSourceLinToCanRangeBaseId	PositiveInteger	0..1	attr	Base ID merged with the LIN frame ID to form the CAN ID.  Only required when a BusMirrorChannel that refers to a LinPhysicalChannel in the role channel is referenced in the role sourceChannel.





Class	BusMirrorChannelMappingCan			
mirrorStatus CanId	PositiveInteger	0..1	attr	CAN ID of the CAN status frame.  If configured, a status frame will be sent on the CAN destination bus that contains the state of all active source buses.

**Table 6.272: BusMirrorChannelMappingCan**

**[constr\_3467] CanPhysicalChannel as destination channel of BusMirrorChannelMappingCan** [The `BusMirrorChannel` that is aggregated by `BusMirrorChannelMappingCan` shall only reference a `CanPhysicalChannel` in the role `targetChannel`.]()

**[constr\_3468] BusMirrorChannelMappingCan.targetPduTriggering restriction** [`BusMirrorChannelMappingCan` is allowed to reference only one single `PduTriggering` in the role `targetPduTriggering`.]()

**[constr\_3469] CanFrameTriggering.txMask setting for the destination frame** [The `CanFrameTriggering` of a `Frame` that contains a `Pdu` of which the `PduTriggering` is referenced by `BusMirrorChannelMappingCan` in the role `targetPduTriggering` shall set the `txMask` to 0.]()

**[constr\_5051] Existence of CanFrameTriggering.identifier in case of bus mirror target** [The `CanFrameTriggering` of a `Frame` that contains a `Pdu` of which the `PduTriggering` is referenced by `BusMirrorChannelMappingCan` in the role `targetPduTriggering` shall not define an `identifier`.]()

**[constr\_3470] PaddingValue used to transmit the Pdu on a Can-Fd destination bus** [In case that the `BusMirrorChannelMappingCan` references a `PduTriggering` in the role `targetPduTriggering` and

- the `CanFrameTriggering` of the `Frame` that contains this `targetPduTriggering` has the `canFrameTxBehavior` set to `canFd` and
- the `CanFrameTriggering` has a reference to an “out” `FramePort` (i.e. the `Frame` is transmitted by an `Ecu` on a `Can-Fd` destination bus) and
- the `CommunicationController` of the transmitting `EcuInstance` that is referenced via the `CommunicationConnector` by the `PhysicalChannel` on which the `targetPduTriggering` is located then the `CanControllerFdConfiguration.paddingValue` or `CanControllerFdConfigurationRequirements.paddingValue` shall have the value 0.

]()

<b>Class</b>	<b>BusMirrorCanIdRangeMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element defines a rule for remapping a set of CAN IDs.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">BusMirrorChannelMappingCan.canIdRangeMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
destinationBaseId	PositiveInteger	1	attr	Base ID merged with the masked parts of the original CAN ID to form the mapped CAN ID.
sourceCanIdCode	PositiveInteger	1	attr	Value to match masked original CAN IDs.
sourceCanIdMask	PositiveInteger	1	attr	Mask applied to original CAN IDs before comparison.

**Table 6.273: BusMirrorCanIdRangeMapping**

<b>Class</b>	<b>BusMirrorCanIdToCanIdMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element defines a rule for remapping a single CAN ID.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">BusMirrorChannelMappingCan.canIdToCanIdMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
remappedCanId	PositiveInteger	1	attr	This attribute defines the CanId on the targetChannel.
sourceCanId	<a href="#">CanFrameTriggering</a>	0..1	ref	This reference points to the sourceFrame with sourceCanId on the sourceChannel.


**Table 6.274: BusMirrorCanIdToCanIdMapping**

<b>Class</b>	<b>BusMirrorLinPidToCanIdMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element defines a rule for remapping a single LIN Frame.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">BusMirrorChannelMappingCan.linPidToCanIdMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
remappedCanId	PositiveInteger	1	attr	This attribute defines the CanId on the targetChannel.
sourceLinPid	<a href="#">LinFrameTriggering</a>	0..1	ref	This reference points to the sourceFrame with sourceCanId on the sourceChannel.

**Table 6.275: BusMirrorLinPidToCanIdMapping**

## 6.10.2 FlexRay Destination Channel

[TPS\_SYST\_02204] **BusMirroring to FlexRay destination channel** [In case of CAN to FlexRay, LIN to FlexRay and FlexRay to FlexRay the [BusMirrorChannelMappingFlexray](#) meta-class shall be used for the modeling of the bus mirroring.] ()

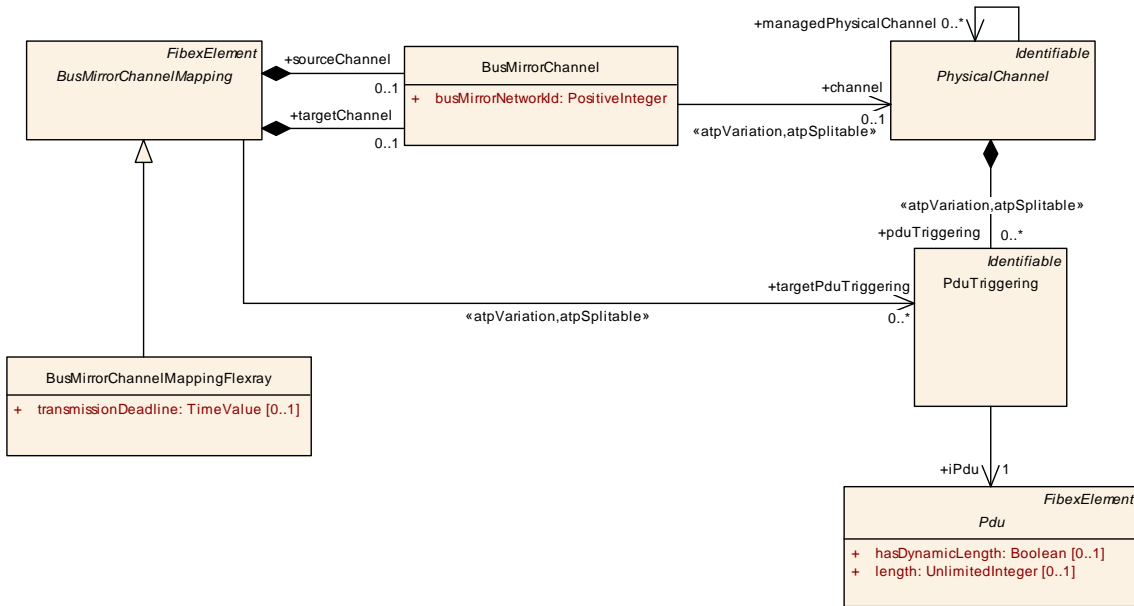

**Figure 6.81: Bus mirroring between between a CAN, LIN or FlexRay sourceChannel and a FlexRay targetChannel**

<b>Class</b>	<b>BusMirrorChannelMappingFlexray</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element defines the bus mirroring between a CAN, LIN or FlexRay sourceChannel and a FlexRay targetChannel. <b>Tags:</b> atp.recommendedPackage=BusMirrorChannelMappings			
<b>Base</b>	ARObject, BusMirrorChannelMapping, CollectableElement, FibexElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
transmission Deadline	TimeValue	0..1	attr	Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest. If omitted, destination frames are only sent when full or when the time stamp overflows.

**Table 6.276: BusMirrorChannelMappingFlexray**

**[constr\_3471] FlexrayPhysicalChannel as destination channel of BusMirrorChannelMappingFlexray** [The BusMirrorChannel that is aggregated by BusMirrorChannelMappingFlexray shall only reference a FlexrayPhysicalChannel in the role targetChannel.]()


**[constr\_3472] Number of BusMirrorChannels derived for one FlexrayCluster** [For each FlexrayCluster, only one BusMirrorChannel shall be derived. I.e. if both channels A and B are derived, only one of the two FlexrayPhysicalChannels of one FlexrayCluster shall be referenced by a BusMirrorChannel in the System.]()

**[constr\_3473] BusMirrorChannelMappingFlexray.targetPduTriggering restriction** [The FlexrayFrameTriggering of a Frame that contains a Pdu of which

the `PduTriggering` is referenced by `BusMirrorChannelMappingFlexray` in the role `targetPduTriggering` shall have the `allowDynamicLSduLength` attribute set to true. ]()

### 6.10.3 Ethernet Destination Channel

[TPS\_SYST\_02205] **BusMirroring to Ethernet destination channel** [In case of CAN to Ethernet, LIN to Ethernet and FlexRay to Ethernet the `BusMirrorChannelMappingIp` meta-class shall be used for the modeling of the bus mirroring. ]()

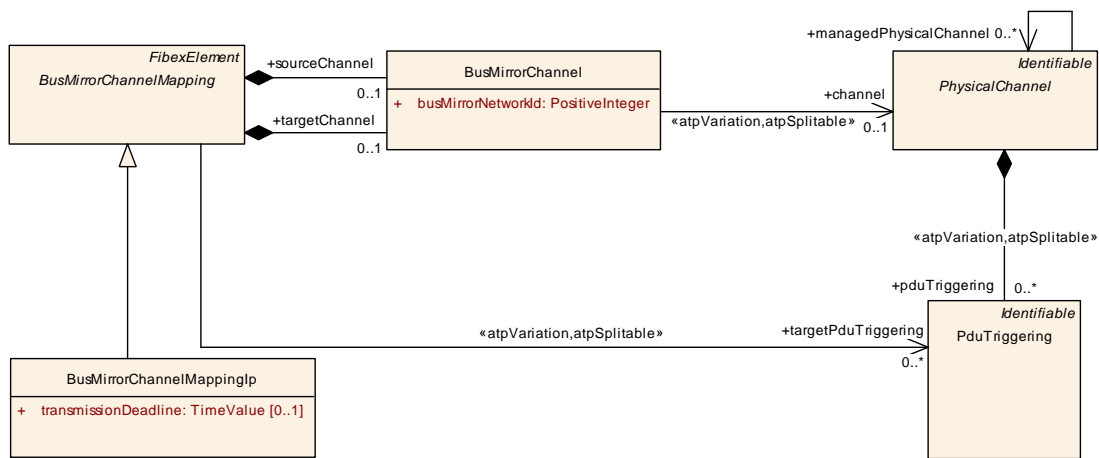

**Figure 6.82: Bus mirroring between a CAN, LIN or FlexRay sourceChannel and an Ethernet IP targetChannel**

<b>Class</b>	<b>BusMirrorChannelMappingIp</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element defines the bus mirroring between a CAN, LIN or FlexRay sourceChannel and an Ethernet IP targetChannel. <b>Tags:</b> atp.recommendedPackage=BusMirrorChannelMappings			
<b>Base</b>	ARObject, BusMirrorChannelMapping, CollectableElement, FibexElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
transmission Deadline	TimeValue	0..1	attr	Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest. If omitted, destination frames are only sent when full or when the time stamp overflows.

**Table 6.277: BusMirrorChannelMappingIp**

[constr\_3474] **EthernetPhysicalChannel as destination channel of BusMirrorChannelMappingIp** [The `BusMirrorChannel` that is aggregated by `BusMirrorChannelMappingIp` shall only reference an `EthernetPhysicalChannel` in the role `targetChannel`. ]()

[constr\_3475] **BusMirrorChannelMappingIp.targetPduTriggering** restriction [BusMirrorChannelMappingIp is allowed to reference only one single PduTriggering in the role targetPduTriggering.]()

### 6.10.4 User Defined Destination Channel

[TPS\_SYST\_02206] **BusMirroring to UserDefined destination channel** [In case of CAN to UserDefinedPhysicalChannel, LIN to UserDefinedPhysicalChannel and FlexRay to UserDefinedPhysicalChannel the BusMirrorChannelMappingUserDefined meta-class shall be used for the modeling of the bus mirroring.]()

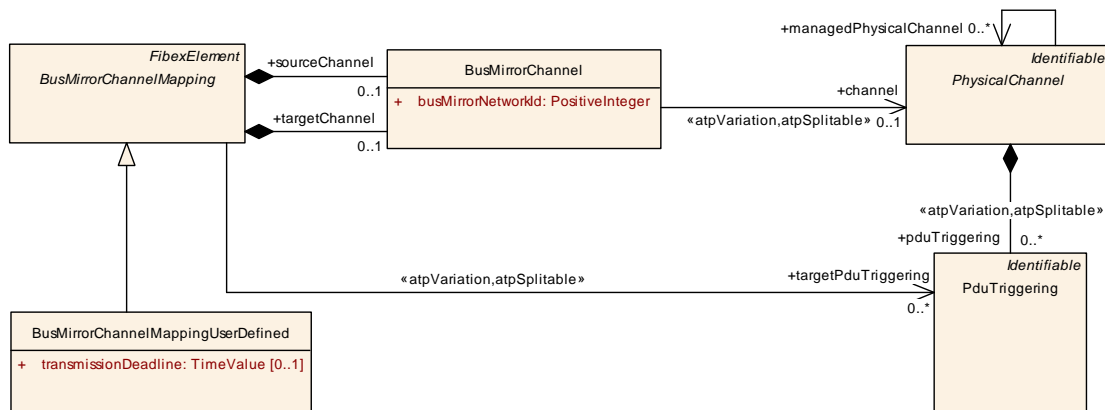


Figure 6.83: Bus mirroring between a CAN, LIN or FlexRay sourceChannel and a UserDefined targetChannel

<b>Class</b>	<b>BusMirrorChannelMappingUserDefined</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::BusMirror			
<b>Note</b>	This element defines the bus mirroring between a CAN, LIN or FlexRay sourceChannel and a User Defined targetChannel. <b>Tags:</b> atp.recommendedPackage=BusMirrorChannelMappings			
<b>Base</b>	ARObject, BusMirrorChannelMapping, CollectableElement, FibexElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
transmission Deadline	TimeValue	0..1	attr	Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest. If omitted, destination frames are only sent when full or when the time stamp overflows.

Table 6.278: BusMirrorChannelMappingUserDefined

[constr\_3476] **UserDefinedPhysicalChannel** as destination channel of **BusMirrorChannelMappingUserDefined** [The BusMirrorChannel that is aggregated by BusMirrorChannelMappingUserDefined shall only reference a UserDefinedPhysicalChannel in the role targetChannel.]()

**[constr\_3477] BusMirrorChannelMappingUserDefined.targetPduTriggering restriction** [BusMirrorChannelMappingUserDefined is allowed to reference only one single PduTriggering in the role targetPduTriggering.]()

## 6.11 Fan-out

AUTOSAR supports three different fan-outs:

- Signal fan-out
- Pdu fan-out
- Frame fan-out

Note that the specification in this section does not apply for Client/Server communication. The respective details are described in section 5.2.1.3.

### 6.11.1 Signal fan-out

A Signal fan-out can either be RTE signal fan-out or COM Signal Gateway fan-out. The details are explained in the following subchapters.

#### 6.11.1.1 RTE signal fan-out

The RTE supports a “signal fan-out” where two or more ISignals of the same SystemSignal are sent in multiple ISignalIPdus to potentially multiple receivers.

**[TPS\_SYST\_01109] RTE signal fan-out support for a SystemSignal** [The RTE signal fan-out from a SystemSignal to multiple ISignals is enabled in the System Description if the following conditions apply:

- several ISignals reference the SystemSignal in the role systemSignal and
- the SystemSignal is not referenced by a SystemSignalGroup
- a DataMapping references the SystemSignal and
- the DataMapping references an element in a PPortPrototype and
- the ISignals are transmitted by the EcuInstance on which the RTE is running, i.e. an ISignalTriggering exists that references the ISignal in the role iSignal and references a ISignalPort of the EcuInstance with communicationDirection out.


]()

Figure 6.84 shows a scenario where the RTE does not need to perform a fan-out since each SystemSignal is referenced by exactly one ISignal.




Please note that in all example scenarios that are shown in this chapter the [ISignalToIPduMappings](#) shall be modeled for each [ISignal](#) or [ISignalGroup](#). For simplicity reasons, the following diagrams leave the [ISignalToIPduMappings](#) out and just assume that they exist.

In addition for simplicity reasons the examples scenarios are showing always one OUT EcuPort and/or one IN EcuPort. But the different [ISignalTriggerings](#) are also allowed to reference own [ISignalPorts](#) that are defined on the [EcuInstance](#).

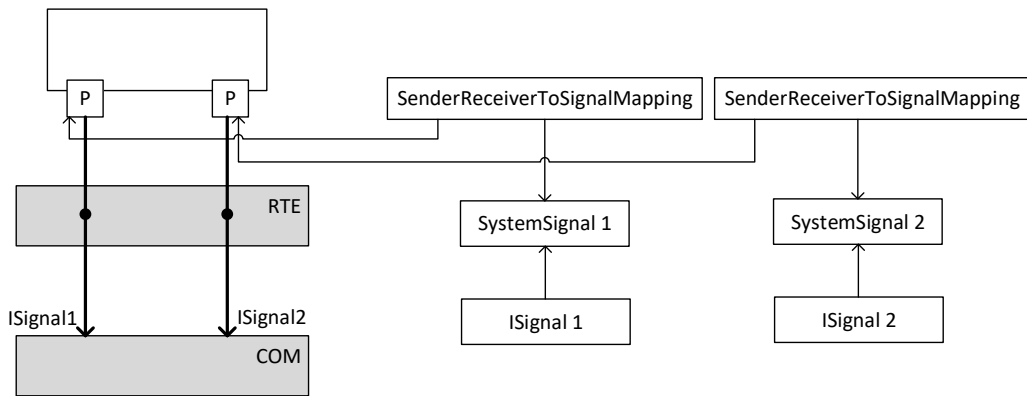

**Figure 6.84: Scenario where RTE does not perform a fan-out**

Figure 6.85 shows a scenario where the RTE needs to perform a fan-out since the [SystemSignal](#) is referenced by two [ISignals](#), a [SenderReceiverToSignalMapping](#) is defined that maps a [VariableDataPrototype](#) in a [SenderReceiverInterface](#) of a [PPortPrototype](#) to the [SystemSignal](#) and the [ISignals](#) are both transmitted by the [EcuInstance](#).

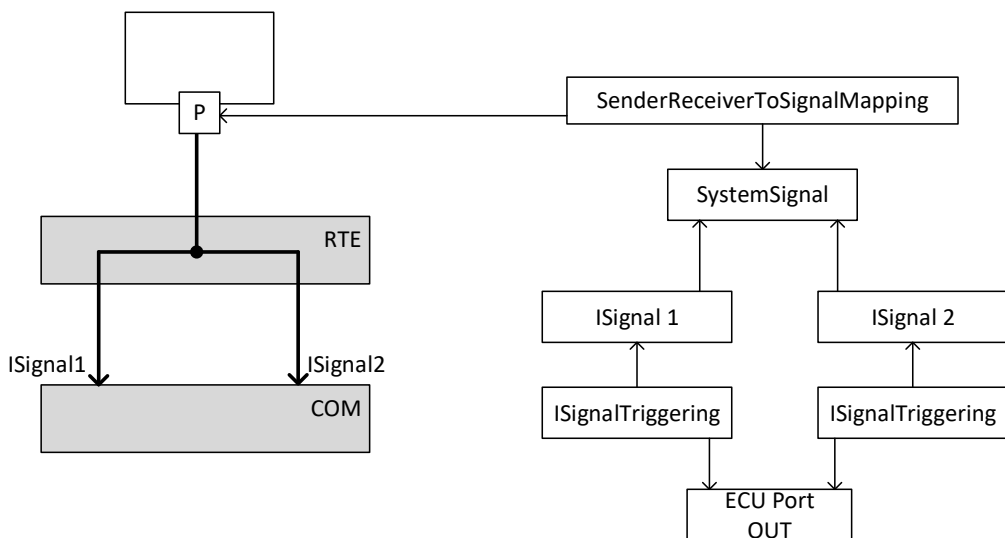

**Figure 6.85: Scenario where RTE does perform a fan-out**

Figure 6.86 shows a scenario where the RTE does not need to perform a fan-out since one of the `ISignals` that is referencing the `SystemSignal` is transmitted by the `EcuInstance` and the second `ISignal` is received. In addition the `SenderReceiverToSignalMapping` that references the `SystemSignal` references a `VariableDataPrototype` in a `RPortPrototype` and therefore [TPS\_SYST\_01109] is not fulfilled.

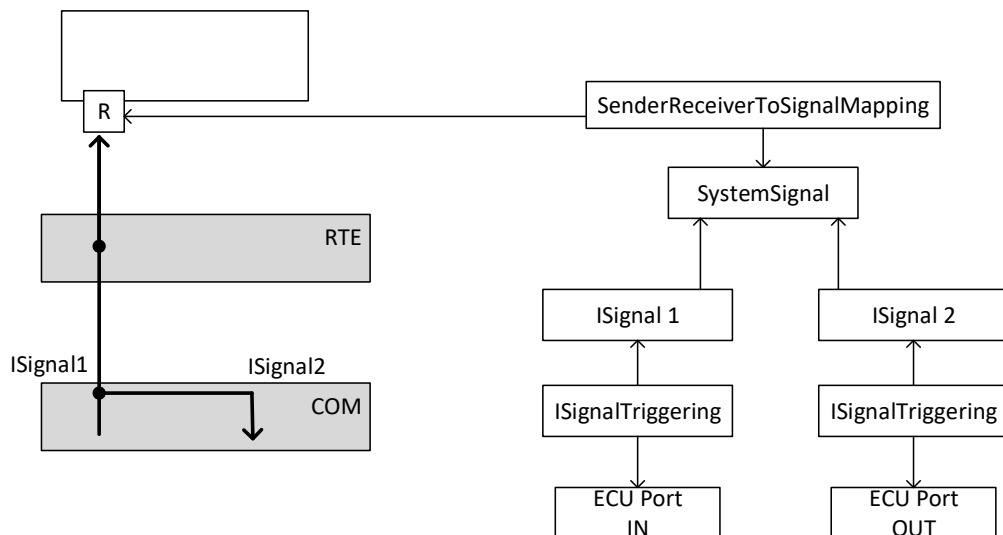


Figure 6.86: Scenario where RTE does not perform a fan-out since one `ISignal` is received and one is transmitted

[TPS\_SYST\_02309] RTE signal fan-out support for a `SystemSignalGroup` [The RTE signal fan-out from a `SystemSignalGroup` to multiple `ISignalGroups` is enabled in the System Description if the following conditions apply:


- several `ISignalGroups` reference the `SystemSignalGroup` in the role `systemSignalGroup` and
- a `DataMapping` references the `SystemSignalGroup` and
- the `DataMapping` references an element in a `PPortPrototype` and
- each of the contained `ISignals` of the `ISignalGroup` refers to its corresponding `SystemSignal` which in turn is part of the `SystemSignalGroup` and
- the `ISignalGroups` are transmitted by the `EcuInstance` on which the RTE is running, i.e. an `ISignalTriggering` exists that references the `ISignalGroup` in the role `iSignalGroup` and references a `ISignalPort` of the `EcuInstance` with `communicationDirection out`.

]()

In other words if two `ISignalGroups` reference the same `SystemSignalGroup`, but one of the `ISignalGroups` is received and one is transmitted no RTE signal fan-out

is performed. Only if several `ISignalGroups` that are transmitted reference the same `SystemSignalGroup` the RTE signal fan-out is performed.

Figure 6.87 shows a scenario where the RTE needs to perform a fan-out since the `SystemSignalGroup` is referenced by two `ISignalGroups`, a `SenderReceiverToSignalGroupMapping` is defined that maps a `VariableDataPrototype` in a `SenderReceiverInterface` of a `PPortPrototype` to the `SystemSignalGroup` and both `ISignalGroups` are transmitted by the `EcuInstance`.

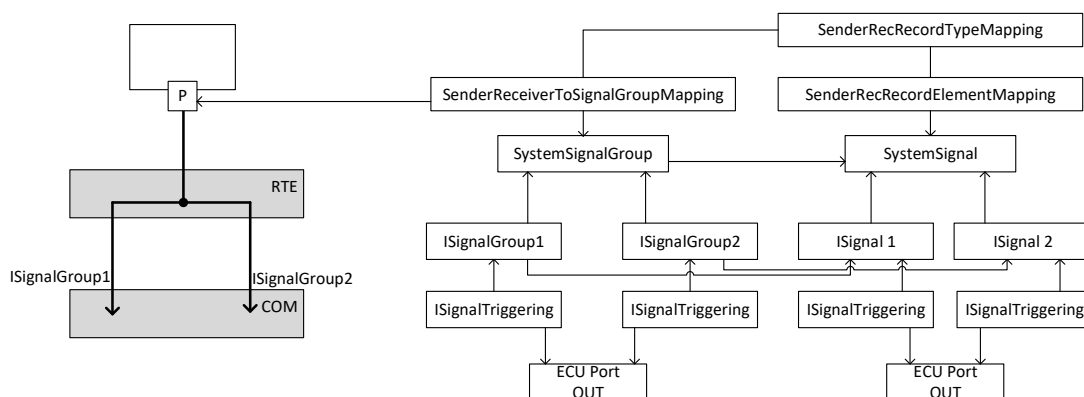


**Figure 6.87: Scenario where RTE does perform a fan-out for a `SystemSignalGroup`**

A combination of [TPS\_SYST\_01109] and [TPS\_SYST\_02309] is also supported, see also [TPS\_SYST\_01137] for the motivation of such a setup.

[TPS\_SYST\_03078] RTE signal fan-out support for a stand-alone `SystemSignal` out of a `SystemSignalGroup` [The RTE signal fan-out of a `SystemSignal` inside a `SystemSignalGroup` to a stand-alone `ISignal` is enabled in the System Description if the following conditions apply:

- one or more `ISignals` reference the `SystemSignal` in the role `systemSignal` and
- the `ISignals` are not referenced by any `ISignalGroup` and
- a `DataMapping` references the `SystemSignalGroup` and
- the `DataMapping` references an element in a `PPortPrototype` and
- the `ISignals` are transmitted by the `EcuInstance` on which the RTE is running, i.e. an `ISignalTriggering` exists that references the `ISignal` in the role `iSignal` and references an `ISignalPort` of the `EcuInstance` with communicationDirection out.

]0

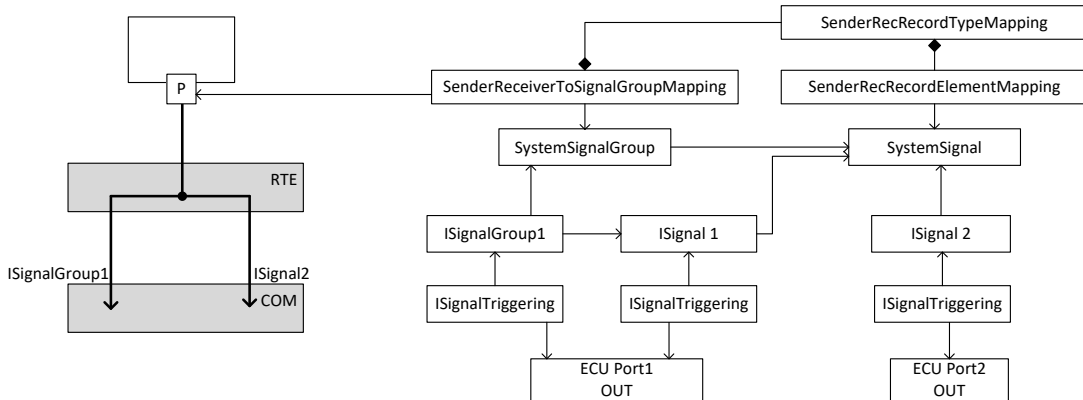

**Figure 6.88: Scenario where RTE does perform a fan-out for a stand-alone SystemSignal out of a SystemSignalGroup**

In the example in figure 6.88 the `SystemSignal` is part of a `SystemSignalGroup` and for that `SystemSignalGroup` a `SenderReceiverToSignalGroupMapping` is defined pointing to a `P`PortPrototype. Thus the application is able to send the payload of that `SystemSignalGroup`.

An `ISignalGroup` is defined referring to an `ISignal` (`ISignal1`) applicable for that `SystemSignal`. Thus [TPS\_SYST\_02309] applies and the `SystemSignal` will be sent as part of the `SystemSignalGroup`.

Also an `ISignal` applicable for the `SystemSignal` is defined (`ISignal2`), but `ISignal2` is not referenced by any `ISignalGroup`, thus it is intended to send the `SystemSignal` as a standalone signal as well ([TPS\_SYST\_01109]).


### 6.11.1.2 COM Signal Gateway fan-out

In Com [22] the Signal Gateway supports a fan-out where an incoming signal is routed to several destinations.

**[TPS\_SYST\_01110] Com Signal Gateway fan-out support** [A Signal Gateway fan-out (1:n routing) is described with the definition of several `ISignalMappings` in the `Gateway` description, which all refer to the same source `ISignalTriggering`.]  
( )


Note that [constr\_3514] applies for the relation between `ISignalToIPduMapping` to `ISignal`.

Figure 6.89 shows a scenario where a Signal Gateway is defined in which the same source `ISignalTriggering` is mapped by two `ISignalMappings` to two dedicated target `ISignalTriggerings`. Since a `DataMapping` is not defined for the `SystemSignal` that is referenced by the received and transmitted `ISignals` the RTE is not involved.

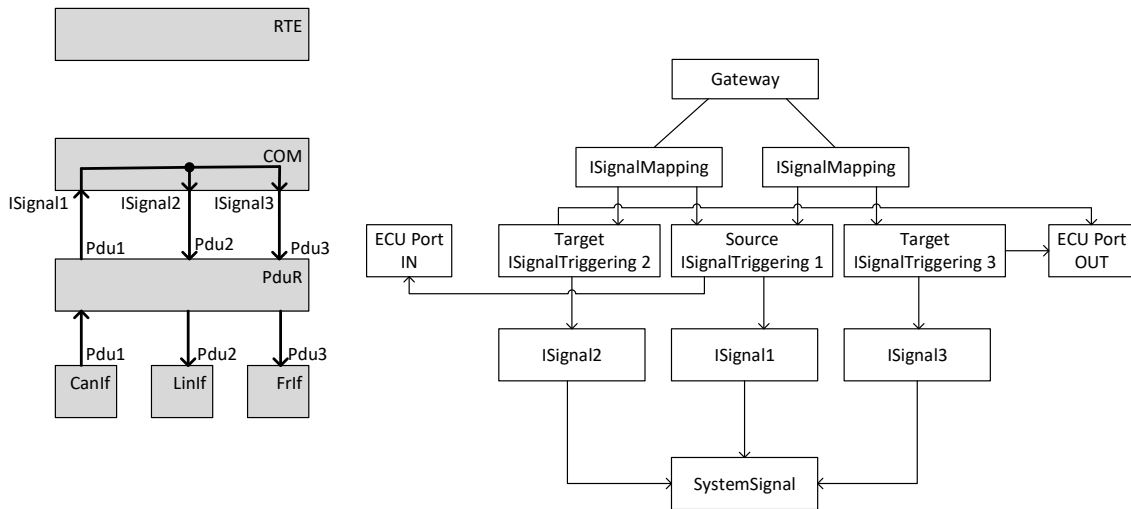

**Figure 6.89: Scenario where the Com Gateway performs a fan-out and RTE is not involved**

Figure 6.90 shows a scenario where a Signal Gateway is defined in which the same source *ISignalTriggering* is mapped by two *ISignalMappings* to two dedicated target *ISignalTriggerings*. A *DataMapping* is defined for the *SystemSignal* that is referenced by the received and transmitted *ISignals*. Therefore the RTE is involved. But the rule for the RTE signal fan-out (see [TPS\_SYST\_01109]) does not apply since the *DataMapping* references an element in a *RPortPrototype*.

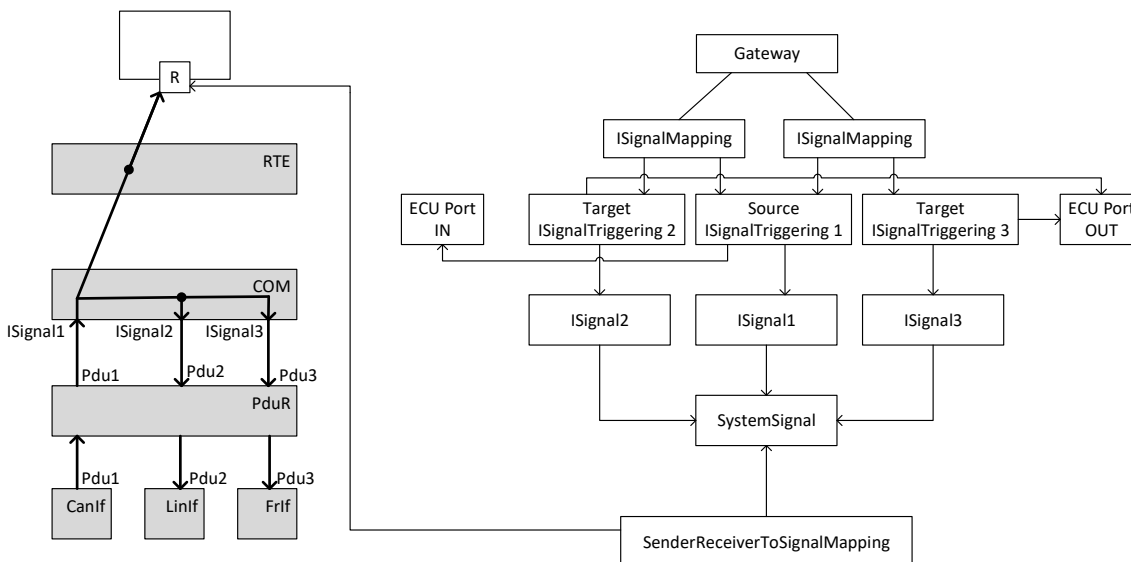

**Figure 6.90: Scenario where the Com Gateway performs a fan-out and RTE is involved**

## 6.11.2 Pdu fan-out

### 6.11.2.1 Pdu Router fan-out

The `Pdu Router` supports the "PDU fan-out" where one `IPdu` is sent to multiple destinations.

**[TPS\_SYST\_01111] Pdu Router fan-out support** [The `Pdu Router` fan-out is described by several `PduTriggering` elements pointing to the same `Pdu`<sup>3</sup>.

The sending ECU/PDU router has an output `IPduPort` that has the value of `communicationDirection` set to `out` and is referenced by the `PduTriggering`. According to the Cluster/Channel aggregation, the `Pdu Router` determines the clusters to use in its routing.]()

**[TPS\_SYST\_01112] FlexrayCluster Pdu Router interaction** [The following condition applies only in case of FlexRay on the same `FlexrayCluster` if two `PduTriggerings` refer to the same `Pdu`: this `Pdu` shall only be sent once to the FlexRay Interface. In other words the `Pdu Router` sends only one `Pdu Transmission` request to the FlexRay Interface.]()

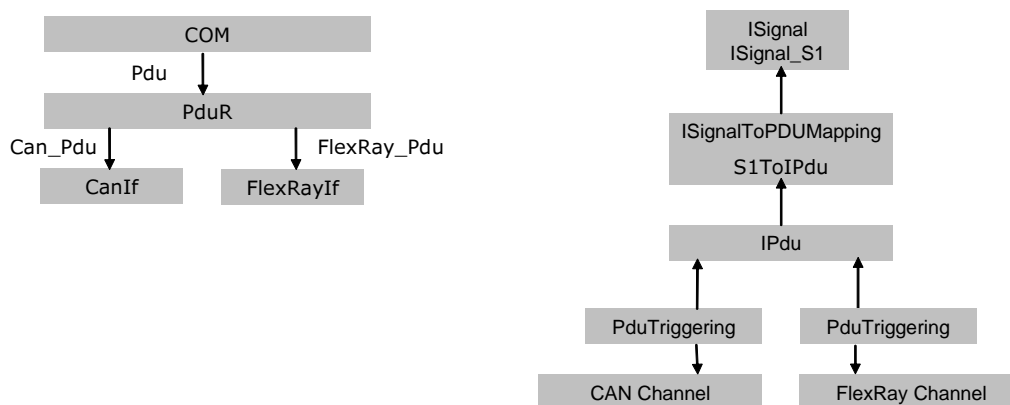


Figure 6.91: Pdu Router fan-out

### 6.11.2.2 Flexray Interface fan-out

The Flexray interface supports a fan-out where one `Pdu` is mapped into more than one frame on the same `CommunicationCluster`.

**[TPS\_SYST\_01113] FlexRay Interface fan-out support** [The redundant transmission in the FlexRay Interface in the static segment is described by

- one `FlexrayFrameTriggering` on each `PhysicalChannel`
- both `FlexrayFrameTriggerings` refer to the same `FlexrayFrame` with the same `Pdu`

<sup>3</sup>AUTOSAR Layered Architecture [15] defines which `Pdu` types are routed by the `Pdu Router`

- each `FlexrayFrameTriggering` aggregates the same number of `FlexrayAbsolutelyScheduledTimings`
- for every `FlexrayAbsolutelyScheduledTiming` on one `PhysicalChannel` a corresponding `FlexrayAbsolutelyScheduledTiming` with identical values shall be defined on the other `PhysicalChannel`

]()

If the fan-out is specified between different FlexRay channels of the same cluster it shall be handled by the FlexRay Interface.

The Flexray Interface does NOT handle fan-out/in between different clusters.

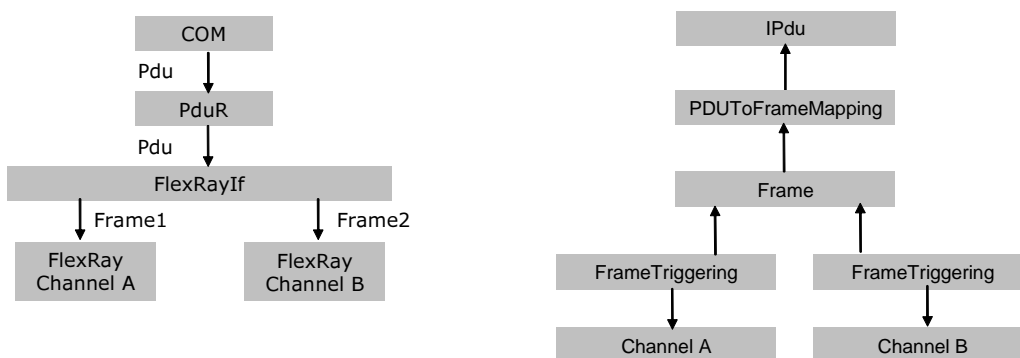


Figure 6.92: Bus Interface fan-out

### 6.11.3 Frame fan-out

[TPS\_SYST\_01114] **Frame fan-out support** [AUTOSAR supports the Frame fan-out only on the `FlexrayCluster` (see [TPS\_SYST\_01113]).]()]

## 6.12 Fan-in

AUTOSAR supports the following fan-ins:

- RTE Signal fan-in
- Pdu fan-in
- IPdu Container fan-in

Note that the specification in this section does not apply for Client/Server communication. The respective details are described in section 5.2.1.3.

### 6.12.1 RTE fan-in

The RTE supports a “signal fan-in” where two or more `ISignals` of the same `SystemSignal` are received in multiple `ISignalIPdus` from potentially multiple senders, as described in [SWS\_Rte\_03760] and [SWS\_Rte\_03761].

[TPS\_SYST\_02357] RTE fan-in support for a `SystemSignal` [RTE fan-in from multiple `ISignals` to a single `SystemSignal` is enabled in a System Description if the following conditions apply:


- several `ISignals` reference the `SystemSignal` in the role `systemSignal` and
- the `SystemSignal` is not referenced by a `SystemSignalGroup`
- a `DataMapping` references the `SystemSignal` and
- the `DataMapping` references an element in a `RPortPrototype` and
- the `ISignals` are received by the `EcuInstance` on which the RTE is running, i.e. an `ISignalTriggering` exists that references the `ISignal` in the role `iSignal` and references a `ISignalPort` of the `EcuInstance` with `communicationDirection in`.

]()

Figure 6.84 shows a scenario where the RTE does not need to perform a fan-in since each `SystemSignal` is referenced by exactly one `ISignal`.

Please note that in all example scenarios that are shown in this chapter the `ISignalToIPduMappings` shall be modeled for each `ISignal` or `ISignalGroup`. For simplicity reasons, the following diagrams leave the `ISignalToIPduMappings` out and just assume that they exist.


In addition for simplicity reasons the examples scenarios are showing always one OUT EcuPort and/or one IN EcuPort. But the different `ISignalTriggerings` are also allowed to reference own `ISignalPorts` that are defined on the `EcuInstance`.

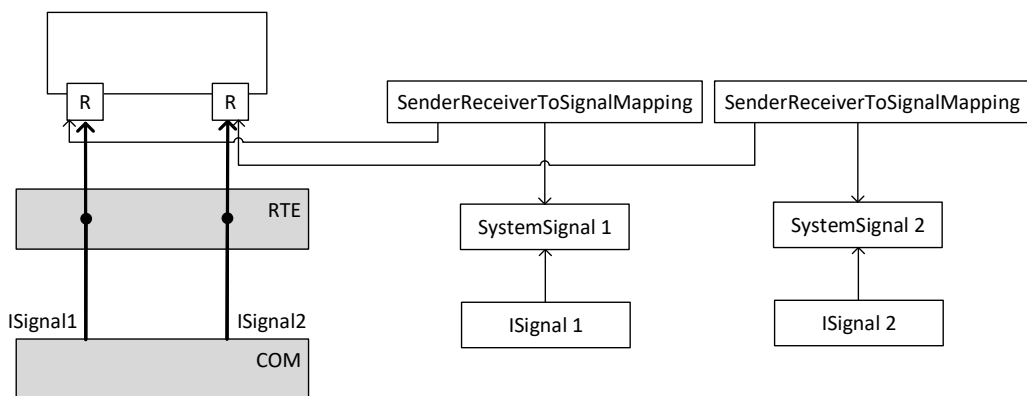

**Figure 6.93: Scenario where RTE does not perform a fan-in**



Figure 6.94 shows a scenario where the RTE needs to perform a fan-in since the `SystemSignal` is referenced by two `ISignals`, a `SenderReceiverToSignalMapping` is defined that maps a `VariableDataPrototype` in a `SenderReceiverInterface` of a `RPortPrototype` to the `SystemSignal` and the `ISignals` are both received by the `EcuInstance`.

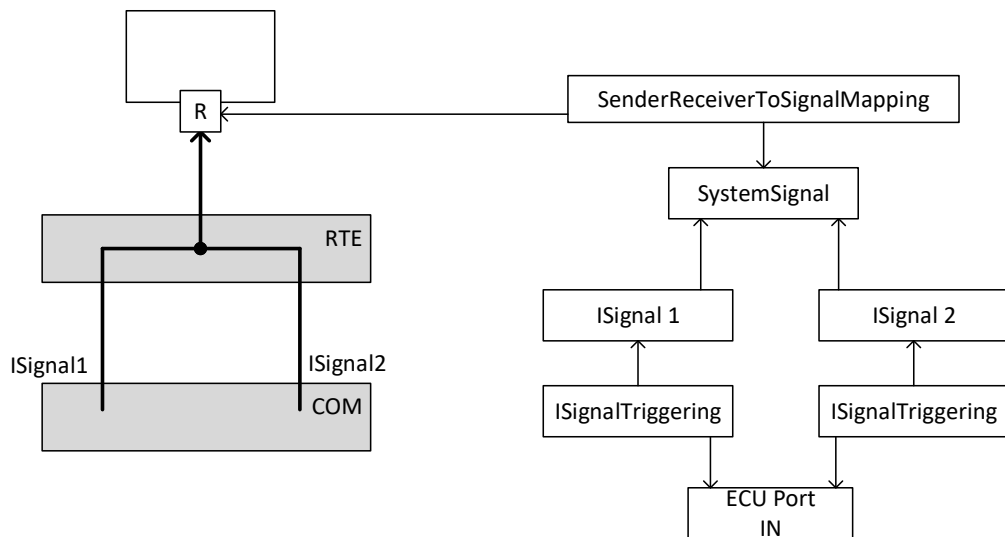

**Figure 6.94: Scenario where RTE does perform a fan-in**


A fan-in of two `ISignalGroups` can be modeled as well. In that case, two or more `ISignalGroups` refer to the same `SystemSignalGroup`, and each of the contained `ISignals` of the `ISignalGroup` needs to refer to its corresponding `SystemSignal` which in turn is part of the `SystemSignalGroup`.

**[TPS\_SYST\_02358] RTE fan-in support for a `SystemSignalGroup`** [RTE fan-in from multiple `ISignalGroups` to a single `SystemSignalGroup` is enabled in a System Description if the following conditions apply:

- several `ISignalGroups` reference the `SystemSignalGroup` in the role `systemSignalGroup` and
- a `DataMapping` references the `SystemSignalGroup` and
- the `DataMapping` references an element in a `RPortPrototype` and
- each of the contained `ISignals` of the `ISignalGroup` refers to its corresponding `SystemSignal` which in turn is part of the `SystemSignalGroup` and
- the `ISignalGroups` are received by the `EcuInstance` on which the RTE is running, i.e. an `ISignalTriggering` exists that references the `ISignalGroup` in the role `iSignalGroup` and references a `ISignalPort` of the `EcuInstance` with `communicationDirection in`.

}]0

Figure 6.95 shows a scenario where the RTE needs to perform a fan-in since the `SystemSignalGroup` is referenced by two `ISignalGroups`, a `SenderReceiverToSignalGroupMapping` is defined that maps a `VariableDataPrototype` in a `SenderReceiverInterface` of a `RPortPrototype` to the `SystemSignalGroup` and both `ISignalGroups` are transmitted by the `EcuInstance`.

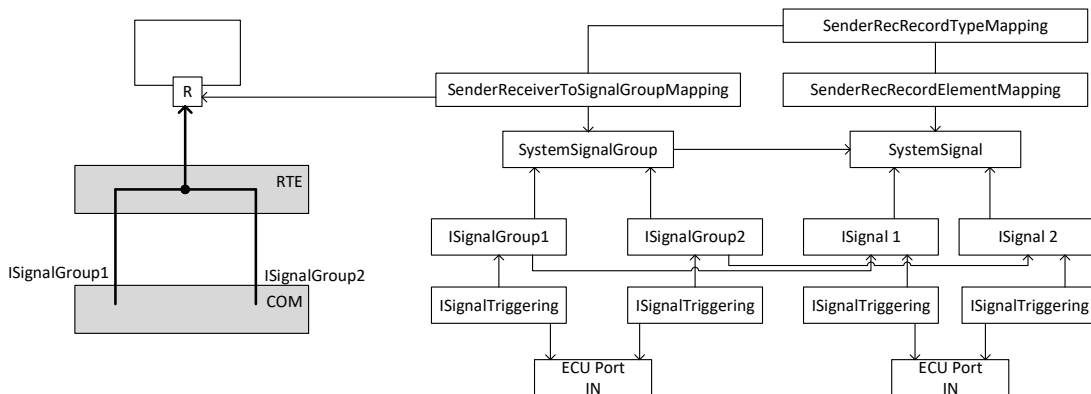

**Figure 6.95: Scenario where RTE does perform a fan-in for a SystemSignalGroup**


[TPS\_SYST\_03079] No RTE fan-in support for stand-alone `SystemSignal` and the same `SystemSignal` as part of a `SystemSignalGroup` [There is no support by the RTE for a setup where a `SystemSignal` is received both, via a stand-alone `ISignal` as well as part of an `ISignalGroup`, if the `DataMapping` references the `SystemSignalGroup`.]()

[TPS\_SYST\_03079] implies that [TPS\_SYST\_03078] does not apply for `SystemSignalGroup` reception. The rationale for this restriction is that the `DataMapping` references the `SystemSignalGroup`, and thus the application software component expects a composed data element. But in the case of the single `SystemSignal` reception only one member of that composed data element would be available for update. This setup is excluded.

### 6.12.2 Pdu fan-in

The Pdu Router supports the “PDU fan-in” where one `IPdu` is received from several sources.

[TPS\_SYST\_02376] Pdu Router fan-in support [The Pdu Router fan-in is described by several `PduTriggering` elements that are referencing the same `Pdu` and each of these `PduTriggerings` is referencing an `IPduPort` with `communicationDirection` set to `in` of the same `EcuInstance`. According to the Cluster/Channel aggregation, the Pdu Router determines the clusters to use in its routing.]()

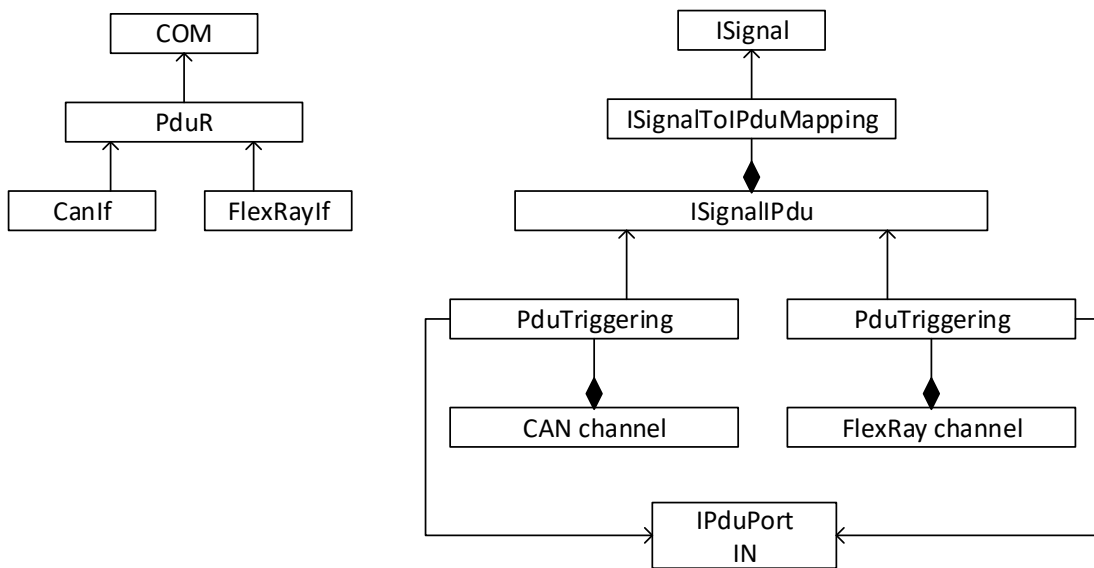

**Figure 6.96: Scenario where PduR does perform a fan-in**

### 6.12.3 IPdu Container fan-in

Using the `ContainerIPdu` (see section 6.3.1) it is possible to transport several Contained `IPdus` in one `ContainerIPdu`.

It is also possible to accept a Contained `IPdu` from any `ContainerIPdu` with `ContainerIPdu.rxAcceptContainedIPdu` set to `RxAcceptContainedIPduEnum.acceptAll`.

The example in figure 6.97 illustrates a scenario where in the configuration the `ContainedIPdu` is explicitly defined to be part of the two `ContainerIPdu`s `CIPdu1` and `CIPdu3`. Both `ContainerIPdu`s have `rxAcceptContainedIPdu` set to `acceptAll`.

But also `ContainerIPdu CIPdu2` has `rxAcceptContainedIPdu` set to `acceptAll`. And there is no explicit placement of `ContainedIPdu` in `CIPdu2`.

Due to the nature of `acceptAll`, if `ContainedIPdu` is received in `CIPdu2` it will also be forwarded to the `Pdu Router`.

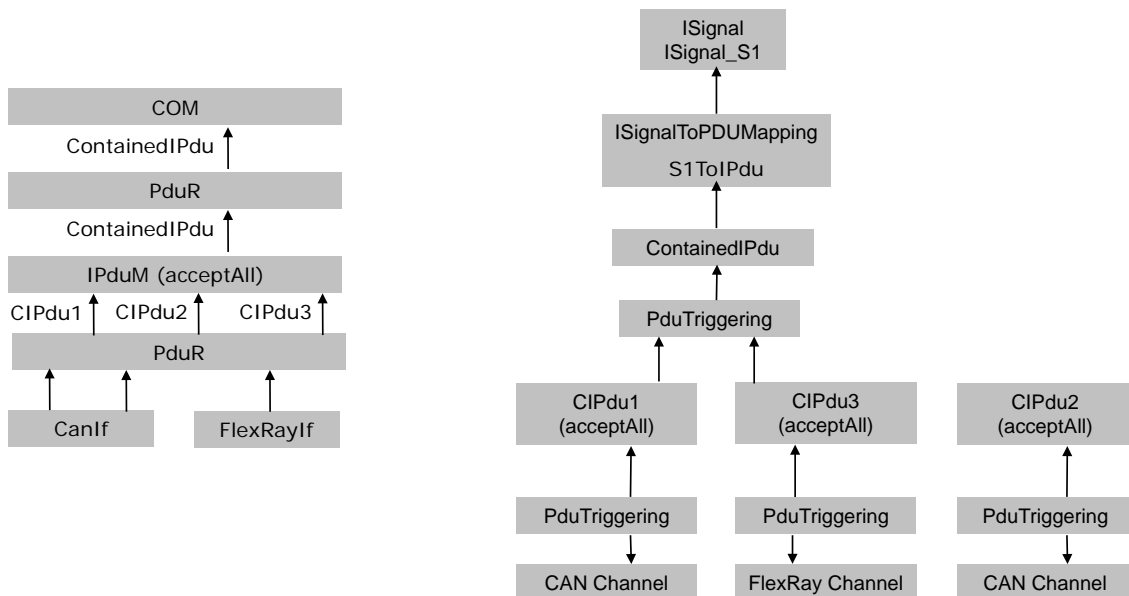


Figure 6.97: Container acceptAll fan-in

## 6.13 Log and Trace

The Dlt module collects debug information from applications or other software modules, adds metadata to the debug information, and sends the information to a Dlt sink.

The `DltConfig` element defines a Dlt module configuration for a specific `EcuInstance` and uses elements from the Log And Trace Extract Template to describe the source of log and trace messages (application or module that produces the logging information) and the `DltMessage` that is sent out from the source to a sink.

**[TPS\_SYST\_02373] Assignment of a Dlt Ecu Identifier to an `EcuInstance`** [The `EcuInstance` is represented in the Log And Trace Extract by the `DltEcu` that is referenced from the `EcuInstance` via the aggregated `DltConfig` in the role `dltEcu`. The referenced `DltEcu` defines the `ecuId` that is transported in the standard header of the log and trace message.]()

The `DltApplication` in the `DltEcu` is connected to a `DltContext` that is used to group `DltMessages` that are generated by the `DltApplication`. The `PhysicalChannel` on which the `DltMessage` is transported is represented by the `Dlt-LogChannel`.

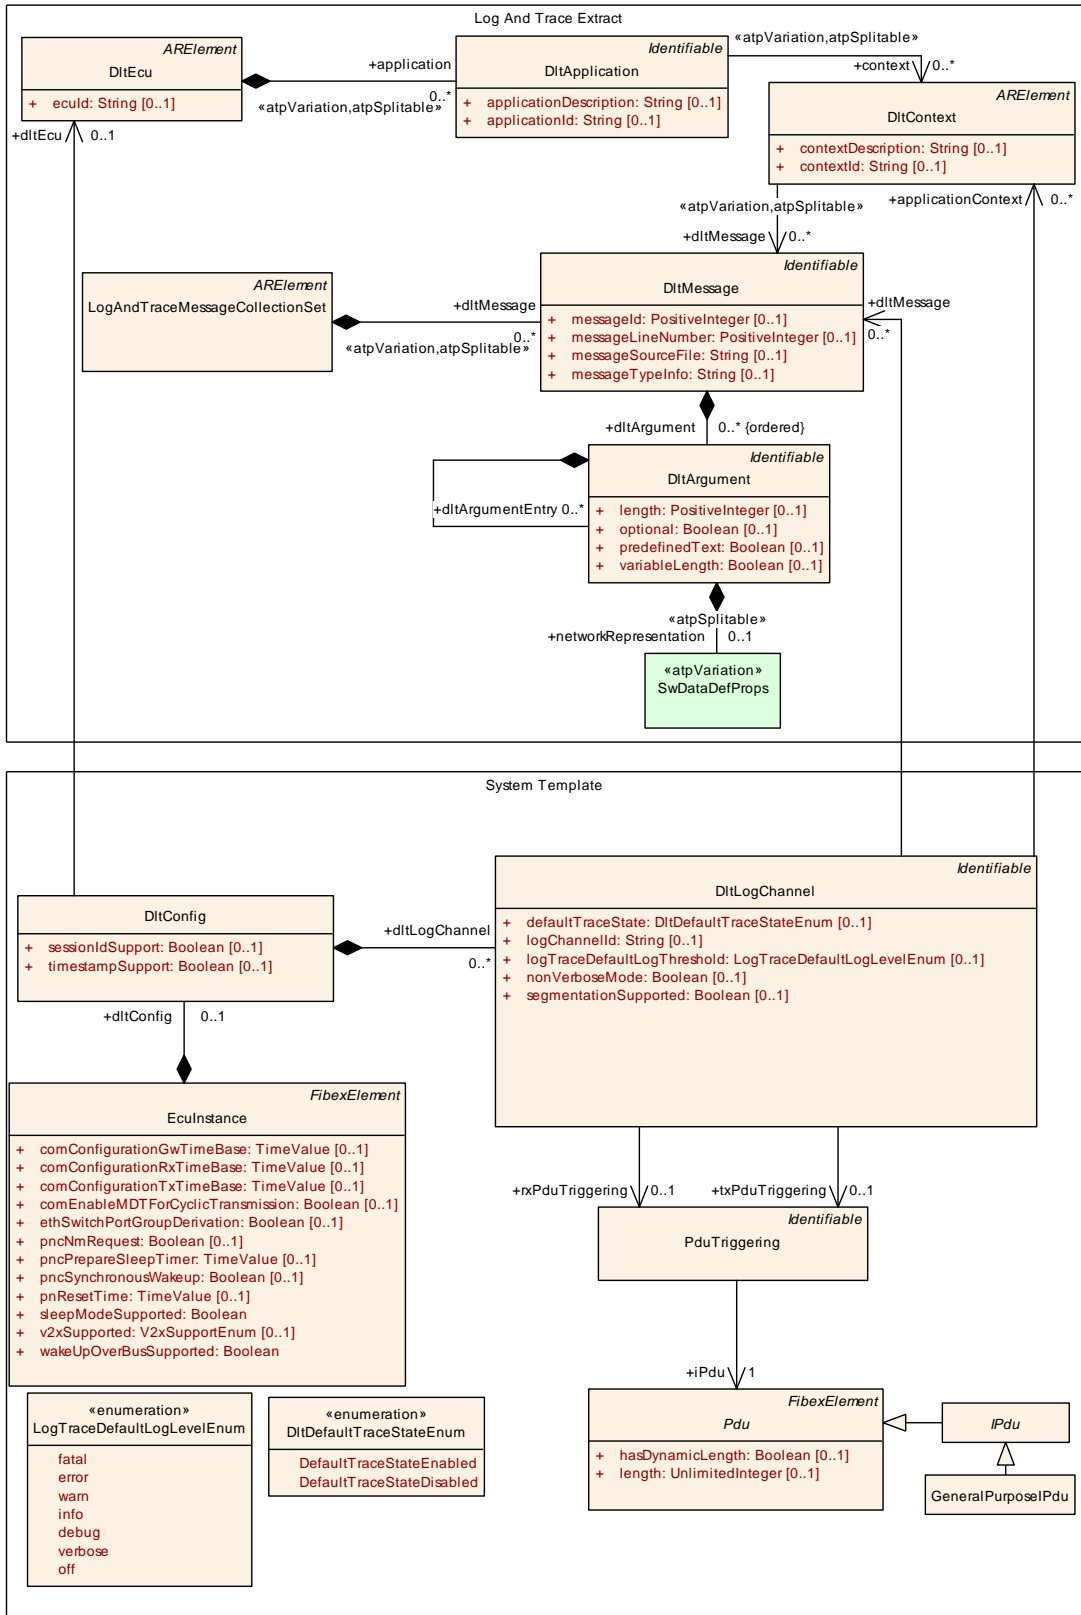


Figure 6.98: DIT configuration of DITLogChannels and DITMessages

[TPS\_SYST\_02264] Usage of **DltLogChannel** [In each **DltConfig** the **PhysicalChannels** that are used to transport the **DltMessages** are configured by the **DltLogChannel** elements.]

Each **DltLogChannel** points to one **PduTriggering** in the role **txPduTriggering** to describe the Dlt Pdu that is transmitted by the **DltLogChannel**. The **rxPduTriggering** role is used to describe the Dlt Pdu that is received by the **DltLogChannel**.]

[TPS\_SYST\_02374] Assignment of **DltMessage** to **DltLogChannels** [The assignment of **DltMessages** to a **DltLogChannel** for log/trace output is created with the **dltMessage** reference.]

[TPS\_SYST\_02375] Definition of **DltLogChannels** source [The **DltLogChannel** references the **DltContext** in the role **applicationContext** to define the **contextId** and **applicationId** of the Software Component or Basic Software Module that produces the **DltMessage** for transmission to the sink.]

<b>Class</b>	<b>DltConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Dlt			
<b>Note</b>	This element defines a Dlt configuration for a specific Ecu.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">EcuInstance.dltConfig</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dltEcu	<a href="#">DltEcu</a>	0..1	ref	Reference to the Ecu representation in the Log And Trace Extract.
dltLogChannel	<a href="#">DltLogChannel</a>	*	aggr	Describes the DltLogChannels that are configured for the log/trace message output
sessionIdSupport	Boolean	0..1	attr	This attribute defines whether the sessionId is used or not.
timestampSupport	Boolean	0..1	attr	This attribute defines whether a timestamp shall be added to the Dlt messages or not.

**Table 6.279: DltConfig**

<b>Class</b>	<b>DltLogChannel</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Dlt			
<b>Note</b>	This element contains the settings for the log/trace message output for a tuple of ApplicationId and ContextId (verbose mode) or a SessionId (non-verbose mode).			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">DltConfig.dltLogChannel</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
applicationContext	<a href="#">DltContext</a>	*	ref	Reference to the Swc that produces the log or trace message. Please note that this reference shall not be set in case that the Bsw module produces the associated log or trace messages.
defaultTraceState	<a href="#">DltDefaultTraceStateEnum</a>	0..1	attr	This attributes defines the default trace status.
dltMessage	<a href="#">DltMessage</a>	*	ref	Reference to DltMessages that can be transported over the DltLogChannel in the DltPdu.





Class	DltLogChannel			
logChannelId	<a href="#">String</a>	0..1	attr	This attribute identifies the Channel for usage within the Log And Trace protocol.
logTraceDefaultLogThreshold	<a href="#">LogTraceDefaultLogLevelEnum</a>	0..1	attr	This attribute allows to set a log level Threshold for Log Level filtering.
nonVerboseMode	Boolean	0..1	attr	This attribute defines whether this channel supports non-Verbose Dlt messages. If disabled only verbose mode messages shall be used.
rxPduTriggering	<a href="#">PduTriggering</a>	0..1	ref	Reference to DltPdu that is received by the DltLog Channel
segmentationSupported	Boolean	0..1	attr	If enabled, segmentation will be used if a DLT message is larger than Pdu.length referenced via DltLogChannel.txPduTriggering.
txPduTriggering	<a href="#">PduTriggering</a>	0..1	ref	Reference to DltPdu that is transmitted by the DltLog Channel.

**Table 6.280: DltLogChannel**

Enumeration	DltDefaultTraceStateEnum
Package	M2::AUTOSARTemplates::SystemTemplate::Dlt
Note	This enumeration defines the supported values for the Dlt default trace state.
Aggregated by	<a href="#">DltLogChannel.defaultTraceState</a>
Literal	Description
DefaultTraceStateDisabled	The default trace state is disabled <b>Tags:</b> atp.EnumerationLiteralIndex=1
DefaultTraceStateEnabled	The default trace state is enabled <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 6.281: DltDefaultTraceStateEnum**

Enumeration	LogTraceDefaultLogLevelEnum
Package	M2::AUTOSARTemplates::SystemTemplate::Dlt
Note	This enum defines available log&trace log levels that may be used to define the severity level of a log message.
Aggregated by	<a href="#">DltLogChannel.logTraceDefaultLogThreshold</a> , <a href="#">DltLogSink.defaultLogThreshold</a>
Literal	Description
debug	Detailed information for programmers <b>Tags:</b> atp.EnumerationLiteralIndex=4
error	Error with impact to correct functionality <b>Tags:</b> atp.EnumerationLiteralIndex=1
fatal	Fatal error <b>Tags:</b> atp.EnumerationLiteralIndex=0
info	High level information <b>Tags:</b> atp.EnumerationLiteralIndex=3
off	logging is turned off <b>Tags:</b> atp.EnumerationLiteralIndex=6





Enumeration	LogTraceDefaultLogLevelEnum
verbose	Verbose debug message Tags:atp.EnumerationLiteralIndex=5
warn	Warning if correct behavior cannot be ensured Tags:atp.EnumerationLiteralIndex=2

**Table 6.282: LogTraceDefaultLogLevelEnum**

**[constr\_5097]** **DltLogChannel.txPduTriggering** and **DltLogChannel.rxPduTriggering** shall point to **GeneralPurposeIPdus** of category **DLT** [DltLogChannel shall only reference PduTriggerings that are pointing to GeneralPurposeIPdus of category DLT in the roles txPduTriggering and rxPduTriggering.]()

**[constr\_5306]** **Restriction of DltLogChannel.logChannelId attribute value** [The DltLogChannel.logChannelId attribute value shall be composed of maximum four ASCII characters.]()

**[constr\_5307]** **Existence of DltLogChannel.logChannelId** [For each DltLogChannel, the attribute logChannelId shall exist when the Base ECU Configuration is defined.]()

**[constr\_5308]** **Existence of DltLogChannel.nonVerboseMode** [For each DltLogChannel, the attribute nonVerboseMode shall exist when the Base ECU Configuration is defined.]()

**[constr\_5309]** **Existence of DltConfig.sessionIdSupport** [For each DltConfig, the attribute sessionIdSupport shall exist when the Base ECU Configuration is defined.]()

**[constr\_5310]** **Existence of DltConfig.timestampSupport** [For each DltConfig, the attribute timestampSupport shall exist when the Base ECU Configuration is defined.]()

**[constr\_5311]** **Existence of DltLogChannel.logTraceDefaultLogThreshold** [For each DltLogChannel, the attribute logTraceDefaultLogThreshold shall exist when the Base ECU Configuration is defined.]()

**[constr\_5312]** **Existence of DltLogChannel.defaultTraceState** [For each DltLogChannel, the attribute defaultTraceState shall exist when the Base ECU Configuration is defined.]()

**[constr\_5313]** **Existence of DltLogChannel.txPduTriggering** [For each DltLogChannel, the reference to PduTriggering in the role txPduTriggering shall exist when the Base ECU Configuration is defined.]()

**[constr\_5314]** **DltLogChannel txPduTriggering and rxPduTriggering shall be on the same network** [The PduTriggerings that are referenced by a DltLogChannel in the role txPduTriggering and rxPduTriggering shall be aggregated by the same PhysicalChannel.]()




## 6.14 Support of Complex Drivers

The System Template allows the integration of custom communication means into AUTOSAR [EcuInstances](#).

**[TPS\_SYST\_01115] CDD communication support** [The elements [UserDefinedPdu](#) and [UserDefinedIPdu](#) shall be used to describe the Pdu-based communication via Complex Drivers.]([RS\\_SYST\\_00043](#))

The [UserDefinedPdu](#) and [UserDefinedIPdu](#) elements are described in chapter 6.3 in more detail.

The [UserDefinedIPdu](#) can be used to describe the communication if a new BSW module was added above the PduR, e.g a Diagnostic Service.

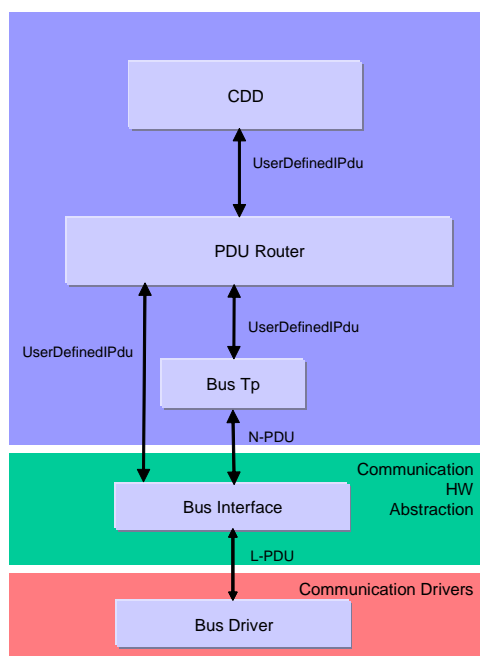

**Figure 6.99: CDD over PduR**

The [UserDefinedPdu](#) can be used to describe the communication if a new BSW module was added above an Interface, e.g. a new Nm module or XCP.

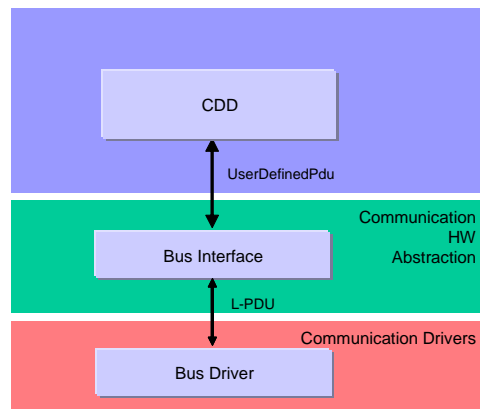


Figure 6.100: CDD over Bus Interface

## 6.15 MetaData in SenderReceiverInterface

As described in [5], there is the ability for the application software to unlock access to `Pdu` meta-data by using the aggregation `SenderReceiverInterface.metaDataItemSet`.

This modeling allows for the arbitrary definition of meta-data semantics that - of course - has to be supported by the `Pdu` where a specific `dataElement` is finally mapped to.

This consistency is ensured by deriving the `Pdu` meta-data from the modeling in `SenderReceiverInterfaces`. However, this approach can only work if all `dataElements` mapped to the given `Pdu` define the same meta-data structure or do not define the usage of meta-data at all.

**[constr\_5100] Compatibility of two `MetaDataItemSets`** [Under the condition that sender and receiver typed by a `SenderReceiverInterface` use meta-data and are mapped to the same `EcuInstance` the following condition applies: two `MetaDataItemSets` are compatible if all of the following conditions are fulfilled:

- They aggregate the same number of `MetaDataItems`.
- The value of `MetaDataItem.length` of corresponding `MetaDataItems` is identical.
- The value of `MetaDataItem.metaDataItemType` of corresponding `MetaDataItems` is identical.

]()

**[constr\_5101] Consistent Definition of meta-data** [If the `dataElement` referenced by a `SenderReceiverToSignalMapping` is also referenced by a `MetaDataItemSet` in the role `dataElement` and the mapping via `SystemSignal`, `ISignal`, and `ISignalToIPduMapping` down to an `ISignalIPdu` exists then all other `dataElements` that are also mapped to the same `ISignalIPdu` shall either

- not be referenced by a `MetaDataItemSet` in the role `dataElement` (i.e. does not make use of meta-data) or
- the definition of meta-data in the context of the affected `SenderReceiverInterfaces` is compatible (according to the definition of compatible specification of meta-data described in `[constr_5100]`).

}]0

## 6.16 Signal Service Translation


AUTOSAR Adaptive Platform restricts communication paradigm to Service-oriented communication. A major part of the vehicle however still uses Signal-based communication means, therefore a translation of these two approaches has to be performed.

One major goal of AUTOSAR is that it covers both

- high-performance microprocessor Machines (connected via high payload and high bandwidth Ethernet networks)
- highly embedded microcontroller ECUs (connected via ethernet, but also via low payload and low bandwidth CAN and LIN networks).

A seamless development of a vehicle shall be supported with one AUTOSAR methodology. Therefore a translation is required which closes the gap between

- Signal-based communication on Classic platform
- Service-oriented communication on Adaptive platform.

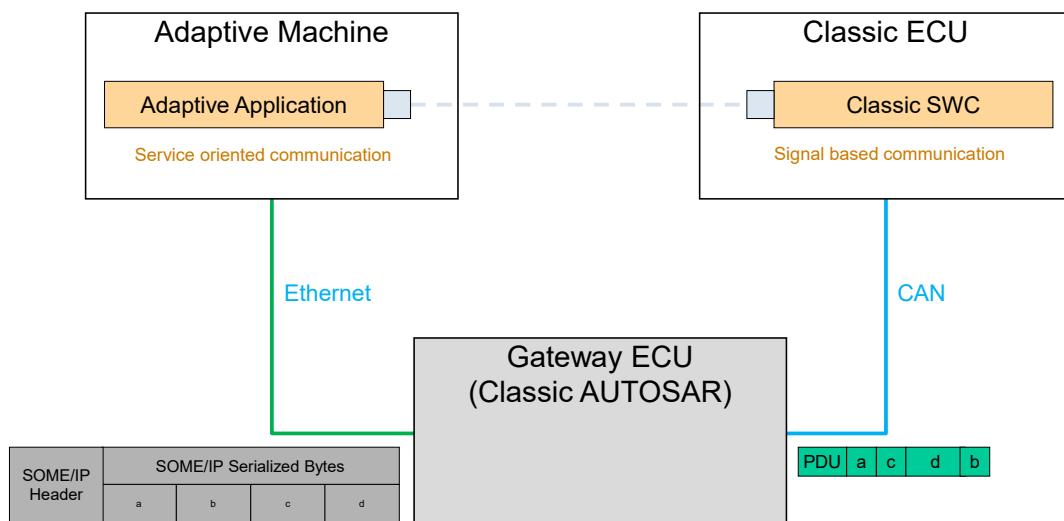


**Figure 6.101: Signal/Service Translation in Classic platform gateway ECU**

The goal of this chapter is to standardize a translation between the two communication transport configurations on an AUTOSAR Classic platform ECU. A similar approach is

also provided in the Manifest specification for the Adaptive platform [33]. It is up to the vehicle architecture design to choose whether the *signal/service translation* shall be implemented on a Classic platform ECU or on an Adaptive platform Machine.

**6.16.1 Architectural setup**

The implementation of the *signal/service translation* on the Classic platform is done in an Application Software Component above the RTE. This applies for *events* and *field notifiers*. Methods are handled separately (see section 6.16.1.1).

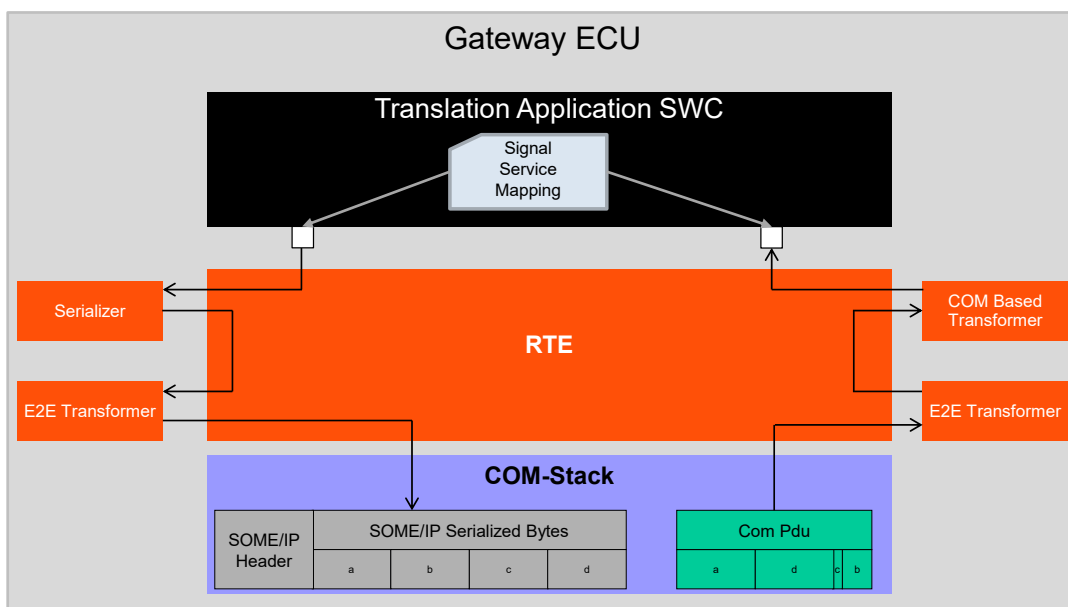

**Figure 6.102: Signal/Service Translation Application Software Component**

For the signal-based part the full functionality of the Classic platform COM-Stack is available and may be configured such that the signal-based *ISignalIPdus* may originate from a variety of sources (Can, Lin, FlexRay) and the *ISignalIPdus* may be safety and security protected.

For the service-oriented part it has to be guaranteed that the defined SOME/IP Service actually is compatible to the Adaptive platform. This applies for the payload part (e.g. the SOME/IP serializer has to be used) as well as for the control path using *BswM* and *ServiceDiscovery*.

The behavioral part of the Translation Software Component itself defines how the data from signal-based side is transported to the service-oriented side, and vice versa (see section 6.16.4).

The following terminology is used in the context of *signal/service translation*:

*Signal/service translation* defines the feature this chapter is concerned with. It does not prescribe a specific translation direction.

*Signal-service-translation* defines the translation direction from a signal-based to a service oriented representation.

*Service-signal-translation* defines the translation direction from a service oriented to a signal-based representation.

### 6.16.1.1 Method handling

The handling of methods (or getter/setter calls of fields) has to be serialized using the SOME/IP transformer. And this is only supported on Ethernet networks (see [constr\_5117]).

Therefore there is no need to perform a translation because the methods are already usable on the adaptive platform.

### 6.16.2 Mapping description

[Signal/service translation](#) is used to alter the serialization representation of data to be compatible with the respective transport network. I.e. on an Ethernet network a SOME/IP serialized data representation is mostly suitable, while on a CAN network the packed signal-based data representation often required due to the low payload data size available.

As indicated in section [6.16.1](#) the implementation of the translation shall be done in an Application Software Component above the RTE. For the definition of the intended mapping and behavior however the [CompositionSwComponentType](#) is used. This allows to represent the requirements on the translation and still allow some freedom with respect to the actual implementation later on.

The element which defines the behavioral aspects of the [signal/service translation](#) is the meta-class [SignalServiceTranslationProps](#). The references to the [VariableDataPrototype](#) in the role [translationTarget](#) define to which events the [SignalServiceTranslationProps](#) apply. For this reference a [VariableDataPrototypeInSystemInstanceRef](#) is used (see also chapter [B.8](#)).

- In case of [signal-service-translation](#) the [SignalServiceTranslationProps.translationTarget](#) collect all resulting events which belong to one provided service instance.
- In case of [service-signal-translation](#) the [SignalServiceTranslationProps.translationTarget](#) collect all resulting signals which are translated from one service instance.

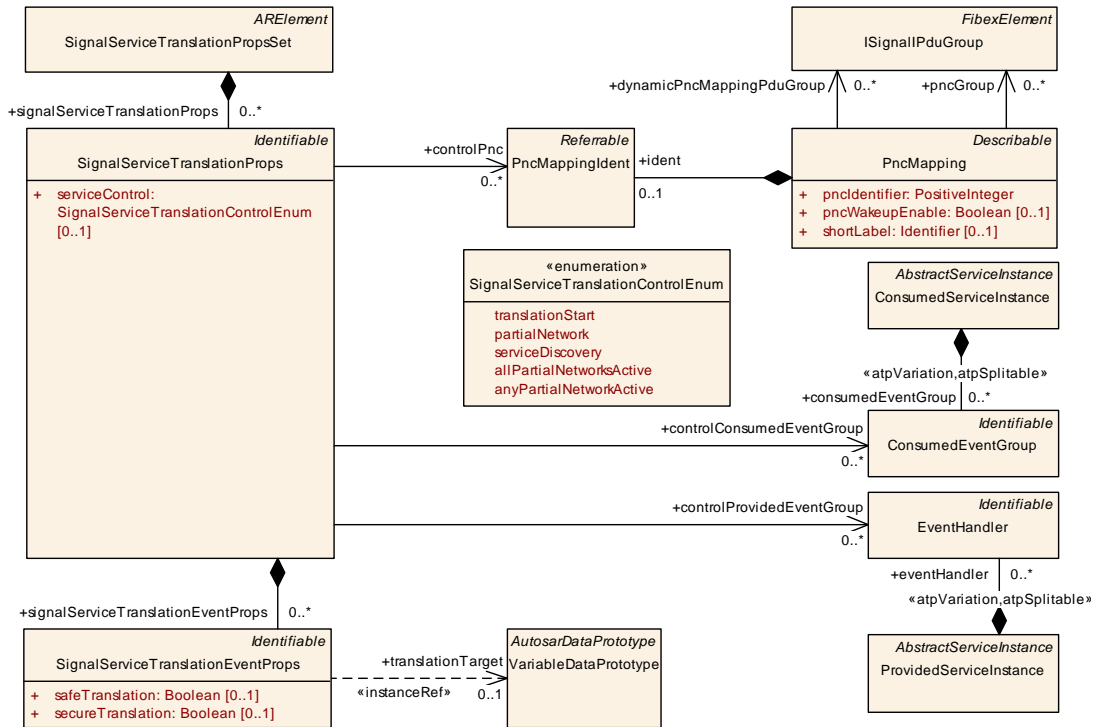


Figure 6.103: Signal/Service Translation properties

<b>Class</b>	<b>SignalServiceTranslationPropsSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::SignalServiceTranslation			
<b>Note</b>	Collection of SignalServiceTranslationProps. <b>Tags:</b> atp.recommendedPackage=SignalServiceTranslationProps			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
signalServiceTranslationProps	<a href="#">SignalServiceTranslationProps</a>	*	aggr	Collection of SignalServiceTranslationProps.

Table 6.283: SignalServiceTranslationPropsSet

<b>Class</b>	<b>SignalServiceTranslationProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::SignalServiceTranslation			
<b>Note</b>	This element allows to define the properties which are applicable for the signal/service translation service.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">SignalServiceTranslationPropsSet.signalServiceTranslationProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
controlConsumedEventGroup	<a href="#">ConsumedEventGroup</a>	*	ref	Reference to the EventGroup which encapsulates the signal-based payload.





Class	SignalServiceTranslationProps			
controlPnc	<a href="#">PncMappingIdent</a>	*	ref	Reference to the PNCs which control the offer/subscribe behavior of the translated service instance.
controlProvided EventGroup	<a href="#">EventHandler</a>	*	ref	Reference to the provided event group (aka Event Handler) which is automatically available when service Control equals translationStart.
serviceControl	<a href="#">SignalServiceTranslationControlEnum</a>	0..1	attr	Defines how the service instance control shall behave.
signalService Translation EventProps	<a href="#">SignalServiceTranslationEventProps</a>	*	aggr	Defines properties for a single translated event.

**Table 6.284: SignalServiceTranslationProps**

Class	SignalServiceTranslationEventProps			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::SignalServiceTranslation			
<b>Note</b>	This element allows to define the properties which are applicable for the signal/service translation event.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">SignalServiceTranslationProps</a> . <a href="#">signalServiceTranslationEventProps</a>			
Attribute	Type	Mult.	Kind	Note
elementProps	<a href="#">SignalServiceTranslationElementProps</a>	*	aggr	Defines properties for a single translated element.
safeTranslation	Boolean	0..1	attr	Defined whether the translation shall happen in a safe way.
secureTranslation	Boolean	0..1	attr	Defined whether the translation shall happen in a secure way.
translationTarget	<a href="#">VariableDataPrototype</a>	0..1	iref	Reference to a VariableDataPrototype representing the target of signal/service translation. <b>InstanceRef implemented by:</b> <a href="#">VariableDataPrototypeInSystemInstanceRef</a>


**Table 6.285: SignalServiceTranslationEventProps**

A simple [signal/service translation](#) setup is to have a one-to-one correspondence between the signal-based data definition and the service-oriented data definition. This is illustrated in figure [6.104](#).

Here the setup allows for a simple [PassThroughSwConnector](#) because the involved [PortInterfaces](#) are identical.


Please consult with [constr\_1248] in the Software Component Template [5] for details on the compatibility of connected [PortInterfaces](#).

Note that the translated *P1.dataX* and *P2.dataB* may be configured in the COM-Stack to be events that belong to one service instance or to belong to two different service instances. The setup in the example of figure [6.104](#) uses two [SignalServiceTranslationProps](#) elements and those use [SignalServiceTranslationEventProps](#), indicating that *P1.dataX* belongs to a different service instance than *P2.dataB*.

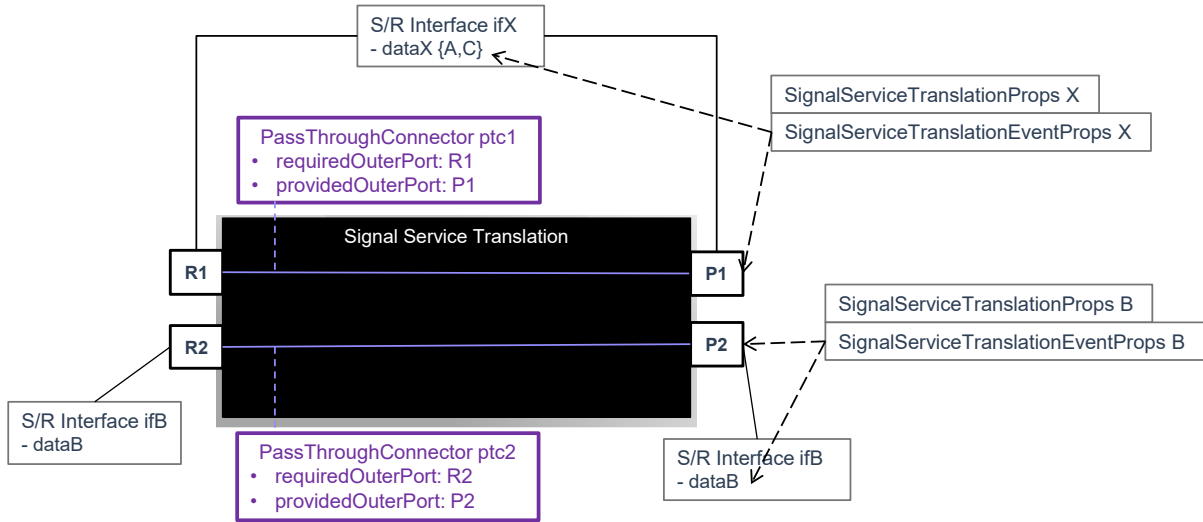

**Figure 6.104: Mapping description using only PassThroughSwConnectors**

The usage of the `PassThroughSwConnector` and (optionally) the accompanying `PortInterfaceMapping` already suffice to describe the intended mapping from a structural point of view:

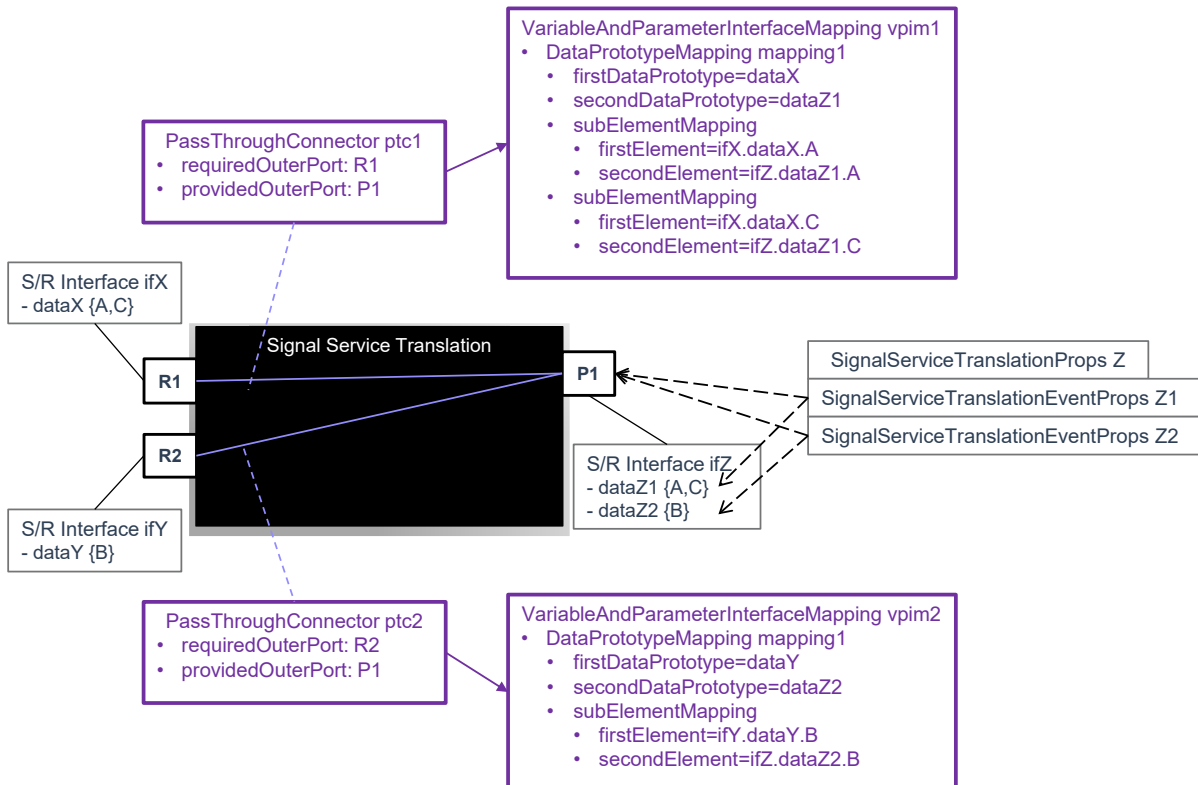

**Figure 6.105: Mapping description using PassThroughSwConnectors and PortInterfaceMappings**



In figure 6.105 the additional usage of `PortInterfaceMappings` is required because the connected `PortInterfaces` are not identical (in this example have different `shortNames`).


In this example there is only one `SignalServiceTranslationProps` element defined which uses two `SignalServiceTranslationEventProps` to refer to both the data elements `dataZ1` and `dataZ2`. Thus the translated events belong to the same service instance.

Although the figure 6.105 indicates that the output Port `P1` data `dataZ1` and `dataZ2` are composed of input from several sources, this is not true for the individual data elements. `P1.dataZ1` is solely composed out of `R1.dataX`, while `P1.dataZ2` is composed out of `R2.dataY`. Thus the example shown is still a mapping from *one source*.

The usage of `PortInterfaceMapping` (specifically `VariableAndParameterInterfaceMapping` with a `DataPrototypeMapping`) brings along a restriction on the applicability of the `PassThroughSwConnector` usage. Specifically the mapped elements have to be *both* either

- typed by an `ApplicationPrimitiveDataType` or
- typed by an `ApplicationCompositeDataType`.

The mixed case (where one `AutosarDataPrototype` is typed by an `ApplicationPrimitiveDataType` and the other is typed by an `ApplicationCompositeDataType`) is not supported by the `DataPrototypeMapping`. This is illustrated in figure 6.106: The interface `ifX` has two `VariableDataPrototypes` typed by `ApplicationPrimitiveDataTypes`, while the `ifZ` has a `VariableDataPrototype` typed by a `ApplicationCompositeDataType` (having the members `A`, `C`).

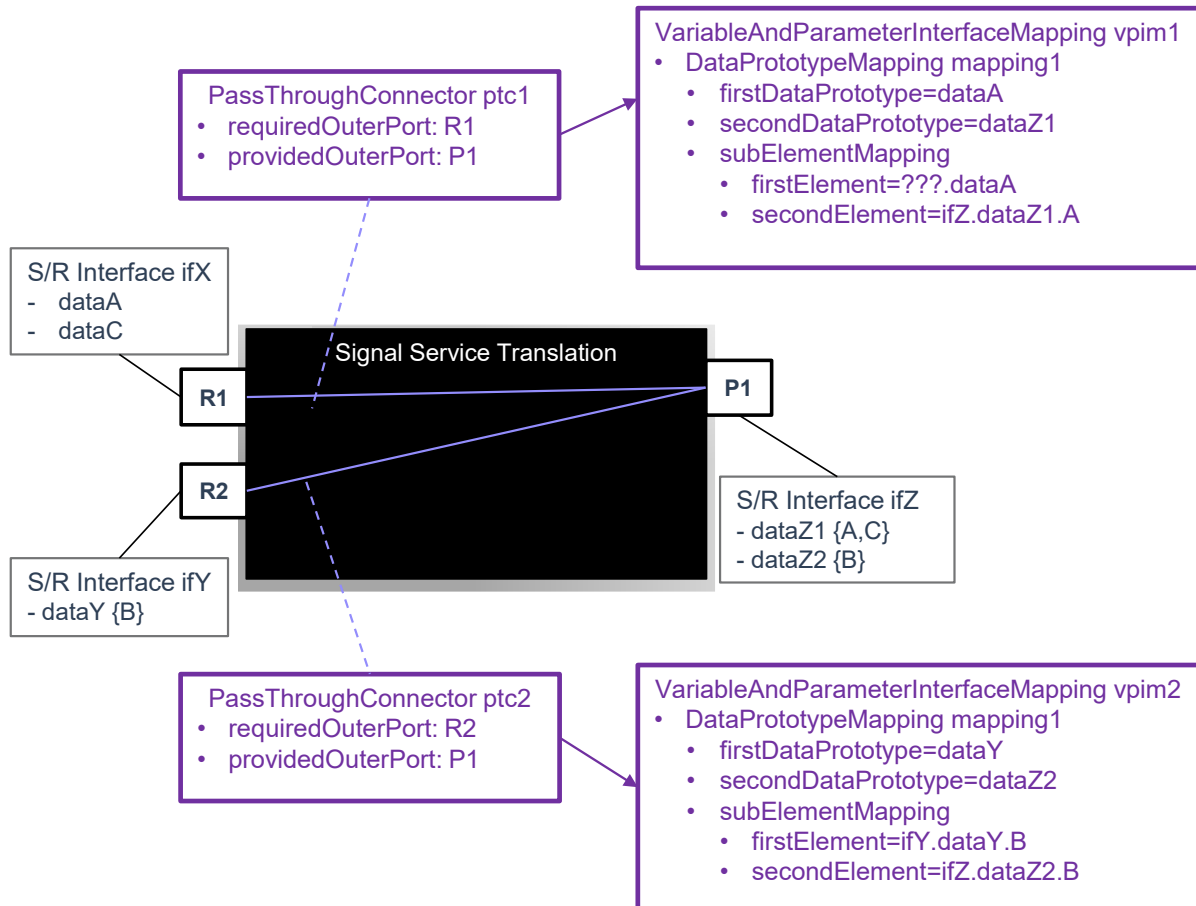

**Figure 6.106: Not supported mapping description using PassThroughSwConnectors and PortInterfaceMappings**

### 6.16.2.1 Filters and Transmission Triggers

The `filters` and `transmissionTriggers` can be used to define behavioral aspects of the `signal/service translation`. They are defined in the `SignalServiceTranslationElementProps`, which is aggregated by the `SignalServiceTranslationEventProps`.

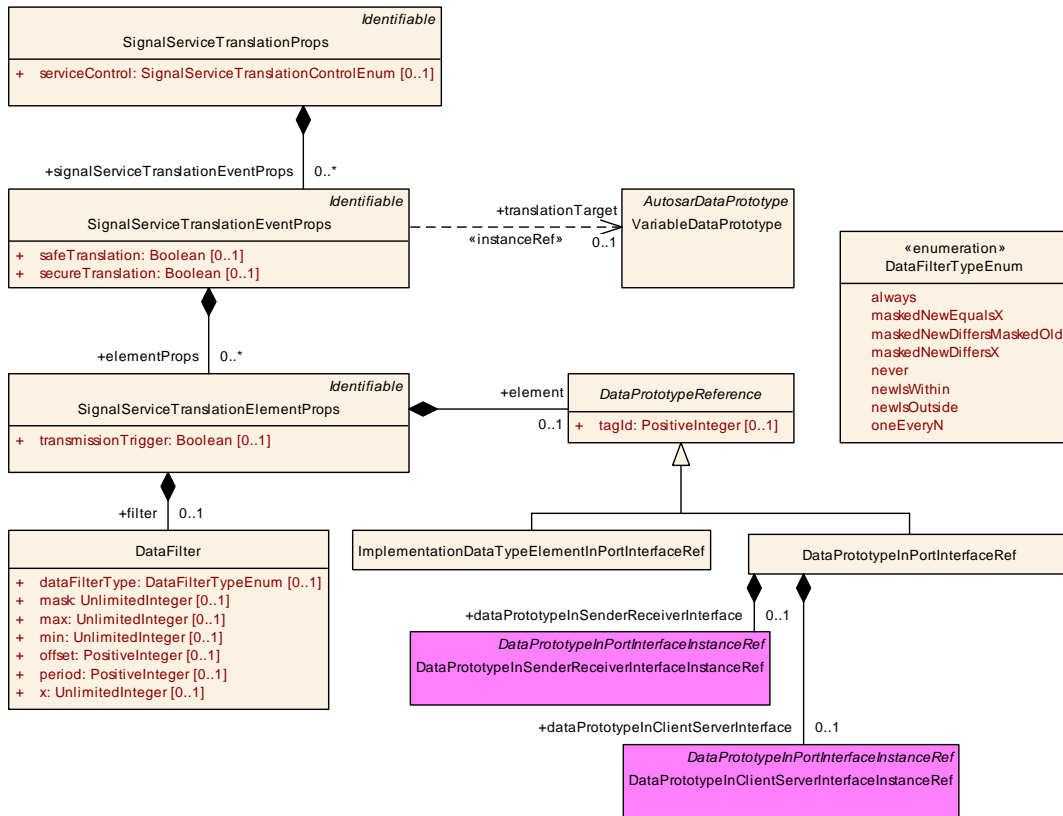


Figure 6.107: Signal/Service Translation element properties

<b>Class</b>	<b>SignalServiceTranslationElementProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::SignalServiceTranslation			
<b>Note</b>	Defined translation properties for individual mapped elements.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	SignalServiceTranslationEventProps.elementProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
element	DataPrototypeReference	0..1	aggr	Reference to the leaf element the SignalServiceTranslationElementProps apply to.
filter	DataFilter	0..1	aggr	Defines an optional filter to be applied during translation.
transmissionTrigger	Boolean	0..1	attr	Defines whether the source element (which is mapped to the referenced element) triggers the sending of the respective payload.

Table 6.286: SignalServiceTranslationElementProps

To which data the `filter` and/or `transmissionTrigger` applies is defined by the combination of `SignalServiceTranslationEventProps.translationTarget` and `SignalServiceTranslationElementProps.element` references.

In case the `filter` and/or `transmissionTrigger` shall apply to the `translationTarget` as a whole the reference `SignalServiceTranslationElementProps.element` shall not be defined. This is specifically true if `SignalServiceTranslationEventProps.translationTarget` refers to a `VariableDataPrototype` that is typed by a primitive `AutosarDataType`:

**[constr\_3651] No element in case translationTarget is primitive** [If `SignalServiceTranslationEventProps.translationTarget` refers to a `VariableDataPrototype` that is typed by a primitive `AutosarDataType` then the reference `SignalServiceTranslationElementProps.element` shall not be defined.]  
()

Since the reference `DataPrototypeReference` is used in several scenarios (see [TPS\_SYST\_02195]) it needs to be constrained for the usage in scope of the `signal/service translation` (i.e., for `SignalServiceTranslationElementProps.element`): The `DataPrototypeReference` used to define the `SignalServiceTranslationElementProps.element` is restricted to either `DataPrototypeInSenderReceiverInterfaceInstanceRef` or `ImplementationDataTypeElementInPortInterfaceRef`.

**[constr\_3652] Allowed sub-classes of DataPrototypeReference in the context of signal/service translation** [If a `DataPrototypeReference` in the role `SignalServiceTranslationElementProps.element` is used then following sub-classes are supported:

- if the reference target is typed by an `ApplicationDataType` then the `DataPrototypeInSenderReceiverInterfaceInstanceRef` shall be used and shall target an `ApplicationCompositeElementDataPrototype`.
- if the reference target is typed by an `ImplementationDataType` then the `ImplementationDataTypeElementInPortInterfaceRef` shall be used.

]()

It is important that the `SignalServiceTranslationEventProps.translationTarget` reference and the `SignalServiceTranslationElementProps.element` in the context of one `SignalServiceTranslationEventProps` are consistent.

Consistent usage of either `ApplicationDataType` or `ImplementationDataType` and consistent `translationTarget` target and `element` root:

**[constr\_3653] Consistent translationTarget and element in case ApplicationDataType is used** [If the `SignalServiceTranslationEventProps.translationTarget` refers to a `VariableDataPrototype` that is typed by an `ApplicationDataType` (`targetDataPrototype` of the `VariableDataPrototypeInSystemInstanceRef`) then every `SignalServiceTranslationElementProps.element` reference that is defined in the context of the `SignalServiceTranslationEventProps` shall have that `VariableDataPrototype` as the `rootDataPrototypeInSr` of the `DataPrototypeInSenderReceiverInterfaceInstanceRef`.]()

**[constr\_3654] Consistent translationTarget and element in case ImplementationDataType is used** [If the `SignalServiceTranslationEventProps.translationTarget` refers to a `VariableDataPrototype` that is typed by an

ImplementationDataType (targetDataPrototype of the VariableDataPrototypeInSystemInstanceRef) then every SignalServiceTranslationElementProps.element reference that is defined in the context of the SignalServiceTranslationEventProps shall have that VariableDataPrototype as the rootDataPrototype of the ImplementationDataTypeElementInPortInterfaceRef.>()

**[TPS\_SYST\_03062] Definition of a primitive target for SignalServiceTranslationElementProps** [The target of a SignalServiceTranslationElementProps is considered primitive if either:

- SignalServiceTranslationEventProps.translationTarget refers to a VariableDataPrototype that is typed by a primitive AutosarDataType or
- SignalServiceTranslationEventProps.translationTarget refers to a VariableDataPrototype that is typed by a composite AutosarDataType and SignalServiceTranslationElementProps.element refers to an AutosarDataPrototype that is typed by a primitive AutosarDataType.

](RS\_SYST\_00059)

**[TPS\_SYST\_03063] Definition of a composite target for SignalServiceTranslationElementProps** [The target of a SignalServiceTranslationElementProps is considered composite if either:

- SignalServiceTranslationEventProps.translationTarget refers to a VariableDataPrototype that is typed by a composite AutosarDataType and no reference for SignalServiceTranslationElementProps.element is given or
- SignalServiceTranslationEventProps.translationTarget refers to a VariableDataPrototype that is typed by a composite AutosarDataType and SignalServiceTranslationElementProps.element refers to an AutosarDataPrototype that is typed by a composite AutosarDataType.

](RS\_SYST\_00059)

The filter can be used to define a guard on the translated data. If the input data does not pass the filter then the impacted data is not translated. It depends on the kind of the translated data and the filter intention which filter types are supported:

**[constr\_3655] Supported filter types for primitive SignalServiceTranslationElementProps** [If the target for SignalServiceTranslationElementProps is defined as primitive according to [TPS\_SYST\_03062] then the following values for dataFilterType are supported:

- always
- maskedNewDiffersMaskedOld
- maskedNewDiffersX

- `maskedNewEqualsX`
- `never`
- `newIsOutside`
- `newIsWithin`
- `oneEveryN`.

}]()

**[constr\_3656] Supported filter types for composite `SignalServiceTranslationElementProps`** [If the target for `SignalServiceTranslationElementProps` is defined as composite according to [TPS\_SYST\_03062] then the following values for `dataFilterType` are supported:

- `always`
- `never`
- `oneEveryN`.

}]()

The `SignalServiceTranslationElementProps.transmissionTrigger` defines whether translated data actually triggers the sending of the `SignalServiceTranslationEventProps.translationTarget`.

One aspect is when the `translationTarget` is composed out of several sources (see [TPS\_SYST\_03040]). In this section the discussion is about whether `transmissionTrigger` is also applicable for the case where the `translationTarget` is created out of one source.

If the Translation Application Software Component is implemented to perform the `signal/service translation` in a periodic way (see [TPS\_SYST\_03042] and [TPS\_SYST\_03043]) the `transmissionTrigger` can be used to define whether the `signal/service translation` of that specific data actually triggers the sending or whether the sending is deferred to the periodic invocation of the Translation Application Software Component.

If the `signal/service translation` is configured to be done in a periodic way, then


- if the `transmissionTrigger` is set to `true` at least once then the `translationTarget` will be produced based on the periodicity AND additionally every time the input data arrives where `transmissionTrigger` is set to `true`
- if the `transmissionTrigger` is set to `false` for all members of the `translationTarget` then the `translationTarget` will be produced based on the periodicity ONLY.

If the `signal/service translation` is configured to be done in a NON periodic way (event driven only), then

- if the `transmissionTrigger` is set to `true` at least once then the `translationTarget` will be produced every time the input data arrives where `transmissionTrigger` is set to `true`
- if the `transmissionTrigger` is set to `false` for all members of the `translationTarget` then the `translationTarget` will NOT be sent at all (as there is no triggering defined, neither periodic nor via `transmissionTrigger`).

### 6.16.2.2 Mapping description from several sources

The mapping setup in figure 6.108 shows an example of a true multi-source mapping definition: The content of `dataZ3` is composed out of several sources: `dataX` and `dataY`.

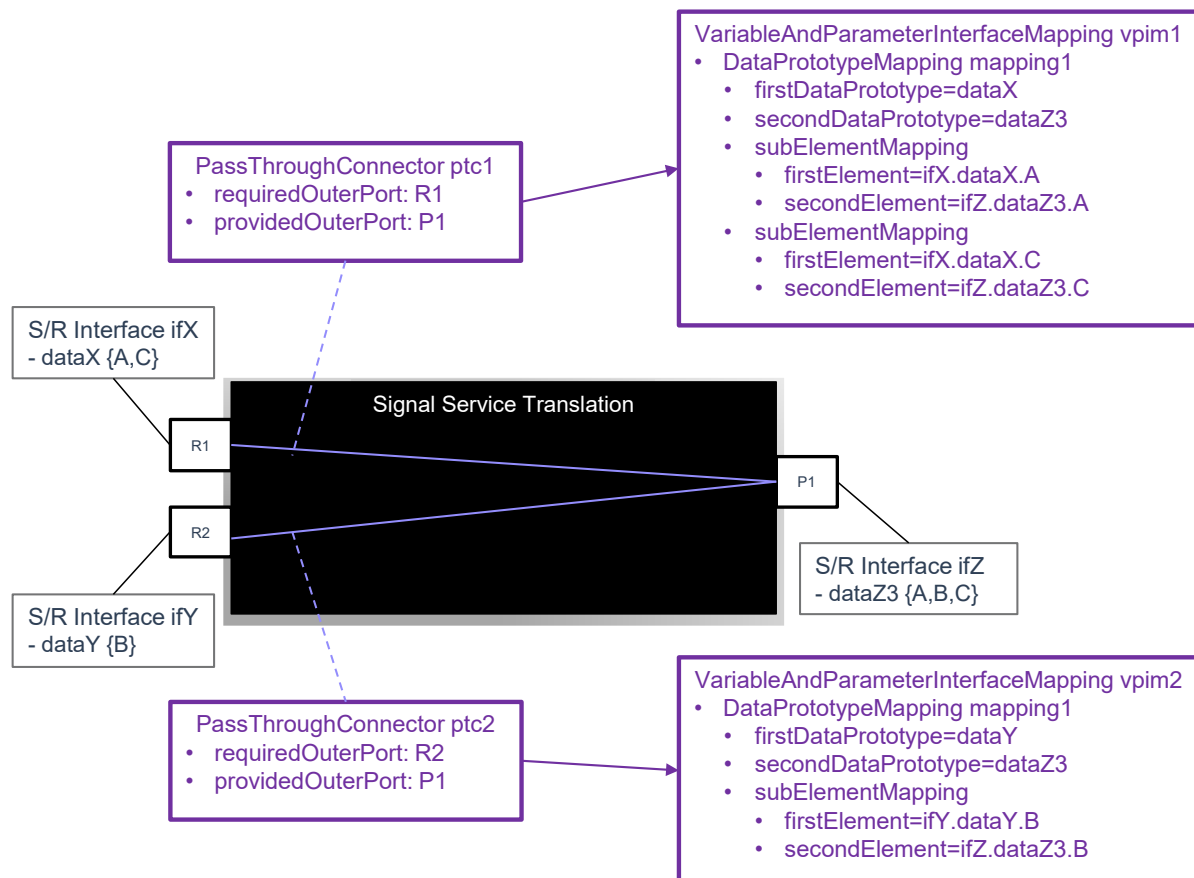

**Figure 6.108: Mapping description using PassThroughSwConnectors and PortInterfaceMappings from several sources**

The configuration of target data elements which are composed from several sources into the target data element is always defined from the perspective of the *target data element*.

The root of the *target data element* is defined by the reference `SignalServiceTranslationEventProps.translationTarget`. With this reference the `SwComponentPrototype` hosting the `signal/service translation` is defined, as well as the `PPortPrototype`, and the `translationTarget VariableDataPrototype`.

In case of `signal/service translation` from several sources the `translationTarget VariableDataPrototype` is composed out of several sources. But the definition of element translation attributes happens on the *target data elements*: `SignalServiceTranslationElementProps` is used to define `transmissionTrigger` and `filter` attributes for one leaf member of the `translationTarget` data element. In order to find the *source data element* to be translated the `PassThroughSwConnectors` and potential `VariableAndParameterInterfaceMappings` have to be considered as well.

Since the `translationTarget` may be composed from several sources a restriction applies to the `swImplPolicy` of the involved source data.

A setup where several source data elements have the attribute `swImplPolicy` set to `queued` leads to runtime issues, as - at the point in time when the `translationTarget` shall be composed - all the source data elements need to be gathered. But in case of a source data element where `swImplPolicy` is set to `queued` a source data element queue might be empty. An empty queue might have a variety of reasons, e.g. the rate at which the queue is filled is slower than the rate the `signal/service translation` consumes the data.

Thus it would be very unlikely that all the source data element queues have at least one element to be read and consumed at the point in time when the `signal/service translation` tries to read them.

**[TPS\_SYST\_03059] At most one `queued` source input in case of `signal/service translation` from several sources** [If the `SignalServiceTranslationEventProps.translationTarget` is composed out of several sources then at most one of these sources shall have the attribute `swImplPolicy` set to `queued`.] ([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03060] Source input with `queued` semantics shall have `transmissionTrigger` set to `true`** [If a source data element has the attribute `swImplPolicy` set to `queued` then the corresponding target `SignalServiceTranslationElementProps` shall have the attribute `transmissionTrigger` set to `true`.

This shall be the only `SignalServiceTranslationElementProps` which has `transmissionTrigger` set to `true` in the scope of the `SignalServiceTranslationEventProps`.] ([RS\\_SYST\\_00059](#))

Note: [\[TPS\\_SYST\\_03060\]](#) implies that only one source can be `queued` and that source shall be the only source which has the `transmissionTrigger` set to `true`.

The `queued` reception of a source data element might cause an issue (e.g., unclear behavior in case of empty queues or queue overruns) with the periodic reception



(see [TPS\_SYST\_03042]) or sending (see [TPS\_SYST\_03043]). Thus this combination is not supported by the `signal/service translation`.

**[TPS\_SYST\_03061] No support for `queued` reception semantics in combination with periodic communication** [If in the scope of a `SignalServiceTranslation-EventProps.translationTarget` the `translationTarget` has a periodic sending defined according to [TPS\_SYST\_03043] and/or at least one source data element has a periodic reception defined according to [TPS\_SYST\_03042] then none of the source data elements shall have a `queued` reception semantics.] (*RS\_SYST\_00059*)

**[TPS\_SYST\_03038] Definition of transmission triggers for translations with different sources** [The attribute `SignalServiceTranslationElementProps.transmissionTrigger` defines which translation elements (`SignalServiceTranslationElementProps.element`) contribute to the transmission triggering for the mapped payload.] (*RS\_SYST\_00059*)

**[TPS\_SYST\_03039] Full translation before transmission triggering** [In case there has been a transmission trigger caused by a source signal the `signal/service translation` shall process all other mapped source signals from the triggering source context (signal group or IPdu) before actually sending out the target.] (*RS\_SYST\_00059*)

This basically means that for example if in the scenario depicted in figure 6.108 *dataZ3.B* were configured to trigger a transmission of *dataZ3*, then upon the reception event of *dataY* both *dataX* and *dataY* shall be received (by calling the corresponding RTE APIs), *dataZ3* shall be assembled out of the received *dataX* and *dataY* in order to fill *dataZ3.A*, *dataZ3.B*, and *dataZ3.C* with up-to-date information, and finally *dataZ3* shall be sent (by calling the corresponding RTE API).

**[TPS\_SYST\_03040] Transmission trigger for translations with different sources** [If the attribute `SignalServiceTranslationElementProps.transmissionTrigger` equals *true* then the reception of the respective source signal does cause the sending of the target (after all mapped sources from the same source context have been translated, see [TPS\_SYST\_03039]).] (*RS\_SYST\_00059*)

**[TPS\_SYST\_03041] No transmission trigger for translations with different sources** [If the attribute `SignalServiceTranslationElementProps.transmissionTrigger` is not defined or has the value *false* then the reception of the respective source signal does not cause the sending of the target.] (*RS\_SYST\_00059*)

### 6.16.2.3 Mapping description and data conversion

As the mapping for `signal/service translation` is implemented on Application level also the data conversion possibilities of the RTE may be used directly. [TPS\_SWCT\_01560] and [TPS\_SWCT\_01561] in the Software Component Template [5] define for which `categorys` of `CompuMethods` data conversion is supported.

#### 6.16.2.4 Implementation of `PassThroughSwConnectors`


The definition of `SignalServiceTranslationProps`, `PassThroughSwConnectors` and potential `VariableAndParameterInterfaceMappings` specify the requirements what the `signal/service translation` shall do. The actual implementation needs to be done by code executed in the scope of a `SwComponentPrototype` typed by an `AtomicSwComponentType`.

Whether the `SwComponentPrototype` implementing the `signal/service translation` (typed by an `AtomicSwComponentType`) is put inside the `CompositionSwComponentType` which used to define the `PassThroughSwConnectors` or whether the `SwComponentPrototype` implementing the `signal/service translation` replaces the `CompositionSwComponentType` is left to the implementation.

The goal of this approach is that the model and the code of the `signal/service translation AtomicSwComponentType` can be automatically derived / generated from the requirements stated in the `SignalServiceTranslationProps`, `PassThroughSwConnectors`, and `VariableAndParameterInterfaceMappings`. This may include the definition of one or more

- `ApplicationSwComponentType`
- `SwcInternalBehavior`
- `RunnableEntity`
- `VariableAccess`

Figure 6.109 shows an example where the upper part illustrates the `CompositionSwComponentType` with `PassThroughSwConnectors` and `VariableAndParameterInterfaceMappings`. The lower part of the figure sketches an `AtomicSwComponentType` actually hosting the code which implements the `signal/service translation`.

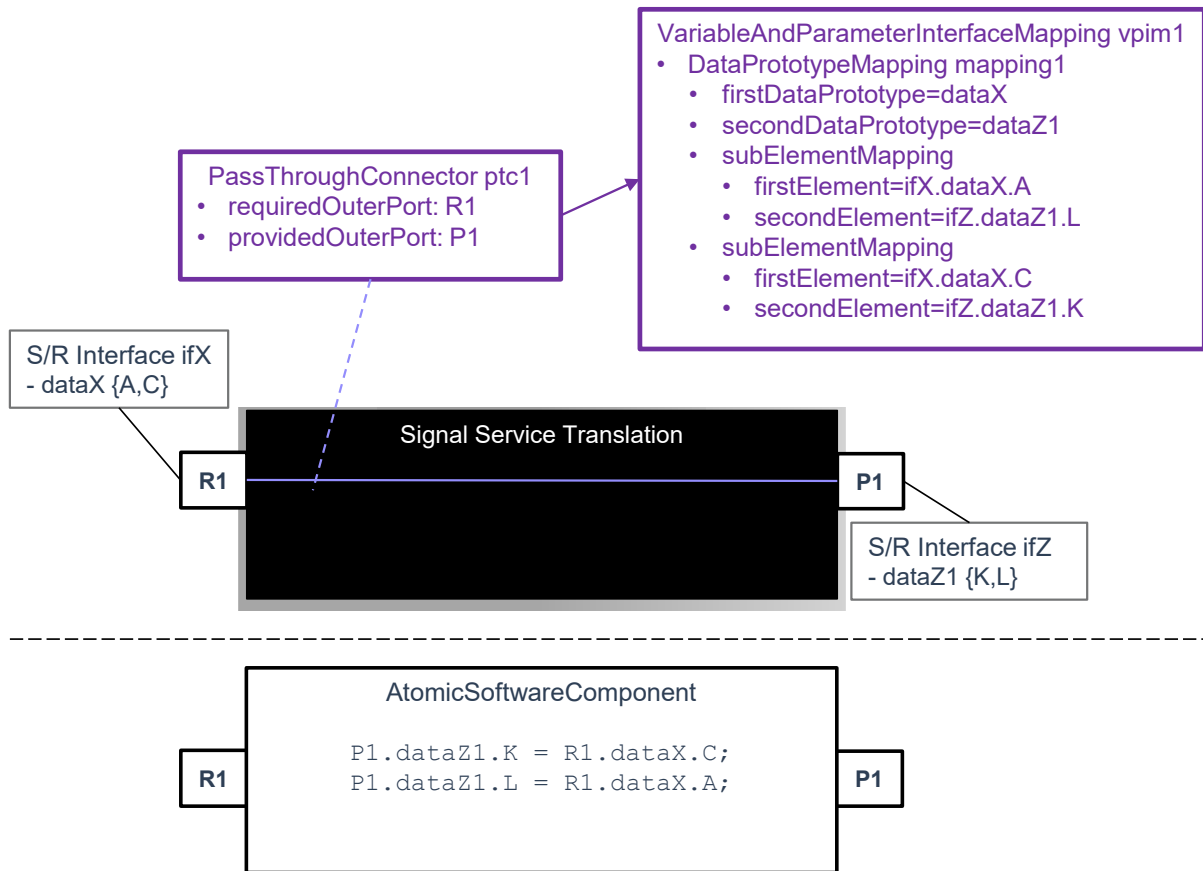


**Figure 6.109: Implementation of PassThroughSwConnectors and PortInterfaceMappings**

### 6.16.3 Service discovery control

The service discovery module [27] handles the offering/finding of service instances as well as the subscription to event groups. The behavior for each service instance may be controlled by Application software components via the BswM.

In scope of the [signal/service translation](#) the Translation Software Component needs to take control of the offering and subscribing to service instances. The general setup is illustrated in figure [6.110](#).

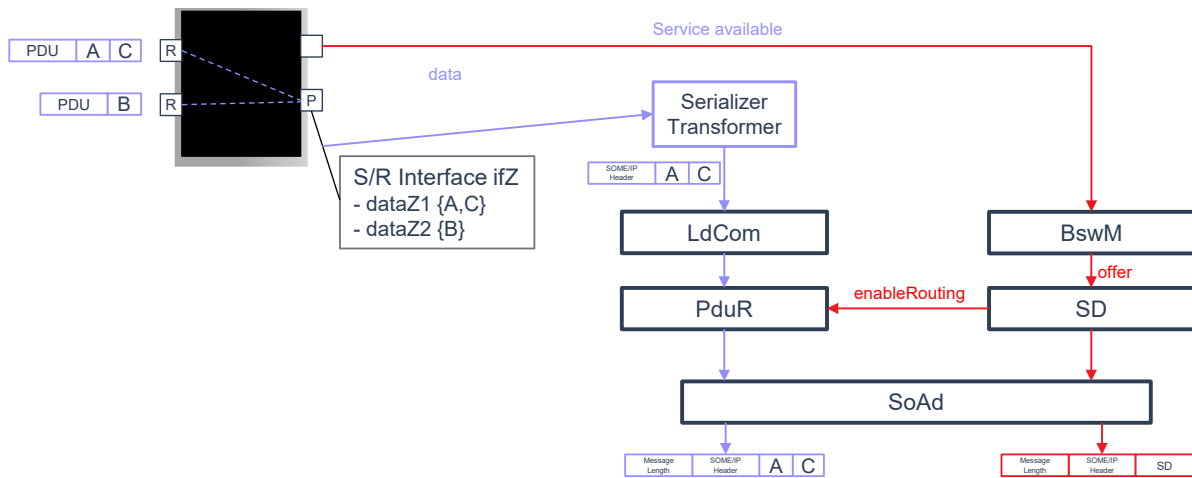

**Figure 6.110: Interaction between translation SWC can Service Discovery**

At which point in time a specific service instance (originating from [signal/service translation](#)) is actually offered / subscribed at the service discovery can be defined per service instance:

Possible approaches for service availability/subscription are:

- [translationStart](#) - start of ECU (see section [6.16.3.1](#))
- [partialNetwork](#) - availability of involved partial networks (see section [6.16.3.2](#))
- [serviceDiscovery](#) - availability of related service instance (see section [6.16.3.3](#))

The attribute [SignalServiceTranslationProps.serviceControl](#) defines the service instance control behavior.

Enumeration	SignalServiceTranslationControlEnum
Package	M2::AUTOSARTemplates::CommonStructure::SignalServiceTranslation
Note	This enumeration allows to define how the service instance offer/subscribe control shall behave.
Aggregated by	<a href="#">SignalServiceTranslationProps.serviceControl</a>
Literal	<b>Description</b>
allPartialNetworks Active	Defines the start of service control when all specified partial networks are active. <b>Tags:</b> atp.EnumerationLiteralIndex=3
anyPartialNetwork Active	Defines the start of service control when any specified partial network is active. <b>Tags:</b> atp.EnumerationLiteralIndex=4
partialNetwork	Defines the start of service control when specific partial networks are active. <b>Tags:</b> atp.EnumerationLiteralIndex=1 atp.Status=obsolete
serviceDiscovery	Defines the start of service control when other service is available. <b>Tags:</b> atp.EnumerationLiteralIndex=2
translationStart	Defines the start of service control at translation start. <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 6.287: SignalServiceTranslationControlEnum**

### 6.16.3.1 Service control at ECU start

The approach of service control at ECU start is to utilize the *AutoAvailable* / *AutoRequire* feature of the service discovery module where the service instance is automatically offered at startup of the ECU. In this case the translation software component does not need to interact with the BswM to control the service state of each individual service instance.

It is configurable per translated service event whether that event shall be automatically controlled at ECU start.

**[TPS\_SYST\_03022] *autoAvailable* setting for provided service instance with *translationStart*** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `translationStart`, then the `ProvidedServiceInstance` owning the `EventHandler` referenced by `SignalServiceTranslationProps.controlProvidedEventGroup` shall have its `autoAvailable` attribute set to `true`.] (*RS\_SYST\_00059*)

**[TPS\_SYST\_03023] *autoRequire* setting for required service instance with *translationStart*** [For a required translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `translationStart`, then the `ConsumedServiceInstance` owning the `ConsumedEventGroup` referenced by `SignalServiceTranslationProps.controlConsumedEventGroup` shall have its `autoRequire` attribute set to `true`.] (*RS\_SYST\_00059*)

**[TPS\_SYST\_03024] *autoRequire* setting for required event groups of required service instance with *translationStart*** [For a required translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `translationStart`, then the `ConsumedEventGroup` referenced by `SignalServiceTranslationProps.controlConsumedEventGroup` shall have its `autoRequire` attribute set to `true`.] (*RS\_SYST\_00059*)

### 6.16.3.2 Service control due to availability of partial networks

If the availability of the signal-based PDUs is controlled using Partial Networking then the respective translated services offers/subscriptions can only be activated if the specific partial networks are active. This relationship is used to control the availability of specific service instances.

In case there are several PNCs referenced in the role `SignalServiceTranslationProps.controlPnc` the activation of the translated service can be configured to either

- activate the service when ANY of the referenced PNCs is available ( `SignalServiceTranslationProps.serviceControl` equals `SignalServiceTranslationControlEnum.anyPartialNetworkActive` )

- activate the service when ALL of the referenced PNCs are available ( `SignalServiceTranslationProps.serviceControl` equals `SignalServiceTranslationControlEnum.allPartialNetworksActive` ).

**[constr\_3545] Mandatory reference to a *Pnc* in case of *anyPartialNetworkActive* or *allPartialNetworksActive*** [If the `SignalServiceTranslationProps.serviceControl` equals `anyPartialNetworkActive` or `allPartialNetworksActive`, then the reference `SignalServiceTranslationProps.controlPnc` shall point to at least one `PncMappingIdent`.]()

**[TPS\_SYST\_03025] Control of service instance in case of *anyPartialNetworkActive* or *allPartialNetworksActive*** [If the `SignalServiceTranslationProps.serviceControl` equals `anyPartialNetworkActive` or `allPartialNetworksActive`, then the respective service instance shall be configured to be controlled using the BswM/SD configuration.]([RS\\_SYST\\_00059](#))

The ComM states relevant for the activation are defined in the SWS document [34].

Requested Partial Network: respective PNC is in ComM status `COMM_PNC_REQUESTED` or `COMM_PNC_READY_SLEEP`.

Released Partial Network: respective PNC is in ComM status `COMM_PNC_PREPARE_SLEEP` or `COMM_PNC_NO_COMMUNICATION`.

**[TPS\_SYST\_03026] Monitoring of the *requested partial networks* status in case of *anyPartialNetworkActive* for provided service instance** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `anyPartialNetworkActive`, then the translation software component shall monitor the status of the referenced *partial networks* (referenced via `SignalServiceTranslationProps.controlPnc`).

If at least one of the referenced *partial networks* is in the state `requested` then the translation software component shall *offer* the respective translated service instance.]([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03027] Monitoring of the *requested partial networks* status in case of *anyPartialNetworkActive* for required service instance** [For a required translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `anyPartialNetworkActive`, then the translation software component shall monitor the status of the referenced *partial networks* (referenced via `SignalServiceTranslationProps.controlPnc`).

If at least one of the referenced *partial networks* is in the state `requested` then the translation software component shall *find* the respective translated service instance and *subscribe* to its event groups.]([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03056] Monitoring of the *released partial networks* status in case of *anyPartialNetworkActive* for required service instance** [For a required

translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `anyPartialNetworkActive`, then the translation software component shall monitor the status of the referenced *partial networks* (referenced via `SignalServiceTranslationProps.controlPnc`).

If all of the referenced *partial networks* are in the state `released` then the translation software component shall *unsubscribe* from its event groups.](RS\_SYST\_00059)

**[TPS\_SYST\_03057] Monitoring of the `released partial networks` status in case of `anyPartialNetworkActive` for provided service instance** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `anyPartialNetworkActive` then the translation software component shall monitor the status of the referenced *partial networks* (referenced via `SignalServiceTranslationProps.controlPnc`).

If all of the referenced *partial networks* are in the state `released` then the translation software component shall stop *offering* the respective translated service instance.](RS\_SYST\_00059)

**[TPS\_SYST\_02380] Monitoring of the requested partial networks status in case of `allPartialNetworksActive` for provided service instance** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `allPartialNetworksActive`, then the translation software component shall monitor the status of the referenced *partial networks* (referenced via `SignalServiceTranslationProps.controlPnc`). If all of the referenced *partial networks* are in the state `requested` then the translation software component shall *offer* the respective translated service instance.](RS\_SYST\_00059)

**[TPS\_SYST\_02381] Monitoring of the requested partial networks status in case of `allPartialNetworksActive` for required service instance** [For a required translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `allPartialNetworksActive`, then the translation software component shall monitor the status of the referenced *partial networks* (referenced via `SignalServiceTranslationProps.controlPnc`). If all of the referenced *partial networks* are in the state `requested` then the translation software component shall *find* the respective translated service instance and subscribe to its event groups.](RS\_SYST\_00059)

**[TPS\_SYST\_02382] Monitoring of the `released partial networks` status in case of `allPartialNetworksActive` for required service instance** [For a required translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `allPartialNetworksActive` then the translation software component shall monitor the status of the referenced *partial networks* (referenced via `SignalServiceTranslationProps.controlPnc`).

If any of the referenced *partial networks* are in the state `released` then the translation software component shall *unsubscribe* from its event groups.](RS\_SYST\_00059)

**[TPS\_SYST\_02383] Monitoring of the `released partial networks` status in case of `allPartialNetworksActive` for provided service instance** [For a provided



translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `allPartialNetworksActive` then the translation software component shall monitor the status of the referenced *partial networks* (referenced via `SignalServiceTranslationProps.controlPnc`).

If any of the referenced *partial networks* is in the state `released` then the translation software component shall stop *offering* the respective translated service instance.] (*RS\_SYST\_00059*)

### 6.16.3.3 Service control due to availability of related service instance

There are scenarios where the transmission of signal-based PDUs is controlled by means of SOME/IP service discovery, i.e., the signal-based PDUs are effectively offered as events of a service and are only transmitted in case there are active subscriptions present. Since the payload of the signal-based PDUs is not serialized according to the SOME/IP transformer rules, even in such scenarios `signal/service translation` is required for the payload.

In this setup, however, the availability of the translated/target service instance depends on the availability of the corresponding source service instance(s). Note, that this dependency is irrespective of the actual direction of the translation:

- In case of *signal to service translation* the availability of the translated/target service instance (which exhibits a SOME/IP serialized payload) depends on the availability of the source service instance (which exhibits a signal-based payload).
- In case of *service to signal translation* the availability of the translated/target service instance (which exhibits a signal-based payload) depends on the availability of the source service instance (which exhibits a SOME/IP serialized payload).


Figure 6.111 illustrates an example setup showing exactly the above mentioned dependency in both directions as well as the approach to handle this dependency:

**Service to signal translation (case a):** A SOME/IP serialized source service instance shall be translated into a signal-based target service instance. Here the signal-based target service instance shall only be *offered* when the corresponding SOME/IP serialized source service instance is actually successfully subscribed to. Thus the approach is to initially issue a *find service* for the SOME/IP serialized source service instance. Upon the reception of an *offer service* a *subscribe event group* is sent and, finally, upon the reception of a *subscribe event group acknowledge* (i.e., upon the successful subscription) the signal-based translated target service instance is *offered*. For this setup the `ConsumedEventGroup` representing the SOME/IP serialized source service instance of *Ra* is used as `controlConsumedEventGroup`.

**Signal to service translation (case b):** A signal-based source service instance shall be translated into a SOME/IP serialized target service instance. Here the



SOME/IP serialized target service instance shall only be *offered* when the corresponding signal-based source service instance is actually successfully subscribed to. The approach is analogous to case *a* with source/target roles reversed. For this setup the `ConsumedEventGroup` representing the signal-based source service instance of *Rb* is used as `controlConsumedEventGroup`.

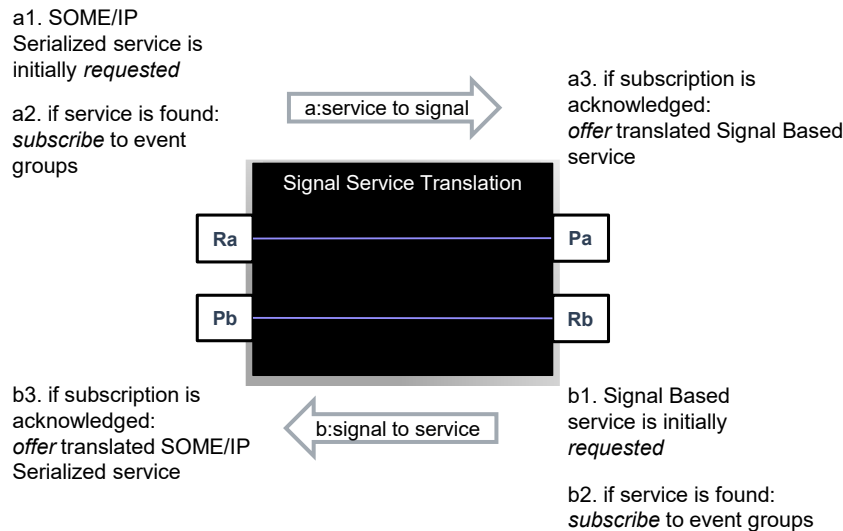

**Figure 6.111: Translation based on service availability**

**[constr\_3546] Mandatory reference to a `ConsumedEventGroup` in case of `serviceControl`** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `serviceDiscovery` then the reference `SignalServiceTranslationProps.controlConsumedEventGroup` shall point to at least one `ConsumedEventGroup`.]()

In case `SignalServiceTranslationProps.serviceControl` is set to `serviceDiscovery` then the `ConsumedEventGroups` referenced in role `controlConsumedEventGroup` as well as the owning `ConsumedServiceInstances` are required for the availability of the provided translated service instance and thus have to be *found* and *subscribed to* by means of *find service* and *subscribe event group*. This *finding* and *subscription* is automatically (i.e., without the need of any SWC intervention) achieved by having the `ConsumedServiceInstance` and the `ConsumedEventGroup` `autoRequire` their instances.

**[TPS\_SYST\_03028] Auto require for `controlConsumedEventGroup` in case of service instance with `serviceControl`** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `serviceDiscovery` then every `ConsumedEventGroup` referenced in `SignalServiceTranslationProps.controlConsumedEventGroup` shall have the `autoRequire` attribute set to `true`.](*RS\_SYST\_00059*)

**[TPS\_SYST\_03058] Auto require for `ConsumedServiceInstance` in case of service instance with `serviceControl`** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `serviceDiscovery` then the every `ConsumedServiceInstance` owning at least one of the

`controlConsumedEventGroups` shall have the `autoRequire` attribute set to `true`.]  
(RS\_SYST\_00059)

**[TPS\_SYST\_03029] Offer for a provided translated service instance with `serviceControl`** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `serviceDiscovery` and the *subscribe* to **all** referenced `controlConsumedEventGroups` was successful, then the respective translated target service instance shall be *offered*. This applies for both, `signal-service-translation` as well as `service-signal-translation`.]  
(RS\_SYST\_00059)

**[TPS\_SYST\_03030] Stop offer for a provided service instance with `serviceControl`** [For a provided translated service instance, if the `SignalServiceTranslationProps.serviceControl` equals `serviceDiscovery` and the *subscription* of **at least one** `controlConsumedEventGroup` is not available, then a *stop offer* of the respective translated target service instance shall be issued. This applies for both, `signal-service-translation` as well as `service-signal-translation`.]  
(RS\_SYST\_00059)

#### 6.16.4 Translation behavior

There are two possible ways to define behavioral aspects for the `signal/service translation` use-case:

- COM-Stack
- Translation Application Software Component

##### 6.16.4.1 COM-Stack translation behavior

The Classic platform COM-Stack can be configured to have an own periodic behavior for periodic sending and reception/time-out monitoring. In this case the existing COM-Stack definition of behavior is used.

Example features are:

- `TransmissionModeTiming.cyclicTiming`
- `TransmissionModeTiming.eventControlledTiming`
- `IPduTiming.minimumDelay`
- `ISignalPort.timeout`

Thus it is possible to register the Translation Application Software Component to be notified when data arrives and then perform the translation operation solely driven by the notifications from the COM-Stack.

There are use-cases where the COM-Stack can not be used to perform the specific behavioral aspects because the Transformers are required to have access to the raw received and sent data. In these cases the usage of the Translation Application Software Component behavior is required.

#### 6.16.4.2 Translation Application Software Component translation behavior

If the Translation Application Software Component shall implement specific behavioral aspect these have to be defined at the definition of the `CompositionSwComponentType` which has the `signal/service translation` input and output `PortPrototypes` as well as the `PassThroughSwConnectors`.

For the periodic behavior the definition of `SenderComSpec.transmissionProps.dataUpdatePeriod` and `ReceiverComSpec.receptionProps.dataUpdatePeriod` define the expected periods for data update and check.

**[TPS\_SYST\_03042] Periodic call in case of `ReceiverComSpec.ReceiverComSpec.receptionProps.dataUpdatePeriod`** [If the `signal/service translation` `CompositionSwComponentType` has a `RPortPrototype` defined with a `ReceiverComSpec.receptionProps.dataUpdatePeriod` defined then the `signal/service translation` software component implementation shall periodically call the respective Rte reception API with the defined period.](*RS\_SYST\_00059*)

**[TPS\_SYST\_03043] Periodic call in case of `SenderComSpec.transmissionProps.dataUpdatePeriod`** [If the `signal/service translation` `CompositionSwComponentType` has a `PPortPrototype` defined with a `SenderComSpec.transmissionProps.dataUpdatePeriod` defined then the `signal/service translation` software component implementation shall periodically call the respective Rte sending API with the defined period.](*RS\_SYST\_00059*)

Data filtering:

If there is a `filter` defined at the `NonqueuedReceiverComSpec` then the evaluation of this `DataFilter` is performed in the COM-Stack. Thus the COM-Stack filtering usually can not be applied when there are transformers involved because the state machines of E2E transformers need to receive every message.

If a data filtering shall be applied *after* the data transformation inside the `signal/service translation` software component then there is the possibility to define a `DataFilter` at the `SignalServiceTranslationElementProps` in the role `filter`.


**[TPS\_SYST\_03051] Data filter inside the `signal/service translation` software component** [If there is a `SignalServiceTranslationElementProps.filter` defined this filtering shall be implemented inside the `signal/service translation` software component.](*RS\_SYST\_00059*)

### 6.16.5 End-to-End considerations

In case there is an E2E header attached and/or a secure communication defined the translation needs to break the transport chain and re-calculate the E2E measures (CRC/MAC). The CRC/MAC is calculated over the uint8 array representation of the payload data. Since the *signal/service translation* changes the data layout, also the uint8 array representation of the payload data changes resulting in a different CRC/MAC value.

#### 6.16.5.1 Safety

Due to the architectural approach of the *signal/service translation* the safety aspects can be configured using existing mechanisms. Thus it is possible to define dedicated safety end-to-end profiles for both the signal-based part, and the service-based part. The translation software component then links the two parts together and handles the behavioral aspects of the translation.

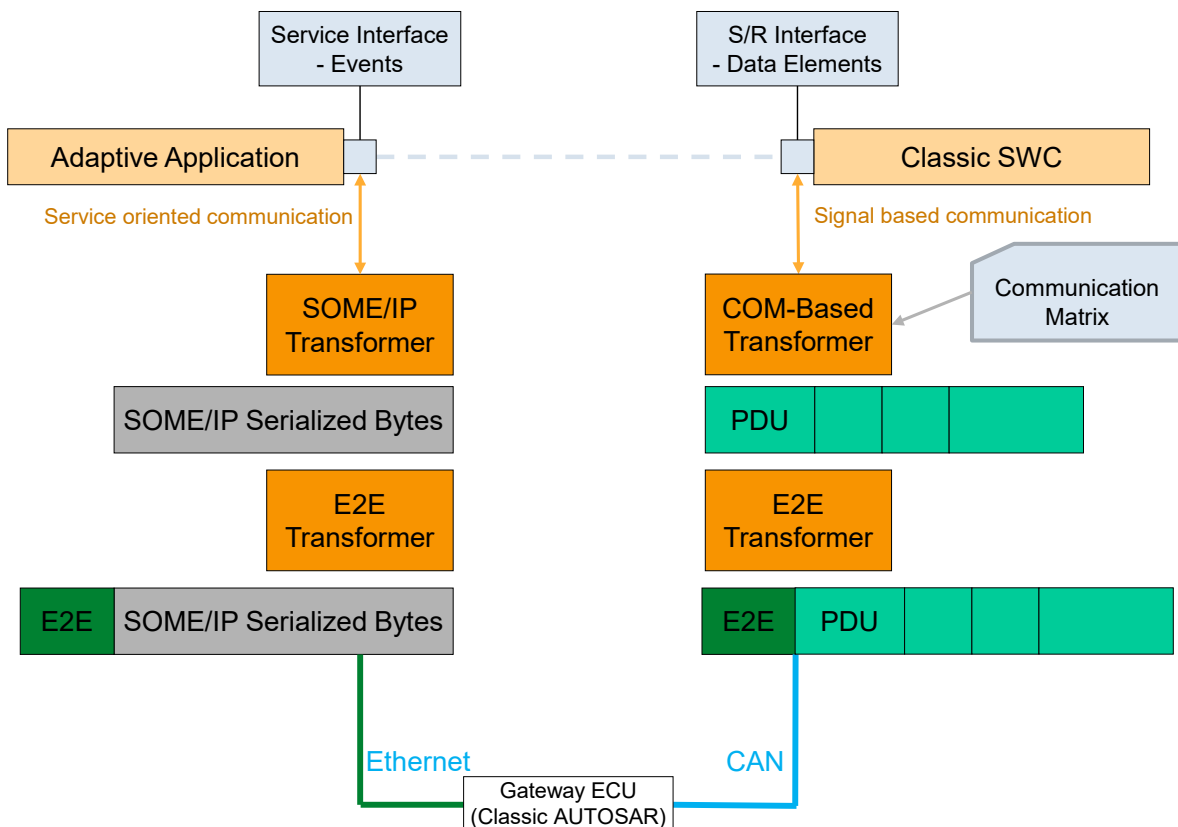

**Figure 6.112: Signal/Service Translation and Safety**

The attribute `SignalServiceTranslationEventProps.safeTranslation` is used to explicitly require that both ends of the translation shall be configured in a safe transport way and that the translation software component shall handle the translation activity in an end-to-end preserving way.

**[TPS\_SYST\_03044] Handling of safe [signal/service translation](#) in one software component** [It is required that the [signal/service translation](#) (and vice versa) of one Service/SignalGroup pair which are mapped to each other, shall be handled in one software component to also cover a closed mapping from one E2E profile to another, if necessary. The [signal/service translation](#) of different (independent) Services/SignalGroups may be handled by different software component.] ([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03036] [PortAPIOption](#) for [safeTranslation RPortPrototype](#)** [If [SignalServiceTranslationEventProps.safeTranslation](#) is set to *true* then a [PortAPIOption](#) referring to the [RPortPrototype](#) shall exist and the [PortAPIOption.errorHandling](#) attribute shall be set to [transformerErrorHandling](#).] ([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03037] [PortAPIOption](#) for [safeTranslation PPortPrototype](#)** [If [SignalServiceTranslationEventProps.safeTranslation](#) is set to *true* then a [PortAPIOption](#) referring to the [PPortPrototype](#) shall exist and the [PortAPIOption.transformerStatusForwarding](#) attribute shall be set to [transformerStatusForwarding](#).] ([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03045] Support for safe [signal/service translation](#)** [The translation of E2E protected data shall be supported in both directions, [signal-service-translation](#) and [service-signal-translation](#).] ([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03046] Support for safe [signal/service translation](#) with same or different E2E profiles** [The translation of E2E protected data shall support the occurrence of

- the same E2E profile on both sides of the communication and
- different E2E profiles on each side of the communication.

] ([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03047] 1:n mapping for E2E protected data** [It shall be possible to map the same E2E protected source data to several E2E protected target data (1:n).] ([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03048] E2E protected target out of E2E protected sources** [The content of one E2E protected target shall only be composed out of data from E2E protected sources.] ([RS\\_SYST\\_00059](#))

The rationale for [\[TPS\\_SYST\\_03048\]](#) is to support the use-case where target data shall be E2E protected and is composed from several sources.

**[TPS\_SYST\_03049] No translation of not OK E2E protected composed data** [If a E2E protected source data is mapped into a composed E2E protected target data and if the E2E-Check for the source data returns any E2E error (not *E\_OK*) then this source data shall not be forwarded to the respective target data and (if applicable) shall not trigger the transmission of the target.] ([RS\\_SYST\\_00059](#))

If source data is not verified as *E\_OK* it is not translated into a composed target. If the translated E2E protected data comes from several sources there may occur correlation and synchronicity issues during translation.

**[TPS\_SYST\_03031] Sufficient ASIL level of translation software component** [If the `SignalServiceTranslationEventProps.safeTranslation` equals true then the implementation of the translation software component shall fulfill a sufficient ASIL.] ([RS\\_SYST\\_00059](#))

**[constr\_3548] EndToEnd profile for both ends of `safeTranslation`** [If the `SignalServiceTranslationEventProps.safeTranslation` equals true then both, the signal-based payload as well as the service-oriented payload shall have an End-ToEnd profile defined.] ()

**[TPS\_SYST\_03032] Data transmission in case of *E\_OK* safe signal reception** [ `Signal/service translation` shall check the end-to-end status of every received payload. If the safety transformer returns *E\_OK* for the received payload then the data shall be forwarded to the respective sending of the translation software component.] ([RS\\_SYST\\_00059](#))

Error handling:

**[TPS\_SYST\_03033] No data transmission in case of reception timeout** [If no message is received within the specified message cycle time (timeout is detected), then no data shall be translated to the respective sending of the translation software component.] ([RS\\_SYST\\_00059](#))

**[TPS\_SYST\_03034] Handling safe signal reception** [

Source error	Forwarding status code	Comment
E_OK	E_OK	–
E_SAFETY_VALID_REP	E_SAFETY_INVALID_REP	–
E_SAFETY_VALID_SEQ	E_SAFETY_INVALID_SEQ	–
E_SAFETY_VALID_ERR	E_SAFETY_INVALID_CRC	–
E_SAFETY_VALID_NND	NO TRANSLATION	No data received, thus no translation
E_SAFETY_NODATA_OK	E_OK	Statemachine is in state <i>No Data</i> , but received data is ok
E_SAFETY_NODATA_REP	E_SAFETY_INVALID_REP	Statemachine is in state <i>No Data</i> , but received data has repeated counter
E_SAFETY_NODATA_SEQ	E_SAFETY_INVALID_SEQ	Statemachine is in state <i>No Data</i> , but received data has wrong sequence counter
E_SAFETY_NODATA_ERR	E_SAFETY_INVALID_CRC	Statemachine is in state <i>No Data</i> , but received data has CRC Error
E_SAFETY_NODATA_NND	NO TRANSLATION	–
E_SAFETY_INIT_OK	E_OK	–
E_SAFETY_INIT_REP	E_SAFETY_INVALID_REP	–
E_SAFETY_INIT_SEQ	E_SAFETY_INVALID_SEQ	–
E_SAFETY_INIT_ERR	E_SAFETY_INVALID_CRC	–
E_SAFETY_INIT_NND	NO TRANSLATION	No data received, thus no translation





E_SAFETY_INVALID_OK	E_OK	Statemachine is in status <i>invalid</i> , but data itself is valid, thus no error replication
E_SAFETY_INVALID_REP	E_SAFETY_INVALID_REP	–
E_SAFETY_INVALID_SEQ	E_SAFETY_INVALID_SEQ	–
E_SAFETY_INVALID_ERR	E_SAFETY_INVALID_CRC	–
E_SAFETY_INVALID_NND	NO TRANSLATION	No data received, thus no translation
E_SAFETY_SOFT_RUNTIMEERROR	NO TRANSLATION	–
E_SAFETY_HARD_RUNTIMEERROR	NO TRANSLATION	–

The behavior of transformer status code forwarding (Error to Forwarding status code mapping)

]([RS\\_SYST\\_00059](#))

### 6.16.5.2 Security

The security aspects are handled in the communication stack of Classic platform. There are two technologies for secure communication available:

- Secure Onboard Communication (SecOC) [35]
- Transport Layer Security (TLS) [36]

Which security technology is used for a translated service instance is up to the communication design. The security settings have to match between the providers and the consumers on the network.

As on Classic platform the translation happens on the application software component level it is possible to have equal, similar, or different security technologies configured on signal and service level (which is part of the COM-Stack configuration).

It is for instance well possible to have signals coming from a CanFD network secured with SecOC and translated into a service which is secured using TLS on Ethernet. But also using SecOC on Ethernet is possible.

In any case, if secure communication is involved together with [signal/service translation](#) the translation needs to break the transport chain and re-secure the payload (e.g. re-calculate the MAC for the newly serialized payload).

The attribute `SignalServiceTranslationEventProps.secureTranslation` is used to explicitly require that both ends of the translation shall be configured in a secure transport way and that the translation software component shall handle the translation activity in a security-preserving way.

**[constr\_3549] Secure payload for both ends in case of `secureTranslation`** [If the `SignalServiceTranslationEventProps.secureTranslation` equals true then both, the signal-based payload as well as the service-oriented payload shall have a secure communication defined.]()



## 7 Data Transformation

### 7.1 Outline

The transmission of data over a communication bus requires some effort to convey the information about the nature of the transmitted data from the sender to the receiver. Both sides need to agree on this part or else the communication will fail.

This aspect is complicated by the fact that in most cases it is uncommon to transmit information in an atomic manner piece by piece. For the sake of properly utilizing the available communication resources, pieces of data that may or may not have any semantic relationship with each other are packed into a single transmission unit.

In this case, the receiver does not only have to be informed about the nature of the individual pieces of information but also about the packing of these pieces into the transmission unit.

There are different approaches of how this goal can be achieved, these are described in the following sub-chapters.

#### 7.1.1 Configuration of the Communication Layout

Use a configurable software package on both the sender and the receiver side that can adapt to virtually any possible packing of data. In this case the packing shall be described in machine-readable form on a very detailed level in order to allow for the communication software to adapt to it.

For the sake of this argument, it doesn't really matter whether the adaption to the configuration is done at run-time or whether the configuration ends up in dedicated source code. The point is that the very detailed machine-readable configuration description is required to exist.

This approach used to be one of the pillars of the AUTOSAR standard as it entitled the players in the business with a maximum amount of flexibility and especially the OEMs are able to develop specific patterns for the design of their communication matrices that can, despite the diversity, be expressed with this approach.

This approach also facilitates the monitoring of transmission during development and deployment of the automotive software because monitoring tools can use the same configuration information to set themselves up for the task. This aspect is very important for debugging and quality assurance.

The downside, however, is that the act of laying out pieces of information in a limited number of transmission units becomes cumbersome and time-consuming. This effect becomes even more prominent with the advent of more advanced communication technologies that allow for a much bigger payload in single transmission units.



### 7.1.2 Data Transformation by Software

Don't care about the individual layout of information on the bus and let a piece of software take care of marshaling data onto the communication bus on the sender side and the reverse process on the receiver side.

This approach gains attractiveness in an environment where large and complicated pieces of information need to be transmitted.

Of course, in order to make this approach work it is necessary to standardize the behavior of the marshaling software to the necessary extent such that sender and receiver agree on how data needs to be processed.

With this approach, the amount of configuration can be reduced dramatically at the potential expense of efficiency and code size.

But this is not the end of the story as the idea of letting software take care of data "manipulation" can **following pretty much the same pattern** be utilized for further use cases:

**End-to-end Protection** Data is wrapped into a harness of meta-data that allows for checking data integrity at the receiver side.

**Data Security** Data is cryptographically processed such that it shall become impossible for unauthorized parties to intercept the communication process.

In other words, the approach is not limited to marshaling of data but can in the same way also be used for an array of other useful data transformations. This is why the terminology in this regard is not limited to the marshaling but to data transformation in general, hence the term **Data Transformer** is coined.

`Data Transformers` can be chained such that, on the sender side, one `Data Transformer` picks up the result of the transformation of another `Data Transformer` and applies a specific transformation to the already processed data.

The receiver then is required to apply the `Data Transformers` in reverse order in order to finally yield the actual data and provide it to the consumer (e.g. an [ApplicationSwComponentType](#)).

A basic principle of the `Data Transformer` approach, however, is that the `Data Transformer` is only responsible for the actual data transformation but **not** concerned about the communication of data. This can be taken care of by other software modules.

In total, the second approach provides a sufficient level of utility that it becomes part of the AUTOSAR standard. This chapter lays out the details of how `Data Transformers` can be used in the context of this document.


Further information can also be found in the SWS RTE [37].

## 7.2 Use Cases

This chapter describes Transformer use cases that are supported by AUTOSAR.

### 7.2.1 Transmission of large composite data types over networks with large PDUs (e.g Ethernet)

With a serializing transformer, it is not necessary any more to map the atomic sub-elements of composite data types to individual signals in the RTE. The sending application SWC sends the composite data element using Sender/Receiver communication and hands the data over to the RTE. Then the complex data get transformed to a linear byte array and handed over to Com which sends the data to the receiving ECU. There, the Com stack receives the serialized data and notifies the RTE. The Rte reads the data and calls the deserializing transformer. The deserializing transformer transforms them back into the composite data element and gives the result to the RTE. The receiving SWC can now read the data and access it in the same form the sending SWC has sent them.

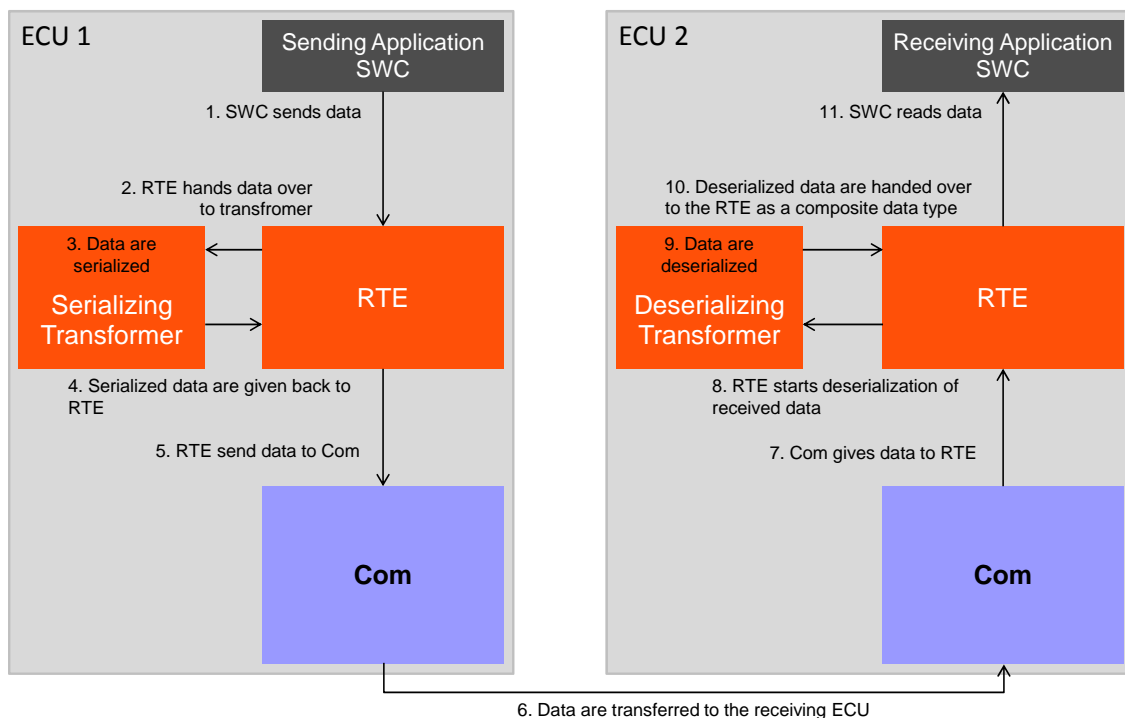

**Figure 7.1: Transformer Use Case: Transmission of large composite data types over networks with large PDUs (e.g Ethernet)**

### 7.2.2 Support of transmission from one sender to multiple receivers with Signal Fan-out

If a signal fan-out is configured in the System Description, the RTE has to hand over the data which should be transmitted multiple times to the Com stack. This is the case if multiple *ISignals* reference the same *SystemSignal* in the System Description.

For each *ISignal* the following steps have to be performed individually:

- transform the data
- hand it over to COM

Every receiver has to deserialize the *ISignal* in its transformer independently.

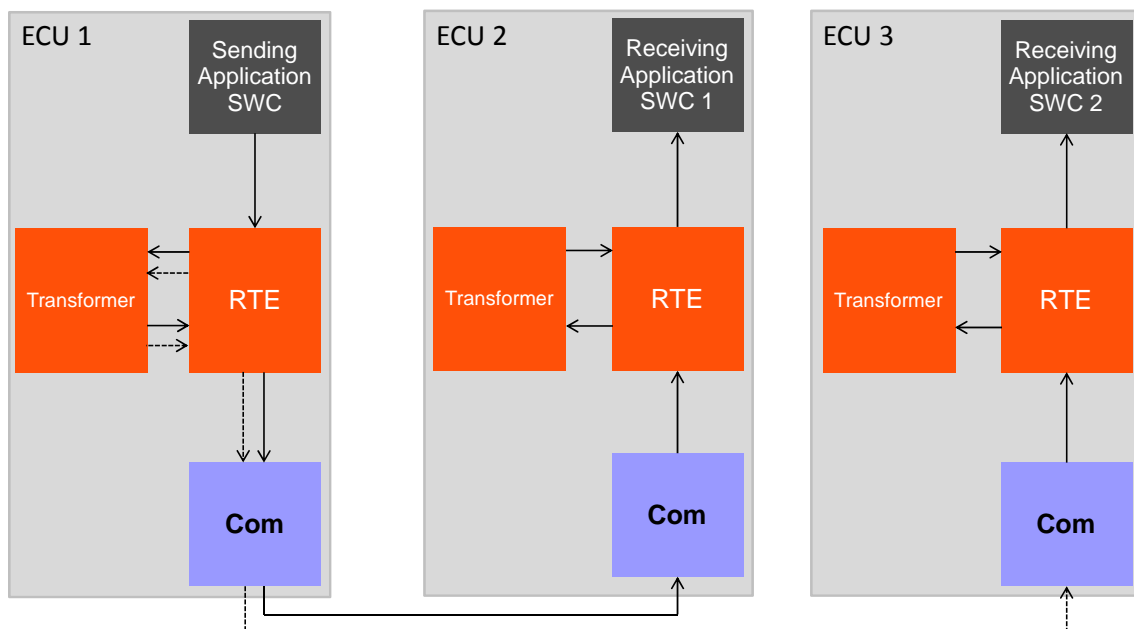


Figure 7.2: Transformer Use Case: RTE Fanout

### 7.2.3 Support of transmission from one sender to multiple receivers with PDU Fan-out

The transformation of inter-ECU Sender/Receiver communication should also work together with configurations that include *Pdu* fan-outs inside the COM stack (*PduR* fan-out). This is the case if multiple *PduTriggerings* reference the same *Pdu* in the System Description. In that scenario the data are sent by the sending application SWC to the RTE and transformed by the data transformer which is called by the RTE. Then the RTE hands the data over the Com. This happens only once. Due to the *Pdu* fan-out, the *PduR* sends the data multiple times to the Bus Interfaces using different *Pdus*.


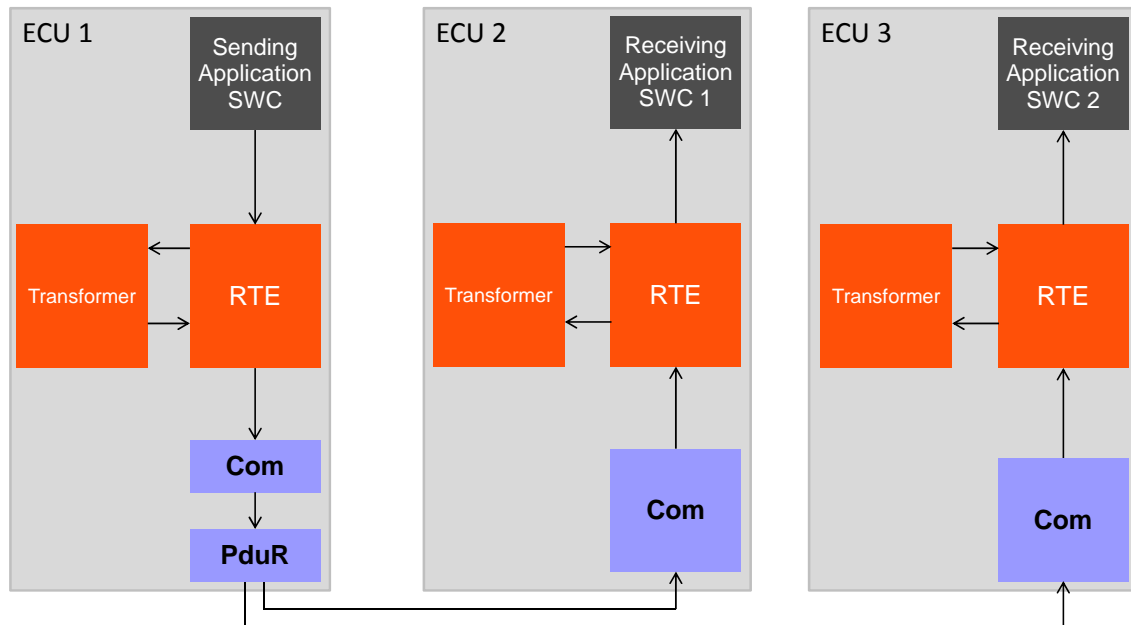


Figure 7.3: Transformer Use Case: PduR Fanout

## 7.2.4 Transformer Chaining

It is possible to chain multiple transformers. The output of one transformer then will be the input of the next transformer in the chain. Transformer for serialization data, for encrypting, digitally signing or compressing data can be implemented and used together. Such architecture could be used to assemble a system, where you can flexibly add functionality like compression or encryption to a serialized stream. In AUTOSAR the E2E-protection is implemented by an additional serializer which is appended to the chain.

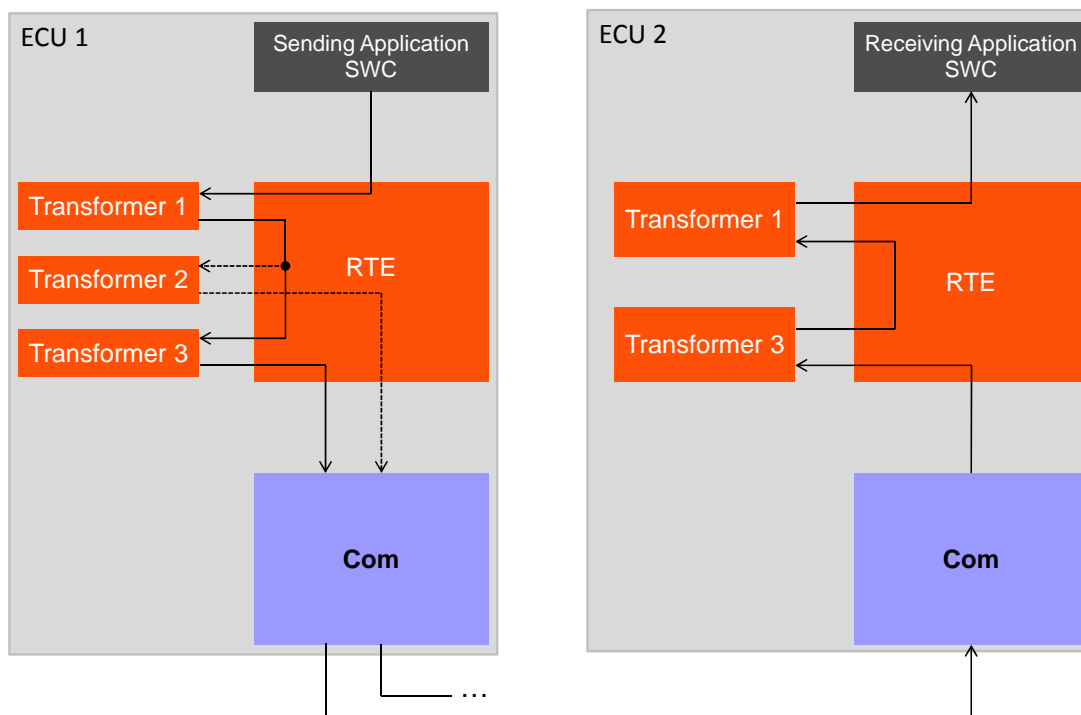

**Figure 7.4: Transformer Use Case: Transformer Chain**

### 7.2.5 Signal Group Based interaction of the transformer with the Com module

An initial transformer (serializer) performs the serialization according to the `ISignalToIPduMapping` from the system description. For each application data element the corresponding mapping to an `ISignalIPdu` position is respected. After the transformation chain is processed the serialized data is provided to the Com module. The Com module can have a signal based transmission mode selection defined and determines the respective transmission mode to be applied.

## 7.3 Transformer configuration

As a transformer provides well defined function signatures per each communication relation (`ISignal` based), which is marked for transformation, the function signature is NOT dependent from the transformation technology used, but only from the transmitted data elements (Client/Server operation signature or Sender/Receiver interface signature). The output of a transformer will be always a linear byte array.

Configuration of data transformation consists of three parts:

1. definition of the transformer chains with their transformers
2. configuration which communication is subject to transformation

3. configuration of the transformer properties for the transformed communication

The configuration of single transformers and whole transformer chains is shown in figure 7.5.

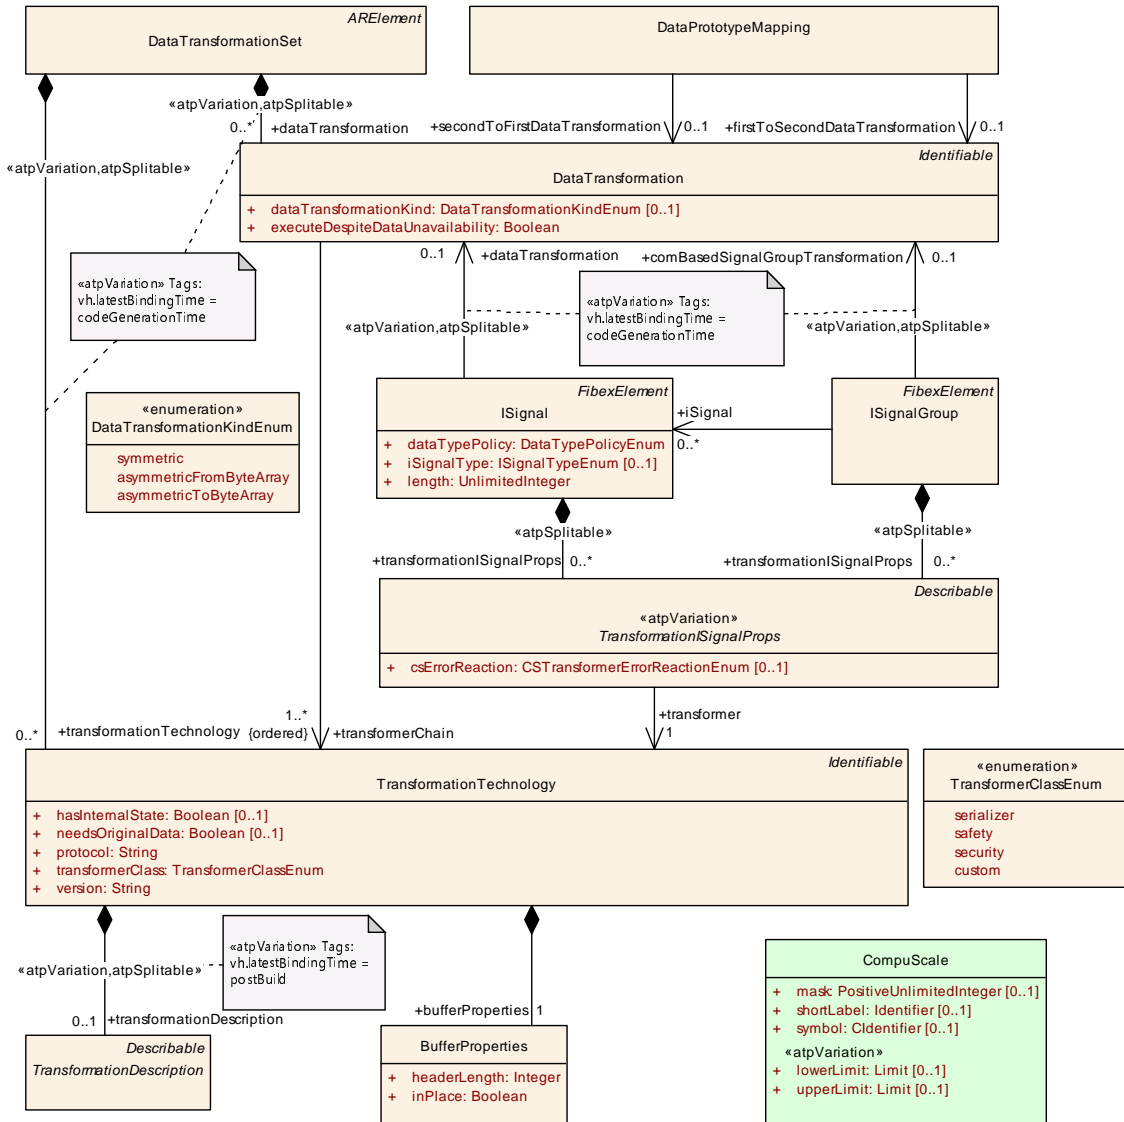


Figure 7.5: Configuration of transformers and transformer chains

The `DataTransformationSet` acts as a central container for the configuration of data transformation.

<b>Class</b>	<b>DataTransformationSet</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer
<b>Note</b>	This element is the system wide container of DataTransformations which represent transformer chains. <b>Tags:</b> atp.recommendedPackage=DataTransformationSets
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>





Class	DataTransformationSet			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
data Transformation	DataTransformation	*	aggr	This container consists of all transformer chains which can be used for transformation of data communication. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=dataTransformation.shortName, dataTransformation.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime
transformation Technology	Transformation Technology	*	aggr	Transformer that is used in a transformer chain for transformation of data communication. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=transformationTechnology.shortName, transformationTechnology.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime

**Table 7.1: DataTransformationSet**

Class	DataTransformation			
Package	M2::AUTOSARTemplates::SystemTemplate::Transformer			
Note	A DataTransformation represents a transformer chain. It is an ordered list of transformers.			
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Aggregated by	DataTransformationSet.dataTransformation			
Attribute	Type	Mult.	Kind	Note
data Transformation Kind	DataTransformationKind Enum	0..1	attr	This attribute controls the kind of DataTransformation to be applied.
executeDespite Data Unavailability	Boolean	1	attr	Specifies whether the transformer chain is executed even if no input data are available.
transformer Chain (ordered)	Transformation Technology	1..*	ref	This attribute represents the definition of a chain of transformers that are supposed to be executed according to the order of being referenced from DataTransformation.

**Table 7.2: DataTransformation**

**[TPS\_SYST\_02030] The DataTransformationSet contains all transformer chains** [The DataTransformationSet contains transformer chains represented by DataTransformation elements.] (RS\_SYST\_00050)

For each transformer chain it can be decided via the attribute `executeDespiteDataUnavailability` whether the RTE should try to execute the transformers of the transformer chain, even when no data are available as input. e.g. the queue is empty or there was an error in the COM stack. This is needed when no data are available but a transformer has to be executed anyway because it maintains an internal state which has to be updated to consider that data was expected but not available. This might be used in transformers which maintain an internal state. Of course the specifications and implementations of all transformers in the chain have to be able to cope with execution without valid input data.

**[constr\_3208] executeDespiteDataUnavailability usage restriction** [In the set of more than one `ISignal` which reference the same `SystemSignal` in the role `systemSignal`, there shall be no `ISignal` which references a `DataTransformation` where `executeDespiteDataUnavailability` is set to true.]()

In other words: There shall be no transformer chain which "belong" to the same `SystemSignal` due to signal fan-in where the attribute `executeDespiteDataUnavailability` is set to true.

**[TPS\_SYST\_02031] A transformer is represented by a TransformationTechnology** [A transformer is represented by a `TransformationTechnology`.](*RS\_SYST\_00050*)

<b>Class</b>	<b>TransformationTechnology</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	A TransformationTechnology is a transformer inside a transformer chain. <b>Tags:</b> xml.namePlural=TRANSFORMATION-TECHNOLOGIES			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<code>DataTransformationSet.transformationTechnology</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
bufferProperties	<code>BufferProperties</code>	1	aggr	Aggregation of the mandatory BufferProperties.
hasInternalState	Boolean	0..1	attr	This attribute defines whether the Transformer has an internal state or not.
needsOriginalData	Boolean	0..1	attr	Specifies whether this transformer gets access to the SWC's original data.
protocol	<code>String</code>	1	attr	Specifies the protocol that is implemented by this transformer.
transformationDescription	<code>TransformationDescription</code>	0..1	aggr	A transformer can be configured with transformer specific parameters which are represented by the Transformer Description. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=transformationDescription, transformationDescription.variationPoint.shortLabel vh.latestBindingTime=postBuild
transformerClass	<code>TransformerClassEnum</code>	1	attr	Specifies to which transformer class this transformer belongs.
version	<code>String</code>	1	attr	Version of the implemented protocol.

**Table 7.3: TransformationTechnology**

<b>Enumeration</b>	<b>TransformerClassEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer
<b>Note</b>	Specifies the transformer class of a transformer.
<b>Aggregated by</b>	<code>TransformationTechnology.transformerClass</code>
<b>Literal</b>	<b>Description</b>
custom	The transformer is a custom transformer. <b>Tags:</b> atp.EnumerationLiteralIndex=0







Enumeration	TransformerClassEnum
safety	The transformer is a safety transformer. <b>Tags:</b> atp.EnumerationLiteralIndex=1
security	The transformer is a security transformer. <b>Tags:</b> atp.EnumerationLiteralIndex=2
serializer	The transformer is a serializing transformer. <b>Tags:</b> atp.EnumerationLiteralIndex=3

**Table 7.4: TransformerClassEnum**

**[constr\_3265] TransformationTechnology.hasInternalState setting for an E2E transformer** [The value of `hasInternalState` shall be set to true for a `TransformationTechnology` with `transformerClass` set to `safety`.]()

**[constr\_3266] TransformationTechnology.hasInternalState setting for a SOME/IP Transformer** [The value of `hasInternalState` shall be set to true for a SOME/IP Transformer if `SOMEIPTransformationISignalProps.sessionHandlingSR` for the `ISignal` is set to active.]()

**[TPS\_SYST\_02032] Transformer chains are ordered list of transformers** [A transformer chain consists of an ordered list of `TransformationTechnologies` (transformers).](*RS\_SYST\_00050*)

**[constr\_3121] The length of transformer chains is limited to 255 transformers** [The maximum number of `DataTransformation.transformerChain` references in the context of one `DataTransformation` shall be limited to 255.]()

**[constr\_3122] At most one transformer of each transformer class inside a transformer chain** [If the value of a `transformerClass` of a `TransformationTechnology` referenced by a `DataTransformation` does not equal `custom`, it shall be different from all other `transformerClass` values of `TransformationTechnologies` referenced by the same `DataTransformation`.]()

Only for `custom` transformers it is possible to specify more than one transformer of the same class in the same transformer chain. For all other transformer classes, at most one transformer of a transformer class is allowed to exist in the same transformer chain.

**[constr\_3123] Serializer transformer shall be the first in a chain** [A serializer transformer (`TransformationTechnology` with attribute `transformerClass` set to `serializer`) shall be the first transformer in a transformer chain.]()

**[TPS\_SYST\_02033] Order of the transformerChain references in the configuration represents the order on the sending side** [The order of `DataTransformation.transformerChain` references in the context of one `DataTransformation` represents the transformation order on the sending side.](*RS\_SYST\_00050*)

**[TPS\_SYST\_02034] Order of the transformers on the receiving side is the reverse of the sending side** [The order of the transformers on the receiving side of the data shall be the inverse order of the order of the sending side.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02035] `protocol` contains the human readable protocol identifier** [The attribute `protocol` of a `TransformationTechnology` contains the protocol name as a String which this transformer implements.] (*RS\_SYST\_00050*) This attribute is used to distinguish transformers in a human readable way.

**[TPS\_SYST\_02036] `version` contains the version of the `protocol`** [The attribute `version` of a `TransformationTechnology` contains the version of the protocol as a String implemented by this transformer.] (*RS\_SYST\_00050*) This attribute is used to distinguish transformers.

**[TPS\_SYST\_02037] The attribute `needsOriginalData` configures a transformer's access to the original data** [The attribute `needsOriginalData` of a `TransformationTechnology` specifies whether transformer needs access to the original data.] (*RS\_SYST\_00050*)

If it is set to true, the transformer will gain access to the original data. If it is set to false, the transformer will not gain access to the original data.

**[constr\_3124] Applicability of `needsOriginalData`** [The attribute `needsOriginalData` of a `TransformationTechnology` shall only be used for the non-first transformers in the transformer chain.] ()

This will only influence the signatures of the transformer on the sender or client side, not on the receiver or server side of a communication.

**[TPS\_SYST\_02038] Specification of transformer class** [The transformer class to which this transformer belongs to is specified in the attribute `transformerClass` of a `TransformationTechnology`] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02039] Specification of transformer specific properties** [Further transformer specific properties can be stated inside the `TransformationDescription` in the role `transformationDescription` of a `TransformationTechnology`] (*RS\_SYST\_00050*)

Note:

This is an abstract class without any specified content. If AUTOSAR specifies a transformer and this transformer need configuration possibilities, this class can be inherited to hold those as some kind of container.

**[TPS\_SYST\_02040] Specification of transformer buffer handling** [The `BufferProperties` in the role `bufferProperties` of a `TransformationTechnology` specify the buffer handling which shall be executed by the RTE for this transformer.] (*RS\_SYST\_00050*)

<b>Class</b>	<b>BufferProperties</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	Configuration of the buffer properties the transformer needs to work.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">TransformationTechnology.bufferProperties</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
headerLength	Integer	1	attr	Defines the length of the header (in bits) this transformer will add in front of the data.
inPlace	Boolean	1	attr	If set, the transformer uses the input buffer as output buffer.

**Table 7.5: BufferProperties**

**[TPS\_SYST\_02041] In-place buffer handling of transformers** [The attribute `inPlace` of `BufferProperties` specifies whether the transformation happens in-place.] ([RS\\_SYST\\_00050](#))

**[constr\_3125] Value of attribute `inPlace` for the first transformer in a chain** [The attribute `inPlace` shall be set to `false` if the `TransformationTechnology` of the `BufferProperties` is referenced as first reference in the ordered list of references `transformerChain` from a `DataTransformation`.] ()

**[TPS\_SYST\_02042] Header length to be considered by transformers** [The attribute `headerLength` of `BufferProperties` specifies the length of the header (in bits) which the transformer adds.] ([RS\\_SYST\\_00050](#))

**[constr\_3364] `headerLength` shall be a multiple of 8** [The header length in bits specified by `headerLength` shall be a multiple of 8.] ()

**[TPS\_SYST\_02044] Buffer computation of transformer** [The buffer in the RTE that is needed:

- for the SOME/IP transformation will be calculated from the `length` of the `ISignal` that is referencing a transformer chain that includes the SOME/IP Transformer.
- for the ComBased transformation will be calculated from the `length` of the `Pdu` that contains the `ISignalGroup` that is referencing a transformer chain that includes the ComBased Transformer.

] ([RS\\_SYST\\_00050](#))

More details can be found in the RTE specification [37]. Please note that the buffer computation for custom transformers is not formalized.

The following examples are showing the calculation of the `length` of an `ISignal` that transports a `VariableDataPrototype` of `ImplementationDataType` of category STRUCTURE via a SOME/IP Transformer.

The example struct consists of five members:

**Member1:** UINT16

**Member2:** Struct with a UINT16 length field and a one-dimensional variableSize Array with UINT8 elements and arraySize = 8

**Member3:** UINT32


**Member4:** UINT64

**Member5:** Struct with a UINT16 length field and a one-dimensional variableSize Array with UINT8 elements and arraySize = 8

The SOME/IP Transformer takes the InputData and adds additional 8 bytes as header. In case of SOME/IP the signal based `SOMEIPTransformationISignalProps` and the `DataPrototype` based `SOMEIPTransformationProps` need to be considered as well for the calculation of the `ISignal.length` (see chapter 7.3.2.1 for more details). In our example the following `SOMEIPTransformationProps` settings are valid for the variableSize Array:


- `SOMEIPTransformationProps.alignment = 64`

All these settings lead to the `ISignal.length` of 368 bits as shown in figure Figure 7.6. A padding element is inserted after the first variable size array as described in [PRS\_SOMEIP\_00611]. The second variable size array is the last element in the serialized data stream and therefore no padding element is inserted afterwards. The automatic padding in SOME/IP after variable size data is described in more detail in [19].

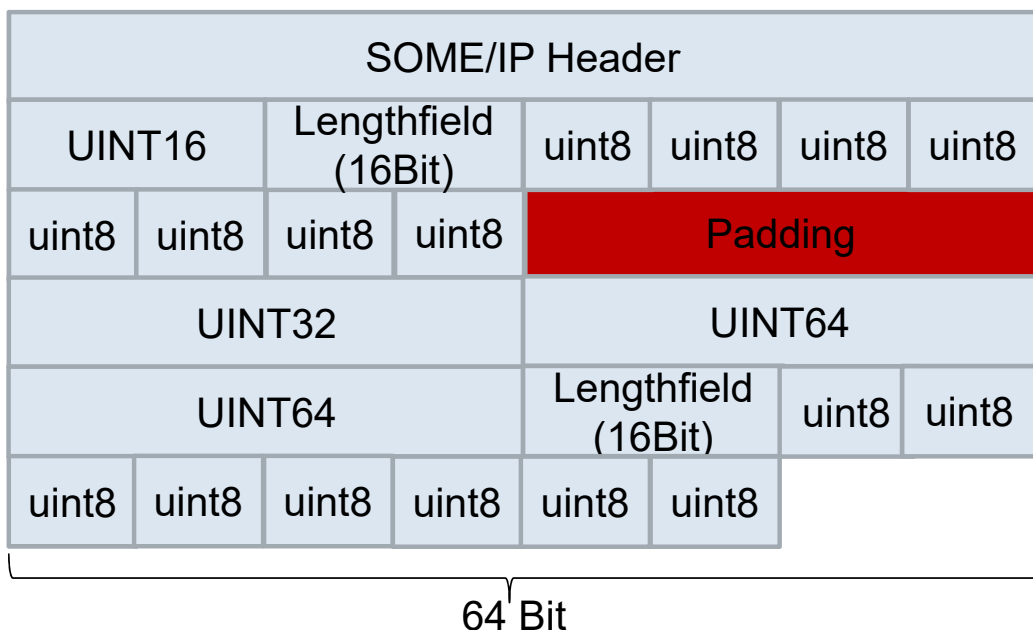

**Figure 7.6:** Example for calculation of the `ISignal.length`

Please note that the padding in the SOME/IP data stream depends on the actual number of elements that are transmitted in the variable data. Figure Figure 7.7 shows an example where only three elements are transmitted in the first variable size array and therefore the padding is restricted to 1 byte.

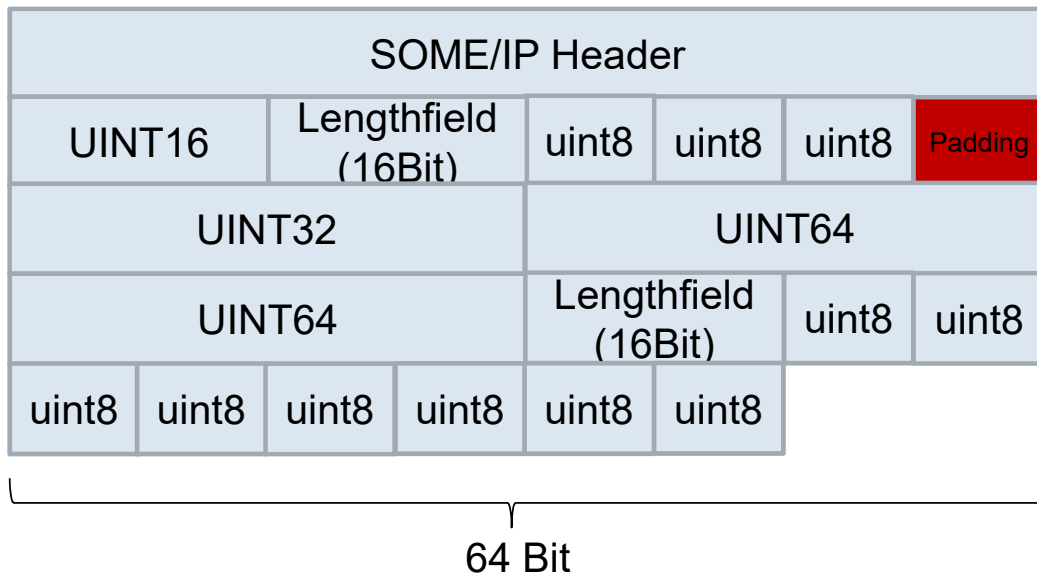

**Figure 7.7: SOME/IP Padding Example**

Transformer specific configuration can be done in the [TransformationDescription](#).

**[constr\_5231]** Allowed values for [SOMEIPTransformationProps.alignment](#) and [SOMEIPTransformationDescription.alignment](#) [The valid values for [SOMEIPTransformationProps.alignment](#) and [SOMEIPTransformationDescription.alignment](#) shall be 8, 16, 32, 64, 128 or 256.]()

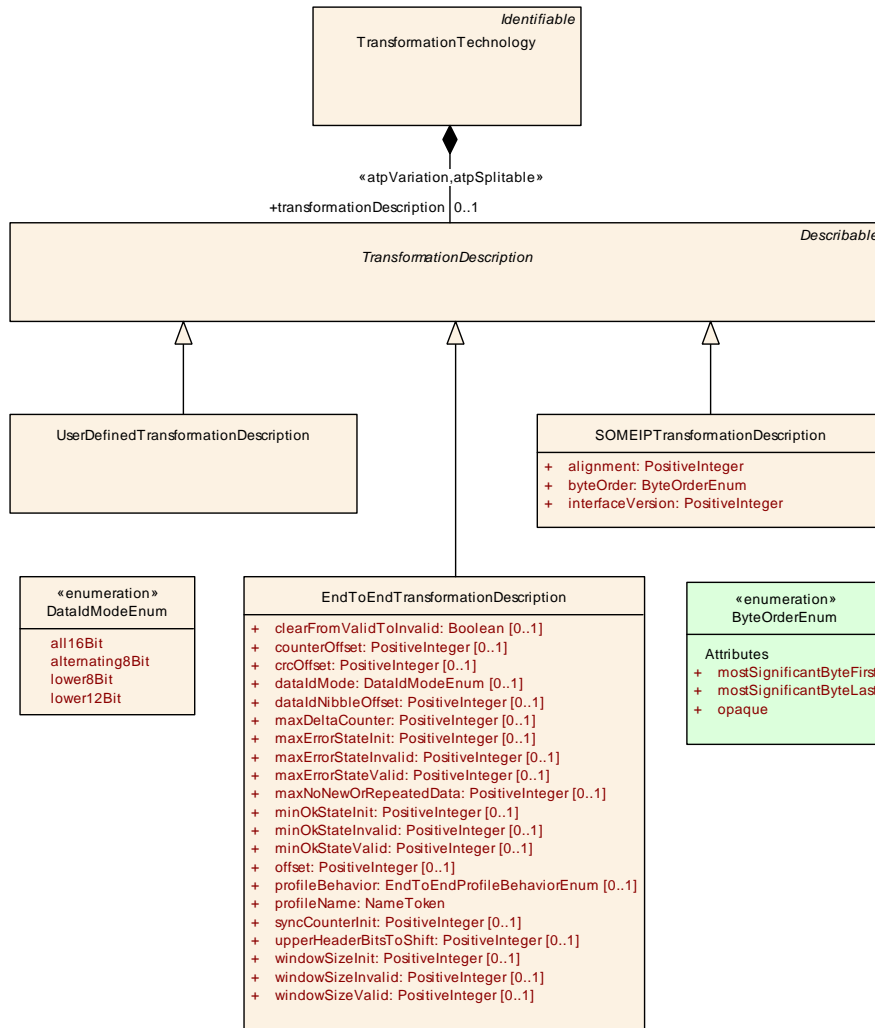


Figure 7.8: Configuration of transformers using TransformationDescription

<b>Class</b>	<i>TransformationDescription</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	The TransformationDescription is the abstract class that can be used by specific transformers to add transformer specific properties.			
<b>Base</b>	ARObject, Describable			
<b>Subclasses</b>	EndToEndTransformationDescription, SOMEIPTTransformationDescription, UserDefinedTransformationDescription			
<b>Aggregated by</b>	TransformationTechnology.transformationDescription			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

Table 7.6: TransformationDescription

<b>Class</b>	<b>UserDefinedTransformationDescription</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	The UserDefinedTransformationDescription is used to specify details and documentation for custom transformers.			
<b>Base</b>	ARObject, Describable, TransformationDescription			
<b>Aggregated by</b>	TransformationTechnology.transformationDescription			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 7.7: UserDefinedTransformationDescription**

**[TPS\_SYST\_02045] SOME/IP Transformer configuration** [SOME/IP Transformer shall be configured using [SOMEIPTransformationDescription.](#)]([RS\\_SYST\\_00050](#))

**[TPS\_SYST\_02046] E2E Transformer configuration** [E2E Transformer shall be configured using [EndToEndTransformationDescription.](#)]([RS\\_SYST\\_00050](#))

For details how to configure those transformers please see chapter [7.3.2](#) and chapter [7.3.4](#).

**[TPS\_SYST\_02047] Custom transformer configuration** [For custom transformers the specific configuration options shall be placed inside [UserDefinedTransformationDescription.](#)]([RS\\_SYST\\_00050](#))

To place the custom data in [UserDefinedTransformationDescription](#) the [AdminData](#) could be used for example.

The configuration in [TransformationDescription](#) is valid for the transformer ([TransformationTechnology](#)) and all associated [ISignals](#). If [ISignal](#) specific configuration shall be realized which is only valid for the transformation of a specific [ISignal](#), the [TransformationISignalProps](#) shall be used.

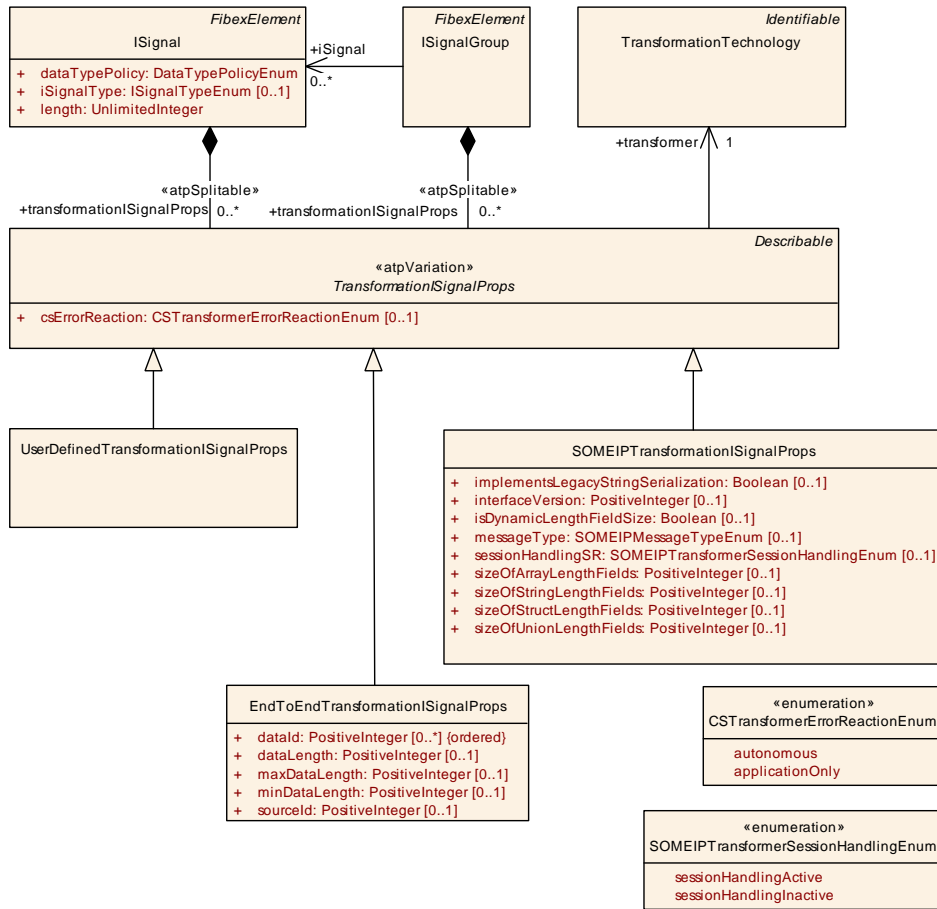


Figure 7.9: Configuration of transformers using TransformationISignalProps

<b>Class</b>	<<atpVariation>> TransformationISignalProps (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	TransformationISignalProps holds all the attributes for the different TransformationTechnologies that are ISignal specific. <b>Tags:</b> vh.latestBindingTime=postBuild			
<b>Base</b>	ARObject, Describable			
<b>Subclasses</b>	EndToEndTransformationISignalProps, SOMEIPTransformationISignalProps, UserDefinedTransformationISignalProps			
<b>Aggregated by</b>	ISignal.transformationISignalProps, ISignalGroup.transformationISignalProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
csErrorReaction	CSTransformerErrorReactionEnum	0..1	attr	Defines whether the transformer chain of client/server communication coordinates an autonomous error reaction together with the RTE or whether any error reaction is the responsibility of the application.
dataPrototypeTransformationProps	DataPrototypeTransformationProps	*	aggr	Fine granular modeling of TransformationProps on the level of DataPrototypes.
transformer	TransformationTechnology	1	ref	Reference to the TransformationTechnology description that contains transformer specific and ISignal independent configuration properties.

Table 7.8: TransformationISignalProps



<b>Enumeration</b>	<b>CSTransformerErrorReactionEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer
<b>Note</b>	Possible kinds of error reaction in case of a hard transformer error.
<b>Aggregated by</b>	<a href="#">TransformationISignalProps.csErrorReaction</a>
<b>Literal</b>	<b>Description</b>
applicationOnly	The application is responsible for any error reaction. No autonomous error reaction of RTE and transformer. <b>Tags:</b> atp.EnumerationLiteralIndex=0
autonomous	RTE and Transformer coordinate an autonomous error reaction on their own. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 7.9: CSTransformerErrorReactionEnum**

**[TPS\_SYST\_02048] ISignal specific transformation configuration** [If an [ISignal](#) references a [TransformationTechnology](#) in the role `dataTransformation` and this transformation shall be configured [ISignal](#) specific, the [ISignal](#) shall aggregate a [TransformationISignalProps](#) element.] ([RS\\_SYST\\_00050](#))

**[TPS\_SYST\_02049] Transformer specific TransformationISignalProps** [The attribute `transformer` of [TransformationISignalProps](#) shall reference the [TransformationTechnology](#) in the transformer chain (`DataTransformation`) for which the [ISignal](#) specific configuration shall be given.] ([RS\\_SYST\\_00050](#))

**[constr\_3213] TransformationISignalProps.csErrorReaction setting in case that the serializer transformerClass and Client/Server communication is used** [In [TransformationISignalProps](#) the attribute `csErrorReaction` shall be set if the [TransformationISignalProps](#) specifies the details for a [TransformationTechnology](#) with `transformerClass` equal to `serializer` and the [ISignal](#) that aggregates the [TransformationISignalProps](#) transports a client/server communication.] ()

**[constr\_3214] TransformationISignalProps.csErrorReaction setting in case that a transformerClass different from serializer is used or the Client/Server communication is not used** [In [TransformationISignalProps](#) the attribute `csErrorReaction` shall not be used if the [TransformationISignalProps](#) specifies the details for a [TransformationTechnology](#) with `transformerClass` not equal to `serializer` or the [ISignal](#) that aggregates the [TransformationISignalProps](#) does not transport a client/server communication.] ()

**[TPS\_SYST\_02074] Precedence of transformer configuration settings** [The same transformer configuration settings may exist in the [TransformationDescription](#), [TransformationISignalProps](#) and [TransformationComSpecProps](#) elements. The following precedence is valid for such settings:

- [TransformationDescription](#): configuration valid for several [ISignals](#) (in case the SOME/IP Transformer or Custom Transformer is used) or [ISignalGroups](#) (in case the ComBasedTransformer is used).

- `TransformationISignalProps`: defines the configuration options valid for a specific referenced `ISignal` or `ISignalGroup`. This settings override possible settings in the `TransformationDescription`.
- `TransformationComSpecProps`: defines the configuration settings valid for the port to which the `ReceiverComSpec` belongs (for more details see [5]). This settings override possible settings in the `TransformationDescription` and `TransformationISignalProps`.

]([RS\\_SYST\\_00050](#))

#### [TPS\_SYST\_02075] Mandatory attributes in transformer configuration elements

[If a transformer configuration attribute is mandatory due to a particular constraint it means that it shall be defined in at least one of the three possible locations: `TransformationDescription`, `TransformationISignalProps` or `TransformationComSpecProps`.]([RS\\_SYST\\_00050](#))

Please note that it is not required to define the complete attribute set on each of those locations. It means that it is allowed to overwrite single attributes in elements according to the precedence defined in [TPS\_SYST\_02074].

#### [TPS\_SYST\_02050] `ISignal` specific configuration of the SOME/IP Transformer

[The `ISignal` specific configuration of the SOME/IP Transformer shall be configured using `SOMEIPTransformationISignalProps`.]([RS\\_SYST\\_00050](#))

#### [TPS\_SYST\_02051] `ISignal` specific configuration of the E2E Transformer

[The `ISignal` specific configuration of the E2E Transformer shall be configured using `EndToEndTransformationISignalProps`.]([RS\\_SYST\\_00050](#))


For details how to configure those transformers `ISignal` specific please see chapter 7.3.2 and chapter 7.3.4.

#### [TPS\_SYST\_02052] `ISignal` specific configuration of custom transformers

[The `ISignal` specific configuration of custom transformers shall be configured using `UserDefinedTransformationISignalProps`.]([RS\\_SYST\\_00050](#))

To place the custom data in `UserDefinedTransformationDescription` the `AdminData` could be used for example.

To configure which communication shall be subject to transformation is done via references from `ISignals` and `ISignalGroups` to `DataTransformations`. An overview is shown in figure 7.10.

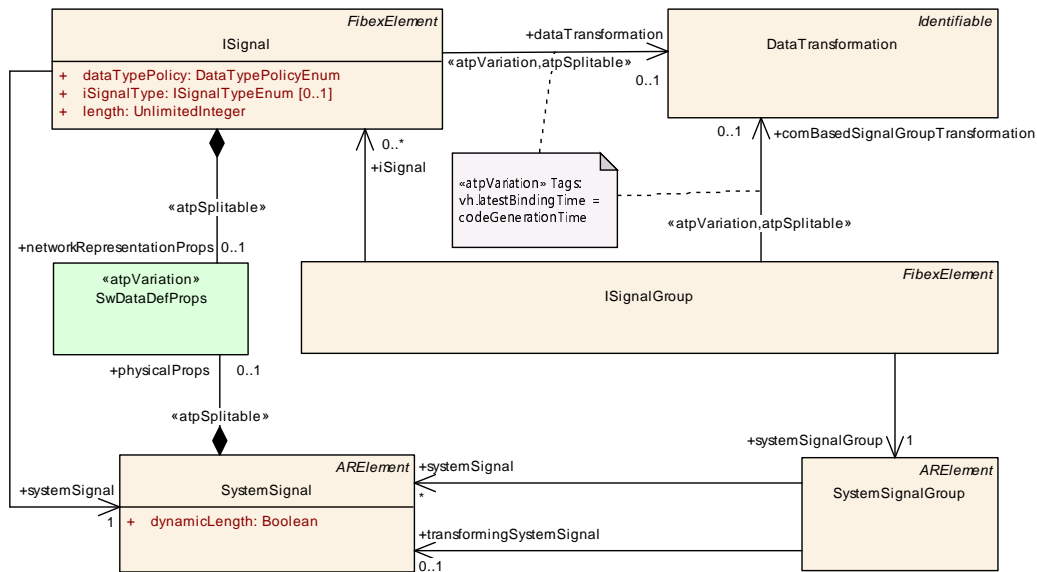

**Figure 7.10: Configuration which communication shall be transformed**

The `DataTransformation` element (which represents a transformer chain) is

- either referenced by the `ISignal` in the role `dataTransformation` which holds the transformed representation of the data
- referenced by the `ISignalGroup` in the role `comBasedSignalGroupTransformation` which holds the custom mapping of the data to the transformed representation or
- referenced by a `DataPrototypeMapping` in the role `firstToSecondDataTransformation`,

as defined in [constr\_1400] in [5].

A `VariableDataPrototype` can either become a part of a `DataPrototypeMapping` based data transformation or of an `ISignal`-based data transformation as defined in [constr\_1401] in [5].

**[constr\_1387] Transmission of Variable-Size Array Data Types by means of a Transformer** [If a Transformer is used for the transmission of a Variable-Size Array Data Types then the Variable-Size Array Data Type shall be a “new-world” variable-size array data type according to [TPS\_SWCT\_01644] and [TPS\_SWCT\_01645]. “Old-world” dynamic-size array data types according to [TPS\_SWCT\_01641] and [TPS\_SWCT\_01642] are not supported.]()

### 7.3.1 Generic Transformer

**[TPS\_SYST\_02053] A reference from `ISignal` to `DataTransformation` in the role `dataTransformation` enables data transformation** [To enable the transformation of data, the `ISignal` which shall hold the transformed data shall reference a `DataTransformation` in the role `dataTransformation`.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02054] Definition of data which shall be transformed** [If

1. an `ISignal` references a `DataTransformation` and
2. this `ISignal` references a `SystemSignal` and
3. the referenced `SystemSignal` is referenced by a `SenderReceiverToSignalMapping` in the role `systemSignal` or referenced by a `ClientServerToSignalMapping` in the role `returnSignal` and in the role `callSignal`

then the `VariableDataPrototype` referenced by the `SenderReceiverToSignalMapping` or the `ClientServerOperation` referenced by the `ClientServerToSignalMapping` shall be transformed.] (*RS\_SYST\_00050*)

Using this configuration the result of the transformation will be put into the `ISignal` even if the data type is a composite type.

Furthermore, another `SystemSignal` can be added to a `SystemSignalGroup` in the role `transformingSystemSignal` to support the configuration where a complex data element is transferred via Sender/Receiver communication both using transformation and traditional mapping of RTE and COM.

The `ISignal` which references the `SystemSignal` which is referenced by a `SystemSignalGroup` in the role `transformingSystemSignal` shall reference a `DataTransformation` to transport the transformed data.

In parallel, the traditional mapping of RTE and COM maps all other `SystemSignals` of the `SystemSignalGroup` which are referenced in the role `systemSignal`.

**[constr\_3127] Certain `ISignals` always need a reference to `DataTransformation`** [An `ISignal` which references a `SystemSignal` which is referenced by a `SystemSignalGroup` in the role `transformingSystemSignal` shall always reference a `DataTransformation`.] ()

### 7.3.2 SOME/IP Transformer

The specific configuration for SOME/IP transformers takes place in `SOMEIPTransformationDescription` and `SOMEIPTransformationISignalProps` shown in Figure 7.11.

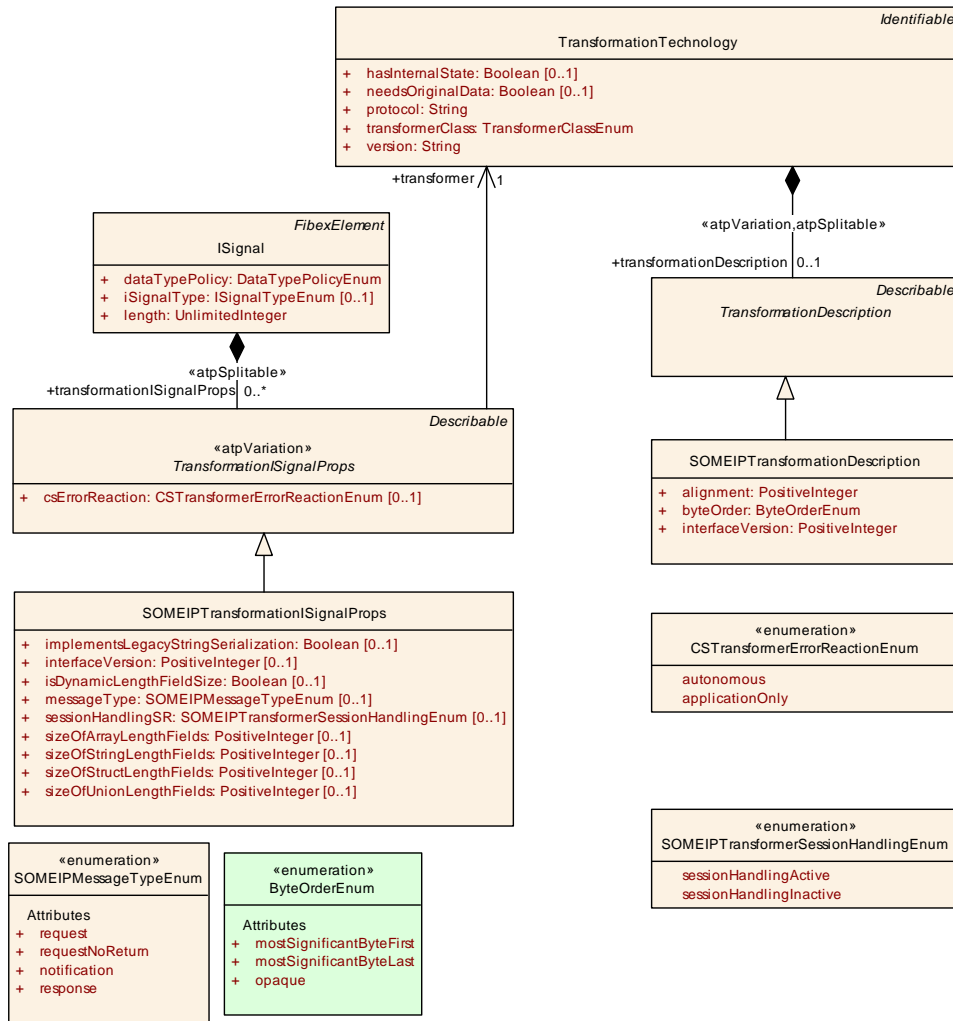


Figure 7.11: SOME/IP specific configuration

<b>Class</b>	<b>SOMEIPTransformationDescription</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	The SOMEIPTransformationDescription is used to specify SOME/IP transformer specific attributes.			
<b>Base</b>	ARObject, Describable, TransformationDescription			
<b>Aggregated by</b>	TransformationTechnology.transformationDescription			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
alignment	PositiveInteger	1	attr	Defines the padding for alignment purposes that will be added by the SOME/IP transformer after the serialized data of the variable data length data element. The alignment shall be specified in Bits.
byteOrder	ByteOrderEnum	1	attr	Defines which byte order shall be serialized by the SOME/IP transformer
interfaceVersion	PositiveInteger	1	attr	The interface version the SOME/IP transformer shall use.

Table 7.10: SOMEIPTransformationDescription

<b>Class</b>	<<atpVariation>> <b>SOMEIPTransformationISignalProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	The class SOMEIPTransformationISignalProps specifies ISignal specific configuration properties for SOME/IP transformer attributes.			
<b>Base</b>	<i>ARObject</i> , <i>Describable</i> , <i>TransformationISignalProps</i>			
<b>Aggregated by</b>	<i>ISignal.transformationISignalProps</i> , <i>ISignalGroup.transformationISignalProps</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
implements LegacyString Serialization	Boolean	0..1	attr	<p>This attribute indicates that Strings in the SOME/IP message shall NOT be serialized according to the SOME/IP specification for Strings.</p> <p>If this attribute is set to true, BOM and null-termination shall NOT be added in the serialization for Strings in the payload. If this attribute is set to false (or not set) BOM and null-termination shall be added in the serialization for Strings in the payload according to the SOME/IP specification for Strings.</p> <p>NOTE! This attribute is not future safe, and will be removed in an upcoming AUTOSAR release!"</p> <p><b>Tags:</b>atp.Status=obsolete</p>
interfaceVersion	PositiveInteger	0..1	attr	The interface version the SOME/IP transformer shall use.
isDynamic LengthFieldSize	Boolean	0..1	attr	This attribute shall be used to determine the wire type in the context of using the TLV encoding.
messageType	<a href="#">SOMEIPMessageType Enum</a>	0..1	attr	The Message Type which shall be placed into the SOME/IP header.
session HandlingSR	<a href="#">SOMEIPTransformer SessionHandlingEnum</a>	0..1	attr	Defines whether the SOME/IP transformer shall use session handling for Sender/Receiver communication.
sizeOfArray LengthFields	PositiveInteger	0..1	attr	The size of all length fields (in Bytes) of fixed-size arrays or dynamic size arrays in the SOME/IP message. This attribute is valid for all available occurrences of fixed-size arrays or dynamic size arrays in the SOME/IP message.
sizeOfString LengthFields	PositiveInteger	0..1	attr	The size of all length fields (in Bytes) of dynamic length strings in the SOME/IP message. This attribute is valid for all available occurrences of strings in the SOME/IP message.
sizeOfStruct LengthFields	PositiveInteger	0..1	attr	The size of all length fields (in Bytes) of structs in the SOME/IP message. This attribute is valid for all available occurrences of structures in the SOME/IP message. For a more fine granular modeling on the level of Data Prototypes the DataPrototypeTransformationProps shall be used.
sizeOfUnion LengthFields	PositiveInteger	0..1	attr	The size of all length fields (in Bytes) of unions in the SOME/IP message. This attribute is valid for all available occurrences of Unions in the SOME/IP message. For a more fine granular modeling on the level of Data Prototypes the DataPrototypeTransformationProps shall be used.
tlvDataId Definition	<a href="#">TlvDataIdDefinitionSet</a>	*	ref	This reference identifies the TlvDataIdDefinitions relevant for the enclosing SOMEIPTransformationISignalProps

**Table 7.11: SOMEIPTransformationISignalProps**

<b>Enumeration</b>	<b>ByteOrderEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes
<b>Note</b>	When more than one byte is stored in the memory the order of those bytes may differ depending on the architecture of the processing unit. If the least significant byte is stored at the lowest address, this architecture is called little endian and otherwise it is called big endian.  ByteOrder is very important in case of communication between different PUs or ECUs.
<b>Aggregated by</b>	ApSomeipTransformationProps.byteOrder, <a href="#">BaseTypeDirectDefinition.byteOrder</a> , DiagnosticCommonProps.defaultEndianness, <a href="#">ISignalToIPduMapping.packingByteOrder</a> , <a href="#">MultiplexedIPdu.selectorFieldByteOrder</a> , <a href="#">PduToFrameMapping.packingByteOrder</a> , <a href="#">SegmentPosition.segmentByteOrder</a> , <a href="#">SOMEIPTransformationDescription.byteOrder</a> , <a href="#">System.containerIPduHeaderByteOrder</a>
<b>Literal</b>	<b>Description</b>
mostSignificantByte First	Most significant byte shall come at the lowest address (also known as BigEndian or as Motorola-Format) <b>Tags:</b> atp.EnumerationLiteralIndex=0
mostSignificantByte Last	Most significant byte shall come highest address (also known as LittleEndian or as Intel-Format) <b>Tags:</b> atp.EnumerationLiteralIndex=1
opaque	For opaque data endianness conversion has to be configured to Opaque. See AUTOSAR COM Specification for more details. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 7.12: ByteOrderEnum**

<b>Enumeration</b>	<b>SOMEIPMessageTypeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer
<b>Note</b>	Depending on the style of the communication different message types shall be set in the header of a SOME/IP message.
<b>Aggregated by</b>	<a href="#">SOMEIPTransformationISignalProps.messageType</a>
<b>Literal</b>	<b>Description</b>
notification	A request of a notification expecting no response. <b>Tags:</b> atp.EnumerationLiteralIndex=1
request	A request expecting a response. <b>Tags:</b> atp.EnumerationLiteralIndex=2
requestNoReturn	A fire&forget request. <b>Tags:</b> atp.EnumerationLiteralIndex=3
response	The response message. <b>Tags:</b> atp.EnumerationLiteralIndex=4

**Table 7.13: SOMEIPMessageTypeEnum**

<b>Enumeration</b>	<b>SOMEIPTransformerSessionHandlingEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer
<b>Note</b>	Enables or disable session handling for SOME/IP transformer
<b>Aggregated by</b>	ApSomeipTransformationProps.sessionHandling, <a href="#">SOMEIPTransformationISignalProps.sessionHandlingSR</a>
<b>Literal</b>	<b>Description</b>
sessionHandling Active	The SOME/IP Transformer shall use session handling <b>Tags:</b> atp.EnumerationLiteralIndex=0
sessionHandling Inactive	The SOME/IP Transformer doesn't use session handling <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 7.14: SOMEIPTransformerSessionHandlingEnum**



**[constr\_3128] SOME/IP transformer configuration** [For each `TransformationDescription` variant that is a `SOMEIPTransformationDescription`

- attribute `protocol` of `TransformationTechnology` shall be set to `SOMEIP`
- attribute `version` of `TransformationTechnology` shall be set to `1.0.0`
- attribute `transformerClass` of `TransformationTechnology` shall be set to `serializer`
- attribute `headerLength` of `BufferProperties` shall be set to `64` (bits).

]()

The `SOMEIPTransformationDescription` contains the configuration for the transformer which shall be applied to all transformations. `ISignal` specific transformer configuration (which "override" the general ones) shall be done in `SOMEIPTransformationISignalProps`.

**[TPS\_SYST\_02055] Alignment of SOME/IP** [The attribute `alignment` defines the alignment used in the SOME/IP transformer in Bits.](*RS\_SYST\_00050*)

**[TPS\_SYST\_02056] Byte Order of SOME/IP** [The attribute `byteOrder` defines the byte order used in the SOME/IP transformer for creating the on wire format.](*RS\_SYST\_00050*)

**[constr\_3129] Byte Order of SOME/IP transformer** [The attribute `byteOrder` of `SOMEIPTransformationDescription` shall be different from `opaque`.]()

**[TPS\_SYST\_02057] Interface Version of SOME/IP** [The attribute `interfaceVersion` of `SOMEIPTransformationDescription` as well as `interfaceVersion` of `SOMEIPTransformationISignalProps` defines the interface version used by the SOME/IP transformer.](*RS\_SYST\_00050*)

**[constr\_3130] Range of Interface Version** [The value of the attribute `interfaceVersion` shall be in the range `[0; 255]`.]()

**[TPS\_SYST\_02092] Size of Array Length Fields** [The attribute `sizeOfArrayLengthFields` of `SOMEIPTransformationISignalProps` defines the size of an length field generated by the SOME/IP transformer in front of all available fixed-size arrays or dynamic size arrays in the `ISignal`. See also [\[constr\\_3282\]](#).](*RS\_SYST\_00050*)

**[constr\_5244] Value of attribute `SOMEIPTransformationISignalProps.sizeOfArrayLengthFields`** [If attribute `SOMEIPTransformationISignalProps.sizeOfArrayLengthFields` is configured, then the value of attribute `SOMEIPTransformationISignalProps.sizeOfArrayLengthFields` shall be at least as high as the number of bytes required to fit the maximum result of the individual length field computation of all variable-size arrays that are transported in the SOME/IP message.



In other words, for each variable-size array contained in the SOME/IP message, the numerical value of *maximum number of elements \* sizeof(data type of array element)* shall be computed which yields the maximum number of bytes required to store the individual variable-size array.

The size of the attribute `SOMEIPTransformationISignalProps.sizeOfArrayLengthFields` shall be set such that the highest value (or bigger) obtained from the individual computations for the contained variable-size arrays can fit into the length field. The unit of attribute `SOMEIPTransformationISignalProps.sizeOfArrayLengthFields` is bytes. `()`

**[TPS\_SYST\_02093] Size of Structure Length Fields** [The attribute `sizeOfStructLengthFields` of `SOMEIPTransformationISignalProps` defines the size of an length field generated by the SOME/IP transformer in front of all available structures in the `ISignal`. See also `[constr_3283]`.] (`RS_SYST_00050`)

**[TPS\_SYST\_02359] Size of String Length Fields** [The attribute `sizeOfStringLengthFields` of `SOMEIPTransformationISignalProps` defines the size of an length field generated by the SOME/IP transformer in front of all available strings in the `ISignal`. See also `[constr_5246]`.] (`RS_SYST_00050`)

**[constr\_5245] Value of attribute `SOMEIPTransformationISignalProps.sizeOfStringLengthFields`** [If attribute `SOMEIPTransformationISignalProps.sizeOfStringLengthFields` is configured, then the value of attribute `SOMEIPTransformationISignalProps.sizeOfStringLengthFields` shall be at least as high as the number of bytes required to fit the maximum result of the individual length field computation of all strings that are transported in the SOME/IP message.

In other words, for each string contained in the SOME/IP message, the numerical value of *maximum number of characters in the string \* maximum number of code units per character (of the used character encoding) \* maximum number of bytes per code unit (of the used character encoding)* shall be computed which yields the maximum number of bytes required to store the individual string.

The size of the attribute `SOMEIPTransformationISignalProps.sizeOfStringLengthFields` shall be set such that the highest value (or bigger) obtained from the individual computations for the contained strings can fit into the length field. The unit of attribute `SOMEIPTransformationISignalProps.sizeOfStringLengthFields` is bytes. `()`

**[constr\_1441] In AUTOSAR, the transmission of union data types over the network is only supported by the SOME/IP Transformer** [If an `ImplementationDataType` according to `[TPS_SWCT_01700]`, i.e. of `category` `STRUCT` that encloses an `ImplementationDataTypeElement` of `category` `UNION`, is used to directly or (via a `DataTypeMap`) indirectly type an `AutosarDataPrototype` and the latter is mapped to a `SystemSignal` then the `ISignal` that references that `SystemSignal` shall aggregate `SOMEIPTransformationISignalProps` in the role `transformationISignalProps`.] `()`

**[TPS\_SYST\_02094] Size of Union Length Fields** [The attribute `sizeofUnionLengthFields` of `SOMEIPTransformationISignalProps` defines the size of a length field generated by the SOME/IP transformer in front of all available unions in the `ISignal`. See also [\[constr\\_3284\]](#).] ([RS\\_SYST\\_00050](#))

In principle there is no need to define a size of the length indicator because the size can be computed from the data structure itself. However there is a use case to extend on the sender side while keeping the receiver side as it is. This means that there is the need to express the size of the length indicator because the extended data structure may reach a length that exceeds the capacity of the original computed size indicator.

**[constr\_3218] Range of Size of Array Length Fields** [The value of attribute `sizeofArrayLengthFields` of `SOMEIPTransformationISignalProps` shall be either 0, 1, 2 or 4.] ()

**[constr\_3220] Range of Size of Structure Length Fields** [The value of attribute `sizeofStructLengthFields` of `SOMEIPTransformationISignalProps` shall be either 0, 1, 2 or 4.] ()

**[constr\_3221] Range of Size of Union Length Fields** [The value of attribute `sizeofUnionLengthFields` of `SOMEIPTransformationISignalProps` shall be either 0, 1, 2 or 4.] ()

**[TPS\_SYST\_02080] Message type of SOME/IP** [The attribute `messageType` of `SOMEIPTransformationISignalProps` defines the message type used by the SOME/IP transformer for the serialized `ISignal`.] ([RS\\_SYST\\_00050](#))

**[constr\_3216] Usage of `SOMEIPTransformationISignalProps.sessionHandlingSR`** [The attribute `sessionHandlingSR` of `SOMEIPTransformationISignalProps` shall only be used for `ISignals` which reference `SystemSignals` which are mapped via a `SenderReceiverToSignalMapping`.] ()

Note: This means that `sessionHandlingSR` shall only be used for transformed Sender/Receiver communication.

### 7.3.2.1 SOME/IP Transformation Properties on the level of DataPrototypes

The serialization of SOME/IP is based on the interface specification. For certain datatypes like structures, unions and arrays SOME/IP supports the configuration of length fields that will be put in front of the serialized data. AUTOSAR supports the configuration of such SOME/IP settings on two different levels:

- modeling on `ISignal` level that is valid for all available occurrences of a datatype in the SOME/IP message (see [\[TPS\\_SYST\\_02092\]](#), [\[TPS\\_SYST\\_02093\]](#) and [\[TPS\\_SYST\\_02094\]](#))
- fine granular modeling on the level of `DataPrototypes` (see [\[TPS\\_SYST\\_02121\]](#))

To allow such a fine granular modeling [SOMEIPTransformationProps](#) are defined and collected in [TransformationPropsSets](#).

<b>Class</b>	<b>TransformationPropsSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	Collection of TransformationProps. <b>Tags:</b> atp.recommendedPackage=TransformationPropsSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
transformation Props	<a href="#">TransformationProps</a>	*	aggr	Transformer specific configuration properties.

**Table 7.15: TransformationPropsSet**

<b>Class</b>	<b>TransformationProps</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	This meta-class represents a abstract base class for transformation settings.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">SOMEIPTransformationProps</a> , <a href="#">UserDefinedTransformationProps</a>			
<b>Aggregated by</b>	<a href="#">TransformationPropsSet.transformationProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 7.16: TransformationProps**

<b>Class</b>	<b>SOMEIPTransformationProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	The class SOMEIPTransformationProps specifies SOME/IP specific configuration properties.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a> , <a href="#">TransformationProps</a>			
<b>Aggregated by</b>	<a href="#">TransformationPropsSet.transformationProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
alignment	PositiveInteger	0..1	attr	Defines the padding for alignment purposes that will be added by the SOME/IP transformer after the serialized data of the variable data length data element. The alignment shall be specified in Bits.
sizeOfArray LengthField	PositiveInteger	0..1	attr	This attribute describes the size of the length field (in Bytes) that will be put in front of the referenced Array in the SOME/IP message.
sizeOfString LengthField	PositiveInteger	0..1	attr	This attribute describes the size of the length field (in Bytes) that will be put in front of the referenced String in the SOME/IP message.
sizeOfStruct LengthField	PositiveInteger	0..1	attr	This attribute describes the size of the length field (in Bytes) that will be put in front of a Structure in the SOME/IP message.
sizeOfUnion LengthField	PositiveInteger	0..1	attr	This attribute describes the size of the length field (in Bytes) that will be put in front of a Union in the SOME/IP message.

**Table 7.17: SOMEIPTransformationProps**

The relation between `SOMEIPTransformationProps` and a `DataPrototype` is created with `DataPrototypeTransformationProps` in the context of an `ISignal`.

**[TPS\_SYST\_02127] Usage of `DataPrototypeTransformationProps` in case of a `VariableDataPrototype`** [If a `VariableDataPrototype` is transported in the `ISignal` the `DataPrototypeTransformationProps` can be used to assign `SOMEIPTransformationProps` to a `DataPrototype` that is or is part of the `VariableDataPrototype`.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02128] Usage of `DataPrototypeTransformationProps` in case of a `ClientServerOperation`** [If a `ClientServerOperation` is transported in the `ISignal` (`callSignal` or `returnSignal`) the `DataPrototypeTransformationProps` can be used to assign `SOMEIPTransformationProps` to a `DataPrototype` that is or is part of an `ArgumentDataPrototype` of the `ClientServerOperation`.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02129] Assignment of `SOMEIPTransformationProps` to a root `AutosarDataPrototype` in a `SenderReceiverInterface` typed by an `ApplicationDataType`** [To assign the `SOMEIPTransformationProps` to a root `AutosarDataPrototype` in a `SenderReceiverInterface` that is typed by an `ApplicationDataType` the `DataPrototypeInSenderReceiverInterfaceInstanceRef` shall reference the `DataPrototype` with the `targetDataPrototypeInSr` reference. The `rootDataPrototypeInSr` and `contextDataPrototypeInSr` references shall not be used.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02212] Assignment of `SOMEIPTransformationProps` to a root `AutosarDataPrototype` in a `ClientServerInterface` typed by an `ApplicationDataType`** [To assign the `SOMEIPTransformationProps` to a root `AutosarDataPrototype` in a `ClientServerInterface` that is typed by an `ApplicationDataType` the `DataPrototypeInClientServerInterfaceInstanceRef` shall reference the `DataPrototype` with the `targetDataPrototypeInCs` reference. The `rootDataPrototypeInCs` and `contextDataPrototypeInCs` references shall not be used.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02130] Assignment of `SOMEIPTransformationProps` to a subElement of a root `AutosarDataPrototype` in a `SenderReceiverInterface` typed by an `ApplicationDataType`** [To assign the `SOMEIPTransformationProps` to a subElement of a root `AutosarDataPrototype` in a `SenderReceiverInterface` that is typed by an `ApplicationDataType` the `DataPrototypeInSenderReceiverInterfaceInstanceRef` shall reference the subElement with the `targetDataPrototypeInSr` reference. In addition the `rootDataPrototypeInSr` shall be set to define the context. Optionally it may be necessary to use `contextDataPrototypeInSr` references because the target subElement may be arbitrarily nested within the root `AutosarDataPrototype`.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02213] Assignment of `SOMEIPTransformationProps` to a subElement of a root `AutosarDataPrototype` in a `ClientServerInterface` typed by an `ApplicationDataType`** [To assign the `SOMEIPTransformationProps` to a subElement of a root `AutosarDataPrototype` in a `ClientServerInterface` that

is typed by an `ApplicationDataType` the `DataPrototypeInClientServerInterfaceInstanceRef` shall reference the subElement with the `targetDataPrototypeInCs` reference. In addition the `rootDataPrototypeInCs` shall be set to define the context. Optionally it may be necessary to use `contextDataPrototypeInCs` references because the target subElement may be arbitrarily nested within the root `AutosarDataPrototype`.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02131] Assignment of `SOMEIPTransformationProps` to a root `AutosarDataPrototype` in a `SenderReceiverInterface` typed by an `ImplementationDataType`** [To assign the `SOMEIPTransformationProps` to a root `AutosarDataPrototype` in a `SenderReceiverInterface` that is typed by an `ImplementationDataType` the `DataPrototypeInSenderReceiverInterfaceInstanceRef` shall reference the `AutosarDataPrototype` with the `targetDataPrototypeInSr` reference. The `rootDataPrototypeInSr` and `contextDataPrototypeInSr` references in the `DataPrototypeInSenderReceiverInterfaceInstanceRef` shall not be used.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02214] Assignment of `SOMEIPTransformationProps` to a root `AutosarDataPrototype` in a `ClientServerInterface` typed by an `ImplementationDataType`** [To assign the `SOMEIPTransformationProps` to a root `AutosarDataPrototype` in a `ClientServerInterface` that is typed by an `ImplementationDataType` the `DataPrototypeInClientServerInterfaceInstanceRef` shall reference the `AutosarDataPrototype` with the `targetDataPrototypeInCs` reference. The `rootDataPrototypeInCs` and `contextDataPrototypeInCs` references in the `DataPrototypeInClientServerInterfaceInstanceRef` shall not be used.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02132] Assignment of `SOMEIPTransformationProps` to a subElement of a root `AutosarDataPrototype` typed by an `ImplementationDataType`** [To assign the `SOMEIPTransformationProps` to a subElement of a root `AutosarDataPrototype` in a `ClientServerInterface` or `SenderReceiverInterface` that is typed by an `ImplementationDataType` the `ImplementationDataTypeElementInPortInterfaceRef` shall reference the `targetImplementationDataTypeElement`. In addition the `rootDataPrototype` shall be set to define the context. Optionally it may be necessary to use `contextImplementationDataTypeElement` references because the target subElement may be arbitrarily nested within the root `AutosarDataPrototype`.] (*RS\_SYST\_00050*)

**[TPS\_SYST\_02195] Applicable use cases for `DataPrototypeReference`** [Table 7.18 contains a comprehensive list of use cases for the usage of `DataPrototypeReference`.] (*RS\_SYST\_00050*)


Use case	Role
<code>AutosarDataPrototype</code> in a <code>SenderReceiverInterface</code> typed by an <code>ApplicationDataType</code>	<code>DataPrototypeInSenderReceiverInterfaceInstanceRef.targetDataPrototypeInSr</code>





Use case	Role
AutosarDataPrototype in a ClientServerInterface typed by an ApplicationDataType	DataPrototypeIn-ClientServerInterfaceInstanceRef.targetDataPrototypeInCs
DataPrototype in AutosarDataPrototype in a SenderReceiverInterface typed by an ApplicationCompositeDataType	DataPrototypeInSender-ReceiverInterfaceInstanceRef.targetDataPrototypeInSr
DataPrototype in AutosarDataPrototype in a ClientServerInterface typed by an Application-CompositeDataType	DataPrototypeIn-ClientServerInterfaceInstanceRef.targetDataPrototypeInCs
AutosarDataPrototype in a SenderReceiverInterface typed by an ImplementationDataType	DataPrototypeInSender-ReceiverInterfaceInstanceRef.targetDataPrototypeInSr
AutosarDataPrototype in a ClientServerInterface typed by an ImplementationDataType	DataPrototypeIn-ClientServerInterfaceInstanceRef.targetDataPrototypeInCs
DataPrototype in AutosarDataPrototype typed by an ImplementationDataType	ImplementationDataTypeElementInPortInterfaceRef.targetImplementationDataTypeElement

**Table 7.18: Possible use cases for the usage of [DataPrototypeReference](#)**

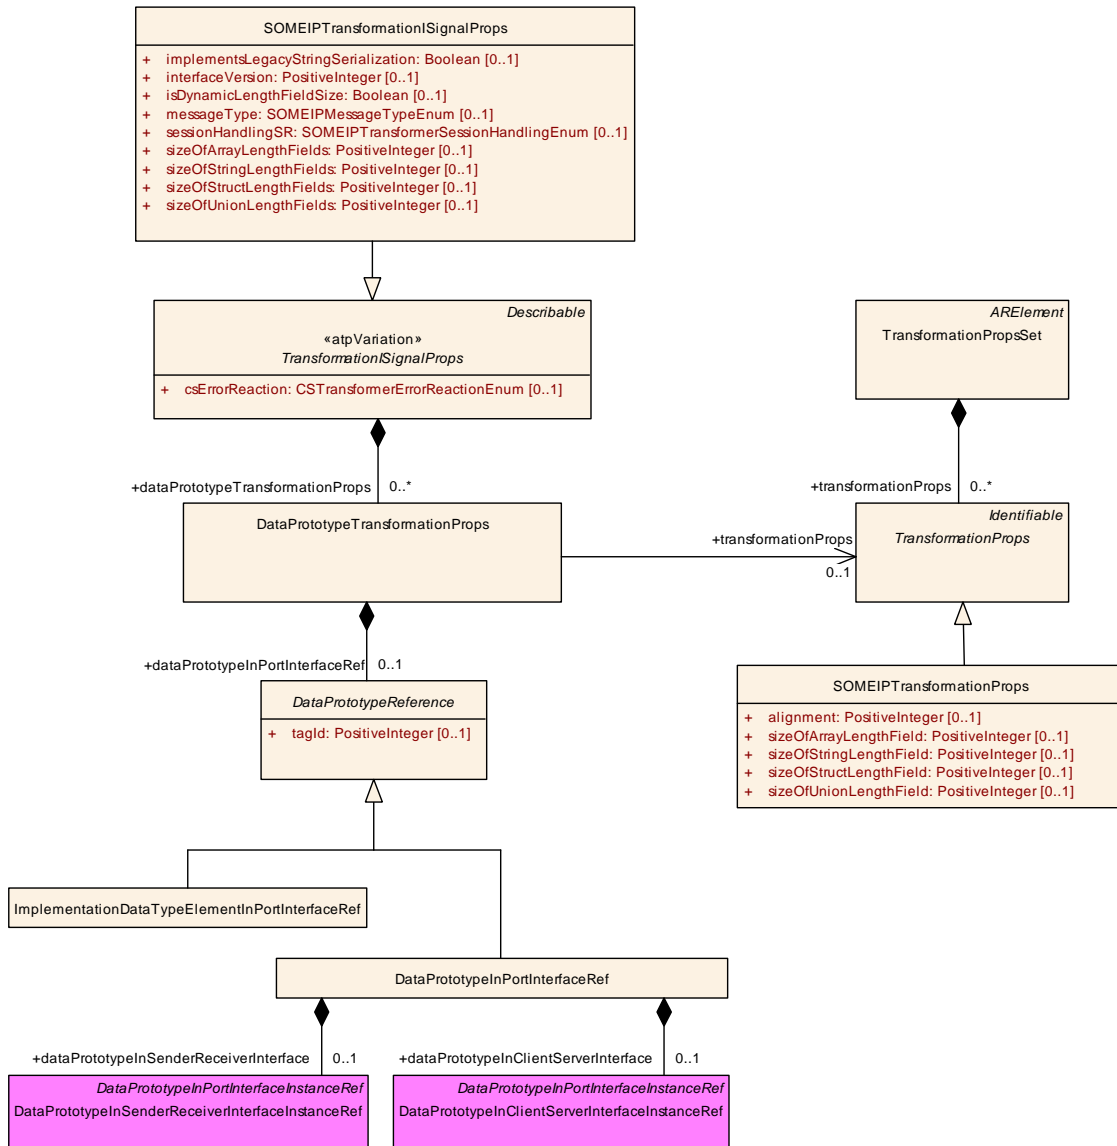

**Figure 7.12: Transformation Properties on the level of DataPrototypes**

<b>Class</b>	<b>DataPrototypeTransformationProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	DataPrototypeTransformationProps allows to set the attributes for the different Transformation Technologies that are DataPrototype specific.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">TransformationSignalProps.dataPrototypeTransformationProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataPrototypeInPortInterfaceRef	<a href="#">DataPrototypeReference</a>	0..1	aggr	Reference to a DataPrototype that is transported in the serialized ISignal.







Class	DataPrototypeTransformationProps			
networkRepresentationProps	<a href="#">SwDataDefProps</a>	0..1	aggr	Specification of the actual network representation for the referenced primitive DataPrototype. If a network representation is provided then the baseType shall be used by the Transformer as input for the serialization/deserilaization.  <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=networkRepresentationProps
transformationProps	<a href="#">TransformationProps</a>	0..1	ref	Collection of AutosarDataPrototype related configuration settings for a transformer.

**Table 7.19: DataPrototypeTransformationProps**

Class	DataPrototypeReference (abstract)			
Package	M2::AUTOSARTemplates::SystemTemplate::Transformer			
Note	This meta-class provides the ability to reference a DataPrototype.			
Base	ARObject			
Subclasses	<a href="#">DataPrototypeInPortInterfaceRef</a> , <a href="#">ImplementationDataTypeElementInPortInterfaceRef</a>			
Aggregated by	<a href="#">DataPrototypeTransformationProps.dataPrototypeInPortInterfaceRef</a> , <a href="#">SignalServiceTranslationElementProps.element</a>			
Attribute	Type	Mult.	Kind	Note
tagId	PositiveInteger	0..1	attr	This attribute represents the ability to specify a tag-id for the serialization of a specific DataPrototype in the context of a (potentially deeply-nested) composite data structure.

**Table 7.20: DataPrototypeReference**

Class	DataPrototypeInPortInterfaceRef			
Package	M2::AUTOSARTemplates::SystemTemplate::Transformer			
Note	This class represents a RootDataPrototype that is typed by an ApplicationDataType or ImplementationDataType or a DataTypeElement that is aggregated within a composite application data type (record or array).			
Base	ARObject, <a href="#">DataPrototypeReference</a>			
Aggregated by	<a href="#">DataPrototypeTransformationProps.dataPrototypeInPortInterfaceRef</a> , <a href="#">SignalServiceTranslationElementProps.element</a>			
Attribute	Type	Mult.	Kind	Note
dataPrototypeInClientServerInterface	<a href="#">DataPrototype</a>	0..1	iref	This element defines a reference to a DataPrototype in the context of a ClientServerInterface.  <b>InstanceRef implemented by:</b> <a href="#">DataPrototypeInClientServerInterfaceInstanceRef</a>
dataPrototypeInSenderReceiverInterface	<a href="#">DataPrototype</a>	0..1	iref	This element defines a reference to a DataPrototype in the context of a SenderReceiverInterface.  <b>InstanceRef implemented by:</b> <a href="#">DataPrototypeInSenderReceiverInterfaceInstanceRef</a>

**Table 7.21: DataPrototypeInPortInterfaceRef**



<b>Class</b>	<b>DataPrototypeInSenderReceiverInterfaceInstanceRef</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer::InstanceRef			
<b>Note</b>				
<b>Base</b>	<i>ARObject</i> , <i>AtpInstanceRef</i> , <i>DataPrototypeInPortInterfaceInstanceRef</i>			
<b>Aggregated by</b>	<a href="#">DataPrototypeInPortInterfaceRef.dataPrototypeInSenderReceiverInterface</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
base	<a href="#">SenderReceiverInterface</a>	0..1	ref	<b>Stereotypes:</b> atpDerived
contextDataPrototypeInSr (ordered)	<a href="#">ApplicationCompositeElementDataPrototype</a>	*	ref	<b>Tags:</b> xml.sequenceOffset=20
rootDataPrototypeInSr	<a href="#">AutosarDataPrototype</a>	0..1	ref	<b>Tags:</b> xml.sequenceOffset=10
targetDataPrototypeInSr	<a href="#">DataPrototype</a>	1	ref	<b>Tags:</b> xml.sequenceOffset=30

**Table 7.22: DataPrototypeInSenderReceiverInterfaceInstanceRef**

<b>Class</b>	<b>DataPrototypeInClientServerInterfaceInstanceRef</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer::InstanceRef			
<b>Note</b>				
<b>Base</b>	<i>ARObject</i> , <i>AtpInstanceRef</i> , <i>DataPrototypeInPortInterfaceInstanceRef</i>			
<b>Aggregated by</b>	<a href="#">DataPrototypeInPortInterfaceRef.dataPrototypeInClientServerInterface</a> , <a href="#">DiagnosticServiceSwMapping.accessedDataPrototype</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
base	<a href="#">ClientServerInterface</a>	0..1	ref	<b>Stereotypes:</b> atpDerived
contextDataPrototypeInCs (ordered)	<a href="#">ApplicationCompositeElementDataPrototype</a>	*	ref	<b>Tags:</b> xml.sequenceOffset=20
rootDataPrototypeInCs	<a href="#">AutosarDataPrototype</a>	0..1	ref	<b>Tags:</b> xml.sequenceOffset=10
targetDataPrototypeInCs	<a href="#">DataPrototype</a>	1	ref	<b>Tags:</b> xml.sequenceOffset=30

**Table 7.23: DataPrototypeInClientServerInterfaceInstanceRef**

<b>Class</b>	<b>ImplementationDataTypeElementInPortInterfaceRef</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer::InstanceRef			
<b>Note</b>	<p>This meta-class represents the ability to refer to the internal structure of an AutosarDataPrototype which is typed by an ImplementationDatatype in the context of a PortInterface.</p> <p>In other words, this meta-class shall not be used to model a reference to the AutosarDataPrototype as a target itself, even if the AutosarDataPrototype is typed by an ImplementationDataType and even if that ImplementationDataType represents a composite data type.</p>			
<b>Base</b>	<i>ARObject</i> , <a href="#">DataPrototypeReference</a>			
<b>Aggregated by</b>	<a href="#">DataPrototypeTransformationProps.dataPrototypeInPortInterfaceRef</a> , <a href="#">SignalServiceTranslationElementProps.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
contextImplementationDataElement (ordered)	<a href="#">AbstractImplementationDataTypeElement</a>	*	ref	<p>This is a context in case there are subelements with explicit types. The reference has to be ordered to properly reflect the nested structure.</p> <p><b>Tags:</b>xml.sequenceOffset=20</p>





Class	ImplementationDataTypeElementInPortInterfaceRef			
rootDataPrototype	<a href="#">AutosarDataPrototype</a>	0..1	ref	This refers to the AutosarDataPrototype which is typed by the ImplementationDatatype. The targetDataPrototype and all defined contextDataPrototypes can be found within this rootDataPrototype. <b>Tags:</b> xml.sequenceOffset=10
targetImplementationDataTypeElement	<a href="#">AbstractImplementationDataTypeElement</a>	0..1	ref	This is a target ImplementationDataTypeElement in case that the rootDataPrototype is composite and the target is a subElement of the rootDataPrototype. <b>Tags:</b> xml.sequenceOffset=30

**Table 7.24: ImplementationDataTypeElementInPortInterfaceRef**

[TPS\_SYST\_02121] **Scope of [DataPrototypeTransformationProps](#)** [[DataPrototypeTransformationProps](#) is defined either

- for the root [DataPrototype](#) that is transmitted in the serialized [ISignal](#)
- for each of the composite subElements of the composite root [DataPrototype](#)

]([RS\\_SYST\\_00050](#))

[TPS\_SYST\_02123] **Size of a length field for a chosen array** [The attribute [sizeOfArrayLengthField](#) of [SOMEIPTransformationProps](#) defines the size of a length field generated by the SOME/IP transformer in front of the fixed-size or dynamic size array for which the [DataPrototypeTransformationProps](#) is defined according to [TPS\_SYST\_02121].]([RS\\_SYST\\_00050](#))

[constr\_5247] **Value of attribute [DataPrototypeTransformationProps.transformationProps.sizeOfArrayLengthField](#)** [If the configuration of length field is done using [DataPrototypeTransformationProps.transformationProps.sizeOfArrayLengthField](#) then the value of attribute [DataPrototypeTransformationProps.transformationProps.sizeOfArrayLengthField](#) shall be at least as high as the number of bytes required to fit the result of the expression *maximum number of elements \* sizeof(data type of array element)*.]()

[TPS\_SYST\_02124] **Size of a length field for a chosen structure** [The attribute [sizeOfStructLengthField](#) of [SOMEIPTransformationProps](#) defines the size of a length field generated by the SOME/IP transformer in front of the structure for which the [DataPrototypeTransformationProps](#) is defined according to [TPS\_SYST\_02121].]([RS\\_SYST\\_00050](#))

[TPS\_SYST\_02125] **Size of a length field for a chosen union** [The attribute [sizeOfUnionLengthField](#) of [SOMEIPTransformationProps](#) defines the size of a length field generated by the SOME/IP transformer in front of the union for which the [DataPrototypeTransformationProps](#) is defined according to [TPS\_SYST\_02121].]([RS\\_SYST\\_00050](#))

[TPS\_SYST\_02360] **Size of a length field for a chosen string** [The attribute [sizeOfStringLengthField](#) of [SOMEIPTransformationProps](#) defines the size of a length field generated by the SOME/IP transformer in front of the string

for which the `DataPrototypeTransformationProps` is defined according to [TPS\_SYST\_02121].] (RS\_SYST\_00050)

**[constr\_5248] Value of attribute `DataPrototypeTransformationProps.transformationProps.sizeOfStringLengthField`** [If the configuration of length field is done using `DataPrototypeTransformationProps.transformationProps.sizeOfStringLengthField` then the value of attribute `DataPrototypeTransformationProps.transformationProps.sizeOfStringLengthField` shall be at least as high as the number of bytes required to fit the result of the expression *maximum number of characters in the string \* maximum number of code units per character (of the used character encoding) \* maximum number of bytes per code unit (of the used character encoding)*.] ()

**[TPS\_SYST\_02126] Alignment of a dynamic `DataPrototype`** [The attribute `alignment` of `SOMEIPTransformationProps` defines the padding for alignment purposes that will be added by the SOME/IP transformer after the serialized data of the variable data length data element for which the `DataPrototypeTransformationProps` is defined according to [TPS\_SYST\_02121].] (RS\_SYST\_00050)

**[constr\_3278] Usage of `SOMEIPTransformationProps.sizeOfArrayLengthField`** [The attribute `sizeOfArrayLengthField` of `SOMEIPTransformationProps` shall only be defined if the `DataPrototypeTransformationProps` is defined for a static size array according to [TPS\_SYST\_02121].] ()

**[constr\_3279] Usage of `SOMEIPTransformationProps.sizeOfStructLengthField`** [The attribute `sizeOfStructLengthField` of `SOMEIPTransformationProps` shall only be defined if the `DataPrototypeTransformationProps` is defined for a structure according to [TPS\_SYST\_02121].] ()

**[constr\_3280] Usage of `SOMEIPTransformationProps.sizeOfUnionLengthField`** [The attribute `sizeOfUnionLengthField` of `SOMEIPTransformationProps` shall only be defined if the `DataPrototypeTransformationProps` is defined for a union according to [TPS\_SYST\_02121].] ()

**[constr\_3281] Usage of `SOMEIPTransformationProps.alignment`** [The attribute `alignment` of `SOMEIPTransformationProps` shall only be defined if the `DataPrototypeTransformationProps` is defined for a variable data length data element according to [TPS\_SYST\_02121].] ()

**[constr\_3282] SOME/IP Transformation settings for arrays in the context of an `ISignal`** [In the context of an `ISignal` the usage of `DataPrototypeTransformationProps.transformationProps.sizeOfArrayLengthField` is only allowed if the `SOMEIPTransformationISignalProps.sizeOfArrayLengthFields` is not defined.] ()

**[constr\_3283] SOME/IP Transformation settings for structures in the context of an `ISignal`** [In the context of an `ISignal` the usage of `DataPrototypeTransformationProps.transformationProps.sizeOfStructLengthField` is only allowed if the `SOMEIPTransformationISignalProps.sizeOfStructLengthFields` is not defined.] ()

**[constr\_3284] SOME/IP Transformation settings for unions in the context of an ISignal** [In the context of an `ISignal` the usage of `DataPrototypeTransformationProps.transformationProps.sizeOfUnionLengthField` is only allowed if the `SOMEIPTransformationISignalProps.sizeOfUnionLengthFields` is not defined.]()

**[constr\_5246] SOME/IP Transformation settings for strings in the context of an ISignal** [In the context of an `ISignal` the usage of `DataPrototypeTransformationProps.transformationProps.sizeOfStringLengthField` is only allowed if the `SOMEIPTransformationISignalProps.sizeOfStringLengthFields` is not defined.]()

**[constr\_3285] Alignment of variable data length data elements in the context of an ISignal** [The definition of `DataPrototypeTransformationProps.transformationProps.alignment` is only allowed if the `SOMEIPTransformationDescription.alignment` is not defined.]()

### 7.3.2.2 Network Representation

In order to assure that the serialization of the transported data on the sender side and its deserialization on the receiver side(s) is done correctly, system designers need to assure that the same datatypes (i.e., `SwBaseTypes`) are used for the serialization/deserialization on both sides. However, this agreement does not imply the use or equality of the `SwBaseTypes` defined by the `ImplementationDataType` used by the application software on the sender and (possibly multiple) receiver sides. This means that each `EcuInstance`, regardless if it belongs to a sender or receiver, can use one datatype for the serialization/deserialization (e.g., `UInt16` in the actual SOME/IP transformer code) and another datatype in the application software (e.g., `Float32` in the actual application software component code).

In order to define the commonly agreed datatypes for the serialization/deserialization of the transported data by the sender and possibly multiple receivers, AUTOSAR defines the following two approaches:

- serialization based on the network representation ([TPS\_SYST\_02136])
- serialization based on the `ImplementationDataTypes` ([TPS\_SYST\_02137])

**[TPS\_SYST\_02136] Serialization based on the network representation** [If a network representation that defines a `SwBaseType` is provided for each `DataPrototype` typed by a primitive data type that is part of the serialized `ISignal` (`ISignal.transformationISignalProps.dataPrototypeTransformationProps.networkRepresentationProps`), these `SwBaseTypes` shall be used for the serialization/deserialization.]()

**[TPS\_SYST\_02137] Serialization based on the `ImplementationDataTypes`** [For primitive `DataPrototypes` that are part of the serialized `ISignal` where no network

representation is provided (`ISignal.transformationISignalProps.dataPrototypeTransformationProps.networkRepresentationProps`), `SwBaseType` shall be provided by the `ImplementationDataTypes` that either types the corresponding `PortPrototypes` on the top level Software Composition that represents the communicating `EcuInstances`, or it is mapped to the `ApplicationDataType` that types it. `()`

**[constr\_3317] Assuring the same data interpretation on the sender and receiver sides in case of serialization based on the `ImplementationDataTypes`** [In order to assure the same interpretation of the serialized data by the SOME/IP transformers on the sender and receiver sides in case of serialization based on either a primitive or a composite `ImplementationDataType`, the same `SwBaseType` shall be defined

- for this primitive `DataPrototype` or
- for each primitive `DataPrototype` of the leaf elements of the composite `DataPrototype` starting from the first element until and including the last element that is requested by the receiver,

by the `ImplementationDataTypes` that either types the corresponding `PortPrototypes` on the top level Software Composition of the communicating `EcuInstances`, or it is mapped to the `ApplicationDataType` that types it. `()`

If the serialization is based on the `ImplementationDataTypes`, the same data has to be transmitted on all buses, i.e., it is not possible to transmit different precision (i.e., number of bits) on different buses, as with the serialization based on the network representation on the `ISignal` level.

`ImplementationDataTypes` used by the actual application for the transported data shall be defined by the corresponding `PortPrototypes` on the `AtomicSwComponentTypes` of the communicating `EcuInstances`. The RTE is responsible for the possible type conversion and scaling in case of different `ImplementationDataTypes` used for the serialization/deserialization and in the application.

**[TPS\_SYST\_02138] Definition of the network representation** [The network representation for each `DataPrototype` typed by a primitive data type in the serialized data shall be defined by the `SwDataDefProps` that is aggregated by the `DataPrototypeTransformationProps` in the role `networkRepresentationProps`. `()`

In other words: If a `DataPrototype` is transported in the `ISignal` the `DataPrototypeTransformationProps` can be used to assign a network representation to each primitive `DataPrototype` that is part of the enclosing `DataPrototype`.

Attributes of <code>SwDataDefProps</code>	<code>networkRepresentationProps</code>
<code>additionalNativeTypeQualifier</code>	NA
<code>annotation</code>	NA
<code>baseType</code>	D
<code>compuMethod</code>	D
<code>dataConstr</code>	D
<code>displayFormat</code>	D
<code>displayPresentation</code>	NA

Attributes of SwDataDefProps	networkRepresentationProps
implementationDataType	NA
invalidValue	NA
swAddrMethod	NA
swAlignment	NA
swBitRepresentation	NA
swCalibrationAccess	NA
swCalprmAxisSet	NA
swCalprmAxisSet. swCalprmAxis /SwAxisGrouped. swCalprmRef	NA
swCalprmAxisSet. swCalprmAxis /SwAxisIndividual. swVariableRef	NA
swCalprmAxisSet. swCalprmAxis /SwAxisGrouped. sharedAxisType	NA
swCalprmAxisSet. swCalprmAxis /SwAxisIndividual. inputVariableType	NA
swCalprmAxisSet/ AxisIndividual/ Unit	NA
swCalprmAxisSet/ BaseType	NA
swComparisonVariable	NA
swDataDependency	NA
swHostVariable	NA
swImplPolicy	NA
swIntendedResolution	NA
swInterpolationMethod	NA
swIsVirtual	NA
swPointerTargetProps	NA
swRecordLayout	NA
swRefreshTiming	NA
swTextProps	NA
swValueBlockSize	NA
unit	D
valueAxisDataType	NA

**Table 7.25: Allowed SwDataDefProps Attributes on DataPrototypeTransformationProps**

The following settings apply in table 7.25:

**D** Attribute can be **defined** in the scope of this element.

**NA** Attribute is **not applicable** for usage in the scope of this element.

**[TPS\_SYST\_02139] Applicability of the SwDataDefProps attributes for the network representation of the serialized data** [Usage of `DataPrototypeTransformationProps.networkRepresentationProps` shall follow the restrictions given in table Table 7.25.]()

**[constr\_3318] Allowed use of ISignal.networkRepresentationProps** [If a reference from `ISignal` to `DataTransformation` in the role `dataTransformation` exists, this `ISignal` SHALL NOT aggregate `SwDataDefProps` in the role `networkRepresentationProps`.]()

This means that aggregating `SwDataDefProps` by an `ISignal` is applicable only if this `ISignal` is not transformed.


**[constr\_3319] Existence of `DataPrototypeTransformationProps.networkRepresentationProps`** [`ISignal.transformationISignalProps.dataPrototypeTransformationProps.networkRepresentationProps` shall either

- not exist at all or
- shall be defined for all leaf elements of the root `DataPrototype` transmitted in the `ISignal`

]

This means that either all leaf elements of the transformed `ISignal` shall have a network representation, or none.



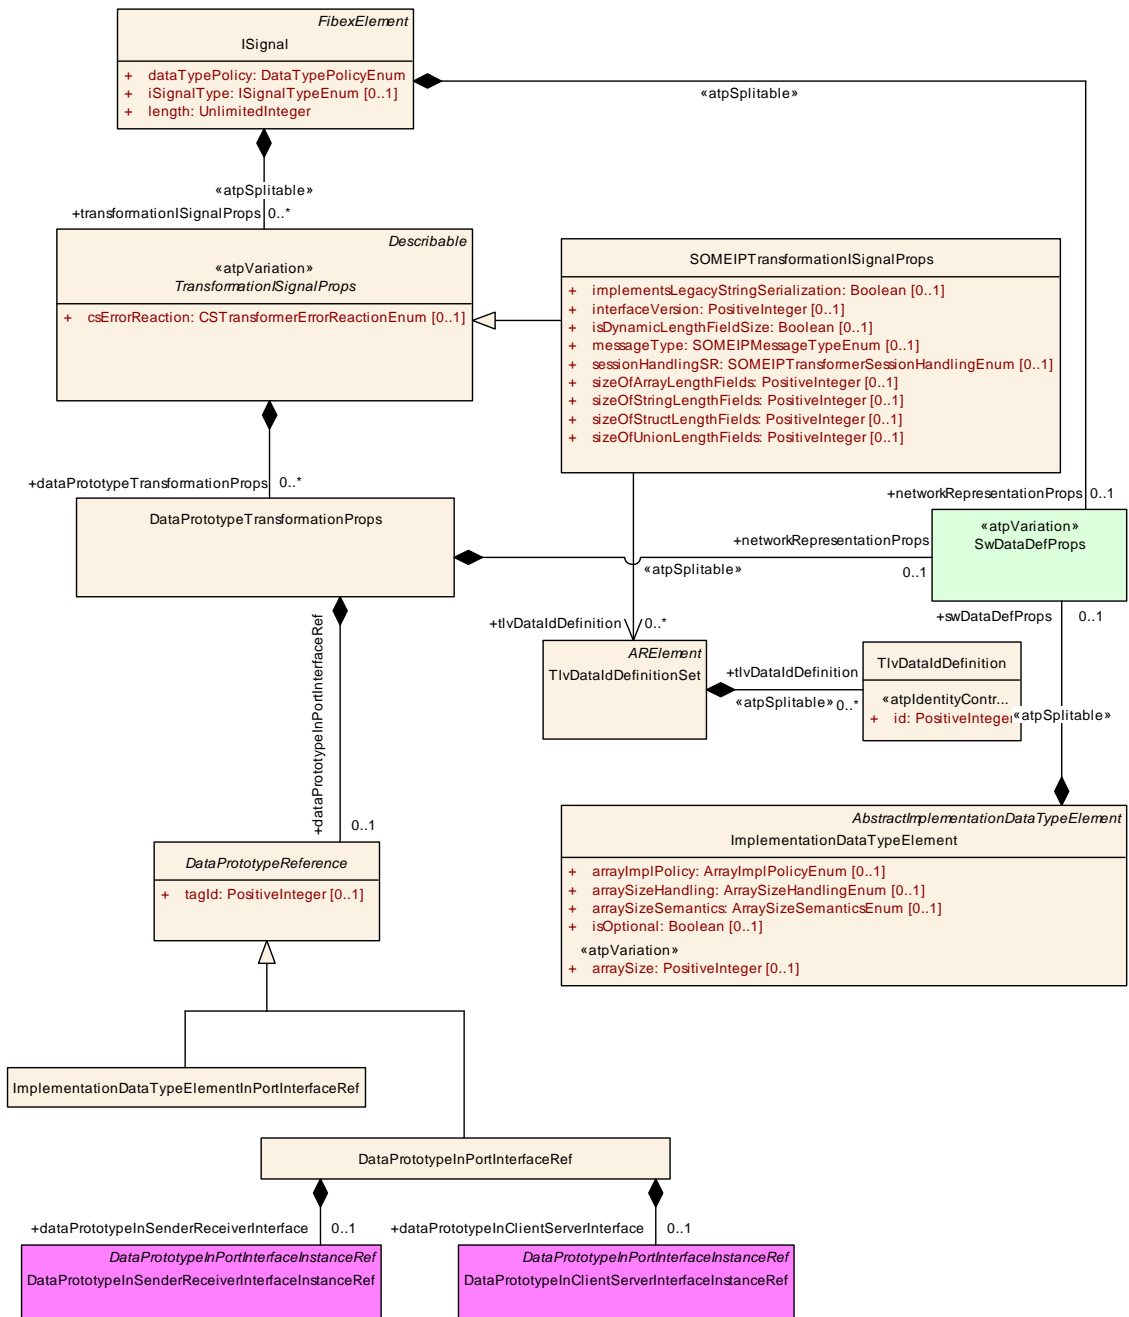


**Figure 7.13: Transformer Network Representation**

### 7.3.2.2.1 Example - Serialization based on the network representation

An example with concrete methodological steps in a common OEM-Tier 1 development process for the serialization based on the network representation is presented in [Figure 7.14](#). The steps are as follows:



1. OEM decides on a common `SwBaseType` and `CompuMethod` for each bus, as part of the network representation, used for serialization/deserialization of one concrete complex data type.
2. OEM provides an `ImplementationDataType`, with `SwBaseType` and optional `CompuMethod`, on the `PortPrototypes` on the `RootSwCompositions` of the communicating `EcuInstances` (sender and possibly multiple receivers). The step is optional and `PortPrototypes` can also be typed by an `ApplicationDataType` that has a mapping to an `ImplementationDataType`.
3. Tier 1s are free to define arbitrary `ImplementationDataType` (with `SwBaseType` and optional `CompuMethod`) in the application software components. If this `SwBaseType` is different than the one used for the serialization/deserialization, RTE is responsible for the type conversion together with possible scaling defined by the `CompuMethods`, as part of the network representation and `PortPrototypes` on the `RootSwComposition` and `SwComponentPrototype` that is typed by `ApplicationSwComponentType`. Please note that on the receiver side it is possible that the `SwComponentPrototype` that is typed by `ApplicationSwComponentType` receives only a subset of data defined on the `RootSwComposition`. In this case, this needs be described by the `PortInterfaceMapping`.

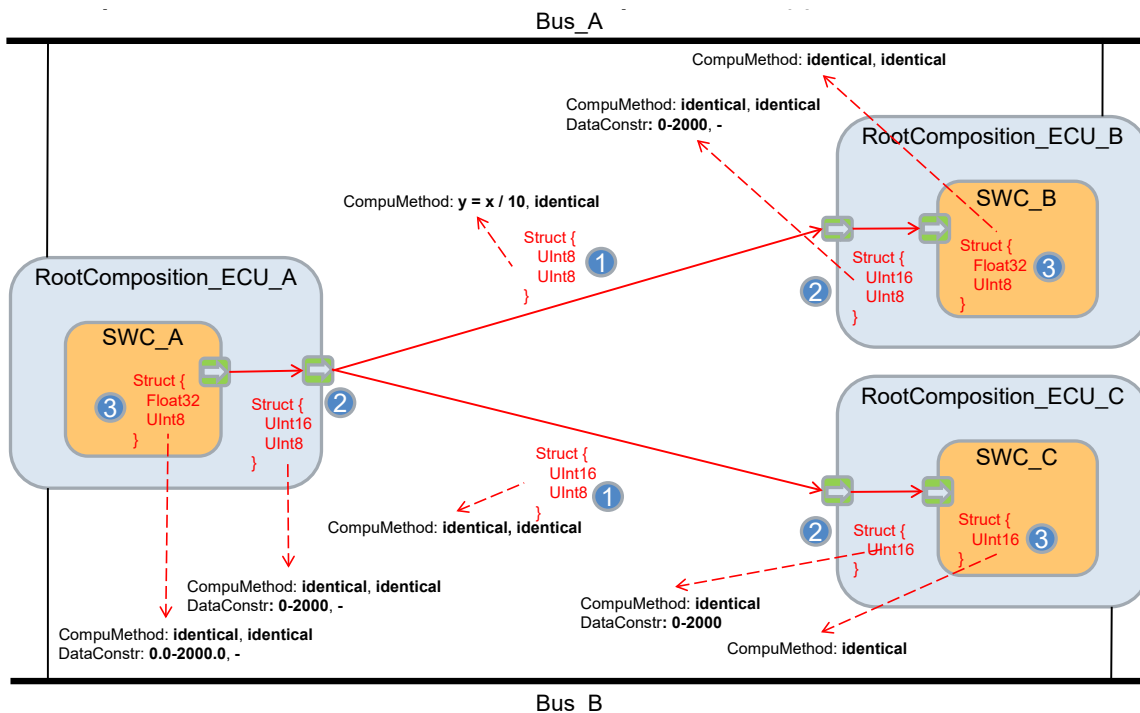


**Figure 7.14: Serialization based on the network representation**

The actual steps that need to be performed at runtime are presented in [Figure 7.15](#) and they are as follows:

1. Application of the sending software component provides the data to be transmitted to the RTE and stores it in SWC internal buffer.

2. If `SwBaseType` defined by the `ImplementationDataType` on the `PortPrototype` of the `ApplicationSwComponentType` is different then the one optionally defined by the `ImplementationDataType` on the `PortPrototype` of the `RootSwComposition`, the RTE performs type conversion, and scaling if `CompuMethods` are also defined on these `PortPrototypes`, and stores the values internally in the RTE.
3. If network representation defines a `SwBaseType` that is different from the one optionally defined by the `ImplementationDataType` on the `PortPrototype` on the `RootSwComposition`, the RTE performs another type conversion, and scaling if `CompuMethod` is also defined as part of the network representation, and stores the value internally in the RTE. This internal value is used for the serialization.
4. On the receiver side, the RTE stores the serialized data in the RTE internal buffer. When the receiver SWC wants to read the data, the RTE first de-serializes the values received from the bus whose type is specified by the `SwBaseType` that is part of the network representation. If the `SwBaseType` is different then the one optionally defined by the `ImplementationDataType` on the `PortPrototype` of the `RootSwComposition`, the RTE performs type conversion, and scaling if `CompuMethods` are also defined on the `PortPrototype` and in the network representation, and stores the values internally in the RTE.
5. If `SwBaseType` defined by the `ImplementationDataType` on the `PortPrototype` of the `SwComponentPrototype` that is typed by `ApplicationSwComponentType` is different then the one defined by the `ImplementationDataType` on the `PortPrototype` of the `RootSwComposition`, the RTE performs another type conversion, and scaling if `CompuMethods` are also defined on these `PortPrototype`, and stores the final values internally in the buffer of the application. The RTE is also able to deliver only a subset of data to the `SwComponentPrototype` that is typed by `ApplicationSwComponentType`, if that is required by the description of the `PortInterfaceMapping`.

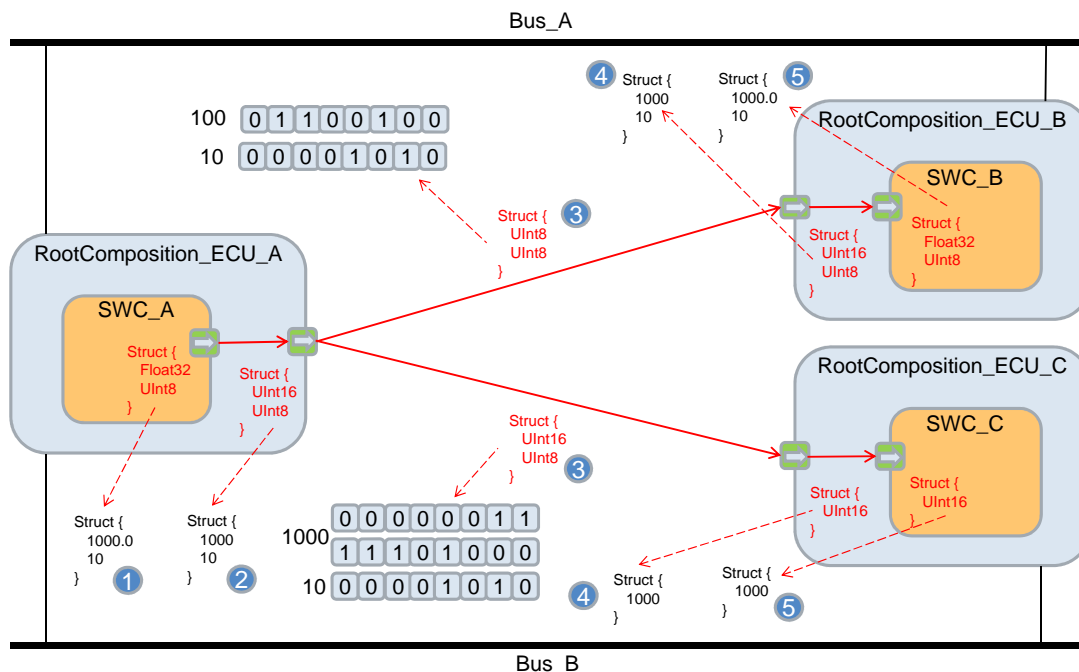

**Figure 7.15: Serialization based on the network representation**

**7.3.2.2.1.1 Necessity of data conversion based on CompuMethods**

CompuMethods are used to define how the information processed by AUTOSAR (the internal view) is to be interpreted in the physical domain. As an example the Battery-Voltage may be processed by AUTOSAR in a 1/10th scaling, thus an Integer value of 485 represents 48,5 Volt.

It is important to recognize that the value 48,5V is never handled by the AUTOSAR platform software. AUTOSAR only handles the internal representation (485).

Of course there are use-cases where the physical representation is required, e.g. monitoring tools show the measured values in the physical domain, thus have to perform a conversion. Another use-case is the dashboard where the BatteryVoltage might be displayed. But in this case it is the task of the displaying application software to perform the conversion into the physical domain, or rather into the visualization.

The AUTOSAR infrastructure (respectively the RTE) may still be required to perform a conversion of data. This is required if two CompuMethods - applying to the same data path - are not equal.

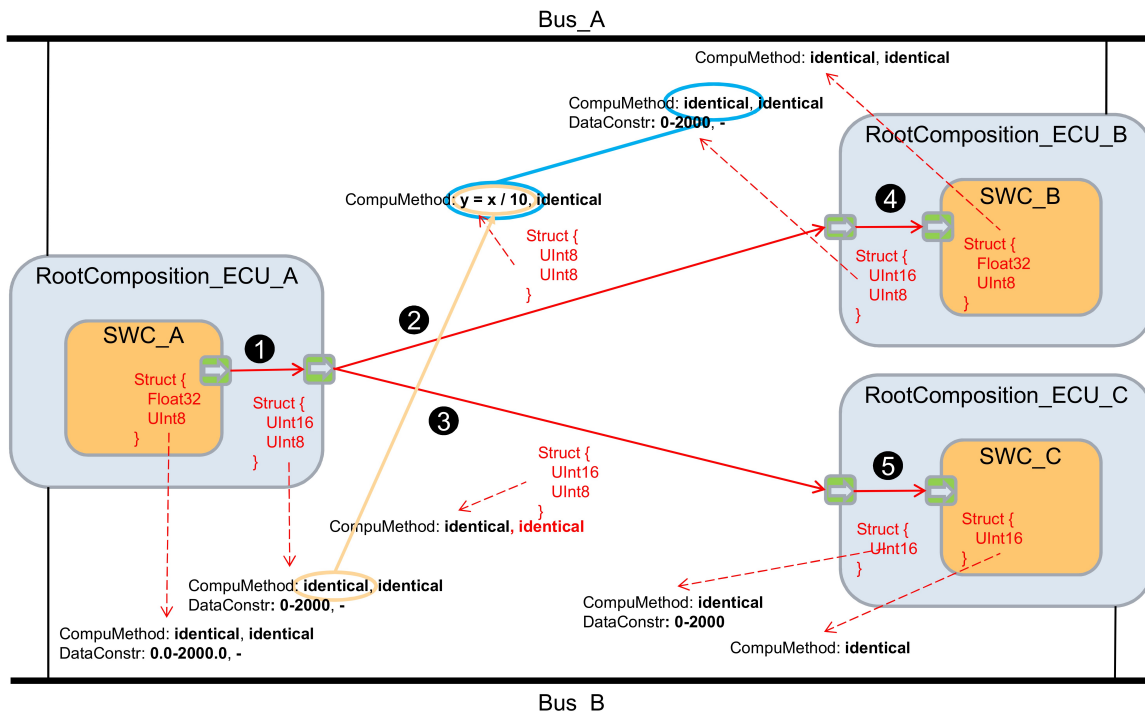


Figure 7.16: Data conversion based on CompuMethods


In the example figure 7.16 there are several CompuMethods defined for various occurrences of data: A value is produced in SWC\_A with a BaseType Float32 and an “identical” CompuMethod ( $y = x$ ). The value is then delegated to the RootComposition\_ECU\_A, where the BaseType is an uint16 and the CompuMethod is again “identical”. For the network transport the CompuMethod is defined as  $y = x/10$ . As the two CompuMethods are not equal the RTE will have to convert the “identical” representation to the  $y = x/10$  representation. On the reception side there is again an “identical” CompuMethod defined, thus another conversion by the receiving RTE is required.

### 7.3.2.2.2 Example - Serialization based on the ImplementationDataTypes

An example with concrete methodological steps in a common OEM-Tier 1 development process for the serialization based on the ImplementationDataTypes is presented in Figure 7.17. The steps are as follows:

1. OEM provides the same ImplementationDataType, with SwBaseType and optional CompuMethod, on the PortPrototypes on the RootSwCompositions of the communicating EcuInstances (sender and possibly multiple receivers). The PortPrototypes can also be typed by an ApplicationDataType that has a mapping to an ImplementationDataType.
2. Tier 1s are free to define arbitrary ImplementationDataType (with SwBaseType and optional CompuMethod) in the application software components. If this SwBaseType is different than the one used for the serialization/deserialization, RTE is responsible for the type conversion together with possible scaling defined

by the `CompuMethods`, as part of `PortPrototypes` on the `RootSwComposition` and `AtomicSwComponentTypes`. Please note that on the receiver side it is possible that the `SwComponentPrototype` that is typed by `ApplicationSwComponentType` receives only a subset of data defined on the `RootSwComposition`. In this case, this needs to be described by the `PortInterfaceMapping`.

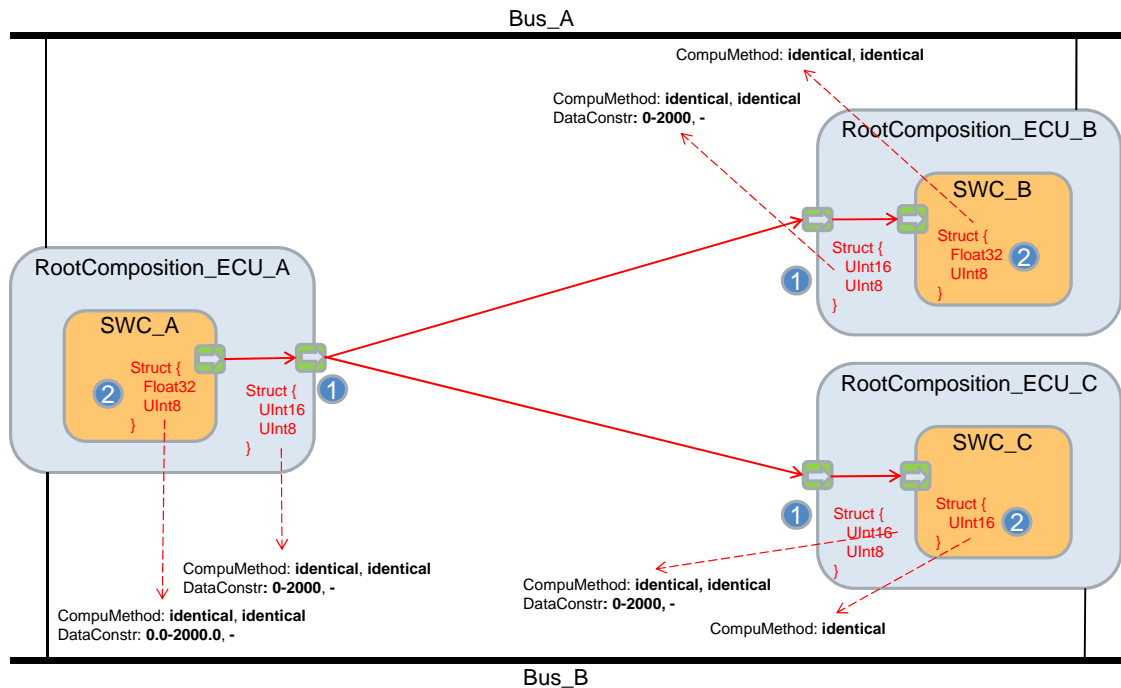


**Figure 7.17: Serialization based on the ImplementationDataTypes**

The actual steps that need to be performed at runtime are presented in [Figure 7.18](#) and they are as follows:

1. Application of the sending software component provides the data to be transmitted to the RTE and stores it in SWC internal buffer.
2. If `SwBaseType` defined by the `ImplementationDataType` on the `PortPrototype` of the `SwComponentPrototype` that is typed by `ApplicationSwComponentType` is different then the one defined by the `ImplementationDataType` on the `PortPrototype` of the `RootSwComposition`, the RTE performs type conversion, and scaling if `CompuMethods` are also defined on these `PortPrototypes`, and stores the values internally in the RTE.
3. As no network representation is provided, the internal value from step 2 is used for the serialization and transmission on the bus.
4. On the receiver side, the RTE stores the serialized data received from the bus in the RTE internal buffer. When the receiver SWC wants to read the data, the RTE de-serializes these values as defined by the `ImplementationDataType` on the `PortPrototype` of the `RootSwComposition`.

- If `SwBaseType` defined by the `ImplementationDataType` on the `PortPrototype` of the `SwComponentPrototype` that is typed by `ApplicationSwComponentType` is different then the one defined by the `ImplementationDataType` on the `PortPrototype` of the `RootSwComposition`, the RTE performs another type conversion, and scaling if `CompuMethods` are also defined on these `PortPrototype`, and stores the final values internally in the buffer of the application. The RTE is also able to deliver only a subset of data to the `SwComponentPrototype` that is typed by `ApplicationSwComponentType`, if that is required by the description of the `PortInterfaceMapping`.

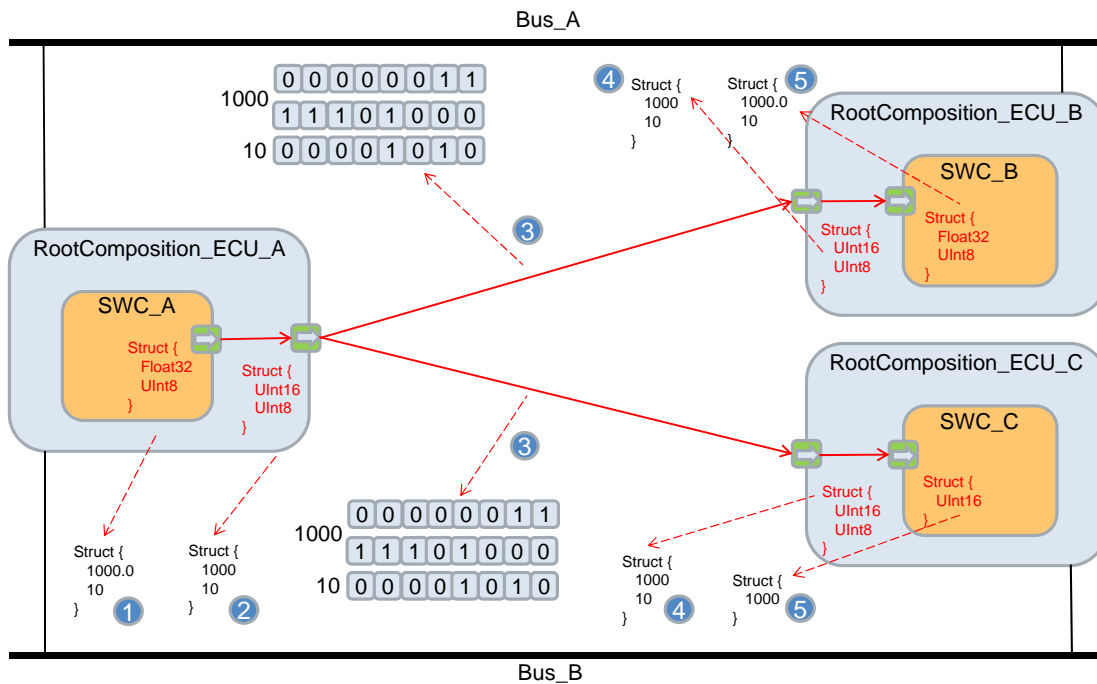

**Figure 7.18: Serialization based on the ImplementationDataTypes**

### 7.3.3 COM Based Transformer

In order to support the signal group based interaction of the transformer with the COM module as defined in the COM Based Transformer specification [18] a further modeling is supported:

In case the array based signal group API of Com shall be used the `ISignalGroup` has a reference to the `DataTransformation` element in the role `comBasedSignalGroupTransformation`. This defines that the RTE shall use the array based signal group API of Com [22] in order to transport the transformed data.

#### [TPS\_SYST\_02058] Usage of COM Based Transformer [If

- an `ISignalGroup` references a `DataTransformation` in the role `comBasedSignalGroupTransformation` and
- this `ISignalGroup` references a `SystemSignalGroup` and

3. the referenced `SystemSignalGroup` is referenced by a `SenderReceiverToSignalGroupMapping` in the role `signalGroup`


then the `VariableDataPrototype` referenced by the `SenderReceiverToSignalGroupMapping` shall be transformed using the COM Based Transformer [18].  
(*RS\_SYST\_00051*)

**[constr\_5050] VariableDataPrototype of COM Based Transformer** [The `VariableDataPrototype` of [TPS\_SYST\_02058] shall be typed by an `ApplicationRecordDataType` or an `ImplementationDataType` of category STRUCTURE.]  
( )

Please note that according to [SWS\_Rte\_03867] the RTE calculates the `InputBufferLength` that is used for the output buffer calculation for Sender/Receiver communication needed for the `VariableDataPrototype` of the `dataElement` of the `SenderReceiverInterface` that shall be transformed.

**[constr\_3132] Required COM Based Transformation for `comBasedSignalGroupTransformation`** [If a `ISignalGroup` has a reference to the `DataTransformation` element in the role `comBasedSignalGroupTransformation` then this `DataTransformation` shall be the handled by the COM Based Transformer [18].] ( )

Note that the `SystemSignalGroup` (and the corresponding `ISignalGroup`) in this case not only contains the application data element signals mapped by the `SenderReceiverToSignalGroupMapping` but also the data which has been added by the transformers (e.g. crc, sequence counter, ...). This is also shown in the example in Figure 7.20.

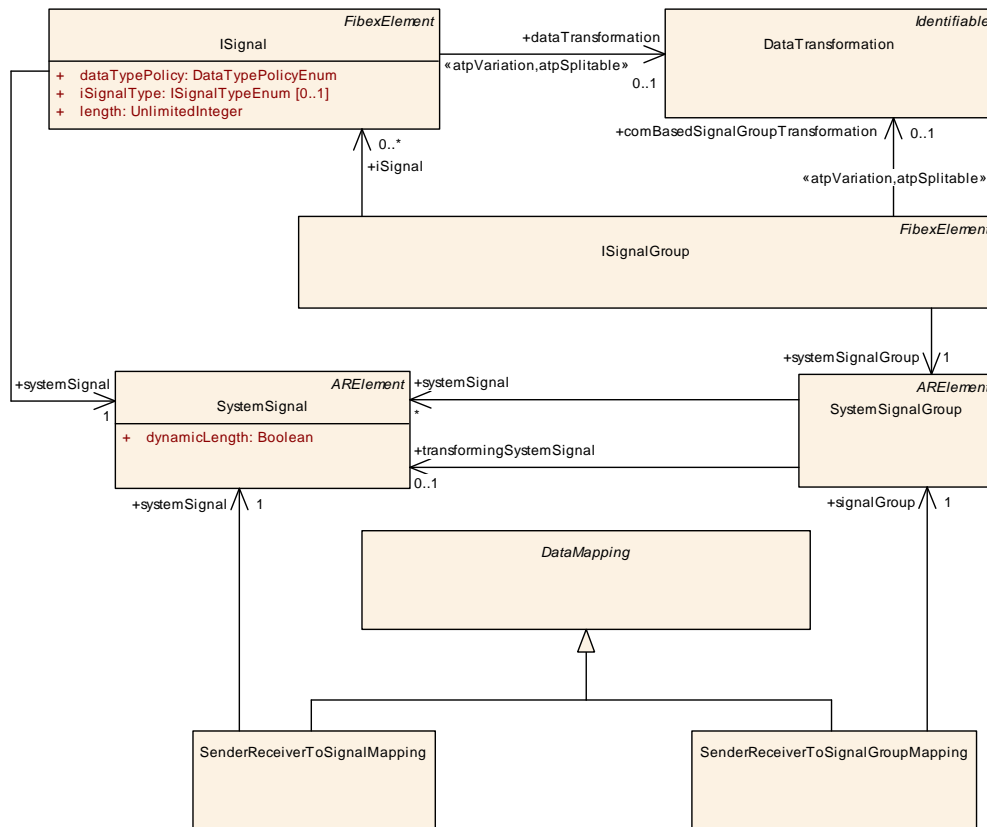

**Figure 7.19: Transformer Data Mapping**

**[constr\_3183] ISignalGroup with transformationISignalProps** [An ISignalGroup that aggregates transformationISignalProps shall reference the DataTransformation in the role comBasedSignalGroupTransformation.]()

**[TPS\_SYST\_02068] Transformer header field representation in an ISignalGroup** [In case ISignalGroup has a reference to a DataTransformation in the role comBasedSignalGroupTransformation and the DataTransformation has further TransformationTechnologies defined in the role transformerChain then space for the individual headers shall be allocated by defining one ISignal per header part that is member of the ISignalGroup.](RS\_SYST\_00056)


**[constr\_3152] BufferProperties.headerLength settings for any transformer used in combination with a COM Based transformer** [A transformer used in a transformer chain with a COM Based transformer shall be configured with the following values:

- BufferProperties.headerLength = 0

]()

This is because the space for the transformer headers (e.g. CRC and Sequence-Counter for E2E) needs to be allocated by a proper ISignalGroup layout according to [TPS\_SYST\_02068].



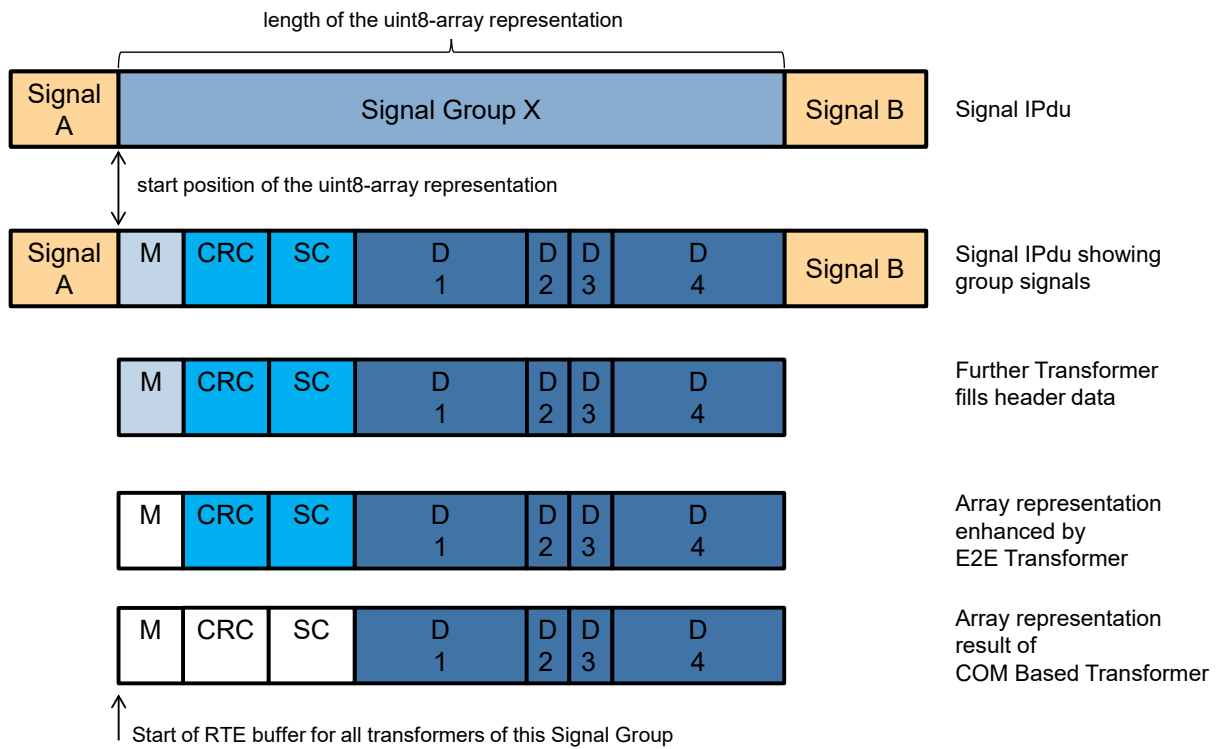

**Figure 7.20: Example of COM Based Transformer buffer layout**


As shown in figure 7.20 the example illustrates that for the E2E header ('CRC' and 'SC') and the 'M' header three further *ISignals* are defined within the *ISignalGroup* in order to compensate the space required by the additional transformers.

### 7.3.4 E2E Transformer

This section specifies the configuration of the E2E protection that is invoked "out-of-box" by RTE and realized by E2E Transformer [38], E2E Library [23] and CRC Library [39].

The specific configuration for an E2E transformer takes place in `EndToEndTransformationDescription` and `EndToEndTransformationISignalProps` shown in Figure 7.21 and in `EndToEndTransformationComSpecProps` (see more details in [5])

[TPS\_SYST\_02275] **Relation between `EndToEndTransformationDescription` and `EndToEndTransformationComSpecProps`** [It is possible to overwrite the `ISignal` specific E2E settings that are defined in `EndToEndTransformationDescription` with settings available in the `EndToEndTransformationComSpecProps` defined at the `PortPrototype` of a `SwComponentType`. With this approach it is possible to define Port-Prototype specific configuration options for the E2E data transformer.] (*RS\_SYST\_00056*)

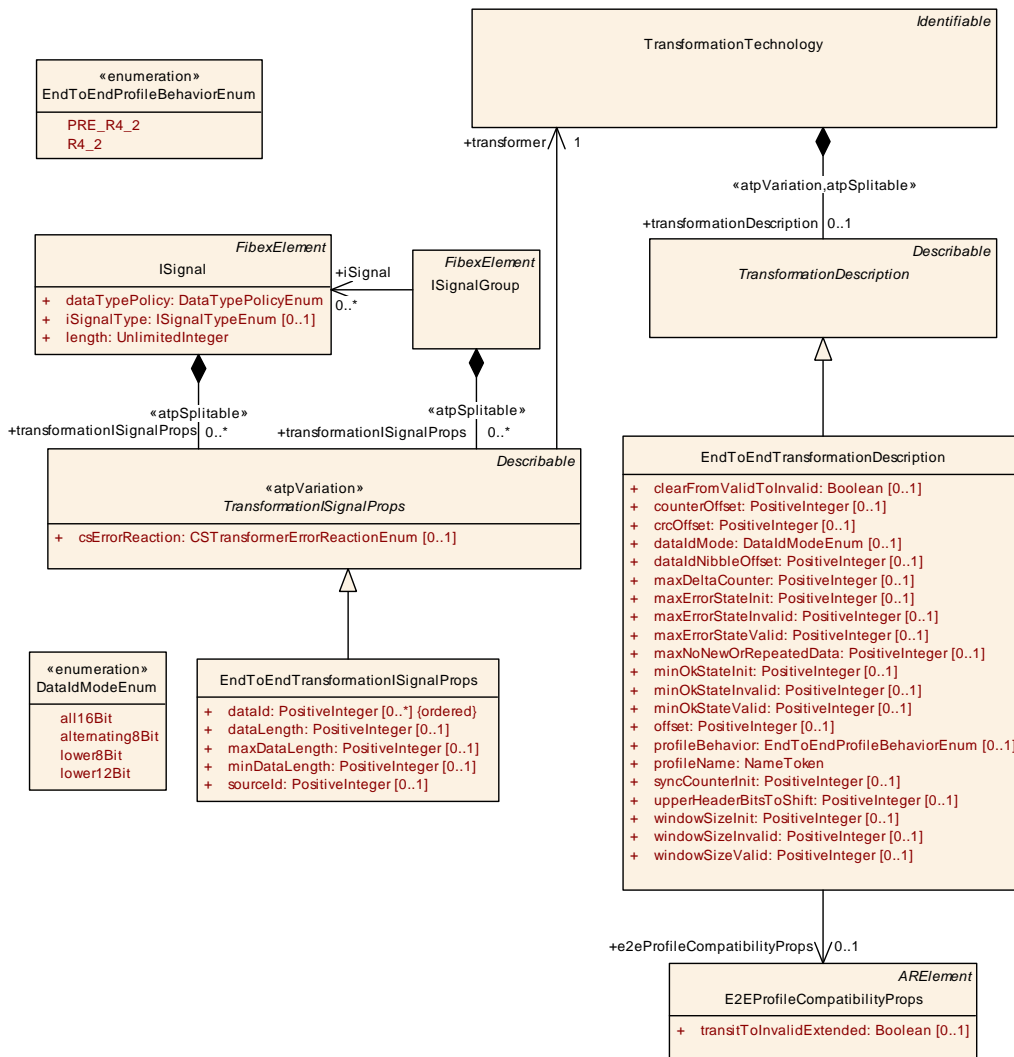

**Figure 7.21: E2E Transformer Configuration**

<b>Class</b>	<b>EndToEndTransformationDescription</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	EndToEndTransformationDescription holds these attributes which are profile specific and have the same value for all E2E transformers.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Describable</a> , <a href="#">TransformationDescription</a>			
<b>Aggregated by</b>	<a href="#">TransformationTechnology.transformationDescription</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
clearFromValidToInvalid	Boolean	0..1	attr	Clear monitoring window on transition from state Valid to state Invalid.
counterOffset	PositiveInteger	0..1	attr	Offset of the counter in the Data[] array in bits.
crcOffset	PositiveInteger	0..1	attr	Offset of the CRC in the Data[] array in bits.
dataIdMode	<a href="#">DataIdModeEnum</a>	0..1	attr	This attribute describes the inclusion mode that is used to include the implicit two-byte Data ID in the one-byte CRC.
dataIdNibbleOffset	PositiveInteger	0..1	attr	Offset of the Data ID nibble in the Data[] array in bits.
e2eProfileCompatibilityProps	<a href="#">E2EProfileCompatibilityProps</a>	0..1	ref	Reference to additional settings for the E2E state machine.
maxDeltaCounter	PositiveInteger	0..1	attr	Maximum allowed difference between two counter values of two consecutively received valid messages. For example, if the receiver gets data with counter 1 and Max DeltaCounter is 3, then at the next reception the receiver can accept Counters with values 2, 3 or 4.
maxErrorStateInit	PositiveInteger	0..1	attr	Maximal number of checks in which ProfileStatus equal to E2E_P_ERROR was determined, within the last Window Size checks, for the state E2E_SM_INIT.
maxErrorStateInvalid	PositiveInteger	0..1	attr	Maximal number of checks in which ProfileStatus equal to E2E_P_ERROR was determined, within the last Window Size checks, for the state E2E_SM_INVALID.
maxErrorStateValid	PositiveInteger	0..1	attr	Maximal number of checks in which ProfileStatus equal to E2E_P_ERROR was determined, within the last Window Size checks, for the state E2E_SM_VALID.
maxNoNewOrRepeatedData	PositiveInteger	0..1	attr	The maximum allowed amount of consecutive failed counter checks.
minOkStateInit	PositiveInteger	0..1	attr	Minimal number of checks in which ProfileStatus equal to E2E_P_OK was determined, within the last WindowSize checks, for the state E2E_SM_INIT.
minOkStateInvalid	PositiveInteger	0..1	attr	Minimal number of checks in which ProfileStatus equal to E2E_P_OK was determined, within the last WindowSize checks, for the state E2E_SM_INVALID.
minOkStateValid	PositiveInteger	0..1	attr	Minimal number of checks in which ProfileStatus equal to E2E_P_OK was determined, within the last WindowSize checks, for the state E2E_SM_VALID.
offset	PositiveInteger	0..1	attr	Offset of the E2E header in the Data[] array in bits.
profileBehavior	<a href="#">EndToEndProfileBehaviorEnum</a>	0..1	attr	Behavior of the check functionality
profileName	NameToken	1	attr	Definition of the E2E profile.
syncCounterInit	PositiveInteger	0..1	attr	Number of checks required for validating the consistency of the counter that shall be received with a valid counter (i.e. counter within the allowed lock-in range) after the detection of an unexpected behavior of a received counter.





<b>Class</b>	<b>EndToEndTransformationDescription</b>			
upperHeaderBitsToShift	PositiveInteger	0..1	attr	<p>This attribute describes the number of upper-header bits to be shifted.</p> <p>value = 0 or not present: shift of upper header is NOT performed.</p> <p>value &gt; 0: the E2E Transformer on the protect-side, takes the first upperHeaderBitsToShift bits from the upper buffer (e.g. SOME/IP header part generated by SOME/IP transformer) and shifts them towards the lower bytes and bits within the Data[] for the length of the E2E header (e.g. 12 bytes in case of E2E Profile 4). This means the shift distance is fixed - it depends on the E2E header size - what is configured here is the number of bits that are to be shifted. This option is defined because the Some/IP header generated by SOME/IP transformer shall be, due to compatibility between non-protected and E2E-protected communication, at the same position, which is before E2E header.</p>
windowSizeInit	PositiveInteger	0..1	attr	Size of the monitoring window of state Init for the E2E state machine.
windowSizeInvalid	PositiveInteger	0..1	attr	Size of the monitoring window of state Invalid for the E2E state machine.
windowSizeValid	PositiveInteger	0..1	attr	Size of the monitoring window of state Valid for the E2E state machine.

**Table 7.26: EndToEndTransformationDescription**

<b>Enumeration</b>	<b>DataIdModeEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer
<b>Note</b>	Supported inclusion modes to include the implicit two-byte Data ID in the one-byte CRC.
<b>Aggregated by</b>	E2EProfileConfiguration.dataIdMode, <a href="#">EndToEndTransformationDescription.dataIdMode</a>
<b>Literal</b>	<b>Description</b>
all16Bit	<p>Two bytes are included in the CRC (double ID configuration).</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=0</p>
alternating8Bit	<p>One of the two bytes byte is included, alternating high and low byte, depending on parity of the counter (alternating ID configuration). For even counter low byte is included; For odd counters the high byte is included.</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=1</p>
lower12Bit	<p>The low byte is included in the implicit CRC calculation, the low nibble of the high byte is transmitted along with the data (i.e. it is explicitly included), the high nibble of the high byte is not used. This is applicable for the IDs up to 12 bits.</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=2</p>
lower8Bit	<p>Only low byte is included, high byte is never used. This is applicable if the IDs in a particular system are 8 bits.</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=3</p>

**Table 7.27: DataIdModeEnum**

<b>Class</b>	<b>E2EProfileCompatibilityProps</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer
<b>Note</b>	<p>This meta-class collects settings for configuration of the E2E state machine.</p> <p><b>Tags:</b>atp.recommendedPackage=E2EProfileCompatibilityPropsCollection</p>





<b>Class</b>	<b>E2EProfileCompatibilityProps</b>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
transitToInvalidExtended	Boolean	0..1	attr	E2E State machine behavior concerning transition from NODATA/INIT to INVALID  value=0 (false): no direct transition from NODATA to INVALID, no transition from INIT to INVALID due to counter-related faults (Autosar R19-11 or former behavior)  value=1 (true): direct transition from NODATA to INVALID covered, transition from INIT to INVALID due to counter-related faults covered (state machine extended)

**Table 7.28: E2EProfileCompatibilityProps**

<b>Enumeration</b>	<b>EndToEndProfileBehaviorEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer
<b>Note</b>	Behavior of the check functionality
<b>Aggregated by</b>	<a href="#">EndToEndTransformationDescription.profileBehavior</a>
<b>Literal</b>	<b>Description</b>
PRE_R4_2	Check has the legacy behavior, before AUTOSAR Release 4.2. <b>Tags:</b> atp.EnumerationLiteralIndex=0
R4_2	Check behaves like new P4/P5/P6 profiles introduced in AUTOSAR Release 4.2. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 7.29: EndToEndProfileBehaviorEnum**

<b>Class</b>	<<atpVariation>> <b>EndToEndTransformationSignalProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	Holds all the ISignal specific attributes for the EndToEndTransformer.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Describable</a> , <a href="#">TransformationISignalProps</a>			
<b>Aggregated by</b>	<a href="#">ISignal.transformationISignalProps</a> , <a href="#">ISignalGroup.transformationISignalProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataId (ordered)	PositiveInteger	*	attr	This represents a unique numerical identifier.  Note: ID is used for protection against masquerading. The details concerning the maximum number of values (this information is specific for each E2E profile) applicable for this attribute are controlled by a semantic constraint that depends on the category of the EndToEnd Protection.
dataLength	PositiveInteger	0..1	attr	Length of payload and E2E header in bits.
maxDataLength	PositiveInteger	0..1	attr	Maximum length of payload and E2E header in bits.
minDataLength	PositiveInteger	0..1	attr	Minimum length of payload and E2E header in bits.





Class	<<atpVariation>> EndToEndTransformationISignalProps			
sourceId	PositiveInteger	0..1	attr	<p>This attribute represents a unique numerical identifier identifying the source of a certain transmission. In case of C/S communication, this ID uniquely identifies the client.</p> <p>Note: ID is used for protection against masquerading. The details concerning the maximum number of values (this information is specific for each E2E profile) applicable for this attribute are controlled by a semantic constraint that depends on the category of the EndToEnd Protection.</p>

**Table 7.30: EndToEndTransformationISignalProps**

**[constr\_5229] Existence of attribute `E2EProfileCompatibilityProps.transitToInvalidExtended` is mandatory for each `EndToEndTransformationDescription`** [For each `EndToEndTransformationDescription`, a reference to `E2EProfileCompatibilityProps` in the role `e2eProfileCompatibilityProps` shall exist and the referenced `E2EProfileCompatibilityProps` shall define a value for the attribute `transitToInvalidExtended`.]()

**[constr\_3313] E2E transformer configuration** [For each `TransformationDescription` variant that is a `EndToEndTransformationDescription`

- attribute `protocol` of `TransformationTechnology` shall be set to `E2E`
- attribute `version` of `TransformationTechnology` shall be set to `1.0.0`
- attribute `transformerClass` of `TransformationTechnology` shall be set to `safety`

]()

**[TPS\_SYST\_02067] E2E profile** [The E2E profile is defined by `EndToEndTransformationDescription.profileName`.] ([RS\\_SYST\\_00056](#))

**[TPS\_SYST\_02073] `EndToEndTransformationDescription.profileName`** [ `EndToEndTransformationDescription.profileName` can have the following values: `PROFILE_01`, `PROFILE_02`, `PROFILE_04`, `PROFILE_05`, `PROFILE_06`, `PROFILE_07`, `PROFILE_08`, `PROFILE_08m`, `PROFILE_11`, `PROFILE_22`, `PROFILE_04m`, `PROFILE_07m`, `PROFILE_44`, and `PROFILE_44m`.] ([RS\\_SYST\\_00056](#))

**[TPS\_SYST\_02072] `profileName` of `EndToEndTransformationDescription`** [The values for the `profileName` of `EndToEndTransformationDescription` mentioned in [\[TPS\\_SYST\\_02073\]](#) are standardized and reserved for being used in the way the AUTOSAR standard foresees. In addition, it is positively possible to use other than the standardized values for the `profileName`.] ([RS\\_SYST\\_00056](#))

The setting of the `EndToEndTransformationDescription.profileName` has an influence on the upper- and lower multiplicities of certain attributes of `EndToEndTransformationDescription` and `EndToEndTransformationISignalProps`.

**[constr\_3185] Multiplicity of `EndToEndTransformationDescription.dataIdMode` in PROFILE\_01 and PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute is set to PROFILE\_01 or PROFILE\_11 then the multiplicity of the `EndToEndTransformationDescription.dataIdMode` attribute shall be 1.]()

**[constr\_3186] Multiplicity of `EndToEndTransformationDescription.dataIdMode` in PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44 and PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute is set to a value of PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, or PROFILE\_44m then the multiplicity of the `EndToEndTransformationDescription.dataIdMode` attribute shall be 0.]()

**[constr\_3326] Allowed values for `EndToEndTransformationDescription.dataIdMode` in PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_11 then the value of the `EndToEndTransformationDescription.dataIdMode` attribute shall be set to `all16Bit` or `lower12Bit`.]()

**[constr\_3187] Multiplicity of `EndToEndTransformationDescription.counterOffset` in PROFILE\_01 and PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute is set to PROFILE\_01 or PROFILE\_11 then the multiplicity of the `EndToEndTransformationDescription.counterOffset` attribute shall be 1.]()

**[constr\_3188] Multiplicity of `EndToEndTransformationDescription.counterOffset` in PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, and PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute is set to a value of PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, or PROFILE\_44m then the multiplicity of the `EndToEndTransformationDescription.counterOffset` attribute shall be 0.]()

**[constr\_3189] Multiplicity of `EndToEndTransformationDescription.crcOffset` in PROFILE\_01 and PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute is set to PROFILE\_01 or PROFILE\_11 then the multiplicity of the `EndToEndTransformationDescription.crcOffset` attribute shall be 1.]()

**[constr\_3190] Multiplicity of `EndToEndTransformationDescription.crcOffset` in PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44 and PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute is set to a value of PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, or PROFILE\_44m then the multiplicity of the `EndToEndTransformationDescription.crcOffset` attribute shall be 0.]()



`profileName` attribute is set to a value of PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, or PROFILE\_44m then the multiplicity of the `EndToEndTransformationDescription.crcOffset` attribute shall be 0.>()

**[constr\_3193] Multiplicity of `EndToEndTransformationDescription.offset` in PROFILE\_01 and PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute is set to PROFILE\_01 or PROFILE\_11 then the multiplicity of the `EndToEndTransformationDescription.offset` attribute shall be 0.>()

**[constr\_3194] Multiplicity of `EndToEndTransformationDescription.offset` in PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44 and PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute is set to a value PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44 or PROFILE\_44m then the multiplicity of the `EndToEndTransformationDescription.offset` attribute shall be 1.>()

**[constr\_3191] Multiplicity of `EndToEndTransformationDescription.dataIdNibbleOffset` in PROFILE\_01, PROFILE\_11 and `dataIdMode` equal to `lower12Bit`** [If the `EndToEndTransformationDescription.profileName` attribute is set to PROFILE\_01 or PROFILE\_11 and the value of the `EndToEndTransformationDescription.dataIdMode` attribute is set to `lower12Bit` then the multiplicity of the `EndToEndTransformationDescription.dataIdNibbleOffset` attribute shall be 1.>()

**[constr\_3192] Multiplicity of `EndToEndTransformationDescription.dataIdNibbleOffset` in PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, and PROFILE\_44m or `dataIdMode` different from `lower12Bit`** [If the `EndToEndTransformationDescription.profileName` attribute is set to a value of PROFILE\_02, PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, or PROFILE\_44m or the `EndToEndTransformationDescription.dataIdMode` attribute is set to value different from `lower12Bit` then the multiplicity of the `EndToEndTransformationDescription.dataIdNibbleOffset` attribute shall be 0.>()

**[constr\_3148] `executeDespiteDataUnavailability` setting in case an E2E Transformer is used** [A transformer chain using E2E shall be configured with `DataTransformation.executeDespiteDataUnavailability = TRUE`.]()

**[constr\_3149] `TransformationTechnology.needsOriginalData` settings for E2E Transformer** [The `TransformationTechnology.needsOriginalData` attribute of a `TransformationTechnology` element of an E2E transformer shall be set to FALSE.]()



**[constr\_3151] BufferProperties.headerLength settings for an E2E transformer used in combination with a SOME/IP transformer** [The `BufferProperties.headerLength` for an E2E transformer located in a transformer chain with a SOME/IP transformer shall be configured with the following values depending on the value of the `EndToEndTransformationDescription.profileName` attribute:

1. PROFILE\_01: `BufferProperties.headerLength` = 16 bits
2. PROFILE\_02: `BufferProperties.headerLength` = 16 bits
3. PROFILE\_04: `BufferProperties.headerLength` = 96 bits
4. PROFILE\_05: `BufferProperties.headerLength` = 24 bits
5. PROFILE\_06: `BufferProperties.headerLength` = 40 bits
6. PROFILE\_07: `BufferProperties.headerLength` = 160 bits
7. PROFILE\_08: `BufferProperties.headerLength` = 128 bits
8. PROFILE\_11: `BufferProperties.headerLength` = 16 bits
9. PROFILE\_22: `BufferProperties.headerLength` = 16 bits
10. PROFILE\_04m: `BufferProperties.headerLength` = 128 bits
11. PROFILE\_07m: `BufferProperties.headerLength` = 192 bits
12. PROFILE\_08m: `BufferProperties.headerLength` = 160 bits
13. PROFILE\_44: `BufferProperties.headerLength` = 96 bits
14. PROFILE\_44m: `BufferProperties.headerLength` = 128 bits

]()

This means that the E2E header in profiles 1 and 2 use 2 bytes when using SOME/IP transformer. This yields four unused bits in case of some recommended configuration settings of Profile 1 and 2. Those unused bits are set to 0xF by the E2E transformer on the sender side.

**[constr\_3153] E2E header field reservation required by COM Based transformer** [A COM Based transformer that is used in a transformer chain with an E2E transformer requires that the following amount of space is allocated for the E2E header fields using a proper `ISignalGroup` layout according to [TPS\_SYST\_02068]:

**PROFILE\_01:** if `dataIdMode` == `lower12Bit`: 16 bits

**PROFILE\_01:** if `dataIdMode` != `lower12Bit`: 12 bits

**PROFILE\_02:** 16 bits

**PROFILE\_04:** 96 bits

**PROFILE\_05:** 24 bits

**PROFILE\_06:** 40 bits

**PROFILE\_07:** 160 bits

**PROFILE\_08:** 128 bits

**PROFILE\_11:** if `dataIdMode == lower12Bit`: 16 bits

**PROFILE\_11:** if `dataIdMode == all16Bit`: 12 bits

**PROFILE\_22:** 16 bits

**PROFILE\_04m:** 128 bits

**PROFILE\_07m:** 192 bits

**PROFILE\_08m:** 160 bits

**PROFILE\_44:** 96 bits

**PROFILE\_44m:** 128 bits

]()

**[constr\_3184]** Only one `EndToEndTransformationISignalProps.dataId` element in **PROFILE\_01** and **PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_01** or **PROFILE\_11** then the multiplicity of the `EndToEndTransformationISignalProps.dataId` attribute shall be 1.]()

**[constr\_3156]** Allowed values for `EndToEndTransformationISignalProps.dataId` in **PROFILE\_01** and **PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_01** or **PROFILE\_11** then the value of the `EndToEndTransformationISignalProps.dataId` attribute shall be in the range of 0-65535.]()

**[constr\_3157]** Allowed values for `EndToEndTransformationISignalProps.dataId` in **PROFILE\_01** and **PROFILE\_11** in case `dataIdMode` is set to **lower12Bit** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_01** or **PROFILE\_11** and the value of `EndToEndTransformationDescription.dataIdMode` attribute has a value of **lower12Bit** then the value of the `EndToEndTransformationISignalProps.dataId` attribute shall be in the range of 256-65535.]()

**[constr\_3158]** Allowed values for `EndToEndTransformationDescription.maxDeltaCounter` in **PROFILE\_01** and **PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_01** or **PROFILE\_11** then the attribute `maxDeltaCounter` shall be in the range 1-14.]()

**[constr\_3195]** Allowed values for `EndToEndTransformationDescription.maxDeltaCounter` in **PROFILE\_02** and **PROFILE\_22** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_02** or **PROFILE\_22** then the attribute `maxDeltaCounter` shall be in the range 1-15.]()

[constr\_3159] Allowed values for **EndToEndTransformationDescription.maxDeltaCounter** in **PROFILE\_04**, **PROFILE\_04m**, **PROFILE\_44** and **PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_04**, **PROFILE\_04m**, **PROFILE\_44**, or **PROFILE\_44m** the value of `maxDeltaCounter` attribute shall be in the range 1-65535.]()

[constr\_3196] Allowed values for **EndToEndTransformationDescription.maxDeltaCounter** in **PROFILE\_05** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_05** then the attribute `maxDeltaCounter` shall be in the range 1-255.]()

[constr\_3197] Allowed values for **EndToEndTransformationDescription.maxDeltaCounter** in **PROFILE\_06** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_06** then the attribute `maxDeltaCounter` shall be in the range 1-255.]()

[constr\_3316] Allowed values for **EndToEndTransformationDescription.maxDeltaCounter** in **PROFILE\_07**, **PROFILE\_08**, **PROFILE\_07m** and **PROFILE\_08m** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_07**, **PROFILE\_08**, **PROFILE\_07m**, or **PROFILE\_08m** the value of `maxDeltaCounter` attribute shall be in the range 1-4'294'967'295.]()

[constr\_3160] **EndToEndTransformationISignalProps.dataId** in **PROFILE\_02** and **PROFILE\_22** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_02** or **PROFILE\_22** then the multiplicity of the `dataId` attribute shall be 16 and the value of each instance shall be in the range 0..255.]()

[constr\_5220] Multiplicity of **EndToEndTransformationISignalProps.sourceId** in **PROFILE\_04m**, **PROFILE\_07m**, **PROFILE\_08m** and **PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute is set to **PROFILE\_04m**, **PROFILE\_07m**, **PROFILE\_08m**, or **PROFILE\_44m** then the multiplicity of the `EndToEndTransformationISignalProps.sourceId` attribute shall be 1.]()

[constr\_5221] Multiplicity of **EndToEndTransformationISignalProps.sourceId** in **PROFILE\_01**, **PROFILE\_02**, **PROFILE\_04**, **PROFILE\_05**, **PROFILE\_06**, **PROFILE\_07**, **PROFILE\_11**, and **PROFILE\_22** [If the `EndToEndTransformationDescription.profileName` attribute is set to **PROFILE\_01**, **PROFILE\_02**, **PROFILE\_04**, **PROFILE\_05**, **PROFILE\_06**, **PROFILE\_07**, **PROFILE\_11**, or **PROFILE\_22** then the multiplicity of the `EndToEndTransformationISignalProps.sourceId` attribute shall be 0.]()

[constr\_3161] **EndToEndTransformationISignalProps.dataLength** in **PROFILE\_01**, **PROFILE\_02**, **PROFILE\_05**, **PROFILE\_11**, **PROFILE\_22** [If the `EndToEndTransformationDescription.profileName` attribute has a value of **PROFILE\_01**, **PROFILE\_02**, **PROFILE\_05**, **PROFILE\_11**, or **PROFILE\_22** then the multiplicity of the `EndToEndTransformationISignalProps.dataLength` attribute shall be 1.]()

[constr\_3162] **EndToEndTransformationISignalProps.minDataLength** and **EndToEndTransformationISignalProps.maxDataLength** in **PROFILE\_01**, **PROFILE\_02**, **PROFILE\_05**, **PROFILE\_11**, **PROFILE\_22** [If the **EndToEndTransformationDescription.profileName** attribute has a value of **PROFILE\_01**, **PROFILE\_02**, **PROFILE\_05**, **PROFILE\_11**, or **PROFILE\_22** then the multiplicity of the attributes **EndToEndTransformationISignalProps.minDataLength** and **EndToEndTransformationISignalProps.maxDataLength** shall be 0.]()

[constr\_3163] **EndToEndTransformationISignalProps.minDataLength** and **EndToEndTransformationISignalProps.maxDataLength** in **PROFILE\_04**, **PROFILE\_06**, **PROFILE\_07**, **PROFILE\_08**, **PROFILE\_04m**, **PROFILE\_07m**, **PROFILE\_08m**, **PROFILE\_44**, and **PROFILE\_44m** [If the **EndToEndTransformationDescription.profileName** attribute has a value of **PROFILE\_04**, **PROFILE\_06**, **PROFILE\_07**, **PROFILE\_08**, **PROFILE\_04m**, **PROFILE\_07m**, **PROFILE\_08m**, **PROFILE\_44**, or **PROFILE\_44m** then the multiplicity of the attributes **EndToEndTransformationISignalProps.minDataLength** and **EndToEndTransformationISignalProps.maxDataLength** shall be 1.]()

[constr\_3164] **EndToEndTransformationISignalProps.dataLength** in **PROFILE\_04**, **PROFILE\_06**, **PROFILE\_07**, **PROFILE\_08**, **PROFILE\_04m**, **PROFILE\_07m**, **PROFILE\_08m**, **PROFILE\_44** and **PROFILE\_44m** [If the **EndToEndTransformationDescription.profileName** attribute has a value of **PROFILE\_04**, **PROFILE\_06**, **PROFILE\_07**, **PROFILE\_08**, **PROFILE\_04m**, **PROFILE\_07m**, **PROFILE\_08m**, **PROFILE\_44**, or **PROFILE\_44m** then the multiplicity of the attribute **EndToEndTransformationISignalProps.dataLength** shall be 0.]()

[constr\_3533] **EndToEndTransformationISignalProps.dataLength** shall be a multiple of 8 [The value of **EndToEndTransformationISignalProps.dataLength**, **EndToEndTransformationISignalProps.maxDataLength**, and **EndToEndTransformationISignalProps.minDataLength** shall be a multiple of 8.]()

[constr\_3155] Allowed values for **EndToEndTransformationDescription.upperHeaderBitsToShift** [The value of of the **EndToEndTransformationDescription.upperHeaderBitsToShift** attribute depends on the used serializing transformer:

**COM based transformer:** 0 (no bits are shifted)

**SOME/IP transformer:** 64 (to support the header shift of SOME/IP).

**Custom transformer:** no restriction (depends on header length and placement of custom transformer)

]()

**[constr\_3165] Effect of `EndToEndTransformationDescription.upperHeaderBitsToShift` value in PROFILE\_01, PROFILE\_11** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_01 or PROFILE\_11 and the serializing transformer is different than the ComBasedTransformer then:

1. `EndToEndTransformationDescription.crcOffset` shall be set to the same value of `upperHeaderBitsToShift`.
2. `EndToEndTransformationDescription.counterOffset` shall be set to the value of `upperHeaderBitsToShift + 8`.
3. (if used) `EndToEndTransformationDescription.dataIdNibbleOffset` shall be set to the value of `upperHeaderBitsToShift + 12`.

]()

**[constr\_3327] Effect of `EndToEndTransformationDescription.upperHeaderBitsToShift` value in PROFILE\_22** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_22 and the serializing transformer is different than the ComBasedTransformer, then `EndToEndTransformationDescription.offset` shall be set to the same value of `upperHeaderBitsToShift`.]()

This means that the E2E header of profile 1 and profile 11, when used with SOME/IP Transformer or a Custom Transformer, is not spread across application data, but is a consecutive block of bytes. The layout flexibility available with these E2E protection profiles is therefore only supported if the ComBasedTransformer is used in combination with the E2E Transformer.

**[constr\_3166] `EndToEndTransformationDescription.upperHeaderBitsToShift` in PROFILE\_02** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_02 then the value of the `upperHeaderBitsToShift` attribute shall be 0.]()

**[constr\_3169] `EndToEndTransformationDescription.offset` value in PROFILE\_02 and PROFILE\_22** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_02 or PROFILE\_22 then the value of the `EndToEndTransformationDescription.offset` attribute shall be 0.]()

**[constr\_3167] Effect of `EndToEndTransformationDescription.upperHeaderBitsToShift` value in PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, and PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, or PROFILE\_44m the value of the `EndToEndTransformationDescription.offset` attribute shall be equal to the value of the `EndToEndTransformationDescription.upperHeaderBitsToShift` attribute.]()

**[TPS\_SYST\_02194] Identification of E2E protected data in case of PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44, and PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44m or PROFILE\_44 the E2E protected data is identified by a `EndToEndTransformationISignalProps.dataId`.]()

In other words if a `SystemSignal` defines the E2E protected data and a fanout is described by several `ISignals` that point to this `SystemSignal`, the `dataId` in each of those `ISignals` may have the same value.

**[constr\_3172] Effect of `EndToEndTransformationDescription.profileBehavior` value in PROFILE\_01** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_01 and the value of the `profileBehavior` attribute is R4\_2 then:

- the value of the `EndToEndTransformationDescription.maxNoNewOrRepeatedData` attribute shall be 14.
- the value of the `EndToEndTransformationDescription.syncCounterInit` attribute shall be 1.

]()

**[constr\_3173] Effect of `EndToEndTransformationDescription.profileBehavior` value in PROFILE\_02** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_02 and the value of the `profileBehavior` attribute is R4\_2 then:

- the value of the `EndToEndTransformationDescription.maxNoNewOrRepeatedData` attribute shall be 15.
- the value of the `EndToEndTransformationDescription.syncCounterInit` attribute shall be 1.

]()

**[constr\_3174] `EndToEndTransformationDescription` settings not allowed in PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_11, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44 and PROFILE\_44m** [If the `EndToEndTransformationDescription.profileName` attribute has a value of PROFILE\_04, PROFILE\_05, PROFILE\_06, PROFILE\_07, PROFILE\_08, PROFILE\_11, PROFILE\_22, PROFILE\_04m, PROFILE\_07m, PROFILE\_08m, PROFILE\_44 or PROFILE\_44m then:

1. the multiplicity of the `EndToEndTransformationDescription.maxNoNewOrRepeatedData` attribute shall be 0.
2. the multiplicity of the `EndToEndTransformationDescription.syncCounterInit` attribute shall be 0.



3. the multiplicity of the `EndToEndTransformationDescription.profileBehavior` attribute shall be 0.

]()

The `EndToEndTransformationDescription` may be differently chosen for a given `ISignal` or `ISignalGroup` depending on selected variant, with the following exceptions:

**[constr\_3182] Restriction on `TransformationTechnology.transformationDescriptionVariationPoint`** [The `EndToEndTransformationDescription.profileName` attribute shall not be subject to variability for a given `ISignal` / `ISignalGroup`, i.e., the value of the `EndToEndTransformationDescription.profileName` attribute shall be the same in all different variants.]()

In other words, it is not possible that in one variant PROFILE\_04 is used, and in another variant PROFILE\_05 is used for the same `ISignal` or `ISignalGroup`.

#### 7.3.4.1 E2E state machine settings

E2E state machine settings are set in `EndToEndTransformationDescription` and a subset of them can be overridden in `EndToEndTransformationComSpecProps`. The E2E state machine is described in more detail in the E2E Protocol specification [40].

Please note that the configuration of the E2E state machines with the configuration attributes available in `EndToEndTransformationDescription` is restricted by [PRS\_E2E\_CONSTR\_03176], [PRS\_E2E\_CONSTR\_03177], [PRS\_E2E\_CONSTR\_03178], [PRS\_E2E\_CONSTR\_03179], [PRS\_E2E\_CONSTR\_03180], [PRS\_E2E\_CONSTR\_03181] defined in [40].

#### 7.3.4.2 E2E recommended configuration settings

This chapter provides different configuration settings for particular E2E Profiles. Please note that in future additional recommended configuration settings might be added.

##### 7.3.4.2.1 E2E Profile 1 configuration setting C

**Caveat:** The E2E wrapper approach involves technologies that are not subjected to the AUTOSAR standard and is superseded by the superior E2E transformer approach (which is fully standardized by AUTOSAR). Hence, new projects (without legacy constraints due to carry-over parts) shall use the fully standardized E2E transformer approach.

The E2E Profile 1 configuration setting C is foreseen for CAN/FlexRay messages that are serialized by the COM based transformer and should be used with RTE event-based communication, i.e. queued communication with queue size = 1, using Rte\_Send / Rte\_Receive.

**[TPS\_SYST\_02069] Recommended configuration settings for E2E Profile 1 configuration setting C** [The recommended configuration settings for E2E Profile 1 configuration setting C are defined in [Table 7.31.](#)] ([RS\\_SYST\\_00056](#))

Attribute	Allowed value	Comment
EndToEndTransformationDescription.profileName	PROFILE_01	Profile 1
EndToEndTransformationDescription.crcOffset	0	CRC offset
EndToEndTransformationDescription.counterOffset	8	Counter offset
EndToEndTransformationDescription.dataIdNibbleOffset	12	Data Id high nibble offset
EndToEndTransformationDescription.maxDeltaCounter	2	Maximum jump considered to be OK is 2, i.e. one lost message.
EndToEndTransformationDescription.minOkStateInit	1	At least one OK message
EndToEndTransformationDescription.maxErrorStateInit	1	One error allowed
EndToEndTransformationDescription.windowSizeValid	3	Last 3 messages are considered
EndToEndTransformationDescription.windowSizeInvalid	3	Last 3 messages are considered
EndToEndTransformationDescription.windowSizeInit	2	Last 2 messages are considered
EndToEndTransformationDescription.minOkStateValid	1	At least one OK message
EndToEndTransformationDescription.maxErrorStateValid	1	One error allowed
EndToEndTransformationDescription.minOkStateInvalid	2	At least two OK messages
EndToEndTransformationDescription.maxErrorStateInvalid	1	One error allowed
EndToEndTransformationDescription.upperHeaderBitsToShift	0	no bits are shifted
BufferProperties.headerLength	16	16 bits is the length of E2E profile 1C header.
EndToEndTransformationDescription.profileBehavior	R4_2	Behavior of Profile P1 adjusted for the state machine.
EndToEndTransformationDescription.maxNoNewOrRepeatedData	14	Behavior of Profile P1 adjusted for the state machine.
EndToEndTransformationDescription.syncCounterInit	1	Behavior of Profile P1 adjusted for the state machine.

**Table 7.31: Configuration of E2E Profile 1 configuration setting C**

### 7.3.4.2.2 E2E Profile 4 configuration setting A

The E2E Profile 4 configuration setting A is foreseen for long messages that are serialized by the SOME/IP transformer. The configuration setting 4A should be used with RTE event-based communication, i.e. queued communication with queue size = 1, using Rte\_Send / Rte\_Receive.



This configuration setting is quite strict as it does not allow any errors, i.e.:

1. Repetitions
2. Counter jumps bigger than 1.
3. Errors not related to counters (e.g. CRC, data ID, length)

As soon as any error is detected, there is a transition to invalid state.

**[TPS\_SYST\_02070] Recommended configuration settings for E2E Profile 4 configuration setting A** [The recommended configuration settings for E2E Profile 4 configuration setting A are defined in [Table 7.32.](#)] (*RS\_SYST\_00056*)

Attribute	Allowed value	Comment
EndToEndTransformationDescription.profileName	PROFILE_04	Profile 4
EndToEndTransformationDescription.offset	64	To support the fixed location of Some/IP header
EndToEndTransformationDescription.maxDeltaCounter	1	Maximum jump considered to be OK is 1
EndToEndTransformationDescription.minOkStateInit	1	received message shall be OK.
EndToEndTransformationDescription.maxErrorStateInit	0	No errors allowed
EndToEndTransformationDescription.windowSizeValid	1	Only the last message is considered
EndToEndTransformationDescription.windowSizeInvalid	1	Only the last message is considered
EndToEndTransformationDescription.windowSizeInit	2	The two last messages are considered
EndToEndTransformationDescription.minOkStateValid	1	received message shall be OK.
EndToEndTransformationDescription.maxErrorStateValid	0	No errors allowed
EndToEndTransformationDescription.minOkStateInvalid	1	received message shall be OK.
EndToEndTransformationDescription.maxErrorStateInvalid	0	No errors allowed
EndToEndTransformationDescription.upperHeaderBitsToShift	64	64 bits from Some/IP header to be shifted
BufferProperties.headerLength	96	96 bits is the length of E2E profile 4 header.

**Table 7.32: Configuration of E2E configuration setting 4A**

### 7.3.4.2.3 E2E Profile 4 configuration setting B

The E2E Profile 4 configuration setting B is foreseen for long messages that are serialized by the SOME/IP transformer. The configuration setting 4B should be used with RTE event-based communication, i.e. queued communication with queue size = 1, using Rte\_Send / Rte\_Receive.

This configuration setting requires having within the monitoring window the following properties:

1. At least one OK message
2. At most one error not related to counters (e.g. CRC, data ID, length)
3. the remaining data in the monitoring window may be
  - repetitions or
  - jumps above 1.

As soon as any error is detected, there is a transition to invalid state.

**[TPS\_SYST\_02071] Recommended configuration settings for E2E Profile 4 configuration setting B** [The recommended configuration settings for E2E Profile 4 configuration setting B are defined in [Table 7.33.](#)] ([RS\\_SYST\\_00056](#))

Attribute	Allowed value	Comment
<code>EndToEndTransformationDescription.profileName</code>	PROFILE_04	Profile 4
<code>EndToEndTransformationDescription.offset</code>	64	To support the fixed location of Some/IP header
<code>EndToEndTransformationDescription.maxDeltaCounter</code>	2	Maximum jump considered to be OK is 2, i.e. one lost message
<code>EndToEndTransformationDescription.minOkStateInit</code>	1	At least one OK message
<code>EndToEndTransformationDescription.maxErrorStateInit</code>	1	One error allowed
<code>EndToEndTransformationDescription.windowSizeValid</code>	3	Last 3 messages are considered
<code>EndToEndTransformationDescription.windowSizeInvalid</code>	3	Last 3 messages are considered
<code>EndToEndTransformationDescription.windowSizeInit</code>	2	Last 2 messages are considered
<code>EndToEndTransformationDescription.minOkStateValid</code>	1	At least one OK message
<code>EndToEndTransformationDescription.maxErrorStateValid</code>	1	One error allowed
<code>EndToEndTransformationDescription.minOkStateInvalid</code>	2	At least two OK messages
<code>EndToEndTransformationDescription.maxErrorStateInvalid</code>	1	One error allowed
<code>EndToEndTransformationDescription.upperHeaderBitsToShift</code>	64	64 bits from Some/IP header to be shifted
<code>BufferProperties.headerLength</code>	96	96 bits is the length of E2E profile 4 header.

**Table 7.33: Configuration of E2E Profile 4 configuration setting B**

#### 7.3.4.2.4 E2E Profile 5

The E2E Profile 5 configuration setting is foreseen for legacy communication and for messages that are serialized by the SOME/IP transformer. The configuration setting should be used with RTE event-based communication, i.e. queued communication with queue size = 1, using `Rte_Send` / `Rte_Receive`.

This configuration setting requires having within the monitoring window the following properties:

1. At least one OK message in a window of 2
2. At most one error not related to counters (e.g. wrong CRC, data ID, or length)
3. At most one repetition or jump above 2

**[TPS\_SYST\_02379] Recommended configuration settings for E2E Profile 5 configuration setting** [The recommended configuration settings for E2E Profile 5 are defined in [Table 7.34.](#)] (*RS\_SYST\_00056*)

Attribute	Allowed value	Comment
<code>EndToEndTransformationDescription.profileName</code>	PROFILE_05	Profile 5
<code>EndToEndTransformationDescription.offset</code>	64	To support the fixed location of Some/IP header
<code>EndToEndTransformationDescription.maxDeltaCounter</code>	2	Maximum jump considered to be OK is 2
<code>EndToEndTransformationDescription.minOkStateInit</code>	1	At least one OK message
<code>EndToEndTransformationDescription.maxErrorStateInit</code>	1	One error allowed
<code>EndToEndTransformationDescription.windowSizeValid</code>	2	Last 2 messages are considered
<code>EndToEndTransformationDescription.windowSizeInvalid</code>	2	Last 2 messages are considered
<code>EndToEndTransformationDescription.windowSizeInit</code>	2	Last 2 messages are considered
<code>EndToEndTransformationDescription.minOkStateValid</code>	1	At least one OK message
<code>EndToEndTransformationDescription.maxErrorStateValid</code>	1	One error allowed
<code>EndToEndTransformationDescription.minOkStateInvalid</code>	1	At least one OK message
<code>EndToEndTransformationDescription.maxErrorStateInvalid</code>	1	One error allowed
<code>EndToEndTransformationDescription.upperHeaderBitsToShift</code>	64	64 bits from Some/IP header to be shifted
<code>BufferProperties.headerLength</code>	24	24 bits is the length of E2E profile 5 header.

**Table 7.34: Configuration of E2E Profile 5 configuration setting**

### 7.3.4.2.5 E2E Profile 7 configuration setting A

The E2E Profile 7 configuration setting A is foreseen for long messages (up to 4 MB) that are serialized by the SOME/IP transformer.

This configuration setting is quite strict as it does not allow any errors, i.e.:

1. Repetitions
2. Counter jumps bigger than 1.
3. Errors not related to counters (e.g. CRC, data ID, length)

As soon as any error is detected, there is a transition to invalid state.

**[TPS\_SYST\_02134] Recommended configuration settings for E2E Profile 7 configuration setting A** [The recommended configuration settings for E2E Profile 7 configuration setting A are defined in [Table 7.35.](#)] ([RS\\_SYST\\_00056](#))

Attribute	Allowed value	Comment
<code>EndToEndTransformationDescription.profileName</code>	PROFILE_07	Profile 7
<code>EndToEndTransformationDescription.offset</code>	64	To support the fixed location of Some/IP header
<code>EndToEndTransformationDescription.maxDeltaCounter</code>	1	Maximum jump considered to be OK is 1
<code>EndToEndTransformationDescription.minOkStateInit</code>	1	received message shall be OK.
<code>EndToEndTransformationDescription.maxErrorStateInit</code>	0	No errors allowed
<code>EndToEndTransformationDescription.windowSizeValid</code>	1	Only the last message is considered
<code>EndToEndTransformationDescription.windowSizeInvalid</code>	1	Only the last message is considered
<code>EndToEndTransformationDescription.windowSizeInit</code>	2	Only the last two messages are considered
<code>EndToEndTransformationDescription.minOkStateValid</code>	1	received message shall be OK.
<code>EndToEndTransformationDescription.maxErrorStateValid</code>	0	No errors allowed
<code>EndToEndTransformationDescription.minOkStateInvalid</code>	1	received message shall be OK.
<code>EndToEndTransformationDescription.maxErrorStateInvalid</code>	0	No errors allowed
<code>EndToEndTransformationDescription.upperHeaderBitsToShift</code>	64	64 bits from Some/IP header to be shifted
<code>BufferProperties.headerLength</code>	160	160 bits is the length of E2E profile 7 header.

**Table 7.35: Configuration of E2E Profile 7 configuration setting A**

### 7.3.4.2.6 E2E Profile 7 configuration setting B

The E2E Profile 7 configuration setting B is foreseen for long messages (up to 4 MB) that are serialized by the SOME/IP transformer.

This configuration setting requires having within the monitoring window the following properties:

1. At least one OK message
2. At most one error not related to counters (e.g. CRC, data ID, length)
3. the remaining data in the monitoring window may be
  - repetitions or
  - jumps above 1.

As soon as any error is detected, there is a transition to invalid state.

**[TPS\_SYST\_02135] Recommended configuration settings for E2E Profile 7 configuration setting B** [The recommended configuration settings for E2E Profile 7 configuration setting B are defined in [Table 7.36.](#)] ([RS\\_SYST\\_00056](#))

Attribute	Allowed value	Comment
EndToEndTransformationDescription.profileName	PROFILE_07	Profile 7
EndToEndTransformationDescription.offset	64	To support the fixed location of Some/IP header
EndToEndTransformationDescription.maxDeltaCounter	2	Maximum jump considered to be OK is 2, i.e. one lost message
EndToEndTransformationDescription.minOkStateInit	1	At least one OK message
EndToEndTransformationDescription.maxErrorStateInit	1	One error allowed
EndToEndTransformationDescription.windowSizeValid	3	Last 3 messages are considered
EndToEndTransformationDescription.windowSizeInvalid	3	Last 3 messages are considered
EndToEndTransformationDescription.windowSizeInit	2	Last 2 messages are considered
EndToEndTransformationDescription.minOkStateValid	1	At least one OK message
EndToEndTransformationDescription.maxErrorStateValid	1	One error allowed
EndToEndTransformationDescription.minOkStateInvalid	2	At least two OK messages
EndToEndTransformationDescription.maxErrorStateInvalid	1	One error allowed
EndToEndTransformationDescription.upperHeaderBitsToShift	64	64 bits from Some/IP header to be shifted
BufferProperties.headerLength	160	160 bits is the length of E2E profile 7 header.

**Table 7.36: Configuration of E2E Profile 7 configuration setting B**

#### 7.3.4.2.7 E2E Profile 11 configuration setting C

The E2E Profile 11 configuration setting C is foreseen for CAN/FlexRay messages that are serialized by the COM based transformer and should be used with RTE event-based communication, i.e. queued communication with queue size = 1, using Rte\_Send / Rte\_Receive.

**[TPS\_SYST\_02155] Recommended configuration settings for E2E Profile 11 configuration setting C** [The recommended configuration settings for E2E Profile 11 configuration setting C are defined in [Table 7.37.](#)] ([RS\\_SYST\\_00056](#))

Attribute	Allowed value	Comment
EndToEndTransformationDescription.profileName	PROFILE_11	Profile 11
EndToEndTransformationDescription.crcOffset	0	CRC offset
EndToEndTransformationDescription.counterOffset	8	Counter offset
EndToEndTransformationDescription.dataIdNibbleOffset	12	Data Id high nibble offset
EndToEndTransformationDescription.maxDeltaCounter	2	Maximum jump considered to be OK is 2, i.e. one lost message.

Attribute	Allowed value	Comment
EndToEndTransformationDescription.minOkStateInit	1	At least one OK message
EndToEndTransformationDescription.maxErrorStateInit	1	One error allowed
EndToEndTransformationDescription.windowSizeValid	3	Last 3 messages are considered
EndToEndTransformationDescription.windowSizeInvalid	3	Last 3 messages are considered
EndToEndTransformationDescription.windowSizeInit	2	Last 2 messages are considered
EndToEndTransformationDescription.minOkStateValid	1	At least one OK message
EndToEndTransformationDescription.maxErrorStateValid	1	One error allowed
EndToEndTransformationDescription.minOkStateInvalid	2	At least two OK messages
EndToEndTransformationDescription.maxErrorStateInvalid	1	One error allowed
EndToEndTransformationDescription.upperHeaderBitsToShift	0	no bits are shifted
BufferProperties.headerLength	16	16 bits is the length of E2E profile 1C header.

**Table 7.37: Configuration of E2E Profile 11 configuration setting C**

### 7.3.4.2.8 E2E Profile 4m configuration setting A

The E2E Profile 4m configuration setting A is foreseen for long messages that are serialized by e.g. the SOME/IP transformer.

This configuration setting is quite strict as it does not allow any errors, i.e.:

1. Repetitions
2. Counter jumps bigger than 1 at the source side
3. Errors not related to counters (e.g. CRC, data ID, length)

As soon as any error is detected, there is a transition to invalid state.

**[TPS\_SYST\_02349] Recommended configuration settings for E2E Profile 4m configuration setting A** [The recommended configuration settings for E2E Profile 4m configuration setting A are defined in [Table 7.38.](#)] (*RS\_SYST\_00056*)

Attribute	Allowed value	Comment
EndToEndTransformationDescription.profileName	PROFILE_04m	Profile 4m
EndToEndTransformationDescription.offset	0	Header added by the serializing transformer (e.g., SOME/IP transformer) is not included in CRC calculation
EndToEndTransformationDescription.maxDeltaCounter - source (client)	1	Maximum jump considered to be OK is 1 for the source side
EndToEndTransformationDescription.maxDeltaCounter - sink (server)	$2^{16} - 1$	No counter-based checks on the sink side
EndToEndTransformationDescription.minOkStateInit	1	received message shall be OK.

Attribute	Allowed value	Comment
<a href="#">EndToEndTransformationDescription.maxErrorStateInit</a>	0	No errors allowed
<a href="#">EndToEndTransformationDescription.windowSizeValid</a>	1	Only the last message is considered
<a href="#">EndToEndTransformationDescription.windowSizeInvalid</a>	1	Only the last message is considered
<a href="#">EndToEndTransformationDescription.windowSizeInit</a>	2	The two last messages are considered
<a href="#">EndToEndTransformationDescription.minOkStateValid</a>	1	received message shall be OK.
<a href="#">EndToEndTransformationDescription.maxErrorStateValid</a>	0	No errors allowed
<a href="#">EndToEndTransformationDescription.minOkStateInvalid</a>	1	received message shall be OK.
<a href="#">EndToEndTransformationDescription.maxErrorStateInvalid</a>	0	No errors allowed
<a href="#">EndToEndTransformationDescription.upperHeaderBitsToShift</a>	x	depends on the length of the header added by the serializing transformer (e.g., 64 in case of the SOME/IP transformer)
<a href="#">BufferProperties.headerLength</a>	128	128 bits is the length of E2E profile 4m header.

**Table 7.38: Configuration of E2E Profile 4m configuration setting A**

Please note that the `ISignal` that represents the `ClientServerOperation` request shall refer an `EndToEndTransformationDescription` that defines the `maxDeltaCounter` for the sink. The `ISignal` that represents the `ClientServerOperation` response shall refer an `EndToEndTransformationDescription` that defines the `maxDeltaCounter` for the source.

### 7.3.4.2.9 E2E Profile 7m configuration setting A

The E2E Profile 7m configuration setting A is foreseen for long messages (up to 4 MB) that are serialized by e.g. the SOME/IP transformer.

This configuration setting is quite strict as it does not allow any errors, i.e.:

1. Repetitions
2. Counter jumps bigger than 1 at the source side
3. Errors not related to counters (e.g. CRC, data ID, length)

As soon as any error is detected, there is a transition to invalid state.

**[TPS\_SYST\_02350] Recommended configuration settings for E2E Profile 7m configuration setting A** [The recommended configuration settings for E2E Profile 7m configuration setting A are defined in [Table 7.39.](#)] ([RS\\_SYST\\_00056](#))

Attribute	Allowed value	Comment
<a href="#">EndToEndTransformationDescription.profileName</a>	PROFILE_07m	Profile 7m

Attribute	Allowed value	Comment
<code>EndToEndTransformationDescription.offset</code>	0	Header added by the serializing transformer (e.g., SOME/IP transformer) is not included in CRC calculation
<code>EndToEndTransformationDescription.maxDeltaCounter</code> - source (client)	1	Maximum jump considered to be OK is 1 for the source side
<code>EndToEndTransformationDescription.maxDeltaCounter</code> - sink (server)	$2^{32} - 1$	No counter-based checks on the sink side
<code>EndToEndTransformationDescription.minOkStateInit</code>	1	received message shall be OK.
<code>EndToEndTransformationDescription.maxErrorStateInit</code>	0	No errors allowed
<code>EndToEndTransformationDescription.windowSizeValid</code>	1	Only the last message is considered
<code>EndToEndTransformationDescription.windowSizeInvalid</code>	1	Only the last message is considered
<code>EndToEndTransformationDescription.windowSizeInit</code>	2	Only the last two messages are considered
<code>EndToEndTransformationDescription.minOkStateValid</code>	1	received message shall be OK.
<code>EndToEndTransformationDescription.maxErrorStateValid</code>	0	No errors allowed
<code>EndToEndTransformationDescription.minOkStateInvalid</code>	1	received message shall be OK.
<code>EndToEndTransformationDescription.maxErrorStateInvalid</code>	0	No errors allowed
<code>EndToEndTransformationDescription.upperHeaderBitsToShift</code>	x	depends on the length of the header added by the serializing transformer (e.g., 64 in case of the SOME/IP transformer)
<code>BufferProperties.headerLength</code>	192	192 bits is the length of E2E profile 7m header.

**Table 7.39: Configuration of E2E Profile 7m configuration setting A**

Please note that the `ISignal` that represents the `ClientServerOperation` request shall refer an `EndToEndTransformationDescription` that defines the `maxDeltaCounter` for the sink. The `ISignal` that represents the `ClientServerOperation` response shall refer an `EndToEndTransformationDescription` that defines the `maxDeltaCounter` for the source.



### 7.3.5 UserDefined Transformer

Autosar allows to describe custom Transformers that are not standardized by AUTOSAR. This is done by the usage of the following elements:

- [UserDefinedTransformationDescription](#)
- [UserDefinedTransformationISignalProps](#)
- [UserDefinedTransformationProps](#)

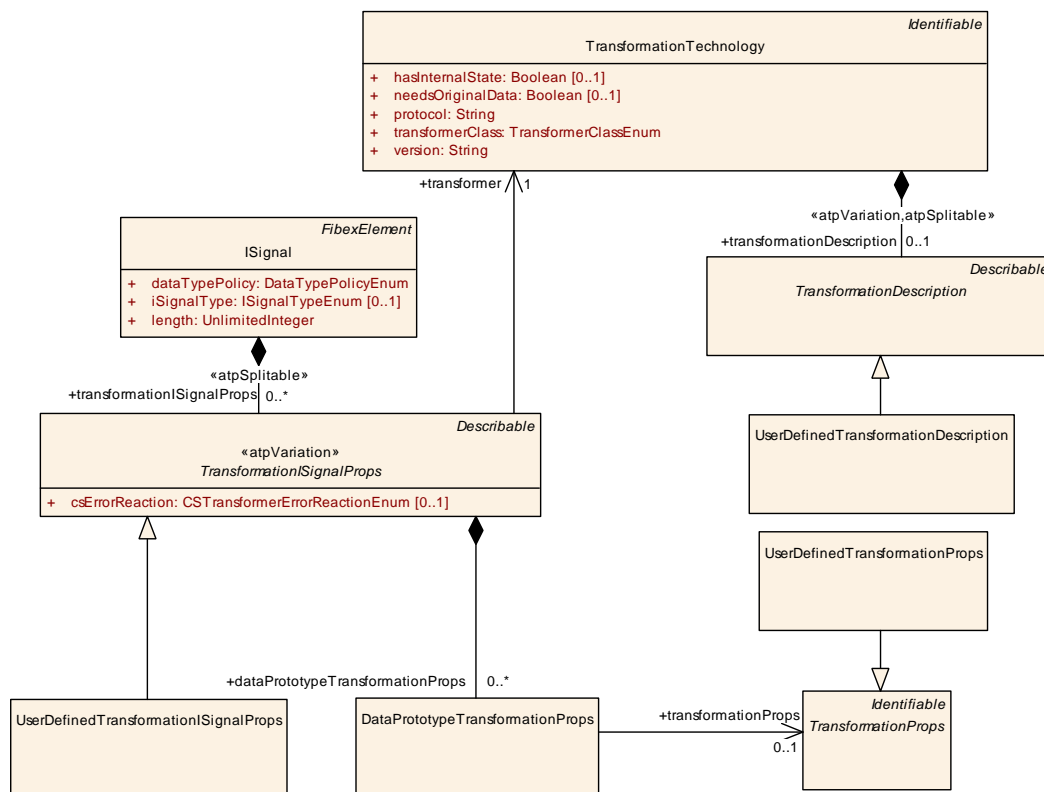


Figure 7.22: User Defined Transformation configuration

Please note that all these UserDefined classes are [Identifiable](#) or [Describable](#) and therefore are able to describe special data (sdg) which is not represented by the standard model.

<b>Class</b>	<<atpVariation>> <b>UserDefinedTransformationISignalProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	The UserDefinedTransformationISignalProps is used to specify ISignal specific configuration properties for custom transformers.			
<b>Base</b>	ARObject, <a href="#">Describable</a> , <a href="#">TransformationISignalProps</a>			
<b>Aggregated by</b>	<a href="#">ISignal.transformationISignalProps</a> , <a href="#">ISignalGroup.transformationISignalProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

Table 7.40: UserDefinedTransformationISignalProps

<b>Class</b>	<b>UserDefinedTransformationProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	The class UserDefinedTransformationProps specifies specific configuration properties of a user defined serializer.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a> , <a href="#">TransformationProps</a>			
<b>Aggregated by</b>	<a href="#">TransformationPropsSet.transformationProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table 7.41: UserDefinedTransformationProps**

### 7.3.6 Support for TLV Encoding

AUTOSAR supports the usage of the so-called *Tag-Length-Value* (TLV) encoding. The following sub-sections explain the details and the extent of the support for TLV encoding.

#### 7.3.6.1 Assignment of TLV Data Ids

**[TPS\_SYST\_05016] Assignment of TLV data ids** [The assignment of TLV data ids is done in the context of the specification of [SOMEIPTransformationISignalProps](#), namely by means of the attribute [SOMEIPTransformationISignalProps.tlvDataIdDefinition.tlvDataIdDefinition.id](#).] ([RS\\_SYST\\_00058](#))

This approach takes benefit from the fact that the [TlvDataIdDefinition](#) is able to create references to relevant model elements.

The assignment of the TLV data id is therefore done by creating such a reference and assigning a TLV data id to it by means of the attribute [TlvDataIdDefinition.id](#).

Please note that the assignment of TLV data ids is compulsory for an entire data structure that has at least one optional member. In a nutshell, this conclusion (that is also backed by [PRS\_SOMEIP\_00230], see [19]) is the motivation for the existence of [[constr\\_1641](#)] and [[constr\\_1642](#)].

Please note further that the assignment of TLV data ids is not restricted to data structures with optional members. There is also a use case to support sending the elements of a specific data structure in arbitrary order even if none of the elements is considered optional.

Moreover, TLV data ids can also be assigned to arguments of a [ClientServerOperation](#). Using TLV data ids for arguments supports that arguments can be sent in arbitrary order and that new arguments can be added at arbitrary positions during the evolution of the interface. Note that optional arguments are not supported.

**[TPS\_SYST\_02378] Optional method arguments** [AUTOSAR Classic platform does not support the existence of optional method arguments.] ()

The reason for the restriction in [TPS\_SYST\_02378] is that the RTE does not have an API to handle optional method arguments.

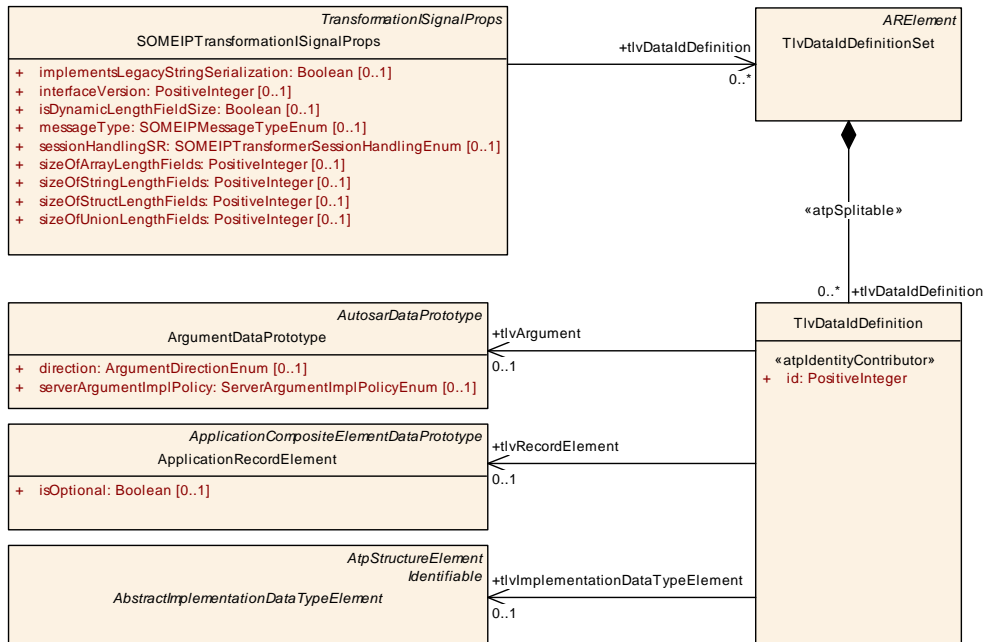


Figure 7.23: Definition of data ids for the TLV encoding inside a SOME/IP message

To sum it up: the usage of TLV data ids and optional members are two different features. Optional members require the usage of TLV data ids, but TLV data ids can also be used without having optional members.

<b>Class</b>	<b>TlvDataIdDefinitionSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	This meta-class acts as a container of TlvDataIdDefinitions to be used in a given context <b>Tags:</b> atp.recommendedPackage=TlvDataDefinitionSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
tlvDataIdDefinition	<a href="#">TlvDataIdDefinition</a>	*	aggr	This aggregation represents the collection of TlvDataIdDefinitions aggregated by the TlvDataIdDefinitionSet <b>Stereotypes:</b> atpSplittable <b>Tags:</b> atp.Splitkey=tlvDataIdDefinition.id

Table 7.42: TlvDataIdDefinitionSet

<b>Class</b>	<b>TlvDataIdDefinition</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	This meta-class represents the ability to define the tlvDataId.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">TlvDataIdDefinitionSet.tlvDataIdDefinition</a>			





Class	TlvDataIdDefinition			
Attribute	Type	Mult.	Kind	Note
id	PositiveInteger	1	attr	This attribute represents the definition of the value of the TlvDataId <b>Stereotypes:</b> atpIdentityContributor
tlvArgument	<a href="#">ArgumentDataPrototype</a>	0..1	ref	This reference assigns a tlvDataId to a given argument of a ClientServerOperation.
tlvImplementationDataTypeElement	AbstractImplementationDataTypeElement	0..1	ref	This reference associates the definition of a TLV data id with a given AbstractImplementationDataTypeElement.
tlvRecordElement	<a href="#">ApplicationRecordElement</a>	0..1	ref	This reference associates the definition of a TLV data id with a given ApplicationRecordElement.

**Table 7.43: TlvDataIdDefinition**

**[TPS\_SYST\_02211] Reference from [SOMEIPTransformationISignalProps](#) to [TlvDataIdDefinitionSet](#)** [The reference from [SOMEIPTransformationISignalProps](#) to [TlvDataIdDefinitionSet](#) means that it is in the hand of the creator of a model to decide whether a global scope should be assumed or whether the definition needs to be customized for a specific case.] ([RS\\_SYST\\_00058](#))

**[constr\_1641] Consistent assignment of TLV data ids to [ApplicationRecordDataType](#)** [For every [ApplicationRecordDataType](#) where direct members set the attribute [ApplicationRecordElement.isOptional](#) to the value `True` references to all direct members of this [ApplicationRecordDataType](#) shall be created on the basis of the definition of [TlvDataIdDefinition](#).] ()

**[constr\_1642] Consistent assignment of TLV data ids to [ImplementationDataType](#) or [ImplementationDataTypeElement](#)** [For every [ImplementationDataType](#) or [ImplementationDataTypeElement](#) of category `STRUCTURE` where direct members set the attribute [ImplementationDataTypeElement.isOptional](#) to the value `True` references to all direct members of this [ImplementationDataType](#) resp [ImplementationDataTypeElement](#) shall be created on the basis of the definition of [TlvDataIdDefinition](#).] ()

The definition of a [TlvDataIdDefinition](#) that refers to an eligible model element is not limited to scenarios where optional elements are defined. It is also possible to define [TlvDataIdDefinition](#) for arbitrary methods or data structures.

A typical use case could be to prepare the argument list or sub-elements for future extensions. However, if one argument or sub-element is referenced then it is necessary to define references from [TlvDataIdDefinitions](#) to all other arguments or sub-elements as well.

**[constr\_5111] Existence of references [TlvDataIdDefinition.tlvArgument](#), [TlvDataIdDefinition.tlvRecordElement](#), and [TlvDataIdDefinition.tlvImplementationDataTypeElement](#)** [For each [TlvDataIdDefinition](#), only one out of the following references shall exist:

- reference to [ArgumentDataPrototype](#) in the role `tlvArgument`

- reference to `ApplicationRecordElement` in the role `tlvRecordElement`
- reference to `ImplementationDataTypeElement` in the role `tlvImplementationDataTypeElement`.

]()

**[constr\_1643] Completeness of the existence of a set of `TlvDataIdDefinition`.**

**tlvArguments** [If the reference `TlvDataIdDefinition.tlvArguments` exists for one `argument` of a given `ClientServerOperation` then further `TlvDataIdDefinition.tlvArguments` shall exist for all `arguments` of the given `ClientServerOperation` and all affected `TlvDataIdDefinitions` shall be referenced by the same `SOMEIPTransformationISignalProps` via `TlvDataIdDefinitionSet`.]

()

**[constr\_1644] Completeness of the existence of a set of `TlvDataIdDefinition`.**

**tlvRecordElements** [If the reference `TlvDataIdDefinition.tlvRecordElement` exists for one element of a given `ApplicationRecordDataType` then further `TlvDataIdDefinition.tlvRecordElement` shall exist for all elements of the given `ApplicationRecordDataType` and all affected `TlvDataIdDefinitions` shall be referenced by the same `SOMEIPTransformationISignalProps` via `TlvDataIdDefinitionSet`.]

()

**[constr\_1645] Completeness of the existence of a set of `TlvDataIdDefinition`.**

**tlvImplementationDataTypeElements** [Completeness of the existence of a set of `TlvDataIdDefinition.tlvImplementationDataTypeElements` If the reference `TlvDataIdDefinition.tlvImplementationDataTypeElement` exists for one `subElement` of a given `ImplementationDataType` or `ImplementationDataTypeElement` then further `TlvDataIdDefinition.tlvImplementationDataTypeElement` shall exist for all `subElements` of the given `ImplementationDataType` or `ImplementationDataTypeElement` and all affected `TlvDataIdDefinitions` shall be referenced by the same `SOMEIPTransformationISignalProps` via `TlvDataIdDefinitionSet`.]

()

The definition of a `TlvDataIdDefinition.id` has the purpose to provide means to unambiguously identify the argument or sub-element. For this purpose, the value of the id needs to be unique in the respective context.

**[constr\_1646] Scope of the uniqueness of the value of `TlvDataIdDefinition`.**

**id for references to `ArgumentDataPrototype`** [For all `TlvDataIdDefinition` that are referencing `ArgumentDataPrototypes` of a given `ClientServerOperation` in the role `tlvArgument` the attribute `TlvDataIdDefinition.id` shall exist and have a unique value in the context of respective `arguments` of the enclosing `ClientServerOperation` where attribute `direction` is set to the value `in/inout` or `out/inout`.

Note: an `argument` where attribute `direction` is set to the value `in` may have the same data id as an `argument` where attribute `direction` is set to the value `out` since the two are transferred in separate messages.]()

**[constr\_1647] Scope of the uniqueness of the value of `TlvDataIdDefinition.id` for references to `ApplicationRecordElement`** [For all `TlvDataIdDefinition` that are referencing `ApplicationRecordElements` of a given `ApplicationDataType` in the role `tlvRecordElement` the attribute `TlvDataIdDefinition.id` shall exist and have a unique value in the context of respective enclosing `ApplicationRecordDataType`.]()

**[constr\_1648] Scope of the uniqueness of the value of `TlvDataIdDefinition.id` for references to `ImplementationDataTypeElement`** [For all `TlvDataIdDefinition` that are referencing `ImplementationDataTypeElements` of a given `ImplementationDataType/ImplementationDataTypeElement` in the role `tlvImplementationDataTypeElement` the attribute `TlvDataIdDefinition.id` shall exist and have a unique value in the context of respective enclosing `ImplementationDataType` or `ImplementationDataTypeElement`.]()

Obviously, it is necessary to avoid ambiguity with respect to the definition of TLV data ids. Each model element that can be assigned such an id shall only be assigned one id.

**[constr\_1649] `TlvDataIdDefinition` referencing `ArgumentDataPrototype`** [Each `ArgumentDataPrototype` shall be referenced at most once in the role `tlvArgument` in the context of the same `SOMEIPTransformationISignalProps`.]()

**[constr\_1650] `TlvDataIdDefinition` referencing `ApplicationRecordElement`** [Each `ApplicationRecordElement` shall be referenced at most once in the role `tlvRecordElement` in the context of the same `SOMEIPTransformationISignalProps`.]()

**[constr\_1651] `TlvDataIdDefinition` referencing `ImplementationDataTypeElement`** [Each `ImplementationDataTypeElement` shall be referenced at most once in the role `tlvImplementationDataTypeElement` in the context of the same `SOMEIPTransformationISignalProps`.]()

As depicted in Figure 7.23, the meta-model supports the `TlvDataIdDefinition` to refer both to an `ApplicationRecordElement` as well as an `ImplementationDataTypeElement`.

In a typical case either the one or the other reference will be used and there is intentionally no constraint to explicitly use both references in a concrete model.

It would mean a significant markup in real-world AUTOSAR models to explicitly require that `TlvDataIdDefinitions` shall exist that assign concrete ids to both a given `ApplicationRecordDataType` as well as the mapped `ImplementationDataType`.

However, scenarios are conceivable that the assignment of TLV data ids may be done based on `ApplicationDataType` plus `networkRepresentationProps` on one end of the communication and based on `ImplementationDataType` on the other end.

In this case, a constraint to keep TLV data ids in sync between `ApplicationDataType` and `ImplementationDataType` would not even be helpful because either side might not know about the actual data type used as the basis of the creation of the Transformer at the other end.

Nevertheless, if both an `ApplicationDataType` and the mapped `ImplementationDataType` are annotated with TLV data ids within the same model then the associated values shall obviously be identical for corresponding sub-elements.

### 7.3.6.2 Assignment of TLV Wire Type

The TLV encoding supports the definition of a so-called wire type that controls how the information about the length of length fields shall be interpreted. The meaning of specific settings of the wire type is defined in [19].

**[TPS\_SYST\_05017] Definition of the applicable wire type attribute `SOMEIPTransformationISignalProps.isDynamicLengthFieldSize` shall be used to define the applicable wire type** [If the value of attribute `SOMEIPTransformationISignalProps.isDynamicLengthFieldSize` is set to `True` then **wire type 5-7** shall be used.

If the value of attribute `SOMEIPTransformationISignalProps.isDynamicLengthFieldSize` does not exist or is set to `False` then **wire type 4** shall be used.] (*RS\_SYST\_00058*)

**[constr\_1652] Definition of static length fields sizes in case of TLV usage** [If `TlvDataIdDefinitions` are defined for a `SOMEIPTransformationISignalProps`, the attributes `sizeOfArrayLengthFields`, `sizeOfStructLengthFields`, `sizeOfStringLengthFields` and `sizeOfUnionLengthFields` shall be greater than 0.]()

Rationale for the existence of [constr\_1652]: The TLV serialization requires the usage of length fields. If wire type 4 is used the length field size shall be statically configured.

If wire types 5-7 (dynamic length field size) are used the static configuration of the length field size shall also be present since not all length fields are preceded by a tag, e.g. structures contained in an array or the top-level struct contained in a SOME/IP event. Not using length fields here would result in ambiguities.

**[constr\_1653] Identical values for length fields sizes in case of TLV usage** [If `TlvDataIdDefinitions` are defined for a `SOMEIPTransformationISignalProps`, the attributes `sizeOfArrayLengthFields`, `sizeOfStructLengthFields`, `sizeOfStringLengthFields` and `sizeOfUnionLengthFields` shall have an identical value.]()

Rationale for the existence of [constr\_1653]: if an unknown member or argument is encountered the deserializer cannot determine the actual datatype of the member/argument when wire type 4 is used.



**[constr\_1654] No definition of length field sizes on `DataPrototype` level in case of TLV usage** [If `TlvDataIdDefinitions` are defined for a `SOMEIPTransformationISignalProps`, the attributes `sizeofArrayLengthFields`, `sizeofStructLengthFields` and `sizeofUnionLengthFields` shall not be defined on `DataPrototype` level but only on `ISignal` level.]()

Rationale for the existence of `[constr_1654]`: if an unknown member or argument is encountered the deserializer needs to know the size of the length field when wire type 4 is used. The easiest way is that the size of the length field is then only defined at the top-level element.



## 8 Gateways

A gateway is a function within an `EcuInstance` that performs as a `FrameMapping`, `IPduMapping` or `ISignalMapping` function between two or more `CommunicationClusters`.

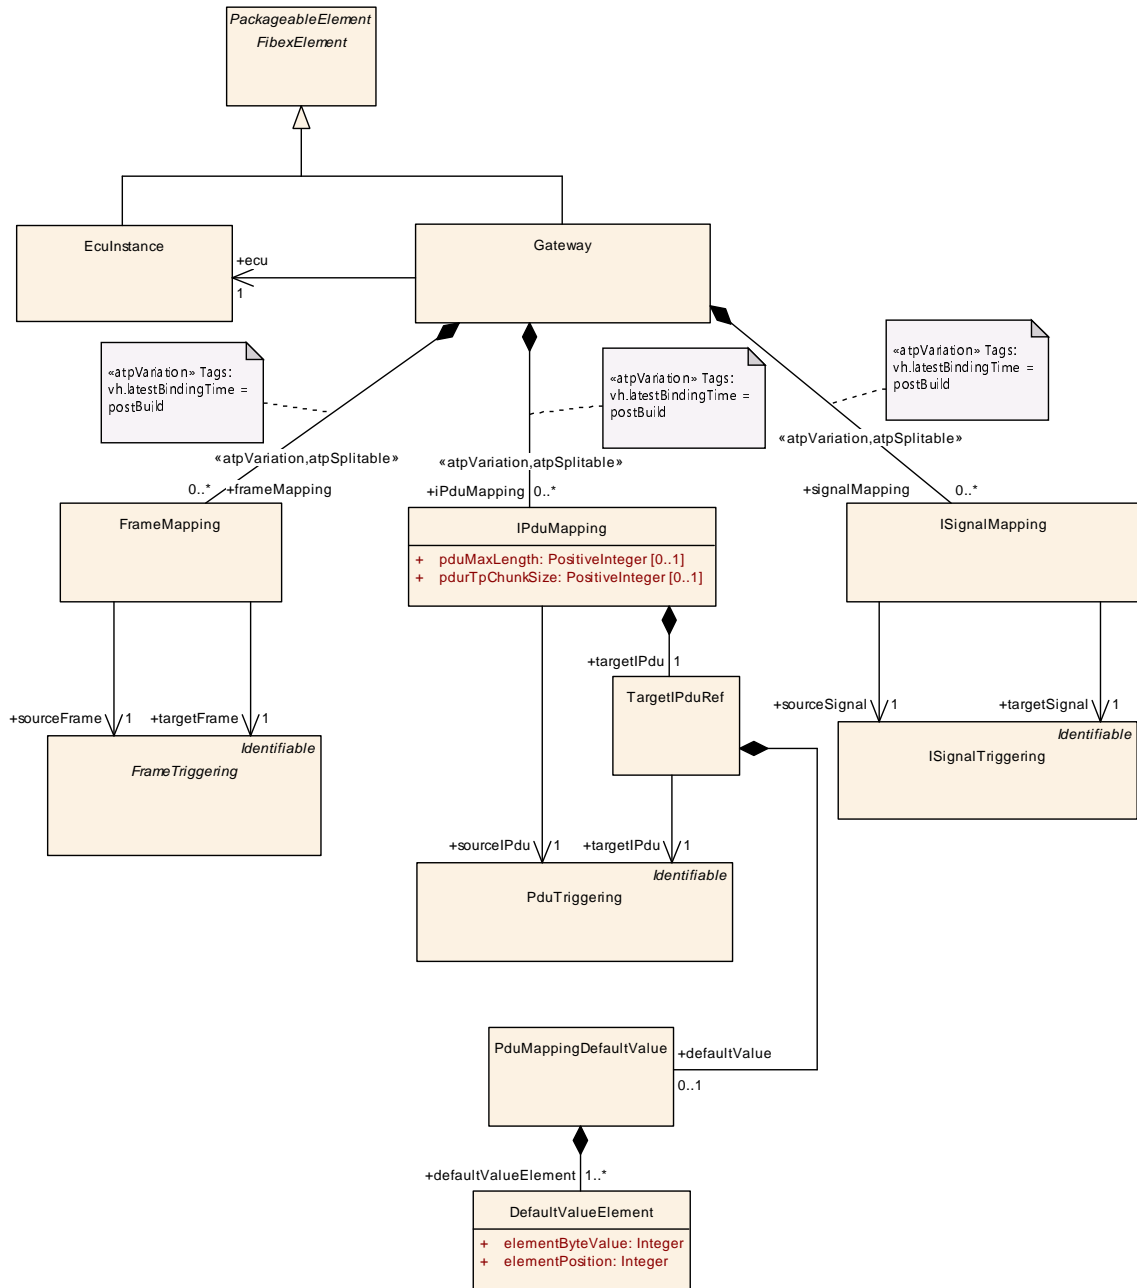


Figure 8.1: Communication Overview (Fibex4Multiplatform: Gateway)

Figure 8.1 shows the meta-model for the Gateway description in the System Template.

<b>Class</b>	<b>Gateway</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Multiplatform			
<b>Note</b>	A gateway is an ECU that is connected to two or more clusters (channels, but not redundant), and performs a frame, Pdu or signal mapping between them. <b>Tags:</b> atp.recommendedPackage=Gateways			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ecu	EculInstance	1	ref	Reference to one ECU instance that implements the gateway.
frameMapping	FrameMapping	*	aggr	Frame Gateway: The entire source frame is mapped as it is onto the target frame (what in general is only possible inside of a common platform). In this case source and target frame should be the identical object.  atpVariation: If frames are variable in clusters, the gateway frame mapping needs to be variable, too.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=frameMapping, frameMapping.variation Point.shortLabel vh.latestBindingTime=postBuild
iPduMapping	IPduMapping	*	aggr	IPdu Gateway: Arranges those IPdus that are transferred by the gateway from one channel to the other in pairs and defines the mapping between them.  atpVariation: If PDUs are variable in clusters, the gateway PDU mapping needs to be variable, too.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=iPduMapping, iPduMapping.variation Point.shortLabel vh.latestBindingTime=postBuild
signalMapping	ISignalMapping	*	aggr	Signal Gateway: Arranges those signals that are transferred by the gateway from one channel to the other in pairs and defines the mapping between them.  atpVariation: If signals are variable in clusters, the gateway signal mapping needs to be variable, too.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=signalMapping, signalMapping.variation Point.shortLabel vh.latestBindingTime=postBuild


**Table 8.1: Gateway**

## 8.1 Frame Mapping

The `FrameMapping` arranges those `FrameTriggerings` that are transferred by the `Gateway` from one `PhysicalChannel` to the other in pairs and defines the mapping between them. Each pair consists of a `sourceFrame` and a `targetFrame` referencing to a `FrameTriggering`.

**[TPS\_SYST\_01116] Frame Mapping is not supported by the AUTOSAR BSW** [The `FrameMapping` is not supported by the AUTOSAR BSW.] ()

The existence is optional and has been incorporated into the System Template mainly for compatibility in order to allow interchange between FIBEX and AUTOSAR descriptions.

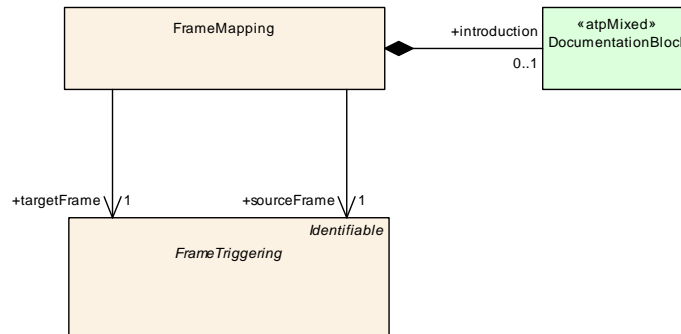

**Figure 8.2: Frame Mapping (Fibex4Multiplatform: FrameMapping)**

<b>Class</b>	<b>FrameMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Multiplatform			
<b>Note</b>	<p>The entire source frame is mapped as it is onto the target frame (what in general is only possible inside of a common platform). In this case source and target frame should be the identical object.</p> <p>Each pair consists in a SOURCE and a TARGET referencing to a FrameTriggering.</p> <p>The Frame Mapping is not supported by the Autosar BSW. The existence is optional and has been incorporated into the System Template mainly for compatibility in order to allow interchange between FIBEX and AUTOSAR descriptions.</p>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	Gateway.frameMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
introduction	DocumentationBlock	0..1	aggr	This represents introductory documentation about the frame mapping.
sourceFrame	<a href="#">FrameTriggering</a>	1	ref	Source destination of the referencing mapping.
targetFrame	<a href="#">FrameTriggering</a>	1	ref	Target destination of the referencing mapping.

**Table 8.2: FrameMapping**

## 8.2 IPdu Mapping

**[TPS\_SYST\_01117] Pdu Gateway support** [The `IPduMapping` arranges those `IPdus` that are transferred by the `Gateway` from one `PhysicalChannel` to the other (or the same) `PhysicalChannel` in pairs and defines the mapping between them. Each pair consist of a `sourceIPdu` and a `targetIPdu` referencing to a `PduTriggering`.]()

For FlexRay: If a `Pdu` is gatewayed to more than one `PhysicalChannel` of the same `CommunicationCluster`, all of this gateway relationships shall be specified. Therefore, all affected `PduTriggerings` shall be referenced in the gateway mappings.

**[TPS\_SYST\_01118] Support of Multicast Pdu routing** [The 1:n multicast routing is supported with the definition of several `IPduMappings` where the `sourceIPdu` refers to the same `PduTriggering`.]()


**[TPS\_SYST\_02143] Support of Multisource Pdu routing** [The n:1 routing is supported with the definition of several `IPduMappings` where the `targetIPdu` refers to the same `PduTriggering`.]()

Please note that in case of n:1 routing by a local module (e.g. COM, Dcm) it shall be enforced at run-time that *at most one* routing path is active (i.e., enabled via `PduR_EnableRouting()`). In case of n:1 routing by a pure gateway routing (either TP or IF) all routing paths can be active at run time.

**[TPS\_SYST\_02207] Routing on the fly** [If routing on the fly is not possible in case:

- there is more than one destination routing path or
- the routing path uses the Interface (IF) API instead of Transport Protocol (TP) API

then `IPduMapping.pdurTpChunkSize` will be ignored in the Ecu configuration.]()

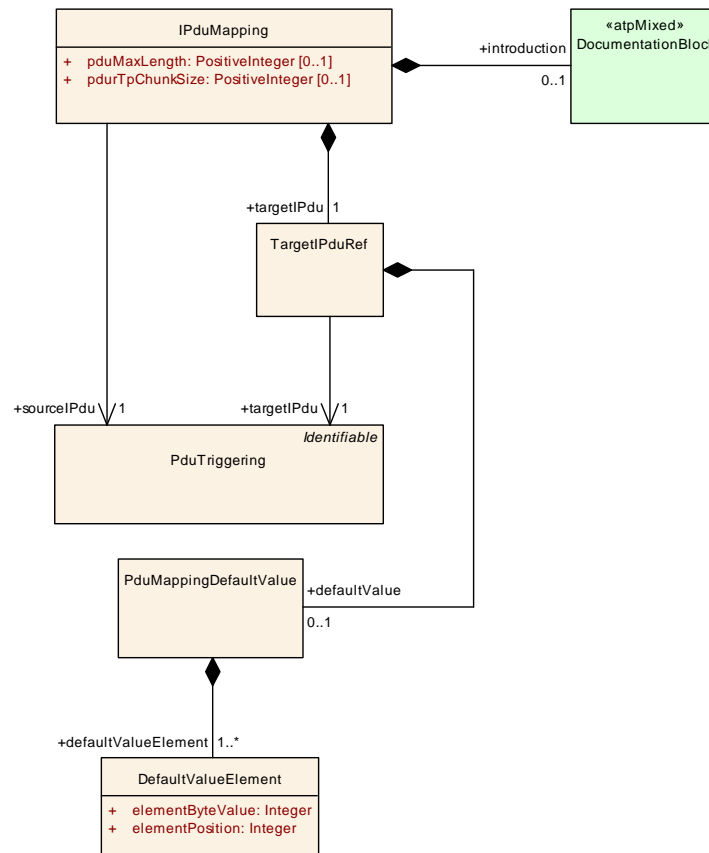

**Figure 8.3: I-Pdu Mapping (Fibex4Multiplatform: IPduMapping)**

<b>Class</b>	<b>IPduMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Multiplatform			
<b>Note</b>	Arranges those IPdus that are transferred by the gateway from one channel to the other in pairs and defines the mapping between them.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	Gateway.IPduMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
introduction	DocumentationBlock	0..1	aggr	This represents introductory documentation about the IPdu mapping.
pduMaxLength	PositiveInteger	0..1	attr	Define the maximum length in bytes which limits the length of the Pdu during gateway operation if the runtime length of the received Pdu exceeds this limit.
pduTpChunkSize	PositiveInteger	0..1	attr	Optionally defines the to be configured Pdu Router Tp ChunkSize for this routing relation.
sourceIPdu	PduTriggering	1	ref	Source destination of the referencing mapping.
targetIPdu	TargetIPduRef	1	aggr	Target destination of the referencing mapping.

**Table 8.3: IPduMapping**

<b>Class</b>	<b>TargetIPduRef</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Multiplatform			
<b>Note</b>	Target destination of the referencing mapping.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	IPduMapping.targetIPdu			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
defaultValue	PduMappingDefaultValue	0..1	aggr	If no I-Pdu has been received a default value will be distributed.
targetIPdu	PduTriggering	1	ref	IPdu Reference

**Table 8.4: TargetIPduRef**

<b>Class</b>	<b>PduMappingDefaultValue</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Multiplatform			
<b>Note</b>	Default Value which will be distributed if no I-Pdu has been received since last sending.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	TargetIPduRef.defaultValue			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
defaultValueElement	DefaultValueElement	1..*	aggr	The default value consists of a number of elements. Each default value element is represented by the element and the position in an array.

**Table 8.5: PduMappingDefaultValue**

<b>Class</b>	<b>DefaultValueElement</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Multiplatform			
<b>Note</b>	The default value consists of a number of elements. Each element is one byte long and the number of elements is specified by SduLength.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	PduMappingDefaultValue.defaultValueElement			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
elementByteValue	Integer	1	attr	The integer value of a freely defined data byte.
elementPosition	Integer	1	attr	This attribute specifies the byte position of the element within the default value

**Table 8.6: DefaultValueElement**

### 8.2.1 Usage of IPduMapping.pduMaxLength

The Pdu gateway can be configured to use [IPduMapping.pduMaxLength](#) as a specific value per gateway operation. This value (if defined) will be used for the length configuration of the involved Pdus in the Ecu Configuration of the COM-Stack. There is no direct 1:1 correspondence of [IPduMapping.pduMaxLength](#) in EcuC, it is reflected in the value of EcuC PduLength only.

The rationale for the existence of [IPduMapping.pduMaxLength](#) is that in the system template the length of a Pdu is defined at the [Pdu.length](#) attribute. The Pdu can be

used in the definition of several `PduTriggerings`. The use-case is to have the possibility to define different ECU Configuration `PduLengths` for each routing operation (`IPduMapping`).

**[TPS\_SYST\_02310] Pdu routing with `IPduMapping.pduMaxLength`** [The attribute `IPduMapping.pduMaxLength` defines a maximum length which shall be forwarded to the destination module by the PduR, if the runtime length of the actually received `Pdu` exceeds `IPduMapping.pduMaxLength`.]()

If the attribute `IPduMapping.pduMaxLength` is defined the value will be derived into the `EcuC PduLength` configuration parameter.

- If the runtime length of the received `Pdu` does not exceed `PduLength` (now configured to the value of `IPduMapping.pduMaxLength`) then the PduR will forward the runtime length of the received `Pdu` to the corresponding `targetIPdu`.
- If the runtime length of the received `Pdu` does exceed `PduLength` (now configured to the value of `IPduMapping.pduMaxLength`) then the PduR will forward the `PduLength` of the received `Pdu` to the corresponding `targetIPdu`.

If the attribute `IPduMapping.pduMaxLength` is not defined then the `Pdu.length` is used to derive the `PduLength` configuration parameter. This corresponds to the normal routing operation.

**[constr\_5166] Existence of `IPduMapping.pduMaxLength`** [If several `IPduMappings` refer to the same `PduTriggering` in `IPduMapping.sourceIPdu`, then all of these `IPduMappings` shall provide either no `IPduMapping.pduMaxLength` value, or the same `IPduMapping.pduMaxLength` value.]()

**[TPS\_SYST\_02311] `IPduMapping.pduMaxLength` relying on the environment length configuration** [`IPduMapping.pduMaxLength` shall not exceed the available amount of free payload bytes in the surrounding `Pdus` or `frames` of `routedPdu`, where `routedPdu` is the `sourceIPdu` or the `targetIPdu`, e.g. if `routedPdu` is contained in a `ContainerIPdu` with (`ContainerIPdu.headerType = shortHeader`), then `IPduMapping.pduMaxLength` shall not exceed (`ContainerIPdu.length - 4`) (4 being the byte length of the short `HeaderId/Length` field)]()

*Example:* `Pdu_A` is transmitted on `CAN_1` network in a CAN-FD frame and forwarded by a gateway as part of a `ContainerIPdu` to `CAN_2` network.

`Pdu_A` in the transmitting ECU\_A (`CAN_1`) has the following configuration:  
`Pdu.length = 9 bytes`.

The routing path to route `Pdu_A` as Contained `IPdu` to `CAN_2` has the following configuration:

- `IPduMapping.pduMaxLength = 60 byte`
- `IPduMapping.sourceIPdu = PduTriggering` referring to `PDU_A`
- `IPduMapping.targetIPdu = refers to PduTriggering` referring to `PDU_B` (`PDU_B` as part of a `ContainerIPdu`)

The length information in the system description are:

- `sourceIPdu.length` = 9 byte
- `targetIPdu.length` = 60 byte (due to `pduMaxLength` = 60 byte).

The gateway has no data length check configured.

Because this is an `IPduMapping` with `pduMaxLength` defined, the specific upstream mapping for the `EcuC PduLength` applies:

In case `IPduMapping` is used:

1:1 (`sourceIPdu:targetIPdu`) routing: When the `SysTPduToPduTriggeringRef PduTriggering` is referenced by an `IPduMapping` in the role `sourceIPdu` or `targetIPdu`, respectively, and that `IPduMapping` has a `pduMaxLength` defined then `IPduMapping.pduMaxLength` shall be used as `PduLength` for the derived `PduRSrcPdu` and `PduRDestPdu`, respectively.

The `PduLength` in Ecu Configuraton of the received and sent `Pdu` is configured to 60 byte.

Thus both, the receiving and the sending path in the gateway Ecu Configuration are prepared to handle a `Pdu` with 60 byte.

- ECU\_A transmits PDU\_A within a CAN-FD frame with a length of actually 12 byte (9 byte payload + 3 byte padding).
- ECU\_B (gateway) receives the CAN-L-PDU and `CanIf` forwards 12 byte to the upper layer as received length.
- `PduR` forwards 12 byte (as the received length is smaller than `IPduMapping.pduMaxLength` of 60 byte)
- `IpduM` packs the received 12 byte payload in the container.

Update scenario: Communication matrix of ECU\_A is updated and payload of PDU\_A is extended to 60 Byte. ECU\_B (gateway) is not updated.

- ECU\_A transmits the extended PDU\_A within a CAN-L-PDU with a length of 64 byte (60 byte payload + 4 byte padding).
- ECU\_B (gateway) receives the CAN-L-PDU, `CanIf` forwards 64 byte to `PduR`.
- `PduR` forwards 60 byte (as the received length is bigger than `IPduMapping.pduMaxLength` of 60 byte) as received length to the `IpduM`.
- `IPduM` packs the shortened 60 byte `Pdu` to the configured `ContainerIPdu`.

**[constr\_5235] Maximum `Frame.frameLength` of the used bus protocol shall not be exceeded** [The `Pdu.length` used for an `IPdu` and the `IPduMapping.pduMaxLength` used for a `targetIPdu` shall not exceed the limitation of the maximum `Frame.frameLength` of the used bus protocol (e.g. CAN2.0 max. `Frame.frameLength` == 8Byte, CAN-FD `Frame.frameLength` == 64byte).]()



**[constr\_5236] Restriction of `IPduMapping.pduMaxLength`** [`IPduMapping.pduMaxLength` shall be equal or greater than the maximum `Pdu.length` of `sourceIPdu` and `targetIPdu`. For a N:1 routing and 1:N routing, respectively, the maximum `Pdu.length` of all involved `Pdus` shall be used to evaluate a proper `IPduMapping.pduMaxLength`.]()

## 8.2.2 Routing and processing of Diagnostics Pcus

An `EcuInstance` routes a source `DcmIPdu` to a destination `DcmIPdu` if there is an `IPduMapping` in place that is configured according to [TPS\_SYST\_01117]. The `EcuInstance` also processes the `DcmIPdu` locally if the source `DcmIPdu` is assigned a functional destination address.

### 8.3 Signal Mapping

**[TPS\_SYST\_01119] Signal Gateway support** [The `ISignalMapping` defines the mapping between `ISignals` and `ISignalGroups` that are transferred by the `Gateway` from one `PhysicalChannel` to the other (or the same) `PhysicalChannel`. Each mapping pair consists of a `sourceSignal` and a `targetSignal` referencing an `ISignalTriggering`. Each `ISignalTriggering` points to either an `ISignal` or an `ISignalGroup`. The `ISignal` refers to the to be routed `SystemSignal`, the `ISignalGroup` refers to the to be routed `SystemSignalGroup`.]()

**[constr\_3051] Restriction of `ISignalMapping` references** [If the `sourceSignal` references an `ISignal` then the `targetSignal` shall also reference an `ISignal`.]()

**[TPS\_SYST\_01155] Routing of `ISignalGroups`** [If the `sourceSignal` references an `ISignalGroup` then the `targetSignal` can reference either an `ISignalGroup` or an `ISignal`.]()

**[constr\_3052] Complete `ISignalMapping` of `ISignalGroup` signals** [If an `ISignalMapping` to an `ISignal` that is a member of a `ISignalGroup` exists then (see [TPS\_SYST\_01120]) an `ISignalMapping` to the enclosing `ISignalGroup` shall exist as well.]()

**[TPS\_SYST\_02162] Routing of `ISignals` of `ISignalGroups`** [When performing a signal group routing two approaches are supported for the pairing of the included `ISignals`:

- implicit mapping: the `ISignalMapping` points in the `sourceSignal` role to an `ISignalTriggering` of an `ISignalGroup` and no `ISignalMappings` are defined for the included `ISignals`. Identical `shortNames` of `ISignal` elements identify correlating `ISignals` between the source and the target in the scope of the `ISignalMapping`.
- explicit mapping: the `ISignalMapping` points in the `sourceSignal` role to an `ISignalTriggering` of an `ISignalGroup` and in addition explicitly specified `ISignalMappings` define which `ISignals` correlate to each other.

]()

Please note that SWS\_COM [22] does not support the “implicit mapping” of [TPS\_SYST\_02162]. Thus it is required in the upstream mapping to derive individual `ISignalMappings` for all the members of a to be routed `ISignalGroup`.

**[TPS\_SYST\_01120] Precedence of `ISignalMappings`** [If a dedicated `ISignalMapping` for at least one `ISignal` within an `ISignalGroup` exists the implicit mapping on the basis of `shortNames` is no longer applicable for any `ISignal` within that `ISignalGroup`.]()

**[TPS\_SYST\_01121] Support of Multicast signal routing** [The 1:n multicast routing is supported with the definition of several `ISignalMappings`. See also the COM Signal Gateway fan-out description in [TPS\_SYST\_01110].]()

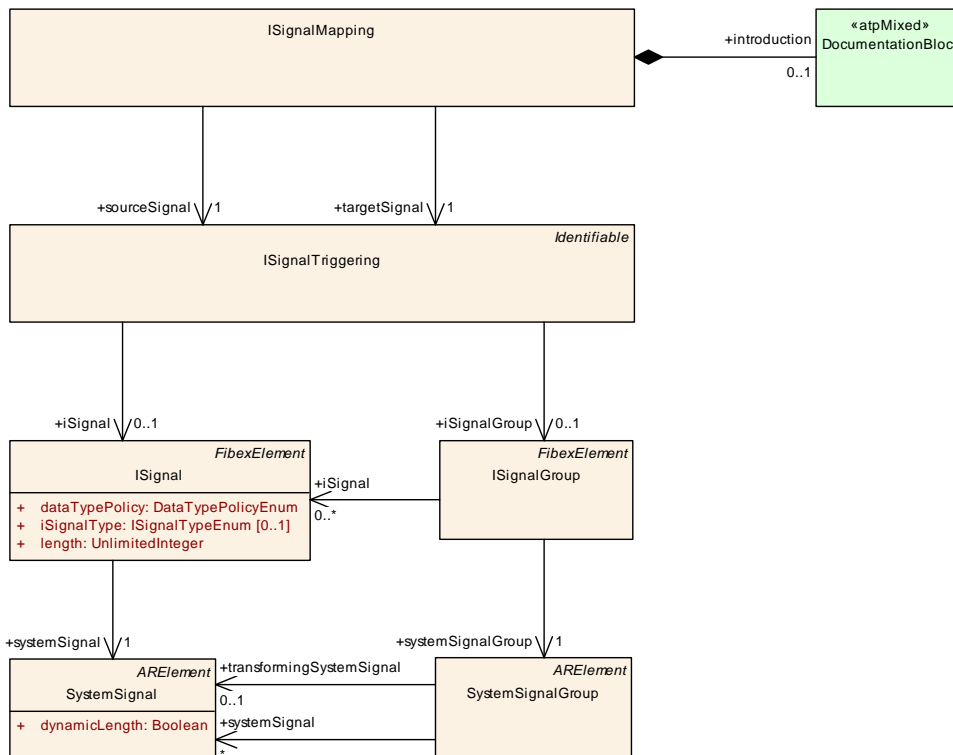


Figure 8.4: Signal Mapping (Fibex4Multiplatform: Signal Mapping)

<b>Class</b>	<b>ISignalMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Multiplatform			
<b>Note</b>	Arranges those signals (or SignalGroups) that are transferred by the gateway from one channel to the other in pairs and defines the mapping between them. Each pair consists in a source and a target referencing to a ISignalTriggering.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	Gateway.signalMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
introduction	DocumentationBlock	0..1	aggr	This represents introductory documentation about the ISignal mapping.
sourceSignal	ISignalTriggering	1	ref	Source destination of the referencing mapping.
targetSignal	ISignalTriggering	1	ref	Target destination of the referencing mapping.


Table 8.7: ISignalMapping

### 8.3.1 Partial Signal Group Mapping

**[TPS\_SYST\_01122] partial routing between ISignalGroups** [The ISignalMapping supports partial routing between ISignalGroups which have not identical set of ISignals within an ISignalGroup.]()

**[constr\_3053] Complete ISignalMapping of target ISignalGroup** [If an ISignalGroup is referenced by a targetSignal then [TPS\_SYST\_02162] applies for each of the contained ISignal of that ISignalGroup.]()

Figure 8.5 shows an example for a partial signal group mapping with explicit mappings for the GroupSignals.

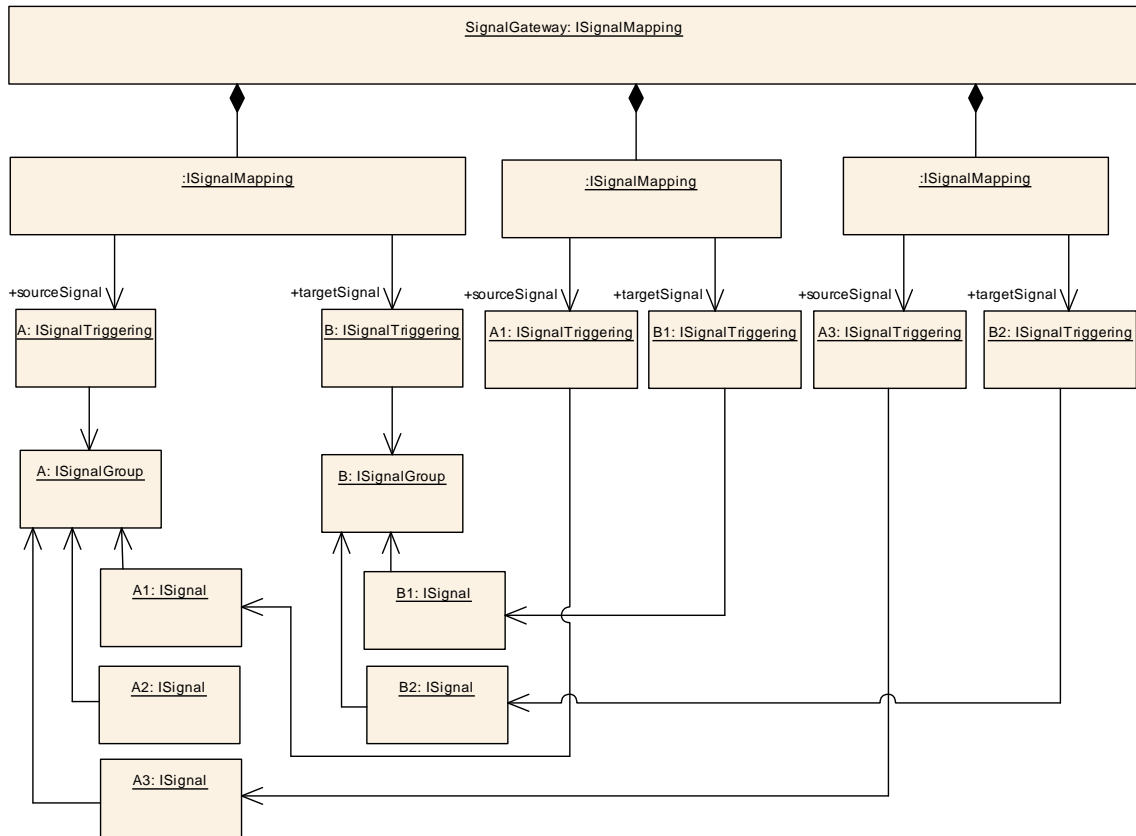

**Figure 8.5: Partial Signal Group Mapping Example**

## 9 Global Time Synchronization

### 9.1 Introduction

This chapter describes the modeling of how a global time synchronization in an AUTOSAR system can be achieved. There are two kinds of time bases: synchronized time base and offset time base. This manifests in two possible values for the attribute category (see [constr\_3519]).

**[constr\_3519] Value of `category` of `GlobalTimeDomain`** [The attribute `category` of `GlobalTimeDomain` can have the following values:

- SYNCHRONIZED: this time base does not depend on the existence of another time base
- OFFSET: this time base depends on the existence of another time base. It delivers a value that represents an offset relative to the referenced (`GlobalTimeDomain.offsetTimeDomain`) synchronized time base.

]()

There are several use cases for implementing a system-wide global time in an vehicle:

- In case of an accident it may be necessary to post-mortem analyze whether the vehicle ECUs performed according to specification. This implies that it shall be possible to unambiguously determine the sequence of activities before a crash. This sequence can only be determined if all components in the distributed system depend on a reliable global time basis.
- It may be necessary that several ECUs in the distributed system need to act in concert with respect to the time that a specific activity is executed. A very trivial example for this requirement is the activation of turn indicators in a car. These are rarely connected to a single ECU (which could take care of synchronously flashing the turn indicators) but their synchronized execution is still very essential for the vehicle operation.
- The distribution of several global time bases shall be possible (e.g. a vehicle local time based on the runtime of the car and a GPS-based time).
- It shall be possible to define offset time bases which have the property that they are based on a synchronized time base and distribute the offset time value as difference to the synchronized time base.

It is obvious that the distribution of global time within a vehicle requires a system-wide context and therefore, the AUTOSAR System Template defines relevant meta-classes and their relations for this purpose.

Of course, the actual implementation of global time distribution is done in a couple of basic-software modules that need to be configured in the context of integrating a particular ECU. The purpose of the meta-model described in chapter 9 is to support the configuration of these basic-software modules.

The modeling of how the distribution of global time is supposed to work can roughly be distributed into two parts, the discussion of the *big picture* (see 9.2) and the description of the details that eventually will support the configuration of the corresponding basic-software modules. The latter can be found in chapter 9.3.

## 9.2 The big Picture

The central part of the formalization of global time synchronization is the existence of a *global time domain*, formalized as `GlobalTimeDomain`.

However, the fragment *global* in *global time domain* primarily stresses the fact that it is supposed to support the distribution of a *global* time rather than implying an information about the scope or visibility of a `GlobalTimeDomain`<sup>1</sup>.

In other words, there is typically more than a single `GlobalTimeDomain` available in the `System`.

Please note that the concept of the `GlobalTimeDomain` roughly corresponds to the existence of a `CommunicationCluster`, i.e. it takes at least one `CommunicationCluster` to implement a *global time domain*.

**[TPS\_SYST\_05006] Chaining of `GlobalTimeDomains`** [It is possible to extend the *global time domain* to several `CommunicationClusters` that are interconnected by means of a `Gateway`.

In other words, the global time base is routed from one `CommunicationCluster` to another, whereas the Time Slave resp. Time Slave Port updates its local time base by using the received global time base and takes into account, whether a time base correction has to be considered or not.

There are certainly use-cases for implementing a `GlobalTimeDomain` that extends to several `CommunicationClusters`, but in many (if not in the majority of) cases it will be necessary to update the time information for the sake of precision.

In this case, however, two separate `GlobalTimeDomains` rather than a single `GlobalTimeDomain` exist. The `GlobalTimeDomain` relate to each other such that one `GlobalTimeDomain` refers to the other in the role `globalTimeSubDomain`.]()

In order to understand the way how `GlobalTimeDomains` refer to each other, it is important to understand that the concept of a *global time domain* has an underlying asymmetric approach of how the time information is distributed.

That is, not all participants in the communication of global time information are able and/or entitled to update the time information and send it around for others to consume.

**[TPS\_SYST\_02103] Semantics of `GlobalTimeDomain.domainId`** [`GlobalTimeDomain.domainId` represents a specific time source, e.g. GPS time.]()

---

<sup>1</sup>For the intents and purposes of this chapter, always make sure to read **global-time domain** rather than **global time-domain**.

The modeling of `GlobalTimeDomains` and `SubDomains` describes the propagation of time values of a time source through the networks. Since the specific time source corresponds to the value of `GlobalTimeDomain.domainId` [`constr_3251`] is formulated.

**[constr\_3251] Value of `GlobalTimeDomain.domainId` in `globalTimeSubDomain` chains** [In a chain of `GlobalTimeDomain.globalTimeSubDomain` the value of the attribute `GlobalTimeDomain.domainId` shall be identical.]()

**[TPS\_SYST\_05007] separation of roles within a `GlobalTimeDomain`** [Within a single *global time domain*, There is a strict separation of roles into a single *global time master* (formalized by the meta-class `GlobalTimeMaster`) and a collection of so-called *global time slaves* (formalized by means of the meta-class `GlobalTimeSlave`).

The role of the `GlobalTimeMaster` is to provide the global time information and the role of the collection of `GlobalTimeSlaves` is to consume the information. The chaining of `GlobalTimeDomains` needs to be understood as the intention to implement the following information flow:

1. from the `GlobalTimeMaster` of one `GlobalTimeDomain` to the `GlobalTimeSlaves` of the same `GlobalTimeDomain`
2. via the `GlobalTimeMaster` of the `GlobalTimeDomain` referenced in the role `globalTimeSubDomain` to the `GlobalTimeSlaves` of the `globalTimeSubDomain`

]()

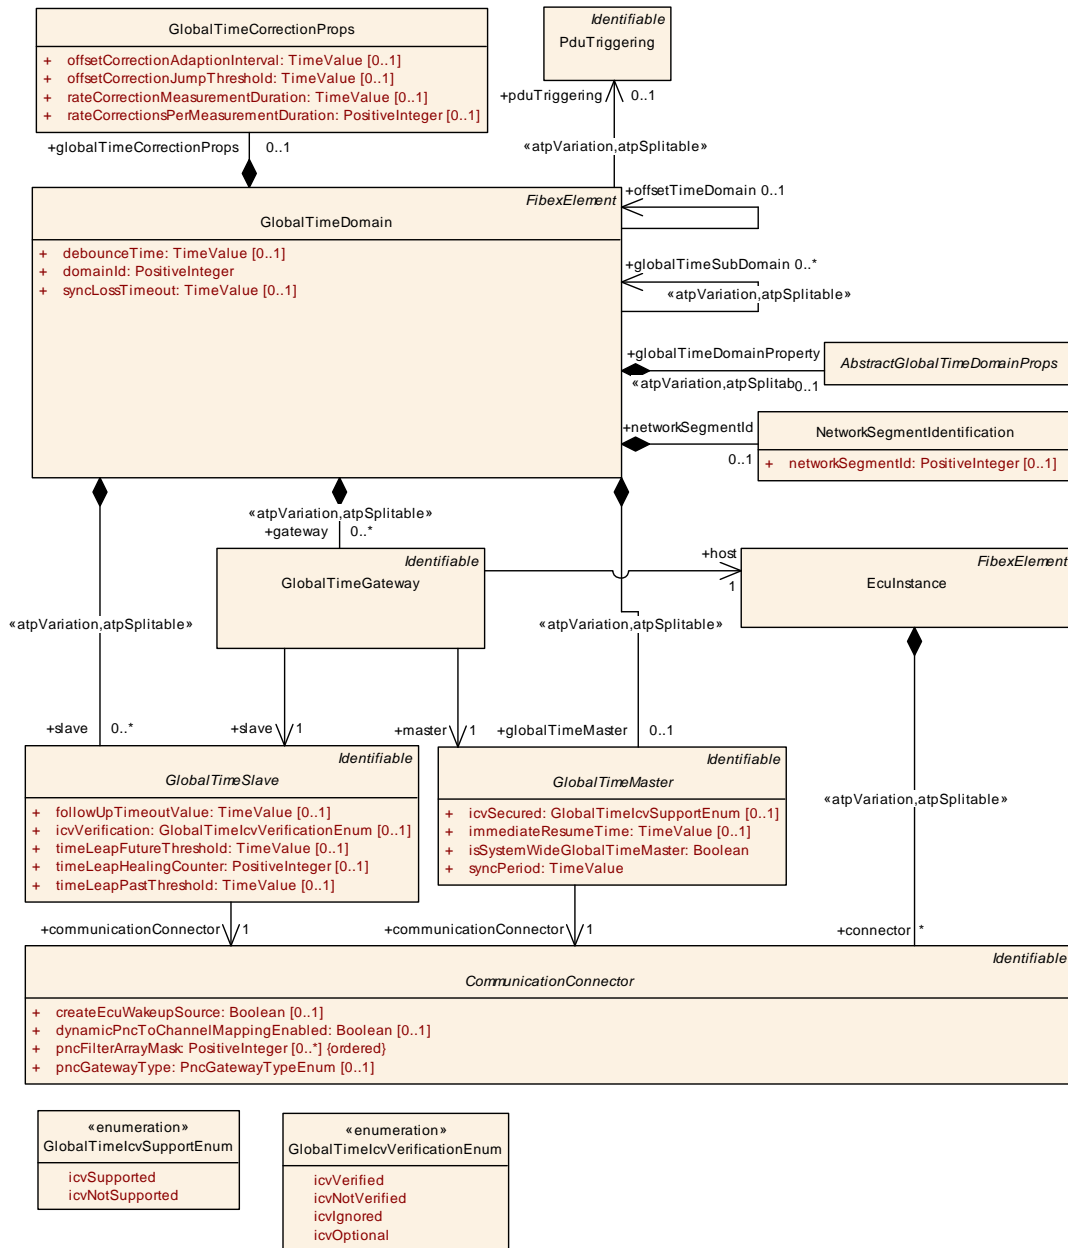


Figure 9.1: Big Picture of AUTOSAR global time synchronization

[TPS\_SYST\_05008] Semantics of a **GlobalTimeGateway** [In order to achieve the flow of information between a **GlobalTimeSlave** of a given **GlobalTimeDomain** to the **GlobalTimeMaster** of another **GlobalTimeDomain**, it is necessary to establish the existence of a so-called **GlobalTimeGateway**.

In terms of functionality, a **GlobalTimeGateway** complements the functionality of the underlying **Gateway** such that, on top of the mere routing from one **CommunicationCluster** to another, the time information is actively updated in the process of passing it from one **GlobalTimeDomain** to the other.]()



**[TPS\_SYST\_05009] GlobalTimeDomain.pduTriggering for transmitting global time information** [The flow of global time information is unidirectional, i.e. the `GlobalTimeSlaves` consume the information without providing any form of feedback to the corresponding `GlobalTimeMaster`.

Thanks to this conceptual detail, there is only the need for **one** dedicated `Pdu` for the transmission of the actual global time information in the context of one `GlobalTimeDomain`.

The characteristics of accessing the information contained in this `Pdu` do make any requirements on the nature of the `Pdu`. Therefore, it is sufficient and applicable to use the `GeneralPurposePdu` for this use case.

To make this possible, it is necessary to include the global time use case in the set of standardized values of the attribute `GeneralPurposePdu.category`. In other words, **[constr\_3081]** applies.]()

**[constr\_3261] GlobalTimeDomain.pduTriggering category** [The `Pdu` that is referenced by the `PduTriggering` that in turn is referenced by `GlobalTimeDomain` in the role `pduTriggering` shall be a `GeneralPurposePdu` of category `GLOBAL_TIME`.]()

**[TPS\_SYST\_05010] GlobalTimeDomain.pduTriggering is not required on Ethernet** [The `Pdu` for transmitting global time information is not required on the Ethernet bus. Here, the information is accessed directly from the Ethernet Interfaces, i.e. the hardware already keeps track of the global time.]()

**[constr\_1369] CommunicationConnectors shall be attached to the same CommunicationCluster** [All `CommunicationConnectors` referenced from `GlobalTimeMaster` and `GlobalTimeSlaves` aggregated in one `GlobalTimeDomain` shall be referenced in the role `commConnector` by the same `PhysicalChannel` aggregated by the same `CommunicationCluster`.]()

**[constr\_1370] Consistency of GlobalTimeDomain** [The `GlobalTimeSlave` referenced in the role `GlobalTimeGateway.slave` and the `GlobalTimeMaster` referenced in the role `GlobalTimeGateway.master` shall **not** be aggregated by the same `GlobalTimeDomain`.]()

The background of **[constr\_1370]** is that the `GlobalTimeGateway` is supposed to connect two `GlobalTimeDomains` it is hardly possible that the `GlobalTimeGateway.slave` and the `GlobalTimeMaster` can be aggregated by the same `GlobalTimeDomain`.

**[TPS\_SYST\_05011] Ownership of GlobalTimeGateway** [Since the existence of a `GlobalTimeGateway` is only justified if a `GlobalTimeDomain` exists that is referenced by a `GlobalTimeDomain` in the role `globalTimeSubDomain` it seems appropriate to aggregate the `GlobalTimeGateway` at the `GlobalTimeDomain` referenced in the role `globalTimeSubDomain`.]()

In other words, the `GlobalTimeGateway` shall be aggregated at the `GlobalTimeDomain` that also aggregates the `master`.

Please note that `GlobalTimeDomain.gateway` effectively has a 0..1 multiplicity since no more than one `globalTimeMaster` is allowed per `GlobalTimeDomain`.

**[constr\_1371] Consistency of attribute `host`** [Within the context of an aggregating `GlobalTimeDomain`, the `CommunicationConnectors` referenced in the role `GlobalTimeGateway.master.communicationConnector` and `GlobalTimeGateway.slave.communicationConnector` shall be aggregated by the same `EcuInstance` that is referenced in the role `GlobalTimeGateway.host`.]()

**[constr\_1372] Consistency of attribute `pduTriggering`** [Within the context of an aggregating `GlobalTimeDomain`, the `pduTriggering` shall be owned by `PhysicalChannel` that is also referencing the `CommunicationConnectors` referenced in the roles `GlobalTimeSlave.communicationConnector` and `GlobalTimeMaster.communicationConnector`.]()

**[TPS\_SYST\_05013] Semantics of `GlobalTimeMaster.isSystemWideGlobalTimeMaster`** [The attribute `GlobalTimeMaster.isSystemWideGlobalTimeMaster` indicates whether a given `GlobalTimeMaster` is considered an independent (i.e. [\[constr\\_1373\]](#) applies) source of global time information.]()

**[constr\_1373] `GlobalTimeMaster` with attribute `isSystemWideGlobalTimeMaster` set to `TRUE`** [`GlobalTimeMaster` with attribute `isSystemWideGlobalTimeMaster` set to `TRUE` shall not be referenced in the role `GlobalTimeGateway.master`.]()

**[TPS\_SYST\_05014] `GlobalTimeMaster.isSystemWideGlobalTimeMaster`** [There is no limitation regarding the number of `GlobalTimeMasters` that have attribute `isSystemWideGlobalTimeMaster` set to `TRUE`. The attribute does not imply that there can only be one `GlobalTimeMaster` within the context of a `System`.]()

**[constr\_1374] Only fan-out possible for `GlobalTimeGateway`** [For all `GlobalTimeGateways` that refer to the same `EcuInstance` the condition applies that no two `GlobalTimeGateways` shall refer to the same `GlobalTimeMaster`.]()

In other words, a fan-in of time information such that time information is received from several sources is not supported.

`GlobalTime` sub domains are associated with specific `PhysicalChannels` (via the `PduTriggerings` of `GeneralPurposePdus` with `category` `GLOBAL_TIME`, see [\[constr\\_3081\]](#)).

In order to identify the `PhysicalChannel` on a system scope, the `NetworkSegmentIdentification.networkSegmentId` is used.

The `networkSegmentId` is derived into the ECU Configuration of every `GlobalTime` sub domain participant and is available to the `TimeSync` modules.

One specific use-case is the identification of dedicated `PhysicalChannels` for the `Time Validation` (see [\[41\]](#)), where a central entity receives time validation notifications from network nodes of several `GlobalTime` subdomains and needs to match the respective notifications according to the `networkSegmentId`.

**[constr\_3620] GlobalTimeDomain.networkSegmentId only applicable to GlobalTime sub domains** [The aggregation `GlobalTimeDomain.networkSegmentId` shall only be defined if the `GlobalTimeDomain` is itself referenced in the role `GlobalTimeDomain.globalTimeSubDomain.`]()

Rational: There is a `GlobalTime` sub domain defined for each network the `GlobalTime` is distributed to, thus only for `GlobalTime` sub domains a definition of a `networkSegmentId` makes sense.


Note that the `GlobalTimeDomain.networkSegmentId` is currently not taken to the ECU Configuration of the `EthTSyn` module, as there are other means used for the identification of `EthTSyn` network segments (see [42]).

**[constr\_3621] Value range of GlobalTimeDomain.networkSegmentId** [If defined, the value of `GlobalTimeDomain.networkSegmentId` shall be in the range 0..255.]()

In figure 9.2 an example of a Global Time Sync setup is shown. The *Global time master* ECU creates the *TimeDomain* and provides it to several `globalTimeSubDomains`. The *GlobalTimeMasters* for the `globalTimeSubDomains` take the *TimeDomain* and distribute it to their networks.

The time for the *GlobalTimeMasters* `TM11` and `TM21` is based on the *TimeDomain* and therefore they have the attribute `isSystemWideGlobalTimeMaster` set to *true*.

The time for the *GlobalTimeMasters* `TM12` and `TM22` are based on a *GlobalTimeGateway* and therefore they have the attribute `isSystemWideGlobalTimeMaster` set to *false*.

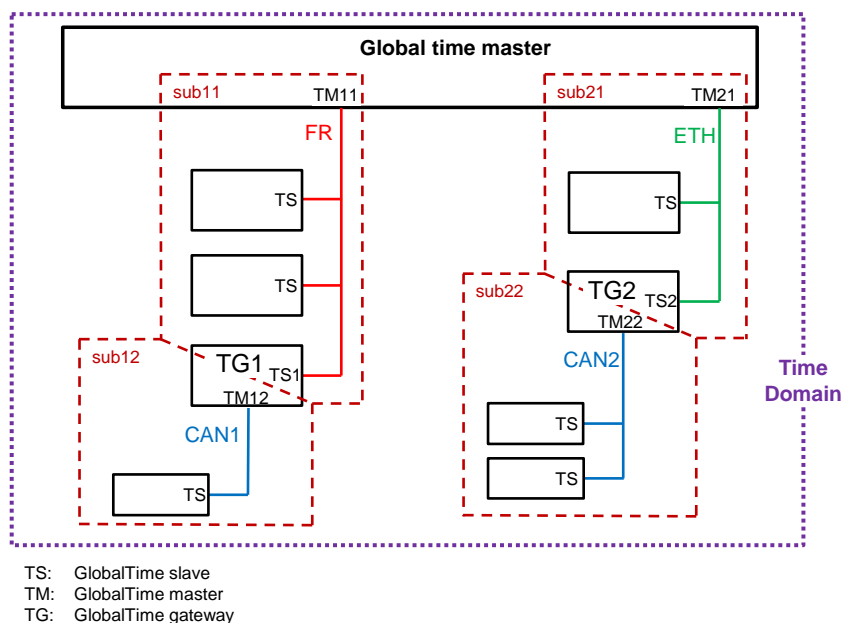

**Figure 9.2: Example Global Time Sync topology**

A partial outline of the example system description structure is shown in figure 9.3.

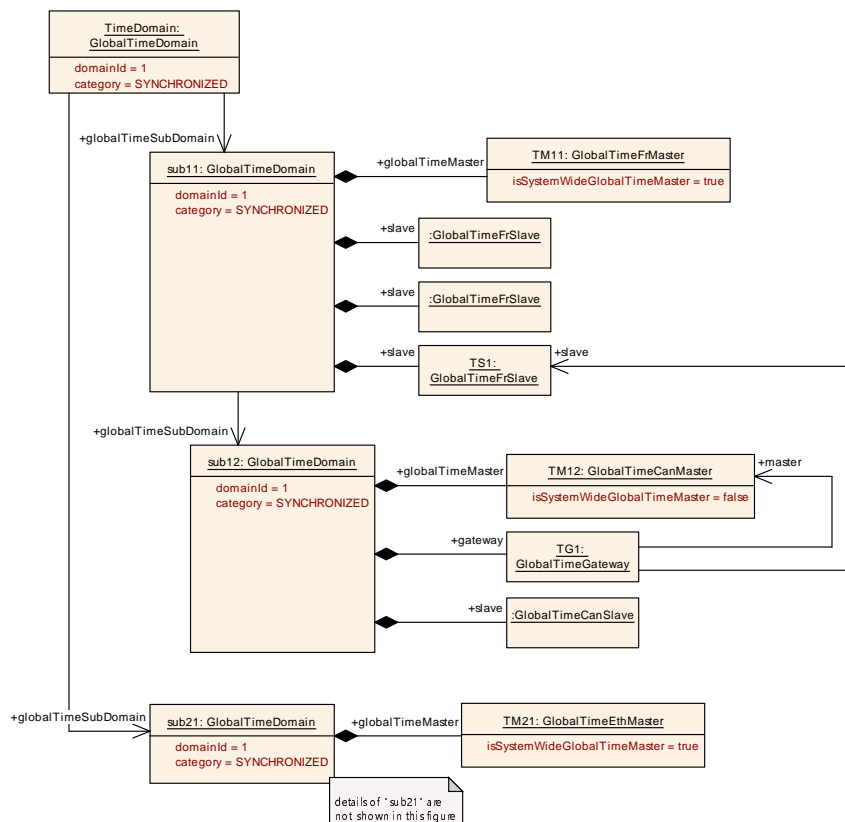


Figure 9.3: System Description of Global Time Sync example

An offset time domain is defined by an reference from a `GlobalTimeDomain` to another `GlobalTimeDomain` in the role `GlobalTimeDomain.offsetTimeDomain`. This makes the reference source the offset time domain and the reference target the synchronized time domain.

**[constr\_3520] Offset time domain shall be based on a synchronized time domain**  
 [If a `GlobalTimeDomain` has a reference with the role `GlobalTimeDomain.offsetTimeDomain` the reference source shall have a `GlobalTimeDomain.domainId` in the range of 16-31 and the reference target shall have a `GlobalTimeDomain.domainId` in the range of 0-15.]()

Rationale: In the [41] Specification the ranges are fixed for synchronized and offset time domains.


Note that the same synchronized time domain can be referenced by several different offset time domains.

**[TPS\_SYST\_03015] Offset time domain requires synchronized time domain**  
 [Since the calculation of the actual offset time domain time requires the presence of the synchronized time domain as well as the offset time domain it is required that every ECU which receives an offset time domain also receives the respective synchronized time domain.]()

In figure 9.4, an example of a Offset Time Sync setup is shown. The example is based on the setup shown in figure 9.2 and extends this with the definition of an offset time domain.


The *Global time master* ECU creates the synchronized *TimeDomain* and provides it to several *globalTimeSubDomains*. The figure needs to be interpreted in the way that the *OffsetTimeDomain* is based on the *TimeDomain* and is sort of overlaid, although drawn side by side.

The time slave *TS\_O* receives the *TimeDomain* as a *GlobalTimeSlave* and also provides the *OffsetTimeDomain* as *TM51* in the role of a *GlobalTimeMaster* on the same network *FR*.

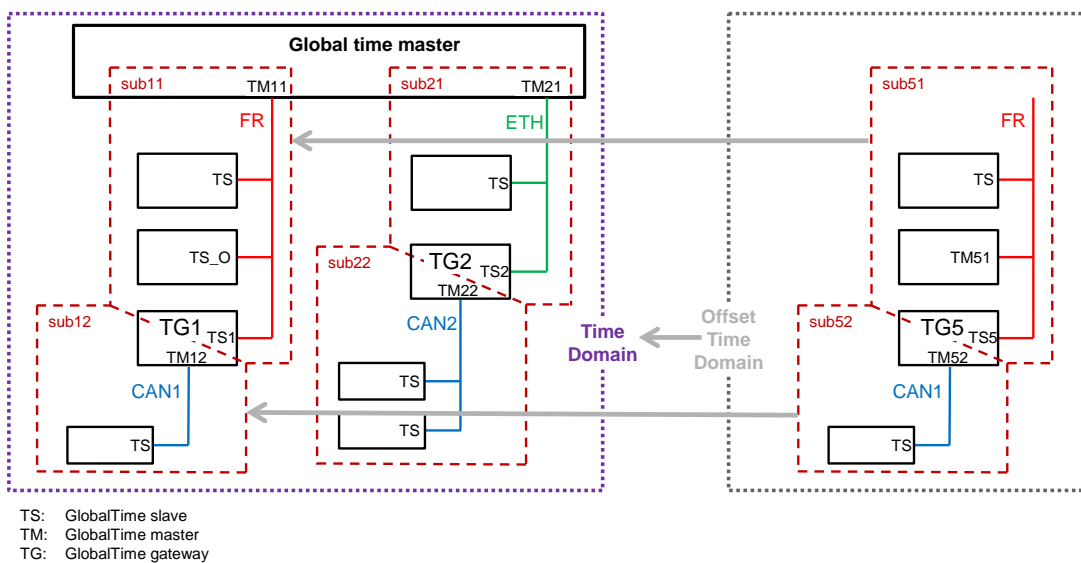

**Figure 9.4: Example Offset Time Sync topology**

A partial outline of the example system description structure is shown in figure 9.5.

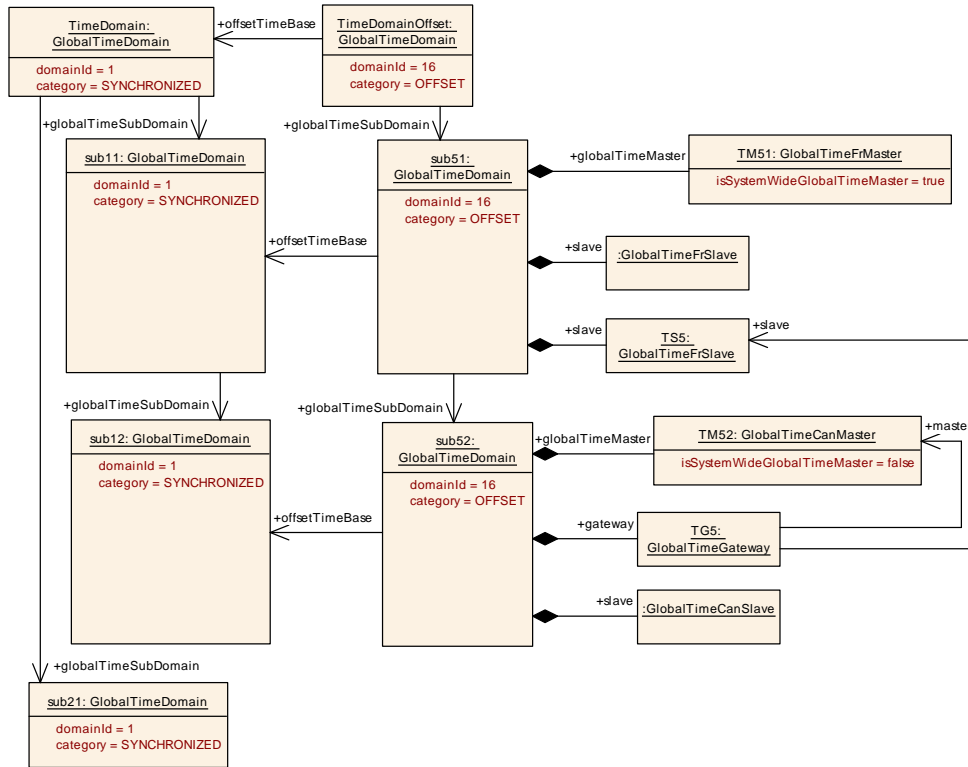

**Figure 9.5: System Description of Offset Time Sync example**

<b>Class</b>	<b>GlobalTimeDomain</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime			
<b>Note</b>	This represents the ability to define a global time domain. <b>Tags:</b> atp.recommendedPackage=GlobalTimeDomains			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
debounceTime	TimeValue	0..1	attr	Defines the minimum amount of time between two time sync messages are transmitted.
domainId	PositiveInteger	1	attr	This represents the ID of the GlobalTimeDomain used in the network messages sent on behalf of global time management.
gateway	GlobalTimeGateway	*	aggr	A GlobalTimeGateway may exist in the context of a GlobalTimeDomain to actively update the global time information as it is routed from one GlobalTimeDomain to another. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=gateway.shortName, gateway.variationPoint.shortLabel vh.latestBindingTime=postBuild
globalTimeCorrectionProps	GlobalTimeCorrectionProps	0..1	aggr	Defintion of attributes for rate and offset correction.





Class	GlobalTimeDomain			
globalTimeDomainProperty	<a href="#">AbstractGlobalTimeDomainProps</a>	0..1	aggr	Additional properties of the GlobalTimeDomain. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=globalTimeDomainProperty, globalTimeDomainProperty.variationPoint.shortLabel vh.latestBindingTime=postBuild
globalTimeMaster	<a href="#">GlobalTimeMaster</a>	0..1	aggr	This represents the single master of a GlobalTimeDomain. A GlobalTimeDomain may have no GlobalTimeDomain.master, e.g. when it gets its time from a GPS receiver. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=globalTimeMaster.shortName, globalTimeMaster.variationPoint.shortLabel vh.latestBindingTime=postBuild
globalTimeSubDomain	<a href="#">GlobalTimeDomain</a>	*	ref	By this means it is possible to create a hierarchy of subDomains where one global time domain can declare one or more other global time domains as its subDomains. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=globalTimeSubDomain.globalTimeDomain, globalTimeSubDomain.variationPoint.shortLabel vh.latestBindingTime=postBuild
networkSegmentId	<a href="#">NetworkSegmentIdentification</a>	0..1	aggr	Defines the numerical identification of a GlobalTime sub domain.
offsetTimeDomain	<a href="#">GlobalTimeDomain</a>	0..1	ref	Reference to a synchronized time domain this offset time domain is based on. The reference source is the offset time domain. The reference target is the synchronized time domain.
pduTriggering	<a href="#">PduTriggering</a>	0..1	ref	This PduTriggering will be taken to transmit the global time information from a GlobalTimeMaster to a the associated GlobalTimeSlaves. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=pduTriggering.pduTriggering, pduTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild
slave	<a href="#">GlobalTimeSlave</a>	*	aggr	This represents the collections of slaves of the GlobalTimeDomain. A GlobalTimeDomain may have no GlobalTimeDomain.slaves, e.g. when it propagates its time directly to sub domains. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=slave.shortName, slave.variationPoint.shortLabel vh.latestBindingTime=postBuild
syncLossTimeout	TimeValue	0..1	attr	This attribute describes the timeout for the situation that the time synchronization gets lost in the scope of the time domain.

**Table 9.1: GlobalTimeDomain**

<b>Class</b>	<b>AbstractGlobalTimeDomainProps</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime			
<b>Note</b>	This abstract class enables a GlobalTimeDomain to specify additional properties.			
<b>Base</b>	ARObject			
<b>Subclasses</b>	CanGlobalTimeDomainProps, EthGlobalTimeDomainProps, FrGlobalTimeDomainProps			
<b>Aggregated by</b>	GlobalTimeDomain.globalTimeDomainProperty			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 9.2: AbstractGlobalTimeDomainProps**

<b>Class</b>	<b>NetworkSegmentIdentification</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime			
<b>Note</b>	This meta-class represents the ability to identify the PhysicalChannel on a system scope in a numerical way. One possible application of this approach is the Time Validation.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	GlobalTimeDomain.networkSegmentId			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
network SegmentId	PositiveInteger	0..1	attr	This attribute represents the numerical identifier of a PhysicalChannel on system level scope.

**Table 9.3: NetworkSegmentIdentification**

<b>Class</b>	<b>GlobalTimeMaster</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime			
<b>Note</b>	This represents the generic concept of a global time master.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Subclasses</b>	GlobalTimeCanMaster, GlobalTimeEthMaster, GlobalTimeFrMaster, UserDefinedGlobalTimeMaster			
<b>Aggregated by</b>	GlobalTimeDomain.globalTimeMaster			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communication Connector	Communication Connector	1	ref	The GlobalTimeMaster is bound to the Communication Connector.
icvSecured	GlobalTimeIcvSupport Enum	0..1	attr	Defines whether an Integrity Check Value (ICV) shall be added to the sent time sync messages. <b>Tags:</b> atp.Status=candidate
immediate ResumeTime	TimeValue	0..1	attr	Defines the minimum time between an "immediate" message and the next periodic message.
isSystemWide GlobalTime Master	Boolean	1	attr	If set to TRUE, the GlobalTimeMaster is supposed to act as the root of global time information.
syncPeriod	TimeValue	1	attr	This represents the period. Unit: seconds

**Table 9.4: GlobalTimeMaster**

<b>Class</b>	<b>GlobalTimeSlave</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime			
<b>Note</b>	This represents the generic concept of a global time slave.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			







<b>Class</b>	<b>GlobalTimeSlave</b> (abstract)			
<b>Subclasses</b>	<a href="#">GlobalTimeCanSlave</a> , <a href="#">GlobalTimeEthSlave</a> , <a href="#">GlobalTimeFrSlave</a> , <a href="#">UserDefinedGlobalTimeSlave</a>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.slave</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communicationConnector	<a href="#">CommunicationConnector</a>	1	ref	The GlobalTimeSlave is bound to the CommunicationConnector.
followUpTimeoutValue	TimeValue	0..1	attr	Rx timeout for the follow-up message.
icvVerification	<a href="#">GlobalTimeIcvVerificationEnum</a>	0..1	attr	Defines how an Integrity Check Value (ICV) shall be handled at the receiver. <b>Tags:</b> atp.Status=candidate
timeLeapFutureThreshold	TimeValue	0..1	attr	Defines the maximum allowed positive difference between the current Local Time Base value and a newly received Global Time Base value.
timeLeapHealingCounter	PositiveInteger	0..1	attr	Defines the required number of updates to the Time Base where the time difference to the previous received value has to remain within the bounds of timeLeapFutureThreshold and timeLeapPastThreshold until that Time Base is considered healed.
timeLeapPastThreshold	TimeValue	0..1	attr	Defines the maximum allowed negative difference between the current Local Time Base value and a newly received Global Time Base value.

**Table 9.5: GlobalTimeSlave**

<b>Class</b>	<b>GlobalTimeGateway</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime			
<b>Note</b>	This represents the ability to define a time gateway for establishing a global time domain over several communication clusters.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.gateway</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
host	<a href="#">EcuInstance</a>	1	ref	The GlobalTimeGateway is hosted by the referenced Ecu Instance.
master	<a href="#">GlobalTimeMaster</a>	1	ref	This represents the master of the global time gateway.
slave	<a href="#">GlobalTimeSlave</a>	1	ref	This represents the slave of the GlobalTimeGateway.

**Table 9.6: GlobalTimeGateway**

**[TPS\_SYST\_02115] Applicability of [GlobalTimeDomain.globalTimeDomain-Property](#)** [The defined properties at [GlobalTimeDomain.globalTimeDomain-Property](#) may be defined individually per [GlobalTimeDomain](#). This allows to define different value sets for each [GlobalTimeDomain](#) and any of the sub-domains.]()

**[TPS\_SYST\_02163] Applicability of [syncLossTimeout](#)** [[GlobalTimeDomain.syncLossTimeout](#) shall be specified for [GlobalTimeDomains](#) that have an aggregated slave and for all other cases this attribute is not applicable.]()

<b>Class</b>	<b>GlobalTimeCorrectionProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime			
<b>Note</b>	This meta-class defines the attributes for rate and offset correction.			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.globalTimeCorrectionProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
offsetCorrectionAdaptionInterval	TimeValue	0..1	attr	Defines the interval during which the adaptive rate correction cancels out the rate- and time deviation.
offsetCorrectionJumpThreshold	TimeValue	0..1	attr	Threshold for the correction method. Deviations below this value will be corrected by a linear reduction over a defined timespan. Values equal- and greater than this value will be corrected by immediately setting the correct time- and rate in form of a jump.
rateCorrectionMeasurementDuration	TimeValue	0..1	attr	Definition of the time span which is used to calculate the rate deviation.
rateCorrectionsPerMeasurementDuration	PositiveInteger	0..1	attr	Defines the number of simultaneous rate measurements to determine the current rate deviation.

**Table 9.7: GlobalTimeCorrectionProps**

## 9.3 Detailed Description of Global Time Synchronization


This chapter describes how the concept of *global time synchronization* is applied to various communication bus systems.

Although the characteristics of the supported bus systems differ widely in terms of their communication behavior, the modeling is actually quite similar for all of the supported bus systems.


### 9.3.1 Time Synchronization over CAN

This chapter described the detailing of how the concept of *global time synchronization* is applied to the CAN bus in particular.

The implementation of *global time synchronization* on the CAN bus is modeled by means of `GlobalTimeCanMaster`, a concrete subclass of `GlobalTimeMaster`. A similar approach applies for the `GlobalTimeCanSlave`, which is derived from `GlobalTimeSlave`.

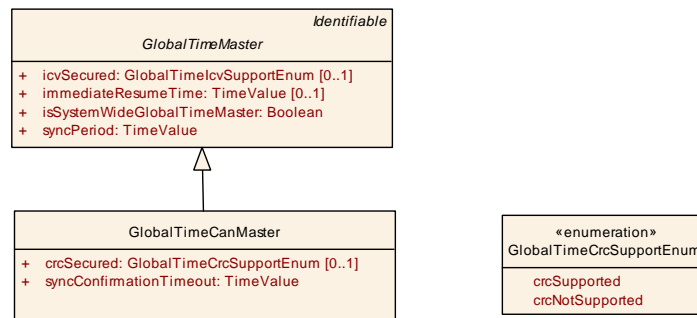


**Figure 9.6: Modeling of the GlobalTimeCanMaster**

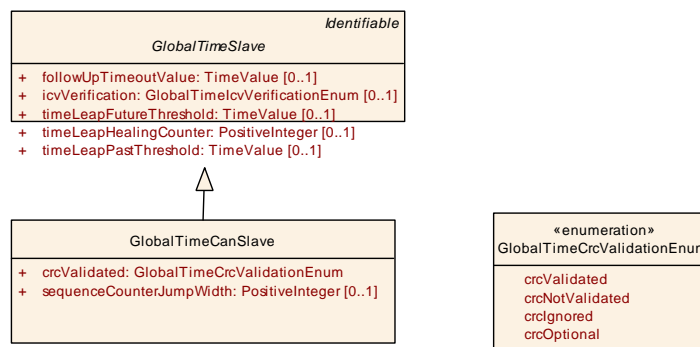

**Figure 9.7: Modeling of the GlobalTimeCanSlave**

In addition to the CAN specific Master and Slave properties CAN specific `CanGlobalTimeDomainProps` can be described.

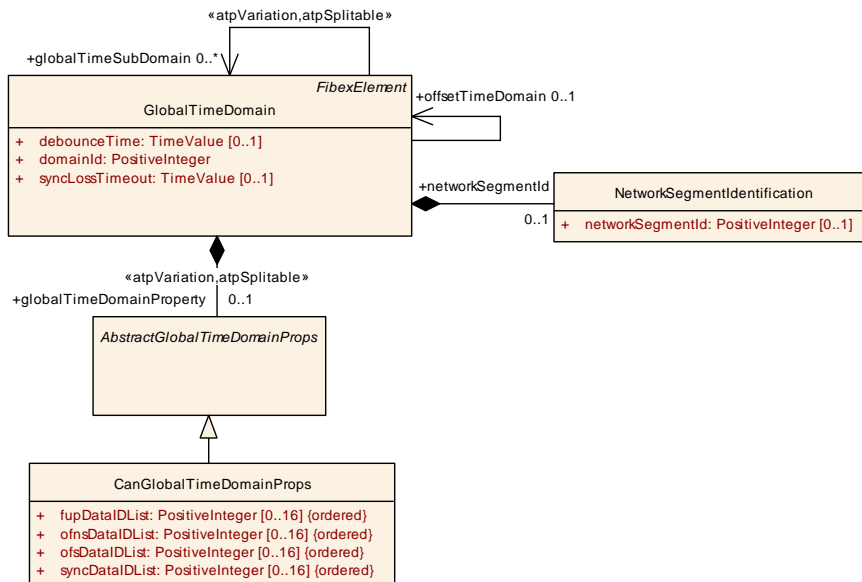

**Figure 9.8: Modeling of the CAN specific CanGlobalTimeDomainProps**

<b>Class</b>	<b>GlobalTimeCanMaster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::CAN			
<b>Note</b>	This represents the specialization of the GlobalTimeMaster for the CAN communication.			
<b>Base</b>	ARObject, <a href="#">GlobalTimeMaster</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.globalTimeMaster</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
crcSecured	<a href="#">GlobalTimeCrcSupportEnum</a>	0..1	attr	Definition of whether or not CRC is supported. This is only relevant for selected bus systems.
sync Confirmation Timeout	TimeValue	1	attr	This represents the value for the confirmation timeout. Unit: seconds.

**Table 9.8: GlobalTimeCanMaster**

<b>Class</b>	<b>GlobalTimeCanSlave</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::CAN			
<b>Note</b>	This represents the specialization of the GlobalTimeSlave for the CAN communication.			
<b>Base</b>	ARObject, <a href="#">GlobalTimeSlave</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.slave</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
crcValidated	<a href="#">GlobalTimeCrcValidationEnum</a>	1	attr	Definition of whether or not validation of the CRC is supported.
sequence CounterJump Width	PositiveInteger	0..1	attr	Specifies the maximum allowed gap of the sequence counter between two SYNC resp. two OFS messages.

**Table 9.9: GlobalTimeCanSlave**


<b>Class</b>	<b>CanGlobalTimeDomainProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::CAN			
<b>Note</b>	Enables the definition of Can Global Time specific properties.			
<b>Base</b>	ARObject, <a href="#">AbstractGlobalTimeDomainProps</a>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.globalTimeDomainProperty</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
fupDataIDList (ordered)	PositiveInteger	0..16	attr	The DataIDList for FUP messages to calculate CRC.
ofnsDataIDList (ordered)	PositiveInteger	0..16	attr	The DataIDList for OFNS messages to calculate CRC.
ofsDataIDList (ordered)	PositiveInteger	0..16	attr	The DataIDList for OFS messages to calculate CRC.
syncDataIDList (ordered)	PositiveInteger	0..16	attr	The DataIDList for SYNC messages to calculate CRC.

**Table 9.10: CanGlobalTimeDomainProps**


### 9.3.2 Time Synchronization over Ethernet

This chapter described the detailing of how the concept of *global time synchronization* is applied to the Ethernet bus in particular. For details concerning the functional behavior please refer to [42].


The implementation of *global time synchronization* on the Ethernet bus is modeled by means of `GlobalTimeEthMaster`, a concrete subclass of `GlobalTimeMaster`. A similar approach applies for the `GlobalTimeEthSlave`, which is derived from `GlobalTimeSlave`.

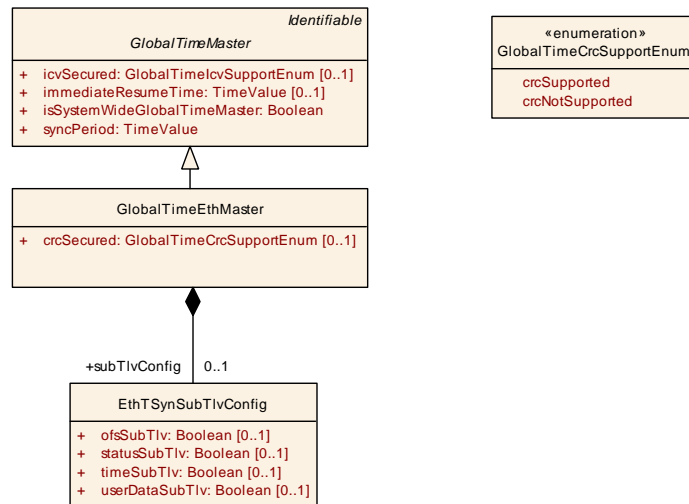

**Figure 9.9: Modeling of the `GlobalTimeEthMaster`**

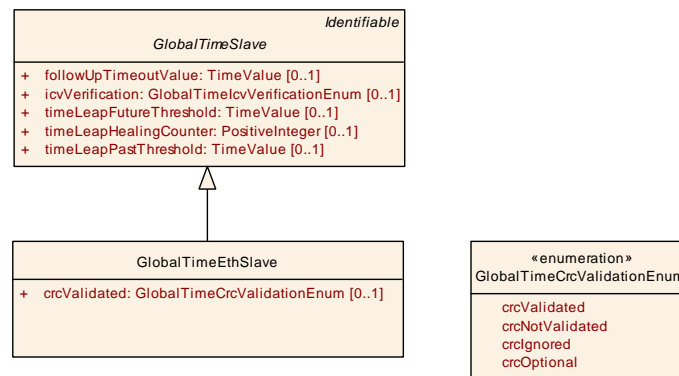

**Figure 9.10: Modeling of the `GlobalTimeEthSlave`**

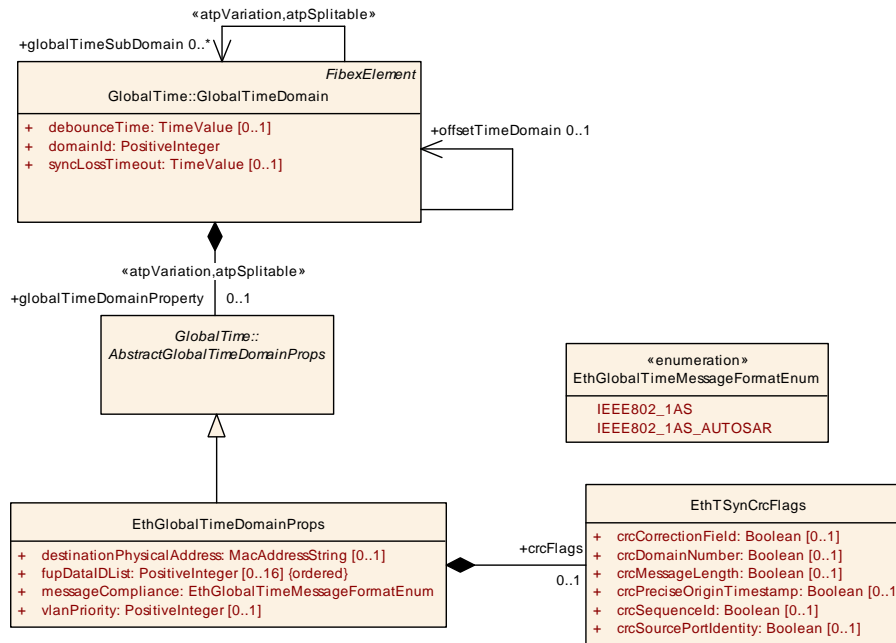

**Figure 9.11: Modeling of the EthGlobalTimeDomainProps**

<b>Class</b>	<b>GlobalTimeEthMaster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::ETH			
<b>Note</b>	This represents the specialization of the GlobalTimeMaster for Ethernet communication.			
<b>Base</b>	ARObject, GlobalTimeMaster, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	GlobalTimeDomain.globalTimeMaster			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
crcSecured	GlobalTimeCrcSupport Enum	0..1	attr	Definition of whether or not CRC is supported. This is only relevant for selected bus systems.
subTlvConfig	EthTSynSubTlvConfig	0..1	aggr	Defines the subTLV fields which shall be included in the time sync message.

**Table 9.11: GlobalTimeEthMaster**

<b>Class</b>	<b>EthTSynSubTlvConfig</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::ETH			
<b>Note</b>	Defines the subTLV fields which shall be included in the time sync message.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	GlobalTimeEthMaster.subTlvConfig			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ofsSubTlv	Boolean	0..1	attr	Defines whether an AUTOSAR Follow_Up TLV OFS Sub-TLV is used.
statusSubTlv	Boolean	0..1	attr	Defines whether an AUTOSAR Follow_Up TLV Status Sub-TLV is used.
timeSubTlv	Boolean	0..1	attr	Defines whether an AUTOSAR Follow_Up TLV Time Sub-TLV is used.
userDataSubTlv	Boolean	0..1	attr	Defines whether an AUTOSAR Follow_Up TLV UserData Sub-TLV is used.

**Table 9.12: EthTSynSubTlvConfig**

<b>Class</b>	<b>GlobalTimeEthSlave</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::ETH			
<b>Note</b>	This represents the specialization of the GlobalTimeSlave for Ethernet communication.			
<b>Base</b>	<i>ARObject</i> , <a href="#">GlobalTimeSlave</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.slave</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
crcValidated	<a href="#">GlobalTimeCrcValidationEnum</a>	0..1	attr	Definition of whether or not validation of the CRC is supported.

**Table 9.13: GlobalTimeEthSlave**

<b>Class</b>	<b>EthGlobalTimeDomainProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::ETH			
<b>Note</b>	Enables the definition of Ethernet Global Time specific properties.			
<b>Base</b>	<i>ARObject</i> , <a href="#">AbstractGlobalTimeDomainProps</a>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.globalTimeDomainProperty</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
crcFlags	<a href="#">EthTSynCrcFlags</a>	0..1	aggr	Defines the fields of the message which shall be taken into account for CRC calculation and verification.
destination Physical Address	MacAddressString	0..1	attr	Defines the MAC multicast address the Ethernet time sync messages are communicated on.
fupDataIDList (ordered)	PositiveInteger	0..16	attr	The DataIDList for FUP messages to calculate CRC.
managed CouplingPort	<a href="#">EthGlobalTimeManagedCouplingPort</a>	*	aggr	Collection of CouplingPorts which are managed in the scope of this Ethernet GlobalTimeDomain.
message Compliance	<a href="#">EthGlobalTimeMessageFormatEnum</a>	1	attr	Defines the compliance of the Ethernet time sync messages to specific standards.
vlanPriority	PositiveInteger	0..1	attr	Defines which VLAN priority shall be assigned to a time sync message in case the message is sent using a VLAN tag.

**Table 9.14: EthGlobalTimeDomainProps**

<b>Class</b>	<b>EthTSynCrcFlags</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::ETH			
<b>Note</b>	Defines the fields of the message which shall be taken into account for CRC calculation and verification.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">EthGlobalTimeDomainProps.crcFlags</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
crcCorrectionField	Boolean	0..1	attr	CorrectionField from the Follow_Up Message Header shall be included in CRC calculation.
crcDomainNumber	Boolean	0..1	attr	DomainNumber from the Follow_Up Message Header shall be included in CRC calculation.
crcMessageLength	Boolean	0..1	attr	MessageLength from the Follow_Up Message Header shall be included in CRC calculation.
crcPreciseOriginTimestamp	Boolean	0..1	attr	PreciseOriginTimestamp from the Follow_Up Message Field shall be included in CRC calculation.
crcSequenceld	Boolean	0..1	attr	Sequenceld from the Follow_Up Message Header shall be included in CRC calculation.
crcSourcePortIdentity	Boolean	0..1	attr	SourcePortIdentity from the Follow_Up Message Header shall be included in CRC calculation.

**Table 9.15: EthTSynCrcFlags**

<b>Enumeration</b>	<b>EthGlobalTimeMessageFormatEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::ETH
<b>Note</b>	Specifies which message formats are available to for the Ethernet time sync protocol.
<b>Aggregated by</b>	<a href="#">EthGlobalTimeDomainProps.messageCompliance</a>
<b>Literal</b>	<b>Description</b>
IEEE802_1AS	Message format according to IEEE 802.1AS standard. <b>Tags:</b> atp.EnumerationLiteralIndex=0 xml.name=IEEE802-1AS
IEEE802_1AS_AUTOSAR	Message format according to IEEE 802.1AS standard with AUTOSAR extensions. <b>Tags:</b> atp.EnumerationLiteralIndex=1 xml.name=IEEE802-1AS-AUTOSAR

**Table 9.16: EthGlobalTimeMessageFormatEnum**

**[constr\_3312] Consistency of [vlanPriority](#) and [EthernetCommunicationConnector](#)** [A [GlobalTimeEthMaster](#) refers to an [EthernetCommunicationConnector](#) in the role [communicationConnector](#). If that [EthernetCommunicationConnector](#) is referenced by an [EthernetPhysicalChannel](#) in the role [commConnector](#) and the [EthernetPhysicalChannel](#) has a [Vlan](#) tag defined via the [VlanConfig](#) then the [GlobalTimeDomain](#) of the [GlobalTimeEthMaster](#) shall aggregate [EthGlobalTimeDomainProps](#) in the role [globalTimeDomainProperty](#) and the attribute [EthGlobalTimeDomainProps.vlanPriority](#) shall exist.]  
( )

In Ethernet networks the usage of Ethernet switches introduces another layer of delay in the transportation of data. This of course also applies to the global time synchronization messages and there are means to compensate these delays available in AUTOSAR.



In order to cope with delays on global time sync of Ethernet transport technology two use-cases are supported:

- an ECU is connected to an Ethernet switch but does not manage the switch (see section 9.3.2.2)
- an ECU is connected to an Ethernet switch and also manages this switch (see section 9.3.2.3)

The `CouplingPort` is used in either use-case to describe the connection of the ECU to the Ethernet network / switch. Thus there are some attributes related to the `CouplingPort` which apply to both use-cases.

### 9.3.2.1 Time Synchronization and Ethernet propagation delay

The propagation delay measurement is applicable to the `CouplingPort` in scope of the global time synchronization.

The default propagation delay time (which is used if propagation delay measurement is disabled or is not yet measured) is defined at the `GlobalTimeCouplingPortProps` with the attribute `propagationDelay`. The `GlobalTimeCouplingPortProps` are aggregated at the `CouplingPortDetails` in the role `globalTimeProps`.

Whether an ECU shall initiate a propagation delay measurement at a certain `CouplingPort` and on a specific `GlobalTimeDomain` is defined by the attribute `pdelayRequestPeriod` at the `EthGlobalTimeManagedCouplingPort`.

**[TPS\_SYST\_03016] Applicability of `EthGlobalTimeManagedCouplingPort.pdelayRequestPeriod`** [When `EthGlobalTimeManagedCouplingPort.pdelayRequestPeriod` is not defined or has the value 0 then initiation of propagation delay measurement is disabled for the `CouplingPort` referenced by `couplingPort` and the `GlobalTimeDomain` the `EthGlobalTimeManagedCouplingPort` belongs to.]()

Whether an ECU shall respond to propagation delay measurement at a certain `CouplingPort` and on a specific `GlobalTimeDomain` is defined by the attribute `pdelayResponseEnabled` at the `EthGlobalTimeManagedCouplingPort`.

### 9.3.2.2 Time Synchronization and Ethernet connection

In case the ECU is directly connected to the Ethernet network and does not manage an Ethernet switch (of course there may be Ethernet switches used in the topology, but for this use-case these switches are not visible to the description of this ECU) the Ethernet time synchronization only needs to cope with the connection of this ECU to the Ethernet network. Considering the example in figure 9.13 this applies to the ECUs TS1, TS2, TS3, and TM which are just connected to the Ethernet switches but do not manage any Ethernet switch.

[TPS\_SYST\_03017] Reference to **CouplingPort** in the context of a **GlobalTimeDomain** [In case a **GlobalTimeDomain** is communicated via a **CouplingPort** and the respective ECU does not manage an Ethernet switch then the reference **EthGlobalTimeManagedCouplingPort.couplingPort** shall reference a **CouplingPort** which is aggregated by the **EthernetCommunicationController** in the role **couplingPort**. The **EthernetCommunicationController** itself shall be referenced by a **GlobalTimeMaster** or **GlobalTimeEthSlave** (via the **CommunicationConnector**) and that **GlobalTimeMaster** or **GlobalTimeEthSlave** shall be aggregated by the **GlobalTimeDomain** initially mentioned.]()

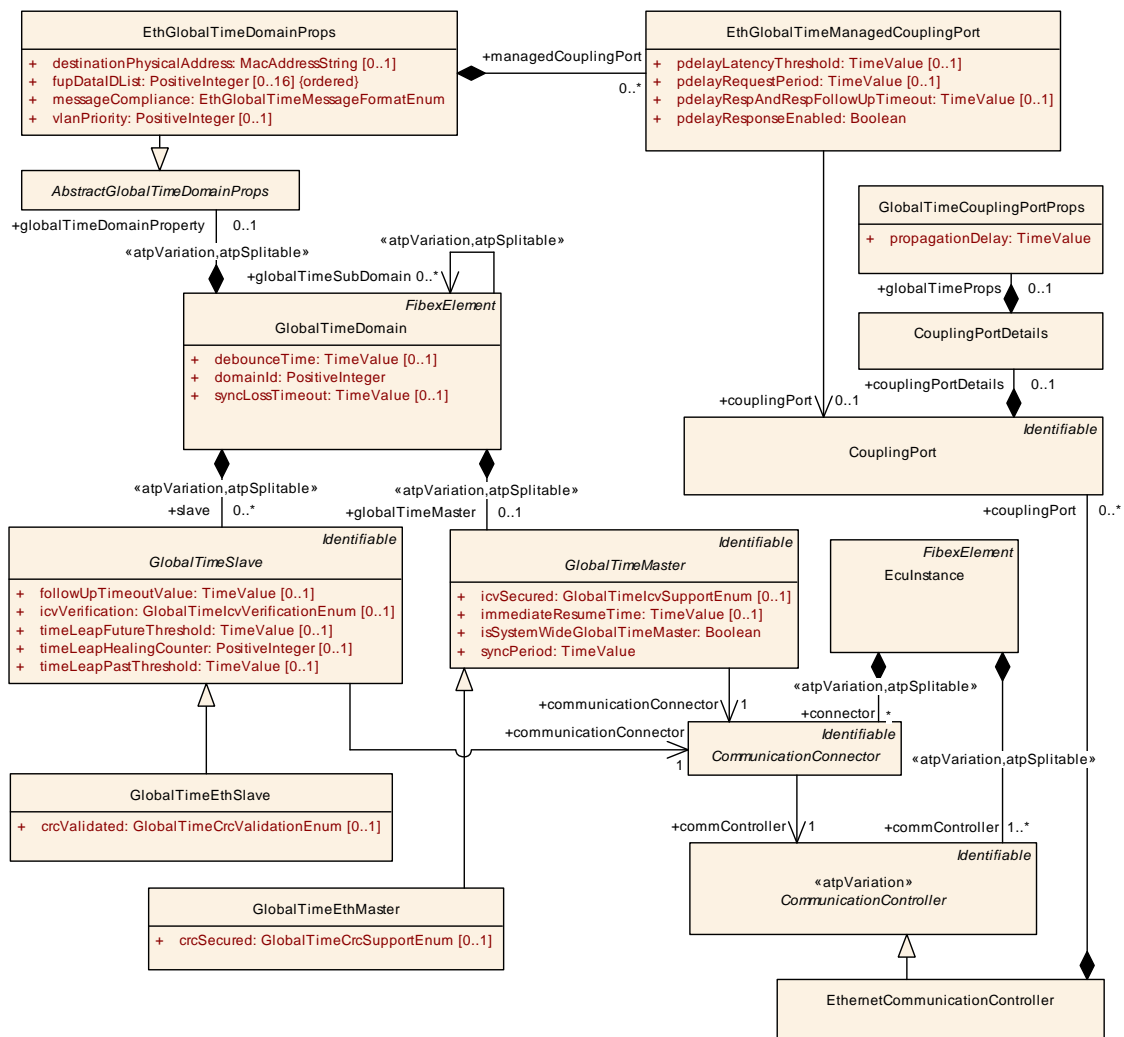


Figure 9.12: Overview of the Ethernet time sync in relation with a **CouplingPort** of an ECU

### 9.3.2.3 Time Synchronization and managed Ethernet switch

In case an ECU manages an Ethernet switch then that management ECU can basically be the `GlobalTimeEthMaster` or the `GlobalTimeEthSlave` located (see also figure 9.13). For the description of the time delay compensation on System Template level this does not matter.

It is essential to configure all possible time synchronization communication paths between the involved entities.


In case of ECU A in figure 9.13 the `GlobalTimeEthMaster` shall

- refer to the `CouplingPort 0` since this is where
  - all time sync messages will be sent out by the `GlobalTimeEthMaster`
  - all adjusted follow up messages will be sent out by the `GlobalTimeEthMaster`
- refer to the `CouplingPort 1` because this is where the Ethernet switch is connected to the management ECU A
- refer to the `CouplingPorts 2, 3, and 4` since this is where the time sync messages will be forwarded by the switch
- not refer to the `CouplingPort 5` because this one is not involved in that `GlobalTimeDomains` communication


In case of ECU B in figure 9.13 the `GlobalTimeEthSlave` shall

- refer to the `CouplingPort 0` since this is where
  - the time sync messages will be received by the `GlobalTimeEthSlave`
  - all adjusted follow up messages will be sent out by the `GlobalTimeEthSlave`
- refer to the `CouplingPort 1` because this is where the Ethernet switch is connected to the management ECU B
- refer to the `CouplingPort 3` because this is where the time sync messages will be received from the `GlobalTimeEthMaster` on ECU TM
- refer to the `CouplingPorts 2 and 4` since this is where the time sync messages will be forwarded by the switch
- not refer to the `CouplingPort 5` because this one is not involved in that `GlobalTimeDomains` communication

Please note that the non-involvement of the `CouplingPort 5` is used for illustration purposes. It would also be possible to involve `CouplingPort 5` in that `GlobalTimeDomain` definition although currently there is no ECU as an `GlobalTimeEthSlave` defined. In that case the `CouplingPort 5` is prepared to be connected to an ECU with an `GlobalTimeEthSlave` later.

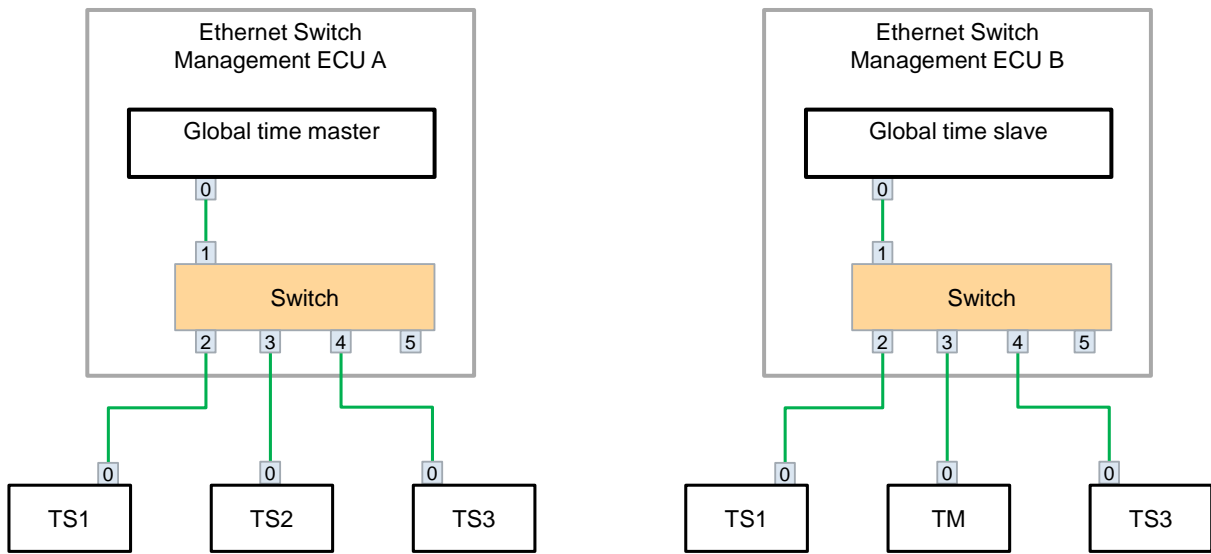

**Figure 9.13: Example of a managed Ethernet Switch**

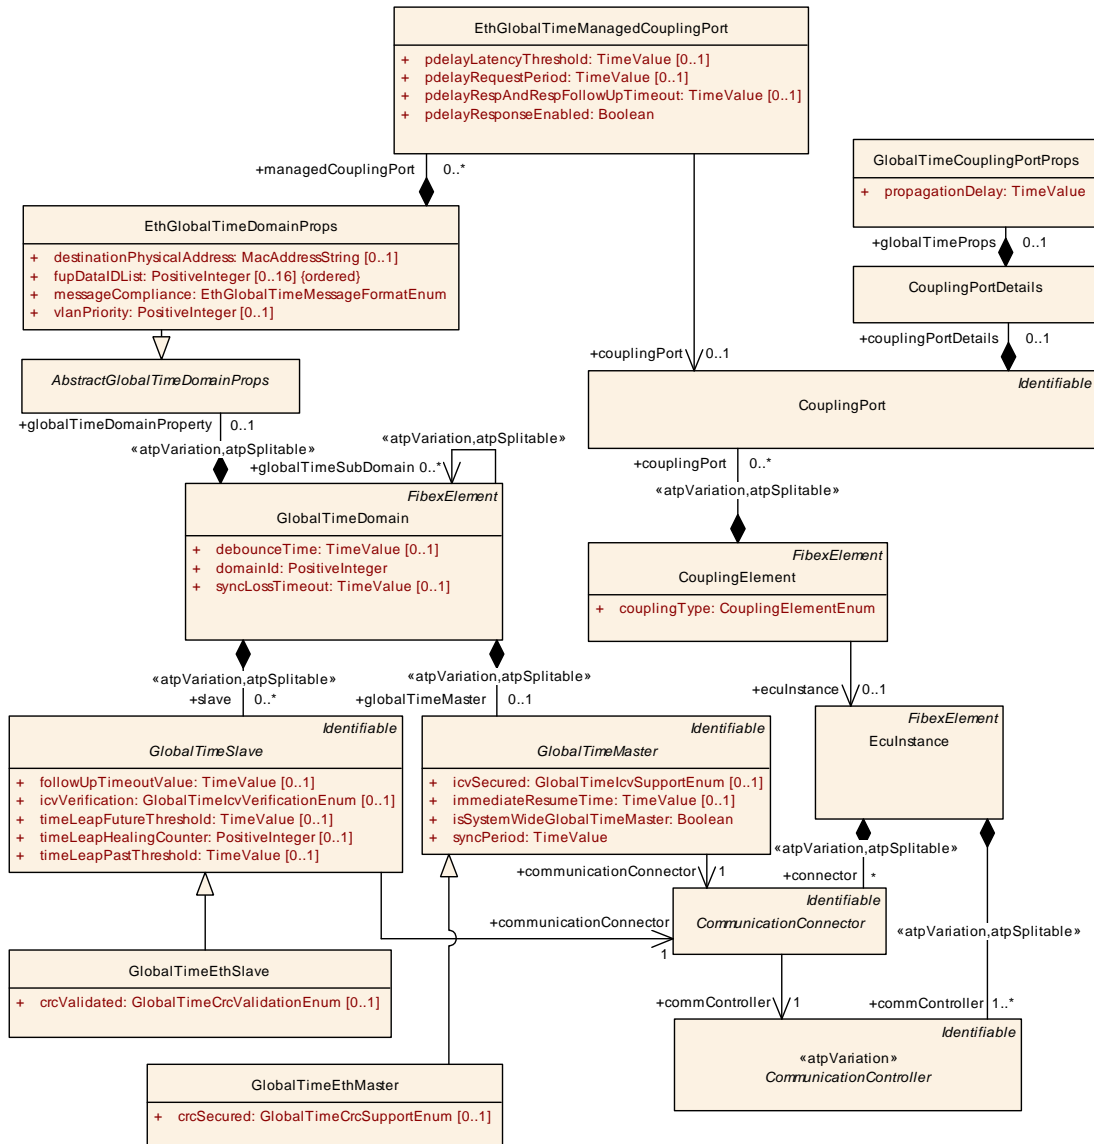

**Figure 9.14: Overview of the Ethernet time sync in relation with a **CouplingPort** of an Ethernet switch**

<b>Class</b>	<b>EthGlobalTimeManagedCouplingPort</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::ETH			
<b>Note</b>	Specifies a CouplingPort which is managed by an Ethernet Global Time Domain.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">EthGlobalTimeDomainProps.managedCouplingPort</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
couplingPort	<a href="#">CouplingPort</a>	0..1	ref	Defines which CouplingPort is managed by this EthGlobalTimeManagedCouplingPort.
pdelayLatencyThreshold	TimeValue	0..1	attr	Threshold for calculated Pdelay. If a measured Pdelay exceeds pdelayLatencyThreshold, the measured Pdelay value is discarded.
pdelayRequestPeriod	TimeValue	0..1	attr	Defines the period for the pdelay request messages.



Class	EthGlobalTimeManagedCouplingPort			
pdelayRespAndRespFollowUpTimeout	TimeValue	0..1	attr	Timeout value for Pdelay_Resp and Pdelay_Resp_Follow_Up after a Pdelay_Req has been transmitted resp. a Pdelay_Resp has been received. A value of 0 or not defining this attribute deactivates this timeout observation.
pdelayResponseEnabled	Boolean	1	attr	Defines whether PDELAY RESPONSE and PDELAY RESPONSE FOLLOW UP shall be sent on this Coupling Port.

**Table 9.17: EthGlobalTimeManagedCouplingPort**


Class	GlobalTimeCouplingPortProps			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	Defines properties for the usage of the CouplingPort in the scope of Global Time Sync.			
Base	ARObject			
Aggregated by	CouplingPortDetails.globalTimeProps			
Attribute	Type	Mult.	Kind	Note
propagationDelay	TimeValue	1	attr	If cyclic propagation delay measurement is enabled, this parameter represents the default value of the propagation delay until the first actually measured propagation delay is available. If cyclic propagation delay measurement is disabled, this parameter defines a fixed value for the propagation delay.

**Table 9.18: GlobalTimeCouplingPortProps**


### 9.3.3 Time Synchronization over FlexRay

This chapter described the detailing of how the concept of *global time synchronization* is applied to the Flexray bus in particular.

The implementation of *global time synchronization* on the Flexray bus is modeled by means of `GlobalTimeFrMaster`, a concrete subclass of `GlobalTimeMaster`. A similar approach applies for the `GlobalTimeFrSlave`, which is derived from `GlobalTimeSlave`.

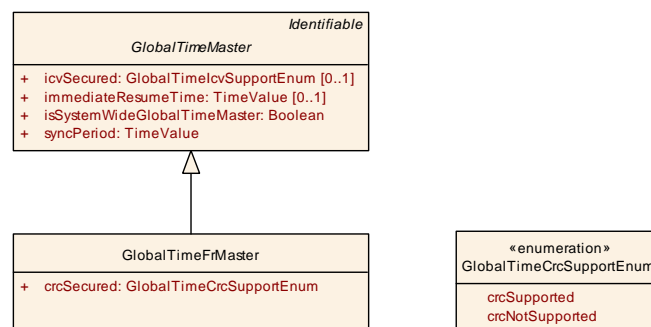


**Figure 9.15: Modeling of the `GlobalTimeFrMaster`**

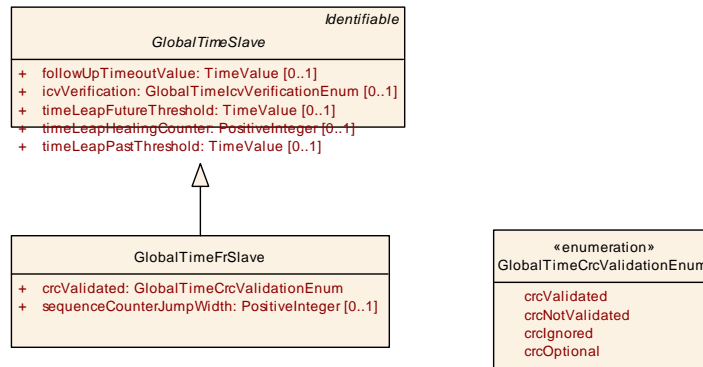

**Figure 9.16: Modeling of the GlobalTimeFrSlave**

In addition to the FlexRay specific Master and Slave properties FlexRay specific `FrGlobalTimeDomainProps` can be described.

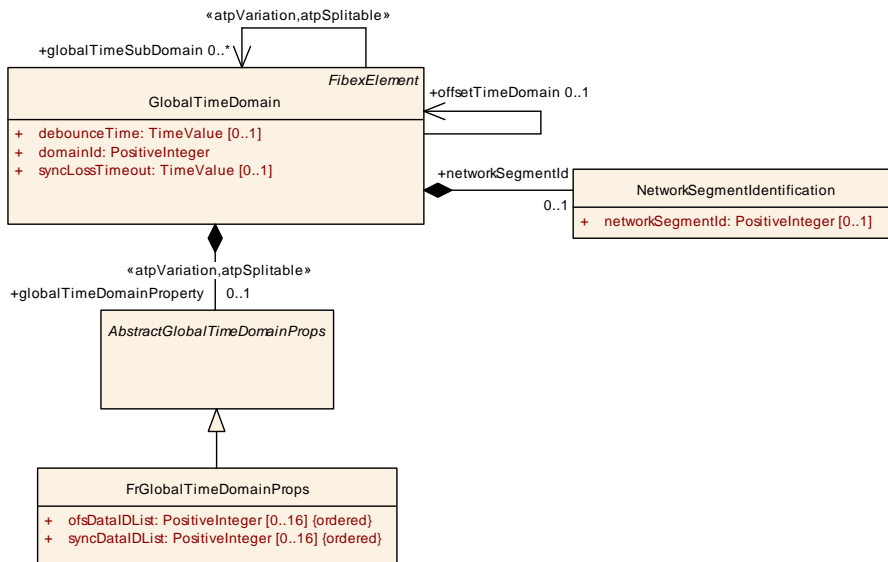

**Figure 9.17: Modeling of the FlexRay specific FrGlobalTimeDomainProps**

<b>Class</b>	<b>GlobalTimeFrMaster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::FR			
<b>Note</b>	This represents the specialization of the GlobalTimeMaster for Flexray communication.			
<b>Base</b>	ARObject, GlobalTimeMaster, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	GlobalTimeDomain.globalTimeMaster			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
crcSecured	GlobalTimeCrcSupport Enum	1	attr	Definition of whether or not CRC is supported. This is only relevant for selected bus systems.

**Table 9.19: GlobalTimeFrMaster**

<b>Class</b>	<b>GlobalTimeFrSlave</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::FR			
<b>Note</b>	This represents the specialization of the GlobalTimeSlave for Flexray communication.			
<b>Base</b>	ARObject, <a href="#">GlobalTimeSlave</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.slave</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
crcValidated	<a href="#">GlobalTimeCrcValidationEnum</a>	1	attr	Definition of whether or not validation of the CRC is supported.
sequenceCounterJumpWidth	PositiveInteger	0..1	attr	Specifies the maximum allowed gap of the sequence counter between two SYNC resp. two OFS messages.


**Table 9.20: GlobalTimeFrSlave**

<b>Class</b>	<b>FrGlobalTimeDomainProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::FR			
<b>Note</b>	Enables the definition of Flexray GlobalTime specific properties.			
<b>Base</b>	ARObject, <a href="#">AbstractGlobalTimeDomainProps</a>			
<b>Aggregated by</b>	<a href="#">GlobalTimeDomain.globalTimeDomainProperty</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ofsDataIDList (ordered)	PositiveInteger	0..16	attr	The DataIDList for OFS messages to calculate CRC.
syncDataIDList (ordered)	PositiveInteger	0..16	attr	The DataIDList for SYNC messages to calculate CRC.

**Table 9.21: FrGlobalTimeDomainProps**

### 9.3.4 Time Synchronization by user defined Timebase Provider

This chapter describes the details of how the concept of global time synchronization is applied to user defined Timebase Providers. The implementation of global time synchronization by user defined timebase providers is modeled by means of [UserDefinedGlobalTimeMaster](#), a concrete subclass of [GlobalTimeMaster](#). A similar approach applies for the [UserDefinedGlobalTimeSlave](#), which is derived from [GlobalTimeSlave](#).

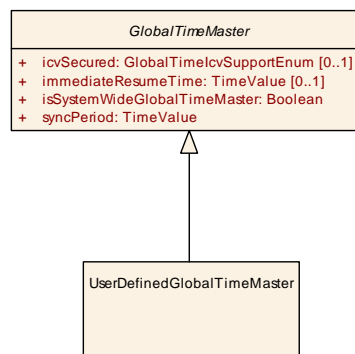
**Figure 9.18: Modeling of the [UserDefinedGlobalTimeMaster](#)**



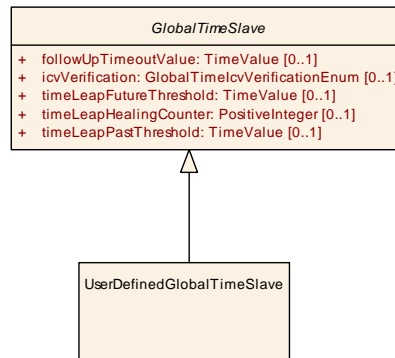


Figure 9.19: Modeling of the `UserDefinedGlobalTimeSlave`

<b>Class</b>	<b>UserDefinedGlobalTimeMaster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::UserDefined			
<b>Note</b>	This represents the specialization of the GlobalTimeMaster for user defined communication.			
<b>Base</b>	ARObject, GlobalTimeMaster, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	GlobalTimeDomain.globalTimeMaster			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

Table 9.22: UserDefinedGlobalTimeMaster

<b>Class</b>	<b>UserDefinedGlobalTimeSlave</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime::UserDefined			
<b>Note</b>	This represents the specialization of the GlobalTimeSlave for user defined communication.			
<b>Base</b>	ARObject, GlobalTimeSlave, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	GlobalTimeDomain.slave			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

Table 9.23: UserDefinedGlobalTimeSlave

### 9.3.5 Time Synchronization Common Properties

The purpose of this chapter is basically to provide the class tables of meta-classes taken to implement configuration properties in the context of *global time synchronization*. The specifics about how these meta-classes are used is explained in the bus-specific chapters (i.e. chapters 9.3.1, 9.3.2, and 9.3.3).

<b>Enumeration</b>	<b>GlobalTimeCrcSupportEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime
<b>Note</b>	This enumeration is used to define whether and how CRC on the TX side shall be utilized.
<b>Aggregated by</b>	GlobalTimeCanMaster.crcSecured, GlobalTimeEthMaster.crcSecured, GlobalTimeFrMaster.crcSecured
<b>Literal</b>	<b>Description</b>





<b>Enumeration</b>	<b>GlobalTimeCrcSupportEnum</b>
crcNotSupported	This indicates that CRC is not supported <b>Tags:</b> atp.EnumerationLiteralIndex=0
crcSupported	This indicates that CRC is supported <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 9.24: GlobalTimeCrcSupportEnum**

<b>Enumeration</b>	<b>GlobalTimeCrcValidationEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime
<b>Note</b>	This enumeration provides values for the evaluation of the CRC
<b>Aggregated by</b>	<a href="#">GlobalTimeCanSlave.crcValidated</a> , <a href="#">GlobalTimeEthSlave.crcValidated</a> , <a href="#">GlobalTimeFrSlave.crcValidated</a>
<b>Literal</b>	<b>Description</b>
crclgnored	The CRC is supposed to be ignored <b>Tags:</b> atp.EnumerationLiteralIndex=0
crcNotValidated	The CRC is not supposed to be present. If CRC is present the message is ignored. <b>Tags:</b> atp.EnumerationLiteralIndex=1
crcOptional	Either the CRC is present and then shall be validated or the CRC is not present and no CRC check is done. <b>Tags:</b> atp.EnumerationLiteralIndex=3
crcValidated	This CRC is supposed to be validated. <b>Tags:</b> atp.EnumerationLiteralIndex=2

**Table 9.25: GlobalTimeCrcValidationEnum**

<b>Enumeration</b>	<b>GlobalTimeIcvSupportEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime
<b>Note</b>	Defines whether an Integrity Check Value (ICV) shall be added to the sent time sync messages. <b>Tags:</b> atp.Status=candidate
<b>Aggregated by</b>	<a href="#">GlobalTimeMaster.icvSecured</a>
<b>Literal</b>	<b>Description</b>
icvNotSupported	The ICV is not supported <b>Tags:</b> atp.EnumerationLiteralIndex=1
icvSupported	The ICV is supported <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 9.26: GlobalTimeIcvSupportEnum**

<b>Enumeration</b>	<b>GlobalTimeIcvVerificationEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::GlobalTime
<b>Note</b>	This enumeration is used to define how an Integrity Check Value (ICV) shall be handled at the receiver. <b>Tags:</b> atp.Status=candidate
<b>Aggregated by</b>	<a href="#">GlobalTimeSlave.icvVerification</a>
<b>Literal</b>	<b>Description</b>





<b>Enumeration</b>	<b>GlobalTimeIcvVerificationEnum</b>
icvIgnored	If the ICV is present, then it is ignored <b>Tags:</b> atp.EnumerationLiteralIndex=2
icvNotVerified	The ICV is not supposed to be present. If the ICV is present, then the message is ignored. <b>Tags:</b> atp.EnumerationLiteralIndex=1
icvOptional	If the ICV is present, then it will be verified. If the ICV is not present, then this is also a valid reception (no verification required). <b>Tags:</b> atp.EnumerationLiteralIndex=3
icvVerified	The ICV is required and will be verified. <b>Tags:</b> atp.EnumerationLiteralIndex=0

**Table 9.27: GlobalTimeIcvVerificationEnum**

## 10 Description of Service Discovery Services in Classic Platform

### 10.1 Representation of Service Interfaces on VFB level

ServiceInterfaces in the Adaptive Platform and in SOME/IP consist of Events, Fields and Methods. AUTOSAR classic platform does not support ServiceInterfaces but provides the possibility to communicate in a service oriented way over SOME/IP.

To mimic a ServiceInterface in the Classic Platform any combination of ClientServerInterfaces, SenderReceiverInterfaces or TriggerInterfaces may be used.

**[TPS\_SYST\_02283] Collection of ServiceInterface elements** [The collection of PortInterfaces that represent one ServiceInterface shall be wrapped by a Collection element with category SET and collectionSemantics SO\_SERVICE\_INTERFACE.]()

An example of ServiceInterface named *RadarService* is shown in the following listing.

```

<AR-PACKAGE>
  <SHORT-NAME>ServiceInterfaces</SHORT-NAME>
  <ELEMENTS>
    <!-- /ServiceInterfaces/RadarService -->
    <COLLECTION>
      <SHORT-NAME>RadarService</SHORT-NAME>
      <CATEGORY>SET</CATEGORY>
      <COLLECTION-SEMANTICS>SO_SERVICE_INTERFACE</COLLECTION-SEMANTICS>
      <ELEMENT-REFS>
        <ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/PortInterfaces/
          RadarService_BrakeEvent/BrakeEvent</ELEMENT-REF>
        <ELEMENT-REF DEST="CLIENT-SERVER-OPERATION">/PortInterfaces/
          RadarService_Methods/Calibrate</ELEMENT-REF>
        <ELEMENT-REF DEST="CLIENT-SERVER-OPERATION">/PortInterfaces/
          RadarService_Methods/Adjust</ELEMENT-REF>
        <ELEMENT-REF DEST="COLLECTION">/Fields/RadarService_UpdateRate</
          ELEMENT-REF>
        <ELEMENT-REF DEST="COLLECTION">/FireAndForgetMethods/
          RadarService_FireAndForgetMethods</ELEMENT-REF>
      </ELEMENT-REFS>
    </COLLECTION>
  </ELEMENTS>
</AR-PACKAGE>
    
```

Listing 10.1: Example for a ServiceInterface Collection

The *RadarService* in this example consist of:

- an Event named *BrakeEvent*,
- a Method named *Calibrate*,

- a Method named *Adjust*,
- a Field named *RadarService\_UpdateRate*,
- a Collection of *Fire\_And\_Forget* Methods.

### 10.1.1 Representation of Events

**[TPS\_SYST\_02284] Event in a ServiceInterface** [An event in a `ServiceInterface` shall be described as a `VariableDataPrototype` in a `SenderReceiverInterface`.]()

Please note that in SOME/IP and other description formats like ASAM FIBEX an Event consist of one or several Parameters. In AUTOSAR an Event with several parameters needs to be described as an `VariableDataPrototype` that is typed by an `AutosarDataType` of category STRUCTURE. Each parameter of the `Event` shall be represented as a member of the STRUCTURE.

### 10.1.2 Representation of Methods

**[TPS\_SYST\_02285] Method in a ServiceInterface** [A method of a `ServiceInterface` shall be described as a `ClientServerOperation` in a `ClientServerInterface`.]()

Each method parameter shall be described as an `argument` of the `ClientServerOperation`. Please note that the order of method parameters is expressed by the order of `arguments`.

### 10.1.3 Representation of Fire and Forget Methods

A so-called “fire & forget” method in SOME/IP represents a special form of a method dedicated to the sole purpose of conveying information from the service consumer to the service provider. The semantics of a “fire & forget” method is comparable to the semantics of an event, only reverse. In case that the `ServiceInterface` contains a “fire & forget” method the service consumer is able to call this method without the expectation of any response from the service provider.

**[TPS\_SYST\_02286] “fire & forget” method with data in a ServiceInterface** [A “fire & forget” method of a `ServiceInterface` that contains data shall be described as a `VariableDataPrototype` in a `SenderReceiverInterface`. The service provider will consume the `VariableDataPrototype`. The service consumer will provide the `VariableDataPrototype`.]()

If such a “fire & forget” method contains several parameters the `VariableDataPrototype` shall be typed by an `AutosarDataType` of category STRUCTURE. Each parameter of the “fire & forget” method shall be represented as a member of the STRUCTURE.

**[TPS\_SYST\_02287] “Fire & forget” method without data in a ServiceInterface**  
 [A “fire & forget” method of a `ServiceInterface` that does not contain any data shall be described as a `Trigger` in a `TriggerInterface`. The service provider will consume the `Trigger`. The service consumer will provide the `Trigger`.]()

To distinguish “fire & forget” methods with parameters from `Events` a sub-collection is introduced in the `ServiceInterface` `Collection`. The sub-collection refers to all “fire & forget” methods represented as `VariableDataPrototypes` and `Triggers` that are defined by the `ServiceInterface`.

**[TPS\_SYST\_02288] “Fire & forget” method in a ServiceInterface**  
 [The “fire & forget” methods of `ServiceInterface` shall be wrapped by a `Collection` element with category SET and `collectionSemantics` SO\_SERVICE\_FIRE\_AND\_FORGET\_METHODS.]()

```
<AR-PACKAGE>
  <SHORT-NAME>FireAndForgetMethods</SHORT-NAME>
  <ELEMENTS>
    <!-- /FireAndForgetMethods/RadarService_FireAndForgetMethods-->
    <COLLECTION>
      <SHORT-NAME>RadarService_FireAndForgetMethods</SHORT-NAME>
      <CATEGORY>SET</CATEGORY>
      <COLLECTION-SEMANTICS>SO_SERVICE_FIRE_AND_FORGET_METHODS</COLLECTION-SEMANTICS>
      <ELEMENT-REFS>
        <ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE"/>/PortInterfaces/RadarService_Reset/Reset</ELEMENT-REF>
        <ELEMENT-REF DEST="TRIGGER"/>/PortInterfaces/RadarService_LogCurrentState/RadarService_LogCurrentState</ELEMENT-REF>
      </ELEMENT-REFS>
    </COLLECTION>
  </ELEMENTS>
</AR-PACKAGE>
```

**Listing 10.2: Example for a fire & forget Method `Collection`**

### 10.1.4 Representation of `Fields`

A `Field` represents a piece of data hosted by a server that exposes to one or more client(s) a get accessor and/or a set mutator. Clients can optionally receive notifications of changes of the `Field`'s value. In addition a `Field` has a concrete value at any time. As soon as the `ServiceInterface` is offered a `Field` of this `ServiceInterface` can be accessed by a client.

**[TPS\_SYST\_02289] Field in a ServiceInterface** [The elements of a `Field` shall be wrapped by a `Collection` element with category `SET` and `collectionSemantics` `SO_SERVICE_FIELD`.]()

**[TPS\_SYST\_02290] Field elements** [A `Collection` element with category `SO_SERVICE_FIELD` is allowed to contain one, two or all three of the following items:

- a reference to a `VariableDataPrototype` representing a `Field` Notifier,
- a reference to a `ClientServerOperation` representing a `Field` Getter,
- a reference to a `ClientServerOperation` representing a `Field` Setter.

]()

**[TPS\_SYST\_02291] Field Notifier** [A `Field` Notifier is represented by a `VariableDataPrototype` in a `SenderReceiverInterface`.]()

**[TPS\_SYST\_02292] Field Getter** [A `Field` Getter is represented by a `ClientServerOperation` with `ArgumentDataPrototypes` with `direction` `out`.]()

After the getter call the requester will receive the current value of the `Field` in the response.

**[TPS\_SYST\_02293] Field Setter** [A `Field` Setter is represented by a `ClientServerOperation` with `ArgumentDataPrototypes` with `direction` `out` and `in`.]()

Please note that it is the decision of the Service Provider to accept the setter request or to deny it. The current value of the `Field` will always be sent back to the requester as response.

```
<AR-PACKAGE>
  <SHORT-NAME>Fields</SHORT-NAME>
  <ELEMENTS>
    <!-- /Fields/RadarService_UpdateRate -->
    <COLLECTION>
      <SHORT-NAME>RadarService_UpdateRate</SHORT-NAME>
      <CATEGORY>SET</CATEGORY>
      <COLLECTION-SEMANTICS>SO_SERVICE_FIELD</COLLECTION-SEMANTICS>
      <ELEMENT-REFS>
        <ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/PortInterfaces/
          RadarService_UpdateRate_Notifier/UpdateRate</ELEMENT-REF>
        <ELEMENT-REF DEST="CLIENT-SERVER-OPERATION">/PortInterfaces/
          RadarService_UpdateRate_GetterSetter/Getter</ELEMENT-REF>
        <ELEMENT-REF DEST="CLIENT-SERVER-OPERATION">/PortInterfaces/
          RadarService_UpdateRate_GetterSetter/Setter</ELEMENT-REF>
      </ELEMENT-REFS>
    </COLLECTION>
  </ELEMENTS>
</AR-PACKAGE>
```

**Listing 10.3: Example for a `Field` `Collection`**

**[constr\_5330] ServiceInterface elements shall belong to exactly one ServiceInterface** [If an element like

- a `VariableDataPrototype` that represents a `ServiceInterface` event
- a `ClientServerOperation` that represents a `ServiceInterface` method
- a `Collection` with `collectionSemantics` `SO_SERVICE_FIELD` that represents a `ServiceInterface` field
- a `Collection` with `collectionSemantics` `SO_SERVICE_FIRE_AND_FORGET_METHOD` that represents a “fire & forget” method

is referenced in the role `element` by a `Collection` that has the `collectionSemantics` set to `SO_SERVICE_INTERFACE` then this element shall not be referenced by any other `Collection` element that has the `collectionSemantics` `SO_SERVICE_INTERFACE` in the scope of the `System`.]()

**[constr\_5330]** is introduced to mimic the `ServiceInterface` modeling in the Adaptive Platform where the `Event`, `Method` and `Field` are aggregated by the `ServiceInterface`.

## 10.2 Representation of Service Interfaces on network level

Elements of `ServiceInterfaces` are mapped by the `DataMapping` to `SystemSignals` and later to `ISignals` and `ISignalIPdus` for transport over the network. For the serialization as an `UINT8` Array two different `Transformers` are supported, as defined in **[TPS\_SYST\_02294]** and **[TPS\_SYST\_02295]**.

**[TPS\_SYST\_02294] Serialization of ServiceInterfaces using ComBasedTransformer** [If the `ComBasedTransformer` is used to serialize the members of a `ServiceInterface`, then

- the `SenderReceiverToSignalGroupMapping` is used to map the `VariableDataPrototype` that represents an `Event` or `Field Notifier` to a `SystemSignalGroup`. Please note that the datatype of an `Event` is a `Structure` as described above. Each primitive member of this `Structure` is mapped by the `SenderRecRecordElementMapping` to a `SystemSignal` in the `SystemSignalGroup`. The `SystemSignalGroup` is mapped as `ISignalGroup` into an `ISignalIPdu` that is transported over the network.
- the serialization of `Methods`, `Field Setters`, `Field Getters` by the `ComBasedTransformer` is not supported.

]()

**[TPS\_SYST\_02295] Serialization of ServiceInterfaces using SomeipTransformer** [If the `SomeipTransformer` is used to serialize the members of a `ServiceInterface`, then



- the `SenderReceiverToSignalMapping` is used to map the `VariableDataPrototype` that represents the `Event` or `Field Notifier` to a single `SystemSignal`. The `SystemSignal` is mapped as an `ISignal` into an `ISignalIPdu` that is transported over the network.
- the `ClientServerToSignalMapping` is used to map the `ClientServerOperation` that represents the `Method` or `Field Setter` or `Field Getter` to a `Call-SystemSignal` and to a `Return-SystemSignal`. Both `SystemSignals` are mapped as `ISignals` into dedicated `ISignalIPdus` that are transported over the network.
- the `SenderReceiverToSignalMapping` is used to map the `VariableDataPrototype` that represents the “fire & forget” method with data to a `SystemSignal`. The `SystemSignal` is mapped as `ISignal` into an `ISignalIPdu` that is transported over the network. The `messageType` in the `SOMEIPTransformationISignalProps` that is aggregated by the `ISignal` shall be set to `requestNoReturn`.
- the `TriggerToSignalMapping` is used to map the `Trigger` that represents the “fire & forget” method without data to a `SystemSignal`. The `SystemSignal` is mapped as `ISignal` into an `ISignalIPdu` that is transported over the network. The `messageType` in the `SOMEIPTransformationISignalProps` that is aggregated by the `ISignal` shall be set to `requestNoReturn`.

]()

The `ServiceInterfaces` itself are represented as `ServiceInstances` in the System Description. The `ProvidedServiceInstance` is used to describe that a specific instance of a `ServiceInterface` is provided on an `ApplicationEndpoint`. The `ConsumedServiceInstance` is used to describe that a search for a specific instance of a `ServiceInterface` is executed on an `ApplicationEndpoint`.

The `Pdus` that represent the elements of the `ServiceInterface` are attached to the `ServiceInstances` via `PduActivationRoutingGroups`.

Please note that the `Pdus` that represent the `Methods`, “fire & forget” methods, `Field Setter` and `Field Getter` are assigned to the `ServiceInstance` in a `methodActivationRoutingGroup` since they are activated by the SD module as soon as the `Service` is offered.

The `Pdus` that represent the `Events` and `Field Notifiers` are assigned to `EventHandlers` on the provided side as `pduActivationRoutingGroups` or to `ConsumedEventGroups` on the receiver side as `pduActivationRoutingGroups`.

**[TPS\_SYST\_02296] eventGroupControlType of a unicast Event** [If the `Pdu` represents an `Event` that is transmitted or received over unicast then the `eventGroupControlType` attribute of the `PduActivationRoutingGroup` that refers the `Pdu` shall be set to `activationUnicast`.]()

[TPS\_SYST\_02297] **eventGroupControlType of a multicast Event** [If the Pdu represents an Event that is transmitted or received over multicast then the eventGroupControlType attribute of the PduActivationRoutingGroup that refers the Pdu shall be set to activationMulticast.]()

[TPS\_SYST\_02298] **eventGroupControlType of a unicast Field** [If the Pdu represents a FieldNotifier that is transmitted or received over unicast then either:

- two PduActivationRoutingGroups shall be used where:
  - the eventGroupControlType attribute of the PduActivationRoutingGroup that refers the Pdu is set to activationUnicast.
  - the eventGroupControlType attribute of the PduActivationRoutingGroup that refers the Pdu is set to triggerUnicast.
- or one PduActivationRoutingGroup shall be used where the eventGroupControlType attribute of the PduActivationRoutingGroup that refers the Pdu shall be set to activationAndTriggerUnicast.

]()

With this approach it is ensured that the current value of the Field is sent back immediately to the subscriber in an event-like notification pattern as soon as the subscription to the field becomes effective (TriggerUnicast). Additional update notifications will be sent to subscribers over IP Unicast whenever the value of the field gets updated (ActivationUnicast). Please note that the immediate transmission of the current value to the subscriber of the Field value is supported over IP Unicast only.

Apart of the immediate transmission (TriggerUnicast) the server may choose to transmit further notifications over IP Multicast in case that the multicastThreshold is set to a value  $\geq 1$ . In this case a PduActivationRoutingGroup shall be used that has the eventGroupControlType attribute set to activationMulticast.

The following listing shows an example for a ProvidedServiceInstance of the RadarService.

```
<PROVIDED-SERVICE-INSTANCE>
  <SHORT-NAME>RadarService_1</SHORT-NAME>
  <MAJOR-VERSION>1</MAJOR-VERSION>
  <METHOD-ACTIVATION-ROUTING-GROUPS>
    <!-- /ServiceInstanceCollectionSets/SomeIpServiceInstances/
      RadarService_1/RadarService_1_methodActivationGroup -->
  <PDU-ACTIVATION-ROUTING-GROUP>
    <SHORT-NAME>RadarService_1_methodActivationGroup</SHORT-NAME>
    <I-PDU-IDENTIFIER-UDP-REFS>
      <I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>/
      SoConIpduIdentifierSet/RadarServicePduSet/
      RadarService_Calibrate_Call</I-PDU-IDENTIFIER-UDP-REF>
      <I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>/
      SoConIpduIdentifierSet/RadarServicePduSet/
      RadarService_Calibrate_Return</I-PDU-IDENTIFIER-UDP-REF>
```

```

<I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/
  RadarService_Adjust_Call</I-PDU-IDENTIFIER-UDP-REF>
<I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/
  RadarService_Adjust_Return</I-PDU-IDENTIFIER-UDP-REF>
<I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/
  RadarService_UpdateRate_Getter_Call</I-PDU-IDENTIFIER-UDP-REF>
<I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/
  RadarService_UpdateRate_Getter_Return</I-PDU-IDENTIFIER-UDP-REF>
<I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/
  RadarService_UpdateRate_Setter_Call</I-PDU-IDENTIFIER-UDP-REF>
<I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/
  RadarService_UpdateRate_Setter_Return</I-PDU-IDENTIFIER-UDP-REF>
<I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/
  RadarService_LogCurrentState</I-PDU-IDENTIFIER-UDP-REF>
<I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/RadarService_Reset</I-
PDU-IDENTIFIER-UDP-REF>
</I-PDU-IDENTIFIER-UDP-REFS>
</PDU-ACTIVATION-ROUTING-GROUP>
</METHOD-ACTIVATION-ROUTING-GROUPS>
<EVENT-HANDLERS>
  <!-- /ServiceInstanceCollectionSets/SomeIpServiceInstances/
  RadarService_1/EventGroup_All -->
<EVENT-HANDLER>
  <SHORT-NAME>EventGroup_All</SHORT-NAME>
  <EVENT-GROUP-IDENTIFIER>1</EVENT-GROUP-IDENTIFIER>
  <EVENT-MULTICAST-ADDRESS>
    <APPLICATION-ENDPOINT-REF-CONDITIONAL>
      <APPLICATION-ENDPOINT-REF DEST="APPLICATION-ENDPOINT"/>
      CommunicationClusters/EthernetCluster/Vlan73/
      MyEcuMulticastSocketAddress/MyEcuMulticastAep</APPLICATION-
      ENDPOINT-REF>
    </APPLICATION-ENDPOINT-REF-CONDITIONAL>
  </EVENT-MULTICAST-ADDRESS>
  <MULTICAST-THRESHOLD>2</MULTICAST-THRESHOLD>
<PDU-ACTIVATION-ROUTING-GROUPS>
  <!-- /ServiceInstanceCollectionSets/SomeIpServiceInstances/
  RadarService_1/EventGroup_All/
  RadarService_1_eventAndNotifierActivationUnicastGroup -->
<PDU-ACTIVATION-ROUTING-GROUP>
  <SHORT-NAME>RadarService_1_eventAndNotifierActivationUnicastGroup
  </SHORT-NAME>
  <EVENT-GROUP-CONTROL-TYPE>ACTIVATION-UNICAST</EVENT-GROUP-CONTROL
  -TYPE>
</I-PDU-IDENTIFIER-UDP-REFS>
  <I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
  SoConIpduIdentifierSet/RadarServicePduSet/
  RadarService_BrakeEvent</I-PDU-IDENTIFIER-UDP-REF>

```

```

        <I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
            SoConIpduIdentifierSet/RadarServicePduSet/
            RadarService_UpdateRate_Notifier</I-PDU-IDENTIFIER-UDP-REF>
        </I-PDU-IDENTIFIER-UDP-REFS>
    </PDU-ACTIVATION-ROUTING-GROUP>
    <!-- /ServiceInstanceCollectionSets/SomeIpServiceInstances/
        RadarService_1/EventGroup_All/RadarService_1_TriggerUnicastGroup
        -->
    <PDU-ACTIVATION-ROUTING-GROUP>
        <SHORT-NAME>RadarService_1_TriggerUnicastGroup</SHORT-NAME>
        <EVENT-GROUP-CONTROL-TYPE>TRIGGER-UNICAST</EVENT-GROUP-CONTROL-
            TYPE>
        <I-PDU-IDENTIFIER-UDP-REFS>
            <I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
                SoConIpduIdentifierSet/RadarServicePduSet/
                RadarService_UpdateRate_Notifier</I-PDU-IDENTIFIER-UDP-REF>
            </I-PDU-IDENTIFIER-UDP-REFS>
        </PDU-ACTIVATION-ROUTING-GROUP>
    <!-- /ServiceInstanceCollectionSets/SomeIpServiceInstances/
        RadarService_1/EventGroup_All/
        RadarService_1_eventAndNotifierActivationMulticastGroup -->
    <PDU-ACTIVATION-ROUTING-GROUP>
        <SHORT-NAME>
            RadarService_1_eventAndNotifierActivationMulticastGroup</SHORT-
                NAME>
        <EVENT-GROUP-CONTROL-TYPE>ACTIVATION-MULTICAST</EVENT-GROUP-
            CONTROL-TYPE>
        <I-PDU-IDENTIFIER-UDP-REFS>
            <I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
                SoConIpduIdentifierSet/RadarServicePduSet/
                RadarService_BrakeEvent</I-PDU-IDENTIFIER-UDP-REF>
            <I-PDU-IDENTIFIER-UDP-REF DEST="SO-CON-I-PDU-IDENTIFIER"/>
                SoConIpduIdentifierSet/RadarServicePduSet/
                RadarService_UpdateRate_Notifier</I-PDU-IDENTIFIER-UDP-REF>
            </I-PDU-IDENTIFIER-UDP-REFS>
        </PDU-ACTIVATION-ROUTING-GROUP>
    </PDU-ACTIVATION-ROUTING-GROUPS>
    </EVENT-HANDLER>
</EVENT-HANDLERS>
<INSTANCE-IDENTIFIER>1</INSTANCE-IDENTIFIER>
<LOCAL-UNICAST-ADDRESS>
    <APPLICATION-ENDPOINT-REF-CONDITIONAL>
        <APPLICATION-ENDPOINT-REF DEST="APPLICATION-ENDPOINT"/>
            CommunicationClusters/EthernetCluster/Vlan73/
            MyEcuUnicastSocketAddress/MyEcuUnicastAep</APPLICATION-ENDPOINT-
                REF>
    </APPLICATION-ENDPOINT-REF-CONDITIONAL>
</LOCAL-UNICAST-ADDRESS>
<MINOR-VERSION>0</MINOR-VERSION>
<SERVICE-IDENTIFIER>27</SERVICE-IDENTIFIER>
</PROVIDED-SERVICE-INSTANCE>

```


Listing 10.4: Example for a [ProvidedServiceInstance](#)

## 11 Software Cluster

### 11.1 Big Picture

Among the different architecture approaches implemented in automotive software solutions, the so-called *domain architecture* is characterized by the existence of so-called *domain controllers*<sup>1</sup> that act as a “manager” for a specific domain (e.g. powertrain, body, chassis) in automotive software.

*Domain controllers* are connected to each other via a backbone communication bus and also typically utilize various communication buses to communicate with domain-specific controller ECUs. The concept of *domain controllers* is sketched in Figure 11.1.

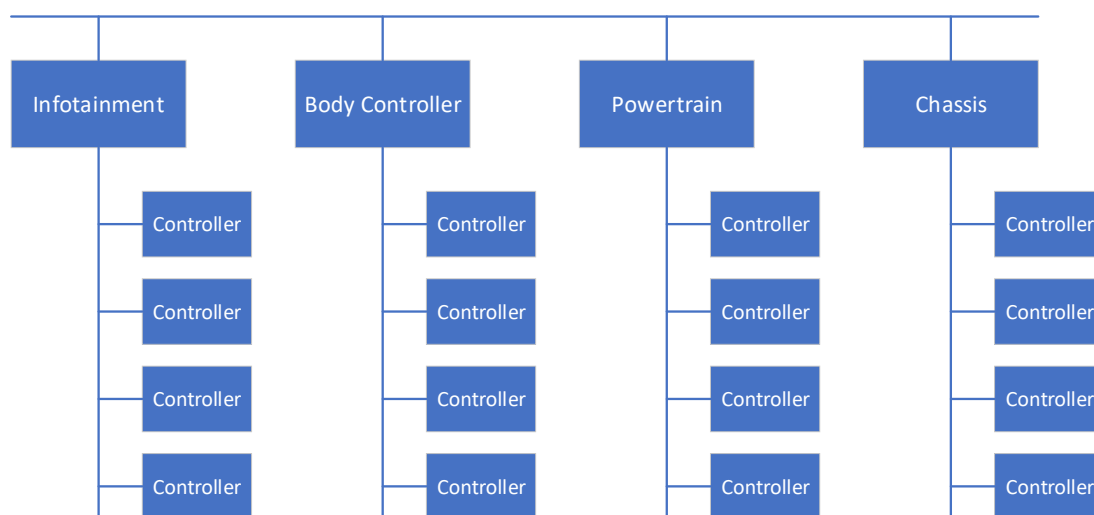

**Figure 11.1: Sketch of an automotive *domain controller* architecture**

A consequence of the *domain controller* concept is that the individual *domain controller* ECUs become very complex and typically host several thousand software-components. As far as the methodology on the *AUTOSAR classic platform* is concerned<sup>2</sup>, the ECU needs to be fully integrated **before** the generation of the RTE can be started.

The integration involves not only the consistent configuration of all basic software modules but also requires the creation of connections between the application software and the service software-components that represent the service layer of the AUTOSAR basic software.

This leads to the following list of issues:

- Generation of the RTE takes a long time.

<sup>1</sup>This term is inspired by the existence of functional domains inside a typical vehicle, not to be confused with the definition of the term (“central authentication server”) in general computer science.


<sup>2</sup>The workflow on the *AUTOSAR classic platform* is centered around the idea to build a complete executable image for each ECU in one step

- Single failures can block the entire integration process.
- Build times become very high.

Please note that similar problems occur in any kind of software architecture which centralizes software functionality in specific ECUs, e.g. zone Controllers.

In response to the increase in complexity, integration time, possible mistakes, and build time, the software on such complex ECUs can be structurally decomposed into so-called `Software Clusters` of arbitrary complexity.

A `Software Cluster` can be developed, integrated against, and built independently of the surrounding host system on the enclosing ECU. After completion of the development workflow, a `Software Cluster` can be deployed to its host ECU independently, i.e. the deployment of such a `Software Cluster` does not require the entire ECU to be re-programmed.

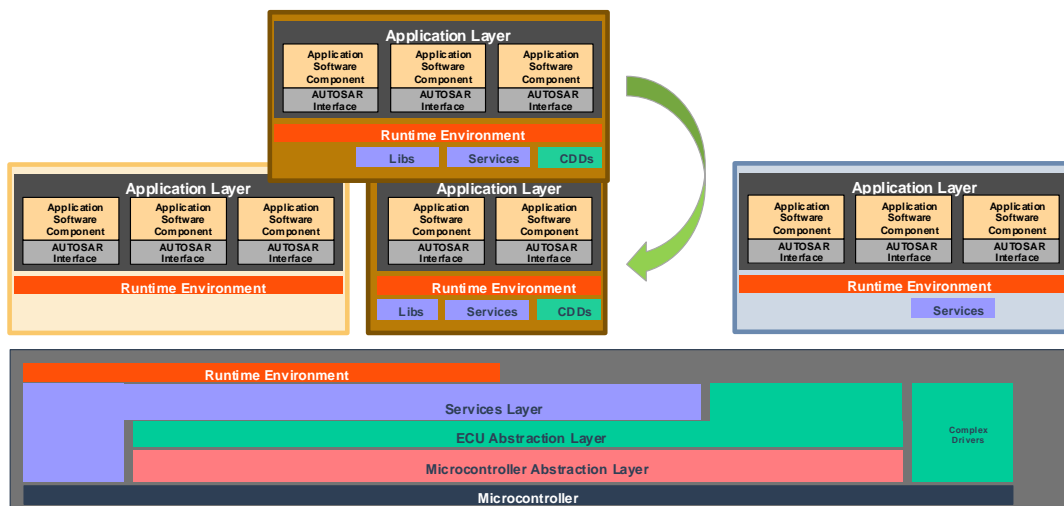

**Figure 11.2: Replace an existing `Software Cluster` without reprogramming the entire ECU**

In other words, the rest of the software on the respective ECU can be left unchanged and is kept binary identical if a given `Software Cluster` is flashed onto the respective ECU.

**[TPS\_SYST\_02315]{DRAFT} Definition of a software cluster on the *AUTOSAR classic platform*** [On the *AUTOSAR classic platform*, a `Software Cluster` is represented by meta-class `CpSoftwareCluster`. A `CpSoftwareCluster` is defined by references to a collection of either

- `CompositionSwComponentType` in the role `swComposition`, in this case the `CpSoftwareCluster` is described as a re-usable asset out of the context of a concrete `System`.

- `SwComponentPrototype` in the role `swComponent`, in the case the `CpSoftwareCluster` is defined in the context of a `System`.

](RS\_SYST\_00060)

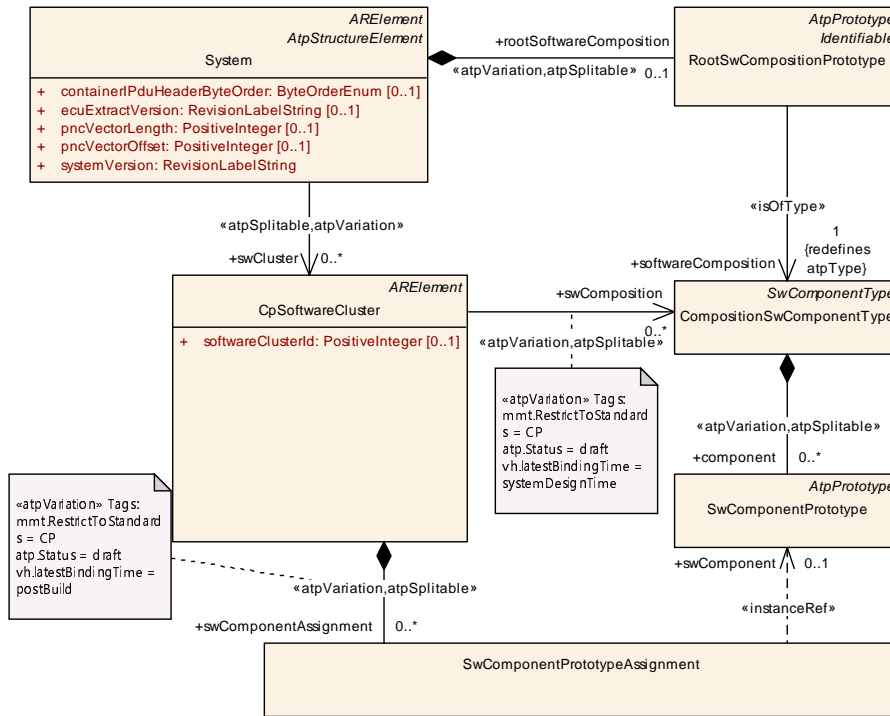


Figure 11.3: Modeling of the `CpSoftwareCluster`

[TPS\_SYST\_02316]{DRAFT} **Semantics of meta-class `SwComponentPrototypeAssignment`** [Meta-class `SwComponentPrototypeAssignment` as well as its aggregation at `CpSoftwareCluster` in the role `swComponentAssignment` supports the definition of a variation point in the relation between `CpSoftwareCluster` and `SwComponentPrototype`.] (RS\_SYST\_00060)

<b>Class</b>	<b>CpSoftwareCluster</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	<p>This meta class provides the ability to define a CP Software Cluster. Each CP Software Cluster can be integrated and build individually. It defines the sub-set of hierarchical tree(s) of Software Components belonging to this CP Software Cluster. Resources required or provided by this CP Software Cluster are given in the according mappings.</p> <p><b>Tags:</b>  atp.Status=draft  atp.recommendedPackage=CpSoftwareClusters</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
softwareClusterId	PositiveInteger	0..1	attr	This attribute represents the value of the id of the corresponding CP software cluster.







Class	CpSoftwareCluster			
swComponentAssignment	<a href="#">SwComponentPrototypeAssignment</a>	*	aggr	This is the collection of SwComponentPrototype Assignments  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=swComponentAssignment, swComponentAssignment.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=postBuild
swComposition	<a href="#">CompositionSwComponentType</a>	*	ref	Software Components in the context of a CompositionSwComponentType belonging to this CP Software Cluster. This reference can be used to describe the belonging SWCs when the CP Software Cluster is described out of the context of a System, e.g. reusable CP Software Cluster.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=swComposition.compositionSwComponentType, swComposition.variationPoint.shortLabel atp.Status=draft vh.latestBindingTime=systemDesignTime

**Table 11.1: CpSoftwareCluster**

Class	SwComponentPrototypeAssignment			
Package	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
Note	This meta-class is only required to allow for the variant modeling of an instanceRef. <b>Tags:</b> atp.Status=draft			
Base	ARObject			
Aggregated by	<a href="#">CpSoftwareCluster.swComponentAssignment</a>			
Attribute	Type	Mult.	Kind	Note
swComponent	<a href="#">SwComponentPrototype</a>	0..1	iref	hierarchical tree(s) of Software Components belonging to this CP Software Cluster. This reference is used to describe the belonging SWCs if the CP Software Cluster is described in the context of a System,  <b>Tags:</b> atp.Status=draft <b>InstanceRef implemented by:</b> <a href="#">ComponentInSystemInstanceRef</a>

**Table 11.2: SwComponentPrototypeAssignment**

[TPS\_SYST\_02317]{DRAFT} **References from [CpSoftwareCluster](#) to [CompositionSwComponentType](#) and [SwComponentPrototype](#)** [The usage of the reference [CpSoftwareCluster.swComposition](#) shall eventually be replaced by the [swComponentAssignment](#) aggregation when the [SwComponentPrototypes](#) referenced by the [CpSoftwareCluster](#) (via the role [swComponentAssignment](#)) are integrated into a concrete Ecu Extract.] ([RS\\_SYST\\_00060](#))

[constr\_5327] **Existence of attribute [CpSoftwareCluster.category](#)** [For each [CpSoftwareCluster](#), attribute [category](#) shall exist at the time when the definition of the resource pool is finished.] (/)

[constr\_5335] **[CpSoftwareCluster.softwareClusterId](#) shall be unique in the scope of an [EcuInstance](#)** [The [softwareClusterId](#) shall be unique for each



`CpSoftwareCluster` that is mapped to the same `EcuInstance` with the `CpSoftwareClusterToEcuInstanceMapping`.>()

**[constr\_5336] Existence of `CpSoftwareCluster.softwareClusterId`** [For each `CpSoftwareCluster`, attribute `softwareClusterId` shall exist at the time when when the `SW_CLUSTER_SYSTEM_DESCRIPTION` is complete.]()

<b>Class</b>	<b>CompositionSwComponentType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Composition			
<b>Note</b>	<p>A <code>CompositionSwComponentType</code> aggregates <code>SwComponentPrototypes</code> (that in turn are typed by <code>SwComponentTypes</code>) as well as <code>SwConnectors</code> for primarily connecting <code>SwComponentPrototypes</code> among each others and towards the surface of the <code>CompositionSwComponentType</code>. By this means, hierarchical structures of software-components can be created.</p> <p><b>Tags:</b>atp.recommendedPackage=SwComponentTypes</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
component	<a href="#">SwComponentPrototype</a>	*	aggr	<p>The instantiated components that are part of this composition. The aggregation of <code>SwComponentPrototype</code> is subject to variability with the purpose to support the conditional existence of a <code>SwComponentPrototype</code>. Please be aware: if the conditional existence of <code>SwComponentPrototypes</code> is resolved post-build the deselected <code>SwComponentPrototypes</code> are still contained in the ECUs build but the instances are inactive in that they are not scheduled by the RTE.</p> <p>The aggregation is marked as <code>atpSplitable</code> in order to allow the addition of service components to the ECU extract during the ECU integration.</p> <p>The use case for having 0 components owned by the <code>CompositionSwComponentType</code> could be to deliver an empty <code>CompositionSwComponentType</code> to e.g. a supplier for filling the internal structure.</p> <p><b>Stereotypes:</b> <code>atpSplitable</code>; <code>atpVariation</code>  <b>Tags:</b>  <code>atp.Splitkey=component.shortName, component.variationPoint.shortLabel</code>  <code>vh.latestBindingTime=postBuild</code></p>
connector	<a href="#">SwConnector</a>	*	aggr	<p><code>SwConnectors</code> have the principal ability to establish a connection among <code>PortPrototypes</code>. They can have many roles in the context of a <code>CompositionSwComponentType</code>. Details are refined by subclasses.</p> <p>The aggregation of <code>SwConnectors</code> is subject to variability with the purpose to support variant data flow.</p> <p>The aggregation is marked as <code>atpSplitable</code> in order to allow the extension of the ECU extract with <code>AssemblySwConnectors</code> between <code>ApplicationSwComponentTypes</code> and <code>ServiceSwComponentTypes</code> during the ECU integration.</p> <p><b>Stereotypes:</b> <code>atpSplitable</code>; <code>atpVariation</code>  <b>Tags:</b>  <code>atp.Splitkey=connector.shortName, connector.variationPoint.shortLabel</code>  <code>vh.latestBindingTime=postBuild</code></p>





Class	CompositionSwComponentType			
constantValue Mapping	ConstantSpecification MappingSet	*	ref	Reference to the ConstantSpecificationMapping to be applied for initValues of PPortComSpecs and RPortCom Spec. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=constantValueMapping
dataType Mapping	<a href="#">DataTypeMappingSet</a>	*	ref	Reference to the DataTypeMapping to be applied for the used ApplicationDataTypes in PortInterfaces.  Background: when developing subsystems it may happen that ApplicationDataTypes are used on the surface of CompositionSwComponentTypes. In this case it would be reasonable to be able to also provide the intended mapping to the ImplementationDataTypes. However, this mapping shall be informal and not technically binding for the implementors mainly because the RTE generator is not concerned about the CompositionSwComponent Types.  Rationale: if the mapping of ApplicationDataTypes on the delegated and inner PortPrototype matches then the mapping to ImplementationDataTypes is not impacting compatibility. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=dataTypeMapping
instantiation RTEEventProps	InstantiationRTEEvent Props	*	aggr	This allows to define instantiation specific properties for RTE Events, in particular for instance specific scheduling. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=instantiationRTEEventProps.shortLabel, instantiationRTEEventProps.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime

**Table 11.3: CompositionSwComponentType**

Class	SwComponentPrototype			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Composition			
<b>Note</b>	Role of a software component within a composition.			
<b>Base</b>	<i>ARObject</i> , <i>AtpFeature</i> , <i>AtpPrototype</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<i>AtpClassifier.atpFeature</i> , <a href="#">CompositionSwComponentType.component</a>			
Attribute	Type	Mult.	Kind	Note
type	<a href="#">SwComponentType</a>	0..1	tref	Type of the instance. <b>Stereotypes:</b> isOfType

**Table 11.4: SwComponentPrototype**

[TPS\_SYST\_02318]{DRAFT} **Membership in [System](#)** [The membership of a given [CpSoftwareCluster](#) can be formalized by means of the reference [System.swCluster](#).] ([RS\\_SYST\\_00060](#))

[TPS\_SYST\_02319]{DRAFT} **Semantics of attribute [CpSoftwareCluster.category](#)** [The following values for attribute [CpSoftwareCluster.category](#) are standardized by AUTOSAR:


- **HOST\_SOFTWARE\_CLUSTER**: the `CpSoftwareCluster` that contains the major part of the basic-software stack, especially micro-controller-dependent modules including the operating system.
- **APPLICATION\_SOFTWARE\_CLUSTER**: the `CpSoftwareCluster` represents application-level functionality conceptually located on top of the `CpSoftwareCluster` of category `HOST_SOFTWARE_CLUSTER`.

](RS\_SYST\_00060)

**[constr\_5176]{DRAFT} Existence of `CpSoftwareCluster` of category `HOST_SOFTWARE_CLUSTER` on one `EcuInstance`** [On each `EcuInstance`, exactly one `CpSoftwareCluster` of category `HOST_SOFTWARE_CLUSTER` shall exist.]()

**[constr\_5177]{DRAFT} Validity of reference `CpSoftwareClusterToEcuInstanceMapping.swCluster`** [A `CpSoftwareClusterToEcuInstanceMapping` that references a given `CpSoftwareCluster` in the role `CpSoftwareClusterToEcuInstanceMapping.swCluster` shall be aggregated by the same `System` (in the role `System.mapping.swMapping`) that also refers to the referenced `CpSoftwareCluster` in the role `System.swCluster`.]()

The interaction of `Software Clusters` with the service layer of the basic software stack requires the definition of `Software Cluster Resources` (see Figure 11.4). `Software Clusters` declare required and provided `Software Cluster Resources` that can be satisfied from a central resource pool.

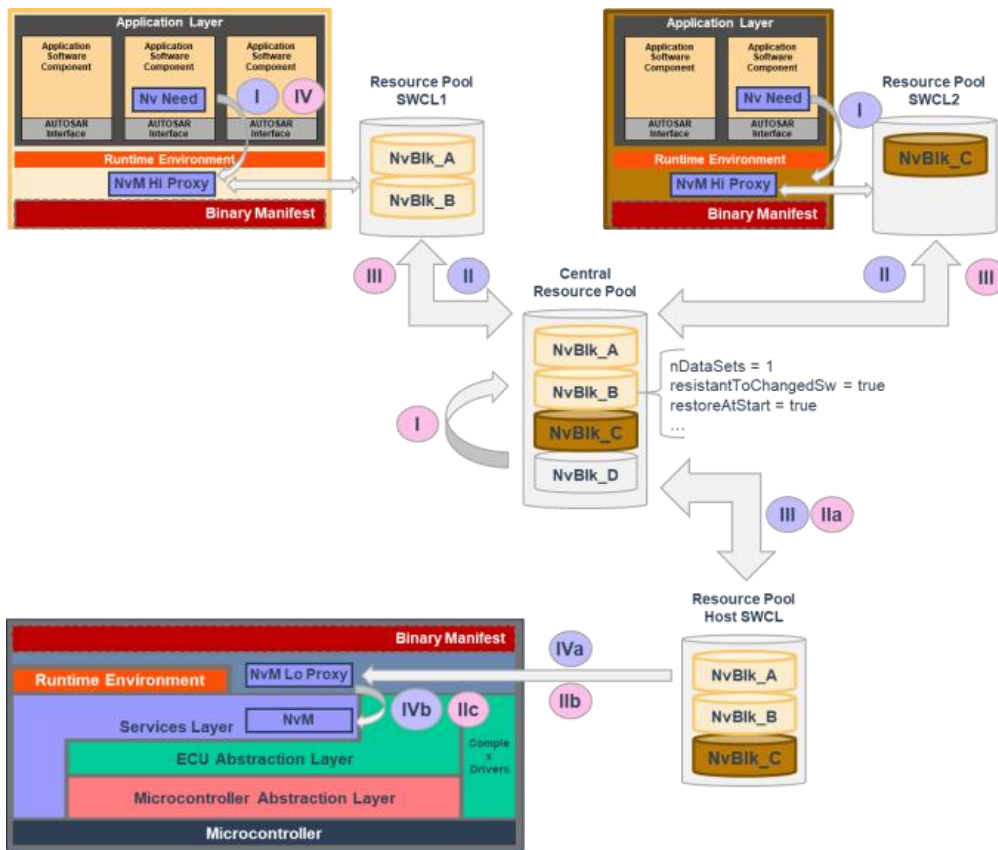

**Figure 11.4: Example usage of Software Cluster Resources**

Details regarding the [Software Cluster Resource](#) are described in section [11.2](#).


There are in principle two different approaches to connect [Software Clusters](#) with each other:

**Off-board** In this case the connection is created by a software tool on the basis of the binary image of the [Software Cluster](#) and modeled information that formally describes the so-called [Software Cluster Binary Manifest](#). The content of the model of the [Software Cluster Binary Manifest](#) represents meta-data of the actual connection information. The main benefit of this approach is that the meta-data does not have to be stored on-board, i.e. on the target Ecu.

**On-board** In this case the connection is created by software running on the target Ecu during the reprogramming phase on the basis of meta-data of the connection endpoints (semantically identical to the content of the model of the respective [Software Cluster Binary Manifest](#)). The connection data is stored in modifiable memory. The meta-data content is stored on device, and the required memory markup for this aspect needs to be taken into account for Ecu design.

It is important to understand that the [Software Cluster](#) and the corresponding [Software Cluster Binary Manifest](#) are associated with different steps in the development workflow. A [Software Cluster](#) represents a design model element while the [Software Cluster Binary Manifest](#) is a derived information used to support a downstream integration phase for defining an off-board connection.

This relation leads to modeling decisions, such that elements of the [Software Cluster Binary Manifest](#) can only reference elements of the [Software Cluster](#), but can't be aggregated by them.

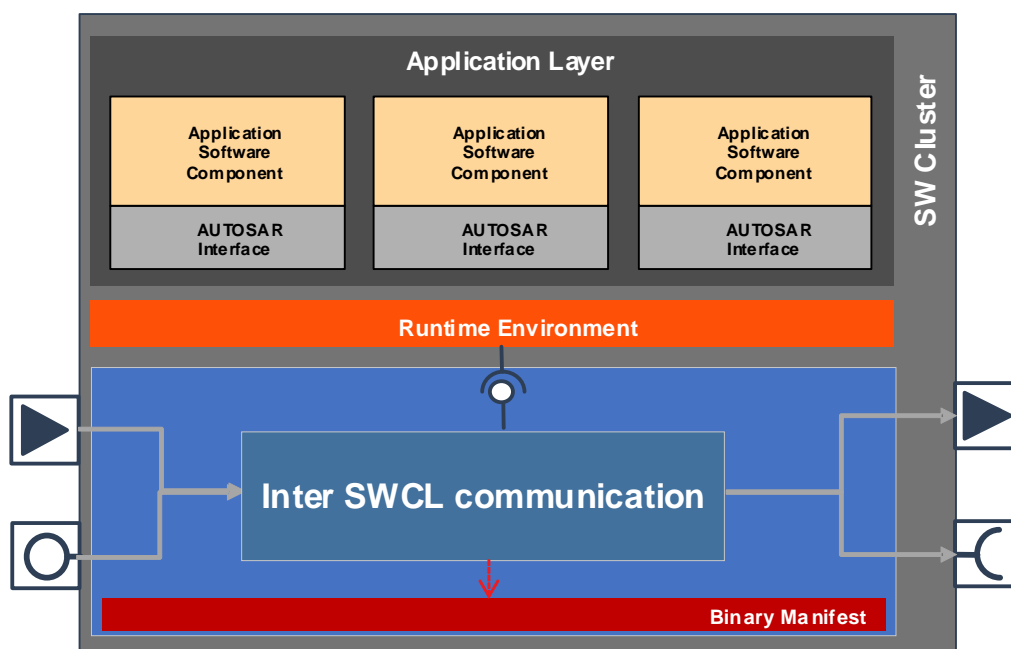


**Figure 11.5: Software Cluster Binary Manifest of a single Software Cluster**

The [Software Cluster Binary Manifest](#) is described in more detail in section 11.3.

The mapping of [Software Clusters](#) to [EcuInstance](#) and [ApplicationPartition](#) is described in section 5.5.

## 11.2 Software Cluster Resources

A [CpSoftwareCluster](#) is able to provide [CpSoftwareClusterResources](#) that will be accessed by other [CpSoftwareClusters](#). At the same time a [CpSoftwareCluster](#) may require [CpSoftwareClusterResources](#) from other [CpSoftwareClusters](#) to operate the software that belongs to the [CpSoftwareCluster](#).

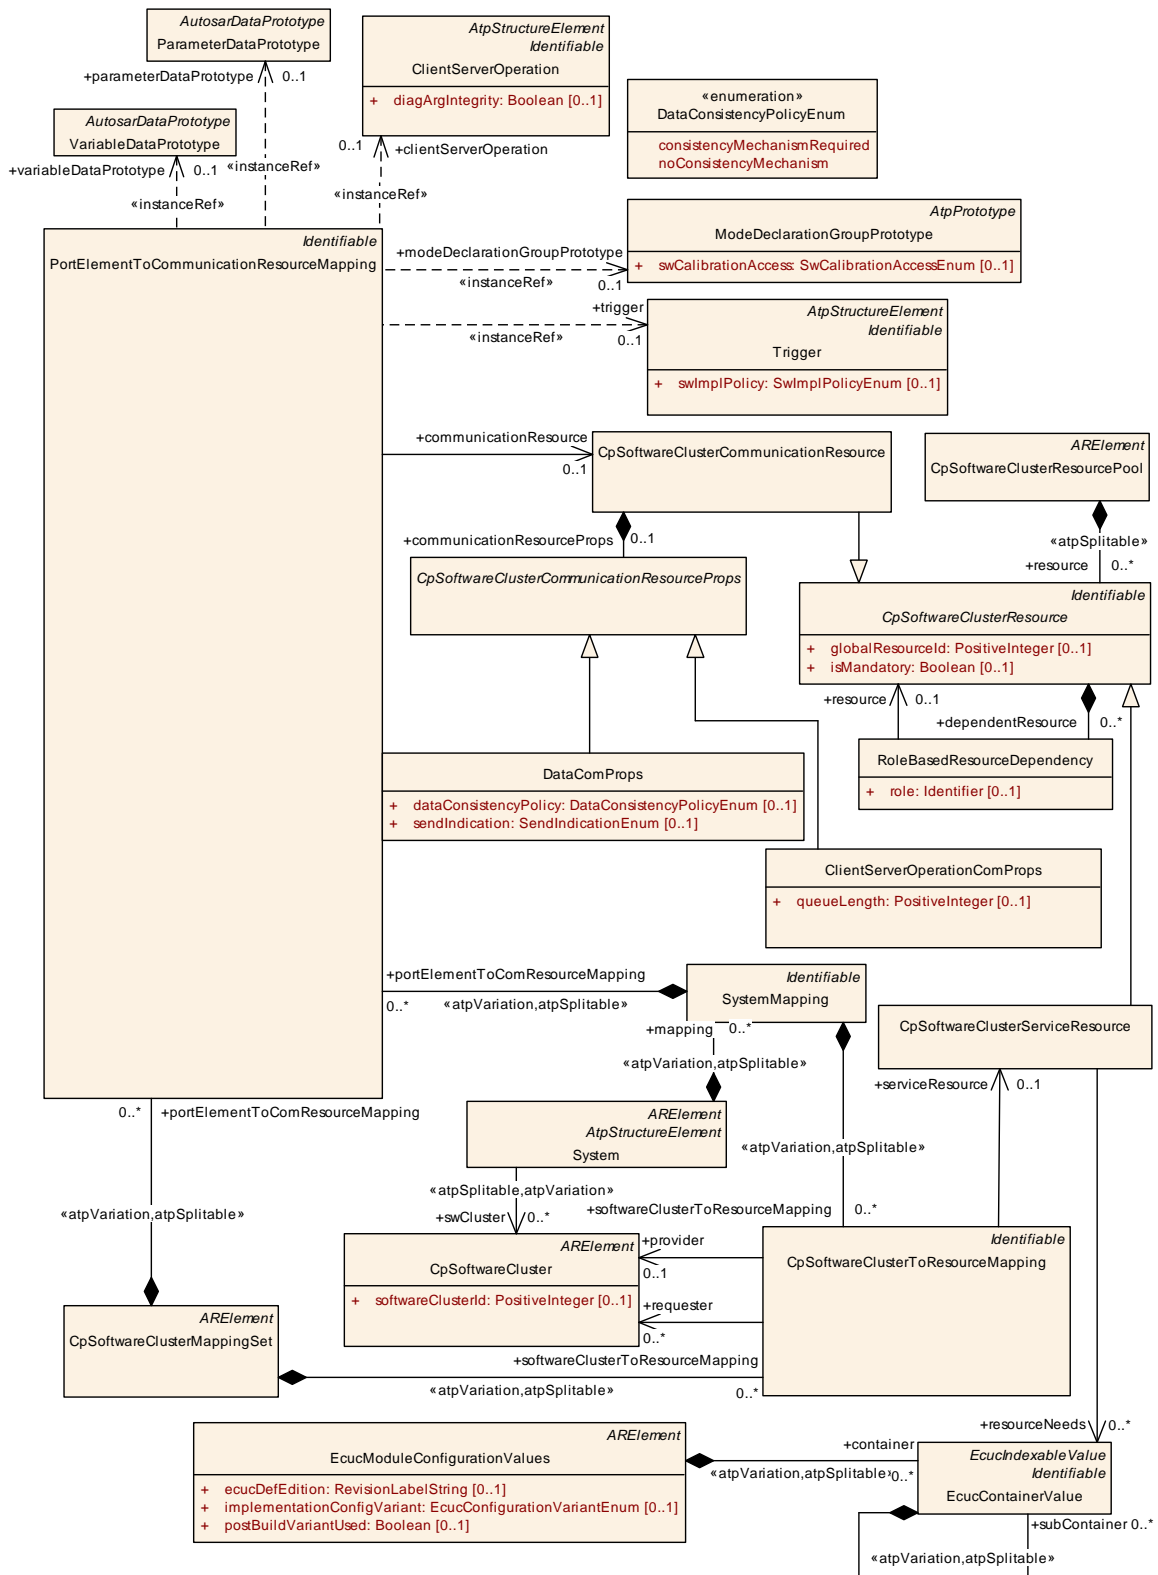

**Figure 11.6: Software Cluster Resources**

[TPS\_SYST\_02320]{DRAFT} Kinds of **CpSoftwareClusterResources** [There are two kinds of **CpSoftwareClusterResources**:

- [CpSoftwareClusterCommunicationResource](#) that relates to a port based communication on VFB level, for instance to a sender-receiver communication or client-server communication,
- [CpSoftwareClusterServiceResource](#) that relates to the Basic Software, for instance to a NvBlock.

|(RS\_SYST\_00060, RS\_SYST\_00062)

<b>Class</b>	<b>CpSoftwareClusterResourcePool</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	Represents the pool of resources which can be provided or required by CP Software Clusters. <b>Tags:</b> atp.Status=draft atp.recommendedPackage=CpSoftwareClusterResourcePools			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ecuScope	<a href="#">EcuInstance</a>	*	ref	This reference identifies the EcuInstance in which the resource pool is defined. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=ecuScope atp.Status=draft
resource	<a href="#">CpSoftwareClusterResource</a>	*	aggr	This aggregation represents the collection of resources in the enclosing resource pool. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=resource.shortName atp.Status=draft

**Table 11.5: CpSoftwareClusterResourcePool**

<b>Class</b>	<b>CpSoftwareClusterResource</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	Represents a single resource required or provided by a CP Software Cluster. <b>Tags:</b> atp.Status=draft atp.recommendedPackage=Resources			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">CpSoftwareClusterCommunicationResource</a> , <a href="#">CpSoftwareClusterServiceResource</a>			
<b>Aggregated by</b>	<a href="#">CpSoftwareClusterResourcePool.resource</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dependent Resource	<a href="#">RoleBasedResourceDependency</a>	*	aggr	Link to a resource which depends on this resource to implement them. <b>Tags:</b> atp.Status=draft





Class	CpSoftwareClusterResource (abstract)			
globalResourceId	PositiveInteger	0..1	attr	A unique identifiers per resource used for the connection process. The identifier is required to be unique in the scope of a single machine. If software clusters are designed to be reused on multiple machines the uniqueness requirements applies for all the intended machines. <b>Tags:</b> atp.Status=draft
isMandatory	Boolean	0..1	attr	This attribute indicates, that the resource is mandatory to operate the Software Cluster. If the resource is not provided on the machine the connection process of any Software Cluster requiring this resource gets aborted. <b>Tags:</b> atp.Status=draft

**Table 11.6: CpSoftwareClusterResource**

Class	RoleBasedResourceDependency			
Package	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
Note	This class specifies a dependency between CpSoftwareClusterResources. <b>Tags:</b> atp.Status=draft			
Base	ARObject			
Aggregated by	CpSoftwareClusterResource.dependentResource			
Attribute	Type	Mult.	Kind	Note
resource	CpSoftwareClusterResource	0..1	ref	Reference to resource for which the dependency is depicted. <b>Tags:</b> atp.Status=draft
role	Identifier	0..1	attr	This is attributes characterizes the kind of dependency <b>Tags:</b> atp.Status=draft

**Table 11.7: RoleBasedResourceDependency**

**[constr\_5178]{DRAFT} Existence of attribute CpSoftwareClusterResource.globalResourceId** [For each CpSoftwareClusterResource, attribute globalResourceId shall exist **at the time when the definition of the resource pool is finished.**]()

**[constr\_5179]{DRAFT} Existence of attribute CpSoftwareClusterResource.isMandatory** [For each CpSoftwareClusterResource, attribute isMandatory shall exist **at the time when the definition of the resource pool is finished.**]()

**[constr\_5180]{DRAFT} Allowed values for CpSoftwareClusterResource.globalResourceId** [Attribute CpSoftwareClusterResource.globalResourceId shall not be set to 0.]()

For explanation of [constr\_5180], the value 0 is reserved to mark an invalid ID value.



<b>Class</b>	<b>CpSoftwareClusterCommunicationResource</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	Represents a single resource required or provided by a CP Software Cluster which relates to the port based communication on VFB level. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<i>ARObject</i> , <a href="#">CpSoftwareClusterResource</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CpSoftwareClusterResourcePool.resource</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
communicationResourceProps	<a href="#">CpSoftwareClusterCommunicationResourceProps</a>	0..1	aggr	This aggregation supports the further qualification of the enclosing CpSoftwareClusterCommunicationResource by means of additional attributes depending on the nature of the CpSoftwareClusterCommunicationResource.

**Table 11.8: CpSoftwareClusterCommunicationResource**

<b>Class</b>	<b>CpSoftwareClusterCommunicationResourceProps</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	Communication properties for cross cluster communication. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<i>ARObject</i>			
<b>Subclasses</b>	<a href="#">ClientServerOperationComProps</a> , <a href="#">DataComProps</a>			
<b>Aggregated by</b>	<a href="#">CpSoftwareClusterCommunicationResource.communicationResourceProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 11.9: CpSoftwareClusterCommunicationResourceProps**

<b>Class</b>	<b>DataComProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	Represents a single resource required or provided by a CP Software Cluster which relates to the port based communication on VFB level. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<i>ARObject</i> , <a href="#">CpSoftwareClusterCommunicationResourceProps</a>			
<b>Aggregated by</b>	<a href="#">CpSoftwareClusterCommunicationResource.communicationResourceProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataConsistencyPolicy	<a href="#">DataConsistencyPolicyEnum</a>	0..1	attr	This attribute defines requirements on the data consistency mechanism in the cross cluster communication. If the attribute is not set, the default value consistencyMechanismRequired applies. <b>Tags:</b> atp.Status=draft
sendIndication	<a href="#">SendIndicationEnum</a>	0..1	attr	Send indication behavior for last-is-the best data communication.

**Table 11.10: DataComProps**

<b>Enumeration</b>	<b>DataConsistencyPolicyEnum</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	Defines how data consistency is ensured in the cross cluster communication.			
<b>Aggregated by</b>	<a href="#">DataComProps.dataConsistencyPolicy</a>			





<b>Enumeration</b>	<b>DataConsistencyPolicyEnum</b>
<b>Literal</b>	<b>Description</b>
consistency Mechanism Required	In this case the data consistency is ensured by the implementation of the SwClucC module. <b>Tags:</b> atp.EnumerationLiteralIndex=0
noConsistency Mechanism	In this case the data consistency is not ensured by the SwClucC module. In this case it has to be ensured by scheduling. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table 11.11: DataConsistencyPolicyEnum**

<b>Class</b>	<b>ClientServerOperationComProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	Defines additional attributes for the implementation of Client Server communication between software clusters <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<i>ARObject</i> , <i>CpSoftwareClusterCommunicationResourceProps</i>			
<b>Aggregated by</b>	<i>CpSoftwareClusterCommunicationResource.communicationResourceProps</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
queueLength	PositiveInteger	0..1	attr	Length of call request queue on the server side. The queue is implemented by the SwCluC. The value shall be greater or equal to 1. Setting the value of queueLength to 1 implies that incoming requests are rejected while another request that arrived earlier is being processed. <b>Tags:</b> atp.Status=draft

**Table 11.12: ClientServerOperationComProps**

<b>Enumeration</b>	<b>SendIndicationEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster
<b>Note</b>	This meta-class provides a way to specify in which way redundancy shall be applied on collection level. <b>Tags:</b> atp.Status=draft
<b>Aggregated by</b>	<i>DataComProps.sendIndication</i>
<b>Literal</b>	<b>Description</b>
anySendOperation	This value represents the requirement that any send operation of the Software Cluster is indicated. <b>Tags:</b> atp.EnumerationLiteralIndex=2 atp.Status=draft
none	This value represents the requirement that send operations of the Software Cluster are not indicated. <b>Tags:</b> atp.EnumerationLiteralIndex=1 atp.Status=draft

**Table 11.13: SendIndicationEnum**

<b>Class</b>	<b>CpSoftwareClusterServiceResource</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	Represents a single resource required or provided by a CP Software Cluster which relates to the BSW. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<i>ARObject</i> , <i>CpSoftwareClusterResource</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<i>CpSoftwareClusterResourcePool.resource</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
resourceNeeds	<i>EcucContainerValue</i>	*	ref	Reference(s) to one or multiple <i>EcucContainerValue</i> (s) qualifying the characteristics of the resource. <b>Tags:</b> atp.Status=draft

**Table 11.14: CpSoftwareClusterServiceResource**

**[constr\_5181]{DRAFT} Existence of attribute *CpSoftwareClusterServiceResource.category*** [For each *CpSoftwareClusterServiceResource*, attribute *category* shall exist at the time when the definition of the resource pool is finished.]()

The applicable values of *CpSoftwareClusterServiceResource.category* are defined in the document "Software Cluster Connection".

*CpSoftwareClusterResources* are collected in *CpSoftwareClusterResourcePools* and are assigned to a *CpSoftwareCluster* in different ways as defined by the following specification items:

**[TPS\_SYST\_02321]{DRAFT} Assignment of *CpSoftwareClusterCommunicationResources* to *CpSoftwareClusters* in the context of a *SwComponentPrototype*** [In case that a *SwComponentPrototype* is defined in the context of a *System* and this *SwComponentPrototype* is assigned to the *CpSoftwareCluster* with the *CpSoftwareCluster.swComponentAssignment* and the *SwComponentPrototype* defines an interface of the *CpSoftwareCluster* then the *PortElementToCommunicationResourceMapping* aggregated by a *SystemMapping* maps the *CpSoftwareClusterCommunicationResource* to an element of a *PortInterface* used in the context of a *PortPrototype* in the *SwComponentPrototype*.

If the *PortPrototype* of the *SwComponentPrototype* is a *PPortPrototype* then the *CpSoftwareClusterCommunicationResource* is provided by the *CpSoftwareCluster*.

If the *PortPrototype* of the *SwComponentPrototype* is a *RPortPrototype* then the *CpSoftwareClusterCommunicationResource* is required by the *CpSoftwareCluster*.](*RS\_SYST\_00060*, *RS\_SYST\_00062*)

**[TPS\_SYST\_02345]{DRAFT} Assignment of *CpSoftwareClusterCommunicationResources* to *CpSoftwareClusters* in the context of a *SwComponentType*** [In case that a *CompositionSwComponentType* is defined and is assigned to the *CpSoftwareCluster* with the *CpSoftwareCluster.swComposition* and this *SwComponentType* defines an interface of the *CpSoftwareCluster* then the *PortElementToCommunicationResourceMapping* that is aggregated by a

`CpSoftwareClusterMappingSet` maps the `CpSoftwareClusterCommunicationResource` to an element of a `PortInterface` used in the context of a `PortPrototype` of a `CompositionSwComponentType`.

If the `PortPrototype` of the `CompositionSwComponentType` is a `PPortPrototype` then the `CpSoftwareClusterCommunicationResource` is provided by the `CpSoftwareCluster`.

If the `PortPrototype` of the `CompositionSwComponentType` is a `RPortPrototype` then the `CpSoftwareClusterCommunicationResource` is required by the `CpSoftwareCluster`.] (*RS\_SYST\_00060, RS\_SYST\_00062*)

<b>Class</b>	<b>PortElementToCommunicationResourceMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate			
<b>Note</b>	This meta class maps a communication resource to CP Software Clusters. In this case the kind of Port Prototype specified whether the Software Cluster has to provide or to require the resource. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<i>ARObject, Identifiable, MultilanguageReferrable, Referrable</i>			
<b>Aggregated by</b>	<code>CpSoftwareClusterMappingSet.portElementToComResourceMapping</code> , <code>SystemMapping.portElementToComResourceMapping</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
clientServerOperation	<code>ClientServerOperation</code>	0..1	iref	ClientServerOperation instance qualifying the communication resource <b>Tags:</b> atp.Status=draft <b>InstanceRef implemented by:</b> <code>OperationInSystemInstanceRef</code>
communicationResource	<code>CpSoftwareClusterCommunicationResource</code>	0..1	ref	Communication resource for which the mapping applies. <b>Tags:</b> atp.Status=draft
modeDeclarationGroupPrototype	<code>ModeDeclarationGroupPrototype</code>	0..1	iref	ModeDeclarationGroupPrototype instance qualifying the communication resource <b>Tags:</b> atp.Status=draft <b>InstanceRef implemented by:</b> <code>ModeDeclarationGroupPrototypeInSystemInstanceRef</code>
parameterDataPrototype	<code>ParameterDataPrototype</code>	0..1	iref	ParameterDataPrototype instance qualifying the communication resource. <b>Tags:</b> atp.Status=draft <b>InstanceRef implemented by:</b> <code>ParameterDataPrototypeInSystemInstanceRef</code>
trigger	<code>Trigger</code>	0..1	iref	Trigger instance qualifying the communication resource. <b>Tags:</b> atp.Status=draft <b>InstanceRef implemented by:</b> <code>TriggerInSystemInstanceRef</code>
variableDataPrototype	<code>VariableDataPrototype</code>	0..1	iref	VariableDataPrototype instance qualifying the communication resource <b>Tags:</b> atp.Status=draft <b>InstanceRef implemented by:</b> <code>VariableDataPrototypeInSystemInstanceRef</code>

**Table 11.15: PortElementToCommunicationResourceMapping**

Please note that the assignment of `CpSoftwareClusterCommunicationResources` to `CpSoftwareClusters` in the context of a `SwComponentTypes` as described by [TPS\_SYST\_02345] shall only be used in an early stage of the Methodology if the `System` with the `RootSwCompositionPrototype` and all included `SystemMappings` is not available yet.

In this case not all context references in the «instanceRef» of `PortElementToCommunicationResourceMapping` can be used since the `SwComponentPrototype` is not available yet.

[TPS\_SYST\_02322]{DRAFT} **PortElementToCommunicationResourceMapping** aggregated by **SystemMapping** supersedes **PortElementToCommunicationResourceMapping** aggregated by **CpSoftwareClusterMappingSet** [If a `PortElementToCommunicationResourceMapping` that is aggregated by the `SystemMapping` and a `PortElementToCommunicationResourceMapping` that is aggregated by the `CpSoftwareClusterMappingSet` exist at the same time and both reference the same element in the same `PortPrototype` then the `PortElementToCommunicationResourceMapping` that is aggregated by the `SystemMapping` supersedes the `PortElementToCommunicationResourceMapping` that is aggregated by the `CpSoftwareClusterMappingSet`.](RS\_SYST\_00060, RS\_SYST\_00062)

[constr\_5329] **SynchronousServerCallPoints** for cross cluster communication are not supported [A `ClientServerOperation` in the context of `PortPrototype` which is referenced by a `PortElementToCommunicationResourceMapping` in the role `clientServerOperation` is not allowed

- to be referenced by a `SynchronousServerCallPoint.operation` or
- to be connected to another `ClientServerOperation` in the context of a `PortPrototype` that in turn is referenced by `SynchronousServerCallPoint.operation`

at the time when the `SW_CLUSTER_SYSTEM_DESCRIPTION` is complete.]()

[constr\_5182]{DRAFT} **PRPortPrototypes** are excluded as **CpSoftwareCluster** interfaces [A `CpSoftwareClusterCommunicationResource` is not allowed to be mapped by a `PortElementToCommunicationResourceMapping` to an element of a `PortInterface` in the context of a `PRPortPrototype`.]()

Please note that it is allowed that a `PPortPrototype` that is referenced by a `PortElementToCommunicationResourceMapping` is allowed to be connected via a `DelegationSwConnector` to a `PRPortPrototype`.

[constr\_5183]{DRAFT} **PortElementToCommunicationResourceMapping** shall reference exactly one element of a **PortInterface** [For any given `PortElementToCommunicationResourceMapping`, either the reference

- `parameterDataPrototype` or
- `modeDeclarationGroupPrototype` or

- `trigger` or
- `clientServerOperation` or
- `variableDataPrototype`

shall exist.](`)`

**[TPS\_SYST\_02323]{DRAFT} Assignment of `CpSoftwareClusterServiceResources` to `CpSoftwareClusters`** [A `CpSoftwareClusterServiceResource` is mapped to `CpSoftwareCluster` with a `CpSoftwareClusterToResourceMapping`.](`RS_SYST_00060`, `RS_SYST_00062`)

<b>Class</b>	<code>CpSoftwareClusterToResourceMapping</code>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
<b>Note</b>	This meta class maps a service resource to CP Software Clusters. By this mapping it's specified whether the Software Cluster has to provide or to require the resource. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<code>ARObject</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
<b>Aggregated by</b>	<code>CpSoftwareClusterMappingSet.softwareClusterToResourceMapping</code> , <code>SystemMapping.softwareClusterToResourceMapping</code>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
provider	<code>CpSoftwareCluster</code>	0..1	ref	CP Software Cluster providing the resource <b>Tags:</b> atp.Status=draft
requester	<code>CpSoftwareCluster</code>	*	ref	CP Software Cluster requesting the resource <b>Tags:</b> atp.Status=draft
service Resource	<code>CpSoftwareClusterServiceResource</code>	0..1	ref	Service resource for which the mapping applies. <b>Tags:</b> atp.Status=draft

**Table 11.16: `CpSoftwareClusterToResourceMapping`**

**[TPS\_SYST\_02324]{DRAFT} `CpSoftwareClusterServiceResource` provided by the `CpSoftwareCluster`** [A `CpSoftwareClusterResource` is provided by a `CpSoftwareCluster` if a `CpSoftwareClusterToResourceMapping` exists that

- references the `CpSoftwareClusterResource` in the role `serviceResource` and
- references the `CpSoftwareCluster` in the role `provider`

](`RS_SYST_00060`, `RS_SYST_00062`)

**[TPS\_SYST\_02325]{DRAFT} `CpSoftwareClusterServiceResource` required by the `CpSoftwareCluster`** [A `CpSoftwareClusterResource` is required by a `CpSoftwareCluster` if a `CpSoftwareClusterToResourceMapping` exists that

- references the `CpSoftwareClusterResource` in the role `serviceResource` and
- references the `CpSoftwareCluster` in the role `requester`.

](`RS_SYST_00060`, `RS_SYST_00062`)

[constr\_5184]{DRAFT} **CpSoftwareClusterServiceResource can be provided only once on an EcuInstance** [A CpSoftwareClusterServiceResource shall not be mapped by several CpSoftwareClusterToResourceMappings to CpSoftwareClusters in the provider role if the CpSoftwareClusters are mapped to the same EcuInstance by CpSoftwareClusterToEcuInstanceMappings.]()

[TPS\_SYST\_02326]{DRAFT} **Aggregation possibilities of CpSoftwareClusterToResourceMapping** [The CpSoftwareClusterToResourceMapping can be aggregated by CpSoftwareClusterMappingSet and by SystemMapping.

- CpSoftwareClusterMappingSet.softwareClusterToResourceMapping can be used in an early stage of the Methodology if the System with the RootSwCompositionPrototype and all included SystemMappings is not available yet.
- SystemMapping.softwareClusterToResourceMapping can be used in a later stage of Methodology if the System with the RootSwCompositionPrototype and all included SystemMappings is available.

](RS\_SYST\_00060, RS\_SYST\_00062)

[TPS\_SYST\_02346]{DRAFT} **CpSoftwareClusterToResourceMapping aggregated by SystemMapping supersedes CpSoftwareClusterToResourceMapping aggregated by CpSoftwareClusterMappingSet** [If a CpSoftwareClusterToResourceMapping that is aggregated by the SystemMapping and a CpSoftwareClusterToResourceMapping that is aggregated by the CpSoftwareClusterMappingSet exist at the same time and both are mapping the same CpSoftwareClusterServiceResource to the same CpSoftwareCluster then the CpSoftwareClusterToResourceMapping that is aggregated by the SystemMapping supersedes the CpSoftwareClusterToResourceMapping that is aggregated by the CpSoftwareClusterMappingSet.](RS\_SYST\_00060, RS\_SYST\_00062)

[constr\_5360] **Cross cluster communication involving NvBlockSwComponentType is not supported** [A PortElementToCommunicationResourceMapping that is referencing a CpSoftwareClusterCommunicationResource in the role communicationResource is not allowed to reference:

- a VariableDataPrototype in the role variableDataPrototype that is defined in the context of a PortPrototype of a NvBlockSwComponentType typed by a NvDataInterface or
- a VariableDataPrototype in the role variableDataPrototype which is connected to another VariableDataPrototype that is defined in the context of a PortPrototype of a NvBlockSwComponentType and typed by a NvDataInterface or
- a ClientServerOperation in the role clientServerOperation that is defined in the context of a PortPrototype of a NvBlockSwComponentType typed by a ClientServerInterface or



- a `ClientServerOperation` in the role `clientServerOperation` which is connected to another `ClientServerOperation` that is defined in the context of a `PortPrototype` of a `NvBlockSwComponentType` typed by a `ClientServerInterface`

at the time when the SW\_CLUSTER\_SYSTEM\_DESCRIPTION is complete.}]()

### 11.3 Software Cluster Binary Manifest


[TPS\_SYST\_02327]{DRAFT} **Role of the Software Cluster Binary Manifest**

[The modeling of the `Software Cluster Binary Manifest` allows for the formal definition of how a given `Software Cluster` interacts with the environment. This formal model is **only relevant for the creation of an off-board connection** between `Software Clusters`.

The core characteristics of the model of a `Software Cluster Binary Manifest` are:

- The model of a `Software Cluster Binary Manifest` is created during the `Software Cluster`'s build because it has to store information (e.g. data and function addresses, ID values for the interaction with basic software services) that only become available during build time.
- The model of a `Software Cluster Binary Manifest` uses guarding information (e.g. hash values) to ensure that only compatible resources are connected to each other.

The `Software Cluster Binary Manifest` is defined on integration level<sup>3</sup>.] ([RS\\_SYST\\_00061](#))

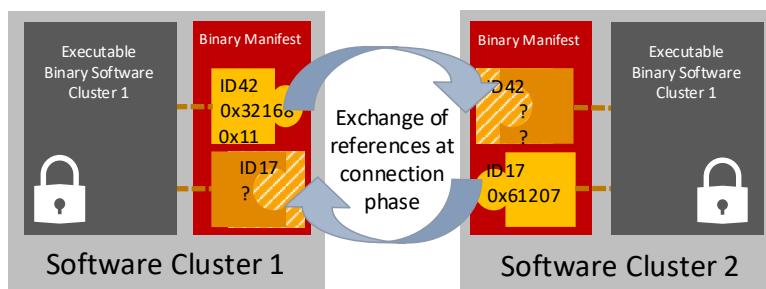


**Figure 11.7: Two Software Cluster exchange information in their Software Cluster Binary Manifests.**

This means that, at run-time, the `Software Cluster Binary Manifest` consists of data structures that are partly non-modifiable (to define e.g. meta-data or describe

<sup>3</sup>As opposed to design level, on which the actual `CpSoftwareCluster` exists



the access to a resource) and partly modifiable (to store the connection information, see Figure 11.7).

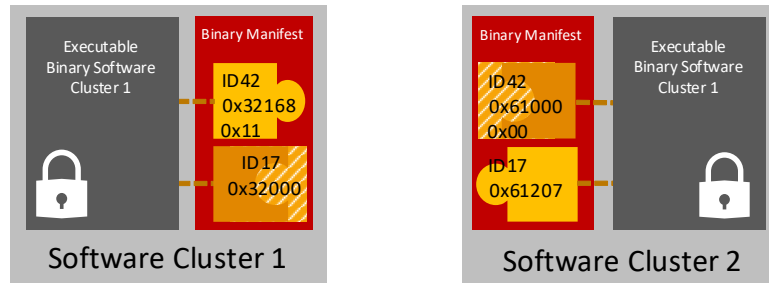


**Figure 11.8: Two Software Cluster and their fully-configured Software Cluster Binary Manifests**

The missing pieces in the [Software Cluster Binary Manifest](#) can be filled by exchanging information at either configuration-time (off-board) or run-time (on-board), see Figure 11.8. The algorithm used to create an off-board connection is identical to the algorithm used to create an on-board connection.

The difference is mainly that the creation of the on-board connection needs the information stored in the model of a [Software Cluster Binary Manifest](#) on-board, i.e. a significant amount of on-board storage is required for holding the connection meta-data.

The logical structure of the [Software Cluster Binary Manifest](#) is depicted in Figure 11.9

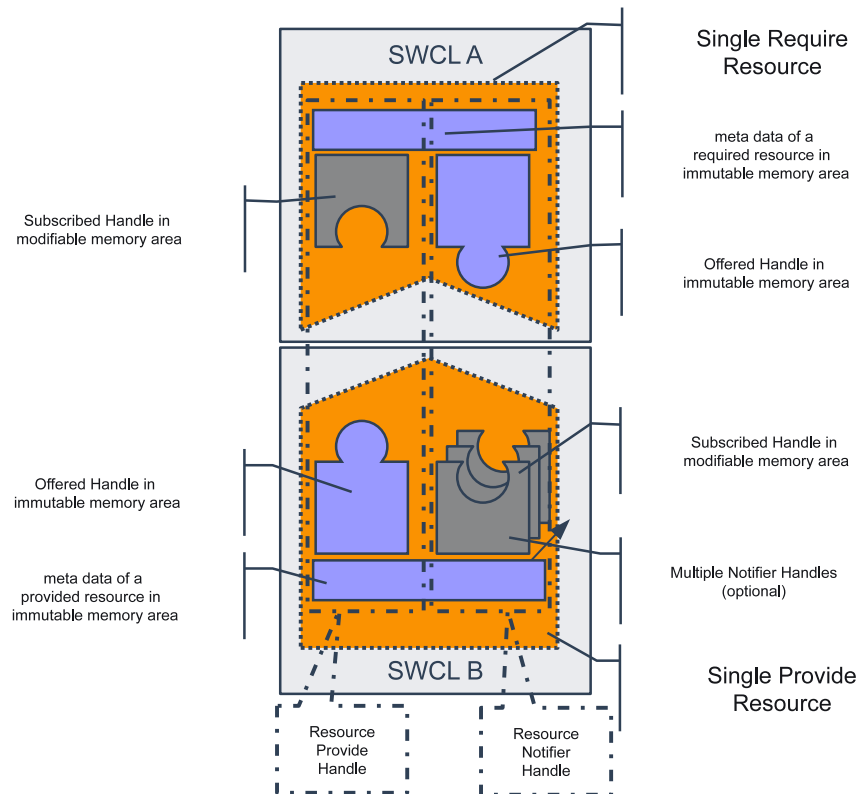

**Figure 11.9: Logical structure of the Software Cluster Binary Manifest**

[TPS\_SYST\_02328]{DRAFT} **Semantics of meta-class CpSoftwareClusterBinaryManifestDescriptor** [The existence of the CpSoftwareClusterBinaryManifestDescriptor represents the definition of the model of a Software Cluster Binary Manifest for a given Software Cluster.

Because of this relation, it is necessary that CpSoftwareClusterBinaryManifestDescriptor references the corresponding CpSoftwareCluster instead of being aggregated by it.](RS\_SYST\_00061)

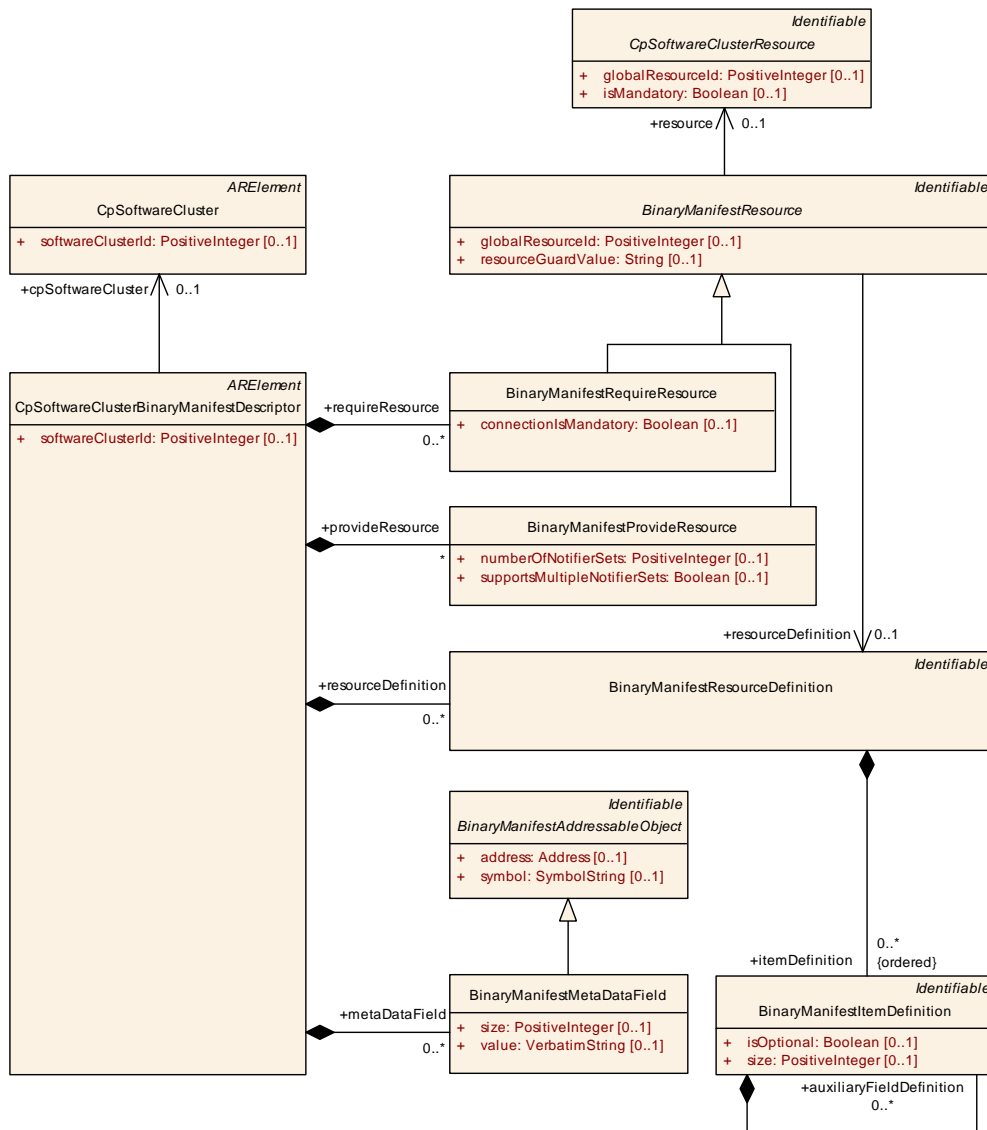


Figure 11.10: Modeling of the Software Cluster Binary Manifest

[TPS\_SYST\_02329]{DRAFT} **Provision of a Software Cluster's ID** [The ID of a given Software Cluster formalized as CpSoftwareCluster cannot be defined as an attribute of CpSoftwareCluster because the ID represents an integration-level information. Therefore, the ID is provided by means of attribute CpSoftwareClusterBinaryManifestDescriptor.softwareClusterId.](RS\_SYST\_00061)

[TPS\_SYST\_02330]{DRAFT} **Possible values of attribute CpSoftwareClusterBinaryManifestDescriptor.category** [The following values for attribute CpSoftwareCluster.category are standardized by AUTOSAR:

- **HOST\_SOFTWARE\_CLUSTER**: the CpSoftwareClusterBinaryManifestDescriptor that contains the major part of the basic-software stack, especially micro-controller-dependent modules including the operating system.

- **APPLICATION\_SOFTWARE\_CLUSTER**: the `CpSoftwareClusterBinaryManifestDescriptor` represents application-level functionality conceptually located on top of the `CpSoftwareCluster` of category `HOST_SOFTWARE_CLUSTER`.
- **SUBSTITUTION\_SOFTWARE\_CLUSTER**: in this case the `CpSoftwareClusterBinaryManifestDescriptor` is used for debugging or prototyping purposes.

|(RS\_SYST\_00061)

Please note that the standardized values of attribute `category` for `CpSoftwareCluster` and `CpSoftwareClusterBinaryManifestDescriptor` differ by the definition of value `SUBSTITUTION_SOFTWARE_CLUSTER`.

This value is not applicable on the “System”-level, but may make sense in the local scope of the deployment configuration of a given `CpSoftwareCluster` by means of `CpSoftwareClusterBinaryManifestDescriptor`.

<b>Class</b>	<b>CpSoftwareClusterBinaryManifestDescriptor</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	<p>This meta-class has the ability to act as a hub for all information related to the binary manifest of a given CP software cluster. The manifest is subject to integrator work and therefore not a part of the definition of the CP software cluster itself.</p> <p><b>Tags:</b> atp.Status=draft atp.recommendedPackage=CpSoftwareClusterBinaryManifestDescriptors</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
cpSoftwareCluster	<a href="#">CpSoftwareCluster</a>	0..1	ref	<p>This reference identifies the <code>CpSoftwareCluster</code> to which the enclosing <code>CpSoftwareClusterBinaryManifestDescriptor</code> belongs,</p> <p>The <code>CpSoftwareClusterBinaryManifestDescriptor</code> is defined in an integration phase while the referenced <code>CpSoftwareCluster</code> represents a design element. Therefore, it makes sense to use a reference rather than an aggregation in the relation of the two meta-classes.</p> <p><b>Tags:</b>atp.Status=draft</p>
metaDataField	<a href="#">BinaryManifestMetaDataField</a>	*	aggr	<p>This aggregation identifies the collection of meta-data contained in the enclosing binary manifest.</p> <p><b>Tags:</b>atp.Status=draft</p>
provideResource	<a href="#">BinaryManifestProvideResource</a>	*	aggr	<p>This aggregation represents the collection of provided resources in the enclosing binary manifest.</p> <p><b>Tags:</b>atp.Status=draft</p>
requireResource	<a href="#">BinaryManifestRequireResource</a>	*	aggr	<p>This aggregation represents the collection of required resources in the enclosing binary manifest.</p> <p><b>Tags:</b>atp.Status=draft</p>





Class		CpSoftwareClusterBinaryManifestDescriptor		
resource Definition	<a href="#">BinaryManifestResourceDefinition</a>	*	aggr	This aggregation represents the collection of binary manifest resource definitions that belong to the enclosing CpSoftwareClusterBinaryManifestDescriptor. <b>Tags:</b> atp.Status=draft
softwareCluster Id	PositiveInteger	0..1	attr	This attribute represents the value of the id of the corresponding CP software cluster. This id is assigned by an integrator, but may also be copied from CpSoftwareCluster.softwareClusterId if available. <b>Tags:</b> atp.Status=draft

**Table 11.17: CpSoftwareClusterBinaryManifestDescriptor**

[constr\_5359] [CpSoftwareClusterBinaryManifestDescriptor.softwareClusterId](#) shall be identical to [CpSoftwareCluster.softwareClusterId](#) [The [CpSoftwareClusterBinaryManifestDescriptor.softwareClusterId](#) shall be identical to [CpSoftwareCluster.softwareClusterId](#) in case that the [softwareClusterId](#) is set in the [CpSoftwareCluster](#) that is referenced via [CpSoftwareClusterBinaryManifestDescriptor.cpSoftwareCluster](#).]()

[TPS\_SYST\_02331]{DRAFT} **Definition of provided resource in the context of the Software Cluster Binary Manifest** [A provided resource of a [Software Cluster Binary Manifest](#) represents an “offer” of the [Software Cluster](#) to other [Software Clusters](#).

For the formal point of view, this “offer” is defined by means of a [BinaryManifestProvideResource](#), aggregated at [CpSoftwareClusterBinaryManifestDescriptor](#) in the role [provideResource](#).

Attribute [supportsMultipleNotifierSets](#) indicates whether the resource support the call of multiple notifier call-back functions.]([RS\\_SYST\\_00061](#))

Class		BinaryManifestProvideResource		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class represents a provided resource in the binary manifest. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">BinaryManifestResource</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CpSoftwareClusterBinaryManifestDescriptor.provideResource</a>			
Attribute	Type	Mult.	Kind	Note
numberOfNotifierSets	PositiveInteger	0..1	attr	This attribute provides an upper limit for the number of notifiers for this resource. <b>Tags:</b> atp.Status=draft
supportsMultipleNotifierSets	Boolean	0..1	attr	This attribute indicates whether the enclosing BinaryManifestResource supports multiple notifiers sets. <b>Tags:</b> atp.Status=draft

**Table 11.18: BinaryManifestProvideResource**

[constr\_5185]{DRAFT} Existence of attribute **BinaryManifestProvideResource.globalResourceId** [For each `BinaryManifestProvideResource`, attribute `globalResourceId` shall exist **at the time when the definition of binary object meta-data is finished.** ]()

[constr\_5186]{DRAFT} Existence of attribute **BinaryManifestProvideResource.resourceGuardValue** [For each `BinaryManifestProvideResource`, attribute `resourceGuardValue` shall exist **at the time when the definition of binary object meta-data is finished.** ]()

[constr\_5187]{DRAFT} Existence of attribute **BinaryManifestProvideResource.supportsMultipleNotifierSets** [For each `BinaryManifestProvideResource`, attribute `supportsMultipleNotifierSets` shall exist **at the time when the definition of binary object meta-data is finished.** ]()

[constr\_5188]{DRAFT} Existence of attribute **BinaryManifestProvideResource.numberOfNotifierSets** [For each `BinaryManifestProvideResource`, attribute `numberOfNotifierSets` shall exist **at the time when the definition of binary object meta-data is finished.** ]()

[constr\_5189]{DRAFT} Existence of reference **BinaryManifestProvideResource.resourceDefinition** [For each `BinaryManifestProvideResource`, the reference in the role `resourceDefinition` shall exist **at the time when the definition of binary object meta-data is finished.** ]()

[constr\_5190]{DRAFT} Existence of aggregation **BinaryManifestProvideResource.item** [For each `BinaryManifestProvideResource`, the aggregation in the role `item` shall exist at least once **at the time when the definition of binary object meta-data is finished.** ]()

[constr\_5191]{DRAFT} Consequence of attribute **BinaryManifestProvideResource.item.category** [The following values of attribute `BinaryManifestProvideResource.item.category` shall require the existence of aggregations:

- If `category` is set to `PROVIDER_HANDLE` and the attribute `isUnused` is not set to true then the aggregation `BinaryManifestProvideResource.item.value` shall exist **at the time when the definition of binary object meta-data is finished.**
- If `category` is set to `NOTIFIER_HANDLE` and the attribute `isUnused` is not set to true then the aggregation `BinaryManifestProvideResource.item.defaultValue` shall exist **at the time when the definition of binary object meta-data is finished.**
- If `category` is set to `AUXILARY_ACTUAL_NUMBER_NOTIFIER_SETS` then the aggregation `BinaryManifestProvideResource.item.defaultValue` shall exist **at the time when the definition of binary object meta-data is finished.**

]()

<b>Class</b>	<b>BinaryManifestResource</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class acts as an abstract base class for specializations. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">BinaryManifestProvideResource</a> , <a href="#">BinaryManifestRequireResource</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
globalResourceId	PositiveInteger	0..1	attr	A unique identifiers per resource used for the connection process. The identifier is required to be unique in the scope of a single machine. If software clusters are designed to be reused on multiple machines the uniqueness requirements applies for all the intended machines. <b>Tags:</b> atp.Status=draft
item (ordered)	<a href="#">BinaryManifestItem</a>	*	aggr	This aggregation represents the collection of binary manifest handles owned by the enclosing binary manifest resource. <b>Tags:</b> atp.Status=draft
resource	<a href="#">CpSoftwareClusterResource</a>	0..1	ref	This reference identifies the CpSoftwareClusterResource (on design level) that corresponds to the BinaryManifestResource (on integration level). <b>Tags:</b> atp.Status=draft
resourceDefinition	<a href="#">BinaryManifestResourceDefinition</a>	0..1	ref	this reference identifies the definition of the BinaryManifestResource. The definition provides configuration information that is shared among all BinaryManifestResources that refer to the BinaryManifestResourceDefinition. <b>Tags:</b> atp.Status=draft
resourceGuardValue	<a href="#">String</a>	0..1	attr	This attribute specifies the guard value of the enclosing binary manifest resource. <b>Tags:</b> atp.Status=draft

**Table 11.19: BinaryManifestResource**

[TPS\_SYST\_02332]{DRAFT} **Definition of required resource in the context of the Software Cluster Binary Manifest** [A required resource of a [Software Cluster Binary Manifest](#) represents an “request” of the [Software Cluster](#) towards other [Software Clusters](#).

For the formal point of view, this “request” is defined by means of a [BinaryManifestRequireResource](#), aggregated at [CpSoftwareClusterBinaryManifestDescriptor](#) in the role [requireResource](#).

Required resources could be left unconnected unless attribute [connectionIsMandatory](#) is set to True.]([RS\\_SYST\\_00061](#))

<b>Class</b>	<b>BinaryManifestRequireResource</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class represents a required resource in the binary manifest. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	ARObject, <a href="#">BinaryManifestResource</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			





<b>Class</b>	<b>BinaryManifestRequireResource</b>			
<b>Aggregated by</b>	<a href="#">CpSoftwareClusterBinaryManifestDescriptor.requireResource</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
connectionIsMandatory	Boolean	0..1	attr	This attribute indicates whether the connection of the enclosing BinaryManifestResource is mandatory. <b>Tags:</b> atp.Status=draft

**Table 11.20: BinaryManifestRequireResource**

**[constr\_5192]{DRAFT} Existence of attribute [BinaryManifestRequireResource.globalResourceId](#)** [For each [BinaryManifestRequireResource](#), attribute [globalResourceId](#) shall exist **at the time when the definition of binary object meta-data is finished.**]()

**[constr\_5193]{DRAFT} Existence of attribute [BinaryManifestRequireResource.resourceGuardValue](#)** [For each [BinaryManifestRequireResource](#), attribute [resourceGuardValue](#) shall exist **at the time when the definition of binary object meta-data is finished.**]()

**[constr\_5194]{DRAFT} Existence of reference [BinaryManifestRequireResource.resourceDefinition](#)** [For each [BinaryManifestRequireResource](#), the reference in the role [resourceDefinition](#) shall exist **at the time when the definition of binary object meta-data is finished.**]()

**[constr\_5195]{DRAFT} Existence of aggregation [BinaryManifestRequireResource.item](#)** [For each [BinaryManifestRequireResource](#), the aggregation in the role [item](#) shall exist at least once **at the time when the definition of binary object meta-data is finished.**]()

**[constr\_5196]{DRAFT} Consequence of attribute [BinaryManifestRequireResource.item.category](#)** [The following values of attribute [BinaryManifestRequireResource.item.category](#) shall require the existence of aggregations:

- If [category](#) is set to [PROVIDER\\_HANDLE](#) then the aggregation [BinaryManifestRequireResource.item.defaultValue](#) shall exist **at the time when the definition of binary object meta-data is finished.**
- If [category](#) is set to [NOTIFIER\\_HANDLE](#) then the aggregation [BinaryManifestRequireResource.item.value](#) shall exist **at the time when the definition of binary object meta-data is finished.**

]()



<b>Class</b>	<b>BinaryManifestResourceDefinition</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class represents the ability to specify a resource definition that provides information that can be shared by all resources that refer to the respective resource definition. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CpSoftwareClusterBinaryManifestDescriptor.resourceDefinition</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
itemDefinition (ordered)	<a href="#">BinaryManifestItemDefinition</a>	*	aggr	This aggregation specifies the collection of handle definitions in the context of the enclosing binary manifest resource definitions. <b>Tags:</b> atp.Status=draft

**Table 11.21: BinaryManifestResourceDefinition**

**[constr\_5197]{DRAFT} Existence of aggregation [BinaryManifestResourceDefinition.itemDefinition](#)** [For each [BinaryManifestResourceDefinition](#), the aggregation in the role [itemDefinition](#) shall exist at least once **at the time when the definition of binary object meta-data is finished.**]()

**[TPS\_SYST\_02333]{DRAFT} Purpose of meta-class [BinaryManifestResourceDefinition](#)** [The purpose of meta-class [BinaryManifestResourceDefinition](#) is to provide attributes that apply (by definition) to all [BinaryManifestResources](#) that refer to a specific [BinaryManifestResourceDefinition](#).

In other words, the configuration modeled in a [BinaryManifestResourceDefinition](#) is shared among all [BinaryManifestResources](#) that reference the [BinaryManifestResourceDefinition](#).] ([RS\\_SYST\\_00061](#))

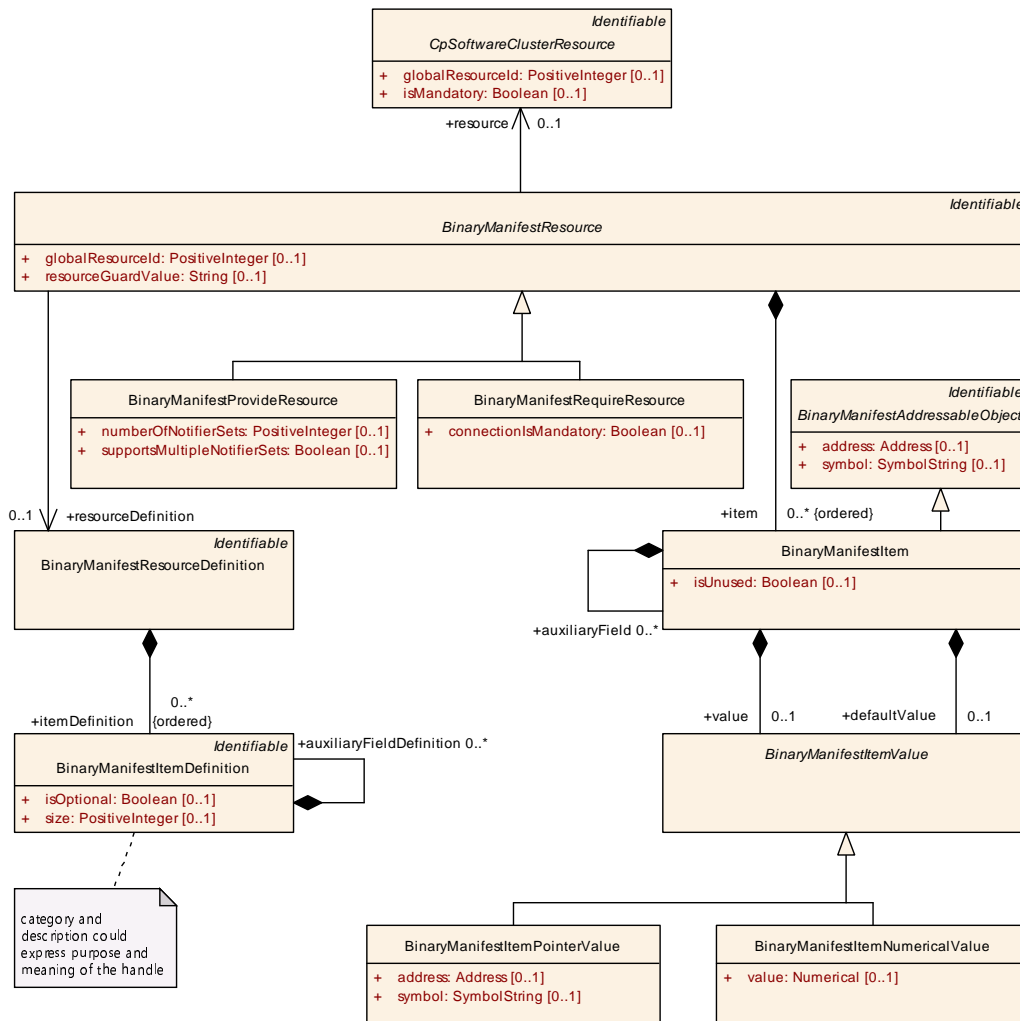


Figure 11.11: Modeling of the **BinaryManifestResource**

Please note that by referencing `BinaryManifestResourceDefinition` from `BinaryManifestResource` repetition can be avoided. It is expected that in the context of a given `CpSoftwareClusterBinaryManifestDescriptor` several `BinaryManifestResources` exist that share the same `BinaryManifestResourceDefinition`.

**[constr\_5198]{DRAFT} Allowed `BinaryManifestResource.resourceDefinition`** [An `BinaryManifestResourceDefinition` shall only be referenced from a `BinaryManifestResource` that is aggregated in the same `CpSoftwareClusterBinaryManifestDescriptor` as the referenced `BinaryManifestResourceDefinition`.]()

**[TPS\_SYST\_02334]{DRAFT} Semantics of meta-class `BinaryManifestItem`** [The purpose of meta-class `BinaryManifestItem` is to define elements that specify the detailed interface (on the level of symbols) of a `BinaryManifestResource`.

At run-time, the `BinaryManifestItem` is represented by its `symbol` located at the corresponding `address`.](*RS\_SYST\_00061*)

**[constr\_5271] Existence of attribute `BinaryManifestItem.isUnused`** [For each `BinaryManifestItem`, the attribute `isUnused` shall exist at the time when the definition of binary object meta-data is finished.]()

**[constr\_5272] Value of attribute `BinaryManifestItem.isUnused`** [The attribute `BinaryManifestItem.isUnused` shall only permitted to be set to true if the related `BinaryManifestItemDefinition` has its attribute `isOptional` set to true,]()

**[TPS\_SYST\_02335]{DRAFT} Semantics of aggregation `BinaryManifestItem.auxiliaryField`** [The aggregation `BinaryManifestItem.auxiliaryField` can be used to define structured `BinaryManifestItem`.] (*RS\_SYST\_00061*)

<b>Class</b>	<b>BinaryManifestItem</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class represents the ability to describe a specific handle or auxiliary field in the context of binary manifest resource. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<i>ARObject, BinaryManifestAddressableObject, Identifiable, MultilanguageReferrable, Referrable</i>			
<b>Aggregated by</b>	<i>BinaryManifestItem.auxiliaryField, BinaryManifestResource.item</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
auxiliaryField	<a href="#">BinaryManifestItem</a>	*	aggr	This aggregation is used to define structured Binary ManifestItems. <b>Tags:</b> atp.Status=draft xml.sequenceOffset=20
defaultValue	<a href="#">BinaryManifestItem Value</a>	0..1	aggr	This aggregation represents the definition of a default value for a binary manifest handle or an auxiliaryField. This value shall be taken if no connection for this resource is possible. <b>Tags:</b> atp.Status=draft xml.sequenceOffset=10
isUnused	Boolean	0..1	attr	If true, the handle or auxiliary field in the context of binary manifest resource relates to an optional BinaryManifestItemDefinition and is not used. <b>Tags:</b> atp.Status=draft
value	<a href="#">BinaryManifestItem Value</a>	0..1	aggr	This aggregation represents the definition of a value for a binary manifest handle or an auxiliaryField. This value shall be taken to establish a connection. <b>Tags:</b> atp.Status=draft

**Table 11.22: BinaryManifestItem**

**[constr\_5199]{DRAFT} Consequence of attribute `BinaryManifestItem.auxiliaryField.category`** [If attribute `BinaryManifestItem.auxiliaryField.category` is set to value `AUXILARY_CONNECTED_SW_CLUSTER_ID` then attribute `BinaryManifestItem.auxiliaryField.defaultValue` shall exist **at the time when the definition of binary object meta-data is finished.**]()

[TPS\_SYST\_02336]{DRAFT} **Semantics of meta-class [BinaryManifestItemDefinition](#)** [The purpose of meta-class [BinaryManifestItemDefinition](#) is to provide attributes that are shared among all corresponding [BinaryManifestItems](#).] ([RS\\_SYST\\_00061](#))

[TPS\_SYST\_02337]{DRAFT} **Semantics of aggregation [BinaryManifestItemDefinition.auxiliaryFieldDefinition](#)** [The aggregation [BinaryManifestItemDefinition.auxiliaryFieldDefinition](#) can be used to define structured [BinaryManifestItemDefinition](#).] ([RS\\_SYST\\_00061](#))

[TPS\_SYST\_02338]{DRAFT} **Relation between [BinaryManifestItemDefinition](#) and [BinaryManifestItem](#)** [The relation between a particular [BinaryManifestItemDefinition](#) and a particular [BinaryManifestItem](#) is created by

- the **ordered** aggregation of meta-class [BinaryManifestItemDefinition](#) at [BinaryManifestResource](#) in the role [itemDefinition](#) and
- the **ordered** aggregation of meta-class [BinaryManifestItem](#) at [BinaryManifestResource](#) in the role [item](#).

In other words, the mentioned correspondence is created such that the  $n^{\text{th}}$  [BinaryManifestResourceDefinition.itemDefinition](#) applies to the  $n^{\text{th}}$  [BinaryManifestResource.item](#).] ([RS\\_SYST\\_00061](#))

<b>Class</b>	<b>BinaryManifestItemDefinition</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class provides the ability to define the handle definition or an auxiliary field of a binary manifest resource. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">BinaryManifestItemDefinition.auxiliaryFieldDefinition</a> , <a href="#">BinaryManifestResourceDefinition.itemDefinition</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
auxiliaryFieldDefinition	<a href="#">BinaryManifestItemDefinition</a>	*	aggr	This aggregation is used to define structured BinaryManifestItemDefinitions. <b>Tags:</b> atp.Status=draft
isOptional	Boolean	0..1	attr	If true, the handle definition or auxiliary field of a binary manifest resource is optional and may not be used in all BinaryManifestResources referring to this BinaryManifestResourceDefinition. <b>Tags:</b> atp.Status=draft
size	PositiveInteger	0..1	attr	This attribute provides the ability to specify the size of the enclosing BinaryManifestResourceDefinition. <b>Tags:</b> atp.Status=draft

**Table 11.23: BinaryManifestItemDefinition**

[constr\_5200]{DRAFT} **Existence of attribute [BinaryManifestItemDefinition.category](#)** [For each [BinaryManifestItemDefinition](#), attribute [category](#) shall exist at the time when the definition of binary object meta-data is finished.] ()

[constr\_5201]{DRAFT} **Existence of attribute `BinaryManifestItemDefinition.size`** [For each `BinaryManifestItemDefinition`, attribute `size` shall exist at the time when the definition of binary object meta-data is finished.]()

<b>Class</b>	<i>BinaryManifestAddressableObject</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class acts as an abstract base class for addressable objects in the context of the binary manifest of a CP software cluster. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<i>AObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Subclasses</b>	<i>BinaryManifestItem</i> , <i>BinaryManifestMetaDataField</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
address	Address	0..1	attr	This attribute specifies the address of the enclosing addressable object. <b>Tags:</b> atp.Status=draft
symbol	SymbolString	0..1	attr	This attribute specifies the symbol of the addressable object. <b>Tags:</b> atp.Status=draft

**Table 11.24: BinaryManifestAddressableObject**

[TPS\_SYST\_02339]{DRAFT} **Standardized values of attribute `BinaryManifestAddressableObject.category`** [The following list of values of attribute `BinaryManifestAddressableObject.category` is standardized by AUTOSAR:

- PROVIDER\_HANDLE: the `BinaryManifestAddressableObject` is used to store a provider handle.
- NOTIFIER\_HANDLE: the `BinaryManifestAddressableObject` is used to store a notifier handle.
- IMMUTABLE\_TABLES\_CHECKSUM: the Immutable Tables Checksum is built over all constants of the `Software Cluster Binary Manifest` which are not changed by the Software Cluster connection step.
- SUBSCRIBED\_INTERFACE\_VALIDITY\_MARKER: the Subscribed Interface Validity Marker indicate that all tables storing subscribed handles are written after the Software Cluster connection step.
- AUXILARY\_ACTUAL\_NUMBER\_NOTIFIER\_SETS: the auxiliary field actual number of used notifier sets describes how many of the notifier sets are occupied by connected resources.
- AUXILARY\_CONNECTED\_SW\_CLUSTER\_ID: the auxiliary field connected Software Cluster Id holds the Software Cluster Id from which the handle values are taken in case an connection is established.

] (*RS\_SYST\_00061*)

Please note that custom values of `BinaryManifestAddressableObject.category` are supported as long as the custom value is created in a way that it will not clash with standardized values that may be added in the future. Such a name clash

can be prevented by using company-specific or project-specific prefixes, suffixes, or infixes in the value.

[TPS\_SYST\_02340]{DRAFT} **Semantics of abstract meta-class [BinaryManifestItemValue](#)** [Sub-classes of abstract meta-class [BinaryManifestItemValue](#) can be used to specify **default values** for a [BinaryManifestItem](#).] ([RS\\_SYST\\_00061](#))

<b>Class</b>	<a href="#">BinaryManifestItemValue</a> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class has the ability to act as an abstract base class for values of binary manifest item. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Subclasses</b>	<a href="#">BinaryManifestItemNumericalValue</a> , <a href="#">BinaryManifestItemPointerValue</a>			
<b>Aggregated by</b>	<a href="#">BinaryManifestItem.defaultValue</a> , <a href="#">BinaryManifestItem.value</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table 11.25: BinaryManifestItemValue**

<b>Class</b>	<a href="#">BinaryManifestItemNumericalValue</a>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class has the ability to provide a numerical value for a binary manifest item. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">BinaryManifestItemValue</a>			
<b>Aggregated by</b>	<a href="#">BinaryManifestItem.defaultValue</a> , <a href="#">BinaryManifestItem.value</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
value	Numerical	0..1	attr	This attribute specifies the actual numerical value to be used in the binary manifest handle. <b>Tags:</b> atp.Status=draft

**Table 11.26: BinaryManifestItemNumericalValue**

[constr\_5202]{DRAFT} **Existence of attribute [BinaryManifestItemNumericalValue.value](#)** [For each [BinaryManifestItemNumericalValue](#), attribute [value](#) shall exist at the time when the definition of binary object meta-data is finished.] ()

[TPS\_SYST\_02341]{DRAFT} **Semantics of the aggregation of meta-class [BinaryManifestItemPointerValue](#) in the role [defaultValue](#)** [Meta-class [BinaryManifestItemPointerValue](#) is used to provide a default value for a pointer.

This means that the default value consists of the [address](#) and the [symbol](#) of the target object of the pointer.

In other words, the memory at the [BinaryManifestItem.address](#) is filled with the default target address taken from [BinaryManifestItemPointerValue.address](#).] ([RS\\_SYST\\_00061](#))

<b>Class</b>	<b>BinaryManifestItemPointerValue</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class has the ability to provide a value for a pointer in the context of a binary manifest item. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	ARObject, <a href="#">BinaryManifestItemValue</a>			
<b>Aggregated by</b>	<a href="#">BinaryManifestItem.defaultValue</a> , <a href="#">BinaryManifestItem.value</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
address	Address	0..1	attr	This attribute represents the address value of the enclosing pointer value. <b>Tags:</b> atp.Status=draft
symbol	SymbolString	0..1	attr	This attribute represents the symbol associated with the binary manifest handle. <b>Tags:</b> atp.Status=draft

**Table 11.27: BinaryManifestItemPointerValue**

**[constr\_5218]{DRAFT} Existence of attribute [BinaryManifestItemPointerValue.address](#)** [For each [BinaryManifestItemPointerValue](#), attribute `address` shall exist at the time when the definition of binary object meta-data is finished.] ()

**[constr\_5203]{DRAFT} Existence of attribute [BinaryManifestItemPointerValue.symbol](#)** [For each [BinaryManifestItemPointerValue](#), attribute `symbol` shall exist at the time when the definition of binary object meta-data is finished.] ()

**[TPS\_SYST\_02342]{DRAFT} Semantics of meta-class [BinaryManifestMeta-DataField](#)** [Meta-class [BinaryManifestMeta-DataField](#) is used to describe meta-data of a [Software Cluster Binary Manifest](#). This can be achieved by means of the aggregation of [BinaryManifestMeta-DataField](#) at [CpSoftwareClusterBinaryManifestDescriptor](#) in the role `metaDataField`.

As a part of the [Software Cluster Binary Manifest](#), a [BinaryManifest-MetaDataField](#) is represented at run-time by a `symbol` that is located at an `address`.

On the model level, attribute `category` can be used to further categorize a specific [BinaryManifestMeta-DataField](#).] ([RS\\_SYST\\_00061](#))

<b>Class</b>	<b>BinaryManifestMeta-DataField</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster::BinaryManifest			
<b>Note</b>	This meta-class provides the ability to define a meta-data field for the binary manifest descriptor. <b>Tags:</b> atp.Status=draft			
<b>Base</b>	ARObject, <a href="#">BinaryManifestAddressableObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">CpSoftwareClusterBinaryManifestDescriptor.metaDataField</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>







Class	BinaryManifestMetaDataField			
size	PositiveInteger	0..1	attr	The value of this attribute represents the size of the meta-data field in bytes. <b>Tags:</b> atp.Status=draft
value	VerbatimString	0..1	attr	This attribute specifies the value of the meta-data field. <b>Tags:</b> atp.Status=draft

**Table 11.28: BinaryManifestMetaDataField**

**[constr\_5204]{DRAFT} Existence of attribute `BinaryManifestMetaDataField.category`** [For each `BinaryManifestMetaDataField`, attribute `category` shall exist at the time when the definition of binary object meta-data is finished.]()

**[constr\_5205]{DRAFT} Existence of attribute `BinaryManifestMetaDataField.size`** [For each `BinaryManifestMetaDataField`, attribute `size` shall exist at the time when the definition of binary object meta-data is finished.]()

**[constr\_5217]{DRAFT} Existence of attribute `BinaryManifestMetaDataField.value`** [For each `BinaryManifestMetaDataField` of category `IMMUTABLE_TABLES_CHECKSUM`, attribute `value` shall exist at the time when the definition of binary object meta-data is finished.]()

**[constr\_5206]{DRAFT} Existence of attribute `BinaryManifestMetaDataField.symbol`** [For each `BinaryManifestMetaDataField`, attribute `symbol` shall exist at the time when the definition of binary object meta-data is finished.]()

**[constr\_5207]{DRAFT} Existence of attribute `BinaryManifestMetaDataField.address`** [For each `BinaryManifestMetaDataField`, attribute `address` shall exist at the time when the definition of binary object meta-data is finished.]()

Please note that the meta-data of a `Software Cluster Binary Manifest` represent information that is immutable during the phase of connecting `Software Clusters` with each other.

## 11.4 Software Cluster Extraction

A `System` with `category` `SYSTEM_DESCRIPTION` is typically used to describe the complete vehicle with all included ECUs. Such a `SYSTEM_DESCRIPTION` may also contain several `CpSoftwareClusters` that are assigned to different `EcuInstances` by `CpSoftwareClusterToEcuInstanceMappings`.

To describe the content of a single `CpSoftwareCluster` a new `System` category is introduced:

**[TPS\_SYST\_02343]{DRAFT}** `System` with `category` `SW_CLUSTER_SYSTEM_DESCRIPTION` [A `System` with `category` `SW_CLUSTER_SYSTEM_DESCRIPTION` describes the content of a single `CpSoftwareCluster`.] (*RS\_SYST\_00060*)



[TPS\_SYST\_02344]{DRAFT} **SW\_CLUSTER\_SYSTEM\_DESCRIPTION content** [A System with category SW\_CLUSTER\_SYSTEM\_DESCRIPTION shall only contain the CpSoftwareCluster relevant content, e.g.

- the EcuInstance to which the CpSoftwareCluster is mapped by CpSoftwareClusterToEcuInstanceMapping,
- the ApplicationPartitions to which the CpSoftwareCluster is mapped by CpSoftwareClusterResourceToApplicationPartitionMapping,
- the CompositionSwComponentTypes referenced by the CpSoftwareCluster in the role swComposition with all included SwComponentPrototypes and all elements used by these SwComponentPrototypes directly or indirectly,
- the SwComponentPrototypes referenced by the CpSoftwareCluster via SwComponentPrototypeAssignment and all elements used by these SwComponentPrototypes directly or indirectly,
- the CpSoftwareClusterToResourceMappings that references the CpSoftwareCluster in the role provider or requester with all CpSoftwareClusterServiceResources that in turn are referenced by the CpSoftwareClusterToResourceMappings,
- the SwConnectors that describe the communication relation between SwComponentPrototypes of the CpSoftwareCluster in focus,
- the PortInterfaceMappings that are referenced by the included SwConnectors and do not lead to a conversion of the data/operation representation since the data scaling between CpSoftwareClusters is excluded,
- the DataMappings that describe the communication relation to different CpSoftwareClusters and to SwComponentPrototypes outside of the CpSoftwareCluster in focus,
- the communication matrix description related content that is related to the included SystemSignals, e.g. ISignals, ISignalTriggerings, ISignalIPdus and all the rest of them.

](RS\_SYST\_00060)

Please note that in some cases the relevant DataMappings for the CpSoftwareCluster may be described in the SYSTEM\_DESCRIPTION on the opposite side, i.e. on different CpSoftwareClusters or on SwComponentPrototypes outside of the CpSoftwareCluster. The reason is that in the SYSTEM\_DESCRIPTION the definition of DataMappings is sufficient on one side. But since these side will be removed during the creation of the SW\_CLUSTER\_SYSTEM\_DESCRIPTION the relevant DataMappings shall be shifted to the CpSoftwareCluster in focus.

For the Ecu and RTE Configuration a System with category ECU\_EXTRACT is derived from the SYSTEM\_DESCRIPTION, ECU\_SYSTEM\_DESCRIPTION or SW\_CLUSTER\_SYSTEM\_DESCRIPTION as described by [TPS\_SYST\_01139].

The derivation of an `ECU_EXTRACT` is a model transformation since a “flat view” of `SwComponentPrototypes` running on the `EcuInstance` is expected by the RTE.

The `SwComponentPrototypes` that are included in the `CompositionSwComponentType` that is referenced by a `CpSoftwareCluster` in the role `swComposition` need to be flattened according to the rules described in chapter 14 in the `ECU_EXTRACT`. So in case of a `SW_CLUSTER_SYSTEM_DESCRIPTION` the `ECU_EXTRACT` represents the “flat view” of a single `CpSoftwareCluster`.

Please note that during the creation of the `ECU_EXTRACT` the «instanceRef»s in `PortElementToCommunicationResourceMapping` shall be adapted because of the process of flattening the hierarchical Software Composition into the “flat view” representation.

**[constr\_5208]{DRAFT} Existence of `System.swCluster`** [In a `System` with category `SW_CLUSTER_SYSTEM_DESCRIPTION`, the reference `System.swCluster` shall exist at least once **at the time when the software cluster extraction is finished.**]()

**[constr\_5209]{DRAFT} Existence of reference `CpSoftwareCluster.swComponentAssignment.swComponent`** [In a `System` with category `SW_CLUSTER_SYSTEM_DESCRIPTION`, the reference `System.swCluster.swComponentAssignment.swComponent` shall exist **at the time when the software cluster extraction is finished.**]()

**[constr\_5210]{DRAFT} Existence of reference `SystemMapping.portElementToComResourceMapping`** [In a `System` with category `SW_CLUSTER_SYSTEM_DESCRIPTION`, the reference `System.mapping.portElementToComResourceMapping` shall exist at least once **at the time when the software cluster extraction is finished.**]()

**[constr\_5211]{DRAFT} Existence of reference `PortElementToCommunicationResourceMapping.communicationResource`** [In a `System` with category `SW_CLUSTER_SYSTEM_DESCRIPTION`, the reference `System.mapping.portElementToComResourceMapping.communicationResource` shall exist at least once **at the time when the software cluster extraction is finished.**]()

**[constr\_5212]{DRAFT} Existence of reference `SystemMapping.resourceToApplicationPartitionMapping`** [In a `System` with category `SW_CLUSTER_SYSTEM_DESCRIPTION`, the reference `System.mapping.resourceToApplicationPartitionMapping` shall exist **at the time when the software cluster extraction is finished.**]()

**[constr\_5213]{DRAFT} Existence of reference `CpSoftwareClusterResourceToApplicationPartitionMapping.applicationPartition`** [In a `System` with category `SW_CLUSTER_SYSTEM_DESCRIPTION`, the reference `System.mapping.resourceToApplicationPartitionMapping.applicationPartition` shall exist **at the time when the software cluster extraction is finished.**]()

**[constr\_5214]{DRAFT} Existence of reference [CpSoftwareClusterResourceToApplicationPartitionMapping.resource](#)** [In a System with category SW\_CLUSTER\_SYSTEM\_DESCRIPTION, the reference [System.mapping.resourceToApplicationPartitionMapping.resource](#) shall exist **at the time when the software cluster extraction is finished.**]()


**[constr\_5215]{DRAFT} Existence of reference [CpSoftwareClusterToResourceMapping.serviceResource](#)** [In a System with category SW\_CLUSTER\_SYSTEM\_DESCRIPTION, the reference [System.mapping.softwareClusterToResourceMapping.serviceResource](#) shall exist **at the time when the software cluster extraction is finished.**]()

**[constr\_5216]{DRAFT} Existence of reference [CpSoftwareClusterToResourceMapping.requester](#) and/or [provider](#)** [In a System with category SW\_CLUSTER\_SYSTEM\_DESCRIPTION, at least one of the references [System.mapping.softwareClusterToResourceMapping.requester](#) or [System.mapping.softwareClusterToResourceMapping.provider](#) shall exist **at the time when the software cluster extraction is finished.**]()

#### 11.4.1 Software Cluster Extraction and DataMappings

The creation of the SW\_CLUSTER\_SYSTEM\_DESCRIPTION for the [HOST\\_SOFTWARE\\_CLUSTER](#) takes a special role. The [DataMappings](#) and [CpSoftwareClusterToResourceMappings](#) of all [CpSoftwareClusters](#) that are mapped to the same [EcuInstance](#) as the [HOST\\_SOFTWARE\\_CLUSTER](#) shall be made available in the SW\_CLUSTER\_SYSTEM\_DESCRIPTION of the [HOST\\_SOFTWARE\\_CLUSTER](#).

This is shown in the example in [Figure 11.12](#), where the Mappings of the outerPort that is connected to “Composition1” are available in the SW\_CLUSTER\_SYSTEM\_DESCRIPTION for “SWCL11” where the “Composition1” is located and the “HOST” [CpSoftwareCluster](#).

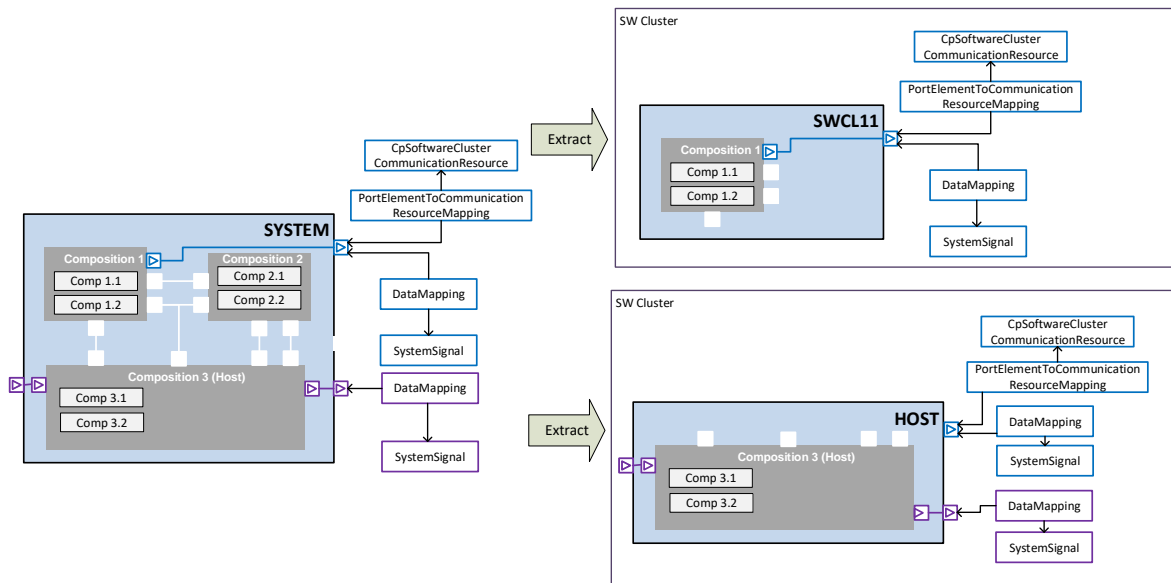

**Figure 11.12: Handling of DataMapping during creation of SW\_CLUSTER\_SYSTEM\_DESCRIPTION**

The [DataMappings](#) on the [HOST\\_SOFTWARE\\_CLUSTER](#) are necessary for the generation of the AUTOSAR COM Stack. [ISignals](#) that are referencing the [SystemSignals](#) are mapped into [ISignalIPdus](#) and these [ISignalIPdus](#) are instantiated on the [PhysicalChannels](#) via [PduTriggerings](#). This information is necessary to derive the COM Pdus. The [ISignalIPdus](#) are then mapped into [Frames](#) for communication over CAN or FlexRay or are assigned to [ProvidedServiceInstances](#) or [ConsumedServiceInstances](#) for communication over SOME/IP. All information that is necessary to configure the COM Stack shall be available in the [HOST\\_SOFTWARE\\_CLUSTER](#).

The [outerPorts](#) of the [APPLICATION\\_SOFTWARE\\_CLUSTERS](#) and the available [DataMappings](#) and [CpSoftwareClusterToResourceMappings](#) in these [CpSoftwareClusters](#) are used to configure the RTE and the Transformers.

## 12 Usage of the System Template

As introduced in [TPS\_SYST\_01003] the System Template is used to describe a `System` with `category` `SYSTEM_CONSTRAINT_DESCRIPTION`, a `System` with `category` `ABSTRACT_SYSTEM_DESCRIPTION` and a `System` with `category` `SYSTEM_DESCRIPTION`. `System` with `category` `SYSTEM_EXTRACT` is described in more detail in chapter 13. `System` with `category` `ECU_EXTRACT` is described in more detail in chapter 14.

Certain elements of the System Template may have a different meaning at the different stages of the AUTOSAR Methodology. The following sections describe the differences.

## 12.1 System Constraint Description

Meta-classes, Chapters	Usage to describe the System Constraints	Usage to describe the System Configuration
<a href="#">CommunicationCluster</a> , <a href="#">EcuInstance</a> ( <a href="#">chapter 3</a> )	The Topology is completely described in the System Constraint Description.	The Topology description will be unchanged copied to the System Configuration description. The Topology may only be changed during another iteration development step of the whole system.
<a href="#">FrameTriggering</a> , <a href="#">PduTriggering</a> , <a href="#">ISignalTriggering</a> ( <a href="#">chapter 6</a> )	The <code>System</code> with <code>category</code> <code>SYSTEM_CONSTRAINT_DESCRIPTION</code> describes all <code>FrameTriggerings</code> that are predefined on all <code>CommunicationClusters</code> of a vehicle. The predefinition of the communication matrix forces the system generator to use the given <code>FrameTriggerings</code> . Constraints for the system generator arise here e.g. from the used bus bandwidth, used identifiers as well as from the timing and at which position in a <code>Frame</code> a <code>Pdu</code> is transmitted on a <code>PhysicalChannel</code> on a <code>CommunicationCluster</code> .  Such a manual definition of the communication can be made for any reason where it is necessary to restrict the system generator. One example is the usage of legacy <code>EcuInstances</code> in an AUTOSAR System. The <code>FrameTriggerings</code> that are transmitted or received by these legacy <code>EcuInstances</code> are constraints for the system generator because they cannot be changed, if the compatibility is supposed to be achieved without any changes at the legacy <code>EcuInstances</code> .	In contrary to the <code>System</code> with <code>category</code> <code>SYSTEM_CONSTRAINT_DESCRIPTION</code> the final <code>System</code> with <code>category</code> <code>SYSTEM_DESCRIPTION</code> contains all <code>FrameTriggerings</code> , <code>PduTriggerings</code> , <code>ISignalTriggerings</code> that will be sent by any <code>EcuInstance</code> in the car. No matter if they were predefined (system constraint) or if they were generated by the system generator. The available information, in addition to the information, which is inserted by the AUTOSAR Ecu configuration generator step, will be used as input to configure the Basic SW for the communication.
<a href="#">Gateway</a> ( <a href="#">chapter 8</a> )	The <code>System</code> with <code>category</code> <code>SYSTEM_CONSTRAINT_DESCRIPTION</code> describes all <code>Gateways</code> in the system including their <code>IPduMappings</code> and <code>ISignalMappings</code> that are predefined. The reasons for such predefinitions are quite the same as for the predefinitions of the <code>FrameTriggerings</code> .	In contrary to the <code>System</code> with <code>category</code> <code>SYSTEM_CONSTRAINT_DESCRIPTION</code> the final <code>System</code> with <code>category</code> <code>SYSTEM_DESCRIPTION</code> describes all <code>Gateways</code> with all their <code>IPduMappings</code> and <code>ISignalMappings</code> . No matter if they were predefined (System Constraint) or if they were generated by the System Generator.
<a href="#">SwcToEcuMapping</a> ( <a href="#">subsection 5.1.1</a> )	The mapping of Software Components to <code>EcuInstances</code> may be predefined. The predefinition will force the system generator to use the specified mapping. Thus, with the <code>SwcToEcuMapping</code> element it is possible to describe that one or more Software Components shall be mapped to a specific <code>EcuInstance</code> .	In a complete <code>System</code> with <code>category</code> <code>SYSTEM_DESCRIPTION</code> , all Software Components are mapped to <code>EcuInstances</code> .
<a href="#">MappingConstraint</a> ( <a href="#">subsection 5.1.4</a> )  <a href="#">ComponentClustering</a> ( <a href="#">subsection 5.1.4.1</a> )  <a href="#">ComponentSeparation</a> ( <a href="#">subsection 5.1.4.2</a> )	There may be system constraints that limit the system generators freedom to map Software Components to arbitrary <code>EcuInstances</code> . These system constraints can be necessary e.g. for optimization and safety reasons to make additional guidelines for the System Generator.	After the mapping has been completed, the <code>System</code> with <code>category</code> <code>SYSTEM_DESCRIPTION</code> will contain mapping descriptions for all elements, and the mapping constraints are obsolete. But that does not mean that mapping constraints have to be deleted after the system generation step. By deleting the mapping constraints you would lose the information why a mapping of a Software Component to an <code>EcuInstance</code> is chosen.





Meta-classes, Chapters	Usage to describe the System Constraints	Usage to describe the System Configuration
<a href="#">DataMapping</a> (section 5.2) <a href="#">SenderReceiverToSignalMapping</a> (subsubsection 5.2.1.1) <a href="#">SenderReceiverToSignalGroupMapping</a> (subsubsection 5.2.1.2) <a href="#">ClientServerToSignalMapping</a> (subsubsection 5.2.1.3)	The <code>System</code> with <code>category</code> <code>SYSTEM_CONSTRAINT_DESCRIPTION</code> may describe the predefined mapping of Software Components to certain <code>EcuInstances</code> (see chapter 5.1.1). Only if such a mapping exists, it is reasonable to define the <code>DataMapping</code> of the data exchanged between the Software Components.	In contrary to the <code>System</code> with <code>category</code> <code>SYSTEM_CONSTRAINT_DESCRIPTION</code> the final <code>System</code> with <code>category</code> <code>SYSTEM_DESCRIPTION</code> shall contain all <code>DataMapping</code> definitions. No matter if they were predefined (system constraint) or if they were generated by the System-Generator.
<a href="#">SignalPathConstraint</a> (subsubsection 5.2.2) <a href="#">CommonSignalPath</a> (subsubsection 5.2.2.1) <a href="#">ForbiddenSignalPath</a> (subsubsection 5.2.2.2) <a href="#">PermissibleSignalPath</a> (subsubsection 5.2.2.3) <a href="#">SeparateSignalPath</a> (subsubsection 5.2.2.4)	It can be necessary e.g. for optimization and safety reasons to make additional guidelines for the System Generator, which specific way a <code>VariableDataPrototype</code> or <code>ClientServerOperation</code> should take in the network without defining in which <code>Pdu</code> and <code>Frame</code> it is transmitted.	<code>SignalPathConstraints</code> are not an obligatory part of the <code>System</code> with <code>category</code> <code>SYSTEM_DESCRIPTION</code> . In the final <code>System</code> with <code>category</code> <code>SYSTEM_DESCRIPTION</code> every <code>ISignal</code> is assigned to a <code>Pdu</code> and every <code>Pdu</code> is assigned to a <code>Frame</code> . Thereby the paths of <code>VariableDataPrototypes</code> or <code>ClientServerOperations</code> on the network are implicitly described. But that does not mean that the <code>SignalPathConstraints</code> have to be deleted after the system generation step. By deleting the <code>SignalPathConstraints</code> you would lose the information why you have chosen e.g. a specific mapping of an <code>ISignal</code> into a <code>Pdu</code> . If you extend or change the system at a later stage the missing <code>SignalPathConstraints</code> could lead to not wanted signal mappings by the System Generator.

Table 12.1: Usage of the System Template

## 12.2 Abstract System Description

**[TPS\_SYST\_01134] Abstract System Description** [Due to the fact that the functional view on vehicle system can differ from the actual technical definition of the software-architectures of individual `EcuInstances` the System Template optionally allows to define a `System` with `category` `ABSTRACT_SYSTEM_DESCRIPTION`.]()

**[TPS\_SYST\_01135] Refactoring of an Abstract System Description into a project specific technical view of the software architecture** [The `System` with `category` `ABSTRACT_SYSTEM_DESCRIPTION` concentrates on the functional aspects of the system design and provides an own abstract VFB. During the further activities this abstract view shall be refactored into a more project specific technical view of the software architecture.

It is important to note that during the refactoring of the `System` with `category` `ABSTRACT_SYSTEM_DESCRIPTION` into the `System` with `category` `SYSTEM_DESCRIPTION` no restrictions to the allowed actions apply (This is in contrast

to the activity of deriving the `System` with `category` `SYSTEM_EXTRACT` from the `System` with `category` `SYSTEM_DESCRIPTION`, see [TPS\_SYST\_01123].>()

[TPS\_SYST\_01136] **ViewMapSet** and **ViewMap** are used to trace the transformations between different models [The `ViewMapSet` and `ViewMap` elements are used to trace the transformations between different models within the AUTOSAR environment.]()

These classes are described in more detail in the Generic Structure Template [2].

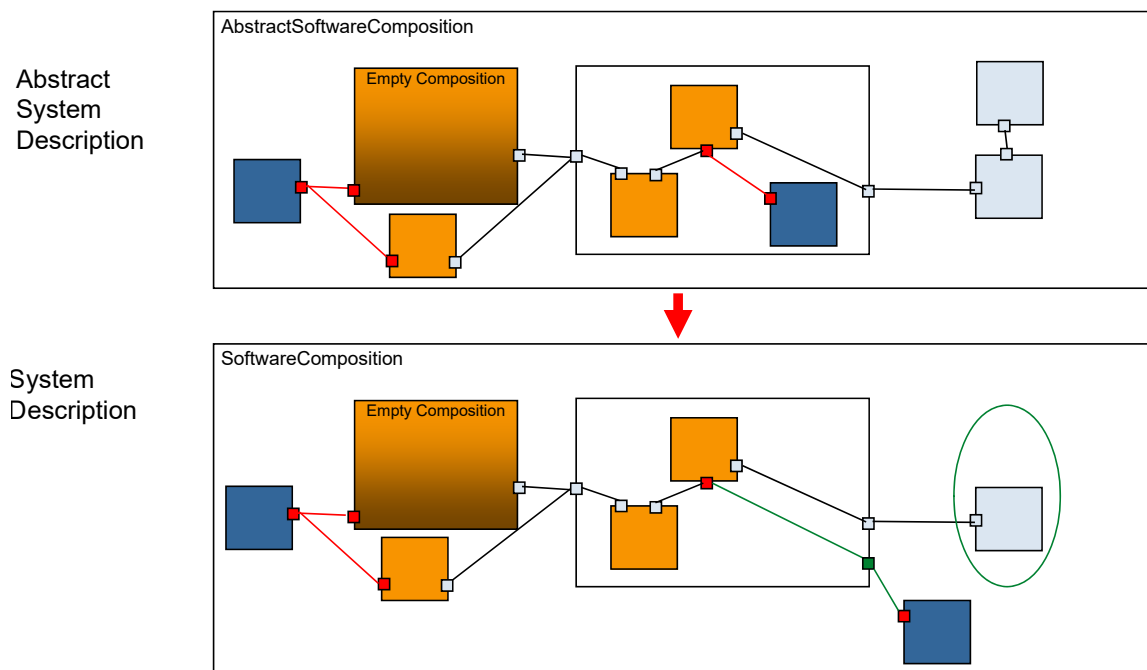


Figure 12.1: Abstract System Description refactoring to a System Description



## 13 System Extract of the System Configuration Description

This chapter describes contents and creation of the AUTOSAR work product *System* with *category* SYSTEM\_EXTRACT, based on Meta Model elements contained in the System Template and Software Component Template.

The *System* with *category* SYSTEM\_EXTRACT is introduced to allow a collaboration between an OEM and a Supplier.<sup>1</sup> The OEM/Supplier Collaboration scenario is described in more detail in chapter 13.1.

The OEM is often only interested in the required functionality and the integration of the functionality into the *System*. Thus the OEM provides a basis for designing a subsystem, which is developed by the supplier. One difference to the *System* with *category* ECU\_EXTRACT is that the *System* with *category* SYSTEM\_EXTRACT is not fully decomposed and still needs to be refined before it forms the basis for the ECU configuration. Another difference is that a *System* with *category* SYSTEM\_EXTRACT is not fixed to an *EcuInstance*.

**[TPS\_SYST\_01123] System Extract may cover one or many *EcuInstances*** [The *System* with *category* SYSTEM\_EXTRACT may cover one or many *EcuInstances*.]  
( )

The *System* with *category* SYSTEM\_EXTRACT is using the same meta model elements as the *System* with *category* SYSTEM\_DESCRIPTION. The *System* with *category* SYSTEM\_DESCRIPTION is a special case of a *System* with *category* SYSTEM\_EXTRACT. From the technical point of view there is no difference. The distinction is only made for the sake of Methodology [4].

In the *System* with *category* SYSTEM\_EXTRACT the OEM strips all information from the *System* with *category* SYSTEM\_DESCRIPTION that is not needed for the definition of the subsystem. There is one exception to this simple "remove" rule: the communication mapping may need to be extended, which will be described in more detail in chapter 13.2.


**[TPS\_SYST\_03000] Co-existing *System* with *category* SYSTEM\_DESCRIPTION and *System* with *category* SYSTEM\_EXTRACT** [In order to be able to handle one *System* with *category* SYSTEM\_DESCRIPTION and one or several *Systems* with *category* SYSTEM\_EXTRACT within the same workspace it shall be possible to provide different full qualified names to the elements of *System* with *category* SYSTEM\_EXTRACT.] (*RS\_SYST\_00045*)

When different *Systems* with various categories co-exist it is possible to define *ViewMap* and *ViewMapSet* between their elements according to [TPS\_SYST\_01136].

---

<sup>1</sup> Collaboration scenarios between different departments of an OEM are also supported by the *System* with *category* SYSTEM\_EXTRACT. For the sake of simplicity such scenarios are not addressed here.

In contrast to the *System* with *category* ECU\_EXTRACT the *System* with *category* SYSTEM\_EXTRACT may contain *CompositionSwComponentTypes*. Empty *CompositionSwComponentTypes* in the *System* with *category* SYSTEM\_EXTRACT represent subsystems that need to be refined by a Supplier. Figure 13.1 shows an example where a *System* with *category* SYSTEM\_DESCRIPTION is stripped down to a subsystem.

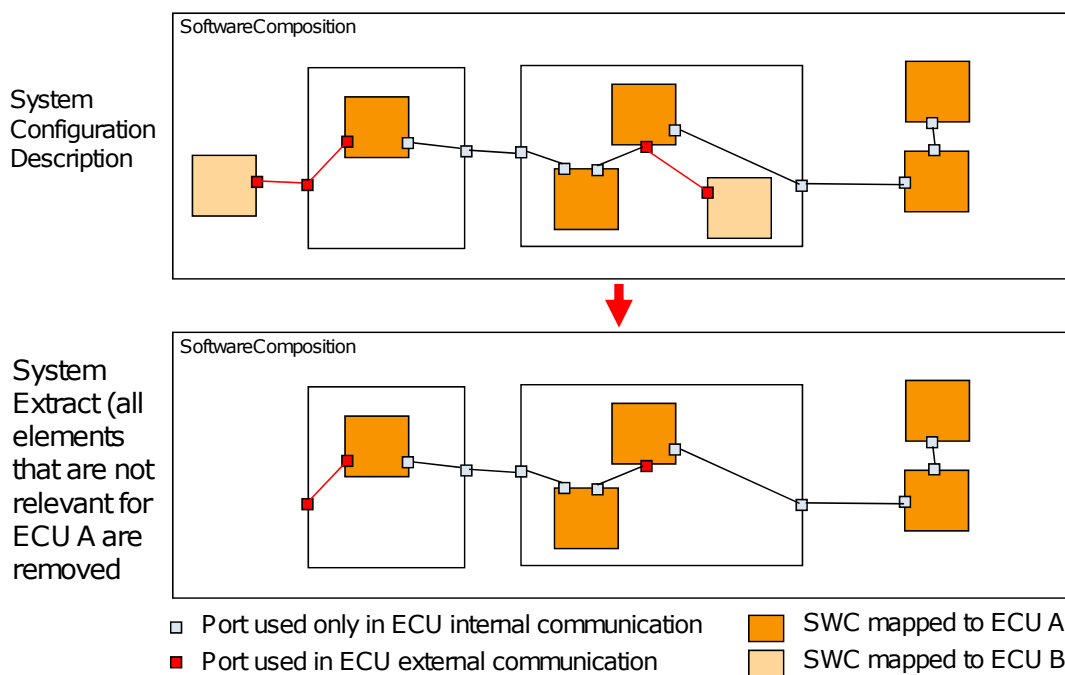

**Figure 13.1: System Extract creation: irrelevant elements are removed from the System Description**

## 13.1 OEM/Supplier Collaboration Scenario

In an important collaboration scenario, an OEM commissions a supplier to provide implementations of one or more functionalities to be integrated into an AUTOSAR system in the form of Application Components. The OEM is primarily interested in the required functionality and the interfaces defining the integration of the Software Component into the System VFB rather than the internal structure of such a component. On the other hand, the supplier, delivering both the component implementation in combination with the ECU it is destined to run on, may claim the internal structure of such a higher-level component contains substantial intellectual property, and hence may not want to disclose its internal works to the OEM.

Effectively, the use case can be described in the following manner:

- The OEM generates a *System* with *category* SYSTEM\_EXTRACT from the *System* with *category* SYSTEM\_DESCRIPTION. From the *System* with *category* SYSTEM\_DESCRIPTION all elements are removed that are not relevant for the design of the subsystem, such as SW components or topology elements.

- The OEM can deliver a sub-structure of Software Compositions or even Atomic Software Components in the `System` with `category` `SYSTEM_EXTRACT`. But the `System` with `category` `SYSTEM_EXTRACT` can also contain empty Software Compositions. The OEM shall have the possibility to define only the outer shell of a Software Composition that is to implement a certain functionality. Such an empty `CompositionSwComponentType` does contain all the provided and required ports with the included `ReceiverComSpecs` and `SenderComSpecs` describing the requested component's outside communication needs. But it does not need to contain `SwComponentPrototypes` or `SwConnectors` at this stage.
- Such empty components are added to a System's VFB, the outside ports are connected with other components in the VFB. However, at this stage the inner structure of such `CompositionSwComponentType` can still be left empty.
- The `System` with `category` `SYSTEM_EXTRACT` contains the mapping of components to the target `EcuInstances`, including the empty compositions. Signal mappings affecting the empty compositions are targeting the `CompositionSwComponentType`'s ports.
- The OEM delivers the `System` with `category` `SYSTEM_EXTRACT` to the Supplier.
- The Supplier adds the substructure to the empty `CompositionSwComponentTypes` by adding `SwComponentPrototypes` and `SwConnectors`. This once more leads to a hierarchical VFB, effectively the Supplier creates a local System Description for his subsystem.
- The Supplier adjusts the Signal mappings to the actual ports of the inner `AtomicSwComponentType` prototype.
- The Supplier generates the `System` with `category` `ECU_EXTRACT` from his ECU-local system description. The resulting `System` with `category` `ECU_EXTRACT` does not include prototypes of type `CompositionSwComponentType` any longer.
- Based on this `System` with `category` `ECU_EXTRACT` the actual ECU configuration is done.

When the supplier receives the `System` with `category` `SYSTEM_EXTRACT` from the OEM he has basically two choices how to proceed:

1. The Supplier takes the `System` with `category` `SYSTEM_EXTRACT` of the OEM as the structural basis for the ECU development. In this case the following steps may follow:
  - The Supplier adds the substructure to the empty `CompositionSwComponentTypes` by adding `SwComponentPrototypes` and `SwConnectors`. This once more leads to a hierarchical VFB, effectively the Supplier creates a local System Description for his subsystem (`System` with `category` `ECU_SYSTEM_DESCRIPTION`).

- The Supplier adjusts the Signal mappings to the actual ports of the inner `AtomicSwComponentType` prototype.
2. The Supplier creates an own structure to base the ECU development on `System` with `category` `ECU_SYSTEM_DESCRIPTION` and perform a view mapping between the OEM's `System` with `category` `SYSTEM_EXTRACT` and the `System` with `category` `ECU_SYSTEM_DESCRIPTION`. In this case the following steps may follow:
    - The Supplier develops an own structure how the ECU shall be designed but needs to respect the required outer boundary of the OEM's required communication behavior (`ReceiverComSpecs` and `SenderComSpecs`).
    - The Supplier adjusts the Signal mappings to the actual ports of the inner `AtomicSwComponentType` prototype.


When the design of the `System` with `category` `ECU_SYSTEM_DESCRIPTION` is complete the following steps follow:

- The Supplier generates the `System` with `category` `ECU_EXTRACT` from his `System` with `category` `ECU_SYSTEM_DESCRIPTION`. The resulting `System` with `category` `ECU_EXTRACT` does not include prototypes of type `CompositionSwComponentType` any longer.
- Based on this `System` with `category` `ECU_EXTRACT` the actual ECU configuration is done.

## 13.2 Data Mapping in the System Extract

As mentioned before, there is a slight complication to the simple "remove" rule. This can be shown best with an example.

*Example:* Assume a simple topology with two `EcuInstances` A and B and three `Pdus` X (sent from A to B), Y (sent from B to A) and Z (sent from B to A) as shown in Figure 13.2.

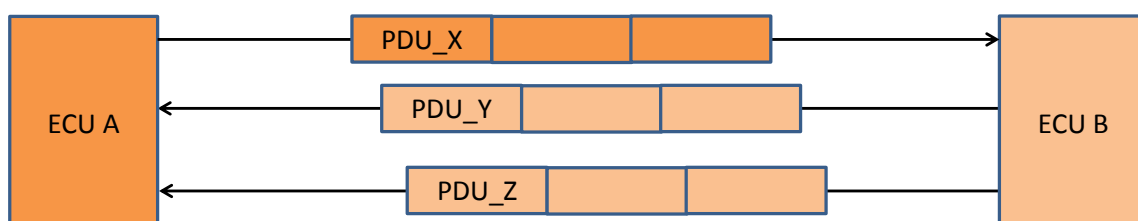


**Figure 13.2:** Example topology with two `EcuInstances` and three `Pdus` exchanged between them

Furthermore assume a composition of software-components realized by the meta-class `CompositionSwComponentType` as shown in Figure 13.3. It consists of six `SwComponentPrototypes` 'A1' to 'A3' (aggregated in composition 'SwCompA'),

'B1' / 'B2' (aggregated in composition 'SWCompB'), 'C1' (aggregated in composition 'SWCompAplusBplusC') and an empty composition 'SWCompC'.

The overall composition 'SWCompAplusBplusC' aggregates 'SwCompA', 'SWCompB', the empty 'SWCompC' and the `SwComponentPrototype` 'C1'.

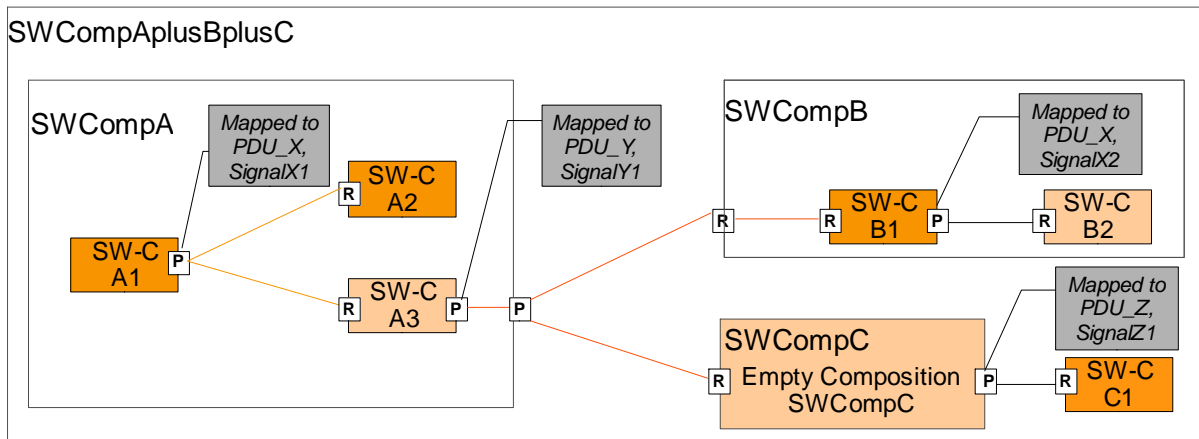

- SW Component mapped to ECU A
- SW Component mapped to ECU B

**Figure 13.3: Example SW composition with mapping information**


The atomic `SwComponentPrototypes` 'A1', 'A2', 'B1' and 'C1' are mapped to 'ECU A'. The atomic `SwComponentPrototypes` 'A3', 'B2' and the empty composition 'SWCompC' are mapped to 'ECU B'. The data sent from

- 'A1' to 'A3' is mapped to 'PDU\_X', 'SignalX1',
- 'B1' to 'B2' is mapped to 'PDU\_X', 'SignalX2' and
- 'A3' to 'B1' and 'A3' to 'SWCompC' is mapped to 'PDU\_Y', 'SignalY1'
- 'SWCompC' to 'C1' is mapped to 'PDU\_Z', 'SignalZ1'

As usual, the data mapping rules refer to the `VariableDataPrototype` in the `PPortPrototype` of the sending SW component. Note that `DataMappings` can be performed on compositions and on atomic `SwComponentPrototypes` as described in chapter 5.2.1. <sup>2</sup>

Figure 13.4 shows how the System extract for ECU A and for ECU B of this SW composition would look like: Only those elements are included that are relevant for the subsystem.

<sup>2</sup>Data mapping is allowed on empty compositions and on compositions that contain atomic `SwComponentPrototypes`.

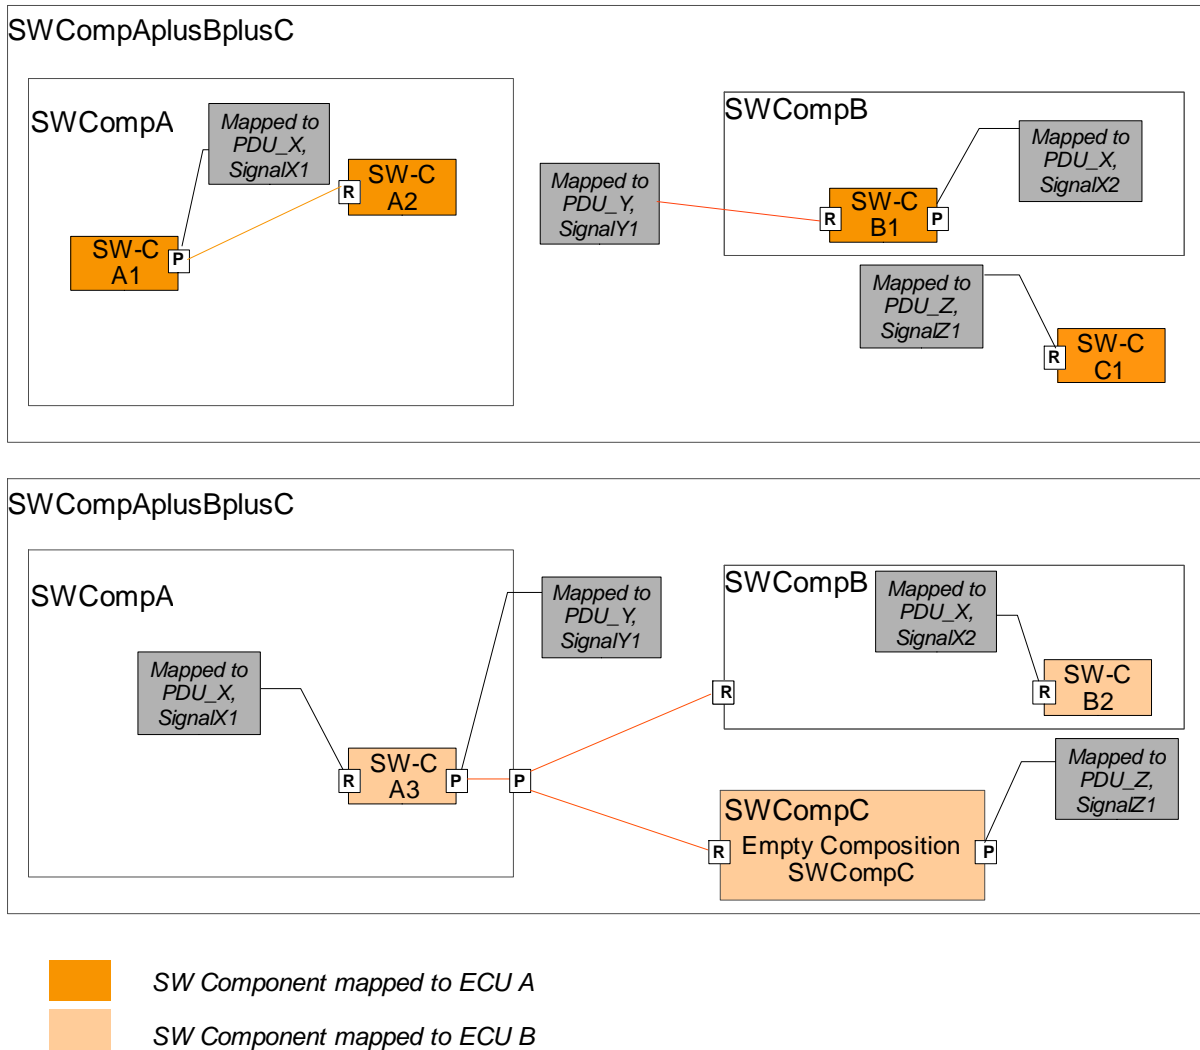

**Figure 13.4: Example System extract for ECU A (upper figure) and ECU B (lower figure) of above introduced composition**

In both figures all `SwComponentPrototypes` and compositions that are mapped onto the `EcuInstance` are included. The `SwConnector` between these `SwComponentPrototypes` are also included. Furthermore, the relevant topology information and communication matrix have to be included, but they are out of scope of this example.

`SwConnectors` that were used to connect to SW components that are not included in the System Extract are not included. Instead, the mapping to an `ISignal` in a `Pdu` is used to identify the source/destination of that data.

The problem that new mapping rules have to be added arises for example in the System Extract for ‘ECU A’ with the mapping to ‘PDU Y’, ‘SignalY1’: Since SW component ‘A3’, which was referenced in the original mapping, is no longer included, the data mapping needs a new data element in a port to reference to. In the example, it is the required port of ‘B1’, so that the Supplier has the information that B1 receives the data via ‘PDU Y’.

### 13.3 SW component inclusion and top level data mapping

In section 13.2 the approach is to provide the `DataMapping` on the `PortPrototypes` of the `SwComponentPrototypes` which are mapped to one `EcuInstance`. Since the granularity of mapping `SwComponentPrototypes` to `EcuInstances` is possible for individual atomic `SwComponentPrototypes` this approach may result in many `DataMappings` from different software component `PortPrototypes` to the same `SystemSignal` (depending where in the hierarchical structure they are located).


An alternative approach is to provide the complete communication information of the whole System Extract on the `RootSwCompositionPrototype` and perform the `DataMapping` on the `PortPrototypes` of the `RootSwCompositionPrototype` only. This approach is illustrated in figure 13.5.

`PortPrototypes` are created on the `RootSwCompositionPrototype` representing the external communication of this `EcuInstance`. `DelegationSwConnectors` are created to establish the communication of the external software components with the software components inside the local `EcuInstance`.

In figure 13.5 the software components X, Y and Z are mapped to remote `EcuInstances`. Their communication needs are collected in `PortPrototypes` on the `RootSwCompositionPrototype` and the communication is delegated via `SwConnectors` inside the hierarchical software component structure.

In this example the approach for X and Y is trivial since there are only some `DelegationSwConnectors` required to connect the `PortPrototypes` of the `RootSwCompositionPrototype` with the `PortPrototypes` of the respective `SwComponentPrototypes`.

But for `SwComponentPrototype` Z the approach needs to be extended, because the communication on system level is designed to happen inside the composition V. In this case the communication needs to be delegated out of the composition (creation of `DelegationSwConnectors` inside the composition V) to be visible in the `RootSwCompositionPrototype`. Then again the approach of connection to the `RootSwCompositionPrototype` can be applied.

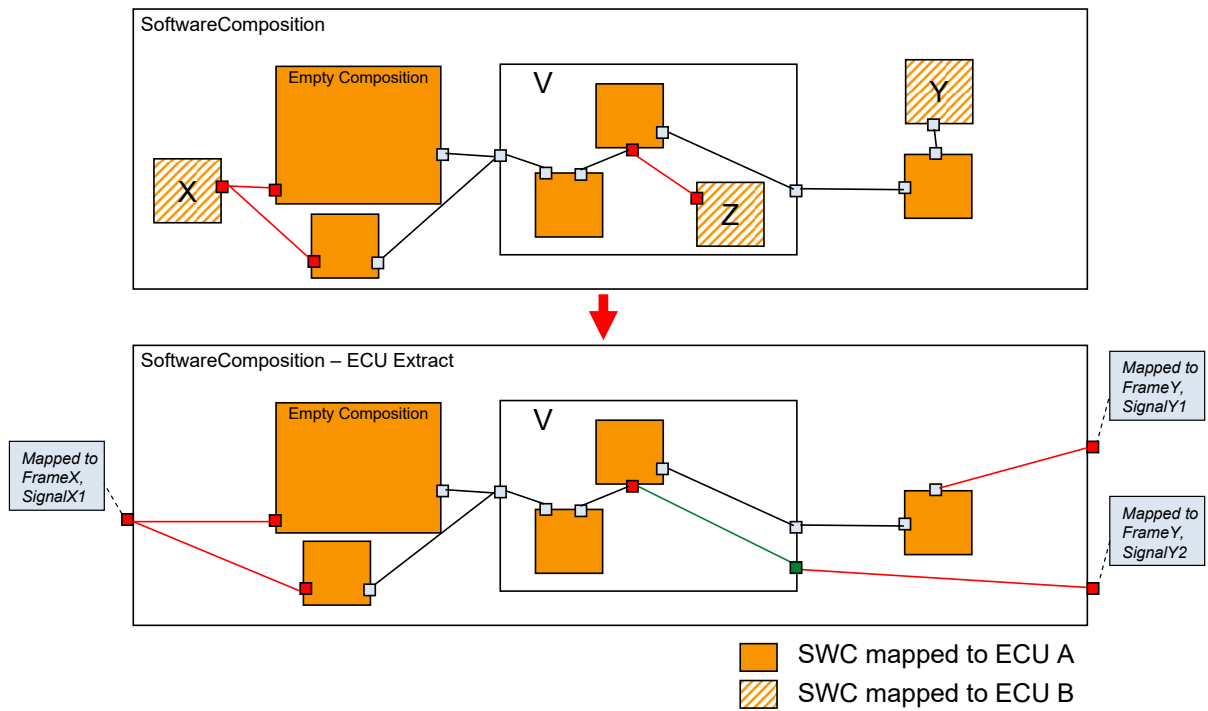


**Figure 13.5: Example with software components mapped to two ECUs**



### 13.4 Port-Interface Mapping in the System Extract

A similar problem as the one with `DataMappings` described in chapter 13.2 and chapter 13.3 exists for the `PortInterfaceMappings` as well. To illustrate this Figure 13.6 depicts an example with software components mapped to two different ECUs.

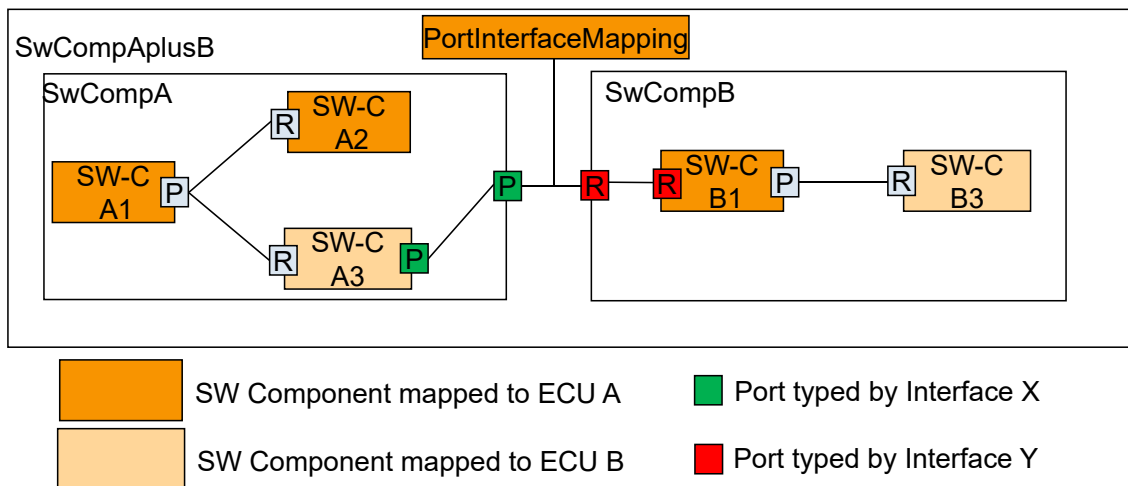

**Figure 13.6: Example with software components mapped to two ECUs**

Hereby the `PPortPrototype` typed with `PortInterface X` of `SWCompA` is connected with the `RPortPrototype` typed with `PortInterface Y` of `SWCompB` by means of an `AssemblySwConnector`. This `AssemblySwConnector` has an attached `PortInterfaceMapping` to perform a mapping between the elements (see chapter 4.3.1.5 of [5]) of the two otherwise incompatible `PortInterfaces X` and `Y`.

A System Extract for ECU A is now created by applying the approach described in chapter 13.3, i.e., by providing the complete communication information of the whole System Extract on the `RootSwCompositionPrototype` and performing the `DataMapping` on the `PortPrototypes` of the `RootSwCompositionPrototype` only.

When doing this however the following two additional things have to be considered:


- The `PortInterfaceMapping` shall be preserved during this process
- The information about the `PortInterfaces` referenced by the `PortPrototypes` connected by the `AssemblySwConnector` referencing the `PortInterfaceMapping` shall be preserved during this process

Just as in the approach described in chapter 13.3 `PortPrototypes` are created on the `RootSwCompositionPrototype` representing the external communication of this `EcuInstance`. The `RPortPrototypes` however are not typed by the `PortInterface X` of the `RPortPrototypes` of the `SwComponentPrototypes` inside `ECU A` (`SWCompB` in the example) but by the `PortInterface Y` of the `PPortPrototype` which was connected to the `RPortPrototypes` by means of the `AssemblySwConnector`. Afterwards the just like in the approach described in chapter 13.3

DelegationSwConnectors are created to connect the PortPrototypes of the RootSwCompositionPrototype with the corresponding RPortPrototypes of the SwComponentPrototypes inside ECU A.

This however yields a DelegationSwConnector between RPortPrototype typed by PortInterface Y (which has been created on the RootSwCompositionPrototype) and the RPortPrototype typed by PortInterface X of SWCompB. In order to perform a mapping between the elements of these otherwise incompatible interfaces, the PortInterfaceMapping which has initially been referred to by the AssemblySwConnector needs to be referenced by the DelegationSwConnector.

The final result of this process is depicted in Figure 13.7

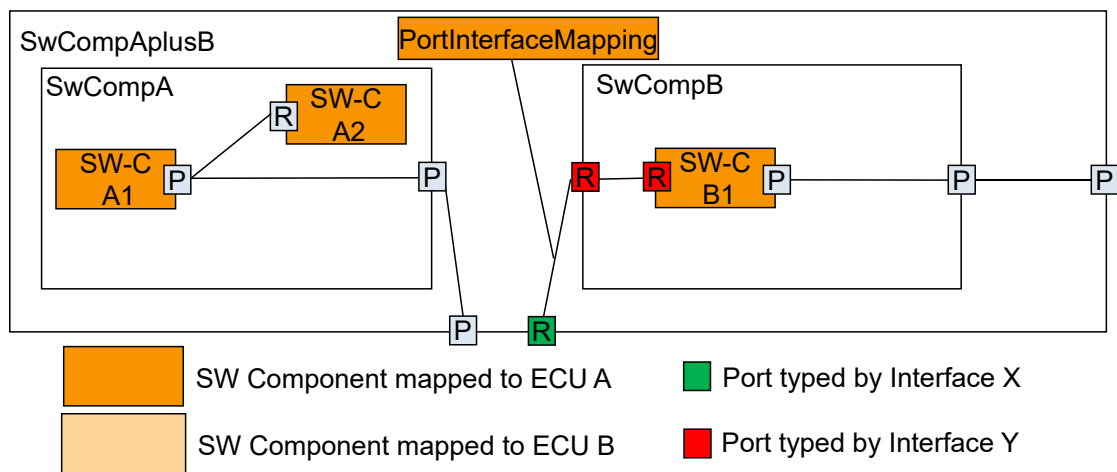

**Figure 13.7: Example with software components mapped to two ECUs**

## 14 ECU Extract of the System Configuration Description

This chapter describes contents and creation of the AUTOSAR `System` with `category` `ECU_EXTRACT`, based on Meta Model elements contained in the System Template and Software Component Template.

The `System` with `category` `ECU_EXTRACT` represents the view of one specific `EcuInstance` onto the overall `System` with `category` `SYSTEM_DESCRIPTION`. The `System` with `category` `ECU_EXTRACT` forms the basis for configuring that particular `EcuInstance` in focus.

For instance, RTE configuration fundamentally depends on the number and types of `SwComponentPrototypes` deployed onto the `EcuInstance`; Services are configured according to those Software Components' `ServiceNeeds`; the COM-stack BSW modules will be configured considering the `EcuInstance`'s participation in the overall System Network Topology and Communication.

**[TPS\_SYST\_01139] Ecu Extract derived from System Description or System Extract covers exactly one EcuInstance** [The `System` with `category` `ECU_EXTRACT` shall only contain the subset of information derived from the `System` with `category` `SYSTEM_DESCRIPTION` or `System` with `category` `SYSTEM_EXTRACT` relevant for configuring the targeted `EcuInstance`.]()

In order to keep ECU configuration focused and manageable despite the complexity of a full System Configuration, all other information shall be stripped from the `System` with `category` `SYSTEM_DESCRIPTION` or from the `System` with `category` `SYSTEM_EXTRACT` when creating the `System` with `category` `ECU_EXTRACT`.

AUTOSAR VFB Descriptions naturally form hierarchies of `CompositionSwComponentTypes`. Consequently, in the System Configuration the SWC-related information for different `EcuInstances` is not separated but in general is intermingled. In contrast, for the task of ECU configuration (RTE configuration, Service Configuration, Measurement and Calibration) a hierarchically "flat view" on the `SwComponentPrototypes` running on the `EcuInstances` is preferable over a hierarchical view, which is more favored by application-software development. Thus, deriving an `System` with `category` `ECU_EXTRACT` actually is a model transformation, following a set of rules described in the following sections.

**[TPS\_SYST\_02313] Ecu Extract derived from ECU\_SYSTEM\_DESCRIPTION covers an EcuInstance** [The `System` with `category` `ECU_SYSTEM_DESCRIPTION` defines the content of a single `EcuInstance` and the same is true for the derived `ECU_EXTRACT`. The derived `ECU_EXTRACT` is flattened and does not contain any hierarchies of `CompositionSwComponentTypes`.]()

**[TPS\_SYST\_02314] Ecu Extract derived from SW\_CLUSTER\_SYSTEM\_DESCRIPTION covers a subset of an EcuInstance** [The `System` with `category` `SW_CLUSTER_SYSTEM_DESCRIPTION` defines the

content of a single `CpSoftwareCluster` and the same is true for the derived `ECU_EXTRACT`. The derived `ECU_EXTRACT` is flattened and does not contain any hierarchies of `CompositionSwComponentTypes.()`

As System- and ECU development typically happens in iterations, the use case of repeatedly extracting the information from an incrementally changing System Configuration needs to be considered. In particular, it shall be possible to detect changes between consecutively generated ECU extracts in order to selectively update the existing ECU configuration (14.6).

AUTOSAR supports the definition and consequently the handling of Variability in the System Configuration. According to the specified binding time associated with a particular `VariationPoint`, typically some of these variants will already be resolved at the time of a `System` with `category` `ECU_EXTRACT`. If however the binding time occurs in a later stage of the AUTOSAR methodology, i.e. during ECU Configuration or later, the variability needs to be carried over to the `System` with `category` `ECU_EXTRACT`. This also holds true for Variation points that ultimately are resolved at system configuration time but affect post-build configuration parameters. (14.7)

The `System` with `category` `ECU_EXTRACT` logically forms one entity. Therefore, for ease of readability the rest of the chapter assumes just one file, “the XML file”. However, it explicitly is allowed to split the `System` with `category` `ECU_EXTRACT` over several files.

## 14.1 Topology

Only those Topology elements relevant for the `EcuInstance` in scope are taken over from the `System` with `category` `SYSTEM_DESCRIPTION` into the `System` with `category` `ECU_EXTRACT`.

- The `System` with `category` `ECU_EXTRACT` is always associated with exactly one `EcuInstance`. Therefore exactly one `EcuInstance` is included along with all classes included in `EcuInstance` by composition: `CommunicationControllers` and `CommunicationConnectors` with all their `CommConnectorPorts`.
- A `CommunicationCluster` is included along with all its `PhysicalChannels` if at least one `PhysicalChannel` is used by the `EcuInstance`. In other words, if at least one of the included `CommunicationConnectors` is referenced by any of a `CommunicationCluster`'s `PhysicalChannels`, the whole `CommunicationCluster` and all its `PhysicalChannels` are included.
- From the used `PhysicalChannels`, only those `FrameTriggerings`, `PduTriggerings`, `ISignalTriggerings` shall be included that are used by the `EcuInstance`, e.g. they are associated with a `FramePort`, `IPduPort`, `ISignalPort` belonging to one of the `EcuInstance`'s `CommunicationConnectors`. *Note:* Including just a subset of a `PhysicalChannel`'s

`FrameTriggerings`, `PduTriggerings`, `ISignalTriggerings` is possible without changing the `PhysicalChannel` itself because of the `<<splittable>>` stereotype applied on the `PhysicalChannel / FrameTriggering, PduTriggering, ISignalTriggering` composition.

As the Topology elements are not modified when taken over into the `System` with `category ECU_EXTRACT`, their package structure and short names are not touched (see section 14.5.1).

## 14.2 Top-level Software Composition

In the `System` with `category SYSTEM_DESCRIPTION` the application software composition is hierarchic by nature as described in chapter 4. When mapping `SwComponentPrototypes` onto concrete `EcuInstances` using the `SwcToEcuMapping` class (section 5.1.1), either `SwComponentPrototypes` of type `AtomicSwComponentType`, or `SwComponentPrototypes` of type `CompositionSwComponentType` are deployed onto one specified `EcuInstance`.

In order to obtain this ECU-centric view, the hierarchical structure of the `System` with `category SYSTEM_DESCRIPTION` needs to be transformed into a 1-layer representation, where one distinguished `CompositionSwComponentType` hosts all `SwComponentPrototypes` of type `AtomicSwComponentType` to run on the `EcuInstance`. In the `System` with `category ECU_EXTRACT` the resulting `RootSwCompositionPrototype` is a flat structure where the included `SwComponentPrototypes` become real SWC instances, reflecting the actual resource needs on the targeted `EcuInstance`.

**[TPS\_SYST\_01140] Ecu Extract contains only `SwComponentPrototypes` of type `AtomicSwComponentType` in the `RootSwCompositionPrototype`** [The `System` with `category ECU_EXTRACT` only contains `SwComponentPrototypes` of type `AtomicSwComponentType` in the `RootSwCompositionPrototype` which are effectively mapped onto the `EcuInstance` in focus.]()

The transformation from hierarchical to flat Software Component structure includes a number of steps, to be performed per ECU. The list below outlining this process assumes that the extraction is done for the first time; if an `System` with `category ECU_EXTRACT` already exists from a previous development cycle, the extract shall merely be updated instead of created; for more details on iterative development see section 14.6.

- Create the one `CompositionSwComponentType` which will represent the ECU's SW subsystem (in further steps referred to as ECU flat view)
- To this ECU flat view, add a `SwComponentPrototype` for each instance of any `AtomicSwComponentType` mapped onto the `EcuInstance`. Copy all the identifiable information from the originating `SwComponentPrototype`, but assign an

unique short name to the new element. The newly created `SwComponentPrototypes` are typed by the original `AtomicSwComponentType`.


- Unroll the connector paths leading to and from the included components:
  - For ECU internal communication, use `AssemblySwConnector` to connect `PortPrototypes`.
  - For ECU external communication, add delegated `PortPrototypes` to the ECU flat view `CompositionSwComponentType`. The delegated `PPortPrototypes` are allowed to contain a subset of the data that is defined by the inner `PPortPrototype` as specified by [TPS\_SYST\_02384]. The delegated `RPortPrototypes` are allowed to contain a superset of the data that is defined by the inner `RPortPrototypes` as specified by [TPS\_SYST\_02385]. Each delegated `PortPrototype` shall be connected via a `DelegationSwConnector` with `PortPrototypes` of the included `SwComponentPrototypes` that are used for the external communication.
  - `VariableDataPrototypes` and `ClientServerOperations` of the delegated `PortPrototypes` are mapped to `SystemSignals`.
- If the `System` with `category` `SYSTEM_DESCRIPTION` prescribes an `Implementation` for a `SwComponentPrototype` by using `SwcToImplMapping`, a corresponding constraint needs to be created in the `System` with `category` `ECU_EXTRACT` of the targeted `EcuInstance`. The `SwcToImplMapping`'s `component` reference needs to be adjusted to the flat representation, while maintaining the original reference to the `Implementation`.
- Only `ComSpecs` on the `PortPrototypes` of atomic software components are relevant for the RTE generator (see [TPS\_SWCT\_01568]). The existence of `ComSpecs` on composition level can be taken into account for setting the values on the atomic level as the atomic level gets created. On the other hand there is no obligation to respect the `ComSpec` settings on the composition level for the creation of the atomic level. Finally the approach for the creation of `ComSpec` values on atomic level depends on OEM preferences.

**[TPS\_SYST\_02384] Sending inner Ports may contain the superset of data provided on the outer delegation Port** [The outer `PPortPrototype` on the `CompositionSwComponentType` is allowed to contain a subset of the provided data that is defined by the inner `PPortPrototype` of the included `SwComponentPrototype` that is connected via a `DelegationSwConnector` to the outer `PPortPrototype`.]  
( )

**[TPS\_SYST\_02385] Receiving outer Ports may contain the superset of data delegated to the inner Ports** [The inner `RPortPrototype` on the `SwComponentPrototype` that is included in the `CompositionSwComponentType` is allowed to contain a subset of the received data that is defined by the outer `RPortPrototype` of the `CompositionSwComponentType` that is connected via a `DelegationSwConnector` to the inner `RPortPrototype`.]  
( )



Figure 14.1 illustrates the process of flattening the hierarchical Software Composition into an ECU Flat View representation, as outlined in the previous paragraphs. The following sections explain the concrete transformation steps in more detail.

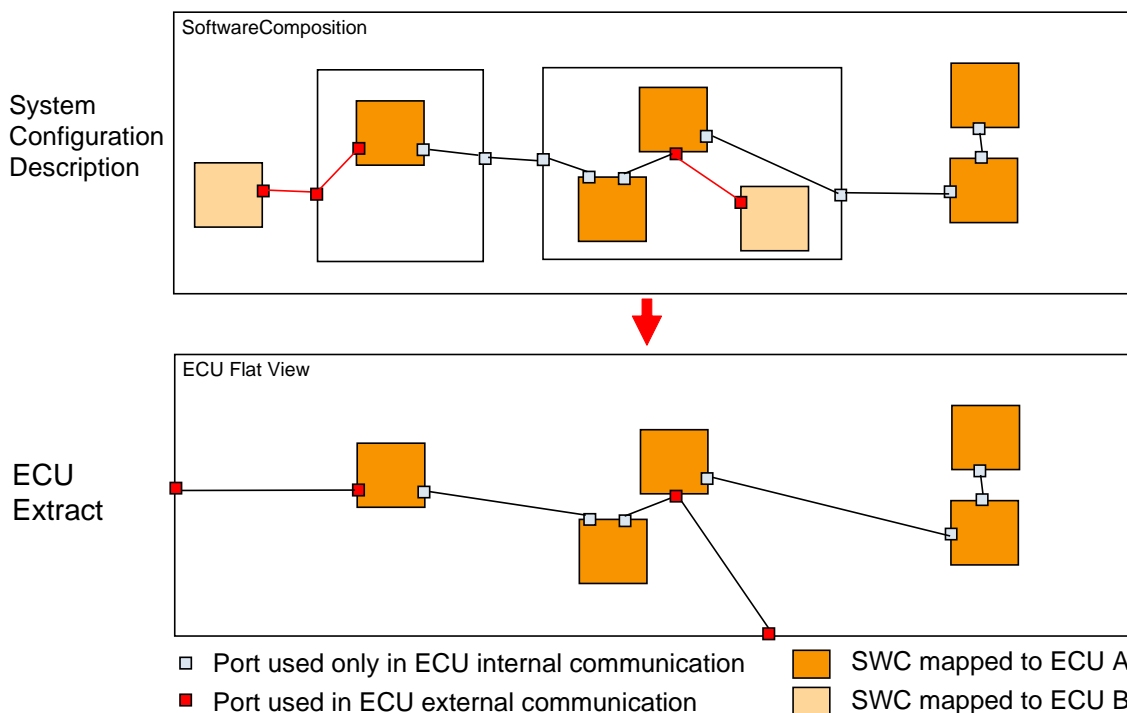

**Figure 14.1: Flattening of a hierarchic Software Composition into an ECU Flat View, and the distinction between ports used in internal and those used in external communication.**

Please note that instantiation specific scheduling of runnables shall be maintained when generating a `System` with `category` `ECU_EXTRACT`. This maintenance covers the rewrite of the `instanceRef` to the `RTEEvent` respectively the aggregation of the `instantiationRTEEventProps` to the next `CompositionSwComponentType`.

### 14.2.1 ECU Flat view

The first step of extracting the ECU specific Software View is the creation of a new `CompositionSwComponentType` (further referred to as ECU flat view). This new element serves as a container for collecting all `SwComponentPrototypes` of type `AtomicSwComponentType` deployed on the `EcuInstance`. In order to include the ECU flat view into the actual `System` with `category` `ECU_EXTRACT`, the `System` shall have its child class `RootSwCompositionPrototype` pointing to this ECU flat view.

Next, all `SwcToEcuMappings` present in the `System` with `category` `SYSTEM_DESCRIPTION` need to be analyzed according to the precedence rules (Section 5.1.1) in order to establish the exact set of `AtomicSwComponentType` instances to be included on this `EcuInstance`.

For each of these component instances, regardless of their order of depth in the System Configuration Description's Component hierarchy, exactly one `SwComponentPrototype` shall be created in the ECU flat view `CompositionSwComponentType`. The new element's description and type information shall be taken over from the original `SwComponentPrototype` as present in the System with category `SYSTEM_DESCRIPTION`. As an important exception to this rule, the `SwComponentPrototype`'s `shortName` shall be unique in the name space formed by the ECU flat view.

The `ParameterSwComponentTypes` are handled in the same way. For `ParameterSwComponentTypes` there are `SwConnectors` defined but no communication is involved. For more details see [TPS\_SWCT\_01422] in the `SwComponentTemplate` [5]. For `ServiceProxySwComponentTypes` one small difference applies: This component type can be instantiated at most once per `EcuInstance` and for a given prototype in the System, instances on several `EcuInstances` can be created. The replication of `ServiceProxySwComponentTypes` on several `EcuInstances` does not require any special treatment of their communication properties.

## 14.2.2 Internal Communication

When flattening the `RootSwCompositionPrototype` for the System with category `ECU_EXTRACT`, not only all of the ECU's Software Components are to be collected in the ECU flat view, but also any connection existing between `PortPrototypes` of the included `SwComponentPrototypes` needs to be projected onto the same `RootSwCompositionPrototype`.

In the hierarchical `RootSwCompositionPrototype`, communication between Software Components is specified by a combination of `AssemblySwConnectors` and `DelegationSwConnectors`. Several `DelegationSwConnectors` may be combined in case of a multiple-level delegation, however there will always be exactly one `AssemblySwConnector` on the outermost `CompositionSwComponentType` the port is delegated to.

In the ECU flat view, any such number of stringed together `SwConnectors` effectively connecting two `PortPrototypes` of `SwComponentPrototypes` mapped to the same `EcuInstance` are resolved to exactly one `AssemblySwConnector` per connected port pair. As there are no additional levels of "inner `SwComponentPrototypes`". `DelegationSwConnectors` are only used to display the outside communication of an ECU in the ECU flat view.

**[constr\_3019] In the flat ECU extract each required interface shall be satisfied by connected provided interfaces** [In case of the flat System with category `ECU_EXTRACT` all `VariableDataPrototypes` specified by the `SenderReceiverInterface` of the `RPortPrototype` need to be supplied by some of the `PPortPrototypes` being connected with `SwConnectors`.]()



For the `System` with `category` `SYSTEM_DESCRIPTION`, the Software Component Template Specification [5] allows a `CompositionSwComponentType`'s outer `PortPrototype` to be connected to more than one inner port, observing a set of compatibility rules between the outer and the inner port's `SenderReceiverInterfaces`. Such a “merge” and “split” functionality for mixing `VariableDataPrototypes` is used to limit the number of `SwConnectors` required to connect `PortPrototypes` on higher VFB levels and thus reduce complexity in the wiring of such higher-level `CompositionSwComponentTypes`. On the other hand this means that an `AssemblySwConnector` in a hierarchical VFB may expand to more than one Port-Port pair. Naturally, in the ECU flat view such “hidden” additional connections need to be made explicit by unrolling them into concrete `AssemblySwConnectors`.

Additionally `PassThroughSwConnector` may be used to map `PortInterface` elements between require and provide outer ports of `CompositionSwComponentTypes` in order to use RTE features for mapping or conversion instead of real software components. The following paragraph suggests a way how such an unrolling of `SwConnectors` may be accomplished.

Starting with the top-level `RootSwCompositionPrototype` indicating the outermost `CompositionSwComponentType`, the hierarchical software model of `SwComponentPrototypes` is recursively iterated; for each prototype of `CompositionSwComponentType`, all its `AssemblySwConnectors` are being iterated. For each such found `AssemblySwConnector` both connector ends are evaluated for `DelegationSwConnectors` further delegating the connection: In order to consider the use cases of signal “merge” and “split”, all possible communication partners need to be identified, recursively following `DelegationSwConnectors` in both directions. For each identified pair of `PPortPrototypes` and `RPortPrototypes` *actually exchanging* Information one `AssemblySwConnector` will be created in the ECU flat view.

In case that a string of `SwConnectors` started by `AssemblySwConnector` connects - directly or via `DelegationSwConnectors` - to a `PassThroughSwConnector` the `SwConnector` string is conjunct with the `SwConnector` string of the other end of the `PassThroughSwConnector`. Please note that the “merge” and “split” capability of `DelegationSwConnectors` and `PassThroughSwConnectors` requires an individual treatment of the single `PortInterface` elements for the evaluation of the `SwConnector` string.

The following rules shall be followed when `PortInterfaceMappings` are converted for the flat view. `PortInterfaceMappings` supports the connection of Ports typed by two different `PortInterfaces` with unequal named `PortInterface` elements. More details can be found in [5].

- When unrolling a string of `SwConnectors` into a single `SwConnectors` all compatibility rules and `PortInterfaceMappings` of the individual `SwConnector` need to be considered for determining which `VariableDataPrototypes` are being transferred between provider and requester. If `VariableDataPrototypes` are to be filtered out a `PortInterfaceMapping` shall be provided to the

flatten connector such that only the transferred `VariableDataPrototypes` are included in the mapping.

- When unrolling a string of `SwConnectors` into a single `SwConnector` all of the `PortInterfaceMappings` of the individual `SwConnectors` need to be considered for combining them into a single `PortInterfaceMapping` to be associated with a new `SwConnector`.

### 14.2.3 External Communication

In a `System` with `category` `SYSTEM_DESCRIPTION`, whenever two `SwComponentPrototypes` are specified to communicate across `EcuInstances`, the details of this communication need to be fully specified: `VariableDataPrototypes` of `SenderReceiverInterfaces` and `ClientServerOperations` of `ClientServerInterfaces` are mapped onto `SystemSignals` as carriers of information transported across the network. According to 5.2, each instance of a `AutosarDataPrototype` that is to be sent over AUTOSAR COM shall be mapped exactly once onto its individual `SystemSignal`, regardless of how many components receive the information or over how many `PhysicalChannels` the `SystemSignal` is transported.

As described above, deriving the `System` with `category` `ECU_EXTRACT` from `System` with `category` `SYSTEM_DESCRIPTION` or from `System` with `category` `SYSTEM_EXTRACT` means that all `SwComponentPrototypes` to be included in the ECU extract are recreated in an ECU flat view. Consequently, each `DataMapping` concerning a `SwComponentPrototype` to be mapped onto the `EcuInstance` requires that a corresponding `DataMapping` be created in the `System` with `category` `ECU_EXTRACT`.

The ECU flat view contains delegated `PortPrototypes` to display the outside communication of an `EcuInstance`. `VariableDataPrototypes` and `ClientServerOperations` of these delegated `PortPrototypes` are mapped to `SystemSignals`. The original instance references indicating the mapped `AutosarDataPrototype` need to be adjusted to the new “flat” location in the ECU flat view.

While for the `System` with `category` `SYSTEM_DESCRIPTION` it is sufficient to describe `DataMappings` only on the provider side, the `System` with `category` `ECU_EXTRACT` additionally requires such `DataMappings` on the requiring side’s ports. In this case, a new `DataMapping` maps to the existing `SystemSignal`, previously defined in the `System` with `category` `SYSTEM_DESCRIPTION` on the provider side. This is explained in more detail in figure 14.6, that is a continuation of the example from figure 13.3 in chapter 13.2.


To derive an `ECU_EXTRACT` from a `System` with `category` `SYSTEM_DESCRIPTION` or `SYSTEM_EXTRACT` unambiguous `ClientServerToSignalMappings` are required for inter-ECU n:1 client-server communication. In particular the communication path from the server to each client shall be uniquely mapped.

In this context, "communication path" encompasses the set of delegation/assembly connectors that connect the server (provide-port on SWC) through to the client (require-port on SWC).

**[constr\_3264] Server side ClientServerToSignalMappings in case of a n:1 inter-ECU client-server communication** [If within the System with category SYSTEM\_DESCRIPTION or SYSTEM\_EXTRACT the ClientServerToSignalMappings for inter-ECU n:1 client-server communication are placed on the provider (server) side, then each of these ClientServerToSignalMappings shall (in the hierarchy of SwComponentPrototypes) refer to a "unique communication path" w.r.t. the EcuInstances the client SwComponentPrototypes are mapped to.]()

Note: A "unique communication path" has the property that, starting from the ClientServerOperation of a PortPrototype, a sequence of DelegationSwConnectors and AssemblySwConnectors leads to the client side and terminates at either at most one PortPrototype that is owned by the AtomicSwComponentType of the client's SwComponentPrototype or, if the path terminates at more than one PortPrototype, then the following shall hold: The clients' SwComponentPrototypes typed by AtomicSwComponentTypes owning these PortPrototypes shall be mapped to the same EcuInstance and the client identifier is used to distinguish the different clients (see [TPS\_SYST\_01087]).


The following example scenarios will show at which PortPrototypes the ClientServerToSignalMappings are allowed to be specified in a System with category SYSTEM\_DESCRIPTION or SYSTEM\_EXTRACT to derive an ECU\_EXTRACT.

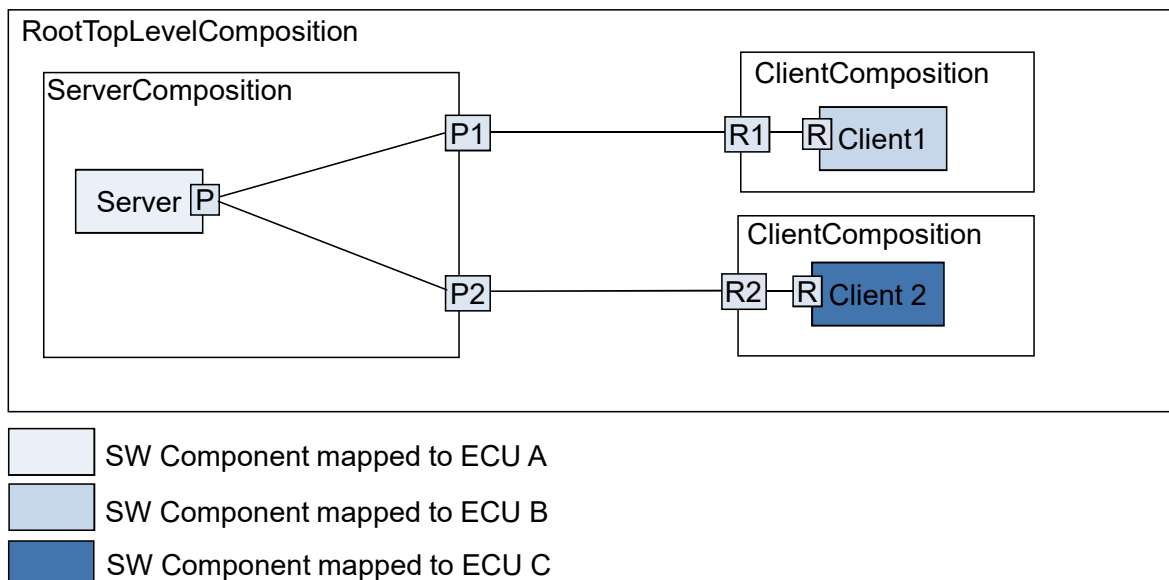

**Figure 14.2: Client Server Scenario 1**

For the scenario described in figure 14.2 the following statements apply:


- `ClientServerToSignalMappings` for the provide-port `Server.P` are ambiguous and thus `[constr_3243]` exists to forbid this situation.
- `ClientServerToSignalMappings` are permitted for `ClientComposition.R1/ClientComponision.R2` and `Client1.R/Client2.R` (client-side) or for `ServerComposition.P1/ServerComposition.P2` (provider-side) since there is no ambiguity.

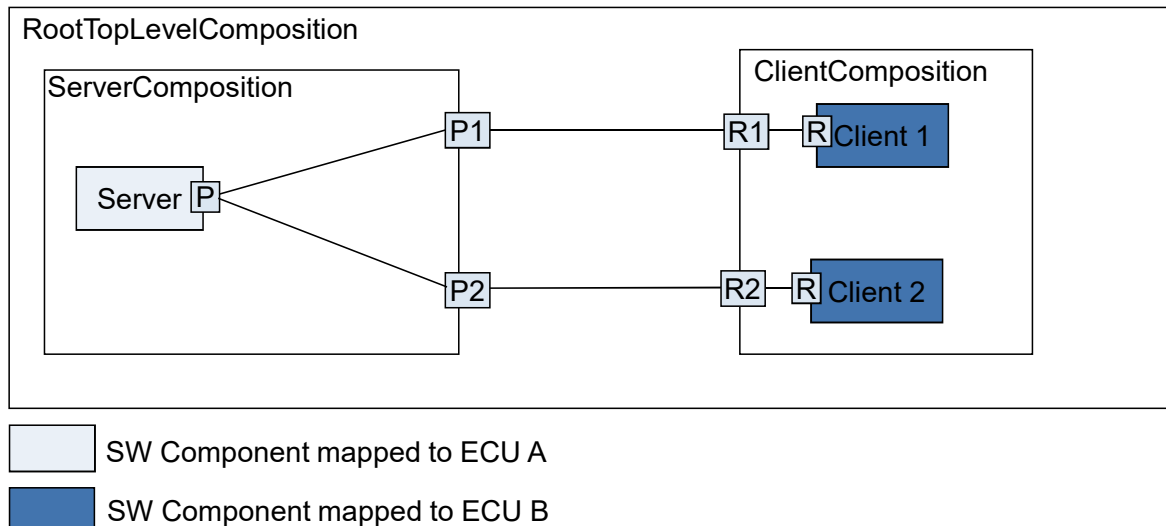

**Figure 14.3: Client Server Scenario 2**

For the scenario described in figure 14.3 the following statements apply:


- `ClientServerToSignalMappings` for the provide-port `Server.P` are not ambiguous (since although there is fork in the communication path, both sub-paths end up at the same ECU).
- `ClientServerToSignalMappings` are permitted for `ClientComposition.R1/ClientComponision.R2` and `Client1.R/Client2.R` (client-side) or for `ServerComposition.P1/ServerComposition.P2` (provider-side) since there is no ambiguity.

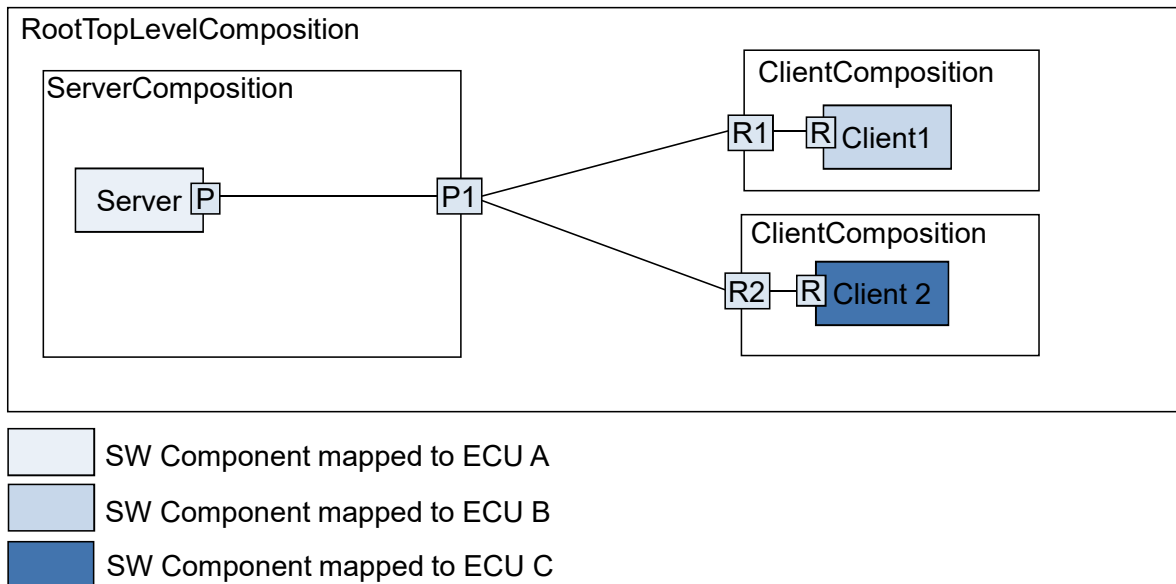

**Figure 14.4: Client Server Scenario 3**

For the scenario described in figure 14.4 the following statements apply:

- [ClientServerToSignalMappings](#) for the provide-ports Server.P and Server-Composition.P1 are ambiguous and thus [[constr\\_3243](#)] exists to forbid this situation.
- [ClientServerToSignalMappings](#) are permitted for ClientComposition.R1/ClientComposition.R2 and Client1.R/Client2.R (client-side) since there is no ambiguity.

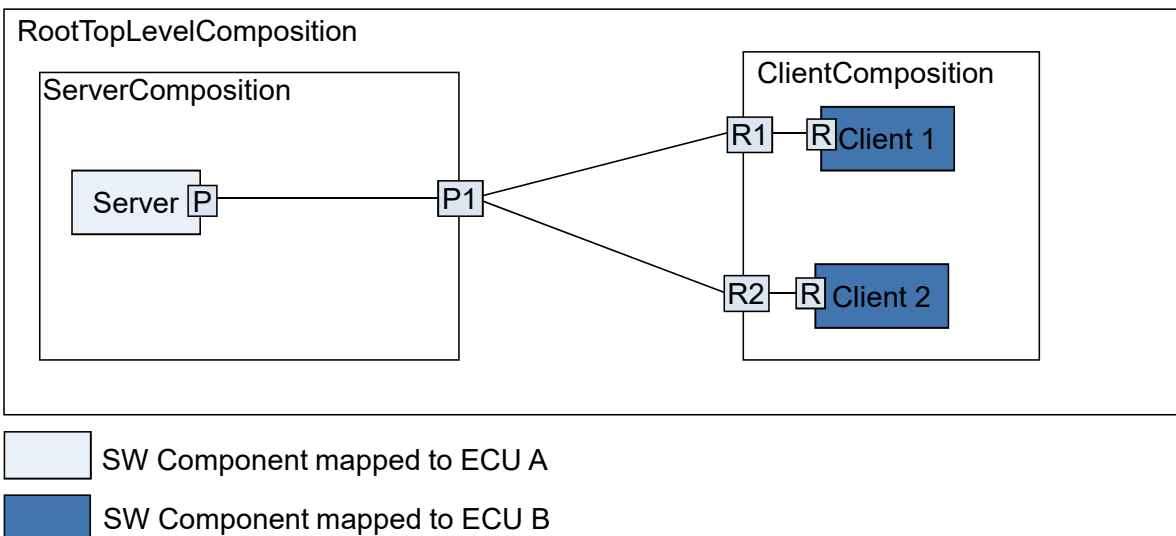

**Figure 14.5: Client Server Scenario 4**

For the scenario described in figure 14.5 the following statements apply:


- [ClientServerToSignalMappings](#) for the provide-ports Server.P and Server-Composition.P1 are not ambiguous (since although there is fork in the communication path, both sub-paths end up at the same ECU).
- [ClientServerToSignalMappings](#) are permitted for ClientComposition.R1/ClientComposition.R2 and Client1.R/Client2.R (client-side) or for ServerComposition.P1/ServerComposition.P2 (provider-side) since there is no ambiguity.

[TPS\_SYST\_01145] [PortInterfaceMappings](#) in the ECU Extract [In the System with category ECU\_EXTRACT the missing [PortInterfaceMappings](#) on the complementary side needs to be supplemented to [DelegationSwConnectors](#).]()

[constr\_5328] Ecu Extract shall only contain outerPort [DataMappings](#) [The System with category ECU\_EXTRACT shall only contain [DataMappings](#) for [VariableDataPrototypes](#), [ClientServerOperations](#) or [Triggers](#) that are referenced in the context of a [PortPrototype](#) of the [SwComponentType](#) that in turn is referenced by the [RootSwCompositionPrototype](#) at the time when the RTE is generated.]()

In other words the ECU\_EXTRACT shall not contain any [DataMappings](#) that are defined in the context of [SwComponentPrototypes](#) that are included in the [RootSwCompositionPrototype](#). Only the outerPort [DataMappings](#) defined in the context of [RootSwCompositionPrototype](#) are considered by the RTE.

Figure 14.6 shows how the System with category ECU\_EXTRACT for ECU A of the SW composition that is defined in figure 13.3 would look like: Only those [SwComponentPrototypes](#) are included that are mapped to ECU A. The hierarchy present in the System with category SYSTEM\_DESCRIPTION has been flattened into [CompositionSwComponentType](#) 'EcuAFlatView', including newly created [SwComponentPrototype](#) 'A1E', 'A2E', 'B1E' and 'C1E' for the component instances mapped to ECU A.

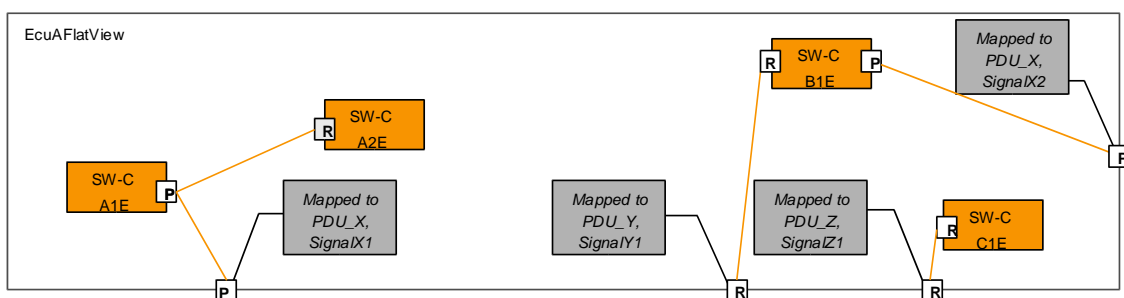

**Figure 14.6: Example ECU extract for ECU A of above introduced composition**

The [SwConnectors](#) to the outside ports (ECUFlatView composition ports) and [SwConnectors](#) that represent intra-ECU communication (in our example, only 'A1E')

to 'A2E') are included. The [VariableDataPrototypes](#) and [ClientServerOperations](#) in the outside ports are mapped to [SystemSignals](#). This [DataMapping](#) and the communication description is used to identify the source/destination of that data.

Furthermore, the relevant topology information and communication matrix have to be included, but they are out of scope of this example.

The problem that new mapping rules have to be added arises with the mapping to 'PDU\_Y', 'SignalY1': Since SW component 'A3', which was referenced in the original mapping, is no longer included, the [DataMapping](#) needs a new [VariableDataPrototype](#) in a [PortPrototype](#) to reference to. In the example, the data of the required port of 'B1E' is referenced, so that the ECU generator has the information that 'B1E' receives the data via 'PDU\_Y'.

#### 14.2.4 Port Groups

A [SwComponentType](#) can optionally define [PortGroups](#) which allow to group [PortPrototypes](#) according to logical criteria, e.g. according to shared communication resources (see [5]). A [PortGroup](#) of a [CompositionSwComponentType](#) can be linked to "inner" [PortGroups](#) of the aggregated [SwComponentPrototypes](#). Since the main purpose of this grouping is to configure the behavior of mode managers on an [EcuInstance](#), this information shall be preserved and broken down into the [System](#) with `category ECU_EXTRACT`.

The resulting [CompositionSwComponentType](#) in the ECU flat view will contain a set of [PortGroups](#) which refer to the linked inner port groups of the [SwComponentPrototypes](#) with [AtomicSwComponentType](#). To get to this result, the following steps shall be applied in the extraction process:

- Recursively ignore all [PortGroups](#) in [CompositionSwComponentTypes](#) in the hierarchical structure, which are not linked to any inner groups to be mapped on this [EcuInstance](#).
- In the remaining structure of linked [PortGroups](#) find out the top level [PortGroups](#) (i.e. which are not referred by any higher level [PortGroup](#) on this [EcuInstance](#)) and put an element representing each top level [PortGroup](#) into the [CompositionSwComponentType](#) of the ECU flat view. This can result in name conflicts, which should be resolved by a suitable algorithm.
- Link these top level [PortGroups](#) to the inner [PortGroups](#) of the atomic component instances of the flat view according to the links found in the hierarchical structure. Naturally, the top level [PortGroups](#) in the ECU flat view are not directly referring any [PortPrototypes](#) and due to the first step they should be linked to at least one inner [PortGroup](#).
- The [PortGroups](#) in [SwComponentPrototypes](#) with an [AtomicSwComponentType](#) on the [EcuInstance](#) should be unchanged.



### 14.2.5 Service Needs

Each software component might need services which are provided by the ECU Basic Software through AUTOSAR Services. `ServiceNeeds` are used to provide detailed information what the software component expects from the AUTOSAR Services when integrated on an actual ECU (see `SWComponentTemplate` [5] for more details). If an ECU Extract is created the following rules apply to the existing `ServiceNeeds`:

**[constr\_3068] `DoIpPowerModeStatusNeeds` in the category `ECU_EXTRACT`** [If and only if `DoIP` (i.e. any of the subclasses of `DoIpServiceNeeds` are present) is used on an Ecu then the `DoIpPowerModeStatusNeeds` shall exist exactly once in a `System` of category `ECU_EXTRACT`.]()

**[constr\_1265] `DoIpGidSynchronizationNeeds` can only exist once per `ECU_EXTRACT`** [Within the context of one `System` of category `ECU_EXTRACT`, there can only be at most one `DoIpGidSynchronizationNeeds`.]()

**[constr\_1266] `DoIpGidNeeds` can only exist once per `ECU_EXTRACT`** [Within the context of one `System` of category `ECU_EXTRACT`, there can only be at most one `DoIpGidNeeds`.]()

**[constr\_1267] `DoIpActivationLineNeeds` can only exist once per `ECU_EXTRACT`** [Within the context of one `System` of category `ECU_EXTRACT`, there can only be at most one `DoIpActivationLineNeeds`.]()

**[constr\_3083] Exactly one `AtomicSwComponentType` on an `EcuInstance` may use `GeneralCallbackEventDataChanged / GeneralCallbackEventStatusChange`** [The Dem only supports exactly one `AtomicSwComponentType` using `GeneralCallbackEventDataChanged / GeneralCallbackEventStatusChange` on one `EcuInstance`.]()

**[constr\_3084] Service port in the role `PowerTakeOff`** [Within the context of one `EcuInstance`, there can only be one service port that uses the role `PowerTakeOff` in the `RoleBasedPortAssignment.role`.]()

**[constr\_3085] Service port in the role `CallbackDCMRequestServices`** [Within the context of one `EcuInstance`, there can only be one service port that uses the role `CallbackDCMRequestServices` in the `RoleBasedPortAssignment.role`.]()

## 14.3 Extending the ECU Software Composition

As explained in [5], `Service Configuration` takes place in ECU Configuration phase. In the ECU extract of the `System`, the Software Components and their ECU-internal connectors are represented as a flat set aggregated by `RootSwCompositionPrototype` as indicated in Figure 14.7.



ECU Configuration extends this aggregation by adding `SwComponentPrototypes` (each typed by a specific `ServiceSwComponentType`) and the required `AssemblySwConnectors` to the `RootSwCompositionPrototype`. This is possible without changing the initial artifacts of the ECU extract, because these aggregations are stereotyped as `«atpSplitable»` in the meta-model.

After this step, the `RootSwCompositionPrototype` (denoted by `EcucValueCollection.ecuExtract.rootSoftwareComposition`) represents the whole Software Composition on the given ECU. This collection includes both the software components mapped to the ECU **and** the necessary service components represented as one `SwComponentPrototype` for each AUTOSAR Service utilized on the given ECU.

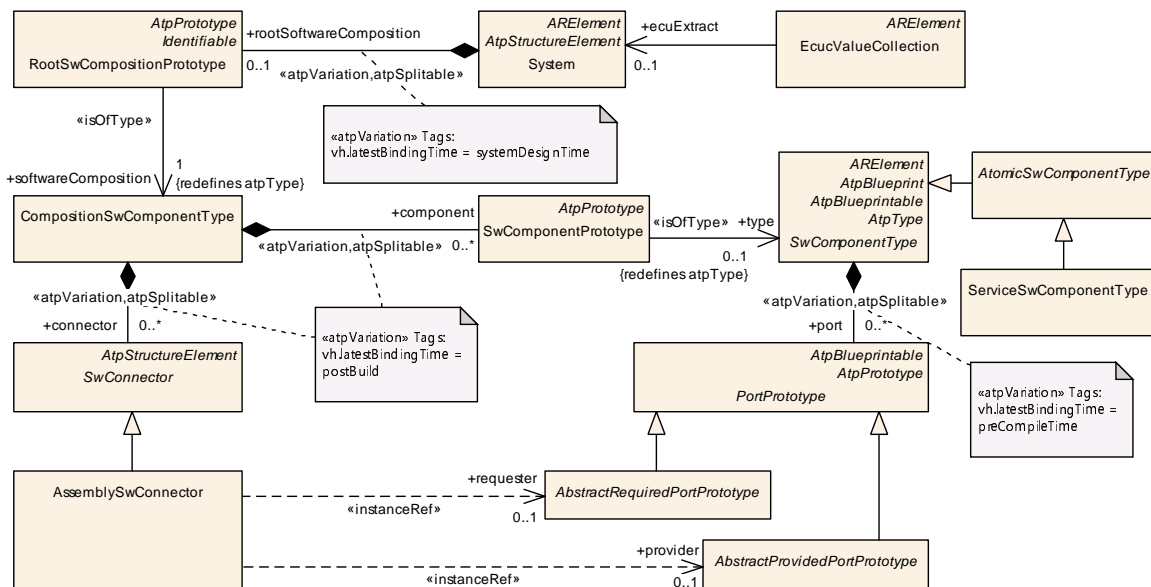


Figure 14.7: Usage of `RootSwCompositionPrototype` on an ECU

## 14.4 Communication

In explaining how `SystemSignals` are handled in the `System` with `category ECU_EXTRACT`, Section 14.2.3 touched on the topic of inter-ECU Communication. However, in order to enable the ECU Configuration of the COM-Stack, the relevant information of all layers of the AUTOSAR COM-Stack needs to be present in the `System` with `category ECU_EXTRACT`, including the central Communication classes `ISignal`, `Pdu` and `Frame`.

The above mentioned Communication elements have dependencies on each other, for ordinary COM-communication this means:

- `Frames` are assembled from one or more `Pdus`.
- `ISignalIPdus` carry their information in form of `ISignals`.

- `ISignals` as interaction points between RTE and COM refer to `SystemSignals`.

Note that the above list is not complete; TP and NM require additional elements. However, for the sake of clarity the following paragraphs describes the standard use case of a direct Signal-based communication between two `EcuInstances`. Once the handling of this case is understood, the additional model elements as `NPdu`, `NmPdu`, `SystemSignalGroup` etc. can be handled following the same basic principles.

For the `System` with `category` `ECU_EXTRACT` only the ECU-relevant subset of information present in the system-wide communication is to be considered. In order to establish this set of information, the dependencies in the list above are being followed.

#### 14.4.1 Frame

In a complete `System` with `category` `SYSTEM_DESCRIPTION`, every outside communication of an `EcuInstance` will either be associated with an outgoing or and incoming `Frame`. The exact number and types of `Frames` to be received or sent by an `EcuInstance` is determined by the Communication Matrix (Chapter 6).

According to the selection rules for the Topology (14.1), the `System` with `category` `ECU_EXTRACT` contains all `FrameTriggerings` associated with `Frames` that are of any interest to the `EcuInstance`: If a particular `FrameTriggering` refers to a `FramePort` of type 'out' the associated `Frame` is to be sent by the `EcuInstance`, if it refers to an 'in' port the `Frame` is to be received. Therefore, the following selection rule applies:

- The `System` with `category` `ECU_EXTRACT` shall contain all `Frame` elements which are referenced by any included `FrameTriggering`.

#### 14.4.2 PDU

`Frames` are assembled from one or more `Pdus`. In order to include all required `Pdu` elements, the following selection criteria apply:

- The `System` with `category` `ECU_EXTRACT` shall contain all `Pdu` elements which are referenced by any included `Frame`'s `PduToFrameMapping`.
- The `System` with `category` `ECU_EXTRACT` shall contain all `Pdu` elements which are referenced by any included `PduTriggering`.
- For multiplexed `Pdus`, additionally all `ISignalIPdus` referenced by the `MultiplexedIPdu`'s static and dynamic parts need to be included.

The second criterion is e.g. required in a pure post-build configuration scenario, where the frame-layout may not be completed at the time of `System` with `category` `ECU_EXTRACT` creation.

### 14.4.3 ISignals and ISignalGroups

`ISignalIPdu`s carry their information in form of `ISignals` or `ISignalGroups`. In order to include all required `ISignal` and `ISignalGroup` elements, the following selection criteria apply:

- The `System` with `category` `ECU_EXTRACT` shall contain `ISignal` elements which are referenced by included `ISignalIPdu`'s `ISignalToIPduMapping`. One exception are Pdu Gateways. Signal definitions that are not directly relevant for `Gateways` in case that the `Pdu` is routed as a whole (Pdu Routing) shall be omitted. See Section 14.4.5 for more details.
- The `System` with `category` `ECU_EXTRACT` shall contain all `ISignal` elements which are referenced by any included `ISignalTriggering`.
- The `System` with `category` `ECU_EXTRACT` shall contain `ISignalGroup` elements which are referenced by included `ISignalIPdu`'s `ISignalToIPduMapping`. One exception are Pdu Gateways. Signal Group definitions that are not directly relevant for `Gateways` in case that the `Pdu` is routed as a whole (Pdu Routing) shall be omitted. See Section 14.4.5 for more details.
- The `System` with `category` `ECU_EXTRACT` shall contain all `ISignalGroup` elements which are referenced by any included `ISignalTriggering`.

Like in the case of the `Pdu` inclusion rules, the second and fourth criterion is required in scenarios with incomplete `Pdu` modeling due to post-build configurability of the communication matrix.

### 14.4.4 SystemSignal and SystemSignalGroup

Whereas the rules specified in Section 14.2.3 for the inclusion of `SystemSignal` comprise all `SystemSignals` that are being used by the Software Components in the ECU, the inclusion rules above stated for `ISignalIPdu`s and `ISignals` may require the inclusion of additional `SystemSignals`. Also, strictly speaking both `SystemSignals` and `SystemSignalGroup` need to be considered. The complete inclusion rules for `SystemSignals` and `SystemSignalGroups` are:

- The `System` with `category` `ECU_EXTRACT` shall contain all `SystemSignals` and `SystemSignalGroup` elements which are referenced by any included `DataMapping`.
- The `System` with `category` `ECU_EXTRACT` shall contain all `SystemSignal` elements which are referenced by any included `ISignal`.
- The `System` with `category` `ECU_EXTRACT` shall contain all `SystemSignalGroup` elements which are referenced by any included `ISignalGroup`.

In addition on the receiving `EcuInstance` the following cases exist:

- only one `SystemSignal` out of the transmitted `SystemSignalGroup` is received: no `SystemSignalGroup` is required in the Ecu Extract of the receiving `EcuInstance`.
- more than one but not all `SystemSignals` out of the transmitted `SystemSignalGroup` are received: new `SystemSignalGroup` shall be created in the `System` with `category` `ECU_EXTRACT` of the receiving `EcuInstance` containing the received `SystemSignals`.
- all `SystemSignals` out of the transmitted `SystemSignalGroup` are received: the original `SystemSignalGroup` shall be taken over to the `System` with `category` `ECU_EXTRACT` of the receiving `EcuInstance`.

#### 14.4.5 Gateways

Gateways that refer the `EcuInstance` shall be included in the `System` with `category` `ECU_EXTRACT`. The complete inclusion rules for `Gateways` are:

- The `System` with `category` `ECU_EXTRACT` shall contain all `FrameMapping` elements that are aggregated by the `Gateway` element.
- The `System` with `category` `ECU_EXTRACT` shall contain all `IPduMapping` elements that are aggregated by the `Gateway` element.
- The `System` with `category` `ECU_EXTRACT` shall contain all `ISignalMapping` elements that are aggregated by the `Gateway` element.
- `ISignal` definitions that are not directly relevant for the `Gateway` in case that the `Pdu` containing these `ISignals` is routed as a whole (Pdu Routing) shall be omitted .
- `ISignalGroup` definitions that are not directly relevant for the `Gateways` in case that the `Pdu` containing these `ISignalGroups` is routed as a whole (Pdu Routing) shall be omitted .

#### 14.4.6 TP configuration

The TP-configuration element `TpConfig` and all its associated elements shall be included into the `System` with `category` `ECU_EXTRACT` if the `EcuInstance` has an `TpAddress` configured in this `TpConfig`.

#### 14.4.7 NM configuration

The Nm configuration part of the `System` with `category` `ECU_EXTRACT` shall include the `NmEcu` that references the included `EcuInstance`. In addition a `NmCoordinator` composed by this `NmEcu` shall be included. Furthermore any `NmNode` referenced by

the `NmCoordinator` shall be included. For each included `NmNode` the composing `NmCluster` shall be included. For each included `NmCluster` the composing `NmConfig` shall be included.

## 14.5 Naming Issues

**[TPS\_SYST\_05015] Naming conventions** [The definition of naming conventions may facilitate the avoidance of name clashes to the further degree. However, these naming conventions can only be defined on the model level and the System Template does not define any specific naming conventions.] (*RS\_SYST\_00053*)

Please note that a detailed information about mechanisms to resolve naming conflicts is given in [4]: [TR\_METH\_03005], [TR\_METH\_03006], [TR\_METH\_03007], [TR\_METH\_03008], [TR\_METH\_03009], [TR\_METH\_03010].

### 14.5.1 Package Structure

As detailed in the sections above, extracting information from the `System` with `category` `SYSTEM_DESCRIPTION` into an `System` with `category` `ECU_EXTRACT` is a non-trivial transformation: While some of the model elements are simply copied verbatim into the `System` with `category` `ECU_EXTRACT`, it is additionally necessary to create new elements reducing parts of system-wide structures, most noticeably in flattening of the hierarchical VFB view to the ECU Flat View.

All such elements being created or modified in the process of generating the `System` with `category` `ECU_EXTRACT` shall reside in the same `ARPackage`. In order to avoid namespace conflicts with existing elements, the package shall exclusively be used for this purpose.

By creating derivation elements from elements originally contained in the `System` with `category` `SYSTEM_DESCRIPTION` package structure, duplications of names may occur. This kind of name clashes shall be resolved by a suitable naming algorithm (see section 14.5.3).

All Elements that are taken over from the `System` with `category` `SYSTEM_DESCRIPTION` unchanged (e.g. `AtomicSwComponentType`, `PortInterface`, `ApplicationDataType`, `EcuInstance`, `CommunicationCluster`) shall remain in their original packages.

`ARElements` not used in the `System` with `category` `ECU_EXTRACT` shall not be copied to the ECU Extract XML file.

In more detail, `ARPackages` taken over from `System` with `category` `SYSTEM_DESCRIPTION` will not be altered by the ECU extraction process, except that some `ARElements` will not be included in the actual XML file of the extract: `ARElements` which exist in the `System` with `category` `SYSTEM_DESCRIPTION` but have

been stripped for the `System` with `category` `ECU_EXTRACT` are not actually deleted from their `ARPackage`, but merely are skipped in the XML file forming the extract. Note that having such a partial view on an `ARPackage` doesn't break the original `ARPackage` definition because the composition of `PackageableElement`, responsible for adding `ARElements` to `ARPackage`, is stereotyped `<<splittable>>`; this means several XML files can contribute to an `ARPackage`, or in case of the ECU Extract an AUTOSAR description file may contain only a subset of the complete `ARPackage`.

### 14.5.2 Naming of Measurement and Calibration Data

The software component descriptions provide several means to declare data prototypes which have to be available for measurement and calibration (MCD) tools on the `EcuInstance`. Together with the `System` with `category` `ECU_EXTRACT` it is required to provide a list of references to the description of these data for further processing in the scope of the `EcuInstance`. In addition, the MCD tools need a unique name for each instance of such a data prototype. Since the data descriptions are part of the nested composition structure and are contained in reusable types (components or port interfaces), the system description itself does in general not provide unique names for those.

This means, providing such a list with references and unique names for MCD data is also a task of the ECU extractor tool. This list is part of the artifact ECU Flat Map, which is further explained below.

### 14.5.3 Naming of Derived Elements

When performing the extract process, name clashes may occur, necessitating a naming scheme for elements derived in ECU generation: By flattening the Software Composition hierarchy all component instances present on the considered `EcuInstance` are put in one ECU-wide software composition. Name clashes may occur for the following reasons:

1. `SwComponentPrototypes` taken from different Software Compositions are allowed to have identical short names in the hierarchical structure. As all `SwComponentPrototypes` will be located in the same ECU Flat View, the original name spaces separation no longer exists.
2. Multiple instances of the same `CompositionSwComponentType` are mapped to an `EcuInstance`: In this case, duplicates of all contained `SwComponentPrototypes` will be placed next to each other in the ECU flat composition.
3. The two mechanisms just mentioned may also lead to name clashes in `AutosarDataPrototypes` if their names shall be used as MCD data names. In addition, reuse of a `PortInterface` can also lead to name clashes if it provides data elements to be used by MCD.



4. The setup of `PortGroups` in the ECU flat view can result in name clashes, because two port groups originating from different component types (i.e. different name spaces) may be aggregated within the flat view.

Therefore the `System` with `category` `ECU_EXTRACT` generator shall take care that all elements derived or created during the extraction process have unique short names. These unique names shall be created in an initial step of the extraction process which leads to the creation of an initial ECU Flat Map. Some ways to satisfy this requirement may be:

- Use globally unique identifiers (GUID) for generating short names.
- Add a number to the original name; if done consistently the flat map approach makes this reproducible.
- Expand the name recursively by the names of the containing elements (e.g. compositions) until it is unique.
- Allow human interaction (this may be combined with an initially proposed name expansion).

The creation of a new short name is compulsory only if otherwise a clash would occur.

**[constr\_2025] Uniqueness of `symbol` attributes** [With the exception of `RunnableEntities` that are subject to [constr\_1234] (`RunnableEntities` owned by `NvBlockSwComponentTypes`), in the context of a single `EcuInstance` the values of the `RunnableEntity.symbol` in combination with the attribute `symbol` of the meta-class `SymbolProps` owned by `AtomicSwComponentType` of all deployed `RunnableEntities` shall be unique such that no two (or more) combinations of `RunnableEntity.symbol` and the `symbol` of the meta-class `SymbolProps` owned by `AtomicSwComponentType` in the role `symbolProps` share the same value.]()

#### 14.5.4 Re-use of short names assigned in previous iterations

As described in the previous section, potential name clashes during ECU extraction shall be avoided by assigning unique names to the elements specifically created for the `System` with `category` `ECU_EXTRACT` and for the list of MCD data per `EcuInstance`. Considering the use case of iterative development (also see Section 14.6), the same names shall be assigned to existing elements in consecutive iterations. Elements which have been modified or newly introduced between two ECU extract iterations shall not use an existing short name. Additionally, the ECU extractor tool shall not re-use any short name used in any iteration from previous development phases if the meaning of the element is not exactly the same (i.e. the element's back reference into the System Configuration Description is not the same.)

## 14.6 ECU Extract in subsequent Cycles of Iterative Development

### 14.6.1 Traceability of model elements created in ECU Extract

For development scenarios in real life projects iterative development shall be supported.

The following use case shall be considered:

Changes in the `System` with `category` `SYSTEM_DESCRIPTION` require the recreation of an `System` with `category` `ECU_EXTRACT`. In the successive re-run of ECU configuration, ECU configuration parameters which were configured based on the previous `System` with `category` `ECU_EXTRACT` need to be maintained for those parts in the `System` with `category` `ECU_EXTRACT` that didn't change between iterations.

Consequently, there are two requirements on the extraction process:

- Elements that are present in both versions of the `System` with `category` `SYSTEM_DESCRIPTION` shall not change their short names between the two ECU Extracts either.
- If changes between the two versions of the `System` with `category` `SYSTEM_DESCRIPTION` lead to the creation of new model elements in the `System` with `category` `ECU_EXTRACT`, then these newly created elements shall have new names that have not been used in previous iterations of the `System` with `category` `ECU_EXTRACT`. (See also Section 14.5.4).

In order to fulfill these requirements, a back-tracing of the relevant model elements in the `System` with `category` `ECU_EXTRACT` to their counterparts in the `System` with `category` `SYSTEM_DESCRIPTION` shall be established. Based on these back references, short names shall consistently be re-used in iterations. Relevant elements are all those which potentially have been modified in the extraction process.

All back-tracing references are collected in one central table per `System` with `category` `ECU_EXTRACT` based on the meta-class `FlatMap`. This table collects "instance" entries for each Ecu Extract element that is being created in the `System` with `category` `ECU_EXTRACT` transformation and for each MCD data object that has to be available in the `EcuInstance`. These entries are called `FlatInstanceDescriptor`.

Each mapping entry owns two references per mapped element, one reference pointing to the target element in the `System` with `category` `ECU_EXTRACT`, the other one pointing to the origin in the `System` with `category` `SYSTEM_DESCRIPTION`. Both of these references are deep "instance" references, requiring a tuple of context/target description.



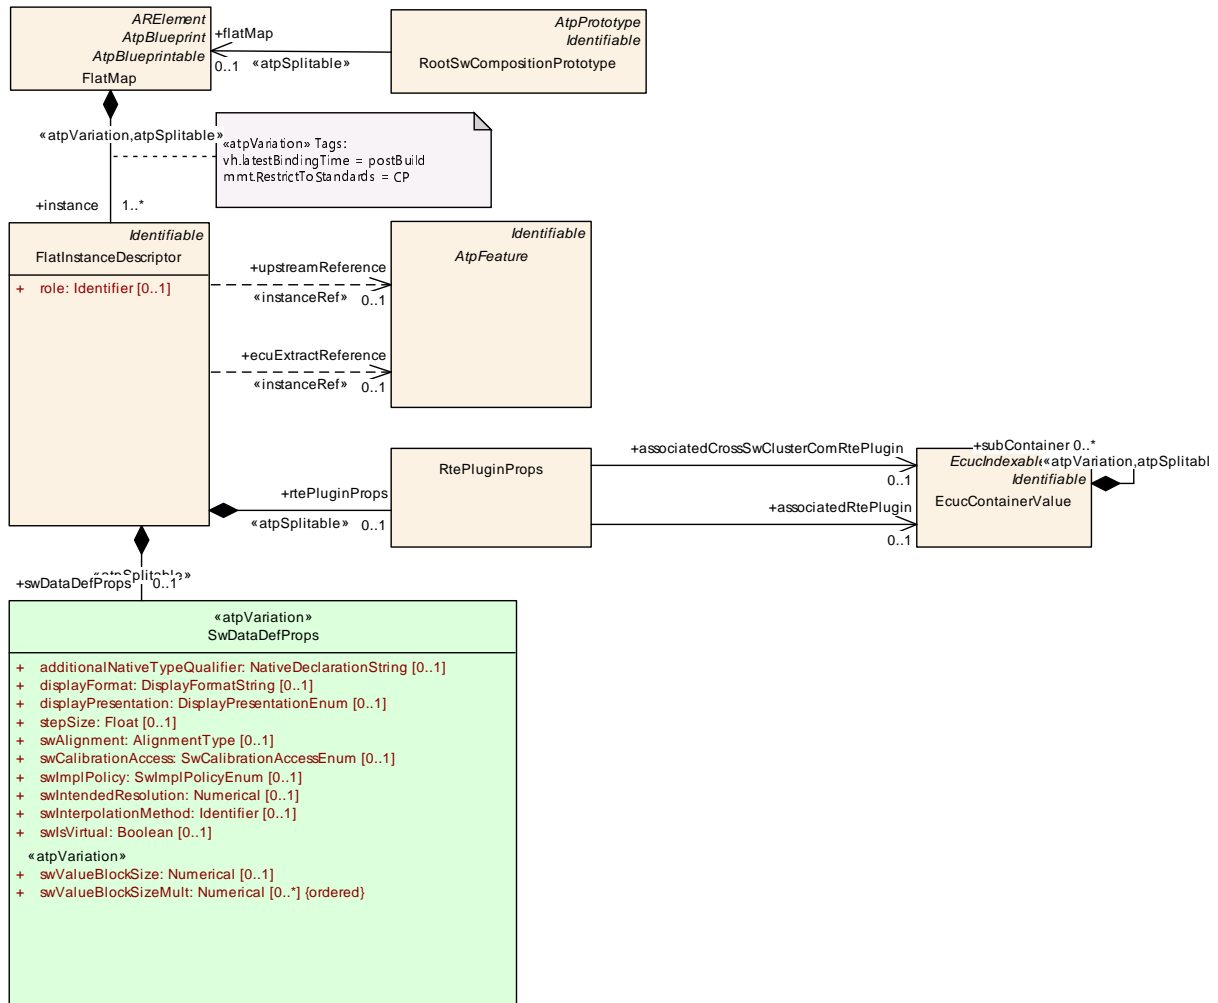


Figure 14.8: Flat Map (CommonStructure: FlatMap)

<b>Class</b>	FlatMap			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::FlatMap			
<b>Note</b>	<p>Contains a flat list of references to software objects. This list is used to identify instances and to resolve name conflicts. The scope is given by the RootSwCompositionPrototype for which it is used, i.e. it can be applied to a system, system extract or ECU-extract.</p> <p>An instance of FlatMap may also be used in a preliminary context, e.g. in the scope of a software component before integration into a system. In this case it is not referred by a RootSwComposition Prototype.</p> <p><b>Tags:</b>atp.recommendedPackage=FlatMaps</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">Multilanguage</a> , <a href="#">Referrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	FlatMap			
instance	<a href="#">FlatInstanceDescriptor</a>	1..*	aggr	<p>A descriptor instance aggregated in the flat map.</p> <p>The variation point accounts for the fact, that the system in scope can be subject to variability, and thus the existence of some instances is variable.</p> <p>The aggregation has been made splittable because the content might be contributed by different stakeholders at different times in the workflow. Plus, the overall size might be so big that eventually it becomes more manageable if it is distributed over several files.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation  <b>Tags:</b>  atp.Splitkey=instance.shortName, instance.variationPoint.shortLabel  vh.latestBindingTime=postBuild</p>

**Table 14.1: FlatMap**

Class	FlatInstanceDescriptor			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::FlatMap			
<b>Note</b>	<p>Represents exactly one node (e.g. a component instance or data element) of the instance tree of a software system. The purpose of this element is to map the various nested representations of this instance to a flat representation and assign a unique name (shortName) to it.</p> <p>Use cases:</p> <ul style="list-style-type: none"> <li>Specify unique names of measurable data to be used by MCD tools</li> <li>Specify unique names of calibration data to be used by MCD tool</li> <li>Specify a unique name for an instance of a component prototype in the ECU extract of the system description</li> </ul> <p>Note that in addition it is possible to assign alias names via AliasNameAssignment.</p>			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">FlatMap.instance</a>			
Attribute	Type	Mult.	Kind	Note
ecuExtractReference	AtpFeature	0..1	iref	<p>Refers to the instance in the ECU extract. This is valid only, if the FlatMap is used in the context of an ECU extract.</p> <p>The reference shall be such that it uniquely defines the object instance. For example, if a data prototype is declared as a role within an SwcInternalBehavior, it is not enough to state the SwcInternalBehavior as context and the aggregated data prototype as target. In addition, the reference shall also include the complete path identifying instance of the component prototype and the Atomic SoftwareComponentType, which is referred by the particular SwcInternalBehavior.</p> <p><b>Tags:</b>xml.sequenceOffset=40  <b>InstanceRef implemented by:</b><a href="#">AnyInstanceRef</a></p>
role	Identifier	0..1	attr	<p>The role denotes the particular role of the downstream memory location described by this FlatInstanceDescriptor.</p> <p>It applies to use case where one upstream object results in multiple downstream objects, e.g. ModeDeclaration GroupPrototypes which are measurable. In this case the RTE will provide locations for current mode, previous mode and next mode.</p>






Class	FlatInstanceDescriptor			
rtePluginProps	<a href="#">RtePluginProps</a>	0..1	aggr	<p>The properties of a communication graph with respect to the utilization of RTE Implementation Plug-in.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b>atp.Splitkey=rtePluginProps</p>
swDataDef Props	<a href="#">SwDataDefProps</a>	0..1	aggr	<p>The properties of this FlatInstanceDescriptor.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b>atp.Splitkey=swDataDefProps</p>
upstream Reference	AtpFeature	0..1	iref	<p>Refers to the instance in the context of an "upstream" descriptions, wich could be the system or system extract description, the basic software module description or (if a flat map is used in preliminary context) a description of an atomic component or composition. This reference is optional in case the flat map is used in ECU context.</p> <p>The reference shall be such that it uniquely defines the object instance in the given context. For example, if a data prototype is declared as a role within an SwcInternal Behavior, it is not enough to state the SwcInternal Behavior as context and the aggregated data prototype as target. In addition, the reference shall also include the complete path identifying the instance of the component prototype that contains the particular instance of Swc InternalBehavior.</p> <p><b>Tags:</b>xml.sequenceOffset=20 <b>InstanceRef implemented by:</b><a href="#">AnyInstanceRef</a></p>

**Table 14.2: FlatInstanceDescriptor**

[TPS\_SYST\_01000] **FlatInstanceDescriptor** roles [If a ModeDeclarationGroupPrototype is measurable the FlatMap shall contain three entries where the particular roles are set to

- CURRENT\_MODE specifies the FlatInstanceDescriptor applicable for current mode value of the ModeDeclarationGroupPrototype
- PREVIOUS\_MODE specifies the FlatInstanceDescriptor applicable for previous mode value of the ModeDeclarationGroupPrototype
- NEXT\_MODE specifies the FlatInstanceDescriptor applicable for next mode value of the ModeDeclarationGroupPrototype

Please note that these entries may exist in a FlatMap even if the ModeDeclarationGroupPrototype is not measurable.](RS\_SYST\_00003, RS\_SYST\_00027)

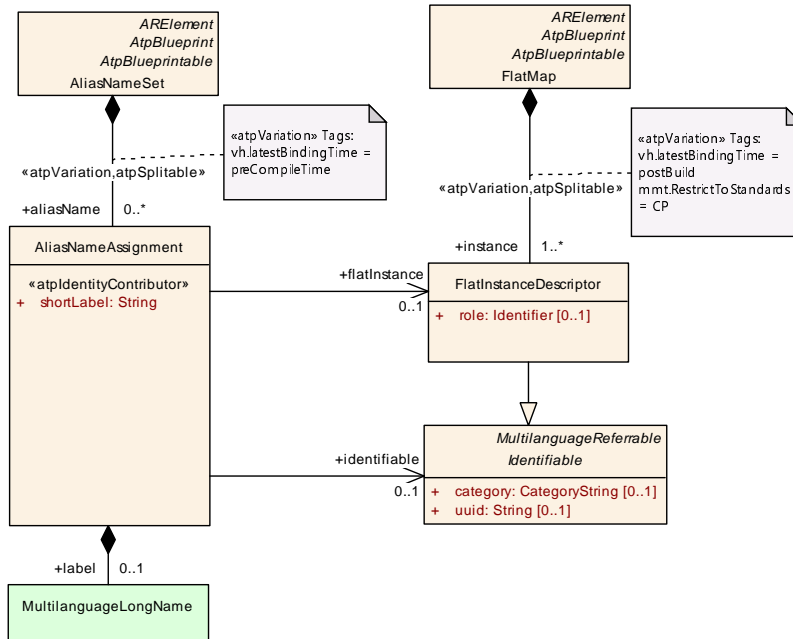

**Figure 14.9: Alias Name Assignment (CommonStructure: AliasNameAssignment)**

<b>Class</b>	<b>AliasNameSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::FlatMap			
<b>Note</b>	This meta-class represents a set of AliasNames. The AliasNameSet can for example be an input to the A2L-Generator. <b>Tags:</b> atp.recommendedPackage=AliasNameSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
aliasName	<a href="#">AliasNameAssignment</a>	*	aggr	AliasNames contained in the AliasNameSet. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=aliasName.shortLabel, aliasName.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table 14.3: AliasNameSet**

<b>Class</b>	<b>AliasNameAssignment</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::FlatMap			
<b>Note</b>	This meta-class represents the ability to associate an alternative name to a flat representations or an Identifiable.  The usage of this name is defined outside of AUTOSAR. For example this name can be used by MCD tools or as a name for component instances in the ECU extract.  Note that flatInstance and identifiable are mutually exclusive.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">AliasNameSet.aliasName</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	AliasNameAssignment			
flatInstance	<a href="#">FlatInstanceDescriptor</a>	0..1	ref	Assignment of a unique name to a flat representation. <b>Tags:</b> xml.sequenceOffset=60
identifiable	<a href="#">Identifiable</a>	0..1	ref	Assignment of a unique name to an Identifiable. <b>Tags:</b> xml.sequenceOffset=50
label	MultilanguageLong Name	0..1	aggr	This represents an "Alias LongName". <b>Tags:</b> xml.sequenceOffset=20
shortLabel	<a href="#">String</a>	1	attr	This attribute represents the alias name. It is modeled as string because the alias name is used outside of AUTOSAR and therefore no naming conventions can be applied within AUTOSAR. <b>Stereotypes:</b> atpIdentityContributor <b>Tags:</b> xml.sequenceOffset=10

**Table 14.4: AliasNameAssignment**

During the ECU extraction process, the ECU [FlatMap](#) will be processed in the following steps:

1. Create the entries [shortName](#) and [upstreamReference](#) of the [FlatMap](#) or, if a previous version exists, try to reuse them. Resolve name conflicts.
2. Generate the ECU Software Composition.
3. Create the entries [ecuExtractReference](#) of the ECU [FlatMap](#).

More details are defined by the AUTOSAR methodology, see [4]. The methodology also allows to have a [FlatMap](#) for the whole system. This System [FlatMap](#) can be created and maintained independently from the ECU extraction process, but can be used as an input for the creation of the ECU [FlatMap](#).

**[constr\_3378] Maximal one [AliasNameAssignment](#) allowed per [FlatInstanceDescriptor](#)** [In a given instance of [AliasNameSet](#) in the bound system there shall be at most one [aliasName](#) per [FlatInstanceDescriptor](#).]()

## 14.6.2 Mapping of AUTOSAR attributes to ASAM ASAP2

With the MC Support information AUTOSAR builds a bridge to tools processing ASAM ASAP2 files. In order to support the interoperability of converter tools the following mapping of AUTOSAR attributes to ASAM ASAP2 [21] (also known as "A2I" respectively "ASAM MCD 2MC") is recommended:

- If the [FlatInstanceDescriptor](#) references DataPrototypes:  
[FlatInstanceDescriptor.shortName](#) ->  
 MEASUREMENT Name  
 CHARACTERISTIC Name

`FlatInstanceDescriptor.(longName + desc |upstreamReference.desc) ->`  
 MEASUREMENT LongIdentifier  
 CHARACTERISTIC LongIdentifier

`AliasNameAssignment.shortLabel ->`  
 MEASUREMENT [-> DISPLAY\_IDENTIFIER]  
 CHARACTERISTIC [-> DISPLAY\_IDENTIFIER]

`AliasNameAssignment.label(if provided) +`  
`FlatInstanceDescriptor.(desc |upstreamReference.desc) ->`  
 MEASUREMENT LongIdentifier  
 CHARACTERISTIC LongIdentifier

- If `AliasNameAssignment` references a `SwSystemconstant`:

`AliasNameAssignment.shortLabel ->`  
 SYSTEM\_CONSTANT -> Name for SwSystemconstants

- If `AliasNameAssignment` references a `Unit`:

`AliasNameAssignment.shortLabel ->`  
 UNIT -> Name for Units

### 14.6.3 Assigning communication graphs to RTE Implementation Plug-Ins

When `RTE Implementation Plug-Ins` are used to modularize the RTE implementation, it's required to decide which communication graphs are implemented by the RTE or by an specific `RTE Implementation Plug-In`. Thereby an `RTE Implementation Plug-In` is a part of the overall RTE implementation which is not provided by the RTE Generator but from an additional source (e.g. a Plug-In Generator or a manually implemented source code).

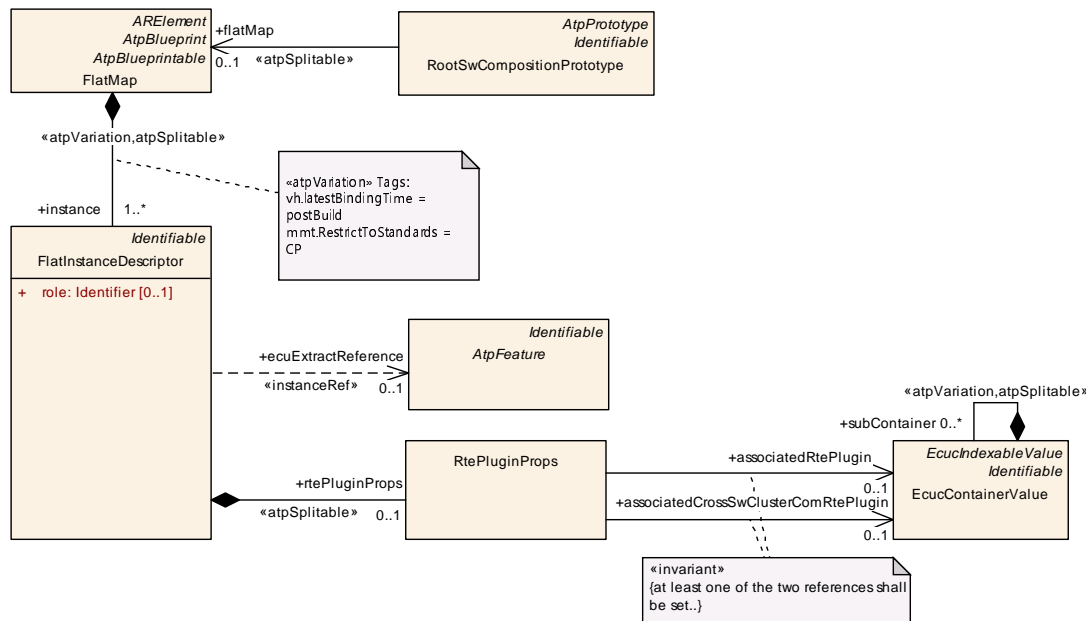


Figure 14.10: ECU Flat Map and `rtePluginProps`

Class	RtePluginProps			
Package	M2::AUTOSARTemplates::CommonStructure::FlatMap			
Note	The properties of a communication graph with respect to the utilization of RTE Implementation Plug-in.			
Base	ARObject			
Aggregated by	FlatInstanceDescriptor.rtePluginProps			
Attribute	Type	Mult.	Kind	Note
associatedCrossSwClusterComRtePlugin	EcucContainerValue	0..1	ref	This associates a communication graph to a specific RTE Implementation Plug-in handling cross Software Cluster communication.
associatedRtePlugin	EcucContainerValue	0..1	ref	This associates a communication graph to a specific RTE Implementation Plug-in handling local Software Cluster communication or communication in a non-cluster ECU.

Table 14.5: RtePluginProps

This assignment is described with the `FlatInstanceDescriptor.rtePluginProps`, where the `RtePluginProps.associatedRtePlugin` or `RtePluginProps.associatedCrossSwClusterComRtePlugin` references the `EcucContainerValue` representing the identity of an RTE Implementation Plug-In.

Assigning an communication graphs has following underlying semantic:

**[TPS\_SYST\_02197] Assigning communication graphs to RTE Implementation Plug-Ins** [The `FlatInstanceDescriptor.ecuExtractReference` points to an instance of a `VariableDataPrototype` and the `FlatInstanceDescriptor.rtePluginProps.associatedRtePlugin` or `RtePluginProps.associatedCrossSwClusterComRtePlugin` references the `EcucContainerValue` which defines the identity of the RTE Implementation Plug-In. This assigns the full communication graph to the specific RTE Implementation Plug-Ins represented by according `EcucContainerValue`.] (*RS\_SYST\_00057*)

For instance the `FlatInstanceDescriptor.ecuExtractReference` points to instance of a `VariableDataPrototype` defined by the `AnyInstanceRef` using

- `contextElement: RootSwCompositionPrototype`
- `contextElement: SwComponentPrototype`
- `contextElement: PPortPrototype`
- `target: VariableDataPrototype`

According the AUTOSAR Meta-Model various further model elements are exist to describe the complete communication graph, for instance with the means of `AssemblySwConnectors`, `SwComponentType.ports`, `RunnableEntities` and `VariableAccesses`. Nevertheless all such related elements of this communication graph are addressed by this single `FlatInstanceDescriptor` and all access of `ExecutableEntities` to this communication graph are handled by the associated `RTE Implementation Plug-In`.

**[constr\_3458]** `FlatInstanceDescriptor.rtePluginProps` shall only reference a `EcucContainerValue` representing a `RteRipsPlugin` [`FlatInstanceDescriptor.rtePluginProps` shall only reference an `EcucContainerValue` which defines the identity of the `RTE Implementation Plug-In`. This requires that the according `EcucContainerValue`'s definition references a `EcucContainerDef` having a `destinationUri` set to `/AUTOSAR/EcucDestinationUriDefSets/RteRipsUriDefSet/RteRipsPlugin`]()

**[constr\_5175]{DRAFT}** `RtePluginProps` shall reference at least one `EcucContainerValue` representing a `RteRipsPlugin` [If a `FlatInstanceDescriptor` owns are `RtePluginProps` this `RtePluginProps` shall define the associated `RtePlugin` reference and/or the `associatedCrossSwClusterComRtePlugin` reference.]()

To support different work-flows the `FlatInstanceDescriptor.rtePluginProps` is defined as `<<atpSplittable>>`. Therefore it's possible the do the assignment of communication graphs immediately during the creation of the ECU Flat Map or in a second processing step after the ECU Flat Map is already created.

Further information, specifications, and applicable constraints on assignments of communication graphs are provided in the document SWS RTE [37] at which specific anchor points of an communication graphs the assignment shall be described.

### Some further notes about the chosen modeling pattern

In general it is an unusual pattern, that a meta class not being related to ECU configuration references an `EcucContainerValue`. But the `FlatInstanceDescriptor` of the ECU Extract is in any case closely related to the configuration of the ECU. Furthermore in case of data conversion it's mandatory to provide for each different representation a `FlatInstanceDescriptor` for the communication graph. Further information about such configurations is provided in the document SWS RTE [37].



The alternative approach to describe the `RTE Implementation Plug-In` as meta class is not the right approach since only very few properties of `RTE Implementation Plug-Ins` are standardized. There is also no need to exchange information between different development parties about those properties. Due to this reason `RTE Implementation Plug-Ins` are described by the means of ECU Configuration elements.

The alternative approach to model the relationship between `FlatInstanceDescriptors` and the container which represents the `RTE Implementation Plug-In` with a mapping pattern was rejected due to the very high number of expected configuration elements.

## 14.7 Variant Handling in ECU Extract

The System Template supports the creation of variants in many of its model elements. Depending on the binding time, some of this variability may have been already resolved within the `System` with `category` `SYSTEM_DESCRIPTION` at the time of creating the `System` with `category` `ECU_EXTRACT`, and a cleanup step may have removed some of the complexity by removing the out-configured variability.

If however binding of a concrete variation condition happens in a later stage of the AUTOSAR methodology (e.g. during ECU Configuration or even post build), or if for other process reasons such a cleanup step is not applicable, the variability needs to be carried over to the `System` with `category` `ECU_EXTRACT`.

### 14.7.1 System Constants

In the AUTOSAR variant handling concept, `SwSystemconst` represents a variant selector which needs to have its value assigned latest at binding time of any expression which refers to it. Such a value assignment may be done literally using a fixed value, or by specifying a formula, depending on the values of other variant selectors. The elements to do this are collected in a `SwSystemconstantValueSet`, aggregating individual value assignment expressions in the form of `SwSystemconstValue`.

In the `System` with `category` `ECU_EXTRACT`, all `SwSystemconst` elements are included that influence its variable content. In detail the following rules for the inclusion of `SwSystemconst` apply:

- `System` with `category` `ECU_EXTRACT` shall contain all `SwSystemconst` elements that are being referenced directly by variable elements contained in the `System` with `category` `ECU_EXTRACT`.
- Additionally, whenever a `SwSystemconst`'s value is assigned indirectly using an `SwSystemconstValue`'s `ConditionByFormula` expression, each `SwSystemconstValue` referred to in the assignment formula needs to be included, too. As such assignments may be nested in multiple levels, the whole directed

acyclic graph of `SwSystemconst` elements influencing the `System` with `category` `ECU_EXTRACT` variability need to be included.

Additionally to the `SwSystemconst` elements also all relevant `SwSystemconst-Value` assignments need to be included. As they are aggregated by `SwSystemconstantValueSet`, the whole Value Set is included whenever one of its `SwSystemconstValue` assignments is relevant for the `System` with `category` `ECU_EXTRACT`.

Note: Typically, the assignment of Variants (“Binding”) will be done in a `Variant Configuration` work product, separate from the actual `System` with `category` `ECU_EXTRACT`. In this case, the relevant information from the `Variant Configuration` also needs to be extracted and delivered in combination with the `System` with `category` `ECU_EXTRACT`. From the model point of view it doesn’t matter whether `System` with `category` `ECU_EXTRACT` and `Variant Configuration` are contained in the same file or in separate files.

### 14.7.2 Nested Whole/Part class variants

In case of flattening the hierarchical VFB view to the ECU flat view representation, the case may appear that one conditional `SwComponentPrototype` is nested within another `SwComponentPrototype` depending on another variance condition. As the resulting ECU flat view only has a flat representation of `SwComponentPrototypes`, such a double condition needs to be resolved to a single condition in the resulting `SwComponentPrototypes`.

In this case, the variation condition formula needs to be altered such that the two (or more) individual conditions are combined in a boolean AND function.

### 14.7.3 Multiple instances of calibration parameters in system scope

Use case: In complex systems the problem occurs that parameter values may depend on the configuration of the vehicle due to functional side effects. E.g. the calibration of a lambda sensor depends from the kind of transmission due to mechanical impacts (e.g due to additional / different curvatures in the exhaust pipe)

The difficulty is that those dependencies are typically detected after design of the software components and shall not change the software component design. Furthermore this is typical use case for post build variability since the ECU SW should not change due to environmental variability.

**[TPS\_SYST\_02029] Multiple `ParameterDataPrototype` instances in an EcuExtract** [It shall be possible to instruct the RTE Generator to provide various instances for a `ParameterDataPrototype` in the `System` with `category` `ECU_EXTRACT`. Therefore one `FlatInstanceDescriptor` per expected data instance has to point to the `ParameterDataPrototype` as an `atpTarget`.]()

**[constr\_3114] FlatInstanceDescriptors pointing to the same ParameterDataPrototype shall have different postBuildVariantConditions** [FlatInstanceDescriptors that are pointing as an atpTarget to the same ParameterDataPrototype instance shall have different postBuildVariantConditions.]()

Note: When several instances of a ParameterDataPrototype are created it shall be ensured that at most one parameter instance is active in a post build variant.

**[constr\_3115] FlatInstanceDescriptors pointing to the same ParameterDataPrototype instance** [When several FlatInstanceDescriptors point to the same ParameterDataPrototype instance as an atpTarget in the context of a ParameterInterface the different FlatInstanceDescriptors shall point to the PPortPrototype of the owning ParameterSwComponentType. In this case the PPortPrototype typed by the ParameterInterface is part of the context of the according AnyInstanceRef.]()

Please note that the individual FlatInstanceDescriptors are utilized to provide unique names for the MCD tool as well as individual CalibrationParameterValues typically refer to the FlatInstanceDescriptors to provide instance specific initialization values.

## 15 Supported special use-cases

The description means of the communication matrix in the System Template potentially support a variety of use-cases. Some combinations of description means are explicitly ruled-out by semantical constraints. But the remaining space for the possible descriptions is so huge, that certain use-cases are actually not supported by tool-vendors because they did not consider them. This chapter describes special use-cases that can be specified in the System Template in order to get a harmonized support by tools.


### 15.1 Support of sending / receiving same Can/Flexray Frame on same channel (Pdu Gateway Use-Case)

**Description:** The System Template supports the definition of a communication where the same Can/Flexray `FrameTriggering` is sent and received on the same `PhysicalChannel` of one Pdu Gateway `EcuInstance`.

**Rationale:** This use-case occurs in gateway `EcuInstances` which are used in several vehicle platforms.

**Implementation:** This usage shall be supported by defining one `Frame` and one `FrameTriggering` with different directions on the referenced `FramePorts` for the same `PhysicalChannel`. Also one `Pdu` and one `PduTriggering` with different directions on the referenced `IPduPorts` for the same `PhysicalChannel` shall be used.


**Example:** In figure 15.1 a sample network setup is shown. The ECU1 is designed to send the `Frame_X` on the `PhysicalChannel`. The ECU2, ECU3 and ECU4 do receive the information. But since ECU1 is optional, ECU4 is also designed to send the `Frame_X` on the network (in case ECU1 is not present). Please note that in in this example ECU4 is a gateway `EcuInstance` that is connected to an additional channel.

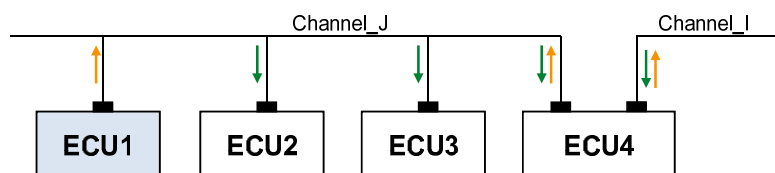

**Figure 15.1: Example of network setup with one Frame being received and sent on the same ECU and channel**

In the system description there exists one definition for the `Frame_X` and one `FrameTriggering` for the `PhysicalChannel` (figure 15.2). Each `EcuInstance` sending or receiving the `FrameTriggering` does define one `FramePort` per direction, thus for ECU4 there are two `FramePorts` defined.

For each `Pdu` mapped to the `Frame` there exists one definition for the `Pdu_X` and one `PduTriggering_X` for the `PhysicalChannel`. Each `EcuInstance` sending or receiving the `Pdu` does define one `IPduPort` per direction, thus for ECU4 there are two `IPduPorts` defined.

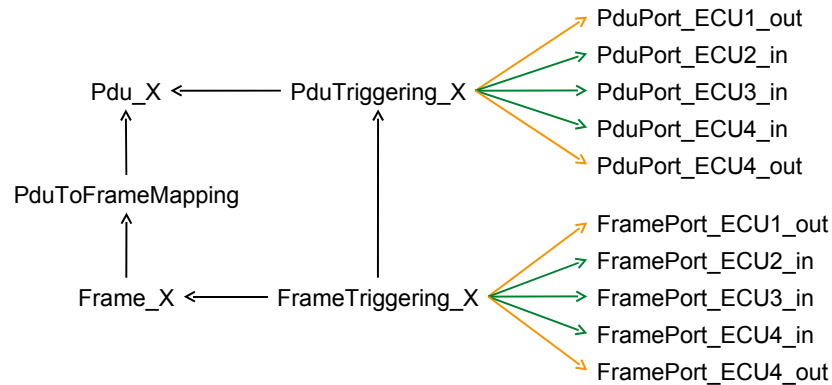

**Figure 15.2: Structure to reflect the frame- and pdu-triggering setup of one Frame being received and sent by the same Gateway ECU**

In case a System Extract / ECU Extract is build, only the relevant `FramePorts` and `IPduPorts` for the corresponding `EcuInstance` are extracted. Especially in case an additional `EcuInstance` is designed to send and receive the same `Frame` all the other ECU extracts will not be affected by this change.

## 15.2 Support of sending / receiving same Can/Flexray Frame on same channel (bidirectional routing in COM)

**Description:** The System Template supports the definition of a communication where the same Can/Flexray `FrameTriggering` is sent and received on the same `PhysicalChannel` of one `EcuInstance` and the content of this `Frame` is processed by an Application. Please note that this use case is only applicable for legacy communication over COM and not for communication over LdCOM.

**Rationale:** This use-case occurs in case of runtime variation where the same data is transmitted or received by the same ECU.


**Implementation in a System Description:** This use-case is supported with the following modelling:

- One `Frame` and one `FrameTriggering` with different directions on the referenced `FramePorts` for the same `PhysicalChannel` shall be defined.
- One `Pdu` and one `PduTriggering` with different directions on the referenced `IPduPorts` for the same `PhysicalChannel` shall be defined.

- One `ISignal` and one `ISignalTriggering` with different directions on the referenced `ISignalPorts` for the same `PhysicalChannel` shall be defined.

Please note that in case of a bidirectional routing on the `ISignal` level the COM Configuration (`ComIPdus`) needs to be derived from the `PduTriggering` and from `IPduPorts`.

**Example:** In figure 15.3 a sample network setup is shown. The same data (`Frame_X`) is transmitted by Ecu4 and by Ecu1 (runtime variation). Ecu4 is designed to send and to receive the `Frame_X` on the network. For Ecu2 and Ecu3 it is transparent from which sender (Ecu1 or Ecu4) the data is transmitted.

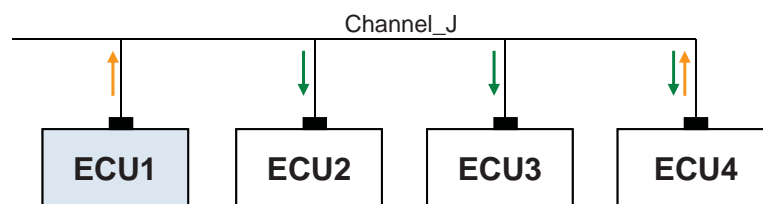


**Figure 15.3: Example of network setup with one Frame being received and sent on the same ECU and channel**

In the system description there exists one definition for the `Frame_X` and one `FrameTriggering` for the `PhysicalChannel` (figure 15.4). Each `EcuInstance` sending or receiving the `FrameTriggering` does define one `FramePort` per direction, thus for ECU4 there are two `FramePorts` defined.

For each `Pdu` mapped to the `Frame` there exists one definition for the `Pdu_X` and one `PduTriggering` for the `PhysicalChannel`. Each `EcuInstance` sending or receiving the `Pdu` does define one `IPduPort` per direction, thus for ECU4 there are two `IPduPorts` defined.


For each `ISignal` mapped to the `Pdu` there exists one definition for the `Signal_X` and one `ISignalTriggering` for the `PhysicalChannel`. Each `EcuInstance` sending or receiving the `ISignal` does define one `ISignalPort` per direction, thus for ECU4 there are two `ISignalPorts` defined.

Example 15.4 shows a System Description where only the `DataMapping` for the `PPorts` is defined. Please note that in the COM configuration a `ComIPdu` has a `ComIPduDirection`. Therefore two `ComIPdus` (Tx and Rx) need to be created from such a System Description.

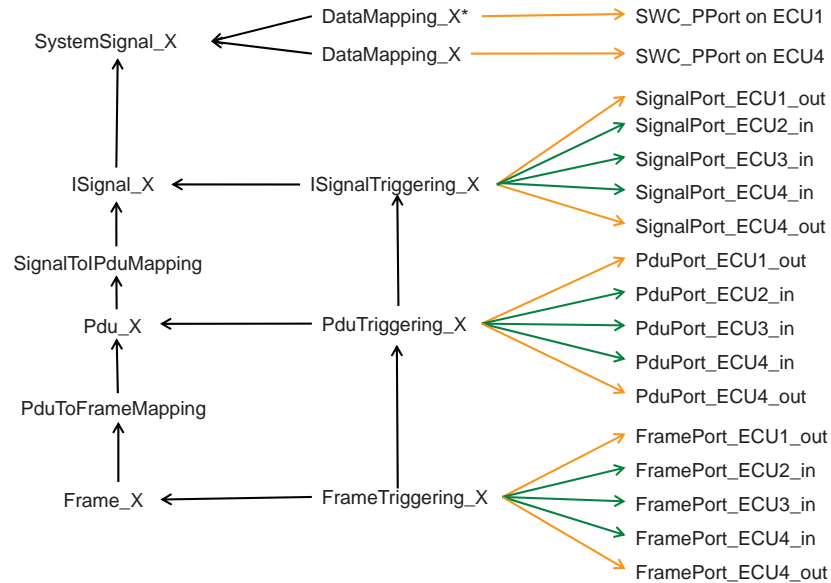

**Figure 15.4: Structure to reflect the frame- and pdu-triggering setup of one Frame being received and sent on the same ECU and channel (System Description with ECU1, ECU2, ECU3 and ECU4)**

In case a System Extract / ECU Extract is build, only the relevant `FramePorts`, `IPduPorts` and `ISignalPorts` for the corresponding `EcuInstance` are extracted. Especially in case an additional `EcuInstance` is designed to send and receive the same `Frame` all the other ECU extracts will not be affected by this change. Figure 15.5 shows a System Extract where only the description for ECU4 is available. Please note that in this example the `VariableDataPrototype` in the PPort and the `VariableDataPrototype` in the RPort of the Software Component are mapped to the same `SystemSignal`.

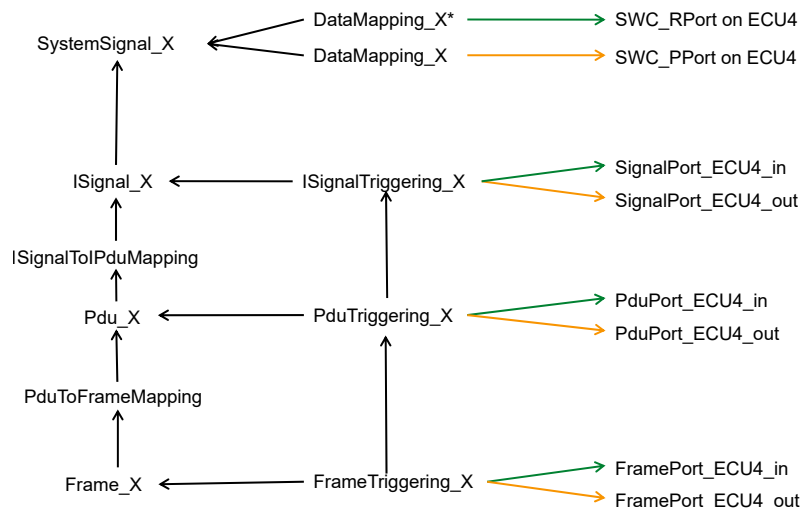

**Figure 15.5: Structure to reflect the frame- and pdu-triggering setup of one Frame being received and sent on the same ECU and channel (System Extract with ECU4 only)**



### 15.3 Support of dynamic CAN IDs

To support efficient diagnostics with on-board clients, efficient routing, and efficient SAE J1939 transport protocol and request handling, AUTOSAR provides access to dynamic CAN `identifier` parts in upper layers of the COM stack. This is achieved by appending parts of the `identifier` (or the complete `identifier`) as `MetaData` to the `Pdu` payload. The usage of `MetaData` is an Ecu Configuration decision. A System Description does not define whether `MetaData` shall be used or not.

The System Template uses the following attributes for the configuration of dynamic CAN IDs:

- The `rxMask` of a `CanFrameTriggering` defines the relevant bits in a CAN `identifier` and thus defines a range of CAN `identifiers` that match these bits and may vary in the other bits.
- The `txMask` of a `CanFrameTriggering` defines the static bits in a CAN `identifier` and thus allows to set the other bits using the data appended to the payload.

These parameters are sufficient to support the following scenarios:

- A `Pdu` is transmitted from one AUTOSAR node to another with variable ID parts. In this case, `rxMask` and `txMask` will be identical, and the variable `identifier` parts placed in the `Pdu` `MetaData` by the sender will be routed transparently and received in the same way.
- A `Pdu` is transmitted by one node with a static `identifier` and received using the `rxMask`. In this case, the `MetaData` is not used, and the receiver is tolerant regarding dynamic address parts.
- J1939 `Pdu` is sent with fixed priority, but priority is ignored by the receiver. Here, the `MetaData` may or may not be used, and the `rxMask` differs from the `txMask` just in the three priority bits.

### 15.4 N:1 Sender Receiver communication description in a System Extract over one `PhysicalChannel`

**Description:** The System Template supports a System Extract description of a n:1 sender-receiver communication over one `PhysicalChannel` where each sender and the receiver are located on different Ecus. Each sender Ecu sends the same data marked with a different frame identifier (e.g. CAN Identifier) to the receiver Ecu over the `PhysicalChannel`.

**Implementation:** This usage shall be supported by defining one `Frame` and several `FrameTriggerings` on the same `PhysicalChannel`. Each defined `FrameTriggering` refers to the same `Frame`. The senders and receivers of a specific `FrameTriggering` are defined with references to `FramePorts`.



For every defined `Pdu` that is contained in the `Frame` exactly one `PduTriggering` is defined. This also means that all defined `FrameTriggerings` refer to the same `PduTriggerings` with the `FrameTriggering.pduTriggering` reference.

The communication direction of the `Pdu` is defined by `PduTriggering` references to `IPduPorts`. All sender `IPduPorts` and receiver `IPduPorts` are referenced by the same `PduTriggering`.

The description of `ISignals` and `ISignalTriggerings` shall be defined accordingly. Please also note that in case of n:1 sender-receiver communication each sender shall be represented by the same `SystemSignal` according to [constr\_3086].

**Example:** In figure 15.6 a small example is shown. Three different Ecus (Ecu1, Ecu2, Ecu3) are sending the same `Frame` to Ecu4.


- Ecu1 sends the Frame with `CanId` = 3 as described with `FrameTriggering3`.
- Ecu2 sends the Frame with `CanId` = 2 as described with `FrameTriggering2`.
- Ecu3 sends the Frame with `CanId` = 1 as described with `FrameTriggering1`.

The `Frame` contains one single `Pdu`. Only one `PduTriggering` is defined here that refers to three `IPduPorts` with `communicationDirection` "out" (`Ecu1OutPort`, `Ecu2OutPort` and `Ecu3OutPort`) and to one `IPduPort` with `communicationDirection` "in" (`Ecu4InPort`). Please note that the references between the Triggering elements (`FrameTriggering.pduTriggering` and `PduTriggering.iSignalTriggering`) are not visible in figure 15.6 for the sake of clarity.

The description of the `ISignal` that is included in the `Pdu` and the `ISignalTriggering` is defined accordingly.

**Upstream Mapping:** In the basic Ecu configuration for the receiving Ecu that is derived from such a System Extract all `FrameTriggerings` shall be mapped to the same `Pdu` that is passed to a upper layer module (e.g. `Nm`, `PduR`). This corresponds to the upstream mapping rules for COM Signals defined in [TPS\_SYST\_01066] and [TPS\_SYST\_01067].

- `CanIf`: several `CanIfRxPduCfg` containers need to be created with different `CanIfRxPduCanIds` that all point to the same `Pdu` (`CanIfRxPduRef`).
- `Frlf`: several `FrlfFrameTriggering` containers need to be created that all point to the same `Pdu` (`FrlfFrameStructure/FrlfPduInFrame/FrlfPduRef`)

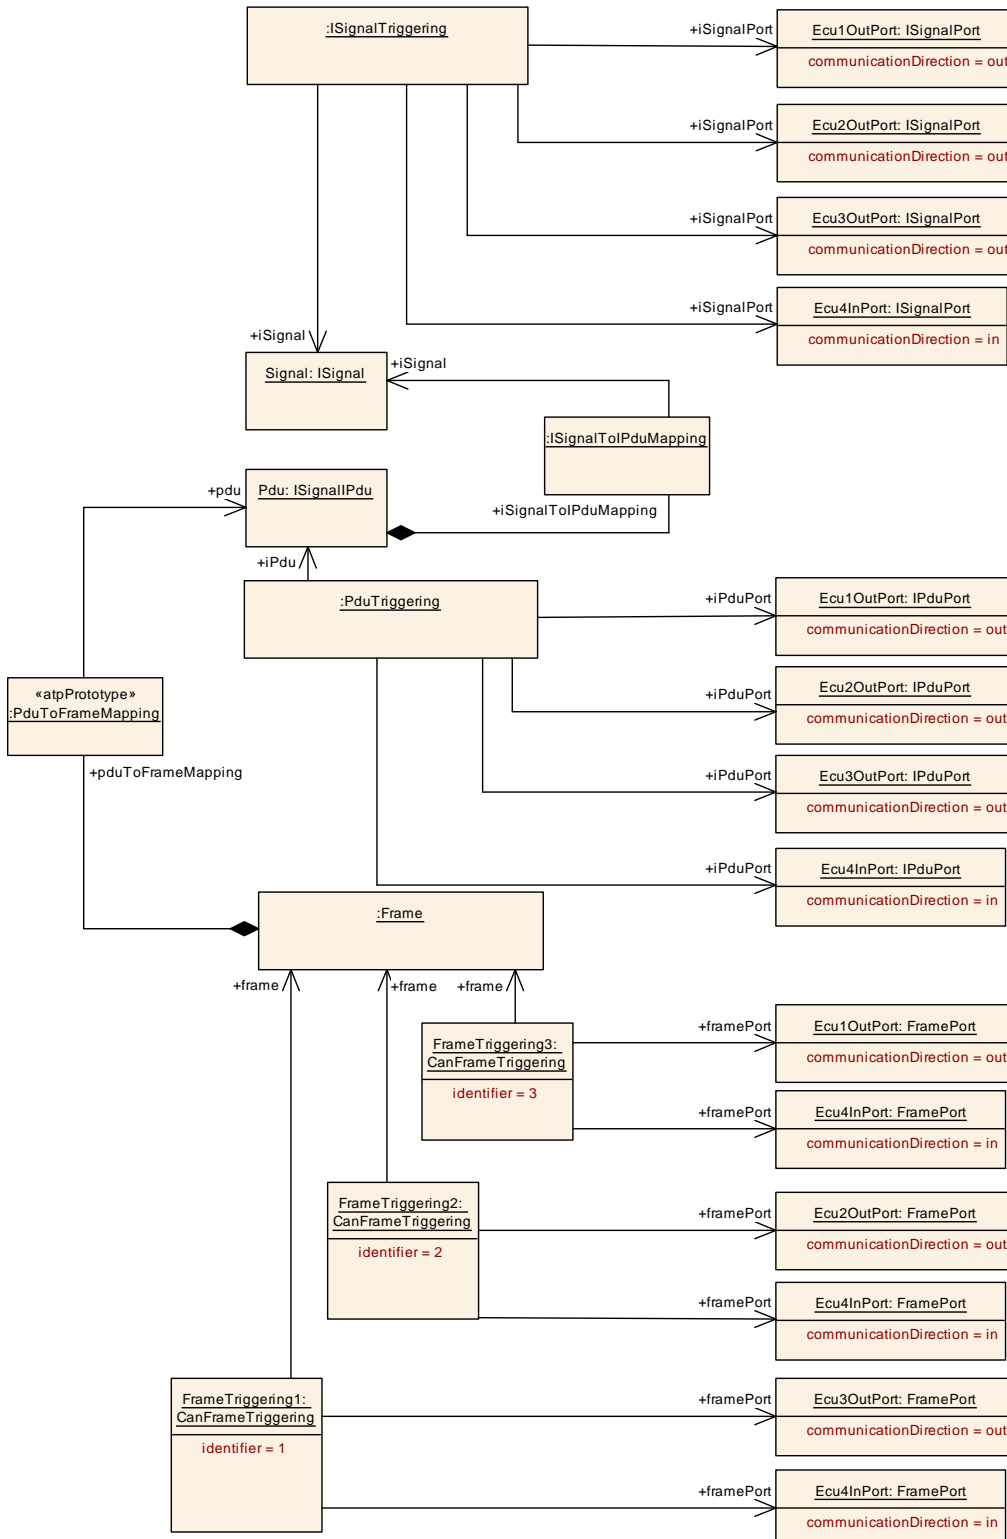

**Figure 15.6: Example for a N:1 Sender Receiver communication description in a System Extract**

## 15.5 Description of MOST Functions

The MOST communication protocol is not supported by the AUTOSAR Basic Software but it is possible to convert FIBEX [9] descriptions with MOST content to an AUTOSAR description. This chapter describes how MOST Functions may be described with the means of the Software Component Template [5].

FIBEX supports the description of SW-PACKAGES (represents a bundle of FBlocks and implemented MOST functions), MOST-FUNCTION-BLOCKS (contain functions with operation types and finally parameters, e.g. CD Player), MOST-FUNCTIONS (e.g. a CD player possesses functions such as Play, Stop, Eject, and Time Played) and OP-TYPES (operations that are applied to the respective function, e.g. Play.Set(tracknumber)). The following table shows how the FIBEX elements may be converted into an AUTOSAR description.

MOST FIBEX Element	Description	AUTOSAR Element	Mapping Rule
FUNCTION-BLOCK	A MOST device contains multiple components that are called function blocks, for example, tuner, amplifier, or CD player.	<code>SwComponentType</code>	Each FunctionBlock shall be described as a <code>SwComponentType</code>
FUNCTION-BLOCK-INSTANCE	There may be several Instances with the same FBlockID in the system (two CD changers, four active speakers, several diagnosis blocks)	<code>SwComponentPrototype</code>	Each FunctionBlockInstance shall be described as a <code>SwComponentPrototype</code>
MOST-FUNCTION	Methods and Properties of a Function Block (e.g. Play, Stop...)	<code>ClientServerInterface</code>	Methods and Properties shall be described as <code>ClientServerInterfaces</code>
OP-TYPE	The OPType indicates which operation shall be applied to the property or method (e.g. Play.Start, Property.Get)	<code>ClientServerOperation</code>	Methods and Properties shall be described as <code>ClientServerOperations</code> .
OP-TYPE Parameter	Parameters of OP-TYPE (e.g. tracknumber)	<code>ArgumentDataPrototype</code>	OP-TYPE Parameters shall be described as <code>ArgumentDataPrototypes</code> of <code>ClientServerOperations</code> .
CLUSTER (MOST-Cluster)	MOST <code>CommunicationCluster</code>	<code>UserDefinedCluster</code>	A MOST <code>CommunicationCluster</code> shall be described as <code>UserDefinedCluster</code> that allows the modeling of arbitrary Communication Clusters. A MOST-Cluster may aggregate several <code>PhysicalChannels</code>
CHANNEL	The CHANNEL object is used to specify the communications channel used by individual OPTypes.	<code>UserDefinedPhysicalChannel</code>	A <code>UserDefinedPhysicalChannel</code> shall be described for each CHANNEL (Control Channel and/or a MOST High Protocol) that is used by the MOST <code>CommunicationCluster</code> .





MOST FIBEX Element	Description	AUTOSAR Element	Mapping Rule
PDU TRIGGERING	The PDU-TRIGGERING is created for every OP-TYPE that is transported on this CHANNEL.	<a href="#">PduTriggering</a>	A <a href="#">PduTriggering</a> shall be created for every <a href="#">Pdu</a> that contains <a href="#">ClientServerOperations</a> that correspond to a <a href="#">OPType</a> and shall be transported on the <a href="#">PhysicalChannel</a> that aggregates this <a href="#">PduTriggering</a> .
PDU	In FIBEX the OP-TYPE corresponds to a PDU in the communication description	<a href="#">Pdu</a>	In AUTOSAR the <a href="#">ClientServerOperation</a> representing the OP-TYPE shall be mapped with the <a href="#">ClientServerToSignalMapping</a> to a <a href="#">SystemSignal</a> . For the <a href="#">SystemSignal</a> an <a href="#">ISignal</a> shall be created. The <a href="#">ISignal</a> is mapped into an <a href="#">ISignalIPdu</a> .

**Table 15.1: Mapping of MOST FIBEX elements to AUTOSAR elements**

## A Glossary

**Artifact** This is a Work Product Definition that provides a description and definition for tangible work product types. Artifacts may be composed of other artifacts ([43]).

At a high level, an artifact is represented as a single conceptual file.

**AUTOSAR Tool** This is a software tool which supports one or more tasks defined as AUTOSAR tasks in the methodology. Depending on the supported tasks, an AUTOSAR tool can act as an authoring tool, a converter tool, a processor tool or as a combination of those (see separate definitions).

**AUTOSAR Authoring Tool** An AUTOSAR Tool used to create and modify AUTOSAR XML Descriptions. Example: System Description Editor.

**AUTOSAR Converter Tool** An AUTOSAR Tool used to create AUTOSAR XML files by converting information from other AUTOSAR XML files. Example: ECU Flattener

**AUTOSAR Definition** This is the definition of parameters which can have values. One could say that the parameter values are Instances of the definitions. But in the meta model hierarchy of AUTOSAR, definitions are also instances of the meta model and therefore considered as a description. Examples for AUTOSAR definitions are: `EcucParameterDef`, `PostBuildVariantCriterion`, `SwSystemconst`.

**AUTOSAR XML Description** In AUTOSAR this means "filled Template". In fact an AUTOSAR XML description is the XML representation of an AUTOSAR model.

The AUTOSAR XML description can consist of several files. Each individual file represents an AUTOSAR partial model and shall validate successfully against the AUTOSAR XML schema.

**AUTOSAR Meta-Model** This is an UML2.0 model that defines the language for describing AUTOSAR systems. The AUTOSAR meta-model is an UML representation of the AUTOSAR templates. UML2.0 class diagrams are used to describe the attributes and their interrelationships. Stereotypes, UML tags and OCL expressions (object constraint language) are used for defining specific semantics and constraints.

**AUTOSAR Meta-Model Tool** The AUTOSAR Meta-Model Tool is the tool that generates different views (class tables, list of constraints, diagrams, XML Schema etc.) on the AUTOSAR meta-model.

**AUTOSAR Model** This is a representation of an AUTOSAR product. The AUTOSAR model represents aspects suitable to the intended use according to the AUTOSAR methodology.

Strictly speaking, this is an instance of the AUTOSAR meta-model. The information contained in the AUTOSAR model can be anything that is representable according to the AUTOSAR meta-model.

**AUTOSAR Partial Model** In AUTOSAR, the possible partitioning of models is marked in the meta-model by `<<atpSplittable>>`. One partial model is represented in an AUTOSAR XML description by one file. The partial model does not need to fulfill all semantic constraints applicable to an AUTOSAR model.

**AUTOSAR Processor Tool** An AUTOSAR Tool used to create non-AUTOSAR files by processing information from AUTOSAR XML files. Example: RTE Generator

**AUTOSAR Specification Element** An AUTOSAR Specification Element is a named element that is part of an AUTOSAR specification. Examples: requirement, constraint, specification item, class or attribute in the meta model, methodology, deliverable, methodology activity, model element, bsw module etc.

**AUTOSAR Template** The term "Template" is used in AUTOSAR to describe the format different kinds of descriptions. The term template comes from the idea, that AUTOSAR defines a kind of form which shall be filled out in order to describe a model. The filled form is then called the description.

In fact the AUTOSAR templates are now defined as a meta-model.

**AUTOSAR Validation Tool** A specialized `AUTOSAR Tool` which is able to check an AUTOSAR model against the rules defined by a profile.

**AUTOSAR XML Schema** This is a W3C XML schema that defines the language for exchanging AUTOSAR models. This Schema is derived from the AUTOSAR meta-model. The AUTOSAR XML Schema defines the AUTOSAR data exchange format.

**Blueprint** This is a model from which other models can be derived by copy and refinement. Note that in contrast to meta model resp. types, this process is *not* an instantiation.

**Instance** Generally this is a particular exemplar of a model or of a type.

**Life Cycle** Life Cycle is the course of development/evolutionary stages of a model element during its life time.

**Meta-Model** This defines the building blocks of a model. In that sense, a Meta-Model represents the language for building models.

**Meta-Data** This includes pertinent information about data, including information about the authorship, versioning, access-rights, timestamps etc.

**Model** A Model is an simplified representation of reality. The model represents the aspects suitable for an intended purpose.

**Partial Model** This is a part of a model which is intended to be persisted in one particular artifact.

**Pattern in GST** This is an approach to simplify the definition of the meta model by applying a model transformation. This transformation creates an enhanced model out of an annotated model.

**Profile Authoring Support Data** Data that is used for efficient authoring of a profile. E.g. list of referable constraints, meta-classes, meta-attributes or other reusable model assets (blueprints)

**Profile Authoring Tool** A specialized `AUTOSAR Tool` which focuses on the authoring of profiles for data exchange points. It e.g. provides support for the creation of profiles from scratch, modification of existing profiles or composition of existing profiles.

**Profile Compatibility Checker Tool** A specialized `AUTOSAR Tool` which focuses on checking the compatibility of profiles for data exchange. Note that this compatibility check includes manual compatibility checks by engineers and automated assistance using more formal algorithms.

**Profile Consistency Checker Tool** A specialized `AUTOSAR Tool` which focuses on checking the consistency of profiles.

**Property** A property is a structural feature of an object. As an example a “connector” has the properties “receive port” and “send port”

Properties are made variant by the `<<atpVariation>>`.

**Prototype** This is the implementation of a role of a type within the definition of another type. In other words a type may contain Prototypes that in turn are typed by “Types”. Each one of these prototypes becomes an instance when this type is instantiated.

**Type** A type provides features that can appear in various roles of this type.

**Value** This is a particular value assigned to a “Definition”.

**Variability** Variability of a system is its quality to describe a set of variants. These variants are characterized by variant specific property settings and / or selections. As an example, such a system property selection manifests itself in a particular “receive port” for a connection.

This is implemented using the `<<atpVariation>>`.

**Variant** A system variant is a concrete realization of a system, so that all its properties have been set respectively selected. The software system has no variability anymore with respect to the binding time.

This is implemented using `EvaluatedVariantSet`.

**Variation Binding** A variant is the result of a variation binding process that resolves the variability of the system by assigning particular values/selections to all the system’s properties.

This is implemented by `VariationPoint`.

**Variation Binding Time** The variation binding time determines the step in the methodology at which the variability given by a set of variable properties is resolved.

This is implemented by `vh.LatestBindingtime` at the related properties.

**Variation Definition Time** The variation definition time determines the step in the methodology at which the variation points are defined.

**Variation Point** A variation point indicates that a property is subject to variation. Furthermore, it is associated with a condition and a binding time which define the system context for the selection / setting of a concrete variant.

This is implemented by `VariationPoint`.



## B Detailed Representation of InstanceRef Associations in the System Template

As a special type of association "instanceRef" refers to an exact instance of the referenced class, requiring additional information of the target and the context. This is explained in detail in the AUTOSAR Generic Structure Template [2]. This chapter contains the detailed InstanceRef Diagrams.

### B.1 Usage of InstanceRefs in Data Mapping diagrams



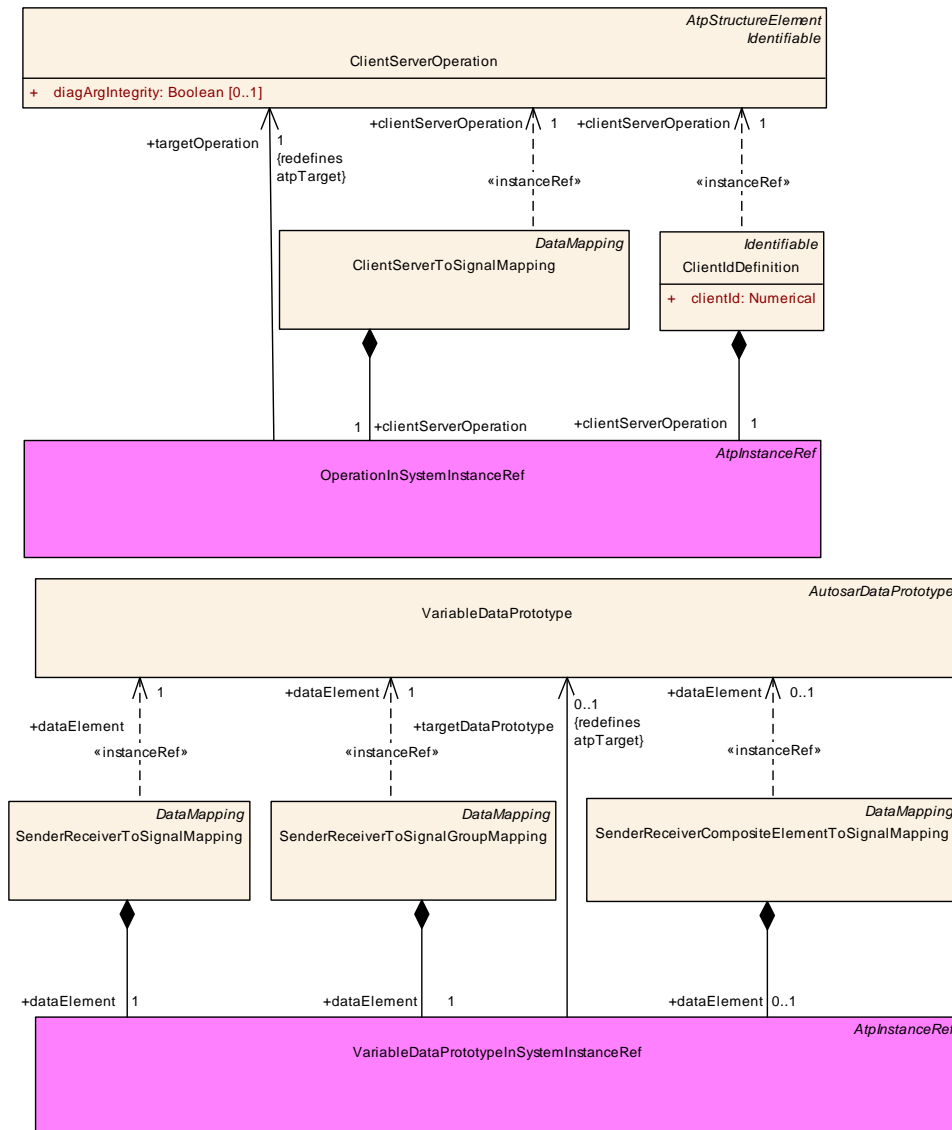


Figure B.1: Data Mapping Instance Ref Usage

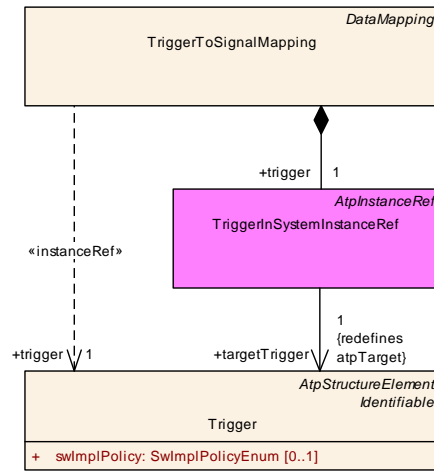

**Figure B.2: Modeling of InstanceRef usage for `TriggerInSystemInstanceRef`**

## B.2 Usage of InstanceRefs in SW Mapping diagrams

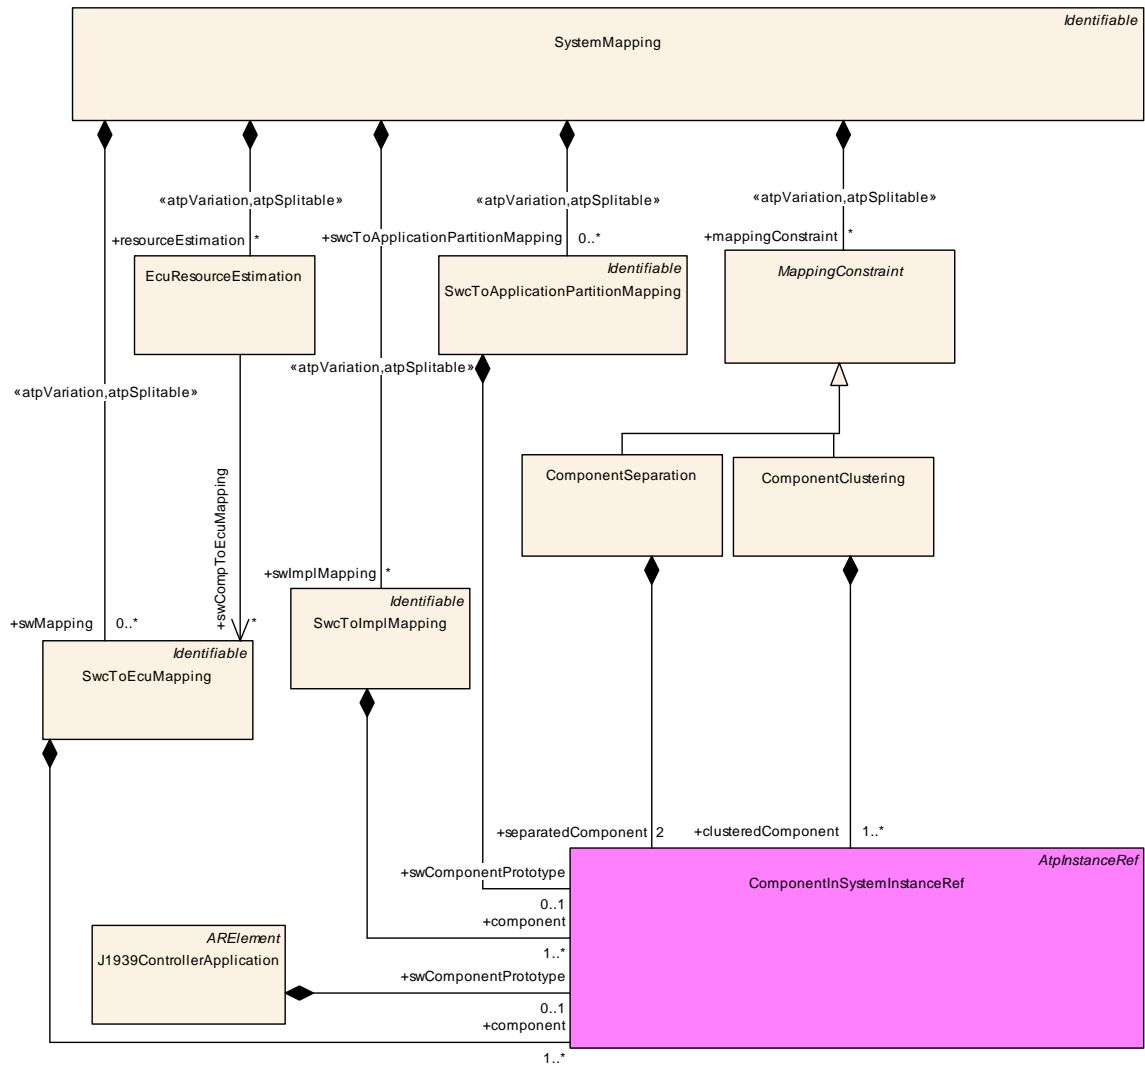

**Figure B.3: SW Mapping Instance Ref Usage**

### B.3 Usage of InstanceRefs in Signal Path Constraint diagrams

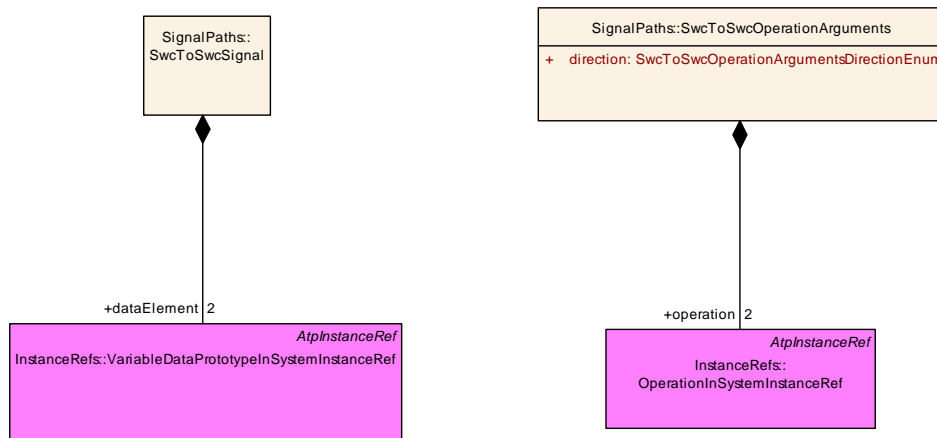


Figure B.4: SW Mapping Instance Ref Usage

### B.4 Usage of InstanceRefs in PncMapping


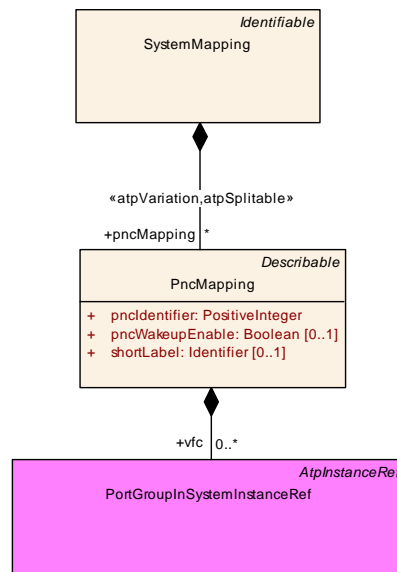


Figure B.5: Partial Network Mapping Instance Ref Usage

## B.5 Usage of InstanceRefs in ComManagementMapping

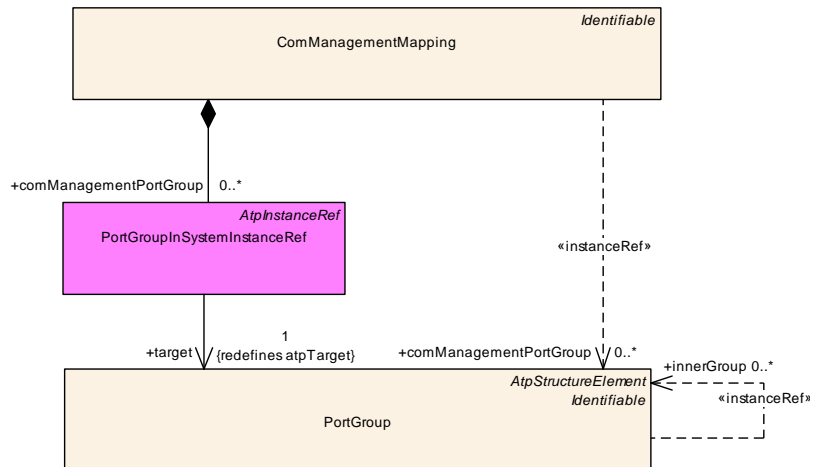

**Figure B.6: ComManagementMapping Instance Ref Usage**

### B.6 "SWC in System" InstanceRef

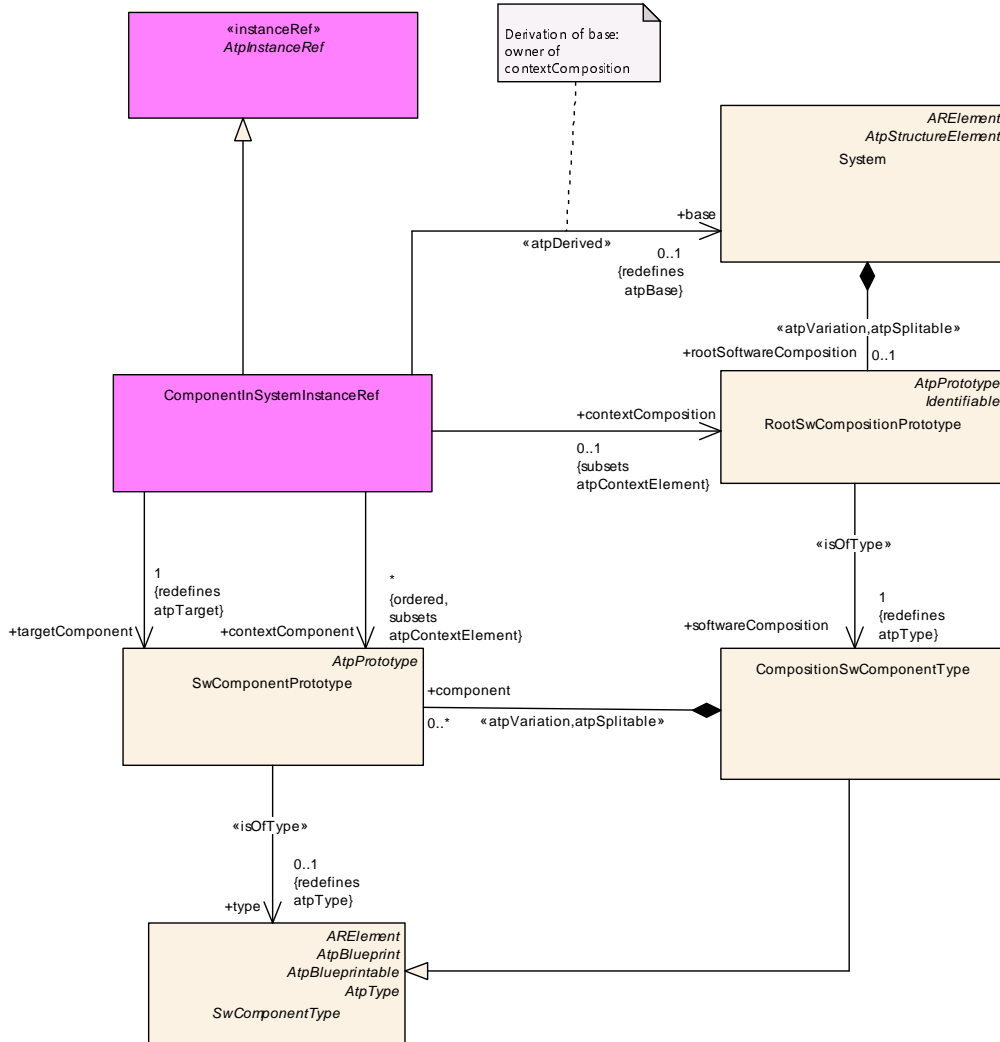


Figure B.7: ComponentInSystem InstanceRef

<b>Class</b>	<b>ComponentInSystemInstanceRef</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::InstanceRefs			
<b>Note</b>				
<b>Base</b>	ARObject, AtpInstanceRef			
<b>Aggregated by</b>	ComponentClustering.clusteringComponent, ComponentSeparation.separatedComponent, J1939 ControllerApplication.swComponentPrototype, SwComponentPrototypeAssignment.swComponent, Swc ToApplicationPartitionMapping.swComponentPrototype, SwcToEcuMapping.component, SwcToImpl Mapping.component			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
base	System	0..1	ref	<b>Stereotypes:</b> atpDerived <b>Tags:</b> xml.sequenceOffset=10
context Component (ordered)	SwComponent Prototype	*	ref	<b>Tags:</b> xml.sequenceOffset=30



Class	ComponentInSystemInstanceRef			
context Composition	<a href="#">RootSwComposition Prototype</a>	0..1	ref	<b>Tags:</b> xml.sequenceOffset=20
target Component	<a href="#">SwComponent Prototype</a>	1	ref	<b>Tags:</b> xml.sequenceOffset=40

**Table B.1: ComponentInSystemInstanceRef**

If the referenced [SwComponentPrototype](#) is located within the [RootSwCompositionPrototype](#) of a [System](#) then the [contextComposition](#) to the [RootSwCompositionPrototype](#) shall be provided. In this scenario we have a [System Extract](#) where the [RootSwComposition](#) may contain other compositions. If the referenced [SwComponentPrototype](#) is the [RootSwCompositionPrototype](#) itself then [contextComposition](#) reference to the [RootSwCompositionPrototype](#) shall be skipped and only the [targetComponent](#) to the [RootSwCompositionPrototype](#) shall be used. In this scenario we have an [Ecu Extract](#) where the [RootSwComposition](#) contains [PortPrototypes](#) that describe the external communication.

### B.7 "Operation in System" InstanceRef

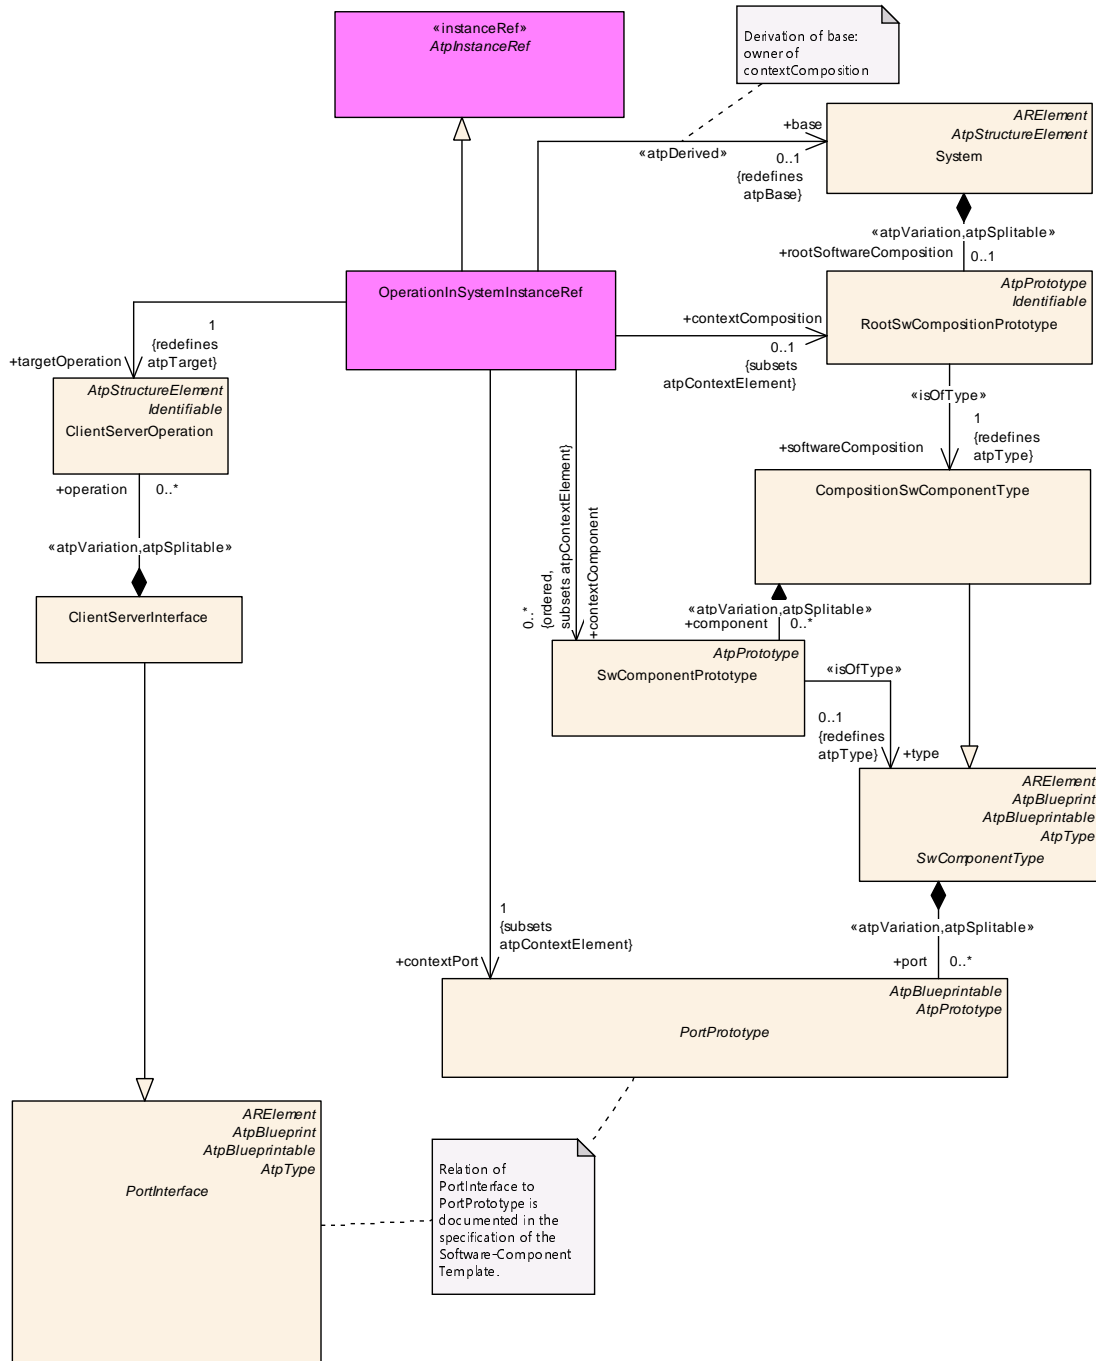


Figure B.8: OperationInSystem InstanceRef

<b>Class</b>	<code>OperationInSystemInstanceRef</code>
<b>Package</b>	<code>M2::AUTOSARTemplates::SystemTemplate::InstanceRefs</code>
<b>Note</b>	
<b>Base</b>	<code>ARObject</code> , <code>AtpInstanceRef</code>








Class		OperationInSystemInstanceRef		
<b>Aggregated by</b>	ClientDefinition.clientServerOperation, ClientServerToSignalMapping.clientServerOperation, PortElementToCommunicationResourceMapping.clientServerOperation, SwcToSwcOperationArguments.operation			
Attribute	Type	Mult.	Kind	Note
base	System	0..1	ref	<b>Stereotypes:</b> atpDerived <b>Tags:</b> xml.sequenceOffset=10
contextComponent (ordered)	SwComponentPrototype	*	ref	<b>Tags:</b> xml.sequenceOffset=30
contextComposition	RootSwCompositionPrototype	0..1	ref	<b>Tags:</b> xml.sequenceOffset=20
contextPort	PortPrototype	1	ref	<b>Tags:</b> xml.sequenceOffset=40
targetOperation	ClientServerOperation	1	ref	<b>Tags:</b> xml.sequenceOffset=50

**Table B.2: OperationInSystemInstanceRef**

If the referenced [ClientServerOperation](#) is part of a [PortInterface](#) of a [SwComponentPrototype](#) that is located within the [RootSwCompositionPrototype](#) then the [contextComposition](#) reference to the [RootSwCompositionPrototype](#) shall be provided. In this scenario we have a System Extract where the [RootSwComposition](#) may contain other compositions. If the referenced [ClientServerOperation](#) is part of a [PortInterface](#) of the [RootSwCompositionPrototype](#) itself then the [contextComposition](#) reference to the [RootSwCompositionPrototype](#) shall be skipped and the [RootSwCompositionPrototype](#) shall be referenced as [contextComponent](#). In this scenario we have an Ecu Extract where the [RootSwComposition](#) contains [PortPrototypes](#) that describe the external communication.

### B.8 "VariableDataPrototype" InstanceRef

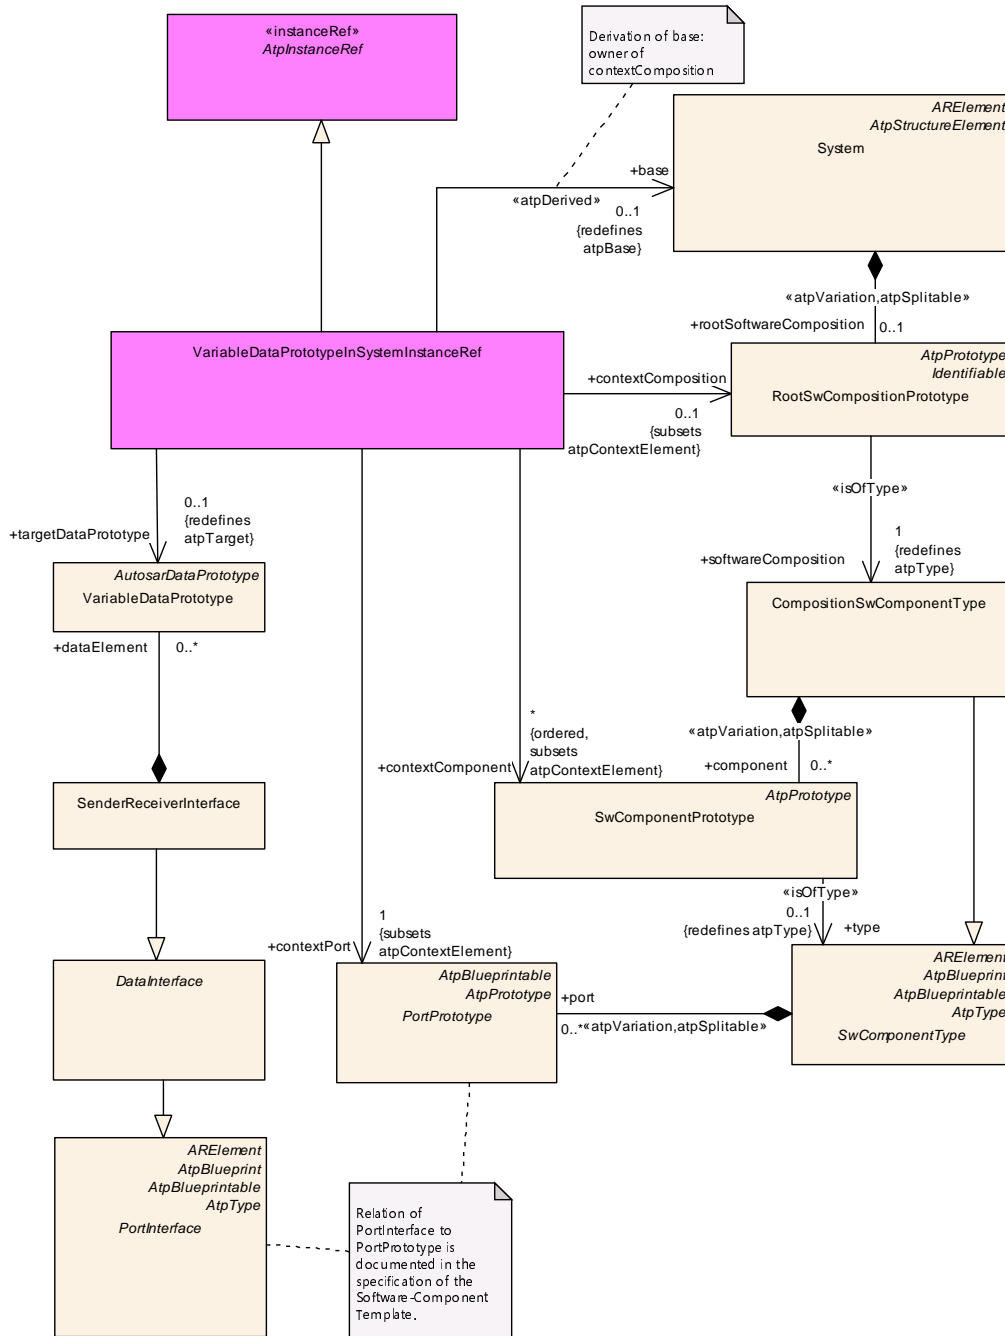

**Figure B.9: VariableDataPrototypeInSystem InstanceRef**

<b>Class</b>	VariableDataPrototypeInSystemInstanceRef
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::InstanceRefs
<b>Note</b>	
<b>Base</b>	ARObject, AtpInstanceRef





Class	VariableDataPrototypeInSystemInstanceRef			
Aggregated by	EndToEndProtectionVariablePrototype.receiver, EndToEndProtectionVariablePrototype.sender, PortElementToCommunicationResourceMapping.variableDataPrototype, SenderReceiverCompositeElementToSignalMapping.dataElement, SenderReceiverToSignalGroupMapping.dataElement, SenderReceiverToSignalMapping.dataElement, SignalServiceTranslationEventProps.translationTarget, SwcToSwcSignal.dataElement			
Attribute	Type	Mult.	Kind	Note
base	System	0..1	ref	Stereotypes: atpDerived
context Component (ordered)	SwComponent Prototype	*	ref	
context Composition	RootSwComposition Prototype	0..1	ref	
contextPort	PortPrototype	1	ref	
targetData Prototype	VariableDataPrototype	0..1	ref	

**Table B.3: VariableDataPrototypeInSystemInstanceRef**

If the referenced [VariableDataPrototype](#) is part of a [PortInterface](#) of a [SwComponentPrototype](#) that is located within the [RootSwCompositionPrototype](#) then the [contextComposition](#) reference to the [RootSwCompositionPrototype](#) shall be provided. In this scenario we have a System Extract where the [RootSwComposition](#) may contain other compositions. If the referenced [VariableDataPrototype](#) is part of a [PortInterface](#) of the [RootSwCompositionPrototype](#) itself then the [contextComposition](#) reference to the [RootSwCompositionPrototype](#) shall be skipped and the [RootSwCompositionPrototype](#) shall be referenced as [contextComponent](#). In this scenario we have an Ecu Extract where the [RootSwComposition](#) contains [PortPrototypes](#) that describe the external communication.

Please note that the `xml.sequenceOffset` is not set for this InstanceRef and therefore the properties are serialized in an alphabetical order.

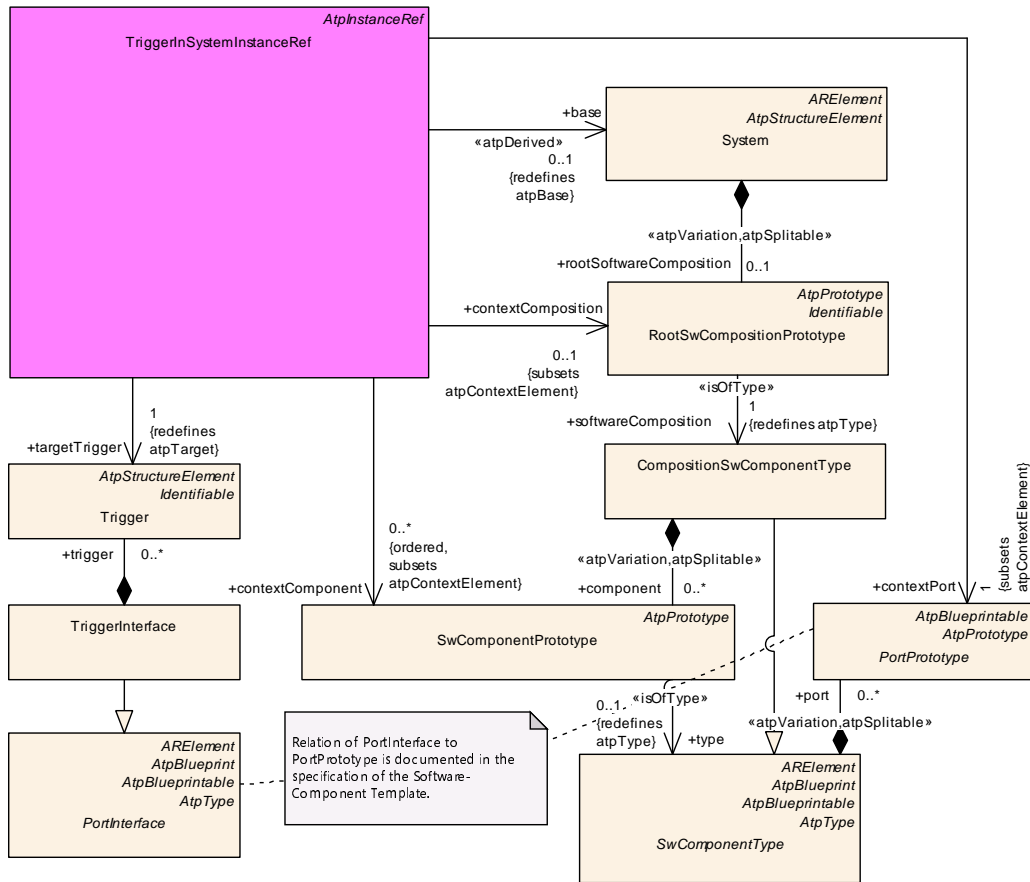


Figure B.10: TriggerInSystemInstanceRef

Class	TriggerInSystemInstanceRef			
Package	M2::AUTOSARTemplates::SystemTemplate::InstanceRefs			
Note				
Base	ARObject, AtpInstanceRef			
Aggregated by	PortElementToCommunicationResourceMapping.trigger, TriggerToSignalMapping.trigger			
Attribute	Type	Mult.	Kind	Note
base	System	0..1	ref	This represents that base of the InstanceRef <b>Stereotypes:</b> atpDerived <b>Tags:</b> xml.sequenceOffset=10
context Component (ordered)	SwComponent Prototype	*	ref	This represents the set of context components. The association is ordered because it needs to respect the nesting order. <b>Tags:</b> xml.sequenceOffset=30
context Composition	RootSwComposition Prototype	0..1	ref	This represents the reference to the RootSw Compositiontype representing a context of the Instance Ref. <b>Tags:</b> xml.sequenceOffset=20
contextPort	PortPrototype	1	ref	This represents the PortPrototype in which the target Trigger is located. <b>Tags:</b> xml.sequenceOffset=40
targetTrigger	Trigger	1	ref	This represents the target Trigger. <b>Tags:</b> xml.sequenceOffset=50

Table B.4: TriggerInSystemInstanceRef

If the referenced `Trigger` is part of a `PortInterface` of a `SwComponentPrototype` that is located within the `RootSwCompositionPrototype` then the `base` reference and the `contextComposition` reference to the `RootSwCompositionPrototype` shall be provided. If the referenced `Trigger` is part of a `PortInterface` of the `RootSwCompositionPrototype` itself then the `base` reference and the `contextComposition` reference to the `RootSwCompositionPrototype` shall be skipped and the `RootSwCompositionPrototype` shall be referenced as `contextComponent`.

## B.9 "PortGroup in System" InstanceRef

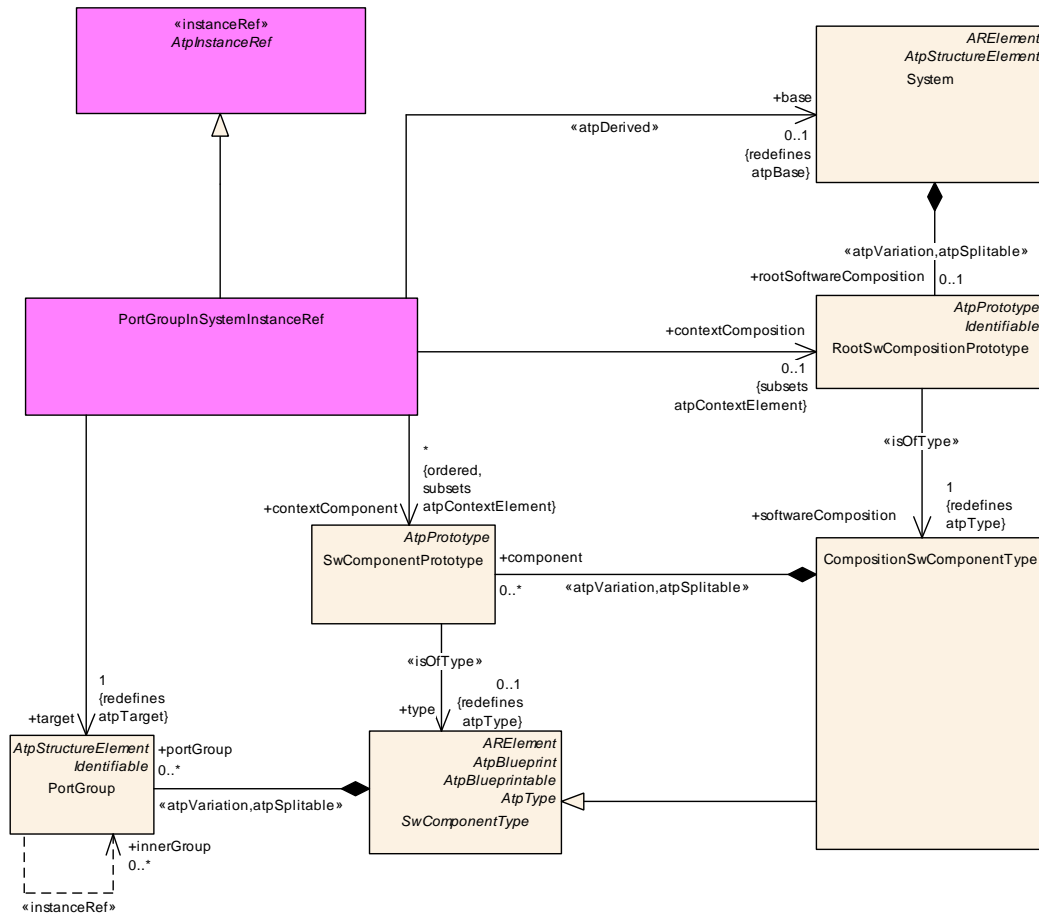


Figure B.11: PortGroupInSystem InstanceRef

Class	PortGroupInSystemInstanceRef			
Package	M2::AUTOSARTemplates::SystemTemplate::InstanceRefs			
Note				
Base	ARObject, AtpInstanceRef			
Aggregated by	ComManagementMapping.comManagementPortGroup, PncMapping.vfc			
Attribute	Type	Mult.	Kind	Note
base	System	0..1	ref	<b>Stereotypes:</b> atpDerived <b>Tags:</b> xml.sequenceOffset=10
context Component (ordered)	SwComponent Prototype	*	ref	<b>Tags:</b> xml.sequenceOffset=30
context Composition	RootSwComposition Prototype	0..1	ref	<b>Tags:</b> xml.sequenceOffset=20
target	PortGroup	1	ref	Link to a PortGroup that is defined in a component which is part of this CompositionSwComponentType. <b>Tags:</b> xml.sequenceOffset=40

Table B.5: PortGroupInSystemInstanceRef

If the referenced `PortGroup` is part of a `SwComponentPrototype` that is located within the `RootSwCompositionPrototype` then the `contextComposition` reference to the `RootSwCompositionPrototype` shall be provided. In this scenario we have a System Extract where the `RootSwComposition` may contain other compositions. If the referenced `PortGroup` is part of the `RootSwCompositionPrototype` itself then the `contextComposition` reference to the `RootSwCompositionPrototype` shall be skipped and the `RootSwCompositionPrototype` shall be referenced as `contextComponent`. In this scenario we have an Ecu Extract where the `RootSwComposition` contains `PortPrototypes` that describe the external communication.

## B.10 "DataPrototype in PortInterface" InstanceRef

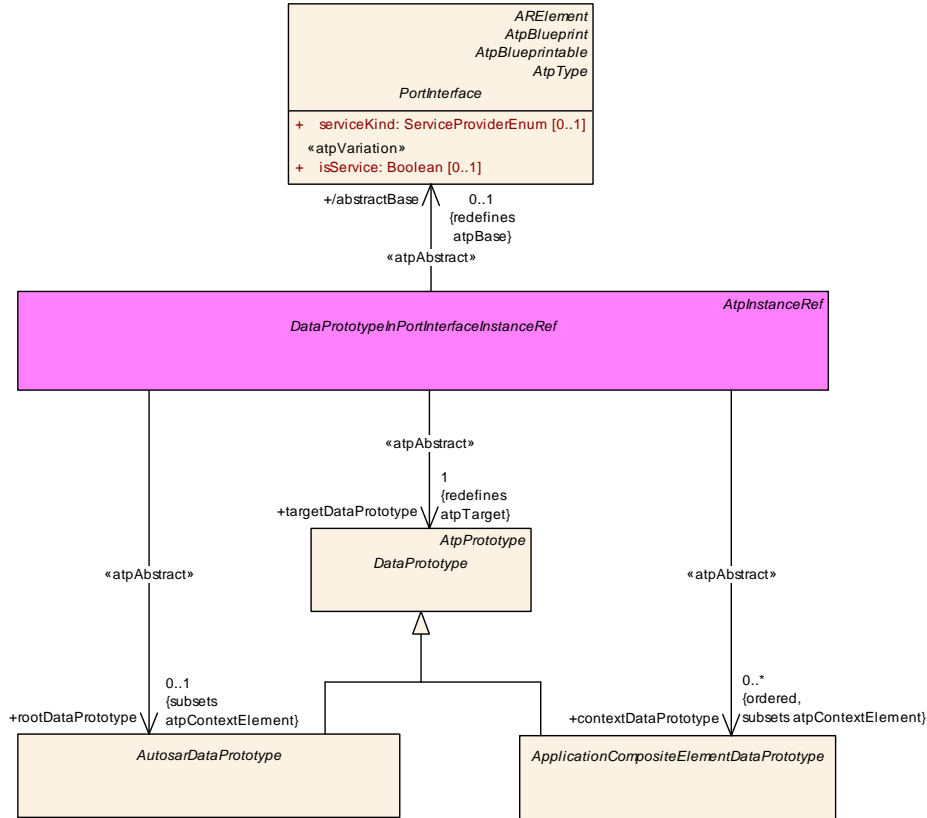


Figure B.12: DataPrototypeInPortInterfaceInstanceRef InstanceRef

<b>Class</b>	<i>DataPrototypeInPortInterfaceInstanceRef</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer::InstanceRef			
<b>Note</b>	This meta-class represents the ability to: <ul style="list-style-type: none"> <li>refer to a DataPrototype in the context of a PortInterface.</li> <li>refer to the internal structure of a DataPrototype which is typed by an ApplicationDatatype in the context of a PortInterface.</li> </ul>			
<b>Base</b>	ARObject, AtpInstanceRef			
<b>Subclasses</b>	DataPrototypeInClientServerInterfaceInstanceRef, DataPrototypeInSenderReceiverInterfaceInstanceRef			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
abstractBase	PortInterface	0..1	ref	<b>Stereotypes:</b> atpAbstract
contextData Prototype (ordered)	ApplicationComposite ElementDataPrototype	*	ref	<b>Stereotypes:</b> atpAbstract <b>Tags:</b> xml.sequenceOffset=20
rootData Prototype	AutosarDataPrototype	0..1	ref	<b>Stereotypes:</b> atpAbstract <b>Tags:</b> xml.sequenceOffset=10
targetData Prototype	DataPrototype	1	ref	<b>Stereotypes:</b> atpAbstract <b>Tags:</b> xml.sequenceOffset=30

Table B.6: DataPrototypeInPortInterfaceInstanceRef

If the referenced target DataPrototype is the root AutosarDataPrototype in a PortInterface then only the targetDataPrototype reference shall be provided.



If the referenced `DataPrototype` is part of a root `AutosarDataPrototype` that is part of a `PortInterface` then the `rootDataPrototype` shall be provided. The referenced `ApplicationCompositeElementDataPrototype` can be arbitrarily nested within a `DataPrototype`. In such a case additional `contextDataPrototype` references shall be provided.

Please note that the specializations `DataPrototypeInSenderReceiverInterfaceInstanceRef` and `DataPrototypeInClientServerInterfaceInstanceRef` work in the same way.

## C Harmonization between Upstream Templates and ECU Configuration

This chapter describes the mapping of the ECU Configuration parameters (M1 model) onto the meta-classes and attributes of the AUTOSAR upstream templates (System Template, SW Component Template and ECU Resource Template).

The relationships between upstream templates and ECU Configuration are described in order to answer typical questions like:

- How shall a supplier use the information in a System Description in order to fulfill the needs defined by the systems engineer?
- How is a tool vendor supposed to generate an ECU Configuration Description out of ECU Extract of System Description?

In addition to adhering to the mapping rules defined in this appendix an automated generation of an ECU Configuration Description out of ECU Extract of System Description should apply a certain implementation-specific name mangling when deriving the `shortName` of the `EcucContainerValue` elements to ensure that the resulting ECU Configuration Description is valid with respect to `constr_2508` of [2].

Please note that the tables contain the following columns:

**bsw module:** Name of BSW module

**bsw context:** Reference to parameter container

**bsw type:** Type of parameter

**bsw param:** Name of the BSW parameter

**bsw desc:** Description from the configuration document

**m2 template:** System Template, SW Component Template, ECU Resource Template

**m2 param:** Name of the upstream template parameter

**m2 description:** Description from the upstream template definition

**mapping rule:** Textual description on how to transform between M2 and BSW domains

**mapping type:**

- local: no mapping needed since parameter local to BSW
- partial: some data can be automatically mapped but not all
- full: all data can be automatically mapped

## C.1 ComStack

### C.1.1 Com Mapping

BSW Module	BSW Context	
Com	Com	
BSW Parameter		BSW Type
ComConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR COM module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00337]

BSW Module	BSW Context	
Com	Com/ComConfig	
BSW Parameter		BSW Type
ComDataMemSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Size of internal Com data in units of bytes (static memory allocation) - memory required by post-build configuration must be smaller than this constant. This parameter is needed only in case of post-build loadable implementation using static memory allocation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00783]

BSW Module	BSW Context	
Com	Com/ComConfig	
BSW Parameter		BSW Type
ComGwMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Each instance of this container defines one mapping of the integrated Signal Gateway.		
Template Description		
Arranges those signals (or SignalGroups) that are transferred by the gateway from one channel to the other in pairs and defines the mapping between them. Each pair consists in a source and a target referencing to a ISignalTriggering.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Multiplatform::ISignalMapping		
Mapping Rule		Mapping Type





In the System Extract an explicit ISignalMapping or an implicit ISignalMapping may be defined. Explicit Mapping: Create Container for each ISignalMapping.sourceSignal where the referenced ISignalTriggering refers to an ISignal. Implicit Mapping: If the ISignalMapping.sourceSignal refers to an ISignalTriggering where the ISignalTriggering refers to an ISignalGroup (and no explicit mapping is defined for the ISignal Group), then create Container for each ISignal referenced by the ISignalGroup where the short Name of the source ISignal matches the shortName of a destination ISignal of the ISignal Mapping.targetSignal ISignalGroup.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00544]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComGwDestination		ECUC-CHOICE-CONTAINER-DEF
<b>BSW Description</b>		
Each instance of this choice container allows to define one routing destination either by reference to an already configured COM signal / group signal or by a destination description container.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Multiplatform::ISignalMapping.targetSignal		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Explicit Mapping: Create Container for each targetSignal reference that is defined in the ISignal Mapping. Implicit Mapping: If the ISignalMapping.targetSignal refers to an ISignalTriggering where the ISignalTriggering refers to an ISignalGroup (and no explicit mapping is defined for the ISignal Group), then create Container for each ISignal referenced by the ISignalGroup where the short Name of the target ISignal matches the shortName of a source ISignal of the ISignal Mapping.sourceSignal ISignalGroup.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00546]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping/ComGwDestination	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComGwDestinationDescription		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Description of a gateway destination. This container allows defining a gateway destination without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.		
<b>Template Description</b>		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalIPdus and defines the position of the ISignal within an ISignalIPdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Informations can be derived from ISignalToIPduMapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00549]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription	
BSW Parameter	BSW Type	
ComBitPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order		
Template Description		
<p>This parameter is necessary to describe the bitposition of a signal within an SignalIPdu. It denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packing ByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p> <p>Please note that the way the bytes will be actually sent on the bus does not impact this representation: they will always be seen by the software as a byte array.</p> <p>If a mapping for the ISignalGroup is defined, this attribute is irrelevant and shall be ignored.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.startPosition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00259]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription	
BSW Parameter	BSW Type	
ComFilter	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>This container contains the configuration parameters of the AUTOSAR COM module's Filters.</p> <p>Note: On sender side the container is used to specify the transmission mode conditions.</p>		
Template Description		
Base class for data filters. The type of the filter is specified in attribute dataFilterType. Some of the filter types require additional arguments which are specified as attributes of this class.		
M2 Parameter		
CommonStructure::Filter::DataFilter		
Mapping Rule		Mapping Type
<p>Create container on the receiver side if the NonqueuedReceiverComSpec contains a DataFilter.</p> <p>Create Container on the sender side if the TransmissionModeCondition element contains a reference to this signal.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00339]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription/ComFilter	
BSW Parameter	BSW Type	
ComFilterAlgorithm	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		





The range of values is specified in the [17] specification, chapter 2.2.2, Reception Filtering.	
<b>Template Description</b>	
This attribute specifies the type of the filter.	
<b>M2 Parameter</b>	
CommonStructure::Filter::DataFilter.dataFilterType	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Mapping between DataFilterTypeEnum and ComFilterAlgorithm Enum is necessary.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00146]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterMask		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
<b>Template Description</b>		
Mask for old and new value.		
<b>M2 Parameter</b>		
CommonStructure::Filter::DataFilter.mask		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00235]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterMax		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
<b>Template Description</b>		
Value to specify the upper boundary		
<b>M2 Parameter</b>		
CommonStructure::Filter::DataFilter.max		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00317]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>





ComFilterMin	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.	
<b>Template Description</b>	
Value to specify the lower boundary	
<b>M2 Parameter</b>	
CommonStructure::Filter::DataFilter.min	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00318]

<b>BSW Module</b>	<b>BSW Context</b>
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription/ComFilter
<b>BSW Parameter</b>	<b>BSW Type</b>
ComFilterOffset	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering. Range = 0..(ComFilterPeriod-1)	
<b>Template Description</b>	
Specifies the initial number of messages to occur before the first message is passed	
<b>M2 Parameter</b>	
CommonStructure::Filter::DataFilter.offset	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00313]

<b>BSW Module</b>	<b>BSW Context</b>
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription/ComFilter
<b>BSW Parameter</b>	<b>BSW Type</b>
ComFilterPeriod	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter defines the period of the ComFilterAlgorithm ONE_EVERY_N.	
<b>Template Description</b>	
Specifies number of messages to occur before the message is passed again	
<b>M2 Parameter</b>	
CommonStructure::Filter::DataFilter.period	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00312]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription/ComFilter	
BSW Parameter	BSW Type	
ComFilterX	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
Template Description		
Value to compare with		
M2 Parameter		
CommonStructure::Filter::DataFilter.x		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00147]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription	
BSW Parameter	BSW Type	
ComGwIPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to an I-PDU of a Signal Gateway source or destination description.		
Template Description		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalPdus and defines the position of the ISignal within an ISignalPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
Mapping Rule		Mapping Type
Create reference for each existing ISignalToIPduMapping that is referenced from the regarded Signal Gateway.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00550]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription	
BSW Parameter	BSW Type	
ComSignalEndianness	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines the endianness of the signal's network representation.		
Template Description		
This parameter defines the order of the bytes of the signal and the packing into the SignalPdu. The byte ordering "Little Endian" (MostSignificantByteLast), "Big Endian" (MostSignificantByteFirst) and "Opaque" can be selected. For opaque data endianness conversion shall be configured to Opaque. The value of this attribute impacts the absolute position of the signal into the SignalPdu (see the startPosition attribute description).		
For an ISignalGroup the packingByteOrder is irrelevant and shall be ignored.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.packingByteOrder		







Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00157]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription	
BSW Parameter	BSW Type	
ComSignalInitValue	ECUC-STRING-PARAM-DEF	
BSW Description		
<p>Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0.</p> <p>In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0 (lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.</p>		
Template Description		
Initial value to be sent if sender component is not yet fully initialized, but receiver needs data already.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal. <a href="#">initValue</a> , SWComponentTemplate::Communication::NonqueuedSenderComSpec. <a href="#">initValue</a>		
Mapping Rule	Mapping Type	
It is possible to aggregate an initValue at the level of a ComSpec in the SWC Template. in case the System Description doesn't use a complete Software Component Description (VFB View) the init Value is defined in the System Template.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Com_00170]	

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription	
BSW Parameter	BSW Type	
ComTransferProperty	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.		
Template Description		
Defines how the referenced ISignal contributes to the send triggering of the ISignalPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping. <a href="#">transferProperty</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Com_00232]	

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwDestinationDescription	
BSW Parameter	BSW Type	
ComUpdateBitPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
<p>Bit position of update-bit inside I-PDU. If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.</p> <p>Range: 0..63 for CAN and LIN, 0..511 for CAN FD, 0..2031 for FlexRay, 0..4294967295 for TP.</p>		
Template Description		
<p>The UpdateIndicationBit indicates to the receivers that the signal (or the signal group) was updated by the sender. Length is always one bit. The UpdateIndicationBitPosition attribute describes the position of the update bit within the SignalIPdu. For Signals of a ISignalGroup this attribute is irrelevant and shall be ignored.</p> <p>Note that the exact bit position of the updateIndicationBitPosition is linked to the value of the attribute packingByteOrder because the method of finding the bit position is different for the values mostSignificantByteFirst and mostSignificantByteLast. This means that if the value of packingByteOrder is changed while the value of updateIndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing ISignalIPdu still undergoes a change.</p> <p>This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.updateIndicationBitPosition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00257]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination	
BSW Parameter	BSW Type	
ComGwSignal	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>This container allows specifying a gateway source or destination respectively with a reference to a ComSignal or a ComGroupSignal.</p>		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalTriggering.iSignal		
Mapping Rule		Mapping Type
<p>Explicit Mapping: Create Container if ISignal is referenced from ISignalMapping.sourceSignal or ISignalMapping.targetSignal via ISignalTriggering.</p> <p>Implicit Mapping: If the ISignalMapping.sourceSignal refers to an ISignalTriggering where the ISignalTriggering refers to an ISignalGroup (and no explicit mapping is defined for the ISignal Group), then create Container for each ISignal referenced by the ISignalGroup where the short Name of the source ISignal matches the shortName of a destination ISignal of the ISignal Mapping.targetSignal ISignalGroup. If the ISignalMapping.targetSignal refers to an ISignal Triggering where the ISignalTriggering refers to an ISignalGroup (and no explicit mapping is defined for the ISignalGroup), then create Container for each ISignal referenced by the ISignal Group where the shortName of the target ISignal matches the shortName of a source ISignal of the ISignalMapping.sourceSignal ISignalGroup.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00551]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwDestination/ComGwSignal	
BSW Parameter	BSW Type	
ComGwSignalRef	ECUC-CHOICE-REFERENCE-DEF	
BSW Description		
Reference to an object of a gateway relation. Either to a ComSignal or a ComGroupSignal.		
Template Description		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalPdus and defines the position of the ISignal within an ISignalPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
Mapping Rule		Mapping Type
Refers to the to be routed ComSignal or ComGroupSignal.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00547]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping	
BSW Parameter	BSW Type	
ComGwSource	ECUC-CHOICE-CONTAINER-DEF	
BSW Description		
This choice container allows the definition of the gateway source signal either by reference to an already configured COM signal / group signal or by a source description container.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Multiplatform::ISignalMapping.sourceSignal		
Mapping Rule		Mapping Type
<p>Explicit Mapping: Create Container for sourceSignal reference that is defined in the ISignal Mapping.</p> <p>Implicit Mapping: If the ISignalMapping.sourceSignal refers to an ISignalTriggering where the ISignalTriggering refers to an ISignalGroup (and no explicit mapping is defined for the ISignal Group), then create Container for each ISignal referenced by the ISignalGroup where the short Name of the source ISignal matches the shortName of a destination ISignal of the ISignal Mapping.targetSignal ISignalGroup.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00545]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwSource	
BSW Parameter	BSW Type	
ComGwSignal	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container allows specifying a gateway source or destination respectively with a reference to a ComSignal or a Com GroupSignal.		
Template Description		
M2 Parameter		





SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalTriggering. <a href="#">ISignal</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<p>Explicit Mapping: Create Container if ISignal is referenced from ISignalMapping.sourceSignal or ISignalMapping.targetSignal via ISignalTriggering.</p> <p>Implicit Mapping: If the ISignalMapping.sourceSignal refers to an ISignalTriggering where the ISignalTriggering refers to an ISignalGroup (and no explicit mapping is defined for the ISignal Group), then create Container for each ISignal referenced by the ISignalGroup where the short Name of the source ISignal matches the shortName of a destination ISignal of the ISignal Mapping.targetSignal ISignalGroup. If the ISignalMapping.targetSignal refers to an ISignal Triggering where the ISignalTriggering refers to an ISignalGroup (and no explicit mapping is defined for the ISignalGroup), then create Container for each ISignal referenced by the ISignal Group where the shortName of the target ISignal matches the shortName of a source ISignal of the ISignalMapping.sourceSignal ISignalGroup.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00551]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping/ComGwSource/ComGwSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComGwSignalRef		ECUC-CHOICE-REFERENCE-DEF
<b>BSW Description</b>		
Reference to an object of a gateway relation. Either to a ComSignal or a ComGroupSignal.		
<b>Template Description</b>		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalPdus and defines the position of the ISignal within an ISignalPdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Refers to the to be routed ComSignal or ComGroupSignal.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00547]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping/ComGwSource	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComGwSourceDescription		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Description of a gateway source. This container allows defining a gateway source without the configuration of a complete COM signal. This allows adding / changing gateway relations post build without the configuration of new signals.		
<b>Template Description</b>		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalPdus and defines the position of the ISignal within an ISignalPdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Informations can be derived from ISignalToIPduMapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00548]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwSource/ComGwSourceDescription	
BSW Parameter	BSW Type	
ComBitPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order		
Template Description		
This parameter is necessary to describe the bitposition of a signal within an SignalIPdu. It denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packing ByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.		
Please note that the way the bytes will be actually sent on the bus does not impact this representation: they will always be seen by the software as a byte array.		
If a mapping for the ISignalGroup is defined, this attribute is irrelevant and shall be ignored.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.startPosition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00259]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwSource/ComGwSourceDescription	
BSW Parameter	BSW Type	
ComBitSize	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN the size shall be configured by Com SignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.		
Template Description		
Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals.		
The ISignal length of zero bits is allowed.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.length		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00158]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwSource/ComGwSourceDescription	
BSW Parameter	BSW Type	
ComGwIPduRef	ECUC-REFERENCE-DEF	
BSW Description		





Reference to an I-PDU of a Signal Gateway source or destination description.	
<b>Template Description</b>	
An ISignalToIPduMapping describes the mapping of ISignals to ISignalIPdus and defines the position of the ISignal within an ISignalIPdu.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create reference for each existing ISignalToIPduMapping that is referenced from the regarded Signal Gateway.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00550]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping/ComGwSource/ComGwSourceDescription	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defines the endianness of the signal's network representation.		
<b>Template Description</b>		
This parameter defines the order of the bytes of the signal and the packing into the SignalIPdu. The byte ordering "Little Endian" (MostSignificantByteLast), "Big Endian" (MostSignificantByteFirst) and "Opaque" can be selected. For opaque data endianness conversion shall be configured to Opaque. The value of this attribute impacts the absolute position of the signal into the SignalIPdu (see the startPosition attribute description).		
For an ISignalGroup the packingByteOrder is irrelevant and shall be ignored.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.packingByteOrder		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00157]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComGwMapping/ComGwSource/ComGwSourceDescription	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSignalLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Description: For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.		
The supported maximum length is restricted by the used transportation system. For non TP-PDUs the maximum size of a PDU, and therefore also of any included signal, is limited by the concrete bus characteristic. For example, the limit is 8 bytes for CAN and LIN, 64 bytes for CAN FD and 254 for FlexRay.		
<b>Template Description</b>		
Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals.		
The ISignal length of zero bits is allowed.		
<b>M2 Parameter</b>		





SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.length	
Mapping Rule	Mapping Type
ComSignalLength = ISignal.length / 8 (i.e. value of baseTypeSize)	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00437]

BSW Module	BSW Context
Com	Com/ComConfig/ComGwMapping/ComGwSource/ComGwSourceDescription
BSW Parameter	BSW Type
ComSignalType	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.	
Template Description	
<p>With the aggregation of SwDataDefProps an ISignal specifies how it is represented on the network. This representation follows a particular policy. Note that this causes some redundancy which is intended and can be used to support flexible development methodology as well as subsequent integrity checks.</p> <p>If the policy "networkRepresentationFromComSpec" is chosen the network representation from the ComSpec that is aggregated by the PortPrototype shall be used. If the "override" policy is chosen the requirements specified in the Port Interface and in the ComSpec are not fulfilled by the networkRepresentationProps. In case the System Description doesn't use a complete Software Component Description (VFB View) the "legacy" policy can be chosen.</p>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.dataTypePolicy	
Mapping Rule	Mapping Type
<p>The mapping depends from the setting in the ISignal.dataTypePolicy:</p> <ul style="list-style-type: none"> <li>- ISignal.dataTypePolicy = override or legacy: SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.networkRepresentationProps.swBaseType</li> <li>- ISignal.dataTypePolicy = networkRepresentationFromComSpec: if defined on ComSpec: SWComponentTemplate::Communication::SenderComSpec.networkRepresentation.swBaseType SWComponentTemplate::Communication::SenderComSpec.compositeNetworkRepresentation.networkRepresentation.swBaseType SWComponentTemplate::Communication::ReceiverComSpec.networkRepresentation.swBaseType SWComponentTemplate::Communication::ReceiverComSpec.compositeNetworkRepresentation.networkRepresentation.swBaseType</li> <li>if not defined on ComSpec: CommonStructure::ImplementationDataTypes::ImplementationDataType.swDataDefProps.swBaseType Find the ImplementationDataType according to TPS_SYST_02079 and access SwDataDefProps.swBaseType.</li> </ul> <p>Consequence: If two SenderReceiverToSignalMappings that point to the same SystemSignal result in incompatible BaseTypes (see constr_1220 in SoftwareComponentTemplate) =&gt; ComSignalType should not be configured.</p> <ul style="list-style-type: none"> <li>- ISignal.dataTypePolicy = portInterfaceDefinition → option has atpStatus "removed", in consequence no mapping is available."</li> <li>- ISignal.dataTypePolicy = transformingISignal Hardcoded to UINT8_N or UINT8_DYN. Datatype can be derived from SystemSignal.dynamicLength: UINT8_N should be used if SystemSignal.dynamicLength = false UINT8_DYN should be used if SystemSignal.dynamicLength = true</li> </ul>	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00127]

BSW Module	BSW Context	
Com	Com/ComConfig/ComGwMapping/ComGwSource/ComGwSourceDescription	
BSW Parameter	BSW Type	
ComUpdateBitPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
<p>Bit position of update-bit inside I-PDU. If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.</p> <p>Range: 0..63 for CAN and LIN, 0..511 for CAN FD, 0..2031 for FlexRay, 0..4294967295 for TP.</p>		
Template Description		
<p>The UpdateIndicationBit indicates to the receivers that the signal (or the signal group) was updated by the sender. Length is always one bit. The UpdateIndicationBitPosition attribute describes the position of the update bit within the SignalIPdu. For Signals of a ISignalGroup this attribute is irrelevant and shall be ignored.</p> <p>Note that the exact bit position of the updateIndicationBitPosition is linked to the value of the attribute packingByteOrder because the method of finding the bit position is different for the values mostSignificantByteFirst and mostSignificantByteLast. This means that if the value of packingByteOrder is changed while the value of updateIndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing ISignalIPdu still undergoes a change.</p> <p>This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.updateIndicationBitPosition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00257]

BSW Module	BSW Context	
Com	Com/ComConfig	
BSW Parameter	BSW Type	
ComIPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>Contains the configuration parameters of the AUTOSAR COM module's I-PDUs.</p>		
Template Description		
<p>Represents the IPdus handled by Com. The ISignalIPdu assembled and disassembled in AUTOSAR COM consists of one or more signals. In case no multiplexing is performed this IPdu is routed to/from the Interface Layer.</p> <p>A maximum of one dynamic length signal per IPdu is allowed.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPdu		
Mapping Rule		Mapping Type
create container for each SignalIPdu that is transmitted by the regarded ECU.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00340]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	







ComIPduCallout	ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>	
This parameter defines the existence and the name of a callout function for the corresponding I-PDU. If this parameter is omitted no I-PDU callout shall take place for the corresponding I-PDU.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00387]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComIPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComIPduCancellationSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Defines for I-PDUs with ComIPduType NORMAL: If the underlying IF-modul supports cancellation of transmit requests. Defines for I-PDUs with ComIPduType TP: If the underlying TP-module supports RX and TX cancellation of ongoing requests.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00709]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComIPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComIPduDirection		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
The direction defines if this I-PDU, and therefore the contributing signals and signal groups, shall be sent or received.		
<b>Template Description</b>		
Communication Direction of the Connector Port (input or output Port).		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommConnectorPort.communicationDirection		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Find IPduTriggering of the regarded SignalIPdu. The IPduTriggering contains a reference to an IPduPort that is aggregated by the regarded ECU. If the communicationDirection of the Comm ConnectorPort is "in" than the IPdu is received.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00493]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComIPduGroupRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the I-PDU groups this I-PDU belongs to.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPduGroup.iSignalIPdu		
Mapping Rule		Mapping Type
Find IPduGroup that points to this SignalIPdu and create the reference.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00206]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComIPduHandleId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The numerical value used as the ID of this I-PDU. The ComIPduHandleId is required by the API calls Com_RxIndication, Com_TpRxIndication, Com_StartOfReception and Com_CopyRxData to receive I-PDUs from the PduR (ComIP-duDirection: Receive), as well as the PduId passed to an Rx-I-PDU-callout. For Tx-I-PDUs (ComIPduDirection: Send), this handle Id is used for the APIs calls Com_TxConfirmation, Com_TriggerTransmit, Com_TriggerIPDUSend or Com_TriggerIPDUSendWith MetaData, Com_CopyTxData and Com_TpTxConfirmation to transmit respectively confirm transmissions of I-PDUs, as well as the PduId passed to the Tx-I-PDU-callout configured with ComIPduCallout and/or ComIPduTriggerTransmitCallout.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00175]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComIPduMainFunctionRef	ECUC-CHOICE-REFERENCE-DEF	
BSW Description		
Reference to the Com_MainFunctionRx/Com_MainFunctionTx this I-PDU belongs to. Mandatory, if multiple main functions of the relevant type are defined.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_10012]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComIPduSignalGroupRef	ECUC-REFERENCE-DEF	
BSW Description		
References to all signal groups contained in this I-Pdu		
Template Description		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalPdus and defines the position of the ISignal within an ISignalPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
Mapping Rule		Mapping Type
Find ISignal in the ISignalPdu that refers to a ISignalGroup and create reference to this Group		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00519]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComIPduSignalProcessing	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
For the definition of the two modes Immediate and Deferred.		
Template Description		
Definition of the two signal processing modes Immediate and Deferred for both Tx and Rx IPdus.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPduPort.iPduSignalProcessing		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00119]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComIPduSignalRef	ECUC-REFERENCE-DEF	
BSW Description		
References to all signals contained in this I-PDU.		
Template Description		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalPdus and defines the position of the ISignal within an ISignalPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
Mapping Rule		Mapping Type
Find ISignal in the IPdu which refers to a SystemSignal and create reference to this Signal.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00518]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComIPduTriggerTransmitCallout	ECUC-FUNCTION-NAME-DEF	
BSW Description		
If there is a trigger transmit callout defined for this I-PDU this parameter contains the name of the callout function.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00765]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComIPduType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines if this I-PDU is a normal I-PDU that can be sent unfragmented or if this is a large I-PDU that shall be sent via the Transport Protocol of the underlying bus.		
Template Description		
Contains all configuration elements for AUTOSAR TP.		
M2 Parameter		
SystemTemplate::TransportProtocols::TpConfig		
Mapping Rule		Mapping Type
If this PduTriggering is referenced by a TpConnection then set this EnumerationLiteral to TP.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00761]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter	BSW Type	
ComMainFunctionRouteSignalsRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to ComMainFunctionRouteSignals which performs signal gateway related activities.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_10021]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter		BSW Type
ComPduIdRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00711]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu	
BSW Parameter		BSW Type
ComTxIPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains additional transmission related configuration parameters of the AUTOSAR COM module's I-PDUs.		
Template Description		
Represents the IPdus handled by Com. The ISignalIPdu assembled and disassembled in AUTOSAR COM consists of one or more signals. In case no multiplexing is performed this IPdu is routed to/from the Interface Layer.  A maximum of one dynamic length signal per IPdu is allowed.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPdu		
Mapping Rule		Mapping Type
create container if an ISignalIPdu is transmitted by the regarded ECU.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00496]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu	
BSW Parameter		BSW Type
ComMetaDataDefaultItem		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Defines a default value for a meta data item. Used for sending an I-PDU with meta data when it is triggered spontaneously (and not by Com_TriggerIPDUSendWithMetaData), and no meta data has been provided by the RTE. It represents a Meta DataItem of the referenced global PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_10022]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComMetaDataDefaultItem	
BSW Parameter		BSW Type
ComMetaDataDefaultValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Default value for MetaDataItem of the global PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_10023]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComMetaDataDefaultItem	
BSW Parameter		BSW Type
ComMetaDataItemRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a MetaDataItem of the global PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_10024]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu	
BSW Parameter		BSW Type
ComMinimumDelayTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
<p>Defines the Minimum Delay Time (MDT) between successive transmissions of this I-PDU in seconds. The MDT is independent of the possible different transmission modes. There is only one minimum delay time parameter for one I-PDU. The minimum delay timer is not reset by changing the transmission mode. Hence, it is not allowed to violate the minimum delay time by transmission mode changes. It is not possible to monitor the minimum delay time for I-PDUs that are requested using the Com_TriggerTransmit API.</p>		
Template Description		
Minimum Delay in seconds between successive transmissions of this I-PDU, independent of the Transmission Mode.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPduTiming.minimumDelay		
Mapping Rule		Mapping Type
Find IPduTiming for the transmitted IPdu and use the specified value.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00181]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu	
BSW Parameter	BSW Type	
ComTxIPduClearUpdateBit	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines when the update-bits of signals or signal groups, contained in this I-PDU, will be cleared.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00576]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu	
BSW Parameter	BSW Type	
ComTxIPduUnusedAreasDefault	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The AUTOSAR COM module fills not used areas of an I-PDU with this byte pattern. This attribute is mandatory to avoid undefined behaviour. This byte-pattern will be repeated throughout the I-PDU before any init-values or update-bits were set.		
Template Description		
AUTOSAR COM and AUTOSAR IPDUM are filling not used areas of an IPDU with this bit-pattern. This attribute is mandatory to avoid undefined behavior. This byte-pattern will be repeated throughout the IPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPdu.unusedBitPattern		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00017]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu	
BSW Parameter	BSW Type	
ComTxModeFalse	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to false.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::TransmissionModeDeclaration. transmissionModeFalseTiming		
Mapping Rule		Mapping Type
Create Container if a timing specification is defined for this IPdu.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00454]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeFalse	
BSW Parameter	BSW Type	
ComTxMode	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration parameters of the AUTOSAR COM module's transmission modes.		
Template Description		
<p>If the COM Transmission Mode is false the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeFalseTiming. If the COM Transmission Mode is true the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeTrueTiming.</p> <p>COM supports the following Transmission Modes:</p> <ul style="list-style-type: none"> <li>• Periodic (Cyclic Timing)</li> <li>• Direct /n-times (EventControlledTiming)</li> <li>• Mixed (Cyclic and EventControlledTiming are assigned)</li> <li>• None (no timing is assigned)</li> </ul>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::TransmissionModeTiming		
Mapping Rule		Mapping Type
Create Container if a timing specification is defined for this IPdu.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00351]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeFalse/ComTxMode	
BSW Parameter	BSW Type	
ComTxModeMode	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
<p>The available transmission modes described in [18] shall be extended by the additional mode None.</p> <p>The transmission mode None shall not have any further sub-attributes in the ComTxMode object.</p>		
Template Description		
<p>If the COM Transmission Mode is false the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeFalseTiming. If the COM Transmission Mode is true the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeTrueTiming.</p> <p>COM supports the following Transmission Modes:</p> <ul style="list-style-type: none"> <li>• Periodic (Cyclic Timing)</li> <li>• Direct /n-times (EventControlledTiming)</li> <li>• Mixed (Cyclic and EventControlledTiming are assigned)</li> <li>• None (no timing is assigned)</li> </ul>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::TransmissionModeTiming		
Mapping Rule		Mapping Type
Periodic Mode is described by CyclicTiming. Direct /n-times Mode is described by EventControlledTiming. Mixed Mode is described if Cyclic and EventControlledTimings are assigned. None is described if no timing is assigned.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00137]



BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeFalse/ComTxMode	
BSW Parameter		BSW Type
ComTxModeNumberOfRepetitions		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the number of repetitions for the transmission mode DIRECT and the event driven part of transmission mode MIXED.		
Template Description		
Defines the number of repetitions for the Direct/N-Times transmission mode and the event driven part of Mixed transmission mode.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::EventControlledTiming. <a href="#">numberOfRepetitions</a>		
Mapping Rule		Mapping Type
ComTxModeNumberOfRepetitions = EventControlledTiming.numberOfRepetitions		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00281]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeFalse/ComTxMode	
BSW Parameter		BSW Type
ComTxModeRepetitionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Defines the repetition period in seconds of the multiple transmissions in case ComTxModeNumberOfRepetitions is configured greater than or equal to 1 and ComTxModeMode is configured to DIRECT or MIXED. In case of the mixed transmission mode only the event driven part is affected.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::EventControlledTiming. <a href="#">repetitionPeriod</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00282]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeFalse/ComTxMode	
BSW Parameter		BSW Type
ComTxModeTimeOffset		ECUC-FLOAT-PARAM-DEF
BSW Description		
Defines the period in seconds between the start of the I-PDU by Com_IpduGroupStart and the first transmission request in case ComTxModeMode is configured to PERIODIC or MIXED. In case of the mixed transmission mode only the periodic part is affected.		
In case ComTxModeTimeOffset is omitted or configured to 0, the first periodic transmission shall be transmitted within the next invocation of Com_MainFunctionTx.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::CyclicTiming. <a href="#">timeOffset</a>		





Mapping Rule	Mapping Type
The value for the True and the False Transmission Mode can be derived from IPdu Timing. TransmissionModeDeclaration. TransmissionModeTiming element	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00180]

BSW Module	BSW Context
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeFalse/ComTxMode
BSW Parameter	BSW Type
ComTxModeTimePeriod	ECUC-FLOAT-PARAM-DEF
BSW Description	Defines the repetition period in seconds of the periodic transmission requests in case ComTxModeMode is configured to PERIODIC or MIXED. In case of the mixed transmission mode only the periodic part is affected.
Template Description	
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::CyclicTiming.timePeriod
Mapping Rule	Mapping Type
The value for the True and the False Transmission Mode can be derived from IPdu Timing. TransmissionModeDeclaration. TransmissionModeTiming element	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00178]

BSW Module	BSW Context
Com	Com/ComConfig/ComIPdu/ComTxIPdu
BSW Parameter	BSW Type
ComTxModeTrue	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to true.
Template Description	
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::TransmissionModeDeclaration.transmissionModeTrueTiming
Mapping Rule	Mapping Type
Create Container if a timing specification is defined for this IPdu.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00455]

BSW Module	BSW Context
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeTrue
BSW Parameter	BSW Type
ComTxMode	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes.





Template Description	
<p>If the COM Transmission Mode is false the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeFalseTiming. If the COM Transmission Mode is true the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeTrueTiming.</p> <p>COM supports the following Transmission Modes:</p> <ul style="list-style-type: none"> <li>• Periodic (Cyclic Timing)</li> <li>• Direct /n-times (EventControlledTiming)</li> <li>• Mixed (Cyclic and EventControlledTiming are assigned)</li> <li>• None (no timing is assigned)</li> </ul>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::TransmissionModeTiming	
Mapping Rule	Mapping Type
Create Container if a timing specification is defined for this IPdu.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00351]

BSW Module	BSW Context
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeTrue/ComTxMode
BSW Parameter	BSW Type
ComTxModeMode	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
<p>The available transmission modes described in [18] shall be extended by the additional mode None.</p> <p>The transmission mode None shall not have any further sub-attributes in the ComTxMode object.</p>	
Template Description	
<p>If the COM Transmission Mode is false the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeFalseTiming. If the COM Transmission Mode is true the timing is aggregated by the TransmissionModeTiming element in the role of transmissionModeTrueTiming.</p> <p>COM supports the following Transmission Modes:</p> <ul style="list-style-type: none"> <li>• Periodic (Cyclic Timing)</li> <li>• Direct /n-times (EventControlledTiming)</li> <li>• Mixed (Cyclic and EventControlledTiming are assigned)</li> <li>• None (no timing is assigned)</li> </ul>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::TransmissionModeTiming	
Mapping Rule	Mapping Type
Periodic Mode is described by CyclicTiming. Direct /n-times Mode is described by EventControlledTiming. Mixed Mode is described if Cyclic and EventControlledTimings are assigned. None is described if no timing is assigned.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00137]

BSW Module	BSW Context
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeTrue/ComTxMode
BSW Parameter	BSW Type
ComTxModeNumberOfRepetitions	ECUC-INTEGER-PARAM-DEF





<b>BSW Description</b>	
Defines the number of repetitions for the transmission mode DIRECT and the event driven part of transmission mode MIXED.	
<b>Template Description</b>	
Defines the number of repetitions for the Direct/N-Times transmission mode and the event driven part of Mixed transmission mode.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::EventControlledTiming. <a href="#">numberOfRepetitions</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
ComTxModeNumberOfRepetitions = EventControlledTiming.numberOfRepetitions	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00281]

<b>BSW Module</b>	<b>BSW Context</b>
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeTrue/ComTxMode
<b>BSW Parameter</b>	<b>BSW Type</b>
ComTxModeRepetitionPeriod	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Defines the repetition period in seconds of the multiple transmissions in case ComTxModeNumberOfRepetitions is configured greater than or equal to 1 and ComTxModeMode is configured to DIRECT or MIXED. In case of the mixed transmission mode only the event driven part is affected.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::EventControlledTiming. <a href="#">repetitionPeriod</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00282]

<b>BSW Module</b>	<b>BSW Context</b>
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeTrue/ComTxMode
<b>BSW Parameter</b>	<b>BSW Type</b>
ComTxModeTimeOffset	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Defines the period in seconds between the start of the I-PDU by Com_IpduGroupStart and the first transmission request in case ComTxModeMode is configured to PERIODIC or MIXED. In case of the mixed transmission mode only the periodic part is affected.	
In case ComTxModeTimeOffset is omitted or configured to 0, the first periodic transmission shall be transmitted within the next invocation of Com_MainFunctionTx.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::CyclicTiming. <a href="#">timeOffset</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The value for the True and the False Transmission Mode can be derived from IPdu Timing.TransmissionModeDeclaration.TransmissionModeTiming element	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00180]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPdu/ComTxIPdu/ComTxModeTrue/ComTxMode	
BSW Parameter		BSW Type
ComTxModeTimePeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Defines the repetition period in seconds of the periodic transmission requests in case ComTxModeMode is configured to PERIODIC or MIXED. In case of the mixed transmission mode only the periodic part is affected.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Timing::CyclicTiming.timePeriod		
Mapping Rule		Mapping Type
The value for the True and the False Transmission Mode can be derived from IPdu Timing.TransmissionModeDeclaration.TransmissionModeTiming element		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00178]

BSW Module	BSW Context	
Com	Com/ComConfig	
BSW Parameter		BSW Type
ComIPduGroup		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the configuration parameters of the AUTOSAR COM module's I-PDU groups.		
Template Description		
The AUTOSAR COM Layer is able to start and to stop sending and receiving configurable groups of I-Pdus during runtime. An ISignalIPduGroup contains either ISignalPdus or ISignalIPduGroups.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPduGroup		
Mapping Rule		Mapping Type
Create container for each CoreCommunication::ISignalIPduGroup that is contained in the ECU Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00341]

BSW Module	BSW Context	
Com	Com/ComConfig/ComIPduGroup	
BSW Parameter		BSW Type
ComIPduGroupGroupRef		ECUC-REFERENCE-DEF
BSW Description		
References to all I-PDU groups that includes this I-PDU group. If this reference is omitted this I-PDU group does not belong to another I-PDU group.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPduGroup.containedISignalIPduGroup		
Mapping Rule		Mapping Type





If the IPduGroup has a reference to a contained IPduGroup then create this reference. Please note that in COM the contained IPduGroup points to the containing IPduGroup and in System Template the containing ISignalPduGroup points to the contained ISignalPduGroup.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00185]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComIPduGroup	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComIPduGroupHandleId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The numerical value used as the ID of this I-PDU Group . The ComIPduGroupHandleId is required by the API calls to start and stop I-PDU Groups. Range: 0 .. (ComSupportedIPduGroups-1)		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00184]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMainFunctionRouteSignals		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Each element of this container defines one instance of Com_MainFunctionRouteSignals.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_10013]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComMainFunctionRouteSignals	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMainRouteSignalsPartitionRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to EcucPartition, where the according Com_MainFunction instance is assigned to.		
<b>Template Description</b>		
<b>M2 Parameter</b>		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_10015]

BSW Module	BSW Context	
Com	Com/ComConfig/ComMainFunctionRouteSignals	
BSW Parameter		BSW Type
ComMainRouteSignalsTimeBase		ECUC-FLOAT-PARAM-DEF
BSW Description		
<p>The period between successive calls to according instance of Com_MainFunctionRouteSignals in seconds. This parameter may be used by the COM generator to transform the values of the reception related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific.</p> <p>The COM module (generator) may rely on the fact that Com_MainFunctionRouteSignals is scheduled according to the value configured here.</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Com_10016]	

BSW Module	BSW Context	
Com	Com/ComConfig	
BSW Parameter		BSW Type
ComMainFunctionRx		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Each element of this container defines one instance of Com_MainFunctionRx.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Com_10011]	

BSW Module	BSW Context	
Com	Com/ComConfig/ComMainFunctionRx	
BSW Parameter		BSW Type
ComMainRxPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to EcucPartition, where the according Com_MainFunction instance is assigned to.		





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_10017]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComMainFunctionRx	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMainRxTimeBase		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
<p>The period between successive calls to according instance of Com_MainFunctionRx in seconds. This parameter may be used by the COM generator to transform the values of the reception related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific. The COM module (generator) may rely on the fact that Com_MainFunctionRx is scheduled according to the value configured here.</p>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_10018]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMainFunctionTx		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Each element of this container defines one instance of Com_MainFunctionTx.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_10014]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComMainFunctionTx	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMainTxPartitionRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		







Reference to EcucPartition, where the according Com_MainFunction instance is assigned to.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_10019]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComMainFunctionTx	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMainTxTimeBase		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
<p>The period between successive calls to according instance of Com_MainFunctionTx in seconds. This parameter may be used by the COM generator to transform the values of the reception related timing configuration parameters of the COM module to internal implementation specific counter or tick values. The COM module's internal timing handling is implementation specific.</p> <p>The COM module (generator) may rely on the fact that Com_MainFunctionTx is scheduled according to the value configured here.</p>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_10010]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComMainFunctionTx	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComPreparationNotification		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
<p>This callback function indicates that the signals/signal groups to be sent via a dedicated Com_MainFunctionTx instance will now be prepared for transmission.</p> <p>If this parameter is omitted no notification shall take place.</p>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_10020]	

BSW Module	BSW Context	
Com	Com/ComConfig	
BSW Parameter	BSW Type	
ComMaxIPduCnt	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of IPdus. This parameter is needed only in case of post-build loadable implementation using static memory allocation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00782]

BSW Module	BSW Context	
Com	Com/ComConfig	
BSW Parameter	BSW Type	
ComSignal	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Contains the configuration parameters of the AUTOSAR COM module's signals.		
Template Description		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalIPdus and defines the position of the ISignal within an ISignalIPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
Mapping Rule		Mapping Type
A ComSignal container shall be created for an ISignal that is contained in an ISignalIPdu which the Com module is sending.  The creation of a ComSignal container may be omitted for an ISignal that is contained in an ISignal IPdu which the Com module is receiving if no Rx ISignalPort exists for the ISignal.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00344]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal	
BSW Parameter	BSW Type	
ComBitPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order		
Template Description		





<p>This parameter is necessary to describe the bitposition of a signal within an SignalIPdu. It denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packing ByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p> <p>Please note that the way the bytes will be actually sent on the bus does not impact this representation: they will always be seen by the software as a byte array.</p> <p>If a mapping for the ISignalGroup is defined, this attribute is irrelevant and shall be ignored.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.startPosition	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00259]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ComBitSize	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN the size shall be configured by Com SignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.		
<b>Template Description</b>		
Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals.		
The ISignal length of zero bits is allowed.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.length		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00158]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ComDataInvalidAction	ECUC-ENUMERATION-PARAM-DEF	
<b>BSW Description</b>		
This parameter defines the action performed upon reception of an invalid signal. Relating to signal groups the action in case if one of the included signals is an invalid signal. If Replace is used the ComSignalInitValue will be used for the replacement.		
<b>Template Description</b>		
<b>InvalidationPolicy:</b> Specifies whether the component can actively invalidate a particular dataElement.		
If no invalidationPolicy points to a dataElement this is considered to yield the identical result as if the handleInvalid attribute was set to dontInvalidate.		
<b>ISignalPort.handleInvalid:</b> This attribute defines how invalidation is applied to the ISignals received in the context of this ISignalPort.		





<b>M2 Parameter</b>	
SWComponentTemplate::PortInterface::InvalidationPolicy, SystemTemplate::Fibex::FibexCore::Core Communication::SignalPort.handleInvalid	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If strategy HandleInvalidEnum.keep is defined then set ComDataInvalidAction to NOTIFY. If strategy HandleInvalidEnum.replace is defined then set ComDataInvalidAction to REPLACE. In all other cases the ComDataInvalidAction shall not be configured.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00314]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilter		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the configuration parameters of the AUTOSAR COM module's Filters. Note: On sender side the container is used to specify the transmission mode conditions.		
<b>Template Description</b>		
Base class for data filters. The type of the filter is specified in attribute dataFilterType. Some of the filter types require additional arguments which are specified as attributes of this class.		
<b>M2 Parameter</b>		
CommonStructure::Filter::DataFilter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create container on the receiver side if the NonqueuedReceiverComSpec contains a DataFilter. Create Container on the sender side if the TransmissionModeCondition element contains a reference to this signal.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00339]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterAlgorithm		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
The range of values is specified in the [17] specification, chapter 2.2.2, Reception Filtering.		
<b>Template Description</b>		
This attribute specifies the type of the filter.		
<b>M2 Parameter</b>		
CommonStructure::Filter::DataFilter.dataFilterType		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Mapping between DataFilterTypeEnum and ComFilterAlgorithm Enum is necessary.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00146]	

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal/ComFilter	
BSW Parameter	BSW Type	
ComFilterMask	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
Template Description		
Mask for old and new value.		
M2 Parameter		
CommonStructure::Filter::DataFilter. <a href="#">mask</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00235]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal/ComFilter	
BSW Parameter	BSW Type	
ComFilterMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
Template Description		
Value to specify the upper boundary		
M2 Parameter		
CommonStructure::Filter::DataFilter. <a href="#">max</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00317]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal/ComFilter	
BSW Parameter	BSW Type	
ComFilterMin	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
Template Description		
Value to specify the lower boundary		
M2 Parameter		
CommonStructure::Filter::DataFilter. <a href="#">min</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00318]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal/ComFilter	
BSW Parameter	BSW Type	
ComFilterOffset	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering. Range = 0..(ComFilterPeriod-1)		
Template Description		
Specifies the initial number of messages to occur before the first message is passed		
M2 Parameter		
CommonStructure::Filter::DataFilter.offset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00313]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal/ComFilter	
BSW Parameter	BSW Type	
ComFilterPeriod	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the period of the ComFilterAlgorithm ONE_EVERY_N.		
Template Description		
Specifies number of messages to occur before the message is passed again		
M2 Parameter		
CommonStructure::Filter::DataFilter.period		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00312]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal/ComFilter	
BSW Parameter	BSW Type	
ComFilterX	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
Template Description		
Value to compare with		
M2 Parameter		
CommonStructure::Filter::DataFilter.x		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00147]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal	
BSW Parameter	BSW Type	
ComFirstTimeout	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>Defines the length of the first deadline monitoring timeout period in seconds. This timeout is used immediately after start (or restart) of the deadline monitoring service. The timeout period of the successive periods is configured by ECUC_Com_00263.</p>		
Template Description		
<ul style="list-style-type: none"> <li>ISignalPort with communicationDirection = in: Optional first timeout value in seconds for the reception of the ISignal.</li> <li>ISignalPort with communicationDirection = out: Optional first timeout value in seconds for transmission deadline monitoring.</li> </ul>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalPort.firstTimeout		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00183]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal	
BSW Parameter	BSW Type	
ComHandleId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
<p>The numerical value used as the ID. This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00165]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal	
BSW Parameter	BSW Type	
ComInitialValueOnly	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>This parameter defines that the respective signal's initial value shall be put into the respective PDU but there will not be any update of the value through the users (e.g. RTE, SwCluC). Thus the Com implementation does not need to expect any API calls for this signal (group).</p>		
Template Description		
<p>Connectors reception or send port on the referenced channel referenced by an ISignalTriggering. If different timeouts or Data Filters for ISignals need to be specified several ISignalPorts may be created.</p>		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalPort	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Tx: If an ISignal has no ISignalPort assigned a ComSignal shall always be created in the transmitting ECUs in order to send the init value. Rx: If an ISignal has no ISignalPort assigned there is no need for the existence of a ComSignal in the rec. Ecu	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00811]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComRxDataTimeoutAction		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the action performed upon expiration of the reception deadline monitoring timer.		
<b>Template Description</b>		
This attribute controls the behavior with respect to the handling of timeouts.		
<b>M2 Parameter</b>		
SWComponentTemplate::Communication::NonqueuedReceiverComSpec.handleTimeoutType		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<p>If a full DataMapping exists for the SystemSignal and there is a single receiver on this ECU then this information shall be configured in accordance with the configured NonqueuedReceiverCom Spec.</p> <p>If a full DataMapping exists for the SystemSignal and there are multiple receivers on this ECU then this information is available in the NonqueuedReceiverComSpecs. In this case the attribute Com RxDataTimeoutAction of the related ComSignal/ComSignalGroup shall be configured to NONE to ensure that the RTE always has access to the last received value. Please note that the SWS RTE defines an algorithm to implement the applicable timeout action.</p>		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00412]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSignalDataInvalidValue		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
<p>Defines the data invalid value of the signal.</p> <p>In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0 (lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.</p>		
<b>Template Description</b>		







<p><b>InvalidationPolicy:</b> Specifies whether the component can actively invalidate a particular dataElement.</p> <p>If no InvalidationPolicy points to a dataElement this is considered to yield the identical result as if the handleInvalid attribute was set to dontInvalidate.</p> <p><b>SwDataDefProps.invalidValue:</b> Optional value to express invalidity of the actual data element.</p>	
<b>M2 Parameter</b>	
SWComponentTemplate::PortInterface::InvalidationPolicy, DataDictionary::DataDefProperties::SwDataDefProps. <a href="#">invalidValue</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
ComSignalDataInvalidValue is only derived 1:1 from the SwDataDefProps.invalidValue if the InvalidationPolicy equals keep or replace. In all other cases of InvalidationPolicy the ComSignalDataInvalidValue shall not be configured.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00391]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defines the endianness of the signal's network representation.		
<b>Template Description</b>		
This parameter defines the order of the bytes of the signal and the packing into the SignalPdu. The byte ordering "Little Endian" (MostSignificantByteLast), "Big Endian" (MostSignificantByteFirst) and "Opaque" can be selected. For opaque data endianness conversion shall be configured to Opaque. The value of this attribute impacts the absolute position of the signal into the SignalPdu (see the startPosition attribute description).		
For an ISignalGroup the packingByteOrder is irrelevant and shall be ignored.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping. <a href="#">packingByteOrder</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00157]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSignalInitValue		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		





<p>Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0.</p> <p>In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0 (lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.</p>	
<b>Template Description</b>	
Initial value to be sent if sender component is not yet fully initialized, but receiver needs data already.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal. <a href="#">initValue</a> , SWComponent Template::Communication::NonqueuedSenderComSpec. <a href="#">initValue</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
It is possible to aggregate an initValue at the level of a ComSpec in the SWC Template. in case the System Description doesn't use a complete Software Component Description (VFB View) the init Value is defined in the System Template.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00170]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ComSignalLength	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
<p>Description: For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.</p> <p>The supported maximum length is restricted by the used transportation system. For non TP-PDUs the maximum size of a PDU, and therefore also of any included signal, is limited by the concrete bus characteristic. For example, the limit is 8 bytes for CAN and LIN, 64 bytes for CAN FD and 254 for FlexRay.</p>		
<b>Template Description</b>		
<p>Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals.</p> <p>The ISignal length of zero bits is allowed.</p>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal. <a href="#">length</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
ComSignalLength = ISignal.length / 8 (i.e. value of baseTypeSize)	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00437]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ComSignalType	ECUC-ENUMERATION-PARAM-DEF	





<b>BSW Description</b>	
The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.	
<b>Template Description</b>	
With the aggregation of SwDataDefProps an ISignal specifies how it is represented on the network. This representation follows a particular policy. Note that this causes some redundancy which is intended and can be used to support flexible development methodology as well as subsequent integrity checks.	
If the policy "networkRepresentationFromComSpec" is chosen the network representation from the ComSpec that is aggregated by the PortPrototype shall be used. If the "override" policy is chosen the requirements specified in the Port Interface and in the ComSpec are not fulfilled by the networkRepresentationProps. In case the System Description doesn't use a complete Software Component Description (VFB View) the "legacy" policy can be chosen.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.dataTypePolicy	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<p>The mapping depends from the setting in the ISignal.dataTypePolicy:</p> <ul style="list-style-type: none"> <li>- ISignal.dataTypePolicy = override or legacy: SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.networkRepresentationProps.swBaseType</li> <li>- ISignal.dataTypePolicy = networkRepresentationFromComSpec: if defined on ComSpec: SWComponentTemplate::Communication::SenderComSpec.networkRepresentation.swBaseType SWComponentTemplate::Communication::SenderComSpec.compositeNetworkRepresentation.networkRepresentation.swBaseType</li> <li>SWComponentTemplate::Communication::ReceiverComSpec.networkRepresentation.swBaseType SWComponentTemplate::Communication::ReceiverComSpec.compositeNetworkRepresentation.networkRepresentation.swBaseType</li> </ul> <p>if not defined on ComSpec: CommonStructure::ImplementationDataTypes::ImplementationDataType.swDataDefProps.swBaseType Find the ImplementationDataType according to TPS_SYST_02079 and access SwDataDefProps.swBaseType.</p> <p>Consequence: If two SenderReceiverToSignalMappings that point to the same SystemSignal result in incompatible BaseTypes (see constr_1220 in SoftwareComponentTemplate) =&gt; ComSignalType should not be configured.</p> <ul style="list-style-type: none"> <li>- ISignal.dataTypePolicy = portInterfaceDefinition -&gt; option has atpStatus "removed", in consequence no mapping is available."</li> <li>- ISignal.dataTypePolicy = transformingISignal Hardcoded to UINT8_N or UINT8_DYN. Datatype can be derived from SystemSignal.dynamicLength: UINT8_N should be used if SystemSignal.dynamicLength = false UINT8_DYN should be used if SystemSignal.dynamicLength = true</li> </ul>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00127]



<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignal	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ComSystemTemplateSystemSignalRef	ECUC-FOREIGN-REFERENCE-DEF	
<b>BSW Description</b>		
Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template) which this ComSignal (or ComGroupSignal) represents.		
<b>Template Description</b>		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalIPdus and defines the position of the ISignal within an ISignalIPdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
<b>Mapping Rule</b>	<b>Mapping Type</b>	



1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00002]

BSW Module	BSW Context
Com	Com/ComConfig/ComSignal
BSW Parameter	BSW Type
ComTimeout	ECUC-FLOAT-PARAM-DEF
BSW Description	
Defines the length of the deadline monitoring timeout period in seconds. The period for the first timeout period can be configured separately by ECUC_Com_00183.	
Template Description	
<p><b>ISignalPort.timeout:</b></p> <ul style="list-style-type: none"> <li>ISignalPort with communicationDirection = in: Optional timeout value in seconds for the reception of the ISignal. The attribute value is used to configure the ComTimeout in the COM module. The RTE ignores this attribute. The timeout can also be specified with the NonqueuedReceiverComSpec.aliveTimeout attribute. If a full DataMapping exists for the SystemSignal and the value is available in the configured ReceiverComSpec, then the timeout value in the ReceiverComSpec overrides this optional timeout specification during the creation of the Base Ecu Configuration of the COM module.</li> <li>ISignalPort with communicationDirection = out: Optional timeout value in seconds for the transmission of the ISignal. The attribute value is used to configure the ComTimeout in the COM module. The RTE ignores this attribute. The timeout can also be specified with the enderComSpec.transmissionAcknowledge.timeout attribute. If a full DataMapping exists for the SystemSignal and the value is available in the configured SenderComSpec, then the timeout value in the SenderComSpec overrides this optional timeout specification during the creation of the Base Ecu Configuration of the COM module.</li> </ul> <p>This attribute can be used in the following cases:</p> <ul style="list-style-type: none"> <li>legacy signal where the System Description doesn't use a complete Software Component Description (VFB View) and where the DataMapping is missing.</li> <li>bus monitoring use cases in which the DataMapping is ignored.</li> </ul> <p><b>TransmissionAcknowledgementRequest.timeout:</b> Number of seconds before an error is reported or in case of allowed redundancy, the value is sent again.</p> <p><b>NonqueuedReceiverComSpec.aliveTimeout:</b> Specify the amount of time (in seconds) after which the software component (via the RTE) needs to be notified if the corresponding data item have not been received according to the specified timing description.</p> <p>If the aliveTimeout attribute is 0 no timeout monitoring shall be performed.</p>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalPort.timeout, SWComponentTemplate::Communication::TransmissionAcknowledgementRequest.timeout, SWComponentTemplate::Communication::NonqueuedReceiverComSpec.aliveTimeout	
Mapping Rule	Mapping Type
<p>TX Signals: If a full DataMapping exist for the SystemSignal this information may be available from a configured SenderComSpec.transmissionAcknowledge.timeout that specifies the amount of time (in seconds) after which the software component (via the RTE) needs to be notified if the corresponding data item have not been transmitted according to the specified timing description. In this case the timeout value in SenderComSpec overrides the optional timeout specification in the System Template defined on the ISignalPort.</p> <p>RX Signals: If a full DataMapping exist for the SystemSignal this information may be available from a configured NonqueuedReceiverComSpec.aliveTimeout. In this case the timeout value in ReceiverComSpec overrides the optional timeout specification in the System Template defined on the ISignalPort. Please note that the SWS_RTE defines an algorithm to finally set the applicable timeout value.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00263]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal	
BSW Parameter	BSW Type	
ComTimeoutSubstitutionValue	ECUC-STRING-PARAM-DEF	
BSW Description		
<p>The signal substitution value will be used in case of a timeout and ComRxDataTimeoutAction is set to SUBSTITUTE. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00.</p> <p>In case of UINT8_DYN the initial size shall be 0.</p> <p>In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification.</p> <p>In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification.</p> <p>In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.</p> <p>In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.</p>		
Template Description		
Defines and enables the ComTimeoutSubstitution for this ISignal.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.timeoutSubstitutionValue		
Mapping Rule		Mapping Type
<p>The mapping of ComTimeoutSubstitutionValue depends on the setting in the ISignal.dataTypePolicy:</p> <ul style="list-style-type: none"> <li>- ISignal.dataTypePolicy = override or legacy: SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.timeoutSubstitutionValue</li> <li>- ISignal.dataTypePolicy = networkRepresentationFromComSpec: SWComponentTemplate::Communication::NonequeuedReceiverComSpec.timeoutSubstitutionValue</li> <li>- ISignal.dataTypePolicy = transformingISignal this is not supported.</li> </ul>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_10006]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignal	
BSW Parameter	BSW Type	
ComTransferProperty	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.		
Template Description		
Defines how the referenced ISignal contributes to the send triggering of the ISignalIPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.transferProperty		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00232]

BSW Module		BSW Context	
Com		Com/ComConfig/ComSignal	
BSW Parameter		BSW Type	
ComUpdateBitPosition		ECUC-INTEGER-PARAM-DEF	
BSW Description			
<p>Bit position of update-bit inside I-PDU. If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.</p> <p>Range: 0..63 for CAN and LIN, 0..511 for CAN FD, 0..2031 for FlexRay, 0..4294967295 for TP.</p>			
Template Description			
<p>The UpdateIndicationBit indicates to the receivers that the signal (or the signal group) was updated by the sender. Length is always one bit. The UpdateIndicationBitPosition attribute describes the position of the update bit within the SignalPdu. For Signals of a ISignalGroup this attribute is irrelevant and shall be ignored.</p> <p>Note that the exact bit position of the updateIndicationBitPosition is linked to the value of the attribute packingByteOrder because the method of finding the bit position is different for the values mostSignificantByteFirst and mostSignificantByteLast. This means that if the value of packingByteOrder is changed while the value of updateIndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing ISignalPdu still undergoes a change.</p> <p>This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p>			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.updateIndicationBitPosition			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_Com_00257]

BSW Module		BSW Context	
Com		Com/ComConfig	
BSW Parameter		BSW Type	
ComSignalGroup		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
<p>Contains the configuration parameters of the AUTOSAR COM module's signal groups.</p>			
Template Description			
<p>SignalGroup of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal Group is sent in different SignalPdus to multiple receivers.</p> <p>An ISignalGroup refers to a set of ISignals that shall always be kept together. A ISignalGroup represents a COM Signal Group.</p> <p>Therefore it is recommended to put the ISignalGroup in the same Package as ISignals (see atp.recommendedPackage)</p>			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalGroup			
Mapping Rule			Mapping Type
<p>A ComSignalGroup container shall be created for an ISignalGroup that is contained in an ISignal IPdu which the Com module is sending.</p> <p>The creation of a ComSignalGroup container may be omitted for an ISignalGroup that is contained in an ISignalPdu which the Com module is receiving if no Rx ISignalPort exists for the ISignal Group.</p>			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_Com_00345]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup	
BSW Parameter	BSW Type	
ComDataInvalidAction	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
<p>This parameter defines the action performed upon reception of an invalid signal. Relating to signal groups the action in case if one of the included signals is an invalid signal. If Replace is used the ComSignalInitValue will be used for the replacement.</p>		
Template Description		
<p><b>InvalidationPolicy:</b> Specifies whether the component can actively invalidate a particular dataElement. If no invalidationPolicy points to a dataElement this is considered to yield the identical result as if the handleInvalid attribute was set to dontInvalidate.</p> <p><b>ISignalPort.handleInvalid:</b> This attribute defines how invalidation is applied to the ISignals received in the context of this ISignalPort.</p>		
M2 Parameter		
SWComponentTemplate::PortInterface::InvalidationPolicy, SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalPort. <a href="#">handleInvalid</a>		
Mapping Rule	Mapping Type	
If strategy HandleInvalidEnum.keep is defined then set ComDataInvalidAction to NOTIFY. If strategy HandleInvalidEnum.replace is defined then set ComDataInvalidAction to REPLACE. In all other cases the ComDataInvalidAction shall not be configured.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Com_00314]	

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup	
BSW Parameter	BSW Type	
ComFirstTimeout	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>Defines the length of the first deadline monitoring timeout period in seconds. This timeout is used immediately after start (or restart) of the deadline monitoring service. The timeout period of the successive periods is configured by ECUC_Com_00263.</p>		
Template Description		
<ul style="list-style-type: none"> <li>ISignalPort with communicationDirection = in: Optional first timeout value in seconds for the reception of the ISignal.</li> <li>ISignalPort with communicationDirection = out: Optional first timeout value in seconds for transmission deadline monitoring.</li> </ul>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalPort. <a href="#">firstTimeout</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Com_00183]	

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup	
BSW Parameter	BSW Type	





ComGroupSignal	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container contains the configuration parameters of group signals. I.e. signals that are included within a signal group.	
<b>Template Description</b>	
Signal of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal is sent in different Signal IPdus to multiple receivers.	
To support the RTE "signal fan-out" each SignalIPdu contains ISignals. If the same System Signal is to be mapped into several SignalIPdus there is one ISignal needed for each ISignalToIPduMapping.	
ISignals describe the Interface between the Precompile configured RTE and the potentially Postbuild configured Com Stack (see ECUC Parameter Mapping).	
In case of the SystemSignalGroup an ISignal shall be created for each SystemSignal contained in the SystemSignalGroup.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal	
<b>Mapping Rule</b>	<b>Mapping Type</b>
A ComGroupSignal container shall be created for an ISignal contained in an ISignalGroup that is contained in an ISignalIPdu which the Com module is sending.	full
The creation of a ComGroupSignal container may be omitted for an ISignal contained in an ISignal Group that is contained in an ISignalIPdu which the Com module is receiving if no Rx ISignalPort exists for the ISignal of the ISignalGroup.	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00520]

<b>BSW Module</b>	<b>BSW Context</b>
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal
<b>BSW Parameter</b>	<b>BSW Type</b>
ComBitPosition	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order	
<b>Template Description</b>	
This parameter is necessary to describe the bitposition of a signal within an SignalIPdu. It denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packing ByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.	
Please note that the way the bytes will be actually sent on the bus does not impact this representation: they will always be seen by the software as a byte array.	
If a mapping for the ISignalGroup is defined, this attribute is irrelevant and shall be ignored.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.startPosition	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00259]



BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal	
BSW Parameter		BSW Type
ComBitSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN the size shall be configured by Com SignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.		
Template Description		
Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals.  The ISignal length of zero bits is allowed.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.length		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00158]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal	
BSW Parameter		BSW Type
ComFilter		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters of the AUTOSAR COM module's Filters. Note: On sender side the container is used to specify the transmission mode conditions.		
Template Description		
Base class for data filters. The type of the filter is specified in attribute dataFilterType. Some of the filter types require additional arguments which are specified as attributes of this class.		
M2 Parameter		
CommonStructure::Filter::DataFilter		
Mapping Rule		Mapping Type
Create container on the receiver side if the NonqueuedReceiverComSpec contains a DataFilter. Create Container on the sender side if the TransmissionModeCondition element contains a reference to this signal.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00339]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal/ComFilter	
BSW Parameter		BSW Type
ComFilterAlgorithm		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
The range of values is specified in the [17] specification, chapter 2.2.2, Reception Filtering.		
Template Description		
This attribute specifies the type of the filter.		





<b>M2 Parameter</b>	
CommonStructure::Filter::DataFilter.dataFilterType	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Mapping between DataFilterTypeEnum and ComFilterAlgorithm Enum is necessary.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00146]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterMask		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
<b>Template Description</b>		
Mask for old and new value.		
<b>M2 Parameter</b>		
CommonStructure::Filter::DataFilter.mask		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00235]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterMax		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
<b>Template Description</b>		
Value to specify the upper boundary		
<b>M2 Parameter</b>		
CommonStructure::Filter::DataFilter.max		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00317]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterMin		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.		
<b>Template Description</b>		





Value to specify the lower boundary	
<b>M2 Parameter</b>	
CommonStructure::Filter::DataFilter.min	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00318]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterOffset		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering. Range = 0..(ComFilterPeriod-1)		
<b>Template Description</b>		
Specifies the initial number of messages to occur before the first message is passed		
<b>M2 Parameter</b>		
CommonStructure::Filter::DataFilter.offset		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00313]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterPeriod		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the period of the ComFilterAlgorithm ONE_EVERY_N.		
<b>Template Description</b>		
Specifies number of messages to occur before the message is passed again		
<b>M2 Parameter</b>		
CommonStructure::Filter::DataFilter.period		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00312]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal/ComFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComFilterX		ECUC-INTEGER-PARAM-DEF





<b>BSW Description</b>	
The name of this attribute corresponds to the parameter name in the [17] specification of Reception Filtering.	
<b>Template Description</b>	
Value to compare with	
<b>M2 Parameter</b>	
CommonStructure::Filter::DataFilter.x	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00147]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComHandleId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The numerical value used as the ID. This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00165]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSignalDataInvalidValue		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
Defines the data invalid value of the signal.  In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0 (lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.		
<b>Template Description</b>		





<b>InvalidationPolicy:</b> Specifies whether the component can actively invalidate a particular dataElement.  If no invalidationPolicy points to a dataElement this is considered to yield the identical result as if the handleInvalid attribute was set to dontInvalidate.	
<b>SwDataDefProps.invalidValue:</b> Optional value to express invalidity of the actual data element.	
<b>M2 Parameter</b> SWComponentTemplate::PortInterface::InvalidationPolicy, DataDictionary::DataDefProperties::SwDataDefProps. <a href="#">invalidValue</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
ComSignalDataInvalidValue is only derived 1:1 from the SwDataDefProps.invalidValue if the InvalidationPolicy equals keep or replace. In all other cases of InvalidationPolicy the ComSignalDataInvalidValue shall not be configured.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00391]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defines the endianness of the signal's network representation.		
<b>Template Description</b>		
This parameter defines the order of the bytes of the signal and the packing into the SignalPdu. The byte ordering "Little Endian" (MostSignificantByteLast), "Big Endian" (MostSignificantByteFirst) and "Opaque" can be selected. For opaque data endianness conversion shall be configured to Opaque. The value of this attribute impacts the absolute position of the signal into the SignalPdu (see the startPosition attribute description).  For an ISignalGroup the packingByteOrder is irrelevant and shall be ignored.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping. <a href="#">packingByteOrder</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00157]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSignalInitValue		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		





<p>Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0.</p> <p>In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0 (lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.</p>	
<b>Template Description</b>	
Initial value to be sent if sender component is not yet fully initialized, but receiver needs data already.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal. <i>initValue</i> , SWComponent Template::Communication::NonqueuedSenderComSpec. <i>initValue</i>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
It is possible to aggregate an <i>initValue</i> at the level of a ComSpec in the SWC Template. in case the System Description doesn't use a complete Software Component Description (VFB View) the <i>initValue</i> is defined in the System Template.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00170]

<b>BSW Module</b>	<b>BSW Context</b>
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal
<b>BSW Parameter</b>	<b>BSW Type</b>
ComSignalLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
<p>Description: For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.</p> <p>The supported maximum length is restricted by the used transportation system. For non TP-PDUs the maximum size of a PDU, and therefore also of any included signal, is limited by the concrete bus characteristic. For example, the limit is 8 bytes for CAN and LIN, 64 bytes for CAN FD and 254 for FlexRay.</p>	
<b>Template Description</b>	
<p>Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals.</p> <p>The ISignal length of zero bits is allowed.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal. <i>length</i>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
ComSignalLength = ISignal.length / 8 (i.e. value of baseTypeSize)	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00437]

<b>BSW Module</b>	<b>BSW Context</b>
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal
<b>BSW Parameter</b>	<b>BSW Type</b>
ComSignalType	ECUC-ENUMERATION-PARAM-DEF





<b>BSW Description</b>	
The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.	
<b>Template Description</b>	
With the aggregation of SwDataDefProps an ISignal specifies how it is represented on the network. This representation follows a particular policy. Note that this causes some redundancy which is intended and can be used to support flexible development methodology as well as subsequent integrity checks.	
If the policy "networkRepresentationFromComSpec" is chosen the network representation from the ComSpec that is aggregated by the PortPrototype shall be used. If the "override" policy is chosen the requirements specified in the Port Interface and in the ComSpec are not fulfilled by the networkRepresentationProps. In case the System Description doesn't use a complete Software Component Description (VFB View) the "legacy" policy can be chosen.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.dataTypePolicy	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<p>The mapping depends from the setting in the ISignal.dataTypePolicy:</p> <ul style="list-style-type: none"> <li>- ISignal.dataTypePolicy = override or legacy: SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.networkRepresentationProps.swBaseType</li> <li>- ISignal.dataTypePolicy = networkRepresentationFromComSpec: if defined on ComSpec: SWComponentTemplate::Communication::SenderComSpec.networkRepresentation.swBaseType SWComponentTemplate::Communication::SenderComSpec.compositeNetworkRepresentation.networkRepresentation.swBaseType</li> <li>SWComponentTemplate::Communication::ReceiverComSpec.networkRepresentation.swBaseType SWComponentTemplate::Communication::ReceiverComSpec.compositeNetworkRepresentation.networkRepresentation.swBaseType</li> </ul> <p>if not defined on ComSpec: CommonStructure::ImplementationDataTypes::ImplementationDataType.swDataDefProps.swBaseType Find the ImplementationDataType according to TPS_SYST_02079 and access SwDataDefProps.swBaseType.</p> <p>Consequence: If two SenderReceiverToSignalMappings that point to the same SystemSignal result in incompatible BaseTypes (see constr_1220 in SoftwareComponentTemplate) =&gt; ComSignalType should not be configured.</p> <ul style="list-style-type: none"> <li>- ISignal.dataTypePolicy = portInterfaceDefinition -&gt; option has atpStatus "removed", in consequence no mapping is available."</li> <li>- ISignal.dataTypePolicy = transformingISignal Hardcoded to UINT8_N or UINT8_DYN. Datatype can be derived from SystemSignal.dynamicLength: UINT8_N should be used if SystemSignal.dynamicLength = false UINT8_DYN should be used if SystemSignal.dynamicLength = true</li> </ul>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00127]



<b>BSW Module</b>	<b>BSW Context</b>
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal
<b>BSW Parameter</b>	<b>BSW Type</b>
ComSystemTemplateSystemSignalRef	ECUC-FOREIGN-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template) which this ComSignal (or ComGroupSignal) represents.	
<b>Template Description</b>	
An ISignalToIPduMapping describes the mapping of ISignals to ISignalIPdus and defines the position of the ISignal within an ISignalIPdu.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping	
<b>Mapping Rule</b>	<b>Mapping Type</b>



1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00002]

BSW Module	BSW Context
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal
BSW Parameter	BSW Type
ComTimeoutSubstitutionValue	ECUC-STRING-PARAM-DEF
BSW Description	
<p>The signal substitution value will be used in case of a timeout and ComRxDataTimeoutAction is set to SUBSTITUTE. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00.</p> <p>In case of UINT8_DYN the initial size shall be 0.</p> <p>In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification.</p> <p>In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification.</p> <p>In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.</p> <p>In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.</p>	
Template Description	
Defines and enables the ComTimeoutSubstitution for this ISignal.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.timeoutSubstitutionValue	
Mapping Rule	Mapping Type
<p>The mapping of ComTimeoutSubstitutionValue depends on the setting in the ISignal.dataTypePolicy:</p> <ul style="list-style-type: none"> <li>- ISignal.dataTypePolicy = override or legacy: SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal.timeoutSubstitutionValue</li> <li>- ISignal.dataTypePolicy = networkRepresentationFromComSpec: SWComponentTemplate::Communication::NonequeuedReceiverComSpec.timeoutSubstitutionValue</li> <li>- ISignal.dataTypePolicy = transformingISignal this is not supported.</li> </ul>	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_10006]

BSW Module	BSW Context
Com	Com/ComConfig/ComSignalGroup/ComGroupSignal
BSW Parameter	BSW Type
ComTransferProperty	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
<p>Optionally defines whether this group signal shall contribute to the TRIGGERED_ON_CHANGE transfer property of the signal group. If at least one group signal of a signal group has the "ComTransferProperty" configured all other group signals of that signal group shall have the attribute configured as well.</p>	
Template Description	
Defines how the referenced ISignal contributes to the send triggering of the ISignalIPdu.	
M2 Parameter	







SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.transferProperty	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00560]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup	
BSW Parameter		BSW Type
ComHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>The numerical value used as the ID.</p> <p>This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00165]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup	
BSW Parameter		BSW Type
ComInitialValueOnly		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>This parameter defines that the respective signal's initial value shall be put into the respective PDU but there will not be any update of the value through the users (e.g. RTE, SwCluC). Thus the Com implementation does not need to expect any API calls for this signal (group).</p>		
Template Description		
<p>Connectors reception or send port on the referenced channel referenced by an ISignalTriggering. If different timeouts or Data Filters for ISignals need to be specified several ISignalPorts may be created.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalPort		
Mapping Rule		Mapping Type
Tx: If an ISignal has no ISignalPort assigned a ComSignal shall always be created in the transmitting ECUs in order to send the init value. Rx: If an ISignal has no ISignalPort assigned there is no need for the existence of a ComSignal in the rec. Ecu		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00811]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup	
BSW Parameter		BSW Type





ComRxDataTimeoutAction		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the action performed upon expiration of the reception deadline monitoring timer.		
<b>Template Description</b>		
This attribute controls the behavior with respect to the handling of timeouts.		
<b>M2 Parameter</b>		
SWComponentTemplate::Communication::NonqueuedReceiverComSpec.handleTimeoutType		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<p>If a full DataMapping exists for the SystemSignal and there is a single receiver on this ECU then this information shall be configured in accordance with the configured NonqueuedReceiverComSpec.</p> <p>If a full DataMapping exists for the SystemSignal and there are multiple receivers on this ECU then this information is available in the NonqueuedReceiverComSpecs. In this case the attribute ComRxDataTimeoutAction of the related ComSignal/ComSignalGroup shall be configured to NONE to ensure that the RTE always has access to the last received value. Please note that the SWS_RTE defines an algorithm to implement the applicable timeout action.</p>		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_00412]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ComSignalGroupArrayAccess	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
Defines whether the uint8-array based access shall be used for this ComSignalGroup.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalGroup.comBasedSignalGroupTransformation		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Com_10003]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComSignalGroup	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ComSystemTemplateSignalGroupRef	ECUC-FOREIGN-REFERENCE-DEF	
<b>BSW Description</b>		
Reference to the ISignalToIPduMapping that contains a reference to the ISignalGroup (SystemTemplate) which this ComSignalGroup represents.		
<b>Template Description</b>		
An ISignalToIPduMapping describes the mapping of ISignals to ISignalPdus and defines the position of the ISignal within an ISignalPdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
<b>Mapping Rule</b>		<b>Mapping Type</b>





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00001]

BSW Module	BSW Context
Com	Com/ComConfig/ComSignalGroup
BSW Parameter	BSW Type
ComTimeout	ECUC-FLOAT-PARAM-DEF
BSW Description	
Defines the length of the deadline monitoring timeout period in seconds. The period for the first timeout period can be configured separately by ECUC_Com_00183.	
Template Description	
<p><b>ISignalPort.timeout:</b></p> <ul style="list-style-type: none"> <li>ISignalPort with communicationDirection = in: Optional timeout value in seconds for the reception of the ISignal. The attribute value is used to configure the ComTimeout in the COM module. The RTE ignores this attribute. The timeout can also be specified with the NonqueuedReceiverComSpec.aliveTimeout attribute. If a full DataMapping exists for the SystemSignal and the value is available in the configured ReceiverComSpec, then the timeout value in the ReceiverComSpec overrides this optional timeout specification during the creation of the Base Ecu Configuration of the COM module.</li> <li>ISignalPort with communicationDirection = out: Optional timeout value in seconds for the transmission of the ISignal. The attribute value is used to configure the ComTimeout in the COM module. The RTE ignores this attribute. The timeout can also be specified with the enderComSpec.transmissionAcknowledge.timeout attribute. If a full DataMapping exists for the SystemSignal and the value is available in the configured SenderComSpec, then the timeout value in the SenderComSpec overrides this optional timeout specification during the creation of the Base Ecu Configuration of the COM module.</li> </ul> <p>This attribute can be used in the following cases:</p> <ul style="list-style-type: none"> <li>legacy signal where the System Description doesn't use a complete Software Component Description (VFB View) and where the DataMapping is missing.</li> <li>bus monitoring use cases in which the DataMapping is ignored.</li> </ul> <p><b>TransmissionAcknowledgementRequest.timeout:</b> Number of seconds before an error is reported or in case of allowed redundancy, the value is sent again.</p> <p><b>NonqueuedReceiverComSpec.aliveTimeout:</b> Specify the amount of time (in seconds) after which the software component (via the RTE) needs to be notified if the corresponding data item have not been received according to the specified timing description.</p> <p>If the aliveTimeout attribute is 0 no timeout monitoring shall be performed.</p>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalPort.timeout, SWComponentTemplate::Communication::TransmissionAcknowledgementRequest.timeout, SWComponentTemplate::Communication::NonqueuedReceiverComSpec.aliveTimeout	
Mapping Rule	Mapping Type
<p>TX Signals: If a full DataMapping exist for the SystemSignal this information may be available from a configured SenderComSpec.transmissionAcknowledge.timeout that specifies the amount of time (in seconds) after which the software component (via the RTE) needs to be notified if the corresponding data item have not been transmitted according to the specified timing description. In this case the timeout value in SenderComSpec overrides the optional timeout specification in the System Template defined on the ISignalPort.</p> <p>RX Signals: If a full DataMapping exist for the SystemSignal this information may be available from a configured NonqueuedReceiverComSpec.aliveTimeout. In this case the timeout value in ReceiverComSpec overrides the optional timeout specification in the System Template defined on the ISignalPort. Please note that the SWS_RTE defines an algorithm to finally set the applicable timeout value.</p>	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Com_00263]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup	
BSW Parameter	BSW Type	
ComTransferProperty	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.		
Template Description		
Defines how the referenced ISignal contributes to the send triggering of the ISignalIPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.transferProperty		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00232]

BSW Module	BSW Context	
Com	Com/ComConfig/ComSignalGroup	
BSW Parameter	BSW Type	
ComUpdateBitPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Bit position of update-bit inside I-PDU. If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side. Range: 0..63 for CAN and LIN, 0..511 for CAN FD, 0..2031 for FlexRay, 0..4294967295 for TP.		
Template Description		
The UpdateIndicationBit indicates to the receivers that the signal (or the signal group) was updated by the sender. Length is always one bit. The UpdateIndicationBitPosition attribute describes the position of the update bit within the SignalIPdu. For Signals of a ISignalGroup this attribute is irrelevant and shall be ignored. Note that the exact bit position of the updateIndicationBitPosition is linked to the value of the attribute packingByteOrder because the method of finding the bit position is different for the values mostSignificantByteFirst and mostSignificantByteLast. This means that if the value of packingByteOrder is changed while the value of updateIndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing ISignalIPdu still undergoes a change. This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping.updateIndicationBitPosition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Com_00257]

BSW Module	BSW Context	
Com	Com/ComConfig	
BSW Parameter	BSW Type	
ComUserModule	ECUC-PARAM-CONF-CONTAINER-DEF	





<b>BSW Description</b>	
Contains the configuration parameters of the Com user modules.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_10031]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComConfig/ComUserModule	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComUserModuleCnfRef		ECUC-URI-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the Com user module configuration.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_10029]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Contains the general configuration parameters of the module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00541]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComCancellationSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
This parameter enables/disables the cancellation feature: true: enabled false: disabled		
<b>Template Description</b>		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_10000]

BSW Module	BSW Context	
Com	Com/ComGeneral	
BSW Parameter		BSW Type
ComConfigurationUseDet		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
The error hook shall contain code to call the Det. If this parameter is configured COM_DEV_ERROR_DETECT shall be set to ON as output of the configuration tool. (as input for the source code).		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00141]	

BSW Module	BSW Context	
Com	Com/ComGeneral	
BSW Parameter		BSW Type
ComEnableMDTForCyclicTransmission		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables globally for the whole Com module the minimum delay time monitoring for cyclic and repeated transmissions (Com TxModeMode=PERIODIC or ComTxModeMode=MIXED for the cyclic transmissions, ComTxModeNumberOfRepetitions > 0 for repeated transmissions).		
Template Description		
Enables for the Com module of this EcuInstance the minimum delay time monitoring for cyclic and repeated transmissions (TransmissionModeTiming has cyclicTiming assigned or eventControlledTiming with numberOfRepetitions > 0).		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.comEnableMDTForCyclicTransmission		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00788]	

BSW Module	BSW Context	
Com	Com/ComGeneral	
BSW Parameter		BSW Type
ComEnableSignalGroupArrayApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		





Activate/Deactivate the signal group array access APIs (Com_SendSignalGroupArray, Com_ReceiveSignalGroupArray). true: signal group array access APIs activated false: signal group array access APIs deactivated	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_10002]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMetaDataSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
This parameter enables/disables the support of meta-data feature including the API Com_TriggerIPDUSendWithMetaData. true: enabled false: disabled		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_10004]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComRetryFailedTransmitRequests		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
If this Parameter is set to true, retry of failed transmission requests is enabled. If this Parameter is not present, the default value is assumed.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00780]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComSupportedIPduGroups		ECUC-INTEGER-PARAM-DEF





<b>BSW Description</b>	
Defines the maximum number of supported I-PDU groups.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Com_00710]

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComUserCbkHeaderFile		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
Defines the header files for callback functions which shall be included by the COM module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_10001]	

<b>BSW Module</b>	<b>BSW Context</b>	
Com	Com/ComGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Activate/Deactivate the version information API (Com_GetVersionInfo).		
True: version information API activated False: version information API deactivated		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Com_00438]	



## C.1.2 LdCom Mapping

BSW Module	BSW Context	
LdCom	LdCom	
BSW Parameter		BSW Type
LdComConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR LdCom module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LdCom_ - 00003]

BSW Module	BSW Context	
LdCom	LdCom/LdComConfig	
BSW Parameter		BSW Type
LdComIPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the configuration parameters of the LdCom's signal (IPdu) inside LdCom.		
Template Description		
Represents the IPdus handled by Com. The ISignalIPdu assembled and disassembled in AUTOSAR COM consists of one or more signals. In case no multiplexing is performed this IPdu is routed to/from the Interface Layer. A maximum of one dynamic length signal per IPdu is allowed.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPdu		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LdCom_ - 00006]

BSW Module	BSW Context	
LdCom	LdCom/LdComConfig/LdComIPdu	
BSW Parameter		BSW Type
LdComApiType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines if this I-PDU is a normal I-PDU that shall be sent unfragmented or if this is a large I-PDU that shall be sent via the Transport Protocol of the underlying bus. This setting is used by RTE to invoke the proper API.		
Template Description		
Contains all configuration elements for AUTOSAR TP.		
M2 Parameter		





SystemTemplate::TransportProtocols::TpConfig	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If this LdComIPdu is mapped in the System Description by a TpConnection to NPdus then set LdComApiType to TP. Otherwise set LdComApiType to IF.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LdCom_-00002]

<b>BSW Module</b>	<b>BSW Context</b>	
LdCom	LdCom/LdComConfig/LdComIPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
LdComHandleId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This is the ID used by the LdCom users (e.g. RTE) to invoke LdCom. A corresponding shortName is created, which is used for the invocations of the users (e.g. RTE). The same ID is used for invocations by PduR.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LdCom_-00005]

<b>BSW Module</b>	<b>BSW Context</b>	
LdCom	LdCom/LdComConfig/LdComIPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
LdComIPduDirection		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
The direction defines if this IPdu, and therefore the contributing signal, shall be sent or received.		
<b>Template Description</b>		
Communication Direction of the Connector Port (input or output Port).		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommConnectorPort.communicationDirection		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Find IPduTriggering of the regarded SignallIPdu. The IPduTriggering contains a reference to an IPduPort that is aggregated by the regarded ECU. If the communicationDirection of the CommConnectorPort is "in" than the IPdu is received.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LdCom_-00007]

<b>BSW Module</b>	<b>BSW Context</b>	
LdCom	LdCom/LdComConfig/LdComIPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>





LdComPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the global Pdu.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LdCom_-00010]

<b>BSW Module</b>	<b>BSW Context</b>	
LdCom	LdCom/LdComConfig/LdComIPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
LdComSystemTemplateSignalRef		ECUC-FOREIGN-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template).		
<b>Template Description</b>		
An ISignalToIPduMapping describes the mapping of ISignals to ISignallPdus and defines the position of the ISignal within an ISignallPdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LdCom_-00011]

<b>BSW Module</b>	<b>BSW Context</b>	
LdCom	LdCom/LdComConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
LdComUserModule		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Contains the configuration parameters of the LdCom user modules.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LdCom_-00029]

BSW Module	BSW Context	
LdCom	LdCom/LdComConfig/LdComUserModule	
BSW Parameter		BSW Type
LdComUserModuleCnfRef		ECUC-URI-REFERENCE-DEF
BSW Description		
Reference to the LdCom user module configuration.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_LdCom_-00032]

BSW Module	BSW Context	
LdCom	LdCom	
BSW Parameter		BSW Type
LdComGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the general configuration parameters of the LdCom module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_LdCom_-00004]

BSW Module	BSW Context	
LdCom	LdCom/LdComGeneral	
BSW Parameter		BSW Type
LdComDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LdCom_-00020]

BSW Module	BSW Context	
LdCom	LdCom/LdComGeneral	
BSW Parameter		BSW Type
LdComVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activate/Deactivate the version information API (LdCom_GetVersionInfo). <ul style="list-style-type: none"> <li>• True: version information API activated</li> <li>• False: version information API deactivated</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LdCom_-00012]

### C.1.3 IPduM Mapping

BSW Module	BSW Context	
IpduM	IpduM	
BSW Parameter		BSW Type
IpduMConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the sub containers of the IpduM module. <ul style="list-style-type: none"> <li>• The IpduMTxPathway subcontainer includes information about sent I-PDUs.</li> <li>• The IpduMRxPathway includes information about received I-PDUs.</li> <li>• The IpduMContainerTxPdu and IpduMContainedTxPdu include information about the sending of ContainerPdus.</li> <li>• The IpduMContainerRxPdu and IpduMContainedRxPdu include information about the reception of ContainerPdus.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00059]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig	
BSW Parameter		BSW Type
IpduMContainedRxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a received contained Pdu.		





Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00174]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedRxPdu	
BSW Parameter		BSW Type
IpduMContainedPduOffset		ECUC-INTEGER-PARAM-DEF
BSW Description		
Static offset (in bytes) of the ContainedPdu.		
Template Description		
Byte offset that describes the location of the ContainedPdu in the ContainerPdu if no header is used.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps. <i>offset</i>		
Mapping Rule		Mapping Type
If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPdu Triggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainerIPdu.containedIPduTriggeringProps then this attribute is derived from that ContainerIPdu.containedIPduTriggeringProps.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00206]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedRxPdu	
BSW Parameter		BSW Type
IpduMContainedRxInContainerPduRef		ECUC-REFERENCE-DEF
BSW Description		
Optional reference to an IpduMContainerRxPdu this IpduMContainedRxPdu may be received in. If this IpduMContainedRxPdu shall be received in exactly one IpduMContainerRxPdu with IpduMContainerRxAccept ContainedPdu=IPDUM_ACCEPT_CONFIGURED then the IpduMContainedRxInContainerPduRef shall be defined. If this IpduMContainedRxPdu can be received in any IpduMContainerRxPdu with IpduMContainerRxAcceptContained Pdu=IPDUM_ACCEPT_ALL then the IpduMContainedRxInContainerPduRef shall NOT be defined.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu. <i>containedPduTriggering</i>		
Mapping Rule		Mapping Type





<p>In the SysT the ContainerPdu references all PduTriggerings which can be put inside this Container. In the EcuC each Contained Pdu refers to the Containers it can be transported in.</p> <p>In case of IPDUM_ACCEPT_ALL reception strategy: a set of IpduMContainedRxPdu without an IpduMContainedRxInContainerPduRef is derived. An IpduMContainedRxPdu shall only be derived once in this set of IPDUM_ACCEPT_ALL reception Pdus. The identity of an IpduMContainedRxPdu in the set of IPDUM_ACCEPT_ALL reception Pdus is defined by the IpduMContainedRxPdu ShortHeaderId and IpduMContainedRxPduLongHeaderId.</p>	partial
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00173]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainedRxPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
IpduMContainedRxPduLongHeaderId	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
LongHeader Id which is part of the ContainerPdu when this ContainedPdu is inside.		
<b>Template Description</b>		
Defines the header id this IPdu shall have in case this IPdu is put inside a ContainerIPdu with headerType = longHeader.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.headerIdLongHeader		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_IpduM_00203]	

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainedRxPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
IpduMContainedRxPduRef	ECUC-REFERENCE-DEF	
<b>BSW Description</b>		
Reference to the Pdu which represents this ContainedPdu and is used for reception indication.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_IpduM_00175]	

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainedRxPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
IpduMContainedRxPduShortHeaderId	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		





ShortHeader Id which is part of the ContainerPdu when this ContainedPdu is inside.	
<b>Template Description</b>	
Defines the header id this IPdu shall have in case this IPdu is put inside a ContainerIPdu with headerType = shortHeader.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.headerIdShortHeader	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00202]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainedRxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMPduUpdateBitPosition		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This value specifies where the PDU's Update-Bit is stored in the Container PDU (bit location of PDU's Update-Bit in the Container PDU).		
<b>Template Description</b>		
The updateIndicationBit specifies the bit location of ContainedIPdu Update-Bit in the Container PDU. It indicates to the receivers that the ContainedIPdu in the ContainerIPdu was updated.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.updateIndicationBitPosition		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPdu Triggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainerIPdu.containedIPduTriggeringProps then this attribute is derived from that ContainerIPdu.containedIPduTriggeringProps.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00207]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMContainedTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Configuration of a sender ContainedPdu.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00177]



BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
BSW Parameter	BSW Type	
IpduMContainedPduHeaderId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Header Id which is part of the ContainerPdu when this ContainedPdu is inside.		
Template Description		
<b>ContainedIPduProps.headerIdLongHeader:</b> Defines the header id this IPdu shall have in case this IPdu is put inside a ContainerIPdu with headerType = longHeader.		
<b>ContainedIPduProps.headerIdShortHeader:</b> Defines the header id this IPdu shall have in case this IPdu is put inside a ContainerIPdu with headerType = shortHeader.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.headerIdLongHeader, SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.headerIdShortHeader		
Mapping Rule		Mapping Type
If IpduMContainerHeaderSize = LONG the IPduMContainedPduHeaderId is taken from headerIdLongHeader. If IpduMContainerHeaderSize = SHORT the IPduMContainedPduHeaderId is taken from headerIdShortHeader.		full
If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPduTriggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainerIPdu.containedIPduTriggeringProps then this attribute is derived from that ContainerIPdu.containedIPduTriggeringProps.		
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00172]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
BSW Parameter	BSW Type	
IpduMContainedPduOffset	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Static offset (in bytes) of the ContainedPdu.		
Template Description		
Byte offset that describes the location of the ContainedPdu in the ContainerPdu if no header is used.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.offset		
Mapping Rule		Mapping Type
If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPduTriggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainerIPdu.containedIPduTriggeringProps then this attribute is derived from that ContainerIPdu.containedIPduTriggeringProps.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00206]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
BSW Parameter	BSW Type	
IpduMContainedTxInContainerPduRef	ECUC-REFERENCE-DEF	





<b>BSW Description</b>	
Reference to the container Pdu which this contained Pdu shall be collected in.	
<b>Template Description</b>	
Defines properties for an IPdu that is part of the ContainerIPdu.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.containedPduTriggering, SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.containedIPduTriggeringProps	
<b>Mapping Rule</b>	<b>Mapping Type</b>
In the SysT the ContainerPdu references all PduTriggerings (directly via ContainerIPdu.containedPduTriggering or indirectly via ContainerIPdu.containedIPduTriggeringProps) which can be put inside this container. In the EcuC each Pdu refers to the containers it can be transported in.	partial
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00176]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMContainedTxPduCollectionSemantics	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Defines whether this IpduMContainedTxPdu shall be collected using a last-is-best or queued semantics.	
<b>Template Description</b>	
Defines whether this ContainedIPdu shall be collected using a last-is-best or queued semantics.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.collectionSemantics	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPduTriggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainerIPdu.containedIPduTriggeringProps then this attribute is derived from that ContainerIPdu.containedIPduTriggeringProps.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00198]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu/IpduMContainedTxPduCollectionSemantics
<b>BSW Parameter</b>	<b>BSW Type</b>
IPDUM_COLLECT_LAST_IS_BEST	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
The IpduMContainedTxPdu data will be fetched via TriggerTransmit just before the transmission executes.	
<b>Template Description</b>	
The ContainedIPdu data will be fetched via TriggerTransmit just before the transmission executes.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduCollectionSemanticsEnum.lastIsBest	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu/IpduMContainedTxPduCollectionSemantics	
BSW Parameter		BSW Type
IPDUM_COLLECT_QUEUED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The IpduMContainedTxPdu data will instantly be stored to the IpduMContainerTxPdu in the context of the Transmit API.		
Template Description		
The ContainedIPdu data will instantly be stored to the ContainerIPdu in the context of the Transmit API.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduCollectionSemanticsEnum.queued		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
BSW Parameter		BSW Type
IpduMContainedTxPduConfirmation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This Parameter determines whether for this contained I-PDU a TxConfirmation shall be provided. If set to TRUE a Tx Confirmation is issued. It is not used when an I-PDU is requested using the trigger transmit API. If this Parameter is omitted, the default value shall be used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00178]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
BSW Parameter		BSW Type
IpduMContainedTxPduHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Handle Id of the ContainedPdu.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00179]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
BSW Parameter	BSW Type	
IpduMContainedTxPduPriority	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines a priority of a ContainedTxPdu. 255 represents the lowest priority and 0 represent the highest priority.		
Template Description		
Defines a priority of a ContainedTxPdu. 255 represents the lowest priority and 0 represent the highest priority.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.priority		
Mapping Rule		Mapping Type
<p>Priority handling for a ContainerIPdu is enabled if at least one ContainedIPdu contains the attribute "priority" within its aggregated ContainerIPduProps, and there are different priorities configured within one ContainerIPdu (Reason: When all ContainedIPdus have the same priority, they cannot be prioritized).</p> <p>If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPdu Triggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainedIPduProps which is aggregated in the role of containerIPduTriggeringProps, then this attribute is derived from that ContainedIPduProps.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00210]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
BSW Parameter	BSW Type	
IpduMContainedTxPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the Pdu which represents this ContainedPdu and is used for transmission.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00180]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
BSW Parameter	BSW Type	
IpduMContainedTxPduSendTimeout	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Defines a ContainedPdu specific sender timeout which can reduce the ContainerPdu timer when this ContainedPdu is put inside the ContainerPdu. Defined in seconds.		
Template Description		
Defines a IPdu specific sender timeout which can reduce the ContainerIPdu timer when this containedIPdu is put inside the ContainerIPdu. This attribute is ignored on receiver side.		
M2 Parameter		





SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.timeout	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPdu Triggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainerIPdu.containedIPduTriggeringProps then this attribute is derived from that ContainerIPdu.containedIPduTriggeringProps.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00181]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMContainedTxPduTrigger		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defines whether this Pdu triggers the sending of the ContainerPdu.		
<b>Template Description</b>		
Defines whether this IPdu does trigger the sending of the ContainerIPdu. This attribute is ignored on receiver side.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.trigger		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPdu Triggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainerIPdu.containedIPduTriggeringProps then this attribute is derived from that ContainerIPdu.containedIPduTriggeringProps.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_IpduM_00182]	

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu/IpduMContainedTxPduTrigger	
<b>BSW Parameter</b>		<b>BSW Type</b>
IPDUM_TRIGGER_ALWAYS		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
This Pdu directly triggers the sending of the ContainerPdu.		
<b>Template Description</b>		
Pdu will trigger the transmission of the data.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduCollectionTriggerEnum.always		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu/IpduMContainedTxPduTrigger	
<b>BSW Parameter</b>		<b>BSW Type</b>





IPDUM_TRIGGER_NEVER		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
This Pdu does not triggers the sending of the ContainerPdu (other trigger criteria might still trigger sending of the Container Pdu).		
<b>Template Description</b>		
Pdu will be buffered and will not trigger the transmission of the data.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduCollectionTriggerEnum.never		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainedTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMPduUpdateBitPosition		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This value specifies where the PDU's Update-Bit is stored in the Container PDU (bit location of PDU's Update-Bit in the Container PDU).		
<b>Template Description</b>		
The updateIndicationBit specifies the bit location of ContainedIPdu Update-Bit in the Container PDU. It indicates to the receivers that the ContainedIPdu in the ContainerIPdu was updated.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainedIPduProps.updateIndicationBitPosition		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If the ContainerIPdu directly references the PduTriggering in the role ContainerIPdu.containedPdu Triggering then this attribute is derived from IPdu.containedIPduProps. If the ContainerIPdu indirectly references the PduTriggering via ContainerIPdu.containedIPduTriggeringProps then this attribute is derived from that ContainerIPdu.containedIPduTriggeringProps.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00207]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMContainerRxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Configuration of a receiver ContainerPdu which may collect several ContainedPdu.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00188]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu	
BSW Parameter	BSW Type	
IpduMContainerHeaderSize	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines the layout of the header information (header id and length).		
Template Description		
Defines whether and which header type is used (header id and length).		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.headerType		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_IpduM_00183]	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu/IpduMContainerHeaderSize	
BSW Parameter	BSW Type	
IPDUM_HEADERTYPE_LONG	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Header size is 64 bit: <ul style="list-style-type: none"> <li>Header Id 32 bit</li> <li>Dlc 32 bit</li> </ul>		
Template Description		
Header size is 64 bit: <ul style="list-style-type: none"> <li>Header Id 32 bit</li> <li>Dlc 32 bit</li> </ul>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPduHeaderTypeEnum.longHeader		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu/IpduMContainerHeaderSize	
BSW Parameter	BSW Type	
IPDUM_HEADERTYPE_NONE	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Static Container Layout		
Template Description		
No Header is used and the location of each containedPdu in the ContainerPdu is statically configured.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPduHeaderTypeEnum.noHeader		
Mapping Rule	Mapping Type	





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu/IpduMContainerHeaderSize	
BSW Parameter	BSW Type	
IPDUM_HEADERTYPE_SHORT	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Header size is 32 bit: <ul style="list-style-type: none"> <li>Header Id 24 bit</li> <li>Dlc 8 bit</li> </ul>		
Template Description		
Header size is 32 bit: <ul style="list-style-type: none"> <li>Header Id 24 bit</li> <li>Dlc 8 bit.</li> </ul>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPduHeaderTypeEnum. <a href="#">shortHeader</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu	
BSW Parameter	BSW Type	
IpduMContainerPduProcessing	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines whether the handling of this ContainerPdu shall be done in the context of the caller (IMMEDIATE) or in the next call to IpduM_MainFunctionRx (DEFERRED).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00184]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu	
BSW Parameter	BSW Type	
IpduMContainerQueueSize	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines a local queue for handling of each ContainerPdu. Defined in number of instances of this ContainerPdu.		







Template Description	
<b>ContainerIPdu.minimumRxContainerQueueSize:</b> This attribute defines the minimum queue size for received containers.	
<b>ContainerIPdu.minimumTxContainerQueueSize:</b> This attribute defines the minimum queue size for transmitted containers.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.minimumRxContainerQueueSize, SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.minimumTxContainerQueueSize	
Mapping Rule	Mapping Type
The value of this parameter can not be derived from the System Extract but the System Extract may define a minimum queue size. If this parameter is used in the context of the IpduMContainerTxPdu then the minimumTxContainerQueueSize attribute needs to be respected. If this parameter is used in the context of the IpduMContainerRxPdu then the minimumRxContainerQueueSize attribute needs to be respected.	partial
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00185]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu	
BSW Parameter		BSW Type
IpduMContainerRxAcceptContainedPdu		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines for the received IpduMContainerRxPdu whether the list of referencing IpduMContainedRxPdus (via the reference IpduMContainedPduContainerRefRx) is a closed set.		
Template Description		
Defines whether this ContainerIPdu has a fixed set of containedIPdus assigned for reception.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.rxAcceptContainedIPdu		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00186]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu/IpduMContainerRxAcceptContainedPdu	
BSW Parameter		BSW Type
IPDUM_ACCEPT_ALL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The IpduMContainedRxPdus which are referencing this IpduMContainerRxPdu are expected inside this IpduMContainerRxPdu, but there may also occur other Pdus inside this IpduMContainerRxPdu as well. This also supports the case where no IpduMContainedRxPdu references the IpduMContainerRxPdu.		
Template Description		
No fixed set of containedIPdus is defined for reception, any known containedIPdu (based on headerId) shall be expected within this ContainerIPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::RxAcceptContainedIPduEnum.acceptAll		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu/IpduMContainerRxAcceptContainedPdu	
BSW Parameter		BSW Type
IPDUM_ACCEPT_CONFIGURED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Only the IpduMContainedRxPdus which are referencing this IpduMContainerRxPdu are expected inside this IpduMContainer RxPdu.		
Template Description		
A fixed set of containedIPdus is defined for reception. Only these assigned containedIPdus (based on headerId) are expected in this ContainerIPdu. If a not assigned containedIPdu is received within this ContainerIPdu this containedIPdu is discarded.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::RxAcceptContainedIPduEnum. <a href="#">acceptConfigured</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu	
BSW Parameter		BSW Type
IpduMContainerRxHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Handle Id used by the PduR for RxIndication.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00187]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu	
BSW Parameter		BSW Type
IpduMContainerRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu which represents the container and is used for reception.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00189]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerRxPdu	
BSW Parameter		BSW Type
IpduMMainFunctionRxRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the IpduM_MainFunctionRx instance this container PDU belongs to. Mandatory, if more than one IpduM_MainFunctionRx is defined.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00212]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig	
BSW Parameter		BSW Type
IpduMContainerTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a transmitted container Pdu.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00192]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
BSW Parameter		BSW Type
IpduMContainerHeaderSize		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the layout of the header information (header id and length).		
Template Description		
Defines whether and which header type is used (header id and length).		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.headerType		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00183]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu/IpduMContainerHeaderSize	
BSW Parameter	BSW Type	
IPDUM_HEADERTYPE_LONG	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Header size is 64 bit: <ul style="list-style-type: none"> <li>Header Id 32 bit</li> <li>Dlc 32 bit</li> </ul>		
Template Description		
Header size is 64 bit: <ul style="list-style-type: none"> <li>Header Id 32 bit</li> <li>Dlc 32 bit</li> </ul>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPduHeaderTypeEnum. <a href="#">longHeader</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu/IpduMContainerHeaderSize	
BSW Parameter	BSW Type	
IPDUM_HEADERTYPE_NONE	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Static Container Layout		
Template Description		
No Header is used and the location of each containedPdu in the ContainerPdu is statically configured.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPduHeaderTypeEnum. <a href="#">noHeader</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu/IpduMContainerHeaderSize	
BSW Parameter	BSW Type	
IPDUM_HEADERTYPE_SHORT	ECUC-ENUMERATION-LITERAL-DEF	





BSW Description	
Header size is 32 bit: <ul style="list-style-type: none"> <li>Header Id 24 bit</li> <li>Dlc 8 bit</li> </ul>	
Template Description	
Header size is 32 bit: <ul style="list-style-type: none"> <li>Header Id 24 bit</li> <li>Dlc 8 bit.</li> </ul>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPduHeaderTypeEnum. <a href="#">shortHeader</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
BSW Parameter		BSW Type
IpduMContainerQueueSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines a local queue for handling of each ContainerPdu. Defined in number of instances of this ContainerPdu.		
Template Description		
<b>ContainerIPdu.minimumRxContainerQueueSize:</b> This attribute defines the minimum queue size for received containers.		
<b>ContainerIPdu.minimumTxContainerQueueSize:</b> This attribute defines the minimum queue size for transmitted containers.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu. <a href="#">minimumRxContainerQueueSize</a> , SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu. <a href="#">minimumTxContainerQueueSize</a>		
Mapping Rule		Mapping Type
The value of this parameter can not be derived from the System Extract but the System Extract may define a minimum queue size. If this parameter is used in the context of the IpduMContainerTxPdu then the minimumTxContainerQueueSize attribute needs to be respected. If this parameter is used in the context of the IpduMContainerRxPdu then the minimumRxContainerQueueSize attribute needs to be respected.		partial
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00185]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
BSW Parameter		BSW Type
IpduMContainerTxFirstContainedPduTrigger		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines if the transmission of this IpduMContainerTxPdu shall be requested right after the first IpduMContainedTxPdu was put into it.		
Template Description		





Defines if the transmission of the ContainerIPdu shall be requested right after the first ContainedIPdu was put into it. This attribute shall be ignored on receiver side.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.containerTrigger	
<b>Mapping Rule</b>	<b>Mapping Type</b>
TRUE if ContainerIPdu.containerTrigger = firstContainedTrigger, else FALSE.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00199]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMContainerTxHandleId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Handle Id used by the PduR for TxConfirmation and for TriggerTransmit of the ContainerPdu.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_IpduM_00191]	

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMContainerTxPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the Pdu which represents the container and is used for transmission.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_IpduM_00193]	

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMContainerTxSendTimeout		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
When this timeout expires the ContainerPdu is triggered for sending. The respective timer is started when the first Pdu is put into the ContainerPdu. Defined in seconds.		





Template Description	
When this timeout expires the ContainerIPdu is sent out. The respective timer is started when the first Ipdu is put into the ContainerIPdu. This attribute is ignored on receiver side.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.containerTimeout	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00194]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
BSW Parameter		BSW Type
IpduMContainerTxSizeThreshold		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the size threshold in bytes which, when exceeded, triggers the sending of the ContainerPdu although the maximum Pdu size (PduLength parameter of Pdu object) has not been reached yet.		
Template Description		
Defines the size threshold which, when exceeded, triggers the sending of the ContainerIPdu although the maximum Pdu size has not been reached yet. Unit: byte.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.thresholdSize		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_IpduM_00195]	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
BSW Parameter		BSW Type
IpduMContainerTxTriggerMode		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines whether this ContainerPdu is fetched via trigger transmit.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_IpduM_00196]	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
BSW Parameter		BSW Type





IpduMMainFunctionTxRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the IpduM_MainFunctionTx instance this container PDU belongs to. Mandatory, if more than one IpduM_MainFunctionTx is defined.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00214]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMContainerTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMUnusedAreasDefault		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
IpduM fills not updated areas of the Container PDU with this byte-pattern.		
<b>Template Description</b>		
IPduM fills not updated areas of the ContainerPdu with this byte-pattern.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ContainerIPdu.unusedBitPattern		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00208]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMMainFunctionRx		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Each element of this container defines one instance IpduM_MainFunctionRx, in case multi-core distribution feature is active.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00211]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMMainFunctionRx	
<b>BSW Parameter</b>		<b>BSW Type</b>







IpduMMainRxPartitionRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to EcucPartition, where the according IpduM_MainFunction instance is assigned to.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00215]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMMainFunctionRx	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMMainRxTimeBase		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
<p>The period between successive calls to according instance of IpduM_MainFunctionRx in seconds. This parameter may be used by the IpduM generator to transform the values of the reception related timing configuration parameters of the IpduM module to internal implementation specific counter or tick values. The IpduM module's internal timing handling is implementation specific.</p> <p>The IpduM module (generator) may rely on the fact that IpduM_MainFunctionRx is scheduled according to the value configured here.</p>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_IpduM_00216]	

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMMainFunctionTx		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Each element of this container defines one instance IpduM_MainFunctionTx, in case multi-core distribution feature is active (mutual exclusive to ComTimeBase).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_IpduM_00213]	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMMainFunctionTx	
BSW Parameter	BSW Type	
IpduMMainTxPartitionRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to EcucPartition, where the according IpduM_MainFunction instance is assigned to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00217]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMMainFunctionTx	
BSW Parameter	BSW Type	
IpduMMainTxTimeBase	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>The period between successive calls to IpduM_MainFunctionTx in seconds. This parameter may be used by the IpduM generator to transform the values of the reception related timing configuration parameters of the IpduM module to internal implementation specific counter or tick values. The IpduM module's internal timing handling is implementation specific.</p> <p>The IpduM module (generator) may rely on the fact that IpduM_MainFunctionTx is scheduled according to the value configured here.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00218]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig	
BSW Parameter	BSW Type	
IpduMMaxTxBufferSize	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum total size of all Tx buffers. This parameter is needed only in case of post-build loadable implementation using static memory allocation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00166]

BSW Module		BSW Context	
IpduM		IpduM/IpduMConfig	
BSW Parameter		BSW Type	
IpduMMaxTxPathwayCnt		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Maximum number of transmitted IPdus. This parameter is needed only in case of post-build loadable implementation using static memory allocation.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_IpduM_00165]

BSW Module		BSW Context	
IpduM		IpduM/IpduMConfig	
BSW Parameter		BSW Type	
IpduMRxPathway		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Contains the configuration parameters received I-PDUs by the IpduM module.			
Template Description			
A MultiplexedPdu (i.e. NOT a COM I-PDU) contains a DynamicPart, an optional StaticPart and a selectorField. In case of multiplexing this IPdu is routed between the Pdu Multiplexer and the Interface Layer.			
A multiplexer is used to define variable parts within an IPdu that may carry different signals. The receivers of such a IPdu can determine which signalPdus are transmitted by evaluating the selector field, which carries a unique selector code for each sub-part.			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu			
Mapping Rule			Mapping Type
Create container for each received multiplexed Ipdu (IPduTriggering that references the MultiplexedIPdu contains a reference to an "In" Pdu Port.			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_IpduM_00071]

BSW Module		BSW Context	
IpduM		IpduM/IpduMConfig/IpduMRxPathway	
BSW Parameter		BSW Type	
IpduMRxIndication		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Contains the configuration for incoming RxIndication calls.			
Template Description			





<p>A MultiplexedPdu (i.e. NOT a COM I-PDU) contains a DynamicPart, an optional StaticPart and a selectorField. In case of multiplexing this IPdu is routed between the Pdu Multiplexer and the Interface Layer.</p> <p>A multiplexer is used to define variable parts within an IPdu that may carry different signals. The receivers of such a IPdu can determine which signalPdus are transmitted by evaluating the selector field, which carries a unique selector code for each sub-part.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each received multiplexed Ipdu (IPduTriggering that references the MultiplexedIPdu contains a reference to an "In" Pdu Port	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00047]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMByteOrder	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
<p>This parameter defines the ByteOrder for all segments (static and dynamic part) and for the selectorField within the MultiplexedPdu.</p> <p>The absolute position of a segment in the MultiplexedIPdu is determined by the definition of the ByteOrder parameter: If BIG_ENDIAN is specified, the SegmentPosition indicates the bit position of the most significant bit in an IPDU. If LITTLE_ENDIAN is specified, the SegmentPosition indicates the bit position of the least significant bit in an IPDU.</p>	
<b>Template Description</b>	
<p><b>MultiplexedIPdu.selectorFieldByteOrder:</b> This attribute defines the order of the bytes of the selectorField and the packing into the MultiplexedIPdu. Please consider that [constr_3247] and [constr_3223] are restricting the usage of this attribute.</p> <p>In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p> <p><b>SegmentPosition.segmentByteOrder:</b> This attribute defines the order of the bytes of the segment and the packing into the MultiplexedIPdu. Please consider that [constr_3247] and [constr_3224] are restricting the usage of this attribute.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu.selectorFieldByteOrder, SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition.segmentByteOrder	
<b>Mapping Rule</b>	<b>Mapping Type</b>
A mix between Little Endian and Big Endian within a MultiplexedIPdu is not allowed.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00162]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMRxDynamicPart	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	





<p>This container contains the configuration for the dynamic part of incoming RxIndication calls. When an incoming received I-PDU's selector field matches the IpduMRxSelectorValue, the new outgoing I-PDU for the dynamic part is constructed as defined by the segments (defined in the IpduMDynamicSegment container) and sent out with the I-PDU ID referenced by IpduMOutgoingDynamicPduRef.</p> <p>In case no dynamic part shall be extracted from this received I-PDU this container does not exist. This use-case can occur in case a MultiplexedIPdu is received by an ECU which is only interested in the static part of the MultiplexedIPdu.</p>	
<b>Template Description</b>	
One of the Com IPdu alternatives that are transmitted in the Dynamic Part of the MultiplexedIPdu. The selectorFieldCode specifies which Com IPdu is contained in the DynamicPart within a certain transmission of a multiplexed PDU.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::DynamicPartAlternative	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each DynamicPartAlternative of the MultiplexedIPdu.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00048]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMRxDynamicPart	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMOutgoingDynamicPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
When the new I-PDU is sent out it is sent with this I-PDU ID. Reference to the sent PDU representation in the ECU Configuration Description exchange file.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00112]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMRxDynamicPart	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMRxSelectorValue		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This is the selector value that this container refers to.		
<b>Template Description</b>		
The selector field is part of a multiplexed IPdu. It consists of contiguous bits. The value of the selector field selects the layout of the multiplexed part of the IPdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::DynamicPartAlternative.selectorFieldCode		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00113]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication	
BSW Parameter	BSW Type	
IpduMRxDynamicSegment	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>The dynamic part of the multiplexed incoming I-Pdu (referenced by IpduMRxIndicationPduRef) can be separated into several segments. For each segment one IpduMRxDynamicSegment container shall be created that contains the location and the length of the segment.</p> <p>Please note that each configured segment will be copied into the destination I-Pdu that is referenced in the IpduMRxDynamic Part container and will be copied from the same location in the multiplexed incoming I-Pdu. The segment layout for all dynamic Parts is always identical.</p>		
Template Description		
<p>The StaticPart and the DynamicPart can be separated in multiple segments within the multiplexed PDU.</p> <p>The ISignalPdus are copied bit by bit into the MultiplexedIPdu. If the space of the first segment is 5 bits large than the first 5 bits of the ISignalPdu are copied into this first segment and so on.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition		
Mapping Rule		Mapping Type
Shall be derived from segmentPosition elements that are aggregated by the DynamicPart.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00170]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMRxDynamicSegment	
BSW Parameter	BSW Type	
IpduMSegmentLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Length of the segment in bits.		
Template Description		
Data Length of the segment in bits.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition.segmentLength		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00114]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMRxDynamicSegment	
BSW Parameter	BSW Type	
IpduMSegmentPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Segments bit position in the multiplexed Pdu.		
Template Description		





Segments bit position relatively to the beginning of a multiplexed IPdu.  Note that the absolute position of the segment in the MultiplexedIPdu is determined by the definition of the segmentByteOrder attribute of the SegmentPosition. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the IPdu. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the IPdu. In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition. <a href="#">segmentPosition</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00159]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMRxHandled		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This is the I-PDU ID of the incoming I-PDU. If an incoming RxIndication's I-PDU ID matches this value then it is unpacked according to the specification in this container.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00109]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMRxIndicationPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the received Pdu representation in the ECU Configuration Description exchange file.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00108]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication	
<b>BSW Parameter</b>		<b>BSW Type</b>





IpduMRxStaticPart		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the configuration for the static part of incoming RxIndication calls. On reception, the new outgoing I-PDU for the static part is constructed as defined by the segments (defined in the IpduMStaticSegment container) and sent out with the I-PDU ID referenced by IpduMOutgoingStaticPduRef.		
<b>Template Description</b>		
Some parts/signals of the I-PDU may be the same regardless of the selector field. Such a part is called static part. The static part is optional.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::StaticPart		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container if StaticPart exists in the MultiplexedIPdu.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00049]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMRxStaticPart	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMOutgoingStaticPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
When the new I-PDU is sent out it is sent with this I-PDU ID. Reference to the sent Pdu representation in the ECU Configuration Description exchange file.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00115]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMRxStaticSegment		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
The static part of the multiplexed incoming I-Pdu (referenced by IpduMRxIndicationPduRef) can be separated into several segments. For each segment one IpduMRxStaticSegment container shall be created that contains the location and the length of the segment.  Please note that each configured segment will be copied into the destination I-Pdu that is referenced in the IpduMRxStatic Part container and will be copied from the same location in the multiplexed incoming I-Pdu.		
<b>Template Description</b>		
The StaticPart and the DynamicPart can be separated in multiple segments within the multiplexed PDU.  The ISignalPdu are copied bit by bit into the MultiplexedIPdu. If the space of the first segment is 5 bits large than the first 5 bits of the ISignalPdu are copied into this first segment and so on.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition		







Mapping Rule	Mapping Type
Shall be derived from segmentPosition elements that are aggregated by the StaticPart.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00169]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMRxStaticSegment	
BSW Parameter	BSW Type	
IpduMSegmentLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Length of the segment in bits.		
Template Description		
Data Length of the segment in bits.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition. <a href="#">segmentLength</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_IpduM_00114]	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMRxStaticSegment	
BSW Parameter	BSW Type	
IpduMSegmentPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Segments bit position in the multiplexed Pdu.		
Template Description		
Segments bit position relatively to the beginning of a multiplexed IPdu.		
Note that the absolute position of the segment in the MultiplexedIPdu is determined by the definition of the segmentByteOrder attribute of the SegmentPosition. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the IPdu. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the IPdu. In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition. <a href="#">segmentPosition</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_IpduM_00159]	

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication	
BSW Parameter	BSW Type	
IpduMSelectorField	ECUC-PARAM-CONF-CONTAINER-DEF	





<b>BSW Description</b>	
This contains the location and the length of the selector field.	
<b>Template Description</b>	
The StaticPart and the DynamicPart can be separated in multiple segments within the multiplexed PDU. The ISignalPdus are copied bit by bit into the MultiplexedIPdu. If the space of the first segment is 5 bits large than the first 5 bits of the ISignalPdu are copied into this first segment and so on.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Can be derived from the segmentPosition.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00054]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMSelectorField	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMSelectorFieldLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Length of the selector field in bits.		
<b>Template Description</b>		
The size in bits of the selector field shall be configurable in a range of 1-16 bits. In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu.selectorFieldLength		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00160]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMRxPathway/IpduMRxIndication/IpduMSelectorField	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMSelectorFieldPosition		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Selector field bit position in the multiplexed Pdu. Range: 0..63 for CAN/ LIN I-PDUs, 0..511 for CAN FD I-PDUs, 0..2031 for FlexRay I-PDUs.		
<b>Template Description</b>		





<p>This parameter is necessary to describe the position of the selector field within the IPdu.</p> <p>Note that the absolute position of the selectorField in the MultiplexedIPdu is determined by the definition of the selectorField ByteOrder attribute of the Multiplexed Pdu. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the IPdu. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the IPdu. In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p> <p>In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu.selectorFieldStartPosition	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00161]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMTxPathway		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Contains the configuration parameters transmitted I-PDUs by the IpduM module.		
<b>Template Description</b>		
<p>A MultiplexedPdu (i.e. NOT a COM I-PDU) contains a DynamicPart, an optional StaticPart and a selectorField. In case of multiplexing this IPdu is routed between the Pdu Multiplexer and the Interface Layer.</p> <p>A multiplexer is used to define variable parts within an IPdu that may carry different signals. The receivers of such a IPdu can determine which signalPDUs are transmitted by evaluating the selector field, which carries a unique selector code for each sub-part.</p>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container for each transmitted multiplexed Ipdu (IPduTriggering that references the MultiplexedIPdu contains a reference to an "Out" Pdu Port.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_IpduM_00070]

<b>BSW Module</b>	<b>BSW Context</b>	
IpduM	IpduM/IpduMConfig/IpduMTxPathway	
<b>BSW Parameter</b>		<b>BSW Type</b>
IpduMTxRequest		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container is used to specify the configuration for Transmit requests. There will be one instance of this container for each I-PDU that can be requested for transmission (the outgoing I-PDUs) by the IpduM.		
<b>Template Description</b>		





<p>A MultiplexedPdu (i.e. NOT a COM I-PDU) contains a DynamicPart, an optional StaticPart and a selectorField. In case of multiplexing this IPdu is routed between the Pdu Multiplexer and the Interface Layer.</p> <p>A multiplexer is used to define variable parts within an IPdu that may carry different signals. The receivers of such a IPdu can determine which signalPdus are transmitted by evaluating the selector field, which carries a unique selector code for each sub-part.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each transmitted multiplexed Ipdu	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00052]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMByteOrder	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
<p>This parameter defines the ByteOrder for all segments (static and dynamic part) and for the selectorField within the MultiplexedPdu.</p> <p>The absolute position of a segment in the MultiplexedIPdu is determined by the definition of the ByteOrder parameter: If BIG_ENDIAN is specified, the SegmentPosition indicates the bit position of the most significant bit in an IPDU. If LITTLE_ENDIAN is specified, the SegmentPosition indicates the bit position of the least significant bit in an IPDU.</p>	
<b>Template Description</b>	
<p><b>MultiplexedIPdu.selectorFieldByteOrder:</b> This attribute defines the order of the bytes of the selectorField and the packing into the MultiplexedIPdu. Please consider that [constr_3247] and [constr_3223] are restricting the usage of this attribute.</p> <p>In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p> <p><b>SegmentPosition.segmentByteOrder:</b> This attribute defines the order of the bytes of the segment and the packing into the MultiplexedIPdu. Please consider that [constr_3247] and [constr_3224] are restricting the usage of this attribute.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu.selectorFieldByteOrder, SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition.segmentByteOrder	
<b>Mapping Rule</b>	<b>Mapping Type</b>
A mix between Little Endian and Big Endian within a MultiplexedIPdu is not allowed.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00162]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMIPduUnusedAreasDefault	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
<p>IpduM module fills not used areas of an I-PDU with this bit-pattern If this attribute is omitted the IpduM module does not fill the I-PDU.</p>	
<b>Template Description</b>	





AUTOSAR COM and AUTOSAR IPDUM are filling not used areas of an IPdu with this bit-pattern. This attribute is mandatory to avoid undefined behavior. This byte-pattern will be repeated throughout the IPdu.

In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.

<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu. <a href="#">unusedBitPattern</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00121]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMInitialDynamicPart	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the dynamic part that shall be used to initialize this multiplexed TX-I-PDU.	
<b>Template Description</b>	
Dynamic part that shall be used to initialize this multiplexed IPdu. Constraint: Only one "DynamicPartAlternative" in a "DynamicPart" shall be the initialDynamicPart.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::DynamicPartAlternative. <a href="#">initialDynamicPart</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If the attribute initialDynamicPart is set to true then create this reference.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00157]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMOutgoingPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the PDU defining the outgoing I-PDU. When the outgoing I-PDU is sent this is the I-PDU ID to give it. It is the IpduM I-PDU ID of the assembled I-PDU.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00120]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest	
BSW Parameter		BSW Type
IpduMSelectorField		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This contains the location and the length of the selector field.		
Template Description		
The StaticPart and the DynamicPart can be separated in multiple segments within the multiplexed PDU. The ISignalPdu are copied bit by bit into the MultiplexedIPdu. If the space of the first segment is 5 bits large than the first 5 bits of the ISignalPdu are copied into this first segment and so on.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition		
Mapping Rule		Mapping Type
Can be derived from the segmentPosition.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00054]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMSelectorField	
BSW Parameter		BSW Type
IpduMSelectorFieldLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of the selector field in bits.		
Template Description		
The size in bits of the selector field shall be configurable in a range of 1-16 bits. In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu.selectorFieldLength		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00160]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMSelectorField	
BSW Parameter		BSW Type
IpduMSelectorFieldPosition		ECUC-INTEGER-PARAM-DEF
BSW Description		
Selector field bit position in the multiplexed Pdu. Range: 0..63 for CAN/ LIN I-PDUs, 0..511 for CAN FD I-PDUs, 0..2031 for FlexRay I-PDUs.		
Template Description		





<p>This parameter is necessary to describe the position of the selector field within the IPdu.</p> <p>Note that the absolute position of the selectorField in the MultiplexedIPdu is determined by the definition of the selectorField ByteOrder attribute of the Multiplexed Pdu. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the IPdu. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the IPdu. In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p> <p>In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu.selectorFieldStartPosition	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00161]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMTxConfirmationPduId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Handle Id used by the PduR for confirmation (IpduM_TxConfirmation) and for TriggerTransmit (IpduM_TriggerTransmit). The existence of this parameter is essential for the PduR generation tool to actually find a symbolicNameValue for the Outgoing Pdu.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00158]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMTxDynamicPart	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Configuration parameters for an instance of a TxRequest call into the IpduM. When a Tx Request with the IpduMTxDynamic HandleId is received by the IpduM, all segments (defined in the IpduMDynamicSegment container) are copied from the incoming I-PDU into the outgoing I-PDU buffer and then the send mode honored. This container is used by the dynamic part of a TxRequest configuration. Therefore, for each outgoing I-PDU there will be one instance of this container for the dynamic part.	
<b>Template Description</b>	
One of the Com IPdu alternatives that are transmitted in the Dynamic Part of the MultiplexedIPdu. The selectorFieldCode specifies which Com IPdu is contained in the DynamicPart within a certain transmission of a multiplexed PDU.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::DynamicPartAlternative	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each DynamicPartAlternative of the MultiplexedIPdu.	full





Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00056]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxDynamicPart	
BSW Parameter		BSW Type
IpduMjitUpdate		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If configured to true fetch the data of this part Just-In-Time via the triggerTransmit API of the PduR.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00167]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxDynamicPart	
BSW Parameter		BSW Type
IpduMTxDynamicConfirmation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
A transmit request can be confirmed by the lower layer. If this parameter is set to true a confirmation of the I-PDU in COM representing the dynamic part is generated.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00163]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxDynamicPart	
BSW Parameter		BSW Type
IpduMTxDynamicHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This defines an incoming handle id. When the handle of an incoming Tx Request matches this id, the configured dynamic segments are copied and the IpduMTxTriggerMode is honored.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local







Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00127]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxDynamicPart	
BSW Parameter		BSW Type
IpduMTxDynamicPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu representation in the ECU Configuration Description exchange file to be transmitted.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00126]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest	
BSW Parameter		BSW Type
IpduMTxDynamicSegment		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>The dynamic part of the multiplexed outgoing I-Pdu (referenced by IpduMOutgoingPduRef) can be separated into several segments. For each segment one IpduMTxDynamicSegment container shall be created that contains the location and the length of the segment.</p> <p>Please note that each configured segment will be copied out of the source I-Pdu that is referenced in the IpduMTxDynamicPart container and will be copied to the same location in the multiplexed outgoing I-Pdu. The segment layout for all dynamic Parts is always identical.</p>		
Template Description		
<p>The StaticPart and the DynamicPart can be separated in multiple segments within the multiplexed PDU.</p> <p>The ISignalPdu are copied bit by bit into the MultiplexedIPdu. If the space of the first segment is 5 bits large than the first 5 bits of the ISignalPdu are copied into this first segment and so on.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition		
Mapping Rule		Mapping Type
Shall be derived from segmentPosition elements that are aggregated by the DynamicPart.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00168]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxDynamicSegment	
BSW Parameter		BSW Type
IpduMSegmentLength		ECUC-INTEGER-PARAM-DEF
BSW Description		





Length of the segment in bits.	
<b>Template Description</b>	
Data Length of the segment in bits.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition. <a href="#">segmentLength</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00114]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxDynamicSegment
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMSegmentPosition	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Segments bit position in the multiplexed Pdu.	
<b>Template Description</b>	
Segments bit position relatively to the beginning of a multiplexed IPdu. Note that the absolute position of the segment in the MultiplexedIPdu is determined by the definition of the segmentByteOrder attribute of the SegmentPosition. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the IPdu. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the IPdu. In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition. <a href="#">segmentPosition</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_IpduM_00159]

<b>BSW Module</b>	<b>BSW Context</b>
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest
<b>BSW Parameter</b>	<b>BSW Type</b>
IpduMTxStaticPart	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Configuration parameters for an instance of a Tx_Request call into the IpduM. When a Tx Request with the IpduMTxStatic HandleId is received by the IpduM, all segments (defined in the IpduMStaticSegment container) are copied from the incoming I-PDU into the outgoing I-PDU buffer and then the send mode honored. This container is used for the static part of a Tx Request configuration. Therefore, for each outgoing I-PDU there will be one instance of this container for the static part if it exists.	
<b>Template Description</b>	
Some parts/signals of the I-PDU may be the same regardless of the selector field. Such a part is called static part. The static part is optional.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication:: <a href="#">StaticPart</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container if StaticPart exists in the MultiplexedIPdu.	full





Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00082]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxStaticPart	
BSW Parameter		BSW Type
IpduMjitUpdate		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If configured to true fetch the data of this part Just-In-Time via the triggerTransmit API of the PduR.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00167]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxStaticPart	
BSW Parameter		BSW Type
IpduMTxStaticConfirmation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
A transmit request can be confirmed by the lower layer. If this parameter is set to true a confirmation of the I-PDU in COM representing the static part is generated.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00164]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxStaticPart	
BSW Parameter		BSW Type
IpduMTxStaticHandfield		ECUC-INTEGER-PARAM-DEF
BSW Description		
This defines an incoming handle id. When the handle of an incoming Tx Request matches this id, the configured static segments are copied and the IpduMTxTriggerMode is honored.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00129]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxStaticPart	
BSW Parameter		BSW Type
IpduMTxStaticPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu representation in the ECU Configuration Description exchange file to be transmitted.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00128]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest	
BSW Parameter		BSW Type
IpduMTxStaticSegment		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>The static part of the multiplexed outgoing I-Pdu (referenced by IpduMOutgoingPduRef) can be separated into several segments. For each segment one IpduMTxStaticSegment container shall be created that contains the location and the length of the segment.</p> <p>Please note that each segment in the source I-Pdu that is referenced in the IpduMTxStaticPart container will be copied to the same location in the multiplexed outgoing I-Pdu.</p>		
Template Description		
<p>The StaticPart and the DynamicPart can be separated in multiple segments within the multiplexed PDU.</p> <p>The ISignalPdus are copied bit by bit into the MultiplexedIPdu. If the space of the first segment is 5 bits large than the first 5 bits of the ISignalPdu are copied into this first segment and so on.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition		
Mapping Rule		Mapping Type
Shall be derived from segmentPosition elements that are aggregated by the StaticPart.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00171]

BSW Module	BSW Context	
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxStaticSegment	
BSW Parameter		BSW Type
IpduMSegmentLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of the segment in bits.		





Template Description	
Data Length of the segment in bits.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition. <a href="#">segmentLength</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00114]

BSW Module	BSW Context
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest/IpduMTxStaticSegment
BSW Parameter	BSW Type
IpduMSegmentPosition	ECUC-INTEGER-PARAM-DEF
BSW Description	
Segments bit position in the multiplexed Pdu.	
Template Description	
Segments bit position relatively to the beginning of a multiplexed IPdu.  Note that the absolute position of the segment in the MultiplexedIPdu is determined by the definition of the segmentByteOrder attribute of the SegmentPosition. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the IPdu. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the IPdu. In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SegmentPosition. <a href="#">segmentPosition</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00159]

BSW Module	BSW Context
IpduM	IpduM/IpduMConfig/IpduMTxPathway/IpduMTxRequest
BSW Parameter	BSW Type
IpduMTxTriggerMode	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
Selects whether to send the multiplexed I-PDU immediately or at some later date.	
Template Description	
IPduM can be configured to send a transmission request for the new multiplexed IPdu to the PDU-Router because of the trigger conditions/ modes that are described in the TriggerMode enumeration.  In a complete System Description this attribute is mandatory. If a MultiplexedPdu is received by a Pdu Gateway and is not delivered to the IPduM but routed directly to a bus interface then the content of the MultiplexedPdu doesn't need to be described in the System Extract/Ecu Extract. To support this use case the multiplicity is set to 0..1.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::MultiplexedIPdu. <a href="#">triggerMode</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_IpduM_00125]

BSW Module	BSW Context	
IpduM	IpduM	
BSW Parameter		BSW Type
IpduMGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the general configuration parameters of IpduM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00130]

BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral	
BSW Parameter		BSW Type
IpduMContainedTxPduPriorityHandling		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter enables/disables handling of priority for IpduMContainedTxPdu's with IpduMContainedTxPduCollection Semantics IPDUM_LAST_IS_BEST. true: enabled false: disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00209]

BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral	
BSW Parameter		BSW Type
IpduMDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00132]

BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral	
BSW Parameter	BSW Type	
IpduMHeaderByteOrder	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This parameter defines the ByteOrder of the headers inside a Container I-PDU.		
Template Description		
Defines the byteOrder of the header in ContainerIPdus.		
M2 Parameter		
SystemTemplate::System.containerIPduHeaderByteOrder		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00197]

BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral/IpduMHeaderByteOrder	
BSW Parameter	BSW Type	
IPDUM_BIG_ENDIAN	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Headers inside a Container I-PDU shall be ordered big endian.		
Template Description		
Most significant byte shall come at the lowest address (also known as BigEndian or as Motorola-Format)		
M2 Parameter		
GenericStructure::GeneralTemplateClasses::PrimitiveTypes::ByteOrderEnum.mostSignificantByteFirst		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral/IpduMHeaderByteOrder	
BSW Parameter	BSW Type	
IPDUM_LITTLE_ENDIAN	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Headers inside a Container I-PDU shall be ordered little endian.		
Template Description		
Most significant byte shall come highest address (also known as LittleEndian or as Intel-Format)		
M2 Parameter		
GenericStructure::GeneralTemplateClasses::PrimitiveTypes::ByteOrderEnum.mostSignificantByteLast		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral	
BSW Parameter		BSW Type
IpduMMaxTransmitRetries		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of retries to send a container message in case PduR_IPduMTransmit returns E_NOT_OK.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00219]

BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral	
BSW Parameter		BSW Type
IpduMMetaDataSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter enables/disables the support of meta-data feature. true: enabled false: disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00205]

BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral	
BSW Parameter		BSW Type
IpduMStaticPartExists		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This is to allow optimizations in the case the IpduM will never be used with a static part. Note that this is a pre-compile option. If this is set to False then it will not be possible to add static parts after compilation. True: A static part may exist. False: A static part will never exist.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00133]



BSW Module	BSW Context	
IpduM	IpduM/IpduMGeneral	
BSW Parameter		BSW Type
IpduMVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Active/Deactivate the version information API. true: version information activated false: version information deactivated		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00134]

BSW Module	BSW Context	
IpduM	IpduM	
BSW Parameter		BSW Type
IpduMPublishedInformation		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Additional published parameters not covered by CommonPublishedInformation container. Note that these parameters do not have any configuration class setting, since they are published information.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00141]

BSW Module	BSW Context	
IpduM	IpduM/IpduMPublishedInformation	
BSW Parameter		BSW Type
IpduMRxDirectComInvocation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If set to TRUE the COM invocation optimization as defined in IPDUM140 is implemented.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_IpduM_00142]

### C.1.4 SecOc Mapping

BSW Module	BSW Context	
SecOC	SecOC	
BSW Parameter		BSW Type
SecOCGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the general configuration parameters of the SecOC module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00002]

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter		BSW Type
SecOCDefaultAuthenticationInformationPattern		ECUC-INTEGER-PARAM-DEF
BSW Description		
The parameter describes the behaviour of SecOC when authentication build counter has reached the configuration value SecOCAuthenticationBuildAttempts, or the query of the freshness function returns E_NOT_OK or the calculation of the authenticator has returned a non-recoverable error such as returning E_NOT_OK or KEY_FAILURE. If the configuration parameter is not present, SecOC module shall remove the Authentic I-PDU from its internal buffer and cancel the transmission request. If the configuration parameter is present, SecOC will use this value for each byte of Freshness Value and Authenticator when building the Authentication Information, and will not cancel the transmission request.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00098]

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter		BSW Type
SecOCDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_-00007]

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter		BSW Type
SecOCEnableForcedPassOverride		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
When this configuration option is set to TRUE then the functionality inside the function SecOC_VerifyStatusOverride to send I-PDUs to upper layer independent of the verification result is enabled.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00051]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter		BSW Type
SecOCEnableSecurityEventReporting		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00114]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter		BSW Type
SecOCIgnoreVerificationResult		ECUC-BOOLEAN-PARAM-DEF
BSW Description		





<p>The result of the authentication process (e.g. MAC Verify) is ignored after the first try and the SecOC proceeds like the result was a success. The calculation of the authenticator is still done, only its result will be ignored.</p> <ul style="list-style-type: none"> <li>• true: enabled (verification result is ignored).</li> <li>• false: disabled (verification result is NOT ignored).</li> </ul>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00052]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCMaxAlignScalarType		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
The scalar type which has the maximum alignment restrictions on the given platform. This type can be e.g. uint8, uint16 or uint32.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SecOC_-00047]	

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCMaxTransmitRetries		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Maximum number of retries to send a secured I-PDU in case PduR_SecOCTransmit returns E_NOT_OK.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SecOC_-00119]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter	BSW Type	
SecOCOverrideStatusWithDataId	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>This option defines if the parameter "ValueId" of the function SecOC_VerifyStatusOverride() accepts the freshness value (as a collection of one or more Secured I-PDUs to freshness) or the dataID for individual Secured I-PDUs.</p> <ul style="list-style-type: none"> <li>• true: Function SecOC_VerifyStatusOverride accepts SecOCDataId as parameter.</li> <li>• false: Function SecOC_VerifyStatusOverride accepts SecOCFreshnessValueId as parameter.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00099]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter	BSW Type	
SecOCPropagateOnlyFinalVerificationStatus	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>This parameter is used to specify if the verification status shall be reported only after the final determination of the verification status (TRUE) or on every verification attempt (FALSE).</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00112]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter	BSW Type	
SecOCQueryFreshnessValue	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
<p>This parameter specifies if the freshness value shall be determined through a C-function (CD) or a software component (SW-C).</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00078]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter		BSW Type
SecOCSecurityEventRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to IdsMEvent elements representing the security events that the SecOC module shall report to the IdsM in case the corresponding security related event occurs (and if SecOCEnableSecurityEventReporting is set to "true"). The standardized security events in this container can be extended by vendor-specific security events.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00115]

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral/SecOCSecurityEventRefs	
BSW Parameter		BSW Type
SECOC_SEV_FRESHNESS_NOT_AVAILABLE		ECUC-REFERENCE-DEF
BSW Description		
Failed to get freshness value from FvM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00117]

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral/SecOCSecurityEventRefs	
BSW Parameter		BSW Type
SECOC_SEV_MAC_VERIFICATION_FAILED		ECUC-REFERENCE-DEF
BSW Description		
MAC verification of a received PDU failed.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00116]

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter		BSW Type
SecOCVerificationStatusCallout		ECUC-FUNCTION-NAME-DEF
BSW Description		
Entry address of the customer specific call out routine which shall be invoked in case of a verification attempt.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00004]

BSW Module	BSW Context	
SecOC	SecOC/SecOCGeneral	
BSW Parameter		BSW Type
SecOCVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If true the SecOC_GetVersionInfo API is available.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00003]

BSW Module	BSW Context	
SecOC	SecOC	
BSW Parameter		BSW Type
SecOCMainFunctionRx		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Each element of this container defines one instance of SecOC_MainFunctionRx.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00104]

BSW Module	BSW Context	
SecOC	SecOC/SecOCMainFunctionRx	
BSW Parameter		BSW Type
SecOCMainFunctionPeriodRx		ECUC-FLOAT-PARAM-DEF
BSW Description		
Allows to configure the time for the respective MainFunction instance of the Rx path (as float in seconds).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00106]

BSW Module	BSW Context	
SecOC	SecOC/SecOCMainFunctionRx	
BSW Parameter		BSW Type
SecOCMainFunctionRxPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to EcucPartition, where the according SecOC_MainFunction instance is assigned to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00107]

BSW Module	BSW Context	
SecOC	SecOC	
BSW Parameter		BSW Type
SecOCMainFunctionTx		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Each element of this container defines one instance of SecOC_MainFunctionTx.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00105]



BSW Module		BSW Context	
SecOC		SecOC/SecOCMainFunctionTx	
BSW Parameter		BSW Type	
SecOCMainFunctionPeriodTx		ECUC-FLOAT-PARAM-DEF	
BSW Description			
Allows to configure the time for the respective MainFunction instance of the Tx path (as float in seconds).			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_SecOC_ - 00108]

BSW Module		BSW Context	
SecOC		SecOC/SecOCMainFunctionTx	
BSW Parameter		BSW Type	
SecOCMainFunctionTxPartitionRef		ECUC-REFERENCE-DEF	
BSW Description			
Reference to EcucPartition, where the according SecOC_MainFunction instance is assigned to.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_SecOC_ - 00109]

BSW Module		BSW Context	
SecOC		SecOC	
BSW Parameter		BSW Type	
SecOCRxPduProcessing		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Contains the parameters to configure the RxPdus to be verified by the SecOC module.			
Template Description			
<p>If useAsCryptographicPdu is not set or set to false this IPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information (Freshness Counter and an Authenticator).</p> <p>If useAsCryptographicPdu is set to true this IPdu contains the Authenticator for a payload that is transported in a separate message. The separate Authentic IPdu is described by the Pdu that is referenced with the payload reference from this SecuredIPdu.</p>			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu			
Mapping Rule			Mapping Type





This container shall be created for every SecuredIPdu that is received by the regarded Ecu. The information whether the SecuredIPdu is transmitted or received by the Ecu shall be derived from PduTriggering.iPduPort reference. If an IPduPort of the Ecu with the communicationDirection = out is referenced then the SecuredIPdu is transmitted. If an IPduPort of the Ecu with the communicationDirection = in is referenced then the SecuredIPdu is received.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_ - 00011]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCAuthDataFreshnessLen		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The length of the external authentic PDU data in bits (uint16).		
<b>Template Description</b>		
This attribute defines the length in bits of the authentic PDU data that is passed to the SWC that verifies and generates the Freshness.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.authDataFreshnessLength		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_ - 00082]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCAuthDataFreshnessStartPosition		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This value determines the start position in bits (uint16) of the Authentic PDU that shall be passed on to the Freshness SWC. The bit counting is done according to TPS_SYST_01068 and the bit ordering is done according to TPS_SYST_01069.		
<b>Template Description</b>		
This value determines the start position in bits of the Authentic PDU that shall be passed on to the SWC that verifies and generates the Freshness. The bit counting is done according to TPS_SYST_01068.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.authDataFreshnessStartPosition		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_ - 00081]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCAuthInfoTruncLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the length in bits of the authentication code to be included in the payload of the Secured I-PDU.		
Template Description		
This attribute defines the length in bits of the authentication code to be included in the payload of the authenticated Pdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationAuthenticatio <b>Props.authInfoTxLength</b>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00095]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCAuthenticationBuildAttempts	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter specifies the number of authentication build attempts.		
Template Description		
This attribute specifies the number of authentication build attempts.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunication <b>Props.authenticationBuildAttempts</b>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00079]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCAuthenticationVerifyAttempts	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter specifies the number of authentication verify attempts that are to be carried out when the verification of the authentication information failed for a given Secured I-PDU. If zero is set, then only one authentication verification attempt is done.		
Template Description		
This attribute defines the additional number of authentication attempts that are to be carried out when the generation of the authentication information failed for a given SecuredIPdu. If zero is set than only one authentication attempt is done.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunication <b>Props.authenticationRetries</b>		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_ - 00080]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCClientServerVerificationStatusPropagationMode		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter is used to determine the propagation of the verification status through the client/server interface to an SW-C.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_ - 00113]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing/SecOCClientServerVerificationStatusPropagationMode	
<b>BSW Parameter</b>		<b>BSW Type</b>
BOTH		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
Both "TRUE" and "FALSE" AuthenticationStatus is propagated to SW-C		
<b>Template Description</b>		
Verification attempts that came out "false" or "true" shall be forwarded to the application software.		
<b>M2 Parameter</b>		
CommonStructure::ServiceNeeds::VerificationStatusIndicationModeEnum.failureAndSuccess		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing/SecOCClientServerVerificationStatusPropagationMode	
<b>BSW Parameter</b>		<b>BSW Type</b>
FAILURE_ONLY		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
Only "FALSE" Authentication Status is propagated to SW-C		
<b>Template Description</b>		
Only verification attempts that came out "false" shall be forwarded to the application software.		
<b>M2 Parameter</b>		
CommonStructure::ServiceNeeds::VerificationStatusIndicationModeEnum.failureOnly		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCDataId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines a unique numerical identifier for the Secured I-PDU.		
Template Description		
This attribute defines a numerical identifier for the Secured I-PDU.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.dataId		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00030]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCDynamicRuntimeLengthHandling	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Defines whether the length information for handling this received Pdu is taken from the configuration or from the actually provided length information during runtime. true: SecuredIPdu length information is taken from the actually provided length information during runtime. false: SecuredIPdu length information is taken from parameter PduLength of the Pdu.		
Template Description		
Defines whether the length information for handling this SecuredIPdu with SecuredIPdu.useSecuredPduHeader=noHeader is taken from the configuration or from the actually provided length information during runtime. true: SecuredIPdu length information is taken from the actually provided length information during runtime. false: SecuredIPdu length information is taken from the configuration.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.dynamicRuntimeLengthHandling		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00118]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCFreshnessValueId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the Id of the Freshness Value. The Freshness Value might be a normal counter or a time value.		
Template Description		
This attribute defines the Id of the Freshness Value. The Freshness Value might be a normal counter or a time value.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.freshnessValueId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00038]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCFreshnessValueLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the complete length in bits of the Freshness Value. As long as the key doesn't change the counter shall not overflow. The length of the counter shall be determined based on the expected life time of the corresponding key and frequency of usage of the counter.		
Template Description		
This attribute defines the complete length in bits of the Freshness Value. As long as the key doesn't change the counter shall not overflow. The length of the counter shall be determined based on the expected life time of the corresponding key and frequency of usage of the counter.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationFreshnessProps.freshnessValueLength		
Mapping Rule		Mapping Type
1:1 mapping if value is set by SecureCommunicationFreshnessProps.freshnessValueLength. If the attribute is not set to a value the parameter value of 0 shall be assumed which means that no Freshness Value is included in the Secured I-PDU.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00031]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCFreshnessValueTruncLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the length in bits of the Freshness Value to be included in the payload of the Secured I-PDU. This length is specific to the least significant bits of the complete Freshness Counter. If the parameter is 0 no Freshness Value is included in the Secured I-PDU.		
Template Description		





This attribute defines the length in bits of the Freshness Value to be included in the payload of the Secured I-PDU. This length is specific to the least significant bits of the complete Freshness Counter. If the attribute is 0 no Freshness Value is included in the Secured I-PDU.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationFreshnessProps. <a href="#">freshnessValueTxLength</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping if value is set by SecureCommunicationFreshnessProps.freshnessValueTxLength. If the attribute is not set to a value the parameter value of 0 shall be assumed which means that no Freshness Value is included in the Secured I-PDU.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00094]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCReceptionOverflowStrategy		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the overflow strategy for receiving PDUs		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00076]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCReceptionQueueSize		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the queue size in case the overflow strategy for receiving PDUs is set to QUEUE.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00077]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCRxAuthServiceConfigRef	ECUC-REFERENCE-DEF	
BSW Description		
This reference is used to define which crypto service function is called for authentication. If PDUs with a dynamic length are used (e.g. CanTP or Dynamic Length PDUs) a MAC algorithm has to be chosen, that is not vulnerable to length extension attack (e.g. CMAC/HMAC).		
Template Description		
This reference identifies the crypto profile applicable to the usage (send, receive) of the also referenced SecuredIPdu. Obviously, this reference is only applicable if the PduTriggering also references a SecuredIPdu in the role iPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering. <a href="#">secOcCryptoMapping</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00048]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCRxAuthenticPduLayer	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container specifies the Pdu that is transmitted by the SecOC module to the PduR after the Mac was verified.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00044]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxAuthenticPduLayer	
BSW Parameter	BSW Type	
SecOCPduType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This parameter defines API Type to use for communication with PduR.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00075]



BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxAuthenticPduLayer	
BSW Parameter		BSW Type
SecOCRxAuthenticLayerPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
PDU identifier assigned by SecOC module. Used by PduR for SecOC_TpCancelReceive.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00102]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxAuthenticPduLayer	
BSW Parameter		BSW Type
SecOCRxAuthenticLayerPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the global Pdu.		
Template Description		
Reference to a Pdu that will be protected against unauthorized manipulation and replay attacks.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.payload		
Mapping Rule		Mapping Type
Reference to the EcuC Pdu which represents the verified SecuredIPdu PduTriggering		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00045]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter		BSW Type
SecOCRxPduMainFunctionRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the SecOC_MainFunctionRx this PDU belongs to. Mandatory, if multiple main functions are defined.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00110]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter	BSW Type	
SecOCRxPduSecuredArea	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container specifies an area in the Authentic I-Pdu that will be the input to the Authenticator verification algorithm. If this container does not exist in the configuration the complete Authentic I-Pdu will be the input to the Authenticator verification algorithm.		
Template Description		
This attribute defines the start position (offset in byte) of the area within the payload Pdu which will be secured.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps. <a href="#">securedAreaOffset</a>		
Mapping Rule		Mapping Type
Create container if the securedAreaOffset and securedAreaLength is defined for the SecuredIPdu in the System Description.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00089]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxPduSecuredArea	
BSW Parameter	BSW Type	
SecOCSecuredRxPduLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the length (in bytes) of the area within the Pdu which is secured		
Template Description		
This attribute defines the length in bytes of the area within the payload Pdu which will be secured.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps. <a href="#">securedAreaLength</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00091]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxPduSecuredArea	
BSW Parameter	BSW Type	
SecOCSecuredRxPduOffset	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the start position (offset in bytes) of the area within the Pdu which is secured		
Template Description		
This attribute defines the start position (offset in byte) of the area within the payload Pdu which will be secured.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps. <a href="#">securedAreaOffset</a>		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00090]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCRxSecuredPduLayer		ECUC-CHOICE-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac verification is provided.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00041]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCRxSecuredPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac verification is provided.		
<b>Template Description</b>		
If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data.		
If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useAsCryptographicIPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create the SecOCRxSecuredPdu if the SecuredIPdu is received by the regarded ECU and the attribute useAsCryptographicIPdu = false or not defined		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00069]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCAuthPduHeaderLength		ECUC-INTEGER-PARAM-DEF





<b>BSW Description</b>	
This parameter indicates the length (in bytes) of the Secured I-PDU Header in the Secured I-PDU. The length of zero means there's no header in the PDU.	
<b>Template Description</b>	
This attribute defines the size of the header which is inserted into the SecuredIPdu. If this attribute is set to anything but no Header, the SecuredIPdu contains the Secured I-PDU Header to indicate the length of the AuthenticIPdu. The AuthenticIPdu contains the original payload, i.e. the secured data.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu. <a href="#">useSecuredPduHeader</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The SecOCAuthPduHeaderLength value shall be derived from useSecuredPduHeader in the following way: If useSecuredIPduHeader is set to "noHeader" the value shall be 0. If useSecuredIPduHeader is set to "securedPduHeader08Bit" the value shall be 1. If useSecuredIPduHeader is set to "securedPduHeader16Bit" the value shall be 2. If useSecuredIPduHeader is set to "securedPduHeader32Bit" the value shall be 4.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00093]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCRxSecuredLayerPduId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
PDU identifier assigned by SecOC module. Used by PduR for SecOC_[If Tp]RxIndication.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00043]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCRxSecuredLayerPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the global Pdu.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering. <a href="#">iPdu</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Reference to the EcuC Pdu which represents the received SecuredIPdu PduTriggering		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00042]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPdu	
BSW Parameter		BSW Type
SecOCSecuredRxPduVerification		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter defines whether the signature authentication or MAC verification shall be performed on this Secured I-PDU. If set to false, the SecOC module extracts the Authentic I-PDU from the Secured I-PDU without verification.		
Template Description		
This attribute defines the bypassing of signature authentication or MAC verification in the receiving ECU. If not defined or set to true the signature authentication or MAC verification shall be performed for the SecuredIPdu. If set to false the signature authentication or MAC verification shall not be performed for the SecuredIPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPduPort.rxSecurityVerification		
Mapping Rule		Mapping Type
SecOCSecuredRxPduVerification is true if rxSecurityVerification is not defined, otherwise SecOCSecuredRxPduVerification = rxSecurityVerification.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00092]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer	
BSW Parameter		BSW Type
SecOCRxSecuredPduCollection		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies two Pdus that are received by the SecOC module from the PduR and a message linking between them.		
SecOCRxAuthenticPdu contains the original Authentic I-PDU, i.e. the secured data, and the SecOCRxCryptographicPdu contains the Authenticator, i.e. the actual Authentication Information.		
Template Description		
If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data.		
If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useAsCryptographicIPdu		
Mapping Rule		Mapping Type
Create the SecOCRxSecuredPduCollection if the SecuredIPdu is received by the regarded ECU and the attribute useAsCryptographicIPdu = true		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00067]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection	
BSW Parameter		BSW Type
SecOCRxAuthenticPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		





This container specifies the PDU (that is received by the SecOC module from the PduR) which contains the Secured I-PDU Header and the Authentic I-PDU.	
<b>Template Description</b>	
If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data.	
If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useAsCryptographicIPdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create the SecOCRxAuthenticPdu if the SecuredIPdu is received by the regarded ECU and the attribute useAsCryptographicIPdu = true	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00061]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection/SecOCRxAuthenticPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SecOCAuthPduHeaderLength	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
This parameter indicates the length (in bytes) of the Secured I-PDU Header in the Secured I-PDU. The length of zero means there's no header in the PDU.		
<b>Template Description</b>		
This attribute defines the size of the header which is inserted into the SecuredIPdu. If this attribute is set to anything but no Header, the SecuredIPdu contains the Secured I-PDU Header to indicate the length of the AuthenticIPdu. The AuthenticIPdu contains the original payload, i.e. the secured data.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useSecuredPduHeader		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
The SecOCAuthPduHeaderLength value shall be derived from useSecuredPduHeader in the following way: If useSecuredIPduHeader is set to "noHeader" the value shall be 0. If useSecuredIPduHeader is set to "securedPduHeader08Bit" the value shall be 1. If useSecuredIPduHeader is set to "securedPduHeader16Bit" the value shall be 2. If useSecuredIPduHeader is set to "securedPduHeader32Bit" the value shall be 4.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SecOC_-00093]	

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection/SecOCRxAuthenticPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SecOCRxAuthenticPduId	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
PDU identifier of the Authentic I-PDU assigned by SecOC module. Used by PduR for SecOC_IfRxIndication.		
<b>Template Description</b>		
<b>M2 Parameter</b>		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_ - 00062]

BSW Module	BSW Context
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection/SecOCRxAuthenticPdu
BSW Parameter	BSW Type
SecOCRxAuthenticPduRef	ECUC-REFERENCE-DEF
BSW Description	Reference to the global Pdu.
Template Description	
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPdu
Mapping Rule	Mapping Type
Reference to the Ecu Pdu which represents the received Authentic SecuredIPdu PduTriggering referenced by SecuredIPdu.payload	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_ - 00063]

BSW Module	BSW Context
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection
BSW Parameter	BSW Type
SecOCRxCryptographicPdu	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	This container specifies the Cryptographic Pdu that is received by the SecOC module from the PduR.
Template Description	<p>If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data.</p> <p>If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.</p>
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useAsCryptographicIPdu
Mapping Rule	Mapping Type
Create the SecOCRxCryptographicPdu if the SecuredIPdu is received by the regarded ECU and the attribute useAsCryptographicIPdu = true and SecuredIPdu.payload refers to a PduTriggering which the Ecu Instance receives as well.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_ - 00064]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection/SecOCRxCryptographicPdu	
BSW Parameter		BSW Type
SecOCRxCryptographicPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
PDU identifier of the Cryptographic I-PDU assigned by SecOC module. Used by PduR for SecOC_lfRxIndication.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00065]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection/SecOCRxCryptographicPdu	
BSW Parameter		BSW Type
SecOCRxCryptographicPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the global Pdu.		
Template Description		
Reference to a Pdu that will be protected against unauthorized manipulation and replay attacks.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.payload		
Mapping Rule		Mapping Type
Reference to the EcuC Pdu which represents the received Cryptographic SecuredIPdu Pdu Triggering		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00066]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection	
BSW Parameter		BSW Type
SecOCSecuredRxPduVerification		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter defines whether the signature authentication or MAC verification shall be performed on this Secured I-PDU. If set to false, the SecOC module extracts the Authentic I-PDU from the Secured I-PDU without verification.		
Template Description		
This attribute defines the bypassing of signature authentication or MAC verification in the receiving ECU. If not defined or set to true the signature authentication or MAC verification shall be performed for the SecuredIPdu. If set to false the signature authentication or MAC verification shall not be performed for the SecuredIPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPduPort.rxSecurityVerification		







Mapping Rule	Mapping Type
SecOCSecuredRxPduVerification is true if rxSecurityVerification is not defined, otherwise SecOCSecuredRxPduVerification = rxSecurityVerification.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_-00092]

BSW Module	BSW Context
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection
BSW Parameter	BSW Type
SecOCUseMessageLink	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	SecOC links an Authentic I-PDU and Cryptographic I-PDU together by repeating a specific part (Message Linker) of the Authentic I-PDU in the Cryptographic I-PDU.
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_-00074]

BSW Module	BSW Context
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection/SecOCUseMessageLink
BSW Parameter	BSW Type
SecOCMessageLinkLen	ECUC-INTEGER-PARAM-DEF
BSW Description	Length of the Message Linker inside the Authentic I-PDU in bits.
Template Description	SecOC links an AuthenticIPdu and CryptographicIPdu together by repeating a specific part (Message Linker) of the Authentic IPdu in the CryptographicIPdu. This attribute defines the length in bits of the messageLinker.
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.messageLinkLength
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_-00060]

BSW Module	BSW Context
SecOC	SecOC/SecOCRxPduProcessing/SecOCRxSecuredPduLayer/SecOCRxSecuredPduCollection/SecOCUseMessageLink
BSW Parameter	BSW Type





SecOCMessageLinkPos	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
The position of the Message Linker inside the Authentic I-PDU in bits. The bit counting is done according to 01068 and the bit ordering is done according to TPS_SYST_01069.	
<b>Template Description</b>	
SecOC links an AuthenticIPdu and CryptographicIPdu together by repeating a specific part (Message Linker) of the Authentic IPdu in the CryptographicIPdu. This attribute defines the startPosition in bits of the messageLinker.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.messageLinkPosition	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00059]

<b>BSW Module</b>	<b>BSW Context</b>
SecOC	SecOC/SecOCRxPduProcessing
<b>BSW Parameter</b>	<b>BSW Type</b>
SecOCSameBufferPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
This reference is used to collect Pdus that are using the same SecOC buffer.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00049]

<b>BSW Module</b>	<b>BSW Context</b>
SecOC	SecOC/SecOCRxPduProcessing
<b>BSW Parameter</b>	<b>BSW Type</b>
SecOCUseAuthDataFreshness	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
A Boolean value that indicates if a part of the Authentic-PDU shall be passed on to the SWC that verifies and generates the Freshness. If it is set to TRUE, the values SecOCAuthDataFreshnessStartPosition and SecOCAuthDataFreshnessLen must be set to specify the bit position and length within the Authentic-PDU.	
<b>Template Description</b>	
This attribute describes whether a part of AuthenticPdu contained in a SecuredIPdu shall be passed on to the SWC that verifies and generates the Freshness. The part of the Authentic-PDU is defined by the authDataFreshnessStartPosition and authDataFreshnessLength.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPduPort.useAuthDataFreshness	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full





Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_-00083]

BSW Module	BSW Context	
SecOC	SecOC/SecOCRxPduProcessing	
BSW Parameter		BSW Type
SecOCVerificationStatusPropagationMode		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter is used to describe the propagation of the status of each verification attempt from the SecOC module to SWCs.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00046]

BSW Module	BSW Context	
SecOC	SecOC	
BSW Parameter		BSW Type
SecOCSameBufferPduCollection		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
SecOCBuffer configuration that may be used by a collection of Pdus.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00009]

BSW Module	BSW Context	
SecOC	SecOC/SecOCSameBufferPduCollection	
BSW Parameter		BSW Type
SecOCBufferLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the Buffer in bytes that is used by the SecOC module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00008]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxPduProcessing		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Contains the parameters to configure the TxPdus to be secured by the SecOC module.		
<b>Template Description</b>		
If useAsCryptographicPdu is not set or set to false this IPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information (Freshness Counter and an Authenticator).		
If useAsCryptographicPdu is set to true this IPdu contains the Authenticator for a payload that is transported in a separate message. The separate Authentic IPdu is described by the Pdu that is referenced with the payload reference from this SecuredIPdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
This container shall be created for every SecuredIPdu that is transmitted by the regarded Ecu. The information whether the SecuredIPdu is transmitted or received by the Ecu shall be derived from PduTriggering.iPduPort reference. If an IPduPort of the Ecu with the communicationDirection = out is referenced then the SecuredIPdu is transmitted. If an IPduPort of the Ecu with the communicationDirection = in is referenced then the SecuredIPdu is received.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00012]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCAuthInfoTruncLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the length in bits of the authentication code to be included in the payload of the Secured I-PDU.		
<b>Template Description</b>		
This attribute defines the length in bits of the authentication code to be included in the payload of the authenticated Pdu.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationAuthenticationProps.authInfoTxLength		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00097]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter	BSW Type	
SecOCAuthenticationBuildAttempts	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter specifies the number of authentication build attempts.		
Template Description		
This attribute specifies the number of authentication build attempts.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.authenticationBuildAttempts		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00079]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter	BSW Type	
SecOCDataId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines a unique numerical identifier for the Secured I-PDU.		
Template Description		
This attribute defines a numerical identifier for the Secured I-PDU.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.dataId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00014]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter	BSW Type	
SecOCFreshnessValueId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the Id of the Freshness Value. The Freshness Value might be a normal counter or a time value.		
Template Description		
This attribute defines the Id of the Freshness Value. The Freshness Value might be a normal counter or a time value.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.freshnessValueId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00021]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter	BSW Type	
SecOCFreshnessValueLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the complete length in bits of the Freshness Value. As long as the key doesn't change the counter shall not overflow. The length of the counter shall be determined based on the expected life time of the corresponding key and frequency of usage of the counter.		
Template Description		
This attribute defines the complete length in bits of the Freshness Value. As long as the key doesn't change the counter shall not overflow. The length of the counter shall be determined based on the expected life time of the corresponding key and frequency of usage of the counter.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationFreshnessProps. <a href="#">freshnessValueLength</a>		
Mapping Rule		Mapping Type
1:1 mapping if value is set by SecureCommunicationFreshnessProps.freshnessValueLength. If the attribute is not set to a value the parameter value of 0 shall be assumed which means that no Freshness Value is included in the Secured I-PDU.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_ - 00015]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter	BSW Type	
SecOCFreshnessValueTruncLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the length in bits of the Freshness Value to be included in the payload of the Secured I-PDU. This length is specific to the least significant bits of the complete Freshness Counter. If the parameter is 0 no Freshness Value is included in the Secured I-PDU.		
Template Description		
This attribute defines the length in bits of the Freshness Value to be included in the payload of the Secured I-PDU. This length is specific to the least significant bits of the complete Freshness Counter. If the attribute is 0 no Freshness Value is included in the Secured I-PDU.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationFreshnessProps. <a href="#">freshnessValueTxLength</a>		
Mapping Rule		Mapping Type
1:1 mapping if value is set by SecureCommunicationFreshnessProps.freshnessValueTxLength. If the attribute is not set to a value the parameter value of 0 shall be assumed which means that no Freshness Value is included in the Secured I-PDU.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_ - 00096]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter	BSW Type	





SecOCProvideTxTruncatedFreshnessValue		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
This parameter specifies if the Tx query freshness function provides the truncated freshness info instead of generating this by SecOC In this case, SecOC shall add this data to the Authentic PDU instead of truncating the freshness value.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00084]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCReAuthenticateAfterTriggerTransmit		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
This parameter specifies if the authentication information of the Secured PDU is updated after the successful transmission of a triggered transmission was confirmed.		
TRUE if the authentication information shall be updated after triggered transmission. FALSE if the authentication information shall not be updated after triggered transmission.		
Note: This parameter should only be set to FALSE if the upper layer SecOC_IfTransmit have the same or a higher frequency than the SecOC_TriggerTransmit calls.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00103]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCSameBufferPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
This reference is used to collect Pdus that are using the same SecOC buffer.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00010]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter		BSW Type
SecOCTxAuthServiceConfigRef		ECUC-REFERENCE-DEF
BSW Description		
This reference is used to define which crypto service function is called for authentication. If PDUs with a dynamic length are used (e.g. CanTP or Dynamic Length PDUs) a MAC algorithm has to be chosen, that is not vulnerable to length extension attack (e.g. CMAC/HMAC).		
Template Description		
This reference identifies the crypto profile applicable to the usage (send, receive) of the also referenced SecuredIPdu. Obviously, this reference is only applicable if the PduTriggering also references a SecuredIPdu in the role iPdu.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering. <a href="#">secOcCryptoMapping</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00013]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter		BSW Type
SecOCTxAuthenticPduLayer		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies the Pdu that is received by the SecOC module from the PduR. For this Pdu the Mac generation is provided.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00023]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxAuthenticPduLayer	
BSW Parameter		BSW Type
SecOCPduType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines API Type to use for communication with PduR.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local







Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_-00075]

BSW Module	BSW Context
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxAuthenticPduLayer
BSW Parameter	BSW Type
SecOCTxAuthenticLayerPduId	ECUC-INTEGER-PARAM-DEF
BSW Description	PDU identifier assigned by SecOC module. Used by PduR for SecOC_[If Tp]Transmit.
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_-00026]

BSW Module	BSW Context
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxAuthenticPduLayer
BSW Parameter	BSW Type
SecOCTxAuthenticLayerPduRef	ECUC-REFERENCE-DEF
BSW Description	Reference to the global Pdu.
Template Description	Reference to a Pdu that will be protected against unauthorized manipulation and replay attacks.
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.payload
Mapping Rule	Mapping Type
Reference to the EcuC Pdu which represents the to be secured SecuredIPdu PduTriggering	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SecOC_-00025]

BSW Module	BSW Context
SecOC	SecOC/SecOCTxPduProcessing
BSW Parameter	BSW Type
SecOCTxPduMainFunctionRef	ECUC-REFERENCE-DEF
BSW Description	Reference to the SecOC_MainFunctionTx this PDU belongs to. Mandatory, if multiple main functions are defined.
Template Description	
M2 Parameter	





Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00111]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing	
BSW Parameter	BSW Type	
SecOCTxPduSecuredArea	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container specifies an area in the Authentic I-Pdu that will be the input to the Authenticator generation algorithm. If this container does not exist in the configuration the complete Authentic I-Pdu will be the input to the Authenticator generation algorithm.		
Template Description		
This attribute defines the start position (offset in byte) of the area within the payload Pdu which will be secured.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps. <a href="#">securedAreaOffset</a>		
Mapping Rule	Mapping Type	
Create container if the securedAreaOffset and securedAreaLength is defined for the SecuredIPdu in the System Description.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00086]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxPduSecuredArea	
BSW Parameter	BSW Type	
SecOCSecuredTxPduLength	ECUC-INTEGGER-PARAM-DEF	
BSW Description		
This parameter defines the length (in bytes) of the area within the Pdu which shall be secured		
Template Description		
This attribute defines the length in bytes of the area within the payload Pdu which will be secured.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps. <a href="#">securedAreaLength</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SecOC_-00088]	

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxPduSecuredArea	
BSW Parameter	BSW Type	
SecOCSecuredTxPduOffset	ECUC-INTEGGER-PARAM-DEF	





<b>BSW Description</b>	
This parameter defines the start position (offset in bytes) of the area within the Pdu which shall be secured	
<b>Template Description</b>	
This attribute defines the start position (offset in byte) of the area within the payload Pdu which will be secured.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.securedAreaOffset	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00087]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxPduUnusedAreasDefault		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The AUTOSAR SecOC module fills not used areas of a transmitted Secured Pdu or a transmitted Cryptographic Pdu with this byte pattern. This attribute is mandatory to avoid undefined behavior.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00101]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxSecuredPduLayer		ECUC-CHOICE-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies the Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00024]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer	
BSW Parameter	BSW Type	
SecOCTxSecuredPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container specifies one Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated. This Pdu contains the cryptographic information.		
Template Description		
If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data. If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useAsCryptographicIPdu		
Mapping Rule		Mapping Type
Create the SecOCTxSecuredPdu if the SecuredIPdu is sent by the regarded ECU and the attribute useAsCryptographicIPdu = false or not defined		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00070]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPdu	
BSW Parameter	BSW Type	
SecOCAuthPduHeaderLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter indicates the length (in bytes) of the Secured I-PDU Header in the Secured I-PDU. The length of zero means there's no header in the PDU.		
Template Description		
This attribute defines the size of the header which is inserted into the SecuredIPdu. If this attribute is set to anything but no Header, the SecuredIPdu contains the Secured I-PDU Header to indicate the length of the AuthenticIPdu. The AuthenticIPdu contains the original payload, i.e. the secured data.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useSecuredPduHeader		
Mapping Rule		Mapping Type
The SecOCAuthPduHeaderLength value shall be derived from useSecuredPduHeader in the following way: If useSecuredIPduHeader is set to "noHeader" the value shall be 0. If useSecuredIPduHeader is set to "securedPduHeader08Bit" the value shall be 1. If useSecuredIPduHeader is set to "securedPduHeader16Bit" the value shall be 2. If useSecuredIPduHeader is set to "securedPduHeader32Bit" the value shall be 4.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00093]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPdu	
BSW Parameter	BSW Type	
SecOCTxSecuredLayerPduId	ECUC-INTEGER-PARAM-DEF	





<b>BSW Description</b>	
PDU identifier assigned by SecOC module. Used by PduR for confirmation (SecOC_[If Tp]TxConfirmation) and for Trigger Transmit.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00028]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxSecuredLayerPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the global Pdu.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Reference to the EcuC Pdu which represents the sent SecuredIPdu PduTriggering		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00027]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxSecuredPduCollection		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies the Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated. Two separate Pdus are transmitted to the PduR: Authentic I-PDU and Cryptographic I-PDU.		
<b>Template Description</b>		
If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data.		
If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useAsCryptographicIPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create the SecOCTxSecuredPduCollection if the SecuredIPdu is sent by the regarded ECU and the attribute useAsCryptographicIPdu = true		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00071]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection	
BSW Parameter	BSW Type	
SecOCTxAuthenticPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container specifies the PDU (that is transmitted by the SecOC module to the PduR) which contains the Secured I-PDU Header and the Authentic I-PDU.		
Template Description		
If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data. If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useAsCryptographicIPdu		
Mapping Rule		Mapping Type
Create the SecOCTxAuthenticPdu if the SecuredIPdu is sent by the regarded ECU and the attribute useAsCryptographicIPdu = true		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00072]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection/SecOCTxAuthenticPdu	
BSW Parameter	BSW Type	
SecOCAuthPduHeaderLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter indicates the length (in bytes) of the Secured I-PDU Header in the Secured I-PDU. The length of zero means there's no header in the PDU.		
Template Description		
This attribute defines the size of the header which is inserted into the SecuredIPdu. If this attribute is set to anything but no Header, the SecuredIPdu contains the Secured I-PDU Header to indicate the length of the AuthenticIPdu. The AuthenticIPdu contains the original payload, i.e. the secured data.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useSecuredPduHeader		
Mapping Rule		Mapping Type
The SecOCAuthPduHeaderLength value shall be derived from useSecuredPduHeader in the following way: If useSecuredIPduHeader is set to "noHeader" the value shall be 0. If useSecuredIPduHeader is set to "securedPduHeader08Bit" the value shall be 1. If useSecuredIPduHeader is set to "securedPduHeader16Bit" the value shall be 2. If useSecuredIPduHeader is set to "securedPduHeader32Bit" the value shall be 4.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SecOC_-00093]

BSW Module	BSW Context	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection/SecOCTxAuthenticPdu	
BSW Parameter	BSW Type	





SecOCTxAutenticPduld	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
PDU identifier of the Authentic I-PDU assigned by SecOC module. Used by PduR for confirmation (SecOC_IfTxConfirmation) and for TriggerTransmit.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00055]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection/SecOCTxAutenticPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxAutenticPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the global Pdu.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Reference to the EcuC Pdu which represents the sent Authentic SecuredIPdu PduTriggering referenced by SecuredIPdu.payload		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00056]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxCryptographicPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies the Cryptographic Pdu that is transmitted by the SecOC module to the PduR after the Mac was generated.		
<b>Template Description</b>		
If this attribute is set to true the SecuredIPdu contains the Authentication Information for an AuthenticIPdu that is transmitted in a separate message. The AuthenticIPdu contains the original payload, i.e. the secured data.		
If this attribute is set to false this SecuredIPdu contains the payload of an Authentic IPdu supplemented by additional Authentication Information.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.useAsCryptographicIPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>





Create the SecOCTxCryptographicPdu if the SecuredIPdu is sent by the regarded ECU and the attribute useAsCryptographicIPdu = true and SecuredIPdu.payload refers to a PduTriggering which the Ecu Instance sends as well.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_ - 00073]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection/SecOCTxCryptographicPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxCryptographicPduId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
PDU identifier of the Cryptographic I-PDU assigned by SecOC module. Used by PduR for confirmation (SecOC_IfTx Confirmation) and for TriggerTransmit.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_ - 00057]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection/SecOCTxCryptographicPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCTxCryptographicPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the global Pdu.		
<b>Template Description</b>		
Reference to a Pdu that will be protected against unauthorized manipulation and replay attacks.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecuredIPdu.payload		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Reference to the EcuC Pdu which represents the sent Cryptographic SecuredIPdu PduTriggering		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_ - 00058]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCUseMessageLink		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		







SecOC links an Authentic I-PDU and Cryptographic I-PDU together by repeating a specific part (Message Linker) of the Authentic I-PDU in the Cryptographic I-PDU.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SecOC_-00074]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection/SecOCUseMessageLink	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCMessageLinkLen		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Length of the Message Linker inside the Authentic I-PDU in bits.		
<b>Template Description</b>		
SecOC links an AuthenticIPdu and CryptographicIPdu together by repeating a specific part (Message Linker) of the Authentic IPdu in the CryptographicIPdu. This attribute defines the length in bits of the messageLinker.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.messageLinkLength		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00060]

<b>BSW Module</b>	<b>BSW Context</b>	
SecOC	SecOC/SecOCTxPduProcessing/SecOCTxSecuredPduLayer/SecOCTxSecuredPduCollection/SecOCUseMessageLink	
<b>BSW Parameter</b>		<b>BSW Type</b>
SecOCMessageLinkPos		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The position of the Message Linker inside the Authentic I-PDU in bits. The bit counting is done according to 01068 and the bit ordering is done according to TPS_SYST_01069.		
<b>Template Description</b>		
SecOC links an AuthenticIPdu and CryptographicIPdu together by repeating a specific part (Message Linker) of the Authentic IPdu in the CryptographicIPdu. This attribute defines the startPosition in bits of the messageLinker.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SecureCommunicationProps.messageLinkPosition		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SecOC_-00059]

BSW Module		BSW Context	
SecOC		SecOC/SecOCTxPduProcessing	
BSW Parameter		BSW Type	
SecOCUseTxConfirmation		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
A Boolean value that indicates if the function SecOC_SPduTxConfirmation shall be called for this PDU.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_SecOC_-00085]

### C.1.5 PduR

BSW Module		BSW Context	
PduR		PduR	
BSW Parameter		BSW Type	
PduRBswModules		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Each container describes a specific BSW module (upper/CDD/lower/lpduM) that the PDU Router shall interface to. The reason to have it as own configuration container instead of implication of the routing path is to be able to configure CDDs properly and to force module's to be used in a post-build situation even though no routing is made to/from this module (future configurations may include these modules).			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_PduR_00295]

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRBswModuleRef		ECUC-FOREIGN-REFERENCE-DEF	
BSW Description			
This is a reference to one BSW module's configuration (i.e. not the ECUC parameter definition template). Example, there could be several configurations of LinIf and this reference selects one of them.			
Template Description			





<p>Head of the configuration of one Module. A Module can be a BSW module as well as the RTE and ECU Infrastructure.</p> <p>As part of the BSW module description, the EcucModuleConfigurationValues element has two different roles:</p> <p>The recommendedConfiguration contains parameter values recommended by the BSW module vendor.</p> <p>The preconfiguredConfiguration contains values for those parameters which are fixed by the implementation and cannot be changed.</p> <p>These two EcucModuleConfigurationValues are used when the base EcucModuleConfigurationValues (as part of the base ECU configuration) is created to fill parameters with initial values.</p>	
<b>M2 Parameter</b>	
ECUCDescriptionTemplate::EcucModuleConfigurationValues	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_PduR_00294]

<b>BSW Module</b>	<b>BSW Context</b>	
PduR	PduR/PduRBswModules	
<b>BSW Parameter</b>		<b>BSW Type</b>
PduRCancelReceive		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Specifies if the Transport protocol module supports the CancelReceive API or not. Value true the API is supported.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_PduR_00340]	

<b>BSW Module</b>	<b>BSW Context</b>	
PduR	PduR/PduRBswModules	
<b>BSW Parameter</b>		<b>BSW Type</b>
PduRCancelTransmit		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Specifies if the BSW module supports the CancelTransmit API or not. Value true the API is supported.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_PduR_00297]	

BSW Module	BSW Context	
PduR	PduR/PduRBswModules	
BSW Parameter		BSW Type
PduRCommunicationInterface		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the BSW module supports the Communication Interface APIs or not. Value true the APIs are supported. A module can have both Communication Interface APIs and Transport Protocol APIs (e.g. the COM module).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00298]

BSW Module	BSW Context	
PduR	PduR/PduRBswModules	
BSW Parameter		BSW Type
PduRCopyRxData		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the Transport protocol module supports the CopyRxData API or not. Value true the API is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00360]

BSW Module	BSW Context	
PduR	PduR/PduRBswModules	
BSW Parameter		BSW Type
PduRCopyTxData		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the Transport protocol module supports the CopyTxData API or not. Value true the API is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00362]

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRLowerModule		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
<p>The PduRLowerModule will decide who will call the APIs and who will implement the APIs.</p> <p>For example, if the CanIf module is referenced then the PDU Router module will implement the PduR_CanIfRxIndication API. And the PDUR module will call the CanIf_Transmit API. Other APIs are of course also covered.</p> <p>An upper module can also be an lower module (e.g. the IpduM module).</p>			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_PduR_00307]	

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRRetransmission		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
<p>If set to true this means that the destination transport protocol module will use the retransmission feature. This parameter might be set to false if the retransmission feature is not used, even though the destination transport protocol is supporting it.</p> <p>This parameter is only valid for transport protocol modules and gateway operations. If transmission from a local upper layer module this module will handle the retransmission.</p>			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_PduR_00332]	

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRRxIndication		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
<p>Specifies if BSW module supports the RxIndication API or not. Value true the API is supported.</p>			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_PduR_00358]	

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRStartOfReception		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if the Transport protocol module supports the StartOfReception API or not. Value true the API is supported.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_PduR_00359]

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRTpRxIndication		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if the Transport protocol module supports the TpRxIndication API or not. Value true the API is supported.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_PduR_00364]

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRTpTransmit		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if BSW module supports the TP Transmit API or not. Value true the API is supported.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_PduR_00361]

BSW Module	BSW Context	
PduR	PduR/PduRBswModules	
BSW Parameter		BSW Type
PduRTpTxConfirmation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the Transport protocol module supports the TpTxConfirmation API or not. Value true the API is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00363]

BSW Module	BSW Context	
PduR	PduR/PduRBswModules	
BSW Parameter		BSW Type
PduRTransmit		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if BSW module supports the (IF) Transmit API or not. Value true the API is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00357]

BSW Module	BSW Context	
PduR	PduR/PduRBswModules	
BSW Parameter		BSW Type
PduRTransportProtocol		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
The PDU Router module shall use the API parameters specified for transport protocol interface.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00312]

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRTriggertransmit		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if the BSW module supports the TriggerTransmit API or not. Value true means that the BSW module supports the TriggerTransmit interface which a lower layer module can call and also that it can call the TriggerTransmit interface of an upper layer module. Value false means that the BSW module does not support the TriggerTransmit interface which a lower layer module can call and also that it shall not call the TriggerTransmit interface of an upper layer module.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_PduR_00313]	

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRTxConfirmation		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if the BSW module supports the TxConfirmation API or not. Value true the API is supported.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_PduR_00314]	

BSW Module		BSW Context	
PduR		PduR/PduRBswModules	
BSW Parameter		BSW Type	
PduRUpperModule		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
The PduRUpperModule will decide who will call the APIs and who will implement the APIs. For example, if the COM module is referenced then the PDU Router module will implement the PduR_Transmit API. And the PDUR module will call the Com_RxIndication API. Other APIs are of course also covered. An upper module can also be an lower module (e.g. the IpduM module).			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_PduR_00338]	



BSW Module		BSW Context	
PduR		PduR	
BSW Parameter		BSW Type	
PduRDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_PduR_00365]

BSW Module		BSW Context	
PduR		PduR/PduRDemEventParameterRefs	
BSW Parameter		BSW Type	
PDUR_ROUTING_PATH_BUFFER_OVERFLOW		ECUC-REFERENCE-DEF	
BSW Description			
A Reference to DemEventParameter element which shall be invoked using the API Dem_SetEventStatus in case PDUR_ROUTING_PATH_BUFFER_OVERFLOW error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_PduR_00366]

BSW Module		BSW Context	
PduR		PduR	
BSW Parameter		BSW Type	
PduRGeneral		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container is a subcontainer of PduR and specifies the general configuration parameters of the PDU Router.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_PduR_00305]

BSW Module	BSW Context	
PduR	PduR/PduRGeneral	
BSW Parameter	BSW Type	
PduRDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00302]

BSW Module	BSW Context	
PduR	PduR/PduRGeneral	
BSW Parameter	BSW Type	
PduRMetaDataSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enable support for MetaData handling. The MetaData is defined by the referenced MetaDataType of the global PDU definitions. This feature may be used for efficient address based routing and generic CAN-CAN-routing, where the MetaData contains the CAN ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00347]

BSW Module	BSW Context	
PduR	PduR/PduRGeneral	
BSW Parameter	BSW Type	
PduRVersionInfoApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
If true the PduR_GetVersionInfo API is available.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00316]

BSW Module	BSW Context	
PduR	PduR/PduRGeneral	
BSW Parameter		BSW Type
PduRZeroCostOperation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If set the PduR configuration generator will report an error if zero-cost-operation cannot be fulfilled. This parameter shall be seen as an input requirement to the configuration generator.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00317]

BSW Module	BSW Context	
PduR	PduR	
BSW Parameter		BSW Type
PduRRoutingPaths		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents one table of routing paths.		
This routing table allows multiple configurations that can be used to create several routing tables in the same configuration. This is mainly used for post-build (e.g. post-build selectable) but can be used by pre-compile and link-time for variant handling.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00310]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths	
BSW Parameter		BSW Type
PduRBuffer		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies a buffer used for gatewaying via communication interfaces or transport protocols, transport protocol 1:n receiving, or for fan-in reception routing for communication interface modules.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00336]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRBuffer	
BSW Parameter		BSW Type
PduRPduMaxLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of the PDU buffer in bytes. This parameter limits the size of buffered routed PDUs.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00324]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths	
BSW Parameter		BSW Type
PduRConfigurationId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Identification of the configuration of the PduR configuration. This identification can be read using the PduR API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00327]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths	
BSW Parameter		BSW Type
PduRDestPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is a subcontainer of PduRRoutingPath and specifies one destination for the PDU to be routed.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00249]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRDestPdu	
BSW Parameter		BSW Type
PduRDestPduDataProvision		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Specifies how data are provided: direct (as part of the Transmit call) or via the TriggerTransmit callback function. Only required for non-TP gatewayed I-PDUs.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00289]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRDestPdu	
BSW Parameter		BSW Type
PduRDestPduHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
PDU identifier assigned by PDU Router. Used by communication interface and transport protocol modules for confirmation (PduR_<Lo>TxConfirmation) and for TriggerTransmit (PduR_<Lo>TriggerTransmit).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00322]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRDestPdu	
BSW Parameter		BSW Type
PduRDestPduRef		ECUC-REFERENCE-DEF
BSW Description		
Destination PDU reference; reference to unique PDU identifier which shall be used by the PDU Router instead of the source PDU ID when calling the related function of the destination module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00291]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRDestPdu	
BSW Parameter		BSW Type
PduRTransmissionConfirmation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>This parameter is only for communication interfaces. Transport protocol modules will always call the TxConfirmation function. If set the destination communication interface module will call the TxConfirmation. However the TxConfirmation may be not called due to error. So the PduR shall not block until the TxConfirmation is called.</p> <p>One background for this parameter is for the PduR to know when all modules have confirmed a multicast operation.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00339]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths	
BSW Parameter		BSW Type
PduRMaxRoutingPathCnt		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Maximum number of RoutingPaths in all RoutingTables. This parameter is needed only in case of post-build loadable implementation using static memory allocation.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00350]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths	
BSW Parameter		BSW Type
PduRMaxRoutingPathGroupCnt		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Maximum number of RoutingPathGroups. This parameter is needed only in case of post-build loadable implementation using static memory allocation.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00348]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths	
BSW Parameter	BSW Type	
PduRRoutingPath	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container is a subcontainer of PduRRoutingTable and specifies the routing path of a PDU.		
Template Description		
<p><b>IPduMapping:</b> Arranges those IPdus that are transferred by the gateway from one channel to the other in pairs and defines the mapping between them.</p> <p><b>PduTriggering:</b> The PduTriggering describes on which channel the IPdu is transmitted. The Pdu routing by the PduR is only allowed for subclasses of IPdu. Depending on its relation to entities such channels and clusters it can be unambiguously deduced whether a fan-out is handled by the Pdu router or the Bus Interface. If the fan-out is specified between different clusters it shall be handled by the Pdu Router. If the fan-out is specified between different channels of the same cluster it shall be handled by the Bus Interface.</p> <p><b>TpConfig:</b> Contains all configuration elements for AUTOSAR TP.</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Multiplatform::IPduMapping, SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering, SystemTemplate::TransportProtocols::TpConfig		
Mapping Rule		Mapping Type
For each MultiplatformGateway.pduMapping; for each SignalPdu-MultiplexedPdu Connection; for each IPduTriggering; for each TpConfig create one PduRRoutingPath.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00248]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath	
BSW Parameter	BSW Type	
PduRDefaultValue	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Specifies the default value of the I-PDU. Only required for gateway operation and if at least one PDU specified by PduRDest Pdu uses TriggerTransmit Data provision. Represented as an array of IntegerParamDef.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Multiplatform::TargetIPduRef.defaultValue		
Mapping Rule		Mapping Type
Container should be created if PduMappingDefaultValue is described in the Sys-T		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00299]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath/PduRDefaultValue	
BSW Parameter	BSW Type	
PduRDefaultValueElement	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Each value element is represented by the element and the position in an array.		
Template Description		
The default value consists of a number of elements. Each element is one byte long and the number of elements is specified by SduLength.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Multiplatform::DefaultValueElement		
Mapping Rule		Mapping Type
Container shall be created for each DefaultValueElement that is aggregated by PduMapping DefaultValue.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00300]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath/PduRDefaultValue/PduRDefaultValueElement	
BSW Parameter	BSW Type	
PduRDefaultValueElement	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The default value consists of a number of elements. Each element is one byte long and the number of elements is specified by SduLength. The position of this parameter in the container is specified by the PduElementBytePosition parameter.		
Template Description		
The integer value of a freely defined data byte.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Multiplatform::DefaultValueElement.elementByteValue		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00290]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath/PduRDefaultValue/PduRDefaultValueElement	
BSW Parameter	BSW Type	
PduRDefaultValueElementBytePosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter specifies the byte position of the element within the default value		
Template Description		
This attribute specifies the byte position of the element within the default value		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Multiplatform::DefaultValueElement.elementPosition		
Mapping Rule		Mapping Type
1:1 mapping		full







Mapping Status	ECUC Parameter ID
valid	[ECUC_PduR_00292]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath	
BSW Parameter		BSW Type
PduRDestBufferRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a buffer in the PduR. This buffer is required for communication interface gatewaying, and for transport protocol gatewaying or for fan-in reception routing for communication interface modules.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00304]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath	
BSW Parameter		BSW Type
PduRDestPduRRef		ECUC-REFERENCE-DEF
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00354]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath	
BSW Parameter		BSW Type
PduRQueueDepth		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the queue depth for this routing path.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00356]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath	
BSW Parameter	BSW Type	
PduRRoutingPathGroupRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to routing paths.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduIPduGroup.iPdu		
Mapping Rule		Mapping Type
If the PduTriggering this PduRRoutingPath is derived from is the target of a PduIPduGroup.iPdu reference then a PduRRoutingPathGroupRef shall be created at the PduRRoutingPath and the respective PduRRoutingPathGroup shall be referenced from the PduRRoutingPathGroupRef.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00352]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath	
BSW Parameter	BSW Type	
PduRSrcPduRRef	ECUC-REFERENCE-DEF	
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_PduR_00353]

BSW Module	BSW Context	
PduR	PduR/PduRRoutingPaths/PduRRoutingPath	
BSW Parameter	BSW Type	
PduRTpThreshold	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter is only relevant for TP routings. When configured, it enables on-the-fly routing and defines the number of bytes which must have been received before transmission on the destination bus may start. When omitted, direct TP routing is enforced. The PduRouter shall ensure that a buffer is allocated for this routing path which is at least as large as the threshold.		
Template Description		
Optionally defines the to be configured Pdu Router TpChunkSize for this routing relation.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Multiplatform::IPduMapping.pdurTpChunkSize		
Mapping Rule		Mapping Type





PduRTpThreshold shall only be configured by IpduMapping.pduRTpChunkSize if the following conditions hold: (1) The routing path uses the "Tp" API (2) The routing path only contains one single destination routing path.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_PduR_00320]

<b>BSW Module</b>	<b>BSW Context</b>	
PduR	PduR/PduRRoutingPaths	
<b>BSW Parameter</b>		<b>BSW Type</b>
PduRRoutingPathGroup		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container groups routing paths. By this grouping, it is possible to switch all routings related to one network, or to one kind of PDUs. PduRRoutingPaths link one source with one destination. Enabling and disabling of routing path groups is done using the PduR API.		
<b>Template Description</b>		
The AUTOSAR PduR will enable and disable the sending of configurable groups of IPdus during runtime according to the AUTOSAR PduR specification.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PdurIPduGroup		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container for each existing PduRIPduGroup that is connected to the regarded Ecu		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_PduR_00308]

<b>BSW Module</b>	<b>BSW Context</b>	
PduR	PduR/PduRRoutingPaths/PduRRoutingPathGroup	
<b>BSW Parameter</b>		<b>BSW Type</b>
PduRIsEnabledAtInit		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
If set to true this routing path group will be enabled after initializing the PDU Router module (i.e. enabled in the PduR_Init function).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_PduR_00329]

<b>BSW Module</b>	<b>BSW Context</b>	
PduR	PduR/PduRRoutingPaths/PduRRoutingPathGroup	
<b>BSW Parameter</b>		<b>BSW Type</b>
PduRRoutingPathGroupId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		





Identification of the routing group. The identification will be used by the disable/enable API in the PDU Router module API.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_PduR_00309]

<b>BSW Module</b>	<b>BSW Context</b>	
PduR	PduR/PduRRoutingPaths	
<b>BSW Parameter</b>		<b>BSW Type</b>
PduRSrcPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container is a subcontainer of PduRRoutingPath and specifies the source of the PDU to be routed.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_PduR_00288]	

<b>BSW Module</b>	<b>BSW Context</b>	
PduR	PduR/PduRRoutingPaths/PduRSrcPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
PduRSourcePduBlockSize		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Minimum amount of buffer space required by receiving transport protocol layer to continue reception.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_PduR_00355]	

<b>BSW Module</b>	<b>BSW Context</b>	
PduR	PduR/PduRRoutingPaths/PduRSrcPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
PduRSourcePduHandleId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
PDU identifier assigned by PDU Router.		





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_PduR_00311]

<b>BSW Module</b>	<b>BSW Context</b>
PduR	PduR/PduRRoutingPaths/PduRSrcPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
PduRSrcPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Source PDU reference; reference to unique PDU identifier which shall be used for the requested PDU Router operation.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_PduR_00318]

<b>BSW Module</b>	<b>BSW Context</b>
PduR	PduR/PduRRoutingPaths/PduRSrcPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
PduRSrcPduUpTxConf	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
When enabled, the TxConfirmation will be forwarded to the upper layer. Prerequisites: Lower layer and upper layer support TxConfirmation.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_PduR_00351]

## C.1.6 Nm Interface

<b>BSW Module</b>	<b>BSW Context</b>
Nm	Nm
<b>BSW Parameter</b>	<b>BSW Type</b>





NmChannelConfig	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container contains the configuration (parameters) of the bus channel(s). The channel parameter shall be harmonized within the whole communication stack.	
<b>Template Description</b>	
Set of NM nodes coordinated with use of the NM algorithm.	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::NmCluster	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create Container for each existing NmCluster.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00197]

<b>BSW Module</b>	<b>BSW Context</b>	
Nm	Nm/NmChannelConfig	
<b>BSW Parameter</b>	<b>BSW Type</b>	
NmActiveCoordinator	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
This parameter indicates whether a NM channel - part of a Nm Coordination cluster - will be coordinated actively (NmActiveCoordinator = TRUE) or passively (NmActiveCoordinator = FALSE).		
<b>Template Description</b>		
This attribute indicates the role the NM Coordinator will have on this channel.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::NmNode.nmCoordinatorRole		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
If nmCoordinatorRole is set to Active then NmActiveCoordinator shall be present and set to true. If nmCoordinatorRole is set to Passive then NmActiveCoordinator shall be present and set to false.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Nm_00236]	

<b>BSW Module</b>	<b>BSW Context</b>	
Nm	Nm/NmChannelConfig	
<b>BSW Parameter</b>	<b>BSW Type</b>	
NmBusType	ECUC-CHOICE-CONTAINER-DEF	
<b>BSW Description</b>		
<b>Template Description</b>		
<b>CanNmCluster:</b> Can specific NmCluster attributes  <b>FlexrayNmCluster:</b> FlexRay specific NM cluster attributes.  <b>UdpNmCluster:</b> Udp specific NmCluster attributes		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::CanNmCluster, SystemTemplate::NetworkManagement::FlexrayNmCluster, SystemTemplate::NetworkManagement::UdpNmCluster		
<b>Mapping Rule</b>	<b>Mapping Type</b>	





Bus Type can be derived from the BusNm Configuration in the System Description.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00218]

<b>BSW Module</b>	<b>BSW Context</b>	
Nm	Nm/NmChannelConfig/NmBusType	
<b>BSW Parameter</b>		<b>BSW Type</b>
NmGenericBusNmConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Nm_00225]

<b>BSW Module</b>	<b>BSW Context</b>	
Nm	Nm/NmChannelConfig/NmBusType/NmGenericBusNmConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
NmGenericBusNmPrefix		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
The prefix which identifies the generic <Bus>Nm. This will be used to determine the API name to be called by Nm for the provided interfaces of the <Bus>Nm. This string will used for the module prefix before the "_" character in the API call name.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Nm_00219]

<b>BSW Module</b>	<b>BSW Context</b>	
Nm	Nm/NmChannelConfig/NmBusType/NmGenericBusNmConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
NmGenericBusNmShutdownTime		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
This parameter shall be used to calculate shutdown delay time.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Nm_00239]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig/NmBusType	
BSW Parameter		BSW Type
NmStandardBusNmConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00226]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig/NmBusType/NmStandardBusNmConfig	
BSW Parameter		BSW Type
NmStandardBusType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Identifies the bus type of the channel for standard AUTOSAR <Bus>Nms and is used to determine which set of API calls to be called by Nm for the <Bus>Nms. Note: The Ethernet bus' NM is UdpNm !		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00220]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmChannelSleepMaster		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>This parameter shall be set to indicate if the sleep of this network can be absolutely decided by the local node only and that no other nodes can oppose that decision.</p> <p>If this parameter is set to TRUE, the Nm shall assume that the channel is always ready to go to sleep and that no calls to Nm_RemoteSleepIndication or Nm_RemoteSleepCancellation will be made from the &lt;Bus&gt;Nm representing this channel.</p> <p>If this parameter is set to FALSE, the Nm shall not assume that the network is ready to sleep until a call has been made to Nm_RemoteSleepCancellation.</p>		
Template Description		
This parameter shall be set to indicate if the sleep of this network can be absolutely decided by the local node only and that no other nodes can oppose that decision.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmChannelSleepMaster		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00227]



BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmComMChannelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the corresponding ComM Channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00217]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmComUserDataSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter indicates whether on a NM channel user data is accessed via Com signals or by SetUserData API.		
Template Description		
Defines whether this NmCluster contributes to the partial network mechanism.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu.iSignalToIPduMapping, SystemTemplate::Network Management::NmCluster.nmPncParticipation		
Mapping Rule		Mapping Type
If an NmPdu contains user data defined via the existence of NmPdu.iSignalToIPduMapping (and is consequently handled via the PduR and Com) then NmComUserDataSupport shall be set to true.  If there exists a NmCluster which has a NmNode which refers to a NmEcu and that NmEcu in turn references the EcuInstance for which this Ecu Configuration is derived and the NmCluster.nmPncParticipation has the value "true" or is not defined then NmComUserDataSupport shall be set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00241]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmCoordClusterIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
If this parameter is undefined for a channel, the corresponding bus does not belong to an NM coordination cluster.		
Template Description		
NmCoordinationCluster identification number.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.nmCoordCluster		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00221]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter	BSW Type	
NmDynamicPncToChannelMappingEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Channel-specific parameter to enable the dynamic PNC-to-channel-mapping feature. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled		
Template Description		
Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.dynamicPncToChannelMappingEnabled		
Mapping Rule		Mapping Type
1:1 Mapping. If M2 Parameter not defined then do not create NmDynamicPncToChannelMapping Enabled.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00248]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter	BSW Type	
NmPassiveModeEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter indicates whether a NM channel is active, e.g. can request communication and keep the bus awake, or passive, e.g. can just be woken up and kept awake by other ECUs.		
Template Description		
Enables support of the Passive Mode. The passive mode is configurable per channel.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.nmPassiveModeEnabled		
Mapping Rule		Mapping Type
1:1 mapping.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00242]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter	BSW Type	
NmPnEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
If this parameter is true, then this NM channel supports Partial Networking.		





Template Description	
Defines whether this NmCluster contributes to the partial network mechanism.	
M2 Parameter	
SystemTemplate::NetworkManagement::NmCluster.nmPncParticipation	
Mapping Rule	Mapping Type
Set to true if the NmCluster has nmPncParticipation set to true.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Nm_00254]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmPnEraCalcEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if NmIf calculates the PN request information for external requests. (ERA)		
Template Description		
Defines whether this NmCluster contributes to the partial network mechanism.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmPncParticipation		
Mapping Rule		Mapping Type
Set to true if at least one NmCluster has nmPncParticipation set to true and pncGatewayType is not NONE. Otherwise set to FALSE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00259]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmPnFilterMaskByte		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Information for the filter of the PNC bit vector.		
Template Description		
Bit mask for NM-Pdu Payload used to configure the NM filter mask for the Network Management.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.pncFilterArrayMask		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00255]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig/NmPnFilterMaskByte	
BSW Parameter		BSW Type





NmPnFilterMaskByteIndex	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Index of the filter mask byte. Specifies the position within the filter mask byte array.	
<b>Template Description</b>	
Bit mask for NM-Pdu Payload used to configure the NM filter mask for the Network Management.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.pncFilterArrayMask	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00256]

<b>BSW Module</b>	<b>BSW Context</b>
Nm	Nm/NmChannelConfig/NmPnFilterMaskByte
<b>BSW Parameter</b>	<b>BSW Type</b>
NmPnFilterMaskByteValue	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Parameter to configure the filter mask byte.	
<b>Template Description</b>	
Bit mask for NM-Pdu Payload used to configure the NM filter mask for the Network Management.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.pncFilterArrayMask	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00257]

<b>BSW Module</b>	<b>BSW Context</b>
Nm	Nm/NmChannelConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
NmPncBitVectorLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Parameter to configure the length of the PNC bit request information in bytes, which is transmitted within NM PDU by the corresponding <Bus>Nm.	
<b>Template Description</b>	
<p><b>System.pncVectorLength:</b> Length of the partial networking request release information vector (in bytes).</p> <p><b>NmCluster.pncClusterVectorLength:</b> Optionally defines the length of the PNC Vector per CommunicationCluster (and VLAN in case of UdpNm). If not defined then System.pncVectorLength applies.</p> <p>Should only make the PNC Vector shorter (or same length as defined in System.pncVectorLength).</p>	
<b>M2 Parameter</b>	
SystemTemplate::System.pncVectorLength, SystemTemplate::NetworkManagement::NmCluster.pncClusterVectorLength	
<b>Mapping Rule</b>	<b>Mapping Type</b>





If NmCluster.pncClusterVectorLength is defined then the value is taken from NmCluster.pncClusterVectorLength, otherwise the value is taken from System.pncVectorLength.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00258]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmStateReportEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the NMS shall be set for the corresponding network. false: No NMS shall be set true: The NMS shall be set		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00231]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmStateReportSignalRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the signal for setting the NMS by calling Com_SendSignal for the respective channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00232]

BSW Module	BSW Context	
Nm	Nm/NmChannelConfig	
BSW Parameter		BSW Type
NmSynchronizingNetwork		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If this parameter is true, then this network is a synchronizing network for the NM coordination cluster which it belongs to. The network is expected to call Nm_SynchronizationPoint() at regular intervals.		
Template Description		
If this parameter is true, then this network is a synchronizing network for the NM coordination cluster which it belongs to. The network is expected to call Nm_SynchronizationPoint() at regular intervals.		
M2 Parameter		





SystemTemplate::NetworkManagement::NmCluster.nmSynchronizingNetwork	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00223]

<b>BSW Module</b>	<b>BSW Context</b>
Nm	Nm
<b>BSW Parameter</b>	<b>BSW Type</b>
NmGlobalConfig	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container contains all global configuration parameters of the Nm Interface.	
<b>Template Description</b>	
A NM coordinator is an ECU, which is connected to at least two busses, and where the requirement exists that shutdown of NM of at least two of these busses (also referred to as coordinated busses) has to be performed synchronously.	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::NmCoordinator	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00196]

<b>BSW Module</b>	<b>BSW Context</b>
Nm	Nm/NmGlobalConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
NmEcucPartitionRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to EcucPartition, where Nm module is assigned to.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00245]

<b>BSW Module</b>	<b>BSW Context</b>
Nm	Nm/NmGlobalConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
NmGlobalConstants	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
<b>M2 Parameter</b>	





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Nm_00198]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalConstants	
BSW Parameter		BSW Type
NmNumberOfChannels		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of NM channels allowed within one ECU.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Nm_00201]	

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig	
BSW Parameter		BSW Type
NmGlobalFeatures		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Nm_00200]	

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter		BSW Type
NmBusSynchronizationEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling bus synchronization support of the <Bus>Nms. This feature is required for NM Coordinator nodes only.		
Template Description		
Enables bus synchronization support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu. <a href="#">nmBusSynchronizationEnabled</a>		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Nm_00208]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter		BSW Type
NmCarWakeUpCallout		ECUC-FUNCTION-NAME-DEF
BSW Description		
Name of the callout function to be called if Nm_CarWakeUpIndication() is called. If this parameter is not configured, the Nm will call BswM_Nm_CarWakeUpIndication.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00234]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter		BSW Type
NmCarWakeUpRxEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables or disables CWU detection. FALSE - CarWakeUp not supported TRUE - CarWakeUp supported		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00235]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter		BSW Type
NmComControlEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling the Communication Control support.		
Template Description		
Enables the Communication Control support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmComControlEnabled		







Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Nm_00210]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter	BSW Type	
NmCoordinatorSupportEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling NM Coordinator support.		
Template Description		
A NM coordinator is an ECU, which is connected to at least two busses, and where the requirement exists that shutdown of NM of at least two of these busses (also referred to as coordinated busses) has to be performed synchronously.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCoordinator		
Mapping Rule	Mapping Type	
If NmCoordinators are defined set this parameter to true.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Nm_00206]	

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter	BSW Type	
NmCoordinatorSyncSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/disables the coordinator synchronisation support.		
Template Description		
Switch for enabling NmCoordinatorSync (coordination of nested busses) support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCoordinator.nmCoordSyncSupport		
Mapping Rule	Mapping Type	
If NmCoordinator is present then the value of NmCoordinatorSyncSupport shall be set to the value of nmCoordSyncSupport.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Nm_00240]	

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter	BSW Type	
NmDynamicPncToChannelMappingSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		





Precompile time switch to enable the dynamic PNC-to-channel-mapping handling. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled	
<b>Template Description</b>	
Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.dynamicPncToChannelMappingEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If at least one dynamicPncToChannelMappingEnabled attribute is defined and if at least one CommunicationConnector of the EcuInstance has dynamicPncToChannelMappingEnabled set to true, then NmDynamicPncToChannelMappingSupport shall be set to true. Otherwise NmDynamicPncToChannelMappingSupport shall be set to false	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00246]

<b>BSW Module</b>	<b>BSW Context</b>	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
<b>BSW Parameter</b>		<b>BSW Type</b>
NmGlobalCoordinatorTime		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the maximum shutdown time of a connected and coordinated NM-Cluster. Note:This includes nested connections.		
<b>Template Description</b>		
This attribute defines the maximum shutdown time (in seconds) of a connected and coordinated NM-Cluster.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::NmCoordinator.nmGlobalCoordinatorTime		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Nm_00237]

<b>BSW Module</b>	<b>BSW Context</b>	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
<b>BSW Parameter</b>		<b>BSW Type</b>
NmPartialNetworkSupportEnabled		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Pre-processor switch for enabling the Nm Partial Network support.		
<b>Template Description</b>		
Defines whether this NmCluster contributes to the partial network mechanism.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::NmCluster.nmPncParticipation		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Set to true if at least one NmCluster has nmPncParticipation set to true.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Nm_00253]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter	BSW Type	
NmPduRxIndicationEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the PDU Rx Indication.		
Template Description		
Switch for enabling the PDU Rx Indication.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmPduRxIndicationEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00214]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter	BSW Type	
NmRemoteSleepIndEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling Remote Sleep Indication support. This feature is required for a Gateway or Nm Coordinator functionality.		
Note that this feature should not be used if all NM channels have Passive Mode enabled.		
Template Description		
Switch for enabling remote sleep indication support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmRemoteSleepIndEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00207]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter	BSW Type	
NmStateChangeIndEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the Network Management state change notification.		
Template Description		
Enables the CAN Network Management state change notification.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmStateChangeIndEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00215]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter	BSW Type	
NmSynchronizedPncShutdownEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables or disables support of synchronized PNC shutdown. FALSE: synchronized PNC shutdown is disabled TRUE: synchronized PNC shutdown is enabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00249]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalFeatures	
BSW Parameter	BSW Type	
NmUserDataEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling User Data support.		
Template Description		
Switch for enabling user data support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmUserDataEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00211]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig	
BSW Parameter	BSW Type	
NmGlobalProperties	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00199]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalProperties	
BSW Parameter	BSW Type	
NmCycletimeMainFunction	ECUC-FLOAT-PARAM-DEF	
BSW Description		
The period between successive calls to the Main Function of the NM Interface in seconds.		
Template Description		
The period between successive calls to the Main Function of the NM Interface in seconds.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmCycletimeMainFunction		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Nm_00205]	

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalProperties	
BSW Parameter	BSW Type	
NmDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Nm_00203]	

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalProperties	
BSW Parameter	BSW Type	
NmPnEiraCalcEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Specifies if NmIf calculates the PNC request information for internal and external requests (EIRA) true: PN request are calculated false: PN request are not calculated Note: A PNC coordinator (NmPnEraCalcEnabled set to TRUE) has always set NmPnEiraCalcEnabled to TRUE.		
Template Description		
Defines whether this NmCluster contributes to the partial network mechanism.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmPncParticipation		
Mapping Rule	Mapping Type	





Set to true if at least one NmCluster has nmPncParticipation set to true.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00251]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalProperties	
BSW Parameter	BSW Type	
NmPnResetTime	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies the runtime of the reset time in seconds. This reset time is valid for the reset of PNC requests in the EIRA and in the ERA. The value shall be the same for every channel. Thus it is a global config parameter.		
Template Description		
Specifies the runtime of the reset timer in seconds. This reset time is valid for the reset of PN requests in the EIRA and in the ERA.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.pnResetTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00250]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalProperties	
BSW Parameter	BSW Type	
NmPnShutdownMessageRetransmissionDuration	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies the duration in seconds of the retransmission phase of a PN shutdown message. A retransmission shall be performed per affected NM channel, as long as the PN shutdown message could not be successfully sent and the retransmission timer is running. The value shall be a multiple integral NmMainFunctionPeriod.		
Template Description		
The period between successive calls to the Main Function of the NM Interface in seconds.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmCycletimeMainFunction		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Nm_00260]

BSW Module	BSW Context	
Nm	Nm/NmGlobalConfig/NmGlobalProperties	
BSW Parameter	BSW Type	
NmPncBitVectorOffset	ECUC-INTEGER-PARAM-DEF	
BSW Description		





Parameter to configure the offset in bytes of the PNC bit vector that contains the PNC requests, which is transmitted within NM PDU by the corresponding <Bus>Nm.	
<b>Template Description</b>	
Absolute offset (with respect to the NM-PDU) of the partial networking request release information vector that is defined in bytes as an index starting with 0.	
<b>M2 Parameter</b>	
SystemTemplate::System.pncVectorOffset	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Nm_00252]

<b>BSW Module</b>	<b>BSW Context</b>	
Nm	Nm/NmGlobalConfig/NmGlobalProperties	
<b>BSW Parameter</b>		<b>BSW Type</b>
NmVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Pre-processor switch for enabling Version Info API support.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Nm_00204]

## C.1.7 EcuC

<b>BSW Module</b>	<b>BSW Context</b>	
EcuC	EcuC	
<b>BSW Parameter</b>		<b>BSW Type</b>
EcuConfigSet		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the configuration parameters and sub containers of the global PduCollection.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EcuC_00061]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet	
BSW Parameter	BSW Type	
EcucPduCollection	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Collection of all Pdu objects flowing through the Com-Stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00002]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection	
BSW Parameter	BSW Type	
MetaDataType	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Meta data serves to transport information through the AUTOSAR layers. It is transported by the PduInfoType structure via a separate pointer to a byte array alongside the length of and a pointer to the payload of the PDU. This container defines the content of the meta data.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00073]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/MetaDataType	
BSW Parameter	BSW Type	
MetaDataTypeItem	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
The content of meta data in a Pdu consists of an ordered list of meta data items. This container represents a meta data item that is contained in meta data of a Pdu.		
Template Description		
This meta-class represents a single meta-data item.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataTypeItem		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00074]



BSW Module	BSW Context	
EcuC	EcuC/EcuConfigSet/EcuPduCollection/MetaDataType/MetaDataItem	
BSW Parameter		BSW Type
MetaDataItemLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the length of a meta data item in bytes.		
Template Description		
This attribute determines the length of the MetaDataItem at run-time.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataItem.length		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00075]

BSW Module	BSW Context	
EcuC	EcuC/EcuConfigSet/EcuPduCollection/MetaDataType/MetaDataItem	
BSW Parameter		BSW Type
MetaDataType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the type of a meta data item.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataItem.metaDataType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00076]

BSW Module	BSW Context	
EcuC	EcuC/EcuConfigSet/EcuPduCollection/MetaDataType/MetaDataItem/MetaDataType	
BSW Parameter		BSW Type
ADDRESS_EXTENSION_8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Address extension field (N_AE) of the mixed addressing modes with 11bit and 29bit CAN ID of ISO 15765-2. Size: 8 bits.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataItem.metaDataType		
Mapping Rule		Mapping Type
SWComponentTemplate::PortInterface::MetaDataItem.metaDataType == ADDRESS_EXTENSION_8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EcuC	EcuC/EcuConfigSet/EcuPduCollection/MetaDataType/MetaDataItem/MetaDataItemTemplate	
BSW Parameter		BSW Type
CAN_ID_32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
CAN ID according to ISO 11898-2, either 29 bits or 11 bits. Encoding according to Can_IdType. Size: 32 bits.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataType.metaDataItemTemplate		
Mapping Rule		Mapping Type
SWComponentTemplate::PortInterface::MetaDataType.metaDataItemTemplate == CAN_ID_32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EcuC	EcuC/EcuConfigSet/EcuPduCollection/MetaDataType/MetaDataItem/MetaDataItemTemplate	
BSW Parameter		BSW Type
ETHERNET_MAC_64		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Ethernet MAC address. Size: 64 bits.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataType.metaDataItemTemplate		
Mapping Rule		Mapping Type
SWComponentTemplate::PortInterface::MetaDataType.metaDataItemTemplate == ETHERNET_MAC_64		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EcuC	EcuC/EcuConfigSet/EcuPduCollection/MetaDataType/MetaDataItem/MetaDataItemTemplate	
BSW Parameter		BSW Type
LIN_NAD_8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
LIN node address as used in the LIN transport protocol. Size: 8 bits.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataType.metaDataItemTemplate		
Mapping Rule		Mapping Type
SWComponentTemplate::PortInterface::MetaDataType.metaDataItemTemplate == LIN_NAD_8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/MetaDataType/MetaDataItem/MetaDataItem	
BSW Parameter		BSW Type
PRIORITY_8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Priority field of SAE J1939 IDs, or Ethernet QoS parameter. Size: 8 bits.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataItem.metaDataItem		
Mapping Rule		Mapping Type
SWComponentTemplate::PortInterface::MetaDataItem.metaDataItem == PRIORITY_8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/MetaDataType/MetaDataItem/MetaDataItem	
BSW Parameter		BSW Type
SOCKET_CONNECTION_ID_16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
SoAd socket connection ID. Size: 16 bits.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataItem.metaDataItem		
Mapping Rule		Mapping Type
SWComponentTemplate::PortInterface::MetaDataItem.metaDataItem == SOCKET_CONNECTION_ID_16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/MetaDataType/MetaDataItem/MetaDataItem	
BSW Parameter		BSW Type
SOURCE_ADDRESS_16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Source address of CanTp, FrTp, or DoIP transport protocol messages, or of SAE J1939 messages. Size: 16 bits.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataItem.metaDataItem		
Mapping Rule		Mapping Type
SWComponentTemplate::PortInterface::MetaDataItem.metaDataItem == SOURCE_ADDRESS_16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/MetaDataType/MetaDataItem/MetaDataItemTemplate	
BSW Parameter	BSW Type	
TARGET_ADDRESS_16	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Target address of CanTp, FrTp, or DoIP transport protocol messages, or destination address of SAE J1939 messages. Size: 16 bits.		
Template Description		
This aggregation contributes the specification of the concrete meta-data item type.		
M2 Parameter		
SWComponentTemplate::PortInterface::MetaDataItem.metaDataItemTemplate		
Mapping Rule		Mapping Type
SWComponentTemplate::PortInterface::MetaDataItem.metaDataItemTemplate == TARGET_ADDRESS_16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection	
BSW Parameter	BSW Type	
Pdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
One Pdu flowing through the COM-Stack. This Pdu is used by all Com-Stack modules to agree on referencing the same Pdu.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00001]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu	
BSW Parameter	BSW Type	
DynamicLength	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter defines whether the Pdu has dynamic length (true) or not (false). Please note that the usage of this attribute is restricted by <a href="#">[constr_3448]</a> .		
Template Description		
This attribute defines whether the Pdu has dynamic length (true) or not (false). Please note that the usage of this attribute is restricted by <a href="#">[constr_3448]</a> .		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Pdu.hasDynamicLength		
Mapping Rule		Mapping Type
Attribute can be derived from Pdu.hasDynamicLength attribute that is only relevant for UserDefined Pdus, UserDefinedIPdus, J1939DcmIPdus.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00078]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu	
BSW Parameter		BSW Type
EcucPduDedicatedPartition		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Module specific container for Pdu to partition assignment.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00079]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu/EcucPduDedicatedPartition	
BSW Parameter		BSW Type
EcucPduDedicatedPartitionBswModuleRef		ECUC-FOREIGN-REFERENCE-DEF
BSW Description		
Reference to BSW module, for which the according dedicated Pdu assignment is valid.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00080]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu/EcucPduDedicatedPartition	
BSW Parameter		BSW Type
EcucPduDedicatedPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Module specific reference to EcucPartition, where the according Pdu is assigned to. The dedicated partition reference shall overrule the default partition reference for the respective module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00081]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu	
BSW Parameter		BSW Type
EcucPduDefaultPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to EcucPartition, where the according Pdu is assigned to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00082]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu	
BSW Parameter		BSW Type
J1939Requestable		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pdu can be triggered by the J1939 request message.		
Template Description		
<b>CanFrameTriggering.j1939requestable:</b> Frame can be triggered by the J1939 request message.		
<b>J1939TpPg.requestable:</b> Parameter Group can be triggered by the J1939 request message.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.j1939requestable, SystemTemplate::TransportProtocols::J1939TpPg.requestable		
Mapping Rule		Mapping Type
CanFrameTriggering.j1939requestable: CanFrameTriggering references a Frame where the aggregated PduToFrameMapping references the given Pdu. J1939TpPg.requestable: J1939TpPg references the given Pdu in the role sdu.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00072]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu	
BSW Parameter		BSW Type
MetaDataTypeRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to meta data that is transported in the Pdu through the AUTOSAR layers.		
Template Description		





<p><b>VariableDataPrototype:</b> A VariableDataPrototype represents a formalized generic piece of information that is typically mutable by the application software layer. VariableDataPrototype is used in various contexts and the specific context gives the otherwise generic VariableDataPrototype a dedicated semantics.</p> <p><b>SenderReceiverToSignalMapping:</b> Mapping of a sender receiver communication data element to a signal.</p> <p><b>SystemSignal:</b> The system signal represents the communication system's view of data exchanged between SW components which reside on different ECUs. The system signals allow to represent this communication in a flattened structure, with exactly one system signal defined for each data element prototype sent and received by connected SW component instances.</p> <p><b>ISignal:</b> Signal of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal is sent in different Signal IPdus to multiple receivers.  To support the RTE "signal fan-out" each SignalIPdu contains ISignals. If the same System Signal is to be mapped into several SignalIPdus there is one ISignal needed for each ISignalToIPduMapping.  ISignals describe the Interface between the Precompile configured RTE and the potentially Postbuild configured Com Stack (see ECUC Parameter Mapping).  In case of the SystemSignalGroup an ISignal shall be created for each SystemSignal contained in the SystemSignalGroup.</p> <p><b>ISignalIPdu:</b> Represents the IPdus handled by Com. The ISignalIPdu assembled and disassembled in AUTOSAR COM consists of one or more signals. In case no multiplexing is performed this IPdu is routed to/from the Interface Layer.  A maximum of one dynamic length signal per IPdu is allowed.</p>	
<b>M2 Parameter</b>	
SWComponentTemplate::Datatype::DataPrototypes::VariableDataPrototype, SystemTemplate::DataMapping::SenderReceiverToSignalMapping, SystemTemplate::Fibex::FibexCore::CoreCommunication::SystemSignal, SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal, SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
A MetaDataTypeRef shall be derived for a given Pdu if a MetaDataItemSet exists that refers to a VariablePrototype that is also referenced from a SenderReceiverToSignalMapping that in turn references a SystemSignal that is referenced by a ISignal that is mapped to an ISignalIPdu that is derived to the mentioned Pdu in EcuC.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EcuC_00077]

<b>BSW Module</b>	<b>BSW Context</b>
EcuC	EcuC/EcuConfigSet/EcuCpduCollection/Pdu
<b>BSW Parameter</b>	<b>BSW Type</b>
PduLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Length of the Pdu in bytes. It should be noted that in former AUTOSAR releases (Rel 2.1, Rel 3.0, Rel 3.1, Rel 4.0 Rev. 1) this parameter was defined in bits.	
<b>Template Description</b>	
<p><b>Pdu.length:</b> Pdu length in bytes. In case of dynamic length IPdus (containing a dynamical length signal), this value indicates the maximum data length. It should be noted that in former AUTOSAR releases (Rel 2.1, Rel 3.0, Rel 3.1, Rel 4.0 Rev. 1) this parameter was defined in bits.  The Pdu length of zero bytes is allowed.</p> <p><b>IPduMapping.pduMaxLength:</b> Define the maximum length in bytes which limits the length of the Pdu during gateway operation if the runtime length of the received Pdu exceeds this limit.</p>	
<b>M2 Parameter</b>	





SystemTemplate::Fibex::FibexCore::CoreCommunication::Pdu.length, SystemTemplate::Fibex::Fibex4Multiplatform::IPduMapping.pduMaxLength	
Mapping Rule	Mapping Type
<p>1:1 mapping of Pdu.length in case that IPduMapping is not used. In case IPduMapping is used:</p> <p>1:1 (sourceIPdu:targetIPdu) routing: When the SysTPduToPduTriggeringRef PduTriggering is referenced by an IPduMapping in the role sourceIPdu or targetIPdu, respectively, and that IPduMapping has a pduMaxLength defined then IPduMapping.pduMaxLength shall be used as PduLength for the derived PduRSrcPdu and PduRDestPdu, respectively. Otherwise use Pdu.length.</p> <p>1:N (sourceIPdu:targetIPdu) routing: If 1:N (sourceIPdu:targetIPdu) routing is modeled, then the maximum length of the available IPduMapping.pduMaxLength and Pdu.length shall be derived for the PduRSrcPdu. The derivation of the length of each PduRDestPdu shall follow the rule for 1:1 routing. N:1 (sourceIPdu:targetIPdu): If N:1 (sourceIPdu:targetIPdu) routing is modeled, then the maximum length of the available IPduMapping.pduMaxLength and Pdu.length shall be derived for the PduRDestPdu. The derivation of the length of each PduRSrcPdu shall follow the rule for 1:1 routing.</p>	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EcuC_00003]

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu	
BSW Parameter		BSW Type
SysTPduToFrameTriggeringRef		ECUC-FOREIGN-REFERENCE-DEF
BSW Description		
<p>Reference to the FrameTriggering from the SystemTemplate which this Pdu belongs to.</p> <p>SysTPduToFrameTriggeringRef shall be used for UserDefinedPdu, NmPdu and NPdu which are not going through the Pdu Router. This reference shall not be used if SysTPduToPduTriggeringRef exists.</p>		
Template Description		
<p>The FrameTriggering describes the instance of a frame sent on a channel and defines the manner of triggering (timing information) and identification of a frame on the channel, on which it is sent.</p> <p>For the same frame, if FrameTriggerings exist on more than one channel of the same cluster the fan-out/in is handled by the Bus interface.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::FrameTriggering		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EcuC_00052]	

BSW Module	BSW Context	
EcuC	EcuC/EcucConfigSet/EcucPduCollection/Pdu	
BSW Parameter		BSW Type
SysTPduToPduTriggeringRef		ECUC-FOREIGN-REFERENCE-DEF
BSW Description		
<p>Reference to the PduTriggering from the SystemTemplate which this Pdu represents.</p> <p>SysTPduToPduTriggeringRef shall be used for all Pdu except UserDefinedPdu, NmPdu and NPdu which are not going through the Pdu Router. For these Pdu, SysTPduToFrameTriggeringRef shall be used.</p>		
Template Description		







<p>The PduTriggering describes on which channel the IPdu is transmitted. The Pdu routing by the PduR is only allowed for subclasses of IPdu.</p> <p>Depending on its relation to entities such channels and clusters it can be unambiguously deduced whether a fan-out is handled by the Pdu router or the Bus Interface.</p> <p>If the fan-out is specified between different clusters it shall be handled by the Pdu Router. If the fan-out is specified between different channels of the same cluster it shall be handled by the Bus Interface.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EcuC_00054]

<b>BSW Module</b>	<b>BSW Context</b>
EcuC	EcuC/EcuConfigSet/EcuPduCollection
<b>BSW Parameter</b>	<b>BSW Type</b>
PdulTypeEnum	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
<p>The PdulType is used within the entire AUTOSAR Com Stack except for bus drivers. The size of this global type depends on the maximum number of PDUs used within one software module. If no software module deals with more PDUs than 256, this type can be set to uint8. If at least one software module handles more than 256 PDUs, this type shall be set to uint16. See AUTOSAR_SWS_CommunicationStackTypes for more details.</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EcuC_00041]

<b>BSW Module</b>	<b>BSW Context</b>
EcuC	EcuC/EcuConfigSet/EcuPduCollection
<b>BSW Parameter</b>	<b>BSW Type</b>
PduLengthTypeEnum	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
<p>The PduLengthType is used within the entire AUTOSAR Com Stack except for bus drivers. The size of this global type depends on the maximum length of PDUs to be sent by an ECU. If no segmentation is used the length depends on the maximum payload size of a frame of the underlying communication system (for FlexRay maximum size is 255 bytes, therefore uint8). If segmentation is used it depends on the maximum length of a segmented N-SDU (in general uint16 is used). See AUTOSAR_SWS_CommunicationStackTypes for more details.</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EcuC_00042]

BSW Module	BSW Context	
EcuC	EcuC	
BSW Parameter	BSW Type	
EcucHardware	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	Hardware definition of this Ecu.	
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EcuC_00056]	

BSW Module	BSW Context	
EcuC	EcuC/EcucHardware	
BSW Parameter	BSW Type	
EcucCoreDefinition	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	Definition of one Core on this Ecu.	
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EcuC_00057]	

BSW Module	BSW Context	
EcuC	EcuC/EcucHardware/EcucCoreDefinition	
BSW Parameter	BSW Type	
EcucCoreHwRef	ECUC-FOREIGN-REFERENCE-DEF	
BSW Description	Optional reference to the HwElement of HwCategory ProcessingUnit that represents this Core in the ECU Resource Template.	
Template Description	This represents the ability to describe Hardware Elements on an instance level. The particular types of hardware are distinguished by the category. This category determines the applicable attributes. The possible categories and attributes are defined in HwCategory.	
M2 Parameter	EcuResourceTemplate::HwElement	
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EcuC_00059]	

BSW Module	BSW Context	
EcuC	EcuC/EcucHardware/EcucCoreDefinition	
BSW Parameter		BSW Type
EcucCoreId		ECUC-INTEGER-PARAM-DEF
BSW Description		
ID of the core.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00058]

BSW Module	BSW Context	
EcuC	EcuC	
BSW Parameter		BSW Type
EcucPartitionCollection		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Collection of Partitions defined for this ECU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00007]

BSW Module	BSW Context	
EcuC	EcuC/EcucPartitionCollection	
BSW Parameter		BSW Type
EcucPartition		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Definition of one Partition on this ECU. One Partition will be implemented using one Os-Application.		
Template Description		
Partitions are used as error containment regions. They permit the grouping of SWCs and resources and allow to describe recovery policies individually for each partition. Partitions can be terminated or restarted during run-time as a result of a detected error.		
M2 Parameter		
SystemTemplate::SWmapping::EcuPartition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00005]

BSW Module	BSW Context	
EcuC	EcuC/EcucPartitionCollection/EcucPartition	
BSW Parameter		BSW Type
EcucDefaultBswPartition		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>Denotes the default BSW partition. This partition will host all BSW Modules, which are not explicitly mapped to a different partition.</p> <p>For partitions other than the default BSW partition this parameter can be omitted.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00037]

BSW Module	BSW Context	
EcuC	EcuC/EcucPartitionCollection/EcucPartition	
BSW Parameter		BSW Type
EcucEcuPartitionRef		ECUC-FOREIGN-REFERENCE-DEF
BSW Description		
Reference to the EcuPartition to define the link to the partition described in the System description.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00083]

BSW Module	BSW Context	
EcuC	EcuC/EcucPartitionCollection/EcucPartition	
BSW Parameter		BSW Type
EcucPartitionBswModuleDistinguishedPartition		ECUC-FOREIGN-REFERENCE-DEF
BSW Description		
This maps the abstract partition of the Bsw Module to a concrete Partition existing in the ECU.		
Template Description		
<p>Each instance of this meta-class represents an abstract partition in which context the code of the enclosing BswModule Behavior can be executed.</p> <p>The intended use case is to distinguish between several partitions in order to implement different behavior per partition, for example to behave either as a master or satellite in a multicore ECU with shared BSW code.</p>		
M2 Parameter		
BswModuleTemplate::BswBehavior::BswDistinguishedPartition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00068]

BSW Module		BSW Context	
EcuC		EcuC/EcucPartitionCollection/EcucPartition	
BSW Parameter		BSW Type	
EcucPartitionSoftwareComponentInstanceRef		ECUC-INSTANCE-REFERENCE-DEF	
BSW Description			
References the SW Component instances from the Ecu Extract that shall be executed in this partition.			
Template Description			
M2 Parameter			
SystemTemplate::SWmapping::SwcToEcuMapping.partition			
Mapping Rule			Mapping Type
The EcucPartitionSoftwareComponentInstanceRef is derived from an SwcToEcuMapping which references an EcuPartition and one or several SwComponentPrototypes. For each SwComponent Prototype that is referenced by the SwcToEcuMapping in the component role an EcucPartition SoftwareComponentInstanceRef shall be created that refers to the same SwComponentPrototype as the the SwcToEcuMapping.			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_EcuC_00036]

BSW Module		BSW Context	
EcuC		EcuC/EcucPartitionCollection/EcucPartition	
BSW Parameter		BSW Type	
PartitionCanBeRestarted		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies the requirement whether the Partition can be restarted. If set to true all software executing in this partition shall be capable of handling a restart.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_EcuC_00006]

BSW Module		BSW Context	
EcuC		EcuC	
BSW Parameter		BSW Type	
EcucPostBuildVariants		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Collection of toplevel PostBuildSelectable variants. The PredefinedVariants linked inside this container will determine how many PostBuildSelectableVariants exist. If this container exist the name pattern for initialization of BSW modules will be <Mip>_Config_<PredefinedVariant.shortName>. If this container does not exist the name pattern for initialization of BSW modlues will be <Mip>_Config.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_EcuC_00070]

BSW Module	BSW Context	
EcuC	EcuC/EcucPostBuildVariants	
BSW Parameter	BSW Type	
EcucPostBuildVariantRef	ECUC-FOREIGN-REFERENCE-DEF	
BSW Description		
Reference to a PredefinedVariant that defines one toplevel postBuild configuration set (covering all post-build capable BSW modules). PredefinedVariants that are referenced here shall contain only PostBuildVariantCriterionValueSets.		
Template Description		
This specifies one predefined variant. It is characterized by the union of all system constant values and post-build variant criterion values aggregated within all referenced system constant value sets and post build variant criterion value sets plus the value sets of the included variants.		
M2 Parameter		
GenericStructure::VariantHandling::PredefinedVariant		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00071]

BSW Module	BSW Context	
EcuC	EcuC	
BSW Parameter	BSW Type	
EcucUnitGroupAssignment	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Collection of UnitGroup references to support the generation of ASAM MCD file.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuC_00063]

BSW Module	BSW Context	
EcuC	EcuC/EcucUnitGroupAssignment	
BSW Parameter	BSW Type	
EcucUnitGroupRef	ECUC-FOREIGN-REFERENCE-DEF	
BSW Description		
Optional reference to the UnitGroup to support the generation of ASAM MCD file. These UnitGroups are selecting a set of units for a specific country.		
Template Description		





<p>This meta-class represents the ability to specify a logical grouping of units. The category denotes the unit system that the referenced units are associated to.</p> <p>In this way, e.g. country-specific unit systems (CATEGORY="COUNTRY") can be defined as well as specific unit systems for certain application domains.</p> <p>In the same way a group of equivalent units, can be defined which are used in different countries, by setting CATEGORY="EQUIV_UNITS". KmPerHour and MilesPerHour could such be combined to one group named "vehicle_speed". The unit MeterPerSec would not belong to this group because it is normally not used for vehicle speed. But all of the mentioned units could be combined to one group named "speed".</p> <p>Note that the UnitGroup does not ensure the physical compliance of the units. This is maintained by the physical dimension.</p>	
<b>M2 Parameter</b>	
AsamHdo::Units::UnitGroup	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EcuC_00062]

<b>BSW Module</b>	<b>BSW Context</b>	
EcuC	EcuC	
<b>BSW Parameter</b>		<b>BSW Type</b>
EcucVariationResolver		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Collection of PredefinedVariant elements containing definition of values for SwSystemconst which shall be applied when resolving the variability during ECU Configuration.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EcuC_00009]	

<b>BSW Module</b>	<b>BSW Context</b>	
EcuC	EcuC/EcucVariationResolver	
<b>BSW Parameter</b>		<b>BSW Type</b>
PredefinedVariantRef		ECUC-FOREIGN-REFERENCE-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This specifies one predefined variant. It is characterized by the union of all system constant values and post-build variant criterion values aggregated within all referenced system constant value sets and post build variant criterion value sets plus the value sets of the included variants.		
<b>M2 Parameter</b>		
GenericStructure::VariantHandling::PredefinedVariant		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EcuC_00010]	

### C.1.8 ComM

BSW Module	BSW Context	
ComM	ComM	
BSW Parameter		BSW Type
ComMConfigSet		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR ComM module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00879]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet	
BSW Parameter		BSW Type
ComMChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) of the bus channel(s). The channel parameters shall be harmonized within the whole communication stack.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::PhysicalChannel.commConnector		
Mapping Rule		Mapping Type
<ul style="list-style-type: none"> <li>• Can, Lin, Fr: For each CommunicationCluster the EcuInstance is connected to, one ComMChannel container is created.</li> <li>• For Ethernet: For each EthernetPhysicalChannel the EcuInstance is connected to, one ComMChannel container is created.</li> </ul>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00565]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMChannel	
BSW Parameter		BSW Type
ComMBusType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Identifies the bus type of the channel.		
Template Description		







<p>The CommunicationCluster is the main element to describe the topological connection of communicating ECUs.</p> <p>A cluster describes the ensemble of ECUs, which are linked by a communication medium of arbitrary topology (bus, star, ring, ...). The nodes within the cluster share the same communication protocol, which may be event-triggered, time-triggered or a combination of both.</p> <p>A CommunicationCluster aggregates one or more physical channels.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationCluster	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Depends of the used CommunicationCluster subclass: abstractCanCluster → COMM_BUS_TYPE_CAN FlexRayCluster → COMM_BUS_TYPE_FR EthernetCluster → COMM_BUS_TYPE_ETH LinCluster → COMM_BUS_TYPE_LIN UserDefinedCluster → COMM_BUS_TYPE_CDD	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_ComM_ - 00567]

<b>BSW Module</b>	<b>BSW Context</b>	
ComM	ComM/ComMConfigSet/ComMChannel	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMCDDBusPrefix		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
Prefix to be used for API calls to CDD.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_ComM_ - 00888]

<b>BSW Module</b>	<b>BSW Context</b>	
ComM	ComM/ComMConfigSet/ComMChannel	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMChannelId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Channel identification number of the corresponding channel.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_ComM_ - 00635]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMChannel	
BSW Parameter	BSW Type	
ComMChannelPartitionRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to EcucPartition, where the according ComMChannel is assigned to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00894]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMChannel	
BSW Parameter	BSW Type	
ComMDynamicPncToChannelMappingEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Channel-specific parameter to enable the dynamic PNC-to-channel-mapping feature. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled		
Template Description		
Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector. <a href="#">dynamicPncToChannelMappingEnabled</a>		
Mapping Rule		Mapping Type
1:1 Mapping. If M2 Parameter not defined then do not create ComMDynamicPncToChannelMappingEnabled		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00896]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMChannel	
BSW Parameter	BSW Type	
ComMFullCommRequestNotificationEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Defines if the optional SenderReceiver Port of Interface ComM_CurrentChannelRequest will be provided for this channel. True means enabled. False means disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_ComM_ - 00787]

BSW Module	BSW Context
ComM	ComM/ComMConfigSet/ComMChannel
BSW Parameter	BSW Type
ComMMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF
BSW Description	
Specifies the period in seconds that the MainFunction has to be triggered with. Comment: ComM scheduling shall be at least as fast as the communication stack and a schedule longer than 100ms makes no sense for communication.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_ComM_ - 00556]

BSW Module	BSW Context
ComM	ComM/ComMConfigSet/ComMChannel
BSW Parameter	BSW Type
ComMManageReference	ECUC-REFERENCE-DEF
BSW Description	
Represents the reference between a ComMChannel with role managing channel and a ComMChannel with role managed channel.	
Template Description	
Reference between a channel with role managing channel and a channel with role managed channel.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreTopology::PhysicalChannel.managedPhysicalChannel	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_ComM_ - 00893]

BSW Module	BSW Context
ComM	ComM/ComMConfigSet/ComMChannel
BSW Parameter	BSW Type
ComMNetworkManagement	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container contains the configuration parameters of the networkmanagement.	
Template Description	





<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_ComM_-00607]

<b>BSW Module</b>	<b>BSW Context</b>	
ComM	ComM/ComMConfigSet/ComMChannel/ComMNetworkManagement	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMNmLightTimeout		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Defines the timeout (in seconds) after COMM_FULL_COMMUNICATION sub-state COMM_FULL_COM_READY_SLEEP is left. The range shall be greater than 0.0 and less or equal to 255.0.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_ComM_-00606]	

<b>BSW Module</b>	<b>BSW Context</b>	
ComM	ComM/ComMConfigSet/ComMChannel/ComMNetworkManagement	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMNmVariant		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defines the functionality of the networkmanagement. Shall be harmonized with NM configuration.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::NmNode.controller		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
If the CommunicationController is not referenced by NmNode or if the CommunicationController is an EthernetCommunicationController not referenced by NmNode and slaveActAsPassiveCommunicationSlave set to FALSE or not present, the ComMNmVariant of the corresponding ComMChannel shall be set to NONE if not explicitly set to LIGHT.  If the CommunicationController is an EthernetCommunicationController not referenced by NmNode and slaveActAsPassiveCommunicationSlave is set to TRUE, the ComMNmVariant of the corresponding ComMChannel shall be set to SLAVE_PASSIVE.  If the CommunicationController is referenced by a NmNode and NmEcu.nmPassiveModeEnabled attribute is present and is set to true, the ComMNmVariant shall be set to PASSIVE. If the CommunicationController is referenced by NmNode and NmEcu.nmPassiveModeEnabled attribute is not present or is set to false the ComMNmVariant shall be set to FULL. Set to SLAVE_ACTIVE if the CommunicationController is defined as a LinSlave. In the System Template the LinMaster/LinSlave is connected to the LinChannel via a CommunicationConnector.	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_ComM_-00568]

BSW Module	BSW Context
ComM	ComM/ComMConfigSet/ComMChannel/ComMNetworkManagement
BSW Parameter	BSW Type
ComMPncNmRequest	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
If this parameter equals true, then Nm shall be requested again by calling Nm_NetworkRequest under either the following conditions: - every time a FULL Communication is requested due to a change in the PNC state machine to COMM_PNC_REQUESTED - if a shutdown for a PNC coincides with a PNC request of the same PNC	
Template Description	
Defines if this EcuInstance shall request Nm on all its PhysicalChannels which have Nm variant set to FULL each time a PNC is requested.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.pncNmRequest	
Mapping Rule	Mapping Type
If EcuInstance.pncNmRequest is set to true, then ComM shall set ComMPncNmRequest to TRUE for every ComMChannel which has ComMNmVariant set to FULL	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_ComM_-00886]

BSW Module	BSW Context
ComM	ComM/ComMConfigSet/ComMChannel
BSW Parameter	BSW Type
ComMNoCom	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Not allowed to change state of ComM channel to COMM_SILENT_COMMUNICATION or COMM_FULL_COMMUNICATION. true: Enabled - Not allowed to switch to Communication Modes above. false: Disabled - Allowed to switch Communication Modes above. Shall be possible to change parameter during runtime with ComM API's. ECU/All channels: ComM_LimitECUToNoCom Mode(). Separate channels: ComM_LimitChannelToNoComMode().	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_ComM_-00571]

BSW Module	BSW Context
ComM	ComM/ComMConfigSet/ComMChannel
BSW Parameter	BSW Type





ComMNoWakeUpInhibitionNvmStorage		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
If this parameter is set to "true", the NoWakeUp inhibition state of the channel shall be stored (in some implementation specific way) in the block pointed to by ComMGlobalNvmBlockDescriptor.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_ComM_-00789]

<b>BSW Module</b>	<b>BSW Context</b>	
ComM	ComM/ComMConfigSet/ComMChannel	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMNoWakeUp		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Defines if an ECU is not allowed to wake-up the channel. true: Enabled (not allowed to wake-up) false: Disabled This is the default/init value of a runtime variable that can be changed during runtime using ComM_PreventWakeUp().		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_ComM_-00569]

<b>BSW Module</b>	<b>BSW Context</b>	
ComM	ComM/ComMConfigSet/ComMChannel	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMPncGatewayType		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Identifies the Partial Network Gateway behaviour of a ComMChannel.		
<b>Template Description</b>		
Defines if this EcuInstance shall implement the PncGateway functionality on this CommunicationConnector and its respective PhysicalChannel. Several EcuInstances on the same PhysicalChannel can have the PncGateway functionality enabled, but only one of them shall have the pncGatewayType "active".		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.pncGatewayType		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping none or not defined -> do not create ECUC Parameter		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_ComM_-00842]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMChannel	
BSW Parameter	BSW Type	
ComMUserPerChannel	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains a list of identifiers that are needed to refer to a user in the system which is linked to a channel.		
Template Description		
<b>ComManagementMapping.comManagementGroup:</b> IPduGroup participating in a Mode Management PortGroup.		
<b>ComManagementMapping.physicalChannel:</b> This reference maps the Mode Management PortGroup partial network to communication channels.		
M2 Parameter		
SystemTemplate::ComManagementMapping.comManagementGroup, SystemTemplate::ComManagementMapping.physicalChannel		
Mapping Rule		Mapping Type
The ComMUser that need to be referenced shall be derived from a superset of PhysicalChannels that are reachable by ComManagementMapping.comManagementGroup and ComManagementMapping.physicalChannel.  From the comManagementGroup reference all ISignalPduGroups can be retrieved to which the ComManagementMapping refers to. From the ISignalPduGroup all ISignalPdus shall be collected that are contained in the ISignalPduGroup or one of the sub ISignalPduGroups. The search for all PduTriggerings associated with these ISignalPdus provides a set of PhysicalChannels since the PduTriggerings are directly aggregated by a PhysicalChannel. In addition to the PhysicalChannels that are retrieved from the ComManagementMapping.comManagementGroup the directly referenced ComManagementMapping.physicalChannel shall be added. Further mappings may be required from an ECU integration point of view.		partial
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00657]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMChannel/ComMUserPerChannel	
BSW Parameter	BSW Type	
ComMUserChannel	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the ComMUser that corresponds to this channel user. ImplementationType: COMM_UserHandleType		
Template Description		
Mode Management PortGroup to be mapped onto a communication channel. This reference is optional in case that the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy systems.		
M2 Parameter		
SystemTemplate::ComManagementMapping.comManagementPortGroup		
Mapping Rule		Mapping Type
The ComMUser reference shall be derived from the ComMgrUserNeeds which are referenced by the ComManagementMapping. Further mappings may be required from an ECU integration point of view.		partial
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00658]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMChannel	
BSW Parameter	BSW Type	
ComMWakeupSleepRequestEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Used for communication channels where the corresponding hardware support wake-up and/or sleep request capability on the network, e.g. OA TC10 compatible PHYs for Ethernet.		
Template Description		
<p><b>EcuInstance.wakeUpOverBusSupported:</b> Driver support for wakeup over Bus.</p> <p><b>EcuInstance.ethSwitchPortGroupDerivation:</b> Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EcuInstance. If not defined the derivation shall not be done.</p> <p><b>EthernetCommunicationController:</b> Ethernet specific communication port attributes.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.wakeUpOverBusSupported, SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.ethSwitchPortGroupDerivation, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationController		
Mapping Rule		Mapping Type
If EcuInstance.wakeUpOverBusSupported is defined and set to TRUE and the aggregated EthernetCommunicationController aggregate an CouplingPort with physicalLayerType set to "100Base-T1" and "1000Base-T1", respectively, or the aggregated CouplingPort is part of a CouplingElement with couplingType set to "switch" and EcuInstance.ethSwitchPortGroupDerivation is not defined or set to FALSE and the affected CouplingPorts have a physicalLayerType set to "100Base-T1" and "1000Base-T1", respectively, than the corresponding ComM channel shall set ComMWakeupSleepRequestEnabled to TRUE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00898]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet	
BSW Parameter	BSW Type	
ComMPnc	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration of the partial network cluster (PNC).		
Template Description		
Describes a mapping between one or several Virtual Function Clusters onto Partial Network Clusters. A Virtual Function Cluster is realized by a PortGroup. A Partial Network Cluster is realized by one or more IPduGroups.		
M2 Parameter		
SystemTemplate::PncMapping::PncMapping		
Mapping Rule		Mapping Type
Create ComMPnc container for each PncMapping element.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00843]



BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMPnc	
BSW Parameter	BSW Type	
ComMChannelPerPnc	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the ComMChannel that is required for this PNC. ImplementationType: NetworkHandleType		
Template Description		
<p><b>PncMapping.pncGroup:</b> IPduGroup participating in a Partial Network Cluster. This reference is optional in case an ecu extract has only indirect pnc access, i.e. ecu is not directly connected to a network which supports partial network.</p> <p><b>PncMapping.physicalChannel:</b> This reference maps the partial network to a communication channel.</p> <p><b>PncMapping.pncPdurGroup:</b> This reference maps the Partial Network Cluster to a set of PdurIpduGroups.</p>		
M2 Parameter		
SystemTemplate::PncMapping::PncMapping.pncGroup, SystemTemplate::PncMapping::PncMapping.physicalChannel, SystemTemplate::PncMapping::PncMapping.pncPdurGroup		
Mapping Rule		Mapping Type
<p>The ComMChannels that need to be referenced shall be derived from the PhysicalChannels that are either reachable by PncMapping.pncGroup, PncMapping.pncPdurGroup, or by PncMapping.physicalChannel.</p> <p>From the pncGroup reference all ISignalPduGroups can be retrieved to which the PncMapping refers. From the ISignalPduGroup all ISignalPdus shall be collected that are contained in the ISignalPduGroup or one of the sub ISignalPduGroups. The search for all PduTriggerings associated with these ISignalPdus provides a set of PhysicalChannels since the PduTriggerings are directly aggregated by a PhysicalChannel.</p> <p>From the pncPdurGroup reference all PdurIpduGroups can be retrieved to which the PncMapping refers to. From the PdurIpduGroup all PduTriggerings associated with these PdurIpduGroups provides a set of PhysicalChannels since the PduTriggerings are directly aggregated by a Physical Channel.</p> <p>In addition to the PhysicalChannels that are retrieved from the PncMapping.pncGroup and PncMapping.pncPdurGroup the directly referenced PncMapping.physicalChannels shall be added.</p> <p>Please note that the PncMapping.physicalChannel reference was introduced in Release 4.4.0 and for backward compatibility reasons nobody is forced to configure this new reference. Therefore the old approach via the PncMapping.pncGroup and PncMapping.pncPdurGroup shall still be respected.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00880]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMPnc	
BSW Parameter	BSW Type	
ComMChannelPerTxOnlyPnc	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the ComMChannel that is required for this PNC. This PNC is considered to be only transmitted on this channel as internal PNC request. ImplementationType: NetworkHandleType		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_ComM_-00900]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMPnc	
BSW Parameter		BSW Type
ComMPncEthIfSwitchPortGroupRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the PortGroups that correspond to this PNC. Note: This is only for documentation.		
Template Description		
Reference to the partial networks this CouplingPort participates in.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.pncMapping		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
The references are derived from the reference CouplingPort to PncMapping.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_ComM_-00891]	

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMPnc	
BSW Parameter		BSW Type
ComMPncId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Partial network cluster identification number.		
Template Description		
Identifier of the Partial Network Cluster. This number represents the absolute bit position of this Partial Network Cluster in the NM Pdu.		
M2 Parameter		
SystemTemplate::PncMapping::PncMapping.pncIdentifier		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_ComM_-00874]	

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMPnc	
BSW Parameter		BSW Type
ComMPncWakeupSleepRequestEnabled		ECUC-BOOLEAN-PARAM-DEF





<b>BSW Description</b>	
Used for PNCs where a requested PNC shall report an active communication request towards the BswM. The BswM forward the active communication request to the lower layer communication channels where the used hardware support wake-up and/or sleep request capability on the network, e.g. OA TC10 compatible PHYs for Ethernet. This is used e.g. for Ethernet Switch port group switching.	
<b>Template Description</b>	
<p><b>EcuInstance.wakeUpOverBusSupported:</b> Driver support for wakeup over Bus.</p> <p><b>EcuInstance.ethSwitchPortGroupDerivation:</b> Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EcuInstance. If not defined the derivation shall not be done.</p> <p><b>EthernetCommunicationController:</b> Ethernet specific communication port attributes.</p> <p><b>PncMapping:</b> Describes a mapping between one or several Virtual Function Clusters onto Partial Network Clusters. A Virtual Function Cluster is realized by a PortGroup. A Partial Network Cluster is realized by one or more IPduGroups.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.wakeUpOverBusSupported, SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.ethSwitchPortGroupDerivation, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationController, SystemTemplate::PncMapping::PncMapping	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If EcuInstance.wakeUpOverBusSupported is defined and set to TRUE, the EcuInstance.ethSwitchPortGroupDerivation is set to TRUE and the aggregated EthernetCommunicationController aggregate a CouplingElement with couplingType set to "switch" and the aggregated CouplingPorts has set the with physicalLayerType to "100Base-T1" and "1000Base-T1", respectively, then all derived ComMPnc shall set ComMWakeupSleepRequestEnabled to TRUE.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_ComM_-00899]

<b>BSW Module</b>	<b>BSW Context</b>
ComM	ComM/ComMConfigSet/ComMPnc
<b>BSW Parameter</b>	<b>BSW Type</b>
ComMUserPerPnc	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the ComMUsers that correspond to this PNC. ImplementationType: COMM_UserHandleType	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_ComM_-00876]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet	
BSW Parameter		BSW Type
ComMPncEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines whether in this configuration set the partial networking is enabled. true: Enabled false: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00878]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet	
BSW Parameter		BSW Type
ComMUser		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains a list of identifiers that are needed to refer to a user in the system which is designated to request Communication modes.		
Template Description		
Specifies the abstract needs on the configuration of the Communication Manager for one "user".		
M2 Parameter		
CommonStructure::ServiceNeeds::ComMgrUserNeeds		
Mapping Rule		Mapping Type
In case the owner of the ComMgrUserNeeds is a BSW module then the ComMUser.shortName = {capitalizedMip}_{ServiceDependency.symbolicNameProps.symbol}.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00653]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMUser	
BSW Parameter		BSW Type
ComMUserEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Denotes in which "EcucPartition" the requester is executed. When the partition is stopped, the communication request shall be cancelled in the ComM to avoid a stay-awake situation of the bus due to a stopped partition.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00786]

BSW Module	BSW Context	
ComM	ComM/ComMConfigSet/ComMUser	
BSW Parameter		BSW Type
ComMUserIdentifier		ECUC-INTEGER-PARAM-DEF
BSW Description		
An identifier that is needed to refer to a user in the system which is designated to request Communication Modes. ImplementationType: ComM_UserHandleType		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00654]

BSW Module	BSW Context	
ComM	ComM	
BSW Parameter		BSW Type
ComMGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
General configuration parameters of the Communication Manager.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00554]

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter		BSW Type
ComM0PncVectorAvoidance		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter avoids sending of 0-PNC-Vectors in case ComMPncGatewayEnabled is enabled.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00892]

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter	BSW Type	
ComMDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>Switches the development error detection and notification on or off.</p> <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00555]

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter	BSW Type	
ComMDirectUserMapping	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>If this parameter is set to true the configuration tool shall automatically create a ComMUser per ComMPnc and a ComMUser per ComMChannel.</p> <p>The shortName of the generated ComMUsers shall follow the following naming convention: PNCUser_ComMPncId, e.g. PNCUser_13 ChannelUser_ComMChannelId, e.g. ChannelUser_25</p> <p>Restriction: ComMUser, which are created due to this configuration parameter, shall not be used by SWCs (only available for BswM).</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00840]

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter	BSW Type	
ComMDynamicPncToChannelMappingSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>Precompile time switch to enable the dynamic PNC-to-channel-mapping handling.</p> <p>False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled</p>		
Template Description		





Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.dynamicPncToChannelMappingEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If at least one dynamicPncToChannelMappingEnabled attribute is defined and if at least one CommunicationConnector of the EcuInstance has dynamicPncToChannelMappingEnabled set to true, then ComMDynamicPncToChannelMappingSupport shall be set to true. Otherwise ComMDynamicPncToChannelMappingSupport shall be set to false.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_ComM_-00895]

<b>BSW Module</b>	<b>BSW Context</b>	
ComM	ComM/ComMGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMEcuGroupClassification		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Defines whether a mode inhibition affects the ECU or not. Examples: 000: No mode inhibition can be activated 001: Wake up inhibition can be enabled		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_ComM_-00563]	

<b>BSW Module</b>	<b>BSW Context</b>	
ComM	ComM/ComMGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
ComMGlobalNvMBlockDescriptor		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to NVRAM block containing the none volatile data. If this parameter is not configured it means that no NVRam is used at all.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_ComM_-00783]	

BSW Module		BSW Context	
ComM		ComM/ComMGeneral	
BSW Parameter		BSW Type	
ComMModeLimitationEnabled		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
true if mode limitation functionality shall be enabled. true: Enabled false: Disabled			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_ComM_ - 00560]

BSW Module		BSW Context	
ComM		ComM/ComMGeneral	
BSW Parameter		BSW Type	
ComMPncGatewayEnabled		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables or disables support of Partial Network Gateway. False: Partial Networking Gateway is disabled True: Partial Networking Gateway is enabled			
Template Description			
Defines if this EcuInstance shall implement the PncGateway functionality on this CommunicationConnector and its respective PhysicalChannel. Several EcuInstances on the same PhysicalChannel can have the PncGateway functionality enabled, but only one of them shall have the pncGatewayType "active".			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.pncGatewayType			
Mapping Rule			Mapping Type
If at least one pncGatewayType attribute is defined, then ComMPncGatewayEnabled shall be set to true, if at least one CommunicationConnector of the EcuInstance has the pncGatewayType set to either active or passive. If all pncGatewayType attributes are set to none or are not defined, the value shall be set to false.			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_ComM_ - 00887]

BSW Module		BSW Context	
ComM		ComM/ComMGeneral	
BSW Parameter		BSW Type	
ComMPncPrepareSleepTimer		ECUC-FLOAT-PARAM-DEF	
BSW Description			
Time in seconds the PNC state machine shall wait in COMM_PNC_PREPARE_SLEEP.			
Template Description			
Time in seconds the PNC state machine shall wait in PNC_PREPARE_SLEEP.			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.pncPrepareSleepTimer			







Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_ComM_-00841]

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter		BSW Type
ComMPncSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables or disables support of partial networking. False: Partial Networking is disabled True: Partial Networking is enabled		
Template Description		
Describes a mapping between one or several Virtual Function Clusters onto Partial Network Clusters. A Virtual Function Cluster is realized by a PortGroup. A Partial Network Cluster is realized by one or more IPduGroups.		
M2 Parameter		
SystemTemplate::PncMapping::PncMapping		
Mapping Rule		Mapping Type
If at least one Pnc is configured this parameter shall be set to true. Otherwise false.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00839]

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter		BSW Type
ComMResetAfterForcingNoComm		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
ComM shall perform a reset after entering "No Communication" mode because of an active mode limitation to "No Communication" mode. true: Enabled false: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_ComM_-00558]

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter		BSW Type
ComMSynchronizedPncShutdownEnabled		ECUC-BOOLEAN-PARAM-DEF





BSW Description	
<p>Enables or disables support of synchronized PNC shutdown.</p> <p>FALSE: synchronized PNC shutdown is disabled</p> <p>TRUE: synchronized PNC shutdown is enabled</p> <p>NOTE: This is only possible for ECU that has the role of an top-level PNC coordinator or intermediate PNC within the PNC network</p>	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_ComM_-00897]

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter		BSW Type
ComMSynchronousWakeUp		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>Wake up of one channel shall lead to a wake up of all channels if true.</p> <p>true: Enabled false: Disabled</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_ComM_-00695]	

BSW Module	BSW Context	
ComM	ComM/ComMGeneral	
BSW Parameter		BSW Type
ComMTMinFullComModeDuration		ECUC-FLOAT-PARAM-DEF
BSW Description		
<p>Minimum time duration in seconds, spent in the COMM_FULL_COMMUNICATION sub-state COMM_FULL_COM_NETWORK_REQUESTED.</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_ComM_-00557]	

BSW Module		BSW Context	
ComM		ComM/ComMGeneral	
BSW Parameter		BSW Type	
ComMVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Switches the possibility to read the version information with the service ComM_GetVersionInfo(). true: Enabled false: Disabled			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_ComM_-00622]	

BSW Module		BSW Context	
ComM		ComM/ComMGeneral	
BSW Parameter		BSW Type	
ComMWakeupInhibitionEnabled		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
true if wake up inhibition functionality enabled. true: Enabled false: Disabled			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_ComM_-00559]	

### C.1.9 Xcp

BSW Module		BSW Context	
Xcp		Xcp	
BSW Parameter		BSW Type	
XcpConfig		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the configuration parameters and sub containers of the AUTOSAR Xcp module.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	





Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00020]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig	
BSW Parameter	BSW Type	
XcpCommunicationChannel	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container represents the configuration of the communication channel of XCP.		
Template Description		
This meta-class allows to describe the relationship between several PduTriggerings that are defined on the same Physical Channel, e.g. to create a link between Rx and Tx Pdu that are used for request/response.		
M2 Parameter		
SystemTemplate::GeneralPurposeConnection::GeneralPurposeConnection		
Mapping Rule		Mapping Type
For each GeneralPurposeConnection of category XcpChannel one XcpCommunicationChannel shall be created.		
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00183]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpCommunicationChannel	
BSW Parameter	BSW Type	
XcpChannelRxPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Optional reference to the XCP Rx PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00185]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpCommunicationChannel	
BSW Parameter	BSW Type	
XcpChannelTxPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the XCP Tx PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00184]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpCommunicationChannel	
BSW Parameter		BSW Type
XcpComMChannelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the ComM channel the PDUs belong to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00186]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig	
BSW Parameter		BSW Type
XcpDaqList		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration of the DAQs.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00050]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpDaqList	
BSW Parameter		BSW Type
XcpDaqListNumber		ECUC-INTEGER-PARAM-DEF
BSW Description		
Index number of the DAQ list		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00051]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpDaqList	
BSW Parameter		BSW Type
XcpDaqListType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This indicates whether this DAQ list represents a DAQ or a STIM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00052]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpDaqList	
BSW Parameter		BSW Type
XcpDto		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container collects data transfer object specific parameters for the DAQ list.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00065]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpDaqList/XcpDto	
BSW Parameter		BSW Type
XcpDto2PduMapping		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
This reference specifies the mapping of the DTO to the PDUs from the lower-layer interfaces (CanIf, FrIf, SoAd and Cdd). A reference to a XcpRxPdu is only feasible if the the DaqListType is DAQ_STIM. A reference to a XcpTxPdu is only feasible if the DaqListType is DAQ.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00067]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpDaqList/XcpDto	
BSW Parameter		BSW Type
XcpDtoPid		ECUC-INTEGER-PARAM-DEF
BSW Description		
Packet identifier (PID) of the DTO that identifies the ODT the content of the DTO.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00066]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpDaqList	
BSW Parameter		BSW Type
XcpMaxOdt		ECUC-INTEGER-PARAM-DEF
BSW Description		
MAX_ODT indicates the maximum amount of ODTs in this DAQ list (STATIC configuration)		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00053]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpDaqList	
BSW Parameter		BSW Type
XcpMaxOdtEntries		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter indicates the maximum amount of entries in an ODT of this DAQ list (STATIC configuration).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00058]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpDaqList	
BSW Parameter		BSW Type





XcpOdt	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container contains ODT-specific parameter for the DAQ list.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00055]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpConfig/XcpDaqList/XcpOdt
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpOdt2DtoMapping	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
This reference maps the ODT to the according DTO in which it will be transmitted.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00056]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpConfig/XcpDaqList/XcpOdt
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpOdtEntry	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container collects all configuration parameters that comprise an ODT entry.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00061]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpConfig/XcpDaqList/XcpOdt/XcpOdtEntry
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpOdtEntryAddress	ECUC-LINKER-SYMBOL-DEF
<b>BSW Description</b>	
Memory address that the ODT entry is referencing to.	







Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00063]

BSW Module	BSW Context
Xcp	Xcp/XcpConfig/XcpDaqList/XcpOdt/XcpOdtEntry
BSW Parameter	BSW Type
XcpOdtEntryBitOffset	ECUC-INTEGER-PARAM-DEF
BSW Description	
Represent the bit offset in case of the element represents status bit.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00179]

BSW Module	BSW Context
Xcp	Xcp/XcpConfig/XcpDaqList/XcpOdt/XcpOdtEntry
BSW Parameter	BSW Type
XcpOdtEntryLength	ECUC-INTEGER-PARAM-DEF
BSW Description	
Length of the referenced memory area that is referenced by the ODT entry.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00064]

BSW Module	BSW Context
Xcp	Xcp/XcpConfig/XcpDaqList/XcpOdt/XcpOdtEntry
BSW Parameter	BSW Type
XcpOdtEntryNumber	ECUC-INTEGER-PARAM-DEF
BSW Description	
Index number of the ODT entry	
Template Description	
M2 Parameter	





<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00062]

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig/XcpDaqList/XcpOdt	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpOdtEntryMaxSize		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter indicates the upper limit for the size of the element described by an ODT entry. Depending on the DaqList Type this ODT belongs to it describes the limit for a DAQ (MAX_ODT_ENTRY_SIZE_DAQ) or a STIM (MAX_ODT_ENTRY_SIZE_STIM).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00060]	

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig/XcpDaqList/XcpOdt	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpOdtNumber		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Index number of this ODT within the DAQ list.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00057]	

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpEventChannel		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the configuration of event channels on the XCP slave.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	





Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00150]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpEventChannel	
BSW Parameter		BSW Type
XcpEventChannelConsistency		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Type of consistency used by event channel		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00171]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpEventChannel	
BSW Parameter		BSW Type
XcpEventChannelMaxDaqList		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum amount of DAQ lists that are handled by this event channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00153]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpEventChannel	
BSW Parameter		BSW Type
XcpEventChannelNumber		ECUC-INTEGER-PARAM-DEF
BSW Description		
Index number of the event channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00152]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpEventChannel	
BSW Parameter	BSW Type	
XcpEventChannelPriority	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Priority of the event channel		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00154]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpEventChannel	
BSW Parameter	BSW Type	
XcpEventChannelTimeCycle	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The event channel time cycle indicates which sampling period is used to process this event channel. A value of 0 means 'Not cyclic'.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00173]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpEventChannel	
BSW Parameter	BSW Type	
XcpEventChannelTimeUnit	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This configuration parameter indicates the unit of the event channel time cycle.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00174]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpEventChannel	
BSW Parameter		BSW Type
XcpEventChannelTriggeredDaqListRef		ECUC-REFERENCE-DEF
BSW Description		
References all DAQ lists that are triggered by this event channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00151]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpEventChannel	
BSW Parameter		BSW Type
XcpEventChannelType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This configuration parameter indicates what kind of DAQ list can be allocated to this event channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00172]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig	
BSW Parameter		BSW Type
XcpPageSwitching		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container represents configuration of the page switching feature.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00187]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpPageSwitching	
BSW Parameter		BSW Type





XcpSegment	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container represents configuration of the page switching segment element.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00188]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpConfig/XcpPageSwitching/XcpSegment
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpPage	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container represents configuration of the optional page element.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00192]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpConfig/XcpPageSwitching/XcpSegment/XcpPage
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpPageAddress	ECUC-LINKER-SYMBOL-DEF
<b>BSW Description</b>	
Memory address of the optional page (Page ID = 2 ... 255).	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00193]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpConfig/XcpPageSwitching/XcpSegment
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpReferencePageAddress	ECUC-LINKER-SYMBOL-DEF
<b>BSW Description</b>	
Memory address of the reference page (Page ID = 0).	





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00189]

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig/XcpPageSwitching/XcpSegment	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpSegmentLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Length of the segment in bytes.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00191]	

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig/XcpPageSwitching/XcpSegment	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpWorkingPageAddress		ECUC-LINKER-SYMBOL-DEF
<b>BSW Description</b>		
Memory address address of the working page (Page ID = 1).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00190]	

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpPdu		ECUC-CHOICE-CONTAINER-DEF
<b>BSW Description</b>		
Contains PDU information. A PDU may be either a transmission PDU or a reception PDU.		
<b>Template Description</b>		
This element is used for AUTOSAR Pdus without attributes that are routed by the PduR. Please note that the category name of such Pdu is standardized in the AUTOSAR System Template.		





M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::GeneralPurposeIPdu	
Mapping Rule	Mapping Type
Create this container if a GeneralPurposeIPdu with the category "Xcp" is defined in the Ecu Extract.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00100]

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpPdu	
BSW Parameter	BSW Type	
XcpRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container specifies received PDUs.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPduPort		
Mapping Rule	Mapping Type	
The direction of the Pdu can be derived from the PduTriggering that refers to the GeneralPurpose Pdu that represents the XcpPdu.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Xcp_00105]	

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpPdu/XcpRxPdu	
BSW Parameter	BSW Type	
XcpRxPduId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
ID of the PDU that will be received via a Xcp_<module>RxIndication.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Xcp_00106]	

BSW Module	BSW Context	
Xcp	Xcp/XcpConfig/XcpPdu/XcpRxPdu	
BSW Parameter	BSW Type	
XcpRxPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Template Description		







<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00107]

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig/XcpPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies transmission PDUs.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPduPort		
<b>Mapping Rule</b>		<b>Mapping Type</b>
The direction of the Pdu can be derived from the PduTriggering that refers to the GeneralPurpose Pdu that represents the XcpPdu.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Xcp_00101]

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig/XcpPdu/XcpTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpTxPduId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The PDU identifier, which has to be used by the lower layer BSW module for TxConfirmations or TriggerTransmits.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Xcp_00103]

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpConfig/XcpPdu/XcpTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpTxPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the external PDU definition.		
<b>Template Description</b>		





<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00104]

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the general configuration parameters of the XCP.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00001]	

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpCounterRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
This parameter contains a reference to the counter, which is used by XCP.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00162]	

<b>BSW Module</b>	<b>BSW Context</b>	
Xcp	Xcp/XcpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
XcpDaqConfigType		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Sets the DAQ_CONFIG_TYPE bit within the DAQ_PROPERTIES parameter to "static" or "dynamic". If DAQ_STATIC is selected, the DAQ_CONFIG_TYPE bit is set to "0". If DAQ_DYNAMIC is selected, the DAQ_CONFIG_TYPE bit is set to "1".		
<b>Template Description</b>		
<b>M2 Parameter</b>		





Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00164]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter	BSW Type	
XcpDaqCount	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Indicates the number of DAQ lists for dynamic configuration.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Xcp_00012]	

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter	BSW Type	
XcpDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches the development error detection and notification on or off.		
<ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Xcp_00003]	

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter	BSW Type	
XcpFlashProgrammingEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enabling of XCP Flash programming functionality		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00181]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpIdentificationFieldType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Type of Identification Field the slave will use when transferring DAQ Packets to the master. The master has to use the same Type of Identification Field when transferring STIM Packets to the slave.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Xcp_00170]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
The XCP does not require this information but the BSW scheduler, which invokes the main function, needs it in order to plan its tasks.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Xcp_00014]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpMaxCto		ECUC-INTEGER-PARAM-DEF
BSW Description		
MAX_CTO shows the maximum length of a CTO packet in bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





Mapping Status	ECUC Parameter ID
valid	[ECUC_Xcp_00004]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpMaxDto		ECUC-INTEGER-PARAM-DEF
BSW Description		
MAX_DTO shows the maximum length of a DTO packet in bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00005]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpMaxEventChannel		ECUC-INTEGER-PARAM-DEF
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00011]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpMinDaq		ECUC-INTEGER-PARAM-DEF
BSW Description		
Indicates the number of predefined, read only DAQ lists on the XCP slave.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00013]

BSW Module		BSW Context	
Xcp		Xcp/XcpGeneral	
BSW Parameter		BSW Type	
XcpNvRamBlockIdRef		ECUC-REFERENCE-DEF	
BSW Description			
This reference contains the link to a non-volatile memory block to be used in the feature "RESUME MODE" so this information has to be stored non volatile to be available directly after start-up of the ECU.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_Xcp_00180]

BSW Module		BSW Context	
Xcp		Xcp/XcpGeneral	
BSW Parameter		BSW Type	
XcpOdtCount		ECUC-INTEGER-PARAM-DEF	
BSW Description			
This parameter indicates the amount of ODTs of a DAQ list using dynamic DAQ list configuration.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_Xcp_00054]

BSW Module		BSW Context	
Xcp		Xcp/XcpGeneral	
BSW Parameter		BSW Type	
XcpOdtEntriesCount		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Indicates the amount of entries into an ODT using dynamic DAQ list configuration.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_Xcp_00059]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpOdtEntrySizeDaq		ECUC-INTEGER-PARAM-DEF
BSW Description		
Indicates the size of an element described by an ODT entry to the DaqListType for a DAQ.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00177]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpOdtEntrySizeStim		ECUC-INTEGER-PARAM-DEF
BSW Description		
Indicates the size of an element described by an ODT entry to the DaqListType for a stim.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00178]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpOnCanEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enabling of XCPonCAN functionality		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Xcp_00006]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type





XcpOnCddEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enabling of XCPonCdd functionality	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00009]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpOnEthernetEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enabling of XCPonEthernet functionality	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00008]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpOnFlexRayEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enabling of XCPonFlexRay functionality	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00007]

<b>BSW Module</b>	<b>BSW Context</b>
Xcp	Xcp/XcpGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
XcpPrescalerSupported	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
This parameter enables and disables the support for Prescaler support. True is Enabled, False is disabled	







Template Description	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00169]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpSuppressTxSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the support of suppressing transmission of PDUs per communication channel on or off. TRUE: Suppressing of Tx PDUs supported FALSE: Suppressing of TxPDUs not supported		
Template Description		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00176]	

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpTimestampTicks		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the timestamp that will increment based <code>TIMESTAMP_TICKS</code> per unit and wrap around if an overflow occurs.		
Template Description		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00167]	

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpTimestampType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter indicates the number of bytes used for the timestamp field. In case <code>No_TIME_STAMP</code> is selected the timestamp field is not available.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xcp_00166]

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpTimestampUnit		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter indicates the resolution of the data acquisition clock of the slave when transferring data to master.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00168]	

BSW Module	BSW Context	
Xcp	Xcp/XcpGeneral	
BSW Parameter		BSW Type
XcpVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/disables the existence of the XCP_GetVersionInfo() API service. TRUE: XCP_GetVersionInfo() API service exists FALSE: XCP_GetVersionInfo() API service does not exist		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xcp_00002]	

### C.1.10 Bus Mirroring

BSW Module	BSW Context	
Mirror	Mirror	
BSW Parameter		BSW Type
MirrorConfigSet		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		





Contains the configuration parameters and sub containers of the Bus Mirroring module.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00008]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorDestNetwork		ECUC-CHOICE-CONTAINER-DEF
<b>BSW Description</b>		
Destination bus to which frames are sent by the Bus Mirroring module.		
<b>Template Description</b>		
This element defines a bus mirroring in which the traffic from one communication bus (sourceChannel) is forwarded to another one (targetChannel).		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannelMapping		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create a container for each BusMirrorChannel that is composed by an instance of a concrete subclass of BusMirrorChannelMapping in role targetChannel which is available in the System Extract.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00051]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorDestNetworkCan		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Destination bus representing a CAN network.		
<b>Template Description</b>		
This element defines the bus mirroring between a CAN or LIN sourceChannel and a CAN targetChannel.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannelMappingCan		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create a container for each BusMirrorChannel that is composed by an instance of a BusMirrorChannelMappingCan in the role targetChannel which is available in the SystemExtract.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00052]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCan	
BSW Parameter		BSW Type
MirrorComMNetworkHandleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the ComMChannel that represents the bus.		
Template Description		
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel.channel1		
Mapping Rule		Mapping Type
This reference shall be derived from the: - CanCluster that aggregates the AbstractCanPhysical Channel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCan container - FlexrayCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetwork Flexray container - EthernetPhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkIpc container - UserDefinedCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCdd container		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00064]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCan	
BSW Parameter		BSW Type
MirrorDestPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
I-PDU used for transmission of the mirrored frames on the destination bus.		
Template Description		
Reference to the PduTriggering that is used for transmission of the mirrored frames on the targetChannel. Please note that on FlexRay several targetPduTriggerings may be used. For all other communication channels only a single targetPdu Triggering is supported.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannelMapping.targetPduTriggering		
Mapping Rule		Mapping Type
Create container for the Pdu that is referenced by the PduTriggering that is referenced by the instance of the BusMirrorChannelMapping in the targetPduTriggering role.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00055]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCan/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduld		ECUC-INTEGER-PARAM-DEF
BSW Description		
I-PDU identifier used for TxConfirmation from PduR.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00057]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCan/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu object representing the I-PDU.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00056]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCan/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduUsesTriggerTransmit		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches transmission via TriggerTransmit.		
<ul style="list-style-type: none"> <li>• true: The I-PDU is transmitted using TriggerTransmit.</li> <li>• false: The I-PDU is transmitted directly with the Transmit call.</li> </ul>		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00063]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCan	
BSW Parameter		BSW Type
MirrorDestQueueSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of frames that can be stored in the output queue for the destination bus.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00054]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCan	
BSW Parameter		BSW Type
MirrorNetworkId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Network ID of the bus.		
Template Description		
This attribute defines the networkId of the communication channel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel.busMirrorNetworkId		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<p>If this parameter is aggregated by MirrorDestNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingCan.</p> <p>If this parameter is aggregated by MirrorDestNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingFlexray.</p> <p>If this parameter is aggregated by MirrorDestNetworkIp container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingIp.</p> <p>If this parameter is aggregated by MirrorDestNetworkCdd container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingUserDefined.</p> <p>If this parameter is aggregated by MirrorSourceNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannel Mapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkLin container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannel Mapping.</p>	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00012]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCan	
BSW Parameter		BSW Type
MirrorStatusCanId		ECUC-INTEGER-PARAM-DEF
BSW Description		





CAN ID of the CAN status frame. If configured, a status frame will be sent on the CAN destination bus that contains the state of all active source buses.	
<b>Template Description</b>	
CAN ID of the CAN status frame. If configured, a status frame will be sent on the CAN destination bus that contains the state of all active source buses.	
<b>M2 Parameter</b>	
SystemTemplate::BusMirror::BusMirrorChannelMappingCan.mirrorStatusCanId	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00061]

<b>BSW Module</b>	<b>BSW Context</b>
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork
<b>BSW Parameter</b>	<b>BSW Type</b>
MirrorDestNetworkCanXL	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Destination bus representing a CAN XL network.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00071]

<b>BSW Module</b>	<b>BSW Context</b>
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCanXL
<b>BSW Parameter</b>	<b>BSW Type</b>
MirrorComMNetworkHandleRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the ComMChannel that represents the bus.	
<b>Template Description</b>	
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.	
<b>M2 Parameter</b>	
SystemTemplate::BusMirror::BusMirrorChannel.channel	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This reference shall be derived from the: - CanCluster that aggregates the AbstractCanPhysical Channel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCan container - FlexrayCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetwork Flexray container - EthernetPhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkIp container - UserDefinedCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCdd container	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00064]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCanXL	
BSW Parameter		BSW Type
MirrorDestPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
I-PDU used for transmission of the mirrored frames on the destination bus.		
Template Description		
Reference to the PduTriggering that is used for transmission of the mirrored frames on the targetChannel. Please note that on FlexRay several targetPduTriggerings may be used. For all other communication channels only a single targetPduTriggering is supported.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannelMapping.targetPduTriggering		
Mapping Rule		Mapping Type
Create container for the Pdu that is referenced by the PduTriggering that is referenced by the instance of the BusMirrorChannelMapping in the targetPduTriggering role.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00055]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCanXL/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
I-PDU identifier used for TxConfirmation from PduR.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00057]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCanXL/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu object representing the I-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00056]



BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCanXL/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduUsesTriggerTransmit		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches transmission via TriggerTransmit.		
<ul style="list-style-type: none"> <li>• true: The I-PDU is transmitted using TriggerTransmit.</li> <li>• false: The I-PDU is transmitted directly with the Transmit call.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00063]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCanXL	
BSW Parameter		BSW Type
MirrorDestQueueSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of frames that can be stored in the output queue for the destination bus.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00054]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCanXL	
BSW Parameter		BSW Type
MirrorDestTransmissionDeadline		ECUC-FLOAT-PARAM-DEF
BSW Description		
Time in seconds after which the collection of source frames into the destination frame stopped and the frame is sent at the latest.		
If omitted, destination frames are only sent when full or when the time stamp overflows after 655.35ms.		
Template Description		





<p><b>BusMirrorChannelMappingFlexray.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest. If omitted, destination frames are only sent when full or when the time stamp overflows.</p> <p><b>BusMirrorChannelMappingIp.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest. If omitted, destination frames are only sent when full or when the time stamp overflows.</p> <p><b>BusMirrorChannelMappingUserDefined.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest. If omitted, destination frames are only sent when full or when the time stamp overflows.</p>	
<b>M2 Parameter</b>	
SystemTemplate::BusMirror::BusMirrorChannelMappingFlexray.transmissionDeadline, SystemTemplate::BusMirror::BusMirrorChannelMappingIp.transmissionDeadline, SystemTemplate::BusMirror::BusMirrorChannelMappingUserDefined.transmissionDeadline	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Please note that this parameter is aggregated in different containers: - if aggregated by MirrorDestNetworkFlexRay take value from BusMirrorChannelMappingFlexray.transmissionDeadline - if aggregated by MirrorDestNetworkIp take value from BusMirrorChannelMappingIp.transmissionDeadline - if aggregated by MirrorDestNetworkCdd take value from BusMirrorChannelMappingUserDefined.transmissionDeadline	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00059]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCanXL	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorNetworkId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Network ID of the bus.		
<b>Template Description</b>		
This attribute defines the networkId of the communication channel.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannel.busMirrorNetworkId		
<b>Mapping Rule</b>		<b>Mapping Type</b>





<p>If this parameter is aggregated by MirrorDestNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingCan.</p> <p>If this parameter is aggregated by MirrorDestNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingFlexray.</p> <p>If this parameter is aggregated by MirrorDestNetworkIp container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingIp.</p> <p>If this parameter is aggregated by MirrorDestNetworkCdd container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingUserDefined.</p> <p>If this parameter is aggregated by MirrorSourceNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkLin container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00012]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorDestNetworkCdd	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
Destination bus representing a user defined network.		
<b>Template Description</b>		
This element defines the bus mirroring between a CAN, LIN or FlexRay sourceChannel and a UserDefined targetChannel.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannelMappingUserDefined		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create a container for each BusMirrorChannel that is composed by an instance of a BusMirrorChannelMappingUserDefined in the role targetChannel which is available in the SystemExtract.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00062]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCdd	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorComMNetworkHandleRef	ECUC-REFERENCE-DEF	
<b>BSW Description</b>		
Reference to the ComMChannel that represents the bus.		
<b>Template Description</b>		
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.		





<b>M2 Parameter</b>	
SystemTemplate::BusMirror::BusMirrorChannel. <a href="#">channel</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This reference shall be derived from the: - CanCluster that aggregates the AbstractCanPhysical Channel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCan container - FlexrayCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetwork Flexray container - EthernetPhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkIp container - UserDefinedCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCdd container	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00064]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCdd	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorDestPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
I-PDU used for transmission of the mirrored frames on the destination bus.		
<b>Template Description</b>		
Reference to the PduTriggering that is used for transmission of the mirrored frames on the targetChannel. Please note that on FlexRay several targetPduTriggerings may be used. For all other communication channels only a single targetPdu Triggering is supported.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannelMapping. <a href="#">targetPduTriggering</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create container for the Pdu that is referenced by the PduTriggering that is referenced by the instance of the BusMirrorChannelMapping in the targetPduTriggering role.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00055]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCdd/MirrorDestPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorDestPduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
I-PDU identifier used for TxConfirmation from PduR.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00057]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCdd/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu object representing the I-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00056]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCdd/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduUsesTriggerTransmit		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches transmission via TriggerTransmit. <ul style="list-style-type: none"> <li>• true: The I-PDU is transmitted using TriggerTransmit.</li> <li>• false: The I-PDU is transmitted directly with the Transmit call.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00063]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCdd	
BSW Parameter		BSW Type
MirrorDestQueueSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of frames that can be stored in the output queue for the destination bus.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00054]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCdd	
BSW Parameter	BSW Type	
MirrorDestTransmissionDeadline	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>Time in seconds after which the collection of source frames into the destination frame stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows after 655.35ms.</p>		
Template Description		
<p><b>BusMirrorChannelMappingFlexray.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p> <p><b>BusMirrorChannelMappingIp.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p> <p><b>BusMirrorChannelMappingUserDefined.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p>		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannelMappingFlexray.transmissionDeadline, SystemTemplate::BusMirror::BusMirrorChannelMappingIp.transmissionDeadline, SystemTemplate::BusMirror::BusMirrorChannelMappingUserDefined.transmissionDeadline		
Mapping Rule		Mapping Type
<p>Please note that this parameter is aggregated in different containers:</p> <ul style="list-style-type: none"> <li>- if aggregated by MirrorDestNetworkFlexRay take value from BusMirrorChannelMappingFlexray.transmissionDeadline</li> <li>- if aggregated by MirrorDestNetworkIp take value from BusMirrorChannelMappingIp.transmissionDeadline</li> <li>- if aggregated by MirrorDestNetworkCdd take value from BusMirrorChannelMappingUserDefined.transmissionDeadline</li> </ul>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00059]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkCdd	
BSW Parameter	BSW Type	
MirrorNetworkId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Network ID of the bus.		
Template Description		
This attribute defines the networkId of the communication channel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel.busMirrorNetworkId		
Mapping Rule		Mapping Type





<p>If this parameter is aggregated by MirrorDestNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingCan.</p> <p>If this parameter is aggregated by MirrorDestNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingFlexray.</p> <p>If this parameter is aggregated by MirrorDestNetworklp container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappinglp.</p> <p>If this parameter is aggregated by MirrorDestNetworkCdd container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingUserDefined.</p> <p>If this parameter is aggregated by MirrorSourceNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkLin container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00012]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorDestNetworkFlexRay	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
Destination bus representing a FlexRay network.		
<b>Template Description</b>		
This element defines the bus mirroring between a CAN, LIN or FlexRay sourceChannel and a FlexRay targetChannel.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannelMappingFlexray		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create a container for each BusMirrorChannel that is composed by an instance of a BusMirrorChannelMappingFlexray in the role targetChannel which is available in the SystemExtract.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00058]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkFlexRay	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorComMNetworkHandleRef	ECUC-REFERENCE-DEF	
<b>BSW Description</b>		
Reference to the ComMChannel that represents the bus.		
<b>Template Description</b>		
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.		





<b>M2 Parameter</b>	
SystemTemplate::BusMirror::BusMirrorChannel. <a href="#">channel</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This reference shall be derived from the: - CanCluster that aggregates the AbstractCanPhysical Channel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCan container - FlexrayCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetwork Flexray container - EthernetPhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkIp container - UserDefinedCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCdd container	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00064]

<b>BSW Module</b>	<b>BSW Context</b>
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkFlexRay
<b>BSW Parameter</b>	<b>BSW Type</b>
MirrorDestPduFlexRay	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
I-PDU used for transmission of the mirrored frames on the destination bus. For FlexRay, an arbitrary number of I-PDUs can be configured.	
<b>Template Description</b>	
Reference to the PduTriggering that is used for transmission of the mirrored frames on the targetChannel. Please note that on FlexRay several targetPduTriggerings may be used. For all other communication channels only a single targetPdu Triggering is supported.	
<b>M2 Parameter</b>	
SystemTemplate::BusMirror::BusMirrorChannelMapping. <a href="#">targetPduTriggering</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for the Pdu that is referenced by the PduTriggering that is referenced by the instance of the BusMirrorChannelMapping in the targetPduTriggering role.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00066]

<b>BSW Module</b>	<b>BSW Context</b>
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkFlexRay/MirrorDestPduFlexRay
<b>BSW Parameter</b>	<b>BSW Type</b>
MirrorDestPduld	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
I-PDU identifier used for TxConfirmation from PduR.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00057]



BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkFlexRay/MirrorDestPduFlexRay	
BSW Parameter		BSW Type
MirrorDestPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu object representing the I-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00056]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkFlexRay/MirrorDestPduFlexRay	
BSW Parameter		BSW Type
MirrorDestPduUsesTriggerTransmit		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches transmission via TriggerTransmit. <ul style="list-style-type: none"> <li>• true: The I-PDU is transmitted using TriggerTransmit.</li> <li>• false: The I-PDU is transmitted directly with the Transmit call.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00063]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkFlexRay	
BSW Parameter		BSW Type
MirrorDestQueueSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of frames that can be stored in the output queue for the destination bus.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00054]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkFlexRay	
BSW Parameter	BSW Type	
MirrorDestTransmissionDeadline	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>Time in seconds after which the collection of source frames into the destination frame stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows after 655.35ms.</p>		
Template Description		
<p><b>BusMirrorChannelMappingFlexray.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p> <p><b>BusMirrorChannelMappingIp.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p> <p><b>BusMirrorChannelMappingUserDefined.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p>		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannelMappingFlexray.transmissionDeadline, SystemTemplate::BusMirror::BusMirrorChannelMappingIp.transmissionDeadline, SystemTemplate::BusMirror::BusMirrorChannelMappingUserDefined.transmissionDeadline		
Mapping Rule		Mapping Type
<p>Please note that this parameter is aggregated in different containers:</p> <ul style="list-style-type: none"> <li>- if aggregated by MirrorDestNetworkFlexRay take value from BusMirrorChannelMappingFlexray.transmissionDeadline</li> <li>- if aggregated by MirrorDestNetworkIp take value from BusMirrorChannelMappingIp.transmissionDeadline</li> <li>- if aggregated by MirrorDestNetworkCdd take value from BusMirrorChannelMappingUserDefined.transmissionDeadline</li> </ul>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00059]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkFlexRay	
BSW Parameter	BSW Type	
MirrorNetworkId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Network ID of the bus.		
Template Description		
This attribute defines the networkId of the communication channel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel.busMirrorNetworkId		
Mapping Rule		Mapping Type





<p>If this parameter is aggregated by MirrorDestNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingCan.</p> <p>If this parameter is aggregated by MirrorDestNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingFlexray.</p> <p>If this parameter is aggregated by MirrorDestNetworkIp container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingIp.</p> <p>If this parameter is aggregated by MirrorDestNetworkCdd container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingUserDefined.</p> <p>If this parameter is aggregated by MirrorSourceNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkLin container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00012]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorDestNetworkIp	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
Destination bus representing an IP network.		
<b>Template Description</b>		
This element defines the bus mirroring between a CAN, LIN or FlexRay sourceChannel and an Ethernet IP targetChannel.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannelMappingIp		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create a container for each BusMirrorChannel that is composed by an instance of a BusMirrorChannelMappingIp in the role targetChannel which is available in the SystemExtract.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00060]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkIp	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorComMNetworkHandleRef	ECUC-REFERENCE-DEF	
<b>BSW Description</b>		
Reference to the ComMChannel that represents the bus.		
<b>Template Description</b>		
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.		





<b>M2 Parameter</b>	
SystemTemplate::BusMirror::BusMirrorChannel. <a href="#">channel</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This reference shall be derived from the: - CanCluster that aggregates the AbstractCanPhysical Channel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCan container - FlexrayCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetwork Flexray container - EthernetPhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkIp container - UserDefinedCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCdd container	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00064]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkIp	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorDestPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
I-PDU used for transmission of the mirrored frames on the destination bus.		
<b>Template Description</b>		
Reference to the PduTriggering that is used for transmission of the mirrored frames on the targetChannel. Please note that on FlexRay several targetPduTriggerings may be used. For all other communication channels only a single targetPdu Triggering is supported.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannelMapping. <a href="#">targetPduTriggering</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create container for the Pdu that is referenced by the PduTriggering that is referenced by the instance of the BusMirrorChannelMapping in the targetPduTriggering role.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00055]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkIp/MirrorDestPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorDestPduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
I-PDU identifier used for TxConfirmation from PduR.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00057]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkIp/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu object representing the I-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00056]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkIp/MirrorDestPdu	
BSW Parameter		BSW Type
MirrorDestPduUsesTriggerTransmit		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches transmission via TriggerTransmit.		
<ul style="list-style-type: none"> <li>• true: The I-PDU is transmitted using TriggerTransmit.</li> <li>• false: The I-PDU is transmitted directly with the Transmit call.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00063]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkIp	
BSW Parameter		BSW Type
MirrorDestQueueSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of frames that can be stored in the output queue for the destination bus.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00054]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkIp	
BSW Parameter	BSW Type	
MirrorDestTransmissionDeadline	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>Time in seconds after which the collection of source frames into the destination frame stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows after 655.35ms.</p>		
Template Description		
<p><b>BusMirrorChannelMappingFlexray.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p> <p><b>BusMirrorChannelMappingIp.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p> <p><b>BusMirrorChannelMappingUserDefined.transmissionDeadline:</b> Time in seconds after which the collection of source frames into the destination frame is stopped and the frame is sent at the latest.</p> <p>If omitted, destination frames are only sent when full or when the time stamp overflows.</p>		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannelMappingFlexray.transmissionDeadline, SystemTemplate::BusMirror::BusMirrorChannelMappingIp.transmissionDeadline, SystemTemplate::BusMirror::BusMirrorChannelMappingUserDefined.transmissionDeadline		
Mapping Rule		Mapping Type
<p>Please note that this parameter is aggregated in different containers:</p> <ul style="list-style-type: none"> <li>- if aggregated by MirrorDestNetworkFlexRay take value from BusMirrorChannelMappingFlexray.transmissionDeadline</li> <li>- if aggregated by MirrorDestNetworkIp take value from BusMirrorChannelMappingIp.transmissionDeadline</li> <li>- if aggregated by MirrorDestNetworkCdd take value from BusMirrorChannelMappingUserDefined.transmissionDeadline</li> </ul>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00059]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorDestNetwork/MirrorDestNetworkIp	
BSW Parameter	BSW Type	
MirrorNetworkId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Network ID of the bus.		
Template Description		
This attribute defines the networkId of the communication channel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel.busMirrorNetworkId		
Mapping Rule		Mapping Type





<p>If this parameter is aggregated by MirrorDestNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingCan.</p> <p>If this parameter is aggregated by MirrorDestNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingFlexray.</p> <p>If this parameter is aggregated by MirrorDestNetworkIp container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingIp.</p> <p>If this parameter is aggregated by MirrorDestNetworkCdd container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingUserDefined.</p> <p>If this parameter is aggregated by MirrorSourceNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkLin container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00012]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet	
BSW Parameter	BSW Type	
MirrorInitialDestNetworkRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the destination bus that is selected after initialization of the Bus Mirroring module.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Mirror_00007]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet	
BSW Parameter	BSW Type	
MirrorSourceNetwork	ECUC-CHOICE-CONTAINER-DEF	
BSW Description		
Source bus from which frames are received by the Bus Mirroring module.		
Template Description		
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel. <a href="#">channel1</a>		





Mapping Rule	Mapping Type
Create a container for each BusMirrorChannel that is composed by an instance of a concrete subclass of BusMirrorChannelMapping in role sourceChannel which is available in the System Extract.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Mirror_00009]

BSW Module	BSW Context
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork
BSW Parameter	BSW Type
MirrorSourceNetworkCan	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	Source bus representing a CAN network.
Template Description	Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.
M2 Parameter	SystemTemplate::BusMirror::BusMirrorChannel.channel1
Mapping Rule	Mapping Type
Create a container for each CanPhysicalChannel which is available in the SystemExtract and is referenced by BusMirrorChannel that is composed by an instance of a BusMirrorChannelMapping in the role sourceChannel.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Mirror_00010]

BSW Module	BSW Context
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan
BSW Parameter	BSW Type
MirrorComMNetworkHandleRef	ECUC-REFERENCE-DEF
BSW Description	Reference to the ComMChannel that represents the bus.
Template Description	Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.
M2 Parameter	SystemTemplate::BusMirror::BusMirrorChannel.channel1
Mapping Rule	Mapping Type
This reference shall be derived from the: - CanCluster that aggregates the AbstractCanPhysical Channel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCan container - FlexrayCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetwork Flexray container - EthernetPhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkIpc container - UserDefinedCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCdd container	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Mirror_00064]



BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan	
BSW Parameter	BSW Type	
MirrorNetworkId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Network ID of the bus.		
Template Description		
This attribute defines the networkId of the communication channel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel.busMirrorNetworkId		
Mapping Rule		Mapping Type
<p>If this parameter is aggregated by MirrorDestNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingCan.</p> <p>If this parameter is aggregated by MirrorDestNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingFlexray.</p> <p>If this parameter is aggregated by MirrorDestNetworkIp container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingIp.</p> <p>If this parameter is aggregated by MirrorDestNetworkCdd container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMappingUserDefined.</p> <p>If this parameter is aggregated by MirrorSourceNetworkCan container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkLin container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00012]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan	
BSW Parameter	BSW Type	
MirrorSourceCanFilter	ECUC-CHOICE-CONTAINER-DEF	
BSW Description		
Pre-configured filter for CAN frames.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00014]

BSW Module		BSW Context	
Mirror		Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanFilter	
BSW Parameter		BSW Type	
MirrorSourceCanFilterMask		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Pre-configured mask based filter for CAN frames.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_Mirror_00019]	

BSW Module		BSW Context	
Mirror		Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanFilter/ MirrorSourceCanFilterMask	
BSW Parameter		BSW Type	
MirrorSourceCanFilterCanIdCode		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Value to match masked CAN IDs.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_Mirror_00020]	

BSW Module		BSW Context	
Mirror		Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanFilter/ MirrorSourceCanFilterMask	
BSW Parameter		BSW Type	
MirrorSourceCanFilterCanIdMask		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Mask applied to CAN IDs before comparison.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_Mirror_00021]	

BSW Module		BSW Context	
Mirror		Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanFilter/ MirrorSourceCanFilterMask	





BSW Parameter		BSW Type
MirrorSourceCanFilterId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Unique identifier of the pre-configured CAN filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00018]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanFilter	
BSW Parameter		BSW Type
MirrorSourceCanFilterRange		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Pre-configured range filter for CAN frames.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00015]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanFilter/ MirrorSourceCanFilterRange	
BSW Parameter		BSW Type
MirrorSourceCanFilterId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Unique identifier of the pre-configured CAN filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00018]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanFilter/ MirrorSourceCanFilterRange	
BSW Parameter		BSW Type





MirrorSourceCanFilterLower	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Lowest CAN ID that is accepted by the filter.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00016]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanFilter/ MirrorSourceCanFilterRange	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorSourceCanFilterUpper	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
Highest CAN ID that is accepted by the filter.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00017]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorSourceCanMaskBasedIdMapping	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
Rule for remapping a set of CAN IDs.		
<b>Template Description</b>		
This element defines a rule for remapping a set of CAN IDs.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorCanIdRangeMapping		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create Container in case that BusMirrorCanIdRangeMapping is aggregated by BusMirrorChannel MappingCan in the role canIdRangeMapping.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
obsolete	[ECUC_Mirror_00025]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanMask BasedIdMapping	





BSW Parameter		BSW Type
MirrorSourceCanMaskBasedIdMappingDestBaseId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Base ID merged with the masked parts of the original CAN ID to form the mapped CAN ID.		
Template Description		
Base ID merged with the masked parts of the original CAN ID to form the mapped CAN ID.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorCanIdRangeMapping.destinationBaseId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00028]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanMaskBasedIdMapping	
BSW Parameter		BSW Type
MirrorSourceCanMaskBasedIdMappingSourceCanIdCode		ECUC-INTEGER-PARAM-DEF
BSW Description		
Value to match masked original CAN IDs.		
Template Description		
Value to match masked original CAN IDs.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorCanIdRangeMapping.sourceCanIdCode		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00026]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanMaskBasedIdMapping	
BSW Parameter		BSW Type
MirrorSourceCanMaskBasedIdMappingSourceCanIdMask		ECUC-INTEGER-PARAM-DEF
BSW Description		
Mask applied to original CAN IDs before comparison.		
Template Description		
Mask applied to original CAN IDs before comparison.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorCanIdRangeMapping.sourceCanIdMask		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00027]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan	
BSW Parameter		BSW Type
MirrorSourceCanSingleIdMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Rule for remapping a single CAN ID.		
Template Description		
This element defines a rule for remapping a single CAN ID.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorCanIdToCanIdMapping		
Mapping Rule		Mapping Type
Create container in case that the BusMirrorCanIdToCanIdMapping is aggregated by BusMirrorChannelMappingCan in the role canIdToCanIdMapping.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00022]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanSingleIdMapping	
BSW Parameter		BSW Type
MirrorSourceCanSingleIdMappingDestCanId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Mapped CAN ID.		
Template Description		
This attribute defines the CanId on the targetChannel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorCanIdToCanIdMapping. <a href="#">remappedCanId</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00024]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan/MirrorSourceCanSingleIdMapping	
BSW Parameter		BSW Type
MirrorSourceCanSingleIdMappingSourceCanId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Original CAN ID.		
Template Description		
This reference points to the sourceFrame with sourceCanId on the sourceChannel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorCanIdToCanIdMapping. <a href="#">sourceCanId</a>		
Mapping Rule		Mapping Type
Take the value from the identifier attribute of the referenced CanFrameTriggering.		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Mirror_00023]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkCan	
BSW Parameter	BSW Type	
MirrorSourceMaxDynamicFilters	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of filters that can be dynamically added using Mirror_AddXxxFilter().		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00013]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork	
BSW Parameter	BSW Type	
MirrorSourceNetworkFlexRay	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Source bus representing a FlexRay network.		
Template Description		
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel. <a href="#">channel1</a>		
Mapping Rule		Mapping Type
Create a container for each FlexrayPhysicalChannel which is available in the SystemExtract and is referenced by BusMirrorChannel that is composed by an instance of a BusMirrorChannelMapping in the role sourceChannel.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00042]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay	
BSW Parameter	BSW Type	
MirrorComMNetworkHandleRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the ComMChannel that represents the bus.		
Template Description		
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannel. <a href="#">channel1</a>		





Mapping Rule	Mapping Type
This reference shall be derived from the: - CanCluster that aggregates the AbstractCanPhysical Channel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCan container - FlexrayCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetwork Flexray container - EthernetPhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkIp container - UserDefinedCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCdd container	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Mirror_00064]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay	
BSW Parameter	BSW Type	
MirrorNetworkId	ECUC-INTEGER-PARAM-DEF	
BSW Description	Network ID of the bus.	
Template Description	This attribute defines the networkId of the communication channel.	
M2 Parameter	SystemTemplate::BusMirror::BusMirrorChannel.busMirrorNetworkId	
Mapping Rule	Mapping Type	
<p>If this parameter is aggregated by MirrorDestNetworkCan container take the value from the Bus MirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingCan.</p> <p>If this parameter is aggregated by MirrorDestNetworkFlexray container take the value from the Bus MirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingFlexray.</p> <p>If this parameter is aggregated by MirrorDestNetworkIp container take the value from the BusMirror Channel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMapping Ip.</p> <p>If this parameter is aggregated by MirrorDestNetworkCdd container take the value from the Bus MirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingUserDefined.</p> <p>If this parameter is aggregated by MirrorSourceNetworkCan container take the value from the Bus MirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannel Mapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirror ChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkLin container take the value from the Bus MirrorChannel that is aggregated in the role sourcetChannel by the instance of BusMirrorChannel Mapping.</p>	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Mirror_00012]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay	
BSW Parameter	BSW Type	







MirrorSourceFlexRayFilter	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Pre-configured filter for FlexRay frames.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00043]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay/MirrorSourceFlexRay Filter	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceFlexRayFilterChannelAssignment		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
FlexRay channels accepted by the filter.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00049]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay/MirrorSourceFlexRay Filter	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceFlexRayFilterCycleRepetition		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Cycle repetition of accepted cycles.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00048]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay/MirrorSourceFlexRay Filter	
<b>BSW Parameter</b>		<b>BSW Type</b>





MirrorSourceFlexRayFilterId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Unique identifier of the pre-configured FlexRay filter.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00050]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay/MirrorSourceFlexRay Filter	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceFlexRayFilterLowerBaseCycle		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Lowest base cycle number that is accepted by the filter.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00046]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay/MirrorSourceFlexRay Filter	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceFlexRayFilterLowerSlot		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Lowest slot ID that is accepted by the filter.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00044]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay/MirrorSourceFlexRay Filter	
<b>BSW Parameter</b>		<b>BSW Type</b>





MirrorSourceFlexRayFilterUpperBaseCycle	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Highest base cycle number that is accepted by the filter.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00047]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay/MirrorSourceFlexRay Filter	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceFlexRayFilterUpperSlot		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Highest slot ID that is accepted by the filter.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00045]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkFlexRay	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceMaxDynamicFilters		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Maximum number of filters that can be dynamically added using Mirror_AddXxxFilter().		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00013]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceNetworkLin		ECUC-PARAM-CONF-CONTAINER-DEF





<b>BSW Description</b>	
Source bus representing a LIN network.	
<b>Template Description</b>	
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.	
<b>M2 Parameter</b>	
SystemTemplate::BusMirror::BusMirrorChannel.channel1	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create a container for each LinPhysicalChannel which is available in the SystemExtract and is referenced by BusMirrorChannel that is composed by an instance of a BusMirrorChannelMapping in the role sourceChannel.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00029]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorComMNetworkHandleRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the ComMChannel that represents the bus.		
<b>Template Description</b>		
Reference to PhysicalChannel that is used in the bus mirroring as sourceChannel or targetChannel.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannel.channel1		
<b>Mapping Rule</b>		<b>Mapping Type</b>
This reference shall be derived from the: - CanCluster that aggregates the AbstractCanPhysical Channel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCan container - FlexrayCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetwork Flexray container - EthernetPhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkIp container - UserDefinedCluster that aggregates the PhysicalChannel that is referenced by the BusMirrorChannel in case that this reference is used in the MirrorDestNetworkCdd container		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00064]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorNetworkId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Network ID of the bus.		
<b>Template Description</b>		
This attribute defines the networkId of the communication channel.		
<b>M2 Parameter</b>		
SystemTemplate::BusMirror::BusMirrorChannel.busMirrorNetworkId		
<b>Mapping Rule</b>		<b>Mapping Type</b>





<p>If this parameter is aggregated by MirrorDestNetworkCan container take the value from the Bus MirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingCan.</p> <p>If this parameter is aggregated by MirrorDestNetworkFlexray container take the value from the Bus MirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingFlexray.</p> <p>If this parameter is aggregated by MirrorDestNetworkIp container take the value from the BusMirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannelMapping Ip.</p> <p>If this parameter is aggregated by MirrorDestNetworkCdd container take the value from the Bus MirrorChannel that is aggregated in the role targetChannel by the instance of BusMirrorChannel MappingUserDefined.</p> <p>If this parameter is aggregated by MirrorSourceNetworkCan container take the value from the Bus MirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannel Mapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkFlexray container take the value from the BusMirrorChannel that is aggregated in the role sourceChannel by the instance of BusMirrorChannelMapping.</p> <p>If this parameter is aggregated by MirrorSourceNetworkLin container take the value from the Bus MirrorChannel that is aggregated in the role sourcetChannel by the instance of BusMirrorChannel Mapping.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00012]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorSourceLinFilter	ECUC-CHOICE-CONTAINER-DEF	
<b>BSW Description</b>		
Pre-configured filter for LIN frames.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00030]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinFilter	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MirrorSourceLinFilterMask	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
Pre-configured mask based filter for LIN frames.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00035]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinFilter/MirrorSourceLinFilterMask	
BSW Parameter		BSW Type
MirrorSourceLinFilterId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Unique identifier of the pre-configured LIN filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00034]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinFilter/MirrorSourceLinFilterMask	
BSW Parameter		BSW Type
MirrorSourceLinFilterLinIdCode		ECUC-INTEGER-PARAM-DEF
BSW Description		
Value to match masked frame IDs.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00036]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinFilter/MirrorSourceLinFilterMask	
BSW Parameter		BSW Type
MirrorSourceLinFilterLinIdMask		ECUC-INTEGER-PARAM-DEF
BSW Description		
Mask applied to frame IDs before comparison.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00037]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinFilter	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceLinFilterRange		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Pre-configured range filter for LIN frames.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00031]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinFilter/MirrorSourceLinFilterRange	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceLinFilterId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Unique identifier of the pre-configured LIN filter.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00034]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinFilter/MirrorSourceLinFilterRange	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceLinFilterLower		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Lowest frame ID that is accepted by the filter.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>





Mapping Status	ECUC Parameter ID
valid	[ECUC_Mirror_00032]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinFilter/MirrorSourceLinFilterRange	
BSW Parameter		BSW Type
MirrorSourceLinFilterUpper		ECUC-INTEGER-PARAM-DEF
BSW Description		
Highest frame ID that is accepted by the filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00033]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin	
BSW Parameter		BSW Type
MirrorSourceLinToCanBaseId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Base ID merged with the LIN frame ID to form the CAN ID.		
Template Description		
Base ID merged with the LIN frame ID to form the CAN ID. Only required when a BusMirrorChannel that refers to a LinPhysicalChannel in the role channel is referenced in the role sourceChannel.		
M2 Parameter		
SystemTemplate::BusMirror::BusMirrorChannelMappingCan.mirrorSourceLinToCanRangeBaseId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Mirror_00041]

BSW Module	BSW Context	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin	
BSW Parameter		BSW Type
MirrorSourceLinToCanIdMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Rule for mapping a LIN frame ID to a special CAN ID.		
Template Description		
This element defines a rule for remapping a single LIN Frame.		
M2 Parameter		







SystemTemplate::BusMirror::BusMirrorLinPidToCanIdMapping	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container in case that the BusMirrorLinPidToCanIdMapping is aggregated by BusMirror ChannelMappingCan in the role linPidToCanIdMapping.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00038]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinToCanId Mapping	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceLinToCanIdMappingCanId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
CAN ID which lies outside of the range mapping.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00040]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin/MirrorSourceLinToCanId Mapping	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceLinToCanIdMappingLinId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Frame ID which is excluded from the range mapping.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Mirror_00039]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorConfigSet/MirrorSourceNetwork/MirrorSourceNetworkLin	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorSourceMaxDynamicFilters		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Maximum number of filters that can be dynamically added using Mirror_AddXxxFilter().		
<b>Template Description</b>		
<b>M2 Parameter</b>		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Mirror_00013]

BSW Module	BSW Context	
Mirror	Mirror	
BSW Parameter	BSW Type	
MirrorGeneral	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	Contains the general configuration parameters of the module.	
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Mirror_00002]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorGeneral	
BSW Parameter	BSW Type	
MirrorDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>	
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Mirror_00003]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorGeneral	
BSW Parameter	BSW Type	
MirrorEcucPartitionRef	ECUC-REFERENCE-DEF	
BSW Description	Reference to EcucPartition, where BusMirroring module is assigned to.	
Template Description		
M2 Parameter		





<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Mirror_00067]

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorMainFunction		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Each element of this container defines one instance of Mirror_MainFunction.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00068]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorGeneral/MirrorMainFunction	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Execution cycle of the respective Mirror_MainFunction instance in seconds.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Mirror_00070]	

<b>BSW Module</b>	<b>BSW Context</b>	
Mirror	Mirror/MirrorGeneral/MirrorMainFunction	
<b>BSW Parameter</b>		<b>BSW Type</b>
MirrorMainPartitionRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to EcucPartition, where the according Mirror_MainFunction instance is assigned to.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	





Mapping Status	ECUC Parameter ID
valid	[ECUC_Mirror_00069]

BSW Module	BSW Context	
Mirror	Mirror/MirrorGeneral	
BSW Parameter	BSW Type	
MirrorStbRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the StbM time base to use for acquiring the time stamps used in the mirroring protocol. This reference is not required if all destination buses are CAN.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Mirror_00065]	

BSW Module	BSW Context	
Mirror	Mirror/MirrorGeneral	
BSW Parameter	BSW Type	
MirrorVersionInfoApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling version info API support.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Mirror_00005]	

## C.2 Can

### C.2.1 Can Driver Mapping

BSW Module	BSW Context	
Can	Can	
BSW Parameter	BSW Type	
CanConfigSet	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		





This container contains the configuration parameters and sub containers of the AUTOSAR Can module.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00343]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanController		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the configuration parameters of the CAN controller(s).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00354]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanBusoffProcessing		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Enables / disables API Can_MainFunction_BusOff() for handling busoff events in polling mode.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00314]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerActivation		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Defines if a CAN controller is used in the configuration.		
<b>Template Description</b>		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00315]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController	
BSW Parameter		BSW Type
CanControllerBaseAddress		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the CAN controller base address.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00382]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController	
BSW Parameter		BSW Type
CanControllerBaudrateConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains bit timing related configuration parameters of the CAN controller(s).		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00387]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig	
BSW Parameter		BSW Type
CanControllerBaudRate		ECUC-FLOAT-PARAM-DEF
BSW Description		
Specifies the baudrate of the controller in kbps.		
Template Description		
Channels speed in bits/s.		
M2 Parameter		





SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationCluster.baudrate	
<b>Mapping Rule</b>	<b>Mapping Type</b>
SystemTemplate speed is in bps, so divide it by 1000 to get kbps	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00005]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerBaudRateConfigID		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This ID is used by SetBaudrate API and uniquely identifies a specific baud rate configuration within a controller configuration.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Can_00471]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerFdBaudrateConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This optional container contains bit timing related configuration parameters of the CAN controller(s) for payload and CRC of a CAN FD frame. If this container exists the controller supports CAN FD frames.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Can_00473]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanControllerFdBaudrateConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerFdBaudRate		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Specifies the data segment baud rate of the controller in kbps.		
<b>Template Description</b>		
Specifies the data segment baud rate of the controller in bits/s.		
<b>M2 Parameter</b>		





SystemTemplate::Fibex::Fibex4Can::CanTopology::AbstractCanCluster.canFdBaudrate	
<b>Mapping Rule</b>	<b>Mapping Type</b>
SystemTemplate speed is in bps, so divide it by 1000 to get kbps	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00481]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanControllerFdBaudrateConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerPropSeg		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies propagation delay in time quantas.		
<b>Template Description</b>		
Specifies propagation delay in time quantas.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerFdConfiguration.propSeg		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Can_00476]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanControllerFdBaudrateConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerSeg1		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies phase segment 1 in time quantas.		
<b>Template Description</b>		
Specifies phase segment 1 in time quantas.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerFdConfiguration.timeSeg1		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Can_00477]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanControllerFdBaudrateConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerSeg2		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies phase segment 2 in time quantas.		
<b>Template Description</b>		







Specifies phase segment 2 in time quantas.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerFdConfiguration.timeSeg2	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00478]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanControllerFdBaudrateConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
CanControllerSspOffset	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
<p>Specifies the Transmitter Delay Compensation Offset in minimum time quanta (see [17]). Transmitter Delay Compensation Offset is used to adjust the position of the Secondary Sample Point (SSP), relative to the beginning of the received bit. If this parameter is configured, the Transmitter Delay Compensation is done by measurement of the CAN controller. If not specified, Transmitter Delay Compensation is disabled.</p> <p>Note: <math>MTQ == \text{Minimum Time Quanta in seconds} == 1/(\text{frequency of the CAN controller clock})</math> Secondary Sample Point Offset in seconds = <math>\text{CanControllerSspOffset} * MTQ</math></p> <p>Example: CAN controller clock frequency = 20MHz =&gt; <math>MTQ = 1/20 * 10^{-6} \text{ s} = 0,05 \text{ us} = 50\text{ns}</math> Baud rate = 1MBit/s =&gt; Bit Time = <math>1/(1 * 10^6) \text{ s/Bit} = 1 * 10^{-6} = 1\text{us/Bit}</math> SSP = 75% =&gt; SSP in seconds = <math>0,75 * 1 \text{ us} = 750 \text{ ns}</math> CanControllerSspOffset in MTQ = 750ns / 50ns = 15</p> <p>Note: Please consider the minimum range (0..63) stated in [17] and the range definition (0..127) used as per [19].</p>	
<b>Template Description</b>	
<p>Specifies the Transmitter Delay Compensation Offset in minimum time quanta. Transmitter Delay Compensation Offset is used to adjust the position of the Secondary Sample Point (SSP), relative to the beginning of the received bit. If this parameter is configured, the Transmitter Delay Compensation is done by measurement of the CAN controller. If not specified Transmitter Delay Compensation is disabled.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerFdConfiguration.sspOffset	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00494]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanControllerFdBaudrateConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
CanControllerSyncJumpWidth	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies the synchronization jump width for the controller in time quantas.	
<b>Template Description</b>	
Specifies the synchronization jump width for the controller in time quantas.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerFdConfiguration.syncJumpWidth	
<b>Mapping Rule</b>	<b>Mapping Type</b>





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00479]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanControllerFdBaudrateConfig	
BSW Parameter	BSW Type	
CanControllerTxBitRateSwitch	ECUC-BOOLEAN-PARAM-DEF	
BSW Description	Specifies if the bit rate switching shall be used for transmissions. If FALSE: CAN FD frames shall be sent without bit rate switching.	
Template Description	Specifies if the bit rate switching shall be used for transmissions. TRUE: CAN FD frames shall be sent with bit rate switching. FALSE: CAN FD frames shall be sent without bit rate switching.	
M2 Parameter	SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerFdConfiguration.txBitRateSwitch	
Mapping Rule	Mapping Type	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00475]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig	
BSW Parameter	BSW Type	
CanControllerPropSeg	ECUC-INTEGER-PARAM-DEF	
BSW Description	Specifies propagation delay in time quantas.	
Template Description	Specifies propagation delay in time quantas.	
M2 Parameter	SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerConfiguration.propSeg	
Mapping Rule	Mapping Type	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00073]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig	
BSW Parameter	BSW Type	
CanControllerSeg1	ECUC-INTEGER-PARAM-DEF	
BSW Description	Specifies phase segment 1 in time quantas.	





Template Description	
Specifies phase segment 1 in time quantas. timeSeg1 = Phase_Seg1	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerConfiguration.timeSeg1	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00074]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig	
BSW Parameter		BSW Type
CanControllerSeg2		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies phase segment 2 in time quantas.		
Template Description		
Specifies phase segment 2 in time quantas. timeSeg2 = Phase_Seg2		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerConfiguration.timeSeg2		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Can_00075]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig	
BSW Parameter		BSW Type
CanControllerSyncJumpWidth		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the synchronization jump width for the controller in time quantas.		
Template Description		
The number of quanta in the Synchronization Jump Width, SJW. The (Re-)Synchronization Jump Width (SJW) defines how far a resynchronization may move the Sample Point inside the limits defined by the Phase Buffer Segments to compensate for edge phase errors.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerConfiguration.syncJumpWidth		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Can_00383]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig	
BSW Parameter	BSW Type	
CanXLBaudrateConfig	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container is specified in the SWS CAN XL Driver and contains bit timing related configuration parameters of the CAN controller(s) for payload and CRC of a CAN XL frame.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Can_00512]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig	
BSW Parameter	BSW Type	
CanXLBaudRate	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies the data segment baud rate of the controller in kbps. Note: The CAN XL baudrate should be at least twice the nominal bitrate so that an error flag can safely destroy a CAN XL frame.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Can_00513]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig	
BSW Parameter	BSW Type	
CanXLErrorSignaling	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Specifies if error signaling shall be enabled.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Can_00523]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig	
BSW Parameter		BSW Type
CanXLPropSeg		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies propagation delay in time quantas.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00517]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig	
BSW Parameter		BSW Type
CanXLPwmL		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the PWM long phase length.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00514]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig	
BSW Parameter		BSW Type
CanXLPwmO		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the PWM time offset.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00516]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig	
BSW Parameter		BSW Type





CanXLPwmS	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies the PWM short phase length.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00515]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLSeg1	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies phase segment 1 in time quantas.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00518]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLSeg2	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies phase segment 2 in time quantas.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00519]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLSspOffset	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	





<p>Specifies the Transmitter Delay Compensation Offset in minimum time quanta. If this parameter is configured, the Transmitter Delay Compensation is done by measurement of the CAN controller. If not specified, Transmitter Delay Compensation is disabled.</p> <p>See ECUC_Can_00494 for details.</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00521]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLSyncJumpWidth	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies the synchronization jump width for the controller in time quantas.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00520]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanControllerBaudrateConfig/CanXLBaudrateConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLTrcvPwmMode	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Specifies if the transceiver shall be set to the PWM mode.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00522]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController
<b>BSW Parameter</b>	<b>BSW Type</b>
CanControllerDefaultBaudrate	ECUC-REFERENCE-DEF
<b>BSW Description</b>	





Reference to baudrate configuration container configured for the Can Controller.	
<b>Template Description</b>	
Channels speed in bits/s.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationCluster.baudrate	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Set the reference to the container of the CanControllerBaudRate parameter that has been configured for SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationCluster.baudrate	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00435]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerEcucPartitionRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Maps the CAN controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the CAN driver is mapped to.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Can_00492]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanControllerId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter provides the controller ID which is unique in a given CAN Driver. The value for this parameter starts with 0 and continue without any gaps.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Can_00316]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController	
<b>BSW Parameter</b>		<b>BSW Type</b>







CanCpuClockRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the CPU clock configuration, which is set in the MCU driver configuration	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00313]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController
<b>BSW Parameter</b>	<b>BSW Type</b>
CanRxProcessing	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Enables / disables API Can_MainFunction_Read() for handling PDU reception events in polling mode.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00317]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTTController	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
CanTTController is specified in the SWS TTCAN and contains the configuration parameters of the TTCAN controller(s) (which are needed in addition to the configuration parameters of the CAN controller(s)). This container is only included and valid if TTCAN is supported by the controller, enabled (see CanSupportTTCANRef, ECUC_Can_00430), and used.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00001]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerApplWatchdogLimit	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines the maximum time period (unit is 256 times NTU) after which the application has to serve the watchdog.		
Template Description		
The Appl_Watchdog_Limit shall be an 8-bit value specifying the period for the application watchdog in Appl_Watchdog_Limit times 256 NTUs.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Tcan::TcanTopology::TcanCommunicationController.applWatchdogLimit		
Mapping Rule		Mapping Type
1:1 mapping		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00139]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerCycleCountMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines the value for cycle_count_max. Allowed values: 0x00: 1 basic cycle 0x01: 2 basic cycles 0x03: 4 basic cycles 0x07: 8 basic cycles 0x0F: 16 basic cycles 0x1F: 32 basic cycles 0x3F: 64 basic cycles		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00138]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerEcucPartitionRef	ECUC-REFERENCE-DEF	
BSW Description		
Maps the Time triggered CAN controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the CAN driver is mapped to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00493]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerExpectedTxTrigger	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of expected_tx_trigger.		
Template Description		
The Expected_Tx_Trigger shall be an eight (8) bit value which limits the number of messages the FSE may try to transmit in one matrix cycle.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Tcan::TcanTopology::TcanCommunicationController.expectedTxTrigger		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00136]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerExternalClockSynchronisation	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/disables the external clock synchronization. TRUE: External clock synchronization enabled. FALSE: External clock synchronization disabled. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
Template Description		
One bit shall be used to configure whether or not external clock synchronisation will be allowed during runtime (only Level 2).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Tcan::TcanTopology::TcanCommunicationController.externalClockSynchronisation		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00135]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerGlobalTimeFiltering	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/disables the global time filtering. TRUE: Global time filtering enabled. FALSE: Global time filtering disabled. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00134]

BSW Module	BSW Context
Can	Can/CanConfigSet/CanController/CanTTController
BSW Parameter	BSW Type
CanTTControllerInitialRefOffset	ECUC-INTEGER-PARAM-DEF
BSW Description	
Defines the initial value for ref trigger offset.	
Template Description	
The Initial_Ref_Offset shall be an eight (8) bit value for the initialisation of Ref_Trigger_Offset.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Tcan::TcanTopology::TcanCommunicationController.initialRefOffset	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00128]

BSW Module	BSW Context
Can	Can/CanConfigSet/CanController/CanTTController
BSW Parameter	BSW Type
CanTTControllerInterruptEnable	ECUC-INTEGER-PARAM-DEF
BSW Description	
Enables/disables the respective interrupts. Bit Position set to 1: Enable respective interrupt. Bit Position set to 0: Disable respective interrupt.	
Bit Position / Interrupt Source: 10: Application Watchdog. 9: Watch Trigger reached. 8: Initialization Watch Trigger reached. 7: Change of Error Level. 6: Tx Overflow. 5: Tx Underflow. 4: Global Time Error. 3: Gap. 2: Start of Cycle. 1: Time Discontinuity. 0: Master State Change.	
Bit position "1: Time Discontinuity" and "4: Global Time Error" shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00140]

BSW Module	BSW Context
Can	Can/CanConfigSet/CanController/CanTTController
BSW Parameter	BSW Type
CanTTControllerLevel2	ECUC-BOOLEAN-PARAM-DEF
BSW Description	





Defines whether Level 2 or Level 1 is used. TRUE: Level 2. FALSE: Level 1. If this parameter is set to FALSE then all parameters with dependency to CanTTControllerLevel2 need not be configured.	
<b>Template Description</b>	
One bit shall be used to distinguish between Level 1 and Level 2.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ttcan::TtcanTopology::TtcanCommunicationController.timeTriggeredCanLevel	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00131]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanTTController	
<b>BSW Parameter</b>	<b>BSW Type</b>	
CanTTControllerNTUConfig	ECUC-FLOAT-PARAM-DEF	
<b>BSW Description</b>		
Defines the config value for NTU (network time unit). Value given in microseconds. The value configured shall be greater than 0. Together with the local oscillator period, the TUR (time unit ratio) can be derived from the NTU. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
<b>Template Description</b>		
Unit measuring all times and providing a constant of the whole network. For level 1, this is always the CAN bit time. Unit: seconds.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ttcan::TtcanTopology::TtcanCluster.ntu		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
NTU = system clock period x (TUR Numerator / TUR Denominator)	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00141]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanTTController	
<b>BSW Parameter</b>	<b>BSW Type</b>	
CanTTControllerOperationMode	ECUC-ENUMERATION-PARAM-DEF	
<b>BSW Description</b>		
Defines the operation mode.		
<b>Template Description</b>		
Possible operation modes True: Time-Triggered False: Event-Synchronised-Time-Triggered		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ttcan::TtcanTopology::TtcanCluster.operationMode		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00127]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerSyncDeviation	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Defines the maximum synchronization deviation: Given as a percentage value of the NTU (network time unit). The value configured shall be greater than 0. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Synchronisation Deviation $\leq 2 \cdot (\text{CanTTSyncDeviation} + 5)$ .	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Can_00132]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerTURRestore	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/disables the TUR restore. Note that the value configured for TUR can be derived from the value configured for NTU and the local oscillator period. TRUE: TUR restore enabled. FALSE: TUR restore disabled. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Can_00133]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerTimeMaster	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Defines whether the controller acts as a potential time master. TRUE: Potential time master. FALSE: Time slave.		
Template Description		
One bit shall be used to distinguish between (potential) time masters and time slaves. This can be derived from the frame-triggering's triggers.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Tcan::TtcanTopology::TtcanCommunicationController.master		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Can_00129]	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerTimeMasterPriority	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines the time master priority.		
Template Description		
The time master priority shall contain a three bit value for the priority of the current time master (the last three bits of the identifier of the reference message). This can be derived from the frame-triggering's triggers.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Tcan::TcanTopology::TcanCommunicationController.timeMasterPriority		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00130]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerTxEnableWindowLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Length of the tx enable window given in CAN bit times. Definition parameter "CanTTControllerTxEnableWindowlength" is used such that: Length of enable window = CanTTControllerTxEnableWindowLength + 1		
Template Description		
The length of the Tx_Enable window shall be a four (4) bit value specifying the length of the time period (1-16 nominal CAN bit times) in which a transmission may be started.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Tcan::TcanTopology::TcanCommunicationController.txEnableWindowLength		
Mapping Rule		Mapping Type
Length of enable window = CanTTControllerTxEnableWindowLength + 1		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00137]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter	BSW Type	
CanTTControllerWatchTriggerGapTimeMark	ECUC-INTEGER-PARAM-DEF	
BSW Description		
watch trigger time mark after a gap		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00158]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter		BSW Type
CanTTControllerWatchTriggerTimeMark		ECUC-INTEGER-PARAM-DEF
BSW Description		
watch trigger time mark		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00157]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanTTController	
BSW Parameter		BSW Type
CanTTIRQProcessing		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Enables / disables API Can_MainFunction_BusOff() for handling busoff events in polling mode.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00142]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController	
BSW Parameter		BSW Type
CanTxProcessing		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Enables / disables API Can_MainFunction_Write() for handling PDU transmission events in polling mode.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00318]



BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController	
BSW Parameter		BSW Type
CanWakeupProcessing		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Enables / disables API Can_MainFunction_Wakeup() for handling wakeup events in polling mode.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00319]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController	
BSW Parameter		BSW Type
CanWakeupSourceRef		ECUC-REFERENCE-DEF
BSW Description		
This parameter contains a reference to the Wakeup Source for this controller as defined in the ECU State Manager. Implementation Type: reference to EcuM_WakeupSourceType		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00359]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController	
BSW Parameter		BSW Type
CanWakeupSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
CAN driver support for wakeup over CAN Bus.		
Template Description		
Defines whether the ECU shall be woken up by this CommunicationController. TRUE: wake up is possible FALSE: wake up is not supported Note: If wakeUpByControllerSupported is set to TRUE the feature shall be supported by both hardware and basic software.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationController.wakeUpByControllerSupported		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00330]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController	
BSW Parameter		BSW Type
CanXLController		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is specified in the SWS CAN XL Driver and represents a CAN XL channel. If this container is present, the CAN driver will provide the extended CanXL API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00499]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanXLController	
BSW Parameter		BSW Type
CanXLCtrlEthDefaultPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the default CAN XL Priority ID to be used for outgoing tunneled Ethernet frames.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00500]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanXLController	
BSW Parameter		BSW Type
CanXLEthDefaultQueue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the default CAN XL Queue to be used for outgoing tunneled Ethernet frames.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00501]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanController/CanXLController	
BSW Parameter		BSW Type





CanXLEthEcucPartitionRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Maps the Ethernet Interface access to the CAN XL controller to zero or one ECUC partitions.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00511]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanXLController
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLEthEgressFifo	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Represents a Fifo at the egress side.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00502]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanXLController/CanXLEthEgressFifo
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLEthEgressFifoCanXLPriority	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Defines the CAN XL Priority ID to be used for outgoing tunneled Ethernet frames using this FIFO.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00503]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanController/CanXLController/CanXLEthEgressFifo
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLEthEgressFifoCanXLQueue	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Defines the CAN XL Queue to be used for outgoing tunneled Ethernet frames using this FIFO.	





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00504]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanXLController/CanXLEthEgressFifo	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanXLEthEgressFifoldx		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Egress Fifo index.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00505]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanXLController	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanXLEthIngressFifo		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Represents a Fifo at the ingress side.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00507]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanController/CanXLController/CanXLEthIngressFifo	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanXLEthIngressFifoCanXLQueue		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Defines the CAN XL Queue to be used for incoming tunneled Ethernet frames using this FIFO.		
<b>Template Description</b>		
<b>M2 Parameter</b>		





Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00509]

BSW Module	BSW Context
Can	Can/CanConfigSet/CanController/CanXLController/CanXLEthIngressFifo
BSW Parameter	BSW Type
CanXLEthIngressFifoldx	ECUC-INTEGER-PARAM-DEF
BSW Description	
Ingress Fifo index.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00508]

BSW Module	BSW Context
Can	Can/CanConfigSet/CanController/CanXLController/CanXLEthIngressFifo
BSW Parameter	BSW Type
CanXLEthIngressFifoVcid	ECUC-INTEGER-PARAM-DEF
BSW Description	
Configures a VCID to be accepted by this FIFO. If not present, all VCIDs shall be accepted.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00510]

BSW Module	BSW Context
Can	Can/CanConfigSet/CanController/CanXLController
BSW Parameter	BSW Type
CanXLEthPhysAddress	ECUC-STRING-PARAM-DEF
BSW Description	
Specifies the unique 48-bit physical address (MAC address) of the controller in network byte order. Regular Expression: [0-9a-fA-F]{2}[:-][0-9a-fA-F]{2}{5}	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type





Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00506]

BSW Module	BSW Context	
Can	Can/CanConfigSet	
BSW Parameter		BSW Type
CanHardwareObject		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) of CAN Hardware Objects.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00324]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject	
BSW Parameter		BSW Type
CanControllerRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to CAN Controller to which the HOH is associated to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00322]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject	
BSW Parameter		BSW Type
CanFdPaddingValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the value which is used to pad unspecified data in CAN FD frames > 8 bytes for transmission. This is necessary due to the discrete possible values of the DLC if > 8 bytes.		
If the length of a PDU which was requested to be sent does not match the allowed DLC values, the remaining bytes up to the next possible value shall be padded with this value.		
Template Description		





<b>CanControllerFdConfiguration.paddingValue:</b> Specifies the value which is used to pad unused data in CAN FD frames which are bigger than 8 byte if the length of a Pdu which was requested to be sent does not match the allowed DLC values of CAN FD.	
<b>CanControllerFdConfigurationRequirements.paddingValue:</b> Specifies the value which is used to pad unused data in CAN FD frames which are bigger than 8 byte if the length of a Pdu which was requested to be sent does not match the allowed DLC values of CAN FD.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerFdConfiguration. <a href="#">paddingValue</a> , SystemTemplate::Fibex::Fibex4Can::CanTopology::CanControllerFdConfigurationRequirements. <a href="#">paddingValue</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00485]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanHardwareObject	
<b>BSW Parameter</b>	<b>BSW Type</b>	
CanHandleType	ECUC-ENUMERATION-PARAM-DEF	
<b>BSW Description</b>		
Specifies the type (Full-CAN or Basic-CAN) of a hardware object.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00323]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanHardwareObject	
<b>BSW Parameter</b>	<b>BSW Type</b>	
CanHardwareObjectUsesPolling	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
Enables polling of this hardware object.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00490]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanHardwareObject	
<b>BSW Parameter</b>	<b>BSW Type</b>	





CanHwFilter	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container is only valid for HRHs and contains the configuration (parameters) of one hardware filter.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00468]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject/CanHwFilter
<b>BSW Parameter</b>	<b>BSW Type</b>
CanHwFilterCode	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies (together with the filter mask) the identifiers range that passes the hardware filter.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00469]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject/CanHwFilter
<b>BSW Parameter</b>	<b>BSW Type</b>
CanHwFilterMask	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
<p>Describes a mask for hardware-based filtering of CAN identifiers. The CAN identifiers of incoming messages are masked with the appropriate CanFilterMaskValue. Bits holding a 0 mean don't care, i.e. do not compare the message's identifier in the respective bit position.</p> <p>The mask shall be build by filling with leading 0. In case of CanIdType EXTENDED or MIXED a 29 bit mask shall be build. In case of CanIdType STANDARD a 11 bit mask shall be build</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00470]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject
<b>BSW Parameter</b>	<b>BSW Type</b>







CanHwObjectCount	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Number of hardware objects used to implement one HOH. In case of a HRH this parameter defines the number of elements in the hardware FIFO or the number of shadow buffers, in case of a HTH it defines the number of hardware objects used for multiplexed transmission or for a hardware FIFO used by a FullCAN HTH.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00467]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIdType	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Specifies whether the IdValue is of type standard identifier, extended identifier or mixed mode. ImplementationType: Can_IdType	
<b>Template Description</b>	
The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00065]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject/CanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
EXTENDED	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
All the CANIDs are of type extended only (29 bit).	
<b>Template Description</b>	
Extended 29-bit-identifiers are used (CAN 2.0B)	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType.extended	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject/CanIdType	
BSW Parameter		BSW Type
STANDARD		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
All the CANIDs are of type standard only (11bit).		
Template Description		
Standard 11-bit-identifiers are used (CAN 2.0A)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType.standard		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject	
BSW Parameter		BSW Type
CanMainFunctionRWPeriodRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to CanMainFunctionPeriod. If configured, this hardware object will be polled.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00438]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject	
BSW Parameter		BSW Type
CanObjectId		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Holds the handle ID of HRH or HTH. The value of this parameter is unique in a given CAN Driver, and it should start with 0 and continue without any gaps.</p> <p>The HRH and HTH Ids share a common ID range.</p> <p>Example: HRH0-0, HRH1-1, HTH0-2, HTH1-3</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00326]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject	
BSW Parameter	BSW Type	
CanObjectPayloadLength	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Specifies the maximum L-PDU payload length in bytes the hardware object can store. If the parameter is not provided, Can driver configuration generators have to assume the maximum length of the underlying CAN derivate, e.g. 8 bytes for CAN, 64 bytes for CAN-FD.		
Template Description		
The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00495]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject/CanObjectPayloadLength	
BSW Parameter	BSW Type	
CAN_OBJECT_PL_12	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Payload length of 12 Bytes		
Template Description		
Standard 11-bit-identifiers are used (CAN 2.0A)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType.standard		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject/CanObjectPayloadLength	
BSW Parameter	BSW Type	
CAN_OBJECT_PL_16	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Payload length of 16 Bytes		
Template Description		
Standard 11-bit-identifiers are used (CAN 2.0A)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType.standard		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject/CanObjectPayloadLength	
BSW Parameter		BSW Type
CAN_OBJECT_PL_20		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Payload length of 20 Bytes		
Template Description		
Standard 11-bit-identifiers are used (CAN 2.0A)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType. <a href="#">standard</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject/CanObjectPayloadLength	
BSW Parameter		BSW Type
CAN_OBJECT_PL_24		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Payload length of 24 Bytes		
Template Description		
Standard 11-bit-identifiers are used (CAN 2.0A)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType. <a href="#">standard</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanHardwareObject/CanObjectPayloadLength	
BSW Parameter		BSW Type
CAN_OBJECT_PL_32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Payload length of 32 Bytes		
Template Description		
Standard 11-bit-identifiers are used (CAN 2.0A)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType. <a href="#">standard</a>		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanHardwareObject/CanObjectPayloadLength	
<b>BSW Parameter</b>		<b>BSW Type</b>
CAN_OBJECT_PL_48		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
Payload length of 48 Bytes		
<b>Template Description</b>		
Standard 11-bit-identifiers are used (CAN 2.0A)		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType. <a href="#">standard</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanHardwareObject/CanObjectPayloadLength	
<b>BSW Parameter</b>		<b>BSW Type</b>
CAN_OBJECT_PL_64		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
Payload length of 64 Bytes		
<b>Template Description</b>		
Standard 11-bit-identifiers are used (CAN 2.0A)		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType. <a href="#">standard</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanConfigSet/CanHardwareObject/CanObjectPayloadLength	
<b>BSW Parameter</b>		<b>BSW Type</b>
CAN_OBJECT_PL_8		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
Payload length of 8 Bytes		
<b>Template Description</b>		
Standard 11-bit-identifiers are used (CAN 2.0A)		
<b>M2 Parameter</b>		





SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanAddressingModeType. <i>standard</i>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Can	Can/CanConfigSet/CanHardwareObject
BSW Parameter	BSW Type
CanObjectType	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
Specifies if the HardwareObject is used as Transmit or as Receive object	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00327]

BSW Module	BSW Context
Can	Can/CanConfigSet/CanHardwareObject
BSW Parameter	BSW Type
CanTTHardwareObjectTrigger	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
CanTTHardwareObjectTrigger is specified in the SWS TTCAN and contains the configuration (parameters) of TTCAN triggers for Hardware Objects, which are additional to the configuration (parameters) of CAN Hardware Objects.  This container is only included and valid if TTCAN is supported by the controller and, enabled (see CanSupportTTCANRef, ECUC_Can_00430), and used.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Can_00002]

BSW Module	BSW Context
Can	Can/CanConfigSet/CanHardwareObject/CanTTHardwareObjectTrigger
BSW Parameter	BSW Type
CanTTHardwareObjectBaseCycle	ECUC-INTEGER-PARAM-DEF
BSW Description	
Defines the cycle_offset. CanTTHardwareObjectBaseCycle must be not greater than cycle_count_max.	
Template Description	





The first communication cycle where the frame is sent. This value is incremented at the beginning of each new cycle, ranging from 0 to 63, and is reset to 0 after a sequence of 64 cycles.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CycleRepetition.BaseCycle	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00147]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject/CanTTHardwareObjectTrigger
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTTHardwareObjectCycleRepetition	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Defines the repeat_factor. CanTTHardwareObjectCycleRepetition shall be a power of two (2), greater than cycle_offset but not greater than cycle_count_max + 1.	
<b>Template Description</b>	
The number of communication cycles (after the first cycle) whenever the frame described by this timing is sent again.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CycleRepetition.CycleRepetition	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00148]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject/CanTTHardwareObjectTrigger
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTTHardwareObjectTimeMark	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Defines the point in time, when the trigger will be activated. Value is given in cycle time.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00146]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject/CanTTHardwareObjectTrigger
<b>BSW Parameter</b>	<b>BSW Type</b>





CanTTHardwareObjectTriggerId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Sequential number which allows separation of different TTCAN triggers configured for one and the same hardware object.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00155]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject/CanTTHardwareObjectTrigger
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTTHardwareObjectTriggerType	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Defines the type of the trigger associated with the hardware object. This parameter depends on plain CAN parameter CAN_OBJECT_TYPE. If CAN_OBJECT_TYPE equals RECEIVE than this parameter is fixed to CAN_TT_RX_TRIGGER. If CAN_OBJECT_TYPE equals TRANSMIT than one of the following literals is configurable: CAN_TT_TX_REF_TRIGGER, CAN_TT_TX_REF_TRIGGER_GAP, CAN_TT_TX_TRIGGER_MERGED, CAN_TT_TX_TRIGGER_SINGLE, CAN_TT_TX_TRIGGER_EXCLUSIVE.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00145]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanConfigSet/CanHardwareObject
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTriggerTransmitEnable	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
This parameter defines if or if not Can supports the trigger-transmit API for this handle.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00486]



BSW Module		BSW Context	
Can		Can/CanConfigSet	
BSW Parameter		BSW Type	
CanXLHardwareObject		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container is specified in the SWS CAN XL Driver and contains the configuration (parameters) of CAN XL Hardware Objects.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00526]

BSW Module		BSW Context	
Can		Can/CanConfigSet/CanXLHardwareObject	
BSW Parameter		BSW Type	
CanControllerRef		ECUC-REFERENCE-DEF	
BSW Description			
Reference to CAN Controller to which the HOH is associated to.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00322]

BSW Module		BSW Context	
Can		Can/CanConfigSet/CanXLHardwareObject	
BSW Parameter		BSW Type	
CanMainFunctionRWPeriodRef		ECUC-REFERENCE-DEF	
BSW Description			
Reference to CanMainFunctionPeriod. If configured, this hardware object will be polled.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00438]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanXLHardwareObject	
BSW Parameter		BSW Type
CanObjectType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Specifies if the HardwareObject is used as Transmit or as Receive object		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00327]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanXLHardwareObject	
BSW Parameter		BSW Type
CanXLHwFilter		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is only valid for CAN XL HRHs and contains the configuration (parameters) of one hardware filter. This container is intentionally left empty, because the parameters are very hardware specific and shall be filled in by the VSMD.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00528]

BSW Module	BSW Context	
Can	Can/CanConfigSet/CanXLHardwareObject	
BSW Parameter		BSW Type
CanXLObjectId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Holds the handle ID of CAN XL HRH or HTH.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Can_00527]

BSW Module		BSW Context	
Can		Can	
BSW Parameter		BSW Type	
CanGeneral		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the parameters related each CAN Driver Unit.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00497]

BSW Module		BSW Context	
Can		Can/CanGeneral	
BSW Parameter		BSW Type	
CanDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00064]

BSW Module		BSW Context	
Can		Can/CanGeneral	
BSW Parameter		BSW Type	
CanEcucPartitionRef		ECUC-REFERENCE-DEF	
BSW Description			
Maps the CAN driver to zero or multiple ECUC partitions to make the modules API available in this partition. The CAN driver will operate as an independent instance in each of the partitions.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00491]

BSW Module		BSW Context	
Can		Can/CanGeneral	
BSW Parameter		BSW Type	
CanEnableSecurityEventReporting		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Switches the reporting of security events to the IdSM: - true: reporting is enabled. - false: reporting is disabled.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00496]

BSW Module		BSW Context	
Can		Can/CanGeneral	
BSW Parameter		BSW Type	
CanGlobalTimeSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables/Disables the Global Time APIs used when hardware timestamping is supported by CAN controller.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00498]

BSW Module		BSW Context	
Can		Can/CanGeneral	
BSW Parameter		BSW Type	
CanIndex		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Can_00320]

BSW Module		BSW Context	
Can		Can/CanGeneral	
BSW Parameter		BSW Type	





CanLPduReceiveCalloutFunction	ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>	
This parameter defines the existence and the name of a callout function that is called after a successful reception of a received CAN Rx L-PDU. If this parameter is omitted no callout shall take place.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00434]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
CanMainFunctionBusoffPeriod	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This parameter describes the period for cyclic call to Can_MainFunction_Busoff. Unit is seconds.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00355]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
CanMainFunctionModePeriod	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This parameter describes the period for cyclic call to Can_MainFunction_Mode. Unit is seconds.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00376]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
CanMainFunctionRWPeriods	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	





This container contains the parameter for configuring the period for cyclic call to Can_MainFunction_Read or Can_MainFunction_Write depending on the referring item.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00437]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanGeneral/CanMainFunctionRWPPeriods
<b>BSW Parameter</b>	<b>BSW Type</b>
CanMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This parameter describes the period for cyclic call to Can_MainFunction_Read or Can_MainFunction_Write depending on the referring item. Unit is seconds. Different poll-cycles will be configurable if more than one CanMainFunctionPeriod is configured. In this case multiple Can_MainFunction_Read() or Can_MainFunction_Write() will be provided by the CAN Driver module.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00484]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
CanMainFunctionWakeupPeriod	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This parameter describes the period for cyclic call to Can_MainFunction_Wakeup. Unit is seconds.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00357]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
CanMultiplexedTransmission	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	





Specifies if multiplexed transmission shall be supported.ON or OFF	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00095]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanOsCounterRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
This parameter contains a reference to the OsCounter, which is used by the CAN driver.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00431]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanSetBaudrateApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
The support of the Can_SetBaudrate API is optional. If this parameter is set to true the Can_SetBaudrate API shall be supported. Otherwise the API is not supported.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00482]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanSupportTTCANRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		





The parameter refers to CanIfSupportTTCAN parameter in the CAN Interface Module configuration. The CanIfSupportTTCAN parameter defines whether TTCAN is supported.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00430]

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTimeoutDuration		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Specifies the maximum time for blocking function until a timeout is detected. Unit is seconds.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00113]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the Can_GetVersionInfo() API ON or OFF.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Can_00106]	

<b>BSW Module</b>	<b>BSW Context</b>	
Can	Can/CanGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanXLGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container is specified in the SWS CAN XL Driver and contains global parameters of the CAN XL Driver.		







<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00524]

<b>BSW Module</b>	<b>BSW Context</b>
Can	Can/CanGeneral/CanXLGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
CanXLEthGlobalTimeSupport	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables/Disables the Global Time APIs for the Ethernet Interface used when hardware timestamping is supported by CAN controller.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Can_00525]

## C.2.2 Can Interface Mapping

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIfCtrlDrvCfg	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Configuration parameters for all the underlying CAN Driver modules are aggregated under this container. For each CAN Driver module a separate instance of this container has to be provided.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00253]

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfCtrlDrvCfg
<b>BSW Parameter</b>	<b>BSW Type</b>





CanIfCtrlCfg	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container contains the configuration (parameters) of an addressed CAN controller by an underlying CAN Driver module. This container is configurable per CAN controller.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00546]

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfCtrlDrvCfg/CanIfCtrlCfg
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIfCtrlCanCtrlRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
This parameter references to the logical handle of the underlying CAN controller from the CAN Driver module to be served by the CAN Interface module. The following parameters of CanController config container shall be referenced by this link: CanControllerId, CanWakeupSourceRef Range: 0..max. number of underlying supported CAN controllers	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00636]

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfCtrlDrvCfg/CanIfCtrlCfg
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIfCtrlId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter abstracts from the CAN Driver specific parameter Controller. Each controller of all connected CAN Driver modules shall be assigned to one specific ControllerId of the CanIf. Range: 0..number of configured controllers of all CAN Driver modules	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00647]

BSW Module	BSW Context	
CanIf	CanIf/CanIfCtrlDrvCfg/CanIfCtrlCfg	
BSW Parameter		BSW Type
CanIfCtrlWakeupSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter defines if a respective controller of the referenced CAN Driver modules is queriable for wake up events. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00637]

BSW Module	BSW Context	
CanIf	CanIf/CanIfCtrlDrvCfg	
BSW Parameter		BSW Type
CanIfCtrlDrvInitHohConfigRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Init Hoh Configuration		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00642]

BSW Module	BSW Context	
CanIf	CanIf/CanIfCtrlDrvCfg	
BSW Parameter		BSW Type
CanIfCtrlDrvNameRef		ECUC-REFERENCE-DEF
BSW Description		
CAN Interface Driver Reference. This reference can be used to get any information (Ex. Driver Name, Vendor ID) from the CAN driver. The CAN Driver name can be derived from the ShortName of the CAN driver module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00638]

BSW Module	BSW Context	
CanIf	CanIf	
BSW Parameter	BSW Type	
CanIfDispatchCfg	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Callback functions provided by upper layer modules of the CanIf. The callback functions defined in this container are common to all configured CAN Driver / CAN Transceiver Driver modules.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00250]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfDispatchCfg	
BSW Parameter	BSW Type	
CanIfDispatchUserCheckTrcvWakeFlagIndicationName	ECUC-FUNCTION-NAME-DEF	
BSW Description		
This parameter defines the name of <User_CheckTrcvWakeFlagIndication>. If CanIfDispatchUserCheckTrcvWakeFlagIndicationUL equals CAN_SM the name of <User_CheckTrcvWakeFlagIndication> is fixed. If it equals CDD, the name is selectable. If CanIfPublicPnSupport equals False, this parameter shall not be configurable.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00791]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfDispatchCfg	
BSW Parameter	BSW Type	
CanIfDispatchUserCheckTrcvWakeFlagIndicationUL	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This parameter defines the upper layer module to which the CheckTrcvWakeFlagIndication from the Driver modules have to be routed. If CanIfPublicPnSupport equals False, this parameter shall not be configurable.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00792]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type
CanIfDispatchUserClearTrcvWufFlagIndicationName		ECUC-FUNCTION-NAME-DEF
BSW Description		
This parameter defines the name of <User_ClearTrcvWufFlagIndication>. If CanIfDispatchUserClearTrcvWufFlagIndication UL equals CAN_SM the name of <User_ClearTrcvWufFlagIndication> is fixed. If it equals CDD, the name is selectable. If CanIfPublicPnSupport equals False, this parameter shall not be configurable.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00789]

BSW Module	BSW Context	
CanIf	CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type
CanIfDispatchUserClearTrcvWufFlagIndicationUL		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the upper layer module to which the ClearTrcvWufFlagIndication from the Driver modules have to be routed. If CanIfPublicPnSupport equals False, this parameter shall not be configurable.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00790]

BSW Module	BSW Context	
CanIf	CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type
CanIfDispatchUserConfirmPnAvailabilityName		ECUC-FUNCTION-NAME-DEF
BSW Description		
This parameter defines the name of <User_ConfirmPnAvailability>. If CanIfDispatchUserConfirmPnAvailabilityUL equals CAN_SM the name of <User_ConfirmPnAvailability> is fixed. If it equals CDD, the name is selectable. If CanIfPublicPnSupport equals False, this parameter shall not be configurable.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00819]

BSW Module		BSW Context	
CanIf		CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type	
CanIfDispatchUserConfirmPnAvailabilityUL		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
This parameter defines the upper layer module to which the ConfirmPnAvailability notification from the Driver modules have to be routed. If CanIfPublicPnSupport equals False, this parameter shall not be configurable.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00820]

BSW Module		BSW Context	
CanIf		CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type	
CanIfDispatchUserCtrlBusOffName		ECUC-FUNCTION-NAME-DEF	
BSW Description			
This parameter defines the name of <User_ControllerBusOff>. This parameter depends on the parameter CanIfDispatchUserCtrlBusOffUL. If CanIfDispatchUserCtrlBusOffUL equals CAN_SM the name of <User_ControllerBusOff> is fixed. If CanIfDispatchUserCtrlBusOffUL equals CDD, the name of <User_ControllerBusOff> is selectable.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00525]

BSW Module		BSW Context	
CanIf		CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type	
CanIfDispatchUserCtrlBusOffUL		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
This parameter defines the upper layer (UL) module to which the notifications of all ControllerBusOff events from the CAN Driver modules have to be routed via <User_ControllerBusOff>. There is no possibility to configure no upper layer (UL) module as the provider of <User_ControllerBusOff>.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00547]

BSW Module		BSW Context	
CanIf		CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type	
CanIfDispatchUserCtrlModelIndicationName		ECUC-FUNCTION-NAME-DEF	
BSW Description			
This parameter defines the name of <User_ControllerModelIndication>. This parameter depends on the parameter CanIfDispatchUserCtrlModelIndicationUL. If CanIfDispatchUserCtrlModelIndicationUL equals CAN_SM the name of <User_ControllerModelIndication> is fixed. If CanIfDispatchUserCtrlModelIndicationUL equals CDD, the name of <User_ControllerModelIndication> is selectable.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanIf_00683]	

BSW Module		BSW Context	
CanIf		CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type	
CanIfDispatchUserCtrlModelIndicationUL		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
This parameter defines the upper layer (UL) module to which the notifications of all ControllerTransition events from the CAN Driver modules have to be routed via <User_ControllerModelIndication>.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanIf_00684]	

BSW Module		BSW Context	
CanIf		CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type	
CanIfDispatchUserTrcvModelIndicationName		ECUC-FUNCTION-NAME-DEF	
BSW Description			
This parameter defines the name of <User_TrvcModelIndication>. This parameter depends on the parameter CanIfDispatchUserTrvcModelIndicationUL. If CanIfDispatchUserTrvcModelIndicationUL equals CAN_SM the name of <User_TrvcModelIndication> is fixed. If CanIfDispatchUserTrvcModelIndicationUL equals CDD, the name of <User_TrvcModelIndication> is selectable.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanIf_00685]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type
CanIfDispatchUserTrcvModeIndicationUL		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the upper layer (UL) module to which the notifications of all TransceiverTransition events from the CAN Transceiver Driver modules have to be routed via <User_TrvcModeIndication>. If no UL module is configured, no upper layer callback function will be called.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00686]

BSW Module	BSW Context	
CanIf	CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type
CanIfDispatchUserValidateWakeupEventName		ECUC-FUNCTION-NAME-DEF
BSW Description		
This parameter defines the name of <User_ValidateWakeupEvent>. This parameter depends on the parameter CanIfDispatchUserValidateWakeupEventUL. If CanIfDispatchUserValidateWakeupEventUL equals ECUM, the name of <User_ValidateWakeupEvent> is fixed. If CanIfDispatchUserValidateWakeupEventUL equals CDD, the name of <User_ValidateWakeupEvent> is selectable.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00531]

BSW Module	BSW Context	
CanIf	CanIf/CanIfDispatchCfg	
BSW Parameter		BSW Type
CanIfDispatchUserValidateWakeupEventUL		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the upper layer (UL) module to which the notifications about positive former requested wake up sources have to be routed via <User_ValidateWakeupEvent>.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00549]



BSW Module		BSW Context	
CanIf		CanIf	
BSW Parameter		BSW Type	
CanIfInitCfg		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the init parameters of the CAN Interface.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00247]

BSW Module		BSW Context	
CanIf		CanIf/CanIfInitCfg	
BSW Parameter		BSW Type	
CanIfBufferCfg		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the Txbuffer configuration. Multiple buffers with different sizes could be configured. If CanIfBufferSize (ECUC_CanIf_00834) equals 0, the CanIf Tx L-PDU only refers via this CanIfBufferCfg the corresponding CanIfHthCfg.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00832]

BSW Module		BSW Context	
CanIf		CanIf/CanIfInitCfg/CanIfBufferCfg	
BSW Parameter		BSW Type	
CanIfBufferHthRef		ECUC-REFERENCE-DEF	
BSW Description			
Reference to HTH, that defines the hardware object or the pool of hardware objects configured for transmission. All the CanIf Tx L-PDUs refer via the CanIfBufferCfg and this parameter to the HTHs if TxBuffering is enabled, or not. Each HTH shall not be assigned to more than one buffer.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00833]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfBufferCfg	
BSW Parameter		BSW Type
CanIfBufferSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>This parameter defines the number of CanIf Tx L-PDUs which can be buffered in one Txbuffer. If this value equals 0, the Can If does not perform Txbuffering for the CanIf Tx L-PDUs which are assigned to this Txbuffer. If CanIfPublicTxBuffering equals False, this parameter equals 0 for all TxBuffer. If the CanHandleType of the referred HTH equals FULL, this parameter equals 0 for this TxBuffer.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00834]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg	
BSW Parameter		BSW Type
CanIfInitCfgSet		ECUC-STRING-PARAM-DEF
BSW Description		
<p>Selects the CAN Interface specific configuration setup. This type of the external data structure shall contain the post build initialization data for the CAN Interface for all underlying CAN Drivers.</p> <p>constant to CanIf_ConfigType</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00623]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg	
BSW Parameter		BSW Type
CanIfInitHohCfg		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>This container contains the references to the configuration setup of each underlying CAN Driver.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00257]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg	
BSW Parameter		BSW Type
CanIfHrhCfg		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains configuration parameters for each hardware receive object (HRH).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00259]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg	
BSW Parameter		BSW Type
CanIfHrhCanCtrlIdRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to controller Id to which the HRH belongs to. A controller can contain one or more HRHs.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00631]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg	
BSW Parameter		BSW Type
CanIfHrhIdSymRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
The parameter refers to a particular HRH object in the CanDrv configuration (see CanHardwareObject or CanXLHardware Object). CanIf receives the following information of the CanDrv module by this reference: <ul style="list-style-type: none"> <li>• CanHandleType (only CAN 2.0 and CAN FD)</li> <li>• CanObjectId</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00634]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg	
BSW Parameter		BSW Type
CanIfHrhRangeCfg		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Defines the parameters required for configuring multiple CANID ranges for a given same HRH.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00628]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg/CanIfHrhRangeCfg	
BSW Parameter		BSW Type
CanIfHrhRangeBaselId		ECUC-INTEGER-PARAM-DEF
BSW Description		
CAN Identifier used as base value in combination with CanIfHrhRangeMask for a masked ID range in which all CAN Ids shall pass the software filtering. The size of this parameter is limited by CanIfHrhRangeRxPduRangeCanIdType.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00825]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg/CanIfHrhRangeCfg	
BSW Parameter		BSW Type
CanIfHrhRangeMask		ECUC-INTEGER-PARAM-DEF
BSW Description		
Used as mask value in combination with CanIfHrhRangeBaselId for a masked ID range in which all CAN Ids shall pass the software filtering. The size of this parameter is limited by CanIfHrhRangeRxPduRangeCanIdType.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00826]

BSW Module		BSW Context	
CanIf		CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg/CanIfHrhRangeCfg	
BSW Parameter		BSW Type	
CanIfHrhRangeRxPduLowerCanId		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Lower CAN Identifier of a receive CAN L-PDU for identifier range definition, in which all CAN Ids shall pass the software filtering.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00629]

BSW Module		BSW Context	
CanIf		CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg/CanIfHrhRangeCfg	
BSW Parameter		BSW Type	
CanIfHrhRangeRxPduRangeCanIdType		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
Specifies whether a configured Range of CAN Ids shall only consider standard CAN Ids or extended CAN Ids.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00644]

BSW Module		BSW Context	
CanIf		CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg/CanIfHrhRangeCfg	
BSW Parameter		BSW Type	
CanIfHrhRangeRxPduUpperCanId		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Upper CAN Identifier of a receive CAN L-PDU for identifier range definition, in which all CAN Ids shall pass the software filtering.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00630]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg	
BSW Parameter	BSW Type	
CanIfHrhSoftwareFilter	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>Selects the hardware receive objects by using the HRH range/list from CAN Driver configuration to define, for which HRH a software filtering has to be performed at during receive processing.</p> <p>True: Software filtering is enabled False: Software filtering is enabled</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00632]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg	
BSW Parameter	BSW Type	
CanIfHthCfg	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>This container contains parameters related to each HTH.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00258]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHthCfg	
BSW Parameter	BSW Type	
CanIfHthCanCtrlIdRef	ECUC-REFERENCE-DEF	
BSW Description		
<p>Reference to controller Id to which the HTH belongs to. A controller can contain one or more HTHs.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00625]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHthCfg	
BSW Parameter		BSW Type
CanIfHthIdSymRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
<p>The parameter refers to a particular HTH object in the CanDrv configuration (see CanHardwareObject or CanXLHardware Object).</p> <p>CanIf receives the following information of the CanDrv module by this reference:</p> <ul style="list-style-type: none"> <li>• CanHandleType (only for CAN 2.0 and CAN FD)</li> <li>• CanObjectId</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00627]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg	
BSW Parameter		BSW Type
CanIfMaxBufferSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Maximum total size of all Tx buffers. This parameter is needed only in case of post-build loadable implementation using static memory allocation.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00828]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg	
BSW Parameter		BSW Type
CanIfMaxRxPduCfg		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Maximum number of Pdus. This parameter is needed only in case of post-build loadable implementation using static memory allocation.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00830]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg	
BSW Parameter		BSW Type
CanIfMaxTxPduCfg		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of Pdus. This parameter is needed only in case of post-build loadable implementation using static memory allocation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00829]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg	
BSW Parameter		BSW Type
CanIfRxPduCfg		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) of each receive CAN L-PDU. The SHORT-NAME of "CanIfRxPduConfig" container itself represents the symbolic name of Receive L-PDU. This L-SDU produces a meta data item of type CAN_ID_32, and, depending on CanIfRxPduXLPParams, meta data items of type PRIORITYID_16, VLAN_16, SDUTYPE_8, and ACCEPTANCEFIELD_32.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00249]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter		BSW Type
CanIfRxPduCanId		ECUC-INTEGER-PARAM-DEF
BSW Description		
CAN Identifier of Receive CAN L-PDUs used by the CAN Interface. Exa: Software Filtering. This parameter is used if exactly one Can Identifier is assigned to the Pdu. If a range is assigned then the CanIfRxPduCanIdRange parameter shall be used. Range: 11 Bit For Standard CAN Identifier ... 29 Bit For Extended CAN identifier		
Template Description		
This attribute is used to define the identifier this frame shall use on the CAN network.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.identifier		
Mapping Rule		Mapping Type
1:1 mapping		full







Mapping Status	ECUC Parameter ID
valid	[ECUC_CanIf_00598]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter		BSW Type
CanIfRxPduCanIdMask		ECUC-INTEGER-PARAM-DEF
BSW Description		
Identifier mask which denotes relevant bits in the CAN Identifier. This parameter defines a CAN Identifier range in an alternative way to CanIfRxPduCanIdRange. It identifies the bits of the configured CAN Identifier that must match the received CAN Identifier. Range: 11 bits for Standard CAN Identifier, 29 bits for Extended CAN Identifier.		
Template Description		
Identifier mask which denotes the relevant bits in the CAN Identifier. Together with the identifier, this parameter defines a CAN identifier range.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.rxMask		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00822]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter		BSW Type
CanIfRxPduCanIdRange		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Optional container that allows to map a range of CAN Ids to one PduId.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00743]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduCanIdRange	
BSW Parameter		BSW Type
CanIfRxPduCanIdRangeLowerCanId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Lower CAN Identifier of a receive CAN L-PDU for identifier range definition, in which all CAN Ids are mapped to one PduId.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanIf_00745]

BSW Module	BSW Context
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduCanIdRange
BSW Parameter	BSW Type
CanIfRxPduCanIdRangeUpperCanId	ECUC-INTEGER-PARAM-DEF
BSW Description	
Upper CAN Identifier of a receive CAN L-PDU for identifier range definition, in which all CAN Ids are mapped to one PduId.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanIf_00744]

BSW Module	BSW Context
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg
BSW Parameter	BSW Type
CanIfRxPduCanIdType	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
CAN Identifier of receive CAN L-PDUs used by the CAN Driver for CAN L-PDU reception.	
Template Description	
<p><b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.</p> <p><b>CanFrameTriggering.canFrameRxBehavior:</b> Defines which CAN protocol shall be expected for frame reception.</p>	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameRxBehavior	
Mapping Rule	Mapping Type
Mapping fully defined by all permutations of canAddressingMode and canFrameRxBehavior.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanIf_00596]

BSW Module	BSW Context
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduCanIdType
BSW Parameter	BSW Type
EXTENDED_CAN	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	





CAN 2.0 or CAN FD frame with extended identifier (29 bits)	
<b>Template Description</b>	
<p><b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.</p> <p><b>CanFrameTriggering.canFrameRxBehavior:</b> Defines which CAN protocol shall be expected for frame reception.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameRxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "extended" and canFrameRxBehavior = "any".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
EXTENDED_FD_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN FD frame with extended identifier (29 bits)	
<b>Template Description</b>	
<p><b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.</p> <p><b>CanFrameTriggering.canFrameRxBehavior:</b> Defines which CAN protocol shall be expected for frame reception.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameRxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "extended" and canFrameRxBehavior = "canFd".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
EXTENDED_NO_FD_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN 2.0 frame with extended identifier (29 bits)	
<b>Template Description</b>	





<b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.	
<b>CanFrameTriggering.canFrameRxBehavior:</b> Defines which CAN protocol shall be expected for frame reception.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameRxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "extended" and canFrameRxBehavior = "can20".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
STANDARD_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN 2.0 or CAN FD frame with standard identifier (11 bits)	
<b>Template Description</b>	
<b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.	
<b>CanFrameTriggering.canFrameRxBehavior:</b> Defines which CAN protocol shall be expected for frame reception.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameRxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "standard" and canFrameRxBehavior = "any".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
STANDARD_FD_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN FD frame with standard identifier (11 bits)	
<b>Template Description</b>	
<b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.	
<b>CanFrameTriggering.canFrameRxBehavior:</b> Defines which CAN protocol shall be expected for frame reception.	





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameRxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "standard" and canFrameRxBehavior = "canFd".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
STANDARD_NO_FD_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN 2.0 frame with standard identifier (11 bits)	
<b>Template Description</b>	
<p><b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.</p> <p><b>CanFrameTriggering.canFrameRxBehavior:</b> Defines which CAN protocol shall be expected for frame reception.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameRxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "standard" and canFrameRxBehavior = "can20".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIfRxPduDataLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Data length of the received CAN L-PDUs used by the CAN Interface. This information is used for Data Length Check. Additionally it might specify the valid bits in case of the discrete DLC for CAN FD L-PDUs > 8 bytes. The data area size of a CAN L-PDU can have a range from 0 to 2048 bytes.	
<b>Template Description</b>	
The used length (in bytes) of the referencing frame. Should not be confused with a static byte length reserved for each frame by some platforms (e.g. FlexRay). The frameLength of zero bytes is allowed. Please consider also TPS_SYST_02255.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Frame.frameLength	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00599]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter	BSW Type	
CanIfRxPduDataLengthCheck	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter switches the message specific data length check. True: Data length check will be executed during the reception of this PDU. False: No data length check will be executed during the reception of this PDU.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00846]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter	BSW Type	
CanIfRxPduHrhIdRef	ECUC-REFERENCE-DEF	
BSW Description		
The HRH to which Rx L-PDU belongs to, is referred through this parameter.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00602]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter	BSW Type	
CanIfRxPduId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
ECU wide unique, symbolic handle for receive CAN L-SDU. It shall fulfill ANSI/AUTOSAR definitions for constant defines. Range: 0..max. number of defined CanRxPduIds		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00597]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter		BSW Type
CanIfRxPduReadData		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables and disables the Rx buffering for reading of received L-SDU data. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00600]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter		BSW Type
CanIfRxPduReadNotifyStatus		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables and disables receive indication for each receive CAN L-SDU for reading its notification status. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00595]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter		BSW Type
CanIfRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00601]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter	BSW Type	
CanIfRxPduUserRxIndicationName	ECUC-FUNCTION-NAME-DEF	
BSW Description		
<p>This parameter defines the name of the &lt;User_RxIndication&gt;. This parameter depends on the parameter CanIfRxPduUserRxIndicationUL. If CanIfRxPduUserRxIndicationUL equals CAN_TP, CAN_NM, PDUR, XCP, CAN_TSYN, J1939NM or J1939TP, the name of the &lt;User_RxIndication&gt; is fixed. If CanIfRxPduUserRxIndicationUL equals CDD, the name of the &lt;User_RxIndication&gt; is selectable.</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00530]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter	BSW Type	
CanIfRxPduUserRxIndicationUL	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
<p>This parameter defines the upper layer (UL) module to which the indication of the successfully received CANRXPDUID has to be routed via &lt;User_RxIndication&gt;. This &lt;User_RxIndication&gt; has to be invoked when the indication of the configured CANRXPDUID will be received by an Rx indication event from the CAN Driver module. If no upper layer (UL) module is configured, no &lt;User_RxIndication&gt; has to be called in case of an Rx indication event of the CANRXPDUID from the CAN Driver module.</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00529]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg	
BSW Parameter	BSW Type	
CanIfRxPduXLParams	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>CAN XL parameters. Identifies the CanIfRxPduCfg as CAN XL PDU.</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00860]	



BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduXLParams	
BSW Parameter		BSW Type
CanIfXLAcceptanceField		ECUC-INTEGER-PARAM-DEF
BSW Description		
Acceptance field of a CAN XL message.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00864]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduXLParams	
BSW Parameter		BSW Type
CanIfXLPriorityId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Priority ID of a CAN XL message.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00861]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduXLParams	
BSW Parameter		BSW Type
CanIfXLSduType		ECUC-INTEGER-PARAM-DEF
BSW Description		
SDU type of a CAN XL message.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00863]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfRxPduXLParams	
BSW Parameter		BSW Type





CanIfXLVcid	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Virtual CAN network ID of a CAN XL message.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00862]

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIfTTRxFrameTriggering	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
CanIfTTRxFrameTriggering is specified in the SWS TTCAN Interface and defines Frame trigger for TTCAN reception. This container is only included and valid if TTCAN is supported by the controller, enabled (see CanIfSupportTTCAN, ECUC_CanIf_00675), and a joblist is used for reception.	
<b>Template Description</b>	
CAN specific attributes to the FrameTriggering	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00003]

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfTTRxFrameTriggering
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIfTTRxHwObjectTriggerIdRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
This parameter refers to a particular TTCAN hardware receive object Trigger of a hardware object in the TTCAN Driver Module, which is referred via plain CAN parameter CANIF_HRH_HANDLETYPE_REF. This parameter is only configurable if a joblist is enabled by parameter CanIfTTJobList.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00133]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfRxPduCfg/CanIfTTRxFrameTriggering	
BSW Parameter		BSW Type
CanTTRxJoblistTimeMark		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the point in time, when the joblist execution function (JLEF) shall be called for the referenced rx trigger. Value is given in cycle time. This parameter is only configurable if a joblist is enabled by parameter CanIfTTJobList.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00136]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg	
BSW Parameter		BSW Type
CanIfTxPduCfg		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) of a transmit CAN L-PDU. It has to be configured as often as a transmit CAN L-PDU is needed.		
The SHORT-NAME of "CanIfTxPduConfig" container represents the symbolic name of Transmit L-PDU.		
This L-SDU consumes a meta data item of type CAN_ID_32, and, depending on CanIfTxPduXLParams, meta data items of type PRIORITYID_16, VLAN_16, SDUTYPE_8, and ACCEPTANCEFIELD_32.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00248]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTTTxFrameTriggering		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
CanIfTTTxFrameTriggering is specified in the SWS TTCAN Interface and defines Frame trigger for TTCAN transmission.		
This container is only included and valid if TTCAN is supported by the controller, enabled (see CanIfSupportTTCAN, ECUC_CanIf_00675), and a joblist is used.		
Template Description		
CAN specific attributes to the FrameTriggering		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00142]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTTTxFrameTriggering	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTTTxHwObjectTriggerIdRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
This parameter refers to a particular TTCAN hardware transmit object Trigger of a hardware object in the TTCAN Driver Module, which is referred via plain CAN parameter CANIF_HTH_HANDLETYPE_REF. This parameter is only configurable if a joblist is enabled by parameter CanIfTTTJobList.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanIf_00128]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTTTxFrameTriggering	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTTTxJoblistTimeMark		ECUC-INTEGGER-PARAM-DEF
<b>BSW Description</b>		
Defines the point in time, when the joblist execution function (JLEF) shall be called for the referenced tx frame trigger. Value is given in cycle time. This parameter is only configurable if a joblist is enabled by parameter CanIfTTTJobList.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanIf_00132]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTxPduBufferRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Configurable reference to a CanIf buffer configuration.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00831]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTxPduCanId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
CAN Identifier of transmit CAN L-PDUs used by the CAN Driver for CAN L-PDU transmission. Range: 11 Bit For Standard CAN Identifier ... 29 Bit For Extended CAN identifier The CAN Identifier may be omitted for dynamic transmit L-PDUs and CAN XL PDUs.		
<b>Template Description</b>		
This attribute is used to define the identifier this frame shall use on the CAN network.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.identifier		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanIf_00592]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTxPduCanIdMask		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Identifier mask which denotes relevant bits in the CAN Identifier. This parameter may be used to keep parts of the CAN Identifier of dynamic transmit L-PDUs static. Range: 11 bits for Standard CAN Identifier, 29 bits for Extended CAN Identifier.		
<b>Template Description</b>		
Identifier mask which denotes static bits in the CAN identifier. The other bits can be set dynamically.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.txMask		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanIf_00823]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTxPduCanIdType		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Type of CAN Identifier of the transmit CAN L-PDU used by the CAN Driver module for CAN L-PDU transmission.		
<b>Template Description</b>		





<b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.	
<b>CanFrameTriggering.canFrameTxBehavior:</b> Defines which CAN protocol shall be used for frame transmission.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameTxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Mapping fully defined by all permutations of canAddressingMode and canFrameTxBehavior.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00590]

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
EXTENDED_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN frame with extended identifier (29 bits)	
<b>Template Description</b>	
<b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.	
<b>CanFrameTriggering.canFrameTxBehavior:</b> Defines which CAN protocol shall be used for frame transmission.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameTxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "extended" and canFrameRxBehavior = "can20".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
EXTENDED_FD_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN FD frame with extended identifier (29 bits)	
<b>Template Description</b>	
<b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.	
<b>CanFrameTriggering.canFrameTxBehavior:</b> Defines which CAN protocol shall be used for frame transmission.	





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameTxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "extended" and canFrameRxBehavior = "canFd".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
STANDARD_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN frame with standard identifier (11 bits)	
<b>Template Description</b>	
<p><b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.</p> <p><b>CanFrameTriggering.canFrameTxBehavior:</b> Defines which CAN protocol shall be used for frame transmission.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameTxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "standard" and canFrameRxBehavior = "can20".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduCanIdType
<b>BSW Parameter</b>	<b>BSW Type</b>
STANDARD_FD_CAN	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
CAN FD frame with standard identifier (11 bits)	
<b>Template Description</b>	
<p><b>CanFrameTriggering.canAddressingMode:</b> The CAN protocol supports two types of frame formats. The standard frame format uses 11-bit identifiers and is defined in the CAN specification 2.0 A. Additionally the extended frame format allows 29-bit identifiers and is defined in the CAN specification 2.0 B.</p> <p><b>CanFrameTriggering.canFrameTxBehavior:</b> Defines which CAN protocol shall be used for frame transmission.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canAddressingMode, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.canFrameTxBehavior	
<b>Mapping Rule</b>	<b>Mapping Type</b>
canAddressingMode = "standard" and canFrameRxBehavior = "canFd".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter	BSW Type	
CanIfTxPdulId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
ECU wide unique, symbolic handle for transmit CAN L-SDU. Range: 0..max. number of CanTxPduls		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00591]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter	BSW Type	
CanIfTxPduPnFilterPdu	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
If CanIfPublicPnFilterSupport is enabled, by this parameter PDUs could be configured which will pass the CanIfPnFilter. If there is no CanIfTxPduPnFilterPdu configured per controller, the corresponding controller applies no CanIfPnFilter.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00773]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter	BSW Type	
CanIfTxPduReadNotifyStatus	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables and disables transmit confirmation for each transmit CAN L-SDU for reading its notification status. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00589]	



BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00603]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTxPduTriggerTransmit		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Determines if or if not CanIf shall use the trigger transmit API for this PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00840]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTxPduTruncation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/disables truncation of PDUs that exceed the configured size.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00845]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTxPduType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the type of each transmit CAN L-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00593]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTxPduUserTriggerTransmitName		ECUC-FUNCTION-NAME-DEF
BSW Description		
<p>This parameter defines the name of the &lt;User_TriggerTransmit&gt;. This parameter depends on the parameter CanIfTxPduUserTxConfirmationUL. If CanIfTxPduUserTxConfirmationUL equals CAN_TP, CAN_NM, PDUR, XCP, CAN_TSYN, J1939NM or J1939TP, the name of the &lt;User_TriggerTransmit&gt; is fixed. If CanIfTxPduUserTxConfirmationUL equals CDD, the name of the &lt;User_TxConfirmation&gt; is selectable.</p> <p>Please be aware that this parameter depends on the same parameter as CanIfTxPduUserTxConfirmationName. It shall be clear which upper layer is responsible for that PDU.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00842]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTxPduUserTxConfirmationName		ECUC-FUNCTION-NAME-DEF
BSW Description		
<p>This parameter defines the name of the &lt;User_TxConfirmation&gt;. This parameter depends on the parameter CanIfTxPduUserTxConfirmationUL. If CanIfTxPduUserTxConfirmationUL equals CAN_TP, CAN_NM, PDUR, XCP, CAN_TSYN, J1939NM or J1939TP, the name of the &lt;User_TxConfirmation&gt; is fixed. If CanIfTxPduUserTxConfirmationUL equals CDD, the name of the &lt;User_TxConfirmation&gt; is selectable.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanIf_00528]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTxPduUserTxConfirmationUL		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
<p>This parameter defines the upper layer (UL) module to which the confirmation of the successfully transmitted CanTxPduId has to be routed via the &lt;User_TxConfirmation&gt;. This &lt;User_TxConfirmation&gt; has to be invoked when the confirmation of the configured CanTxPduId will be received by a Tx confirmation event from the CAN Driver module. If no upper layer (UL) module is configured, no &lt;User_TxConfirmation&gt; has to be called in case of a Tx confirmation event of the CanTxPduId from the CAN Driver module.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00527]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg	
BSW Parameter		BSW Type
CanIfTxPduXLParams		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>CAN XL parameters. Identifies the CanIfTxPduCfg as CAN XL PDU.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00855]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduXLParams	
BSW Parameter		BSW Type
CanIfXLAcceptanceField		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Acceptance field of a CAN XL message.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanIf_00859]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduXLPARAMS	
BSW Parameter		BSW Type
CanIfXLPriorityId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Priority ID of a CAN XL message.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00856]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduXLPARAMS	
BSW Parameter		BSW Type
CanIfXLSduType		ECUC-INTEGER-PARAM-DEF
BSW Description		
SDU type of a CAN XL message.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00858]

BSW Module	BSW Context	
CanIf	CanIf/CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduXLPARAMS	
BSW Parameter		BSW Type
CanIfXLVcid		ECUC-INTEGER-PARAM-DEF
BSW Description		
Virtual CAN network ID of a CAN XL message.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00857]

BSW Module		BSW Context	
CanIf		CanIf	
BSW Parameter		BSW Type	
CanIfPrivateCfg		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the private configuration (parameters) of the CAN Interface.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00245]

BSW Module		BSW Context	
CanIf		CanIf/CanIfPrivateCfg	
BSW Parameter		BSW Type	
CanIfFixedBuffer		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
This parameter defines if the buffer element length shall be fixed to 8 Bytes for buffers to which only PDUs < 8 Bytes are assigned.			
TRUE: Minimum buffer element length is fixed to 8 Bytes. FALSE: Buffer element length depends on the configured length of the referenced global PDUs (see ECUC_EcuC_00078).			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00827]

BSW Module		BSW Context	
CanIf		CanIf/CanIfPrivateCfg	
BSW Parameter		BSW Type	
CanIfPrivateDataLengthCheck		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Selects whether Data Length Check is supported.			
True: Enabled False: Disabled			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00617]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPrivateCfg	
BSW Parameter	BSW Type	
CanIfPrivateSoftwareFilterType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
<p>Selects the desired software filter mechanism for reception only. Each implemented software filtering method is identified by this enumeration number.</p> <p>Range: Types implemented software filtering methods</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00619]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPrivateCfg	
BSW Parameter	BSW Type	
CanIfSupportTTCAN	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>Defines whether TTCAN is supported.</p> <p>TRUE: TTCAN is supported. FALSE: TTCAN is not supported, only normal CAN communication is possible.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00675]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPrivateCfg	
BSW Parameter	BSW Type	
CanIfTTGeneral	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>CanIfTTGeneral is specified in the SWS TTCAN Interface and defines if and in which way TTCAN is supported.</p> <p>This container is only included and valid if TTCAN is supported by the controller, enabled (see CanIfSupportTTCAN, ECUC_CanIf_00675), and used.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00005]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPrivateCfg/CanIfTTGeneral	
BSW Parameter		BSW Type
CanIfTTDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00835]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPrivateCfg/CanIfTTGeneral/CanIfTTDemEventParameterRefs	
BSW Parameter		BSW Type
CANIF_TT_E_JLE_SYNC		ECUC-REFERENCE-DEF
BSW Description		
Reference to configured DEM event to report that the JLEF lost synchronization to the local time of the TTCAN controller.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00836]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPrivateCfg/CanIfTTGeneral	
BSW Parameter		BSW Type
CanIfTTJoblist		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines whether TTCAN is processed via a joblist. TRUE: Joblist is used. FALSE: No joblist is used. This parameter is only configurable if TTCAN is enabled by parameter CanIfSupportTTCAN.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00126]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPrivateCfg/CanIfTTGeneral	
BSW Parameter		BSW Type
CanIfTTMaxIsrDelay		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the maximum delay for the execution of the joblist execution function JLEF. This parameter is only configurable if a joblist is enabled by parameter CanIfTTJobList.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00127]

BSW Module	BSW Context	
CanIf	CanIf	
BSW Parameter		BSW Type
CanIfPublicCfg		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the public configuration (parameters) of the CAN Interface.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00246]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfBusMirroringSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enable support for Bus Mirroring.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00847]



BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00614]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfEnableSecurityEventReporting		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00848]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfGlobalTimeSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/Disables the Global Time APIs used when hardware timestamping is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00854]

BSW Module		BSW Context	
CanIf		CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type	
CanIfMetaDataSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enable support for dynamic ID handling using L-SDU MetaData.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00824]

BSW Module		BSW Context	
CanIf		CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type	
CanIfPublicCddHeaderFile		ECUC-STRING-PARAM-DEF	
BSW Description			
Defines header files for callback functions which shall be included in case of CDDs. Range of characters is 1.. 32.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00671]

BSW Module		BSW Context	
CanIf		CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type	
CanIfPublicHandleTypeEnum		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
This parameter is used to configure the Can_HwHandleType. The Can_HwHandleType represents the hardware object handles of a CAN hardware unit. For CAN hardware units with more than 255 HW objects the extended range shall be used (UINT16).			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanIf_00742]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfPublicMultipleDrvSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Selects support for multiple CAN Drivers. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00612]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfPublicPnSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Selects support of Partial Network features in CanIf. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00772]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfPublicReadRxPduDataApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables the API CanIf_ReadRxPduData() for reading received L-SDU data. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00607]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter	BSW Type	
CanIfPublicReadRxPduNotifyStatusApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables and disables the API for reading the notification status of receive L-PDUs. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00608]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter	BSW Type	
CanIfPublicReadTxPduNotifyStatusApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables and disables the API for reading the notification status of transmit L-PDUs. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00609]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter	BSW Type	
CanIfPublicSetDynamicTxIdApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables and disables the API for reconfiguration of the CAN Identifier for each Transmit L-PDU. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanIf_00610]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfPublicTxBuffering		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables and disables the buffering of transmit L-PDUs (rejected by the CanDrv) within the CAN Interface module. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00618]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfPublicTxConfirmPollingSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable the API to poll for Tx Confirmation state.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00733]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type
CanIfPublicWakeupCheckValidByNM		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If enabled, only NM messages shall validate a detected wake-up event in CanIf. If disabled, all received messages corresponding to a configured Rx PDU shall validate such a wake-up event. This parameter depends on CanIfPublicWakeupCheckValidSupport and shall only be configurable, if it is enabled. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00741]

BSW Module		BSW Context	
CanIf		CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type	
CanIfPublicWakeupCheckValidSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Selects support for wake up validation True: Enabled False: Disabled			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanIf_00611]	

BSW Module		BSW Context	
CanIf		CanIf/CanIfPublicCfg	
BSW Parameter		BSW Type	
CanIfSecurityEventRefs		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Container for the references to IdsMEvent elements representing the security events that the CanIf module shall report to the IdsM in case the corresponding security related event occurs (and if CanIfEnableSecurityEventReporting is set to "true"). The standardized security events in this container can be extended by vendor-specific security events.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanIf_00849]	

BSW Module		BSW Context	
CanIf		CanIf/CanIfPublicCfg/CanIfSecurityEventRefs	
BSW Parameter		BSW Type	
CANIF_SEV_ERRORSTATE_BUSOFF		ECUC-REFERENCE-DEF	
BSW Description			
The CAN controller transitioned to state busoff.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanIf_00853]	

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg/CanIfSecurityEventRefs	
BSW Parameter	BSW Type	
CANIF_SEV_ERRORSTATE_PASSIVE	ECUC-REFERENCE-DEF	
BSW Description		
A reception related error was detected. Depending on the context data this could indicate suspicious CAN activity.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00852]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg/CanIfSecurityEventRefs	
BSW Parameter	BSW Type	
CANIF_SEV_RX_ERROR_DETECTED	ECUC-REFERENCE-DEF	
BSW Description		
A reception related error was detected. Depending on the context data this could indicate suspicious CAN activity.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00851]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg/CanIfSecurityEventRefs	
BSW Parameter	BSW Type	
CANIF_SEV_TX_ERROR_DETECTED	ECUC-REFERENCE-DEF	
BSW Description		
A transmission related error was detected. Depending on the context data this could indicate suspicious CAN activity.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00850]

BSW Module	BSW Context	
CanIf	CanIf/CanIfPublicCfg	
BSW Parameter	BSW Type	





CanIfSetBaudrateApi	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Configuration parameter to enable/disable the CanIf_SetBaudrate API to change the baud rate of a CAN Controller. If this parameter is set to true the CanIf_SetBaudrate API shall be supported. Otherwise the API is not supported.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00838]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfPublicCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTriggerTransmitSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables the CanIf_TriggerTransmit API at Pre-Compile-Time. Therefore, this parameter defines if there shall be support for trigger transmit transmissions. TRUE: Enabled FALSE: Disabled		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanIf_00844]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfPublicCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTxOfflineActiveSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Determines whether TxOffLineActive feature (see SWS_CANIF_00072) is supported by CanIf. True: Enabled False: Disabled		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanIf_00837]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfPublicCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>







CanIfVersionInfoApi	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables and disables the API for reading the version information about the CAN Interface. True: Enabled False: Disabled	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00613]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfPublicCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfWakeupSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables the CanIf_CheckWakeup API at Pre-Compile-Time. Therefore, this parameter defines if there shall be support for wake-up. TRUE: Enabled FALSE: Disabled		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanIf_00843]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanIfTrcvDrvCfg		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the configuration (parameters) of all addressed CAN transceivers by each underlying CAN Transceiver Driver module. For each CAN transceiver Driver a separate instance of this container shall be provided.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanIf_00273]

<b>BSW Module</b>	<b>BSW Context</b>	
CanIf	CanIf/CanIfTrcvDrvCfg	
<b>BSW Parameter</b>		<b>BSW Type</b>





CanIfTrcvCfg	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container contains the configuration (parameters) of one addressed CAN transceiver by the underlying CAN Transceiver Driver module. For each CAN transceiver a separate instance of this container has to be provided.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00587]

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfTrcvDrvCfg/CanIfTrcvCfg
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIfTrcvCanTrcvRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
This parameter references to the logical handle of the underlying CAN transceiver from the CAN transceiver driver module to be served by the CAN Interface module. Range: 0..max. number of underlying supported CAN transceivers	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00605]

<b>BSW Module</b>	<b>BSW Context</b>
CanIf	CanIf/CanIfTrcvDrvCfg/CanIfTrcvCfg
<b>BSW Parameter</b>	<b>BSW Type</b>
CanIfTrcvId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter abstracts from the CAN Transceiver Driver specific parameter Transceiver. Each transceiver of all connected CAN Transceiver Driver modules shall be assigned to one specific TransceiverId of the CanIf. Range: 0..number of configured transceivers of all CAN Transceiver Driver modules	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanIf_00654]

BSW Module	BSW Context	
CanIf	CanIf/CanIfTrcvDrvCfg/CanIfTrcvCfg	
BSW Parameter	BSW Type	
CanIfTrcvWakeupSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter defines if a respective transceiver of the referenced CAN Transceiver Driver modules is queriable for wake up events. True: Enabled False: Disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanIf_00606]

### C.2.3 Can Transceiver Mapping

BSW Module	BSW Context	
CanTrcv	CanTrcv	
BSW Parameter	BSW Type	
CanTrcvConfigSet	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR CanTrcv module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00173]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet	
BSW Parameter	BSW Type	
CanTrcvChannel	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container gives CAN transceiver driver information about a single CAN transceiver (channel).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00143]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter	BSW Type	
CanTrcvAccess	ECUC-CHOICE-CONTAINER-DEF	
BSW Description		
Container gives CanTrcv Driver information about access to a single CAN transceiver.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00101]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvAccess	
BSW Parameter	BSW Type	
CanTrcvDioAccess	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container gives CAN transceiver driver information about accessing ports and port pins. In addition relation between CAN transceiver hardware pin names and Dio port access information is given. If a CAN transceiver hardware has no Dio interface, there is no instance of this container.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00145]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvAccess/CanTrcvDioAccess	
BSW Parameter	BSW Type	
CanTrcvDioChannelAccess	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container gives DIO channel access by single Can transceiver channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00157]

BSW Module		BSW Context	
CanTrcv		CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvAccess/CanTrcvDioAccess/CanTrcvDioChannelAccess	
BSW Parameter		BSW Type	
CanTrcvDioSymNameRef		ECUC-CHOICE-REFERENCE-DEF	
BSW Description			
Choice Reference to a DIO Port, DIO Channel or DIO Channel Group. This reference replaces the CANTRCV_DIO_PORT_SYM_NAME, CANTRCV_DIO_CHANNEL_SYM_NAME and CANTRCV_DIO_GROUP_SYM_NAME references in the CanTrcv SWS.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanTrcv_-00149]

BSW Module		BSW Context	
CanTrcv		CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvAccess/CanTrcvDioAccess/CanTrcvDioChannelAccess	
BSW Parameter		BSW Type	
CanTrcvHardwareInterfaceName		ECUC-STRING-PARAM-DEF	
BSW Description			
CAN transceiver hardware interface name. It is typically the name of a pin. From a Dio point of view it is either a port, a single channel or a channel group. Depending on this fact either CANTRCV_DIO_PORT_SYMBOLIC_NAME or CANTRCV_DIO_CHANNEL_SYMBOLIC_NAME or CANTRCV_DIO_CHANNEL_GROUP_SYMBOLIC_NAME shall reference a Dio configuration. The CAN transceiver driver implementation description shall list up this name for the appropriate CAN transceiver hardware.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanTrcv_-00150]

BSW Module		BSW Context	
CanTrcv		CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvAccess	
BSW Parameter		BSW Type	
CanTrcvSpiAccess		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Container gives CAN transceiver driver information about accessing Spi. If a CAN transceiver hardware has no Spi interface, there is no instance of this container.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_-00183]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvAccess/CanTrcvSpiAccess	
BSW Parameter		BSW Type
CanTrcvSpiSequence		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container gives CAN transceiver driver information about one SPI sequence. One SPI sequence used by CAN transceiver driver is in exclusive use for it. No other driver is allowed to access this sequence. CAN transceiver driver may use one sequence to access n CAN transceiver hardware chips of the same type or n sequences are used to access one single CAN transceiver hardware chip. If a CAN transceiver hardware has no SPI interface, there is no instance of this container.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00144]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvAccess/CanTrcvSpiAccess/CanTrcvSpiSequence	
BSW Parameter		BSW Type
CanTrcvSpiAccessSynchronous		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter is used to define whether the access to the Spi sequence is synchronous or asynchronous. true: SPI access is synchronous. false: SPI access is asynchronous.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00176]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvAccess/CanTrcvSpiAccess/CanTrcvSpiSequence	
BSW Parameter		BSW Type
CanTrcvSpiSequenceName		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Spi sequence configuration container.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTrcv_-00151]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter		BSW Type
CanTrcvChannelEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the CAN transceiver channel to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the CAN transceiver driver is mapped to.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTrcv_-00194]	

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter		BSW Type
CanTrcvChannelId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Unique identifier of the CAN Transceiver Channel.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTrcv_-00155]	

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter		BSW Type
CanTrcvChannelUsed		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Shall the related CAN transceiver channel be used?		
Template Description		





M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_-00096]

BSW Module	BSW Context	
BSW Parameter	BSW Type	
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
CanTrcvControlsPowerSupply	ECUC-BOOLEAN-PARAM-DEF	
Is ECU power supply controlled by this transceiver? TRUE = Controlled by transceiver. FALSE = Not controlled by transceiver.		
valid	[ECUC_CanTrcv_-00097]	

BSW Module	BSW Context	
BSW Parameter	BSW Type	
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
CanTrcvDemEventParameterRefs	ECUC-PARAM-CONF-CONTAINER-DEF	
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
valid	[ECUC_CanTrcv_-00188]	

BSW Module	BSW Context	
BSW Parameter	BSW Type	
BSW Description		
Template Description		
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvDemEventParameterRefs	
CANTRCV_E_BUS_ERROR	ECUC-REFERENCE-DEF	
Reference to the DemEventParameter which shall be issued when bus error has occurred.		







M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTrcv_-00189]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter		BSW Type
CanTrcvHwPnSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Indicates whether the HW supports the selective wake-up function TRUE = Selective wakeup feature is supported by the transceiver FALSE = Selective wakeup functionality is not available in transceiver		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTrcv_-00160]	

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter		BSW Type
CanTrcvIcuChannelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the IcuChannel to enable/disable the interrupts for wakeups.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTrcv_-00185]	

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter		BSW Type
CanTrcvInitState		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
State of CAN transceiver after call to CanTrcv_Init.		





Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_00146]

BSW Module	BSW Context
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel
BSW Parameter	BSW Type
CanTrcvMaxBaudrate	ECUC-INTEGER-PARAM-DEF
BSW Description	
Indicates the data transfer rate in kbps. Maximum data transfer rate in kbps for transceiver hardware type. Only used for validation purposes. This value can be used by configuration tools.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_00147]

BSW Module	BSW Context
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel
BSW Parameter	BSW Type
CanTrcvPartialNetwork	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Container gives CAN transceiver driver information about the configuration of Partial Networking functionality.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_00161]

BSW Module	BSW Context
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork
BSW Parameter	BSW Type
CanTrcvBaudRate	ECUC-INTEGER-PARAM-DEF
BSW Description	
Indicates the data transfer rate in kbps.	





Template Description	
Channels speed in bits/s.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationCluster.baudrate	
Mapping Rule	Mapping Type
CanTrcvBaudRate = SystemTemplate baudrate is in bps, so divide it by 1000 to get kbps	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_-00169]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork	
BSW Parameter		BSW Type
CanTrcvBusErrFlag		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Indicates if the Bus Error (BUSERR) flag is managed by the BSW. This flag is set if a bus failure is detected by the transceiver. TRUE = Supported by transceiver and managed by BSW. FALSE = Not managed by BSW.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00171]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork	
BSW Parameter		BSW Type
CanTrcvPnCanIdsExtended		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Indicates whether extended or standard ID is used. TRUE = Extended Can identifier is used. FALSE = Standard Can identifier is used		
Template Description		
Defines whether pncWakeupCanId and pncWakeupCanIdMask shall be interpreted as extended or standard CAN ID.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanCommunicationConnector.pncWakeupCanIdExtended		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00164]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork	
BSW Parameter		BSW Type
CanTrcvPnEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Indicates whether the selective wake-up function is enabled or disabled in HW. TRUE = Selective wakeup feature is enabled in the transceiver hardware FALSE = Selective wakeup feature is disabled in the transceiver hardware		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00172]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork	
BSW Parameter		BSW Type
CanTrcvPnFrameCanId		ECUC-INTEGER-PARAM-DEF
BSW Description		
CAN ID of the Wake-up Frame (WUF).		
Template Description		
CAN Identifier used to configure the CAN Transceiver for partial network wakeup.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanCommunicationConnector.pncWakeupCanId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00163]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork	
BSW Parameter		BSW Type
CanTrcvPnFrameCanIdMask		ECUC-INTEGER-PARAM-DEF
BSW Description		
ID Mask for the selective activation of the transceiver. It is used to enableFrame Wake-up (WUF) on a group of IDs.		
Template Description		
Bit mask for CAN Identifier used to configure the CAN Transceiver for partial network wakeup.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanCommunicationConnector.pncWakeupCanIdMask		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00162]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork	
BSW Parameter		BSW Type
CanTrcvPnFrameDataMaskSpec		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Defines data payload mask to be used on the received payload in order to determine if the transceiver must be woken up by the received Wake-up Frame (WUF).		
Template Description		
Bit mask for CAN Payload used to configure the CAN Transceiver for partial network wakeup.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanCommunicationConnector.pncWakeupDataMask		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00165]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork/CanTrcvPnFrameDataMaskSpec	
BSW Parameter		BSW Type
CanTrcvPnFrameDataMask		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the n byte (Byte0 = LSB) of the data payload mask to be used on the received payload in order to determine if the transceiver must be woken up by the received Wake-up Frame (WUF).		
Template Description		
Bit mask for CAN Payload used to configure the CAN Transceiver for partial network wakeup.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanCommunicationConnector.pncWakeupDataMask		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00166]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork/CanTrcvPnFrameDataMaskSpec	
BSW Parameter		BSW Type
CanTrcvPnFrameDataMaskIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
holds the position n in frame of the mask-part		
Template Description		
Bit mask for CAN Payload used to configure the CAN Transceiver for partial network wakeup.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanCommunicationConnector.pncWakeupDataMask		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_-00167]

BSW Module	BSW Context
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork
BSW Parameter	BSW Type
CanTrcvPnFrameDlc	ECUC-INTEGER-PARAM-DEF
BSW Description	Data Length of the Wake-up Frame (WUF).
Template Description	Data Length of the remote data frame used to configure the CAN Transceiver for partial network wakeup in Bytes.
M2 Parameter	SystemTemplate::Fibex::Fibex4Can::CanTopology::CanCommunicationConnector.pncWakeupDlc
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_-00168]

BSW Module	BSW Context
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanTrcvPartialNetwork
BSW Parameter	BSW Type
CanTrcvPowerOnFlag	ECUC-BOOLEAN-PARAM-DEF
BSW Description	Description: Indicates if the Power On Reset (POR) flag is available and is managed by the transceiver. TRUE = Supported by Hardware. FALSE = Not supported by Hardware
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTrcv_-00170]

BSW Module	BSW Context
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel
BSW Parameter	BSW Type
CanTrcvPorWakeupSourceRef	ECUC-REFERENCE-DEF
BSW Description	





Symbolic name reference to specify the wakeup sources that should be used in the calls to EcuM_SetWakeupEvent as specified in [SWS_CanTrcv_00183] and [SWS_CanTrcv_00184]. This reference is mandatory if the HW supports POR or SYSERR flags	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTrcv_00181]

<b>BSW Module</b>	<b>BSW Context</b>
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTrcvSyserrWakeupSourceRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Symbolic name reference to specify the wakeup sources that should be used in the calls to EcuM_SetWakeupEvent as specified in [SWS_CanTrcv_00183] and [SWS_CanTrcv_00184]. This reference is mandatory if the HW supports POR or SYSERR flags	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTrcv_00182]

<b>BSW Module</b>	<b>BSW Context</b>
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTrcvWakeupByBusUsed	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Is wake up by bus supported? If CAN transceiver hardware does not support wake up by bus value is always FALSE. If CAN transceiver hardware supports wake up by bus value is TRUE or FALSE depending whether it is used or not. TRUE = Is used. FALSE = Is not used.	
<b>Template Description</b>	
Defines whether the ECU shall be woken up by this CommunicationController. TRUE: wake up is possible FALSE: wake up is not supported Note: If wakeUpByControllerSupported is set to TRUE the feature shall be supported by both hardware and basic software.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationController.wakeUpByControllerSupported	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTrcv_00148]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter		BSW Type
CanTrcvWakeupSourceRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a wakeup source in the EcuM configuration. This reference is only needed if CanTrcvWakeupByBusUsed is true.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00177]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel	
BSW Parameter		BSW Type
CanXLTrcvChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is specified in the SWS CAN XL Transceiver Driver and represents a CAN XL transceiver channel. If this container is present, the CAN transceiver will provide the extended CanXLTrcv API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00195]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet/CanTrcvChannel/CanXLTrcvChannel	
BSW Parameter		BSW Type
CanXLTrcvEthEcuPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the Ethernet Interface access to the CAN XL transceiver channel to zero or one ECUC partitions.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00196]



BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet	
BSW Parameter		BSW Type
CanTrcvSPICommRetries		ECUC-INTEGER-PARAM-DEF
BSW Description		
Indicates the maximum number of communication retries in case of a failed SPI communication (applies both to timed out communication and to errors/NACK in the response data). If configured value is '0', no retry is allowed (communication is expected to succeed at first try).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00175]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvConfigSet	
BSW Parameter		BSW Type
CanTrcvSPICommTimeout		ECUC-INTEGER-PARAM-DEF
BSW Description		
Indicates the maximum time allowed to the CanTrcv for replying (either positively or negatively) to a SPI command. Timeout is configured in milliseconds. Timeout value of '0' means that no specific timeout is to be used by CanTrcv and the communication is executed at the best of the SPI HW capacity.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00174]

BSW Module	BSW Context	
CanTrcv	CanTrcv	
BSW Parameter		BSW Type
CanTrcvGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container gives CAN transceiver driver basic information.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00090]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type
CanTrcvDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00152]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type
CanTrcvEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the CAN transceiver driver to zero or multiple ECUC partitions to make the modules API available in this partition. The module will operate as an independent instance in each of the partitions.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00193]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type
CanTrcvIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00184]

BSW Module		BSW Context	
CanTrcv		CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type	
CanTrcvMainFunctionDiagnosticsPeriod		ECUC-FLOAT-PARAM-DEF	
BSW Description			
This parameter describes the period for cyclic call to CanTrcv_MainFunctionDiagnostics. Unit is seconds.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanTrcv_-00187]

BSW Module		BSW Context	
CanTrcv		CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type	
CanTrcvMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF	
BSW Description			
This parameter describes the period for cyclic call to CanTrcv_MainFunction. Unit is seconds.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanTrcv_-00186]

BSW Module		BSW Context	
CanTrcv		CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type	
CanTrcvTimerType		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
Type of the Time Service Predefined Timer.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_CanTrcv_-00190]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type
CanTrcvVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches version information API on and off. If switched off, function need not be present in compiled code.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00153]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type
CanTrcvWaitTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Wait time for transceiver state changes in seconds.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00191]

BSW Module	BSW Context	
CanTrcv	CanTrcv/CanTrcvGeneral	
BSW Parameter		BSW Type
CanTrcvWakeUpSupport		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Informs whether wake up is supported by polling or not supported. In case no wake up is supported by the hardware, setting has to be NOT_SUPPORTED. Only in the case of wake up supported by polling, function CanTrcv_MainFunction has to be present and to be invoked by the scheduler.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTrcv_-00154]

## C.2.4 CanNm Mapping

BSW Module	BSW Context	
CanNm	CanNm	
BSW Parameter		BSW Type
CanNmGlobalConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the global configuration parameter of the CanNm. The parameters and the parameters of the sub containers shall be mapped to the C data type CanNm_ConfigType (for parameters where it is possible) which is passed to the CanNm_Init function.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00001]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter		BSW Type
CanNmBusLoadReductionEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling busload reduction support.		
Template Description		
Enables busload reduction support		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmClusterCoupling.nmBusLoadReductionEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00040]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter		BSW Type
CanNmBusSynchronizationEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling bus synchronization support. This feature is required for gateway nodes only.		
Template Description		
Enables bus synchronization support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmBusSynchronizationEnabled		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_00006]

<b>BSW Module</b>	<b>BSW Context</b>	
CanNm	CanNm/CanNmGlobalConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanNmChannelConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the channel specific configuration parameter of the CanNm.		
<b>Template Description</b>		
Can specific NmCluster attributes		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::CanNmCluster		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container for each existing CanNmCluster.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanNm_00017]

<b>BSW Module</b>	<b>BSW Context</b>	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanNmActiveWakeupBitEnabled		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables/Disables the handling of the Active Wakeup Bit in the CanNm module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanNm_00084]

<b>BSW Module</b>	<b>BSW Context</b>	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanNmAllNmMessagesKeepAwake		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Specifies if CanNm drops irrelevant NM PDUs.		
false: Only NM PDUs with a PNI bit = true and containing a PN request for this ECU triggers the standard RX indication handling true: Every NM PDU triggers the standard RX indication handling		





Template Description	
<p>Specifies if Nm drops irrelevant NM PDUs.</p> <p>false: Only NM PDUs with a Partial Network Information Bit (PNI) = true and containing a Partial Network request for this ECU trigger the standard RX indication handling and thus keep the ECU awake</p> <p>true: Every NM PDU triggers the standard RX indication handling and keeps the ECU awake</p>	
M2 Parameter	
SystemTemplate::NetworkManagement::CanNmNode.allNmMessagesKeepAwake	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00068]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
BSW Parameter	BSW Type
CanNmBusLoadReductionActive	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
This parameter defines if bus load reduction for the respective NM channel is active or not.	
Template Description	
It determines if bus load reduction for the respective CanNm channel is active or not.	
M2 Parameter	
SystemTemplate::NetworkManagement::CanNmCluster.nmBusloadReductionActive	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00042]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
BSW Parameter	BSW Type
CanNmCarWakeUpBitPosition	ECUC-INTEGER-PARAM-DEF
BSW Description	
Specifies the Bit position of the CWU within the NM PDU.	
Template Description	
Specifies the bit position of the CarWakeUp within the NmPdu.	
M2 Parameter	
SystemTemplate::NetworkManagement::CanNmCluster.nmCarWakeUpBitPosition	
Mapping Rule	Mapping Type
The position of the Car Wakeup bit in the Ecuc is defined by the configuration parameters CanNmCarWakeUpBytePosition and CanNmCarWakeUpBitPosition (position in wakeUpByte). In the SysT the position is described only by the bit position in the NmMessage.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00075]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter	BSW Type	
CanNmCarWakeUpBytePosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Specifies the Byte position of the CWU within the NM PDU.		
Template Description		
Specifies the bit position of the CarWakeUp within the NmPdu.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmCluster.nmCarWakeUpBitPosition		
Mapping Rule		Mapping Type
The position of the Car Wakeup bit in the Ecuc is defined by the configuration parameters CanNmCarWakeUpBytePosition and CanNmCarWakeUpBitPosition (position in wakeUpByte). In the SysT the position is described only by the bit position in the NM PDU.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00076]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter	BSW Type	
CanNmCarWakeUpFilterEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
If CWU filtering is supported, only the CWU bit within the NM PDU with source node identifier CanNmCarWakeUpFilterNodeId is considered as CWU request. FALSE - CWU filtering is not supported TRUE - CWU filtering is supported		
Template Description		
If this attribute is set to true the CareWakeUp filtering is supported.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmNode.nmCarWakeUpFilterEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00077]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter	BSW Type	
CanNmCarWakeUpFilterNodeId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Source node identifier for CWU filtering. If CWU filtering is supported, only the CWU bit within the NM PDU with source node identifier CanNmCarWakeUpFilterNodeId is considered as CWU request.		
Template Description		
Source node identifier for CarWakeUp filtering.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmCluster.nmCarWakeUpFilterNodeId		







Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00078]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
BSW Parameter	BSW Type
CanNmCarWakeUpRxEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Enables or disables support of CarWakeUp bit evaluation in received NM PDUs. FALSE - CarWakeUp not supported TRUE - CarWakeUp supported	
Template Description	
If set to true this attribute enables the support of CarWakeUp bit evaluation in received NmPdus.	
M2 Parameter	
SystemTemplate::NetworkManagement::CanNmNode.nmCarWakeUpRxEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00074]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
BSW Parameter	BSW Type
CanNmComMNetworkHandleRef	ECUC-REFERENCE-DEF
BSW Description	
This reference points to the unique channel defined by the ComMChannel and provides access to the unique channel index value in ComMChannelId.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00018]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
BSW Parameter	BSW Type
CanNmDynamicPncToChannelMappingEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	





Channel-specific parameter to enable the dynamic PNC-to-channel-mapping feature. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled	
<b>Template Description</b>	
Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.dynamicPncToChannelMappingEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 Mapping. If M2 Parameter not defined then do not create CanNmDynamicPncToChannelMappingEnabled	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_-00093]

<b>BSW Module</b>	<b>BSW Context</b>	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanNmImmediateNmCycleTime		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Defines the immediate NM PDU cycle time in seconds which is used for CanNmImmediateNmTransmissions NM PDU transmissions.		
<b>Template Description</b>		
Defines the immediate NmPdu cycle time in seconds which is used for nmImmediateNmTransmissions NmPdu transmissions. This parameter is only valid if CanNmImmediateNmTransmissions is greater one.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::CanNmCluster.nmImmediateNmCycleTime		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanNm_-00057]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanNmImmediateNmTransmissions		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Defines the number of immediate NM PDUs which shall be transmitted. If the value is zero no immediate NM PDUs are transmitted. The cycle time of immediate NM PDUs is defined by CanNmImmediateNmCycleTime.		
<b>Template Description</b>		
Defines the number of immediate NmPdus which shall be transmitted. If the value is zero no immediate NmPdus are transmitted. The cycle time of immediate NmPdus is defined by nmImmediateNmCycleTime.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::CanNmCluster.nmImmediateNmTransmissions		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00056]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmMsgCycleOffset		ECUC-FLOAT-PARAM-DEF
BSW Description		
Time offset in the periodic transmission node. It determines the start delay of the transmission. Specified in seconds.		
Template Description		
Node specific time offset in the periodic transmission node. It determines the start delay of the transmission. Specified in seconds.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmNode.nmMsgCycleOffset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00029]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmMsgCycleTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Period of a NM PDU in seconds. It determines the periodic rate in the "periodic transmission mode with bus load reduction" and is the basis for transmit scheduling in the "periodic transmission mode without bus load reduction".		
Template Description		
Period of a NmPdu in seconds. It determines the periodic rate in the periodic transmission mode with bus load reduction and is the basis for transmit scheduling in the periodic transmission mode without bus load reduction.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmCluster.nmMsgCycleTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00028]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmMsgReducedTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Node specific bus cycle time in the periodic transmission mode with bus load reduction. Specified in seconds.		





Template Description	
Node specific bus cycle time in the periodic transmission mode with bus load reduction. Specified in seconds.	
M2 Parameter	
SystemTemplate::NetworkManagement::CanNmNode.nmMsgReducedTime	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00043]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmMsgTimeoutTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
When using Partial Network and this timeout is defined then CanNm monitors that a NM-PDU is transmitted successfully within this Transmission Timeout Time and provides an error notification otherwise.		
Template Description		
Timeout of an NmPdu in seconds. It determines how long the NM shall wait with notification of transmission failure while communication errors occur on the bus.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmCluster.nmMessageTimeoutTime		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanNm_-00030]	

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmNodeDetectionEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Precompile time switch to enable the node detection feature.		
Template Description		
Enables the Request Repeat Message Request support. Only valid if nmNodeIdEnabled is set to true.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmNodeDetectionEnabled		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanNm_-00088]	

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter	BSW Type	
CanNmNodeId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Node identifier of local node.		
Template Description		
Node identifier of local NmNode. Shall be unique in the NmCluster.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.nmNodeId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00031]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter	BSW Type	
CanNmNodeIdEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the source node identifier.		
Template Description		
Enables the source node identifier.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmNodeIdEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00090]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter	BSW Type	
CanNmPduCbvPosition	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines the position of the control bit vector within the NM PDU.		
The value of the parameter represents the location of the Control Bit Vector in the NM PDU (CanNmPduByte0 means byte 0, CanNmPduByte1 means byte 1, CanNmPduOff means source node identifier is not part of the NM PDU)		
ImplementationType: CanNm_PduPositionType		
Template Description		
Defines the position of the control bit vector within the NmPdu (Byte position). If this attribute is not configured, the Control Bit Vector is not used.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmCluster.nmCbvPosition		





Mapping Rule	Mapping Type
Derive byte position from nmCbvPosition attribute. If this optional attribute is missing set CANNM_PDU_OFF as value.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00026]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
BSW Parameter	BSW Type
CanNmPduNidPosition	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
<p>Defines the position of the source node identifier within the NM PDU.</p> <p>The value of the parameter represents the location of the source node identifier in the NM PDU (CANNM_PDU_BYTE_0 means byte 0, CANNM_PDU_BYTE_1 means byte 1, CANNM_PDU_OFF means source node identifier is not part of the NM PDU)</p> <p>ImplementationType: CanNm_PduPositionType</p>	
Template Description	
<p>Defines the byte position of the source node identifier within the NmPdu. If this attribute is not configured, the Node Identification is not used.</p>	
M2 Parameter	
SystemTemplate::NetworkManagement::CanNmCluster.nmNidPosition	
Mapping Rule	Mapping Type
Derive byte position from nmNidPosition attribute. If this optional attribute is missing set CANNM_PDU_OFF as value.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00025]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
BSW Parameter	BSW Type
CanNmPnEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
<p>Enables or disables support of partial networking.</p> <p>false: Partial networking Range not supported true: Partial networking supported</p>	
Template Description	
<p>Defines whether this NmCluster contributes to the partial network mechanism.</p>	
M2 Parameter	
SystemTemplate::NetworkManagement::NmCluster.nmPncParticipation	
Mapping Rule	Mapping Type
If NmCluster.nmPncParticipation has the value "true" or is not defined then CanNmPnEnabled shall be set to true.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00066]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmPnHandleMultipleNetworkRequests		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if CanNm performs an additional transition from Network Mode to Repeat Message State (true) or not (false).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00073]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmRemoteSleepIndTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout for Remote Sleep Indication. It defines the time in seconds how long it shall take to recognize that all other nodes are ready to sleep.		
Template Description		
Timeout for Remote Sleep Indication in seconds. It defines the time how long it shall take to recognize that all other nodes are ready to sleep.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmCluster.nmRemoteSleepIndicationTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00023]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmRepeatMessageTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout for Repeat Message State. It defines the time in seconds how long the NM shall stay in the Repeat Message State.		
Template Description		
Timeout for Repeat Message State in seconds. Defines the time how long the NM shall stay in the Repeat Message State.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmCluster.nmRepeatMessageTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00022]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmRepeatMsgIndEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enable/disable the notification that a RepeatMessageRequest bit has been received.		
Template Description		
Switch for enabling the Repeat Message Bit Indication.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmRepeatMsgIndEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00089]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmRxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is used to configure the Rx PDU properties that are used for the CanNm Channel.		
Template Description		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.rxNmPdu		
Mapping Rule		Mapping Type
Create container for each NmPdu that is received on the regarded Nm cluster		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00038]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig/CanNmRxPdu	
BSW Parameter		BSW Type
CanNmRxPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the Rx PDU ID of the CanIf L-PDU range that is associated with this CanNm channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00054]



BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig/CanNmRxPdu	
BSW Parameter		BSW Type
CanNmRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the global PDU that is used by this CanNm channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00039]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmStayInPbsEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If this parameter is disabled Prepare Bus-Sleep Mode is left after CanNmWaitBusSleepTime. If this parameter is enabled Prepare Bus-Sleep Mode can only be left if ECU is powered off or any restart reason applies.		
Template Description		
Switch for enabling the Repeat Message Bit Indication.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmRepeatMsgIndEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00092]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
BSW Parameter		BSW Type
CanNmSynchronizedPncShutdownEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if CanNm handle PN shutdown messages to support a synchronized PNC shutdown across a PN topology. This is only used for ECUs in the role of a top-level PNC coordinator or intermediate PNC coordinator. Thus, the PNC gateway functionality is enabled and therefore ERA calculation is used.		
FALSE: synchronized PNC shutdown is disabled		
TRUE: synchronized PNC shutdown is enabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_-00097]

<b>BSW Module</b>	<b>BSW Context</b>	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanNmTimeoutTime		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Network Timeout for NM PDUs. It denotes the time in seconds how long the NM shall stay in the Ready Sleep State before transition into the Prepare Bus-Sleep Mode is initiated.		
<b>Template Description</b>		
Network Timeout for NmPdus in seconds It denotes the time how long the CanNm shall stay in the Network Mode before transition into Prepare Bus-Sleep Mode shall take place.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::CanNmCluster.nmNetworkTimeout		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanNm_-00020]

<b>BSW Module</b>	<b>BSW Context</b>	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanNmTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the CanNmTxConfirmationPduld and the CanNmTxPduRef.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::NmNode.txNmPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container for each NmPdu that is transmitted on the regarded Nmcluster		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanNm_-00036]

<b>BSW Module</b>	<b>BSW Context</b>	
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig/CanNmTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanNmTxConfirmationPduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Handle Id to be used by the Lower Layer to confirm the transmission of the CanNmTxPdu to the LowerLayer.		





Template Description	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_-00048]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig/CanNmTxPdu
BSW Parameter	BSW Type
CanNmTxPduRef	ECUC-REFERENCE-DEF
BSW Description	
The reference to the common PDU structure.	
Template Description	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_-00037]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
BSW Parameter	BSW Type
CanNmUserDataTxPdu	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This optional container is used to configure the UserNm PDU. This container is only available if CanNmComUserDataSupport is enabled.	
Template Description	
An ISignalToIPduMapping describes the mapping of ISignals to ISignalPdus and defines the position of the ISignal within an ISignalPdu.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalToIPduMapping	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each NmPdu that aggregates the ISignalToIPduMapping element. The configuration for these Pdus (e.g. Transfer Properties) shall be derived from this information.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_-00045]

BSW Module	BSW Context
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig/CanNmUserDataTxPdu
BSW Parameter	BSW Type





CanNmTxUserDataPduId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter defines the Handle ID of the NM User Data I-PDU.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_-00047]

<b>BSW Module</b>	<b>BSW Context</b>
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig/CanNmUserDataTxPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
CanNmTxUserDataPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the NM User Data I-PDU in the global PDU collection.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_-00046]

<b>BSW Module</b>	<b>BSW Context</b>
CanNm	CanNm/CanNmGlobalConfig/CanNmChannelConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
CanNmWaitBusSleepTime	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Timeout for bus calm down phase. It denotes the time in seconds how long the NM shall stay in the Prepare Bus-Sleep Mode before transition into Bus-Sleep Mode shall take place.	
<b>Template Description</b>	
Timeout for bus calm down phase in seconds. It denotes the time how long the CanNm shall stay in the Prepare Bus-Sleep Mode before transition into Bus-Sleep Mode shall take place.	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::CanNmCluster.nmWaitBusSleepTime	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanNm_-00021]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter		BSW Type
CanNmComControlEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling the Communication Control support.		
Template Description		
Enables the Communication Control support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmComControlEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00013]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter		BSW Type
CanNmComUserDataSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Preprocessor switch for enabling the Tx path of Com User Data. Use case: Setting of NMUserData via SWC.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu.iSignalToIPduMapping		
Mapping Rule		Mapping Type
If an NmPdu contains user data defined via the existence of NmPdu.iSignalToIPduMapping and is consequently handled via the PduR and Com this attribute shall be set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00044]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter		BSW Type
CanNmCoordinatorSyncSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/disables the coordinator synchronization support.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00080]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00002]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmDynamicPncToChannelMappingSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Precompile time switch to enable the dynamic PNC-to-channel-mapping handling. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled		
Template Description		
Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.dynamicPncToChannelMappingEnabled		
Mapping Rule		Mapping Type
If at least one dynamicPncToChannelMappingEnabled attribute is defined and if at least one CommunicationConnector of the EcuInstance has dynamicPncToChannelMappingEnabled set to true, then CanNmDynamicPncToChannelMappingSupport shall be set to true. Otherwise CanNmDynamicPncToChannelMappingSupport shall be set to false.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00094]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmGlobalPnSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling partial networking support globally.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00086]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmImmediateRestartEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the immediate transmission of a NM PDU upon bus-communication request in Prepare-Bus-Sleep mode.		
Template Description		
Enables the asynchronous transmission of a CanNm PDU upon bus-communication request in Prepare-Bus-Sleep mode.		
M2 Parameter		
SystemTemplate::NetworkManagement::CanNmClusterCoupling.nmImmediateRestartEnabled		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanNm_-00009]	

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmImmediateTxconfEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enable/disable the immediate tx confirmation.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanNm_-00041]	

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Call cycle in seconds of CanNm_MainFunction.		





Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanNm_-00032]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter		BSW Type
CanNmPassiveModeEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling support of the Passive Mode.		
Template Description		
Enables support of the Passive Mode. The passive mode is configurable per channel.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.nmPassiveModeEnabled		
Mapping Rule		Mapping Type
1:1 mapping. nmNode.nmPassiveModeEnabled shall always have the same value in all Nm Clusters with the same bus protocol in the scope of one EcuInstance.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00010]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter		BSW Type
CanNmPduRxIndicationEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling the PDU Rx Indication.		
Template Description		
Switch for enabling the PDU Rx Indication.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmPduRxIndicationEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00011]



BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmRemoteSleepIndEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling remote sleep indication support. This feature is required for gateway nodes only.		
Template Description		
Switch for enabling remote sleep indication support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmRemoteSleepIndEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_ - 00055]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmStateChangeIndEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the CAN NM state change notification.		
Template Description		
Enables the CAN Network Management state change notification.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmStateChangeIndEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_ - 00012]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter	BSW Type	
CanNmUserDataEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling user data support.		
Template Description		
Switch for enabling user data support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmUserDataEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_ - 00004]

BSW Module	BSW Context	
CanNm	CanNm/CanNmGlobalConfig	
BSW Parameter		BSW Type
CanNmVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling version info API support.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanNm_-00003]

## C.2.5 CanTp Mapping

BSW Module	BSW Context	
CanTp	CanTp	
BSW Parameter		BSW Type
CanTpConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR CanTp module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00290]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig	
BSW Parameter		BSW Type
CanTpChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters of the CanTp channel.		
Template Description		
Configuration parameters of the CanTp channel.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpChannel		
Mapping Rule		Mapping Type





Create Container ifor each CanTpChannel that exist in ECU Extract.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00288]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel	
BSW Parameter		BSW Type
CanTpRxNSdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The following parameters needs to be configured for each CAN N-SDU that the CanTp module receives via the CanTp Channel. This N-SDU produces meta data items of type SOURCE_ADDRESS_16, TARGET_ADDRESS_16 and ADDRESS_EXTENSION_8.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection. <a href="#">tpSdu</a>		
Mapping Rule		Mapping Type
Create container for each existing CanTpConnection that contains a reference to an N-SDU that is received.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00137]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
BSW Parameter		BSW Type
CanTpBs		ECUC-INTEGER-PARAM-DEF
BSW Description		
Sets the number of N-PDUs the CanTp receiver allows the sender to send, before waiting for an authorization to continue transmission of the following N-PDUs.For further details on this parameter value see ISO 15765-2 specification.		
Template Description		
The maximum number of N-PDUs the CanTp receiver allows the sender to send, before waiting for an authorization to continue transmission of the following N-PDUs. For further details on this parameter value see ISO 15765-2 specification. Note: For reasons of buffer length, the CAN Transport Layer can adapt the BS value within the limit of this maximum BS		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection. <a href="#">maxBlockSize</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00276]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
BSW Parameter		BSW Type





CanTpNAe	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container is required for each RxNSdu and TxNSdu with AddressingFormat CANTP_MIXED or CANTP_MIXED29BIT.	
<b>Template Description</b>	
Declares which communication addressing mode is supported.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::CanTpConnection.addressingFormat	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container if addressingFormat is set to "mixed".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00284]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpNAe	
<b>BSW Parameter</b>	<b>BSW Type</b>	
CanTpNAe	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
This parameter contains the transport protocol address extension value.		
<b>Template Description</b>		
If the mixed addressing format is used, this parameter contains the transport protocol address extension value.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpAddress.tpAddressExtensionValue		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
The CanTpConnection contains a reference to the SDU and a relation to the TpNode that contains the TpAddressExtension.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTp_-00285]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
CanTpNSa	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
This container is required for each RxNSdu and TxNSdu with RxTaType CANTP_PHYSICAL and CanTpAddressingFormat CANTP_EXTENDED. When DynIdSupport is enabled, this container is also required for each TxNSdu with AddressingFormat CANTP_NORMALFIXED or CANTP_MIXED29BIT. When DynIdSupport is enabled and GenericConnectionSupport is not enabled, this container is also required for each RxNSdu with AddressingFormat CANTP_NORMALFIXED or CANTP_MIXED29BIT.		
<b>Template Description</b>		
Declares which communication addressing mode is supported.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpConnection.addressingFormat		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create container if addressingFormat is set to "extended".	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00253]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpNSa	
BSW Parameter	BSW Type	
CanTpNSa	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter contains the transport protocol source address value.		
Template Description		
An ECUs TP address on the referenced channel. This represents the diagnostic Address.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpAddress. <a href="#">tpAddress</a>		
Mapping Rule		Mapping Type
The CanTPConnection contains a reference to the SDU and a relation to the TpNode that contains the TpAddress.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00254]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
BSW Parameter	BSW Type	
CanTpNTa	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container is required for each RxNSdu and TxNSdu with AddressingFormat CANTP_EXTENDED. When DynIdSupport is enabled, this container is also required for each RxNSdu with AddressingFormat CANTP_NORMALFIXED or CANTP_MIXED29BIT. When DynIdSupport is enabled and GenericConnectionSupport is not enabled, this container is also required for each TxNSdu with AddressingFormat CANTP_NORMALFIXED or CANTP_MIXED29BIT.		
Template Description		
Declares which communication addressing mode is supported.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection. <a href="#">addressingFormat</a>		
Mapping Rule		Mapping Type
Create container if addressingFormat is set to "extended".		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00139]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpNTa	
BSW Parameter	BSW Type	
CanTpNTa	ECUC-INTEGER-PARAM-DEF	
BSW Description		





This parameter contains the transport protocol target address value.	
<b>Template Description</b>	
An ECUs TP address on the referenced channel. This represents the diagnostic Address.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::CanTpAddress. <a href="#">tpAddress</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The CanTPConnection contains a reference to the SDU and a relation to the TpNode that contains the TpAddress.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00255]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpNar		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Value in seconds of the N_Ar timeout. N_Ar is the time for transmission of a CAN frame (any N_PDU) on the receiver side.		
<b>Template Description</b>		
This attribute states the timeout between the PDU transmit request of the Transport Layer to the Can Interface and the corresponding confirmation of the Can Interface on the receiver side (for FC or AF). Specified in seconds.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpNode. <a href="#">timeoutAr</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00277]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpNbr		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Value in seconds of the performance requirement for (N_Br + N_Ar). N_Br is the elapsed time between the receiving indication of a FF or CF or the transmit confirmation of a FC, until the transmit request of the next FC.		
<b>Template Description</b>		
Value in seconds of the performance requirement for (N_Br + N_Ar). N_Br is the elapsed time between the receiving indication of a FF or CF or the transmit confirmation of a FC, until the transmit request of the next FC.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpConnection. <a href="#">timeoutBr</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00245]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
BSW Parameter	BSW Type	
CanTpNcr	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Value in seconds of the N_Cr timeout. N_Cr is the time until reception of the next Consecutive Frame N_PDU.		
Template Description		
This parameter defines the timeout value for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side. Specified in seconds.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection.timeoutCr		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00279]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
BSW Parameter	BSW Type	
CanTpRxAddressingFormat	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Declares which communication addressing mode is supported for this RxNSdu. Definition of Enumeration values: CanTpStandard to use normal addressing format. CanTpExtended to use extended addressing format. CanTpMixed to use mixed 11 bit addressing format. CanTpNormalFixed to use normal fixed addressing format. CanTpMixed29Bit to use mixed 29 bit addressing format.		
Template Description		
Declares which communication addressing mode is supported.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection.addressingFormat		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00281]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
BSW Parameter	BSW Type	
CanTpRxNPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Used for grouping of the ID of a PDU and the Reference to a PDU. This N-PDU consumes a meta data item of type CAN_ID_32.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection.dataPdu		





Mapping Rule	Mapping Type
Create container if the CanTpConnection contains a reference to a DataNpdu that is received by the regarded ECU.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00256]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpRxNPdu
BSW Parameter	BSW Type
CanTpRxNPduld	ECUC-INTEGER-PARAM-DEF
BSW Description	
<p>The N-PDU identifier attached to the RxNsdu is identified by CanTpRxNSduld.</p> <p>Each RxNsdu identifier is linked to only one SF/FF/CF N-PDU identifier. Nevertheless, in the case of extended or mixed addressing format, the same N-PDU identifier can be used for several N-SDU identifiers. The distinction is made by the N_TA or N_AE value (first data byte of SF or FF frames).</p>	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00258]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpRxNPdu
BSW Parameter	BSW Type
CanTpRxNPduRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a Pdu in the COM-Stack.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00257]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu
BSW Parameter	BSW Type
CanTpRxNSduld	ECUC-INTEGER-PARAM-DEF
BSW Description	







Unique identifier user by the upper layer to call CanTp_CancelReceive, CanTp_ChangeParameter and CanTp_Read Parameter.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00301]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpRxNSduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a Pdu in the COM-Stack.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTp_-00241]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpRxPaddingActivation		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defines if the received frame uses padding or not. This parameter is restricted to 8 bytes N-PDUs. Definition of enumeration values: CanTpOn: The N-PDU received uses padding for SF, FC and the last CF. (N-PDU length is always >= 8 bytes in case of CAN 2.0) CanTpOff: The N-PDU received does not use padding for SF, FC and the last CF. (N-PDU length is dynamic - any valid DLC value). Note: The mandatory mapping to the next higher valid DLC value for N-PDUs with a length > 8 bytes is not affected by this parameter.		
<b>Template Description</b>		
This specifies whether or not Sfs, FCs and the last CF shall be padded to 8 bytes length in case it contains less payload. true: The N-PDU received uses padding for SF, FC and the last CF. (N-PDU length is always 8 bytes) false: The N-PDU received does not use padding for SF, CF and the last CF. (N-PDU length is dynamic)		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpConnection. <a href="#">paddingActivation</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00249]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu
BSW Parameter	BSW Type
CanTpRxTaType	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
Declares the communication type of this Rx N-SDU.	
Template Description	
Network Target Address type.	
M2 Parameter	
SystemTemplate::TransportProtocols::CanTpConnection.taType	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00250]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpRxTaType
BSW Parameter	BSW Type
CANTP_FUNCTIONAL	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Functional request type	
Template Description	
Functional request type	
M2 Parameter	
SystemTemplate::TransportProtocols::NetworkTargetAddressType.functional	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpRxTaType
BSW Parameter	BSW Type
CANTP_PHYSICAL	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Physical request type	
Template Description	
Physical request type	
M2 Parameter	





SystemTemplate::TransportProtocols::NetworkTargetAddressType. <a href="#">physical</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu
BSW Parameter	BSW Type
CanTpRxWftMax	ECUC-INTEGER-PARAM-DEF
BSW Description	
<p>This parameter indicates how many Flow Control wait N-PDUs can be consecutively transmitted by the receiver. It is local to the node and is not transmitted inside the FC protocol data unit.</p> <p>CanTpRxWftMax is used to avoid sender nodes being potentially hooked-up in case of a temporarily reception inability on the part of the receiver nodes, whereby the sender could be waiting continuously.</p>	
Template Description	
This attribute defines the maximum number of flow control PDUs that can be consecutively be transmitted by a receiver.	
M2 Parameter	
SystemTemplate::TransportProtocols::CanTpNode. <a href="#">maxFcWait</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00251]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu
BSW Parameter	BSW Type
CanTpSTmin	ECUC-FLOAT-PARAM-DEF
BSW Description	
<p>Sets the duration of the minimum time the CanTp sender shall wait between the transmissions of two CF N-PDUs.</p> <p>For further details on this parameter value see ISO 15765-2 specification.</p>	
Template Description	
Sets the duration of the minimum time the CanTp sender shall wait between the transmissions of two CF N-PDUs.	
M2 Parameter	
SystemTemplate::TransportProtocols::CanTpNode. <a href="#">stMin</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00252]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu	
BSW Parameter	BSW Type	
CanTpTxFcNPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Used for grouping of the ID of a PDU and the Reference to a PDU. This N-PDU produces a meta data item of type CAN_ID_32.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection.flowControlPdu		
Mapping Rule		Mapping Type
Create container if the CanTpConnection contains a reference to a FlowControlNPdu that is received by the regarded ECU.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00259]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpTxFcNPdu	
BSW Parameter	BSW Type	
CanTpTxFcNPduConfirmationPduId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Handle Id to be used by the CanIf to confirm the transmission of the CanTpTxFcNPdu to the CanIf module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00287]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpRxNSdu/CanTpTxFcNPdu	
BSW Parameter	BSW Type	
CanTpTxFcNPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a Pdu in the COM-Stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00260]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel	
BSW Parameter	BSW Type	
CanTpTxNSdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
The following parameters needs to be configured for each CAN N-SDU that the CanTp module transmits via the CanTp Channel. This N-SDU consumes meta data items of type SOURCE_ADDRESS_16, TARGET_ADDRESS_16 and ADDRESS_EXTENSION_8.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection. <a href="#">tpSdu</a>		
Mapping Rule		Mapping Type
Create container for each existing CanTpConnection that contains a reference to an N-SDU that is transmitted.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00138]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
BSW Parameter	BSW Type	
CanTpNAe	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container is required for each RxNSdu and TxNSdu with AddressingFormat CANTP_MIXED or CANTP_MIXED29BIT.		
Template Description		
Declares which communication addressing mode is supported.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection. <a href="#">addressingFormat</a>		
Mapping Rule		Mapping Type
Create container if addressingFormat is set to "mixed".		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00284]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu/CanTpNAe	
BSW Parameter	BSW Type	
CanTpNAe	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter contains the transport protocol address extension value.		
Template Description		
If the mixed addressing format is used, this parameter contains the transport protocol address extension value.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpAddress. <a href="#">tpAddressExtensionValue</a>		
Mapping Rule		Mapping Type





The CanTPConnection contains a reference to the SDU and a relation to the TpNode that contains the TpAddressExtension.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00285]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpNSa		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container is required for each RxNSdu and TxNSdu with RxTaType CANTP_PHYSICAL and CanTpAddressingFormat CANTP_EXTENDED. When DynIdSupport is enabled, this container is also required for each TxNSdu with AddressingFormat CANTP_NORMALFIXED or CANTP_MIXED29BIT. When DynIdSupport is enabled and GenericConnectionSupport is not enabled, this container is also required for each RxNSdu with AddressingFormat CANTP_NORMALFIXED or CANTP_MIXED29BIT.		
<b>Template Description</b>		
Declares which communication addressing mode is supported.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpConnection.addressingFormat		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container if addressingFormat is set to "extended".		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00253]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu/CanTpNSa	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpNSa		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter contains the transport protocol source address value.		
<b>Template Description</b>		
An ECUs TP address on the referenced channel. This represents the diagnostic Address.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpAddress.tpAddress		
<b>Mapping Rule</b>		<b>Mapping Type</b>
The CanTPConnection contains a reference to the SDU and a relation to the TpNode that contains the TpAddress.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00254]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>





CanTpNTa	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container is required for each RxNSdu and TxNSdu with AddressingFormat CANTP_EXTENDED. When DynIdSupport is enabled, this container is also required for each RxNSdu with AddressingFormat CANTP_NORMALFIXED or CANTP_MIXED29BIT. When DynIdSupport is enabled and GenericConnectionSupport is not enabled, this container is also required for each TxNSdu with AddressingFormat CANTP_NORMALFIXED or CANTP_MIXED29BIT.	
<b>Template Description</b>	
Declares which communication addressing mode is supported.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::CanTpConnection.addressingFormat	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container if addressingFormat is set to "extended".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00139]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu/CanTpNTa	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpNTa		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter contains the transport protocol target address value.		
<b>Template Description</b>		
An ECUs TP address on the referenced channel. This represents the diagnostic Address.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpAddress.tpAddress		
<b>Mapping Rule</b>		<b>Mapping Type</b>
The CanTPConnection contains a reference to the SDU and a relation to the TpNode that contains the TpAddress.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00255]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpNas		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Value in second of the N_As timeout. N_As is the time for transmission of a CAN frame (any N_PDU) on the part of the sender.		
<b>Template Description</b>		
This attribute states the timeout between the PDU transmit request for the first PDU of the group used in the current connection of the Transport Layer to the Can Interface and the corresponding confirmation of the Can Interface (when having sent the last PDU of the group used in this connection) on the sender side (SF-x, FF-x, CF or FC (in case of Transmit Cancellation)). Specified in seconds.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::CanTpNode.timeoutAs		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00263]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu
BSW Parameter	BSW Type
CanTpNbs	ECUC-FLOAT-PARAM-DEF
BSW Description	Value in seconds of the N_Bs timeout. N_Bs is the time of transmission until reception of the next Flow Control N_PDU.
Template Description	This parameter defines the timeout for waiting for an FC or AF on the sender side in an 1:1 connection. Specified in seconds.
M2 Parameter	SystemTemplate::TransportProtocols::CanTpConnection.timeoutBs
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00264]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu
BSW Parameter	BSW Type
CanTpNcs	ECUC-FLOAT-PARAM-DEF
BSW Description	Value in seconds of the performance requirements relating to N_Cs. CanTpNcs is the time in which CanTp is allowed to request from PduR the Tx data of a Consecutive Frame N_PDU.
Template Description	The attribute timeoutCs represents the time (in seconds) which elapses between the transmit request of a CF N-PDU until the transmit request of the next CF N-PDU.
M2 Parameter	SystemTemplate::TransportProtocols::CanTpConnection.timeoutCs
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00265]

BSW Module	BSW Context
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu
BSW Parameter	BSW Type
CanTpRxFcNPdu	ECUC-PARAM-CONF-CONTAINER-DEF







<b>BSW Description</b>	
Used for grouping of the ID of a PDU and the Reference to a PDU. This N-PDU consumes a meta data item of type CAN_ID_32.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::CanTpConnection.flowControlPdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container if the CanTpConnection contains a reference to a FlowControlNPdu that is received by the regarded ECU.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00271]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu/CanTpRxFcNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpRxFcNPduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
N-PDU identifier attached to the FC N-PDU of this TxNSdu identified by CanTpTxNSduld.		
Each TxNSdu identifier is linked to one Rx FC N-PDU identifier only. However, in the case of extended addressing format, the same FC N-PDU identifier can be used for several N-SDU identifiers. The distinction is made by means of the N_TA value (first data byte of FC frames).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00273]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu/CanTpRxFcNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpRxFcNPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a Pdu in the COM-Stack.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00272]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
BSW Parameter	BSW Type	
CanTpTc	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switch for enabling Transmit Cancellation.		
Template Description		
With this switch Tx Cancellation can be turned on or off. Please note that the Rx Cancellation is always enabled.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection.cancellation		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00282]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
BSW Parameter	BSW Type	
CanTpTxAddressingFormat	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Declares which communication addressing format is supported for this TxNSdu. Definition of Enumeration values: CanTpStandard to use normal addressing format. CanTpExtended to use extended addressing format. CanTpMixed to use mixed 11 bit addressing format. CanTpNormalFixed to use normal fixed addressing format. CanTpMixed29Bit to use mixed 29 bit addressing format.		
Template Description		
Declares which communication addressing mode is supported.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection.addressingFormat		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00262]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
BSW Parameter	BSW Type	
CanTpTxNPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Used for grouping of the ID of a PDU and the Reference to a PDU. This N-PDU produces a meta data item of type CAN_ID_32.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection.dataPdu		
Mapping Rule		Mapping Type





Create container if the CanTpConnection contains a reference to a DataNpdu that is received by the regarded ECU.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00274]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu/CanTpTxNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpTxNPduConfirmationPduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Handle Id to be used by the CanIf to confirm the transmission of the CanTpTxNPdu to the CanIf module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00286]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu/CanTpTxNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpTxNPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a Pdu in the COM-Stack.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_CanTp_-00275]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTpTxNSduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Unique identifier to a structure that contains all useful information to process the transmission of a TxNSdu.		
<b>Template Description</b>		
<b>M2 Parameter</b>		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTp_-00268]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
BSW Parameter	BSW Type	
CanTpTxNSduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a Pdu in the COM-Stack.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanTp_-00261]	

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
BSW Parameter	BSW Type	
CanTpTxPaddingActivation	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
<p>Defines if the transmit frame use padding or not. This parameter is restricted to 8 byte N-PDUs.</p> <p>Definition of Enumeration values:</p> <p>CanTpOn The transmit N-PDU uses padding for SF, FC and the last CF. (N-PDU length is always 8 bytes in case of CAN 2.0)</p> <p>CanTpOff The transmit N-PDU does not use padding for SF, CF and the last CF. (N-PDU length is dynamic - any valid DLC value). Note: The mandatory mapping to the next higher valid DLC value for N-PDUs with a length &gt; 8 bytes is not affected by this parameter.</p>		
Template Description		
<p>This specifies whether or not Sfs, FCs and the last CF shall be padded to 8 bytes length in case it contains less payload.</p> <p>true: The N-PDU received uses padding for SF, FC and the last CF. (N-PDU length is always 8 bytes)</p> <p>false: The N-PDU received does not use padding for SF, CF and the last CF. (N-PDU length is dynamic)</p>		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection. <a href="#">paddingActivation</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanTp_-00269]	

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig/CanTpChannel/CanTpTxNSdu	
BSW Parameter	BSW Type	
CanTpTxTaType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Declares the communication type of this TxNsdu. Enumeration values: CanTpPhysical. Used for 1:1 communication. CanTpFunctional. Used for 1:n communication.		
Template Description		
Network Target Address type.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpConnection.taType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00270]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig	
BSW Parameter	BSW Type	
CanTpMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Allow to configure the time for the MainFunction (as float in seconds). The CanTpMainFunctionPeriod should be assigned a value which is optimal regarding all of the timers configured for CanTp in TX and RX data transfer i.e. the differences from the configured timing should be as small as possible. Please note: This period shall be the same as call cycle time of the periodic task were CanTp Main function is called.		
Template Description		
The period between successive calls to the Main Function of the AUTOSAR TP. Specified in seconds.		
M2 Parameter		
SystemTemplate::TransportProtocols::CanTpEcu.cycleTimeMainFunction		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTp_-00240]

BSW Module	BSW Context	
CanTp	CanTp/CanTpConfig	
BSW Parameter	BSW Type	
CanTpMaxChannelCnt	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of channels. This parameter is needed only in case of post-build loadable implementation using static memory allocation.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00304]

BSW Module	BSW Context	
CanTp	CanTp	
BSW Parameter		BSW Type
CanTpGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the general configuration parameters of the CanTp module.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanTp_-00278]	

BSW Module	BSW Context	
CanTp	CanTp/CanTpGeneral	
BSW Parameter		BSW Type
CanTpChangeParameterApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter, if set to true, enables the CanTp_ChangeParameterRequest Api for this Module.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanTp_-00299]	

BSW Module	BSW Context	
CanTp	CanTp/CanTpGeneral	
BSW Parameter		BSW Type
CanTpDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00239]

BSW Module	BSW Context	
CanTp	CanTp/CanTpGeneral	
BSW Parameter		BSW Type
CanTpDynIdSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enable support for dynamic ID handling via N-PDU MetaData.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTp_-00302]	

BSW Module	BSW Context	
CanTp	CanTp/CanTpGeneral	
BSW Parameter		BSW Type
CanTpFlexibleDataRateSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enable support for CAN FD frames.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTp_-00305]	

BSW Module	BSW Context	
CanTp	CanTp/CanTpGeneral	
BSW Parameter		BSW Type
CanTpGenericConnectionSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enable support for the handling of generic connections using N-SDUs with MetaData. Requires CanTpDynIdSupport.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00303]

BSW Module	BSW Context	
CanTp	CanTp/CanTpGeneral	
BSW Parameter		BSW Type
CanTpPaddingByte		ECUC-INTEGER-PARAM-DEF
BSW Description		
Used for the initialization of unused bytes with a certain value		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTp_-00298]	

BSW Module	BSW Context	
CanTp	CanTp/CanTpGeneral	
BSW Parameter		BSW Type
CanTpReadParameterApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter, if set to true, enables the CanTp_ReadParameterApi for this module.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTp_-00300]	

BSW Module	BSW Context	
CanTp	CanTp/CanTpGeneral	
BSW Parameter		BSW Type
CanTpVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
The function CanTp_GetVersionInfo is configurable (On/Off) by this configuration parameter.		







<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTp_-00283]

### C.2.6 CanSm Mapping

<b>BSW Module</b>	<b>BSW Context</b>	
CanSM	CanSM	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanSMConfiguration		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the global parameters of the CanSM and sub containers, which are for the CAN network specific configuration.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanSM_-00123]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanSM	CanSM/CanSMConfiguration	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanSMManagerNetwork		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the CAN network specific parameters of each CAN network		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanSM_-00126]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork	
BSW Parameter	BSW Type	
CanSMBorCounterL1ToL2	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This threshold defines the count of bus-offs until the bus-off recovery switches from level 1 (short recovery time) to level 2 (long recovery time).		
Template Description		
This threshold defines the count of bus-offs until the bus-off recovery switches from level 1 (short recovery time) to level 2 (long recovery time).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanClusterBusOffRecovery.borCounterL1ToL2		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanSM_-00131]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork	
BSW Parameter	BSW Type	
CanSMBorTimeL1	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This time parameter defines in seconds the duration of the bus-off recovery time in level 1 (short recovery time).		
Template Description		
This attribute defines the duration of the bus-off recovery time in level 1 (short recovery time) in seconds.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanClusterBusOffRecovery.borTimeL1		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanSM_-00128]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork	
BSW Parameter	BSW Type	
CanSMBorTimeL2	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This time parameter defines in seconds the duration of the bus-off recovery time in level 2 (long recovery time).		
Template Description		
This attribute defines the duration of the bus-off recovery time in level 2 (long recovery time) in seconds.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanClusterBusOffRecovery.borTimeL2		
Mapping Rule	Mapping Type	
1:1 mapping	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanSM_00129]

BSW Module	BSW Context
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork
BSW Parameter	BSW Type
CanSMBorTimeTxEnsured	ECUC-FLOAT-PARAM-DEF
BSW Description	
This parameter defines in seconds the duration of the bus-off event check. This check assesses, if the recovery has been successful after the recovery reenables the transmit path. If a new bus-off occurs during this time period, the CanSM assesses this bus-off as sequential bus-off without successful recovery. Because a bus-off only can be detected, when PDUs are transmitted, the time has to be great enough to ensure that PDUs are retransmitted again (e. g. time period of the fastest cyclic transmitted PDU of the COM module, ComTxModeTimePeriod).	
Template Description	
This attribute defines the duration of the bus-off event check in seconds.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanClusterBusOffRecovery.borTimeTxEnsured	
Mapping Rule	Mapping Type
If borTimeTxEnsured is defined set this parameter to true otherwise to false.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanSM_00130]

BSW Module	BSW Context
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork
BSW Parameter	BSW Type
CanSMBorTxConfirmationPolling	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
This parameter shall configure, if the CanSM polls the CanIf_GetTxConfirmationState API to decide the bus-off state to be recovered instead of using the CanSMBorTimeTxEnsured parameter for this decision.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanSM_00339]

BSW Module	BSW Context
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork
BSW Parameter	BSW Type
CanSMComMNetworkHandleRef	ECUC-REFERENCE-DEF
BSW Description	
Unique handle to identify one certain CAN network. Reference to one of the network handles configured for the ComM.	





Template Description	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanSM_ - 00161]

BSW Module	BSW Context	
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork	
BSW Parameter		BSW Type
CanSMController		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the controller IDs assigned to a CAN network.		
Template Description		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanSM_ - 00338]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork/CanSMController	
BSW Parameter		BSW Type
CanSMControllerId		ECUC-REFERENCE-DEF
BSW Description		
Unique handle to identify one certain CAN controller. Reference to one of the CAN controllers managed by the CanIf module.		
Template Description		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanSM_ - 00141]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork	
BSW Parameter		BSW Type
CanSMDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		





Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanSM_00127]

<b>BSW Module</b>	<b>BSW Context</b>
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork/CanSMDemEventParameterRefs
<b>BSW Parameter</b>	<b>BSW Type</b>
CANSM_E_BUS_OFF	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to configured DEM event to report bus off errors for this CAN network.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanSM_00070]

<b>BSW Module</b>	<b>BSW Context</b>
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork/CanSMDemEventParameterRefs
<b>BSW Parameter</b>	<b>BSW Type</b>
CANSM_E_MODE_REQUEST_TIMEOUT	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to configured DEM event to report bus off errors for this CAN network.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanSM_00352]

<b>BSW Module</b>	<b>BSW Context</b>
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork
<b>BSW Parameter</b>	<b>BSW Type</b>
CanSMEnableBusOffDelay	ECUC-BOOLEAN-PARAM-DEF





<b>BSW Description</b>	
This parameter defines if the <User_GetBusOffDelay> shall be called for this network.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanSM_ - 00346]

<b>BSW Module</b>	<b>BSW Context</b>	
CanSM	CanSM/CanSMConfiguration/CanSMManagerNetwork	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanSMTransceiverId		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
ID of the CAN transceiver assigned to the configured network handle. Reference to one of the transceivers managed by the CanIf module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanSM_ - 00137]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanSM	CanSM/CanSMConfiguration	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanSMModeRequestRepetitionMax		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies the maximal amount of mode request repetitions without a respective mode indication from the CanIf module until the CanSM module reports a Development Error to the Det and tries to go back to no communication.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanSM_ - 00335]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMConfiguration	
BSW Parameter	BSW Type	
CanSMModeRequestRepetitionTime	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies in which time duration the CanSM module shall repeat mode change requests by using the API of the CanIf module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanSM_-00336]

BSW Module	BSW Context	
CanSM	CanSM	
BSW Parameter	BSW Type	
CanSMGeneral	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container for general pre-compile parameters of the CanSM module		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanSM_-00314]

BSW Module	BSW Context	
CanSM	CanSM/CanSMGeneral	
BSW Parameter	BSW Type	
CanSMDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanSM_-00133]

BSW Module	BSW Context	
CanSM	CanSM/CanSMGeneral	
BSW Parameter	BSW Type	
CanSMGetBusOffDelayFunction	ECUC-FUNCTION-NAME-DEF	
BSW Description		
This parameter configures the name of the <User_GetBusOffDelay> callout function, which is used by CanSM to acquire an additional L1/L2 delay time. This function is only called for channels where CanSMEnableBusOffDelay is enabled.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanSM_-00347]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMGeneral	
BSW Parameter	BSW Type	
CanSMGetBusOffDelayHeader	ECUC-STRING-PARAM-DEF	
BSW Description		
This parameter configures the header file containing the prototype of the <User_GetBusOffDelay> callout function.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanSM_-00348]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMGeneral	
BSW Parameter	BSW Type	
CanSMMainFunctionTimePeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This parameter defines the cycle time of the function CanSM_MainFunction in seconds		
Template Description		
This attribute defines the cycle time of the function CanSM_MainFunction in seconds.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::CanClusterBusOffRecovery.mainFunctionPeriod		
Mapping Rule	Mapping Type	
The value that is defined in the System Extract defines the upperbound of the cycle time. The integrator may choose a smaller value.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanSM_-00312]	



BSW Module		BSW Context	
CanSM		CanSM/CanSMGeneral	
BSW Parameter		BSW Type	
CanSMPncSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables or disables support of partial networking. False: Partial Networking is disabled True: Partial Networking is enabled			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanSM_ - 00344]	

BSW Module		BSW Context	
CanSM		CanSM/CanSMGeneral	
BSW Parameter		BSW Type	
CanSMSetBaudrateApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
The support of the Can_SetBaudrate API is optional. If this parameter is set to true the Can_SetBaudrate API shall be supported. Otherwise the API is not supported.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanSM_ - 00343]	

BSW Module		BSW Context	
CanSM		CanSM/CanSMGeneral	
BSW Parameter		BSW Type	
CanSMTxOfflineActiveSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Determines whether the ECU passive feature is supported by CanSM. True: Enabled False: Disabled			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanSM_ - 00349]	

BSW Module	BSW Context	
CanSM	CanSM/CanSMGeneral	
BSW Parameter		BSW Type
CanSMVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activate/Deactivate the version information API (CanSM_GetVersionInfo). true: version information API activated false: version information API deactivated		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanSM_ - 00311]

## C.3 J1939

### C.3.1 J1939Tp Mapping

BSW Module	BSW Context	
J1939Tp	J1939Tp	
BSW Parameter		BSW Type
J1939TpConfiguration		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the J1939Tp module that define the communication paths.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_ - 00052]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration	
BSW Parameter		BSW Type
J1939TpRxChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		





This container describes a reception channel of the J1939Tp module. A channel referencing N-PDUs without MetaData is used for all N-SDUs that share the same source address (SA) and the same destination address (BAM: DA = 0xFF, CMDT: DA != 0xFF). A channel with N-PDUs with MetaData is used for all possible source and destination addresses.	
<b>Template Description</b>	
A J1939TpConnection represents an internal path for the transmission or reception of a Pdu via J1939Tp and describes the sender and the receiver of this particular communication. The J1939Tp module routes a Pdu (J1939 PGN) through the connection.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::J1939TpConnection	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each existing J1939TpConnection that is used to transmit a NSdu.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00053]

<b>BSW Module</b>	<b>BSW Context</b>
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
J1939TpRxCancellationSupport	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enable receive cancellation using the API J1939Tp_CancelReceive() for this channel.	
<b>Template Description</b>	
Enable support for Tx/Rx cancellation.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::J1939TpConnection.cancellation	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Please note that in the System Template the cancellation support is defined per J1939Tp Connection. All J1939TpConnections in an ECU shall have the same value.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00186]

<b>BSW Module</b>	<b>BSW Context</b>
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
J1939TpRxCmNPdu	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This N-PDU represents the TP.CM frame of a J1939 transport protocol session. TP.CM is used both by BAM and CMDT to initialize the connection. For CMDT, it is also used to abort the connection. This N-PDU consumes a meta data item of type CAN_ID_32.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::J1939TpConnection.flowControlPdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Information can be derived from a received directINPdu that is referenced by the J1939Tp Connection.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00128]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxCmNPdu	
BSW Parameter	BSW Type	
J1939TpRxCmNPdulId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The N-PDU identifier used for communication with CanIf.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00129]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxCmNPdu	
BSW Parameter	BSW Type	
J1939TpRxCmNPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the Pdu object representing the N-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00158]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
BSW Parameter	BSW Type	
J1939TpRxDa	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Destination address (DA) of this channel. This parameter is only required for channels with fixed DA which use N-PDUs with MetaData containing the DA.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00178]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
BSW Parameter	BSW Type	
J1939TpRxDtNPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This N-PDU represents the TP.DT frame of a J1939 transport protocol session. TP.DT is used both by BAM and CMDT to transfer the contents of an N-SDU. This N-PDU consumes a meta data item of type CAN_ID_32.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpConnection. <a href="#">dataPdu</a>		
Mapping Rule		Mapping Type
Information can be derived from a received NPdu that is referenced by the J1939TpConnection.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00117]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxDtNPdu	
BSW Parameter	BSW Type	
J1939TpRxDtNPduld	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The N-PDU identifier used for communication with CanIf.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00133]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxDtNPdu	
BSW Parameter	BSW Type	
J1939TpRxDtNPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the Pdu object representing the N-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00134]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
BSW Parameter	BSW Type	
J1939TpRxDynamicBlockCalculation	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enable dynamic calculation of "number of packets that can be sent" value in TP.CM_CTS, based on the size of buffers in upper layers reported via StartOfReception and PduR_J1939TpCopyRxData.		
Template Description		
Enable support for dynamic block size calculation.		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpConnection.dynamicBs		
Mapping Rule		Mapping Type
Please note that in the System Template the dynamic block size calculation support is defined per J1939TpConnection. All J1939TpConnections in an ECU shall have the same value.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00187]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
BSW Parameter	BSW Type	
J1939TpRxDynamicBufferRatio	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Percentage of available buffer that shall be used for retry. This parameter is only applicable when "J1939TpRxRetrySupport" and "J1939TpRxDynamicBlockCalculation" are enabled.		
Template Description		
Defines usage of available data for dynamic block size calculation when protocol retry is enabled. This attribute describes in percent of available buffer that shall be used for retry.		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpConnection.bufferRatio		
Mapping Rule		Mapping Type
Please note that in the System Template this attribute is defined per J1939TpConnection. All J1939TpConnections in an ECU shall have the same value.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00188]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
BSW Parameter	BSW Type	
J1939TpRxPacketsPerBlock	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of TP.DT frames the receiving J1939Tp module allows the sender to send before waiting for another TP.CM_CTS. This parameter is transmitted in the TP.CM_CTS frame, and is thus only relevant for reception of messages via CMDT. When J1939TpRxDynamicBlockCalculation is enabled, this parameter specifies a maximum for the calculated value. For further details on this parameter value see SAE J1939/21.		
Template Description		





Set maximum block size (number of packets in TP.CM_CTS).	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::J1939TpConnection.maxBs	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Please note that in the System Template the maximum block size is defined per J1939Tp Connection. All J1939TpConnections in an ECU shall have the same value.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00189]

<b>BSW Module</b>	<b>BSW Context</b>
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
J1939TpRxPg	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Parameter group received by the J1939 transport layer.	
<b>Template Description</b>	
A J1939TpPg represents one J1939 message (parameter group, PG) identified by the PGN (parameter group number) that can be received or transmitted via J1939Tp.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::J1939TpPg	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each Rx J1939TpPg that is available in the Ecu Extract.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00050]

<b>BSW Module</b>	<b>BSW Context</b>
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxPg
<b>BSW Parameter</b>	<b>BSW Type</b>
J1939TpRxDirectNPdu	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This N-PDU represents the short frame that is used for a dynamic length PGN when it has a length of less than 8 bytes. This N-PDU consumes a meta data item of type CAN_ID_32. Please note: This sub container is only necessary when J1939TpRxPgDynLength is TRUE.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::J1939TpPg.directPdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Information can be derived from a received directINPdu that is referenced by the J1939TpPg.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00130]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxPg/J1939TpRxDirectNPdu	
BSW Parameter		BSW Type
J1939TpRxDirectNPduld		ECUC-INTEGER-PARAM-DEF
BSW Description		
The N-PDU identifier used for communication with CanIf.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00131]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxPg/J1939TpRxDirectNPdu	
BSW Parameter		BSW Type
J1939TpRxDirectNPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Pdu object representing the N-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00132]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxPg	
BSW Parameter		BSW Type
J1939TpRxNSdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container describes the parameters that are relevant for the reception of a specific N-SDU. This N-SDU produces meta data items of type SOURCE_ADDRESS_16, TARGET_ADDRESS_16, and PRIORITY_8.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpPg.sdu		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00063]



BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxPg/J1939TpRxNSdu	
BSW Parameter	BSW Type	
J1939TpRxNSdulId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This is a unique identifier for a received N-SDU. This Id is used in the CancelReceive and ChangeParameter API call.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00184]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxPg/J1939TpRxNSdu	
BSW Parameter	BSW Type	
J1939TpRxNSduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the Pdu object representing the N-SDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00069]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxPg	
BSW Parameter	BSW Type	
J1939TpRxPgDynLength	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This flag is set to TRUE when the N-SDU refers to a PGN with variable length. Please note: When this attribute is TRUE, the sub container J1939TpRxDirectNPdu is required.		
Template Description		
The length of dynamic length signals is variable in run-time. Only a maximum length of such a signal is specified in the configuration (attribute length in ISignal element).		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SystemSignal. <a href="#">dynamicLength</a>		
Mapping Rule		Mapping Type
If a tpSdu that is referenced by the J1939TpPg contains a dynamicLengthSignal than set this parameter to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00066]

BSW Module		BSW Context	
J1939Tp		J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpRxPg	
BSW Parameter		BSW Type	
J1939TpRxPgPGN		ECUC-INTEGER-PARAM-DEF	
BSW Description			
PGN of the referenced N-SDUs.			
Template Description			
Parameter group number (PGN) of a J1939 message (parameter group, PG) that can be received or transmitted via J1939Tp. The PGN may be omitted when the a directPdu is referenced and is mapped into a CanFrameTriggering with an identifier.			
M2 Parameter			
SystemTemplate::TransportProtocols::J1939TpPg.pgn			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_J1939Tp_-00065]

BSW Module		BSW Context	
J1939Tp		J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
BSW Parameter		BSW Type	
J1939TpRxProtocolType		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
Protocol type used by this channel. This parameter is only required for channels with fixed destination address.			
Template Description			
BAM (Broadcast Announce Message) is a broadcast protocol. If this attribute is set to true broadcast is used. Since address FF is the only broadcast address, there's no reason to configure it.			
M2 Parameter			
SystemTemplate::TransportProtocols::J1939TpConnection.broadcast			
Mapping Rule			Mapping Type
If the broadcast attribute is set to true than set this parameter to J1939TP_PROTOCOL_BAM			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_J1939Tp_-00029]

BSW Module		BSW Context	
J1939Tp		J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
BSW Parameter		BSW Type	
J1939TpRxRetrySupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enable support for triggering repetition of failed transmission using TPCM_CTS with a packet number that has already been sent. Retransmission is triggered when a sequence number is missing or a timeout occurs during reception.			
Template Description			
Enable support for protocol retry.			
M2 Parameter			
SystemTemplate::TransportProtocols::J1939TpConnection.retry			
Mapping Rule			Mapping Type





Please note that in the System Template the retry support is defined per J1939TpConnection. All J1939TpConnections in an ECU shall have the same value.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00185]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
<b>BSW Parameter</b>		<b>BSW Type</b>
J1939TpRxSa		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Source address (SA) of this channel. This parameter is only required for channels with fixed SA which use N-PDUs with Meta Data containing the SA.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_J1939Tp_-00179]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel	
<b>BSW Parameter</b>		<b>BSW Type</b>
J1939TpTxFcNPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This N-PDU represents the TP.CM frame that is used in reverse direction for a J1939 transport protocol session using the CMDT protocol type. TP.CM in reverse direction is used for intermediate and final acknowledgement of received data and to abort the connection. This N-PDU produces a meta data item of type CAN_ID_32.		
Please note: This sub container is only required when J1939TpRxProtocolType is J1939TP_PROTOCOL_CMDT or when it is not configured at all.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::J1939TpConnection. <a href="#">flowControlPdu</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Information can be derived from a received FlowControlNPdu that is referenced by the J1939Tp Connection.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_J1939Tp_-00135]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpTxFcNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>





J1939TpTxFcNPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the Pdu object representing the N-PDU. Please note: When two channels have identical but exchanged source and destination addresses, the Pdu referenced by this parameter is shared with J1939TpTxCmNPduRef of the corresponding J1939TpTxChannel.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00136]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpRxChannel/J1939TpTxFcNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
J1939TpTxFcNPduTxConfId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The N-PDU identifier used for Tx confirmation from CanIf.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_J1939Tp_-00168]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration	
<b>BSW Parameter</b>		<b>BSW Type</b>
J1939TpTxChannel		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container describes a transmission channel of the J1939Tp module. A channel referencing N-PDUs without MetaData is used for all N-SDUs that share the same source address (SA) and the same destination address (BAM: DA = 0xFF, CMDT: DA != 0xFF). A channel with N-PDUs with MetaData is used for all possible source and destination addresses.		
<b>Template Description</b>		
A J1939TpConnection represents an internal path for the transmission or reception of a Pdu via J1939Tp and describes the sender and the receiver of this particular communication. The J1939Tp module routes a Pdu (J1939 PGN) through the connection.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::J1939TpConnection		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container for each existing J1939TpConnection that is used to transmit a NSdu.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_J1939Tp_-00059]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter	BSW Type	
J1939TpRxFcNPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>This N-PDU represents the TP.CM frame that is used in reverse direction for a J1939 transport protocol session using the CDMT protocol type. TP.CM in reverse direction is used for intermediate and final acknowledgement of received data and to abort the connection. This N-PDU consumes a meta data item of type CAN_ID_32.</p> <p>Please note: This sub container is only required when J1939TpTxProtocolType is J1939TP_PROTOCOL_CMDT or when it is not configured at all.</p>		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpConnection.flowControlPdu		
Mapping Rule		Mapping Type
Information can be derived from a transmitted FlowControlNPdu that is referenced by the J1939Tp Connection.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00144]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpRxFcNPdu	
BSW Parameter	BSW Type	
J1939TpRxFcNPduld	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The N-PDU identifier used for communication with CanIf.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00145]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpRxFcNPdu	
BSW Parameter	BSW Type	
J1939TpRxFcNPduRef	ECUC-REFERENCE-DEF	
BSW Description		
<p>Reference to the Pdu object representing the N-PDU.</p> <p>Please note: When two channels have identical but exchanged source and destination addresses, the Pdu referenced by this parameter is shared with J1939TpRxCMNPduRef of the corresponding J1939TpRxChannel.</p>		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Tp_-00146]

BSW Module	BSW Context
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel
BSW Parameter	BSW Type
J1939TpTxCancellationSupport	ECUC-BOOLEAN-PARAM-DEF
BSW Description	Enable transmit cancellation using the API J1939Tp_CancelTransmit() for this channel.
Template Description	Enable support for Tx/Rx cancellation.
M2 Parameter	SystemTemplate::TransportProtocols::J1939TpConnection.cancellation
Mapping Rule	Mapping Type
Please note that in the System Template the cancellation support is defined per J1939Tp Connection. All J1939TpConnections in an ECU shall have the same value.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Tp_-00192]

BSW Module	BSW Context
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel
BSW Parameter	BSW Type
J1939TpTxCmNPdu	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	This N-PDU represents the TP.CM frame of a J1939 transport protocol session. TP.CM is used both by BAM and CMDT to initialize the connection. For CMDT, it is also used to abort the connection. This N-PDU produces a meta data item of type CAN_ID_32.
Template Description	
M2 Parameter	SystemTemplate::TransportProtocols::J1939TpConnection.flowControlPdu
Mapping Rule	Mapping Type
Information can be derived from a transmitted FlowControlNPdu that is referenced by the J1939Tp Connection.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Tp_-00138]

BSW Module	BSW Context
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxCmNPdu
BSW Parameter	BSW Type
J1939TpTxCmNPduRef	ECUC-REFERENCE-DEF





BSW Description	
Reference to the Pdu object representing the N-PDU.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Tp_-00139]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxCmNPdu	
BSW Parameter		BSW Type
J1939TpTxCmNPduTxConfId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The N-PDU identifier used for Tx confirmation from CanIf.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Tp_-00170]	

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter		BSW Type
J1939TpTxDa		ECUC-INTEGER-PARAM-DEF
BSW Description		
Destination address (DA) of this channel. This parameter is only required for channels with fixed DA which use N-PDUs with MetaData containing the DA.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Tp_-00180]	

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter		BSW Type





J1939TpTxDtNPdu	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This N-PDU represents the TP.DT frame of a J1939 transport protocol session. TP.DT is used both by BAM and CMDT to transfer the contents of an N-SDU. This N-PDU produces a meta data item of type CAN_ID_32.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::J1939TpConnection. <a href="#">dataPdu</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Information can be derived from a transmitted NPdu that is referenced by the J1939TpConnection.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00142]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxDtNPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
J1939TpTxDtNPduRef	ECUC-REFERENCE-DEF	
<b>BSW Description</b>		
Reference to the Pdu object representing the N-PDU.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_J1939Tp_-00143]	

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxDtNPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
J1939TpTxDtNPduTxConfId	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
The N-PDU identifier used for Tx confirmation from CanIf.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_J1939Tp_-00171]	



BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter	BSW Type	
J1939TpTxDynamicBlockCalculation	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enable dynamic calculation of "maximum number of packets that can be sent" value in TP.CM_RTS, based on the available amount of data in upper layers reported via PduR_J1939TpCopyTxData.		
Template Description		
Enable support for dynamic block size calculation.		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpConnection.dynamicCBs		
Mapping Rule		Mapping Type
Please note that in the System Template the dynamic block size calculation support is defined per J1939TpConnection. All J1939TpConnections in an ECU shall have the same value.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_00191]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter	BSW Type	
J1939TpTxMaxPacketsPerBlock	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of TP.DT frames the transmitting J1939Tp module is ready to send before waiting for another TP.CM_CTS. This parameter is transmitted in the TP.CM_RTS frame, and is thus only relevant for transmission of messages via CMDT. When J1939TpTxDynamicBlockCalculation is enabled, this parameter specifies a maximum for the calculated value. For further details on this parameter value see SAE J1939/21.		
Template Description		
Set maximum for expected block size (maximum number of packets in TP.CM_RTS).		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpConnection.maxExpBs		
Mapping Rule		Mapping Type
Please note that in the System Template the maximum for expected block size is defined per J1939TpConnection. All J1939TpConnections in an ECU shall have the same value.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_00190]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter	BSW Type	
J1939TpTxPg	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Parameter group transmitted by the J1939 transport layer.		
Template Description		





A J1939TpPg represents one J1939 message (parameter group, PG) identified by the PGN (parameter group number) that can be received or transmitted via J1939Tp.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::J1939TpPg	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each Tx J1939TpPg that is available in the Ecu Extract.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00070]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxPg	
<b>BSW Parameter</b>		<b>BSW Type</b>
J1939TpTxDirectNPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This N-PDU represents the short frame that is used for a dynamic length PGN when it has a length of less than 8 bytes. This N-PDU produces a meta data item of type CAN_ID_32. Please note: This sub container is only necessary when J1939TpTxPgDynLength is TRUE.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::J1939TpPg.directPdu		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Information can be derived from a transmitted directNPdu that is referenced by the J1939TpPg.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_J1939Tp_-00140]	

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxPg/J1939TpTxDirectNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
J1939TpTxDirectNPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the Pdu object representing the N-PDU.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_J1939Tp_-00141]	

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxPg/J1939TpTxDirectNPdu	
BSW Parameter		BSW Type
J1939TpTxDirectNPduTxConfId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The N-PDU identifier used for Tx confirmation from CanIf.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00169]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxPg	
BSW Parameter		BSW Type
J1939TpTxNSdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container describes the parameters that are relevant for the transmission of a specific N-SDU. This N-SDU consumes meta data items of type SOURCE_ADDRESS_16, TARGET_ADDRESS_16, and PRIORITY_8.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpPg.sdu		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00147]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxPg/J1939TpTxNSdu	
BSW Parameter		BSW Type
J1939TpTxNSduld		ECUC-INTEGER-PARAM-DEF
BSW Description		
The N-SDU identifier used for communication with PduR.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00149]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxPg/J1939TpTxNSdu	
BSW Parameter	BSW Type	
J1939TpTxNSduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the Pdu object representing the N-SDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00151]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxPg	
BSW Parameter	BSW Type	
J1939TpTxPgDynLength	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This flag is set to TRUE when the N-SDU refers to a PGN with variable length. Please note: When this attribute is TRUE, the sub container J1939TpTxDirectNPdu is required.		
Template Description		
The length of dynamic length signals is variable in run-time. Only a maximum length of such a signal is specified in the configuration (attribute length in ISignal element).		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::SystemSignal. <a href="#">dynamicLength</a>		
Mapping Rule		Mapping Type
If a tpSdu that is referenced by the J1939TpPg contains a dynamicLengthSignal than set this parameter to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00148]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel/J1939TpTxPg	
BSW Parameter	BSW Type	
J1939TpTxPgPGN	ECUC-INTEGER-PARAM-DEF	
BSW Description		
PGN of the referenced N-SDUs.		
Template Description		
Parameter group number (PGN) of a J1939 message (parameter group, PG) that can be received or transmitted via J1939Tp. The PGN may be omitted when the a directPdu is referenced and is mapped into a CanFrameTriggering with an identifier.		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpPg. <a href="#">pgn</a>		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00150]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter	BSW Type	
J1939TpTxProtocolType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Protocol type used by this channel. This parameter is only required for channels with fixed destination address.		
Template Description		
BAM (Broadcast Announce Message) is a broadcast protocol. If this attribute is set to true broadcast is used. Since address FF is the only broadcast address, there's no reason to configure it.		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpConnection. <a href="#">broadcast</a>		
Mapping Rule		Mapping Type
If the broadcast attribute is set to true than set this parameter to J1939TP_PROTOCOL_BAM		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00137]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter	BSW Type	
J1939TpTxRetrySupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enable support for repetition of failed transmission using TPCM_CTS with a packet number that has already been sent. Retransmission is handled via the retry feature of PduR_J1939TpCopyTxData.		
Template Description		
Enable support for protocol retry.		
M2 Parameter		
SystemTemplate::TransportProtocols::J1939TpConnection. <a href="#">retry</a>		
Mapping Rule		Mapping Type
Please note that in the System Template the retry support is defined per J1939TpConnection. All J1939TpConnections in an ECU shall have the same value.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Tp_-00193]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpConfiguration/J1939TpTxChannel	
BSW Parameter	BSW Type	
J1939TpTxSa	ECUC-INTEGER-PARAM-DEF	
BSW Description		





Source address (SA) of this channel. This parameter is only required for channels with fixed SA which use N-PDUs with Meta Data containing the SA.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Tp_-00181]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp	
<b>BSW Parameter</b>		<b>BSW Type</b>
J1939TpGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container describes the general configuration parameters of the J1939Tp module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_J1939Tp_-00033]

<b>BSW Module</b>	<b>BSW Context</b>	
J1939Tp	J1939Tp/J1939TpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
J1939TpCancellationSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enable transmit and receive cancellation. The APIs J1939Tp_CancelTransmit() and J1939Tp_CancelReceive() will only be available when this parameter is enabled.		
<b>Template Description</b>		
Enable support for Tx/Rx cancellation.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::J1939TpConnection. <a href="#">cancellation</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Please note that in the System Template the cancellation support is defined per J1939Tp Connection. All J1939TpConnections in an ECU shall have the same value.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_J1939Tp_-00174]

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpGeneral	
BSW Parameter	BSW Type	
J1939TpDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>Switches the development error detection and notification on or off.</p> <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Tp_-00042]	

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpGeneral	
BSW Parameter	BSW Type	
J1939TpMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>Allow to configure the time for the MainFunction (in seconds). Please note: This configuration value shall be equal to the value in the ScheduleManager module.</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Tp_-00044]	

BSW Module	BSW Context	
J1939Tp	J1939Tp/J1939TpGeneral	
BSW Parameter	BSW Type	
J1939TpVersionInfoApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>The function J1939Tp_GetVersionInfo is configurable (On/Off) by this configuration parameter.</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Tp_-00051]	

### C.3.2 J1939Nm Mapping

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet	
BSW Parameter		BSW Type
J1939NmChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Physical CAN channel handled by J1939Nm.		
Template Description		
J1939 specific NmCluster attributes		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NmCluster		
Mapping Rule		Mapping Type
Create Container for each existing J1939NmCluster.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00005]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmChannel	
BSW Parameter		BSW Type
J1939NmChannelUsesAddressArbitration		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines whether the nodes attached to this channel use an initial address claim, and whether they react to contending address claims of other nodes.  True: The initial address claim is sent, and the node reacts to address claims of other nodes. False: The node only sends an address claim upon request, and does not react to other address claims.		
Template Description		
Defines whether the nodes attached to this channel use an initial address claim, and whether they react to contending address claims of other nodes.  True: The initial address claim is sent, and the node reacts to address claims of other nodes.  False: The node only sends an address claim upon request, and does not care for contending address claims.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::J1939Cluster.usesAddressArbitration		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00035]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmChannel	
BSW Parameter		BSW Type
J1939NmRxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the configuration of the PDU used to receive the AddressClaimed PG. This PDU consumes a meta data item of type CAN_ID_32.		







Template Description	
M2 Parameter	
SystemTemplate::NetworkManagement::NmNode. <a href="#">rxNmPdu</a>	
Mapping Rule	Mapping Type
Shall be derived from the NmPdu that is referenced by the NmNode.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Nm_-00010]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmChannel	
BSW Parameter		BSW Type
J1939NmTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the configuration of the PDU used to transmit the AddressClaimed PG. This PDU produces a meta data item of type CAN_ID_32.		
Template Description		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode. <a href="#">txNmPdu</a>		
Mapping Rule		Mapping Type
Shall be derived from the NmPdu that is referenced by the NmNode.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_-00009]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter		BSW Type
J1939NmExternalNodeNameArbitraryAddressCapable		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Arbitrary Address Capable field of the NAME of this external node.		
Template Description		
Arbitrary Address Capable field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName. <a href="#">arbitraryAddressCapable</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_-00041]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter		BSW Type
J1939NmExternalNodeNameECUInstance		ECUC-INTEGER-PARAM-DEF
BSW Description		
ECU Instance field of the NAME of this external node.		
Template Description		
ECU Instance field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.ecuInstance		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00042]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter		BSW Type
J1939NmExternalNodeNameFunction		ECUC-INTEGER-PARAM-DEF
BSW Description		
Function field of the NAME of this external node.		
Template Description		
Function field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.function		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00043]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter		BSW Type
J1939NmExternalNodeNameFunctionInstance		ECUC-INTEGER-PARAM-DEF
BSW Description		
Function Instance field of the NAME of this external node.		
Template Description		
Function Instance field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.functionInstance		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00044]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter	BSW Type	
J1939NmExternalNodeNameIdentityNumber	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Identity Number field of the NAME of this external node.		
Template Description		
Identity Number field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName. <a href="#">identityNumber</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_-00045]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter	BSW Type	
J1939NmExternalNodeNameIndustryGroup	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Industry Group field of the NAME of this external node.		
Template Description		
Industry Group field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName. <a href="#">industryGroup</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_-00046]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter	BSW Type	
J1939NmExternalNodeNameManufacturerCode	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Manufacturer Code field of the NAME of this external node.		
Template Description		
Manufacturer Code field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName. <a href="#">manufacturerCode</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_-00047]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter		BSW Type
J1939NmExternalNodeNameVehicleSystem		ECUC-INTEGER-PARAM-DEF
BSW Description		
Vehicle System field of the NAME of this external node.		
Template Description		
Vehicle System field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.vehicleSystem		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_ - 00048]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter		BSW Type
J1939NmExternalNodeNameVehicleSystemInstance		ECUC-INTEGER-PARAM-DEF
BSW Description		
Vehicle System Instance field of the NAME of this external node.		
Template Description		
Vehicle System Instance field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.vehicleSystemInstance		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_ - 00050]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmExternalNode	
BSW Parameter		BSW Type
J1939NmExternalNodePreferredAddress		ECUC-INTEGER-PARAM-DEF
BSW Description		
Source address of this external node.		
Template Description		
Node identifier of local NmNode. Shall be unique in the NmCluster.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.nmNodeId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_ - 00049]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter	BSW Type	
J1939NmNodeChannelRef	ECUC-REFERENCE-DEF	
BSW Description	Reference to the channels this node has access to.	
Template Description		
M2 Parameter	SystemTemplate::NetworkManagement::NmCluster.nmNode	
Mapping Rule	Mapping Type	
This reference shall be derived from NmClusters that aggregate the nmNode in the Ecu Extract.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Nm_-00029]	

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter	BSW Type	
J1939NmNodeNameArbitraryAddressCapable	ECUC-BOOLEAN-PARAM-DEF	
BSW Description	Arbitrary Address Capable field of the NAME of this node.	
Template Description	Arbitrary Address Capable field of the NAME of this node.	
M2 Parameter	SystemTemplate::NetworkManagement::J1939NodeName.arbitraryAddressCapable	
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Nm_-00018]	

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter	BSW Type	
J1939NmNodeNameECUInstance	ECUC-INTEGER-PARAM-DEF	
BSW Description	ECU Instance field of the NAME of this node.	
Template Description	ECU Instance field of the NAME of this node.	
M2 Parameter	SystemTemplate::NetworkManagement::J1939NodeName.ecuInstance	
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Nm_-00024]	

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter		BSW Type
J1939NmNodeNameFunction		ECUC-INTEGER-PARAM-DEF
BSW Description		
Function field of the NAME of this node.		
Template Description		
Function field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.function		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00022]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter		BSW Type
J1939NmNodeNameFunctionInstance		ECUC-INTEGER-PARAM-DEF
BSW Description		
Function Instance field of the NAME of this node.		
Template Description		
Function Instance field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.functionInstance		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00023]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter		BSW Type
J1939NmNodeNameIdentityNumber		ECUC-INTEGER-PARAM-DEF
BSW Description		
Identity Number field of the NAME of this node.		
Template Description		
Identity Number field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.identityNumber		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00026]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter	BSW Type	
J1939NmNodeNameIndustryGroup	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Industry Group field of the NAME of this node.		
Template Description		
Industry Group field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName. <a href="#">industryGroup</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Nm_00019]	

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter	BSW Type	
J1939NmNodeNameManufacturerCode	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Manufacturer Code field of the NAME of this node.		
Template Description		
Manufacturer Code field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName. <a href="#">manufacturerCode</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Nm_00025]	

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter	BSW Type	
J1939NmNodeNameVehicleSystem	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Vehicle System field of the NAME of this node.		
Template Description		
Vehicle System field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName. <a href="#">vehicleSystem</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_J1939Nm_00021]	

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter	BSW Type	
J1939NmNodeNameVehicleSystemInstance	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Vehicle System Instance field of the NAME of this node.		
Template Description		
Vehicle System Instance field of the NAME of this node.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NodeName.vehicleSystemInstance		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00020]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmNode	
BSW Parameter	BSW Type	
J1939NmNodePreferredAddress	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Source address of this node used for address claiming.		
Template Description		
Node identifier of local NmNode. Shall be unique in the NmCluster.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.nmNodeId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Nm_00016]

BSW Module	BSW Context	
J1939Nm	J1939Nm/J1939NmConfigSet	
BSW Parameter	BSW Type	
J1939NmSharedAddressSpace	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Set of J1939NmChannels that share a common address space. Address claims will be routed between these channels.		
Template Description		
This meta-class represents the ability to identify several J1939Clusters that share a common address space for the routing of messages		
M2 Parameter		
SystemTemplate::J1939SharedAddressCluster		
Mapping Rule		Mapping Type
Container shall be created for each existing J1939SharedAddressCluster		full







Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Nm_-00037]

BSW Module	BSW Context
J1939Nm	J1939Nm/J1939NmConfigSet/J1939NmSharedAddressSpace
BSW Parameter	BSW Type
J1939NmSharedChannelRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a channel that belongs to the shared address space.	
Template Description	
This identifies the J1939Clusters that share a common address space	
M2 Parameter	
SystemTemplate::J1939SharedAddressCluster. <a href="#">participatingJ1939Cluster</a>	
Mapping Rule	Mapping Type
Reference shall be created for each J1939 cluster that is referenced by J1939SharedAddress Cluster in the role participating1939Cluster.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Nm_-00038]

### C.3.3 J1939Dcm Mapping

BSW Module	BSW Context
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmNode
BSW Parameter	BSW Type
J1939DcmDiagnosticMessageSupport	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Contains parameters to configure the diagnostic message support	
Template Description	
Represents the IPdus handled by J1939Dcm.	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication:: <a href="#">J1939DcmIPdu</a>	
Mapping Rule	Mapping Type
The container shall be created for every J1939DcmIPdu that is transmitted oder received by the regarded Ecu.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_-00014]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmNode/J1939DcmDiagnosticMessageSupport	
BSW Parameter	BSW Type	
J1939DcmDmxSupport	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This parameter is used to identify the actual DMx message.		
Template Description		
This attribute is used to identify the actual DMx message, e.g 1 means DM01, etc.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::J1939DcmIPdu.diagnosticMessageType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_-00042]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmNode/J1939DcmDiagnosticMessageSupport	
BSW Parameter	BSW Type	
J1939DcmRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Contains parameters to configure the J1939DcmRxPdu. This PDU consumes meta data items of type CAN_ID_32 for PDUs received from CanIf, and of type SOURCE_ADDRESS_16, TARGET_ADDRESS_16, and PRIORITY_8 for PDUs received from J1939Tp.		
Template Description		
Represents the IPdus handled by J1939Dcm.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::J1939DcmIPdu		
Mapping Rule		Mapping Type
The direction of the J1939DcmIPdu shall be derived from the PduTriggering and the references to IPduPorts.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_-00046]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmNode/J1939DcmDiagnosticMessageSupport	
BSW Parameter	BSW Type	
J1939DcmTxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Contains parameters to configure the J1939DcmTxPdu. This PDU produces meta data items of type CAN_ID_32 for PDUs transmitted via CanIf, and of type SOURCE_ADDRESS_16, TARGET_ADDRESS_16, and PRIORITY_8 for PDUs transmitted via J1939Tp.		
Template Description		
Represents the IPdus handled by J1939Dcm.		
M2 Parameter		





SystemTemplate::Fibex::FibexCore::CoreCommunication::J1939DcmIPdu	
Mapping Rule	Mapping Type
The direction of the J1939DcmIPdu shall be derived from the PduTriggering and the references to IPduPorts.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_-00045]

### C.3.4 J1939Rm Mapping

BSW Module	BSW Context	
J1939Rm	J1939Rm/J1939RmConfigSet	
BSW Parameter		BSW Type
J1939RmChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the parameters for a CAN channel supported by the J1939 Request Manager.		
Template Description		
J1939 specific NmCluster attributes		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NmCluster		
Mapping Rule		Mapping Type
Container shall be created for each J1939NmCluster that is available in the EcuExtract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Rm_-00009]

BSW Module	BSW Context	
J1939Rm	J1939Rm/J1939RmConfigSet/J1939RmChannel	
BSW Parameter		BSW Type
J1939RmRqst2RxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains the configuration of the I-PDU used to receive the Request2 PG. This PDU consumes a meta data item of type CAN_ID_32.		
Template Description		
Enables support for the Request2 PGN (RQST2).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::J1939Cluster.request2Support		
Mapping Rule		Mapping Type
Create container if J1939Cluster.request2Support is set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Rm_-00075]

BSW Module	BSW Context	
J1939Rm	J1939Rm/J1939RmConfigSet/J1939RmChannel	
BSW Parameter	BSW Type	
J1939RmRqst2TxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Contains the configuration of the I-PDU used to transmit the Request2 PG. This PDU produces a meta data item of type CAN_ID_32.		
Template Description		
Enables support for the Request2 PGN (RQST2).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::J1939Cluster. <a href="#">request2Support</a>		
Mapping Rule		Mapping Type
Create container if J1939Cluster.request2Support is set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Rm_-00076]

BSW Module	BSW Context	
J1939Rm	J1939Rm/J1939RmConfigSet	
BSW Parameter	BSW Type	
J1939RmNode	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Contains the parameters for the support of a logical J1939 node (identified by an ECU address).		
Template Description		
J1939 specific NM Node attributes.		
M2 Parameter		
SystemTemplate::NetworkManagement::J1939NmNode		
Mapping Rule		Mapping Type
J1939RmNode shall be derived from existing J1939NmNodes that are available in the ExuExtract. Please note that J1939NmNodes that have the same shortName and nmNodeId that are located on different NmClusters shall be combined to one J1939RmNode.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Rm_-00049]

BSW Module	BSW Context	
J1939Rm	J1939Rm/J1939RmConfigSet/J1939RmNode	
BSW Parameter	BSW Type	
J1939RmNodeChannelRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the channels this node has access to.		
Template Description		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster. <a href="#">nmNode</a>		
Mapping Rule		Mapping Type
This reference shall be derived from NmClusters that aggregate the nmNode in the Ecu Extract.		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Rm_-00052]

BSW Module	BSW Context
J1939Rm	J1939Rm/J1939RmConfigSet/J1939RmNode
BSW Parameter	BSW Type
J1939RmUser	ECUC-CHOICE-CONTAINER-DEF
BSW Description	
Contains the configuration of a module that uses the request and acknowledgement interfaces of J1939Rm.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
+ J1939NM user exists always, UserPGN has 0x0ee00 as solitary value + J1939DCM user exists if transmitted J1939DcmIPdus exist which are requestable + COM user exists if transmitted ISignal IPdus exist which are requestable + CDD user exists if transmitted UserDefinedPdus or User DefinedIPdus exist which are requestable + RTE users cannot be derived	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Rm_-00010]

BSW Module	BSW Context
J1939Rm	J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmCddUser
BSW Parameter	BSW Type
J1939RmUserRequestPGN	ECUC-INTEGER-PARAM-DEF
BSW Description	
PGN supported to be requested from this module. The PGNs supported by different modules should usually be disjunctive.	
Template Description	
<p><b>Pdu:</b> Collection of all Pdus that can be routed through a bus interface.</p> <p><b>CanFrameTriggering.j1939requestable:</b> Frame can be triggered by the J1939 request message.</p> <p><b>CanFrameTriggering.identifier:</b> This attribute is used to define the identifier this frame shall use on the CAN network.</p> <p><b>J1939TpPg.requestable:</b> Parameter Group can be triggered by the J1939 request message.</p> <p><b>J1939TpPg.pgn:</b> Parameter group number (PGN) of a J1939 message (parameter group, PG) that can be received or transmitted via J1939Tp. The PGN may be omitted when the a directPdu is referenced and is mapped into a CanFrameTriggering with an identifier.</p>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Pdu, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.j1939requestable, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.identifier, SystemTemplate::TransportProtocols::J1939TpPg.requestable, SystemTemplate::TransportProtocols::J1939TpPg.pgn	
Mapping Rule	Mapping Type





This parameter can be derived from the Pdu and a combination of CanFrameTriggering.j1939requestable and CanFrameTriggering.identifier or J1939TpPg.requestable and J1939TpPg.pgn	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Rm_-00026]

BSW Module	BSW Context
J1939Rm	J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmComUser/J1939RmComIPdu
BSW Parameter	BSW Type
J1939RmComIPduPGN	ECUC-INTEGER-PARAM-DEF
BSW Description	
PGN of the COM I-PDU.	
Template Description	
<p><b>ISignalIPdu:</b> Represents the IPdus handled by Com. The ISignalIPdu assembled and disassembled in AUTOSAR COM consists of one or more signals. In case no multiplexing is performed this IPdu is routed to/from the Interface Layer. A maximum of one dynamic length signal per IPdu is allowed.</p> <p><b>CanFrameTriggering.j1939requestable:</b> Frame can be triggered by the J1939 request message.</p> <p><b>CanFrameTriggering.identifier:</b> This attribute is used to define the identifier this frame shall use on the CAN network.</p> <p><b>J1939TpPg.requestable:</b> Parameter Group can be triggered by the J1939 request message.</p> <p><b>J1939TpPg.pgn:</b> Parameter group number (PGN) of a J1939 message (parameter group, PG) that can be received or transmitted via J1939Tp. The PGN may be omitted when the a directPdu is referenced and is mapped into a CanFrameTriggering with an identifier.</p>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalIPdu, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.j1939requestable, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.identifier, SystemTemplate::TransportProtocols::J1939TpPg.requestable, SystemTemplate::TransportProtocols::J1939TpPg.pgn	
Mapping Rule	Mapping Type
This parameter can be derived fromISignalIPdu and a combination of CanFrameTriggering.j1939requestable and CanFrameTriggering.identifier or J1939TpPg.requestable and J1939TpPg.pgn.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Rm_-00033]

BSW Module	BSW Context
J1939Rm	J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmDcmUser
BSW Parameter	BSW Type
J1939RmUserRequestPGN	ECUC-INTEGER-PARAM-DEF
BSW Description	
PGN of DMx PG supported by J1939Dcm.	
Template Description	





<p><b>Pdu:</b> Collection of all Pdus that can be routed through a bus interface.</p> <p><b>CanFrameTriggering.j1939requestable:</b> Frame can be triggered by the J1939 request message.</p> <p><b>CanFrameTriggering.identifier:</b> This attribute is used to define the identifier this frame shall use on the CAN network.</p> <p><b>J1939TpPg.requestable:</b> Parameter Group can be triggered by the J1939 request message.</p> <p><b>J1939TpPg.pgn:</b> Parameter group number (PGN) of a J1939 message (parameter group, PG) that can be received or transmitted via J1939Tp. The PGN may be omitted when the a directPdu is referenced and is mapped into a CanFrameTriggering with an identifier.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Pdu, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.j1939requestable, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.identifier, SystemTemplate::TransportProtocols::J1939TpPg.requestable, SystemTemplate::TransportProtocols::J1939TpPg.pgn	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This parameter can be derived from the Pdu and a combination of CanFrameTriggering.j1939requestable and CanFrameTriggering.identifier or J1939TpPg.requestable and J1939TpPg.pgn	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_J1939Rm_00070]

<b>BSW Module</b>	<b>BSW Context</b>
J1939Rm	J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser
<b>BSW Parameter</b>	<b>BSW Type</b>
J1939RmUserRequestPGN	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
PGN supported to be requested from this module. The PGNs supported by different modules should usually be disjunctive.	
<b>Template Description</b>	
<p><b>Pdu:</b> Collection of all Pdus that can be routed through a bus interface.</p> <p><b>CanFrameTriggering.j1939requestable:</b> Frame can be triggered by the J1939 request message.</p> <p><b>CanFrameTriggering.identifier:</b> This attribute is used to define the identifier this frame shall use on the CAN network.</p> <p><b>J1939TpPg.requestable:</b> Parameter Group can be triggered by the J1939 request message.</p> <p><b>J1939TpPg.pgn:</b> Parameter group number (PGN) of a J1939 message (parameter group, PG) that can be received or transmitted via J1939Tp. The PGN may be omitted when the a directPdu is referenced and is mapped into a CanFrameTriggering with an identifier.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Pdu, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.j1939requestable, SystemTemplate::Fibex::Fibex4Can::CanCommunication::CanFrameTriggering.identifier, SystemTemplate::TransportProtocols::J1939TpPg.requestable, SystemTemplate::TransportProtocols::J1939TpPg.pgn	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This parameter can be derived from the Pdu and a combination of CanFrameTriggering.j1939requestable and CanFrameTriggering.identifier or J1939TpPg.requestable and J1939TpPg.pgn	





Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Rm_-00026]

BSW Module	BSW Context	
J1939Rm	J1939Rm/J1939RmGeneral	
BSW Parameter		BSW Type
J1939RmSupportRequest2		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling support of the Request2 PG. Please note: Transfer is not supported.		
Template Description		
Enables support for the Request2 PGN (RQST2).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::J1939Cluster. <a href="#">request2Support</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Rm_-00073]

## C.4 FlexRay

### C.4.1 FlexRay Driver Mapping

BSW Module	BSW Context	
Fr	Fr	
BSW Parameter		BSW Type
FrGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
General configuration (parameters) of the FlexRay Driver module.		
Template Description		
FlexRay specific attributes to the physicalCluster		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology:: <a href="#">FlexrayCluster</a>		
Mapping Rule		Mapping Type
Container shall be created if the ECU is connected to a FlexRay Cluster.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00392]



BSW Module	BSW Context	
Fr	Fr/FrGeneral	
BSW Parameter	BSW Type	
FrCtrlTestCount	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of iterations the FlexRay controller hardware test is performed during controller initialization.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00001]

BSW Module	BSW Context	
Fr	Fr/FrGeneral	
BSW Parameter	BSW Type	
FrDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00393]

BSW Module	BSW Context	
Fr	Fr/FrGeneral	
BSW Parameter	BSW Type	
FrDisableLPduSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables or disabled API function Fr_DisableLPdu.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00455]

BSW Module	BSW Context	
Fr	Fr/FrGeneral	
BSW Parameter		BSW Type
FrEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the Flexray driver to zero or multiple ECUC partitions to make the modules API available in this partition. The Flexray driver will operate as an independent instance in each of the partitions.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00457]

BSW Module	BSW Context	
Fr	Fr/FrGeneral	
BSW Parameter		BSW Type
FrExtendedLPduReporting		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables or disables reporting of actual cycle and slot ID by Fr_TransmitTxLPdu, Fr_ReceiveRxLPdu, and Fr_CheckTxLPdu Status.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00459]

BSW Module	BSW Context	
Fr	Fr/FrGeneral	
BSW Parameter		BSW Type
FrIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00439]

BSW Module		BSW Context	
Fr		Fr/FrGeneral	
BSW Parameter		BSW Type	
FrNumCtrlSupported		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Determines the maximum number of communication controllers that the driver supports.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Fr_00394]

BSW Module		BSW Context	
Fr		Fr/FrGeneral	
BSW Parameter		BSW Type	
FrPrepareLPduSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables or disables API function Fr_PrepareLPdu.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Fr_00453]

BSW Module		BSW Context	
Fr		Fr/FrGeneral	
BSW Parameter		BSW Type	
FrReconfigLPduSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables or disabled API function Fr_ReconfigLPdu.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Fr_00454]

BSW Module		BSW Context	
Fr		Fr/FrGeneral	
BSW Parameter		BSW Type	
FrRxStringentCheck		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
If stringent check is enabled (true), received frames are accepted only if no slot status error occurred.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Fr_00002]

BSW Module		BSW Context	
Fr		Fr/FrGeneral	
BSW Parameter		BSW Type	
FrRxStringentLengthCheck		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
If stringent check is enabled (true), received frames are accepted only if the received payload length matches the configured payload length.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Fr_00016]

BSW Module		BSW Context	
Fr		Fr/FrGeneral	
BSW Parameter		BSW Type	
FrVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables/disables the existence of the Fr_GetVersionInfo API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Fr_00396]

BSW Module	BSW Context	
Fr	Fr	
BSW Parameter	BSW Type	
FrMultipleConfiguration	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	This container contains the configuration parameters and sub containers of the AUTOSAR Fr module.	
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00397]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration	
BSW Parameter	BSW Type	
FrController	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	Configuration of the individual controller.	
Template Description	FlexRay bus specific communication port attributes.	
M2 Parameter	SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController	
Mapping Rule	Mapping Type	
Container shall be created if the ECU contains a FlexRay communication controller that is connected to the regarded communication cluster.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00083]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrAbsoluteTimer	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	Specifies the absolute timer configuration parameters of the Fr.	
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00432]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController/FrAbsoluteTimer	
BSW Parameter		BSW Type
FrAbsTimerIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Contains the index of an absolute timer contained in Fr on a certain FlexRay CC.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00433]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter		BSW Type
FrControllerDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00452]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController/FrControllerDemEventParameterRefs	
BSW Parameter		BSW Type
FR_E_CTRL_TESTRESULT		ECUC-REFERENCE-DEF
BSW Description		
Reference to DEM event Id that is reported for FlexRay controller hardware test failure. If this parameter is not configured, no event reporting happens.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00005]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter		BSW Type
FrCtrlEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps one single Flexray controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the Flexray driver is mapped to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00458]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter		BSW Type
FrCtrlIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Determines index of CC within Fr.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00400]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter		BSW Type
FrFifo		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
One First In First Out (FIFO) queued receive structure, defining the admittance criteria to the FIFO, and mandating the ability to admit messages into the FIFO based on Message Id filtering criteria.		
Template Description		
One First In First Out (FIFO) queued receive structure, defining the admittance criteria to the FIFO, and mandating the ability to admit messages into the FIFO based on Message Id filtering criteria.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoConfiguration		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00009]

BSW Module		BSW Context	
Fr		Fr/FrMultipleConfiguration/FrController/FrFifo	
BSW Parameter		BSW Type	
FrAdmitWithoutMessageId		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Determines whether or not frames received in the dynamic segment that don't contain a message ID will be admitted into the FIFO.			
Template Description			
Boolean configuration which determines whether or not frames received in the dynamic segment that don't contain a message ID will be admitted into the FIFO.			
M2 Parameter			
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoConfiguration.admitWithoutMessageId			
Mapping Rule		Mapping Type	
1:1 mapping		full	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_Fr_00006]	

BSW Module		BSW Context	
Fr		Fr/FrMultipleConfiguration/FrController/FrFifo	
BSW Parameter		BSW Type	
FrBaseCycle		ECUC-INTEGER-PARAM-DEF	
BSW Description			
FIFO cycle counter acceptance criteria.			
Template Description			
FIFO cycle counter acceptance criteria.			
M2 Parameter			
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoConfiguration.baseCycle			
Mapping Rule		Mapping Type	
1:1 mapping		full	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_Fr_00007]	

BSW Module		BSW Context	
Fr		Fr/FrMultipleConfiguration/FrController/FrFifo	
BSW Parameter		BSW Type	
FrChannels		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
FIFO channel admittance criteria.			
Template Description			
M2 Parameter			
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoConfiguration.channel			
Mapping Rule		Mapping Type	
If channelA is referenced set Parameter to FR_CHANNEL_A. If channelB is referenced set parameter to FR_CHANNEL_B. If two identical FlexrayFifoConfiguration elements exist with references to A and B only one FrFifo container shall be created (FR_CHANNEL_AB		full	







Mapping Status	ECUC Parameter ID
valid	[ECUC_Fr_00449]

BSW Module	BSW Context
Fr	Fr/FrMultipleConfiguration/FrController/FrFifo
BSW Parameter	BSW Type
FrCycleRepetition	ECUC-INTEGER-PARAM-DEF
BSW Description	
FIFO cycle counter acceptance criteria. Valid values are 1,2,4,5,8,10,16,20,32,40,50,64. Remark: Values 1,2,4,8,16,32,64 are valid only for FlexRay Protocol 2.1 Rev A compliance.	
Template Description	
FIFO cycle counter acceptance criteria.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoConfiguration. <a href="#">cycleRepetition</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Fr_00008]

BSW Module	BSW Context
Fr	Fr/FrMultipleConfiguration/FrController/FrFifo
BSW Parameter	BSW Type
FrFifoDepth	ECUC-INTEGER-PARAM-DEF
BSW Description	
FrFifoDepth configures the maximum number of rx-frames which can be contained in the FIFO.	
Template Description	
FrFifoDepth configures the maximum number of rx-frames which can be contained in the FIFO.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoConfiguration. <a href="#">fifoDepth</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Fr_00010]

BSW Module	BSW Context
Fr	Fr/FrMultipleConfiguration/FrController/FrFifo
BSW Parameter	BSW Type
FrMsgIdMask	ECUC-INTEGER-PARAM-DEF
BSW Description	
FIFO message identifier acceptance criteria (Mask filter).	
Template Description	
FIFO message identifier acceptance criteria (Mask filter).	
M2 Parameter	





SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoConfiguration. <a href="#">msgIdMask</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Fr_00011]

BSW Module	BSW Context
Fr	Fr/FrMultipleConfiguration/FrController/FrFifo
BSW Parameter	BSW Type
FrMsgIdMatch	ECUC-INTEGER-PARAM-DEF
BSW Description	
FIFO message identifier acceptance criteria (Match filter).	
Template Description	
FIFO message identifier acceptance criteria (Match filter).	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoConfiguration. <a href="#">msgIdMatch</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Fr_00012]

BSW Module	BSW Context
Fr	Fr/FrMultipleConfiguration/FrController/FrFifo
BSW Parameter	BSW Type
FrRange	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
FIFO Frame Id range acceptance criteria.	
Template Description	
FIFO Frame Id range acceptance criteria.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology:: <a href="#">FlexrayFifoRange</a>	
Mapping Rule	Mapping Type
create container for each Fifo configuration	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Fr_00013]

BSW Module	BSW Context
Fr	Fr/FrMultipleConfiguration/FrController/FrFifo/FrRange
BSW Parameter	BSW Type
FrRangeMax	ECUC-INTEGER-PARAM-DEF
BSW Description	
Last Frameld of this range that will be accepted by the FIFO.	
Template Description	





Max Range.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoRange.rangeMax	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00014]

<b>BSW Module</b>	<b>BSW Context</b>	
Fr	Fr/FrMultipleConfiguration/FrController/FrFifo/FrRange	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrRangeMin		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
First Frameld of this range that will be accepted by the FIFO.		
<b>Template Description</b>		
Min Range.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayFifoRange.rangeMin		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00015]	

<b>BSW Module</b>	<b>BSW Context</b>	
Fr	Fr/FrMultipleConfiguration/FrController	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrPAllowHaltDueToClock		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Boolean flag that controls the transition to the POC:halt state due to a clock synchronization errors. If set to true, the CC is allowed to transition to POC:halt. If set to false, the CC will not transition to the POC:halt state but will enter or remain in the POC:normal passive state (self healing would still be possible)		
<b>Template Description</b>		
Boolean flag that controls the transition to the POC:halt state due to a clock synchronization errors. If set to true, the Communication Controller is allowed to transition to POC:halt. If set to false, the Communication Controller will not transition to the POC:halt state but will enter or remain in the normal POC (passive State).		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.allowHaltDueToClock		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00402]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrAllowPassiveToActive	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of consecutive even/odd cycle pairs that must have valid clock correction terms before the CC will be allowed to transition from the POC:normal passive state to POC:normal active state. If set to zero, the CC is not allowed to transition from POC:normal passive to POC:normal active		
Template Description		
Number of consecutive even/odd cycle pairs that shall have valid clock correction terms before the Communication Controller will be allowed to transition from the POC:normal passive state to POC:normal active state. If set to 0, the Communication Controller is not allowed to transition from POC:norm		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.allowPassiveToActive		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00403]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPChannels	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Channels to which the node is connected. Implementation Type: Fr_ChannelType		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::PhysicalChannel.commConnector		
Mapping Rule		Mapping Type
If channelA refers the connector set parameter to FR_CHANNEL_A. If ChannelB refers the connector set parameter to FR_CHANNEL_B. If channelA and channelB refer the connector set parameter to FR_CHANNEL_AB,		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00404]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPClusterDriftDamping	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Local cluster drift damping factor used for rate correction [Microticks]. Remark: Upper limit 10 for FlexRay Protocol 3.0 compliance.		
Template Description		
The cluster drift damping factor used in clock synchronization rate correction in microticks		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.clusterDriftDamping		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Fr_00405]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPDecodingCorrection	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Value used by the receiver to calculate the difference between primary time reference point and secondary time reference point [Microticks]. Remark: Lower limit 14 for FlexRay Protocol 2.1 Rev. A compliance. Upper limit 136 for FlexRay Protocol 3.0 compliance.		
Template Description		
Value used by the receiver to calculate the difference between primary time reference point and secondary time reference point. Unit: Microticks (pDecodingCorrection)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">decodingCorrection</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00406]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPDelayCompensationA	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Value used to compensate for reception delays on the indicated channel. This covers assumed propagation delay up to c PropagationDelayMax for microticks in the range of 0.0125us to 0.05us [Microticks]. Remark: Lower limit 4 for FlexRay Protocol 3.0 compliance. Remark: Upper limit 200 for FlexRay Protocol 2.1 Rev A compliance.		
Template Description		
Value used to compensate for reception delays on channel A Unit: Microticks. This optional parameter shall only be filled out if channel A is used.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">delayCompensationA</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00407]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPDelayCompensationB	ECUC-INTEGER-PARAM-DEF	





<b>BSW Description</b>	
Value used to compensate for reception delays on the indicated channel. This covers assumed propagation delay up to c PropagationDelayMax for microticks in the range of 0.0125us to 0.05us [Microticks]. Remark: Lower limit 4 for FlexRay Protocol 3.0 compliance. Remark: Upper limit 200 for FlexRay Protocol 2.1 Rev A compliance.	
<b>Template Description</b>	
Value used to compensate for reception delays on channel B. Unit: Microticks. This optional parameter shall only be filled out if channel B is used.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.delayCompensationB	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00408]

<b>BSW Module</b>	<b>BSW Context</b>	
Fr	Fr/FrMultipleConfiguration/FrController	
<b>BSW Parameter</b>	<b>BSW Type</b>	
FrPEternalSync	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
Flag indicating whether the node is externally synchronized (operating as time gateway sink in an TT-E cluster) or locally synchronized. If FrPEternalSync is set to 'true' then FrPTwoKeySlotMode must also be set to 'true'. Remarks: Set to 'false' for FlexRay Protocol 2.1 Rev. A compliance.		
<b>Template Description</b>		
Flag indicating whether the node is externally synchronized (operating as Time Gateway Sink in an TT-E Time Triggered External Sync cluster) or locally synchronized.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.externalSync		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00448]	

<b>BSW Module</b>	<b>BSW Context</b>	
Fr	Fr/FrMultipleConfiguration/FrController	
<b>BSW Parameter</b>	<b>BSW Type</b>	
FrPFallBackInternal	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
Flag indicating whether a time gateway sink node will switch to local clock operation when synchronization with the time gateway source node is lost (FrPFallBackInternal = true) or will instead go to POC:ready (FrPFallBackInternal =false). Remarks: Set to 'false' for FlexRay Protocol 2.1 Rev. A compliance.		
<b>Template Description</b>		
Flag indicating whether a Time Gateway Sink node will switch to local clock operation when synchronization with the Time Gateway Source node is lost (pFallBackInternal = true) or will instead go to POC:ready (pFallBackInternal = false).		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.fallBackInternal		
<b>Mapping Rule</b>	<b>Mapping Type</b>	





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00447]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPKeySlotId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
ID of the key slot, i.e., the slot used to transmit the startup frame, sync frame, or designated key slot frame. If this parameter is set to zero the node does not have a key slot. For Fr3.0: if the value is not provided in System Description it shall be configured to 0. For Fr2.1: if the value is not provided in System Description it is driver implementation specific which value to configure.		
Template Description		
ID of the slot used to transmit the startup frame, sync frame, or designated single slot frame. If the attributes keySlotUsedForStartUp, keySlotUsedForSync, or keySlotOnlyEnabled are set to true the key slot value is mandatory.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">keySlotID</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00411]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPKeySlotOnlyEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Flag indicating whether or not the node shall enter key slot only mode following startup. Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter pSingleSlotEnabled.		
Template Description		
Flag indicating whether or not the node shall enter key slot only mode following startup.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">keySlotOnlyEnabled</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00425]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPKeySlotUsedForStartup	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		





Flag indicating whether the key slot is used to transmit a startup frame. If FrPKeySlotUsedForStartup is set to true then FrPKeySlotUsedForSync must also be set to true. If FrPTwoKeySlotMode is set to true then both FrPKeySlotUsedForSync and FrPKeySlotUsedForStartup must also be set to true.	
<b>Template Description</b>	
Flag indicating whether the Key Slot is used to transmit a startup frame.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">keySlotUsedForStartUp</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00412]

<b>BSW Module</b>	<b>BSW Context</b>	
Fr	Fr/FrMultipleConfiguration/FrController	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrPKeySlotUsedForSync		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Flag indicating whether the key slot is used to transmit a sync frame. If FrPKeySlotUsedForStartup is set to true then FrPKeySlotUsedForSync must also be set to true. If FrPTwoKeySlotMode is set to true then both FrPKeySlotUsedForSync and FrPKeySlotUsedForStartup must also be set to true.		
<b>Template Description</b>		
Flag indicating whether the Key Slot is used to transmit a sync frame.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">keySlotUsedForSync</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00413]	

<b>BSW Module</b>	<b>BSW Context</b>	
Fr	Fr/FrMultipleConfiguration/FrController	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrPLatestTx		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Number of the last minislot in which a frame transmission can start in the dynamic segment. Remark: Upper limit 7980 for FlexRay Protocol 2.1 Rev A compliance.		
<b>Template Description</b>		
The number of the last minislot in which a transmission can start in the dynamic segment for the respective node		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">latestTX</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00414]	



BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPMacroInitialOffsetA	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Integer number of macroticks between the static slot boundary and the following macrotick boundary of the secondary time reference point based on the nominal macrotick duration [Macroticks].		
Template Description		
Integer number of macroticks between the static slot boundary and the closest macrotick boundary of the secondary time reference point based on the nominal macrotick duration. (pMacroInitialOffset). This optional parameter shall only be filled out if channel A is used.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.macroInitialOffsetA		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00415]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPMacroInitialOffsetB	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Integer number of macroticks between the static slot boundary and the following macrotick boundary of the secondary time reference point based on the nominal macrotick duration [Macroticks].		
Template Description		
Integer number of macroticks between the static slot boundary and the closest macrotick boundary of the secondary time reference point based on the nominal macrotick duration. (pMacroInitialOffset). This optional parameter shall only be filled out if channel B is used.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.macroInitialOffsetB		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00416]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPMicroInitialOffsetA	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of microticks between the secondary time reference point and the macrotick boundary immediately following the secondary time reference point. The parameter depends on FrPDelayCompensationA and therefore it has to be set independently for each channel [Microticks].		
Template Description		





Number of microticks between the closest macrotick boundary described by gMacroInitialOffset and the secondary time reference point. The parameter depends on pDelayCompensationA and therefore it has to be set independently for each channel. This optional parameter shall only be filled out if channel A is used.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.microInitialOffsetA	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00417]

<b>BSW Module</b>	<b>BSW Context</b>	
Fr	Fr/FrMultipleConfiguration/FrController	
<b>BSW Parameter</b>	<b>BSW Type</b>	
FrPMicroInitialOffsetB	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
Number of microticks between the secondary time reference point and the macrotick boundary immediately following the secondary time reference point. The parameter depends on FrPDelayCompensationB and therefore it has to be set independently for each channel [Microticks].		
<b>Template Description</b>		
Number of microticks between the closest macrotick boundary described by gMacroInitialOffset and the secondary time reference point. The parameter depends on pDelayCompensationB and therefore it has to be set independently for each channel. This optional parameter shall only be filled out if channel B is used.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.microInitialOffsetB		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00418]	

<b>BSW Module</b>	<b>BSW Context</b>	
Fr	Fr/FrMultipleConfiguration/FrController	
<b>BSW Parameter</b>	<b>BSW Type</b>	
FrPMicroPerCycle	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
Nominal number of microticks in the communication cycle of the local node. If nodes have different microtick durations this number will differ from node to node [Microticks]. Remark: Lower limit 960 for FlexRay Protocol 3.0 compliance. Upper limit 640000 for FlexRay Protocol 2.1 Rev A compliance.		
<b>Template Description</b>		
The nominal number of microticks in a communication cycle		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.microPerCycle		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Fr_00419]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPNmVectorEarlyUpdate	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Flag indicating when the update of the Network Management Vector in the CHI shall take place. If FrPNmVectorEarlyUpdate is set to false, the update shall take place after the NIT. If FrPNmVectorEarlyUpdate is set to true, the update shall take place after the end of the static segment. Remarks: Set to 'false' for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
Flag indicating when the update of the Network Management Vector in the CHI shall take place. If set to false, the update shall take place after the NIT. If set to true, the update shall take place after the end of the static segment.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.nmVectorEarlyUpdate		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00444]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPOffsetCorrectionOut	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Magnitude of the maximum permissible offset correction value [Microticks]. Remark: Upper limit 15567 for FlexRay Protocol 2.1 Rev A compliance. Remark: Lower limit 15 for FlexRay Protocol 3.0 compliance.		
Template Description		
Magnitude of the maximum permissible offset correction value. Unit:microtick (pOffsetCorrectionOut)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.offsetCorrectionOut		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00421]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPOffsetCorrectionStart	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Start of the offset correction phase within the NIT, expressed as the number of macroticks from the start of cycle [Macroticks]. Remark: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gOffsetCorrectionStart. Remark: Lower limit 9 for FlexRay Protocol 2.1 Rev A compliance.		
Template Description		
Start of the offset correction phase within the Network Idle Time (NIT), expressed as the number of macroticks from the start of cycle. Unit: macroticks		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.offsetCorrectionStart		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Fr_00450]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPPayloadLengthDynMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum payload length for dynamic frames [16 bit words].		
Template Description		
Maximum payload length for the dynamic channel of a frame in 16 bit WORDS.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">maximumDynamicPayloadLength</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00422]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPRateCorrectionOut	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Magnitude of the maximum permissible rate correction value and the maximum drift offset between two nodes operating with unsynchronized clocks for one communication cycle [Microticks]. Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter pdMaxDrift. Lower limit 3 for FlexRay Protocol 3.0 compliance. Upper limit 1923 for FlexRay Protocol 2.1 Rev A compliance.		
Template Description		
Magnitude of the maximum permissible rate correction value and the maximum drift offset between two nodes operating with unsynchronized clocks for one communication cycle. Unit:Microticks (pRateCorrectionOut) Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter pdMaxDrift.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController. <a href="#">rateCorrectionOut</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00423]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	





FrSamplesPerMicrotick	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Number of samples per microtick. Remark: Allowed range N1SAMPLES, N2SAMPLES for FlexRay Protocol 3.0 compliance.	
<b>Template Description</b>	
Number of samples per microtick	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.samplesPerMicrotick	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00424]

<b>BSW Module</b>	<b>BSW Context</b>
Fr	Fr/FrMultipleConfiguration/FrController
<b>BSW Parameter</b>	<b>BSW Type</b>
FrPSecondKeySlotId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
ID of the second key slot, in which a second startup frame shall be sent when operating as a coldstart node in a TT-L or TT-D cluster. If this parameter is set to zero the node does not have a second key slot. Remark: Set to 0 for FlexRay Protocol 2.1 Rev A compliance.	
<b>Template Description</b>	
ID of the second Key slot, in which a second startup frame shall be sent in TT-L Time Triggered Local Master Sync or TT-E Time Triggered External Sync mode. If this parameter is set to zero the node does not have a second key slot.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.secondKeySlotId	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00445]

<b>BSW Module</b>	<b>BSW Context</b>
Fr	Fr/FrMultipleConfiguration/FrController
<b>BSW Parameter</b>	<b>BSW Type</b>
FrPTwoKeySlotMode	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Flag indicating whether node operates as a coldstart node in a TT-E or TT-L cluster. If pTwoKeySlotMode is set to true then both pKeySlotUsedForSync and pKeySlotUsedForStartup must also be set to true. If pExternalSync is set to true then pTwoKeySlotMode must also be set to true. Remark: Set to false for FlexRay Protocol 2.1 Rev A compliance.	
<b>Template Description</b>	
Flag indicating whether node operates as a startup node in a TT-E Time Triggered External Sync or TT-L Time Triggered Local Master Sync cluster.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.twoKeySlotMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00446]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPWakeupChannel	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Channel used by the node to send a wakeup pattern. FrPWakeupChannel must be selected from among the channels configured by FrPChannels.		
Template Description		
Referenced channel used by the node to send a wakeup pattern. (pWakeupChannel)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationConnector.wakeupChannel		
Mapping Rule		Mapping Type
If channelA refers to the FlexrayCommunicationConnector and wakeupChannel=true then FrPWakeupChannel = FR_CHANNEL_A. If channelB refers to the FlexrayCommunicationConnector and wakeupChannel = true then FrPWakeupChanel = FR_CHANNEL_B.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00426]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPWakeupPattern	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of repetitions of the wakeup symbol that are combined to form a wakeup pattern when the node enters the POC:wakeup send state. Remark: Lower limit 2 for FlexRay Protocol 2.1 Rev A compliance.		
Template Description		
Number of repetitions of the Tx-wakeup symbol to be sent during the CC_WakeupSend state of this Node in the cluster		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.wakeupPattern		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Fr_00427]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPdAcceptedStartupRange	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Expanded range of measured clock deviation allowed for startup frames during integration [Microticks]. Remark: Upper limit 1875 for FlexRay Protocol 2.1 Rev A compliance. Remark: Lower limit 29 for FlexRay Protocol 3.0 compliance.		
Template Description		
Expanded range of measured clock deviation allowed for startup frames during integration. Unit: microtick		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.acceptedStartupRange		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Fr_00428]

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPdListenTimeout	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Value for the startup listen timeout and wakeup listen timeout. Although this is a node local parameter, the real time equivalent of this value should be the same for all nodes in the cluster [Microticks]. Remark: Lower limit 1926 for FlexRay Protocol 3.0 compliance. Upper limit 1283846 for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
Value for the startup listen timeout and wakeup listen timeout. Although this is a node local parameter, the real time equivalent of this value should be the same for all nodes in the cluster. Unit: Microticks		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.listenTimeout		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00429]	

BSW Module	BSW Context	
Fr	Fr/FrMultipleConfiguration/FrController	
BSW Parameter	BSW Type	
FrPdMicrotick	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Duration of a microtick. Remark: Allowed range T12_5NS, T25NS, T50NS for FlexRay Protocol 3.0 compliance.		
Template Description		
Duration of a microtick. This attribute can be derived from samplePerMicrotick and gdSampleClockPeriod. Unit: seconds		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.microtickDuration		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Fr_00431]	

## C.4.2 FlexRay Interface Mapping

BSW Module	BSW Context	
FrIf	FrIf	
BSW Parameter	BSW Type	





FrIfConfig	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container contains the configuration parameters and sub containers of the AUTOSAR FrIf module.	
<b>Template Description</b>	
FlexRay specific attributes to the physicalCluster	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Container shall be created if the ECU is connected to a FlexRay Cluster.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrIf_06001]

<b>BSW Module</b>	<b>BSW Context</b>
FrIf	FrIf/FrIfConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
FrIfCluster	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container specifies a FrIf Cluster and all related data which is required to enable communication of the Cluster. A Cluster may consist of more than one Controller.	
<b>Template Description</b>	
FlexRay specific attributes to the physicalCluster	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Container shall be created if the ECU is connected to a FlexRay Cluster.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrIf_05366]

<b>BSW Module</b>	<b>BSW Context</b>
FrIf	FrIf/FrIfConfig/FrIfCluster
<b>BSW Parameter</b>	<b>BSW Type</b>
FrIfClstIdx	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter provides a zero-based consecutive index of the FlexRay Clusters. Upper layer BSW modules and the FrIf itself use this index to identify a FlexRay Cluster.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrIf_06002]



BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfClusterDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06091]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfClusterDemEventParameterRefs	
BSW Parameter		BSW Type
FRIF_E_ACS_CH_A		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when an error in ACS on channel A was detected. If the reference is not configured the error shall not be reported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06097]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfClusterDemEventParameterRefs	
BSW Parameter		BSW Type
FRIF_E_ACS_CH_B		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when an error in ACS on channel B was detected. If the reference is not configured the error shall not be reported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06098]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfClusterDemEventParameterRefs	
BSW Parameter	BSW Type	
FRIF_E_NIT_CH_A	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the DemEventParameter which shall be issued when an error in NIT on channel A was detected. If the reference is not configured the error shall not be reported.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06093]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfClusterDemEventParameterRefs	
BSW Parameter	BSW Type	
FRIF_E_NIT_CH_B	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the DemEventParameter which shall be issued when an error in NIT on channel B was detected. If the reference is not configured the error shall not be reported.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06094]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfClusterDemEventParameterRefs	
BSW Parameter	BSW Type	
FRIF_E_SW_CH_A	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the DemEventParameter which shall be issued when an error in SW on channel A was detected. If the reference is not configured the error shall not be reported.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06095]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfClusterDemEventParameterRefs	
BSW Parameter		BSW Type
FRIF_E_SW_CH_B		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when an error in SW on channel B was detected. If the reference is not configured the error shall not be reported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06096]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfController		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration of FlexRay CC.		
Template Description		
FlexRay bus specific communication port attributes.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController		
Mapping Rule		Mapping Type
Container shall be created if the ECU contains a FlexRay communication controller that is connected to the regarded communication cluster.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_05363]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController	
BSW Parameter		BSW Type
FrlfCtrlIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter provides a zero-based consecutive index of the FlexRay Communication Controllers. Upper layer BSW modules and the Frlf itself use this index to identify a FlexRay CC.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06045]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController	
BSW Parameter		BSW Type
FrlfFrCtrlRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Controller, which is handled by a specific Driver. This reference is unique for the ECU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06044]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController	
BSW Parameter		BSW Type
FrlfFrameTriggering		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
A Frame triggering contains the communication parameters of the FlexRay Frame as well as a reference to the Frame Construction Plan.		
Template Description		
FlexRay specific attributes to the FrameTriggering		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayCommunication::FlexrayFrameTriggering		
Mapping Rule		Mapping Type
If a FlexrayFrameTriggering exists in the System Extract that is connected via a FramePort reference to the regarded Ecu the following two cases exist: 1) If the FlexrayFrameTriggering contains exactly one FlexrayAbsolutelyScheduledTiming then only one FrlfFrameTriggering container shall be created. 2) If the FlexrayFrameTriggering contains more than one Flexray AbsolutelyScheduledTiming (e.g. to describe a multiple sending within one communication cycle) this FrlfFrameTriggering container shall be created once per defined FlexrayAbsolutelyScheduled Timing. Each created FrlfFrameTriggering container shall refer to the same FrlfFrameStructure.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06090]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering	
BSW Parameter		BSW Type
FrlfAllowDynamicLSduLength		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Allows L-PDU length reduction ('FrlfLSduLength' defines max. length) and indicates that the related CC buffer has to be reconfigured for the actual length and Header-CRC before transmission of the L-PDU.		
Template Description		
Allows L-PDU length reduction and indicates that the related CC buffer has to be reconfigured for the actual length and Header-CRC before transmission of the L-PDU.		
If this attribute is set to true than the referenced Frame length attribute defines the max. length.		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayCommunication::FlexrayFrameTriggering.allowDynamicLSduLength	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06049]

<b>BSW Module</b>	<b>BSW Context</b>
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering
<b>BSW Parameter</b>	<b>BSW Type</b>
FrlfAlwaysTransmit	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Defines whether the driver's API function Fr_TransmitTxLPdu() shall always be called for this L-PDU.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_00013]

<b>BSW Module</b>	<b>BSW Context</b>
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering
<b>BSW Parameter</b>	<b>BSW Type</b>
FrlfBaseCycle	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter contains the FlexRay Base Cycle used to transmit this FlexRay Frame.	
<b>Template Description</b>	
The first communication cycle where the frame is sent.	
This value is incremented at the beginning of each new cycle, ranging from 0 to 63, and is reset to 0 after a sequence of 64 cycles.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CycleRepetition.BaseCycle	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06051]

<b>BSW Module</b>	<b>BSW Context</b>
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering
<b>BSW Parameter</b>	<b>BSW Type</b>
FrlfChannel	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	





This parameter contains the FlexRay Channel used to transmit this FlexRay Frame.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::PhysicalChannel. <a href="#">frameTriggering</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
FrameTriggering element in the System Template is aggregated by the PhysicalChannel that is used to transmit this FlexRay Frame	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06052]

<b>BSW Module</b>	<b>BSW Context</b>
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering
<b>BSW Parameter</b>	<b>BSW Type</b>
FrlfCycleRepetition	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter contains the FlexRay Cycle Repetition used to transmit this FlexRay Frame. Possible values for FlexRay Protocol version 2.1: 1,2,4,8,16,32,64 Possible values for FlexRay Protocol version 3.0: 1,2,4,5,8,10,16,20,32,40,50,64	
<b>Template Description</b>	
The number of communication cycles (after the first cycle) whenever the frame described by this timing is sent again.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CycleRepetition. <a href="#">CycleRepetition</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06053]

<b>BSW Module</b>	<b>BSW Context</b>
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering
<b>BSW Parameter</b>	<b>BSW Type</b>
FrlfFrameStructureRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the Construction Plan of the FlexRay Frame.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::FrameTriggering. <a href="#">frame</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Reference shall comply to the reference in the System Description between the FrameTriggering element and the Frame.element.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06048]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering	
BSW Parameter	BSW Type	
FrlfFrameTriggeringDemEventParameterRefs	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06099]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering/FrlfFrameTriggeringDemEventParameterRefs	
BSW Parameter	BSW Type	
FRIF_E_LPDU_SLOTSTATUS	ECUC-REFERENCE-DEF	
BSW Description		
Reference to DEM event Id that is reported when FlexRay driver module detects slot errors. If this parameter is not configured, no event reporting happens.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_00009]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfFrameTriggering	
BSW Parameter	BSW Type	
FrlfLsduLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The payload length of the Frame is given here. This parameter is required for validation if configured PDUs and update information fits into the Frame at configuration time [bytes].		
Template Description		
The used length (in bytes) of the referencing frame. Should not be confused with a static byte length reserved for each frame by some platforms (e.g. FlexRay). The frameLength of zero bytes is allowed. Please consider also TPS_SYST_02255.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Frame.frameLength		
Mapping Rule	Mapping Type	





Find Frame that is referenced by the regarded FrameTriggering and use the frameLength attribute	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrIf_06054]

BSW Module	BSW Context	
FrIf	FrIf/FrIfConfig/FrIfCluster/FrIfController/FrIfFrameTriggering	
BSW Parameter		BSW Type
FrIfMessageId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The first two bytes of the payload segment of the FlexRay frame format for frames transmitted in the dynamic segment can be used as receiver filterable data called the message ID.		
Template Description		
The first two bytes of the payload segment of the FlexRay frame format for frames transmitted in the dynamic segment can be used as receiver filterable data called the message ID.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayCommunication::FlexrayFrameTriggering.messageId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrIf_00010]

BSW Module	BSW Context	
FrIf	FrIf/FrIfConfig/FrIfCluster/FrIfController/FrIfFrameTriggering	
BSW Parameter		BSW Type
FrIfPayloadPreamble		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switching the Payload Preamble bit.		
Template Description		
Switching the Payload Preamble bit.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayCommunication::FlexrayFrameTriggering.payloadPreambleIndicator		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrIf_06055]

BSW Module	BSW Context	
FrIf	FrIf/FrIfConfig/FrIfCluster/FrIfController/FrIfFrameTriggering	
BSW Parameter		BSW Type
FrIfSlotId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter contains the FlexRay Slot ID used to transmit this FlexRay Frame.		
Template Description		







<p>In the static part the SlotID defines the slot in which the frame is transmitted. The SlotID also determines, in combination with FlexrayCluster::numberOfStaticSlots, whether the frame is sent in static or dynamic segment. In the dynamic part, the slot id is equivalent to a priority. Lower dynamic slot ids are all sent until the end of the dynamic segment. Higher numbers, which were ignored that time, have to wait one cycle and then shall try again.</p> <p>minValue: 1 maxValue: 2047</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayCommunication::FlexrayAbsolutelyScheduledTiming.slotID	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrIf_06056]

<b>BSW Module</b>	<b>BSW Context</b>
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController
<b>BSW Parameter</b>	<b>BSW Type</b>
FrlfLPdu	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Reference to a L-PDU index	
<b>Template Description</b>	
Data frame which is sent over a communication medium. This element describes the pure Layout of a frame sent on a channel.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::Frame	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each FlexRay Frame that is transmitted or received via the regarded communication controller..	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_05364]

<b>BSW Module</b>	<b>BSW Context</b>
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfLPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
FrlfLPduldx	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter identifies the L-PDU in the interaction between FlexRay Interface and FlexRay Driver.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06058]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfLPdu	
BSW Parameter	BSW Type	
FrlfReconfigurable	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter specifies that this LPdu is reconfigurable using Frlf_ReconfigLPdu. This means that this LPdu can be assigned to a different FrameTriggering at runtime. However, this reconfiguration is limited by hardware constraints. The direction of the LPdu cannot be reconfigured.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_00008]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfLPdu	
BSW Parameter	BSW Type	
FrlfVBTriggeringRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the assigned Frame triggering.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06057]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController	
BSW Parameter	BSW Type	
FrlfTransceiver	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Up to two FlexRay Transceivers may connect a Controller to a Cluster. This container realizes a Controller-Transceiver assignment.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_05391]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfTransceiver	
BSW Parameter		BSW Type
FrlfClusterChannel		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter identifies to which one of the two Channels (A, B, A and B) of the Cluster the Transceiver is connected. FrlfClusterChannel shall map to Fr_ChannelType: FRIF_CHANNEL_A == FR_CHANNEL_A FRIF_CHANNEL_B == FR_CHANNEL_B FR_CHANNEL_AB shall not be used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06062]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfController/FrlfTransceiver	
BSW Parameter		BSW Type
FrlfFrTrcvChannelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Transceiver Driver Channel. This reference is unique for the ECU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06061]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfDetectNITError		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Indicates whether NIT error status of each cluster shall be detected or not.		
Template Description		
Indicates whether NIT error status of each cluster shall be detected or not.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.detectNitError		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_00003]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGChannels		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
The channels that are used by the cluster. Implementation Type: Fr_ChannelType		
Template Description		
FlexRay specific attributes to the physicalChannel		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayPhysicalChannel		
Mapping Rule		Mapping Type
The channels that are used by the cluster are described in the System Template by the CommunicationCluster-PhysicalChannel relationship.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06006]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGColdStartAttempts		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of times a node in the cluster is permitted to attempt to start the cluster by initiating schedule synchronization		
Template Description		
The maximum number of times that a node in this cluster is permitted to attempt to start the cluster by initiating schedule synchronization		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.coldStartAttempts		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06008]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGCycleCountMax		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum cycle counter value in a given cluster. Remark: Set to 63 for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
Maximum cycle counter value in a given cluster. Remark: Set to 63 for FlexRay Protocol 2.1 Rev. A compliance.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.cycleCountMax		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06086]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGListenNoise	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Upper limit for the start up listen timeout and wake up listen timeout in the presence of noise. It is used as a multiplier of the node parameter pdListenTimeout.		
Template Description		
Upper limit for the start up and wake up listen timeout in the presence of noise. Expressed as a multiple of the cluster constant pdListenTimeout. Unit microticks		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster. <a href="#">listenNoise</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06009]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGMacroPerCycle	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of macroticks in a communication cycle. Note: Lower limit 10 for FlexRay Protocol 2.1 Rev. A compliance		
Template Description		
The number of macroticks in a communication cycle		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster. <a href="#">macroPerCycle</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06010]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGMaxWithoutClockCorrectFatal	ECUC-INTEGER-PARAM-DEF	
BSW Description		





Threshold used for testing the vClockCorrectionFailed counter. Defines the number of consecutive even/odd Cycle pairs with missing clock correction terms that will cause the protocol to transition from the POC:normal active or POC:normal passive state into the POC:halt state. [Even/odd cycle pairs].	
<b>Template Description</b>	
Threshold concerning vClockCorrectionFailedCounter. Defines the number of consecutive even/odd Cycle pairs with missing clock correction terms that will cause the protocol to transition from the POC:normal active or POC:normal passive state into the POC:halt state.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.maxWithoutClockCorrectionFatal	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06011]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfCluster	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfGMaxWithoutClockCorrectPassive		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Threshold used for testing the vClockCorrectionFailed counter. Defines the number of consecutive even/odd Cycle pairs with missing clock correction terms that will cause the protocol to transition from the POC:normal active state to the POC:normal passive state. [Even/Odd cycle pairs]		
<b>Template Description</b>		
Threshold concerning vClockCorrectionFailedCounter. Defines the number of consecutive even/odd Cycle pairs with missing clock correction terms that will cause the protocol to transition from the POC:normal active state to the POC:normal passive state.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.maxWithoutClockCorrectionPassive		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Frlf_06012]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfCluster	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfGNetworkManagementVectorLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Length of the Network Management vector in a cluster [bytes]		
<b>Template Description</b>		
Length of the Network Management vector in a cluster [bytes]		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.networkManagementVectorLength		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Frlf_06013]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGNumberOfMinislots	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of minislots in the dynamic segment Remark: Upper limit 7986 for FlexRay Protocol 2.1 Rev. A compliance		
Template Description		
Number of Minislots in the dynamic segment.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.numberOfMinislots		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06014]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGNumberOfStaticSlots	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of static slots in the static segment		
Template Description		
The number of static slots in the static segment.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.numberOfStaticSlots		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06015]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGPayloadLengthStatic	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Payload length of a static frame [16 bit words]		
Template Description		
Globally configured payload length of a static frame. Unit: 16-bit WORDS.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.payloadLengthStatic		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06018]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGSyncFrameIDCountMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of distinct syncframe identifiers present in a given cluster. This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gSyncNodeMax.		
Template Description		
Maximum number of distinct syncframe identifiers present in a given cluster. This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gSyncNodeMax.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.syncFrameIdCountMax		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06019]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdActionPointOffset	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of macroticks the action point is offset from the beginning of a static slot.		
Template Description		
The offset of the action point in networks		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.actionPointOffset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06020]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdBit	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Nominal bit time in seconds		
Template Description		
Nominal bit time (= 1 / fx:SPEED). gdBit = cSamplesPerBit * gdSampleClockPeriod. Unit: seconds (gdBit)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.bit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06021]



BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdCasRxLowMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Upper limit of the CAS acceptance windows [gdBit] Remark: Range 67 to 99 for FlexRay Protocol 2.1 Rev. A compliance		
Template Description		
Upper limit of the Collision Avoidance Symbol (CAS) acceptance window. Unit:bitDuration		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.casRxLowMax		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06024]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdCycle	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Length of the cycle, expressed in [s] Remark: Lower limit 0.000024 for FlexRay Protocol 3.0 compliance.		
Template Description		
Length of the cycle. Unit: seconds		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.cycle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06025]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdDynamicSlotIdlePhase	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Duration of the idle phase within a dynamic slot [Minislots].		
Template Description		
The duration of the dynamic slot idle phase in minislots.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.dynamicSlotIdlePhase		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06026]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdIgnoreAfterTx	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Duration for which the bitstrobing is paused after transmission [gdBit]. Remark: Set to 0 for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
Duration for which the bitstrobing is paused after transmission [gdBit].		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.ignoreAfterTx		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_00012]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdMacrotick	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Duration of the cluster wide nominal macrotick, expressed in s		
Template Description		
Duration of the cluster wide nominal macrotick, expressed in s.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.macrotickDuration		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06027]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdMiniSlotActionPointOffset	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of Macroticks the Minislot action point is offset from the beginning of a Minislot [Macroticks].		
Template Description		
The Offset of the action point within a minislot. Unit: macroticks		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.minislotActionPointOffset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06032]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGdMinislot		ECUC-INTEGER-PARAM-DEF
BSW Description		
Duration of a minislot [Macroticks]		
Template Description		
The duration of a minislot (dynamic segment). Unit: macroticks.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.minislotDuration		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06033]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGdNit		ECUC-INTEGER-PARAM-DEF
BSW Description		
Duration of the Network Idle Time [Macroticks] Remark: Upper limit 805 for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
The duration of the network idle time in macroticks		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.networkIdleTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06034]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGdSampleClockPeriod		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Sample clock period		
Template Description		
Sample clock period. Unit: seconds		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.sampleClockPeriod		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06035]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdStaticSlot	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Duration of a static slot [Macroticks]. Remark: Range 4-661 for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
The duration of a slot in the static segment. Unit: macroticks		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster. <a href="#">staticSlotDuration</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06036]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdSymbolWindow	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Duration of the symbol window [Macroticks]. Remark: Range 0-142 for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
Number of bits in the Transmission Start Sequence [gdBits].		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster. <a href="#">transmissionStartSequenceDuration</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06037]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter	BSW Type	
FrlfGdSymbolWindowActionPointOffset	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of macroticks the action point offset is from the beginning of the symbol window [Macroticks]. Remark: Set to GdActionPointOffset for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
Number of macroticks the action point offset is from the beginning of the symbol window [Macroticks].		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster. <a href="#">symbolWindowActionPointOffset</a>		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_00011]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGdTSSTransmitter		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of bits in the Transmission Start Sequence [gdBits]. Remark: Lower limit 3 for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
Number of bits in the Transmission Start Sequence [gdBits].		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.transmissionStartSequenceDuration		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06038]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGdWakeupRxIdle		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of bits used by the node to test the duration of the 'idle' or HIGH phase of a received wakeup [gdBit]. Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxIdle. Lower limit 14 for FlexRay Protocol 2.1 Rev. A compliance.		
Template Description		
Number of bits used by the node to test the duration of the 'idle' or HIGH phase of a received wakeup. Unit:bitDuration Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxIdle.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.wakeupRxIdle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06039]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGdWakeupRxLow		ECUC-INTEGER-PARAM-DEF
BSW Description		





Number of bits used by the node to test the duration of the LOW phase of a received wakeup [gdBit]. Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxLow. Lower limit 11 for FlexRay Protocol 2.1 Rev. A compliance.	
<b>Template Description</b>	
Number of bits used by the node to test the duration of the LOW phase of a received wakeup. Unit:bitDuration Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxLow.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.wakeupRxLow	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06040]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfCluster	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfGdWakeupRxWindow		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The size of the window used to detect wakeups [gdBit]. Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxWindow. Upper limit 301 for FlexRay Protocol 2.1 Rev. A compliance.		
<b>Template Description</b>		
The size of the window used to detect wakeups [gdBit]. Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolRxWindow.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.wakeupRxWindow		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06041]	

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfCluster	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfGdWakeupTxActive		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Number of bits used by the node to transmit the LOW phase of awakeup symbol and the HIGH and LOW phases of a WUDOP [gdBit]. Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolTxLow.		
<b>Template Description</b>		
Number of bits used by the node to transmit the LOW phase of awakeup symbol and the HIGH and LOW phases of a WUDOP. Unit:bitDuration		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.wakeupTxActive		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06043]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfGdWakeupTxIdle		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of bits used by the node to transmit the 'idle' part of a wakeup symbol [gdBit]. Remarks: This parameter maps to FlexRay Protocol 2.1 Rev. A parameter gdWakeupSymbolTxIdle.		
Template Description		
Number of bits used by the node to transmit the 'idle' part of a wakeup symbol. Unit: gDbit		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.wakeupTxIdle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06042]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfJobList		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies a list of all FlexRay Jobs of the Cluster to be performed by Frlf_JobListExec_<FrlfCluster.Short Name>().		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_05367]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList	
BSW Parameter		BSW Type
FrlfAbsTimerRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the absolute timer to be used to trigger the interrupt whose ISR contains the Frlf_JobListExec_<Frlf Cluster.ShortName>() function.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06063]

BSW Module	BSW Context
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList
BSW Parameter	BSW Type
FrlfJob	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	A job may contain more than one operation that are executed at a specific point in time.
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_05368]

BSW Module	BSW Context
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList/FrlfJob
BSW Parameter	BSW Type
FrlfCommunicationOperation	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	A separate operation which is part of a FlexRay Job and defines what type of action is executed.
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_05369]

BSW Module	BSW Context
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList/FrlfJob/FrlfCommunicationOperation
BSW Parameter	BSW Type
FrlfCommunicationAction	ECUC-ENUMERATION-PARAM-DEF
BSW Description	The action to be performed in the FlexRay Operation
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local







Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06067]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList/FrlfJob/FrlfCommunicationOperation	
BSW Parameter		BSW Type
FrlfCommunicationOperationIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
For each FlexRay Communication Job, this index spans a range of zero-based consecutive values and thus defines the order of the FlexRay Communication Operation in the respective FlexRay Communication Job.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06068]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList/FrlfJob/FrlfCommunicationOperation	
BSW Parameter		BSW Type
FrlfLPduIdxRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a L-PDu index		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06066]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList/FrlfJob/FrlfCommunicationOperation	
BSW Parameter		BSW Type
FrlfRxComOpMaxLoop		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the maximum number of loops for the receive RECEIVE_AND_INDICATE (Use case: emptying a FIFO). Please note that the parameter is mandatory if FrlfCommunicationAction parameter is set to RECEIVE_AND_INDICATE. For all other operations this parameter can be ignored.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_00007]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList/FrlfJob	
BSW Parameter	BSW Type	
FrlfCycle	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The FlexRay Cycle in which the communication operation will execute this job		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06064]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList/FrlfJob	
BSW Parameter	BSW Type	
FrlfMacrotick	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Macrotick offset in the Cycle [Macrotick]		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06065]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster/FrlfJobList/FrlfJob	
BSW Parameter	BSW Type	
FrlfMaxIsrDelay	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The maximum delay in macroticks the Frlf_JobListExec_<FrlfCluster.ShortName>() function is processed after the absolute timer interrupt was triggered.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06004]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
The execution cycle of the Frlf_MainFunction_<FrlfCluster.ShortName>() in seconds. The Frlf does not require this information but the BSW scheduler, which invokes the cluster main functions, needs it in order to plan its tasks.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06003]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfCluster	
BSW Parameter		BSW Type
FrlfSafetyMargin		ECUC-INTEGER-PARAM-DEF
BSW Description		
Additional timespan in macroticks which takes jitter into account to be able to set the JobListPointer to the next possible job which can be executed in case the FlexRay Job List Execution Function has be resynchronized.		
Template Description		
Additional timespan in macroticks which takes jitter into account to be able to set the JobListPointer to the next possible job which can be executed in case the FlexRay Job List Execution Function has be resynchronized.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster.safetyMargin		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_00004]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig	
BSW Parameter		BSW Type
FrlfFrameStructure		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The Frame structure specifies a Construction Plan how a Frame is assembled with PDUs and their respective Update-Bits.		
Template Description		
Data frame which is sent over a communication medium. This element describes the pure Layout of a frame sent on a channel.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Frame		
Mapping Rule		Mapping Type
Create container for each FlexRay Frame that is transmitted or received by the regarded ECU. IPduToFrameMapping element in the System Template contains the construction plan.		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_05370]

BSW Module	BSW Context
Frlf	Frlf/FrlfConfig/FrlfFrameStructure
BSW Parameter	BSW Type
FrlfByteOrder	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
<p>This parameter defines the ByteOrder of all Pdus that are mapped into the Frame.</p> <p>The absolute position of a Pdu in the Frame is determined by the definition of the ByteOrder parameter: If BIG_ENDIAN is specified, the FrlfPduOffset indicates the position of the most significant bit in the Frame. If LITTLE_ENDIAN is specified, the FrlfPduOffset indicates the position of the least significant bit in the Frame.</p>	
Template Description	
<p>This attribute defines the order of the bytes of the Pdu and the packing into the Frame. Please consider that <a href="#">[constr_3246]</a> and <a href="#">[constr_3222]</a> are restricting the usage of this attribute.</p>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduToFrameMapping.packingByteOrder	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06113]

BSW Module	BSW Context
Frlf	Frlf/FrlfConfig/FrlfFrameStructure
BSW Parameter	BSW Type
FrlfPduInFrame	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
<p>This container holds all the information about a PDU in a FlexRay Frame.</p>	
Template Description	
<p>A PduToFrameMapping defines the composition of Pdus in each frame.</p>	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduToFrameMapping	
Mapping Rule	Mapping Type
Container shall be created for each IPduToFrameMapping element inside the frame.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_05371]

BSW Module	BSW Context
Frlf	Frlf/FrlfConfig/FrlfFrameStructure/FrlfPduInFrame
BSW Parameter	BSW Type
FrlfPduOffset	ECUC-INTEGER-PARAM-DEF
BSW Description	
<p>The value specifies the offset of the PDU within the Frame [bytes].</p>	
Template Description	





<p>This attribute describes the bitposition of a Pdu within a Frame.</p> <p>Please note that the absolute position of the Pdu in the Frame is determined by the definition of the packingByteOrder attribute. If Big Endian is specified, the start position indicates the bit position of the most significant bit in the Frame. If Little Endian is specified, the start position indicates the bit position of the least significant bit in the Frame. The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p> <p>The Pdus are byte aligned in a Frame and only the values 0, 8, 16, 24,... (for little endian) and 7, 15, 23, ... (for big endian) are allowed.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduToFrameMapping.startPosition	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Please note that the startPosition attribute is defined in bits and the FrIfPduOffset parameter is defined in bytes.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrIf_06070]

<b>BSW Module</b>	<b>BSW Context</b>
FrIf	FrIf/FrIfConfig/FrIfFrameStructure/FrIfPduInFrame
<b>BSW Parameter</b>	<b>BSW Type</b>
FrIfPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
This is the reference to the local definition of a PDU.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrIf_06069]

<b>BSW Module</b>	<b>BSW Context</b>
FrIf	FrIf/FrIfConfig/FrIfFrameStructure/FrIfPduInFrame
<b>BSW Parameter</b>	<b>BSW Type</b>
FrIfPduUpdateBitOffset	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This value specifies where the PDU's Update-Bit is stored in the Frame (bit location of PDU's Update-Bit in the FlexRay Frame).	
<b>Template Description</b>	
<p>Indication to the receivers that the corresponding Pdu was updated by the sender. This attribute describes the position of the update bit in the frame that aggregates this PDUToFrameMapping. Length is always one bit.</p> <p>Note that the exact bit position of the updateIndicationBitPosition is linked to the value of the attribute packingByteOrder because the method of finding the bit position is different for the values mostSignificantByteFirst and mostSignificantByte Last. This means that if the value of packingByteOrder is changed while the value of updateIndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing Frame still undergoes a change.</p> <p>This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.</p>	
<b>M2 Parameter</b>	





SystemTemplate::Fibex::FibexCore::CoreCommunication::PduToFrameMapping.updateIndicationBitPosition	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06071]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig	
BSW Parameter		BSW Type
FrlfMaxPduCnt		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of Pdus. This parameter is needed only in case of post-build loadable implementation using static memory allocation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06121]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig	
BSW Parameter		BSW Type
FrlfPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains PDU information. A PDU may be either a transmission PDU or a reception PDU.		
Template Description		
Collection of all Pdus that can be routed through a bus interface.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::Pdu		
Mapping Rule		Mapping Type
The container shall be created for each Pdu that is contained in a FlexRay Frame.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_05372]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu	
BSW Parameter		BSW Type
FrlfPduDirection		ECUC-CHOICE-CONTAINER-DEF
BSW Description		
A PDU is either transmit or receive		
Template Description		
Communication Direction of the Connector Port (input or output Port).		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommConnectorPort.communicationDirection	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The PduTriggering contains a reference to a IPduPort with the communicationDirection.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06072]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfRxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Receive PDU		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Frlf_05373]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfRxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfRxIndicationName		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
This parameter defines the name of the <User_RxIndication>. This parameter depends on the parameter FrlfUserRxIndicationUL. If FrlfUserRxIndicationUL equals FR_TP, FR_AR_TP, FR_NM, PDUR, FR_TSYN or XCP, the name of the <User_RxIndication> is fixed. If FrlfUserRxIndicationUL equals CDD, the name of the <User_RxIndication> is selectable.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Frlf_00016]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfRxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfRxPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the external PDU definition.		
<b>Template Description</b>		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06073]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfRxPdu	
BSW Parameter		BSW Type
FrlfUserRxIndicationUL		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the upper layer (UL) module to which the indication of the successfully received FrlfRxPdu has to be routed via <User_RxIndication>. This <User_RxIndication> has to be invoked when the indication of the configured FrlfRx Pdu will be received by a Rx indication event from the FR Driver module. If no upper layer (UL) module is configured, no <User_RxIndication> has to be called in case of a Rx indication event of the FrlfRxPdu from the FR Driver module.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_00017]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection	
BSW Parameter		BSW Type
FrlfTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies transmission PDUs.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_05374]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
BSW Parameter		BSW Type
FrlfConfirm		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines whether the transmission of a PDU should be checked and confirmed to the PDU owning BSW module. If "FrlfUser TxUL" is configured as FR_TSYN then this parameter has to be set to FALSE for this PDU.		
Template Description		







<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06075]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfCounterLimit		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This value states the maximum number of indication of ready PDU data to the Frlf (i.e. maximum number of invocations of Frlf_Transmit) without an intermediate transmission of the PDU.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06076]	

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfImmediate		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Defines whether the PDU is transmitted immediate or decoupled.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06077]	

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfNoneMode		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Using the "None-Mode" which means that there is no API Frlf_Transmit call of the upper layer for this PDU.		
<b>Template Description</b>		
<b>M2 Parameter</b>		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06050]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
BSW Parameter		BSW Type
FrlfTxConfirmationName		ECUC-FUNCTION-NAME-DEF
BSW Description		
This parameter defines the name of the <User_TxConfirmation>. This parameter depends on the parameter FrlfUserTxUL. If FrlfUserTxUL equals FR_TP, FR_AR_TP, FR_NM, PDUR or XCP, the name of the <User_TxConfirmation> is fixed. If FrlfUserTxUL equals CDD, the name of the <User_TxConfirmation> is selectable.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_00014]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
BSW Parameter		BSW Type
FrlfTxPduld		ECUC-INTEGER-PARAM-DEF
BSW Description		
The global PDU identifier, which has to be used by the upper layer BSW module. The identifier has to be zero based and consecutive.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06078]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
BSW Parameter		BSW Type
FrlfTxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the external PDU definition.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06074]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
BSW Parameter		BSW Type
FrlfUserTriggerTransmitName		ECUC-FUNCTION-NAME-DEF
BSW Description		
This parameter defines the name of the <User_TriggerTransmit>. This parameter depends on the parameter FrlfUserTxUL. If FrlfUserTxUL equals FR_TP, FR_AR_TP, FR_NM, PDUR, FR_TSYN or XCP the name of the <User_TriggerTransmit> is fixed. If FrlfUserTxUL equals CDD, the name of the <User_TriggerTransmit> is selectable.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06084]

BSW Module	BSW Context	
Frlf	Frlf/FrlfConfig/FrlfPdu/FrlfPduDirection/FrlfTxPdu	
BSW Parameter		BSW Type
FrlfUserTxUL		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the upper layer (UL) module to which the trigger of the Pdu to be transmitted (via the <User_TriggerTransmit>) or the confirmation of the successfully transmitted Pdu has to be routed (via the <User_TxConfirmation>). Please note that handle IDs which are used in callback functions are defined by the upper layer module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_00015]

BSW Module	BSW Context	
Frlf	Frlf	
BSW Parameter		BSW Type
FrlfGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the general configuration parameters of the FlexRay Interface.		
Template Description		





FlexRay specific attributes to the physicalCluster	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Container shall be created if the ECU is connected to a FlexRay Cluster.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_05360]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfAbsTimerIdx		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Maximum number of supported absolute timers.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Frlf_06112]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfAllSlotsSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Configuration parameter to enable/disable Frlf support to enable/disable of switching from key-slot / single-slot mode to all slot mode.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Frlf_06108]

<b>BSW Module</b>	<b>BSW Context</b>	
Frlf	Frlf/FrlfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrlfBusMirroringSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Configuration parameter to enable/disable Frlf support to enable/disable reporting received/transmitted frames to the Bus Mirroring module.		





Template Description	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06124]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfCancelTransmitSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to request the cancellation of the I-PDU transmission to FrDrv.		
Template Description		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_00002]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off.		
<ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06080]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfDisableLPduSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		





Configuration parameter to enable/disable FrIf support to disables the hardware resource of a LPdu for transmission/reception.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrIf_06110]

<b>BSW Module</b>	<b>BSW Context</b>	
FrIf	FrIf/FrIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrIfDisableTransceiverBranchSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Configuration parameter to enable/disable FrIf support to disable branches of an active star.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrIf_06102]	

<b>BSW Module</b>	<b>BSW Context</b>	
FrIf	FrIf/FrIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrIfEnableTransceiverBranchSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Configuration parameter to enable/disable FrIf support to enable branches of an active star.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrIf_06103]	

<b>BSW Module</b>	<b>BSW Context</b>	
FrIf	FrIf/FrIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrIfFreeOpAApiName		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
API name that is called when FREE_OP_A is selected as communication operation. See also chapter 8.8.3 Configurable Interfaces.		





Template Description	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06118]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfFreeOpBApiName		ECUC-STRING-PARAM-DEF
BSW Description		
API name that is called when FREE_OP_B is selected as communication operation. See also chapter 8.8.3 Configurable Interfaces.		
Template Description		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06119]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfFreeOpsHeader		ECUC-STRING-PARAM-DEF
BSW Description		
Defines header file for configurable FREE_OP_A / FREE_OP_B functions.		
Template Description		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06120]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfGetClockCorrectionSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to enable/disable of polling the FlexRay Driver to getting CC clock correction values.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06106]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfGetGetChannelStatusSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to enable/disable of polling the FlexRay Driver to getting error information about the FlexRay communications bus.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06105]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfGetNmVectorSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to request the FlexRay hardware NMVector.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06114]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfGetNumOfStartupFramesSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to enable/disable of polling the FlexRay Driver for the actual number of received startup frames on the bus.		
Template Description		







M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Frlf_06104]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfGetSyncFrameListSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to enable/disable of polling the FlexRay Driver to getting a list of actual received sync frames.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06107]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfGetTransceiverErrorSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to get the FlexRay Transceiver errors by calling the FlexRay Transceiver module.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Frlf_06101]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfGetWakeupRxStatusSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to get the wakeup received information from the FlexRay controller.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06111]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfNumClstSupported		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of FlexRay Clusters that the FlexRay Interface supports.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06081]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfNumCtrlSupported		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of FlexRay CCs that the FlexRay Interface supports		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Frlf_06082]	

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfPublicCddHeaderFile		ECUC-STRING-PARAM-DEF
BSW Description		
Defines header files for callback functions which shall be included in case of CDDs. Range of characters is 1.. 32.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	





Mapping Status	ECUC Parameter ID
valid	[ECUC_Frlf_06116]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfReadCCConfigApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable the optional Frlf_ReadCCConfig API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06117]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfReconfigLPduSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configuration parameter to enable/disable Frlf support to enable/disable the reconfiguration of a given LPdu according to the parameters (Frameld, Channel, CycleRepetition, CycleOffset, PayloadLength, HeaderCRC) at runtime.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06109]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfTxConflictNotificationHeaderName		ECUC-STRING-PARAM-DEF
BSW Description		
Configuration of the header file name that defines the UL_TxConflictNotification.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06123]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfTxConflictNotificationName		ECUC-STRING-PARAM-DEF
BSW Description		
Configuration of the API name that is called in case a TxConflict has been detected.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06122]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfUnusedBitValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Set unused bits of transmitted Pdus to a defined value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_00001]

BSW Module	BSW Context	
Frlf	Frlf/FrlfGeneral	
BSW Parameter		BSW Type
FrlfVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/disables the existence of the Frlf_GetVersionInfo() API service true: Frlf_GetVersionInfo() API service exists false: Frlf_GetVersionInfo() API service does not exist		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Frlf_06083]

### C.4.3 FrNm Mapping

BSW Module	BSW Context	
FrNm	FrNm	
BSW Parameter		BSW Type
FrNmChannelConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters for all FlexRay NM channels.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00002]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig	
BSW Parameter		BSW Type
FrNmChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters for a FlexRay NM Channel.		
Template Description		
FlexRay specific NM cluster attributes.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster		
Mapping Rule		Mapping Type
Create Container for each existing FlexrayNmCluster.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00006]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel	
BSW Parameter		BSW Type
FrNmChannelIdentifiers		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains instance specific identifiers related to the respective FlexRay Channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00007]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter	BSW Type	
FrNmActiveWakeupBitEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/Disables the handling of the Active Wakeup Bit in the FrNm module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00082]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter	BSW Type	
FrNmCarWakeUpBitPosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Specifies the Bit position of the CWU within the NM-Message.		
Template Description		
Specifies the bit position of the CarWakeUp within the NmPdu.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmCarWakeUpBitPosition		
Mapping Rule		Mapping Type
The position of the Car Wakeup bit in the Ecuc is defined by the configuration parameters FrNmCar WakeUpBytePosition and FrNmCarWakeUpBitPosition (position in wakeUpByte). In the SysT the position is described only by the bit position in the NmMessage.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00076]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter	BSW Type	
FrNmCarWakeUpBytePosition	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Specifies the Byte position of the CWU within the NM-Message.		
Template Description		
Specifies the bit position of the CarWakeUp within the NmPdu.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmCarWakeUpBitPosition		
Mapping Rule		Mapping Type
The position of the Car Wakeup bit in the Ecuc is defined by the configuration parameters FrNmCar WakeUpBytePosition and FrNmCarWakeUpBitPosition (position in wakeUpByte). In the SysT the position is described only by the bit position in the NmMessage.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00075]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter	BSW Type	
FrNmCarWakeUpFilterEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
If CWU filtering is supported, only the CWU bit within the NM message with source node identifier FrNmCarWakeUpFilterNodeId is considered as CWU request. FALSE - CWU Filtering is not supported TRUE - CWU Filtering is supported		
Template Description		
If this attribute is set to true the CareWakeUp filtering is supported. In this case only the CarWakeUp bit within the NmPdu with source node identifier nmCarWakeUpFilterNodeId is considered as CarWakeUp request.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmCarWakeUpFilterEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00077]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter	BSW Type	
FrNmCarWakeUpFilterNodeId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Source node identifier for CWU filtering. If CWU filtering is supported, only the CWU bit within the NM message with source node identifier FrNmCarWakeUpFilterNodeId is considered as CWU request.		
Template Description		
Source node identifier for CarWakeUp filtering. If CarWakeUp filtering is supported (nmCarWakeUpFilterEnabled), only the CarWakeUp bit within the NmPdu with source node identifier nmCarWakeUpFilterNodeId is considered as CarWakeUp request.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmCarWakeUpFilterNodeId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00078]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter	BSW Type	
FrNmCarWakeUpRxEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables or disables support of CarWakeUp bit evaluation in received NM messages. FALSE - CarWakeUp not supported TRUE - CarWakeUp supported		
Template Description		
If set to true this attribute enables the support of CarWakeUp bit evaluation in received NmPdus.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmCarWakeUpRxEnabled		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00074]

BSW Module	BSW Context
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers
BSW Parameter	BSW Type
FrNmChannelHandle	ECUC-REFERENCE-DEF
BSW Description	
Channel identifier configured for the respective instance of the NM. The FrNmChannelHandle shall be encoded in the FrNmRxPduld parameter which is passed to FrNm_RxIndication() function called by the FrIf.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00013]

BSW Module	BSW Context
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers
BSW Parameter	BSW Type
FrNmComMNetworkHandleRef	ECUC-REFERENCE-DEF
BSW Description	
This reference points to the unique channel defined by the ComMChannel and provides access to the unique channel index value in ComMChannelId.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00014]

BSW Module	BSW Context
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers
BSW Parameter	BSW Type
FrNmDynamicPncToChannelMappingEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Channel-specific parameter to enable the dynamic PNC-to-channel-mapping feature. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled	
Template Description	







Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector. <a href="#">dynamicPncToChannelMappingEnabled</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping If M2 Parameter not defined then do not create FrNmDynamicPncToChannelMapping Enabled	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00092]

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrNmNodeDetectionEnabled		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
This parameter is used to enable or disable node detection support for a FrNm Channel.		
<b>Template Description</b>		
Enables the Request Repeat Message Request support. Only valid if nmNodeEnabled is set to true.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::NmCluster. <a href="#">nmNodeDetectionEnabled</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrNm_00086]

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrNmNodeId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
NM node identifier configured for the respective FlexRay Channel. It is used for identifying the respective NM node in the NM-cluster. It must be unique for each NM node within one NM cluster.		
<b>Template Description</b>		
Node identifier of local NmNode. Shall be unique in the NmCluster.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::NmNode. <a href="#">nmNodeId</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrNm_00017]

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
<b>BSW Parameter</b>		<b>BSW Type</b>





FrNmPduScheduleVariant	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
<p>This parameter defines the PDU scheduling variant that should be used for this channel.</p> <p>Option 1 NM-Vote and NM-Data in static segment (one PDU) Option 2 NM-Vote and NM-Data in dynamic segment (one PDU) Option 3 NM-Vote and NM-Data in static segment (separate PDU) Option 4 NM-Vote in static segment and NM-Data in dynamic segment Option 5 NM-Vote in dynamic segment and NM-Data in static segment Option 6 NM-Vote and NM-Data in dynamic segment (separate PDU) Option 7 Combined NM-Vote and CBV in static segment and NM-Data in dynamic segment</p>	
<b>Template Description</b>	
FrNm schedule variant according to FrNm SWS.	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::FlexrayNmClusterCoupling.nmScheduleVariant	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00022]

<b>BSW Module</b>	<b>BSW Context</b>
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers
<b>BSW Parameter</b>	<b>BSW Type</b>
FrNmPnEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
<p>Enables or disables support of partial networking.</p> <p>false: Partial networking Range not supported true: Partial networking supported</p>	
<b>Template Description</b>	
Defines whether this NmCluster contributes to the partial network mechanism.	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::NmCluster.nmPncParticipation	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If NmCluster.nmPncParticipation has the value "true" or is not defined then FrNmPnEnabled shall be set to true.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00072]

<b>BSW Module</b>	<b>BSW Context</b>
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers
<b>BSW Parameter</b>	<b>BSW Type</b>
FrNmRepeatMsgIndEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enable/disable the notification that a RepeatMessageRequest bit has been received.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00091]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter	BSW Type	
FrNmRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container describes the FlexRay NM RX PDU:s.		
Template Description		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode. <a href="#">rxNmPdu</a>		
Mapping Rule		Mapping Type
Create Container if the regarded NmNode receives a Pdu		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00010]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmRxPdu	
BSW Parameter	BSW Type	
FrNmRxPduContainsData	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter defines if the PDU contains NM Data.		
Template Description		
Defines if the Pdu contains NM Data. If the NmPdu does not aggregate any ISignalToIPduMappings it still may contain User Data that is set via Nm_SetUserData(). If the ISignalToIPduMapping exists then the nmDataInformation attribute shall be ignored.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu. <a href="#">nmDataInformation</a> , SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu. <a href="#">iSignalToIPduMapping</a>		
Mapping Rule		Mapping Type
Set to true if either the NmPdu aggregates one or more iSignalToIPduMappings, or - if none are aggregated - if nmDataInformation is true. Set to false in all other cases		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00027]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmRxPdu	
BSW Parameter	BSW Type	
FrNmRxPduContainsVote	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter defines if the PDU contains NM Vote information.		
Template Description		
Defines if the Pdu contains NM Vote information.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu. <a href="#">nmVoteInformation</a>		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00026]

BSW Module	BSW Context
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmRxPdu
BSW Parameter	BSW Type
FrNmRxPduId	ECUC-INTEGER-PARAM-DEF
BSW Description	
<p>PDU identifier configured for the respective FlexRay Channel.</p> <p>It is used for referring to the FlexRay Interface receive function. It must be consistent with the value configured in the FlexRay Interface. This ID is used for the combined reception of NM Vote and NM Data or for the reception of the NM Vote if NM Data is received in a separate PDU.</p> <p>ImplementationType: PduIdType</p>	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00025]

BSW Module	BSW Context
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmRxPdu
BSW Parameter	BSW Type
FrNmRxPduRef	ECUC-REFERENCE-DEF
BSW Description	
<p>The reference to a PDU in the global PDU structure described in the AUTOSAR ECU Configuration Specification. This reference will be used by the FrNm module to derive the PDU Id.</p>	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00012]

BSW Module	BSW Context
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers
BSW Parameter	BSW Type
FrNmSourceNodeIdentifierEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
<p>This parameter is used to enable or disable SourceNodeIdentifier support for a FrNm Channel.</p>	
Template Description	
<p>Enables the source node identifier.</p>	
M2 Parameter	





SystemTemplate::NetworkManagement::NmCluster.nmNodeIdEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00085]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter		BSW Type
FrNmSynchronizationPointEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter defines if this channel shall provide the synchronization point indication to the NM Interface.		
Template Description		
If this parameter is true, then this network is a synchronizing network for the NM coordination cluster which it belongs to. The network is expected to call Nm_SynchronizationPoint() at regular intervals.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmSynchronizingNetwork		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrNm_00021]	

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter		BSW Type
FrNmSynchronizedPncShutdownEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if FrNm handle PN shutdown messages to support a synchronized PNC shutdown across a PN topology. This is only used for ECUs in the role of a top-level PNC coordinator or intermediate PNC coordinator. Thus, the PNC gateway functionality is enabled and therefore ERA calculation is used.		
FALSE: synchronized PNC shutdown is disabled		
TRUE: synchronized PNC shutdown is enabled.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrNm_00094]	

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter		BSW Type
FrNmTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF





<b>BSW Description</b>	
This container describes the FlexRay NM TX PDU:s.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::NmNode. <a href="#">txNmPdu</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create Container if the regarded NmNode transmits a Pdu	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00009]

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmTxPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
FrNmTxConfirmationPduId	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
Handle Id used by the Lower Layer when calling FrNm_TriggerTransmit() or FrNm_TxConfirmation().		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrNm_00018]	

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmTxPdu	
<b>BSW Parameter</b>	<b>BSW Type</b>	
FrNmTxPduContainsData	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
This parameted defines if the PDU contains NM Data.		
<b>Template Description</b>		
Defines if the Pdu contains NM Data. If the NmPdu does not aggregate any ISignalToIPduMappings it still may contain User Data that is set via Nm_SetUserData(). If the ISignalToIPduMapping exists then the nmDataInformation attribute shall be ignored.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu. <a href="#">nmDataInformation</a> , SystemTemplate::Fibex::Fibex Core::CoreCommunication::NmPdu. <a href="#">iSignalToIPduMapping</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Set to true if either the NmPdu aggregates one or more iSignalToIPduMappings, or - if none are aggregated - if nmDataInformation is true. Set to false in all other cases	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrNm_00024]	

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmTxPdu	
BSW Parameter	BSW Type	
FrNmTxPduContainsVote	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter defines if the PDU contains NM Vote information.		
Template Description		
Defines if the Pdu contains NM Vote information.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu.nmVoteInformation		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00023]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmTxPdu	
BSW Parameter	BSW Type	
FrNmTxPduRef	ECUC-REFERENCE-DEF	
BSW Description		
The reference to a PDU in the global PDU structure described in the AUTOSAR ECU Configuration Specification. This reference is used to derive the PDU Id that is defined by the FrIf module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00011]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers	
BSW Parameter	BSW Type	
FrNmUserDataTxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This optional container is used to configure the UserNm PDU. This container is only available if FrNmComUserDataSupport is enabled.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu.iSignalToIPduMapping		
Mapping Rule		Mapping Type
Create container for each NmPdu that aggregates the ISignalToIPduMapping element. The configuration for these Pdus (e.g. Transfer Properties) shall be derived from this information.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00055]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmUserDataTxPdu	
BSW Parameter		BSW Type
FrNmTxUserDataPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the Handle ID of the NM User Data I-PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00056]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelIdentifiers/FrNmUserDataTxPdu	
BSW Parameter		BSW Type
FrNmTxUserDataPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the NM User Data I-PDU in the global PDU collection.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00057]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel	
BSW Parameter		BSW Type
FrNmChannelTiming		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains instance-specific timing related to the respective FlexRay Channel.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00008]



BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelTiming	
BSW Parameter	BSW Type	
FrNmDataCycle	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Number of FlexRay Schedule Cycles needed to transmit the NM Data of all ECUs on the FlexRay bus		
Template Description		
Number of FlexRay Communication Cycles needed to transmit the Nm Data PDUs of all FlexRay Nm Ecus of this FlexRayNm Cluster.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmDataCycle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00031]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelTiming	
BSW Parameter	BSW Type	
FrNmMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This parameter defines the processing cycle of the main function of FrNm module in seconds.		
Template Description		
Defines the processing cycle of the main function of FrNm module.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmMainFunctionPeriod		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00035]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelTiming	
BSW Parameter	BSW Type	
FrNmReadySleepCnt	ECUC-INTEGER-PARAM-DEF	
BSW Description		
FrNm switches to bus sleep mode at the end of the FrNmReadySleepCnt+1 repetition cycle without any NM vote. E.g. on a value of "1", the NM-State Machine will leave the Ready Sleep State after two NM Repetition Cycles with no "keep awake" votes.		
Template Description		
The value of this attribute influences the shutdown behavior of the FlexRay NM. FrNm switches to bus sleep mode nmReadySleepTime seconds after the completion of the last repetition cycle containing a NM vote.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationConnector.nmReadySleepTime		
Mapping Rule		Mapping Type
FrNmReadySleepCnt = ((Float2Int(nmReadySleepTime/cycle))/nmRepetitionCycle)-1		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00051]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelTiming	
BSW Parameter		BSW Type
FrNmRemoteSleepIndTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
<p>Timeout for Remote Sleep Indication. It defines the time in seconds how long it shall take to recognize that all other nodes are ready to sleep.</p> <p>The value "0" denotes that no Remote Sleep Indication functionality is configured.</p>		
Template Description		
<p>Timeout for Remote Sleep Indication in seconds. It defines the time how long it shall take to recognize that all other nodes are ready to sleep.</p>		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmRemoteSleepIndicationTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00029]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelTiming	
BSW Parameter		BSW Type
FrNmRepeatMessageTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
<p>Timeout for Repeat Message State. Defines the time in seconds how long the NM shall stay in the Repeat Message State.</p> <p>The value "0" denotes that no Repeat Message State is configured, which means that Repeat Message State is transient and implies that it is left immediately after entry and consequently no startup stability is guaranteed and no node detection procedure is possible.</p>		
Template Description		
<p>Timeout for Repeat Message State in seconds. Defines the time how long the NM shall stay in the Repeat Message State.</p>		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmRepeatMessageTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00030]

BSW Module	BSW Context	
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelTiming	
BSW Parameter		BSW Type
FrNmRepetitionCycle		ECUC-ENUMERATION-PARAM-DEF
BSW Description		





Number of Flexray Schedule Cycles used to repeat the transmission of the Nm vote of all ECUs on the Flexray Bus.	
<b>Template Description</b>	
Number of FlexRay Communication Cycles used to repeat the transmission of the Nm vote Pdus of all FlexRay NmEcus of this FlexRayNmCluster. This value shall be an integral multiple of nmVotingCycle.	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmRepetitionCycle	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00033]

<b>BSW Module</b>	<b>BSW Context</b>
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelTiming
<b>BSW Parameter</b>	<b>BSW Type</b>
FrNmVoteInhibitionEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Pre-processor switch for enabling the inhibition of vote changes from the next-to-last repetition cycle to the last repetition cycle before the Ready Sleep Counter expires.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00053]

<b>BSW Module</b>	<b>BSW Context</b>
FrNm	FrNm/FrNmChannelConfig/FrNmChannel/FrNmChannelTiming
<b>BSW Parameter</b>	<b>BSW Type</b>
FrNmVotingCycle	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Number of FlexRay Schedule Cycles needed to transmit the Nm vote of all ECUs on the FlexRay Bus.	
<b>Template Description</b>	
Number of FlexRay CommunicationCycles needed to transmit the Nm vote of Pdus of all FlexRay NmEcus of this FlexRayNm Cluster.	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::FlexrayNmCluster.nmVotingCycle	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00032]

BSW Module		BSW Context	
FrNm		FrNm	
BSW Parameter		BSW Type	
FrNmGlobalConfig		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains all global configuration parameters for the FrNm module.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_FrNm_00001]

BSW Module		BSW Context	
FrNm		FrNm/FrNmGlobalConfig	
BSW Parameter		BSW Type	
FrNmGlobalFeatures		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains module features related to the FlexRay NM functionality.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_FrNm_00004]

BSW Module		BSW Context	
FrNm		FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter		BSW Type	
FrNmBusSynchronizationEnabled		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Pre-processor switch for enabling the bus synchronization.			
Template Description			
Enables bus synchronization support.			
M2 Parameter			
SystemTemplate::NetworkManagement::NmEcu. <a href="#">nmBusSynchronizationEnabled</a>			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_FrNm_00048]

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmComUserDataSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Preprocessor switch for enabling the Tx path of Com User Data. Use case: Setting of NMUserData via SWC.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu.iSignalToIPduMapping		
Mapping Rule		Mapping Type
If an NmPdu contains user data defined via the existence of NmPdu.iSignalToIPduMapping and is consequently handled via the PduR and Com this attribute shall be set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00054]

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmCoordinatorSyncSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/disables the coordinator synchronization support.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00081]

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmCycleCounterEmulation	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the cycle counter emulation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00060]

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmDualChannelPduEnable	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the support of dual channel transmission and reception of NM messages.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00049]

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmDynamicPncToChannelMappingSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Precompile time switch to enable the dynamic PNC-to-channel-mapping handling. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled		
Template Description		
Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector. <a href="#">dynamicPncToChannelMappingEnabled</a>		
Mapping Rule		Mapping Type
If at least one dynamicPncToChannelMappingEnabled attribute is defined and if at least one CommunicationConnector of the EcuInstance has dynamicPncToChannelMappingEnabled set to true, then FrNmDynamicPncToChannelMappingSupport shall be set to true. Otherwise FrNmDynamicPncToChannelMappingSupport shall be set to false.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrNm_00090]

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmHwVoteEnable	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the processing of FlexRay Hardware aggregated NM-Votes. This switch enables/disables the optional API FrIf_GetNmVector.		
Template Description		
Switch for enabling the processing of FlexRay Hardware aggregated NM-Votes.		
M2 Parameter		
SystemTemplate::NetworkManagement::FlexrayNmEcu. <a href="#">nmHwVoteEnabled</a>		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00050]

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmPassiveModeEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling Passive Node Configuration support.		
Template Description		
Enables support of the Passive Mode. The passive mode is configurable per channel.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.nmPassiveModeEnabled		
Mapping Rule	Mapping Type	
1:1 mapping. nmNode.nmPassiveModeEnabled shall always have the same value in all Nm Clusters with the same bus protocol in the scope of one EcuInstance.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrNm_00043]	

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmPduRxIndicationEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling PDU reception indication.		
Template Description		
Switch for enabling the PDU Rx Indication.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmPduRxIndicationEnabled		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrNm_00046]	

BSW Module	BSW Context	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures	
BSW Parameter	BSW Type	
FrNmRemoteSleepIndicationEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling remote sleep indication.		
calculationFormula = If (FrNmPassiveModeEnabled == True) then Equal(False) else Equal(False or True)		





Template Description	
Switch for enabling remote sleep indication support.	
M2 Parameter	
SystemTemplate::NetworkManagement::NmEcu.nmRemoteSleepIndEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00044]

BSW Module	BSW Context
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures
BSW Parameter	BSW Type
FrNmStateChangeIndicationEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Pre-processor switch for enabling state change indication.	
Template Description	
Enables the CAN Network Management state change notification.	
M2 Parameter	
SystemTemplate::NetworkManagement::NmEcu.nmStateChangeIndEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00047]

BSW Module	BSW Context
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures
BSW Parameter	BSW Type
FrNmUserDataEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Pre-processor switch for enabling user data support.	
Template Description	
Switch for enabling user data support.	
M2 Parameter	
SystemTemplate::NetworkManagement::NmEcu.nmUserDataEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrNm_00039]

BSW Module	BSW Context
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalFeatures
BSW Parameter	BSW Type
FrNmVotingNextToLastRepetitionCycleDisable	ECUC-BOOLEAN-PARAM-DEF







<b>BSW Description</b>	
Pre-processor switch for disabling vote changes in the last two repetition cycles before the Ready Sleep Counter expires.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00073]

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmGlobalConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrNmGlobalProperties		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains module properties related to the FlexRay NM functionality.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrNm_00003]

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalProperties	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrNmDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrNm_00036]

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalProperties	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrNmMainAcrossFrCycle		ECUC-BOOLEAN-PARAM-DEF





<b>BSW Description</b>	
If the FlexRay NM MainFunction is executed completely within the FlexRay communication cycle where the last NM vote of the current vote cycle is received, the FrNmMainAcrossFrCycle shall be configured to FALSE. If the FlexRay NM MainFunction is executed completely within the FlexRay communication cycle subsequent to the one where the last NM vote of the current vote cycle is received, the FrNmMainAcrossFrCycle shall be configured to TRUE.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrNm_00038]

<b>BSW Module</b>	<b>BSW Context</b>	
FrNm	FrNm/FrNmGlobalConfig/FrNmGlobalProperties	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrNmVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Pre-processor switch for enabling version info API support.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrNm_00037]	

#### C.4.4 FrTp Mapping

<b>BSW Module</b>	<b>BSW Context</b>	
FrTp	FrTp	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTpGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the general configuration parameters of the FlexRay Transport Protocol module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrTp_00009]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpGeneral	
BSW Parameter	BSW Type	
FrTpAckRt	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Preprocessor switch for enabling the Acknowledgement and retry mechanisms. True: Acknowledge and Retry is enabled False: Acknowledge and Retry is disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00002]

BSW Module	BSW Context	
FrTp	FrTp/FrTpGeneral	
BSW Parameter	BSW Type	
FrTpChanNum	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Preprocessor switch for defining the number of concurrent channels the module supports. Up to 32 channels shall be definable here.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00004]

BSW Module	BSW Context	
FrTp	FrTp/FrTpGeneral	
BSW Parameter	BSW Type	
FrTpChangeParamApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Preprocessor switch for enabling the API to change FrTp communication parameters. True: ChangeParameter API is enabled False: ChangeParameter API is disabled.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00052]

BSW Module		BSW Context	
FrTp		FrTp/FrTpGeneral	
BSW Parameter		BSW Type	
FrTpDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_FrTp_00008]

BSW Module		BSW Context	
FrTp		FrTp/FrTpGeneral	
BSW Parameter		BSW Type	
FrTpFullDuplexEnable		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Preprocessor switch for enabling full duplex mechanisms for all channels. True: Full duplex is enabled False: Fullduplex is disabled (Half duplex is enabled)			
Template Description			
The full duplex mechanisms is enabled if this attribute is set to true. Otherwise half duplex is enabled.			
M2 Parameter			
SystemTemplate::TransportProtocols::FlexrayTpEcu. <a href="#">fullDuplexEnabled</a>			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_FrTp_00051]

BSW Module		BSW Context	
FrTp		FrTp/FrTpGeneral	
BSW Parameter		BSW Type	
FrTpMainFuncCycle		ECUC-FLOAT-PARAM-DEF	
BSW Description			
This parameter contains the calling period of the TPs Main Function. The parameter is specified in seconds.			
Template Description			
The period between successive calls to the Main Function of the AUTOSAR TP. Specified in seconds.			
M2 Parameter			
SystemTemplate::TransportProtocols::FlexrayTpEcu. <a href="#">cycleTimeMainFunction</a>			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_FrTp_00011]

BSW Module	BSW Context	
FrTp	FrTp/FrTpGeneral	
BSW Parameter	BSW Type	
FrTpTransmitCancellation	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Preprocessor switch for enabling Transmit Cancellation and Receive Cancellation. True: Transmit/Receive Cancellation is enabled False: Transmit/Receive Cancellation is disabled		
Template Description		
With this switch Tx and Rx Cancellation can be turned on or off.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpEcu.cancellation		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00036]

BSW Module	BSW Context	
FrTp	FrTp/FrTpGeneral	
BSW Parameter	BSW Type	
FrTpUnknownMsgLength	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Preprocessor switch to support data transfer with unknown message length. True: Transmission with unknown message length is enabled False: Transmission with unknown message length is disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00044]

BSW Module	BSW Context	
FrTp	FrTp/FrTpGeneral	
BSW Parameter	BSW Type	
FrTpVersionInfoApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Preprocessor switch for enabling the Version info API. True: Version Info API is enabled False: Version Info API is disabled		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00045]

BSW Module	BSW Context	
FrTp	FrTp	
BSW Parameter	BSW Type	
FrTpMultipleConfig	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR FrTp module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00018]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig	
BSW Parameter	BSW Type	
FrTpConnection	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the connection specific parameters to transfer N-PDUs via FlexRay TP.		
Template Description		
<p>A connection identifies the sender and the receiver of this particular communication. The FlexRayTp module routes a Pdu through this connection.</p> <p>In a System Description the references to the PduPools are mandatory. In an ECU Extract these references can be optional: On unicast connections these references are always mandatory. On multicast the txPduPool is mandatory on the sender side. The rxPduPool is mandatory on the receiver side. On Gateway ECUs both references are mandatory.</p>		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnection		
Mapping Rule		Mapping Type
Create container for each FlexRayTpConnection that is described in the ECU Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00006]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection	
BSW Parameter	BSW Type	
FrTpBandwidthLimitation	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter indicates whether the connection requires a bandwidth limitation or not. If FrTpBandwidthLimitation=True the sender shall send a StartFrame always on the first PDU of a PDU-Pool.		
Template Description		
Specifies whether the connection requires a bandwidth limitation or not.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnection.bandwidthLimitation		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00050]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection	
BSW Parameter	BSW Type	
FrTpConCtrlRef	ECUC-REFERENCE-DEF	
BSW Description		
FrTpConnectionControlReference: This parameter defines a reference to a connection control container.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnection. <a href="#">tpConnectionControl</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrTp_00005]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection	
BSW Parameter	BSW Type	
FrTpLa	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the Local Address for the respective connection. When the local instance is the sender, this is the Source Address within the TP frame. When the local instance is the receiver, this is the Target Address within the TP frame. If this parameter is not configured, all related Rx N-SDUs must be configured to use the meta data item TARGET_ADDRESS_16, and all related Tx-N-SDUs must be configured to use the meta data item SOURCE_ADDRESS_16.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnection. <a href="#">transmitter</a> , SystemTemplate::TransportProtocols::FlexrayTpConnection. <a href="#">receiver</a>		
Mapping Rule	Mapping Type	
If the local address is the sender it shall be derived from FlexrayTpConnection.transmitter. If the remote address is the receiver it shall be derived from FlexrayTpConnection.receiver.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrTp_00010]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection	
BSW Parameter	BSW Type	
FrTpMultipleReceiverCon	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This parameter defines, whether this connection is an 1:1 ('false') or an 1:n ('true') connection. If data segmentation is required this parameter is used to check whether segmentation is possible or not. If the connection is 1:n segmentation is not possible and an error will occur.		





Template Description	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayTpConnection.multicast	
Mapping Rule	Mapping Type
If FlexRayTpConnection contains a multicast reference to TpAddress than set this parameter to true	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00019]

BSW Module	BSW Context
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection
BSW Parameter	BSW Type
FrTpRa	ECUC-INTEGER-PARAM-DEF
BSW Description	
This parameter defines the Remote Address for the respective connection. When the local instance is the sender, this is the Target Address within the TP frame. When the local instance is the receiver, this is the Source Address within the TP frame. If this parameter is not configured, all related Rx N-SDUs must be configured to use the meta data item SOURCE_ADDRESS_16, and all related Tx-N-SDUs must be configured to use the meta data item TARGET_ADDRESS_16.	
Template Description	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayTpConnection.transmitter, SystemTemplate::TransportProtocols::FlexrayTpConnection.receiver	
Mapping Rule	Mapping Type
If the local address is the sender it shall be derived from FlexrayTpConnection.transmitter. If the remote address is the receiver it shall be derived from FlexrayTpConnection.receiver.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00021]

BSW Module	BSW Context
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection
BSW Parameter	BSW Type
FrTpRxPduPoolRef	ECUC-REFERENCE-DEF
BSW Description	
This parameter defines a reference to a RxPduPool.	
Template Description	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayTpConnection.rxPduPool, SystemTemplate::TransportProtocols::FlexrayTpConnection.txPduPool	
Mapping Rule	Mapping Type
Depending whether the regarded Ecu is the transmitter or the receiver this reference shall be created if the FlexrayTpPduPool element is referenced by the FlexrayTpConnection via the txPduPool or rxPduPool reference.  If the regarded ECU is the transmitter then the txPduPool holds the sent NPdus and the rxPduPool holds the received NPdus. If the ECU is the receiver then the txPduPool holds the received NPdus and the rxPduPool holds the sent NPdus.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00025]



BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection	
BSW Parameter		BSW Type
FrTpRxSdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This parameter defines the Rx Service Data Unit Identifier (Sdu Id) which uniquely identifies a data transfer (inter-module communication) between FrTp and PDUR. This N-SDU can produce meta data items of type SOURCE_ADDRESS_16 and TARGET_ADDRESS_16.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnection. <a href="#">directTpSdu</a>		
Mapping Rule		Mapping Type
Create container if an Rx Pdu is referenced by the FlexRayTpConnection		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00027]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection/FrTpRxSdu	
BSW Parameter		BSW Type
FrTpRxSdulD		ECUC-INTEGER-PARAM-DEF
BSW Description		
This unique identifier is used for change parameter request or receive cancellation from PduR to FrTp. ImplementationType: PdulDType		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00053]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection/FrTpRxSdu	
BSW Parameter		BSW Type
FrTpRxSduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a PDU in the global PDU structure.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00028]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection	
BSW Parameter	BSW Type	
FrTpTxPduPoolRef	ECUC-REFERENCE-DEF	
BSW Description		
This parameter defines a reference to a TxPduPool.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnection. <a href="#">rxPduPool</a> , SystemTemplate::TransportProtocols::FlexrayTpConnection. <a href="#">txPduPool</a>		
Mapping Rule		Mapping Type
Depending whether the regarded Ecu is the transmitter or the receiver this reference shall be created if the FlexrayTpPduPool element is referenced by the FlexrayTpConnection via the txPduPool or rxPduPool reference.  If the regarded ECU is the transmitter then the txPduPool holds the sent NPdus and the rxPduPool holds the received NPdus. If the ECU is the receiver then the txPduPool holds the received NPdus and the rxPduPool holds the sent NPdus.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00039]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection	
BSW Parameter	BSW Type	
FrTpTxSdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This parameter defines the Tx Service Data Unit Identifier (Sdu Id) which uniquely identifies a data transfer (inter-module communication) between FrTp and PDUR. This N-SDU can consume meta data items of type SOURCE_ADDRESS_16 and TARGET_ADDRESS_16.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnection. <a href="#">directTpSdu</a>		
Mapping Rule		Mapping Type
Create container if an Tx Pdu is referenced by the FlexRayTpConnection		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00041]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection/FrTpTxSdu	
BSW Parameter	BSW Type	
FrTpTxSdulId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This is a unique identifier for a to be transmitted message from the PduR to the FrTp. ImplementationType: PdulIdType		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00042]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnection/FrTpTxSdu	
BSW Parameter		BSW Type
FrTpTxSduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a PDU in the global PDU structure.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrTp_00043]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig	
BSW Parameter		BSW Type
FrTpConnectionControl		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters to control a FlexRay TP connection.		
Template Description		
Configuration parameters to control a FlexRay TP connection.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl		
Mapping Rule	Mapping Type	
Create container for each FlexRayTpConnectionControl that is described in the ECU Extract.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrTp_00007]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter		BSW Type
FrTpAckType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the type of acknowledgement which is used for the specific channel.		
Template Description		
This parameter defines the type of acknowledgement which is used for the specific channel.		
M2 Parameter		





SystemTemplate::TransportProtocols::FlexrayTpConnectionControl.ackType	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00003]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter	BSW Type	
FrTpMaxFCWait	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the maximum number of FlowControl N-PDUs with FlowState "WAIT"		
Template Description		
This attribute defines the maximum number of FlowControl N-PDUs with FlowState "WAIT".		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl.maxFcWait		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrTp_00014]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter	BSW Type	
FrTpMaxNbrOfNPduPerCycle	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter is part of the ISO 10681-2 protocol's FlowControl parameter "Bandwidth Control (BC)". It limits the number of N-Pdus the sender is allowed to transmit within a FlexRay cycle.		
Template Description		
This parameter limits the number of N-Pdus the sender is allowed to transmit within a FlexRay cycle.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl.maxNumberOfNpduPerCycle		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrTp_00029]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter	BSW Type	
FrTpMaxRn	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the maximum number of retries (if retry is configured).		





Template Description	
This parameter defines the maximum number of retries (if retry is configured for the particular channel).	
M2 Parameter	
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl. <a href="#">maxRetries</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00017]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter	BSW Type	
FrTpSCexp	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter is part of the ISO 10681-2 protocol's FlowControl parameter "Bandwidth Control (BC)". It represents the exponent to calculate the minimum number of "Separation Cycles" the sender has to wait for the next transmission of an FrTp N-Pdu.		
Template Description		
Exponent to calculate the minimum number of "Separation Cycles" the sender has to wait for the next transmission of an FrTp N-Pdu.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl. <a href="#">separationCycleExponent</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrTp_00020]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter	BSW Type	
FrTpTimeBr	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This parameter defines the time in seconds the FrTp requires to transmit a corresponding FlowControl Frame. According to ISO 10681-2 this parameter is a performance requirement.		
Template Description		
Time (in seconds) until transmission of the next FlowControl N-PDU.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl. <a href="#">timeBr</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrTp_00047]	

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter	BSW Type	
FrTpTimeCs	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This parameter defines the time in seconds between the sending of two CFs or between the sending of a CF and LF or between the reception of a FC and sending of the next CF.		
Template Description		
Time (in seconds) until transmission of the next ConsecutiveFrame NPdu / LastFrame NPdu.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl.timeCs		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00056]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter	BSW Type	
FrTpTimeoutAr	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This parameter states the timeout in seconds between the PDU transmit request of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the FlexRay Interface on the receiver side (for FC or AF).		
Template Description		
This parameter states the timeout between the PDU transmit request of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the FlexRay Interface on the receiver side (for FC or AF). Specified in seconds.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl.timeoutAr		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00032]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl	
BSW Parameter	BSW Type	
FrTpTimeoutAs	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This parameter specifies the timeout in seconds the FrIf shall confirm a transmitted Pdu to the FrTp.		
Template Description		
This attribute states the timeout between the PDU transmit request for the first PDU of the group used in the current connection of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the FlexRay Interface (when having sent the last PDU of the group used in this connection) on the sender side (SF-x, FF-x, CF or FC (in case of Transmit Cancellation)). Specified in seconds.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl.timeoutAs		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00033]

BSW Module	BSW Context
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl
BSW Parameter	BSW Type
FrTpTimeoutBs	ECUC-FLOAT-PARAM-DEF
BSW Description	
This parameter defines the timeout in seconds for waiting for an FC or AF on the sender side in a 1:1 connection.	
Template Description	
This parameter defines the timeout in seconds for waiting for an FC or AF on the sender side in a 1:1 connection.	
M2 Parameter	
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl.timeoutBs	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00034]

BSW Module	BSW Context
FrTp	FrTp/FrTpMultipleConfig/FrTpConnectionControl
BSW Parameter	BSW Type
FrTpTimeoutCr	ECUC-FLOAT-PARAM-DEF
BSW Description	
This parameter defines the timeout value in seconds a receiver is waiting for a CF or a LF.	
Template Description	
This parameter defines the timeout value in seconds for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side. Specified in seconds.	
M2 Parameter	
SystemTemplate::TransportProtocols::FlexrayTpConnectionControl.timeoutCr	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTp_00035]

BSW Module	BSW Context
FrTp	FrTp/FrTpMultipleConfig
BSW Parameter	BSW Type
FrTpMaxConnectionCnt	ECUC-INTEGER-PARAM-DEF
BSW Description	
Maximum number of TP connections. This parameter is needed only in case of post-build loadable implementation using static memory allocation.	





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrTp_00054]

<b>BSW Module</b>	<b>BSW Context</b>	
FrTp	FrTp/FrTpMultipleConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTpRxPduPool		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains all Pdus that are assigned to that Pdu Pool.		
<b>Template Description</b>		
FlexrayTpPduPool is a set of N-PDUs which are defined for FrTp sending or receiving purpose.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::FlexrayTpPduPool		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container if the FlexrayTpPduPool element is referenced by the FlexrayTpConnection via the rxPduPool or txPduPool reference.  If the regarded ECU is the transmitter then the txPduPool holds the sent NPdus and the rxPduPool holds the received NPdus. If the ECU is the receiver then the txPduPool holds the received NPdus and the rxPduPool holds the sent NPdus.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrTp_00024]

<b>BSW Module</b>	<b>BSW Context</b>	
FrTp	FrTp/FrTpMultipleConfig/FrTpRxPduPool	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTpRxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Container to hold the PDU parameters. ImplementationType: PduInfoType		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::FlexrayTpPduPool.nPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container for each NPdu that is referenced by the regarded FlexrayTpPduPool.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrTp_00022]



BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpRxPduPool/FrTpRxPdu	
BSW Parameter		BSW Type
FrTpRxPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This is a unique identifier for a received message which is forwarded from the FrIf to the FrTp. ImplementationType: PduIdType		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00023]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpRxPduPool/FrTpRxPdu	
BSW Parameter		BSW Type
FrTpRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a PDU in the global PDU structure.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00026]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig	
BSW Parameter		BSW Type
FrTpTxPduPool		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains all Pdus that are assigned to that Pdu Pool.		
Template Description		
FlexrayTpPduPool is a set of N-PDUs which are defined for FrTp sending or receiving purpose.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpPduPool		
Mapping Rule		Mapping Type
Create container if the FlexrayTpPduPool element is referenced by the FlexrayTpConnection via the rxPduPool or txPduPool reference.  If the regarded ECU is the transmitter then the txPduPool holds the sent NPdus and the rxPduPool holds the received NPdus. If the ECU is the receiver then the txPduPool holds the received NPdus and the rxPduPool holds the sent NPdus.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00038]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpTxPduPool	
BSW Parameter	BSW Type	
FrTpTxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container to hold the PDU parameters. ImplementationType: PduInfoType		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayTpPduPool.nPdu		
Mapping Rule		Mapping Type
Create container for each NPdu that is referenced by the regarded FlexrayTpPduPool.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00037]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpTxPduPool/FrTpTxPdu	
BSW Parameter	BSW Type	
FrTpTxConfirmationPduId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Handle Id to be used by the FrIf to confirm the transmission of the FrTpTxPdu to the FrIf module (FrTp_TxConfirmation) and for TriggerTransmit (FrTp_TriggerTransmit).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00049]

BSW Module	BSW Context	
FrTp	FrTp/FrTpMultipleConfig/FrTpTxPduPool/FrTpTxPdu	
BSW Parameter	BSW Type	
FrTpTxPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a PDU in the global PDU structure.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTp_00040]

### C.4.5 FrArTp Mapping

BSW Module	BSW Context	
FrArTp	FrArTp	
BSW Parameter		BSW Type
FrArTpGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the general configuration (parameters) of the FlexRay TP.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00012]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpGeneral	
BSW Parameter		BSW Type
FrArTpDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00011]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpGeneral	
BSW Parameter		BSW Type
FrArTpHaveAckRt		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Preprocessor switch for enabling the Acknowledgement and retry mechanisms.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00014]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpGeneral	
BSW Parameter		BSW Type
FrArTpHaveGrpSeg		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Preprocessor switch for enabling segmentation of 1:n messages.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00015]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpGeneral	
BSW Parameter		BSW Type
FrArTpHaveLm		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Preprocessor switch for enabling the mechanism for message longer than allowed by.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00016]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpGeneral	
BSW Parameter		BSW Type
FrArTpHaveTc		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Preprocessor switch for enabling Transmit Cancellation and Receive Cancellation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00017]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpGeneral	
BSW Parameter		BSW Type
FrArTpMainFuncCycle		ECUC-FLOAT-PARAM-DEF
BSW Description		
This parameter contains the calling period of the TPs Main Function. The parameter is specified in seconds.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00020]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpGeneral	
BSW Parameter		BSW Type
FrArTpVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Preprocessor switch for enabling the Version info API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00054]

BSW Module	BSW Context	
FrArTp	FrArTp	
BSW Parameter		BSW Type
FrArTpMultipleConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR FrArTp module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00028]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig	
BSW Parameter	BSW Type	
FrArTpChannel	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration (parameters) of one FlexRay TP channel.		
Template Description		
A channel is a group of connections sharing several properties. The FlexRay AutosarTransport Layer supports several channels. These channels can work concurrently, thus each of them requires its own state machine and management data structures and its own PDU-IDs.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel		
Mapping Rule		Mapping Type
Create container for each FlexrayArTpChannel that exists in the Ecu Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00005]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpAckType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This parameter defines the type of acknowledgement which is used for the specific channel.		
Template Description		
Type of Acknowledgement.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel.ackType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00002]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpAdrType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This parameter states the addressing type this connection has. The meanings of the values are one byte and two byte.		
Template Description		
Adressing Type of this connection: true: Two Bytes false: One Byte		
M2 Parameter		





SystemTemplate::TransportProtocols::FlexrayArTpChannel. <a href="#">extendedAddressing</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrArTp_-00008]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpConcurrentConnections	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the number of connections that can be active at the same time. If set to 0, all configured connections can be active at the same time.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrArTp_-00057]	

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpConnection	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration (parameters) of one FlexRay TP connection. A connection can only belong to one channel.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel. <a href="#">tpConnection</a>		
Mapping Rule	Mapping Type	
Create container for each existing FlexrayArTpConnection that is aggregated by FlexrayArTpChannel in the System description.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrArTp_-00010]	

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection	
BSW Parameter	BSW Type	
FrArTpConPrioPdus	ECUC-INTEGER-PARAM-DEF	





<b>BSW Description</b>	
This parameter defines the number of TxNPdus to which this connection has prioritized access. It must be ensured that the number of prioritized PDUs of all connections is smaller than the total number of TxNPdus in the associated PDU pool.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00058]

<b>BSW Module</b>	<b>BSW Context</b>	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrArTpLa		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the Local Address for the respective connection. When the local instance is the sender, this is the Source Address within the TP frame. When the local instance is the receiver, this is the Target Address within the TP frame. Note that in case of 1 byte addressing only the values from 0x0000 - 0x00FF are valid. If this parameter is not configured, all related Rx N-SDUs must be configured to use the meta data item TARGET_ADDRESS_16, and all related Tx-N-SDUs must be configured to use the meta data item SOURCE_ADDRESS_16.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::FlexrayArTpConnection.source		
<b>Mapping Rule</b>		<b>Mapping Type</b>
LocalAddress can be derived from the TpNode that is referenced by the FlexRayTpConnection as source.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrArTp_-00018]

<b>BSW Module</b>	<b>BSW Context</b>	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrArTpMultRec		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
This parameter defines, whether this connection is an 1:1 ('false') or an 1:n ('true') connection. Of course, if the channel to which the connection is configured has retry or acknowledgement enabled, no retry or acknowledgement will occur in case the connection is an 1:n connection.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::FlexrayArTpConnection.multicast		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If multicast is used set this attribute to true.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrArTp_-00027]



BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection	
BSW Parameter		BSW Type
FrArTpRa		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>This parameter defines the Remote Address for the respective connection. When the local instance is the sender, this is the Target Address within the TP frame. When the local instance is the receiver, this is the Source Address within the TP frame. Note that in case of 1 byte addressing only the values from 0x0000 - 0x00FF are valid.</p> <p>If this parameter is not configured, all related Rx N-SDUs must be configured to use the meta data item SOURCE_ADDRESS_16, and all related Tx-N-SDUs must be configured to use the meta data item TARGET_ADDRESS_16.</p>		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpConnection.target		
Mapping Rule		Mapping Type
RemoteAddress can be derived from the TpNode that is referenced by the FlexRayTpConnection as target.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00037]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection	
BSW Parameter		BSW Type
FrArTpRxSdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>Describes the Rx N-SDU. This N-SDU can produce meta data items of type SOURCE_ADDRESS_16 and TARGET_ADDRESS_16.</p>		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpConnection.directTpSdu		
Mapping Rule		Mapping Type
Create container for every IPdu that is received by the FrArTp and the regarded Ecu.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00038]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection/FrArTpRxSdu	
BSW Parameter		BSW Type
FrArTpRxSduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a PDU in the global PDU structure.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00039]

<b>BSW Module</b>	<b>BSW Context</b>	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection/FrArTpRxSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrArTpSduRxId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This is a unique identifier for a received message. This Id is used in the CancelReceive and ChangeParameter API call. ImplementationType: PduIdType		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrArTp_-00040]

<b>BSW Module</b>	<b>BSW Context</b>	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrArTpTxSdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Describes the Tx N-SDU. This N-SDU can consume meta data items of type SOURCE_ADDRESS_16 and TARGET_ADDRESS_16.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::FlexrayArTpConnection. <a href="#">directTpSdu</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container for every IPdu that is transmitted by the FrArTp and the regarded Ecu.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrArTp_-00055]

<b>BSW Module</b>	<b>BSW Context</b>	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection/FrArTpTxSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrArTpSduTxId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		





<p>This is a unique identifier for a received or a to be transmitted message. With this (and by means of e.g. a lookup table) the PDU Router can route the message appropriately without dealing with the particularities of the Transport Layer. This parameter can also be seen as the identifier of a connection.</p> <p>ImplementationType: PduldType</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00041]

<b>BSW Module</b>	<b>BSW Context</b>
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpConnection/FrArTpTxSdu
<b>BSW Parameter</b>	<b>BSW Type</b>
FrArTpTxSduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to a PDU in the global PDU structure.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00052]

<b>BSW Module</b>	<b>BSW Context</b>
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
FrArTpGrpSeg	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Here can be specified, whether segmentation within a 1:n connection is allowed or not.	
<b>Template Description</b>	
This attribute defines whether segmentation within a 1:n connection is allowed or not.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel. <a href="#">multicastSegmentation</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00013]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpLm	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This specifies the maximum message length for the particular channel.		
Template Description		
This specifies the maximum message length for the particular channel.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel.maximumMessageLength		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrArTp_-00019]	

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpMaxAr	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the maximum number of trying to send a frame when a TIMEOUT AR occurs.		
Template Description		
This attribute defines the maximum number of trying to send a frame when a TIMEOUT AR occurs (depending on whether retry is configured).		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel.maxAr		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrArTp_-00021]	

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpMaxAs	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the maximum number of trying to send a frame when a TIMEOUT AS occurs.		
Template Description		
This attribute defines the maximum number of trying to send a frame when a TIMEOUT AS occurs (depending on whether retry is configured).		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel.maxAs		
Mapping Rule	Mapping Type	





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00022]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpMaxBs	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the number of consecutive CFs between two FCs (block size). Valid values are 1 .. 16 when retry is activated, and 0 .. 255 otherwise.		
Template Description		
This attribute defines the number of consecutive CFs between two FCs (block size). Valid values are 1 .. 16 when retry is activated, and 0 .. 255 otherwise.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel.maxBs		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00023]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpMaxRn	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the maximum number of retries (if retry is configured for the particular channel).		
Template Description		
This attribute defines the maximum number of retries (if retry is configured for the particular channel).		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel.maxRetries		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00026]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpMaxWft	ECUC-INTEGER-PARAM-DEF	
BSW Description		





This parameter defines the maximal number of wait frames to be sent for a pending connection.	
<b>Template Description</b>	
This attribute defines the maximal number of wait frames to be sent for a pending connection. Range is 0..255.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel. <a href="#">maxFcWait</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00059]

<b>BSW Module</b>	<b>BSW Context</b>	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrArTpPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Container to hold the PDU parameters. ImplementationType: PduInfoType		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::FlexrayArTpChannel. <a href="#">nPdu</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container if NPdus are referenced by the FlexrayArTpChannel.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrArTp_-00029]

<b>BSW Module</b>	<b>BSW Context</b>	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrArTpPduDirection		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the direction of the PDU.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering. <a href="#">iPduPort</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
The direction of the Npdu can be derived from the triggering elements that contain references to IN- and OUT-Ports.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrArTp_-00030]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpPdu	
BSW Parameter	BSW Type	
FrArTpPduId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
<p>This is the identifier of the FlexRay Interface PDUs (Fr N-PDU, Fr L-SDU) in which the Transport Layer Frames of this channel should be transmitted. For FrArTpPduDirection == FRARTP_RX, this parameter specifies the ID that is used by FrIf when calling FrArTp_RxIndication, while for FrArTpPduDirection == FRARTP_TX this ID is used by FrIf when calling FrArTp_Tx Confirmation or FrArTp_TriggerTransmit.</p> <p>ImplementationType: PduIdType</p>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrArTp_-00035]	

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel/FrArTpPdu	
BSW Parameter	BSW Type	
FrArTpPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_FrArTp_-00036]	

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter	BSW Type	
FrArTpStMin	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>This parameter defines the minimum amount of time between two succeeding CFs of a 1:1 segmented transmission in seconds. Valid values are 0, 100μs, 200μs .. 900μs, 1ms, 2ms .. 127ms. The value can be changed at runtime using the FrArTp_ChangeParameter interface.</p> <p>FrArTpStMin must be an integer multiple of the cycle length multiplied with the multiplexing factor, i.e. <math>FrArTpStMin = n * FrIfGdCycle * m</math>, where n is an integer <math>\geq 0</math> and m is the cycle multiplexor of those cycles where PDUs of the PDU pool are scheduled.</p> <p>Please note: Due to the scheduling strategies of FrArTp, FrArTpStMin can only be kept to a degree defined by the maximum temporal distance of the PDUs of a PDU pool within one FlexRay cycle.</p>		
Template Description		





<p>This attribute defines the minimum amount of time between two succeeding CFs of a 1:1 segmented transmission in seconds. Valid values are 0, 100<math>\mu</math>s, 200<math>\mu</math>s .. 900<math>\mu</math>s, 1ms, 2ms .. 127ms. The value can be changed at runtime using the FrArTp_ChangeParameter interface.</p> <p>The minimumSeparationTime shall be an integer multiple of the cycle length multiplied with the multiplexing factor, i.e. <math>minimumSeparationTime = n * cycle * m</math>, where n is an integer <math>\geq 0</math>, cycle is FlexrayCluster.cycle, and m is the cycle multiplexor of those cycles where PDUs of the PDU pool are scheduled.</p> <p>Please note: Due to the scheduling strategies of FrTp, minimumSeparationTime can only be kept to a degree defined by the maximum temporal distance of the PDUs of a PDU pool within one FlexRay cycle.</p> <p>Range: 0 .. 0.127</p>	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel.minimumSeparationTime	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00042]

<b>BSW Module</b>	<b>BSW Context</b>
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
FrArTpStMinGrpSeg	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
<p>This parameter defines the minimum amount of time between two succeeding CFs of a 1:n segmented transmission in seconds. Valid values are 0, 100<math>\mu</math>s, 200<math>\mu</math>s ... 900<math>\mu</math>s, 1ms, 2ms .. 127ms. The value can be changed at runtime using the FrArTp_ChangeParameter interface.</p> <p>FrArTpStMinGrpSeg must be an integer multiple of the cycle length multiplied with the multiplexing factor, i.e. <math>FrArTpStMinGrpSeg = n * FrIfGdCycle * m</math>, where n is an integer <math>\geq 0</math> and m is the cycle multiplexor of those cycles where PDUs of the PDU pool are scheduled.</p> <p>Please note: Due to the scheduling strategies of FrArTp, FrArTpStMinGrpSeg can only be kept to a degree defined by the maximum temporal distance of the PDUs of a PDU pool within one FlexRay cycle.</p>	
<b>Template Description</b>	
<p>This attribute defines the minimum amount of time between two succeeding CFs of a 1:n segmented transmission in seconds. Valid values are 0, 100<math>\mu</math>s, 200<math>\mu</math>s ... 900<math>\mu</math>s, 1ms, 2ms .. 127ms. The value can be changed at runtime using the FrArTp_ChangeParameter interface.</p> <p>minimumMulticastSeparationTime shall be an integer multiple of the cycle length multiplied with the multiplexing factor, i.e. <math>minimumMulticastSeparationTime = n * cycle * m</math>, where n is an integer <math>\geq 0</math>, cycle is FlexrayCluster.cycle, and m is the cycle multiplexor of those cycles where PDUs of the PDU pool are scheduled. Please note: Due to the scheduling strategies of FrTp, minimumMulticastSeparationTime can only be kept to a degree defined by the maximum temporal distance of the PDUs of a PDU pool within one FlexRay cycle.</p> <p>Range: 0 .. 0.127</p>	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel.minimumMulticastSeperationTime	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00060]



BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter		BSW Type
FrArTpTc		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
With this switch Transmit Cancellation and Receive Cancellation can be turned on or off for this channel.		
Template Description		
With this switch Tx and Rx Cancellation can be turned on or off.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel.cancellation		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00043]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter		BSW Type
FrArTpTimeBr		ECUC-FLOAT-PARAM-DEF
BSW Description		
<p>This parameter defines the time in seconds between receiving the last CF of a block or an FF-x (or SF-x) and sending out an FC or AF.</p> <p>It is obvious that <math>FRARTP\_TIME\_BR + (FRARTP\_TIMEOUT\_AR * FRARTP\_MAX\_AR) &lt; FRARTP\_TIMEOUT\_BS</math> must hold (because the transmission duration on the bus has also to be considered).</p> <p>This parameter is defined in ISO 15765-2. It is contained in the configuration as a performance requirement.</p>		
Template Description		
This attribute defines the time in seconds between receiving the last CF of a block or an FF-x (or SF-x) and sending out an FC or AF.		
M2 Parameter		
SystemTemplate::TransportProtocols::FlexrayArTpChannel.timeBr		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrArTp_-00044]

BSW Module	BSW Context	
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel	
BSW Parameter		BSW Type
FrArTpTimeCs		ECUC-FLOAT-PARAM-DEF
BSW Description		





<p>This parameter defines the time in seconds between the sending of two consecutive CFs or between reception of an FC or AF and sending of the next CF .</p> <p>It is obvious that <math>FRARTP\_TIME\_CS + (FRARTP\_TIMEOUT\_AS * FRARTP\_MAX\_AS) &lt; FRARTP\_TIMEOUT\_CR</math> must hold (because the transmission duration on the bus has also to be considered).</p> <p>This parameter is defined in ISO 15765-2. It is contained in the configuration as a performance requirement.</p>	
<b>Template Description</b>	
<p>This attribute defines the time in seconds between the sending of two consecutive frames or between a consecutive frame and a flow control (for Transmit Cancellation) or between reception of a flow control or Acknowledgement Frame and sending of the next consecutive frame or a flow control (for Transmit Cancellation).</p>	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel.timeCs	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00046]

<b>BSW Module</b>	<b>BSW Context</b>
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
FrArTpTimeoutAr	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
<p>This parameter states the timeout in seconds between the PDU transmit request of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the FlexRay Interface on the receiver side (for FC or AF).</p>	
<b>Template Description</b>	
<p>This attribute states the timeout in seconds between the PDU transmit request of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the FlexRay Interface on the receiver side (for FC or AF).</p>	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel.timeoutAr	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00048]

<b>BSW Module</b>	<b>BSW Context</b>
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
FrArTpTimeoutAs	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
<p>This parameter states the timeout in seconds between the PDU transmit request for the first PDU of the group used in the current connection of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the FlexRay Interface (when having sent the last PDU of the group used in this connection) on the sender side (SF-x, FF-x, CF).</p>	
<b>Template Description</b>	
<p>This attribute states the timeout in seconds between the PDU transmit request for the first PDU of the group used in the current connection of the Transport Layer to the FlexRay Interface and the corresponding confirmation of the FlexRay Interface (when having sent the last PDU of the group used in this connection) on the sender side (SF-x, FF-x, CF).</p>	





<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel. <a href="#">timeoutAs</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00049]

<b>BSW Module</b>	<b>BSW Context</b>
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
FrArTpTimeoutBs	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This parameter defines the timeout in seconds for waiting for an FC or AF on the sender side in a 1:1 connection.	
<b>Template Description</b>	
This attribute defines the timeout in seconds for waiting for an FC or AF on the sender side in a 1:1 connection.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel. <a href="#">timeoutBs</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00050]

<b>BSW Module</b>	<b>BSW Context</b>
FrArTp	FrArTp/FrArTpMultipleConfig/FrArTpChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
FrArTpTimeoutCr	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This parameter defines the timeout value in seconds for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side.	
<b>Template Description</b>	
This attribute defines the timeout value in seconds for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::FlexrayArTpChannel. <a href="#">timeoutCr</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrArTp_-00051]

## C.4.6 FrSM Mapping

BSW Module	BSW Context	
FrSM	FrSM	
BSW Parameter		BSW Type
FrSMConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container comprises the cluster specific configuration of the FlexRay State Manager.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00146]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig	
BSW Parameter		BSW Type
FrSMCluster		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies a FlexRay cluster and all related data. A FlexRay cluster may consist of more than one controller per ECU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00067]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type
FrSMCheckWakeupReason		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If FrSMCheckWakeupReason is true, the FrSM will check the wakeup reason in order to skip the wakeup in case of wakeup by bus. If FrSMCheckWakeupReason is false, the FrSM will always try to perform a wakeup.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00001]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type
FrSMClusterDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00163]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster/FrSMClusterDemEventParameterRefs	
BSW Parameter		BSW Type
FRSM_E_CLUSTER_STARTUP		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "FRSM_E_CLUSTER_STARTUP" has occurred. If the reference is not configured the error shall be reported as DET error.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00164]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster/FrSMClusterDemEventParameterRefs	
BSW Parameter		BSW Type
FRSM_E_CLUSTER_SYNC_LOSS		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "FRSM_E_CLUSTER_SYNC_LOSS" has occurred. If the reference is not configured the error shall be reported as DET error.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00169]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type
FrSMComMNetworkHandleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the unique handle to identify one certain FlexRay network correspond to one of the network handles of the Com M configuration.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00070]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type
FrSMDelayStartupWithoutWakeup		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If true, timer t1 shall be started instead of immediately calling FrIf_AllowColdstart in case of a startup without wakeup.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00166]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type
FrSMDurationT1		ECUC-FLOAT-PARAM-DEF
BSW Description		
The duration of timer t1 in seconds. A value of 0 shall imply that the timer is not used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00102]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type





FrSMDurationT2	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
The duration of timer t2 in seconds. A value of 0 shall imply that the timer is not used. The value of this parameter shall be larger than the value of FrSMDurationT1 parameter.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrSM_00089]

<b>BSW Module</b>	<b>BSW Context</b>
FrSM	FrSM/FrSMConfig/FrSMCluster
<b>BSW Parameter</b>	<b>BSW Type</b>
FrSMDurationT3	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
The duration of timer t3 in seconds. The value of this parameter shall be larger than the value of FrSMDurationT1 parameter. A value of 0 shall imply that the timer is not used. It shall only be possible to configure a value 0 if no FrNm is used.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrSM_00162]

<b>BSW Module</b>	<b>BSW Context</b>
FrSM	FrSM/FrSMConfig/FrSMCluster
<b>BSW Parameter</b>	<b>BSW Type</b>
FrSMDurationT4	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
The timer t4 ensures that a dual channel node will eventually clear its coldstart inhibit bit and become a leading coldstarter.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrSM_00173]

<b>BSW Module</b>	<b>BSW Context</b>
FrSM	FrSM/FrSMConfig/FrSMCluster
<b>BSW Parameter</b>	<b>BSW Type</b>
FrSMFrIfClusterRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	





References the cluster configuration in the FlexRay Interface configuration. Note that the assigned controllers and transceivers are defined in the FrIf configuration and can be accessed via this reference.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrSM_00116]

<b>BSW Module</b>	<b>BSW Context</b>	
FrSM	FrSM/FrSMConfig/FrSMCluster	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrSMIsColdstartEcu		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
True: The ECU is a coldstart node for this FlexRay cluster. False: The ECU is no coldstart node for this FlexRay cluster.		
<b>Template Description</b>		
<b>FlexrayCommunicationController.keySlotID:</b> ID of the slot used to transmit the startup frame, sync frame, or designated single slot frame. If the attributes keySlotUsedForStartUp, keySlotUsedForSync, or keySlotOnlyEnabled are set to true the key slot value is mandatory.		
<b>FlexrayCommunicationController.keySlotUsedForStartUp:</b> Flag indicating whether the Key Slot is used to transmit a startup frame.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.keySlotID, SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCommunicationController.keySlotUsedForStartUp		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<= TRUE if keySlotId existing and valid (i.e. not 0) and keySlotUsedForStartUp set to true <= FALSE otherwise		
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrSM_00068]

<b>BSW Module</b>	<b>BSW Context</b>	
FrSM	FrSM/FrSMConfig/FrSMCluster	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrSMIsWakeupEcu		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
True: FrSM shall perform a wakeup for this cluster. False: FrSM shall never perform a wakeup for this FlexRay cluster.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrSM_00109]



BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type
FrSMMainFunctionCycleTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
This parameter defines the cycle time in seconds of the periodic calling of FrSM main function.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00115]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type
FrSMMinNumberOfColdstarter		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the number of coldstarter that should not be underrun. If this parameter is not configured the mainfunction shall not check the number of startup frames.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00168]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter		BSW Type
FrSMNumWakeupPatterns		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of Wakeup Patterns the node may send before going to FRSM_STARTUP.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00165]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter	BSW Type	
FrSMStartupRepetitions	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The number of times an ECU may repeat the startup procedure for a FlexRay cluster.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00069]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter	BSW Type	
FrSMStartupRepetitionsWithWakeup	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The number of times an ECU may repeat the startup procedure including a wakeup for a FlexRay cluster.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00094]

BSW Module	BSW Context	
FrSM	FrSM/FrSMConfig/FrSMCluster	
BSW Parameter	BSW Type	
FrSMTrcvStdbyDelay	ECUC-FLOAT-PARAM-DEF	
BSW Description		
The duration of timer t_TrvcStdbyDelay in seconds. The granularity of this parameter shall be restricted to full FlexRay cycles (FrIfGdCycle).		
A value of 0 shall imply that the timer is not used.		
Template Description		
The duration of timer t_TrvcStdbyDelay in seconds. The granularity of this parameter shall be restricted to full FlexRay cycles (cycle). The transceiver status setting to STANDBY shall be delayed by this value.		
Not specifying a value or a value of 0 shall imply that the timer is not used.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Flexray::FlexrayTopology::FlexrayCluster. <a href="#">tranceiverStandbyDelay</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00170]

BSW Module	BSW Context	
FrSM	FrSM	
BSW Parameter	BSW Type	
FrSMGeneral	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the general configuration parameters of the FlexRay State Manager.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00107]

BSW Module	BSW Context	
FrSM	FrSM/FrSMGeneral	
BSW Parameter	BSW Type	
FrSMAllSlotsSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Configuration parameter to enable/disable FrSM support to enable/disable the switching from key-slot/single-slot mode to all-slot mode.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00172]

BSW Module	BSW Context	
FrSM	FrSM/FrSMGeneral	
BSW Parameter	BSW Type	
FrSMDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00066]

BSW Module	BSW Context	
FrSM	FrSM/FrSMGeneral	
BSW Parameter		BSW Type
FrSMSyncLossErrorIndicationName		ECUC-FUNCTION-NAME-DEF
BSW Description		
Name of <Cdd>_SyncLossErrorIndication function that shall be called on loss of synchronization. If this parameter is omitted no indication shall take place.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00167]

BSW Module	BSW Context	
FrSM	FrSM/FrSMGeneral	
BSW Parameter		BSW Type
FrSMVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables and disables the version info API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrSM_00108]

## C.5 Lin

### C.5.1 Lin Driver Mapping

BSW Module	BSW Context	
Lin	Lin	
BSW Parameter		BSW Type
LinDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Lin_00188]

<b>BSW Module</b>	<b>BSW Context</b>	
Lin	Lin/LinDemEventParameterRefs	
<b>BSW Parameter</b>		<b>BSW Type</b>
LIN_E_TIMEOUT		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the DemEventParameter which shall be issued when the error "Timeout caused by hardware error" has occurred. If the reference is not configured the error shall be reported as DET error.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Lin_00189]	

<b>BSW Module</b>	<b>BSW Context</b>	
Lin	Lin	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the parameters related to each LIN Driver Unit.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Lin_00183]	

<b>BSW Module</b>	<b>BSW Context</b>	
Lin	Lin/LinGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Lin_00066]

<b>BSW Module</b>	<b>BSW Context</b>	
Lin	Lin/LinGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinEcucPartitionRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Maps the Lin driver to zero or multiple ECUC partitions to make the modules API available in this partition. The Lin driver will operate as an independent instance in each of the partitions.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Lin_00192]

<b>BSW Module</b>	<b>BSW Context</b>	
Lin	Lin/LinGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinIndex		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Lin_00179]

<b>BSW Module</b>	<b>BSW Context</b>	
Lin	Lin/LinGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinTimeoutDuration		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies the maximum number of loops for blocking function until a timeout is raised in short term wait loops		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Lin_00093]

BSW Module		BSW Context	
Lin		Lin/LinGeneral	
BSW Parameter		BSW Type	
LinVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Switches the Lin_GetVersionInfo function ON or OFF.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Lin_00067]

BSW Module		BSW Context	
Lin		Lin	
BSW Parameter		BSW Type	
LinGlobalConfig		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the global configuration parameter of the Lin driver.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Lin_00184]

BSW Module		BSW Context	
Lin		Lin/LinGlobalConfig	
BSW Parameter		BSW Type	
LinChannel		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the configuration (parameters) of the LIN Controller(s).			
Template Description			
<p>A physical channel is the transmission medium that is used to send and receive information between communicating ECUs. Each CommunicationCluster has at least one physical channel. Bus systems like CAN and LIN only have exactly one PhysicalChannel. A FlexRay cluster may have more than one PhysicalChannels that may be used in parallel for redundant communication.</p> <p>An ECU is part of a cluster if it contains at least one controller that is connected to at least one channel of the cluster.#</p>			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreTopology::PhysicalChannel			
Mapping Rule			Mapping Type
A LinChannel container is constructed per CommunicationConnector belonging to the CommunicationController associated with the owning Lin Module container			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_Lin_00069]

BSW Module	BSW Context	
Lin	Lin/LinGlobalConfig/LinChannel	
BSW Parameter	BSW Type	
LinChannelBaudRate	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Specifies the baud rate of the LIN channel		
Template Description		
Channels speed in bits/s.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationCluster.baudrate		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Lin_00180]

BSW Module	BSW Context	
Lin	Lin/LinGlobalConfig/LinChannel	
BSW Parameter	BSW Type	
LinChannelEcuMWakeupSource	ECUC-REFERENCE-DEF	
BSW Description		
This parameter contains a reference to the Wakeup Source for this channel as defined in the ECU State Manager. This reference is only needed if LinChannelWakeupSupport is true.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Lin_00185]

BSW Module	BSW Context	
Lin	Lin/LinGlobalConfig/LinChannel	
BSW Parameter	BSW Type	
LinChannelEcucPartitionRef	ECUC-REFERENCE-DEF	
BSW Description		
Maps one single Lin channel to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the Lin driver is mapped to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Lin_00193]



BSW Module	BSW Context	
Lin	Lin/LinGlobalConfig/LinChannel	
BSW Parameter	BSW Type	
LinChannelId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Identifies the LIN channel. Replaces LIN_CHANNEL_INDEX_NAME from the LIN SWS.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Implicit from each CommunicationConnector on the ECU representing a LIN channel. Increase the LinChannelId for each LIN channel created on the same CommunicationController, for each CommunicationController start indexing at zero.		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Lin_00181]

BSW Module	BSW Context	
Lin	Lin/LinGlobalConfig/LinChannel	
BSW Parameter	BSW Type	
LinChannelWakeupSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Specifies if the LIN hardware channel supports wake up functionality		
Template Description		
Defines whether the ECU shall be woken up by this CommunicationController. TRUE: wake up is possible FALSE: wake up is not supported Note: If wakeupByControllerSupported is set to TRUE the feature shall be supported by both hardware and basic software.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationController.wakeupByControllerSupported		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Lin_00182]

BSW Module	BSW Context	
Lin	Lin/LinGlobalConfig/LinChannel	
BSW Parameter	BSW Type	
LinClockRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the LIN clock source configuration, which is set in the MCU driver configuration.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_Lin_00094]

BSW Module	BSW Context	
Lin	Lin/LinGlobalConfig/LinChannel	
BSW Parameter		BSW Type
LinNodeType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Specifies the LIN node type of this channel.		
Template Description		
<b>LinMaster:</b> Describing the properties of the referring ecu as a LIN master. <b>LinSlave:</b> Describing the properties of the referring ecu as a LIN slave.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinMaster, SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave		
Mapping Rule		Mapping Type
Set to MASTER if the CommunicationController is defined as a LinMaster. Set to SLAVE if the CommunicationController is defined as a LinSlave. In the System Template the LinMaster/LinSlave is connected to the LinChannel via a CommunicationConnector.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Lin_00191]

## C.5.2 Lin Interface Mapping

BSW Module	BSW Context	
LinIf	LinIf	
BSW Parameter		BSW Type
LinIfGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the general parameters of LIN Interface module.		
Template Description		
LIN specific attributes		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinCluster		
Mapping Rule		Mapping Type
Container shall be created if the ECU is connected to a LIN Cluster.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00019]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter		BSW Type
LinIfBusMirroringSupported		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
States if Bus Mirroring is enabled in the LIN Interface or not. The reason for this parameter is to reduce the size of LIN Interface if the Bus Mirroring is not used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00657]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter		BSW Type
LinIfDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00010]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter		BSW Type
LinIfMultipleDriversSupported		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
States if multiple drivers are supported by the LIN Interface or not. The reason for this parameter is to reduce the size of LIN Interface if multiple drivers are not used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00024]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter		BSW Type
LinIfMultipleTrcvDriverSupported		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
States if multiple transceiver drivers are supported by the LIN Interface or not. The reason for this parameter is to reduce the size of LIN Interface if multiple transceiver drivers are not used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00025]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter		BSW Type
LinIfNoOptionalRequestSupported		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
States if the node configuration commands Assign NAD and Conditional Change NAD are supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00026]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter		BSW Type
LinIfPublicCddHeaderFile		ECUC-STRING-PARAM-DEF
BSW Description		
Defines header files for callback functions which shall be included in case of CDDs. Range of characters is 1.. 32.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00631]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter	BSW Type	
LinIfResponseErrorSignalChangedCallout	ECUC-FUNCTION-NAME-DEF	
BSW Description		
This parameter contains the name of the callout function that is called after a response error signal change. Only applicable for LIN slave nodes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00656]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter	BSW Type	
LinIfSaveConfigurationCallout	ECUC-FUNCTION-NAME-DEF	
BSW Description		
This parameter contains the name of the callout function that is called when a save configuration node configuration command is processed by this slave node. The service is only supported when this parameter is configured. Only applicable for LIN slave nodes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00651]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter	BSW Type	
LinIfTpSupported	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
States if the TP is included in the LIN Interface or not. The reason for this parameter is to reduce the size of LIN Interface if the TP is not used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00045]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter		BSW Type
LinIfTrcvDriverSupported		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
States if transceiver driver support is included in the LIN Interface or not. The reason for this parameter is to reduce the size of LIN Interface if transceiver drivers are not used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00635]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGeneral	
BSW Parameter		BSW Type
LinIfVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the LinIf_GetVersionInfo function ON or OFF.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00053]

BSW Module	BSW Context	
LinIf	LinIf	
BSW Parameter		BSW Type
LinIfGlobalConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the global configuration parameters of the LinIf.		
Template Description		
LIN specific attributes		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinCluster		
Mapping Rule		Mapping Type
Container shall be created if the ECU is connected to a LIN Cluster.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00020]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig	
BSW Parameter	BSW Type	
LinIfChannel	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Describes each LIN channel the LinIf is connected to.		
Template Description		
<p>The connection between the referencing ECU and the referenced channel via the referenced controller.</p> <p>Connectors are used to describe the bus interfaces of the ECUs and to specify the sending/receiving behavior. Each CommunicationConnector has a reference to exactly one communicationController.</p> <p>Note: Several CommunicationConnectors can be assigned to one PhysicalChannel in the scope of one ECU Instance.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector		
Mapping Rule		Mapping Type
Container shall be created if the CommunicationConnector belonging to the ECU is connected to a LinChannel.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00364]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel	
BSW Parameter	BSW Type	
LinIfBusIdleTimeoutPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Bus idle timeout in seconds. According to the LIN protocol specification, the bus idle timeout period shall be in range [4, 10] seconds.		
Template Description		
This attribute shall be used to set an idle timeout period for the enclosing LinPhysicalChannel.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinPhysicalChannel.busIdleTimeoutPeriod		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00655]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel	
BSW Parameter	BSW Type	
LinIfCddRef	ECUC-FOREIGN-REFERENCE-DEF	
BSW Description		
Reference to the CDD module description. This parameter is only required when LinIfWakeupConfirmationUL, LinIfScheduleRequestConfirmationUL, LinIfGotoSleepConfirmationUL and/or LinIfGotoSleepIndicationUL is set to CDD.		
Template Description		





<p>Head of the configuration of one Module. A Module can be a BSW module as well as the RTE and ECU Infrastructure.</p> <p>As part of the BSW module description, the EcucModuleConfigurationValues element has two different roles:</p> <p>The recommendedConfiguration contains parameter values recommended by the BSW module vendor.</p> <p>The preconfiguredConfiguration contains values for those parameters which are fixed by the implementation and cannot be changed.</p> <p>These two EcucModuleConfigurationValues are used when the base EcucModuleConfigurationValues (as part of the base ECU configuration) is created to fill parameters with initial values.</p>	
<b>M2 Parameter</b>	
ECUCDescriptionTemplate::EcucModuleConfigurationValues	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00637]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
LinIfChannelRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the channel definition in the LIN driver.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00003]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
LinIfComMNetworkHandleRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Unique handle to identify one LIN network. Reference to one of the network handles configured for the ComM.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00626]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
<b>BSW Parameter</b>	<b>BSW Type</b>







LinIfFrame	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Generic container for all types of LIN frames.	
<b>Template Description</b>	
LIN specific attributes to the FrameTriggering	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinFrameTriggering	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each LinFrameTriggering aggregated by the PhysicalChannel representing the regarded LIN channel.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00367]

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinIfChecksumType		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Type of checksum that the frame is using. This parameter is optional because in case of sporadic frames it should not be set.		
<b>Template Description</b>		
Type of checksum that the frame is using. This attribute is optional because in case of sporadic frames it should not be set.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinFrameTriggering.linChecksum		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00005]	

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinIfFixedFrameSdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
In case this is a fixed frame this is the SDU (response). This container represents an eight byte array. The Byte order shall be MSB first. Only applicable to LIN master nodes.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00012]	

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFixedFrameSdu
BSW Parameter	BSW Type
LinIfFixedFrameSduByte	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container represents a byte within the 8 byte array.	
Template Description	
<p><b>LinSlaveConfig:</b> Node attributes of LIN slaves that are handled by the LinMaster. In the System Description LIN slaves may be described in the context of the Lin Master. In an ECU Extract of the LinMaster the LinSlave Ecus shall not be available. The information that is described here is necessary in the ECU Extract for the configuration of the LinMaster. The values of attributes of LinSlaveConfig and the corresponding LinSlave shall be identical (if both are defined in a System Description).</p> <p><b>LinSlave:</b> Describing the properties of the referring ecu as a LIN slave.</p>	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlaveConfig, SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave	
Mapping Rule	Mapping Type
<p>For LinConfigurationEntry elements the byte array depends on the LinIfFrameType in the LinIf Entry. The parameters ConfiguredNad, SupplierId, and Function can be derived from the LinSlave Config that is referenced from the LinConfigurationEntry in the assignedLinSlaveConfig role or from the LinSlave referenced via assignedController.</p> <p>AssignFrameId/UnassignFrameId : Byte Array: ConfiguredNad, 0x06, 0xb1, LSB of SupplierId, MSB of SupplierId, LSB of MessageId, MSB of MessageId, protected identifier of LinFrame Triggering.</p> <p>The LinFrameTriggering is referenced by AssignFrameId/UnassignFrameId directly in the role assignedFrameTriggering/unassignedFrameTriggering. The MessageId shall be derived in the following way:</p> <p>in case that the AssignFrameId/UnassignFrameId refers to a LinSlave in the role assigned Controller the messageId of the AssignFrameId/UnassignFrameId is located in the LinConfigurable Frame that references the same LinFrame as the LinFrameTriggering that is referenced by the AssignFrameId/UnassignFrameId and that is aggregated by the LinCommunicationConnector in role linConfigurableFrame that points to this LinSlave in the role commController.</p> <p>in case that the AssignFrameId/UnassignFrameId refers to a LinSlaveConfigIdent in the role assignedLinSlaveConfig the messageId is located in the LinConfigurableFrame that references the same LinFrame as the LinFrameTriggering that is referenced by the AssignFrameId/Unassign FrameId and that is aggregated by the referenced LinSlaveConfig.</p> <p>AssignFrameIdRange: Byte Array for Request: ConfiguredNad, 0x06, 0xB7, start index PID (index), PID (index+1), PID (index+2), PID (index+3), The four PID values shall be derived from AssignFrameIdRange.framePid element. The Frame Pid.index describes the Position of the pid value in the AssignFrameIdRange command.</p> <p>AssignNad: Byte Array for Request: initialNad, 0x06, 0xB0, Supplier ID LSB, Supplier ID MSB, Function ID LSB, Function ID MSB, newNad Byte Array for Response: initialNad, 0x01, 0xF0, 0x FF, 0xFF, 0xFF, 0xFF, 0xFF</p> <p>The initialNad shall be derived either: from the LinCommunicationConnector that references the LinSlave that in turn is referenced by the AssignNad in the role assignedController. from the LinSlaveConfig that is referenced by the Assign Nad LinConfigurationEntry in the role assignedLinSlaveConfig</p> <p>The newNad shall be derived from the AssignedNad LinConfigurationEntry element itself.</p>	full





<p>ConditionalChangeNad: Byte Array for Request: ConfiguredNad, 0x06, 0xb3, Id, Byte, Mask, Invert, newNad</p> <p>The id, byte, mask, invert, newNad shall be derived from the ConditionalChangeNad Lin ConfigurationEntry element itself.</p> <p>DataDumpEntry: Byte Array for Request: ConfiguredNad, 0x06, 0xB4, Byte Value, Byte Value, Byte Value, Byte Value, Byte Value Byte Array for Response: ConfiguredNad, 0x06, 0xF4, Byte Value, Byte Value, Byte Value, Byte Value, Byte Value</p> <p>SaveConfigurationEntry: Byte Array for Request: ConfiguredNad, 0x01, 0xb6, 0xff, 0xff, 0xff, 0xff, 0xff Byte Array for Response: ConfiguredNad, 0x01, 0xF6, 0xff, 0xff, 0xff, 0xff, 0xff</p>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00013]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFixedFrameSdu/LinIfFixedFrameSduByte
BSW Parameter	BSW Type
LinIfFixedFrameSduBytePos	ECUC-INTEGER-PARAM-DEF
BSW Description	
Index of the Byte in the SDU (response) 8 byte array.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00014]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFixedFrameSdu/LinIfFixedFrameSduByte
BSW Parameter	BSW Type
LinIfFixedFrameSduByteVal	ECUC-INTEGER-PARAM-DEF
BSW Description	
Byte value in the SDU (response) 8-byte array.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00015]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame
BSW Parameter	BSW Type
LinIfFrameId	ECUC-INTEGER-PARAM-DEF





<b>BSW Description</b>	
ID of the LIN frame. The Protected ID including parity is calculated by the generation tool.	
<b>Template Description</b>	
To describe a frames identifier on the communication system, usually with a fixed identifierValue. For LinSporadicFrames the attribute shall be ignored.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinFrameTriggering.identifier	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00638]

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinIfFrameIndex		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
PID index of the frame. This index is used in the AssignFrameIdentifierRange node configuration service to identify the frame(s) to which a new PID shall be assigned. It corresponds to the order of the frames in the configurable frames list in the node attributes section of the LDF / NCF of the slave node. Only relevant for LIN slave nodes.		
<b>Template Description</b>		
This attribute is used to order the elements and allows an assignment of Pids to ConfigurableFrames that are defined in the slave.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinOrderedConfigurableFrame.index		
<b>Mapping Rule</b>		<b>Mapping Type</b>
LinIfFrameIndex shall be derived from the list of LinOrderedConfigurableFrame elements that are ordered according to the index attribute. The LinIfFrameIndex = 0 shall be derived from the first element in the list. The LinIfFrameIndex = 1 shall be derived from the second element in the list and so on.  Please note that the index settings in the System Description may contain gaps. In other words, if for example the System Description defines LinCommunicationConnector.linOrderedConfigurableFrame with index = 2 and a second linOrderedConfigurableFrame with index = 4 then the LinIfFrameIndex in the Ecuc needs to be set to 0 for the first Frame and to 1 for the second Frame.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LinIf_00653]

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinIfFrameType		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the type of frame (e.g. sporadic frame). For master nodes, all frame types are permitted. A sporadic slot may be used by a set of unconditional frames in the role of substitution frames. For slave nodes, only following types are permitted: Unconditional, MRF, SRF, Event-triggered. An event-triggered slot may be used by a set of unconditional frames in the role of substitution frames.		
<b>Template Description</b>		
<b>M2 Parameter</b>		





Mapping Rule	Mapping Type
see details in EnumerationLiteralDef descriptions	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00017]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
BSW Parameter		BSW Type
ASSIGN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
AssignFrameId		
Template Description		
Schedule entry for an Assign Frame Id master request.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::AssignFrameId		
Mapping Rule		Mapping Type
Use FrameType "Assign" if ScheduleEntry is an "AssignFrameId".		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
BSW Parameter		BSW Type
ASSIGN_FRAME_ID_RANGE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
AssignFrameIdRange		
Template Description		
AssignFrameIdRange generates an assign frame PID range request.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::AssignFrameIdRange		
Mapping Rule		Mapping Type
Use FrameType "Assign_Frame_Id_Range" if ScheduleEntry is an "AssignFrameIdRange".		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
BSW Parameter		BSW Type
ASSIGN_NAD		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
AssignNAD		
Template Description		
Schedule entry for an Assign NAD master request.		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::AssignNad	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Use FrameType "Assign_NAD" if ScheduleEntry is an "AssignNad".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType
<b>BSW Parameter</b>	<b>BSW Type</b>
CONDITIONAL	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
Conditional Change NAD	
<b>Template Description</b>	
Generates an conditional change NAD request. See ISO 17987 protocol specification for more information.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::ConditionalChangeNad	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Use FrameType "CONDITIONAL" if ScheduleEntry is an "ConditionalChangeNad".	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType
<b>BSW Parameter</b>	<b>BSW Type</b>
EVENT_TRIGGERED	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
Event triggered frame	
<b>Template Description</b>	
An event triggered frame is used as a placeholder to allow multiple slave nodes to provide its response. The header of an event triggered frame is transmitted when a frame slot allocated to the event triggered frame is processed. The publisher of an associated unconditional frame shall only transmit the response if at least one of the signals carried in its unconditional frame is updated. The LIN Master discovers and purges collisions with the collisionResolvingScheduleTable. The event controlled frame shall not contain any Pdus.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinEventTriggeredFrame	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Derive the type from System Description	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType
<b>BSW Parameter</b>	<b>BSW Type</b>





FREE	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
FreeFormat	
<b>Template Description</b>	
Representing freely defined data.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::FreeFormat	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Use FrameType "Free Format" if ScheduleEntry is a "FreeFormatEntry".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
<b>BSW Parameter</b>	<b>BSW Type</b>	
MRF	ECUC-ENUMERATION-LITERAL-DEF	
<b>BSW Description</b>		
Master Request Frame		
<b>Template Description</b>		
The FrameTriggering describes the instance of a frame sent on a channel and defines the manner of triggering (timing information) and identification of a frame on the channel, on which it is sent. For the same frame, if FrameTriggerings exist on more than one channel of the same cluster the fan-out/in is handled by the Bus interface.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::FrameTriggering		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Use common Frame for Master Request.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SAVE_CONFIGURATION	ECUC-ENUMERATION-LITERAL-DEF	
<b>BSW Description</b>		
SaveConfiguration		
<b>Template Description</b>		
This service is used to notify a slave node to store its configuration.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::SaveConfigurationEntry		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Use FrameType "Save_Configuration" is an "SaveConfiguration".	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid		

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
BSW Parameter	BSW Type	
SPORADIC	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description	Sporadic slot	
Template Description	A sporadic frame is a group of unconditional frames that share the same frame slot. The sporadic frame shall not contain any Pdus.	
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinSporadicFrame	
Mapping Rule	Mapping Type	
Derive the type from System Description	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
BSW Parameter	BSW Type	
SRF	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description	Slave Response Frame	
Template Description	<p>The FrameTriggering describes the instance of a frame sent on a channel and defines the manner of triggering (timing information) and identification of a frame on the channel, on which it is sent.</p> <p>For the same frame, if FrameTriggerings exist on more than one channel of the same cluster the fan-out/in is handled by the Bus interface.</p>	
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreCommunication::FrameTriggering	
Mapping Rule	Mapping Type	
Use common Frame for Slave Response.	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
BSW Parameter	BSW Type	
UNASSIGN	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description	UnassignFrameId	
Template Description	Schedule entry for an Unassign Frame Id master request where the protected identifier is assigned the value 0x40. This will disable reception/transmission of a previously dynamically assigned frame identifier.	
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::UnassignFrameId	
Mapping Rule	Mapping Type	







Use FrameType "Unassign" if ScheduleEntry is an "UnassignFrameId".	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfFrameType	
BSW Parameter	BSW Type	
UNCONDITIONAL	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description	Unconditional Frame	
Template Description	Unconditional frames carry signals. The master sends a frame header in a scheduled frame slot and the designated slave node fills the frame with data.	
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinUnconditionalFrame	
Mapping Rule	Mapping Type	
Derive the type from System Description	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid		

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame	
BSW Parameter	BSW Type	
LinIfPduDirection	ECUC-CHOICE-CONTAINER-DEF	
BSW Description	Direction of the frame	
Template Description	LIN specific attributes to the FrameTriggering	
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinFrameTriggering	
Mapping Rule	Mapping Type	
Create container for each existing LinFrame.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00027]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection	
BSW Parameter	BSW Type	
LinIfInternalPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	Represents a Diagnostic or Configuration frame : no Message ID (no PduId). Only applicable to LIN master nodes.	
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00021]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection	
BSW Parameter	BSW Type	
LinIfRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	represents a received PDU/frame	
Template Description		
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinFrameTriggering.framePort	
Mapping Rule	Mapping Type	
Create container if the regarded LinFrameTriggering in the ECU Extract contains a reference to an "in" FramePort	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_LinIf_00035]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection/LinIfRxPdu	
BSW Parameter	BSW Type	
LinIfRxIndicationUL	ECUC-FUNCTION-NAME-DEF	
BSW Description	<p>This parameter defines the name of the &lt;User_RxIndication&gt;. This parameter depends on the parameter LinIfUserRxIndicationUL.</p> <p>If LinIfUserRxIndicationUL equals PDUR, the name of the &lt;User_RxIndication&gt; is fixed. If LinIfUserRxIndicationUL equals CDD, the name of the &lt;User_RxIndication&gt; is selectable.</p>	
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_LinIf_00055]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection/LinIfRxPdu	
BSW Parameter	BSW Type	
LinIfRxPduRef	ECUC-REFERENCE-DEF	
BSW Description	Reference to the PDU that is received in this frame.	
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00036]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection/LinIfRxPdu	
BSW Parameter		BSW Type
LinIfUserRxIndicationUL		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the upper layer (UL) module to which the indication of the successfully received LinIfRxPdu has to be routed via <User_RxIndication>.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00610]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection	
BSW Parameter		BSW Type
LinIfSlaveToSlavePdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents a slave-to-slave PDU/frame. Master does only send the header but doesn't receive the response. Only relevant for master nodes.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00040]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection	
BSW Parameter		BSW Type
LinIfTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
represents a transmitted PDU/frame		
Template Description		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinFrameTriggering.f <code>framePort</code>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container if the regarded LinFrameTriggering in the ECU Extract contains a reference to an "out" FramePort	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Linlf_00049]

<b>BSW Module</b>	<b>BSW Context</b>
Linlf	Linlf/LinlfGlobalConfig/LinlfChannel/LinlfFrame/LinlfPduDirection/LinlfTxPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
LinlfTxConfirmationUL	ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>	
This parameter defines the name of the <User_TxConfirmation>. This parameter depends on the parameter LinlfUserTxUL. If LinlfUserTxUL equals PDUR, the name of the <User_TxConfirmation> is fixed. If LinlfUserTxUL equals CDD, the name of the <User_TxConfirmation> is selectable.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Linlf_00054]

<b>BSW Module</b>	<b>BSW Context</b>
Linlf	Linlf/LinlfGlobalConfig/LinlfChannel/LinlfFrame/LinlfPduDirection/LinlfTxPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
LinlfTxPduId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Identifier of the Pdu for the upper layer.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Linlf_00050]

<b>BSW Module</b>	<b>BSW Context</b>
Linlf	Linlf/LinlfGlobalConfig/LinlfChannel/LinlfFrame/LinlfPduDirection/LinlfTxPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
LinlfTxPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the PDU that is transmitted in this frame.	
<b>Template Description</b>	





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00051]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection/LinIfTxPdu	
BSW Parameter		BSW Type
LinIfTxTriggerTransmitUL		ECUC-FUNCTION-NAME-DEF
BSW Description		
This parameter defines the name of the <User_TriggerTransmit>. This parameter depends on the parameter LinIfUserTxUL. If LinIfUserTxUL equals PDUR, the name of the <User_TriggerTransmit> is fixed. If LinIfUserTxUL equals CDD, the name of the <User_TriggerTransmit> is selectable.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00628]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfPduDirection/LinIfTxPdu	
BSW Parameter		BSW Type
LinIfUserTxUL		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the upper layer (UL) module to which the trigger of the transmitted LinTxPdu (via the <User_TriggerTransmit>) or the confirmation of the successfully transmitted LinTxPdu has to be routed (via the <User_TxConfirmation>).		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00609]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame	
BSW Parameter		BSW Type
LinIfSubstitutionFrames		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
List of sporadic frames that can be sent in a sporadic frame slot (master node) or list of unconditional frames that can be sent in an event-triggered frame slot (slave node).		





<b>Template Description</b>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinSporadicFrame.substitutedFrame	
<b>Mapping Rule</b>	<b>Mapping Type</b>
emulate reference from System Description	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00042]

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfSubstitutionFrames	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinIfFramePriority		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Priority of sporadic frame in a master node or of event-triggered frame in slave node.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinSporadicFrame.substitutedFrame		
<b>Mapping Rule</b>		<b>Mapping Type</b>
In the System Description the priority is described by the Order of the UnconditionalFrames		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LinIf_00513]

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfFrame/LinIfSubstitutionFrames	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinIfSubstitutionFrameRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to an unconditional Frame that is used as sporadic frame in a master node or event-triggered frame in a slave node.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LinIf_00041]

<b>BSW Module</b>	<b>BSW Context</b>	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinIfGotoSleepConfirmationUL		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the upper layer (UL) module to which the confirmation of the goto-sleep command shall be sent.		





Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00601]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
BSW Parameter	BSW Type
LinIfGotoSleepIndicationUL	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
This parameter defines the upper layer (UL) module to which the indication of the goto-sleep command shall be sent. Only used for LIN Slave nodes, ignored for master nodes.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00652]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
BSW Parameter	BSW Type
LinIfMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF
BSW Description	
Defines the interval of calls to main functions per channel in seconds.	
Template Description	
Time base is mandatory for the master. It is not used for slaves. LIN 2.0 Spec states: "The time_base value specifies the used time base in the master node to generate the maximum allowed frame transfer time." The time base shall be specified AUTOSAR conform in seconds.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinMaster.timeBase	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00639]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
BSW Parameter	BSW Type





LinIfMaxFrameCnt	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Maximum number of Frames. This parameter is needed only in case of post-build loadable implementation using static memory allocation.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00636]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
LinIfNodeType	ECUC-CHOICE-CONTAINER-DEF
<b>BSW Description</b>	
This container defines the LIN node type of this channel.	
<b>Template Description</b>	
<b>LinMaster:</b> Describing the properties of the referring ecu as a LIN master.	
<b>LinSlave:</b> Describing the properties of the referring ecu as a LIN slave.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinMaster, SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Set to MASTER if the CommunicationController is defined as a LinMaster. Set to SLAVE if the CommunicationController is defined as a LinSlave. In the System Template the LinMaster/LinSlave is connected to the LinChannel via a CommunicationConnector.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00654]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType
<b>BSW Parameter</b>	<b>BSW Type</b>
LinIfMaster	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Each Master can only be connected to one physical channel. This could be compared to the Node parameter in a LDF file.	
<b>Template Description</b>	
Describing the properties of the referring ecu as a LIN master.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinMaster	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container if the regarded ECU contains a CommunicationController that is defined as a Lin Master. In the System Template the LinMaster is connected to the LinChannel via a CommunicationConnector.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00512]



BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfMaster	
BSW Parameter	BSW Type	
LinIfJitter	ECUC-FLOAT-PARAM-DEF	
BSW Description		
The jitter specifies the differences between the maximum and minimum delay from time base tick to the header sending start point in seconds.		
Template Description		
The attribute timeBaseJitter is a mandatory attribute for the master and not used for slaves. LIN 2.0 Spec states: "The jitter value specifies the differences between the maximum and minimum delay from time base start point to the frame header sending start point (falling edge of BREAK signal)." The jitter shall be specified AUTOSAR conform in seconds.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinMaster.timeBaseJitter		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00629]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType	
BSW Parameter	BSW Type	
LinIfSlave	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Describes all parameters which are only relevant for a LIN Slave node.		
Template Description		
Describing the properties of the referring ecu as a LIN slave.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00649]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave	
BSW Parameter	BSW Type	
LinIfLinProtocolVersion	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines the LIN protocol version of the slave node. This information is relevant for the LIN conformance test execution.		
Template Description		
<p><b>LinSlaveConfig.protocolVersion:</b> Version specifier for a communication protocol. Protocol version of the LinMaster and the LinSlaves may be different.</p> <p><b>LinCommunicationController.protocolVersion:</b> Version specifier for a communication protocol.</p>		





M2 Parameter	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlaveConfig.protocolVersion, SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinCommunicationController.protocolVersion	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00647]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave	
BSW Parameter		BSW Type
LinIfNodeConfigurationIdentification		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is mandatory for all LIN 2.x and ISO17987 LIN slave nodes, and ignored for LIN 1.3 slave nodes and all master nodes,		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_LinIf_00650]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave/LinIfNodeConfigurationIdentification	
BSW Parameter		BSW Type
LinIfConfiguredNAD		ECUC-INTEGER-PARAM-DEF
BSW Description		
Slave node configured NAD.		
Template Description		
<b>LinSlave.configuredNad:</b> To distinguish LIN slaves that are used twice or more within the same cluster.		
<b>LinSlaveConfig.configuredNad:</b> To distinguish LIN slaves that are used twice or more within the same cluster.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave.configuredNad, SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlaveConfig.configuredNad		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_LinIf_00643]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave/LinIfNodeConfigurationIdentification	
BSW Parameter		BSW Type





LinIfFunctionId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
LIN function Id.	
<b>Template Description</b>	
<b>LinSlave.functionId:</b> LIN function ID	
<b>LinSlaveConfig.functionId:</b> LIN function ID.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave.functionId, SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlaveConfig.functionId	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00646]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave/LinIfNodeConfigurationIdentification
<b>BSW Parameter</b>	<b>BSW Type</b>
LinIfInitialNAD	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Slave node initial NAD.	
<b>Template Description</b>	
<b>LinSlave.initialNad:</b> This attribute represents the initial NAD.	
<b>LinSlaveConfig.initialNad:</b> Initial NAD of the LIN slave.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave.initialNad, SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlaveConfig.initialNad	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00642]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave/LinIfNodeConfigurationIdentification
<b>BSW Parameter</b>	<b>BSW Type</b>
LinIfNasTimeout	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
N_As timeout in seconds.	
<b>Template Description</b>	
Value of the N_AS timeout. Unit: seconds.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave.nasTimeout	
<b>Mapping Rule</b>	<b>Mapping Type</b>





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00644]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave/LinIfNodeConfigurationIdentification	
BSW Parameter		BSW Type
LinIfSupplierId		ECUC-INTEGER-PARAM-DEF
BSW Description		
LIN consortium or ISO LIN supplier Id.		
Template Description		
<b>LinSlave.supplierId:</b> LIN Supplier ID		
<b>LinSlaveConfig.supplierId:</b> LIN Supplier ID.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave. <a href="#">supplierId</a> , SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlaveConfig. <a href="#">supplierId</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00645]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave/LinIfNodeConfigurationIdentification	
BSW Parameter		BSW Type
LinIfVariantId		ECUC-INTEGER-PARAM-DEF
BSW Description		
LIN variant Id.		
Template Description		
<b>LinSlave.variantId:</b> Specifies the Variant ID		
<b>LinSlaveConfig.variantId:</b> Specifies the Variant ID.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave. <a href="#">variantId</a> , SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlaveConfig. <a href="#">variantId</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinIf_00641]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfNodeType/LinIfSlave	
BSW Parameter		BSW Type





LinIfResponseErrorSignal	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the response_error signal. Mandatory for all LIN 2.x and ISO LIN slave nodes, not relevant for LIN 1.3 slave nodes.	
<b>Template Description</b>	
This ISignal shall be taken to transport the responseError bit.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinErrorResponse.responseError	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00648]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
LinIfScheduleChangeNextTimeBase	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables/disables the switch to a new schedule table at the start of the next time base after status check. True: LinIf selects a new schedule table in next main function. Only applicable for LIN Master nodes.	
<b>Template Description</b>	
This attribute defines the point in time where a schedule table switch is performed. If this attribute is set to false or not present, the schedule table shall be switched after the current entry of the active schedule table is ended. If this attribute is enabled, the schedule table shall be switched when message transmission or reception within an entry has been completed, ensured by status checks for transmission and reception.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinCommunicationConnector.scheduleChangeNextTimeBase	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00640]

<b>BSW Module</b>	<b>BSW Context</b>
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
LinIfScheduleRequestConfirmationUL	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
This parameter defines the upper layer (UL) module to which the confirmation of the successfully performed schedule table change shall be sent. Only applicable to LIN master nodes.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00600]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel	
BSW Parameter	BSW Type	
LinIfScheduleTable	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Describes a schedule table. Each LinIfChannel may have several schedule tables. Each schedule table can only be connected to one channel. Mandatory for LIN Master nodes. The SHORT-NAME of the LinIfScheduleTable container represents the symbolic name of the schedule table.		
Template Description		
The master task (in the master node) transmits frame headers based on a schedule table. The schedule table specifies the identifiers for each header and the interval between the start of a frame and the start of the following frame.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinScheduleTable		
Mapping Rule		Mapping Type
Create container for each ScheduleTable that is defined for this channel.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00365]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfScheduleTable	
BSW Parameter	BSW Type	
LinIfEntry	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Describes an entry in the schedule table (also known as Frame Slot).		
Template Description		
Table entry in a LinScheduleTable. Specifies what will be done in the frame slot.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::ScheduleTableEntry		
Mapping Rule		Mapping Type
Each RelativelyScheduledTiming element in the System Description requires the creation of a LinIfEntry. RelativelyScheduledTiming.scheduleTable decides to which schedule table the LinIfEntry belongs.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinIf_00366]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfScheduleTable/LinIfEntry	
BSW Parameter	BSW Type	
LinIfCollisionResolvingRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the schedule table, which resolves the collision. This parameter is only used if the referenced frames are event triggered frames.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinEventTriggeredFrame.collissionResolvingSchedule		
Mapping Rule		Mapping Type





Emulate the reference from the System Description.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00007]

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfScheduleTable/LinIfEntry	
BSW Parameter	BSW Type	
LinIfDelay	ECUC-FLOAT-PARAM-DEF	
BSW Description	Delay to next entry in schedule table in seconds.	
Template Description	Relative delay between this tableEntry and the start of the successor in the schedule table in seconds.	
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::ScheduleTableEntry.delay	
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_LinIf_00009]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfScheduleTable/LinIfEntry	
BSW Parameter	BSW Type	
LinIfEntryIndex	ECUC-INTEGER-PARAM-DEF	
BSW Description	Position of the Frame Entry in the Schedule Table. The first entry index in the schedule table is 0.	
Template Description	Relative position in the schedule table. The first entry index in the schedule table is 0.	
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::ScheduleTableEntry.positionInTable	
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_LinIf_00011]	

BSW Module	BSW Context	
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfScheduleTable/LinIfEntry	
BSW Parameter	BSW Type	
LinIfFrameRef	ECUC-REFERENCE-DEF	
BSW Description	Reference to the frames that belong to this schedule table entry.	
Template Description		
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::ApplicationEntry.frameTriggering	





Mapping Rule	Mapping Type
Emulate reference from the System Description	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00016]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfScheduleTable
BSW Parameter	BSW Type
LinIfResumePosition	ECUC-ENUMERATION-PARAM-DEF
BSW Description	Defines where a RUN_CONTINUOUS schedule table shall proceed in case it has been interrupted by a RUN_ONCE table.
Template Description	Defines, where a schedule table shall be proceeded in case if it has been interrupted by a run-once table or MRF/SRF.
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinScheduleTable.resumePosition
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00033]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfScheduleTable
BSW Parameter	BSW Type
LinIfRunMode	ECUC-ENUMERATION-PARAM-DEF
BSW Description	The schedule table can be executed in two different modes.
Template Description	The schedule table can be executed in two different modes.
M2 Parameter	SystemTemplate::Fibex::Fibex4Lin::LinCommunication::LinScheduleTable.runMode
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_LinIf_00034]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfScheduleTable
BSW Parameter	BSW Type
LinIfScheduleTableIndex	ECUC-INTEGER-PARAM-DEF
BSW Description	This is the unique index used by upper layers to identify a schedule. Note that the NULL_SCHEDULE for each channel must have index 0.
Template Description	







M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00037]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
BSW Parameter	
LinIfTransceiverDrvConfig	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container contains the configuration parameters of each underlying LIN Transceiver Driver.	
Template Description	
M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00046]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel/LinIfTransceiverDrvConfig
BSW Parameter	
LinIfTrcvldRef	ECUC-REFERENCE-DEF
BSW Description	
Logical handle of the underlying LIN transceiver to be served by the LIN Interface.	
Template Description	
M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00047]

BSW Module	BSW Context
LinIf	LinIf/LinIfGlobalConfig/LinIfChannel
BSW Parameter	
LinIfWakeupConfirmationUL	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
This parameter defines the upper layer (UL) module to which the confirmation of the wake-up shall be sent.	
Template Description	
M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>





<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinIf_00602]

### C.5.3 LinTp Mapping

<b>BSW Module</b>	<b>BSW Context</b>	
LinTp	LinTp	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinTpGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Container that holds all LIN transport protocol general parameters.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LinTp_00617]

<b>BSW Module</b>	<b>BSW Context</b>	
LinTp	LinTp/LinTpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinTpChangeParameterApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
This parameter, if set to true, enables the LinTp_ChangeParameter Api for this Module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LinTp_00638]

<b>BSW Module</b>	<b>BSW Context</b>	
LinTp	LinTp/LinTpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinTpVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the LinTp_GetVersionInfo function ON or OFF.		
<b>Template Description</b>		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinTp_00068]

BSW Module	BSW Context	
LinTp	LinTp	
BSW Parameter		BSW Type
LinTpGlobalConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the global configuration parameters of the LinTp.		
Template Description		
TP Node (Sender or Receiver) provides the TP Address and the connection to the Topology description.		
M2 Parameter		
SystemTemplate::TransportProtocols::LinTpNode		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create container if the regarded ECU is a LinTpNode.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinTp_00056]	

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig	
BSW Parameter		BSW Type
LinTpChannelConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the channel specific configuration parameters of LinTp.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::LinTpNode.connector		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create this container for each CommunicationConnector that is referenced by a LinTpNode that is available in the EcuExtract. The CommunicationConnector is referenced by a PhysicalChannel that is aggregated by the CommunicationCluster that corresponds to the ComMChannel in the Ecu that is referenced by the LinTpChannelRef in the LinTpChannelConfig.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_LinTp_00071]	

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpChannelConfig	
BSW Parameter		BSW Type
LinTpChannelRef		ECUC-REFERENCE-DEF
BSW Description		





Index of the channel this LinTp channel belongs to.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_LinTp_00073]

<b>BSW Module</b>	<b>BSW Context</b>	
LinTp	LinTp/LinTpGlobalConfig/LinTpChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinTpDropNotRequestedNad		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Configures if TP Frames of not requested LIN-Slaves are dropped or not. TRUE: Drop TP Frames of not requested LIN-Slaves FALSE: Keep TP Frames of not requested LIN-Slaves Only used for LIN Master nodes, ignored for slave nodes.		
<b>Template Description</b>		
Configures if TP Frames of not requested LIN-Slaves are dropped or not.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::LinTpNode.dropNotRequestedNad		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LinTp_00072]

<b>BSW Module</b>	<b>BSW Context</b>	
LinTp	LinTp/LinTpGlobalConfig/LinTpChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
LinTpMaxNumberOfRespPendingFrames		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Configures the maximum number of allowed response pending frames. Only used for LIN Master nodes, ignored for slave nodes.		
<b>Template Description</b>		
Configures the maximum number of allowed response pending frames.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::LinTpNode.maxNumberOfRespPendingFrames		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_LinTp_00624]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpChannelConfig	
BSW Parameter	BSW Type	
LinTpP2Max	ECUC-FLOAT-PARAM-DEF	
BSW Description		
P2*max timeout when a response pending frame is expected in seconds. Note that the minimum value of LinTpP2Max shall be more than or equal to the value of LinTpP2Timing. Only used for LIN Master nodes, ignored for slave nodes.		
Template Description		
After reception of a response pending frame the P2 timeout counter is reloaded with the timeout time P2max.		
M2 Parameter		
SystemTemplate::TransportProtocols::LinTpNode.p2Max		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00622]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpChannelConfig	
BSW Parameter	BSW Type	
LinTpP2Timing	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Definition of the P2max timeout observation parameter in seconds. Only used for LIN Master nodes, ignored for slave nodes.		
Template Description		
P2 timeout observation parameter.		
M2 Parameter		
SystemTemplate::TransportProtocols::LinTpNode.p2Timing		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00625]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpChannelConfig	
BSW Parameter	BSW Type	
LinTpScheduleChangeDiag	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables or disables the call of BswM_LinTp_RequestMode() to diagnostic request/response schedule. false: BswM is not called true: BswM is called Only used for LIN Master nodes, ignored for slave nodes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00070]

BSW Module		BSW Context	
LinTp		LinTp/LinTpGlobalConfig	
BSW Parameter		BSW Type	
LinTpMaxRxNSduCnt		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Maximum number of NSdus. This parameter is needed only in case of post-build loadable implementation using static memory allocation.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_LinTp_00635]

BSW Module		BSW Context	
LinTp		LinTp/LinTpGlobalConfig	
BSW Parameter		BSW Type	
LinTpMaxTxNSduCnt		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Maximum number of NSdus. This parameter is needed only in case of post-build loadable implementation using static memory allocation.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_LinTp_00636]

BSW Module		BSW Context	
LinTp		LinTp/LinTpGlobalConfig	
BSW Parameter		BSW Type	
LinTpRxNSdu		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container exists once for each received N-SDU on any channel the node is connected to. This N-SDU produces meta data items of type LIN_NAD_8.			
Template Description			
M2 Parameter			
SystemTemplate::TransportProtocols::LinTpConnection. <a href="#">linTpNSdu</a>			
Mapping Rule			Mapping Type
Create container for each NSdu that is received by the regarded ECU.			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_LinTp_00428]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpRxNSdu	
BSW Parameter	BSW Type	
LinTpNcr	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Value in seconds of the N_Cr timeout. N_Cr is the time until reception of the next Consecutive Frame N_PDU.		
Template Description		
This attribute defines the timeout value for waiting for a CF or FF-x (in case of retry) after receiving the last CF or after sending an FC or AF on the receiver side. Specified in seconds.		
M2 Parameter		
SystemTemplate::TransportProtocols::LinTpConnection.timeoutCr		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00632]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpRxNSdu	
BSW Parameter	BSW Type	
LinTpRxNSduChannelRef	ECUC-REFERENCE-DEF	
BSW Description		
Index of the channel this N-SDU belongs to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00060]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpRxNSdu	
BSW Parameter	BSW Type	
LinTpRxNSduld	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The identifier of the Transport Protocol message. This ID will be used by upper layers to call LinTp_ChangeParameter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00061]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpRxNSdu	
BSW Parameter		BSW Type
LinTpRxNSduNad		ECUC-INTEGER-PARAM-DEF
BSW Description		
A N-SDU transported on LIN is identified using the NAD for the specific slave.		
Template Description		
To distinguish LIN slaves that are used twice or more within the same cluster.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave.configuredNad		
Mapping Rule		Mapping Type
Find connection from NSdu to CommunicationController		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00062]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpRxNSdu	
BSW Parameter		BSW Type
LinTpRxNSduPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the global PDU		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00063]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig	
BSW Parameter		BSW Type
LinTpTxNSdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container exists once for each transmitted N-SDU on any channel the node is connected to. This N-SDU consumes meta data items of type LIN_NAD_8.		
Template Description		
M2 Parameter		
SystemTemplate::TransportProtocols::LinTpConnection.linTpNSdu		
Mapping Rule		Mapping Type
Create container for each NSdu that is received by the regarded ECU.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00511]



BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpTxNSdu	
BSW Parameter	BSW Type	
LinTpMaxBufReq	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This parameter defines the maximum number of times the LinTp should request upper layer for the Tx Buffer. It is also used to limit the number of retries for PduR_LinTpCopyTxData when no timer is active.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00637]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpTxNSdu	
BSW Parameter	BSW Type	
LinTpNas	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Value in seconds of the N_As timeout. N_As is the time for transmission of a LIN frame (any N_PDU) on the part of the sender.		
Template Description		
Time for transmission of the LIN frame (any N-PDU) on the sender side. Specified in seconds.		
M2 Parameter		
SystemTemplate::TransportProtocols::LinTpConnection. <a href="#">timeoutAs</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00633]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpTxNSdu	
BSW Parameter	BSW Type	
LinTpNcs	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Value in seconds of the performance requirement of N_Cs. N_Cs is the time which elapses between the transmit request of a CF N-PDU until the transmit request of the next CF N-PDU.		
Template Description		
The attribute timeoutCs represents the time (in seconds) which elapses between the transmit request of a CF N-PDU until the transmit request of the next CF N-PDU.		
M2 Parameter		
SystemTemplate::TransportProtocols::LinTpConnection. <a href="#">timeoutCs</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00634]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpTxNSdu	
BSW Parameter	BSW Type	
LinTpTxNSduChannelRef	ECUC-REFERENCE-DEF	
BSW Description		
Index of the channel this N-SDU belongs to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00064]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpTxNSdu	
BSW Parameter	BSW Type	
LinTpTxNSduId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The identifier of the Transport Protocol message. This ID will be the one that is communicated with upper layers.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00065]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpTxNSdu	
BSW Parameter	BSW Type	
LinTpTxNSduNad	ECUC-INTEGER-PARAM-DEF	
BSW Description		
A N-SDU transported on LIN is identified using the NAD for the specific slave.		
Template Description		
To distinguish LIN slaves that are used twice or more within the same cluster.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Lin::LinTopology::LinSlave.configuredNad		
Mapping Rule		Mapping Type
Find connection from NSdu to CommunicationController		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00066]

BSW Module	BSW Context	
LinTp	LinTp/LinTpGlobalConfig/LinTpTxNSdu	
BSW Parameter		BSW Type
LinTpTxNSduPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the global PDU		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_LinTp_00067]

## C.6 Ethernet

### C.6.1 Ethernet Driver Mapping

BSW Module	BSW Context	
Eth	Eth	
BSW Parameter		BSW Type
EthConfigSet		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR Eth module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00015]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet	
BSW Parameter		BSW Type
EthCtrlConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of the individual controller		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_Eth_00006]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlConfigEgress		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of one Ethernet controler egress behavior.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00046]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress	
BSW Parameter		BSW Type
EthCtrlConfigEgressFifo		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents a Fifo at the egress side.		
Template Description		
Defines a Fifo for the CouplingPort egress structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortFifo		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00047]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressFifo	
BSW Parameter		BSW Type
EthCtrlConfigEgressFifoBufLenByte		ECUC-INTEGGER-PARAM-DEF
BSW Description		
Length of Fifo elements in bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_Eth_00051]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressFifo	
BSW Parameter		BSW Type
EthCtrlConfigEgressFifoBufTotal		ECUC-INTEGER-PARAM-DEF
BSW Description		
Fifo buffer count.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00050]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressFifo	
BSW Parameter		BSW Type
EthCtrlConfigEgressFifoldx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Egress Fifo index.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00048]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressFifo	
BSW Parameter		BSW Type
EthCtrlConfigEgressFifoPriorityAssignment		ECUC-INTEGER-PARAM-DEF
BSW Description		
Message egress priority assignment.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00049]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress	
BSW Parameter	BSW Type	
EthCtrlConfigEgressLastSchedulerRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the scheduler which is the last in the egress structure.		
Template Description		
Defines which CouplingPortScheduler is the last in the egress port structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortDetails.lastEgressScheduler		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00052]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress	
BSW Parameter	BSW Type	
EthCtrlConfigEgressQueue	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Represents a queue at the egress side.		
Template Description		
Defines a Fifo for the CouplingPort egress structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortFifo		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00090]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue	
BSW Parameter	BSW Type	
EthCtrlConfigEgressQueueBufLenByte	ECUC-INTEGGER-PARAM-DEF	
BSW Description		
Defines the length of one queue element in bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00092]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueBufTotal		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the count of queue elements for one queue.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00093]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the queue index.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00091]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueuePriorityAssignment		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the egress queue priority assignment.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00094]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueTransmissionSelection		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents the transmission selection of a queue at the egress side.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00100]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue/EthCtrlConfigEgressQueueTransmissionSelection	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueTransmissionSelectionAlgorithm		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Represents the transmission selection of a queue at the egress side.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00106]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue/EthCtrlConfigEgressQueueTransmissionSelection	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueTransmissionSelection CBSConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents the configuration of a credit based shaper transmission selection algorithm for an queue at the egress side. This configuration is used if the EthCtrlConfigEgressQueueTransmissionSelectionAlgorithm is set to ETH_TRANSMISSION_SELECTION_CBS.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00101]



BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue/EthCtrlConfigEgressQueueTransmissionSelection/EthCtrlConfigEgressQueueTransmissionSelectionCBSSConfig	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueCreditBasedShaperIdleSlope		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Defines the increase of credit in bits per second for the AVB shaper.</p> <p>Note: this parameter maps to IEEE802.1Q parameter "ieee8021FqtssAdminIdleSlopeMs" and "ieee8021FqtssAdminIdleSlopeLs".</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00103]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue/EthCtrlConfigEgressQueueTransmissionSelection/EthCtrlConfigEgressQueueTransmissionSelectionCBSSConfig	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueCreditBasedShaperMaxCredit		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Defines the maximum amount of credits that can be accumulated for a queue.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00102]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue/EthCtrlConfigEgressQueueTransmissionSelection/EthCtrlConfigEgressQueueTransmissionSelectionCBSSConfig	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueCreditBasedShaperMinCredit		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Defines the minimum amount of credits that can be accumulated for a queue.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00104]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigEgressQueue/EthCtrlConfigEgressQueueTransmissionSelection/EthCtrlConfigEgressQueueTransmissionSelectionCBSCConfig	
BSW Parameter		BSW Type
EthCtrlConfigEgressQueueCreditBasedShaperSendSlope		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the send slope of queue at egress side.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00105]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress	
BSW Parameter		BSW Type
EthCtrlConfigScheduler		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents a Scheduler on the egress side.		
Template Description		
Defines a scheduler for the CouplingPort egress structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00053]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigScheduler	
BSW Parameter		BSW Type
EthCtrlConfigSchedulerPredecessor		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Defines an ordered list of predecessors for this scheduler.		
Template Description		
Ordered List of predecessor inputs. The first element has the highest priority. The following elements have decreasing priorities.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler.predecessor		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00054]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigScheduler/EthCtrlConfigSchedulerPredecessor	
BSW Parameter		BSW Type
EthCtrlConfigSchedulerPredecessorOrder		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the order of the scheduler predecessors.		
Template Description		
Ordered List of predecessor inputs. The first element has the highest priority. The following elements have decreasing priorities.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler.predecessor		
Mapping Rule		Mapping Type
Defined by the order of CouplingPortScheduler.predecessor.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00055]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigScheduler/EthCtrlConfigSchedulerPredecessor	
BSW Parameter		BSW Type
EthCtrlConfigSchedulerPredecessorRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
Choice reference to the scheduler predecessor.		
Template Description		
Ordered List of predecessor inputs. The first element has the highest priority. The following elements have decreasing priorities.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler.predecessor		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00056]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress	
BSW Parameter		BSW Type
EthCtrlConfigShaper		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents a Shaper an the egress side.		
Template Description		
Defines a shaper for the CouplingPort egress structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortShaper		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Eth_00057]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigShaper	
BSW Parameter	BSW Type	
EthCtrlConfigShaperIdleSlope	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines the increase of credit in bits per second for the AVB shaper.		
Template Description		
Defines the increase of credit in bits per second for the AVB shaper.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortShaper. <a href="#">idleSlope</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Eth_00058]	

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigShaper	
BSW Parameter	BSW Type	
EthCtrlConfigShaperMaxCredit	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum amount of credits that can be accumulated for a queue.		
Template Description		
Defines the increase of credit in bits per second for the AVB shaper.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortShaper. <a href="#">idleSlope</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Eth_00069]	

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigShaper	
BSW Parameter	BSW Type	
EthCtrlConfigShaperMinCredit	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Minimum amount of credits in bytes that can be accumulated for a queue.		
Template Description		
Defines the increase of credit in bits per second for the AVB shaper.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortShaper. <a href="#">idleSlope</a>		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Eth_00070]

BSW Module	BSW Context
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigEgress/EthCtrlConfigShaper
BSW Parameter	BSW Type
EthCtrlConfigShaperPredecessorFifoRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to the fifo which is the predecessor for this shaper.	
Template Description	
Defines the CouplingPortFifo which provides the input to this shaper.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortShaper.predecessorFifo	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Eth_00059]

BSW Module	BSW Context
Eth	Eth/EthConfigSet/EthCtrlConfig
BSW Parameter	BSW Type
EthCtrlConfigIngress	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Configuration of one Ethernet controler ingress behavior.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Eth_00040]

BSW Module	BSW Context
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress
BSW Parameter	BSW Type
EthCtrlConfigIngressFifo	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Represents a Fifo at the ingress side.	
Template Description	
M2 Parameter	





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Eth_00041]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress/EthCtrlConfigIngressFifo	
BSW Parameter		BSW Type
EthCtrlConfigIngressFifoBufLenByte		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of Fifo elements in bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00045]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress/EthCtrlConfigIngressFifo	
BSW Parameter		BSW Type
EthCtrlConfigIngressFifoBufTotal		ECUC-INTEGER-PARAM-DEF
BSW Description		
Fifo buffer count.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00044]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress/EthCtrlConfigIngressFifo	
BSW Parameter		BSW Type
EthCtrlConfigIngressFifoldx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Ingress Fifo index.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_Eth_00043]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress/EthCtrlConfigIngressFifo	
BSW Parameter		BSW Type
EthCtrlConfigIngressFifoPriorityAssignment		ECUC-INTEGER-PARAM-DEF
BSW Description		
Message ingress priority assignment.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00042]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress	
BSW Parameter		BSW Type
EthCtrlConfigIngressQueue		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents a queue at the ingress side.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00095]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress/EthCtrlConfigIngressQueue	
BSW Parameter		BSW Type
EthCtrlConfigIngressQueueBufLenByte		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the length of one queue element in bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00099]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress/EthCtrlConfigIngressQueue	
BSW Parameter		BSW Type
EthCtrlConfigIngressQueueBufTotal		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the count of queue elements for one queue.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00098]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress/EthCtrlConfigIngressQueue	
BSW Parameter		BSW Type
EthCtrlConfigIngressQueueIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the queue index.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00096]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigIngress/EthCtrlConfigIngressQueue	
BSW Parameter		BSW Type
EthCtrlConfigIngressQueuePriorityAssignment		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the ingress queue priority assignment.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00097]



BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter	BSW Type	
EthCtrlConfigSpiConfiguration	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
SPI Interface configuration of one Ethernet controller (MACPHY use). Configured only if EthCtrlEnableSpiInterface is set to TRUE.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00074]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter	BSW Type	
EthCtrlConfigSpiChunkPayloadSize	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Configures the size of the payload chunks which will be transferred over the SPI interface. Note: The chunk is the basic element for data transaction over the SPI which can be a section of an Ethernet frame or management command. The configured value has to be a multiple of 8.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00079]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter	BSW Type	
EthCtrlConfigSpiCommRetries	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Indicates the maximum number of communication retries in case of a failed SPI communication (applies both to timed out communication and to errors/NACK in the response data). If configured value is '0', no retry is allowed (communication is expected to succeed at first try).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00075]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiCommTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Indicates the maximum time allowed to the Ethernet controller for replying (either positively or negatively) to a SPI command. Timeout is configured in seconds. Timeout value of '0' means that no specific timeout is to be used by Ethernet controller and the communication is executed at the best of the SPI HW capacity.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00076]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiEnableControlDataProtection		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables the control data protection. When set, all control data written to and read from the MACPHY will be transferred with its complement for detection of bit errors as defined in OA TC6 [26]. FALSE: Control data read/write protection is disabled (unprotected). TRUE: Control data read/write protection is enabled (protected).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00081]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiEnableRxCSAlign		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configures the CSn Align Receive frame. TRUE: all received Ethernet frames data shall start at the beginning of the first receive data chunk payload following CSn assertion FALSE: received frames may begin within any receive data chunk of the transaction when this bit is clear.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00085]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiEnableRxCutThrough		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
When supported by the HW, enables the cut through mode of frame from the network to the SPI host.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00082]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiEnableRxZeroAlign		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configures the zero-align receive frame. TRUE: all received Ethernet frames data shall be aligned to start at the beginning of any receive data chunk payload. FALSE: Received frames may begin anywhere within the receive data chunk payload.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00084]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiEnableTransmitDataHdrSequence		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
When supported by the HW, enables the transmit data sequence monitoring. FALSE: transmit data header sequence bit monitoring disabled. TRUE: transmit data header sequence bit monitoring enabled.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00080]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiEnableTxChecksum		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configures the CSn Align Receive frame. TRUE: all received Ethernet frames data shall start at the beginning of the first receive data chunk payload following CSn assertion FALSE: received frames may begin within any receive data chunk of the transaction when this bit is clear.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00086]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiEnableTxCutThrough		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
When supported by the HW, enables the cut through mode of frame from SPI host to the network.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00089]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiSelectTimeStamp		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
When timestamp supported by the HW, selects size and format of the timestamps. FALSE: 32-bits timestamps TRUE: 64-bit timestamps		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00087]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiSequence		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>Container gives Ethernet controller driver information about one SPI sequence. One SPI sequence used by Ethernet controller driver is in exclusive use for it. No other driver is allowed to access this sequence. Ethernet controller driver may use one sequence to access n Ethernet controller hardware chips of the same type or n sequences are used to access one single Ethernet controller hardware chip. If a Ethernet controller hardware has no SPI interface, there is no instance of this container.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00077]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration/EthCtrlConfigSpiSequence	
BSW Parameter		BSW Type
EthCtrlConfigSpiAccessSynchronous		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>This parameter is used to define whether the access to the Spi sequence is synchronous or asynchronous. true: SPI access is synchronous. false: SPI access is asynchronous.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00078]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration/EthCtrlConfigSpiSequence	
BSW Parameter		BSW Type
EthCtrlConfigSpiSequenceName		ECUC-REFERENCE-DEF
BSW Description		
<p>Reference to a Spi sequence configuration container.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00088]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlConfigSpiConfiguration	
BSW Parameter		BSW Type
EthCtrlConfigSpiTransmitCreditThreshold		ECUC-INTEGER-PARAM-DEF
BSW Description		
Configures the minimum of available transmit credit before the writing IRQn is asserted. As per OA TC6, this information is notified by the TXC field. 0 = 1 credit 1 = 4 credits 2 = 8 credits 3 = 16 credits		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00083]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlConfigSwBufferHandling		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables SW buffer management		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00071]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the Ethernet controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the Ethernet driver is mapped to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00065]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter	BSW Type	
EthCtrlEnableMii	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables Media Independent Interface (MII) for transceiver access. Note: In case a MACPHY (external Ethernet controller) is use this parameter has to be enabled to ensure the existence of Eth_WriteMii and Eth_ReadMii. Within the function call of Eth_WriteMii and Eth_ReadMii, the register access is transformed to an SPI command.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00012]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter	BSW Type	
EthCtrlEnableRxInterrupt	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables receive interrupt		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00010]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter	BSW Type	
EthCtrlEnableSpiInterface	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This optional parameter enables the processing of control data and Ethernet frames over the SPI interface specific for MACPHY device. The use of this parameter implies the respect of the SPI protocol described in TC6 [26].		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00073]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlEnableTxInterrupt		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables transmit interrupt		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00011]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the instance ID of the configured controller.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00007]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlMacLayerSpeed		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the baud rate of the MAC layer.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00063]



BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlMacLayerSubType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the MAC layer subtype of a switch port		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00062]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlMacLayerType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the physical MAC/PHY Ethernet Interface type of the ethernet controller.		
Template Description		
Specifies the mac layer type of the CouplingPort.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort. <a href="#">macLayerType</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00039]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlMacLayerType	
BSW Parameter		BSW Type
ETH_MAC_LAYER_TYPE_XGMII		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
MAC layer interface (data) bandwidth class 1Gbit/s (e.g. GMII, RGMII, SGMII, RvGMII, USGMII)		
Template Description		
Mac layer interface (data) bandwidth class 1Gbit/s (e.g. GMII, RGMII, SGMII, RvGMII, USGMII)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetMacLayerTypeEnum. <a href="#">xGMII</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlMacLayerType	
BSW Parameter		BSW Type
ETH_MAC_LAYER_TYPE_XMII		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
MAC layer interface (data) bandwidth class 10-100Mbit/s (e.g. MII, RMII, RvMII, SMII)		
Template Description		
Mac layer interface (data) bandwidth class 100Mbit/s and 10Mbit/s (e.g. RMII, RvMII, SMII, RvMII)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetMacLayerTypeEnum.xMII		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthCtrlMacLayerType	
BSW Parameter		BSW Type
ETH_MAC_LAYER_TYPE_XXGMII		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
MAC layer interface (data) bandwidth class 10Gbit/s		
Template Description		
Mac layer interface (data) bandwidth class 10Gbit/s		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetMacLayerTypeEnum.xXGMII		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter		BSW Type
EthCtrlPhyAddress		ECUC-STRING-PARAM-DEF
BSW Description		
Specifies the unique 48-bit physical address (MAC address) of the controller in network byte order. Regular Expression: [0-9a-fA-F]{2}[:-][0-9a-fA-F]{2}{5}		
Template Description		
Media Access Control address (MAC address) that uniquely identifies each EthernetCommunicationController in the network.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationController.macUnicastAddress		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00020]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig	
BSW Parameter	BSW Type	
EthDemEventParameterRefs	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Eth_00016]	

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter	BSW Type	
ETH_E_ACCESS	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "Controller access failed" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Eth_00017]	

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter	BSW Type	
ETH_E_ALIGNMENT	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "Alignment Error" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Eth_00026]	

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter		BSW Type
ETH_E_CRC		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "CRC Failure" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00023]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter		BSW Type
ETH_E_LATECOLLISION		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "Late Collisions" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00029]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter		BSW Type
ETH_E_MULTIPLECOLLISION		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "Multiple Collisions" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00028]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter		BSW Type
ETH_E_OVERSIZEFRAME		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "Oversized Frame" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00025]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter		BSW Type
ETH_E_RX_FRAMES_LOST		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "receive frames lost" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00021]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter		BSW Type
ETH_E_SINGLECOLLISION		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "Single Collisions" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00027]

BSW Module	BSW Context	
Eth	Eth/EthConfigSet/EthCtrlConfig/EthDemEventParameterRefs	
BSW Parameter		BSW Type
ETH_E_UNDERSIZEFRAME		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "Undersized Frame" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00024]

BSW Module	BSW Context	
Eth	Eth	
BSW Parameter		BSW Type
EthGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
General configuration of Ethernet Driver module		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00001]

BSW Module	BSW Context	
Eth	Eth/EthGeneral	
BSW Parameter		BSW Type
EthCtrlOffloading		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of hardware offloading features.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00030]

BSW Module	BSW Context	
Eth	Eth/EthGeneral/EthCtrlOffloading	
BSW Parameter	BSW Type	
EthCtrlEnableOffloadChecksumICMP	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables hardware offloading for ICMP checksums.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Eth_00032]	

BSW Module	BSW Context	
Eth	Eth/EthGeneral/EthCtrlOffloading	
BSW Parameter	BSW Type	
EthCtrlEnableOffloadChecksumIPv4	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables hardware offloading for IPv4 checksums.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Eth_00031]	

BSW Module	BSW Context	
Eth	Eth/EthGeneral/EthCtrlOffloading	
BSW Parameter	BSW Type	
EthCtrlEnableOffloadChecksumTCP	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables hardware offloading for TCP checksums.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Eth_00033]	

BSW Module	BSW Context	
Eth	Eth/EthGeneral/EthCtrlOffloading	
BSW Parameter		BSW Type
EthCtrlEnableOffloadChecksumUDP		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables hardware offloading for UDP checksums.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00034]

BSW Module	BSW Context	
Eth	Eth/EthGeneral	
BSW Parameter		BSW Type
EthDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00003]

BSW Module	BSW Context	
Eth	Eth/EthGeneral	
BSW Parameter		BSW Type
EthEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the Ethernet driver to zero or multiple ECUC partitions to make the modules API available in this partition. The Ethernet driver will operate as an independent instance in each of the partitions.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00064]



BSW Module	BSW Context	
Eth	Eth/EthGeneral	
BSW Parameter		BSW Type
EthGetCounterValuesApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables Eth_GetCounterValues API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00035]

BSW Module	BSW Context	
Eth	Eth/EthGeneral	
BSW Parameter		BSW Type
EthGetRxStatsApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/Disables Eth_GetRxStats API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00072]

BSW Module	BSW Context	
Eth	Eth/EthGeneral	
BSW Parameter		BSW Type
EthGetTxErrorCounterValuesApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/Disables Eth_GetTxErrorCounterValues API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Eth_00061]

BSW Module	BSW Context	
Eth	Eth/EthGeneral	
BSW Parameter		BSW Type





EthGetTxStatsApi	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables/Disables Eth_GetTxStats API.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Eth_00060]

<b>BSW Module</b>	<b>BSW Context</b>
Eth	Eth/EthGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
EthGlobalTimeSupport	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables/Disables the GlobalTime APIs used amongst others by Global Time Synchronization over Ethernet.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Eth_00037]

<b>BSW Module</b>	<b>BSW Context</b>
Eth	Eth/EthGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIndex	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Eth_00018]

<b>BSW Module</b>	<b>BSW Context</b>
Eth	Eth/EthGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
EthMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	





Specifies the period of main function Eth_MainFunction in seconds. Ethernet driver does not require this information but the BSW scheduler.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Eth_00022]

<b>BSW Module</b>	<b>BSW Context</b>	
Eth	Eth/EthGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthMaxCtrlsSupported		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Limits the total number of supported controllers.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Eth_00002]	

<b>BSW Module</b>	<b>BSW Context</b>	
Eth	Eth/EthGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables / Disables version info API		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Eth_00004]	

## C.6.2 Ethernet Interface Mapping

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf	
<b>BSW Parameter</b>		<b>BSW Type</b>





EthIfConfigSet	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Collecting container for all parameters with post-build configuration classes.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00010]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthIfController	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
This container contains the configuration of EthIfController.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00025]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfController	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthIfCtrlIdx	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
This parameter provides a zero-based consecutive index of the Ethernet Communication Controllers. Upper layer BSW modules and the EthIf itself use this index to identify a Ethernet CC.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00026]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfController	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthIfCtrlMtu	ECUC-INTEGER-PARAM-DEF	





<b>BSW Description</b>	
Specifies the maximum transmission unit (MTU) of the EthIfCtrl in [bytes]. Note: In case a VLAN tag is used for the EthIfCtrl, the frame length of the Ethernet frame will increase by 4 bytes.	
<b>Template Description</b>	
This attribute specifies the maximum transmission unit in bytes.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationConnector. <a href="#">maximumTransmissionUnit</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Different MTU values may be defined for different VLANs. Therefore the maximumTransmissionUnit is specified in the EthernetCommunicationConnector. The value that is defined in the CommunicationConnector shall be used as the value of this parameter.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00032]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfController	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfEthTrcvRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to an Ethernet transceiver, which is handled by the Ethernet Interface.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00028]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfController	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfMacSecSupport		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
MACsec support of the ethernet interface controller.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00089]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfController	
BSW Parameter		BSW Type
EthIfMaxTxBufsTotal		ECUC-INTEGER-PARAM-DEF
BSW Description		
Limits the total number of transmit buffers.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00002]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfController	
BSW Parameter		BSW Type
EthIfPaeInstanceRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to MkaPaeInstance		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00090]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfController	
BSW Parameter		BSW Type
EthIfPhysControllerRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a physical Ethernet controller, which is handled by the Ethernet Interface.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00027]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfController	
BSW Parameter		BSW Type





EthIfSwitchRefOrPortGroupRef	ECUC-CHOICE-REFERENCE-DEF
<b>BSW Description</b>	
The choice reference allows to configure that the EthIfController either references an EthIfSwitch or an EthIfSwitchPortGroup. In case EthIfSwitchPortGroups are controlled by the BswM (e.g. according particular PNC requests), then EthIfSwitchPortGroupRefSemantics shall have the value ETHIF_SWITCH_PORT_GROUP_LINK_INFO. In case EthIfSwitchPortGroups are controlled by the EthIfController, then EthIfSwitchPortGroupRefSemantics shall have the value ETHIF_SWITCH_PORT_GROUP_CONTROL.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00048]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfController	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfVlanId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
A virtual-LAN is identified by this attribute according to IEEE 802.1Q.		
<b>Template Description</b>		
A VLAN is identified by this attribute according to IEEE 802.1Q. The allowed values range is from 0..4095.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanConfig.vlanIdentifier		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00029]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfFrameOwnerConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Configuration of Ethernet frame owner		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00011]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfFrameOwnerConfig	
BSW Parameter	BSW Type	
EthIfFrameType	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Selects the Ethernet frame type.		
Template Description		
Ethernet specific attributes to the Frame.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetFrame::AbstractEthernetFrame		
Mapping Rule		Mapping Type
If an AbstractEthernetFrame is defined in the System Extract then it may be possible to derive this parameter from this information.		partial
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00012]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfFrameOwnerConfig	
BSW Parameter	BSW Type	
EthIfOwner	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Selects the owner of an Ethernet frame type. The owner is a zero based index into the callback function configuration 'EthIfRxIndicationConfig'. I.e. an Ethernet frame of type IPv4 (0x800) at index 0 will call the first callback function configured in 'EthIfRxIndicationConfig'.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00013]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet	
BSW Parameter	BSW Type	
EthIfPhysController	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration of EthIfPhysController. The usage of EthIfEthCtrlRef, EthIfCanXLCtrlRef, and EthIfWEthCtrlRef and EthIfCV2xCtrlRef is exclusive OR.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00045]



BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfPhysController	
BSW Parameter		BSW Type
EthIfCV2xCtrlRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to physical Cellular V2X controller, which is handled by a specific Cellular V2X controller driver		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00093]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfPhysController	
BSW Parameter		BSW Type
EthIfCanXLCtrlRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a physical CAN XL controller which is handled by a specific CAN XL driver.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00085]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfPhysController	
BSW Parameter		BSW Type
EthIfEthCtrlRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a physical Ethernet controller, which is handled by a specific Ethernet controller driver.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00047]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfPhysController	
BSW Parameter		BSW Type





EthIfPhysControllerIdx	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter provides a zero-based consecutive index of the physical Ethernet controllers. Upper layer BSW modules and the Ethernet Interface itself use this index to identify a physical Ethernet controller.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00046]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfConfigSet/EthIfPhysController
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfPhysCtrlRxMainFunctionPriorityProcessing	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Configuration of ingress FIFO based main function processing.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00050]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfConfigSet/EthIfPhysController/EthIfPhysCtrlRxMainFunctionPriorityProcessing
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfCanXLCtrlRxIngressFifoRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the reception FIFO.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00087]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfConfigSet/EthIfPhysController/EthIfPhysCtrlRxMainFunctionPriorityProcessing
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfPhysCtrlRxIndicationIterations	ECUC-INTEGER-PARAM-DEF





<b>BSW Description</b>	
Max number of Ethernet frames polled per main function invocation.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00052]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfPhysController/EthIfPhysCtrlRxMainFunctionPriorityProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfPhysCtrlRxIngressFifoRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the reception FIFO.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00053]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfPhysController/EthIfPhysCtrlRxMainFunctionPriorityProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfPhysCtrlRxIngressQueueRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the reception Queue.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00088]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfPhysController/EthIfPhysCtrlRxMainFunctionPriorityProcessing	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfPhysCtrlRxMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Specifies the period of main function in seconds.		
<b>Template Description</b>		





M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthIf_00051]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfPhysController	
BSW Parameter		BSW Type
EthIfWEthCtrlRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a physical Wireless Ethernet controller, which is handled by a specific Wireless Ethernet controller driver.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00073]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet	
BSW Parameter		BSW Type
EthIfRxIndicationConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of receive callback functions.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00014]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfRxIndicationConfig	
BSW Parameter		BSW Type
EthIfRxIndicationFunction		ECUC-FUNCTION-NAME-DEF
BSW Description		
Specifies receive indication callback function.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthIf_00015]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet	
BSW Parameter		BSW Type
EthIfSwitch		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration of EthIfSwitches.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00036]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfSwitch	
BSW Parameter		BSW Type
EthIfSwitchIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter provides a zero-based consecutive index of the Ethernet Interface Switches. Upper layer BSW modules and the EthIf itself use this index to identify a Ethernet Switch.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00037]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfSwitch	
BSW Parameter		BSW Type
EthIfSwitchRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Ethernet Switch, which is handled by a specific Ethernet Switch driver.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00038]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet	
BSW Parameter	BSW Type	
EthIfSwitchPortGroup	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>This container contains the configuration of EthIfSwitchPortGroups.</p> <p>If EthIfSwitchPortGroups are controlled by PNC one EthIfSwitchPortGroup per PNC shall exist.</p> <p>The host port shall be part of all EthIfSwitchPortGroups.</p> <p>The up link port of a master switch and the up link port of the slave switch shall be part of all EthIfSwitchPortGroups that contain EthSwTPorts belonging to the slave switch.</p>		
Template Description		
<p><b>EcuInstance.ethSwitchPortGroupDerivation:</b> Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EcuInstance. If not defined the derivation shall not be done.</p> <p><b>CouplingPort.pncMapping:</b> Reference to the partial networks this CouplingPort participates in.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.ethSwitchPortGroupDerivation, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.pncMapping		
Mapping Rule	Mapping Type	
<p>Derive EthIfSwitchPortGroup from M2 according to the following requirements only if Ecu Instance.ethSwitchPortGroupDerivation is defined and set to TRUE:</p> <ul style="list-style-type: none"> <li>For each EthernetPhysicalChannel that has CouplingPorts connected (CouplingPort has a VlanMembership referring to the EthernetPhysicalChannel) exactly one EthIfSwitchPort Group shall be derived containing all connected CouplingPorts via the EthIfPortRef. Thus a EthSwTPort may be part in several EthIfSwitchPortGroups.</li> <li>For each PNC that is referenced by at least one CouplingPort exactly one EthIfSwitchPort Group shall be derived. The referenced CouplingPort shall be part of the EthIfSwitchPort Group via the EthIfPortRef. Thus a EthSwTPort may be part in several EthIfSwitchPort Groups.</li> <li>If the CouplingPorts have no reference to any PNC or all referenced PNCs have no relation to this EthernetPhysicalChannel then the derived EthIfSwitchPortGroupRef Semantics shall have the value ETHIF_SWITCH_PORT_GROUP_CONTROL, because this EthIfSwitchPortGroup is switched by EthSM.</li> <li>If the CouplingPorts have at least one reference to any PNC that has a relation to this EthernetPhysicalChannel then the derived EthIfSwitchPortGroupRefSemantics shall have the value ETHIF_SWITCH_PORT_GROUP_LINK_INFO, because this EthIfSwitchPort Group is only used for link status accumulation towards EthSM.</li> </ul>	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00057]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfSwitchPortGroup	
BSW Parameter	BSW Type	
EthIfPortRef	ECUC-REFERENCE-DEF	





BSW Description	
Reference to an Ethernet Switch Port.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthIf_00060]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfSwitchPortGroup	
BSW Parameter		BSW Type
EthIfSwitchPortGroupIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter provides a zero-based consecutive index of the Ethernet Switch Port Groups. Upper layer BSW modules and the EthIf itself use this index to identify an Ethernet Switch Port Group.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00058]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfSwitchPortGroup	
BSW Parameter		BSW Type
EthIfSwitchPortGroupRefSemantics		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines how the EthIfSwitchRefOrPortGroupRef referring to a EthIfSwitchPortGroup shall be interpreted.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00059]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet	
BSW Parameter		BSW Type
EthIfTransceiver		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		





This container contains the configuration of EthIfTransceiver.	
The usage of EthIfEthTrcvRef, EthIfCanXLTrcvRef, and EthIfWethTrcvRef is exclusive OR.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00042]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfConfigSet/EthIfTransceiver
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfCanXLTrcvRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to a CAN XL transceiver, which is handled by a specific CAN XL transceiver driver.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00086]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfConfigSet/EthIfTransceiver
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfEthTrcvRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to an Ethernet transceiver, which is handled by a specific Ethernet transceiver driver.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00044]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfConfigSet/EthIfTransceiver
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfQualifiedUnexpectedLinkDownTime	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	







<p>Specifies the time in seconds an unexpected link down is qualified. This parameter is only used for those Ethernet channels where the ECU act as a passive communication slave (referenced EthTrcv set EthTrcvActAsSlavePassiveEnabled = TRUE). The value shall be a multiple integral of EthIf_MainFunctionState.</p>	
<b>Template Description</b>	
<p><b>EcUInstance.wakeUpOverBusSupported:</b> Driver support for wakeup over Bus.</p> <p><b>EthernetCommunicationController.slaveQualifiedUnexpectedLinkDownTime:</b> This attribute specifies time when an unexpected link down is evaluated as link down and indicated to the AUTOSAR communication stack.</p>	
<b>M2 Parameter</b>	
<p>SystemTemplate::Fibex::FibexCore::CoreTopology::EcUInstance.wakeUpOverBusSupported, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationController.slaveQualifiedUnexpectedLinkDownTime</p>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<p>If EcUInstance.wakeUpOverBusSupported is defined and set to TRUE and the aggregated EthernetCommunicationController has set EthernetCommunicationController.slaveActAsPassive Slave to TRUE and the EthernetController aggregate an CouplingPort with physicalLayerType set to "100Base-T1" and "1000Base-T1", respectively, than the corresponding EthIfTransceiver shall set EthIfQualifiedUnexpectedLinkDownTime to EthernetCommunicationController.slaveQualifiedUnexpectedLinkDownTime.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00078]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfConfigSet/EthIfTransceiver
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfTransceiverIdx	ECUC-INTEGGER-PARAM-DEF
<b>BSW Description</b>	
<p>This parameter provides a zero-based consecutive index of the Ethernet transceivers. Upper layer BSW modules and the Ethernet Interface itself use this index to identify an Ethernet tranceiver.</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00043]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfConfigSet/EthIfTransceiver
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfWEthTrcvRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
<p>Reference to an Wireless Ethernet transceiver, which is handled by a specific Wireless Ethernet transceiver driver.</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00074]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfTrcvLinkStateChgConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Specifies link state change callback function		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00018]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet/EthIfTrcvLinkStateChgConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfTrcvLinkStateChgFunction		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
Specifies link state change callback function		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00019]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfTxConfirmationConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Configuration of transmit indication callback functions.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00016]

BSW Module	BSW Context	
EthIf	EthIf/EthIfConfigSet/EthIfTxConfirmationConfig	
BSW Parameter		BSW Type
EthIfTxConfirmationFunction		ECUC-FUNCTION-NAME-DEF
BSW Description		
Specifies transmit indication callback function		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00017]

BSW Module	BSW Context	
EthIf	EthIf	
BSW Parameter		BSW Type
EthIfGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the general configuration parameters of the Ethernet Interface.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00001]

BSW Module	BSW Context	
EthIf	EthIf/EthIfGeneral	
BSW Parameter		BSW Type
EthIfDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthIf_00004]

BSW Module		BSW Context	
EthIf		EthIf/EthIfGeneral	
BSW Parameter		BSW Type	
EthIfEnableCV2xApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables API's for CV2x			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthIf_00091]

BSW Module		BSW Context	
EthIf		EthIf/EthIfGeneral	
BSW Parameter		BSW Type	
EthIfEnableRxInterrupt		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables receive interrupt.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthIf_00005]

BSW Module		BSW Context	
EthIf		EthIf/EthIfGeneral	
BSW Parameter		BSW Type	
EthIfEnableSecurityEventReporting		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthIf_00079]

BSW Module		BSW Context	
EthIf		EthIf/EthIfGeneral	
BSW Parameter		BSW Type	





EthIfEnableSignalQualityApi	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enable/disable the APIs read and clear the signal quality.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00076]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthIfEnableTxInterrupt	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
Enables / Disables the transmit interrupt.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00006]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthIfEnableWEthApi	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
Enables / Disables API's for WEth / WEthTrcv		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00075]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthIfGetAndResetMeasurementDataApi	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		





Enables / Disables the Get and Reset Measurement Data API	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00072]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfGetBaudRate	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables / Disables GetBaudRate API.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00034]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfGetCounterState	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables / Disables GetCounterState API.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00035]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfGeneral
<b>BSW Parameter</b>	<b>BSW Type</b>
EthIfGetCtrlIdxList	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables / Disables GetCtrlIdxList API.	
<b>Template Description</b>	





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00070]

BSW Module	BSW Context	
EthIf	EthIf/EthIfGeneral	
BSW Parameter		BSW Type
EthIfGetVlanIdSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables GetVlanId API.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00071]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfGeneral	
BSW Parameter		BSW Type
EthIfGlobalTimeSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/Disables the Global Time APIs used amongst others by Global Time Synchronization over Ethernet.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00039]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfGeneral	
BSW Parameter		BSW Type
EthIfMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Specifies the period of main function EthIf_MainFunctionRx and EthIf_MainFunctionTx in seconds. Ethernet Interface does not require this information but the BSW scheduler.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthIf_00023]

BSW Module	BSW Context	
EthIf	EthIf/EthIfGeneral	
BSW Parameter		BSW Type
EthIfMainFunctionStatePeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Specifies the period of main function EthIf_MainFunctionState in seconds. Ethernet Interface does not require this information but the BSW scheduler.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00056]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfGeneral	
BSW Parameter		BSW Type
EthIfMaxTrcvsTotal		ECUC-INTEGER-PARAM-DEF
BSW Description		
Limits the total number of transceivers.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthIf_00003]	

BSW Module	BSW Context	
EthIf	EthIf/EthIfGeneral	
BSW Parameter		BSW Type
EthIfPortStartupActiveTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Denote the time delay after the mode "ETH_MODE_ACTIVE" of all EthIfSwitchPorts are requested via EthIf_StartAllPorts. This is only used for ports in EthIfSwitPortGroups which are not referenced by any EthIfController.		
Template Description		







<b>EthernetCluster.couplingPortStartupActiveTime:</b> The attribute specifies the time in second a coupling port is switched on to enable the host ECU (ECU that maintains an Ethernet switch) to listen to the network for potential network management requests.	
<b>EcuInstance.ethSwitchPortGroupDerivation:</b> Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EcuInstance. If not defined the derivation shall not be done.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCluster.couplingPortStartupActiveTime, SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.ethSwitchPortGroupDerivation	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00055]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfPublicCddHeaderFile		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
Defines header files for callback functions which shall be included in case of CDDs. Range of characters is 1.. 32.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00024]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfRxIndicationIterations		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Maximum number of Ethernet frames per Ethernet controller polled from the Ethernet driver within EthIf_MainFunctionRx.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00030]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>





EthIfSecurityEventRefs	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Container for the references to IdsMEvent elements representing the security events that the EthIf module shall report to the IdsM in case the corresponding security related event occurs (and if EthIfEnableSecurityEventReporting is set to "true"). The standardized security events in this container can be extended by vendor-specific security events.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00080]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfGeneral/EthIfSecurityEventRefs
<b>BSW Parameter</b>	<b>BSW Type</b>
ETHIF_SEV_DROP_ETH_MAC_COLLISION	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
An Ethernet datagram was dropped because local MAC was same as source MAC in an incoming frame.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00084]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfGeneral/EthIfSecurityEventRefs
<b>BSW Parameter</b>	<b>BSW Type</b>
ETHIF_SEV_DROP_INV_VLAN	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
An Ethernet datagram was dropped due to an invalid CrtlIdx/VLAN.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00083]

<b>BSW Module</b>	<b>BSW Context</b>
EthIf	EthIf/EthIfGeneral/EthIfSecurityEventRefs
<b>BSW Parameter</b>	<b>BSW Type</b>
ETHIF_SEV_DROP_UNKNOWN_ETHERTYPE	ECUC-REFERENCE-DEF





<b>BSW Description</b>	
An Ethernet datagram was dropped due to an unknown Ethertype.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00081]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral/EthIfSecurityEventRefs	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ETHIF_SEV_DROP_VLAN_DOUBLE_TAG	ECUC-REFERENCE-DEF	
<b>BSW Description</b>		
An Ethernet datagram was dropped due to double VLAN tag.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00082]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthIfSetForwardingModeApi	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
Enables /disables EthIf_SetForwardingMode API.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00062]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthIfSignalQualityCheckPeriod	ECUC-FLOAT-PARAM-DEF	
<b>BSW Description</b>		
Specifies the period in units of seconds in which the signal quality is polled in the context of EthIf_MainfunctionState. The value shall be an integral multiple of EthIfMainFunctionStatePeriod.		





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00077]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfStartAutoNegotiation		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables / Disables StartAutoNegotiation API.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00033]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfSwitchManagementSupport		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables/Disables the Switch management APIs to support a Switch-port specific communication attribute access.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthIf_00064]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfSwitchOffPortTimeDelay		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		





Denote the time delay after the mode "ETH_MODE_DOWN" of a EthIfSwitchPortGroup will be executed. This is only used for EthIfSwtPortGroups which are not referenced by any EthIfController. The time delay shall be greater than the UdpNm timings, because UdpNm shall finish its shutdown handling. (Repeat Message State, Prepare Bus-Sleep state, Bus-Sleep state).	
<b>Template Description</b>	
<b>EthernetCluster.couplingPortSwitchoffDelay:</b> Switch off delay for CouplingPorts in seconds. It denotes the delay of switching off couplingPorts after the request to switch off a couplingPort was issued. (e.g. switch off of Ethernet switch ports).	
<b>EcuInstance.ethSwitchPortGroupDerivation:</b> Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EcuInstance. If not defined the derivation shall not be done.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCluster.couplingPortSwitchoffDelay, SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.ethSwitchPortGroupDerivation	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Derivation shall only be done if EcuInstance.ethSwitchPortGroupDerivation is available and set to TRUE.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00054]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfTrcvLinkStateChgMainReload		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies the frequency of transceiver link state change checks in each period of main function EthIf_MainFunctionTx.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00009]

<b>BSW Module</b>	<b>BSW Context</b>	
EthIf	EthIf/EthIfGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthIfVerifyConfigApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables /disables EthIf_VerifyConfig API.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthIf_00063]

BSW Module		BSW Context	
Ethlf		Ethlf/EthlfGeneral	
BSW Parameter		BSW Type	
EthlfVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables version info API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Ethlf_00007]

BSW Module		BSW Context	
Ethlf		Ethlf/EthlfGeneral	
BSW Parameter		BSW Type	
EthlfVersionInfoApiMacro		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables version info API macro implementation.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Ethlf_00008]

BSW Module		BSW Context	
Ethlf		Ethlf/EthlfGeneral	
BSW Parameter		BSW Type	
EthlfWakeUpSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Configures if wake-up handling is supported or not: TRUE: wake-up handling is supported FALSE: wake-up handling is not supported This configuration parameter also enables particular other the API at Pre-Compile-Time, e.g. Ethlf_CheckWakeup.			
Template Description			
<b>EcuInstance.wakeUpOverBusSupported:</b> Driver support for wakeup over Bus.			
<b>EthernetCommunicationController:</b> Ethernet specific communication port attributes.			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.wakeUpOverBusSupported, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationController			
Mapping Rule			Mapping Type





If EcuInstance.wakeUpOverBusSupported is defined and set to TRUE, the aggregated Ethernet CommunicatonController has set to TRUE and the the aggregated EthernetCommunicaton Controller aggregate an CouplingPort with physicalLayerType set to "100Base-T1" and"1000Base-T1",respectively, or the aggregated CouplingPort is part of a CouplingElement with couplingType set to "switch" and the affected CouplingPorts have a physicalLayerType set to "100Base-T1" and "1000Base-T1", respectively, then EthIfWakeUpSupport shall set to TRUE.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthIf_00040]

### C.6.3 Ethernet Switch Driver Mapping

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwT	EthSwT	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthSwTConfig	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
Configuration of one Ethernet Switch.		
<b>Template Description</b>		
A CouplingElement is used to connect EcuInstances to the VLAN of an EthernetCluster. CouplingElements can reach from a simple hub to a complex managed switch or even devices with functionalities in higher layers. A CouplingElement that is not related to an EcuInstance occurs as a dedicated single device.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingElement		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
For each CouplingElement with couplingType=switch one EthSwTConfig shall be created.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthSwT_-00001]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwT	EthSwT/EthSwTConfig	
<b>BSW Parameter</b>	<b>BSW Type</b>	
EthSwTArITableEntryTimeout	ECUC-FLOAT-PARAM-DEF	
<b>BSW Description</b>		
If present, this parameter specifies the timeout in seconds for removing unused entries from the ARL table of the Ethernet switch. If the parameter is not configured, entries are not removed automatically.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthSwT_-00127]	

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig	
BSW Parameter		BSW Type
EthSwtClockSynchronizationSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>This parameter defines, if a Ethernet switch shall enable clock synchronization with another Ethernet switch to which it is connected via uplink port.</p> <p>If this parameter is set to TRUE the clock synchronization between connected Ethernet switches is activated and the clocks of the Ethernet switches are synchronized. If this parameter is set to FALSE the clock synchronization between connected Ethernet switches is deactivated.</p> <p>This parameter shall only be set to TRUE if the Ethernet switch hardware supports clock synchronization.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00128]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig	
BSW Parameter		BSW Type
EthSwtConfigEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
<p>Maps the configuration of one single Ethernet switch to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the Ethernet switch driver is mapped to.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00130]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig	
BSW Parameter		BSW Type
EthSwtDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type







Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_00016]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig/EthSwTDemEventParameterRefs
BSW Parameter	BSW Type
ETHSWT_E_ACCESS	ECUC-REFERENCE-DEF
BSW Description	
Reference to the DemEventParameter which shall be issued when the error "Ethernet Switch Access Failure" has occurred.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_00006]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig/EthSwTDemEventParameterRefs
BSW Parameter	BSW Type
ETHSWT_E_SYNCPORT2PHY	ECUC-REFERENCE-DEF
BSW Description	
Reference to the DemEventParameter which shall be issued when the error "Ethernet switch port and the referenced Ethernet transceiver are in contradicting modes" has occurred.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_00125]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig
BSW Parameter	BSW Type
EthSwTDropDoubleTagged	ECUC-BOOLEAN-PARAM-DEF
BSW Description	





<p>This parameter defines if a switch shall drop double tagged (Q in Q) frames.                  If this parameter is set to TRUE double tagged frames are dropped at all ports.                  If this parameter is set to FALSE, then double tagged frames are forwarded. If double tagging is used as a feature, this parameter must be set to FALSE.                  This parameter shall only be set to TRUE when Switch-HW supports the filtering of double tagged frames as filtering by SW is NOT possible!</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwT_ - 00073]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwT	EthSwT/EthSwTConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSwTIdx		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies the instance ID of the configured Ethernet Switch.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSwT_ - 00004]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwT	EthSwT/EthSwTConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSwTMacForwardingTable		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Represents a MAC forwarding table.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.macMulticastAddress		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If a MacMulticastGroup is referenced at least once from CouplingPort.macMulticastAddress, then create an instance of EthSwTMacForwardingTable.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSwT_ - 00205]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtMacForwardingTable	
BSW Parameter		BSW Type
EthSwtMacForwardingTablePortRef		ECUC-REFERENCE-DEF
BSW Description		
References the ports the MAC shall be assigned to.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.macMulticastAddress		
Mapping Rule		Mapping Type
If a CouplingPort has a reference to a MacMulticastGroup, then a reference to the EthSwtPort container which was created for that CouplingPort shall be added to the EthSwtMacForwardingTable container.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00207]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtMacForwardingTable	
BSW Parameter		BSW Type
EthSwtPredefinedMacAddress		ECUC-STRING-PARAM-DEF
BSW Description		
Specifies a 48-bit physical addresses (MAC addresses) network byte order, which can be reached via the referenced port and if available via the referenced VLAN . Note that further addresses can be learned during runtime.		
Template Description		
A multicast MAC address (Media Access Control address) is a identifier for a group of hosts in a network.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::MacMulticastGroup.macMulticastAddress		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00206]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig	
BSW Parameter		BSW Type
EthSwtManagementEthCtrlRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Ethernet controller connected to the management port where the management frames will be transmitted/ received.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00110]

BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTConfig	
BSW Parameter		BSW Type	
EthSwTManagementPortRef		ECUC-REFERENCE-DEF	
BSW Description			
Reference to the port where the management CPU is connected to.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00111]

BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTConfig	
BSW Parameter		BSW Type	
EthSwTNvm		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Configuration of one Ethernet Switch Nvm usage in case the module requires non volatile memory in the Ecu to store switch configuration.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00043]

BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTConfig/EthSwTNvm	
BSW Parameter		BSW Type	
EthSwTConfigurationNvmBlockDescriptorRef		ECUC-REFERENCE-DEF	
BSW Description			
Reference to the Nvm block description in the Nvm module configuration to store e.g. the port mirror configurations			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00134]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTNvm	
BSW Parameter		BSW Type
EthSwTTableNvmBlockDescriptorRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Nvm block description in the Nvm module configuration to store e.g. the learned ARL table		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00044]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig	
BSW Parameter		BSW Type
EthSwTPort		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of one Ethernet Switch Port.		
Template Description		
A CouplingPort is used to connect a CouplingElement with an EcuInstance or two CouplingElements with each other via a CouplingPortConnection. Optionally, the CouplingPort may also have a reference to a macMulticastGroup and a defaultVLAN.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort		
Mapping Rule		Mapping Type
For each CouplingElement.couplingPort of a CouplingElement with couplingType=switch one EthSwTPort shall be created.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00005]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort	
BSW Parameter		BSW Type
EthSwTPortEgress		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of one Ethernet Switch Port Egress behavior.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00007]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress	
BSW Parameter	BSW Type	
EthSwtPortEgressLastSchedulerRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the port scheduler which is the last in the egress port structure.		
Template Description		
Defines which CouplingPortScheduler is the last in the egress port structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortDetails.lastEgressScheduler		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00008]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress	
BSW Parameter	BSW Type	
EthSwtPortEgressScheduler	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Represents a Scheduler in the egress port.		
Template Description		
Defines a scheduler for the CouplingPort egress structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00017]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress/EthSwtPortEgressScheduler	
BSW Parameter	BSW Type	
EthSwtPortEgressSchedulerPredecessor	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Defines an ordered list of predecessors for this scheduler.		
Template Description		
Ordered List of predecessor inputs. The first element has the highest priority. The following elements have decreasing priorities.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler.predecessor		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_-00019]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortEgressScheduler/EthSwTPortEgressSchedulerPredecessor	
BSW Parameter		BSW Type
EthSwTPortEgressPredecessorRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
Choice reference to the scheduler predecessor.		
Template Description		
Ordered List of predecessor inputs. The first element has the highest priority. The following elements have decreasing priorities.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler.predecessor		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00010]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortEgressScheduler/EthSwTPortEgressSchedulerPredecessor	
BSW Parameter		BSW Type
EthSwTPortSchedulerPredecessorOrder		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the order of the scheduler predecessors.  This value has to be understood as a relative value, i.e. the value shows only the relative ordering of the elements. The highest value has the highest priority and gaps are allowed (not dense based). The values need to be unique within one EthSwTPortScheduler.		
Template Description		
Ordered List of predecessor inputs. The first element has the highest priority. The following elements have decreasing priorities.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler.predecessor		
Mapping Rule		Mapping Type
Defined by the order of CouplingPortScheduler.predecessor.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00020]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortEgressScheduler	
BSW Parameter		BSW Type





EthSwPortSchedulerAlgorithm	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Defines the scheduler algorithm.	
<b>Template Description</b>	
Defines the schedule algorithm to be used.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortScheduler.portScheduler	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwPortSchedulerAlgorithm]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwPort	EthSwPort/EthSwPortConfig/EthSwPort/EthSwPortEgress/EthSwPortEgressScheduler/EthSwPortSchedulerAlgorithm	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ETHSWPORT_SCHEDULER_DEFICIT_ROUND_ROBIN	ECUC-ENUMERATION-LITERAL-DEF	
<b>BSW Description</b>		
deficit round robin		
<b>Template Description</b>		
Schedule algorithm "deficit round robin"		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCouplingPortSchedulerEnum.deficitRoundRobin		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwPort	EthSwPort/EthSwPortConfig/EthSwPort/EthSwPortEgress/EthSwPortEgressScheduler/EthSwPortSchedulerAlgorithm	
<b>BSW Parameter</b>	<b>BSW Type</b>	
ETHSWPORT_SCHEDULER_STRICT_PRIORITY	ECUC-ENUMERATION-LITERAL-DEF	
<b>BSW Description</b>		
strict priority		
<b>Template Description</b>		
Schedule algorithm "strict priority"		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCouplingPortSchedulerEnum.strictPriority		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid		



BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress/EthSwtPortEgressScheduler/EthSwtPortSchedulerAlgorithm	
BSW Parameter		BSW Type
ETHSWT_SCHEDULER_WEIGHTED_ROUND_ROBIN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
weighted round robin		
Template Description		
Schedule algorithm "weighted round robin"		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCouplingPortSchedulerEnum. <a href="#">weightedRoundRobin</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress	
BSW Parameter		BSW Type
EthSwtPortFifo		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents a Fifo in the egress port.		
Template Description		
Defines a Fifo for the CouplingPort egress structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology:: <a href="#">CouplingPortFifo</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00011]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress/EthSwtPortFifo	
BSW Parameter		BSW Type
EthSwtPortEgressFifoldx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the instance ID of the fifo of the configured Ethernet switch egress port		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00132]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress/EthSwtPortFifo	
BSW Parameter	BSW Type	
EthSwtPortFifoMinimumLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
FIFO minimum length in Byte. This assignment is used to configure a guaranteed size of a configured FIFO.		
Template Description		
FIFO minimum length in Byte. An actual configuration/hardware may use a bigger value.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortFifo.minimumFifoLength		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00098]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress/EthSwtPortFifo	
BSW Parameter	BSW Type	
EthSwtPortFifoTrafficClassAssignment	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines which traffic classes are assigned to this Fifo.		
Template Description		
Defines a set of Traffic Classes which shall be handled by this Fifo. range: 0-7		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortFifo.assignedTrafficClass		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00012]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress	
BSW Parameter	BSW Type	
EthSwtPortQueue	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Represents a Queue at the egress port.		
Template Description		
Defines a Fifo for the CouplingPort egress structure.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortFifo		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_-00182]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue
BSW Parameter	BSW Type
EthSwTPortEgressQueueIdx	ECUC-INTEGER-PARAM-DEF
BSW Description	
Specifies the instance ID of the queue of the configured Ethernet switch egress port.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_-00183]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue
BSW Parameter	BSW Type
EthSwTPortEgressQueueTransmissionSelection	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Represents the transmission selection of an egress port queue.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_-00186]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue/EthSwTPortEgressQueueTransmissionSelection
BSW Parameter	BSW Type
EthSwTPortEgressQueueTransmissionSelectionAlgorithm	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
Represents the transmission selection algorithm of an egress port queue.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type





Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_ - 00191]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue/EthSwTPortEgressQueueTransmissionSelection	
BSW Parameter		BSW Type
EthSwTPortEgressQueueTransmissionSelectionCBSConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Represents the configuration of a credit based shaper transmission selection algorithm of an egress port queue. This configuration is used if the EthSwTPortEgressQueueTransmissionSelectionAlgorithm is set to ETHSWT_TRANSMISSION_SELECTION_ALGORITHM_CBS.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_ - 00187]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue/EthSwTPortEgressQueueTransmissionSelection/EthSwTPortEgressQueueTransmissionSelectionCBSConfig	
BSW Parameter		BSW Type
EthSwTPortEgressQueueCreditBasedShaperIdleSlope		ECUC-INTEGGER-PARAM-DEF
BSW Description		
Defines the increase of credit in bits per second for the AVB shaper. Note: this parameter maps to IEEE802.1Q parameter "ieee8021FqtssAdminIdleSlopeMs" and "ieee8021FqtssAdminIdleSlopeLs".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_ - 00188]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue/EthSwTPortEgressQueueTransmissionSelection/EthSwTPortEgressQueueTransmissionSelectionCBSConfig	
BSW Parameter		BSW Type
EthSwTPortEgressQueueCreditBasedShaperLowerBoundary		ECUC-INTEGGER-PARAM-DEF
BSW Description		





Defines the lower credit boundary for the Credit Based Shaper.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwT_ - 00190]

<b>BSW Module</b>	<b>BSW Context</b>
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue/EthSwTPortEgressQueueTransmissionSelection/EthSwTPortEgressQueueTransmissionSelectionCBSConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
EthSwTPortEgressQueueCreditBasedShaperUpperBoundary	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Defines the upper credit boundary for the Credit Based Shaper.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwT_ - 00189]

<b>BSW Module</b>	<b>BSW Context</b>
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue
<b>BSW Parameter</b>	<b>BSW Type</b>
EthSwTPortQueueMinimumLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Queue minimum length in Byte. This assignment is used to configure a guaranteed size of a configured Queue.	
<b>Template Description</b>	
FIFO minimum length in Byte. An actual configuration/hardware may use a bigger value.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortFifo.minimumFifoLength	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwT_ - 00184]

<b>BSW Module</b>	<b>BSW Context</b>
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortQueue
<b>BSW Parameter</b>	<b>BSW Type</b>





EthSwtPortQueueTrafficClassAssignment	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Defines which traffic class is mapped to this queue.	
<b>Template Description</b>	
Defines a set of Traffic Classes which shall be handled by this Fifo. range: 0-7	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortFifo.assignedTrafficClass	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwt_-00185]

<b>BSW Module</b>	<b>BSW Context</b>
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress
<b>BSW Parameter</b>	<b>BSW Type</b>
EthSwtPortShaper	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Represents a Shaper in the egress port.	
<b>Template Description</b>	
Defines a shaper for the CouplingPort egress structure.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortShaper	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwt_-00021]

<b>BSW Module</b>	<b>BSW Context</b>
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortEgress/EthSwtPortShaper
<b>BSW Parameter</b>	<b>BSW Type</b>
EthSwtPortEgressPredecessorFifoRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the fifo which is the predecessor for this shaper.	
<b>Template Description</b>	
Defines the CouplingPortFifo which provides the input to this shaper.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortShaper.predecessorFifo	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwt_-00009]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortEgress/EthSwTPortShaper	
BSW Parameter		BSW Type
EthSwTPortShaperIdleSlope		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the increase of credit in bits per second for the AVB shaper.		
Template Description		
Defines the increase of credit in bits per second for the AVB shaper.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortShaper.idleSlope		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_ - 00042]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort	
BSW Parameter		BSW Type
EthSwTPortIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the instance ID of the configured Ethernet Switch Port.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_ - 00013]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort	
BSW Parameter		BSW Type
EthSwTPortIngress		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of one Ethernet Switch Port ingress behavior.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_ - 00014]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress	
BSW Parameter	BSW Type	
EthSwtPortIngressDefaultPriority	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Default priority for ingress.		
Template Description		
Standard output-priority outgoing Frames will be tagged with. Defines the priority that received frames are assigned together with the VLAN Id (defaultVlan). The values from 0 (best effort) to 7 (highest) are allowed. In case modifyVlan and an already tagged received frame, the actual priority of the received frame is not modified.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership.defaultPriority		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00096]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress	
BSW Parameter	BSW Type	
EthSwtPortIngressDefaultVlan	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Default VLAN for ingress.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.defaultVlan		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00095]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress	
BSW Parameter	BSW Type	
EthSwtPortIngressDropUntagged	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Defines the ingress behavior for untagged frames.		
Template Description		
Defines the handling of frames at the ingress port.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.receiveActivity		
Mapping Rule		Mapping Type







<p>If CouplingPort.receiveActivity is set to "dropUntagged" then EthSwPortIngressDropUntagged shall be set to true.</p> <p>If CouplingPort.receiveActivity is set to something different than "dropUntagged" then EthSwPortIngressDropUntagged shall be set to false.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwPortIngressDropUntagged_00097]

BSW Module	BSW Context
EthSwPortIngressScheduler	EthSwPort/EthSwPortConfig/EthSwPortIngress
BSW Parameter	BSW Type
EthSwPortIngressScheduler	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Represents a Scheduler configuration at an ingress port.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwPortIngressScheduler_00139]

BSW Module	BSW Context
EthSwPortIngressScheduler	EthSwPort/EthSwPortConfig/EthSwPortIngress/EthSwPortIngressScheduler
BSW Parameter	BSW Type
EthSwPortATSSchedulerGroup	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Represents an Asynchronous Traffic Scheduler Group configuration.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwPortATSSchedulerGroup_00194]

BSW Module	BSW Context
EthSwPortIngressScheduler	EthSwPort/EthSwPortConfig/EthSwPortIngress/EthSwPortIngressScheduler/EthSwPortATSSchedulerGroup
BSW Parameter	BSW Type
EthSwPortATSSchedulerGroupMaximumResidenceTime	ECUC-FLOAT-PARAM-DEF
BSW Description	
The parameter defines the maximum duration limit for which frames can reside in a bridge in seconds.	
Template Description	





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwT_-00195]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortIngress	
BSW Parameter		BSW Type
EthSwTPortIngressVlanModification		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>If this parameter is defined all messages which arrive at this ingress port will be tagged with this VLAN Id. This tagging happen also if the arriving message already has a VLAN Id, it will be overwritten by the defined one.</p> <p>If this parameter is not defined no changes to the VLAN Id shall happen at this ingress port.</p>		
Template Description		
<p>All incoming messages at this CouplingPort shall be tagged with this VLAN Id. This tagging is performed regardless whether the message already has a VLAN tag or is untagged, an existing VLAN tag will be overwritten.</p> <p>This feature is XOR with CoupligPort.defaultVlan.</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.vlanModifier		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthSwT_-00015]	

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortIngress	
BSW Parameter		BSW Type
EthSwTPortOutboundVlanPriorityAssignment		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>Defines a priority mapping from a regenerated VLAN priority (EthSwTPriorityRegeneratedIngressVlanPriority) to an outbound VLAN priority (EthSwTPriorityOutboundVlanPriority).</p> <p>The EthSwTPortOutboundVlanPriorityAssignment is optional. The outbound priority mapping shall only be performed if EthSwTPortOutboundVlanPriorityAssignment is configured.</p> <p>In case an EthSwTPortOutboundVlanPriorityAssignment is defined it shall have 8 mappings, one for each priority.</p>		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthSwT_-00138]	

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortOutboundVlanPriorityAssignment	
BSW Parameter		BSW Type
EthSwtPriorityOutboundVlanPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Message priority the outgoing message will be tagged with. Note: This parameter maps IEEE802.1Q parameter "ieee8021BridgePortOutboundAccessPriority".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00193]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortOutboundVlanPriorityAssignment	
BSW Parameter		BSW Type
EthSwtPriorityRegeneratedIngressVlanPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Message priority of the outgoing message. Note: this parameter maps to IEEE802.1Q parameter "ieee8021BridgePortOutboundAccessPriorityEntry".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00192]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress	
BSW Parameter		BSW Type
EthSwtPortPolicer		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Definition of Rate Policing parameters.		
Template Description		
Defines a rate policy on a CouplingPort.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortRatePolicy		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00074]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortPolicer	
BSW Parameter		BSW Type
EthSwtPortRatePolicedByteCount		ECUC-INTEGER-PARAM-DEF
BSW Description		
Amount of Byte Counts (excluding Header information) which can be received in a configured EthSwtPortRatePolicedTime Interval.		
Template Description		
Amount of data in bytes (excluding header information) that can be received to define the rate policy.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortRatePolicy.dataLength		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00075]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortPolicer	
BSW Parameter		BSW Type
EthSwtPortRatePolicedPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the priority which this rate policy shall be limited on. If no priority is given this rate policy is not considering priority.		
Template Description		
Defines the priority which this rate policy shall be limited on. If no priority is given this rate policy is not considering priority.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortRatePolicy.priority		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00077]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortPolicer	
BSW Parameter		BSW Type
EthSwtPortRatePolicedTimeInterval		ECUC-FLOAT-PARAM-DEF
BSW Description		
Time interval in seconds where a configured EthSwtPortRatePolicedByteCount can be received without a rate limitation.		
Template Description		
Time interval used to define the base of the rate policy.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortRatePolicy.timeInterval		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwt_00076]

BSW Module	BSW Context
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortPolicer
BSW Parameter	BSW Type
EthSwtPortRateViolationAction	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
Action to be taken when the rate policy criteria defined for this EthSwtPortPolicer are met.	
Template Description	
Defines the action to be performed when this rate policy is violated.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortRatePolicy.policyAction	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwt_00078]

BSW Module	BSW Context
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortPolicer/EthSwtPortRateViolationAction
BSW Parameter	BSW Type
BLOCK_SOURCE	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
All incoming traffic from the violating Source based on the MAC-Address is blocked.	
Template Description	
If the rate policy is violated the CouplingPort this CouplingPortRatePolicy is defined on shall block all frames from the MAC-Address the violation was caused by.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortRatePolicyActionEnum.blockSource	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortPolicer/EthSwtPortRateViolationAction
BSW Parameter	BSW Type
DROP_FRAME	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The received frame which led to the violation of the rate policy is dropped.	
Template Description	





If the rate policy is violated the frame shall be dropped.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortRatePolicyActionEnum. <a href="#">dropFrame</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPortPolicer	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSwtRateVlanMembershipRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
References the Vlans this rate policy shall apply to. If no EthSwtRateVlanMembershipRef is configured the rate policing applies only on the configured EthSwtPortRatePoliced Priority.		
<b>Template Description</b>		
Defines the VLANs this rate policy shall be limited on. If no VLAN is given this rate policy is not considering VLAN tags.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortRatePolicy. <a href="#">vLan</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthSwt_-00081]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSwtPortTrafficClassAssignment		ECUC-INTEGGER-PARAM-DEF
<b>BSW Description</b>		
If this parameter is defined all arriving messages at this ingress port shall be assigned this traffic class. If this parameter is not defined no general port based traffic class assignment is done.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortDetails. <a href="#">ethernetTrafficClassAssignment</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthSwt_-00023]	

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress	
BSW Parameter		BSW Type
EthSwtPriorityRegeneration		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>Defines a priority regeneration where the EthSwtPriorityRegenerationIngressPriority is replaced by EthSwtPriorityRegenerationRegeneratedPriority.</p> <p>The EthSwtPriorityRegeneration is optional in case no priority regeneration shall be performed.</p> <p>In case a EthSwtPriorityRegeneration is defined it shall have 8 mappings, one for each priority.</p>		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortDetails.ethernetPriorityRegeneration		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00057]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPriorityRegeneration	
BSW Parameter		BSW Type
EthSwtPriorityRegenerationIngressPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Message priority of the incoming message.		
Template Description		
<p>Message priority of the incoming message.</p> <p>range: 0-7</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPriorityRegeneration.ingressPriority		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00058]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort/EthSwtPortIngress/EthSwtPriorityRegeneration	
BSW Parameter		BSW Type
EthSwtPriorityRegenerationRegeneratedPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Message priority the incoming message will be tagged with.		
Template Description		
<p>Regenerated message priority.</p> <p>range: 0-7</p>		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPriorityRegeneration. <a href="#">regeneratedPriority</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwT_ - 00059]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortIngress	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSwTPriorityTrafficClassAssignment		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Defines a priority based traffic class assignment. All messages with a specific priority (EthSwTPriorityTrafficClassAssignment Priority) arriving at this ingress port or, if enabled regenerated priorities (EthSwTPriorityRegeneration), shall be assigned to a traffic class (EthSwTPriorityTrafficClassAssignmentTrafficClass).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortDetails. <a href="#">ethernetTrafficClassAssignment</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthSwT_ - 00027]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortIngress/EthSwTPriorityTrafficClassAssignment	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSwTPriorityTrafficClassAssignmentPriority		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Message priority.		
<b>Template Description</b>		
Defines a priority which is mapped onto a Traffic Class.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortTrafficClassAssignment. <a href="#">priority</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthSwT_ - 00028]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwT	EthSwT/EthSwTConfig/EthSwTPort/EthSwTPortIngress/EthSwTPriorityTrafficClassAssignment	
<b>BSW Parameter</b>		<b>BSW Type</b>







EthSwtPriorityTrafficClassAssignmentTrafficClass		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Traffic Class value.		
<b>Template Description</b>		
Defines the Traffic Class which is assigned. range: 0-7		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPortTrafficClassAssignment.trafficClass		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSwt_-00029]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSwtPortMacLayerSpeed		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defines the baud rate of the MAC layer.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSwt_-00114]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSwtPortMacLayerSubType		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defines the MAC layer subtype of this EthSwtPort.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSwt_-00113]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort	
BSW Parameter	BSW Type	
EthSwtPortMacLayerType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines the MAC layer type of this EthSwtPort.		
Template Description		
Specifies the mac layer type of the CouplingPort.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort. <a href="#">macLayerType</a>		
Mapping Rule		Mapping Type
ETHSWT_PORT_MAC_LAYER_TYPE_XMII => if macLayerType = xMII ETHSWT_PORT_MAC_LAYER_TYPE_XGMII => if macLayerType = xGMII ETHSWT_PORT_MAC_LAYER_TYPE_XXGMII => if macLayerType = xXGMII		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00072]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort	
BSW Parameter	BSW Type	
EthSwtPortPhysicalLayerType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines the physical layer type of this EthSwtPort.		
Template Description		
Specifies the physical layer type of the CouplingPort.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort. <a href="#">physicalLayerType</a>		
Mapping Rule		Mapping Type
ETHSWT_PORT_100BASE_TX => if physicalLayerType = 100BASE-TX ETHSWT_PORT_1000BASE_T => if physicalLayerType = 1000BASE-T ETHSWT_PORT_100BASE_T1 => if physicalLayerType = 100BASE-T1 ETHSWT_PORT_1000BASE_T1 => if physicalLayerType = 1000BASE-T1		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00054]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtPort	
BSW Parameter	BSW Type	
EthSwtPortRole	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Set a special role of the Ethernet switch port. It is either a host port or a up link port. If not configured it is a standard port.		
Template Description		
Defines the role this CouplingPort takes in the context of the CouplingElement.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort. <a href="#">couplingPortRole</a>		





Mapping Rule	Mapping Type
hostPort maps to ETHSWT_HOST_PORT. upLinkPort maps to ETHSWT_UP_LINK_PORT. standardPort maps to non configured EthSwtPortRole.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwt_ - 00101]

BSW Module	BSW Context
EthSwt	EthSwt/EthSwtConfig/EthSwtPort
BSW Parameter	BSW Type
EthSwtPortTimeStampSupport	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Enables/Disables the Switch-port specific timestamping.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwt_ - 00112]

BSW Module	BSW Context
EthSwt	EthSwt/EthSwtConfig/EthSwtPort
BSW Parameter	BSW Type
EthSwtPortTrcvRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to the Ethernet transceiver driver this EthSwtPort is connected with.	
Template Description	
Specifies the physical layer type of the CouplingPort.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.physicalLayerType	
Mapping Rule	Mapping Type
The reference shall be set if the CouplingPort for which the EthSwtPort is created has a defined physicalLayerType. The value of the parameter EthTrcvPhysLayerType that is defined within the referenced EthTrcv Config container shall be derived from CouplingPort.physicalLayerType.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwt_ - 00041]

BSW Module	BSW Context
EthSwt	EthSwt/EthSwtConfig
BSW Parameter	BSW Type





EthSwSpi	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Configuration of one Ethernet Switch SPI access (if SPI is used).	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwSpi_00030]

<b>BSW Module</b>	<b>BSW Context</b>
EthSwSpi	EthSwSpi/EthSwSpiConfig/EthSwSpi
<b>BSW Parameter</b>	<b>BSW Type</b>
EthSwSpiSequence	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Container gives EthSwSpi driver information about one SPI sequence. One SPI sequence used by EthSwSpi driver is in exclusive use for it. No other driver is allowed to access this sequence. EthSwSpi driver may use one sequence to access n EthSwSpi hardware chips of the same type or n sequences are used to access one single EthSwSpi hardware chip. If a EthSwSpi hardware has no SPI interface, there is no instance of this container.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwSpi_00034]

<b>BSW Module</b>	<b>BSW Context</b>
EthSwSpi	EthSwSpi/EthSwSpiConfig/EthSwSpi/EthSwSpiSequence
<b>BSW Parameter</b>	<b>BSW Type</b>
EthSwSpiAccessSynchronous	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
This parameter is used to define whether the access to the Spi sequence is synchronous or asynchronous. true: SPI access is synchronous. false: SPI access is asynchronous.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwSpi_00036]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTSpi/EthSwTSpiSequence	
BSW Parameter		BSW Type
EthSwTSpiSequenceName		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Spi sequence configuration container.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00035]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig	
BSW Parameter		BSW Type
EthSwTStreamIdentification		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a stream identification.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00140]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTStreamIdentification	
BSW Parameter		BSW Type
EthSwTSPFP		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of Per-stream Filtering and Policing (PSFP).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00154]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP	
BSW Parameter		BSW Type
EthSwtFlowMetering		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a flow metering.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00157]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP/EthSwtFlowMetering	
BSW Parameter		BSW Type
EthSwtFlowMeterCF		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Coupling Flag that defines if unused "green" tokens in the first bucket are transferred to the second bucket as "yellow" tokens. Note: this parameter maps to IEEE802.1Q parameter "ieee8021PSFPFlowMeterCF".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00162]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP/EthSwtFlowMetering	
BSW Parameter		BSW Type
EthSwtFlowMeteringCBS		ECUC-INTEGER-PARAM-DEF
BSW Description		
Committed Burst Size (accepted burst size in green token bucket). Note: this parameter maps to IEEE802.1Q parameter "ieee8021PSFPFlowMeterCBS".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00159]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP/EthSwtFlowMetering	
BSW Parameter		BSW Type
EthSwtFlowMeteringCIR		ECUC-INTEGER-PARAM-DEF
BSW Description		
Committed Information Rate (accepted rate in green token bucket) in bits per second. Note: this parameter maps to IEEE802.1Q parameter "ieee8021PSFPFlowMeterCIR".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00158]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP/EthSwtFlowMetering	
BSW Parameter		BSW Type
EthSwtFlowMeteringColorMode		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Parameter that defines if color-aware or color-blind mode is used. The mode indicates if a color that might be assigned at ingress is used to chose the bucket from which to take tokens; only green and yellow can be assigned; basically, in color-blind mode, all frames are treated like green frames. Note: this parameter maps to IEEE802.1Q parameter "ieee8021PSFPFlowMeterCM".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00163]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP/EthSwtFlowMetering	
BSW Parameter		BSW Type
EthSwtFlowMeteringEBS		ECUC-INTEGER-PARAM-DEF
BSW Description		
Excess burst size (accepted burst size in yellow token bucket). Note: this parameter maps to IEEE802.1Q parameter "ieee8021PSFPFlowMeterEBS".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00161]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP/EthSwtFlowMetering	
BSW Parameter		BSW Type
EthSwtFlowMeteringEIR		ECUC-INTEGER-PARAM-DEF
BSW Description		
Excess Information Rate (accepted rate in yellow token bucket) in bits per second. Note: this parameter maps to IEEE802.1Q parameter "ieee8021PSFPFlowMeterEIR".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00160]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP	
BSW Parameter		BSW Type
EthSwtStreamGate		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a stream gate.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00155]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtPSFP/EthSwtStreamGate	
BSW Parameter		BSW Type
EthSwtStreamGateIPV		ECUC-INTEGER-PARAM-DEF
BSW Description		
Internal Priority Value (IPV), a priority value that determines the assigned traffic class. Note: Only the least 3 significant bits shall be configured. The remaining bits shall be ignored.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00156]



BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTStreamIdentification	
BSW Parameter		BSW Type
EthSwTPortATSScheduler		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of an Asynchronous Traffic Scheduler configuration in the scope of the PSFP.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00151]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTStreamIdentification/EthSwTPortATSScheduler	
BSW Parameter		BSW Type
EthSwTPortATSCommittedBurstSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum token capacity of the token bucket.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00197]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTStreamIdentification/EthSwTPortATSScheduler	
BSW Parameter		BSW Type
EthSwTPortATSCommittedInformationRate		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the rate at which the token bucket is refilled with tokens.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00198]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTStreamIdentification/EthSwTPortATSScheduler	
BSW Parameter		BSW Type
EthSwTPortATSSchedulerGroupRef		ECUC-REFERENCE-DEF
BSW Description		
Defines to which ATS scheduler group this ATS scheduler belongs to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00196]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTStreamIdentification	
BSW Parameter		BSW Type
EthSwTPortEgressStreamIdentificationEgressPortRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the egress ports this stream identification applies to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00153]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTConfig/EthSwTStreamIdentification	
BSW Parameter		BSW Type
EthSwTStreamFilterAction		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a stream filter action.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00143]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterAction	
BSW Parameter		BSW Type
EthSwtStreamFilterActionBlockSource		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables Blocking all frames from the MAC address.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00145]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterAction	
BSW Parameter		BSW Type
EthSwtStreamFilterActionDestinationPortModification		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Defines the action to modify the destination port(s) determined by the frame forwarding process for an particular Ethernet frame. Either the egress destination of an Ethernet frame is extended or overwritten.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00148]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterAction/EthSwtStreamFilterActionDestinationPortModification	
BSW Parameter		BSW Type
EthSwtStreamFilterActionDestinationPortModificationEgressPortRef		ECUC-REFERENCE-DEF
BSW Description		
Defines a set of destination ports (egress ports) used for the modification of the egress destination of an Ethernet frame.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00149]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterAction/EthSwtStreamFilterActionDestinationPortModification	
BSW Parameter		BSW Type
EthSwtStreamFilterActionDestinationPortModificationType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the method to modify the egress destination. Either overwrite or extend the egress destination.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00150]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterAction	
BSW Parameter		BSW Type
EthSwtStreamFilterActionDropFrame		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables Drop Frame action.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00144]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterAction	
BSW Parameter		BSW Type
EthSwtStreamFilterActionVlanModification		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Defines the action to modify the VLAN-ID within a VLAN tag of an Ethernet frame.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00146]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterAction/EthSwtStreamFilterActionVlanModification	
BSW Parameter		BSW Type
EthSwtStreamFilterActionVlanModificationVlanId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the VLAN-ID to modify the existing VLAN-ID within the VLAN tag of an Ethernet frame.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00147]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification	
BSW Parameter		BSW Type
EthSwtStreamFilterRule		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a filter rule.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00141]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterEtherType		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter Ether Type.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00170]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter	BSW Type	
EthSwtStreamFilterIEEE1722StreamId	ECUC-STRING-PARAM-DEF	
BSW Description		
Definition of the filter IEEE1722 Stream Id. Specifies a 64 bit Stream Id.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00181]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter	BSW Type	
EthSwtStreamFilterIPDestAddress	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Configuration of one IP destination filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00172]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterIPDestAddress	
BSW Parameter	BSW Type	
EthSwtStreamFilterIPAddressKey	ECUC-STRING-PARAM-DEF	
BSW Description		
IP address key pattern.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00173]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilter IPDestAddress	
BSW Parameter		BSW Type
EthSwtStreamFilterIPAddressMask		ECUC-STRING-PARAM-DEF
BSW Description		
IP address mask pattern.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00174]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterIPSrcAddress		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of one IP source filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00171]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilter IPSrcAddress	
BSW Parameter		BSW Type
EthSwtStreamFilterIPAddressKey		ECUC-STRING-PARAM-DEF
BSW Description		
IP address key pattern.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00173]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilter IPSrcAddress	
BSW Parameter		BSW Type
EthSwtStreamFilterIPAddressMask		ECUC-STRING-PARAM-DEF
BSW Description		
IP address mask pattern.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00174]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterMACDestAddress		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of one MAC destination filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00165]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilter MACDestAddress	
BSW Parameter		BSW Type
EthSwtStreamFilterMACAddressKey		ECUC-STRING-PARAM-DEF
BSW Description		
Specifies the 48-bit physical address (MAC address) key value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00166]



BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilter MACDestAddress	
BSW Parameter		BSW Type
EthSwtStreamFilterMACAddressMask		ECUC-STRING-PARAM-DEF
BSW Description		
Specifies the 48-bit physical address (MAC address) mask value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00167]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterMACSrcAddress		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of one MAC source filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00164]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilter MACSrcAddress	
BSW Parameter		BSW Type
EthSwtStreamFilterMACAddressKey		ECUC-STRING-PARAM-DEF
BSW Description		
Specifies the 48-bit physical address (MAC address) key value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_- 00166]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterMACSrcAddress	
BSW Parameter		BSW Type
EthSwtStreamFilterMACAddressMask		ECUC-STRING-PARAM-DEF
BSW Description		
Specifies the 48-bit physical address (MAC address) mask value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00167]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterTcpDestPort		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a TCP destination port filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00178]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterTcpDestPort	
BSW Parameter		BSW Type
EthSwtStreamFilterPortLowerValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter port lower value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00179]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterTcpDestPort	
BSW Parameter		BSW Type
EthSwtStreamFilterPortUpperValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter port upper value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00180]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterTcpSrcPort		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a TCP source port filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00176]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterTcpSrcPort	
BSW Parameter		BSW Type
EthSwtStreamFilterPortLowerValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter port lower value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00179]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterTcpSrcPort	
BSW Parameter		BSW Type
EthSwtStreamFilterPortUpperValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter port upper value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00180]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterUdpDestPort		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a UDP destination port filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00177]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterUdpDestPort	
BSW Parameter		BSW Type
EthSwtStreamFilterPortLowerValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter port lower value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00179]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterUdpDestPort	
BSW Parameter		BSW Type
EthSwtStreamFilterPortUpperValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter port upper value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00180]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterUdpSrcPort		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a UDP source port filter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00175]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterUdpSrcPort	
BSW Parameter		BSW Type
EthSwtStreamFilterPortLowerValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter port lower value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00179]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule/EthSwtStreamFilterUdpSrcPort	
BSW Parameter		BSW Type
EthSwtStreamFilterPortUpperValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter port upper value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00180]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterVlanId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter VLAN ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00168]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification/EthSwtStreamFilterRule	
BSW Parameter		BSW Type
EthSwtStreamFilterVlanPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Definition of the filter VLAN Priority.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_ - 00169]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification	
BSW Parameter		BSW Type
EthSwtStreamIdentificationIngressPortRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the ingress ports this stream identification applies to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00152]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtStreamIdentification	
BSW Parameter		BSW Type
EthSwtStreamIdentificationPosition		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the position as unique ID within an ordered list of instances of EthSwtStreamIdentifications. The ordered list shall start with 0 and continue as linear list with no gaps.		
Note: The list is processed in ascending order. The instance of EthSwtStreamIdentification with position 0 is processed first.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00142]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig	
BSW Parameter		BSW Type
EthSwtVlanMembership		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Determines the membership of this Ethernet switch and the referenced ports to the virtual network, i.e. frames with this VID can be received and transmitted via the referenced ports.		
Template Description		
Static logical channel or VLAN binding to a switch-port.		
The reference to an EthernetPhysicalChannel without a VLAN defined represents the handling of untagged frames.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership		
Mapping Rule		Mapping Type
For each CouplingElement.vlanMembership of a CouplingElement with couplingType=switch one EthSwtVlanMembership shall be created, merged based on VlanConfig.vlanIdentifier.		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_-00199]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig/EthSwTVlanMembership
BSW Parameter	BSW Type
EthSwTVlanMembershipId	ECUC-INTEGER-PARAM-DEF
BSW Description	
Determines the VID of the virtual network this port belongs to.	
Template Description	
A VLAN is identified by this attribute according to IEEE 802.1Q. The allowed values range is from 0..4095.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanConfig.vlanIdentifier	
Mapping Rule	Mapping Type
if a EthernetPhysicalChannel.vlan.vlanIdentifier is defined the value of vlanIdentifier shall be used for EthSwTPortVlanMembershipId. If no EthernetPhysicalChannel.vlan or EthernetPhysicalChannel.vlan.vlanIdentifier is defined then EthSwTPortVlanMembershipId shall be set to 0.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_-00202]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig/EthSwTVlanMembership
BSW Parameter	BSW Type
EthSwTVlanMembershipPortRefEntry	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Determines the VLAN membership of one referenced ports to the virtual network and the according forwarding type (NOT_SENT, SENT_UNTAGGED, SENT_TAGGED).	
Template Description	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership.vlan	
Mapping Rule	Mapping Type
If a CouplingPort has a CouplingPort.vlanMembership defined, then the EthSwTVlanMembership created for that specific VlanConfig.vlanIdentifier shall have an EthSwTVlanMembershipPortRefEntry container for that CouplingPort.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthSwT_-00203]

BSW Module	BSW Context
EthSwT	EthSwT/EthSwTConfig/EthSwTVlanMembership/EthSwTVlanMembershipPortRefEntry
BSW Parameter	BSW Type
EthSwTVlanForwardingType	ECUC-ENUMERATION-PARAM-DEF
BSW Description	







Defines how the message with a specific VLAN Id at the referenced port shall be handled.	
<b>Template Description</b>	
Attribute denotes whether a VLAN tagged ethernet frame will be <ol style="list-style-type: none"> <li>1. sent with its VLAN tag (sentTagged)</li> <li>2. sent without a VLAN tag (sentUntagged)</li> <li>3. will be dropped at this port (notSent or VLAN not member of this list)</li> </ol>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership.sendActivity	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSwT_00026]

<b>BSW Module</b>	<b>BSW Context</b>
EthSwT	EthSwT/EthSwTConfig/EthSwTVlanMembership/EthSwTVlanMembershipPortRefEntry/EthSwTVlanForwardingType
<b>BSW Parameter</b>	<b>BSW Type</b>
ETHSWT_NOT_SENT	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
The message with the specific VLAN Id shall not be sent at the referenced port.	
<b>Template Description</b>	
will not be sent	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetSwitchVlanEgressTaggingEnum.notSent	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
EthSwT	EthSwT/EthSwTConfig/EthSwTVlanMembership/EthSwTVlanMembershipPortRefEntry/EthSwTVlanForwardingType
<b>BSW Parameter</b>	<b>BSW Type</b>
ETHSWT_SENT_TAGGED	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
The message with the specific VLAN Id shall be sent with its VLAN Id at the referenced port.	
<b>Template Description</b>	
sent with its VLAN tag	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetSwitchVlanEgressTaggingEnum.sentTagged	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtVlanMembership/EthSwtVlanMembershipPortRefEntry/EthSwtVlanForwardingType	
BSW Parameter		BSW Type
ETHSWT_SENT_UNTAGGED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The message with the specific VLAN Id shall be sent untagged at the referenced port.		
Template Description		
sent without a VLAN tag		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetSwitchVlanEgressTaggingEnum. <a href="#">sentUntagged</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtConfig/EthSwtVlanMembership/EthSwtVlanMembershipPortRefEntry	
BSW Parameter		BSW Type
EthSwtVlanMembershipPortRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to one port the VLAN shall be assigned to.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership. <a href="#">vlan</a>		
Mapping Rule		Mapping Type
If a CouplingPort has a CouplingPort.vlanMembership defined, then the EthSwtVlanMembershipPortRefEntry created for that specific VlanConfig.vlanIdentifier shall have an EthSwtVlanMembershipPortRef reference to the EthSwtPort container which was created for that CouplingPort.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00204]

BSW Module	BSW Context	
EthSwt	EthSwt	
BSW Parameter		BSW Type
EthSwtGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
General configuration of Ethernet Switch Driver module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00003]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtCheckWakeupApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthSwt_CheckWakeup API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00136]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtDeletePortMirrorConfigurationApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthSwt_DeletePortMirrorConfiguration API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00133]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00002]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtEcucPartitionRef		ECUC-REFERENCE-DEF	
BSW Description			
Maps the Ethernet switch driver to zero or multiple ECUC partitions to make the modules API available in this partition. The Ethernet switch driver will operate as an independent instance in each of the partitions.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00129]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtEnableCableDiagnosticApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enable/disable the APIs for cable diagnostic: EthSwt_RunPortCableDiagnostic, EthSwt_GetPortCableDiagnosticsResult			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00135]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtEnableVlanApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_EnableVLAN API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00055]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type
EthSwTGetArlTableApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthSwT_GetArlTable API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00052]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type
EthSwTGetBaudRateApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthSwT_GetBaudRate API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00121]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type
EthSwTGetCfgDataRawDone		ECUC-FUNCTION-NAME-DEF
BSW Description		
Defines the function name for <GetCfgDataRawDone>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00124]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtGetCfgRaw		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Disable /Enable support of reading raw data from switch memory			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00123]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtGetCounterValuesApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_GetCounterValues API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00053]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtGetDuplexModeApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_GetDuplexMode API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00122]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtGetLinkStateApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthSwt_GetLinkState API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00120]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtGetMacLearningModeApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthSwt_GetMacLearningMode API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00061]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtGetMaxFIFOBufferFillLevelApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthSwt_GetMaxFIFOBufferFillLevel API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00131]

BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type	
EthSwTGetPortCableDiagnosticsResultApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwT_GetPortCableDiagnosticsResult API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00092]

BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type	
EthSwTGetPortIdentifierApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwT_GetPortIdentifier API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00083]

BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type	
EthSwTGetPortMacAddrApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwT_GetPortMacAddr API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00051]



BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type	
EthSwTGetPortMirrorStateApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwT_GetPortMirrorState API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00087]

BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type	
EthSwTGetPortSignalQualityApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwT_GetPortSignalQuality API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00082]

BSW Module		BSW Context	
EthSwT		EthSwT/EthSwTGeneral	
BSW Parameter		BSW Type	
EthSwTGetRxStatsApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwT_GetRxStats API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwT_-00065]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTGeneral	
BSW Parameter	BSW Type	
EthSwTGetSwitchIdentifierApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables EthSwT_GetSwitchIdentifier API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00084]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTGeneral	
BSW Parameter	BSW Type	
EthSwTGetSwitchPortModeApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables EthSwT_GetSwitchPortMode API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00118]

BSW Module	BSW Context	
EthSwT	EthSwT/EthSwTGeneral	
BSW Parameter	BSW Type	
EthSwTGetSwitchPortWakeupReasonApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables EthSwT_GetSwitchPortWakeupReason API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwT_-00137]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtGetSwitchRegApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_GetSwitchReg API.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_EthSwt_-00066]	

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtGetTxErrorCounterValuesApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables/Disables Eth_GetTxErrorCounterValues API.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_EthSwt_-00100]	

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtGetTxStatsApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables/Disables Eth_GetTxStats API.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_EthSwt_-00099]	

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtGlobalTimeSupportApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables/Disables the Global Time APIs used amongst others by Global Time Synchronization over Ethernet.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00107]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtIndex		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00033]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtLinkDownCallout		ECUC-FUNCTION-NAME-DEF	
BSW Description			
Defines the function name for the <EthSwtLinkDownCallout> callout.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00115]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtLinkUpCallout		ECUC-FUNCTION-NAME-DEF
BSW Description		
Defines the function name for the <EthSwtLinkUpCallout> callout.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00116]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtLowPowerModeSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Disable / Enable support of low power mode.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00102]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type
EthSwtMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
The cycle time of the periodic main function of EthSwt. Defined in seconds .		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSwt_-00071]

BSW Module	BSW Context	
EthSw	EthSw/EthSwGeneral	
BSW Parameter		BSW Type
EthSwManagementSupportApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/Disables the Switch management APIs to support a Switch-port specific communication attribute access.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSw_ - 00108]

BSW Module	BSW Context	
EthSw	EthSw/EthSwGeneral	
BSW Parameter		BSW Type
EthSwPersistentConfigurationResult		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables the callback API <User>_PersistentConfigurationResult.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSw_ - 00062]

BSW Module	BSW Context	
EthSw	EthSw/EthSwGeneral	
BSW Parameter		BSW Type
EthSwPersistentConfigurationResultCallback		ECUC-FUNCTION-NAME-DEF
BSW Description		
Defines the function name for <EthSwPersistentConfigurationResultCallback>.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSw_ - 00063]

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter	BSW Type	
EthSwtPublicCddHeaderFile	ECUC-STRING-PARAM-DEF	
BSW Description		
Defines header files for callback functions which shall be included in case of CDDs.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthSwt_-00064]	

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter	BSW Type	
EthSwtReadPortMirrorConfigurationApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables EthSwt_ReadPortMirrorConfiguration API		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthSwt_-00086]	

BSW Module	BSW Context	
EthSwt	EthSwt/EthSwtGeneral	
BSW Parameter	BSW Type	
EthSwtReadTrcvRegisterApi	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables / Disables EthSwt_ReadTrcvRegister API.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthSwt_-00069]	

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtResetConfigurationApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_ResetConfiguration API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00049]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtSetForwardingModeApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables /disables EthSwt_SetForwardingMode API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00104]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtSetMacLearningModeApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_SetMacLearningMode API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00060]



BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtSetPortLoopbackModeApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_SetPortLoopbackModeApi API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00090]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtSetPortMirrorStateApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_SetPortMirrorState API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00088]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtSetPortTestModeApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_SetPortTestMode API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00089]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtSetPortTxModeApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_SetPortTxModeApi API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00091]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtSetSwitchPortModeApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_SetSwitchPortMode API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00117]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtSetSwitchRegApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_SetSwitchReg API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00067]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtStartSwitchPortAutoNegotiationApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_StartSwitchPortAutoNegotiation API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00119]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtStoreConfigurationApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_StoreConfiguration API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00050]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtVerifyConfigApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables /disables EthSwt_VerifyConfig API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00105]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables version info API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00031]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtWritePortMirrorConfigurationApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_WritePortMirrorConfiguration API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00085]

BSW Module		BSW Context	
EthSwt		EthSwt/EthSwtGeneral	
BSW Parameter		BSW Type	
EthSwtWriteTrcvRegisterApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthSwt_WriteTrcvRegister API.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthSwt_-00070]

### C.6.4 Service Discovery

BSW Module	BSW Context	
Sd	Sd	
BSW Parameter		BSW Type
SdConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR Service Discovery module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00003]

BSW Module	BSW Context	
Sd	Sd/SdConfig	
BSW Parameter		BSW Type
SdCapabilityRecordMatchCallout		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Callout that is invoked by the Sd implementation to determine whether the configuration options contained in the entries of a received SD message match the capability record elements configured in SdServerCapabilityRecord or SdClientCapabilityRecord.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00124]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdCapabilityRecordMatchCallout	
BSW Parameter		BSW Type
SdCapabilityRecordMatchCalloutName		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name (i.e., C-identifier) of the SdCapabilityRecordMatchCallout.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00125]

BSW Module	BSW Context	
Sd	Sd/SdConfig	
BSW Parameter		BSW Type
SdInstance		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container represents an instance of the SD; i.e. the SD configuration for a certain link.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00084]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance	
BSW Parameter		BSW Type
SdClientService		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies all parameters used by Client services.		
Template Description		
Service instances that are consumed by the ECU that is connected via the ApplicationEndpoint to a Communication Connector.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance		
Mapping Rule		Mapping Type
Create container for each existing ConsumedServiceInstance that is available in the Ecu Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00005]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService	
BSW Parameter		BSW Type
SdBlocklistedVersions		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Collection of blocklisted versions.		
Template Description		
Collection of blocklisted versions		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.blocklistedVersion		
Mapping Rule		Mapping Type
If at least one ConsumedServiceInstance.blocklistedVersion exists the container shall be derived.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00141]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdBlocklistedVersions	
BSW Parameter		BSW Type
SdBlocklistedMinorVersions		ECUC-INTEGER-PARAM-DEF
BSW Description		
Blocklisted MinorVersions.		
Template Description		
Minor Version of the ServiceInterface.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SomeipServiceVersion.minorVersion		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00142]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService	
BSW Parameter		BSW Type
SdClientCapabilityRecord		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Sd uses capability records to store arbitrary name/value pairs conveying additional information about the named service. The following use cases are supported: 1) Key present, with no value (e.g. "passreq" – password required for this service) 2) Key present, with empty value (e.g. "PlugIns=" server supports plugins, but none are presently installed) 3) Key present, with non-empty value (e.g. "PlugIns=JPEG,MPEG2,MPEG4")		
Template Description		
A sequence of records to store arbitrary name/value pairs conveying additional information about the named service.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::AbstractServiceInstance.capabilityRecord		
Mapping Rule		Mapping Type
1:1 mapping to ConsumedServiceInstance.capabilityRecord.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00072]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdClientCapabilityRecord	
BSW Parameter		BSW Type
SdClientServiceCapabilityRecordKey		ECUC-STRING-PARAM-DEF
BSW Description		
Defines a CapabilityRecord key.		
Template Description		
Defines a key.		
M2 Parameter		
GenericStructure::GeneralTemplateClasses::TagWithOptionalValue::TagWithOptionalValue.key		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00073]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdClientCapabilityRecord	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientServiceCapabilityRecordValue		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
Defines the corresponding CapabilityRecord value.		
<b>Template Description</b>		
Defines the corresponding value.		
<b>M2 Parameter</b>		
GenericStructure::GeneralTemplateClasses::TagWithOptionalValue::TagWithOptionalValue.value		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00074]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientCapabilityRecordMatchCalloutRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a SdCapabilityRecordMatchCallout, The referenced SdCapabilityRecordMatchCallout is invoked to determine whether the configuration options contained in the entries of a received SD message match the client's configured SdClientCapabilityRecord elements.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00127]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientServiceAutoRequire		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
If existing and set to true, this Service will be set to "required" on start.		
<b>Template Description</b>		
Defines that this ConsumedServiceInstance shall be required (searched for) by the service discovery at ECU start.		
<b>M2 Parameter</b>		







SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">autoRequire</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00143]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService	
BSW Parameter		BSW Type
SdClientServiceHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The HandleId by which the BswM can identify this Client Service Instance.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00079]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService	
BSW Parameter		BSW Type
SdClientServiceId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Id to identify the service. This is unique for the service interface.		
Template Description		
This attribute represents the ability to describe the SOME/IP service ID that is searched.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">serviceIdentifier</a>		
Mapping Rule		Mapping Type
Shall be derived from ConsumedServiceInstance.serviceIdentifier		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00020]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService	
BSW Parameter		BSW Type
SdClientServiceInstanceId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Configuration parameter to specify Instance Id of the service as used in SD entries.		
Template Description		
This attribute represents the ability to describe the required service instance ID.		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">instanceIdentifier</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00022]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientServiceMajorVersion		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Major version number of the Service as used in the SD entries.		
<b>Template Description</b>		
Major Version of the ServiceInterface. Value can be set to a number that represents the Major Version of the service.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::AbstractServiceInstance. <a href="#">majorVersion</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Shall be derived from ConsumedServiceInstance.majorVersion		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00070]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientServiceMinorVersion		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Minor version number of the Service as used in the SD Service Entries. If configured to 0xffffffff (any), SD will accept all Minor Versions.		
<b>Template Description</b>		
Minor Version of the ServiceInterface. Value can be set to a number that represents the Minor Version of the searched service or to ANY.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">minorVersion</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00071]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientServiceMulticastRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		





<p>Reference to the SoAdSocketConnection representing the data path (UDP) for communication with the server. This element is also used to set the remote address of the server.</p> <p>This is used, if a ClientService subscribes with a Consumed Eventgroup multicast endpoint. This is an alternative to subscribe with a Consumed Eventgroup unicast endpoint (see SdClientServiceUdpRef).</p> <p>Please note: usage of this reference is mutually exclusive to SdClientServiceUdpRef.</p>	
<b>Template Description</b>	
Multicast Address that is used by the client to subscribe to the server: This enables the multicast subscription feature.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">eventMulticastSubscriptionAddress</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This reference shall be derived from the ConsumedServiceInstance.eventMulticastSubscription Address reference to an ApplicationEndpoint that defines a multicast endpoint. If the Consumed ServiceInstance does not reference a multicast endpoint with the eventMulticastSubscription Address reference the SdClientServiceMulticastRef shall be skipped.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Sd_00145]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientServiceTcpRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the SoAdSocketConnection representing the data path (TCP) for communication with methods. This element is also used to set the remote address of the server and to open the TCP connection.		
<b>Template Description</b>		
The local address over which the CSI is consumed (udp, tcp or both).		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">localUnicastAddress</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
This reference shall be derived from the ConsumedServiceInstance.localUnicastAddress reference to an ApplicationEndpoint that defines a TCP Port. If the ConsumedServiceInstance does not reference a TCP Port with the localUnicastAddress reference the SdServerServiceTcp Ref shall be skipped.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SD_00100]	

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientServiceTimerRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
The reference of the SdClientTimer container for this service.		
<b>Template Description</b>		
Client specific configuration settings relevant for the SOME/IP service discovery.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">sdClientTimerConfig</a>		





Mapping Rule	Mapping Type
The reference to the SdClientTimer shall be created pointing to the SdClientTimer container which was created based on the ConsumedServiceInstance.sdClientTimerConfig	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00103]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService	
BSW Parameter		BSW Type
SdClientServiceUdpRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the SoAdSocketConnection representing the data path (UDP) for communication with methods. This element is also used to set the remote address of the server. This is used, if a ClientService subscribes with a Consumed Eventgroup unicast endpoint. This is an alternative to subscribe with a Consumed Eventgroup multicast endpoint. (see SdClientServiceMulticastRef). Please note: usage of this reference is mutually exclusive to SdClientServiceMulticastRef.		
Template Description		
The local address over which the CSI is consumed (udp, tcp or both).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.localUnicastAddress		
Mapping Rule		Mapping Type
This reference shall be derived from the ConsumedServiceInstance.localUnicastAddress reference to an ApplicationEndpoint that defines a UDP Port. If the ConsumedServiceInstance does not reference a UDP Port with the localUnicastAddress reference the SdServerServiceUdpRef shall be skipped.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00101]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService	
BSW Parameter		BSW Type
SdConsumedEventGroup		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
A Service may have event groups which can be consumed. A service consumer has to subscribe to the corresponding event-group. After the subscription the event consumer takes the role of a server and the event provider that of a client.		
Template Description		
This element represents an event-group to which the service consumer wants to subscribe.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup		
Mapping Rule		Mapping Type
Create container for every existing consumedEventGroup that is aggregated by the Consumed ServiceInstance		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00056]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedEventGroup	
BSW Parameter	BSW Type	
SdConsumedEventGroupAutoRequire	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
If existing and set to true, this EventGroup will be set to "required" on start.		
Template Description		
Defines that this ConsumedEventGroup shall be requested (subscribed) as soon as the corresponding ConsumedService Instance is requested. This could be at ECU start, if ConsumedServiceInstance.autoRequire is set to TRUE or as soon as the ConsumedServiceInstance is requested by the application, if ConsumedServiceInstance.autoRequire is set to FALSE.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup.autoRequire		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00144]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedEventGroup	
BSW Parameter	BSW Type	
SdConsumedEventGroupHandleId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The HandleId by which the BswM can identify this EventGroup.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00116]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedEventGroup	
BSW Parameter	BSW Type	
SdConsumedEventGroupId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The Eventgroup Id of this eventGroup as a unique identifier of the eventgroup in this service. This identifier is used for Event Group entries as well. Please note, that the Eventgroup ID 0x0000 is reserved.		
Template Description		
EventGroup ID. Shall be unique within one system to allow service discovery.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup.eventGroupIdentifier		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00057]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedEventGroup	
BSW Parameter	BSW Type	
SdConsumedEventGroupMulticastActivationRef	ECUC-REFERENCE-DEF	
BSW Description		
<p>The reference of a Routing Group in order to activate and setup the Socket Connection for Multicast Events of this Event Group. The Multicast address from the received Multicast Option is setup by SoAd_RequestIpAddrAssignment.</p> <p>The local address is the same as for the unicast events; thus, it was sent in the UDP Endpoint option of the Subscribe Event Group entry.</p> <p>This is usually equal to the SdConsumedEventGroupUdpActivationRef.</p>		
Template Description		
The ServiceDiscovery module is able to activate and deactivate the PDU routing for receiving events.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup.pduActivationRoutingGroup		
Mapping Rule		Mapping Type
This container shall be created if the EventHandler aggregates a PduActivationRoutingGroup with eventGroupControlType = activationMulticast.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00106]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedEventGroup	
BSW Parameter	BSW Type	
SdConsumedEventGroupMulticastGroupRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the SoAdSocketConnectionGroup representing the multicast data path (UDP).		
Template Description		
<p>This reference defines the multicast address or a multicast address resource where the events of the event group are received.</p> <p>If the multicast address is determined via configuration and not at runtime via service discovery this reference points to the multicast address over which the events will be received.</p> <p>If the multicast address is determined at runtime via service discovery this reference shall be used to define the necessary local multicast address resources, i.e. RAM space in the Tcplp module in which the multicast address is stored at runtime. Please note that in this case the referenced address may be defined as ANY UDP port and ANY IP address since the multicast address will be received at runtime. If several multicast addresses are considered to be used the ConsumedEvent Group shall point to different ApplicationEndpoint objects to reserve the necessary resources in the configuration.</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup.eventMulticastAddress		
Mapping Rule		Mapping Type
<p>If SD is used then the Client receives the Multicast Address at runtime. In this case the Application Endpoint and the corresponding NetworkEndpoint that are referenced by eventMulticastAddress from the ConsumedEventGroup define the resource where the IP Multicast address that will be determined at runtime will be stored.</p> <p>In case of a static configuration the eventMulticastAddress will point to a concrete IP Multicast address that can be used in the configuration.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00119]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedEventGroup	
BSW Parameter	BSW Type	
SdConsumedEventGroupTcpActivationRef	ECUC-REFERENCE-DEF	
BSW Description		
<p>The reference of the Routing Group for activation of the data path for receiving TCP events.</p> <p>This element is also being used for getting the IP address and port number for building the TCP endpoint option for the Subscribe EventGroup entry.</p> <p>If no TCP methods are used in the service, this element is also being used for setting the remote address (TCP Endpoint option referenced by the Offer Service entry) and opening the TCP connection to the server before sending the Subscribe EventGroup entry. If multiple EventGroups of the same Service Instance are subscribed the TCP connection will be shared and must be opened only once.</p>		
Template Description		
The ServiceDiscovery module is able to activate and deactivate the PDU routing for receiving events.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup.pduActivationRoutingGroup		
Mapping Rule		Mapping Type
This container shall be created if the ConsumedEventGroup aggregates a PduActionRouting Group with eventGroupControlType = activationUnicast or triggerUnicast or activationAndTrigger Unicast and this PduActionRoutingGroup points with the iPduIdentifierTcp reference to a collection of SoConIPduIdentifiers.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00105]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedEventGroup	
BSW Parameter	BSW Type	
SdConsumedEventGroupTimerRef	ECUC-REFERENCE-DEF	
BSW Description		
The reference of the SdClientTimer container for this eventGroup.		
Template Description		
Client Timing configuration settings that are EventGroup specific.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup.sdClientTimerConfig		
Mapping Rule		Mapping Type
The reference to the SdServerTimer shall be created pointing to the SdServerTimer container which was created based on the ConsumedEventGroup.sdClientTimerConfig		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00107]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedEventGroup	
BSW Parameter	BSW Type	
SdConsumedEventGroupUdpActivationRef	ECUC-REFERENCE-DEF	
BSW Description		





<p>The reference of the Routing Group for activation of the data path for receiving UDP events.</p> <p>This element is also being used for getting the IP address and port number for building the UDP Endpoint option or Consumed Multicast option for the Subscribe EventGroup entry.</p> <p>If no UDP methods are used in the service, this element is also being used for setting the remote address (UDP Endpoint option referenced by the Offer Service entry). If multiple EventGroups of the same Service Instance are subscribed the UDP Socket Connection will be shared and must be set only once.</p>	
<b>Template Description</b>	
The ServiceDiscovery module is able to activate and deactivate the PDU routing for receiving events.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup.pduActivationRoutingGroup	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This container shall be created if the ConsumedEventGroup aggregates a PduActiationRouting Group with eventGroupControlType = activationUnicast or triggerUnicast or activationAndTrigger Unicast and this PduActiationRoutingGroup points with the iPdulIdentifierUdp reference to a collection of SoConIPdulIdentifiers.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00104]

<b>BSW Module</b>	<b>BSW Context</b>
Sd	Sd/SdConfig/SdInstance/SdClientService
<b>BSW Parameter</b>	<b>BSW Type</b>
SdConsumedMethods	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Container element for representing the data path for accessing the server methods.	
<b>Template Description</b>	
The ServiceDiscovery module is able to activate and deactivate the PDU routing for ClientServerOperations (SOME/IP methods).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::AbstractServiceInstance.methodActivationRoutingGroup	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If the ConsumedServiceInstance contains a methodActivationRoutingGroup then this container shall be created	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00099]

<b>BSW Module</b>	<b>BSW Context</b>
Sd	Sd/SdConfig/SdInstance/SdClientService/SdConsumedMethods
<b>BSW Parameter</b>	<b>BSW Type</b>
SdClientServiceActivationRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to a SoAdRoutingGroupRef to activate/deactivate the data path for the methods.	
<b>Template Description</b>	
The ServiceDiscovery module is able to activate and deactivate the PDU routing for ClientServerOperations (SOME/IP methods).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::AbstractServiceInstance.methodActivationRoutingGroup	
<b>Mapping Rule</b>	<b>Mapping Type</b>







If the ConsumedServiceInstance contains a methodActivationRoutingGroup then this reference shall be created	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00102]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdServiceGroupRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the SdServiceGroupS this SdClientService belongs to.		
<b>Template Description</b>		
This reference assigns a set of ProvidedServiceInstances to the ConsumedProvidedServiceInstanceGroup.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedProvidedServiceInstanceGroup. <a href="#">consumedServiceInstance</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Find ConsumedProvidedServiceInstanceGroup that points to this ConsumedServiceInstance and create the reference.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00137]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdClientService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdVersionDrivenFindBehavior		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Defined the possible acceptance kinds for required service instances.		
<b>Template Description</b>		
Defines the service discovery find behavior.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">versionDrivenFindBehavior</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00140]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdClientTimer		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies all timers used by the Service Discovery module for Client Services.		
<b>Template Description</b>		





Client specific configuration settings relevant for the SOME/IP service discovery.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.sdClientTimerConfig	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The Timing parameters can be derived from the SomeipSdClientServiceInstanceConfig attributes and the aggregated elements RequestResponseDelay and InitialSdDelayConfig. If multiple ConsumedServiceInstances reference the same SomeipSdClientServiceInstanceConfig, then one SdClientTimer shall be derived for those ConsumedServiceInstances which are referenced by the same ConsumedProvidedServiceInstanceGroup and for those which have ConsumedServiceInstance.autoRequire set to true. For all other ConsumedServiceInstances an own SdClientTimer shall be derived and referenced by the corresponding SdServerService.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00043]

<b>BSW Module</b>	<b>BSW Context</b>
Sd	Sd/SdConfig/SdInstance/SdClientTimer
<b>BSW Parameter</b>	<b>BSW Type</b>
SdClientTimerInitialFindDelayMax	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Max value in [s] to delay randomly the transmission of a find message. This parameter is mandatory for ClientService.	
<b>Template Description</b>	
Max Value in seconds to delay randomly the first offer (if aggregated by SdServerConfig) or the transmission of a find message (if aggregated by SdClientConfig).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::InitialSdDelayConfig.initialDelayMaxValue	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Take information from ConsumedServiceInstance.sdClientTimerConfig	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00063]

<b>BSW Module</b>	<b>BSW Context</b>
Sd	Sd/SdConfig/SdInstance/SdClientTimer
<b>BSW Parameter</b>	<b>BSW Type</b>
SdClientTimerInitialFindDelayMin	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Min value in [s] to delay randomly the transmission of a find message. This parameter is mandatory for ClientService.	
<b>Template Description</b>	
Min Value in seconds to delay randomly the first offer or the transmission of a find message (if aggregated by SdClientConfig).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::InitialSdDelayConfig.initialDelayMinValue	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Take information from ConsumedServiceInstance.sdClientTimerConfig	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00044]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientTimer	
BSW Parameter	BSW Type	
SdClientTimerInitialFindRepetitionsBaseDelay	ECUC-FLOAT-PARAM-DEF	
BSW Description		
The base delay in [s] for find repetitions. Successive finds have an exponential back off delay (1x base delay, 2x base delay, 4x base delay, ...). This parameter is mandatory for ClientService.		
Template Description		
The base delay for offer repetitions (if aggregated by SdServerConfig) or find repetitions (if aggregated by SdClientConfig). Successive find messages have an exponential back off delay.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::InitialSdDelayConfig. <a href="#">initialRepetitionsBaseDelay</a>		
Mapping Rule		Mapping Type
Take information from ConsumedServiceInstance.sdClientTimerConfig		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00047]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientTimer	
BSW Parameter	BSW Type	
SdClientTimerInitialFindRepetitionsMax	ECUC-INTEGGER-PARAM-DEF	
BSW Description		
Configuration for the maximum number of find repetitions. This parameter is mandatory for ClientService.		
Template Description		
Describes the maximum amount of offer repetitions (if aggregated by SdServerConfig) or the maximum amount of find repetitions (if aggregated by SdClientConfig).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::InitialSdDelayConfig. <a href="#">initialRepetitionsMax</a>		
Mapping Rule		Mapping Type
Take information from ConsumedServiceInstance.sdClientTimerConfig		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00046]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientTimer	
BSW Parameter	BSW Type	
SdClientTimerRequestResponseMaxDelay	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Maximum allowable response delay to entries received by multicast in seconds. This parameter is mandatory for Consumed EventGroups.		
Template Description		
Maximum allowable response delay to entries received by multicast in seconds.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::RequestResponseDelay. <a href="#">maxValue</a>		
Mapping Rule		Mapping Type





Take information from ConsumedServiceInstance.sdClientTimerConfig	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00036]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientTimer	
BSW Parameter	BSW Type	
SdClientTimerRequestResponseMinDelay	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Minimum allowable response delay to the find message in seconds. This parameter is mandatory for ConsumedEventGroups.		
Template Description		
Minimum allowable response delay to entries received by multicast in seconds.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::RequestResponseDelay.minValue		
Mapping Rule	Mapping Type	
Take information from ConsumedServiceInstance.sdClientTimerConfig	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00064]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientTimer	
BSW Parameter	BSW Type	
SdClientTimerTTL	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Time to live for find and subscribe messages. Note! The TTL value for find messages shall be ignored by the server service and the configuration is only kept for backward compatibility		
Template Description		
<p><b>SomeipSdClientServiceInstanceConfig.serviceFindTimeToLive:</b> This attribute represents the ability to define the time in seconds the service find is valid. Note! The TTL value for FindService entries is not used and shall be ignored by the server service. This configuration is only kept for backward compatibility. Default value if not specified shall be 0xFFFFFFFF.</p> <p><b>SomeipSdClientEventGroupTimingConfig.timeToLive:</b> Defines the time in seconds the subscription of this event is expected by the client. this value is sent from the client to the server in the SD-subscribeEvent message.</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SomeipSdClientServiceInstanceConfig.serviceFindTimeToLive, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SomeipSdClientEventGroupTimingConfig.timeToLive		
Mapping Rule	Mapping Type	
For SdClientTimer that is referenced from SdConsumedEventGroup by SdConsumedEventGroupTimerRef: take information from SomeipSdClientEventGroupTimingConfig.timeToLive.  For SdClientTimer that is referenced from SdClientService by SdClientServiceTimerRef: TTL for find messages is not used by the server service and the parameter is only available for backward compatibility. The value from the System Template can be ignored. Default value if not specified shall be 0xFFFFFFFF.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00075]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientTimer	
BSW Parameter	BSW Type	
SdSubscribeEventgroupRetryDelay	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Time in seconds when a subscription to an event group shall be retriggered, if no SubscribeEventGroupAck or SubscribeEventGroupNack was received.		
Template Description		
This attribute defines the interval in seconds to re-trigger a subscription to a Eventgroup, if a retry to subscribe to a Eventgroup is configured (subscribeEventgroupRetryMax > 0).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SomeipSdClientEventGroupTimingConfig. <a href="#">subscribeEventgroupRetryDelay</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00133]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdClientTimer	
BSW Parameter	BSW Type	
SdSubscribeEventgroupRetryMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum count of retry a subscription, if a subscription to an event group is not acknowledged by SubscribeEventGroupAck or SubscribeEventGroupNack. 0x0=no retry, 0xFF=retry forever (as long as the event group is requested)		
Template Description		
This attribute define the maximum counts of retries to subscribe to an Eventgroup. If the value is set to 0 no retry shall be done. If the value is set to 255 the retry shall be done as along as the Eventgroup is requested and no SubscribeEventGroupAck was received.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SomeipSdClientEventGroupTimingConfig. <a href="#">subscribeEventgroupRetryMax</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00132]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance	
BSW Parameter	BSW Type	
SdInstanceDemEventParameterRefs	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00120]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdInstanceDemEventParameterRefs	
BSW Parameter		BSW Type
SD_E_MALFORMED_MSG		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the SD Instance received malformed message.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00121]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdInstanceDemEventParameterRefs	
BSW Parameter		BSW Type
SD_E_OUT_OF_RES		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the SD Instance does not have enough resources to handle client.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00122]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdInstanceDemEventParameterRefs	
BSW Parameter		BSW Type
SD_E_SUBSCR_NACK_RECV		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when receiving SubscribeEventgroupNack entry.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00123]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdInstanceHostname		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
Configuration parameter to specify the Hostname.		
<b>Template Description</b>		
Defines the fully qualified domain name (FQDN) e.g. some.example.host.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpoint.fullyQualifiedDomainName		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Shall be derived from the NetworkEndpoint.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00012]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdInstanceLocalAdressCheckLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This item describes on how many bits of the addresses shall be compared to determine, if a remote address is acceptable to be used. This shall support IPv4 (0..32) and IPv6 (0..128). If this item is not present, the security checks use the configured netmask instead. "0" meaning not to check at all. For example "8" means that the first 8 bits of a remote address must be equal to the local address to be considered acceptable.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00128]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdInstanceMulticastRxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies the received PDU.		
<b>Template Description</b>		
<b>M2 Parameter</b>		





SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPduPort	
Mapping Rule	Mapping Type
The direction of the Pdu can be derived from the PduTriggering that refers to the GeneralPurpose Pdu that represents the SdPdu.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00081]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdInstanceMulticastRxPdu	
BSW Parameter		BSW Type
SdRxPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
ID of the PDU that will be received via the API Sd_SoAdfRxIndication().		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00028]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdInstanceMulticastRxPdu	
BSW Parameter		BSW Type
SdRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00029]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance	
BSW Parameter		BSW Type
SdInstanceTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies the transmitted PDU.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPduPort		







Mapping Rule	Mapping Type
The direction of the Pdu can be derived from the PduTriggering that refers to the GeneralPurpose Pdu that represents the SdPdu.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00030]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdInstanceTxPdu	
BSW Parameter	BSW Type	
SdTxPduRef	ECUC-REFERENCE-DEF	
BSW Description	Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.	
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00109]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance	
BSW Parameter	BSW Type	
SdInstanceUnicastRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description	This container specifies the received PDU.	
Template Description		
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPduPort	
Mapping Rule	Mapping Type	
The direction of the Pdu can be derived from the PduTriggering that refers to the GeneralPurpose Pdu that represents the SdPdu.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00027]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdInstanceUnicastRxPdu	
BSW Parameter	BSW Type	
SdRxPduId	ECUC-INTEGER-PARAM-DEF	
BSW Description	ID of the PDU that will be received via the API Sd_SoAdIfRxIndication().	
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00082]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdInstanceUnicastRxPdu	
BSW Parameter		BSW Type
SdRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00083]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance	
BSW Parameter		BSW Type
SdServerService		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies all parameters used by Server services.		
Template Description		
Service instances that are provided by the ECU that is connected via the ApplicationEndpoint to a CommunicationConnector.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance		
Mapping Rule		Mapping Type
Create container for each existing ProvidedServiceInstance that is available in the Ecu Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00004]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter		BSW Type
SdEventHandler		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container Element for representing an EventGroup as part of the Service Instance.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.eventHandler		





Mapping Rule	Mapping Type
Create container for every existing EventHandler that is aggregated by the ProvidedService Instance	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00055]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler
BSW Parameter	BSW Type
SdEventHandlerEventGroupId	ECUC-INTEGER-PARAM-DEF
BSW Description	The EventGroup Id of this EventGroup as a unique identifier of the EventGroup in this service. This identifier is used for Event Group entries as well. Please note, that the Eventgroup ID 0x0000 is reserved.
Template Description	Unique Identifier that identifies the EventGroup in SOME/IP. This Identifier is sent as Eventgroup ID in SOME/IP Service Discovery messages.
M2 Parameter	SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::EventHandler.eventGroupIdentifier
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00061]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler
BSW Parameter	BSW Type
SdEventHandlerHandleId	ECUC-INTEGER-PARAM-DEF
BSW Description	The HandleId by which the BswM can identify this EventGroup.
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00112]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler
BSW Parameter	BSW Type
SdEventHandlerMulticast	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	





The subcontainer including the Routing Group for Activation of Events sent over Multicast. The activation ref is also being used for identification of the related Socket Connection in order to find the Multicast Address used in the Multicast Option referenced by the Subscribe EventGroup Ack entry.	
<b>Template Description</b>	
The ServiceDiscovery module is able to activate and deactivate the PDU routing for events.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::EventHandler.pduActivationRoutingGroup	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This container shall be created if the EventHandler aggregates a PduActivationRoutingGroup with eventGroupControlType = activationMulticast.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00094]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler/SdEventHandlerMulticast	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdEventActivationRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a SoAdRoutingGroup for activation of the data path for a subscribed client (start sending events after subscribe). This is usually equal to the SdEventActivationRef referenced by SdEventHandlerUdp		
<b>Template Description</b>		
This attribute defines the type of a RoutingGroup. There are RoutingGroups that activate the data path for unicast or multicast events of an event group. And there are RoutingGroups that activate the data path for initial events that are triggered, namely events that are sent out on the server side after a client got subscribed. Please note that this attribute is only valid for event communication (Sender Receiver communication) and shall be omitted in MethodActivationRoutingGroups.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup.eventGroupControlType		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create this reference in the SdEventHandlerUdp or SdEventHandlerTcp container if the event GroupControlType in the PduActivationRoutingGroup is set to activationUnicast or activationAnd TriggerUnicast.  Create this reference in the SdEventHandlerMulticast container if the eventGroupControlType in the PduActivationRoutingGroup is set to activationMulticast.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00096]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler/SdEventHandlerMulticast	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdMulticastEventSoConRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the SoAdSocketConnection representing the Eventhandler Multicast data path (UDP).		
<b>Template Description</b>		
Multicast Address that is used for event communication in the IP-Multicast case. It is the destination address to which the server sends the multicast event messages if the mulicastThreshold is exceeded.  This address is transmitted in the SD-SubscribeEventGroupAck Message to client (answer to SD-SubscribeEventGroup).		
<b>M2 Parameter</b>		





SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::EventHandler. <a href="#">eventMulticastAddress</a>	
Mapping Rule	Mapping Type
Create this reference if the EventHandler in the System Description contains an eventMulticast Address reference to an ApplicationEndpoint that points to a NetworkEndpoint that in turn defines an IP MulticastAddress.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00118]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler
BSW Parameter	BSW Type
SdEventHandlerMulticastThreshold	ECUC-INTEGER-PARAM-DEF
BSW Description	
<p>Specifies the number of subscribed clients with different endpoint information (see SWS_SD_00754) that triggers the Server to change the transmission of events via the EventHandler Multicast connection.</p> <p>If configured to 0 only Consumed Evengroup unicast connections and Consumed Eventgroup multicast connections will be used.</p> <p>If configured to 1 the first client and all further subscribed clients will be served via the EventHandler Multicast connection as configured in SdMulticastEventSoConRef.</p> <p>If configured to n up to n-1 clients with different endpoint information will be served via Consumed Evengroup unicast connections and Consumed Eventgroup multicast connections. As soon as the number of subscribed clients with different endpoint information reaches n, then all subscribed clients are served via the EventHandler Multicast connection as configured in SdMulticastEventSoConRef.</p> <p>This does not influence the handling of initial events.</p>	
Template Description	
<p>Specifies the number of subscribed clients that trigger the server to change the transmission of events to multicast.</p> <p>If configured to 0 only unicast will be used. If configured to 1 the first client will be already served by multicast. If configured to 2 the first client will be server with unicast and as soon as the second client arrives both will be served by multicast.</p> <p>This does not influence the handling of initial events, which are served using unicast only.</p>	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::EventHandler. <a href="#">multicastThreshold</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00097]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler
BSW Parameter	BSW Type
SdEventHandlerTcp	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
<p>The subcontainer including the Routing Groups for Activation and Trigger Transmit for Events sent over TCP.</p> <p>The activation ref (or triggering ref if no activation ref exists) is also being used for identification of the related socket connections in order to find the related client by iterating the SdEventHandlerTcp elements (remote address statically configured or automatically set by opening TCP connection before subscription).</p>	
Template Description	
The ServiceDiscovery module is able to activate and deactivate the PDU routing for events.	





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::EventHandler.pduActivationRoutingGroup	
<b>Mapping Rule</b>	<b>Mapping Type</b>
This container shall be created if the EventHandler aggregates a PduActiationRoutingGroup with eventGroupControlType = activationUnicast or triggerUnicast or activationAndTriggerUnicast and this PduActiationRoutingGroup points with the iPdulIdentifierTcp reference to a collection of SoCon IPdulIdentifiers.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00093]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler/SdEventHandlerTcp	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdEventActivationRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a SoAdRoutingGroup for activation of the data path for a subscribed client (start sending events after subscribe). This is usually equal to the SdEventActivationRef referenced by SdEventHandlerUdp		
<b>Template Description</b>		
This attribute defines the type of a RoutingGroup. There are RoutingGroups that activate the data path for unicast or multicast events of an event group. And there are RoutingGroups that activate the data path for initial events that are triggered, namely events that are sent out on the server side after a client got subscribed. Please note that this attribute is only valid for event communication (Sender Receiver communication) and shall be omitted in MethodActivationRoutingGroups.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup.eventGroupControlType		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create this reference in the SdEventHandlerUdp or SdEventHandlerTcp container if the event GroupControlType in the PduActivationRoutingGroup is set to activationUnicast or activationAndTriggerUnicast.		full
Create this reference in the SdEventHandlerMulticast container if the eventGroupControlType in the PduActivationRoutingGroup is set to activationMulticast.		
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00096]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler/SdEventHandlerTcp	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdEventTriggeringRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a SoAdRoutingGroup that is used for triggered transmit. Triggering is needed to sent out initial events on the server side after a client got subscribed.		
<b>Template Description</b>		
This attribute defines the type of a RoutingGroup. There are RoutingGroups that activate the data path for unicast or multicast events of an event group. And there are RoutingGroups that activate the data path for initial events that are triggered, namely events that are sent out on the server side after a client got subscribed. Please note that this attribute is only valid for event communication (Sender Receiver communication) and shall be omitted in MethodActivationRoutingGroups.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup.eventGroupControlType		
<b>Mapping Rule</b>		<b>Mapping Type</b>





Create this reference if eventGroupControlType in the PduActivationRoutingGroup is set to trigger Unicast or activationAndTriggerUnicast.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00095]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler
BSW Parameter	BSW Type
SdEventHandlerTimerRef	ECUC-REFERENCE-DEF
BSW Description	
The reference of the SdServerTimer container for this EventGroup.	
Template Description	
Server Timing configuration settings that are EventGroup specific.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::EventHandler.sdServerEgTimingConfig	
Mapping Rule	Mapping Type
The reference to the SdServerTimer shall be created pointing to the SdServerTimer container which was created based on the EventHandler.sdServerEgTimingConfig. If multiple ProvidedServiceInstances reference the same SomeipSdServerServiceInstanceConfig, then one SdServerTimer shall be derived for those ProvidedServiceInstances which are referenced by the same ConsumedProvidedServiceInstanceGroup and for those which have ProvidedServiceInstance.auto Available set to true. For all other ProvidedServiceInstances an own SdServerTimer shall be derived and referenced by the corresponding SdServerService.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00113]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler
BSW Parameter	BSW Type
SdEventHandlerUdp	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
The subcontainer including the Routing Groups for Activation and Trigger Transmit for Events sent over UDP. The activation ref (or triggering ref if no activation ref exists) is also being used for identification of the related socket connections in order to set the remote address (either unicast address or multicast address) of the client or find the related client by iterating the SdEventHandlerUdp elements (remote address statically configured or automatically set by method call before subscription).	
Template Description	
The ServiceDiscovery module is able to activate and deactivate the PDU routing for events.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::EventHandler.pduActivationRoutingGroup	
Mapping Rule	Mapping Type
This container shall be created if the EventHandler aggregates a PduActiationRoutingGroup with eventGroupControlType = activationUnicast or triggerUnicast or activationAndTriggerUnicast and this PduActiationRoutingGroup points with the iPdulIdentifierUdp reference to a collection of SoCon IPdulIdentifiers.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00092]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler/SdEventHandlerUdp	
BSW Parameter		BSW Type
SdEventActivationRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a SoAdRoutingGroup for activation of the data path for a subscribed client (start sending events after subscribe). This is usually equal to the SdEventActivationRef referenced by SdEventHandlerUdp		
Template Description		
This attribute defines the type of a RoutingGroup. There are RoutingGroups that activate the data path for unicast or multicast events of an event group. And there are RoutingGroups that activate the data path for initial events that are triggered, namely events that are sent out on the server side after a client got subscribed. Please note that this attribute is only valid for event communication (Sender Receiver communication) and shall be omitted in MethodActivationRoutingGroups.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup.eventGroupControlType		
Mapping Rule		Mapping Type
Create this reference in the SdEventHandlerUdp or SdEventHandlerTcp container if the event GroupControlType in the PduActivationRoutingGroup is set to activationUnicast or activationAndTriggerUnicast.  Create this reference in the SdEventHandlerMulticast container if the eventGroupControlType in the PduActivationRoutingGroup is set to activationMulticast.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00096]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService/SdEventHandler/SdEventHandlerUdp	
BSW Parameter		BSW Type
SdEventTriggeringRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a SoAdRoutingGroup that is used for triggered transmit. Triggering is needed to sent out initial events on the server side after a client got subscribed.		
Template Description		
This attribute defines the type of a RoutingGroup. There are RoutingGroups that activate the data path for unicast or multicast events of an event group. And there are RoutingGroups that activate the data path for initial events that are triggered, namely events that are sent out on the server side after a client got subscribed. Please note that this attribute is only valid for event communication (Sender Receiver communication) and shall be omitted in MethodActivationRoutingGroups.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup.eventGroupControlType		
Mapping Rule		Mapping Type
Create this reference if eventGroupControlType in the PduActivationRoutingGroup is set to trigger Unicast or activationAndTriggerUnicast.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00095]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter		BSW Type
SdProvidedMethods		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		







Container element for representing the needed elements of the data path for the methods provided by the service.	
<b>Template Description</b>	
The ServiceDiscovery module is able to activate and deactivate the PDU routing for ClientServerOperations (SOME/IP methods).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::AbstractServiceInstance. <a href="#">methodActivationRoutingGroup</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If the ProvidedServiceInstance contains a methodActivationRoutingGroup then this container shall be created	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00087]

<b>BSW Module</b>	<b>BSW Context</b>
Sd	Sd/SdConfig/SdInstance/SdServerService/SdProvidedMethods
<b>BSW Parameter</b>	<b>BSW Type</b>
SdServerServiceActivationRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to a SoAdRoutingGroup to activated and deactivate the data path for methods of the service.	
<b>Template Description</b>	
The ServiceDiscovery module is able to activate and deactivate the PDU routing for ClientServerOperations (SOME/IP methods).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::AbstractServiceInstance. <a href="#">methodActivationRoutingGroup</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If the ProvidedServiceInstance contains a methodActivationRoutingGroup then this reference shall be created	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00090]

<b>BSW Module</b>	<b>BSW Context</b>
Sd	Sd/SdConfig/SdInstance/SdServerService
<b>BSW Parameter</b>	<b>BSW Type</b>
SdServerCapabilityRecord	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Sd uses capability records to store arbitrary name/value pairs conveying additional information about the named service. The following use cases are supported: 1) Key present, with no value (e.g. "passreq" – password required for this service) 2) Key present, with empty value (e.g. "PlugIns=" server supports plugins, but none are presently installed) 3) Key present, with non-empty value (e.g. "PlugIns=JPEG,MPEG2,MPEG4")	
<b>Template Description</b>	
A sequence of records to store arbitrary name/value pairs conveying additional information about the named service.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::AbstractServiceInstance. <a href="#">capabilityRecord</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping to ProvidedServiceInstance.capabilityRecord.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00032]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService/SdServerCapabilityRecord	
BSW Parameter	BSW Type	
SdServerCapabilityRecordKey	ECUC-STRING-PARAM-DEF	
BSW Description		
Defines a CapabilityRecord key.		
Template Description		
Defines a key.		
M2 Parameter		
GenericStructure::GeneralTemplateClasses::TagWithOptionalValue::TagWithOptionalValue. <i>key</i>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00033]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService/SdServerCapabilityRecord	
BSW Parameter	BSW Type	
SdServerCapabilityRecordValue	ECUC-STRING-PARAM-DEF	
BSW Description		
Defines the corresponding CapabilityRecord value.		
Template Description		
Defines the corresponding value.		
M2 Parameter		
GenericStructure::GeneralTemplateClasses::TagWithOptionalValue::TagWithOptionalValue. <i>value</i>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00034]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter	BSW Type	
SdServerCapabilityRecordMatchCalloutRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a SdCapabilityRecordMatchCallout, The referenced SdCapabilityRecordMatchCallout is invoked to determine whether the configuration options contained in the entries of a received SD message match the server's configured SdServer CapabilityRecord elements.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00126]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter		BSW Type
SdServerServiceAutoAvailable		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If existing and set to true, this Service will be set to "Available" on start.		
Template Description		
Defines that this ProvidedServiceInstance shall be offered by the service discovery at ECU start.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance. <a href="#">autoAvailable</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00138]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter		BSW Type
SdServerServiceHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The HandleId by which the BswM can identify this Server Service Instance.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00110]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter		BSW Type
SdServerServiceId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Id to identify the service. This is unique for the service interface.		
Template Description		
This attribute represents the ability to describe the SOME/IP service ID that is offered.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance. <a href="#">serviceIdentifier</a>		
Mapping Rule		Mapping Type
Shall be derived from ProvidedServiceInstance.serviceIdentifier		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00009]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter	BSW Type	
SdServerServiceInstanceId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Configuration parameter to specify Instance Id of the Service implemented by the Server Service.		
Template Description		
Instance identifier. Can be used for e.g. service discovery to identify the instance of the service.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance. <a href="#">instanceIdentifier</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00011]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter	BSW Type	
SdServerServiceLoadBalancingPriority	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines the value to be used for load balancing priority in the service offer. Lower value means higher priority.		
Template Description		
Defines the value to be used for load balancing priority in the service offer. Lower value means higher priority.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance. <a href="#">loadBalancingPriority</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00129]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter	BSW Type	
SdServerServiceLoadBalancingWeight	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines the value to be used for load balancing weight in the service offer. Higher value means higher probability to be chosen.		
Template Description		
Defines the value to be used for load balancing weight in the service offer. Higher value means higher probability to be chosen.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance. <a href="#">loadBalancingWeight</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00130]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter	BSW Type	
SdServerServiceMajorVersion	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Major version number of the Service as used in SD Entries.		
Template Description		
Major Version of the ServiceInterface. Value can be set to a number that represents the Major Version of the service.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::AbstractServiceInstance.majorVersion		
Mapping Rule		Mapping Type
Shall be derived from ProvidedServiceInstance.majorVersion		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00068]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter	BSW Type	
SdServerServiceMinorVersion	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Minor version number of the Service as used e.g. in Offer Service entries.		
Template Description		
Minor Version of the Service that is provided by this ProvidedServiceInstance.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.minorVersion		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00069]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerService	
BSW Parameter	BSW Type	
SdServerServiceTcpRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to SoAdSocketConnectionGroup used for methods.		
This is used to access the local IP address and port for building the endpoint option for offers of this service.		
Template Description		
The local address over which the CSI is consumed (udp, tcp or both).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.localUnicastAddress		
Mapping Rule		Mapping Type





This reference shall be derived from the ProvidedServiceInstance.localUnicastAddress reference to an ApplicationEndpoint that defines a TCP Port. If the ProvidedServiceInstance does not reference a TCP Port with the localUnicastAddress reference the SdServerServiceTcpRef shall be skipped.	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00088]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdServerService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdServerServiceTimerRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
The reference of the SdServerTimer container for this service.		
<b>Template Description</b>		
Server specific configuration settings relevant for the SOME/IP service discovery.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.sdServerTimerConfig		
<b>Mapping Rule</b>		<b>Mapping Type</b>
The reference to the SdServerTimer shall be created pointing to the SdServerTimer container which was created based on the ProvidedServiceInstance.sdServerTimerConfig.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00086]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdServerService	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdServerServiceUdpRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to SoAdSocketConnectionGroup used for methods.		
This is used to access the local IP address and port for building the endpoint option for offers of this service.		
<b>Template Description</b>		
The local address over which the CSI is consumed (udp, tcp or both).		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.localUnicastAddress		
<b>Mapping Rule</b>		<b>Mapping Type</b>
This reference shall be derived from the ProvidedServiceInstance.localUnicastAddress reference to an ApplicationEndpoint that defines a UDP Port. If the ProvidedServiceInstance does not reference a UDP Port with the localUnicastAddress reference the SdServerServiceTcpRef shall be skipped.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00089]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdServerService	
<b>BSW Parameter</b>		<b>BSW Type</b>





SdServiceGroupRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the SdServiceGroupS this SdServerService belongs to.	
<b>Template Description</b>	
This reference assigns a set of ConsumedServiceInstances to the ConsumedProvidedServiceInstanceGroup.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedProvidedServiceInstanceGroup. <a href="#">providedServiceInstance</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Find ConsumedProvidedServiceInstanceGroup that points to this ProvidedServiceInstance and create the reference.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00136]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdServerTimer		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies all timers used by the Service Discovery module for Server Services.		
<b>Template Description</b>		
Server specific configuration settings relevant for the SOME/IP service discovery.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance. <a href="#">sdServerTimerConfig</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
The Timing parameters can be derived from the SomeipSdServerServiceInstanceConfig attributes and the aggregated elements RequestResponseDelay and InitialSdDelayConfig.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00035]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdConfig/SdInstance/SdServerTimer	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdServerTimerInitialOfferDelayMax		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Max value in [s] to delay randomly the first offer. This parameter is mandatory for ServerService.		
<b>Template Description</b>		
Max Value in seconds to delay randomly the first offer (if aggregated by SdServerConfig) or the transmission of a find message (if aggregated by SdClientConfig).		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::InitialSdDelayConfig. <a href="#">initialDelayMaxValue</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Take information from ProvidedServiceInstance.sdServerTimerConfig		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SD_00039]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerTimer	
BSW Parameter	BSW Type	
SdServerTimerInitialOfferDelayMin	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Min value in [s] to delay randomly the first offer. This parameter is mandatory for ServerService.		
Template Description		
Min Value in seconds to delay randomly the first offer or the transmission of a find message (if aggregated by SdClientConfig).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::InitialSdDelayConfig.initialDelayMinValue		
Mapping Rule		Mapping Type
Take information from ProvidedServiceInstance.sdServerTimerConfig		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00038]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerTimer	
BSW Parameter	BSW Type	
SdServerTimerInitialOfferRepetitionBaseDelay	ECUC-FLOAT-PARAM-DEF	
BSW Description		
The base delay in [s] for offer repetitions. Successive offers have an exponential back off delay (1x base delay, 2x base delay, 4x base delay, ...). This parameter is mandatory for ServerService.		
Template Description		
The base delay for offer repetitions (if aggregated by SdServerConfig) or find repetitions (if aggregated by SdClientConfig). Successive find messages have an exponential back off delay.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::InitialSdDelayConfig.initialRepetitionsBaseDelay		
Mapping Rule		Mapping Type
Take information from ProvidedServiceInstance.sdServerTimerConfig		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00041]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerTimer	
BSW Parameter	BSW Type	
SdServerTimerInitialOfferRepetitionsMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Configure the maximum amount of offer repetition. This parameter is mandatory for ServerService.		
Template Description		
Describes the maximum amount of offer repetitions (if aggregated by SdServerConfig) or the maximum amount of find repetitions (if aggregated by SdClientConfig).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::InitialSdDelayConfig.initialRepetitionsMax		
Mapping Rule		Mapping Type
Take information from ProvidedServiceInstance.sdServerTimerConfig		full







Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00040]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerTimer
BSW Parameter	BSW Type
SdServerTimerOfferCyclicDelay	ECUC-FLOAT-PARAM-DEF
BSW Description	
Interval between cyclic offers in the main phase. This parameter is mandatory for ServerService.	
Template Description	
Optional attribute to define cyclic offers. Cyclic offer is active, if the delay is set (in seconds) and greater then 0.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SomeipSdServerServiceInstanceConfig.offerCyclicDelay	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00076]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerTimer
BSW Parameter	BSW Type
SdServerTimerRequestResponseMaxDelay	ECUC-FLOAT-PARAM-DEF
BSW Description	
Maximum allowable response delay to entries received by multicast in seconds.	
Template Description	
Maximum allowable response delay to entries received by multicast in seconds.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::RequestResponseDelay.maxValue	
Mapping Rule	Mapping Type
Take information from ProvidedServiceInstance.requestResponseDelay	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00114]

BSW Module	BSW Context
Sd	Sd/SdConfig/SdInstance/SdServerTimer
BSW Parameter	BSW Type
SdServerTimerRequestResponseMinDelay	ECUC-FLOAT-PARAM-DEF
BSW Description	
Minimum allowable response delay to entries received by multicast in seconds.	
Template Description	
Minimum allowable response delay to entries received by multicast in seconds.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::RequestResponseDelay.minValue	





Mapping Rule	Mapping Type
Take information from ProvidedServiceInstance.requestResponseDelay	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SD_00115]

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdInstance/SdServerTimer	
BSW Parameter	BSW Type	
SdServerTimerTTL	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Time to live for offer service.		
Template Description		
Defines the time in seconds the service offer is valid.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SomeipSdServerServiceInstanceConfig. <a href="#">serviceOfferTimeToLive</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00037]	

BSW Module	BSW Context	
Sd	Sd/SdConfig	
BSW Parameter	BSW Type	
SdServiceGroup	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Contains the configuration parameters of the AUTOSAR SD module's SdServiceGroupS.		
Template Description		
The AUTOSAR ServiceDiscovery is able to start and to stop ClientServices and ServerServices, respectively, at runtime. A SdServiceGroup contains several ClientServices and ServerServices, respectively.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedProvidedServiceInstanceGroup		
Mapping Rule	Mapping Type	
Create container for each CoreCommunication::ConsumedProvidedServiceInstanceGroup that is contained in the ECU Extract.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SD_00134]	

BSW Module	BSW Context	
Sd	Sd/SdConfig/SdServiceGroup	
BSW Parameter	BSW Type	
SdServiceGroupHandleId	ECUC-INTEGER-PARAM-DEF	
BSW Description		





The numerical value used as the ID of this SdServiceGroup. The SdServiceHandleId is required by the API calls to start and stop SdServiceGroupS.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00135]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container lists the general configuration parameters for the Service Discovery module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SD_00002]	

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SD_00006]	

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdMainFunctionCycleTime		ECUC-FLOAT-PARAM-DEF





<b>BSW Description</b>	
This parameter defines the cycle time in seconds of the periodic calling of Sd main function.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SD_00008]

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdSetRemAddrOfClientRxMulticastSoCon		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
<p>If SdSetRemAddrOfClientRxMulticastSoCon is set to TRUE, the Service Discovery module shall choose an multicast socket connection which match to the received Endpoint option of the corresponding OfferService. If no particular socket connection exist, then an unused socket connection with its remote address set to wildcard shall be used and the remote address shall be updated accordingly. If SdSetRemAddrOfClientRxMulticastSoCon is set to FALSE, the Service Discovery shall choose an unused socket connection with its remote address set to wildcard and skip to update the remote address, i.e. the wildcard for the remote address is kept.</p> <p>Note: setting SdSetRemAddrOfClientRxMulticastSoCon to FALSE supports the re-use of a multicast socket connection for multiple ClientServices which are located on the same ECU and subscribed to ServerServices which are located on different ECUs. The configuration of the ECU where the ClientServices are located, could be simplified by only configuring one socket connection within the multicast socket connection group.</p>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SD_00139]	

<b>BSW Module</b>	<b>BSW Context</b>	
Sd	Sd/SdGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SdSubscribeEventgroupRetryEnable		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switch to enable or disable the retry functionality to subscribe to Eventgroups of ServerServices with TTL set to 0xFFFFF.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SD_00131]	

BSW Module	BSW Context	
Sd	Sd/SdGeneral	
BSW Parameter		BSW Type
SdVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables and disables the version info API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SD_00007]

## C.6.5 SoAd

BSW Module	BSW Context	
SoAd	SoAd	
BSW Parameter		BSW Type
SoAdBswModules		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Each container describes a specific BSW module that the SoAd shall interface to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00102]

BSW Module	BSW Context	
SoAd	SoAd/SoAdBswModules	
BSW Parameter		BSW Type
SoAdBswModuleRef		ECUC-FOREIGN-REFERENCE-DEF
BSW Description		
<p>This is a reference to one BSW module's configuration (i.e. not the ECUC parameter definition template). Example, there could be several configurations of PduR and this reference selects one of them.</p> <p>SoAd has to figure out from the structure of the referenced BSW module's configuration, what kind of upper layer he deals with. In case of a CDD SoAd expects UL-APIs in form of <code>_SoAd&lt;If Tp&gt;&lt;function&gt;</code> and expects CDD Pdu configuration structures according to the Ecu Configuration specification (chapter CDD module\Socket Adaptor). In case it is one of the standardized AUTOSAR BSW modules, the configuration structures and API names for interaction with SoAd are defined in the corresponding SWS.</p>		
Template Description		





<p>Head of the configuration of one Module. A Module can be a BSW module as well as the RTE and ECU Infrastructure.</p> <p>As part of the BSW module description, the EcucModuleConfigurationValues element has two different roles:</p> <p>The recommendedConfiguration contains parameter values recommended by the BSW module vendor.</p> <p>The preconfiguredConfiguration contains values for those parameters which are fixed by the implementation and cannot be changed.</p> <p>These two EcucModuleConfigurationValues are used when the base EcucModuleConfigurationValues (as part of the base ECU configuration) is created to fill parameters with initial values.</p>	
<b>M2 Parameter</b>	
ECUCDescriptionTemplate::EcucModuleConfigurationValues	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00124]

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdBswModules	
<b>BSW Parameter</b>		<b>BSW Type</b>
SoAdIf		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Specifies if the BSW module supports the Communication Interface APIs or not. Value true means that the APIs are supported. A module can have both Communication Interface APIs and Transport Protocol APIs (e.g. the PduR module).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00104]	

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdBswModules	
<b>BSW Parameter</b>		<b>BSW Type</b>
SoAdIfTriggerTransmit		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Specifies if the BSW module supports the TriggerTransmit API or not. Value true means that the API is supported.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00145]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdBswModules	
BSW Parameter		BSW Type
SoAdIfTxConfirmation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the BSW module supports the TxConfirmation API or not. Value true means that the API is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00106]

BSW Module	BSW Context	
SoAd	SoAd/SoAdBswModules	
BSW Parameter		BSW Type
SoAdLocalIpAddrAssignmentChg		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the BSW module supports the LocalIpAddrAssignmentChg API or not. Value true means that the API is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00143]

BSW Module	BSW Context	
SoAd	SoAd/SoAdBswModules	
BSW Parameter		BSW Type
SoAdSoConModeChg		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the BSW module supports the SoConModeChg API or not. Value true means that the API is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00107]

BSW Module		BSW Context	
SoAd		SoAd/SoAdBswModules	
BSW Parameter		BSW Type	
SoAdTp		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if the BSW module supports the TransportProtocol APIs or not. Value true means that the APIs are supported. A module can have both Communication Interface APIs and Transport Protocol APIs (e.g. the PduR module).			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_SoAd_00105]

BSW Module		BSW Context	
SoAd		SoAd/SoAdBswModules	
BSW Parameter		BSW Type	
SoAdUseCallerInfix		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if SoAd shall use (TRUE) the infix "SoAd" when calling an upper layer module function or not (FALSE). E.g. if SoAd UseCallerInfix is TRUE for the upper layer "ABC" then SoAd will call ABC_SoAdIfRxIndication() otherwise SoAd would call ABC_IfRxIndication().			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_SoAd_00128]

BSW Module		BSW Context	
SoAd		SoAd/SoAdBswModules	
BSW Parameter		BSW Type	
SoAdUseTypeInfix		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if SoAd shall use (TRUE) the API type infix "Tp" or "If" when calling an upper layer module function or not (FALSE). E.g. if SoAdUseTypeInfix is TRUE for the upper layer "ABC" then SoAd will call ABC_IfRxIndication(), otherwise SoAd would call ABC_RxIndication().			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_SoAd_00129]



BSW Module	BSW Context	
SoAd	SoAd	
BSW Parameter	BSW Type	
SoAdConfig	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR SoAd module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00103]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig	
BSW Parameter	BSW Type	
SoAdPduRoute	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Describes the path of a PDU from an upper layer of the SoAd to the socket in the TCP/IP stack for transmission. This PDU can consume meta data items of type SOCKET_CONNECTION_ID_16.		
Template Description		
Reference to a Pdu that is transmitted over a socket connection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPdulIdentifier.pduTriggering		
Mapping Rule		Mapping Type
The SoAdPduRoute container shall be created for every PduTriggering that is transmitted by the regarded ECU. The information whether the Pdu is received or transmitted over a Socket Connection shall be derived from the PduTriggering element. The PduTriggering element contains references to IPduPorts of an EcuInstance. The IPduPort element contains a communication Direction.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00007]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdPduRoute	
BSW Parameter	BSW Type	
SoAdPduRouteDest	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Specifies the PDU route destination.		
Template Description		
<p><b>ApplicationEndpoint:</b> An application endpoint is the endpoint on an Ecu in terms of application addressing (e.g. socket). The application endpoint represents e.g. the listen socket in client-server-based communication.</p> <p><b>StaticSocketConnection.IPdulIdentifier:</b> Assignment of IPdulIdentifiers that are transmitted over the static SocketConnection.</p>		
M2 Parameter		





SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::ApplicationEndpoint, System Template::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier	
Mapping Rule	Mapping Type
<p>SOME/IP communication: If the regarded EcuInstance that transmits the PduTriggering is referenced by an ApplicationEndpoint that in turn is referenced by a ProvidedServiceInstance that has a relationship to the PduTriggering via a PduActivationRoutingGroup and this Application Endpoint contains a maxNumberOfConnections setting then this container shall be created as many times as the maxNumberOfConnections value indicates.</p> <p>StaticSocketConnection: If the PduTriggering that is transmitted by the Ecu has a relationship to a StaticSocketConnection via a SoConIPduIdentifier then this container shall be created once for this PduTriggering.</p>	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00119]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdPduRoute/SoAdPduRouteDest
BSW Parameter	BSW Type
SoAdTxPduHeaderId	ECUC-INTEGER-PARAM-DEF
BSW Description	
ID to be sent on the TCP/IP connection if the PDU header option is enabled.	
Template Description	
If multiple Pdus are transmitted over the same connection this headerId can be used to distinguish between the different Pdus.	
For the constraints on constructing the headerId for SOME/IP also see PRS_SOMEIP_00245.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPduIdentifier.headerId	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00120]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdPduRoute/SoAdPduRouteDest
BSW Parameter	BSW Type
SoAdTxRoutingGroupRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to the routing group.	
Template Description	
Group of Pdus that can be activated or deactivated for transmission over a socket connection.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup	
Mapping Rule	Mapping Type
If the PduTriggering for which the SoAdPduRoute is created is referenced by a SoConIPdu Identifier that in turn has a relationship to a PduActivationRoutingGroup then this reference shall point to the SoAdRoutingGroup that is derived from the PduActivationRoutingGroup.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00123]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdPduRoute/SoAdPduRouteDest	
BSW Parameter		BSW Type
SoAdTxSocketConnOrSocketConnBundleRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
Choice Reference to a SocketConnection or to a SocketConnectionGroup on which the PDU is to be sent on. The reference to a SocketConnectionGroup shall only be used for upper layers with IF API.		
Template Description		
<b>StaticSocketConnection:</b> Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.		
<b>ProvidedServiceInstance.localUnicastAddress:</b> The local address over which the PSI is provided (udp, tcp or both).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection, System Template::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.localUnicastAddress		
Mapping Rule		Mapping Type
SOME/IP Communication: The PduTriggering for which the SoAdPduRoute is created is referenced by a SoConIPdulIdentifier that in turn has a relationship to a PduActivationRouting Group. The PduActivationRoutingGroup is aggregated by a ProvidedServiceInstance (directly or via the EventHandler). The ProvidedServiceInstance points to a localUnicastAddress. For this localUnicastAddress a SocketConnectionGroup was created that shall be referenced here.  StaticSocketConnection: The PduTriggering for which the SoAdPduRoute is created is referenced by a SoConIPdulIdentifier that in turn has a relationship to a StaticSocketConnection. The Static SocketConnection is aggregated by a SocketAddress for which the SocketConnectionGroup was created that shall be referenced here.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00034]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdPduRoute/SoAdPduRouteDest	
BSW Parameter		BSW Type
SoAdTxUdpTriggerMode		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Specifies whether a PDU triggers the transmission of the nPduUdpTxBuffer. If this parameter is set to TRIGGER_NEVER, So Ad shall use an nPduUdpTxBuffer for the related socket connection. nPduUdpTxBuffer can only be used for upper layers with IF API, i.e. this parameter shall only be set to TRIGGER_NEVER if all upper layers belonging to the related socket connection have SoAdTxUpperLayerType set to "IF". This parameter is only relevant for UDP connections.		
Template Description		
Defines whether the referenced Pdu contributes to the triggering of the socket transmission if Pdu collection is enabled for this socket.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPdulIdentifier.pduCollectionTrigger		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00136]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdPduRoute/SoAdPduRouteDest	
BSW Parameter	BSW Type	
SoAdTxUdpTriggerTimeout	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies the timeout in [s] the nPduUdpTxBuffer shall be transmitted at the latest after this PDU is put into the buffer. This optional parameter is only relevant if SoAdTxUdpTriggerMode is TRIGGER_NEVER.		
Template Description		
Defines the timeout in seconds the PDU collection shall be transmitted at the latest after this PDU has been put into the buffer.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPduIdentifier.pduCollectionPduTimeout		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00150]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdPduRoute	
BSW Parameter	BSW Type	
SoAdTxPduCollectionSemantics	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Specifies if this PDU shall be collected using a queued or last-is-best semantics. This parameter is only relevant if the PDU collection feature is enabled. Shall only be set to SOAD_COLLECT_LAST_IS_BEST if the related upper layer is configured with SoAdIfTriggerTransmit set to TRUE.		
Template Description		
Specifies if the referenced PduTriggering shall be collected using a queued (i.e. all PDU instances) or last-is-best (i.e. only the last PDU instance) semantics. If this attribute is not present the behavior of "queued" is assumed.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPduIdentifier.pduCollectionSemantics		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00160]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdPduRoute/SoAdTxPduCollectionSemantics	
BSW Parameter	BSW Type	
SOAD_COLLECT_LAST_IS_BEST	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
The PDU data will be fetched via <Up>_[SoAd][If]TriggerTransmit just before the transmission executes.		
Template Description		
Only the latest PDU instances are transmitted.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduCollectionSemanticsEnum.lastIsBest		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdPduRoute/SoAdTxPduCollectionSemantics
BSW Parameter	BSW Type
SOAD_COLLECT_QUEUED	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The PDU data will instantly be stored in the context of the SoAd_IfTransmit API.	
Template Description	
All instances of PDUs are transmitted.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduCollectionSemanticsEnum.queued	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdPduRoute
BSW Parameter	BSW Type
SoAdTxPdulId	ECUC-INTEGER-PARAM-DEF
BSW Description	
Tx PDU ID of the PDU coming from the PDU Router.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00031]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdPduRoute
BSW Parameter	BSW Type
SoAdTxPduRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to the global PDU structure	
Template Description	
Reference to a Pdu that is transmitted over a socket connection.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPdulIdentifier.pduTriggering	
Mapping Rule	Mapping Type
This SoAdTxPduRef reference shall be derived from the PduTriggering that is referenced by the SoConIPdulIdentifier.	full





Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00030]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdPduRoute	
BSW Parameter	BSW Type	
SoAdTxUpperLayerType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Specifies the upper layer interface type (must be "IF" in case of multiple PduRoutes).		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering.iPdu		
Mapping Rule		Mapping Type
The SoAdTxUpperLayerType parameter can be derived from the actual type of the PDU: DcmIPdu -> "Tp" UUDT DcmIPdu: "If" (according to [SWS_Dcm_01101]) ISignalIPdu -> "If" if the Pdu Triggering referring to the ISignalIPdu is NOT referenced by a TpConnection, "Tp" if the Pdu Triggering referring to the ISignalIPdu is referenced by a TpConnection. NmPdu -> "If" General PurposePdu with category SD -> "If" GeneralPurposePdu with category DoIP -> "If" for UDP, "Tp" for TCP GeneralPurposePdu with category GLOBAL_TIME -> "If" GeneralPurposeIPdu with category = XCP -> "If" UserDefinedIPdu: "If" if CddPduRApiType=IF, "Tp" if CddPduRApiType=TP UserDefinedPdu: "If" if CddPduRApiType=IF, "Tp" if CddPduRApiType=TP MultiplexedIPdu: "If" ContainerIPdu: "If" SecuredIPdu: "If" (see limitation in AUTOSAR_SWS_SecureOnboard Communication)		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00118]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig	
BSW Parameter	BSW Type	
SoAdRoutingGroup	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Each container describes a specific routing group which can be enabled or disabled. A routing group consists of PDUs. Routing of PDUs can either be forwarding of PDUs from the upper layer to a TCP or UDP socket of the TCP/IP stack specified by a SoAdPduRoute or the other way around specified by a SoAdSocketRoute.		
Template Description		
Group of Pdu that can be activated or deactivated for transmission over a socket connection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup		
Mapping Rule		Mapping Type
The SoAdRoutingGroup container shall be created for every PduActivationRoutingGroup element that is available in the Ecu Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00109]

BSW Module		BSW Context	
SoAd		SoAd/SoAdConfig/SoAdRoutingGroup	
BSW Parameter		BSW Type	
SoAdRoutingGroupId		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Unique ID of Routing Group			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_SoAd_00121]

BSW Module		BSW Context	
SoAd		SoAd/SoAdConfig/SoAdRoutingGroup	
BSW Parameter		BSW Type	
SoAdRoutingGroupsEnabledAtInit		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
If set to true this routing group will be enabled after initializing the SoAd module (i.e. enabled in the SoAd_Init function).			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_SoAd_00122]

BSW Module		BSW Context	
SoAd		SoAd/SoAdConfig/SoAdRoutingGroup	
BSW Parameter		BSW Type	
SoAdRoutingGroupTxTriggerable		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if the If-TxPDUs related to the PduRouteDest containers referenced by this routing group can be triggered via SoAd_IfRoutingGroupTransmit (TRUE) or not (FALSE).			
Template Description			
This attribute defines the type of a RoutingGroup. There are RoutingGroups that activate the data path for unicast or multicast events of an event group. And there are RoutingGroups that activate the data path for initial events that are triggered, namely events that are sent out on the server side after a client got subscribed. Please note that this attribute is only valid for event communication (Sender Receiver communication) and shall be omitted in MethodActivationRoutingGroups.			
M2 Parameter			
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup.eventGroupControlType			
Mapping Rule			Mapping Type
The SoAdRoutingGroupTxTriggerable parameter shall be derived from the eventGroupControlType enumeration. If triggerUnicast or activationAndTriggerUnicast is set than this parameter shall be set to true.			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_SoAd_00146]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig	
BSW Parameter	BSW Type	
SoAdSocketConnectionGroup	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
<p>Specifies the configuration of a socket connection group, i.e. specifies the socket connections belonging to the group and the parameters which are common for all socket connections of the group. A socket connection specifies how data can be received and transmitted via a TCP or UDP socket.</p>		
Template Description		
<p><b>ProvidedServiceInstance.localUnicastAddress:</b> The local address over which the PSI is provided (udp, tcp or both).</p> <p><b>ConsumedServiceInstance.localUnicastAddress:</b> The local address over which the CSI is consumed (udp, tcp or both).</p> <p><b>StaticSocketConnection:</b> Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.</p>		
M2 Parameter		
<p>SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.localUnicastAddress, System Template::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.localUnicastAddress, System Template::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection</p>		
Mapping Rule		Mapping Type
<p>Unicast SocketConnectionGroup rules: - SOME/IP Communication without configured remote UnicastAddress: Collect all ProvidedServiceInstances and ConsumedServiceInstances that are pointing to the same localUnicastAddress of the regarded Ecu and create a SoAdConnection Group for the referenced SocketAddress. Each relevant SocketAddress aggregates the referenced ApplicationEndpoint and points with the connector reference to the Ecu for which the Ecu Configuration is created.</p> <p>- SOME/IP Communication with configured remoteUnicastAddress: Collect all ProvidedService Instances and ConsumedServiceInstances that are pointing to the same localUnicastAddress and to the same remoteUnicastAddress and create a SoAdConnectionGroup for the referenced Socket Address. Each relevant SocketAddress aggregates the referenced ApplicationEndpoint that is referenced by the localUnicastAddress and points with the connector reference to the Ecu for which the Ecu Configuration is created.</p> <p>- StaticSocketConnection: Create a SocketConnectionGroup for each StaticSocketConnection that is aggregated by an ApplicationEndpoint of the regarded Ecu or points with the remoteUnicast Address to an ApplicationEndpoint of the regarded Ecu.</p> <p>Multicast SocketConnectionGroup rules: - Server side: If a ProvidedServiceInstance points with the localUnicastAddress to an ApplicationEndpoint that in turn is aggregated by a SocketAddress that refers the regarded EcuInstance and this ProvidedServiceInstance contains an EventHandler that contains an eventMulticastRef then a multicast SocketConnectionGroup shall be created. The local Address of the SocketConnectionGroup shall be the address that is derived from the ProvidedServiceInstance.localUnicast reference. The remote Address of the SocketConnection Group shall be the multicastAddress that is derived from EventHandler.eventMulticastAddress.</p> <p>- Client side: If a ConsumedServiceInstance points with the localUnicastAddress to an Application Endpoint that in turn is aggregated by a SocketAddress that refers the regarded EcuInstance and this ConsumedServiceInstance contains a ConsumedEventGroup that contains an eventMulticast Ref then a multicast SocketConnectionGroup shall be created. The local Address of the Socket ConnectionGroup shall be derived from the ApplicationEndpoint that is referenced by the event MulticastAddress reference. The remote Address shall be derived from the ApplicationEndpoint that is referenced by ProvidedServiceInstance.localUnicastAddress.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00130]



BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup	
BSW Parameter		BSW Type
SoAdPduHeaderEnable		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables the transmission of the PDU header (ID, length) on this socket connection. TRUE: add SoAd PDU header before PDU data FALSE: No SoAd PDU header is used		
Template Description		
If multiple Pdus are transmitted over the same connection this headerId can be used to distinguish between the different Pdus. For the constraints on constructing the headerId for SOME/IP also see PRS_SOMEIP_00245.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPdulIdentifier.headerId		
Mapping Rule		Mapping Type
If a SoConIPdulIdentifier element has a headerId set to a value and this SoConIPdulIdentifier is referenced by a PduActivationGroup that is aggregated by a relevant ProvidedServiceInstance/ConsumedServiceInstance/EventHandler/ConsumedEventGroup then this parameter shall be set to true. If a StaticSocketConnection refers to a SoConIPdulIdentifier element that has a headerId set to a value then this parameter shall be set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00131]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup	
BSW Parameter		BSW Type
SoAdSocketAutomaticSoConSetup		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the setup of the socket connection shall be done automatically (TRUE) or manually (FALSE) via SoAd_OpenSoCon() and SoAd_CloseSoCon().		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00110]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup	
BSW Parameter		BSW Type
SoAdSocketConnection		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the socket connection (Id and remote address information). Note: Parameters which are common to all socket connections of a socket connection group are specified directly at the group.		
Template Description		





<p><b>ApplicationEndpoint.maxNumberOfConnections:</b> This attribute defines the maximal number of clients the Server is able to deal with in case of Service Discovery.</p> <p><b>StaticSocketConnection:</b> Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.</p> <p><b>ProvidedServiceInstance.remoteMulticastSubscriptionAddress:</b> This reference defines the remote multicast subscribed addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime.</p> <p><b>ProvidedServiceInstance.remoteUnicastAddress:</b> This reference defines the remote addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::ApplicationEndpoint.maxNumberOfConnections, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.remoteMulticastSubscriptionAddress, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.remoteUnicastAddress	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<p>SOME/IP communication without configured remoteUnicastAddress and/or remoteMulticastSubscriptionAddress: The SocketConnectionBundle is created for an ApplicationEndpoint aggregated by a SocketAddress that contains a connector reference to the regarded Ecu. The relevant ApplicationEndpoint is referenced by the localUnicastAddress reference from ProvidedServiceInstances/ConsumedServiceInstances or by the eventMulticastSubscriptionAddress from ConsumedServiceInstance. The relevant ApplicationEndpoint has the attribute maxNumberOfConnections that defines how many SocketConnections inside the SocketConnectionBundle need to be created. If this attribute is not set then only a single SocketConnection shall be created. The remotePort of each created SocketConnection shall be set to 0 and the IP Address to ANY.</p> <p>SOME/IP communication with configured remoteUnicastAddress and/or remoteMulticastSubscriptionAddress: The SocketConnectionBundle is created for an ApplicationEndpoint aggregated by a SocketAddress that contains a connector reference to the regarded Ecu. The relevant ApplicationEndpoint is referenced by the localUnicastAddress reference from ProvidedServiceInstances/ConsumedServiceInstances. For each ProvidedServiceInstance/ConsumedServiceInstance that has a remoteUnicastAddress and/or remoteMulticastSubscriptionAddress defined one single SocketConnection shall be defined. The remotePort of each created SocketConnection shall be derived from the ApplicationEndpoint/NetworkEndpoint combination that is referenced by the remoteUnicastAddress / remoteMulticastSubscriptionAddress.</p> <p>StaticSocketConnection: If the SocketConnectionBundle was created from a StaticSocketConnection then this SocketConnectionBundle shall always contain exactly one SocketConnection.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00009]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketConnection
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Socket connection identifier used as SoConId in the interaction with upper layers.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00016]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketConnection	
BSW Parameter	BSW Type	
SoAdSocketRemoteAddress	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Subcontainer of SoAdSocketConnection to specify the remote address (IP address and port) for a socket connection. If SoAdSocketRemoteAddress is not specified the remote address has to be set by the upper layer via SoAd_SetRemoteAddr().		
Template Description		
<p><b>ConsumedServiceInstance.remoteUnicastAddress:</b> This reference defines the remote address where the service provider is located. This reference shall ONLY be used if the remote address is determined from the configuration and not at runtime from the Service Discovery.</p> <p><b>ProvidedServiceInstance.remoteUnicastAddress:</b> This reference defines the remote addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime.</p> <p><b>StaticSocketConnection.remoteAddress:</b> RemoteAddress of the static SocketConnection.</p> <p><b>ProvidedServiceInstance.remoteMulticastSubscriptionAddress:</b> This reference defines the remote multicast subscribed addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime.</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.remoteUnicastAddress, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.remoteUnicastAddress, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.remoteAddress, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.remoteMulticastSubscriptionAddress		
Mapping Rule		Mapping Type
<p>SOME/IP Communication without configured remoteUnicastAddress and remoteMulticastSubscriptionAddress: If neither remoteUnicastAddress nor remoteMulticastSubscriptionAddress is used it means that the remoteUnicastAddress is derived via Service Discovery at runtime. In this case the remote Port shall be set to 0 and the IP Address to ANY.</p> <p>SOME/IP Communication with configured remoteUnicastAddress and/or remoteMulticastSubscriptionAddress: If the remoteUnicastAddress and/or remoteMulticastSubscriptionAddress is used the remoteAddressPort and the remote IP Address shall be derived from the referenced ApplicationEndpoint.</p> <p>StaticSocketConnection: In case of the StaticSocketConnection the remoteAddressPort and IP Address shall be derived from the ApplicationEndpoint that is aggregated by the SocketAddress that in turn is referenced by the StaticSocketConnection.remoteAddress.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00113]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketConnection/SoAdSocketRemoteAddress	
BSW Parameter	BSW Type	
SoAdSocketRemoteIpAddress	ECUC-STRING-PARAM-DEF	
BSW Description		
IP address of remote node. The configured address must be of the same TcpIpDomainType (i.e. IPv4 or IPv6) as the TcpIpLocalAddr referred by SoAdSocketLocalAddressRef . To accept any remote IP address, set SoAdSocketRemoteIpAddress to "ANY". See message acceptance policy for more details.		
Template Description		





<p><b>ProvidedServiceInstance.remoteUnicastAddress:</b> This reference defines the remote addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime.</p> <p><b>ConsumedServiceInstance.remoteUnicastAddress:</b> This reference defines the remote address where the service provider is located. This reference shall ONLY be used if the remote address is determined from the configuration and not at runtime from the Service Discovery.</p> <p><b>StaticSocketConnection.remoteAddress:</b> RemoteAddress of the static SocketConnection.</p> <p><b>ProvidedServiceInstance.remoteMulticastSubscriptionAddress:</b> This reference defines the remote multicast subscribed addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.remoteUnicastAddress, System Template::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.remoteUnicastAddress, System Template::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.remoteAddress, System Template::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.remoteMulticastSubscriptionAddress	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<p>SOME/IP Communication without configured remoteUnicastAddress and remoteMulticastSubscriptionAddress: If neither remoteUnicastAddress nor remoteMulticastSubscriptionAddress is used it means that the remoteAddress is derived via ServiceDiscovery at runtime. In this case this attribute shall be set to ANY.</p> <p>SOME/IP Communication with configured remoteUnicastAddress and/or remoteMulticastSubscriptionAddress: If the remoteUnicastAddress is used the remoteAddress IP Address shall be derived from the referenced ApplicationEndpoint that in turn refers a NetworkEndpoint that contains the searched IP Address.</p> <p>StaticSocketConnection: In case of the StaticSocketConnection the remoteAddress shall be derived from the ApplicationEndpoint that is aggregated by the SocketAddress that in turn is referenced by the StaticSocketConnection.remoteAddress. The ApplicationEndpoint refers to a NetworkEndpoint that contains the searched IP Address.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00019]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketConnection/SoAdSocketRemoteAddress
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketRemotePort	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Remote UDP or TCP port used for this connection. To accept any remote port, set SoAdSocketRemotePort to 0. See message acceptance policy for more details.	
<b>Template Description</b>	
<p><b>ProvidedServiceInstance.remoteUnicastAddress:</b> This reference defines the remote addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime.</p> <p><b>ConsumedServiceInstance.remoteUnicastAddress:</b> This reference defines the remote address where the service provider is located. This reference shall ONLY be used if the remote address is determined from the configuration and not at runtime from the Service Discovery.</p> <p><b>StaticSocketConnection.remoteAddress:</b> RemoteAddress of the static SocketConnection.</p> <p><b>ProvidedServiceInstance.remoteMulticastSubscriptionAddress:</b> This reference defines the remote multicast subscribed addresses of service consumers. This reference shall ONLY be used if the remote address of the clients is determined from the configuration and not at runtime.</p>	
<b>M2 Parameter</b>	





SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance. <a href="#">remoteUnicastAddress</a> , System SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance. <a href="#">remoteUnicastAddress</a> , System SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection. <a href="#">remoteAddress</a> , System SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance. <a href="#">remoteMulticastSubscriptionAddress</a>	
Mapping Rule	Mapping Type
<p>SOME/IP Communication without configured <a href="#">remoteUnicastAddress</a> and <a href="#">remoteMulticastSubscriptionAddress</a>: If neither <a href="#">remoteUnicastAddress</a> nor <a href="#">remoteMulticastSubscriptionAddress</a> is used it means that the <a href="#">remotePort</a> is derived via <a href="#">ServiceDiscovery</a> at runtime. In this case this attribute shall be set to 0.</p> <p>SOME/IP Communication with configured <a href="#">remoteUnicastAddress</a> and/or <a href="#">remoteMulticastSubscriptionAddress</a>: If the <a href="#">remoteUnicastAddress</a> and/or <a href="#">remoteMulticastSubscriptionAddress</a> is used the <a href="#">remoteAddressPort</a> shall be derived from the referenced <a href="#">ApplicationEndpoint</a>.</p> <p><a href="#">StaticSocketConnection</a>: In case of the <a href="#">StaticSocketConnection</a> the <a href="#">remoteAddressPort</a> shall be derived from the <a href="#">ApplicationEndpoint</a> that is aggregated by the <a href="#">SocketAddress</a> that in turn is referenced by the <a href="#">StaticSocketConnection.remoteAddress</a>.</p>	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00020]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup	
BSW Parameter		BSW Type
SoAdSocketDifferentiatedServicesField		ECUC-INTEGER-PARAM-DEF
BSW Description		
The 6-bit Differentiated Service Field in the IP headers may be used for classifying network traffic. If not set a value of zero is used to indicate packets that have not been classified.		
Template Description		
The 6-bit Differentiated Service Field in the IP headers may be used for classifying network traffic. If not set a value of zero is used to indicate packets that have not been classified.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress. <a href="#">differentiatedServiceField</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00158]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup	
BSW Parameter		BSW Type
SoAdSocketFlowLabel		ECUC-INTEGER-PARAM-DEF
BSW Description		
The 20-bit Flow Label field in the IPv6 header may be used by a source to label sequences of packets for which it requests special handling by the IPv6 routers, such as non-default quality of service. If not set a Flow Label of zero is used to indicate packets that have not been labeled.		
Template Description		
The 20-bit Flow Label field in the IPv6 header may be used by a source to label sequences of packets for which it requests special handling by the IPv6 routers, such as non-default quality of service. If not set a Flow Label of zero is used to indicate packets that have not been labeled.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress. <a href="#">flowLabel</a>		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00157]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup
BSW Parameter	BSW Type
SoAdSocketFramePriority	ECUC-INTEGER-PARAM-DEF
BSW Description	
Specifies the priority of the Ethernet frame. If IEEE 802.1Q VLAN Tags are used, the specified priority will be used in the VLAN Tag PCP field. If this optional parameter is not available the default priority specified in the Tcplp module is used.	
Template Description	
<p><b>VlanMembership.defaultPriority:</b> Standard output-priority outgoing Frames will be tagged with.</p> <p>Defines the priority that received frames are assigned together with the VLAN Id (defaultVlan). The values from 0 (best effort) to 7 (highest) are allowed.</p> <p>In case modifyVlan and an already tagged received frame, the actual priority of the received frame is not modified.</p> <p><b>ConsumedEventGroup.priority:</b> Defines the frame priority where values from 0 (best effort) to 7 (highest) are allowed.</p> <p><b>NetworkEndpoint:</b> The network endpoint defines the network addressing (e.g. IP-Address or MAC multicast address).</p> <p><b>ApplicationEndpoint.priority:</b> Defines the frame priority where values from 0 (best effort) to 7 (highest) are allowed.</p> <p><b>ProvidedServiceInstance.priority:</b> Defines the frame priority where values from 0 (best effort) to 7 (highest) are allowed.</p>	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership.defaultPriority, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedEventGroup.priority, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpoint, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::ApplicationEndpoint.priority, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.priority	
Mapping Rule	Mapping Type
It shall be considered that the priority in the SoAd is defined only once per SocketConnection Group. The SocketConnections in the system description shall be created adequate.	full
The priority in the system description can be defined at the ConsumedEventGroup, ProvidedServiceInstance, at the ApplicationEndpoint and at the NetworkEndpoint. A default priority can be set at CouplingPort.VlanMembership. The priority defined on the ProvidedServiceInstance or ConsumedEventGroup overrides the priority defined on the ApplicationEndpoint. The priority on the ApplicationEndpoint overrides the priority on the NetworkEndpoint. The priority on the Network Endpoint overrides the default priority.	
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00138]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup
BSW Parameter	BSW Type
SoAdSocketIpAddrAssignmentChgNotification	ECUC-BOOLEAN-PARAM-DEF
BSW Description	





Specifies if the local IP address assignment change notification callback function of the upper layer shall be called if the assignment of the local IP address used by this socket connection changes.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00112]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketLocalAddressRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Local IP address and interface used for this connection.	
<b>Template Description</b>	
<p><b>ProvidedServiceInstance.localUnicastAddress:</b> The local address over which the PSI is provided (udp, tcp or both).</p> <p><b>ConsumedServiceInstance.remoteUnicastAddress:</b> This reference defines the remote address where the service provider is located. This reference shall ONLY be used if the remote address is determined from the configuration and not at runtime from the Service Discovery.</p> <p><b>SocketAddress.staticSocketConnection:</b> Definition of a static SocketConnection.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.localUnicastAddress, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.remoteUnicastAddress, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress.staticSocketConnection	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The SoAdSocketLocalAddressRef shall be derived from the attributes IPv4Configuration.ipv4Address or IPv6Configuration.ipv6Address from the NetworkEndpoint that is referenced by the ApplicationEndpoint that is aggregated by the SocketAddress referenced from the ProvidedServiceInstance, ConsumedServiceInstance or that aggregates the StaticSocket Connection.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00017]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketLocalPort	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Local UDP or TCP port used for this connection. If this parameter set to 0 SoAd requests TcpIpl to select an ephemeral port.	
<b>Template Description</b>	





<b>ProvidedServiceInstance.localUnicastAddress:</b> The local address over which the PSI is provided (udp, tcp or both).	
<b>ConsumedServiceInstance.localUnicastAddress:</b> The local address over which the CSI is consumed (udp, tcp or both).	
<b>SocketAddress.staticSocketConnection:</b> Definition of a static SocketConnection.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ProvidedServiceInstance.localUnicastAddress, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.localUnicastAddress, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress.staticSocketConnection	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The SoAdSocketLocalPort shall be derived from the value of the attribute TpPort.portNumber in the ApplicationEndpoint referenced from ProvidedServiceInstance/ConsumedServiceInstance in the role localUnicastAddress.  In case of a StaticSocketConnection the local port shall be derived from the ApplicationEndpoint that is aggregated by the SocketAddress that in turn aggregates the StaticSocketConnection.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00018]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketMsgAcceptanceFilterEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Specifies if the message acceptance filter is enabled (TRUE) or not (FALSE). Note: if a wildcard is used in SoAdSocket RemoteAddress AND SoAdSocketUdpListenOnly is FALSE, this parameter must be TRUE. Note: if multiple SoAdSocket Connections are configured for one SoAdSocketConnectionGroup, this parameter must be TRUE.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00137]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketPathMTUEnable	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Specifies if path MTU discovery shall be performed for this connection. If this optional parameter is not available the default behavior configured for the controller in the Tcplp module via the parameter TcplpV4PathMtuEnabled or TcplpV6PathMtuEnabled is applied.	
<b>Template Description</b>	
Defines whether the Path MTU Discovery shall be performed for the related socket.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress.pathMtuDiscoveryEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>







1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00156]

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SoAdSocketProtocol	ECUC-CHOICE-CONTAINER-DEF	
<b>BSW Description</b>		
Specifies the transport protocol and transport protocol specific parameters used for the socket connections of the socket connection group.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00139]	

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SoAdSocketTcp	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
Specifies that TCP is used as transport protocol for the socket connection group and parameters only related to TCP socket connections.		
<b>Template Description</b>		
An application endpoint is the endpoint on an Ecu in terms of application addressing (e.g. socket). The application endpoint represents e.g. the listen socket in client-server-based communication.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::ApplicationEndpoint		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Server Ecu: SoAdSocketTcp shall be derived from the ApplicationEndpoint (TpConfiguration) that is referenced by a ProvidedServiceInstance in the role localUnicastAddress. SoAdSocketTcp shall be created if TcpTp is used as Transport Protocol.  Client Ecu: SoAdSocketTcp shall be derived from the ApplicationEndpoint (TpConfiguration) that is referenced by a ConsumedServiceInstance in the role localUnicastAddress. SoAdSocketTcp shall be created if TcpTp is used as Transport Protocol.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00141]	

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SoAdSocketTCPOptionFilterRef	ECUC-REFERENCE-DEF	





BSW Description	
Specifies which TCP option filter shall be applied on the related socket.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00155]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp	
BSW Parameter		BSW Type
SoAdSocketTcpAutoConnectTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Specifies the time in seconds how long TCP connect attempts are repeated to reach SOAD_SOCON_ONLINE. This parameter is restricted to socket connection groups which are initiating a TCP connection and are under control of SoAd.		
Template Description		
Specifies the time in seconds how long TCP connect attempts are repeated to reach SOAD_SOCON_ONLINE. This attribute is restricted to socket connection groups which are initiating a TCP connection and are under control of SoAd.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.tcpConnectTimeout		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00174]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp	
BSW Parameter		BSW Type
SoAdSocketTcpImmediateTpTxConfirmation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If set to FALSE, SoAd notifies the TP upper layer via transmit confirmation after a Tcp Ack has been received. If set to TRUE, SoAd notifies the TP upper layer via transmit confirmation immediately after transmit has been accepted by TcpIp.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00147]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp	
BSW Parameter	BSW Type	
SoAdSocketTcpInitiate	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Specifies the initiator for this TCP connection. It will not be defined for UDP sockets. TRUE: This TCP connection is initiated by this module. FALSE: This TCP connection is to be initiated in the listen mode.		
Template Description		
Defines whether the local Address (that is aggregating the StaticSocketConnection) does a listen or a connect.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.tcpRole		
Mapping Rule		Mapping Type
<p>SOME/IP Communication: - Server Ecu: SoAdSocketTcpInitiate can be set to false here since Servers do not initiate Tcp connections by themselves. - Client Ecu: SoAdSocketTcpInitiate can be set to true if TcpTp is configured and the Ecu is in the client role.</p> <p>StaticSocketConnection: If StaticSocketConnection.tcpRole = connect then this attribute shall be set to TRUE. If StaticSocketConnection.tcpRole = listen then this attribute shall be set to TRUE.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00022]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp	
BSW Parameter	BSW Type	
SoAdSocketTcpKeepAlive	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Specifies to use the keep-alive mechanism for this connection. It will not be defined for UDP sockets. TRUE: This TCP connection will use the keep-alive mechanism. FALSE: This TCP connection will not use the keep-alive mechanism. Note: This parameter must not be set to TRUE if TcpTpKeepAliveEnabled is set to FALSE.		
Template Description		
Indicates if Keep-Alive messages are sent.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpTp.keepAlives		
Mapping Rule		Mapping Type
1:1 mapping		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00148]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp	
BSW Parameter	BSW Type	
SoAdSocketTcpKeepAliveInterval	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies the interval in seconds between subsequent keepalive probes.		
Template Description		
Specifies the interval in seconds between subsequent keepalive probes.		
M2 Parameter		





SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpTp. <a href="#">keepAliveInterval</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00152]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp
BSW Parameter	BSW Type
SoAdSocketTcpKeepAliveProbesMax	ECUC-INTEGER-PARAM-DEF
BSW Description	
Maximum number of times that TCP retransmits an individual data segment before aborting the connection.	
Template Description	
Maximum number of times that TCP retransmits an individual data segment before aborting the connection.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpTp. <a href="#">keepAliveProbesMax</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00151]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp
BSW Parameter	BSW Type
SoAdSocketTcpKeepAliveTime	ECUC-FLOAT-PARAM-DEF
BSW Description	
Specifies the time in seconds between the last data packet sent and the first keepalive probe.	
Template Description	
Specifies the time in seconds between the last data packet sent and the first keepalive probe.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpTp. <a href="#">keepAliveTime</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00153]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp
BSW Parameter	BSW Type
SoAdSocketTcpNoDelay	ECUC-BOOLEAN-PARAM-DEF
BSW Description	





Specifies not to use the congestion control mechanism for this connection. It will not be defined for UDP sockets. TRUE: This TCP connection will NOT use congestion control. FALSE: This TCP connection will use congestion control. If the optional parameter is not enabled, the default behavior configured for TcpIp via the parameter TcpIpTcpNagleEnabled is applied. Note: This parameter must not be set to FALSE if TcpIpTcpNagleEnabled is set to FALSE.	
<b>Template Description</b>	
Indicates if Nagle's Algorithm is used.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpTp.naglesAlgorithm	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If TcpTp.naglesAlgorithm in the System Extract is set to true then SoAdSocketTcpNoDelay shall be set to false. If TcpTp.naglesAlgorithm in is set to false then SoAdSocketTcpNoDelay shall be set to true. If TcpTp.naglesAlgorithm in the System Extract is not defined then SoAdSocketTcpNoDelay shall not be set.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00023]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketTcpRetransmissionTimeout	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Timeout in [s] before an unacknowledged TCP segment is sent again. If the timeout is set to INF, no TCP segments shall be retransmitted.	
<b>Template Description</b>	
Defines the timeout in seconds before an unacknowledged TCP segment is sent again. If the tcpRetransmissionTimeout is not defined or set to "INF", no TCP segments shall be re-transmitted.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpTp.tcpRetransmissionTimeout	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00171]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketTcpTlsConnectionRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
If set the TCP socket is assigned to a TLS connection. The SoAd need to call Tcpip_ChangeParameter with the reference to the TLS connection as the parameter.	
<b>Template Description</b>	
This meta-class has the ability to represent a crypto service mapping for the socket-based configuration of Transport Layer Security (TLS).	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoServiceMapping	
<b>Mapping Rule</b>	<b>Mapping Type</b>





Create this reference if there is an associated TcpIpTlsConnection derived out of the TlsCrypto ServiceMapping.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00163]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketTcp	
BSW Parameter	BSW Type	
SoAdSocketTcpTxQuota	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Specifies the maximum amount of bytes (PDU data provided by the upper layer and PDU Header if used) the SoAd may queue for transmission via TCP at the TcpIp module for each socket connection of this socket connection group. Rationale: prohibits that a socket connection consumes all available transmit buffers at the TcpIp and blocks transmissions via other socket connections. If the optional parameter is not enabled, the amount of data is not limited.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SoAd_00142]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol	
BSW Parameter	BSW Type	
SoAdSocketUdp	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Specifies that UDP is used as transport protocol for the socket connection group and parameters only related to UDP socket connections.		
Template Description		
An application endpoint is the endpoint on an Ecu in terms of application addressing (e.g. socket). The application endpoint represents e.g. the listen socket in client-server-based communication.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::ApplicationEndpoint		
Mapping Rule	Mapping Type	
Server Ecu: SoAdSocketTcp shall be derived from the ApplicationEndpoint (TpConfiguration) that is referenced by a ProvidedServiceInstance in the role localUnicastAddress. SoAdSocketTcp shall be created if TcpTp is used as Transport Protocol.  Client Ecu: SoAdSocketTcp shall be derived from the ApplicationEndpoint (TpConfiguration) that is referenced by a ConsumedServiceInstance in the role localUnicastAddress. SoAdSocketTcp shall be created if TcpTp is used as Transport Protocol.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SoAd_00140]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketUdp	
BSW Parameter	BSW Type	
SoAdSocketUdpAliveSupervisionTimeout	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies the time in [s] a UDP socket connection remains in the mode SOAD_SOCON_ONLINE after the latest reception of a frame from the remote peer specified by the remote address. If this optional parameter is not enabled UDP Alive Supervision is deactivated for the related socket connection group.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SoAd_00149]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketUdp	
BSW Parameter	BSW Type	
SoAdSocketUdpChecksumEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Specifies if UDP checksum calculation shall be enabled (TRUE) or skipped (FALSE) on the related socket. FALSE implies that the upper layer of the socket connection is either capable to handle malformed messages or applies a checksum mechanism itself.		
Template Description		
Specifies if UDP checksum handling shall be enabled (udpChecksumEnabled) or skipped (udpChecksumDisabled) on the related socket connection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress.udpChecksumHandling		
Mapping Rule	Mapping Type	
If udpChecksumHandling.udpChecksumEnabled is set the value shall be TRUE; if udpChecksumHandling.udpChecksumDisabled is set the value shall be FALSE;	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_SoAd_00159]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketUdp	
BSW Parameter	BSW Type	
SoAdSocketUdpListenOnly	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Specifies if the socket connection group is only used for reception (TRUE) or used for both reception and transmission (FALSE).		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	





Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00024]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketUdp
BSW Parameter	BSW Type
SoAdSocketUdpStrictHeaderLenCheckEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Specifies if UDP messages shall be dropped (TRUE) if the length of all contained PDUs does not match the length of the whole message or not (FALSE). Shall only be set to TRUE if SoAdPduHeaderEnable is also set to TRUE.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00154]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketUdp
BSW Parameter	BSW Type
SoAdSocketUdpTriggerTimeout	ECUC-FLOAT-PARAM-DEF
BSW Description	
Specifies the timeout in [s] a nPduUdpTxBuffer is waiting for a PDU with TriggerMode = TRIGGER_ALWAYS, i.e. when the timeout expires the nPduUdpTxBuffer is transmitted. Timer is reset after each UDP transmission. This optional parameter is only relevant if a nPduUdpTxBuffer is used.	
Template Description	
Defines the time in seconds which shall pass before a socket with Pdu collection enabled shall be transmitted to the lower layer after the first Pdu has been put into the socket buffer.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress.pduCollectionTimeout	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_SoAd_00133]

BSW Module	BSW Context
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup/SoAdSocketProtocol/SoAdSocketUdp
BSW Parameter	BSW Type
SoAdSocketnPduUdpTxBufferMin	ECUC-INTEGGER-PARAM-DEF
BSW Description	







<p>Specifies the amount of data in bytes (PDU data provided by the upper layer and PDU Header if used) the SoAd shall be able to buffer for data transmission via this socket connection in case the UDP message shall be buffered for transmission of multiple PDUs per UDP.</p> <p>Note: in case of a UDP socket and an upper layer with TP API is configured, the required buffer size can be determined automatically. This optional parameter is only relevant if a nPduUdpTxBuffer is used.</p>	
<b>Template Description</b>	
<p>Defines the maximum buffer size in Byte which shall be filled before a socket with Pdu collection enabled shall be transmitted to the lower layer.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress.pduCollectionMaxBufferSize	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00135]

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup	
<b>BSW Parameter</b>		<b>BSW Type</b>
SoAdSocketSoConModeChgBswMNotification		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
<p>Specifies if the BswM_SoAd_SoConModeChg notification shall be called in case of SoCon mode change</p>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SoAd_00173]

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdConfig/SoAdSocketConnectionGroup	
<b>BSW Parameter</b>		<b>BSW Type</b>
SoAdSocketSoConModeChgNotifUpperLayerRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
<p>Reference to an additional upper layer that shall receive socket connection state changes (although it is not a direct upper layer of the socket connection).</p>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SoAd_00161]

BSW Module		BSW Context	
SoAd		SoAd/SoAdConfig/SoAdSocketConnectionGroup	
BSW Parameter		BSW Type	
SoAdSocketSoConModeChgNotification		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if the SoCon mode change notification callback function of the upper layer shall be called in case of SoCon mode change.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_SoAd_00111]

BSW Module		BSW Context	
SoAd		SoAd/SoAdConfig/SoAdSocketConnectionGroup	
BSW Parameter		BSW Type	
SoAdSocketTpRxBufferMin		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Specifies the amount of data in bytes (PDU data for the upper layer and PDU Header if used) the SoAd shall at least be able to buffer for data reception via each socket connection of the socket connection group and using an upper layer with TP. Note: in case of a TCP socket where PduHeaderMode is used and an upper layer with IF-API, the required buffer size can be determined automatically.			
Template Description			
Minimum size of the TCP receive window in bytes.			
M2 Parameter			
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpTp. <a href="#">receiveWindowMin</a>			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_SoAd_00134]

BSW Module		BSW Context	
SoAd		SoAd/SoAdConfig	
BSW Parameter		BSW Type	
SoAdSocketRoute		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Describes the path of a PDU from a socket in the TCP/IP stack to an upper layer of the SoAd after reception in the TCP/IP Stack.			
Template Description			
Reference to a Pdu that is transmitted over a socket connection.			
M2 Parameter			
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPdulIdentifier. <a href="#">pduTriggering</a>			
Mapping Rule			Mapping Type





The SoAdSocketRoute container shall be created for every PduTriggering that is received by the regarded ECU. The information whether the Pdu is received or transmitted over a Socket Connection shall be derived from the PduTriggering element. The PduTriggering element contains references to IPduPorts of an EcuInstance. The IPduPort element contains a communication Direction.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00008]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketRoute	
BSW Parameter		BSW Type
SoAdRxPduHeaderId		ECUC-INTEGER-PARAM-DEF
BSW Description		
ID contained in the packet received on the TCP/IP connection if the PDU header option is enabled.		
Template Description		
If multiple Pdus are transmitted over the same connection this headerId can be used to distinguish between the different Pdus. For the constraints on constructing the headerId for SOME/IP also see PRS_SOMEIP_00245.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPdulIdentifier.headerId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00036]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketRoute	
BSW Parameter		BSW Type
SoAdRxSocketConnOrSocketConnBundleRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
Choice Reference to a SocketConnection or to a SocketConnectionGroup on which the PDU was received. The reference to a SocketConnectionGroup shall only be used for upper layers with IF API.		
Template Description		
<b>SocketAddress.staticSocketConnection:</b> Definition of a static SocketConnection.		
<b>ConsumedServiceInstance.localUnicastAddress:</b> The local address over which the CSI is consumed (udp, tcp or both).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress.staticSocketConnection, System Template::Fibex::Fibex4Ethernet::ServiceInstances::ConsumedServiceInstance.localUnicastAddress		
Mapping Rule		Mapping Type





<p>SOME/IP Communication: The PduTriggering for which the SoAdSocketRoute is created is referenced by a SoConIPduIdentifier that in turn has a relationship to a PduActivationRouting Group. The PduActivationRoutingGroup is aggregated by a ConsumedServiceInstance (directly or via the ConsumedEventGroup). The ConsumedServiceInstance points to a localUnicastAddress. For this localUnicastAddress a SocketConnectionGroup was created that shall be referenced here.</p> <p>StaticSocketConnection: The PduTriggering for which the SoAdSocketRoute is created is referenced by a SoConIPduIdentifier that in turn has a relationship to a StaticSocketConnection. The StaticSocketConnection is aggregated by a SocketAddress for which the SocketConnection Group was created that shall be referenced here.</p>	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00035]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketRoute
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdSocketRouteDest	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
<p>Describes the upper layer destination PDU for a message received on a TcpIp socket. This PDU can produce meta data items of type SOCKET_CONNECTION_ID_16.</p> <p>Multiple socket route destinations in the SoAdSocketRoute can only be used for upper layers of interface type (IF) and only for SoAdSocketRoute referring a SocketConnectionGroup. In this case SoAdRoutingGroups shall be used to map each SoAd SocketRouteDest uniquely to different socket connections of the SocketConnectionGroup.</p>	
<b>Template Description</b>	
Identification of Pdu content on a socket connection. This Identifier is required in case that multiple Pdus are transmitted over the same socket connection.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPduIdentifier	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The SoAdSocketRouteDest container shall always be created for a SoAdSocketRoute.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00114]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdConfig/SoAdSocketRoute/SoAdSocketRouteDest
<b>BSW Parameter</b>	<b>BSW Type</b>
SoAdRxPduId	ECUC-INTEGGER-PARAM-DEF
<b>BSW Description</b>	
This unique identifier is used for a receive cancellation request from an upper layer of the SoAd.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00116]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketRoute/SoAdSocketRouteDest	
BSW Parameter		BSW Type
SoAdRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the global PDU structure		
Template Description		
Reference to a Pdu that is transmitted over a socket connection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPdulIdentifier. <a href="#">pduTriggering</a>		
Mapping Rule		Mapping Type
The SoAdRxPduRef reference shall be derived from the PduTriggering that is referenced by the SoConIPdulIdentifier.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00038]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketRoute/SoAdSocketRouteDest	
BSW Parameter		BSW Type
SoAdRxRoutingGroupRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the routing group. Mandatory if the parent SoAdSocketRoute contains more than one SoAdSocketRouteDest."		
Template Description		
Group of Pdus that can be activated or deactivated for transmission over a socket connection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::PduActivationRoutingGroup		
Mapping Rule		Mapping Type
The SoAdRxRoutingGroupRef reference to SoAdRoutingGroups shall be derived from the PduActivationRoutingGroup that refers the SoConIPdulIdentifier.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SoAd_00117]

BSW Module	BSW Context	
SoAd	SoAd/SoAdConfig/SoAdSocketRoute/SoAdSocketRouteDest	
BSW Parameter		BSW Type
SoAdRxUpperLayerType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Specifies the upper layer interface type (must be "IF" in case of multiple RxPdus).		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::PduTriggering. <a href="#">iPdu</a>		
Mapping Rule		Mapping Type





The SoAdRxUpperLayerType parameter can be derived from the actual type of the PDU: DcmIPdu -> "Tp" UUDT DcmIPdu: "If" (according to [SWS_Dcm_01101]) ISignalIPdu -> "If" if ComIPdu Type=NORMAL, "Tp" if ComIPduType=TP NmPdu -> "If" GeneralPurposePdu with category SD -> "If" GeneralPurposePdu with category DoIP -> "If" for UDP, "Tp" for TCP GeneralPurposePdu with category GLOBAL_TIME -> "If" GeneralPurposeIPdu with category = XCP -> "If" UserDefined IPdu: "If" if CddPduRApiType=IF, "Tp" if CddPduRApiType=TP UserDefinedPdu: "If" if CddPdu RApiType=IF, "Tp" if CddPduRApiType=TP MultiplexedIPdu: "If" ContainerIPdu: "If" SecuredIPdu: "If" (see limitation in AUTOSAR_SWS_SecureOnboardCommunication)	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00115]

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SoAdGeneral	ECUC-PARAM-CONF-CONTAINER-DEF	
<b>BSW Description</b>		
This container contains all global configuration parameters of SoAd.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00003]	

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdGeneral	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SoAdDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		
Switches the development error detection and notification on or off.		
<ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00002]	

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdGeneral	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SoAdEnableSecurityEventReporting	ECUC-BOOLEAN-PARAM-DEF	
<b>BSW Description</b>		





Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00164]

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SoAdGetAndResetMeasurementDataApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables / Disables the Get and Reset Measurement Data API		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00162]	

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SoAdIPv6AddressEnabled		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Allows for increased memory allocation to store IPv6 addresses. TRUE: Enables support for IPv6 addresses FALSE: Only IPv4 addresses are supported		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00039]	

<b>BSW Module</b>	<b>BSW Context</b>	
SoAd	SoAd/SoAdGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SoAdMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Determines the frequency at which the SoAd_MainFunction() is called in [s].		
<b>Template Description</b>		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00062]

BSW Module	BSW Context	
SoAd	SoAd/SoAdGeneral	
BSW Parameter		BSW Type
SoAdRoutingGroupMax		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the maximum number of SoAd routing groups. Furthermore it defines the platform type used for RoutingGroupId Type. If SoAdRoutingGroupMax is not greater than 256, a uint8 is used, otherwise a uint16.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00127]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdGeneral	
BSW Parameter		BSW Type
SoAdSecurityEventRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to IdsMEvent elements representing the security events that the SoAd module shall report to the IdsM in case the corresponding security related event occurs (and if SoAdEnableSecurityEventReporting is set to "true"). The standardized security events in this container can be extended by vendor-specific security events.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00165]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdGeneral/SoAdSecurityEventRefs	
BSW Parameter		BSW Type
SOAD_SEV_DROP_MSG_RX_UDP_LENGTH		ECUC-REFERENCE-DEF
BSW Description		
SoAd dropped a message. The message contains at least one PDU which violates stack configuration and was received via a UDP socket . The violation relates to the length of the PDUs compared to the overall length of the message.		







<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00168]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdGeneral/SoAdSecurityEventRefs
<b>BSW Parameter</b>	<b>BSW Type</b>
SOAD_SEV_DROP_MSG_RX_UDP_SOCKET	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
SoAd received a UDP message which violates stack configuration and was dropped. No suitable socket connection matching to configuration was found.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00169]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdGeneral/SoAdSecurityEventRefs
<b>BSW Parameter</b>	<b>BSW Type</b>
SOAD_SEV_DROP_PDU_RX_TCP	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
SoAd dropped a PDU. The PDU violates stack configuration and was received via a TCP socket.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00166]

<b>BSW Module</b>	<b>BSW Context</b>
SoAd	SoAd/SoAdGeneral/SoAdSecurityEventRefs
<b>BSW Parameter</b>	<b>BSW Type</b>
SOAD_SEV_DROP_PDU_RX_UDP	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
SoAd dropped a PDU. The PDU violates stack configuration and was received via a UDP socket.	
<b>Template Description</b>	
<b>M2 Parameter</b>	





Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00167]

BSW Module	BSW Context	
SoAd	SoAd/SoAdGeneral/SoAdSecurityEventRefs	
BSW Parameter		BSW Type
SOAD_SEV_REJECTED_TCP_CONNECTION		ECUC-REFERENCE-DEF
BSW Description		
SoAd rejected a TCP connection. The connection request violates stack configuration.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00170]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdGeneral	
BSW Parameter		BSW Type
SoAdSoConMax		ECUC-INTEGGER-PARAM-DEF
BSW Description		
Specifies the maximum number of SoAd socket connections. Furthermore it defines the platform type used for SoAd_SoConIdType. If SoAdSoConMax is not greater than 256, a uint8 is used, otherwise uint16.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SoAd_00126]	

BSW Module	BSW Context	
SoAd	SoAd/SoAdGeneral	
BSW Parameter		BSW Type
SoAdVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activates the SoAd_GetVersionInfo() API. TRUE: Enables the SoAd_GetVersionInfo() API. FALSE: SoAd_GetVersionInfo() API is not included.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SoAd_00004]

### C.6.6 EthSM

<b>BSW Module</b>	<b>BSW Context</b>	
EthSM	EthSM	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSMGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the global parameter of the Ethernet State Manager.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSM_-00063]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSM	EthSM/EthSMGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSMDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSM_-00065]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSM	EthSM/EthSMGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSMDummyMode		ECUC-BOOLEAN-PARAM-DEF





<b>BSW Description</b>	
Disables the API to the Ethlf. The API to the ComM is available but the functionality is deactivated. The function calls from the ComM will be answered with the return value E_OK.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSM_-00079]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSM	EthSM/EthSMGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSMMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Specifies the period in seconds that the MainFunction has to be triggered with.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSM_-00066]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSM	EthSM/EthSMGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthSMVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables and disables the version info API.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthSM_-00092]

<b>BSW Module</b>	<b>BSW Context</b>	
EthSM	EthSM	
<b>BSW Parameter</b>		<b>BSW Type</b>





EthSMNetwork	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container contains the Ethernet network-specific parameters of each Ethernet network. It also contains the reference to combination of controller and transceiver assigned to an Ethernet network.	
<b>Template Description</b>	
The EthernetPhysicalChannel represents a VLAN or an untagged channel. An untagged channel is modeled as an Ethernet PhysicalChannel without an aggregated VLAN.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPhysicalChannel	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 For each EthernetPhysicalChannel the EcuInstance is connected to, one EthSMNetwork container is created.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSM_-00067]

<b>BSW Module</b>	<b>BSW Context</b>
EthSM	EthSM/EthSMNetwork
<b>BSW Parameter</b>	<b>BSW Type</b>
EthSMComMNetworkHandleRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Unique handle to identify one certain Ethernet network. Reference to one of the network handles configured for the ComM.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSM_-00068]

<b>BSW Module</b>	<b>BSW Context</b>
EthSM	EthSM/EthSMNetwork
<b>BSW Parameter</b>	<b>BSW Type</b>
EthSMDemEventParameterRefs	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthSM_-00106]

BSW Module	BSW Context	
EthSM	EthSM/EthSMNetwork/EthSMDemEventParameterRefs	
BSW Parameter		BSW Type
ETHSM_E_LINK_DOWN		ECUC-REFERENCE-DEF
BSW Description		
Reference to configured DEM event to report bus off errors for this Eth network.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSM_-00107]

BSW Module	BSW Context	
EthSM	EthSM/EthSMNetwork	
BSW Parameter		BSW Type
EthSMEthIfControllerRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to EthIfCtrl container where a ETH controller and transceiver (optional) combination is configured.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSM_-00105]

BSW Module	BSW Context	
EthSM	EthSM/EthSMNetwork	
BSW Parameter		BSW Type
EthSMForwardSilentCommunicationEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>Specifies if a request COMM_SILENT_COMMUNICATION shall be forwarded to the corresponding EthIfController.</p> <p>If the parameter is set to TRUE and EthSM in called with COMM_SILENT_COMMUNICATION, then EthSM call the corresponding EthIfController with ETH_MODE_ACTIVE_TX_OFFLINE to reject any transmission request. Therefore, only reception handling of Ethernet frames is performed.</p> <p>If the parameter is set to FALSE and EthSM in called with COMM_SILENT_COMMUNICATION, then EthSM will NOT forward the call to EthIf. Therefore, transmission AND reception handling of Ethernet frames is performed.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSM_-00110]

BSW Module	BSW Context	
EthSM	EthSM/EthSMNetwork	
BSW Parameter	BSW Type	
EthSMWakeupSleepOnDatelineEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>Specifies if an active communication request shall be forwarded to the lower layer to trigger a wake-up on the Ethernet network, e.g. trigger a wake-up on dataline if OA TC10 compliant Ethernet hardware is used.</p> <p>If the parameter is set to TRUE and EthSM is called with COMM_FULL_COMMUNICATION_WITH_WAKEUP_REQUEST, then EthSM call the corresponding EthIfController everytime with ETH_MODE_ACTIVE_WITH_WAKEUP_REQUEST to trigger an wake-up request in the lower layer.</p>		
Template Description		
<p><b>EculInstance.wakeUpOverBusSupported:</b> Driver support for wakeup over Bus.</p> <p><b>EculInstance.ethSwitchPortGroupDerivation:</b> Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EculInstance. If not defined the derivation shall not be done.</p> <p><b>EthernetCommunicationController:</b> Ethernet specific communication port attributes.</p>		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::EculInstance.wakeUpOverBusSupported, SystemTemplate::Fibex::FibexCore::CoreTopology::EculInstance.ethSwitchPortGroupDerivation, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationController		
Mapping Rule		Mapping Type
If EculInstance.wakeUpOverBusSupported is defined and set to TRUE and the aggregated EthernetCommunicationController aggregate an CouplingPort with physicalLayerType set to "100Base-T1" and "1000Base-T1", respectively, or the aggregated CouplingPort is part of a CouplingElement with couplingType set to "switch" and EculInstance.ethSwitchPortGroupDerivation is not defined or set to FALSE and the affected CouplingPorts have a physicalLayerType set to "100Base-T1" and "1000Base-T1", respectively, than the corresponding ComM channel shall set ComMWakeupSleepRequestEnabled to TRUE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthSM_-00109]

## C.6.7 EthTrcv

BSW Module	BSW Context	
EthTrcv	EthTrcv	
BSW Parameter	BSW Type	
EthTrcvConfigSet	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR EthTrcv module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00016]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet	
BSW Parameter		BSW Type
EthTrcvConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of the individual transceiver		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00012]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvActAsSlavePassiveEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the ECU is acting as a passive communication slave on the corresponding ComM channel (corresponding ComM channel has ComMNMVariant set to SLAVE_PASSIVE).		
If the parameter is set to TRUE, the Ethernet transceiver driver shall poll the maintained Ethernet hardware for a signaled Sleep.Indication (according to OA TC10) in the context of the EthTrcv_MainFunction.		
Template Description		
This attribute specifies if the EcuInstance is acting as a passive communication slave on the connected PhysicalChannel. This is used for EthernetCommunicationControllers that use Ethernet hardware which supports wake-up and sleep on the network (e.g. Open Alliance TC10 compliant Ethernet hardware).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationController. <a href="#">slaveActAsPassiveCommunicationSlave</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00071]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvConfigEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the Ethernet transceiver configuration to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the Ethernet transceiver driver is mapped to.		
Template Description		
M2 Parameter		







Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00051]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvConnNeg		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Specifies the connection negotiation of the Ethernet transceiver link.		
Template Description		
Specifies the connection negotiation of the CouplingPort.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.connectionNegotiationBehavior		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00025]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvConnNeg	
BSW Parameter		BSW Type
TRCV_CONN_NEG_AUTO		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Automatic Negotiation		
Template Description		
Automatic Negotiation		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetConnectionNegotiationEnum.auto		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvConnNeg	
BSW Parameter		BSW Type
TRCV_CONN_NEG_MASTER		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Master		
Template Description		





Master	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetConnectionNegotiationEnum. <a href="#">master</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvConnNeg
<b>BSW Parameter</b>	<b>BSW Type</b>
TRCV_CONN_NEG_NONE	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
PLCA	
<b>Template Description</b>	
Master	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetConnectionNegotiationEnum. <a href="#">master</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvConnNeg
<b>BSW Parameter</b>	<b>BSW Type</b>
TRCV_CONN_NEG_SLAVE	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
Slave	
<b>Template Description</b>	
Slave	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetConnectionNegotiationEnum. <a href="#">slave</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTrcvDemEventParameterRefs	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	





Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00017]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvDemEventParameterRefs	
<b>BSW Parameter</b>		<b>BSW Type</b>
ETHTRCV_E_ACCESS		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the DemEventParameter which shall be issued when the error "Transceiver access failed" has occurred.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTrcv_-00018]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTrcvDuplexMode		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Specifies the duplex mode of the Ethernet transceiver link if Auto-Negotiation is disabled. This parameter is ignored if Auto-Negotiation is enabled (EthTrcvConnNeg=TRCV_CONN_NEG_AUTO).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTrcv_-00023]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>





EthTrcvForceSleepEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Specifies if the Ethernet hardware (PHY) support to go to sleep without the confirmation of the Ethernet hardware (PHY) of the linked Ethernet communication partner according to the OA TC10.	
If the parameter is set to TRUE, the Ethernet hardware (PHY) support to force its hardware state to the sleep state. This is used, if the Ethernet communication partner do not accept the Sleep.Request after the specified repetitions on Sleep.Request (see EthTrcvSleepRequestNumberOfRepetitions). If EthTrcvSleepRequestNumberOfRepetitions is not available, the Eth Transceiver driver shall force the Ethernet hardware (PHY) to sleep state after the first unsuccessful Sleep.Request.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00074]

<b>BSW Module</b>	<b>BSW Context</b>
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTrcvIcuChannelRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to the IcuChannel to enable/disable the interrupts for wakeups.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00026]

<b>BSW Module</b>	<b>BSW Context</b>
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTrcvIdx	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies the instance ID of the configured transceiver.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00013]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvMacLayerSpeed		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the baud rate of the MAC layer.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00044]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvMacLayerSubType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the MAC layer subtype of a switch port		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00043]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvMacLayerType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the MAC layer type of the ethernet transceiver.		
Template Description		
Specifies the mac layer type of the CouplingPort.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort. <a href="#">macLayerType</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00035]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMacLayerType	
BSW Parameter		BSW Type
TRCV_MAC_LAYER_TYPE_XGMII		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
MAC layer interface (data) bandwidth class 1Gbit/s (e.g. GMII, RGMII, SGMII, RvGMII, USGMII)		
Template Description		
Mac layer interface (data) bandwidth class 1Gbit/s (e.g. GMII, RGMII, SGMII, RvGMII, USGMII)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetMacLayerTypeEnum.xGMII		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMacLayerType	
BSW Parameter		BSW Type
TRCV_MAC_LAYER_TYPE_XMII		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
MAC layer interface (data) bandwidth class 10-100Mbit/s (e.g. RMII, RvMII, SMII, MII)		
Template Description		
Mac layer interface (data) bandwidth class 100Mbit/s and 10Mbit/s (e.g. RMII, RvMII, SMII, RvMII)		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetMacLayerTypeEnum.xMII		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMacLayerType	
BSW Parameter		BSW Type
TRCV_MAC_LAYER_TYPE_XXGMII		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
MAC layer interface (data) bandwidth class 10Gbit/s		
Template Description		
Mac layer interface (data) bandwidth class 10Gbit/s		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetMacLayerTypeEnum.xXGMII		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvMgmtInterface		ECUC-CHOICE-CONTAINER-DEF
BSW Description		
The choice container allow to configure either the EthTrcv is accessed by a MII interface or Switch interface.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00036]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMgmtInterface	
BSW Parameter		BSW Type
EthTrcvMiiInterface		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container includes the MII interface configuration between an Ethernet Controller and the Ethernet Transceiver. If this container is configured the EthTrcv shall call Eth_WriteMii / Eth_ReadMii API to access the hardware ethernet tranceiver. Note: In case of external MACPHY use this parameter may be enabled.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00037]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMgmtInterface/EthTrcvMiiInterface	
BSW Parameter		BSW Type
EthTrcvCtrlIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the controller used for MII access to the transceiver		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00014]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMgmtInterface/EthTrcvMiiInterface	
BSW Parameter		BSW Type
EthTrcvMiiIdx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the transceiver index used for MII access to the transceiver.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00038]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMgmtInterface	
BSW Parameter		BSW Type
EthTrcvSwitchInterface		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container includes the Switch interface configuration between an Ethernet Switch and an Ethernet Transceiver. If this container is configured the EthTrcv shall call EthSwT_WriteTrcvRegister / EthSwT_WriteTrcvRegister API to access the hardware ethernet transceiver.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00040]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMgmtInterface/EthTrcvSwitchInterface	
BSW Parameter		BSW Type
EthTrcvSwitchPortRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a switch port.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00042]



BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvMgmtInterface/EthTrcvSwitchInterface	
BSW Parameter		BSW Type
EthTrcvSwitchRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a switch configuration container.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00041]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvPhysLayerPlcaLocalNodeld		ECUC-INTEGER-PARAM-DEF
BSW Description		
Configuration parameter for the transceiver node ID when the PLCA mode for 10BASE-T1S is used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00056]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvPhysLayerPlcaMaxBurstCount		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines maximum packets allowed to be transmitted within a TO. The maximum burst count could differ per ECU within a PLCA mixed segment.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00059]

BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type	
EthTrcvPhysLayerPlcaMaxBurstTimer		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Limits the burst frames in bit time. The maximum burst time could differ per ECU within a PLCA mixed segment.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_EthTrcv_-00060]	

BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type	
EthTrcvPhysLayerPlcaNodeCount		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Defines the number of communication participants on the mixed segment. This value is relevant for the head-node transceiver (EthTrcvPhysLayerNodeID = 0) in order to know when the BEACON has to be transmitted.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_EthTrcv_-00058]	

BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type	
EthTrcvPhysLayerPlcaTransmitOpportunityTimer		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Timer for the transmission in bit time to evaluate if a Transmission Opportunity is yield or not.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_EthTrcv_-00057]	

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvPhysLayerType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Specifies the physical layer type of the Ethernet transceiver link.		
Template Description		
Specifies the physical layer type of the CouplingPort.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort.physicalLayerType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00024]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvPhysLayerType	
BSW Parameter	BSW Type	
TRCV_PHYS_LAYER_TYPE_1000BASE_T	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
physical layer interface 1000BASE-T (1Gbit/s, 4 pairs). Used for consumer electronic.		
Template Description		
Ethernet Standard (IEEE 802.3ab) to support 1Gbit/s over 4 twisted pairs.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPhysicalLayerTypeEnum.1000BASE-T		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvPhysLayerType	
BSW Parameter	BSW Type	
TRCV_PHYS_LAYER_TYPE_1000BASE_T1	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
physical layer interface 1000BASE-T1 (1Gbit/s, 1 pair). Used for automotive.		
Template Description		
Ethernet Standard (IEEE 802.3bp) to support 1Gbit/s over a single twisted pair cable.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPhysicalLayerTypeEnum.1000BASE-T1		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvPhysLayerType	
BSW Parameter		BSW Type
TRCV_PHYS_LAYER_TYPE_100BASE_T1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
physical layer interface 100BASE-T1 (100Mbit/s, 1 pair). Used for automotive.		
Template Description		
Ethernet Standard (IEEE 802.3bw) to support 100Mbit/s over a single twisted pair cable. 100BASE-T1 is the IEEE Standardized version of BroadRReach.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPhysicalLayerTypeEnum.100BASE-T1		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvPhysLayerType	
BSW Parameter		BSW Type
TRCV_PHYS_LAYER_TYPE_100BASE_TX		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
physical layer interface 100BASE-TX (100Mbit/s, 2 pairs). Used for consumer electronic.		
Template Description		
Ethernet Standard (IEEE 802.3u) to support 100Mbit/s over two twisted pairs.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPhysicalLayerTypeEnum.100BASE-TX		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvPhysLayerType	
BSW Parameter		BSW Type
TRCV_PHYS_LAYER_TYPE_10BASE_T1S		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Physical layer interface 10BASE-T1S (10Mbit/s, 1 pair). Used for automotive.		
Template Description		
Ethernet Standard (IEEE 802.3bp) to support 1Gbit/s over a single twisted pair cable.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPhysicalLayerTypeEnum.1000BASE-T1		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvSleepModeExecutionDelay	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>Specifies the time delay in seconds to execute a sleep (see OA TC10) for a Ethernet hardware (PHY), if a pending wake-up was detected while a ETH_MODE_DOWN was requested.</p> <p>The value shall be an integral multiple of EthTrcvMainFunctionPeriod.</p>		
Template Description		
<p>Delay in seconds to perform a sleep request if the Ethernet hardware (PHY) detect a pending wake-up. This is used to avoid the race condition, if a sleep was requested while a wake-up of a neighboring PHY was received via a local wake-up connection (e.g. I/O pin).</p>		
M2 Parameter		
<p>SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">sleepModeExecutionDelay</a></p>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00063]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvSleepRequestNumberOfRepetitions	ECUC-INTEGGER-PARAM-DEF	
BSW Description		
<p>Specifies the repetitions to trigger a Sleep.Request (according to OA TC10) if a release of the communication channel was triggered by the upper layer (ETH_MODE_DOWN) and a SleepFail.Indication was signaled. Thus, the Ethernet hardware (PHY) of the connected communication partner did not accept the Sleep.Request.</p>		
Template Description		
<p>Count of repetitions for a sleep on dataline. If a sleep is rejected by the linked communication partner, the sleep is repeated until the count of repetitions exceed. If count of repetitions exceed, the Ethernet hardware (PHY) transit to sleep without acknowledgement of the connected link partner.</p>		
M2 Parameter		
<p>SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">sleepRepetitionsOfSleepRequest</a></p>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00072]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvSleepRequestRepetitionPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		





Specifies the repetition period in seconds of repetitions for a Sleep Request (according to OA TC10). The value shall be a integral multiple of EthTrcvMainFunctionPeriod.	
<b>Template Description</b>	
Delay in seconds for a repetition of a sleep request. This is used to retry a synchronized shutdown of the connected Ethernet hardware (PHY) of the link partner.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">sleepRepetitionDelayOfSleepRequest</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00073]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTrcvSpeed		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Specifies the speed of the Ethernet transceiver link in [MBit/s]. If AutoNegotiation is enabled (EthTrcvConnNeg=TRCV_CONN_NEG_AUTO) this is the maximum speed advertised for Auto-Negotiation.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthTrcv_-00022]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTrcvWakeUpCallout		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
Configuration of the call-out name.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthTrcv_-00028]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvWakeUpRequestRepetitionPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
<p>Specifies the repetition period in seconds of a wake-up request, if an active communication request (ETH_MODE_ACTIVE_WITH_WAKEUP_REQUEST) was triggered by the upperlayer.</p> <p>The value shall be an integral multiple of EthTrcvMainFunctionPeriod.</p>		
Template Description		
<p>Delay in seconds for a repetition of a wake-up. This is used to increase the reliability in the network, such that an ECU which initiates the wake-up does repeat the wake-up and increase the probability that affected ECUs receive the wake-up.</p>		
M2 Parameter		
<p>SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">wakeupRepetitionDelayOfWakeupRequest</a></p>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00062]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvWakeupForwardLocalEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<p>Specifies if remote wake up forwarding is enabled (TRUE) or disabled (FALSE) for OA TC10 compliant Ethernet Transceiver.</p> <p>If the parameter is set to TRUE, the Ethernet hardware (PHY) activate a local wake up (e.g. via I/O pin), if a remote wake-up on data line (e.g. 100Base-T1) was received (either WUP or WUR).</p>		
Template Description		
<p>If enabled, then a remote wake-up received on the physical dataline (e.g. 100BASE-T1) is forwarded as local wake-up (e.g. via an I/O pin). If disabled, then a remote wake-up is not forwarded as local wake-up.</p>		
M2 Parameter		
<p>SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">wakeupForwardLocalEnabled</a></p>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00067]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvWakeupForwardRemoteEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		





<p>Specifies if local wake up forwarding is enabled (TRUE) or disabled (FALSE) for OA TC10 compliant Ethernet Transceiver. If the parameter is set to TRUE, the Ethernet hardware (PHY) transmit a wake-up (WUP or WUR on the data line (e.g. 100Base-T1), when a local wake-up occurred (e.g. via I/O pin), which was triggered by neighboring Ethernet hardware (PHY).</p>	
<b>Template Description</b>	
If enabled, then a local wake-up is forwarded to the physical dataline (e.g. 100BASE-T1). If disabled, then a local wake-up is not forwarded to the physical dataline.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">wakeupForwardRemoteEnabled</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00068]

<b>BSW Module</b>	<b>BSW Context</b>
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTrcvWakeupLocalDetectionTime	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Defines the time in seconds when a local wake-up (e.g. via I/O pin) triggered by a neighboring PHY is evaluated as a valid wake-up.	
<b>Template Description</b>	
Specify the detection time if a local wake-up in seconds is present on the local wake-up connection (e.g. I/O pin). A local wake-up has to be present at least for wakeupLocalDetectionTime to be detected a valid local wake-up.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">wakeupLocalDetectionTime</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00069]

<b>BSW Module</b>	<b>BSW Context</b>
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTrcvWakeupLocalDurationTime	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Defines the duration time in seconds how long a local wake-up should be present on the local wake-up connection (e.g. via I/O pin) to indicate the neighboring PHYs about a wake-up.	
<b>Template Description</b>	
Specify the duration of a local wake-up in seconds to be present on the local wake-up connection (e.g. I/O pin).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">wakeupLocalDurationTime</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>







1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00070]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvWakeupLocalEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>Specifies if local wake-up is enabled (TRUE) or disabled (FALSE) for OA TC10 compliant Ethernet hardware (PHY). If the parameter is set to TRUE, the Ethernet hardware (PHY) is able to detect and react on a wake-up received by a neighboring PHY (e.g. via I/O pin).</p>		
Template Description		
<p>If enabled, then a local wake-up received via a local connection (e.g. I/O pin) shall be detected by the Ethernet hardware (PHY). If disabled, Ethernet hardware is not reacting on a local wake-up.</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDataLineConfig. <a href="#">wakeupLocalEnabled</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00065]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter		BSW Type
EthTrcvWakeupMap		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
<p>Container for the mapping of wake up reasons to wake up sources. At least one container is needed if EthTrcvWakeUpSupport is not ETHTRCV_WAKEUP_NOT_SUPPORTED.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00027]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvWakeupMap	
BSW Parameter		BSW Type
EthTrcvWakeupReason		ECUC-ENUMERATION-PARAM-DEF





<b>BSW Description</b>	
This parameter defines the transceiver wake up reasons.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTrcv_-00033]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig/EthTrcvWakeupMap	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTrcvWakeupSourceRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Configures the wake-up source defined in EcuM.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTrcv_-00029]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTrcvWakeupRemoteEnabled		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Specifies if remote wake-up is enabled (TRUE) or disabled (FALSE) for OA TC10 compliant Ethernet hardware (PHY). If the parameter is set to TRUE, the Ethernet hardware (PHY) wake up when receiving a remote wake-up (e.g. via 100Base-T1 data line) triggered by the connected communication partner.		
<b>Template Description</b>		
If enabled, then a remote wake-up received via the physical dataline (e.g. 100BASE-T1) shall be detected by the Ethernet hardware (PHY). If disabled, Ethernet hardware is not reaction on a remote wake-up.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">wakeupRemoteEnabled</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTrcv_-00066]	

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvWakeupRequestNumberOfRepetitions	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Specifies the repetitions to trigger a wake-up request (according to OA TC10), if an active communication request (ETH_MODE_ACTIVE_WITH_WAKEUP_REQUEST) was triggered by the upperlayer.		
Template Description		
Count of repetitions for a wake-up. This is used to increase the reliability in the network, such that an ECU which initiates the wake-up does repeat the wake-up and increase the probability that affected ECUs receive the wake-up.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetWakeupSleepOnDatalineConfig. <a href="#">wakeupRepetitionsOfWakeupRequest</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_ - 00075]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvConfigSet/EthTrcvConfig	
BSW Parameter	BSW Type	
EthTrcvWakeupSleepOnDatalineEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Specifies if wake-up on data line according to OA TC10 is supported by the used Ethernet hardware (PHY) and if the functionality (wake-up and sleep on dataline) is enabled.		
If the parameter is configured, wake-up and sleep on data line is supported according to OA TC10 by the used Ethernet hardware (PHY).		
If the parameter is set to TRUE, the wake-up and sleep on data line functionality according to OA TC10 is enabled. If the parameter is set to FALSE, the wake-up and sleep on data line functionality according to OA TC10 is disabled.		
Note: Disabling of the wake-up and sleep functionality is used if Ethernet hardware (PHY) parts are connected, where one PHY do not support the OA TC10 wake-up and sleep on dataline functionality. This may needed for legacy scenarios, where ECUs are taken over from previous car lines and no OA TC10 Ethernet hardware (PHY) were used.		
Template Description		
Optional reference to EthernetWakeupSleepOnDatalineConfig.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort. <a href="#">wakeupSleepOnDatalineConfig</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_ - 00064]

BSW Module	BSW Context	
EthTrcv	EthTrcv	
BSW Parameter	BSW Type	
EthTrcvGeneral	ECUC-PARAM-CONF-CONTAINER-DEF	





BSW Description	
General configuration of Ethernet Transceiver Driver module	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTrcv_-00001]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthTrcv_-00003]	

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the Ethernet transceiver driver to zero or multiple ECUC partitions to make the modules API available in this partition. The Ethernet transceiver driver will operate as an independent instance in each of the partitions.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthTrcv_-00050]	

BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type	
EthTrcvEnableCableDiagnosticApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enable/disable the APIs for cable diagnostic: EthTrcv_RunCableDiagnostic, EthTrcv_GetCableDiagnosticsResult			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthTrcv_-00054]

BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type	
EthTrcvEnablePLCA		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables the transmission with PLCA (Physical Layer Collision Avoidance) TRUE: PLCA enabled FALSE: PLCA disabled			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthTrcv_-00055]

BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type	
EthTrcvGetBaudRateApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthTrcv_GetBaudRate API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthTrcv_-00010]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvGetBusWuReasonApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables API to obtain the recent wake-up reason detected by the used Ethernet hardware (e.g. PHY).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00061]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvGetDuplexModeApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthTrcv_GetDuplexMode API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00011]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvGetLinkStateApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthTrcv_GetLinkState API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00009]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvGetPhyIdentifierApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthTrcv_GetPhyIdentifier API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00046]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvGetTransceiverWakeupModeApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthTrcv_GetTransceiverWakeupMode API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00031]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00020]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Specifies the period of main function EthTrcv_MainFunction in seconds.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00032]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvMaxTrcvsSupported		ECUC-INTEGER-PARAM-DEF
BSW Description		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00002]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvSetPhyTestModeApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables EthTrcv_SetPhyTestMode API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_-00047]



BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type	
EthTrcvStartAutoNegotiationApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables EthTrcv_StartAutoNegotiation API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthTrcv_-00008]

BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type	
EthTrcvVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables version info API			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthTrcv_-00004]

BSW Module		BSW Context	
EthTrcv		EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type	
EthTrcvVersionInfoApiMacro		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables / Disables version info API macro implementation			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_EthTrcv_-00005]

BSW Module	BSW Context	
EthTrcv	EthTrcv/EthTrcvGeneral	
BSW Parameter		BSW Type
EthTrcvWakeUpSupport		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Configures how to detect a signaled wake-up by hardware: polling, asynchronous check via signal, interrupt or to not used/not supported. In case detection of a wake-up is not support (e.g. wake-up detection not needed or Ethernet hardware does not support wake-up detection), the BSWMD pre-configuration shall be set to ETHTRCV_WAKEUP_NOT_SUPPORTED.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTrcv_00030]

## C.6.8 Tcplp

BSW Module	BSW Context	
Tcplp	Tcplp	
BSW Parameter		BSW Type
TcplpConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR Tcplp module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00003]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig	
BSW Parameter		BSW Type
TcplpCtrl		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the EthIf controller used for IP communication.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00021]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl	
BSW Parameter	BSW Type	
TcplpDhcpServerConfigRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a TcplpDhcpServerConfig which shall be used for this controller setting (VLAN).		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00195]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl	
BSW Parameter	BSW Type	
TcplpEthIfCtrlRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to EthIf controller where the IP address shall be assigned.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00041]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl	
BSW Parameter	BSW Type	
TcplpFramePrioDefault	ECUC-INTEGGER-PARAM-DEF	
BSW Description		
Specifies the default value for the priority for all outgoing frames. Note: the value can be changed for each socket individually via Tcplp_ChangeParameter() service. If this optional parameter is not available, 0 is used as default priority.		
Template Description		
Standard output-priority outgoing Frames will be tagged with.		
Defines the priority that received frames are assigned together with the VLAN Id (defaultVlan). The values from 0 (best effort) to 7 (highest) are allowed.		
In case modifyVlan and an already tagged received frame, the actual priority of the received frame is not modified.		
M2 Parameter		





SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership.defaultPriority	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00081]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl	
BSW Parameter		BSW Type
TcplpIpSecConfigSetRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to set of SDP entries which shall be used for IPsec.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00315]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl	
BSW Parameter		BSW Type
TcplpIpVXCtrl		ECUC-CHOICE-CONTAINER-DEF
BSW Description		
Specifies whether this controller is an Internet Protocol version 4 (IPv4) or Internet Protocol version 6 (IPv4) instance.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00094]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpIpVXCtrl	
BSW Parameter		BSW Type
TcplpIpV4Ctrl		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies an Internet Protocol version 4 (IPv4) instance.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00166]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV4Ctrl	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpArpConfigRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to ARP configuration for this IPv4 instance. (Multiple IPv4 instances may use the same configuration container but will operate independently)		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00097]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV4Ctrl	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpAutolpConfigRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to Autolp configuration for this IPv4 instance. (Multiple IPv4 instances may use the same configuration container but will operate independently)		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00098]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV4Ctrl	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpDhcpConfigRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to DHCP configuration for this IPv4 instance. (Multiple IPv4 instances may use the same configuration container but will operate independently)		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00100]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV4Ctrl	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpFragmentationConfigRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to Fragmentation configuration for this IPv4 instance. (Multiple IPv4 instances may use the same configuration container but will operate independently)		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00099]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV4Ctrl	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpV4MtuConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container specifies the Maximum Transmission Unit parameters for this IPv4 instance.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00209]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV4Ctrl/TcplpV4MtuConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpV4PathMtuEnabled		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
If enabled the IPv4 processes incoming ICMPv4 "Packet Too Big" messages and stores a MTU value for each destination address.		
<b>Template Description</b>		
If enabled the IPv4/IPv6 processes incoming ICMP "Packet Too Big" messages and stores a MTU value for each destination address.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationConnector. <a href="#">pathMtuEnabled</a>		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00211]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV4Ctrl/TcplpV4MtuConfig
BSW Parameter	BSW Type
TcplpV4PathMtuTimeout	ECUC-FLOAT-PARAM-DEF
BSW Description	
If this value is >0 the IPv4 will reset the MTU value stored for each destination after n seconds. see [RFC1191 6.3. Purging stale PMTU information] Default: 600 seconds (10 minutes)	
Template Description	
If this value is >0 the IPv4/IPv6 will reset the MTU value stored for each destination after n seconds.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationConnector.pathMtuTimeout	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00210]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl
BSW Parameter	BSW Type
TcplpV6Ctrl	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Specifies an Internet Protocol version 6 (IPv6) instance.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00096]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV6Ctrl
BSW Parameter	BSW Type
TcplpV6DhcpConfigRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to DHCPv6 configuration. (Multiple IPv6 instances may use the same configuration container but will operate independently)	
Template Description	





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00101]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV6Ctrl
BSW Parameter	BSW Type
TcplpV6FragmentationConfigRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to IPv6 Fragmentation Configuration. (Multiple IPv6 instances may use the same configuration container but will operate independently)	
Template Description	
M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00103]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV6Ctrl
BSW Parameter	BSW Type
TcplpV6MtuConfig	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container specifies the Maximum Transmission Unit parameters for this IPv6 instance.	
Template Description	
M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00104]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV6Ctrl/TcplpV6MtuConfig
BSW Parameter	BSW Type
TcplpV6PathMtuEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
If enabled the IPv6 processes incoming ICMPv6 "Packet Too Big" messages and stores a MTU value for each destination address. See RFC1981 "Path MTU Discovery for IP version 6" for details about PathMTU.	
Template Description	







If enabled the IPv4/IPv6 processes incoming ICMP "Packet Too Big" messages and stores a MTU value for each destination address.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationConnector. <a href="#">pathMtuEnabled</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00107]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV6Ctrl/TcplpV6MtuConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpV6PathMtuTimeout	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
If this value is >0 the IPv6 will reset the MTU value stored for each destination after n seconds. see [RFC1981 5.3. Purging stale PMTU information] Default: 600 seconds (10 minutes)	
<b>Template Description</b>	
If this value is >0 the IPv4/IPv6 will reset the MTU value stored for each destination after n seconds.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationConnector. <a href="#">pathMtuTimeout</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00105]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpCtrl/TcplpVXCtrl/TcplpV6Ctrl
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpV6NdpConfigRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to Neighbor Discovery Protocol Configuration. (Multiple IPv6 instances may use the same configuration container but will operate independently)	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00102]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpDhcpServerConfig	ECUC-PARAM-CONF-CONTAINER-DEF





<b>BSW Description</b>	
Specifies the configuration parameters of the DHCP Server sub-module.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00187]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpDhcpServerConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpDhcpAddressAssignment		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Defines a Ethernet Switch port based IP address assignment.		
<b>Template Description</b>		
Specifies the IP Address which will be assigned to a DHCP Client at this SwitchPort. If no dhcpAddressAssignment is provided all DHCP-Discover messages received at this Port will be discarded by the DHCP Server.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership.dhcpAddressAssignment		
<b>Mapping Rule</b>		<b>Mapping Type</b>
The existence of a dhcpAddressAssignment leads to one container.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00191]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpDhcpServerConfig/TcplpDhcpAddressAssignment	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpDhcpAddressLowerBound		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
The lower bound IP address which shall be assigned. If lower bound and upper bound are identical exactly this IP address shall be assigned.		
<b>Template Description</b>		
<b>Ipv4DhcpServerConfiguration.addressRangeLowerBound:</b> Lower range of IP addresses to be issued to DHCP clients. IPv4 Address. Notation: 255.255.255.255.		
<b>Ipv6DhcpServerConfiguration.addressRangeLowerBound:</b> Lower range of IP addresses to be issued to DHCP clients. IPv6 Address. Notation: FFFF:...:FFFF.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4DhcpServerConfiguration.addressRangeLowerBound, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6DhcpServerConfiguration.addressRangeLowerBound		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00193]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpDhcpServerConfig/TcplpDhcpAddressAssignment	
BSW Parameter		BSW Type
TcplpDhcpAddressUpperBound		ECUC-STRING-PARAM-DEF
BSW Description		
The upper bound IP address which shall be assigned. If lower bound and upper bound are identical exactly this IP address shall be assigned.		
Template Description		
<b>Ipv4DhcpServerConfiguration.addressRangeUpperBound:</b> Upper range of IP addresses to be issued to DHCP clients. Pv4 Address. Notation: 255.255.255.255.		
<b>Ipv6DhcpServerConfiguration.addressRangeUpperBound:</b> Upper range of IP addresses to be issued to DHCP clients. IPv6 Address. Notation: FFFF:...FFFF.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4DhcpServerConfiguration. <a href="#">addressRangeUpperBound</a> , SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6DhcpServerConfiguration. <a href="#">addressRangeUpperBound</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00194]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpDhcpServerConfig/TcplpDhcpAddressAssignment	
BSW Parameter		BSW Type
TcplpDhcpSwitchPortRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to Ethernet Switch port. Optional in case the Dhcp server is operating without an Ethernet switch.		
Template Description		
A CouplingPort is used to connect a CouplingElement with an EcuInstance or two CouplingElements with each other via a CouplingPortConnection. Optionally, the CouplingPort may also have a reference to a macMulticastGroup and a defaultVLAN.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::CouplingPort		
Mapping Rule		Mapping Type
The Switch CouplingPort the VlanMembership.dhcpAddressAssignment belongs to.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00192]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpDhcpServerConfig	
BSW Parameter		BSW Type
TcplpDhcpDefaultRouter		ECUC-STRING-PARAM-DEF
BSW Description		
IP address of default router (gateway).		
Template Description		





<b>Ipv4DhcpServerConfiguration.defaultGateway:</b> IP address of the default gateway. Notation 255.255.255.255	
<b>Ipv6DhcpServerConfiguration.defaultGateway:</b> IP address of the default gateway. Notation 255.255.255.255	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4DhcpServerConfiguration.defaultGateway, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6DhcpServerConfiguration.defaultGateway	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00190]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpDhcpServerConfig	
<b>BSW Parameter</b>	<b>BSW Type</b>	
TcplpDhcpEthIfSwitchRef	ECUC-REFERENCE-DEF	
<b>BSW Description</b>		
Reference to EthIfSwitch representation. Optional in case the Dhcp server is operating without an Ethernet switch.		
<b>Template Description</b>		
Specifies the IP Address which will be assigned to a DHCP Client at this SwitchPort. If no dhcpAddressAssignment is provided all DHCP-Discover messages received at this Port will be discarded by the DHCP Server.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::VlanMembership.dhcpAddressAssignment		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
The Switch CouplingElement the VlanMembership.dhcpAddressAssignment belongs to.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00188]	

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpDhcpServerConfig	
<b>BSW Parameter</b>	<b>BSW Type</b>	
TcplpDhcpNetmask	ECUC-INTEGGER-PARAM-DEF	
<b>BSW Description</b>		
Network mask of IPv4 address or address prefix of IPv6 address in CIDR Notation, i.e. decimal value between 0 and 32 (IPv4) or 0 and 128 (IPv6) that describes the number of significant bits defining the network number or prefix of an IP address.		
<b>Template Description</b>		
<b>Ipv4DhcpServerConfiguration.networkMask:</b> Default network mask to be used by DHCP clients. Notation 255.255.255.255		
<b>Ipv6DhcpServerConfiguration.networkMask:</b> Default network mask to be used by DHCP clients. Notation 255.255.255.255		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4DhcpServerConfiguration.networkMask, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6DhcpServerConfiguration.networkMask		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00189]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig	
BSW Parameter		BSW Type
TcplpDuplicateAddressDetectionConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the DAD callout function.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00214]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpDuplicateAddressDetectionConfig	
BSW Parameter		BSW Type
TcplpDuplicateAddressDetectionCalloutName		ECUC-FUNCTION-NAME-DEF
BSW Description		
This parameter defines the name of the DAD callout function <Up_DADAddressConflict>.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00216]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig	
BSW Parameter		BSW Type
TcplpConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the configuration parameters of the IP (Internet Protocol) sub-module		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00022]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig	
BSW Parameter		BSW Type
TcplpIpV4Config		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the configuration parameters of the IPv4 (Internet Protocol version 4) sub-module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00095]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config	
BSW Parameter		BSW Type
TcplpArpConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the configuration parameters of the ARP (Address Resolution Protocol) sub-module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00023]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config/TcplpArpConfig	
BSW Parameter		BSW Type
TcplpArpDefensiveProcessing		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If enabled the ARP shall only process ARP replies which are received in reaction to a previously transmitted ARP request as well as skipping updates to the ARP table based on received Gratuitous ARP packets. If disabled all ARP packets shall be processed as specified in IETF RFC 826.		
Template Description		
This attribute enables (TRUE) or disables (FALSE) support of the ARP Packet Queue according to IETF RFC 1122, section 2.3.2.2.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4ArpProps. <a href="#">tcpIpArpPacketQueueEnabled</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00326]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config/TcplpArpConfig	
BSW Parameter		BSW Type
TcplpArpNumGratuitousARPOnStartup		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the number of gratuitous ARP replies which shall be sent on assignment of a new IP address.		
Template Description		
This attribute specifies the number of gratuitous ARP replies which shall be sent on assignment of a new IP address.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4ArpProps. <a href="#">tcpIpArpNumGratuitousArpOnStartup</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00054]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config/TcplpArpConfig	
BSW Parameter		BSW Type
TcplpArpPacketQueueEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) support of the ARP Packet Queue according to IETF RFC 1122, section 2.3.2.2.		
Template Description		
This attribute enables (TRUE) or disables (FALSE) support of the ARP Packet Queue according to IETF RFC 1122, section 2.3.2.2.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4ArpProps. <a href="#">tcpIpArpPacketQueueEnabled</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00170]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config/TcplpArpConfig	
BSW Parameter		BSW Type
TcplpArpRequestTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Specifies a timeout in seconds for the validity of ARP requests. After the transmission of an ARP request the Tcplp shall skip the transmission of any further ARP requests to the same destination within a duration of TcplpArpRequestTimeout seconds. (IETF RFC 1122, section 2.3.2.1) The value for this parameter shall be an integral multiple of TcplpMainFunctionPeriod or 0. If this parameter set to 0 this features is disabled and no delay between ARP requests is enforced.		
Template Description		
This attribute specifies a timeout in seconds for the validity of ARP requests. After the transmission of an ARP request the Tcplp shall skip the transmission of any further ARP requests to the same destination within a duration of tcplpArpRequestTimeout seconds. (IETF RFC 1122, section 2.3.2.1).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4ArpProps. <a href="#">tcpIpArpRequestTimeout</a>		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00218]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpArpConfig	
BSW Parameter	BSW Type	
TcplpArpTableEntryTimeout	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Timeout in seconds after which an unused ARP entry is removed.		
Template Description		
This attribute specifies the timeout in seconds after which an unused ARP entry is removed.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4ArpProps. <a href="#">tcpIpArpTableEntryTimeout</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00053]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpArpConfig	
BSW Parameter	BSW Type	
TcplpArpTableSizeMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of entries in the ARP table.		
Template Description		
This attribute specifies the size of neighbor cache or ARP table in units of entries.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationConnector. <a href="#">neighborCacheSize</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00052]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config	
BSW Parameter	BSW Type	
TcplpAutoIpConfig	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Specifies the configuration parameters of the Auto-IP (automatic private IP addressing) sub-module.		
Template Description		







M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00028]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config/TcplpAutoIpConfig	
BSW Parameter		BSW Type
TcplpAutoIpInitTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
The time in seconds Auto-IP waits at startup, before beginning with ARP probing. This delay is used to give DHCP time to acquire a lease in case a DHCP server is present.		
Template Description		
This attribute specifies the time in seconds Auto-IP waits at startup, before beginning with ARP probing. This delay is used to give DHCP time to acquire a lease in case a DHCP server is present.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4AutoIpProps.tcpIpAutoIpInitTimeout		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00074]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config	
BSW Parameter		BSW Type
TcplpDhcpConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the configuration parameters of the DHCPv4.  This container may be referenced by multiple IPv4 instances if they shall use the same configuration. This container may have multiple instances if different configurations are required for different IPv4 instances.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00167]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config	
BSW Parameter		BSW Type
TcplpIcmpConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		





Specifies the configuration parameters of the ICMP (Internet Control Message Protocol) sub-module.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00024]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpIcmpConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpIcmpEchoReplyEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables or disables transmission of ICMP echo reply message in case of a ICMP echo reception.	
<b>Template Description</b>	
This attribute enables or disables transmission of ICMP echo reply message in case of a ICMP echo reception.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcplpIcmpV4Props.tcpIpIcmpV4EchoReplyEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00213]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpIcmpConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpIcmpMsgHandler	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container is a subcontainer of TcplpIcmpConfig and specifies the configuration parameters for the ICMP message handler.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00056]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpIcmpConfig/TcplpIcmpMsgHandler
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpIcmpMsgHandlerName	ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>	





This parameter defines the name of the ICMP message handler function <Up_IcmpMsgHandler>.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00057]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpIcmpConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpIcmpTtl	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Default Time-to-live value of outgoing ICMP packets.	
<b>Template Description</b>	
This attribute is only relevant in case that ICMP (Internet Control Message Protocol) is used. It specifies the default Time-to-live value of outgoing ICMP packets.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcplpIcmpv4Props.tcpIpIcmpV4Ttl	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00055]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpIpFragmentationConfig	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Specifies the configuration parameters of IPv4 packet fragmentation/reassembly.	
This container may be referenced by multiple IPv4 instances if they shall use the same configuration. This container may have multiple instances if different configurations are required for different IPv4 instances.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00108]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpIpFragmentationConfig
<b>BSW Parameter</b>	<b>BSW Type</b>





TcpIplpFragmentationRxEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables (TRUE) or disables (FALSE) support for reassembling of incoming datagrams that are fragmented according to IETF RFC 815 (IP Datagram Reassembly Algorithms).	
<b>Template Description</b>	
Enables (TRUE) or disables (FALSE) support for reassembling of incoming datagrams that are fragmented according to IETF RFC 815 (IP Datagram Reassembly Algorithms).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Iplp4FragmentationProps.tcpIplpFragmentationRxEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00077]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpFragmentationConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpNumFragments		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies the maximum number of IP fragments per datagram. Note: this parameter is only relevant if TcplpFragmentationRxEnabled is TRUE.		
<b>Template Description</b>		
Specifies the maximum number of IP fragments per datagram.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Iplp4FragmentationProps.tcpIplpNumFragments		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00078]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV4Config/TcplpFragmentationConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpNumReassDgrams		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Specifies the maximum number of fragmented IP datagrams that can be reassembled in parallel. Note: this parameter is only relevant if TcplpFragmentationRxEnabled is TRUE.		
<b>Template Description</b>		
Specifies the maximum number of fragmented IP datagrams that can be reassembled in parallel.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Iplp4FragmentationProps.tcpIplpNumReassDgrams		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00080]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV4Config/TcplpIpFragmentationConfig	
BSW Parameter		BSW Type
TcplpIpReassTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Specifies the timeout in [s] after which an incomplete datagram gets discarded. Note: this parameter is only relevant if TcplpIpFragmentationRxEnabled is TRUE.		
Template Description		
Specifies the timeout in [s] after which an incomplete datagram gets discarded.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4FragmentationProps.tcpIpIpReassTimeout		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00079]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig	
BSW Parameter		BSW Type
TcplpIpV6Config		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the configuration parameters of the IPv6 (Internet Protocol version 6) sub-module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00168]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config	
BSW Parameter		BSW Type
TcplpDhcpV6Config		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the configuration parameters of the DHCPv6.		
This container may be referenced by multiple IPv6 instances if they shall use the same configuration. This container may have multiple instances if different configurations are required for different IPv6 instances.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00110]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpDhcpV6Config	
BSW Parameter	BSW Type	
TcplpDhcpV6CnfDelayMax	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Maximum delay (s) before sending the first Confirm message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.		
Template Description		
Maximum delay in seconds before sending the first Confirm message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Dhcpv6Props.tcpIpDhcpV6CnfDelayMax		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00116]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpDhcpV6Config	
BSW Parameter	BSW Type	
TcplpDhcpV6CnfDelayMin	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Minimum delay (s) before the first Confirm message will be sent.		
Template Description		
Minimum delay in seconds before the first Confirm message will be sent.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Dhcpv6Props.tcpIpDhcpV6CnfDelayMin		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00117]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpDhcpV6Config	
BSW Parameter	BSW Type	
TcplpDhcpV6InfDelayMax	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Maximum delay (s) before sending the first Information Request message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.		
Template Description		
Maximum delay in seconds before sending the first Information Request message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Dhcpv6Props.tcpIpDhcpV6InfDelayMax		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00118]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpDhcpV6Config
BSW Parameter	BSW Type
TcplpDhcpV6InfDelayMin	ECUC-FLOAT-PARAM-DEF
BSW Description	
Minimum delay (s) before the first Information Request message will be sent.	
Template Description	
Minimum delay (s) before the first Information Request message will be sent.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Dhcpv6Props.tcpIpDhcpV6InfDelayMin	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00119]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpDhcpV6Config
BSW Parameter	BSW Type
TcplpDhcpV6SolDelayMax	ECUC-FLOAT-PARAM-DEF
BSW Description	
Maximum delay (s) before sending the first Solicit message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.	
Template Description	
Maximum delay in seconds before sending the first Solicit message. If this value is bigger than the previous minimum delay value a random delay will be chosen from the interval.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Dhcpv6Props.tcpIpDhcpV6SolDelayMax	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00120]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpDhcpV6Config
BSW Parameter	BSW Type
TcplpDhcpV6SolDelayMin	ECUC-FLOAT-PARAM-DEF
BSW Description	
Minimum delay (s) before the first Solicit message will be sent.	
Template Description	





Minimum delay (s) before the first Solicit message will be sent.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Dhcpv6Props.tcpIpDhcpV6SolDelayMin	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00121]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpIcmpV6Config	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Specifies the configuration parameters of the ICMPv6 (Internet Control Message Protocol for IPv6) sub-module.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00113]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpIcmpV6Config
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpIcmpV6EchoReplyAvoidFragmentation	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
If enabled, the stack will respond only to incoming ICMPv6 Echo Requests (Pings) that fit the MTU of the respective interface, i.e. can be transmitted without IPv6 fragmentation. Only relevant if TcplpIcmpV6EchoReplyEnabled is enabled.	
<b>Template Description</b>	
This attribute defines whether the echo reply is only transmitted in case that the incoming ICMPv6 Echo Request (Pings) fits the MTU of the respective interface, i.e. can be transmitted without IPv6 fragmentation.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcplpIcmpv6Props. tcpIpIcmpV6EchoReplyAvoidFragmentation	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00212]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpIcmpV6Config
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpIcmpV6EchoReplyEnabled	ECUC-BOOLEAN-PARAM-DEF







<b>BSW Description</b>	
If enabled, the stack will respond to incoming ICMPv6 Echo Requests (Pings).	
<b>Template Description</b>	
This attribute enables or disables transmission of ICMP echo reply message in case of a ICMP echo reception.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Tcplplcmpv6Props.tcpIpIcmpV6EchoReplyEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00149]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplplpConfig/TcplplpV6Config/TcplplcmpV6Config
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplplcmpV6HopLimit	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Default Hop-Limit value of outgoing ICMPv6 packets.	
<b>Template Description</b>	
Default Hop-Limit value of outgoing ICMPv6 packets.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Tcplplcmpv6Props.tcpIpIcmpV6HopLimit	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00152]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplplpConfig/TcplplpV6Config/TcplplcmpV6Config
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplplcmpV6MsgDestinationUnreachableEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Dis/Enables transmission of Destination Unreachable Messages	
<b>Template Description</b>	
This attribute Enables/Disables the transmission of Destination Unreachable Messages.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Tcplplcmpv6Props. tcpIpIcmpV6MsgDestinationUnreachableEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00153]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpIcmpV6Config	
BSW Parameter		BSW Type
TcplpIcmpV6MsgHandler		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is a subcontainer of TcplpIcmpConfig and specifies the configuration parameters for the ICMPv6 message handler.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00154]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpIcmpV6Config/TcplpIcmpV6MsgHandler	
BSW Parameter		BSW Type
TcplpIcmpV6MsgHandlerName		ECUC-FUNCTION-NAME-DEF
BSW Description		
This parameter defines the name of the ICMP message handler function <Up_IcmpMsgHandler>.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00156]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpV6Config/TcplpIcmpV6Config	
BSW Parameter		BSW Type
TcplpIcmpV6MsgParameterProblemEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If enabled an ICMPv6 parameter problem message will be sent if a received packet has been dropped due to unknown options or headers that are found in the packet. [RFC8200 4. IPv6 Extension Headers]		
Template Description		
If enabled an ICMPv6 parameter problem message will be sent if a received packet has been dropped due to unknown options or headers that are found in the packet.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcplpIcmpv6Props. <a href="#">tcpIpIcmpV6MsgParameterProblemEnabled</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00151]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config	
BSW Parameter		BSW Type
TcplpIpV6ConfigExtHeaderFilter		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container describes the white list for the filtering of IPv6 extension headers, i.e. frames containing IPv6 extension headers not listed here shall be silently dropped.		
Template Description		
Permitted list for the filtering of IPv6 extension headers.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::IPv6HeaderFilterList::IPv6ExtHeaderFilterList		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00198]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpIpV6ConfigExtHeaderFilter	
BSW Parameter		BSW Type
TcplpIpV6ConfigExtHeaderFilterEntry		ECUC-INTEGER-PARAM-DEF
BSW Description		
IPv6 Extension Header type allowed by this filter.		
Template Description		
IPv6 Extension Header type allowed by this filter.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::IPv6HeaderFilterList::IPv6ExtHeaderFilterList.allowedIPv6ExtHeader		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00199]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config	
BSW Parameter		BSW Type
TcplpIpV6FragmentationConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the configuration parameters of IPv6 packet fragmentation/reassembly. This container may be referenced by multiple IPv6 instances if they shall use the same configuration. This container may have multiple instances if different configurations are required for different IPv6 instances.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00114]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpIpV6FragmentationConfig	
BSW Parameter	BSW Type	
TcplpIpV6ReassemblyBufferCount	ECUC-INTEGER-PARAM-DEF	
BSW Description		
<p>Number of buffers that can be used for fragment reassembly. In case of a reassembly error or if not all fragments are received in time this buffer will be blocked until the specified "Fragment Reassembly Timeout" has been exceeded.</p> <p>A value of 0 disables fragment reassembly.</p> <p>[RFC8200 5. Packet Size Issues] "In order to send a packet larger than a path's MTU, a node may use the IPv6 Fragment header to fragment the packet at the source and have it reassembled at the destination(s). However, the use of such fragmentation is discouraged in any application that is able to adjust its packets to fit the measured path MTU (i.e., down to 1280 octets)."</p>		
Template Description		
<p>Number of buffers that can be used for fragment reassembly. In case of a reassembly error or if not all fragments are received in time this buffer will be blocked until the specified "Fragment Reassembly Timeout" has been exceeded.</p> <p>A value of 0 disables fragment reassembly.</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6FragmentationProps.tcpIpIpReassemblyBufferCount		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00157]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpIpV6FragmentationConfig	
BSW Parameter	BSW Type	
TcplpIpV6ReassemblyBufferSize	ECUC-INTEGER-PARAM-DEF	
BSW Description		
<p>[RFC8200 5. Packet Size Issues] "A node must be able to accept a fragmented packet that, after reassembly, is as large as 1500 octets. A node is permitted to accept fragmented packets that reassemble to more than 1500 octets."the measured path MTU (i.e., down to 1280 octets)."</p>		
Template Description		
Size of each fragment tx buffer in bytes.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6FragmentationProps.tcpIpIpReassemblyBufferSize		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00158]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpIpV6FragmentationConfig	
BSW Parameter	BSW Type	
TcplpIpV6ReassemblySegmentCount	ECUC-INTEGER-PARAM-DEF	
BSW Description		





<p>Specifies the maximum number of consecutive data segments that can be managed in each reassembly buffer. If all fragments are received in order, only one segment will be needed.</p> <p>To deal with fragments received out of order this value should be configured bigger than 1.</p>	
<b>Template Description</b>	
<p>Specifies the maximum number of consecutive data segments that can be managed in each reassembly buffer. If all fragments are received in order, only one segment will be needed.</p> <p>To deal with fragments received out of order this value should be configured bigger than 1.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6FragmentationProps.tcpIpIpReassemblySegmentCount	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00160]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpV6Config/TcplpV6FragmentationConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpV6ReassemblyTimeout	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
[RFC8200 4.5 Fragment Header] Default: 60 seconds	
<b>Template Description</b>	
Specifies the timeout in seconds after which an incomplete datagram gets discarded.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6FragmentationProps.tcpIpIpReassemblyTimeout	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00159]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpV6Config/TcplpV6FragmentationConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpV6TxFragmentBufferCount	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
<p>These buffers will be used if the IpV6 receives packets from the upper layer that do not fit into the MTU and thus must be fragmented.</p> <p>A value of 0 disables tx fragmentation.</p> <p>If the upper layer transmits packets that do not fit into the link or path MTU, the IpV6 will split-up the packet into fragments. see "Enable Fragment Reassembly"</p>	
<b>Template Description</b>	
<p>These buffers will be used if the IpV6 receives packets from the upper layer that do not fit into the MTU and thus must be fragmented.</p> <p>A value of 0 disables tx fragmentation.</p>	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6FragmentationProps.tcpIpIpTxFragmentBufferCount	





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00161]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpConfig/TcplpV6Config/TcplpV6FragmentationConfig
BSW Parameter	BSW Type
TcplpV6TxFragmentBufferSize	ECUC-INTEGER-PARAM-DEF
BSW Description	
Size of each fragment tx buffer in bytes	
Template Description	
Size of each fragment tx buffer in bytes.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6FragmentationProps.tcpIpTxFragmentBufferSize	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00162]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpConfig/TcplpV6Config
BSW Parameter	BSW Type
TcplpNdpConfig	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Specifies the configuration parameters of the Neighbor Discovery Protocol for IPv6	
This container may be referenced by multiple IPv6 instances if they shall use the same configuration. This container may have multiple instances if different configurations are required for different IPv6 instances.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00112]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpConfig/TcplpV6Config/TcplpNdpConfig
BSW Parameter	BSW Type
TcplpNdpArNudConfig	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Specifies the configuration parameters for NDP Address Resolution and Neighbor Unreachability Detection.	
Template Description	





M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00123]

BSW Module	BSW Context
BSW Parameter	BSW Type
Tcplp	Tcplp/TcplpConfig/TcplpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig
TcplpNdpDefaultReachableTime	ECUC-FLOAT-PARAM-DEF
BSW Description	
<p>Configuration of the ReachableTime (s) specified in [RFC4861 6.3.2. Host Variables].</p> <p>"The time a neighbor is considered reachable after receiving a reachability confirmation."</p> <p>If "TcplpNdpDynamicReachableTimeEnabled" is checked, this value may be reconfigured based on received Router Advertisements.</p> <p>Default: REACHABLE_TIME = 30 seconds</p>	
Template Description	
Configuration of the ReachableTime (s) specified in [RFC4861 6.3.2. Host Variables].	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpDefaultReachableTime	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00130]

BSW Module	BSW Context
BSW Parameter	BSW Type
Tcplp	Tcplp/TcplpConfig/TcplpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig
TcplpNdpDefaultRetransTimer	ECUC-FLOAT-PARAM-DEF
BSW Description	
<p>Configures the default value (s) for the RetransTimer variable specified in [RFC4861 6.3.2. Host Variables].</p> <p>"The time between retransmissions of Neighbor Solicitation messages to a neighbor when resolving the address or when probing the reachability of a neighbor."</p> <p>If "TcplpNdpDynamicRetransTimeEnabled" is checked, this value may be reconfigured based on received Router Advertisements.</p> <p>Default: RETRANS_TIMER = 1 second</p>	
Template Description	
Configures the default value (s) for the RetransTimer variable specified in [RFC4861 6.3.2. Host Variables].	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpDefaultRetransTimer	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00165]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig	
BSW Parameter		BSW Type
TcplpNdpDefensiveProcessing		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If enabled the NDP shall only process Neighbor Advertisements which are received in reaction to a previously transmitted Neighbor Solicitation as well as skipping updates to the Neighbor Cache based on received Neighbor Solicitations. If disabled all Neighbor Advertisements and Solicitations shall be processed as specified in RFC4861. [RFC4861 7.2.5. Receipt of Neighbor Advertisements]		
Template Description		
If enabled the NDP shall only process Neighbor Advertisements which are received in reaction to a previously transmitted Neighbor Solicitation as well as skipping updates to the Neighbor Cache based on received Neighbor Solicitations. If disabled all Neighbor Advertisements and Solicitations shall be processed as specified in RFC4861.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpDefensiveProcessing		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00201]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig	
BSW Parameter		BSW Type
TcplpNdpDelayFirstProbeTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Delay before sending the first NUD probe in (s). [RFC4861 7.3.3. Node Behavior] Default: DELAY_FIRST_PROBE_TIME = 5 seconds		
Template Description		
Delay before sending the first NUD probe in (s).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpDelayFirstProbeTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00133]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig	
BSW Parameter		BSW Type
TcplpNdpMaxNeighborCacheSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of entries in the neighbor cache. [RFC4861 5.1. Conceptual Data Structures]		
Template Description		







This attribute specifies the size of neighbor cache or ARP table in units of entries.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationConnector. <a href="#">neighborCacheSize</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00129]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpNdpMaxRandomFactor	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Maximum random factor used for randomization [RFC4861 10. Protocol Constants] Default: 15 (MAX_RANDOM_FACTOR = 1.5)	
<b>Template Description</b>	
Maximum random factor used for randomization	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpMaxRandomFactor</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00135]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpNdpMinRandomFactor	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Minimum random factor used for randomization [RFC4861 10. Protocol Constants] Default: 5 (MIN_RANDOM_FACTOR = 0.5)	
<b>Template Description</b>	
Minimum random factor used for randomization	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpMinRandomFactor</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00134]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig	
BSW Parameter		BSW Type
TcplpNdpNeighborUnreachabilityDetectionEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Neighbor Unreachability Detection is used to remove unused entries from the neighbor cache. This feature is a basic feature of NDP and should be turned on.		
Template Description		
Neighbor Unreachability Detection is used to remove unused entries from the neighbor cache. This feature is a basic feature of NDP and should be turned on.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpNeighborUnreachabilityDetectionEnabled</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00136]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig	
BSW Parameter		BSW Type
TcplpNdpNumMulticastSolicitations		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of multicast solicitations that will be sent when performing address resolution. [RFC4861 7.2.2. Sending Neighbor Solicitations] Default: MAX_MULTICAST_SOLICIT = 3		
Template Description		
Maximum number of multicast solicitations that will be sent when performing address resolution.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpNumMulticastSolicitations</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00132]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig	
BSW Parameter		BSW Type
TcplpNdpNumUnicastSolicitations		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of unicast solicitations that will be sent when performig Neighbor Unreachability Detection. [RFC4861 7.3.3. Node Behavior] Default: MAX_UNICAST_SOLICIT = 3		
Template Description		
Maximum number of unicast solicitations that will be sent when performig Neighbor Unreachability Detection.		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpNumUnicastSolicitations	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00131]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpNdpPacketQueueEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Enables (TRUE) or disables (FALSE) support of a NDP Packet Queue according to IETF RFC 4861, section 7.2.2.	
<b>Template Description</b>	
Enables (TRUE) or disables (FALSE) support of a NDP Packet Queue according to IETF RFC 4861, section 7.2.2.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpPacketQueueEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00171]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpArNudConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpNdpRandomReachableTimeEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
If enabled the value of ReachableTime will be multiplied with a random value between MIN_RANDOM_FACTOR and MAX_RANDOM_FACTOR in order to prevent multiple nodes from transmitting at exactly the same time [RFC4861 6.3.2. Host Variables / ReachableTime]	
<b>Template Description</b>	
If enabled the value of ReachableTime will be multiplied with a random value between MIN_RANDOM_FACTOR and MAX_RANDOM_FACTOR in order to prevent multiple nodes from transmitting at exactly the same time.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpRandomReachableTimeEnabled	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00137]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig
<b>BSW Parameter</b>	<b>BSW Type</b>





TcpIpNdpPrefixRouterDiscoveryConfig	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Specifies the configuration parameters for NDP Prefix and Router Discovery.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00124]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouterDiscoveryConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcpIpNdpDefaultRouterListSize	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Maximum number of default router entries. [RFC4861 5.1. Conceptual Data Structures]	
<b>Template Description</b>	
Maximum number of default router entries.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpDefaultRouterListSize	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00139]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouterDiscoveryConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcpIpNdpDestinationCacheSize	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Maximum number of entries in the destination cache. [RFC4861 5.1. Conceptual Data Structures]	
<b>Template Description</b>	
Maximum number of entries in the destination cache.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpDestinationCacheSize	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00138]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig	
BSW Parameter		BSW Type
TcplpNdpDynamicHopLimitEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If enabled the default hop limit may be reconfigured based on received Router Advertisements. [RFC4861 6.3.4. Processing Received Router Advertisements]		
Template Description		
If enabled the default hop limit may be reconfigured based on received Router Advertisements.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpDynamicHopLimitEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00147]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig	
BSW Parameter		BSW Type
TcplpNdpDynamicMtuEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Allow dynamic reconfiguration of link MTU via Router Advertisements. [RFC4861 4.6.4. MTU]		
Template Description		
Allow dynamic reconfiguration of link MTU via Router Advertisements.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpDynamicMtuEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00148]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig	
BSW Parameter		BSW Type
TcplpNdpDynamicReachableTimeEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If enabled the default Reachable Time value may be reconfigured based on received Router Advertisements. [RFC4861 6.3.4. Processing Received Router Advertisements] Default: Enabled		
Template Description		
If enabled the default Reachable Time value may be reconfigured based on received Router Advertisements.		





<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpDynamicReachableTimeEnabled</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00146]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouterDiscoveryConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpNdpDynamicRetransTimeEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
If enabled the default Retransmit Timer value may be reconfigured based on received Router Advertisements. [RFC4861 6.3.4. Processing Received Router Advertisements] Default: Enabled	
<b>Template Description</b>	
If enabled the default Retransmit Timer value may be reconfigured based on received Router Advertisements.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpDynamicRetransTimeEnabled</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00145]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouterDiscoveryConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpNdpMaxRtrSolicitationDelay	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Maximum delay before the first Router Solicitation will be sent after interface initialization in (s). [RFC4861 6.3.7. Sending Router Solicitations] Default: MAX_RTR_SOLICITATION_DELAY = 1 second	
<b>Template Description</b>	
Maximum delay before the first Router Solicitation will be sent after interface initialization in (s).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpMaxRtrSolicitationDelay</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00143]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig	
BSW Parameter		BSW Type
TcplpNdpMaxRtrSolicitations		ECUC-INTEGER-PARAM-DEF
BSW Description		
<p>Maximum number of Router Solicitations that will be sent before the first Router Advertisement has been received.</p> <p>0 = No Router Solicitations will be sent. This has no impact on handling Router Advertisements.</p> <p>[RFC4861 6.3.7. Sending Router Solicitations]</p> <p>Default: MAX_RTR_SOLICITATIONS = 3 transmissions</p>		
Template Description		
Maximum number of Router Solicitations that will be sent before the first Router Advertisement has been received.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpMaxRtrSolicitations</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00142]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig	
BSW Parameter		BSW Type
TcplpNdpPrefixList		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies a list of prefixes to be treated as "on-link" according to IETF RFC 4861 Section 5.1.		
Template Description		
Internet Protocol version 6 (IPv6) configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology:: <a href="#">Ipv6Configuration</a>		
Mapping Rule		Mapping Type
<p>A distinct list of all prefixes used within the same local network shall be retrieved for the respective ECU configuration.</p> <p>This can be achieved by following all socket connections of this ECU, identify the communication partners and their NetworkEndPoint elements via the ApplicationEndpoint references, retrieve the prefixes of NetworkEndPoint/Ipv6Configuration/ipAddressPrefixLength and NetworkEndPoint/Ipv6Configuration/ipv6Address and create a distinct list of them.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00205]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig/TcplpNdpPrefixList	
BSW Parameter		BSW Type
TcplpNdpPrefixListEntry		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		





Single entry in the prefix list.	
<b>Template Description</b>	
Internet Protocol version 6 (IPv6) configuration.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration	
<b>Mapping Rule</b>	<b>Mapping Type</b>
see upstream mapping in TcplpNdpPrefixList	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00206]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouterDiscoveryConfig/TcplpNdpPrefixList/TcplpNdpPrefixListEntry
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpNdpPrefixListEntryPrefixAddress	ECUC-STRING-PARAM-DEF
<b>BSW Description</b>	
The prefix of an IP address. This prefix can be used for on-link determination.	
<b>Template Description</b>	
Internet Protocol version 6 (IPv6) configuration.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration	
<b>Mapping Rule</b>	<b>Mapping Type</b>
see upstream mapping in TcplpNdpPrefixList	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00208]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouterDiscoveryConfig/TcplpNdpPrefixList/TcplpNdpPrefixListEntry
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpNdpPrefixListEntryPrefixLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
The number of leading bits in the Prefix that are valid.	
<b>Template Description</b>	
Internet Protocol version 6 (IPv6) configuration.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration	
<b>Mapping Rule</b>	<b>Mapping Type</b>
see upstream mapping in TcplpNdpPrefixList	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00207]



BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig	
BSW Parameter		BSW Type
TcplpNdpPrefixListSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of entries in the on-link prefix list. [RFC4861 5.1. Conceptual Data Structures]		
Template Description		
Maximum number of entries in the on-link prefix list.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpPrefixListSize</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00140]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig	
BSW Parameter		BSW Type
TcplpNdpRndRtrSolicitationDelayEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If enabled the first router solicitation will be delayed randomly from [0...MAX_RTR_SOLICITATION_DELAY]. Otherwise the first router solicitation will be sent after exactly MAX_RTR_SOLICITATION_DELAY milliseconds. [RFC4861 6.3.7. Sending Router Solicitations] Default: Enabled		
Template Description		
If enabled the first router solicitation will be delayed randomly from [0...MAX_RTR_SOLICITATION_DELAY]. Otherwise the first router solicitation will be sent after exactly MAX_RTR_SOLICITATION_DELAY milliseconds.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpRndRtrSolicitationDelayEnabled</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00141]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpPrefixRouter DiscoveryConfig	
BSW Parameter		BSW Type
TcplpNdpRtrSolicitationInterval		ECUC-FLOAT-PARAM-DEF
BSW Description		





Interval between consecutive Router Solicitations in (s). [RFC4861 6.3.7. Sending Router Solicitations] Default: RTR_SOLICITATION_INTERVAL = 4 seconds	
<b>Template Description</b>	
Interval between consecutive Router Solicitations in (s).	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpRtrSolicitationInterval</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00144]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpConfig/TcplpV6Config/TcplpNdpConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpNdpSlaacConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Specifies the configuration parameters for Stateless Address AutoConfiguration.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00122]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpConfig/TcplpV6Config/TcplpNdpConfig/TcplpNdpSlaacConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpNdpSlaacDadNumberOfTransmissions		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Number of Neighbor Solicitations that have to be unanswered in order to set an autoconfigured address to PREFERRED (usable) state. [RFC4861 5.1. Node Configuration Variables] Default: DupAddrDetectTransmits = 1 Setting this value to 0 turns off DAD.		
<b>Template Description</b>		
Number of Neighbor Solicitations that have to be unanswered in order to set an autoconfigured address to PREFERRED (usable) state.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps. <a href="#">tcpIpNdpSlaacDadNumberOfTransmissions</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00128]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpSlaacConfig	
BSW Parameter		BSW Type
TcplpNdpSlaacDadRetransmissionDelay		ECUC-FLOAT-PARAM-DEF
BSW Description		
Sets the maximum value for the address configuration delay (s). According to [RFC4861 5.4.2. Sending Neighbor Solicitation Messages] this value should be the same as MAX_RTR_SOLICITATION_DELAY. Default: MAX_RTR_SOLICITATION_DELAY = 1 second		
Template Description		
Sets the maximum value for the address configuration delay (s).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpSlaacDadRetransmissionDelay		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00127]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpSlaacConfig	
BSW Parameter		BSW Type
TcplpNdpSlaacDelayEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If enabled transmission of the first DAD Neighbor Solicitation will be delayed by a random value from [0...MAX_DAD_DELAY]. "This serves to alleviate congestion when many nodes start up on the link at the same time, such as after a power failure, and may help to avoid race conditions when more than one node is trying to solicit for the same address at the same time." "The delay will avoid similar congestion when multiple nodes are going to configure addresses by receiving the same single multicast router advertisement." [RFC4861 5.4.2. Sending Neighbor Solicitation Messages] Default: True		
Template Description		
If enabled transmission of the first DAD Neighbor Solicitation will be delayed by a random value from [0...MAX_DAD_DELAY].		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpSlaacDelayEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00125]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpConfig/TcplpIpV6Config/TcplpNdpConfig/TcplpNdpSlaacConfig	
BSW Parameter		BSW Type
TcplpNdpSlaacOptimisticDadEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enable Optimistic Duplicate Address Detection (DAD) according to RFC4429.		





Template Description	
Enable Optimistic Duplicate Address Detection (DAD) according to RFC4429.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6NdpProps.tcpIpNdpSlAACOptimisticDadEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00126]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig	
BSW Parameter		BSW Type
TcplpSecConfigSet		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the IPsec configuration.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00288]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet	
BSW Parameter		BSW Type
TcplpEncryptionAlgorithm		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for configuration of supported encryption algorithm transforms. This container is used to configure supported algorithms for ESP. The transform algorithm must be configured in the Crypto module.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00317]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpEncryptionAlgorithm	
BSW Parameter		BSW Type
TcplpEncryptionTransformIdentifier		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Encryption algorithm transform identifier. Parameter values are defined as per IETF RFC 7296 3.3.2		





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00311]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpEncryptionAlgorithm	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpEncryptionTransformJobPair		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Container for storing the CSM integrity transform job references for performing authentication. Valid for ESP and AH. At least one Integrity transform job pair needs to be configured for each Integrity Algorithm.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00312]	

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpEncryptionAlgorithm/TcplpEncryptionTransformJobPair	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpCsmDecryptJobRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
The referenced Csm job is used for the execution of the CsmMacVerify primitive needed for this transform. Must be a valid decryption job of the parent type.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00314]	

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpEncryptionAlgorithm/TcplpEncryptionTransformJobPair	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpCsmEncryptJobRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		





The referenced Csm job is used for the execution of the CsmMacGenerate primitive needed for this transform. Must be a valid encryption job of the parent type.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00313]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpIntegrityAlgorithm		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Container for configuration of supported integrity algorithm transforms. This container is used to configure supported algorithms for AH. The transform algorithm must be configured in the Crypto module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00294]	

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpIntegrityAlgorithm	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpIntegrityTransformIdentifier		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Integrity algorithm transform identifier. Parameter values are defined as per IETF RFC 7296 3.3.2		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00307]	

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpIntegrityAlgorithm	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpIntegrityTransformJobPair		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		





Container for storing the CSM integrity transform job references for performing authentication. Valid for ESP and AH. At least one Integrity transform job pair needs to be configured for each Integrity Algorithm.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00308]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpIntegrityAlgorithm/TcplpIntegrityTransformJobPair
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpCsmGenerateJobRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
The referenced Csm job is used for the execution of the CsmMacGenerate primitive needed for this transform. Must be a valid MAC generate job of the parent type.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00309]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpIntegrityAlgorithm/TcplpIntegrityTransformJobPair
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpCsmVerifyJobRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
The referenced Csm job is used for the execution of the CsmMacVerify primitive needed for this transform. Must be a valid MAC verify job of the parent type.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00310]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpSecAuditEventCalloutFunction	ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>	





This parameter specifies the name of a callout function that will be called for each auditable event.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00292]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpSecCalloutHeaderFile		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
This parameter specifies the name of the header file containing the definition for the functions specified in TcplpSecSpd CalloutFunction and TcplpSecAuditEvent		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00291]	

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpSecSpdCalloutFunction		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
This parameter specifies the name of a callout function that shall be called for each Rx/Tx message, after the IPsec has processed all corresponding SPD entries and has determined the policy. The callout function allows it to override the applied policy.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00290]	

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpRemoteDeviceNum		ECUC-INTEGER-PARAM-DEF







BSW Description	
Amount of remote clients which will negotiate a Security Association (SA).	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00289]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet	
BSW Parameter		BSW Type
TcplpSpdEntry		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Entry of the Security Policy Database (SPD).		
Template Description		
This element defines an IPsec rule that describes communication traffic that is monitored, protected and filtered.		
M2 Parameter		
SystemTemplate::SecureCommunication::IPSecRule		
Mapping Rule		Mapping Type
Each SpdEntry shall be derived from the IPSecRules that are defined on a NetworkEndpoint that defines the local IP Address range.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00293]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
BSW Parameter		BSW Type
TcplpIpSecHeaderType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Header type specifying the IPsec security mechanism.		
Template Description		
Header type specifying the IPsec security mechanism.		
M2 Parameter		
SystemTemplate::SecureCommunication::IPSecRule.headerType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00297]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry/TcplpIpSecHeaderType	
BSW Parameter		BSW Type





TCPIP_IPSEC_HDR_AH		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
Authentication Header (AH)		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::IPsecHeaderTypeEnum.ah		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry/TcplpIpSecHeaderType	
<b>BSW Parameter</b>		<b>BSW Type</b>
TCPIP_IPSEC_HDR_ESP		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
Encapsulating Security Payloads (ESP)		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::IPsecHeaderTypeEnum.esp		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry/TcplpIpSecHeaderType	
<b>BSW Parameter</b>		<b>BSW Type</b>
TCPIP_IPSEC_HDR_NONE		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
No header		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::IPsecHeaderTypeEnum.none		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
<b>BSW Parameter</b>		<b>BSW Type</b>





TcpIplpSecPolicy	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Policy for usage of IPsec.	
<b>Template Description</b>	
An IPsec policy defines the rules that determine which type of IP traffic needs to be secured using IPsec and how that traffic is secured.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::IPSecRule.policy	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_TcpIplp_00295]

<b>BSW Module</b>	<b>BSW Context</b>
TcpIplp	TcpIplp/TcpIplpConfig/TcpIplpSecConfigSet/TcpIplpSpdEntry/TcpIplpSecPolicy
<b>BSW Parameter</b>	<b>BSW Type</b>
TCPIP_IPSEC_POLICY_BYPASS	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
Signifying that no IPsec processing should be done at all.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::IPsecPolicyEnum.passthrough	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
TcpIplp	TcpIplp/TcpIplpConfig/TcpIplpSecConfigSet/TcpIplpSpdEntry/TcpIplpSecPolicy
<b>BSW Parameter</b>	<b>BSW Type</b>
TCPIP_IPSEC_POLICY_DISCARD	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
Signifying that packets should be discarded	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::IPsecPolicyEnum.drop	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry/TcplpIpSecPolicy	
BSW Parameter		BSW Type
TCPIP_IPSEC_POLICY_OPTIONAL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
Signifying that packets should be discarded and a diagnostic ICMP returned.		
M2 Parameter		
SystemTemplate::SecureCommunication::IPsecPolicyEnum.reject		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry/TcplpIpSecPolicy	
BSW Parameter		BSW Type
TCPIP_IPSEC_POLICY_PROTECT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
Signifying that packets should be protected.		
M2 Parameter		
SystemTemplate::SecureCommunication::IPsecPolicyEnum.ipsec		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
BSW Parameter		BSW Type
TcplpIpSecPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Priority of the SPD entry. The processing of entries is based on priority, starting with the highest priority "0". The first matching SPD entry defines the policy.		
Template Description		
This attribute defines the priority of the IPsecRule (SPD entry). The processing of entries is based on priority, starting with the highest priority "0".		
M2 Parameter		
SystemTemplate::SecureCommunication::IPsecRule.priority		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00296]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
BSW Parameter		BSW Type
TcplpLocalIpAddrEnd		ECUC-STRING-PARAM-DEF
BSW Description		
End value of the remote IP address range.		
Template Description		
The network endpoint defines the network addressing (e.g. IP-Address or MAC multicast address).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpoint		
Mapping Rule		Mapping Type
The local IP address range shall be derived from the NetworkEndpoint that aggregates the IPsec Config and the collection of IPsecRules from which the Spd entries are derived. Please note that the networkEndpointAddress is allowed to define a subnet with the Ipv4Configuration.network Mask.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00301]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
BSW Parameter		BSW Type
TcplpLocalIpAddrStart		ECUC-STRING-PARAM-DEF
BSW Description		
Start value of the local IP address range.		
Template Description		
The network endpoint defines the network addressing (e.g. IP-Address or MAC multicast address).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpoint		
Mapping Rule		Mapping Type
The local IP address range shall be derived from the NetworkEndpoint that aggregates the IPsec Config and the collection of IPsecRules from which the Spd entries are derived. Please note that the networkEndpointAddress is allowed to define a subnet with the Ipv4Configuration.network Mask.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00300]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
BSW Parameter		BSW Type
TcplpLocalPortRangeEnd		ECUC-INTEGER-PARAM-DEF
BSW Description		
End value of the local port range.		
Template Description		





<p>This attribute restricts the traffic monitoring and defines an end value for the local port range.</p> <p>If this attribute is not set then this rule shall be effective for all local ports.</p> <p>Please note that port ranges are currently not supported in the AUTOSAR AP's operating system backend. If AP systems are involved, each IPsec rule may only contain a single port.</p>	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::IPSecRule.localPortRangeEnd	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00299]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpLocalPortRangeStart	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Start value of the local port range.	
<b>Template Description</b>	
<p>This attribute restricts the traffic monitoring and defines a start value for the local port range.</p> <p>If this attribute is not set then this rule shall be effective for all local ports.</p> <p>Please note that port ranges are currently not supported in the AUTOSAR AP's operating system backend. If AP systems are involved, each IPsec rule may only contain a single port.</p>	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::IPSecRule.localPortRangeStart	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00298]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpProtocol	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Relevant IP protocol. Note: As specified in IETF Rfc 4301 section 6, ICMP error messages will always be BYPASSed. The policy for TCPIP_PROTOCOL_ICMP only applies to ICMP non-error messages. (Echo reply/response).	
<b>Template Description</b>	
This attribute defines the relevant IP protocol used in the Security Policy Database (SPD) entry.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::IPSecRule.ipProtocol	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00306]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpSpdEntry/TcplpProtocol	
BSW Parameter		BSW Type
TCPIP_PROTOCOL_ANY		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
ANY protocol		
M2 Parameter		
SystemTemplate::SecureCommunication::IPseclpProtocolEnum.any		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpSpdEntry/TcplpProtocol	
BSW Parameter		BSW Type
TCPIP_PROTOCOL_ICMP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
Internet Control Message Protocol (ICMP)		
M2 Parameter		
SystemTemplate::SecureCommunication::IPseclpProtocolEnum.icmp		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSecConfigSet/TcplpSpdEntry/TcplpProtocol	
BSW Parameter		BSW Type
TCPIP_PROTOCOL_TCP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
TCP Protocol		
M2 Parameter		
SystemTemplate::SecureCommunication::IPseclpProtocolEnum.tcp		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry/TcplpProtocol	
BSW Parameter		BSW Type
TCPIP_PROTOCOL_UDP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
UDP Protocol		
M2 Parameter		
SystemTemplate::SecureCommunication::IPsecIpProtocolEnum.udp		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
BSW Parameter		BSW Type
TcplpRemIpAddrEnd		ECUC-STRING-PARAM-DEF
BSW Description		
End value of the remote IP address range.		
Template Description		
Definition of the remote NetworkEndpoint. With this reference the connection between the local NetworkEndpoint and the remote NetworkEndpoint is described on which the traffic is monitored.		
M2 Parameter		
SystemTemplate::SecureCommunication::IPSecRule.remoteIpAddress		
Mapping Rule		Mapping Type
The remote IP address range shall be derived from the NetworkEndpoints that are referenced by IPSecRule.remotepAddress. Please note that the networkEndpointAddress is allowed to define a subnet with the Ipv4Configuration.networkMask.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00303]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
BSW Parameter		BSW Type
TcplpRemIpAddrStart		ECUC-STRING-PARAM-DEF
BSW Description		
Start value of the remote IP address range.		
Template Description		
Definition of the remote NetworkEndpoint. With this reference the connection between the local NetworkEndpoint and the remote NetworkEndpoint is described on which the traffic is monitored.		
M2 Parameter		
SystemTemplate::SecureCommunication::IPSecRule.remoteIpAddress		
Mapping Rule		Mapping Type







The remote IP address range shall be derived from the NetworkEndpoints that are referenced by IPSecRule.remoteIpAddress. Please note that the networkEndpointAddress is allowed to define a subnet with the Ipv4Configuration.networkMask.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00302]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpRemPortRangeEnd		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
End value of the remote port range.		
<b>Template Description</b>		
This attribute restricts the traffic monitoring and defines an end value for the remote port range. If this attribute is not set then this rule shall be effective for all local ports. Please note that port ranges are currently not supported in the AUTOSAR AP's operating system backend. If AP systems are involved, each IPsec rule may only contain a single port.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::IPSecRule.remotePortRangeEnd		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00305]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpIpSecConfigSet/TcplpSpdEntry	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpRemPortRangeStart		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Start value of the remote port range.		
<b>Template Description</b>		
This attribute restricts the traffic monitoring and defines a start value for the remote port range. If this attribute is not set then this rule shall be effective for all local ports. Please note that port ranges are currently not supported in the AUTOSAR AP's operating system backend. If AP systems are involved, each IPsec rule may only contain a single port.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::IPSecRule.remotePortRangeStart		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00304]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig	
BSW Parameter	BSW Type	
TcplpLocalAddr	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Specifies the local IP (Internet Protocol) addresses used for IP communication.		
Template Description		
The network endpoint defines the network addressing (e.g. IP-Address or MAC multicast address).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpoint		
Mapping Rule		Mapping Type
Create container for each NetworkEndpoint element that is defined in the ECU Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00020]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr	
BSW Parameter	BSW Type	
TcplpAddrAssignment	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container is a subcontainer of TcplpLocalAddr and specifies the assignment policy for the IP address.		
Template Description		
To build a valid network endpoint address there has to be either one MAC multicast group reference or an ipv4 configuration or an ipv6 configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpointAddress		
Mapping Rule		Mapping Type
Create container for each NetworkEndpointAddress element that is defined inside of the enclosing NetworkEndpoint.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00033]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment	
BSW Parameter	BSW Type	
TcplpAssignmentLifetime	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Defines the lifetime of a dynamically fetched IP address. If TcplpAssignmentMethod = TCPIP_STATIC then TcplpAssignmentLifetime shall be omitted.		
Template Description		
<b>Ipv4Configuration.ipAddressKeepBehavior:</b> Defines the lifetime of a dynamically fetched IP address.  <b>Ipv6Configuration.ipAddressKeepBehavior:</b> Defines the lifetime of a dynamically fetched IP address.		
M2 Parameter		





SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4Configuration. <a href="#">IpAddressKeepBehavior</a> , SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration. <a href="#">IpAddressKeepBehavior</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00186]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment/TcplpAssignmentLifetime	
BSW Parameter	BSW Type	
TCPIP_FORGET	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
After a dynamic IP address has been assigned just use it for this link-up time.		
Template Description		
After a dynamic IP address has been assigned just use it for this session.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::IpAddressKeepEnum. <a href="#">forget</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment/TcplpAssignmentLifetime	
BSW Parameter	BSW Type	
TCPIP_STORE	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
After a dynamic IP address has been assigned store the address persistently.		
Template Description		
After a dynamic IP address has been assigned store the address persistently.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::IpAddressKeepEnum. <a href="#">storePersistently</a>		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment	
BSW Parameter	BSW Type	
TcplpAssignmentMethod	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Method of address assignment		





Template Description	
<b>Ipv4Configuration.ipv4AddressSource:</b> Defines how the node obtains its IP address.	
<b>Ipv6Configuration.ipv6AddressSource:</b> Defines how the node obtains its IP address.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4Configuration. <a href="#">ipv4AddressSource</a> , SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration. <a href="#">ipv6AddressSource</a>	
Mapping Rule	Mapping Type
Derive parameter from the AddressSource attributes.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00035]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment/TcplpAssignmentMethod	
BSW Parameter		BSW Type
TCPIP_DHCP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Dynamic Assigned IP Address using DHCP		
Template Description		
<b>Ipv4AddressSourceEnum.dhcpv4:</b> DHCP is a service for the automatic IP configuration of a client.		
<b>Ipv6AddressSourceEnum.dhcpv6:</b> DHCP is a service for the automatic IP configuration of a client.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4AddressSourceEnum. <a href="#">dhcpv4</a> , SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6AddressSourceEnum. <a href="#">dhcpv6</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment/TcplpAssignmentMethod	
BSW Parameter		BSW Type
TCPIP_IPV6_ROUTER		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Dynamic Configured IPv6 Address by Router Advertisement		
Template Description		
IPv6 Stateless Autoconfiguration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6AddressSourceEnum. <a href="#">routerAdvertisement</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment/TcplpAssignmentMethod	
BSW Parameter		BSW Type
TCPIP_LINKLOCAL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Linklocal IPv4/IPv6 Address Assignment		
Template Description		
<b>Ipv4AddressSourceEnum.autoIp:</b> AutoIP is used to dynamically assign IP addresses at device startup.		
<b>Ipv6AddressSourceEnum.linkLocal:</b> LinkLocal is intended only for communications within the segment of a local network (a link) or a point-to-point connection that a host is connected to.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4AddressSourceEnum. <a href="#">autoIp</a> , SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6AddressSourceEnum. <a href="#">linkLocal</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment/TcplpAssignmentMethod	
BSW Parameter		BSW Type
TCPIP_LINKLOCAL_DOIP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Linklocal IPv4/IPv6 Address Assignment using DoIP Parameters		
Template Description		
<b>Ipv4AddressSourceEnum.autoIp_doip:</b> Linklocal IPv4 Address Assignment using DoIP Parameters		
<b>Ipv6AddressSourceEnum.linkLocal_doip:</b> Linklocal IPv6 Address Assignment using DoIP Parameters		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4AddressSourceEnum. <a href="#">autoIp_doip</a> , SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6AddressSourceEnum. <a href="#">linkLocal_doip</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment/TcplpAssignmentMethod	
BSW Parameter		BSW Type
TCPIP_STATIC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Static Assigned IP Address		
Template Description		





<b>Ipv4AddressSourceEnum.fixed:</b> The IP Address shall be declared manually.	
<b>Ipv6AddressSourceEnum.fixed:</b> The IP Address shall be declared manually.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4AddressSourceEnum.fixed, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6AddressSourceEnum.fixed	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpAssignmentPriority	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Priority of assignment (1 is highest). If a new address from an assignment method with a higher priority is available, it overwrites the IP address previously assigned by an assignment method with a lower priority.	
<b>Template Description</b>	
<b>Ipv4Configuration.assignmentPriority:</b> Priority of assignment (1 is highest). If a new address from an assignment method with a higher priority is available, it overwrites the IP address previously assigned by an assignment method with a lower priority.	
<b>Ipv6Configuration.assignmentPriority:</b> Priority of assignment (1 is highest). If a new address from an assignment method with a higher priority is available, it overwrites the IP address previously assigned by an assignment method with a lower priority.	
<b>M2 Parameter</b>	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4Configuration.assignmentPriority, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration.assignmentPriority	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00037]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddrAssignment
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpAssignmentTrigger	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
Trigger of address assignment.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00036]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr	
BSW Parameter		BSW Type
TcplpAddrId		ECUC-INTEGER-PARAM-DEF
BSW Description		
IP address table identifier assigned by TCP/IP stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00029]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr	
BSW Parameter		BSW Type
TcplpAddressType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Address type.		
Template Description		
To build a valid network endpoint address there has to be either one MAC multicast group reference or an ipv4 configuration or an ipv6 configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpointAddress		
Mapping Rule		Mapping Type
shall be derived from the IP Address (see more details in upstream mapping of enum literals).		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00031]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddressType	
BSW Parameter		BSW Type
TCPIP_ANYCAST		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Anycast address		
Template Description		
This attribute is used to enable anycast addressing (i.e. to one of multiple receivers).		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration.enableAnycast		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddressType	
BSW Parameter		BSW Type
TCPIP_MULTICAST		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Multicast address.		
Template Description		
To build a valid network endpoint address there has to be either one MAC multicast group reference or an ipv4 configuration or an ipv6 configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpointAddress		
Mapping Rule		Mapping Type
Shall be set if Multicast Address is used. IPv4: 224.0.0.0 to 239.255.255.255 IPv6: address with the prefix ff00::/8.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpAddressType	
BSW Parameter		BSW Type
TCPIP_UNICAST		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Unicast address		
Template Description		
To build a valid network endpoint address there has to be either one MAC multicast group reference or an ipv4 configuration or an ipv6 configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpointAddress		
Mapping Rule		Mapping Type
Shall be set if Unicast Address is used.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr	
BSW Parameter		BSW Type
TcplpCtrlRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a TcplpCtrl specifying the EthIf Controller where the IP address shall be assigned.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00032]



BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr	
BSW Parameter	BSW Type	
TcplpDomainType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Address family.		
Template Description		
To build a valid network endpoint address there has to be either one MAC multicast group reference or an ipv4 configuration or an ipv6 configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::NetworkEndpointAddress		
Mapping Rule		Mapping Type
Derive this parameter from the NetworkEndpointAddress.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00030]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpDomainType	
BSW Parameter	BSW Type	
TCPIP_AF_INET	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
IPv4 address		
Template Description		
Internet Protocol version 4 (IPv4) configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4Configuration		
Mapping Rule		Mapping Type
Set literal to TCPIP_AF_INET when the NetworkEndpoint contains an Ipv4Configuration.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpDomainType	
BSW Parameter	BSW Type	
TCPIP_AF_INET6	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
IPv6 address		
Template Description		
Internet Protocol version 6 (IPv6) configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration		
Mapping Rule		Mapping Type
Set literal to TCPIP_AF_INET6 when the NetworkEndpoint contains an Ipv6Configuration.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr	
BSW Parameter	BSW Type	
TcplpLocalAddrIPv6ExtHeaderFilterRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a set of IPv6 Extension Headers which are allowed for this local IPv6 address. Note: this parameter is only relevant if the related TcplpDomainType is TCPIP_AF_INET6.		
Template Description		
Reference to a list of IPv6 Extension Headers allowed for this SocketConnection. If no list is referenced all IPv6 Extension Headers are allowed and processed.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SocketAddress.allowedIPv6ExtHeaders		
Mapping Rule		Mapping Type
1:1 mapping. constraint: All related SocketConnections shall reference either no or exactly the same IPv6ExtHeaderFilterList.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00200]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr	
BSW Parameter	BSW Type	
TcplpStaticIpAddressConfig	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container is a subcontainer of TcplpLocalAddr and specifies a static IP address including directly related parameters.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00034]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpStaticIpAddressConfig	
BSW Parameter	BSW Type	
TcplpDefaultRouter	ECUC-STRING-PARAM-DEF	
BSW Description		
IP address of default router (gateway)		
Template Description		
<b>Ipv6Configuration.defaultRouter:</b> IP address of the default router.  <b>Ipv4Configuration.defaultGateway:</b> IP address of the default gateway.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration.defaultRouter, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4Configuration.defaultGateway		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00040]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpStaticIpAddressConfig
BSW Parameter	BSW Type
TcplpNetmask	ECUC-INTEGER-PARAM-DEF
BSW Description	
Network mask of IPv4 address or address prefix of IPv6 address in CIDR Notation, i.e. decimal value between 0 and 32 (IPv4) or 0 and 128 (IPv6) that describes the number of significant bits defining the network number or prefix of an IP address.	
Template Description	
<b>Ipv4Configuration.networkMask:</b> Network mask. Notation 255.255.255.255  <b>Ipv6Configuration.ipAddressPrefixLength:</b> IPv6 prefix length defines the part of the IPv6 address that is the network prefix.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4Configuration.networkMask, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration.ipAddressPrefixLength	
Mapping Rule	Mapping Type
- 1:1 mapping for Ipv6 - conversion to CIDR notation for Ipv4	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00039]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpLocalAddr/TcplpStaticIpAddressConfig
BSW Parameter	BSW Type
TcplpStaticIpAddress	ECUC-STRING-PARAM-DEF
BSW Description	
Static IP Address. To specify any IP address for a certain EthIfCtrl, "ANY" has to be set as wildcard. See Tcplp_Bind() for more details.	
Template Description	
<b>Ipv4Configuration.ipv4Address:</b> IPv4 Address. Notation: 255.255.255.255. The IP Address shall be declared in case the ipv4AddressSource is FIXED and thus no auto-configuration mechanism is used.  <b>Ipv6Configuration.ipv6Address:</b> IPv6 Address. Notation: FFFF::...:FFFF. The IP Address shall be declared in case the ipv6AddressSource is FIXED and thus no auto-configuration mechanism is used.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv4Configuration.ipv4Address, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::Ipv6Configuration.ipv6Address	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00038]

BSW Module		BSW Context	
Tcplp		Tcplp/TcplpConfig	
BSW Parameter		BSW Type	
TcplpNvmBlock		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Configuration of optional usage of Nvm in case the Tcplp module requires non volatile memory in the Ecu to store information (e.g. IP Address received via DHCP and shall be stored).			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Tcplp_00184]

BSW Module		BSW Context	
Tcplp		Tcplp/TcplpConfig/TcplpNvmBlock	
BSW Parameter		BSW Type	
TcplpNvmBlockDescriptorRef		ECUC-REFERENCE-DEF	
BSW Description			
Reference to the Nvm block description in the Nvm module configuration.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Tcplp_00185]

BSW Module		BSW Context	
Tcplp		Tcplp/TcplpConfig	
BSW Parameter		BSW Type	
TcplpPhysAddrConfig		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
Specifies the physical address configuration.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_Tcplp_00083]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpPhysAddrConfig	
BSW Parameter	BSW Type	
TcplpPhysAddrChgHandler	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container is a subcontainer of TcplpPhysAddrConfig and specifies the configuration parameters for physical address change handler.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00084]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpPhysAddrConfig/TcplpPhysAddrChgHandler	
BSW Parameter	BSW Type	
TcplpPhysAddrChgHandlerName	ECUC-FUNCTION-NAME-DEF	
BSW Description		
This parameter defines the name of the physical address change function <Up>_PhysAddrTableChg.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00086]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig	
BSW Parameter	BSW Type	
TcplpSocketOwnerConfig	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Specifies the upper layer modules of Tcplp using the socket API.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00172]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig	
BSW Parameter		BSW Type
TcplpSocketOwner		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is a subcontainer of TcplpSocketOwnerConfig and specifies an upper layer of Tcplp that uses the socket API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00173]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
BSW Parameter		BSW Type
TcplpSocketOwnerCopyTxDataName		ECUC-STRING-PARAM-DEF
BSW Description		
This parameter defines the name of the <Up_CopyTxData> function of the TcplpSocketOwner module. The function name shall only be configurable if TcplpSocketOwnerUpperLayerType is set to CDD.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00180]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
BSW Parameter		BSW Type
TcplpSocketOwnerHeaderFileName		ECUC-STRING-PARAM-DEF
BSW Description		
This parameter specifies the name of the header file containing the definition of the TcplpSocketOwner module functions. The header file name shall only be configurable if TcplpSocketOwnerUpperLayerType is set to CDD.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00175]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
BSW Parameter	BSW Type	
TcplpSocketOwnerId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This value specifies the ID of the socket user.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00316]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
BSW Parameter	BSW Type	
TcplpSocketOwnerLocalIpAddrAssignmentChgName	ECUC-STRING-PARAM-DEF	
BSW Description		
This parameter defines the name of the <Up_LocalIpAddrAssignmentChg> function of the TcplpSocketOwner module. The function name shall only be configurable if TcplpSocketOwnerUpperLayerType is set to CDD.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00181]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
BSW Parameter	BSW Type	
TcplpSocketOwnerRxIndicationName	ECUC-STRING-PARAM-DEF	
BSW Description		
This parameter defines the name of the <Up_RxIndication> function of the TcplpSocketOwner module. The function name shall only be configurable if TcplpSocketOwnerUpperLayerType is set to CDD.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00176]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
<b>BSW Parameter</b>	<b>BSW Type</b>	
TcplpSocketOwnerTcplAcceptedName	ECUC-STRING-PARAM-DEF	
<b>BSW Description</b>		
This parameter defines the name of the <Up_TcpAccepted> function of the TcplpSocketOwner module. The function name shall only be configurable if TcplpSocketOwnerUpperLayerType is set to CDD.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00178]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
<b>BSW Parameter</b>	<b>BSW Type</b>	
TcplpSocketOwnerTcplConnectedName	ECUC-STRING-PARAM-DEF	
<b>BSW Description</b>		
This parameter defines the name of the <Up_TcpConnected> function of the TcplpSocketOwner module. The function name shall only be configurable if TcplpSocketOwnerUpperLayerType is set to CDD.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00179]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
<b>BSW Parameter</b>	<b>BSW Type</b>	
TcplpSocketOwnerTcplpEventName	ECUC-FUNCTION-NAME-DEF	
<b>BSW Description</b>		
This parameter defines the name of the <Up_TcplpEvent> function of the TcplpSocketOwner module. The function name shall only be configurable if TcplpSocketOwnerUpperLayerType is set to CDD.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00197]



BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
BSW Parameter	BSW Type	
TcplpSocketOwnerTxConfirmationName	ECUC-STRING-PARAM-DEF	
BSW Description		
This parameter defines the name of the <Up_TxConfirmation> function of the TcplpSocketOwner module. The function name shall only be configurable if TcplpSocketOwnerUpperLayerType is set to CDD.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00177]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpSocketOwnerConfig/TcplpSocketOwner	
BSW Parameter	BSW Type	
TcplpSocketOwnerUpperLayerType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
This parameter specifies the type of the upper layer module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00174]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig	
BSW Parameter	BSW Type	
TcplpTcplpConfig	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Specifies the configuration parameters of the TCP (Transmission Control Protocol) sub-module.		
Template Description		
Content Model for TCP configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpTp		
Mapping Rule		Mapping Type
This container shall be created if the TcpTp element is used in the ECU Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00025]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter		BSW Type
TcplpDelayedAckTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
The maximal time an acknowledgment is delayed for transmission in seconds.For further details, see also IETF RfC 1122 section 4.2.3.2.		
Template Description		
The maximal time an acknowledgment is delayed for transmission in seconds.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps. <a href="#">tcpDelayedAckTimeout</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00318]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter		BSW Type
TcplpTcpConfigOptionFilter		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container describes the white list for the filtering of TCP options, i.e. segments containing TCP options not listed here shall be silently dropped.		
Template Description		
Permitted list for the filtering of TCP options.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::TcpOptionFilterSet::TcpOptionFilterList		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00202]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig/TcplpTcpConfigOptionFilter	
BSW Parameter		BSW Type
TcplpTcpConfigOptionFilterEntry		ECUC-INTEGER-PARAM-DEF
BSW Description		
TCP option kind allowed by this filter.		
Template Description		
TCP option kind allowed by this filter.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::TcpOptionFilterSet::TcpOptionFilterList. <a href="#">allowedTcpOption</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00204]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig/TcplpTcpConfigOptionFilter	
BSW Parameter	BSW Type	
TcplpTcpConfigOptionFilterId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Identification of the TCP option filter.		
Template Description		
TCP option kind allowed by this filter.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::TcpOptionFilterSet::TcpOptionFilterList.allowedTcpOption		
Mapping Rule		Mapping Type
The list of allowedTcpOptions in TcpOptionFilterList is ordered. The Id of an entry can be derived from the order.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00203]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpCongestionAvoidanceEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables (TRUE) or disables (FALSE) support of TCP congestion avoidance algorithm according to IETF RFC 5681.		
Template Description		
Enables (TRUE) or disables (FALSE) support of TCP congestion avoidance algorithm according to IETF RFC 5681.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpCongestionAvoidanceEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00061]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpFastRecoveryEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables (TRUE) or disables (FALSE) support of TCP Fast Recovery according to IETF RFC 5681.		
Template Description		
Enables (TRUE) or disables (FALSE) support of TCP Fast Recovery according to IETF RFC 5681.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpFastRecoveryEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00063]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpFastRetransmitEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables (TRUE) or disables (FALSE) support of TCP Fast Retransmission according to IETF RFC 5681.		
Template Description		
Enables (TRUE) or disables (FALSE) support of TCP Fast Retransmission according to IETF RFC 5681.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpFastRetransmitEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00062]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpFinWait2Timeout	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Timeout in [s] to receive a FIN from the remote node (after this node has initiated connection termination), i.e. maximum time waiting in FINWAIT-2 for a connection termination request from the remote TCP.		
Template Description		
Timeout in [s] to receive a FIN from the remote node (after this node has initiated connection termination), i.e. maximum time waiting in FINWAIT-2 for a connection termination request from the remote TCP.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpFinWait2Timeout		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00066]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpKeepAliveEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables (TRUE) or disables (FALSE) TCP Keep Alive Probes according to IETF RFC 1122 chapter 4.2.3.6		
Template Description		
Enables (TRUE) or disables (FALSE) TCP Keep Alive Probes according to IETF RFC 1122 chapter 4.2.3.6.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpKeepAliveEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00082]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpKeepAliveInterval	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies the interval in [s] between subsequent keepalive probes.		
Template Description		
Specifies the interval in seconds between subsequent keepalive probes.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpKeepAliveInterval		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00070]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpKeepAliveProbesMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of times that a TCP Keep Alive is retransmitted before the connection is closed.		
Template Description		
Maximum number of times that a TCP Keep Alive is retransmitted before the connection is closed.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpKeepAliveProbesMax		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Tcplp_00071]	

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpKeepAliveTime	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Specifies the time in [s] between the last data packet sent (simple ACKs are not considered data) and the first keepalive probe. Note: Setting this configuration parameter to a value smaller or equal to the value of TcplpMainFunctionPeriod results in the transmission of keep alive probes within every MainFunction cycle.		
Template Description		
Specifies the time in [s] between the last data packet sent (simple ACKs are not considered data) and the first keepalive probe.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpKeepAliveTime		
Mapping Rule	Mapping Type	
1:1 mapping	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00087]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpMaxRtx	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of times that a TCP segment is retransmitted before the TCP connection is closed. This parameter is only valid if TcplpTcpRetransmissionTimeout is configured. Note: This parameter also applies for FIN retransmissions.		
Template Description		
Maximum number of times that a TCP segment is retransmitted before the TCP connection is closed. This parameter is only valid if tcpRetransmissionTimeout is configured. Note: This parameter also applies for FIN retransmissions.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpMaxRtx		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00069]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpMsl	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Maximum segment lifetime in [s]. (Note: TIME-WAIT = 2 x TcplpTcpMsl - to ensure that the remote node received the acknowledgment to its connection termination request.)		
Template Description		
Maximum segment lifetime in [s].		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpMsl		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00067]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter	BSW Type	
TcplpTcpNagleEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables (TRUE) or disables (FALSE) support of Nagle's algorithm according to IETF RFC 1122 (chapter 4.2.3.4 When to Send Data). If enabled the Nagle's algorithm is activated per default for all TCP sockets, but can be deactivated via Tcplp_ChangeParameter() API.		





Template Description	
Enables (TRUE) or disables (FALSE) support of Nagle's algorithm according to IETF RFC 1122 (chapter 4.2.3.4 When to Send Data). If enabled the Nagle's algorithm is activated per default for all TCP sockets, but can be deactivated per Socket (with the attribute TcpTp.nagleAlgorithm).	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpNagleEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00059]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter		BSW Type
TcplpTcpReceiveWindowMax		ECUC-INTEGER-PARAM-DEF
BSW Description		
Default value of maximum receive window in bytes.		
Template Description		
Default value of maximum receive window in bytes.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpReceiveWindowMax		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00073]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter		BSW Type
TcplpTcpRetransmissionTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout in [s] before an unacknowledged TCP segment is sent again. If the timeout is disabled or set to INF, no TCP segments shall be retransmitted. Value can be overwritten by Tcplp_ChangeParameter() API for a particular connection.		
Template Description		
Timeout in [s] before an unacknowledged TCP segment is sent again. If the timeout is disabled, no TCP segments shall be retransmitted.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpRetransmissionTimeout		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00068]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter		BSW Type
TcplpTcpSlowStartEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) support of TCP slow start algorithm according to IETF RFC 5681.		
Template Description		
Enables (TRUE) or disables (FALSE) support of TCP slow start algorithm according to IETF RFC 5681.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpSlowStartEnabled		
Mapping Rule		Mapping Type
1:1 mapping		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00060]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter		BSW Type
TcplpTcpSynMaxRtx		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of times that a TCP SYN is retransmitted. Note: SYN will be retried after TcplpTcpRetransmissionTimeout. The connection will be dropped if no matching connection request has been received after the last TCP SYN has been sent and TcplpTcpRetransmissionTimeout has been expired.		
Template Description		
Maximum number of times that a TCP SYN is retransmitted.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpSynMaxRtx		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00064]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
BSW Parameter		BSW Type
TcplpTcpSynReceivedTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout in [s] to complete a remotely initiated TCP connection establishment, i.e. maximum time waiting in SYN-RECEIVED for a confirming connection request acknowledgment after having both received and sent a connection request.		
Template Description		
Timeout in [s] to complete a remotely initiated TCP connection establishment, i.e. maximum time waiting in SYN-RECEIVED for a confirming connection request acknowledgement after having both received and sent a connection request.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpSynReceivedTimeout		
Mapping Rule		Mapping Type







1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00065]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTcpConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTcpTtl		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Default Time-to-live value of outgoing TCP packets.		
<b>Template Description</b>		
Default Time-to-live value of outgoing TCP packets.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::TcpProps.tcpTtl		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00072]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsConfig		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Specifies the configuration parameters of the TLS (Transport Layer Security) sub module.		
<b>Template Description</b>		
This reference identifies the applicable TlsCryptoServiceMapping that adds the ability for TLS-based encryption on the enclosing ApplicationEndpoint.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::ApplicationEndpoint.tlsCryptoMapping		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create this container if at least 1 ApplicationEndpoint.tlsCryptoMapping exists in the scope of this EcuInstance.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00219]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsCiphersuites		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container provides the information about supported ciphersuites used by TLS.		
<b>Template Description</b>		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00222]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites
BSW Parameter	BSW Type
TcplpTlsCertificateIdentity	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container provides information about the certificates used for ciphersuites.	
Template Description	
<b>TlsCryptoCipherSuite.remoteCertificate:</b> This reference identifies the applicable remote certificate.	
<b>TlsCryptoCipherSuite.certificate:</b> This reference identifies the applicable local certificate.	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.remoteCertificate, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.certificate	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create one container for each local/remote certificate pair (or single local or remote certificate) referenced from a TlsCryptoCipherSuite.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00240]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCertificateIdentity
BSW Parameter	BSW Type
TcplpTlsCipherKeyMLocalCertificate	ECUC-REFERENCE-DEF
BSW Description	
Reference to a KeyM certificate used to address the local certificate.	
Template Description	
This reference identifies the applicable local certificate.	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.certificate	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Reference to Representation of Local Certificate in KeyM. For servers configured if key exchange cipher suite is used, for clients only if key exchange cipher suite is used and TcplpTlsConnection/TcplpTlsUseClientAuthenticationRequest is set to true.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00286]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCertificateIdentity	
BSW Parameter		BSW Type
TcplpTlsCipherKeyMRemoteCertificate		ECUC-REFERENCE-DEF
BSW Description		
Reference to KeyM certificate container to reference the remote certificate.		
Template Description		
This reference identifies the applicable remote certificate.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">remoteCertificate</a>		
Mapping Rule		Mapping Type
Reference to Representation of Remote Certificate in KeyM. For clients configured if key exchange cipher suite is used, for servers only if key exchange cipher suite is used and TcplpTlsConnection/TcplpTlsUseClientAuthenticationRequest is set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00287]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCertificateIdentity	
BSW Parameter		BSW Type
TcplpTlsServerNameIdentification		ECUC-STRING-PARAM-DEF
BSW Description		
Defines a server identification name. If present, the name will be added as an extension with the "TLS client hello" handshake message. The TLS server will check for the name to identify the server certificate.		
Template Description		
Server Name Indication (SNI) is needed if the IP address hosts multiple servers (on the same port), each of them using a different certificate.  If the client sends the SNI to the Server in the client hello, the server looks the SNI up in its certificate list and uses the certificate identified by the SNI.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServiceCertificate. <a href="#">serverNameIdentification</a>		
Mapping Rule		Mapping Type
Retrieve the CryptoServiceCertificate representing the certificate of the server from TlsCryptoCipherSuite.  Use CryptoServiceCertificate.serverNameIdentification to configure TcplpTlsServerNameIdentification that hints to the server certificate which needs identification.  Server Name Indication (SNI) is needed if the IP address hosts multiple servers (on the same port), each of them using a different certificate.  If the client sends the SNI to the Server in the client hello, the server looks the SNI up in its certificate list and uses the certificate identified by the SNI.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00278]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites	
BSW Parameter		BSW Type
TcplpTlsCiphersuiteDefinition		ECUC-PARAM-CONF-CONTAINER-DEF





<b>BSW Description</b>	
This container provides the static information of a ciphersuite used by TLS.	
<b>Template Description</b>	
This meta-class represents a cipher suite for describing cryptographic operations in the context of establishing a connection of ApplicationEndpoints that is protected by TLS.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00237]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteDefinition
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsCiphersuiteId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
ID that represents the ciphersuite according to IETF, e.g. RFC4492, Sect. 6, RFC8446, Appendix B.4 or RFC5246, Appendix A.5.	
<b>Template Description</b>	
Identification of the CipherSuite according to the IANA assignments list.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00242]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteDefinition
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsCiphersuiteName	ECUC-STRING-PARAM-DEF
<b>BSW Description</b>	
Provides a verbal name for the ciphersuite. The name should be the one defined in the respective RFC, e.g. TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA256 (TLS 1.2) or TLS_AES_128_GCM_SHA256 (TLS 1.3)	
<b>Template Description</b>	
Name of the CipherSuite according to the IANA assignments list.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteShortLabel	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00244]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteDefinition	
BSW Parameter		BSW Type
TcplpTlsCiphersuitePriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the priority of the cipher. The higher the number the lower the priority.		
Template Description		
This attribute identifies the priority of the cipher suite. Range: 1..65535. Lower values represent higher priorities.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">priority</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00243]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteDefinition	
BSW Parameter		BSW Type
TcplpTlsUseAEADCipher		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the ciphersuite supports AEAD for data en-/decryption.		
Template Description		
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.		
<b>TlsCryptoCipherSuite.encryption:</b> This reference identifies the crypto service primitive for the execution of encryption.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">encryption</a>		
Mapping Rule		Mapping Type
Derive from TlsCryptoCipherSuite.cipherSuiteId or TlsCryptoCipherSuite.encryption.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00247]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteDefinition	
BSW Parameter		BSW Type
TcplpTlsUsePresharedKeys		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines if this ciphersuite uses pre-shared keys. If so, additional configuration or callbacks will be used for pre-shared key negotiation.		
Template Description		





<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.	
<b>TlsCryptoCipherSuite.pskIdentity:</b> Pre-shared key identity shared during the handshake among the communication parties, to establish a TLS connection if the handshake is based on the existence of a pre-shared key.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.pskIdentity	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Derive from TlsCryptoCipherSuite if whether PSK is supported.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00245]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteDefinition	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsUseSecurityExtensionForceEncryptThenMac		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Defines if the security extension according to IETF RFC 7366 shall be supported. This is useful for ciphersuites using CBC mode.		
<b>Template Description</b>		
Defines if the security extension according to IETF RFC 7366 shall be supported. This is useful for cipher suites using CBC mode.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuiteProps. tcpIpTlsUseSecurityExtensionForceEncryptThenMac		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00246]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteDefinition	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsVersion		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Declares the TLS version that this ciphersuite shall be used for.		
<b>Template Description</b>		
This attribute supports the definition of the applicable version of TLS.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.version		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00248]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites	
BSW Parameter	BSW Type	
TcplpTlsCiphersuiteWorker	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container provides the jobs and keys necessary for TLS data transmission and reception.		
Template Description		
This meta-class represents a cipher suite for describing cryptographic operations in the context of establishing a connection of ApplicationEndpoints that is protected by TLS.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00238]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker	
BSW Parameter	BSW Type	
TcplpTlsCipherAEADCipherKeyLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Defines the key length for en- / decryption with authentication data (AEAD).		
Template Description		
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.		
<b>TlsCryptoCipherSuite.encryption:</b> This reference identifies the crypto service primitive for the execution of encryption.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.encryption		
Mapping Rule		Mapping Type
Configure the byte length of the keys used for message encryption if the cipher suite represented by TlsCryptoCipherSuite uses AEAD for message encryption.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00254]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker	
BSW Parameter	BSW Type	
TcplpTlsCipherCsmDecryptJobRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a CSM job to perform the data decryption operation		
Template Description		





<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.	
<b>TlsCryptoCipherSuite.encryption:</b> This reference identifies the crypto service primitive for the execution of encryption.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.encryption	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Configure the reference if the cipher suite represented by TlsCryptoCipherSuite supports encryption.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00255]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsCipherCsmDecryptKeyRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to a CSM key associated to the CSM job that performs the data decryption operation	
<b>Template Description</b>	
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.	
<b>TlsCryptoCipherSuite.encryption:</b> This reference identifies the crypto service primitive for the execution of encryption.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.encryption	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Configure the reference if the cipher suite represented by TlsCryptoCipherSuite supports encryption.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00256]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsCipherCsmEncryptJobRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to a CSM job to perform the data encryption operation	
<b>Template Description</b>	
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.	
<b>TlsCryptoCipherSuite.encryption:</b> This reference identifies the crypto service primitive for the execution of encryption.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.encryption	







Mapping Rule	Mapping Type
Configure the reference if the cipher suite represented by TlsCryptoCipherSuite supports encryption.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00251]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker
BSW Parameter	BSW Type
TcplpTlsCipherCsmEncryptKeyRef	ECUC-REFERENCE-DEF
BSW Description	Reference to a CSM key associated to the CSM job that performs the data encryption operation
Template Description	<p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p> <p><b>TlsCryptoCipherSuite.encryption:</b> This reference identifies the crypto service primitive for the execution of encryption.</p>
M2 Parameter	SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.encryption
Mapping Rule	Mapping Type
Configure the reference if the cipher suite represented by TlsCryptoCipherSuite supports encryption.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00252]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker
BSW Parameter	BSW Type
TcplpTlsCipherCsmMacGenerateJobRef	ECUC-REFERENCE-DEF
BSW Description	Reference to a CSM job to perform the MAC generate operation
Template Description	<p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p> <p><b>TlsCryptoCipherSuite.authentication:</b> This reference identifies the crypto service primitive for the generation and verification of MACs.</p>
M2 Parameter	SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.authentication
Mapping Rule	Mapping Type
Configure the reference if the cipher suite represented by TlsCryptoCipherSuite supports message authentication.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00258]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker	
BSW Parameter		BSW Type
TcplpTlsCipherCsmMacGenerateKeyRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a CSM key associated to the CSM job that performs the MAC generate operation		
Template Description		
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.		
<b>TlsCryptoCipherSuite.authentication:</b> This reference identifies the crypto service primitive for the generation and verification of MACs.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.authentication		
Mapping Rule		Mapping Type
Configure the reference if the cipher suite represented by TlsCryptoCipherSuite supports message authentication.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00259]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker	
BSW Parameter		BSW Type
TcplpTlsCipherCsmMacVerifyJobRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a CSM job to perform the MAC verify operation		
Template Description		
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.		
<b>TlsCryptoCipherSuite.authentication:</b> This reference identifies the crypto service primitive for the generation and verification of MACs.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.authentication		
Mapping Rule		Mapping Type
Configure the reference if the cipher suite represented by TlsCryptoCipherSuite supports message authentication.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00260]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker	
BSW Parameter		BSW Type
TcplpTlsCipherCsmMacVerifyKeyRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a CSM key associated to the CSM job that performs the MAC verify operation		
Template Description		





<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.	
<b>TlsCryptoCipherSuite.authentication:</b> This reference identifies the crypto service primitive for the generation and verification of MACs.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.authentication	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Configure the reference if the cipher suite represented by TlsCryptoCipherSuite supports message authentication.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00261]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsCipherEncryptKeyLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Defines the key length used for en- or decryption. The key length is valid for (symmetric) encryption and decryption.	
<b>Template Description</b>	
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.	
<b>TlsCryptoCipherSuite.encryption:</b> This reference identifies the crypto service primitive for the execution of encryption.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.encryption	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Configure the byte length of the keys used for message encryption if the cipher suite represented by TlsCryptoCipherSuite supports encryption.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00253]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsCipherMacKeyLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Specifies the length of the MAC key	
<b>Template Description</b>	
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.	
<b>TlsCryptoCipherSuite.authentication:</b> This reference identifies the crypto service primitive for the generation and verification of MACs.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.authentication	





Mapping Rule	Mapping Type
Configure the byte length of the keys used for message authentication by the cipher suite represented by TlsCryptoCipherSuite.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00257]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker
BSW Parameter	BSW Type
TcplpTlsCiphersuiteDefinitionRef	ECUC-REFERENCE-DEF
BSW Description	Reference to a a ciphersuite definition container
Template Description	This meta-class represents a cipher suite for describing cryptographic operations in the context of establishing a connection of ApplicationEndpoints that is protected by TLS.
M2 Parameter	SystemTemplate::SecureCommunication::TlsCryptoCipherSuite
Mapping Rule	Mapping Type
Reference the TcplpTlsCiphersuiteDefinition container that has been created for the TlsCryptoCipherSuite element the TcplpTlsCiphersuiteWorker container has been created for as well.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00250]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsCiphersuiteWorker
BSW Parameter	BSW Type
TcplpTlsConnectionHandshakeRef	ECUC-REFERENCE-DEF
BSW Description	References the container that contains the jobs and keys for handshake operation. Referencing multiple handshake containers allow to share them between workers and to choose the next unused during the handshake.
Template Description	<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.signatureScheme:</b> This reference points to the properties of a TLS Signature Scheme.</p> <p><b>TlsCryptoCipherSuite.ellipticCurve:</b> This references point to the properties of elliptic curves.</p>
M2 Parameter	SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">signatureScheme</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">ellipticCurve</a>
Mapping Rule	Mapping Type
Reference all TcplpTlsHandshake containers created for the TlsCryptoCiphersuite this container has been created for as well.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00249]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites	
BSW Parameter	BSW Type	
TcplpTlsHandshake	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container provides information that is needed to process a handshake. It contains the appropriate references to jobs and keys of the CSM to perform the key exchange cryptographic for the ciphersuite and involved certificates.		
Template Description		
<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.ellipticCurve:</b> This references point to the properties of elliptic curves.</p> <p><b>TlsCryptoCipherSuite.signatureScheme:</b> This reference points to the properties of a TLS Signature Scheme.</p>		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">ellipticCurve</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">signatureScheme</a>		
Mapping Rule		Mapping Type
<p>Create one container for each TlsCryptoCipherSuite that is aggregated by any TlsCryptoServiceMapping of the configured EcuInstance if the TlsCryptoCipherSuite does not use key exchange.</p> <p>Create one container for each supported curve/signature scheme combination supported by any TlsCryptoCipherSuite that is aggregated by any TlsCryptoServiceMapping of the configured Ecu Instance if the TlsCryptoCipherSuite is using key exchange.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00239]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake	
BSW Parameter	BSW Type	
TcplpTlsCsmHashVerifyJobRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a CSM job to perform the hash operation for the whole handshake.		
Template Description		
<p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p> <p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p>		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a>		
Mapping Rule		Mapping Type
Reference into Csm: Job for calculating Hash of Handshake Payload, can be derived from cipher suite id: PRF_P_SHA256 per default, unless the cipher suite explicitly specifies a different PRF.		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00265]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeCalcPubValJobRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM job to perform the DH Key Exchange algorithm operation	
Template Description	
<p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p> <p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p>	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.keyExchange, SystemTemplate::SecureCommunication::TlsCryptoServiceMapping.keyExchange	
Mapping Rule	Mapping Type
Reference into Csm: Job for calculating Public and private Key Pair for DH Key Exchange.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00267]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeCalcSecretJobRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM job to perform the Key Exchange algorithm operation	
Template Description	
<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p>	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.keyExchange, SystemTemplate::SecureCommunication::TlsCryptoServiceMapping.keyExchange, SystemTemplate::SecureCommunication::TlsCryptoCipherSuite.cipherSuiteId	
Mapping Rule	Mapping Type
Reference into Csm: Job for calculating shared secret in DH Key Exchange.	full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00269]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake	
BSW Parameter		BSW Type
TcplpTlsCsmKeyExchangeDecryptJobRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a CSM job to perform data decryption, e.g. with RSA key exchange operation.		
Template Description		
<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p>		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a>		
Mapping Rule		Mapping Type
Reference into Csm, only for ECDH_RSA, ECDHE_RSA cipher suite.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00276]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake	
BSW Parameter		BSW Type
TcplpTlsCsmKeyExchangeDecryptKeyRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a CSM key to perform data decryption, e.g. with RSA, used for exchange operation.		
Template Description		
<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p>		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a>		
Mapping Rule		Mapping Type
Reference into Csm, only for ECDH_RSA, ECDHE_RSA cipher suite.		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00277]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeEncryptJobRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM job to perform data encryption, e.g. with RSA key exchange operation.	
Template Description	
<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p>	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a>	
Mapping Rule	Mapping Type
Reference into Csm, only for ECDH_RSA, ECDHE_RSA cipher suite.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00274]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeEncryptKeyRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM key to perform data encryption, e.g. with RSA, used for exchange operation.	
Template Description	
<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p>	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a>	
Mapping Rule	Mapping Type
Reference into Csm, only for ECDH_RSA, ECDHE_RSA cipher suite.	full







Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00275]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeKeyRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM key used for Diffie Hellman (DH) key exchange operation.	
Template Description	
<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared (i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p>	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a>	
Mapping Rule	Mapping Type
Reference into Csm: Key containing public/private Keys and Secret of DH Key Exchange.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00268]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeSignatureGenerateJobRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM job to perform signature generation for DH operation	
Template Description	
<p><b>TlsCryptoCipherSuite.signatureScheme:</b> This reference points to the properties of a TLS Signature Scheme.</p> <p><b>TlsCryptoCipherSuite.keyExchangeAuthentication:</b> This reference identifies the crypto service primitives for the generation and verification of signatures during the key exchange algorithm.</p> <p><b>TlsCryptoServiceMapping.useClientAuthenticationRequest:</b> Defines if client authentication shall be applied for this TLS connection.</p>	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">signatureScheme</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchangeAuthentication</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">useClientAuthenticationRequest</a>	
Mapping Rule	Mapping Type





Configure this reference if the local node has to authenticate itself towards the remote node, taking into account the role of the local node (client or server) <code>TlsCryptoServiceMapping.category</code> and <code>TlsCryptoServiceMapping.useClientAuthenticationRequest</code> .	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00270]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeSignatureGenerateKeyRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM key to perform signature generation for DH operation	
Template Description	
<p><b>TlsCryptoCipherSuite.signatureScheme:</b> This reference points to the properties of a TLS Signature Scheme.</p> <p><b>TlsCryptoCipherSuite.keyExchangeAuthentication:</b> This reference identifies the crypto service primitives for the generation and verification of signatures during the key exchange algorithm.</p> <p><b>TlsCryptoServiceMapping.useClientAuthenticationRequest:</b> Defines if client authentication shall be applied for this TLS connection.</p>	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">signatureScheme</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchangeAuthentication</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">useClientAuthenticationRequest</a>	
Mapping Rule	Mapping Type
Configure this reference if the local node has to authenticate itself towards the remote node, taking into account the role of the local node (client or server) <code>TlsCryptoServiceMapping.category</code> and <code>TlsCryptoServiceMapping.useClientAuthenticationRequest</code> .	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00271]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeSignatureVerifyJobRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM job to perform signature verification for DH operation	
Template Description	
<p><b>TlsCryptoCipherSuite.signatureScheme:</b> This reference points to the properties of a TLS Signature Scheme.</p> <p><b>TlsCryptoCipherSuite.keyExchangeAuthentication:</b> This reference identifies the crypto service primitives for the generation and verification of signatures during the key exchange algorithm.</p> <p><b>TlsCryptoServiceMapping.useClientAuthenticationRequest:</b> Defines if client authentication shall be applied for this TLS connection.</p>	
M2 Parameter	





SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">signatureScheme</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchangeAuthentication</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">useClientAuthenticationRequest</a>	
Mapping Rule	Mapping Type
Configure this reference if the local node has to verify the authenticity of the remote node, taking into account the role of the local node (client or server) TlsCryptoServiceMapping.category and TlsCryptoServiceMapping.useClientAuthenticationRequest.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00272]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmKeyExchangeSignatureVerifyKeyRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to a CSM key to perform signature verification for DH operation	
Template Description	
<b>TlsCryptoCipherSuite.signatureScheme:</b> This reference points to the properties of a TLS Signature Scheme.	
<b>TlsCryptoCipherSuite.keyExchangeAuthentication:</b> This reference identifies the crypto service primitives for the generation and verification of signatures during the key exchange algorithm.	
<b>TlsCryptoServiceMapping.useClientAuthenticationRequest:</b> Defines if client authentication shall be applied for this TLS connection.	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">signatureScheme</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchangeAuthentication</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">useClientAuthenticationRequest</a>	
Mapping Rule	Mapping Type
Configure this reference if the local node has to verify the authenticity of the remote node, taking into account the role of the local node (client or server) TlsCryptoServiceMapping.category and TlsCryptoServiceMapping.useClientAuthenticationRequest.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00273]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
BSW Parameter	BSW Type
TcplpTlsCsmMasterSecretKeyRef	ECUC-REFERENCE-DEF
BSW Description	
This is the reference to the master key that is calculated during the session.	
Template Description	





<b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.	
<b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.	
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Reference into Csm: Master secret key derived from the shared (PreMaster) Secret.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00266]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsCsmPRFSupportType		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
Specifies how the CSM job supports the PRF operation.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00264]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsCsmPrfMacJobRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a CSM job to perform the PRF hash operation		
<b>Template Description</b>		
<b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.		
<b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.		
<b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.		
<b>M2 Parameter</b>		





SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Reference into Csm: Job for calculating the MasterSecret from the PreMaster Secret.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00262]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsHandshake
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsCsmPrfMackKeyRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to a CSM key associated to the CSM job that performs the PRF hash operation	
<b>Template Description</b>	
<p><b>TlsCryptoCipherSuite.keyExchange:</b> This reference identifies the individual (i.e. per cipher suite) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoServiceMapping.keyExchange:</b> This reference identifies the shared(i.e. applicable for each of the aggregated cipher suites) crypto service primitive for the execution of key exchange during the handshake phase.</p> <p><b>TlsCryptoCipherSuite.cipherSuiteId:</b> Identification of the CipherSuite according to the IANA assignments list.</p>	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoServiceMapping. <a href="#">keyExchange</a> , SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">cipherSuiteId</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Reference into Csm: Key that is used for deriving the Master secret from the PreMaster Secret.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00263]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsPskIdentity	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container provides information about static definition of pre-shared keys. It is used during the handshake to negotiate pre-shared keys between a client and a server. Note: The callbacks for pre-shared keys are an alternative to the static definition. The callbacks allow to define the associated keys at runtime if pre-shared keys are used but no static definition is available. The container definition is used for static configuration.	
<b>Template Description</b>	
Pre-shared key identity shared during the handshake among the communication parties, to establish a TLS connection if the handshake is based on the existence of a pre-shared key.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite. <a href="#">pskIdentity</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>





Create one container for each TlsPskIdentity element aggregated by any TlsCryptoCipherSuite that in turn is aggregated by any TlsCryptoServiceMapping of the configured EcucInstance.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00241]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsPskIdentity	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsPresharedKeyCsmKeyRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a CSM key associated to the CSM job that performs the PRF hash operation		
<b>Template Description</b>		
This element is used to describe the pre-shared key shared during the handshake among the communication parties, to establish a TLS connection if the handshake is based on the existence of a pre-shared key.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::TlsPskIdentity		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Reference into the Csm: Pre-Shared symmetric Key.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00280]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsPskIdentity	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsPresharedKeyIdentity		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
This item provides the key identification. The TLS client selects the pre-shared key based on the identification hint provided by the server and returns the key identification name back to the server.		
<b>Template Description</b>		
This attribute provides the key identification.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::TlsPskIdentity.pskIdentity		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00284]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsPskIdentity	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsPresharedKeyIdentityHint		ECUC-STRING-PARAM-DEF
<b>BSW Description</b>		
Provides the identity hint for a pre-shared key. This information is transmitted by the TLS Server to provide its identification to the TLS client. The TLS client uses the same information to select the pre-shared key.		





Template Description	
This attribute provides the identity hint for a pre-shared key.	
M2 Parameter	
SystemTemplate::SecureCommunication::TlsPskIdentity.pskIdentityHint	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00279]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsPskIdentity
BSW Parameter	BSW Type
TcplpTlsPskGetClientKeyIdentityFunc	ECUC-FUNCTION-NAME-DEF
BSW Description	
Defines the function name for the Up_TlsClientGetPskIdentity() callback.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00281]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsPskIdentity
BSW Parameter	BSW Type
TcplpTlsPskGetKeyIdentityHintFunc	ECUC-FUNCTION-NAME-DEF
BSW Description	
Defines the function name for the Up_TlsServerGetPskIdentityHint() callback.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_Tcplp_00283]

BSW Module	BSW Context
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsCiphersuites/TcplpTlsPskIdentity
BSW Parameter	BSW Type
TcplpTlsPskGetServerKeyIdentityFunc	ECUC-FUNCTION-NAME-DEF
BSW Description	
Defines the function name for the Up_TlsServerGetPskIdentity () callback.	





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00282]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsConnection		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container defines the properties of a TLS connection		
<b>Template Description</b>		
This meta-class has the ability to represent a crypto service mapping for the socket-based configuration of Transport Layer Security (TLS).		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::TlsCryptoServiceMapping		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create one container for each TlsCryptoServiceMapping of the configured EcuInstance.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00223]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsCertificateIdentityRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
References the container that contains the certificate and identity information.		
<b>Template Description</b>		
This aggregation represents the collection of supported cipher suites.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::TlsCryptoServiceMapping.tlsCipherSuite.certificate		
<b>Mapping Rule</b>		<b>Mapping Type</b>
References to all TcplpTlsCertificateIdentity containers that were created for the TlsCryptoService Mapping the TcplpTlsConnection container was created for.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00235]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTlsConnectionCiphersuiteWorkerRef		ECUC-REFERENCE-DEF







<b>BSW Description</b>	
References the container that contains the jobs and keys to process the application data.	
<b>Template Description</b>	
This meta-class represents a cipher suite for describing cryptographic operations in the context of establishing a connection of ApplicationEndpoints that is protected by TLS.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsCryptoCipherSuite	
<b>Mapping Rule</b>	<b>Mapping Type</b>
References to all TcplpTlsCiphersuiteWorker containers that were created for the TlsCrypto ServiceMapping the TcplpTlsConnection container was created for.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00234]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsConnectionGetTimeFunc	ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>	
Defines the function name for the Up_TlsGetCurrentTimeStamp() callback.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00232]

<b>BSW Module</b>	<b>BSW Context</b>
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection
<b>BSW Parameter</b>	<b>BSW Type</b>
TcplpTlsConnectionGroupRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Assigns the TLS connection to a connection group.	
<b>Template Description</b>	
Reference target is member of a TlsConnectionGroup.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::TlsConnectionGroup.tlsConnection	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00233]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
BSW Parameter		BSW Type
TcplpTlsConnectionId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Identifier of the connection. The set of configured identifiers shall be consecutive and gapless.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00225]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
BSW Parameter		BSW Type
TcplpTlsConnectionPskIdentityRef		ECUC-REFERENCE-DEF
BSW Description		
References the container that contains information about pre-shared keys.		
Template Description		
This aggregation represents the collection of supported cipher suites.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoServiceMapping.tlsCipherSuite.pskIdentity		
Mapping Rule		Mapping Type
References to all TcplpTlsPskIdentity containers that were created for the TlsCryptoService Mapping the TcplpTlsConnection container was created for.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00236]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
BSW Parameter		BSW Type
TcplpTlsConnectionType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Specifies if the TLS connection is a server or a client.		
Template Description		
The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoServiceMapping.category		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00226]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
BSW Parameter		BSW Type
TcplpTlsIpAddressAssignment		ECUC-REFERENCE-DEF
BSW Description		
Contains additional information about the endpoint IP address information. If this reference is present, the IP address of the connecting socket shall also be checked if a TLS connection shall be assigned automatically to a socket.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::ApplicationEndpoint.networkEndpoint		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00229]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
BSW Parameter		BSW Type
TcplpTlsMaxFragmentLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the max length in bytes of a TLS fragment that is sent as a block.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00227]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
BSW Parameter		BSW Type
TcplpTlsPortAssignment		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the port address that is used for TLS communication.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::ApplicationEndpoint.tpConfiguration.portNumber		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00285]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
BSW Parameter	BSW Type	
TcplpTlsUseClientAuthenticationRequest	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Defines if client authentication shall be applied for this TLS connection.		
Template Description		
Defines if client authentication shall be applied for this TLS connection.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoServiceMapping.useClientAuthenticationRequest		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00230]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig/TcplpTlsConnection	
BSW Parameter	BSW Type	
TcplpTlsUseSecurityExtensionRecordSizeLimit	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Defines if the security extension for max_fragment_length shall be supported as defined in IETF RFC 8449, chapter 4.1.		
Template Description		
Defines if the security extension for max_fragment_length shall be supported as defined in IETF RFC 8449, chapter 4.1.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsCryptoServiceMapping.useSecurityExtensionRecordSizeLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00231]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig	
BSW Parameter	BSW Type	
TcplpTlsConnectionGroup	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This optional container is used to collect all TlsConnections that belong to a TlsConnectionGroup. The intention of a TLS connection group is to share resources among TLS connections collected in a group, because only one connection of a group can be used at a time.		
Template Description		
Defines a collection of TlsCryptoServiceMappings which will not be active at the same time during runtime.		
M2 Parameter		
SystemTemplate::SecureCommunication::TlsConnectionGroup		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00224]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig	
BSW Parameter		BSW Type
TcplpTlsCsmRandomGenerateJobRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a CSM job to generate a random value.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00221]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpTlsConfig	
BSW Parameter		BSW Type
TcplpTlsMaxConnections		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the max. number of TLS connections that can be opened at the same time.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00220]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig	
BSW Parameter		BSW Type
TcplpUdpConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Specifies the configuration parameters of the UDP (User Datagram Protocol) sub-module		
Template Description		
Content Model for UDP configuration.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::UdpTp		
Mapping Rule		Mapping Type
This container shall be created if the UdpTp element is used in the ECU Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00026]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpConfig/TcplpUdpConfig	
BSW Parameter		BSW Type
TcplpUdpTtl		ECUC-INTEGER-PARAM-DEF
BSW Description		
Default Time-to-live value of outgoing UDP packets.		
Template Description		
Default Time-to-live value of outgoing UDP packets.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::UdpProps.udpTtl		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00075]

BSW Module	BSW Context	
Tcplp	Tcplp	
BSW Parameter		BSW Type
TcplpGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is a subcontainer of Tcplp and specifies the general configuration parameters of the TCP/IP stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00002]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpBufferMemory		ECUC-INTEGER-PARAM-DEF
BSW Description		
Memory size in bytes reserved for TCP/IP buffers.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00016]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00004]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpDhcpServerEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) the DHCP (Dynamic Host Configuration Protocol) Server.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00183]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpEnableSecurityEventReporting		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00319]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpGetAndResetMeasurementDataApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables the Get and Reset Measurement Data API		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00217]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpV4General		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is a subcontainer of Tcplp and specifies the general configuration parameters of the TCP/IP stack for IPv4		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00163]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV4General	
BSW Parameter		BSW Type
TcplpArpEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) support of ARP (Address Resolution Protocol).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00006]



BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV4General	
BSW Parameter		BSW Type
TcplpAutoIpEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) the Auto-IP (automatic private IP addressing) sub-module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00011]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV4General	
BSW Parameter		BSW Type
TcplpDhcpClientEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) the DHCP (Dynamic Host Configuration Protocol) Client.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00010]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV4General	
BSW Parameter		BSW Type
TcplpIcmpEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disabled (FALSE) support of ICMP (Internet Control Message Protocol).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00007]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV4General	
BSW Parameter	BSW Type	
TcplpV4Enabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables (TRUE) or disables (FALSE) support of IPv4 (Internet Protocol version 4).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00088]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV4General	
BSW Parameter	BSW Type	
TcplpLocalAddrIpv4EntriesMax	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Maximum number of LocalAddr table entries for IPv4.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00018]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV4General	
BSW Parameter	BSW Type	
TcplpPathMtuDiscoveryEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables (TRUE) or disables (FALSE) the discovery of the maximum transmission unit on a path according to IETF RFC 1191.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00012]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpV6General		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container is a subcontainer of Tcplp and specifies the general configuration parameters of the TCP/IP stack for IPv6.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00164]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV6General	
BSW Parameter		BSW Type
TcplpDhcpV6ClientEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) the DHCPv6 (Dynamic Host Configuration Protocol for IPv6) Client.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00093]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV6General	
BSW Parameter		BSW Type
TcplpV6Enabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) support of IPv6 (Internet Protocol version 6).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00089]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpIPv6General	
BSW Parameter		BSW Type
TcplpIPv6PathMtuDiscoveryEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) Path MTU Discovery support for IPv6 according to IETF RFC 1981.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00090]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpIPv6General	
BSW Parameter		BSW Type
TcplpLocalAddrIpv6EntriesMax		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of LocalAddr table entries for IPv6.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00017]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpIPv6General	
BSW Parameter		BSW Type
TcplpNdpAddressResolutionUnreachabilityDetectionEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) support of Address Resolution and Neighbor Unreachability Detection via NDP.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00091]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpV6General	
BSW Parameter		BSW Type
TcplpNdpPrefixAndRouterDiscoveryEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables (TRUE) or disables (FALSE) support of Prefix and Router Discovery via NDP.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00092]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Period of Tcplp_MainFunction in [s].		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00013]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpResetIpAssignmentApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/disables the API Tcplp_ResetIpAssignment of a DHCP-client.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00182]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpScalabilityClass		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
In order to customize the Tcplp Stack to the specific needs of the user it can be scaled according to the scalability classes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00169]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral	
BSW Parameter		BSW Type
TcplpSecurityEventRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to IdsMEvent elements representing the security events that the Tcplp module shall report to the IdsM in case the corresponding security related event occurs (and if TcplpEnableSecurityEventReporting is set to "true"). The standardized security events in this container can be extended by vendor-specific security events.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00320]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpSecurityEventRefs	
BSW Parameter		BSW Type
TCP_IP_SEV_ARP_IP_ADDR_CONFLICT		ECUC-REFERENCE-DEF
BSW Description		
Received local IP address in ARP reply for different MAC.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00321]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpSecurityEventRefs	
BSW Parameter	BSW Type	
TCPIP_SEV_DROP_INV_IPV4_ADDR	ECUC-REFERENCE-DEF	
BSW Description		
Dropped datagram because of invalid IPV4 address.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00324]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpSecurityEventRefs	
BSW Parameter	BSW Type	
TCPIP_SEV_DROP_INV_IPV6_ADDR	ECUC-REFERENCE-DEF	
BSW Description		
Dropped datagram because of invalid IPV6 address.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00325]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpSecurityEventRefs	
BSW Parameter	BSW Type	
TCPIP_SEV_DROP_INV_PORT_TCP	ECUC-REFERENCE-DEF	
BSW Description		
Dropped TCP packet because of invalid destination TCP-Port.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_Tcplp_00322]

BSW Module	BSW Context	
Tcplp	Tcplp/TcplpGeneral/TcplpSecurityEventRefs	
BSW Parameter	BSW Type	





TCPIP_SEV_DROP_INV_PORT_UDP	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Dropped UDP packet because of invalid destination UDP-Port.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00323]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTcpEnabled		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Enables (TRUE) or disabled (FALSE) support of TCP (Transmission Control Protocol).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00008]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpTcpSocketMax		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Maximum number of TCP sockets		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Tcplp_00014]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpUdpEnabled		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		







Enables (TRUE) or disabled (FALSE) support of UDP (User Datagram Protocol)	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Tcplp_00009]

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpUdpSocketMax		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Maximum number of UDP sockets.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00015]	

<b>BSW Module</b>	<b>BSW Context</b>	
Tcplp	Tcplp/TcplpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
TcplpVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
If true the Tcplp_GetVersionInfo API is available.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Tcplp_00005]	

### C.6.9 DoIP

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP	
<b>BSW Parameter</b>		<b>BSW Type</b>





DoIPConfigSet		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the configuration parameters and sub containers of the AUTOSAR DoIP module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_DoIP_00003]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPEid		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Configured EID (Entity ID of) for vehicle identification/vehicle announcement. Only necessary if DoIPUseMacAddressFor Identification is set to FALSE.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_DoIP_00014]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPGid		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Configured GID (Group ID of) for vehicle identification/vehicle announcement.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_DoIP_00015]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPInterface		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		





This container defines a logical IP interface and collects properties to configure this interface.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_DoIP_00100]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPAliveCheckResponseTimeout		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Timeout in [s] for waiting for a response to an Alive Check request before the connection is considered to be disconnected. Represents parameter T_TCP_AliveCheck of ISO 13400-2:2012.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_DoIP_00009]	

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPChannel		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Configuration of one DoIPChannel.		
<b>Template Description</b>		
A connection identifies the sender and the receiver of this particular communication. The DoIp module routes a tpSdu through this connection.		
<b>M2 Parameter</b>		
SystemTemplate::DiagnosticConnection::DoIpTpConnection		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
One DoIPChannel container is created for each DoIP channel of the configured EcuInstance. A Do IP channel is constituted by the set of all DoIpTpConnection elements via which the configured EcuInstance sends or receives SDUs (SDUs are referenced by the PduTriggering DoIpTp Connection.tpSdu refers to) and that share the same local diagnosis address and tester address.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_DoIP_00069]	

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel	
BSW Parameter	BSW Type	
DoIPChannelSARef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the DoIPTester.		
Template Description		
Reference to the address of the sender of the tpSdu.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DoIPtpConnection.doIpSourceAddress		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00070]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel	
BSW Parameter	BSW Type	
DoIPChannelTARef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the target address.		
Template Description		
Reference to the address of the receiver of the tpSdu.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DoIPtpConnection.doIpTargetAddress		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00071]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel	
BSW Parameter	BSW Type	
DoIPpduRRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the Rx Pdus to connect with the Rx Pdus of the PduR.		
Template Description		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DoIPtpConnection.tpSdu		
Mapping Rule		Mapping Type
If the DoIP channel receives an SDU, one DoIPpduRRxPdu container is created.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00055]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel/DoIPPduRRxPdu	
BSW Parameter		BSW Type
DoIPPduRRxPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The DoIPPduRRxPduId is required by the API call DoIP_TpCancelReceive.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00057]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel/DoIPPduRRxPdu	
BSW Parameter		BSW Type
DoIPPduRRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Reference to the EcuC container that corresponds to the SDU received by the DoIP channel		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00058]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel	
BSW Parameter		BSW Type
DoIPPduRTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the Tx Pdus to connect with the Tx Pdus of the PduR. If the parameter is not configured the channel is for functional addressing.		
Template Description		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DoIPtpConnection. <a href="#">tpSdu</a>		
Mapping Rule		Mapping Type
If the DoIP channel sends an SDU, one DoIPPduRTxPdu container is created.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00056]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel/DoIPPduRTxPdu	
BSW Parameter		BSW Type
DoIPPduRTxPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The DoIPPduRTxPduId is required by DoIP_TpTransmit or DoIP_IfTransmit and DoIP_TpCancelTransmit.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00060]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel/DoIPPduRTxPdu	
BSW Parameter		BSW Type
DoIPPduRTxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DoIPtpConnection. <a href="#">tpSdu</a>		
Mapping Rule		Mapping Type
Reference to the EcuC container that corresponds to the SDU sent by the DoIP channel		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00059]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPChannel/DoIPPduRTxPdu	
BSW Parameter		BSW Type
DoIPPduType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
API Type to use for communication with PduR. DOIP_IFPDU for UUDT messages, DOIP_TPPDU for all other diagnostic messages.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00075]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter	BSW Type	
DoIPConnections	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container contains all lower layer connection specific information, i.e. the single Pdu References and Handle IDs to the SoAd.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00032]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections	
BSW Parameter	BSW Type	
DoIPTargetAddress	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container describes a possible TargetAddress that is supported by DoIP.		
Template Description		
The logical DoIP address.		
M2 Parameter		
SystemTemplate::TransportProtocols::DoIpLogicAddress		
Mapping Rule		Mapping Type
This container shall be created for each DoIpLogicAddress referenced by a DoIpTpConnection in the role doIpTargetAddress		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00053]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTargetAddress	
BSW Parameter	BSW Type	
DoIPTargetAddressValue	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Valid Target Address of a DoIP target address.		
Template Description		
The logical DoIP address.		
M2 Parameter		
SystemTemplate::TransportProtocols::DoIpLogicAddress.address		
Mapping Rule		Mapping Type
This value shall be derived from DoIpLogicAddress that is referenced by DoIpConnection in the role doIpTargetAddress		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00054]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections	
BSW Parameter	BSW Type	
DoIPTcpConnection	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container describes a TCP connection to the lower layer SoAd module.		
Template Description		
Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection		
Mapping Rule		Mapping Type
A DoIPTcpConnection is created for each SocketConnection for which the following conditions hold: - Protocol: Tcp, i.e. the SocketConnection refers to a local SocketAddress containing an ApplicationEndpoint which in turn contains a TcpTp configuration.- DoIP PDU transmission: The EcuInstance sends and/or receives via the SocketConnection PDUs that are of Type General PurposeIPdu and have their category set to "DoIP".		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00045]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTcpConnection	
BSW Parameter	BSW Type	
DoIPRequestAddressAssignment	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
The DoIP module shall request IP address assignment by calling SoAd_RequestIpAddrAssignment() for the TcpIpLocalAddr related to this DoIpConnection.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00095]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTcpConnection	
BSW Parameter	BSW Type	
DoIPSoAdTcpRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container describes a Rx PDU received via SoAd over TCP		
Template Description		
Assignment of IPduIdentifiers that are transmitted over the static SocketConnection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier		
Mapping Rule		Mapping Type







Create Container for each Pdu that is of Type GeneralPurposeIPdu and has category "DoIP" and is received via the StaticSocketConnection that represents the DoIPTcpConnection.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_DoIP_00080]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTcpConnection/DoIPSoAdTcpRxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPSoAdTcpRxPduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The DoIPSoAdTcpRxPduld is required by the API call DoIP_SoAdTpRxIndication to receive I-PDUs from the SoAd.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_DoIP_00082]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTcpConnection/DoIPSoAdTcpRxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPSoAdTcpRxPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
<b>Template Description</b>		
Assignment of IPdulIdentifiers that are transmitted over the static SocketConnection.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Reference to the EcuC container that corresponds to the GeneralPurposeIPdu receiving by the DoIPTcpConnection.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
obsolete		[ECUC_DoIP_00083]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTcpConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPSoAdTcpTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container describes a Tx PDU sent via SoAd over TCP		
<b>Template Description</b>		
Reference to a Pdu that is transmitted over a socket connection.		
<b>M2 Parameter</b>		





SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::SoConIPdulIdentifier.pduTriggering	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create Container for each Pdu that is of Type GeneralPurposeIPdu and has category "DoIP" and is transmitted via the StaticSocketConnection that represents the DoIPTcpConnection.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_DoIP_00081]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTcpConnection/DoIPSoAdTcpTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPSoAdTcpTxPduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The DoIPSoAdTcpTxPduld is required by the API call DoIP_SoAdTpTxConfirmation that is called by the SoAd to confirm that the IPdu has been transmitted successfully.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_DoIP_00085]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTcpConnection/DoIPSoAdTcpTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPSoAdTcpTxPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
<b>Template Description</b>		
Assignment of IPdulIdentifiers that are transmitted over the static SocketConnection.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Reference to the EcuC container that corresponds to the GeneralPurposeIPdu sent by the DoIPTcpConnection.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_DoIP_00084]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPTcpConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPTcpConnectionSecurityRequired		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Indicates if the associated TCP socket uses a secure connection (e.g. TLS)		





Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00097]

BSW Module	BSW Context
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections
BSW Parameter	BSW Type
DoIPUdpConnection	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This Container describes a Udp connection to the lower layer SoAd module.	
Template Description	
Assignment of IPduIdentifiers that are transmitted over the static SocketConnection.	
M2 Parameter	
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier	
Mapping Rule	Mapping Type
<p>A DoIPUdpConnection is created for each StaticSocketConnection for which the following conditions hold:</p> <ul style="list-style-type: none"> <li>• Protocol: Udp, i.e. the StaticSocketConnection is aggregated by the local SocketAddress containing an ApplicationEndpoint which in turn contains a UdpTp configuration.</li> <li>• DoIP PDU transmission: The EcuInstance sends and/or receives via the Socket Connection PDUs that are of Type GeneralPurposeIPdu and have their category set to "DoIP".</li> </ul>	
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00052]

BSW Module	BSW Context
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpConnection
BSW Parameter	BSW Type
DoIPRequestAddressAssignment	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
The DoIP module shall request IP address assignment by calling SoAd_RequestIpAddrAssignment() for the TcpIpLocalAddr related to this DoIPConnection.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00095]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpConnection	
BSW Parameter	BSW Type	
DoIPSoAdUdpRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container describes a Rx PDU received via SoAd over UDP.		
Template Description		
Assignment of IPduIdentifiers that are transmitted over the static SocketConnection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier		
Mapping Rule		Mapping Type
Create Container for each Pdu that is of Type GeneralPurposeIPdu and has category "DoIP" and is received via the StaticSocketConnection that represents the DoIPUdpConnection.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00046]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpConnection/DoIPSoAdUdpRxPdu	
BSW Parameter	BSW Type	
DoIPSoAdUdpRxPduId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The DoIPSoAdUdpRxPduId is required by the API call DoIP_SoAdIfRxIndication to receive I-PDUs from the SoAd.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00048]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpConnection/DoIPSoAdUdpRxPdu	
BSW Parameter	BSW Type	
DoIPSoAdUdpRxPduRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
Assignment of IPduIdentifiers that are transmitted over the static SocketConnection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier		
Mapping Rule		Mapping Type
Reference to the EcuC container that corresponds to the GeneralPurposeIPdu received by the DoIPUdpConnection.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00049]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpConnection	
BSW Parameter		BSW Type
DoIPSoAdUdpTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container describes a Tx PDU sent via SoAd over UDP.		
Template Description		
Assignment of IPduIdentifiers that are transmitted over the static SocketConnection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier		
Mapping Rule		Mapping Type
Create Container for each Pdu that is of Type GeneralPurposeIPdu and has category "DoIP" and is transmitted via the StaticSocketConnection that represents the DoIPUdpConnection.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00047]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpConnection/DoIPSoAdUdpTxPdu	
BSW Parameter		BSW Type
DoIPSoAdUdpTxPduld		ECUC-INTEGER-PARAM-DEF
BSW Description		
The DoIPSoAdUdpTxPduld is required by the API call DoIP_SoAdIfTxConfirmation that is called by the SoAd to confirm that the IPdu has been transmitted successfully.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00051]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpConnection/DoIPSoAdUdpTxPdu	
BSW Parameter		BSW Type
DoIPSoAdUdpTxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.		
Template Description		
Assignment of IPduIdentifiers that are transmitted over the static SocketConnection.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier		
Mapping Rule		Mapping Type
Reference to the EcuC container that corresponds to the GeneralPurposeIPdu sent by the DoIPUdpConnection.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00050]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPUdpVehicleAnnouncementConnection		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container describes the UDP multicast connections to the lower layer SoAd module.		
<b>Template Description</b>		
Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection		
<b>Mapping Rule</b>		<b>Mapping Type</b>
This container shall be created: - if a StaticSocketConnection contains a single SoConIpdu Identifier that references a PduTriggering of a GeneralPurposePdu with category set to DoIp - if the GeneralPurposePdu with category set to DoIp is sent by the regarded ECU. - if the SocketAddress containing this StaticSocketConnection contains an ApplicationEndpoint with a UdpTp configuration - if the SocketAddress containing this SocketConnection references contains an ip Address that either is a the limited broadcast address (i.e., 255.255.255.255) in case of IPv4 or the link-local scope multicast address (i.e., FF02::1) in case of IPv6.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_DoIP_00076]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpVehicleAnnouncementConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPRequestAddressAssignment		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
The DoIP module shall request IP address assignment by calling SoAd_RequestIpAddrAssignment() for the TcpIpLocalAddr related to this DoIpConnection.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_DoIP_00095]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpVehicleAnnouncementConnection	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPSoAdUdpVehicleAnnouncementTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container describes the vehicle announcement TxPdu sent via the SoAd.		
<b>Template Description</b>		
Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection		





Mapping Rule	Mapping Type
This container shall be created: - if a StaticSocketConnection contains a single SoConIpdu Identifier that references a PduTriggering of a GeneralPurposePdu with category set to DoIp - if the GeneralPurposePdu with category set to DoIp is sent by the regarded ECU. - if the SocketAddress containing this SocketConnection contains an ApplicationEndpoint with a UdpTp configuration - if the SocketAddress containing this SocketConnection contains an ipAddress that either is a the limited broadcast address (i.e., 255.255.255.255) in case of IPv4 or the link- local scope multicast address (i.e., FF02::1) in case of IPv6.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00077]

BSW Module	BSW Context
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpVehicleAnnouncementConnection/DoIPSoAdUdpVehicleAnnouncementTxPdu
BSW Parameter	BSW Type
DoIPSoAdUdpVehicleAnnouncementTxPduld	ECUC-INTEGER-PARAM-DEF
BSW Description	The DoIPSoAdUdpVehicleAnnouncementTxPduld is required by the API call DoIP_SoAdIfTxConfirmation() that is called by the SoAd to confirm that the IPdu has been transmitted successfully.
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00078]

BSW Module	BSW Context
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPConnections/DoIPUdpVehicleAnnouncementConnection/DoIPSoAdUdpVehicleAnnouncementTxPdu
BSW Parameter	BSW Type
DoIPSoAdUdpVehicleAnnouncementTxPduRef	ECUC-REFERENCE-DEF
BSW Description	Reference to the "global" PDU structure to allow harmonization of handle IDs in the COM-Stack.
Template Description	Assignment of IPduIdentifiers that are transmitted over the static SocketConnection.
M2 Parameter	SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection.iPduIdentifier
Mapping Rule	Mapping Type
Reference to the EcuC container that corresponds to the GeneralPurposeIpdu sent by the Do IPUdpVehicleAnnouncement connection.	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00079]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter	BSW Type	
DoIPFurtherActionByteCallback	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container describes the Callbackfunction to get the Further Action byte. This container shall always be present. If the DoIPFurtherActionByteDirect parameter is not present, the DoIP module will use an RPort of ServiceInterface CallbackGetFurtherActionByte with the name "CBGetFurtherActionByte_<shortname of enclosing DoIPInterface containers>".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00092]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPFurtherActionByteCallback	
BSW Parameter	BSW Type	
DoIPFurtherActionByteDirect	ECUC-FUNCTION-NAME-DEF	
BSW Description		
Direct C Callback function to get the OEM specific Further Action Byte for the DoIP vehicle identification response/vehicle announcement. If the DoIPFurtherActionByteDirect parameter is present, the DoIP module will not use an RPort of ServiceInterface "CBGetFurtherActionByte" but will call the configured function.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00093]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter	BSW Type	
DoIPGeneralInactivityTime	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Timeout in [s] for maximum inactivity of a TCP socket connection before the DoIP module will close the according socket connection. Represents parameter T_TCP_General_Inactivity of ISO 13400-2:2012		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00068]



BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter		BSW Type
DoIPInitialInactivityTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout in [s] used for initial inactivity of a connected TCP socket connection directly after socket connection. Represents parameter T_TCP_Initial_Inactivity of ISO 13400-2:2012		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00010]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter		BSW Type
DoIPInitialVehicleAnnouncementTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Time to wait in [s] for sending first vehicle announcement message after IP address assignment. Represents parameter A_DoIP_Announce_Wait of ISO 13400-2:2012		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00008]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter		BSW Type
DoIPInterfaceActLineCtrl		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This attribute defines whether the network interface <ul style="list-style-type: none"> <li>• is started "on-demand" when an activation line is sensed (TRUE) or</li> <li>• is always available (FALSE).</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00101]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter	BSW Type	
DoIPInterfaceAnnouncementStart	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
<p>This attribute defines, when vehicle announcement is started on a DoIPInterface</p> <ul style="list-style-type: none"> <li>Automatic: As soon as the underlying UDP vehicle announcement connection switches to SOAD_SOCON_ONLINE</li> <li>OnTrigger: As soon as the API DoIP_TriggerVehicleAnnouncement is called for the given DoIPInterface instance</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00099]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter	BSW Type	
DoIPInterfaceId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
<p>This parameter is an identifier of the DoIPInterface. The value of this parameter will be assigned to the symbolic name derived from the container short name.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00098]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter	BSW Type	
DoIPMaxTesterConnections	ECUC-INTEGER-PARAM-DEF	
BSW Description		
<p>Maximum amount of tester connections that shall be maintained at one time before alive check is performed.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00012]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter		BSW Type
DoIPRoutingActivation		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container describes the routing activation possibilities by representing for each container a possible routing activation request message to the DoIP entity and the according references to the activated diagnostic messages.		
Template Description		
Collection of DoIPRoutingActivation possibilities defined in the DoIPInterface.		
M2 Parameter		
SystemTemplate::DoIP::DoIPInterface.doIpRoutingActivation		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00030]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation	
BSW Parameter		BSW Type
DoIPRoutingActivationAuthenticationCallback		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container describes the Callbackfunction to call on a Routing Activation Request for Authentication. If this container is configured but the DoIPRoutingActivationAuthenticationFunc parameter is not present, the DoIP module will use an RPort of ServiceInterface <RoutingActivation>_RoutingActivation with the name "CB<RoutingActivation>RoutingActivation". <RoutingActivation> is the ShortName of the DoIPRoutingActivation container.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00035]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation/DoIPRoutingActivationAuthenticationCallback	
BSW Parameter		BSW Type
DoIPRoutingActivationAuthenticationFunc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Direct C Callback function to trigger the authentication function for routing activation. If the DoIPRoutingActivationAuthenticationFunc parameter is present, the DoIP module will not use an RPort of ServiceInterface <RoutingActivation>_RoutingActivation but call the configured function.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00039]

BSW Module	BSW Context
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation/DoIPRoutingActivationAuthentication Callback
BSW Parameter	BSW Type
DoIPRoutingActivationAuthenticationReqLength	ECUC-INTEGER-PARAM-DEF
BSW Description	
Describes the amount of bytes used to handle to the authentication function on routing activation. If 0 is configured as length the parameter AuthenticationReqData will not be handled to the API.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00040]

BSW Module	BSW Context
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation/DoIPRoutingActivationAuthentication Callback
BSW Parameter	BSW Type
DoIPRoutingActivationAuthenticationResLength	ECUC-INTEGER-PARAM-DEF
BSW Description	
Describes the amount of bytes used to read by the authentication function on routing activation. If 0 is configured as length the parameter AuthenticationResData will not be fetched via the API.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00041]

BSW Module	BSW Context
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation
BSW Parameter	BSW Type
DoIPRoutingActivationConfirmationCallback	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Container describes the Callbackfunction to call on a Routing Activation Request for Confirmation. If this container is configured but the DoIPRoutingActivationConfirmationFunc parameter is not present the DoIP module will use an RPort of ServiceInterface <RoutingActivation> _RoutingActivation with the name "CB-<RoutingActivation>RoutingActivation". <Routing Activation> is the ShortName of the DoIPRoutingActivation container.	
Template Description	





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_DoIP_00061]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation/DoIPRoutingActivationConfirmation Callback	
BSW Parameter		BSW Type
DoIPRoutingActivationConfirmationFunc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Direct C Callback function to trigger the confirmation function for routing activation. If the DoIPRoutingActivationConfirmation Func parameter is present the DoIP module will not use an RPort of ServiceInterface <RoutingActivation>_RoutingActivation but call the configured function.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_DoIP_00036]	

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation/DoIPRoutingActivationConfirmation Callback	
BSW Parameter		BSW Type
DoIPRoutingActivationConfirmationReqLength		ECUC-INTEGGER-PARAM-DEF
BSW Description		
Describes the amount of bytes used to handle to the confirmation function on routing activation. If 0 is configured as length the parameter ConfirmedReqData will not be handled to the API.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_DoIP_00037]	

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation/DoIPRoutingActivationConfirmation Callback	
BSW Parameter		BSW Type
DoIPRoutingActivationConfirmationResLength		ECUC-INTEGGER-PARAM-DEF
BSW Description		





Describes the amount of bytes used to read by the confirmation function on routing activation. If 0 is configured as length the parameter ConfirmedResData will not be fetched via the API.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_DoIP_00038]

<b>BSW Module</b>	<b>BSW Context</b>
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation
<b>BSW Parameter</b>	<b>BSW Type</b>
DoIPRoutingActivationNumber	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Identifies the Routing activation Number which is received for a DoIP routing activation request message.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_DoIP_00033]

<b>BSW Module</b>	<b>BSW Context</b>
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation
<b>BSW Parameter</b>	<b>BSW Type</b>
DoIPRoutingActivationSecurityRequired	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Indicates if a routing activation requires a secure TCP connection	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_DoIP_00096]

<b>BSW Module</b>	<b>BSW Context</b>
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPRoutingActivation
<b>BSW Parameter</b>	<b>BSW Type</b>
DoIPTargetAddressRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
Reference to all DoIPTargetAddress which are activated on this Routing activation.	





Template Description	
Reference to DoIPTargetAddress which is activated on this DolpRoutingActivation.	
M2 Parameter	
SystemTemplate::DoIP::DolpRoutingActivation.doIpTargetAddress	
Mapping Rule	Mapping Type
1:1 mapping	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00034]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter		BSW Type
DoIPTester		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container describes the properties of the possible connectable Tester for the DoIP entity.		
Template Description		
A connection identifies the sender and the receiver of this particular communication. The Dolp module routes a tpSdu through this connection.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DoIpTpConnection		
Mapping Rule		Mapping Type
<p>One DoIPTester container is created for each valid and unique tester address value of any DolpTp Connection of the configured EcuInstance. If the configured EcuInstance receives the PDU Triggering referenced via DolpTpConnection.tpSdu, the tester address of a DolpTpConnection is referenced via DolpTpConnection.dolpSourceAddress.</p> <p>If the configured EcuInstance sends the PDU Triggering referenced via DolpTpConnection.tpSdu, the tester address of a DolpTpConnection is referenced via DolpTpConnection.dolpTargetAddress.</p>		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00031]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPTester	
BSW Parameter		BSW Type
DoIPNumByteDiagAckNack		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the number of original Diagnostic request bytes the DoIP entity responses on a NACK of a diagnostic response message to the Tester.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00042]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPTester	
BSW Parameter	BSW Type	
DoIPRoutingActivationRef	ECUC-REFERENCE-DEF	
BSW Description		
Reference to a DoIPRoutingActivation describing the possible routing activations of the DoIPTester		
Template Description		
Reference to a DoIPRoutingActivation describing the possible routing activations of the DoIPTester.		
M2 Parameter		
SystemTemplate::DoIP::DoIpLogicTesterAddressProps.doIpTesterRoutingActivation		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_DoIP_00062]	

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface/DoIPTester	
BSW Parameter	BSW Type	
DoIPTesterSA	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Source Address of the Tester sent via routing activation or diagnostic message.		
Template Description		
The logical DoIP address.		
M2 Parameter		
SystemTemplate::TransportProtocols::DoIpLogicAddress.address		
Mapping Rule	Mapping Type	
If the configured EcuInstance receives the PDU Triggering referenced via DoIpTpConnection.tpSdu, the tester address of a DoIpTpConnection is referenced via DoIpLogicAddress.doIpSourceAddress. If the configured EcuInstance sends the PDU Triggering referenced via DoIpTpConnection.tpSdu, the tester address of a DoIpTpConnection is referenced via DoIpLogicAddress.doIpTargetAddress.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_DoIP_00043]	

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
BSW Parameter	BSW Type	
DoIPUseMacAddressForIdentification	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Provided the information if a configured EID at vehicle identification response/vehicle announcement is used or the MAC address. TRUE: Use MAC Address instead of EID for Vehicle identification/announcement. FALSE: Use configured EID for vehicle identification/announcement. Dependencies: DoIPEID		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	







	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_DoIP_00013]

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPUseVehicleIdentificationSyncStatus		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Defines if the optional VIN/GID synchronization status is used additionally in the vehicle identification/announcement.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_DoIP_00016]	

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPVehicleAnnouncementCount		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Number of vehicle announcement messages on IP address assignment. Represents parameter A_DoIP_Announce_Num of ISO 13400-2:2012.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_DoIP_00094]	

<b>BSW Module</b>	<b>BSW Context</b>	
DoIP	DoIP/DoIPConfigSet/DoIPInterface	
<b>BSW Parameter</b>		<b>BSW Type</b>
DoIPVehicleAnnouncementInterval		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Time to wait in [s] for sending subsequent vehicle announcement messages. Represents parameter A_DoIP_Announce_Interval of ISO 13400-2:2012		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_DoIP_00007]

BSW Module	BSW Context	
DoIP	DoIP/DoIPConfigSet	
BSW Parameter		BSW Type
DoIPLogicalAddress		ECUC-INTEGER-PARAM-DEF
BSW Description		
Describes the logical address of the DoIP entity, i.e. the LA that will route diagnostic requests to the Dcm of the DoIP entity.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00020]

BSW Module	BSW Context	
DoIP	DoIP	
BSW Parameter		BSW Type
DoIPGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container specifies the general configuration parameters of the DoIP module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00002]

BSW Module	BSW Context	
DoIP	DoIP/DoIPGeneral	
BSW Parameter		BSW Type
DoIPDevelopmentErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00004]

BSW Module	BSW Context	
DoIP	DoIP/DoIPGeneral	
BSW Parameter		BSW Type
DoIPDhcpOptionVinUse		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If DoIPDhcpOptionVinUse is set to true the DoIP module will add the VIN to the Dhcp host name if no valid Dhcp host name is already set.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00067]

BSW Module	BSW Context	
DoIP	DoIP/DoIPGeneral	
BSW Parameter		BSW Type
DoIPEntityStatusMaxByteFieldUse		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter is used to distinguish the optional support of the Max data size element of a diagnostic entity status response.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00064]

BSW Module	BSW Context	
DoIP	DoIP/DoIPGeneral	
BSW Parameter		BSW Type
DoIPGIDInvalidityPattern		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the Byte pattern that is used for response messages if no valid GID could be retrieved. Only the value '0' or '255' is allowed".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00065]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPGetGidCallback		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container describes the usage of a callback function to get the GID. (If this container is not present no callback function shall be used by DoIP module to retrieve the GID.)			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00024]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral/DoIPGetGidCallback	
BSW Parameter		BSW Type	
DoIPGetGidDirect		ECUC-FUNCTION-NAME-DEF	
BSW Description			
If the DoIPGetGidDirect parameter exist the DoIP module shall call the configured callback function (<User>_DoIPGetGID) direct. (It is not needed to specify a service port to the DoIP service component.) If the DoIPGetGidDirect parameter does NOT exist the DoIP module shall use a RPort with a CallbackGetGID type of client-server port interface to retrieve the GID.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00028]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPHostNameSizeMax		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Maximum Size of the DHCP HostName in ASCII. This parameter is necessary to reserve the correct amount of bytes for working with the DHCP HostName option. Minimum range is 5 because Dhcp Host Name should be at least "DoIP-" on any configuration.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00073]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF	
BSW Description			
Determines the frequency at which the DoIP_MainFunction() is called in [s].			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00006]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPMaxRequestBytes		ECUC-INTEGER-PARAM-DEF	
BSW Description			
Specifies the maximum allowed bytes of a DoIP message request without the DoIP header.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00019]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPMaxUDPRequestPerConnection		ECUC-INTEGER-PARAM-DEF	
BSW Description			
This parameter captures the maximum amount of UDP Requests necessary to handle parallel within a single UDP connection.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00074]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPNodeType		ECUC-ENUMERATION-PARAM-DEF	
BSW Description			
Describes the Type of the DoIP node.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00021]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPPowerModeCallback		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container describes the usage of a callback function to retrieve the current power mode. This container shall always be present.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00023]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral/DoIPPowerModeCallback	
BSW Parameter		BSW Type	
DoIPPowerModeDirect		ECUC-FUNCTION-NAME-DEF	
BSW Description			
If the DoIPPowerModeDirect parameter exist the DoIP module shall call the configured callback function (<User>_DoIPGetPowerModeCallback) direct. (It is not needed to specify a service port to the DoIP service component.) If the DoIPPowerModeDirect parameter does NOT present the DoIP module shall use a RPort with a CallbackGetPowerMode type of client-server port interface to retrieve the current power mode.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
Mapping Status			ECUC Parameter ID
valid			[ECUC_DoIP_00027]

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPTriggerGidSyncCallback		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container describes the usage of a callback function to trigger the GID synchronization. (If this container does not exist no callback function shall be used by DoIP module to trigger the GID synchronization.)			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_DoIP_00025]	

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral/DoIPTriggerGidSyncCallback	
BSW Parameter		BSW Type	
DoIPTriggerGidSyncDirect		ECUC-FUNCTION-NAME-DEF	
BSW Description			
If the DoIPTriggerGidSyncDirect parameter exist the DoIP module shall call the configured callback function (<User>_DoIPTriggerGidSyncCallback) direct. (It is not needed to specify a service port to the DoIP service component.) If the DoIPTriggerGidSyncDirect parameter does NOT present the DoIP module shall use a RPort with a CallbackTrigger GIDSynchrononization type of client-server port interface to trigger the GID synchronization.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_DoIP_00029]	

BSW Module		BSW Context	
DoIP		DoIP/DoIPGeneral	
BSW Parameter		BSW Type	
DoIPUseEIDasGID		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Specifies if the DoIP entity shall use its EID if it is the Master for vehicle identification gid on the vehicle identification/vehicle announcement.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_DoIP_00018]	

BSW Module	BSW Context	
DoIP	DoIP/DoIPGeneral	
BSW Parameter		BSW Type
DoIPVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activates the DoIP_GetVersionInfo() API. TRUE: Enables the DoIP_GetVersionInfo() API. FALSE: DoIP_GetVersionInfo() API is not included.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00005]

BSW Module	BSW Context	
DoIP	DoIP/DoIPGeneral	
BSW Parameter		BSW Type
DoIPVinGidMaster		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Specifies if the DoIP entity is the Vehicle identification Master for the GiD (Group ID).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00017]

BSW Module	BSW Context	
DoIP	DoIP/DoIPGeneral	
BSW Parameter		BSW Type
DoIPVinInvalidityPattern		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the Byte pattern that is used for response messages if no valid VIN could be retrieved. Only the value '0' or '255' is allowed".		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_DoIP_00066]



## C.6.10 UdpNm

BSW Module	BSW Context	
UdpNm	UdpNm	
BSW Parameter		BSW Type
UdpNmGlobalConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains all global configuration parameters of UDP NM. The parameters and the parameters of the sub containers shall be mapped to the C data type UdpNm_ConfigType (for parameters where it is possible) which is passed to the UdpNm_Init function.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_ - 00001]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter		BSW Type
UdpNmBusSynchronizationEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling bus synchronization support.  This feature is required for gateway nodes only. It must not be defined if UdpNmPassiveModeEnabled==true. This parameter shall be derived from NmBusSynchronizationEnabled.		
Template Description		
Enables bus synchronization support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmBusSynchronizationEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_ - 00006]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter		BSW Type
UdpNmChannelConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the channel-specific configuration parameters of the UdpNm.		
Template Description		
Udp specific NmCluster attributes		
M2 Parameter		





SystemTemplate::NetworkManagement::UdpNmCluster	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00017]

BSW Module	BSW Context
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
BSW Parameter	BSW Type
UdpNmActiveWakeupBitEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Enables/Disables the handling of the Active Wakeup Bit in the UdpNm module.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00074]

BSW Module	BSW Context
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
BSW Parameter	BSW Type
UdpNmAllNmMessagesKeepAwake	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Specifies if UdpNm drops irrelevant NM PDUs. false: Only NM PDUs with a PNI bit = true and containing a PN request for this ECU triggers the standard RX indication handling true: Every NM PDU triggers the standard RX indication handling	
Template Description	
Specifies if Nm drops irrelevant NM PDUs. false: Only NM PDUs with a Partial Network Information Bit (PNI) = true and containing a Partial Network request for this ECU trigger the standard RX indication handling and thus keep the ECU awake true: Every NM PDU triggers the standard RX indication handling and keeps the ECU awake	
M2 Parameter	
SystemTemplate::NetworkManagement::UdpNmNode.allNmMessagesKeepAwake	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00089]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmCarWakeUpBitPosition		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the Bit position of the CWU within the NM PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_ - 00087]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmCarWakeUpBytePosition		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the Byte position of the CWU within the NM PDU.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_ - 00086]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmCarWakeUpFilterEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If CWU filtering is supported, only the CWU bit within the NM PDU with source node identifier UdpNmCarWakeUpFilterNode Id is considered as CWU request. FALSE - CWU filtering is not supported TRUE - CWU filtering is supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_ - 00077]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmCarWakeUpFilterNodeId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Source node identifier for CWU filtering. If CWU filtering is supported, only the CWU bit within the NM PDU with source node identifier UdpNmCarWakeUpFilterNodeId is considered as CWU request.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00078]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmCarWakeUpRxEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables or disables support of CarWakeUp bit evaluation in received NM PDUs. FALSE - CarWakeUp not supported. TRUE - CarWakeUp supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00076]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmComMNetworkHandleRef		ECUC-REFERENCE-DEF
BSW Description		
This reference points to the unique channel defined by the ComMChannel and provides access to the unique channel index value in ComMChannelId.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00018]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmDynamicPncToChannelMappingEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Channel-specific parameter to enable the dynamic PNC-to-channel-mapping feature. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled		
Template Description		
Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.dynamicPncToChannelMappingEnabled		
Mapping Rule		Mapping Type
1:1 Mapping. If M2 Parameter not defined then do not create UdpNmDynamicPncToChannelMappingEnabled.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00095]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmImmediateNmCycleTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Defines the immediate NM PDU cycle time in seconds which is used for UdpNmImmediateNmTransmissions NM PDU transmissions.		
Template Description		
Defines the immediate NmPdu cycle time in seconds which is used for nmlImmediateNmTransmissions NmPdu transmissions. This attribute is only valid if nmlImmediateNmTransmissions is greater one.		
M2 Parameter		
SystemTemplate::NetworkManagement::UdpNmCluster.nmImmediateNmCycleTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00079]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmImmediateNmTransmissions		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the number of immediate NM PDUs which shall be transmitted. If the value is zero no immediate NM PDUs are transmitted. The cycle time of immediate NM PDUs is defined by UdpNmImmediateNmCycleTime.		
Template Description		
Defines the number of immediate NmPdus which shall be transmitted. If the value is zero no immediate NmPdus are transmitted. The cycle time of immediate NmPdus is defined by nmlImmediateNmCycleTime.		





<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::UdpNmCluster.nmImmediateNmTransmissions	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_-00075]

<b>BSW Module</b>	<b>BSW Context</b>	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
UdpNmMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Call cycle of UdpNm_MainFunction_x for the respective instance in [s].		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_UdpNm_-00032]

<b>BSW Module</b>	<b>BSW Context</b>	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
UdpNmMsgCycleOffset		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Time offset in the periodic transmission node. It determines the start delay of the transmission. < UdpNmMsgCycleTime This parameter is only valid if UdpNmPassiveModeEnabled is disabled.		
<b>Template Description</b>		
Node specific time offset in the periodic transmission node. It determines the start delay of the transmission. Specified in seconds.		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::UdpNmNode.nmMsgCycleOffset		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_UdpNm_-00029]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmMsgCycleTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Period of a NM-message. It determines the periodic rate and is the basis for transmit scheduling. $NmTimeoutTime = n * UdpNmMsgCycleTime$ This parameter is only valid if UdpNmPassiveModeEnabled is disabled.		
Template Description		
Period of a NmPdu in seconds. It determines the periodic rate in the periodic transmission mode with bus load reduction and is the basis for transmit scheduling in the periodic transmission mode without bus load reduction.		
M2 Parameter		
SystemTemplate::NetworkManagement::UdpNmCluster.nmMsgCycleTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00028]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmNodeDetectionEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling the node detection support. This parameter shall be derived from NmNodeDetectionEnabled. This parameter shall only be enabled if UdpNmNodeIdEnabled == true. If(UdpNmPduCbvPosition != UDPNM_PDU_OFF) then Equal(NmNodeDetectionEnabled) else Equal(False).		
Template Description		
Enables the Request Repeat Message Request support. Only valid if nmNodeIdEnabled is set to true.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmNodeDetectionEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00090]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmNodeid		ECUC-INTEGER-PARAM-DEF
BSW Description		
Node identifier of local node.		
Template Description		
Node identifier of local NmNode. Shall be unique in the NmCluster.		
M2 Parameter		





SystemTemplate::NetworkManagement::NmNode.nmNodeId	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00031]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmNodeIdEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling the source node identifier. This parameter shall be derived from NmNodeIdEnabled.		
Template Description		
Enables the source node identifier.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmCluster.nmNodeIdEnabled		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_UdpNm_-00091]	

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmPduCbvPosition		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the position of the control bit vector within the NM PACKET. The value of the parameter represents the location of the control bit vector in the NM PACKET (UDPNM_PDU_BYTE_0 means byte 0, UDPNM_PDU_BYTE_1 means byte 1, UDPNM_PDU_OFF means the control bit vector is not part of the NM PACKET) See also UdpNmPduNidPosition if (UdpNmPduCbvPosition != UDPNM_PDU_OFF && UdpNmPduNidPosition != UDPNM_PDU_OFF) then UdpNmPduCbvPosition != UdpNmPduNidPosition if (UdpNmPduCbvPosition != UDPNM_PDU_OFF && UdpNmPduNidPosition == UDPNM_PDU_OFF) then UdpNmPduCbvPosition = UDPNM_PDU_BYTE0		
Template Description		
Defines the position of the control bit vector within the Nm Pdu (Byte position). If this attribute is not configured, the Control Bit Vector is not used.		
M2 Parameter		
SystemTemplate::NetworkManagement::UdpNmCluster.nmCbvPosition		
Mapping Rule	Mapping Type	
Derive byte position from nmCbvPosition attribute. If this optional attribute is missing set UDPNM_PDU_OFF as value.	full	







Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00026]

BSW Module	BSW Context
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
BSW Parameter	BSW Type
UdpNmPduNidPosition	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
<p>Defines the position of the source node identifier within the NM PACKET.</p> <p>ImplementationType: UdpNm_PduPositionType</p> <p>The value of the parameter represents the location of the source node identifier in the NM PACKET (UDPNM_PDU_BYTE_0 means byte 0, UDPNM_PDU_BYTE_1 means byte 1, UDPNM_PDU_OFF means source node identifier is not part of the NM PACKET)</p> <p>See also UdpNmPduCbvPosition if (UDPNM_PDU_NID_POSITION != UDPNM_PDU_OFF &amp;&amp; UDPNM_PDU_CBV_POSITION != UDPNM_PDU_OFF) then UDPNM_PDU_NID_POSITION != UDPNM_PDU_CBV_POSITION</p> <p>if (UDPNM_PDU_NID_POSITION != UDPNM_PDU_OFF &amp;&amp; UDPNM_PDU_CBV_POSITION == UDPNM_PDU_OFF) then UDPNM_PDU_IND_POSITION = UDPNM_PDU_BYTE0</p>	
Template Description	
<p>Defines the byte position of the source node identifier within the NmPdu. If this attribute is not configured, the Node Identification is not used.</p>	
M2 Parameter	
SystemTemplate::NetworkManagement::UdpNmCluster.nmNidPosition	
Mapping Rule	Mapping Type
Derive byte position from nmNidPosition attribute. If this optional attribute is missing set UDPNM_PDU_OFF as value.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00025]

BSW Module	BSW Context
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
BSW Parameter	BSW Type
UdpNmPnEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
<p>Enables or disables support of partial networking. false: Partial networking Range not supported true: Partial networking supported</p>	
Template Description	
<p>Defines whether this NmCluster contributes to the partial network mechanism.</p>	
M2 Parameter	
SystemTemplate::NetworkManagement::NmCluster.nmPncParticipation	
Mapping Rule	Mapping Type
If NmCluster.nmPncParticipation has the value "true" or is not defined then UdpNmPnEnabled shall be set to true.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00061]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmPnHandleMultipleNetworkRequests		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
false: UdpNm_NetworkRequest is ignored in NO. true: UdpNm_NetworkRequest triggers a change from NO to RM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00063]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmRemoteSleepIndTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout for Remote Sleep Indication. It defines the time in [s] how long it shall take to recognize that all other nodes are ready to sleep.		
Typically it should be equal to: $n * \text{UdpNmMsgCycleTime}$ , where $n$ denotes the number of NM packets that are normally sent before Remote Sleep Indication is detected. The value of $n$ decremented by one determines the amount of lost NM packets that can be tolerated by the Remote Sleep Indication procedure.		
Template Description		
Timeout for Remote Sleep Indication in seconds. It defines the time how long it shall take to recognize that all other nodes are ready to sleep.		
M2 Parameter		
SystemTemplate::NetworkManagement::UdpNmCluster.nmRemoteSleepIndicationTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00023]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmRepeatMessageTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout for Repeat Message State. It defines the time in seconds how long the NM shall stay in the Repeat Message State.		
Template Description		
Timeout for Repeat Message State in seconds. Defines the time how long the NM shall stay in the Repeat Message State.		
M2 Parameter		
SystemTemplate::NetworkManagement::UdpNmCluster.nmRepeatMessageTime		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00022]

BSW Module	BSW Context
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
BSW Parameter	BSW Type
UdpNmRepeatMsgIndEnabled	ECUC-BOOLEAN-PARAM-DEF
BSW Description	Enable/disable the notification that a RepeatMessageRequest bit has been received.
Template Description	Switch for enabling the Repeat Message Bit Indication.
M2 Parameter	SystemTemplate::NetworkManagement::NmCluster.nmRepeatMsgIndEnabled
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00092]

BSW Module	BSW Context
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
BSW Parameter	BSW Type
UdpNmRetryFirstMessageRequest	ECUC-BOOLEAN-PARAM-DEF
BSW Description	Specifies if first message request in UdpNm is repeated until accepted by SoAd.
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00085]

BSW Module	BSW Context
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
BSW Parameter	BSW Type
UdpNmRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	This container describes the UdpNm RX PDU's.
Template Description	





<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::NmNode. <a href="#">rxNmPdu</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create container for each NmPdu that is received on the regarded Nm cluster	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_-00038]

<b>BSW Module</b>	<b>BSW Context</b>
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig/UdpNmRxPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
UdpNmRxPduId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
ID of the RxPdu that will be used by a RxIndication of the lower layer.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_-00043]

<b>BSW Module</b>	<b>BSW Context</b>
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig/UdpNmRxPdu
<b>BSW Parameter</b>	<b>BSW Type</b>
UdpNmRxPduRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
The reference to a PDU in the global PDU structure described in the AUTOSAR ECU Configuration Specification. This reference will be used by the UdpNm module to derive the PDU Id.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_-00039]

<b>BSW Module</b>	<b>BSW Context</b>
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
UdpNmStayInPbsEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	





If this parameter is disabled Prepare Bus-Sleep Mode is left after UdpNmWaitBusSleepTime. If this parameter is enabled Prepare Bus-Sleep Mode can only be left if ECU is powered off or any restart reason applies.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_-00093]

<b>BSW Module</b>	<b>BSW Context</b>
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
UdpNmSynchronizedPncShutdownEnabled	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Specifies if UdpNm handle PN shutdown messages to support a synchronized PNC shutdown across a PN topology. This is only used for ECUs in the role of a top-level PNC coordinator or intermediate PNC coordinator. Thus, the PNC gateway functionality is enabled and therefore ERA calculation is used.	
FALSE: synchronized PNC shutdown is disabled	
TRUE: synchronized PNC shutdown is enabled	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_-00097]

<b>BSW Module</b>	<b>BSW Context</b>
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig
<b>BSW Parameter</b>	<b>BSW Type</b>
UdpNmTimeoutTime	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
Network Timeout for NM packets. It denotes the time in [s] how long the NM shall stay in the Network Mode before transition into Prepare Bus-Sleep Mode shall take place.	
It shall be equal for all nodes in the cluster. It shall be greater than UdpNmMsgCycleTime. Typically, it should be equal to: $x * \text{UdpNmMsgCycleTime}$ , where $n$ denotes the number of NM PACKET cycle times in the Ready Sleep State before transition into the Bus-Sleep Mode is initiated. The value of $n$ decremented by one determines the amount of lost NM packets that can be tolerated by the coordination algorithm.	
<b>Template Description</b>	
Network Timeout for NmPdus in seconds. It denotes the time how long the UdpNm shall stay in the Network Mode before transition into Prepare Bus-Sleep Mode shall take place.	
<b>M2 Parameter</b>	
SystemTemplate::NetworkManagement::UdpNmCluster.nmNetworkTimeout	
<b>Mapping Rule</b>	<b>Mapping Type</b>





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_-00020]

<b>BSW Module</b>	<b>BSW Context</b>	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
<b>BSW Parameter</b>		<b>BSW Type</b>
UdpNmTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container describes the UdpNm TX PDU's.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
SystemTemplate::NetworkManagement::NmNode.t.xNmPdu		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create container for each NmPdu that is transmitted on the regarded Nmcluster		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_UdpNm_-00036]

<b>BSW Module</b>	<b>BSW Context</b>	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig/UdpNmTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
UdpNmTxConfirmationPduld		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Id of the TxPdu that will be used by a TxConfirmation from the lower layer.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_UdpNm_-00042]

<b>BSW Module</b>	<b>BSW Context</b>	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig/UdpNmTxPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
UdpNmTxPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
The reference to a PDU in the global PDU structure described in the AUTOSAR ECU Configuration Specification. This reference will be used by the UdpNm module to derive the PDU Id.		
<b>Template Description</b>		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_ - 00037]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmUserDataTxPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Preprocessor switch for enabling the Tx path of Com User Data. Use case: Setting of NMUserData via SWC.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu.iSignalToIPduMapping		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
Create container for each NmPdu that aggregates the ISignalToIPduMapping element. The configuration for these Pdus (e.g. Transfer Properties) shall be derived from this information.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_UdpNm_ - 00056]	

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig/UdpNmUserDataTxPdu	
BSW Parameter		BSW Type
UdpNmTxUserDataPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the Handle ID of the NM User Data I-PDU.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_UdpNm_ - 00058]	

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig/UdpNmUserDataTxPdu	
BSW Parameter		BSW Type
UdpNmTxUserDataPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the NM User Data I-PDU in the global PDU collection.		





Template Description	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_-00057]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig/UdpNmChannelConfig	
BSW Parameter		BSW Type
UdpNmWaitBusSleepTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout for bus calm down phase. It denotes the time in [s] how long the NM shall stay in the Prepare Bus-Sleep Mode before transition into Bus-Sleep Mode shall take place. It shall be equal for all nodes in the cluster. It shall be long enough to empty all Tx-buffer empty.		
Template Description		
Timeout for bus calm down phase in seconds. It denotes the time how long the CanNm shall stay in the Prepare Bus-Sleep Mode before transition into Bus-Sleep Mode shall take place.		
M2 Parameter		
SystemTemplate::NetworkManagement::UdpNmCluster.nmWaitBusSleepTime		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_UdpNm_-00021]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter		BSW Type
UdpNmComControlEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling the Communication Control support.		
Template Description		
Enables the Communication Control support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmComControlEnabled		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_UdpNm_-00013]



BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmComUserDataSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enable/disable the user data support.		
Template Description		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::NmPdu.iSignalToIPduMapping		
Mapping Rule		Mapping Type
If an NmPdu contains user data defined via the existence of NmPdu.iSignalToIPduMapping and is consequently handled via the PduR and Com this attribute shall be set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00055]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmCoordinatorSyncSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/disables the coordinator synchronization support.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00059]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmDevErrorDetect	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00002]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmDynamicPncToChannelMappingSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Precompile time switch to enable the dynamic PNC-to-channel-mapping handling. False: Dynamic PNC-to-channel-mapping is disabled True: Dynamic PNC-to-channel-mapping is enabled		
Template Description		
Defines if this EcuInstance shall implement the dynamic PNC-to-channel-mapping functionality on this Communication Connector and its respective PhysicalChannel.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.dynamicPncToChannelMappingEnabled		
Mapping Rule		Mapping Type
If at least one dynamicPncToChannelMappingEnabled attribute is defined and if at least one CommunicationConnector of the EcuInstance has dynamicPncToChannelMappingEnabled set to true, then UdpNmDynamicPncToChannelMappingSupport shall be set to true. Otherwise UdpNmDynamicPncToChannelMappingSupport shall be set to false.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00094]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmImmediateRestartEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the immediate transmission of a NM PACKET upon bus-communication request in Prepare-Bus-Sleep mode. Must not be defined if UdpNmPassiveModeEnabled== true.		
Template Description		
Enables the asynchronous transmission of a CanNm PDU upon bus-communication request in Prepare-Bus-Sleep mode.		
M2 Parameter		
SystemTemplate::NetworkManagement::UdpNmClusterCoupling.nmImmediateRestartEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00009]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmNumberOfChannels	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Number of NM channels allowed within one ECU.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_UdpNm_00014]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter		BSW Type
UdpNmPassiveModeEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling support of the Passive Mode.		
Template Description		
Enables support of the Passive Mode. The passive mode is configurable per channel.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmNode.nmPassiveModeEnabled		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping nmNode.nmPassiveModeEnabled shall always have the same value in all NmClusters with the same bus protocol in the scope of one EcuInstance.	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_UdpNm_00010]	

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter		BSW Type
UdpNmPduRxIndicationEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling the PDU Rx Indication. This parameter shall be derived from NmPduRxIndicationEnabled.		
Template Description		
Switch for enabling the PDU Rx Indication.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmPduRxIndicationEnabled		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_UdpNm_00011]	

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmRemoteSleepIndEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling remote sleep indication support. This feature is required for gateway nodes only. It must not be defined if UdpNmPassiveModeEnabled==true. This parameter shall be derived from NmRemoteSleepIndEnabled.		
Template Description		
Switch for enabling remote sleep indication support.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmRemoteSleepIndEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00005]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmStateChangeIndEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling the UDP NM state change notification. This parameter shall be derived from NmStateChangeIndEnabled.		
Template Description		
Enables the CAN Network Management state change notification.		
M2 Parameter		
SystemTemplate::NetworkManagement::NmEcu.nmStateChangeIndEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00012]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter	BSW Type	
UdpNmUserDataEnabled	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Pre-processor switch for enabling user data support. This parameter shall be derived from NmUserDataEnabled.		
Template Description		
Switch for enabling user data support.		
M2 Parameter		





SystemTemplate::NetworkManagement::NmEcu.nmUserDataEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_UdpNm_-00004]

BSW Module	BSW Context	
UdpNm	UdpNm/UdpNmGlobalConfig	
BSW Parameter		BSW Type
UdpNmVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Pre-processor switch for enabling version info API support.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_UdpNm_-00003]

### C.6.11 SomelpTp

BSW Module	BSW Context	
SomelpTp	SomelpTp	
BSW Parameter		BSW Type
SomelpTpChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters of the SomelpTp channel.		
Template Description		
This element is used to assign properties to SomeipTpConnections that are referencing this SomeipTpChannel.		
M2 Parameter		
SystemTemplate::TransportProtocols::SomeipTpChannel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SomelpTp_-00003]

BSW Module		BSW Context	
SomeIpTp		SomeIpTp/SomeIpTpChannel	
BSW Parameter		BSW Type	
SomeIpTpNPduSeparationTime		ECUC-FLOAT-PARAM-DEF	
BSW Description			
Sets the duration of the minimum time in seconds the SomeIpTp module shall wait between the transmissions of N-PDUs.			
Template Description			
Sets the duration of the minimum time in seconds the SOME/IP TP module shall wait between the transmissions of NPdus.			
M2 Parameter			
SystemTemplate::TransportProtocols::SomeIpTpChannel.separationTime			
Mapping Rule		Mapping Type	
1:1 mapping		full	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_SomeIpTp_-00006]	

BSW Module		BSW Context	
SomeIpTp		SomeIpTp/SomeIpTpChannel	
BSW Parameter		BSW Type	
SomeIpTpRxNSdu		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
The following parameters needs to be configured for each N-SDU which has to be passed as one assembled RxPdu to the upper layer.			
Template Description			
Reference to an IPdu that is segmented by the Transport Protocol.			
M2 Parameter			
SystemTemplate::TransportProtocols::SomeIpTpConnection.tpSdu			
Mapping Rule		Mapping Type	
Create reference if a SomeIpTpConnection exists that points to the SomeIpTpChannel that aggregates the SomeIpTpRxNSdu and references a PduTriggering in the role tpSdu that is received by the EcuInstance that is contained in the Ecu Extract.		full	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_SomeIpTp_-00008]	

BSW Module		BSW Context	
SomeIpTp		SomeIpTp/SomeIpTpChannel/SomeIpTpRxNSdu	
BSW Parameter		BSW Type	
SomeIpTpRxNPdu		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the configuration parameters of the NPdu that is received from a lower layer			
Template Description			
Reference to the segmented IPdu.			
M2 Parameter			
SystemTemplate::TransportProtocols::SomeIpTpConnection.transportPdu			
Mapping Rule		Mapping Type	





Create container if a SomeipTpConnection exists that points to a PduTriggering in the role transportPdu that is received by the EcuInstance that is contained in the Ecu Extract.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SomeipTp_-00011]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeipTp	SomeipTp/SomeipTpChannel/SomeipTpRxNSdu/SomeipTpRxNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomeipTpRxNPduHandleId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the handle ID that is used by the PduR when calling SomeipTp_RxIndication.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SomeipTp_-00013]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeipTp	SomeipTp/SomeipTpChannel/SomeipTpRxNSdu/SomeipTpRxNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomeipTpRxNPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a global Pdu that is used to harmonize HandleIDs in the COM-Stack.		
<b>Template Description</b>		
Reference to the segmented IPdu.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::SomeipTpConnection. <a href="#">transportPdu</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create reference if a SomeipTpConnection exists that points to a PduTriggering in the role transportPdu that is received by the EcuInstance that is contained in the Ecu Extract.		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SomeipTp_-00012]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeipTp	SomeipTp/SomeipTpChannel/SomeipTpRxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomeipTpRxSduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a Pdu in the COM-Stack that represents the assembled RxPdu which is passed via the PduR to the upper layer.		
<b>Template Description</b>		





Reference to an IPdu that is segmented by the Transport Protocol.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::SomeipTpConnection.tpSdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create reference if a SomeipTpConnection exists that points to a PduTriggering in the role tpSdu that is received by the EcuInstance that is contained in the Ecu Extract.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SomeipTp_-00010]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeipTp	SomeipTp/SomeipTpChannel	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SomeipTpRxTimeoutTime	ECUC-FLOAT-PARAM-DEF	
<b>BSW Description</b>		
Timer to monitor the successful reception. It is started when the first NPdu is received, restarted after reception of intermediate NPdus, and is stopped when the last NPdu has been received. The value shall be calculated as follows: (SomeipTpRxTimeoutTime = SomeipTpNPduSeparationTime + budget), where the time budget compensates intermediary hops and jitters within the ECU implementation.		
<b>Template Description</b>		
Timer to monitor the successful reception. It is started when the first NPdu is received, restarted after reception of intermediate NPdus, and is stopped when the last NPdu has been received.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::SomeipTpChannel.rxTimeoutTime		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SomeipTp_-00023]	

<b>BSW Module</b>	<b>BSW Context</b>	
SomeipTp	SomeipTp/SomeipTpChannel	
<b>BSW Parameter</b>	<b>BSW Type</b>	
SomeipTpTxBurstSize	ECUC-INTEGER-PARAM-DEF	
<b>BSW Description</b>		
Specifies the number of segments SomeipTp shall transmit without applying the SomeipTpNPduSeparationTime.		
<b>Template Description</b>		
Specifies the number of segments that shall be transmitted in a burst ignoring separationTime. SeparationTime will then only be applied between bursts. If not configured, SeparationTime will be applied between all frames.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::SomeipTpChannel.burstSize		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_SomeipTp_-00024]	



BSW Module	BSW Context	
SomelpTp	SomelpTp/SomelpTpChannel	
BSW Parameter	BSW Type	
SomelpTpTxNSdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
The following parameters needs to be configured for each N-SDU that the SomelpTp module transmits via the SomelpTp Channel.		
Template Description		
Reference to an IPdu that is segmented by the Transport Protocol.		
M2 Parameter		
SystemTemplate::TransportProtocols::SomeipTpConnection. <a href="#">tpSdu</a>		
Mapping Rule		Mapping Type
Create reference if a SomeipTpConnection exists that points to the SomeipTpChannel that aggregates the SomelpTpTxNSdu and references a PduTriggering in the role tpSdu that is transmitted by the EcuInstance that is contained in the Ecu Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SomelpTp_-00009]

BSW Module	BSW Context	
SomelpTp	SomelpTp/SomelpTpChannel/SomelpTpTxNSdu	
BSW Parameter	BSW Type	
SomelpTpTxNPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration parameters of the segmented Tx NPdus that are transmitted to a lower layer.		
Template Description		
Reference to the segmented IPdu.		
M2 Parameter		
SystemTemplate::TransportProtocols::SomeipTpConnection. <a href="#">transportPdu</a>		
Mapping Rule		Mapping Type
Create container if a SomeipTpConnection exists that points to a PduTriggering in the role transportPdu that is transmitted by the EcuInstance that is contained in the Ecu Extract.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SomelpTp_-00016]

BSW Module	BSW Context	
SomelpTp	SomelpTp/SomelpTpChannel/SomelpTpTxNSdu/SomelpTpTxNPdu	
BSW Parameter	BSW Type	
SomelpTpTxNPduHandleId	ECUC-INTEGGER-PARAM-DEF	
BSW Description		
This parameter defines the handle ID that is used by PduR when calling SomelpTp_TriggerTransmit.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SomeIpTp_-00017]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeIpTp	SomeIpTp/SomeIpTpChannel/SomeIpTpTxNSdu/SomeIpTpTxNPdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomeIpTpTxNPduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a global Pdu that is used to harmonize HandleIDs in the COM-Stack.		
<b>Template Description</b>		
Reference to the segmented IPdu.		
<b>M2 Parameter</b>		
SystemTemplate::TransportProtocols::SomeIpTpConnection. <a href="#">transportPdu</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Create reference if a SomeIpTpConnection exists that points to a PduTriggering in the role transportPdu that is transmitted by the EcuInstance that is contained in the Ecu Extract.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SomeIpTp_-00018]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeIpTp	SomeIpTp/SomeIpTpChannel/SomeIpTpTxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomeIpTpTxNSduHandleId		ECUC-INTEGGER-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the handle ID of the NSdu that represents the original TxSdu which is segmented and passed via the PduR to the lower layer. This handle ID is used by PduR when calling SomeIpTp_Transmit.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SomeIpTp_-00020]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeIpTp	SomeIpTp/SomeIpTpChannel/SomeIpTpTxNSdu	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomeIpTpTxNSduRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Reference to a global Pdu in the COM-Stack that represents the original TxSdu which is segmented and passed via the Pdu R to the lower layer.		





<b>Template Description</b>	
Reference to an IPdu that is segmented by the Transport Protocol.	
<b>M2 Parameter</b>	
SystemTemplate::TransportProtocols::SomeipTpConnection.tpSdu	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Create reference if a SomeipTpConnection exists that points to a PduTriggering in the role tpSdu that is transmitted by the EcuInstance that is contained in the Ecu Extract.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SomeipTp_ - 00015]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeipTp	SomeipTp	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomeipTpGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container contains the general configuration parameters of the SomeipTp module.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SomeipTp_ - 00002]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeipTp	SomeipTp/SomeipTpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomeipTpDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the Development Error Detection and Notification ON or OFF.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SomeipTp_ - 00004]

<b>BSW Module</b>	<b>BSW Context</b>	
SomeipTp	SomeipTp/SomeipTpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>





SomelpTpRxMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This parameter defines the cycle time in seconds of the periodic call of the SomelpTp_MainFunctionRx.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_SomelpTp_-00021]

<b>BSW Module</b>	<b>BSW Context</b>	
SomelpTp	SomelpTp/SomelpTpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomelpTpTxMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the cycle time in seconds of the periodic call of the SomelpTp_MainFunctionTx.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SomelpTp_-00005]

<b>BSW Module</b>	<b>BSW Context</b>	
SomelpTp	SomelpTp/SomelpTpGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
SomelpTpVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Activates the SomelpTp_GetVersionInfo() API. TRUE: Enables the SomelpTp_GetVersionInfo() API. FALSE: SomelpTp_GetVersionInfo() API is not included.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_SomelpTp_-00019]

### C.6.12 Wireless Ethernet Driver Mapping

BSW Module	BSW Context	
WEth	WEth	
BSW Parameter		BSW Type
WEthConfigSet		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters and sub containers of the AUTOSAR WEth module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00015]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet	
BSW Parameter		BSW Type
WEthCtrlConfig		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of the individual controller		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00006]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig	
BSW Parameter		BSW Type
WEthCtrlEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Maps the Wireless Ethernet controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the Wireless Ethernet driver is mapped to.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00039]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig	
BSW Parameter		BSW Type
WEthCtrlId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the instance ID of the configured controller.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00007]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig	
BSW Parameter		BSW Type
WEthCtrlPhyAddress		ECUC-STRING-PARAM-DEF
BSW Description		
Specifies the unique 48-bit physical address (MAC address) of the controller in network byte order. Regular Expression: [0-9a-fA-F]{2}[:-][0-9a-fA-F]{2}{5}		
Template Description		
Media Access Control address (MAC address) that uniquely identifies each EthernetCommunicationController in the network.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetCommunicationController.macUnicastAddress		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00020]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig	
BSW Parameter		BSW Type
WEthCtrlRxBufLenByte		ECUC-INTEGER-PARAM-DEF
BSW Description		
Limits the maximum receive buffer length (frame length) in bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00008]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig	
BSW Parameter		BSW Type
WEthCtrlTxBufLenByte		ECUC-INTEGER-PARAM-DEF
BSW Description		
Limits the maximum transmit buffer length (frame length) in bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00009]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig	
BSW Parameter		BSW Type
WEthDemEventParameterRefs		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00016]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig/WEthDemEventParameterRefs	
BSW Parameter		BSW Type
WETH_E_ACCESS		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter which shall be issued when the error "Controller access failed" has occurred.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00017]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig	
BSW Parameter		BSW Type
WEthRxBufTotal		ECUC-INTEGER-PARAM-DEF
BSW Description		
Configures the number of receive buffers.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00013]

BSW Module	BSW Context	
WEth	WEth/WEthConfigSet/WEthCtrlConfig	
BSW Parameter		BSW Type
WEthTxBufTotal		ECUC-INTEGER-PARAM-DEF
BSW Description		
Configures the number of transmit buffers.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00014]

BSW Module	BSW Context	
WEth	WEth	
BSW Parameter		BSW Type
WEthGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
General configuration of Wireless Ethernet Driver module.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00001]



BSW Module	BSW Context	
WEth	WEth/WEthGeneral	
BSW Parameter		BSW Type
WEthDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>Switches the Default Error Tracer (Det) detection and notification ON or OFF.</p> <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00003]

BSW Module	BSW Context	
WEth	WEth/WEthGeneral	
BSW Parameter		BSW Type
WEthEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
<p>Maps the Wireless Ethernet driver to zero or multiple ECUC partitions to make the modules API available in this partition. The Wireless Ethernet driver will operate as an independent instance in each of the partitions.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00038]

BSW Module	BSW Context	
WEth	WEth/WEthGeneral	
BSW Parameter		BSW Type
WEthGetWEtherStatsApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
<p>Enables / Disables WEth_GetWEtherStats_32 and WEth_GetWEtherStats_64 API.</p>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00036]

BSW Module	BSW Context	
WEth	WEth/WEthGeneral	
BSW Parameter		BSW Type
WEthIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00018]

BSW Module	BSW Context	
WEth	WEth/WEthGeneral	
BSW Parameter		BSW Type
WEthMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Specifies the period of main function WEth_MainFunction in seconds. Wireless Ethernet driver does not require this information but the BSW scheduler.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00022]

BSW Module	BSW Context	
WEth	WEth/WEthGeneral	
BSW Parameter		BSW Type
WEthUpdatePhysAddrFilter		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/Disables optional API WEth_UpdatePhysAddrFilter.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00019]

BSW Module	BSW Context	
WEth	WEth/WEthGeneral	
BSW Parameter		BSW Type
WEthVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables / Disables version info API.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_WEth_00004]

## C.7 Diagnostic

### C.7.1 Dcm Mapping

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection	
BSW Parameter		BSW Type
DcmDslMainConnection		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration for a main connection of a diagnostic protocol. Additionally it may contain references to ROE and Periodic connections if the protocol type or protocol transmission type needs them.		
Template Description		
DiagnosticConncection that is used to describe the relationship between several TP connections.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DiagnosticConnection		
Mapping Rule		Mapping Type
A DcmDslMainConnection subcontainer is created for a DiagnosticConnection that refers via functionRequest, physicalRequest or response to one or more TpConnectionIdent elements that are in turn contained in TpConnection elements via which the EcuInstancethat is included in the EcuExtract sends or receives PDUs.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00706]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection	
BSW Parameter		BSW Type
DcmDslProtocolRxTesterSourceAddr		ECUC-INTEGER-PARAM-DEF
BSW Description		





Tester source address uniquely describes a client and will be used e.g within the jump to Bootloader interfaces. This parameter is not required for generic connections (DcmPdus with MetaDataLength >= 1).	
<b>Template Description</b>	
TpConnection Base Class.	
<b>M2 Parameter</b>	
SystemTemplate::DiagnosticConnection::TpConnection	
<b>Mapping Rule</b>	<b>Mapping Type</b>
DcmDslProtocolRxTesterSourceAddr shall be derived from the TpConnection that is referenced from the DiagnosticConnection from which the DcmDslMainConnection container was derived. The TpConnection points in the role transmitter and receiver to TpNodes that in turn point to a Tp Address. The DcmDslProtocolRxTesterSourceAddr value shall be set to the diagnostic address (Tp Address) of the remote node. This means that if the TpConnection.transmitter does not represent the configured EcuInstance then the DcmDslProtocolRxTesterSourceAddr value can be derived from the TpNode that is referenced in the transmitter role and in turn references the TpAddress. If the TpConnection.transmitter represents the configured EcuInstance then the DcmDslProtocolRx TesterSourceAddr value can only be retrieved if the TpConnection sends its Pdus to a physical address. In this case the remote node is the TpNode referenced in the TpConnection.receiver role. The tester address can be derived from the TpAddress that is referenced by the TpNode if only one receiver is configured. In case that several TpNode elements are referenced in the Tp Connction.receiver role this parameter can not be derived from the System Description.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Dcm_01115]

## C.8 Time management

### C.8.1 StbM Time Management

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMFreshnessValueInformation		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Container with the Freshness Value configurations		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00075]	

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMFreshnessValue		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		





Container with the Freshness Value configurations	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00082]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation/StbMFreshnessValue	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMFreshnessValueId		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the Id of the Freshness Value. The Freshness Value might be a normal counter or a time value.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00083]	

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation/StbMFreshnessValue	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMFreshnessValueLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
This parameter defines the complete length in bits of the Freshness Value. As long as the key doesn't change the counter shall not overflow. The length of the counter shall be determined based on the expected life time of the corresponding key and frequency of usage of the counter.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00084]	

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation/StbMFreshnessValue	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMFreshnessValueTruncLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		





This parameter defines the length in bits of the Freshness Value to be included in the payload of the Secured Time Synchronization Messages. This length is specific to the least significant bits of the complete Freshness Counter. If the parameter is 0 no Freshness Value is included in the Secured Time Synchronization Messages.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00085]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMGetRxFreshnessValueFuncName		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
Function pointer to call within StbM_GetRxFreshness() context.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00081]	

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMGetTxConfFreshnessValueFuncName		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
Function pointer to call within StbM_SPduTxConfirmation() context.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00080]	

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMGetTxFreshnessValueFuncName		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
Function pointer to call within StbM_GetTxFreshness() context.		





<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00078]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMGetTxTruncFreshnessValueFuncName		ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>		
Function pointer to call within StbM_GetTxFreshnessTruncData() context.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00079]	

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMFreshnessValueInformation	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMQueryFreshnessValue		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter specifies if the freshness value shall be determined through a C-function (CD) or a software component (SW-C).		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00076]	

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container holds the general parameters of the Synchronized Time-base Manager		
<b>Template Description</b>		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00002]

BSW Module	BSW Context	
StbM	StbM/StbMGeneral	
BSW Parameter		BSW Type
StbMDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00012]	

BSW Module	BSW Context	
StbM	StbM/StbMGeneral	
BSW Parameter		BSW Type
StbMEcucPartitionRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to EcucPartition, where StbM module is assigned to.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00069]	

BSW Module	BSW Context	
StbM	StbM/StbMGeneral	
BSW Parameter		BSW Type
StbMGetCurrentTimeExtendedAvailable		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This allows to define whether an additional variant of the API GetCurrentTime with a 64 bit argument is provided.		
Template Description		







M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00032]

BSW Module	BSW Context	
StbM	StbM/StbMGeneral	
BSW Parameter		BSW Type
StbMGptTimerRef		ECUC-REFERENCE-DEF
BSW Description		
This represents an optional sub-container in case any Time Notification Customer is configured. The designated GPT timer has to be configured to have a tick duration of one micro second.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00039]	

BSW Module	BSW Context	
StbM	StbM/StbMGeneral	
BSW Parameter		BSW Type
StbMMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Schedule period of the main function StbM_MainFunction. Unit: [s].		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00027]	

BSW Module	BSW Context	
StbM	StbM/StbMGeneral	
BSW Parameter		BSW Type
StbMTimeRecordingSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/Disables the usage of the recording functionality for Synchronized and Offset timebases for Global Time precision measurement purpose.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00038]

BSW Module	BSW Context	
StbM	StbM/StbMGeneral	
BSW Parameter		BSW Type
StbMTimerStartThreshold		ECUC-FLOAT-PARAM-DEF
BSW Description		
This interval defines, when a GPT Timer shall be started for Time Notification Customers for which the corresponding Customer Timer is running [unit: seconds].		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00063]	

BSW Module	BSW Context	
StbM	StbM/StbMGeneral	
BSW Parameter		BSW Type
StbMVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activate/Deactivate the version information API (StbM_GetVersionInfo). True: version information API activated False: version information API deactivated.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00013]	

BSW Module	BSW Context	
StbM	StbM	
BSW Parameter		BSW Type
StbMSynchronizedTimeBase		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Synchronized time.base collects the information about a specific time-base provider within the system.		
Template Description		
This represents the ability to define a global time domain.		
M2 Parameter		





SystemTemplate::GlobalTime::GlobalTimeDomain	
<b>Mapping Rule</b>	<b>Mapping Type</b>
For each GlobalTimeDomain where - the configured Ecu is connected to as slave or - the configured Ecu is connected to as master if the Ecu is not in the role of a GlobalTimeGateway for this GlobalTimeDomain an instance of StbMSynchronizedTimeBase shall be created.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00003]

<b>BSW Module</b>	<b>BSW Context</b>
StbM	StbM/StbMSynchronizedTimeBase
<b>BSW Parameter</b>	<b>BSW Type</b>
StbMAllowSystemWideGlobalTimeMaster	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
For postbuild variant of the StbM this parameter has to be set to true for a Global Time Master that may act as a system-wide source of time. Otherwise no corresponding service ports/interfaces is provided. The Global Time Master functionality behind the service ports/interfaces has to be enabled/disabled separately via parameter StbMIsSystemWideGlobalTimeMaster.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00066]

<b>BSW Module</b>	<b>BSW Context</b>
StbM	StbM/StbMSynchronizedTimeBase
<b>BSW Parameter</b>	<b>BSW Type</b>
StbMClearTimeleapCount	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This attribute describes the required number of updates to the Time Base where the time difference to the previous value has to remain below StbMTimeLeapPastThreshold/StbMTimeLeapFutureThreshold until the TIMELEAP_PAST/TIMELEAP_FUTURE bit within timeBaseStatus of the Time Base is cleared.	
<b>Template Description</b>	
Defines the required number of updates to the Time Base where the time difference to the previous received value has to remain within the bounds of timeLeapFutureThreshold and timeLeapPastThreshold until that Time Base is considered healed.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeSlave.timeLeapHealingCounter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00037]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMCyclicBackupInterval		ECUC-FLOAT-PARAM-DEF
BSW Description		
Time interval to calculate the "backup" time to be stored in NvM [unit: seconds].		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00086]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMIsSystemWideGlobalTimeMaster		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter shall be set to true for a Global Time Master that acts as a system-wide source of time information with respect to Global Time.		
It is possible that several Global Time Masters exist that have set this parameter set to true because the Global Time Masters exist once per Global Time Domain and one ECU may own several Global Time Domains on different buses it is connected to.		
Template Description		
If set to TRUE, the GlobalTimeMaster is supposed to act as the root of global time information.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeMaster.isSystemWideGlobalTimeMaster		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00036]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMLocalTimeClock		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
References the hardware reference clock of this Synchronized Time Base.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00047]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase/StbMLocalTimeClock	
BSW Parameter		BSW Type
StbMClockFrequency		ECUC-INTEGER-PARAM-DEF
BSW Description		
Represents the frequency [Hz] of the HW reference clock used by the StbM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00051]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase/StbMLocalTimeClock	
BSW Parameter		BSW Type
StbMClockPrescaler		ECUC-INTEGER-PARAM-DEF
BSW Description		
Represents the prescaler to calculate the resulting frequency of the HW reference clock used by the StbM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00052]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase/StbMLocalTimeClock	
BSW Parameter		BSW Type
StbMLocalTimeHardware		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
Reference to the local time hardware.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00053]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type





StbMNotificationCustomer	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container holds the configuration of a notification customer, which is notified is informed about the occurrence of a Time-base related event.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00050]

<b>BSW Module</b>	<b>BSW Context</b>
StbM	StbM/StbMSynchronizedTimeBase/StbMNotificationCustomer
<b>BSW Parameter</b>	<b>BSW Type</b>
StbMNotificationCustomerId	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Identification of a event notification customer.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00062]

<b>BSW Module</b>	<b>BSW Context</b>
StbM	StbM/StbMSynchronizedTimeBase/StbMNotificationCustomer
<b>BSW Parameter</b>	<b>BSW Type</b>
StbMTimeNotificationCallback	ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>	
Name of the customer specific notification callback function, which shall be called, if the time previously set by the customer is reached.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00064]

<b>BSW Module</b>	<b>BSW Context</b>
StbM	StbM/StbMSynchronizedTimeBase
<b>BSW Parameter</b>	<b>BSW Type</b>
StbMNotificationInterface	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	





The parameter defines what type of interface shall be used to notify a customer of a status event.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00068]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMSynchronizedTimeBase	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMOffsetTimeBase		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
This is the reference to the Synchronized Time-Base this Offset Time-Base is based on. This reference makes the containing StbMSynchronizedTimeBase an Offset Time-Base.		
<b>Template Description</b>		
Reference to a synchronized time domain this offset time domain is based on. The reference source is the offset time domain. The reference target is the synchronized time domain.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeDomain. <a href="#">offsetTimeDomain</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_StbM_00030]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMSynchronizedTimeBase	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMSourceTimeBase		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
This is a reference to a Time Base, which the current Time Base is cloned from. This makes the referenced Time Base the source Time Base for cloning and the current Time the destination Time Base for cloning.		
<b>Template Description</b>		
Reference to a synchronized time domain this offset time domain is based on. The reference source is the offset time domain. The reference target is the synchronized time domain.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeDomain. <a href="#">offsetTimeDomain</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_StbM_00074]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMStatusNotificationCallback		ECUC-FUNCTION-NAME-DEF
BSW Description		
Name of the customer specific status notification callback function, which shall be called, if a non-masked status event occurs.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00046]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMStatusNotificationMask		ECUC-INTEGER-PARAM-DEF
BSW Description		
The parameter defines the initial value for NotificationMask mask, which defines the events for which the event notification callback function shall be called.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00045]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMStoreTimebaseNonVolatile		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This allows for specifying that the Time Base shall be stored in the NvRam.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00031]



BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMSyncLossTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
This attribute describes the timeout for the situation that the time synchronization gets lost in the scope of the time domain. Unit: seconds		
Template Description		
This attribute describes the timeout for the situation that the time synchronization gets lost in the scope of the time domain.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeDomain.syncLossTimeout		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00028]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMSynchronizedTimeBaseIdentifier		ECUC-INTEGER-PARAM-DEF
BSW Description		
Identification of a Synchronized TimeBase via a unique identifier. Range: <ul style="list-style-type: none"> <li>• 0 .. 15: Synchronized Time Bases</li> <li>• 16 .. 31: Offset Time Bases</li> <li>• 32 .. 127: Pure Local Time Bases</li> <li>• 128 .. 65535: Reserved</li> </ul>		
Template Description		
This represents the ID of the GlobalTimeDomain used in the network messages sent on behalf of global time management.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeDomain.domainId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00021]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMTimeCorrection		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Collects the information relevant for the rate- and offset correction of a Time Base.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_StbM_00048]

BSW Module	BSW Context
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeCorrection
BSW Parameter	BSW Type
StbMAllowMasterRateCorrection	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
<p>This attribute describes whether the rate correction value of a Time Base can be set by StbM_SetRateCorrection():</p> <ul style="list-style-type: none"> <li>• false: the rate correction value can not be set by StbM_SetRateCorrection()</li> <li>• true: the rate correction value can be set by StbM_SetRateCorrection()</li> </ul>	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_StbM_00043]

BSW Module	BSW Context
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeCorrection
BSW Parameter	BSW Type
StbMMasterRateDeviationMax	ECUC-INTEGER-PARAM-DEF
BSW Description	
<p>This attribute describes the maximum allowed absolute value of the rate deviation value to be set by StbM_SetRateCorrection() [unit: ppm].</p>	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_StbM_00044]

BSW Module	BSW Context
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeCorrection
BSW Parameter	BSW Type
StbMOffsetCorrectionAdaptionInterval	ECUC-FLOAT-PARAM-DEF
BSW Description	
<p>Defines the interval during which the adaptive rate correction cancels out the rate- and time deviation [unit: seconds].</p>	
Template Description	
<p>Defines the interval during which the adaptive rate correction cancels out the rate- and time deviation.</p>	
M2 Parameter	





SystemTemplate::GlobalTime::GlobalTimeCorrectionProps.offsetCorrectionAdaptionInterval	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_StbM_00057]

BSW Module	BSW Context
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeCorrection
BSW Parameter	BSW Type
StbMOffsetCorrectionJumpThreshold	ECUC-FLOAT-PARAM-DEF
BSW Description	
Threshold for the correction method. Deviations below this value will be corrected by a linear reduction over a defined timespan. Values equal- and greater than this value will be corrected by immediately setting the correct time- and rate in form of a jump [unit: seconds].	
Template Description	
Threshold for the correction method. Deviations below this value will be corrected by a linear reduction over a defined timespan. Values equal- and greater than this value will be corrected by immediately setting the correct time- and rate in form of a jump.	
M2 Parameter	
SystemTemplate::GlobalTime::GlobalTimeCorrectionProps.offsetCorrectionJumpThreshold	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_StbM_00056]

BSW Module	BSW Context
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeCorrection
BSW Parameter	BSW Type
StbMRateCorrectionMeasurementDuration	ECUC-FLOAT-PARAM-DEF
BSW Description	
Definition of the time span [s] which is used to calculate the rate deviation.	
Template Description	
Definition of the time span which is used to calculate the rate deviation.	
M2 Parameter	
SystemTemplate::GlobalTime::GlobalTimeCorrectionProps.rateCorrectionMeasurementDuration	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_StbM_00054]

BSW Module	BSW Context
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeCorrection
BSW Parameter	BSW Type
StbMRateCorrectionsPerMeasurementDuration	ECUC-INTEGER-PARAM-DEF





<b>BSW Description</b>	
Number of simultaneous rate measurements to determine the current rate deviation.	
<b>Template Description</b>	
Defines the number of simultaneous rate measurements to determine the current rate deviation.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeCorrectionProps. <a href="#">rateCorrectionsPerMeasurementDuration</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00055]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMSynchronizedTimeBase	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMTimeLeapFutureThreshold		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
This represents the maximum allowed positive difference between a newly received Global Time Base value and the current Local Time Base value [unit: seconds].		
<b>Template Description</b>		
Defines the maximum allowed positive difference between the current Local Time Base value and a newly received Global Time Base value.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeSlave. <a href="#">timeLeapFutureThreshold</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00041]	

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMSynchronizedTimeBase	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMTimeLeapPastThreshold		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
This represents the maximum allowed negative difference between the current Local Time Base value and a newly received Global Time Base value [unit: seconds].		
<b>Template Description</b>		
Defines the maximum allowed negative difference between the current Local Time Base value and a newly received Global Time Base value.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeSlave. <a href="#">timeLeapPastThreshold</a>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00042]	

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase	
BSW Parameter		BSW Type
StbMTimeRecording		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Collects the information relevant for configuration of the precision measurement of a Time Base.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00049]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeRecording	
BSW Parameter		BSW Type
StbMOffsetTimeRecordBlockCallback		ECUC-FUNCTION-NAME-DEF
BSW Description		
Name of the customer specific callback function, which shall be called, if a measurement data for a Offset Time Base are available.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00061]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeRecording	
BSW Parameter		BSW Type
StbMOffsetTimeRecordTableBlockCount		ECUC-INTEGER-PARAM-DEF
BSW Description		
Represents the number of Blocks used for queing time measurement events for the Offset Time Base Record Table.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_StbM_00059]

BSW Module	BSW Context	
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeRecording	
BSW Parameter		BSW Type





StbMSyncTimeRecordBlockCallback	ECUC-FUNCTION-NAME-DEF
<b>BSW Description</b>	
Name of the customer specific callback function, which shall be called, if a measurement data for a Synchronized Time Base are available.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00060]

<b>BSW Module</b>	<b>BSW Context</b>
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeRecording
<b>BSW Parameter</b>	<b>BSW Type</b>
StbMSyncTimeRecordTableBlockCount	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Represents the number of Blocks used for queing time measurement events for the Synchronized Time Base Record Table.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00058]

<b>BSW Module</b>	<b>BSW Context</b>
StbM	StbM/StbMSynchronizedTimeBase
<b>BSW Parameter</b>	<b>BSW Type</b>
StbMTimeValidation	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Container with Time Validation configuration for Time Base.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00072]

<b>BSW Module</b>	<b>BSW Context</b>
StbM	StbM/StbMSynchronizedTimeBase/StbMTimeValidation
<b>BSW Parameter</b>	<b>BSW Type</b>
StbMTimeValidationRecordTableBlockCount	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	





Size of record table for Time Validation (number of blocks).	
<b>Template Description</b>	
Defines the required number of updates to the Time Base where the time difference to the previous received value has to remain within the bounds of timeLeapFutureThreshold and timeLeapPastThreshold until that Time Base is considered healed.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeSlave.timeLeapHealingCounter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00073]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMTriggeredCustomer		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
The triggered customer is directly triggered by the Synchronized Time-base Manager by getting synchronized with the current (global) definition of time and passage of time.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_StbM_00004]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMTriggeredCustomer	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMOSScheduleTableRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Mandatory reference to synchronized OS ScheduleTable, which will be explicitly synchronized by the StbM.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_StbM_00007]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMTriggeredCustomer	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMSynchronizedTimeBaseRef		ECUC-REFERENCE-DEF





<b>BSW Description</b>	
Mandatory reference to the required synchronized time-base.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_StbM_00010]

<b>BSW Module</b>	<b>BSW Context</b>	
StbM	StbM/StbMTriggeredCustomer	
<b>BSW Parameter</b>		<b>BSW Type</b>
StbMTriggeredCustomerPeriod		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
The triggering period of the triggered customer, called by the StbM_MainFunction. The period is documented in microseconds.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_StbM_00020]	

## C.8.2 CAN Time Management

<b>BSW Module</b>	<b>BSW Context</b>	
CanTSyn	CanTSyn	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTSynGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container holds the general parameters of the CAN-specific Synchronized Time-base Manager		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTSyn_-00003]	



BSW Module		BSW Context	
CanTSyn		CanTSyn/CanTSynGeneral	
BSW Parameter		BSW Type	
CanTSynDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanTSyn_-00002]	

BSW Module		BSW Context	
CanTSyn		CanTSyn/CanTSynGeneral	
BSW Parameter		BSW Type	
CanTSynEnableSecurityEventReporting		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled.			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanTSyn_-00055]	

BSW Module		BSW Context	
CanTSyn		CanTSyn/CanTSynGeneral	
BSW Parameter		BSW Type	
CanTSynHardwareTimestampSupport		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Activate/Deactivate the hardware time stamping functionality of the CAN hardware. True: Timestamp is retrieved from the CAN hardware False: Timestamp is retrieved from the StbM			
Template Description			
M2 Parameter			
Mapping Rule		Mapping Type	
		local	
Mapping Status		ECUC Parameter ID	
valid		[ECUC_CanTSyn_-00054]	

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGeneral	
BSW Parameter	BSW Type	
CanTSynMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Schedule period of the main function CanTSyn_MainFunction. Unit: [s].		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00019]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGeneral	
BSW Parameter	BSW Type	
CanTSynSecurityEventRefs	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container for the references to IdsMEvent elements representing the security events that the CanTSyn module shall report to the IdsM in case the corresponding security related event occurs (and if CanTSynEnableSecurityEventReporting is set to "true"). The standardized security events in this container can be extended by vendor-specific security events.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00056]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGeneral/CanTSynSecurityEventRefs	
BSW Parameter	BSW Type	
CANTSYN_SEV_FRESHNESS_NOT_AVAILABLE	ECUC-REFERENCE-DEF	
BSW Description		
FV not available from FVM. Context data provides the respective domain ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00059]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGeneral/CanTSynSecurityEventRefs	
BSW Parameter	BSW Type	
CANTSYN_SEV_ICV_GENERATION_FAILED	ECUC-REFERENCE-DEF	
BSW Description		
ICV generation for Follow_Up message failed. Context data provides the respective domain ID		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00057]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGeneral/CanTSynSecurityEventRefs	
BSW Parameter	BSW Type	
CANTSYN_SEV_ICV_VERIFICATION_FAILED	ECUC-REFERENCE-DEF	
BSW Description		
ICV verification for Follow_Up message failed. Context data provides the respective domain ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00058]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGeneral	
BSW Parameter	BSW Type	
CanTSynTimeValidationSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches support for Time Validation on or off. <ul style="list-style-type: none"> <li>true: Time Validation is enabled.</li> <li>false: Time Validation is disabled</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00050]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGeneral	
BSW Parameter		BSW Type
CanTSynVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activate/Deactivate the version information API (CanTSyn_GetVersionInfo). True: version information API activated False: version information API deactivated.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00023]

BSW Module	BSW Context	
CanTSyn	CanTSyn	
BSW Parameter		BSW Type
CanTSynGlobalTimeDomain		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This represents the existence of a global time domain on CAN. The CanTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains. If the CanTSyn exists it is assumed that at least one global time domain exists.		
Template Description		
This represents the ability to define a global time domain.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeDomain		
Mapping Rule		Mapping Type
The container shall exist if a GlobalTimeDomain exists that has a slave or master that refers to a CommunicationConnector that in turn is aggregated by the EcucInstance for which the ECU configuration is created.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00004]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain	
BSW Parameter		BSW Type
CanTSynEnableTimeValidation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables/disables time recording for Time Validation for a specific Time Domain.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00051]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain
BSW Parameter	BSW Type
CanTSynGlobalTimeDomainId	ECUC-INTEGER-PARAM-DEF
BSW Description	
The global time domain ID.	
Template Description	
This represents the ID of the GlobalTimeDomain used in the network messages sent on behalf of global time management.	
M2 Parameter	
SystemTemplate::GlobalTime::GlobalTimeDomain. <a href="#">domainId</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00005]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain
BSW Parameter	BSW Type
CanTSynGlobalTimeFupDataIDList	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
The DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.	
Template Description	
The DataIDList for FUP messages to calculate CRC.	
M2 Parameter	
SystemTemplate::GlobalTime::CAN::CanGlobalTimeDomainProps. <a href="#">fupDataIDList</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00025]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeFupDataIDList
BSW Parameter	BSW Type
CanTSynGlobalTimeFupDataIDListElement	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Element of the DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.	





<b>Template Description</b>	
The DataIDList for FUP messages to calculate CRC.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::CAN::CanGlobalTimeDomainProps.fupDataIDList	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Value shall be derived from element of the ordered fupDataIDList.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTSyn_-00031]

<b>BSW Module</b>	<b>BSW Context</b>
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeFupDataIDList/CanTSynGlobalTimeFupDataIDListElement
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTSynGlobalTimeFupDataIDListIndex	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Index of the DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTSyn_-00032]

<b>BSW Module</b>	<b>BSW Context</b>
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeFupDataIDList/CanTSynGlobalTimeFupDataIDListElement
<b>BSW Parameter</b>	<b>BSW Type</b>
CanTSynGlobalTimeFupDataIDListValue	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Value of the DataIDList for FUP messages ensures the identification of data elements due to CRC calculation and message authentication process.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTSyn_-00033]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain	
BSW Parameter	BSW Type	
CanTSynGlobalTimeMaster	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Configuration of a Time Master for a Time Domain (refer to parent container). If CanTSynGlobalTimeMaster container exists, the local ECU acts as a Time Master for the Time Domain.		
Template Description		
This represents the generic concept of a global time master.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeMaster		
Mapping Rule		Mapping Type
The existence of the CanTSynGlobalTimeMaster is bound to the existence of a GlobalTimeMaster that refers to a CommunicationConnector that in turn is aggregated at the EcuInstance for which the ECU configuration exists,		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_00007]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
CanTSynCyclicMsgResumeTime	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Defines the time where the 1st regular cycle time based message transmission takes place, after an immediate transmission before. Unit: seconds		
Template Description		
Defines the minimum time between an "immediate" message and the next periodic message.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeMaster.immediateResumeTime		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_00044]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
CanTSynGlobalTimeDebounceTime	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This represents the configuration of a TX debounce time for SYNC, FUP, OFS and OFNS messages compared to a message before with the same PDU. Unit: seconds		
Template Description		
Defines the minimum amount of time between two time sync messages are transmitted.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeDomain.debounceTime		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00045]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster	
BSW Parameter		BSW Type
CanTSynGlobalTimeMasterPdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container encloses the configuration of the PDU that is supposed to contain the global time information.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00009]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeMasterPdu	
BSW Parameter		BSW Type
CanTSynGlobalTimeMasterConfirmationHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This represents the handle ID of the PDU that contains the global time information.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00008]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeMasterPdu	
BSW Parameter		BSW Type
CanTSynGlobalTimePduRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		







Template Description	
This PduTriggering will be taken to transmit the global time information from a GlobalTimeMaster to a the associated Global TimeSlaves.	
M2 Parameter	
SystemTemplate::GlobalTime::GlobalTimeDomain.pduTriggering	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00027]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster	
BSW Parameter		BSW Type
CanTSynGlobalTimeTx_crcSecured		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This represents the configuration of whether or not CRC is supported.		
Template Description		
Definition of whether or not CRC is supported. This is only relevant for selected bus systems.		
M2 Parameter		
SystemTemplate::GlobalTime::CAN::GlobalTimeCanMaster.crcSecured		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_CanTSyn_-00015]	

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeTx_crcSecured	
BSW Parameter		BSW Type
CRC_NOT_SUPPORTED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This represents a configuration where CRC is not supported.		
Template Description		
This indicates that CRC is not supported		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcSupportEnum.crcNotSupported		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeTx_crc Secured	
BSW Parameter		BSW Type
CRC_SUPPORTED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This represents a configuration where CRC is supported.		
Template Description		
This indicates that CRC is supported		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcSupportEnum.crcSupported		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster	
BSW Parameter		BSW Type
CanTSynGlobalTimeTxIcvGeneration		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container collects configuration that shall be used for ICV generation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_00060]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeTxIcvGeneration	
BSW Parameter		BSW Type
CanTSynIcvGenerationBase		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Symmetric or asymmetric cryptography selection for the ICV generation		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_00062]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeTxIcv Generation	
BSW Parameter		BSW Type
CanTSynIcvGenerationFvldRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the FV taken to generate the ICV generation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00061]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeTxIcv Generation	
BSW Parameter		BSW Type
CanTSynIcvGenerationJobRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the CSM job to fetch the CSM job ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00064]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeTxIcv Generation	
BSW Parameter		BSW Type
CanTSynIcvGenerationTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout of ICV generation (respective CSM job completion in asynchronous behaviour). Unit: Seconds		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00065]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster/CanTSynGlobalTimeTxIcvGeneration	
BSW Parameter		BSW Type
CanTSynIcvTxLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of ICV to be transmitted within Follow_Up Message on the bus (in bytes).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00063]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster	
BSW Parameter		BSW Type
CanTSynGlobalTimeTxIcvSecured		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter controls whether or not ICV generation shall be supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00111]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster	
BSW Parameter		BSW Type
CanTSynGlobalTimeTxPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
This represents configuration of the TX period. Unit: seconds		
Template Description		
This represents the period. Unit: seconds		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeMaster. <a href="#">syncPeriod</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00017]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
CanTSynImmediateTimeSync	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/Disables the cyclic polling of StbM_GetTimeBaseUpdateCounter() within CanTSyn_MainFunction().		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00043]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain	
BSW Parameter	BSW Type	
CanTSynGlobalTimeNetworkSegmentId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This represents the numerical identifier of the network on system level scope where this Global Time has been communicated on.		
Template Description		
This attribute represents the numerical identifier of a PhysicalChannel on system level scope.		
M2 Parameter		
SystemTemplate::GlobalTime::NetworkSegmentIdentification. <a href="#">networkSegmentId</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00052]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain	
BSW Parameter	BSW Type	
CanTSynGlobalTimeOfnsDataIDList	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
The DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
The DataIDList for OFNS messages to calculate CRC.		
M2 Parameter		
SystemTemplate::GlobalTime::CAN::CanGlobalTimeDomainProps. <a href="#">ofnsDataIDList</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00041]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeOfnsDataIDList	
BSW Parameter	BSW Type	
CanTSynGlobalTimeOfnsDataIDListElement	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Element of the DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
The DataIDList for OFNS messages to calculate CRC.		
M2 Parameter		
SystemTemplate::GlobalTime::CAN::CanGlobalTimeDomainProps.ofnsDataIDList		
Mapping Rule		Mapping Type
Value shall be derived from element of the ordered ofnsDataIDList.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00037]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeOfnsDataIDList/CanTSynGlobalTimeOfnsDataIDListElement	
BSW Parameter	BSW Type	
CanTSynGlobalTimeOfnsDataIDListIndex	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Index of the DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00038]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeOfnsDataIDList/CanTSynGlobalTimeOfnsDataIDListElement	
BSW Parameter	BSW Type	
CanTSynGlobalTimeOfnsDataIDListValue	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Value of the DataIDList for OFNS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00039]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain
BSW Parameter	BSW Type
CanTSynGlobalTimeOfsDataIDList	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
The DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.	
Template Description	
The DataIDList for OFS messages to calculate CRC.	
M2 Parameter	
SystemTemplate::GlobalTime::CAN::CanGlobalTimeDomainProps.ofsDataIDList	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00026]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeOfsDataIDList
BSW Parameter	BSW Type
CanTSynGlobalTimeOfsDataIDListElement	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Element of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.	
Template Description	
The DataIDList for OFS messages to calculate CRC.	
M2 Parameter	
SystemTemplate::GlobalTime::CAN::CanGlobalTimeDomainProps.ofsDataIDList	
Mapping Rule	Mapping Type
Value shall be derived from element of the ordered ofsDataIDList.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00034]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeOfsDataIDList/CanTSynGlobalTimeOfsDataIDListElement
BSW Parameter	BSW Type
CanTSynGlobalTimeOfsDataIDListIndex	ECUC-INTEGER-PARAM-DEF
BSW Description	





Index of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTSyn_-00035]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeOfsDataIDList/CanTSynGlobalTimeOfsDataIDListElement	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTSynGlobalTimeOfsDataIDListValue		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Value of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTSyn_-00036]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTSynGlobalTimeSlave		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Configuration of a Time Slave for a Time Domain (refer to parent container). If CanTSynGlobalTimeSlave container exists, the local ECU acts as a Time Slave for the Time Domain.		
<b>Template Description</b>		
This represents the generic concept of a global time slave.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeSlave		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
The existence of the CanTSynGlobalTimeSlave is bound to the existence of a GlobalTimeSlave that refers to a CommunicationConnector that in turn is aggregated at the EcuInstance for which the ECU configuration exists,	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTSyn_-00012]	



BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynGlobalTimeFollowUpTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Rx timeout for the follow-up message. This is only relevant for selected bus systems Unit:seconds		
Template Description		
Rx timeout for the follow-up message.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeSlave.followUpTimeoutValue		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00006]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynGlobalTimeMinMsgGap		ECUC-FLOAT-PARAM-DEF
BSW Description		
This parameter represents the configuration of a minimum message gap time for received Timesync messages compared to a message before with the same PDU. If PDUs are received more often in between than this parameter allows, they shall be ignored. Unit: seconds		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00049]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynGlobalTimeRxDebounceTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
This represents the configuration of a RX debounce time for the Sync and FUP, OFS and OFNS. Unit: seconds		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00068]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynGlobalTimeRxIcvVerification		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container collects configuration required for ICV verification.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00076]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
CanTSynIcvRxLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of ICV to be used for verification of received ICV within FUP Message in Bytes.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00079]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
CanTSynIcvVerificationAttempts		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter specifies the number of ICV verification attempts that are to be carried out when the verification of the ICV failed for a given FUP message. If zero is set, then only one ICV verification attempt is done.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00082]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
CanTSynIcvVerificationBase		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Symmetric or asymmetric cryptography selection for the ICV generation		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00078]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
CanTSynIcvVerificationFvIdRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the FV taken to generate the ICV generation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00077]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
CanTSynIcvVerificationJobRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the CSM job to fetch the CSM job ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00080]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
CanTSynIcvVerificationTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout of ICV verification (respective CSM job completion in asynchronous behaviour). Unit: Seconds		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00081]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynGlobalTimeSequenceCounterHysteresis		ECUC-INTEGER-PARAM-DEF
BSW Description		
CanTSynGlobalTimeSequenceCounterHysteresis specifies the number of consecutive valid message pairs that are required by the Time Slave while being in Timeout state until a Time Tuple is forwarded to the StbM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00053]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynGlobalTimeSequenceCounterJumpWidth		ECUC-INTEGER-PARAM-DEF
BSW Description		
The SequenceCounterJumpWidth specifies the maximum allowed gap of the Sequence Counter between two SYNC resp. two OFS messages.		
Template Description		
Specifies the maximum allowed gap of the sequence counter between two SYNC resp. two OFS messages.		
M2 Parameter		
SystemTemplate::GlobalTime::CAN::GlobalTimeCanSlave.sequenceCounterJumpWidth		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00011]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynGlobalTimeSlavePdu		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container encloses the configuration of the PDU that is supposed to contain the global time information.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00014]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynGlobalTimeSlavePdu	
BSW Parameter		BSW Type
CanTSynGlobalTimePduRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
Template Description		
This PduTriggering will be taken to transmit the global time information from a GlobalTimeMaster to a the associated GlobalTimeSlaves.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeDomain.pduTriggering		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00040]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynGlobalTimeSlavePdu	
BSW Parameter		BSW Type
CanTSynGlobalTimeSlaveHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This represents the handle ID of the PDU that contains the global time information.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00013]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynRx_crcValidated		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Definition of whether or not validation of the CRC is supported.		
Template Description		
Definition of whether or not validation of the CRC is supported.		
M2 Parameter		
SystemTemplate::GlobalTime::CAN::GlobalTimeCanSlave.crcValidated		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00021]

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynRx_crcValidated	
BSW Parameter		BSW Type
CRC_IGNORED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The Timesync module accepts Time Synchronization messages, which are CRC secured (without actually validating the CRC) and those, which are not CRC secured. That means, the Timesync module ignores the CRC.		
Template Description		
The CRC is supposed to be ignored		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcIgnored		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynRx_crcValidated	
BSW Parameter		BSW Type
CRC_NOT_VALIDATED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The Timesync module accepts only Time Synchronization messages, which are not CRC secured. All other Time Synchronization messages are ignored.		
Template Description		
The CRC is not supposed to be present. If CRC is present the message is ignored.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcNotValidated		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynRxCrcValidated	
BSW Parameter		BSW Type
CRC_OPTIONAL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The Timesync module accepts only Time Synchronization messages which are not CRC secured and Time Synchronization messages which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.		
Template Description		
Either the CRC is present and then shall be validated or the CRC is not present and no CRC check is done.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcOptional		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave/CanTSynRxCrcValidated	
BSW Parameter		BSW Type
CRC_VALIDATED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The Timesync module accepts only Time Synchronization messages, which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.		
Template Description		
This CRC is supposed to be validated.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcValidated		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSlave	
BSW Parameter		BSW Type
CanTSynRxlcvVerificationType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter controls whether or not ICV verification shall be supported.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00075]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain
BSW Parameter	BSW Type
CanTSynGlobalTimeSyncDataIDList	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
The DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.	
Template Description	
The DataIDList for SYNC messages to calculate CRC.	
M2 Parameter	
SystemTemplate::GlobalTime::CAN::CanGlobalTimeDomainProps. <a href="#">syncDataIDList</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00024]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSyncDataIDList
BSW Parameter	BSW Type
CanTSynGlobalTimeSyncDataIDListElement	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Element of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.	
Template Description	
The DataIDList for SYNC messages to calculate CRC.	
M2 Parameter	
SystemTemplate::GlobalTime::CAN::CanGlobalTimeDomainProps. <a href="#">syncDataIDList</a>	
Mapping Rule	Mapping Type
Value shall be derived from element of the ordered syncDataIDList.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_CanTSyn_-00028]

BSW Module	BSW Context
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSyncDataIDList/CanTSynGlobalTimeSyncDataIDListElement
BSW Parameter	BSW Type
CanTSynGlobalTimeSyncDataIDListIndex	ECUC-INTEGER-PARAM-DEF







<b>BSW Description</b>	
Index for the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_CanTSyn_-00029]

<b>BSW Module</b>	<b>BSW Context</b>	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain/CanTSynGlobalTimeSyncDataIDList/CanTSynGlobalTimeSyncDataIDListElement	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTSynGlobalTimeSyncDataIDListValue		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Value of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTSyn_-00030]	

<b>BSW Module</b>	<b>BSW Context</b>	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain	
<b>BSW Parameter</b>		<b>BSW Type</b>
CanTSynSynchronizedTimeBaseRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Mandatory reference to the required synchronized time-base.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_CanTSyn_-00022]	

BSW Module	BSW Context	
CanTSyn	CanTSyn/CanTSynGlobalTimeDomain	
BSW Parameter		BSW Type
CanTSynUseExtendedMsgFormat		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches support for 16 Byte Timesync messages on or off (for CAN FD only) <ul style="list-style-type: none"> <li>• true: CAN FD support is active: use at least 16 byte for Timesync messages (depending on configuration)</li> <li>• false: Classic CAN support is active: use always 8 byte for Timesync messages</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_CanTSyn_-00042]

### C.8.3 Ethernet Time Management

BSW Module	BSW Context	
EthTSyn	EthTSyn	
BSW Parameter		BSW Type
EthTSynGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container holds the general parameters of the Ethernet-specific Synchronized Time-base Manager		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00003]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral	
BSW Parameter		BSW Type
EthTSynDestPhyAddr		ECUC-STRING-PARAM-DEF
BSW Description		
Destination Physical Address (MAC-Address). Destination Physical Hardware Address (MAC-Address) of EthTSyn-gPTP Frames. Input format has to match xx:xx:xx:xx:xx:xx, where x stands for a hex value between 0 and F.		
Template Description		
Defines the MAC multicast address the Ethernet time sync messages are communicated on.		





<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::ETH::EthGlobalTimeDomainProps.destinationPhysicalAddress	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00058]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthTSyn_-00002]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynEnableSecurityEventReporting		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthTSyn_-00089]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynEthIfFrameType		ECUC-REFERENCE-DEF





<b>BSW Description</b>	
The chosen frame owner determines which frames (in respect to ethertype) are received.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00062]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynGlobalTimeRxToUplinkSwitchResidenceTime		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
This parameter is specifying the default value used for the residence time of the Ethernet Switch [Ingress to Uplink]. This value is used by the EthTSyn if the calculation of the residence time failed. Unit: seconds		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00060]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGeneral	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynGlobalTimeUplinkToTxSwitchResidenceTime		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
This parameter is specifying the default value used for the residence time of the Ethernet Switch [Uplink to Egress]. This value is used by the EthTSyn if the calculation of the residence time failed. Unit: seconds		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00061]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral	
BSW Parameter		BSW Type
EthTSynHardwareTimestampSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activate/Deactivate the hardware time stamping functionality of the Ethernet hardware. True: Timestamp is retrieved from the Ethernet hardware False: Timestamp is retrieved from the StbM		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00018]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral	
BSW Parameter		BSW Type
EthTSynMainFunctionPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
Schedule period of the main function EthTSyn_MainFunction. Unit: seconds.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00012]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral	
BSW Parameter		BSW Type
EthTSynMasterSlaveConflictDetection		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Enables master / slave conflict detection and notification. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00075]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral	
BSW Parameter	BSW Type	
EthTSynMessageCompliance	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
<ul style="list-style-type: none"> <li>• true: IEEE 802.1AS compliant message format will be used.</li> <li>• false: IEEE 802.1AS message format with AUTOSAR extension will be used.</li> </ul>		
Template Description		
Defines the compliance of the Ethernet time sync messages to specific standards.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthGlobalTimeDomainProps.messageCompliance		
Mapping Rule		Mapping Type
If EthGlobalTimeDomainProps.messageFormat = IEEE802_1AS then EthTSynMessageCompliance shall be true. If EthGlobalTimeDomainProps.messageFormat = IEEE802_1AS_AUTOSAR then EthTSynMessageCompliance shall be false.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_00029]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral	
BSW Parameter	BSW Type	
EthTSynSecurityEventRefs	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container for the references to IdsMEvent elements representing the security events that the EthTSyn module shall report to the IdsM in case the corresponding security related event occurs (and if EthTSynEnableSecurityEventReportings set to "true"). The standardized security events in this container can be extended by vendor-specific security events.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_00090]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral/EthTSynSecurityEventRefs	
BSW Parameter	BSW Type	
ETHTSYN_SEV_FRESHNESS_NOT_AVAILABLE	ECUC-REFERENCE-DEF	
BSW Description		
FV not available from FVM. Context data provides the respective domain ID.		
Template Description		
M2 Parameter		





Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00093]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGeneral/EthTSynSecurityEventRefs
BSW Parameter	BSW Type
ETHTSYN_SEV_ICV_GENERATION_FAILED	ECUC-REFERENCE-DEF
BSW Description	
ICV generation for Follow_Up message failed. Context data provides the respective domain ID	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00091]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGeneral/EthTSynSecurityEventRefs
BSW Parameter	BSW Type
ETHTSYN_SEV_ICV_VERIFICATION_FAILED	ECUC-REFERENCE-DEF
BSW Description	
ICV verification for Follow_Up message failed. Context data provides the respective domain ID.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00092]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGeneral
BSW Parameter	BSW Type
EthTSynSwitchMgmtRxMessageBufferCount	ECUC-INTEGER-PARAM-DEF
BSW Description	
This parameter is used to determine the amount of Rx message buffers available in the EthTSyn when EthTSyn is used in a Bridge configuration.	
Template Description	
M2 Parameter	





Mapping Rule	Mapping Type
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00059]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral	
BSW Parameter		BSW Type
EthTSynTimeValidationSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches support for time validation on or off. <ul style="list-style-type: none"> <li>• true: time validation is enabled.</li> <li>• false: time validation is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthTSyn_-00081]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGeneral	
BSW Parameter		BSW Type
EthTSynVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activate/Deactivate the version information API (EthTSyn_GetVersionInfo). True: version information API activated False: version information API deactivated.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthTSyn_-00015]	

BSW Module	BSW Context	
EthTSyn	EthTSyn	
BSW Parameter		BSW Type
EthTSynGlobalTimeDomain		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		







<p>This represents the existence of a global time domain on Ethernet. The EthTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains.</p> <p>If the EthTSyn exists it is assumed that at least one global time domain exists.</p>	
<b>Template Description</b>	
This represents the ability to define a global time domain.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeDomain	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The container shall exist if a GlobalTimeDomain exists that has a slave or master that refers to a CommunicationConnector that in turn is aggregated by the EcucInstance for which the ECU configuration is created.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00004]

<b>BSW Module</b>	<b>BSW Context</b>
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTSynFramePrio	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This optional parameter, if present, indicates the priority of outgoing EthTSyn messages, if sent via VLAN (used for the 3-bit PCP field of the VLAN tag). If this optional parameter is not present, frames are sent without a priority and VLAN field.	
<b>Template Description</b>	
Defines which VLAN priority shall be assigned to a time sync message in case the message is sent using a VLAN tag.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::ETH::EthGlobalTimeDomainProps.vlanPriority	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00034]

<b>BSW Module</b>	<b>BSW Context</b>
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTSynGlobalTimeDebounceTime	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This represents the configuration of a TX debounce time for Sync, Follow_Up, and pDelay messages compared to a message before with the same PDU. Unit: seconds	
<b>Template Description</b>	
Defines the minimum amount of time between two time sync messages are transmitted.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeDomain.debounceTime	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00048]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain	
BSW Parameter	BSW Type	
EthTSynGlobalTimeDomainId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The global time domain ID.		
Template Description		
This represents the ID of the GlobalTimeDomain used in the network messages sent on behalf of global time management.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeDomain.domainId		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthTSyn_-00005]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain	
BSW Parameter	BSW Type	
EthTSynGlobalTimeEthIfRef	ECUC-REFERENCE-DEF	
BSW Description		
This represents the reference to the Ethernet interface taken to fetch the global time information.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthTSyn_-00065]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain	
BSW Parameter	BSW Type	
EthTSynGlobalTimeFollowUpDataIDList	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
The DataIDList for Follow_Up message ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
The DataIDList for FUP messages to calculate CRC.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthGlobalTimeDomainProps.fupDataIDList		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthTSyn_-00030]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynGlobalTimeFollowUpDataIDList	
BSW Parameter		BSW Type
EthTSynGlobalTimeFollowUpDataIDListElement		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Element of the DataIDList for Follow_Up message ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
The DataIDList for FUP messages to calculate CRC.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthGlobalTimeDomainProps.fupDataIDList		
Mapping Rule		Mapping Type
Value shall be derived from element of the ordered fupDataIDList.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00031]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynGlobalTimeFollowUpDataIDList/EthTSynGlobalTimeFollowUpDataIDListElement	
BSW Parameter		BSW Type
EthTSynGlobalTimeFollowUpDataIDListIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
Index of the DataIDList for Follow_Up message ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00032]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynGlobalTimeFollowUpDataIDList/EthTSynGlobalTimeFollowUpDataIDListElement	
BSW Parameter		BSW Type
EthTSynGlobalTimeFollowUpDataIDListValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Value of the DataIDList for Follow_Up message ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local





Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00033]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain
BSW Parameter	BSW Type
EthTSynGlobalTimeRxDebounceTime	ECUC-FLOAT-PARAM-DEF
BSW Description	
This represents the configuration of a RX debounce time for Sync and Follow_Up. Unit: seconds	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00094]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain
BSW Parameter	BSW Type
EthTSynPortConfig	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Configuration of the EthTSyn-Ports within the TimeDomain.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00063]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig
BSW Parameter	BSW Type
EthTSynEnableTimeValidation	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Enables/disables time recording for time validation for a specific Time Domain.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local





Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00082]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig
BSW Parameter	BSW Type
EthTSynGlobalTimeMinMsgGap	ECUC-FLOAT-PARAM-DEF
BSW Description	
<p>This parameter represents the configuration of a minimum message gap time for received Timesync messages compared to a message before with the same PDU. If PDUs are received more often in between than this parameter allows, they shall be ignored.</p> <p>Unit: seconds</p>	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00078]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig
BSW Parameter	BSW Type
EthTSynPdelayConfig	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
<p>Configuration of cyclic propagation delay measurement.</p>	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00068]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig/EthTSynPdelayConfig
BSW Parameter	BSW Type
EthTSynGlobalTimePdelayRespEnable	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
<p>This parameter allows disabling Pdelay_Resp / Pdelay_Resp_Follow_Up transmission, if no Pdelay_Req messages are expected.</p> <p>FALSE: No Pdelay requests expected. Pdelay_Resp / Pdelay_Resp_Follow_Up transmission is disabled.</p> <p>TRUE: Pdelay requests expected. Pdelay_Resp / Pdelay_Resp_Follow_Up transmission is enabled.</p>	





Template Description	
Defines whether PDELAY RESPONSE and PDELAY RESPONSE FOLLOW UP shall be sent on this CouplingPort.	
M2 Parameter	
SystemTemplate::GlobalTime::ETH::EthGlobalTimeManagedCouplingPort.pdelayResponseEnabled	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_00069]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig/EthTSynPdelayConfig	
BSW Parameter		BSW Type
EthTSynGlobalTimePropagationDelay		ECUC-FLOAT-PARAM-DEF
BSW Description		
<p>If cyclic propagation delay measurement is enabled, this parameter represents the default value of the propagation delay until the first actually measured propagation delay is available.</p> <p>If cyclic propagation delay measurement is disabled, this parameter replaces a measured propagation delay by a fixed value.</p> <p>Unit: seconds</p>		
Template Description		
<p>If cyclic propagation delay measurement is enabled, this parameter represents the default value of the propagation delay until the first actually measured propagation delay is available. If cyclic propagation delay measurement is disabled, this parameter defines a fixed value for the propagation delay.</p>		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::GlobalTimeCouplingPortProps.propagationDelay		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_EthTSyn_00070]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig/EthTSynPdelayConfig	
BSW Parameter		BSW Type
EthTSynGlobalTimeTxPdelayReqPeriod		ECUC-FLOAT-PARAM-DEF
BSW Description		
<p>This represents configuration of the TX period for Pdelay_Req messages.</p> <p>A value of 0 disables the cyclic Pdelay measurement.</p> <p>Unit: seconds</p>		
Template Description		
Defines the period for the pdelay request messages.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthGlobalTimeManagedCouplingPort.pdelayRequestPeriod		
Mapping Rule	Mapping Type	
1:1 mapping	full	





Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00071]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig/EthTSynPdelayConfig
BSW Parameter	BSW Type
EthTSynPdelayLatencyThreshold	ECUC-FLOAT-PARAM-DEF
BSW Description	
Threshold for calculated Pdelay. If a measured Pdelay exceeds EthTSynPdelayLatencyThreshold, this value is discarded. Unit: seconds	
Template Description	
Threshold for calculated Pdelay. If a measured Pdelay exceeds pdelayLatencyThreshold, the measured Pdelay value is discarded.	
M2 Parameter	
SystemTemplate::GlobalTime::ETH::EthGlobalTimeManagedCouplingPort.pdelayLatencyThreshold	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00076]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig/EthTSynPdelayConfig
BSW Parameter	BSW Type
EthTSynPdelayRespAndRespFollowUpTimeout	ECUC-FLOAT-PARAM-DEF
BSW Description	
Timeout value for Pdelay_Resp and Pdelay_Resp_Follow_Up after a Pdelay_Req has been transmitted resp. a Pdelay_Resp has been received. A value of 0 deactivates this timeout observation. Unit: seconds	
Template Description	
Timeout value for Pdelay_Resp and Pdelay_Resp_Follow_Up after a Pdelay_Req has been transmitted resp. a Pdelay_Resp has been received. A value of 0 or not defining this attribute deactivates this timeout observation.	
M2 Parameter	
SystemTemplate::GlobalTime::ETH::EthGlobalTimeManagedCouplingPort.pdelayRespAndRespFollowUpTimeout	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EthTSyn_-00074]

BSW Module	BSW Context
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortConfig
BSW Parameter	BSW Type





EthTSynSwitchManagementEthSwitchPortRef	ECUC-REFERENCE-DEF
<b>BSW Description</b>	
In an AVB-Bridge config, this reference is used to assign the EthTSyn-Port to an Ethernet Switch-Port.	
<b>Template Description</b>	
Defines which CouplingPort is managed by this EthGlobalTimeManagedCouplingPort.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::ETH::EthGlobalTimeManagedCouplingPort.couplingPort	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If the referenced CouplingPort is aggregated by a CouplingElement with couplingType = switch then the reference EthTSynSwitchManagementEthSwitchPortRef shall be defined and refer to the EthSwtPort which was derived from the CouplingPort.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00066]

<b>BSW Module</b>	<b>BSW Context</b>
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTSynPortRole	ECUC-CHOICE-CONTAINER-DEF
<b>BSW Description</b>	
Specifying the Role of the EthTSyn-Port (Master or Slave).	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	
<b>Mapping Type</b>	
<b>Mapping Status</b>	
<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00067]

<b>BSW Module</b>	<b>BSW Context</b>
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTSynGlobalTimeMaster	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Configuration of a (global) time master. Each time domain is required to have exactly one global time master, but may have multiple ports acting as time (sub-) master (see Time Gateway) to relay global time from the global time master to the time slaves. The global time master may or may not exist on the configured ECU. The exact role of the port is derived implicitly.	
<b>Template Description</b>	
This represents the generic concept of a global time master.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeMaster	
<b>Mapping Rule</b>	<b>Mapping Type</b>
The existence of a EthTSynGlobalTimeMaster is bound to the existence of a GlobalTimeMaster that refers to a CommunicationConnector that in turn is aggregated at the EcuInstance for which the ECU configuration exists.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00008]



BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter		BSW Type
EthTSynCrcTimeFlagsTxSecured		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container collects definitions which parts of the Follow_Up message elements shall be used for CRC calculation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00057]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynCrcTimeFlagsTxSecured	
BSW Parameter		BSW Type
EthTSynCrcCorrectionField		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
correctionField from the Follow_Up Message Header shall be included in CRC calculation.		
Template Description		
CorrectionField from the Follow_Up Message Header shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcCorrectionField		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00042]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynCrcTimeFlagsTxSecured	
BSW Parameter		BSW Type
EthTSynCrcDomainNumber		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
domainNumber from the Follow_Up Message Header shall be included in CRC calculation.		
Template Description		
DomainNumber from the Follow_Up Message Header shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcDomainNumber		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00041]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynCrcTimeFlagsTxSecured	
BSW Parameter		BSW Type
EthTSynCrcMessageLength		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
messageLength from the Follow_Up Message Header shall be included in CRC calculation.		
Template Description		
MessageLength from the Follow_Up Message Header shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcMessageLength		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00040]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynCrcTimeFlagsTxSecured	
BSW Parameter		BSW Type
EthTSynCrcPreciseOriginTimestamp		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
preciseOriginTimestamp from the Follow_Up Message Field shall be included in CRC calculation.		
Template Description		
PreciseOriginTimestamp from the Follow_Up Message Field shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcPreciseOriginTimestamp		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00045]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynCrcTimeFlagsTxSecured	
BSW Parameter		BSW Type
EthTSynCrcSequenceld		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
sequenceld from the Follow_Up Message Header shall be included in CRC calculation.		
Template Description		
Sequenceld from the Follow_Up Message Header shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcSequenceId		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00044]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynCrcTimeFlagsTxSecured	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynCrcSourcePortIdentity		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
sourcePortIdentity from the Follow_Up Message Header shall be included in CRC calculation.		
<b>Template Description</b>		
SourcePortIdentity from the Follow_Up Message Header shall be included in CRC calculation.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcSourcePortIdentity		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthTSyn_-00043]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynCyclicMsgResumeTime		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		
Defines the time where the 1st regular cycle time based message transmission takes place, after an immediate transmission before. Unit: seconds		
<b>Template Description</b>		
Defines the minimum time between an "immediate" message and the next periodic message.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeMaster.immediateResumeTime		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthTSyn_-00047]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynGlobalTimeTxCrcSecured		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		





This represents the configuration of whether or not CRC is supported.	
<b>Template Description</b>	
Definition of whether or not CRC is supported. This is only relevant for selected bus systems.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::ETH::GlobalTimeEthMaster.crcSecured	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_00039]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynGlobalTimeTx_crcSecured	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRC_NOT_SUPPORTED		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
This represents a configuration where CRC is not supported.		
<b>Template Description</b>		
This indicates that CRC is not supported		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeCrcSupportEnum.crcNotSupported		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynGlobalTimeTx_crcSecured	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRC_SUPPORTED		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
This represents a configuration where CRC is supported.		
<b>Template Description</b>		
This indicates that CRC is supported		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeCrcSupportEnum.crcSupported		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
EthTSynGlobalTimeTxIcvGeneration	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container collects configuration that shall be used for ICV generation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00096]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynGlobalTimeTxIcvGeneration	
BSW Parameter	BSW Type	
EthTSynIcvGenerationBase	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Symmetric or asymmetric cryptography selection for the ICV generation		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00098]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynGlobalTimeTxIcvGeneration	
BSW Parameter	BSW Type	
EthTSynIcvGenerationFvIdRef	ECUC-REFERENCE-DEF	
BSW Description		
This represents the reference to the FV taken to generate the ICV generation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00097]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynGlobalTimeTxIcvGeneration	
BSW Parameter		BSW Type
EthTSynIcvGenerationJobRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the CSM job to fetch the CSM job ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00100]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynGlobalTimeTxIcvGeneration	
BSW Parameter		BSW Type
EthTSynIcvGenerationTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout of ICV generation (respective CSM job completion in asynchronous behaviour). Unit: Seconds		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00101]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster/EthTSynGlobalTimeTxIcvGeneration	
BSW Parameter		BSW Type
EthTSynIcvTxLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of ICV to be transmitted within Follow_Up Message on the bus (in bytes).		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00099]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
EthTSynGlobalTimeTxPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This represents configuration of the TX period. Unit: seconds		
Template Description		
This represents the period. Unit: seconds		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeMaster.syncPeriod		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_ - 00010]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
EthTSynImmediateTimeSync	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/Disables the cyclic polling of StbM_GetTimeBaseUpdateCounter() within EthTSyn_MainFunction().		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_ - 00046]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
EthTSynTLVFollowUpICVSubTLV	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
This represents the configuration of whether an AUTOSAR Follow_Up TLV ICV Sub-TLV is used or not. - true: This represents a configuration where an AUTOSAR Follow_Up TLV ICV Sub-TLV is used. - false: This represents a configuration where an AUTOSAR Follow_Up TLV ICV Sub-TLV is not used.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_ - 00095]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
EthSynTxSubTLVOFS	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Definition of whether (true) or not (false) a Sub-TLV:OFS Secured or Sub-TLV:OFS Not Secured shall be sent in the AUTOSAR TLV of a Follow_Up message.		
Template Description		
Defines whether an AUTOSAR Follow_Up TLV OFS Sub-TLV is used.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynSubTlvConfig.ofsSubTlv		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00038]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
EthSynTxSubTLVStatus	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Definition of whether (true) or not (false) a Sub-TLV:Status Secured or Sub-TLV:Status Not Secured shall be sent in the AUTOSAR TLV of a Follow_Up message.		
Template Description		
Defines whether an AUTOSAR Follow_Up TLV Status Sub-TLV is used.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynSubTlvConfig.statusSubTlv		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00036]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
EthSynTxSubTLVTime	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Definition of whether (true) or not (false) a Sub-TLV:Time Secured shall be sent in the AUTOSAR TLV of a Follow_Up message.		
Template Description		
Defines whether an AUTOSAR Follow_Up TLV Time Sub-TLV is used.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynSubTlvConfig.timeSubTlv		
Mapping Rule		Mapping Type







1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00035]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeMaster	
BSW Parameter		BSW Type
EthTSynTxSubTLVUserData		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Definition of whether (true) or not (false) a Sub-TLV:UserData Secured or Sub-TLV:UserData Not Secured shall be sent in the AUTOSAR TLV of a Follow_Up message.		
Template Description		
Defines whether an AUTOSAR Follow_Up TLV UserData Sub-TLV is used.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynSubTlvConfig.userDataSubTlv		
Mapping Rule		Mapping Type
1:1 mapping		full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00037]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole	
BSW Parameter		BSW Type
EthTSynGlobalTimeSlave		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configuration of a time slave. Each global time domain is required to have at least one time slave. The configured ECU may or may not represent a time slave.		
Template Description		
This represents the generic concept of a global time slave.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeSlave		
Mapping Rule		Mapping Type
The existence of the EthTSynGlobalTimeSlave is bound to the existence of a GlobalTimeSlave that refers to a CommunicationConnector that in turn is aggregated at the EcuInstance for which the ECU configuration exists,		full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00009]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynCrcFlagsRxValidated		ECUC-PARAM-CONF-CONTAINER-DEF





<b>BSW Description</b>	
This container collects definitions which parts of the Follow_Up message elements shall be included in CRC validation.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00050]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynCrcFlagsRxValidated	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynCrcCorrectionField		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
correctionField from the Follow_Up Message Header shall be included in CRC calculation.		
<b>Template Description</b>		
CorrectionField from the Follow_Up Message Header shall be included in CRC calculation.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcCorrectionField		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthTSyn_-00053]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynCrcFlagsRxValidated	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynCrcDomainNumber		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
domainNumber from the Follow_Up Message Header shall be included in CRC calculation.		
<b>Template Description</b>		
DomainNumber from the Follow_Up Message Header shall be included in CRC calculation.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcDomainNumber		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_EthTSyn_-00052]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynCrcFlagsRxValidated	
BSW Parameter		BSW Type
EthTSynCrcMessageLength		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
messageLength from the Follow_Up Message Header shall be included in CRC calculation.		
Template Description		
MessageLength from the Follow_Up Message Header shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcMessageLength		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00051]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynCrcFlagsRxValidated	
BSW Parameter		BSW Type
EthTSynCrcPreciseOriginTimestamp		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
preciseOriginTimestamp from the Follow_Up Message Field shall be included in CRC calculation.		
Template Description		
PreciseOriginTimestamp from the Follow_Up Message Field shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcPreciseOriginTimestamp		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00056]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynCrcFlagsRxValidated	
BSW Parameter		BSW Type
EthTSynCrcSequenceld		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
sequenceld from the Follow_Up Message Header shall be included in CRC calculation.		
Template Description		
Sequenceld from the Follow_Up Message Header shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcSequenceId		
Mapping Rule		Mapping Type





1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00055]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynCrcFlagsRxValidated	
BSW Parameter		BSW Type
EthTSynCrcSourcePortIdentity		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
sourcePortIdentity from the Follow_Up Message Header shall be included in CRC calculation.		
Template Description		
SourcePortIdentity from the Follow_Up Message Header shall be included in CRC calculation.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::EthTSynCrcFlags.crcSourcePortIdentity		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00054]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynGlobalTimeFollowUpTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout value of the Follow_Up message (of the subsequent Sync message). A value of 0 deactivates this timeout observation. Unit: seconds		
Template Description		
Rx timeout for the follow-up message.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeSlave.followUpTimeoutValue		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00007]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynGlobalTimeRxIcvVerification		ECUC-PARAM-CONF-CONTAINER-DEF





<b>BSW Description</b>	
This container collects configuration that shall be used for ICV verification.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00104]

<b>BSW Module</b>	<b>BSW Context</b>
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynGlobalTimeRxIcvVerification
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTSynIcvRxLength	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
Length of ICV to be transmitted within Follow_Up Message on the bus (in bytes).	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00107]

<b>BSW Module</b>	<b>BSW Context</b>
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynGlobalTimeRxIcvVerification
<b>BSW Parameter</b>	<b>BSW Type</b>
EthTSynIcvVerificationAttempts	ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>	
This parameter specifies the number of ICV verification attempts that are to be carried out when the verification of the ICV failed for a given secured Follow_Up message. If zero is set, then only one ICV verification attempt is done.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00110]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
EthTSynIcvVerificationBase		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Symmetric or asymmetric cryptography selection for the ICV generation		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00106]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
EthTSynIcvVerificationFvIdRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the FV taken to verify the ICV.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00105]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
EthTSynIcvVerificationJobRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the CSM job to fetch the CSM job ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00108]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
EthTSynIcvVerificationTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout of ICV generation (respective CSM job completion in asynchronous behaviour). Unit: Seconds		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00109]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynGlobalTimeSequenceCounterHysteresis		ECUC-INTEGER-PARAM-DEF
BSW Description		
EthTSynGlobalTimeSequenceCounterHysteresis specifies the number of consecutive valid message pairs that are required by the Time Slave while being in Timeout state until a Time Tuple is forwarded to the StbM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00084]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynGlobalTimeSequenceCounterJumpWidth		ECUC-INTEGER-PARAM-DEF
BSW Description		
The SequenceCounterJumpWidth specifies the maximum allowed jump of the Sequence Counter between two consecutive Sync messages.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_-00083]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynRxCrcValidated		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Definition of whether or not validation of the CRC takes place.		
Template Description		
Definition of whether or not validation of the CRC is supported.		
M2 Parameter		
SystemTemplate::GlobalTime::ETH::GlobalTimeEthSlave.crcValidated		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EthTSyn_00049]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynRxCrcValidated	
BSW Parameter		BSW Type
CRC_IGNORED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
EthTSyn ignores any CRC inside the Sub-TLVs.		
Template Description		
The CRC is supposed to be ignored		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcIgnored		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynRxCrcValidated	
BSW Parameter		BSW Type
CRC_NOT_VALIDATED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
If EthTSynMessageCompliance is set to FALSE: EthTSyn discards Follow_Up messages with Sub-TLVs of Type 0x28, 0x44, 0x50 or 0x60.		
Template Description		
The CRC is not supposed to be present. If CRC is present the message is ignored.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcNotValidated		
Mapping Rule		Mapping Type
1:1 mapping		full







Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynRxCrc Validated	
BSW Parameter		BSW Type
CRC_OPTIONAL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
If EthTSynMessageCompliance is set to FALSE: EthTSyn discards Follow_Up messages with Sub-TLVs of Type 0x28, 0x44, 0x50 or 0x60, that contain an incorrect CRC value.		
Template Description		
Either the CRC is present and then shall be validated or the CRC is not present and no CRC check is done.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcOptional		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave/EthTSynRxCrc Validated	
BSW Parameter		BSW Type
CRC_VALIDATED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
If EthTSynMessageCompliance is set to FALSE: EthTSyn discards Follow_Up messages with Sub-TLVs of Type 0x28, 0x44, 0x50 or 0x60, that contain an incorrect CRC value. EthTSyn rejects Follow_Up messages with Sub-TLVs of Type 0x34, 0x51 or 0x61.		
Template Description		
This CRC is supposed to be validated.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcValidated		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynRxlcvVerificationType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter controls whether or not ICV verification shall be supported.		
Template Description		





M2 Parameter	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00103]

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynRxSubTLVOFS		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Definition of whether or not a Sub-TLV:OFS Secured or Sub-TLV:OFS Not Secured shall be present and shall be evaluated when processing a received Follow_Up message.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00088]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynRxSubTLVStatus		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Definition of whether or not a Sub-TLV:Status Secured or Sub-TLV:Status Not Secured shall be present and shall be evaluated when processing a received Follow_Up message.		
Template Description		
M2 Parameter		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00086]	

BSW Module	BSW Context	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
BSW Parameter		BSW Type
EthTSynRxSubTLVTime		ECUC-BOOLEAN-PARAM-DEF
BSW Description		





Definition of whether or not a Sub-TLV:Time Secured shall be present and shall be evaluated when processing a received Follow_Up message	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_EthTSyn_-00085]

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain/EthTSynPortRole/EthTSynGlobalTimeSlave	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynRxSubTLVUserData		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Definition of whether or not a Sub-TLV:UserData Secured or Sub-TLV:UserData Not Secured shall be present and shall be evaluated when processing a received Follow_Up message		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00087]	

<b>BSW Module</b>	<b>BSW Context</b>	
EthTSyn	EthTSyn/EthTSynGlobalTimeDomain	
<b>BSW Parameter</b>		<b>BSW Type</b>
EthTSynSynchronizedTimeBaseRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
Mandatory reference to the required synchronized time-base.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_EthTSyn_-00013]	

## C.8.4 Flexray Time Management

BSW Module	BSW Context	
FrTSyn	FrTSyn	
BSW Parameter		BSW Type
FrTSynGeneral		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container holds the general parameters of the Flexray-specific Synchronized Time-base Manager		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00003]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGeneral	
BSW Parameter		BSW Type
FrTSynDevErrorDetect		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>• true: detection and notification is enabled.</li> <li>• false: detection and notification is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00002]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGeneral	
BSW Parameter		BSW Type
FrTSynEnableSecurityEventReporting		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switches the reporting of security events to the ldsM: - true: reporting is enabled. - false: reporting is disabled.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00044]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGeneral	
BSW Parameter	BSW Type	
FrTSynMainFunctionPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
Schedule period of the main function FrTSyn_MainFunction. Unit: [s].		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00016]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGeneral	
BSW Parameter	BSW Type	
FrTSynSecurityEventRefs	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container for the references to IdsMEvent elements representing the security events that the FrTSyn module shall report to the IdsM in case the corresponding security related event occurs (and if FrTSynEnableSecurityEventReporting is set to true). The standardized security events in this container can be extended by vendor-specific security events.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00063]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGeneral/FrTSynSecurityEventRefs	
BSW Parameter	BSW Type	
FRTSYN_SEV_FRESHNESS_NOT_AVAILABLE	ECUC-REFERENCE-DEF	
BSW Description		
FV not available from FVM. Context data provides the respective domain ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00047]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGeneral/FrTSynSecurityEventRefs	
BSW Parameter	BSW Type	
FRTSYN_SEV_ICV_GENERATION_FAILED	ECUC-REFERENCE-DEF	
BSW Description		
ICV generation for SYNC message failed. Context data provides the respective domain ID		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00045]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGeneral/FrTSynSecurityEventRefs	
BSW Parameter	BSW Type	
FRTSYN_SEV_ICV_VERIFICATION_FAILED	ECUC-REFERENCE-DEF	
BSW Description		
ICV verification for SYNC message failed. Context data provides the respective domain ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00046]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGeneral	
BSW Parameter	BSW Type	
FrTSynTimeValidationSupport	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Switches support for Time Validation on or off. <ul style="list-style-type: none"> <li>• true: Time Validation is enabled.</li> <li>• false: Time Validation is disabled.</li> </ul>		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00040]

BSW Module		BSW Context	
FrTSyn		FrTSyn/FrTSynGeneral	
BSW Parameter		BSW Type	
FrTSynVersionInfoApi		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Activate/Deactivate the version information API (FrTSyn_GetVersionInfo). True: version information API activated False: version information API deactivated.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type
			local
Mapping Status			ECUC Parameter ID
valid			[ECUC_FrTSyn_-00019]

BSW Module		BSW Context	
FrTSyn		FrTSyn	
BSW Parameter		BSW Type	
FrTSynGlobalTimeDomain		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This represents the existence of a global time domain on Flexray. The FrTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains. If the FrTSyn exists it is assumed that at least one global time domain exists.			
Template Description			
This represents the ability to define a global time domain.			
M2 Parameter			
SystemTemplate::GlobalTime::GlobalTimeDomain			
Mapping Rule			Mapping Type
The container shall exist if a GlobalTimeDomain exists that has a slave or master that refers to a CommunicationConnector that in turn is aggregated by the EcuInstance for which the ECU configuration is created.			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_FrTSyn_-00004]

BSW Module		BSW Context	
FrTSyn		FrTSyn/FrTSynGlobalTimeDomain	
BSW Parameter		BSW Type	
FrTSynEnableTimeValidation		ECUC-BOOLEAN-PARAM-DEF	
BSW Description			
Enables/disables time recording for Time Validation for a specific Time Domain.			
Template Description			
M2 Parameter			
Mapping Rule			Mapping Type





Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTSyn_-00041]

BSW Module	BSW Context
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain
BSW Parameter	BSW Type
FrTSynGlobalTimeDomainId	ECUC-INTEGER-PARAM-DEF
BSW Description	
The global time domain ID.	
Template Description	
This represents the ID of the GlobalTimeDomain used in the network messages sent on behalf of global time management.	
M2 Parameter	
SystemTemplate::GlobalTime::GlobalTimeDomain. <a href="#">domainId</a>	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTSyn_-00005]

BSW Module	BSW Context
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain
BSW Parameter	BSW Type
FrTSynGlobalTimeMaster	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Configuration of the global time master. Each global time domain is required to have exactly one global time master. This master may or may not exist on the configured ECU.	
Template Description	
This represents the generic concept of a global time master.	
M2 Parameter	
SystemTemplate::GlobalTime:: <a href="#">GlobalTimeMaster</a>	
Mapping Rule	Mapping Type
The existence of the FrTSynGlobalTimeMaster is bound to the existence of a GlobalTimeMaster that refers to a CommunicationConnector that in turn is aggregated at the EcuInstance for which the ECU configuration exists,	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTSyn_-00006]

BSW Module	BSW Context
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster
BSW Parameter	BSW Type
FrTSynCyclicMsgResumeTime	ECUC-FLOAT-PARAM-DEF
BSW Description	







Defines the time where the 1st regular cycle time based message transmission takes place, after an immediate transmission before. Unit: seconds	
<b>Template Description</b>	
Defines the minimum time between an "immediate" message and the next periodic message.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeMaster.immediateResumeTime	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrTSyn_-00032]

<b>BSW Module</b>	<b>BSW Context</b>
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster
<b>BSW Parameter</b>	<b>BSW Type</b>
FrTSynGlobalTimeDebounceTime	ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>	
This represents the configuration of a TX debounce time for SYNC and OFS messages compared to a message before with the same PDU. Unit: seconds	
<b>Template Description</b>	
Defines the minimum amount of time between two time sync messages are transmitted.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeDomain.debounceTime	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrTSyn_-00033]

<b>BSW Module</b>	<b>BSW Context</b>
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster
<b>BSW Parameter</b>	<b>BSW Type</b>
FrTSynGlobalTimeMasterPdu	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
This container carries all properties required to configure the PDU sent by the global time master for the given global time domain.	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrTSyn_-00008]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeMasterPdu	
BSW Parameter		BSW Type
FrTSynGlobalTimeMasterHandleId		ECUC-INTEGER-PARAM-DEF
BSW Description		
This represents the handle ID of the PDU that contains the global time information.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00007]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeMasterPdu	
BSW Parameter		BSW Type
FrTSynGlobalTimePduRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
Template Description		
This PduTriggering will be taken to transmit the global time information from a GlobalTimeMaster to a the associated GlobalTimeSlaves.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeDomain.pduTriggering		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00020]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster	
BSW Parameter		BSW Type
FrTSynGlobalTimeTx_crcSecured		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This represents the configuration of whether or not CRC is supported.		
Template Description		
Definition of whether or not CRC is supported. This is only relevant for selected bus systems.		
M2 Parameter		
SystemTemplate::GlobalTime::FR::GlobalTimeFrMaster.crcSecured		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00013]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeTx_crcSecured	
BSW Parameter		BSW Type
CRC_NOT_SUPPORTED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This represents a configuration where CRC is not supported.		
Template Description		
This indicates that CRC is not supported		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcSupportEnum.crcNotSupported		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeTx_crcSecured	
BSW Parameter		BSW Type
CRC_SUPPORTED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This represents a configuration where CRC is supported.		
Template Description		
This indicates that CRC is supported		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeCrcSupportEnum.crcSupported		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster	
BSW Parameter		BSW Type
FrTSynGlobalTimeTxIcvGeneration		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container collects configuration that shall be used for ICV generation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00049]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeTxIcvGeneration	
BSW Parameter	BSW Type	
FrTSynIcvGenerationBase	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Symmetric or asymmetric cryptography selection for the ICV generation		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00051]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeTxIcvGeneration	
BSW Parameter	BSW Type	
FrTSynIcvGenerationFvIdRef	ECUC-REFERENCE-DEF	
BSW Description		
This represents the reference to the FV taken to generate the ICV generation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00050]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeTxIcvGeneration	
BSW Parameter	BSW Type	
FrTSynIcvGenerationJobRef	ECUC-REFERENCE-DEF	
BSW Description		
This represents the reference to the CSM job to fetch the CSM job ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00053]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeTxIcvGeneration	
BSW Parameter		BSW Type
FrTSynIcvGenerationTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout of ICV generation (respective CSM job completion in asynchronous behaviour). Unit: Seconds		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00054]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster/FrTSynGlobalTimeTxIcvGeneration	
BSW Parameter		BSW Type
FrTSynIcvTxLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of ICV to be transmitted within Sync Message on the bus.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00052]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster	
BSW Parameter		BSW Type
FrTSynGlobalTimeTxIcvSecured		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter controls whether or not ICV generation shall be supported.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00048]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
FrTSynGlobalTimeTxPeriod	ECUC-FLOAT-PARAM-DEF	
BSW Description		
This represents the TX period. Unit: seconds		
Template Description		
This represents the period. Unit: seconds		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeMaster. <a href="#">syncPeriod</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00014]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeMaster	
BSW Parameter	BSW Type	
FrTSynImmediateTimeSync	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Enables/Disables the cyclic polling of StbM_GetTimeBaseUpdateCounter() within FrTSyn_MainFunction().		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00031]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain	
BSW Parameter	BSW Type	
FrTSynGlobalTimeNetworkSegmentId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
This represents the numerical identifier of the network on system level scope where this Global Time has been communicated on.		
Template Description		
This attribute represents the numerical identifier of a PhysicalChannel on system level scope.		
M2 Parameter		
SystemTemplate::GlobalTime::NetworkSegmentIdentification. <a href="#">networkSegmentId</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00042]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain	
BSW Parameter		BSW Type
FrTSynGlobalTimeOfsDataIDList		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
The DataIDList for OFS messages to calculate CRC.		
M2 Parameter		
SystemTemplate::GlobalTime::FR::FrGlobalTimeDomainProps.ofsDataIDList		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00024]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeOfsDataIDList	
BSW Parameter		BSW Type
FrTSynGlobalTimeOfsDataIDListElement		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Element of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
The DataIDList for OFS messages to calculate CRC.		
M2 Parameter		
SystemTemplate::GlobalTime::FR::FrGlobalTimeDomainProps.ofsDataIDList		
Mapping Rule		Mapping Type
Value shall be derived from element of the ordered ofsDataIDList.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00028]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeOfsDataIDList/FrTSynGlobalTimeOfsDataIDListElement	
BSW Parameter		BSW Type
FrTSynGlobalTimeOfsDataIDListIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
Index of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type





	local
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrTSyn_-00029]

<b>BSW Module</b>	<b>BSW Context</b>	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeOfsDataIDList/FrTSynGlobalTimeOfsDataIDListElement	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTSynGlobalTimeOfsDataIDListValue		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Value of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
		local
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrTSyn_-00030]

<b>BSW Module</b>	<b>BSW Context</b>	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTSynGlobalTimeSlave		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This represents the time slave for the enclosing global time domain.		
<b>Template Description</b>		
This represents the generic concept of a global time slave.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::GlobalTimeSlave		
<b>Mapping Rule</b>		<b>Mapping Type</b>
The existence of the FrTSynGlobalTimeSlave is bound to the existence of a GlobalTimeSlave that refers to a CommunicationConnector that in turn is aggregated at the EcuInstance for which the ECU configuration exists,		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_FrTSyn_-00010]

<b>BSW Module</b>	<b>BSW Context</b>	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTSynGlobalTimeMinMsgGap		ECUC-FLOAT-PARAM-DEF
<b>BSW Description</b>		







<p>This parameter represents the configuration of a minimum message gap time for received SYNC and OFS messages compared to a message before with the same PDU. If PDUs are received more often in between than this parameter allows, they shall be ignored.</p> <p>Unit: seconds</p>	
<b>Template Description</b>	
<b>M2 Parameter</b>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_FrTSyn_-00038]

<b>BSW Module</b>	<b>BSW Context</b>	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTSynGlobalTimeRxlcvVerification		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
This container collects configuration required for ICV verification.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrTSyn_-00056]	

<b>BSW Module</b>	<b>BSW Context</b>	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynGlobalTimeRxlcvVerification	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTSynlcvRxLength		ECUC-INTEGER-PARAM-DEF
<b>BSW Description</b>		
Length of ICV to be used for verification of received ICV within Sync Message.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrTSyn_-00059]	

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
FrTSynIcvVerificationAttempts		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter specifies the number of ICV verification attempts that are to be carried out when the verification of the ICV failed for a given secured SYNC message. If zero is set, then only one ICV verification attempt is done.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00062]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
FrTSynIcvVerificationBase		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Symmetric or asymmetric cryptography selection for the ICV verification.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00058]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
FrTSynIcvVerificationFvIdRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the FV taken to generate the ICV generation.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00057]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
FrTSynIcvVerificationJobRef		ECUC-REFERENCE-DEF
BSW Description		
This represents the reference to the CSM job to fetch the CSM job ID.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00060]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynGlobalTimeRxIcvVerification	
BSW Parameter		BSW Type
FrTSynIcvVerificationTimeout		ECUC-FLOAT-PARAM-DEF
BSW Description		
Timeout of ICV verification (respective CSM job completion in asynchronous behaviour). Unit: Seconds		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00061]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave	
BSW Parameter		BSW Type
FrTSynGlobalTimeSequenceCounterHysteresis		ECUC-INTEGER-PARAM-DEF
BSW Description		
FrTSynGlobalTimeSequenceCounterHysteresis specifies the number of consecutive valid SYNC (or OFS) messages that are required by the Time Slave while being in Timeout state until a Time Tuple is forwarded to the StbM.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00043]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave	
BSW Parameter	BSW Type	
FrTSynGlobalTimeSequenceCounterJumpWidth	ECUC-INTEGER-PARAM-DEF	
BSW Description		
The SequenceCounterJumpWidth specifies the maximum allowed gap of the Sequence Counter between two SYNC resp. two OFS messages.		
Template Description		
Specifies the maximum allowed gap of the sequence counter between two SYNC resp. two OFS messages.		
M2 Parameter		
SystemTemplate::GlobalTime::FR::GlobalTimeFrSlave.sequenceCounterJumpWidth		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00022]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave	
BSW Parameter	BSW Type	
FrTSynGlobalTimeSlavePdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container carries all properties required to configure the PDU received by the time slave for the given global time domain.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00012]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynGlobalTimeSlavePdu	
BSW Parameter	BSW Type	
FrTSynGlobalTimePduRef	ECUC-REFERENCE-DEF	
BSW Description		
This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
Template Description		
This PduTriggering will be taken to transmit the global time information from a GlobalTimeMaster to a the associated GlobalTimeSlaves.		
M2 Parameter		
SystemTemplate::GlobalTime::GlobalTimeDomain.pduTriggering		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTSyn_-00021]

BSW Module	BSW Context
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynGlobalTimeSlavePdu
BSW Parameter	BSW Type
FrTSynGlobalTimeSlaveHandleId	ECUC-INTEGER-PARAM-DEF
BSW Description	
This represents the handle ID of the PDU that contains the global time information.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTSyn_-00011]

BSW Module	BSW Context
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave
BSW Parameter	BSW Type
FrTSynRxCrcValidated	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
This parameter controls whether or not CRC validation shall be supported.	
Template Description	
Definition of whether or not validation of the CRC is supported.	
M2 Parameter	
SystemTemplate::GlobalTime::FR::GlobalTimeFrSlave.crcValidated	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTSyn_-00017]

BSW Module	BSW Context
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynRxCrcValidated
BSW Parameter	BSW Type
CRC_IGNORED	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The Timesync module accepts Time Synchronization messages, which are CRC secured (without actually validating the CRC) and those, which are not CRC secured. That means, the Timesync module ignores the CRC.	
Template Description	
The CRC is supposed to be ignored	





<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcIgnored	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynRxCrcValidated
<b>BSW Parameter</b>	<b>BSW Type</b>
CRC_NOT_VALIDATED	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
The Timesync module accepts only Time Synchronization messages, which are not CRC secured. All other Time Synchronization messages are ignored.	
<b>Template Description</b>	
The CRC is not supposed to be present. If CRC is present the message is ignored.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcNotValidated	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynRxCrcValidated
<b>BSW Parameter</b>	<b>BSW Type</b>
CRC_OPTIONAL	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
The Timesync module accepts only Time Synchronization messages which are not CRC secured and Time Synchronization messages which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.	
<b>Template Description</b>	
Either the CRC is present and then shall be validated or the CRC is not present and no CRC check is done.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcOptional	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave/FrTSynRxCrcValidated
<b>BSW Parameter</b>	<b>BSW Type</b>
CRC_VALIDATED	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	





The Timesync module accepts only Time Synchronization messages, which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.	
<b>Template Description</b>	
This CRC is supposed to be validated.	
<b>M2 Parameter</b>	
SystemTemplate::GlobalTime::GlobalTimeCrcValidationEnum.crcValidated	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSlave	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTSynRxlcvVerificationType		ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>		
This parameter controls whether or not ICV verification shall be supported.		
<b>Template Description</b>		
<b>M2 Parameter</b>		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
	local	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrTSyn_-00055]	

<b>BSW Module</b>	<b>BSW Context</b>	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain	
<b>BSW Parameter</b>		<b>BSW Type</b>
FrTSynGlobalTimeSyncDataIDList		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
The DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
<b>Template Description</b>		
The DataIDList for SYNC messages to calculate CRC.		
<b>M2 Parameter</b>		
SystemTemplate::GlobalTime::FR::FrGlobalTimeDomainProps.syncDataIDList		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_FrTSyn_-00023]	

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSyncDataIDList	
BSW Parameter	BSW Type	
FrTSynGlobalTimeSyncDataIDListElement	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Element of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
The DataIDList for SYNC messages to calculate CRC.		
M2 Parameter		
SystemTemplate::GlobalTime::FR::FrGlobalTimeDomainProps.syncDataIDList		
Mapping Rule		Mapping Type
Value shall be derived from element of the ordered syncDataIDList.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00025]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSyncDataIDList/FrTSynGlobalTimeSyncDataIDListElement	
BSW Parameter	BSW Type	
FrTSynGlobalTimeSyncDataIDListIndex	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Index of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local
Mapping Status		ECUC Parameter ID
valid		[ECUC_FrTSyn_-00026]

BSW Module	BSW Context	
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain/FrTSynGlobalTimeSyncDataIDList/FrTSynGlobalTimeSyncDataIDListElement	
BSW Parameter	BSW Type	
FrTSynGlobalTimeSyncDataIDListValue	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Value of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Template Description		
M2 Parameter		
Mapping Rule		Mapping Type
		local







Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTSyn_-00027]

BSW Module	BSW Context
FrTSyn	FrTSyn/FrTSynGlobalTimeDomain
BSW Parameter	BSW Type
FrTSynSynchronizedTimeBaseRef	ECUC-REFERENCE-DEF
BSW Description	
Mandatory reference to the required synchronized time-base.	
Template Description	
M2 Parameter	
Mapping Rule	Mapping Type
	local
Mapping Status	ECUC Parameter ID
valid	[ECUC_FrTSyn_-00018]

## C.9 Crypto Stack

### C.9.1 CryptoDriver

BSW Module	BSW Context
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
BSW Parameter	BSW Type
CRYPTO_ALGOFAM_3DES	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Template Description	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
M2 Parameter	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
Mapping Rule	Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
BSW Parameter	BSW Type
CRYPTO_ALGOFAM_AES	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_AES	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_BLAKE_1_256	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_BLAKE_1_512	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_BLAKE_2s_256	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_BLAKE_2s_512	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_BRAINPOOL	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BRAINPOOL	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_CHACHA	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Custom algorithm specified		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_ECCNIST		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_ECCNIST		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_ED25519		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_ED25519	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If algorithmFamily is not defined.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_RNG		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_RNG	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_RSA		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_RSA		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_224		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_256		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_384		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_512		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_512_224	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_512_256	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA3_224	ECUC-ENUMERATION-LITERAL-DEF







<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA3_256		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA3_384		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA3_512		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SHAKE128	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SHAKE256	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SIPHASH	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SIPHASH	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_12ROUNDS	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_12ROUNDS	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_20ROUNDS	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_20ROUNDS	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_8ROUNDS	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_8ROUNDS	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_CBC	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_CBC	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_CFB	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_CFB	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_CMAC	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_CMAC	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOMODE_CTR		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_CTR		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOMODE_CTRDRBG		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_CTRDRBG		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOMODE_ECB		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_ECB	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_GCM	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_CGM	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_GMAC	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_GMAC	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_HMAC	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_HMAC	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_NOT_SET	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode is not set	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_OFB	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_OFB	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_PXXXR	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_RSAES_PKCS1_v1_5	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_RSAES_OAEP	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_RSAES_OAEP	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_RSAES_PKCS1_v1_5	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_RSAES_PKCS1_v1_5	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_RSASSA_PKCS1_v1_5	ECUC-ENUMERATION-LITERAL-DEF







<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_RSASSA_PKCS1_v1_5	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_RSASSA_PSS	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_RSASSA_PSS	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_SIPHASH_2_4	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_2_4	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_SIPHASH_4_8	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_4_8	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmMode
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOMODE_XTS	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_XTS	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_3DES	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_3DES	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_AES	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_AES	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_BLAKE_1_256		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_BLAKE_1_512		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_BLAKE_2s_256		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_BLAKE_2s_512	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_BRAINPOOL	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_BRAINPOOL	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_CHACHA	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
Custom algorithm specified		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_ECCNIST		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_ECCNIST		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_ED25519		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_ED25519	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If algorithmFamily is not defined.		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_RNG		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_RNG	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_RSA		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_RSA		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_224		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_256		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_384		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_512		ECUC-ENUMERATION-LITERAL-DEF







<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_512_224	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA2_512_256	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA3_224	ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA3_256		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA3_384		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHA3_512		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHAKE128		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SHAKE256		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
<b>Mapping Rule</b>		<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Crypto	Crypto/CryptoPrimitives/CryptoPrimitive/CryptoPrimitiveAlgorithmSecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_SIPHASH		ECUC-ENUMERATION-LITERAL-DEF





<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_SIPHASH	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

## C.9.2 Crypto Service Manager

<b>BSW Module</b>	<b>BSW Context</b>	
Csm	Csm/CsmJobs	
<b>BSW Parameter</b>		<b>BSW Type</b>
CsmJob		ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>		
Container for configuration of CSM job. The container name serves as a symbolic name for the identifier of a job configuration.		
<b>Template Description</b>		
This meta-class has the ability to represent a crypto service mapping for the Pdu-based communication via SecOC.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication:: <a href="#">SecOcCryptoServiceMapping</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Csm_00118]

<b>BSW Module</b>	<b>BSW Context</b>	
Csm	Csm/CsmJobs/CsmJob	
<b>BSW Parameter</b>		<b>BSW Type</b>
CsmJobKeyRef		ECUC-REFERENCE-DEF
<b>BSW Description</b>		
This parameter refers to the key which shall be used for the CsmPrimitive. It's possible to use a CsmKey for different jobs		
<b>Template Description</b>		
This meta-class has the ability to represent a crypto key.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication:: <a href="#">CryptoServiceKey</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Csm_00126]

BSW Module	BSW Context	
Csm	Csm/CsmJobs/CsmJob	
BSW Parameter		BSW Type
CsmJobPrimitiveRef		ECUC-REFERENCE-DEF
BSW Description		
This parameter refers to the used CsmPrimitive. Different jobs may refer to one CsmPrimitive. The referred CsmPrimitive provides detailed information on the actual cryptographic routine.		
Template Description		
This reference identifies the applicable crypto primitive for the authentication.		
M2 Parameter		
SystemTemplate::SecureCommunication::SecOcCryptoServiceMapping.authentication		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00122]

BSW Module	BSW Context	
Csm	Csm/CsmJobs/CsmJob	
BSW Parameter		BSW Type
CsmJobQueueRef		ECUC-REFERENCE-DEF
BSW Description		
This parameter refers to the queue. The queue is used if the underlying crypto driver object is busy. The queue refers also to the channel which is used.		
Template Description		
This meta-class has the ability to represent a crypto queue.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServiceQueue		
Mapping Rule		Mapping Type
If the SecOcCryptoServiceMapping this CsmJob is derived from has a reference cryptoService Queue defined then the CsmJobQueueRef shall refer to the respective CsmQueue.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00125]

BSW Module	BSW Context	
Csm	Csm/CsmKeys	
BSW Parameter		BSW Type
CsmKey		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Container for configuration of a CSM key. The container name serves as a symbolic name for the identifier of a key configuration.		
Template Description		
This meta-class has the ability to represent a crypto key.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServiceKey		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Csm_00014]

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_3DES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_AES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_AES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CHACHA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		





Mapping Rule	Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_12ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_12ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_20ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		





<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmMode == CRYPTO_ALGOMODE_20ROUNDS	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm Mode	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOMODE_8ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
if algorithmMode == CRYPTO_ALGOMODE_8ROUNDS	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm Mode	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOMODE_GCM		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		
<b>Template Description</b>		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
<b>M2 Parameter</b>		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
if algorithmMode == CRYPTO_ALGOMODE_CGM	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid		

<b>BSW Module</b>	<b>BSW Context</b>	
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithm SecondaryFamily	
<b>BSW Parameter</b>		<b>BSW Type</b>
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>		







<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Custom algorithm specified	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Csm	Csm/CsmPrimitives/CsmAEADDecrypt/CsmAEADDecryptConfig/CsmAEADDecryptAlgorithmSecondaryFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_NOT_SET	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
If algorithmFamily is not defined.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_3DES	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_3DES	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithmFamily
<b>BSW Parameter</b>	<b>BSW Type</b>





CRYPTO_ALGOFAM_AES	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_AES	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithm Family
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_CHACHA	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

<b>BSW Module</b>	<b>BSW Context</b>
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithm Family
<b>BSW Parameter</b>	<b>BSW Type</b>
CRYPTO_ALGOFAM_CUSTOM	ECUC-ENUMERATION-LITERAL-DEF
<b>BSW Description</b>	
<b>Template Description</b>	
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.	
<b>M2 Parameter</b>	
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Custom algorithm specified	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_12ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_12ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_20ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_20ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_8ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_8ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_GCM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CGM		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithm SecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmAEADEncrypt/CsmAEADEncryptConfig/CsmAEADEncryptAlgorithm SecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_3DES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_AES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_AES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CHACHA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RSA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RSA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_12ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_12ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_20ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_20ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_8ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_8ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CBC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CBC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CFB		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CFB		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CTR		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CTR		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_ECB		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_ECB		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_OFB		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_OFB		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_RSAES_OAEP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_RSAES_OAEP		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_RSAES_PKCS1_v1_5		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_RSAES_PKCS1_v1_5		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_XTS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_XTS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE128		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmDecrypt/CsmDecryptConfig/CsmDecryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_3DES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_AES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_AES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CHACHA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RSA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RSA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_12ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_12ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_20ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_20ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_8ROUNDS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_8ROUNDS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CBC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CBC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CFB		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CFB		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CTR		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CTR		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_ECB		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_ECB		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_OFB		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_OFB		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_RSAES_OAEP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_RSAES_OAEP		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_RSAES_PKCS1_v1_5		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_RSAES_PKCS1_v1_5		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_XTS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_XTS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE128	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmEncrypt/CsmEncryptConfig/CsmEncryptAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CUSTOM	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE128	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_NOT_SET	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmHash/CsmHashConfig/CsmHashAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CTRDRBG		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CTRDRBG		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_GMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_GMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_HMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_HMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_SIPHASH_2_4		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_2_4		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_SIPHASH_4_8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_4_8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm SecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithm SecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE128		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyDerive/CsmJobKeyDeriveConfig/CsmJobKeyDeriveAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcPubVal/CsmJobKeyExchangeCalcPubValConfig/CsmJobKeyExchangeCalcPubValAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcPubVal/CsmJobKeyExchangeCalcPubValConfig/CsmJobKeyExchangeCalcPubValAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RSA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RSA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcPubVal/CsmJobKeyExchangeCalcPubValConfig/CsmJobKeyExchangeCalcPubValAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcPubVal/CsmJobKeyExchangeCalcPubValConfig/CsmJobKeyExchangeCalcPubValAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcPubVal/CsmJobKeyExchangeCalcPubValConfig/CsmJobKeyExchangeCalcPubValAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_ECCNIST		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_ECCNIST		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcPubVal/CsmJobKeyExchangeCalcPubValConfig/CsmJobKeyExchangeCalcPubValAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcSecret/CsmJobKeyExchangeCalcSecretConfig/CsmJobKeyExchangeCalcSecretAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcSecret/CsmJobKeyExchangeCalcSecretConfig/CsmJobKeyExchangeCalcSecretAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RSA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RSA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcSecret/CsmJobKeyExchangeCalcSecretConfig/CsmJobKeyExchangeCalcSecretAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcSecret/CsmJobKeyExchangeCalcSecretConfig/CsmJobKeyExchangeCalcSecretAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcSecret/CsmJobKeyExchangeCalcSecretConfig/CsmJobKeyExchangeCalcSecretAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_ECCNIST		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_ECCNIST		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyExchangeCalcSecret/CsmJobKeyExchangeCalcSecretConfig/CsmJobKeyExchangeCalcSecretAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyGenerate/CsmJobKeyGenerateConfig/CsmJobKeyGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyGenerate/CsmJobKeyGenerateConfig/CsmJobKeyGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_ECCNIST		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_ECCNIST		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyGenerate/CsmJobKeyGenerateConfig/CsmJobKeyGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_ED25519		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_ED25519		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyGenerate/CsmJobKeyGenerateConfig/CsmJobKeyGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyGenerate/CsmJobKeyGenerateConfig/CsmJobKeyGenerateAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeyGenerate/CsmJobKeyGenerateConfig/CsmJobKeyGenerateAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetInvalid/CsmJobKeySetInvalidConfig/CsmJobKeySetInvalidAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetInvalid/CsmJobKeySetInvalidConfig/CsmJobKeySetInvalidAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetInvalid/CsmJobKeySetInvalidConfig/CsmJobKeySetInvalidAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetInvalid/CsmJobKeySetInvalidConfig/CsmJobKeySetInvalidAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetInvalid/CsmJobKeySetInvalidConfig/CsmJobKeySetInvalidAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetValid/CsmJobKeySetValidConfig/CsmJobKeySetValidAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetValid/CsmJobKeySetValidConfig/CsmJobKeySetValidAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetValid/CsmJobKeySetValidConfig/CsmJobKeySetValidAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetValid/CsmJobKeySetValidConfig/CsmJobKeySetValidAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobKeySetValid/CsmJobKeySetValidConfig/CsmJobKeySetValidAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_3DES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_AES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_AES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CHACHA	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CUSTOM	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_RIPEMD160	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_RNG	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RNG		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA1	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE128	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CTRDRBG		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CTRDRBG		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_GMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_GMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_HMAC	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description	This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
M2 Parameter	SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
Mapping Rule	Mapping Type	
if algorithmMode == CRYPTO_ALGOMODE_HMAC	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_NOT_SET	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description	This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
M2 Parameter	SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
Mapping Rule	Mapping Type	
if algorithmMode is not set	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_SIPHASH_2_4	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description	This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.	
M2 Parameter	SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode	
Mapping Rule	Mapping Type	
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_2_4	full	
Mapping Status	ECUC Parameter ID	
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_SIPHASH_4_8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_4_8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_3DES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_AES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_AES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CHACHA	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CUSTOM	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE128		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmJobRandomSeed/CsmJobRandomSeedConfig/CsmJobRandomSeedAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig	
BSW Parameter	BSW Type	
CsmMacGenerateAlgorithmFamily	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Determines the algorithm family used for the crypto service. This parameter defines the most significant part of the algorithm.		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00188]

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_3DES	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_AES	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_AES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CHACHA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RNG		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RNG		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE128		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SIPHASH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SIPHASH		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig	
BSW Parameter		BSW Type
CsmMacGenerateAlgorithmKeyLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Size of the MAC key in bytes		
Template Description		
This attribute describes the length of the cryptographic key in bits.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServiceKey.length		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00044]

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig	
BSW Parameter		BSW Type
CsmMacGenerateAlgorithmMode		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Determines the algorithm mode used for the crypto service		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00189]

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CTRDRBG		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CTRDRBG		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_GMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_GMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module		BSW Context	
Csm		Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmMode	
BSW Parameter		BSW Type	
CRYPTO_ALGOMODE_HMAC		ECUC-ENUMERATION-LITERAL-DEF	
BSW Description			
Template Description			
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.			
M2 Parameter			
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode			
Mapping Rule			Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_HMAC			full
Mapping Status			ECUC Parameter ID
valid			

BSW Module		BSW Context	
Csm		Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmMode	
BSW Parameter		BSW Type	
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF	
BSW Description			
Template Description			
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.			
M2 Parameter			
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode			
Mapping Rule			Mapping Type
if algorithmMode is not set			full
Mapping Status			ECUC Parameter ID
valid			

BSW Module		BSW Context	
Csm		Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmMode	
BSW Parameter		BSW Type	
CRYPTO_ALGOMODE_SIPHASH_2_4		ECUC-ENUMERATION-LITERAL-DEF	
BSW Description			
Template Description			
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.			
M2 Parameter			
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode			
Mapping Rule			Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_2_4			full
Mapping Status			ECUC Parameter ID
valid			

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_SIPHASH_4_8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_4_8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig	
BSW Parameter		BSW Type
CsmMacGenerateAlgorithmSecondaryFamily		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Determines the secondary algorithm family used for the crypto service		
Template Description		
This attribute represents a further description of the secondary family of crypto algorithm implemented by the crypto primitive. The secondary family is needed for the specification of the hash algorithm for a signature check, e.g. using RSA.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmSecondaryFamily</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00134]

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacGenerate/CsmMacGenerateConfig/CsmMacGenerateAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig	
BSW Parameter		BSW Type
CsmMacVerifyAlgorithmFamily		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Determines the algorithm family used for the crypto service. This parameter defines the most significant part of the algorithm.		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00051]

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_3DES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_AES	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_AES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CHACHA	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RNG		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RNG		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE128	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SIPHASH	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SIPHASH		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig	
BSW Parameter	BSW Type	
CsmMacVerifyAlgorithmKeyLength	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Size of the MAC key in bytes		
Template Description		
This attribute describes the length of the cryptographic key in bits.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServiceKey. <a href="#">length</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00193]

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig	
BSW Parameter	BSW Type	
CsmMacVerifyAlgorithmMode	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
Determines the algorithm mode used for the crypto service		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00195]

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_CTRDRBG		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CTRDRBG		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_GMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_GMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_HMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_HMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_SIPHASH_2_4		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_2_4		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_SIPHASH_4_8	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmMode</a>		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_4_8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmSecondary Family	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CUSTOM	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmMacVerify/CsmMacVerifyConfig/CsmMacVerifyAlgorithmSecondary Family	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_NOT_SET	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive. <a href="#">algorithmFamily</a>		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_3DES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_3DES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_AES		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_AES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CHACHA	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_CHACHA	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CUSTOM	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
Custom algorithm specified	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_RIPEMD160	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_RNG	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RNG		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA1	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module		BSW Context	
Csm		Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter		BSW Type	
CRYPTO_ALGOFAM_SHA2_512_224		ECUC-ENUMERATION-LITERAL-DEF	
BSW Description			
Template Description			
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.			
M2 Parameter			
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily			
Mapping Rule			Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224			full
Mapping Status			ECUC Parameter ID
valid			

BSW Module		BSW Context	
Csm		Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter		BSW Type	
CRYPTO_ALGOFAM_SHA2_512_256		ECUC-ENUMERATION-LITERAL-DEF	
BSW Description			
Template Description			
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.			
M2 Parameter			
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily			
Mapping Rule			Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256			full
Mapping Status			ECUC Parameter ID
valid			

BSW Module		BSW Context	
Csm		Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter		BSW Type	
CRYPTO_ALGOFAM_SHA3_224		ECUC-ENUMERATION-LITERAL-DEF	
BSW Description			
Template Description			
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.			
M2 Parameter			
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily			
Mapping Rule			Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224			full
Mapping Status			ECUC Parameter ID
valid			

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE128	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_CTRDRBG	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_CTRDRBG		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_GMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_GMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_HMAC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_HMAC		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_SIPHASH_2_4		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_2_4		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_SIPHASH_4_8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_SIPHASH_4_8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmRandomGenerate/CsmRandomGenerateConfig/CsmRandomGenerateAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BRAINPOOL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BRAINPOOL		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_ECCNIST		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_ECCNIST		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_ED25519		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_ED25519		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RSA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RSA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_NOT_SET	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule	Mapping Type	
if algorithmMode is not set	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_RSASSA_PKCS1_v1_5	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule	Mapping Type	
if algorithmMode == CRYPTO_ALGOMODE_RSASSA_PKCS1_v1_5	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmMode	
BSW Parameter	BSW Type	
CRYPTO_ALGOMODE_RSASSA_PSS	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule	Mapping Type	
if algorithmMode == CRYPTO_ALGOMODE_RSASSA_PSS	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_1_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BLAKE_2s_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_CUSTOM	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
Custom algorithm specified	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_NOT_SET	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule	Mapping Type	
If algorithmFamily is not defined.	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_RIPEMD160	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA1	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA2_512_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_512	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE128	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureGenerate/CsmSignatureGenerateConfig/CsmSignatureGenerateAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHAKE256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_BRAINPOOL	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BRAINPOOL		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_ECCNIST		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_ECCNIST		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithm Family	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_ED25519		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_ED25519		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RSA		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RSA		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode is not set		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmMode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_RSASSA_PKCS1_v1_5		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_RSASSA_PKCS1_v1_5		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithm Mode	
BSW Parameter		BSW Type
CRYPTO_ALGOMODE_RSASSA_PSS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the mode of the crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmMode		
Mapping Rule		Mapping Type
if algorithmMode == CRYPTO_ALGOMODE_RSASSA_PSS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithm SecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithm SecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_1_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_1s_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_BLAKE_2s_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_BLAKE_2s_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_CUSTOM		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
Custom algorithm specified		full
Mapping Status		ECUC Parameter ID
valid		



BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_NOT_SET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily is not defined.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_RIPEMD160		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_RIPEMD160		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_384		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_224		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
If algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA2_512_256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA2_512_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_224	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_224		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_256	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter	BSW Type	
CRYPTO_ALGOFAM_SHA3_384	ECUC-ENUMERATION-LITERAL-DEF	
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_384		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHA3_512		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHA3_512		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE128		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE128		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmPrimitives/CsmSignatureVerify/CsmSignatureVerifyConfig/CsmSignatureVerifyAlgorithmSecondaryFamily	
BSW Parameter		BSW Type
CRYPTO_ALGOFAM_SHAKE256		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute represents a description of the family (e.g. AES) of crypto algorithm implemented by the crypto primitive.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServicePrimitive.algorithmFamily		
Mapping Rule		Mapping Type
if algorithmFamily == CRYPTO_ALGOFAM_SHAKE256		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Csm	Csm/CsmQueues	
BSW Parameter	BSW Type	
CsmQueue	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Container for configuration of a CSM queue. A queue has two tasks: 1. queue jobs which cannot be processed since the underlying hardware is busy and 2. refer to channel which shall be used		
Template Description		
This meta-class has the ability to represent a crypto queue.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServiceQueue		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00032]

BSW Module	BSW Context	
Csm	Csm/CsmQueues/CsmQueue	
BSW Parameter	BSW Type	
CsmQueueSize	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Size of the CsmQueue. If jobs cannot be processed by the underlying hardware since the hardware is busy, the jobs stay in the prioritized queue. If the queue is full, the next job will be rejected.		
Template Description		
Defines the queue size of the CryptoServiceQueue.		
M2 Parameter		
SystemTemplate::SecureCommunication::CryptoServiceQueue.queueSize		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Csm_00034]

## C.10 Services

### C.10.1 Transformer General

BSW Module	BSW Context	
Xfrm	Xfrm/XfrmImplementationMapping	
BSW Parameter	BSW Type	
XfrmCSTansactionHandleImplementationDataTypeRef	ECUC-FOREIGN-REFERENCE-DEF	
BSW Description		





Reference to the ImplementationDataType with category STRUCTURE which defines the type of the C/S transaction handle. Setting this parameter basically instructs the RTE to pass a reference to a variable of exactly this ImplementationDataType as an additional argument to the called transformer function.	
<b>Template Description</b>	
A TransformationTechnology is a transformer inside a transformer chain.	
<b>M2 Parameter</b>	
SystemTemplate::Transformer::TransformationTechnology	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Xfrm_00021]

<b>BSW Module</b>	<b>BSW Context</b>	
Xfrm	Xfrm/XfrmImplementationMapping/XfrmSignal/XfrmSignalChoice/XfrmISignalGroupRefChoice	
<b>BSW Parameter</b>		<b>BSW Type</b>
XfrmISignalGroupRef		ECUC-FOREIGN-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the ISignalGroup in the system description that transports the transformed data.		
<b>Template Description</b>		
SignalGroup of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal Group is sent in different SignallPdus to multiple receivers.		
An ISignalGroup refers to a set of ISignals that shall always be kept together. A ISignalGroup represents a COM Signal Group.		
Therefore it is recommended to put the ISignalGroup in the same Package as ISignals (see atp.recommendedPackage)		
<b>M2 Parameter</b>		
SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignalGroup		
<b>Mapping Rule</b>	<b>Mapping Type</b>	
1:1 mapping	full	
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>	
valid	[ECUC_Xfrm_00010]	

<b>BSW Module</b>	<b>BSW Context</b>	
Xfrm	Xfrm/XfrmImplementationMapping/XfrmSignal/XfrmSignalChoice/XfrmISignalRefChoice	
<b>BSW Parameter</b>		<b>BSW Type</b>
XfrmISignalRef		ECUC-FOREIGN-REFERENCE-DEF
<b>BSW Description</b>		
Reference to the ISignal in the system description that transports the transformed data.		
<b>Template Description</b>		
Signal of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal is sent in different Signal IPdus to multiple receivers.		
To support the RTE "signal fan-out" each SignallPdu contains ISignals. If the same System Signal is to be mapped into several SignallPdus there is one ISignal needed for each ISignalToIPduMapping.		
ISignals describe the Interface between the Precompile configured RTE and the potentially Postbuild configured Com Stack (see ECUC Parameter Mapping).		
In case of the SystemSignalGroup an ISignal shall be created for each SystemSignal contained in the SystemSignalGroup.		
<b>M2 Parameter</b>		





SystemTemplate::Fibex::FibexCore::CoreCommunication::ISignal	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Xfrm_00008]

BSW Module	BSW Context
Xfrm	Xfrm/XfrmImplementationMapping
BSW Parameter	BSW Type
XfrmTransformationTechnologyRef	ECUC-FOREIGN-REFERENCE-DEF
BSW Description	
Reference to the TransformationTechnology in the DataTransformation of the system description for which the implementation (BswModuleEntry) shall be mapped.	
Template Description	
A TransformationTechnology is a transformer inside a transformer chain.	
M2 Parameter	
SystemTemplate::Transformer::TransformationTechnology	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Xfrm_00003]

BSW Module	BSW Context
Xfrm	Xfrm/XfrmImplementationMapping
BSW Parameter	BSW Type
XfrmVariableDataPrototypeInstanceRef	ECUC-INSTANCE-REFERENCE-DEF
BSW Description	
Instance Reference to a VariableDataPrototype in case a dedicated transformer BswModuleEntry is required per VariableDataPrototype access.	
Template Description	
This attribute defines whether the Transformer has an internal state or not.	
M2 Parameter	
SystemTemplate::Transformer::TransformationTechnology.hasInternalState	
Mapping Rule	Mapping Type
If an ISignal with dataTypePolicy set to transformingISignal - is received by this EcuInstance and - one of the TransformerTechnologies in the transformerChain has TransformationTechnology.hasInternalState set to true and - the corresponding VariableDataPrototype is consumed via multiple RPorts then this XfrmVariableDataPrototypeInstanceRef shall be used.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Xfrm_00011]



## C.11 Miscellaneous

### C.11.1 Log and Trace

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet/DltLogOutput	
BSW Parameter		BSW Type
DltLogChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains settings for log/trace message output		
Template Description		
This element contains the settings for the log/trace message output for a tuple of ApplicationId and ContextId (verbose mode) or a SessionId (non-verbose mode).		
M2 Parameter		
SystemTemplate::Dlt::DltLogChannel		
Mapping Rule		Mapping Type
Create container for each DltLogChannel that is available in the Ecu description.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dlt_00876]

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet/DltLogOutput/DltLogChannel	
BSW Parameter		BSW Type
DltLogChannelId		ECUC-STRING-PARAM-DEF
BSW Description		
This is the 4 ASCII character long name of the log channel as used in the Dlt control messages as parameter name Dlt_ interface		
Template Description		
This attribute identifies the Channel for usage within the Log And Trace protocol.		
M2 Parameter		
SystemTemplate::Dlt::DltLogChannel.logChannelId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dlt_00877]

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet/DltLogOutput/DltLogChannel	
BSW Parameter		BSW Type
DltLogChannelSegmentationSupported		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Segmentation will be used if a DLT message is larger than Pdu length.		
Template Description		
If enabled, segmentation will be used if a DLT message is larger than Pdu.length referenced via DltLogChannel.txPdu Triggering.		





<b>M2 Parameter</b>	
SystemTemplate::Dlt::DltLogChannel. <a href="#">segmentationSupported</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Dlt_00916]

<b>BSW Module</b>	<b>BSW Context</b>
Dlt	Dlt/DltConfigSet/DltLogOutput/DltLogChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
DltLogChannelThreshold	ECUC-ENUMERATION-PARAM-DEF
<b>BSW Description</b>	
LogLevel Threshold	
<b>Template Description</b>	
This attribute allows to set a log level Threshold for Log Level filtering.	
<b>M2 Parameter</b>	
SystemTemplate::Dlt::DltLogChannel. <a href="#">logTraceDefaultLogThreshold</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Dlt_00878]

<b>BSW Module</b>	<b>BSW Context</b>
Dlt	Dlt/DltConfigSet/DltLogOutput/DltLogChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
DltLogTraceStatusFlag	ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>	
Parameter to turn on/off tracing on this LogChannel completely.	
<b>Template Description</b>	
This attributes defines the default trace status.	
<b>M2 Parameter</b>	
SystemTemplate::Dlt::DltLogChannel. <a href="#">defaultTraceState</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
Set to true if DefaultTraceStateEnabled. Set to false if DefaultTraceStateDisabled.	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Dlt_00879]

<b>BSW Module</b>	<b>BSW Context</b>
Dlt	Dlt/DltConfigSet/DltLogOutput/DltLogChannel
<b>BSW Parameter</b>	<b>BSW Type</b>
DltTxPdu	ECUC-PARAM-CONF-CONTAINER-DEF
<b>BSW Description</b>	
Contains the configuration parameters of the AUTOSAR Dlt module's Tx Pdus.	





Template Description	
Reference to DltPdu that is transmitted by the DltLogChannel.	
M2 Parameter	
SystemTemplate::Dlt::DltLogChannel.txPduTriggering	
Mapping Rule	Mapping Type
This container shall be created for the PduTriggering that is referenced from the DltLogChannel. The referenced PduTriggering shall point to a GeneralPurposeIPdu with the category DLT.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dlt_00907]

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet/DltLogOutput/DltLogChannel/DltTxPdu	
BSW Parameter		BSW Type
DltTxPduId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The numerical value used as the ID of this I-PDU. This handle Id is used for the APIs calls Dlt_TxConfirmation, Dlt_Trigger Transmit, Dlt_TriggerIPDUSeSend or Dlt_TriggerIPDUSeSendWithMetaData, Dlt_CopyTxData and Dlt_TpTxConfirmation to transmit respectively confirm transmissions of I-PDUs.		
Template Description		
M2 Parameter		
Mapping Rule	Mapping Type	
	local	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Dlt_00893]	

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet/DltLogOutput	
BSW Parameter		BSW Type
DltLogChannelAssignment		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains a preconfiguration of ApplicationId / ContextId pairs and their assigned log channel.		
Template Description		
Reference to the Swc that produces the log or trace message. Please note that this reference shall not be set in case that the Bsw module produces the associated log or trace messages.		
M2 Parameter		
SystemTemplate::Dlt::DltLogChannel.applicationContext		
Mapping Rule	Mapping Type	
This container shall be created for each applicationContext that is referenced from the DltLog Channel that is available in the Ecu description.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Dlt_00887]	

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet/DltLogOutput/DltLogChannelAssignment	
BSW Parameter		BSW Type
DltLogChannelAssignmentSwcContextRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to an ApplicationId/ContextId pair that is assigned to a DltLogChannel.		
Template Description		
Reference to the Swc that produces the log or trace message. Please note that this reference shall not be set in case that the Bsw module produces the associated log or trace messages.		
M2 Parameter		
SystemTemplate::Dlt::DltLogChannel. <a href="#">applicationContext</a>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dlt_00896]

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet/DltLogOutput/DltLogChannelAssignment	
BSW Parameter		BSW Type
DltLogChannelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a DltLogChannel that is assigned to an ApplicationId / ContextId pair.		
Template Description		
This element contains the settings for the log/trace message output for a tuple of ApplicationId and ContextId (verbose mode) or a SessionId (non-verbose mode).		
M2 Parameter		
SystemTemplate::Dlt::DltLogChannel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dlt_00888]

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet/DltProtocol	
BSW Parameter		BSW Type
DltEculd		ECUC-CHOICE-CONTAINER-DEF
BSW Description		
This is a choice container to choose between a Eculd value or a callout to get the Eculd.		
Template Description		
This element represents an Ecu or Machine that produces logging and tracing information.		
M2 Parameter		
LogAndTraceExtract::DltEcu		
Mapping Rule		Mapping Type
Create container if DltEcu is referenced by DltConfig. Please note that only the DltEculdValue Choice can be derived from System Description.		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_DIt_00860]

BSW Module	BSW Context	
DIt	DIt/DItConfigSet/DItProtocol/DItEcud/DItEcudValueChoice	
BSW Parameter	BSW Type	
DItEcudValue	ECUC-STRING-PARAM-DEF	
BSW Description		
If this choice is used the Ecud shall be taken from the configured string. This is the name of the ECU for use within the DIt protocol. If you want to use a number representation type this as character.		
Template Description		
This attribute defines the name of the ECU for use within the DIt protocol.		
M2 Parameter		
LogAndTraceExtract::DItEcu.ecuId		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_DIt_00861]	

BSW Module	BSW Context	
DIt	DIt/DItConfigSet/DItProtocol	
BSW Parameter	BSW Type	
DItHeaderUseEcud	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Corresponds to field WEID (With ECU ID). If set ECU ID shall be placed in the header, else not. If DItGeneralNvRAMSupport is enabled the value of the parameter defined here is also the initial value for the corresponding NvRam entry. If DItGeneralNvRAMSupport is not set, Link-Time or Post-Build configuration shall be used.		
Template Description		
Reference to the Ecu representation in the Log And Trace Extract.		
M2 Parameter		
SystemTemplate::DIt::DItConfig.dItEcu		
Mapping Rule	Mapping Type	
Set this parameter to true if the reference is available. Set to false if reference is missing.	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_DIt_00811]	

BSW Module	BSW Context	
DIt	DIt/DItConfigSet/DItProtocol	
BSW Parameter	BSW Type	
DItHeaderUseSessionID	ECUC-BOOLEAN-PARAM-DEF	
BSW Description		
Corresponds to field WSID (with Session ID). If set the Session ID shall be placed in the header, else not. If DItGeneralNvRAMSupport is enabled the value of the parameter defined here is also the initial value for the corresponding NvRam entry. If DItGeneralNvRAMSupport is not set, Link-Time or Post-Build configuration shall be used.		
Template Description		





This attribute defines whether the sessionId is used or not.	
<b>M2 Parameter</b>	
SystemTemplate::Dlt::DltConfig. <a href="#">sessionIdSupport</a>	
<b>Mapping Rule</b>	<b>Mapping Type</b>
1:1 mapping	full
<b>Mapping Status</b>	<b>ECUC Parameter ID</b>
valid	[ECUC_Dlt_00813]

<b>BSW Module</b>	<b>BSW Context</b>	
Dlt	Dlt/DltConfigSet/DltProtocol	
<b>BSW Parameter</b>		<b>BSW Type</b>
DltHeaderUseTimestamp		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
Corresponds to field WTMS (With Timestamp). If set the timestamp shall be placed in the header, else not. If DltGeneralNvRAMSupport is enabled the value of the parameter defined here is also the initial value for the corresponding NvRam entry. If DltGeneralNvRAMSupport is not set, Link-Time or Post-Build configuration shall be used.		
<b>Template Description</b>		
This attribute defines whether a timestamp shall be added to the Dlt messages or not.		
<b>M2 Parameter</b>		
SystemTemplate::Dlt::DltConfig. <a href="#">timestampSupport</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Dlt_00814]

<b>BSW Module</b>	<b>BSW Context</b>	
Dlt	Dlt/DltConfigSet/DltProtocol	
<b>BSW Parameter</b>		<b>BSW Type</b>
DltUseVerboseMode		ECUC-BOOLEAN-PARAM-DEF
<b>BSW Description</b>		
If this flag is set to TRUE, the payload shall be transmitted in verbose mode, else the payload shall be transmitted in none-verbose mode.		
<b>Template Description</b>		
This attribute defines whether this channel supports non-Verbose Dlt messages. If disabled only verbose mode messages shall be used.		
<b>M2 Parameter</b>		
SystemTemplate::Dlt::DltLogChannel. <a href="#">nonVerboseMode</a>		
<b>Mapping Rule</b>		<b>Mapping Type</b>
1:1 mapping		full
<b>Mapping Status</b>		<b>ECUC Parameter ID</b>
valid		[ECUC_Dlt_00911]

BSW Module	BSW Context	
Dlt	Dlt/DltConfigSet	
BSW Parameter	BSW Type	
DltRxPdu	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
Contains the Pdu IDs to be used for Dlt control messages reception.		
Template Description		
<b>GeneralPurposeIPdu:</b> This element is used for AUTOSAR Pdus without attributes that are routed by the PduR. Please note that the category name of such Pdus is standardized in the AUTOSAR System Template.		
<b>DltLogChannel.rxPduTriggering:</b> Reference to DltPdu that is received by the DltLogChannel		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::GeneralPurposeIPdu, SystemTemplate::Dlt::DltLogChannel. <a href="#">rxPduTriggering</a>		
Mapping Rule		Mapping Type
This container shall be created if a GeneralPurposeIPdu with the category DLT is defined in the ECU_SYSTEM_DESCRIPTION and this GeneralPurposeIPdu is received by the regarded Ecu.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dlt_00900]

BSW Module	BSW Context	
Dlt	Dlt/DltSwc	
BSW Parameter	BSW Type	
DltSwcContext	ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description		
This container contains the configuration of ApplicationId / ContextId pairs which are supported by this SWC.		
Template Description		
This meta-class represents the Context that groups Log and Trace Messages that are generated by an application.		
M2 Parameter		
LogAndTraceExtract::DltContext		
Mapping Rule		Mapping Type
Create container for each DltContext that is available in the ECU Description		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dlt_00854]

BSW Module	BSW Context	
Dlt	Dlt/DltSwc/DltSwcContext	
BSW Parameter	BSW Type	
DltSwcApplicationId	ECUC-STRING-PARAM-DEF	
BSW Description		
Abbreviation for the SWC (4 characters)		
Template Description		
This attribute identifies the SW-C/BSW module in the log and trace message.		
M2 Parameter		
LogAndTraceExtract::DltApplication. <a href="#">applicationId</a>		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_DIt_00858]

BSW Module	BSW Context
DIt	DIt/DItSwc/DItSwcContext
BSW Parameter	BSW Type
DItSwcContextId	ECUC-STRING-PARAM-DEF
BSW Description	Abbreviation for the ContextId (4 characters)
Template Description	This attribute is used to group log and trace messages produced by an application to distinguish functionality.
M2 Parameter	LogAndTraceExtract::DItContext. <a href="#">contextId</a>
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_DIt_00859]

## C.11.2 ECU State Manager

BSW Module	BSW Context
EcuM	EcuM/EcuMConfiguration/EcuMCommonConfiguration
BSW Parameter	BSW Type
EcuMWakeUpSource	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	These containers describe the configured wakeup sources.
Template Description	If this parameter is available and set to true then a channel wakeup source shall be created for the PhysicalChannel referencing this CommunicationConnector.
M2 Parameter	SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector. <a href="#">createEcuWakeUpSource</a>
Mapping Rule	Mapping Type
1:1 Mapping to SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationConnector.createEcuWakeUpSource == True	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_EcuM_00150]



BSW Module	BSW Context	
EcuM	EcuM/EcuMConfiguration/EcuMCommonConfiguration/EcuMWakeupSource	
BSW Parameter	BSW Type	
EcuMComMPNCRef	ECUC-REFERENCE-DEF	
BSW Description		
This is a reference to a one or more PNC's defined in the Communication Manager. No reference indicates that the wakeup source is not assigned to a partial network.		
Template Description		
If this parameter is available and set to true then all available PNCs will be woken up as soon as a channel wakeup occurs. This is ensured by adding all PNCs to all channel wakeup sources during upstream mapping.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.pncSynchronousWakeup		
Mapping Rule		Mapping Type
if SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.pncSynchronousWakeup == True: Add reference for each SystemTemplate::PncMapping::PncMapping otherwise: Add reference for each SystemTemplate::PncMapping::PncMapping where pncWakeupEnable == True and which is connected to the according PhysicalChannel		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_EcuM_00228]

### C.11.3 Software Cluster Connection

BSW Module	BSW Context	
SwCluC	SwCluC/SwCluCDefinitionSet/SwCluCDefinition	
BSW Parameter	BSW Type	
SwCluCMachineId	ECUC-INTEGER-PARAM-DEF	
BSW Description		
Unique number of the (virtual or physical) machine to which the Software Cluster belongs.		
Template Description		
Unique number of the (virtual or physical) machine to which the Software Cluster is mapped.		
M2 Parameter		
SystemTemplate::SoftwareCluster::CpSoftwareClusterToEcuInstanceMapping.machineId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_SwCluC_-00008]

BSW Module	BSW Context	
SwCluC	SwCluC/SwCluCDefinitionSet/SwCluCDefinition	
BSW Parameter	BSW Type	
SwCluCSoftwareClusterType	ECUC-ENUMERATION-PARAM-DEF	
BSW Description		
The type of the Software Cluster		





Template Description	
<p>This meta class provides the ability to define a CP Software Cluster. Each CP Software Cluster can be integrated and build individually. It defines the sub-set of hierarchical tree(s) of Software Components belonging to this CP Software Cluster. Resources required or provided by this CP Software Cluster are given in the according mappings.</p>	
M2 Parameter	
<p>SystemTemplate::SoftwareCluster::CpSoftwareCluster</p>	
Mapping Rule	Mapping Type
<p>If CpSoftwareCluster.category == HOST_SOFTWARE_CLUSTER the SwCluCSoftwareCluster Type shall be set to HOST_SW_CLUSTER</p> <p>If CpSoftwareCluster.category == APPLICATION_SOFTWARE_CLUSTER the SwCluCSoftwareClusterType shall be set to APPLICATION_SW_CLUSTER</p>	<p>full</p>
Mapping Status	ECUC Parameter ID
<p>valid</p>	<p>[ECUC_SwCluC_ - 00009]</p>

## D History of Constraints and Specification Items

### D.1 Constraint and Specification Item History of this document according to AUTOSAR R4.0.1

#### D.1.1 Changed Constraints in R4.0.1

N/A

#### D.1.2 Added Constraints in R4.0.1

Number	Heading
[constr_3000]	valid SenderRecCompositeTypeMappings
[constr_3001]	valid ClientServerToSignalGroupMappings
[constr_3002]	valid SwcToImplMapping
[constr_3003]	Number of CAN channels
[constr_3004]	Clustering and separation must be exclusive
[constr_3005]	valid EcuResourceEstimation
[constr_3006]	valid EcuMapping
[constr_3007]	SelectorFieldCodes for dynamic part alternatives
[constr_3008]	EcuInstance subelements
[constr_3009]	Overlapping of ISignals is prohibited
[constr_3010]	ISignalIPdu shall not be exceeded
[constr_3011]	Overlapping of updateIndicationBits for ISignals is prohibited
[constr_3012]	Overlapping of Pdus is prohibited
[constr_3013]	Frame length shall not be exceeded
[constr_3014]	Overlapping of updateIndicationBits for Pdus is prohibited
[constr_3015]	Number of LIN channels
[constr_3016]	Number of Ethernet channels
[constr_3017]	Length of multiplexed Pdu shall not be exceeded
[constr_3018]	Number of FlexRay channels

**Table D.1: Added Constraints in R4.0.1**

#### D.1.3 Deleted Constraints in R4.0.1

N/A

### D.2 Constraint and Specification Item History of this document according to AUTOSAR R4.0.2

#### D.2.1 Changed Constraints in R4.0.2

N/A

## D.2.2 Added Constraints in R4.0.2

Number	Heading
[constr_3019]	In the flat ECU extract each required interface must be satisfied by connected provided interfaces

Table D.2: Added Constraints in R4.0.2

## D.2.3 Deleted Constraints in R4.0.2

N/A

## D.3 Constraint and Specification Item History of this document according to AUTOSAR R4.0.3

### D.3.1 Changed Constraints in R4.0.3

N/A

### D.3.2 Changed Traceables in R4.0.3

N/A

### D.3.3 Added Constraints in R4.0.3

Number	Heading
[constr_3020]	CommunicationDirection of containedIPduGroups
[constr_3021]	Mapping of SensorActuatorSwComponents to SensorActuator HwElements
[constr_3024]	Usage of triggeredWithoutRepetition and triggeredOnChangeWithoutRepetition is not allowed for signal groups and group signals.
[constr_3025]	Usage of NPdus in TpConnections
[constr_3026]	valid EmptySignalMappings

Table D.3: Added Constraints in R4.0.3

### D.3.4 Added Traceables in R4.0.3

Number	Heading
[TPS_SYST_01000]	FlatInstanceDescriptor roles

Table D.4: Added Specification Items in 4.0.3

### D.3.5 Deleted Constraints in R4.0.3

N/A

### D.3.6 Deleted Traceables in R4.0.3

N/A

## D.4 Constraint and Specification Item History of this document according to AUTOSAR R4.1.1

### D.4.1 Changed Constraints in R4.1.1

Number	Heading
[ <a href="#">constr_3018</a> ]	Number of FlexRay channels

Table D.5: Changed Constraints in R4.1.1

### D.4.2 Changed Traceables in R4.1.1

N/A

### D.4.3 Added Constraints in R4.1.1

Number	Heading
[ <a href="#">constr_1198</a> ]	<a href="#">TriggerToSignalMapping.systemSignals</a> eligible for a <a href="#">TriggerToSignalMapping</a>
[ <a href="#">constr_1199</a> ]	<a href="#">ISignals</a> relating to <a href="#">systemSignals</a> eligible for a <a href="#">TriggerToSignalMapping</a>
[ <a href="#">constr_1206</a> ]	<a href="#">DataMapping</a> to <a href="#">PRPortPrototype</a>
[ <a href="#">constr_1207</a> ]	Existence of the attribute <a href="#">DataMapping.communicationDirection</a> in the context of a <a href="#">SenderReceiverInterface</a> or <a href="#">TriggerInterface</a>
[ <a href="#">constr_1208</a> ]	Existence of the attribute <a href="#">DataMapping.communicationDirection</a> in the context of a <a href="#">ClientServerInterface</a>
[ <a href="#">constr_1265</a> ]	<a href="#">DoIpGidSynchronizationNeeds</a> can only exist once per <a href="#">ECU_EXTRACT</a>
[ <a href="#">constr_1266</a> ]	<a href="#">DoIpGidNeeds</a> can only exist once per <a href="#">ECU_EXTRACT</a>
[ <a href="#">constr_1267</a> ]	<a href="#">DoIpActivationLineNeeds</a> can only exist once per <a href="#">ECU_EXTRACT</a>
[ <a href="#">constr_3027</a> ]	Existence of <a href="#">ecuExtractVersion</a>
[ <a href="#">constr_3028</a> ]	<a href="#">FibexElements</a>
[ <a href="#">constr_3029</a> ]	Assign-Frame command usage
[ <a href="#">constr_3030</a> ]	valid relationship between <a href="#">ECUMapping</a> and <a href="#">EcuInstance</a>
[ <a href="#">constr_3031</a> ]	Complete System Description does not have outside ports
[ <a href="#">constr_3032</a> ]	Combinations of <a href="#">SwcToEcuMapping</a> targets
[ <a href="#">constr_3033</a> ]	Criteria for primitive argument mapping

[constr_3034]	Values of LinSlaveConfig and LinSlave attributes
[constr_3035]	CanNm user data configuration in case NID/CBV are enabled
[constr_3036]	Pdus in CAN and LIN Frames
[constr_3037]	maximum Frame frameLength for CAN and LIN
[constr_3038]	maximum Frame frameLength for FlexRay
[constr_3039]	pnIdentifier range
[constr_3040]	Restriction of pnIdentifier values
[constr_3041]	pncVectorOffset range
[constr_3042]	pncVectorLength range
[constr_3043]	pncVector configuration in AUTOSAR Com
[constr_3044]	CBV configuration in case partial network is used
[constr_3045]	Signal content evaluation vs. Mode evaluation
[constr_3046]	Consistency of TransmissionModeCondition.iSignalInIPdu
[constr_3047]	Uniqueness of macMulticastAddresses
[constr_3048]	Range of vlanIdentifier
[constr_3049]	Role of SystemSignal in inter-ECU client server communication with clients located on different ECUs
[constr_3050]	J1939Cluster uses exactly one CanPhysicalChannel
[constr_3051]	Restriction of ISignalMapping references
[constr_3052]	Complete ISignalMapping of ISignalGroup signals
[constr_3053]	Complete ISignalMapping of target ISignalGroup
[constr_3054]	SystemSignal that is part of exactly one SystemSignalGroup and is not transmitted additionally as standalone SystemSignal in a complete System Description
[constr_3055]	SystemSignalGroup in a complete System Description
[constr_3056]	pduLength of the NmPdu
[constr_3057]	Maximal one BusspecificNmEcu per NmEcu and bus system is allowed to be defined
[constr_3058]	References from SenderRecArrayElementMapping and from Sender-RecRecordElementMapping to SystemSignals are not allowed within a SenderReceiverCompositeElementToSignalMapping
[constr_3059]	Mandatory DataMapping on the receiver side for elements of a composite data type
[constr_3060]	Usage of networkRepresentationProps and physicalProps
[constr_3061]	CompuMethod specification in networkRepresentationProps
[constr_3062]	The EcuInstance that is referenced from a specific CouplingElement shall be connected to the same EthernetCluster as the specific CouplingElement
[constr_3063]	Usage of portNumber and dynamicallyAssigned with value "true" is mutually exclusive
[constr_3064]	Usage of DataMapping.serviceInstance, DataMapping.eventHandler and DataMapping.eventGroup references
[constr_3065]	Mapping of queued Triggers to SystemSignals is prohibited
[constr_3066]	Restriction of SenderComSpecs that refer to dataElements mapped to the same SystemSignal
[constr_3067]	initValue defined in the context of ISignal
[constr_3068]	DoIPPowerModeStatusNeeds in the category ECU_EXTRACT
[constr_3501]	Role of SystemSignal in 1:n communication
[constr_3502]	Role of SystemSignal in n:1 sender-receiver communication
[constr_3503]	SystemSignal that is not part of a SystemSignalGroup in a complete System Description
[constr_3505]	Criteria for primitive Data Mapping
[constr_3506]	Mapping of composite data type to SystemSignals in SystemSignalGroup
[constr_3508]	Value of nmReadySleepTime
[constr_3514]	No two ISignalToIPduMappings shall reference the identical ISignal

**Table D.6: Added Constraints in R4.1.1**

#### D.4.4 Added Traceables in R4.1.1

Number	Heading
[TPS_SYST_01001]	Definition of <a href="#">SwcToEcuMapping</a>
[TPS_SYST_01002]	System Category
[TPS_SYST_01003]	Standardized System Category Definitions
[TPS_SYST_01004]	Definition of AUTOSAR ECU
[TPS_SYST_01005]	Definition of <a href="#">EcuInstance</a>
[TPS_SYST_01006]	Assign ECU type to <a href="#">EcuInstance</a>
[TPS_SYST_01007]	Definition of <a href="#">CommunicationController</a>
[TPS_SYST_01008]	Assign <a href="#">CommunicationController</a> to the AUTOSAR Communication Peripheral
[TPS_SYST_01009]	Definition of <a href="#">CommunicationConnector</a>
[TPS_SYST_01010]	Definition of <a href="#">CommunicationCluster</a>
[TPS_SYST_01011]	Definition of <a href="#">PhysicalChannel</a>
[TPS_SYST_01012]	Different Properties of <a href="#">LinMaster</a> and <a href="#">LinSlave</a>
[TPS_SYST_01013]	<a href="#">EcuInstance</a> stands for its own
[TPS_SYST_01014]	Semantics of <a href="#">CommunicationControllerMapping</a>
[TPS_SYST_01015]	Semantics of <a href="#">HwPortMapping</a>
[TPS_SYST_01016]	System Extract, Ecu System Description and Ecu Extract may have ports
[TPS_SYST_01017]	The role of the top-level software composition
[TPS_SYST_01019]	Mapping of topology elements to elements of the ECU Resource Template
[TPS_SYST_01020]	Unconditional mapping of atomic Software Components
[TPS_SYST_01021]	Mapping of <a href="#">CompositionSwComponentType</a>
[TPS_SYST_01022]	Prototype of a <a href="#">ParameterSwComponentType</a> can be mapped to more than one ECU
[TPS_SYST_01023]	Prototype of an <a href="#">ServiceProxySwComponentType</a> can be mapped to more than one ECU
[TPS_SYST_01024]	Component Clustering
[TPS_SYST_01025]	Clustering of Compositions
[TPS_SYST_01026]	Separation of Compositions
[TPS_SYST_01027]	Mapping of specific SW components to dedicated Ecus
[TPS_SYST_01028]	Task of the System Generator
[TPS_SYST_01029]	Mapping of specific SW components to exclusive Ecus
[TPS_SYST_01030]	Representation of <a href="#">VariableDataPrototypes</a> and <a href="#">ClientServerOperations</a> in System Description
[TPS_SYST_01032]	Independence of <a href="#">SystemSignals</a> from <a href="#">CommunicationClusters</a>
[TPS_SYST_01033]	<a href="#">DataMapping</a> and <a href="#">SwConnector</a>
[TPS_SYST_01034]	Data Mappings can be applied to compositions and atomic software components
[TPS_SYST_01035]	Transformation of Data Mappings during flattening
[TPS_SYST_01036]	No additional Data Mappings in composition substructure
[TPS_SYST_01037]	primitive Data Mapping of UINT8-Arrays
[TPS_SYST_01038]	Mapping of primitive arguments
[TPS_SYST_01039]	primitive Argument Mapping of UINT8-Arrays
[TPS_SYST_01040]	Mapping of composite arguments
[TPS_SYST_01041]	<a href="#">CommonSignalPath</a> definition
[TPS_SYST_01042]	<a href="#">ForbiddenSignalPath</a> definition
[TPS_SYST_01043]	<a href="#">PermissibleSignalPath</a> definition

[TPS_SYST_01044]	<a href="#">SeparateSignalPath</a> definition
[TPS_SYST_01045]	Component Separation
[TPS_SYST_01046]	ShortNames of <a href="#">LinSlaveConfig</a> and <a href="#">LinSlave</a>
[TPS_SYST_01048]	Handling of large <a href="#">IPdus</a>
[TPS_SYST_01049]	Handling of <a href="#">IPdus</a> with dynamic signals
[TPS_SYST_01050]	<a href="#">SystemSignal</a> in the System Extract and ECU Extract
[TPS_SYST_01051]	Handling of <a href="#">DcmIPdus</a>
[TPS_SYST_01052]	Routing of <a href="#">UserDefinedPdu</a> s, <a href="#">NmPdu</a> s, <a href="#">NPdu</a> s
[TPS_SYST_01053]	Low-level routing of <a href="#">NPdu</a> s
[TPS_SYST_01054]	Routing of <a href="#">DcmIPdu</a> s
[TPS_SYST_01055]	Routing of <a href="#">ISignalIPdu</a> s that are part of a <a href="#">MultiplexedIPdu</a>
[TPS_SYST_01056]	Routing of <a href="#">ISignalIPdu</a> s, <a href="#">UserDefinedIPdu</a> s, <a href="#">MultiplexedIPdu</a> s
[TPS_SYST_01057]	Routing of <a href="#">NmPdu</a> s
[TPS_SYST_01058]	Pdu Gateway where an Ecu only routes a <a href="#">PduTriggering</a> without being interested in the content
[TPS_SYST_01059]	Relationship between <a href="#">FrameTriggering</a> and <a href="#">CommConnectorPort</a>
[TPS_SYST_01060]	Relationship between <a href="#">PduTriggering</a> and <a href="#">CommConnectorPort</a>
[TPS_SYST_01061]	Relationship between <a href="#">ISignalTriggering</a> and <a href="#">CommConnectorPort</a>
[TPS_SYST_01062]	Network representation of an <a href="#">ISignal</a>
[TPS_SYST_01063]	Context of network representation of an <a href="#">ISignal</a>
[TPS_SYST_01064]	Transmit/Receive Semantics of Pdu Pools
[TPS_SYST_01065]	Mapping onto the of <a href="#">ComSignalType</a> enumeration
[TPS_SYST_01066]	Derivation of Tx COM Signals
[TPS_SYST_01067]	Derivation of Rx COM Signals
[TPS_SYST_01068]	Bit Counting in AUTOSAR
[TPS_SYST_01069]	Bit Order in AUTOSAR
[TPS_SYST_01069]	Bit Order in AUTOSAR
[TPS_SYST_01070]	E2E Protection of <a href="#">ISignalGroups</a>
[TPS_SYST_01071]	E2E Protection of several <a href="#">ISignalGroups</a> in one <a href="#">ISignalIPdu</a>
[TPS_SYST_01072]	Offset attributes of <a href="#">EndToEndDescription</a>
[TPS_SYST_01073]	E2E Protection via COM Callouts
[TPS_SYST_01074]	E2E Protection in the E2E Wrapper
[TPS_SYST_01075]	Signal content evaluation via <a href="#">TransmissionModeCondition</a>
[TPS_SYST_01076]	Mode evaluation via <a href="#">modeDrivenTrueCondition</a>
[TPS_SYST_01077]	Mapping of Com Transmission Modes to System Template elements
[TPS_SYST_01078]	Dynamic Part of a <a href="#">MultiplexedIPdu</a>
[TPS_SYST_01079]	Static Part of a <a href="#">MultiplexedIPdu</a>
[TPS_SYST_01080]	Sending or receiving of a <a href="#">MultiplexedIPdu</a> in System Extract/ECU Extract
[TPS_SYST_01081]	Gatewaying of a <a href="#">MultiplexedIPdu</a> in System Extract/ECU Extract
[TPS_SYST_01082]	Receiving and gatewaying of a <a href="#">MultiplexedIPdu</a> in System Extract/ECU Extract
[TPS_SYST_01083]	A <a href="#">Frame</a> represents a general design object that is used to describe the layout of the included <a href="#">Pdu</a> s as a reusable asset.
[TPS_SYST_01084]	<a href="#">FrameTriggering</a>
[TPS_SYST_01085]	Transmission of a Frame multiple times within one communication cycle
[TPS_SYST_01086]	Number of Ethernet channels
[TPS_SYST_01087]	Role of <a href="#">SystemSignal</a> in inter-ECU client server communication with clients located on the same ECU
[TPS_SYST_01088]	<a href="#">NetworkEndpoint</a> priority
[TPS_SYST_01089]	<a href="#">ApplicationEndpoint</a> priority
[TPS_SYST_01090]	valid <a href="#">NetworkEndpoint</a>
[TPS_SYST_01091]	Definition of <a href="#">SoAdConfig</a>
[TPS_SYST_01092]	Transmission of multiple <a href="#">Pdu</a> s over the same <a href="#">SocketConnection</a>



[TPS_SYST_01093]	Activation/Deactivation of <a href="#">SoAdRoutingGroups</a>
[TPS_SYST_01094]	allowed <a href="#">key/value</a> <a href="#">CapabilityRecord</a> combinations
[TPS_SYST_01095]	tagged VLANs
[TPS_SYST_01096]	untagged VLANs
[TPS_SYST_01097]	Assignment of <a href="#">CouplingPorts</a> to a VLAN
[TPS_SYST_01098]	Assignment of <a href="#">CouplingPorts</a> to an “untagged” VLAN
[TPS_SYST_01099]	Context of <a href="#">TpConfig</a>
[TPS_SYST_01100]	TP routing using the same transport protocol
[TPS_SYST_01101]	TP routing using different transport protocols
[TPS_SYST_01102]	<a href="#">FlexrayTpConnectionControl</a> reuse
[TPS_SYST_01103]	<a href="#">FlexrayTpConnection</a> shall specify one <a href="#">txPduPool</a>
[TPS_SYST_01104]	<a href="#">FlexrayTpConnection</a> with several receivers
[TPS_SYST_01105]	<a href="#">CanTpConnection</a> with several receivers
[TPS_SYST_01106]	Usage of additional <a href="#">directPdu</a> in case of variable length <a href="#">sdu</a>
[TPS_SYST_01107]	Definition of <a href="#">NmCoordinator</a>
[TPS_SYST_01108]	<a href="#">ProvidedServiceInstance</a> priority
[TPS_SYST_01109]	RTE fan-out support
[TPS_SYST_01110]	Com Signal Gateway fan-out support
[TPS_SYST_01111]	Pdu Router fan-out support
[TPS_SYST_01112]	FlexRay dual channel Pdu Router interaction
[TPS_SYST_01113]	FlexRay Interface fan-out support
[TPS_SYST_01114]	Frame fan-out support
[TPS_SYST_01115]	CDD communication support
[TPS_SYST_01116]	Frame Mapping is not supported by the AUTOSAR BSW
[TPS_SYST_01117]	Pdu Gateway support
[TPS_SYST_01118]	Support of Multicast <a href="#">Pdu</a> routing
[TPS_SYST_01119]	Signal Gateway support
[TPS_SYST_01120]	Precedence of <a href="#">ISignalMappings</a>
[TPS_SYST_01121]	Support of Multicast signal routing
[TPS_SYST_01122]	partial routing between <a href="#">ISignalGroups</a>
[TPS_SYST_01123]	System Extract may cover one or many <a href="#">EcuInstances</a>
[TPS_SYST_01124]	<a href="#">SystemSignal</a> fan-out and fan-in
[TPS_SYST_01125]	<a href="#">SystemSignalGroup</a> fan-out and fan-in
[TPS_SYST_01126]	Resource Consumption for RTE and basic software
[TPS_SYST_01127]	CDD Topology support
[TPS_SYST_01128]	Communication over FlexRay
[TPS_SYST_01129]	Communication over LIN
[TPS_SYST_01130]	Communication over CAN
[TPS_SYST_01131]	TCP/IP and UDP/IP communication over Ethernet
[TPS_SYST_01132]	Communication over SAE J1939
[TPS_SYST_01133]	Partial Network Clusters
[TPS_SYST_01134]	Abstract System Description
[TPS_SYST_01135]	Refactoring of an Abstract System Description into a project specific technical view of the software architecture
[TPS_SYST_01136]	<a href="#">ViewMapSet</a> and <a href="#">ViewMap</a> are used to trace the transformations between different models
[TPS_SYST_01137]	Several <a href="#">DataMappings</a> may be defined for the same <a href="#">SystemSignal</a>
[TPS_SYST_01138]	Low-level routing of <a href="#">XcpPdu</a> s
[TPS_SYST_01139]	Ecu Extract covers exactly one <a href="#">EcuInstance</a>
[TPS_SYST_01140]	Ecu Extract contains only <a href="#">SwComponentPrototypes</a> of type <a href="#">AtomicSwComponentType</a> in the <a href="#">RootSwCompositionPrototype</a>
[TPS_SYST_01141]	Derivation of <a href="#">ComSignalType</a>
[TPS_SYST_01142]	Rules for the creation of Triggerings and Ports on the sender side

[TPS_SYST_01143]	DataMapping on the sender side for elements of a composite data type
[TPS_SYST_01144]	Physical properties of a System Signal
[TPS_SYST_01145]	PortInterfaceMappings in the ECU Extract
[TPS_SYST_01146]	Generic CanTpConnections
[TPS_SYST_01147]	Generic J1939TpConnections
[TPS_SYST_01148]	Mapping of IN and INOUT ArgumentDataPrototypes to callSignals
[TPS_SYST_01149]	Mapping of OUT and INOUT ArgumentDataPrototypes to returnSignals
[TPS_SYST_01150]	Mapping of returnSignal and callSignal to COM Signal
[TPS_SYST_01151]	DataMapping reference to an EventHandler
[TPS_SYST_01152]	DataMapping reference to a ConsumedEventGroup
[TPS_SYST_01153]	Atomic transport of SystemSignalGroups
[TPS_SYST_01154]	CAN Controller support of CAN FD frames
[TPS_SYST_03000]	Co-existing System with category SYSTEM_DESCRIPTION and System with category SYSTEM_EXTRACT
[TPS_SYST_05000]	System Description doesn't use a complete Software Component Description
[TPS_SYST_05001]	Send a Trigger across a network
[TPS_SYST_05002]	The value of startPosition is irrelevant

**Table D.7: Added Specification Items in 4.1.1**

#### D.4.5 Deleted Constraints in R4.1.1

[constr_3016]	Number of Ethernet channels

**Table D.8: Deleted Constraints in R4.1.1**

#### D.4.6 Deleted Traceables in R4.1.1

N/A

### D.5 Constraint and Specification Item History of this document according to AUTOSAR R4.1.2

#### D.5.1 Changed Traceables in R4.1.2

Number	Heading
[TPS_SYST_01052]	Routing of UserDefinedPduS, NmPduS, NPduS, GeneralPurposePduS
[TPS_SYST_01056]	Routing of ISignalIPduS, UserDefinedIPduS, MultiplexedIPduS, GeneralPurposeIPduS
[TPS_SYST_01138]	Low-level routing of XcpPduS

**Table D.9: Added Specification Items in 4.1.2**

#### D.5.2 Added Traceables in R4.1.2

Number	Heading
[TPS_SYST_02001]	<code>networkRepresentationProps</code> are mandatory in case the <code>dataTypePolicy</code> is set to <code>override</code> or <code>legacy</code>
[TPS_SYST_02002]	<code>SoAdRoutingGroup</code> for Services with Methods
[TPS_SYST_02003]	<code>SoAdRoutingGroups</code> for Services with event groups
[TPS_SYST_02004]	<code>SoAdRoutingGroups</code> for Services with event groups that contain triggered events
[TPS_SYST_02005]	Low-level routing of J1939DcmIPdus
[TPS_SYST_02006]	Usage of <code>networkRepresentationFromComSpec</code>
[TPS_SYST_02007]	Usage of <code>SocketConnection</code> attributes in the unicast server view
[TPS_SYST_02008]	Usage of <code>SocketConnection</code> attributes in the unicast client view
[TPS_SYST_02009]	Usage of <code>SocketConnection</code> attributes in the multicast server view
[TPS_SYST_02010]	Usage of <code>SocketConnection</code> attributes in the multicast client view

**Table D.10: Added Specification Items in 4.1.2**

### D.5.3 Added Constraints in R4.1.2

Number	Heading
[constr_3069]	Allowed <code>CanNmCluster.nmNidPosition</code> values
[constr_3070]	Allowed <code>CanNmCluster.nmCbvPosition</code> values
[constr_3071]	<code>CanNmCluster.nmCbvPosition</code> and <code>CanNmCluster.nmNidPosition</code> shall never have the same value
[constr_3073]	<code>nmVoteInformation</code> only valid for <code>FrNm</code>
[constr_3074]	No <code>TransmissionAcknowledgementRequest</code> for multiple senders
[constr_3078]	Allowed <code>UdpNmCluster.nmNidPosition</code> values
[constr_3079]	Allowed <code>UdpNmCluster.nmCbvPosition</code> values
[constr_3080]	<code>UdpNmCluster.nmCbvPosition</code> and <code>UdpNmCluster.nmNidPosition</code> shall never have the same value
[constr_3081]	Value of category in <code>GeneralPurposePdu</code>
[constr_3082]	Value of category in <code>GeneralPurposeIPdu</code>
[constr_3083]	Exactly one <code>AtomicSwComponentType</code> on an <code>EcuInstance</code> may use <code>General-CallbackEventDataChanged</code> / <code>GeneralCallbackEventStatusChange</code>
[constr_3084]	Service port in the role <code>PowerTakeOff</code>
[constr_3085]	Service port in the role <code>CallbackDCMRequestServices</code>

**Table D.11: Added Constraints in R4.1.2**

### D.5.4 Changed Constraints in R4.1.2

Number	Heading
[constr_2025]	Uniqueness of <code>symbol</code> attributes

**Table D.12: Changed Constraints in R4.1.2**

### D.5.5 Deleted Constraints in R4.1.2

[constr_3066]	Restriction of <code>SenderComSpecs</code> that refer to <code>dataElements</code> mapped to the same <code>SystemSignal</code>

**Table D.13: Deleted Constraints in R4.1.2**

## D.6 Constraint and Specification Item History of this document according to AUTOSAR R4.1.3

### D.6.1 Changed Traceables in R4.1.3

N/A

### D.6.2 Added Traceables in R4.1.3

Number	Heading
[TPS_SYST_01155]	Routing of <a href="#">ISignalGroups</a>
[TPS_SYST_01156]	Definition of <a href="#">ISignalTriggerings</a> is allowed for <a href="#">ISignalGroups</a> and for <a href="#">GroupSignals</a>
[TPS_SYST_01157]	Allowed usage of attributes for <a href="#">ISignals</a> , <a href="#">ISignalGroups</a> and <a href="#">GroupSignals</a>
[TPS_SYST_02011]	<a href="#">initValues</a> of receivers that are mapped to the same Ecu
[TPS_SYST_02012]	<a href="#">initValue</a> and <a href="#">invalidValue</a> represent internal values

**Table D.14: Added Specification Items in 4.1.3**

### D.6.3 Deleted Traceables in R4.1.3

Number	Heading
[TPS_SYST_01124]	<a href="#">SystemSignal</a> fan-out and fan-in
[TPS_SYST_01125]	<a href="#">SystemSignalGroup</a> fan-out and fan-in

**Table D.15: Deleted Specification Items in 4.1.3**

### D.6.4 Added Constraints in R4.1.3

[constr_3086]	Role of <a href="#">SystemSignal</a> in n:1 sender-receiver communication
[constr_3087]	<a href="#">DataMapping</a> to <a href="#">PRPortPrototype</a>
[constr_3088]	<a href="#">SystemSignal</a> that is not part of a <a href="#">SystemSignalGroup</a> in a complete System Description
[constr_3089]	<a href="#">SystemSignal</a> that is part of exactly one <a href="#">SystemSignalGroup</a> and is not transmitted additionally as standalone <a href="#">SystemSignal</a> in a complete System Description
[constr_3090]	TpSdu transmission on a <a href="#">PhysicalChannel</a>
[constr_3094]	Consistent <a href="#">ISignalPort.communicationDirection</a> for <a href="#">ISignalTriggerings</a> of <a href="#">ISignalGroups</a> and contained <a href="#">ISignals</a>

**Table D.16: Added Constraints in R4.1.3**

## D.6.5 Changed Constraints in R4.1.3

[constr_3051]	Restriction of <a href="#">ISignalMapping</a> references

**Table D.17: Changed Constraints in R4.1.3**

## D.6.6 Deleted Constraints in R4.1.3

[constr_3502]	Role of <a href="#">SystemSignal</a> in n:1 sender-receiver communication
[constr_1206]	<a href="#">DataMapping</a> to <a href="#">PRPortPrototype</a>
[constr_3503]	<a href="#">SystemSignal</a> that is not part of a <a href="#">SystemSignalGroup</a> in a complete System Description
[constr_3054]	<a href="#">SystemSignal</a> that is part of exactly one <a href="#">SystemSignalGroup</a> and is not transmitted additionally as standalone <a href="#">SystemSignal</a> in a complete System Description

**Table D.18: Deleted Constraints in R4.1.3**

## D.7 Constraint and Specification Item History of this document according to AUTOSAR R4.2.1

### D.7.1 Added Traceables in R4.2.1

Id	Heading
[TPS_SYST_02013]	Usage of <a href="#">dataFilters</a> on <a href="#">GroupSignals</a> on receiver side
[TPS_SYST_02014]	<a href="#">ConsumedEventGroup</a> priority
[TPS_SYST_02015]	LdCom: only one <a href="#">ISignal</a> mapped to the <a href="#">ISignalIPdu</a>
[TPS_SYST_02016]	LdCom: only Transformer output and UINT8_N or UINT8_DYN supported
[TPS_SYST_02017]	LdCom: Opaque <a href="#">ISignalToIPduMapping.packingByteOrder</a>
[TPS_SYST_02018]	LdCom: <a href="#">ISignalToIPduMapping.startPosition</a> shall be 0
[TPS_SYST_02019]	LdCom: <a href="#">ISignalToIPduMapping.transferProperty</a> shall be triggered or triggeredWithoutRepetition
[TPS_SYST_02020]	LdCom: No <a href="#">IPduTiming.minimumDelay</a> defined
[TPS_SYST_02021]	LdCom: <a href="#">ISignalToIPduMapping.updateIndicationBitPosition</a> shall not be defined
[TPS_SYST_02022]	LdCom: Only the <a href="#">transmissionModeTrueTiming</a> defined
[TPS_SYST_02023]	LdCom: <a href="#">DataFilter</a> "always" if <a href="#">TransmissionModeCondition</a> defined
[TPS_SYST_02024]	LdCom: No <a href="#">ModeDrivenTransmissionModeCondition</a> defined
[TPS_SYST_02025]	LdCom: Only <a href="#">EventControlledTiming</a> defined
[TPS_SYST_02026]	LdCom: Only <a href="#">EventControlledTiming</a> with no repetition defined
[TPS_SYST_02027]	LdCom: No <a href="#">ISignalPort.timeout</a> reception timeout defined
[TPS_SYST_02028]	LdCom: No <a href="#">ISignalPort.dataFilter</a> defined
[TPS_SYST_02029]	Multiple <a href="#">ParameterDataPrototype</a> instances in an <a href="#">EcuExtract</a>
[TPS_SYST_02030]	The <a href="#">DataTransformationSet</a> contains all transformer chains
[TPS_SYST_02031]	A transformer is represented by a <a href="#">TransformationTechnology</a>
[TPS_SYST_02032]	Transformer chains are ordered list of transformers
[TPS_SYST_02033]	Order of the transformers in the configuration represents the order on the sending side
[TPS_SYST_02034]	Order of the transformers on the receiving side is the reverse of the sending side

[TPS_SYST_02035]	<code>protocol</code> contains the human readable protocol identifier
[TPS_SYST_02036]	<code>version</code> contains the version of the <code>protocol</code>
[TPS_SYST_02037]	The attribute <code>needsOriginalData</code> configures a transformer's access to the original data
[TPS_SYST_02038]	Specification of transformer class
[TPS_SYST_02039]	Specification of transformer specific properties
[TPS_SYST_02040]	Specification of transformer buffer handling
[TPS_SYST_02041]	In-place buffer handling of transformers
[TPS_SYST_02042]	Header length to be considered by transformers
[TPS_SYST_02043]	Buffer computation of transformer
[TPS_SYST_02044]	Buffer computation of transformer
[TPS_SYST_02045]	SOME/IP Transformer configuration
[TPS_SYST_02046]	E2E Transformer configuration
[TPS_SYST_02047]	Custom transformer configuration
[TPS_SYST_02048]	<code>ISignal</code> specific transformation configuration
[TPS_SYST_02049]	Transformer specific <code>TransformationISignalProps</code>
[TPS_SYST_02050]	<code>ISignal</code> specific configuration of the SOME/IP Transformer
[TPS_SYST_02051]	<code>ISignal</code> specific configuration of the E2E Transformer
[TPS_SYST_02052]	<code>ISignal</code> specific configuration of custom transformers
[TPS_SYST_02053]	A reference from <code>ISignal</code> to <code>DataTransformation</code> in the role <code>data-Transformation</code> enables data transformation
[TPS_SYST_02054]	Definition of data which shall be transformed
[TPS_SYST_02055]	Alignment of SOME/IP
[TPS_SYST_02056]	Byte Order of SOME/IP
[TPS_SYST_02057]	Interface Version of SOME/IP
[TPS_SYST_02058]	Usage of COM Based Transformer
[TPS_SYST_02059]	Routing of <code>SecuredIPdus</code>
[TPS_SYST_02060]	<code>SecuredIPdus</code>
[TPS_SYST_02061]	Routing of <code>IPdus</code> that are part of a <code>ContainerIPdu</code>
[TPS_SYST_02062]	Allowed <code>ContainedIPduProps.headerIdLongHeader</code> and <code>ContainedIPduProps.headerIdShortHeader</code> values
[TPS_SYST_02063]	Byte order of <code>ContainerIPdu</code> header information
[TPS_SYST_02064]	Reception acceptance of contained <code>IPdus</code>
[TPS_SYST_02065]	Contained <code>IPdu</code> specific transmission timeout
[TPS_SYST_02066]	<code>ContainerIPdu.thresholdSize</code>
[TPS_SYST_02067]	E2E profile
[TPS_SYST_02068]	E2E header field representation in an <code>ISignalGroup</code>
[TPS_SYST_02069]	Recommended configuration settings for E2E Profile 1 configuration setting C
[TPS_SYST_02070]	Recommended configuration settings for E2E Profile 4 configuration setting A
[TPS_SYST_02071]	Recommended configuration settings for E2E Profile 4 configuration setting B
[TPS_SYST_02072]	<code>profileName</code> of <code>EndToEndTransformationDescription</code>
[TPS_SYST_02073]	<code>EndToEndTransformationDescription.profileName</code>
[TPS_SYST_02074]	Precedence of transformer configuration settings
[TPS_SYST_02075]	Mandatory attributes in transformer configuration elements
[TPS_SYST_03001]	LdCom: <code>ISignalIPdu</code> not part of any <code>ISignalIPduGroup</code>
[TPS_SYST_03002]	Keep behavior of DHCP clients
[TPS_SYST_03003]	Ethernet priority regeneration
[TPS_SYST_03004]	VLAN specific sending behavior
[TPS_SYST_03005]	VLAN re-tagging
[TPS_SYST_03006]	Ethernet switch egress port setup

[TPS_SYST_03007]	Ethernet port scheduler algorithm
[TPS_SYST_03008]	Ethernet port scheduler priority
[TPS_SYST_03009]	Ethernet port shaper <code>idleSlope</code>
[TPS_SYST_03010]	Ethernet switch packet to traffic class assignment
[TPS_SYST_03011]	Ethernet switch traffic class to FIFO assignment
[TPS_SYST_03013]	Semi-static DHCP server configuration
[TPS_SYST_03014]	Transmission triggering by the first contained <code>IPdu</code> put into a <code>Container-IPdu</code>
[TPS_SYST_05003]	Usage of <code>DiagnosticConnection</code> in combination with a TP
[TPS_SYST_05004]	Usage of <code>DiagnosticConnection</code> in combination with UUDT
[TPS_SYST_05005]	Relation of <code>GlobalTimeDomain</code> to <code>CommunicationCluster</code>
[TPS_SYST_05006]	Chaining of <code>GlobalTimeDomains</code>
[TPS_SYST_05007]	separation of roles within a <code>GlobalTimeDomain</code>
[TPS_SYST_05008]	Semantics of a <code>GlobalTimeGateway</code>
[TPS_SYST_05009]	<code>Pdu</code> for transmitting global time information
[TPS_SYST_05010]	<code>Pdu</code> is not required on Ethernet
[TPS_SYST_05011]	Ownership of <code>GlobalTimeGateway</code>
[TPS_SYST_05013]	Semantics of <code>GlobalTimeMaster.isSystemWideGlobalTimeMaster</code>
[TPS_SYST_05014]	<code>GlobalTimeMaster.isSystemWideGlobalTimeMaster</code>
[TPS_SYST_05015]	Naming conventions

**Table D.19: Added Traceables in R4.2.1**

## D.7.2 Changed Traceables in R4.2.1

Id	Heading
[TPS_SYST_01024]	Component Clustering
[TPS_SYST_01025]	Clustering of Compositions
[TPS_SYST_01026]	Separation of Compositions
[TPS_SYST_01045]	Component Separation
[TPS_SYST_01056]	Routing of <code>ISignalIPdus</code> , <code>UserDefinedIPdus</code> , <code>MultiplexedIPdus</code> , <code>GeneralPurposeIPdus</code> , <code>ContainerIPdus</code>
[TPS_SYST_01057]	Routing of <code>NmPdus</code>
[TPS_SYST_01088]	<code>NetworkEndpoint</code> priority
[TPS_SYST_01089]	<code>ApplicationEndpoint</code> priority
[TPS_SYST_01106]	Usage of additional <code>directPdu</code> in case of variable length <code>sdu</code>
[TPS_SYST_01108]	<code>ProvidedServiceInstance</code> priority
[TPS_SYST_01138]	Low-level routing of <code>XcpPdus</code>
[TPS_SYST_01157]	Allowed usage of attributes for <code>ISignals</code> , <code>ISignalGroups</code> and <code>GroupSignals</code>
[TPS_SYST_02005]	Low-level routing of <code>J1939DcmIPdus</code>

**Table D.20: Changed Traceables in R4.2.1**

## D.7.3 Deleted Traceables in R4.2.1

Id	Heading
[TPS_SYST_01038]	Mapping of primitive arguments
[TPS_SYST_01039]	primitive Argument Mapping of UIN8-Arrays
[TPS_SYST_01040]	Mapping of composite arguments
[TPS_SYST_01051]	Handling of <code>DcmIPdus</code>



**Table D.21: Deleted Traceables in R4.2.1**

#### D.7.4 Added Constraints in R4.2.1

Id	Heading
[constr_1367]	<code>periodicResponseUdt.periodicResponseUdt</code> shall only refer to a <code>DcmIPdu</code>
[constr_1368]	Limitation of the target of references from <code>DiagnosticConnection</code>
[constr_1369]	<code>CommunicationConnectors</code> shall be attached to the same <code>Communication-Cluster</code>
[constr_1370]	Consistency of <code>GlobalTimeDomain</code>
[constr_1371]	Consistency of attribute <code>host</code>
[constr_1372]	Consistency of attribute <code>globalTimePdu</code>
[constr_1373]	<code>GlobalTimeMaster</code> with attribute <code>isSystemWideGlobalTimeMaster</code> set to TRUE
[constr_1374]	Only fan-out possible for <code>GlobalTimeGateway</code>
[constr_3095]	<code>canControllerFdAttributes</code> and <code>canControllerFdRequirements</code> are mutually exclusive.
[constr_3096]	Allowed values for <code>diagnosticMessageType</code>
[constr_3097]	Overlapping of segments of one <code>MultiplexedIPdu</code> is not allowed
[constr_3098]	Defined segments of one <code>MultiplexedIPdu</code> shall not exceed the length of the <code>MultiplexedIPdu</code>
[constr_3099]	Defined segments in a <code>DynamicPart</code> shall not exceed the length of any <code>Dynamic-PartAlternative.ipdu</code>
[constr_3100]	Defined segments in a <code>StaticPart</code> shall not exceed the length of the <code>StaticPart.ipdu</code>
[constr_3101]	Signal representation of selector field for <code>DynamicPartAlternative</code>
[constr_3102]	Restriction on usage of <code>J1939NodeName</code> attributes
[constr_3103]	Range of <code>ecuInstance</code>
[constr_3104]	Range of <code>function</code>
[constr_3105]	Range of <code>functionInstance</code>
[constr_3106]	Range of <code>identityNumber</code>
[constr_3107]	Range of <code>industryGroup</code>
[constr_3108]	Range of <code>manufacturerCode</code>
[constr_3109]	Range of <code>vehicleSystem</code>
[constr_3110]	Range of <code>vehicleSystemInstance</code>
[constr_3111]	<code>returnSignal</code> in <code>ClientServerToSignalMapping</code> is mandatory
[constr_3112]	Invalidation support for partial mapping of a data element typed by composite data type
[constr_3113]	<code>EthernetFrame</code> shall not have a <code>PduToFrameMapping</code>
[constr_3114]	<code>FlatInstanceDescriptors</code> pointing to the same <code>ParameterDataPrototype</code> shall have different <code>postBuildVariantConditions</code>
[constr_3115]	<code>FlatInstanceDescriptors</code> pointing to the same <code>ParameterDataPrototype</code> instance
[constr_3116]	Overlap of <code>ClientIdRanges</code> in the context of the enclosing System
[constr_3117]	Allowed value of attribute <code>clientId</code>
[constr_3118]	Valid reference target for <code>ClientIdDefinition.clientServerOperation.contextPort</code>
[constr_3121]	The length of transformer chains is limited to 255 transformers
[constr_3122]	At most one transformer of each transformer class inside a transformer chain
[constr_3123]	Serializer transformer shall be the first in a chain
[constr_3124]	Applicability of <code>needsOriginalData</code>



[constr_3125]	Value of attribute <code>inPlace</code> for the first transformer in a chain
[constr_3126]	<code>headerLength</code> shall be less or equal output buffer size
[constr_3127]	Certain <code>ISignals</code> always need a reference to <code>DataTransformation</code>
[constr_3128]	SOME/IP transformer configuration
[constr_3129]	Byte Order of SOME/IP transformer
[constr_3130]	Range of Interface Version
[constr_3131]	Required first data transformation for <code>comBasedSignalGroupTransformation</code>
[constr_3132]	Required COM Based Transformation for <code>comBasedSignalGroupTransformation</code>
[constr_3133]	<code>physicalLayerType</code> of connected <code>CouplingPorts</code>
[constr_3134]	The connection of two <code>CouplingPorts</code> with <code>connectionNegotiationBehavior</code> set to <code>master</code> is forbidden
[constr_3135]	The connection of two <code>CouplingPorts</code> with <code>connectionNegotiationBehavior</code> set to <code>slave</code> is forbidden
[constr_3136]	Allowed payload of <code>SecuredIPdus</code>
[constr_3137]	<code>IPduPort.rxSecurityVerification</code> is configurable on the receiver side
[constr_3138]	<code>IPduPort.rxSecurityVerification</code> validness
[constr_3139]	Usage of <code>IPduPort.rxSecurityVerification</code>
[constr_3140]	No <code>ByteOrderEnum.opaque</code> allowed for <code>System.containerIPduHeaderByteOrder</code>
[constr_3141]	Only <code>IPdus</code> shall be part of a <code>ContainerIPdu</code>
[constr_3142]	Mandatory <code>headerIdLongHeader</code> for <code>longHeader</code>
[constr_3143]	Mandatory <code>headerIdShortHeader</code> for <code>shortHeader</code>
[constr_3144]	Mandatory <code>IPdu.containedIPduProps</code> for contained <code>IPdus</code>
[constr_3146]	Partial Networking timing constraint
[constr_3148]	<code>executeDespiteDataUnavailability</code> setting in case an E2E Transformer is used
[constr_3149]	<code>TransformationTechnology</code> settings for E2E Transformer
[constr_3150]	Effect of <code>EndToEndTransformationDescription.upperHeaderBitsToShift</code> value in PROFILE_01 in case it is 0
[constr_3151]	<code>BufferProperties.headerLength</code> settings for an E2E transformer used in combination with a SOME/IP transformer
[constr_3152]	<code>BufferProperties.headerLength</code> settings for an E2E transformer used in combination with a COM Based transformer
[constr_3153]	E2E header field reservation required by COM Based transformer
[constr_3154]	<code>BufferProperties.bufferComputation</code> setting for an E2E transformer
[constr_3155]	Allowed values for <code>EndToEndTransformationDescription.upperHeaderBitsToShift</code>
[constr_3156]	Allowed values for <code>EndToEndTransformationISignalProps.dataId</code> in PROFILE_01
[constr_3157]	Allowed values for <code>EndToEndTransformationISignalProps.dataId</code> in PROFILE_01 in case <code>dataIdMode</code> is set to <code>lower12Bit</code>
[constr_3158]	Allowed values for <code>EndToEndTransformationDescription.maxDeltaCounter</code> in PROFILE_01
[constr_3159]	Allowed values for <code>EndToEndTransformationDescription.maxDeltaCounter</code> in PROFILE_04
[constr_3160]	<code>EndToEndTransformationISignalProps.dataId</code> in PROFILE_02
[constr_3161]	<code>EndToEndTransformationISignalProps.dataLength</code> in PROFILE_01, PROFILE_02, PROFILE_05
[constr_3162]	<code>EndToEndTransformationISignalProps.minDataLength</code> and <code>EndToEndTransformationISignalProps.maxDataLength</code> in PROFILE_01, PROFILE_02, PROFILE_05

[constr_3163]	EndToEndTransformationISignalProps.minDataLength and EndToEndTransformationISignalProps.maxDataLength in PROFILE_04 and PROFILE_06
[constr_3164]	EndToEndTransformationISignalProps.dataLength in PROFILE_04 and PROFILE_06
[constr_3165]	Effect of EndToEndTransformationDescription.upperHeaderBitsToShift value in PROFILE_01
[constr_3166]	EndToEndTransformationDescription.upperHeaderBitsToShift in PROFILE_02
[constr_3167]	Effect of EndToEndTransformationDescription.upperHeaderBitsToShift value in PROFILE_04, PROFILE_05 and PROFILE_06
[constr_3169]	Attribute multiplicities and values in PROFILE_02
[constr_3171]	Value of EndToEndTransformationISignalProps.dataId shall be unique in PROFILE_04, PROFILE_05 and PROFILE_06
[constr_3172]	Effect of EndToEndTransformationDescription.profileBehavior value in PROFILE_01
[constr_3173]	Effect of EndToEndTransformationDescription.profileBehavior value in PROFILE_02
[constr_3174]	EndToEndTransformationDescription settings not allowed in PROFILE_04, PROFILE_05 and PROFILE_06
[constr_3176]	Value range of windowSize
[constr_3177]	Dependency between maxErrorStateValid, maxErrorStateInit and maxErrorStateInvalid
[constr_3178]	Dependency between minOkStateValid, minOkStateInit and minOkStateInvalid
[constr_3179]	Dependency between minOkStateInit, maxErrorStateInit and windowSizeStateInit
[constr_3180]	Dependency between minOkStateValid, maxErrorStateValid and windowSizeStateValid
[constr_3181]	Dependency between minOkStateInvalid, maxErrorStateInvalid and windowSizeStateInvalid
[constr_3182]	Restriction on TransformationTechnology.transformationDescriptionVariationPoint
[constr_3183]	ISignalGroup with transformationISignalProps
[constr_3184]	Only one EndToEndTransformationISignalProps.dataId element in PROFILE_01
[constr_3185]	Multiplicity of EndToEndTransformationDescription.dataIdMode in PROFILE_01
[constr_3186]	Multiplicity of EndToEndTransformationDescription.dataIdMode in PROFILE_02, PROFILE_04, PROFILE_05 and PROFILE_06
[constr_3187]	Multiplicity of EndToEndTransformationDescription.counterOffset in PROFILE_01
[constr_3188]	Multiplicity of EndToEndTransformationDescription.counterOffset in PROFILE_02, PROFILE_04, PROFILE_05 and PROFILE_06
[constr_3189]	Multiplicity of EndToEndTransformationDescription.crcOffset in PROFILE_01
[constr_3190]	Multiplicity of EndToEndTransformationDescription.crcOffset in PROFILE_02, PROFILE_04, PROFILE_05 and PROFILE_06
[constr_3191]	Multiplicity of EndToEndTransformationDescription.dataIdNibbleOffset in PROFILE_01 and dataIdMode equal to lower12Bit
[constr_3192]	Multiplicity of EndToEndTransformationDescription.dataIdNibbleOffset in PROFILE_02, PROFILE_04, PROFILE_05 and PROFILE_06 or dataIdMode different from lower12Bit
[constr_3193]	Multiplicity of EndToEndTransformationDescription.offset in PROFILE_01

[constr_3194]	Multiplicity of <a href="#">EndToEndTransformationDescription.offset</a> in Profiles different from PROFILE_01
[constr_3195]	Allowed values for <a href="#">EndToEndTransformationDescription.maxDeltaCounter</a> in PROFILE_02
[constr_3196]	Allowed values for <a href="#">EndToEndTransformationDescription.maxDeltaCounter</a> in PROFILE_05
[constr_3197]	Allowed values for <a href="#">EndToEndTransformationDescription.maxDeltaCounter</a> in PROFILE_06
[constr_3515]	Fully filled <a href="#">EthernetPriorityRegeneration</a> table
[constr_3516]	limitation of <a href="#">Pdu.length</a> for CAN L-PDUs
[constr_3517]	Consistent setting of <a href="#">ContainedIPduProps.collectionSemantics</a> in the context of one <a href="#">ContainerIPdu</a>
[constr_3518]	Range of <a href="#">CanControllerFdConfiguration.paddingValue</a> and <a href="#">CanControllerFdConfigurationRequirements.paddingValue</a>

**Table D.22: Added Constraints in R4.2.1**

### D.7.5 Changed Constraints in R4.2.1

Id	Heading
[constr_3010]	<a href="#">ISignalIPdu</a> length shall not be exceeded
[constr_3011]	Overlapping of <a href="#">updateIndicationBits</a> of <a href="#">ISignals</a> is prohibited
[constr_3028]	<a href="#">FibexElements</a>
[constr_3037]	maximum <a href="#">Frame.frameLength</a> for CAN and LIN
[constr_3081]	Value of category in <a href="#">GeneralPurposePdu</a>
[constr_3082]	Value of category in <a href="#">GeneralPurposeIPdu</a>
[constr_3506]	Mapping of composite data type to <a href="#">SystemSignals</a> in <a href="#">SystemSignalGroup</a>

**Table D.23: Changed Constraints in R4.2.1**

### D.7.6 Deleted Constraints in R4.2.1

Id	Heading
[constr_1208]	Existence of the attribute <a href="#">DataMapping.communicationDirection</a> in the context of a <a href="#">ClientServerInterface</a>
[constr_3001]	valid <a href="#">ClientServerToSignalGroupMappings</a>
[constr_3017]	Length of multiplexed Pdu shall not be exceeded.
[constr_3026]	valid <a href="#">EmptySignalMappings</a>
[constr_3033]	Criteria for primitive argument mapping
[constr_3056]	<a href="#">pduLength</a> of the <a href="#">NmPdu</a>

**Table D.24: Deleted Constraints in R4.2.1**

## D.8 Constraint and Specification Item History of this document according to AUTOSAR R4.2.2

### D.8.1 Added Traceables in R4.2.2

Id	Heading
----	---------

[TPS_SYST_02076]	networkRepresentationProps in case the dataTypePolicy is set to transformingISignal
[TPS_SYST_02077]	Subscribers of a LinEventTriggeredFrame
[TPS_SYST_02078]	LinUnconditionalFrames associated with a LinEventTriggeredFrame
[TPS_SYST_02079]	Identification of ImplementationDataType for a given ISignal in an Ecu Extract
[TPS_SYST_02080]	Message type of SOME/IP
[TPS_SYST_02081]	PduTriggering that is used for ClientServer Communication
[TPS_SYST_02082]	SenderReceiverInterface.dataElement is typed by an ApplicationPrimitiveDataType of category VALUE or BOOLEAN and a DataTypeMap exists
[TPS_SYST_02083]	SenderReceiverInterface.dataElement is typed by an ApplicationPrimitiveDataType of category STRING and a DataTypeMap exists
[TPS_SYST_02084]	SenderReceiverInterface.dataElement is typed by an ApplicationArrayDataType and a DataTypeMap exists
[TPS_SYST_02085]	SenderReceiverInterface.dataElement is typed by an ImplementationDataType of category ARRAY
[TPS_SYST_02086]	SenderReceiverInterface.dataElement is typed by an ImplementationDataType of category VALUE or TYPE_REFERENCE
[TPS_SYST_02087]	SenderReceiverInterface.dataElement is typed by an ApplicationPrimitiveDataType of category BOOLEAN and no DataTypeMap exists
[TPS_SYST_02088]	SenderReceiverInterface.dataElement is typed by an ApplicationArrayDataType and no DataTypeMap exists
[TPS_SYST_02089]	SenderReceiverInterface.dataElement is typed by an ApplicationPrimitiveDataType of category STRING and no DataTypeMap exists
[TPS_SYST_02090]	SenderReceiverInterface.dataElement is typed by an ApplicationPrimitiveDataType of category VALUE and no DataTypeMap exists
[TPS_SYST_02091]	Routing of GeneralPurposePdus with category SD and GeneralPurposePdus with category DoIP
[TPS_SYST_02092]	Size of Fixed-size Array Length Fields
[TPS_SYST_02093]	Size of Structure Length Fields
[TPS_SYST_02094]	Size of Union Length Fields
[TPS_SYST_03015]	Offset time domain requires synchronized time domain

**Table D.25: Added Traceables in R4.2.2**

## D.8.2 Changed Traceables in R4.2.2

Id	Heading
[TPS_SYST_01003]	Standardized System Category Definitions
[TPS_SYST_01052]	Routing of UserDefinedPdus, NmPdus, NPdus, GeneralPurposePdus with category GLOBAL_TIME
[TPS_SYST_01065]	Mapping onto the ComSignalType enumeration
[TPS_SYST_01066]	Derivation of Tx COM Signals
[TPS_SYST_01067]	Derivation of Rx COM Signals
[TPS_SYST_01077]	Mapping of Com Transmission Modes to System Template elements
[TPS_SYST_01113]	FlexRay Interface fan-out support

[TPS_SYST_01157]	Allowed usage of attributes for <code>ISignals</code> , <code>ISignalGroups</code> and <code>GroupSignals</code>
[TPS_SYST_02017]	LdCom: Opaque <code>ISignalToIPduMapping.packingByteOrder</code>
[TPS_SYST_02069]	Recommended configuration settings for E2E Profile 1 configuration setting C
[TPS_SYST_02070]	Recommended configuration settings for E2E Profile 4 configuration setting A
[TPS_SYST_02071]	Recommended configuration settings for E2E Profile 4 configuration setting B

**Table D.26: Changed Traceables in R4.2.2**

### D.8.3 Deleted Traceables in R4.2.2

none

### D.8.4 Added Constraints in R4.2.2

Id	Heading
[constr_1002]	End-to-end protection does not support n:1 communication
[constr_1387]	Transmission of Variable-Size Array Data Types by means of a Transformer
[constr_3198]	Uniqueness of <code>PncMapping.shortLabel</code>
[constr_3199]	<code>ISignal</code> that has <code>dataTypePolicy</code> set to <code>transformingISignal</code> shall reference a <code>DataTransformation</code>
[constr_3201]	<code>eventGroupIdentifier</code> in <code>ConsumedEventGroups</code> that are referenced by the same <code>EventHandler</code>
[constr_3202]	<code>LinFrameTriggering</code> to <code>LinUnconditionalFrame</code> reference restriction in <code>LinEventTriggeredFrame</code> context
[constr_3203]	<code>LinFrameTriggering</code> to <code>LinSporadicFrame</code> reference restriction in <code>LinSporadicFrame</code> context
[constr_3204]	<code>LinUnconditionalFrames</code> associated with a <code>LinSporadicFrame</code>
[constr_3205]	Existence of <code>FramePort</code> for a <code>FrameTriggering</code> that references a <code>LinSporadicFrame</code>
[constr_3206]	Existence of <code>FramePort</code> for a <code>FrameTriggering</code> that references a <code>LinEventTriggeredFrame</code>
[constr_3207]	Assignment of <code>SocketConnectionIpduIdentifiers</code> used for ClientServer Communication to <code>SocketConnections</code>
[constr_3208]	<code>executeDespiteDataUnavailability</code> usage restriction
[constr_3209]	<code>CanFrameTriggerings</code> with identical PGN
[constr_3210]	<code>J1939TpPgs</code> with identical <code>pgn</code> value
[constr_3211]	<code>PduTriggerings</code> with <code>triggerIPduSendCondition</code>
[constr_3212]	Limitation of <code>DolpTpConnection.tpSdu</code>
[constr_3213]	<code>TransformationISignalProps.csErrorReaction</code> setting in case that the <code>serializer transformerClass</code> and Client/Server communication is used
[constr_3214]	<code>TransformationISignalProps.csErrorReaction</code> setting in case that a <code>transformerClass</code> different from <code>serializer</code> is used or the Client/Server communication is not used
[constr_3215]	<code>TransformationTechnology.version</code> and <code>TransformationTechnology.protocol</code> settings for request and response of a client/server communication
[constr_3216]	Usage of <code>SOMEIPTransformationISignalProps.sessionHandlingSR</code>
[constr_3218]	Range of Size of Fixed-size Array Length Fields

[constr_3219]	The existence of <a href="#">LinSlaves</a> in the <a href="#">LinMaster</a> EcuExtract
[constr_3220]	Range of Size of Structure Length Fields
[constr_3221]	Range of Size of Union Length Fields
[constr_3519]	Value of <a href="#">category</a> of <a href="#">GlobalTimeDomain</a>
[constr_3520]	Offset time domain shall be based on a synchronized time domain

**Table D.27: Added Constraints in R4.2.2**

## D.8.5 Changed Constraints in R4.2.2

Id	Heading
[constr_1368]	Limitation of the target of references from <a href="#">DiagnosticConnection</a>
[constr_1374]	Only fan-out possible for <a href="#">GlobalTimeGateway</a>
[constr_3002]	valid <a href="#">swcToImplMapping</a>
[constr_3003]	Number of CAN channels
[constr_3004]	Clustering and separation must be exclusive
[constr_3005]	valid <a href="#">EcuResourceEstimation</a>
[constr_3006]	valid <a href="#">EcuMapping</a>
[constr_3007]	<a href="#">selectorFieldCodes</a> for dynamic part alternatives
[constr_3008]	<a href="#">EcuInstance</a> subelements
[constr_3015]	Number of LIN channels
[constr_3018]	Number of FlexRay channels
[constr_3019]	In the flat ECU extract each required interface must be satisfied by connected provided interfaces
[constr_3020]	<a href="#">communicationDirection</a> of <a href="#">containedIPduGroups</a>
[constr_3021]	Mapping of <a href="#">SensorActuatorSwComponents</a> to <a href="#">SensorActuatorHwElements</a>
[constr_3025]	Usage of <a href="#">NPdus</a> in <a href="#">TpConnections</a>
[constr_3027]	Existence of <a href="#">ecuExtractVersion</a>
[constr_3049]	Role of <a href="#">SystemSignal</a> in inter-ECU client server communication with clients located on different ECUs
[constr_3081]	Value of <a href="#">category</a> in <a href="#">GeneralPurposePdu</a>
[constr_3086]	Role of <a href="#">SystemSignal</a> in n:1 sender-receiver communication
[constr_3089]	<a href="#">SystemSignal</a> that is part of exactly one <a href="#">SystemSignalGroup</a> and is not transmitted additionally as standalone <a href="#">SystemSignal</a> in a complete System Description
[constr_3095]	<a href="#">canControllerFdAttributes</a> and <a href="#">canControllerFdRequirements</a> are mutually exclusive
[constr_3153]	E2E header field reservation required by COM Based transformer
[constr_3179]	Dependency between <a href="#">minOkStateInit</a> , <a href="#">maxErrorStateInit</a> and <a href="#">windowSize</a>
[constr_3180]	Dependency between <a href="#">minOkStateValid</a> , <a href="#">maxErrorStateValid</a> and <a href="#">windowSize</a>
[constr_3181]	Dependency between <a href="#">minOkStateInvalid</a> , <a href="#">maxErrorStateInvalid</a> and <a href="#">windowSize</a>
[constr_3501]	Role of <a href="#">SystemSignal</a> in 1:n communication
[constr_3506]	Mapping of composite data type to <a href="#">SystemSignals</a> in <a href="#">SystemSignalGroup</a>
[constr_3518]	Range of <a href="#">CanControllerFdConfiguration.paddingValue</a> and <a href="#">CanControllerFdConfigurationRequirements.paddingValue</a>

**Table D.28: Changed Constraints in R4.2.2**



## D.8.6 Deleted Constraints in R4.2.2

Id	Heading
[constr_3131]	Required first data transformation for <a href="#">comBasedSignalGroupTransformation</a>
[constr_3505]	Criteria for primitive Data Mapping

Table D.29: Deleted Constraints in R4.2.2

## D.9 Constraint and Specification Item History of this document according to AUTOSAR R4.3.0

### D.9.1 Added Traceables in R4.3.0

Id	Heading
[TPS_SYST_02095]	<a href="#">LinFrameTriggering.linChecksum</a> for <a href="#">LinUnconditionalFrames</a>
[TPS_SYST_02096]	Sending of ANY finds for minor version
[TPS_SYST_02097]	Basic definition of contained <a href="#">IPdus</a>
[TPS_SYST_02098]	Header id and header type of a contained <a href="#">IPdu</a>
[TPS_SYST_02099]	Relation between <a href="#">ContainerIPdu</a> and contained <a href="#">IPdus</a> on sender side
[TPS_SYST_02100]	Relation between <a href="#">ContainerIPdu</a> and contained <a href="#">IPdus</a> on receiver side
[TPS_SYST_02101]	Usage of <a href="#">LinSlaveConfig</a> in Ecu Extract
[TPS_SYST_02102]	<a href="#">FrameTriggering.pduTriggering</a> references that shall be ignored
[TPS_SYST_02103]	Semantics of <a href="#">GlobalTimeDomain.domainId</a>
[TPS_SYST_02104]	Triggerings on <a href="#">PhysicalChannel</a>
[TPS_SYST_02105]	<a href="#">ISignalGroup</a> and <a href="#">ISignal</a> referenced from <a href="#">ISignalTriggering</a>
[TPS_SYST_02106]	Rules for the creation of references to Ports ( <a href="#">ecuCommPortInstance</a> ) with <a href="#">communicationDirection in</a> on receiving Ecu
[TPS_SYST_02107]	Shared address space for J1939 routing relations
[TPS_SYST_02108]	Address proxying for J1939 routing relations
[TPS_SYST_02109]	Absence of <a href="#">J1939SharedAddressCluster.participatingJ1939Cluster</a> to a <a href="#">J1939Cluster</a>
[TPS_SYST_02110]	Default behavior for <a href="#">ISignal.iSignalType</a>
[TPS_SYST_02111]	<a href="#">VariableDataPrototype</a> in case <a href="#">ISignal.iSignalType</a> is set to <a href="#">array</a>
[TPS_SYST_02112]	Usage of <a href="#">EventHandler.applicationEndpoint</a> reference
[TPS_SYST_02113]	Usage of <a href="#">ConsumedEventGroup.applicationEndpoint</a> reference
[TPS_SYST_02114]	Mapping of <a href="#">SwComponentPrototypes</a> onto <a href="#">SwcToEcuMapping</a> targets
[TPS_SYST_02115]	Applicability of <a href="#">GlobalTimeDomain.globalTimeDomainProps</a>
[TPS_SYST_02116]	Modeling of Service Discovery <a href="#">Pdus</a>
[TPS_SYST_02117]	Length of <a href="#">GeneralPurposePdu</a> with category SD
[TPS_SYST_02118]	Rules for the creation of references to <a href="#">IPduPorts</a> from <a href="#">PduTriggerings</a> related to <a href="#">GeneralPurposePdus</a> with category SD
[TPS_SYST_02119]	<a href="#">SocketConnectionBundles</a> for <a href="#">GeneralPurposePdus</a> with category SD
[TPS_SYST_02120]	<a href="#">runtimeIpAddressConfiguration</a> and <a href="#">runtimePortConfiguration</a> settings for SD <a href="#">SocketConnections</a>
[TPS_SYST_02121]	Scope of <a href="#">DataPrototypeTransformationProps</a>
[TPS_SYST_02123]	Size of a length field for a chosen fixed-size array
[TPS_SYST_02124]	Size of a length field for a chosen structure
[TPS_SYST_02125]	Size of a length field for a chosen union
[TPS_SYST_02126]	Alignment of a dynamic <a href="#">DataPrototype</a>
[TPS_SYST_02127]	Usage of <a href="#">DataPrototypeTransformationProps</a> in case of a <a href="#">VariableDataPrototype</a>

[TPS_SYST_02128]	Usage of <a href="#">DataPrototypeTransformationProps</a> in case of a <a href="#">ClientServerOperation</a>
[TPS_SYST_02129]	Assignment of <a href="#">SOMEIPTransformationProps</a> to a root <a href="#">AutosarDataPrototype</a> typed by an <a href="#">ApplicationDataType</a>
[TPS_SYST_02130]	Assignment of <a href="#">SOMEIPTransformationProps</a> to a subElement of a root <a href="#">AutosarDataPrototype</a> typed by an <a href="#">ApplicationDataType</a>
[TPS_SYST_02131]	Assignment of <a href="#">SOMEIPTransformationProps</a> to a root <a href="#">AutosarDataPrototype</a> typed by an <a href="#">ImplementationDataType</a>
[TPS_SYST_02132]	Assignment of <a href="#">SOMEIPTransformationProps</a> to a subElement of a root <a href="#">AutosarDataPrototype</a> typed by an <a href="#">ImplementationDataType</a>
[TPS_SYST_02133]	<a href="#">BufferProperties.bufferComputation</a> setting for a COM Based transformer
[TPS_SYST_02134]	Recommended configuration settings for E2E Profile 7 configuration setting A
[TPS_SYST_02135]	Recommended configuration settings for E2E Profile 7 configuration setting B
[TPS_SYST_02136]	Serialization based on the network representation
[TPS_SYST_02137]	Serialization based on the <a href="#">ImplementationDataTypes</a>
[TPS_SYST_02138]	Definition of the network representation
[TPS_SYST_02139]	Applicability of the <a href="#">SwDataDefProps</a> attributes for the network representation of the serialized data
[TPS_SYST_02140]	<a href="#">SocketConnectionBundle.udpChecksumHandling</a> default value
[TPS_SYST_02141]	Semantics of <a href="#">udpChecksumHandling</a>
[TPS_SYST_02142]	Reception of invalid checksum
[TPS_SYST_02143]	Support of Multisource Pdu routing
[TPS_SYST_02144]	<a href="#">ComTimeoutSubstitution</a> does not apply for signal gateway operation
[TPS_SYST_02145]	Default behavior for not defined <a href="#">nmPncParticipation</a>
[TPS_SYST_02146]	Explicit definition of <a href="#">pncVector</a> at <a href="#">NmPdu</a>
[TPS_SYST_02147]	Implicit definition of <a href="#">pncVector</a> at <a href="#">NmPdu</a>
[TPS_SYST_02148]	Meaning of <a href="#">useAsCryptographicIPdu</a> that is not set or set to false
[TPS_SYST_02149]	Meaning of <a href="#">useAsCryptographicIPdu</a> that is set to true
[TPS_SYST_02150]	Role of <a href="#">SystemSignal</a> in inter-ECU client server communication over Ethernet with clients located on different ECUs in case that <a href="#">LdCom</a> is used
[TPS_SYST_02151]	MetaData support required for inter-ECU client server communication over Ethernet with clients located on different ECUs if one <a href="#">SystemSignal</a> per communication direction is used
[TPS_SYST_02152]	Security profile
[TPS_SYST_02153]	Standardized values for the attribute <a href="#">category</a> of meta-class <a href="#">SecureCommunicationFreshnessProps</a>
[TPS_SYST_02154]	Standardized values for the attribute <a href="#">category</a> of meta-class <a href="#">SecureCommunicationAuthenticationProps</a>
[TPS_SYST_02155]	Recommended configuration settings for E2E Profile 11 configuration setting C
[TPS_SYST_02156]	Length of <a href="#">GeneralPurposeIPdu</a> with category <a href="#">SOMEIP_SEGMENTED_IPDU</a>
[TPS_SYST_02157]	Default value for the attribute <a href="#">category</a> of meta-class <a href="#">EthernetCommunicationConnector</a>
[TPS_SYST_02158]	Default value for the attribute <a href="#">category</a> of meta-class <a href="#">EthernetCommunicationController</a>
[TPS_SYST_02159]	Default value for the attribute <a href="#">category</a> of meta-class <a href="#">EthernetPhysicalChannel</a>
[TPS_SYST_02160]	<a href="#">EthernetPhysicalChannels</a> with different <a href="#">category</a> values are not allowed within an <a href="#">EthernetCluster</a>



[TPS_SYST_02161]	Role of <a href="#">SystemSignal</a> in inter-ECU client server communication over Ethernet with clients located on different ECUs in case that Com is used
[TPS_SYST_03016]	Applicability of <a href="#">EthGlobalTimeManagedCouplingPort.pdelayRequestPeriod</a>
[TPS_SYST_03017]	Reference to <a href="#">CouplingPort</a> in the context of a <a href="#">GlobalTimeDomain</a>
[TPS_SYST_03018]	Aggregation of PNCs at the <a href="#">hostPort</a>
[TPS_SYST_03019]	Modeling of <a href="#">CouplingPorts</a> for managed <a href="#">CouplingElement</a>
[TPS_SYST_03020]	Default value for <a href="#">CouplingPort.couplingPortRole</a> if not defined
[TPS_SYST_03021]	Routing of <a href="#">GeneralPurposePdus</a> with category GLOBAL_TIME

**Table D.30: Added Traceables in R4.3.0**

## D.9.2 Changed Traceables in R4.3.0

Id	Heading
[TPS_SYST_01001]	Definition of <a href="#">SwcToEcuMapping</a>
[TPS_SYST_01052]	Routing of <a href="#">UserDefinedPdus</a> , <a href="#">NmPduS</a> , <a href="#">NPduS</a>
[TPS_SYST_01065]	Mapping onto the <a href="#">ComSignalType</a> enumeration
[TPS_SYST_01066]	Derivation of Tx COM Signals
[TPS_SYST_01067]	Derivation of Rx COM Signals
[TPS_SYST_01118]	Support of Multicast <a href="#">Pdu</a> routing
[TPS_SYST_01142]	Rules for the creation of references to Ports ( <a href="#">ecuCommPortInstance</a> ) with <a href="#">communicationDirection out</a> on sending Ecu
[TPS_SYST_02002]	<a href="#">SoAdRoutingGroup</a> for Services with Methods
[TPS_SYST_02003]	<a href="#">SoAdRoutingGroups</a> for Services with event groups
[TPS_SYST_02004]	<a href="#">SoAdRoutingGroups</a> for Services with event groups that contain triggered events
[TPS_SYST_02033]	Order of the <a href="#">transformerChain</a> references in the configuration represents the order on the sending side
[TPS_SYST_02044]	Buffer computation of transformer
[TPS_SYST_02073]	<a href="#">EndToEndTransformationDescription.profileName</a>
[TPS_SYST_02092]	Size of Fixed-size Array Length Fields
[TPS_SYST_02093]	Size of Structure Length Fields
[TPS_SYST_02094]	Size of Union Length Fields
[TPS_SYST_05009]	<a href="#">GlobalTimeDomain.globalTimePduTriggering</a> for transmitting global time information
[TPS_SYST_05010]	<a href="#">GlobalTimeDomain.globalTimePduTriggering</a> is not required on Ethernet

**Table D.31: Changed Traceables in R4.3.0**

## D.9.3 Deleted Traceables in R4.3.0

Id	Heading
[TPS_SYST_01027]	Mapping of specific SW components to dedicated Ecus
[TPS_SYST_01028]	Task of the System Generator
[TPS_SYST_01029]	Mapping of specific SW components to exclusive Ecus
[TPS_SYST_01141]	Derivation of <a href="#">ComSignalType</a>

**Table D.32: Deleted Traceables in R4.3.0**

#### D.9.4 Added Constraints in R4.3.0

Id	Heading
[constr_1441]	In AUTOSAR, the transmission of union data types over the network is only supported by the SOME/IP Transformer
[constr_1463]	Applicable values for <code>J1939Cluster.networkId</code>
[constr_3222]	No <code>ByteOrderEnum.opaque</code> allowed for <code>PduToFrameMapping.packingByteOrder</code>
[constr_3223]	No <code>ByteOrderEnum.opaque</code> allowed for <code>MultiplexedIPdu.selectorFieldByteOrder</code>
[constr_3224]	No <code>ByteOrderEnum.opaque</code> allowed for <code>SegmentPosition.segmentByteOrder</code> .
[constr_3225]	<code>LinFrameTriggering.linChecksum</code> not allowed for <code>LinSporadicFrames</code>
[constr_3226]	<code>LinFrameTriggering.linChecksum</code> for <code>LinEventTriggeredFrames</code>
[constr_3227]	<code>NmNode.nmPassiveModeEnabled</code> setting
[constr_3229]	<code>SwComponentPrototype</code> mapped to an <code>ApplicationPartition</code> and <code>EcuInstance</code>
[constr_3230]	Usage of <code>SenderRecRecordElementMapping.applicationRecordElement</code>
[constr_3231]	Usage of <code>IndexedArrayElement.applicationArrayElement</code>
[constr_3232]	<code>ApplicationPartition</code> is allowed to be mapped to only one <code>EcuPartition</code>
[constr_3239]	Consistent mapping of software-component to <code>J1939NmNode</code>
[constr_3240]	Consistent mapping of <code>J1939ControllerApplication</code> to <code>EcuInstance</code>
[constr_3241]	Usage of <code>AssignFrameId.messageId</code>
[constr_3242]	Usage of <code>UnassignFrameId.messageId</code>
[constr_3243]	<code>FrameTriggering.pduTriggering</code> condition
[constr_3244]	Usage of <code>SenderRecRecordElementMapping.implementationRecordElement</code>
[constr_3245]	Usage of <code>IndexedArrayElement.implementationArrayElement</code>
[constr_3246]	<code>Frame.packingByteOrder</code> mix within a <code>Frame</code> is not allowed
[constr_3247]	Byte order mix within a <code>MultiplexedIPdu</code> is not allowed
[constr_3248]	Category of <code>HwElement</code> for <code>ECUMapping</code>
[constr_3249]	Category of <code>HwElement</code> for <code>SwcToEcuMapping</code>
[constr_3250]	<code>PduTriggering.iSignalTriggering</code> condition
[constr_3251]	Value of <code>GlobalTimeDomain.domainId</code> in subDomain chains
[constr_3252]	<code>ISignalTriggering.iSignalPort</code> reference condition
[constr_3253]	<code>PduTriggering.iPduPort</code> reference condition
[constr_3254]	<code>FrameTriggering.framePort</code> reference condition
[constr_3255]	<code>FrameTriggering.pduTriggering</code> reference condition with regard to the <code>PhysicalChannel</code>
[constr_3256]	<code>PduTriggering.iSignalTriggering</code> reference condition with regard to the <code>PhysicalChannel</code>
[constr_3257]	TimeSyncTechnology of servers and clients in a time synchronized network.
[constr_3258]	Restriction on <code>ISignal.length</code> in case <code>iSignalType</code> is set to <code>array</code>
[constr_3259]	Allowed use of <code>SdServerConfig.capabilityRecord</code>
[constr_3260]	Allowed use of <code>SdClientConfig.capabilityRecord</code>
[constr_3261]	<code>GlobalTimeDomain.globalTimePduTriggering</code> category
[constr_3262]	<code>ConsumedEventGroup.eventGroupIdentifier</code> is mandatory
[constr_3263]	Restriction of usage of <code>SwcToEcuMapping</code> in a <code>System</code>
[constr_3264]	Server side <code>ClientServerToSignalMappings</code> in case of a n:1 inter-ECU client-server communication
[constr_3265]	<code>TransformationTechnology.hasInternalState</code> setting for an E2E transformer
[constr_3266]	<code>TransformationTechnology.hasInternalState</code> setting for a SOME/IP Transformer

[constr_3267]	<a href="#">PduTriggerings</a> in Service Discovery <a href="#">SocketConnectionBundles</a>
[constr_3268]	Service Discovery <a href="#">SocketConnectionBundle</a> <a href="#">serverPort</a> reference to a <a href="#">TpPort</a>
[constr_3269]	Service Discovery <a href="#">SocketConnection</a> <a href="#">clientPort</a> reference to a <a href="#">TpPort</a>
[constr_3270]	Service Discovery <a href="#">SocketConnection</a> <a href="#">clientPort</a> reference to an IP Address
[constr_3271]	<a href="#">clientIpAddrFromConnectionRequest</a> and <a href="#">clientPortFromConnectionRequest</a> settings for SD <a href="#">SocketConnections</a>
[constr_3272]	<a href="#">SocketConnectionIpduIdentifier.headerId</a> setting for SD <a href="#">SocketConnectionBundles</a>
[constr_3273]	Service Discovery multicast <a href="#">SocketConnectionBundle</a> 's <a href="#">serverPort</a> reference to an IP Address
[constr_3274]	Service Discovery unicast <a href="#">SocketConnectionBundle</a> 's <a href="#">serverPort</a> reference to an IP Address
[constr_3275]	<a href="#">PduTriggering</a> containment in different <a href="#">PdurIPduGroups</a> of the same <a href="#">EcuInstance</a> is not allowed
[constr_3276]	Prohibition of usage of allowedIPv6ExtHeaders in IPv4 <a href="#">SocketConnections</a>
[constr_3277]	Restriction of usage of <a href="#">IPv6ExtHeaderFilterLists</a> in IPv6 <a href="#">SocketConnections</a>
[constr_3278]	Usage of <a href="#">SOMEIPTransformationProps.sizeOfArrayLengthField</a>
[constr_3279]	Usage of <a href="#">SOMEIPTransformationProps.sizeOfStructLengthField</a>
[constr_3280]	Usage of <a href="#">SOMEIPTransformationProps.sizeOfUnionLengthField</a>
[constr_3281]	Usage of <a href="#">SOMEIPTransformationProps.alignment</a>
[constr_3282]	SOME/IP Transformation settings for static size arrays in the context of an <a href="#">ISignal</a>
[constr_3283]	SOME/IP Transformation settings for structures in the context of an <a href="#">ISignal</a>
[constr_3284]	SOME/IP Transformation settings for unions in the context of an <a href="#">ISignal</a>
[constr_3285]	Alignment of variable data length data elements in the context of an <a href="#">ISignal</a>
[constr_3286]	<a href="#">ISignal.length</a> shall be consistent to transformer configuration
[constr_3297]	Prohibition of usage of allowedTcpOptions in Udp <a href="#">SocketConnections</a>
[constr_3298]	<a href="#">Ipv6Configuration.ipv6Address</a> range in case of <a href="#">enableAnycast</a>
[constr_3299]	<a href="#">SocketConnectionBundle.pathMtuDiscoveryEnabled</a> setting dependency
[constr_3311]	Usage of <a href="#">SocketConnectionBundle.flowLabel</a>
[constr_3312]	Consistency of <a href="#">vlanPriority</a> and <a href="#">EthernetCommunicationConnector</a>
[constr_3313]	E2E transformer configuration
[constr_3314]	<a href="#">BufferProperties.bufferComputation</a> is mandatory
[constr_3315]	The value of V0 in <a href="#">BufferProperties.bufferComputation</a> setting for a COM Based transformer
[constr_3316]	Allowed values for <a href="#">EndToEndTransformationDescription.maxDeltaCounter</a> in PROFILE_07
[constr_3317]	Assuring the same data interpretation on the sender and receiver sides in case of serialization based on the <a href="#">ImplementationDataTypes</a>
[constr_3318]	Allowed use of <a href="#">ISignal.networkRepresentationProps</a>
[constr_3319]	Existence of <a href="#">DataPrototypeTransformationProps.networkRepresentationProps</a>
[constr_3322]	Consistent setting of <a href="#">SocketConnectionIpduIdentifier.pduCollectionSemantics</a> in the context of one <a href="#">SocketConnectionBundle</a>
[constr_3323]	Relation between <a href="#">NmCluster.nmPncParticipation</a> and <a href="#">PncMapping.pncGroup</a>
[constr_3324]	Category of <a href="#">SecureCommunicationFreshnessProps</a> and <a href="#">SecureCommunicationAuthenticationProps</a>
[constr_3325]	<a href="#">SecureCommunicationFreshnessProps</a> and <a href="#">SecureCommunicationAuthenticationProps</a> attribute values for predefined categories
[constr_3326]	Allowed values for <a href="#">EndToEndTransformationISignalProps.dataIdMode</a> in PROFILE_11
[constr_3327]	Effect of <a href="#">EndToEndTransformationDescription.upperHeaderBitsToShift</a> value in PROFILE_22

[constr_3328]	SomeIpTpConnection.transportPdu reference restriction
[constr_3329]	SomeIpTpConnection.tpSdu reference restriction
[constr_3330]	Same transportPdu shall not be used in different SomeIpTpConnections
[constr_3331]	Standardized values for the attribute category of meta-class EthernetCommunicationConnector
[constr_3332]	Standardized values for the attribute category of meta-class EthernetCommunicationController
[constr_3333]	Standardized values for the attribute category of meta-class EthernetPhysicalChannel
[constr_3334]	Allowed references between EthernetPhysicalChannel and EthernetCommunicationConnector
[constr_3335]	Allowed references between EthernetCommunicationConnector and EthernetCommunicationController
[constr_3336]	EthernetPhysicalChannel.soAdConfig in case of WIRELESS EthernetPhysicalChannel
[constr_3337]	IPduPort.useAuthDataFreshness is configurable on the receiver side
[constr_3338]	IPduPort.useAuthDataFreshness validness
[constr_3339]	Relation between authDataFreshnessStartPosition, authDataFreshnessLength and useAuthDataFreshness
[constr_3521]	defaultVlan and vlanMembership
[constr_3522]	vlanModifier and vlanMembership
[constr_3523]	CouplingPort and PncMapping in the scope of an EthernetPhysicalChannel
[constr_3524]	Definition of couplingPortRole on CouplingPort for managed CouplingElement
[constr_3525]	Connection of CouplingPort with couplingPortRole set to upLinkPort

**Table D.33: Added Constraints in R4.3.0**

### D.9.5 Changed Constraints in R4.3.0

Id	Heading
[constr_1372]	Consistency of attribute globalTimePduTriggering
[constr_3042]	pncVectorLength range
[constr_3049]	Role of SystemSignal in inter-ECU client server communication with clients located on different ECUs in case of networks other than Ethernet
[constr_3069]	Allowed CanNmCluster.nmNidPosition values
[constr_3070]	Allowed CanNmCluster.nmCbvPosition values
[constr_3078]	Allowed UdpNmCluster.nmNidPosition values
[constr_3079]	Allowed UdpNmCluster.nmCbvPosition values
[constr_3082]	Value of category in GeneralPurposeIPdu
[constr_3113]	AbstractEthernetFrame shall not have a PduToFrameMapping
[constr_3121]	The length of transformer chains is limited to 255 transformers
[constr_3128]	SOME/IP transformer configuration
[constr_3136]	Allowed payload of SecuredIPdus
[constr_3149]	TransformationTechnology.needsOriginalData settings for E2E Transformer
[constr_3150]	Effect of EndToEndTransformationDescription.upperHeaderBitsToShift value in PROFILE_01 and PROFILE_11 in case it is 0
[constr_3151]	BufferProperties.headerLength settings for an E2E transformer used in combination with a SOME/IP transformer
[constr_3153]	E2E header field reservation required by COM Based transformer

[constr_3154]	<a href="#">BufferProperties.bufferComputation</a> setting for an E2E transformer when used together with a Com-based transformer
[constr_3156]	Allowed values for <a href="#">EndToEndTransformationISignalProps.dataId</a> in PROFILE_01 and PROFILE_11
[constr_3157]	Allowed values for <a href="#">EndToEndTransformationISignalProps.dataId</a> in PROFILE_01 and PROFILE_11 in case <a href="#">dataIdMode</a> is set to <a href="#">lower12Bit</a>
[constr_3158]	Allowed values for <a href="#">EndToEndTransformationDescription.maxDeltaCounter</a> in PROFILE_01 and PROFILE_11
[constr_3160]	<a href="#">EndToEndTransformationISignalProps.dataId</a> in PROFILE_02 and PROFILE_22
[constr_3161]	<a href="#">EndToEndTransformationISignalProps.dataLength</a> in PROFILE_01, PROFILE_02, PROFILE_05, PROFILE_11, PROFILE_22
[constr_3162]	<a href="#">EndToEndTransformationISignalProps.minDataLength</a> and <a href="#">EndToEndTransformationISignalProps.maxDataLength</a> in PROFILE_01, PROFILE_02, PROFILE_05, PROFILE_11, PROFILE_22
[constr_3163]	<a href="#">EndToEndTransformationISignalProps.minDataLength</a> and <a href="#">EndToEndTransformationISignalProps.maxDataLength</a> in PROFILE_04, PROFILE_06, PROFILE_07
[constr_3164]	<a href="#">EndToEndTransformationISignalProps.dataLength</a> in PROFILE_04, PROFILE_06, PROFILE_07
[constr_3165]	Effect of <a href="#">EndToEndTransformationDescription.upperHeaderBitsToShift</a> value in PROFILE_01, PROFILE_11
[constr_3167]	Effect of <a href="#">EndToEndTransformationDescription.upperHeaderBitsToShift</a> value in PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07
[constr_3169]	Attribute multiplicities and values in PROFILE_02 and PROFILE_22
[constr_3171]	Value of <a href="#">EndToEndTransformationISignalProps.dataId</a> shall be unique in PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07
[constr_3174]	<a href="#">EndToEndTransformationDescription</a> settings not allowed in PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_11, PROFILE_22
[constr_3184]	Only one <a href="#">EndToEndTransformationISignalProps.dataId</a> element in PROFILE_01 and PROFILE_11
[constr_3185]	Multiplicity of <a href="#">EndToEndTransformationDescription.dataIdMode</a> in PROFILE_01 and PROFILE_11
[constr_3186]	Multiplicity of <a href="#">EndToEndTransformationDescription.dataIdMode</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_22
[constr_3187]	Multiplicity of <a href="#">EndToEndTransformationDescription.counterOffset</a> in PROFILE_01 and PROFILE_11
[constr_3188]	Multiplicity of <a href="#">EndToEndTransformationDescription.counterOffset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_22
[constr_3189]	Multiplicity of <a href="#">EndToEndTransformationDescription.crcOffset</a> in PROFILE_01 and PROFILE_11
[constr_3190]	Multiplicity of <a href="#">EndToEndTransformationDescription.crcOffset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_22
[constr_3191]	Multiplicity of <a href="#">EndToEndTransformationDescription.dataIdNibbleOffset</a> in PROFILE_01, PROFILE_11 and <a href="#">dataIdMode</a> equal to <a href="#">lower12Bit</a>
[constr_3192]	Multiplicity of <a href="#">EndToEndTransformationDescription.dataIdNibbleOffset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_22 or <a href="#">dataIdMode</a> different from <a href="#">lower12Bit</a>
[constr_3193]	Multiplicity of <a href="#">EndToEndTransformationDescription.offset</a> in PROFILE_01 and PROFILE_11
[constr_3194]	Multiplicity of <a href="#">EndToEndTransformationDescription.offset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_22

[constr_3195]	Allowed values for <code>EndToEndTransformationDescription.maxDeltaCounter</code> in PROFILE_02 and PROFILE_22
[constr_3514]	No two <code>ISignalToIPduMappings</code> shall reference the identical <code>ISignal</code>

**Table D.34: Changed Constraints in R4.3.0**

## D.9.6 Deleted Constraints in R4.3.0

Id	Heading
[constr_3032]	Combinations of <code>SwcToEcuMapping</code> targets
[constr_3061]	<code>CompuMethod</code> specification in <code>networkRepresentationProps</code>
[constr_3207]	Assignment of <code>SocketConnectionIpdIdentifiers</code> used for ClientServer Communication to <code>SocketConnections</code>

**Table D.35: Deleted Constraints in R4.3.0**

## D.10 Constraint and Specification Item History of this document according to AUTOSAR R4.3.1

### D.10.1 Added Traceables in R4.3.1

Number	Heading
[TPS_SYST_02162]	Routing of <code>ISignals</code> of <code>ISignalGroups</code>
[TPS_SYST_02163]	Applicability of <code>syncLossTimeout</code>
[TPS_SYST_02164]	LdCom: No <code>ISignalPort.firstTimeout</code> reception timeout defined
[TPS_SYST_02165]	Derivation of <code>CanNmPnFilterMaskByte</code>
[TPS_SYST_02166]	Derivation of <code>UdpNmPnFilterMaskByte</code>
[TPS_SYST_02167]	Derivation of <code>FrNmPnFilterMaskByte</code>
[TPS_SYST_02168]	MetaData support required if <code>CanFrameTriggering.txMask</code> is used
[TPS_SYST_02169]	MetaData support may be required if <code>CanFrameTriggering.rxMask</code> is used
[TPS_SYST_02170]	<code>category</code> of the <code>GeneralPurposeConnection</code>
[TPS_SYST_02171]	Secured Area in payload Pdu
[TPS_SYST_02172]	Modeling of <code>SecuredIPdu</code> in case <code>useAsCryptographicIPdu</code> is set to false
[TPS_SYST_02173]	Modeling of <code>SecuredIPdu</code> in case <code>useAsCryptographicIPdu</code> is set to true
[TPS_SYST_02174]	Initial Wait Phase configuration for a <code>ProvidedServiceInstance</code>
[TPS_SYST_02175]	Repetition Wait Phase configuration for a <code>ProvidedServiceInstance</code>
[TPS_SYST_02176]	Main Phase configuration for a <code>ProvidedServiceInstance</code>
[TPS_SYST_02177]	TTL for Offer Service Entries
[TPS_SYST_02178]	Servers <code>RequestResponseDelay</code> for received <code>FindService</code> entries
[TPS_SYST_02179]	Server Capability Records







Number	Heading
[TPS_SYST_02180]	Usage of <a href="#">EventHandler.multicastThreshold</a>
[TPS_SYST_02181]	TTL for <a href="#">SubscribeEventGroupAck</a> Entries
[TPS_SYST_02182]	Servers <a href="#">RequestResponseDelay</a> for received <a href="#">SubscribeEventGroup</a> entries
[TPS_SYST_02183]	Initial Wait Phase configuration for a <a href="#">ConsumedServiceInstance</a>
[TPS_SYST_02184]	Repetition Wait Phase configuration for a <a href="#">ConsumedServiceInstance</a>
[TPS_SYST_02185]	TTL for Find Service Entries
[TPS_SYST_02186]	Client Capability Records
[TPS_SYST_02187]	<a href="#">SdClientConfig.ttl</a> for <a href="#">SubscribeEventGroup</a> Entries
[TPS_SYST_02188]	Clients <a href="#">RequestResponseDelay</a> for received <a href="#">ServiceOffer</a> entries
[TPS_SYST_02189]	Setting of <a href="#">useSecuredPduHeader</a> attribute

**Table D.36: Added Traceables in R4.3.1**

### D.10.2 Changed Traceables in R4.3.1

Number	Heading
[TPS_SYST_01120]	Precedence of <a href="#">ISignalMappings</a>
[TPS_SYST_02098]	Header id and header type of a contained <a href="#">IPdu</a>
[TPS_SYST_02100]	Relation between <a href="#">ContainerIPdu</a> and contained <a href="#">IPdu</a> s on receiver side
[TPS_SYST_02112]	Usage of <a href="#">EventHandler.applicationEndpoint</a> reference

**Table D.37: Changed Traceables in R4.3.1**

### D.10.3 Deleted Traceables in R4.3.1

Number	Heading
[TPS_SYST_02005]	Low-level routing of <a href="#">J1939DcmIPdus</a>
[TPS_SYST_02160]	<a href="#">EthernetPhysicalChannels</a> with different <a href="#">category</a> values are not allowed within an <a href="#">EthernetCluster</a>

**Table D.38: Deleted Traceables in R4.3.1**

#### D.10.4 Added Constraints in R4.3.1

Number	Heading
[constr_3364]	<code>headerLength</code> shall be a multiple of 8
[constr_3365]	<code>EthernetPhysicalChannels</code> with different <code>category</code> values are not allowed within an <code>EthernetCluster</code>
[constr_3373]	Limitation on the number of <code>PhysicalChannels</code> that are referencing a <code>CommunicationConnector</code>
[constr_3378]	Maximal one <code>AliasNameAssignment</code> allowed per <code>FlatInstanceDescriptor</code>
[constr_3379]	Multiple <code>SocketAddress</code> entries with the same IP Address, Protocol and Port in the context of a given <code>EcuInstance</code>
[constr_3383]	Standardized values for the attribute <code>category</code> of meta-class <code>GeneralPurposeConnection</code>
[constr_3384]	<code>PduTriggerings</code> referenced by <code>GeneralPurposeConnection</code> shall be defined on the same <code>PhysicalChannel</code>
[constr_3385]	<code>XcpChannel</code> is allowed to reference exactly two <code>PduTriggerings</code>
[constr_3386]	<code>XcpChannel</code> is only allowed to reference <code>PduTriggerings</code> of <code>GeneralPurposeIPdus</code> with category XCP
[constr_3399]	Existence of <code>securedAreaOffset</code> and <code>securedAreaLength</code>
[constr_3400]	Usage of <code>SdClientConfig</code> attributes in <code>ConsumedServiceInstance</code> and <code>ConsumedEventGroup</code>
[constr_3401]	Usage of <code>SdServerConfig</code> attributes in <code>ProvidedServiceInstance</code> and <code>EventHandler</code>
[constr_3402]	Mandatory <code>offset</code> if <code>noHeader</code> is used
[constr_3403]	Usage of <code>ContainerIPdu.rxAcceptContainedIPdu</code> if <code>noHeader</code> is used
[constr_3404]	Usage of <code>ContainedIPduProps.updateIndicationBitPosition</code>
[constr_3405]	Dynamic Length <code>IPdu</code> inside of a static configured <code>ContainerIPdu</code>
[constr_3406]	All signals before <code>authDataFreshnessStartPosition</code> shall have a static length
[constr_3407]	Freshness Value in Authentic <code>IPdu</code> is not allowed to be used in case of <code>ContainerIPdu</code> with a dynamic layout

**Table D.39: Added Constraints in R4.3.1**

#### D.10.5 Changed Constraints in R4.3.1

Number	Heading
[constr_2025]	Uniqueness of <code>symbol</code> attributes
[constr_3052]	Complete <code>ISignalMapping</code> of <code>ISignalGroup</code> signals
[constr_3053]	Complete <code>ISignalMapping</code> of target <code>ISignalGroup</code>
[constr_3136]	Allowed payload of <code>SecuredIPdus</code>

**Table D.40: Changed Constraints in R4.3.1**



## D.10.6 Deleted Constraints in R4.3.1

Number	Heading
[constr_3139]	Usage of <a href="#">IPduPort.rxSecurityVerification</a>

**Table D.41: Deleted Constraints in R4.3.1**

## D.11 Constraint and Specification Item History of this document according to AUTOSAR R4.4.0

### D.11.1 Added Traceables in R4.4.0

Number	Heading
[TPS_SYST_02190]	<a href="#">J1939TpConnection.transmitter</a> reference in case of broadcast connection
[TPS_SYST_02191]	<a href="#">J1939TpConnection.transmitter</a> reference in case that the source is an unknown node
[TPS_SYST_02192]	<a href="#">J1939TpConnection.receiver</a> reference in case that the destination is an unknown node
[TPS_SYST_02193]	<a href="#">J1939TpConnection.receiver</a> reference in case that the destination is connected to a configured <a href="#">J1939NmNode</a>
[TPS_SYST_02194]	Identification of E2E protected data in case of PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07
[TPS_SYST_02195]	Applicable use cases for <a href="#">DataPrototypeInSystemRef</a>
[TPS_SYST_02196]	<a href="#">PduTriggering</a> is referenced by several <a href="#">ContainerIPdus</a>
[TPS_SYST_02197]	DRAFT
[TPS_SYST_02198]	Applicable <a href="#">transferProperty</a> for <a href="#">ISignal</a>
[TPS_SYST_02199]	Applicable <a href="#">transferProperty</a> for <a href="#">ISignalGroup</a> and no group signal has <a href="#">transferProperty</a> defined
[TPS_SYST_02200]	Applicable <a href="#">transferProperty</a> for <a href="#">ISignalGroup</a> and group signals have <a href="#">transferProperty</a> defined
[TPS_SYST_02201]	Existence of <a href="#">CanFrameTriggering.identifier</a>
[TPS_SYST_02202]	Modeling of bus mirroring
[TPS_SYST_02203]	BusMirroring to CAN destination channel
[TPS_SYST_02204]	BusMirroring to FlexRay destination channel
[TPS_SYST_02205]	BusMirroring to Ethernet destination channel
[TPS_SYST_02206]	BusMirroring to UserDefined destination channel
[TPS_SYST_05016]	Assignment of TLV data ids
[TPS_SYST_05017]	Definition of the applicable wire type attribute <a href="#">SOMEIPTransformation-ISignalProps.isDynamicLengthFieldSize</a> shall be used to define the applicable wire type



△

Number	Heading
[TPS_SYST_05018]	Semantics of meta-class <code>LinSlave</code>
[TPS_SYST_05019]	Semantics of <code>LinErrorResponse.responseError</code>
[TPS_SYST_05020]	Semantics of <code>CryptoServiceMapping</code>
[TPS_SYST_05021]	Semantics of <code>SecOcCryptoServiceMapping</code>
[TPS_SYST_05022]	Semantics of <code>PduTriggering.secOcCryptoMapping</code>
[TPS_SYST_05023]	Semantics of <code>CryptoServicePrimitive</code>
[TPS_SYST_05024]	Semantics of <code>CryptoServiceKey</code>
[TPS_SYST_05025]	Standardized values of <code>CryptoServicePrimitive.algorithmFamily</code> and <code>CryptoServiceKey.algorithmFamily</code>
[TPS_SYST_05026]	Relation of <code>CryptoServicePrimitive.algorithmFamily</code> to <code>CryptoServiceKey.algorithmFamily</code>
[TPS_SYST_05027]	Standardized values of <code>CryptoServicePrimitive.algorithmMode</code>
[TPS_SYST_05028]	Semantics of <code>CryptoServiceKey.keyStorageType</code>
[TPS_SYST_05029]	Semantics of meta-class <code>TlsCryptoServiceMapping</code>
[TPS_SYST_05030]	Semantics of <code>TlsCryptoCipherSuite</code>
[TPS_SYST_05031]	Existence of <code>TlsCryptoCipherSuite.keyExchange</code> vs. <code>TlsCryptoServiceMapping.keyExchange</code>
[TPS_SYST_05032]	Semantics of <code>CryptoServiceCertificate</code>
[TPS_SYST_05033]	Existence of <code>TlsCryptoCipherSuite.certificate</code> in the <i>client</i> role

**Table D.42: Added Traceables in R4.4.0**

### D.11.2 Changed Traceables in R4.4.0

Number	Heading
[TPS_SYST_01100]	TP routing without using transport protocol modules (low-level routing)
[TPS_SYST_01101]	TP routing using transport protocol modules
[TPS_SYST_01114]	Frame fan-out support
[TPS_SYST_02064]	Reception acceptance of contained <code>IPdus</code>
[TPS_SYST_02068]	Transformer header field representation in an <code>ISignalGroup</code>
[TPS_SYST_02099]	Relation between <code>ContainerIPdu</code> and contained <code>PduTriggerings</code> on sender side
[TPS_SYST_02113]	Usage of <code>ConsumedEventGroup.applicationEndpoint</code> reference
[TPS_SYST_02131]	Assignment of <code>SOMEIPTransformationProps</code> to a root <code>AutosarDataPrototype</code> typed by an <code>ImplementationDataType</code>

**Table D.43: Changed Traceables in R4.4.0**

### D.11.3 Deleted Traceables in R4.4.0

Number	Heading
[TPS_SYST_01046]	ShortNames of <a href="#">LinSlaveConfig</a> and <a href="#">LinSlave</a>
[TPS_SYST_01049]	Handling of <a href="#">IPdus</a> with dynamic signals
[TPS_SYST_02112]	Usage of <a href="#">EventHandler</a> .applicationEndpoint reference

**Table D.44: Deleted Traceables in R4.4.0**

### D.11.4 Added Constraints in R4.4.0

Number	Heading
[constr_1641]	Consistent assignment of TLV data ids to <a href="#">ApplicationRecordDataType</a>
[constr_1642]	Consistent assignment of TLV data ids to <a href="#">ImplementationDataType</a> or <a href="#">ImplementationDataTypeElement</a>
[constr_1643]	Completeness of the existence of a set of <a href="#">TlvDataIdDefinition.tlvArguments</a>
[constr_1644]	Completeness of the existence of a set of <a href="#">TlvDataIdDefinition.tlvRecordElements</a>
[constr_1645]	Completeness of the existence of a set of <a href="#">TlvDataIdDefinition.tlvImplementationDataTypeElements</a>
[constr_1646]	Scope of the uniqueness of the value of <a href="#">TlvDataIdDefinition.id</a> for references to <a href="#">ArgumentDataPrototype</a>
[constr_1647]	Scope of the uniqueness of the value of <a href="#">TlvDataIdDefinition.id</a> for references to <a href="#">ApplicationRecordElement</a>
[constr_1648]	Scope of the uniqueness of the value of <a href="#">TlvDataIdDefinition.id</a> for references to <a href="#">ImplementationDataTypeElement</a>
[constr_1649]	<a href="#">TlvDataIdDefinition</a> referencing <a href="#">ArgumentDataPrototype</a>
[constr_1650]	<a href="#">TlvDataIdDefinition</a> referencing <a href="#">ApplicationRecordElement</a>
[constr_1651]	<a href="#">TlvDataIdDefinition</a> referencing <a href="#">ImplementationDataTypeElement</a>
[constr_1652]	Definition of static length fields sizes in case of TLV usage
[constr_1653]	Identical values for length fields sizes in case of TLV usage
[constr_1654]	No definition of length field sizes on <a href="#">DataPrototype</a> level in case of TLV usage
[constr_1655]	The mutual existence of <a href="#">LinMasters</a> in the <a href="#">LinSlave</a> EcuExtract
[constr_1656]	No application-level write access to <a href="#">LinErrorResponse.responseError</a> on Lin slave
[constr_1657]	Existence of <a href="#">LinPhysicalChannel.scheduleTable</a>
[constr_1669]	Existence of <a href="#">PduTriggering.secOcCryptoMapping</a>
[constr_1670]	Prohibition of usage of <a href="#">tlsCryptoMapping</a> in case of UDP socket connections
[constr_1671]	Supported values of <a href="#">TlsCryptoServiceMapping.category</a>
[constr_1672]	Existence of <a href="#">TlsCryptoCipherSuite.certificate</a> in the <i>server</i> role
[constr_3435]	Applicability of <a href="#">CouplingPort.macMulticastAddress</a>





Number	Heading
[constr_3436]	Value range of <code>minimumTxContainerQueueSize</code> and <code>minimumRxContainerQueueSize</code>
[constr_3437]	<code>invalidValue</code> defined in the context of <code>ISignal</code>
[constr_3438]	<code>timeoutSubstitutionValue</code> defined in the context of <code>ISignal</code>
[constr_3448]	Restriction for usage of <code>Pdu.hasDynamicLength</code>
[constr_3453]	Uniqueness of header <code>Id</code> in case of <code>acceptAll ContainerIPdu</code>
[constr_3454]	Unique <code>headerIdLongHeader</code> for <code>acceptConfigured</code>
[constr_3455]	Unique <code>headerIdShortHeader</code> for <code>acceptConfigured</code>
[constr_3456]	Existence of <code>ProvidedServiceInstance.loadBalancingPriority</code> and <code>ProvidedServiceInstance.loadBalancingWeight</code>
[constr_3457]	Uniqueness of <code>ConsumedEventGroup.eventGroupIdentifier</code> in the scope of a <code>ConsumedServiceInstance</code>
[constr_3458]	DRAFT
[constr_3459]	Applicable <code>transferProperty</code> for group signal
[constr_3460]	Full definition of <code>transferProperty</code> for group signal
[constr_3461]	<code>TransferProperty</code> for group signals if <code>ISignalGroup</code> has <code>transferProperty=pending</code>
[constr_3464]	Allowed <code>Pdu</code> type on <code>BusMirrorChannelMapping.targetChannel</code>
[constr_3465]	Identical <code>BusMirrorChannel.busMirrorNetworkId</code> for <code>BusMirrorChannels</code> referencing the same <code>PhysicalChannel</code>
[constr_3466]	Unique <code>BusMirrorChannel.busMirrorNetworkIds</code> for each specialization of <code>PhysicalChannel</code>
[constr_3467]	<code>CanPhysicalChannel</code> as destination channel of <code>BusMirrorChannelMapping-Can</code>
[constr_3468]	<code>BusMirrorChannelMappingCan.targetPduTriggering</code> restriction
[constr_3469]	<code>CanFrameTriggering.txMask</code> setting for the destination frame
[constr_3470]	<code>PaddingValue</code> used to transmit the <code>Pdu</code> on a <code>Can-Fd</code> destination bus
[constr_3471]	<code>FlexrayPhysicalChannel</code> as destination channel of <code>BusMirrorChannelMappingFlexray</code>
[constr_3472]	Number of <code>BusMirrorChannels</code> derived for one <code>FlexrayCluster</code>
[constr_3473]	<code>BusMirrorChannelMappingFlexray.targetPduTriggering</code> restriction
[constr_3474]	<code>EthernetPhysicalChannel</code> as destination channel of <code>BusMirrorChannelMappingIp</code>
[constr_3475]	<code>BusMirrorChannelMappingIp.targetPduTriggering</code> restriction
[constr_3476]	<code>UserDefinedPhysicalChannel</code> as destination channel of <code>BusMirrorChannelMappingUserDefined</code>
[constr_3477]	<code>BusMirrorChannelMappingUserDefined.targetPduTriggering</code> restriction
[constr_3479]	<code>PhysicalChannel</code> is not allowed to be a <code>managedPhysicalChannel</code> and a <code>managing PhysicalChannel</code>
[constr_3480]	<code>PhysicalChannel</code> shall be referenced in the role <code>managedPhysicalChannel</code> only once



△

Number	Heading
[constr_3481]	<code>UdpNmCluster</code> is not allowed to reference a <code>managedPhysicalChannel</code> in the role <code>vlan</code>
[constr_3482]	<code>NmCluster</code> is not allowed to reference a <code>CommunicationCluster</code> that aggregates a <code>managedPhysicalChannel</code>
[constr_3483]	The same <code>PhysicalChannel</code> is not allowed to be the source and the target of <code>managedPhysicalChannel</code> references
[constr_3484]	<code>PncMapping</code> that refers a <code>managedPhysicalChannel</code> shall also refer the managing <code>PhysicalChannel</code>
[constr_3488]	Value range of <code>ContainedIPduProps.priority</code>
[constr_3489]	<code>ContainedIPduProps.priority</code> is only applicable if a <code>ContainerIPdu</code> header is used
[constr_3490]	<code>ContainedIPduProps.priority</code> is only applicable if <code>collectionSemantics</code> is set to <code>lastIsBest</code>
[constr_3533]	<code>EndToEndTransformationISignalProps.dataLength</code> shall be a multiple of 8
[constr_3534]	<code>EthernetPhysicalChannel</code> shall only be referenced by one <code>VlanMembership</code>
[constr_3535]	<code>EthernetCommunicationController</code> shall aggregate at most one <code>Coupling-Port</code>

**Table D.45: Added Constraints in R4.4.0**

### D.11.5 Changed Constraints in R4.4.0

Number	Heading
[constr_3067]	<code>initValue</code> defined in the context of <code>ISignal</code>
[constr_3165]	Effect of <code>EndToEndTransformationDescription.upperHeaderBitsToShift</code> value in PROFILE_01, PROFILE_11
[constr_3219]	The mutual existence of <code>LinSlaves</code> in the <code>LinMaster</code> <code>EcuExtract</code>
[constr_3323]	Relation between <code>NmCluster.nmPncParticipation</code> and <code>PncMapping.pnc-Group</code>
[constr_3327]	Effect of <code>EndToEndTransformationDescription.upperHeaderBitsToShift</code> value in PROFILE_22

**Table D.46: Changed Constraints in R4.4.0**

### D.11.6 Deleted Constraints in R4.4.0

Number	Heading
[constr_3024]	Usage of <code>triggeredWithoutRepetition</code> and <code>triggeredOnChangeWithoutRepetition</code> is not allowed for signal groups and group signals.
[constr_3034]	Values of <code>LinSlaveConfig</code> and <code>LinSlave</code> attributes
[constr_3043]	<code>pncVector</code> configuration in AUTOSAR Com
[constr_3150]	Effect of <code>EndToEndTransformationDescription.upperHeaderBitsToShift</code> value in PROFILE_01 and PROFILE_11 in case it is 0
[constr_3171]	Value of <code>EndToEndTransformationISignalProps.dataId</code> shall be unique in PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07

**Table D.47: Deleted Constraints in R4.4.0**

## D.12 Constraint and Specification Item History of this document according to AUTOSAR R19-11

### D.12.1 Added Traceables in R19-11

Number	Heading
[TPS_SYST_02207]	Routing on the fly
[TPS_SYST_02208]	<code>ISignalPort.handleInvalid</code> defines the reception invalidation behavior
[TPS_SYST_02209]	Not defined <code>ISignalPort.handleInvalid</code> behavior
[TPS_SYST_02210]	Data invalidation in case the <code>dataTypePolicy</code> is set to <code>override</code> or <code>legacy</code>
[TPS_SYST_02211]	Reference from <code>SOMEIPTransformationISignalProps</code> to <code>TlvDataId-DefinitionSet</code>
[TPS_SYST_02212]	Assignment of <code>SOMEIPTransformationProps</code> to a root <code>AutosarDataPrototype</code> in a <code>ClientServerInterface</code> typed by an <code>ApplicationDataType</code>
[TPS_SYST_02213]	Assignment of <code>SOMEIPTransformationProps</code> to a subElement of a root <code>AutosarDataPrototype</code> in a <code>ClientServerInterface</code> typed by an <code>ApplicationDataType</code>
[TPS_SYST_02214]	Assignment of <code>SOMEIPTransformationProps</code> to a root <code>AutosarDataPrototype</code> in a <code>ClientServerInterface</code> typed by an <code>ImplementationDataType</code>
[TPS_SYST_02215]	Usage of <code>portNumber</code> with value 0
[TPS_SYST_02216]	Configuration of <code>capabilityRecords</code>
[TPS_SYST_02217]	SOME/IP Service offer
[TPS_SYST_02218]	<code>ProvidedServiceInstance</code> deployment
[TPS_SYST_02219]	Static configuration between <code>ProvidedServiceInstance</code> and <code>ConsumedServiceInstance</code>





Number	Heading
[TPS_SYST_02220]	Maximal number of clients that may connect to the local server address
[TPS_SYST_02221]	<code>ProvidedServiceInstance.localUnicastAddress</code> reference target
[TPS_SYST_02222]	Usage of <code>headerId</code>
[TPS_SYST_02223]	Activation/Deactivation of <code>PduActivationRoutingGroups</code>
[TPS_SYST_02224]	Methods provided by a <code>ProvidedServiceInstance</code>
[TPS_SYST_02225]	Service methods provided over UDP
[TPS_SYST_02226]	Service methods provided over TCP
[TPS_SYST_02227]	Publishing of a SOME/IP Event group
[TPS_SYST_02228]	Transmission of events over UDP/TCP Port
[TPS_SYST_02229]	Event groups provided by a <code>ProvidedServiceInstance</code>
[TPS_SYST_02230]	<code>PduActivationRoutingGroups</code> for event groups
[TPS_SYST_02231]	<code>PduActivationRoutingGroups</code> for methods
[TPS_SYST_02232]	Events provided over UDP
[TPS_SYST_02233]	Events provided over TCP
[TPS_SYST_02234]	SOME/IP Service search
[TPS_SYST_02235]	<code>ConsumedServiceInstance</code> deployment
[TPS_SYST_02236]	Static configuration between <code>ConsumedServiceInstance</code> and <code>ProvidedServiceInstance</code>
[TPS_SYST_02237]	Maximal number of servers that may connect to the local client address
[TPS_SYST_02238]	<code>ConsumedServiceInstance.localUnicastAddress</code> reference target
[TPS_SYST_02239]	Methods consumed by a <code>ConsumedServiceInstance</code>
[TPS_SYST_02240]	Service methods consumed over UDP
[TPS_SYST_02241]	Service methods consumed over TCP
[TPS_SYST_02242]	Subscription to a SOME/IP Event group
[TPS_SYST_02243]	Reception of events over UDP/TCP Port in case of Service Discovery
[TPS_SYST_02244]	<code>ConsumedServiceInstance</code> without a defined <code>localUnicastAddress</code>
[TPS_SYST_02245]	Event groups consumed by a <code>ConsumedServiceInstance</code>
[TPS_SYST_02246]	<code>PduActivationRoutingGroups</code> for <code>ConsumedEventGroups</code>
[TPS_SYST_02247]	Events consumed over UDP
[TPS_SYST_02248]	Events consumed over TCP
[TPS_SYST_02249]	Service Discovery Message sending behavior on <code>ProvidedServiceInstance</code>
[TPS_SYST_02250]	Service Discovery Message sending behavior on <code>ConsumedServiceInstance</code>
[TPS_SYST_02251]	Non-SOME/IP data exchange between two communication endpoints
[TPS_SYST_02252]	Description of a TCP Client
[TPS_SYST_02253]	Description of a TCP Server
[TPS_SYST_02254]	Pdus transported over the <code>StaticSocketConnection</code>
[TPS_SYST_02255]	<code>Frame.frameLength</code> usage for <code>FlexrayFrames</code> and <code>CanFrames</code>
[TPS_SYST_02256]	Allowed <code>CanFrame.frameLength</code> settings







Number	Heading
[TPS_SYST_02257]	Standardized values of <code>LinCommunicationController.protocolVersion</code> and <code>LinSlaveConfig.protocolVersion</code>
[TPS_SYST_02258]	Shared random timer for <code>ProvidedServiceInstance</code> service discovery
[TPS_SYST_02259]	Shared random timer for <code>ProvidedServiceInstance</code> service discovery
[TPS_SYST_02260]	Individual random timer for <code>ProvidedServiceInstance</code> service discovery
[TPS_SYST_02261]	Shared random timer for <code>ConsumedServiceInstance</code> service discovery
[TPS_SYST_02262]	Shared random timer for <code>ConsumedServiceInstance</code> service discovery
[TPS_SYST_02263]	Individual random timer for <code>ConsumedServiceInstance</code> service discovery
[TPS_SYST_02264]	Usage of <code>DltLogChannel</code>
[TPS_SYST_02265]	Configuration of IPsec
[TPS_SYST_02266]	Definition of <code>IPSecRules</code>
[TPS_SYST_02267]	IPsec policy
[TPS_SYST_02268]	IPsec mode
[TPS_SYST_02269]	IPsec AH and ESP protocol configuration
[TPS_SYST_02270]	Definition of general IPsec configuration settings
[TPS_SYST_02271]	IPsec AH and ESP CipherSuites
[TPS_SYST_02272]	IPsec Internet Key Exchange protocol configuration
[TPS_SYST_02273]	Protection of <code>ProvidedServiceInstance</code> by IPsec
[TPS_SYST_02274]	Protection of <code>ConsumedServiceInstance</code> by IPsec
[TPS_SYST_03022]	Provided service instance with <code>translationStart</code> requires <code>SdServerServiceAutoAvailable</code>
[TPS_SYST_03023]	Required service instance with <code>translationStart</code> requires <code>SdClientServiceAutoRequire</code>
[TPS_SYST_03024]	Required service instance with <code>translationStart</code> requires <code>SdConsumedEventGroupAutoRequire</code>
[TPS_SYST_03025]	Control of service instance in case of <code>partialNetwork</code>
[TPS_SYST_03026]	Monitoring of the <i>partial networks</i> status in case of <code>partialNetwork</code> for provided service instance
[TPS_SYST_03027]	Monitoring of the <i>partial networks</i> status in case of <code>partialNetwork</code> for required service instance
[TPS_SYST_03028]	Initial <i>service find</i> for a provided service instance with <code>serviceControl</code>
[TPS_SYST_03029]	Initial <i>offer</i> for a provided service instance with <code>serviceControl</code>
[TPS_SYST_03030]	<i>Stop offer</i> for a provided service instance with <code>serviceControl</code>
[TPS_SYST_03031]	Sufficient ASIL level of translation software component
[TPS_SYST_03032]	Data transmission in case of <code>E_OK</code> safe signal reception
[TPS_SYST_03033]	No data transmission in case of reception timeout
[TPS_SYST_03034]	Handling safe signal reception
[TPS_SYST_03036]	<code>PortAPIOption</code> for <code>safeTranslation RPortPrototype</code>
[TPS_SYST_03037]	<code>PortAPIOption</code> for <code>safeTranslation PPortPrototype</code>
[TPS_SYST_03038]	Definition of transmission triggers for translations with different sources







Number	Heading
[TPS_SYST_03039]	Full translation before transmission triggering
[TPS_SYST_03040]	Transmission trigger for translations with different sources
[TPS_SYST_03041]	No transmission trigger for translations with different sources
[TPS_SYST_03042]	Periodic call in case of <a href="#">ReceiverComSpec.dataUpdatePeriod</a>
[TPS_SYST_03043]	Periodic call in case of <a href="#">SenderComSpec.dataUpdatePeriod</a>
[TPS_SYST_03044]	Handling of safe signal-service-translation in one software component
[TPS_SYST_03045]	Support for safe signal-service-translation and service-signal-translation
[TPS_SYST_03046]	Support for safe signal-service-translation with same or different E2E profiles
[TPS_SYST_03047]	1:n mapping for E2E protected data
[TPS_SYST_03048]	E2E protected target out of E2E protected sources
[TPS_SYST_03049]	No translation of not OK E2E protected composed data
[TPS_SYST_03050]	Usage of <a href="#">ConsumedServiceInstance.blacklistedVersion</a>
[TPS_SYST_03051]	Data filter inside the signal-service-translation software component
[TPS_SYST_05034]	<a href="#">DataMapping</a> of <a href="#">ImplementationDataType</a> of category UNION, DATA_REFERENCE, or FUNCTION_REFERENCE

**Table D.48: Added Traceables in R19-11**

### D.12.2 Changed Traceables in R19-11

Number	Heading
[TPS_SYST_01090]	valid <a href="#">NetworkEndpoint</a>
[TPS_SYST_01143]	<a href="#">DataMapping</a> on the sender side for elements of a composite data type
[TPS_SYST_02019]	LdCom: <a href="#">ISignalToIPduMapping.transferProperty</a> shall be triggered or triggeredWithoutRepetition for sent <a href="#">ISignals</a>
[TPS_SYST_02020]	LdCom: No <a href="#">IPduTiming.minimumDelay</a> defined
[TPS_SYST_02022]	LdCom: Only the <a href="#">transmissionModeTrueTiming</a> defined
[TPS_SYST_02023]	LdCom: <a href="#">DataFilter</a> "always" if <a href="#">TransmissionModeCondition</a> defined
[TPS_SYST_02024]	LdCom: No <a href="#">ModeDrivenTransmissionModeCondition</a> defined
[TPS_SYST_02119]	<a href="#">StaticSocketConnections</a> for <a href="#">GeneralPurposePdus</a> with category SD
[TPS_SYST_02129]	Assignment of <a href="#">SOMEIPTransformationProps</a> to a root <a href="#">AutosarDataPrototype</a> in a <a href="#">SenderReceiverInterface</a> typed by an <a href="#">ApplicationDataType</a>
[TPS_SYST_02130]	Assignment of <a href="#">SOMEIPTransformationProps</a> to a subElement of a root <a href="#">AutosarDataPrototype</a> in a <a href="#">SenderReceiverInterface</a> typed by an <a href="#">ApplicationDataType</a>
[TPS_SYST_02131]	Assignment of <a href="#">SOMEIPTransformationProps</a> to a root <a href="#">AutosarDataPrototype</a> in a <a href="#">SenderReceiverInterface</a> typed by an <a href="#">ImplementationDataType</a>





Number	Heading
[TPS_SYST_02132]	Assignment of <a href="#">SOMEIPTransformationProps</a> to a subElement of a root <a href="#">AutosarDataPrototype</a> typed by an <a href="#">ImplementationDataType</a>
[TPS_SYST_02133]	<a href="#">BufferProperties.bufferComputation</a> setting for a COM Based transformer
[TPS_SYST_02140]	<a href="#">SocketAddress.udpChecksumHandling</a> default value
[TPS_SYST_02141]	Semantics of <a href="#">udpChecksumHandling</a>
[TPS_SYST_02142]	Reception of invalid checksum
[TPS_SYST_02150]	Role of <a href="#">SystemSignal</a> in inter-ECU client server communication over Ethernet with clients located on different ECUs
[TPS_SYST_02151]	MetaData support required for inter-ECU client server communication over Ethernet with clients located on different ECUs
[TPS_SYST_02174]	Initial Wait Phase configuration for a <a href="#">ProvidedServiceInstance</a>
[TPS_SYST_02175]	Repetition Wait Phase configuration for a <a href="#">ProvidedServiceInstance</a>
[TPS_SYST_02176]	Main Phase configuration for a <a href="#">ProvidedServiceInstance</a>
[TPS_SYST_02177]	TTL for Offer Service Entries
[TPS_SYST_02178]	Servers <a href="#">RequestResponseDelay</a> for received <a href="#">FindService</a> entries
[TPS_SYST_02182]	Servers <a href="#">RequestResponseDelay</a> for received <a href="#">SubscribeEventGroup</a> entries
[TPS_SYST_02183]	Initial Wait Phase configuration for a <a href="#">ConsumedServiceInstance</a>
[TPS_SYST_02184]	Repetition Wait Phase configuration for a <a href="#">ConsumedServiceInstance</a>
[TPS_SYST_02185]	TTL for Find Service Entries
[TPS_SYST_02187]	<a href="#">SomeipSdClientEventGroupTimingConfig.timeToLive</a> for <a href="#">SubscribeEventGroup</a> Entries
[TPS_SYST_02188]	Clients <a href="#">RequestResponseDelay</a> for received <a href="#">ServiceOffer</a> entries
[TPS_SYST_02189]	Setting of <a href="#">useSecuredPduHeader</a> attribute
[TPS_SYST_02195]	Applicable use cases for <a href="#">DataPrototypeReference</a>
[TPS_SYST_05016]	Assignment of TLV data ids
[TPS_SYST_05033]	Existence of <a href="#">TlsCryptoCipherSuite.certificate</a> and <a href="#">TlsCryptoCipherSuite.pskIdentity</a> in the <i>client</i> role

**Table D.49: Changed Traceables in R19-11**

### D.12.3 Deleted Traceables in R19-11

Number	Heading
[TPS_SYST_01092]	Transmission of multiple <a href="#">Pdus</a> over the same <a href="#">SocketConnection</a>
[TPS_SYST_01093]	Activation/Deactivation of <a href="#">SoAdRoutingGroups</a>
[TPS_SYST_01151]	<a href="#">DataMapping</a> reference to an <a href="#">EventHandler</a>
[TPS_SYST_01152]	<a href="#">DataMapping</a> reference to a <a href="#">ConsumedEventGroup</a>





Number	Heading
[TPS_SYST_02002]	<a href="#">SoAdRoutingGroup</a> for Services with Methods
[TPS_SYST_02003]	<a href="#">SoAdRoutingGroups</a> for Services with event groups
[TPS_SYST_02004]	<a href="#">SoAdRoutingGroups</a> for Services with event groups that contain triggered events
[TPS_SYST_02007]	Usage of <a href="#">SocketConnection</a> attributes in the unicast server view
[TPS_SYST_02008]	Usage of <a href="#">SocketConnection</a> attributes in the unicast client view
[TPS_SYST_02009]	Usage of <a href="#">SocketConnection</a> attributes in the multicast server view
[TPS_SYST_02010]	Usage of <a href="#">SocketConnection</a> attributes in the multicast client view
[TPS_SYST_02096]	Sending of ANY finds for minor version
[TPS_SYST_02113]	Usage of <a href="#">ConsumedEventGroup.applicationEndpoint</a> reference
[TPS_SYST_02120]	<a href="#">runtimeIpAddressConfiguration</a> and <a href="#">runtimePortConfiguration</a> settings for SD <a href="#">SocketConnections</a>
[TPS_SYST_02161]	Role of <a href="#">SystemSignal</a> in inter-ECU client server communication over Ethernet with clients located on different ECUs in case that Com is used
[TPS_SYST_02179]	Server Capability Records
[TPS_SYST_02181]	TTL for <a href="#">SubscribeEventGroupAck</a> Entries
[TPS_SYST_02186]	Client Capability Records
[TPS_SYST_05005]	Relation of <a href="#">GlobalTimeDomain</a> to <a href="#">CommunicationCluster</a>

**Table D.50: Deleted Traceables in R19-11**

#### D.12.4 Added Constraints in R19-11

Number	Heading
[constr_3545]	Mandatory reference to a <i>Pnc</i> in case of <a href="#">partialNetwork</a>
[constr_3546]	Mandatory reference to a <a href="#">ConsumedEventGroup</a> in case of <a href="#">serviceControl</a>
[constr_3547]	Mandatory reference to an <a href="#">EventHandler</a> in case of <a href="#">serviceControl</a>
[constr_3548]	EndToEnd profile for both ends of <a href="#">safeTranslation</a>
[constr_3549]	Secure payload for both ends in case of <a href="#">secureTranslation</a>
[constr_3559]	<a href="#">ConsumedServiceInstance.blacklistedVersion</a> is restricted to the usage of <a href="#">minorVersion</a>
[constr_3560]	<a href="#">minimumMinorVersion</a> and <a href="#">ConsumedServiceInstance.minorVersion</a> value
[constr_5029]	<a href="#">J1939NmCluster</a> is not allowed to reference a <a href="#">TtcanCluster</a>
[constr_5030]	Uniqueness of <a href="#">LinOrderedConfigurableFrame.index</a>
[constr_5031]	Uniqueness of <a href="#">FramePid.index</a>
[constr_5032]	Maximal one <a href="#">NmConfig</a> per <a href="#">System</a> is allowed to be defined
[constr_5049]	Ethernet switch packet to traffic class assignment restriction
[constr_5050]	VariableDataPrototype of COM Based Transformer





Number	Heading
[constr_5051]	Existence of <code>CanFrameTriggering.identifier</code> in case of bus mirror target
[constr_5053]	Existence of <code>ISignalPort.handleInvalid</code>
[constr_5054]	<code>externalReplacement</code> not applicable for <code>ISignalPort.handleInvalid</code>
[constr_5055]	<code>DataMapping</code> of elements of <code>PRPortPrototypes</code> is not supported
[constr_5058]	Value range for <code>CryptoServiceQueue.queueSize</code>
[constr_5060]	Mapping of a <code>SecuredIPdu</code> into a <code>LinFrame</code> is not allowed
[constr_5061]	<code>EthernetCommunicationConnectors</code> and referencing <code>SocketAddresses</code> shall be in the same VLAN
[constr_5062]	SOME/IP <code>ProvidedServiceInstances</code> of the same <code>serviceInterface</code> on one <code>EcuInstance</code>
[constr_5063]	<code>ProvidedServiceInstance.serviceIdentifier</code> is mandatory
[constr_5064]	<code>ProvidedServiceInstance.majorVersion</code> is mandatory
[constr_5065]	<code>ProvidedServiceInstance.minorVersion</code> is mandatory
[constr_5066]	<code>ProvidedServiceInstance.instanceIdentifier</code> is mandatory
[constr_5067]	<code>ProvidedServiceInstance</code> shall be unique in respect of <code>serviceIdentifier</code> , <code>instanceIdentifier</code> , <code>majorVersion</code>
[constr_5068]	<code>ProvidedServiceInstance.localUnicastAddress</code> shall be IP Unicast
[constr_5069]	<code>ProvidedServiceInstance.remoteUnicastAddress</code> shall be IP Unicast
[constr_5070]	<code>headerIds</code> of <code>ProvidedServiceInstances</code> shall be unique on a <code>SocketAddress</code> per communication direction
[constr_5071]	<code>EventHandler.eventMulticastAddress</code> reference target
[constr_5072]	<code>EventHandler</code> without defined <code>eventMulticastAddress</code>
[constr_5073]	<code>PduActivationRoutingGroup</code> with <code>eventGroupControlType</code> set to <code>activationUnicast</code> or <code>triggerUnicast</code> or <code>activationAndTriggerUnicast</code> that is aggregated by an <code>EventHandler</code>
[constr_5074]	<code>PduActivationRoutingGroup</code> with <code>eventGroupControlType</code> set to <code>activationMulticast</code> that is aggregated by an <code>EventHandler</code>
[constr_5075]	Allowed references of <code>SoConIPduIdentifiers</code> by <code>PduActivationRoutingGroup</code> with <code>eventGroupControlType</code> set to <code>activationMulticast</code> and allowed <code>SoConIPduIdentifier</code> references
[constr_5076]	<code>PduActivationRoutingGroup</code> with <code>iPduIdentifierTcp</code> reference that is aggregated by a <code>ProvidedServiceInstance</code>
[constr_5077]	<code>PduActivationRoutingGroup</code> with <code>iPduIdentifierUdp</code> reference that is aggregated by a <code>ProvidedServiceInstance</code>
[constr_5078]	<code>PduTriggerings</code> referenced by a <code>PduActivationRoutingGroup</code> shall be on the same VLAN as the referencing <code>PduActivationRoutingGroup</code>
[constr_5079]	Service communication is restricted to one VLAN
[constr_5080]	<code>ApplicationEndpoints</code> referenced by <code>EventHandlers</code> and by the aggregating <code>ProvidedServiceInstance</code> shall be in the same VLAN
[constr_5081]	<code>ConsumedServiceInstance.serviceIdentifier</code> is mandatory
[constr_5082]	<code>ConsumedServiceInstance.majorVersion</code> is mandatory
[constr_5083]	<code>ConsumedServiceInstance.minorVersion</code> is mandatory





Number	Heading
[constr_5084]	ConsumedServiceInstance.instanceIdentifier is mandatory
[constr_5085]	ConsumedServiceInstance.localUnicastAddress shall be IP Unicast
[constr_5086]	ConsumedServiceInstance.remoteUnicastAddress shall be IP Unicast
[constr_5087]	PduActivationRoutingGroup with eventGroupControlType set to activationUnicast or triggerUnicast or activationAndTriggerUnicast that is referenced by a ConsumedEventGroup
[constr_5088]	PduActivationRoutingGroup with iPduIdentifierTcp reference that is aggregated by a ConsumedServiceInstance
[constr_5089]	PduActivationRoutingGroup with iPduIdentifierUdp reference that is aggregated by a ConsumedServiceInstance
[constr_5090]	ApplicationEndpoints referenced by ConsumedEventGroups and by the aggregating ConsumedServiceInstance shall be in the same VLAN
[constr_5091]	Relevance of tcpRole attribute
[constr_5092]	Relevance of tcpRole attribute
[constr_5093]	pncGatewayType and PhysicalChannel
[constr_5094]	pncGatewayType and ECU
[constr_5095]	Relationship between the timing behavior of the ConsumedEventGroup retry and the timing behavior of an Offer message
[constr_5096]	ConsumedEventGroup with value subscribeEventgroupRetryMax set to 255
[constr_5097]	DltLogChannel.txPduTriggering and DltLogChannel.rxPduTriggering shall point to GeneralPurposeIPdus of category DLT
[constr_5098]	Usage of DltArgument.networkRepresentation
[constr_5099]	Standardized values of DltMessage.messageTypeInfo
[constr_5100]	Compatibility of two MetaDataItemSets
[constr_5101]	Consistent Definition of meta-data
[constr_5104]	Assignment of a FlexrayFrame where allowDynamicLSduLength is set to true
[constr_5105]	Mapping of Pdu with dynamic length in a FlexrayFrame

**Table D.51: Added Constraints in R19-11**

### D.12.5 Changed Constraints in R19-11

Number	Heading
[constr_1207]	Existence of the attribute DataMapping.communicationDirection in the context of a SenderReceiverInterface or TriggerInterface
[constr_1441]	In AUTOSAR, the transmission of union data types over the network is only supported by the SOME/IP Transformer
[constr_1643]	Completeness of the existence of a set of TlvDataIdDefinition.tlvArguments
[constr_1644]	Completeness of the existence of a set of TlvDataIdDefinition.tlvRecordElements



△

Number	Heading
[constr_1645]	Completeness of the existence of a set of <code>TlvDataIdDefinition.tlvImplementationDataTypeElements</code>
[constr_1672]	Existence of <code>TlsCryptoCipherSuite.certificate</code> and <code>TlsCryptoCipherSuite.pskIdentity</code> in the <i>server</i> role
[constr_3012]	Overlapping of <code>Pdus</code> is prohibited
[constr_3013]	<code>FlexrayFrame</code> length shall not be exceeded
[constr_3014]	Overlapping of <code>updateIndicationBits</code> for <code>Pdus</code> is prohibited
[constr_3267]	<code>PduTriggerings</code> in Service Discovery <code>StaticSocketConnections</code>
[constr_3268]	Service Discovery <code>StaticSocketConnection</code> aggregation by an <code>ApplicationEndpoint</code>
[constr_3269]	Service Discovery <code>StaticSocketConnection</code> <code>remoteAddress</code> reference to a <code>TpPort</code>
[constr_3270]	Service Discovery <code>SocketConnection</code> <code>remoteAddress</code> reference to an IP Address
[constr_3272]	<code>SoConIPduIdentifier.headerId</code> setting for SD <code>StaticSocketConnections</code>
[constr_3273]	Service Discovery multicast <code>StaticSocketConnection</code> 's aggregation by an <code>ApplicationEndpoint</code>
[constr_3274]	Service Discovery unicast <code>StaticSocketConnection</code> 's aggregation by an <code>ApplicationEndpoint</code>
[constr_3276]	Prohibition of usage of <code>allowedIPv6ExtHeaders</code> in IPv4 <code>SocketAddress</code>
[constr_3277]	Restriction of usage of <code>IPv6ExtHeaderFilterLists</code> in IPv6 <code>SocketAddress</code>
[constr_3297]	Prohibition of usage of <code>allowedTcpOptions</code> in <code>Udp</code> <code>SocketAddress</code>
[constr_3299]	<code>SocketAddress.pathMtuDiscoveryEnabled</code> setting dependency
[constr_3311]	Usage of <code>SocketAddress.flowLabel</code>
[constr_3315]	The value of <code>V0</code> in <code>BufferProperties.bufferComputation</code> setting for a COM Based transformer
[constr_3322]	Consistent setting of <code>SoConIPduIdentifier.pduCollectionSemantics</code> in the context of one <code>SocketAddress</code>
[constr_3325]	<code>SecureCommunicationFreshnessProps</code> , <code>SecureCommunicationAuthenticationProps</code> and <code>CryptoServicePrimitive</code> attribute values for predefined categories
[constr_3379]	Multiple <code>SocketAddress</code> entries with the same IP Address, Protocol and Port in the context of a given <code>EcuInstance</code>
[constr_3506]	Mapping of composite data type to <code>SystemSignals</code> in <code>SystemSignalGroup</code>
[constr_3516]	limitation of <code>Frame.frameLength</code> for CAN L-PDUs

**Table D.52: Changed Constraints in R19-11**

## D.12.6 Deleted Constraints in R19-11

Number	Heading
[constr_3055]	<code>SystemSignalGroup</code> in a complete System Description
[constr_3059]	Mandatory <code>DataMapping</code> on the receiver side for elements of a composite data type
[constr_3063]	Usage of <code>portNumber</code> and <code>dynamicallyAssigned</code> with value "true" is mutually exclusive
[constr_3064]	Usage of <code>serviceInstance</code> , <code>eventHandler</code> and <code>eventGroup</code> references
[constr_3087]	<code>DataMapping</code> to <code>PRPortPrototype</code>
[constr_3088]	<code>SystemSignal</code> that is not part of a <code>SystemSignalGroup</code> in a complete System Description
[constr_3089]	<code>SystemSignal</code> that is part of exactly one <code>SystemSignalGroup</code> and is not transmitted additionally as standalone <code>SystemSignal</code> in a complete System Description
[constr_3176]	Value range of <code>windowSize</code>
[constr_3177]	Dependency between <code>maxErrorStateValid</code> , <code>maxErrorStateInit</code> and <code>maxErrorStateInvalid</code>
[constr_3178]	Dependency between <code>minOkStateValid</code> , <code>minOkStateInit</code> and <code>minOkStateInvalid</code>
[constr_3179]	Dependency between <code>minOkStateInit</code> , <code>maxErrorStateInit</code> and <code>windowSize</code>
[constr_3180]	Dependency between <code>minOkStateValid</code> , <code>maxErrorStateValid</code> and <code>windowSize</code>
[constr_3181]	Dependency between <code>minOkStateInvalid</code> , <code>maxErrorStateInvalid</code> and <code>windowSize</code>
[constr_3201]	<code>eventGroupIdentifier</code> in <code>ConsumedEventGroups</code> that are referenced by the same <code>EventHandler</code>
[constr_3259]	Allowed use of <code>SdServerConfig.capabilityRecord</code>
[constr_3260]	Allowed use of <code>SdClientConfig.capabilityRecord</code>
[constr_3271]	<code>clientIpAddrFromConnectionRequest</code> and <code>clientPortFromConnectionRequest</code> settings for SD <code>SocketConnections</code>
[constr_3400]	Usage of <code>SdClientConfig</code> attributes in <code>ConsumedServiceInstance</code> and <code>ConsumedEventGroup</code>
[constr_3401]	Usage of <code>SdServerConfig</code> attributes in <code>ProvidedServiceInstance</code> and <code>EventHandler</code>

**Table D.53: Deleted Constraints in R19-11**



## D.13 Constraint and Specification Item History of this document according to AUTOSAR R20-11

### D.13.1 Added Traceables in R20-11

Number	Heading
[TPS_SYST_02275]	Relation between <code>EndToEndTransformationDescription</code> and <code>EndToEndTransformationComSpecProps</code>
[TPS_SYST_02276]	Modeling of LIN master request frames
[TPS_SYST_02277]	Modeling of LIN slave response frames
[TPS_SYST_02278]	Existence of <code>SystemSignals</code> in a <code>SystemSignalGroup</code> that are not referenced by a <code>SenderRecCompositeTypeMapping</code>
[TPS_SYST_02279]	<code>SenderReceiverInterface.dataElement</code> is typed by a “new-world” variable-size <code>ApplicationArrayDataType</code> and a <code>DataTypeMap</code> exists
[TPS_SYST_02280]	<code>SenderReceiverInterface.dataElement</code> is typed by a “new-world” variable-size <code>ImplementationDataType</code>
[TPS_SYST_02281]	Definition of <code>SecuredIPdu.authDataFreshnessStartPosition</code>
[TPS_SYST_02282]	Definition of <code>SecuredIPdu.messageLinkPosition</code>
[TPS_SYST_02283]	Collection of <code>ServiceInterface</code> elements
[TPS_SYST_02284]	Event in a <code>ServiceInterface</code>
[TPS_SYST_02285]	Method in a <code>ServiceInterface</code>
[TPS_SYST_02286]	“fire & forget” method with data in a <code>ServiceInterface</code>
[TPS_SYST_02287]	“Fire & forget” method without data in a <code>ServiceInterface</code>
[TPS_SYST_02288]	“Fire & forget” method in a <code>ServiceInterface</code>
[TPS_SYST_02289]	Field in a <code>ServiceInterface</code>
[TPS_SYST_02290]	Field elements
[TPS_SYST_02291]	Field Notifier
[TPS_SYST_02292]	Field Getter
[TPS_SYST_02293]	Field Setter
[TPS_SYST_02294]	Serialization of <code>ServiceInterfaces</code> using <code>ComBasedTransformer</code>
[TPS_SYST_02295]	Serialization of <code>ServiceInterfaces</code> using <code>SomeipTransformer</code>
[TPS_SYST_02296]	<code>eventGroupControlType</code> of a unicast Event
[TPS_SYST_02297]	<code>eventGroupControlType</code> of a multicast Event
[TPS_SYST_02298]	<code>eventGroupControlType</code> of a unicast Field
[TPS_SYST_02299]	Modeling of 10Base-T1S networks
[TPS_SYST_02300]	Enabling of PLCA on a <code>CouplingPort</code>
[TPS_SYST_02301]	CSMA/CD configured nodes on a 10BASE-T1S network
[TPS_SYST_02302]	Definition of multicast only reception of an <code>EventGroup</code>
[TPS_SYST_02303]	Modeling of <code>DoIpRoutingActivations</code>







Number	Heading
[TPS_SYST_02304]	Conversion of discrete parts of a CompuMethod on signal level in <a href="#">SenderReceiverToSignalMapping</a>
[TPS_SYST_02305]	Relevance of attribute <a href="#">TextTableMapping.mappingDirection</a> in an aggregation by <a href="#">SenderReceiverToSignalMapping</a>
[TPS_SYST_02306]	Conversion of discrete parts of a CompuMethod on signal level in <a href="#">SenderRecRecordElementMapping</a> and <a href="#">SenderRecArrayTypeMapping</a>
[TPS_SYST_02307]	Relevance of attribute <a href="#">TextTableMapping.mappingDirection</a> in an aggregation by <a href="#">SenderRecRecordElementMapping</a> or <a href="#">SenderRecArrayTypeMapping</a>
[TPS_SYST_02308]	<a href="#">TextTableMapping</a> defined in the context of <a href="#">SenderRecArrayTypeMapping</a>
[TPS_SYST_02309]	RTE fan-out support for a <a href="#">SystemSignalGroup</a>
[TPS_SYST_02310]	Pdu routing with <a href="#">IPduMapping.pduMaxLength</a>
[TPS_SYST_02311]	<a href="#">IPduMapping.pduMaxLength</a> relying on the environment length configuration
[TPS_SYST_02312]	Ports for outermost composition of a <a href="#">SW_CLUSTER_SYSTEM_DESCRIPTION</a>
[TPS_SYST_02313]	Ecu Extract derived from <a href="#">ECU_SYSTEM_DESCRIPTION</a> covers an <a href="#">EcuInstance</a>
[TPS_SYST_02314]	Ecu Extract derived from <a href="#">SW_CLUSTER_SYSTEM_DESCRIPTION</a> covers a subset of an <a href="#">EcuInstance</a>
[TPS_SYST_02315]	Definition of a software cluster on the <i>AUTOSAR classic platform</i>
[TPS_SYST_02316]	Semantics of meta-class <a href="#">SwComponentPrototypeAssignment</a>
[TPS_SYST_02317]	References from <a href="#">CpSoftwareCluster</a> to <a href="#">CompositionSwComponentType</a> and <a href="#">SwComponentPrototype</a>
[TPS_SYST_02318]	Membership in <a href="#">System</a>
[TPS_SYST_02319]	Semantics of attribute <a href="#">CpSoftwareCluster.category</a>
[TPS_SYST_02320]	Kinds of <a href="#">CpSoftwareClusterResources</a>
[TPS_SYST_02321]	Assignment of <a href="#">CpSoftwareClusterCommunicationResources</a> to <a href="#">CpSoftwareClusters</a> in the context of a <a href="#">SwComponentPrototype</a>
[TPS_SYST_02322]	<a href="#">PortElementToCommunicationResourceMapping</a> aggregated by <a href="#">SystemMapping</a> supersedes <a href="#">PortElementToCommunicationResourceMapping</a> aggregated by <a href="#">CpSoftwareClusterMappingSet</a>
[TPS_SYST_02323]	Assignment of <a href="#">CpSoftwareClusterServiceResources</a> to <a href="#">CpSoftwareClusters</a>
[TPS_SYST_02324]	<a href="#">CpSoftwareClusterServiceResource</a> provided by the <a href="#">CpSoftwareCluster</a>
[TPS_SYST_02325]	<a href="#">CpSoftwareClusterServiceResource</a> required by the <a href="#">CpSoftwareCluster</a>
[TPS_SYST_02326]	Aggregation possibilities of <a href="#">CpSoftwareClusterToResourceMapping</a>
[TPS_SYST_02327]	Role of the <a href="#">Software Cluster Binary Manifest</a>
[TPS_SYST_02328]	Semantics of meta-class <a href="#">CpSoftwareClusterBinaryManifestDescriptor</a>
[TPS_SYST_02329]	Provision of a <a href="#">Software Cluster's ID</a>





Number	Heading
[TPS_SYST_02330]	Possible values of attribute <code>CpSoftwareClusterBinaryManifestDescriptor.category</code>
[TPS_SYST_02331]	Definition of provided resource in the context of the <code>Software Cluster Binary Manifest</code>
[TPS_SYST_02332]	Definition of required resource in the context of the <code>Software Cluster Binary Manifest</code>
[TPS_SYST_02333]	Purpose of meta-class <code>BinaryManifestResourceDefinition</code>
[TPS_SYST_02334]	Semantics of meta-class <code>BinaryManifestItem</code>
[TPS_SYST_02335]	Semantics of aggregation <code>BinaryManifestItem.auxiliaryField</code>
[TPS_SYST_02336]	Semantics of meta-class <code>BinaryManifestItemDefinition</code>
[TPS_SYST_02337]	Semantics of aggregation <code>BinaryManifestItemDefinition.auxiliaryFieldDefinition</code>
[TPS_SYST_02338]	Relation between <code>BinaryManifestItemDefinition</code> and <code>BinaryManifestItem</code>
[TPS_SYST_02339]	Standardized values of attribute <code>BinaryManifestAddressableObject.category</code>
[TPS_SYST_02340]	Semantics of abstract meta-class <code>BinaryManifestItemValue</code>
[TPS_SYST_02341]	Semantics of the aggregation of meta-class <code>BinaryManifestItemPointerValue</code> in the role <code>defaultValue</code>
[TPS_SYST_02342]	Semantics of meta-class <code>BinaryManifestMetaDataField</code>
[TPS_SYST_02343]	<code>System</code> with <code>category</code> <code>SW_CLUSTER_SYSTEM_DESCRIPTION</code>
[TPS_SYST_02344]	<code>SW_CLUSTER_SYSTEM_DESCRIPTION</code> content
[TPS_SYST_02345]	Assignment of <code>CpSoftwareClusterCommunicationResources</code> to <code>CpSoftwareClusters</code> in the context of a <code>SwComponentType</code>
[TPS_SYST_02346]	<code>CpSoftwareClusterToResourceMapping</code> aggregated by <code>SystemMapping</code> supersedes <code>CpSoftwareClusterToResourceMapping</code> aggregated by <code>CpSoftwareClusterMappingSet</code>
[TPS_SYST_02347]	Mapping of <code>CpSoftwareClusterResource</code> to <code>ApplicationPartition</code>
[TPS_SYST_02348]	Mapping of <code>CpSoftwareCluster</code> to <code>EcuInstance</code>
[TPS_SYST_02349]	Recommended configuration settings for E2E Profile 4m configuration setting A
[TPS_SYST_02350]	Recommended configuration settings for E2E Profile 7m configuration setting A
[TPS_SYST_02351]	Selector field signal initial values in case no application writing the selector field signal
[TPS_SYST_02352]	Triggering in case of application writing the selector field signal
[TPS_SYST_02353]	No support for trigger transmit in case of application writing the selector field signal
[TPS_SYST_02354]	No support for Just-In-Time update of dynamic parts in case of application writing the selector field signal
[TPS_SYST_02355]	<code>TransmissionModeDeclaration</code> in case of application writing the selector field signal





Number	Heading
[TPS_SYST_02356]	Only one <a href="#">TransmissionModeCondition</a> in case of application writing the selector field signal
[TPS_SYST_02357]	RTE fan-in support for a <a href="#">SystemSignal</a>
[TPS_SYST_02358]	RTE fan-in support for a <a href="#">SystemSignalGroup</a>
[TPS_SYST_02359]	Size of String Length Fields
[TPS_SYST_02360]	Size of a length field for a chosen string
[TPS_SYST_03052]	Enabling of wake-up and sleep mechanism
[TPS_SYST_03053]	Semantics of <a href="#">EthernetCommunicationController.slaveQualifiedUnexpectedLinkDownTime</a>
[TPS_SYST_03054]	Semantics of <a href="#">EthernetCluster.couplingPortStartupActiveTime</a>
[TPS_SYST_03055]	Semantics of <a href="#">EthernetCluster.couplingPortSwitchoffDelay</a>

**Table D.54: Added Traceables in R20-11**

### D.13.2 Changed Traceables in R20-11

Number	Heading
[TPS_SYST_01074]	E2E Protection in the E2E Wrapper
[TPS_SYST_01109]	RTE fan-out support for a <a href="#">SystemSignal</a>
[TPS_SYST_01137]	Several <a href="#">DataMappings</a> may be defined for the same <a href="#">SystemSignal</a>
[TPS_SYST_01139]	Ecu Extract derived from System Description or System Extract covers exactly one <a href="#">EcuInstance</a>
[TPS_SYST_02073]	<a href="#">EndToEndTransformationDescription.profileName</a>
[TPS_SYST_02092]	Size of Array Length Fields
[TPS_SYST_02123]	Size of a length field for a chosen array
[TPS_SYST_02194]	Identification of E2E protected data in case of PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_04m, PROFILE_07m, and PROFILE_44
[TPS_SYST_02197]	Assigning communication graphs to <a href="#">RTE Implementation Plug-Ins</a>
[TPS_SYST_02234]	SOME/IP Service search
[TPS_SYST_02235]	<a href="#">ConsumedServiceInstance</a> deployment
[TPS_SYST_02272]	IPsec Internet Key Exchange protocol configuration
[TPS_SYST_03038]	Definition of transmission triggers for translations with different sources
[TPS_SYST_05016]	Assignment of TLV data ids
[TPS_SYST_05025]	Standardized values of <a href="#">CryptoServicePrimitive.algorithmFamily</a> and <a href="#">CryptoServiceKey.algorithmFamily</a>

**Table D.55: Changed Traceables in R20-11**

### D.13.3 Deleted Traceables in R20-11

Number	Heading
[TPS_SYST_02105]	<a href="#">ISignalGroup</a> and <a href="#">ISignal</a> referenced from <a href="#">ISignalTriggering</a>

**Table D.56: Deleted Traceables in R20-11**

### D.13.4 Added Constraints in R20-11

Number	Heading
[constr_3600]	Setting of <a href="#">EthernetCommunicationController.slaveActAsPassiveCommunicationSlave</a>
[constr_3601]	Mandatory attributes of <a href="#">EthernetWakeupSleepOnDatelineConfig</a>
[constr_3602]	Existence of <a href="#">wakeupForwardLocalEnabled</a>
[constr_3603]	Existence of <a href="#">wakeupLocalDurationTime</a>
[constr_3604]	Existence of <a href="#">wakeupForwardRemoteEnabled</a>
[constr_3605]	Existence of <a href="#">wakeupLocalDetectionTime</a>
[constr_3606]	Values of <a href="#">wakeupLocalDurationTime</a> and <a href="#">wakeupLocalDetectionTime</a>
[constr_3607]	Existence of <a href="#">sleepRepetitionDelayOfSleepRequest</a>
[constr_3608]	Existence of <a href="#">wakeupRepetitionDelayOfWakeupRequest</a>
[constr_3609]	Values of <a href="#">wakeupLocalDurationTime</a> in the context of a <a href="#">CouplingElement</a>
[constr_3610]	Values of <a href="#">wakeupLocalDetectionTime</a> in the context of a <a href="#">CouplingElement</a>
[constr_3611]	Existence of <a href="#">EthernetCommunicationController.slaveQualifiedUnexpectedLinkDownTime</a>
[constr_3615]	Existence of <a href="#">EthernetCluster.couplingPortSwitchoffDelay</a>
[constr_3616]	Value of <a href="#">EthernetCluster.couplingPortSwitchoffDelay</a>
[constr_3617]	Existence of <a href="#">EthernetCluster.couplingPortStartupActiveTime</a>
[constr_3618]	Value of <a href="#">EthernetCluster.couplingPortStartupActiveTime</a>
[constr_3620]	<a href="#">GlobalTimeDomain.networkSegmentId</a> only applicable to <a href="#">GlobalTime</a> sub domains
[constr_3621]	Value range of <a href="#">GlobalTimeDomain.networkSegmentId</a>
[constr_5106]	<a href="#">ISignalGroup</a> and <a href="#">ISignal</a> referenced from <a href="#">ISignalTriggering</a>
[constr_5109]	Conditions for the explicit mapping of an <a href="#">ISignal</a> to the <a href="#">pncVector</a>
[constr_5110]	Search for a collection of <a href="#">ServiceInstances</a> is not supported
[constr_5111]	Existence of references <a href="#">TlvDataIdDefinition.tlvArgument</a> , <a href="#">TlvDataIdDefinition.tlvRecordElement</a> , and <a href="#">TlvDataIdDefinition.tlvImplementationDataTypeElement</a>
[constr_5112]	<a href="#">ImplementationDataType</a> needs to be defined if a “new-world” variable-size <a href="#">ApplicationArrayDataType</a> is mapped to a single <a href="#">SystemSignal</a>
[constr_5113]	Mapping of “old-world” variable size arrays to a single <a href="#">SystemSignal</a> is not supported.





Number	Heading
[constr_5114]	Semantics of <a href="#">InterpolationRoutine.isDefault</a>
[constr_5116]	Uniqueness of the symbols of software-components and BSW modules
[constr_5117]	Client-Server communication over Ethernet
[constr_5118]	Value range of <a href="#">UdpProps.udpTtl</a>
[constr_5119]	Value range of <a href="#">TcpProps.tcpTtl</a>
[constr_5120]	Value range of <a href="#">TcpProps.tcpDelayedAckTimeout</a>
[constr_5121]	Value range of <a href="#">TcpProps.tcpSynMaxRtx</a>
[constr_5122]	Value range of <a href="#">TcpProps.tcpMaxRtx</a>
[constr_5123]	Value range of <a href="#">TcpProps.tcpKeepAliveProbesMax</a>
[constr_5124]	Value range of <a href="#">TcpProps.tcpReceiveWindowMax</a>
[constr_5125]	Value range of <a href="#">TcpIpIcmpv4Props.tcpIpIcmpV4Ttl</a>
[constr_5126]	Value range of <a href="#">Ipv4ArpProps.tcpIpArpNumGratuitousArpOnStartup</a>
[constr_5127]	Value range of <a href="#">Ipv4FragmentationProps.tcpIpIpNumFragments</a>
[constr_5128]	Value range of <a href="#">Ipv4FragmentationProps.tcpIpIpNumReassDgrams</a>
[constr_5129]	Value range of <a href="#">Ipv6FragmentationProps.tcpIpIpReassemblyBufferCount</a>
[constr_5130]	Value range of <a href="#">Ipv6FragmentationProps.tcpIpIpReassemblyBufferSize</a>
[constr_5131]	Value range of <a href="#">Ipv6FragmentationProps.tcpIpIpReassemblyTimeout</a>
[constr_5132]	Value range of <a href="#">Ipv6FragmentationProps.tcpIpIpReassemblySegment-Count</a>
[constr_5133]	Value range of <a href="#">Ipv6FragmentationProps.tcpIpIpTxFragmentBufferCount</a>
[constr_5134]	Value range of <a href="#">Ipv6FragmentationProps.tcpIpIpTxFragmentBufferSize</a>
[constr_5135]	Value range of <a href="#">Dhcpv6Props.tcpIpDhcpV6CnfDelayMin</a> and <a href="#">Dhcpv6Props.tcpIpDhcpV6CnfDelayMax</a>
[constr_5136]	Value range of <a href="#">Dhcpv6Props.tcpIpDhcpV6InfDelayMin</a> and <a href="#">Dhcpv6Props.tcpIpDhcpV6InfDelayMax</a>
[constr_5137]	Value range of <a href="#">Dhcpv6Props.tcpIpDhcpV6SolDelayMin</a> and <a href="#">Dhcpv6Props.tcpIpDhcpV6SolDelayMax</a>
[constr_5138]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpSlaacDadNumberOfTransmissions</a>
[constr_5139]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpSlaacDadRetransmissionDelay</a>
[constr_5140]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpDefaultReachableTime</a>
[constr_5141]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpDefaultRetransTimer</a>
[constr_5142]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpNumUnicastSolicitations</a>
[constr_5143]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpNumMulticastSolicitations</a>
[constr_5144]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpDelayFirstProbeTime</a>
[constr_5145]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpMinRandomFactor</a>
[constr_5146]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpMaxRandomFactor</a>
[constr_5147]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpDestinationCacheSize</a>
[constr_5148]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpPrefixListSize</a>
[constr_5149]	Value range of <a href="#">Ipv6NdpProps.tcpIpNdpDefaultRouterListSize</a>





Number	Heading
[constr_5151]	Value range of <code>Ipv6NdpProps.tcpIpNdpMaxRtrSolicitations</code>
[constr_5152]	Value range of <code>Ipv6NdpProps.tcpIpNdpMaxRtrSolicitationDelay</code>
[constr_5153]	Value range of <code>Ipv6NdpProps.tcpIpNdpRtrSolicitationInterval</code>
[constr_5154]	Value range of <code>TcpIpIcmpv6Props.tcpIpIcmpV6HopLimit</code>
[constr_5157]	Mixing of Point-To-Point and Multi-Drop is not allowed in a <code>CouplingPortConnection</code>
[constr_5158]	Usage of <code>plcaProps</code> only allowed on 10BASE-T1S networks
[constr_5159]	Mandatory <code>CouplingPortConnection</code> settings if multi-drop feature is used
[constr_5160]	Mandatory <code>PlcaProps</code> settings if multi-drop feature is used
[constr_5162]	Valid <code>TextTableMapping</code> in the context of <code>SenderRecRecordElementMapping</code>
[constr_5163]	Existence of attribute <code>IPSecRule.headerType</code>
[constr_5164]	Existence of attribute <code>IPSecRule.ipProtocol</code>
[constr_5165]	Existence of attribute <code>IPSecRule.policy</code>
[constr_5166]	Existence of <code>IPduMapping.pduMaxLength</code>
[constr_5167]	<code>pncGatewayType</code> and ECU over the whole system
[constr_5168]	<code>pncGatewayType</code> passive and connected ECUs
[constr_5169]	<code>pncGatewayType</code> and (routing) paths
[constr_5170]	<code>nmPassiveModeEnabled</code> and <code>dynamicPncToChannelMappingEnabled</code>
[constr_5171]	Existence of the attribute <code>DataMapping.communicationDirection</code> in <code>ClientServerToSignalMapping</code>
[constr_5175]	<code>RtePluginProps</code> shall reference at least one <code>EcucContainerValue</code> representing a <code>RteRipsPlugin</code>
[constr_5176]	Existence of <code>CpSoftwareCluster</code> of category <code>HOST_SOFTWARE_CLUSTER</code> on one <code>EcuInstance</code>
[constr_5177]	Validity of reference <code>CpSoftwareClusterToEcuInstanceMapping.swCluster</code>
[constr_5178]	Existence of attribute <code>CpSoftwareClusterResource.globalResourceId</code>
[constr_5179]	Existence of attribute <code>CpSoftwareClusterResource.isMandatory</code>
[constr_5180]	Allowed values for <code>CpSoftwareClusterResource.globalResourceId</code>
[constr_5181]	Existence of attribute <code>CpSoftwareClusterServiceResource.category</code>
[constr_5182]	<code>PRPortPrototypes</code> are excluded as <code>CpSoftwareCluster</code> interfaces
[constr_5183]	<code>PortElementToCommunicationResourceMapping</code> shall reference exactly one element of a <code>PortInterface</code>
[constr_5184]	<code>CpSoftwareClusterServiceResource</code> can be provided only once on an <code>EcuInstance</code>
[constr_5185]	Existence of attribute <code>BinaryManifestProvideResource.globalResourceId</code>
[constr_5186]	Existence of attribute <code>BinaryManifestProvideResource.resourceGuardValue</code>
[constr_5187]	Existence of attribute <code>BinaryManifestProvideResource.supportsMultipleNotifierSets</code>
[constr_5188]	Existence of attribute <code>BinaryManifestProvideResource.numberOfNotifierSets</code>





Number	Heading
[constr_5189]	Existence of reference <code>BinaryManifestProvideResource.resourceDefinition</code>
[constr_5190]	Existence of aggregation <code>BinaryManifestProvideResource.item</code>
[constr_5191]	Consequence of attribute <code>BinaryManifestProvideResource.item.category</code>
[constr_5192]	Existence of attribute <code>BinaryManifestRequireResource.globalResourceId</code>
[constr_5193]	Existence of attribute <code>BinaryManifestRequireResource.resourceGuardValue</code>
[constr_5194]	Existence of reference <code>BinaryManifestRequireResource.resourceDefinition</code>
[constr_5195]	Existence of aggregation <code>BinaryManifestRequireResource.item</code>
[constr_5196]	Consequence of attribute <code>BinaryManifestRequireResource.item.category</code>
[constr_5197]	Existence of aggregation <code>BinaryManifestResourceDefinition.itemDefinition</code>
[constr_5198]	Allowed <code>BinaryManifestResource.resourceDefinition</code>
[constr_5199]	Consequence of attribute <code>BinaryManifestItem.auxiliaryField.category</code>
[constr_5200]	Existence of attribute <code>BinaryManifestItemDefinition.category</code>
[constr_5201]	Existence of attribute <code>BinaryManifestItemDefinition.size</code>
[constr_5202]	Existence of attribute <code>BinaryManifestItemNumericalValue.value</code>
[constr_5203]	Existence of attribute <code>BinaryManifestItemPointerValue.symbol</code>
[constr_5204]	Existence of attribute <code>BinaryManifestMetaDataField.category</code>
[constr_5205]	Existence of attribute <code>BinaryManifestMetaDataField.size</code>
[constr_5206]	Existence of attribute <code>BinaryManifestMetaDataField.symbol</code>
[constr_5207]	Existence of attribute <code>BinaryManifestMetaDataField.address</code>
[constr_5208]	Existence of <code>System.swCluster</code>
[constr_5209]	Existence of reference <code>CpSoftwareCluster.swComponentAssignmentswComponent</code>
[constr_5210]	Existence of reference <code>SystemMapping.portElementToComResourceMapping</code>
[constr_5211]	Existence of reference <code>PortElementToCommunicationResourceMapping.communicationResource</code>
[constr_5212]	Existence of reference <code>SystemMapping.resourceToApplicationPartitionMapping</code>
[constr_5213]	Existence of reference <code>CpSoftwareClusterResourceToApplicationPartitionMapping.applicationPartition</code>
[constr_5214]	Existence of reference <code>CpSoftwareClusterResourceToApplicationPartitionMapping.resource</code>
[constr_5215]	Existence of reference <code>CpSoftwareClusterToResourceMapping.serviceResource</code>
[constr_5216]	Existence of reference <code>CpSoftwareClusterToResourceMapping.requester</code> and/or <code>provider</code>
[constr_5217]	Existence of attribute <code>BinaryManifestMetaDataField.value</code>
[constr_5218]	Existence of attribute <code>BinaryManifestItemPointerValue.address</code>
[constr_5219]	<code>CpSoftwareCluster</code> shall only be mapped to one <code>EcuInstance</code>







Number	Heading
[constr_5220]	Multiplicity of <code>EndToEndTransformationISignalProps.sourceId</code> in PROFILE_04m and PROFILE_07m
[constr_5221]	Multiplicity of <code>EndToEndTransformationISignalProps.sourceId</code> in PROFILE_01, PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_11, and PROFILE_22
[constr_5222]	Mandatory elements of <code>UdpNmCluster</code>
[constr_5223]	Mandatory elements of <code>UdpNmNode</code>
[constr_5224]	<code>UdpNmNode.nmMsgCycleOffset</code> < <code>UdpNmCluster.nmMsgCycleTime</code>
[constr_5225]	<code>UdpNmCluster.nmNetworkTimeout</code> multiple of <code>UdpNmCluster.nmMsgCycleTime</code>
[constr_5226]	<code>UdpNmCluster.nmRepeatMessageTime</code> multiple of <code>UdpNmCluster.nmMsgCycleTime</code>
[constr_5229]	Existence of attribute <code>E2EProfileCompatibilityProps.transitToInvalidExtended</code> is mandatory for each <code>EndToEndTransformationDescription</code>
[constr_5231]	Allowed values for <code>SOMEIPTransformationProps.alignment</code> and <code>SOMEIPTransformationDescription.alignment</code>
[constr_5232]	Triggering in case of application writing the selector field signal
[constr_5233]	Usage of <code>invalidValue</code> in case of application writing the selector field signal
[constr_5235]	Maximum <code>Frame.frameLength</code> of the used bus protocol shall not be exceeded
[constr_5236]	Restriction of <code>IPduMapping.pduMaxLength</code>
[constr_5244]	Value of attribute <code>SOMEIPTransformationISignalProps.sizeOfArrayLengthFields</code>
[constr_5245]	Value of attribute <code>SOMEIPTransformationISignalProps.sizeOfStringLengthFields</code>
[constr_5246]	SOME/IP Transformation settings for strings in the context of an <code>ISignal</code>
[constr_5247]	Value of attribute <code>DataPrototypeTransformationProps.transformationProps.sizeOfArrayLengthField</code>
[constr_5248]	Value of attribute <code>DataPrototypeTransformationProps.transformationProps.sizeOfStringLengthField</code>

**Table D.57: Added Constraints in R20-11**

### D.13.5 Changed Constraints in R20-11

Number	Heading
[constr_1652]	Definition of static length fields sizes in case of TLV usage
[constr_1653]	Identical values for length fields sizes in case of TLV usage
[constr_3000]	valid <code>SenderRecCompositeTypeMappings</code>
[constr_3004]	Clustering and separation shall be exclusive







Number	Heading
[constr_3039]	<a href="#">pncIdentifier</a> range
[constr_3041]	<a href="#">pncVectorOffset</a> range
[constr_3042]	<a href="#">pncVectorLength</a> range
[constr_3069]	Allowed <a href="#">CanNmCluster.nmNidPosition</a> values
[constr_3070]	Allowed <a href="#">CanNmCluster.nmCbvPosition</a> values
[constr_3078]	Allowed <a href="#">UdpNmCluster.nmNidPosition</a> values
[constr_3079]	Allowed <a href="#">UdpNmCluster.nmCbvPosition</a> values
[constr_3086]	Role of <a href="#">SystemSignal</a> in n:1 sender-receiver communication
[constr_3151]	<a href="#">BufferProperties.headerLength</a> settings for an E2E transformer used in combination with a SOME/IP transformer
[constr_3153]	E2E header field reservation required by COM Based transformer
[constr_3159]	Allowed values for <a href="#">EndToEndTransformationDescription.maxDeltaCounter</a> in PROFILE_04, PROFILE_04m and PROFILE_44
[constr_3163]	<a href="#">EndToEndTransformationISignalProps.minDataLength</a> and <a href="#">EndToEndTransformationISignalProps.maxDataLength</a> in PROFILE_04, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_04m, PROFILE_07m, and PROFILE_44
[constr_3164]	<a href="#">EndToEndTransformationISignalProps.dataLength</a> in PROFILE_04, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_04m, PROFILE_07m and PROFILE_44
[constr_3167]	Effect of <a href="#">EndToEndTransformationDescription.upperHeaderBitsToShift</a> value in PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_04m, PROFILE_07m and PROFILE_44
[constr_3169]	<a href="#">EndToEndTransformationDescription.offset</a> value in PROFILE_02 and PROFILE_22
[constr_3174]	<a href="#">EndToEndTransformationDescription</a> settings not allowed in PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_11, PROFILE_22, PROFILE_04m, PROFILE_07m and PROFILE_44
[constr_3186]	Multiplicity of <a href="#">EndToEndTransformationDescription.dataIdMode</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, and PROFILE_44
[constr_3188]	Multiplicity of <a href="#">EndToEndTransformationDescription.counterOffset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, and PROFILE_44
[constr_3190]	Multiplicity of <a href="#">EndToEndTransformationDescription.crcOffset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, and PROFILE_44
[constr_3192]	Multiplicity of <a href="#">EndToEndTransformationDescription.dataIdNibbleOffset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, and PROFILE_44 or <a href="#">dataIdMode</a> different from <a href="#">lower12Bit</a>
[constr_3194]	Multiplicity of <a href="#">EndToEndTransformationDescription.offset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, and PROFILE_44
[constr_3212]	Limitation of <a href="#">DoIpTpConnection.tpSdu</a>





Number	Heading
[constr_3218]	Range of Size of Array Length Fields
[constr_3282]	SOME/IP Transformation settings for arrays in the context of an <code>ISignal</code>
[constr_3316]	Allowed values for <code>EndToEndTransformationDescription.maxDeltaCounter</code> in PROFILE_07, PROFILE_08 and PROFILE_07m
[constr_5092]	Local and remoteAddress of a <code>StaticSocketConnection</code> shall define the same transport protocol

**Table D.58: Changed Constraints in R20-11**

### D.13.6 Deleted Constraints in R20-11

Number	Heading
[constr_3049]	Role of <code>SystemSignal</code> in inter-ECU client server communication with clients located on different ECUs in case of networks other than Ethernet
[constr_3453]	Uniqueness of header Id in case of <code>acceptAll ContainerIPdu</code>
[constr_3483]	The same <code>PhysicalChannel</code> is not allowed to be the source and the target of <code>managedPhysicalChannel</code> references

**Table D.59: Deleted Constraints in R20-11**

## D.14 Constraint and Specification Item History of this document according to AUTOSAR R21-11

### D.14.1 Added Traceables in R21-11

Number	Heading
[TPS_SYST_02361]	PduR Fan-out of <code>SecuredIPdu</code> with <code>useAsCryptographicIPdu = true</code>
[TPS_SYST_02362]	Relevance of attribute <code>EthernetCluster.baudrate</code>
[TPS_SYST_02363]	messageId of <code>AssignFrameId</code> and <code>UnassignFrameId</code>
[TPS_SYST_02364]	Scope of the <code>System</code>
[TPS_SYST_02365]	No support of Com Based Transformer for Trigger communication
[TPS_SYST_02366]	NID/CBV signals shall be ignored by Ecuc tools
[TPS_SYST_02367]	Execution Order of <code>RTEEvents</code> on a <code>EcuInstance</code>
[TPS_SYST_02368]	<code>RTEEvent</code> pairing constraint in Software Composition context
[TPS_SYST_02369]	<code>RTEEvent</code> separation constraint in Software Composition context
[TPS_SYST_02370]	<code>RTEEvent</code> pairing constraint in <code>System</code> context
[TPS_SYST_02371]	<code>RTEEvent</code> separation constraint in <code>System</code> context





Number	Heading
[TPS_SYST_02372]	Precedence of <code>ContainedIPduProps</code> settings
[TPS_SYST_02373]	Assignment of a Dlt Ecu Identifier to an <code>EcuInstance</code>
[TPS_SYST_02374]	Assignment of <code>DltMessage</code> to <code>DltLogChannels</code>
[TPS_SYST_02375]	Definition of <code>DltLogChannels</code> source
[TPS_SYST_02376]	Pdu Router fan-in support
[TPS_SYST_02377]	Consistent setting of Service Interface Version
[TPS_SYST_02378]	Optional method arguments
[TPS_SYST_03056]	Monitoring of the <code>released partial networks</code> status in case of <code>partialNetwork</code> for required service instance
[TPS_SYST_03057]	Monitoring of the <code>released partial networks</code> status in case of <code>partialNetwork</code> for provided service instance
[TPS_SYST_03058]	<i>Auto require</i> for <code>ConsumedServiceInstance</code> in case of service instance with <code>serviceControl</code>
[TPS_SYST_03059]	At most one <code>queued</code> source input in case of <code>signal/service translation</code> from several sources
[TPS_SYST_03060]	Source input with <code>queued</code> semantics shall have <code>transmissionTrigger</code> set to true
[TPS_SYST_03061]	No support for <code>queued</code> reception semantics in combination with periodic communication
[TPS_SYST_03062]	Definition of a primitive target for <code>SignalServiceTranslationElementProps</code>
[TPS_SYST_03063]	Definition of a composite target for <code>SignalServiceTranslationElementProps</code>
[TPS_SYST_03064]	Enabling of <code>multicast subscription</code>
[TPS_SYST_03065]	Static definition of <code>multicast subscription</code> at the server
[TPS_SYST_03066]	Mix of static definition consisting of <code>multicast subscription</code> clients and unicast subscription clients at the server
[TPS_SYST_03067]	Definition of <code>pncVectorOffset</code>
[TPS_SYST_03068]	Definition of <code>pncVectorLength</code>
[TPS_SYST_03069]	User data shall be defined within empty space of the <code>NmPdu</code>
[TPS_SYST_03070]	User data shall be before the <code>PncBitVector</code> or after the <code>PncBitVector</code>
[TPS_SYST_03071]	Available space of user data with <code>PncBitVector</code>
[TPS_SYST_03072]	Available space of user data without <code>PncBitVector</code>
[TPS_SYST_03073]	Derivation of <code>NmPnFilterMaskByte</code>

**Table D.60: Added Traceables in R21-11**

## D.14.2 Changed Traceables in R21-11

Number	Heading
[TPS_SYST_01005]	Definition of <code>EcuInstance</code>
[TPS_SYST_01066]	Derivation of Tx COM Signals
[TPS_SYST_01067]	Derivation of Rx COM Signals
[TPS_SYST_02044]	Buffer computation of transformer
[TPS_SYST_02064]	Reception acceptance of contained <code>IPdus</code>
[TPS_SYST_02073]	<code>EndToEndTransformationDescription.profileName</code>
[TPS_SYST_02097]	Basic definition of contained <code>IPdus</code>
[TPS_SYST_02099]	Relation between <code>ContainerIPdu</code> and contained <code>PduTriggerings</code> on sender side
[TPS_SYST_02117]	Length of <code>GeneralPurposePdu</code> with category SD
[TPS_SYST_02136]	Serialization based on the network representation
[TPS_SYST_02172]	Modeling of <code>SecuredIPdu</code> in case <code>useAsCryptographicIPdu</code> is set to false
[TPS_SYST_02173]	Modeling of <code>SecuredIPdu</code> in case <code>useAsCryptographicIPdu</code> is set to true
[TPS_SYST_02194]	Identification of E2E protected data in case of PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44, and PROFILE_44m
[TPS_SYST_02196]	<code>PduTriggering</code> is referenced by several <code>ContainerIPdus</code>
[TPS_SYST_02264]	Usage of <code>DltLogChannel</code>
[TPS_SYST_02283]	Collection of <code>ServiceInterface</code> elements
[TPS_SYST_02288]	“Fire & forget” method in a <code>ServiceInterface</code>
[TPS_SYST_02289]	Field in a <code>ServiceInterface</code>
[TPS_SYST_02339]	Standardized values of attribute <code>BinaryManifestAddressableObject.category</code>
[TPS_SYST_03022]	<code>autoAvailable</code> setting for provided service instance with <code>translationStart</code>
[TPS_SYST_03023]	<code>autoRequire</code> setting for required service instance with <code>translationStart</code>
[TPS_SYST_03024]	<code>autoRequire</code> setting for required event groups of required service instance with <code>translationStart</code>
[TPS_SYST_03026]	Monitoring of the <i>requested partial networks</i> status in case of <code>partialNetwork</code> for provided service instance
[TPS_SYST_03027]	Monitoring of the <i>requested partial networks</i> status in case of <code>partialNetwork</code> for required service instance
[TPS_SYST_03028]	<i>Auto require</i> for <code>controlConsumedEventGroup</code> in case of service instance with <code>serviceControl</code>
[TPS_SYST_03029]	<i>Offer</i> for a provided translated service instance with <code>serviceControl</code>
[TPS_SYST_03030]	<i>Stop offer</i> for a provided service instance with <code>serviceControl</code>
[TPS_SYST_03032]	Data transmission in case of <code>E_OK</code> safe signal reception



△

Number	Heading
[TPS_SYST_03039]	Full translation before transmission triggering
[TPS_SYST_03042]	Periodic call in case of <code>ReceiverComSpec.ReceiverComSpec.receptionProps.dataUpdatePeriod</code>
[TPS_SYST_03043]	Periodic call in case of <code>SenderComSpec.transmissionProps.dataUpdatePeriod</code>
[TPS_SYST_03044]	Handling of safe <code>signal/service translation</code> in one software component
[TPS_SYST_03045]	Support for safe <code>signal/service translation</code>
[TPS_SYST_03046]	Support for safe <code>signal/service translation</code> with same or different E2E profiles
[TPS_SYST_03051]	Data filter inside the <code>signal/service translation</code> software component
[TPS_SYST_05029]	Semantics of meta-class <code>TlsCryptoServiceMapping</code>
[TPS_SYST_05031]	Existence of <code>TlsCryptoCipherSuite.keyExchange</code> vs. <code>TlsCryptoServiceMapping.keyExchange</code>
[TPS_SYST_05033]	Existence of <code>TlsCryptoCipherSuite.certificate</code> and <code>TlsCryptoCipherSuite.pskIdentity</code> in the <i>client</i> role

**Table D.61: Changed Traceables in R21-11**

### D.14.3 Deleted Traceables in R21-11

Number	Heading
[TPS_SYST_02043]	Buffer computation of transformer
[TPS_SYST_02133]	<code>BufferProperties.bufferComputation</code> setting for a COM Based transformer
[TPS_SYST_02147]	Implicit definition of <code>pncVector</code> at <code>NmPdu</code>
[TPS_SYST_02165]	Derivation of <code>CanNmPnFilterMaskByte</code>
[TPS_SYST_02166]	Derivation of <code>UdpNmPnFilterMaskByte</code>
[TPS_SYST_02167]	Derivation of <code>FrNmPnFilterMaskByte</code>

**Table D.62: Deleted Traceables in R21-11**

#### D.14.4 Added Constraints in R21-11

Number	Heading
[constr_1001]	Value of <code>dataId</code> shall be unique
[constr_3651]	No <code>element</code> in case <code>translationTarget</code> is primitive
[constr_3652]	Allowed sub-classes of <code>DataPrototypeReference</code> in the context of <code>signal/service</code> translation
[constr_3653]	Consistent <code>translationTarget</code> and <code>element</code> in case <code>ApplicationDataType</code> is used
[constr_3654]	Consistent <code>translationTarget</code> and <code>element</code> in case <code>ImplementationDataType</code> is used
[constr_3655]	Supported filter types for primitive <code>SignalServiceTranslationElementProps</code>
[constr_3656]	Supported filter types for composite <code>SignalServiceTranslationElementProps</code>
[constr_3668]	Existence of <code>TlsCryptoCipherSuite.cipherSuiteShortLabel</code>
[constr_3669]	<code>eventMulticastSubscriptionAddress</code> shall refer to a multicast address
[constr_3670]	No support for parallel <code>localUnicastAddress</code> and <code>eventMulticastSubscriptionAddress</code>
[constr_3671]	<code>remoteMulticastSubscriptionAddress</code> shall refer to a multicast address
[constr_3672]	No support for methods in <code>multicast subscription</code> at the client
[constr_3673]	No support for methods in <code>multicast subscription</code> at the server static configuration
[constr_3685]	Allowed values for each element of <code>pncFilterArrayMask</code>
[constr_3686]	Allowed number of entries for <code>pncFilterArrayMask</code>
[constr_3687]	Limited value range for <code>NmCluster.pncClusterVectorLength</code>
[constr_4000]	Local communication of mode switches
[constr_5249]	Existence of <code>Pdu.length</code>
[constr_5251]	<code>CouplingPort.connectionNegotiationBehavior</code> shall exist
[constr_5252]	<code>LinSlaveConfig.protocolVersion</code> shall exist
[constr_5253]	Value range of <code>ISignal.length</code>
[constr_5254]	Value range of <code>MultiplexedIPdu.selectorFieldLength</code>
[constr_5258]	<code>TriggerToSignalMapping.systemSignals</code> eligible for a <code>TriggerToSignalMapping</code> in case <code>DataTransformation</code> is used
[constr_5259]	<code>PduTriggerings</code> and <code>FrameTriggerings</code> of <code>SecuredIPdu</code> with <code>useAsCryptographicIPdu = true</code>
[constr_5262]	<code>SystemSignal</code> used for Trigger communication shall not be part of any <code>SystemSignalGroup</code>
[constr_5263]	<code>NetworkEndpoint.networkEndpointAddress</code> restriction for IPv4
[constr_5264]	<code>NetworkEndpoint.networkEndpointAddress</code> restriction for IPv6
[constr_5265]	<code>NetworkEndpoint.networkEndpointAddress</code> restriction
[constr_5266]	<code>VariableDataPrototype</code> of <code>NvDataInterface</code> shall not be mapped to a <code>SystemSignal</code>





Number	Heading
[constr_5267]	VariableDataPrototype of NvDataInterface shall not be mapped to a SystemSignal via a delegation to a PortPrototype with a SenderReceiverInterface
[constr_5268]	Existence of ContainedIPduProps.containedPduTriggering reference
[constr_5269]	Exclusion of ContainedIPduProps.containedPduTriggering reference
[constr_5270]	Exclusive usage of ContainerIPdu.containedPduTriggering and ContainerIPdu.containedIPduTriggeringProps
[constr_5271]	Existence of attribute BinaryManifestItem.isUnused
[constr_5272]	Value of attribute BinaryManifestItem.isUnused
[constr_5273]	One ISignalTriggering pair allowed per EthernetPhysicalChannel for a ClientServerOperation
[constr_5274]	ISignalTriggerings that represent the callSignal and returnSignal of the same ClientServerOperation on a PhysicalChannel shall be referenced by the same ClientServerToSignalMapping
[constr_5306]	Restriction of DltLogChannel.logChannelId attribute value
[constr_5307]	Existence of DltLogChannel.logChannelId
[constr_5308]	Existence of DltLogChannel.nonVerboseMode
[constr_5309]	Existence of DltConfig.sessionIdSupport
[constr_5310]	Existence of DltConfig.timestampSupport
[constr_5311]	Existence of DltLogChannel.logTraceDefaultLogThreshold
[constr_5312]	Existence of DltLogChannel.defaultTraceState
[constr_5313]	Existence of DltLogChannel.txPduTriggering
[constr_5314]	DltLogChannel txPduTriggering and rxPduTriggering shall be on the same network
[constr_5315]	FlexrayArTpConnections within the same FlexrayArTpChannel not allowed to have the same address information
[constr_5319]	TCP endpoint using TLS_SERVER role can only serve provided service instances
[constr_5320]	TCP endpoint using TLS_CLIENT role can only serve consumed service instances
[constr_5321]	Value range of Pdu.length
[constr_5322]	Value range of ISignalToIPduMapping.startPosition
[constr_5323]	Value range of ISignalToIPduMapping.updateIndicationBitPosition

**Table D.63: Added Constraints in R21-11**



### D.14.5 Changed Constraints in R21-11

Number	Heading
[constr_1198]	<a href="#">TriggerToSignalMapping.systemSignals</a> eligible for a <a href="#">TriggerToSignalMapping</a> in case no <a href="#">DataTransformation</a> is used
[constr_1199]	<a href="#">ISignals</a> relating to <a href="#">systemSignals</a> eligible for a <a href="#">TriggerToSignalMapping</a> shall use update bit in case no <a href="#">DataTransformation</a> is used
[constr_3141]	Only <a href="#">IPdus</a> shall be part of a <a href="#">ContainerIPdu</a>
[constr_3142]	Mandatory <a href="#">headerIdLongHeader</a> for <a href="#">longHeader</a>
[constr_3143]	Mandatory <a href="#">headerIdShortHeader</a> for <a href="#">shortHeader</a>
[constr_3151]	<a href="#">BufferProperties.headerLength</a> settings for an E2E transformer used in combination with a SOME/IP transformer
[constr_3152]	<a href="#">BufferProperties.headerLength</a> settings for any transformer used in combination with a COM Based transformer
[constr_3153]	E2E header field reservation required by COM Based transformer
[constr_3159]	Allowed values for <a href="#">EndToEndTransformationDescription.maxDeltaCounter</a> in PROFILE_04, PROFILE_04m PROFILE_44 and PROFILE_44m
[constr_3163]	<a href="#">EndToEndTransformationISignalProps.minDataLength</a> and <a href="#">EndToEndTransformationISignalProps.maxDataLength</a> in PROFILE_04, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44, and PROFILE_44m
[constr_3164]	<a href="#">EndToEndTransformationISignalProps.dataLength</a> in PROFILE_04, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44 and PROFILE_44m
[constr_3167]	Effect of <a href="#">EndToEndTransformationDescription.upperHeaderBitsToShift</a> value in PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44, and PROFILE_44m
[constr_3174]	<a href="#">EndToEndTransformationDescription</a> settings not allowed in PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_11, PROFILE_22, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44 and PROFILE_44m
[constr_3186]	Multiplicity of <a href="#">EndToEndTransformationDescription.dataIdMode</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44 and PROFILE_44m
[constr_3188]	Multiplicity of <a href="#">EndToEndTransformationDescription.counterOffset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44, and PROFILE_44m
[constr_3190]	Multiplicity of <a href="#">EndToEndTransformationDescription.crcOffset</a> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44 and PROFILE_44m







Number	Heading
[constr_3192]	Multiplicity of <code>EndToEndTransformationDescription.dataIdNibbleOffset</code> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44, and PROFILE_44m or <code>dataIdMode</code> different from <code>lower12Bit</code>
[constr_3194]	Multiplicity of <code>EndToEndTransformationDescription.offset</code> in PROFILE_02, PROFILE_04, PROFILE_05, PROFILE_06, PROFILE_07, PROFILE_08, PROFILE_22, PROFILE_04m, PROFILE_07m, PROFILE_08m, PROFILE_44 and PROFILE_44m
[constr_3316]	Allowed values for <code>EndToEndTransformationDescription.maxDeltaCounter</code> in PROFILE_07, PROFILE_08, PROFILE_07m and PROFILE_08m
[constr_3402]	Mandatory <code>offset</code> if <code>noHeader</code> is used
[constr_3404]	Usage of <code>ContainedIPduProps.updateIndicationBitPosition</code>
[constr_3454]	Unique <code>headerIdLongHeader</code> for <code>acceptConfigured</code>
[constr_3455]	Unique <code>headerIdShortHeader</code> for <code>acceptConfigured</code>
[constr_5191]	Consequence of attribute <code>BinaryManifestProvideResource.item.category</code>
[constr_5220]	Multiplicity of <code>EndToEndTransformationISignalProps.sourceId</code> in PROFILE_04m, PROFILE_07m, PROFILE_08m and PROFILE_44m

**Table D.64: Changed Constraints in R21-11**

#### D.14.6 Deleted Constraints in R21-11

Number	Heading
[constr_1207]	Existence of the attribute <code>DataMapping.communicationDirection</code> in the context of a <code>SenderReceiverInterface</code> or <code>TriggerInterface</code>
[constr_3035]	CanNm user data configuration in case NID/CBV are enabled
[constr_3041]	<code>pncVectorOffset</code> range
[constr_3042]	<code>pncVectorLength</code> range
[constr_3065]	Mapping of queued <code>Triggers</code> to <code>SystemSignals</code> is prohibited
[constr_3126]	<code>headerLength</code> shall be less or equal output buffer size
[constr_3154]	<code>BufferProperties.bufferComputation</code> setting for an E2E transformer when used together with a Com-based transformer
[constr_3241]	Usage of <code>AssignFrameId.messageId</code>
[constr_3242]	Usage of <code>UnassignFrameId.messageId</code>
[constr_3275]	<code>PduTriggering</code> containment in different <code>PdurIPduGroups</code> of the same <code>EcuInstance</code> is not allowed
[constr_3286]	<code>ISignal.length</code> shall be consistent to transformer configuration
[constr_3314]	<code>BufferProperties.bufferComputation</code> is mandatory
[constr_3315]	The value of V0 in <code>BufferProperties.bufferComputation</code> setting for a COM Based transformer





Number	Heading
[constr_3547]	Mandatory reference to an <a href="#">EventHandler</a> in case of <a href="#">serviceControl</a>
[constr_5070]	<a href="#">headerIds</a> of <a href="#">ProvidedServiceInstances</a> shall be unique on a <a href="#">SocketAddress</a> per communication direction
[constr_5098]	Usage of <a href="#">DltArgument.networkRepresentation</a>
[constr_5099]	Standardized values of <a href="#">DltMessage.messageTypeInfo</a>
[constr_5109]	Conditions for the explicit mapping of an <a href="#">ISignal</a> to the <a href="#">pncVector</a>
[constr_5171]	Existence of the attribute <a href="#">DataMapping.communicationDirection</a> in <a href="#">ClientServerToSignalMapping</a>

**Table D.65: Deleted Constraints in R21-11**

## D.15 Constraint and Specification Item History of this document according to AUTOSAR R22-11

### D.15.1 Added Traceables in R22-11

Number	Heading
[TPS_SYST_02379]	Recommended configuration settings for E2E Profile 5 configuration setting
[TPS_SYST_02380]	Monitoring of the requested partial networks status in case of <a href="#">allPartialNetworksActive</a> for provided service instance
[TPS_SYST_02381]	Monitoring of the requested partial networks status in case of <a href="#">allPartialNetworksActive</a> for required service instance
[TPS_SYST_02382]	Monitoring of the <a href="#">released partial networks</a> status in case of <a href="#">allPartialNetworksActive</a> for required service instance
[TPS_SYST_02383]	Monitoring of the <a href="#">released partial networks</a> status in case of <a href="#">allPartialNetworksActive</a> for provided service instance
[TPS_SYST_02384]	Sending inner Ports may contain the superset of data provided on the outer delegation Port
[TPS_SYST_02385]	Receiving outer Ports may contain the superset of data delegated to the inner Ports
[TPS_SYST_02386]	MACsec configuration
[TPS_SYST_02387]	MAC Security Key Agreement Entity configuration
[TPS_SYST_02388]	Standardized values for the attribute <a href="#">cipherSuite</a> of meta-class <a href="#">MacSecCipherSuiteConfig</a>
[TPS_SYST_02389]	Semantics of <a href="#">MacSecCipherSuiteConfig.cipherSuitePriority</a>
[TPS_SYST_03074]	CAN Controller support of CAN XL frames
[TPS_SYST_03075]	Communication over CAN XL
[TPS_SYST_03076]	Definition of CAN XL frame triggering attributes
[TPS_SYST_03077]	Managed channel in case of Ethernet tunneling through CAN XL





Number	Heading
[TPS_SYST_03078]	RTE signal fan-out support for a stand-alone <code>SystemSignal</code> out of a <code>SystemSignalGroup</code>
[TPS_SYST_03079]	No RTE fan-in support for stand-alone <code>SystemSignal</code> and the same <code>SystemSignal</code> as part of a <code>SystemSignalGroup</code>
[TPS_SYST_03080]	<code>PhysicalChannel</code> involved in a particular PNC
[TPS_SYST_03081]	<code>EcuInstance</code> involved in a particular PNC
[TPS_SYST_03082]	Definition of top level PNC-Coordinator
[TPS_SYST_03083]	Creation of a <i>PNC paths tree</i>
[TPS_SYST_03084]	Acyclic PNC graph definition
[TPS_SYST_03085]	<code>Pdu</code> qualifies as dynamic length

**Table D.66: Added Traceables in R22-11**

## D.15.2 Changed Traceables in R22-11

Number	Heading
[TPS_SYST_01109]	RTE signal fan-out support for a <code>SystemSignal</code>
[TPS_SYST_02185]	TTL for Find Service Entries
[TPS_SYST_02199]	Applicable <code>transferProperty</code> for <code>ISignalGroup</code> and all group signals have <code>transferProperty</code> not defined or <code>pending</code> defined
[TPS_SYST_02200]	Applicable <code>transferProperty</code> for <code>ISignalGroup</code> and group signals have <code>transferProperty</code> defined
[TPS_SYST_02228]	Transmission of events over UDP/TCP Port
[TPS_SYST_02251]	Data exchange not regulated by the Service Discovery protocol between two communication endpoints
[TPS_SYST_02309]	RTE signal fan-out support for a <code>SystemSignalGroup</code>
[TPS_SYST_02317]	References from <code>CpSoftwareCluster</code> to <code>CompositionSwComponentType</code> and <code>SwComponentPrototype</code>
[TPS_SYST_02320]	Kinds of <code>CpSoftwareClusterResources</code>
[TPS_SYST_03025]	Control of service instance in case of <code>anyPartialNetworkActive</code> or <code>allPartialNetworksActive</code>
[TPS_SYST_03026]	Monitoring of the <i>requested partial networks</i> status in case of <code>anyPartialNetworkActive</code> for provided service instance
[TPS_SYST_03027]	Monitoring of the <i>requested partial networks</i> status in case of <code>anyPartialNetworkActive</code> for required service instance
[TPS_SYST_03050]	Usage of <code>ConsumedServiceInstance.blocklistedVersion</code>
[TPS_SYST_03056]	Monitoring of the <i>released partial networks</i> status in case of <code>anyPartialNetworkActive</code> for required service instance
[TPS_SYST_03057]	Monitoring of the <i>released partial networks</i> status in case of <code>anyPartialNetworkActive</code> for provided service instance

**Table D.67: Changed Traceables in R22-11**

### D.15.3 Deleted Traceables in R22-11

Number	Heading
[TPS_SYST_01004]	Definition of AUTOSAR ECU
[TPS_SYST_01156]	Definition of <code>ISignalTriggerings</code> is allowed for <code>ISignalGroups</code> and for <code>GroupSignals</code>

**Table D.68: Deleted Traceables in R22-11**

### D.15.4 Added Constraints in R22-11

Number	Heading
[constr_3695]	<code>canControllerXlAttributes</code> and <code>canControllerXlRequirements</code> are mutually exclusive
[constr_3696]	Mandatory attributes of <code>CanControllerXlConfiguration</code>
[constr_3697]	Latest existence time of <code>CanControllerXlConfiguration</code> and <code>CanControllerXlConfigurationRequirements</code>
[constr_3698]	Value of <code>errorSignalingEnabled</code>
[constr_3699]	Existence of <code>pwmL</code>
[constr_3700]	Existence of <code>pwmO</code>
[constr_3701]	Existence of <code>pwmS</code>
[constr_3702]	Relevant attributes of <code>EthernetCommunicationController</code> for CAN XL
[constr_3703]	Reference to <code>CanControllerXlConfiguration</code> in case of category <code>CAN_XL</code>
[constr_3704]	Existence of <code>CanXlFrameTriggeringProps</code>
[constr_3705]	Allowed values for <code>priorityId</code>
[constr_3706]	Allowed values for <code>sduType</code>
[constr_3707]	Allowed values for <code>vcid</code>
[constr_3708]	No UDP network management in case of Ethernet tunneling through CAN XL
[constr_3713]	Allowed values for <code>acceptanceField</code>
[constr_3714]	Only one top level PNC-Coordinator per PNC
[constr_3716]	<code>SecuredIPdu.dynamicRuntimeLengthHandling</code> for dynamic length <code>Pdus</code>
[constr_3717]	<code>SecuredIPdu.dynamicRuntimeLengthHandling</code> for gateway operation with <code>IPduMapping.pduMaxLength</code> defined
[constr_3718]	Minimum length of <code>SecuredIPdus</code>
[constr_3726]	Upper multiplicity of aggregation in the role <code>CouplingPort.macSecProps</code>
[constr_5326]	Each local <code>SocketAddress</code> of an <code>EcuInstance</code> shall reference an <code>EthernetCommunicationConnector</code> in the role <code>connector</code> or <code>multicastConnector</code>
[constr_5327]	Existence of attribute <code>CpSoftwareCluster.category</code>
[constr_5328]	Ecu Extract shall only contain outerPort <code>DataMappings</code>





Number	Heading
[constr_5329]	<code>SynchronousServerCallPoints</code> for cross cluster communication are not supported
[constr_5330]	<code>ServiceInterface</code> elements shall belong to exactly one <code>ServiceInterface</code>
[constr_5331]	No IP multicast in case of TCP
[constr_5334]	Supported values for <code>CryptoServiceKey.length</code>
[constr_5335]	<code>CpSoftwareCluster.softwareClusterId</code> shall be unique in the scope of an <code>EcuInstance</code>
[constr_5336]	Existence of <code>CpSoftwareCluster.softwareClusterId</code>
[constr_5337]	All <code>CpSoftwareClusterToEcuInstanceMappings</code> that are referencing the same <code>EcuInstance</code> shall define the same <code>machineId</code>
[constr_5344]	Applicable <code>transferProperty</code> for <code>GroupSignal</code> and <code>ISignalGroup</code>
[constr_5359]	<code>CpSoftwareClusterBinaryManifestDescriptor.softwareClusterId</code> shall be identical to <code>CpSoftwareCluster.softwareClusterId</code>
[constr_5360]	Cross cluster communication involving <code>NvBlockSwComponentType</code> is not supported
[constr_5361]	MACsec configuration is allowed only on switch ports

**Table D.69: Added Constraints in R22-11**

### D.15.5 Changed Constraints in R22-11

Number	Heading
[constr_3060]	Allowed Attributes for <code>networkRepresentationProps</code> and <code>physicalProps</code>
[constr_3268]	Service Discovery <code>StaticSocketConnection</code> aggregation by a <code>SocketAddress</code>
[constr_3325]	<code>SecureCommunicationFreshnessProps</code> , <code>SecureCommunicationAuthenticationProps</code> and <code>CryptoServicePrimitive</code> attribute value settings for standardized AUTOSAR security profiles
[constr_3331]	Standardized values for the attribute <code>category</code> of meta-class <code>EthernetCommunicationConnector</code>
[constr_3332]	Standardized values for the attribute <code>category</code> of meta-class <code>EthernetCommunicationController</code>
[constr_3516]	limitation of <code>Frame.frameLength</code> for CAN L-PDUs
[constr_3545]	Mandatory reference to a <code>Pnc</code> in case of <code>anyPartialNetworkActive</code> or <code>allPartialNetworksActive</code>
[constr_3559]	<code>ConsumedServiceInstance.blocklistedVersion</code> is restricted to the usage of <code>minorVersion</code>
[constr_5168]	<code>pncGatewayType</code> passive and connected ECUs

**Table D.70: Changed Constraints in R22-11**

### D.15.6 Deleted Constraints in R22-11

Number	Heading
[constr_3459]	Applicable <a href="#">transferProperty</a> for group signal

**Table D.71: Deleted Constraints in R22-11**

### D.15.7 Added Advisories in R22-11

Number	Heading
[advisory_-02004]	Check for reachable PNC nodes
[advisory_-03000]	<a href="#">initValue</a> defined in the context of <a href="#">ISignal</a> that references a <a href="#">SystemSignal</a> with a <a href="#">CompuMethod</a> of <a href="#">category</a> TEXTTABLE or BITFIELD_TEXTTABLE
[advisory_-03001]	<a href="#">invalidValue</a> defined in the context of <a href="#">ISignal</a> that references a <a href="#">SystemSignal</a> with a <a href="#">CompuMethod</a> of <a href="#">category</a> TEXTTABLE or BITFIELD_TEXTTABLE
[advisory_-03002]	<a href="#">timeoutSubstitutionValue</a> defined in the context of <a href="#">ISignal</a> that references a <a href="#">SystemSignal</a> with a <a href="#">CompuMethod</a> of <a href="#">category</a> TEXTTABLE or BITFIELD_TEXTTABLE

**Table D.72: Added Advisories in R22-11**

### D.15.8 Changed Advisories in R22-11

none

### D.15.9 Deleted Advisories in R22-11

none

## E Mentioned Class Tables

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.

<b>Class</b>	<b>ARElement</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ARPackage			
<b>Note</b>	An element that can be defined stand-alone, i.e. without being part of another element (except for packages of course).			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">AclObjectSet</a> , <a href="#">AclOperation</a> , <a href="#">AclPermission</a> , <a href="#">AclRole</a> , <a href="#">AliasNameSet</a> , <a href="#">ApplicationPartition</a> , <a href="#">AutosarData Type</a> , <a href="#">BaseType</a> , <a href="#">BlueprintMappingSet</a> , <a href="#">BswEntryRelationshipSet</a> , <a href="#">BswModuleDescription</a> , <a href="#">BswModuleEntry</a> , <a href="#">BuildActionManifest</a> , <a href="#">CalibrationParameterValueSet</a> , <a href="#">ClientIdDefinitionSet</a> , <a href="#">ClientServerInterfaceToBswModuleEntryBlueprintMapping</a> , <a href="#">Collection</a> , <a href="#">CompuMethod</a> , <a href="#">ConsistencyNeedsBlueprintSet</a> , <a href="#">ConstantSpecification</a> , <a href="#">ConstantSpecificationMappingSet</a> , <a href="#">CpSoftwareCluster</a> , <a href="#">CpSoftwareClusterBinaryManifestDescriptor</a> , <a href="#">CpSoftwareClusterMappingSet</a> , <a href="#">CpSoftwareClusterResourcePool</a> , <a href="#">CryptoEllipticCurveProps</a> , <a href="#">CryptoServiceCertificate</a> , <a href="#">CryptoServiceKey</a> , <a href="#">CryptoServicePrimitive</a> , <a href="#">CryptoServiceQueue</a> , <a href="#">CryptoSignatureScheme</a> , <a href="#">DataConstr</a> , <a href="#">DataExchangePoint</a> , <a href="#">DataTransformationSet</a> , <a href="#">DataTypeMappingSet</a> , <a href="#">DiagnosticCommonElement</a> , <a href="#">DiagnosticConnection</a> , <a href="#">DiagnosticContributionSet</a> , <a href="#">DltContext</a> , <a href="#">DltEcu</a> , <a href="#">Documentation</a> , <a href="#">E2EProfileCompatibilityProps</a> , <a href="#">EcucDefinitionCollection</a> , <a href="#">EcucDestinationUriDefSet</a> , <a href="#">EcucModuleConfigurationValues</a> , <a href="#">EcucModuleDef</a> , <a href="#">EcucValueCollection</a> , <a href="#">EndToEndProtectionSet</a> , <a href="#">EthIp Props</a> , <a href="#">EthTcpIpCmpProps</a> , <a href="#">EthTcpIpProps</a> , <a href="#">EvaluatedVariantSet</a> , <a href="#">FMFeature</a> , <a href="#">FMFeatureMap</a> , <a href="#">FMFeatureModel</a> , <a href="#">FMFeatureSelectionSet</a> , <a href="#">FlatMap</a> , <a href="#">GeneralPurposeConnection</a> , <a href="#">HwCategory</a> , <a href="#">HwElement</a> , <a href="#">HwType</a> , <a href="#">IPSecConfigProps</a> , <a href="#">IPv6ExtHeaderFilterSet</a> , <a href="#">IdsCommonElement</a> , <a href="#">IdsDesign</a> , <a href="#">Implementation</a> , <a href="#">InterpolationRoutineMappingSet</a> , <a href="#">J1939ControllerApplication</a> , <a href="#">KeywordSet</a> , <a href="#">LifecycleInfoSet</a> , <a href="#">LifecycleStateDefinitionGroup</a> , <a href="#">LogAndTraceMessageCollectionSet</a> , <a href="#">MacSecGlobalKayProps</a> , <a href="#">MacSecParticipantSet</a> , <a href="#">McFunction</a> , <a href="#">McGroup</a> , <a href="#">ModeDeclarationGroup</a> , <a href="#">ModeDeclarationMappingSet</a> , <a href="#">OsTaskProxy</a> , <a href="#">PhysicalDimension</a> , <a href="#">PhysicalDimensionMappingSet</a> , <a href="#">PortInterface</a> , <a href="#">PortInterfaceMappingSet</a> , <a href="#">PortPrototypeBlueprint</a> , <a href="#">PostBuildVariantCriterion</a> , <a href="#">PostBuildVariantCriterionValueSet</a> , <a href="#">PredefinedVariant</a> , <a href="#">RapidPrototypingScenario</a> , <a href="#">SdgDef</a> , <a href="#">SignalServiceTranslationPropsSet</a> , <a href="#">SomeipSdClientEventGroupTimingConfig</a> , <a href="#">SomeipSdClientServiceInstanceConfig</a> , <a href="#">SomeipSdServerEventGroupTimingConfig</a> , <a href="#">SomeipSdServerServiceInstanceConfig</a> , <a href="#">SwAddrMethod</a> , <a href="#">SwAxisType</a> , <a href="#">SwComponentMappingConstraints</a> , <a href="#">SwComponentType</a> , <a href="#">SwRecordLayout</a> , <a href="#">SwSystemconst</a> , <a href="#">SwSystemconstantValueSet</a> , <a href="#">SwcBswMapping</a> , <a href="#">System</a> , <a href="#">SystemSignal</a> , <a href="#">SystemSignalGroup</a> , <a href="#">TDCpSoftwareClusterMappingSet</a> , <a href="#">TcpOptionFilterSet</a> , <a href="#">TimingExtension</a> , <a href="#">TlsConnectionGroup</a> , <a href="#">TlvDataIdDefinitionSet</a> , <a href="#">TransformationPropsSet</a> , <a href="#">Unit</a> , <a href="#">UnitGroup</a> , <a href="#">ViewMapSet</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.1: ARElement**

<b>Class</b>	<b>ARPackage</b>			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ARPackage			
<b>Note</b>	AUTOSAR package, allowing to create top level packages to structure the contained ARElements. ARPackages are open sets. This means that in a file based description system multiple files can be used to partially describe the contents of a package. This is an extended version of MSR's SW-SYSTEM.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.arPackage</a> , <a href="#">AUTOSAR.arPackage</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	ARPackage			
arPackage	<a href="#">ARPackage</a>	*	aggr	<p>This represents a sub package within an ARPackage, thus allowing for an unlimited package hierarchy.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation  <b>Tags:</b>            atp.Splitkey=arPackage.shortName, arPackage.variationPoint.shortLabel            vh.latestBindingTime=blueprintDerivationTime            xml.sequenceOffset=30</p>
element	<a href="#">PackageableElement</a>	*	aggr	<p>Elements that are part of this package</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation  <b>Tags:</b>            atp.Splitkey=element.shortName, element.variationPoint.shortLabel            vh.latestBindingTime=systemDesignTime            xml.sequenceOffset=20</p>
referenceBase	ReferenceBase	*	aggr	<p>This denotes the reference bases for the package. This is the basis for all relative references within the package. The base needs to be selected according to the base attribute within the references.</p> <p><b>Stereotypes:</b> atpSplittable  <b>Tags:</b>            atp.Splitkey=referenceBase.shortLabel            xml.sequenceOffset=10</p>

**Table E.2: ARPackage**

Class	AUTOSAR			
Package	M2::AUTOSARTemplates::AutosarTopLevelStructure			
Note	Root element of an AUTOSAR description, also the root element in corresponding XML documents. <b>Tags:</b> xml.globalElement=true			
Base	ARObject			
Attribute	Type	Mult.	Kind	Note
adminData	<a href="#">AdminData</a>	0..1	aggr	<p>This represents the administrative data of an Autosar file.</p> <p><b>Tags:</b>xml.sequenceOffset=10</p>
arPackage	<a href="#">ARPackage</a>	*	aggr	<p>This is the top level package in an AUTOSAR model.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation  <b>Tags:</b>            atp.Splitkey=arPackage.shortName, arPackage.variationPoint.shortLabel            vh.latestBindingTime=blueprintDerivationTime            xml.sequenceOffset=30</p>
fileInfoComment	FileInfoComment	0..1	aggr	<p>This represents a possibility to provide a structured comment in an AUTOSAR file.</p> <p><b>Stereotypes:</b> atpStructuredComment  <b>Tags:</b>            xml.roleElement=true            xml.sequenceOffset=-10            xml.typeElement=false</p>
introduction	DocumentationBlock	0..1	aggr	<p>This represents an introduction on the Autosar file. It is intended for example to represent disclaimers and legal notes.</p> <p><b>Tags:</b>xml.sequenceOffset=20</p>

**Table E.3: AUTOSAR**



<b>Class</b>	<b>AdminData</b>			
<b>Package</b>	M2::MSR::AsamHdo::AdminData			
<b>Note</b>	<p>AdminData represents the ability to express administrative information and custom extensions for an element. This administration information is to be treated as meta-data such as revision id or state of the file. There are basically the following kinds of meta-data</p> <ul style="list-style-type: none"> <li>• The language and/or used languages.</li> <li>• Revision information covering e.g. revision number, state, release date, changes. Note that this information can be given in general as well as related to a particular company.</li> <li>• Document meta-data specific for a company</li> </ul> <p>Beside that a custom extension of model-data is possible by</p> <ul style="list-style-type: none"> <li>• Special data</li> </ul>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	AUTOSAR.adminData, Describable.adminData, Identifiable.adminData			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
docRevision (ordered)	DocRevision	*	aggr	<p>This allows to denote information about the current revision of the object.</p> <p>Note that information about previous revisions can also be logged here. The entries shall be sorted descendant by date in order to reflect the history. Therefore the most recent entry representing the current version is denoted first.</p> <p><b>Tags:</b> xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=50 xml.typeElement=false xml.typeWrapperElement=false</p>
language	LEnum	0..1	attr	<p>This attribute specifies the master language of the document or the document fragment. The master language is the one in which the document is maintained and from which the other languages are derived from. In particular in case of inconsistencies, the information in the master language is priority.</p> <p><b>Tags:</b>xml.sequenceOffset=20</p>
sdg	Sdg	*	aggr	<p>This property allows to keep special data which is not represented by the standard model. It can be utilized to keep e.g. tool specific data.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=sdg xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=60 xml.typeElement=false xml.typeWrapperElement=false</p>
usedLanguages	MultiLanguagePlainText	0..1	aggr	<p>This property specifies the languages which are provided in the document. Therefore it should only be specified in the top level admin data. For each language provided in the document there is one entry in MultilanguagePlainText. The content of each entry can be used for illustration of the language. The used language itself depends on the language attribute in the entry.</p> <p><b>Tags:</b>xml.sequenceOffset=30</p>

**Table E.4: AdminData**

<b>Class</b>	<b>AnyInstanceRef</b>			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::AnyInstanceRef			
<b>Note</b>	Describes a reference to any instance in an AUTOSAR model. This is the most generic form of an instance ref. Refer to the superclass notes for more details.			
<b>Base</b>	<i>ARObject</i> , <i>AtpInstanceRef</i>			
<b>Aggregated by</b>	<a href="#">Collection.collectedInstance</a> , <a href="#">Collection.sourceInstance</a> , <a href="#">DocumentationContext.feature</a> , <a href="#">EcuInstanceReferenceValue.value</a> , <a href="#">FlatInstanceDescriptor.ecuExtractReference</a> , <a href="#">FlatInstanceDescriptor.upstreamReference</a> , <a href="#">RptContainer.byPassPoint</a> , <a href="#">RptHook.rptArHook</a> , <a href="#">ViewMap.firstElementInstance</a> , <a href="#">ViewMap.secondElementInstance</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
base	AtpClassifier	1	ref	This is the base from which navigation path begins. <b>Stereotypes:</b> atpDerived
contextElement (ordered)	AtpFeature	*	ref	This is one step in the navigation path specified by the instance ref.
target	AtpFeature	1	ref	This is the target of the instance ref.

**Table E.5: AnyInstanceRef**

<b>Class</b>	<b>ApplicationArrayType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
<b>Note</b>	An application data type which is an array, each element is of the same application data type. <b>Tags:</b> atp.recommendedPackage=ApplicationDataTypes			
<b>Base</b>	<i>ARElement</i> , <i>ARObject</i> , <i>ApplicationCompositeDataType</i> , <i>ApplicationDataType</i> , <i>AtpBlueprint</i> , <i>AtpBlueprintable</i> , <i>AtpClassifier</i> , <i>AtpType</i> , <i>AutosarDataType</i> , <i>CollectableElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dynamicArray SizeProfile	String	0..1	attr	Specifies the profile which the array will follow if it is a variable size array.
element	ApplicationArray Element	0..1	aggr	This association implements the concept of an array element. That is, in some cases it is necessary to be able to identify single array elements, e.g. as input values for an interpolation routine.

**Table E.6: ApplicationArrayType**

<b>Class</b>	<b>ApplicationCompositeDataType</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
<b>Note</b>	Abstract base class for all application data types composed of other data types.			
<b>Base</b>	<i>ARElement</i> , <i>ARObject</i> , <i>ApplicationDataType</i> , <i>AtpBlueprint</i> , <i>AtpBlueprintable</i> , <i>AtpClassifier</i> , <i>AtpType</i> , <i>AutosarDataType</i> , <i>CollectableElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Subclasses</b>	<a href="#">ApplicationArrayType</a> , <a href="#">ApplicationRecordDataType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.7: ApplicationCompositeDataType**

<b>Class</b>	<b>ApplicationCompositeElementDataPrototype</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
<b>Note</b>	This class represents a data prototype which is aggregated within a composite application data type (record or array). It is introduced to provide a better distinction between target and context in instance Refs.			
<b>Base</b>	ARObject, AtpFeature, AtpPrototype, <a href="#">DataPrototype</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	ApplicationArrayElement, <a href="#">ApplicationRecordElement</a>			
<b>Aggregated by</b>	AtpClassifier.atpFeature			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
type	<a href="#">ApplicationDataType</a>	0..1	tref	This represents the corresponding data type. <b>Stereotypes:</b> isOfType

**Table E.8: ApplicationCompositeElementDataPrototype**

<b>Class</b>	<b>ApplicationDataType</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
<b>Note</b>	<p>ApplicationDataType defines a data type from the application point of view. Especially it should be used whenever something "physical" is at stake.</p> <p>An ApplicationDataType represents a set of values as seen in the application model, such as measurement units. It does not consider implementation details such as bit-size, endianness, etc.</p> <p>It should be possible to model the application level aspects of a VFB system by using ApplicationDataTypes only.</p>			
<b>Base</b>	<a href="#">ARElement</a> , ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, <a href="#">AutosarDataType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">ApplicationCompositeDataType</a> , <a href="#">ApplicationPrimitiveDataType</a>			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.9: ApplicationDataType**

<b>Class</b>	<b>ApplicationError</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	This is a user-defined error that is associated with an element of an AUTOSAR interface. It is specific for the particular functionality or service provided by the AUTOSAR software component.			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ClientServerInterface.possibleError</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
errorCode	Integer	0..1	attr	The RTE generator is forced to assign this value to the corresponding error symbol. Note that for error codes certain ranges are predefined (see RTE specification).

**Table E.10: ApplicationError**

<b>Class</b>	<b>ApplicationPrimitiveDataType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
<b>Note</b>	<p>A primitive data type defines a set of allowed values.</p> <p><b>Tags:</b>atp.recommendedPackage=ApplicationDataTypes</p>			





<b>Class</b>	<b>ApplicationPrimitiveDataType</b>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">ApplicationDataType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">AutosarDataType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
-	-	-	-	-

**Table E.11: ApplicationPrimitiveDataType**

<b>Class</b>	<b>ApplicationRecordDataType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
<b>Note</b>	An application data type which can be decomposed into prototypes of other application data types. <b>Tags:</b> atp.recommendedPackage=ApplicationDataTypes			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">ApplicationCompositeDataType</a> , <a href="#">ApplicationDataType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">AutosarDataType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
element (ordered)	<a href="#">ApplicationRecordElement</a>	*	aggr	Specifies an element of a record.  The aggregation of ApplicationRecordElement is subject to variability with the purpose to support the conditional existence of elements inside a ApplicationrecordData Type.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=element.shortName, element.variation Point.shortLabel vh.latestBindingTime=preCompileTime

**Table E.12: ApplicationRecordDataType**

<b>Class</b>	<b>ApplicationRecordElement</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
<b>Note</b>	Describes the properties of one particular element of an application record data type.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">ApplicationCompositeElementDataPrototype</a> , <a href="#">AtpFeature</a> , <a href="#">AtpPrototype</a> , <a href="#">DataPrototype</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ApplicationRecordDataType.element</a> , <a href="#">AtpClassifier.atpFeature</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
isOptional	Boolean	0..1	attr	This attribute represents the ability to declare the enclosing ApplicationRecordElement as optional. This means the that, at runtime, the ApplicationRecord Element may or may not have a valid value and shall therefore be ignored.  The underlying runtime software provides means to set the ApplicationRecordElement as not valid at the sending end of a communication and determine its validity at the receiving end.

**Table E.13: ApplicationRecordElement**

<b>Class</b>	<b>ApplicationSwComponentType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	The ApplicationSwComponentType is used to represent the application software. <b>Tags:</b> atp.recommendedPackage=SwComponentTypes			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtomicSwComponentType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.14: ApplicationSwComponentType**

<b>Class</b>	<b>ArgumentDataPrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	An argument of an operation, much like a data element, but also carries direction information and is owned by a particular ClientServerOperation.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AtpFeature</a> , <a href="#">AtpPrototype</a> , <a href="#">AutosarDataPrototype</a> , <a href="#">DataPrototype</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a> , <a href="#">ClientServerOperation.argument</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
direction	<a href="#">ArgumentDirectionEnum</a>	0..1	attr	This attribute specifies the direction of the argument prototype.
serverArgumentImplPolicy	<a href="#">ServerArgumentImplPolicyEnum</a>	0..1	attr	This defines how the argument type of the servers RunnableEntity is implemented. If the attribute is not defined this has the same semantics as if the attribute is set to the value useArgumentType for primitive arguments and structures.

**Table E.15: ArgumentDataPrototype**

<b>Enumeration</b>	<b>ArgumentDirectionEnum</b>			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes			
<b>Note</b>	Use cases: <ul style="list-style-type: none"> <li>Arguments in ClientServerOperation can have different directions that need to be formally indicated because they have an impact on how the function signature looks like eventually.</li> <li>Arguments in BswModuleEntry already determine a function signature, but the direction is used to specify the semantics, especially of pointer arguments.</li> </ul>			
<b>Aggregated by</b>	<a href="#">ArgumentDataPrototype.direction</a> , <a href="#">SwServiceArg.direction</a>			
<b>Literal</b>	<b>Description</b>			
in	The argument value is passed to the callee. <b>Tags:</b> atp.EnumerationLiteralIndex=0			
inout	The argument value is passed to the callee but also passed back from the callee to the caller. <b>Tags:</b> atp.EnumerationLiteralIndex=1			
out	The argument value is passed from the callee to the caller. <b>Tags:</b> atp.EnumerationLiteralIndex=2			

**Table E.16: ArgumentDirectionEnum**

<b>Class</b>	<b>ArrayValueSpecification</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::Constants			
<b>Note</b>	Specifies the values for an array.			
<b>Base</b>	<i>ARObject</i> , <i>CompositeValueSpecification</i> , <i>ValueSpecification</i>			
<b>Aggregated by</b>	ApplicationAssocMapElementValueSpecification.key, ApplicationAssocMapElementValueSpecification.value, <a href="#">ArrayValueSpecification.element</a> , <a href="#">CalibrationParameterValue.applInitValue</a> , <a href="#">CalibrationParameterValue.implInitValue</a> , CompositeRuleBasedValueSpecification.argument, ConstantSpecification.valueSpec, <a href="#">CryptoServiceKey.developmentValue</a> , DiagnosticEnvDataCondition.compareValue, DiagnosticEnvDataElementCondition.compareValue, FieldSenderComSpec.initValue, <a href="#">ISignal.initValue</a> , <a href="#">ISignal.timeoutSubstitutionValue</a> , <a href="#">NonqueuedReceiverComSpec.initValue</a> , <a href="#">NonqueuedReceiverComSpec.timeoutSubstitutionValue</a> , NonqueuedSenderComSpec.initValue, NvProvideComSpec.ramBlockInitValue, NvProvideComSpec.romBlockInitValue, NvRequireComSpec.initValue, <a href="#">ParameterDataPrototype.initValue</a> , ParameterProvideComSpec.initValue, ParameterRequireComSpec.initValue, PersistencyDataRequiredComSpec.initValue, PersistencyKeyValuePair.initValue, PortDefinedArgumentValue.value, PortPrototypeBlueprintInitValue.value, RecordValueSpecification.field, <i>StateManagementCompareCondition.compareValue</i> , <a href="#">SwDataDefProps.invalidValue</a> , <a href="#">VariableDataPrototype.initValue</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
element (ordered)	<a href="#">ValueSpecification</a>	*	aggr	The value for a single array element. All Value Specifications aggregated by ArrayValueSpecification shall have the same structure.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=element, element.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
intendedPartial Initialization Count	PositiveInteger	0..1	attr	This attribute shall only have a meaning for dynamic arrays and shall be taken as a sanity check: the number filled in the attribute shall be identical to the number of ArrayValueSpecification.element.  If the attribute does not exist it means that no partial initialization is intended.

**Table E.17: ArrayValueSpecification**

<b>Class</b>	<b>AssemblySwConnector</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Composition			
<b>Note</b>	AssemblySwConnectors are exclusively used to connect SwComponentPrototypes in the context of a CompositionSwComponentType.			
<b>Base</b>	<i>ARObject</i> , <i>AtpClassifier</i> , <i>AtpFeature</i> , <i>AtpStructureElement</i> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a> , <a href="#">SwConnector</a>			
<b>Aggregated by</b>	<i>AtpClassifier.atpFeature</i> , <a href="#">CompositionSwComponentType.connector</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
provider	AbstractProvidedPort Prototype	0..1	iref	Instance of providing port.  <b>InstanceRef implemented by:</b> PPortInComposition InstanceRef
requester	AbstractRequiredPort Prototype	0..1	iref	Instance of requiring port.  <b>InstanceRef implemented by:</b> RPortInComposition InstanceRef

**Table E.18: AssemblySwConnector**

<b>Class</b>	<b>AtomicSwComponentType</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	An atomic software component is atomic in the sense that it cannot be further decomposed and distributed across multiple ECUs.			





<b>Class</b>	<b>AtomicSwComponentType</b> (abstract)			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
<b>Subclasses</b>	<a href="#">ApplicationSwComponentType</a> , <a href="#">ComplexDeviceDriverSwComponentType</a> , <a href="#">EcuAbstractionSwComponentType</a> , <a href="#">NvBlockSwComponentType</a> , <a href="#">SensorActuatorSwComponentType</a> , <a href="#">ServiceProxySwComponentType</a> , <a href="#">ServiceSwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
internalBehavior	<a href="#">SwcInternalBehavior</a>	0..1	aggr	The SwcInternalBehaviors owned by an AtomicSwComponentType can be located in a different physical file. Therefore the aggregation is <<atpSplittable>>. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=internalBehavior.shortName, internalBehavior.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
symbolProps	<a href="#">SymbolProps</a>	0..1	aggr	This represents the SymbolProps for the AtomicSwComponentType. <b>Stereotypes:</b> atpSplittable <b>Tags:</b> atp.Splitkey=symbolProps.shortName

**Table E.19: AtomicSwComponentType**

<b>Class</b>	<b>AtpInstanceRef</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::AbstractStructure			
<b>Note</b>	An M0 instance of a classifier may be represented as a tree rooted at that instance, where under each node come the sub-trees representing the instances which act as features under that node.  An instance ref specifies a navigation path from any M0 tree-instance of the base (which is a classifier) to a leaf (which is an instance of the target).			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Subclasses</b>	<a href="#">AnyInstanceRef</a> , <a href="#">ApplicationCompositeElementInPortInterfaceInstanceRef</a> , <a href="#">ComponentInCompositionInstanceRef</a> , <a href="#">ComponentInSystemInstanceRef</a> , <a href="#">DataPrototypeInPortInterfaceInstanceRef</a> , <a href="#">DataPrototypeInSystemInstanceRef</a> , <a href="#">InnerDataPrototypeGroupInCompositionInstanceRef</a> , <a href="#">InnerPortGroupInCompositionInstanceRef</a> , <a href="#">InnerRunnableEntityGroupInCompositionInstanceRef</a> , <a href="#">InstanceEventInCompositionInstanceRef</a> , <a href="#">ModeDeclarationGroupPrototypeInSystemInstanceRef</a> , <a href="#">ModeGroupInAtomicSwcInstanceRef</a> , <a href="#">ModelInBswModuleDescriptionInstanceRef</a> , <a href="#">ModelInSwcInstanceRef</a> , <a href="#">OperationArgumentInComponentInstanceRef</a> , <a href="#">OperationInAtomicSwcInstanceRef</a> , <a href="#">OperationInSystemInstanceRef</a> , <a href="#">PModelInSystemInstanceRef</a> , <a href="#">ParameterDataPrototypeInSystemInstanceRef</a> , <a href="#">ParameterInAtomicSWCTypeInstanceRef</a> , <a href="#">PortGroupInSystemInstanceRef</a> , <a href="#">PortInCompositionTypeInstanceRef</a> , <a href="#">RModelInAtomicSwcInstanceRef</a> , <a href="#">RteEventInCompositionInstanceRef</a> , <a href="#">RteEventInEcuInstanceRef</a> , <a href="#">RteEventInSystemInstanceRef</a> , <a href="#">RunnableEntityInCompositionInstanceRef</a> , <a href="#">SwcServiceDependencyInSystemInstanceRef</a> , <a href="#">TriggerInAtomicSwcInstanceRef</a> , <a href="#">TriggerInSystemInstanceRef</a> , <a href="#">VariableAccessInEcuInstanceRef</a> , <a href="#">VariableDataPrototypeInCompositionInstanceRef</a> , <a href="#">VariableDataPrototypeInSystemInstanceRef</a> , <a href="#">VariableInAtomicSWCTypeInstanceRef</a> , <a href="#">VariableInAtomicSwcInstanceRef</a> , <a href="#">VariableInComponentInstanceRef</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
atpBase	<a href="#">AtpClassifier</a>	1	ref	This is the base from which the navigation path starts. <b>Stereotypes:</b> atpAbstract; atpDerived
atpContextElement (ordered)	<a href="#">AtpPrototype</a>	*	ref	This is one particular step in the navigation path. <b>Stereotypes:</b> atpAbstract
atpTarget	<a href="#">AtpFeature</a>	1	ref	This is the target of the instance ref. In other words it is the terminal of the navigation path. <b>Stereotypes:</b> atpAbstract

**Table E.20: AtpInstanceRef**



<b>Class</b>	<b>AutosarDataPrototype</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
<b>Note</b>	Base class for prototypical roles of an AutosarDataType.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AtpFeature</a> , <a href="#">AtpPrototype</a> , <a href="#">DataPrototype</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">ArgumentDataPrototype</a> , <a href="#">ParameterDataPrototype</a> , <a href="#">VariableDataPrototype</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
type	<a href="#">AutosarDataType</a>	0..1	tref	This represents the corresponding data type. <b>Stereotypes:</b> isOfType

**Table E.21: AutosarDataPrototype**

<b>Class</b>	<b>AutosarDataType</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
<b>Note</b>	Abstract base class for user defined AUTOSAR data types for software.			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">AbstractImplementationDataType</a> , <a href="#">ApplicationDataType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
swDataDef Props	<a href="#">SwDataDefProps</a>	0..1	aggr	The properties of this AutosarDataType. <b>Stereotypes:</b> atpSplittable <b>Tags:</b> atp.Splitkey=swDataDefProps

**Table E.22: AutosarDataType**

<b>Class</b>	<b>BaseType</b> (abstract)			
<b>Package</b>	M2::MSR::AsamHdo::BaseTypes			
<b>Note</b>	This abstract meta-class represents the ability to specify a platform dependent base type.			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">SwBaseType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
baseType Definition	BaseTypeDefinition	1	aggr	This is the actual definition of the base type. <b>Tags:</b> xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false

**Table E.23: BaseType**

<b>Class</b>	<b>BaseTypeDirectDefinition</b>			
<b>Package</b>	M2::MSR::AsamHdo::BaseTypes			
<b>Note</b>	This BaseType is defined directly (as opposite to a derived BaseType)			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">BaseTypeDefinition</a>			







Class		BaseTypeDirectDefinition		
Aggregated by		<a href="#">BaseType.baseTypeDefinition</a>		
Attribute	Type	Mult.	Kind	Note
baseTypeEncoding	BaseTypeEncodingString	0..1	attr	This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. <b>Tags:</b> xml.sequenceOffset=90
baseTypeSize	PositiveInteger	0..1	attr	Describes the length of the data type specified in the container in bits. <b>Tags:</b> xml.sequenceOffset=70
byteOrder	<a href="#">ByteOrderEnum</a>	0..1	attr	This attribute specifies the byte order of the base type. <b>Tags:</b> xml.sequenceOffset=110
memAlignment	PositiveInteger	0..1	attr	This attribute describes the alignment of the memory object in bits. E.g. "8" specifies, that the object in question is aligned to a byte while "32" specifies that it is aligned four byte. If the value is set to "0" the meaning shall be interpreted as "unspecified". <b>Tags:</b> xml.sequenceOffset=100
nativeDeclaration	NativeDeclarationString	0..1	attr	This attribute describes the declaration of such a base type in the native programming language, primarily in the Programming language C. This can then be used by a code generator to include the necessary declarations into a header file. For example  BaseType with shortName: "MyUnsignedInt" native Declaration: "unsigned short"  Results in  typedef unsigned short MyUnsignedInt;  If the attribute is not defined the referring Implementation DataTypes will not be generated as a typedef by RTE.  If a nativeDeclaration type is given it shall fulfill the characteristic given by baseTypeEncoding and baseTypeSize.  This is required to ensure the consistent handling and interpretation by software components, RTE, COM and MCM systems. <b>Tags:</b> xml.sequenceOffset=120

**Table E.24: BaseTypeDirectDefinition**

Class		BswInternalBehavior		
Package		M2::AUTOSARTemplates::BswModuleTemplate::BswBehavior		
Note		Specifies the behavior of a BSW module or a BSW cluster w.r.t. the code entities visible by the BSW Scheduler. It is possible to have several different BswInternalBehaviors referring to the same BswModuleDescription.		
Base		<a href="#">AObject</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpFeature</a> , <a href="#">AtpStructureElement</a> , <a href="#">Identifiable</a> , <a href="#">InternalBehavior</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>		
Aggregated by		<a href="#">AtpClassifier.atpFeature</a> , <a href="#">BswModuleDescription.internalBehavior</a>		
Attribute	Type	Mult.	Kind	Note





Class	BswInternalBehavior			
arTypedPerInstanceMemory	<a href="#">VariableDataPrototype</a>	*	aggr	<p>Defines an AUTOSAR typed memory-block that needs to be available for each instance of the Basic Software Module. The aggregation of arTypedPerInstanceMemory is subject to variability with the purpose to support variability in the Basic Software Module's implementations. Typically different algorithms in the implementation are requiring different number of memory objects.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=arTypedPerInstanceMemory.shortName, arTypedPerInstanceMemory.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime</p>
bswPerInstanceMemoryPolicy	BswPerInstanceMemoryPolicy	*	aggr	<p>Policy for a arTypedPerInstanceMemory The policy selects the options of the Schedule Manager API generation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=bswPerInstanceMemoryPolicy, bswPerInstanceMemoryPolicy.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime</p>
clientPolicy	BswClientPolicy	*	aggr	<p>Policy for a requiredClientServerEntry. The policy selects the options of the Schedule Manager API generation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=clientPolicy, clientPolicy.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime</p>
distinguishedPartition	BswDistinguishedPartition	*	aggr	<p>Indicates an abstract partition context in which the enclosing BswModuleEntity can be executed.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=distinguishedPartition.shortName, distinguishedPartition.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime            xml.sequenceOffset=60</p>
entity	BswModuleEntity	*	aggr	<p>A code entity for which the behavior is described</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=entity.shortName, entity.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime            xml.sequenceOffset=5</p>
event	BswEvent	*	aggr	<p>An event required by this module behavior.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=event.shortName, event.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime            xml.sequenceOffset=10</p>





Class	BswInternalBehavior			
exclusiveAreaPolicy	BswExclusiveAreaPolicy	*	aggr	<p>Policy for an ExclusiveArea in this BswInternalBehavior. The policy selects the options of the Schedule Manager API generation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=exclusiveAreaPolicy, exclusiveAreaPolicy.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime</p>
includedDataTypeSet	IncludedDataTypeSet	*	aggr	<p>The includedDataTypeSet is used by a basic software module for its implementation.</p> <p><b>Stereotypes:</b> atpSplitable  <b>Tags:</b>atp.Splitkey=includedDataTypeSet</p>
includedModeDeclarationGroupSet	IncludedModeDeclarationGroupSet	*	aggr	<p>This aggregation represents the included Mode DeclarationGroups</p> <p><b>Stereotypes:</b> atpSplitable  <b>Tags:</b>atp.Splitkey=includedModeDeclarationGroupSet</p>
internalTriggeringPoint	BswInternalTriggeringPoint	*	aggr	<p>An internal triggering point.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=internalTriggeringPoint.shortName, internalTriggeringPoint.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime  xml.sequenceOffset=2</p>
internalTriggeringPointPolicy	BswInternalTriggeringPointPolicy	*	aggr	<p>Policy for an internalTriggeringPoint in this BswInternalBehavior.. The policy selects the options of the Schedule Manager API generation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=internalTriggeringPointPolicy, internalTriggeringPointPolicy.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime</p>
modeReceiverPolicy	BswModeReceiverPolicy	*	aggr	<p>Implementation policy for the reception of mode switches.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=modeReceiverPolicy, modeReceiverPolicy.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime  xml.sequenceOffset=25</p>
modeSenderPolicy	BswModeSenderPolicy	*	aggr	<p>Implementation policy for providing a mode group.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=modeSenderPolicy, modeSenderPolicy.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime  xml.sequenceOffset=20</p>
parameterPolicy	BswParameterPolicy	*	aggr	<p>Policy for a perInstanceParameter in this BswInternalBehavior. The policy selects the options of the Schedule Manager API generation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=parameterPolicy, parameterPolicy.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime</p>





Class	BswInternalBehavior			
perInstanceParameter	<a href="#">ParameterData</a> <a href="#">Prototype</a>	*	aggr	<p>Describes a read only memory object containing characteristic value(s) needed by this BswInternalBehavior. The role name perInstanceParameter is chosen in analogy to the similar role in the context of SwcInternalBehavior.</p> <p>In contrast to constantMemory, this object is not allocated locally by the module's code, but by the BSW Scheduler and it is accessed from the BSW module via the BSW Scheduler API. The main use case is the support of software emulation of calibration data.</p> <p>The aggregation is subject to variability with the purpose to support implementation variants.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=perInstanceParameter.shortName, perInstanceParameter.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime  xml.sequenceOffset=45</p>
receptionPolicy	BswDataReceptionPolicy	*	aggr	<p>Data reception policy for inter-partition and/or inter-core communication.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=receptionPolicy, receptionPolicy.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime  xml.sequenceOffset=55</p>
releasedTriggerPolicy	BswReleasedTriggerPolicy	*	aggr	<p>Policy for a releasedTrigger. The policy selects the options of the Schedule Manager API generation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=releasedTriggerPolicy, releasedTriggerPolicy.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime</p>
schedulerNamePrefix	BswSchedulerNamePrefix	*	aggr	<p>Optional definition of one or more prefixes to be used for the BswScheduler.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=schedulerNamePrefix.shortName, schedulerNamePrefix.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime  xml.sequenceOffset=50</p>
sendPolicy	BswDataSendPolicy	*	aggr	<p>Policy for a providedData. The policy selects the options of the Schedule Manager API generation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>  atp.Splitkey=sendPolicy, sendPolicy.variationPoint.shortLabel  vh.latestBindingTime=preCompileTime</p>





Class	BswInternalBehavior			
service Dependency	BswService Dependency	*	aggr	<p>Defines the requirements on AUTOSAR Services for a particular item.</p> <p>The aggregation is subject to variability with the purpose to support the conditional existence of ServiceNeeds.</p> <p>The aggregation is splitable in order to support that ServiceNeeds might be provided in later development steps.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=serviceDependency.ident.shortName, serviceDependency.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=40</p>
triggerDirect Implementation	BswTriggerDirect Implementation	*	aggr	<p>Specifies a trigger to be directly implemented via OS calls.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=triggerDirectImplementation, triggerDirect Implementation.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=15</p>
variationPoint Proxy	VariationPointProxy	*	aggr	<p>Proxy of a variation points in the C/C++ implementation.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b>atp.Splitkey=variationPointProxy.shortName</p>

**Table E.25: BswInternalBehavior**

Class	CalibrationParameterValue			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::MeasurementAndCalibration::CalibrationParameter Values			
<b>Note</b>	<p>Specifies instance specific calibration parameter values used to initialize the memory objects implementing calibration parameters in the generated RTE code.</p> <p>RTE generator will use the implInitValue to override the initial values specified for the DataPrototypes of a component type.</p> <p>The applInitValue is used to exchange init values with the component vendor not publishing the transformation algorithm between ApplicationDataTypes and ImplementationDataTypes or defining an instance specific initialization of components which are only defined with ApplicationDataTypes.</p> <p>Note: If both representations of init values are available these need to represent the same content.</p> <p>Note further that in this case an explicit mapping of ValueSpecification is not implemented because calibration parameters are delivered back after the calibration phase.</p>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	CalibrationParameterValueSet.calibrationParameterValue			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
applInitValue	ValueSpecification	0..1	aggr	This is the initial value specification structured according to the ApplicationDataType
implInitValue	ValueSpecification	0..1	aggr	This is the initial value specification structured according to the ImplementationDataType
initialized Parameter	FlatInstanceDescriptor	0..1	ref	This represents the parameter that is initialized by the CalibrationParameterValue.

**Table E.26: CalibrationParameterValue**

<b>Class</b>	<b>CanXIframeTriggeringProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanCommunication			
<b>Note</b>	This element indicates the frame being CAN XL and contains further CAN XL specific attributes.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	CanFrameTriggering.canXIframeTriggeringProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
acceptanceField	PositiveInteger	0..1	attr	Acceptance field of a CAN XL message.
priorityId	PositiveInteger	0..1	attr	Priority ID of a CAN XL message.
sduType	PositiveInteger	0..1	attr	SDU type of a CAN XL message.
vcid	PositiveInteger	0..1	attr	Virtual CAN network ID of a CAN XL message.

**Table E.27: CanXIframeTriggeringProps**

<b>Class</b>	<b>ClientServerInterface</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	A client/server interface declares a number of operations that can be invoked on a server by a client. <b>Tags:</b> atp.recommendedPackage=PortInterfaces			
<b>Base</b>	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
operation	ClientServerOperation	*	aggr	ClientServerOperation(s) of this ClientServerInterface. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=operation.shortName, operation.variationPoint.shortLabel vh.latestBindingTime=blueprintDerivationTime
possibleError	ApplicationError	*	aggr	Application errors that are defined as part of this interface.

**Table E.28: ClientServerInterface**

<b>Class</b>	<b>ClientServerOperation</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	An operation declared within the scope of a client/server interface.			
<b>Base</b>	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	ApplicationInterface.command, AtpClassifier.atpFeature, ClientServerInterface.operation, DiagnosticDataElementInterface.read, DiagnosticDataIdentifierInterface.read, DiagnosticDataIdentifierInterface.write, DiagnosticRoutineInterface.requestResult, DiagnosticRoutineInterface.start, DiagnosticRoutineInterface.stop, PhmRecoveryActionInterface.recovery, ServiceInterface.method			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
argument (ordered)	ArgumentDataPrototype	*	aggr	An argument of this ClientServerOperation <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=argument.shortName, argument.variationPoint.shortLabel vh.latestBindingTime=blueprintDerivationTime





Class	ClientServerOperation			
diagArgIntegrity	Boolean	0..1	attr	<p>This attribute shall only be used in the implementation of diagnostic routines to support the case where input and output arguments are allocated in a shared buffer and might unintentionally overwrite input arguments by tentative write operations to output arguments.</p> <p>This situation can happen during sliced execution or while output parameters are arrays (call by reference). The value true means that the ClientServerOperation is aware of the usage of a shared buffer and takes precautions to avoid unintentional overwrite of input arguments.</p> <p>If the attribute does not exist or is set to false the Client ServerOperation does not have to consider the usage of a shared buffer.</p>
possibleError	<a href="#">ApplicationError</a>	*	ref	Possible errors that may be raised by the referring operation.

**Table E.29: ClientServerOperation**

Class	Collection			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ElementCollection			
Note	<p>This meta-class specifies a collection of elements. A collection can be utilized to express additional aspects for a set of elements.</p> <p>Note that Collection is an ARElement. Therefore it is applicable e.g. for EvaluatedVariant, even if this is not obvious.</p> <p>Usually the category of a Collection is "SET". On the other hand, a Collection can also express an arbitrary relationship between elements. This is denoted by the category "RELATION" (see also [TPS_GST_00347]).</p> <p>In this case the collection represents an association from "sourceElement" to "targetElement" in the role "role".</p> <p><b>Tags:</b>atp.recommendedPackage=Collections</p>			
Base	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
Aggregated by	<a href="#">ARPackage.element</a>			
Attribute	Type	Mult.	Kind	Note
autoCollect	AutoCollectEnum	0..1	attr	<p>This attribute reflects how far the referenced objects are part of the collection.</p> <p><b>Tags:</b>xml.sequenceOffset=20</p>
collected Instance	AtpFeature	*	iref	<p>This instance ref supports the use case that a particular instance is part of the collection.</p> <p><b>Tags:</b>xml.sequenceOffset=60 <b>InstanceRef implemented by:</b><a href="#">AnyInstanceRef</a></p>
collection Semantics	NameToken	0..1	attr	<p>Provides the ability to express the semantics of a Collection depending on the intended use case. The collectionSemantics is specified as a NameToken which must be agreed by all stakeholders.</p> <p><b>Tags:</b>xml.sequenceOffset=25</p>
element	<a href="#">Identifiable</a>	*	ref	<p>This is an element in the collection. Note that Collection itself is collectable. Therefore collections can be nested.</p> <p>In case of category="RELATION" this represents the target end of the relation.</p> <p><b>Tags:</b>xml.sequenceOffset=40</p>





Class	Collection			
elementRole	Identifier	0..1	attr	This attribute allows to denote a particular role of the collection. Note that the applicable semantics shall be mutually agreed between the two parties.  In particular it denotes the role of element in the context of sourceElement. <b>Tags:</b> xml.sequenceOffset=30
sourceElement	<a href="#">Identifiable</a>	*	ref	Only if Category = "RELATION". This represents the source of a relation. <b>Tags:</b> xml.sequenceOffset=50
sourceInstance	AtpFeature	*	iref	Only if Category = "RELATION". This represents the source instance of a relation. <b>Tags:</b> xml.sequenceOffset=70 <b>InstanceRef implemented by:</b> <a href="#">AnyInstanceRef</a>

**Table E.30: Collection**

Class	ComplexDeviceDriverSwComponentType			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	The ComplexDeviceDriverSwComponentType is a special AtomicSwComponentType that has direct access to hardware on an ECU and which is therefore linked to a specific ECU or specific hardware. The ComplexDeviceDriverSwComponentType introduces the possibility to link from the software representation to its hardware description provided by the ECU Resource Template. <b>Tags:</b> atp.recommendedPackage=SwComponentTypes			
Base	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtomicSwComponentType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
Aggregated by	<a href="#">ARPackage.element</a>			
Attribute	Type	Mult.	Kind	Note
hardware Element	HwDescriptionEntity	*	ref	Reference from the ComplexDeviceDriverSwComponent Type to the description of the used HwElements.

**Table E.31: ComplexDeviceDriverSwComponentType**

Class	CompuConstTextContent			
Package	M2::MSR::AsamHdo::ComputationMethod			
Note	This meta-class represents the textual content of a scale.			
Base	<a href="#">ARObject</a> , <a href="#">CompuConstContent</a>			
Aggregated by	CompuConst.compuConstContentType			
Attribute	Type	Mult.	Kind	Note
vt	VerbatimString	0..1	attr	This represents a textual constant in the computation method.

**Table E.32: CompuConstTextContent**



<b>Class</b>	<b>CompuMethod</b>			
<b>Package</b>	M2::MSR::AsamHdo::ComputationMethod			
<b>Note</b>	This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.  Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.  <b>Tags:</b> atp.recommendedPackage=CompuMethods			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
compuInternalToPhys	Compu	0..1	aggr	This specifies the computation from internal values to physical values.  <b>Tags:</b> xml.sequenceOffset=80
compuPhysToInternal	Compu	0..1	aggr	This represents the computation from physical values to the internal values.  <b>Tags:</b> xml.sequenceOffset=90
displayFormat	DisplayFormatString	0..1	attr	This property specifies, how the physical value shall be displayed e.g. in documents or measurement and calibration tools.  <b>Tags:</b> xml.sequenceOffset=20
unit	Unit	0..1	ref	This is the physical unit of the Physical values for which the CompuMethod applies.  <b>Tags:</b> xml.sequenceOffset=30

**Table E.33: CompuMethod**

<b>Class</b>	<b>CompuScale</b>			
<b>Package</b>	M2::MSR::AsamHdo::ComputationMethod			
<b>Note</b>	This meta-class represents the ability to specify one segment of a segmented computation method.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">CompuScales.compuScale</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
compuInverseValue	CompuConst	0..1	aggr	This is the inverse value of the constraint. This supports the case that the scale is not reversible per se.  <b>Tags:</b> xml.sequenceOffset=60
compuScaleContents	CompuScaleContents	0..1	aggr	This represents the computation details of the scale.  <b>Tags:</b> xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=70 xml.typeElement=false xml.typeWrapperElement=false
desc	MultiLanguageOverviewParagraph	0..1	aggr	<desc> represents a general but brief description of the object in question.  <b>Tags:</b> xml.sequenceOffset=30
lowerLimit	Limit	0..1	attr	This specifies the lower limit of the scale.  <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime xml.sequenceOffset=40





Class	CompuScale			
mask	PositiveUnlimitedInteger	0..1	attr	<p>In difference to all the other computational methods every COMPU-SCALE will be applied including the bit MASK. Therefore it is allowed for this type of COMPU-METHOD, that COMPU-SCALES overlap.</p> <p>To calculate the string reverse to a value, the string has to be split and the according value for each substring has to be summed up. The sum is finally transmitted.</p> <p>The processing has to be done in order of the COMPU-SCALE elements.</p> <p><b>Tags:</b>xml.sequenceOffset=35</p>
shortLabel	Identifier	0..1	attr	<p>This element specifies a short name for the particular scale. The name can for example be used to derive a programming language identifier.</p> <p><b>Tags:</b>xml.sequenceOffset=20</p>
symbol	CIdentifier	0..1	attr	<p>The symbol, if provided, is used by code generators to get a C identifier for the CompuScale. The name will be used as is for the code generation, therefore it needs to be unique within the generation context.</p> <p><b>Tags:</b>xml.sequenceOffset=25</p>
upperLimit	Limit	0..1	attr	<p>This specifies the upper limit of a of the scale.</p> <p><b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime xml.sequenceOffset=50</p>

**Table E.34: CompuScale**

<b>Class</b>	<<atpMixedString>> <b>ConditionByFormula</b>			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::VariantHandling			
<b>Note</b>	<p>This class represents a condition which is computed based on system constants according to the specified expression. The expected result is considered as boolean value.</p> <p>The result of the expression is interpreted as a condition.</p> <ul style="list-style-type: none"> <li>• "0" represents "false";</li> <li>• a value other than zero is considered "true"</li> </ul>			
<b>Base</b>	ARObject, FormulaExpression, SwSystemconstDependentFormula			
<b>Aggregated by</b>	VariationPoint.swSyscond, VariationPointProxy.conditionAccess			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
bindingTime	BindingTimeEnum	1	attr	<p>This attribute specifies the point in time when condition may be evaluated at earliest. At this point in time all referenced system constants shall have a value.</p> <p><b>Tags:</b>xml.attribute=true</p>

**Table E.35: ConditionByFormula**

<b>Enumeration</b>	<b>CouplingPortRoleEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology
<b>Note</b>	Defines the role a CouplingPort takes in the context of a CouplingElement.
<b>Aggregated by</b>	CouplingPort.couplingPortRole
<b>Literal</b>	<b>Description</b>





Enumeration	CouplingPortRoleEnum
hostPort	The hostPort is connected to an ECU (host ecu). The host ECU controls the connected Coupling Element (e.g. Ethernet switch). <b>Tags:</b> atp.EnumerationLiteralIndex=0
standardPort	A CouplingPort can be a standardPort that is used to connect the CouplingElement with Coupling Ports outside the ECU. <b>Tags:</b> atp.EnumerationLiteralIndex=2
upLinkPort	A CouplingPort can be connected to another CouplingPort of a CouplingElement located on the same ECU (CouplingElement.ecuInstance) using the CouplingPortConnection. This is used to model a cascaded switch. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table E.36: CouplingPortRoleEnum**

<b>Class</b>	<i>DataPrototype</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
<b>Note</b>	Base class for prototypical roles of any data type.			
<b>Base</b>	<i>ARObject</i> , <i>AtpFeature</i> , <i>AtpPrototype</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Subclasses</b>	<i>ApplicationCompositeElementDataPrototype</i> , <i>AutosarDataPrototype</i>			
<b>Aggregated by</b>	<i>AtpClassifier.atpFeature</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
swDataDef Props	<a href="#">SwDataDefProps</a>	0..1	aggr	This property allows to specify data definition properties which apply on data prototype level. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=swDataDefProps

**Table E.37: DataPrototype**

<b>Class</b>	<i>DataPrototypeMapping</i>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	<p>Defines the mapping of two particular VariableDataPrototypes, ParameterDataPrototypes or Argument DataPrototypes with non-equal shortNames, non-equal structure (specific condition is described by [constr_1187]), and/or non-equal semantic (resolution or range) in context of two different Sender ReceiverInterface, NvDataInterface or ParameterInterface or Operations.</p> <p>If the semantic is unequal, the following rules apply: The textTableMapping is only applicable if the referred DataPrototypes are typed by AutosarDataType referring to CompuMethods of category TEXTTABLE, SCALE_LINEAR_AND_TEXTTABLE or BITFIELD_TEXTTABLE.</p> <p>In the case that the DataPrototypes are typed by AutosarDataType either referring to CompuMethods of category LINEAR, IDENTICAL or referring to no CompuMethod (which is similar as IDENTICAL) the linear conversion factor is calculated out of the factorSiToUnit and offsetSiToUnit attributes of the referred Units and the CompuRationalCoeffs of a compuInternalToPhys of the referred CompuMethods.</p>			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	ClientServerOperationMapping.argumentMapping, <a href="#">VariableAndParameterInterfaceMapping.dataMapping</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
firstData Prototype	<a href="#">AutosarDataPrototype</a>	0..1	ref	First to be mapped DataPrototype in context of a Sender ReceiverInterface, NvDataInterface, ParameterInterface or Operation.





<b>Class</b>	<b>DataPrototypeMapping</b>			
firstToSecond Data Transformation	<a href="#">DataTransformation</a>	0..1	ref	<p>This reference defines the need to execute the Data Transformation &lt;Mip&gt;_&lt;transformerId&gt; functions of the transformation chain when communicating from the Data PrototypeMapping.firstDataPrototype to the Data PrototypeMapping.secondDataPrototype.</p> <p>This reference also specifies the reverse Data Transformation &lt;Mip&gt;_Inv_&lt;transformerId&gt; functions of the transformation chain (i.e. from the DataPrototypeMapping.secondDataPrototype to the DataPrototypeMapping.firstDataPrototype) if the referenced Data Transformation is symmetric, i.e. attribute Data Transformation.dataTransformationKind is set to symmetric.</p>
secondData Prototype	<a href="#">AutosarDataPrototype</a>	0..1	ref	Second to be mapped DataPrototype in context of a SenderReceiverInterface, NvDataInterface, Parameter Interface or Operation.
secondToFirst Data Transformation	<a href="#">DataTransformation</a>	0..1	ref	This defines the need to execute the reverse Data Transformation <Mip>_Inv_<transformerId> functions of the transformation chain when communicating from the DataPrototypeMapping.secondDataPrototype to the Data PrototypeMapping.firstDataPrototype.
subElement Mapping	SubElementMapping	*	aggr	This represents the owned SubelementMapping.
textTable Mapping	<a href="#">TextTableMapping</a>	0..2	aggr	Applied TextTableMapping(s)

**Table E.38: DataPrototypeMapping**

<b>Enumeration</b>	<b>DataTransformationErrorHandlingEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::PortAPIOptions
<b>Note</b>	This enumeration defines different ways how a RunnableEntity shall handle transformer errors.
<b>Aggregated by</b>	<a href="#">PortAPIOption.errorHandling</a>
<b>Literal</b>	<b>Description</b>
noTransformerError Handling	A runnable does not handle transformer errors. <b>Tags:</b> atp.EnumerationLiteralIndex=0
transformerError Handling	The runnable implements the handling of transformer errors. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table E.39: DataTransformationErrorHandlingEnum**

<b>Enumeration</b>	<b>DataTransformationStatusForwardingEnum</b>
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::PortAPIOptions
<b>Note</b>	This enumeration defines different ways how a RunnableEntity shall be able to forward status code into the transformer chain.
<b>Aggregated by</b>	<a href="#">PortAPIOption.transformerStatusForwarding</a>
<b>Literal</b>	<b>Description</b>
noTransformer StatusForwarding	The RunnableEntity is not able to forward a transformer status code. <b>Tags:</b> atp.EnumerationLiteralIndex=0
transformerStatus Forwarding	The RunnableEntity is able to forward a transformer status code. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table E.40: DataTransformationStatusForwardingEnum**

<b>Class</b>	<b>DataTypeMap</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
<b>Note</b>	This class represents the relationship between ApplicationDataType and its implementing AbstractImplementationDataType.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	DataTypeMappingSet.dataTypeMap			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
applicationDataType	ApplicationDataType	0..1	ref	This is the corresponding ApplicationDataType
implementationDataType	AbstractImplementationDataType	0..1	ref	This is the corresponding AbstractImplementationDataType.

**Table E.41: DataTypeMap**

<b>Class</b>	<b>DataTypeMappingSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
<b>Note</b>	This class represents a list of mappings between ApplicationDataTypes and ImplementationDataTypes. In addition, it can contain mappings between ImplementationDataTypes and ModeDeclarationGroups. <b>Tags:</b> atp.recommendedPackage=DataTypeMappingSets			
<b>Base</b>	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataTypeMap	DataTypeMap	*	aggr	This is one particular association between an ApplicationDataType and its AbstractImplementationDataType.
modeRequestTypeMap	ModeRequestTypeMap	*	aggr	This is one particular association between an ModeDeclarationGroup and its AbstractImplementationDataType.

**Table E.42: DataTypeMappingSet**

<b>Class</b>	<b>DelegationSwConnector</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Composition			
<b>Note</b>	A delegation connector delegates one inner PortPrototype (a port of a component that is used inside the composition) to a outer PortPrototype of compatible type that belongs directly to the composition (a port that is owned by the composition).			
<b>Base</b>	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable, SwConnector			
<b>Aggregated by</b>	AtpClassifier.atpFeature, CompositionSwComponentType.connector			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
innerPort	PortPrototype	0..1	iref	The port that belongs to the ComponentPrototype in the composition <b>Tags:</b> xml.typeElement=true <b>InstanceRef implemented by:</b> PortInCompositionType InstanceRef
outerPort	PortPrototype	0..1	ref	The port that is located on the outside of the CompositionType

**Table E.43: DelegationSwConnector**

<b>Class</b>	<b>Describable</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable			
<b>Note</b>	This meta-class represents the ability to add a descriptive documentation to non identifiable elements.			
<b>Base</b>	ARObject			
<b>Subclasses</b>	CyclicTiming, EventControlledTiming, HwElementConnector, HwPinConnector, HwPinGroupConnector, I PduTiming, Ipv4DhcpServerConfiguration, Ipv6DhcpServerConfiguration, PncMapping, Socket Connection, TransformationComSpecProps, TransformationSignalProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
adminData	AdminData	0..1	aggr	This represents the administrative data for the describable object. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=adminData xml.sequenceOffset=-20
category	CategoryString	0..1	attr	The category is a keyword that specializes the semantics of the Describable. It affects the expected existence of attributes and the applicability of constraints. <b>Tags:</b> xml.sequenceOffset=-50
desc	MultiLanguageOverview Paragraph	0..1	aggr	This represents a general but brief (one paragraph) description what the object in question is about. It is only one paragraph! Desc is intended to be collected into overview tables. This property helps a human reader to identify the object in question.  More elaborate documentation, (in particular how the object is built or used) should go to "introduction". <b>Tags:</b> xml.sequenceOffset=-60
introduction	DocumentationBlock	0..1	aggr	This represents more information about how the object in question is built or is used. Therefore it is a DocumentationBlock. <b>Tags:</b> xml.sequenceOffset=-30

**Table E.44: Describable**

<b>Class</b>	<b>DltApplication</b>			
<b>Package</b>	M2::AUTOSARTemplates::LogAndTraceExtract			
<b>Note</b>	This meta-class represents the application from which the log and trace message originates.			
<b>Base</b>	ARObject, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	DltEcu.application			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
application Description	String	0..1	attr	This attribute can be used to describe the applicationId that is used in the log and trace message in more detail.
applicationId	String	0..1	attr	This attribute identifies the SW-C/BSW module in the log and trace message.
context	DltContext	*	ref	Definition of ContextIds for the Application. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=context.dltContext, context.variation Point.shortLabel vh.latestBindingTime=systemDesignTime

**Table E.45: DltApplication**

<b>Class</b>	<b>DitContext</b>			
<b>Package</b>	M2::AUTOSARTemplates::LogAndTraceExtract			
<b>Note</b>	This meta-class represents the Context that groups Log and Trace Messages that are generated by an application. <b>Tags:</b> atp.recommendedPackage=DitContexts			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
contextDescription	<a href="#">String</a>	0..1	attr	This attribute can be used to describe the contextId that is used in the log and trace message in more detail.
contextId	<a href="#">String</a>	0..1	attr	This attribute is used to group log and trace messages produced by an application to distinguish functionality.
dltMessage	<a href="#">DltMessage</a>	*	ref	Group of Log and Trace Messages assigned to the Dlt Context  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=dltMessage.dltMessage, dltMessage.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime

**Table E.46: DitContext**

<b>Class</b>	<b>DltEcu</b>			
<b>Package</b>	M2::AUTOSARTemplates::LogAndTraceExtract			
<b>Note</b>	This element represents an Ecu or Machine that produces logging and tracing information. <b>Tags:</b> atp.recommendedPackage=DltEcus			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
application	<a href="#">DltApplication</a>	*	aggr	Application on DltEcu that provides log or trace data.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=application.shortName, application.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
eculd	<a href="#">String</a>	0..1	attr	This attribute defines the name of the ECU for use within the Dlt protocol.

**Table E.47: DltEcu**

<b>Class</b>	<b>DltMessage</b>			
<b>Package</b>	M2::AUTOSARTemplates::LogAndTraceExtract			
<b>Note</b>	This element defines a DltMessage.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">LogAndTraceMessageCollectionSet.dltMessage</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dltArgument (ordered)	<a href="#">DltArgument</a>	*	aggr	Ordered collection of DltArguments in the DltMessage.
messageId	<a href="#">PositiveInteger</a>	0..1	attr	This attribute defines the unique Id for the DltMessage.





Class	DitMessage			
messageLine Number	PositiveInteger	0..1	attr	This attribute describes the position in the source file in which this log message was called.
messageSource File	<a href="#">String</a>	0..1	attr	This attribute describes the source file in which this log message was called.
messageType Info	<a href="#">String</a>	0..1	attr	This attribute describes the message Type
privacyLevel	PrivacyLevel	0..1	aggr	The Privacy Level helps to identify the Log and Trace content towards the degree of privacy to it.

**Table E.48: DitMessage**

Class	DolpActivationLineNeeds			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
<b>Note</b>	A DoIP entity needs to be informed when an external tester is attached or activated. The DolpActivation ServiceNeeds specifies the trigger for such an event. Examples would be a Pdu via a regular communication bus, a PWM signal, or an I/O. For details please refer to the ISO 13400.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">DolpServiceNeeds</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a> , <a href="#">ServiceNeeds</a>			
<b>Aggregated by</b>	BswServiceDependency.serviceNeeds, SwcServiceDependency.serviceNeeds			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.49: DolpActivationLineNeeds**

Class	DolpGidNeeds			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
<b>Note</b>	The DolpGidNeeds indicates that the software-component owning this ServiceNeeds is providing the GID number either after a GID Synchronisation or by other means like e.g. flashed EEPROM parameter. This need can be used independent from DolpGidSynchronizationNeeds and is necessary if the GID can not be provided out of the DoIP configuration options.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">DolpServiceNeeds</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a> , <a href="#">ServiceNeeds</a>			
<b>Aggregated by</b>	BswServiceDependency.serviceNeeds, SwcServiceDependency.serviceNeeds			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.50: DolpGidNeeds**

Class	DolpGidSynchronizationNeeds			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
<b>Note</b>	The DolpGidSynchronizationNeeds indicates that the software-component owning this ServiceNeeds is triggered by the DoIP entity to start a synchronization of the GID (Group Identification) on the DoIP service 0x0001, 0x0002, 0x0003 or before announcement via service 0x0004 according to ISO 13400-2:2012 if necessary. Note that this need is only relevant for DoIP synchronization masters.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">DolpServiceNeeds</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a> , <a href="#">ServiceNeeds</a>			
<b>Aggregated by</b>	BswServiceDependency.serviceNeeds, SwcServiceDependency.serviceNeeds			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.51: DolpGidSynchronizationNeeds**



<b>Class</b>	<b>DolpPowerModeStatusNeeds</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
<b>Note</b>	The DolpPowerModeStatusNeeds indicates that the software-component owning this ServiceNeeds is providing the PowerModeStatus for the DoIP service 0x4003 according to ISO 13400-2:2012.			
<b>Base</b>	<i>ARObject</i> , <i>DolpServiceNeeds</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i> , <i>ServiceNeeds</i>			
<b>Aggregated by</b>	BswServiceDependency.serviceNeeds, SwcServiceDependency.serviceNeeds			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.52: DolpPowerModeStatusNeeds**

<b>Class</b>	<b>DolpServiceNeeds</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
<b>Note</b>	This represents an abstract base class for ServiceNeeds related to DoIP.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i> , <i>ServiceNeeds</i>			
<b>Subclasses</b>	<i>DolpActivationLineNeeds</i> , <i>DolpGidNeeds</i> , <i>DolpGidSynchronizationNeeds</i> , <i>DolpPowerModeStatusNeeds</i> , <i>DolpRoutingActivationAuthenticationNeeds</i> , <i>DolpRoutingActivationConfirmationNeeds</i> , <i>FurtherActionByteNeeds</i>			
<b>Aggregated by</b>	BswServiceDependency.serviceNeeds, SwcServiceDependency.serviceNeeds			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.53: DolpServiceNeeds**

<b>Class</b>	<b>EcuAbstractionSwComponentType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	The EcuAbstraction is a special AtomicSwComponentType that resides between a software-component that wants to access ECU periphery and the Microcontroller Abstraction. The EcuAbstractionSwComponentType introduces the possibility to link from the software representation to its hardware description provided by the ECU Resource Template. <b>Tags:</b> atp.recommendedPackage=SwComponentTypes			
<b>Base</b>	<i>ARElement</i> , <i>ARObject</i> , <i>AtomicSwComponentType</i> , <i>AtpBlueprint</i> , <i>AtpBlueprintable</i> , <i>AtpClassifier</i> , <i>AtpType</i> , <i>CollectableElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i> , <i>SwComponentType</i>			
<b>Aggregated by</b>	<i>ARPackage.element</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
hardware Element	HwDescriptionEntity	*	ref	Reference from the EcuAbstractionComponentType to the description of the used HwElements.

**Table E.54: EcuAbstractionSwComponentType**

<b>Class</b>	<b>EcucContainerDef</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::ECUCParameterDefTemplate			
<b>Note</b>	Base class used to gather common attributes of configuration container definitions.			
<b>Base</b>	<i>ARObject</i> , <i>AtpDefinition</i> , <i>EcucDefinitionElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Subclasses</b>	<i>EcucChoiceContainerDef</i> , <i>EcucParamConfContainerDef</i>			
<b>Aggregated by</b>	<i>EcucDestinationUriPolicy.container</i> , <i>EcucModuleDef.container</i> , <i>EcucParamConfContainerDef.subContainer</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	EcucContainerDef (abstract)			
destinationUri	EcucDestinationUriDef	*	ref	Several destinationUris can be defined for an Ecuc ContainerDef. With such destinationUris an Ecuc ContainerDef is applicable for several EcucUriReference Defs. <b>Stereotypes:</b> atpUriDef
multiplicity ConfigClass	EcucMultiplicity ConfigurationClass	*	aggr	Specifies which MultiplicityConfigurationClass this container is available for which ConfigurationVariant. This aggregation is optional if the surrounding EcucModuleDef has the Category STANDARDIZED_MODULE_DEFINITION. If the category attribute of the EcucModule Def is set to VENDOR_SPECIFIC_MODULE_DEFINITION and if the upperMultiplicity is greater than the lowerMultiplicity then this aggregation is mandatory. <b>Tags:</b> xml.name Plural=MULTIPLICITY-CONFIG-CLASSES
origin	String	0..1	attr	This attribute specifies whether this configuration container is an AUTOSAR standardized container or whether it is vendor-specific.
postBuildVariant Multiplicity	Boolean	0..1	attr	Indicates if a container may have different number of instances in different post-build variants (previously known as post-build selectable configuration sets). TRUE means yes, FALSE means no.
requiresIndex	Boolean	0..1	attr	Used to define whether the value element for this definition shall be provided with an index.

**Table E.55: EcucContainerDef**

Class	EcucContainerValue			
Package	M2::AUTOSARTemplates::ECUCDescriptionTemplate			
Note	Represents a Container definition in the ECU Configuration Description.			
Base	ARObject, EcucIndexableValue, Identifiable, MultilanguageReferrable, Referrable			
Aggregated by	EcucContainerValue.subContainer, EcucModuleConfigurationValues.container			
Attribute	Type	Mult.	Kind	Note
definition	EcucContainerDef	0..1	ref	Reference to the definition of this Container in the ECU Configuration Parameter Definition. <b>Tags:</b> xml.sequenceOffset=-10
parameterValue	EcucParameterValue	*	aggr	Aggregates all ECU Configuration Values within this Container. atpVariation: [RS_ECUC_00079] <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=parameterValue, parameterValue.variation Point.shortLabel vh.latestBindingTime=postBuild
referenceValue	EcucAbstractReference Value	*	aggr	Aggregates all References with this container. atpVariation: [RS_ECUC_00079] <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=referenceValue, referenceValue.variation Point.shortLabel vh.latestBindingTime=postBuild





<b>Class</b>	<b>EcucContainerValue</b>			
subContainer	<a href="#">EcucContainerValue</a>	*	aggr	Aggregates all sub-containers within this container. atpVariation: [RS_ECUC_00078] <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=subContainer.shortName, subContainer.variationPoint.shortLabel vh.latestBindingTime=postBuild

**Table E.56: EcucContainerValue**

<b>Class</b>	<b>EcucValueCollection</b>			
<b>Package</b>	M2::AUTOSARTemplates::ECUCDescriptionTemplate			
<b>Note</b>	This represents the anchor point of the ECU configuration description. <b>Tags:</b> atp.recommendedPackage=EcucValueCollections			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
ecucValue	EcucModuleConfigurationValues	*	ref	References to the configuration of individual software modules that are present on this ECU. atpVariation: [RS_ECUC_00079] <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=ecucValue.ecucModuleConfigurationValues, ecucValue.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
ecuExtract	<a href="#">System</a>	0..1	ref	Represents the extract of the System Configuration that is relevant for the ECU configured with that ECU Configuration Description.

**Table E.57: EcucValueCollection**

<b>Class</b>	<b>EndToEndProtectionVariablePrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::EndToEndProtection			
<b>Note</b>	It is possible to protect the data exchanged between software components. For this purpose, for each communication to be protected, the user defines a separate EndToEndProtection (specifying a set of protection settings) and refers to a variableDataPrototype in the role of sender and to one or many variableDataPrototypes in the role of receiver. For details, see EndToEnd Library.  Caveat: The E2E wrapper approach involves technologies that are not subjected to the AUTOSAR standard and is superseded by the superior E2E transformer approach (which is fully standardized by AUTOSAR). Hence, new projects (without legacy constraints due to carry-over parts) shall use the fully standardized E2E transformer approach.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">EndToEndProtection.endToEndProtectionVariablePrototype</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
receiver	<a href="#">VariableDataPrototype</a>	*	iref	This represents the receiver. Note that 1:n communication is supported for this use case. <b>InstanceRef implemented by:</b> <a href="#">VariableDataPrototypeInSystemInstanceRef</a>





Class		EndToEndProtectionVariablePrototype		
sender	<a href="#">VariableDataPrototype</a>	0..1	iref	<p>This represents the sender.</p> <p>Can be optional if an ecu extract is provided and the sender is part of the extract.</p> <p><b>InstanceRef implemented by:</b> <a href="#">VariableDataPrototype</a> in <a href="#">SystemInstanceRef</a></p>
shortLabel	Identifier	0..1	attr	<p>This serves as part of the split key in case of more than one EndToEndProtectionVariablePrototype is aggregated in the bound model.</p> <p><b>Stereotypes:</b> atpIdentityContributor</p>

**Table E.58: EndToEndProtectionVariablePrototype**

Class		EndToEndTransformationComSpecProps		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Transformer			
<b>Note</b>	The class EndToEndTransformationComSpecProps specifies port specific configuration properties for EndToEnd transformer attributes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Describable</a> , <a href="#">TransformationComSpecProps</a>			
<b>Aggregated by</b>	ClientComSpec.transformationComSpecProps, <a href="#">ReceiverComSpec.transformationComSpecProps</a> , ServerComSpec.transformationComSpecProps			
Attribute	Type	Mult.	Kind	Note
clearFromValidToInvalid	Boolean	0..1	attr	Clear monitoring window on transition from state Valid to state Invalid.
disableEndToEndCheck	Boolean	0..1	attr	Disables/Enables the E2E check. The E2Eheader is removed from the payload independent from the setting of this attribute.
disableEndToEndStateMachine	Boolean	0..1	attr	Disables the E2EStateMachine (only E2E check functionality is performed)
e2eProfileCompatibilityProps	<a href="#">E2EProfileCompatibilityProps</a>	0..1	ref	Reference to additional settings for the E2E state machine.
maxDeltaCounter	PositiveInteger	0..1	attr	Maximum allowed difference between two counter values of two consecutively received valid messages. For example, if the receiver gets data with counter 1 and MaxDeltaCounter is 3, then at the next reception the receiver can accept Counters with values 2, 3 or 4.
maxErrorStateInit	PositiveInteger	0..1	attr	Maximal number of checks in which ProfileStatus equal to E2E_P_ERROR was determined, within the last Window Size checks, for the state E2E_SM_INIT. The minimum value is 0.
maxErrorStateInvalid	PositiveInteger	0..1	attr	Maximal number of checks in which ProfileStatus equal to E2E_P_ERROR was determined, within the last Window Size checks, for the state E2E_SM_INVALID. The minimum value is 0.
maxErrorStateValid	PositiveInteger	0..1	attr	Maximal number of checks in which ProfileStatus equal to E2E_P_ERROR was determined, within the last Window Size checks, for the state E2E_SM_VALID. The minimum value is 0.
maxNoNewOrRepeatedData	PositiveInteger	0..1	attr	EndToEndTransformationDescription holds these attributes which are profile specific and have the same value for all E2E transformers.





Class	EndToEndTransformationComSpecProps			
minOkStateInit	PositiveInteger	0..1	attr	Minimal number of checks in which ProfileStatus equal to E2E_P_OK was determined, within the last WindowSize checks, for the state E2E_SM_INIT.  The minimum value is 1.
minOkStateInvalid	PositiveInteger	0..1	attr	Minimal number of checks in which ProfileStatus equal to E2E_P_OK was determined, within the last WindowSize checks, for the state E2E_SM_INVALID.  The minimum value is 1.
minOkStateValid	PositiveInteger	0..1	attr	Minimal number of checks in which ProfileStatus equal to E2E_P_OK was determined, within the last WindowSize checks, for the state E2E_SM_VALID.  The minimum value is 1.
syncCounterInit	PositiveInteger	0..1	attr	EndToEndTransformationDescription holds these attributes which are profile specific and have the same value for all E2E transformers.
windowSizeInit	PositiveInteger	0..1	attr	Size of the monitoring window of state Init for the E2E state machine.
windowSizeInvalid	PositiveInteger	0..1	attr	Size of the monitoring window of state Invalid for the E2E state machine.
windowSizeValid	PositiveInteger	0..1	attr	Size of the monitoring window of state Valid for the E2E state machine.

**Table E.59: EndToEndTransformationComSpecProps**

Class	ExecutableEntity (abstract)			
Package	M2::AUTOSARTemplates::CommonStructure::InternalBehavior			
Note	Abstraction of executable code.			
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Subclasses	BswModuleEntity, RunnableEntity			
Attribute	Type	Mult.	Kind	Note
activationReason	ExecutableEntity ActivationReason	*	aggr	If the ExecutableEntity provides at least one activationReason element the RTE resp. BSW Scheduler shall provide means to read the activation vector of this executable entity execution.  If no activationReason element is provided the feature of being able to determine the activating RTEEvent is disabled for this ExecutableEntity.
canEnter	ExclusiveArea	*	ref	This means that the executable entity can enter/leave the referenced exclusive area through explicit API calls.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=canEnter.exclusiveArea, canEnter.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
exclusiveAreaNestingOrder	ExclusiveAreaNestingOrder	*	ref	This represents the set of ExclusiveAreaNestingOrders recognized by this ExecutableEntity.
minimumStartInterval	TimeValue	0..1	attr	Specifies the time in seconds by which two consecutive starts of an ExecutableEntity are guaranteed to be separated.





Class	<i>ExecutableEntity</i> (abstract)			
reentrancyLevel	ReentrancyLevelEnum	0..1	attr	The reentrancy level of this ExecutableEntity. See the documentation of the enumeration type ReentrancyLevelEnum for details.  Please note that nonReentrant interfaces can have also reentrant or multicoreReentrant implementations, and reentrant interfaces can also have multicoreReentrant implementations.
runsInside	ExclusiveArea	*	ref	The executable entity runs completely inside the referenced exclusive area.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=runsInside.exclusiveArea, runsInside.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
swAddrMethod	SwAddrMethod	0..1	ref	Addressing method related to this code entity. Via an association to the same SwAddrMethod, it can be specified that several code entities (even of different modules or components) shall be located in the same memory without already specifying the memory section itself.

**Table E.60: ExecutableEntity**

Class	<i>ExecutionTime</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ResourceConsumption::ExecutionTime			
<b>Note</b>	Base class for several means how to describe the ExecutionTime of software. The required context information is provided through this class.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Subclasses</b>	AnalyzedExecutionTime, MeasuredExecutionTime, RoughEstimateOfExecutionTime, SimulatedExecutionTime			
<b>Aggregated by</b>	<a href="#">ResourceConsumption.executionTime</a>			
Attribute	Type	Mult.	Kind	Note
exclusiveArea	ExclusiveArea	0..1	ref	Reference to the ExclusiveArea this execution time is provided for.
executableEntity	<a href="#">ExecutableEntity</a>	0..1	ref	The executable entity for which this execution time is described.
hardware Configuration	HardwareConfiguration	0..1	aggr	Provides information on the HardwareConfiguration used to specify this ExecutionTime.
hwElement	<a href="#">HwElement</a>	0..1	ref	The hardware element (e.g. type of ECU) for which the execution time is specified.
includedLibrary	DependencyOnArtifact	*	ref	If this dependency is specified, the execution time of the library code is included in the execution time data for the runnable.
memorySection Location	MemorySectionLocation	*	aggr	Provides information on the MemorySectionLocation which is involved in the ExecutionTime description.
softwareContext	SoftwareContext	0..1	aggr	Provides information on the detailed SoftwareContext used to provide the ExecutionTime description.

**Table E.61: ExecutionTime**

<b>Class</b>	<i>FibexElement</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore			
<b>Note</b>	ASAM FIBEX elements specifying Communication and Topology.			
<b>Base</b>	<i>ARObject</i> , <i>CollectableElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Subclasses</b>	<i>BusMirrorChannelMapping</i> , <i>CommunicationCluster</i> , <i>ConsumedProvidedServiceInstanceGroup</i> , <i>CouplingElement</i> , <i>EcucInstance</i> , <i>EthernetWakeupSleepOnDataLineConfigSet</i> , <i>Frame</i> , <i>Gateway</i> , <i>GlobalTimeDomain</i> , <i>ISignal</i> , <i>ISignalGroup</i> , <i>ISignalPduGroup</i> , <i>NmConfig</i> , <i>Pdu</i> , <i>PduIPduGroup</i> , <i>SecureCommunicationPropsSet</i> , <i>ServiceInstanceCollectionSet</i> , <i>SoAdRoutingGroup</i> , <i>SocketConnectionPduIdentifierSet</i> , <i>TpConfig</i>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.62: FibexElement**

<b>Class</b>	<i>HeapUsage</i> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ResourceConsumption::HeapUsage			
<b>Note</b>	Describes the heap memory usage of a SW-Component.			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Subclasses</b>	<i>MeasuredHeapUsage</i> , <i>RoughEstimateHeapUsage</i> , <i>WorstCaseHeapUsage</i>			
<b>Aggregated by</b>	<a href="#">ResourceConsumption.heapUsage</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
hardware Configuration	HardwareConfiguration	0..1	aggr	Contains information about the hardware context this heap usage is describing.
hwElement	<a href="#">HwElement</a>	0..1	ref	Specifies for which hardware element (e.g. ECU) this heap usage usage is given.
softwareContext	SoftwareContext	0..1	aggr	Contains details about the software context this heap usage is provided for.

**Table E.63: HeapUsage**

<b>Class</b>	<i>HwElement</i>			
<b>Package</b>	M2::AUTOSARTemplates::EcuResourceTemplate			
<b>Note</b>	This represents the ability to describe Hardware Elements on an instance level. The particular types of hardware are distinguished by the category. This category determines the applicable attributes. The possible categories and attributes are defined in <i>HwCategory</i> . <b>Tags:</b> atp.recommendedPackage=HwElements			
<b>Base</b>	<i>ARElement</i> , <i>ARObject</i> , <i>CollectableElement</i> , <i>HwDescriptionEntity</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
hwElement Connection	HwElementConnector	*	aggr	This represents one particular connection between two hardware elements. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=hwElementConnection, hwElement Connection.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=110





Class	HwElement			
hwPinGroup	<a href="#">HwPinGroup</a>	*	aggr	<p>This aggregation is used to describe the connection facilities of a hardware element. Note that hardware element has no pins but only pingroups.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=hwPinGroup.shortName, hwPinGroup.variationPoint.shortLabel            vh.latestBindingTime=systemDesignTime            xml.sequenceOffset=90</p>
nestedElement	<a href="#">HwElement</a>	*	ref	<p>This association is used to establish hierarchies of hw elements. Note that one particular HwElement can be target of this association only once. I.e. multiple instantiation of the same HwElement is not supported (at any hierarchy level).</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=nestedElement.hwElement, nestedElement.variationPoint.shortLabel            vh.latestBindingTime=systemDesignTime            xml.sequenceOffset=70</p>

**Table E.64: HwElement**

Class	HwPinGroup			
<b>Package</b>	M2::AUTOSARTemplates::EcuResourceTemplate			
<b>Note</b>	This meta-class represents the ability to describe groups of pins which are used to connect hardware elements. This group acts as a bundle of pins. Thereby they allow to describe high level connections. Pin groups can even be nested.			
<b>Base</b>	<i>ARObject</i> , <i>HwDescriptionEntity</i> , <a href="#">Identifiable</a> , <i>MultilanguageReferrable</i> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">HwElement.hwPinGroup</a> , HwPinGroupContent.hwPinGroup			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
hwPinGroupContent	HwPinGroupContent	0..1	aggr	This aggregation describes the contained pins/pin groups.

**Table E.65: HwPinGroup**

<b>Class</b>	<b>Identifiable</b> (abstract)
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable
<b>Note</b>	Instances of this class can be referred to by their identifier (within the namespace borders). In addition to this, Identifiables are objects which contribute significantly to the overall structure of an AUTOSAR description. In particular, Identifiables might contain Identifiables.
<b>Base</b>	<i>ARObject</i> , <i>MultilanguageReferrable</i> , <a href="#">Referrable</a>







Class	Identifiable (abstract)			
<b>Subclasses</b>	<p> <a href="#">ARPackage</a>, <a href="#">AbstractDolpLogicAddressProps</a>, <a href="#">AbstractEvent</a>, <a href="#">AbstractImplementationDataTypeElement</a>, <a href="#">AbstractSecurityEventFilter</a>, <a href="#">AbstractSecurityIdsmInstanceFilter</a>, <a href="#">AbstractServiceInstance</a>, <a href="#">AppOsTaskProxyToEcuTaskProxyMapping</a>, <a href="#">ApplicationEndpoint</a>, <a href="#">ApplicationError</a>, <a href="#">ApplicationPartitionToEcuPartitionMapping</a>, <a href="#">AsynchronousServerCallResultPoint</a>, <a href="#">AtpBlueprint</a>, <a href="#">AtpBlueprintable</a>, <a href="#">AtpClassifier</a>, <a href="#">AtpFeature</a>, <a href="#">AutosarOperationArgumentInstance</a>, <a href="#">AutosarVariableInstance</a>, <a href="#">BinaryManifestAddressableObject</a>, <a href="#">BinaryManifestItemDefinition</a>, <a href="#">BinaryManifestResource</a>, <a href="#">BinaryManifestResourceDefinition</a>, <a href="#">BlockState</a>, <a href="#">BswInternalTriggeringPoint</a>, <a href="#">BswModuleDependency</a>, <a href="#">BuildActionEnvironment</a>, <a href="#">CanTpAddress</a>, <a href="#">CanTpChannel</a>, <a href="#">CanTpNode</a>, <a href="#">Chapter</a>, <a href="#">ClassContentConditional</a>, <a href="#">ClientIdDefinition</a>, <a href="#">ClientServerOperation</a>, <a href="#">Code</a>, <a href="#">CollectableElement</a>, <a href="#">ComManagementMapping</a>, <a href="#">CommConnectorPort</a>, <a href="#">CommunicationConnector</a>, <a href="#">CommunicationController</a>, <a href="#">Compiler</a>, <a href="#">ConsistencyNeeds</a>, <a href="#">ConsumedEventGroup</a>, <a href="#">CouplingPort</a>, <a href="#">CouplingPortStructuralElement</a>, <a href="#">CpSoftwareClusterResource</a>, <a href="#">CpSoftwareClusterResourceToApplicationPartitionMapping</a>, <a href="#">CpSoftwareClusterToEcuInstanceMapping</a>, <a href="#">CpSoftwareClusterToResourceMapping</a>, <a href="#">CryptoServiceMapping</a>, <a href="#">DataPrototypeGroup</a>, <a href="#">DataTransformation</a>, <a href="#">DependencyOnArtifact</a>, <a href="#">DiagEventDebounceAlgorithm</a>, <a href="#">DiagnosticConnectedIndicator</a>, <a href="#">DiagnosticDataElement</a>, <a href="#">DiagnosticDebounceAlgorithmProps</a>, <a href="#">DiagnosticFunctionInhibitSource</a>, <a href="#">DiagnosticParameterElement</a>, <a href="#">DiagnosticRoutineSubfunction</a>, <a href="#">DltApplication</a>, <a href="#">DltArgument</a>, <a href="#">DltLogChannel</a>, <a href="#">DltMessage</a>, <a href="#">DolpInterface</a>, <a href="#">DolpLogicAddress</a>, <a href="#">DolpRoutingActivation</a>, <a href="#">ECUMapping</a>, <a href="#">EOCExecutableEntityRefAbstract</a>, <a href="#">EcuPartition</a>, <a href="#">EcucContainerValue</a>, <a href="#">EcucDefinitionElement</a>, <a href="#">EcucDestinationUriDef</a>, <a href="#">EcucEnumerationLiteralDef</a>, <a href="#">EcucQuery</a>, <a href="#">EcucValidationCondition</a>, <a href="#">EndToEndProtection</a>, <a href="#">EthernetWakeupSleepOnDataLineConfig</a>, <a href="#">EventHandler</a>, <a href="#">ExclusiveArea</a>, <a href="#">ExecutableEntity</a>, <a href="#">ExecutionTime</a>, <a href="#">FMAttributeDef</a>, <a href="#">FMFeatureMapAssertion</a>, <a href="#">FMFeatureMapCondition</a>, <a href="#">FMFeatureMapElement</a>, <a href="#">FMFeatureRelation</a>, <a href="#">FMFeatureRestriction</a>, <a href="#">FMFeatureSelection</a>, <a href="#">FlatInstanceDescriptor</a>, <a href="#">FlexrayArTpNode</a>, <a href="#">FlexrayTpConnectionControl</a>, <a href="#">FlexrayTpNode</a>, <a href="#">FlexrayTpPduPool</a>, <a href="#">FrameTriggering</a>, <a href="#">GeneralParameter</a>, <a href="#">GlobalTimeGateway</a>, <a href="#">GlobalTimeMaster</a>, <a href="#">GlobalTimeSlave</a>, <a href="#">HeapUsage</a>, <a href="#">HwAttributeDef</a>, <a href="#">HwAttributeLiteralDef</a>, <a href="#">HwPin</a>, <a href="#">HwPinGroup</a>, <a href="#">IPSecRule</a>, <a href="#">IPv6ExtHeaderFilterList</a>, <a href="#">ISignalToIPduMapping</a>, <a href="#">ISignalTriggering</a>, <a href="#">IdentCaption</a>, <a href="#">InternalTriggeringPoint</a>, <a href="#">J1939SharedAddressCluster</a>, <a href="#">J1939TpNode</a>, <a href="#">Keyword</a>, <a href="#">LifeCycleState</a>, <a href="#">LinScheduleTable</a>, <a href="#">LinTpNode</a>, <a href="#">Linker</a>, <a href="#">MacMulticastGroup</a>, <a href="#">MacSecKayParticipant</a>, <a href="#">McDataInstance</a>, <a href="#">MemorySection</a>, <a href="#">ModeDeclaration</a>, <a href="#">ModeDeclarationMapping</a>, <a href="#">ModeSwitchPoint</a>, <a href="#">NetworkEndpoint</a>, <a href="#">NmCluster</a>, <a href="#">NmEcu</a>, <a href="#">NmNode</a>, <a href="#">NvBlockDescriptor</a>, <a href="#">PackageableElement</a>, <a href="#">ParameterAccess</a>, <a href="#">PduActivationRoutingGroup</a>, <a href="#">PduToFrameMapping</a>, <a href="#">PduTriggering</a>, <a href="#">PerInstanceMemory</a>, <a href="#">PhysicalChannel</a>, <a href="#">PortElementToCommunicationResourceMapping</a>, <a href="#">PortGroup</a>, <a href="#">PortInterfaceMapping</a>, <a href="#">PossibleErrorReaction</a>, <a href="#">ResourceConsumption</a>, <a href="#">RootSwCompositionPrototype</a>, <a href="#">RptComponent</a>, <a href="#">RptContainer</a>, <a href="#">RptExecutableEntity</a>, <a href="#">RptExecutableEntityEvent</a>, <a href="#">RptExecutionContext</a>, <a href="#">RptProfile</a>, <a href="#">RptServicePoint</a>, <a href="#">RteEventInCompositionSeparation</a>, <a href="#">RteEventInCompositionToOsTaskProxyMapping</a>, <a href="#">RteEventInSystemSeparation</a>, <a href="#">RteEventInSystemToOsTaskProxyMapping</a>, <a href="#">RunnableEntityGroup</a>, <a href="#">SdgAttribute</a>, <a href="#">SdgClass</a>, <a href="#">SecureCommunicationAuthenticationProps</a>, <a href="#">SecureCommunicationFreshnessProps</a>, <a href="#">SecurityEventContextProps</a>, <a href="#">ServerCallPoint</a>, <a href="#">ServiceNeeds</a>, <a href="#">SignalServiceTranslationElementProps</a>, <a href="#">SignalServiceTranslationEventProps</a>, <a href="#">SignalServiceTranslationProps</a>, <a href="#">SocketAddress</a>, <a href="#">SomeipTpChannel</a>, <a href="#">SpecElementReference</a>, <a href="#">StackUsage</a>, <a href="#">StaticSocketConnection</a>, <a href="#">StructuredReq</a>, <a href="#">SwGenericAxisParamType</a>, <a href="#">SwServiceArg</a>, <a href="#">SwServiceDependency</a>, <a href="#">SwcToApplicationPartitionMapping</a>, <a href="#">SwcToEcuMapping</a>, <a href="#">SwcToImplMapping</a>, <a href="#">SystemMapping</a>, <a href="#">TDCpSoftwareClusterMapping</a>, <a href="#">TDCpSoftwareClusterResourceMapping</a>, <a href="#">TcpOptionFilterList</a>, <a href="#">TimingClock</a>, <a href="#">TimingClockSyncAccuracy</a>, <a href="#">TimingCondition</a>, <a href="#">TimingConstraint</a>, <a href="#">TimingDescription</a>, <a href="#">TimingExtensionResource</a>, <a href="#">TimingModelInstance</a>, <a href="#">TlsCryptoCipherSuite</a>, <a href="#">TlsCryptoCipherSuiteProps</a>, <a href="#">Topic1</a>, <a href="#">TpAddress</a>, <a href="#">TraceableTable</a>, <a href="#">TraceableText</a>, <a href="#">TracedFailure</a>, <a href="#">TransformationProps</a>, <a href="#">TransformationTechnology</a>, <a href="#">Trigger</a>, <a href="#">VariableAccess</a>, <a href="#">VariationPointProxy</a>, <a href="#">ViewMap</a>, <a href="#">VlanConfig</a>, <a href="#">WaitPoint</a> </p>			
Attribute	Type	Mult.	Kind	Note
adminData	<a href="#">AdminData</a>	0..1	aggr	This represents the administrative data for the identifiable object.  <b>Stereotypes:</b> atpSplittable <b>Tags:</b> atp.Splitkey=adminData xml.sequenceOffset=-40
annotation	Annotation	*	aggr	Possibility to provide additional notes while defining a model element (e.g. the ECU Configuration Parameter Values). These are not intended as documentation but are mere design notes.  <b>Tags:</b> xml.sequenceOffset=-25





<b>Class</b>	<b>Identifiable</b> (abstract)			
category	CategoryString	0..1	attr	<p>The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.</p> <p><b>Tags:</b>xml.sequenceOffset=-50</p>
desc	MultiLanguageOverviewParagraph	0..1	aggr	<p>This represents a general but brief (one paragraph) description what the object in question is about. It is only one paragraph! Desc is intended to be collected into overview tables. This property helps a human reader to identify the object in question.</p> <p>More elaborate documentation, (in particular how the object is built or used) should go to "introduction".</p> <p><b>Tags:</b>xml.sequenceOffset=-60</p>
introduction	DocumentationBlock	0..1	aggr	<p>This represents more information about how the object in question is built or is used. Therefore it is a DocumentationBlock.</p> <p><b>Tags:</b>xml.sequenceOffset=-30</p>
uuid	<a href="#">String</a>	0..1	attr	<p>The purpose of this attribute is to provide a globally unique identifier for an instance of a meta-class. The values of this attribute should be globally unique strings prefixed by the type of identifier. For example, to include a DCE UUID as defined by The Open Group, the UUID would be preceded by "DCE:". The values of this attribute may be used to support merging of different AUTOSAR models. The form of the UUID (Universally Unique Identifier) is taken from a standard defined by the Open Group (was Open Software Foundation). This standard is widely used, including by Microsoft for COM (GUIDs) and by many companies for DCE, which is based on CORBA. The method for generating these 128-bit IDs is published in the standard and the effectiveness and uniqueness of the IDs is not in practice disputed. If the id namespace is omitted, DCE is assumed. An example is "DCE:2fac1234-31f8-11b4-a222-08002b34c003". The uuid attribute has no semantic meaning for an AUTOSAR model and there is no requirement for AUTOSAR tools to manage the timestamp.</p> <p><b>Tags:</b>xml.attribute=true</p>

**Table E.66: Identifiable**

<b>Class</b>	<b>Implementation</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::Implementation			
<b>Note</b>	Description of an implementation a single software component or module.			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	BswImplementation, <a href="#">SwcImplementation</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	Implementation (abstract)			
buildActionManifest	BuildActionManifest	0..1	ref	A manifest specifying the intended build actions for the software delivered with this implementation. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=buildActionManifest.buildActionManifest, buildActionManifest.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime
codeDescriptor	Code	*	aggr	Specifies the provided implementation code.
compiler	Compiler	*	aggr	Specifies the compiler for which this implementation has been released
generatedArtifact	DependencyOnArtifact	*	aggr	Relates to an artifact that will be generated during the integration of this Implementation by an associated generator tool. Note that this is an optional information since it might not always be in the scope of a single module or component to provide this information. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=generatedArtifact.shortName, generatedArtifact.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
hwElement	<a href="#">HwElement</a>	*	ref	The hardware elements (e.g. the processor) required for this implementation.
linker	Linker	*	aggr	Specifies the linker for which this implementation has been released.
mcSupport	McSupportData	0..1	aggr	The measurement & calibration support data belonging to this implementation. The aggregation is <<atpSplitable>> because in case of an already existing BSW Implementation model, this description will be added later in the process, namely at code generation time. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=mcSupport
programmingLanguage	ProgramminglanguageEnum	0..1	attr	Programming language the implementation was created in.
requiredArtifact	DependencyOnArtifact	*	aggr	Specifies that this Implementation depends on the existence of another artifact (e.g. a library). This aggregation of DependencyOnArtifact is subject to variability with the purpose to support variability in the implementations. Different algorithms in the implementation might cause different dependencies, e.g. the number of used libraries. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=requiredArtifact.shortName, requiredArtifact.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
requiredGeneratorTool	DependencyOnArtifact	*	aggr	Relates this Implementation to a generator tool in order to generate additional artifacts during integration. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=requiredGeneratorTool.shortName, requiredGeneratorTool.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
resourceConsumption	<a href="#">ResourceConsumption</a>	0..1	aggr	All static and dynamic resources for each implementation are described within the ResourceConsumption class. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=resourceConsumption.shortName





Class	Implementation (abstract)			
swcBsw Mapping	SwcBswMapping	0..1	ref	This allows a mapping between an SWC and a BSW behavior to be attached to an implementation description (for AUTOSAR Service, ECU Abstraction and Complex Driver Components). It is up to the methodology to define whether this reference has to be set for the Swc- or Bsw Implementation or for both.
swVersion	RevisionLabelString	0..1	attr	Software version of this implementation. The numbering contains three levels (like major, minor, patch), its values are vendor specific.
usedCode Generator	<a href="#">String</a>	0..1	attr	Optional: code generator used.
vendorId	PositiveInteger	0..1	attr	Vendor ID of this Implementation according to the AUTOSAR vendor list

**Table E.67: Implementation**

Class	ImplementationDataType			
Package	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes			
Note	Describes a reusable data type on the implementation level. This will typically correspond to a typedef in C-code. <b>Tags:</b> atp.recommendedPackage=ImplementationDataTypes			
Base	<a href="#">ARElement</a> , <a href="#">AObject</a> , <a href="#">AbstractImplementationDataType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">AutosarDataType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
Aggregated by	<a href="#">ARPackage.element</a>			
Attribute	Type	Mult.	Kind	Note
dynamicArray SizeProfile	<a href="#">String</a>	0..1	attr	Specifies the profile which the array will follow in case this data type is a variable size array.
isStructWith Optional Element	Boolean	0..1	attr	This attribute is only valid if the attribute category is set to STRUCTURE.  If set to true, this attribute indicates that the ImplementationDataType has been created with the intention to define at least one element of the structure as optional.
subElement (ordered)	<a href="#">ImplementationDataTypeElement</a>	*	aggr	Specifies an element of an array, struct, or union data type.  The aggregation of ImplementationDataTypeElement is subject to variability with the purpose to support the conditional existence of elements inside a ImplementationDataType representing a structure.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=subElement.shortName, subElement.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
symbolProps	<a href="#">SymbolProps</a>	0..1	aggr	This represents the SymbolProps for the ImplementationDataType.  <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=symbolProps.shortName
typeEmitter	NameToken	0..1	attr	This attribute is used to control which part of the AUTOSAR toolchain is supposed to trigger data type definitions.

**Table E.68: ImplementationDataType**

<b>Class</b>	<b>ImplementationDataTypeElement</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes			
<b>Note</b>	<p>Declares a data object which is locally aggregated. Such an element can only be used within the scope where it is aggregated.</p> <p>This element either consists of further subElements or it is further defined via its swDataDefProps.</p> <p>There are several use cases within the system of ImplementationDataTypes for such a local declaration:</p> <ul style="list-style-type: none"> <li>• It can represent the elements of an array, defining the element type and array size</li> <li>• It can represent an element of a struct, defining its type</li> <li>• It can be the local declaration of a debug element.</li> </ul>			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AbstractImplementationDataTypeElement</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpFeature</a> , <a href="#">AtpStructureElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a> , <a href="#">ImplementationDataType.subElement</a> , <a href="#">ImplementationDataTypeElement.subElement</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
arrayImplPolicy	ArrayImplPolicyEnum	0..1	attr	This attribute controls the implementation of the payload of an array. It shall only be used if the enclosing ImplementationDataType constitutes an array.
arraySize	PositiveInteger	0..1	attr	<p>The existence of this attributes (if bigger than 0) defines the size of an array and declares that this ImplementationDataTypeElement represents the type of each single array element.</p> <p><b>Stereotypes:</b> atpVariation <b>Tags:</b>vh.latestBindingTime=preCompileTime</p>
arraySizeHandling	ArraySizeHandlingEnum	0..1	attr	The way how the size of the array is handled in case of a variable size array.
arraySizeSemantics	ArraySizeSemanticsEnum	0..1	attr	This attribute controls the meaning of the value of the array size.
isOptional	Boolean	0..1	attr	<p>This attribute represents the ability to declare the enclosing ImplementationDataTypeElement as optional. This means that, at runtime, the ImplementationDataTypeElement may or may not have a valid value and shall therefore be ignored.</p> <p>The underlying runtime software provides means to set the CppImplementationDataTypeElement as not valid at the sending end of a communication and determine its validity at the receiving end.</p>
subElement (ordered)	<a href="#">ImplementationDataTypeElement</a>	*	aggr	<p>Element of an array, struct, or union in case of a nested declaration (i.e. without using "typedefs").</p> <p>The aggregation of ImplementationDataTypeElement is subject to variability with the purpose to support the conditional existence of elements inside a ImplementationDataType representing a structure.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=subElement.shortName, subElement.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
swDataDefProps	<a href="#">SwDataDefProps</a>	0..1	aggr	<p>The properties of this ImplementationDataTypeElement.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b>atp.Splitkey=swDataDefProps</p>

**Table E.69: ImplementationDataTypeElement**

<b>Class</b>	<b>ImplementationProps</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::Implementation			
<b>Note</b>	Defines a symbol to be used as (depending on the concrete case) either a complete replacement or a prefix when generating code artifacts.			
<b>Base</b>	ARObject, Referrable			
<b>Subclasses</b>	BswSchedulerNamePrefix, ExecutableEntityActivationReason, SectionNamePrefix, SymbolProps, SymbolicNameProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
symbol	CIdentifier	0..1	attr	The symbol to be used as (depending on the concrete case) either a complete replacement or a prefix.

**Table E.70: ImplementationProps**

<b>Class</b>	<b>InternalBehavior</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::InternalBehavior			
<b>Note</b>	Common base class (abstract) for the internal behavior of both software components and basic software modules/clusters.			
<b>Base</b>	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable			
<b>Subclasses</b>	BswInternalBehavior, SwcInternalBehavior			
<b>Aggregated by</b>	AtpClassifier.atpFeature			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
constant Memory	ParameterData Prototype	*	aggr	<p>Describes a read only memory object containing characteristic value(s) implemented by this Internal Behavior.</p> <p>The shortName of ParameterDataPrototype has to be equal to the 'C' identifier of the described constant.</p> <p>The characteristic value(s) might be shared between Sw ComponentPrototypes of the same SwComponentType.</p> <p>The aggregation of constantMemory is subject to variability with the purpose to support variability in the software component or module implementations. Typically different algorithms in the implementation are requiring different number of memory objects.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation</p> <p><b>Tags:</b>                      atp.Splitkey=constantMemory.shortName, constantMemory.variationPoint.shortLabel                      vh.latestBindingTime=preCompileTime</p>
constantValue Mapping	ConstantSpecification MappingSet	*	ref	<p>Reference to the ConstantSpecificationMapping to be applied for the particular InternalBehavior</p> <p><b>Stereotypes:</b> atpSplitable</p> <p><b>Tags:</b>atp.Splitkey=constantValueMapping</p>
dataType Mapping	DataTypeMappingSet	*	ref	<p>Reference to the DataTypeMapping to be applied for the particular InternalBehavior</p> <p><b>Stereotypes:</b> atpSplitable</p> <p><b>Tags:</b>atp.Splitkey=dataTypeMapping</p>





Class	InternalBehavior (abstract)			
exclusiveArea	ExclusiveArea	*	aggr	<p>This specifies an ExclusiveArea for this InternalBehavior. The exclusiveArea is local to the component resp. module. The aggregation of ExclusiveAreas is subject to variability. Note: the number of ExclusiveAreas might vary due to the conditional existence of RunnableEntities or BswModuleEntities.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>                      atp.Splitkey=exclusiveArea.shortName, exclusiveArea.variationPoint.shortLabel                      vh.latestBindingTime=preCompileTime</p>
exclusiveAreaNestingOrder	ExclusiveAreaNestingOrder	*	aggr	<p>This represents the set of ExclusiveAreaNestingOrder owned by the InternalBehavior.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>                      atp.Splitkey=exclusiveAreaNestingOrder.shortName, exclusiveAreaNestingOrder.variationPoint.shortLabel                      vh.latestBindingTime=preCompileTime</p>
staticMemory	<a href="#">VariableDataPrototype</a>	*	aggr	<p>Describes a read and writeable static memory object representing measurement variables implemented by this software component. The term "static" is used in the meaning of "non-temporary" and does not necessarily specify a linker encapsulation. This kind of memory is only supported if supportsMultipleInstantiation is FALSE.</p> <p>The shortName of the VariableDataPrototype has to be equal with the "C" identifier of the described variable.</p> <p>The aggregation of staticMemory is subject to variability with the purpose to support variability in the software component's implementations.</p> <p>Typically different algorithms in the implementation are requiring different number of memory objects.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>                      atp.Splitkey=staticMemory.shortName, staticMemory.variationPoint.shortLabel                      vh.latestBindingTime=preCompileTime</p>

**Table E.71: InternalBehavior**

<b>Class</b>	<b>McGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::McGroups			
<b>Note</b>	Represents a group element to be used as input to support measurement and calibration. It is used to provide selection lists (groups) of calibration parameters, measurement variables, and functions in a hierarchical manner (subGroups). <b>Tags:</b> atp.recommendedPackage=McFunctions			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
mcFunction	McFunction	*	ref	A McFunction that is seen as part of the enclosing group. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=mcFunction xml.sequenceOffset=40







Class	McGroup			
refCalprmSet	<a href="#">McGroupDataRefSet</a>	0..1	aggr	Refers to the set of adjustable data (= calibration parameters) referred by this McGroup. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=refCalprmSet xml.sequenceOffset=20
ref Measurement Set	<a href="#">McGroupDataRefSet</a>	0..1	aggr	Refers to the set of measurable belonging to this Mc Group. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=refMeasurementSet xml.sequenceOffset=30
subGroup	<a href="#">McGroup</a>	*	ref	A sub-group that is seen as part of the enclosing group. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=subGroup xml.sequenceOffset=10

**Table E.72: McGroup**

<b>Class</b>	<<atpVariation>> <b>McGroupDataRefSet</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::McGroups			
<b>Note</b>	<p>Refers to a set of data assigned to an McGroup in a particular role. The data are given</p> <ul style="list-style-type: none"> <li>• either by entries in a FlatMap</li> <li>• or by data instances that are part of MC support data.</li> </ul> <p>These two possibilities can be mixed within a given McGroupDataRefSet. Which one to use depends on the process and tool environment.</p> <p>The set is subject to variability because the same functional model may be used with various representation of the data.</p> <p><b>Tags:</b>vh.latestBindingTime=preCompileTime</p>			
<b>Base</b>	<i>ARObject</i>			
<b>Aggregated by</b>	<a href="#">McGroup.refCalprmSet</a> , <a href="#">McGroup.refMeasurementSet</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
flatMapEntry	<a href="#">FlatInstanceDescriptor</a>	*	ref	Refers to an entry in a FlatMap that is part of the set, for example a calibration parameter or measured variable. Note: This atpSplitable property has no atp.Splitkey due to atpVariation (PropertySetPattern). <b>Stereotypes:</b> atpSplitable <b>Tags:</b> xml.sequenceOffset=50
mcDataInstance	McDataInstance	*	ref	Refers to a data instance within MC support data that is part of the set, i.e. a calibration parameter or measured variable. Note: This atpSplitable property has no atp.Splitkey due to atpVariation (PropertySetPattern). <b>Stereotypes:</b> atpSplitable <b>Tags:</b> xml.sequenceOffset=60

**Table E.73: McGroupDataRefSet**



<b>Class</b>	<b>MemorySection</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ResourceConsumption::MemorySectionUsage			
<b>Note</b>	<p>Provides a description of an abstract memory section used in the Implementation for code or data. It shall be declared by the Implementation Description of the module or component, which actually allocates the memory in its code. This means in case of data prototypes which are allocated by the RTE, that the generated Implementation Description of the RTE shall contain the corresponding MemorySections.</p> <p>The attribute "symbol" (if symbol is missing: "shortName") defines the module or component specific section name used in the code. For details see the document "Specification of Memory Mapping". Typically the section name is build according the pattern:</p> <pre>&lt;SwAddrMethod shortName&gt;[_&lt;further specialization nominator&gt;][_&lt;alignment&gt;]</pre> <p>where</p> <ul style="list-style-type: none"> <li>• [<b>&lt;SwAddrMethod shortName&gt;</b>] is the shortName of the referenced SwAddrMethod</li> <li>• [<b>&lt;further specialization nominator&gt;</b>] is an optional infix to indicate the specialization in the case that several MemorySections for different purpose of the same Implementation Description referring to the same or equally named SwAddrMethods.</li> <li>• [<b>&lt;alignment&gt;</b>] is the alignment attributes value and is only applicable in the case that the memoryAllocationKeywordPolicy value of the referenced SwAddrMethod is set to addrMethod ShortNameAndAlignment</li> </ul> <p>MemorySection used to Implement the code of RunnableEntitys and BswSchedulableEntitys shall have a symbol (if missing: shortName) identical to the referred SwAddrMethod to conform to the generated RTE header files.</p> <p>In addition to the section name described above, a prefix is used in the corresponding macro code in order to define a name space. This prefix is by default given by the shortName of the BswModule Description resp. the SwComponentType. It can be superseded by the prefix attribute.</p>			
<b>Base</b>	ARObject, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ResourceConsumption.memorySection</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
alignment	AlignmentType	0..1	attr	The attribute describes the typical alignment of objects within this memory section.
executableEntity	<a href="#">ExecutableEntity</a>	*	ref	Reference to the ExecutableEntitites located in this section. This allows to locate different Executable Entities in different sections even if the associated Sw Addrmethod is the same.  This is applicable to code sections only.
option	Identifier	*	attr	The service (in AUTOSAR: BswModuleEntry) is implemented in a way that it either resolves to aninline function or to a standard function depending on conditions set at a later point in time.  The following two values are standardized (to be used for code sections only and exclusively to each other): <ul style="list-style-type: none"> <li>• INLINE - The code section is declared with the keyword "inline".</li> <li>• LOCAL_INLINE - The code section is declared with the keyword "static inline".</li> </ul> In both cases (INLINE and LOCAL_INLINE) the inline expansion depends on the compiler. Depending on this, the code section either corresponds to an actual section in memory or is put into the section of the caller.
prefix	SectionNamePrefix	0..1	ref	The prefix used to set the memory section's namespace in the code. The existence of a prefix element supersedes rules for a default prefix (such as the Bsw ModuleDescription's shortName). This allows the user to define several name spaces for memory sections within the scope of one module, cluster or SWC.
size	PositiveInteger	0..1	attr	The size in bytes of the section.





Class	MemorySection			
swAddrmethod	SwAddrMethod	0..1	ref	<p>This association indicates that this module specific (abstract) memory section is part of an overall SwAddr Method, referred by the upstream declarations (e.g. calibration parameters, data element prototypes, code entities) which share a common addressing strategy. This can be evaluated for the ECU configuration of the build support.</p> <p>This association shall always be declared by the Implementation description of the module or component, which allocates the memory in its code. This means in case of data prototypes which are allocated by the RTE, that the software components only declare the grouping of its data prototypes to SwAddrMethods, and the generated Implementation Description of the RTE actually sets up this association.</p>
symbol	Identifier	0..1	attr	<p>Defines the section name as explained in the main description. By using this attribute for code generation (instead of the shortName) it is possible to define several different MemorySections having the same name - e.g. symbol = CODE - but using different sectionName Prefixes.</p>

**Table E.74: MemorySection**

Class	MetaDatum			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	This meta-class represents a single meta-data item.			
Base	ARObject			
Aggregated by	<a href="#">MetaDatumSet.metaDatum</a>			
Attribute	Type	Mult.	Kind	Note
length	PositiveInteger	0..1	attr	This attribute determines the length of the MetaDatum at run-time.
metaDatum Type	<a href="#">TextValueSpecification</a>	0..1	aggr	This aggregation contributes the specification of the concrete meta-data item type.

**Table E.75: MetaDatum**

Class	MetaDatumSet			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	This meta-class represents the ability to define a set of meta-data items to be used in SenderReceiver Interfaces.			
Base	ARObject			
Aggregated by	<a href="#">SenderReceiverInterface.metaDatumSet</a>			
Attribute	Type	Mult.	Kind	Note
dataElement	<a href="#">VariableDataPrototype</a>	*	ref	This reference identifies the dataElement for which the ordered list of meta-data items is defined.
metaDatum (ordered)	<a href="#">MetaDatum</a>	*	aggr	This aggregation represents the ordered definition of meta-data items.

**Table E.76: MetaDatumSet**

<b>Class</b>	<b>ModeDeclaration</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration			
<b>Note</b>	Declaration of one Mode. The name and semantics of a specific mode is not defined in the meta-model.			
<b>Base</b>	<i>ARObject</i> , <i>AtpClassifier</i> , <i>AtpFeature</i> , <i>AtpStructureElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<i>AtpClassifier.atpFeature</i> , <a href="#">ModeDeclarationGroup.modeDeclaration</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
value	PositiveInteger	0..1	attr	The RTE shall take the value of this attribute for generating the source code representation of this Mode Declaration.

**Table E.77: ModeDeclaration**

<b>Class</b>	<b>ModeDeclarationGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration			
<b>Note</b>	A collection of Mode Declarations. Also, the initial mode is explicitly identified. <b>Tags:</b> atp.recommendedPackage=ModeDeclarationGroups			
<b>Base</b>	<i>ARElement</i> , <i>ARObject</i> , <i>AtpBlueprint</i> , <i>AtpBlueprintable</i> , <i>AtpClassifier</i> , <i>AtpType</i> , <i>CollectableElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
initialMode	<a href="#">ModeDeclaration</a>	0..1	ref	The initial mode of the ModeDeclarationGroup. This mode is active before any mode switches occurred.
mode Declaration	<a href="#">ModeDeclaration</a>	*	aggr	The ModeDeclarations collected in this ModeDeclaration Group. <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=modeDeclaration.shortName, mode Declaration.variationPoint.shortLabel vh.latestBindingTime=blueprintDerivationTime
modeManager ErrorBehavior	ModeErrorBehavior	0..1	aggr	This represents the ability to define the error behavior expected by the mode manager in case of errors on the mode user side (e.g. terminated mode user).
modeTransition	ModeTransition	*	aggr	This represents the available ModeTransitions of the ModeDeclarationGroup
modeUserError Behavior	ModeErrorBehavior	0..1	aggr	This represents the definition of the error behavior expected by the mode user in case of errors on the mode manager side (e.g. terminated mode manager).
onTransition Value	PositiveInteger	0..1	attr	The value of this attribute shall be taken into account by the RTE generator for programmatically representing a value used for the transition between two statuses.

**Table E.78: ModeDeclarationGroup**

<b>Class</b>	<b>ModeDeclarationGroupPrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration			
<b>Note</b>	The ModeDeclarationGroupPrototype specifies a set of Modes (ModeDeclarationGroup) which is provided or required in the given context.			
<b>Base</b>	<i>ARObject</i> , <i>AtpFeature</i> , <i>AtpPrototype</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<i>AtpClassifier.atpFeature</i> , <i>BswModuleDescription.providedModeGroup</i> , <i>BswModuleDescription.required ModeGroup</i> , <i>FirewallStateSwitchInterface.firewallStateMachine</i> , <i>FunctionGroupSet.functionGroup</i> , <a href="#">Mode SwitchInterface.modeGroup</a> , <i>Process.processStateMachine</i> , <i>StateManagementStateNotification.state Machine</i>			





<b>Class</b>		<b>ModeDeclarationGroupPrototype</b>		
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
swCalibration Access	SwCalibrationAccess Enum	0..1	attr	This allows for specifying whether or not the enclosing ModeDeclarationGroupPrototype can be measured at run-time.
type	<a href="#">ModeDeclarationGroup</a>	0..1	tref	The "collection of ModeDeclarations" (= ModeDeclaration Group) supported by a component <b>Stereotypes:</b> isOfType

**Table E.79: ModeDeclarationGroupPrototype**

<b>Class</b>		<b>ModeSwitchInterface</b>		
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	A mode switch interface declares a ModeDeclarationGroupPrototype to be sent and received. <b>Tags:</b> atp.recommendedPackage=PortInterfaces			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">PortInterface</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
modeGroup	<a href="#">ModeDeclarationGroup Prototype</a>	0..1	aggr	The ModeDeclarationGroupPrototype of this mode interface.

**Table E.80: ModeSwitchInterface**

<b>Class</b>		<b>NonqueuedReceiverComSpec</b>		
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Communication			
<b>Note</b>	Communication attributes specific to non-queued receiving.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">RPortComSpec</a> , <a href="#">ReceiverComSpec</a>			
<b>Aggregated by</b>	<a href="#">AbstractRequiredPortPrototype.requiredComSpec</a> , <a href="#">PortPrototypeBlueprint.requiredComSpec</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
aliveTimeout	TimeValue	0..1	attr	Specify the amount of time (in seconds) after which the software component (via the RTE) needs to be notified if the corresponding data item have not been received according to the specified timing description. If the aliveTimeout attribute is 0 no timeout monitoring shall be performed.
enableUpdate	Boolean	0..1	attr	This attribute controls whether application code is entitled to check whether the value of the corresponding Variable DataPrototype has been updated.
filter	<a href="#">DataFilter</a>	0..1	aggr	The applicable filter algorithm for filtering the value of the corresponding dataElement.
handleData Status	Boolean	0..1	attr	If this attribute is set to true, then the Rte_!Status API shall exist. If the attribute does not exist or is set to false, then the Rte_!Status API may still exist in response to the existence of further conditions.





Class	NonqueuedReceiverComSpec			
handleNeverReceived	Boolean	0..1	attr	This attribute specifies whether for the corresponding VariableDataPrototype the "never received" flag is available. If yes, the RTE is supposed to assume that initially the VariableDataPrototype has not been received before. After the first reception of the corresponding VariableDataPrototype the flag is cleared. <ul style="list-style-type: none"> <li>• If the value of this attribute is set to "true" the flag is required.</li> <li>• If set to "false", the RTE shall not support the "never received" functionality for the corresponding VariableDataPrototype.</li> </ul>
handleTimeoutType	HandleTimeoutEnum	0..1	attr	This attribute controls the behavior with respect to the handling of timeouts.
initValue	<a href="#">ValueSpecification</a>	0..1	aggr	Initial value to be used in case the sending component is not yet initialized. If the sender also specifies an initial value, then the receiver's value will be used.
timeoutSubstitutionValue	<a href="#">ValueSpecification</a>	0..1	aggr	This attribute represents the substitution value applicable in the case of a timeout.

**Table E.81: NonqueuedReceiverComSpec**

Class	NumericalValueSpecification			
Package	M2::AUTOSARTemplates::CommonStructure::Constants			
Note	A numerical ValueSpecification which is intended to be assigned to a Primitive data element. Note that the numerical value is a variant, it can be computed by a formula.			
Base	<i>ARObject</i> , <a href="#">ValueSpecification</a>			
Aggregated by	ApplicationAssocMapElementValueSpecification.key, ApplicationAssocMapElementValueSpecification.value, <a href="#">ArrayValueSpecification.element</a> , <a href="#">CalibrationParameterValue.applInitValue</a> , <a href="#">CalibrationParameterValue.implInitValue</a> , ConstantSpecification.valueSpec, <a href="#">CryptoServiceKey.developmentValue</a> , DiagnosticEnvDataCondition.compareValue, DiagnosticEnvDataElementCondition.compareValue, FieldSenderComSpec.initValue, <a href="#">ISignal.initValue</a> , <a href="#">ISignal.timeoutSubstitutionValue</a> , <a href="#">NonqueuedReceiverComSpec.initValue</a> , <a href="#">NonqueuedReceiverComSpec.timeoutSubstitutionValue</a> , NonqueuedSenderComSpec.initValue, NvProvideComSpec.ramBlockInitValue, NvProvideComSpec.romBlockInitValue, NvRequireComSpec.initValue, <a href="#">ParameterDataPrototype.initValue</a> , ParameterProvideComSpec.initValue, ParameterRequireComSpec.initValue, PersistencyDataRequiredComSpec.initValue, PersistencyKeyValuePair.initValue, PortDefinedArgumentValue.value, PortPrototypeBlueprintInitValue.value, RecordValueSpecification.field, <a href="#">StateManagementCompareCondition.compareValue</a> , <a href="#">SwDataDefProps.invalidValue</a> , <a href="#">VariableDataPrototype.initValue</a>			
Attribute	Type	Mult.	Kind	Note
value	Numerical	0..1	attr	This is the value itself. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime

**Table E.82: NumericalValueSpecification**

Class	NvBlockSwComponentType
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components
Note	The NvBlockSwComponentType defines non volatile data which data can be shared between SwComponentPrototypes. The non volatile data of the NvBlockSwComponentType are accessible via provided and required ports. <b>Tags:</b> atp.recommendedPackage=SwComponentTypes





<b>Class</b>	<b>NvBlockSwComponentType</b>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtomicSwComponentType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
bulkNvDataDescriptor	BulkNvDataDescriptor	*	aggr	This aggregation formally defines the bulk Nv Blocks that are provided to the application software by the enclosing NvBlockSwComponentType.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=bulkNvDataDescriptor.shortName, bulkNvDataDescriptor.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
nvBlockDescriptor	NvBlockDescriptor	*	aggr	Specification of the properties of exactly one NVRAM Block.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=nvBlockDescriptor.shortName, nvBlockDescriptor.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table E.83: NvBlockSwComponentType**

<b>Class</b>	<b>NvDataInterface</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	A non volatile data interface declares a number of VariableDataPrototypes to be exchanged between non volatile block components and atomic software components.  <b>Tags:</b> atp.recommendedPackage=PortInterfaces			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">DataInterface</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">PortInterface</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
nvData	<a href="#">VariableDataPrototype</a>	*	aggr	The VariableDataPrototype of this nv data interface.

**Table E.84: NvDataInterface**

<b>Class</b>	<b>PPortPrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	Component port providing a certain port interface.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AbstractProvidedPortPrototype</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpFeature</a> , <a href="#">AtpPrototype</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PortPrototype</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a> , <a href="#">SwComponentType.port</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
providedInterface	<a href="#">PortInterface</a>	0..1	tref	The interface that this port provides.  <b>Stereotypes:</b> isOfType

**Table E.85: PPortPrototype**

<b>Class</b>	<b>PRPortPrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	This kind of PortPrototype can take the role of both a required and a provided PortPrototype.			
<b>Base</b>	ARObject, AbstractProvidedPortPrototype, AbstractRequiredPortPrototype, AtpBlueprintable, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, PortPrototype, Referrable			
<b>Aggregated by</b>	AtpClassifier.atpFeature, SwComponentType.port			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
provided Required Interface	PortInterface	0..1	tref	This represents the PortInterface used to type the PRPort Prototype <b>Stereotypes:</b> isOfType

**Table E.86: PRPortPrototype**

<b>Class</b>	<b>PackageableElement</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ARPackage			
<b>Note</b>	This meta-class specifies the ability to be a member of an AUTOSAR package.			
<b>Base</b>	ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Referrable			
<b>Subclasses</b>	ARElement, EnumerationMappingTable, FibexElement			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.87: PackageableElement**

<b>Class</b>	<b>ParameterDataPrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
<b>Note</b>	A ParameterDataPrototype represents a formalized generic piece of information that is typically immutable by the application software layer, but mutable by measurement and calibration tools. ParameterDataPrototype is used in various contexts and the specific context gives the otherwise generic ParameterDataPrototype a dedicated semantics.			
<b>Base</b>	ARObject, AtpFeature, AtpPrototype, AutosarDataPrototype, DataPrototype, Identifiable, MultilanguageReferrable, Referrable			
<b>Aggregated by</b>	AtpClassifier.atpFeature, BswInternalBehavior.perInstanceParameter, InternalBehavior.constantMemory, NvBlockDescriptor.romBlock, ParameterInterface.parameter, SwcInternalBehavior.perInstanceParameter, SwcInternalBehavior.sharedParameter			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
initValue	ValueSpecification	0..1	aggr	Specifies initial value(s) of the ParameterDataPrototype

**Table E.88: ParameterDataPrototype**

<b>Class</b>	<b>ParameterInterface</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	A parameter interface declares a number of parameter and characteristic values to be exchanged between parameter components and software components. <b>Tags:</b> atp.recommendedPackage=PortInterfaces			
<b>Base</b>	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, DataInterface, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
parameter	ParameterData Prototype	*	aggr	The ParameterDataPrototype of this ParameterInterface.

**Table E.89: ParameterInterface**



<b>Class</b>	<b>ParameterSwComponentType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	The ParameterSwComponentType defines parameters and characteristic values accessible via provided Ports. The provided values are the same for all connected SwComponentPrototypes <b>Tags:</b> atp.recommendedPackage=SwComponentTypes			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
constant Mapping	ConstantSpecification MappingSet	*	ref	Reference to the ConstantSpecificationMapping to be applied for the particular ParameterSwComponentType <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=constantMapping
dataType Mapping	<a href="#">DataTypeMappingSet</a>	*	ref	Reference to the DataTypeMapping to be applied for the particular ParameterSwComponentType <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=dataTypeMapping
instantiation DataDefProps	InstantiationDataDef Props	*	aggr	The purpose of this is that within the context of a given SwComponentType some data def properties of individual instantiations can be modified.  The aggregation of InstantiationDataDefProps is subject to variability with the purpose to support the conditional existence of PortPrototypes <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=instantiationDataDefProps, instantiationDataDefProps.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table E.90: ParameterSwComponentType**

<b>Class</b>	<b>PassThroughSwConnector</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Composition			
<b>Note</b>	This kind of SwConnector can be used inside a CompositionSwComponentType to connect two delegation PortPrototypes.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpFeature</a> , <a href="#">AtpStructureElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a> , <a href="#">SwConnector</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a> , <a href="#">CompositionSwComponentType.connector</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
providedOuter Port	AbstractProvidedPort Prototype	0..1	ref	This represents the provided outer delegation Port Prototype of the PassThroughSwConnector.
requiredOuter Port	AbstractRequiredPort Prototype	0..1	ref	This represents the required outer delegation Port Prototype of the PassThroughSwConnector.

**Table E.91: PassThroughSwConnector**

<b>Class</b>	<b>PhysConstrs</b>			
<b>Package</b>	M2::MSR::AsamHdo::Constraints::GlobalConstraints			
<b>Note</b>	This meta-class represents the ability to express physical constraints. Therefore it has (in opposite to InternalConstrs) a reference to a Unit.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">DataConstrRule.physConstrs</a>			







<b>Class</b>	<b>PhysConstrs</b>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
lowerLimit	Limit	0..1	attr	This specifies the lower limit of the constraint. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime xml.sequenceOffset=20
maxDiff	Numerical	0..1	attr	Maximum difference that is permitted between two consecutive values if the constraint is applied to an axis. <b>Tags:</b> xml.sequenceOffset=60
maxGradient	Numerical	0..1	attr	This element specifies the maximum slope that may be used in curves and maps. <b>Tags:</b> xml.sequenceOffset=50
monotony	MonotonyEnum	0..1	attr	This specifies the monotony constraints on the data object. Note that this applies only to curves and maps. <b>Tags:</b> xml.sequenceOffset=70
scaleConstr (ordered)	ScaleConstr	*	aggr	This is one particular scale which contributes to the data constraints. <b>Tags:</b> xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=40 xml.typeElement=false xml.typeWrapperElement=false
unit	Unit	0..1	ref	This is the unit to which the physical constraints relate to. In particular, it is the physical unit of the specified limits. <b>Tags:</b> xml.sequenceOffset=80
upperLimit	Limit	0..1	attr	This specifies the upper limit of the constraint. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime xml.sequenceOffset=30

**Table E.92: PhysConstrs**

<b>Class</b>	<b>PncMappingIdent</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::PncMapping			
<b>Note</b>	This meta-class is created to add the ability to become the target of a reference to the non-Referrable PncMapping.			
<b>Base</b>	ARObject, Referrable			
<b>Aggregated by</b>	PncMapping.ident			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.93: PncMappingIdent**

<b>Class</b>	<b>PortAPIOption</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::PortAPIOptions			
<b>Note</b>	Options how to generate the signatures of calls for an AtomicSwComponentType in order to communicate over a PortPrototype (for calls into a RunnableEntity as well as for calls from a Runnable Entity to the PortPrototype).			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">SwcInternalBehavior.portAPIOption</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
enableTakeAddress	Boolean	0..1	attr	If set to true, the software-component is able to use the API reference for deriving a pointer to an object.
errorHandling	<a href="#">DataTransformationErrorHandlingEnum</a>	0..1	attr	This specifies whether a RunnableEntity accessing a PortPrototype that is referenced by this PortAPIOption shall specifically handle transformer errors or not.
indirectAPI	Boolean	0..1	attr	If set to true this attribute specifies an "indirect API" to be generated for the associated port which means that the software-component is able to access the actions on a port via a pointer to an object representing a port. This allows e.g. iterating over ports in a loop. This option has no effect for PPortPrototypes of client/server interfaces.
port	<a href="#">PortPrototype</a>	0..1	ref	The option is valid for generated functions related to communication over this port
portArgValue (ordered)	PortDefinedArgument Value	*	aggr	An argument value defined by this port.
supportedFeature	SwcSupportedFeature	*	aggr	This collection specifies which features are supported by the RunnableEntitys which access a PortPrototype that it referenced by this PortAPIOption.
transformerStatusForwarding	<a href="#">DataTransformationStatusForwardingEnum</a>	0..1	attr	This attribute specifies whether a RunnableEntity accessing a PortPrototype that is referenced by this PortAPIOption shall be able to forward a status code to the transformer chain.

**Table E.94: PortAPIOption**

<b>Class</b>	<b>PortGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	<p>Group of ports which share a common functionality</p> <p>, e.g. need specific network resources. This information shall be available on the VFB level in order to delegate it properly via compositions. When propagated into the ECU extract, this information is used as input for the configuration of Services like the Communication Manager.</p> <p>A PortGroup is defined locally in a component (which can be a composition) and refers to the "outer" ports belonging to the group as well as to the "inner" groups which propagate this group into the components which are part of a composition. A PortGroup within an atomic SWC cannot be linked to inner groups.</p>			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpFeature</a> , <a href="#">AtpStructureElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a> , <a href="#">SwComponentType.portGroup</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
innerGroup	<a href="#">PortGroup</a>	*	iref	<p>Links a PortGroup in a composition to another PortGroup, that is defined in a component which is part of this CompositionSwComponentType.</p> <p><b>InstanceRef implemented by:</b> <a href="#">InnerPortGroupInCompositionInstanceRef</a></p>





Class	PortGroup			
outerPort	<a href="#">PortPrototype</a>	*	ref	<p>Outer PortPrototype of this AtomicSwComponentType which belongs to the group. A port can belong to several groups or to no group at all.</p> <p><b>Stereotypes:</b> atpSplittable; atpVariation  <b>Tags:</b>            atp.Splitkey=outerPort.portPrototype, outerPort.variation            Point.shortLabel            vh.latestBindingTime=preCompileTime</p>

**Table E.95: PortGroup**

Class	PortInterface (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	Abstract base class for an interface that is either provided or required by a port of a software component.			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">ClientServerInterface</a> , <a href="#">DataInterface</a> , <a href="#">ModeSwitchInterface</a> , <a href="#">TriggerInterface</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
Attribute	Type	Mult.	Kind	Note
isService	Boolean	0..1	attr	<p>This flag is set if the PortInterface is to be used for communication between an</p> <ul style="list-style-type: none"> <li>• ApplicationSwComponentType or</li> <li>• ServiceProxySwComponentType or</li> <li>• SensorActuatorSwComponentType or</li> <li>• ComplexDeviceDriverSwComponentType</li> <li>• ServiceSwComponentType</li> <li>• EcuAbstractionSwComponentType</li> </ul> <p>and a ServiceSwComponentType (namely an AUTOSAR Service) located on the same ECU. Otherwise the flag is not set.</p> <p><b>Stereotypes:</b> atpVariation  <b>Tags:</b>vh.latestBindingTime=blueprintDerivationTime</p>
serviceKind	ServiceProviderEnum	0..1	attr	This attribute provides further details about the nature of the applied service.

**Table E.96: PortInterface**

Class	PortInterfaceMapping (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	Specifies one PortInterfaceMapping to support the connection of Ports typed by two different Port Interfaces with PortInterface elements having unequal names and/or unequal semantic (resolution or range).			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">ClientServerInterfaceMapping</a> , <a href="#">ModelInterfaceMapping</a> , <a href="#">TriggerInterfaceMapping</a> , <a href="#">VariableAndParameterInterfaceMapping</a>			
<b>Aggregated by</b>	<a href="#">PortInterfaceMappingSet.portInterfaceMapping</a>			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

**Table E.97: PortInterfaceMapping**

<b>Class</b>	<b>PortPrototype</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	Base class for the ports of an AUTOSAR software component. The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.			
<b>Base</b>	ARObject, AtpBlueprintable, AtpFeature, AtpPrototype, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	AbstractProvidedPortPrototype, AbstractRequiredPortPrototype			
<b>Aggregated by</b>	AtpClassifier.atpFeature, <a href="#">SwComponentType.port</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
clientServer Annotation	ClientServerAnnotation	*	aggr	Annotation of this PortPrototype with respect to client/server communication.
delegatedPort Annotation	DelegatedPort Annotation	0..1	aggr	Annotations on this delegated port.
ioHwAbstraction Server Annotation	IoHwAbstractionServer Annotation	*	aggr	Annotations on this IO Hardware Abstraction port.
modePort Annotation	ModePortAnnotation	*	aggr	Annotations on this mode port.
nvDataPort Annotation	NvDataPortAnnotation	*	aggr	Annotations on this non volatile data port.
parameterPort Annotation	ParameterPort Annotation	*	aggr	Annotations on this parameter port.
senderReceiver Annotation	SenderReceiver Annotation	*	aggr	Collection of annotations of this ports sender/receiver communication.
triggerPort Annotation	TriggerPortAnnotation	*	aggr	Annotations on this trigger port.

**Table E.98: PortPrototype**

<b>Class</b>	<b>RPortPrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	Component port requiring a certain port interface.			
<b>Base</b>	ARObject, AbstractRequiredPortPrototype, AtpBlueprintable, AtpFeature, AtpPrototype, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PortPrototype</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	AtpClassifier.atpFeature, <a href="#">SwComponentType.port</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
mayBe Unconnected	Boolean	0..1	attr	If set to true, this attribute indicates that the enclosing RPortPrototype may be left unconnected and that this aspect has explicitly been considered in the software-component's design.
required Interface	<a href="#">PortInterface</a>	0..1	tref	The interface that this port requires. <b>Stereotypes:</b> isOfType

**Table E.99: RPortPrototype**

<b>Class</b>	<b>ReceiverComSpec</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Communication			
<b>Note</b>	Receiver-specific communication attributes (RPortPrototype typed by SenderReceiverInterface).			
<b>Base</b>	ARObject, RPortComSpec			
<b>Subclasses</b>	<a href="#">NonqueuedReceiverComSpec</a> , <a href="#">QueuedReceiverComSpec</a>			
<b>Aggregated by</b>	AbstractRequiredPortPrototype.requiredComSpec, PortPrototypeBlueprint.requiredComSpec			





<b>Class</b>		<b>ReceiverComSpec</b> (abstract)		
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
composite Network Representation	CompositeNetwork Representation	*	aggr	This represents a CompositeNetworkRepresentation defined in the context of a ReceiverComSpec. The purpose of this aggregation is to be able to specify the network representation of leaf elements of Application CompositeDataTypes.
dataElement	<a href="#">AutosarDataPrototype</a>	0..1	ref	Data element these attributes belong to.
handleOutOfRange	<a href="#">HandleOutOfRangeEnum</a>	0..1	attr	This attribute controls how values that are out of the specified range are handled according to the values of HandleOutOfRangeEnum.
handleOutOfRangeStatus	HandleOutOfRange StatusEnum	0..1	attr	Control the way how return values are created in case of an out-of-range situation.
maxDelta CounterInit	PositiveInteger	0..1	attr	Initial maximum allowed gap between two counter values of two consecutively received valid Data, i.e. how many subsequent lost data is accepted. For example, if the receiver gets Data with counter 1 and MaxDeltaCounter Init is 1, then at the next reception the receiver can accept Counters with values 2 and 3, but not 4.  Note that if the receiver does not receive new Data at a consecutive read, then the receiver increments the tolerance by 1.  Caveat: The E2E wrapper approach involves technologies that are not subjected to the AUTOSAR standard and is superseded by the superior E2E transformer approach (which is fully standardized by AUTOSAR). Hence, new projects (without legacy constraints due to carry-over parts) shall use the fully standardized E2E transformer approach.  <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime
maxNoNewOr RepeatedData	PositiveInteger	0..1	attr	The maximum amount of missing or repeated Data which the receiver does not expect to exceed under normal communication conditions.  Caveat: The E2E wrapper approach involves technologies that are not subjected to the AUTOSAR standard and is superseded by the superior E2E transformer approach (which is fully standardized by AUTOSAR). Hence, new projects (without legacy constraints due to carry-over parts) shall use the fully standardized E2E transformer approach.
network Representation	<a href="#">SwDataDefProps</a>	0..1	aggr	A networkRepresentation is used to define how the data Element is mapped to a communication bus.  <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=networkRepresentation
receptionProps	ReceptionComSpec Props	0..1	aggr	"This aggregation represents the definition transmission props in the context of the enclosing ReceiverComSpec.
replaceWith	<a href="#">VariableAccess</a>	0..1	aggr	This aggregation is used to identify the AutosarData Prototype to be taken for sourcing an external replacement in the out-of-range and invalidValue handling.





Class	ReceiverComSpec (abstract)			
syncCounterInit	PositiveInteger	0..1	attr	<p>Number of Data required for validating the consistency of the counter that shall be received with a valid counter (i.e. counter within the allowed lock-in range) after the detection of an unexpected behavior of a received counter.</p> <p>Caveat: The E2E wrapper approach involves technologies that are not subjected to the AUTOSAR standard and is superseded by the superior E2E transformer approach (which is fully standardized by AUTOSAR). Hence, new projects (without legacy constraints due to carry-over parts) shall use the fully standardized E2E transformer approach.</p>
transformationComSpecProps	<a href="#">TransformationComSpecProps</a>	*	aggr	<p>This references the TransformationComSpecProps which define port-specific configuration for data transformation.</p>
usesEndToEndProtection	Boolean	0..1	attr	<p>This indicates whether the corresponding dataElement shall be transmitted using end-to-end protection.</p> <p>Caveat: The E2E wrapper approach involves technologies that are not subjected to the AUTOSAR standard and is superseded by the superior E2E transformer approach (which is fully standardized by AUTOSAR). Hence, new projects (without legacy constraints due to carry-over parts) shall use the fully standardized E2E transformer approach.</p> <p><b>Stereotypes:</b> atpVariation <b>Tags:</b>vh.latestBindingTime=preCompileTime</p>

**Table E.100: ReceiverComSpec**

Class	Referrable (abstract)			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable			
Note	Instances of this class can be referred to by their identifier (while adhering to namespace borders).			
Base	ARObject			
Subclasses	<a href="#">AtpDefinition</a> , <a href="#">BswDistinguishedPartition</a> , <a href="#">BswModuleCallPoint</a> , <a href="#">BswModuleClientServerEntry</a> , <a href="#">BswVariableAccess</a> , <a href="#">CouplingPortTrafficClassAssignment</a> , <a href="#">DiagnosticEnvModeElement</a> , <a href="#">EthernetPriorityRegeneration</a> , <a href="#">ExclusiveAreaNestingOrder</a> , <a href="#">HwDescriptionEntity</a> , <a href="#">ImplementationProps</a> , <a href="#">LinSlaveConfigIdent</a> , <a href="#">ModeTransition</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PncMappingIdent</a> , <a href="#">SingleLanguageReferrable</a> , <a href="#">SoConlPduIdentifier</a> , <a href="#">SocketConnectionBundle</a> , <a href="#">TimeSyncServerConfiguration</a> , <a href="#">TpConnectionIdent</a>			
Attribute	Type	Mult.	Kind	Note
shortName	Identifier	1	attr	<p>This specifies an identifying shortName for the object. It needs to be unique within its context and is intended for humans but even more for technical reference.</p> <p><b>Stereotypes:</b> atpIdentityContributor <b>Tags:</b> xml.enforceMinMultiplicity=true xml.sequenceOffset=-100</p>
shortNameFragment	ShortNameFragment	*	aggr	<p>This specifies how the Referrable.shortName is composed of several shortNameFragments.</p> <p><b>Tags:</b>xml.sequenceOffset=-90</p>

**Table E.101: Referrable**

<b>Class</b>	<b>RoleBasedPortAssignment</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::ServiceMapping			
<b>Note</b>	This class specifies an assignment of a role to a particular service port (RPortPrototype or PPort Prototype) of an AtomicSwComponentType. With this assignment, the role of the service port can be mapped to a specific ServiceNeeds element, so that a tool is able to create the correct connector.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	NvBlockDescriptor.clientServerPort, SwcServiceDependency.assignedPort			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
portPrototype	PortPrototype	0..1	ref	Service PortPrototype used in the assigned role. This PortPrototype shall either belong to the same AtomicSw ComponentType as the SwcInternalBehavior which owns the ServiceDependency or to the same NvBlockSw ComponentType as the NvBlockDescriptor.
role	Identifier	0..1	attr	This is the role of the assigned Port in the given context.  The value shall be a shortName of the Blueprint of a Port Interface as standardized in the Software Specification of the related AUTOSAR Service.

**Table E.102: RoleBasedPortAssignment**

<b>Class</b>	<b>RunnableEntity</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior			
<b>Note</b>	A RunnableEntity represents the smallest code-fragment that is provided by an AtomicSwComponent Type and are executed under control of the RTE. RunnableEntities are for instance set up to respond to data reception or operation invocation on a server.			
<b>Base</b>	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, ExecutableEntity, Identifiable, Multilanguage Referrable, Referrable			
<b>Aggregated by</b>	AtpClassifier.atpFeature, SwcInternalBehavior.runnable			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
argument (ordered)	RunnableEntity Argument	*	aggr	This represents the formal definition of a an argument to a RunnableEntity.
asynchronous ServerCall ResultPoint	AsynchronousServer CallResultPoint	*	aggr	The server call result point admits a runnable to fetch the result of an asynchronous server call.  The aggregation of AsynchronousServerCallResultPoint is subject to variability with the purpose to support the conditional existence of client server PortPrototypes and the variant existence of server call result points in the implementation.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=asynchronousServerCallResultPoint.short Name, asynchronousServerCallResultPoint.variation Point.shortLabel vh.latestBindingTime=preCompileTime
canBelvoked Concurrently	Boolean	0..1	attr	If the value of this attribute is set to "true" the enclosing RunnableEntity can be invoked concurrently (even for one instance of the corresponding AtomicSwComponent Type). This implies that it is the responsibility of the implementation of the RunnableEntity to take care of this form of concurrency.





Class	RunnableEntity			
dataRead Access	<a href="#">VariableAccess</a>	*	aggr	<p>RunnableEntity has implicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype.</p> <p>The aggregation of dataReadAccess is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of dataReadAccess in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=dataReadAccess.shortName, dataReadAccess.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
dataReceive PointBy Argument	<a href="#">VariableAccess</a>	*	aggr	<p>RunnableEntity has explicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype. The result is passed back to the application by means of an argument in the function signature.</p> <p>The aggregation of dataReceivePointByArgument is subject to variability with the purpose to support the conditional existence of sender receiver PortPrototype or the variant existence of data receive points in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=dataReceivePointByArgument.shortName, dataReceivePointByArgument.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
dataReceive PointByValue	<a href="#">VariableAccess</a>	*	aggr	<p>RunnableEntity has explicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype.</p> <p>The result is passed back to the application by means of the return value. The aggregation of dataReceivePointByValue is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of data receive points in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=dataReceivePointByValue.shortName, dataReceivePointByValue.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
dataSendPoint	<a href="#">VariableAccess</a>	*	aggr	<p>RunnableEntity has explicit write access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype.</p> <p>The aggregation of dataSendPoint is subject to variability with the purpose to support the conditional existence of sender receiver PortPrototype or the variant existence of data send points in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=dataSendPoint.shortName, dataSendPoint.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>







Class	RunnableEntity			
dataWrite Access	VariableAccess	*	aggr	<p>RunnableEntity has implicit write access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype.</p> <p>The aggregation of dataWriteAccess is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of dataWriteAccess in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=dataWriteAccess.shortName, dataWriteAccess.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
external TriggeringPoint	ExternalTriggeringPoint	*	aggr	<p>The aggregation of ExternalTriggeringPoint is subject to variability with the purpose to support the conditional existence of trigger ports or the variant existence of external triggering points in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=externalTriggeringPoint.ident.shortName, externalTriggeringPoint.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
internal TriggeringPoint	InternalTriggeringPoint	*	aggr	<p>The aggregation of InternalTriggeringPoint is subject to variability with the purpose to support the variant existence of internal triggering points in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=internalTriggeringPoint.shortName, internalTriggeringPoint.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
modeAccess Point	ModeAccessPoint	*	aggr	<p>The runnable has a mode access point. The aggregation of ModeAccessPoint is subject to variability with the purpose to support the conditional existence of mode ports or the variant existence of mode access points in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=modeAccessPoint.ident.shortName, modeAccessPoint.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
modeSwitch Point	ModeSwitchPoint	*	aggr	<p>The runnable has a mode switch point. The aggregation of ModeSwitchPoint is subject to variability with the purpose to support the conditional existence of mode ports or the variant existence of mode switch points in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=modeSwitchPoint.shortName, modeSwitchPoint.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>





Class	RunnableEntity			
parameter Access	ParameterAccess	*	aggr	<p>The presence of a ParameterAccess implies that a RunnableEntity needs read only access to a Parameter DataPrototype which may either be local or within a Port Prototype.</p> <p>The aggregation of ParameterAccess is subject to variability with the purpose to support the conditional existence of parameter ports and component local parameters as well as the variant existence of Parameter Access (points) in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=parameterAccess.shortName, parameter Access.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
readLocal Variable	VariableAccess	*	aggr	<p>The presence of a readLocalVariable implies that a RunnableEntity needs read access to a VariableData Prototype in the role of implicitInterRunnableVariable or explicitInterRunnableVariable.</p> <p>The aggregation of readLocalVariable is subject to variability with the purpose to support the conditional existence of implicitInterRunnableVariable and explicit InterRunnableVariable or the variant existence of read LocalVariable (points) in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=readLocalVariable.shortName, readLocal Variable.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
serverCallPoint	ServerCallPoint	*	aggr	<p>The RunnableEntity has a ServerCallPoint. The aggregation of ServerCallPoint is subject to variability with the purpose to support the conditional existence of client server PortPrototypes or the variant existence of server call points in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=serverCallPoint.shortName, serverCall Point.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
symbol	CIdentifier	0..1	attr	<p>The symbol describing this RunnableEntity's entry point. This is considered the API of the RunnableEntity and is required during the RTE contract phase.</p>
waitPoint	WaitPoint	*	aggr	<p>The WaitPoint associated with the RunnableEntity.</p>
writtenLocal Variable	VariableAccess	*	aggr	<p>The presence of a writtenLocalVariable implies that a RunnableEntity needs write access to a VariableData Prototype in the role of implicitInterRunnableVariable or explicitInterRunnableVariable.</p> <p>The aggregation of writtenLocalVariable is subject to variability with the purpose to support the conditional existence of implicitInterRunnableVariable and explicit InterRunnableVariable or the variant existence of written LocalVariable (points) in the implementation.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=writtenLocalVariable.shortName, written LocalVariable.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>

**Table E.103: RunnableEntity**

<b>Class</b>	<b>SenderComSpec</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Communication			
<b>Note</b>	Communication attributes for a sender port (PPortPrototype typed by SenderReceiverInterface).			
<b>Base</b>	ARObject, PPortComSpec			
<b>Subclasses</b>	NonqueuedSenderComSpec, QueuedSenderComSpec			
<b>Aggregated by</b>	AbstractProvidedPortPrototype.providedComSpec, PortPrototypeBlueprint.providedComSpec			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
composite Network Representation	CompositeNetworkRepresentation	*	aggr	This represents a CompositeNetworkRepresentation defined in the context of a SenderComSpec.
dataElement	<a href="#">AutosarDataPrototype</a>	0..1	ref	Data element these quality of service attributes apply to.
handleOutOfRange	<a href="#">HandleOutOfRangeEnum</a>	0..1	attr	This attribute controls how out-of-range values shall be dealt with.
network Representation	<a href="#">SwDataDefProps</a>	0..1	aggr	A networkRepresentation is used to define how the data Element is mapped to a communication bus. <b>Stereotypes:</b> atpSplittable <b>Tags:</b> atp.Splitkey=networkRepresentation
transmission Acknowledge	Transmission Acknowledgement Request	0..1	aggr	Requested transmission acknowledgement for data element.
transmission Props	<a href="#">TransmissionComSpecProps</a>	0..1	aggr	This aggregation represents the definition transmission props in the context of the enclosing SenderComSpec.
usesEndToEndProtection	Boolean	0..1	attr	This indicates whether the corresponding dataElement shall be transmitted using end-to-end protection. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime

**Table E.104: SenderComSpec**

<b>Class</b>	<b>SenderReceiverInterface</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	A sender/receiver interface declares a number of data elements to be sent and received. <b>Tags:</b> atp.recommendedPackage=PortInterfaces			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">DataInterface</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">PortInterface</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataElement	<a href="#">VariableDataPrototype</a>	*	aggr	The data elements of this SenderReceiverInterface.
invalidation Policy	InvalidationPolicy	*	aggr	InvalidationPolicy for a particular dataElement
metaDataItem Set	<a href="#">MetaDataItemSet</a>	*	aggr	This aggregation defines fixed sets of meta-data items associated with dataElements of the enclosing Sender ReceiverInterface

**Table E.105: SenderReceiverInterface**

<b>Class</b>	<b>SensorActuatorSwComponentType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	The SensorActuatorSwComponentType introduces the possibility to link from the software representation of a sensor/actuator to its hardware description provided by the ECU Resource Template. <b>Tags:</b> atp.recommendedPackage=SwComponentTypes			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtomicSwComponentType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
sensorActuator	HwDescriptionEntity	0..1	ref	Reference from the Sensor Actuator Software Component Type to the description of the actual hardware.

**Table E.106: SensorActuatorSwComponentType**

<b>Class</b>	<b>ServerCallPoint</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::ServerCall			
<b>Note</b>	If a RunnableEntity owns a ServerCallPoint it is entitled to invoke a particular ClientServerOperation of a specific RPortPrototype of the corresponding AtomicSwComponentType			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AbstractAccessPoint</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpFeature</a> , <a href="#">AtpStructureElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	AsynchronousServerCallPoint, <a href="#">SynchronousServerCallPoint</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a> , <a href="#">RunnableEntity.serverCallPoint</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
operation	<a href="#">ClientServerOperation</a>	0..1	iref	The operation that is called by this runnable. <b>InstanceRef implemented by:</b> ROperationInAtomicSwc InstanceRef
timeout	TimeValue	0..1	attr	Time in seconds before the server call times out and returns with an error message. It depends on the call type (synchronous or asynchronous) how this is reported.

**Table E.107: ServerCallPoint**

<b>Class</b>	<b>ServiceNeeds</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
<b>Note</b>	This expresses the abstract needs that a Software Component or Basic Software Module has on the configuration of an AUTOSAR Service to which it will be connected. "Abstract needs" means that the model abstracts from the Configuration Parameters of the underlying Basic Software.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	BswMgrNeeds, ComMgrUserNeeds, CryptoKeyManagementNeeds, CryptoServiceJobNeeds, CryptoServiceNeeds, <a href="#">DiagnosticCapabilityElement</a> , DitUserNeeds, <a href="#">DolpServiceNeeds</a> , EcuStateMgrUserNeeds, ErrorTracerNeeds, FunctionInhibitionAvailabilityNeeds, FunctionInhibitionNeeds, GlobalSupervisionNeeds, HardwareTestNeeds, IdsMgrCustomTimestampNeeds, IdsMgrNeeds, IndicatorStatusNeeds, J1939DcmDm19Support, J1939RmIncomingRequestServiceNeeds, J1939RmOutgoingRequestServiceNeeds, NvBlockNeeds, SecureOnBoardCommunicationNeeds, SupervisedEntityCheckpointNeeds, SupervisedEntityNeeds, SyncTimeBaseMgrUserNeeds, V2xDataManagerNeeds, V2xFacUserNeeds, V2xMUserNeeds, VendorSpecificServiceNeeds			
<b>Aggregated by</b>	<a href="#">BswServiceDependency.serviceNeeds</a> , <a href="#">SwcServiceDependency.serviceNeeds</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.108: ServiceNeeds**

<b>Class</b>	<b>ServiceProxySwComponentType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	<p>This class provides the ability to express a software-component which provides access to an internal service for remote ECUs. It acts as a proxy for the service providing access to the service.</p> <p>An important use case is the request of vehicle mode switches: Such requests can be communicated via sender-receiver interfaces across ECU boundaries, but the mode manager being responsible to perform the mode switches is an AUTOSAR Service which is located in the Basic Software and is not visible in the VFB view. To handle this situation, a ServiceProxySwComponentType will act as proxy for the mode manager. It will have R-Ports to be connected with the mode requestors on VFB level and Service-Ports to be connected with the local mode manager at ECU integration time.</p> <p>Apart from the semantics, a ServiceProxySwComponentType has these specific properties:</p> <ul style="list-style-type: none"> <li>• A prototype of it can be mapped to more than one ECUs in the system description.</li> <li>• Exactly one additional instance of it will be created in the ECU-Extract per ECU to which the prototype has been mapped.</li> <li>• For remote communication, it can have only R-Ports with sender-receiver interfaces and 1:n semantics.</li> <li>• There shall be no connectors between two prototypes of any ServiceProxySwComponentType.</li> </ul> <p><b>Tags:</b>atp.recommendedPackage=SwComponentTypes</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtomicSwComponentType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.109: ServiceProxySwComponentType**

<b>Class</b>	<b>ServiceSwComponentType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	<p>ServiceSwComponentType is used for configuring services for a given ECU. Instances of this class are only to be created in ECU Configuration phase for the specific purpose of the service configuration.</p> <p><b>Tags:</b>atp.recommendedPackage=SwComponentTypes</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtomicSwComponentType</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a> , <a href="#">SwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.110: ServiceSwComponentType**

<b>Enumeration</b>	<b>ServiceVersionAcceptanceKindEnum</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	Defined the possible acceptance kinds for required service instances.			
<b>Aggregated by</b>	<a href="#">ConsumedServiceInstance.versionDrivenFindBehavior</a> , <a href="#">RequiredSomeipServiceInstance.versionDrivenFindBehavior</a>			
<b>Literal</b>	<b>Description</b>			
exactOrAnyMinorVersion	<p>Search for ANY or specific minor version service instance and select either ALL returned service instances (in case of ANY) or exactly the specific minor version service instances defined in required MinorVersion.</p> <p><b>Tags:</b>atp.EnumerationLiteralIndex=0</p>			





<b>Enumeration</b>	<b>ServiceVersionAcceptanceKindEnum</b>
minimumMinorVersion	Search for ANY minor version service instance and select only those service instances which have an equal or greater minor version than given in requiredMinorVersion. <b>Tags:</b> atp.EnumerationLiteralIndex=1

**Table E.111: ServiceVersionAcceptanceKindEnum**

<b>Class</b>	<b>SignalPathConstraint</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::SignalPaths			
<b>Note</b>	Additional guidelines for the System Generator, which specific way a signal between two Software Components should take in the network without defining in which frame and with which timing it is transmitted.			
<b>Base</b>	ARObject			
<b>Subclasses</b>	CommonSignalPath, ForbiddenSignalPath, PermissibleSignalPath, SeparateSignalPath			
<b>Aggregated by</b>	SystemMapping.signalPathConstraint			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
introduction	DocumentationBlock	1	aggr	This represents introductory documentation about the signal path constraint.

**Table E.112: SignalPathConstraint**

<b>Class</b>	<b>SoAdRoutingGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ObsoleteModel			
<b>Note</b>	Routing of Pdus in the SoAd can be activated or deactivated. The ShortName of this element shall contain the RoutingGroupId. <b>Tags:</b> atp.Status=obsolete atp.recommendedPackage=SoAdRoutingGroups			
<b>Base</b>	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
<b>Aggregated by</b>	ARPackage.element			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
eventGroupControlType	EventGroupControlTypeEnum	0..1	attr	This attribute defines the type of a RoutingGroup. There are RoutingGroups that activate the data path for unicast or multicast events of an event group. And there are RoutingGroups that activate the data path for initial events that are triggered, namely events that are sent out on the server side after a client got subscribed.  Please note that this attribute is only valid for event communication (Sender Receiver communication) and shall be omitted in MethodActivationRoutingGroups.

**Table E.113: SoAdRoutingGroup**

<b>Class</b>	<b>SocketConnection</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ObsoleteModel			
<b>Note</b>	The SoAd serves as a (De)Multiplexer between different PDU sources and the TCP/IP stack. <b>Tags:</b> atp.Status=obsolete			
<b>Base</b>	ARObject, Describable			
<b>Aggregated by</b>	SoAdConfig.connection, SocketConnectionBundle.bundledConnection			





<b>Class</b>		<b>SocketConnection</b>		
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
clientIpAddr From Connection Request	Boolean	0..1	attr	If set to true the Server "learns" the client IP address on connection request. This means that the statically configured IP Address of the related client shall be ignored. If set to false the Server only accepts statically configured IP address, e.g. 192.168.1.2. This means that the statically configured IP Address of the Client shall be used.
clientPort	<a href="#">SocketAddress</a>	0..1	ref	Client Port for TCP/UDP connection in an abstract communication sense. The client is the major requester of the communication. Please note that the client may also produce data. <b>Tags:</b> atp.Status=obsolete
clientPortFrom Connection Request	Boolean	0..1	attr	If set to true the Server "learns" the client Port on connection request. This means that the statically configured Port of the related client shall be ignored. If set to false the Server only accepts statically configured Port. This means that the statically configured Port of the Client shall be used.
pdu	SocketConnectionIpdu Identifier	*	aggr	PDUs handed over by the PDU Router (Transmission over the Ethernet) or PDUs handed over by SoAd (Reception over Ethernet). Multiple IPdus can be transmitted over one socket connection. <b>Tags:</b> atp.Status=obsolete
pduCollection MaxBufferSize	PositiveInteger	0..1	attr	Defines the maximum buffer size in Byte which shall be filled before a socket with Pdu collection enabled shall be transmitted to the lower layer.
pduCollection Timeout	TimeValue	0..1	attr	Defines the time in seconds which shall pass before a socket with Pdu collection enabled shall be transmitted to the lower layer after the first Pdu has been put into the socket buffer.
runtimeIp Address Configuration	RuntimeAddress ConfigurationEnum	0..1	attr	This attribute determines which protocol is used by the client to obtain the IP Address information. If this attribute is not set to none the value determines the service used by the client to obtain the IP Address information for the SocketConnection. If this attribute is set to none the client used the statically configured IP Address information.
runtimePort Configuration	RuntimeAddress ConfigurationEnum	0..1	attr	This attribute determines which protocol is used by the client to obtain the Port information. If this attribute is not set to none the value determines the service used by the client to obtain the Port information for the Socket Connection. If this attribute is set to none the client uses the statically configured Port information.
shortLabel	Identifier	0..1	attr	This attribute specifies an identifying shortName for the SocketConnection. It shall be unique within its context.

**Table E.114: SocketConnection**

<b>Class</b>	<b>SomeipSdClientServiceInstanceConfig</b>
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances
<b>Note</b>	Client specific settings that are relevant for the configuration of SOME/IP Service-Discovery. <b>Tags:</b> atp.recommendedPackage=SomeipSdTimingConfigs
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>







<b>Class</b>		<b>SomeipSdClientServiceInstanceConfig</b>		
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
initialFindBehavior	<a href="#">InitialSdDelayConfig</a>	0..1	aggr	Controls initial find behavior of clients.
priority	PositiveInteger	0..1	attr	This attribute defines the VLAN frame priority for Service Discovery messages that result from RequiredSomeipServiceInstances that are referncing this SomeipSdClientServiceInstanceConfig (Find, SubscribeEventGroup, StopSubscribeEventgroup). Values from 0 (best effort) to 7 (highest) are allowed.
serviceFindTimeToLive	PositiveInteger	0..1	attr	This attribute represents the ability to define the time in seconds the service find is valid. Note! The TTL value for FindService entries is not used and shall be ignored by the server service. This configuration is only kept for backward compatibility. Default value if not specified shall be 0xFFFFF.

**Table E.115: SomeipSdClientServiceInstanceConfig**

<b>Class</b>		<b>SomeipServiceVersion</b>		
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	This meta-class represents the ability to describe a version of a SOME/IP Service.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">ConsumedServiceInstance.blocklistedVersion</a> , <a href="#">RequiredSomeipServiceInstance.blocklistedVersion</a> , <a href="#">SomeipServiceInterfaceDeployment.serviceInterfaceVersion</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
majorVersion	PositiveInteger	0..1	attr	Major Version of the ServiceInterface. <b>Tags:</b> xml.sequenceOffset=10
minorVersion	PositiveInteger	1	attr	Minor Version of the ServiceInterface. <b>Tags:</b> xml.sequenceOffset=20

**Table E.116: SomeipServiceVersion**

<b>Class</b>		<b>StackUsage</b> (abstract)		
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ResourceConsumption::StackUsage			
<b>Note</b>	Describes the stack memory usage of a software.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">MeasuredStackUsage</a> , <a href="#">RoughEstimateStackUsage</a> , <a href="#">WorstCaseStackUsage</a>			
<b>Aggregated by</b>	<a href="#">ResourceConsumption.stackUsage</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
executableEntity	<a href="#">ExecutableEntity</a>	0..1	ref	The executable entity for which this stack usage is described.
hardwareConfiguration	HardwareConfiguration	0..1	aggr	Contains information about the hardware context this stack usage is describing.
hwElement	<a href="#">HwElement</a>	0..1	ref	Specifies for which hardware element (e.g. ECU) this stack usage is given.
softwareContext	SoftwareContext	0..1	aggr	Contains details about the software context this stack usage is provided for.

**Table E.117: StackUsage**



<b>Primitive</b>	<b>String</b>
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes
<b>Note</b>	<p>This represents a String in which white-space shall be normalized before processing. For example: in order to compare two Strings:</p> <ul style="list-style-type: none"> <li>• leading and trailing white-space needs to be removed</li> <li>• consecutive white-space (blank, cr, lf, tab) needs to be replaced by one blank.</li> </ul> <p><b>Tags:</b> xml.xsd.customType=STRING xml.xsd.type=string</p>

**Table E.118: String**

<b>Class</b>	<b>SwBaseType</b>			
<b>Package</b>	M2::MSR::AsamHdo::BaseTypes			
<b>Note</b>	<p>This meta-class represents a base type used within ECU software.</p> <p><b>Tags:</b>atp.recommendedPackage=BaseTypes</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">BaseType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.119: SwBaseType**

<b>Class</b>	<b>SwComponentType</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	Base class for AUTOSAR software components.			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">AtomicSwComponentType</a> , <a href="#">CompositionSwComponentType</a> , <a href="#">ParameterSwComponentType</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
consistency Needs	ConsistencyNeeds	*	aggr	<p>This represents the collection of ConsistencyNeeds owned by the enclosing SwComponentType.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=consistencyNeeds.shortName, consistencyNeeds.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
port	<a href="#">PortPrototype</a>	*	aggr	<p>The PortPrototypes through which this SwComponent Type can communicate.</p> <p>The aggregation of PortPrototype is subject to variability with the purpose to support the conditional existence of PortPrototypes.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=port.shortName, port.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>





Class	SwComponentType (abstract)			
portGroup	<a href="#">PortGroup</a>	*	aggr	A port group being part of this component. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=portGroup.shortName, portGroup.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
swcMapping Constraint	SwComponentMapping Constraints	*	ref	Reference to constraints that are valid for this Sw ComponentType.
swComponent Documentation	SwComponent Documentation	0..1	aggr	This adds a documentation to the SwComponentType. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=swComponentDocumentation, swComponentDocumentation.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=-10
unitGroup	UnitGroup	*	ref	This allows for the specification of which UnitGroups are relevant in the context of referencing SwComponentType.

**Table E.120: SwComponentType**

Class	SwConnector (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Composition			
<b>Note</b>	The base class for connectors between ports. Connectors have to be identifiable to allow references from the system constraint template.			
<b>Base</b>	<i>ARObject</i> , <i>AtpClassifier</i> , <i>AtpFeature</i> , <i>AtpStructureElement</i> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Subclasses</b>	<a href="#">AssemblySwConnector</a> , <a href="#">DelegationSwConnector</a> , <a href="#">PassThroughSwConnector</a>			
<b>Aggregated by</b>	<i>AtpClassifier.atpFeature</i> , <a href="#">CompositionSwComponentType.connector</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
mapping	<a href="#">PortInterfaceMapping</a>	0..1	ref	Reference to a PortInterfaceMapping specifying the mapping of unequal named PortInterface elements of the two different PortInterfaces typing the two PortPrototypes which are referenced by the ConnectorPrototype.

**Table E.121: SwConnector**

<b>Class</b>	<<atpVariation>> <b>SwDataDefProps</b>			
<b>Package</b>	M2::MSR::DataDictionary::DataDefProperties			
<b>Note</b>	<p>This class is a collection of properties relevant for data objects under various aspects. One could consider this class as a "pattern of inheritance by aggregation". The properties can be applied to all objects of all classes in which SwDataDefProps is aggregated.</p> <p>Note that not all of the attributes or associated elements are useful all of the time. Hence, the process definition (e.g. expressed with an OCL or a Document Control Instance MSR-DCI) has the task of implementing limitations.</p> <p>SwDataDefProps covers various aspects:</p> <ul style="list-style-type: none"> <li>• Structure of the data element for calibration use cases: is it a single value, a curve, or a map, but also the recordLayouts which specify how such elements are mapped/converted to the Data Types in the programming language (or in AUTOSAR). This is mainly expressed by properties like swRecordLayout and swCalprmAxisSet</li> <li>• Implementation aspects, mainly expressed by swImplPolicy, swVariableAccessImplPolicy, swAddrMethod, swPointerTargetProps, baseType, implementationDataType and additionalNativeTypeQualifier</li> <li>• Access policy for the MCD system, mainly expressed by swCalibrationAccess</li> <li>• Semantics of the data element, mainly expressed by compuMethod and/or unit, dataConstr, invalidValue</li> <li>• Code generation policy provided by swRecordLayout</li> </ul> <p><b>Tags:</b>vh.latestBindingTime=codeGenerationTime</p>			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">AutosarDataType.swDataDefProps</a> , CompositeNetworkRepresentation.networkRepresentation, <a href="#">DataPrototype.swDataDefProps</a> , <a href="#">DataPrototypeTransformationProps.networkRepresentationProps</a> , DiagnosticDataElement.swDataDefProps, DiagnosticEnvDataElementCondition.swDataDefProps, DltArgument.networkRepresentation, <a href="#">FlatInstanceDescriptor.swDataDefProps</a> , <a href="#">ImplementationDataTypeElement.swDataDefProps</a> , InstantiationDataDefProps.swDataDefProps, <a href="#">ISignal.networkRepresentationProps</a> , McDataInstance.resultingProperties, ParameterAccess.swDataDefProps, PerInstanceMemory.swDataDefProps, <a href="#">ReceiverComSpec.networkRepresentation</a> , <a href="#">SenderComSpec.networkRepresentation</a> , SomeipDataPrototypeTransformationProps.networkRepresentation, SwPointerTargetProps.swDataDefProps, SwServiceArg.swDataDefProps, <a href="#">SwSystemconst.swDataDefProps</a> , <a href="#">SystemSignal.physicalProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
additionalNativeTypeQualifier	NativeDeclarationString	0..1	attr	<p>This attribute is used to declare native qualifiers of the programming language which can neither be deduced from the baseType (e.g. because the data object describes a pointer) nor from other more abstract attributes. Examples are qualifiers like "volatile", "strict" or "enum" of the C-language. All such declarations have to be put into one string.</p> <p><b>Tags:</b>xml.sequenceOffset=235</p>
annotation	Annotation	*	aggr	<p>This aggregation allows to add annotations (yellow pads ...) related to the current data object.</p> <p><b>Tags:</b> xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false</p>
baseType	<a href="#">SwBaseType</a>	0..1	ref	<p>Base type associated with the containing data object.</p> <p><b>Tags:</b>xml.sequenceOffset=50</p>
compuMethod	<a href="#">CompuMethod</a>	0..1	ref	<p>Computation method associated with the semantics of this data object.</p> <p><b>Tags:</b>xml.sequenceOffset=180</p>
dataConstr	DataConstr	0..1	ref	<p>Data constraint for this data object.</p> <p><b>Tags:</b>xml.sequenceOffset=190</p>





Class	<<atpVariation>> SwDataDefProps			
displayFormat	DisplayFormatString	0..1	attr	This property describes how a number is to be rendered e.g. in documents or in a measurement and calibration system. <b>Tags:</b> xml.sequenceOffset=210
displayPresentation	DisplayPresentationEnum	0..1	attr	This attribute controls the presentation of the related data for measurement and calibration tools.
implementationDataType	AbstractImplementationDataType	0..1	ref	This association denotes the ImplementationDataType of a data declaration via its aggregated SwDataDefProps. It is used whenever a data declaration is not directly referring to a base type. Especially <ul style="list-style-type: none"> <li>• redefinition of an ImplementationDataType via a "typedef" to another ImplementationDatatype</li> <li>• the target type of a pointer (see SwPointerTarget Props), if it does not refer to a base type directly</li> <li>• the data type of an array or record element within an ImplementationDataType, if it does not refer to a base type directly</li> <li>• the data type of an SwServiceArg, if it does not refer to a base type directly</li> </ul> <b>Tags:</b> xml.sequenceOffset=215
invalidValue	<a href="#">ValueSpecification</a>	0..1	aggr	Optional value to express invalidity of the actual data element. <b>Tags:</b> xml.sequenceOffset=255
stepSize	Float	0..1	attr	This attribute can be used to define a value which is added to or subtracted from the value of a DataPrototype when using up/down keys while calibrating.
swAddrMethod	SwAddrMethod	0..1	ref	Addressing method related to this data object. Via an association to the same SwAddrMethod it can be specified that several DataPrototypes shall be located in the same memory without already specifying the memory section itself. <b>Tags:</b> xml.sequenceOffset=30
swAlignment	AlignmentType	0..1	attr	The attribute describes the intended typical alignment of the DataPrototype. If the attribute is not defined the alignment is determined by the swBaseType size and the memoryAllocationKeywordPolicy of the referenced Sw AddrMethod. <b>Tags:</b> xml.sequenceOffset=33
swBitRepresentation	SwBitRepresentation	0..1	aggr	Description of the binary representation in case of a bit variable. <b>Tags:</b> xml.sequenceOffset=60
swCalibrationAccess	SwCalibrationAccessEnum	0..1	attr	Specifies the read or write access by MCD tools for this data object. <b>Tags:</b> xml.sequenceOffset=70
swCalprmAxisSet	SwCalprmAxisSet	0..1	aggr	This specifies the properties of the axes in case of a curve or map etc. This is mainly applicable to calibration parameters. <b>Tags:</b> xml.sequenceOffset=90
swComparisonVariable	SwVariableRefProxy	*	aggr	Variables used for comparison in an MCD process. <b>Tags:</b> xml.sequenceOffset=170 xml.typeElement=false





<b>Class</b>	<b>&lt;&lt;atpVariation&gt;&gt; SwDataDefProps</b>			
swData Dependency	SwDataDependency	0..1	aggr	Describes how the value of the data object has to be calculated from the value of another data object (by the MCD system). <b>Tags:</b> xml.sequenceOffset=200
swHostVariable	SwVariableRefProxy	0..1	aggr	Contains a reference to a variable which serves as a host-variable for a bit variable. Only applicable to bit objects. <b>Tags:</b> xml.sequenceOffset=220 xml.typeElement=false
swImplPolicy	<a href="#">SwImplPolicyEnum</a>	0..1	attr	Implementation policy for this data object. <b>Tags:</b> xml.sequenceOffset=230
swIntended Resolution	Numerical	0..1	attr	The purpose of this element is to describe the requested quantization of data objects early on in the design process.  The resolution ultimately occurs via the conversion formula present (compuMethod), which specifies the transition from the physical world to the standardized world (and vice-versa) (here, "the slope per bit" is present implicitly in the conversion formula).  In the case of a development phase without a fixed conversion formula, a pre-specification can occur through swIntendedResolution.  The resolution is specified in the physical domain according to the property "unit". <b>Tags:</b> xml.sequenceOffset=240
swInterpolation Method	Identifier	0..1	attr	This is a keyword identifying the mathematical method to be applied for interpolation. The keyword needs to be related to the interpolation routine which needs to be invoked. <b>Tags:</b> xml.sequenceOffset=250
swIsVirtual	Boolean	0..1	attr	This element distinguishes virtual objects. Virtual objects do not appear in the memory, their derivation is much more dependent on other objects and hence they shall have a swDataDependency . <b>Tags:</b> xml.sequenceOffset=260
swPointerTarget Props	SwPointerTargetProps	0..1	aggr	Specifies that the containing data object is a pointer to another data object. <b>Tags:</b> xml.sequenceOffset=280
swRecord Layout	<a href="#">SwRecordLayout</a>	0..1	ref	Record layout for this data object. <b>Tags:</b> xml.sequenceOffset=290
swRefresh Timing	MultidimensionalTime	0..1	aggr	This element specifies the frequency in which the object involved shall be or is called or calculated. This timing can be collected from the task in which write access processes to the variable run. But this cannot be done by the MCD system.  So this attribute can be used in an early phase to express the desired refresh timing and later on to specify the real refresh timing. <b>Tags:</b> xml.sequenceOffset=300
swTextProps	SwTextProps	0..1	aggr	the specific properties if the data object is a text object. <b>Tags:</b> xml.sequenceOffset=120





Class	<<atpVariation>> SwDataDefProps			
swValueBlock Size	Numerical	0..1	attr	This represents the size of a Value Block <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime xml.sequenceOffset=80
swValueBlock SizeMult (ordered)	Numerical	*	attr	This attribute is used to specify the dimensions of a value block (VAL_BLK) for the case that that value block has more than one dimension.  The dimensions given in this attribute are ordered such that the first entry represents the first dimension, the second entry represents the second dimension, and so on.  For one-dimensional value blocks the attribute swValueBlockSize shall be used and this attribute shall not exist. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime
unit	Unit	0..1	ref	Physical unit associated with the semantics of this data object. This attribute applies if no compuMethod is specified. If both units (this as well as via compuMethod) are specified the units shall be compatible. <b>Tags:</b> xml.sequenceOffset=350
valueAxisDataType	<a href="#">ApplicationPrimitive DataType</a>	0..1	ref	The referenced ApplicationPrimitiveDataType represents the primitive data type of the value axis within a compound primitive (e.g. curve, map). It supersedes CompuMethod, Unit, and BaseType. <b>Tags:</b> xml.sequenceOffset=355

**Table E.122: SwDataDefProps**

Enumeration	SwImplPolicyEnum
<b>Package</b>	M2::MSR::DataDictionary::DataDefProperties
<b>Note</b>	Specifies the implementation strategy with respect to consistency mechanisms of variables.
<b>Aggregated by</b>	BswInternalTriggeringPoint.swImplPolicy, InternalTriggeringPoint.swImplPolicy, <a href="#">SwDataDefProps.swImplPolicy</a> , <a href="#">Trigger.swImplPolicy</a>
<b>Literal</b>	<b>Description</b>
const	forced implementation such that the running software within the ECU shall not modify it. For example implemented with the "const" modifier in C. This can be applied for parameters (not for those in NVRAM) as well as argument data prototypes. <b>Tags:</b> atp.EnumerationLiteralIndex=0
fixed	This data element is fixed. In particular this indicates, that it might also be implemented e.g. as in place data, (#DEFINE). <b>Tags:</b> atp.EnumerationLiteralIndex=1
measurementPoint	The data element is created for measurement purposes only. The data element is never read directly within the ECU software. In contrast to a "standard" data element in an unconnected provide port is, this unconnection is guaranteed for measurementPoint data elements. <b>Tags:</b> atp.EnumerationLiteralIndex=2
queued	The content of the data element is queued and the data element has 'event' semantics, i.e. data elements are stored in a queue and all data elements are processed in 'first in first out' order. The queuing is intended to be implemented by RTE Generator. This value is not applicable for parameters. <b>Tags:</b> atp.EnumerationLiteralIndex=3





<b>Enumeration</b>	<b>SwImplPolicyEnum</b>
standard	This is applicable for all kinds of data elements. For variable data prototypes the 'last is best' semantics applies. For parameter there is no specific implementation directive. <b>Tags:</b> atp.EnumerationLiteralIndex=4

**Table E.123: SwImplPolicyEnum**

<b>Class</b>	<b>SwRecordLayout</b>			
<b>Package</b>	M2::MSR::DataDictionary::RecordLayout			
<b>Note</b>	Defines how the data objects (variables, calibration parameters etc.) are to be stored in the ECU memory. As an example, this definition specifies the sequence of axis points in the ECU memory. Iterations through axis values are stored within the sub-elements swRecordLayoutGroup. <b>Tags:</b> atp.recommendedPackage=SwRecordLayouts			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
swRecordLayoutGroup	<a href="#">SwRecordLayoutGroup</a>	0..1	aggr	This is the top level record layout group. <b>Tags:</b> xml.roleElement=true xml.roleWrapperElement=false xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false

**Table E.124: SwRecordLayout**

<b>Class</b>	<b>SwRecordLayoutGroup</b>			
<b>Package</b>	M2::MSR::DataDictionary::RecordLayout			
<b>Note</b>	Specifies how a record layout is set up. Using SwRecordLayoutGroup it recursively models iterations through axis values. The subelement swRecordLayoutGroupContent may reference other SwRecordLayouts, SwRecordLayoutVs and SwRecordLayoutGroups for the modeled record layout.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">SwRecordLayout.swRecordLayoutGroup</a> , <a href="#">SwRecordLayoutGroupContent.swRecordLayoutGroup</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
category	AsamRecordLayoutSemantics	0..1	attr	This attribute denotes the semantics in particular in terms of the corresponding A2L-Keyword. This is to support the mapping of the more general record layouts in AUTOSAR/MSR to the specific A2I keywords.  It is possible to express the specific semantics of A2I recordlayout keywords in swRecordlayoutGroup but not always vice versa. Therefore the mapping is provided in this optional attribute. <b>Tags:</b> xml.sequenceOffset=5
desc	MultiLanguageOverviewParagraph	0..1	aggr	This aggregation allows a brief description about the particular record layout group which can help to identify the entry. In-depth documentation should be added to the introduction of the surrounding record layout. <b>Tags:</b> xml.sequenceOffset=20





Class	SwRecordLayoutGroup			
shortLabel	Identifier	0..1	attr	This attribute specifies a name which can be used e.g. when ECU code is generated from the record layout group. <b>Tags:</b> xml.sequenceOffset=3
swGenericAxisParamType	SwGenericAxisParamType	0..1	ref	This association allows to specify record layout groups to iterate over generic axis parameters. For example, if the generic axis parameter is an array, the record layout group will iterate over this array. Obviously, the axis referred to by swRecordLayoutGroup Axis shall be a generic axis in which the referenced SwGenericAxisType is aggregated. <b>Tags:</b> xml.sequenceOffset=50
swRecordLayoutComponent	Identifier	0..1	attr	This attribute is used to denote the component to which the group in question applies. Thus, the record layout supports structured objects. This secures independence from the sequence of components, because they can be referred to via name. <b>Tags:</b> xml.sequenceOffset=90
swRecordLayoutGroupAxis	AxisIndexType	0..1	attr	This attribute specifies the iteration axis number for a SwRecordLayoutGroup. The current record layout group then refers exactly to the axis with this number. This means that the values are taken by iterating along the thus referenced axis. <b>Tags:</b> xml.sequenceOffset=30
swRecordLayoutGroupContentType	SwRecordLayoutGroupContent	0..1	aggr	This is the contents of the recordLayout which is produced for every step of iteration. <b>Tags:</b> xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=100 xml.typeElement=false xml.typeWrapperElement=false
swRecordLayoutGroupFrom	RecordLayoutIteratorPoint	0..1	attr	This attribute specifies the iterator index for the point in the axis from which a record layout group is commenced. Negative values are also possible, i.e. the value -4 counts from the fourth value from the end. If this property is missing, the iteration starts with '1'. <b>Tags:</b> xml.sequenceOffset=60
swRecordLayoutGroupIndex	NameToken	0..1	attr	This attribute attributes a symbolic name to the iterator of the superimposed record layout group. This can be referenced as a loop index in contained SwRecordLayout V elements. <b>Tags:</b> xml.sequenceOffset=40
swRecordLayoutGroupStep	Integer	0..1	attr	This attribute specifies the step width for the iterator index that is used for the current record layout group. Note that negative values are also possible, in case of the starting point is higher than the endpoint. If the property is missing, the step width is "1". <b>Tags:</b> xml.sequenceOffset=80







Class	SwRecordLayoutGroup			
swRecordLayoutGroupTo	RecordLayoutIteratorPoint	0..1	attr	<p>This attribute specifies the end point for the iteration. Negative values are also possible, i.e. the value -4 counts up to the fourth value from the end. If this property is not there, the iteration ends at "-1" which is the last element.</p> <p>Note that depending on the arraySizeSemantics of SwTextProps the iteration ends at the value specified in swMaxTextSize.</p> <p><b>Tags:</b>xml.sequenceOffset=70</p>

**Table E.125: SwRecordLayoutGroup**

Class	SwSystemconst			
<b>Package</b>	M2::MSR::DataDictionary::SystemConstant			
<b>Note</b>	<p>This element defines a system constant which serves an input to select a particular variation point. In particular a system constant serves as an operand of the binding function (swSysconst) in a Variation point.</p> <p>Note that the binding process can only happen if a value was assigned to to the referenced system constants.</p> <p><b>Tags:</b>atp.recommendedPackage=SwSystemconst</p>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpDefinition</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
Attribute	Type	Mult.	Kind	Note
swDataDefProps	<a href="#">SwDataDefProps</a>	0..1	aggr	<p>This denotes the data definition properties of the system constant. This supports to express the limits and optionally a conversion within the internal to physical values by a compu method.</p> <p><b>Stereotypes:</b> atpSplitable</p> <p><b>Tags:</b> atp.Splitkey=swDataDefProps xml.sequenceOffset=40</p>

**Table E.126: SwSystemconst**

Class	SwSystemconstValue			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::VariantHandling			
<b>Note</b>	This meta-class assigns a particular value to a system constant.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Aggregated by</b>	<a href="#">SwSystemconstantValueSet.swSystemconstantValue</a>			
Attribute	Type	Mult.	Kind	Note
annotation	Annotation	*	aggr	<p>This provides the ability to add information why the value is set like it is.</p> <p><b>Tags:</b>xml.sequenceOffset=30</p>
swSystemconst	<a href="#">SwSystemconst</a>	1	ref	<p>This is the system constant to which the value applies.</p> <p><b>Tags:</b>xml.sequenceOffset=10</p>





Class		SwSystemconstValue		
value	Numerical	1	attr	<p>This is the particular value of a system constant. It is specified as Numerical. Further restrictions may apply by the definition of the system constant.</p> <p>The value attribute defines the internal value of the Sw Systemconst as it is processed in the Formula Language.</p> <p><b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime xml.sequenceOffset=20</p>

**Table E.127: SwSystemconstValue**

Class		SwSystemconstantValueSet		
<b>Package</b>		M2::AUTOSARTemplates::GenericStructure::VariantHandling		
<b>Note</b>		<p>This meta-class represents the ability to specify a set of system constant values.</p> <p><b>Tags:</b>atp.recommendedPackage=SwSystemconstantValueSets</p>		
<b>Base</b>		<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>		
<b>Aggregated by</b>		<a href="#">ARPackage.element</a>		
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
sw Systemconstant Value	<a href="#">SwSystemconstValue</a>	*	aggr	This is one particular value of a system constant.

**Table E.128: SwSystemconstantValueSet**

Class		SwcImplementation		
<b>Package</b>		M2::AUTOSARTemplates::SWComponentTemplate::SwcImplementation		
<b>Note</b>		<p>This meta-class represents a specialization of the general Implementation meta-class with respect to the usage in application software.</p> <p><b>Tags:</b>atp.recommendedPackage=SwcImplementations</p>		
<b>Base</b>		<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">Implementation</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>		
<b>Aggregated by</b>		<a href="#">ARPackage.element</a>		
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
behavior	<a href="#">SwcInternalBehavior</a>	0..1	ref	The internal behavior implemented by this Implementation.
perInstance MemorySize	PerInstanceMemory Size	*	aggr	<p>Allows a definition of the size of the per-instance memory for this implementation. The aggregation of PerInstance MemorySize is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects, in this case PerInstanceMemory.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=perInstanceMemorySize, perInstance MemorySize.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>





Class	SwcImplementation			
required RTEVendor	<a href="#">String</a>	0..1	attr	Identify a specific RTE vendor. This information is potentially important at the time of integrating (in particular: linking) the application code with the RTE. The semantics is that (if the association exists) the corresponding code has been created to fit to the vendor-mode RTE provided by this specific vendor. Attempting to integrate the code with another RTE generated in vendor mode is in general not possible.

**Table E.129: SwcImplementation**

Class	SwcInternalBehavior			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior			
<b>Note</b>	The SwcInternalBehavior of an AtomicSwComponentType describes the relevant aspects of the software-component with respect to the RTE, i.e. the RunnableEntities and the RTEEvents they respond to.			
<b>Base</b>	<i>ARObject, AtpClassifier, AtpFeature, AtpStructureElement, <a href="#">Identifiable</a>, <a href="#">InternalBehavior</a>, <a href="#">Multilanguage Referrable</a>, <a href="#">Referrable</a></i>			
<b>Aggregated by</b>	<i><a href="#">AtomicSwComponentType.internalBehavior</a>, <a href="#">AtpClassifier.atpFeature</a></i>			
Attribute	Type	Mult.	Kind	Note
arTypedPer Instance Memory	<a href="#">VariableDataPrototype</a>	*	aggr	<p>Defines an AUTOSAR typed memory-block that needs to be available for each instance of the SW-component.</p> <p>This is typically only useful if supportsMultipleInstantiation is set to "true" or if the component defines NVRAM access via permanent blocks.</p> <p>The aggregation of arTypedPerInstanceMemory is subject to variability with the purpose to support variability in the software component's implementations. Typically different algorithms in the implementation are requiring different number of memory objects.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=arTypedPerInstanceMemory.shortName, arTypedPerInstanceMemory.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
event	<a href="#">RTEEvent</a>	*	aggr	<p>This is a RTEEvent specified for the particular Swc InternalBehavior.</p> <p>The aggregation of RTEEvent is subject to variability with the purpose to support the conditional existence of RTE events. Note: the number of RTE events might vary due to the conditional existence of PortPrototypes using Data ReceivedEvents or due to different scheduling needs of algorithms.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=event.shortName, event.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>





Class	SwcInternalBehavior			
exclusiveArea Policy	SwcExclusiveArea Policy	*	aggr	Options how to generate the ExclusiveArea related APIs. When no SwcExclusiveAreaPolicy is specified for an ExclusiveArea the default values apply. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=exclusiveAreaPolicy, exclusiveArea Policy.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
explicitInter Runnable Variable	<a href="#">VariableDataPrototype</a>	*	aggr	Implement state message semantics for establishing communication among runnables of the same component. The aggregation of explicitInterRunnable Variable is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=explicitInterRunnableVariable.shortName, explicitInterRunnableVariable.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
handle TerminationAnd Restart	HandleTerminationAnd RestartEnum	0..1	attr	This attribute controls the behavior with respect to stopping and restarting. The corresponding AtomicSw ComponentType may either not support stop and restart, or support only stop, or support both stop and restart.
implicitInter Runnable Variable	<a href="#">VariableDataPrototype</a>	*	aggr	Implement state message semantics for establishing communication among runnables of the same component. The aggregation of implicitInterRunnable Variable is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects. <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=implicitInterRunnableVariable.shortName, implicitInterRunnableVariable.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
includedData TypeSet	IncludedDataTypeSet	*	aggr	The includedDataTypeSet is used by a software component for its implementation. <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=includedDataTypeSet
includedMode Declaration GroupSet	IncludedMode DeclarationGroupSet	*	aggr	This aggregation represents the included Mode DeclarationGroups <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=includedModeDeclarationGroupSet
instantiation DataDefProps	InstantiationDataDef Props	*	aggr	The purpose of this is that within the context of a given SwComponentType some data def properties of individual instantiations can be modified. The aggregation of InstantiationDataDefProps is subject to variability with the purpose to support the conditional existence of Port Prototypes and component local memories like "per InstanceParameter" or "arTypedPerInstanceMemory". <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=instantiationDataDefProps, instantiationData DefProps.variationPoint.shortLabel vh.latestBindingTime=preCompileTime





Class	SwcInternalBehavior			
perInstanceMemory	PerInstanceMemory	*	aggr	<p>Defines a per-instance memory object needed by this software component. The aggregation of PerInstanceMemory is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=perInstanceMemory.shortName, perInstanceMemory.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime</p>
perInstanceParameter	<a href="#">ParameterData Prototype</a>	*	aggr	<p>Defines parameter(s) or characteristic value(s) that needs to be available for each instance of the software-component. This is typically only useful if supportsMultipleInstantiation is set to "true". The aggregation of perInstanceParameter is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=perInstanceParameter.shortName, perInstanceParameter.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime</p>
portAPIOption	<a href="#">PortAPIOption</a>	*	aggr	<p>Options for generating the signature of port-related calls from a runnable to the RTE and vice versa. The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=portAPIOption, portAPIOption.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime</p>
runnable	<a href="#">RunnableEntity</a>	*	aggr	<p>This is a RunnableEntity specified for the particular Swc InternalBehavior.</p> <p>The aggregation of RunnableEntity is subject to variability with the purpose to support the conditional existence of RunnableEntities. Note: the number of RunnableEntities might vary due to the conditional existence of Port Prototypes using DataReceivedEvents or due to different scheduling needs of algorithms.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=runnable.shortName, runnable.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime</p>





Class	SwcInternalBehavior			
service Dependency	SwcService Dependency	*	aggr	<p>Defines the requirements on AUTOSAR Services for a particular item.</p> <p>The aggregation of SwcServiceDependency is subject to variability with the purpose to support the conditional existence of ports as well as the conditional existence of ServiceNeeds.</p> <p>The SwcServiceDependency owned by an SwcInternal Behavior can be located in a different physical file in order to support that SwcServiceDependency might be provided in later development steps or even by different expert domain (e.g OBD expert for Obd related Service Needs) tools. Therefore the aggregation is &lt;&lt;atp Splitable&gt;&gt;.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=serviceDependency.shortName, service Dependency.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
shared Parameter	<a href="#">ParameterData Prototype</a>	*	aggr	<p>Defines parameter(s) or characteristic value(s) shared between SwComponentPrototypes of the same Sw ComponentType The aggregation of sharedParameter is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=sharedParameter.shortName, shared Parameter.variationPoint.shortLabel vh.latestBindingTime=preCompileTime</p>
supports Multiple Instantiation	Boolean	0..1	attr	<p>Indicate whether the corresponding software-component can be multiply instantiated on one ECU. In this case the attribute will result in an appropriate component API on programming language level (with or without instance handle).</p>
variationPoint Proxy	VariationPointProxy	*	aggr	<p>Proxy of a variation points in the C/C++ implementation.</p> <p><b>Stereotypes:</b> atpSplitable <b>Tags:</b>atp.Splitkey=variationPointProxy.shortName</p>

**Table E.130: SwcInternalBehavior**

Class	SymbolProps			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	This meta-class represents the ability to attach with the symbol attribute a symbolic name that is conform to C language requirements to another meta-class, e.g. AtomicSwComponentType, that is a potential subject to a name clash on the level of RTE source code.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">ImplementationProps</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">Allocator.namespace</a> , <a href="#">ApApplicationErrorDomain.namespace</a> , <a href="#">AtomicSwComponentType.symbolProps</a> , <a href="#">CplusplusImplementationDataType.namespace</a> , <a href="#">ImplementationDataType.symbolProps</a> , <a href="#">PortInterface.namespace</a> , <a href="#">SecurityEventDefinition.eventSymbolName</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.131: SymbolProps**

<b>Class</b>	<b>SynchronousServerCallPoint</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::ServerCall			
<b>Note</b>	This means that the RunnableEntity is supposed to perform a blocking wait for a response from the server.			
<b>Base</b>	ARObject, AbstractAccessPoint, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable, ServerCallPoint			
<b>Aggregated by</b>	AtpClassifier.atpFeature, RunnableEntity.serverCallPoint			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
calledFrom WithinExclusive Area	ExclusiveAreaNesting Order	0..1	ref	This indicates that the call point is located at the deepest level inside one or more ExclusiveAreas that are nested in the given order.

**Table E.132: SynchronousServerCallPoint**

<b>Enumeration</b>	<b>TcpRoleEnum</b>			
<b>Package</b>	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances			
<b>Note</b>	This enumeration defines whether a TCP node has the tcp server role or the client role.			
<b>Aggregated by</b>	StaticSocketConnection.tcpRole			
<b>Literal</b>	<b>Description</b>			
connect	Connects the client to a remote TCP host. <b>Tags:</b> atp.EnumerationLiteralIndex=0			
listen	Socket is put into the server mode (listen for connections). <b>Tags:</b> atp.EnumerationLiteralIndex=1			

**Table E.133: TcpRoleEnum**

<b>Class</b>	<b>TextValueSpecification</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::Constants			
<b>Note</b>	The purpose of TextValueSpecification is to define the labels that correspond to enumeration values.			
<b>Base</b>	ARObject, ValueSpecification			
<b>Aggregated by</b>	ApplicationAssocMapElementValueSpecification.key, ApplicationAssocMapElementValueSpecification.value, ArrayValueSpecification.element, CalibrationParameterValue.applInitValue, CalibrationParameterValue.implInitValue, ConstantSpecification.valueSpec, CryptoServiceKey.developmentValue, DiagnosticEnvDataCondition.compareValue, DiagnosticEnvDataElementCondition.compareValue, FieldSenderComSpec.initValue, ISignal.initValue, ISignal.timeoutSubstitutionValue, MetaDataItem.metaDataItem Type, NonqueuedReceiverComSpec.initValue, NonqueuedReceiverComSpec.timeoutSubstitutionValue, NonqueuedSenderComSpec.initValue, NvProvideComSpec.ramBlockInitValue, NvProvideComSpec.romBlockInitValue, NvRequireComSpec.initValue, ParameterDataPrototype.initValue, ParameterProvideComSpec.initValue, ParameterRequireComSpec.initValue, PersistencyDataRequiredComSpec.initValue, PersistencyKeyValuePair.initValue, PortDefinedArgumentValue.value, PortPrototypeBlueprintInitValue.value, RecordValueSpecification.field, StateManagementCompareCondition.compareValue, SwDataDef Props.invalidValue, VariableDataPrototype.initValue			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
value	VerbatimString	0..1	attr	This is the value itself.  Note that vt uses the   operator to separate the values for the different bitfield masks in case that the semantics of the related DataPrototype is described by means of a BITFIELD_TEXTTABLE in the associated CompuMethod.

**Table E.134: TextValueSpecification**

<b>Class</b>	<b>TransformationComSpecProps</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Communication			
<b>Note</b>	TransformationComSpecProps holds all the attributes for transformers that are port specific.			
<b>Base</b>	ARObject, <a href="#">Describable</a>			
<b>Subclasses</b>	<a href="#">EndToEndTransformationComSpecProps</a> , UserDefinedTransformationComSpecProps			
<b>Aggregated by</b>	ClientComSpec.transformationComSpecProps, <a href="#">ReceiverComSpec.transformationComSpecProps</a> , ServerComSpec.transformationComSpecProps			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
–	–	–	–	–

**Table E.135: TransformationComSpecProps**

<b>Class</b>	<b>TransmissionComSpecProps</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Communication			
<b>Note</b>	This meta-class defines a set of transmission attributes which the application software is assumed to implement.			
<b>Base</b>	ARObject			
<b>Aggregated by</b>	<a href="#">SenderComSpec.transmissionProps</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataUpdatePeriod	TimeValue	0..1	attr	This attribute defines the period in which the application is assumed to transmit the respective data.
minimumSendInterval	TimeValue	0..1	attr	This attribute defines the minimum interval between two consecutive transmissions of the respective data the application is assumed to ensure.
transmissionMode	TransmissionModeDefinitionEnum	0..1	attr	The attribute defines the mode in which the application is assumed to transmit the respective data.

**Table E.136: TransmissionComSpecProps**

<b>Class</b>	<b>Trigger</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::TriggerDeclaration			
<b>Note</b>	A trigger which is provided (i.e. released) or required (i.e. used to activate something) in the given context.			
<b>Base</b>	ARObject, <a href="#">AtpClassifier</a> , <a href="#">AtpFeature</a> , <a href="#">AtpStructureElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a> , <a href="#">BswModuleDescription.releasedTrigger</a> , <a href="#">BswModuleDescription.requiredTrigger</a> , <a href="#">ServiceInterface.trigger</a> , <a href="#">TriggerInterface.trigger</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
swImplPolicy	<a href="#">SwImplPolicyEnum</a>	0..1	attr	This attribute, when set to value queued, allows for a queued processing of Triggers.
triggerPeriod	MultidimensionalTime	0..1	aggr	Optional definition of a period in case of a periodically (time or angle) driven external trigger.

**Table E.137: Trigger**

<b>Class</b>	<b>TriggerInterface</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	A trigger interface declares a number of triggers that can be sent by an trigger source. <b>Tags:</b> atp.recommendedPackage=PortInterfaces			







<b>Class</b>	<b>TriggerInterface</b>			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">AtpBlueprint</a> , <a href="#">AtpBlueprintable</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpType</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">PortInterface</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
trigger	<a href="#">Trigger</a>	*	aggr	The Trigger of this trigger interface.

**Table E.138: TriggerInterface**

<b>Class</b>	<b>ValueSpecification</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::Constants			
<b>Note</b>	Base class for expressions leading to a value which can be used to initialize a data object.			
<b>Base</b>	<a href="#">ARObject</a>			
<b>Subclasses</b>	<a href="#">AbstractRuleBasedValueSpecification</a> , <a href="#">ApplicationValueSpecification</a> , <a href="#">CompositeValueSpecification</a> , <a href="#">ConstantReference</a> , <a href="#">NotAvailableValueSpecification</a> , <a href="#">NumericalValueSpecification</a> , <a href="#">ReferenceValueSpecification</a> , <a href="#">TextValueSpecification</a>			
<b>Aggregated by</b>	<a href="#">ApplicationAssocMapElementValueSpecification.key</a> , <a href="#">ApplicationAssocMapElementValueSpecification.value</a> , <a href="#">ArrayValueSpecification.element</a> , <a href="#">CalibrationParameterValue.applInitValue</a> , <a href="#">CalibrationParameterValue.implInitValue</a> , <a href="#">ConstantSpecification.valueSpec</a> , <a href="#">CryptoServiceKey.developmentValue</a> , <a href="#">DiagnosticEnvDataCondition.compareValue</a> , <a href="#">DiagnosticEnvDataElementCondition.compareValue</a> , <a href="#">FieldSenderComSpec.initValue</a> , <a href="#">ISignal.initValue</a> , <a href="#">ISignal.timeoutSubstitutionValue</a> , <a href="#">NonqueuedReceiverComSpec.initValue</a> , <a href="#">NonqueuedReceiverComSpec.timeoutSubstitutionValue</a> , <a href="#">NonqueuedSenderComSpec.initValue</a> , <a href="#">NvProvideComSpec.ramBlockInitValue</a> , <a href="#">NvProvideComSpec.romBlockInitValue</a> , <a href="#">NvRequireComSpec.initValue</a> , <a href="#">ParameterDataPrototype.initValue</a> , <a href="#">ParameterProvideComSpec.initValue</a> , <a href="#">ParameterRequireComSpec.initValue</a> , <a href="#">PersistencyDataRequiredComSpec.initValue</a> , <a href="#">PersistencyKeyValuePair.initValue</a> , <a href="#">PortDefinedArgumentValue.value</a> , <a href="#">PortPrototypeBlueprintInitValue.value</a> , <a href="#">RecordValueSpecification.field</a> , <a href="#">StateManagementCompareCondition.compareValue</a> , <a href="#">SwDataDefProps.invalidValue</a> , <a href="#">VariableDataPrototype.initValue</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
shortLabel	Identifier	0..1	attr	This can be used to identify particular value specifications for human readers, for example elements of a record type.

**Table E.139: ValueSpecification**

<b>Class</b>	<b>VariableAccess</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::DataElements			
<b>Note</b>	The presence of a VariableAccess implies that a RunnableEntity needs access to a VariableData Prototype.  The kind of access is specified by the role in which the class is used.			
<b>Base</b>	<a href="#">ARObject</a> , <a href="#">AbstractAccessPoint</a> , <a href="#">AtpClassifier</a> , <a href="#">AtpFeature</a> , <a href="#">AtpStructureElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">AtpClassifier.atpFeature</a> , <a href="#">ReceiverComSpec.replaceWith</a> , <a href="#">RunnableEntity.dataReadAccess</a> , <a href="#">RunnableEntity.dataReceivePointByArgument</a> , <a href="#">RunnableEntity.dataReceivePointByValue</a> , <a href="#">RunnableEntity.dataSendPoint</a> , <a href="#">RunnableEntity.dataWriteAccess</a> , <a href="#">RunnableEntity.readLocalVariable</a> , <a href="#">RunnableEntity.writtenLocalVariable</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
accessed Variable	<a href="#">AutosarVariableRef</a>	0..1	aggr	This denotes the accessed variable.
scope	<a href="#">VariableAccessScope Enum</a>	0..1	attr	This attribute allows for constraining the scope of the corresponding communication. For example, it possible to express whether the communication is intended to cross the boundary of an ECU or whether it is intended not to cross the boundary of a single partition.

**Table E.140: VariableAccess**

<b>Class</b>	<b>VariableAndParameterInterfaceMapping</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	Defines the mapping of VariableDataPrototypes or ParameterDataPrototypes in context of two different SenderReceiverInterfaces, NvDataInterfaces or ParameterInterfaces.			
<b>Base</b>	ARObject, AtpBlueprint, AtpBlueprintable, <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PortInterfaceMapping</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	PortInterfaceMappingSet.portInterfaceMapping			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
dataMapping	<a href="#">DataPrototypeMapping</a>	*	aggr	Defines the mapping of two particular VariableData Prototypes or ParameterDataPrototypes with unequal names and/or unequal semantic (resolution or range) in context of two different SenderReceiverInterfaces, Nv DataInterfaces or ParameterInterfaces

**Table E.141: VariableAndParameterInterfaceMapping**

<b>Class</b>	<b>VariableDataPrototype</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
<b>Note</b>	A VariableDataPrototype represents a formalized generic piece of information that is typically mutable by the application software layer. VariableDataPrototype is used in various contexts and the specific context gives the otherwise generic VariableDataPrototype a dedicated semantics.			
<b>Base</b>	ARObject, AtpFeature, AtpPrototype, <a href="#">AutosarDataPrototype</a> , <a href="#">DataPrototype</a> , <a href="#">Identifiable</a> , <a href="#">Multilanguage Referrable</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	ApplicationInterface.indication, <a href="#">AtpClassifier.atpFeature</a> , <a href="#">BswInternalBehavior.arTypedPerInstance Memory</a> , <a href="#">BswModuleDescription.providedData</a> , <a href="#">BswModuleDescription.requiredData</a> , <a href="#">BulkNvData Descriptor.bulkNvBlock</a> , <a href="#">InternalBehavior.staticMemory</a> , <a href="#">NvBlockDescriptor.ramBlock</a> , <a href="#">NvDataInterface.nvData</a> , <a href="#">SenderReceiverInterface.dataElement</a> , <a href="#">ServiceInterface.event</a> , <a href="#">SwcInternalBehavior.arTypedPer InstanceMemory</a> , <a href="#">SwcInternalBehavior.explicitInterRunnableVariable</a> , <a href="#">SwcInternalBehavior.implicitInter RunnableVariable</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
initValue	<a href="#">ValueSpecification</a>	0..1	aggr	Specifies initial value(s) of the VariableDataPrototype

**Table E.142: VariableDataPrototype**

<b>Class</b>	<b>VariationPoint</b>			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::VariantHandling			
<b>Note</b>	This meta-class represents the ability to express a "structural variation point". The container of the variation point is part of the selected variant if swSyscond evaluates to true and each postBuildVariant Criterion is fulfilled.			
<b>Base</b>	ARObject			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
blueprint Condition	DocumentationBlock	0..1	aggr	This represents a description that documents how the variation point shall be resolved when deriving objects from the blueprint.  Note that variationPoints are not allowed within a blueprintCondition. <b>Tags:</b> xml.sequenceOffset=28
desc	MultiLanguageOverview Paragraph	0..1	aggr	This allows to describe shortly the purpose of the variation point. <b>Tags:</b> xml.sequenceOffset=20





Class	VariationPoint			
formalBlueprintGenerator	BlueprintGenerator	0..1	aggr	<p>This represents a description that documents how the variation point shall be resolved when deriving objects from the blueprint by using ARML.</p> <p>Note that variationPoints are not allowed within a formal BlueprintGenerator.</p> <p><b>Tags:</b> atp.Status=draft xml.sequenceOffset=30</p>
postBuildVariantCondition	PostBuildVariantCondition	*	aggr	<p>This is the set of post build variant conditions which all shall be fulfilled in order to (postbuild) bind the variation point.</p> <p><b>Tags:</b>xml.sequenceOffset=40</p>
sdg	Sdg	0..1	aggr	<p>An optional special data group is attached to every variation point. These data can be used by external software systems to attach application specific data. For example, a variant management system might add an identifier, an URL or a specific classifier.</p> <p><b>Tags:</b>xml.sequenceOffset=50</p>
shortLabel	Identifier	0..1	attr	<p>This provides a name to the particular variation point to support the RTE generator. It is necessary for supporting splittable aggregations and if binding time is later than codeGenerationTime, as well as some RTE conditions. It needs to be unique with in the enclosing Identifiables with the same ShortName.</p> <p><b>Stereotypes:</b> atpIdentityContributor <b>Tags:</b>xml.sequenceOffset=10</p>
swSyscond	<a href="#">ConditionByFormula</a>	0..1	aggr	<p>This condition acts as Binding Function for the Variation Point. Note that the multiplicity is 0..1 in order to support pure postBuild variants.</p> <p><b>Tags:</b>xml.sequenceOffset=30</p>

**Table E.143: VariationPoint**

Class	ViewMap			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::ViewMapSet			
<b>Note</b>	<p>The ViewMap allows to relate any number of elements on the "first" side to any number of elements on the "second" side. Since the ViewMap does not address a specific mapping use-case the roles "first" and "second" shall imply this generality.</p> <p>This mapping allows to trace transformations of artifacts within the AUTOSAR environment. The references to the mapped elements can be plain references and/or InstanceRefs.</p>			
<b>Base</b>	<i>ARObject</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
<b>Aggregated by</b>	<a href="#">ViewMapSet.viewMap</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
firstElement	<a href="#">Referrable</a>	*	ref	<p>Reference to identifiable elements on the first "side".</p> <p><b>Tags:</b>xml.sequenceOffset=20</p>
firstElementInstance	AtpFeature	*	iref	<p>InstanceRefs to elements on the first "side".</p> <p><b>Tags:</b>xml.sequenceOffset=50 <b>InstanceRef implemented by:</b><a href="#">AnyInstanceRef</a></p>





Class	ViewMap			
role	Identifier	0..1	attr	This attribute is used to describe specific mapping scenarios, e.g. the mappings: <ul style="list-style-type: none"> <li>AR_AbstractSystemDescription_SystemDescription</li> <li>AR_SystemDescription_SystemExtract</li> </ul> <b>Tags:</b> xml.sequenceOffset=10
secondElement	<a href="#">Referrable</a>	*	ref	Reference to identifiable elements on the second "side". <b>Tags:</b> xml.sequenceOffset=30
secondElement Instance	AtpFeature	*	iref	InstanceRefs to elements on the second "side". <b>Tags:</b> xml.sequenceOffset=60 <b>InstanceRef implemented by:</b> <a href="#">AnyInstanceRef</a>

**Table E.144: ViewMap**

Class	ViewMapSet			
<b>Package</b>	M2::AUTOSARTemplates::GenericStructure::ViewMapSet			
<b>Note</b>	Collection of ViewMaps that are used to establish relationships between different AUTOSAR artifacts. <b>Tags:</b> atp.recommendedPackage=ViewMapSets			
<b>Base</b>	<a href="#">ARElement</a> , <a href="#">ARObject</a> , <a href="#">CollectableElement</a> , <a href="#">Identifiable</a> , <a href="#">MultilanguageReferrable</a> , <a href="#">PackageableElement</a> , <a href="#">Referrable</a>			
<b>Aggregated by</b>	<a href="#">ARPackage.element</a>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
viewMap	<a href="#">ViewMap</a>	*	aggr	ViewMaps that are collected by the ViewMapSet.

**Table E.145: ViewMapSet**

## F Splitable Elements in the Scope of this Document

This chapter contains a table of all model elements stereotyped `<<atpSplitable>>` in the scope of this document.

Each entry in following table consists of the identification of the specific model element itself and the applicable value of the tagged value `atp.Splitkey`.

For more information about the concept of splitable model elements and how these shall be treated please refer to [2].

<b>Name of splitable element</b>	<b>Splitkey</b>
<a href="#">AbstractServiceInstance.capabilityRecord</a>	capabilityRecord, capabilityRecord.variationPoint.shortLabel
<a href="#">AbstractServiceInstance.methodActivationRoutingGroup</a>	methodActivationRoutingGroup.shortName, methodActivationRoutingGroup.variationPoint.shortLabel
<a href="#">AliasNameSet.aliasName</a>	aliasName.shortLabel, aliasName.variationPoint.shortLabel
<a href="#">BusMirrorChannel.channel</a>	channel.physicalChannel, channel.variationPoint.shortLabel
<a href="#">BusMirrorChannelMapping.targetPduTriggering</a>	targetPduTriggering.pduTriggering, targetPduTriggering.variationPoint.shortLabel
<a href="#">CanTpConfig.tpAddress</a>	tpAddress.shortName, tpAddress.variationPoint.shortLabel
<a href="#">CanTpConfig.tpChannel</a>	tpChannel.shortName, tpChannel.variationPoint.shortLabel
<a href="#">CanTpConfig.tpConnection</a>	tpConnection, tpConnection.variationPoint.shortLabel
<a href="#">CanTpConfig.tpEcu</a>	tpEcu, tpEcu.variationPoint.shortLabel
<a href="#">CanTpConfig.tpNode</a>	tpNode.shortName, tpNode.variationPoint.shortLabel
<a href="#">ClientIdDefinitionSet.clientIdDefinition</a>	clientIdDefinition.shortName, clientIdDefinition.variationPoint.shortLabel
<a href="#">CommunicationCluster.physicalChannel</a>	<Not applicable due to atpVariation (PropertySet Pattern)>
<a href="#">CommunicationConnector.ecuCommPortInstance</a>	ecuCommPortInstance.shortName, ecuCommPortInstance.variationPoint.shortLabel
<a href="#">ConsumedEventGroup.eventMulticastAddress</a>	eventMulticastAddress.applicationEndpoint, eventMulticastAddress.variationPoint.shortLabel
<a href="#">ConsumedEventGroup.sdClientTimerConfig</a>	sdClientTimerConfig.someipSdClientEventGroupTimingConfig, sdClientTimerConfig.variationPoint.shortLabel
<a href="#">ConsumedProvidedServiceInstanceGroup.consumedServiceInstance</a>	consumedServiceInstance.consumedServiceInstance, consumedServiceInstance.variationPoint.shortLabel
<a href="#">ConsumedProvidedServiceInstanceGroup.providedServiceInstance</a>	providedServiceInstance.providedServiceInstance, providedServiceInstance.variationPoint.shortLabel
<a href="#">ConsumedServiceInstance.consumedEventGroup</a>	consumedEventGroup.shortName, consumedEventGroup.variationPoint.shortLabel
<a href="#">ConsumedServiceInstance.eventMulticastSubscriptionAddress</a>	eventMulticastSubscriptionAddress.applicationEndpoint, eventMulticastSubscriptionAddress.variationPoint.shortLabel
<a href="#">ConsumedServiceInstance.localUnicastAddress</a>	localUnicastAddress.applicationEndpoint, localUnicastAddress.variationPoint.shortLabel





<b>Name of splitable element</b>	<b>Splitkey</b>
ConsumedServiceInstance.remoteUnicastAddress	remoteUnicastAddress.applicationEndpoint, remoteUnicastAddress.variationPoint.shortLabel
ConsumedServiceInstance.sdClientTimerConfig	sdClientTimerConfig.someipSdClientServiceInstanceConfig, sdClientTimerConfig.variationPoint.shortLabel
CouplingElement.couplingPort	couplingPort.shortName, couplingPort.variationPoint.shortLabel
CouplingPortConnection.nodePort	nodePort.couplingPort, nodePort.variationPoint.shortLabel
CpSoftwareCluster.swComponentAssignment	swComponentAssignment, swComponentAssignment.variationPoint.shortLabel
CpSoftwareCluster.swComposition	swComposition.compositionSwComponentType, swComposition.variationPoint.shortLabel
CpSoftwareClusterMappingSet.portElementToComResourceMapping	portElementToComResourceMapping.shortName, portElementToComResourceMapping.variationPoint.shortLabel
CpSoftwareClusterMappingSet.resourceToApplicationPartitionMapping	resourceToApplicationPartitionMapping.shortName, resourceToApplicationPartitionMapping.variationPoint.shortLabel
CpSoftwareClusterMappingSet.softwareClusterToResourceMapping	softwareClusterToResourceMapping.shortName, softwareClusterToResourceMapping.variationPoint.shortLabel
CpSoftwareClusterMappingSet.swcToApplicationPartitionMapping	swcToApplicationPartitionMapping.shortName, swcToApplicationPartitionMapping.variationPoint.shortLabel
CpSoftwareClusterResourcePool.ecuScope	ecuScope
CpSoftwareClusterResourcePool.resource	resource.shortName
CpSoftwareClusterToEcuInstanceMapping.swCluster	swCluster.cpSoftwareCluster, swCluster.variationPoint.shortLabel
DataPrototypeTransformationProps.networkRepresentationProps	networkRepresentationProps
DataTransformationSet.dataTransformation	dataTransformation.shortName, dataTransformation.variationPoint.shortLabel
DataTransformationSet.transformationTechnology	transformationTechnology.shortName, transformationTechnology.variationPoint.shortLabel
EcuInstance.associatedConsumedProvidedServiceInstanceGroup	associatedConsumedProvidedServiceInstanceGroup.consumedProvidedServiceInstanceGroup, associatedConsumedProvidedServiceInstanceGroup.variationPoint.shortLabel
EcuInstance.commController	commController.shortName, commController.variationPoint.shortLabel
EcuInstance.connector	connector.shortName, connector.variationPoint.shortLabel
EcuInstance.ecuTaskProxy	ecuTaskProxy
EthernetCluster.couplingPortConnection	<Not applicable due to atpVariation (PropertySet Pattern)>
EthernetPhysicalChannel.networkEndpoint	networkEndpoint.shortName
EventHandler.eventMulticastAddress	eventMulticastAddress.applicationEndpoint, eventMulticastAddress.variationPoint.shortLabel
EventHandler.sdServerEgTimingConfig	sdServerEgTimingConfig.someipSdServerEventGroupTimingConfig, sdServerEgTimingConfig.variationPoint.shortLabel
FlatInstanceDescriptor.rtePluginProps	rtePluginProps
FlatInstanceDescriptor.swDataDefProps	swDataDefProps





<b>Name of splittable element</b>	<b>Splitkey</b>
FlatMap.instance	instance.shortName, instance.variationPoint.shortLabel
FlexrayArTpConfig.tpAddress	tpAddress.shortName, tpAddress.variationPoint.shortLabel
FlexrayArTpConfig.tpChannel	tpChannel, tpChannel.variationPoint.shortLabel
FlexrayArTpConfig.tpNode	tpNode.shortName, tpNode.variationPoint.shortLabel
FlexrayTpConfig.pduPool	pduPool.shortName, pduPool.variationPoint.shortLabel
FlexrayTpConfig.tpAddress	tpAddress.shortName, tpAddress.variationPoint.shortLabel
FlexrayTpConfig.tpConnection	tpConnection, tpConnection.variationPoint.shortLabel
FlexrayTpConfig.tpConnectionControl	tpConnectionControl.shortName, tpConnectionControl.variationPoint.shortLabel
FlexrayTpConfig.tpEcu	tpEcu, tpEcu.variationPoint.shortLabel
FlexrayTpConfig.tpNode	tpNode.shortName, tpNode.variationPoint.shortLabel
Frame.pduToFrameMapping	pduToFrameMapping.shortName, pduToFrameMapping.variationPoint.shortLabel
FrameTriggering.pduTriggering	pduTriggering.pduTriggering, pduTriggering.variationPoint.shortLabel
Gateway.frameMapping	frameMapping, frameMapping.variationPoint.shortLabel
Gateway.iPduMapping	iPduMapping, iPduMapping.variationPoint.shortLabel
Gateway.signalMapping	signalMapping, signalMapping.variationPoint.shortLabel
GlobalTimeDomain.gateway	gateway.shortName, gateway.variationPoint.shortLabel
GlobalTimeDomain.globalTimeDomainProperty	globalTimeDomainProperty, globalTimeDomainProperty.variationPoint.shortLabel
GlobalTimeDomain.globalTimeMaster	globalTimeMaster.shortName, globalTimeMaster.variationPoint.shortLabel
GlobalTimeDomain.globalTimeSubDomain	globalTimeSubDomain.globalTimeDomain, globalTimeSubDomain.variationPoint.shortLabel
GlobalTimeDomain.pduTriggering	pduTriggering.pduTriggering, pduTriggering.variationPoint.shortLabel
GlobalTimeDomain.slave	slave.shortName, slave.variationPoint.shortLabel
ISignal.dataTransformation	dataTransformation.dataTransformation, dataTransformation.variationPoint.shortLabel
ISignal.iSignalProps	iSignalProps
ISignal.networkRepresentationProps	networkRepresentationProps
ISignal.transformationISignalProps	transformationISignalProps
ISignalGroup.comBasedSignalGroupTransformation	comBasedSignalGroupTransformation.dataTransformation, comBasedSignalGroupTransformation.variationPoint.shortLabel
ISignalGroup.transformationISignalProps	transformationISignalProps
ISignalIPdu.iPduTimingSpecification	iPduTimingSpecification, iPduTimingSpecification.variationPoint.shortLabel
ISignalIPdu.iSignalToPduMapping	iSignalToPduMapping.shortName, iSignalToPduMapping.variationPoint.shortLabel
ISignalIPduGroup.iSignalIPdu	iSignalIPdu.iSignalIPdu, iSignalIPdu.variationPoint.shortLabel





<b>Name of splitable element</b>	<b>Splitkey</b>
ISignalPduGroup.nmPdu	nmPdu.nmPdu, nmPdu.variationPoint.shortLabel
J1939TpConfig.tpAddress	tpAddress.shortName, tpAddress.variationPoint.shortLabel
J1939TpConfig.tpConnection	tpConnection, tpConnection.variationPoint.shortLabel
J1939TpConfig.tpNode	tpNode.shortName, tpNode.variationPoint.shortLabel
LinPhysicalChannel.scheduleTable	scheduleTable.shortName, scheduleTable.variationPoint.shortLabel
LinTpConfig.tpAddress	tpAddress.shortName, tpAddress.variationPoint.shortLabel
LinTpConfig.tpConnection	tpConnection, tpConnection.variationPoint.shortLabel
LinTpConfig.tpNode	tpNode.shortName, tpNode.variationPoint.shortLabel
McGroup.mcFunction	mcFunction
McGroup.refCalprmSet	refCalprmSet
McGroup.refMeasurementSet	refMeasurementSet
McGroup.subGroup	subGroup
McGroupDataRefSet.flatMapEntry	<Not applicable due to atpVariation (PropertySet Pattern)>
McGroupDataRefSet.mcDataInstance	<Not applicable due to atpVariation (PropertySet Pattern)>
MultiplexedIPdu.dynamicPart	dynamicPart, dynamicPart.variationPoint.shortLabel
MultiplexedIPdu.staticPart	staticPart, staticPart.variationPoint.shortLabel
NmCluster.nmNode	nmNode.shortName, nmNode.variationPoint.shortLabel
NmConfig.nmCluster	nmCluster.shortName, nmCluster.variationPoint.shortLabel
NmConfig.nmClusterCoupling	nmClusterCoupling, nmClusterCoupling.variationPoint.shortLabel
NmConfig.nmlfEcu	nmlfEcu.shortName, nmlfEcu.variationPoint.shortLabel
PdurlPduGroup.iPdu	iPdu.pduTriggering, iPdu.variationPoint.shortLabel
PduTriggering.iSignalTriggering	iSignalTriggering.iSignalTriggering, iSignalTriggering.variationPoint.shortLabel
PhysicalChannel.commConnector	commConnector.communicationConnector, commConnector.variationPoint.shortLabel
PhysicalChannel.frameTriggering	frameTriggering.shortName, frameTriggering.variationPoint.shortLabel
PhysicalChannel.iSignalTriggering	iSignalTriggering.shortName, iSignalTriggering.variationPoint.shortLabel
PhysicalChannel.pduTriggering	pduTriggering.shortName, pduTriggering.variationPoint.shortLabel
PncMapping.pncConsumedProvidedServiceInstanceGroup	pncConsumedProvidedServiceInstanceGroup.consumedProvidedServiceInstanceGroup, pncConsumedProvidedServiceInstanceGroup.variationPoint.shortLabel
ProvidedServiceInstance.eventHandler	eventHandler.shortName, eventHandler.variationPoint.shortLabel
ProvidedServiceInstance.localUnicastAddress	localUnicastAddress.applicationEndpoint, localUnicastAddress.variationPoint.shortLabel







<b>Name of splitable element</b>	<b>Splitkey</b>
ProvidedServiceInstance.remoteMulticastSubscriptionAddress	remoteMulticastSubscriptionAddress.applicationEndpoint, remoteMulticastSubscriptionAddress.variationPoint.shortLabel
ProvidedServiceInstance.remoteUnicastAddress	remoteUnicastAddress.applicationEndpoint, remoteUnicastAddress.variationPoint.shortLabel
ProvidedServiceInstance.sdServerTimerConfig	sdServerTimerConfig.someIpSdServerServiceInstanceConfig, sdServerTimerConfig.variationPoint.shortLabel
RootSwCompositionPrototype.calibrationParameterValueSet	calibrationParameterValueSet
RootSwCompositionPrototype.flatMap	flatMap
ServiceInstanceCollectionSet.serviceInstance	serviceInstance.shortName, serviceInstance.variationPoint.shortLabel
SoAdConfig.connection	connection, connection.variationPoint.shortLabel
SoAdConfig.connectionBundle	connectionBundle.shortName, connectionBundle.variationPoint.shortLabel
SoAdConfig.socketAddress	socketAddress.shortName, socketAddress.variationPoint.shortLabel
SocketAddress.staticSocketConnection	staticSocketConnection.shortName, staticSocketConnection.variationPoint.shortLabel
StaticSocketConnection.iPduIdentifier	iPduIdentifier.soConIPduIdentifier, iPduIdentifier.variationPoint.shortLabel
StaticSocketConnection.remoteAddress	remoteAddress.socketAddress, remoteAddress.variationPoint.shortLabel
System.fibexElement	fibexElement.fibexElement, fibexElement.variationPoint.shortLabel
System.j1939SharedAddressCluster	j1939SharedAddressCluster.shortName, j1939SharedAddressCluster.variationPoint.shortLabel
System.mapping	mapping.shortName, mapping.variationPoint.shortLabel
System.rootSoftwareComposition	rootSoftwareComposition.shortName, rootSoftwareComposition.variationPoint.shortLabel
System.swCluster	swCluster.cpSoftwareCluster, swCluster.variationPoint.shortLabel
System.systemDocumentation	systemDocumentation.shortName, systemDocumentation.variationPoint.shortLabel
SystemMapping.applicationPartitionToEcuPartitionMapping	applicationPartitionToEcuPartitionMapping.shortName, applicationPartitionToEcuPartitionMapping.variationPoint.shortLabel
SystemMapping.comManagementMapping	comManagementMapping.shortName, comManagementMapping.variationPoint.shortLabel
SystemMapping.cryptoServiceMapping	cryptoServiceMapping.shortName, cryptoServiceMapping.variationPoint.shortLabel
SystemMapping.dataMapping	dataMapping, dataMapping.variationPoint.shortLabel
SystemMapping.ecuResourceMapping	ecuResourceMapping.shortName, ecuResourceMapping.variationPoint.shortLabel
SystemMapping.mappingConstraint	mappingConstraint, mappingConstraint.variationPoint.shortLabel
SystemMapping.pncMapping	pncMapping, pncMapping.variationPoint.shortLabel
SystemMapping.portElementToComResourceMapping	portElementToComResourceMapping.shortName, portElementToComResourceMapping.variationPoint.shortLabel
SystemMapping.resourceEstimation	resourceEstimation, resourceEstimation.variationPoint.shortLabel





<b>Name of splitable element</b>	<b>Splitkey</b>
<a href="#">SystemMapping.resourceToApplicationPartitionMapping</a>	resourceToApplicationPartitionMapping.shortName, resourceToApplicationPartitionMapping.variationPoint.shortLabel
<a href="#">SystemMapping.signalPathConstraint</a>	signalPathConstraint, signalPathConstraint.variationPoint.shortLabel
<a href="#">SystemMapping.softwareClusterToResourceMapping</a>	softwareClusterToResourceMapping.shortName, softwareClusterToResourceMapping.variationPoint.shortLabel
<a href="#">SystemMapping.swClusterMapping</a>	swClusterMapping.shortName, swClusterMapping.variationPoint.shortLabel
<a href="#">SystemMapping.swcToApplicationPartitionMapping</a>	swcToApplicationPartitionMapping.shortName, swcToApplicationPartitionMapping.variationPoint.shortLabel
<a href="#">SystemMapping.swImplMapping</a>	swImplMapping.shortName, swImplMapping.variationPoint.shortLabel
<a href="#">SystemMapping.swMapping</a>	swMapping.shortName, swMapping.variationPoint.shortLabel
<a href="#">SystemSignal.physicalProps</a>	physicalProps
<a href="#">TlvDataIdDefinitionSet.tlvDataIdDefinition</a>	tlvDataIdDefinition.id
<a href="#">TransformationTechnology.transformationDescription</a>	transformationDescription, transformationDescription.variationPoint.shortLabel

**Table F.1: Usage of splitable elements**

## G Variation Points in the Scope of this Document

This chapter contains a table of all model elements stereotyped `<<atpVariation>>` in the scope of this document.

Each entry in following Table consists of the identification of the model element itself and the applicable value of the tagged value `vh.latestBindingTime`.

For more information about the concept of variation points and how model elements that contain variation points shall be treated please refer to [2].

<i>Variation Point</i>	<i>Latest Binding Time</i>
<a href="#">AbstractCanCluster</a>	postBuild
<a href="#">AbstractCanCommunicationController</a>	postBuild
<a href="#">AbstractServiceInstance.capabilityRecord</a>	postBuild
<a href="#">AbstractServiceInstance.methodActivationRoutingGroup</a>	postBuild
<a href="#">AliasNameSet.aliasName</a>	preCompileTime
<a href="#">BusMirrorChannel.channel</a>	systemDesignTime
<a href="#">BusMirrorChannelMapping.targetPduTriggering</a>	postBuild
<a href="#">CanCluster</a>	postBuild
<a href="#">CanCommunicationController</a>	postBuild
<a href="#">CanTpConfig.tpAddress</a>	postBuild
<a href="#">CanTpConfig.tpChannel</a>	postBuild
<a href="#">CanTpConfig.tpConnection</a>	postBuild
<a href="#">CanTpConfig.tpEcu</a>	postBuild
<a href="#">CanTpConfig.tpNode</a>	postBuild
<a href="#">ClientIdDefinitionSet.clientIdDefinition</a>	postBuild
<a href="#">ClientIdRange.lowerLimit</a>	preCompileTime
<a href="#">ClientIdRange.upperLimit</a>	preCompileTime
<a href="#">CommunicationCluster</a>	postBuild
<a href="#">CommunicationCluster.physicalChannel</a>	systemDesignTime
<a href="#">CommunicationConnector.ecuCommPortInstance</a>	postBuild
<a href="#">CommunicationController</a>	postBuild
<a href="#">ConsumedEventGroup.eventMulticastAddress</a>	postBuild
<a href="#">ConsumedEventGroup.sdClientTimerConfig</a>	postBuild
<a href="#">ConsumedProvidedServiceInstanceGroup.consumedServiceInstance</a>	postBuild
<a href="#">ConsumedProvidedServiceInstanceGroup.providedServiceInstance</a>	postBuild
<a href="#">ConsumedServiceInstance.consumedEventGroup</a>	postBuild
<a href="#">ConsumedServiceInstance.eventMulticastSubscriptionAddress</a>	postBuild
<a href="#">ConsumedServiceInstance.localUnicastAddress</a>	postBuild
<a href="#">ConsumedServiceInstance.remoteUnicastAddress</a>	postBuild
<a href="#">ConsumedServiceInstance.sdClientTimerConfig</a>	postBuild
<a href="#">CouplingElement.couplingPort</a>	postBuild
<a href="#">CouplingPortConnection.nodePort</a>	postBuild
<a href="#">CpSoftwareCluster.swComponentAssignment</a>	postBuild
<a href="#">CpSoftwareCluster.swComposition</a>	systemDesignTime
<a href="#">CpSoftwareClusterMappingSet.portElementToComResourceMapping</a>	postBuild





<b>Variation Point</b>	<b>Latest Binding Time</b>
CpSoftwareClusterMappingSet.resourceToApplicationPartitionMapping	systemDesignTime
CpSoftwareClusterMappingSet.softwareClusterToResourceMapping	preCompileTime
CpSoftwareClusterMappingSet.swcToApplicationPartitionMapping	postBuild
CpSoftwareClusterToEcuInstanceMapping.swCluster	systemDesignTime
DataTransformationSet.dataTransformation	codeGenerationTime
DataTransformationSet.transformationTechnology	codeGenerationTime
EcuInstance.associatedConsumedProvidedServiceInstanceGroup	postBuild
EcuInstance.commController	postBuild
EcuInstance.connector	postBuild
EndToEndTransformationISignalProps	postBuild
EthernetCluster	postBuild
EthernetCluster.couplingPortConnection	postBuild
EthernetCommunicationController	postBuild
EventHandler.eventMulticastAddress	postBuild
EventHandler.sdServerEgTimingConfig	postBuild
FlatMap.instance	postBuild
FlexrayArTpConfig.tpAddress	postBuild
FlexrayArTpConfig.tpChannel	postBuild
FlexrayArTpConfig.tpNode	postBuild
FlexrayCluster	postBuild
FlexrayCommunicationController	postBuild
FlexrayTpConfig.pduPool	postBuild
FlexrayTpConfig.tpAddress	postBuild
FlexrayTpConfig.tpConnection	postBuild
FlexrayTpConfig.tpConnectionControl	postBuild
FlexrayTpConfig.tpEcu	postBuild
FlexrayTpConfig.tpNode	postBuild
Frame.pduToFrameMapping	postBuild
FrameTriggering.pduTriggering	postBuild
Gateway.frameMapping	postBuild
Gateway.iPduMapping	postBuild
Gateway.signalMapping	postBuild
GlobalTimeDomain.gateway	postBuild
GlobalTimeDomain.globalTimeDomainProperty	postBuild
GlobalTimeDomain.globalTimeMaster	postBuild
GlobalTimeDomain.globalTimeSubDomain	postBuild
GlobalTimeDomain.pduTriggering	postBuild
GlobalTimeDomain.slave	postBuild
ISignal.dataTransformation	codeGenerationTime
ISignalGroup.comBasedSignalGroupTransformation	codeGenerationTime
ISignalIPdu.iPduTimingSpecification	postBuild
ISignalIPdu.iSignalToPduMapping	postBuild
ISignalIPduGroup.iSignalIPdu	postBuild
ISignalIPduGroup.nmPdu	postBuild
J1939Cluster	postBuild





<b>Variation Point</b>	<b>Latest Binding Time</b>
J1939TpConfig.tpAddress	postBuild
J1939TpConfig.tpConnection	postBuild
J1939TpConfig.tpNode	postBuild
LinCluster	postBuild
LinCommunicationController	postBuild
LinMaster	postBuild
LinPhysicalChannel.scheduleTable	postBuild
LinSlave	postBuild
LinTpConfig.tpAddress	postBuild
LinTpConfig.tpConnection	postBuild
LinTpConfig.tpNode	postBuild
McGroupDataRefSet	preCompileTime
MultiplexedIPdu.dynamicPart	postBuild
MultiplexedIPdu.staticPart	postBuild
NmCluster.nmNode	postBuild
NmConfig.nmCluster	postBuild
NmConfig.nmClusterCoupling	postBuild
NmConfig.nmlfEcu	preCompileTime
PduIPduGroup.iPdu	postBuild
PduTriggering.iSignalTriggering	postBuild
PhysicalChannel.commConnector	postBuild
PhysicalChannel.frameTriggering	postBuild
PhysicalChannel.iSignalTriggering	postBuild
PhysicalChannel.pduTriggering	postBuild
PncMapping.pncConsumedProvidedServiceInstanceGroup	postBuild
ProvidedServiceInstance.eventHandler	postBuild
ProvidedServiceInstance.localUnicastAddress	postBuild
ProvidedServiceInstance.remoteMulticastSubscriptionAddress	postBuild
ProvidedServiceInstance.remoteUnicastAddress	postBuild
ProvidedServiceInstance.sdServerTimerConfig	postBuild
ServiceInstanceCollectionSet.serviceInstance	postBuild
SoAdConfig.connection	postBuild
SoAdConfig.connectionBundle	postBuild
SoAdConfig.socketAddress	postBuild
SocketAddress.staticSocketConnection	postBuild
SOMEIPTransformationISignalProps	postBuild
StaticSocketConnection.iPduIdentifier	postBuild
StaticSocketConnection.remoteAddress	postBuild
System.fibexElement	postBuild
System.j1939SharedAddressCluster	postBuild
System.mapping	postBuild
System.rootSoftwareComposition	systemDesignTime
System.swCluster	systemDesignTime
System.systemDocumentation	systemDesignTime
SystemMapping.applicationPartitionToEcuPartitionMapping	postBuild





<b>Variation Point</b>	<b>Latest Binding Time</b>
SystemMapping.comManagementMapping	systemDesignTime
SystemMapping.cryptoServiceMapping	postBuild
SystemMapping.dataMapping	postBuild
SystemMapping.ecuResourceMapping	systemDesignTime
SystemMapping.mappingConstraint	systemDesignTime
SystemMapping.pncMapping	systemDesignTime
SystemMapping.portElementToComResourceMapping	postBuild
SystemMapping.resourceEstimation	systemDesignTime
SystemMapping.resourceToApplicationPartitionMapping	systemDesignTime
SystemMapping.signalPathConstraint	systemDesignTime
SystemMapping.softwareClusterToResourceMapping	preCompileTime
SystemMapping.swClusterMapping	systemDesignTime
SystemMapping.swcToApplicationPartitionMapping	postBuild
SystemMapping.swImplMapping	preCompileTime
SystemMapping.swMapping	preCompileTime
TransformationISignalProps	postBuild
TransformationTechnology.transformationDescription	postBuild
TtcanCluster	postBuild
TtcanCommunicationController	postBuild
UserDefinedCluster	postBuild
UserDefinedCommunicationController	postBuild
UserDefinedTransformationISignalProps	postBuild

**Table G.1: Usage of variation points**