

Document Title	Specification of Time Synchronization over FlexRay
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	675

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R23-11

Document Change History			
Date	Release	Changed by	Description
2023-11-23	R23-11	AUTOSAR Release Management	<ul style="list-style-type: none">Clarification of / refinement of sequence counter validationClarification of / refinement of Timesync message transmission and debouncing behaviorIncorporation of validation findings for "Secured Time Synchronization"
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none">Support for "Secured Time Synchronization" addedMinor content changes, clarifications
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none">Hysteresis added for sequence counter validationSmall enhancement to improve precision of Global TimeBugfix for Time Validation
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none">Time Validation updated for Time GatewaysPost build variant value corrected for FrTSynGlobalTimeMasterHandleId and FrTSynGlobalTimeSlaveHandleId



△

2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Time Validation (draft) • Clarification regarding messages with stuck sequence counter • Clarification regarding cyclic operation entry after timebase startup • Clarification regarding transmission and reception of User Bytes • Changed Document Status from Final to published
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Modifications to enhance the precision of Global Time Synchronization • Additional minor corrections / clarifications / editorial changes; For details please refer to the Change Documentation
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Offset message formats changed • Immediate Time Synchronization message transmission • Various enhancements and corrections
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Error code FRTSYN_E_INVALID_PDU_SDU_ID replaced by FRTSYN_E_INVALID_PDUID • FlexRay communication state handling simplified (FrIIf_GetPOCStatus replaced by FrIIf_GetState)
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Initial Release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Contents

1	Introduction and functional overview	7
2	Acronyms, Abbreviations, and Definitions	9
3	Related documentation	10
3.1	Input documents & related standards and norms	10
3.2	Related specification	10
4	Constraints and assumptions	11
4.1	Limitations	11
4.2	Applicability to car domains	11
5	Dependencies to other modules	12
5.1	File structure	14
5.1.1	Code file structure	14
5.1.2	Header file structure	14
6	Requirements Tracing	15
7	Functional specification	18
7.1	Overview	18
7.2	Module Handling	18
7.2.1	Initialization	18
7.2.2	FlexRay Interface	18
7.2.3	Error Handling	19
7.3	Message Format	19
7.3.1	SYNC message	20
7.3.2	OFS message	22
7.4	Acting as Time Master	25
7.4.1	SYNC message processing	27
7.4.2	OFS message processing	28
7.4.3	Transmission mode	29
7.4.4	Debounce Time	29
7.4.5	Immediate Time Synchronization	31
7.4.6	Calculation and Assembling of Time Synchronization Messages	33
7.4.6.1	Global Time Calculation	33
7.4.6.2	SGW Calculation	34
7.4.6.3	Sequence Counter Calculation	34
7.4.6.4	CRC Calculation	34
7.4.6.5	ICV Calculation	35
7.4.6.6	Message Assembling	37
7.5	Acting as Time Slave	38
7.5.1	SYNC message processing	38
7.5.2	OFS message processing	39

7.5.3	Validation and Disassembling of Time Synchronization Messages	40
7.5.3.1	Global Time Calculation	40
7.5.3.2	SGW Calculation	41
7.5.3.3	Sequence Counter Validation	41
7.5.3.4	CRC Validation	46
7.5.3.5	ICV Verification	46
7.5.3.6	Message Disassembling	49
7.6	Time Recording	50
7.6.1	Global Time Measurement Support	50
7.6.2	Time Validation	50
7.7	Security Events	52
7.8	Error Classification	52
7.8.1	Development Errors	53
7.8.2	Runtime Errors	53
7.8.3	Transient Faults	53
7.8.4	Production Errors	53
7.8.5	Extended Production Errors	53
8	API specification	54
8.1	API	54
8.1.1	Imported types	54
8.1.2	Type definitions	55
8.1.2.1	FrTSyn_ConfigType	55
8.1.2.2	FrTSyn_TransmissionModeType	55
8.1.3	Function definitions	55
8.1.3.1	FrTSyn_Init	55
8.1.3.2	FrTSyn_GetVersionInfo	56
8.1.3.3	FrTSyn_SetTransmissionMode	56
8.1.4	Call-back notifications	57
8.1.4.1	FrTSyn_RxIndication	57
8.1.4.2	FrTSyn_TriggerTransmit	58
8.1.4.3	FrTSyn_IcvGenerationIndication	59
8.1.4.4	FrTSyn_IcvVerificationIndication	60
8.1.5	Scheduled functions	60
8.1.5.1	FrTSyn_MainFunction	61
8.1.6	Expected Interfaces	61
8.1.6.1	Mandatory Interfaces	61
8.1.6.2	Optional Interfaces	61
9	Sequence diagrams	64
9.1	FlexRay Time Synchronization (Time Master)	64
9.2	FlexRay Time Synchronization (Time Slave)	65
9.3	FlexRay Secure Time Synchronization Sequence	66
10	Configuration specification	67
10.1	How to read this chapter	67

10.2	Containers and configuration parameters	67
10.2.1	Variants	67
10.2.2	FrTSyn	67
10.2.3	FrTSynGeneral	68
10.2.4	FrTSynSecurityEventRefs	72
10.2.5	FrTSynGlobalTimeDomain	73
10.2.6	FrTSynGlobalTimeSyncDataIDList	76
10.2.7	FrTSynGlobalTimeSyncDataIDListElement	78
10.2.8	FrTSynGlobalTimeOfsDataIDList	79
10.2.9	FrTSynGlobalTimeOfsDataIDListElement	80
10.2.10	FrTSynGlobalTimeMaster	81
10.2.11	FrTSynGlobalTimeMasterPdu	85
10.2.12	FrTSynGlobalTimeTxIcvGeneration	86
10.2.13	FrTSynGlobalTimeSlave	91
10.2.14	FrTSynGlobalTimeSlavePdu	95
10.2.15	FrTSynGlobalTimeRxIcvVerification	95
10.3	Constraints	99
10.4	Published Information	100
A	Not applicable requirements	101
B	Change history of AUTOSAR traceable items	102
B.1	Traceable item history of this document according to AUTOSAR Release R22-11	102
B.1.1	Added Specification Items in R22-11	102
B.1.2	Changed Specification Items in R22-11	102
B.1.3	Deleted Specification Items in R22-11	103
B.1.4	Added Constraints in R22-11	103
B.1.5	Changed Constraints in R22-11	103
B.1.6	Deleted Constraints in R22-11	103
B.2	Traceable item history of this document according to AUTOSAR Release R23-11	103
B.2.1	Added Specification Items in R23-11	103
B.2.2	Changed Specification Items in R23-11	103
B.2.3	Deleted Specification Items in R23-11	104
B.2.4	Added Constraints in R23-11	104
B.2.5	Changed Constraints in R23-11	104
B.2.6	Deleted Constraints in R23-11	104

1 Introduction and functional overview

The [FrTSyn](#) module handles the distribution of time information over FlexRay buses.

The FlexRay mechanism is much simpler than the mechanism for CAN since it is based on the fact, that FlexRay nodes are synchronized to each other, otherwise no messages can be transmitted on FlexRay.

Both, Time Master and Time Slaves have the same view on the FlexRay global time. It is therefore just necessary to define the same point in (FlexRay) time and to transmit the time information, which will be valid at that point in (FlexRay) time.

Although this same point in (FlexRay) time could be in theory any FlexRay macrotick within a FlexRay cycle, the start of a FlexRay cycle simplifies this mechanism. In addition, the mechanism does not just use any cycle start but uses the cycle start of the subsequent cycle with cycle counter value 0, i.e. the Time Master transmits time information located in the future.

On FlexRay only one Time Synchronization message is needed.

The Time Master uses its current FlexRay time, i.e. macrotick counter and cycle counter, and the current time, which shall be distributed and calculates the resulting time at the start of the next cycle 0. Once this resulting time has been calculated, it is neither very time critical, when exactly the FlexRay frame is transmitted, nor when it is received and processed.

Every Time Slave receiving the transmitted time information will use it in combination with the current FlexRay macrotick counter and cycle counter to determine the actual master time and set its slave time.

Figure [1.1](#) illustrates the Time Synchronization mechanism on FlexRay.

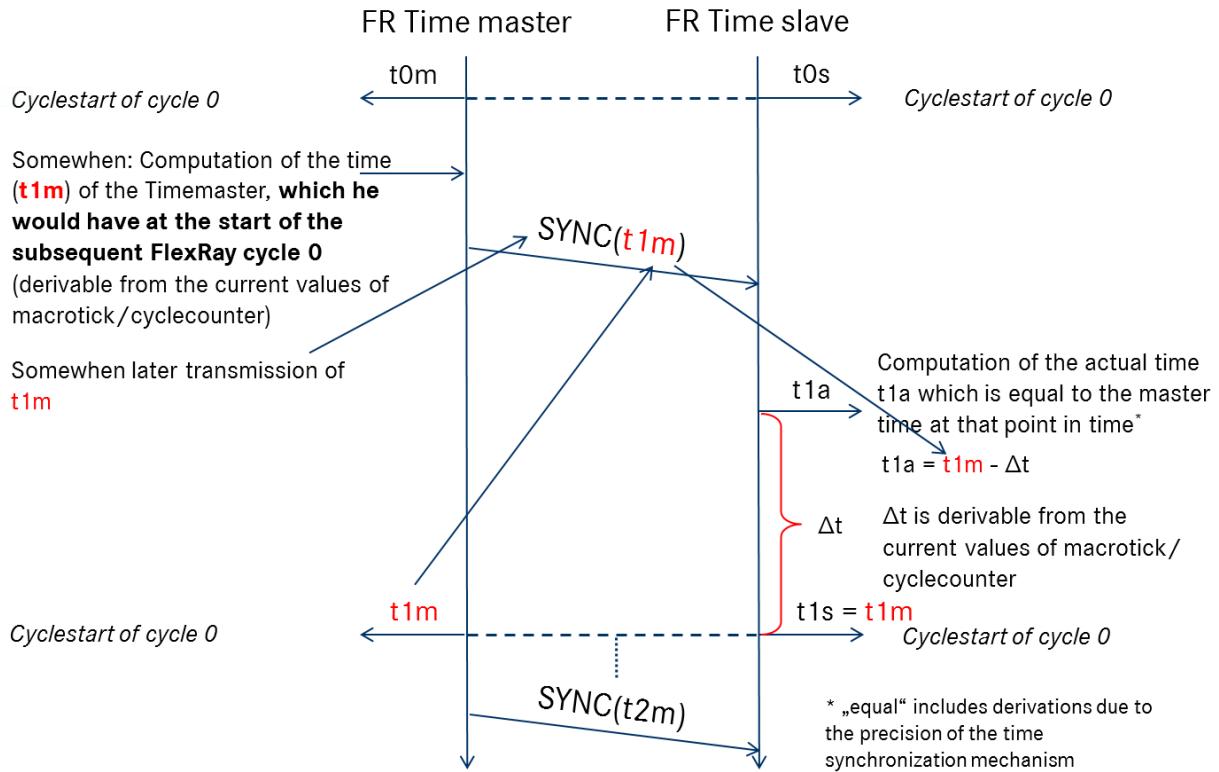


Figure 1.1: FlexRay Time Synchronization Mechanism

The [FrTSyn](#) also supports securing the global time messages on the FlexRay communication bus. The figure below shows the time provider modules interface with the security modules in the AUTOSAR Layered Architecture.

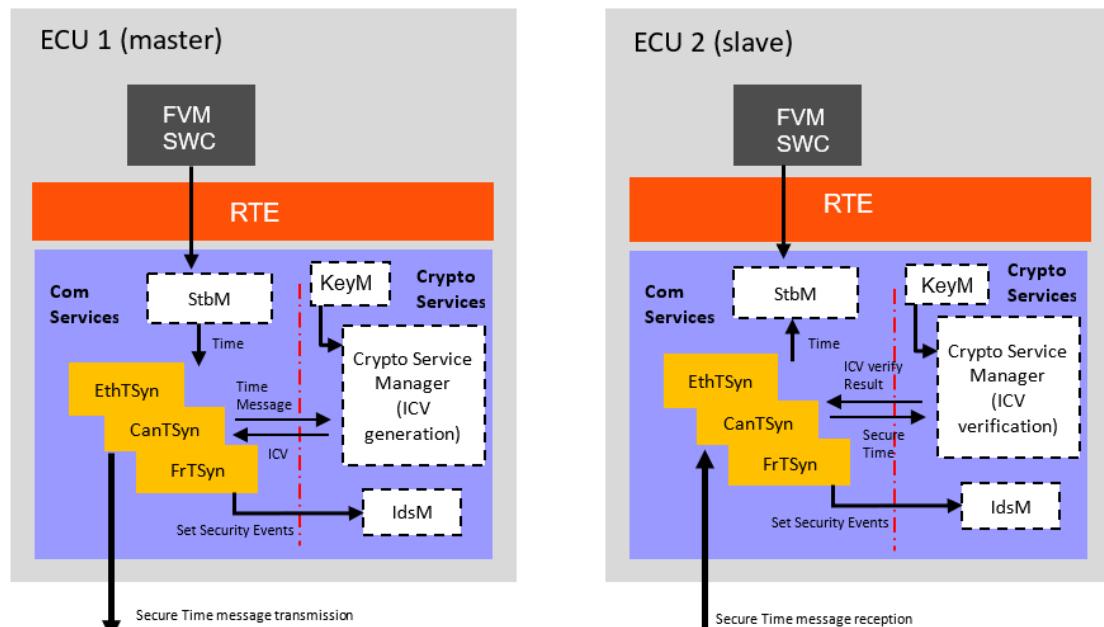


Figure 1.2: Timesync modules interface with security modules in the AUTOSAR Layered Architecture

2 Acronyms, Abbreviations, and Definitions

This section lists module local abbreviations and definitions. For additional Time Synchronization related abbreviations and definitions refer to chapter 3 in the RS Time Synchronization [1]. For general terms and abbreviations refer to the AUTOSAR Glossary [2].

Abbreviation	Description
GTM	Global Time Master
BswM	BSW Mode Manager module
<Bus>TSyn	Bus specific Time Synchronization module
CRC	Cyclic Redundancy Checksum
CSM	Crypto Service Manager
Debounce Time	Minimum gap between two Tx messages with the same PDU
Det	Default Error Tracer module
FCNT	FlexRay Cycle Counter
FR	FlexRay
FrIf	FlexRay interface module
FrTSyn	Time Synchronization over FlexRay module
FV	Freshness Value
FVL	Freshness Value Length
FVM	Freshness Value Manager
ICV	Integrity Check Value
ICVL	Integrity Check Value Length
IdsM	Intrusion Detection System Manager module
MAC	Message Authentication Code
OFS message	Offset Synchronization message
SC	Sequence Counter in Time Synchronization messages
SGW	"Synchronized to Gateway" state of Time Synchronization
StbM	Synchronized Time-Base Manager
SYNC message	Time Synchronization message
Timesync	Time Synchronization

3 Related documentation

3.1 Input documents & related standards and norms

- [1] Requirements on Time Synchronization
AUTOSAR_FO_RS_TimeSync
- [2] Glossary
AUTOSAR_FO_TR_Glossary
- [3] General Specification of Basic Software Modules
AUTOSAR_CP_SWS_BSWGeneral
- [4] General Requirements on Basic Software Modules
AUTOSAR_CP_SRS_BSWGeneral
- [5] Specification of Synchronized Time-Base Manager
AUTOSAR_CP_SWS_SynchronizedTimeBaseManager
- [6] Specification of CRC Routines
AUTOSAR_CP_SWS_CRCLibrary
- [7] Specification of Crypto Service Manager
AUTOSAR_CP_SWS_CryptoServiceManager
- [8] Specification of Intrusion Detection System Manager
AUTOSAR_CP_SWS_IntrusionDetectionSystemManager

3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [3, SWS BSW General], which is also valid for [FrTSyn](#).

Thus, the specification SWS BSW General shall be considered as additional and required specification for [FrTSyn](#).

4 Constraints and assumptions

4.1 Limitations


1. Time Masters, Time Gateways and Time Slaves shall work with a Time Base reference clock with a worst-case accuracy of $2\mu\text{s}$.
2. The Time Base in the OFS messages is limited to 32 bit, wherefore the maximum supported time value is 4294967295 seconds ($2^{32}-1$).

4.2 Applicability to car domains

Automotive systems requiring a common Time Base for ECUs regardless of which bus system the ECUs are connected to.

5 Dependencies to other modules

The Time Synchronization over FlexRay ([FrTSyn](#)) has interfaces towards the Synchronized Time-Base Manager ([StbM](#)), the FlexRay Interface ([FrIf](#)), the BSW Mode Manager ([BswM](#)), the Default Error Tracer ([Det](#)), the Crypto Service Manager ([CSM](#)), and the Intrusion Detection System Manager ([IdsM](#)).

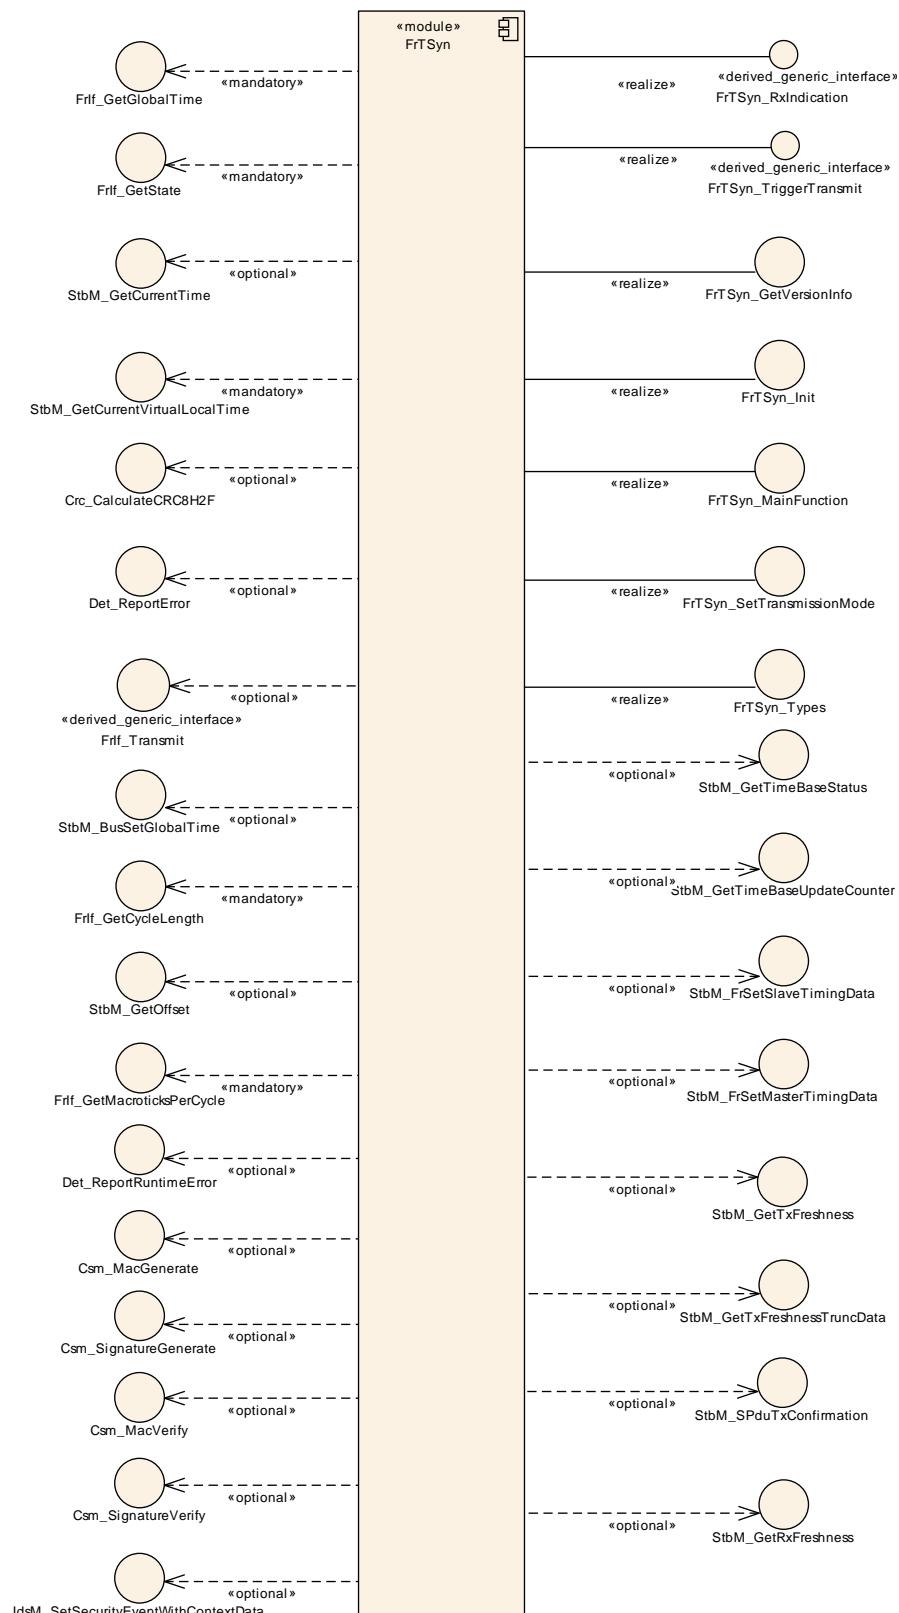
Figure 5.1: Module dependencies of the FrTSyn module

- **StbM** -

- Get and set the current time value
- Get [FV](#) from [FVM](#)
- [FrIf](#) - Receiving and transmitting messages
- [BswM](#) - Coordination of network access (via [FrTSyn_SetTransmissionMode](#))
- [Det](#) - Reporting of development errors
- [IdsM](#) - Reporting of Security Events
- [CSM](#) -
 - Generation of [ICV](#) for Time Master
 - Verification of [ICV](#) for Time Slave

5.1 File structure

5.1.1 Code file structure

For details, refer to the section 5.1.6 "Code file structure" of the SWS BSW General [3].

5.1.2 Header file structure

For details, refer to the section 5.1.7 "Header file structure" of the SWS BSW General [3].

6 Requirements Tracing

The following tables reference the requirements specified in [1, RS TimeSync] and [4, SRS BSWGeneral] and links to the fulfillment of these. Please note that if column “Satisfied by” is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[RS_Ids_00810]	Basic SW security events	[SWS_FrTSyn_00103] [SWS_FrTSyn_00104] [SWS_FrTSyn_00105]
[RS_TS_00003]	The TS shall initialize the Local Time Base with a configurable startup value	[SWS_FrTSyn_00003]
[RS_TS_00004]	The Implementation of Time Synchronization shall initialize the Global Time Base with a configurable startup value.	[SWS_FrTSyn_00003]
[RS_TS_00034]	The Implementation of Time Synchronization shall provide measurement data to the application	[SWS_FrTSyn_00092] [SWS_FrTSyn_00096] [SWS_FrTSyn_00097] [SWS_FrTSyn_00098] [SWS_FrTSyn_00099] [SWS_FrTSyn_00100] [SWS_FrTSyn_00101]
[RS_TS_20039]	The Timesync over FlexRay module shall trigger Time Base Synchronization transmission	[SWS_FrTSyn_00019] [SWS_FrTSyn_00023] [SWS_FrTSyn_00026] [SWS_FrTSyn_00027] [SWS_FrTSyn_00084] [SWS_FrTSyn_00085] [SWS_FrTSyn_00086] [SWS_FrTSyn_00087] [SWS_FrTSyn_00088] [SWS_FrTSyn_00089] [SWS_FrTSyn_00090] [SWS_FrTSyn_00091] [SWS_FrTSyn_00093] [SWS_FrTSyn_00161] [SWS_FrTSyn_00169] [SWS_FrTSyn_00170]
[RS_TS_20040]	The Timesync over FlexRay module shall provide a Time Base after reception of a valid protocol information	[SWS_FrTSyn_00041] [SWS_FrTSyn_00045] [SWS_FrTSyn_00078] [SWS_FrTSyn_00094]
[RS_TS_20041]	The Timesync over FlexRay module shall support means to protect the Time Synchronization protocol	[SWS_FrTSyn_00006] [SWS_FrTSyn_00014] [SWS_FrTSyn_00015] [SWS_FrTSyn_00021] [SWS_FrTSyn_00025] [SWS_FrTSyn_00030] [SWS_FrTSyn_00031] [SWS_FrTSyn_00035] [SWS_FrTSyn_00036] [SWS_FrTSyn_00078] [SWS_FrTSyn_00079] [SWS_FrTSyn_00080] [SWS_FrTSyn_00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00108] [SWS_FrTSyn_00109] [SWS_FrTSyn_00112] [SWS_FrTSyn_00113] [SWS_FrTSyn_00162] [SWS_FrTSyn_00163] [SWS_FrTSyn_00164] [SWS_FrTSyn_00165] [SWS_FrTSyn_00166] [SWS_FrTSyn_00167] [SWS_FrTSyn_00168]





Requirement	Description	Satisfied by
[RS_TS_20042]	The Timesync over FlexRay module shall detect and handle timeout and integrity errors in the Time Synchronization protocol	[SWS_FrTSyn_00015] [SWS_FrTSyn_00038] [SWS_FrTSyn_00041] [SWS_FrTSyn_00042] [SWS_FrTSyn_00045] [SWS_FrTSyn_00048] [SWS_FrTSyn_00049] [SWS_FrTSyn_00050] [SWS_FrTSyn_00054] [SWS_FrTSyn_00055] [SWS_FrTSyn_00057] [SWS_FrTSyn_00058] [SWS_FrTSyn_00080] [SWS_FrTSyn_00081] [SWS_FrTSyn_00082] [SWS_FrTSyn_00094] [SWS_FrTSyn_00102] [SWS_FrTSyn_00107] [SWS_FrTSyn_00109] [SWS_FrTSyn_00150] [SWS_FrTSyn_00162] [SWS_FrTSyn_00163] [SWS_FrTSyn_00164] [SWS_FrTSyn_00165] [SWS_FrTSyn_00166] [SWS_FrTSyn_00167] [SWS_FrTSyn_00168]
[RS_TS_20043]	The Timesync over FlexRay module shall support a protocol for precise time measurement and synchronization over FlexRay	[SWS_FrTSyn_00007] [SWS_FrTSyn_00009] [SWS_FrTSyn_00010] [SWS_FrTSyn_00014] [SWS_FrTSyn_00015] [SWS_FrTSyn_00018] [SWS_FrTSyn_00019] [SWS_FrTSyn_00020] [SWS_FrTSyn_00021] [SWS_FrTSyn_00026] [SWS_FrTSyn_00027] [SWS_FrTSyn_00028] [SWS_FrTSyn_00030] [SWS_FrTSyn_00031] [SWS_FrTSyn_00035] [SWS_FrTSyn_00036] [SWS_FrTSyn_00037] [SWS_FrTSyn_00038] [SWS_FrTSyn_00039] [SWS_FrTSyn_00040] [SWS_FrTSyn_00041] [SWS_FrTSyn_00046] [SWS_FrTSyn_00048] [SWS_FrTSyn_00049] [SWS_FrTSyn_00050] [SWS_FrTSyn_00054] [SWS_FrTSyn_00055] [SWS_FrTSyn_00056] [SWS_FrTSyn_00057] [SWS_FrTSyn_00060] [SWS_FrTSyn_00061] [SWS_FrTSyn_00062] [SWS_FrTSyn_00063] [SWS_FrTSyn_00064] [SWS_FrTSyn_00065] [SWS_FrTSyn_00066] [SWS_FrTSyn_00069] [SWS_FrTSyn_00071] [SWS_FrTSyn_00072] [SWS_FrTSyn_00074] [SWS_FrTSyn_00075] [SWS_FrTSyn_00081] [SWS_FrTSyn_00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00112] [SWS_FrTSyn_00136] [SWS_FrTSyn_00150]
[RS_TS_20044]	The Timesync over FlexRay module shall use the time measurement and synchronization protocol to transmit and receive an offset value	[SWS_FrTSyn_00007] [SWS_FrTSyn_00009] [SWS_FrTSyn_00010] [SWS_FrTSyn_00020] [SWS_FrTSyn_00022] [SWS_FrTSyn_00023] [SWS_FrTSyn_00025] [SWS_FrTSyn_00026] [SWS_FrTSyn_00027] [SWS_FrTSyn_00029] [SWS_FrTSyn_00030] [SWS_FrTSyn_00031] [SWS_FrTSyn_00035] [SWS_FrTSyn_00036] [SWS_FrTSyn_00037] [SWS_FrTSyn_00042] [SWS_FrTSyn_00043] [SWS_FrTSyn_00044] [SWS_FrTSyn_00045] [SWS_FrTSyn_00047] [SWS_FrTSyn_00048] [SWS_FrTSyn_00049] [SWS_FrTSyn_00050] [SWS_FrTSyn_00054] [SWS_FrTSyn_00055] [SWS_FrTSyn_00056] [SWS_FrTSyn_00057] [SWS_FrTSyn_00079] [SWS_FrTSyn_00080] [SWS_FrTSyn_00082] [SWS_FrTSyn_00108] [SWS_FrTSyn_00109] [SWS_FrTSyn_00113] [SWS_FrTSyn_00136] [SWS_FrTSyn_00150]
[RS_TS_20045]	The Timesync over FlexRay module shall support user specific data within the time measurement and synchronization protocol	[SWS_FrTSyn_00010] [SWS_FrTSyn_00011] [SWS_FrTSyn_00012] [SWS_FrTSyn_00013]





Requirement	Description	Satisfied by
[RS_TS_20046]	The configuration for Time synchronization over FlexRay shall allow the FlexRay Time Synchronization module to support different roles for a Time Base	[SWS_FrTSyn_00077]
[RS_TS_20074]	The Timesync over FlexRay module shall support means to secure the Time Synchronization protocol	[SWS_FrTSyn_00009] [SWS_FrTSyn_00037] [SWS_FrTSyn_00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00108] [SWS_FrTSyn_00109] [SWS_FrTSyn_00110] [SWS_FrTSyn_00111] [SWS_FrTSyn_00112] [SWS_FrTSyn_00113] [SWS_FrTSyn_00114] [SWS_FrTSyn_00115] [SWS_FrTSyn_00116] [SWS_FrTSyn_00117] [SWS_FrTSyn_00118] [SWS_FrTSyn_00119] [SWS_FrTSyn_00120] [SWS_FrTSyn_00121] [SWS_FrTSyn_00122] [SWS_FrTSyn_00123] [SWS_FrTSyn_00124] [SWS_FrTSyn_00125] [SWS_FrTSyn_00126] [SWS_FrTSyn_00127] [SWS_FrTSyn_00128] [SWS_FrTSyn_00129] [SWS_FrTSyn_00130] [SWS_FrTSyn_00131] [SWS_FrTSyn_00132] [SWS_FrTSyn_00133] [SWS_FrTSyn_00134] [SWS_FrTSyn_00135] [SWS_FrTSyn_00136] [SWS_FrTSyn_00137] [SWS_FrTSyn_00138] [SWS_FrTSyn_00139] [SWS_FrTSyn_00140] [SWS_FrTSyn_00142] [SWS_FrTSyn_00143] [SWS_FrTSyn_00144] [SWS_FrTSyn_00145] [SWS_FrTSyn_00146] [SWS_FrTSyn_00147] [SWS_FrTSyn_00148] [SWS_FrTSyn_00149] [SWS_FrTSyn_00153] [SWS_FrTSyn_00154] [SWS_FrTSyn_00155] [SWS_FrTSyn_00156] [SWS_FrTSyn_00157] [SWS_FrTSyn_00158] [SWS_FrTSyn_00159] [SWS_FrTSyn_00160] [SWS_FrTSyn_00171] [SWS_FrTSyn_00172] [SWS_FrTSyn_91001] [SWS_FrTSyn_91002] [SWS_FrTSyn_CONSTR_00001] [SWS_FrTSyn_CONSTR_00002]
[SRS_BSW_00323]	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	[SWS_FrTSyn_00058] [SWS_FrTSyn_00067] [SWS_FrTSyn_00070] [SWS_FrTSyn_00095] [SWS_FrTSyn_00151] [SWS_FrTSyn_00152]
[SRS_BSW_00337]	Classification of development errors	[SWS_FrTSyn_00067] [SWS_FrTSyn_00070] [SWS_FrTSyn_00095] [SWS_FrTSyn_00151] [SWS_FrTSyn_00152]
[SRS_BSW_00385]	List possible error notifications	[SWS_FrTSyn_00059] [SWS_FrTSyn_91000]

Table 6.1: Requirements Tracing

7 Functional specification

This chapter defines the behavior of the Time Synchronization over FlexRay. The API of the module is defined in chapter 8, while the configuration is defined in chapter 10.

7.1 Overview

The Time Synchronization over FlexRay is responsible to ensure the collection and distribution of Synchronized Time information across the FlexRay network. It interacts with the [StbM](#) and provides all FlexRay specific functions to the [StbM](#).

Time Synchronization principles and common wording is described in [5] and [1].

7.2 Module Handling

This section contains description of auxiliary functionality of the Time Synchronization over FlexRay.

7.2.1 Initialization

The Time Synchronization over FlexRay is initialized via [FrTSyn_Init](#). Except for [FrTSyn_GetVersionInfo](#) and [FrTSyn_Init](#), the API functions of the Time Synchronization over FlexRay may only be called when the module has been properly initialized.

[SWS_FrTSyn_00003] [A call to [FrTSyn_Init](#) initializes all internal variables and sets the Time Synchronization over FlexRay to the initialized state.] ([RS_TS_00003](#), [RS_TS_00004](#))

[SWS_FrTSyn_00006] [The Sequence Counter ([sc](#)) shall be initialized with 0.] ([RS_TS_20041](#))

7.2.2 FlexRay Interface

[SWS_FrTSyn_00078] [The [FrTSyn](#) module shall call [FrIf_GetGlobalTime](#) only if [FrIf_GetState](#) returns [FRIF_STATE_ONLINE](#). This is to ensure that [FrIf_GetGlobalTime](#) returns valid time information, i.e. that the FlexRay communication controller is synchronous to the FlexRay global time.] ([RS_TS_20040](#), [RS_TS_20041](#))

7.2.3 Error Handling

[SWS_FrTSyn_00058] [On errors and exceptions, the [FrTSyn](#) module shall not modify its current module state but shall simply report the error event.] ([RS_TS_20042](#), [SRS_BSW_00323](#))

7.3 Message Format

SYNC and OFS messages may share the same [FR](#) PDU by using a multiplexed signal group. The multiplexer is located in byte 0, named [Type](#).

For different Time Domains the same [FR](#) PDU may be used if Time Synchronization messages are sent by the same Time Master or Time Gateway.

For different Time Domains different [FR](#) PDUs shall be used if Time Synchronization messages are sent by different Time Masters or Time Gateways.

The usage of [CRC](#) is optional. To ensure a great variability between several time observing units, the configuration decides of how to handle [CRC](#) protected time synchronization messages if the receiver does not support the [CRC](#) calculation. Hence it might be possible, that a receiver is just using the given Time Base value, without evaluating the [CRC](#).

SYNC and OFS messages can be [ICV](#) secured. This provides the integrity and authenticity protection of these messages.

The usage of a [ICV](#) is optional. To ensure a great variability between several time observing units, the configuration decides on how to handle [ICV](#) secured Time Synchronization messages if the receiver does not support the [ICV](#) calculation. Hence it might be possible, that a receiver is just using the given Time Base value without evaluating the [ICV](#).

[SWS_FrTSyn_00007] [The byte order for time values inside Time Synchronization messages is "Big Endian".] ([RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00009] [If the message type is 0x10, 0x20, 0x34 or 0x44 (not [ICV](#) secured [SYNC](#) and [OFS](#) messages), the PayloadLength shall be 16.] ([RS_TS_20043](#), [RS_TS_20044](#), [RS_TS_20074](#))

The length of [ICV](#) secured messages depends on the length of the variable [FV](#) and [ICV](#) fields.

[SWS_FrTSyn_00136]{DRAFT} [If the message type is 0x50, 0x60, 0x74 or 0x84 ([ICV](#) secured [SYNC](#) and [OFS](#) messages), the PayloadLength shall be 18 .. 254, depending on the configured [FV](#) length ([StbMFreshnessValueLength](#)) and the [ICV](#) length ([FrTSynIcvTxLength](#)).] ([RS_TS_20043](#), [RS_TS_20044](#), [RS_TS_20074](#))

[SWS_FrTSyn_00110]{DRAFT} [For **SYNC** or **OFS** messages, if the **FVL** field is 0, there shall be no **ICV** field, i.e., the **ICV** field shall follow immediately, starting with byte 18.] (*RS_TS_20074*)

[SWS_FrTSyn_00111]{DRAFT} [For **SYNC** or **OFS** messages, if the **ICV** field is 0, there shall be no **ICV** field, i.e., the **SYNC** message shall end with byte 17.] (*RS_TS_20074*)

[SWS_FrTSyn_00010] [Time Synchronization messages contain User Data according to the given message format.] (*RS_TS_20043, RS_TS_20044, RS_TS_20045*)

[SWS_FrTSyn_00011] [User Data shall be read consistently from the incoming Time Synchronization messages.] (*RS_TS_20045*)

[SWS_FrTSyn_00012] [User Data shall be written consistently to outgoing Time Synchronization messages.]

If the number of User Data Fields in a Time Synchronization message is greater than the number of User Data Bytes provided by the StbM, the remaining User Data Fields shall be set to 0 (default value).] (*RS_TS_20045*)

[SWS_FrTSyn_00013] [User Data shall be mapped to the **StbM_UserDataType**, where the byte number given in the message and by the **StbM_UserDataType** shall match (User Byte 0 mapped to **StbM_UserDataType.userByte0** etc.). **StbM_UserDataType.userDataLength** shall be set to the Time Synchronization message type specific number of User Bytes.] (*RS_TS_20045*)

7.3.1 SYNC message

The message layout of the SYNC messages is defined by the following requirements:

- **[SWS_FrTSyn_00014]:** “SYNC message format - not CRC protected, not ICV secured”
- **[SWS_FrTSyn_00015]:** “SYNC message format - CRC protected, not ICV secured”
- **[SWS_FrTSyn_00106]:** “SYNC message format - not CRC protected, ICV secured”
- **[SWS_FrTSyn_00107]:** “SYNC message format - CRC protected, ICV secured”

depending on whether the payload is **CRC** protected and/or **ICV** secured or not.

[SWS_FrTSyn_00014] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x10	Message Type
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id

	3..0	SC	0..15	Sequence Counter
3	7..2	FCNT	0..63	FlexRay Cycle Counter
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6..11		SyncTimeSec		48 bit time value in seconds
12..15		SyncTimeNSec		32 bit time value in nanoseconds

Table 7.1: SYNC message format - not CRC protected, not ICV secured

 ↴([RS_TS_20041](#), [RS_TS_20043](#))

[SWS_FrTSyn_00015] ↵

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x20	Message Type
1		CRC	0..255	Checksum
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
	7..2	FCNT	0..63	FlexRay Cycle Counter
3	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6..11		SyncTimeSec		48 bit time value in seconds
12..15		SyncTimeNSec		32 bit time value in nanoseconds

Table 7.2: SYNC message format - CRC protected, not ICV secured

 ↴([RS_TS_20041](#), [RS_TS_20042](#), [RS_TS_20043](#))

[SWS_FrTSyn_00106]{DRAFT} ↵

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x50	Message Type
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
	7..2	FCNT	0..63	FlexRay Cycle Counter
3	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6..11		SyncTimeSec		48 bit time value in seconds
12..15		SyncTimeNSec		32 bit time value in nanoseconds
16	7	reserved	0	
	6..0	FVL	0..64	FV Length in bits
17		ICVL	0..236	ICV Length in bytes

18		FV		FV
18+FVL in bytes		ICV		ICV

Table 7.3: SYNC message format - not CRC protected, ICV secured

|([RS_TS_20041](#), [RS_TS_20043](#), [RS_TS_20074](#))

[SWS_FrTSyn_00107]{DRAFT} |

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x60	Message Type
1		CRC	0..255	Checksum
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	FCNT	0..63	FlexRay Cycle Counter
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6..11		SyncTimeSec		48 bit time value in seconds
12..15		SyncTimeNSec		32 bit time value in nanoseconds
16	7	reserved	0	
	6..0	FVL	0..64	FV Length in bits
17		ICVL	0..236	ICV Length in bytes
18		FV		FV
18+FVL in bytes		ICV		ICV

Table 7.4: SYNC message format - CRC protected, ICV secured

|([RS_TS_20041](#), [RS_TS_20042](#), [RS_TS_20043](#), [RS_TS_20074](#))

7.3.2 OFS message

The message layout of the OFS messages is defined by the following requirements:

- [SWS_FrTSyn_00079]: “OFS message format - not CRC protected, not ICV secured”
- [SWS_FrTSyn_00080]: “OFS message format - CRC protected, not ICV secured”
- [SWS_FrTSyn_00108]: “OFS message format - not CRC protected, ICV secured”
- [SWS_FrTSyn_00109]: “OFS message format - CRC protected, ICV secured”

depending on whether the payload is [CRC](#) protected and/or [ICV](#) secured or not

[SWS_FrTSyn_00079] |

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x34	Message Type
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	reserved	0	
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	0	
7		reserved	0	
8..11		OfsTimeSec		32 bit offset time value in seconds
12..15		OfsTimeNSec		32 bit offset time value in nanoseconds

Table 7.5: OFS message format - not CRC protected, not ICV secured

」([RS_TS_20041](#), [RS_TS_20044](#))

[SWS_FrTSyn_00080] [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x44	Message Type
1		CRC	0..255	Checksum
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	reserved	0	
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	0	
7		reserved	0	
8..11		OfsTimeSec		32 bit offset time value in seconds
12..15		OfsTimeNSec		32 bit offset time value in nanoseconds

Table 7.6: OFS message format - CRC protected, not ICV secured

」([RS_TS_20041](#), [RS_TS_20042](#), [RS_TS_20044](#))

[SWS_FrTSyn_00108]{DRAFT} [

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x74	Message Type
1		User Byte 2	default: 0	
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	reserved	0	
	1	SGW	0 = SyncToGTM	

	0	reserved	1 = SyncToSubDomain 0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	0	
7		reserved	0	
8..11		OfsTimeSec		32 bit offset time value in seconds
12..15		OfsTimeNSec		32 bit offset time value in nanoseconds
16	7	reserved	0	
	6..0	FVL	0..64	FV Length in bits
17		ICVL	0..236	ICV Length in bytes
18		FV		FV
18+FVL in bytes		ICV		ICV

Table 7.7: OFS message format - not CRC protected, ICV secured

]([RS_TS_20041](#), [RS_TS_20044](#), [RS_TS_20074](#))

[[SWS_FrTSyn_00109](#){DRAFT}]

Byte	Bit Position	Field Name	Field Value Range	Description
0		Type	0x84	Message Type
1		CRC	0..255	Checksum
2	7..4	D	0..15	Time Domain Id
	3..0	SC	0..15	Sequence Counter
3	7..2	reserved	0	
	1	SGW	0 = SyncToGTM 1 = SyncToSubDomain	
	0	reserved	0	
4		User Byte 0	default: 0	
5		User Byte 1	default: 0	
6		reserved	0	
7		reserved	0	
8..11		OfsTimeSec		32 bit offset time value in seconds
12..15		OfsTimeNSec		32 bit offset time value in nanoseconds
16	7	reserved	0	
	6..0	FVL	0..64	FV Length in bits
17		ICVL	0..236	ICV Length in bytes
18		FV		FV
18+FVL in bytes		ICV		ICV

Table 7.8: OFS message format - CRC protected, ICV secured

]([RS_TS_20041](#), [RS_TS_20042](#), [RS_TS_20044](#), [RS_TS_20074](#))

7.4 Acting as Time Master

A Time Master is an entity which is the master for a certain Time Base and which propagates this Time Base to a set of Time Slaves within a certain segment of a communication network, being a source for this Time Base.

If a Time Master is also the owner of the Global Time Base, the Time Base from which all further Time Bases are derived from, then it is the Global Time Master. A Time Gateway typically consists of one Time Master port which is connected to one or more Time Slaves. When mapping time entities to real ECUs it has to be noted, that an ECU could be Time Master (or even Global Time Master) for one Time Base and Time Slave for another Time Base.

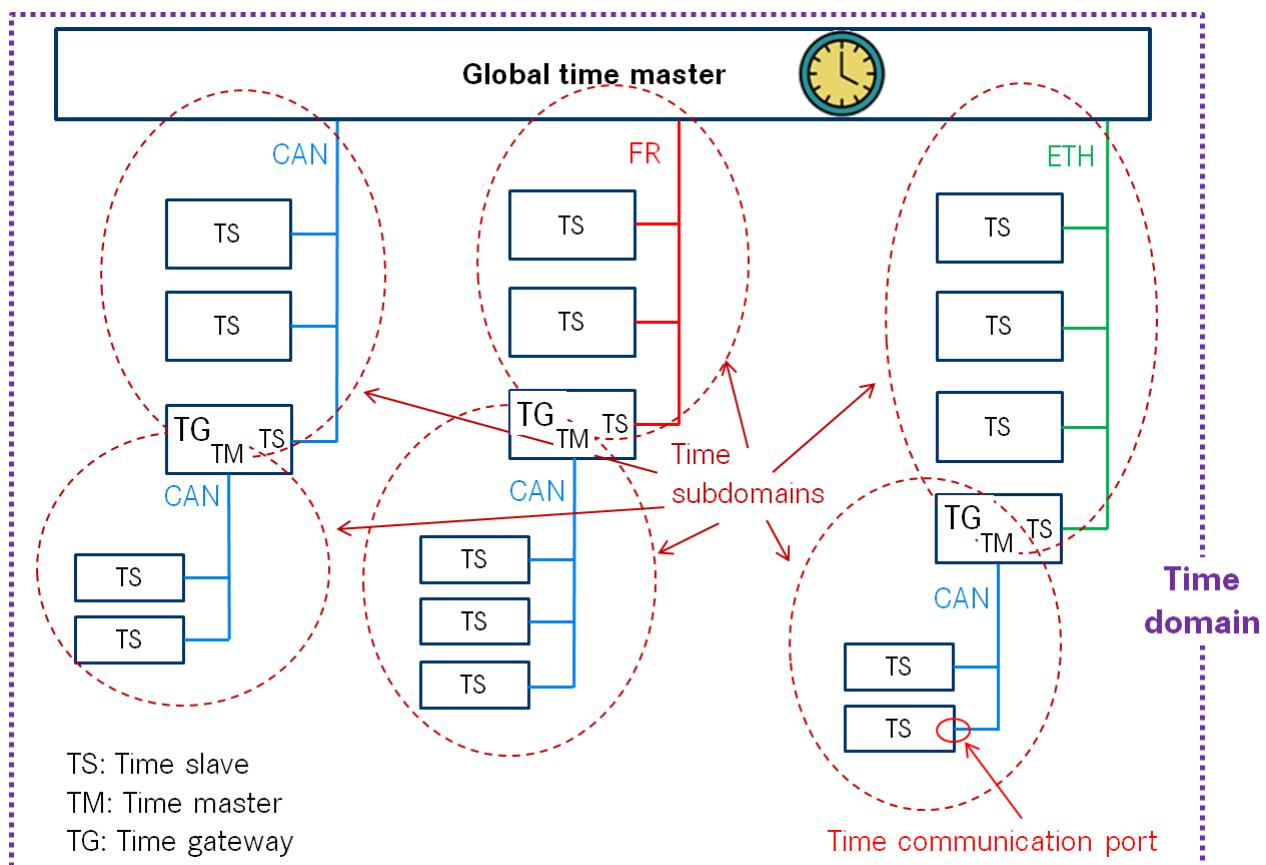


Figure 7.1: Terminology Example

If the FrTSyn is configured as a Time Master for Time Domain, the FrTSyn module checks on each [FrTSyn_MainFunction](#) call the necessity for a Timesync message transmission for that Time Domain.

[Figure 7.2](#) illustrates how FrTSyn determines if (immediate and cyclic) message transmission of a Timesync message is required.

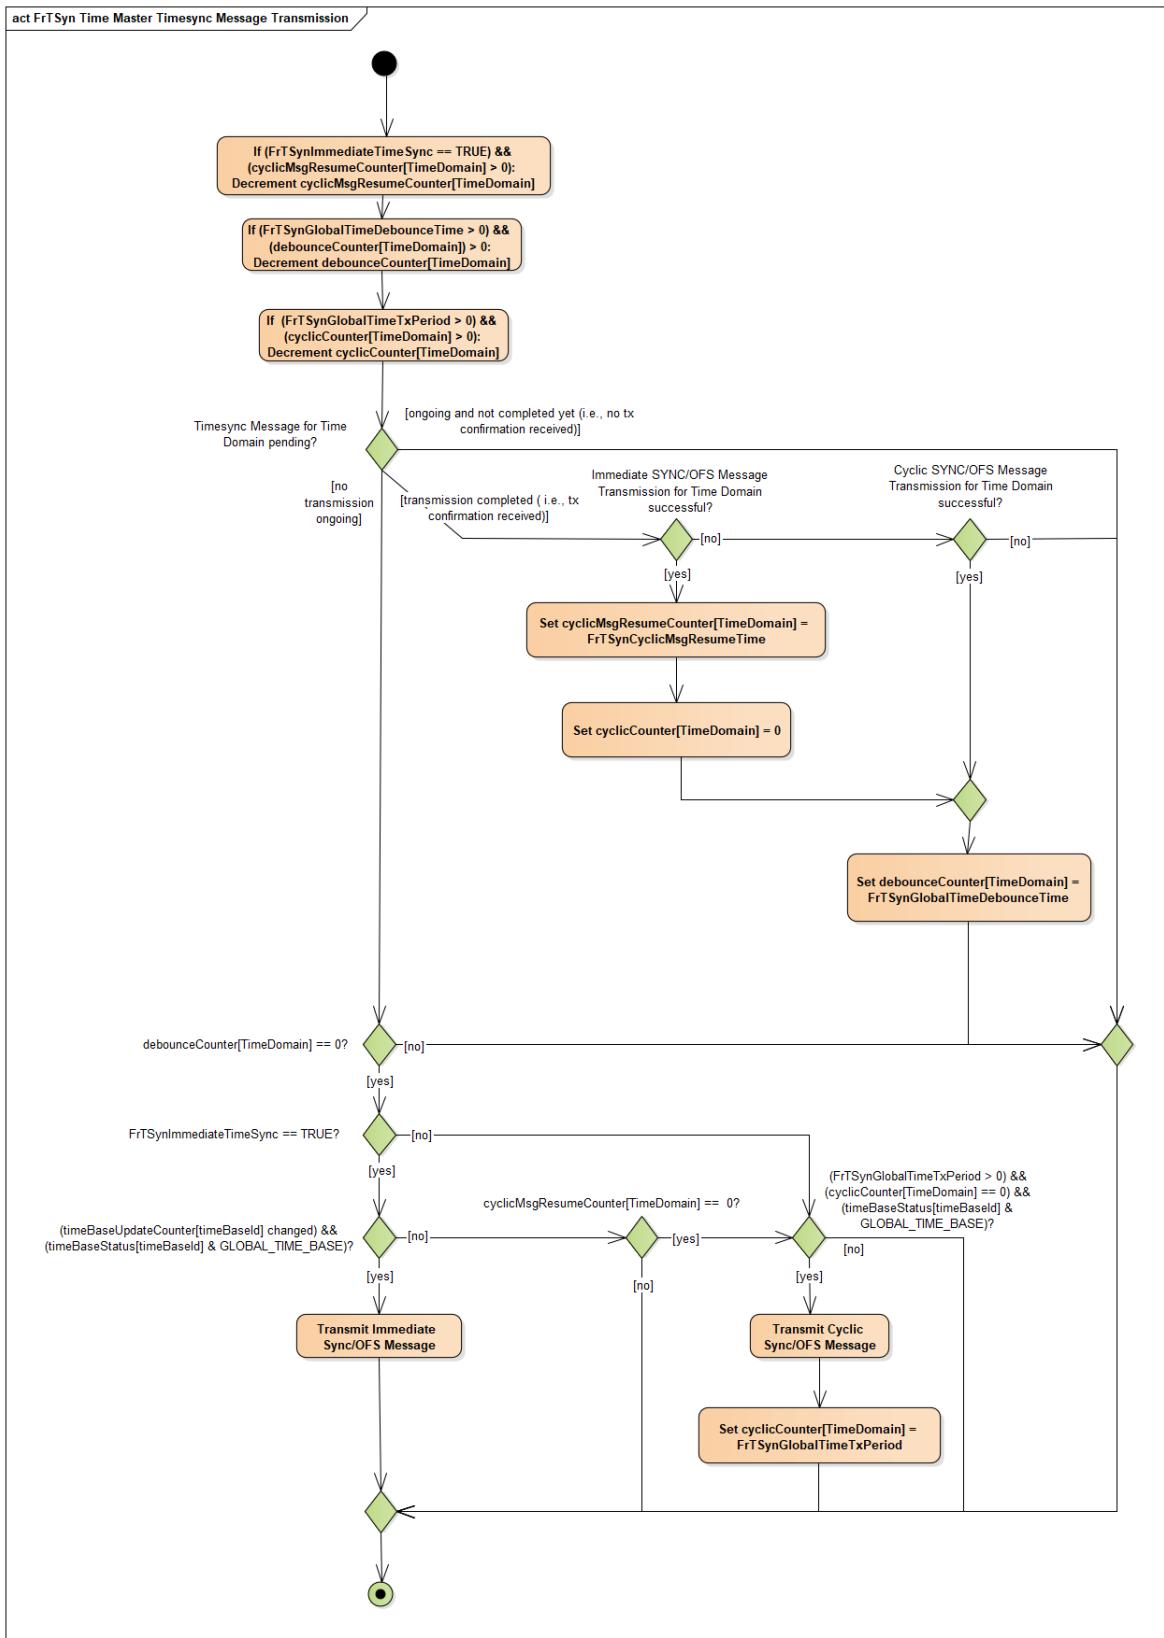


Figure 7.2: Timesync Message Transmission

7.4.1 SYNC message processing

[SWS_FrTSyn_00018] [A Time Synchronization message sequence consists of a SYNC message per Time Domain.] ([RS_TS_20043](#))

Note: Refer to figure 9.1 for the sequence diagram of a Time Master.

[SWS_FrTSyn_00019] [For each configured Time Master (refer to [FrTSynGlobal-TimeMaster](#)) if

- the GLOBAL_TIME_BASE bit within the timeBaseStatus is set
- and [FrTSynGlobalTimeTxPeriod](#) is unequal to 0
- and the associated cyclicMsgResumeCounter is equal or less than 0,

then the FrTSyn module shall periodically transmit SYNC messages with the cycle [FrTSynGlobalTimeTxPeriod](#) including the time value, which will be valid at the start of the next FlexRay cycle 0 and User Data.

The cyclic transmission shall be started in the earliest possible [FrTSyn_MainFunction](#) call once the requirements above are fulfilled.
] ([RS_TS_20039](#), [RS_TS_20043](#))

Note: "earliest possible" means:

- In the next [FrTSyn_MainFunction](#), because GLOBAL_TIME_BASE is set outside the [FrTSyn_MainFunction](#).
- In the current [FrTSyn_MainFunction](#), when switching from immediate to cyclic transmission (because this decision is made inside the [FrTSyn_MainFunction](#)). For details on immediate transmission refer to chapter 7.4.5.

[SWS_FrTSyn_00021] [If

- [FrTSynGlobalTimeTxIcvSecured](#) is set to [ICV_NOT_SUPPORTED](#)
- [FrTSynGlobalTimeTxCrcSecured](#) is set to [CRC_NOT_SUPPORTED](#)

then the message type of the [SYNC](#) message shall be 0x10 (i.e., SYNC message not CRC protected and not ICV authenticated).

If

- [FrTSynGlobalTimeTxIcvSecured](#) is set to [ICV_NOT_SUPPORTED](#)
- [FrTSynGlobalTimeTxCrcSecured](#) is set to [CRC_SUPPORTED](#)

then the message type of the [SYNC](#) message shall be 0x20 (i.e., SYNC message CRC protected and not ICV authenticated).] ([RS_TS_20041](#), [RS_TS_20043](#))

[SWS_FrTSyn_00112]{DRAFT} [If

- [FrTSynGlobalTimeTxIcvSecured](#) is set to [ICV_SUPPORTED](#)
- [FrTSynGlobalTimeTxCrcSecured](#) is set to [CRC_NOT_SUPPORTED](#)

then the message type of the **SYNC** message shall be **0x50** (i.e., SYNC message not CRC protected, but ICV authenticated).

If

- **FrTSynGlobalTimeTxIcvSecured** is set to **ICV_SUPPORTED**
- **FrTSynGlobalTimeTxCrcSecured** is set to **CRC_SUPPORTED**

then the message type of the **SYNC** message shall be **0x60** (i.e., SYNC message CRC protected and ICV authenticated).] (*RS_TS_20041, RS_TS_20043, RS_TS_20074*)

7.4.2 OFS message processing

[SWS_FrTSyn_00022] [An offset message sequence consists of an OFS message per Time Domain.] (*RS_TS_20044*)

[SWS_FrTSyn_00023] [For each configured Time Master (**FrTSynGlobalTimeMaster**) if

- the **GLOBAL_TIME_BASE** bit within the **timeBaseStatus** is set
- and **FrTSynGlobalTimeTxPeriod** is unequal to 0
- and the associated **cyclicMsgResumeCounter** is equal or less than 0,

then the FrTSyn module shall periodically transmit OFS messages with the cycle **FrTSynGlobalTimeTxPeriod** including the Offset Time value and User Data,

The cyclic transmission shall be started in the earliest possible **FrTSyn_MainFunction** call once the requirements above are fulfilled.] (*RS_TS_20039, RS_TS_20044*)

Note: "earliest possible" means:

- In the next **FrTSyn_MainFunction**, because **GLOBAL_TIME_BASE** is set outside the **FrTSyn_MainFunction**.
- In the current **FrTSyn_MainFunction**, when switching from immediate to cyclic transmission (because this decision is made inside the **FrTSyn_MainFunction**). For details on immediate transmission refer to chapter [7.4.5](#)).

[SWS_FrTSyn_00025] [

If

- **FrTSynGlobalTimeTxIcvSecured** is set to **ICV_NOT_SUPPORTED**
- and **FrTSynGlobalTimeTxCrcSecured** is set to **CRC_NOT_SUPPORTED**

then the message type of the **OFS** message shall be **0x34** (i.e., OFS message not CRC protected and not ICV authenticated)

If

- `FrTSynGlobalTimeTxIcvSecured` is set to `ICV_NOT_SUPPORTED`
- and `FrTSynGlobalTimeTxCrcSecured` is set to `CRC_SUPPORTED`

then the message type of the `OFS` message shall be `0x44` (i.e., OFS message CRC protected and ICV not authenticated)

]([RS_TS_20041](#), [RS_TS_20044](#))

[SWS_FrTSyn_00113]{DRAFT} [If

- `FrTSynGlobalTimeTxIcvSecured` is set to `ICV_SUPPORTED`
- and `FrTSynGlobalTimeTxCrcSecured` is set to `CRC_NOT_SUPPORTED`

then the message type of the `OFS` message shall be `0x74` (i.e., OFS message without CRC and ICV authenticated)

If

- `FrTSynGlobalTimeTxIcvSecured` is set to `ICV_SUPPORTED`
- and `FrTSynGlobalTimeTxCrcSecured` is set to `CRC_SUPPORTED`

then the message type of the `OFS` message shall be `0x84` (i.e., OFS message with CRC and ICV authenticated)]([RS_TS_20041](#), [RS_TS_20044](#), [RS_TS_20074](#))

7.4.3 Transmission mode

[SWS_FrTSyn_00026] [If `FrTSyn_SetTransmissionMode(Controller, Mode)` is called and parameter `Mode` equals `FRTSYN_TX_OFF`, all transmit requests from FrTSyn shall be omitted on this FlexRay channel.]([RS_TS_20039](#), [RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00027] [If `FrTSyn_SetTransmissionMode(Controller, Mode)` is called and parameter `Mode` equals `FRTSYN_TX_ON`, all transmit requests from FrTSyn on this FlexRay channel shall be able to be transmitted.]([RS_TS_20039](#), [RS_TS_20043](#), [RS_TS_20044](#))

7.4.4 Debounce Time

The FrTSyn debounces FlexRay Tx PDUs of a Time Master to avoid bursts of Timesync messages on the bus (e.g. if immediate transmission is enabled).

For each Tx PDU the FrTSyn maintains a debounce counter `debounceCounter`. On each transmission of a Timesync message the `debounceCounter` is (re-)loaded by the configured debounce time `FrTSynGlobalTimeDebounceTime`. The `debounceCounter` is decremented in each FrTSyn main cycle. Transmission of the same PDU can only be triggered, if the `debounceCounter` has reached the value 0. Refer also to the overall sequence for the Timesync message transmission in [Figure 7.2](#).

The FrTSyn does not support sharing of PDUs across domains and busses, i.e. same PDU ID shall not be used for different time domains.

[SWS_FrTSyn_00084] {OBSOLETE} [If `FrTSynGlobalTimeDebounceTime` is greater than 0 for a Time Base, FrTSyn shall always do debouncing for the corresponding Timesync PDUs as described below, otherwise FrTSyn shall not do any debouncing.] ([RS_TS_20039](#))

[SWS_FrTSyn_00085] [If for a Time Domain

- `FrTSynGlobalTimeDebounceTime` is greater than 0
- and the corresponding Timesync PDU has been successfully sent,

then the FrTSyn shall set the PDU specific `debounceCounter` to `FrTSynGlobalTimeDebounceTime`.] ([RS_TS_20039](#))

Note: A Timesync PDU is considered to be successfully sent, if

- for a Tx Pdu, which is configured for immediate transmission, `FrIf_Transmit` returns `E_OK`,
- and for a Tx Pdu, which is configured for decoupled transmission, `FrTSyn_TriggerTransmit` returns `E_OK`.

[SWS_FrTSyn_00169] [If for a Time Domain

- `FrTSynGlobalTimeDebounceTime` is greater than 0
- and the `debounceCounter` for the corresponding Timesync PDU is greater than 0,

then the FrTSyn shall decrement the `debounceCounter` value by `FrTSynMainFunctionPeriod` on each invocation of `FrTSyn_MainFunction`.] ([RS_TS_20039](#))

[SWS_FrTSyn_00086] [If for a Time Domain

- `FrTSynGlobalTimeDebounceTime` is greater than 0
- and the `debounceCounter` for the corresponding Timesync PDU is greater than 0
- and a transmission of a TimeSync message is requested,

then FrTSyn shall defer the actual transmission of the Timesync message until `debounceCounter` is equal or less than 0] ([RS_TS_20039](#))

Rationale: While debouncing a new transmission request should not get lost.

[SWS_FrTSyn_00170] [If for a Time Domain

- `FrTSynGlobalTimeDebounceTime` is greater than 0
- and a deferred SYNC or OFS message transmission request is pending

- and a new immediate or cyclic transmission of a SYNC or OFS message is requested,

then the FrTSyn shall discard the pending request for that Time Domain.] ([RS_TS_20039](#))

Rationale: While debouncing there is no queuing of multiple transmission requests. The latest request is the best one.

7.4.5 Immediate Time Synchronization

In addition to the cyclic Timesync message transmission an immediate message transmission might be required. Refer also to the overall sequence for the Timesync message transmission in [Figure 7.2](#).

[SWS_FrTSyn_00087] [If `FrTSynImmediateTimeSync` is set to TRUE for a Time Base, FrTSyn shall check on each `FrTSyn_MainFunction` call by calling `StbM_GetTimeBaseUpdateCounter`, if the `timeBaseUpdateCounter` of the corresponding Time Base has changed.] ([RS_TS_20039](#))

[SWS_FrTSyn_00088] [If

- `FrTSynImmediateTimeSync` is set to TRUE
- and the `timeBaseUpdateCounter` of a Time Base has changed
- and the `GLOBAL_TIME_BASE` bit of the `timeBaseStatus` is set,

then FrTSyn shall trigger an immediate transmission of Time Synchronization messages for the corresponding Time Base.] ([RS_TS_20039](#))

Note: `timeBaseStatus` can be obtained by `StbM_GetTimeBaseStatus` or `StbM_GetCurrentTime`.

Note: The `debounceCounter` as described in [7.4.4](#) shall always be considered.

[SWS_FrTSyn_00089]{OBSOLETE} [If `FrTSynImmediateTimeSync` is set to TRUE, `cyclicMsgResumeCounter` and `FrTSynCyclicMsgResumeTime` shall be considered.] ([RS_TS_20039](#))

In addition to the actual trigger condition for an immediate transmission (refer to [\[SWS_FrTSyn_00088\]](#) above) the parameter `FrTSynCyclicMsgResumeTime` needs to be considered for immediate transmission. Refer also to the trigger condition for cyclic Timesync message transmissions (refer to [\[SWS_FrTSyn_00019\]](#) and [\[SWS_FrTSyn_00023\]](#), respectively).

Two main scenarios are relevant for configuration of `FrTSynCyclicMsgResumeTime`

- With `FrTSynCyclicMsgResumeTime` and `FrTSynGlobalTimeTxPeriod` both being configured as zero, a single shot mode is achieved that is solely triggered by the change of the `timeBaseUpdateCounter`.

- With `FrTSynCyclicMsgResumeTime` greater than `FrTSynGlobalTimeTx-Period` a hold-over scenario in a Time Gateway can be configured:
 - While Timesync messages are received from the Time Master side, the Timesync messages on the sub-busses are only triggered by immediate transmission (cyclic transmission is suspended while `cyclicMsgResumeCounter` is running).
 - If no Timesync messages from the Time Master side are received anymore and a timeout is detected, cyclic transmission takes over (cyclic transmission no longer suspended because `cyclicMsgResumeCounter` has elapsed)
 - If reception of Timesync messages from the Time Master side resumes, the Timesync messages on the sub-busses are again triggered by immediate transmission (cyclic transmission is again suspended by running `cyclicMsgResumeCounter`)

[SWS_FrTSyn_00090] [If for a Time Domain

- `FrTSynImmediateTimeSync` is set to TRUE
- and `FrTSynCyclicMsgResumeTime` is greater than 0
- and an immediate SYNC or OFS message (refer to [\[SWS_FrTSyn_00088\]](#)) is sent,

then the FrTSyn shall set the counter `cyclicMsgResumeCounter` to `FrTSyn-CyclicMsgResumeTime` for the corresponding Time Domain.] ([RS_TS_20039](#))

[SWS_FrTSyn_00093] [If for a Time Domain the `cyclicMsgResumeCounter` is greater than 0, then the FrTSyn shall discard cyclic Timesync message transmission requests for that Time Domain.] ([RS_TS_20039](#))

[SWS_FrTSyn_00161] [If for a Time Domain the `cyclicMsgResumeCounter` is greater than 0, then the FrTSyn shall decrement the `cyclicMsgResumeCounter` of the corresponding Time Domain by `FrTSynMainFunctionPeriod` on each invocation of `FrTSyn_MainFunction`.] ([RS_TS_20039](#))

[SWS_FrTSyn_00091] [If the `cyclicMsgResumeCounter` is decremented to 0 or below, then the FrTSyn shall resume cyclic Timesync message transmission within the `FrTSyn_MainFunction` call by requesting either a SYNC or an OFS message transmission.] ([RS_TS_20039](#))

Note: [\[SWS_FrTSyn_00091\]](#) is to ensure, that the first cyclic transmission is requested in the same main function call in which also `cyclicMsgResumeCounter` reaches 0 (refer to term "earliest possible" main function in [\[SWS_FrTSyn_00019\]](#) and [\[SWS_FrTSyn_00023\]](#)). If the message is actually transmitted also depends on the `debounceCounter`.

7.4.6 Calculation and Assembling of Time Synchronization Messages

This chapter describes the workflow, how the items of a Time Synchronization message will be calculated (1st step) and how the message will be assembled (2nd step).

7.4.6.1 Global Time Calculation

[SWS_FrTSyn_00028] [The transmitter of a Synchronized Time Base (Time Master) shall perform the following steps to distribute the Synchronized Time Base:

1. Retrieve current Synchronized Time Base's Time Tuple as $[T_{SYNC}; T0_{VLT}]$ via `StbM_GetCurrentTime`
2. Protect the following two steps against interruptions:
 - (a) Get `currentCycle` and `currentMacroticks` via `FrIf_GetGlobalTime`
 - (b) Retrieve current Virtual Local Time value as $T1_{VLT}$ via `StbM_GetCurrentVirtualLocalTime`
3. Calculate the (future) time value of the Time Base at the start of the next FlexRay cycle by $T0 = T_{SYNC} + (T1_{VLT} - T0_{VLT}) + (64 - currentCycle) * CycleLength - (CycleLength / MacroticksPerCycle) * currentMacroticks$
4. Calculate `SyncTimeSec` (second portion of $T0$) and `SyncTimeNSec` (nanosecond portion of $T0$)

]([RS_TS_20043](#))

Note: Refer to figure 9.1 for the Time Master sequence of actions.

Note: It is inevitable to retrieve `currentCycle` and `currentMacroticks` of the FlexRay time and $T1_{VLT}$ of the Virtual Local Time in an atomic way, otherwise any delay between them will worsen the precision by the amount of the delay.

Note: If the calculation is done on an integer basis the rounding error of the term ($CycleLength / MacroticksPerCycle$) needs to be minimized. This can be done in multiple ways, e.g., by calculating

- $((CycleLength * currentMacroticks) / MacroticksPerCycle)$ on 64 bit architectures or
- $((((CycleLength * 256) / MacroticksPerCycle) * currentMacroticks) / 256)$ on 32 bit architectures (multiplication by 256 is acceptable for any possible FlexRay parameter configuration)

`CycleLength` and `MacroticksPerCycle` are retrieved via `FrIf_GetCycleLength` and `FrIf_GetMacroticksPerCycle`.

[SWS_FrTSyn_00029] [The transmitter of an Offset Time Base (Time Master) shall perform the following steps to distribute the Offset Time Base:

1. Retrieve current Offset Time via `StbM_GetOffset`
2. Write second portion of the Offset Time to `OfsTimeSec`
3. Write nanosecond portion of the Offset Time to `OfsTimeNSec`

]([RS_TS_20044](#))

7.4.6.2 SGW Calculation

[SWS_FrTSyn_00020] [The `SGW` value (Time Gateway synchronization status) shall be retrieved from the Time Base synchronization status. If the `SYNC_TO_GATEWAY` bit within `timeBaseStatus` is not set the `SGW` value shall be `SyncToGTM`. Otherwise the `SGW` value shall be set to `SyncToSubDomain`.]([RS_TS_20043](#), [RS_TS_20044](#))

7.4.6.3 Sequence Counter Calculation

[SWS_FrTSyn_00030] [A Sequence Counter (`SC`) of 4 bit is representing numbers from 0 to 15 per Time Domain. The Sequence Counter shall be independent between SYNC and OFS messages and shall be incremented by 1 on every transmission request of a SYNC or OFS message. It shall wrap around at 15 to 0 again.]([RS_TS_20041](#), [RS_TS_20043](#), [RS_TS_20044](#))

7.4.6.4 CRC Calculation

[SWS_FrTSyn_00031] [The function `Crc_CalculateCRC8H2F` as defined in [6] shall be used to calculate the `CRC`, if configured.]([RS_TS_20041](#), [RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00035] [The `DataID` shall be calculated as `DataID = DataIDList[SC]`, where `DataIDList` is given by configuration for each message type (refer to `FrTSynGlobalTimeSyncDataIDList` and `FrTSynGlobalTimeOfsDataIDList`).]([RS_TS_20041](#), [RS_TS_20043](#), [RS_TS_20044](#))

Note: A specific `DataID` out of a predefined `DataIDList` ensures the identification of data elements of Time Synchronization messages.

[SWS_FrTSyn_00036] [The `CRC` shall be calculated over Time Synchronization message byte 2 to byte 15 and `DataID`, where byte 2 is applied first, followed by the other bytes in ascending order, and `DataID` last.]([RS_TS_20041](#), [RS_TS_20043](#), [RS_TS_20044](#))

7.4.6.5 ICV Calculation

Refer to the chapter 7.3.13 in StbM [5] for the configuration details of FV referenced in each Time Domain.

[SWS_FrTSyn_00114]{DRAFT} [When:

- the **FV** is referenced (refer `FrTSynIcvGenerationFvIdRef`),
- and the configured truncated **FV** length (`StbMFreshnessValueTruncLength`) is equal to the **FV** length (`StbMFreshnessValueLength`),

the Time Master shall call `StbM_GetTxFreshness` to obtain the **FV** by using the `StbMFreshnessValueId` (referenced via the `FrTSynIcvGenerationFvIdRef` parameter).] (RS_TS_20074)

[SWS_FrTSyn_00115]{DRAFT} [When:

- the **FV** is referenced (refer `FrTSynIcvGenerationFvIdRef`),
- and the configured truncated **FV** length (`StbMFreshnessValueTruncLength`) < **FV** length (`StbMFreshnessValueLength`),

the Time Master shall call `StbM_GetTxFreshnessTruncData` to obtain the **FV** and the truncated **FV** by using the `StbMFreshnessValueId` (referenced via the `FrTSynIcvGenerationFvIdRef` parameter).] (RS_TS_20074)

Note: Having the configured truncated **FV** length (`StbMFreshnessValueTruncLength`) > **FV** length (`StbMFreshnessValueLength`) in StbM is not a valid configuration.

[SWS_FrTSyn_00116]{DRAFT} [When the **FV** is not referenced (refer `FrTSynIcvGenerationFvIdRef`), the Time Master shall not include the **FV** in the **ICV** generation and neither in the **SYNC/OFS** message.] (RS_TS_20074)

[SWS_FrTSyn_00117]{DRAFT} [If `StbM_GetTxFreshness` returns `E_OK`, the Time Master shall construct the **SYNC/OFS** message with **FV** and use the full **FV** in the **ICV** generation.] (RS_TS_20074)

[SWS_FrTSyn_00118]{DRAFT} [If `StbM_GetTxFreshnessTruncData` returns `E_OK`, the Time Master shall construct the **SYNC/OFS** message with truncated **FV** and use the full **FV** in the **ICV** generation.] (RS_TS_20074)

[SWS_FrTSyn_00119]{DRAFT} [When `StbM_GetTxFreshness` or `StbM_GetTxFreshnessTruncData` return a non-recoverable error code (i.e., `E_NOT_OK`), then the Time Master shall:

- stop the **ICV** generation and set the **FVL** and the **ICVL** to 0 in the **SYNC/OFS** message,
- call `Det_ReportRuntimeError` with parameter `ErrorId` set to `FRTSYN_E_FRESHNESSFAILURE` (refer [SWS_FrTSyn_91000]),

- call `IdsM_SetSecurityEventWithContextData` with parameter `EventId` set to `SEV_TSIN_FR_FRESHNESS_NOT_AVAILABLE` (refer [SWS_FrTSyn_00103])

] (RS_TS_20074)

Refer to the chapter 10.2.5 in [7] for the configuration details of `CSM` job used for `ICV` generation.

[SWS_FrTSyn_00120]{DRAFT} [If `FrTSynIcvGenerationBase` for the Time Domain is configured to `ICV_MAC`, the Time Master shall call `Csm_MacGenerate` to generate the `ICV` value.] (RS_TS_20074)

[SWS_FrTSyn_00121]{DRAFT} [If `FrTSynIcvGenerationBase` for the Time Domain is configured to `ICV_SIGNATURE`, the Time Master shall call `Csm_SignatureGenerate` to generate the `ICV` value.] (RS_TS_20074)

Note: The `mode` parameter is intentionally left open for the implementer to choose (i.e. `CRYPTO_OPERATIONMODE_SINGLECALL` would possibly be the best option since it does not require further calls to `CSM`).

The `CSM` job used to generate the `ICV` can be configured to synchronous or asynchronous behavior. The `ICV` generation timeout observation should be disabled, when the `CSM` job used to generate the `ICV`, is configured in synchronous behavior.

[SWS_FrTSyn_00122]{DRAFT} [If `FrTSynIcvGenerationTimeout` is set to 0, the Time Master shall not do `ICV` generation timeout monitoring.] (RS_TS_20074)

[SWS_FrTSyn_00123]{DRAFT} [If:

- `FrTSynIcvGenerationTimeout` is set to any value greater than 0,
- and `Csm_MacGenerate` or `Csm_SignatureGenerate` returns `E_OK`,

the Time Master shall start the `FrTSynIcvGenerationTimeout`.] (RS_TS_20074)

[SWS_FrTSyn_00124]{DRAFT} [If:

- `FrTSynIcvGenerationTimeout` is set to any value greater than 0,
- the callback `FrTSyn_IcvGenerationIndication` is called,

the Time Master shall stop the `FrTSynIcvGenerationTimeout`.] (RS_TS_20074)

[SWS_FrTSyn_00125]{DRAFT} [If one of the following conditions is true:

- the authentication build counter has reached the configuration value `FrTSynTx-AuthenticationBuildAttempts`,
- the verification of the ICV has returned a non-recoverable error such as returning `E_NOT_OK` or `KEY_FAILURE`,
- `FrTSynIcvGenerationTimeout` expires before the notification of the `FrTSyn_IcvGenerationIndication` callback

then the Time Master shall

- stop the **ICV** generation and set the **FVL** and the **ICVL** to 0 in the **SYNC/OFS** message,
- and call **IdsM_SetSecurityEventWithContextData** with parameter **EventId** set to **SEV_TSYN_FR_ICV_GENERATION_FAILED** (refer [**SWS_FrTSyn_00103**]).

](*RS_TS_20074*)

[**SWS_FrTSyn_00126**]{DRAFT} [With the notification of the **FrTSyn_IcvGenerationIndication** callback, the Time Master shall add the generated **ICV** to the **SYNC/OFS** message and transmit it.](*RS_TS_20074*)

[**SWS_FrTSyn_00127**]{DRAFT} [When the FV is referenced (refer **FrTSynIcvGenerationFvIdRef**), then the Time Master shall notify the successful transmission of the **SYNC/OFS** message to **FVM** by calling **StbM_SPduTxConfirmation**.] (*RS_TS_20074*)

[**SWS_FrTSyn_00153**]{DRAFT} [For every transmission of messages of type **0x50**, **0x60**, **0x74** and **0x84**, the Time Master shall maintain an authentication build counter (refer to **FrTSynTxAuthenticationBuildAttempts**).] (*RS_TS_20074*)

[**SWS_FrTSyn_00154**]{DRAFT} [Upon the initial processing of messages of type **0x50**, **0x60**, **0x74** and **0x84** (i.e., upon the first attempt of a freshness value and ICV generation for each received message) the Time Master shall set the authentication build counter to 0.] (*RS_TS_20074*)

[**SWS_FrTSyn_00155**]{DRAFT} [If **StbM_GetTxFreshness** or **StbM_GetTxFreshnessTruncData** return a recoverable error code (e.g., **STBM_E_BUSY**), then the Time Master shall increment the authentication build counter.] (*RS_TS_20074*)

[**SWS_FrTSyn_00156**]{DRAFT} [If **Csm_MacGenerate** or **Csm_SignatureGenerate** return a recoverable error code (e.g., **E_BUSY**, **QUEUE_FULL**), then the Time Master shall increment the authentication build counter.] (*RS_TS_20074*)

[**SWS_FrTSyn_00171**]{DRAFT} [If

- the generation of the authenticated message has failed
- and the authentication build counter has not yet reached the configuration value **FrTSynTxAuthenticationBuildAttempts**,

then the Time Master shall retry the freshness attempt and the ICV calculation in the next call of **FrTSyn_MainFunction**.] (*RS_TS_20074*)

7.4.6.6 Message Assembling

[**SWS_FrTSyn_00037**] [For each transmission of a Time Synchronization message the FrTSyn module shall assemble the message as follows:

- Calculate **SC**
- Copy **currentCycle** (refer to [SWS_FrTSyn_00028]) to **FCNT** (for SYNC message)
- Calculate **SGW**
- Copy all data to the appropriate position within the related message
- Calculate **CRC** (configuration dependent)
- Fetch the **FV** (configuration dependent) and append the **FVL**, **ICVL** and **FV** in the appropriate position within the related message
- Calculate the **ICV** (configuration dependent) and append it in the appropriate position within the related message

]([RS_TS_20043](#), [RS_TS_20044](#), [RS_TS_20074](#))

7.5 Acting as Time Slave

A Time Slave is an entity, which is the recipient for a certain Time Base within a certain segment of a communication network, being a consumer for this Time Base.

7.5.1 SYNC message processing

[SWS_FrTSyn_00038] [The **FrTSyn** shall only accept a SYNC message with Type equal to 0x20 / 0x60 and a correct CRC value if **FrTSynRxCrcValidated** is configured to **CRC_VALIDATED**.]([RS_TS_20042](#), [RS_TS_20043](#))

[SWS_FrTSyn_00039] [The **FrTSyn** shall only accept a SYNC message with Type equal to 0x10 / 0x50 if **FrTSynRxCrcValidated** is configured to **CRC_NOT_VALIDATED**.]([RS_TS_20043](#))

[SWS_FrTSyn_00040] [The **FrTSyn** shall only accept a SYNC message with Type equal to 0x10 / 0x50 or 0x20 / 0x60 if **FrTSynRxCrcValidated** is configured to **CRC_IGNORED**.]([RS_TS_20043](#))

[SWS_FrTSyn_00081] [The **FrTSyn** shall only accept a SYNC message with Type equal to 0x10 / 0x50 or a SYNC message with Type equal to 0x20 / 0x60 and a correct CRC value if **FrTSynRxCrcValidated** is configured to **CRC_OPTIONAL**.]([RS_TS_20042](#), [RS_TS_20043](#))

[SWS_FrTSyn_00128]{DRAFT} [If **FrTSynRxIcvVerificationType** is configured to **ICV_VERIFIED**, **FrTSyn** shall perform ICV verification for SYNC messages with **ICV** value (Message type: 0x50, 0x60).]

The `FrTSyn` shall consider ICV verification as failed for `SYNC` messages without `ICV` (Message type: 0x10, 0x20).] ([RS_TS_20074](#))

[SWS_FrTSyn_00129] {DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_NOT_VERIFIED`, the `FrTSyn` shall not perform the ICV verification and the `SYNC` messages shall not contain an `ICV` value (Message type: 0x10, 0x20).]

The `FrTSyn` shall consider ICV verification as failed for `SYNC` messages with `ICV` (Message type: 0x50, 0x60).] ([RS_TS_20074](#))

[SWS_FrTSyn_00130] {DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_IGNORED`, `FrTSyn` shall not perform the ICV verification.]

The `FrTSyn` shall ignore the `ICV` in `SYNC` messages with `ICV` (Message type: 0x50, 0x60).] ([RS_TS_20074](#))

[SWS_FrTSyn_00131] {DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_OPTIONAL`, the `FrTSyn` shall perform ICV verification for `SYNC` messages with `ICV` (Message type: 0x50, 0x60).]

The `FrTSyn` shall not perform ICV verification for `SYNC` messages without `ICV` (Message type: 0x10, 0x20).] ([RS_TS_20074](#))

[SWS_FrTSyn_00041] [For valid `SYNC` messages a new Time Tuple, consisting of the Global Time value and the associated value of the Virtual Local Time, shall be calculated and forwarded to the StbM module via `StbM_BusSetGlobalTime`.] ([RS_TS_20040](#), [RS_TS_20042](#), [RS_TS_20043](#))

7.5.2 OFS message processing

[SWS_FrTSyn_00042] [The `FrTSyn` shall only accept an OFS message with Type equal to 0x44/0x84 and a correct CRC value if `FrTSynRxCrcValidated` is configured to `CRC_VALIDATED`.] ([RS_TS_20042](#), [RS_TS_20044](#))

[SWS_FrTSyn_00043] [The `FrTSyn` shall only accept an OFS message with Type equal to 0x34/0x74 if `FrTSynRxCrcValidated` is configured to `CRC_NOT_VALIDATED`.] ([RS_TS_20044](#))

[SWS_FrTSyn_00044] [The `FrTSyn` shall only accept an OFS message with Type equal to 0x34/0x74 or 0x44/0x84 if `FrTSynRxCrcValidated` is configured to `CRC_IGNORED`.] ([RS_TS_20044](#))

[SWS_FrTSyn_00082] [The `FrTSyn` shall only accept an OFS message with Type equal to 0x34/0x74 or an OFS message with Type equal to 0x44/0x84 and a correct CRC value if `FrTSynRxCrcValidated` is configured to `CRC_OPTIONAL`.] ([RS_TS_20042](#), [RS_TS_20044](#))

[SWS_FrTSyn_00132]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_VERIFIED`, `FrTSyn` shall perform ICV verification for `OFS` messages with `ICV` value (Message type: 0x74, 0x84).]

The `FrTSyn` shall consider ICV verification as failed for `OFS` messages without `ICV` (Message type: 0x34, 0x44).] ([\(RS_TS_20074\)](#))

[SWS_FrTSyn_00133]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_NOT_VERIFIED`, the `FrTSyn` shall not perform the ICV verification and the `OFS` messages shall not contain an `ICV` value (Message type: 0x34, 0x44).]

The `FrTSyn` shall consider ICV verification as failed for `OFS` messages with `ICV` (Message type: 0x74, 0x84).] ([\(RS_TS_20074\)](#))

[SWS_FrTSyn_00134]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_IGNORED`, `FrTSyn` shall not perform the ICV verification.]

The `FrTSyn` shall ignore the `ICV` in `OFS` messages with `ICV` (Message type: 0x74, 0x84).] ([\(RS_TS_20074\)](#))

[SWS_FrTSyn_00135]{DRAFT} [If `FrTSynRxIcvVerificationType` is configured to `ICV_OPTIONAL`, the `FrTSyn` shall perform ICV verification for `OFS` messages with `ICV` (Message type: 0x74, 0x84).]

The `FrTSyn` shall not perform ICV verification for `OFS` messages without `ICV` (Message type: 0x34, 0x44).] ([\(RS_TS_20074\)](#))

[SWS_FrTSyn_00045] [For valid `OFS` messages a new Time Tuple, consisting of the Offset Time value and the associated value of the Virtual Local Time, shall be calculated (according [[SWS_FrTSyn_00047](#)]) and forwarded to the StbM module via `StbM_BusSetGlobalTime`.] ([\(RS_TS_20040\)](#), [\(RS_TS_20042\)](#), [\(RS_TS_20044\)](#))

7.5.3 Validation and Disassembling of Time Synchronization Messages

This chapter describes the workflow how the items of a Time Synchronization message will be validated (1st step) and how the message will be disassembled (2nd step).

7.5.3.1 Global Time Calculation

[SWS_FrTSyn_00046] [The receiver of a Synchronized Time Base shall perform the following steps to assemble the Synchronized Time Base:

1. On SYNC message RX indication (or in the subsequent MainFunction call) store received time value T0 (`SyncTimeSec`, `SyncTimeNSec`)
2. Protect the following two steps against interruptions:
 - (a) Get `currentCycle` and `currentMacroticks` via `FrIf_GetGlobalTime`

- (b) Retrieve current Virtual Local Time value as T_{VLT} via `StbM_GetCurrentVirtualLocalTime`
3. Calculate Time Tuple $[T_1; T_{VLT}]$ to update the Time Slave's local instance of the Time Base:
- $T_1 = T_0 + (\text{CycleLength} * \text{currentCycle}) + ((\text{CycleLength} / \text{MacrotickPerCycle}) * \text{currentMacroticks})$
 - If `currentCycle` is greater or equal than the retrieved `FCNT` value from the transmitter (Time Master), then the calculated value T_1 shall be subtracted by 64 times the FlexRay cycle duration: $T_1 = T_1 - (\text{CycleLength} * 64)$

]([RS_TS_20043](#))

Note: Refer to figure [9.2](#) for the Time Slave sequence of actions.

Note: It is inevitable to retrieve `currentCycle` and `currentMacroticks` of the FlexRay time and T_{VLT} of the Virtual Local Time atomic, otherwise any delay between them will worsen the precision by the amount of the delay.

Note: In order to minimize rounding errors for the term $(\text{CycleLength} / \text{MacrotickPerCycle})$ in case of integer calculation refer to note below [[SWS_FrTSyn_00028](#)].

[SWS_FrTSyn_00047] [The receiver of an Offset Time Base shall perform the following steps to assemble the Offset Time:

- Get second portion of the Offset Time out of `OfsTimeSec`
- Get nanosecond portion of the Offset Time out of `OfsTimeNSec`
- Retrieve current Virtual Local Time value via `StbM_GetCurrentVirtualLocalTime`


]([RS_TS_20044](#))

7.5.3.2 SGW Calculation

[SWS_FrTSyn_00094] [If the `SGW` value (SYNC and OFS) is set to `SyncToSubDomain`, the `SYNC_TO_GATEWAY` bit within `timeBaseStatus` shall be set to TRUE. Otherwise, it shall be set to FALSE.]([RS_TS_20040](#), [RS_TS_20042](#))

7.5.3.3 Sequence Counter Validation

[Figure 7.3](#) illustrates the Sequence Counter validation of a Time Slave for SYNC and OFS messages.

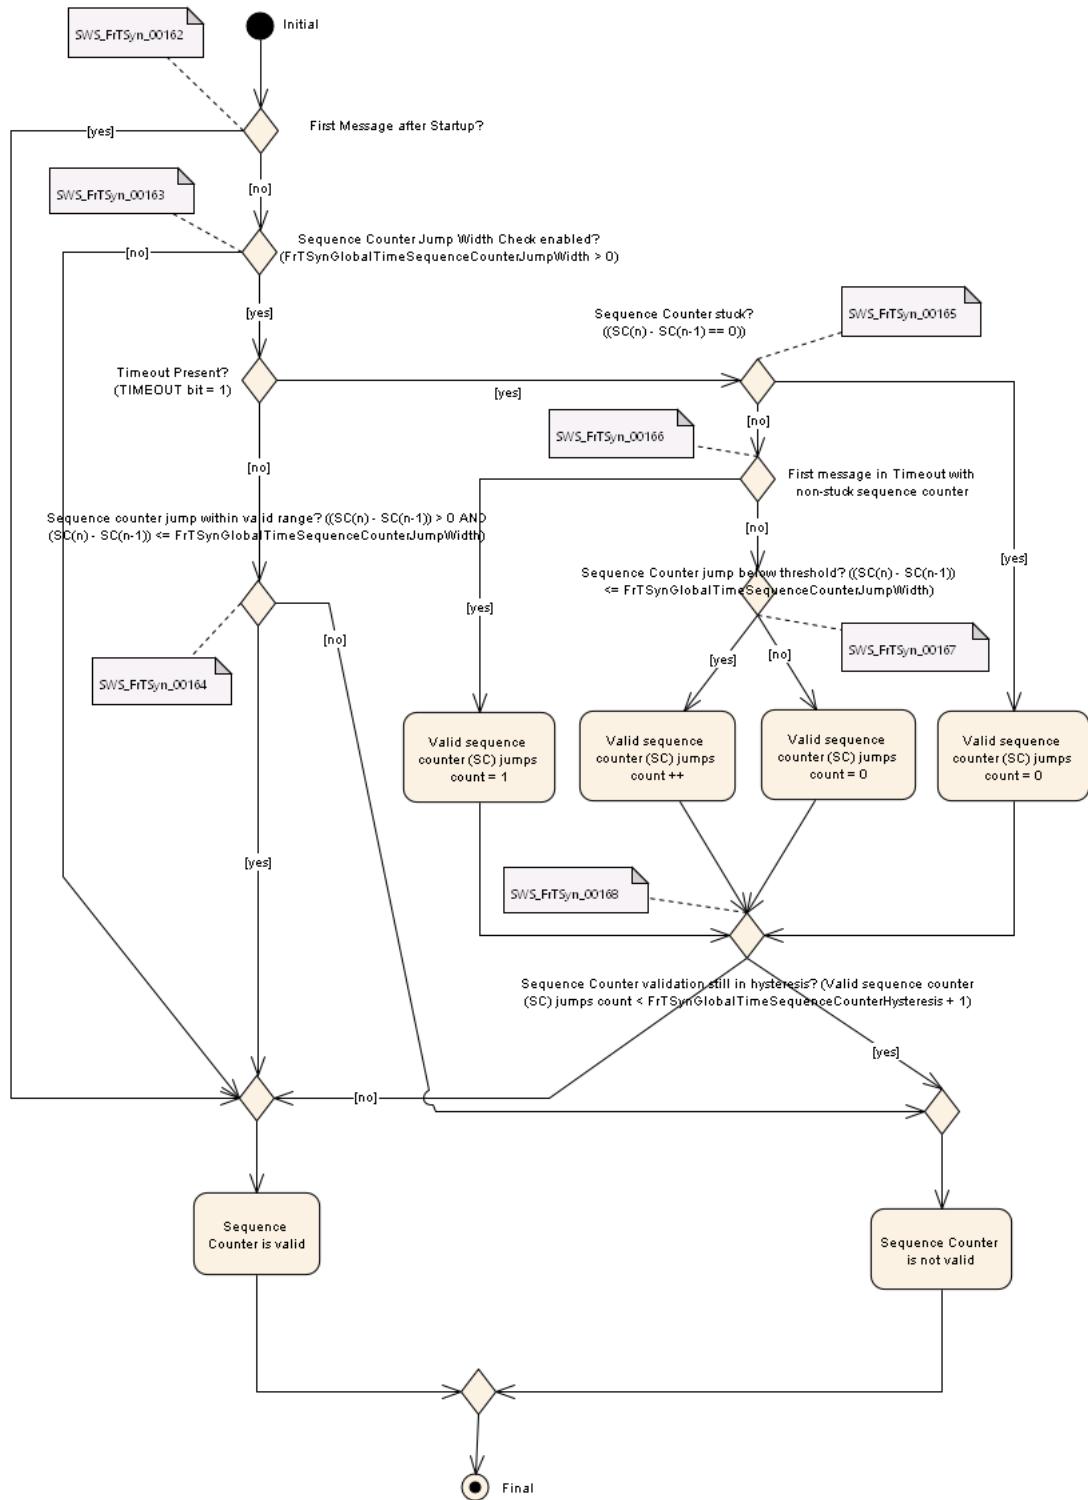
Figure 7.3: Sequence Counter Validation

[SWS_FrTSyn_00048]{OBSOLETE} [The Sequence Counter Jump Width between two consecutive SYNC or two consecutive OFS messages of the same Time Domain shall be greater than 0 and smaller than or equal to [FrTSynGlobalTimeSequence-](#)

[CounterJumpWidth](#). Otherwise a Time Slave shall discard the respective SYNC / OFS message.

If the [FrTSynGlobalTimeSequenceCounterJumpWidth](#) value is set to 0, the Time Slave shall not do Sequence Counter Jump Width checks.] ([RS_TS_20042](#), [RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00049]{OBSOLETE} [Upon reception of a SYNC (or OFS) message a Time Slave shall check the Sequence Counter of the received message per Time Domain against the configured value of [FrTSynGlobalTimeSequenceCounterJumpWidth](#) (according to [\[SWS_FrTSyn_00048\]](#)), unless it is the first message

- at Startup or
- after a Time Base update timeout has been detected ([TIMEOUT](#) bit set in Time Base synchronization status [timeBaseStatus](#)).

] ([RS_TS_20042](#), [RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00102]{OBSOLETE} [While a Time Base Timeout is present ([TIMEOUT](#) bit is set in Time Base synchronization status [timeBaseStatus](#)), [FrTSyn](#) shall discard SYNC (or OFS) messages until it has successfully validated (refer to [\[SWS_FrTSyn_00048\]](#)) 'n' consecutive SYNC (or OFS) messages ('n' is given by the parameter [FrTSynGlobalTimeSequenceCounterHysteresis](#)).] ([RS_TS_20042](#))

[SWS_FrTSyn_00162]{DRAFT} [Upon reception of a SYNC (or OFS) message, if the message is the first SYNC (or OFS) message after startup, then a Time Slave shall consider the Sequence Counter value as valid.] ([RS_TS_20041](#), [RS_TS_20042](#))

Rationale: After startup it makes sense to skip the Sequence Counter check and to allow the Sequence Counter of the Time Slave to synchronize to the one of the Time Master.

[SWS_FrTSyn_00163]{DRAFT} [Upon reception of a SYNC (or OFS) message, if the Sequence Counter check is disabled for SYNC (or OFS) messages (i.e., [FrTSynGlobalTimeSequenceCounterJumpWidth == 0](#)), then a Time Slave shall consider the Sequence Counter value of the SYNC (or OFS) message as valid.] ([RS_TS_20041](#), [RS_TS_20042](#))

[SWS_FrTSyn_00164]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- the message is not the first SYNC (or OFS) message after startup
- and Sequence Counter check is enabled (i.e., [FrTSynGlobalTimeSequenceCounterJumpWidth > 0](#))
- and the Time Domain is not in timeout (i.e., [TIMEOUT](#) bit not set in Time Base synchronization status [timeBaseStatus](#))

then a Time Slave shall check the difference value between the Sequence Counter of the current message and the Sequence Counter of the previous SYNC (or respectively OFS) message.

If the difference value is greater than 0 and less or equal than `FrTSynGlobalTimeSequenceCounterJumpWidth`, a Time Slave shall consider the Sequence Counter value as valid, else as invalid.] ([RS_TS_20041](#), [RS_TS_20042](#))

7.5.3.3.1 Sequence Counter Hysteresis

This chapter specifies how to apply an optional hysteresis (`FrTSynGlobalTimeSequenceCounterHysteresis`, refer to [[SWS_FrTSyn_00168](#)]) to check if the Sequence Counter **value** is valid, i.e., if the Sequence Counter check is actually successful.

This requires that a number of consecutive Sequence Counter **jumps** are valid. Requirements [[SWS_FrTSyn_00165](#)], [[SWS_FrTSyn_00166](#)] and [[SWS_FrTSyn_00167](#)] specify when an individual Sequence Counter jump is considered to be valid.

The hysteresis improves robustness against a scenario with a buggy master implementation or injection of invalid master messages, i.e., when the Sequence Counter increments by more than `FrTSynGlobalTimeSequenceCounterJumpWidth`. In such a scenario (without any hysteresis) a message with any (also invalid) Sequence Counter value would cause the Time Slave to leave the Timeout state although the Sequence Counter is not incremented correctly. A hysteresis avoids this.

[[SWS_FrTSyn_00165](#)]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- Sequence Counter check is enabled (i.e., `FrTSynGlobalTimeSequenceCounterJumpWidth > 0`)
- and the Time Domain is in timeout (i.e., `TIMEOUT` bit set in Time Base synchronization status `timeBaseStatus`)
- and the Sequence Counter is stuck, i.e., the value of the difference between the Sequence Counter of the current message and the Sequence Counter of the previous SYNC (or respectively OFS) message is 0,

then a Time Slave shall consider the Sequence Counter jump as invalid.] ([RS_TS_20041](#), [RS_TS_20042](#))

[[SWS_FrTSyn_00166](#)]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- Sequence Counter check is enabled (i.e., `FrTSynGlobalTimeSequenceCounterJumpWidth > 0`)
- and the Time Domain is in timeout (i.e., `TIMEOUT` bit set in Time Base synchronization status `timeBaseStatus`)
- and the message is the first SYNC (or OFS) message in Timeout for which the Sequence Counter is not stuck,

then a Time Slave shall consider the Sequence Counter jump as valid.] ([RS_TS_20041](#), [RS_TS_20042](#))

Rationale: After a Timeout (e.g., due to a reset or disconnect of the Time Master) it is very likely that the Sequence Counter of the first received Timesync message is out of sync, i.e., the Sequence Counter difference exceeds [FrTSynGlobalTimeSequenceCounterJumpWidth](#). To allow for faster re-synchronization of the Sequence Counter to the Time Master, the Sequence Counter of the first Timesync message is not checked for [FrTSynGlobalTimeSequenceCounterJumpWidth](#). However, a stuck Sequence Counter will always, i.e., also in this situation, be considered as invalid (refer to [[SWS_FrTSyn_00165](#)]).

[[SWS_FrTSyn_00167](#)]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- Sequence Counter check is enabled (i.e., [FrTSynGlobalTimeSequenceCounterJumpWidth > 0](#))
- and the Time Domain is in timeout (i.e., `TIMEOUT` bit set in Time Base synchronization status `timeBaseStatus`)
- and the Sequence Counter is not stuck, i.e., the value of the difference between the Sequence Counter of the current message and the Sequence Counter of the previous message is not 0
- and the message is not the first SYNC (or OFS) message in Timeout for which the Sequence Counter is not stuck,

then a Time Slave shall check if the value of the difference between the Sequence Counter of the current message and the Sequence Counter of the previous SYNC (or respectively OFS) message exceeds the threshold [FrTSynGlobalTimeSequenceCounterJumpWidth](#).

If the difference value exceeds the threshold [FrTSynGlobalTimeSequenceCounterJumpWidth](#), a Time Slave shall consider the Sequence Counter jump as invalid, else as valid.] ([RS_TS_20041](#), [RS_TS_20042](#))

[[SWS_FrTSyn_00168](#)]{DRAFT} [Upon reception of a SYNC (or OFS) message, if

- Sequence counter check is enabled (i.e., [FrTSynGlobalTimeSequenceCounterJumpWidth > 0](#))
- and the Time Domain is in timeout (i.e., `TIMEOUT` bit set in Time Base synchronization status `timeBaseStatus`),

then a Time Slave shall check the number of consecutive valid Sequence Counter jumps (refer to requirements [[SWS_FrTSyn_00165](#)], [[SWS_FrTSyn_00166](#)] and [[SWS_FrTSyn_00167](#)])

If the number of consecutive valid Sequence Counter jumps exceeds the value [FrTSynGlobalTimeSequenceCounterHysteresis](#), a Time Slave shall consider the Sequence Counter value as valid, else as invalid.] ([RS_TS_20041](#), [RS_TS_20042](#))

7.5.3.4 CRC Validation

[SWS_FrTSyn_00050] [The function `Crc_CalculateCRC8H2F` as defined in [6] shall be used to validate the `CRC`, if configured.] (*RS_TS_20042, RS_TS_20043, RS_TS_20044*)

[SWS_FrTSyn_00054] [The `DataID` shall be calculated as `DataID = DataIDList[SC]`, where `DataIDList` is given by configuration for each message Type.] (*RS_TS_20042, RS_TS_20043, RS_TS_20044*)

Note: A specific `DataID` out of a predefined `DataIDList` ensures the identification of data elements of Time Synchronization messages.

[SWS_FrTSyn_00055] [The `CRC` shall be calculated over Time Synchronization message byte 2 to byte 15 and `DataID`, where byte 2 is applied first, followed by the other bytes in ascending order, and `DataID` last.] (*RS_TS_20042, RS_TS_20043, RS_TS_20044*)

7.5.3.5 ICV Verification

Refer to the chapter 7.3.13 in StbM [5] for the configuration details of `FV` referenced in each Time Domain.

[SWS_FrTSyn_00137]{DRAFT} [When the `FV` is referenced (refer `FrTSynIcvVerificationFvIdRef`) and the `FVL` of the received `SYNC/OFS` message is greater than 0, the Time Slave shall call the `StbM_GetRxFreshness` Api to obtain the `FV` by using:

- the `StbMFreshnessValueId` from the reference `FrTSynIcvVerificationFvIdRef`,
- the `StbMTruncatedFreshnessValue` as received in the `FV` field of the `SYNC/OFS` message,
- the `StbMTruncatedFreshnessValueLength` as received in the `FVL` field of the `SYNC/OFS` message,
- the `StbMFreshnessValueLength` from the reference `FrTSynIcvVerificationFvIdRef`,
- the `StbMAuthVerifyAttempts` as the number of failed verification attempts for the current message (ICV verification attempt counter).

] (*RS_TS_20074*)

[SWS_FrTSyn_00138]{DRAFT} [When the `FVL` of the received `SYNC/OFS` message is equal to 0, the Time Slave shall not include the `FV` in the ICV verification.] (*RS_TS_20074*)

[SWS_FrTSyn_00139]{DRAFT} [When the `FV` is not referenced (refer `FrTSynIcvVerificationFvIdRef`) and the `FVL` of the received `SYNC/OFS` message is

greater than 0, the Time Slave shall stop the ICV verification and consider the ICV verification as failed.] (RS_TS_20074)

[SWS_FrTSyn_00140]{DRAFT} [If StbM_GetRxFreshness returns E_OK, the Time Slave shall use the FV in ICV verification.] (RS_TS_20074)

[SWS_FrTSyn_00142]{DRAFT} [If StbM_GetRxFreshness returns a non-recoverable error code (i.e., E_NOT_OK), the Time Slave shall

- consider the ICV verification of the received SYNC/OFS message as failed,
- stop the ICV verification,
- call Det_ReportRuntimeError with parameter ErrorId set to FRTSYN_E_FRESHNESSFAILURE (refer to [SWS_FrTSyn_91000])
- and call IdsM_SetSecurityEventWithContextData with parameter EventId set to SEV_TSYN_FR_FRESHNESS_NOT_AVAILABLE (refer to [SWS_FrTSyn_00103])

] (RS_TS_20074)

Refer to the chapter 10.2.5 in [7] for the configuration details of CSM job used for ICV verification.

[SWS_FrTSyn_00143]{DRAFT} [If FrTSynIcvVerificationBase for the Time Domain is configured to ICV_MAC, the Time Slave shall call Csm_MacVerify to verify the ICV value, using as many bytes as specified in the ICVL.] (RS_TS_20074)

[SWS_FrTSyn_00144]{DRAFT} [If FrTSynIcvVerificationBase for the Time Domain is configured to ICV_SIGNATURE, the Time Slave shall call Csm_SignatureVerify to verify the ICV value, using as many bytes as specified in the ICVL.] (RS_TS_20074)

Note: The mode parameter is intentionally left open for the implementer to choose (i.e. CRYPTO_OPERATIONMODE_SINGLECALL would possibly be the best option since it does not require further calls to CSM).

The CSM job used to generate the ICV can be configured to synchronous or asynchronous behavior.

[SWS_FrTSyn_00145]{DRAFT} [If FrTSynIcvVerificationTimeout is set to 0, then the Time Slave shall not do ICV verification timeout monitoring.] (RS_TS_20074)

[SWS_FrTSyn_00146]{DRAFT} [If Csm_MacVerify or Csm_SignatureVerify return a recoverable error code (e.g., CRYPTO_E_BUSY or CRYPTO_QUEUE_FULL), then the Time Slave shall

- consider the verification of the received SYNC/OFS message as failed
- and increment the ICV authentication build counter for this SYNC/OFS message.

] (RS_TS_20074)

[SWS_FrTSyn_00147]{DRAFT} [If:

- `FrTSynIcvVerificationTimeout` is set to any value greater than 0,
- and `Csm_MacVerify` or `Csm_SignatureVerify` returns `E_OK`,

the Time Slave shall start the `FrTSynIcvVerificationTimeout`.] (*RS_TS_20074*)

[SWS_FrTSyn_00148]{DRAFT} [If:

- `FrTSynIcvVerificationTimeout` is set to any value greater than 0,
- and the `FrTSyn_IcvVerificationIndication` callback is called,

the Time Slave shall stop the `FrTSynIcvVerificationTimeout`.] (*RS_TS_20074*)

[SWS_FrTSyn_00149]{DRAFT} [If one of the following conditions is true:

- the authentication build counter has reached the configuration value `FrTSynRx-AuthenticationBuildAttempts`,
- the ICV verification attempt counter has reached the configuration value `FrTSynIcvVerificationAttempts`,
- the verification of the `ICV` has returned a non-recoverable error such as returning `E_NOT_OK`, or `KEY_FAILURE`,
- the `ICVL` is 0 in the received `SYNC/OFS` message,
- `FrTSynIcvVerificationTimeout` expires before the notification of the `FrTSyn_IcvVerificationIndication` callback

then the Time Slave shall

- stop the ICV verification and consider the ICV verification as failed
- and call `IdsM_SetSecurityEventWithContextData` with parameter `EventId` set to `SEV_TSYN_FR_ICV_VERIFICATION_FAILED` (refer to [\[SWS_FrTSyn_00103\]](#))

] (*RS_TS_20074*)

[SWS_FrTSyn_00157]{DRAFT} [For every reception of messages that require ICV verification the Time Slave shall maintain an authentication build counter (refer `FrTSynRxAuthenticationBuildAttempts`).] (*RS_TS_20074*)

[SWS_FrTSyn_00158]{DRAFT} [Upon the initial processing of messages that require ICV verification (i.e., upon the first attempt of a freshness value and ICV verification for each received message) the Time Slave shall set the authentication build counter to 0.] (*RS_TS_20074*)

[SWS_FrTSyn_00159]{DRAFT} [If `StbM_GetRxFreshness` returns a recoverable error code (e.g., `STBM_E_BUSY`), then the Time Slave shall

- increment the authentication build counter

- and not do ICV verification.

]([RS_TS_20074](#))

[SWS_FrTSyn_00160]{DRAFT} [If

- verification of the authenticated message has failed
- and the authentication build counter has not yet reached the configuration value [FrTSynRxAuthenticationBuildAttempts](#),

then the Time Slave shall retry the freshness attempt and ICV verification in the next call of [FrTSyn_MainFunction](#).]([RS_TS_20074](#))

[SWS_FrTSyn_00172]{DRAFT} [If the verification of the ICV could be successfully executed but the verification failed (e.g. the MAC verification has failed or the key was invalid), then the Time Slave shall

- increment the ICV verification attempt counter
- and set the authentication build counter to 0.

]([RS_TS_20074](#))

Note: Resetting the authentication build counter will prevent dropping the authentication process too early even though ICV verification attempts are still possible.

7.5.3.6 Message Disassembling

[SWS_FrTSyn_00056] [For each received Time Synchronization message the [FrTSyn](#) shall validate the message as follows (all conditions must match):

1. Type matches depending on the [FrTSynRxCrcValidated](#) parameter
2. SC value is valid (refer to requirements [[SWS_FrTSyn_00162](#)] to [[SWS_FrTSyn_00168](#)])
3. D matches to the defined Time Domain range for each Type
4. D matches to one of the configured Time Domains
5. SyncTimeNSec (SYNC message) or OfstTimeNSec (OFS message) matches the defined range of StbM_TimeStampType.nanoseconds.
6. CRC (including DataID) matches depending on the [FrTSynRxCrcValidated](#) parameter.
7. ICV verification is successful, depending on the [FrTSynRxIcvVerificationType](#) parameter.

]([RS_TS_20043](#), [RS_TS_20044](#))

[SWS_FrTSyn_00057] [If the validation of received Time Synchronization message is successful (refer to [[SWS_FrTSyn_00056](#)]), the [FrTSyn](#) shall disassemble the mes-

sage and forward the global time via `StbM_BusSetGlobalTime` to `StbM`.] (RS_TS_-
20042, RS_TS_20043, RS_TS_20044)

[SWS_FrTSyn_00150]{DRAFT} [If the validation of the received Time Synchronization message has failed(refer to [SWS_FrTSyn_00056]), the `FrTSyn` shall discard the message.] (RS_TS_20042, RS_TS_20043, RS_TS_20044)

7.6 Time Recording

7.6.1 Global Time Measurement Support

[SWS_FrTSyn_00092] [On an invocation of `StbM_BusSetGlobalTime` the member `pathDelay` of the `measureDataPtr` structure shall be set to 0.] (RS_TS_00034)

7.6.2 Time Validation

[SWS_FrTSyn_00096] [The `FrTSyn` shall support Time Validation, if `FrTSyn-TimeValidationSupport` set to TRUE.] (RS_TS_00034)

[SWS_FrTSyn_00097] [

If

- `FrTSynTimeValidationSupport` is enabled and
- `FrTSynEnableTimeValidation` for the Time Domain is enabled

`FrTSyn` shall do time recording for Time Validation for that Time Domain.
] (RS_TS_00034)

[SWS_FrTSyn_00098] [

If

- time recording for Time Validation is enabled for a Time Domain (refer to [SWS_FrTSyn_00096] and [SWS_FrTSyn_00097]) and
- `FrTSyn` is configured as Time Slave for that Time Domain,

`FrTSyn` shall call `StbM_FrSetSlaveTimingData` upon successful reception of a SYNC message.

`StbM_FrSetSlaveTimingData` shall be called after `StbM_BusSetGlobalTime`.] (RS_TS_00034)

Note: `StbM_BusSetGlobalTime` shall be called first, because it updates the Sync-local Time Tuple (refer to [5]), which is required by `StbM_FrSetSlaveTimingData`. Refer to figure 9.2 for the overall sequence of API calls for a Time Slave.

[SWS_FrTSyn_00099] [Upon invocation of `StbM_FrSetSlaveTimingData` `FrTSyn` shall pass following values

- the Sequence Counter as received in the SYNC message,
- the segment id of the physical channel on which the SYNC message has been received (refer to parameter `FrTSynGlobalTimeNetworkSegmentId`)
- `currentCycle` and `currentMacroticks` and `FCNT` as read upon reception of the SYNC message (refer to step 2 in [[SWS_FrTSyn_00046](#)]),
- `CycleLength` and `MacrotickDuration`
- the Sync ingress timestamp $T_{1_{VLT}}$ as retrieved in step 1 in [[SWS_FrTSyn_00046](#)])
- T_0 as received in the SYNC message (refer to step 1 in [[SWS_FrTSyn_00046](#)]),

by the parameter `measureDataPtr`.

Struct members

- `measureDataPtr` → `referenceLocalTimestamp` and
- `measureDataPtr` → `referenceGlobalTimestampSec`

shall be passed as 0.] ([RS_TS_00034](#))

Note: MacrotickDuration is calculated as `CycleLength / MacroticksPerCycle`

Note: The `FrTSyn` passes 0 to avoid undefined values. The structure members `referenceLocalTimestamp` and `referenceGlobalTimestampSec` will be set by the `StbM_StbM_FrSetSlaveTimingData` internally (refer to [[SWS_StbM_00471](#)] in [5]).

[[SWS_FrTSyn_00100](#)] [

If

- time recording for Time Validation is enabled for a Time Domain (refer to [[SWS_FrTSyn_00096](#)] and [[SWS_FrTSyn_00097](#)]) and
- `FrTSyn` is configured as Time Master for that Time Domain,

`FrTSyn` shall call `StbM_FrSetMasterTimingData` upon successful transmission of a SYNC message.] ([RS_TS_00034](#))

Note: Refer to figure 9.1 for the overall sequence of API calls for a Time Master.

[[SWS_FrTSyn_00101](#)] [Upon invocation of `StbM_FrSetMasterTimingData` `FrTSyn` shall pass the following data

- the Sequence Counter as sent in the SYNC message
- the segment id of the physical channel on which the SYNC message has been sent (refer to parameter `FrTSynGlobalTimeNetworkSegmentId`)
- `currentCycle` and `currentMacroticks` read upon construction of the Sync message (refer to step 2 in [[SWS_FrTSyn_00028](#)]),

- cycleLength and macrotickDuration
- the reference timestamp T1_{VLT} (refer to step 2 In [[SWS_FrTSyn_00028](#)]),
- T0 as sent in the SYNC message (refer to step 3 In [[SWS_FrTSyn_00028](#)]),
 by the parameter measureDataPtr.] ([RS_TS_00034](#))

7.7 Security Events

[SWS_FrTSyn_00105]{DRAFT} [If security event reporting has been enabled for the FrTSyn module (`FrTSynEnableSecurityEventReporting = true`) the respective security events shall be reported to the IdsM [8] via the interfaces defined in BSWGeneral [3].] ([RS_Ids_00810](#))

The following table lists the security events which are standardized for the FrTSyn together with their trigger conditions.

[SWS_FrTSyn_00103] Security events for FrTSyn [

Name	Description	ID
SEV_TSYN_FR_ICV_GENERATION_FAILED	ICV generation for a Sync/OFS message has failed	70
SEV_TSYN_FR_ICV_VERIFICATION_FAILED	ICV verification of a received Sync/OFS message has failed	71
SEV_TSYN_FR_FRESHNESS_NOT_AVAILABLE	Failed to get freshness value from FvM	72

] ([RS_Ids_00810](#))

The following table describes the context data which shall be reported for the respective security events:

[SWS_FrTSyn_00104]{DRAFT} Context data of respective Security events of FrT Syn [

Security Event	Context Data
SEV_TSYN_FR_ICV_GENERATION_FAILED	Context Data (1 byte) - GlobalTimeDomainId
SEV_TSYN_FR_ICV_VERIFICATION_FAILED	Context Data (1 byte) - GlobalTimeDomainId
SEV_TSYN_FR_FRESHNESS_NOT_AVAILABLE	Context Data (1 byte) - GlobalTimeDomainId

] ([RS_Ids_00810](#))

7.8 Error Classification

Section 7.2 "Error Handling" of the document "General Specification of Basic Software Modules" [3] describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

7.8.1 Development Errors

[SWS_FrTSyn_00059] Definition of development errors in module FrTSyn [

Type of error	Related error code	Error value
API service called with wrong PDU or SDU.	FRTSYN_E_INVALID_PDUID	0x01
API service used in un-initialized state	FRTSYN_E_UNINIT	0x20
A pointer is invalid	FRTSYN_E_NULL_POINTER	0x21
FrTSyn initialization failed	FRTSYN_E_INIT_FAILED	0x22
API called with invalid parameter	FRTSYN_E_PARAM	0x23
Invalid Controller index	FRTSYN_E_INV_CTRL_IDX	0x24

] (SRS_BSW_00385)

7.8.2 Runtime Errors

[SWS_FrTSyn_91000] Definition of runtime errors in module FrTSyn [

Type of error	Related error code	Error value
No FV available from the FVM	FRTSYN_E_FRESHNESSFAILURE	0x01

] (SRS_BSW_00385)

7.8.3 Transient Faults

There are no transient faults.

7.8.4 Production Errors

There are no production errors.

7.8.5 Extended Production Errors

There are no extended production errors.

8 API specification

8.1 API

8.1.1 Imported types

In this section all types included from the following modules are listed:

[SWS_FrTSyn_00060] Definition of imported datatypes of module FrTSyn [

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
ComStack_Types	ComStack_Types.h	PduldType
	ComStack_Types.h	PdulInfoType
	ComStack_Types.h	PduLengthType
Csm	Rte_Csm_Type.h	Crypto_OperationModeType
	Rte_Csm_Type.h	Crypto_ResultType
	Rte_Csm_Type.h	Crypto_VerifyResultType
Eth	Eth.h	Eth_RateDeviationStatusType (draft)
	Eth.h	Eth_RateDeviationType (draft)
Frlf	Frlf.h	Frlf_StateType
IdsM	IdsM_Types.h	IdsM_SecurityEventIdType
StbM	Rte_StbM_Type.h	StbM_FrTimeMasterMeasurementType
	Rte_StbM_Type.h	StbM_FrTimeSlaveMeasurementType
	Rte_StbM_Type.h	StbM_SynchronizedTimeBaseType
	Rte_StbM_Type.h	StbM_TimeBaseStatusType
	Rte_StbM_Type.h	StbM_TimeStampShortType
	Rte_StbM_Type.h	StbM_TimeStampType
	Rte_StbM_Type.h	StbM_TimeTupleType
	Rte_StbM_Type.h	StbM_UserDataType
	StbM.h	StbM_MeasurementType
	StbM.h	StbM_VirtualLocalTimeType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

] (RS_TS_20043)

8.1.2 Type definitions

8.1.2.1 FrTSyn_ConfigType

[SWS_FrTSyn_00061] Definition of datatype FrTSyn_ConfigType [

Name	FrTSyn_ConfigType		
Kind	Structure		
Elements	implementation specific		
	Type	–	
	Comment	–	
Description	<p>This is the base type for the configuration of the Time Synchronization over FlexRay.</p> <p>A pointer to an instance of this structure will be used in the initialization of the Time Synchronization over FlexRay.</p> <p>The content of this structure is defined in chapter 10 Configuration specification.</p>		
Available via	FrTSyn.h		

] (RS_TS_20043)

8.1.2.2 FrTSyn_TransmissionModeType

[SWS_FrTSyn_00062] Definition of datatype FrTSyn_TransmissionModeType [

Name	FrTSyn_TransmissionModeType		
Kind	Enumeration		
Range	FRTSYN_TX_OFF	–	Transmission Disabled
	FRTSYN_TX_ON	–	Transmission Enabled
Description	Handles the enabling and disabling of the transmission mode		
Available via	FrTSyn.h		

] (RS_TS_20043)

8.1.3 Function definitions

8.1.3.1 FrTSyn_Init

[SWS_FrTSyn_00063] Definition of API function FrTSyn_Init [

Service Name	FrTSyn_Init
Syntax	<pre>void FrTSyn_Init (const FrTSyn_ConfigType* configPtr)</pre>
Service ID [hex]	0x01
Sync/Async	Synchronous
Reentrancy	Non Reentrant





Parameters (in)	configPtr	Pointer to selected configuration structure
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This function initializes the Time Synchronization over FlexRay.	
Available via	FrTSyn.h	

]([RS_TS_20043](#))

See section [7.2.1](#) for details.

8.1.3.2 FrTSyn_GetVersionInfo

[SWS_FrTSyn_00064] Definition of API function FrTSyn_GetVersionInfo]

Service Name	FrTSyn_GetVersionInfo	
Syntax	<pre>void FrTSyn_GetVersionInfo (Std_VersionInfoType* versioninfo)</pre>	
Service ID [hex]	0x02	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	versioninfo	Pointer to where to store the version information of this module.
Return value	None	
Description	Returns the version information of this module.	
Available via	FrTSyn.h	

]([RS_TS_20043](#))

8.1.3.3 FrTSyn_SetTransmissionMode

[SWS_FrTSyn_00065] Definition of API function FrTSyn_SetTransmissionMode]

Service Name	FrTSyn_SetTransmissionMode	
Syntax	<pre>void FrTSyn_SetTransmissionMode (uint8 CtrlIdx, FrTSyn_TransmissionModeType Mode)</pre>	
Service ID [hex]	0x03	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	CtrlIdx	Index of the FlexRay channel
	Mode	FRTSYN_TX_OFF FRTSYN_TX_ON



△

Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	This API is used to turn on and off the TX capabilities of the FrTSyn.
Available via	FrTSyn.h

」(RS_TS_20043)

[SWS_FrTSyn_00095] [The function `FrTSyn_SetTransmissionMode` shall inform the `Det`, if development error detection is enabled (`FrTSynDevErrorDetect` is set to TRUE) and if function call has failed because of the following reasons:

- Invalid CtrlIdx (`FRTSYN_E_INV_CTRL_IDX`)
- Invalid Mode (`FRTSYN_E_PARAM`)

」(SRS_BSW_00323, SRS_BSW_00337)

8.1.4 Call-back notifications

This is a list of functions provided for other modules.

8.1.4.1 FrTSyn_RxIndication

[SWS_FrTSyn_00066] Definition of callback function `FrTSyn_RxIndication` [

Service Name	FrTSyn_RxIndication	
Syntax	<pre>void FrTSyn_RxIndication (PduldType RxPduId, const PduInfoType* PduInfoPtr)</pre>	
Service ID [hex]	0x42	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
Parameters (in)	RxPduld	ID of the received PDU.
	PduInfoPtr	Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Indication of a received PDU from a lower layer communication interface module.	
Available via	FrTSyn.h	

」(RS_TS_20043)

Note: The callback function `FrTSyn_RxIndication` called by the `FrIf` module and implemented by the `FrTSyn` module. It is called in case of a receive indication event of the `FR` Driver.

[SWS_FrTSyn_00067] [The callback function `FrTSyn_RxIndication` shall inform the `Det`, if development error detection is enabled `FrTSynDevErrorDetect` is set to `TRUE`) and if function call has failed because of the following reasons:

- Invalid `RxPduId` (`FRTSYN_E_INVALID_PDUID`)
- `PduInfoPtr` or `SduDataPtr` equals `NULL_PTR` (`FRTSYN_E_NULL_POINTER`)

](*SRS_BSW_00323, SRS_BSW_00337*)

Caveats of `FrTSyn_RxIndication`

- The `FrTSyn` module is initialized correctly.

8.1.4.2 FrTSyn_TriggerTransmit

[SWS_FrTSyn_00069] Definition of callback function FrTSyn_TriggerTransmit [

Service Name	FrTSyn_TriggerTransmit	
Syntax	<pre>Std_ReturnType FrTSyn_TriggerTransmit (PduIdType TxPduId, PduInfoType* PduInfoPtr)</pre>	
Service ID [hex]	0x41	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different Pdulds. Non reentrant for the same Pduld.	
Parameters (in)	TxPduld	ID of the SDU that is requested to be transmitted.
Parameters (inout)	PduInfoPtr	Contains a pointer to a buffer (<code>SduDataPtr</code>) to where the SDU data shall be copied, and the available buffer size in <code>SduLength</code> . On return, the service will indicate the length of the copied SDU data in <code>SduLength</code> .
Parameters (out)	None	
Return value	Std_ReturnType	<code>E_OK</code> : SDU has been copied and <code>SduLength</code> indicates the number of copied bytes. <code>E_NOT_OK</code> : No SDU data has been copied. <code>PduInfoPtr</code> must not be used since it may contain a NULL pointer or point to invalid data.
Description	Within this API, the upper layer module (called module) shall check whether the available data fits into the buffer size reported by <code>PduInfoPtr->SduLength</code> . If it fits, it shall copy its data into the buffer provided by <code>PduInfoPtr->SduDataPtr</code> and update the length of the actual copied data in <code>PduInfoPtr->SduLength</code> . If not, it returns <code>E_NOT_OK</code> without changing <code>PduInfoPtr</code> .	
Available via	<code>FrTSyn.h</code>	

](*RS_TS_20043*)

Note: The function `FrTSyn_TriggerTransmit` might be called by the `FrTSyn` module's environment in an interrupt context.

[SWS_FrTSyn_00070] [The callback function `FrTSyn_TriggerTransmit` shall inform the `Det`, if development error detection is enabled `FrTSynDevErrorDetect` is set to `TRUE`) and if function call has failed because of the following reasons:

- Invalid `TxPduId` (`FRTSYN_E_INVALID_PDUID`)

- `PduInfoPtr` or `SduDataPtr` equals `NULL_PTR` (`FRTSYN_E_NULL_POINTER`)

](*SRS_BSW_00323, SRS_BSW_00337*)

8.1.4.3 FrTSyn_IcvGenerationIndication

[SWS_FrTSyn_91001]{DRAFT} Definition of API function FrTSyn_IcvGenerationIndication [

Service Name	FrTSyn_IcvGenerationIndication (draft)	
Syntax	<pre>void FrTSyn_IcvGenerationIndication (uint32 jobId, Crypto_ResultType result)</pre>	
Service ID [hex]	0x5	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	jobId	JobID of the operation that caused the callback.
	result	Contains the result of the cryptographic operation.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	By this API service the FrTSyn gets an indication and the result of ICV generation. Tags: atp.Status=draft	
Available via	FrTSyn.h	

](*RS_TS_20074*)

[SWS_FrTSyn_00151]{DRAFT} [The function `FrTSyn_IcvGenerationIndication` shall inform the `Det`, if development error detection is enabled (`FrTSynDevErrorDetect` is set to `TRUE`) and if the function call has failed because of the following reasons:

- `jobId` is invalid (`FRTSYN_E_PARAM`)

](*SRS_BSW_00323, SRS_BSW_00337*)

8.1.4.4 FrTSyn_IcvVerificationIndication

[SWS_FrTSyn_91002]{DRAFT} Definition of API function FrTSyn_IcvVerificationIndication

Service Name	FrTSyn_IcvVerificationIndication (draft)	
Syntax	<pre>void FrTSyn_IcvVerificationIndication (uint32 jobId, Crypto_ResultType result)</pre>	
Service ID [hex]	0x6	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	jobId	JobID of the operation that caused the callback.
	result	Contains the result of the cryptographic operation.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	By this API service the FrTSyn gets an indication and the result of ICV verification. Tags: atp.Status=draft	
Available via	FrTSyn.h	

](RS_TS_20074)

[SWS_FrTSyn_00152]{DRAFT} [The function [FrTSyn_IcvVerificationIndication](#) shall inform the [Det](#), if development error detection is enabled ([FrTSyn-DevErrorDetect](#) is set to [TRUE](#)) and if the function call has failed because of the following reasons:

- jobId is invalid ([FRTSYN_E_PARAM](#))

](SRS_BSW_00323, SRS_BSW_00337)

8.1.5 Scheduled functions

These functions are directly called by the Basic Software Scheduler. The following functions shall have no return value and no parameters. All functions shall be non-reentrant.

8.1.5.1 FrTSyn_MainFunction

[SWS_FrTSyn_00071] Definition of scheduled function FrTSyn_MainFunction [

Service Name	FrTSyn_MainFunction
Syntax	void FrTSyn_MainFunction (void)
Service ID [hex]	0x04
Description	Main function for cyclic call / resp. Timesync message transmission
Available via	FrTSyn_SchM.h

] (RS_TS_20043)

[SWS_FrTSyn_00072] [The frequency of invocations of FrTSyn_MainFunction is determined by the configuration parameter FrTSynMainFunctionPeriod.] (RS_TS_20043)

8.1.6 Expected Interfaces

In this section, all interfaces required by other modules are listed.

8.1.6.1 Mandatory Interfaces

This section defines all interfaces that are required to fulfill a mandatory functionality of the module.

[SWS_FrTSyn_00074] Definition of mandatory interfaces in module FrTSyn [

API Function	Header File	Description
Frlf_GetCycleLength	Frlf.h	This API returns the configured time of the configuration parameter "GdCycle" in nanoseconds for the FlexRay controller with index Frlf_Ctrldx.
Frlf_GetGlobalTime	Frlf.h	Wraps the FlexRay Driver API function Fr_GetGlobalTime(). Important Note: Frlf_GetGlobalTime may be called within an exclusive area.
Frlf_GetMacroticksPerCycle	Frlf.h	Retrieves the amount of Macroticks per Cycle
Frlf_GetState	Frlf.h	Get current Frlf state.
StbM_GetCurrentVirtualLocalTime	StbM.h	Returns the Virtual Local Time of the referenced Time Base.

] (RS_TS_20043)

8.1.6.2 Optional Interfaces

This section defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS_FrTSyn_00075] Definition of optional interfaces in module FrTSyn ▾

API Function	Header File	Description
Crc_CalculateCRC8H2F	Crc.h	This service makes a CRC8 calculation with the Polynomial 0x2F on Crc_Length
Csm_MacGenerate	Csm.h	Uses the given data to perform a MAC generation and stores the MAC in the memory location pointed to by the MAC pointer.
Csm_MacVerify	Csm.h	Verifies the given MAC by comparing if the MAC is generated with the given data.
Csm_SignatureGenerate	Csm.h	Uses the given data to perform the signature calculation and stores the signature in the memory location pointed by the result pointer.
Csm_SignatureVerify	Csm.h	Verifies the given MAC by comparing if the signature is generated with the given data.
Det_ReportError	Det.h	Service to report development errors.
Det_ReportRuntimeError	Det.h	Service to report runtime errors. If a callout has been configured then this callout shall be called.
Frlf_Transmit	Frlf.h	Requests transmission of a PDU.
IdsM_SetSecurityEventWithContextData	IdsM.h	This API is the application interface to report security events with context data to the IdsM.
StbM_BusSetGlobalTime	StbM.h	Allows the Time Base Provider Modules to forward the Rx Time Tuple to the StbM.
StbM_FrSetMasterTimingData (draft)	StbM_FrTSyn.h	Provides Flexray Timesyn module specific data for a Time Master to the StbM. Tags: atp.Status=draft
StbM_FrSetSlaveTimingData (draft)	StbM_FrTSyn.h	Allows the FrTSyn Module to forward Flexray specific details to the StbM. Tags: atp.Status=draft
StbM_GetCurrentTime	StbM.h	Returns a time tuple (Local time, Global time and Timebase status) and user data details Note: This API shall be called with locked interrupts / within an Exclusive Area to prevent interruption (i.e., the risk that the time stamp is outdated on return of the function call).
StbM_GetOffset	StbM.h	Allows the Timesync Modules to get the current Offset Time and User Data.
StbM_GetRxFreshness (draft)	StbM.h	This interface is used by the StbM to query the current freshness value. Tags: atp.Status=draft
StbM_GetTimeBaseStatus	StbM.h	Returns detailed status information for a Synchronized (or Pure Local) Time Base and, if called for an Offset Time Base, for the Offset Time Base and the underlying Synchronized Time Base.
StbM_GetTimeBaseUpdateCounter	StbM.h	Allows the Timesync Modules to detect, whether a Time Base should be transmitted immediately in the subsequent <Bus>TSyn_MainFunction() cycle.
StbM_GetTxFreshness (draft)	StbM.h	This API returns the freshness value from the Most Significant Bits in the first byte, of the Freshness array, in big endian format. Tags: atp.Status=draft



△

API Function	Header File	Description
StbM_GetTxFreshnessTruncData (draft)	StbM.h	This interface is used by the StbM to obtain the current freshness value. The interface function provides also the truncated freshness transmitted in the secured time sync message. Tags: atp.Status=draft
StbM_SPduTxConfirmation (draft)	StbM.h	This interface is used by the StbM to indicate that the Secured Time Synchronization Message has been initiated for transmission. Tags: atp.Status=draft

] ([RS_TS_20043](#))

9 Sequence diagrams

9.1 FlexRay Time Synchronization (Time Master)

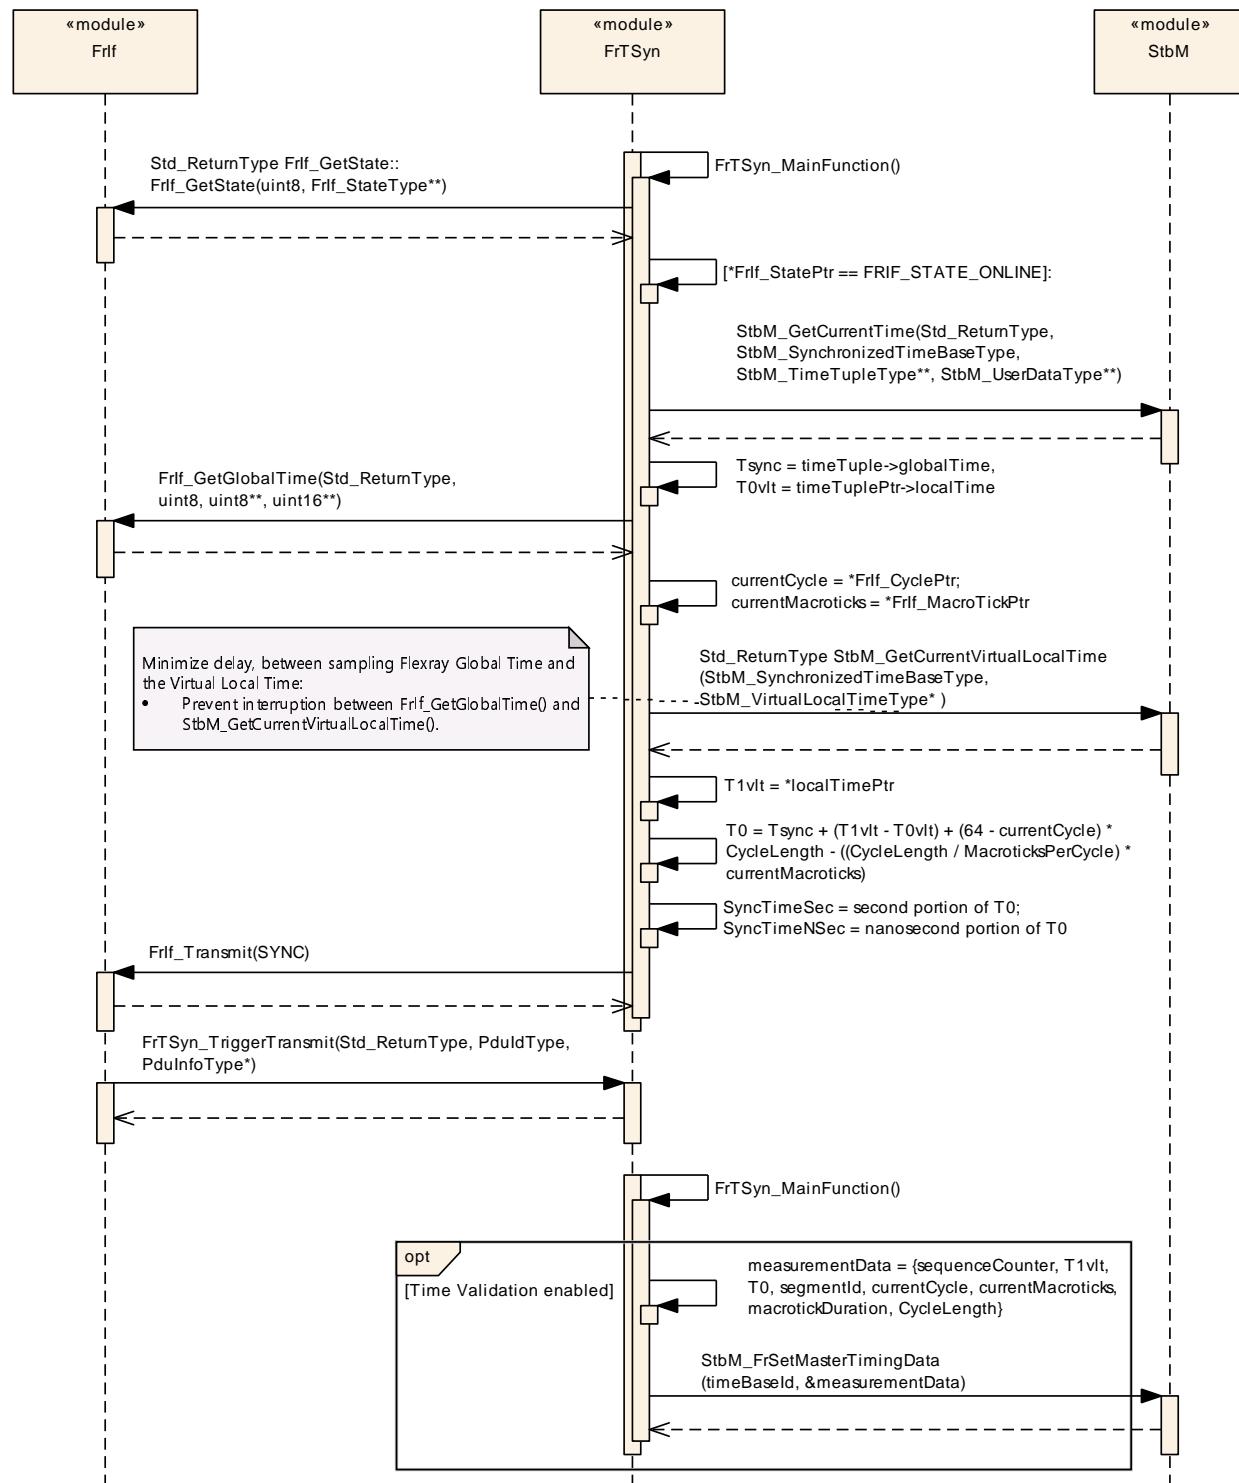


Figure 9.1: FlexRay Time Synchronization (Time Master)

9.2 FlexRay Time Synchronization (Time Slave)

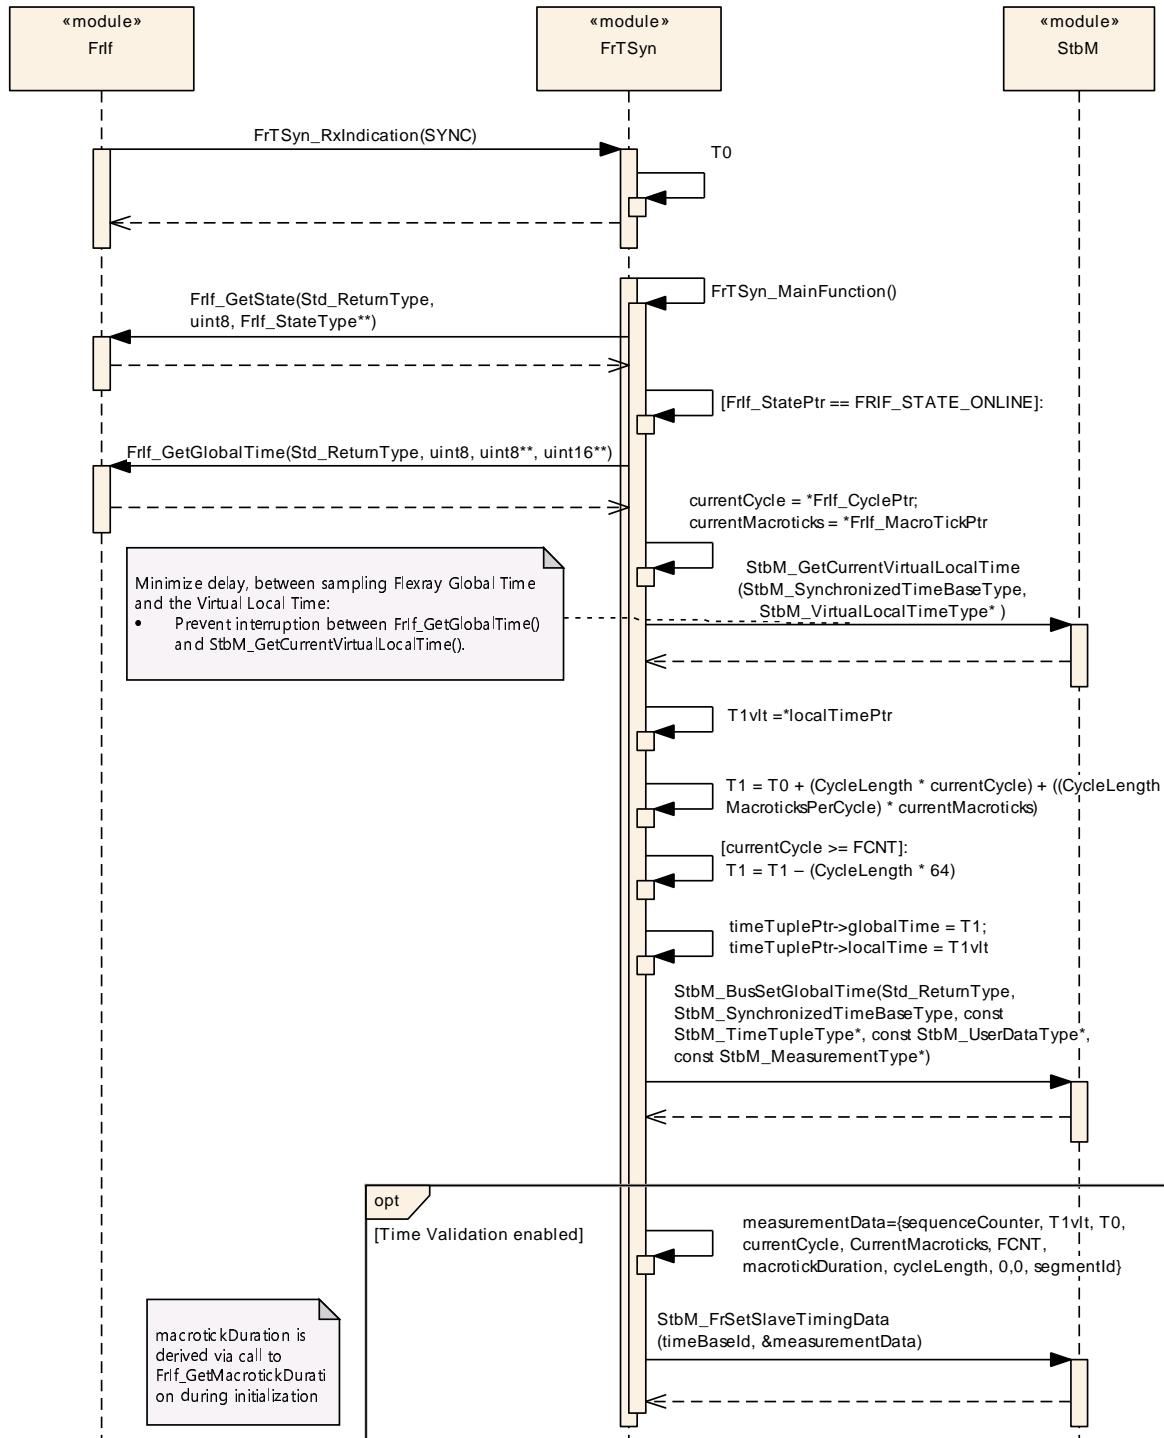


Figure 9.2: FlexRay Time Synchronization (Time Slave)

9.3 FlexRay Secure Time Synchronization Sequence

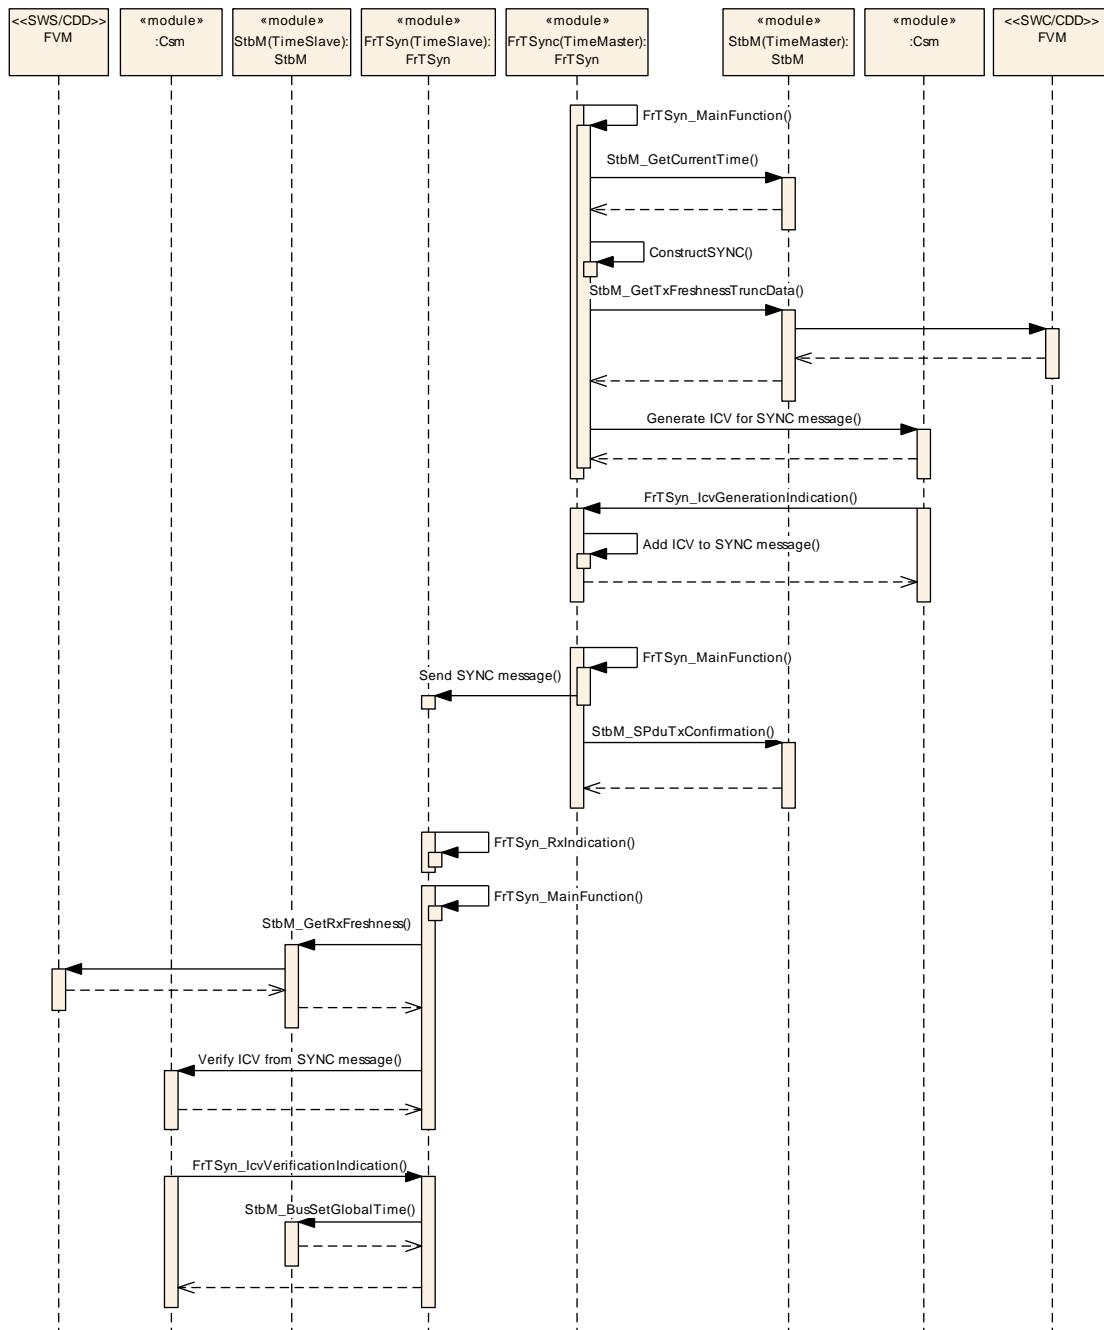


Figure 9.3: FlexRay Secure Time Synchronization Sequence

10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification section 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave section 10.1 in the specification to guarantee comprehension.

Section 10.2 specifies the structure (containers) and the parameters of the Time Synchronization over FlexRay.

Section 10.4 specifies published information of the Time Synchronization over FlexRay.

10.1 How to read this chapter

For details, refer to the chapter 10.1 "Introduction to configuration specification" in SWS BSW General [3].

10.2 Containers and configuration parameters

The following sections summarize all configuration parameters of the Time Synchronization over FlexRay. The detailed meaning of the parameters is described in chapters 7 and 8.

10.2.1 Variants

[SWS_FrTSyn_00077] [The Time Synchronization over FlexRay shall support the configuration for Time Master, Time Slave and Time Gateway.] ([RS_TS_20046](#))

The module supports different post-build variants (previously known as post-build selectable configuration sets), but not post-build loadable configuration.

10.2.2 FrTSyn

SWS Item	[ECUC_FrTSyn_00001]
Module Name	FrTSyn
Description	This represents the specific configuration variant for the TSyn on Flexray.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-PRE-COMPIL

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGeneral	1	This container holds the general parameters of the Flexray-specific Synchronized Time-base Manager
FrTSynGlobalTimeDomain	1..*	This represents the existence of a global time domain on Flexray. The FrTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains. If the FrTSyn exists it is assumed that at least one global time domain exists.

10.2.3 FrTSynGeneral

SWS Item	[ECUC_FrTSyn_00003]
Container Name	FrTSynGeneral
Parent Container	FrTSyn
Description	This container holds the general parameters of the Flexray-specific Synchronized Time-base Manager
Configuration Parameters	

SWS Item	[ECUC_FrTSyn_00002]									
Parameter Name	FrTSynDevErrorDetect									
Parent Container	FrTSynGeneral									
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> • true: detection and notification is enabled. • false: detection and notification is disabled. 									
Multiplicity	1									
Type	EcucBooleanParamDef									
Default value	false									
Post-Build Variant Value	false									
Value Configuration Class	<table border="1"> <tr> <td>Pre-compile time</td> <td>X</td> <td>All Variants</td> </tr> <tr> <td>Link time</td> <td>-</td> <td></td> </tr> <tr> <td>Post-build time</td> <td>-</td> <td></td> </tr> </table>	Pre-compile time	X	All Variants	Link time	-		Post-build time	-	
Pre-compile time	X	All Variants								
Link time	-									
Post-build time	-									
Scope / Dependency	scope: local									

SWS Item	[ECUC_FrTSyn_00044]						
Parameter Name	FrTSynEnableSecurityEventReporting						
Parent Container	FrTSynGeneral						
Description	Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled. Tags: atp.Status=draft						
Multiplicity	1						
Type	EcucBooleanParamDef						
Default value	false						
Post-Build Variant Value	false						
Value Configuration Class	<table border="1"> <tr> <td>Pre-compile time</td> <td>X</td> <td>All Variants</td> </tr> <tr> <td>Link time</td> <td>-</td> <td></td> </tr> </table>	Pre-compile time	X	All Variants	Link time	-	
Pre-compile time	X	All Variants					
Link time	-						



△


	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00016]		
Parameter Name	FrTSynMainFunctionPeriod		
Parent Container	FrTSynGeneral		
Description	Schedule period of the main function FrTSyn_MainFunction. Unit: [s].		
Multiplicity	1		
Type	EcucFloatParamDef		
Range] 0 .. INF[
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00040]		
Parameter Name	FrTSynTimeValidationSupport		
Parent Container	FrTSynGeneral		
Description	Switches support for Time Validation on or off. • true: Time Validation is enabled. • false: Time Validation is disabled.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00019]		
Parameter Name	FrTSynVersionInfoApi		
Parent Container	FrTSynGeneral		
Description	Activate/Deactivate the version information API (FrTSyn_GetVersionInfo). True: version information API activated False: version information API deactivated.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynSecurityEventRefs	0..1	<p>Container for the references to IdsMEvent elements representing the security events that the FrTSyn module shall report to the Ids M in case the corresponding security related event occurs (and if FrTSynEnableSecurityEventReporting is set to true). The standardized security events in this container can be extended by vendor-specific security events.</p> <p>Tags: atp.Status=draft</p>

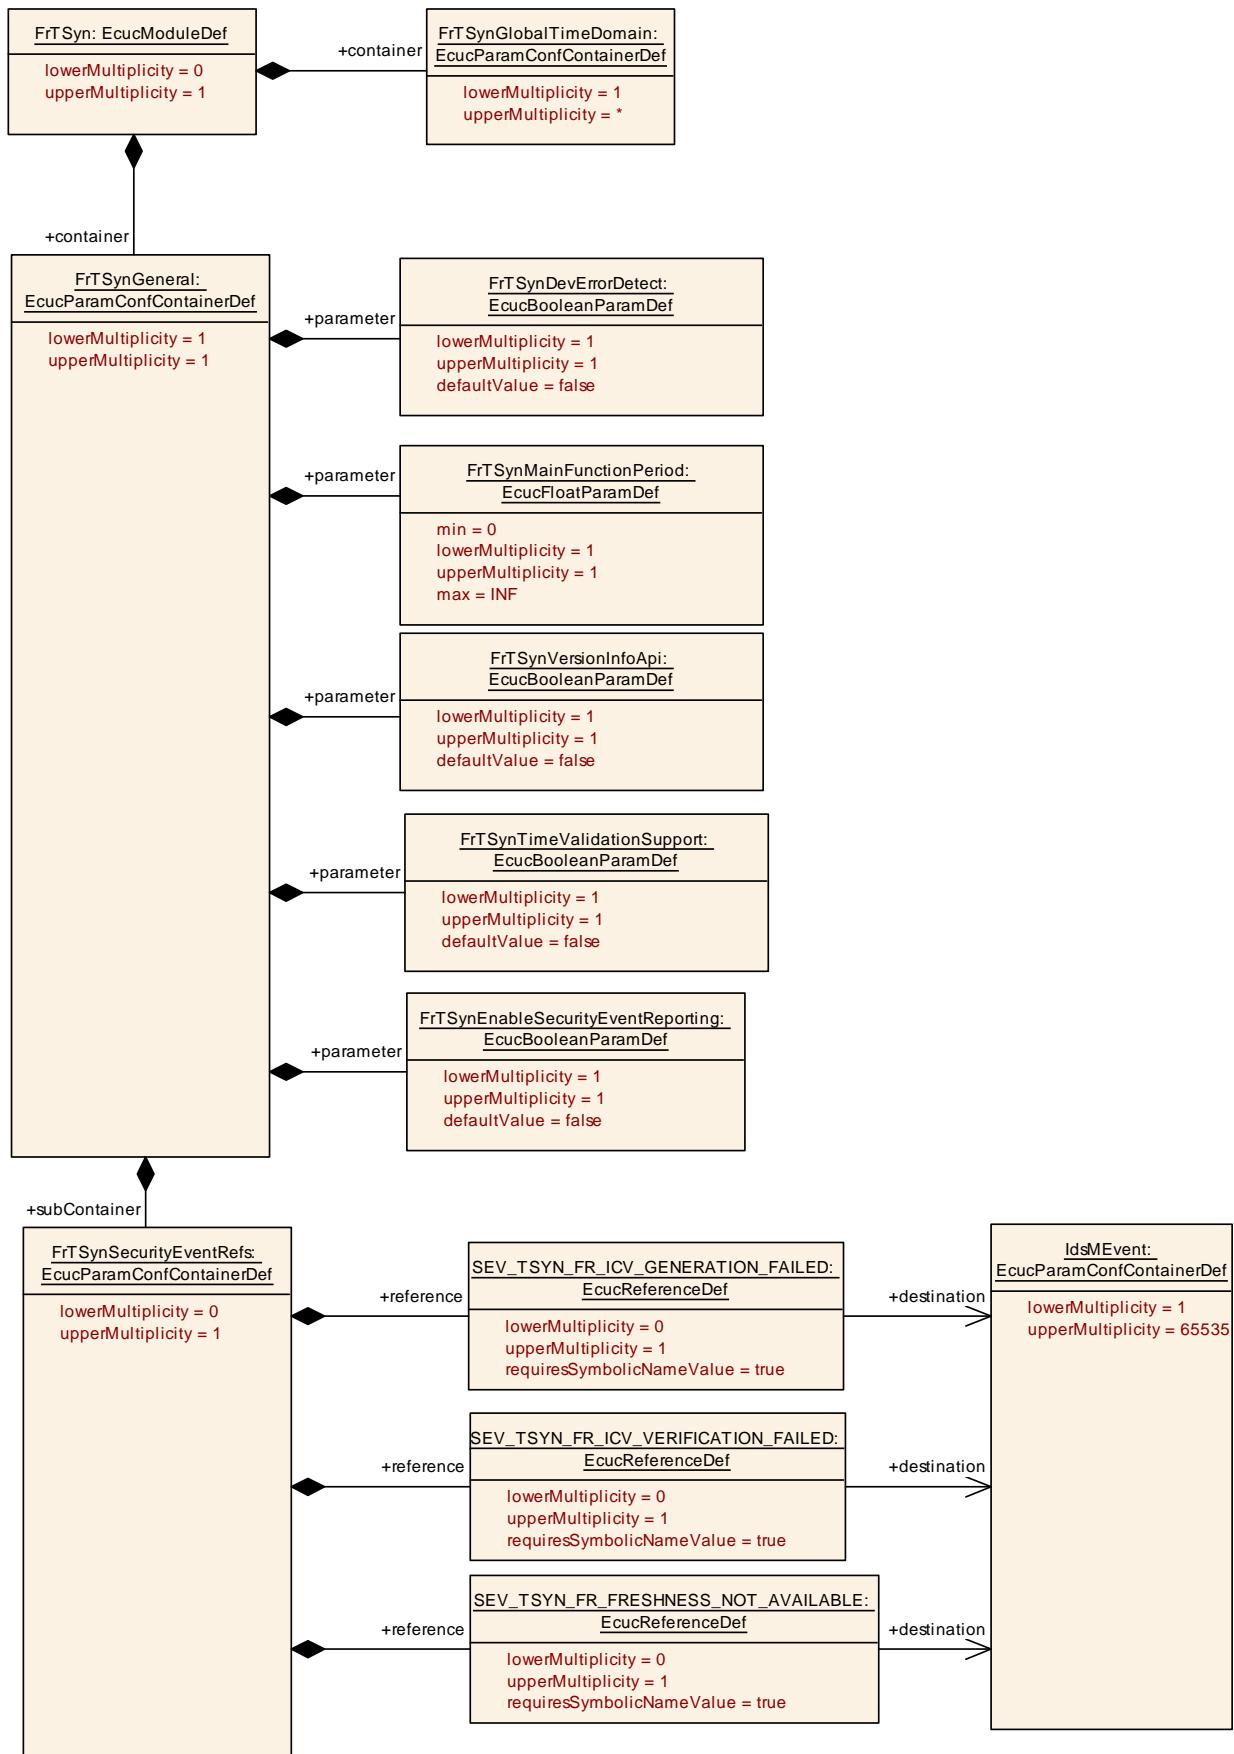
Figure 10.1: FrTSynGeneral

10.2.4 FrTSynSecurityEventRefs

SWS Item	[ECUC_FrTSyn_00063]		
Container Name	FrTSynSecurityEventRefs		
Parent Container	FrTSynGeneral		
Description	Container for the references to IdsMEvent elements representing the security events that the FrTSyn module shall report to the IdsM in case the corresponding security related event occurs (and if FrTSynEnableSecurityEventReporting is set to true). The standardized security events in this container can be extended by vendor-specific security events.		
Tags:	atp.Status=draft		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00047]		
Parameter Name	SEV_TSYN_FR_FRESHNESS_NOT_AVAILABLE		
Parent Container	FrTSynSecurityEventRefs		
Description	FV not available from FVM. Context data provides the respective domain ID.		
Tags:	atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to IdsMEvent		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00045]		
Parameter Name	SEV_TSYN_FR_ICV_GENERATION_FAILED		
Parent Container	FrTSynSecurityEventRefs		
Description	ICV generation for SYNC message failed. Context data provides the respective domain ID		
Tags:	atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to IdsMEvent		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants





	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00046]		
Parameter Name	SEV_TSYN_FR_ICV_VERIFICATION_FAILED		
Parent Container	FrTSynSecurityEventRefs		
Description	ICV verification for SYNC message failed. Context data provides the respective domain ID. Tags: atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to IdsMEvent		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

No Included Containers

10.2.5 FrTSynGlobalTimeDomain

SWS Item	[ECUC_FrTSyn_00004]		
Container Name	FrTSynGlobalTimeDomain		
Parent Container	FrTSyn		
Description	This represents the existence of a global time domain on Flexray. The FrTSyn module can administrate several global time domains at the same time that in itself form a hierarchy of domains and sub-domains. If the FrTSyn exists it is assumed that at least one global time domain exists.		
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00041]		
Parameter Name	FrTSynEnableTimeValidation		
Parent Container	FrTSynGlobalTimeDomain		
Description	Enables/disables time recording for Time Validation for a specific Time Domain.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	





	Post-build time	—	
Scope / Dependency	scope: local dependency: Only valid if FrTSynTimeValidationSupport is TRUE. Value set according to parameter StbMEnableTimeValidation of the referenced Time Base in the StbM.		

SWS Item	[ECUC_FrTSyn_00005]		
Parameter Name	FrTSynGlobalTimeDomainId		
Parent Container	FrTSynGlobalTimeDomain		
Description	The global time domain ID.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00042]		
Parameter Name	FrTSynGlobalTimeNetworkSegmentId		
Parent Container	FrTSynGlobalTimeDomain		
Description	This represents the numerical identifier of the network on system level scope where this Global Time has been communicated on.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	—		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00018]		
Parameter Name	FrTSynSynchronizedTimeBaseRef		
Parent Container	FrTSynGlobalTimeDomain		
Description	Mandatory reference to the required synchronized time-base.		
Multiplicity	1		
Type	Symbolic name reference to StbMSynchronizedTimeBase		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	



△

	Post-build time	-	
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeMaster	0..1	Configuration of the global time master. Each global time domain is required to have exactly one global time master. This master may or may not exist on the configured ECU.
FrTSynGlobalTimeOfsDataIDList	0..1	The DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.
FrTSynGlobalTimeSlave	0..1	This represents the time slave for the enclosing global time domain.
FrTSynGlobalTimeSyncDataIDList	0..1	The DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.

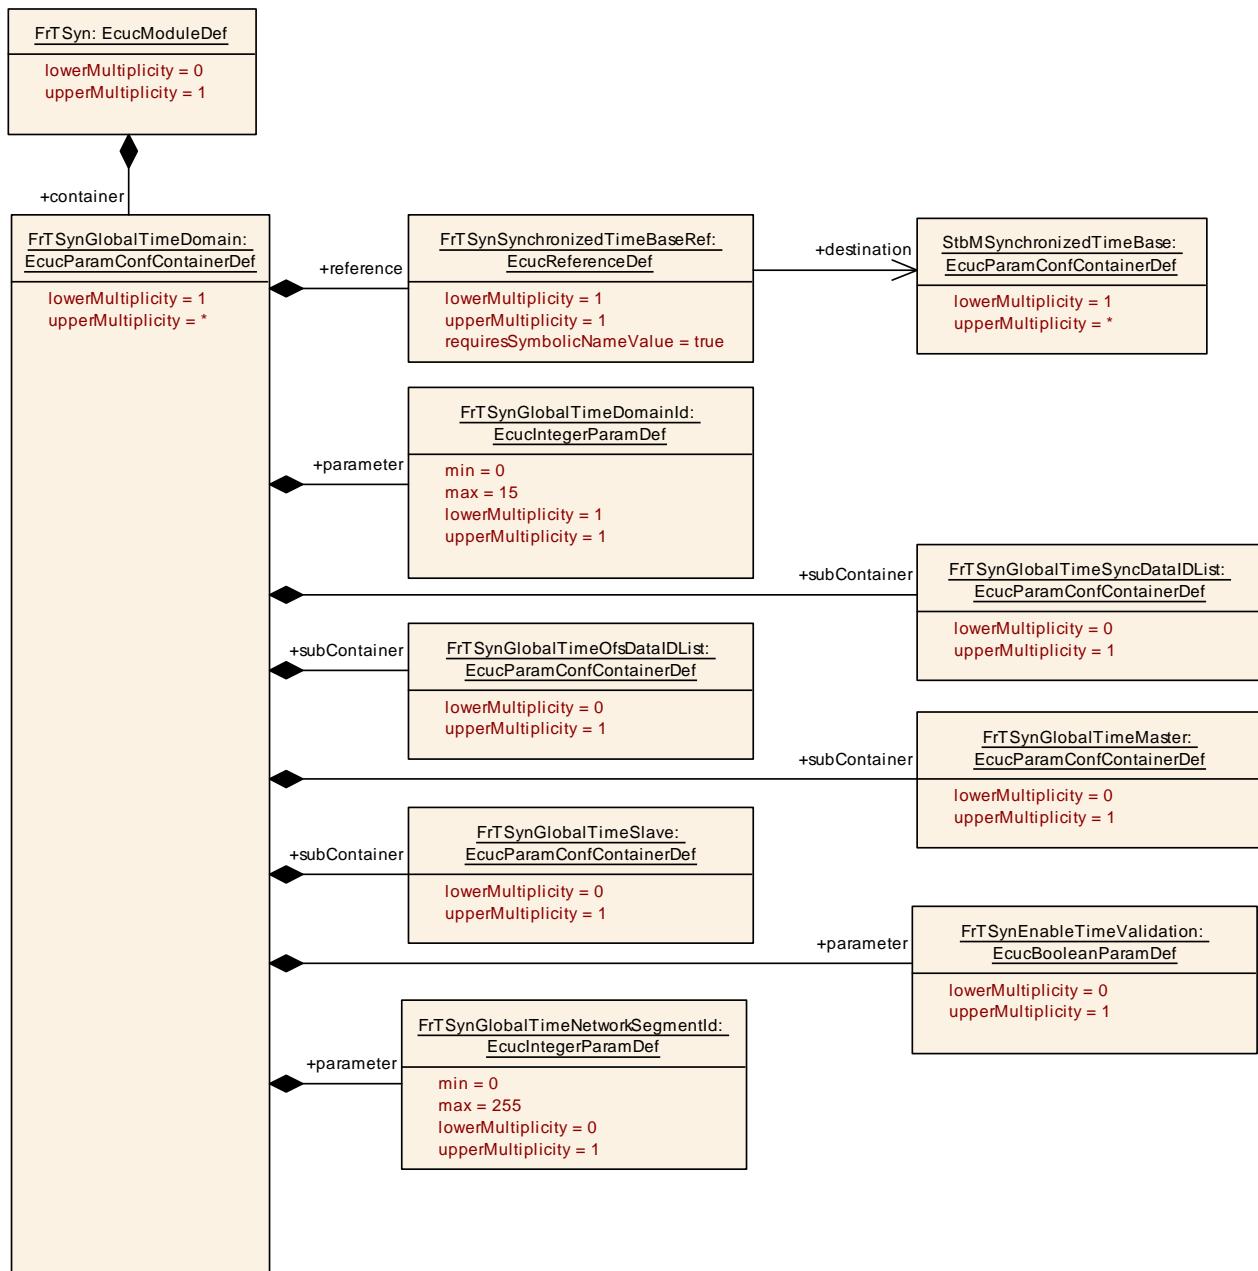


Figure 10.2: FrTSynGlobalTimeDomain

10.2.6 FrTSynGlobalTimeSyncDataIDList

SWS Item	[ECUC_FrTSyn_00023]
Container Name	FrTSynGlobalTimeSyncDataIDList
Parent Container	FrTSynGlobalTimeDomain



△			
Description			The DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.
Post-Build Variant Multiplicity			true
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeSyncDataIDList Element	16	Element of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.

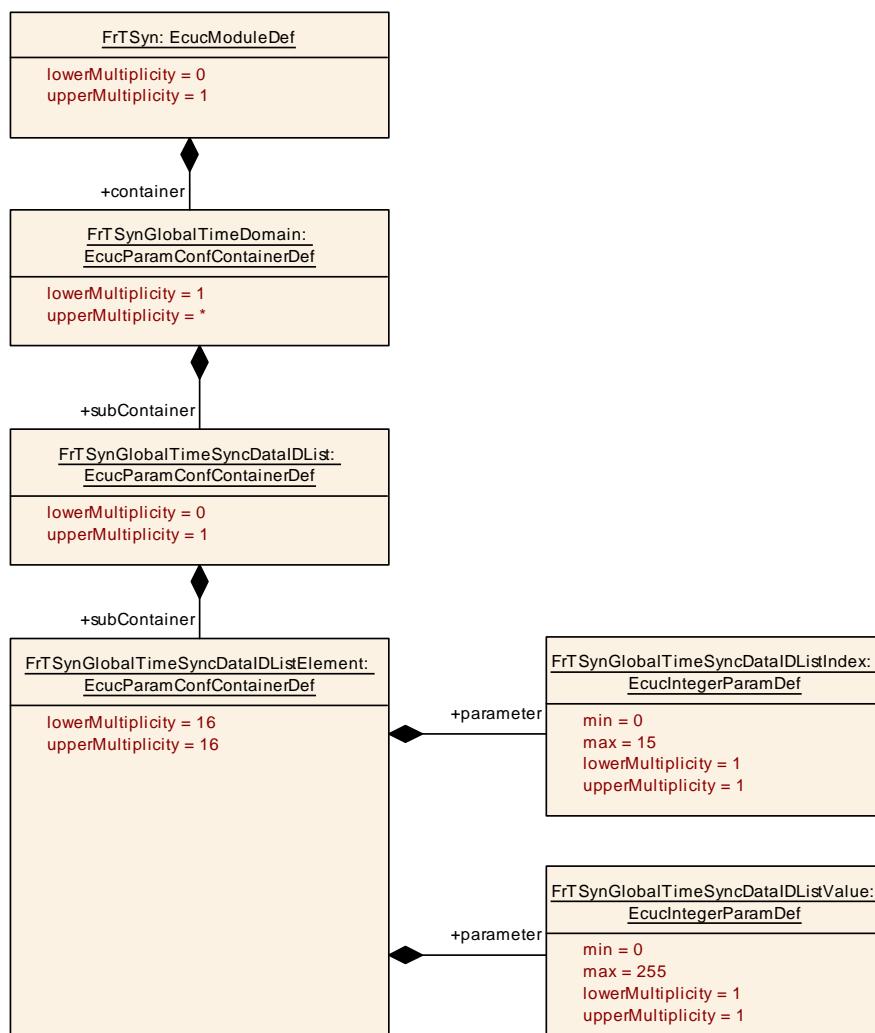


Figure 10.3: `FrTSynGlobalTimeSyncDataIDList`

10.2.7 FrTSynGlobalTimeSyncDataIDListElement

SWS Item	[ECUC_FrTSyn_00025]
Container Name	FrTSynGlobalTimeSyncDataIDListElement
Parent Container	FrTSynGlobalTimeSyncDataIDList
Description	Element of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.
Configuration Parameters	

SWS Item	[ECUC_FrTSyn_00026]		
Parameter Name	FrTSynGlobalTimeSyncDataIDListIndex		
Parent Container	FrTSynGlobalTimeSyncDataIDListElement		
Description	Index of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	—		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00027]		
Parameter Name	FrTSynGlobalTimeSyncDataIDListValue		
Parent Container	FrTSynGlobalTimeSyncDataIDListElement		
Description	Value of the DataIDList for SYNC messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	—		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

No Included Containers

10.2.8 FrTSynGlobalTimeOfsDataIDList

SWS Item	[ECUC_FrTSyn_00024]		
Container Name	FrTSynGlobalTimeOfsDataIDList		
Parent Container	FrTSynGlobalTimeDomain		
Description	The DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeOfsDataIDList Element	16	Element of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.

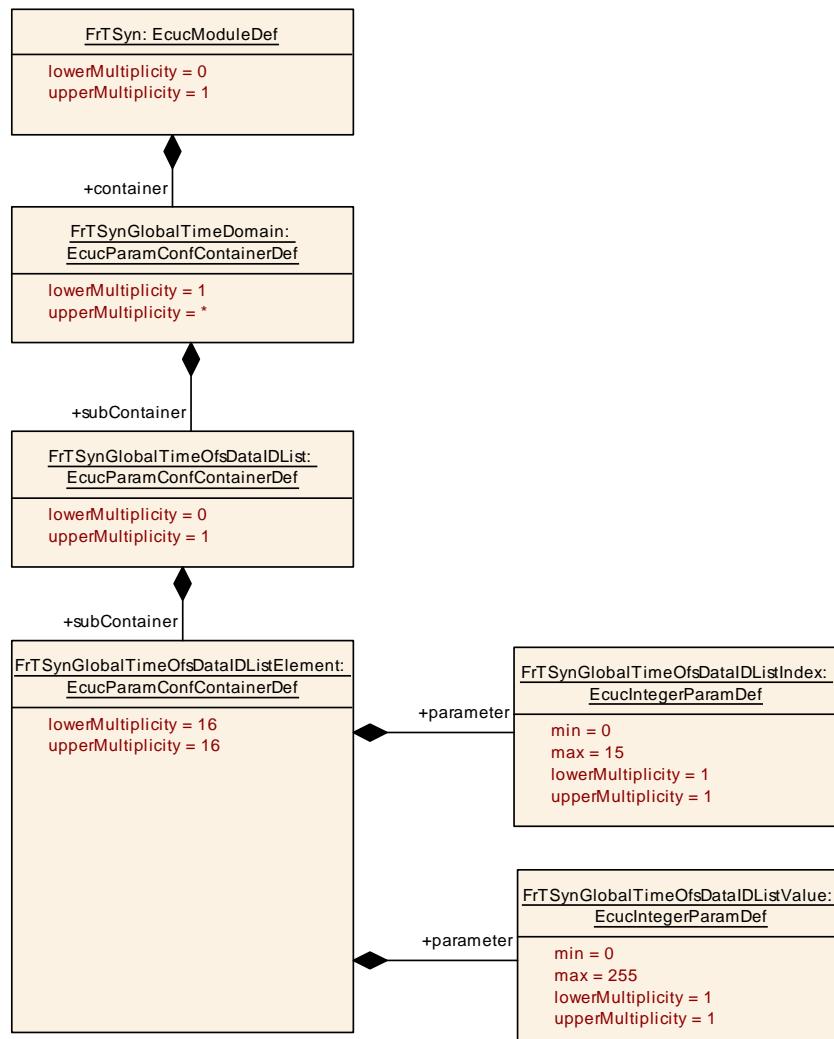


Figure 10.4: FrTSynGlobalTimeOfsDataIDList

10.2.9 FrTSynGlobalTimeOfsDataIDListElement

SWS Item	[ECUC_FrTSyn_00028]	
Container Name	FrTSynGlobalTimeOfsDataIDListElement	
Parent Container	FrTSynGlobalTimeOfsDataIDList	
Description	Element of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.	
Configuration Parameters		

SWS Item	[ECUC_FrTSyn_00029]	
Parameter Name	FrTSynGlobalTimeOfsDataIDListIndex	
Parent Container	FrTSynGlobalTimeOfsDataIDListElement	
Description	Index of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.	
Multiplicity	1	
Type	EcucIntegerParamDef	
Range	0 .. 15	
Default value	–	
Post-Build Variant Value	true	
Value Configuration Class	Pre-compile time	X
	Link time	–
	Post-build time	–
Scope / Dependency	scope: local	

SWS Item	[ECUC_FrTSyn_00030]	
Parameter Name	FrTSynGlobalTimeOfsDataIDListValue	
Parent Container	FrTSynGlobalTimeOfsDataIDListElement	
Description	Value of the DataIDList for OFS messages ensures the identification of data elements due to CRC calculation and message authentication process.	
Multiplicity	1	
Type	EcucIntegerParamDef	
Range	0 .. 255	
Default value	–	
Post-Build Variant Value	true	
Value Configuration Class	Pre-compile time	X
	Link time	–
	Post-build time	–
Scope / Dependency	scope: local	

No Included Containers

10.2.10 FrTSynGlobalTimeMaster

SWS Item	[ECUC_FrTSyn_00006]		
Container Name	FrTSynGlobalTimeMaster		
Parent Container	FrTSynGlobalTimeDomain		
Description	Configuration of the global time master. Each global time domain is required to have exactly one global time master. This master may or may not exist on the configured ECU.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00032]				
Parameter Name	FrTSynCyclicMsgResumeTime				
Parent Container	FrTSynGlobalTimeMaster				
Description	Defines the time where the 1st regular cycle time based message transmission takes place, after an immediate transmission before. Unit: seconds				
Multiplicity	1				
Type	EcucFloatParamDef				
Range	[0 .. INF[
Default value	—				
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time	X	All Variants		
	Link time	—			
	Post-build time	—			
Scope / Dependency	scope: local				

SWS Item	[ECUC_FrTSyn_00033]				
Parameter Name	FrTSynGlobalTimeDebounceTime				
Parent Container	FrTSynGlobalTimeMaster				
Description	This represents the configuration of a TX debounce time for SYNC and OFS messages compared to a message before with the same PDU. Unit: seconds				
Multiplicity	1				
Type	EcucFloatParamDef				
Range	[0 .. 4]				
Default value	—				
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time	X	All Variants		
	Link time	—			
	Post-build time	—			
Scope / Dependency	scope: local				

SWS Item	[ECUC_FrTSyn_00013]		
Parameter Name	FrTSynGlobalTimeTxCrcSecured		
Parent Container	FrTSynGlobalTimeMaster		
Description	This represents the configuration of whether or not CRC is supported.		



△


Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	CRC_NOT_SUPPORTED	This represents a configuration where CRC is not supported.	
	CRC_SUPPORTED	This represents a configuration where CRC is supported.	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00048]				
Parameter Name	FrTSynGlobalTimeTxlcvSecured				
Parent Container	FrTSynGlobalTimeMaster				
Description	This parameter controls whether or not ICV generation shall be supported. Tags: atp.Status=draft				
Multiplicity	1				
Type	EcucEnumerationParamDef				
Range	ICV_NOT_SUPPORTED	The Timesync module shall not generate the ICV. Tags: atp.Status=draft			
	ICV_SUPPORTED	The Timesync module shall generate the ICV. Tags: atp.Status=draft			
Default value	ICV_NOT_SUPPORTED				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time	X	All Variants		
	Link time	—			
	Post-build time	—			
Scope / Dependency	scope: local				

SWS Item	[ECUC_FrTSyn_00014]				
Parameter Name	FrTSynGlobalTimeTxPeriod				
Parent Container	FrTSynGlobalTimeMaster				
Description	This represents the TX period. Unit: seconds				
Multiplicity	1				
Type	EcucFloatParamDef				
Range	[0 .. INF]				
Default value	—				
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time	X	All Variants		
	Link time	—			
	Post-build time	—			
Scope / Dependency	scope: local				

SWS Item	[ECUC_FrTSyn_00031]		
Parameter Name	FrTSynImmediateTimeSync		
Parent Container	FrTSynGlobalTimeMaster		
Description	Enables/Disables the cyclic polling of StbM_GetTimeBaseUpdateCounter() within FrTSyn_MainFunction().		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	—		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
FrTSynGlobalTimeMasterPdu	1	This container carries all properties required to configure the PDU sent by the global time master for the given global time domain.	
FrTSynGlobalTimeTxlcv Generation	0..1	This container collects configuration that shall be used for ICV generation. Tags: atp.Status=draft	

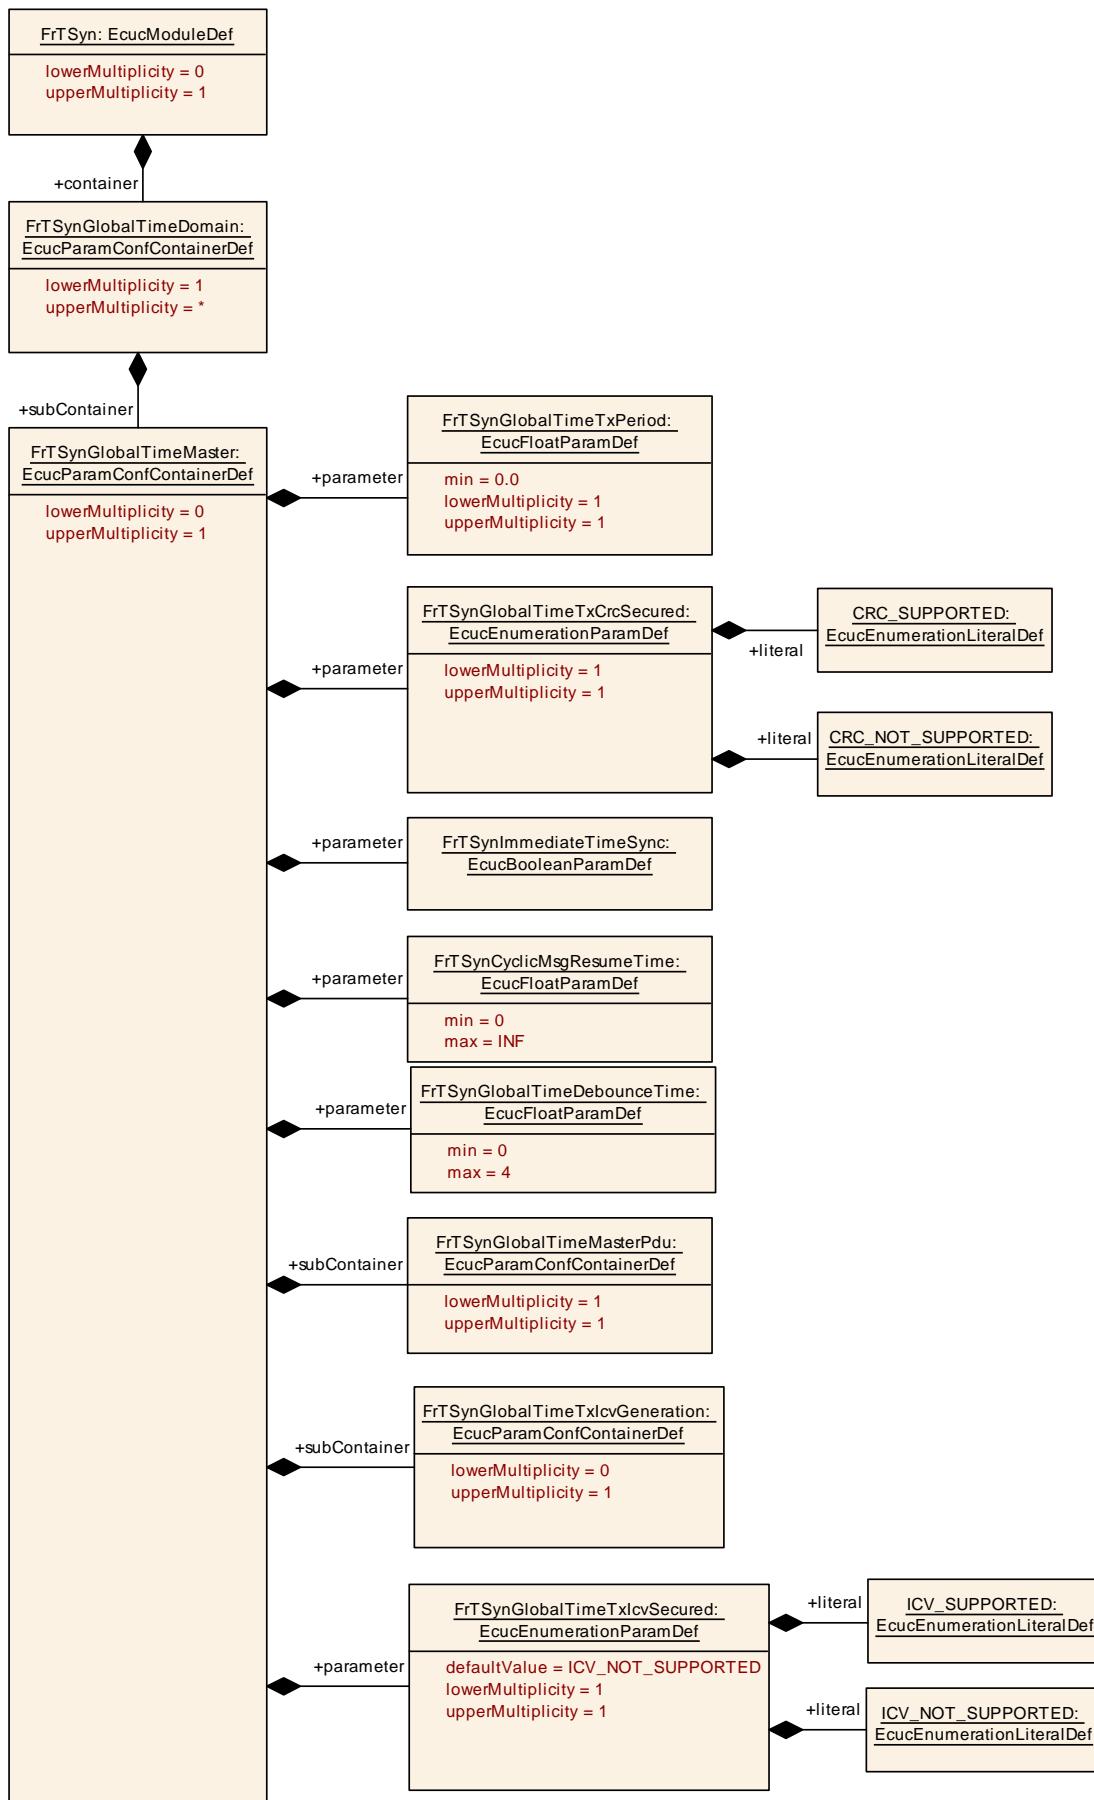
Figure 10.5: FrTSynGlobalTimeMaster

Document ID 675: AUTOSAR_CP_SWS_TimeSyncOverFlexRay

10.2.11 FrTSynGlobalTimeMasterPdu

SWS Item	[ECUC_FrTSyn_00008]		
Container Name	FrTSynGlobalTimeMasterPdu		
Parent Container	FrTSynGlobalTimeMaster		
Description	This container carries all properties required to configure the PDU sent by the global time master for the given global time domain.		
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00007]		
Parameter Name	FrTSynGlobalTimeMasterHandleId		
Parent Container	FrTSynGlobalTimeMasterPdu		
Description	This represents the handle ID of the PDU that contains the global time information.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local withAuto = true		

SWS Item	[ECUC_FrTSyn_00020]		
Parameter Name	FrTSynGlobalTimePduRef		
Parent Container	FrTSynGlobalTimeMasterPdu		
Description	This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
Multiplicity	1		
Type	Reference to Pdu		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

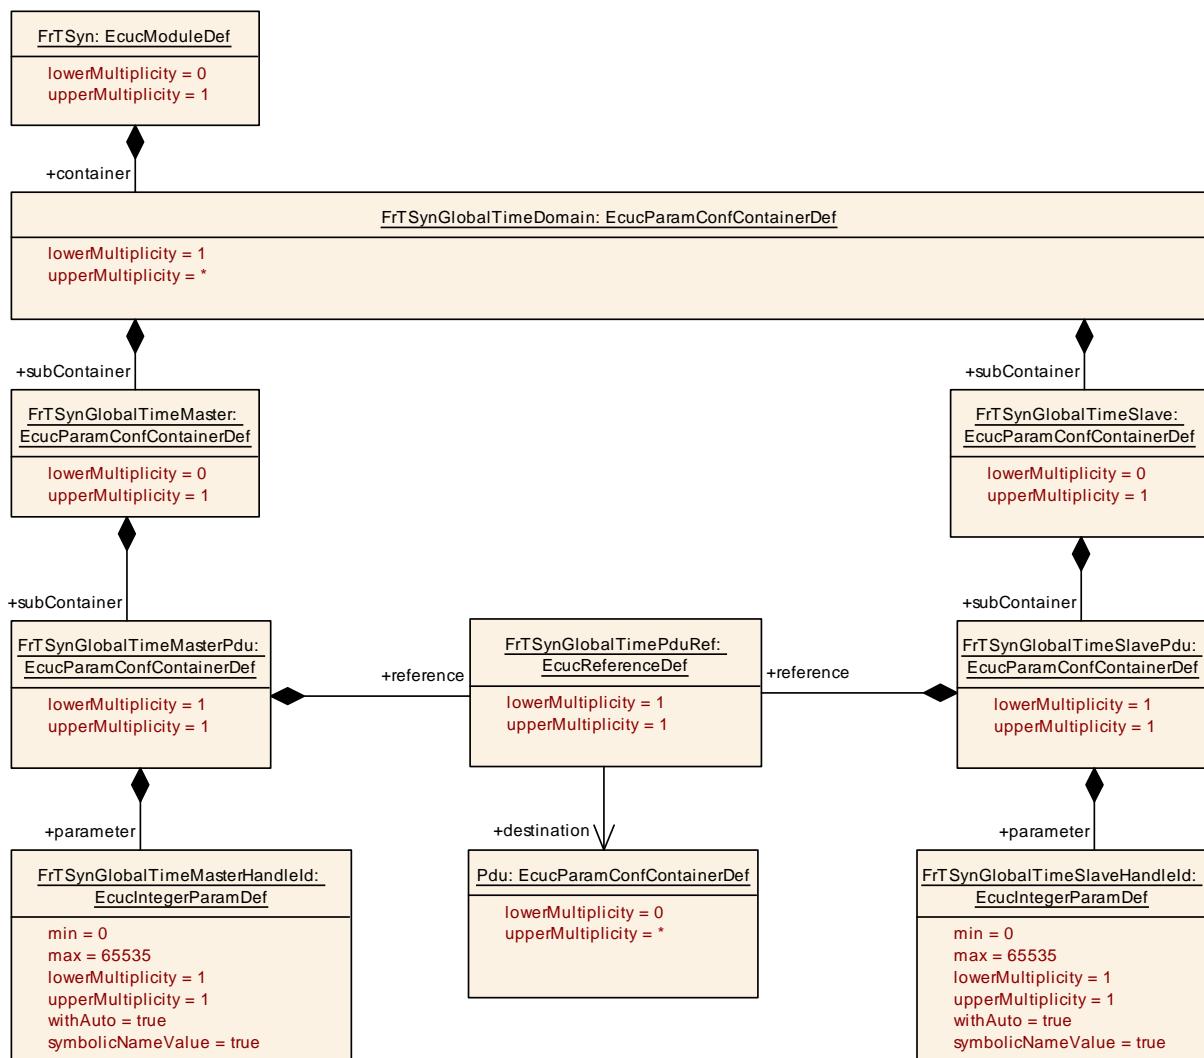


Figure 10.6: FrTSynGlobalTimePdu

10.2.12 FrTSynGlobalTimeTxIcvGeneration

SWS Item	[ECUC_FrTSyn_00049]		
Container Name	FrTSynGlobalTimeTxIcvGeneration		
Parent Container	FrTSynGlobalTimeMaster		
Description	This container collects configuration that shall be used for ICV generation. Tags: atp.Status=draft		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00051]		
Parameter Name	FrTSynIcvGenerationBase		
Parent Container	FrTSynGlobalTimeTxIcvGeneration		
Description	Symmetric or asymmetric cryptography selection for the ICV generation Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	ICV_MAC	Symmetric cryptography selection for the ICV generation. Tags: atp.Status=draft	
	ICV_SIGNATURE	Asymmetric cryptography selection for the ICV generation. Tags: atp.Status=draft	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00054]		
Parameter Name	FrTSynIcvGenerationTimeout		
Parent Container	FrTSynGlobalTimeTxIcvGeneration		
Description	Timeout of ICV generation (respective CSM job completion in asynchronous behavior). A value of 0 disables the ICV timeout monitoring. Unit: Seconds Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF[
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00052]		
Parameter Name	FrTSynIcvTxLength		
Parent Container	FrTSynGlobalTimeTxIcvGeneration		
Description	Length of ICV to be transmitted within Sync Message on the bus. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 236		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	





	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00065]		
Parameter Name	FrTSynTxAuthenticationBuildAttempts		
Parent Container	FrTSynGlobalTimeTxICVGeneration		
Description	This parameter specifies the number of authentication build attempts that are to be carried out when the generation of the ICV failed for a given SYNC/OFS message. If zero is set, then only one ICV generation attempt is done.		
	Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	0		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00050]		
Parameter Name	FrTSynICVGenerationFvIdRef		
Parent Container	FrTSynGlobalTimeTxICVGeneration		
Description	This represents the reference to the FV taken to generate the ICV generation.		
	Tags: atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to StbMFreshnessValue		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		


SWS Item	[ECUC_FrTSyn_00053]		
Parameter Name	FrTSynICVGenerationJobRef		
Parent Container	FrTSynGlobalTimeTxICVGeneration		
Description	This represents the reference to the CSM job to fetch the CSM job ID.		
	Tags: atp.Status=draft		
Multiplicity	1		
Type	Symbolic name reference to CsmJob		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	



△

	Post-build time	-	
Scope / Dependency	scope: local		

No Included Containers

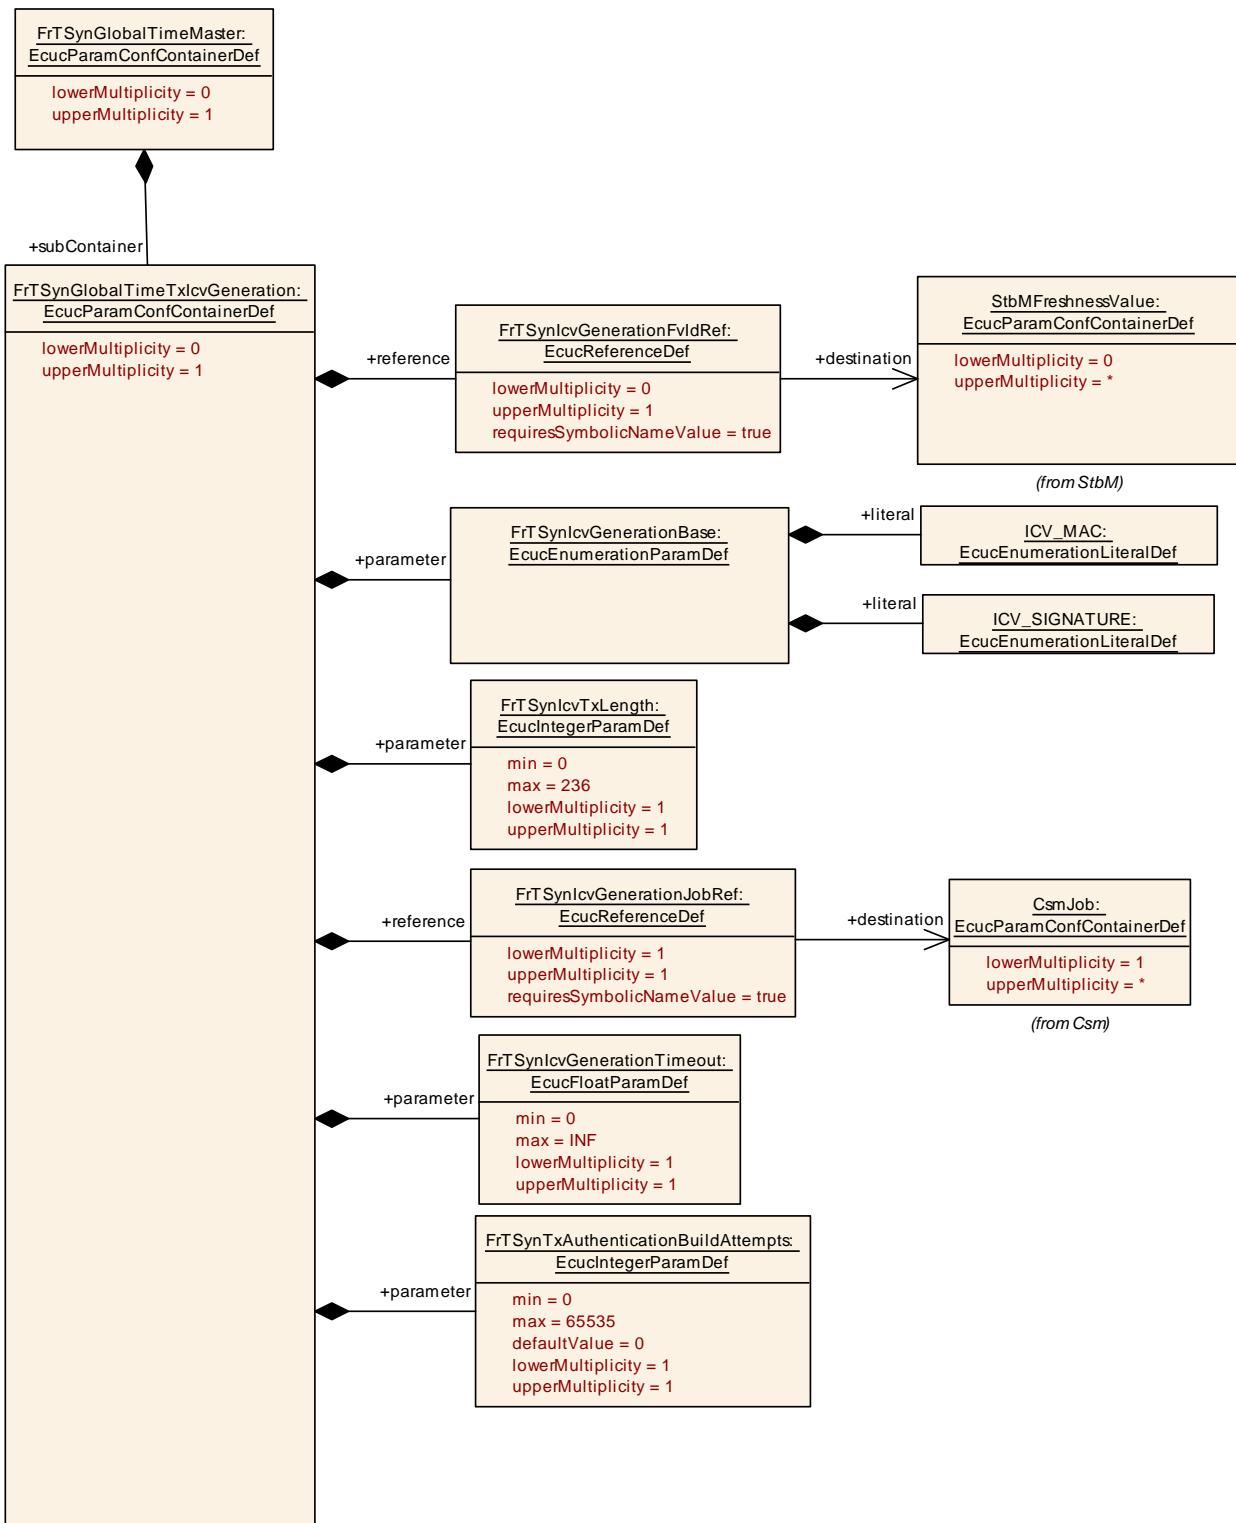
Figure 10.7: FrTSynGlobalTimeTxIcvGeneration

10.2.13 FrTSynGlobalTimeSlave

SWS Item	[ECUC_FrTSyn_00010]		
Container Name	FrTSynGlobalTimeSlave		
Parent Container	FrTSynGlobalTimeDomain		
Description	This represents the time slave for the enclosing global time domain.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00043]		
Parameter Name	FrTSynGlobalTimeSequenceCounterHysteresis		
Parent Container	FrTSynGlobalTimeSlave		
Description	FrTSynGlobalTimeSequenceCounterHysteresis specifies the number of consecutive valid SYNC (or OFS) messages that are required by the Time Slave while being in Timeout state until a Time Tuple is forwarded to the StbM.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	0		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00022]		
Parameter Name	FrTSynGlobalTimeSequenceCounterJumpWidth		
Parent Container	FrTSynGlobalTimeSlave		
Description	The SequenceCounterJumpWidth specifies the maximum allowed gap of the Sequence Counter between two SYNC resp. two OFS messages.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	0		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00017]		
Parameter Name	FrTSynRxCrcValidated		
Parent Container	FrTSynGlobalTimeSlave		
Description	This parameter controls whether or not CRC validation shall be supported.		





Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	CRC_IGNORED	The Timesync module accepts Time Synchronization messages, which are CRC secured (without actually validating the CRC) and those, which are not CRC secured. That means, the Timesync module ignores the CRC.	
	CRC_NOT_VALIDATED	The Timesync module accepts only Time Synchronization messages, which are not CRC secured. All other Time Synchronization messages are ignored.	
	CRC_OPTIONAL	The Timesync module accepts only Time Synchronization messages which are not CRC secured and Time Synchronization messages which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.	
	CRC_VALIDATED	The Timesync module accepts only Time Synchronization messages, which are CRC secured and have the correct CRC. All other Time Synchronization messages are ignored.	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00055]		
Parameter Name	FrTSynRxIcvVerificationType		
Parent Container	FrTSynGlobalTimeSlave		
Description	This parameter controls whether or not ICV verification shall be supported. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	ICV_IGNORED	The Timesync module accepts Time Synchronization messages, which are ICV secured (without actually validating the ICV) and those which are not ICV secured. That means, the Timesync module ignores the ICV. Tags: atp.Status=draft	
	ICV_NOT_VERIFIED	The Timesync module accepts only Time Synchronization messages, which are not ICV secured. All other Time Synchronization messages are ignored. Tags: atp.Status=draft	
	ICV_OPTIONAL	The Timesync module accepts only Time Synchronization messages which are not ICV secured and Time Synchronization messages which are ICV secured and have the correct ICV. All other Time Synchronization messages are ignored. Tags: atp.Status=draft	



△

	ICV_VERIFIED	The Timesync module accepts only Time Synchronization messages, which are ICV secured and have the correct ICV. All other Time Synchronization messages are ignored. Tags: atp.Status=draft			
Default value	ICV_IGNORED				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time	X	All Variants		
	Link time	—			
	Post-build time	—			
Scope / Dependency	scope: local				

Included Containers		
Container Name	Multiplicity	Scope / Dependency
FrTSynGlobalTimeRxlcv Verification	0..1	This container collects configuration required for ICV verification. Tags: atp.Status=draft
FrTSynGlobalTimeSlavePdu	1	This container carries all properties required to configure the PDU received by the time slave for the given global time domain.

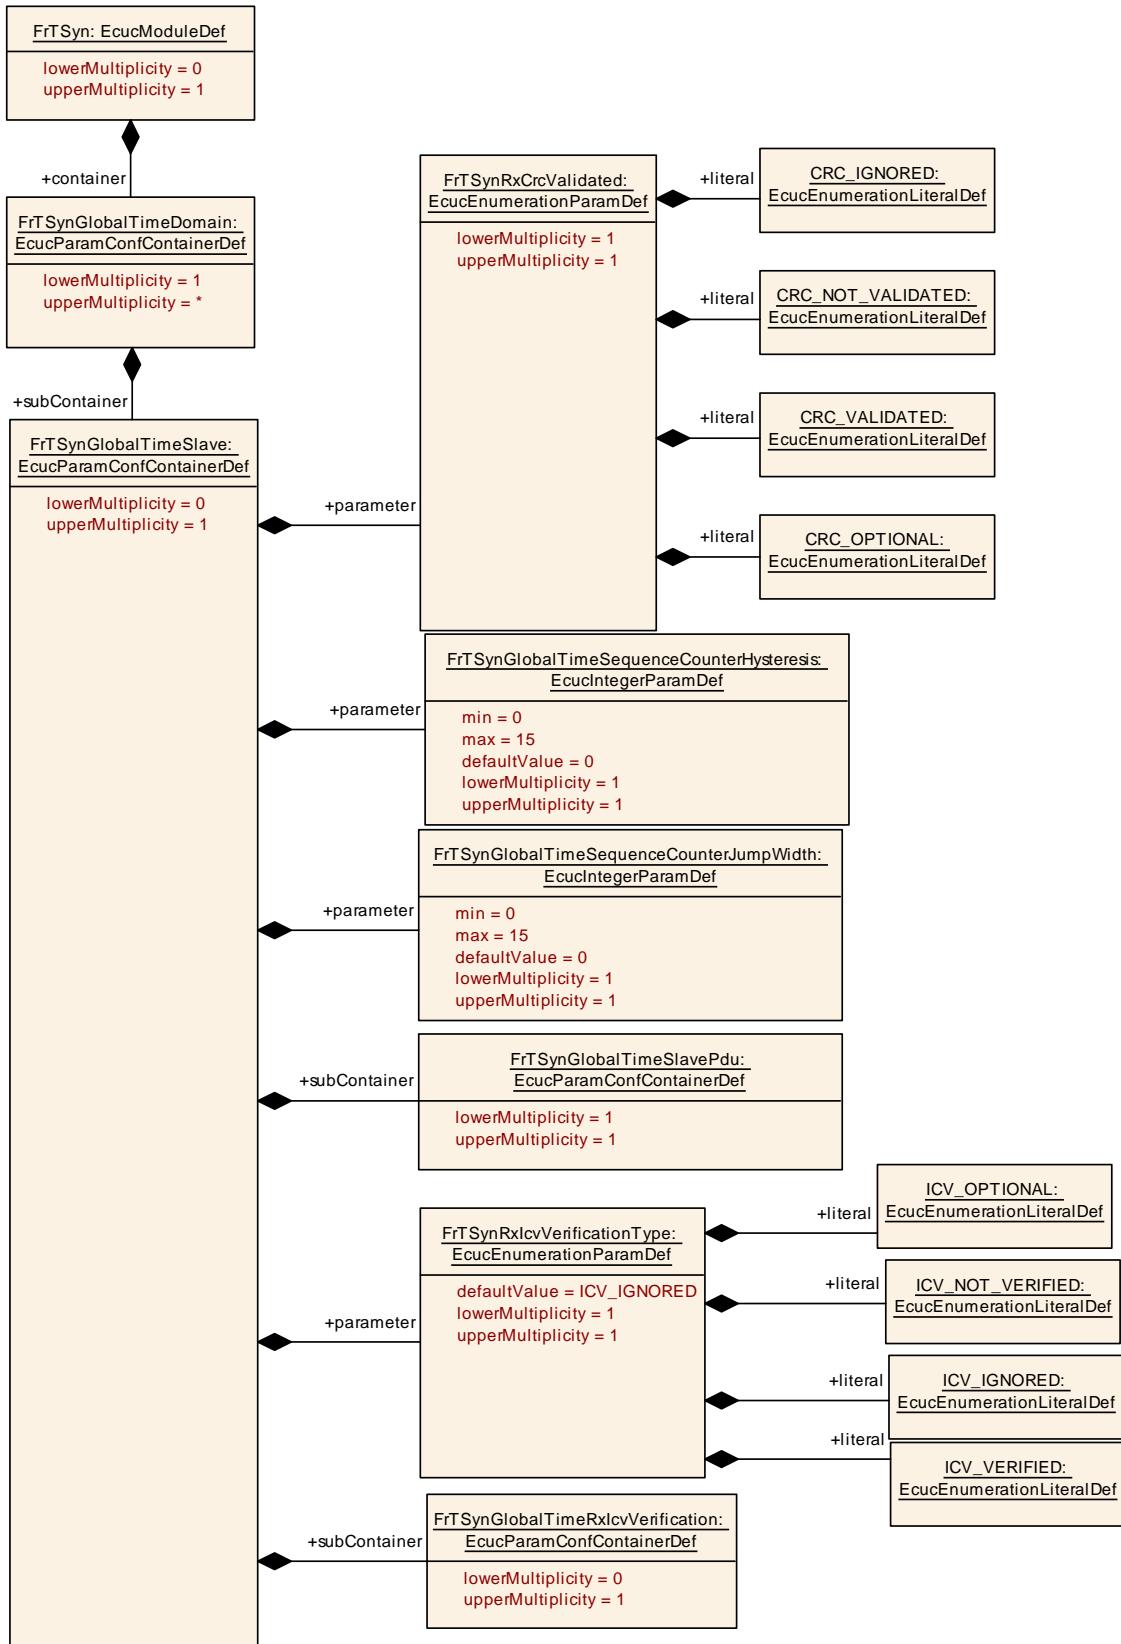


Figure 10.8: FrTSynGlobalTimeSlave

10.2.14 FrTSynGlobalTimeSlavePdu

SWS Item	[ECUC_FrTSyn_00012]		
Container Name	FrTSynGlobalTimeSlavePdu		
Parent Container	FrTSynGlobalTimeSlave		
Description	This container carries all properties required to configure the PDU received by the time slave for the given global time domain.		
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00011]		
Parameter Name	FrTSynGlobalTimeSlaveHandleId		
Parent Container	FrTSynGlobalTimeSlavePdu		
Description	This represents the handle ID of the PDU that contains the global time information.		
Multiplicity	1		
Type	EcclIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local withAuto = true		

SWS Item	[ECUC_FrTSyn_00020]		
Parameter Name	FrTSynGlobalTimePduRef		
Parent Container	FrTSynGlobalTimeSlavePdu		
Description	This represents the reference to the Pdu taken to transmit the global time information. The global time master of a global time domain acts as the sender of the Pdu while all the time slaves are supposed to receive the Pdu.		
Multiplicity	1		
Type	Reference to Pdu		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

No Included Containers

10.2.15 FrTSynGlobalTimeRxIcvVerification

SWS Item	[ECUC_FrTSyn_00056]		
Container Name	FrTSynGlobalTimeRxIcvVerification		
Parent Container	FrTSynGlobalTimeSlave		





Description	This container collects configuration required for ICV verification. Tags: atp.Status=draft		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Configuration Parameters			

SWS Item	[ECUC_FrTSyn_00059]		
Parameter Name	FrTSynIcvRxLength		
Parent Container	FrTSynGlobalTimeRxlcvVerification		
Description	Length of ICV to be used for verification of received ICV within Sync Message. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 236		
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00062]		
Parameter Name	FrTSynIcvVerificationAttempts		
Parent Container	FrTSynGlobalTimeRxlcvVerification		
Description	This parameter specifies the number of ICV verification attempts that are to be carried out when the verification of the ICV failed for a given secured SYNC message. If zero is set, then only one ICV verification attempt is done. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	0		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00058]		
Parameter Name	FrTSynIcvVerificationBase		
Parent Container	FrTSynGlobalTimeRxlcvVerification		
Description	Symmetric or asymmetric cryptography selection for the ICV verification. Tags: atp.Status=draft		
Multiplicity	1		





Type	EcucEnumerationParamDef		
Range	ICV_MAC	Symmetric cryptography selection for the ICV verification. Tags: atp.Status=draft	
	ICV_SIGNATURE	Asymmetric cryptography selection for the ICV verification. Tags: atp.Status=draft	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00061]		
Parameter Name	FrTSynIcvVerificationTimeout		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	Timeout of ICV verification (respective CSM job completion in asynchronous behaviour). A value of 0 disables the ICV timeout monitoring. Unit: Seconds		
	Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. INF[
Default value	—		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00064]		
Parameter Name	FrTSynRxAuthenticationBuildAttempts		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	This parameter specifies the number of authentication build attempts that are to be carried out when the verification of the ICV failed for a given SYNC/OFS message. If zero is set, then only one ICV verification attempt is done.		
	Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	0		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00057]		
Parameter Name	FrTSynIcvVerificationFvldRef		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	This represents the reference to the FV taken to generate the ICV generation. Tags: atp.Status=draft		
Multiplicity	0..1		
Type	Symbolic name reference to StbMFreshnessValue		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

SWS Item	[ECUC_FrTSyn_00060]		
Parameter Name	FrTSynIcvVerificationJobRef		
Parent Container	FrTSynGlobalTimeRxIcvVerification		
Description	This represents the reference to the CSM job to fetch the CSM job ID. Tags: atp.Status=draft		
Multiplicity	1		
Type	Symbolic name reference to CsmJob		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	—	
	Post-build time	—	
Scope / Dependency	scope: local		

No Included Containers

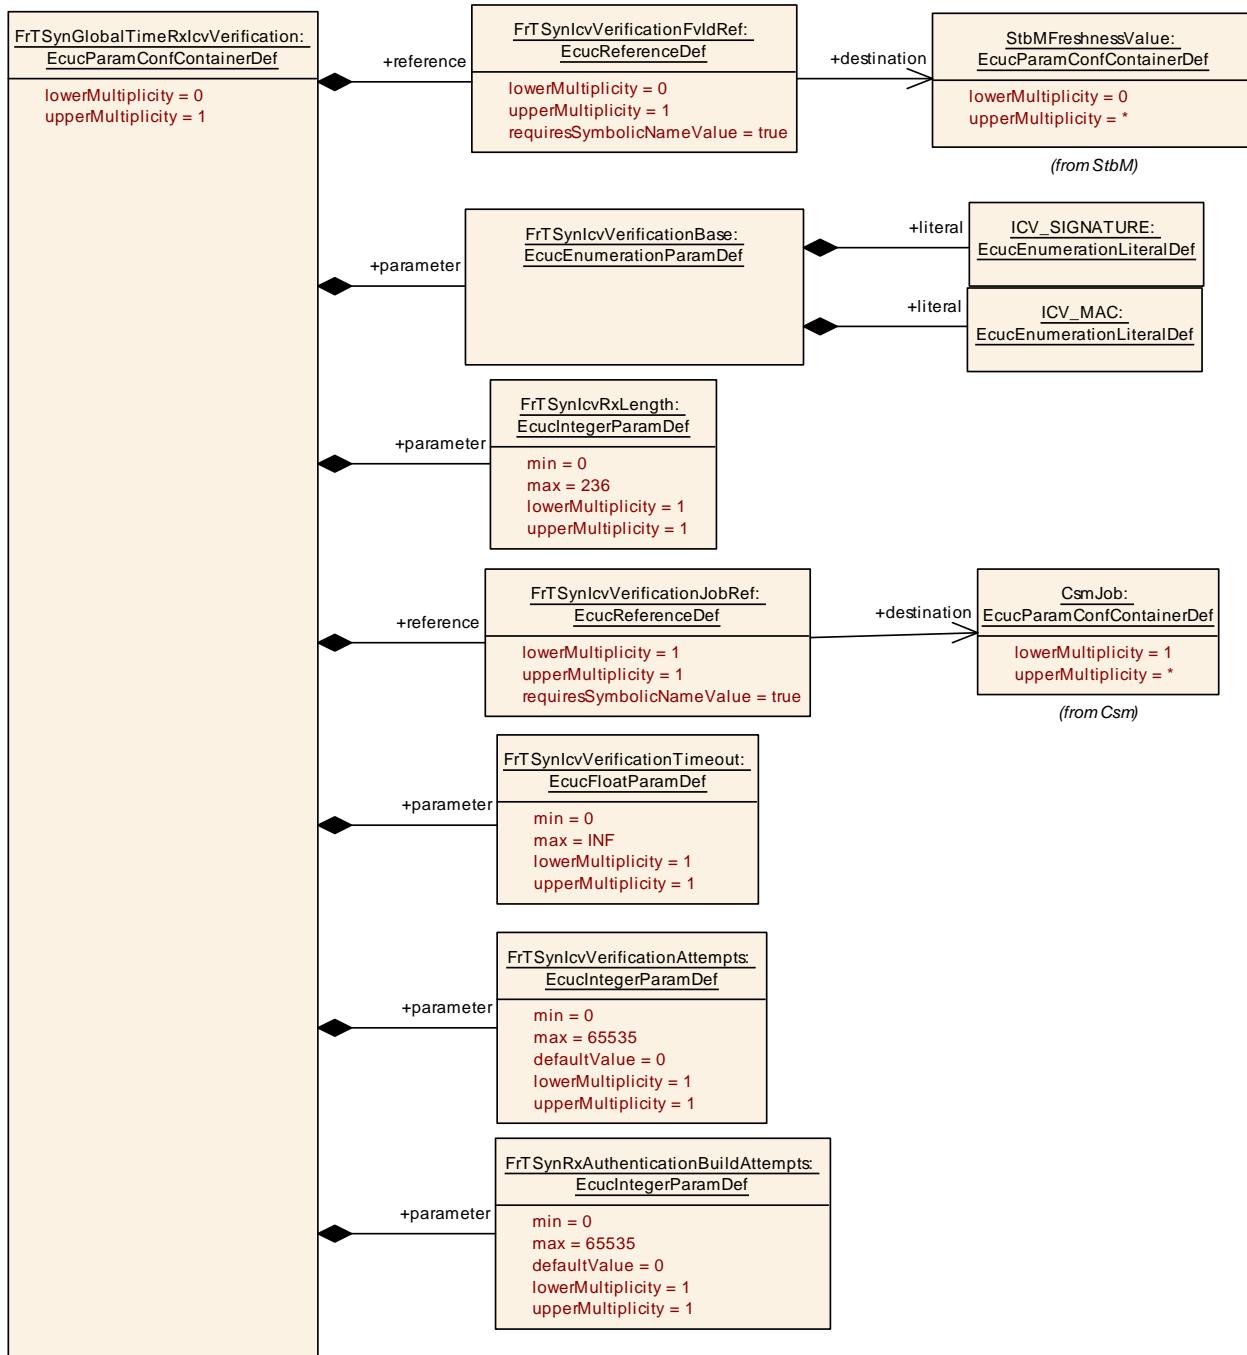


Figure 10.9: FrTSynGlobalTimeRxIcvVerification

10.3 Constraints

[SWS_FrTSyn_CONSTR_00001]{DRAFT} [If the CSM job used to verify the [ICV](#) is configured in synchronous behaviour, then the [FrTSynIcvVerificationTimeout](#) shall be set to 0.] ([RS TS 20074](#))

[SWS_FrTSyn_CONSTR_00002]{DRAFT} [If the CSM job used to generate the `ICV` is configured in synchronous behavior, then the `FrTSynIcvGenerationTimeout` shall be set to 0.] (*RS_TS_20074*)

10.4 Published Information

For details refer to the chapter 10.3 “Published Information” in the SWS BSW General [3].

A Not applicable requirements

[SWS_FrTSyn_NA_00999] [These requirements on Time Synchronization from the RS Time Synchronization [1] are not applicable to FrTSyn, because they refer either to network types other than FlexRay or to the Time Base Manager module](*RS_TS_00002, RS_TS_00005, RS_TS_00006, RS_TS_00007, RS_TS_00008, RS_TS_00009, RS_TS_00010, RS_TS_00011, RS_TS_00012, RS_TS_00013, RS_TS_00014, RS_TS_00015, RS_TS_00016, RS_TS_00017, RS_TS_00018, RS_TS_00019, RS_TS_00021, RS_TS_00024, RS_TS_00025, RS_TS_00026, RS_TS_00027, RS_TS_00029, RS_TS_00030, RS_TS_00031, RS_TS_00032, RS_TS_00033, RS_TS_00035, RS_TS_00036, RS_TS_00037, RS_TS_00038, RS_TS_00039, RS_TS_20031, RS_TS_20032, RS_TS_20033, RS_TS_20034, RS_TS_20035, RS_TS_20036, RS_TS_20037, RS_TS_20038, RS_TS_20047, RS_TS_20048, RS_TS_20051, RS_TS_20052, RS_TS_20053, RS_TS_20054, RS_TS_20058, RS_TS_20059, RS_TS_20060, RS_TS_20061, RS_TS_20062, RS_TS_20063, RS_TS_20066, RS_TS_20068, RS_TS_20069, RS_TS_20070*)

B Change history of AUTOSAR traceable itemss

Please note that the lists in this chapter also include constraints and specification items that have been removed from the specification in a later version. These constraints and specification items do not appear as hyperlinks in the document.

B.1 Traceable item history of this document according to AUTOSAR Release R22-11

B.1.1 Added Specification Items in R22-11

[SWS_FrTSyn_00103] [SWS_FrTSyn_00104] [SWS_FrTSyn_00105] [SWS_FrTSyn_-
00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00108] [SWS_FrTSyn_00109] [SWS_-
FrTSyn_00110] [SWS_FrTSyn_00111] [SWS_FrTSyn_00112] [SWS_FrTSyn_00113]
[SWS_FrTSyn_00114] [SWS_FrTSyn_00115] [SWS_FrTSyn_00116] [SWS_FrTSyn_-
00117] [SWS_FrTSyn_00118] [SWS_FrTSyn_00119] [SWS_FrTSyn_00120] [SWS_-
FrTSyn_00121] [SWS_FrTSyn_00122] [SWS_FrTSyn_00123] [SWS_FrTSyn_00124]
[SWS_FrTSyn_00125] [SWS_FrTSyn_00126] [SWS_FrTSyn_00127] [SWS_FrTSyn_-
00128] [SWS_FrTSyn_00129] [SWS_FrTSyn_00130] [SWS_FrTSyn_00131] [SWS_-
FrTSyn_00132] [SWS_FrTSyn_00133] [SWS_FrTSyn_00134] [SWS_FrTSyn_00135]
[SWS_FrTSyn_00136] [SWS_FrTSyn_00137] [SWS_FrTSyn_00138] [SWS_FrTSyn_-
00139] [SWS_FrTSyn_00140] [SWS_FrTSyn_00141] [SWS_FrTSyn_00142] [SWS_-
FrTSyn_00143] [SWS_FrTSyn_00144] [SWS_FrTSyn_00145] [SWS_FrTSyn_00146]
[SWS_FrTSyn_00147] [SWS_FrTSyn_00148] [SWS_FrTSyn_00149] [SWS_FrTSyn_-
00150] [SWS_FrTSyn_00151] [SWS_FrTSyn_00152] [SWS_FrTSyn_91000] [SWS_-
FrTSyn_91001] [SWS_FrTSyn_91002] [SWS_FrTSyn_CONSTR_00001] [SWS_FrT-
Syn_NA_00999]

B.1.2 Changed Specification Items in R22-11

[SWS_FrTSyn_00009] [SWS_FrTSyn_00014] [SWS_FrTSyn_00015] [SWS_FrTSyn_-
00018] [SWS_FrTSyn_00019] [SWS_FrTSyn_00021] [SWS_FrTSyn_00022] [SWS_-
FrTSyn_00023] [SWS_FrTSyn_00025] [SWS_FrTSyn_00028] [SWS_FrTSyn_00036]
[SWS_FrTSyn_00037] [SWS_FrTSyn_00038] [SWS_FrTSyn_00039] [SWS_FrTSyn_-
00040] [SWS_FrTSyn_00042] [SWS_FrTSyn_00043] [SWS_FrTSyn_00044] [SWS_-
FrTSyn_00055] [SWS_FrTSyn_00056] [SWS_FrTSyn_00057] [SWS_FrTSyn_00059]
[SWS_FrTSyn_00060] [SWS_FrTSyn_00061] [SWS_FrTSyn_00062] [SWS_FrTSyn_-
00063] [SWS_FrTSyn_00064] [SWS_FrTSyn_00065] [SWS_FrTSyn_00066] [SWS_-
FrTSyn_00067] [SWS_FrTSyn_00069] [SWS_FrTSyn_00070] [SWS_FrTSyn_00071]
[SWS_FrTSyn_00074] [SWS_FrTSyn_00075] [SWS_FrTSyn_00079] [SWS_FrTSyn_-
00080] [SWS_FrTSyn_00081] [SWS_FrTSyn_00082] [SWS_FrTSyn_00095]

B.1.3 Deleted Specification Items in R22-11

[SWS_FrTSyn_00999]

B.1.4 Added Constraints in R22-11

none

B.1.5 Changed Constraints in R22-11

none

B.1.6 Deleted Constraints in R22-11

none

**B.2 Traceable item history of this document according to
AUTOSAR Release R23-11****B.2.1 Added Specification Items in R23-11**

[SWS_FrTSyn_00153] [SWS_FrTSyn_00154] [SWS_FrTSyn_00155] [SWS_FrTSyn_-
00156] [SWS_FrTSyn_00157] [SWS_FrTSyn_00158] [SWS_FrTSyn_00159] [SWS_-
FrTSyn_00160] [SWS_FrTSyn_00161] [SWS_FrTSyn_00162] [SWS_FrTSyn_00163]
[SWS_FrTSyn_00164] [SWS_FrTSyn_00165] [SWS_FrTSyn_00166] [SWS_FrTSyn_-
00167] [SWS_FrTSyn_00168] [SWS_FrTSyn_00169] [SWS_FrTSyn_00170] [SWS_-
FrTSyn_00171] [SWS_FrTSyn_00172]

B.2.2 Changed Specification Items in R23-11

[SWS_FrTSyn_00014] [SWS_FrTSyn_00015] [SWS_FrTSyn_00019] [SWS_FrTSyn_-
00021] [SWS_FrTSyn_00023] [SWS_FrTSyn_00025] [SWS_FrTSyn_00048] [SWS_-
FrTSyn_00049] [SWS_FrTSyn_00056] [SWS_FrTSyn_00060] [SWS_FrTSyn_00079]
[SWS_FrTSyn_00080] [SWS_FrTSyn_00084] [SWS_FrTSyn_00085] [SWS_FrTSyn_-
00086] [SWS_FrTSyn_00089] [SWS_FrTSyn_00090] [SWS_FrTSyn_00091] [SWS_-
FrTSyn_00093] [SWS_FrTSyn_00102] [SWS_FrTSyn_00103] [SWS_FrTSyn_00104]
[SWS_FrTSyn_00106] [SWS_FrTSyn_00107] [SWS_FrTSyn_00108] [SWS_FrTSyn_-
00109] [SWS_FrTSyn_00112] [SWS_FrTSyn_00113] [SWS_FrTSyn_00119] [SWS_-
FrTSyn_00125] [SWS_FrTSyn_00127] [SWS_FrTSyn_00142] [SWS_FrTSyn_00145]
[SWS_FrTSyn_00146] [SWS_FrTSyn_00149]

B.2.3 Deleted Specification Items in R23-11

[SWS_FrTSyn_00141]

B.2.4 Added Constraints in R23-11

[SWS_FrTSyn_CONSTR_00002]

B.2.5 Changed Constraints in R23-11

none

B.2.6 Deleted Constraints in R23-11

none